

R&S® SMB100B

RF Signal Generator

User Manual

dataTec

Mess- und Prüftechnik. Die Experten.

**Ihr Ansprechpartner /
Your Partner:**

dataTec AG

E-Mail: info@datatec.eu

>>> www.datatec.eu



1178371102
Version 07

ROHDE & SCHWARZ
Make ideas real



This document describes the R&S®SMB100B, stock no. 1422.1000.02 and its options:

- R&S®SMBB-B1/-B1H
- R&S®SMBB-B3
- R&S®SMBB-B5
- R&S®SMBB-B32
- R&S®SMBB-B86
- R&S®SMBB-B101/-B103/-B106
- R&S®SMBB-K22/-K23/-K24/-K27
- R&S®SMBB-K31
- R&S®SMBB-K704
- R&S®SMBB-K720

This manual describes firmware version FW 4.90.049.xx and later of the R&S®SMB100B.

© 2021 Rohde & Schwarz GmbH & Co. KG

Mühldorfstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

1178.3711.02 | Version 07 | R&S®SMB100B

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol , e.g. R&S®SMB100B is indicated as R&S SMB100B, R&S®VISA as R&S VISA. Linux® is abbreviated as Linux.

Contents

1	Preface.....	15
1.1	Key Features.....	15
1.2	About this Manual.....	15
1.3	Documentation Overview.....	16
1.3.1	Getting Started Manual.....	17
1.3.2	User Manuals and Help.....	17
1.3.3	Service Manual.....	17
1.3.4	Instrument Security Procedures.....	17
1.3.5	Printed Safety Instructions.....	17
1.3.6	Data Sheets and Brochures.....	17
1.3.7	Release Notes and Open Source Acknowledgment (OSA).....	18
1.3.8	Application Notes, Application Cards, White Papers, etc.....	18
2	Safety and Regulatory Information.....	19
2.1	Safety Instructions.....	19
2.2	Labels on R&S SMB100B.....	21
2.3	Warning Messages in the Documentation.....	22
2.4	Korea Certification Class B.....	22
3	Getting Started.....	23
3.1	Preparing for Use.....	23
3.1.1	Lifting and Carrying.....	23
3.1.2	Unpacking and Checking.....	23
3.1.3	Choosing the Operating Site.....	23
3.1.4	Setting Up the R&S SMB100B.....	24
3.1.4.1	Placing the R&S SMB100B on a Bench Top.....	24
3.1.4.2	Mounting the R&S SMB100B in a Rack.....	25
3.1.5	Considerations for Test Setup.....	26
3.1.6	Connecting to Power.....	27
3.1.7	Connecting to LAN.....	27
3.1.8	Connecting USB Devices.....	28
3.1.9	Connecting to RF.....	28
3.1.10	Connecting to Ref In/Ref Out.....	29

3.1.11	Switching On or Off.....	31
3.2	Instrument Tour.....	32
3.2.1	Front Panel Tour.....	32
3.2.1.1	Touchscreen.....	33
3.2.1.2	Utility Keys.....	33
3.2.1.3	On/Standby.....	34
3.2.1.4	Function Keys.....	34
3.2.1.5	Keypad.....	34
3.2.1.6	Navigation Controls.....	34
3.2.1.7	Display Keys.....	36
3.2.1.8	USB Connector.....	36
3.2.1.9	RF 50 Ω	36
3.2.2	Rear Panel Tour.....	36
3.2.2.1	Connectors.....	37
3.3	Trying Out the Instrument.....	38
3.3.1	Generating an Unmodulated Carrier.....	39
3.3.2	Generating an RF Frequency Sweep Signal.....	41
3.3.3	Saving and Recalling Settings.....	43
3.4	Instrument Control.....	46
3.4.1	Possible Ways to Operate the Instrument.....	47
3.4.2	Means of Manual Interaction.....	47
3.4.3	Understanding the Display Information.....	48
3.4.3.1	Status Bar.....	49
3.4.3.2	Tile Diagram.....	49
3.4.3.3	Taskbar.....	49
3.4.3.4	Additional Display Characteristics.....	50
3.4.4	Accessing the Functionality.....	51
3.4.5	Entering Data.....	52
3.4.5.1	Entering Numeric Parameters.....	53
3.4.5.2	Entering Alphanumeric Parameters.....	53
3.4.5.3	Undo and Redo Actions.....	53
3.4.6	Getting Information and Help.....	54
3.4.7	Remote Control.....	55

3.4.8	Remote Operation over VNC.....	56
4	RF Signal Configuration.....	57
4.1	Activating RF Signal Output.....	58
4.2	How to Set the Frequency and Level.....	58
4.3	RF Frequency Settings.....	60
4.4	RF Level Settings.....	62
4.5	RF Phase Settings.....	66
5	Analog Modulations.....	68
5.1	Required Options.....	68
5.2	Modulation Types and Signal Sources.....	68
5.3	Activating Analog Modulations.....	70
5.4	Modulation Settings.....	70
5.4.1	Pulse Modulation.....	71
5.4.2	FM, PhiM and AM Modulation Settings.....	72
5.4.3	Stereo Modulation.....	78
5.4.3.1	General Settings.....	79
5.4.3.2	Pilot Tone.....	81
5.4.3.3	ARI.....	82
5.4.3.4	RDS.....	84
5.4.4	Pulse Generator.....	86
5.4.4.1	Pulse Generator > General Settings.....	87
5.4.4.2	Pulse Generator > Pulse Train Settings.....	90
5.4.4.3	Import/Export List Files.....	94
5.4.5	Pulse Graph.....	97
5.4.6	Pulse External / Trigger Settings.....	98
5.4.7	FM, PhiM and AM Modulation Sources.....	99
5.4.7.1	Source > LF Generator Settings.....	99
5.4.7.2	Source > External Settings.....	103
5.4.7.3	Source > Noise Generator Settings.....	104
5.4.8	LF Signal Output Settings.....	105
5.4.9	Overview.....	108
5.5	How to Generate an Amplitude Modulated Signal.....	109
5.6	How to Generate a Pulse Modulated Signal.....	110

5.7	How to Generate a Pulse Train Modulated Signal.....	110
6	List and Sweep Mode.....	112
6.1	Signal Generation and Triggering in the Sweep and List Modes.....	114
6.2	About Sweep Mode.....	121
6.2.1	Correlating Parameters in Sweep Mode.....	122
6.2.2	Sweep Signal Shapes.....	124
6.3	About List Mode.....	125
6.4	Significant Parameters and Functions.....	126
6.5	Sweep Mode Settings.....	128
6.5.1	General Sweep Settings.....	128
6.5.2	Frequency Range Settings.....	134
6.5.3	Level Range Settings.....	136
6.6	List Mode Settings.....	138
6.6.1	General Settings.....	139
6.6.2	List Mode Data Settings.....	141
6.6.3	Import/Export Settings.....	142
6.7	List Editor.....	145
6.8	How to Generate a Signal in List or Sweep Mode.....	148
7	Improving Level Performance.....	151
7.1	Attenuator.....	151
7.1.1	Attenuator Settings.....	152
7.1.2	Reverse Power Protection.....	153
7.2	Automatic Level Control (ALC).....	153
7.2.1	ALC Settings.....	155
7.3	User Correction.....	156
7.3.1	User Correction Settings.....	159
7.3.2	List Editor.....	160
7.3.3	Fill with Sensor.....	164
7.3.4	Import/Export List Files.....	165
7.4	Using Power Sensors.....	168
7.4.1	Connecting R&S NRP Power Sensors to the R&S SMB100B.....	168
7.4.2	NRP Sensor Mapping.....	169
7.4.3	NRP Power Viewer.....	172

7.4.3.1	About.....	172
7.4.3.2	NRP Power Viewer Settings.....	174
7.5	How to Calibrate the Power Level with an R&S NRP Power Sensor.....	180
8	Reference Oscillator.....	184
8.1	Required Options.....	184
8.2	Reference Frequency Settings.....	184
8.3	Reference Output Settings.....	188
8.4	Adjustment Settings.....	189
8.5	Using the Reference Frequency for Instruments Synchronization.....	189
9	File and Data Management.....	193
9.1	About the File System.....	193
9.2	Restoring the (Default) Instrument Configuration.....	196
9.2.1	Preset, Set to Default and Factory Preset Settings.....	198
9.2.2	How to Identify Parameters Which Are Not in a Preset State.....	199
9.2.3	How to Recall User Settings Automatically after Preset.....	199
9.2.4	Reference.....	200
9.3	Protecting Data.....	201
9.4	Saving and Recalling Instrument Settings.....	201
9.4.1	Save/Recall Settings.....	202
9.4.2	How to Save and Recall Instrument Settings.....	205
9.5	Accessing Files with User Data.....	206
9.5.1	File Select Settings.....	206
9.6	Exporting and Importing Remote Command Lists.....	208
9.7	Loading, Importing and Exporting Lists.....	209
9.8	Using the File Manager.....	209
9.8.1	File Manager Settings.....	210
9.8.2	Map Network Share Settings.....	211
9.8.3	How to Display All Saved Files.....	213
9.8.4	How to Map a Network Folder.....	213
9.9	How to Transfer Files from and to the Instrument.....	216
9.9.1	Removing File System Protection.....	216
9.9.2	Accessing the File System of the R&S SMB100B via ftp.....	218
9.9.3	Accessing the R&S SMB100B File System via SMB (Samba).....	219

9.9.4	Using a USB Storage Device for File Transfer.....	221
9.9.5	Using a File Server for Test Files Exchange.....	221
9.10	Creating Screenshots of Current Settings.....	222
9.10.1	Hardcopy Settings.....	222
9.10.2	How to Save a Hardcopy of the Display.....	226
10	General Instrument Functions.....	228
10.1	Customizing the User Interface.....	228
10.1.1	Display and Keyboard Settings.....	229
10.1.2	Display Update Settings.....	230
10.1.3	Defining the RF Signal State On Power On.....	231
10.1.4	How to Set the Initial Instrument Settings.....	232
10.1.4.1	Setting the Keyboard Language.....	232
10.1.4.2	Setting the Screen Saver.....	232
10.2	Organizing Frequently Used Settings as Favorites.....	233
10.2.1	User Menu Settings.....	234
10.2.2	How To Use the User Menu for Fast Adjustments.....	235
10.2.3	Define User Key Actions Settings.....	237
10.2.4	How to Assign Actions to the [★ (User)] Key.....	239
10.3	Managing Licenses and License Keys.....	240
10.3.1	Manage License Keys Settings.....	240
10.3.2	Using the License Server.....	243
10.3.3	How to Move a Portable License.....	245
10.4	Using the Security Settings.....	246
10.4.1	Protection Level Settings.....	248
10.4.2	Setting Security Parameters.....	248
10.4.2.1	Update Policy Security Settings.....	249
10.4.2.2	Disk & Memory Security Settings.....	250
10.4.2.3	Manual Operation Security Settings.....	251
10.4.3	Configuring LAN Services.....	254
10.4.4	Password Management.....	256
10.4.5	How to Prevent Unauthorized Access.....	259
10.5	Undoing or Restoring Actions.....	262
10.6	Shutting Down and Rebooting the Instrument.....	263

11	Network Operation and Remote Control.....	264
11.1	Overview of Remote Access Modes.....	264
11.2	Remote Control Interfaces and Protocols.....	266
11.2.1	LAN Interface.....	267
11.2.1.1	VISA Resource Strings.....	267
11.2.1.2	HiSLIP Protocol.....	269
11.2.1.3	VXI-11 Protocol.....	269
11.2.1.4	Socket Communication.....	269
11.2.2	USB Interface.....	270
11.2.2.1	USB Resource String.....	270
11.2.3	GPIB Interface (IEC/IEEE Bus Interface).....	270
11.2.4	LXI Browser Interface.....	271
11.3	Remote Control Programs and Libraries.....	271
11.3.1	VISA Library.....	272
11.3.2	Possible Setups and Access Functions.....	272
11.4	Remote Access Settings.....	274
11.4.1	Network Settings.....	275
11.4.2	VISA Resource Strings.....	278
11.4.3	GPIB Address Settings.....	279
11.4.4	RS232 Settings.....	280
11.4.5	Instrument Emulations Settings.....	281
11.4.6	Remote Connections Settings.....	282
11.4.6.1	Active Connections.....	282
11.4.6.2	Closed Connections.....	283
11.4.7	QR Code.....	284
11.5	LXI Settings.....	285
11.5.1	LXI Status Settings.....	285
11.5.2	LXI Browser Settings.....	287
11.5.2.1	LAN Configuration.....	288
11.6	Connecting the Instrument to the Network (LAN).....	292
11.6.1	How To Enable Access via LAN.....	293
11.6.2	How To Activate LAN Services.....	293
11.6.3	How To Connect to LAN.....	293

11.6.4	How to Assign the IP Address.....	293
11.6.5	How to Use Computer Names (Hostnames).....	294
11.7	Controlling the R&S SMB100B Remotely.....	295
11.7.1	How to Find the VISA Resource String.....	296
11.7.2	How to Change the GPIB Instrument Address.....	297
11.7.3	Establishing a Remote Control Connection over the LXI Browser Interface.....	297
11.7.4	Establishing a Remote Control Connection over LAN Using VXI-11 Protocol.....	298
11.7.5	Establishing a Remote Control Connection over LAN Using Socket Communication	303
11.7.6	Setting Up a Remote Control Connection over GPIB.....	304
11.7.7	Setting Up a Remote Control Connection over USB.....	305
11.7.8	How to Trace Messages with the LXI Web Browser Interface.....	306
11.7.9	How to Return to Manual Operation.....	306
11.8	Automating Tasks with Remote Command Scripts.....	307
11.8.1	Show SCPI Command.....	310
11.8.2	Displaying an SCPI List.....	310
11.8.3	SCPI Recording Export Settings.....	311
11.8.4	How to Record / Create SCPI Lists.....	312
11.8.5	How to Convert and Save SCPI Lists.....	315
11.8.6	How to Find Out the SCPI Commands for GUI Functions.....	316
11.9	Operating the R&S SMB100B Remotely via VNC.....	317
11.9.1	How To Enable the VNC Service.....	317
11.9.2	How To Set Up a Remote Operation from a Desktop System.....	318
11.9.2.1	Using a Web Browser.....	318
11.9.2.2	Using a VNC Client Software.....	318
11.9.3	How To Set Up a Remote Operation from a Smart Device.....	320
11.9.3.1	Using a VNC App.....	321
11.9.3.2	Using a Web Browser with HTML5.....	321
11.9.3.3	Special Mode QR Code.....	322
11.10	References.....	323
11.10.1	LXI Functionality.....	323
11.10.2	Code Generator Templates.....	323
11.10.3	Remote Control States.....	325
12	Remote Control Commands.....	327

12.1	Conventions Used in SCPI Command Descriptions.....	327
12.2	Programming Examples.....	328
12.3	Common Commands.....	328
12.4	Preset Commands.....	333
12.5	MMEMory Subsystem.....	334
12.5.1	File Naming Conventions.....	335
12.5.2	Accessing Files in the Default or in a Specified Directory.....	336
12.5.3	Programming Examples.....	337
12.5.4	Remote Control Commands.....	339
12.6	CALibration Subsystem.....	344
12.7	DIAGnostic Subsystem.....	347
12.8	DISPlay Subsystem.....	350
12.9	FORMat Subsystem.....	355
12.10	HCOPy Subsystem.....	356
12.10.1	Hard Copy Settings.....	357
12.10.2	Automatic Naming.....	359
12.11	KBOard Subsystem.....	361
12.12	OUTPut Subsystem.....	362
12.13	SENSe, READ, INITiate and SLISt Subsystems.....	365
12.14	SOURce Subsystem.....	379
12.14.1	Analog Modulation Subsystems.....	379
12.14.1.1	SOURce:MODulation Subsystem.....	380
12.14.1.2	SOURce:AM Subsystem.....	380
12.14.1.3	SOURce:FM Subsystem.....	385
12.14.1.4	SOURce:PM Subsystem.....	390
12.14.1.5	SOURce:PULM Subsystem.....	394
12.14.1.6	SOURce:STEReo Subsystem.....	405
12.14.2	SOURce:CORRection Subsystem.....	413
12.14.2.1	Correction Settings.....	416
12.14.2.2	Correction Data Exchange.....	419
12.14.3	SOURce:FREQuency Subsystem.....	421
12.14.4	SOURce:INPut Subsystem.....	427
12.14.5	SOURce:LFOutput Subsystem.....	428

12.14.5.1	LF Generator Settings.....	430
12.14.5.2	LF Sweep Settings.....	438
12.14.6	SOURce:LIST Subsystem.....	441
12.14.6.1	List Mode Settings.....	444
12.14.6.2	List Mode File Operation.....	449
12.14.6.3	List Mode Data Exchange.....	452
12.14.7	SOURce:NOISe Subsystem.....	454
12.14.7.1	Noise Generator.....	455
12.14.8	SOURce:PGEN Subsystem.....	456
12.14.9	SOURce:PHASe Subsystem.....	458
12.14.10	SOURce:POWer Subsystem.....	458
12.14.11	SOURce:ROSCillator Subsystem.....	467
12.14.12	SOURce:SWEEp Subsystem.....	472
12.15	SYSTem Subsystem.....	483
12.16	STATus Subsystem.....	508
12.17	TEST Subsystem.....	512
12.18	TRIGger Subsystem.....	513
12.19	UNIT Subsystem.....	516
12.20	Direct Commands for the Stereo/RDS Coder Option R&S SMBB-B5.....	517
12.20.1	Programming Examples.....	518
12.20.2	Remote-Control Commands.....	520
13	Troubleshooting and Error Messages.....	539
13.1	Error Messages.....	539
13.1.1	Volatile Messages.....	539
13.1.2	Permanent Messages.....	539
13.2	SCPI-Error Messages.....	540
13.3	Device-Specific Error Messages.....	540
13.4	Querying Error Messages.....	541
13.5	Resolving Network Connection Failures.....	543
13.6	Measuring USB Cable Quality.....	544
13.7	Requesting Instrument Configuration and Specifications.....	544
13.7.1	Hardware Configuration Settings.....	544
13.7.2	Versions/Options Settings.....	546

13.7.3	How to Query Instrument Configuration.....	547
13.7.4	How to Request the Data Sheet.....	549
13.8	Collecting Information for Technical Support.....	549
13.9	Contacting Customer Support.....	551
14	Transporting.....	552
15	Maintenance, Storage and Disposal.....	553
15.1	Cleaning.....	553
15.2	Storage.....	553
15.3	Performing Maintenance Tasks.....	553
15.3.1	Internal Adjustments.....	553
15.3.1.1	Internal Adjustments Settings.....	554
15.3.1.2	How to Use the Internal Adjustments.....	555
15.3.2	Date and Time.....	556
15.3.2.1	Data and Time Settings.....	557
15.3.2.2	How To Set Data and Time.....	558
15.3.3	Check Front Panel.....	559
15.3.3.1	Check Front Panel Settings.....	559
15.3.3.2	How to Test the Front Panel.....	559
15.3.4	FPGA/uC Update Settings.....	561
15.4	Disposal.....	563
	Annex.....	564
A	Reference Information for Remote Control.....	564
A.1	Additional Basics on Remote Control.....	564
A.1.1	Messages.....	564
A.1.2	LAN Interface Messages.....	565
A.1.3	SCPI Command Structure.....	565
A.1.3.1	Syntax for Common Commands.....	566
A.1.3.2	Syntax for Instrument-Specific Commands.....	566
A.1.3.3	SCPI Parameters.....	568
A.1.3.4	Overview of Syntax Elements.....	570
A.1.3.5	Structure of a Command Line.....	572
A.1.3.6	Responses to Queries.....	572

A.1.4	Command Sequence and Synchronization.....	573
A.1.4.1	Preventing Overlapping Execution.....	573
A.1.4.2	Examples to Command Sequence and Synchronization.....	575
A.1.5	Status Reporting System.....	577
A.1.5.1	Hierarchy of the Status Registers.....	577
A.1.5.2	Structure of a SCPI Status Register.....	578
A.1.5.3	Status Byte (STB) and Service Request Enable Register (SRE).....	580
A.1.5.4	Event Status Register (ESR) and Event Status Enable Register (ESE).....	581
A.1.5.5	Questionable Status Register (STATus:QUEStionable).....	582
A.1.5.6	Operation Status Register (STATus:OPERation).....	582
A.1.5.7	Application of the Status Reporting System.....	582
A.1.5.8	Reset Values of the Status Reporting System.....	584
A.1.6	General Programming Recommendations.....	585
A.2	Telnet program examples.....	585
A.3	Extensions for User Files.....	590
B	Unit Shortcuts.....	592
C	Hardware Interfaces.....	594
C.1	GPIB-Bus Interface.....	594
	Glossary: List of the Often Used Terms and Abbreviations.....	596
	List of commands.....	600
	Index.....	611

1 Preface

The R&S SMB100B is a new high-performance signal generator developed to meet demanding customer requirements. Offering excellent signal characteristic and straightforward and intuitive operation, the signal generator makes signal generation fast and easy.

1.1 Key Features

Outstanding key features of the R&S SMB100B are:

- SCPI macro recorder and code generator for generating executable remote control code from manual operating steps (for MATLAB®, CVI, etc.)
- Frequency range from 8 kHz to up to 6 GHz
- Excellent SSB phase noise of -134 dBc (meas.) at 1 GHz, 20 kHz offset
- Low wideband noise. For frequencies between 15 MHz and 6 GHz and 30 MHz offset, < 153 dBc (typ.)
- Ultra high output power of 34 dBm (meas.) for 1 GHz
- Compact rack with a height of 2 U and a $\frac{3}{4}$ 19" width
- Pulse train generation
- 5" Graphical User Interface with touchscreen

For more information, see data sheet.

1.2 About this Manual

This user manual describes general instrument functions, the manual operation of the instrument and remote control.

The main focus of this manual is on the signal generation capabilities of the instrument and the tasks required to achieve them. The following topics are included:

- **Welcome to the R&S SMB100B**
Introduction to and getting familiar with the instrument, including introduction to the signal generation principles.
- **Getting Started**
Information that you have received as a printed book together with your instrument
- **Configuration of the RF Signal**
Descriptions of the individual operation modes, including configuration settings and task descriptions
- **File and Data Management**
Description of general functions to handle data files and work with the file system of the instrument
- **System and General Instrument Configuration**
Description of the general instrument settings and functions

- **Network and Remote Control Operation**
Information on setting up the instrument in a network and operating it remotely.
- **Remote Commands**
Remote commands required to configure and perform measurements in a remote environment, sorted by tasks.
Remote commands required to set up the environment and to perform common tasks on the instrument, sorted by tasks.
Programming examples demonstrate the use of many commands and can usually be executed directly for test purposes.
- **Maintenance**
Information on tasks required to maintain the operability of the instrument
- **Troubleshooting and Error Messages**
Hints and tips on how to handle errors
- **Appendix**
Extensive reference information on remote control, hardware interfaces, etc.
- **Glossary**
List of often used terms and abbreviations
- **List of Commands**
Alphabetical list of all remote commands described in the manual
- **Index**

Contents and scope

This help system describes the full functionality of an R&S SMB100B. Depending on your model and the installed options, some of the functions may not be available on your instrument.

Notes on screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as much as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic usage scenarios.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

1.3 Documentation Overview

This section provides an overview of the R&S SMB100B user documentation. Unless specified otherwise, you find the documents on the R&S SMB100B product page at:

www.rohde-schwarz.com/manual/smb100b

1.3.1 Getting Started Manual

Introduces the R&S SMB100B and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the instrument.

1.3.2 User Manuals and Help

Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.

The contents of the user manuals are available as help in the R&S SMB100B. The help offers quick, context-sensitive access to the complete information.

All user manuals are also available for download or for immediate display on the Internet.

1.3.3 Service Manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

<https://gloris.rohde-schwarz.com>

1.3.4 Instrument Security Procedures

Deals with security issues when working with the R&S SMB100B in secure areas. It is available for download on the Internet.

1.3.5 Printed Safety Instructions

Provides safety information in many languages. The printed document is delivered with the product.

1.3.6 Data Sheets and Brochures

The data sheet contains the technical specifications of the R&S SMB100B. It also lists the options and their order numbers and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/smb100b

1.3.7 Release Notes and Open Source Acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The open-source acknowledgment document provides verbatim license texts of the used open source software.

See www.rohde-schwarz.com/firmware/smb100b

1.3.8 Application Notes, Application Cards, White Papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/smb100b

2 Safety and Regulatory Information

The product documentation helps you use the product safely and efficiently. Follow the instructions provided here and in the [Chapter 2.1, "Safety Instructions"](#), on page 19.

Intended use

The product is intended for the development, production and verification of electronic components and devices in industrial, administrative, and laboratory environments. Use the product only for its designated purpose. Observe the operating conditions and performance limits stated in the data sheet.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Chapter 2.1, "Safety Instructions"](#), on page 19. The same information is provided in many languages as printed "Safety Instructions". The printed "Safety Instructions" are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

2.1 Safety Instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the data sheet, manuals and the printed safety instructions. If you are unsure about the appropriate use, contact Rohde & Schwarz customer service.

Using the product requires specialists or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

If any part of the product is damaged or broken, stop using the product. Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. Contact Rohde & Schwarz customer service at <http://www.customersupport.rohde-schwarz.com>.

Lifting and carrying the product

The maximum weight of the product is provided in the data sheet. To move the product safely, you can use lifting or transporting equipment such as lift trucks and forklifts. Follow the instructions provided by the equipment manufacturer.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing. If Rohde & Schwarz provides a carrying bag designed for your product, you can use the product outdoors.

Unless otherwise specified, you can operate the product up to an altitude of 2000 m above sea level. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the data sheet.

Setting up the product

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

Connecting to power

The product is an overvoltage category II product and has to be connected to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Be aware that electrically powered products have risks, such as electric shock, fire, personal injury or even death.

Take the following measures for your safety:

- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- If a product has an exchangeable fuse, its type and characteristics are indicated next to the fuse holder. Before changing the fuse, switch off the instrument and disconnect it from the power source. How to change the fuse is described in the product documentation.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.
- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.





- If the product needs an external power supply, use the power supply that is delivered with the product or that is recommended in the product documentation or a power supply that conforms to the country-specific regulations.
- Only connect the product to a power source with a fuse protection of maximum 20 A.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.

Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

Meaning of safety labels

Safety labels on the product warn against potential hazards.


	Potential hazard Read the product documentation to avoid personal injury or product damage.
	Electrical hazard Indicates live parts. Risk of electric shock, fire, personal injury or even death.
	Hot surface Do not touch. Risk of skin burns. Risk of fire.
	Protective conductor terminal Connect this terminal to a grounded external conductor or to protective ground. This protects you against electric shock should an electric problem occur.

2.2 Labels on R&S SMB100B

Labels on the casing inform about:

- Personal safety, see ["Connecting to power"](#) on page 20.
- Product and environment safety, see [Table 2-1](#).
- Identification of the product, see the serial number on the [rear panel](#).

Table 2-1: Labels regarding R&S SMB100B and environment safety

	Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its service life. For more information, see Chapter 15.4, "Disposal" , on page 563.
---	---

2.3 Warning Messages in the Documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

2.4 Korea Certification Class B



이 기기는 가정용(B급) 전자파 적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

3 Getting Started

3.1 Preparing for Use

Here, you can find basic information about setting up the instrument for the first time.

3.1.1 Lifting and Carrying

See also ["Lifting and carrying the product"](#) on page 19.

- ▶ Use the carrying handles at the side for lifting and carrying the R&S SMB100B. The handles at the front are only for pushing and pulling the instrument when mounting in a rack, see [Chapter 3.1.4.2, "Mounting the R&S SMB100B in a Rack"](#), on page 25.

3.1.2 Unpacking and Checking

1. Unpack the R&S SMB100B carefully.
2. Retain the original packing material. Use it to protect the control elements and connectors when transporting or shipping the R&S SMB100B later.
See also [Chapter 14, "Transporting"](#), on page 552.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

3.1.3 Choosing the Operating Site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the data sheet.

See also ["Choosing the operating site"](#) on page 20.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the data sheet under "General data".

- Class B equipment is suitable for use in:
 - Residential environments

- Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments. If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

3.1.4 Setting Up the R&S SMB100B


See also:

- ["Setting up the product"](#) on page 20
- ["Intended use"](#) on page 19

3.1.4.1 Placing the R&S SMB100B on a Bench Top

To place the product on a bench top

1. Place the product on a stable, flat and level surface. Ensure that the surface can support the weight of the product. For information on the weight, see the data sheet.
2. **CAUTION!** Foldable feet can collapse. See ["Setting up the product"](#) on page 20. Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath the product.
3. **WARNING!** A stack of products can fall over and cause injury. Never stack more than three products on top of each other. Instead, mount them in a rack.
Stack as follows:
 - If the products have foldable feet, fold them in completely.
 - It is best if all products have the same dimensions (width and length). If the products have different dimensions, stack according to size and place the smallest product on top.
 - Do not exceed the permissible total load placed on the product at the bottom of the stack:
 - 50 kg when stacking products of identical dimensions (left figure).
 - 25 kg when stacking smaller products on top (middle figure).

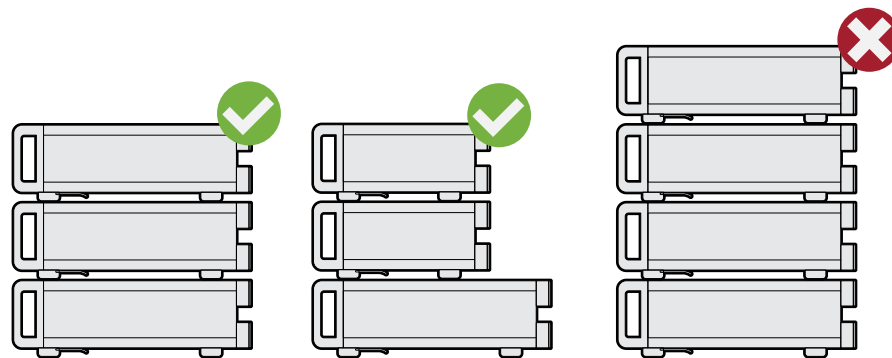

Left = Stacked correctly, same dimensions
 Middle = Stacked correctly, different dimensions
 Right = Stacked incorrectly, too many products

4. **NOTICE!** Overheating can damage the product.

Prevent overheating as follows:

- Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity.
- Do not place the product next to heat-generating equipment such as radiators or other products.

3.1.4.2 Mounting the R&S SMB100B in a Rack

To prepare the rack

1. Observe the requirements and instructions in "[Setting up the product](#)" on page 20.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product.
Design and implement an efficient ventilation concept for the rack.

To mount the R&S SMB100B in a rack

1. Use an adapter kit that fits the dimensions of the R&S SMB100B to prepare the instrument for rack mounting.
 - a) Order the rack adapter kit designed for the R&S SMB100B. For the order number, see data sheet.
 - b) Mount the adapter kit. Follow the assembly instructions provided with the adapter kit.
2. Lift the R&S SMB100B to shelf height.
3. Grab the handles at the front and push the R&S SMB100B onto the shelf until the rack brackets fit closely to the rack.
4. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the R&S SMB100B in the rack.

To unmount the R&S SMB100B from a rack

1. Loosen the screws at the rack brackets.
2. Bring the lifting equipment to shelf height.
3. Remove the R&S SMB100B from the rack.
4. If placing the R&S SMB100B on a bench top again, unmount the adapter kit from the R&S SMB100B. Follow the instructions provided with the adapter kit.

3.1.5 Considerations for Test Setup

Cable selection and electromagnetic interference (EMI)

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, especially for the following connector types:
 - BNC
Double-shielded BNC cables.
How to: ["To connect to non-screwable connectors \(BNC\)"](#) on page 29
 - SMA
Double-shielded SMA cables.
How to: ["To connect to Ref In/Ref Out \(reference = 1 GHz\)"](#) on page 30
 - USB
Double-shielded USB cables.
How to: [Chapter 3.1.8, "Connecting USB Devices"](#), on page 28.
See also [Chapter 13.6, "Measuring USB Cable Quality"](#), on page 544.
 - LAN
At least CAT6 STP cables.
How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 27
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.

Signal input and output levels

Information on signal levels is provided in the data sheet. Keep the signal levels within the specified ranges to avoid damage to the R&S SMB100B and connected devices.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

- **NOTICE!** Risk of electrostatic discharge. Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).
Ground yourself to prevent electrostatic discharge damage:
 - a) Use a wrist strap and cord to connect yourself to ground.

- b) Use a conductive floor mat and heel strap combination.

3.1.6 Connecting to Power

For safety information, see "[Connecting to power](#)" on page 20.

1. Plug the AC power cable into the AC power connector on the rear panel of the instrument. Only use the AC power cable delivered with the R&S SMB100B.
2. Plug the AC power cable into a power outlet with ground contact.

The required ratings are listed next to the AC power connector and in the data sheet.

3.1.7 Connecting to LAN

Network environment

Before connecting the product to a local area network (LAN), consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

To connect to LAN

The connector is located on the [rear panel](#).

- Connect the LAN socket via an RJ-45 cable to the LAN.

By default, the R&S SMB100B is configured to use DHCP (dynamic host configuration protocol) and no static IP address is configured.

If switched on and connected to the LAN, the R&S SMB100B displays the address information on the screen.

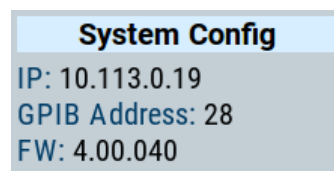


Figure 3-1: IP address indication on the screen (example)

See also [Chapter 11.6, "Connecting the Instrument to the Network \(LAN\)"](#), on page 292.

3.1.8 Connecting USB Devices

You can connect or disconnect all USB devices from the R&S SMB100B during operation.

To connect USB storage devices

USB storage devices, such as memory sticks, allow easy data transfer from/to the R&S SMB100B. You can also use them for firmware updates.

- Connect the USB storage device to any of the USB connectors.

To connect USB devices with external power supply

1. **NOTICE!** Connected devices with external power supply can feed back current into the 5 V power supply of the USB interface and thus damage the R&S SMB100B.
Ensure that there is no connection between the positive pole of the power supply and the +5 V power pin of the USB interface (VBUS).
2. Connect the USB storage device to any of the USB connectors.

To connect a keyboard

- Connect the keyboard to any of the USB connectors.

When connected, the R&S SMB100B detects the keyboard automatically. A detected keyboard has the default layout English – US.

To connect a mouse

- Connect the mouse to any of the USB connectors.

When connected, the R&S SMB100B detects the mouse automatically.

To connect power sensors

You can connect power sensors of the R&S NRP families to any of the USB connectors.

See [Chapter 7.4, "Using Power Sensors"](#), on page 168.

3.1.9 Connecting to RF

The connector is located on the [front panel](#).

To prepare for connecting to RF

1. **NOTICE!** Damaged or not clean connections can lead to RF insertion loss and mismatch, and even premature wear of the connectors.
Before connecting to the port, inspect the RF connector visually to check that it is clean, undamaged and mechanically compatible.
See the application note [1MA99](#) for information on how to handle and maintain the RF port, to minimize measurement deviations and ensure its longevity.
2. **NOTICE!** Risk of instrument damage. Excessive reverse power or DC voltage at the RF connector can damage the instrument.
Make sure that the values do not exceed the reverse power and DC limits as given in the data sheet.
3. If the R&S SMB100B is switched on, deactivate the RF output, before connecting an RF cable to the RF connector.
In the home screen, select the block "Level" > "RF ON > Off".
4. Use a high-quality RF cable that matches the RF connector type.
See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 26.

To connect to non-screwable connectors (BNC)

- To connect the RF cable with the RF connector, proceed as follows:
 - a) Carefully align the connector of the cable and the RF connector along a common axis.
 - b) Mate the connectors along the common axis until the male pin of the connector of the cable engages with the female socket of the RF connector.

The connector types listed in this table represent the common connectors provided by Rohde & Schwarz. It is considered as general information and therefore can contain connector types that do not apply to your instrument.

See [Chapter 3.2.1.9, "RF 50 Ω"](#), on page 36.

To prevent RF output switch-off

- **NOTICE!** If you set a too high output level without a load connected to the instrument, the reverse power can exceed a limit forcing the R&S SMB100B to switch off the RF output.
Connect a load with sufficient return loss as given in the data sheet.

3.1.10 Connecting to Ref In/Ref Out

The connector is located on the [rear panel](#).

To connect to Ref In/Ref Out (reference < 1 GHz)

For connection, the R&S SMB100B provides BNC connectors.

- ▶ Follow the instructions in ["To connect to non-screwable connectors \(BNC\)"](#) on page 29.

To connect to Ref In/Ref Out (reference = 1 GHz)

For connection, the R&S SMB100B provides SMA connectors.

1. Use a high-quality cable that matches the connector type.
See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 26.
2. **NOTICE!** Risk of instrument damage and connector damage. Excessive tightening can damage the cables and the connectors. However, if you do not tighten the connectors enough, the measurement results can be inaccurate.

To connect the cable with the connector, proceed as follows:

- a) Carefully align the connector of the cable and the connector along a common axis.
- b) Mate the connectors along the common axis until the male pin of the inner connector engages with the female socket of the outer connector.
- c) Turn the nut of the outer connector until the connectors are firmly coupled.
- d) Torque the nut to the specified limit using a calibrated torque wrench. Hold the opposite connector part stationary with a spanner.

For torque limits of the most relevant connector types, see [Table 3-1](#).

3. Torque the nut to the specified limit using a calibrated torque wrench. Hold the opposite connector part stationary with a spanner.

For more information, see chapter "Handling" of the application note [1MA99](#).

Table 3-1: Connector types and torque limits

Type	Torque limit		Nut opening	
	lb-Inch	Nm	Inch	mm
N	13.3	1.5	3/4	20
SMA	5	0.56	5/16	8
3.5 mm	8	0.9	5/16	8
2.92 mm	8	0.9	5/16	8
2.4 mm	8	0.9	5/16	8
1.85 mm	8	0.9	5/16	8
1.0 mm	3	0.34	0.236	6

3.1.11 Switching On or Off

The following table provides an overview of power states, LEDs and power switch positions.

Table 3-2: Overview of power states

State	LED	Position of power switch
Off	● gray	[0]
Standby	● yellow ● orange	[I]
Ready	● yellow	[I]

To switch on the R&S SMB100B

The R&S SMB100B is off but connected to power. See [Chapter 3.1.6, "Connecting to Power"](#), on page 27.

1. Set the switch on the power supply to position [I].
The switch is located on the [rear panel](#).
The LED of the [On/Standby] key is orange.
2. Wait until the oven-controlled oscillator (OCXO) warms up. For the warm-up time, see data sheet.
3. Press the [On/Standby] key.
Key and LED are located on the [front panel](#).
The LED changes to green. The R&S SMB100B boots.

When starting for the first time, the R&S SMB100B starts with the default settings. When restarting the instrument, the settings depend on the instrument configuration before shut-down.

See [Chapter 9.4, "Saving and Recalling Instrument Settings"](#), on page 201.

When the instrument is switched on, it automatically monitors main functions. You can query erroneous functions. In addition to automatic monitoring, you can perform maintenance tasks.

See:

- [Chapter 13.4, "Querying Error Messages"](#), on page 541
- [Chapter 15.3, "Performing Maintenance Tasks"](#), on page 553

To shut down the product

The product is in the ready state.

- Press the [On/Standby] key.

The operating system shuts down. The LED changes to orange.

In the standby state, the power switch circuits and the OCXO are active. To deactivate them, disconnect the instrument from the power supply.

To disconnect from power

The R&S SMB100B is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.

Set the toggle switch on the power supply to position [0].

The LED of the [On/Standby] key is switched off.

2. Disconnect the R&S SMB100B from the power source.

3.2 Instrument Tour

This chapter explains the control elements and the connectors of the R&S SMB100B. The views of the front panel and the rear panel help you to get familiar with the instrument and to perform first steps. For specifications of the interfaces, see the data sheet.

The meanings of the labels on the R&S SMB100B are described in [Chapter 2.2, "Labels on R&S SMB100B"](#), on page 21.

3.2.1 Front Panel Tour

This section provides an overview of the control elements at the front panel of the R&S SMB100B. Most of the connectors are at the rear panel and are described in [Chapter 3.2.2, "Rear Panel Tour"](#), on page 36.



Figure 3-2: Front panel view

- 1 = Utility keys
- 2 = [On/Standby]
- 3 = Touchscreen
- 4 = Function keys
- 5 = Keypad
- 6 = Navigation controls
- 7 = Display keys
- 8 = USB connector
- 9 = RF output connector

3.2.1.1 Touchscreen

The screen at the front panel is the graphical user interface. It shows the settings dialogs and parameters, and the current configuration at a glance, see [Chapter 3.4.3, "Understanding the Display Information"](#), on page 48.

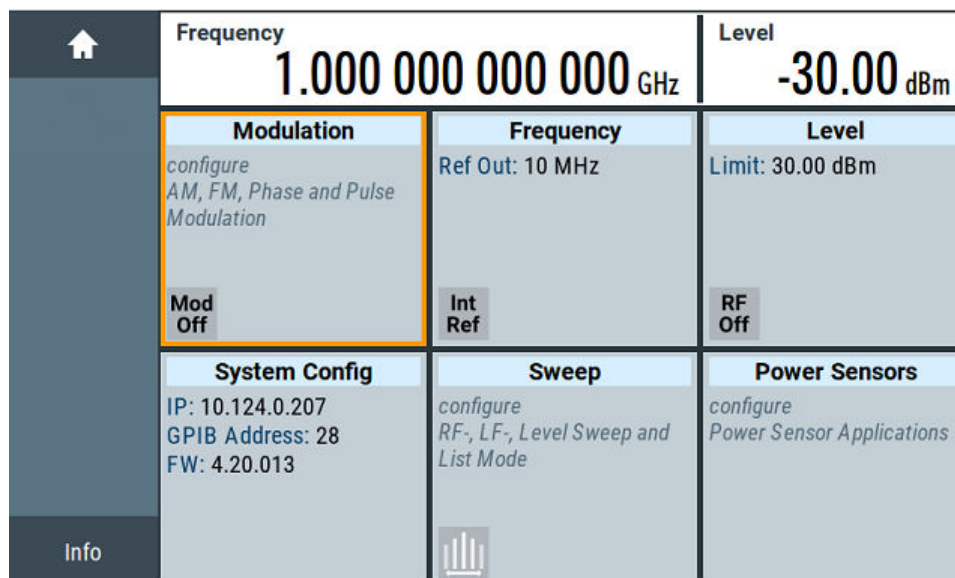


Figure 3-3: Touchscreen

The touch-sensitive panel provides an alternative means of user interaction for quick and easy handling of the instrument, see [Chapter 3.4.2, "Means of Manual Interaction"](#), on page 47.

See also:

- [Chapter 3.4, "Instrument Control"](#), on page 46, for operating the touchscreen.
- [Chapter 15.1, "Cleaning"](#), on page 553, for instructions on cleaning the screen.

3.2.1.2 Utility Keys

The utility keys set the R&S SMB100B to a defined state, and provide access to basic settings and information on assistance.

Table 3-3: Utility keys

Utility Key	Assigned functions
[Preset]	Sets the instrument to a defined state
[Local]	Switches from remote control to local (manual) control
[Setup]	Accesses the general instrument settings
[Help]	Displays context-sensitive help text

3.2.1.3 On/Standby

The [On/Standby] key switches the instrument from the standby to the ready state or vice versa.

The LED above the [On/Standby] key indicates the instrument state, see [Chapter 3.1.11, "Switching On or Off"](#), on page 31.

3.2.1.4 Function Keys

Function keys provide access to the most common generator settings and functions. You can find a detailed description of the corresponding functions in the user manual.

Table 3-4: Function keys

Function key	Assigned functions
[Freq]	Activates frequency entry.
[Level]	Activates level entry.
[Mod on/off]	Switches the modulation on and off.
[RF on/off]	Switches the RF output on and off.

3.2.1.5 Keypad

The keypad enables you to enter alphanumeric parameters, including the corresponding units. It contains the following keys:

Table 3-5: Keys on the keypad

Type of key	Description
Alphanumeric keys	Enter numbers and (special) characters in edit dialog boxes.
Decimal point	Inserts a decimal point "." at the cursor position.
Sign key	Changes the sign of a numeric parameter. In the case of an alphanumeric parameter, inserts a "-" at the cursor position.
Unit keys (G/n dBμV, M/μ μV, k/m mV and x1 dB(m))	These keys add the selected unit to the entered numeric value and complete the entry. In the case of level entries (e.g. in dB) or dimensionless values, all units have the value "1" as multiplying factor. Thus, they have the same function as an [Enter] key.

3.2.1.6 Navigation Controls

The navigation controls include a rotary knob, navigation keys, and the display keys. They allow you to navigate within the display or within dialog boxes.

Rotary Knob

The rotary knob has several functions:

- Increments (clockwise direction) or decrements (counterclockwise direction) the instrument parameter at a defined step size in the case of a numeric entry.
- Moves the selection, e.g. to a function block in the block diagram
- Shifts the selection bar within focused areas (e.g. lists).
- Acts like the [Enter] key, when it is pressed.
- Opens a context-sensitive menu, when it is pressed and held.

Editing Keys

Editing keys enable you to confirm an entry, delete individual characters, or exit the current operation.

Table 3-6: Editing keys

Type of key	Description
[Esc] key	<p>Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. In dialog boxes that contain a "Cancel" button it activates that button.</p> <p>For "Edit" dialog boxes the following mechanism is used:</p> <ul style="list-style-type: none"> • If data entry has been started, it retains the original value and closes the dialog box. • If data entry has not been started or has been completed, it closes the dialog box.
[Enter] key	<p>Has the same effect as pressing the rotary knob</p> <ul style="list-style-type: none"> • Concludes the entry of dimensionless entries. The new value is accepted. • With other entries, this key can be used instead of the default unit key. • In a dialog box, selects the default or focused element. • Calls the next dialog level. • Confirms and closes open input windows.
[Backspace] key	Deletes the character to the left of the cursor in editing mode.

Navigation Keys

As an alternative to the rotary knob or the touchscreen, you can use the navigation keys to navigate through dialog boxes, diagrams, or tables.

Table 3-7: Navigation keys

Type of key	Description
[Up/Down] Key	<p>The [Up] and the [Down] key does the following:</p> <ul style="list-style-type: none"> • In a numeric edit dialog box, increase or decrease the instrument parameter. • In a list, scroll forward and backward through the list entries. • In a table, move the selection bar vertically. • In windows or dialog boxes with vertical scrollbar, move the scrollbar.
[Left/Right] Key	<p>The [Left] and the [Right] key does the following:</p> <ul style="list-style-type: none"> • In an alphanumeric edit dialog box, move the cursor. • In a list, scroll forward and backward through the list entries. • In a table, move the selection bar horizontally. • In windows or dialog boxes with horizontal scrollbar, move the scrollbar.

3.2.1.7 Display Keys

The display keys arrange different windows on the display.

Table 3-8: Display keys

Display key	Assigned functions
[Home]	Returns to the initial feature screen.
[Next window]	Toggles between the entry fields in the taskbar.
[On/Off]	<ul style="list-style-type: none"> Switches highlighted elements or a function block on and off. Switches between two or more settings, e.g. items of selection lists. At the end of a list, the cursor is set on the first entry again.
[Undo]	Reverts the last operation.
[★ (User)]	Adds a parameter to the user menu for quick access.

3.2.1.8 USB Connector

Female USB type A connector, to connect devices like a keyboard, a mouse, a memory stick, or the R&S NRP-Z3/Z4 cable for the R&S NRP power sensors.

How to: [Chapter 3.1.8, "Connecting USB Devices"](#), on page 28

3.2.1.9 RF 50 Ω

Output of the RF signal (N female connector).

How to: [Chapter 3.1.9, "Connecting to RF"](#), on page 28

3.2.2 Rear Panel Tour

This section provides an overview of the connectors at the rear panel of the instrument. For technical data of the connectors, refer to the data sheet.

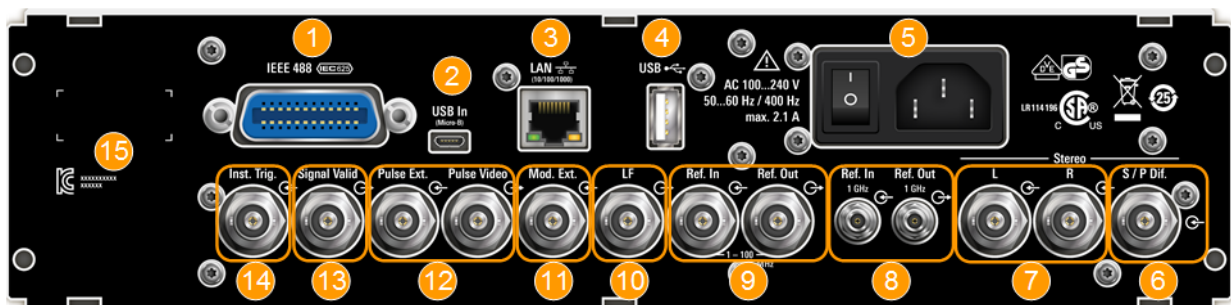


Figure 3-4: Rear panel view R&S SMB100B RF Signal Generator

- 1 = IEC 625/IEEE 488 connector
- 2 = USB In connector (type micro-B)
- 3 = LAN connector
- 4 = USB connector (type A)
- 5 = AC power supply connection and main power switch

- 6 = S/P Dif digital stereo signal input connector (BNC)
- 7 = Stereo L/R analog stereo modulation signal input connectors (BNC)
- 8 = Ref In 1GHz and Ref Out 1GHz connectors (SMA)
- 9 = Ref In and Ref Out connectors (BNC)
- 10 = LF output connector (BNC)
- 11 = Mod. Ext. input connector (BNC)
- 12 = Pulse Video and Pulse Ext. connectors (BNC)
- 13 = Signal Valid output connector (BNC)
- 14 = Inst Trig input connector (BNC)
- 15 = Serial number (six digits in the string 1400.1000.02-<serial number>-<checksum>)

3.2.2.1 Connectors

IEC 625/IEEE 488

Option: R&S SMBB-B86

General purpose interface bus (GPIB) interface for remote control of the instrument. The interface is in compliance with the standards IEC 625, IEEE 488 and SCPI.

Use this interface to connect a computer for remote control of the R&S SMB100B. To set up the connection, use high-quality shielded cables. See ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 26.

See also [Chapter C.1, "GPIB-Bus Interface"](#), on page 594 and [Chapter 11, "Network Operation and Remote Control"](#), on page 264.

USB/USB In

- Female USB (universal serial bus) 2.0 connector of type A (host USB), to connect devices like a keyboard, a mouse, a memory stick, or the R&S NRP-Z3/Z4 cable for the R&S NRP power sensors
- Option: R&S SMBB-B86
Female USB 3.0 connector of type Micro-B (USB In), for example, for remote control.

How to: [Chapter 3.1.8, "Connecting USB Devices"](#), on page 28

LAN

RJ-45 connector to connect the R&S SMB100B to a LAN for remote control, remote operation, and data transfer.

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 27

AC power supply connector and switch

Mains power switch for performing the following tasks:

- Connecting the internal power supply to the power source
- Disconnecting the internal power supply from the power source

How to: [Chapter 3.1.6, "Connecting to Power"](#), on page 27.

S/P Dif

Option: R&S SMBB-B5

Input for digital stereo signals.

See also [Chapter 5.4.3, "Stereo Modulation"](#), on page 78.

Stereo L/R

Option: R&S SMBB-B5

Inputs for analog stereo modulation signals. External modulation sources or the internal LF generator can be used.

See also [Chapter 5.4.3, "Stereo Modulation"](#), on page 78.

LF

Output for internal LF generator signal.

See the data sheet and in the user manual, section [Chapter 5, "Analog Modulations"](#), on page 68.

Ref In/Ref Out

Input/output for external reference signal.

BNC connectors for reference signals from 1 MHz to 100 MHz.

SMA connectors for 1 GHz reference signals.

How to: [Chapter 3.1.10, "Connecting to Ref In/Ref Out"](#), on page 29

Mod. Ext.

Input for an external analog modulation signal.

Pulse Video

Output of the internal pulse generator signal or the looped through pulse signal from Pulse Ext. connector (video signal).

See [Chapter 5.4.1, "Pulse Modulation"](#), on page 71.

Pulse Ext.

Input for an external pulse modulation signal or an external trigger/gate signal for the pulse generator.

Signal Valid

Output signal that determines the valid signal times (valid level and frequency) for all analog modulations.

Alternatively, you can use this connector to synchronize pulse signals by activating the "Pulse Sync" in the dialog [Chapter 5.4.4, "Pulse Generator"](#), on page 86.

Inst Trig

BNC connector for input of external trigger signals. The signals trigger sweeps and list mode.

See [Chapter 6.1, "Signal Generation and Triggering in the Sweep and List Modes"](#), on page 114.

3.3 Trying Out the Instrument

This chapter introduces the first steps with the R&S SMB100B. It shows how to operate and configure the instrument using simple examples. The complete description of

the functionality and its usage is given in the R&S SMB100B user manual. Basic instrument operation is described in [Chapter 3.4, "Instrument Control"](#), on page 46.

Prerequisites

The instrument is set up, connected to the power supply, and started up as described in [Chapter 3.1, "Preparing for Use"](#), on page 23.

The first signal generation tasks explain how to generate an unmodulated signal, to configure the RF signal output, and how you can vary the RF frequency and level in sweep mode.


The instrument is manually operated via the touchscreen. Try out the following:

- [Generating an Unmodulated Carrier](#).....39
- [Generating an RF Frequency Sweep Signal](#).....41
- [Saving and Recalling Settings](#)..... 43

3.3.1 Generating an Unmodulated Carrier

We start to generate a simple unmodulated signal. In this example, the R&S SMB100B can be in its minimal configuration.

1. On the R&S SMB100B front panel, press the [Preset] key to set a defined initial instrument state.
2. Set the frequency:
 - a) In the "Status Bar", tap the "Frequency" field.
 - b) On the on-screen keypad, enter "6" and press the "GHz" key.

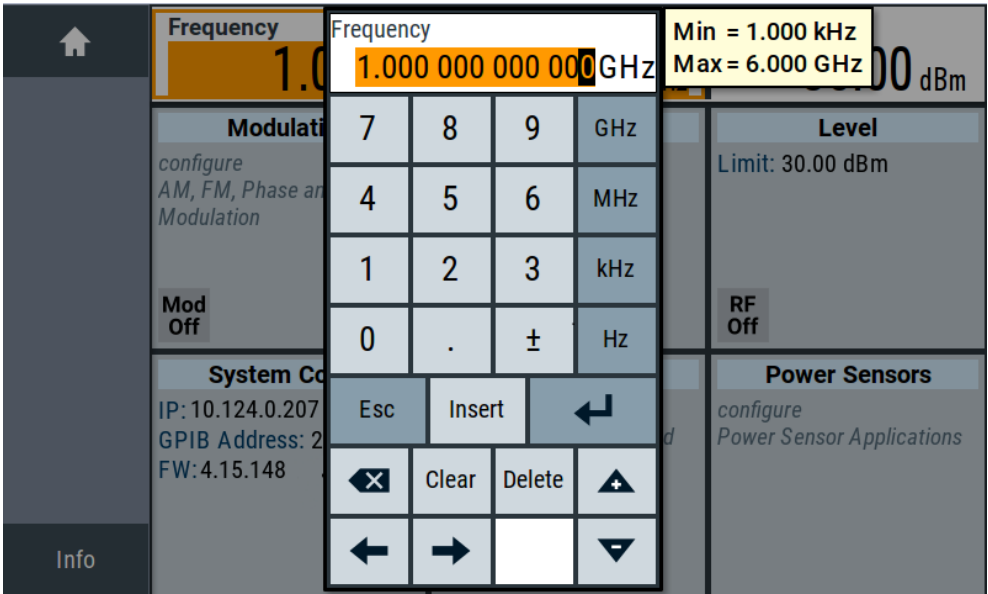

- The on-screen key pad closes and the frequency value is displayed.
3. To set the signal level, tap the "Level" field and enter the level in the same way.

4. To activate RF signal output, select "Level" > "RF On" in the tile diagram.

Frequency 6.000 000 000 000 GHz		Level -25.00 dBm
Modulation <i>configure</i> AM, FM, Phase and Pulse Modulation Mod Off	Frequency Ref Out: 10 MHz Int Ref	Level Limit: 30.00 dBm Level <input checked="" type="checkbox"/> RF ON
System Config IP: 10.124.0.207 GPIB Address: 28 FW: 4.15.148	Sweep <i>configure</i> RF-, LF-, Level Sweep and List Mode	Level... Attenuator... Automatic Level Control...

The blue colored "RF On" icon indicates that the RF output is activated.

The R&S SMB100B provides the 6 GHz signal at the RF connector at the front panel.


Frequency 6.000 000 000 000 GHz		Level -25.00 dBm
Modulation <i>configure</i> AM, FM, Phase and Pulse Modulation Mod Off	Frequency Ref Out: 10 MHz Int Ref	Level Limit: 30.00 dBm RF On
System Config IP: 10.124.0.207 GPIB Address: 28 FW: 4.15.148	Sweep <i>configure</i> RF-, LF-, Level Sweep and List Mode 	Power Sensors <i>configure</i> Power Sensor Applications

Figure 3-5: Generating an unmodulated signal

Alternative ways to access the instrument functions

To fulfill the same task, you can also use the front panel keys or the setting parameters provided in the frequency and level dialogs.

Try out the settings dialogs

1. In the "Frequency" tile, select "Frequency...".
 - a) In the "RF Frequency" tab, tap the "Frequency" field.
 - b) Set the frequency via the on-screen keypad.
2. Access the "RF Level" dialog via the "Level" tile.
 - a) In the "RF Level" tab, select "Amplitude".
 - b) Set the amplitude (level) via the on-screen keypad.
3. Select "RF State > On" to activate the RF signal generation.

See [Chapter 4, "RF Signal Configuration"](#), on page 57.

Try out the front panel keys

- ▶ Use the [Freq], [Level], and [RF on/off] key on the front panel.



Connect RF of the R&S SMB100B to a signal analyzer, for example R&S®FSW, to display the generated signal.

For the required settings of the signal analyzer, refer to its user manual or its online help.

3.3.2 Generating an RF Frequency Sweep Signal

The "Sweep" operating mode allows you to generate an RF signal with periodically varying frequencies or amplitudes.

This example deals with an RF signal with varying frequency and constant level. To configure the sweep, you need to determine a defined start and end frequency with constant time intervals between the frequency steps.

The sweep function does not require specific options.

1. On the front panel, press the [Preset] key to set a defined initial instrument state.
2. Set the signal output level, if required, e.g. set "Level > -25 dBm".
3. In the tile diagram, select "Sweep" > "Frequency Sweep".
4. In the "General" tab:

General <i>Auto</i>		Frequency Range	
State	0	Current Frequency	570.000 000 000 MHz
Mode	Auto		
Shape	Sawtooth		
Spacing	Linear	Dwell Time	15.0 ms
Reset Sweep			

- Select "Mode > Auto" to run the sweep continuously.
 - Select "Shape > Sawtooth" to set the waveform shape of the sweep signal.
 - Select "Spacing > Linear", to determine the calculation method for the frequency shift of a step.
 - Set "Dwell Time > 15.0 ms", to determine the time interval of the sweep steps.
- Select the "Frequency Range" tab.

General <i>Single</i>	Frequency Range	Output	Edit Marker	
Start Frequency	100.000 000 000 MHz	Stop Frequency	500.000 000 000 MHz	
Center Frequency	300.000 000 000 MHz	Span	400.000 000 000 MHz	
Spacing	Linear	Step Linear	1.000 000 000 MHz	

- Set "Start Freq > 200 MHz" and "Stop Freq > 600 MHz" to determine the frequency sweep range.
 - Set the step width "Step Lin > 10.0 MHz" to determine the width for a frequency step.
- In the "General" tab, activate the frequency sweep with "State > On".
 - Close the sweep dialog.
(Alternatively, tap the "Home" button to minimize the dialog. The R&S SMB100B indicates the "Sweep" dialog as active dialog in the task bar.)

8. To activate the RF signal output, select "Level" > "RF On".

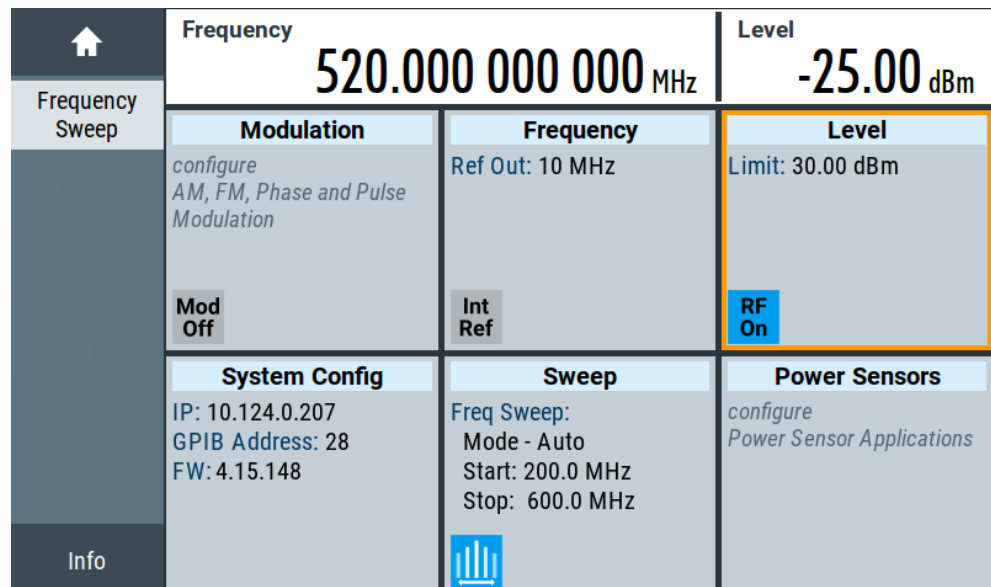


Figure 3-6: Generating a frequency sweep signal

The frequency field in the status bar indicates the continuously changing frequency, i.e. the running sweep.


3.3.3 Saving and Recalling Settings

To restore the results of our measurements later, we save the instrument settings in a file.

To save the instrument settings in a file

We assume, a test configuration as described in [Chapter 3.3.2, "Generating an RF Frequency Sweep Signal"](#), on page 41.

1. Press the [Setup] key on the front panel.
2. In the "Setup" menu, select "Settings > Save/Recall".
3. In the "Save/Recall" dialog, select "Operation Mode > Save".

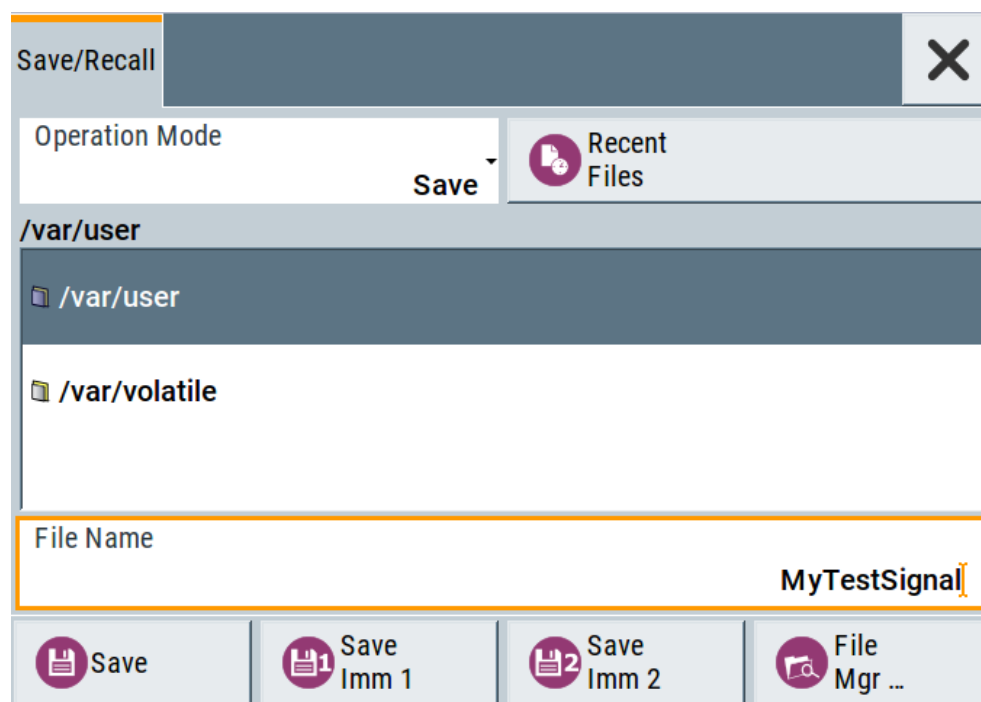


4. Tap the "Filename", use the on-screen keyboard, and enter *MyTestSignal*.
5. Tap the "Save" button.

The file `MyTestSignal.savrc1.txt` is stored in the default directory `/var/user/`.

To load saved instrument settings

You can restore the settings to the instrument at any time using the settings file.

1. Press the [Preset] button to restore the default instrument settings so you can check that the stored user settings are restored afterwards.
2. Press the [Setup] key on the front panel.
3. In the "Setup" menu, select "Settings > Save/Recall".
4. In the "Save/Recall" dialog, select "Operation Mode > Recall".
Navigate to the directory the file is saved in and select the `MyTestSignal` file.

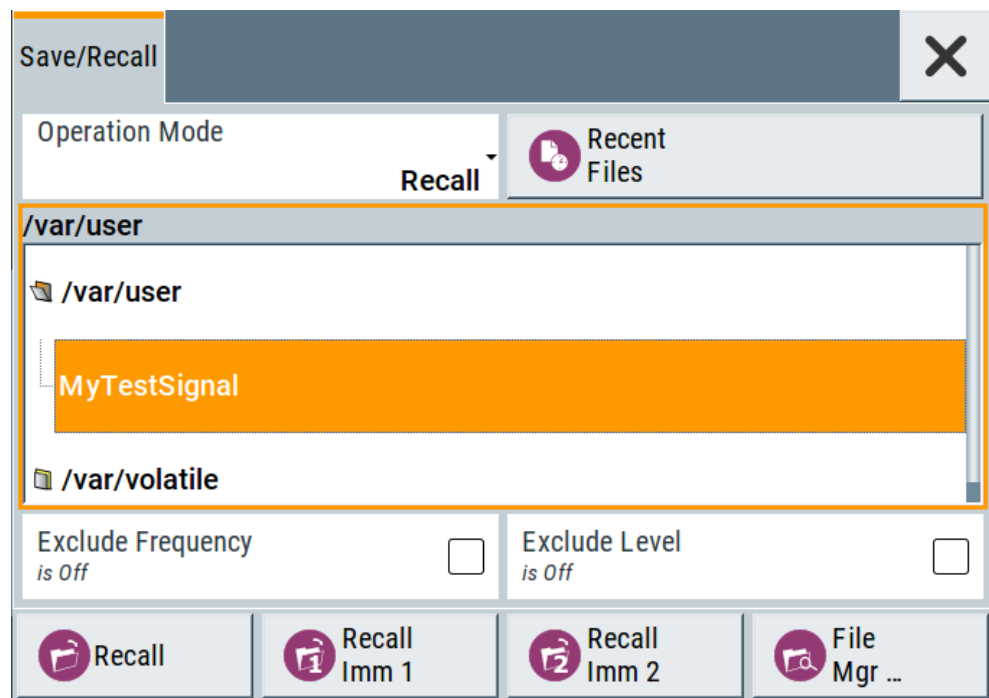

5. Tap the "Recall" button.

All instrument settings are restored and the display resembles [Chapter 3.3.2, "Generating an RF Frequency Sweep Signal"](#), on page 41, which shows the instrument display right before the settings were saved.





How to display all parameters with values different to their preset values


When you load a file to your instrument, you do not have enough information on the changed settings. In such case, it is useful to visualize all parameters that have been changed from their default state.


Try out the following:


- Touch and hold a spot in the tile diagram for at least 1 second to access the context-sensitive menu.
- Select "Mark All Parameters Changed from Preset".


 **Mark All Parameters Changed from Preset**

 **Start SCPI Recording**



 **Undo**

 **Redo**

 **Help**

 **Key Emulation**

- All changed parameters are highlighted.

 Frequency Sweep Info	Frequency 580.000 000 000 MHz		Level -25.00 dBm
	Modulation <i>configure</i> AM, FM, Phase and Pulse Modulation Mod Off	Frequency Ref Out: 10 MHz Int Ref	Level Limit: 30.00 dBm RF On
	System Config IP: 10.124.0.207 GPIB Address: 28 FW: 4.15.148	Sweep Freq Sweep: Mode - Auto Start: 200.0 MHz Stop: 600.0 MHz 	Power Sensors <i>configure</i> Power Sensor Applications

See also [Chapter 9, "File and Data Management"](#), on page 193.

3.4 Instrument Control

This chapter provides an overview on how to work with the R&S SMB100B.

It covers the following topics:

• Possible Ways to Operate the Instrument.....	47
• Means of Manual Interaction.....	47
• Understanding the Display Information.....	48
• Accessing the Functionality.....	51
• Entering Data.....	52
• Getting Information and Help.....	54
• Remote Control.....	55
• Remote Operation over VNC.....	56

3.4.1 Possible Ways to Operate the Instrument

There are three ways to operate the R&S SMB100B:

- **Manual operation:**
Use the touchscreen, hard keys and rotary knob, or an optional mouse and/or keyboard.
The description under [Chapter 3.4, "Instrument Control"](#), on page 46 shows how to operate the instrument manually.
- **Remote control:**
Create programs to automatize repeating settings, tests and measurements. The instrument is connected to a computer running the program.
This way of operation is described in [Chapter 11, "Network Operation and Remote Control"](#), on page 264.
- **Remote operation from a computer:**
Remote monitoring and control of the instrument from a connected computer is based on the common cross-platform technology VNC (Virtual Network Computing). On the remote computer, any standard web browser (supporting Java) or a dedicated VNC client (like Ultr@VNC) can be used. See also [Chapter 3.4.8, "Remote Operation over VNC"](#), on page 56.

3.4.2 Means of Manual Interaction

For the manual interaction with the R&S SMB100B, you have several methods that you can use as an alternative to perform a task:

- **Touchscreen:**
Touchscreen operation is the most direct way to interact. Almost all control elements and actions on the screen are based on the standard operating system concept. You can tap any user interface element to set parameters in dialog boxes, enter data, scroll within a dialog etc., as if you work with a mouse pointer.
Tapping the screen works like clicking mouse buttons:
 - Touch quickly = click: Selects a parameter or provokes an action.
 - Touch and hold = right-click: Opens a context-sensitive menu.
 - Touch and swipe = drag: Scrolls through the contents of a display element larger than the screen, e.g. a list or a table.
- **Function keys and rotary knob:**
The front panel provides nearly all functions and controls to operate the instrument in the classic way, without touchscreen.

- Optional mouse and/or keyboard:
These devices work like known from PCs. The navigation keys on the front panel correspond to the keys on the keyboard.

This manual describes the manual interaction with the instrument via the touchscreen. It mentions the alternative methods using the keys on the instrument or the on-screen keypads if it deviates from the standard operating procedures. The usage of the touchscreen and navigation keys is described in [Chapter 3.4.4, "Accessing the Functionality"](#), on page 51.

Throughout the manual, the term "select" refers to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

3.4.3 Understanding the Display Information

The home screen of the R&S SMB100B displays all main settings and generator states, divided into three main operation areas.

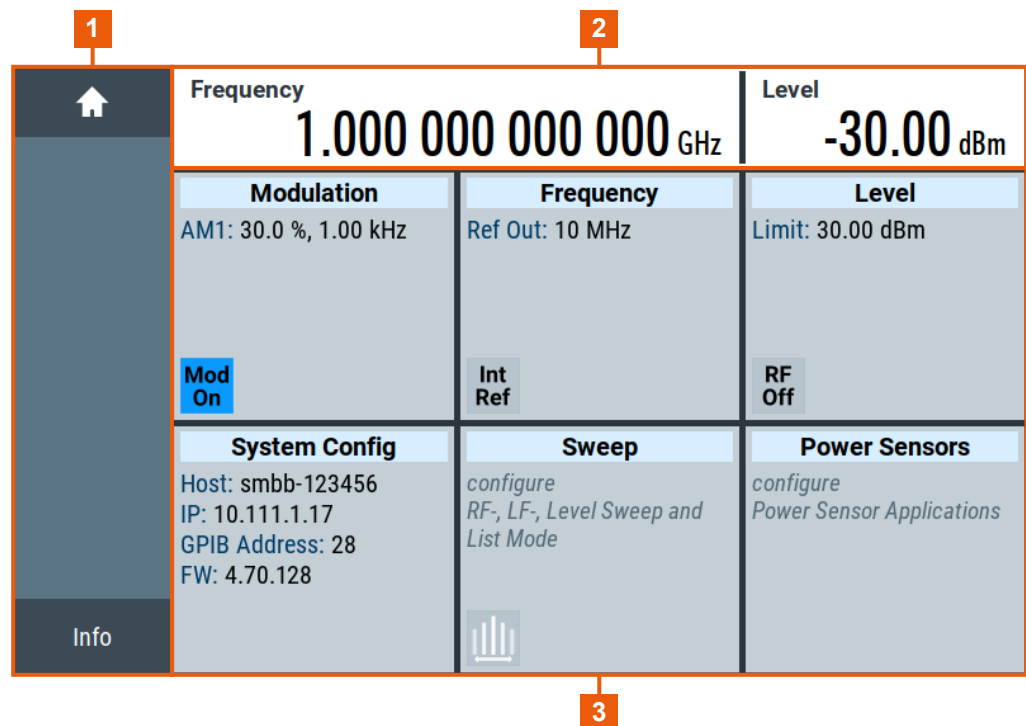


Figure 3-7: Home screen

- 1 = Taskbar/softkey bar with "Home" and "Info" key
 2 = Status bar
 3 = Tile diagram

- [Status Bar](#)..... 49
- [Tile Diagram](#)..... 49
- [Taskbar](#)..... 49
- [Additional Display Characteristics](#)..... 50

3.4.3.1 Status Bar

The status bar at the top of the screen indicates the RF frequency and the level of the output signal provided to the DUT. You can set both parameters directly here.

3.4.3.2 Tile Diagram

The tile diagram is the main entry to the settings of the R&S SMB100B.

Tile	Access to:
"Modulation"	<ul style="list-style-type: none"> Analog and stereo¹⁾, and pulse¹⁾ modulation settings Built in LF generator
"System Config"	<ul style="list-style-type: none"> "Save/Recall": settings for saving and loading instrument configurations "Remote access": Network and emulation settings. "Setup": general system configuration
"Sweep"	<ul style="list-style-type: none"> Frequency and level sweeps List mode
"Frequency"	<ul style="list-style-type: none"> RF frequency and phase Reference frequency
"Level"	<ul style="list-style-type: none"> RF level Attenuator Automatic level control User correction
"Power sensors"	<ul style="list-style-type: none"> Power sensors
¹⁾ requires additional options	

3.4.3.3 Taskbar

The "Taskbar" shows a home and an info button, and assigns a labeled button whenever you open a dialog. If more dialogs are open than the taskbar can display, touch and swipe the taskbar to scroll up and down.

The buttons shown in the following example represent the variants.


Table 3-9: Example of buttons in the taskbar



"Home" button
Returns to the home screen.



 "Busy" indicator
Indicates a running process.




"User Menu"
Lists parameters that can be defined for quick access.




Shows the current remote access connections when the instrument is remotely controlled.

 Tip: An indicator in the "System Config" tile shows the current remote control status.



R&S NRP power sensors

Shows a connected external power sensor. The button displays the current readings when the sensor is active.

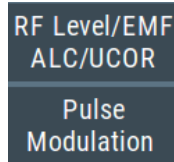

Active dialogs

Indicates the dialog name of each active dialog in a separate button.



"Info" key

Provides access to status and error messages.

Note: The warning symbol signifies a permanent error message.

3.4.3.4 Additional Display Characteristics

The following section provides a short insight on the indication of the screen in general, and significant elements that you see under specific operating modes, in dialogs or settings.

- **Appearance of active elements**

 
- *Active* elements like On/Off switches, state buttons have a **blue** background.
- *Selected* elements are framed or highlighted **orange**.
- *Inactive* elements are **gray**.

- **On-Screen keypads**

As additional means of interacting with the instrument without having to connect an external keyboard, either a numerical or alphanumerical on-screen keypad appears when you activate an entry field (see [Chapter 3.4.5, "Entering Data"](#), on page 52).

- **Info line**

The "Info line" shows brief status information and error messages. It appears when an event generates a message. If selected, the R&S SMB100B shows information on static errors and the error history.



- **Key parameters indicated in tab labels**

Most dialogs are divided into tabs with logically grouped parameters. The tab label expresses the content and can also contain status indicators or the set value of a key parameter.

- **Scroll bar handle**

An arrow icon that appears when you touch a scroll bar helps you to scroll in a dialog or list.


If no scrollbar handle appears, you can touch and swipe an element to scroll up and down.

- **Progress indicators**

A busy icon indicates a currently running process. If a process takes some time, a progress bar shows the current state.

- **Context-sensitive menus**

Within the entire screen display, including single parameters, you can access context-sensitive menus that provide some additional functions.

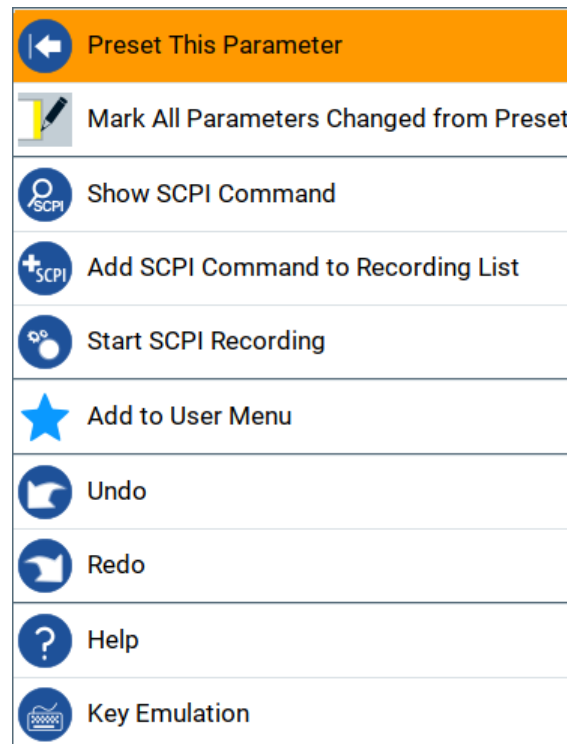

3.4.4 Accessing the Functionality

All functionalities are provided in dialog boxes as known from computer programs. You can control the instrument intuitively with the touchscreen. This section provides an overview of the accessing methods.

The instrument's functions and settings can be accessed by selecting one of the following elements:

- System and function keys on the front panel of the instrument
- Taskbar/softkeys on the touchscreen
- Context-sensitive menus for specific elements on the touchscreen, or with the rotary knob (press and hold).
- Elements on the status bar in the touchscreen
- Displayed setting on the touchscreen, that means block diagram and all settings available in dialogs.

To open a dialog box

- Perform one of the following actions:
 - Tap the required tile, and then the menu entry.
 - Tap the minimized view (button) on the taskbar.

Some of the utility keys access a dedicated dialog, too.

To minimize a dialog box

1. To return to the home screen, tap the "Home" button.
2. To switch to another dialog, press the [Next Window] button.

To close a dialog box

To close a dialog box, you have the same controls as you know from computers or devices with touchscreen.

- ▶ Perform one of the following actions:
 - Tap the "Close" icon in the upper right corner.
 - Press the [Esc] key on the front panel.
 - Drag and drop a minimized dialog from the taskbar to the tile diagram.

To select an option in a dialog box

- ▶ Tap the required option.

3.4.5 Entering Data

Some parameters have their own key on the front panel.

For data input in dialog boxes, the instrument provides on-screen keypads for entering numeric and alphanumeric values. Thus, you can always set the parameters via the touchscreen, the front panel, or an external keyboard.

To correct an entry

1. Using the arrow keys, move the cursor to the right of the entry you want to delete.
2. Press the [Backspace] key.
3. Deletes the entry to the left of the cursor.
4. Enter your correction.

To complete the entry

- ▶ Press the [Enter] key or the rotary knob.

To abort the entry

- ▶ Press the [Esc] key.
The dialog box closes without changing the settings.

3.4.5.1 Entering Numeric Parameters

To enter values with the on-screen keypad

For numeric settings, the instrument displays the numeric keypad. The units specified correspond to the units of the parameter.

1. Enter the numeric value.

Tip: For quick entry, you can enter a value in exponential representation, e.g. $1e7$ for 10000000 .

2. Tap the unit button to complete the entry.

The unit is added to the entry.

Tip: For quick unit change, you can enter shortcuts, e.g. for a frequency value $1e8h$ for 100 MHz .

For an overview of shortcuts supported by the R&S SMB100B, see [Chapter B, "Unit Shortcuts"](#), on page 592.

3. If the parameter does not require a unit, confirm the entered value by pressing "Enter".

To enter values by using the front panel controls

1. Change the currently used parameter value by using the rotary knob or the [Up/Down] keys.
2. If the parameter does not require a unit, confirm the entered value by pressing the [Enter] key or any of the unit keys.
The instrument highlights the editing line to confirm the entry.


If you edit numeric data in tables, the entry field must be in edit mode: Press [Enter], or the rotary knob to activate the edit mode.

3.4.5.2 Entering Alphanumeric Parameters

If a field requires alphanumeric input, you can use the on-screen keyboard to enter letters and (special) characters.

3.4.5.3 Undo and Redo Actions

Accessed via the context-sensitive menus, "Undo" allows you to restore one or more actions on the instrument. Depending on the available memory, the "Undo" steps can restore all actions.

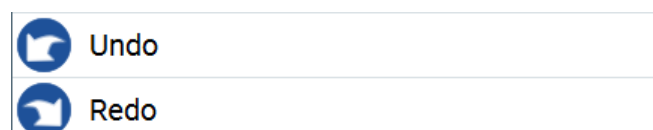

"Redo" restores a previously undone action.

3.4.6 Getting Information and Help

In some dialog boxes, graphics are included to explain the way a setting works.


For further information, you can use the following sources:

- Tooltips give the value range of the parameter.
- The context help provides functional description on a setting.
- The general help explains a dialog box, provides instructions, and general information.

To display context help

- ▶ To access a help topic, perform one of the following:
 - a) Tap and hold the parameter for which you need information and tap "Help" in the context menu.
 - b) Tap the parameter and press the [Help] key.

The "Help" dialog opens. You can browse the help for further information.

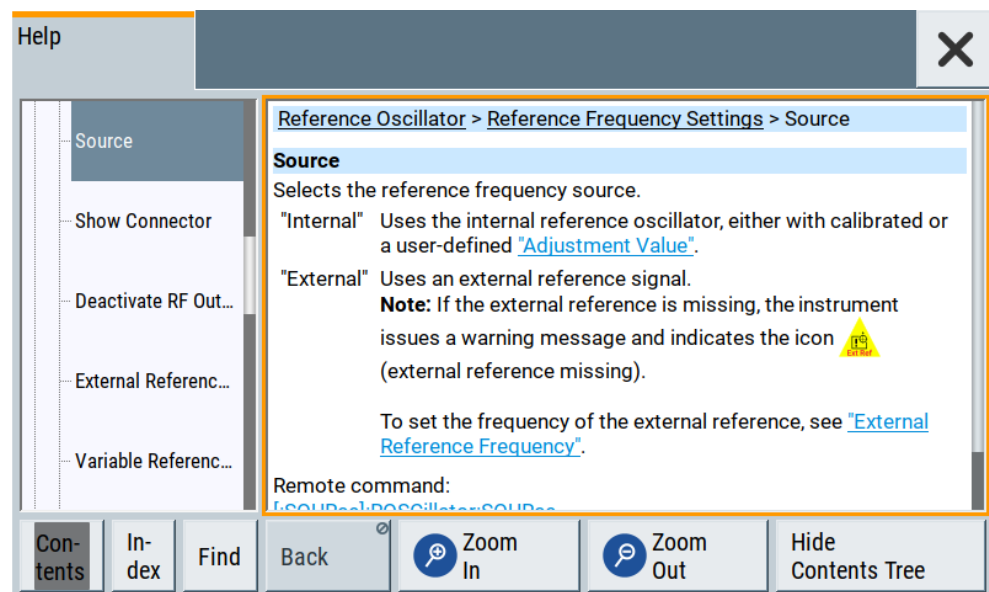

Contents of the help dialog box

The help dialog box covers two main areas:

- "Contents" - contains a table of help contents
- "Topic" - contains a specific help topic

The help system also provides an "Index" and a "Find" area, and "Zoom" functions that are accessed via the corresponding buttons.

To open general help

- ▶ Press the yellow [Help] key on the front panel.

If a dialog box is opened, the help topic for the current tab is shown. Otherwise the "Contents" page appears.

Navigating in the table of contents and in the help topics

1. To move through the displayed contents entries, tap on an entry and scroll or use a connected mouse or the [Up/Down] keys.
Entries with a plus sign contain further entries.
2. To display a help topic, tap on the topic name or double-click the topic name or press the [Enter] key.
3. To follow a cross-reference, tap on the link text.
4. To return to the previous page, select "Back".
This function scrolls back all steps you have performed before.
5. Use the "scroll bars" to shift the visible section of content shown.
6. To maximize the "Topics" area, tap the "Hide Contents Tree" button to hide the contents tree.

Using the index

1. Select the "Index" button.
2. Enter the first characters of the topic you are interested in.
The entries starting with these characters are displayed.
3. Tap on the index entry.
The corresponding help topic is displayed.

3.4.7 Remote Control

In addition to working with the R&S SMB100B interactively, located directly at the instrument, it is also possible to operate and control it from a remote PC.

The R&S SMB100B supports various methods for remote control:

- Connecting the instrument to a LAN (see [Chapter 3.1.7, "Connecting to LAN"](#), on page 27)
- Using the LXI browser interface in a LAN
- Connecting a PC via the IEC-bus (IEEE 488) interface
- Remote control via the USB interface



For remote control over LAN or USB, you can use the R&S VISA (Virtual Instrument Software Architecture) library provided for download at the Rohde & Schwarz website <http://www.rohde-schwarz.com/rsvisa>.

How to configure the remote control interfaces is described in [Chapter 11, "Network Operation and Remote Control"](#), on page 264.

3.4.8 Remote Operation over VNC

The VNC is an application which can be used to access and control the instrument from a remote computer through a LAN connection. While the instrument is in operation, the instrument screen contents are displayed on the remote computer, and VNC provides access to all applications, files, and network resources of the instrument. Thus, remote operation of the instrument is possible.



Instrument control from a remote computer

To access the basic utility functions of the R&S SMB100B, perform a right mouse click the block diagram and select "Key Emulation".

A key panel to the right of the block diagram gives access to the utility functions provided by the front panel keys.

The VNC is an add-on program, included in operating system Linux/Unix, and available as a free-of-charge download on the internet.

For more information, refer to [Chapter 11.9, "Operating the R&S SMB100B Remotely via VNC"](#), on page 317.

4 RF Signal Configuration

The R&S SMB100B signal generator generates RF signals with outstanding spectral purity within the frequency range from 8 kHz up to 6 GHz and with adjustable signal level over a wide range.

In addition to these real-time CW signals, you can generate RF signals from predefined lists and sweep signals that vary according to the frequency or amplitude curves.

You can also apply versatile analog modulation types with definable characteristics.

The variably adjustable output level due to the built-in attenuator, allows you to vary the RF signal level over the full level range. There are different methods to improve signal performance and to optimize the signal quality for the particular application, or to increase the accuracy and reliability of the generated RF signal.

The R&S SMB100B supports R&S NRP power sensors, e.g. to monitor the output level of the generator or to determine the level correction values for user correction lists.

Signal modes and characteristics

The R&S SMB100B generates unmodulated or analog modulated RF signals. You can output the signal in fixed mode or as a signal having periodically varying frequencies or amplitudes.

Signal modes for RF signal generation:

- Unmodulated signal
Generates an unmodulated continuous wave (CW) of constant frequency and amplitude.
For information on the signal frequency and level settings and an example on how to configure a simple CW signal, see:
 - [Chapter 4.3, "RF Frequency Settings"](#), on page 60
 - [Chapter 4.4, "RF Level Settings"](#), on page 62
 - [Chapter 3.3.1, "Generating an Unmodulated Carrier"](#), on page 39
- Analog modulated signal
Modulates the signal with an analog signal and generates amplitude, phase, frequency and pulse modulation.
See [Chapter 5, "Analog Modulations"](#), on page 68.

The R&S SMB100B allows you to provide the RF signal with constant or varying frequencies and/or amplitudes at the output:

- Constant frequency and level (CW/Fixed mode)
The RF output signal has the set frequency and level.
- Varying frequency and/or level
 - Sweep mode
An RF or LF frequency and RF level sweep signal, processed continuously, step-by-step or individually and with selectable trigger modes. You can only run one sweep at a time.
 - List mode

The RF signal is based on a list of predefined frequency and level values pairs and step widths.

See [Chapter 6, "List and Sweep Mode"](#), on page 112.

4.1 Activating RF Signal Output

Per default, the RF output signal is deactivated.

To activate the RF output

1. Configure the RF signal as required.
Set, for example, the frequency and level values.
2. Activate the RF output in one of the following ways:
 - a) Select "Level > RF ON > On"
 - b) Press the [RF on/off] key at the front panel.
3. In the "Level" tile, observe the color of the "RF On" icon.

The blue color indicates that the RF output is activated.

RF State/RF ON	58
RF output impedance	58

RF State/RF ON

Activates or deactivates the RF output.

Acts as the [RF on/off] key.

Remote command:

[:OUTPut<hw>\[:STATe\]](#) on page 363

RF output impedance

You can query the impedance of the RF output.

Remote command:

[:OUTPut<hw>:IMPedance?](#) on page 363

4.2 How to Set the Frequency and Level

The simplest form of the RF signal is a continuous wave (CW) of constant frequency and amplitude. The RF signal is defined by its frequency, level and phase.

- Use one of the following:
- "Status Bar > Frequency and Level"
 - "Frequency panel > Frequency"
 - "Level panel > Level"
 - "Frequency panel > Frequency > Phase"

- On the front panel, press the [Freq] or the [Level] key.

Current frequency and level values are indicated in the "Status bar" so that you can see them at a glance. Values displayed in the status bar and in the "Frequency/Level" dialogs can deviate from each other.

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

RF frequency and level display with a downstream instrument

If your test setup includes a downstream instrument, you can enter the parameter of the downstream instrument in the frequency or level settings dialog of the R&S SMB100B. Examples of downstream instruments are mixers, frequency multipliers, amplifiers or attenuators and of their corresponding major parameters offset, multiplier, amplitude. The R&S SMB100B generates the signal without the downstream parameters, but considers all additional parameters concerning the frequency and level.

Example parameters that affect the frequency and level:

- Frequency offset
- Multiplication factor
- User correction

Any of these cases are indicated by a dedicated icon, displayed in the "Frequency" or "Level" tile, depending on the affected parameter.

[Figure 4-1](#) illustrates the calculation of the "Frequency" and "Level" values, displayed in the status bar.

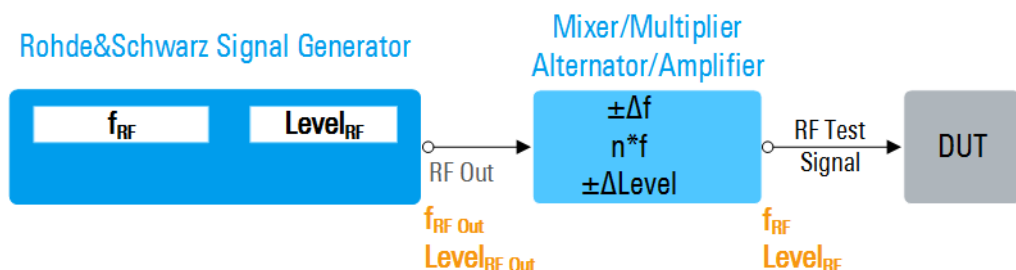


Figure 4-1: Frequency and Level display vs frequency and level at the RF output

f_{RF} , $Level_{RF}$	= Frequency and level ("Status bar > Frequency and Level") at the output of the downstream instrument, see also Calculation of f_{RF} and $Level_{RF}$
$f_{RF\ Out}$, $Level_{RF\ Out}$	= Frequency and level at the output connector [RF] ("RF > RF Frequency > Frequency" and "RF > RF Level > Amplitude")
$n*f$	= Multiplication factor ("RF > RF Frequency > Multiplier")
Δf	= Frequency offset ("RF > RF Frequency > Offset")
$\Delta Level$	= Power offset ("RF > RF Level > Offset")

Calculation of f_{RF} and $Level_{RF}$

- $f_{RF} = n * f_{RF\ Out} + \Delta f$
- $Level_{RF} = Level_{RF\ Out} + \Delta Level$

4.3 RF Frequency Settings

Access:

1. Select "Frequency" > "RF Frequency".

RF Frequency		Phase	
Frequency 3.000 000 000 000 GHz			
Offset 10.000 000 000 MHz		Multiplier 2.000	
User Variation			
Variation Active <input type="checkbox"/>		Variation Step 1.000 000 000 MHz	

2. Observe the information on the home screen, "Frequency" tile.

Frequency	
Offset: 10.000 MHz	
Multiplier: 2.000	
Ref Out: 10 MHz	
Δ Phase: 180.00 deg	
Int Ref	Freq Offs

The "Frequency" tile indicates the reference frequency, current frequency offset and multiplier values, and phase offset value.

In the "RF Frequency" dialog, you can configure:

- RF frequency, incl. an offset or multiplication factor of a downstream instrument
- The step size for varying the frequency with the rotary knob.

The remote commands required to define the settings are described in [Chapter 12.14.3, "SOURCE:FREQUENCY Subsystem"](#), on page 421.

Settings

Frequency.....	61
Offset.....	61
Multiplier.....	61
User Variation.....	62
L Variation Active.....	62
L Variation Step.....	62

Frequency

Sets the RF frequency.

This frequency is output at the RF connector. It does not consider an [Offset](#) or multiplication factor ([Multiplier](#)).

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

Note: Suppressed values in the status bar

For security concerns or certain operating modes, you can hide the frequency and level display in the status bar.

- *********

The display has been disabled for security reasons.

See:

- [Annotation Frequency](#)
- [Annotation Amplitude](#)

- 

The display is disabled when list mode is running, see [Chapter 6, "List and Sweep Mode"](#), on page 112.

Remote command:

[\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\]](#) on page 423

Offset

Sets the frequency offset.

This value represents the frequency shift of a downstream instrument, like for example a mixer.

The "Frequency" value displayed in the status bar is the resulting frequency, as it is at the output of the downstream instrument. The frequency at the R&S SMB100B RF output is not changed.

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

Remote command:

[\[:SOURce<hw>\]:FREQuency:OFFSet](#) on page 425

Multiplier

Sets the multiplication factor for the RF frequency.

This value represents the multiplication factor of a downstream instrument, as for example a multiplier. You can also assign a negative multiplication factor, for example -1.0 to support frequency converters working in the reverse frequency position.

The "Frequency" value displayed in the status bar is the resulting frequency, as it is at the output of the downstream instrument. The frequency at the R&S SMB100B RF output is not changed.

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

Remote command:

[\[:SOURce<hw>\]:FREQuency:MULTiplier](#) on page 424

User Variation

Defines and activates a user-defined step width for varying the RF frequency or RF level with the rotary knob.

If disabled, the step width varies in steps of one unit at the cursor position.

Variation Active ← User Variation

Activates the set user-defined step width.

Remote command:

[:SOURce<hw>] :FREQuency:STEP:MODE on page 426

[:SOURce<hw>] :POWEr:STEP:MODE on page 464

Variation Step ← User Variation

Sets the user-defined step width.

Remote command:


[:SOURce<hw>] :FREQuency:STEP [:INCRe ment] on page 427

[:SOURce<hw>] :POWEr:STEP [:INCRe ment] on page 464

4.4 RF Level Settings


Access:

1. Select "Level" > "RF Level".

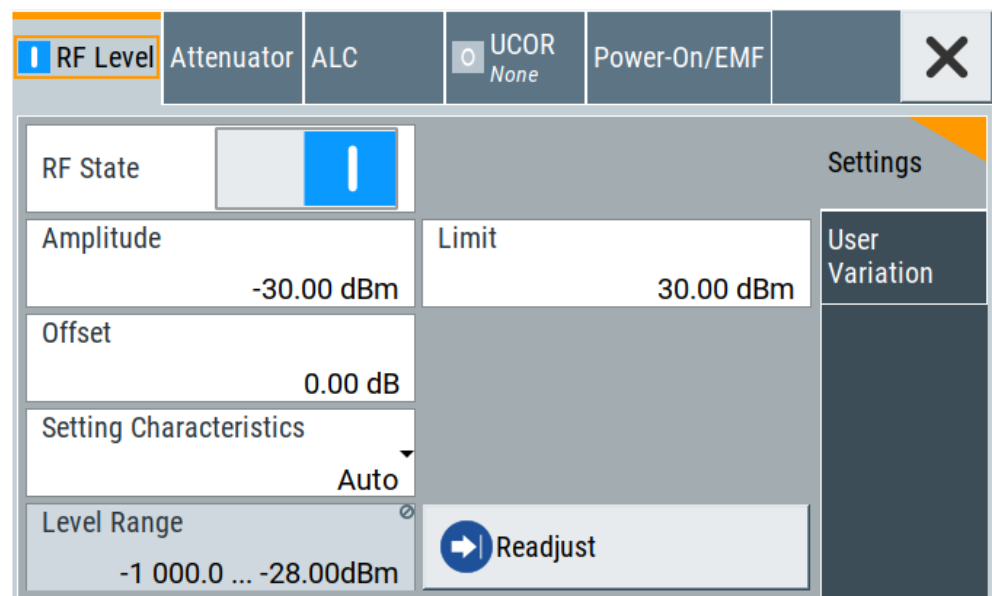


In the "RF Level" dialog, you can configure the offset-free level, the level limit, and the step width for varying the level with the rotary knob.

2. Select "User Variation" to set the step width to be used when .setting the RF level using the rotary knob.

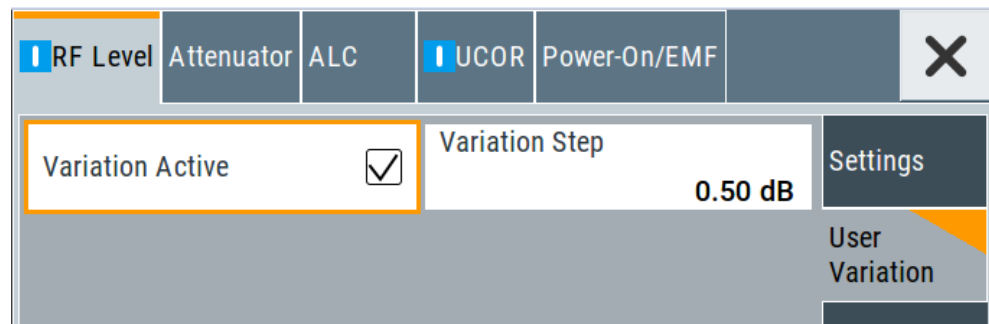

3. Observe the information on the home screen, "Level" tile.

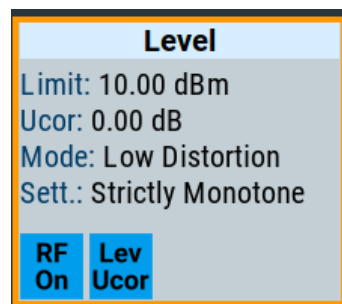

The "Level" tile indicates the level limit, the user correction status and current correction value, current setting characteristics incl. mode.

The remote commands required to define the settings are described in [Chapter 12.14.10, "SOURce:POWer Subsystem"](#), on page 458.

Settings

RF State/RF ON.....	63
Amplitude.....	63
Limit.....	64
Offset.....	64
Setting Characteristics.....	64
Level Range.....	65
Readjust.....	65
User Variation.....	65
L Variation Active.....	66
L Variation Step.....	66

RF State/RF ON

Activates or deactivates the RF output.

Acts as the [RF on/off] key.

Remote command:

:OUTPut<hw> [: STATe] on page 363

Amplitude

Sets the level of the RF signal.

The value is offset-free and corresponds to the level at the RF connector.

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

Note: Suppressed values in the status bar


For security concerns or certain operating modes, you can hide the frequency and level display in the status bar.

- *********

The display has been disabled for security reasons.

See:

- [Annotation Frequency](#)
- [Annotation Amplitude](#)

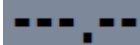- 

The display is disabled when list mode is running, see [Chapter 6, "List and Sweep Mode"](#), on page 112.

Remote command:

[\[:SOURce<hw>\]:POWer:POWer](#) on page 463

Note: The SCPI command [\[:SOURce<hw>\]:POWer\[:LEVel\]\[:IMMediate\]\[:AMPLitude\]](#) sets the level of the "Level" display.

This means, the level containing offset.

Limit

Sets an upper limit for the RF output power.

You can use this value to protect your DUT from damage due to high input power. If you enter an RF level above this value, the instrument limits the output power to this specified value, and generates the warning message:

"Pep value greater than the defined limit." However, the level indication in the status bar is not affected.

The setting is not affected by an instrument preset ([Preset] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

[\[:SOURce<hw>\]:POWer:LIMit\[:AMPLitude\]](#) on page 461

Offset

Sets a level offset.

This value represents the level shift of a downstream instrument, like, for example, an attenuator or an amplifier.

The "Level" value displayed in the status bar is the resulting level, as it is at the output of the downstream instrument. The level at the R&S SMB100B RF output is not changed.

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

Remote command:

[\[:SOURce<hw>\]:POWer\[:LEVel\]\[:IMMediate\]:OFFSet](#) on page 464

Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

"Auto"	<p>Sets the RF output level automatically according to the selected mode.</p> <p>In this mode, the instrument provides the highest dynamic range and fastest setting times, as specified in the data sheet.</p> <p>The RF signal is shortly blanked when the step attenuator is switching.</p>
"Uninterrupted"	<p>Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware specific switching points.</p> <p>This mode reduces the dynamic range of the instrument. The step attenuator is fixed.</p>
"Strictly Monotone"	<p>Executes signal level changes monotonically increasing or decreasing.</p> <p>The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.</p> <p>All electronic switches, which might affect the monotonicity are fixed.</p> <p>The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.</p>
"Constant-VSWR"	<p>Suppresses output impedance variations at the RF output connector, due to changed level settings.</p>
"User"	<p>Indicates that a setting has been modified in the expert mode. The expert mode is a protected function, that requires protection level 2 password.</p>

Remote command:

[\[:SOURce<hw>\]:POWER:LBEHaviour](#) on page 461

Level Range

Shows the interruption-free range of the level that you can use in the currently selected mode.

Remote command:

[\[:SOURce<hw>\]:POWER:RANGE:LOWer?](#) on page 466

[\[:SOURce<hw>\]:POWER:RANGE:UPPer?](#) on page 466

Readjust

Recalculates and adjusts the internal switch positions of the RF chain according to the current level.

Remote command:

[\[:SOURce<hw>\]:POWER:ALC:SONCe](#) on page 460

User Variation

Defines and activates a user-defined step width for varying the RF frequency or RF level with the rotary knob.

If disabled, the step width varies in steps of one unit at the cursor position.

Variation Active ← User Variation

Activates the set user-defined step width.

Remote command:

[:SOURce<hw>] :FREQuency:STEP:MODE on page 426

[:SOURce<hw>] :POWer:STEP:MODE on page 464

Variation Step ← User Variation

Sets the user-defined step width.

Remote command:

[:SOURce<hw>] :FREQuency:STEP [:INCRe ment] on page 427


[:SOURce<hw>] :POWer:STEP [:INCRe ment] on page 464

4.5 RF Phase Settings

The phase in sinusoidal signals defines the initial angle at its origin.

Access:


1. Select "Frequency" > "Phase".

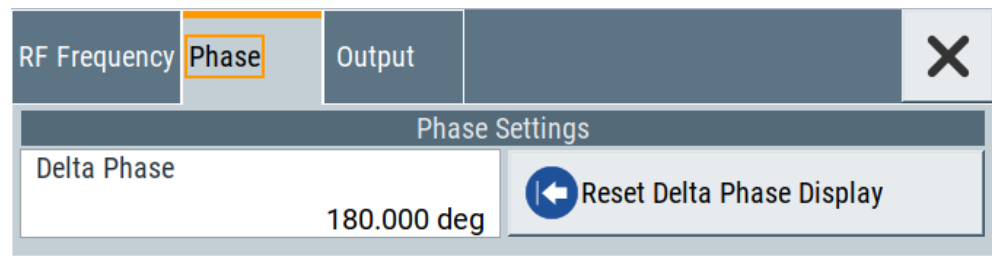

In the "Phase" tab, you can determine the delta phase value and reset the phase to this reference.

2. Observe the information on the home screen, "Frequency" tile.

The "Frequency" tile indicates used reference frequency, current frequency offset and multiplier values, and the delta phase value.

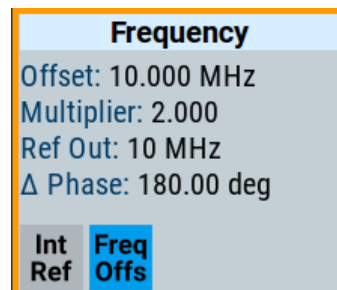

The remote commands required to define the settings are described in [Chapter 12.14.9, "SOURce:PHASe Subsystem"](#), on page 458.

Settings

Delta Phase	67
Reset Delta Phase Display	67

Delta Phase

Sets the phase of the RF signal.

The current phase of the signal is used as the reference.

Remote command:

[\[:SOURce<hw>\]:PHASe](#) on page 458

Reset Delta Phase Display

Adopts the selected "Delta Phase" value as the current value, and resets delta phase to 0 degrees.

Remote command:

[\[:SOURce<hw>\]:PHASe:REFerence](#) on page 458

5 Analog Modulations

The R&S SMB100B supports AM (amplitude modulation), FM (frequency modulation), Φ M (phase modulation (PhiM)), and also PULM (pulse modulation). It generates low frequency signals (LF) as sine, triangle, trapezoidal or square (pulse) waveform, that can be output and further processed by a downstream instrument.

Option: R&S SMBB-K22, enables generation of chirp modulated RF signals.

Option: R&S SMBB-B5, Stereo/RDS-Coder enables generation of stereo-modulated RF signals.

5.1 Required Options

R&S SMB100B base unit equipped with the following options:

- Option frequency (R&S SMBB-B10x)
- Option Stereo/RDS-Coder (R&S SMBB-B5)
- Option pulse modulator (R&S SMBB-K22)
- Option pulse generator (R&S SMBB-K23)
(supports generation of single and double pulse signals)
- Option multi-function generator (R&S SMBB-K24)
- Option pulse train generator (R&S SMBB-K27)
(requires R&S SMBB-K23)
- Option AM/FM/PhiM (R&S SMBB-K720)

For more information, see data sheet.

5.2 Modulation Types and Signal Sources

Radio transmitters do not transmit an audio signal directly. Instead, they modulate the audio signal onto a continuous wave (CW) carrier with much higher frequency.

A CW carrier has a sinusoidal waveform with constant amplitude and constant frequency. Modulating a signal onto the carrier means varying a property of the carrier according to the modulating signal. The three basic modulation types FM, AM and PhiM for example, vary one property of the carrier proportional to the instantaneous amplitude of the modulating signal.

Signal sources

If fully equipped, the R&S SMB100B modulates signals from the following sources:

- **Internal modulation source**
 - *Two LF generators*
Each of the LF generators provides a modulation signal with sine, pulse, triangle or trapezoid shape.

- *Noise generator*
The noise generator supplies white noise with selectable bandwidth and distribution.
- *High-performance pulse generator*
Generates single and double pulse, or pulse train signals.
- **External modulation source**
 - Amplitude, frequency or phase modulation signals are input at the Mod. Ext. connector.
 - Pulse modulation signals, at the Pulse Ext. connector.
 - Stereo modulation signals, at the Stereo L/R and S/P Dif connector.

Signal output

You can perform AM, FM and PhiM with the signal of any of the provided sources. Moreover, you can combine two modulation signals and generate a two-tone signal. Regardless of the signal source, the generated signal can be output for further processing in a downstream instrument.

Current configuration is indicated in the "Analog Modulations > Overview" dialog; the output signal routing can be changed, too.

Input and output connectors

Direction	Modulation	Connector	Required option
Output	Pulse modulation from internal signal Loop through of pulse signal from Pulse Ext.	Pulse Video	R&S SMBB-K22/-K23
	All analog modulations Marks the valid level and frequency	Signal Valid	
	LF generator	LF	
Input	AM, FM, PhiM	Mod. Ext. **)	R&S SMBB-K720
	Stereo modulation from external source	Stereo L/R	R&S SMBB-B5
	Pulse modulation from external source*) Or External trigger or gate signal*)	Pulse Ext.**)	R&S SMBB-K22

- *) External trigger signal and external signal for the pulse modulation cannot be used simultaneously, because these signals are expected at the same connector Pulse Ext.. Signal polarity and impedance are the same for both signals.
- **) The external modulation signal must have a voltage of $U_S = 1\text{ V}$ ($U_{EFF} = 0.707\text{ V}$) to achieve the displayed modulation depth and range.
Note that the input voltage does not exceed 1 V, otherwise modulation distortions can occur.

For more information, see data sheet.

Interactions and characteristics

- FM and PhiM modulations exclude each other and cannot be performed simultaneously.
- In sweep mode, LF frequency sweep is possible.
- The settings of the modulation signal affect all analog modulations that use an internal modulation source.
- You can feed an external LF signal in each of the two paths.

For more information, see data sheet.

5.3 Activating Analog Modulations

► Use one of the following:

- Select "Modulation > Amplitude Modulation/Frequency Modulation/Phase Modulation > State > ON".
- Select "Modulation > MOD ON".
- Press the [Mod on/off] key.

[Mod on/off]

Activate one or more analog modulations and press the [Mod on/off] key to toggle the state of them all.

Pressing the key again restores the status that was active before the last switch-off.

Remote command:

`[:SOURce<hw>] :MODulation [:ALL] [:STATe]` on page 380

5.4 Modulation Settings

Access:

► Select "Modulation" > "Modulation Sources".

The "Modulation" dialog contains all functions and settings to configure the analog modulations, the LF signal sources for performing a modulation, and the LF signal output.

The remote commands required to define these settings are described in:


- [Chapter 12.14.1.2, "SOURce:AM Subsystem"](#), on page 380
- [Chapter 12.14.1.3, "SOURce:FM Subsystem"](#), on page 385
- [Chapter 12.14.1.4, "SOURce:PM Subsystem"](#), on page 390
- [Chapter 12.14.1.5, "SOURce:PULM Subsystem"](#), on page 394
- [Chapter 12.14.1.6, "SOURce:STEReo Subsystem"](#), on page 405
- [Chapter 12.14.5, "SOURce:LFOutput Subsystem"](#), on page 428

5.4.1 Pulse Modulation

Option: see [Chapter 5.1, "Required Options"](#), on page 68.

Access:

- ▶ Select "Modulation" > "Pulse Modulation".

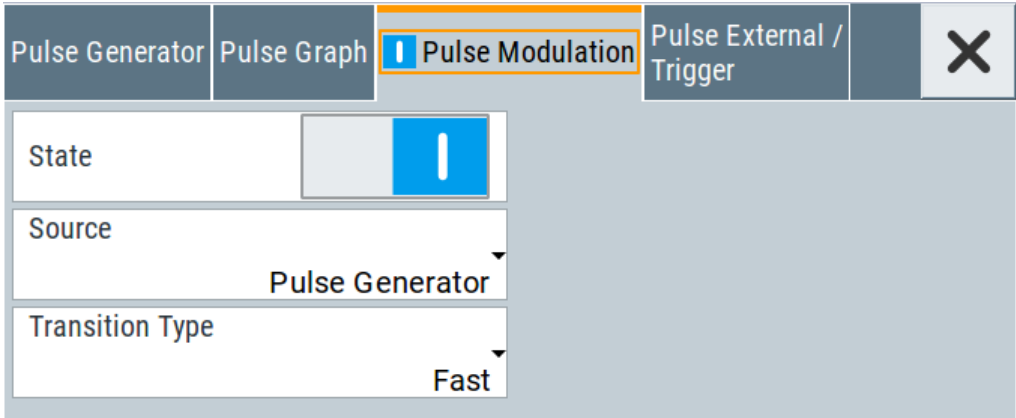

The "Pulse Modulation" dialog contains all parameters required to configure the pulse modulator and the pulse generator. It also displays the pulse signal graphically.

For an overview of the supported signals sources and related connectors, see [Chapter 5.2, "Modulation Types and Signal Sources"](#), on page 68.

The remote commands required to define these settings are described in [Chapter 12.14.1.5, "SOURce:PULM Subsystem"](#), on page 394.

Settings:

State	71
Source	71
Transition Type	72

State

Activates pulse modulation and triggers the following automatic settings:

- Pulse generator is activated.
The signal is output at the Pulse Video connector.
To deactivate the signal output, set "Pulse Generator" > [Pulse Output State](#) > "Off".

Remote command:

[\[:SOURce<hw>\]:PULM:STATe](#) on page 398

Source

Selects between the internal "Pulse Generator" or an "External" pulse signal for the modulation.

"Pulse Generator"

Selects the internal generator.

See [Pulse Generator](#).

"External"

Modulation source is fed to the input connector.

See ["Signal sources"](#) on page 68.

Remote command:

`[:SOURce<hw>] :PULM:SOURce` on page 398

Transition Type

Selects between "Fast" or "Smoothed" slew rate (slope).

"Fast"

Enables fast transitions with shortest rise and fall times.

"Smoothed"

Flattens the slew rate, resulting in longer rise / fall times. Use this mode if you are working with devices that are sensitive to steep slopes.

Remote command:

`[:SOURce<hw>] :PULM:TTYPe` on page 399

5.4.2 FM, PhiM and AM Modulation Settings

Option: R&S SMBB-K720

Access:

- Select "Modulation" > "Amplitude Modulation/Frequency Modulation/Phase Modulation".

Sources		<input checked="" type="radio"/> FM	<input type="radio"/> ΦM	<input checked="" type="radio"/> AM	<input type="radio"/> Output	Overview	✕
Path 1		Path 2					
State	<input checked="" type="checkbox"/>	State	<input checked="" type="checkbox"/>				
Source	LF Generator 1	Source	External 1				
Deviation	1.000 00 kHz	Deviation	1.000 00 kHz				
Deviation Mode	Fixed Ratio	Ratio Path 2 / Path 1		100.00 %			
Mode	High Bandwidth						

The "FM", "ΦM" and "AM" tabs contain the parameters per modulation type.

Source

State.....	73
Source.....	73
FM settings.....	74
L Deviation.....	74
L Deviation Mode.....	74
L Total Deviation.....	74
L Ratio Path2/Path1.....	74
L Mode.....	75
PhiM settings.....	75
L Deviation.....	75
L Deviation Mode.....	75
L Total Deviation.....	76
L Ratio Path2/Path1.....	76
L Mode.....	76
AM settings.....	76
L Depth.....	76
L Sensitivity.....	77
L Deviation Mode.....	77
L Total Depth.....	77
L Ratio Path2/Path1.....	77

State

Activates a modulation.

Note: Some modulations exclude each other and cannot be performed simultaneously. For more information, see data sheet.

Remote command:

[: SOURce<hw>] : AM<ch> : STATe on page 382

[: SOURce<hw>] : FM<ch> : STATe on page 387

[: SOURce<hw>] : PM<ch> : STATe on page 391

Source

Selects the LF signal source.

You can vary the signal sources for each of the modulations.

"LF Generator 1/2"

Selects one or both of the internally generated LF signals.

See [Chapter 5.4.7.1, "Source > LF Generator Settings"](#), on page 99.

"External"

Selects an externally supplied LF signal.

"Noise Generator"

Selects the internally generated noise signal.

See [Chapter 5.4.7.3, "Source > Noise Generator Settings"](#), on page 104.

Remote command:

[:SOURce<hw>] :AM<ch> :SOURce on page 383

[:SOURce<hw>] :FM<ch> :SOURce on page 387

[:SOURce<hw>] :PM<ch> :SOURce on page 392

FM settings

The following settings are dedicated to FM.

Deviation ← FM settings

Sets the frequency modulation deviation in Hz.

The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).

Maximal possible deviation is selected automatically, if one of the following applies:

- The selected deviation is too high for the particular frequency
- The selected frequency is outside of the range where deviation is possible.

A warning message indicates this situation, too.

Remote command:

[:SOURce<hw>] :FM<ch> [:DEViation] on page 387

Deviation Mode ← FM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The total deviation is the sum of both paths. When the sum is exceeded, the R&S SMB100B reports a settings conflict, but does not change the settings.

- | | |
|---------------|--|
| "Uncoupled" | Enables you to adjust the deviation for each path independently. |
| "Fixed Total" | Couples the deviation of both paths in per Hz. If you change the deviation of any path, the R&S SMB100B automatically adjusts the value of the other path. The sum always results in the set Total Deviation . |
| "Fixed Ratio" | Couples the deviation ratio of both paths. If you change the deviation of any path, the R&S SMB100B adjusts the value of the other path. |

Remote command:

[:SOURce<hw>] :FM:DEViation:MODE on page 388

Total Deviation ← FM settings

Sets the sum of the signal deviation for path 1 and path 2 in Hz when using combined sources in [Deviation Mode > Fixed Total](#).

[Deviation](#) of both paths always sum up to the value of the total deviation.

Behavior when changing any depth settings:

- Changing the total deviation adjusts the deviation of both paths proportionally.
- Changing the deviation of one path adjusts the deviation of the other path. The sum always results in the set total deviation.

Remote command:

[:SOURce<hw>] :FM:DEViation:SUM on page 388

Ratio Path2/Path1 ← FM settings

Sets the deviation ratio (path2 to path1) in percent.

Example:

If the deviation in path1 is 10 kHz and the ratio is 50%, the deviation in path 2 is automatically set to 5 kHz.

Remote command:

`[:SOURce<hw>] :FM:RATio` on page 389

Mode ← FM settings

Selects the mode of the frequency modulation.

"High Bandwidth"

The maximum range for modulation bandwidth is available.

"Low Noise"

Phase modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced (see data sheet).

Remote command:

`[:SOURce<hw>] :FM:MODE` on page 389

PhiM settings

The following settings are dedicated to PhiM.

Deviation ← PhiM settings

Sets the phase modulation deviation in radians or degrees.

The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).

Maximal possible deviation is selected automatically, if one of the following applies:

- The selected deviation is too high for the particular frequency
- The selected frequency is outside of the range where deviation is possible.

A warning message indicates this situation, too.

Remote command:

`[:SOURce] :PM<ch> [:DEViation]` on page 394

Deviation Mode ← PhiM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The deviation sum 2 rad at a maximum. When the sum is exceeded, the R&S SMB100B adjusts the settings automatically.

"Uncoupled" Enables you to adjust the deviation for each path independently.

"Fixed Total" Couples the deviation of both paths. If you change the deviation of any path, the R&S SMB100B automatically adjusts the value of the other path. The sum always results in the set [Total Deviation](#).

"Fixed Ratio" Couples the deviation ratio of both paths. If you change the deviation of any path, the R&S SMB100B adjusts the value of the other path.

Remote command:

`[:SOURce<hw>] :PM:DEViation:MODE` on page 393

Total Deviation ← PhiM settings

In **Deviation Mode = Fixed Total**, sets the sum of the signal deviation for path 1 and path 2.

Deviation of both paths always sum up to the value of the total deviation.

Behavior when changing any depth settings:

- Changing the total deviation adjusts the deviations of both paths proportionally.
- Changing the deviation of one path adjusts the deviation of the other path. The sum always results in the set total deviation.

Remote command:

`[:SOURce<hw>] :PM:DEVIation:SUM` on page 393

Ratio Path2/Path1 ← PhiM settings

Sets the deviation ratio (path2 to path1) in per cent.

Example:

If the deviation in path1 is 10 rad and the ratio is 50%, the deviation in path 2 is automatically set to 5 rad.

Remote command:

`[:SOURce<hw>] :PM:RATio` on page 393

Mode ← PhiM settings

Selects the mode of the phase modulation.

"High Bandwidth"

The maximum range for modulation bandwidth and PhiM deviation is available.

However, phase noise increases at low frequencies, and the range of PhiM deviation is limited. This mode is suitable if you process high frequencies.

"High Deviation"

The maximum range for PhiM deviation is available.

Phase noise is improved for low frequencies compared to the default mode. The range for modulation frequency is limited (see data sheet). This mode is suitable for low modulation frequencies and/or high PhiM deviation.

"Low Noise"

Frequency modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced (see data sheet).

Remote command:

`[:SOURce<hw>] :PM:MODE` on page 392

AM settings

The following settings are dedicated to AM.

Depth ← AM settings

Determines the depth of the modulation signal in percent.

The depth is limited by the maximum peak envelope power (PEP).

Remote command:

`[:SOURce<hw>] :AM<ch> [:DEPTh]` on page 383

Sensitivity ← AM settings

Sets the input sensitivity of the external modulation signal.

Remote command:

`[:SOURce<hw>] :AM<ch>:SENSitivity` on page 385

Deviation Mode ← AM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The deviation sum of both paths is 100% in total. When the sum is exceeded, the R&S SMB100B reports a settings conflict, but does not change the settings.

- | | |
|---------------|--|
| "Uncoupled" | Enables you to adjust the deviation depth for each path independently. |
| "Fixed Total" | Couples the deviation depth of both paths in per cent. If you change the depth of any path, the R&S SMB100B automatically adjusts the value of the other path. The sum always results in the set Total Depth . |
| "Fixed Ratio" | Couples the deviation ratio of both paths. If you change the depth of any path, the R&S SMB100B adjusts the value of the other path. |

Remote command:

`[:SOURce<hw>] :AM:DEVIation:MODE` on page 384

Total Depth ← AM settings

Sets the sum of the signal [Depth](#) for path 1 and path 2 in per cent when using combined sources and [Deviation Mode > Fixed Total](#).

Using external LF signals, the R&S SMB100B indicates the [Sensitivity](#) per Volts for the input signal.

Provided both signal paths are turned on, the depth of both paths always sum up to the value of the total depth.

Behavior when changing any depth settings:

- Changing the total depth adjusts the depths of both paths proportionally.
- Changing the depth of one path adjusts the depth of the other path. The sum always results in the set total depth.

Remote command:

`[:SOURce<hw>] :AM:DEPTh:SUM` on page 384

Ratio Path2/Path1 ← AM settings

Sets the deviation ratio of the signal depth for path 2 to path 1 in per cent when using combined sources.

Using external LF signals, the R&S SMB100B indicates the [Sensitivity](#) per Volts for the input signal.

Remote command:

`[:SOURce<hw>] :AM:RATio` on page 384

5.4.3 Stereo Modulation

Option: see [Chapter 5.1, "Required Options"](#), on page 68.

Access:

- Select "Modulation" > "Stereo Modulation".

Option R&S SMBB-B5, Stereo/RDS Coder enables generation of stereo-modulated RF signals according to the standard. Beside the MPX (FM stereo multiplex) signal, also the radio traffic service ARI (Automotive Radio Information) and Radio Data System (RDS) are supported by the option.

Select an internal or external signal source. The analog [Stereo L/R] connections and the digital [S/P Dif] connection supply the signal of an external source. The LF generator acts as internal signal source.

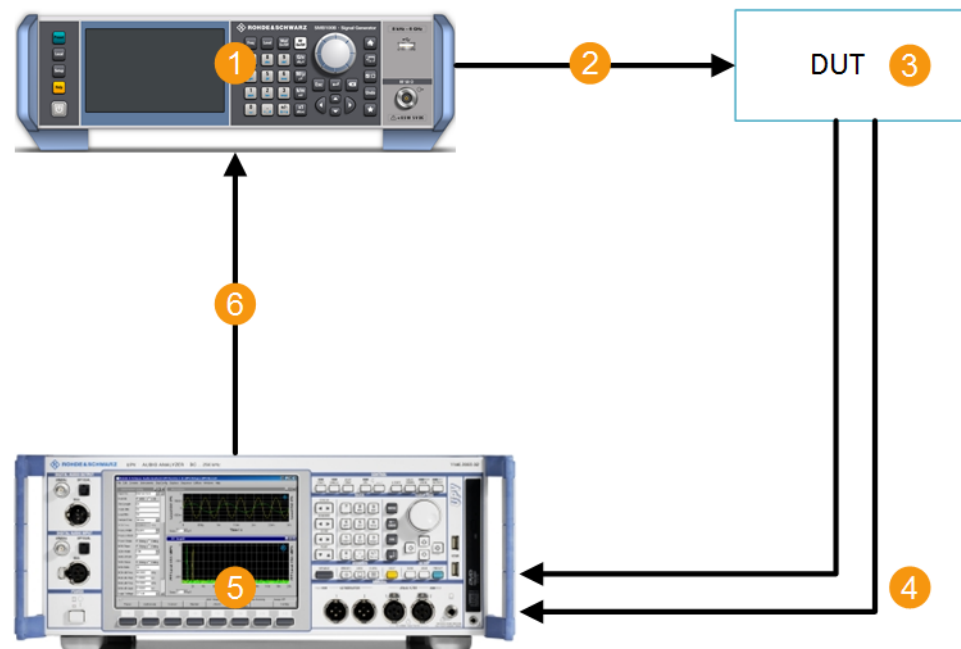


Figure 5-1: Example setup

- 1 = R&S SMB100B with Stereo/RDS Coder R&S SMBB-B5
- 2 = RF modulated test signal including ARI and RDS
- 3 = FM stereo tuner
- 4 = Analog audio signals
- 5 = Signal generation and analysis, for example with R&S®UPV Audio Analyzer
- 6 = Analog or digital audio signals

• General Settings	79
• Pilot Tone	81
• ARI	82
• RDS	84

5.4.3.1 General Settings

Access:

- Select "Modulation" > "Stereo Modulation".

The "General" tab contains the settings for creating a stereo modulation signal.

General		Pilot Tone	ARI	RDS			X		
State		<div><div></div><div>I</div></div>							
FM Deviation				40.000 kHz				Mode	Mono Left
Audio Source				LF Gen					
LF Gen Frequency				1.000 00 kHz				LFGen Shape	Pulse
Preemphasis				50 µs					

Settings

State.....	79
FM Deviation.....	79
Mode.....	80
Audio Source.....	80
LF Gen Frequency.....	80
LF Gen Shape.....	80
External R/L Impedance.....	80
Preemphasis.....	81
Max Modulation Frequency.....	81

State

Activates stereo modulation.

Remote command:

[:SOURce] :STEReo:STATe on page 407

FM Deviation

Sets the MPX (FM stereo multiplex) deviation.

Remote command:

[:SOURce] :STEReo[:DEViation] on page 407

Mode

Selects the mode for the audio signal.

- "Mono Left" A mono signal containing the left channel is generated/fed in.
- "Mono Right" A mono signal containing the right channel is generated/fed in.
- "Stereo R = L" A stereo signal with right and left channel is generated/fed in. The channels have the same frequency and phase.
- "Stereo R = -L" The signal on the left external audio input is used for both channels. The right channel is inverted.
- "Stereo R != L" (External source only)
A stereo signal containing different, independent right and left channels is fed in.

Remote command:

[\[:SOURCE\]:STEReo:AUDio:MODE](#) on page 408

Audio Source

Selects the source for the audio signal.

- "Off" No audio signal is provided, ARI and RDS signal can be generated separately.
- "Ext L,R" The external audio stereo signal is feed in via the analog [L] and [R] inputs.
- "Ext S/P Diff" The external audio signal is feed in via the digital [S/P Dif] input.
- "LF Gen" The audio stereo signal is generated by the internal LF1 generator.

Remote command:

[\[:SOURCE\]:STEReo:SOURce](#) on page 408

LF Gen Frequency

If "Audio Source = LF Gen", sets the frequency of the LF generator signal.

This setting affects all analog modulations which use the LF1 generator as the internal modulation source.

Remote command:

[\[:SOURCE\]:LFOutput<ch>:FREQuency](#) on page 431

LF Gen Shape

If "Audio Source = LF Gen", selects the shape of the LF generator signal.

This setting affects all analog modulations which use the LF1 generator as the internal modulation source.

Remote command:

[\[:SOURCE<hw>\]:LFOutput<ch>:SHAPE](#) on page 435

External R/L Impedance

(External analog audio signal input only)

Selects the input impedance for the external analog audio signal inputs [L] and [R].

Remote command:

[\[:SOURCE\]:STEReo:EXTErnal:IMPedance](#) on page 409

Preemphasis

Activates and sets the preemphasis used for signal generation.

Preemphasis increases the high-frequency portions of the signal in the level before the FM modulator is reached.

Remote command:

[:SOURce] :STEReo:AUDio:PREemphasis:STATe on page 409

[:SOURce] :STEReo:AUDio:PREemphasis on page 409

Max Modulation Frequency

Sets the maximum modulation frequency.

This parameter is valid/required only when preemphasis has been activated and an external modulation source is used.

For sinewave signals with full modulation, preemphasis can lead to an internal overload of the modulator. The MMF parameter reduces the internal full modulation, so that sinewave signals with nominal voltage can be transmitted with low distortion, even with active preemphasis up to the set frequency. This procedure reduces the S/N ratio at the set MMF, based on the level increase of the preemphasis.

The default value of this parameter works for normal modulation signals, such as voice or music, because the amplitude of the high-frequency portions of these signals normally decreases substantially.

Remote command:

[:SOURce] :STEReo:MMF on page 409

5.4.3.2 Pilot Tone

Access:

- Select "Modulation" > "Stereo Modulation > Pilot Tone".

General	Pilot Tone	ARI	RDS
<div>Pilot State <input checked="" type="checkbox"/></div> <div>Pilot Deviation 6.750 kHz</div> <div>Pilot Phase 0.0 deg</div>			

The pilot tone supports the transmission of a signal to the receiver through adding a constant single-frequency signal. The signal receiver accepts the incoming signal only after the pilot tone is confirmed.

Settings

Pilot State.....	82
Pilot Deviation.....	82
Pilot Phase.....	82

Pilot State

Activates the pilot tone generation.

Remote command:
[\[:SOURce\]:STEReo:PILot:STATe](#) on page 410

Pilot Deviation

Sets the deviation of the pilot tone.

Remote command:
[\[:SOURce\]:STEReo:PILot\[:DEViation\]](#) on page 410

Pilot Phase

Sets the phase of the pilot tone in relation to the 38 kHz carrier signal of the receiver. For a correct demodulation, the pilot tone must be in phase with the 38 kHz carrier.

Remote command:
[\[:SOURce\]:STEReo:PILot:PHASe](#) on page 410

5.4.3.3 ARI

Access:

- Select "Modulation" > "Stereo Modulation > ARI".

GeneralPilot ToneARI

RDS

X

ARI State

ARI Deviation

3.500 kHz

ARI Identification

BK+DK

ARI BK

B

ARI (Automotive Radio Information) indicates the presence of traffic information in FM radio broadcasts.

Settings

ARI State	83
ARI Deviation	83
ARI Identification	83
ARI BK	83

ARI State

Activates the ARI signal generation. ARI signals can be generated simultaneously with MPX (FM stereo multiplex) and RDS signals.

Remote command:

[\[:SOURCE\]:STEReo:ARI:STATe](#) on page 410

ARI Deviation

Sets the frequency deviation of the ARI subcarrier signal.

Remote command:

[\[:SOURCE\]:STEReo:ARI\[:DEViation\]](#) on page 411

ARI Identification

Selects the generated identifiers of the ARI signal.

DK and BK are abbreviations of the German words Durchsagekennung and Bereichskennung.

"Off"	Only the 57 kHz subcarrier is generated. It marks the stations which broadcast traffic programs and enables the receiver to recognize the frequency as being ARI-capable.
"DK"	The message identification is generated in addition (low-frequency 30% AM). It signalizes that a traffic message is broadcasted.
"BK"	The area identification is generated in addition (60% AM). This code is used to identify the geographical region covered by the radio station. The specific code is selected below.
"DK+BK"	The area and message identification are generated in addition to the subcarrier.

Remote command:

[\[:SOURCE\]:STEReo:ARI:TYPE:STATe](#) on page 411

[\[:SOURCE\]:STEReo:ARI:TYPE](#) on page 411

ARI BK

Selects the specific area identification (BK) code of the ARI signal. The six letters (six different frequencies) identify a specific region in each country.

Remote command:

[\[:SOURCE\]:STEReo:ARI:BK\[:CODE\]](#) on page 412

5.4.3.4 RDS

Access:

► Select "Modulation" > "Stereo Modulation > RDS".

GeneralPilot ToneARI**RDS**

RDS State

RDS Deviation

2.000 kHz

RDS Data Set

DS2

Program Service Name

Program Identification

Traffic Program

Traffic Announcement

The RDS (Radio Data System) is configured in the RDS settings section. RDS is a communication protocol standard from the European Broadcasting Union for sending digital information embedded in conventional FM radio broadcasts. The RDS system standardizes several types of transmitted information, including time, track/artist info and station identification.

Settings

RDS State.....	84
RDS Deviation.....	84
RDS Data Set.....	85
Program Service Name.....	85
Program Identification.....	85
Traffic Program.....	85
Traffic Announcement.....	86

RDS State

Activates the RDS signal generation. RDS signals can be generated simultaneously with MPX (FM stereo multiplex) and ARI signals.

Remote command:

[:SOURCE] :STEReo:RDS:STATe on page 412

RDS Deviation

Sets the deviation of the RDS subcarrier.

User Manual 1178.3711.02 — 07

84

Remote command:

[\[:SOURce\]:STEReo:RDS\[:DEVIation\]](#) on page 412

RDS Data Set

Selects the data set used in the RDS signal. Five data sets are provided on the instrument. The values of the data sets can be defined via remote control (command [SOURce:STEReo:DIRection](#)).

Each of these data sets contains predefined values for:

- PI (program identification, identifies the broadcast station)
- PS or scrolling PS (program service name, represents the station identity name)
- TP (traffic program, mark stations with regular traffic programs)
- TA (traffic announcement, marks the start of a traffic program)
- PTY (program type, predefined genres of broadcasting programs, e.g. news)
- PTYN (program type name)
- DI (decoder information)
- MS (music/speech)
- CT (clock time, used for synchronization)

The following values are empty:

- RT (radio text, two text blocks with 64 symbols each)
- AF (alternative frequencies, maximum of five lists with 25 frequencies each, enables the receiver to retune to a different frequency providing the same station when the first signal becomes too weak)
- TMC (traffic message channel)
- EON (enhanced other networks, eight PS with five EON AF lists each, enables the receiver to tune into these stations automatically if traffic programs are broadcasted)

The program identification and the program service name of the selected data set are indicated in the menu.

Remote command:

[\[:SOURce\]:STEReo:RDS:DATaset](#) on page 413

Program Service Name

Indicates the RDS program service name.

Remote command:

[\[:SOURce\]:STEReo:DIRection](#) on page 407

Program Identification

Indicates the RDS program identification.

Remote command:

[\[:SOURce\]:STEReo:DIRection](#) on page 407

Traffic Program

Activates the RDS traffic program (TP function). The receiver can recognize a frequency as being capable of traffic information only if the TP function is active.

Remote command:

[\[:SOURce\]:STEReo:RDS:TRAFFic:PROGram\[:STATe\]](#) on page 413


Traffic Announcement
 Activates the RDS traffic announcement (TA function). If activated, the receiver switches from the current status, e.g. playing a CD, to the receive mode and enables the broadcast of a traffic announcement. The TP state has to be on.
 Remote command:
 [:SOURce]:STEReo:RDS:TRAFfic:ANNouncement[:STATe] on page 413

5.4.4 Pulse Generator

Option: see [Chapter 5.1, "Required Options"](#), on page 68.

Access:

- Select "Modulation" > "Pulse Modulation > Pulse Generator".

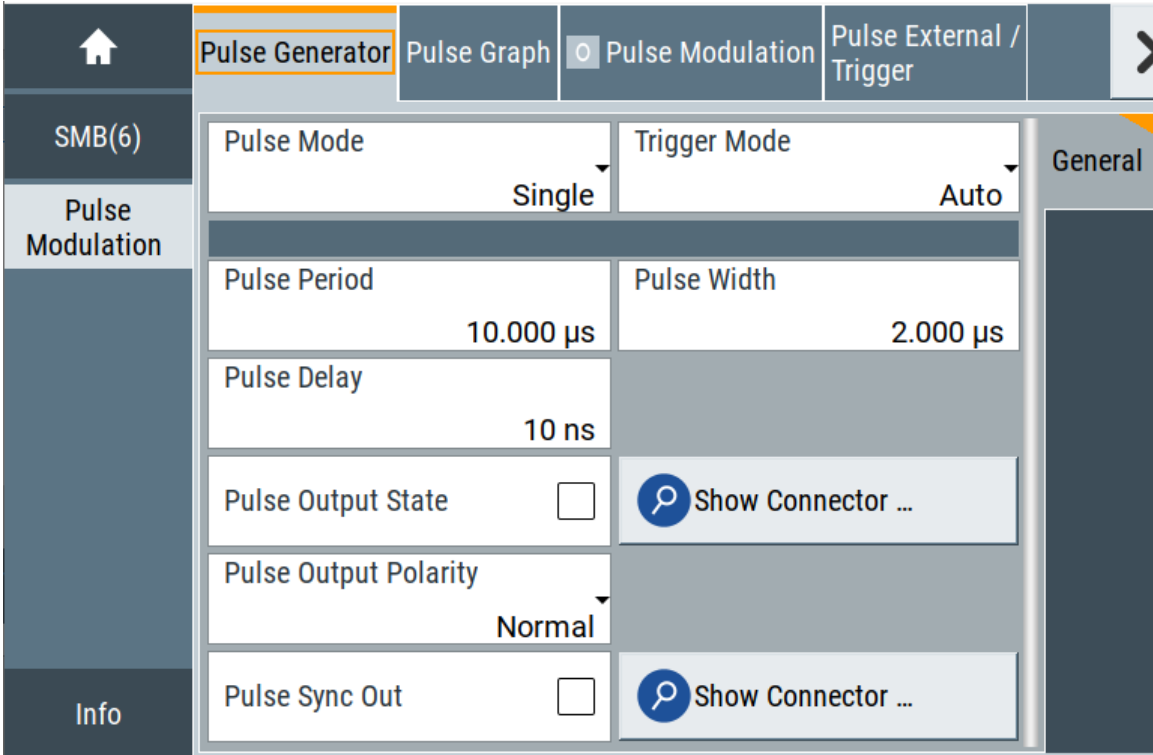

The "Pulse Generator" tab contains the settings for creating the pulse modulation signal internally.

- [Pulse Generator > General Settings](#).....87
- [Pulse Generator > Pulse Train Settings](#).....90
- [Import/Export List Files](#)..... 94

5.4.4.1 Pulse Generator > General Settings

Access:

- Select "Modulation" > "Pulse Modulation > Pulse Generator".


Settings

Pulse Mode.....	87
Trigger Mode.....	88
Pulse Period.....	89
Pulse Width.....	89
Double Pulse Width.....	89
Pulse Delay.....	89
Double Pulse Delay.....	89
Pulse Output State.....	89
Show Connector.....	90
Pulse Output Polarity.....	90
Execute Single Trigger.....	90
Pulse Sync Out.....	90

Pulse Mode

Sets the operating mode of the pulse generator. Depending on the selection, the instrument displays the associated parameters.


"Single" Generates a single pulse in one pulse period.

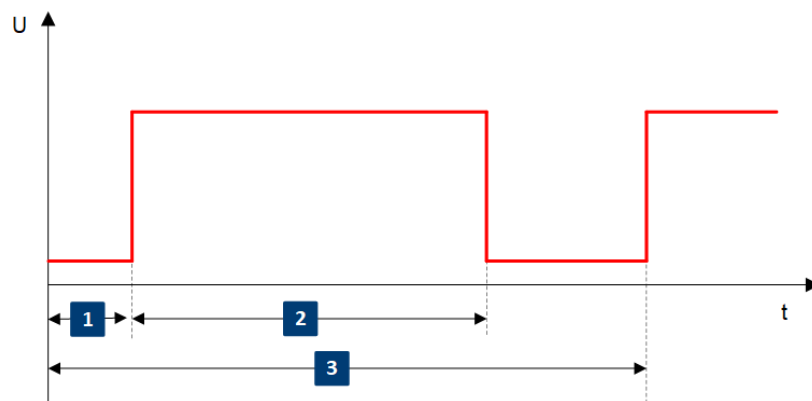

1 = Pulse delay
2 = Pulse width
3 = Pulse period

"Double"

Generates two pulses in one pulse period.

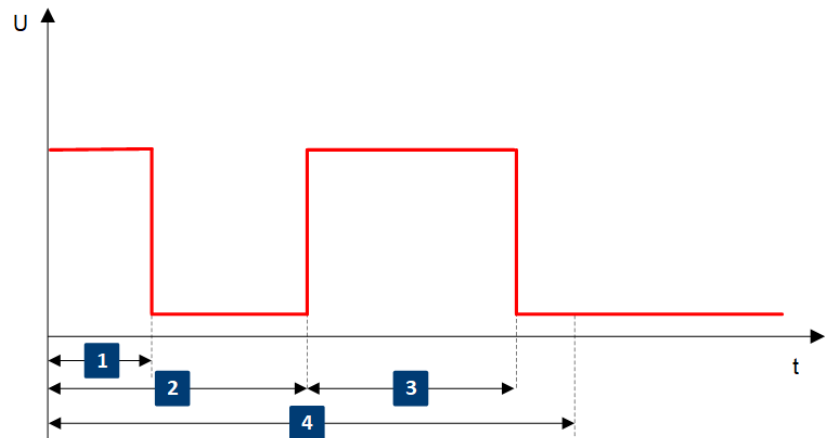


- 1 = Pulse width
- 2 = Double pulse delay
- 3 = Double pulse width
- 4 = Pulse period

"Train"

Option: R&S SMBB-K27

Generates a user-defined pulse train.

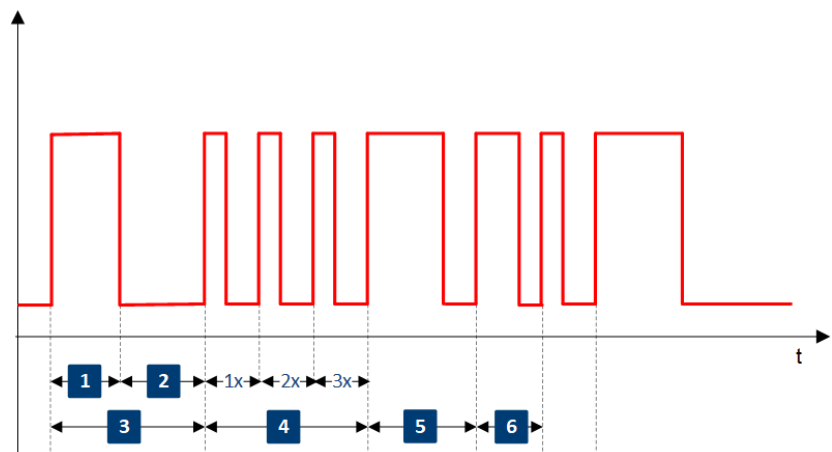

- 1 = 1st pulse: On-time
- 2 = 1st pulse: Off-time
- 3 = 1st pulse: pulse period
- 4 = 2nd pulse: repeated 3 times
- 5 = 3rd pulse
- 6 = 4th pulse

See [Chapter 5.4.4.2, "Pulse Generator > Pulse Train Settings"](#), on page 90.

Remote command:

[:SOURce<hw>] :PULM:MODE on page 396

Trigger Mode

Selects between continuous triggering or triggering initiated by a trigger event from an external signal.

See also ["Input and output connectors"](#) on page 69.

"Auto"	Generates the internal modulation signal continuously.
"Single"	The pulse generator is triggered by an internal trigger event, initiated with Execute Single Trigger . The pulse signal is generated once.
"Ext Single"	Generates a single pulse signal, triggered by an external signal.
"Ext Triggered"	Generates the pulse signal each time an external trigger event occurs.
"Ext Gated"	Generates the signal triggered by an external gate signal.

Remote command:

[\[:SOURce<hw>\]:PULM:TRIGger:MODE](#) on page 396

Pulse Period

Sets the repetition rate of the generated pulse signal.

Remote command:

[\[:SOURce<hw>\]:PULM:PERiod](#) on page 397

Pulse Width

Sets the pulse duration of the generated pulse signal.

Note: The pulse width must be at least 20 ns less than the set pulse period.

Remote command:

[\[:SOURce<hw>\]:PULM:WIDTh](#) on page 397

Double Pulse Width

Sets the width of the second pulse.

Remote command:

[\[:SOURce<hw>\]:PULM:DOUBle:WIDTh](#) on page 398

Pulse Delay

Sets the pulse delay. The pulse delay determines the time that elapses after a trigger event before pulse modulation starts. The pulse delay is not effective for double pulse generation.

Remote command:

[\[:SOURce<hw>\]:PULM:DELaY](#) on page 397

Double Pulse Delay

Sets the delay from the start of the first pulse to the start of the second pulse.

Remote command:

[\[:SOURce<hw>\]:PULM:DOUBle:DELaY](#) on page 398

Pulse Output State

Activates the output of the pulse modulation signal.

Remote command:

[\[:SOURce<hw>\]:PGENerator:OUTPut\[:STATe\]](#) on page 457

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

Pulse Output Polarity

Sets the polarity of the pulse output signal.

Remote command:

`[:SOURce<hw>] :PGENerator:OUTPut:POLarity` on page 457

Execute Single Trigger

If "Trigger Mode = Single", initiates a single pulse sequence manually.

Remote command:

`[:SOURce] :PULM [:INTernal] [:TRain] :TRIGger:IMMediate` on page 397

Pulse Sync Out

Assigns the pulse synchronization signal to the [Signal Valid] connector at the rear panel.

"checked" Sets the validity of the RF signal at the output:

- **high:** while the signal settles.
- **low:** when it is stable (valid).

"cleared" Generates a single pulse at the beginning of a pulse sequence, e.g. to synchronize pulse modulation.

Remote command:


`[:SOURce<hw>] :PULM:OUTPut:SYNC [:STATe]` on page 399

5.4.4.2 Pulse Generator > Pulse Train Settings

Option: see [Chapter 5.1, "Required Options"](#), on page 68.

Access:

1. Select "Modulation" > "Pulse Modulation > Pulse Generator" > **"Pulse Mode = Train"**.

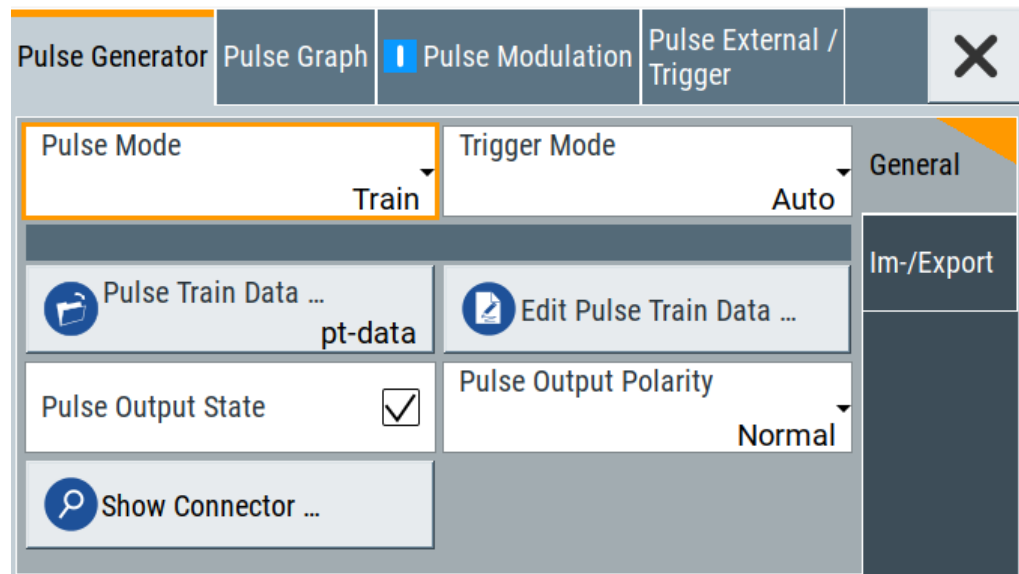

2. Select "Pulse Train Data".
3. Select an existing file or select "New" to create one.
4. Define the filename.
Select "Edit Pulse Train Data", if the file is empty or to control and change the values.
5. In the "Edit Pulse Train Data" dialog, enter the pulse on/off times and pulse repetition values.
6. Select "Save".

A pulse train is a sequence of pulses with user-defined repetition, and pulse on and off times. Once defined, pulse train settings can be saved in a file. The filename is user-definable; the file extension (*.pulstrn) is assigned automatically. When a file is selected, the filename is indicated.

Possible ways to configure a pulse train

You can configure a pulse train in the following ways:

- **Internally**
 - Use the built-in editor table editor, see in the "Pulse Generator > Pulse Train" dialog.
Once defined, pulse train settings can be saved in a file. For example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
The filename is user-definable; the file extension is *.pulstrn.
 - Using the corresponding remote-control commands.
Note that you have to create a pulse train file first.
- **Externally**

Create a pulse train sequence as a CSV file with Microsoft Excel, with a Notepad or a similar tool, save it with the predefined extension. Transfer the file to and load it into the instrument.

Pulse train ASCII file format

Files describing pulse trains are simple files in text or comma-separated value (CSV) file format. The filename is user-definable; the file extension is *.csv or *.txt.

The file contains a list of pulse definition values, one row per pulse; a new line indicator separates the pulses. Pulses are defined with their pulse on time, pulse off time given in us and number of repetitions.

Example: Pulse train file content (*.txt file)

```
0.0001,0.0005,2
0.00025,0.0005,1
0.0001,0.0003,3
```

For file handling, use the standard functions in the "File Manager", see [Chapter 9.8, "Using the File Manager"](#), on page 209.

Settings

Pulse Train Data.....	92
Edit Pulse Train Data.....	92
Data handling keys.....	93
L Go To.....	93
L Edit.....	93
L Save As/Save.....	93
Fill.....	93

Pulse Train Data

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

Pulse train files are files with predefined file extension *.pulstrn. When a file is selected, the dialog indicates the filename.

You can create the file internally in the table editor or externally.

- To select an existing file, select "Select List > navigate to the file *.pulstrn > Select"
- Use the general editor function to create internally new file or to edit an existing one.
- Use the standard file manager function to load externally created files to the instrument.

Remote command:

[:SOURce<hw>] :PULM:TRAI:n:CATalog? on page 401

[:SOURce<hw>] :PULM:TRAI:n:SElect on page 403

[:SOURce<hw>] :PULM:TRAI:n:DElete on page 401

Edit Pulse Train Data

Accesses the build-in table editor to define a new pulse train file or edit an existing one.

"On-Time, μ s/Off-Time, μ s"

Sets the pulse on and pulse off time.

"Count"

Sets the number of repetitions of an "On-/ Off-Time" value pair.

Pulses with "Count = 0" are ignored.

Use this method to skip value pairs temporarily, without deleting them from the table.

Remote command:

[:SOURce<hw>] :PULM:TRAI:n:ONTime on page 402

[:SOURce<hw>] :PULM:TRAI:n:OFFTime on page 402

[:SOURce<hw>] :PULM:TRAI:n:REPetition on page 402

[:SOURce<hw>] :PULM:TRAI:n:DELeTe on page 401

Data handling keys

Standard functions for file and data handling.



Note: Save a list only after filling both columns (frequency and level), otherwise the entries are lost.

Go To ← Data handling keys

Selects a row for editing.

Edit ← Data handling keys

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling.

See "Fill..." on page 93.

Save As/Save ← Data handling keys

Saves the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

Fill...

Provides parameters for filling a table automatically with user-defined values.

From 0	Range 4
Column To Fill Frequency /Hz	
Start Value 2.000 000 000 000 GHz	End Value 2.600 000 000 000 GHz
Increment Value 200.000 000 000 MHz	
<input checked="" type="checkbox"/> Fill	

To fill the table, select "Fill".

Note: Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

5.4.4.3 Import/Export List Files

Access:

1. Select one of the following:

- "Sweep" > "List mode".
- "Level" > "User Correction".
- "Modulation > Pulse Modulation > Pulse Generator > Pulse Mode = Train".

2. Select "Import/Export".

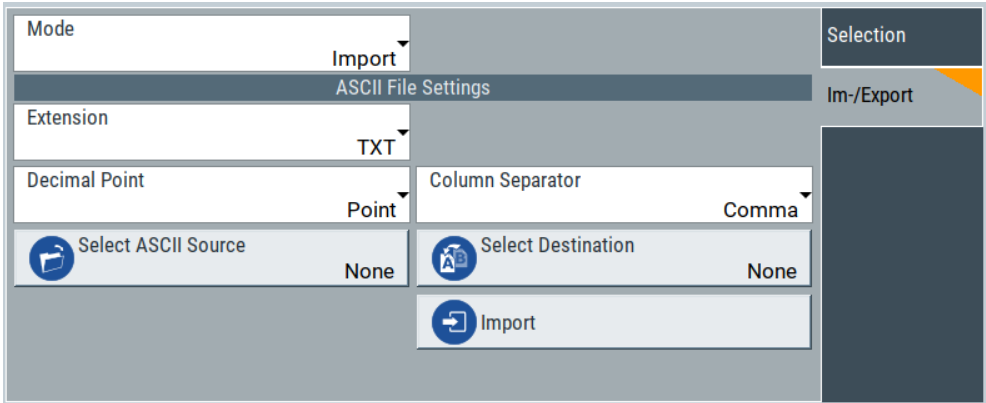


Figure 5-2: Im-/Export dialog (example with UCOR settings)

The "Import/Export" dialog contains all functions and settings to import externally created list data or to export it accordingly. You can process and store a list in the formats *.txt (ASCII), or *.csv (plain text with identical sequence of fields). The table separators and the decimal floating point numbers are customizable.

Settings

Mode.....	95
ASCII File Settings.....	95
Select (ASCII) Source/Select (ASCII) Destination.....	96
Select Source/Select ASCII Destination.....	96
Import / Export.....	96

Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

- [:SOURce<hw>] :LIST:DEXChange:MODE on page 454
- [:SOURce<hw>] :CORRection:DEXChange:MODE on page 420
- [:SOURce<hw>] :PULM:TRAIIn:DEXChange:MODE on page 403

ASCII File Settings

Defines the format and the separators of the associated data file.

- "Extension" Selects *.csv or *.txt format.
- "Decimal Point" Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.
- "Column Separator" Sets the separator between the columns in an ASCII table.
Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

- [:SOURce<hw>] :LIST:DEXChange:AFIle:EXTeNsion on page 453
- [:SOURce<hw>] :LIST:DEXChange:AFIle:SEParator:DECimal on page 453

[\[:SOURCE<hw>\]:LIST:DEXChange:AFILe:SEParator:COLumn](#) on page 453

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFILe:EXTension](#) on page 419

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFILe:SEParator:DECimal](#)

on page 420

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFILe:SEParator:COLumn](#)

on page 420

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFILe:EXTension](#) on page 404

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SEParator:DECimal](#)

on page 404

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SEParator:COLumn](#)

on page 404

Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:AFILe:CATalog?](#) on page 452

[\[:SOURCE<hw>\]:LIST:DEXChange:AFILe:SElect](#) on page 453

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFILe:CATalog?](#) on page 419

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFILe:SElect](#) on page 419

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFILe:CATalog?](#) on page 404

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFILe:SElect](#) on page 405

Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:SElect](#) on page 454

[\[:SOURCE<hw>\]:CORRection:DEXChange:SElect](#) on page 421

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:SElect](#) on page 405

Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:EXECute](#) on page 452

[\[:SOURCE<hw>\]:CORRection:DEXChange:EXECute](#) on page 420

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:EXECute](#) on page 405


5.4.5 Pulse Graph

Option: see [Chapter 5.1, "Required Options"](#), on page 68.

Access:

- Select "Modulation" > "Pulse Modulation > Pulse Graph".

The pulse graph is the graphical representation of the current pulse signal.

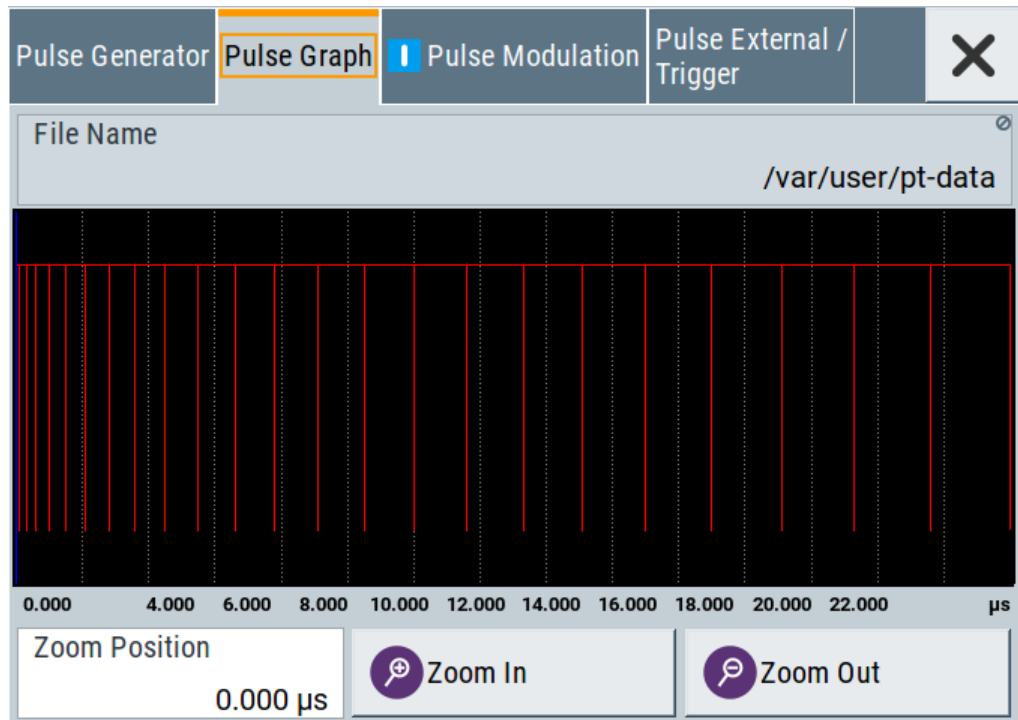

The height of the bars corresponds to the selected amplitude of the pulse signal.

File Name

Indicates the name of the pulse train data file.

To create or select a file, see ["Pulse Train Data"](#) on page 92.

Remote command:

`[:SOURCE<hw>] :PULM:TRain:SElect` on page 403


Zooming

You can zoom into the diagram to visualize the graph in more detail:

- "Zoom Position": Sets the focus on the time axis where to enlarge the graph.
- "Zoom In": Enlarges the graph at the selected position.
- "Zoom Out" for the reverse operation.

5.4.6 Pulse External / Trigger Settings

- Access:
- ▶ Select "Modulation" > "Pulse Modulation > Pulse External / Trigger".

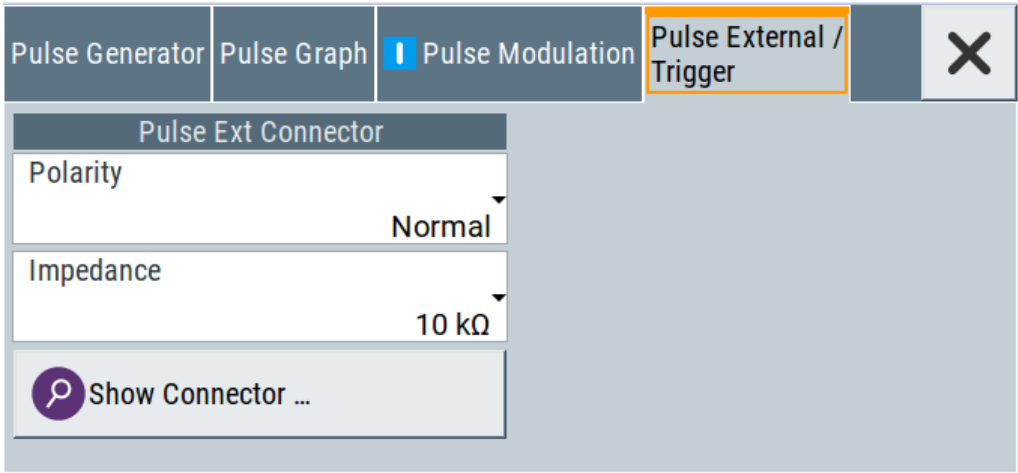

The dialog specifies some characteristics of the Pulse Ext. connector. This connector is common for the pulse generator and the pulse modulator. For an overview, see ["Input and output connectors"](#) on page 69.

Settings

Polarity	98
Impedance	98
Show Connector	98

Polarity
Sets the polarity of the active slope of a pulse input signal, that is the external pulse modulation signal.
Remote command:
[\[:SOURce<hw>\]:PULM:POLarity](#) on page 399

Impedance
Sets the input impedance.
Remote command:
[\[:SOURce<hw>\]:PULM:IMPedance](#) on page 400

Show Connector
Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

5.4.7 FM, PhiM and AM Modulation Sources

Access:

- Select "Modulation > Modulation Sources".

In the "Sources" tab, you can configure an LF modulation signal for performing analog modulations. It includes the setting parameters of the internal LF- and multi-function generators, the noise generator, and an external signal source.

- [Source > LF Generator Settings](#)..... 99
- [Source > External Settings](#)..... 103
- [Source > Noise Generator Settings](#)..... 104

5.4.7.1 Source > LF Generator Settings

Access:

- Select "Modulation" > "Modulation Sources > LF Generator".

Sources	<input checked="" type="radio"/> FM	<input type="radio"/> ΦM	<input checked="" type="radio"/> AM	<input type="radio"/> Output	Overview	✕
LF Generator 1		LF Generator 2		LF Generator		
LF Frequency Sweep State Off				External		
Shape Sine		Shape Pulse		Noise Generator		
Frequency 1.000 00 kHz		Pulse Period 1.000 00 ms				
Period 1.000 00 ms		Pulse Width 500.00 µs				
		Pulse Duty Cycle 50.000 000 %				

The internal LF signal can be the modulation signal source for any of the analog modulations. The LF signal applies to all modulations which use the internal modulation signal. Therefore, any modification of the LF signal immediately affects all currently active modulations.

Settings

State (LF frequency sweep).....	100
Shape.....	100
Frequency.....	102
Period.....	102
Pulse Width.....	102
Pulse Duty Cycle.....	102
Triangle Rise.....	103
Trapezoid Rise / Fall.....	103
Trapezoid High.....	103

State (LF frequency sweep)

Status of the LF frequency sweep signal.

You find this parameter in two dialogs:

- "LF Frequency Sweep" turns on/off the signal generation.
See [Sweep Mode Settings](#) for access.
- "Analog Modulation Sources" displays the current state (read-only). If it is turned on, this dialog provides the varying sweep frequency, see [Current Frequency](#).

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:


`[:SOURce<hw>] :LFOutput:FREQuency:MODE` on page 432

Shape

Selects the waveform shape of the LF generator signal.


The "Triangle" and "Trapezoid" waveforms require option R&S SMBB-K24.

"Sine"

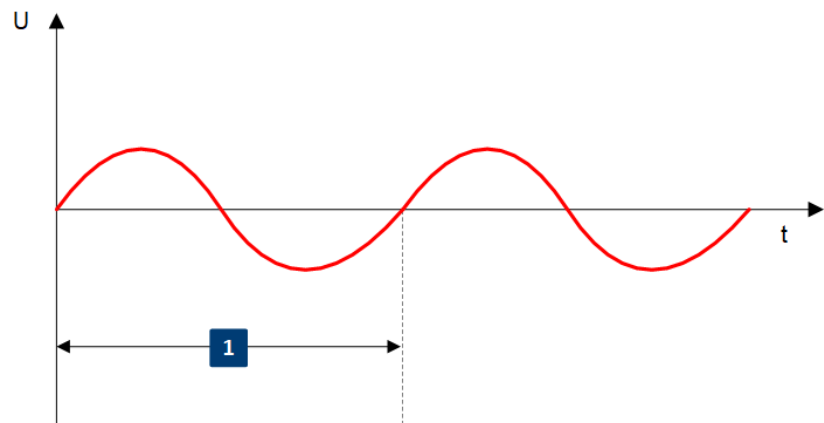


1 = Period

"Square"

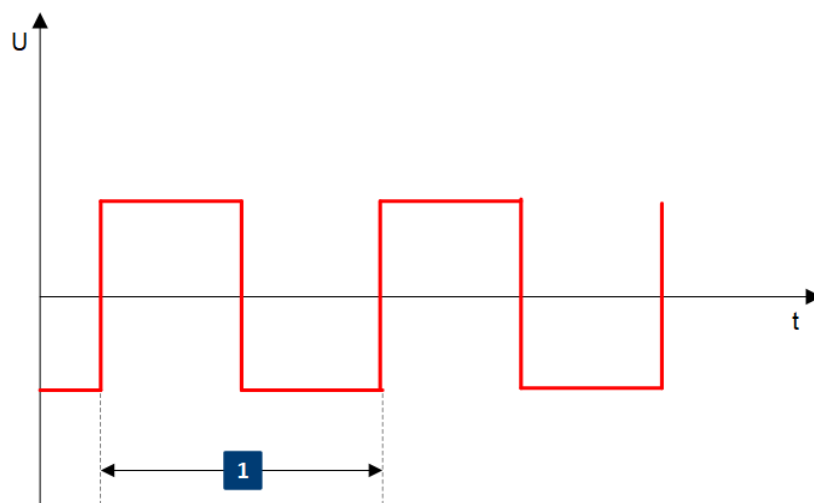



1 = Period

"Pulse"

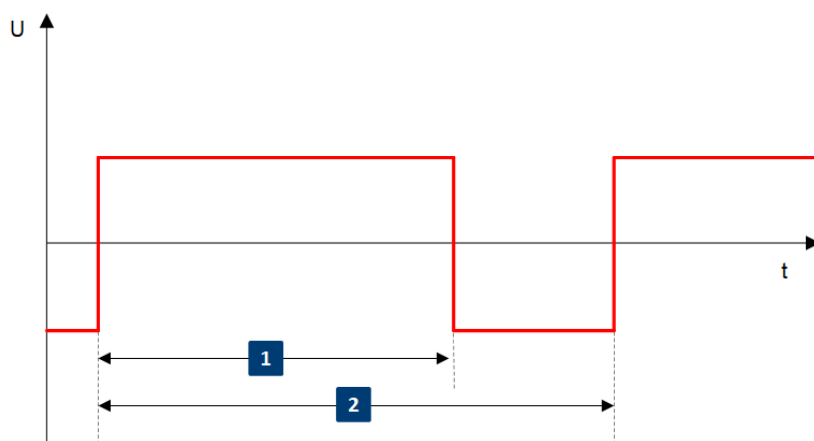1 = Pulse width
2 = Pulse period

"Triangle"

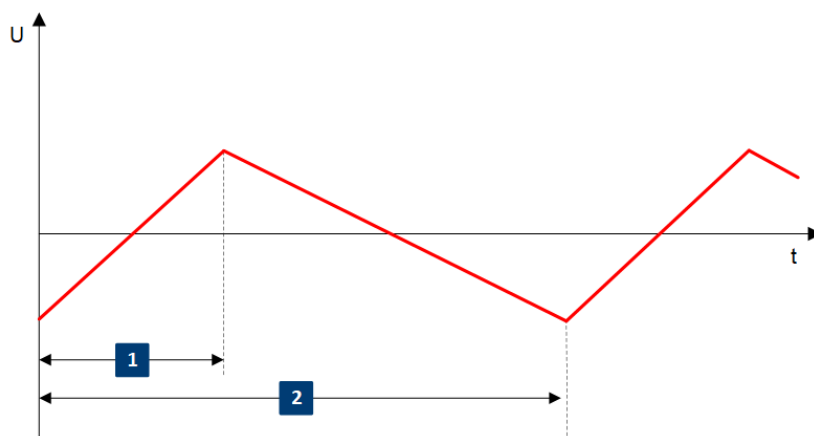1 = Triangle rise
2 = Triangle period

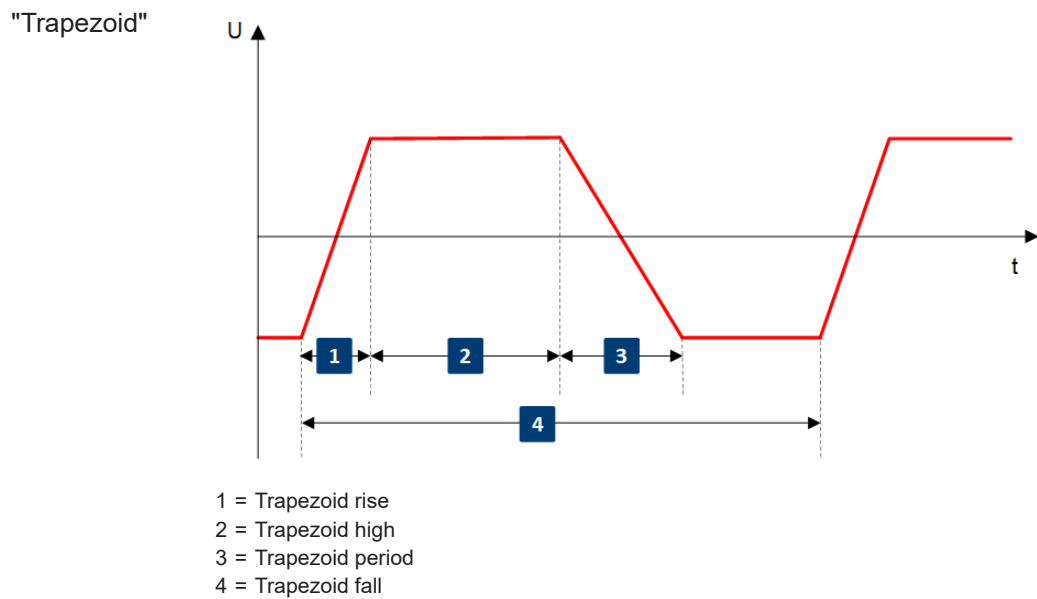

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE](#) on page 435

Frequency

Sets the frequency of the LF generator for sine signals.

Set the signal shape with the parameter [Shape](#).

Remote command:

[\[:SOURce\]:LFOutput<ch>:FREQuency](#) on page 431

Period

Sets the repetition rate of the generated LF signal for triangle, trapezoid or pulse shapes, see [Shape](#).

The period of sine signals is calculated from the selected [Frequency](#)

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRAPeZe:PERiod](#) on page 437

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRIangle:PERiod](#) on page 437

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:PULSe:PERiod](#) on page 436

Pulse Width

Sets the pulse duration of the generated pulse signal.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:PULSe:WIDTh](#) on page 436

Pulse Duty Cycle

Sets the ratio between the pulse duration and the pulse period in percent.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:PULSe:DCYClE](#) on page 435


Triangle Rise
 Sets the time required for the triangle signal to change from low level to high level.
 Remote command:
[\[:SOURce<hw>\]:LFOutput<ch>:SHApe:TRIangle:RISE](#) on page 437

Trapezoid Rise / Fall
 Sets the time required for the trapezoid signal to change from low level to high level, and vice versa.
 Remote command:
[\[:SOURce<hw>\]:LFOutput<ch>:SHApe:TRAPeZe:RISE](#) on page 437
[\[:SOURce<hw>\]:LFOutput<ch>:SHApe:TRAPeZe:FALL](#) on page 436

Trapezoid High
 Sets how long the trapezoid signal is at high level.
 Remote command:
[\[:SOURce<hw>\]:LFOutput<ch>:SHApe:TRAPeZe:HIGH](#) on page 436

5.4.7.2 Source > External Settings

Access:
 ► Select "Modulation" > "Modulation Sources > External".

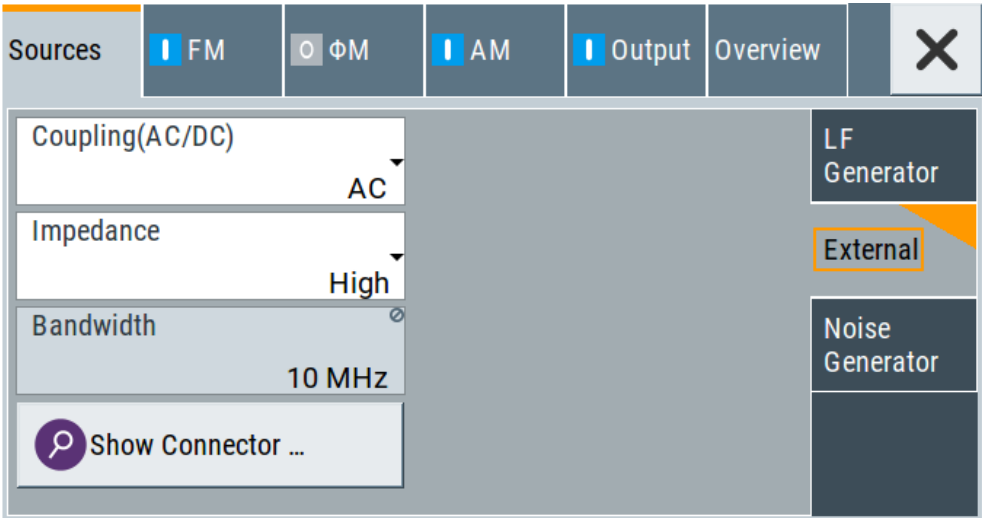

The "External" settings section contains all parameters required to configure the signal of an externally supplied LF signal.

Settings

Coupling (AC/DC)	104
Impedance	104
Bandwidth	104
Show Connector	104

Coupling (AC/DC)

Selects the coupling mode (AC or DC) for the external signal.

"AC" Disconnects the DC voltage component and uses only the AC component of the modulation signal.

"DC" Uses the modulation signal with both components, AC and DC.

Remote command:

[\[:SOURce<hw>\]:INPut:MODext:COUPling](#) on page 427

Impedance

Sets the impedance for the externally supplied signal.

Remote command:

[\[:SOURce<hw>\]:INPut:MODext:IMPedance<ch>](#) on page 428

Bandwidth

Displays the maximum bandwidth of the external LF signal.

Remote command:

[\[:SOURce\]:LFOutput<ch>:BANDwidth?](#) on page 431


**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

5.4.7.3 Source > Noise Generator Settings

Access:

- Select "Modulation" > "Modulation Sources > Noise Generator".

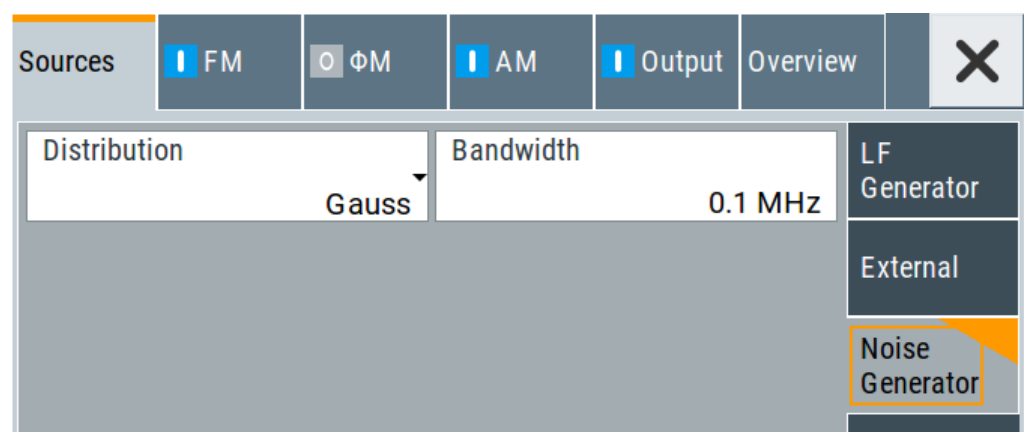

The "Noise Generator" settings contain all parameters to configure the signal of the internal noise generator.

Settings

Distribution	105
Bandwidth	105

Distribution

Selects the distribution of the noise power density.

"Gauss" Generates the noise power according to a Gaussian distribution.

"Equal" Generates an evenly distributed noise.

Remote command:

[\[:SOURce<hw>\]:NOISe:DISTriBution](#) on page 455

Bandwidth

Sets the noise bandwidth as distinct value.

You can set the bandwidth between 100 kHz and 10 MHz in 100 KHz steps.

Remote command:

[\[:SOURce<hw>\]:NOISe:BANDwidth|BWIDth](#) on page 455

[\[:SOURce<hw>\]:NOISe:BWIDth:STATe](#) on page 455

5.4.8 LF Signal Output Settings

Access:

- Select "Modulation" > "LF Output".

Sources	<input checked="" type="radio"/> FM	<input type="radio"/> φM	<input checked="" type="radio"/> AM	<input checked="" type="radio"/> Output	Overview	X
Path 1		Path 2		LF Output		
State	<input checked="" type="checkbox"/>	State	<input checked="" type="checkbox"/>	Noise Level		
Source	LF Generator 1	Source	External			
Output Voltage	1.000 V	Output Voltage	1.000 V			
LF Connector						
DC-Offset	0 mV	Source Impedance	50 Ω			
<input type="button" value="Show Connector ..."/>						

In the "LF Output" tab, you can configure the signal at the LF outputs, determine the output voltage or add a DC offset. Activate both paths to output the sum signal of the two sources.

Settings:

State.....	106
Source.....	106
Show Connector.....	106
Output Voltage.....	106
DC-Offset.....	107
Source Impedance.....	107
Load Impedance.....	107
Noise Level.....	107
L Noise Density.....	107
L Noise Level.....	108

State

Activates the output of the LF signal.

Remote command:

`[:SOURce] :LFOutput<ch> [:STATe]` on page 433

Source

Select the sources for the signal output at the LF connector. If you activate path 1 *and* 2, those sources are added.

Use the "Show Connector" function to find out where this connector is located.

"LF Generator 1/2"

Selects one of internally generated LF signals.

"AM"

Option: R&S SMBB-K720

Selects the AM signal.

"FM/PhiM"

Option: R&S SMBB-K720

Selects the signal also used by the frequency or phase modulations.

"Noise Generator"

Selects the internally generated noise signal.

"External"

Selects an externally supplied LF signal.

Remote command:

`[:SOURce] :LFOutput<ch> :SOURce` on page 434



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

Output Voltage

Sets the peak to peak voltage of the selected LF output source.

This value, e.g. +1 V to -1 V refers to 50 Ohm at the RF output with high termination impedance at the LF output.

Remote command:

[\[:SOURce\]:LFOutput<ch>:INTernal:VOLTage](#) on page 433

DC-Offset

Adds a DC offset to the LF output signal.

Remote command:

[\[:SOURce\]:LFOutput:OFFSet](#) on page 434

Source Impedance

Selects the output impedance of the LF generator.

"50 Ω "

Selects an output impedance of 50 Ω .

"600 Ω "

Selects an output impedance of 600 Ω .

Remote command:

[\[:SOURce\]:LFOutput:SIMPedance](#) on page 434

Load Impedance

Sets the specification of the load impedance interconnected to the LF generator output.

This parameter is available in case of activated R&S SMB100A or R&S SML0x emulations only, see "Remote Access Settings" > "Instrument Emulations" > ["Language"](#) on page 281.

These signal generators come with an LF generator source impedance of 10 Ohm which is not available with the R&S SMB100B.

The set LF generator load impedance enables the R&S SMB100B to emulate the 10 Ohm LF generator source impedance of these generators by a corresponding increase of the open circuit LF generator output voltage.

The load impedance setting is not affected by an instrument preset ([Preset] key or *RST), restart or the "Save/Recall" function. It is reset to the default value of 1 MOhm by a factory preset only.


Remote command:

n.a.

Noise Level

Access:

- Select "Modulation" > "Output > Noise Level".

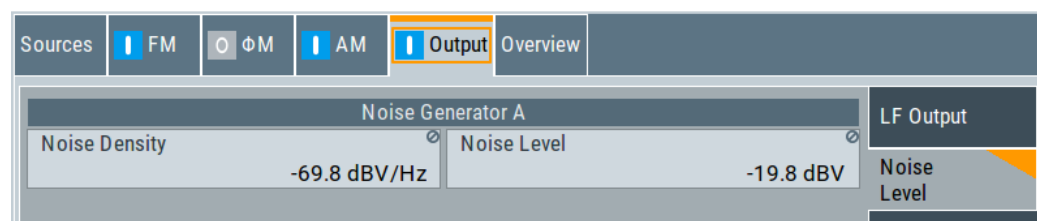

Noise Density ← Noise Level

Indicates the level of the noise signal for a bandwidth of 1 Hz (relative).

Remote command:

`[:SOURce<hw>] :NOISe:LEVel:RELative?` on page 455

Noise Level ← Noise Level

Indicates the level of the noise signal per Hz within the total bandwidth (absolute).

Remote command:


`[:SOURce<hw>] :NOISe:LEVel [:ABSolute] ?` on page 456

5.4.9 Overview

Option: AM and FM/PM require R&S SMBB-K720

Access:

- Select "Modulation" > "Modulation Sources > Overview".

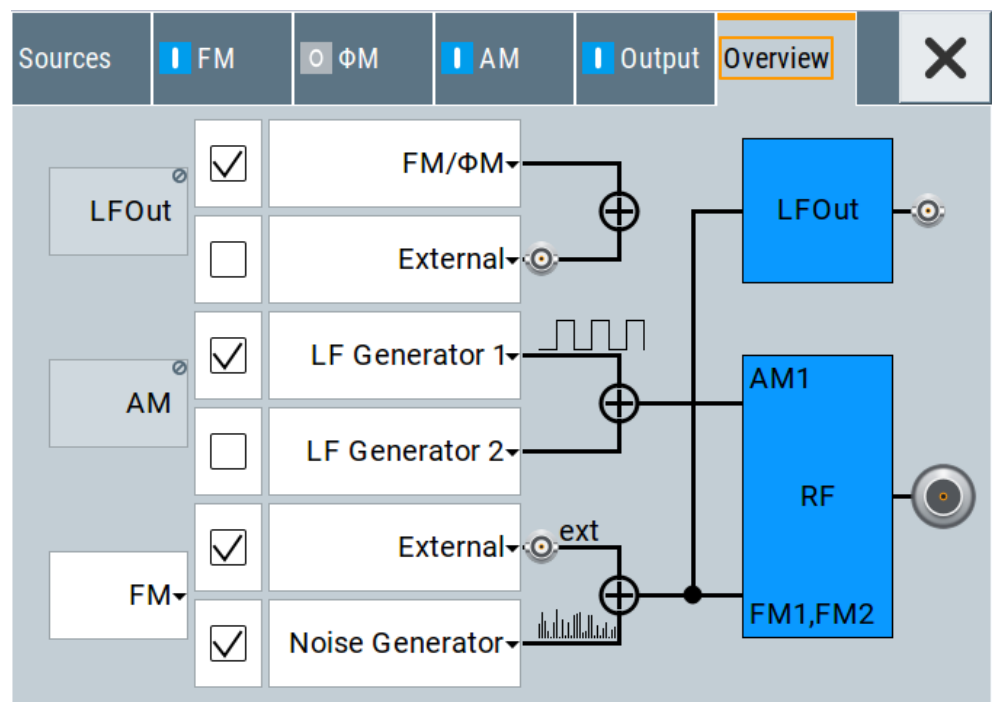

Blue color = Active output signal (AM and FM)
 Gray color = Inactive output signal (LF Out)
 Miniature graph = Indicates an active source
 Connectors = Indicate a connector (e.g. external signal) is involved in the path of the signal

The "Overview" tab is an interactive diagram that indicates the active modulations and the signal being output.

Here you can:

- Select the output signal ("LF Out") in one or two paths; the setting acts as the parameter "LF Output Source"
- Select the source for each modulation and modulation path; the setting acts as the parameter "Source"

- Activate modulation in one or two paths; the setting acts as the parameter "State"
To generate a two-tone signal composed from the two paths of the same modulation type, activate both paths.
- The "FM" box allows switching to "PhiM", but those modulations are mutually exclusive.

LFOut

Label for the LF output settings in the overview.

Remote command:

n.a.

AM

Label for the amplitude modulation settings in the overview.

Remote command:

n.a.

FM/PhiM

Selects the modulation signal to be assigned to the output. You can assign the frequency or phase modulated signal.

Remote command:

n.a.

5.5 How to Generate an Amplitude Modulated Signal

The following examples use the internal LF generator.

To set the frequency and level of the RF signal

1. Press [Preset] to start from a defined state.
2. In the status bar, set "Frequency = 2 GHz".
3. Set "Level = -20 dBm".

To configure the modulation signal (LF generator)

1. Select "Modulation" > "Modulation Source".
2. In the "Sources" tab, select "Shape > Sine".
3. Set "Frequency = 20 kHz".

The period is calculated automatically and indicates "Period = 50.00 µs".

To configure the amplitude modulation settings

1. In "Modulation" dialog, select the "AM" tab.
2. Set "Source = LF Generator1"

3. Set "Depth = 30%"
4. Select "State = I" to activate the modulation.
5. Set "Level > RF ON" to enable signal output.

5.6 How to Generate a Pulse Modulated Signal

The following example uses the internal pulse generator.

To set the frequency and level of the RF signal

1. Press [Preset].
2. In the status bar, set "Frequency = 4 GHz".
3. Set "Level = -25 dBm".

To configure the pulse generator

1. Select "Modulation" > "Pulse Generator".
2. Select "Pulse Mode = Double".
3. Set "Pulse Period = 10 us".
4. Set "Pulse Width = 2 us".
5. Set "Double Pulse Width = 1.2 us".
6. Set "Double Pulse Delay = 4.5 us".
7. Activate "Pulse Output State".
8. Set "Trigger Mode = Auto".

In the "Pulse Graph" tab, you can view the generated pulse signal graphically.

To enable pulse modulation

1. Select the "Pulse Modulation" tab.
2. Set "State = I" to activate pulse modulation.
3. Set "Level > RF ON" to enable signal output.

5.7 How to Generate a Pulse Train Modulated Signal

The following example uses the internal pulse generator.

To set the frequency and level of the RF signal

1. Press [Preset].

2. In the status bar, set "Frequency = 6 GHz".
3. Set "Level = -25 dBm".

To configure the pulse generator

1. Select "Modulation" > "Pulse Generator".
2. Select "Pulse Mode = Train".
3. Select "Pulse Train Data".
Accesses the standard function for file handling.
4. Select an existing file or select "New" to create one.
5. Define the filename.
Select "Edit Pulse Train Data", if the file is empty or to control and change the values.
6. In the "Edit Pulse Train Data" dialog, enter the pulse on/off times and pulse repetition values.
For example:
 - "On-Time = 500 us", "OFF-Time = 2 ms", "Count = 2"
 - "On-Time = 100 us", "OFF-Time = 2.5 ms", "Count = 1"
 - "On-Time = 10 us", "OFF-Time = 50 us", "Count = 10"
7. "Save" the file and close the dialog.
The instrument returns to the /var/user/ where it has saved the file.
8. Select the file in the directory.
9. Confirm with "Select".
10. In the "Pulse Generator" dialog, select "Pulse Output State = On".
11. Set "Trigger Mode = Auto".

In the "Pulse Graph" tab, you can view the generated pulse signal graphically.

To enable pulse train modulation

1. Select the "Pulse Modulation" tab.
2. Set "State = I".
3. Set "Level > RF ON" to enable signal output.

6 List and Sweep Mode

The operating modes "List" and "Sweep" allow you to generate an RF signal having periodically varying frequencies or amplitudes.

A signal generated with varying parameters scans a certain range of varying values of a parameter, with defined start and end points, and can be repeated cyclically.

The R&S SMB100B supports two basic methods:

- **Sweep** mode

The instrument generates an RF signal which varies its frequency or level values in discrete steps between the start and end values. The values change according to a specific shape like sawtooth or triangle. The spacing is linear or logarithmic.

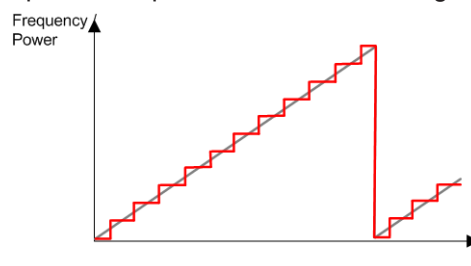


Figure 6-1: Schematic representation of a signal generated in sweep mode

The main application field of the "Sweep" mode is to determine the frequency response of a DUT.

- **List** mode

The instrument generates a varying output signal, based on a previously saved list with frequency, amplitude and step width values. While in sweep mode the frequency **or** the level values change, in list mode you can vary **both parameters simultaneously**. The frequency and level values do not need to have ascending or descending order, they can vary arbitrarily.

You can use a global dwell time, which means that the time interval is constant for all steps of the list, or different dwell times for each value pair.

[Figure 6-2](#) represents the frequency and power value pairs, in this case with the dwell time set the same for all steps (global dwell time).

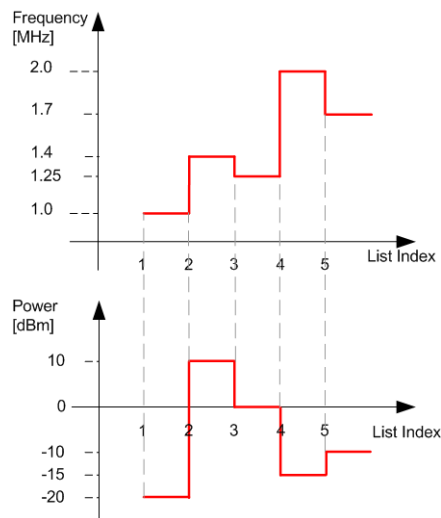


Figure 6-2: Schematic representation of a signal generated in list mode (global dwell time)


The list mode is especially useful in high-speed measurements with fast changing frequency and level settings.



Note that the shown diagrams represent the behaviour in theory. In real signal generation, the instruments usually have a blank time when the frequency or level changes.

Interactions and characteristics of list and sweep mode

- Activating the list mode automatically deactivates all RF and LF sweeps and vice versa.
- In list processing mode, the frequency and level display in the status bar is disabled.

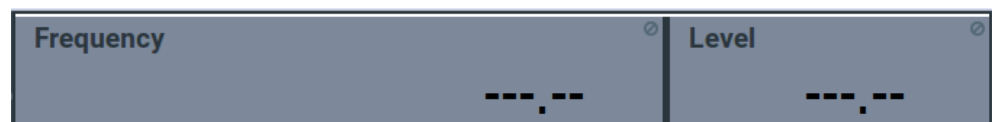

- The sweep modes only work with a *global* dwell time, that means the time intervals are constant during signal generation.
- If you want to hold a running sweep at a specific frequency or level value, enter the value in the status bar. The sweep stops immediately.
- We recommend that you switch off the display update for optimum sweep performance, especially with short dwell times
See [Chapter 10.1.2, "Display Update Settings"](#), on page 230.

6.1 Signal Generation and Triggering in the Sweep and List Modes

In both operating modes "List" and "Sweep", triggering and signal generation follow the same principle. The instrument generates the signal continuously (that means triggered automatically) or in individual steps (controlled manually by an internal or external trigger signal).

The instrument expects the trigger signal at the Inst Trig connector.



If the dwell time in sweep or list mode is too short or external trigger signals come too fast, the signal generation delays. As the delay increases, the R&S SMB100B signals an overrun, or even stops sweep or list mode signal generation, if the delay gets too long.

The instrument displays corresponding error messages.

The figures in this section give an overview on the signal generation in the sweep and list modes and the appropriate triggering. The figures show the signal state after activating the mode and the generation of the signal when a trigger event occurs. For each mode, the relevant parameters and settings are briefly explained.

Each "Sweep" and "List" mode dialog provides also a "Reset" function that sets the signal to the initial value or the beginning of the list. Depending on the selected trigger mode, the signal generation proceeds accordingly.




The naming of the selection parameters in manual control (GUI) sometimes deviates from the naming in the remote-control commands. In addition, the value names of the selection parameters used in the signal generator partly differ from the SCPI syntax. The instrument accepts all value names.

The correlation between the manual control and the corresponding remote control commands, including the SCPI conform syntax are explained for each mode (see the cross-reference tables).

See also the following programming examples on the sweep and list modes in remote control:


- [Example "Setup an RF frequency or power sweep"](#) on page 472
- [Example "Setup an LF sweep"](#) on page 428
- [Example "Create an RF list and activate the list mode"](#) on page 441

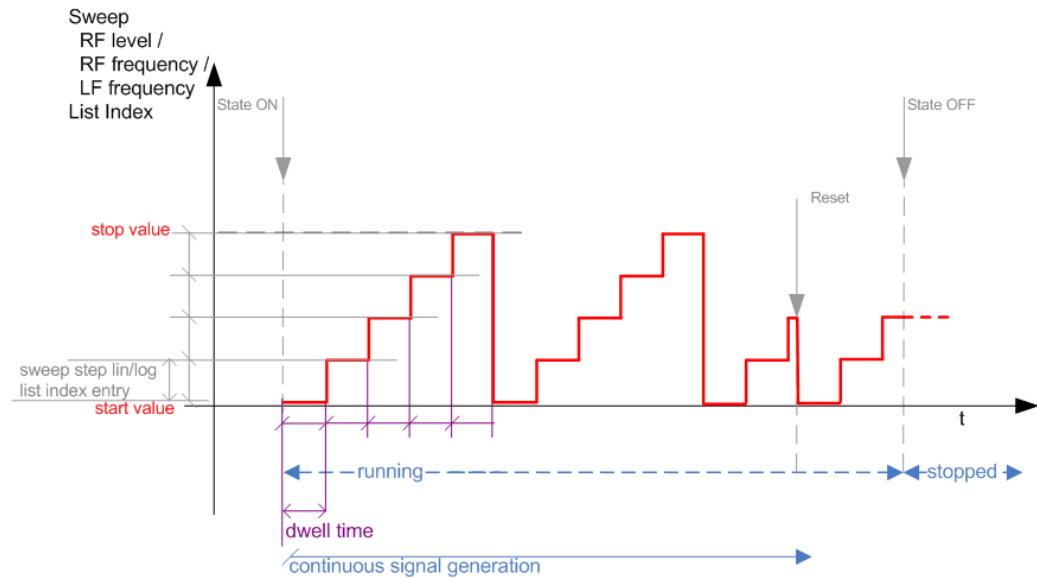Auto mode (Sweep/List)**Figure 6-3: Auto mode (Sweep/List)**

- The instrument generates the signal continuously.
- Trigger mode "Auto" is prerequisite (default). It causes the continuous generation of the sweep signal.
- Starts signal generation immediately with "State = On".
- Switches automatically to the next step when the **Dwell time** has elapsed.
- Stops signal generation with "State = Off".

Table 6-1: Cross-reference between manual and remote control in Auto mode (Sweep/List)

Manual control mode: "Auto"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSWEEP:SOURce AUTO [IMMediate] :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO
List	:SOURce<hw>:LIST:MODE AUTO :SOURce<hw>:LIST:TRIGger:SOURce AUTO

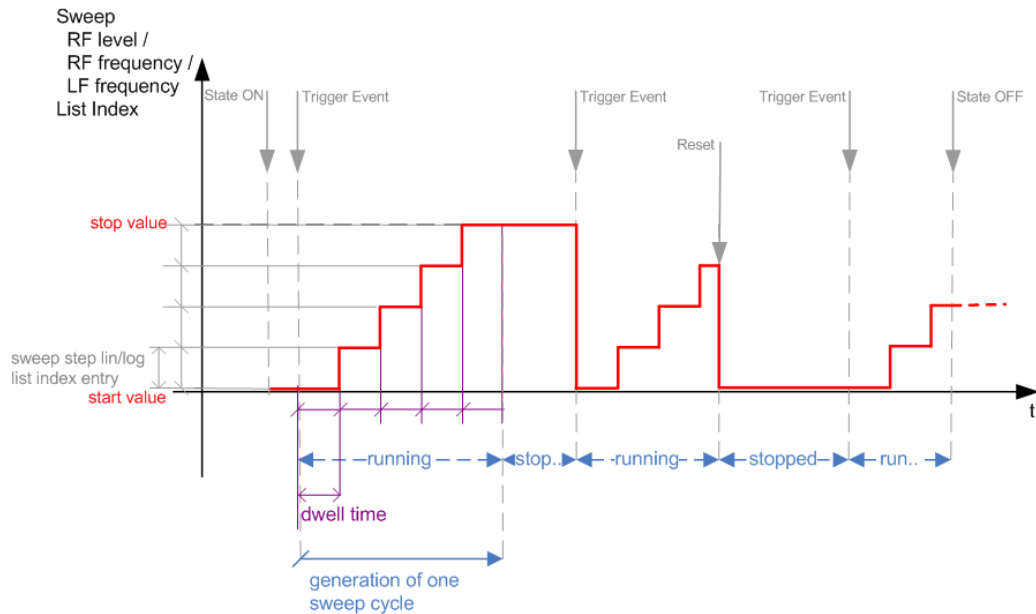Single / Extern Single mode (Sweep/List)**Figure 6-4: Single / Extern Single mode (sweep / list)**


In single mode, you can specify, that the signal returns to the start value when a sweep cycle has been completed.

See ["The Retrace function"](#) on page 121 for details.

- The instrument generates a single sweep cycle.
- Trigger mode "Manual". A trigger event initiates one sweep from the start value to the end value.
- "State = On" sets the signal to the start value: the sweep start frequency, the sweep start power or the frequency-power value pair of the selected index in the list.
- Starts signal generation with a trigger event.
- Switches automatically to the next step when the [Dwell time](#) has elapsed.
- Stops signal generation at the set end value and waits for the subsequent trigger event.
- Trigger sources:
 - The "Execute Single Sweep" function.
 - The corresponding remote control command.
 - An externally applied trigger signal.
- "State = Off" stops the signal generation in sweep or list mode.

Table 6-2: Cross-reference between manual and remote control in Single / Extern Single modes (Sweep/List)

Manual control mode: "Single / Extern Single"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSWEEP:SOURce SINGLE [BUS] "Single" or :TRIGger<hw>:FSWEEP:SOURce EXTERNAL [EXTERNAL] "Extern Single" :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSWEEP:SOURce SINGLE [BUS] for "Single" or :TRIGger<hw>:PSWEEP:SOURce EXTERNAL [EXTERNAL] for "Extern Single" :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSWEEP:SOURce SINGLE [BUS] "Single" or :TRIGger<hw>:LFFSWEEP:SOURce EXTERNAL [EXTERNAL] "Extern Single" :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO
List	:SOURce<hw>:LIST:TRIGger:SOURce SINGLE "Single" or :SOURce<hw>:LIST:TRIGger:SOURce EXTERNAL "Extern Single" :SOURce<hw>:LIST:MODE AUTO

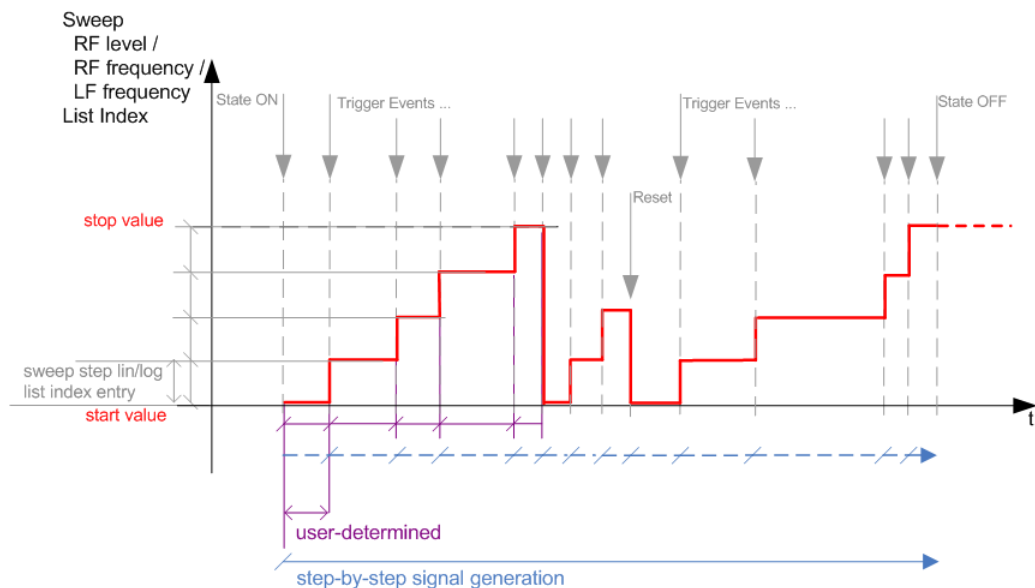Step / Extern Step mode (Sweep/List)**Figure 6-5: Step / Extern Step mode (sweep / list)**

- The instrument generates the signal step-by-step.
- Starts signal generation with "State = On".
- Switches to the next step with a manual action.
If the end value is reached, signal generation starts again from the beginning.
- Stops signal generation with "State = Off".

Signal Generation and Triggering in the Sweep and List Modes

- Trigger sources:
 - The rotary knob at the front panel.
 - The [Arrow] keys at the front panel.
 - The corresponding remote control commands.
 - An externally applied trigger signal.

To step through the sweep frequencies or levels:


- In manual mode:
 - Set the **Current Frequency** or **Current Level** values
 - Use the [Up] and [Down] keys or the rotary knob
- In remote control mode:
 - Use the commands `[:SOURce<hw>] :FREQuency:MANual` or `[:SOURce<hw>] :POWer:MANual` with the UP or DOWN parameter



Steps that would exceed the sweep range are ignored.

Table 6-3: Cross-reference between manual and remote control in Step / Extern Step modes (Sweep/List)

Manual control mode: "Step / Extern Step"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:FSweep:SOURce EXTernal [EXTernal] for "Extern Step" :SOURce<hw>:SWEep:FREQuency:MODE STEP
RF level sweep	:TRIGger<hw>:PSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:PSweep:SOURce EXTernal [EXTenal] "Extern Step" :SOURce<hw>:SWEep:POWer:MODE STEP
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:LFFSweep:SOURce EXTernal [EXTenal] "Extern Step" :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE STEP
List	:SOURce<hw>:LIST:TRIGger:SOURce SINGLE "Step" or :SOURce<hw>:LIST:TRIGger:SOURce EXTernal "Extern Step" :SOURce<hw>:LIST:MODE STEP

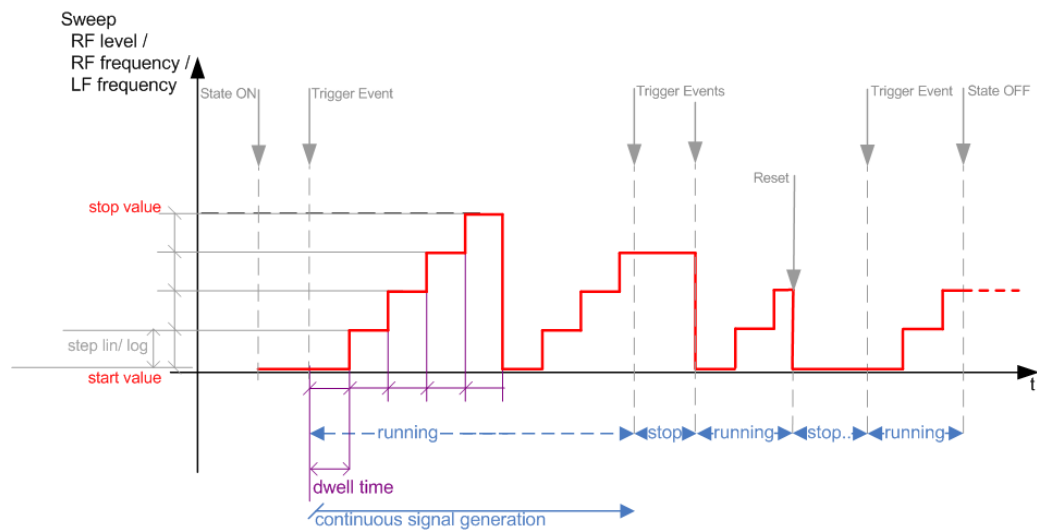Extern Start/Stop mode (sweep)**Figure 6-6: Extern Start/Stop mode (sweep)**

- The instrument generates the signal continuously.
- Trigger mode "Auto" and "Sweep > State = On" are prerequisite.
- State "On" sets the signal to the start value, that is one of the following:
 - Sweep start frequency
 - Sweep start power
 - Frequency-power value pair of the selected index in the list
- Starts signal generation with a trigger event.
- Switches automatically to the next sweep step when the **Dwell time** has elapsed. If the end value is reached, signal generation continues with the next sweep cycle.
- Stops signal generation with the next external trigger event.
- Starts the signal generation again with the next trigger event, beginning at the start value.
- "State = Off" stops the signal generation in sweep or list mode.
- Trigger source: An externally applied trigger signal.

Table 6-4: Cross-reference between manual and remote control in Extern Start/Stop modes (sweep)

Manual control mode: "Extern Start/Stop"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce EAUTO [-] :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSweep:SOURce EAUTO [-] :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce EAUTO [-] :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO

Manual mode (Sweep/List)



The **manual** mode only applies to remote control. It is not visible in the graphical user interface of the instrument and is described here for completeness.

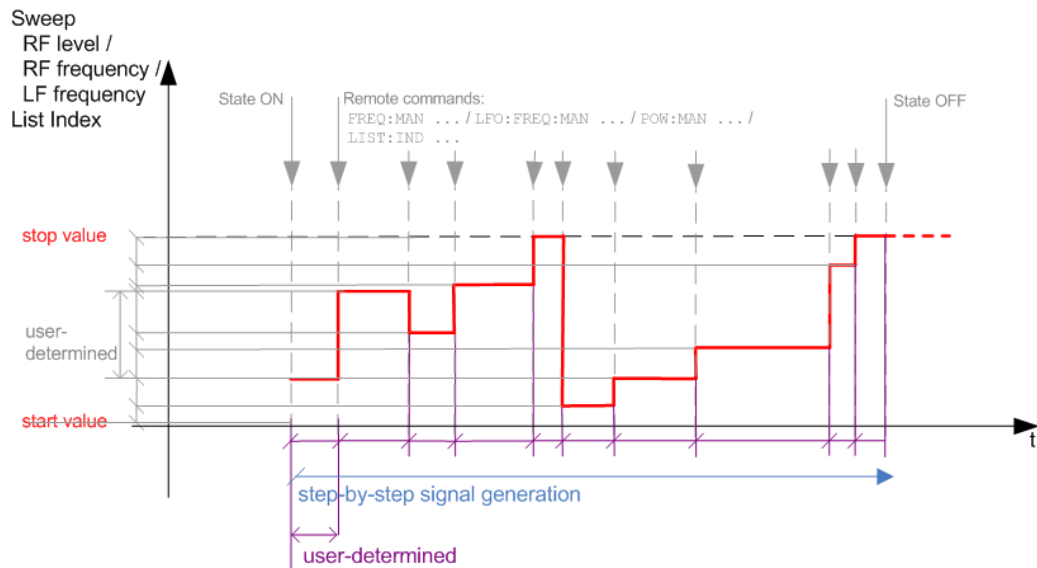



Figure 6-7: Manual mode in remote control (sweep / list)

- The instrument generates the signal in steps.
- Starts signal generation with "State = On".
- Switches to the next step with a user defined setting via remote control. You can arbitrarily select a value within the range of the start and stop values by setting the frequency, power or index using the corresponding remote control command. There is no ascending or descending order.
- Stops signal generation with "State = Off".

Table 6-5: Remote control commands in manual mode (Sweep/List)

Remote control mode:	Remote commands
Manual	Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:SOURce<hw>:FREQuency:MANUal <Manual>
RF level sweep	:SOURce<hw>:POWER:MANUal <Manual>
LF frequency sweep	:SOURce<hw>:LFOUtpuT:FREQuency:MANUal <Manual>
List	:SOURce<hw>:LIST:INDex <Index>

The Retrace function

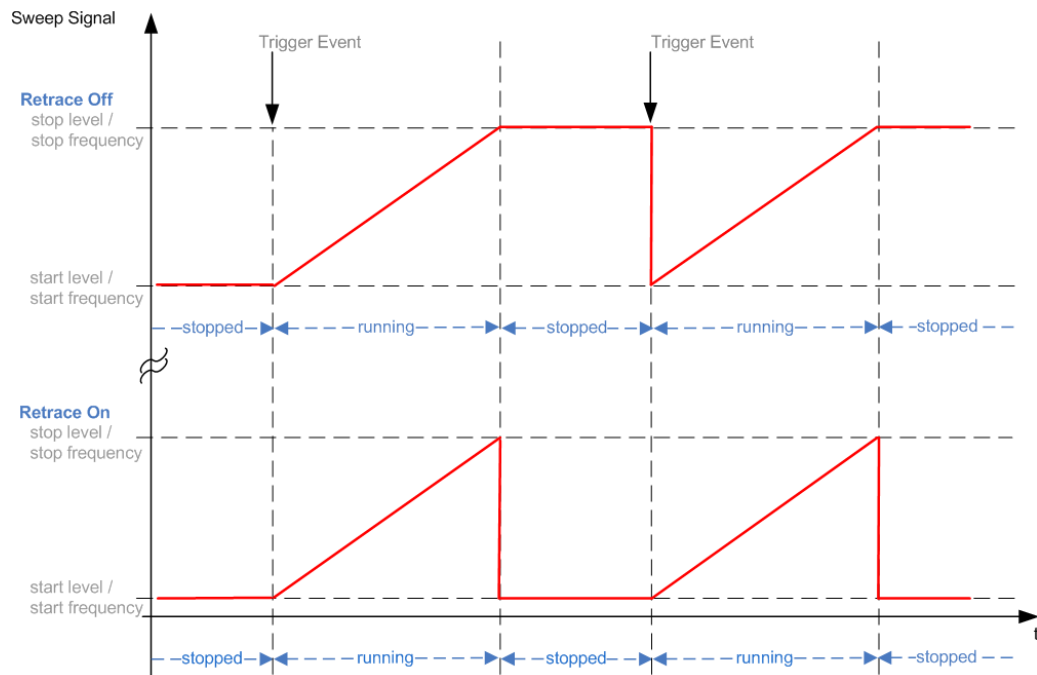

Retrace is a function especially designed for "Single" sweep modes, when the sweep signal follows a sawtooth shape. Working in this mode, the instrument performs a single sweep cycle when a trigger event occurs. The signal generation stops at the set end point (stop frequency or stop level), and waits for the next trigger event.

In this state, the upper value of the signal remains at the output until the next cycle starts. In particular, if you generate a level sweep signal, the high amplitude of the signal is output for a certain time. To protect the DUT from overload, the retrace function immediately resets the signal value to the start value at the end of a sweep cycle. It returns to the start level or start frequency until the next trigger is applied.

You can use the "Retrace" function if "Sweep > Mode = Single/External Single" and "Shape = Sawtooth", see:

- ["Shape"](#) on page 131
- ["Mode"](#) on page 130

6.2 About Sweep Mode

In sweep mode, the signal generator scans the sweep range gradually from one point to another, using a defined step size and following a triangle or sawtooth shape. This mode also enables you to change direction, that means, it is possible to step backwards.

See [Chapter 6.2.2, "Sweep Signal Shapes"](#), on page 124.

Configuration and operation of sweep mode signals

- The R&S SMB100B generates a sweep signal by varying the following parameters: either the *RF frequency*, the *RF level* or both, the *RF frequency* and the *RF level* in combined RF sweep mode, or the *LF frequency*.
- In all sweep modes, you can perform a complete sweep cycle once, repeat the cycle continuously or step through it gradually.
- The instrument generates the sweep signal according to the sweep settings.
- The "Reset Sweep" function, provided in the sweep settings dialogs enables you to reset the sweep to its initial value and restart it.



Impact of changing the sweep mode during performance

If you change the sweep mode during the execution, the signal generator stops the sweep and starts with the next trigger event at the initial value.

Combined RF frequency / level sweep processing mode

The combined RF sweep functionality processes the signal similar to the Live list mode. The R&S SMB100B sets the frequency and level values simultaneously in the hardware. The difference to the list mode is that the values are not taken from a previously created list, but are calculated using the selected frequency and level ranges, the dwell time and the number of steps.

6.2.1 Correlating Parameters in Sweep Mode

A sweep signal is a periodic signal that changes its frequency or level, or both, from a starting value to an ending value in a defined time.

The R&S SMB100B provides various possibilities to configure a sweep signal. For example, you can determine the sweep range by the start and end values, or based on the start value and span. In any case, related parameters are adjusted accordingly.

The formulas below show how the sweep parameters correlate and the corresponding calculation basis, by the frequency and offset settings. Apart from "Center Frequency", "Span" and "Step_lin", the values apply accordingly to the level settings.

Table 6-6: Variables that are used in the following formulas

Variable	Description
Sweep range	Defined frequency or level value range
f_{CENTer}	Defined center frequency
f_{SPAN}	Defined extend of the sweep range
f_{OFFSet}	Frequency offset
f_{START}	Start frequency of the sweep range
f_{STOP}	End frequency of the sweep range
f_1	Current sweep frequency

Variable	Description
f_2	Next, subsequent sweep frequency
step_lin	Step size in linear scaling
step_log	Step size in logarithmic scaling
POINts	Number of steps within the sweep range

Sweep range

The sweep range is defined by a start and an end value. How the remaining parameters correlate is shown below.

Offset = 0

Sweep Range = f_{START} to f_{STOP}

$$f_{\text{CENTer}} = (f_{\text{START}} + f_{\text{STOP}})/2$$

$$f_{\text{SPAN}} = (f_{\text{STOP}} - f_{\text{START}})$$

Where:

$$f_{\text{START}} = f_{\text{CENTer}} - (f_{\text{SPAN}}/2)$$

$$f_{\text{STOP}} = f_{\text{CENTer}} + (f_{\text{SPAN}}/2)$$

Offset≠0

A defined offset also affects the sweep range and the center frequency. Therefore, the set frequencies are only absolute values, if the Offset = 0. Offset ≠ 0 shifts the frequencies with the offset value:

Sweep Range = $f_{\text{START}} + f_{\text{OFFSet}}$ to $f_{\text{STOP}} + f_{\text{OFFSet}}$

$$f_{\text{CENTer}} = f_{\text{CENTer}} + f_{\text{OFFSet}}$$

$$f_{\text{SPAN}} = f_{\text{SPAN}} + f_{\text{OFFSet}}$$

The value range of the instrument is calculated as follows:

$$RF_{\text{min}} + f_{\text{OFFSet}} \text{ to } RF_{\text{max}} + f_{\text{OFFSet}}$$



It is possible to set $f_{\text{START}} > f_{\text{STOP}}$ and $f_{\text{START}} < f_{\text{STOP}}$, so that even a negative value is permitted for the "Span".

If you change the start and/or stop frequency, the span and center frequency change accordingly, and vice versa.

Sweep steps

In the following, you see how the sweep steps are calculated depending on the defined spacing mode. The formulas show a frequency sweep, but apply to the level settings in the same way.

The step size is added to the current value, to get the subsequent sweep step.

With **linear** scaling, the next frequency is calculated according to:

$$f_2 = f_1 + \text{step_lin}$$

In the **logarithmic** scaling, the step size is determined in per cent, as a constant fraction of the current frequency.

Successive frequencies are calculated as follows:

- For $f_{\text{START}} < f_{\text{STOP}}$
 $f_2 = f_1 * (1 + \text{step_log}/100)$
 If $f_2 > f_{\text{STOP}}$, then $f_2 = f_{\text{STOP}}$
- For $f_{\text{START}} > f_{\text{STOP}}$
 $f_2 = f_1 / (1 + \text{step_log}/100)$
 If $f_2 < f_{\text{STOP}}$, then $f_2 = f_{\text{STOP}}$

With "Shape = Triangle", the frequency values on the slope from f_{STOP} to f_{START} are the same as on the slope from f_{START} to f_{STOP} .

If you specify the number of steps within the sweep range, the step size is adjusted according to the following correlation:

- For **linear** sweeps and $f_{\text{START}} < f_{\text{STOP}}$
 $\text{POINTS}_{\text{frequency}} = ((f_{\text{START}} - f_{\text{STOP}})/\text{step_lin}) + 1 = (f_{\text{SPAN}}/\text{step_lin}) + 1$
- For **logarithmic** sweeps and $f_{\text{START}} < f_{\text{STOP}}$
 $\text{POINTS}_{\text{frequency}} = ((\log f_{\text{STOP}} - \log f_{\text{START}})/\log \text{step_log}) + 1$

If step_log changes, the value of POINTs is adjusted. The f_{START} and f_{STOP} values are retained.

6.2.2 Sweep Signal Shapes

The R&S SMB100B supports the following sweep shapes:

- Sawtooth
 The sweep sequence resembles a sawtooth. One sweep runs from start to stop frequency, or level value respectively. Each subsequent sweep starts again at the start value.

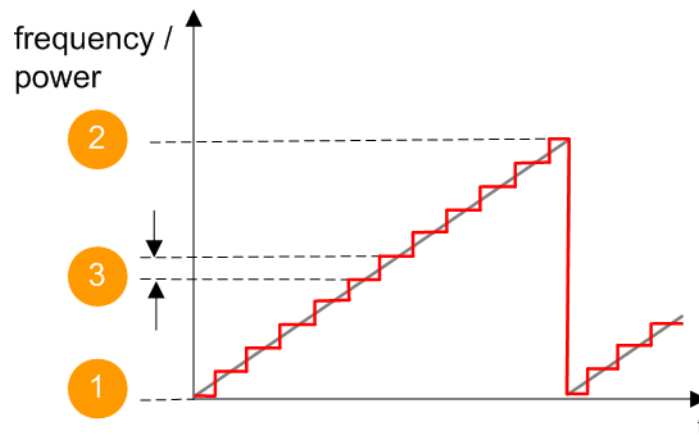


Figure 6-8: Sweep signal sawtooth shape

1 = Start value
2 = Stop value
3 = Step size

- **Triangle**
The sweep sequence resembles a triangle. One sweep runs from start to stop value frequency and back. Each subsequent sweep starts at the start value.

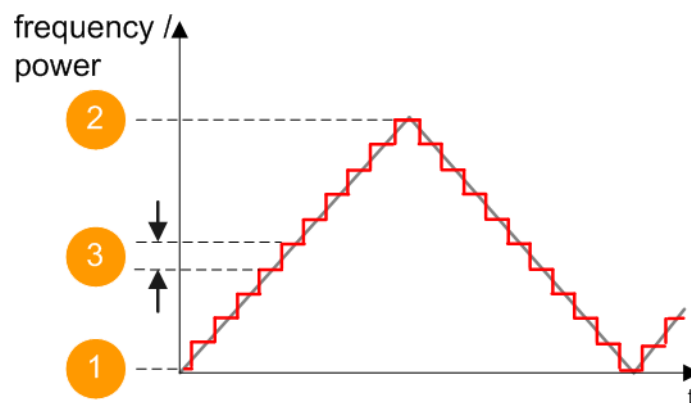


Figure 6-9: Sweep signal triangle shape

1 = Start value
2 = Stop value
3 = Step size

The current frequency or level of an RF frequency, level or LF frequency sweep is determined by the shape (e.g. sawtooth or triangle) and the spacing (linear or logarithmic), and the step size.

6.3 About List Mode

The list mode is used to generate the RF signal based on a set of predefined frequency and amplitude value pairs, with individual step times. You can define the values

arbitrarily, in any order and varying step sizes, within the entire configurable value range of the instrument.

Configuration and operation of list mode signals

The parameters configuring the RF signal are defined in a list (table) and stored in a file.

Creating and handling lists

List files can be created in the following ways:

- **Internally**
Use the build-in table editor with columns for the frequency-level values pairs and the dwell time.
Define the values manually (row by row) or automatically, based on value range and step size.
(See [Chapter 6.7, "List Editor"](#), on page 145)
Lists are saved as files with user-definable filename and the predefined file extension *.lsw. To load a saved file, use the "File Manager".
(See [Chapter 9.8, "Using the File Manager"](#), on page 209)
- Lists can be exported, too. For example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
- **Externally**
Create a list file as a CSV file with Microsoft Excel, with a Notepad or a similar tool and save it with the predefined extension. Transfer the file to and load it into the instrument.

Dwell time mode

You can choose whether you want to use different dwell times or a fixed value for all steps in the list mode:

- "From List"
This mode uses the values from the data table.
See [Edit List Mode Data](#)
- "Global"
This mode processes the list with a fixed time interval you can set with [Global Dwell Time](#).

List processing mode

See:

- ["Live list processing mode"](#) on page 128

6.4 Significant Parameters and Functions

This section provides some basic parameters, settings and functions that affect the operating modes CW, list and sweep, that means at all frequency and level transitions of the RF signal.

Dwell time

Dwell time is the length of time that elapses from the beginning until the end of a step in list or sweep mode.

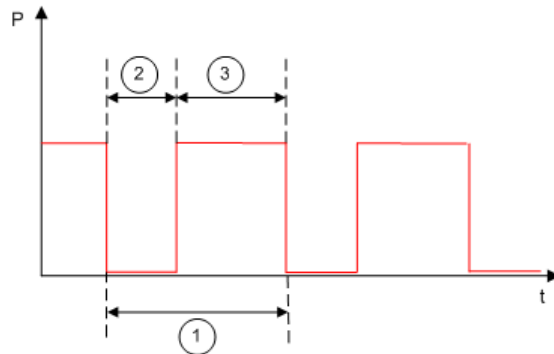


Figure 6-10: Dwell Time vs. settling time

- 1 = "Dwell Time" (as set with the parameter)
- 2 = Settling time
- 3 = Dwell time (effective)

However, the time the instrument requires for the signal to settle reduces the set dwell time:

$$t_{\text{dwell(effective)}} = t_{\text{dwell}} - t_{\text{settling}}$$



If the dwell time in sweep or list mode is too short or external trigger signals come too fast, the signal generation delays. As the delay increases, the R&S SMB100B signals an overrun, or even stops sweep or list mode signal generation, if the delay gets too long.

The instrument displays corresponding error messages.

Hardware adjustments

The first time a list (new or modified) is processed, the instrument automatically calculates the necessary hardware settings. It can be performed during list processing, but delays the first cycle, especially with short dwell times.

With long dwell times, you can perform this calculation while the list is being processed; the entered dwell times are observed. With short dwell times, calculation of the hardware settings increases the dwell time for the initial processing cycle; the entered value is only observed from the second processing cycle onwards. In this case, a message indicates that there is a deviation between the current and set dwell times. After the first cycle, you do not need to perform additional calculations. The current dwell times do not deviate from the set dwell times.

Blanking

The instrument applies *blanking*, which temporarily turns off the RF signal when the frequency or level changes, until the signal has settled to a stable state.

Temporary blanking applies to all operating modes.

Live list processing mode

The R&S SMB100B generates the signal directly from the value pairs in the database, and adjusts the hardware settings accordingly. The current instrument state and thus any change during the signal generation directly affects the RF signal. The temporary memory is not used.

You can conveniently modify parameters like modulation settings during run-time. Learning list mode data is not required. Impacts like temperature drift are also considered immediately.

This mode is optimized for **maximum signal quality**, and is useful if dwell times higher than 2 ms are sufficient.

6.5 Sweep Mode Settings

This section lists the settings of **all** available sweep modes.

Access:

1. Select "Sweep" > "RF Frequency Sweep"
2. Select "Sweep" > "RF Level Sweep"
3. Select "Sweep" > "RF Combined Sweep"
4. Select "Sweep" > "LF Frequency Sweep"

The remote commands required to define these settings are described in:

- [Chapter 12.14.12, "SOURce:SWEep Subsystem"](#), on page 472
- [Chapter 12.14.3, "SOURce:FREQuency Subsystem"](#), on page 421
- [Chapter 12.14.10, "SOURce:POWEr Subsystem"](#), on page 458
- [Chapter 12.14.5, "SOURce:LFOutput Subsystem"](#), on page 428

Settings



- [General Sweep Settings](#)..... 128
- [Frequency Range Settings](#)..... 134
- [Level Range Settings](#)..... 136

6.5.1 General Sweep Settings

Access:

- ▶ Select for example "Sweep" > "RF Frequency Sweep".

Table 6-7: General settings dialog: Examples of RF Frequency and RF Combined Sweep dialogs
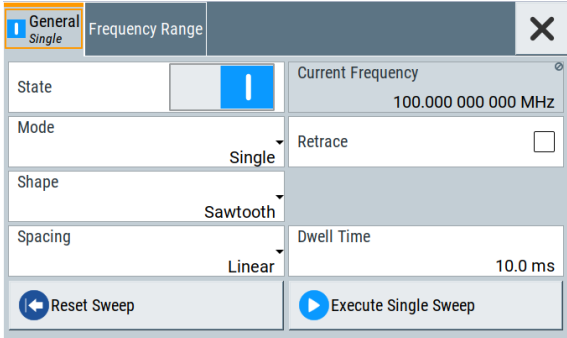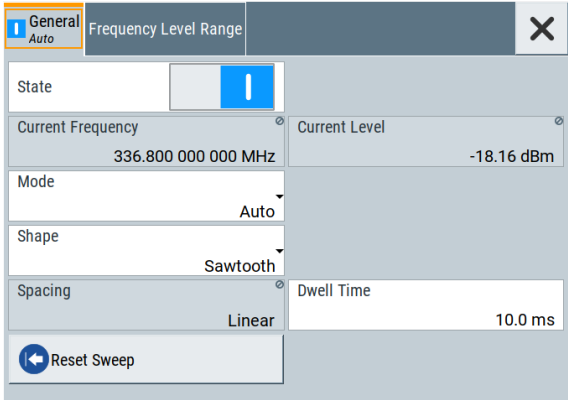
> "RF Frequency Sweep"	> "RF Combined Sweep"
	

Settings

State (RF frequency sweep).....	129
State (RF level sweep).....	129
State (RF frequency / level sweep).....	130
State (LF frequency sweep).....	130
Current Frequency.....	130
Current Level.....	130
Mode.....	130
Retrace.....	131
Shape.....	131
Spacing.....	133
Dwell Time.....	133
Trigger Slope.....	133
Show Connector.....	134
Reset Sweep.....	134
Execute Single Sweep.....	134

State (RF frequency sweep)

Activates RF frequency sweep signal generation.

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[:SOURce<hw>] :FREQuency:MODE on page 422

State (RF level sweep)

Activates RF level sweep signal generation.

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[:SOURce<hw>] :POWer:MODE on page 462

State (RF frequency / level sweep)

Activates the RF frequency / level sweep signal generation.

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[:SOURce<hw>] :FREQuency:MODE on page 422

[:SOURce<hw>] :POWer:MODE on page 462

State (LF frequency sweep)

Status of the LF frequency sweep signal.

You find this parameter in two dialogs:

- "LF Frequency Sweep" turns on/off the signal generation.
See [Sweep Mode Settings](#) for access.
- "Analog Modulation Sources" displays the current state (read-only). If it is turned on, this dialog provides the varying sweep frequency, see [Current Frequency](#).

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[:SOURce<hw>] :LFOutput:FREQuency:MODE on page 432

Current Frequency

Displays the current frequency sweep value for all sweep [Modes](#), except of [Mode > Step](#). In this mode, you can enter the next frequency setting manually.

Remote command:

[:SOURce<hw>] :FREQuency:MANual on page 424

[:SOURce<hw>] :LFOutput:FREQuency:MANual on page 432

Current Level

Displays the current level sweep value for all sweep [Modes](#), except of [Mode > Step](#). In this mode, you can enter the next level setting manually.

Remote command:

[:SOURce<hw>] :POWer:MANual on page 462

Mode

Selects the sweep mode.

See [Chapter 6.1, "Signal Generation and Triggering in the Sweep and List Modes"](#), on page 114.

- | | |
|--------------------------|--|
| "Auto" | Generates a continuously repeating sweep signal directly after activating the sweep mode.
The sweep steps are performed automatically, controlled by the dwell time. |
| "Single / Extern Single" | Generates a single sweep cycle after a trigger event.
The sweep steps within the cycle are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event. |

"Step / Extern Step"

Generates the sweep signal step-by-step, manually triggered.

"Extern Start/Stop"

Generates a continuously repeating sweep signal that is started, stopped, and restarted by subsequent external trigger events.

The sweep steps are performed automatically, controlled by the dwell time.

Remote command:

RF frequency sweep:

[:SOURce<hw>] :SWEep [:FREQuency] :MODE on page 476

:TRIGger<hw>:FSWEEP:SOURce on page 514

RF level sweep:

[:SOURce<hw>] :SWEep:POWer:MODE on page 475

:TRIGger<hw>:PSWEEP:SOURce on page 514

RF combined sweep:

[:SOURce<hw>] :SWEep:COMBined:MODE on page 482

:TRIGger<hw>:FPSWEEP:SOURce on page 515

LF frequency sweep:

[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :MODE on page 439

:TRIGger<hw>:LFFSWEEP:SOURce on page 514

Retrace

For "Shape = Sawtooth" and "Mode = Single/External Single", enables changing the signal to the start value while it is waiting for the next trigger event. It returns to the start level or start frequency until the next trigger is applied.

Remote command:

RF frequency sweep:

[:SOURce<hw>] :SWEep [:FREQuency] :RETRace on page 478

RF level sweep:

[:SOURce<hw>] :SWEep:POWer:RETRace on page 478

RF combined sweep:

[:SOURce<hw>] :SWEep:COMBined:RETRace on page 482

LF frequency sweep:

[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :RETRace on page 439

Shape

Selects the waveform shape of the sweep signal.

"Sawtooth"

The sweep runs from start to stop frequency. The subsequent sweep starts at the start value, i.e. the shape of the sweep sequence resembles a sawtooth.

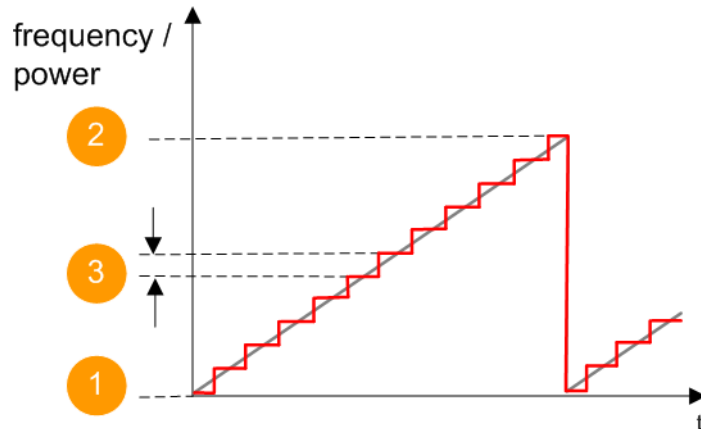


Figure 6-11: Sweep signal sawtooth shape

1 = Start value
2 = Stop value
3 = Step width

"Triangle"

The sweep runs from start to stop value and back, i.e. the shape of the sweep resembles a triangle. Each subsequent sweep starts at the start frequency.

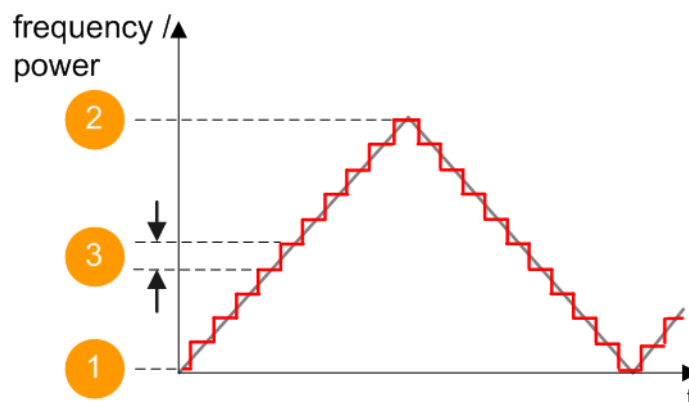


Figure 6-12: Sweep signal triangle shape

1 = Start value
2 = Stop value
3 = Step width

Remote command:

RF frequency sweep:

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:SHAPE](#) on page 478

RF level sweep:

[\[:SOURce<hw>\]:SWEep:POWEr:SHAPE](#) on page 478

RF combined sweep:

[\[:SOURce<hw>\]:SWEep:COMBined:SHAPE](#) on page 483

LF frequency sweep:

`[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :SHApe` on page 440

Spacing

In "RF and LF Frequency Sweep" mode, "Spacing " selects the mode for calculating the frequency interval, which increases or decreases the current frequency at each step.

To determine the step size, select the parameter [Step Linear/Step Logarithmic](#).

In "RF Combined Sweep" mode, the parameter indicates that the step intervals are linearly (straight proportional) distributed, i.e. the intervals have the same size. The frequency / level range and the [Dwell Time](#) time determine the calculated step size.

"Linear" Takes the frequency value entered as absolute value in Hz.

"Logarithmic" Takes the value entered as a logarithmic value, i.e. as a constant fraction of the current frequency in %.

Remote command:

RF frequency sweep:

`[:SOURce<hw>] :SWEep [:FREQuency] :SPACing` on page 477

RF combined sweep: n.a.

LF frequency sweep:

`[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :SPACing` on page 440

Dwell Time

Defines the duration of the individual sweep steps.

Note: In case of considerable overrun conditions, the R&S SMB100B turns off the sweep mode.

See also [Chapter 6.4, "Significant Parameters and Functions"](#), on page 126.

Remote command:

RF frequency sweep:

`[:SOURce<hw>] :SWEep [:FREQuency] :DWELl` on page 476

RF level sweep:

`[:SOURce<hw>] :SWEep:POWer:DWELl` on page 474

RF combined sweep:

`[:SOURce<hw>] :SWEep:COMBined:DWELl` on page 481

LF frequency sweep:

`[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :DWELl` on page 438

Trigger Slope

For "Mode = Extern Step/Single", selects the polarity of the active slope of an applied instrument trigger.

Trigger signal is expected at the Inst Trig connector.

"Positive" The rising edge of the trigger signal triggers the instrument.

"Negative" The falling edge of the trigger signal triggers the instrument.

Remote command:

`[:SOURce] :INPut:TRIGger:SLOPe` on page 428

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

Reset Sweep

Resets a sweep.

With the next trigger event, the sweep starts at the initial value.

Remote command:

`[:SOURce<hw>] :SWEep:RESet [:ALL]` on page 483

Execute Single Sweep

In "Mode = Single", starts a sweep manually.

Remote command:

RF frequency sweep:

`[:SOURce<hw>] :SWEep [:FREQuency] :EXECute` on page 478

`:TRIGger<hw>:FSWEEP [:IMMediate]` on page 515

RF level sweep:

`[:SOURce<hw>] :SWEep:POWer:EXECute` on page 478

`:TRIGger<hw>:PSWEEP [:IMMediate]` on page 516

RF combined sweep:

`[:SOURce<hw>] :SWEep:COMBined:EXECute` on page 481

LF frequency sweep:

`[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :EXECute` on page 438

`:TRIGger<hw>:LFFSWEEP:IMMediate` on page 515

General:

`:TRIGger<hw> [:SWEep] [:IMMediate]` on page 516

6.5.2 Frequency Range Settings

Access:

1. Select for example "Sweep" > "RF Frequency Sweep"
2. Select for example "Frequency Range".

> "Frequency Range"	> "Frequency / Level Range"														
<div> <div>General Single</div> <div>Frequency Range</div> <div>×</div> </div> <table> <tr> <td>Start Frequency 100.000 000 000 MHz</td> <td>Stop Frequency 500.000 000 000 MHz</td> </tr> <tr> <td>Center Frequency 300.000 000 000 MHz</td> <td>Span 400.000 000 000 MHz</td> </tr> <tr> <td colspan="2">Spacing Linear</td> </tr> <tr> <td colspan="2">Step Linear 1.000 000 000 MHz</td> </tr> </table>	Start Frequency 100.000 000 000 MHz	Stop Frequency 500.000 000 000 MHz	Center Frequency 300.000 000 000 MHz	Span 400.000 000 000 MHz	Spacing Linear		Step Linear 1.000 000 000 MHz		<div> <div>General Auto</div> <div>Frequency Level Range</div> <div>×</div> </div> <table> <tr> <td>Start Frequency 100.000 000 000 MHz</td> <td>Stop Frequency 500.000 000 000 MHz</td> </tr> <tr> <td>Start Level -30.00 dBm</td> <td>Stop Level -10.00 dBm</td> </tr> <tr> <td colspan="2">Step Count 501</td> </tr> </table>	Start Frequency 100.000 000 000 MHz	Stop Frequency 500.000 000 000 MHz	Start Level -30.00 dBm	Stop Level -10.00 dBm	Step Count 501	
Start Frequency 100.000 000 000 MHz	Stop Frequency 500.000 000 000 MHz														
Center Frequency 300.000 000 000 MHz	Span 400.000 000 000 MHz														
Spacing Linear															
Step Linear 1.000 000 000 MHz															
Start Frequency 100.000 000 000 MHz	Stop Frequency 500.000 000 000 MHz														
Start Level -30.00 dBm	Stop Level -10.00 dBm														
Step Count 501															

Settings

Start Frequency/Stop Frequency.....	135
Center Frequency.....	135
Span.....	135
Spacing.....	135
Step Linear/Step Logarithmic.....	136

Start Frequency/Stop Frequency

Defines the frequency sweep range by setting the start and end values.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Remote command:

RF frequency sweep:

[:SOURce<hw>] :FREQuency:STARt on page 426

[:SOURce<hw>] :FREQuency:STOP on page 426

RF combined sweep:

[:SOURce<hw>] :COMBined:FREQuency:STARt on page 480

[:SOURce<hw>] :COMBined:FREQuency:STOP on page 480

LF frequency sweep:

[:SOURce<hw>] :LFOutput:FREQuency:STARt on page 433

[:SOURce<hw>] :LFOutput:FREQuency:STOP on page 433

Center Frequency

In "RF Frequency Sweep" mode, sets the RF center frequency.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Remote command:

[:SOURce<hw>] :FREQuency:CENTer on page 425

Span

In "RF Frequency Sweep" mode, sets the span of the frequency sweep range.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Remote command:

[:SOURce<hw>] :FREQuency:SPAN on page 425

Spacing

In "RF and LF Frequency Sweep" mode, "Spacing " selects the mode for calculating the frequency interval, which increases or decreases the current frequency at each step.

To determine the step size, select the parameter [Step Linear/Step Logarithmic](#).

In "RF Combined Sweep" mode, the parameter indicates that the step intervals are linearly (straight proportional) distributed, i.e. the intervals have the same size. The frequency / level range and the [Dwell Time](#) time determine the calculated step size.

"Linear" Takes the frequency value entered as absolute value in Hz.

"Logarithmic" Takes the value entered as a logarithmic value, i.e. as a constant fraction of the current frequency in %.

Remote command:

RF frequency sweep:

`[:SOURce<hw>] :SWEep [:FREQuency] :SPACing` on page 477

RF combined sweep: n.a.

LF frequency sweep:

`[:SOURce<hw>] :LFOutput :SWEep [:FREQuency] :SPACing` on page 440

Step Linear/Step Logarithmic

In "RF/LF Frequency Sweep" mode, sets the step width for the individual frequency sweep steps. The value is added at each sweep step to the current frequency.

Depending on the current [Spacing](#), you can enter either an absolute or logarithmic step width.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

"Step Linear" The step width is a constant value in Hz.

"Step Logarithmic"

The step width is determined logarithmically in %, i.e. as a constant fraction of the current frequency.

Remote command:

`[:SOURce<hw>] :SWEep [:FREQuency] :STEP [:LINear]`
on page 479

`[:SOURce<hw>] :SWEep [:FREQuency] :STEP :LOGarithmic`
on page 479

`[:SOURce<hw>] :LFOutput :SWEep [:FREQuency] :STEP [:LINear]` on page 441



`[:SOURce<hw>] :LFOutput :SWEep [:FREQuency] :STEP :LOGarithmic` on page 440

6.5.3 Level Range Settings

Access:

1. Select "Sweep" > "RF Level Sweep"
2. Select for example "Level Range".

Table 6-8: Range settings dialog: Examples of RF Level and RF Combined Sweep dialogs
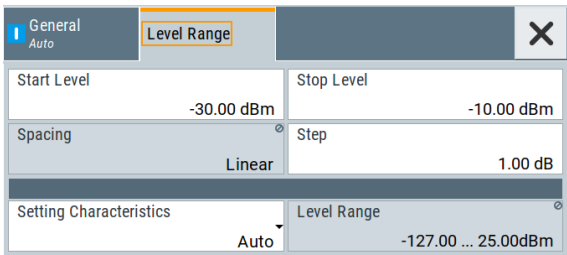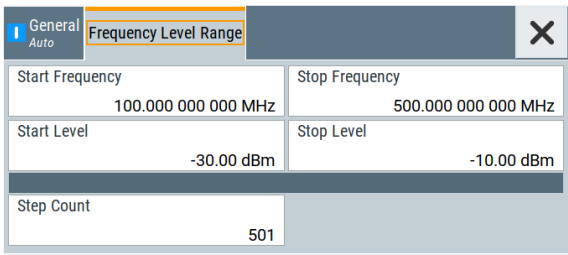
> "Level Range"	> "Frequency / Level Range"
	

Settings

Start Level / Stop Level.....	137
Step Count.....	137
Spacing.....	137
Step.....	137
Setting Characteristics.....	137
Level Range.....	138

Start Level / Stop Level

Defines the RF level sweep range by setting the start and end values.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Remote command:

RF level sweep:

[\[:SOURce<hw>\]:POWER:START](#) on page 463

[\[:SOURce<hw>\]:POWER:STOP](#) on page 463

RF combined sweep:

[\[:SOURce<hw>\]:COMBined:POWER:START](#) on page 480

[\[:SOURce<hw>\]:COMBined:POWER:STOP](#) on page 481

Step Count

In "RF Combined Mode", defines the number of sweeps to be executed in [Mode > Single](#).

To start the sweep cycles, select [Execute Single](#).

Remote command:

[\[:SOURce<hw>\]:SWEep:COMBined:COUNt](#) on page 481

Spacing

Indicates that the instrument distributes the level steps linearly (straight proportional), i.e. the level steps have the same size.

To determine the step size, use the parameter [Step](#).

Remote command:

n.a.

Step

Sets the step width for the RF level sweep in dB.

The "RF level sweep" mode increases or decreases the level value linearly by the set value.

Remote command:

[\[:SOURce<hw>\]:SWEep:POWER:STEP\[:LOGarithmic\]](#) on page 476

Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

"Auto"	<p>Sets the RF output level automatically according to the selected mode.</p> <p>In this mode, the instrument provides the highest dynamic range and fastest setting times, as specified in the data sheet.</p> <p>The RF signal is shortly blanked when the step attenuator is switching.</p>
"Uninterrupted"	<p>Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware specific switching points.</p> <p>This mode reduces the dynamic range of the instrument. The step attenuator is fixed.</p>
"Strictly Monotone"	<p>Executes signal level changes monotonically increasing or decreasing.</p> <p>The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.</p> <p>All electronic switches, which might affect the monotonicity are fixed.</p> <p>The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.</p>
"Constant-VSWR"	<p>Suppresses output impedance variations at the RF output connector, due to changed level settings.</p>
"User"	<p>Indicates that a setting has been modified in the expert mode. The expert mode is a protected function, that requires protection level 2 password.</p>

Remote command:

[\[:SOURce<hw>\]:POWER:LBEHaviour](#) on page 461

Level Range

Shows the interruption-free range of the level that you can use in the currently selected mode.

Remote command:

[\[:SOURce<hw>\]:POWER:RANGE:LOWer?](#) on page 466

[\[:SOURce<hw>\]:POWER:RANGE:UPPer?](#) on page 466

6.6 List Mode Settings

The "List Mode" dialog contains all the functions and settings for creating and handling lists with RF frequency/level pairs including the corresponding dwell times for generating the RF signal based on these values.


Access:

- ▶ Select "Sweep" > "List mode".
The dialog contains parameters for configuring the list mode processing, entering list mode data and transferring data files from or to the instrument.
The remote commands required to define these settings are described in [Chapter 12.14.6, "SOURce:LIST Subsystem"](#), on page 441.
- [General Settings](#)..... 139
- [List Mode Data Settings](#)..... 141
- [Import/Export Settings](#)..... 142

6.6.1 General Settings

Access:

- ▶ Select "Sweep" > "List mode".

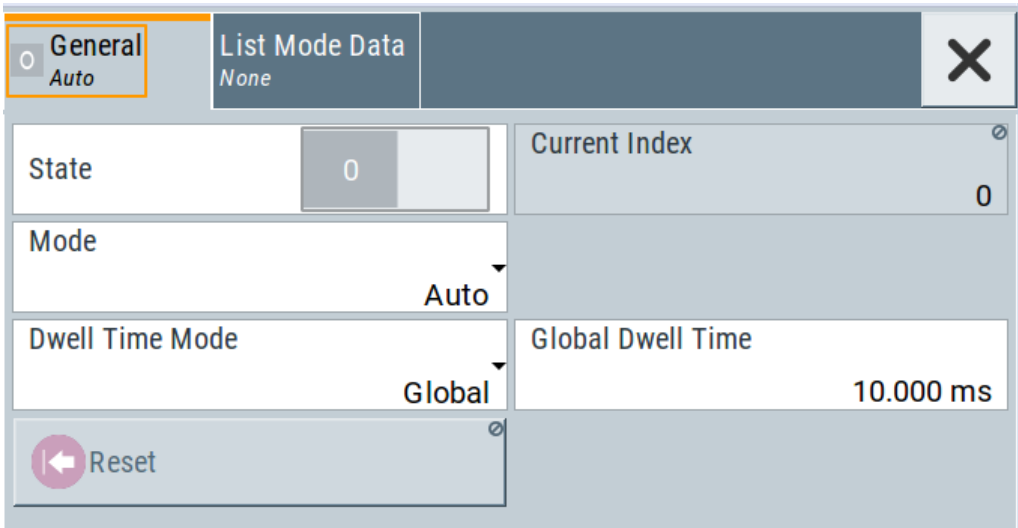

In the "General" tab, you can configure the trigger and dwell time modes for list processing and activate signal generation.

Settings

State	140
Current Index	140
Mode	140
Dwell Time Mode	140
Global Dwell Time	141
Trigger Slope	141
Reset	141
Execute Single	141

State

Activates the list mode and processes the currently selected list.

Note: Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

`[:SOURce<hw>] :FREQuency:MODE` on page 422

Current Index

Sets the list index for list processing in "Step" mode. In the other modes, the index indicates the current step.

Remote command:

`[:SOURce<hw>] :LIST:INDEX` on page 446

Mode

Selects the mode for list processing.

See [Chapter 6.1, "Signal Generation and Triggering in the Sweep and List Modes"](#), on page 114.

"Auto" Generates the signal by processing the frequency/level value pairs of the list from the beginning to the end.
The list steps are performed automatically, controlled by the dwell time. If you switch from any mode to "Auto", signal generation always starts at the top of the list.

"Single / Extern Single" Generates the signal by processing the frequency/level value pairs of the list once from the beginning to the end after a trigger event.
The list steps are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.

"Step / Extern Step" Generates the signal by processing the frequency/level value pairs of the list step-by-step, manually triggered.

Remote command:

`[:SOURce<hw>] :LIST:TRIGger:SOURce` on page 448

`[:SOURce<hw>] :LIST:MODE` on page 447

Dwell Time Mode

Selects either variable dwell times or a fixed dwell time to perform signal generation in list mode.

"Global" Uses the same dwell time for all lists steps, set with [Global Dwell Time](#).

"From List" Uses the dwell times from the list.
You can define the dwell time for each frequency/level value pair individually, see [Chapter 6.7, "List Editor"](#), on page 145.

Remote command:

`[:SOURce<hw>] :LIST:DWELL:MODE` on page 445

Global Dwell Time

Sets the dwell time for [Dwell Time Mode](#) > "Global".

Note: In case of considerable overrun conditions, the R&S SMB100B turns off the list mode.

See also "[Dwell time](#)" on page 127.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELL](#) on page 444

Trigger Slope

For "Mode = Extern Step/Single", selects the polarity of the active slope of an applied instrument trigger.

Trigger signal is expected at the Inst Trig connector.

"Positive" The rising edge of the trigger signal triggers the instrument.

"Negative" The falling edge of the trigger signal triggers the instrument.

Remote command:

[\[:SOURce\]:INPut:TRIGger:SLOPe](#) on page 428

Reset

Resets the list to the starting point.

Remote command:

[\[:SOURce<hw>\]:LIST:RESet](#) on page 451

Execute Single

Manually starts list processing in "Single" mode.


Remote command:

[\[:SOURce<hw>\]:LIST:TRIGger:EXECute](#) on page 448

6.6.2 List Mode Data Settings

Access:

1. Select "Sweep" > "List mode".
2. Select "List Mode Data".

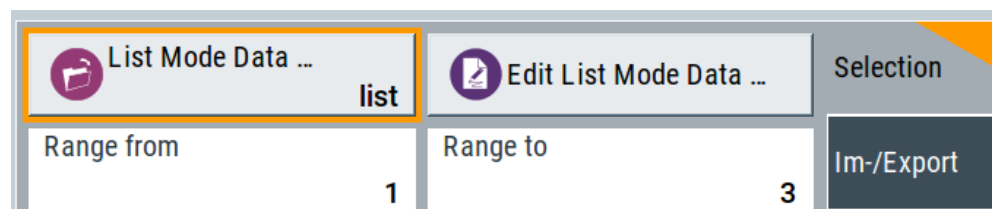

This dialog contains the parameters required for creating and editing lists, activating the learning function and selecting the list processing mode.

Settings

List Mode Data	142
Edit List Mode Data	142
List Range from/to	142

List Mode Data

Accesses the standard "Select List" dialog for selecting, creating and editing a list file. The currently loaded file is indicated.

You can create data lists with the internal editor or import externally created files, see ["Creating and handling lists"](#) on page 126.

Remote command:

[:SOURce<hw>] :LIST:CATalog? on page 450
 [:SOURce<hw>] :LIST:SElect on page 451
 [:SOURce<hw>] :LIST:DElete on page 450
 [:SOURce<hw>] :LIST:DElete:ALL on page 450

Edit List Mode Data

Opens the editor to insert and save data lists with RF frequency, power and dwell time values, see [Chapter 6.7, "List Editor"](#), on page 145.

You find this function also in standard file select dialog, accessed via [List Mode Data](#).

List Range from/to

Defines an index range in the current list by setting the start and stop index.

The instrument generates the signal with the values of the selected index range and ignores all other list entries.

Remote command:

[:SOURce<hw>] :LIST:INDEX:START on page 447
 [:SOURce<hw>] :LIST:INDEX:STOP on page 447

6.6.3 Import/Export Settings

Access:

1. Select "Sweep" > "List Mode".

2. Select "List Mode Data" > "Im-/Export".

The screenshot shows the 'Im-/Export' dialog box. The 'Mode' dropdown is set to 'Export'. The 'Selection' dropdown on the right is set to 'Im-/Export'. Under 'ASCII File Settings', 'Extension' is 'TXT', 'Decimal Point' is 'Point', and 'Column Separator' is 'Comma'. The 'Sel Source' field shows 'listmodedata' and the 'Sel ASCII Destination' field shows 'listexport.txt'. An 'Export' button is at the bottom right.

The "Im-/Export" dialog provides the parameters for importing or exporting files with user data in standard ASCII *.txt or *.csv file format.

The table separators and the decimal floating point numbers are customizable.

Settings

Mode.....	143
ASCII File Settings.....	143
Select (ASCII) Source/Select (ASCII) Destination.....	144
Select Source/Select ASCII Destination.....	144
Import / Export.....	144

Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

[:SOURCE<hw>] :LIST:DEXChange:MODE on page 454

[:SOURCE<hw>] :CORRection:DEXChange:MODE on page 420

[:SOURCE<hw>] :PULM:TRAIIn:DEXChange:MODE on page 403

ASCII File Settings

Defines the format and the separators of the associated data file.

"Extension" Selects *.csv or *.txt format.

"Decimal Point" Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.

"Column Separator" Sets the separator between the columns in an ASCII table.
Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

[:SOURce<hw>] :LIST:DEXChange:AFILe:EXTension on page 453
 [:SOURce<hw>] :LIST:DEXChange:AFILe:SEParator:DECimal on page 453
 [:SOURce<hw>] :LIST:DEXChange:AFILe:SEParator:COLumn on page 453
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:EXTension on page 419
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:SEParator:DECimal
 on page 420
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:SEParator:COLumn
 on page 420
 [:SOURce<hw>] :PULM:TRAIIn:DEXChange:AFILe:EXTension on page 404
 [:SOURce<hw>] :PULM:TRAIIn:DEXChange:AFILe:SEParator:DECimal
 on page 404
 [:SOURce<hw>] :PULM:TRAIIn:DEXChange:AFILe:SEParator:COLumn
 on page 404

Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[:SOURce<hw>] :LIST:DEXChange:AFILe:CATalog? on page 452
 [:SOURce<hw>] :LIST:DEXChange:AFILe:SElect on page 453
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:CATalog? on page 419
 [:SOURce<hw>] :CORRection:DEXChange:AFILe:SElect on page 419
 [:SOURce<hw>] :PULM:TRAIIn:DEXChange:AFILe:CATalog? on page 404
 [:SOURce<hw>] :PULM:TRAIIn:DEXChange:AFILe:SElect on page 405

Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[:SOURce<hw>] :LIST:DEXChange:SElect on page 454
 [:SOURce<hw>] :CORRection:DEXChange:SElect on page 421
 [:SOURce<hw>] :PULM:TRAIIn:DEXChange:SElect on page 405

Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[:SOURce<hw>] :LIST:DEXChange:EXECute on page 452
 [:SOURce<hw>] :CORRection:DEXChange:EXECute on page 420
 [:SOURce<hw>] :PULM:TRAIIn:DEXChange:EXECute on page 405

6.7 List Editor


The "User Correction" and "List Mode" dialogs provide a build-in list editor for defining the corresponding value pairs.

The table and navigation functions of the UCOR and list mode editors have the same structure and are therefore summarized below. The access is specified for both modes, the fields and functions are explained using the example of the list mode.

Access to "Edit List Mode Data":

- "Sweep" > "List Mode" > "List Mode Data" > "Edit List Mode Data"

The editor for list mode provides a table with RF frequency and power values, an extra column for defining variable dwell times, and standard navigation functions.

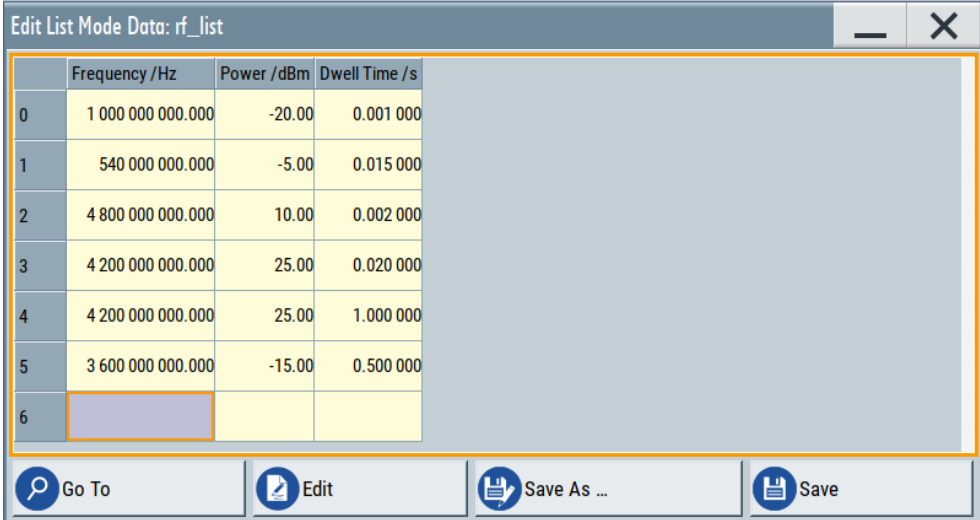

	Frequency / Hz	Power / dBm	Dwell Time / s
0	1 000 000 000.000	-20.00	0.001 000
1	540 000 000.000	-5.00	0.015 000
2	4 800 000 000.000	10.00	0.002 000
3	4 200 000 000.000	25.00	0.020 000
4	4 200 000 000.000	25.00	1.000 000
5	3 600 000 000.000	-15.00	0.500 000
6			

The remote commands required to define the list mode data are described in [Chapter 12.14.6, "SOURce:LIST Subsystem"](#), on page 441.

Access to "Edit User Correction Data":

- ▶ "Level" > "User Correction" > "Edit User Cor. Data"

Edit User Correction Data : ucor

	Frequency /Hz	Correction Value /dB
0	1 560 000 000.00	11.51
1	1 561 000 000.00	11.03
2	1 562 000 000.00	10.55
3	1 563 000 000.00	10.07
4	1 564 000 000.00	9.59
5	1 565 000 000.00	9.11
6		

Go To

Edit


Fill with Sensor ...

Save As ...

Save

The editor for user correction data provides a table with RF frequency and power values and standard navigation functions.

The remote commands required to define the user correction data are described in [Chapter 12.14.2, "SOURce:CORRection Subsystem"](#), on page 413.



All columns in a row must contain values. Cells with missing values are therefore filled automatically, using the value of the previous row.

If you use **global dwell time in list mode**, consider also that the instrument uses the value set with [Global Dwell Time](#) for all list steps and not the values from the list.

Since the table and navigation functions can be assumed to be known, the following description contains a brief overview, shown by the example of the "Edit List Mdoe Data" dialog. If a function relates to a particular dialog, it is explicitly stated.

Settings

Edit List Mode Data.....	146
Data handling keys.....	147
L Go To.....	147
L Edit.....	147
L Fill with Sensor.....	147
L Save As/Save.....	147
Fill.....	147

Edit List Mode Data

Table with values for list or user correction processing.

Note: Once you enter a value, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows are lost when saving. You can simply override these values.

"Frequency /Hz"

Sets the frequency values.

Remote command:

[\[:SOURce<hw>\]:LIST:FREQuency](#) on page 446

[\[:SOURce<hw>\]:CORRection:CSET:DATA:FREQuency](#)
on page 416

"Power /dBm" (list mode data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:LIST:POWer](#) on page 447

"Correction Value /dBm" (user correction data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer](#) on page 416

"Dwell /s"

In list mode, sets the dwell time values.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELL:LIST](#) on page 445

Data handling keys

Standard functions for file and data handling.

**Go To ← Data handling keys**

Selects a row for editing.

Edit ← Data handling keys

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling, see ["Fill..."](#) on page 93.

Fill with Sensor ← Data handling keys

Opens a dialog to configure the automatic filling of user correction data with an R&S NRP power sensor. Available in UCOR mode only.

See [Chapter 7.3.3, "Fill with Sensor"](#), on page 164

Save As/Save ← Data handling keys

Stores the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

Fill...

Provides parameters for filling a table automatically with user-defined values.

From 0	Range 4
Column To Fill Frequency /Hz	
Start Value 2.000 000 000 000 GHz	End Value 2.600 000 000 000 GHz
Increment Value 200.000 000 000 MHz	
<input checked="" type="checkbox"/> Fill	

To fill the table, select "Fill".

Note: Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

6.8 How to Generate a Signal in List or Sweep Mode

This section shows you how to configure a varying RF output signal for both, the list and sweep modes.

To configure the frequency sweep signal

- For a step-by-step description, see [Chapter 3.3.2, "Generating an RF Frequency Sweep Signal"](#), on page 41.

Example: Fast changing frequency and level settings in list mode

The following example shows you how to generate an amplitude modulated RF signal based on list mode data.

General workflow

Since any change of the hardware settings or list entries can affect the RF signal characteristics directly, we recommend that you proceed as follows:

1. Configure the modulation settings.
Activate the RF signal.
2. Wait until the hardware settings have settled.
3. Create a list file.
4. Configure the list mode.
5. Activate list mode.

To configure amplitude modulation and switch RF on

1. Press [Preset] to start from an initial state.
2. Select "Modulation" > "Amplitude Modulation > On".
3. Select "Level" > "RF ON" to activate RF signal generation.

To create list mode data

1. Select "Sweep" > "List Mode".
2. In the "List Mode Data" tab, select "List Mode Data > New".
3. Enter the filename `ListMode_Test` for the data list and confirm with "Ok".
The instrument creates a file and stores it in the `/var/user/` directory.
4. Select "Edit List Mode Data".
5. Enter the first values "Frequency > 2", "Power > 0" and "Dwell > 2".
6. Enter further frequency, power and dwell time values in the same way.
7. Select "Save" and close the dialog.

To configure the list mode and start signal generation

1. In the "General" tab, select "List Mode > Auto".
2. Select "Dwell Time Mode > From List".
3. Switch state to "On".
4. Select "General > State > On".

The instrument continuously generates an amplitude-modulated RF signal whose frequency and level values change according to the dwell times, as defined in the list.

With active list mode, the generator displays no frequency and level values in the status bar, but you can check the following parameters.

- In the list mode dialog, the current index indicates the steps of the signal generation.

- In remote control mode, you can query:
 - The current state with `[:SOURce<hw>] :LIST:RUNNing?`
 - Current parameters with the commands `FREQ?`, `POW?` and `LIST:DWEL?`.

7 Improving Level Performance

To adjust the RF output signal to specific needs in your application, the R&S SMB100B offers different functions:

- **Attenuator**

The R&S SMB100B is equipped with a step attenuator that enables you to vary the amplitude of the RF signal in a wide range. It is characterized by low VSWR (voltage standing wave ratio) over the full level and frequency range, and provides highest level accuracy and noise suppression.

See ["About the attenuator"](#) on page 151.

- **Automatic Level Control (ALC)**

The automatic level control system provides stable RF signals with highest absolute level accuracy over temperature and time.

See ["About ALC"](#) on page 154.

- **User correction (UCOR)**

The user correction function allows you to compensate frequency responses of external setups (e.g. losses of cables) and achieve a stable input signal over frequency directly at the DUT.

See ["About UCOR"](#) on page 156.

- **Power sensors**

The R&S SMB100B has excellent absolute level accuracy. Since a DUT is rarely connected directly to the generator, but with cables or other components, the reference level shifts from the RF output to the DUT. To calibrate this level with high accuracy, i.e. in the tenth dB range, you can connect an R&S NRP power sensor to the generator. The power sensor transmits its readings to the generator, which indicates these measurement results in the display. Thus you can adjust the RF output power of the generator until you reach the target level at the DUT.

See [Chapter 7.4, "Using Power Sensors"](#), on page 168

7.1 Attenuator

About the attenuator

The step attenuator is an electronic device without mechanical components, providing fast and wear free level settings.

According to the requirements of your application, you can select different attenuator characteristics.

The following are examples of test requirements and the corresponding configuration:


- **Automatic configuration**
Select standard operation mode ("Auto"), in which the generator adjusts the attenuation of the RF output signal automatically.
- **DUT tests under low signal to noise conditions**
Low output power is suitable to test the behavior of a DUT under low signal to noise conditions.

- Uninterrupted level settings with constant VSWR
 A fix attenuation value is required for obtaining uninterrupted level settings with constant VSWR.
 The configuration "RF Off Mode > Unchanged" ensures that constant VSWR is maintained if you turn the signal off and on again.
- Noise sensitive applications
 The parameter "RF OFF Mode > Full Attenuation" sets maximum attenuation and thus suppresses noise when you turn off the RF signal.

7.1.1 Attenuator Settings

Access:

- ▶ Select "Level" > "Level > Attenuator".

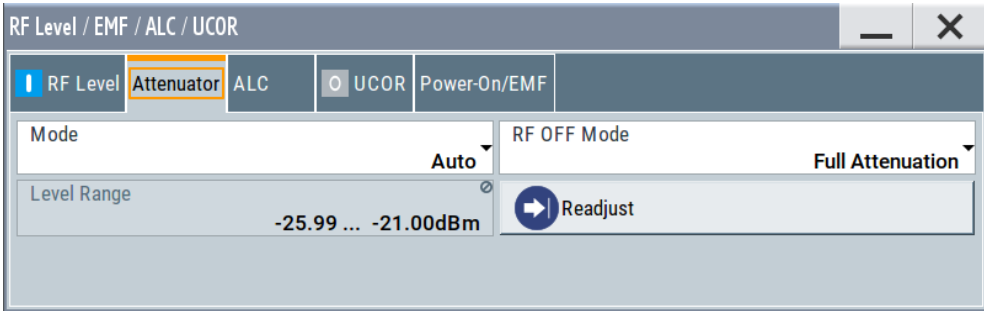

In the "Attenuator" dialog, you can select the operating mode of the electronic step attenuator.

The remote commands required to define these settings are described in [Chapter 12.12, "OUTPut Subsystem"](#), on page 362 and [Chapter 12.14.10, "SOURce:POWer Subsystem"](#), on page 458.

Settings

Mode.....	152
Level Range.....	153
RF OFF Mode.....	153

Mode

Determines the operating mode of the step attenuator.

"Auto" Adjusts the attenuator settings automatically.

"Fixed" Fixes the attenuator and amplifier paths for the current RF level and provides signal output with constant output VSWR. The resulting level range is indicated under "[Level Range](#)" on page 153.

Remote command:

:OUTPut<hw>:AMODE on page 363

Level Range

Shows the interruption-free range of the level that you can use in the selected mode.

Remote command:

`:OUTPut<hw>:AFIXed:RANGe:LOWer?` on page 364

`:OUTPut<hw>:AFIXed:RANGe:UPPer?` on page 364

RF OFF Mode

Determines the state of the step attenuator, when the RF signal is switched off.

The setting is not affected by an instrument preset ([Preset] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.

"Unchanged" Freezes the setting of the step attenuator.
Use this mode if a constant VSWR (Voltage Standing Wave Ratio) is required.

"Full Attenuation" Switches to the maximum attenuation.
Use this mode for applications that require a high level of noise suppression.

Remote command:

`[:SOURce<hw>] :POWER:ATTenuation:RFOff:MODE` on page 460

7.1.2 Reverse Power Protection

The R&S SMB100B is equipped with a reverse power protection circuit.

The reverse power protection is tripped when the power of signals reflected from the load or external signals applied to the RF output get too high. A relay opens and interrupts the internal connection to the RF output. This condition is indicated in the status bar by the "Overload" status message.

Overload

If an "Overload" status message is indicated in the status bar, perform the following:

- Remove the cause for the overload
- Press the [RF on/off] key to reset the overload protection

The RF input is activated when the overload protection is reset.

Remote command:

`:OUTPut<hw>:PROTection:TRIPped?` on page 364

`:OUTPut<hw>:PROTection:CLEar` on page 364

7.2 Automatic Level Control (ALC)

The R&S SMB100B is equipped with an automatic level control (ALC) unit to obtain best RF level accuracy.

About ALC

ALC is an adaptive control system to stabilize the RF output level. It continuously monitors the current level and adjusts it to keep a steady state over temperature and time.

ALC is active in almost all applications by default. However, when **pulse modulation** with short pulses is used, the ALC uses table-based level settings with table values depending on the pulse width.

Also note that ALC can detect incorrect values in **multi-transmitter** test setups. If multiple generators are coupled, reverse power can affect the ALC readings, which leads to an incorrect RF output power.

ALC states and their effects

The following description basically explains the ALC states and their principle of operation:


- "Auto"
Adjusts the output level to the operating conditions automatically. ALC is active in almost all operating modes.
- "On"
Activates the internal level control permanently, regardless of the operating conditions.
Note: This mode is not useful for pulse modulation with narrow pulses and low repetition rates, since the automatic level control cannot settle in time. Set ALC "Table & On" instead.
- "Off (Sample & Hold)"
Deactivates ALC, but still allows you to maintain a constant output level. The R&S SMB100B switches briefly in the CW mode and enables ALC to adjust the level to the set target value. The instrument freezes this setting, turns off ALC again, and switches back to the operating mode.
- "Off (Table)"
Deactivates internal level control loop. The instrument calculates every level setting using the attenuation values from the internal (ALC) table. Level attenuation between two table values is done with linear interpolation. This mode enables you to perform a fast and strictly monotonic, but not quite as precise level adjustment.
- "Table & On"
Starts with the associated value of the internal level table and then activates the automatic level control. This mode achieves maximum level accuracy and fast setting times.
If pulse modulation is applied, this mode ensures fast level settings even with narrow pulses at low repetition rate.

The R&S SMB100B displays the level control setting as a status message in the info line.

7.2.1 ALC Settings

Access:

► Select "Level" > "Automatic Level Control".

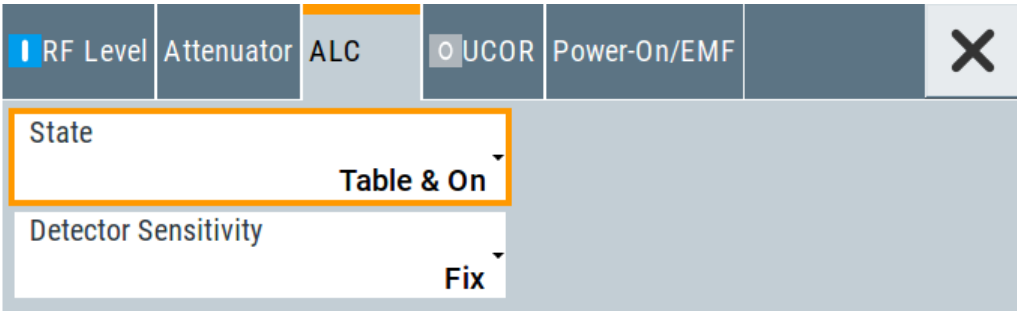

In the "ALC" dialog, you can configure the settings for the automatic level control of the RF signal to achieve optimal accuracy.

The remote commands required to define these settings are described in [Chapter 12.14.10, "SOURCE:POWER Subsystem"](#), on page 458.

Settings

State.....	155
Detector Sensitivity.....	155

State

Selects the internal level control mode.

- "Auto" Selects the most appropriate ALC mode automatically.
- "On" Activates ALC permanently.
- "Off (Sample & Hold)"
 Deactivates the ALC, but allows you to recalibrate the level at each frequency and level change. The value remains up to the next change.
- "Off (Table)"
 Controls the level using the attenuation values of the internal ALC table.
- "Table & On"
 Starts with the attenuation setting from the internal ALC table and continues with automatic level control.

For further details on the individual settings, an overview of the functionality and details on what is to be considered, see ["ALC states and their effects"](#) on page 154.

Remote command:
`[:SOURCE<hw>] :POWER:ALC [:STATe]` on page 459

Detector Sensitivity

Determines the path of the internal level detector.

The level detector of the ALC has multiple paths distinguished by their sensitivity.

"Auto"	Selects the detector path automatically, according to the given level. This mode is the recommended operation mode.
"Low"	Selects the detector path with low sensitivity. This setting is intended for signals with high internal electronic levels.
"Med"	Selects the path with medium sensitivity. This setting corresponds to normal mode. It is intended for signals with medium internal electronic levels.
"High"	Selects the detector path with high sensitivity, intended for signals with low internal electronic levels.
"Fix"	Fixes the last set sensitivity setting.

Remote command:

`[:SOURce<hw>] :POWER:ALC:DSensitivity` on page 460

7.3 User Correction

The R&S SMB100B supports a correction function to compensate external losses, caused, for example, by the RF cable, to achieve a precise target input level at the DUT.

The signal at the RF outputs of the R&S SMB100B is flat. However, the DUT is usually not connected directly to the outputs of the instrument but rather via connecting cables. Components like cables, power combiners, switches or mixers can affect the signal flatness at the DUT input.

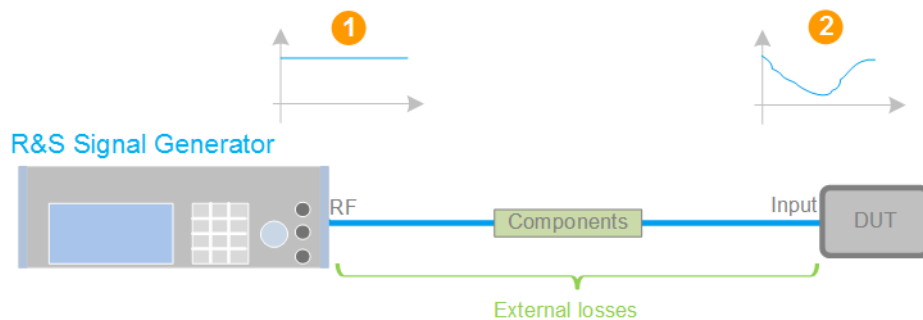


Figure 7-1: Effect of external losses on the signal flatness at the DUT input

DUT = Device under test

Components = Designation of all components between the measurement equipment and the DUT, e.g. cables

1 = Flat signal at the outputs of the R&S SMB100B

2 = Signal received at the DUT, incl. the external losses

About UCOR

User correction (UCOR) is a method that determines the external level loss over a frequency range in advance, see [Figure 7-2](#).

The difference between the generator output level and the level at the DUT determines the correction value at the respective frequency. Alternatively, the attenuation characteristics over a certain frequency range of, for example, RF cables are also specified in the associated data sheet.

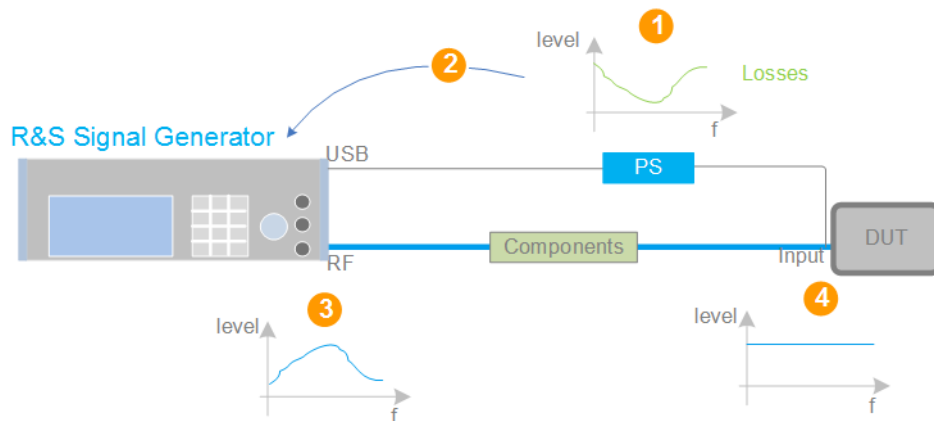


Figure 7-2: Understanding the principle of user correction

- | | |
|-----------------|--|
| DUT | = Device under test |
| Compo-
nents | = Designation of all components between the measurement equipment and the DUT, e.g. cables |
| PS | = Power sensor, e.g. R&S NRP, connected at the DUT's input and the USB connector of the R&S SMB100B |
| 1 | = Power sensor measures the level over a frequency range, where the collected values correspond to the losses caused by the components between the R&S SMB100B and the DUT |
| 2 | = Obtain the correction data by inverting the collected data; load the correction parameters in the R&S SMB100B |
| 3 | = In the R&S SMB100B, the RF signal is pre-processed with the correction values so that the signal at the outputs is the inverted version of the external losses |
| 4 | = Received at the DUT input, the pre-processed signal is flat |

With active **UCOR**, the generator adds the correction value internally and thus increases the output level by exactly the amount of the loss between its output and the DUT. For frequencies which are not contained in the list, the level correction is calculated by interpolation of the closest correction values.

Possible ways for configuring the user correction values

You can configure correction values in the following ways:

- **Internally**

- Use the built-in table editor in the "UCOR > Edit User Correction Data" dialog. Once defined, user correction values can be saved in a file. Files with correction data can be exported, for example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
- Using the corresponding remote-control commands. Note that you have to create a user correction file first.

- **Externally**

Create a file with correction values as a CSV file with Microsoft Excel, with a Notepad or a similar tool and save it with the predefined extension. Transfer the file to and load it into the instrument.

UCOR file format

Files containing correction data are simple files in text or comma-separated value (CSV) file format. The filename is user-definable; the file extension is *.ucor.

The file contains a list of correction values, one row per frequency and correction value pair; a new line indicator separates the correction values.

For file handling, use the standard functions in the "File Manager", see [Chapter 9.8, "Using the File Manager"](#), on page 209.

Collecting correction data

To fill the frequency and power values in the correction table, use one of the following options:

- **Manually**, row by row.
- Fill the table **automatically** with linearly interpolated values, calculated from value range and step size.
- Acquire the real frequency response characteristics of the used component with the **R&S NRP power sensor**, see [Understanding the principle of user correction](#).

Using a power sensor for frequency response measurements

Consider the following when using R&S NRP power sensors to measure the correction values:

- Measure the level directly at the input of the DUT.
- Use the internal correction functions of an R&S NRP power sensor to increase the measurement accuracy.
- Use S-parameter to consider the impact of any two-port device like an adapter between the signal generator and the sensor input.



Interactions and characteristics

Activated user correction is effective in all operating modes.

The RF output level (Level_{RF}) is the sum of the level value and the correction for the particular frequency:


$$\text{Level}_{\text{RF}} = \text{"Status bar > Level"} + \text{"UCOR"}$$

Activated user correction is indicated by the status indication "Lev Ucor" in the "Level" tile.

7.3.1 User Correction Settings

Access:

1. Select "Level" > "User Correction".
2. If you already have created a file with user correction data:
 - a) Select "UCOR Data > navigate to the file *.uco > Select".
 - b) Proceed with [step 4](#).
3. If you need to create a file:
 - a) Select "UCOR Data > New".
 - b) Enter the filename `UCOR_Data` and confirm with "Ok".
 - c) Choose the file and confirm with "Select".
 - d) Select "Edit UCOR Data".
 - e) To fill the user correction data table, proceed as described in [Chapter 6.7, "List Editor"](#), on page 145.
4. Select "RF Level > RF State > On".
5. Select "User Cor. Data > State > On".

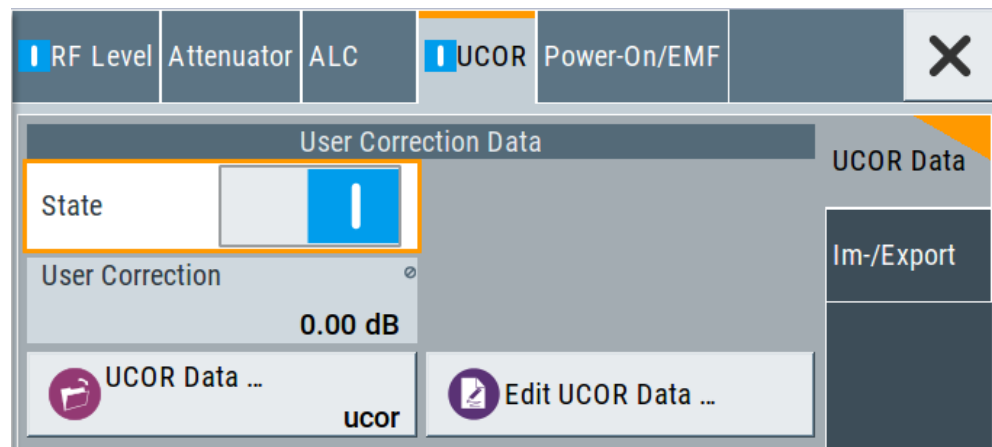

The "UCOR" dialog contains all settings for creating and handling files with user-defined level correction values.

The remote commands required to define these settings are described in [Chapter 12.14.2, "SOURCE:CORRection Subsystem"](#), on page 413.

Settings

State	160
User Correction	160
UCOR Data	160
Edit UCOR Data	160

State

Activates user correction.

The R&S SMB100B displays the status icon "Lev Ucor" in the "Level" panel.

Remote command:

[\[:SOURce<hw>\]:CORRection\[:STATe\]](#) on page 418

User Correction

Indicates the corrected level value for a specific frequency point.

Remote command:

[\[:SOURce<hw>\]:CORRection:VALue?](#) on page 417

UCOR Data

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

Files with user correction values are files with predefined file extension *.uco. When a file is selected, the dialog indicates the filename.

You can create the file internally in the table editor or externally.

- To select an existing file, select "Select List > navigate to the file *.uco > Select"
- Use the general editor function to create internally new file or to edit an existing one.
- Use the standard file manager function to load externally created files to the instrument.

Remote command:

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 418

[\[:SOURce<hw>\]:CORRection:CSET\[:SElect\]](#) on page 417

[\[:SOURce\]:CORRection:CSET:DElete](#) on page 419

Edit UCOR Data

Opens the build-in table editor to define a new correction table or edit an existing one.

See also:

- [Chapter 6.7, "List Editor"](#), on page 145
- ["Fill..."](#) on page 93
- [Chapter 7.3.3, "Fill with Sensor"](#), on page 164

7.3.2 List Editor

The "User Correction" and "List Mode" dialogs provide a build-in list editor for defining the corresponding value pairs.

The table and navigation functions of the UCOR and list mode editors have the same structure and are therefore summarized below. The access is specified for both modes, the fields and functions are explained using the example of the list mode.

Access to "Edit List Mode Data":

- "Sweep" > "List Mode" > "List Mode Data" > "Edit List Mode Data"

The editor for list mode provides a table with RF frequency and power values, an extra column for defining variable dwell times, and standard navigation functions.

	Frequency /Hz	Power /dBm	Dwell Time /s
0	1 000 000 000.000	-20.00	0.001 000
1	540 000 000.000	-5.00	0.015 000
2	4 800 000 000.000	10.00	0.002 000
3	4 200 000 000.000	25.00	0.020 000
4	4 200 000 000.000	25.00	1.000 000
5	3 600 000 000.000	-15.00	0.500 000
6			

Go To Edit Save As ... Save

The remote commands required to define the list mode data are described in [Chapter 12.14.6, "SOURCE:LIST Subsystem"](#), on page 441.

Access to "Edit User Correction Data":

- "Level" > "User Correction" > "Edit User Cor. Data"

	Frequency /Hz	Correction Value /dB
0	1 560 000 000.00	11.51
1	1 561 000 000.00	11.03
2	1 562 000 000.00	10.55
3	1 563 000 000.00	10.07
4	1 564 000 000.00	9.59
5	1 565 000 000.00	9.11
6		

Go To Edit Fill with Sensor ... Save As ... Save

The editor for user correction data provides a table with RF frequency and power values and standard navigation functions.

The remote commands required to define the user correction data are described in [Chapter 12.14.2, "SOURCE:CORRection Subsystem"](#), on page 413.



All columns in a row must contain values. Cells with missing values are therefore filled automatically, using the value of the previous row.

If you use **global dwell time in list mode**, consider also that the instrument uses the value set with **Global Dwell Time** for all list steps and not the values from the list.

Since the table and navigation functions can be assumed to be known, the following description contains a brief overview, shown by the example of the "Edit List Mode Data" dialog. If a function relates to a particular dialog, it is explicitly stated.

Settings

Edit List Mode Data.....	162
Data handling keys.....	162
L Go To.....	163
L Edit.....	163
L Fill with Sensor.....	163
L Save As/Save.....	163
Fill.....	163

Edit List Mode Data

Table with values for list or user correction processing.

Note: Once you enter a value, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows are lost when saving. You can simply override these values.

"Frequency /Hz"

Sets the frequency values.

Remote command:

[\[:SOURce<hw>\]:LIST:FREQuency](#) on page 446

[\[:SOURce<hw>\]:CORRection:CSET:DATA:FREQuency](#)
on page 416

"Power /dBm" (list mode data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:LIST:POWer](#) on page 447

"Correction Value /dBm" (user correction data table)

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer](#) on page 416

"Dwell /s"

In list mode, sets the dwell time values.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELL:LIST](#) on page 445

Data handling keys

Standard functions for file and data handling.

**Go To ← Data handling keys**

Selects a row for editing.

Edit ← Data handling keys

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling, see "Fill..." on page 93.

Fill with Sensor ← Data handling keys

Opens a dialog to configure the automatic filling of user correction data with an R&S NRP power sensor. Available in UCOR mode only.

See [Chapter 7.3.3, "Fill with Sensor"](#), on page 164

Save As/Save ← Data handling keys

Stores the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

Fill...

Provides parameters for filling a table automatically with user-defined values.

From 0	Range 4
Column To Fill Frequency /Hz	
Start Value 2.000 000 000 000 GHz	End Value 2.600 000 000 000 GHz
Increment Value 200.000 000 000 MHz	
<input checked="" type="button" value="Fill"/>	

To fill the table, select "Fill".

Note: Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

- "Start Value / End Value"


Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.
- "Increment Value"

Determines the step size.
- "Fill"

Fills the column specified in "Column To fill".

7.3.3 Fill with Sensor

- Access:
1. Select "Level" > "User Correction".
 2. Select "UCOR Data > navigate to the file *.ucor > Select".
 3. Select "Edit UCOR Data > Fill With Sensor..."

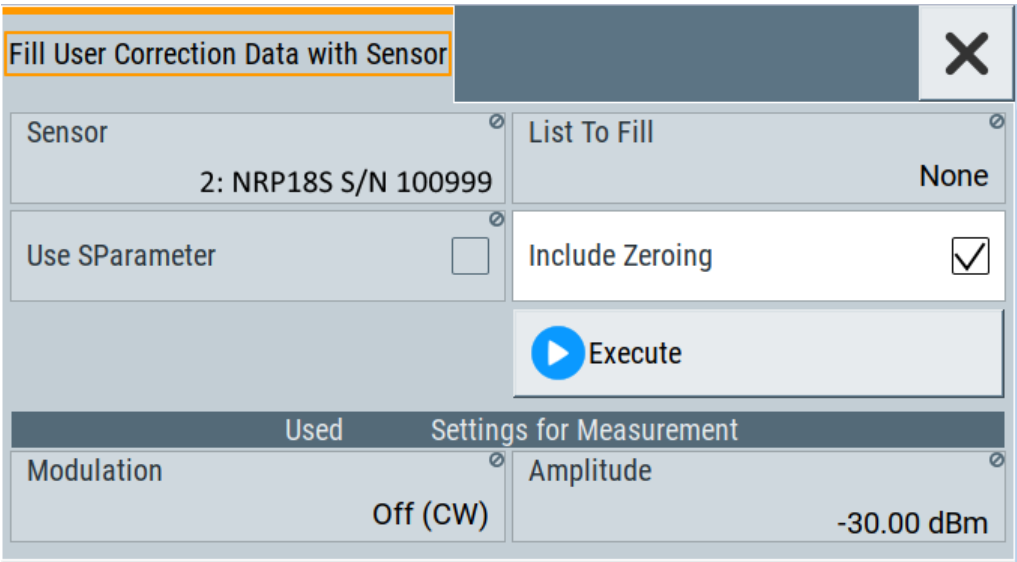

This dialog contains parameters for filling a table automatically with sensor readings.

- To fill the table, select "Execute".

For information on power sensors an how to use them, see [Chapter 7.5, "How to Calibrate the Power Level with an R&S NRP Power Sensor"](#), on page 180.

Settings

Fill User Correction Data with Sensor.....

164

Used SMBB Settings For Measurement.....

165

Fill User Correction Data with Sensor

• "Sensor"

- Displays connected sensors for selection.
- "List To Fill"
Indicates the used list.
- "Use SParameter"
Indicates whether SParameter correction in the R&S NRP power sensor is used.
- "Include Zeroing"
Performs a zeroing procedure before acquiring the user correction data to improve precision.
No signal is applied to the sensor during zeroing. RF output is temporarily switched off during that time.
When unchecked, the zeroing procedure is skipped. However, the RF signal level might be blanked shortly. This setting is useful if blanking of RF is undesirable or the absence of power at the sensor cannot be guaranteed.
- "Execute"

The "Execute" button is only enabled if a sensor is detected and the user correction list contains at least one frequency value.

Remote command:

`[:SOURce<hw>] :CORRection:ZERoing:STATe` on page 418

`[:SOURce<hw>] :CORRection:CSET:DATA [:SENSor<ch>] [:POWer] :SONCe`
on page 417

Used SMBB Settings For Measurement

Displays the settings relevant for the measurement.

"Modulation" Indicates the modulation state

"Amplitude" Shows the currently set level.

Remote command:

n.a.

7.3.4 Import/Export List Files

Access:

1. Select one of the following:
 - "Sweep" > "List mode".
 - "Level" > "User Correction".
 - "Modulation > Pulse Modulation > Pulse Generator > Pulse Mode = Train".

2. Select "Import/Export".

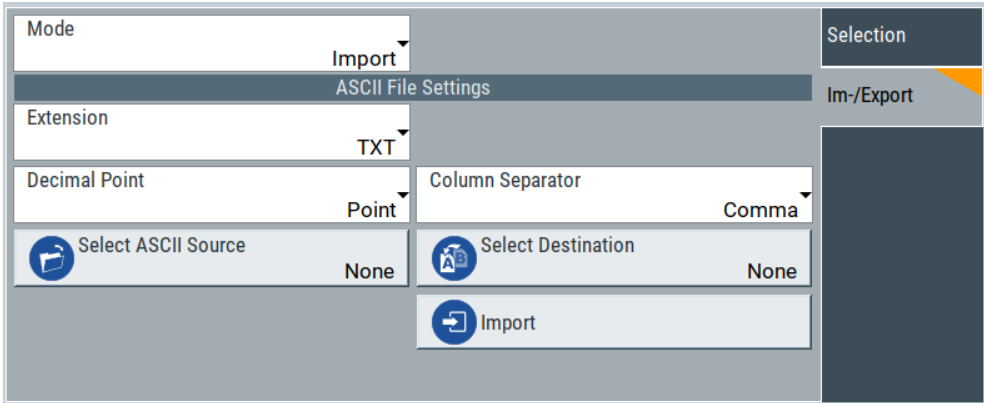


Figure 7-3: Im-/Export dialog (example with UCOR settings)

The "Import/Export" dialog contains all functions and settings to import externally created list data or to export it accordingly. You can process and store a list in the formats *.txt (ASCII), or *.csv (plain text with identical sequence of fields). The table separators and the decimal floating point numbers are customizable.

Settings

Mode.....	166
ASCII File Settings.....	166
Select (ASCII) Source/Select (ASCII) Destination.....	167
Select Source/Select ASCII Destination.....	167
Import / Export.....	167

Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

```
[ :SOURce<hw> ] :LIST:DEXChange:MODE on page 454
[ :SOURce<hw> ] :CORRection:DEXChange:MODE on page 420
[ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:MODE on page 403
```

ASCII File Settings

Defines the format and the separators of the associated data file.

- "Extension" Selects *.csv or *.txt format.
- "Decimal Point" Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.
- "Column Separator" Sets the separator between the columns in an ASCII table. Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

```
[ :SOURce<hw> ] :LIST:DEXChange:AFIle:EXTeNsion on page 453
[ :SOURce<hw> ] :LIST:DEXChange:AFIle:SEParator:DECimal on page 453
```

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:SEParator:COLumn](#) on page 453

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:EXTension](#) on page 419

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:SEParator:DECimal](#)

on page 420

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:SEParator:COLumn](#)

on page 420

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:EXTension](#) on page 404

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:SEParator:DECimal](#)

on page 404

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:SEParator:COLumn](#)

on page 404

Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:CATalog?](#) on page 452

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:SElect](#) on page 453

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:CATalog?](#) on page 419

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:SElect](#) on page 419

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:CATalog?](#) on page 404

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:SElect](#) on page 405

Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:SElect](#) on page 454

[\[:SOURCE<hw>\]:CORRection:DEXChange:SElect](#) on page 421

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:SElect](#) on page 405

Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:EXECute](#) on page 452

[\[:SOURCE<hw>\]:CORRection:DEXChange:EXECute](#) on page 420

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:EXECute](#) on page 405

7.4 Using Power Sensors

The R&S SMB100B works with most of the R&S NRP power sensors and thus supports various application tasks. Using power sensors, you can for example determine attenuation characteristics of downstream equipment or cables. You can use the measured values to compensate the losses with internal control functions or with an external control circuit in real time.

R&S NRP sensors are highly accurate standalone measuring devices, suitable for a wide range of applications. The devices communicate directly with the signal generator, calculate the average or peak power internally, include S-parameter correction and return the measurement results to the generator.

The R&S SMB100B works with any sensor of the R&S NRP series and can perform up to four power measurements simultaneously.



Check the firmware version of the R&S NRP sensors regularly. Update the firmware, if necessary.

For updates, see the Rohde & Schwarz website <http://www.rohde-schwarz.com> in section "Power Meters & Voltmeters".

- [Connecting R&S NRP Power Sensors to the R&S SMB100B](#)..... 168
- [NRP Sensor Mapping](#)..... 169
- [NRP Power Viewer](#)..... 172

7.4.1 Connecting R&S NRP Power Sensors to the R&S SMB100B

R&S NRP sensors are connected to the R&S SMB100B in the following ways:

- Connection to the USB connector
Requires the following cables, depending on the used sensor type:
 - R&S NRP-ZKU (USB interface cable) for R&S NRPxx power sensors
 - R&S NRP-Z3 or R&S NRP-Z4 (USB adapter cables) for sensors of the R&S NRP-Zxx family
- Connection via R&S NRP-Z5 sensor hub
The R&S NRP-Z5 USB sensor hub (high-speed USB 2.0) can host up to 4 R&S NRP sensors. It provides simultaneous internal and external triggering of all connected sensors.
Requires additional cables, depending on the used output connector of the hub. Choose one of the following:
 - Short extension cable R&S NRP-Z2 for connection to the sensor connector. This six-pole connection provides the external trigger capability.
 - Standard USB cable (USB type A to USB type B) to any USB type A connector of the R&S SMB100B. This connection does not support external triggering.
- Connection via USB hub with external power supply unit
Requires the following cables, depending on the used sensor type:
 - R&S NRP-ZKU (USB interface cable) for R&S NRPxx power sensors

- R&S NRP-Z3 or R&S NRP-Z4 (USB adapter cables) for sensors of the R&S NRP-Zxx family
- Connection via LAN for R&S NRPxxxSN/xxxTN/xxxAN power sensors
Using the Ethernet interface requires PoE (Power over Ethernet) to provide the electrical power.
To establish the connection, you can use:
 - A PoE Ethernet switch, e.g. R&S NRP-ZAP1 and an RJ-45 Ethernet cable.
 - A PoE injector and an RJ-45 Ethernet cable.

For details, see the description R&S®NRP®Series Power Sensors Getting Started.

Detection and mapping

The R&S SMB100B automatically detects a connected R&S NRP power sensor and indicates it in the "NRP Power Viewer" and "NRP Sensor Mapping" dialogs.

By default, sensors 1 to 4 are assigned to the sensors at the USB connectors, according to their sequence of connection.

You can change the default mapping in the [NRP Sensor Mapping](#) dialog.



On connection, the R&S SMB100B immediately starts the measurement of a detected R&S NRP power sensor. If you perform an instrument preset ([Preset] key or *RST), the R&S SMB100B stops the measurements. The connection and the mapping of the power sensors remain, the measurements must be restarted.

7.4.2 NRP Sensor Mapping

The "NRP Sensor Mapping" lists all R&S NRP sensors detected by the instrument.



Any R&S NRP sensor that supports the USB legacy protocol and is connected to one of the USB interfaces, is detected automatically and added to the list. Vice versa, the R&S SMB100B removes a sensor from the list, when it is disconnected.

R&S NRP sensors that are connected via LAN or use the USBTMC protocol are not automatically detected. They are detected by the scan search function.

Access:

- Select "Power Sens" > "NRP Sensor Mapping".

NRP Sensor Mapping

	Sensor Name	Protocol	Connector	Mapping
1	NRP40TN-100999	Visa		
2	NRQ6-900037	Visa		

Scan

Start

Clear

Hide 'Add Sensor'

Add Sensor

IP Address or Host Name

NRQ6-900037

Add LAN Sensor

Device ID or Sensor Name

NRQ6

Serial Number

900037

Add USBTMC Sensor

The dialog lists all detected R&S NRP sensors for selection and mapping. You can also browse the network for sensors.

The detected sensors are characterized by the used protocol and the corresponding connector icon. In the "Mapping" column, you can assign the sensor to one of the available sensor channels. The list can contain several entries but the R&S SMB100B can only use up to four sensors simultaneously.

The remote commands required to define these settings are described in [Chapter 12.13, "SENSe, READ, INITiate and SLISt Subsystems"](#), on page 365.

Settings

Sensor Mapping List.....	170
Scan.....	171
Clear.....	171
Add Sensor/Hide 'Add Sensor'.....	171
Add Sensor settings.....	171
L Add LAN Sensor settings.....	171
L Add USB Sensor settings.....	171

Sensor Mapping List

Displays a list of all sensor entries with information on the sensor name, the used protocol, the connector and the assigned mapping.

If a sensor is connected via LAN or uses the USBTMC protocol, its protocol is indicated as "Visa".

Remote command:

- :SLISt[:LIST]? on page 368
- :SLISt:ELEMent<ch>:MAPPing on page 370
- :SLISt:SENSor:MAP on page 370

Scan

Scans the network and the USB connections for sensors connected using the VISA communication protocol, i.e. sensors that are addressed over LAN or USBTMC.

The instrument detects sensors communicating over the USB legacy protocol automatically.

Remote command:

`:SLIST:SCAN[:STATe]` on page 368

Clear

Removes the selected sensor from the sensor mapping list.

Remote command:

`:SLIST:CLEAr:LAN` on page 369

`:SLIST:CLEAr:USB` on page 369

`:SLIST:CLEAr[:ALL]` on page 370

Add Sensor/Hide 'Add Sensor'

Shows or hides the "Add Sensor" settings.

Add Sensor settings

Configures settings to add sensors connected to the R&S SMB100B via USB or LAN.

Add LAN Sensor settings ← Add Sensor settings

Configures settings to add sensors connected to the R&S SMB100B via LAN.

"IP Address or Host Name"

Displays the host name or the IP address of a R&S NRP power sensor.

If the R&S SMB100B does not detect a connected R&S NRP sensor, you can assign the address information manually.

"Add LAN Sensor"

Adds a detected R&S NRP sensor connected in the LAN to the list of sensors, including its device ID or name and its serial number.

Remote command:

`:SLIST:SCAN:LSENsor` on page 368

Add USB Sensor settings ← Add Sensor settings

Configures settings to add sensors connected to the R&S SMB100B via USB.

"Device ID or Sensor Name"

Displays the device identifier or the name of the R&S NRP power sensor.

If the R&S SMB100B does not detect a connected R&S NRP sensor, you can assign the ID or name manually.

"Serial Number"

Displays the serial number of the R&S NRP power sensor.

If the R&S SMB100B does not detect a connected R&S NRP sensor, you can assign the serial number manually.

"Add USBTMC Sensor"

Adds a detected R&S NRP sensor connected at the USB interface to the list of sensors, including its device ID or name and its serial number.

Remote command:

`:SLIST:SCAN:USENSor` on page 369

7.4.3 NRP Power Viewer

The R&S SMB100B features the power viewer function for measuring or monitoring signals with R&S NRP power sensors.

7.4.3.1 About

The R&S SMB100B can perform up to four power measurements simultaneously.

Depending on the signal characteristic (CW, AM, pulsed, etc.) or the parameter to be measured (average, peak, etc...) a suitable R&S power sensor must be used.

About the measuring principle, averaging filter, filter length, and achieving stable results

A sensor measures the average or peak RF power of the source continuously. The measurement results are displayed in the "NRP Power Viewer" dialog.

The power viewer function uses **averaging filters** for getting a stable readout.

Measurement results could be interfered for instance by too much noise in your setup, by a bad suppression of harmonics or non harmonics or when you reach the sensitivity level of your power sensor.

Measurements are continuously repeated in a predefined time window. The measurement result is obtained by averaging the measured values for the last $2N$ time windows. This approach is referred to as a **two-step averaging process**.

The factor of 2 in the formula arises because the output signals from the microwave detector are chopped at the same rate as the time windows to suppress low-frequency noise. An independent measured value can only be obtained from two consecutive values.

The variable N in the formula indicates the **filter length**. The filter length then directly influences the measurement time. The filter length can be selected automatically or it can be manually set to a fixed value.

Depending on the R&S NRP power sensor type, the manual setting of the filter length varies in resolution:

- Resolution = 1 for the R&S NRPxx power sensor family
- Resolution = 2^n for R&S NRP-Zxx power sensors, with $n = 1$ to 16

Follow the following general recommendation to find out the **optimum filter length**:

- Always start a measurement in auto mode ("Filter > Auto").
Check if the measurement results are sufficient.

- If the power is not constant, select the filter length manually ("Filter > User"). Trigger the "Auto Once" function to search for the optimum filter length for the current measurement conditions. The estimated value is indicated as filter length.
- If the target measurement accuracy value is known, select "Filter > Fixed Noise". The averaging factor is selected automatically and so that the sensor's intrinsic noise (two standard deviations) does not exceed the specified noise content.
- Different sensor types achieve the same filtering result with different filter and time window lengths.
The time window length depends on the sensor type:
 - For most sensors, it is fixed to 20 ms.
 - For the R&S NRP-Z81 sensor, it is 10 µs.
The R&S NRP-Z81 uses filter length that is 1000 times larger than the filter length for other sensors.

About zeroing

Activates the auto zero function.

Zeroing calibrates the external power sensor by adjusting its reading at zero signal power. For this purpose, the RF power source must be switched off or disconnected from the sensor. If a Rohde & Schwarz power sensor receives an input power during the zeroing process, it aborts zeroing and generates an error message. Zeroing takes a few seconds, depending on the sensor model. Refer to the documentation of your power sensor for more information.

Tips for zeroing

When to perform zeroing:

- During warm up after switching on or connecting the instrument
- After a substantial change of the ambient temperature
- After fastening the power sensor module to an RF connector at high temperature
- After several hours of operation
- When low-power signals are to be measured, e.g. less than 10 dB above the lower measurement limit.
- Switch off the RF power source for zeroing, but do not disconnect it from the power sensor. This proceeding keeps the thermal equilibrium, and the zeroing process also compensates the noise that superimposes the measured signal (e.g. from a broadband amplifier).

Related settings and functions

- Measurements-related settings, like results, filter, filter length:
[Chapter 7.4.3.2, "NRP Power Viewer Settings"](#), on page 174
- Software version of the connected power sensor:
`:SENSe<ch>[:POWER]:TYPE?` on page 378
- Acquisition of level correction data:
[Chapter 7.3, "User Correction"](#), on page 156

Additional information


See Rohde & Schwarz website <http://www.rohde-schwarz.com> in section "Power Meters & Voltmeters" for:

- R&S NRP power sensor manual.
- Information on the R&S NRP-Z5 sensor hub and the available accessories.
- Sensor software updates.

7.4.3.2 NRP Power Viewer Settings

Access:

- Select "Power Sens" > "NRP Power Viewer".

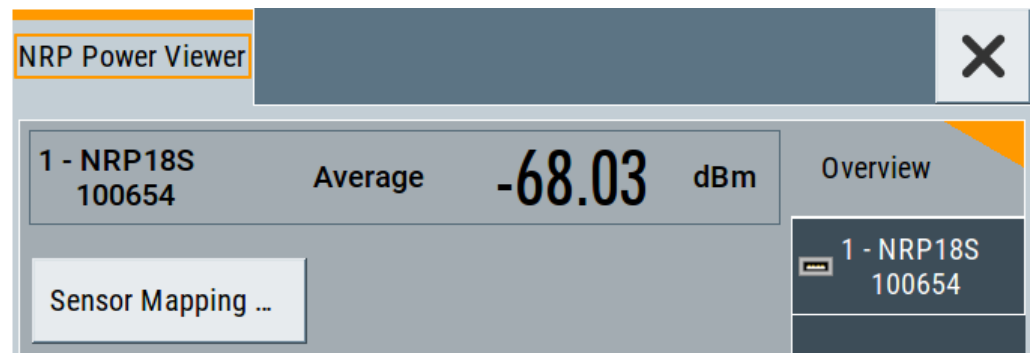

The "Overview" tab shows the list of detected sensors, and provides a separate tab per sensor.

The screenshot shows the 'NRP Power Viewer' window. The main display area shows 'Average' level at '-72.32 dBm'. On the right, there is an 'Overview' tab and a sensor selection box showing '2 - NRP18S 100654'. The left sidebar contains various configuration options:

- State:** A blue button with a vertical bar icon.
- Zero:** A button with a crosshair icon.
- Display Permanent:** A checked checkbox.
- Display:** A dropdown menu set to 'Average'.
- Use Frequency Of:** A dropdown menu set to 'RF'.
- Level Offset State:** A dropdown menu set to 'Off'.
- Level Offset:** A text field showing '0.000 dB'.
- Filter:** A dropdown menu set to 'Auto'.
- Filter Length:** A text field showing '64'.
- Default Aperture Time:** A checked checkbox.
- Aperture Time:** A text field showing '20.000 000 ms'.
- S-Parameter:** A dropdown menu set to 'Unused'.
- Enable Logging:** A checked checkbox.

A sensor tab contains all parameters for configuring the sensor settings, like average or peak display, reference source, filter and level offset.

The remote commands required to define these settings are described in [Chapter 12.13, "SENSe, READ, INITiate and SLISt Subsystems"](#), on page 365, including the triggering of the measurement and the retrieval of measurement results. See also [Chapter 7.5, "How to Calibrate the Power Level with an R&S NRP Power Sensor"](#), on page 180.

Settings

Sensor type and serial number.....	176
Level (Peak) / Level (Average).....	176
Sensor Mapping.....	176
Sensor settings.....	176
L State.....	176
L Zero.....	176

L Display.....	177
L Permanent.....	177
L Use Frequency Of.....	177
L Frequency.....	177
L Level Offset State,Level Offset.....	177
L Filter.....	178
L Filter Length.....	178
L Noise/Signal Ratio.....	178
L Auto Once.....	178
L Timeout.....	179
L Default Aperture Time.....	179
L Aperture Time.....	179
L S-Parameter.....	179
L Enable Logging.....	179

Sensor type and serial number

Indicates the type and the serial number of a selected R&S NRP power sensor, and the channel the sensor is assigned to.

The displayed **Level (Peak) / Level (Average)** values correspond to the particular sensor.

Remote command:

`:SENSe<ch>[:POWER]:TYPE?` on page 378

`:SENSe<ch>[:POWER]:SNUMber?` on page 377

Level (Peak) / Level (Average)

Indicates the measured peak or average level value.

You can also change the unit for the results display: Watt, dBm or dBμV.

Note: Peak level measurements are provided if the power sensor supports this feature.

Remote command:

`:READ<ch>[:POWER]?` on page 371

`:SENSe<ch>:UNIT[:POWER]` on page 371

Sensor Mapping

Accesses the **NRP Sensor Mapping** dialog.

Sensor settings

One tab per sensor provides the corresponding settings.

State ← Sensor settings

Activates level measurement.

Remote command:

`:INITiate<hw>[:POWER]:CONTinuous` on page 370

To query the availability of a sensor at a given connector, use the command :

`SENSe<ch>[:POWER]:STATus[:DEVIce]?` on page 378.

Zero ← Sensor settings

Activates the auto zeroing.

For details, see ["About zeroing"](#) on page 173.

Remote command:

[:SENSe<ch>\[:POWer\]:ZERO](#) on page 378

Display ← Sensor settings

Sets the display mode for power readings.

Permanent ← Display ← Sensor settings

Activates the permanent indication of the power measurement result on the left side of the home screen.

You can activate the permanent display for several sensors.

Remote command:

[:SENSe<ch>\[:POWer\]:DISPlay:PERManent:STATe](#) on page 373

Use Frequency Of ← Sensor settings

Selects the source for measurement.

- | | |
|--------|---|
| "RF" | The R&S SMB100B transfers the RF frequency and level settings to the R&S power sensor automatically. Thus you achieve power readings of high accuracy, irrespective from the connected sensor type. |
| "User" | Sets a user defined frequency. |

Example:

If you have a frequency converting device between the generator and the DUT. If the frequency converter doubles the frequency, you can set twice the frequency in the R&S SMB100B. The R&S power sensor considers this RF frequency setting.

Set the parameter [Frequency](#) to the measurement's frequency.

Remote command:

[:SENSe<ch>\[:POWer\]:SOURce](#) on page 377

Frequency ← Sensor settings

Defines the frequency value if "Source > User" is used.

Remote command:

[:SENSe<ch>\[:POWer\]:FREQuency](#) on page 376

Level Offset State,Level Offset ← Sensor settings

Activates and defines a level offset which is considered in the power measurement result. The level offset value is always expressed in dB, irrespective of the display of the measurement result.

This function allows you to consider, for example, an attenuator in the signal path.

Remote command:

[:SENSe<ch>\[:POWer\]:OFFSet](#) on page 377

[:SENSe<ch>\[:POWer\]:OFFSet:STATe](#) on page 377

Filter ← Sensor settings

Selects the way the length of the used filter is defined.

See also ["About the measuring principle, averaging filter, filter length, and achieving stable results"](#) on page 172.

- | | |
|---------------|---|
| "Auto" | Selects the filter length automatically and adjusts it to the measured value. The value is indicated with the parameter Filter Length .
When high output power is applied, the filter length and therefore the measurement time can be short.
When low output power is applied, the filter length and therefore the measurement time is increased which reduces the considered noise content in your measurement. |
| "User" | The filter length is defined manually, with the parameter Filter Length .
As the filter length works as a multiplier for the time window, constant filter length results in a constant measurement time.
Values 1 and 2N are allowed. |
| "Fixed Noise" | The averaging factor is taken automatically in accordance to the value Noise/Signal Ratio . Thus, the sensor's intrinsic noise (2 standard deviations) does not exceed the specified noise content.
To avoid long measurement times when the power is too low, set a Timeout .
Timeout is the maximum acceptable measurement time which limits the averaging factor and therefore leads to a more unstable readout. |

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:TYPE](#) on page 375

Filter Length ← Sensor settings

Sets or indicates the filter length, depending on the selected filter mode.

- "Filter > Auto" indicates the automatically adjusted filter length.
- "Filter > User" enables you to set the filter length manually.
- "Filter > Fixed Noise" hides the setting parameter.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:LENGth:AUTO?](#) on page 373

[:SENSe<ch>\[:POWER\]:FILTer:LENGth\[:USER\]](#) on page 374

Noise/Signal Ratio ← Sensor settings

For [Filter > Fixed Noise](#), sets the noise content.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:NSRatio](#) on page 374

Auto Once ← Sensor settings

Searches the optimum filter length for the current measurement conditions. The result is indicated with the parameter [Filter Length](#).

See also ["About the measuring principle, averaging filter, filter length, and achieving stable results"](#) on page 172.

Remote command:

[:SENSe<ch>\[:POWER\]:FILTer:SONCe](#) on page 375

Timeout ← Sensor settings

For "Filter > Fixed Noise", sets a time limit for the averaging process.

Remote command:

`:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME` on page 375

Default Aperture Time ← Sensor settings

The sensor default setting is sufficient. Disable this parameter to specify a user-defined aperture time per sensor, if, for example, the readings vary.

To obtain stable readings, set the [Aperture Time](#) exactly to one modulation period.

Remote command:

`:SENSe<ch>[:POWer]:APERTure:DEFAult:STATe` on page 372

Aperture Time ← Sensor settings

If "Use Default Aperture Time > Off", defines the acquisition time per sensor.

For example, to obtain a sufficient low average value, set the aperture time exactly to one modulation period.

Remote command:

`:SENSe<ch>[:POWer]:APERTure:TIME` on page 372

S-Parameter ← Sensor settings

Lists the S-Parameter correction data files retrieved for the connected power sensor. To activate the correction data, select the corresponding file.

S-Parameter correction is used to mathematically shift the reference plane to the DUT by considering the S-parameters for any components connected upstream of the sensor.

The S-Parameter table can be changed with the S-Parameters tool, provided as part of the free R&S NRP Toolkit software. For more information, refer to the manual of the connected R&S NRP power sensor.

Remote command:

`:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe` on page 373

`:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?` on page 373

`:SENSe<ch>[:POWer]:CORRection:SPDevice:SElect` on page 372

Enable Logging ← Sensor settings

Activates recording of R&S NRP power sensor readings in a log file.

There is 1 log file per sensor. The log files are created automatically and filled in continuously. They are text files with predefined filename `SensLog<n>.txt`, where `<n>` indicates the connected sensor. Log files are stored on the internal memory, in the directory `/var/user/SensorLogging`.

Each log file contains the measured value (2 readings when you work with peak sensors), the sensor type, and the measurement time (timestamp). Logged data is not overwritten. When a new measurement is started, the collected logging data is appended in the log file.

Check the used disc space regularly and remove log files to maintain storage capacity.

Note: The logging function is intended for measurements with long time intervals. It is suitable source for data reconstructions if the connection to the sensor was interrupted.

Remote command:

`:SENSe<ch>[:POWer]:LOGGing:STAtE` on page 376

7.5 How to Calibrate the Power Level with an R&S NRP Power Sensor

Using a R&S NRP power sensor and the user correction function of the instrument, you can compensate external frequency responses. The R&S SMB100B utilizes the readings of the power sensor and creates a correction value table for controlling the output level during operation.


To connect the R&S NRP to the R&S SMB100B

1. Connect the power sensor.
See [Chapter 7.4.1, "Connecting R&S NRP Power Sensors to the R&S SMB100B"](#), on page 168.
2. Select "Power Sens" > "NRP Sensor Mapping".
3. If the sensor is not detected automatically, select "Scan > Start".
The instrument scans the network and the USB connections for connected sensors and lists all detected R&S NRP sensors in the mapping table.
4. In the "Mapping" column, assign the sensor to a sensor channel, see [Chapter 7.4.2, "NRP Sensor Mapping"](#), on page 169.
5. Close the dialog.

To configure and calibrate the R&S NRP in the R&S SMB100B

Provided the power sensor is connected to the R&S SMB100B and is assigned to a sensor channel, we recommend that you calibrate and configure the power sensor in the "NRP Power Viewer" dialog.

1. Select "Level" > "RF ON > Off"
2. Select "Power Sens" > "NRP Power Viewer".

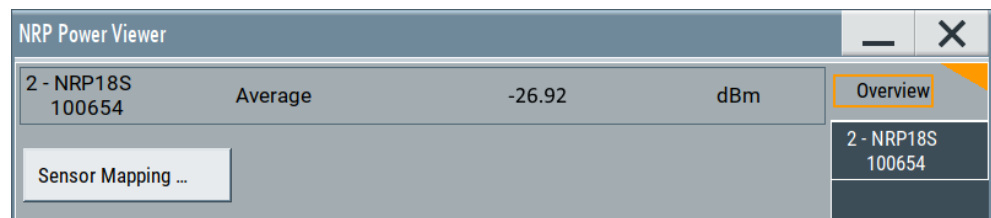

3. If the R&S SMB100B has detected several connected power sensors, select the tab of the sensor you want to use.
4. Select "Zero" to start zeroing of the sensor.

How to Calibrate the Power Level with an R&S NRP Power Sensor

Note: Always turn the RF power off or disconnect the sensor from RF before zeroing, since the function calibrates the power sensor at zero signal power.


The zeroing process takes a few seconds, depending on the power sensor type.

5. Configure additional parameters for the selected sensor as required.
6. Select "State > On".
7. Close the dialog.

To create user correction data with an R&S NRP and the R&S SMB100B

We assume, that the power sensor is connected, assigned and ready for operation.


1. Select "Level" > "User Correction".

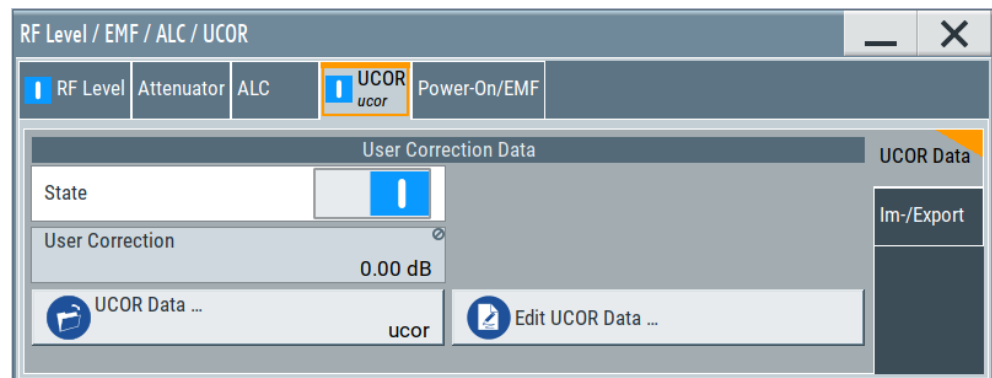

2. Select "UCOR Data" > "UCOR Data...."
3. Create a file: "New" > Filename and confirm with "OK".
4. Select the new file with "Select".
5. Select "Edit UCOR Data...".
6. Select "Edit" > "Fill".

The "Fill Table" dialog enables you to fill in the values of the columns automatically.

7. To fill in the frequency column:

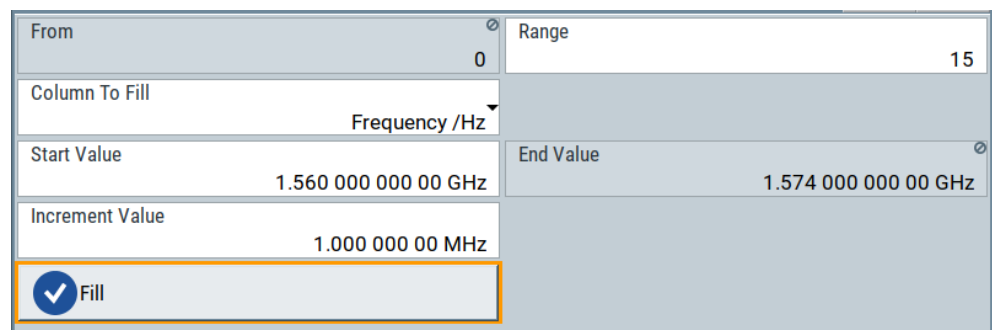

- a) Select "Select Column To Fill > Frequency / Hz".
- b) Select "Range > e.g. 15" to determine the number of values.

- c) Select "Start Value > e.g. 1.56 GHz".
- d) Select "Increment Value > e.g. 1 MHz", to determine the frequency steps.
- e) Select "Fill", to insert the frequency values.

The "Fill" function also fills the column of the "Correction Value / dB" values with a predefined value, since empty cells lead to the data loss of the entire line. If you need different values, you can change them manually, or you can use the automatic function "Fill with Sensor" as described in the next steps.





8. Select "Fill with Sensor".

The "Fill User Correction Data With Sensor" dialog provides an overview of the sensor configuration.

9. Select "Execute".

The R&S SMB100B successively sets each frequency point, reads the measured power of the sensor and fills in the value in the correction table.

Edit User Correction Data				
ucor				
	Frequency /Hz	Correction Value /dB		
0	1 560 000 000.00	-11.51		
1	1 561 000 000.00	-11.03		
2	1 562 000 000.00	-10.58		
3	1 563 000 000.00	-9.80		
4	1 564 000 000.00	-9.46		

 Go To
  Edit
 Fill with Sensor ...
  Save As ...
  Save

10. Select "Save" to save the data in the file.

11. Close the dialog.

To perform power leveling calibration with user correction data

We assume that a user correction file is available in the user directory of the R&S SMB100B or on a memory stick or in a shared directory.

If you have created and saved the file immediately before this step, the file is loaded in the "User Correction" dialog automatically. Otherwise you can load a previously saved file.

1. Select "Level" > "User Correction".

2. Select "UCOR Data" > "UCOR Data...", if there is no file loaded already.
3. Select the directory and file you want to use.
4. Load the file with "Select".
5. To view the file content, select "Edit UCOR Data...".
6. Select "UCOR Data" > "State" > "On" to apply the user correction values.

When you activate the RF output, the R&S SMB100B considers the user correction data and adjusts the signal level accordingly to compensate external frequency responses.

8 Reference Oscillator

The R&S SMB100B is equipped with an internal reference oscillator that generates a reference frequency of 10 MHz. It is used as internal reference source for the synthesizer.

Alternatively, you can apply an external reference signal. If equipped with the required options, the R&S SMB100B can process external reference frequency in the range 1 MHz to 100 MHz and the 1 GHz reference frequency.

Regardless of the used reference source (internal or external), the R&S SMB100B always provides the configured reference frequency at the output. You can use it, for example to synchronize several interconnected instruments, see [Chapter 8.5, "Using the Reference Frequency for Instruments Synchronization"](#), on page 189, for an overview of typical test situations.

The reference oscillator settings are not affected by an instrument preset ([Preset] key or *RST) and the "Save/Recall" function. They are reset only by factory preset.

8.1 Required Options

R&S SMB100B base unit equipped with the following options:

- Reference oscillator (R&S SMBB-B1/-B1H)
- 1 GHz reference (R&S SMBB-B3)
- 1 MHz to 100 MHz flexible reference input (R&S SMBB-K704)

For more information, see data sheet.

8.2 Reference Frequency Settings

Access:


1. Select "Frequency" > "Reference Frequency".

Reference Frequency	Reference Output	Adjustment	
<div> Set To Default </div>			
Source <div>External</div>		<div> Show Connector ... </div>	
Deactivate RF Output <i>(if external reference is missing)</i> <div><input checked="" type="checkbox"/></div>			
External Reference Frequency <div>10 MHz</div>			
Synchronization Bandwidth <div>Wide</div>			
Nominal Synchronization Bandwidth <div>400 Hz</div>		Minimum Locking Range <div>+/- 100 ppm</div>	

In the "Reference Frequency" tab, you can select the reference frequency signal source and the frequency and synchronization bandwidth mode of an external reference signal.

- Observe the information on the home screen, "Frequency" tile.

The "Frequency" tile indicates the current reference oscillator configuration, incl. the reference oscillator source, external reference frequency (rounded value) and output connector. A warning symbol in the "Frequency" tile indicates a missing external source.

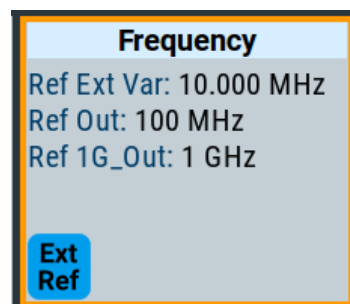

The remote commands required to define these settings are described in [Chapter 12.14.11, "SOURCE:ROSCillator Subsystem"](#), on page 467.

Settings:

Set to Default	186
Source	186
Show Connector	186
Deactivate RF Output (if external reference is missing)	186
External Reference Frequency	186

Variable Reference Frequency.....	187
Synchronization Bandwidth.....	187
Nominal Synchronization Bandwidth.....	187
Minimum Locking Range.....	187

Set to Default

Calls the default settings.

Remote command:


`[:SOURce] :ROSCillator :PRESet` on page 468

Source

Selects the reference frequency source.

"Internal" Uses the internal reference oscillator, either with calibrated or a user-defined [Adjustment Value](#).

"External" Uses an external reference signal.

Note: If the external reference is missing, the R&S SMB100B issues a warning message and indicates the icon  (external reference missing).

To set the frequency of the external reference, see "[External Reference Frequency](#)" on page 186.

Remote command:

`[:SOURce] :ROSCillator :SOURce` on page 468



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

Deactivate RF Output (if external reference is missing)

Turns off the RF output when the external reference signal is selected, but no signal is supplied.

This function prevents that no improper RF signal due to the missing external reference signal is used for measurements. A message indicates that the RF output is deactivated.

Remote command:

`[:SOURce] :ROSCillator :EXTernal :RFOff [:STATe]` on page 468

External Reference Frequency

Selects the frequency of the external reference signal.

Set the reference output frequency with the parameters in the [Reference Output Settings](#) dialog.

"10 MHz" Selects 10 MHz for the external reference frequency signal.

"100 MHz, 1 GHz"

Option: R&S SMBB-B3

The R&S SMB100B locks its internal 500 MHz reference oscillator on the 100 MHz or 1 GHz reference.

Selects the external reference frequency.

"Variable" Option: R&S SMBB-K704
The external reference signal has an arbitrary frequency, within the permissible range from 1 MHz to 100 MHz.

Remote command:

`[:SOURce] :ROSCillator:EXTernal:FREQuency` on page 468

Variable Reference Frequency

Option: R&S SMBB-K704

Sets the variably settable external reference frequency.

Remote command:

`[:SOURce] :ROSCillator:EXTernal:FREQuency:VARiable` on page 469

Synchronization Bandwidth

Selects the synchronization bandwidth for an external reference signal.

The resulting bandwidth is indicated by the parameter [Nominal Synchronization Bandwidth](#).

"Narrow" The internal reference oscillator is synchronized to the external signal with narrow bandwidth.

This setting is recommended if the phase noise of the external signal is worse than the phase noise of the internal OCXO.

"Wide" Synchronizes the internal oscillator to the external signal with the maximum possible bandwidth.

This mode is the recommended standard mode and for precise reference sources of high spectral purity.

Note: If the frequency of the external reference signal is outside the locking range of the internal reference oscillator, spurs due to the difference of the internal and external reference frequency are generated in the reference PLL.

The R&S SMB100B issues an error message.

For more information, see data sheet.

Remote command:

`[:SOURce] :ROSCillator:EXTernal:SBANDwidth` on page 469

Nominal Synchronization Bandwidth

Indicates the nominal synchronization bandwidth for the selected [External Reference Frequency](#) and the [Synchronization Bandwidth](#).

Remote command:

`[:SOURce] :ROSCillator:EXTernal:NSBandwidth?` on page 470

Minimum Locking Range



Indicates the minimum locking range for the selected [External Reference Frequency](#) and the [Synchronization Bandwidth](#).

Remote command:

`[:SOURce] :ROSCillator:EXTernal:MLRange?` on page 469

8.3 Reference Output Settings

- Access:
1. Select "Frequency" > "Reference Frequency".
 2. Select "Reference Output".

Reference Output	10 MHz	 Show Connector ...
Reference Output 1GHz	Off	 Show Connector ...

In the "Reference Output" tab, you can set the reference frequency value at the output connectors.

As a result of parameter dependencies, "Preset This Parameter" sometimes does not affect output dialogs.

The remote commands required to define these settings are described in [Chapter 12.14.11, "SOURce:ROSCillator Subsystem"](#), on page 467.

Settings:

Reference Output/1 GHz Reference Output	188
Show Connector	188

Reference Output/1 GHz Reference Output


Selects frequency reference output signal for downstream instruments.

"Off"	Deactivates the reference signal output.
"10 MHz"	Derives a signal with 10 MHz frequency from the internal reference oscillator and provides this signal at the output.
"100 MHz"	Option: R&S SMBB-B3 Derives a signal with 100 MHz frequency from the internal reference oscillator and provides this signal at the output.
"1 GHz"	Option: R&S SMBB-B3 Provides the 1 GHz reference frequency signal at the output.
"Input Signal (loop through)"	Passes the external reference frequency to the output directly.

Remote command:

[\[:SOURce\]:ROSCillator:OUTPut:FREQuency:MODE](#) on page 470

[\[:SOURce\]:ROSCillator:OUTPut:ALternate:FREQuency:MODE](#) on page 470



Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

8.4 Adjustment Settings

Access:

1. Select "Frequency" > "Reference Frequency".
2. Select "Adjustment".

Adjustment Active☒

Adjustment Value0

Settings:

Adjustment Active.....	189
Adjustment Value.....	189

Adjustment Active

Selects the adjustment mode.

- | | |
|-------|--|
| "Off" | Uses the calibrated internal reference frequency. |
| "On" | Allows you to apply a deviation to the internal reference frequency, according to your requirements.
Enter the value in the Adjustment Value field. |

Remote command:

[\[:SOURce\]:ROSCillator\[:INTernal\]:ADJust\[:STATe\]](#) on page 471

Adjustment Value

Sets a user-defined adjustment value for the internal reference frequency. This value takes effect when it is activated with [Adjustment Active](#).

- "0" represents the calibrated state.
- The setting range depends on the reference oscillator type and its factory calibration value.

Note:

The setting is not affected by an instrument preset ([Preset] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

[\[:SOURce\]:ROSCillator\[:INTernal\]:ADJust:VALue](#) on page 471

8.5 Using the Reference Frequency for Instruments Synchronization

Test setups with two or more instruments often require that the instruments use a common reference frequency. Depending on the availability of external reference frequency source and its quality, the instruments are connected and configured in different ways.

This section gives an overview of the possible test setups and the related settings. The following situations are considered:

- External reference source is not available or the **built-in reference oscillator** is of better quality than the external source
(see ["Distributing the internal 10 MHz reference signal to further instruments"](#) on page 190)
- **Clean external reference source** with quality exceeding the quality of the built-in reference oscillator
(see ["Using external reference source"](#) on page 191)
- **Interfered or noisy external reference signal**
(see ["Deriving 10 MHz from the external reference frequency"](#) on page 192)
- **1 GHz reference coupling** for phase coherence of the RF signals with enhanced long-term phase stability
(see ["Sharing the 1 GHz reference frequency to obtain phase-coherent signals"](#) on page 190)

Connectors overview

Use the "Show Connector" function to indicate the connector on the front/rear panel:

- ["Ref In/Ref Out"](#) on page 38
- 1GHz ["Ref In/Ref Out"](#) on page 38

Distributing the internal 10 MHz reference signal to further instruments

The internal reference oscillator provides the reference frequency:

- Internal $f_{\text{ref}} = 10 \text{ MHz}$ (10 MHz at connector Ref Out)
- [Source](#) = "Internal"
- [Reference Output/1 GHz Reference Output](#) = "10 MHz"

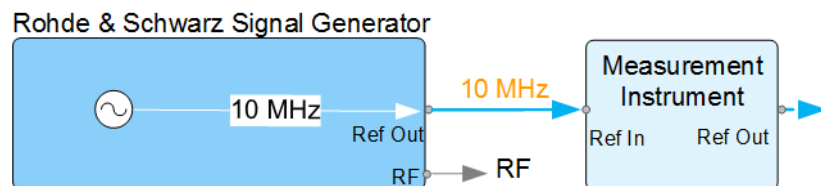


Figure 8-1: Synchronizing instruments using the internal 10 MHz reference signal of the R&S SMB100B

Ref In, Ref Out = Connectors

Sharing the 1 GHz reference frequency to obtain phase-coherent signals

Compared to 10 MHz, a 1 GHz reference signal significantly improves the achievable phase stability between two signal sources. Because the synchronization frequency increases by a factor of 100, the relative phase fluctuations between the sources can be reduced.

1 GHz at connector Ref In 1GHz and 1 GHz at Ref Out 1GHz

- External $f_{\text{Ref}} = 1 \text{ GHz}$

Using the Reference Frequency for Instruments Synchronization

- Source = "External"
- External Reference Frequency = "1 GHz"
- 1GHz Reference Output = "1 GHz"

Using external reference source

If you have a clean external reference signal with 10 MHz or 100 MHz frequency, for example, you can **directly pass it to the output**. The signal quality remains the same.

10 MHz, 100 MHz at connector Ref Out and Ref In

- External f_{Ref} = 10 MHz or 100 MHz
(earlier RF hardware versions: 5 MHz, 10 MHz, 13 MHz)
- Source = "External"
- Reference Output = "10 MHz, 100 MHz" or "Input Signal (loop through)"
(earlier RF hardware versions: 5 MHz, 10 MHz, 13 MHz)
- Set the synchronization bandwidth according to the requirements of the application.

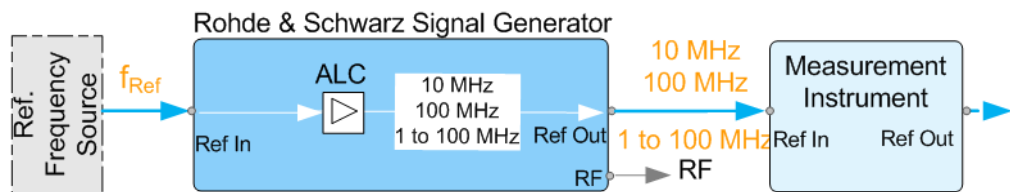


Figure 8-2: Synchronizing instruments with a 10 MHz external reference signal

Ref. Frequency Source = e.g., Rohde & Schwarz signal analyzer

f_{Ref} = 10 MHz, 100 MHz, 1 MHz to 100 MHz external reference frequency

Ref In, Ref Out = Connectors

You can forward reference frequency between 1 MHz and 100 MHz directly to the output in the same way.

Note: R&S SMB100B can forward only a defined range of external reference frequencies, see data sheet.

- External f_{Ref} = 1 MHz to 100 MHz
(1 MHz to 100 MHz at connector Ref In and Ref Out)
- Source = "External"
- Variable Reference Frequency = "Variable"
- External Reference Frequency = current external frequency
- Reference Output = "Input Signal (loop through)" or specify the reference frequency the synchronized instrument supports
- Set the synchronization bandwidth according to the requirements of the application.

Deriving 10 MHz from the external reference frequency

10 MHz reference frequency can be derived from the following external reference signals:

- 10 MHz from internal oscillator locked to external input
- 100 MHz and 1 GHz external reference signals
- External reference signal between 1 MHz and 100 MHz
- If the external reference signal is interfered (noisy)

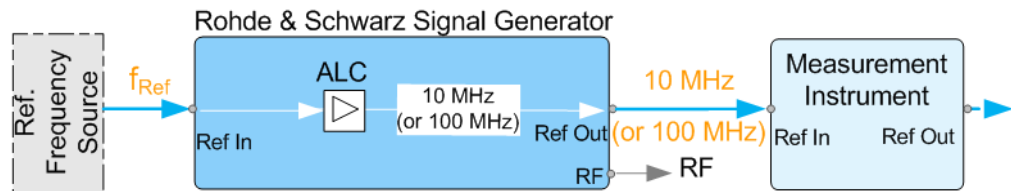


Figure 8-3: Synchronizing instruments with 10 MHz (derived from an external reference frequency)

Ref. Frequency Source = e.g., Rohde & Schwarz signal analyzer

f_{Ref} = 10 MHz, 100 MHz, 1 MHz to 100 MHz, 1 GHz** external reference frequency

** = 1 GHz uses Ref In 1 GHz connector

Ref In, Ref Out = Connectors

1 GHz, 1 MHz to 100 MHz at connector Ref In 1 GHz/Ref In and 10 MHz at Ref Out

- E.g., external Ref. f_{ref} = 100 MHz
- **Source** = "External"
- **External Reference Frequency** = "100 MHz"
- **Reference Output/1 GHz Reference Output** = "10 MHz"
- **Synchronization Bandwidth** = "Narrow"

9 File and Data Management

The R&S SMB100B uses files to save all instrument data. The instrument allows you to store and to load instrument settings, and to import and to export user data for processing in another instrument or later. Finally, you can create a screenshot of the current settings displayed on the screen and save it as a file.

This section focuses on the functions provided for managing of user data files and covers the topics listed below.

For information on the related remote control commands, refer to [Chapter 12.5, "Memory Subsystem"](#), on page 334.

For information on how to save the displayed setting in a file, refer to [Chapter 9.10, "Creating Screenshots of Current Settings"](#), on page 222.

• About the File System	193
• Restoring the (Default) Instrument Configuration	196
• Protecting Data	201
• Saving and Recalling Instrument Settings	201
• Accessing Files with User Data	206
• Exporting and Importing Remote Command Lists	208
• Loading, Importing and Exporting Lists	209
• Using the File Manager	209
• How to Transfer Files from and to the Instrument	216
• Creating Screenshots of Current Settings	222

9.1 About the File System

Depending on the contained information, two file groups can be distinguished: system and user files.



Due to security reasons, system files and the system directory are protected and therefore not accessible.

The scope of this section is only the files with user data.

This section is an overview of the R&S SMB100B file system and covers the following topics:

- ["Types of user data"](#) on page 194
- ["File storage location"](#) on page 194
- ["File handling"](#) on page 194
- ["File naming conventions"](#) on page 195
- ["File extensions"](#) on page 195
- ["File contents"](#) on page 195

Types of user data

Depending on the **content**, the **user data** can be roughly divided into the following data types:

- *Settings*, e.g. the current instrument settings, can be saved and loaded later or used in other instrument of the same kind.
See [Chapter 9.4, "Saving and Recalling Instrument Settings"](#), on page 201
- *SCPI scripts*, a series of commands that can be run to perform a task.
See [Chapter 9.6, "Exporting and Importing Remote Command Lists"](#), on page 208
- Externally or internally generated *lists*, e.g. user correction lists, or data lists can be loaded in the instrument.
See [Chapter 9.7, "Loading, Importing and Exporting Lists"](#), on page 209 and [Chapter 9.5, "Accessing Files with User Data"](#), on page 206

Depending on the **data storage method**, user data can be:

- *Persistent*, i.e. user files that are recorded on the data storage.
Data is preserved when instrument is powered off and can be accessed and modified subsequently.
- *Temporary*, i.e. volatile data that the instrument retains while it is powered on.
Volatile data is immediately lost when the R&S SMB100B is switched off.

File storage location

Without any additional measures, the R&S SMB100B stores user files on the internal memory or if connected, on a memory stick.

Both, the user directory `/var/user/` on the internal memory or the `/usb/` directory on the memory stick, can be used to **preserve** user-defined data. Any directory structure can be created.

The `/var/volatile` directory serves as a RAM drive and can be used to protect sensitive information. The data is available **temporarily**.

Default storage location

The R&S SMB100B stores user data in the user directory.

In the file system, user directory is always indicated as `/var/user/`.

In manual control, you access this directory via the "File Manager", see [Chapter 9.8, "Using the File Manager"](#), on page 209. In remote control, you can query it with the command `:SYSTem:MMEMory:PATH:USER?`.

To query and change the default directory used for mass storage, use the command `:MMEMory:CDIRectory`.

File handling

To *access files* and the file system of the instrument or to use the general file management functions such as copying and moving data, use the standard "File Manager" dialog.

See [Chapter 9.8, "Using the File Manager"](#), on page 209.

To *transfer files* from and to the instruments or to exchange files, use one of the following alternatives:

- Connect a memory stick to one of the USB interfaces.
The instrument recognizes automatically a connected memory stick and assigns the `/usb/` drive to it.
- Connect the instrument to a LAN.
An instrument connected to a LAN supports two standard file transfer methods from a remote client:
 - FTP (file transfer protocol)
 - File sharing according to the SAMBA/SMB (server message block) protocol.
 Both file transfer methods access the folder `/user`, that is the `/var/user/` folder on the instrument.
For step-by-step description, see [Chapter 9.9, "How to Transfer Files from and to the Instrument"](#), on page 216.
- Map a network folder or a computer to an instrument connected to a LAN.
A mapped network folder is indicated as `/shares/<"Local Folder">`.
For step-by-step description, see [Chapter 9.8.4, "How to Map a Network Folder"](#), on page 213.

File naming conventions

To enable files to be used in different file systems, consider the following file naming conventions:

- The *filename* can be of any length and *is case-sensitive*, i.e it is distinguished between uppercase and lowercase letters.
- All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the filename).
- Avoid using special characters.
- Do not use slashes "\" and "/". These symbols are used in file paths.
- Avoid using the following filenames: `CLOCK$`, `CON`, `COM1` to `COM4`,
`LPT1` to `LPT3`, `NUL` or `PRN`
They are reserved by the operating system.

File extensions

The R&S SMB100B distinguishes the files according to their extensions; each type of file is assigned a specific file content and also a specific file extension. The extension is usually of no consequence to you since access to the files occurs in the individual dialogs where only the relevant type of file is available. For example, files with user correction data can only be saved and loaded in the "UCOR" dialog.

See [Chapter A.3, "Extensions for User Files"](#), on page 590 for an overview of the supported file extensions.

File contents

To maintain the file size and to accelerate the loading and processing times, not all instrument settings but rather the settings in state different than the preset one are

stored. Considered is also configuration data for the operating elements and lists with user data, e.g. dialog positions and a list of user correction data. However, if a list data is part of the instrument settings, a reference to this list is stored, not the list itself.

This approach ensures that the created files contain only relevant information and allows you to transfer instrument settings even between different equipped signal generators. During the recall process, the instrument interprets only the relevant settings; all non-referenced parameters are set to their preset values. Error messages indicate the settings which cannot be implemented, like referencing non-existing lists or the attempt to activate settings which are not supported by the instrument.



Network settings and remote settings cannot be saved and restored.

9.2 Restoring the (Default) Instrument Configuration

The R&S SMB100B has various options to set default settings. You can preset the R&S SMB100B to an initial state at any time as a known starting point for configurations. It is often useful as a first step in troubleshooting when unusual results arise.

The graph on [Figure 9-1](#) shows the impact of the particular reset functions.

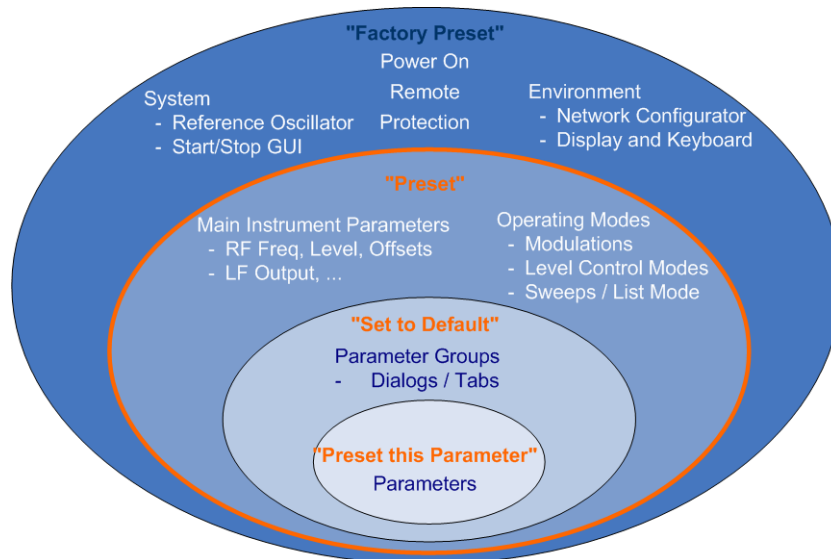


Figure 9-1: Parameter and operating modes, reset by the respective preset functions

Overview of the characteristics of the preset functions

Select the preset option that most fits to your particular application:



- [Preset]
It is the most frequently used function.

A **Preset** executes a defined instrument setup to provide an initial instrument state as a basis for a new configuration. It resets all parameters and switching states, including also the states of inactive operating modes.

Network, remote access or system settings are retained.

 
- ▶ To execute a preset, press the [Preset] key at the front panel.



- "Set to Default"
[Set To Default](#) relates to individual dialogs or tabs and resets the associated settings of the corresponding dialog. All other settings are retained.
- ▶ To reset the grouped settings, click "Set To Default".



- "Preset this parameter"
 Sets a single parameter to its default value.
- ▶ To reset an individual parameter: Open its context-sensitive menu and select "Preset this parameter..."



- "Factory Preset"
 A factory preset is the most profound preset function that resets almost all instrument settings, including reference oscillator, network and remote access settings. Retained are the following settings:
 - Security, password, and settings protected by these passwords
 - User-defined data, like setups or data lists
 - Settings that relate to an integration of the instrument in a measurement setup.
- ▶ To restore the factory defaults, select [System Config > Setup > Settings > Factory Preset](#).

Note: Perform a "Factory Preset" only if it is necessary. After a "Factory Preset", the network connection to the instrument no longer exists.

Presetting the instrument to a user-defined instrument state

The reset functions set the parameters and operating modes to default values predefined by the factory. Alternatively to these default settings, you can:

- Define user-specific recall settings to be restored after a preset

(see [Chapter 9.2.3, "How to Recall User Settings Automatically after Preset"](#), on page 199)

- Store and reload user-defined instrument states
(see [Chapter 9.4.2, "How to Save and Recall Instrument Settings"](#), on page 205)

Mark / Do not mark parameters changed from preset

To survey the current state of the settings concerning default values, the R&S SMB100B offers a feature that visually identifies deviations from the default values.

For more information, see [Chapter 9.2.2, "How to Identify Parameters Which Are Not in a Preset State"](#), on page 199.

9.2.1 Preset, Set to Default and Factory Preset Settings

Preset	198
Set To Default	198
Preset this Parameter	198
Execute Factory Preset	198

Preset

Resets all parameters and switching states, and closes all opened dialogs.

Note:

In contrast to the [Preset] key, the SCPI commands `*RST` and `:SYSTEM:PRESet` do not close open dialogs in the GUI.

Consider also the following possibilities:

- You can define the settings that are restored when you preset the instrument
(see [Chapter 9.2.3, "How to Recall User Settings Automatically after Preset"](#), on page 199)
- You can reset the instrument to the factory state
(see ["Execute Factory Preset"](#) on page 198)

See also [Table 9-1](#) that contains the key parameters that are reset by the corresponding preset functions.

Remote command:

`*RST` on page 331

Set To Default

Resets the associated settings of the corresponding dialog or tab.

Preset this Parameter

Restores the default value of a single parameter.

Execute Factory Preset

Resets the instrument to its factory settings.

Note: "Factory Preset" retains all security settings and does not delete any user files like setups or user data.

See also [Table 9-1](#) that contains the key parameters that are reset by the corresponding preset functions.

Remote command:

 
:SYSTem:FPReset on page 334

9.2.2 How to Identify Parameters Which Are Not in a Preset State

To recognize the current state of the settings related to their default values at the first glance, enable a function that visually identifies parameters in states different than preset.

To activate this display:

1. Open the context-sensitive menu (touch and hold the screen anywhere in the GUI of the R&S SMB100B).
2. Select "Mark all parameters changed from preset".



If enabled, the corresponding settings are marked.

Example:

Frequency	4.000 000 000 000 GHz	
Offset	10.000 000 kHz	Multiplier 1.000
User Variation		
Variation Active	<input checked="" type="checkbox"/>	Variation Step 1.000 000 000 MHz

Figure 9-2: Labeled parameters show that the value deviates from its default

Frequency = changed (default = 1 GHz)
 Offset = changed (default = 0 kHz)
 Multiplier = unchanged
 Variation active = changed (default = disabled)
 Variation step = unchanged

9.2.3 How to Recall User Settings Automatically after Preset

You can define the settings that are restored when you preset the instrument.

1. Configure the settings as required. Save them as described in [Chapter 9.4.2, "How to Save and Recall Instrument Settings"](#), on page 205.
2. Save the settings as a file with the predefined filename `UserPreset.savrc1.txt`.

Save this file in the directory `/var/user/`.

The filename `UserPreset.savrc1.txt` and the directory `/var/user/` are mandatory.

Now when you press the [Preset] key or send the `*RST` command to the instrument, the defined settings are restored.

An "Info" message appears and confirms, that a file with user-defined preset setting is loaded.

9.2.4 Reference

See [Table 9-1](#) for an overview of the main generator settings that are affected by the corresponding preset functions. While the regular [Preset] key primarily resets the signal relevant parameters of the instrument, the "Factory Preset" affects almost all instrument settings.

For information on the default values of further parameters, refer to the description of the corresponding remote commands.

Table 9-1: Key parameters affected by preset and factory preset

Parameter	Preset value	Preset	Factory Preset
RF frequency	1 GHz	x	x
RF level (RF output)	off	x	x
RF OFF mode	-	-	x
Modulation state	off	x	x
Uninterrupted level settings	off	x	x
Level attenuator mode	auto	x	x
Level ALC (internal level control)	auto	x	x
Level UCOR (user correction)	off	x	x
LF output state	off	x	x
Sweep state	off	x	x
List mode state	off	x	x
Reference frequency settings (reference oscillator)	-	-	x
Power on settings (Level/EMF)	-	-	x
Network settings	-	-	x
Hostname	-	-	x
GPIB address	-	-	x
Start/Stop display update	-	-	x
Display and keyboard settings	-	-	x

Parameter	Preset value	Preset	Factory Preset
Password and settings protected by passwords (e.g. disabled LAN or USB)	-	-	-
Security settings	-	-	-
User files (setups ²⁾ , data lists, etc.)	-	-	-

- ²⁾ `UserPreset.savrcltxt` is renamed as `UserPresetInactive.savrcltxt`; an existing file with the same name is overwritten.



If the default values in the "Remote Access" dialog had been changed, a factory preset via remote control (`:SYSTem:FPReset`) terminates the connection to the instrument. Security settings are never reset.

Resets all parameters and switching states, and closes all opened dialogs.

9.3 Protecting Data

During operation, the R&S SMB100B saves user data permanently in the user directory, see ["File storage location"](#) on page 194.

To protect any classified data and to avoid saving any sensitive data on the R&S SMB100B permanently, you have the following options:

- Activate the **volatile mode**. This mode redirects user data to the volatile memory. The internal memory is write-protected. Instead, you can redirect the user data to an **external storage medium**, as, e.g., a USB stick.
See also:
 - ["Default storage location"](#) on page 194
 - ["Volatile Mode"](#) on page 251
 - [Chapter 9.9.4, "Using a USB Storage Device for File Transfer"](#), on page 221
- Save user files **temporarily in the `/var/volatile` directory**, which remains available only until the instrument is turned off. You can access data in the volatile memory just as data that is saved permanently in the `/var/user/`.
See also [Chapter 9.8.3, "How to Display All Saved Files"](#), on page 213.

9.4 Saving and Recalling Instrument Settings

Possibly you would like to restore or repeat a signal generation you performed under specific conditions on the instrument. Or, in a test setup with more than one signal generator, you want to transfer the used settings to another R&S SMB100B. In these

cases, you can save and recall instrument and user settings, and possibly other related data.

Save/Recall the complete instrument settings

Two different methods are available for managing *complete instrument settings*:

- Immediate (quick) Save/Recall
A defined set of instrument settings are saved or recalled quickly in just one step, without defining a filename or storage location. This function enables a fast switching between different instrument settings.
- Save/Recall in files with user-defined names
The defined set of instrument settings are stored to a definable storage location. The file extension is *.savrc1.txt.
Settings files created in this way are visible in the file system and accessible with the supported methods for file handling.


In the general case, a recall process replaces the instruments settings with the saved values. An exception is the frequency and level settings. During recall of the instrument settings, it is possible to retain the current settings or to overwrite them with the stored values.

9.4.1 Save/Recall Settings

To access the dialog for storing and loading the complete instrument settings

1. Select "System Config > Save/Recall".
2. Select "Operation Mode > Save or Recall" to access the corresponding settings.

The provided settings for both operations are similar and closely related.

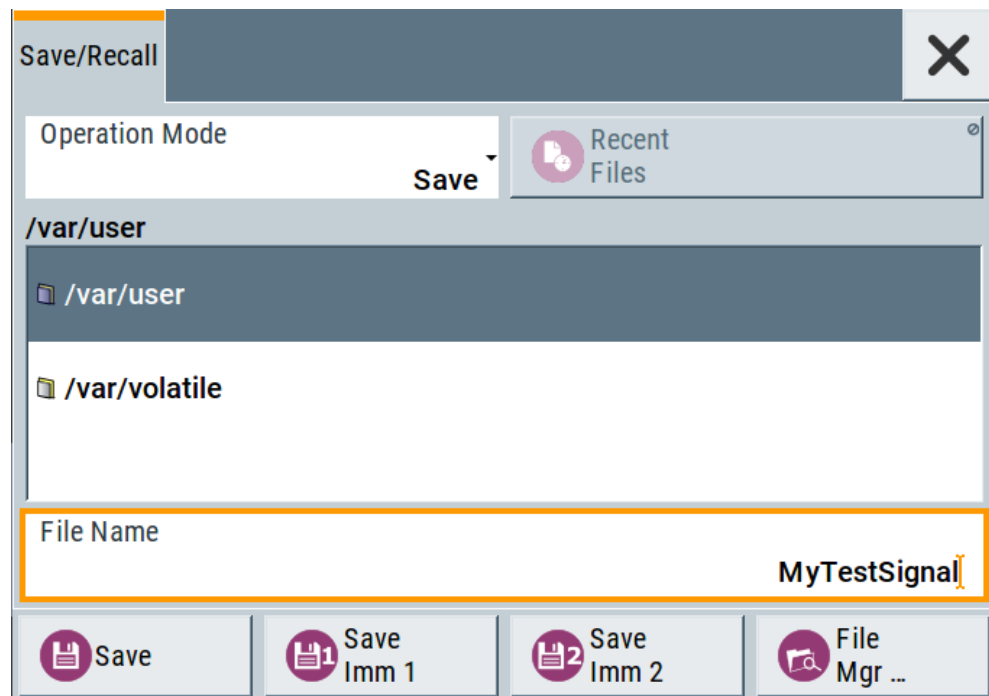**Settings:**

Operation Mode.....	203
Directory, File List and Filename.....	203
Recent files.....	204
Show SCPI List.....	204
SCPI List.....	204
Save.....	204
Save Immediate x.....	204
Exclude Frequency.....	204
Exclude Level.....	205
Recall.....	205
Recall Immediate x.....	205
File Manager.....	205

Operation Mode

Accesses the settings for storing ("Save") and loading ("Recall") of the instrument settings. Also, you can import SCPI-Files ("SCPI-Import") or export SCPI files ("SCPI-Export").

See [Chapter 9.6, "Exporting and Importing Remote Command Lists"](#), on page 208.

Directory, File List and Filename**Note:**

You access this generic standard function each time you perform one of the following:

- Save or load (settings) files
- Define a folder in that these files are saved
- Navigate through the file system.

The dialog name changes depending on the context. The provided functions are self-explanatory and similar.

Use the settings for example as follows:

- To navigate through the file system, use the directory tree.
- To create a file, load and save files, use the dedicated functions ["New"](#), ["Select"](#), [Save](#), and [Recent files](#).
- To access the general data list editor, use the ["Edit"](#) button (see also [Chapter 6.7, "List Editor"](#), on page 145).
- To perform standard file management functions, like create directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see [Chapter 9.8, "Using the File Manager"](#), on page 209).

Remote command:

To list all files in a directory:

[:MMEMory:CDIRectory](#) on page 340

[:MMEMory:CATalog?](#) on page 339

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 418

Recent files

Displays the files last used.

Show SCPI List

Opens the "SCPI List", which lists the current settings of the R&S SMB100B as SCPI commands.

The R&S SMB100B provides this function for [Operation Mode > SCPI-Export](#).

SCPI List

Contains a list of all SCPI commands corresponding to the current instrument settings.

See also ["How to create a SCPI list with the current instrument settings in one step"](#) on page 313

Save

Saves the current instrument settings under the defined filename.

Remote command:

[:MMEMory:STORe:STATe](#) on page 343

Save Immediate x

Stores the current instrument setting in one of the intermediate memories.

These instrument settings are retained until a different instrument setting is stored in the intermediate memory. When the instrument is switched off, the contents of the intermediate memories are retained.

Remote command:

[*SAV](#) on page 331

Exclude Frequency

The current frequency is retained when a stored instrument setting is loaded.

Remote command:

[\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\]:RCL](#) on page 423

Exclude Level

The current level is retained when a stored instrument setting is loaded.

Remote command:

`[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] :RCL` on page 465

Recall

Restores the selected configuration.

During recall, the instrument considers all related settings, for example sweeps in active state or lists. An error message indicates the settings which cannot be implemented.

Remote command:

`:MMEMory:LOAD:STATe` on page 342

Recall Immediate x

Loads the selected configuration from one of the intermediate memories. A message appears if no instrument configuration is stored in this memory.

Remote command:

`*RCL` on page 331

File Manager

Accesses the "File Manager" dialog, see [Chapter 9.8, "Using the File Manager"](#), on page 209.

9.4.2 How to Save and Recall Instrument Settings

Instrument settings can be saved to a file and loaded again later, so that you can repeat the tests with the same settings.

To access and recall instrument setups quickly

- Assign the appropriate action to the [★ (User)] key.
See [Chapter 10.2.4, "How to Assign Actions to the \[★ \(User\)\] Key"](#), on page 239.

To save and recall instrument settings

1. Select "System Config > Save/Recall" > "Operation Mode > Save".
2. Select "Save Immediate 1".
The instrument saves its settings in the intermediate memory 1. The filename and the storage location cannot be changed.
3. Adapt the instrument settings as required. Select "Save Immediate 2"
4. To restore the settings, select the "Operation Mode > Recall"
5. Select "Recall Immediate 1"
The instrument is restored to the previous state.
6. Select "Recall Immediate 2" to switch to the settings stored in the second file.

To save complete instrument settings

1. Select "System Config > Save/Recall" > "Operation Mode > Save".
2. In the file selection dialog, select a filename and storage location for the settings file.
3. Select "Save".

A file with the defined name and path and the extension *.savrc1.txt is created.

To restore instrument's configuration

Save the configuration as described in ["To save complete instrument settings"](#) on page 206.

1. To restore settings, select "System Config > Save/Recall" > "Operation Mode > Recall".
2. To retain the current frequency and level settings, enable "Save/Recall > Exclude Frequency/Level".
3. In the file selection dialog, select the filename and storage location of the settings file.

The settings are restored, but the frequency and level settings are retained; you can repeat the signal generation with the same settings.

See also [Chapter 9.2.3, "How to Recall User Settings Automatically after Preset"](#), on page 199.

9.5 Accessing Files with User Data

Signal generation in list mode, the generation of pulse train signals or applying user correction values use data from list files. Whenever a list file is required as a data source, the instrument provides direct access to the standard "File Select" function. This function enables you to select, create and edit the list files.


9.5.1 File Select Settings

The "File Select" dialog opens automatically each time the signal generation requires list file as data source.

To access a loadable data list file

1. Select ""Sweep" > List Mode Data > List Mode = Data".

A "File Select" dialog for loading, creating and modifying a file is displayed.

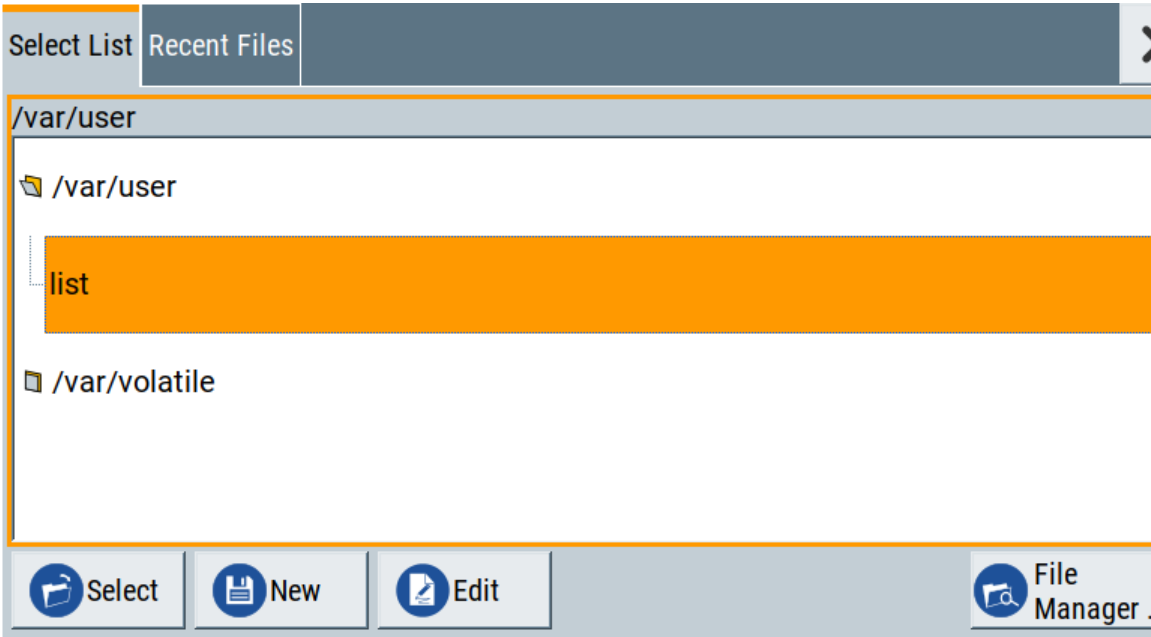

Tip: The name of the dialog is context-sensitive and differs depending on the particular function this dialog is from. However, the provided functions are similar.

2. To load an existing file:
Navigate through the file system.
Select the file and confirm with "Select".
3. To create a file, for example if there is no data list file specified:
Navigate through the file system.
Select "New" and specify the filename.
A new empty file is created and saved in the selected folder.
4. To edit an existing or newly created file:
Navigate through the file system.
Select the file and select "Edit".
The standard "Data List Editor" dialog opens
5. Edit the file content.
Confirm with "Save".

Settings:

Directory, File List and Filename.....	207
Functions for handling of data lists.....	208
Recent files.....	208
File Manager.....	208

Directory, File List and Filename

Note:

You access this generic standard function each time you perform one of the following:

- Save or load (settings) files

- Define a folder in that these files are saved
- Navigate through the file system.

The dialog name changes depending on the context. The provided functions are self-explanatory and similar.

Use the settings for example as follows:

- To navigate through the file system, use the directory tree.
- To create a file, load and save files, use the dedicated functions **"New"**, **"Select"**, **Save**, and **Recent files**.
- To access the general data list editor, use the **"Edit"** button (see also [Chapter 6.7, "List Editor"](#), on page 145).
- To perform standard file management functions, like create directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see [Chapter 9.8, "Using the File Manager"](#), on page 209).

Remote command:

To list all files in a directory:

[:MMEMory:CDIRectory](#) on page 340

[:MMEMory:CATalog?](#) on page 339

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 418

Functions for handling of data lists

Provided are the following standard functions for file handling:

"Select"	Select and load the file. Remote command: [:SOURce<hw>]:LIST:SElect on page 451 [:SOURce<hw>]:PULM:TRAI:n:SElect on page 403 [:SOURce<hw>]:CORRection:CSET[:SElect] on page 417
"New"	Creates file with the specified "Filename". To confirm, select "OK"; use "Cancel" to undo the operation. To edit the file content, select "File Select > Edit".
"Edit"	Accesses the "Data List Editor" and loads the selected file for editing

Recent files

Displays the files last used.

File Manager

Accesses the "File Manager" dialog, see [Chapter 9.8, "Using the File Manager"](#), on page 209.

9.6 Exporting and Importing Remote Command Lists

To set specific instrument settings or perform tasks automatically, you can create scripts or import scripts that contain the settings in the form of remote control command sequences.

The R&S SMB100B also offers a SCPI macro recorder with code generator that is used to record manual settings and create an executable script, see [Chapter 11.8.4, "How to Record / Create SCPI Lists"](#), on page 312.

Completed scripts are stored in files and possibly converted to different formats, depending on the used language of the source code.

The R&S SMB100B supports the following commonly used languages:

- Plain SCPI: *.txt
- MATLAB: *.m
- NICVI: *.c
- Python: *.py

It is also possible to convert the SCPI command list to a user-specific language, see [Chapter 11.8.5, "How to Convert and Save SCPI Lists"](#), on page 315.

9.7 Loading, Importing and Exporting Lists

The R&S SMB100B provides built-in editors for creating list files, for example for the list mode or lists with user correction data. You can also create or evaluate them with an external application. The instrument provides interfaces with the following functionality:

- Import and export list files in a standard ASCII format file

Lists are saved and loaded in the corresponding dialogs. For example, the user correction data list is created and stored in the "User Correction" dialog.

9.8 Using the File Manager

The "File Manager" is a tool similar to a standard Windows Explorer. It helps you manage mass storage media and files stored on the R&S SMB100B.


You can perform the following tasks:

- Copying multiple files from disk to other media
See [Chapter 9.9, "How to Transfer Files from and to the Instrument"](#), on page 216
- Copying files into another directory
See [Cut, Copy&Paste and Delete](#)
- Renaming and deleting files
- Creating directories
See [Create New Directory](#)
- Mapping shared network folders
See [Chapter 9.8.4, "How to Map a Network Folder"](#), on page 213
- Displaying saved files
See [Chapter 9.8.3, "How to Display All Saved Files"](#), on page 213

Access:

- Select "System Config > Save/Recall" > "File Manager".

Tip: Each "Save/Recall" dialog and each "File Select" dialog provides a quick access to the "File Manager", i.e. whenever you select data lists or files with user data.

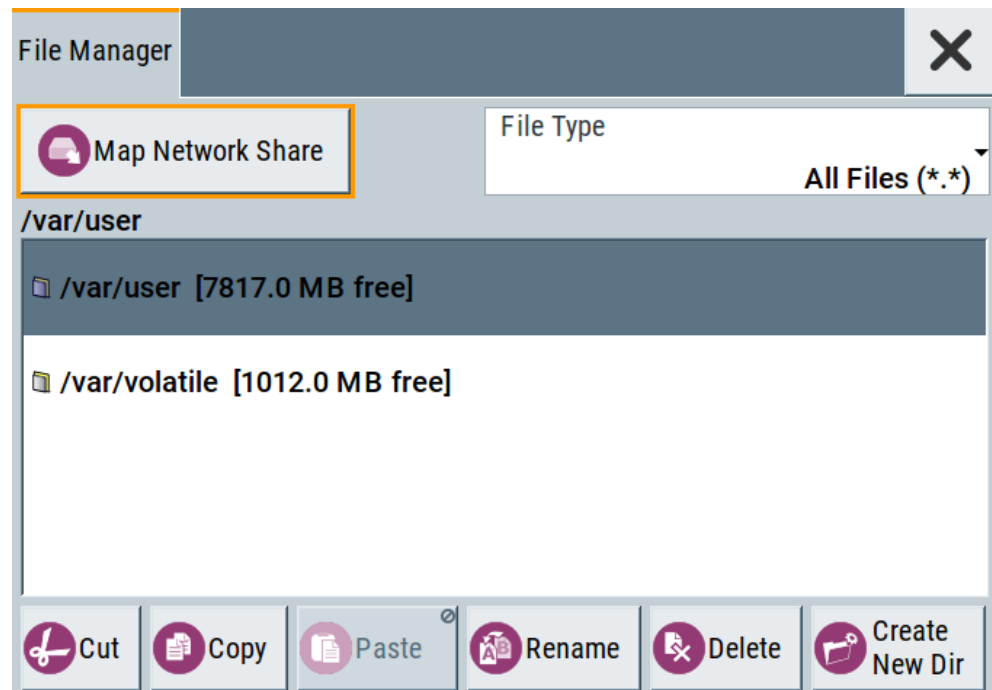

The "File Manager" dialog provides all standard functions required for file management. It displays the contents of the selected folder on the R&S SMB100B and provides functions to rename, delete, copy, or move individual files.

9.8.1 File Manager Settings

Access:

- Select "System Config > Save/Recall" > "File Manager".

Settings:

Map Network Share.....	211
File Type.....	211
Directory and Filename.....	211
Cut, Copy&Paste and Delete.....	211
Rename	211
Create New Directory.....	211

Map Network Share

Accesses the [Map Network Share Settings](#) dialog where you can map one or more network folders.

See also [Chapter 9.8.4, "How to Map a Network Folder"](#), on page 213.

File Type

Selects the file type to be listed. If a file type with a specific file extension is selected, only files with this extension are listed.

See [Chapter A.3, "Extensions for User Files"](#), on page 590 for an overview of the supported file extensions.

Directory and Filename

Selects the directory in which the file to be deleted or copied is located. The dialog lists all files in this directory. Selected files are highlighted. The path is indicated above the directory tree.

Unlike the "Save/Recall" and "File Select" dialogs, the "File Manager" displays the full filenames including extensions.

Remote command:

[:MMEMory:CDIRectory](#) on page 340

Cut, Copy&Paste and Delete

Standard file management functions.

Before a file is deleted, you have to confirm the delete operation.

Remote command:

[:MMEMory:DELeTe](#) on page 342

[:MMEMory:COpy](#) on page 340

Rename

Renames the selected file or directory.

Remote command:

[:MMEMory:MOVE](#) on page 343

Create New Directory

Creates a folder and opens an edit dialog box to enter name and path (absolute or relative to the current directory) of the new folder.

Remote command:

[:MMEMory:MDIRectory](#) on page 342

9.8.2 Map Network Share Settings

Access:

- Select "System Config > Save/Recall" > "File Manager > Map Network Share".

The "Map Network Share" dialog provides settings that are similar to the standard Windows Explorer function "Map network drive". These settings help you to create up to 10 "shortcuts" to shared folders or computers in the network.

The dialog displays a list of current mapped network folders. The directory tree of the "File Manager", "Save/Recall", and "File Select" dialogs indicate a mapped network folder as /shares/<"Local Folder">.

Map Network Share

Network Folder

Local Folder

User Name

Reconnect at Startup

//10.124.0.166/user

setups

instrument

Off

Network Folder

//10.124.0.166/user

Local Folder

setups

User Name

instrument

Password

Reconnect at Startup

☐

Connect

Change

Disconnect

See also [Chapter 9.8.4, "How to Map a Network Folder"](#), on page 213.

Settings:

Network Folder	212
Local Folder	212
User Name	213
Password	213
Reconnect at Startup	213
Connect	213
Change	213
Disconnect	213

Network Folder

Enter the path of the folder or computer, e.g. //<IP Address>/user or //<server name>/user.

Local Folder

Enter a letter or an alias name to describe the folder.

In the directory tree, a mapped network folder is indicated as `/shares/`
`<"Local Folder">`.

User Name

Enter a user name of a user that has the permission to access the selected network folder.

Password

Enter the password of the selected user.

Reconnect at Startup

Enables reconnecting every time you start up the instrument.

Connect

Triggers the instrument to prove the credential and to map (i.e. connect) the selected network folder or computer to the instrument.

You can map up to 10 network folders.

Change

Applies the changes.

Disconnect

Disconnects the network drive.

9.8.3 How to Display All Saved Files

To display all files on the internal memory

1. Select "System Config > Save/Recall" > "File Manager".
2. Navigate to `/var/user/`.

To display all files on a connected USB flash drive

1. Select "System Config > Save/Recall" > "File Manager".
2. Navigate to `/usb/`.

To display all files in the volatile memory

1. Select "System Config > Save/Recall" > "File Manager".
2. Navigate to `/var/volatile/`.

9.8.4 How to Map a Network Folder

Possibly you would like to transfer instrument or user settings to another R&S SMB100B, distribute waveform files to several instruments or you have to access

frequently the same network drive. In these cases, on a R&S SMB100B connected to a LAN you can create a shortcut to this network folder or this computer.

How to: see [Chapter 11.6.3, "How To Connect to LAN"](#), on page 293.

To map a network folder, proceed as follows:

1. On the computer or the network folder you want to map, enable remote access.
You can specify a list of users allowed for remote access.
The remote access settings depend on the operating system the remote computer is using. For step-by-step instructions, refer to the documentation of the particular operating system.
2. On the R&S SMB100B, [enable file transfer via SMB \(samba\)](#).
3. Select "System Config > Setup > Remote Access > Network".
Select:
 - a) "Address Mode > Auto (DHCP)"
 - b) Check that the "DNS Suffix" and "DNS Server" are correct.
4. In the "Save/Recall" dialog, select "File Manager > Map Network Share".
5. In the "Map Network Share" dialog, select:
 - a) In the "Network Folder" field, enter `//<IP Address>/user` or `//<Server Name>/user`.
 - b) In the "Local Folder" field, enter an alias name, e.g. *setups*.
 - c) Enter the "User Name" and "Password" of a user with a remote access permission to the selected network folder.
 - d) If necessary, enable "Reconnect at Startup".
 - e) Select "Connect".

The selected network folder is mapped to your instrument. The list of mapped network folders is updated.

Map Network Share			
Network Folder	Local Folder	User Name	Reconnect at Startup
//10.124.0.166/user	setups	instrument	Off
Network Folder //10.124.0.166/user		Local Folder setups	
User Name instrument		Password	
Reconnect at Startup		<input type="checkbox"/>	
Connect		Change	Disconnect

6. Close the "Map Network Share" dialog.

The navigation tree in the "File Manager" dialog displays the mapped network folder as /shares/Setups.

File Manager	
Map Network Share	File Type List Mode List (*.lsw)
/shares/Setups	
/var/user [7817.0 MB free]	
/shares/Setups [1012.0 MB free]	
/var/volatile [1012.0 MB free]	
Cut	Copy
Paste	Rename
Delete	Create New Dir



If the connection does not succeed, consider to check the following:

- Is the network folder or computer you try to map turned on?
- Is the network folder or computer enabled for remote access?
- Does the selected user name have the necessary permissions?

See also [Chapter 9.9.5, "Using a File Server for Test Files Exchange"](#), on page 221.

9.9 How to Transfer Files from and to the Instrument

As explained in ["File handling"](#) on page 194, you access the file system of the R&S SMB100B via one of the following ways:

- Via the built-in "File Manager"
See [Chapter 9.8, "Using the File Manager"](#), on page 209.
- On an instrument connected to a LAN:
 - Via one of the standard functions ftp or SMB (samba)
See [Chapter 9.9.2, "Accessing the File System of the R&S SMB100B via ftp"](#), on page 218 and
[Chapter 9.9.3, "Accessing the R&S SMB100B File System via SMB \(Samba\)"](#), on page 219
 - Via mapped network drives
See [Chapter 9.8.4, "How to Map a Network Folder"](#), on page 213.
- Via a connected USB storage device
See [Chapter 9.9.4, "Using a USB Storage Device for File Transfer"](#), on page 221

Mainly because of security reasons, the access to the file system of your R&S SMB100B can be denied, because one or all these access methods are deliberately disabled. Access to the file system via LAN and/or USB requires that the corresponding service is enabled and a write access to the file system is enabled. Refer to [Chapter 9.9.1, "Removing File System Protection"](#), on page 216 for description of the required steps.

This section provides an introduction to the topic. For comprehensive information, refer to the application note [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#).

• Removing File System Protection	216
• Accessing the File System of the R&S SMB100B via ftp	218
• Accessing the R&S SMB100B File System via SMB (Samba)	219
• Using a USB Storage Device for File Transfer	221
• Using a File Server for Test Files Exchange	221

9.9.1 Removing File System Protection

Before you try to access the file system via ftp, SMB (samba) or USB, fulfill the following:

- Disable write protection on the file system

- Enable the corresponding service or interface

To enable write permission on the file system

1. Select "System Config > Setup > Security > Security > General"
2. Enable "Volatile Mode"
3. Enter the "Security Password".
The default password is 123456. For more information, see [Chapter 10.4, "Using the Security Settings"](#), on page 246.
4. Select "System Config > Setup > Maintenance > Shut Down"
5. Select "Reboot".

The system reboots. The enabled settings are active.

To enable file transfer via ftp

1. Select "System Config > Setup > Security > Security > LAN Services".
2. Enable "LAN Interface"
3. Enable "FTP"
4. Enter the "Security Password".
The default password is 123456. For more information, refer to [Chapter 10.4, "Using the Security Settings"](#), on page 246.
5. Select "Accept".

To enable file transfer via SMB (samba)

1. Select "System Config > Setup > Security > Security > LAN Services"
2. Enable "LAN Interface"
3. Enable "SMB (Samba)"
4. Enter the "Security Password".
The default password is 123456. For more information, refer to [Chapter 10.4, "Using the Security Settings"](#), on page 246.
5. Select "Accept".

To enable file transfer via USB

1. Select "System Config > Setup > Security > Security > General"
2. Enable "USB Storage"
3. Enter the "Security Password".
The default password is 123456. For more information, refer to [Chapter 10.4, "Using the Security Settings"](#), on page 246.
4. Select "Accept".

9.9.2 Accessing the File System of the R&S SMB100B via ftp

If the R&S SMB100B is connected to a LAN, you can use file transfer protocol (ftp) to access the file system and to transfer files from and to the instrument.

How to: see [Chapter 11.6.3, "How To Connect to LAN"](#), on page 293.

To access the file system via ftp

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via ftp](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
4. In the address field, enter `ftp://<"IP Address" of the Instrument>`, e.g. `ftp://10.124.0.166`.

Tip: The R&S SMB100B indicates its IP address on the home screen.

A log-on dialog opens and requests a password.

The default user name and password is *instrument*.

Tip:


Default password

The FTP and SAMBA file access use the user "instrument" with default password "instrument".

We recommend that you change this password in the "Setup > Security > Password Management > Change User Password" dialog before connecting the instrument to the network.

See [Chapter 10.4.4, "Password Management"](#), on page 256.


5. Enter the password to access the `user` directory.
The `user` directory corresponds to the `/var/user/` directory of the instrument.

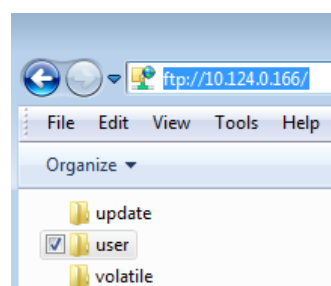

There, you can perform standard functions like creating directory, or saving files.

6. In the `user` directory, create a directory, e.g. `test ftp`.
7. Select "System Config > Save/Recall".
Open the `/var/user/` directory.

The dialog displays the `/var/user/test ftp` directory.

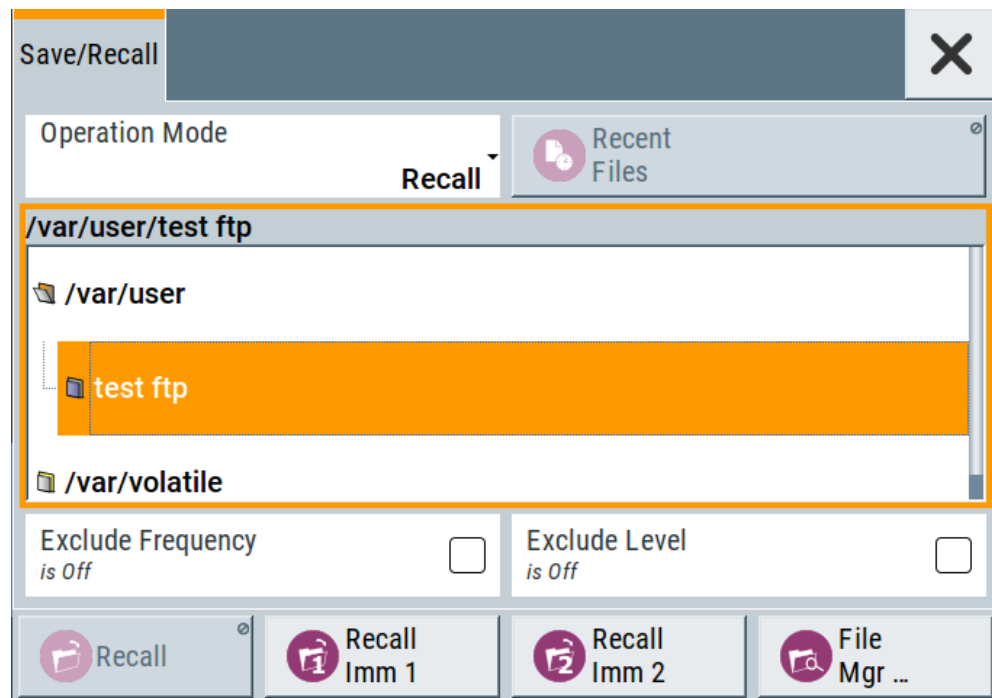

9.9.3 Accessing the R&S SMB100B File System via SMB (Samba)

The SMB (Samba) protocol is an alternative way to access the file system of the instrument from a remote PC. This protocol works if both the instrument and the PC are connected to a LAN.


How to: see [Chapter 11.6.3, "How To Connect to LAN"](#), on page 293.

To access the file system via SMB

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via ftp](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
4. In the address field, enter `//<"IP Address" of the Instrument>`, e.g. `ftp://10.124.0.166`.

Tip: The R&S SMB100B indicates its IP address on the home screen.

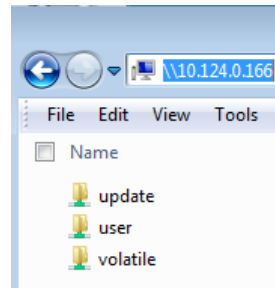

The `user` directory corresponds to the `/var/user/` directory of the instrument; the `volatile` directory - to the `/var/volatile` directory.

To map the R&S SMB100B as a network drive to the remote PC

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via SMB \(Samba\)](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
Open the "Map Network Drive" dialog.
 - a) Select a valid "Drive", e.g. *W*.
 - b) In the "Folder" field, enter `//<"IP Address" of the Instrument>/user` or `//<"Hostname" of the Instrument>/user`
For example: `//10.124.0.166/user` or `//SMB100B-102030/user`.
Tip: The R&S SMB100B indicates its IP address on the screen.
 - c) Select "Finish".

A log-on dialog opens and requests a user name and a password.

The default user name and password is *instrument*.

Tip:

Default password


The FTP and SAMBA file access use the user "instrument" with default password "instrument".

We recommend that you change this password in the "Setup > Security > Password Management > Change User Password" dialog before connecting the instrument to the network.

See [Chapter 10.4.4, "Password Management"](#), on page 256.

4. Enter the user name and the password of your instrument.

The `/var/user/` directory of the instrument is mapped to and displayed as a network drive of the remote PC.

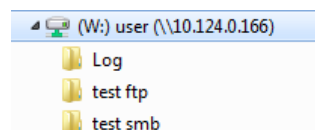

You can access the files in the `/var/user/` directory, perform standard function like creating directory, or storing files.

9.9.4 Using a USB Storage Device for File Transfer

Alternatively to the file transfer possibility via LAN, you can use a USB storage device for direct file transfer from and to the instrument.

We recommend that you transfer files with user data (like lists or instrument setup files) to the instrument, rather than load and play them from a connected USB storage device.

To transfer a file with user data to the instrument

1. Connect a USB storage device, for example a USB memory stick to one of the USB interfaces of the instrument.

The R&S SMB100B recognizes the connected USB storage device automatically.

2. [Enable file transfer via USB](#)
3. [Enable write permission on the file system](#)

4. Select "System Config > Save/Recall".

The dialog displays the `/var/user/` directory and the `/usb/` drive.

5. In the "Save/Recall" dialog, select "File Manager".

6. In the directory tree, navigate to the `/usb/` drive.
Select the required file with user data.

7. Select "Copy".

8. In the directory tree, navigate to the `/var/user/` directory.
Select "Paste".

The file with user data is transferred to the instrument.

9.9.5 Using a File Server for Test Files Exchange

You can use a central file storage location like a file server in your company network to store setup files, SCPI scripts, application programs, or waveform files on it. Usually, you would like to distribute the files to several instruments. If the R&S SMB100Bs are connected to a LAN, you can create a shortcut on the instruments to the file server.

To access the file server

1. On each R&S SMB100B, map the required directory of the file server to the instrument.

Perform the steps described in [Chapter 9.8.4, "How to Map a Network Folder"](#), on page 213.

- On each R&S SMB100B, use the same alias name for the directory of the file server, i.e. enter the same "Local Folder" (in this example *Setups*).

On any of the R&S SMB100B, you access the file server directly from the "File Manager" and under the same name, e.g. `/shares/Setups`.

An extra advantage in remote control is that the same application program would control the instruments.

For example, use the remote control command `MMEMory:CDIRECTory` `"/shares/Setups"` to set the default directory for mass storage.

9.10 Creating Screenshots of Current Settings


The save/recall function enables you to save current settings in a file. To document the most important settings for a performed signal generation, you can also save a hardcopy of the current display.

- [Hardcopy Settings](#).....222
- [How to Save a Hardcopy of the Display](#).....226

9.10.1 Hardcopy Settings

Access:

- Select "System Config > Setup > User Interface > Hardcopy".

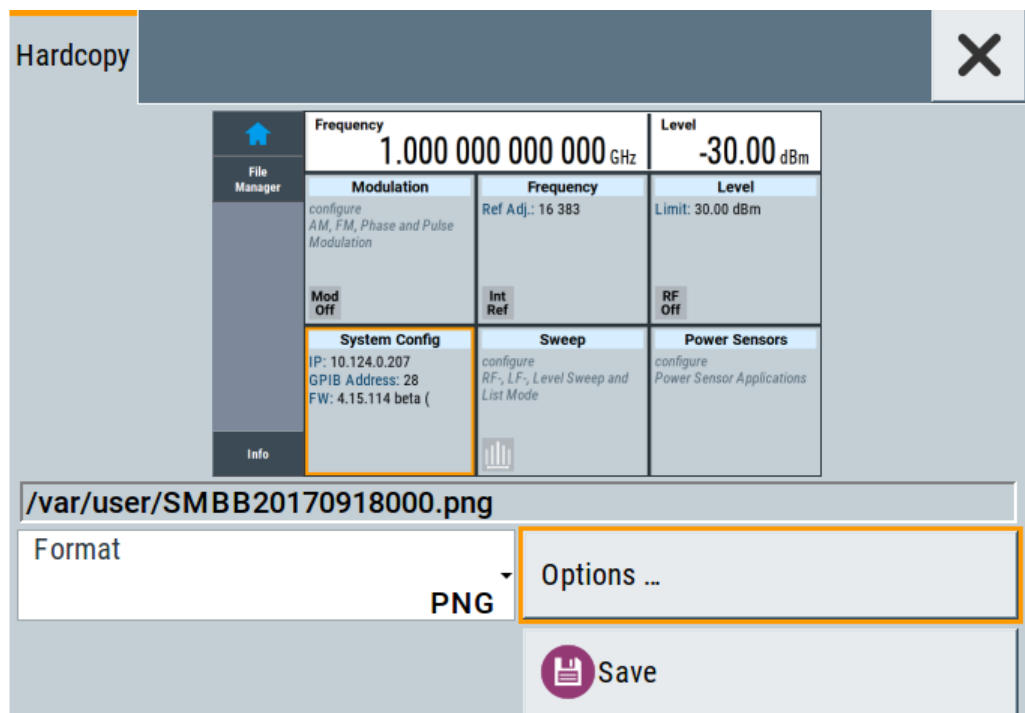

The remote commands required to define these settings are described in [Chapter 12.10, "HCOPY Subsystem"](#), on page 356.

Settings:

File.....	223
Format.....	223
Options.....	223
Save.....	223
Hardcopy Options > Common.....	223
L Automatic Naming.....	224
L Format.....	224
L Region.....	224
Hardcopy Options > Automatic Naming.....	224
L Path.....	225
L Clear Path.....	225
L Prefix, Year, Month, Day.....	225
L Current Auto Number.....	225

File...

In "Automatic Naming > Off" mode, accesses the standard file select dialog for selecting the filename and folder the hardcopy is stored in.

If you have enabled "Automatic Naming", the instrument displays the automatically generated filename.

Remote command:

`:HCOPY:FILE[:NAME]` on page 358

Format

Selects the output file format, for example *.bmp, *.jpg*.xpm and *.png.

Remote command:

`:HCOPY:IMAGe:FORMat` on page 358

`:HCOPY:DEVIce:LANGUage` on page 358

Options...

Accesses [Hardcopy Options](#) dialog.

Save

Saves a hardcopy of the current display as a file.


Remote command:

`:HCOPY[:EXECute]` on page 359

Hardcopy Options > Common

Access: select "Hardcopy > Options... > Common".

With the provided settings, you can customize the file format and the syntax of the automatically assigned filename.

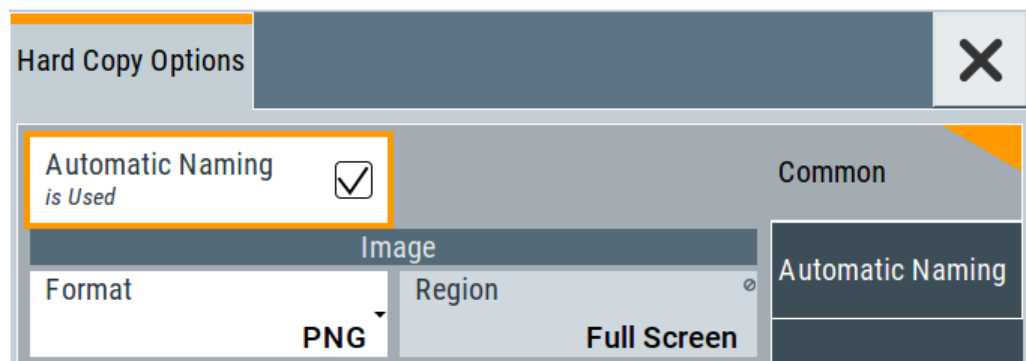

Automatic Naming ← Hardcopy Options > Common

If enabled, creates the output filenames automatically according to the rules set with the [Hardcopy Options > Automatic Naming](#) settings.

Remote command:

[:HCOPY:FILE\[:NAME\]:AUTO:STATE](#) on page 360

Format ← Hardcopy Options > Common

Selects the output file format, for example *.bmp, *.jpg*.xpm and *.png.

Remote command:

[:HCOPY:IMAGE:FORMAT](#) on page 358

[:HCOPY:DEVICE:LANGUAGE](#) on page 358

Region ← Hardcopy Options > Common


Displays the snapshot area.

Remote command:

[:HCOPY:REGION](#) on page 358

Hardcopy Options > Automatic Naming

Access: select "Hardcopy > Options... > Automatic Naming".

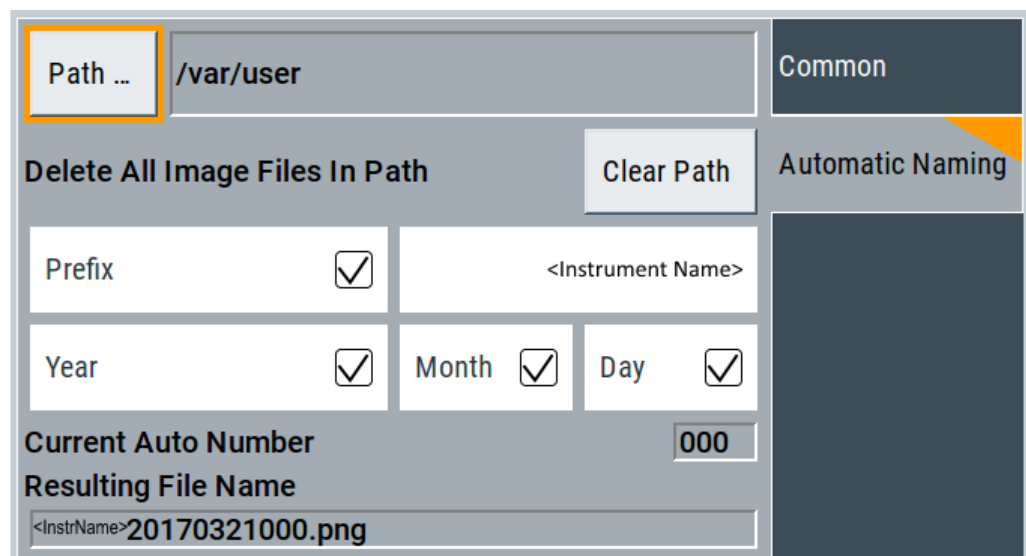

Provided are the following settings:

Path... ← Hardcopy Options > Automatic Naming

Selects the directory.

Note: To select the destination path, specify also a filename. Otherwise an error message is displayed and selection is canceled.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:DIRectory` on page 359

Clear Path ← Hardcopy Options > Automatic Naming

Deletes all image files with extensions *.bmp, *.jpg, *.png and *.xmp in the directory set for automatic naming.

Before the command is executed, a warning message prompts you to confirm the deletion of the files.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar` on page 360

Prefix, Year, Month, Day ← Hardcopy Options > Automatic Naming

Determines the rules for "Automatic Naming".

Per default, the automatically generated filename is composed of:

`<Path>/<Prefix><YYYY><MM><DD><Number>.<Format>`, where Y, M and D mean year, month, Day; Number is the [Current Auto Number](#).

You can activate or deactivate each component separately.

The "Resulting filename" indicates the current filename syntax.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX` on page 361

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX:STATE` on page 361

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATE` on page 360

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATE` on page 360

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATE` on page 360

Current Auto Number ← Hardcopy Options > Automatic Naming

Indicates the number which is used in the automatically generated filename.


Note: When initially switching on the instrument, the number is reset to the lowest possible value. Starting with number 0 the output directory is scanned for existing files. As long as files with the same name are existing, the number is increased by 1. The number is automatically set so that the resulting filename is unique within the selected path. The current number is not in the save/recall file but is temporarily stored within the database. At the following save operation, the number is increased.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBER?` on page 361

9.10.2 How to Save a Hardcopy of the Display

1. Select "System Config > Setup > User Interface > Hardcopy".

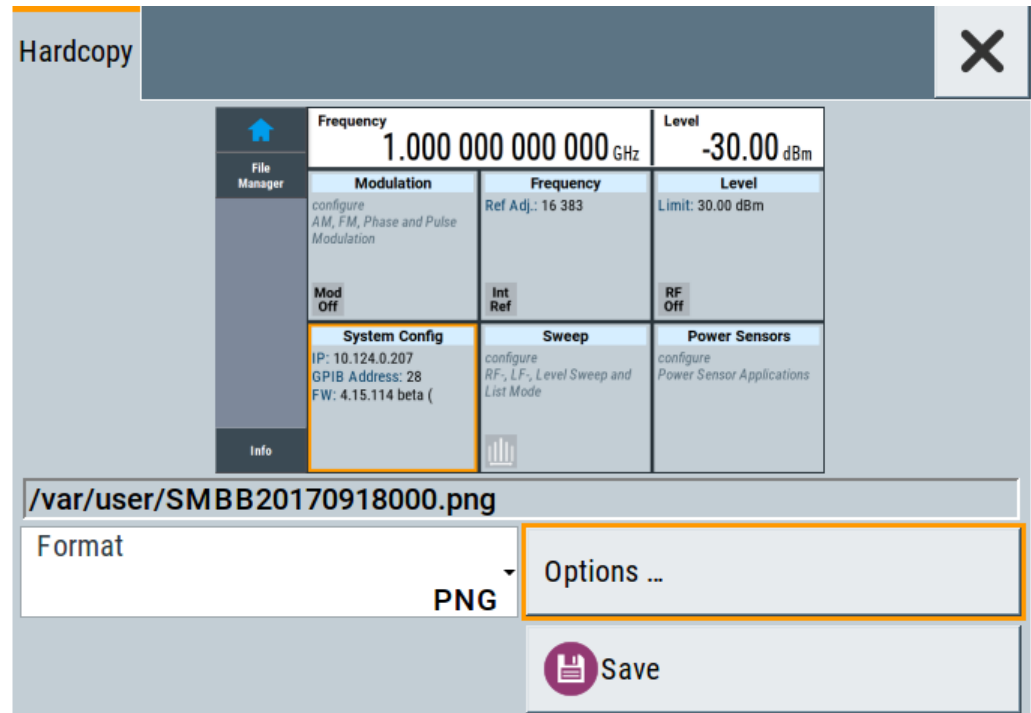

2. To define the output format, select "Format > JPG".
3. To enable the instrument to create output filenames, select "Automatic Naming > On".
4. Select "Options...".
5. In the "Hardcopy Options" dialog:
 - a) To change the default directory the file is saved in, select "Automatic Naming Settings > Path" and define a path and a filename. For example, select the default directory `/var/user`.
 - b) If necessary, disable or change some of the parameters in the "Automatic Naming Settings".
 - c) Close the "Hardcopy Options" dialog.
6. In the "Hardcopy" dialog, select "Save".
The instrument saves a hardcopy of the current instrument display as a `*.jpg` file. The filename is automatically created.
7. To print the hardcopy, connect the instrument to a LAN and:
 - a) Transfer the file to a remote computer as described in [Chapter 9.9, "How to Transfer Files from and to the Instrument"](#), on page 216.
 - b) On the remote computer, navigate through the file system.

- c) Print the selected file.
For more information, refer to the online help of the operating system.

10 General Instrument Functions

The general instrument functions include basic instrument settings, regardless of the selected operating mode and measurement. Some of these settings like screen display and peripherals are initially configured at the setup of the instrument, according to personal preferences and requirements. However, you can individually adjust the settings at any time, for example, if necessary for specific applications.

The following special functions help you in service and basic system configuration:

- [Chapter 10.1, "Customizing the User Interface"](#), on page 228
Allows you to adjust the display and keyboard language settings.
- [Chapter 10.2, "Organizing Frequently Used Settings as Favorites"](#), on page 233
Enables you to group user defined settings in a favorites list or to assign actions to the [★ (User)] as quick access for later retrieval.
- [Chapter 10.3, "Managing Licenses and License Keys"](#), on page 240
If you have purchased an additional option for the R&S SMB100B, you can enable it using a license key.
- [Chapter 9.2, "Restoring the \(Default\) Instrument Configuration"](#), on page 196
At any time, you can restore a default configuration to start a measurement at a defined instrument state, or set the instrument to factory preset.
- [Chapter 15.3, "Performing Maintenance Tasks"](#), on page 553
Special functions like calibration routines and self-tests put your instrument to an initial state.
- [Chapter 10.4, "Using the Security Settings"](#), on page 246
Special security and protection functions protect your instrument from unauthorized use or activate specific test routines.

10.1 Customizing the User Interface

The R&S SMB100B provides basic alignments of instrument settings regarding the user interface, that means the touch panel (screen), the appearance of the displayed dialogs and graphics, and an external keyboard.

Start / stop display update

The operating system of the R&S SMB100B refreshes the displayed settings by default in almost real-time, to keep the display updated with the internally used values. However, you can turn off this function to reduce settling times when the instrument is remote controlled.



We recommend that you switch off the display update for optimum sweep performance with short dwell times and for fast settling times.

Consider that in this case the displayed values can differ from the operated values.

In detail described in the following paragraphs, you can:

- Set display and keyboard language, see [Chapter 10.1.1, "Display and Keyboard Settings"](#), on page 229
- Set date and time for the system clock, see [Chapter 15.3.2, "Date and Time"](#), on page 556
- Configure and activate a [Screen Saver](#)
- Deactivate display update to improve performance, see [Chapter 10.1.2, "Display Update Settings"](#), on page 230
- Determine the state of the RF signal, and the level display in the status bar when you turn on the R&S SMB100B, see [Chapter 10.1.3, "Defining the RF Signal State On Power On"](#), on page 231.

10.1.1 Display and Keyboard Settings

Access:

1. Select "System Config > Setup > User Interface > Display/Keyboard > Display".

Display	USB Keyboard	
Screen Saver <i>is Active</i>	<input checked="" type="checkbox"/>	Wait time 10 Min
Brightness		
Display 14	RF Hardkey 14	

2. Select "Display/Keyboard > USB Keyboard".

Display	USB Keyboard	
Layout English (US)		

In the "Display/Keyboard" dialog, you can change regional and language options for the GUI and an external keyboard, and define the screen saver settings.

The remote commands required to configure the display and keyboard are described in [Chapter 12.8, "DISPlay Subsystem"](#), on page 350 and [Chapter 12.11, "KBOard Sub-system"](#), on page 361.

Screen Saver	230
Wait Time	230
Display	230
RF Hardkey	230
USB Keyboard > Layout	230

Screen Saver

Activates the screensaver.

If activated, the display including backlight is switched off after the selected **Wait Time** elapses and if no entries via touch panel, front panel, external mouse, or external keyboard are made

Remote command:

`:DISPlay:PSAVe[:STATe]` on page 352

Wait Time

Enters the idle time that must elapse before the display lamp is shut off when no entries are made.

Remote command:

`:DISPlay:PSAVe:HOLDoff` on page 351

Display

Adjusts the brightness of the display.

Increase the value to turn up the display brightness.

Remote command:

`:DISPlay:BRIGhtness` on page 352

RF Hardkey

Adjusts the brightness of the [RF on/off] key.

Increase the value to change the contrast between the key and the front panel background color.

Remote command:

`:DISPlay:BUtTon:BRIGhtness` on page 352

USB Keyboard > Layout

Selects the language of an externally connected keyboard via USB. The function assigns the corresponding keys automatically.


Remote command:

`:KBOard:LAYout` on page 362

10.1.2 Display Update Settings

Access:

- Select "System Config > Setup > User Interface > Start/Stop Display Update".

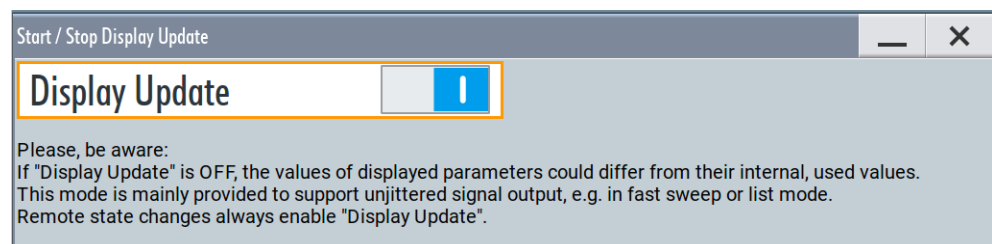

This dialog enables you, to deactivate updating the display.

The remote command to switch off the display update is described in [Chapter 12.8, "DISPlay Subsystem"](#), on page 350.

Display Update is
Disables the automatic refreshing of the displayed values.
Remote command:
`:DISPlay:UPDate` on page 352


10.1.3 Defining the RF Signal State On Power On

As additional functions for the level settings, you can determine the state of the RF signal, and the level display in the status bar when you turn on the R&S SMB100B.

Power-On/EMF settings

Access:

► Select "Level" > "Power-On / EMF".

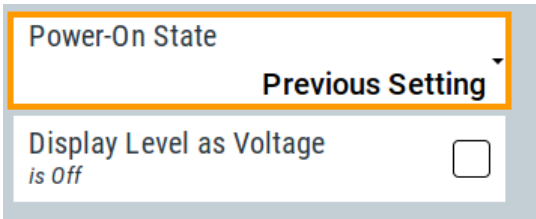

The "Power-On/EMF" dialog contains all settings for configuring the power-on behavior and the level display.

Settings:

Power-On State	231
Display Level as Voltage of EMF	231

Power-On State
Determines the RF signal output state when the instrument is switched on.
You can disable the RF output signal in general, or start it in the same state as it had been when it was switched off.
Remote command:
`:OUTPut<hw>[:STATe]:PON` on page 363

Display Level as Voltage of EMF
Activates display of the signal level as voltage of the EMF (no-load voltage).
If disabled, the level is displayed as a voltage over a 50 Ohm load.

Note:

The setting is not affected by an instrument preset ([Preset] key or *RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[:SOURce<hw>] :POWer:EMF:STATe` on page 461

10.1.4 How to Set the Initial Instrument Settings


This section describes how to set up the R&S SMB100B initially.

10.1.4.1 Setting the Keyboard Language

You can select the language of the external keyboard connected to the instrument.

To adjust the keyboard settings

1. Press the [Setup] key.
2. Select "User Interface > Keyboard".

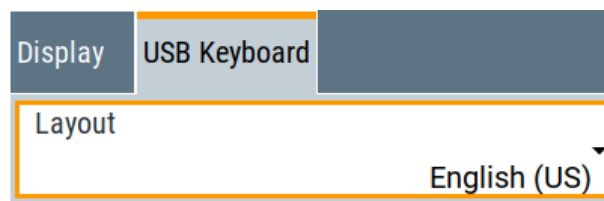

3. Select the "Layout".


The dialog closes and the changes take effect immediately.

10.1.4.2 Setting the Screen Saver

You can enable a screen saver that automatically turns off the display after a user-defined period of time. The screen saver is activated if no settings are made on the touch screen, or via keys or the rotary knob during the selected wait time.

To activate the screen saver

1. Press the [Setup] key.
2. Select "User Interface > Display"
3. Activate the "Screen Saver".

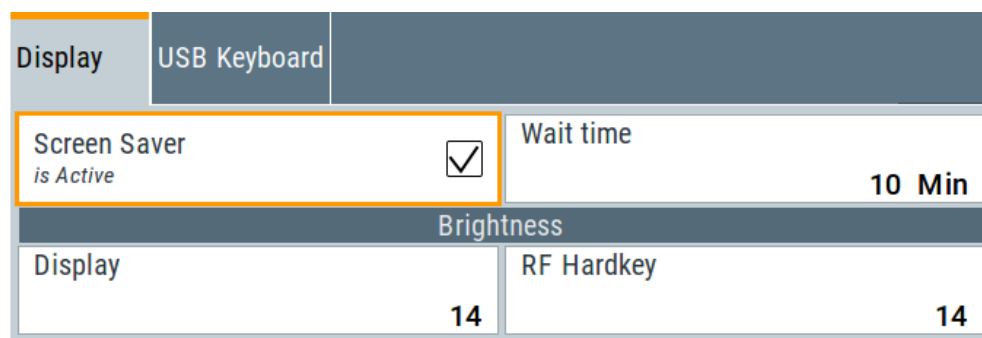

- Define the "Wait Time" in minutes.
The instrument turns off the display after the defined period of time.
- To reactivate the display, tap the screen or press any key on the front panel.

To deactivate the screen saver

- Press the [Setup] key.
- Select "User Interface > Display"
- Disable the "Screen Saver" state.

10.2 Organizing Frequently Used Settings as Favorites

The R&S SMB100B provides two possibilities to define frequently used settings and procedures for later retrieval individually.

User menu and [★ (User)] key

These two functions work similar to the favorites function of a browser or other programs. They allow you to create a list of frequently used actions or to group frequently used settings in one dialog.

You can collect the parameters of your configuration in a favorites list, i.e. in the "User Menu", or define settings and actions with the [★ (User)] key:

- "User Menu" to group settings of specific tasks.
Similar to a favorites function, you can use this menu for:
 - Grouping the settings required for a task in one dialog.
 - Saving and recalling the settings of a task.
 - Transferring the settings for use on multiple instruments.
- [★ (User)] key, with customizable function.
You can perform the following steps using this key:
 - Open the "User Menu" (default functionality).
 - Add or remove settings and functions.
 - Execute actions and access functions.

Possible applications

The ★ (User) key and the "User Menu" are useful for the following situations:

- There are functions or tasks you have to perform in a defined order but the setting parameters are distributed across several dialogs.
- There are functions or tasks you have to perform frequently but they are not accessible via the front panel keys.
- The required functions are grouped in a dialog that is not directly accessible from the home screen.
- Your task involves the frequently loading and executing of certain SCPI scripts. Refer to [Chapter 11.8.4, "How to Record / Create SCPI Lists"](#), on page 312 for information on how to create an SCPI script.
- A quick access to saved setups is required.
- There are functions and tasks you have to perform on several instruments.

Dialog identification

To identify each dialog, the instrument uses a dedicated dialog ID. The dialog ID contains the dialog position on the display and the current active tab. The action that triggers the instrument to open a dialog uses this identification.

Save/Recall vs. recall setup

If you need to restore a specific signal generation setup and perform further configurations based on this particular instrument state, the R&S SMB100B provides two options:

- "Save/Recall" function
For a detailed description, refer to [Chapter 9.4, "Saving and Recalling Instrument Settings"](#), on page 201.
- "Recall Setup" function
If the "Recall Setup" is the only user action assigned to the [★ (User)] key, pressing this key triggers the R&S SMB100B to load the user-defined preset file immediately.

10.2.1 User Menu Settings

The "User Menu" dialog contains function keys to organize, save and load a favorites list. You can also modify, add or delete list entries directly in the dialog.

Clear User Menu

Removes all entries from the "User Menu" at once.

Save User Menu

Saves the current "User Menu" under the defined filename.

Recall User Menu

Loads the selected "User Menu" file.

This function enables you to use the user specific favorites file on another instrument. However, if functions or parameters are not provided due to varying configuration of the instrument, the settings of these particular parameters take no effect.


10.2.2 How To Use the User Menu for Fast Adjustments

Access:



1. Press the [★ (User)] key.

The "User Menu" dialog opens.

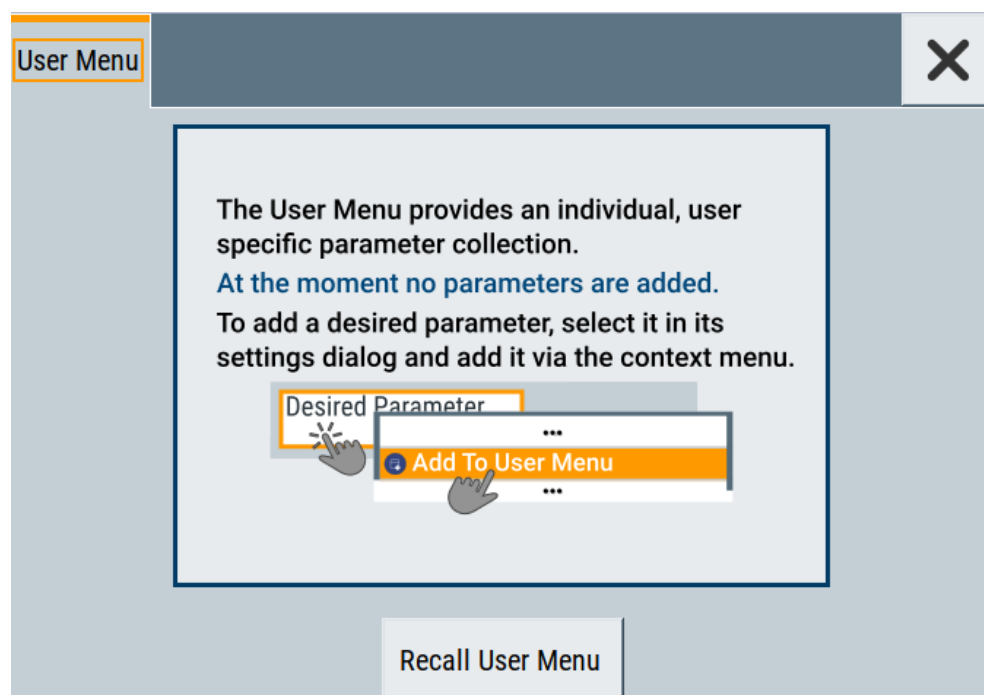


If you execute this action for the first time, the dialog displays instructions on how to use the "User Menu".

2. If you already have a saved user menu file on the instrument, you can load with "Recall User Menu".

Creating a "User Menu"


To create your own user dialog with settings:

 1. Open a dialog with settings you frequently use.
2. Select a parameter.
3. Open the context menu and select "Add to User Menu".





 
A favorites icon ★ indicates that the parameter is used in the "User Menu".



The "User Menu" button in the taskbar confirms that you have created a "User Menu" with at least one entry.

4. Press the [★ (User)] key.

The "User Menu" dialog shows all parameters that you have added to the list.

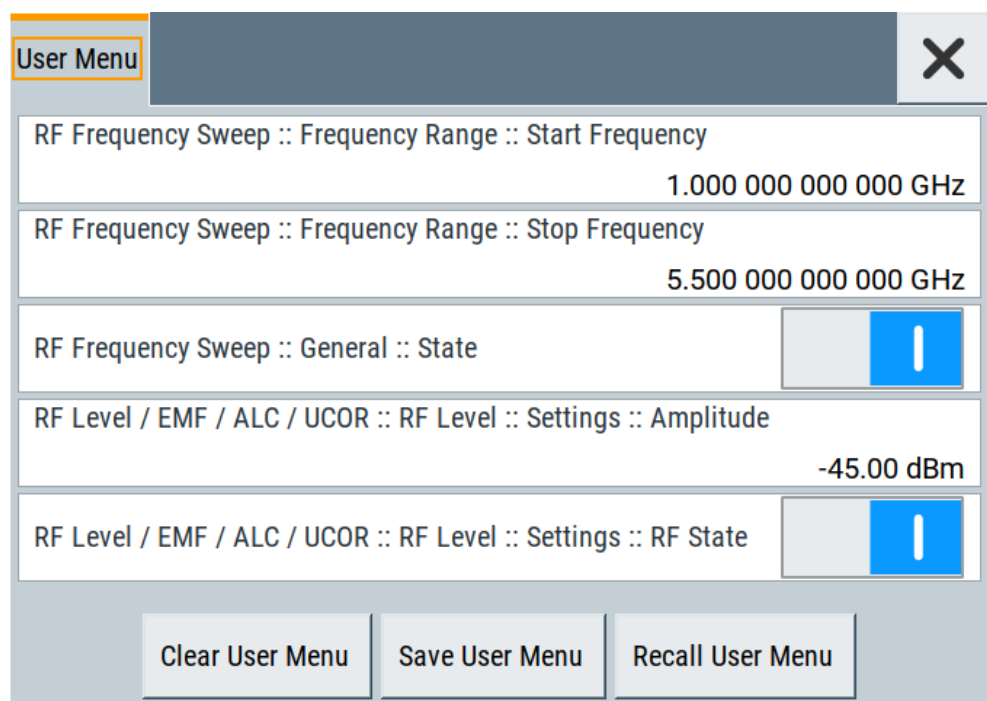

You can modify the parameter settings directly in this dialog, e.g. change a state or set values, as you do in the particular dialog the parameter originally belongs to.

5. To remove an entry, select the parameter either in the "User Menu" or in the dialog where it originally belongs to.
 - a) Open the context menu and select "Remove from User Menu".



6. To remove all entries at once, select "Clear User Menu".
7. To save your individual favorites list, select "Save User Menu", and follow the file managing instructions.

The file system automatically assigns the file extension *.user_menu.

8. To recall a previously saved user menu, select "Recall User Menu" and proceed accordingly.

Providing a user menu favorites list for several instruments

To transfer files from or to an instrument:

1. Create the favorites list, as described in ["Creating a "User Menu" on page 235.](#)
2. Save the favorites list.
3. To transfer a file from or to an instrument, the R&S SMB100B provides several options, see ["File handling" on page 194.](#)

10.2.3 Define User Key Actions Settings

Access:

- Select "System Configuration > Setup > User Interface > Define User Key".

Name	Action
Open User Menu	:DISP:DIAL:OPEN "CSetupDlgUserMenu"

Name: Open User Menu

Wizard: Recall Setup

SCPI: :DISP:DIAL:OPEN "CSetupDlgUserMenu"

Buttons: Add, Change, Remove, Back to Exec Mode ...

The dialog displays a list of the currently enabled actions and provides functions to define new, edit or remove existing actions. If no actions have been defined, the list is empty.

See [Chapter 10.2.4, "How to Assign Actions to the \[★ \(User\)\] Key"](#), on page 239.

The remote commands required to define these settings are described in [Chapter 12.8, "DISPlay Subsystem"](#), on page 350.

Name

Enters a user-defined name for the action.

Wizard

Defines the action to be executed.

"Load SCPI Script"

Selecting the action load and executes the SCPI script.

"Recall Setup"

Load a setup for quick access to the user-defined settings.

"Open Dialog"

Quick access to the selected dialog.

Select

Depending on the selected "Wizard", provides access to:

- The standard "File Select" function for loading of an SCPI script or setup file
- A list of the dialog IDs of all currently opened dialogs. The dialog ID is used for dialog identification in the remote control.

See [SCPI](#).

SCPI

For the currently selected action, displays the corresponding SCPI command with the associated parameter for dialog identification (dialog ID). The automatically displayed SCPIs are enabled for subsequent modification.

Remote command:

[:DISPlay:DIALog:OPEN](#) on page 354

See also [:DISPlay:DIALog:ID?](#) on page 353

Add, Change, Remove


Standard functions for managing of the actions.

Back to Execute Mode

Opens the "Select Action to Execute" dialog. Select an Action form the list to execute it.

To return to the "Define User Key Actions" dialogs, select [Select Action to Execute > Define Actions](#).

Select Action to Execute > Define Actions

Name	Action
Open User Menu	:DISP:DIAL:OPEN "CSetupDlgUserMenu"
Open	:DISP:DIAL:OPEN "CSetupFrontPanelKe...
 Define Actions ...	

Accesses the "Define User Key Actions" dialog.

10.2.4 How to Assign Actions to the [★ (User)] Key

The customizable [★ (User)] key has no predefined function assigned. You can individually define actions to be executed or functions to be accessed when pressing this key.

To assign a frequently used dialog to the [★ (User)] key:

1. Open the dialog you want to quickly access.
For example, select "Level > UCOR > Import/Export"
2. Select "System Configuration > Setup > User Interface > Define User Key".
3. To create an action:
 - a) Specify the "Name".
E.g. *OpenUcorImportExportList*.
 - b) Select "Wizard > Open Dialog"
 - c) Select "Select" and select the dialog ID from the list

The corresponding SCPI command is automatically displayed and can be later modified.

4. Select "Add" to store the new action in the list of user key actions.


Name	Action
Open User Menu	:DISP:DIAL:OPEN "CSetupDlgUserMenu"
OpenUcorImportExportList	:DISP:DIAL:OPEN "DlgKeyRf_Ucor\$t3\$t0\$t0"

Name: OpenUcorImportExportList Wizard: Open Dialog Select

SCPI: :DISP:DIAL:OPEN "DlgKeyRf_Ucor\$t3\$t0\$t0"

Add Change Remove Back to Exec Mode ...

5. To execute the created action, press ★ (User).
In the list of actions ("Select Action to Execute" dialog), navigate to the required action.
In this example, this is "OpenUCORImportExportList".

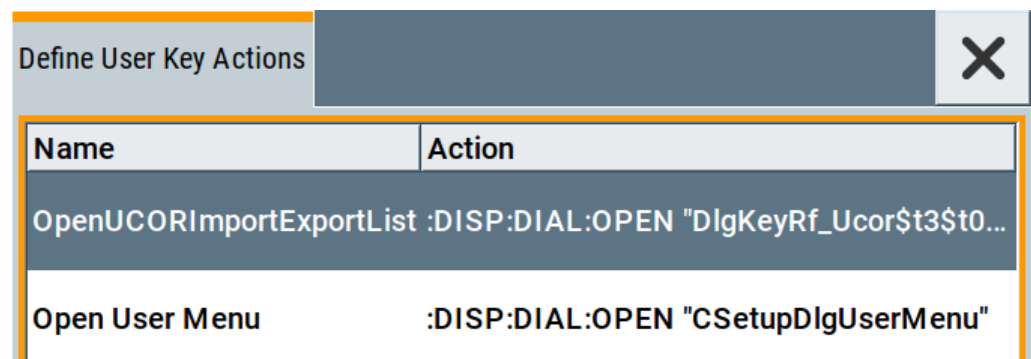

The R&S SMB100B executes the action and opens the dialog.

10.3 Managing Licenses and License Keys

An option is ready to operate after it is enabled with a license keycode supplied with the option. The license key is delivered as a file or on paper. Unregistered licenses must be registered for a particular instrument before the corresponding option can be enabled for operation.



For reliable operation, a software option usually requires the latest firmware version. The required version is specified in the delivery. If your instrument works with a former firmware version, update the firmware before enabling the software option.

The firmware update is described in the R&S SMB100B service manual.

10.3.1 Manage License Keys Settings

The "Manage License Keys" dialog provides all information on the available licenses. Instrument-related steps guide you through the process of registering or deactivating licenses.

Access:

1. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Manage License Keys".

Manage License Keys | Installed License Keys | X

Device ID: 1422.1000K02-000000-QC

Enter License Key

Enter License Key

*** ** *

Import License Key From File ... | Export Deactivation Response To File ...

License Installation Info

In this tab, you can activate licenses for newly purchased or newly registered options.

2. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

Manage License Keys | **Installed License Keys** | X

Show Inactive ☐ | Show Deactivated ☐ | Open License Server

	Export License Key To File	Option	License Count	License Type	Registrations
1 ...		<InstName>-Opt>	1	Permanent	
2 ...		<InstName>-Opt>	2	Permanent	
3 ...		<InstName>-Opt>	1	Timed (2160 h left)	

This tab lists all active options, with information on the available number of an option, the license type and registration. You can query inactive or disabled options also.

3. Select "Open License Server".
See [Chapter 10.3.2, "Using the License Server"](#), on page 243.

The "Manage License Keys" dialog covers all required parameters for activating or deactivating newly purchased or newly registered options, and provides access to the onboard license server, see [Chapter 10.3.2, "Using the License Server"](#), on page 243.

Settings

Device ID.....	242
Enter License Key.....	242
Import License Key from File.....	242
Export Deactivation Response to File.....	242
License Installation Info.....	242
Installed License Keys.....	242
L Show Inactive.....	242
L Show Deactivated.....	242
L Installed License Keys Table.....	243
Open License Server.....	243

Device ID

Displays the instrument-specific identification number. The device ID is a unique string with the following structure:

```
<stock number>-<serial number>-<checksum>
```

Enter License Key

Type here the license key provided with the option.

For license keys delivered as a file, use [Import License Key from File...](#)

Import License Key from File...

Opens a dialog for selecting the file with the license key.

Use this function also to import the deactivation key file generated by the R&S License Manager online tool (see [How to Move a Portable License](#)).

Export Deactivation Response to File...

Exports the generated deactivation response key to a file and opens a file management dialog to save the file.

This key is required during the unregistration process, e.g. when you want to deinstall an option or have a portable option, which you want to register later on another instrument (see [How to Move a Portable License](#)).

License Installation Info

Indicates status information on the performed actions.

Installed License Keys

Access: select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

Comprises information on the installed options.

Show Inactive ← Installed License Keys

Enables the display of the inactive (expired) licenses in the [Installed License Keys Table](#).

Show Deactivated ← Installed License Keys

Enables the display of the deactivated licenses in the [Installed License Keys Table](#).

See [How to Move a Portable License](#) for information on how to activate deactivated licenses.

Installed License Keys Table ← Installed License Keys

Shows information on the currently installed options.

"Export License Key to File"

Opens a dialog to save the generated license key file. This file is required during the unregistration process.

If you have a portable unregistered option, you can register it later on another instrument (see [How to Move a Portable License](#)).

"Option"

Displays the option short designation.

Tip: Open the [Hardware Options/Software Options](#) dialog to retrieve more information about the installed options.

"License Count"

Displays the number of the licenses for the selected option key.

"License Type"

Displays the type of license.

A license type determines the common qualification application duration and the portability of a license. The following license types are provided: evaluation, permanent, portable, quantified, time-controlled with a duration of 1, 3, 6 or 12 months. A license can also be deactivated or expired.

For time limited licenses, the left time of applicability is displayed too.

"Registrations" (reserved for future use)

Open License Server

Opens the R&S License Server of the R&S SMB100B, see [Chapter 10.3.2, "Using the License Server"](#), on page 243.

10.3.2 Using the License Server


The R&S SMB100B now supports handling of software licenses using the license server from Rohde & Schwarz.

The R&S License Server is a browser application you can access directly in the R&S SMB100B. The onboard license server is integrated in the instrument firmware with connection to a *local smartcard* memory. The local smartcard holds local licenses, i.e. licenses used on this specific instrument.

To open the license server

Access:

1. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

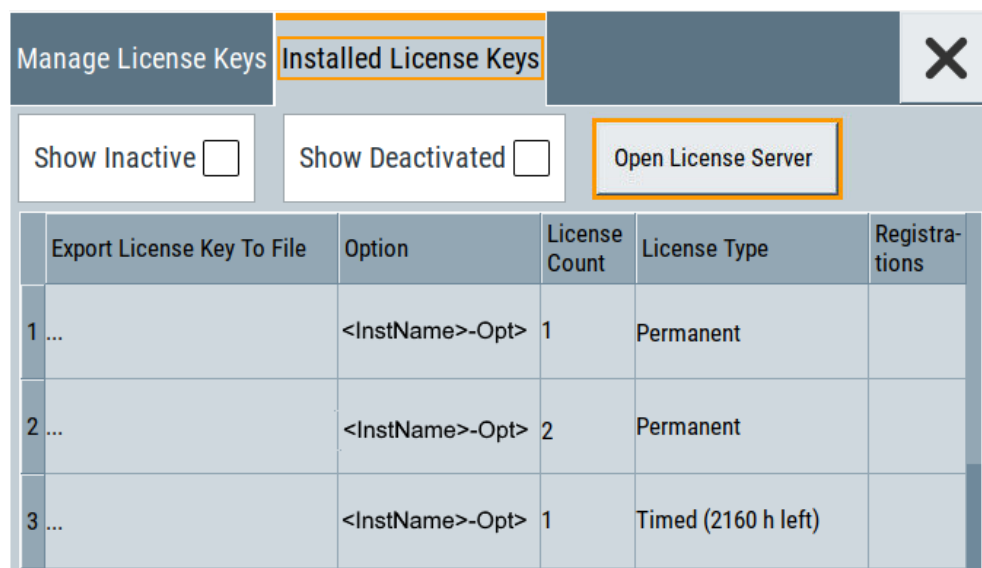

2. Select "Open License Server".

The license server browser opens. The application shows the internal license server of the R&S SMB100B in the "License providers" tile. The "License", "Analytics" and "Configuration" views enable you to activate licenses, or, e.g., deactivate and release licenses again.

In the "License Info" tile on the right, the application shows the characteristics of the selected license provider.



To expand the license key list window, fold in the "License Provider" and the "License Info" tiles .

Short glance at the "Analytics" and "Configuration" views

To get a brief introduction on these views:

1. Select "Analytics".

Shows information on configured client applications, license providers and license types. It provides access to the client applications and enables you to export statistics data for evaluation in external applications.

2. Select "Configuration".

Shows configured license servers, access lists and installed product definitions. It provides access to add and to remove license server configurations and to manage local licenses.



 
For details on handling and functionality, see the manual R&S®License Server - Managing Licenses - User Manual

To manage licenses on the R&S SMB100B

To request or return a license, proceed as follows:

1. Access: see ["To open the license server"](#) on page 243.

The browser application opens.

2. Select the "Licenses" view.
3. In the "Licenses providers" tile, select the license provider, e.g. R&S SMBB.
The license server shows the license key list with the options available for the selected provider. In this example, the licenses of the R&S SMB100B.
4. Select the option license summary view .
This view lists the options, the number of available licenses, and the state of their use. In the last column, you can see the maintenance expiration date of each license.
5. To request enabling a license, select  (activate) in the toolbar.
6. To return the license, select  (discontinue).
7. Follow the instructions on the screen.

10.3.3 How to Move a Portable License


This example is intended to explain how to perform the required steps at the instrument.

Use a USB flash drive to transfer the license key files between the instruments and the browser.



We assume knowledge about the handling of the R&S License Manager online tool and the description of the whole process.

1. Open your browser. Enter <https://extranet.rohde-schwarz.com/service>.
Select "Manage Licenses > Move Portable License".
The first step requires the Device IDs of the source and target instruments.
2. To find out the Device IDs, proceed as follows:
 - a) On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Manage License Keys > Device ID".

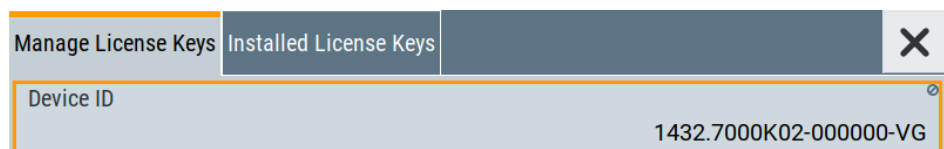

- b) On the target instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Device ID".
 - c) In the browser, select "Manage Licenses > Move Portable License > Select Devices" and enter the Device IDs.
3. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys > License Keys Table".

Navigate to the portable license you want to move.

Select the "Export License to File" column.

A standard file manager dialog opens.

4. Enter a filename. Save the exported license key, e.g.
k123_portable_key_to_move.xml.
5. In the browser, select "Manage Licenses > Move Portable License > Select License (from file)" and select the exported license key.
Check the selection. Create the deactivation key. Save it to file.
6. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Manage License Keys > Import License Keys from File".
Select the transferred deactivation key.
7. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Manage License Keys > Export Deactivation Response to File".
8. In the browser, go to "Manage Licenses > Move Portable License > Install Deactivation Key (from file)".
Enter the deactivation response of the instrument.
The license is deactivated for the source instrument.
9. In the "Manage Licenses > Move Portable License", go to step "Create License" to generate a license key for this portable option and the selected target instrument.
Download the license key as a file. Transfer it to the target instrument.
10. In the target instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Import License Keys from File".
Select the created license key file.

The portable option is installed on the target instrument.

10.4 Using the Security Settings

The protection function of the R&S SMB100B offers several levels to activate particular functions like self-test or tests for service purposes specifically.

Protection

The five protection levels are automatically active on startup, the protection levels, that means all protected functions are locked.

To unlock a protection level:

- In the "System Config > Setup > Security > Protection", enter the correct password.

To lock a protection level:

- Clear the corresponding checkbox.

Protection levels

The following functions are protected in the respective levels:

- **Protection level 1**
Protects against accidental changes, like, for example, the clock and date, several internal adjustments functions and the self-test, as well as network settings or the instrument hostname.
You can access this level with the password 123456.
- **Protection level 2**
Unlocks protected service functions. It is accessible to authorized personnel of Rohde & Schwarz service department only.
- **Protection level 3 to 5**
Are reserved for internal use.

Security

The security concept of the R&S SMB100B helps you to protect your instrument against uncontrolled access and changes. All provided security services require that you enter the security password.

Provided security services are:

- **General** security parameters, such as:
 - **USB storage** that secures controlled access to the mass memory of the instrument
 - **Volatile mode** that prevents information to be written to the internal memory permanently.
 - **Sanitizing** that prevents the instrument from leaving a secure environment with stored user information.
 - **Annotation** frequency and amplitude prevent reading the display.
 - **Secure Update Policy** check that verifies the integrity and origin of the firmware package to be installed.
To access the settings of these topics, see [Setting Security Parameters > "Secure Update Policy"](#) on page 249.
- **Password** management secures controlled user access to the instrument
With the two-step password concept, you can assign a user-defined password for the operating system, and a security password for accessing the mass storage of the instrument.
See also [Chapter 10.4.4, "Password Management"](#), on page 256.
- **LAN services** secure controlled network access
You can individually lock and unlock supported LAN interface services. Also you can activate and deactivate SMB client and SMB server, that use versions 1.0 and 2.0 of the SMB protocol. See [Chapter 10.4.3, "Configuring LAN Services"](#), on page 254.
Remote control via the LAN interface requires that the interface is activated. Once the interface is activated, enable or disable LAN services as needed.
- **User interface** prevents front panel operation and/or reading the display.

For more information, see the document R&S SMB100B Instrument Security Procedures.

10.4.1 Protection Level Settings

Access:

- Select "System Config > Setup > Security > Protection".

Protection Level 1	<input checked="" type="checkbox"/>	⊙	Password	*****
Protection Level 2	<input checked="" type="checkbox"/>	⊙	Password	*****
Protection Level 3	<input checked="" type="checkbox"/>	⊙	Password	*****
Protection Level 4	<input checked="" type="checkbox"/>	⊙	Password	*****
Protection Level 5	<input checked="" type="checkbox"/>	⊙	Password	*****

The "Protection" dialog provides access to the unlocking of different protection levels.

Several functions in the instrument are password-protected to prevent for example accidental changes, "[Protection](#)" on page 246.

The remote commands required to unlock a protected stage are described in [Chapter 12.15, "SYSTem Subsystem"](#), on page 483.

Protection Level/Password

Unlocks the selected level of protection, if you enter the correct password.

The default protection level 1 password is 123456.

To lock the protection level again, clear the checkbox.


Remote command:

:SYSTem:PROTect<ch>[:STATe] on page 492

10.4.2 Setting Security Parameters

Access:

- Select "System Config > Setup > Security > Security > General".

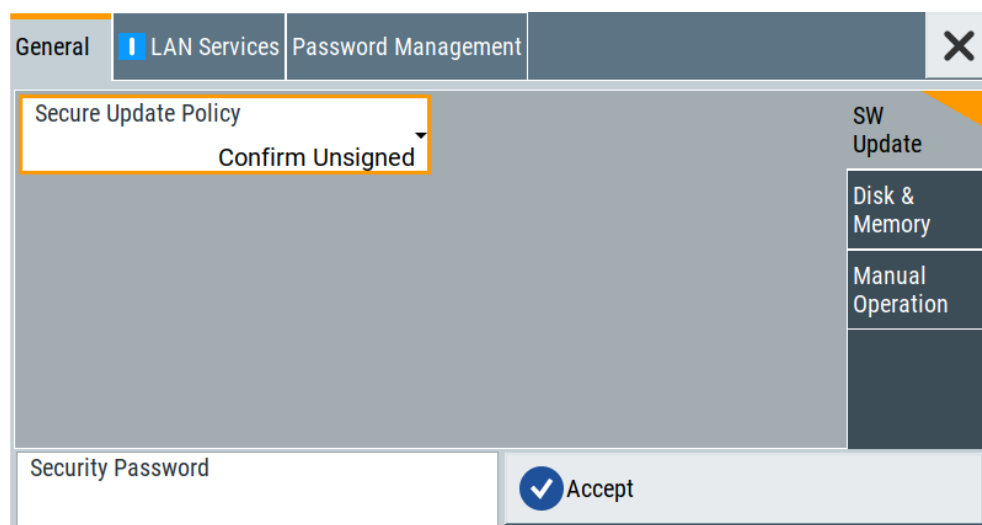

In the "General" tab, you can determine the security level for firmware updates, and configure the security settings for the mass memory and manual operation.




All modified settings in this dialog are not applied until you enter the [Security Password](#) and confirm with [Accept](#).

10.4.2.1 Update Policy Security Settings

Access:

- Select "System Config > Setup > Security > Security > General > SW Update".

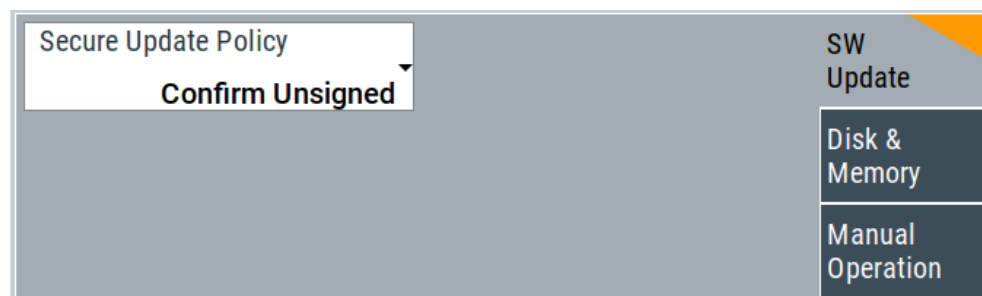

The SW Update tab enables you to select the security mode for firmware updates.

The remote commands available to control security settings are described in [Chapter 12.15, "SYSTem Subsystem"](#), on page 483.

Secure Update Policy

Allows you to configure the automatic signature verification for firmware installation.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

See also:

- [Chapter 10.4, "Using the Security Settings"](#), on page 246 for more information on the security concept.
- The release notes for details on signature verification when installing new or former firmware versions, available at www.rohde-schwarz.com/firmware/smb100b.

"Confirm Unsigned"

Performs the signature verification.

If the check detects any discrepancies, the instrument issues a warning message. You can still update the firmware or reject updating.

This setting also enables you to downgrade the firmware version.

"All Packages" Accepts all packages without signature verification.

"R&S Signed Packages"

Performs the signature check.

If the check detects any discrepancies, the instrument issues a warning message and locks the update to this firmware.


Remote command:

:SYSTem:SECurity:SUPolicy on page 501

10.4.2.2 Disk & Memory Security Settings

Access:

- ▶ Select "System Config > Setup > Security > Security > General > Disk & Memory".

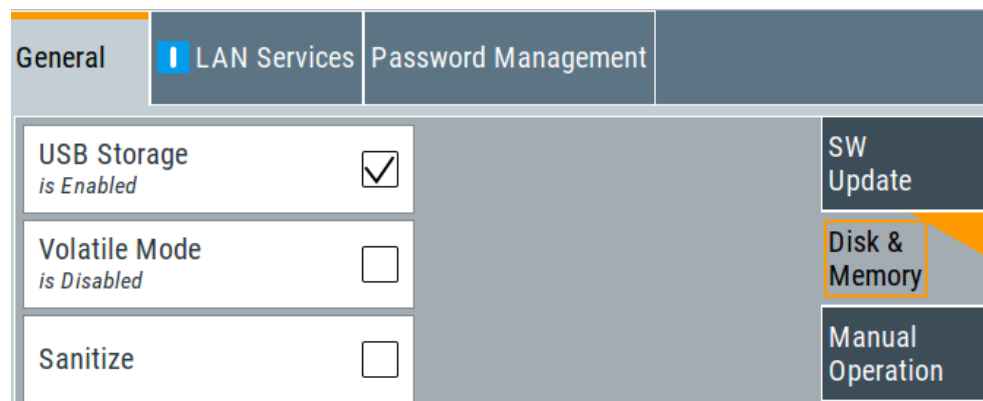

The "Disk & Memory" tab secures controlled access to the mass memory and prevents information from leaving a secure environment.

The remote commands available to control security settings are described in [Chapter 12.15, "SYSTem Subsystem"](#), on page 483.

USB Storage

Activates the access to external USB storage media.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

See also [Chapter 9.9.4, "Using a USB Storage Device for File Transfer"](#), on page 221.

Note: Remove all USB memory devices before disabling the USB storage. If any USB memory device remains connected, disabling is blocked, and the instrument returns a warning message.


Volatile Mode

Activates volatile mode, so that no user data can be written on the internal memory permanently.

In volatile mode:

- Data that the instrument normally stores on the internal memory is redirected to volatile memory.
- The user directory is mapped to the volatile memory. You access the temporary data just as data stored in the `/var/user/`, see [Chapter 9.3, "Protecting Data"](#), on page 201.
- Data on the internal memory cannot be changed. It is protected against modification or erasure.
- You can only save data:
 - Temporarily in the volatile memory
 - On a connected external storage device, such as a memory stick

To activate volatile mode: enter the security password, confirm with "Accept" and reboot the instrument. Otherwise the change has no effect.

Activated volatile mode is indicated by the icon .

Remote command:

`:SYSTEM:SECurity:VOLMode[:STATe]` on page 492

Sanitize

Executes the erase procedure that sanitizes the internal memory.

The sanitizing function makes sure that no user information is stored on the instrument when it leaves the secure environment.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

Note: If the instrument is subject to high security, and you have disabled volatile mode, the internal memory holds user-data, and thus poses a security risk.

See also [Chapter 10.4, "Using the Security Settings"](#), on page 246 for more information on the security concept.


Remote command:

`:SYSTEM:SECurity:SANitize[:STATe]` on page 501

10.4.2.3 Manual Operation Security Settings

Access:

- ▶ Select "System Config > Setup > Security > Security > General > Manual Operation".

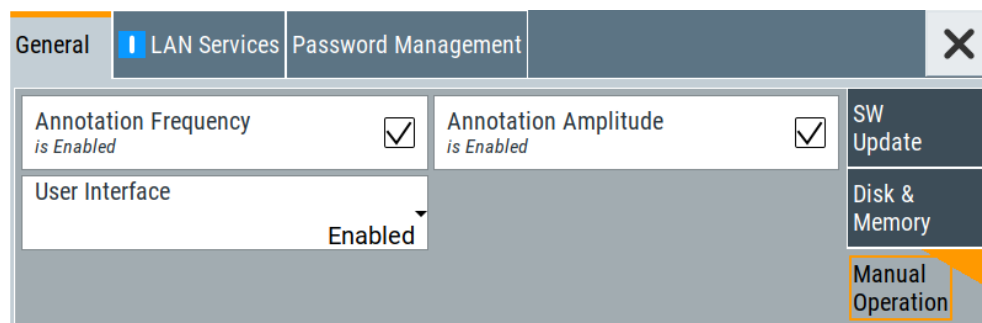

The "SW Update" tab enables you to lock front panel operation and/or reading the display.

The remote commands available to control security settings are described in:

- [Chapter 12.8, "DISPlay Subsystem"](#), on page 350
- [Chapter 12.15, "SYSTem Subsystem"](#), on page 483.

Annotation Frequency

Enables the display of the currently used frequency in the status bar.

How to: see ["Disabling the frequency and level indication in the status bar"](#) on page 261.

Remote command:

`:DISPlay:ANNotation:FREQuency` on page 353

Annotation Amplitude

Enables the display of the currently selected level in the status bar.

How to: see ["Disabling the frequency and level indication in the status bar"](#) on page 261.

Remote command:

`:DISPlay:ANNotation:AMPLitude` on page 353

User Interface

Allows you to lock the controls for manual operation and the display individually.

How to: see ["Deactivating the user interface"](#) on page 261.

See also [Chapter 10.4, "Using the Security Settings"](#), on page 246.

"Enabled" Enables the display and all controls for the manual operation of the instrument.

"Touchscreen Off"

Locks the touch sensitivity of the screen.

This security feature protects the instrument against unintentional change of settings by accidentally touching of the screen.

Still available controls for manual operation are:

- The keys at the front panel, including the rotary knob
- The external mouse and keyboard
- Remote operation over VNC

The instrument indicates the locked touchscreen by an icon .

Unlocking is possible via VNC, external controls or remote control.

"VNC Only"

Locks the keys at the front panel, the touchscreen and externally connected keyboard and mouse.

The display on the screen remains and shows the current settings and changes.

The instrument indicates the activated "VNC only" feature by the icon .

Unlocking is possible via VNC or turning off and on again.

"Display Only"

Locks the manual operation of the instrument. The display on the screen remains and shows the current settings and changes.

This security feature protects the instrument against unauthorized access, but still shows the current settings and processes, for example when you operate the instrument via remote control.

The function disables:

- The touchscreen functionality of the display
- The keys at the front panel of the instrument
- The external mouse and keyboard

The instrument indicates the locked controls by a padlock  softkey.

How to unlock: see ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 261.

"Disabled"

Locks the display and all controls for the manual operation of the instrument.

This security feature protects the instrument against unauthorized reading and access, for example when you operate the instrument via remote control.

The function disables:

- The display
- The touchscreen
- The keys at the front panel of the instrument
- The external mouse and keyboard

The screen shuts off and displays a padlock symbol  instead.

How to unlock: see ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 261.

Remote command:

:SYSTem:ULOCk on page 490

:SYSTem:DLOCk on page 489

:SYSTem:KLOCk on page 489

Enabling a locked user interface for manual operation

Follow the instructions listed in ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 261.

Remote command:

:SYSTem:ULOCK on page 490

:SYSTem:DLOCK on page 489

:SYSTem:KLOCK on page 489

10.4.3 Configuring LAN Services

Access:

1. Select "System Config > Setup > Security > Security > LAN Services > Main Services".

The screenshot shows the 'LAN Services' configuration window with the 'Main Services' tab selected. The window has a top bar with 'General', 'LAN Services' (active), and 'Password Management' tabs. Below the tabs, there's a 'LAN' section with a blue bar and a white bar. The main area contains a grid of service status boxes:

SCPI over LAN <i>is Enabled</i>	FTP <i>is Enabled</i>	VNC <i>is Enabled</i>
SMB (Samba) <i>is Enabled</i>	SSH (SCP) <i>is Enabled</i>	Remote Support <i>is Disabled</i>
HTTP <i>is Enabled</i>	Software Update <i>is Enabled</i>	Avahi (Zeroconf) <i>is Enabled</i>

On the right side, there are two side tabs: 'Common Services' (top) and 'Samba Services' (bottom). At the bottom of the window, there is a 'Security Password' field and an 'Accept' button with a checkmark icon.

In the "Main Services" side tab, you can individually enable or disable the supported LAN interface services.

2. Select "System Config > Setup > Security > Security > LAN Services > Samba Services".

The screenshot shows the 'LAN Services' configuration window with the 'Samba Services' tab selected. The window has the same top bar as the previous screenshot. The main area contains two status boxes:

SMB 1.0/2.0 Client <i>is Disabled</i>	SMB 1.0/2.0 Server <i>is Disabled</i>
--	--

On the right side, there are two side tabs: 'Common Services' (top) and 'Samba Services' (bottom, active). The 'Samba Services' tab has an orange arrow pointing to it.

In the "Samba Services" side tab, you can activate older versions of the SMB client and SMB server.

How to:

- ["Disabling the LAN interface"](#) on page 260
- ["Disabling LAN services"](#) on page 260
- ["Activating SMB version 1.0/2.0 client and server"](#) on page 260

Common Services

Enable or disable the LAN interface and supported LAN interface services.

LAN ← Common Services

Enables the LAN interface in general, and thus provides remote access via all unlocked services.

Enable LAN Services individually ← Common Services

Enables or disables the following interface services individually.

"SCPI over LAN"

Activates access over LAN to control the instrument remotely, by using SCPI (Standard Commands for Programmable Instruments) commands.

See also ["Starting a remote control session over LAN with R&S VISA"](#) on page 301.

"VNC"

Activates access over VNC (Virtual Network Computing) interface, a graphical desktop sharing system that uses RFB protocol to control the instrument remotely.

See also [Chapter 11.9, "Operating the R&S SMB100B Remotely via VNC"](#), on page 317.

"SSH (SCP)"

Activates access over SSH (Secure Shell), a network protocol for secure data communication.

"Remote Support"

Activates remote support over SSH.

Per default, this service is disabled. It provides communication for service support purposes only.

"HTTP"

Activates access via HTTP (Hyper Text Transfer Protocol), the application protocol for hypermedia information systems.

"FTP"

Activates access over FTP (File Transfer Protocol), used to transfer files from a host to the instrument and vice versa.

See also [Chapter 9.9.2, "Accessing the File System of the R&S SMB100B via ftp"](#), on page 218.

"SMB (Samba)"

Activates access to SMB (Server Message Block), used for providing shared access to files, printers and serial ports of a network.

See also [Chapter 9.9.3, "Accessing the R&S SMB100B File System via SMB \(Samba\)"](#), on page 219.

"Avahi (Zeroconf)"

Activates Avahi, a service for automatic configuration of the instrument in a network environment.

"Software Update"

Allows updating the software.

Samba Services

Activate or deactivate support of SMB client and SMB server version 1.0 and 2.0 of the SMB protocol.

Support of version 1.0 and 2.0 is additional to the current SMB protocol version supported in the firmware. This firmware supports SMB protocol versions up to version 4.

SMB 1.0/2.0 Client ← Samba Services

Activates support of the SMB client compatible with SMB protocol versions 1.0 and 2.0.

SMB 1.0/2.0 Server ← Samba Services

Activates support of the SMB server compatible with SMB protocol versions 1.0 and 2.0.

Security Password

Enters the password that is required to enable or to disable the settings protected by a security password. Default is 123456.

How to:

- ["Disabling the LAN interface"](#) on page 260
- ["Disabling LAN services"](#) on page 260
- ["Changing the default security password"](#) on page 260.


Accept

Applies the modified settings, provided the security password is entered and correct.

10.4.4 Password Management


Access:

1. Select "System Config > Setup > Security > Security > Password Management > User Password".

General	LAN Services	Password Management	
Valid for VNC, FTP and SMB (Samba) access			User Password
User Name			instrument
Old Password			Security Password
New Password			
Confirm Password			
 Change Password			

In this tab, you can assign the security and a user-defined password.

2. Select "System Config > Setup > Security > Security > Password Management > Security Password".

General	LAN Services	Password Management	
Old Password			User Password
New Password			Security Password
Confirm Password			
 Change Password			

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
- ["Changing the default security password"](#) on page 260.

User Name

Indicates the user name used for access to the Linux operating system and valid for VNC, FTP and SMB (Samba) access.

User Password

Access: select "System Config > Setup > Security > Security > Password Management > User Password".

Allows you to change and confirm the user password.

Old Password ← User Password

Enters the current user password. The default password is "instrument".

Note: We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
- ["Changing the default security password"](#) on page 260.

New Password ← User Password

Enters the new user password.

The security password can contain decimal characters only.

Confirm Password ← User Password

Confirms the new user password by repeating.

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
- ["Changing the default security password"](#) on page 260.

Change Password ← User Password

Changes the user password accordingly.

Security Password

Access: select "System Config > Setup > Security > Security > Password Management > Security Password".

Enables you to change and confirm the security password.

Old Password ← Security Password

Enters the currently used security password. The default password is '123456'.

Note: We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
- ["Changing the default security password"](#) on page 260.

The security password is required when changing the status of the USB and LAN interface.

New Password ← Security Password

Enters the new security password.

The security password can contain decimal characters only.

Confirm Password ← Security Password

Confirms the new security password by repeating.

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
- ["Changing the default security password"](#) on page 260.

Change Password ← Security Password

Changes the password accordingly.

10.4.5 How to Prevent Unauthorized Access

The default computer name and user password are *instrument*. The user password is the password required for VNC, FTP and SMB (samba) connections. If, for example, the VNC service or FTP are enabled, anyone in the network who knows the computer name and user password of the instrument can access it.

The default security password is *123456*. The security password is required when changing the status of the USB and LAN interface.

To prevent unauthorized access, use the following configurations exclusively or complementary:

- ["Changing the default user password of the instrument"](#) on page 259
- ["Changing the default security password"](#) on page 260
- ["Disabling the LAN interface"](#) on page 260
- ["Disabling LAN services"](#) on page 260
- ["Activating SMB version 1.0/2.0 client and server"](#) on page 260
- ["Disabling the frequency and level indication in the status bar"](#) on page 261
- ["Deactivating the user interface"](#) on page 261

If security is a concern, see the document instrument security procedures for comprehensive description.

Changing the default user password of the instrument

- **Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
 - ["Changing the default security password"](#) on page 260.
- a) Select "System Config > Setup > Security > Security > Password Management > User Password".
 - b) Enter the current password in the "Old Password" field.
 - c) Enter the new password in the "New Password" and "Confirm Password" fields.
 - d) Select "Change Password".

The user password is changed; the user name is displayed ("Security > Password Management > User Password > User Name").

Changing the default security password

- **Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
 - ["Changing the default security password"](#) on page 260.
- a) Select "System Config > Setup > Security > Security > Password Management > Security Password".
 - b) Enter the current password in the "Old Password" field.
The default password is *123456*.
 - c) Enter the new password in the "New Password" and "Confirm Password" fields.
 - d) Select "Change Password".

Disabling the LAN interface

1. Select "System Config > Setup > Security > Security > LAN Services > Main Services".
2. Select "LAN > Off".

All LAN connections and hence all LAN services are disabled.

Disabling LAN services

1. Select "System Config > Setup > Security > Security > LAN Services > Main Services".
2. Select, for example, "FTP > Off" or "VNC > Off".
3. Enter the [Security Password](#).
4. Select "Accept".

Activating SMB version 1.0/2.0 client and server

By default, support of SMB client and SMB server of the SMB protocol versions 1.0 and 2.0 is deactivated.

Activate support only, if needed:

1. Select "System Config > Setup > Security > Security > LAN Services > Samba Services".
2. Select "SMB 1.0/2.0 Client > On" and "SMB 1.0/2.0 Server > On".
3. Enter the [Security Password](#).
4. Select "Accept".

Disabling the frequency and level indication in the status bar

These settings are useful to prevent unauthorized personnel from reading the display, when you remotely control the instrument from a different location.

1. Select "System Config > Setup > Security > General > Manual Operation".
2. Select "Annotation Frequency > Off" or "Annotation Amplitude > Off".
3. Enter the [Security Password](#).
4. Select "Accept".

Deactivating the user interface


1. Select "System Config > Setup > Security > General > Manual Operation".
2. Select "User Interface > Disabled".
3. Enter the [Security Password](#).
4. Select "Accept".

The screen shuts off and displays a padlock symbol  instead.

There are further possible configurations. For details, see "[User Interface](#)" on page 252.

Unlocking (reactivating) the user interface for manual operation

1. In manual operation:
 - a) On the instrument's keypad or external keyboard, press any key.
The instrument prompts you to enter the security password for unlocking.

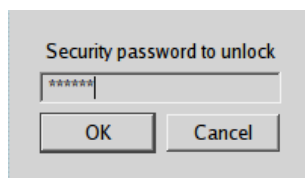

If you press the character of the first key, the input field accepts the character immediately.

- b) Delete the entry before inserting the password.
Enter the security password 123456.
2. In remote control mode:
 - a) Send the command `SYST:ULOC ENABled` to release all locks at once.
 - b) Send the command `SYST:KLOC OFF` to unlock the keyboard and touchscreen.
 - c) Send the command `SYST:DLOC OFF` to release all locks.

Via remote control, there is no password required.

10.5 Undoing or Restoring Actions


"Undo" is a function that removes the effect of the last action on the instrument and reverts it to an older state. Conversely, "Redo" restores a previously undone action.

You can "Undo/Redo" actions according to two criteria:

- Step by step
Gradually undo/redo the actions in reverse order as previously performed. Depending on the available memory the "Undo/Redo" steps may restore all actions.
- Multiple steps at once
Select any specific action in the history list to "Undo/Redo" multiple actions in a single step.
Note: This mode requires a system restoration file on the instrument.

Access:

- Select "Setup > Settings > Undo/Redo".

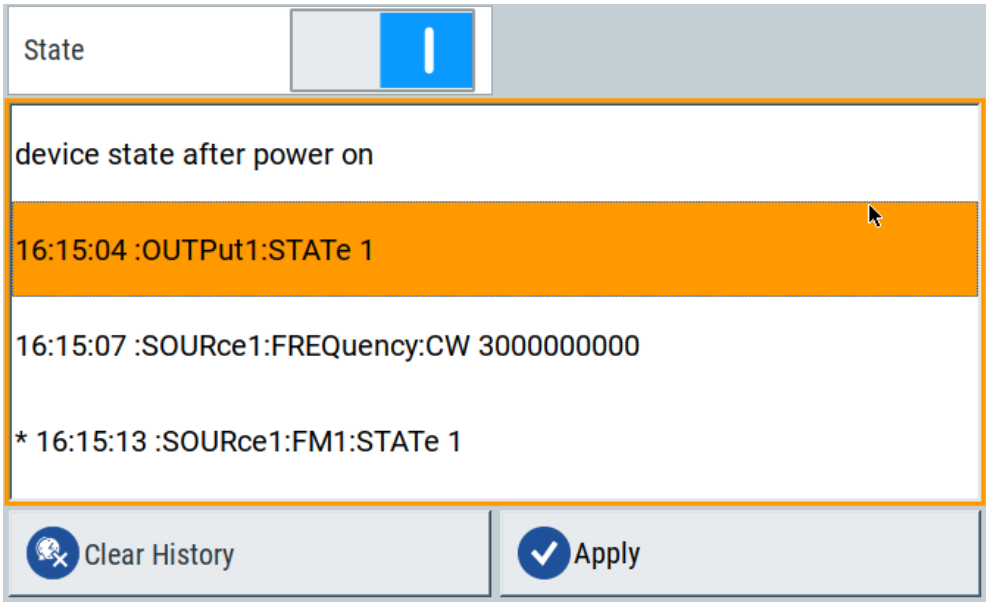

The dialog contains all functions for enabling the "Undo/Redo" functionality.

Settings:

State.....	262
History List.....	263
Clear History.....	263
Apply.....	263

State

Enables the recording of the performed actions.

History List

Lists the performed actions, provided "Undo/Redo" state is "On".

Clear History

Deletes the recorded list of the performed steps.

Apply

Performs the "Undo/Redo".

If you select a previously performed action of the list, all subsequent actions are undone. The list entries remain.


If you select a subsequently executed action, you can restore all the actions undone up to this state.

10.6 Shutting Down and Rebooting the Instrument

The [On/Standby] front panel key switches the instrument from the standby to the ready state or vice versa. In remote operation from a remote computer or in manual control, there is another possibility to shut down the instrument or to reboot the system.

Access:

- ▶ Select "System Config > Setup > Maintenance > Shut Down".

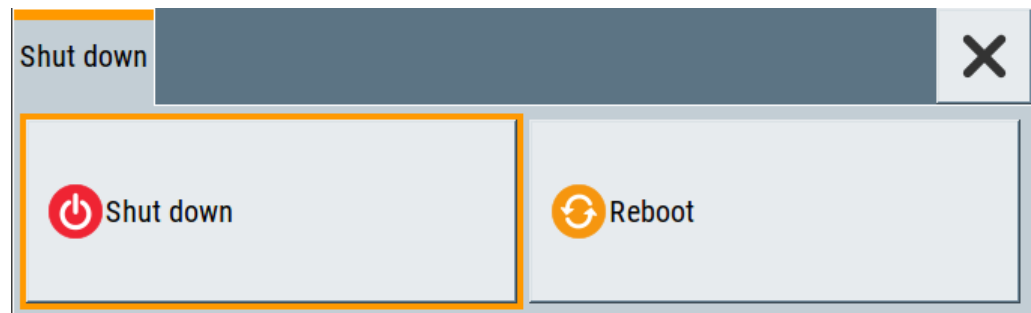

- `:SYSTem:REBoot` on page 507
- `:SYSTem:SHUTdown` on page 508

11 Network Operation and Remote Control



The description in this section requires basic knowledge of the remote control operation. Definitions specified in the SCPI standard are not provided.

You find some basic information to the SCPI syntax, command lists, and general programming recommendations in [Chapter A.1, "Additional Basics on Remote Control"](#), on page 564.

See also [Chapter A.1.5, "Status Reporting System"](#), on page 577.

As an alternative to the interactive operation directly at the instrument, you can operate the R&S SMB100B also from a remote location.

The [Figure 11-1](#) shows the possibilities of the physical connection (interfaces) for the remote access.

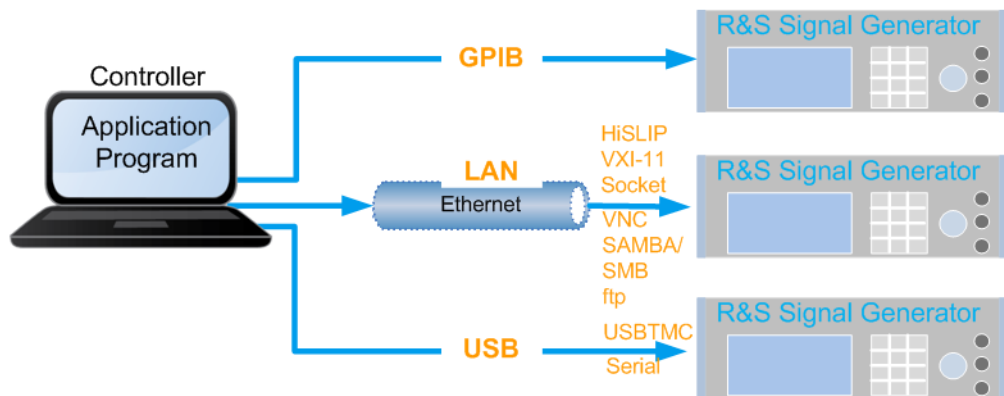


Figure 11-1: Supported remote connections

The various interfaces provide flexible access to the instrument, such as *remote control*, *remote operation* or *remote file access*. These **remote access modes** are fundamentally different, although they are often considered interchangeable.

See:

- [Overview of Remote Access Modes](#)
- [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#)
- [Chapter 3.1.7, "Connecting to LAN"](#), on page 27

11.1 Overview of Remote Access Modes

This section outlines the possible access modes and their major characteristics.

Remote control (SCPI)

- A remote PC controls the instrument, usually via VISA (Virtual Instrument Software Architecture) interfaces.
- Remote control disables the manual operation of the instrument; you can set different lock states.
- The GUI is not visible.
- Remote control commands (SCPI) perform the settings, either individually or in sequences (SCPI programs).
- Using SCPI programs is faster than the manual operation, since they automate repeating applications.

Remote operation (VNC)

- A remote device accesses the instrument via the common platform technology VNC (Virtual Network Computing).
- The protocol allows simultaneous operation from several remote devices and the instrument nevertheless remains locally operable.
- The GUI is visible.
- To perform the settings, you can operate the instrument as with the manual control.
- During remote operation via VNC, the direct control of the instrument is not disabled.
You can control the instrument from the front panel and via the remote computer alternately.
- Clients supporting remote operation depend on the used remote device, see [Table 11-1](#).
- How to: see [Chapter 11.9, "Operating the R&S SMB100B Remotely via VNC"](#), on page 317.

Table 11-1: Supported VNC operation modes

Remote device	VNC client	Requirements	Characteristics
Desktop (Windows, Linux, Mac™OS)	<ul style="list-style-type: none"> • Ultr@VNC • Other dedicated client software 	<i>Ultr@VNC or Client Software</i> must be installed.	Fast, supports several options like full screen mode or auto-login.
	<ul style="list-style-type: none"> • Any web browser 	<i>Java Runtime</i> must be installed and activated in the browser settings.	Fast and convenient - only the instrument address required. Java runtime is sometimes considered as security concern.
	<ul style="list-style-type: none"> • Web browser with HTML5 	<i>Web sockets</i> must be supported.	Slower than the other modes. No additional installation or activation required. No security concern.
Smart device (Tablet/ smartphone)	<ul style="list-style-type: none"> • Dedicated client App 	<i>App</i> must be installed.	Fast, supports several options like full screen mode or auto-login.
	<ul style="list-style-type: none"> • Web browser with HTML5 	<i>Web sockets</i> must be supported.	Support of QR code scanning Slower than a dedicated App.

Remote file access (FTP, SAMBA/SMB)

- A remote client accesses the instrument's file system, using the protocols FTP (file transfer protocol) and SAMBA/SMB (server message block).
- The protocols enable you to transfer files from or to the instrument and to get direct access to its file sharing directory *share*.

How to:

[Chapter 9.9, "How to Transfer Files from and to the Instrument"](#), on page 216.

["Activating SMB version 1.0/2.0 client and server"](#) on page 260

11.2 Remote Control Interfaces and Protocols

The instrument supports various interfaces for remote control. The table gives an overview on the connectivity:

Table 11-2: Remote control interfaces and protocols

Interface	Protocols, VISA ^{*)} address string and library	Remarks
Local area network (LAN)	<ul style="list-style-type: none"> • HiSLIP High-Speed LAN Instrument Protocol (IVI-6.1) TCPIP::host address::hislip0[::INSTR] VISA • VXI-11 TCPIP::host address[:: LAN device name][::INSTR] VISA • Socket communication (Raw Ethernet, simple Telnet) TCPIP::host address[:: LAN device name]::<port>::SOCKET VISA or socket controller 	<p>The LAN connector is on the rear panel of the instrument.</p> <p>The interface is based on TCP/IP and supports various protocols.</p> <p>For a description of the protocols, refer to:</p> <ul style="list-style-type: none"> • Chapter 11.2.1.2, "HiSLIP Protocol", on page 269 • Chapter 11.2.1.3, "VXI-11 Protocol", on page 269 • Chapter 11.2.1.4, "Socket Communication", on page 269
USB	<ul style="list-style-type: none"> • USBTCM USB::<vendor ID>::<product ID>:: <serial number>[::INSTR] VISA 	<p>The USB In connector is at the rear panel of the instrument.</p> <p>For a description of the interface, refer to Chapter 11.2.2, "USB Interface", on page 270</p>
GPIB (IEC/IEEE Bus Interface)	<ul style="list-style-type: none"> • – GPIB::<address>[::INSTR] (no secondary address) VISA 	<p>Optional GPIB bus interfaces according to standard IEC 625.1/IEEE 488.1 are on the rear panel of the instrument.</p> <p>For a description of the interface, refer to Chapter 11.2.3, "GPIB Interface (IEC/IEEE Bus Interface)", on page 270.</p>
<p>^{*)} VISA (Virtual Instrument Software Architecture) is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control over LAN (when using VXI-11 or HiSLIP protocol), USB and serial interface. For remote control via socket communication VISA installation is optional. For more information, see Chapter 11.3.1, "VISA Library", on page 272.</p>		



Rohde & Schwarz provides the standardized I/O software library R&S VISA for communication with the instruments via TCP/IP (LAN: HiSLIP, VXI-11 and raw socket) or USB (USBTCM) interfaces.

R&S VISA is available for download at the Rohde & Schwarz website <http://www.rohde-schwarz.com/rsvisa>.

How to configure the remote control interfaces is described in [Chapter 11.7, "Controlling the R&S SMB100B Remotely"](#), on page 295.

SCPI (Standard Commands for Programmable Instruments)

SCPI commands - messages - are used for remote control. Commands that are not taken from the SCPI standard follow the SCPI syntax rules. The instrument supports the SCPI version 1999. The SCPI standard is based on standard IEEE 488.2 and aims at the standardization of device-specific commands, error handling and the status registers. The tutorial "Automatic Measurement Control - A tutorial on SCPI and IEEE 488.2" from John M. Pieper (Rohde & Schwarz order number 0002.3536.00) offers detailed information on concepts and definitions of SCPI.

Tables provide a fast overview of the bit assignment in the status registers. The tables are supplemented by a comprehensive description of the status registers.

For more information, see also [Chapter A.1, "Additional Basics on Remote Control"](#), on page 564.

11.2.1 LAN Interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols.

For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and (for specified protocols only) the VISA program library must be installed on the controller.

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by the resource string.

11.2.1.1 VISA Resource Strings

The VISA resource string is required to establish a communication session between the controller and the instrument in a LAN. The resource string is a unique identifier, composed of the specific IP address of the instrument and some network and VISA-specific keywords.

`TCPIP::host address[:LAN device name][:INSTR]`

TCP/IP = designates the network protocol
 host address = designates the IP address or hostname of the instrument
 [::LAN device name] = defines the protocol and the instance number of a subinstrument
 [::INSTR] = indicates the instrument resource class (optional)

The **IP address** (host address/computer name) is used by the programs to identify and control the instrument. It is automatically assigned by the DHCP server the first time the device is registered on the network. Alternatively, you can also assign its **LAN device name**.

If assigned, the IP address is displayed on home screen. You can adjust it manually with the parameter the "System Config > Remote Access > Network" > [IP AddressEnabling a locked user interface for manual operation](#).

The following section lists the characteristics of the VISA resource strings for the corresponding interface protocols. The highlighted characters are crucial.

HiSLIP

[TCP/IP::host address::hislip0\[::INSTR\]](#)

hislip0 = HiSLIP device name, designates that the interface protocol HiSLIP is used (mandatory)

hislip0 is composed of [::HiSLIP device name[,HiSLIP port]] and must be assigned.

For details of the HiSLIP protocol, refer to [Chapter 11.2.1.2, "HiSLIP Protocol"](#), on page 269.

VXI-11

[TCP/IP::host address\[::inst0\]\[::INSTR\]](#)

[::inst0] = LAN device name, indicates that the VXI-11 protocol is used (optional)

inst0 currently selects the VXI-11 protocol by default and can be omitted.

For details of the VXI-11 protocol, refer to [Chapter 11.2.1.2, "HiSLIP Protocol"](#), on page 269.

Socket communication

[TCP/IP::host address::port::SOCKET](#)

port = determines the used port number
 SOCKET = indicates the raw network socket resource class

Socket communication requires the specification of the port (commonly referred to as port number) and of "SOCKET" to complete the VISA resource string with the associated protocol used.

The registered port for socket communication is port 5025.

See also [Chapter 11.2.1.4, "Socket Communication"](#), on page 269.

11.2.1.2 HiSLIP Protocol

The High Speed LAN Instrument Protocol (HiSLIP) is the successor protocol for VXI-11 for TCP-based instruments specified by the IVI foundation. The protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. `Device Clear` or `SRQ`).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections
- Compatible IEEE 488.2 support for Message Exchange Protocol, Device Clear, Serial Poll, Remote/Local, Trigger, and Service Request
- Uses a single IANA registered port (4880), which simplifies the configuration of firewalls
- Supports simultaneous access of multiple users by providing versatile locking mechanisms
- Usable for IPv6 or IPv4 networks



Using VXI-11, each operation is blocked until a VXI-11 instrument handshake returns. However, using HiSLIP, data is sent to the instrument using the "fire and forget" method with immediate return. Thus, a successful return of a VISA operation such as `viWrite()` guarantees only that the command is delivered to the instrument's TCP/IP buffers. There is no confirmation, that the instrument has started or finished the requested command.

For more information see also the application note:

[1MA208: Fast Remote Instrument Control with HiSLIP](#)

11.2.1.3 VXI-11 Protocol

The VXI-11 standard is based on the ONC RPC (Open Network Computing Remote Procedure Call) protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

11.2.1.4 Socket Communication

An alternative way for remote control of the product is to establish a simple network communication using sockets. The socket communication, also referred to as "Raw Ethernet communication", does not necessarily require a VISA installation on the remote controller side. It is available by default on all operating systems.

The simplest way to establish socket communication is to use the built-in telnet program. The telnet program is part of every operating system and supports a communication with the software on a command-by-command basis. For more convenience and to enable automation by programs, user-defined sockets can be programmed.

Socket connections are established on a specially defined port. The socket address is a combination of the IP address or the host name of the instrument and the number of the port configured for remote-control. Typically, the products of Rohde & Schwarz use port number 5025 for this purpose. The port is configured for communication on a command-to-command basis and for remote control from a program.

11.2.2 USB Interface

For remote control via the USB connection, the PC and the instrument must be connected via the USB type B interface. A USB connection requires the VISA library to be installed. VISA detects and configures the R&S instrument automatically when the USB connection is established. You do not have to install a separate driver.

USBTMC (USB Test & Measurement Class Specification) is a protocol that is built on top of USB for communication with USB devices. It defines class code information of the instrument, that identifies its functionality to load the respective device driver. Using VISA library, it supports service request, triggers, and other specific operations.

11.2.2.1 USB Resource String

The resource string represents an addressing scheme that is used to establish a communication session with the instrument. It is based on the instrument address and some instrument- and vendor-specific information.

The USB resource string syntax is as follows:

USB::<vendor ID>::<product ID>::<serial number>[:INSTR]

USB	= denotes the used interface
<vendor ID>	= is the manufacturer ID for Rohde & Schwarz
<product ID>	= is the product identification of the instrument
<serial number>	= is the individual serial number on the rear of the instrument
[:INSTR]	= indicates the instrument resource class (optional)

To set the USB resource string, see [Remote Access Settings](#).

Example:

USB:::0x0AAD:::0x01DE:::100001

0x0AAD is the vendor ID for Rohde & Schwarz.

0x01DE is the product ID for the R&S SMB100B

100001 is the serial number of the particular instrument.

11.2.3 GPIB Interface (IEC/IEEE Bus Interface)

To be able to control the instrument via the GPIB bus, the instrument and the controller must be linked by a GPIB bus cable. A GPIB bus card, the card drivers and the program libraries for the programming language used must be provided in the controller.

GPIO address

The controller must address the instrument with the GPIO bus channel (see [Chapter 11.4.3, "GPIO Address Settings"](#), on page 279). GPIO provides channel addresses from 0 to 30.

The GPIO resource string syntax is as follows:

GPIO::<address>[:INSTR]

GPIO = denotes the used interface
<channel address> = the used channel
[:INSTR] = indicates the instrument resource class (optional)

Note: If the VISA implementation supports the GPIO interface, you can optionally define the VISA Instrument Control Resource (INSTR). It is used to define the basic operations and attributes for a device, such as reading, writing, or triggering.

Notes and characteristics

In connection with the GPIO interface, note the following:

- Up to 15 instruments can be connected.
- The total cable length is restricted to a maximum of 15 m, or 2 m times the number of devices, whichever is less. The maximum recommended cable length between two instruments is 2 m.
- A wired "OR"-connection is used if several instruments are connected in parallel, since the slowest instrument determines the speed.
- Any connected IEC bus cable must be terminated by an instrument or controller.

11.2.4 LXI Browser Interface

The LXI browser interface allows easy configuration of the LAN and remote control of the R&S SMB100B without additional installation requirements. The instrument's LXI browser interface works correctly with all W3C compliant browsers.

See [Chapter 11.10.1, "LXI Functionality"](#), on page 323 for more about LXI.

The LAN settings are configured using the instrument's LXI browser interface described in [Chapter 11.5.2.1, "LAN Configuration"](#), on page 288. The LXI status settings in the R&S SMB100B are described in [Chapter 11.5.1, "LXI Status Settings"](#), on page 285.

11.3 Remote Control Programs and Libraries

This section shows how the remote-control programs access the instrument, and the libraries they require for the appropriate interface protocols.

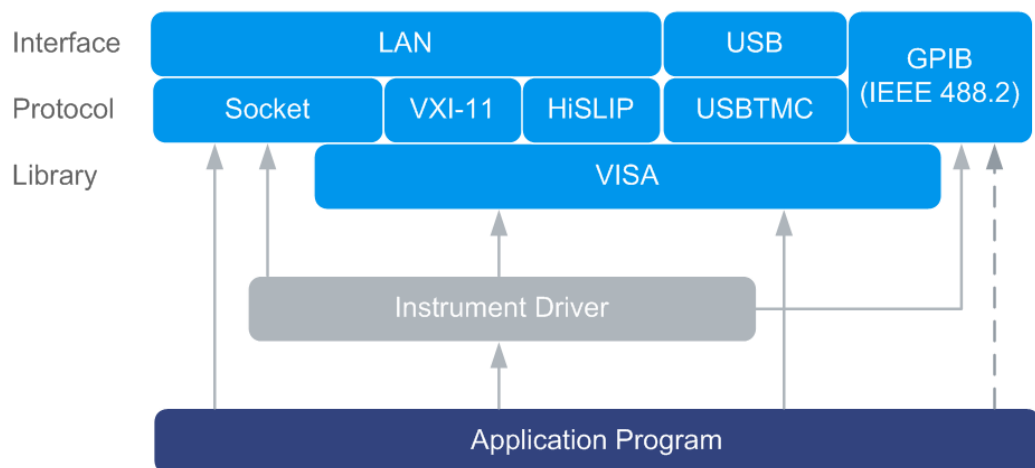


Figure 11-2: Overview of remote control interfaces, protocols and libraries

11.3.1 VISA Library

VISA is a standardized software interface library providing input and output functions to communicate with instruments. Thus, you can configure the interface without having to adjust the application program to the used interface.

The I/O channel (LAN or TCP/IP, USB, GPIB, etc.) is selected at initialization time with the channel-specific address string ("VISA resource string"), or by an appropriately defined VISA alias (short name). See also [Table 11-2](#) for an overview.

Instrument access via VXI-11 or HiSLIP protocols is achieved from high level programming platforms using VISA as an intermediate abstraction layer. VISA encapsulates the low-level VXI or GPIB function calls and thus makes the transport interface transparent for the user.

A VISA installation is a prerequisite for remote control using the following interfaces:

- LAN interface using [HiSLIP Protocol](#)
- LAN interface using [VXI-11 Protocol](#)
- [USB Interface](#)

Instrument access via the LAN socket protocol or GPIB connections can be operated both, with or without the VISA library. See also [Chapter 11.2.1.4, "Socket Communication"](#), on page 269 and [Chapter 11.2.3, "GPIB Interface \(IEC/IEEE Bus Interface\)"](#), on page 270.

For more information about VISA library, refer to the user documentation.

11.3.2 Possible Setups and Access Functions

The following examples give an overview of dependencies between the available libraries, the possible interfaces and protocols, and whether an instrument driver is provided. The involved parts are **highlighted**. For more information, see the application note [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#).

- Remote control (application) program using VISA

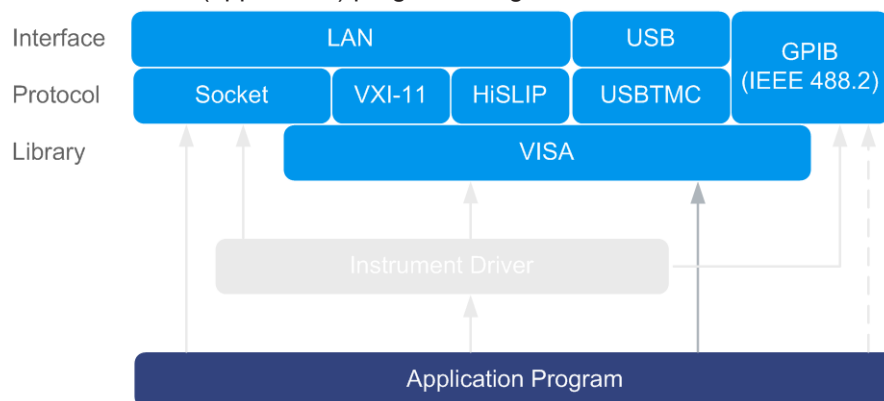


Figure 11-3: Application program using VISA

Protocol	Remote control program
Socket	<pre>viOpen (... , "TCPIP:SMB100B-102030::5025::SOCKET", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
VXI-11	<pre>viOpen (... , "TCPIP:SMB100B-102030::inst0::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
HiSLIP	<pre>viOpen (... , "TCPIP:SMB100B-102030::hislip0::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
USBTMC	<pre>viOpen (... , "USB::0x0AAD::0x01DE::100001::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
GPIB	<pre>viOpen (... , "GPIB::28::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>

- Remote control program using instrument driver (VISA available)

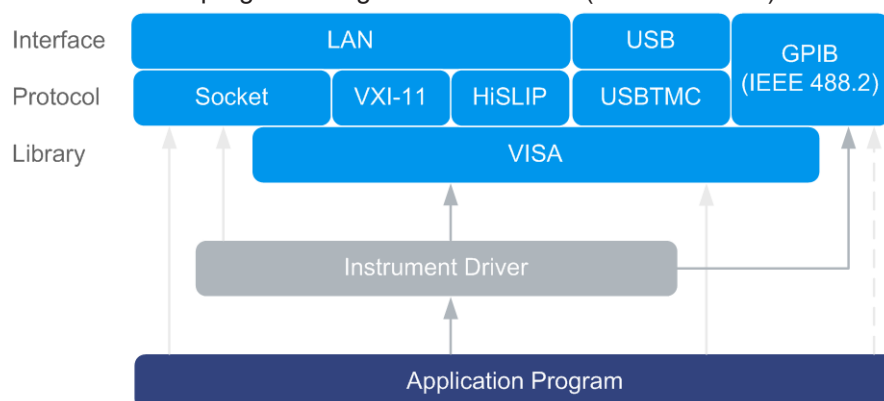


Figure 11-4: Application using instrument driver (VISA available)

Protocol	Remote control program
Socket	<pre>rssmb_init ("TCPIP:SMB100B-102030::5025::SOCKET", ...) rssmb_SetFrequency (... , 2e9)</pre>
VXI-11	<pre>rssmb_init ("TCPIP:SMB100B-102030::inst0::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>
HiSLIP	<pre>rssmb_init ("TCPIP:SMB100B-102030::hislip0::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>
USBTMC	<pre>rssmb_init ("USB::0x0AAD::0x01DE::100001::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>
GPIB	<pre>rssmb_init ("GPIB::28::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>

- Remote control program using instrument driver (VISA not available)

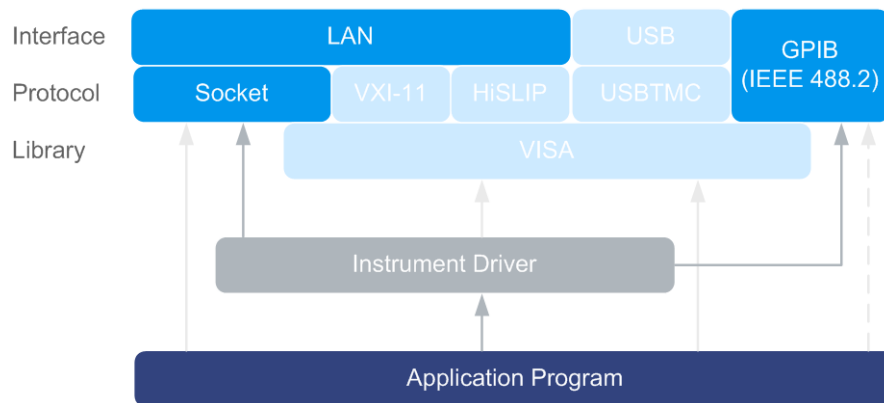


Figure 11-5: Remote control program using instrument driver (VISA not available)

Protocol	Remote control program
Socket	<pre>rssmb_init ("TCPIP:SMB100B-102030::5025::SOCKET", ...) rssmb_SetFrequency (... , 2e9)</pre>
GPIB	<pre>rssmb_init ("GPIB::28::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>

11.4 Remote Access Settings

This section outlines the settings required for accessing and configuring the provided remote control interfaces. It includes network settings, access addresses, emulation settings for using the command sets of other generators, and the access via smart devices.

About instrument emulations

You can also remotely control the R&S SMB100B via the command set of another signal generator. With this function you can, for example, replace a signal generator with an R&S SMB100B in an automated test setup, without adjusting the command scripts used.



The R&S SMB100B also covers command sets of Rohde & Schwarz signal generators. To achieve optimal compatibility when replacing an instrument, we recommend that you select the emulation command set for the corresponding signal generator.

You find all the remote control command sets supported by the R&S SMB100B in a selection list.

The selected instrument also defines the identification string that is retrieved with query `*IDN?`. If necessary, use the parameter `Mode` and `IDN String` to change this string.

As any other parameter, the remote control command set can also be changed remotely by the command `:SYSTem:LANGuage`.

While working in an emulation mode, the R&S SMB100B specific command set is disabled and the SCPI command `:SYSTem:LANGuage` is discarded.

To return to the SCPI command set of the R&S SMB100B, use the appropriate command of the selected command set.

If for example an HP generator is emulated, the HP command `EX` returns to the instrument-specific GPIB command set.

11.4.1 Network Settings

Access:

- Select "System Config > Remote Access > Network".

Net- work	Visa Res. Strings	GPIB Addr.	RS232	Instrument Emulations	Remote Connections	QR- Code	✕
<div> <div>Network Status</div> <div>● Connected</div> <div>Restart Network</div> </div>							
Instrument Name							
<div>Hostname</div> <div>instrument</div>				<div>Workgroup</div> <div>INSTRUMENT</div>			
Instrument Address							
<div>Address Mode</div> <div>Auto (DHCP)</div>							
<div>IP Address</div> <div>10.124.0.211</div>		<div>Subnet Mask</div> <div>255.255.252.0</div>		<div>Default Gateway</div> <div>10.124.0.1</div>			
<div>DNS Suffix</div> <div>rsint.net</div>		<div>DNS Server</div> <div>10.0.2.166</div>		<div>MAC Address</div> <div>08 00 27 b7 82 49</div>			

In the "Network" dialog, you can configure the settings of the general network environment and specific identification parameters of the instrument in the network.

The remote commands required to configure the network remotely are described in [Chapter 12.15, "SYSTem Subsystem"](#), on page 483.

How to: see [Chapter 11.6.3, "How To Connect to LAN"](#), on page 293.

Network Status

Indicates that the instrument is connected to the network.

Remote command:

`:SYSTem:COMMunicate:NETWork:STATus?` on page 495

Restart Network

Terminates the network connection of the instrument and sets it up again. You can use this function to fix network problems.

Note: This function restarts only the connection of the instrument to the network. It does not impact the network itself.

Remote command:

`:SYSTem:COMMunicate:NETWork:REStart` on page 495

Hostname

Displays the hostname.

Each instrument is delivered with an assigned hostname, a logical name which can be used instead of the IP address. With the default network settings, the IP address is allocated by the DHCP server. This address can change each time the instrument is reconnected. Unlike the IP address, the hostname name does not change.

Note:

This function is password-protected. Unlock the protection level 1 to access it.

- We recommend that you do not change the default network settings or the host-name to avoid problems with the network connection.
If you change the hostname, be sure to use a unique name.

Remote command:

`:SYSTem:COMMunicate:NETWork[:COMMON]:HOSTname` on page 496

Workgroup

Sets the individual windows workgroup name of the R&S SMB100B. This parameter is required in case the instrument is integrated in a windows network.

This function is password-protected. Unlock the protection level 1 to access it.

Remote command:

`:SYSTem:COMMunicate:NETWork[:COMMON]:WORKgroup` on page 496

Address Mode

Selects the mode for assigning the IP address.

How to: [Chapter 11.6.4, "How to Assign the IP Address"](#), on page 293

"Auto (DCHP)"

Assigns the IP address automatically, provided the network supports DHCP (Dynamic Host Configuration Protocol).

"Static"

Enables you to assign the IP address manually.

Remote command:

`:SYSTem:COMMunicate:NETWork:IPAddress:MODE` on page 494

IP Address

Displays the IP address of the instrument in the network.

By default, the R&S SMB100B is configured to use dynamic TCP/IP configuration and to obtain the whole address information automatically.

If the network does not support DHCP or the attempt does not succeed, the instrument tries to obtain the IP address via Zeroconf (APIPA) protocol. IP addresses assigned via Zeroconf start with the number blocks 169.254.*.*.

Note: An IP address that is assigned via the Zeroconf protocol although the network requires an IP address assigned via the DHCP server can cause network connection failures.

See [Chapter 13.5, "Resolving Network Connection Failures"](#), on page 543.

How to:

- ["To assign the IP address manually on the instrument"](#) on page 294.
- [Chapter 11.6.2, "How To Activate LAN Services"](#), on page 293.

Remote command:

`:SYSTem:COMMunicate:NETWork:IPAddress` on page 494

Subnet Mask

Displays the bit group of the subnet in the host identifier.

To assign the subnet mask manually, select [Address Mode](#) > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPAdDress]:SUBNet:MASK` on page 497

Default Gateway

Displays the gateway address.

This address identifies the router on the same network as the instrument that is used to forward traffic to destinations beyond the local network.

To assign the gateway address manually, select **Address Mode** > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPAdDress]:GATeway` on page 496

DNS Suffix

Displays the primary DNS (Domain Name System) suffix, that means the DNS name without the hostname part.

The DNS system uses the suffix for registration and name resolution for unique identification of the instrument in the entire network.

To assign the DNS suffix manually, select **Address Mode** > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain` on page 495

DNS Server

Determines the preferred server for name resolution. The DNS server contains the underlying numerical values that are required for name resolution of the hostname as part of the IP address.

To select the DNS server manually, select **Address Mode** > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPAdDress]:DNS` on page 496

MAC Address

Indicates the MAC (Media Access Control) address, a unique identifier of the network adapter in the R&S SMB100B.

Remote command:

`:SYSTem:COMMunicate:NETWork:MACaddress` on page 495

11.4.2 VISA Resource Strings

Access:

- Select "System Config > Remote Access > Visa Resource Strings".

Net-work	Visa Res. Strings	GPIB Addr.	RS232	Instrument Emulations	Remote Connections	QR-Code	✕
HISLIP	TCPIP::10.124.1.233::hislip0::INSTR						
VXI11	TCPIP::10.124.1.233::inst0::INSTR						
Socket	TCPIP::10.124.1.233::5025::SOCKET						
GPIB	GPIB::28::INSTR						
USB	USB::0x0AAD::0x01dd::000000::INSTR						
SERIAL	ASRL1::INSTR						

The "Visa Resource String" dialog displays the VISA resource strings provided for remote control via the different interfaces.

Remote command:

:SYSTem:COMMunicate:HISLip:RESource? on page 494

:SYSTem:COMMunicate:NETWork:RESource? on page 495

:SYSTem:COMMunicate:SOCKet:RESource? on page 498

:SYSTem:COMMunicate:GPIB:RESource? on page 493

:SYSTem:COMMunicate:USB:RESource? on page 498

:SYSTem:COMMunicate:SERial:RESource? on page 497

11.4.3 GPIB Address Settings

Access:

1. Select "System Config > Remote Access > GPIB Address".

Net-work	Visa Res. Strings	GPIB Addr.	RS232	Instrument Emulations	Remote Connections	QR-Code	✕
<div>GPIB Channel Address</div> <div>28</div>							

2. Set the GPIB channel address of the connected instrument.

Remote command:

`:SYSTem:COMMunicate:GPIB[:SELF]:ADDRESS` on page 493

11.4.4 RS232 Settings

Access:

- Select "System Config > Remote Access > RS232".

Net- work	Visa Res. Strings	GPIB Addr.	RS232	Instrument Emulations	Remote Connections	QR- Code	X
Needs USB Adapter (R&S TS1-USB)							
Baud Rate		Parity		Stop Bits			
115200		None		1			

The "RS232" dialog enables you to control the instrument over a serial interface using a USB adapter. The controller and the instrument must be connected with the external USB/serial-adapter R&S TS1-USB (see recommended extras in the data sheet) and a serial crossover (null modem) cable. The USB connection requires the Visa library to be installed on the controller. Visa detects and configures the R&S SMB100B automatically when the USB connection is established.

The remote commands required to configure the emulation settings remotely are described in [Chapter 12.15, "SYSTem Subsystem"](#), on page 483.

Baud Rate

Sets the baudrate for the serial remote control interface.

Remote command:

`:SYSTem:COMMunicate:SERial:BAUD` on page 497

Parity

Sets the parity for the serial remote control interface.

Remote command:

`:SYSTem:COMMunicate:SERial:PARity` on page 497

Stop Bits

Sets the number of stop bits for the serial remote control interface.

Remote command:

`:SYSTem:COMMunicate:SERial:SBITs` on page 498

11.4.5 Instrument Emulations Settings

Access:

- Select "System Config > Remote Access > Instrument Emulations".

The "Instrument Emulations" dialog enables you to emulate a remote control command set of another signal generator.

The remote commands required to configure the emulation settings remotely are described in [Chapter 12.15, "SYSTem Subsystem"](#), on page 483.

Language

Selects the instrument whose remote command set is emulated by the R&S SMB100B.

Remote command:

[:SYSTem:LANGuage](#) on page 500

Mode

Selects the way the instrument identification is performed.

"Automatic" Sets the "IDN String" and the "OPT String" automatically for the instrument selected with the parameter [Language](#).

"User Defined" Enables you to define the "IDN String" and the "OPT String".

Remote command:

[:SYSTem:IDENTification](#) on page 499

Set to Default

In "Mode > User Defined", resets the *IDN and *OPT strings.

Remote command:

`:SYSTem:IDENtification:PRESet` on page 499

IDN String

Indicates the identification string of the instrument when queried with the common command `*IDN?`.

In addition to the preset values, you can define your own identification string so that each generator uses an individual identification, like `My_SigGen` for instance, see [Mode](#) .

Remote command:

`*IDN?` on page 329

`:SYSTem:IRESpOnse` on page 499

OPT String

Indicates the option string of the instrument as queried with common command `*OPT?`.

In [Mode](#) > "User Defined", you can define your own option string. A query responds with this option string instead of the automatically created option string.

Remote command:

`*OPT?` on page 330

`:SYSTem:ORESpOnse` on page 500


11.4.6 Remote Connections Settings

The "Remote Connections" dialog covers the active SCPI and TCP/IP connections, and a history list of the connections that have accessed the instrument before.

11.4.6.1 Active Connections

Access:

- Select "System Config > Remote Access > Remote Connections > Active".

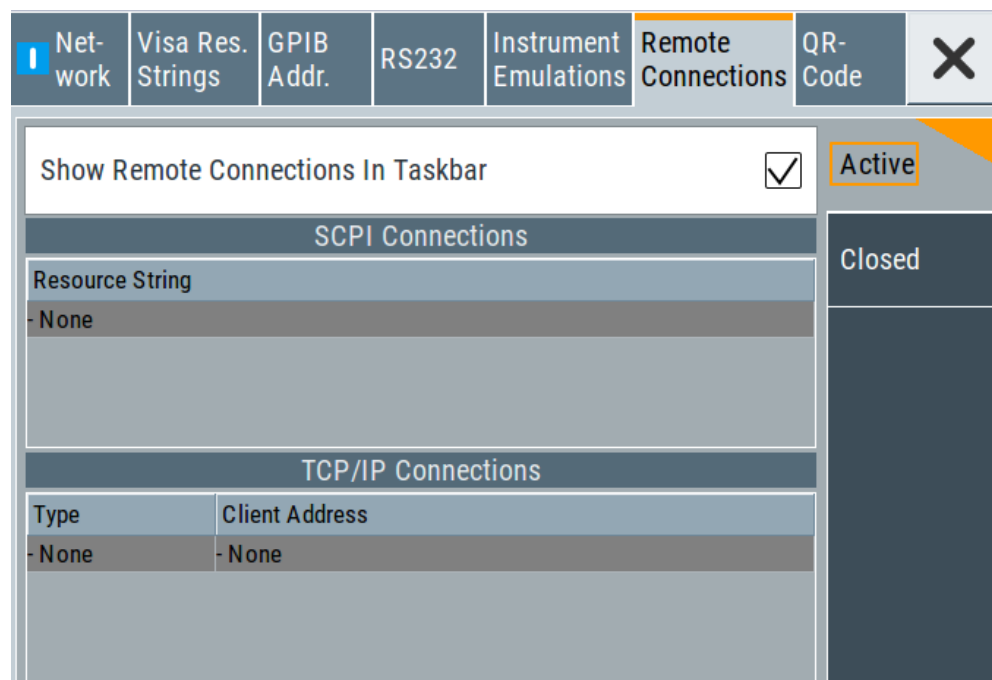

The "Active " tab shows the currently active remote connections, and you can enable the display of the active connections in the task bar.

Show Remote Connections in Taskbar

Displays the currently active connections in the taskbar.

SCPI Connections

Displays the VISA resources strings of the remote connections currently controlling the instrument via the LAN interface.

Remote command:

n.a.

TCP/IP Connections

Displays the types and client addresses of the remote connections currently controlling the instrument via the LAN interface.


Remote command:

n.a.

11.4.6.2 Closed Connections

Access:

- Select "System Config > Remote Access > Remote Connections > Closed".

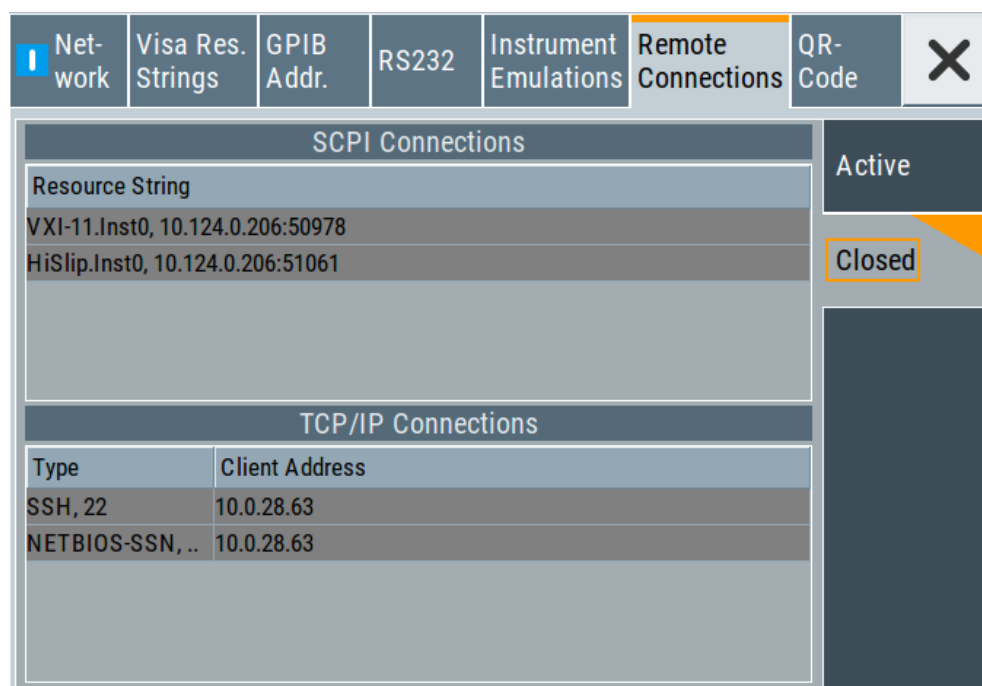

The "Closed" tab shows the currently active remote connections, and you can enable the display of the active connections in the task bar.

SCPI Connections

Lists the VISA resource strings of the last remote connections that have accessed the instrument via the LAN interface before.

Remote command:

n.a.

TCP/IP Connections

Lists the types and client addresses of the last remote connections that had accessed the instrument via the LAN interface before.

Remote command:

n.a.

11.4.7 QR Code

Access:

- Select "System Config > Remote Access > QR Code".



The "QR Code" dialog shows the current instrument address (IP address) in quick response (QR) format.

This functionality provides fast access to the instrument via VNC with, for example, a smartphone or a tablet.

See [Chapter 11.9.3, "How To Set Up a Remote Operation from a Smart Device"](#), on page 320.

11.5 LXI Settings

On the R&S SMB100B the LXI functionality is already installed and enabled, see [LXI Status Settings](#). Thus, the instrument can be accessed via any web browser (like the Microsoft Internet Explorer) to perform the following tasks:


- Modifying network configurations
- Remote control the instrument
- Performing SCPI remote diagnostics

The LAN settings are configured using the instrument's LXI browser interface described in [Chapter 11.5.2.1, "LAN Configuration"](#), on page 288.

11.5.1 LXI Status Settings

Access:

- Select "System Config > Setup > Remote Access > LXI Status...".

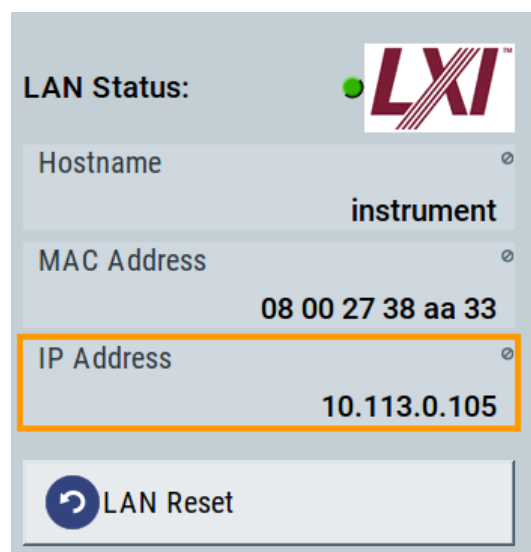

The "LXI - Status" dialog shows the parameters of the LAN connection.

Alternatively, you can change the LAN settings using the LXI web browser interface, see [Chapter 11.5.2.1, "LAN Configuration"](#), on page 288.

LAN Status

The LED indicates the LXI status.

"green"	Normal operation
"green (flashing)"	Device identification
"red"	LAN fault

Hostname / MAC Address / IP Address

See ["Hostname"](#) on page 276.

LAN Reset

Initiates the network configuration reset mechanism for the instrument and resets the hostname, MAC address, and IP address.

According to the LXI standard, a LAN reset must place the following network settings to a default state:

Parameter	Value
TCP/IP mode	DHCP + Auto IP address
Dynamic DNS	Enabled
ICMP ping	Enabled
Password for LAN configuration	LxiWebIfc

The LAN reset also resets the following parameters for the RF signal generator:

Parameter	
Hostname	Instrument-specific hostname
Description	Vector signal generator
Negotiation	Auto detect
VXI-11 discovery	Enabled

11.5.2 LXI Browser Settings

To access the instrument via the web browser:

- In the address field of the browser on your PC, type the instrument's host name or IP address, for example <http://10.113.1.151>.

Note: Do not add the missing zeros in the IP address, while opening the instrument homepage.

The instrument homepage (welcome page) opens.

The navigation pane of the browser interface contains the following elements:

- "LXI"
 - "Home" opens the instrument homepage.
The homepage displays the device information required by the LXI standard, including the VISA resource string in read-only format.
 - "Device Indicator" activates or deactivates the LXI status indication.
When activated, the LXI LEDs flash, both in the browser dialog and in the LXI dialog of the connected instrument, see [LAN Status](#). A green LXI status symbol indicates that a LAN connection has been established; a red symbol indicates that no LAN cable is connected.
 - "Lan Configuration" allows you to configure LAN parameters and to initiate a ping, see ["Ping Client"](#) on page 290.
 - "Status" displays information about the LXI status of the instrument.
 - "Utilities" provides access to the LXI event log functionality required by the LXI standard.
- "Instrument Control"
 - "Web Control" provides remote access to the instrument, see ["Starting a remote control via the LXI web browser"](#) on page 297.
- "Diagnostics"
 - "SCPI Remote Trace" records messages exchanged via the remote control interface, see ["SCPI Remote Trace"](#) on page 290.
- "Help"
 - "Glossary" explains terms related to the LXI standard.
 - www.rohde-schwarz.com opens the Rohde & Schwarz homepage.
- "Data Sheet"

Provides the data sheet with the specification data of the instrument at the time of delivery, see ["Data Sheet"](#) on page 292.

11.5.2.1 LAN Configuration

The "LAN Configuration" web page displays all mandatory LAN parameters and allows their modification.

It comprises the following navigation entries.

• IP Configuration	288
• Advanced Config	289
• Ping Client	290
• SCPI Remote Trace	290
• Data Sheet	292

IP Configuration

The "IP configuration" web page displays all mandatory LAN parameters and allows their modification.

The screenshot displays the "LAN Parameters" configuration page for an LXI instrument. The left sidebar contains navigation links: Home, LAN Configuration (expanded), IP Configuration (selected), Advanced Config, Ping Client, Status, Utilities, Instrument Control, Web Control, Diagnostics, SCPI Remote Trace, Help, Glossary, www.rohde-schwarz.com, Datasheet, and Production Version. The main content area is titled "LAN Parameters" and contains the following fields:

- Hostname: instrument
- DNS Hostname(s): instrument.rsint.net
- Domain: rsint.net
- Description: Instrument (FW version) Serial number
- IP Address Mode: DHCP + Auto IP Address (dropdown)
- IP Address: 10.113.1.151
- Subnet Mask: 255.255.252.0
- Default Gateway: 10.113.0.1
- Obtain DNS Server Address automatically: ☒
- DNS Server(s): 10.0.2.166
- Register Device at DNS Server dynamically: ☒

Additional information on the right side includes a warning: "Attention! Changing the hostname reboots the device!" and a password field labeled "(Password required)". A "Submit" button is located below the DNS Server(s) field. At the bottom, a "Status" section shows "No error". The footer indicates "© 2016 ROHDE&SCHWARZ. All rights reserved."

The "IP Address Mode" selects a configuration mode for the IP address of the instrument. With static configuration, the entered IP address, subnet mask, and default gateway are used. With dynamic configuration, DHCP or dynamic link local addressing (automatic IP) is used to obtain the instrument IP address.



Changing the LAN configuration

This function is password-protected. Unlock the protection level 1 to access it.

Note: We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
- ["Changing the default security password"](#) on page 260.

See [Chapter 10.4.4, "Password Management"](#), on page 256.

Advanced Config

The "Advanced Config" web page provides LAN settings that are not declared mandatory by the LXI standard.

The following advanced parameters are available:

- **"mDNS and DNS-SD"**: The additional protocols "multicast DNS" and "DNS service discovery" are used for device communication in zero configuration networks, working without DNS and DHCP.
- **"ICMP Ping"**: Must be enabled to use the ping utility.
If you disable this setting, the instrument does not answer ping requests. The setting does not affect the LXI ping client. You can ping other hosts from the instrument, even if the setting is disabled.
- **"VXI-11 Discovery"**: Must be enabled to detect the instrument in the LAN.
If you disable this setting, the instrument cannot be detected by the VXI-11 discovery protocol mechanism. The setting does not affect other detection mechanisms. Setting up a VXI-11 connection via the IP address or the host name is independent of this setting.



Changing the LAN configuration

This function is password-protected. Unlock the protection level 1 to access it.

Note: We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["Changing the default user password of the instrument"](#) on page 259.
- ["Changing the default security password"](#) on page 260.

See [Chapter 10.4.4, "Password Management"](#), on page 256.

Ping Client

The "Ping Client" page provides the ping utility to verify the connection between the LXI-compliant instrument and another device.

The ping is initiated from the instrument. Using the `ICMP` echo request and echo reply packets, this function checks whether the communication with a device via LAN is working. Ping is useful for the diagnosis of IP network or router failures.

To initiate a ping at the instrument:

1. On the "Ping Client" page, enter the IP address of the host in the "Destination Address" field (for example 10.113.1.151).
2. Select "Submit".

SCPI Remote Trace

 
The remote trace functionality allows you to trace input and output strings at the remote control interface of the R&S SMB100B, see [Chapter 11.7.8, "How to Trace Messages with the LXI Web Browser Interface"](#), on page 306.

A recorded trace (message log) can be evaluated directly in the dialog. Use the highlighting and navigation functions provided by the lower toolbar to locate error messages and messages containing arbitrary search strings. You can also export the message log to a *.csv file and evaluate the file using a suitable program.

To trace and display messages, switch on "logging" and "live mode" in the toolbar.

Toolbars

The toolbar at the top of the dialog provides basic settings and functions.



- "Live mode" / "logging": If logging is switched on, messages are traced. They are stored in an internal database and can be displayed upon request, using the refresh button (live mode off) or they can be displayed automatically (live mode on).
- "Filter": applies a filter to columns and/or rows when working (live mode off)
- "Refresh": reads the message log from the internal database and displays it
- "Download": stores the SCPI trace log to a *.csv file
- "Clear": deletes all message log entries in the database and at the screen
- "Details": displays details of the selected message, for example an SCPI command in hex format (also possible by double-clicking a message)

Columns

The following columns are available if no column filter is applied:

- "Rec": record number of the message within the message log
- I: number of the subinstrument
- "MT": indicates the type of the message. Possible values and related message contents are:
 - > = incoming command
 - < = outgoing response to a query
 - E = error message, highlighted by red color
 - T = execution time, i.e. time required by the instrument to process the command internally.
- "message": indicates the type of the message. Possible values and related message contents are:
 - > = incoming command
 - < = outgoing response to a query
 - E = error message, denoted in red
 - T = execution time, i.e. time required by the instrument to process the command internally

Data Sheet

The data sheet functionality allows you to retrieve the specification data of the instrument at the time of delivery.

The document contains all specified value ranges and information of the data sheet, for example important as reference values for recalibration.

Instrument Name Specifications Data sheet version

This document contains all specified limits of the data sheet. These values can be used as reference values for recalibration.
 Examples for usage (SCPI) :system:spec? "ID_RF_FREQ_SETTING_TIME_BX03_BX06_MS" or :syst:spec:par?
 "ID_RF_LEVEL_MAX_GENERAL_FORMULA_GHZ_DBM",1.0
 For details please see user manual.

Contents

ID	Type	Value	ValueTypical	Formula
ID_RF_FREQ_SETTING_TIME_BX03_BX06_MS	ms			
ID_RF_FREQ_SETTING_TIME_BX12_BX20_MS	ms			
ID_RF_FREQ_SETTING_TIME_B131_B140_MS	ms			

Status
No error

© 2018 ROHDE&SCHWARZ. All rights reserved.

11.6 Connecting the Instrument to the Network (LAN)

The R&S SMB100B is equipped with a network interface and can be connected to an Ethernet LAN (local area network).

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer

For addressing, both the instrument and the computer require an IP address. The address information is usually assigned to the devices automatically, see [Chapter 11.6.4, "How to Assign the IP Address"](#), on page 293.

- [How To Enable Access via LAN](#).....293
- [How To Activate LAN Services](#).....293
- [How To Connect to LAN](#).....293
- [How to Assign the IP Address](#).....293
- [How to Use Computer Names \(Hostnames\)](#).....294

11.6.1 How To Enable Access via LAN

Per default, the LAN interfaces on the instrument are enabled.

If they have been disabled because of security reasons, enable them as follows:

1. Select "Setup > Security > LAN Services > LAN Interface = On".
2. Enter the [Security Password](#).
3. Select "Accept".

11.6.2 How To Activate LAN Services

Per default, the LAN interfaces and all LAN services are enabled.

If they have been disabled because of security reasons, enable them as follows:

1. Select "Setup > Security > LAN Services".
2. Enable the required service, e.g. "LAN Services > FTP > On".
3. Enter the [Security Password](#).
4. Select "Accept".

See [Chapter 10.4.5, "How to Prevent Unauthorized Access"](#), on page 259.

11.6.3 How To Connect to LAN

1. **NOTICE!** Connecting to the network can cause network failure. Errors can affect the entire network.

Consult your network administrator before performing the following tasks:

- Connecting the instrument to the network
- Configuring the network
- Changing IP addresses

2. Connect the LAN socket on the rear panel via an RJ-45 cable to the LAN.

The R&S SMB100B displays its IP address on the screen.

11.6.4 How to Assign the IP Address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports DHCP (dynamic host configuration protocol), the address information is assigned automatically.

- If the network does not support DHCP, the instrument tries to obtain the IP address via Zeroconf (APIPA) protocol. If this attempt does not succeed or if the instrument is set to use alternate TCP/IP configuration, the addresses must be set manually.

Since the dynamic TCP/IP configuration assigns the address information automatically, it is safe to establish a physical connection to the LAN without any previous instrument configuration.

To assign the IP address manually on the instrument

1. **NOTICE!** Connecting to the network can cause network failure. Errors can affect the entire network.

Consult your network administrator before performing the following tasks:

- Connecting the instrument to the network
- Configuring the network
- Changing IP addresses

2. Select "System Config > Remote Access > Network".
3. Select "Address Mode > Static".
4. Select the "IP Address".

5. Enter the IP address, for example *192.168.0.1*.

The IP address consists of four number blocks separated by dots. Every block contains 3 numbers in maximum.

6. Select the "Subnet Mask" and enter the subnet mask, for example *255.255.255.0*.

The subnet mask consists of four number blocks separated by dots. Every block contains 3 numbers in maximum.

To assign the IP address manually on the computer

- Obtain the necessary information from your network administrator. If you use more than one LAN connector, you need separate address information for each connector.

For information on how to perform the configurations, refer to the documentation of the operating system the computer uses.

11.6.5 How to Use Computer Names (Hostnames)

In a LAN that uses a DNS server, each PC or instrument connected in the LAN can be accessed via an unambiguous computer name (*hostname*) instead of the IP address. The DNS server translates the hostname to the IP address. It is especially useful when a DHCP server is used, as a new IP address can be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned computer name, that remains permanent as long as it is not explicitly changed.

The default computer name follows the syntax <INST>-<Serial Number>, where:

- <INST> is the short name of your instrument, as stated on the front panel.
- <Serial Number> is the individual serial number of the instrument.
You can find the serial number at the rear panel of instrument. It is the third part of the device ID printed on the barcode sticker .



Example:

The default hostname of an R&S SMB100B with a serial number 102030 is SMB100B-102030.

To query and change a computer name

1. Select "System Config > Remote Access > Network".
The computer name is displayed under "Hostname".
2. Select "System Config > Setup > Security > Protection".
3. Enable the "Protection Level 1".
The default password is 123456.
The parameter "Hostname" in the "Network" tab is now enabled for configuration.
4. Change the "Hostname".

11.7 Controlling the R&S SMB100B Remotely

This section shows you how to set up remote control connections over the available interfaces.

The following general prerequisites must be fulfilled:

- The instrument and the controller have to be connected with the suitable cable and switched on.
See [Chapter 11.6, "Connecting the Instrument to the Network \(LAN\)"](#), on page 292.
- To operate the instrument via remote control, it must be addressed using the defined interface address.
See:
 - [Chapter 11.2.1, "LAN Interface"](#), on page 267
 - [Chapter 11.2.2, "USB Interface"](#), on page 270
 - [Chapter 11.2.3, "GPIB Interface \(IEC/IEEE Bus Interface\)"](#), on page 270
 - [Chapter 11.7.1, "How to Find the VISA Resource String"](#), on page 296

- A remote control program must open a connection to the instrument, before it can send commands to and receive device responses from the instrument.

If security is a concern, see:

- Document instrument security procedures.
- [Chapter 10.4.5, "How to Prevent Unauthorized Access"](#), on page 259.
- [How to Find the VISA Resource String](#).....296
- [How to Change the GPIB Instrument Address](#).....297
- [Establishing a Remote Control Connection over the LXI Browser Interface](#).....297
- [Establishing a Remote Control Connection over LAN Using VXI-11 Protocol](#).....298
- [Establishing a Remote Control Connection over LAN Using Socket Communication](#).....303
- [Setting Up a Remote Control Connection over GPIB](#).....304
- [Setting Up a Remote Control Connection over USB](#).....305
- [How to Trace Messages with the LXI Web Browser Interface](#).....306
- [How to Return to Manual Operation](#).....306

11.7.1 How to Find the VISA Resource String

- Select "System Config > Remote Access > VISA Resource Strings".



The dialog shows all specified resource strings of the supported remote control interfaces.

Note: Using the RS232 serial interface via USB requires the USB serial adapter R&S TS-USB1.

11.7.2 How to Change the GPIB Instrument Address

To control the instrument remotely via the GPIB bus, it must be addressed using the GPIB address. The remote control address is factory-set to 28, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIB address is maintained after a reset of the instrument settings.

To set the GPIB address:

1. Select "System Config > Remote Access > GPIB Address".
2. Select "GPIB Channel Address" and enter a value between 0 and 30.



Risk of losing remote connection

If the remote access and network settings had been configured to values different to the default, executing a factory preset via remote control terminates the connection to the instrument.

11.7.3 Establishing a Remote Control Connection over the LXI Browser Interface

Via the LXI browser interface to the R&S SMB100B one or more users can control the instrument remotely from another PC without additional installation. Most instrument controls are available via the front panel simulation. File upload and download between the instrument and the remote PC is also available.

Starting a remote control via the LXI web browser

1. On the instrument, enable the LAN interface.
See [Chapter 11.6.1, "How To Enable Access via LAN"](#), on page 293.
2. Connect the remote PC and the instrument in the same network.
See [Chapter 11.6.3, "How To Connect to LAN"](#), on page 293.
3. On the remote PC, start a web browser that supports HTML5 (W3C compliant).
4. Enter the IP address of the R&S SMB100B in the browser's address bar.
The R&S SMB100B's welcome page is displayed.
5. In the navigation pane, select "Instrument Control" > "Web Control".
Remote access to the instrument requires the password. The default password is *instrument*.
6. Enter the password and confirm with the [Enter] key.
After the connection is established, the current screen of the R&S SMB100B is displayed in the browser window.
7. Use the mouse cursor and keyboard to access the functionality of the instrument as you would directly perform on the instruments touchscreen and front panel.

11.7.4 Establishing a Remote Control Connection over LAN Using VXI-11 Protocol

In this example, the I/O software library R&S VISA from Rohde & Schwarz is used to set up a LAN remote control link and remotely control the R&S SMB100B. R&S VISA is running on a controller PC with Windows operating system. When the connection is set up, you can send commands to the instrument and receive the responses.

The remote control connection requires a VISA installation but no additional hardware on the controller PC. The LAN I/O channel is selected at initialization time using the VISA resource string (also referred to as "address string"). A VISA alias (short name) is used to replace the complete resource string. The host address is the R&S SMB100B's hostname or its IP address.

See also [Chapter 11.2.1, "LAN Interface"](#), on page 267.


Setting up the controller with R&S VISA

To remote control the R&S SMB100B, we use the R&S VISA Tester application. The application communicates via TCP/IP protocol.




The instrument is preconfigured for networks using DHCP (dynamic host configuration protocol). If this configuration is used, enter the computer name in the position of the IP address.


1. On the instrument:
 - a) Enable the LAN interface.
See [Chapter 11.6.1, "How To Enable Access via LAN"](#), on page 293.
 - b) Enable "SCPI over LAN".
See [Chapter 11.6.2, "How To Activate LAN Services"](#), on page 293.
2. On the controller (remote PC), install the R&S VISA program.
See <http://www.rohde-schwarz.com/rsvisa> > "RS VISA Release Notes".
3. Connect the controller and the instrument in the same network (network cable).
Switch them on.
See also [Chapter 11.6.3, "How To Connect to LAN"](#), on page 293.
4. On the controller, start "R&S VISA > Tester 32bit" or "R&S VISA > Tester 64bit".

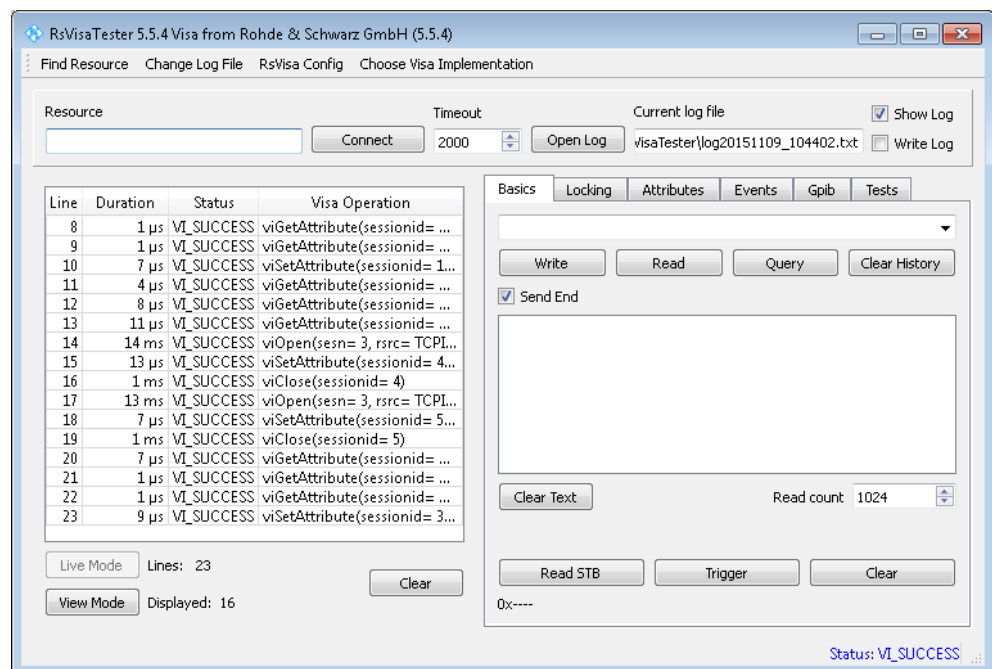

5. In the menu bar, select "Choose VISA Implementation > Rohde & Schwarz Visa" and confirm with "OK".

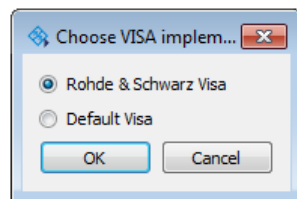

6. In the menu bar, select "Find Resource" to search for the instrument in the LAN.

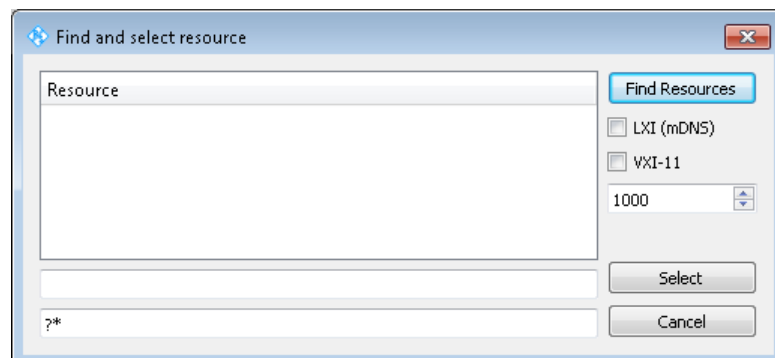


7. Select "VXI-11" and "Find Resources".

R&S VISA scans the network for connected instruments and lists all detected instruments in the "Resource" list.

Note: The search may take some time, particularly in large networks.


8. Select the required instrument and confirm with "Select".

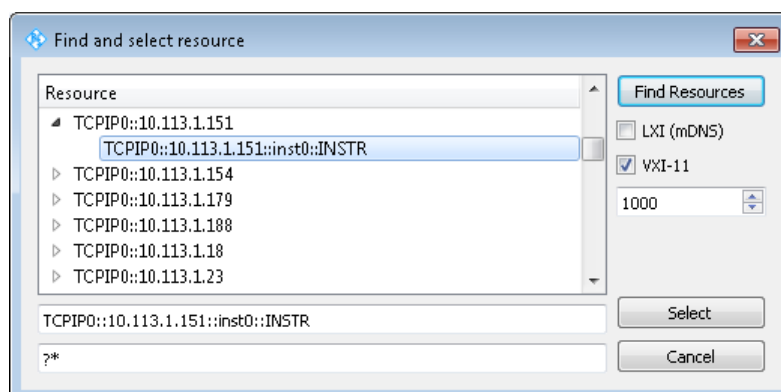

The "Find and select resource" dialog closes and R&S VISA indicates the IP address in the "Resource" field of the main application window.


9. As an alternative to the IP address, you can assign an alias name to the R&S SMB100B:

- a) In the menu bar, select "RsVisaConfig".

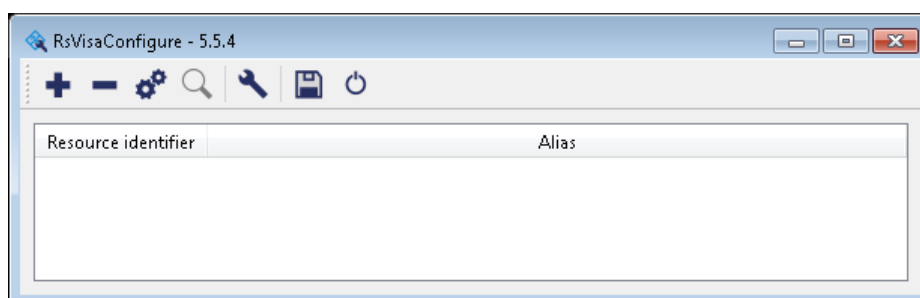


- b) In the toolbar, select "+" to access the "VISA Resource String Composer".

- c) Fill in the "Alias" name, the "VISA Resource String" and the "Device IP Address or host name" as shown in the figure, and confirm with "OK".

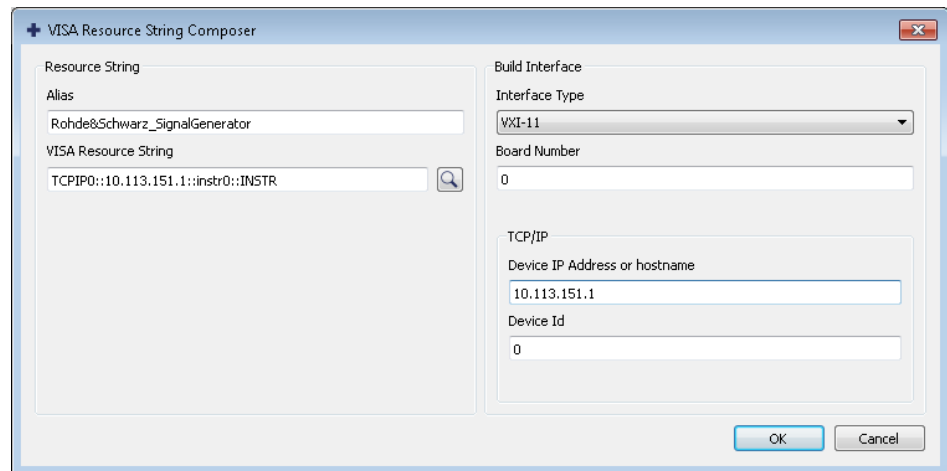

The "Alias" name is assigned.

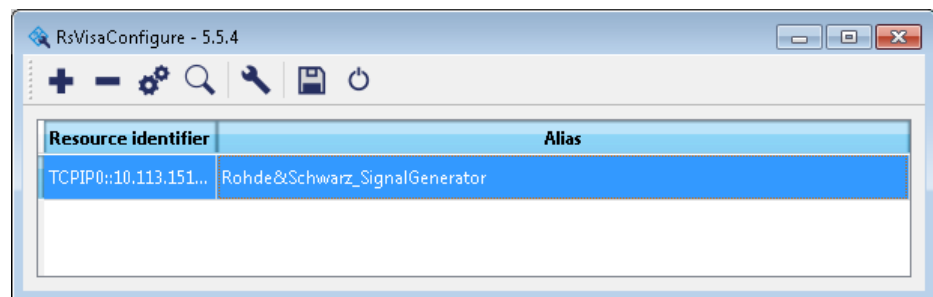

- d) Close the dialog.
The R&S SMB100B is registered in the program. It can be addressed via the resource string or alias name.

10. In the main window, select "Connect".

R&S VISA establishes the connection to the R&S SMB100B.

You can send settings to configure the instrument and receive its responses.

Note: If the connection cannot be set up, R&S VISA displays an error in the log view.

See also [Chapter 13.5, "Resolving Network Connection Failures"](#), on page 543.

For further information on the functions to read and write to an open session, and the utility applications the software provides, see the R&S VISA user manual.

Starting a remote control session over LAN with R&S VISA


To set the instrument to remote control, you can use the addressed command `>R` or send any command from the controller.

1. Start the R&S VISA Tester.
Establish the connection to the R&S SMB100B.
See ["Setting up the controller with R&S VISA"](#) on page 298.

2. In the R&S VISA "Basics" tab, enter an SCPI command, e.g. `"*IDN?"`. Confirm with "Query".

The instrument is switched to remote control when it receives a command from the controller.

3. Select "Read" to obtain the instrument response.

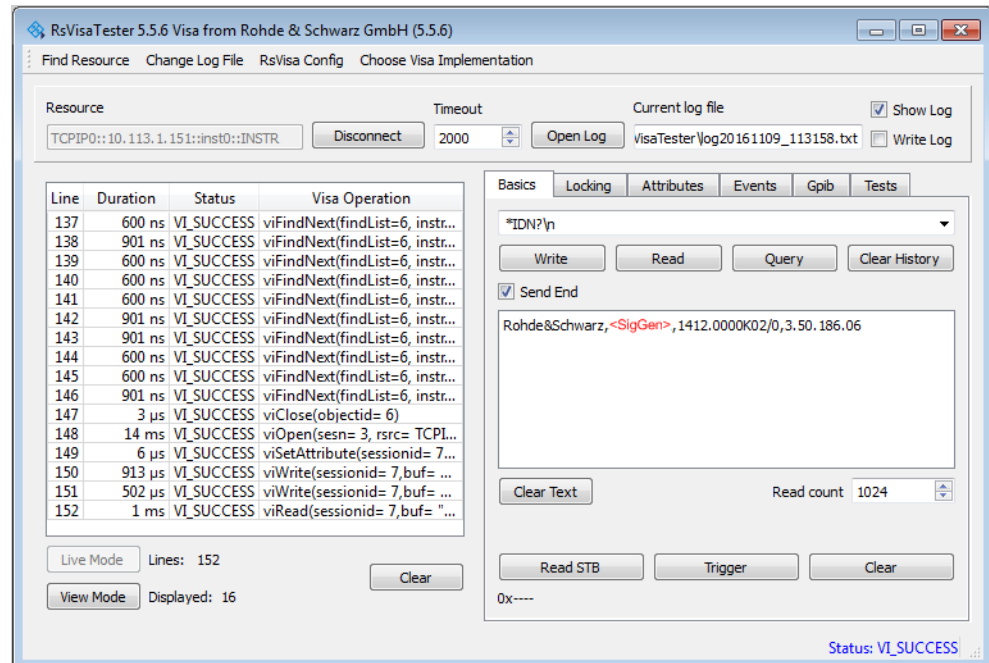

Tip: If the "Show Log" checkbox is checked, R&S VISA displays each VISA function call in the log-view on the left. If you check the "Write Log" checkbox, the log-view entry is written to the log file as well. You can operate the log-view in two modes: the "Live Mode" shows only the most recent messages whereas the "View Mode" allows you to scroll the history.

4. To set, e.g. the frequency, enter `SOUR1:FREQ 4 GHz` and select "Write". To check the performed setting, `SOUR1:FREQ?` and select "Query". The instrument response is `4000000000`. The value corresponds to the frequency in Hz.

While remote control is active, the "Remote" icon in the status bar indicates that the instrument is in remote control mode. Currently ongoing communication (data transfer) is indicated by green colored arrows in the icon.

Operating via the front and touch panel or via mouse and keyboard are locked, allowing a remote control program to be performed without interruption. On the display, keys and entry fields are grayed out and cannot be activated or modified, but you can still open dialogs, for example to verify settings.

5. To disable the access to the dialogs, use the command `SYST:KLOC ON`.
6. To prevent unintentional return to manual operation, use the command `&LLO`. See also [Chapter A.1.2, "LAN Interface Messages"](#), on page 565.

The instrument switches to "Remote LLO" state. The [Setup] key is disabled.

7. To enable the [Setup] key, use the command `>R`.
8. To return to manual operation, see [Chapter 11.7.9, "How to Return to Manual Operation"](#), on page 306.

Tip: Switching from manual operation to remote control and vice versa does not affect the other instrument settings.

11.7.5 Establishing a Remote Control Connection over LAN Using Socket Communication

This section provides an example on how to establish a remote control connection over Telnet client and a simple sockets-based program example that can be further developed.

See also [Chapter A.2, "Telnet program examples"](#), on page 585.




The telnet client transmits information unencrypted. Therefore, for sensitive information we recommend that you use a client which supports secure protocols, like SSH.

In the following example, we assume basic knowledge of programming and operation of the controller. You can find information on the interface commands in the corresponding manuals.


Setting up a Telnet connection

To control the software, only a Telnet program is required. The Telnet program is part of every operating system.


1. On the instrument:
 - a) Enable the LAN interface.
See [Chapter 11.6.1, "How To Enable Access via LAN"](#), on page 293.
 - b) Enable "SCPI over LAN".
See [Chapter 11.6.2, "How To Activate LAN Services"](#), on page 293.
2. Connect the remote PC and the instrument in the same network.
See also [Chapter 11.6.3, "How To Connect to LAN"](#), on page 293.
3. On the remote PC, start the Telnet program.
Enter the socket address.
The socket address is a combination of the IP address or the hostname of the R&S SMB100B and the number of the port configured for remote-control via Telnet.
Tip: The R&S SMB100B uses the port number 5025 for remote connection via Telnet.

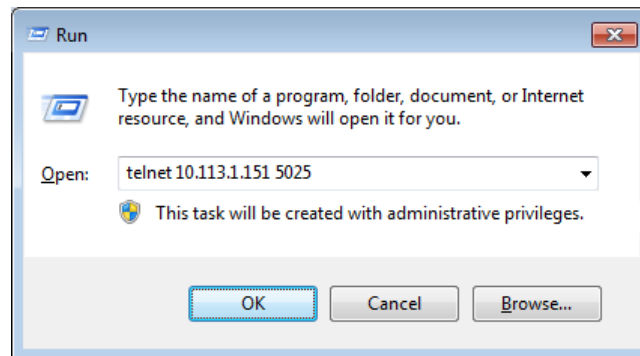

The connection to the instrument is set up and you can send remote-control commands.

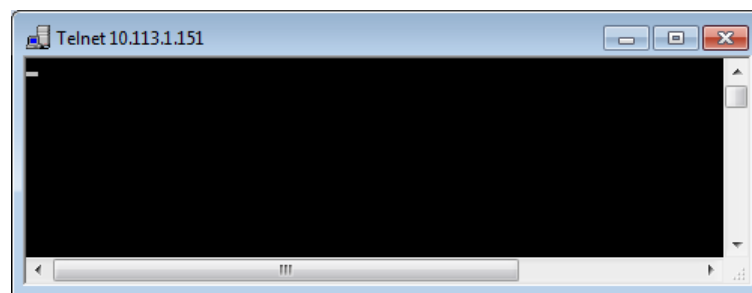

4. Telnet does not reflect your first entry.
Insert a command, e.g. *IDN and confirm with "Enter".
5. Observe the screen.
A response on the query confirms that the connection is working. The client displays all subsequent inputs and responses.
6. Even if the cursor is not visible on the screen, blindly enter a remote-control command. Confirm with Enter.

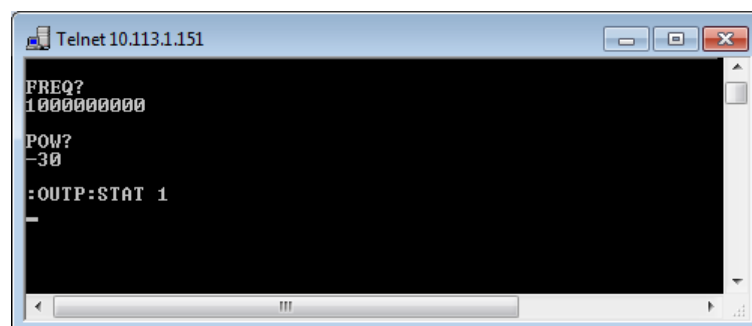

11.7.6 Setting Up a Remote Control Connection over GPIB

The program example in this section is written in VISUAL BASIC. A condition for programming in VISUAL BASIC is that the modules NIGLOBAL (Niglobal.bas) and VBIB32 (Vbib_32.bas) are added to the projects.



Drivers for instrument, for example IVI-COM and LabVIEW drivers, are available for download area on the product page at:

<https://www.rohde-schwarz.com/driver/smb100b/>

Starting a remote control session over GPIB

1. Connect instrument and controller using a GPIB cable.
Switch them on.
2. Select "System Config > Remote Access > GPIB Address " > **"GPIB Channel Address = 28"**.
The GPIB address of the instrument must be the default value of 28.
3. Execute the following commands on the controller:
 - a) Open the port to the instrument.
`CALL IBFIND("DEV1", generator%)`
 - b) Inform the controller about instrument address.
`CALL IBPAD(generator%, 28)`
 - c) Reset the instrument.
`CALL IBWRT(generator%, "*RST;*CLS")`
 - d) Set the instrument to new address.
`CALL IBWRT(generator%, "SYST:COMM:GPIB:ADDR 18")`
 - e) Inform the controller about new address.
`CALL IBPAD(generator%, 18)`

The GPIB address of the instrument is changed.
4. To return to manual operation, press the Local key at the front panel.

11.7.7 Setting Up a Remote Control Connection over USB

For remote control via the USB connection, the PC and the instrument must be connected via the USB type B interface. A USB connection requires the VISA library to be installed. VISA detects and configures the R&S instrument automatically when the USB connection is established. You do not have to enter an address string or install a separate driver.

Starting a remote control session over USB

1. Connect instrument and controller using USB cable. Switch them on.
2. Execute the following commands on the controller:
 - a) Open the port to the instrument.
`viOpen (... , "USB::0x0AAD::0x01DE::100001::INSTR", ...)`
 - b) Reset the instrument.
`viRST(generator%, "*RST;*CLS")`
 - c) Set 2 GHz frequency
`viPrintf (... , "SOUR:FREQ 2GHz\n")`

- d) Set 20 dBm output level

```
viPrintf (... , "SOUR:POW -20dBm\n")
```

The RF frequency and signal level of the instrument are changed.

3. To return to manual operation, press the [Local] key.

11.7.8 How to Trace Messages with the LXI Web Browser Interface

The remote trace functionality allows you to trace commands and messages exchanged via a remote control interface of the R&S SMB100B.

Activating the SCPI remote trace

1. On the instrument:
 - a) Enable the LAN interface.
See [Chapter 11.6.1, "How To Enable Access via LAN"](#), on page 293.
 - b) Enable "SCPI over LAN".
See [Chapter 11.6.2, "How To Activate LAN Services"](#), on page 293.
2. Connect the remote PC and the instrument in the same network.
See also [Chapter 11.6.3, "How To Connect to LAN"](#), on page 293.
3. Start a web browser that supports HTML5 (W3C compliant).
4. Enter the IP address of the R&S SMB100B in the browser's address bar.
The welcome page is displayed.
5. In the navigation pane, select "Diagnostics > SCPI Remote Trace".
6. In the toolbar bar of the "SCPI Remote Trace" page, select "live mode > on" and "logging > on".
"live mode > on" displays all commands and responses, and "logging > on" also traces messages.

If you now control the R&S SMB100B with SCPI commands, using an appropriate tool, the LXI function records the information sent and received.

The function records all sent commands, received responses and messages, and saves them in an internal database. If "live mode" is disabled, you can display the recent traces upon request, using the "refresh" button. You can also save the log in a file.

Note: The diagnostics functionality will be extended in later releases, e.g. to download or upload SCPI command files from / to the instrument.

11.7.9 How to Return to Manual Operation



Before returning to manual control, command processing must be completed. Otherwise, the instrument switches back to remote control immediately.

1. To return from "Remote" state to manual state, perform one of the following:
 - On the controller, use the command `>L`
Note: If `&NREN` has been set before `>L` is locked. Use `>R` instead.
 - In the status bar, select the "Remote" icon.
 - On the front panel, press the [Local] key.
 - In the block diagram, select "Context sensitive menu > Key Emulation > Local"
2. To return from "Remote LLO" state to manual or to "Remote" state, perform one of the following:

Note: In the local lockout state, the command `>L` and the [Local] key are locked. You can unlock this state only via remote control.

 - On the controller, use the command `&LOCS`.
 This command switches directly to manual operation.
 - Send the command `&REMS`.
 This command changes the remote control state from "Remote LLO" to "Remote".
 - Use the Visual Basic command `CALL IBLOC (generator%)`.
 The command switches directly to manual operation.
 - VISA function `viGpibControlREN()`
 This function switches directly to manual operation.

11.8 Automating Tasks with Remote Command Scripts

To achieve fast configuration, make complex test setups or repeating measurements reproducible, you can automate the required settings with scripts. A script contains a series of SCPI commands corresponding to the settings. When completed, it is converted to an executable format, saved in a file and can be run whenever needed.



If you frequently need to load and run a script, assign the script to the [★ (User)], and you can quickly and easily perform the task.

See [Chapter 10.2.4, "How to Assign Actions to the \[★ \(User\)\] Key"](#), on page 239.

In contrast to "Recall Setup" via the [★ (User)] key, an assigned script execution does not close active dialogs and windows. On the contrary, even active window control (open / close) is possible.

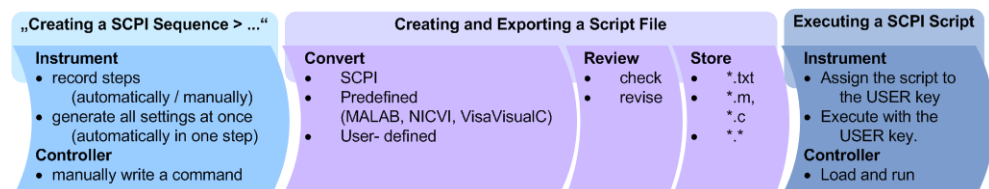


Figure 11-6: Steps for performing SCPI Scripts

In the graph, you can see the main steps required to work with an SCPI script.

Creating a SCPI list

With the SCPI record functions, you can create a SCPI command list directly in the instrument and then export the list to the controller. If you want to edit or write a script manually, use a suitable editor on the controller. Even for manually creating, the instrument supports you by showing the corresponding command syntax and the current settings value.

Directly in the instrument, you can create a SCPI list at any time of operation, in the following ways:

- **Recording steps**

Both, automatic and manual SCPI recording of settings is possible. You can start, stop and resume automatic recording, and also record individual commands manually.

 - **Manually record the steps selectively**

In manual recording mode, you can deliberately record a SCPI command with the "Add CPI Command to Recording List" function, see [How to record SCPI lists manually](#).
 - **Automatically record all performed steps**

The instrument records the SCPI command and settings value of each step you perform, and then writes the commands to the file system, see [How to record SCPI lists automatically](#).
You can also add a SCPI command manually to the recording list during automatic SCPI recording.
- **Generating all settings at once**

Generates the SCPI commands of the current instrument settings in one step, and writes the command list in a temporary list, see [How to create a SCPI list with the current instrument settings in one step](#).

Note: This function lists all commands in alphabetical order, in contrast to the recording or manual creation, which consider the order the settings are configured. Using this function can slow down the runtime or cause errors during execution. Therefore, always check and revise a script if necessary, see ["How to check an SCPI list"](#) on page 314.
- **Manually create a command script with "Copy" and paste**

Enables you to copy the SCPI command and the current setting, see [Chapter 11.8.1, "Show SCPI Command"](#), on page 310.



Some parameters cannot be set by an SCPI command.

If so, *no SCPI command found* is entered instead of a command when you record or generate all settings at once.

The difference between Show SCPI Command and the provided cross-reference

If you want to enter your settings in a script, or use a remote control program, you must know the corresponding SCPI command and the exact syntax.

If you need to look up the SCPI command, the instrument offers two ways to figure it out quickly.

- "Show SCPI command" (context-sensitive menu)
Displays the SCPI command syntax of a selected parameter including the current setting value, see ["Findig out the SCPI command using "Show SCPI Command" on page 316.](#)
The "Copy" function enables you to write an SCPI script conveniently by hand.
- Instrument help ([Help] key)
Opens a help topic that describes the selected parameter or instrument function, including a cross-reference to the corresponding SCPI command. The reference leads you to the description of the SCPI command comprising the complete SCPI syntax, all available setting values, value ranges, etc.
See ["Findig out the SCPI command using the online help" on page 316.](#)

Creating and exporting a script file

When the script list is completed, a code generator translates the SCPI commands into the source code of a proprietary programming language, using a code template. Therefore, each language requires an appropriate code template. When converted, you can save the script in a file with an extension corresponding to the programming language.

The R&S SMB100B provides the following predefined code templates by default:

- Plain SCPI
Represents SCPI base format, that is ASCII format, saved as text file (*.txt).
- MATLAB
A programming environment, frequently used in signal processing and test and measurement applications (*.m).
You can directly use this format with MATLAB(c) Toolkit. For comprehensive information on this topic, refer to the application note [1GP60: MATLAB Toolkit for R&S Signal Generators.](#)
- NICVI
An ANSI C programming environment designed for measurements and tests (*.c).
You can directly use this format with National Instruments LabWindows CVI.
- Python3
A general purpose and high level programming language (*.py).

You can also convert a script to a user-specific format. In this case, you need a code template with the extension *.expcodetmpl.

For information on how to select the code template and save the script in a file, see [Chapter 11.8.3, "SCPI Recording Export Settings"](#), on page 311.

Executing an SCPI script

An SCPI script primarily runs on the controller PC. In addition, you can execute a script directly on the instrument, by assigning the script to the [★ (User)] key.

See [Chapter 10.2.4, "How to Assign Actions to the \[★ \(User\)\] Key"](#), on page 239.

11.8.1 Show SCPI Command

Access:

1. Select the parameter.
2. Open the context-sensitive menu (tap and hold).
3. Select "Show SCPI Command".

This function provides the syntax of the remote command with the current setting.

Copy

Copies the command and the current setting.


Close

Exits the "SCPI Command" dialog.

11.8.2 Displaying an SCPI List

The instrument displays a recorded SCPI list and thus provides viewing the recorded results before exporting.

- Depending on the starting point, you can access the "SCPI Recording List" dialog as follows:
 - During recording
Select "Show SCPI Recording List" in the context-sensitive menu.
 - At any time outside recording
Select "Show SCPI Recording List" in the context-sensitive menu.
This function assumes that at least one recording has been executed after power-on.
 - At the end of the recording
Select "Stop automatic SCPI recording". The dialog opens automatically.
 - After you have exported the script to a file.
Select "SCPI Recording Export > Show file content"
See [Chapter 11.8.3, "SCPI Recording Export Settings"](#), on page 311.

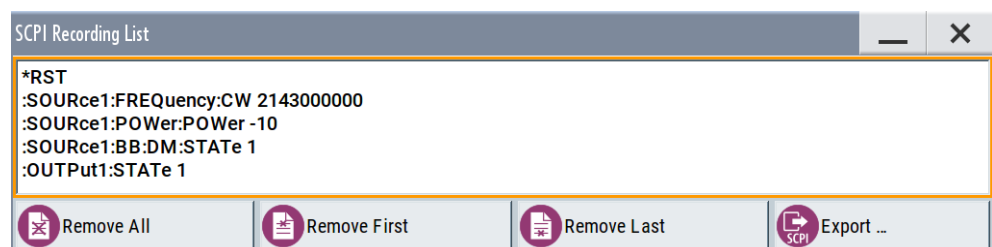

The "SCPI Recording List" shows the last recorded and exported commands.

SCPI Recording List

Lists the automatically or manually recorded recorded SCPI commands.

Export

Opens the [SCPI Recording Export](#) dialog for configuring the file parameters for export.

Remove All, Remove First, Remove Last

Deletes either the first, the last or all recorded SCPI commands.

To remove several recorded commands, repeat the removing.


For post processing, export the SCPI command list in a file, see [Chapter 11.8.5, "How to Convert and Save SCPI Lists"](#), on page 315.

11.8.3 SCPI Recording Export Settings

Scripts are configured and saved in the "SCPI Recording Export" dialog. This dialog opens automatically, when you stop recording.

Access:

1. Select "Show SCPI Recording List" in the context-sensitive menu.
The "SCPI Recording List" dialog opens.
2. Select "Export".

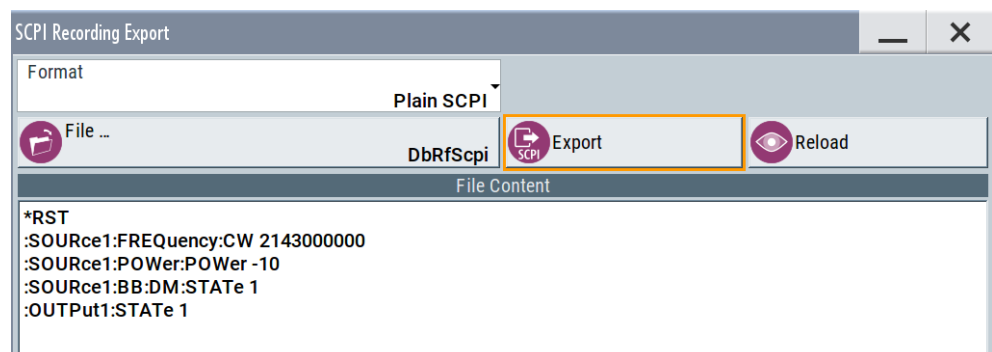

The "SCPI Recording Export" dialog contains all functions required for export of command lists to a file. It enables you to select the source code format, assign an individual filename and display the file content.

Format

Selects the source code format for the command list.

"Plain SCPI" Uses SCPI syntax.

"Predefined Code Generator"

Accesses the predefined templates for common source code generators that convert the recorded settings in the programming languages MATLAB or NICVI or Python.

"User Code Generator"

Use this setting to convert a script by a user-specific code generator.

Select Code Template

Opens the standard "File Select" dialog and lists the predefined or user-defined code templates.

See [Chapter 9.5.1, "File Select Settings"](#), on page 206.

File

Opens the standard file select dialog "Select Output File", see [Chapter 9.5.1, "File Select Settings"](#), on page 206.

Export

Executes data export.

The SCPI list is saved in as file with the selected filename and in the selected directory, see [File](#).

Reload

Reloads a SCPI list from a file.

You can export recorded SCPI lists to files (see [File](#) and [Export](#)), that can be modified.

File content

Displays the content of the script in the selected format and code template.

 
11.8.4 How to Record / Create SCPI Lists

How to record SCPI lists automatically

The following example briefly explains how to proceed when you want to record SCPI lists.


For comprehensive description, see [1GP98: SCPI Recorder Test Automation on a Fingertip](#).

1. On the screen, open the context-sensitive menu (touch and hold, or right mouse click) and select "Start SCPI recording".



Starting from now, all steps you perform are recorded.

 2. To stop SCPI recording, select "context-sensitive menu > Stop SCPI recording".



The "SCPI Recording List" dialog opens automatically.

3. Proceed with [How to check an SCPI list](#).

How to record SCPI lists manually

1. To retrace your settings, open the context-sensitive menu and select "Mark all Parameters Changed from Preset".



Mark All Parameters Changed from Preset

This function identifies and highlights all settings you have changed, both in the block diagram, and in the dialogs.

Frequency	4.000 000 000 000 GHz	
Offset	10.000 000 kHz	Multiplier 1.000
User Variation		
Variation Active	<input checked="" type="checkbox"/>	Variation Step 1.000 000 000 MHz

2. For selectively recording your steps:
 - a) Set the parameter.
 - b) Open the context-sensitive menu.
 - c) Select "Add SCPI Command to Recording List"



Add SCPI Command to Recording List

Tip: You cannot see "Add SCPI ..." in the menu?

A possible reason is opening the menu outside of a dialog or input field, for example in a block diagram. Open the context-sensitive menu within the corresponding dialog or input field, and the feature is available.

- d) Continue with the next setting, and repeat steps *a to b* whenever needed.

Each time you select "Add SCPI ...", the SCPI command is appended to a temporary list.

3. To check the progress of the recording, select "Context-Sensitive > Show SCPI Recording List".



Show SCPI Recording List (4)

The "SCPI Recording List" dialog opens, displaying all recorded settings so far.


4. Proceed with [How to check an SCPI list](#).

How to create a SCPI list with the current instrument settings in one step

You can also generate a SCPI list from a manually created instrument state at any time, in only one step.

To generate an SCPI list with commands for all settings performed:

1. Select "Save/Recall > SCPI Export".

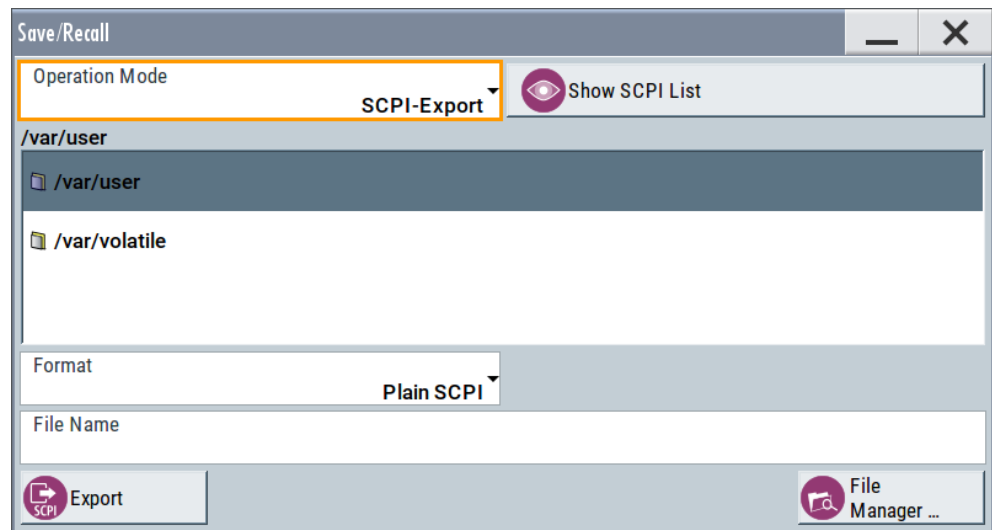

The instrument opens the standard file select dialog, see [Chapter 9.4.1, "Save/Recall Settings"](#), on page 202.

2. In the "Format" entry field, select the source code.
3. Depending on the selected format, convert the script as described in [Chapter 11.8.5, "How to Convert and Save SCPI Lists"](#), on page 315
4. Enter a filename.
5. Select "Export".
The instrument writes all SCPI commands of the key parameters and the modified settings in the file. Also assigns the file extension automatically according to the source code format.
6. To preview the content of the SCPI list:
 - a) Select "System Config > Save/Recall".
 - b) Select "Operation Mode > SCPI-Export".
 - c) In the `/var/user/` directory, select a previously saved file.
 - d) Select "Show SCPI List".

The list of all SCPI commands is displayed, for example, for a final check.



Exporting the SCPI list of the instrument state in one step is a fast and convenient method. Nevertheless, it usually requires postprocessing on an external PC.

How to check an SCPI list

The easiest way to check a list, is to execute it. The generator returns a warning if a setting could not be performed.

However, we recommend that you check the list and possibly rework. It can be that ...

- A parameter has not assigned an SCPI command or an element of the user interface has not an assigned parameter. In these cases, `:SYST:INF:SCPI 'SCPI command not available'` is entered in the list instead.
Such entries are also detected during execution. The instrument recognizes these incomplete commands and displays an error message.
- A preset has been executed, but several standards subsequently perform some internal settings that are also assigned to the list with "SCPI Export".
- After a preset still some settings are defined, which are then written to the list generated with "SCPI Export."

Some suggestions on how you can check and revise a list:

1. Search and remove missing command entries.
2. Remove unnecessary content written after a preset.
3. Rearrange the commands to a reasonable order. If you, for example, set a `STATE` command to the last position of a list, you can avoid intermediate calculations of the signal.
4. Preview the list for completeness by comparing it with the modified settings in the manual mode.
 - a) To retrace your settings in manual operation, open the context-sensitive menu and select "Mark all parameters changed from preset".
The function identifies all settings you have changed, both in the block diagram, and in the dialogs. They appear orange.
 - b) Check whether there is a command in the list for all modified settings.
5. To perform modifications, export the list to a PC, using for example a USB flash drive.

11.8.5 How to Convert and Save SCPI Lists

After completing the recording, the "SCPI Recording Export" dialog opens.

 
1. Select the "Format" for the command syntax in which you want to save the list.
2. "Select Code Template"
Depending on the selected format, proceed accordingly:
Note: Select the code template **before** exporting.
 - a) Plain SCPI
Continue with the next step.
 - b) Predefined code generator
The "SCPI Recording Export - Select Predefined Code Template" dialog opens.
Select one of the predefined code templates.

- c) User code generator
A file system ("SCPI Recording Export - Select User Code Template") dialog opens.
Select your user-defined code template. The code template must have file extension *.expcodetmpl.
3. Select "File..."
The "SCPI Recording Export - Select Output File" dialog opens.
4. Select "New" and assign a filename for saving the recorded list.
5. In the "SCPI Recording Export" dialog, select "Export".
Saves the recorded data either in ASCII format (plain SCPI), or in the corresponding format of the used code template, and shows the SCPI list in the "File Content" section.


11.8.6 How to Find Out the SCPI Commands for GUI Functions

Findig out the SCPI command using "Show SCPI Command"

1. To find out the SCPI command of a parameter in manual operation, select the respective parameter.
2. Open the context-sensitive menu and select "Show SCPI command"



You get the detailed command syntax, including the currently set value.

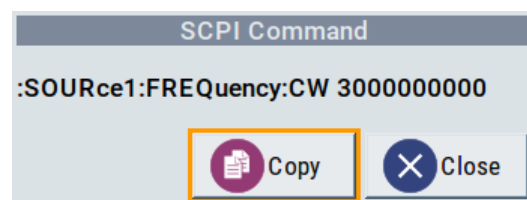

With the "Copy" function, you can conveniently paste the command including the current setting, e.g., in a command script.

Findig out the SCPI command using the online help

If you are looking for the remote command to a function in manual operation, you find it in the description of the online help.

1. To find out the SCPI command of a parameter in manual operation, select the respective parameter.
2. To open the corresponding help topic, select one of the following:
 - In the display, select "context-sensitive menu > Help".

**Help**

- On the front panel, press the [Help] key.

The help topic opens. Apart from the function description, it contains the SCPI command in detailed syntax.

**How to find the corresponding GUI function to a command**

Conversely, if you are looking for a function in the GUI, which belongs to a SCPI, you find it via a cross-reference in the online help and in the user manual.

11.9 Operating the R&S SMB100B Remotely via VNC

This section shows you some examples of the various possibilities to set up remote operation.

- Using a desktop system
 - [Chapter 11.9.2.1, "Using a Web Browser"](#), on page 318
 - [Chapter 11.9.2.2, "Using a VNC Client Software"](#), on page 318
- Using a smart device
 - [Chapter 11.9.3.1, "Using a VNC App"](#), on page 321
 - [Chapter 11.9.3.2, "Using a Web Browser with HTML5"](#), on page 321
 - [Chapter 11.9.3.3, "Special Mode QR Code"](#), on page 322

11.9.1 How To Enable the VNC Service

1. **NOTICE!** Enabled VNC service can lead to unauthorized access.
Change the computer name and password of the instrument.
See [Chapter 10.4.5, "How to Prevent Unauthorized Access"](#), on page 259.
2. Select "System Config > Setup > Security > Security > LAN Services".
3. Select "VNC > On".
4. Enter the [Security Password](#).
5. Select "Accept".

11.9.2 How To Set Up a Remote Operation from a Desktop System

11.9.2.1 Using a Web Browser

The R&S SMB100B supports remote operation via VNC with any web browser, like Windows Internet Explorer or Mozilla Firefox for instance, or alternatively, an HTML5 web browser.

To operate the instrument via a web browser remotely:

1. Install the *JRE (Java Runtime Environment)* on the remote computer.
Note: Skip this step if you are working with an HTML5 web browser.
2. Type the instruments' IP address in the address field of the web browser on your PC, e.g. `http://10.113.1.151`

The VNC authentication screen appears.

3. Enter the password and confirm with "OK".
The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

11.9.2.2 Using a VNC Client Software

A VNC client software is an application which can be used to access and control the instrument from a remote computer through a LAN connection.

The VNC client software for setting up the connection is included in the operating system Linux/Unix per default. For Windows operating systems, a VNC client software must be installed manually.

Various free-of charge programs such as Ultr@VNC or similar VNC client programs are available for download on the Internet.

Setting up the VNC connection on a Linux/Unix desktop client

1. Start a web browser on the remote computer. Enter the IP address of the instrument.
2. Enter the following address:
`vnc://<IP-address of the instrument>`, for example `vnc://10.113.1.151`.


A dialog opens requesting the password for the remote VNC connection.

3. Enter the password and confirm with "OK".
The default password is *instrument*.


After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

Setting up the VNC connection on a Windows desktop client

1. Install the VNC viewer program component on the remote computer.
 - a) On the Internet, select a VNC client program and download it onto your PC.
For example the free of charge software Ultr@VNC (`vncviewer.exe`) is available, see <http://www.uvnc.com/download/index.html>.
 - b) Execute the VNC client installation.
 - c) Select the VNC viewer program component and follow the installation instructions.
2. Start VNC viewer program component on the PC.

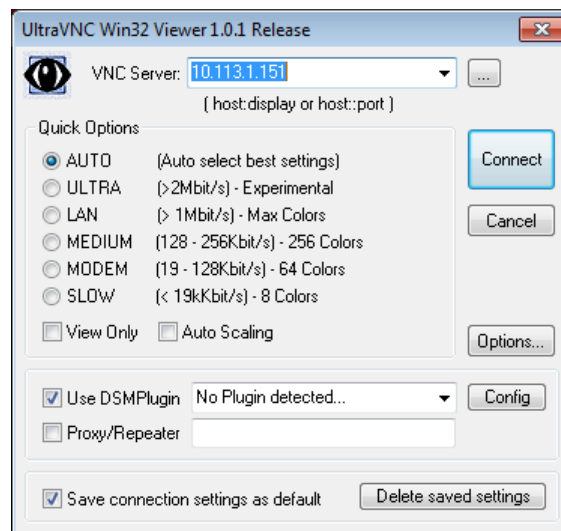

3. Select "VNC Server" and enter the IP address of the instrument.
4. To initialize the connection, select "Connect".
A dialog opens requesting the password.

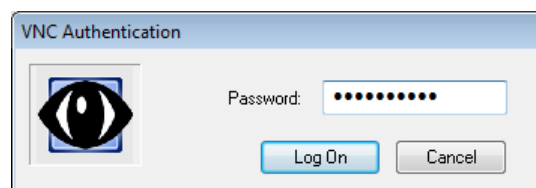

5. Enter the password and confirm with "OK".
The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated from the remote computer.

Terminating VNC connection

- Perform one of the following:
 - a) On an external Unix/Linux PC, close the Internet browser or the signal generator window.

b) On an external Windows PC, close the VNC viewer program.

The connection is terminated but not disabled. It can be established again any time.

In the "Active Connections" tab, the displayed TCP/IP connection disappears.

See [Chapter 10.4.5, "How to Prevent Unauthorized Access"](#), on page 259.

11.9.3 How To Set Up a Remote Operation from a Smart Device

The R&S SMB100B supports remote operation via VNC from a smart device (remote client), like a tablet (tablet computer) or a smartphone. The smart device accesses the instrument via WLAN, either by a suitable App, or an HTML5 web browser, that means with embedded *javascript*.

There are several possibilities to establish a WLAN connection between the smart device and the R&S SMB100B. This section gives an example of how a network environment can be built up, and some essential configuration steps.

For more information, see:

- [1MA216: Remote Operation of Windows Based Instruments with Apple iPad](#)
- [7BM82: Apple iPad Remote Control of Broadcasting T&M Instruments](#)

Example:

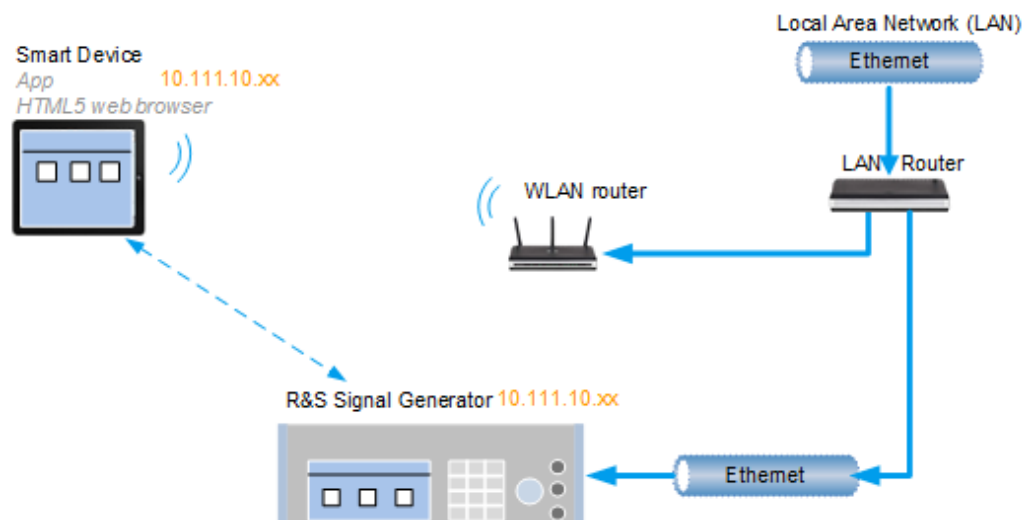


Figure 11-7: Example of a network configuration for remote operation with a smart device

As shown in the figure, the R&S SMB100B and the WLAN router are connected to the LAN router. The smart device accesses the Rohde & Schwarz instrument via the WLAN router.

Prerequisites

For this network configuration, the following prerequisites must be met:

- The required equipment is:

- A LAN router
- A WLAN router (hot spot)
Required for accessing the R&S SMB100B
- The smart device must be known and accepted in the network of the R&S SMB100B.
- The *App* or web browser implements the VNC functionality on the smart device for remote operation.

It is recommended that all components in the network use DHCP, which automatically assigns the relevant address information.



With the configuration in the example, you can reach the instrument from a great distance, since the WLAN router acts as an additional access point.

11.9.3.1 Using a VNC App

Using a *VNC App* enables the smart device to access the R&S SMB100B via WLAN.

The VNC Apps are available from various manufacturers of the smart devices.

The list of supported devices is different according to the smart device.

1. Refer to the manufacturer's website to find out whether a VNC App is available for your device, and how it is installed.
2. In the network, establish the connection of the WLAN router to the LAN router.
We assume the connection of the LAN router and the R&S SMB100B and their configuration in the LAN.
3. Configure the WLAN router according to the manufacturer's instructions.
4. Install the required *VNC App* on your smart device.
5. On the smart device, start the *VNC App*.
6. In the address field, enter the IP address of the instrument.

A log-on dialog opens and requests the password for the VNC connection.

7. Enter the password to establish the remote access.
The default user name and password is *instrument*.
See [Chapter 10.4.5, "How to Prevent Unauthorized Access"](#), on page 259.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

11.9.3.2 Using a Web Browser with HTML5

The R&S SMB100B supports remote operation from a smart device via VNC with any HTML5 compliant web browser, like Internet Explorer, Firefox, Google Chrome, or Safari for instance.

To operate the instrument remotely via a web browser, proceed as follows:

1. In the web browser enter the IP address of the instrument, e.g. *http://10.113.1.151*.
2. Type the instrument IP address in the address field of the web browser on your PC, e.g. *http://10.113.1.151*

The VNC authentication screen appears.

3. Enter the password and confirm with "OK".

The default password is *instrument*.

See [Chapter 10.4.5, "How to Prevent Unauthorized Access"](#), on page 259.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

11.9.3.3 Special Mode QR Code

If your smart device is equipped with a camera and a QR code reader, you can scan the instrument's IP address or access the instrument with the Safari web browser.

QR code readers are available from various manufacturers of the smart devices.

The list of supported devices is different according to the smart device.

1. Refer to the manufacturer's website of your smart device to find out whether a reader is available for your device, and how it is installed.
2. Install the required QR code reader software on your device.
3. Start the reader.
4. On the R&S SMB100B, select "System Config > Remote Access".
5. In the "Remote Access" dialog, select the "QR-Code" tab.
6. Scan the QR code of the instrument with your smart device.
7. On the device, decode the scanned QR code and pass it to the web browser.

A dialog opens requesting the password for the VNC connection.

8. Enter the password and confirm with "OK".

The default password is *instrument*.

After the connection is established, the current screen of the signal generator is displayed and the instrument can be remotely operated.

11.10 References

11.10.1 LXI Functionality

LAN Extensions for Instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology.

LXI is intended to be the LAN-based successor to GPIB, combining the advantages of Ethernet with the simplicity and familiarity of GPIB. Like GPIB, LXI determines and standardizes the way the instrument behaves in a LAN.

The LXI implementation in the R&S SMB100B allows you to change certain LAN settings, to reset the LAN connection, and to identify the instrument.



For information about the LXI standard, refer to the LXI website at <http://www.lxistandard.org>.

See also "News from Rohde & Schwarz, article 2006/II - 190".

The LXI functionality in the R&S SMB100B is characterized by a common LAN implementation, including an ICMP ping responder for diagnostics. The instrument can be configured via a web browser. A LAN Configuration Initialize (LCI) mechanism resets the LAN configuration. The instrument also supports automatic detection in a LAN via the VXI-11 discovery protocol and programming by IVI drivers.

In addition the R&S SMB100B provides the following LXI-related functionality:

- Integrated "LXI Status" dialog for LXI status indication and reset of the LAN configuration, see [Chapter 11.5.1, "LXI Status Settings"](#), on page 285.
- "LXI Browser Interface", as described in [Chapter 11.5.2.1, "LAN Configuration"](#), on page 288.
- "SCPI Remote Trace" utility, see ["SCPI Remote Trace"](#) on page 290.



Firmware update

To enable the full LXI functionality after a firmware update, shut down and restart the instrument.

11.10.2 Code Generator Templates

This section describes the main structure of the code generator templates, and shows the method by means of the NICVI template.

The code generation is controlled by templates with the following blocks:

Command	Function
#EXTENSION_START #EXTENSION_END	Defines the output file extension.
#INIT_CODE_START #INIT_CODE_END	Contains initial entries, such as included files and libraries, buffer size, commands for synchronization, or creating a VISA session. All entries between start and end are written once at the beginning of the output file.
#COMMAND_CODE_START #COMMAND_CODE_END	Frame for an SCPI command. A command is accessed with %COMMAND.
#NO_COMMAND_CODE_START #NO_COMMAND_CODE_END	Frame for a parameter with no SCPI command available. A parameter is accessed with %PARAMETER.
#EXIT_CODE_START #EXIT_CODE_END	Closes the visa session. All entries between start and end are written once at the end of the output file.

Templates are created in ASCII format with file extension *.expcodetempl.

Example:

Example to the code generator template NICVI.expcodetmpl:

```
#EXTENSION_START
.c
#EXTENSION_END

#INIT_CODE_START
#include <ansi_c.h>
#include <visa.h>
#include <cvirte.h>

#define MAX_BUFFER_SIZE 200
static ViStatus status;
static ViSession defaultRM, handle;

static void write_command(char *command)
{
    char writeBuffer[MAX_BUFFER_SIZE];
    char readBuffer[MAX_BUFFER_SIZE];
    int length;
    int readCount;

    strcpy(writeBuffer, command);
    //append "*OPC?" to sync
    strcat(writeBuffer, "*OPC?");
    length = strlen (writeBuffer);
    writeBuffer[length]='\n';
```



```

        length = length+1;
        viWrite (handle, writeBuffer, length, VI_NULL);
        //read result
        viRead(handle, readBuffer, 100, &readCount);
    }
int main (int argc, char *argv[])
{
    if (InitCVIRTE (0, argv, 0) == 0)
        return -1;    /* out of memory */
        //create a VISA session and return a handle to it
        viOpenDefaultRM (&defaultRM);
        //create a VISA session to the serial port and return a handle to it
        viOpen (defaultRM, (ViRsrc)"TCPIP::localhost::INSTR", VI_NULL, VI_NULL,
&handle);
#INIT_CODE_END

#COMMAND_CODE_START
    write_command("%COMMAND");
#COMMAND_CODE_END

#NO_COMMAND_CODE_START
    //no SCPI command available for parameter %PARAMETER !
#NO_COMMAND_CODE_END

#EXIT_CODE_START
    viClose (handle);
        viClose (defaultRM);
        return 0;
}
#EXIT_CODE_END

```

11.10.3 Remote Control States

How to recognize if there is an active remote connection to the instrument

- Observe the indication on the taskbar.



**SCPI, VNC,
SMB, FTP**

A softkey in the taskbar indicates if and what kind of remote connections are currently set up.

See also [Chapter 11.4.6, "Remote Connections Settings"](#), on page 282.

The following table shows the different remote control states and the associated commands or actions to return to manual control.

Table 11-3: Remote control status icons

GUI symbol	Transition to remote control state...	Transition to manual operation...(local state)
 	<p>&GTR (controller)</p> <p>Remote control, but usable front panel keys.</p> <p>The parameters are in read-only mode.</p>	<ul style="list-style-type: none"> • &GTL (controller) • Tap the "Remote" icon (display) • [Local] (front panel or key emulation) <p>A currently performed setting is indicated by the green arrows.</p> <p>The setting must be completed (white arrows), otherwise the instrument remains in remote state.</p>
	<p>&LLO (controller)</p> <p>Remote control with locked front panel keys to prevent user interaction.</p> <p>The parameters are in read-only mode.</p> <p>You can unlock LLO, and thus return to manual operation only via remote control.</p>	<ul style="list-style-type: none"> • &LOCS (controller) • CALL IBLOC (generator%) (controller) <p>Note: The command &REMS returns to "Remote" state.</p>

12 Remote Control Commands

In the following, all remote-control commands are presented in detail with their parameters and the ranges of numerical values.

For an introduction to remote control and the status registers, refer to:

- [Chapter 11, "Network Operation and Remote Control"](#), on page 264
- [Chapter A.1, "Additional Basics on Remote Control"](#), on page 564

12.1 Conventions Used in SCPI Command Descriptions

Note the following conventions used in the remote command descriptions:

- **Command usage**
If not specified otherwise, commands can be used both for setting and for querying parameters.
If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- **Parameter usage**
If not specified otherwise, a parameter can be used to set a value and it is the result of a query.
Parameters required only for setting are indicated as **Setting parameters**.
Parameters required only to refine a query are indicated as **Query parameters**.
Parameters that are only returned as the result of a query are indicated as **Return values**.
- **Conformity**
Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S SMB100B follow the SCPI syntax rules.
- **Asynchronous commands**
A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.
- **Reset values (*RST)**
Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as ***RST** values, if available.
- **Factory preset values**
Default parameter values that are reset only by factory preset.
- **Default unit**
The default unit is used for numeric values if no other unit is provided with the parameter.
- **Manual operation**
If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

12.2 Programming Examples

The corresponding sections of the same title provide simple programming examples for the R&S SMB100B. The purpose of the examples is to present **all** commands for a given task. In real applications, one would rather reduce the examples to an appropriate subset of commands.

The programming examples have been tested with a software tool which provides an environment for the development and execution of remote tests. To keep the examples as simple as possible, only the "clean" SCPI syntax elements are reported. Non-executable command lines (for example comments) start with two // characters.

At the beginning of the most remote control program, an instrument (p)reset is recommended to set the R&S SMB100B to a definite state. The commands `*RST` and `SYSTem:PRESet` are equivalent for this purpose. `*CLS` also resets the status registers and clears the output buffer.

In all the examples we assume that:

- A remote PC is connected to the instrument
- The remote PC and the instrument are switched on
- A connection between them is established
- The security setting "System Config > Setup > Security > SCPI over LAN" is enabled.

12.3 Common Commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

<code>*CLS</code>	329
<code>*ESE</code>	329
<code>*ESR?</code>	329
<code>*IDN?</code>	329
<code>*IST?</code>	330
<code>*OPC</code>	330
<code>*OPT?</code>	330
<code>*PRE</code>	330
<code>*PSC</code>	330
<code>*RCL</code>	331
<code>*RST</code>	331
<code>*SAV</code>	331
<code>*SRE</code>	332
<code>*STB?</code>	332

*TRG.....	332
*TST?.....	332
*WAI.....	332

***CLS**

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONABLE` and the `OPERATION` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

***ESE <Value>**

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

***ESR?**

Event status read

Returns the contents of the event status register in decimal form and then sets the register to zero.

Return values:

<Contents> Range: 0 to 255

Usage: Query only

***IDN?**

Identification

Returns the instrument identification.

Return values:

<ID> "Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>"

Example: Rohde&Schwarz,SMB100B,11400.1000K02/0,4.00.033

Usage: Query only

Manual operation: See ["IDN String"](#) on page 282
 See ["Hardware Options/Software Options"](#) on page 547

***IST?**

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Return values:

<ISTflag> 0 | 1

Usage: Query only

***OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query writes a "1" into the output buffer when all preceding commands have been executed, which is useful for command synchronization.

***OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description, refer to the data sheet.

Return values:

<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

Usage: Query only

Manual operation: See ["OPT String"](#) on page 282
 See ["Hardware Options/Software Options"](#) on page 547

***PRE <Value>**

Parallel poll register enable

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

***PSC <Action>**

Power on status clear

Determines whether the contents of the `ENABLe` registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

Parameters:

<Action> 0 | 1

0
The contents of the status registers are preserved.

1
Resets the status registers.

***RCL** <Number>

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command `*SAV` with the associated number.

It also activates the instrument settings which are stored in a file and loaded using the `MMEMory:LOAD <number>, <file_name.extension>` command.

Manual operation: See "Recall Immediate x" on page 205

***RST**

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to `SYSTem:PRESet`.

Usage: Setting only

Manual operation: See "Preset" on page 198

***SAV** <Number>

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command `*RCL` with the associated number.

To transfer the stored instrument settings in a file, use the command `:MMEMory:STORe:STATe`.

Manual operation: See "Save Immediate x" on page 204

***SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form.
Bit 6 (MSS mask bit) is always 0.
Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the TRIGger subsystem.

Usage: Event

***TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code.

Return values:

<ErrorCode> **integer > 0 (in decimal format)**
An error occurred.
(For details, see the Service Manual supplied with the instrument).
0
No errors occurred.

Usage: Query only

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

Usage: Event

12.4 Preset Commands

The preset commands are not bundled in one subsystem. Therefore, they are listed separately in this section.

Four presetting actions are available:

- Activating the default state of all internal instrument functions (*RST on page 331). Functions that concern the integration of the instrument into a measurement setup are not changed, e.g. reference oscillator source settings.
- Activating the preset state of the parameters related to the selected signal path (:SOURCE<hw>:PRESet on page 333)
- Activating the preset state of all parameters that are not related to the signal path (:DEVice:PRESet on page 333)
- Activating the original state of delivery (factory reset, :SYSTem:FPRreset on page 334). Only functions that are protected by a password remain unchanged as well as the passwords themselves.



When resetting, the following deviation between remote and manual control exists:

In contrast to the [Preset] key, the SCPI commands *RST and :SYSTem:PRESet do not close open dialogs in the GUI.

:DEVice:PRESet.....	333
:SOURCE<hw>:PRESet.....	333
:SYSTem:PRESet.....	334
:SYSTem:FPRreset.....	334

:DEVice:PRESet

Presets all parameters which are not related to the signal path, including the LF generator.

Example: DEV: PRES
Presets all instruments settings that are not related to the signal path.

Usage: Event

:SOURCE<hw>:PRESet

Presets all parameters which are related to the selected signal path.

Example: `SOUR: PRES`
Presets all settings that are related to signal path

Usage: Event

:SYSTem:PRESet

Triggers an instrument reset. It has the same effect as:

- The [Preset] key.
However, the command does not close open GUI dialogs like the key does.
- The *RST command

For an overview of the settings affected by the preset function, see [Table 9-1](#)

Example: `SYST: PRES`
All instrument settings (also the settings that are not currently active) are reset to their default values.

Usage: Setting only

:SYSTem:FPRreset

Triggers an instrument reset to the original state of delivery.

Example: `SYST: FPR`
All instrument settings (also the settings that are not currently active) are reset to the factory values.

Usage: Event

Manual operation: See "[Execute Factory Preset](#)" on page 198

12.5 MMEMory Subsystem

The MMEMory subsystem (Mass MEMory) contains the commands for managing files and directories as well as for loading and saving complete instrument settings in files.

Mass storage location

Without any additional measures, the R&S SMB100B stores user files on the internal memory or if connected, on a memory stick.

Both, the user directory `/var/user/` on the internal memory or the `/usb/` directory on the memory stick, can be used to **preserve** user-defined data. Any directory structure can be created.

The `/var/volatile` directory serves as a RAM drive and can be used to protect sensitive information. The data is available **temporarily**.

Default storage location

The R&S SMB100B stores user data in the user directory.

In the file system, user directory is always indicated as `/var/user/`.

In manual control, you access this directory via the "File Manager", see [Chapter 9.8, "Using the File Manager"](#), on page 209. In remote control, you can query it with the command `:SYSTEM:MMEMory:PATH:USER?`.

To query and change the default directory used for mass storage, use the command `:MMEMory:CDIRectory`.

12.5.1 File Naming Conventions

To enable files to be used in different file systems, consider the following file naming conventions:

- The *filename* can be of any length and *is case-sensitive*, i.e it is distinguished between uppercase and lowercase letters.
- All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the filename).
- Avoid using special characters.
- Do not use slashes "/" and "\". These symbols are used in file paths.
- Avoid using the following filenames: CLOCK\$, CON, COM1 to COM4, LPT1 to LPT3, NUL or PRN
They are reserved by the operating system.

File extension

The file and the optional file *extension* are separated by a period sign. The R&S SMB100B distinguishes the files according to their extensions; each type of file is assigned a specific file content and hence a specific file extension. Refer to [Chapter A.3, "Extensions for User Files"](#), on page 590 for an overview of the supported file extensions.

Wildcards

The two characters "*" and "?" function as "wildcards", i.e. they are used for selecting several files. The "?" character represents exactly one character, while the "*" character represents all characters up to the end of the filename. "*. *" therefore represents all files in a directory.

Filename and file path

When used in remote control commands, the parameter `<filename>` is specified as a string parameter with quotation marks. It can contain either the complete path including the root user directory `/var/user` and filename, or only the filename. The filename must include the file extension. The same applies for the directory `/var/volatile` and for the parameters `<directory_name>` and `<path>`.

Depending on how much information is provided, the values specified in the parameter or with the command `MMEM:CDIR` are used for the path and drive setting in the commands.

12.5.2 Accessing Files in the Default or in a Specified Directory

For better overview and easy file handling, you may not save all user files in the user directory `/var/user` but rather organize them into subdirectories.

The command syntax defines two general ways to access files with user data in a *specific* directory:

- **Change the current default directory** for mass memory storage and then directly access the files in this default directory, like saved list files, files with user data or save/recall files.
The subsequent commands for file handling (select, delete, read out files in the directory, etc.) require only specification of the filename. File extension can be omitted; after syntax evaluation of the used command, the R&S SMB100B filters out the relevant files.
- Define the **complete file path**, including the user directory `/var/user`, created subdirectories and filename (see [Example"Load file with user data from a specific directory"](#) on page 336).
As a rule, whenever an complete file path is determined, it overwrites a previously specified default directory.

The following example explains this rule as a principle. Exceptions of this general rule are stated in the description of the corresponding command. The [Chapter 12.5.3, "Programming Examples"](#), on page 337 explains the general working principle with the commands for mass memory storage.

The same rule applies to the `/var/volatile` directory, see [Example"Working with files in the volatile memory"](#) on page 338.

Example: Load file with user data from a specific directory

This example shows the principle of file handling in remote environment by using list commands. Working with the files of other subsystems is analogical. We assume that the directory `/var/user/my_files` is existing and contains the files `list_test.lsw` and `list_2.lsw`.

```
//Query files in the user directory
:SOURcel:LIST:CATalog?
// -
// no files

// Set the default directory
:MMEMory:CDIRectory "/var/user/my_files"
:SOURcel:LIST:CATalog?
// "list_test","list_2"

// Specify the complete path to select a list file (*.lsw)
// in the specific directory
:SOURcel:LIST:SElect "/var/user/my_files/list_test"
:SOURcel:LIST:DElete "/var/user/my_files/list_2"
```

12.5.3 Programming Examples

Example: Saving and loading current settings

This example shows two ways of how to save the current instrument setting in the file `settings.savrcltxt` in the directory `/var/user/savrcl`.



Before the instrument settings can be saved in a file, they have to be saved in an intermediate memory using common command `*SAV <number>`. The specified number is then used in the `:MMEMory:STORe:STATe` command.

Also, after loading a file with instrument settings with command `:MMEMory:LOAD:STATe`, these settings have to be activated with the common command `*RCL <number>`.

```
// Save the current settings in an intermediate memory with number 4
*SAV 4

// save the settings in a file in a specific directory;
// the complete path has to be specified
:MMEMory:STORe:STATe 4,"/var/user/savrcl/settings.savrcltxt"

// save the settings in a file in the default directory;
// set the default directory; specify only the file name
:MMEMory:CDIRectory "/var/user/savrcl"
*SAV 4
:MMEMory:STORe:STATe 4,"settings.savrcltxt"

// Load the saved settings in the intermediate memory 4 and activate them
:MMEMory:LOAD:STATe 4,"/var/user/settings.savrcltxt"
*RCL 4
```

Example: Working with files and directories

This example shows how to list files in a directory, list the subdirectories, query the number of files in a directory, create directory, rename and delete files.

```
// Query the current default directory for mass storage,
// change the directory to the default user directory "/var/user"
// and read out the files in it
:MMEMory:CDIRectory?
// "/var/user/temp"
:MMEMory:CDIRectory
:MMEMory:CDIRectory?
// "/var/user/"
:MMEMory:CATalog?
// 1282630,8102817792,".,DIR,4096","..,DIR,4096","Log,DIR,4096",
// "settings.savrcltxt,BIN,16949","temp,DIR,4096","test,DIR,4096",
// "list.lsw,BIN,1245201"
// the directory "/var/user" contains the predefined directory "Log",
```

```
// the subdirectories "test" and "temp"
// as well as the files "settings.savrc1txt" and "list.lsw"

// query only the subdirectories of the current or specified directory
:MMEMory:DCATalog? "/var/user"
// ".", "..", "Log", "temp", "test"

// query only number of subdirectories in the current or specified directory
:MMEMory:DCATalog:LENGth? "/var/user"
// 5

// query number of files in the current or specified directory
:MMEMory:CATalog:LENGth? "/var/user"
// 7

// Create a new directory for mass memory storage in the specified directory
:MMEMory:MDIRectory "/var/user/new"

// Copy the file "settings.savrc1txt" into the new directory
:MMEMory:COpy "/var/user/settings.savrc1txt","/var/user/new/settings.savrc1txt"

// Rename the file "settings.savrc1txt" into the new directory
// and read out the files in this specific directory
:MMEMory:CDIRectory "/var/user/new"
:MMEMory:MOve "settings.savrc1txt","settings_new.savrc1txt"
:MMEMory:CATalog? "/var/user/new"
// 25141,8102789120,"..,DIR,4096","..,DIR,4096","settings_new.savrc1txt,BIN,16949"

// Delete the "test" directory
:MMEMory:RDIRectory "/var/user/test"
```

Example: Working with files in the volatile memory

This example shows how to work with files in the /var/volatile directory.

```
// Change the default directory for mass storage,
// read out the files, load and play a file with the ARB
:MMEMory:CDIRectory "/var/volatile"
:MMEMory:CDIRectory?
// "/var/volatile"
:MMEMory:CATalog?
//13928,525352960,"..,DIR,60","..,DIR,4096","list.lst,BIN,9772"

:SOURce1:LIST:SElect "/var/volatile/list"
:SOURce1:FREQuency:MODE LIST
:OUTPut1:STATe 1
```

12.5.4 Remote Control Commands

:MMEMory:CATalog?	339
:MMEMory:CATalog:LENGth?	339
:MMEMory:CDIRectory	340
:MMEMory:COPI	340
:MMEMory:DATA	341
:MMEMory:DCATalog?	341
:MMEMory:DCATalog:LENGth?	342
:MMEMory:DELe	342
:MMEMory:LOAD:STATe	342
:MMEMory:MDIRectory	342
:MMEMory:MOVE	343
:MMEMory:MSIS	343
:MMEMory:RDIRectory	343
:MMEMory:STORe:STATe	343
:MEMory:HFR	344

:MMEMory:CATalog? <path>

Returns the content of a particular directory.

Query parameters:

<path>	string
	String parameter to specify the directory.
	If you leave out the path, the command returns the contents of the directory selected with :MMEMory:CDIRectory.
	The path may be relative or absolute.

Return values:

<UsedDiskSpace>	Byte size of all files in the directory.
<FreeDiskSpace>	Remaining disk space in bytes.
<FileInfo>	<NameFileN>,<SuffixFileN>,<SizeFileN>
	List of files, separated by commas
	<NameFileN>
	Name of the file.
	<SuffixFileN>
	Type of the file. Possible suffixes are: ASCii, BINary, DIRectory
	<SizeFileN>
	Size of the file in bytes.

Usage: Query only

Manual operation: See "Directory, File List and Filename" on page 203

:MMEMory:CATalog:LENGth? <Path>

Returns the number of files in the current or in the specified directory.

Query parameters:

<Path> string
String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with `:MMEMory:CDIRectory` command.

Return values:

<FileCount> integer
Number of files.

Usage: Query only

:MMEMory:CDIRectory <Directory>

Changes the default directory for mass memory storage. The directory is used for all subsequent `MMEM` commands if no path is specified with them.

Parameters:

<Directory> <directory_name>
String containing the path to another directory. The path can be relative or absolute.
To change to a higher directory, use two dots '..'.

Usage: SCPI confirmed

Manual operation: See ["Directory, File List and Filename"](#) on page 203
See ["Directory and Filename"](#) on page 211

:MMEMory:COPY <SourceFile>[,<DestinationFile>]

Copies an existing file to a new file. Instead of just a file, this command can also be used to copy a complete directory together with all its files.

Setting parameters:

<SourceFile> string
String containing the path and file name of the source file

<DestinationFile> string
String containing the path and name of the target file. The path can be relative or absolute.
If **<DestinationFile>** is not specified, the **<SourceFile>** is copied to the current directory, queried with the `:MMEMory:CDIRectory` command.

Note: Existing files with the same name in the destination directory are overwritten without an error message.

Usage: Setting only
SCPI confirmed

Manual operation: See ["Cut, Copy&Paste and Delete"](#) on page 211

:MMEMory:DATA <Filename>, <BinaryBlock>

:MMEMory:DATA? <Filename>

The setting command writes the block data <BinaryBlock> to the file identified by <Filename>.

Tip: Use this command to read/transfer stored instrument settings or waveforms directly from/to the instrument.

Parameters:

<BinaryBlock> #<number><length_entry><data>

#: Hash sign; always comes first in the binary block

<number>: the first digit indicates how many digits the subsequent length entry has

<length_entry>: indicates the number of subsequent bytes

<data>: binary block data for the specified length.

For files with a size with more than nine digits (gigabytes), the instrument allows the syntax # (<Length>), where <Length> is the file size in decimal format.

Parameters for setting and query:

<Filename> string

String parameter to specify the name of the file.

Example:

MMEMory:DATA '/var/user/test.txt', #15hallo

Writes the block data to the file test.txt.

The digit 1 indicates a length entry of one digit; the digit 5 indicate a length of the binary data (hallo) in bytes.

MMEMory:DATA? '/var/user/test.txt'

Sends the data of the file test.txt from the instrument to the controller in the form of a binary block.

Response: #15hallo

Usage: SCPI confirmed

:MMEMory:DCATalog? <path>

Returns the subdirectories of a particular directory.

Query parameters:

<path> String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with [:MMEMory:CDIRectory](#) command.

Return values:

<Catalog> <file_entry>

Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

Usage: Query only

:MMEMory:DCATalog:LENGth? [<Path>]

Returns the number of subdirectories in the current or specified directory.

Query parameters:

<Path> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be queried with **:MMEMory:CDIRectory** command.

Return values:

<DirectoryCount> integer
Number of parent and subdirectories.

Usage: Query only

:MMEMory:DELeTe <Filename>

Removes a file from the specified directory.

Setting parameters:

<Filename> string
String parameter to specify the name and directory of the file to be removed.

Usage: Event
SCPI confirmed

Manual operation: See ["Cut, Copy&Paste and Delete"](#) on page 211

:MMEMory:LOAD:STATe <SavRclStateNumb>, <file_name>

Loads the specified file stored under the specified name in an internal memory.

After the file has been loaded, the instrument setting must be activated using an ***RCL** command.

Setting parameters:

<SavRclStateNumb> Determines to the specific <number> to be used with the ***RCL** command, e.g. ***RCL 4**.

<file_name> String parameter to specify the file name with extension ***.savrc1txt**.

Usage: Setting only

Manual operation: See ["Recall"](#) on page 205

:MMEMory:MDIRectory <Directory>

Creates a subdirectory for mass memory storage in the specified directory. If no directory is specified, a subdirectory is created in the default directory. This command can also be used to create a directory tree.

Setting parameters:

<Directory> string
String parameter to specify the new directory.

Usage: Event

Manual operation: See ["Create New Directory"](#) on page 211

:MMEMory:MOVE <SourceFile>, <DestinationFile>

Moves an existing file to a new location or, if no path is specified, renames an existing file.

Setting parameters:

<SourceFile> string
String parameter to specify the name of the file to be moved.

<DestinationFile> string
String parameters to specify the name of the new file.

Usage: Event
SCPI confirmed

Manual operation: See ["Rename "](#) on page 211

:MMEMory:MSIS <Msis>

Defines the drive or network resource (in the case of networks) for instruments with windows operating system, using `msis` (MSIS = Mass Storage Identification String).

Note: Instruments with Linux operating system ignore this command, since Linux does not use drive letter assignment.

Usage: SCPI confirmed

:MMEMory:RDIRECTory <Directory>

Removes an existing directory from the mass memory storage system. If no directory is specified, the subdirectory with the specified name is deleted in the default directory.

Setting parameters:

<Directory> string
String parameter to specify the directory to be deleted.

Usage: Event

:MMEMory:STORE:STAtE <savrcl_state_nr>, <file_name>

Stores the current instrument setting in the specified file.

The instrument setting must first be stored in an internal memory with the same number using the common command `*SAV`.

Setting parameters:

<savrcl_state_nr> Corresponds to the specific <number> defined with the *SAV command, e.g. *SAV 4.

<file_name> String parameter to specify the file name with extension *.savrcltxt.

Usage: Event

Manual operation: See "Save" on page 204

:MEMory:HFRee?

Returns the used and available memory in Kb.

Return values:

<TotalPhysMemKb> integer
Total physical memory.

<ApplicMemKb> integer
Application memory.

<HeapUsedKb> integer
Used heap memory.

<HeapAvailableKb> integer
Available heap memory.

Usage: Query only

12.6 CALibration Subsystem

The CALibration subsystem contains the commands needed for performing internal adjustments. This procedure is triggered by the query commands.

Suffix <hw>

Suffix	Value range	Description
CALibration<hw>	[1]	Optional suffix

Understanding the query response

- 0: error-free execution of the adjustments
- 1: indicates that an error occurred; the process has been canceled

:CALibration:ALL[:MEASure]?	345
:CALibration<hw>:ALL:DATE?	345
:CALibration<hw>:ALL:INformation?	345
:CALibration<hw>:ALL:TEMP?	346

:CALibration<hw>:ALL:TIME?	346
:CALibration:DATA:FACTory:DATE?	346
:CALibration<hw>:CONTinueonerror	346

:CALibration:ALL[:MEASure]? [<Force>]

Starts all internal adjustments that do not need external measuring equipment.

Query parameters:

<Force> string

Return values:

<Measure> 0 | 1 | OFF | ON

Example:

```
CAL:ALL:MEAS?
// 0
// Executes the adjustments of all instrument functions.
// When completed, it indicates that the adjustment
// has been performed successfully.
```

Usage: Query only

Manual operation: See ["Adjust All"](#) on page 554

:CALibration<hw>:ALL:DATE?

Queries the date of the most recently executed full adjustment.

Suffix:

<hw> [1]
Optional suffix

Return values:

<Date> string

Example:

```
CAL:ALL:DATE?
// "2016-01-01"
```

Usage: Query only

Manual operation: See ["Last Full Adjustment"](#) on page 554

:CALibration<hw>:ALL:INFormation?

Queries the current state of the internal adjustment.

Return values:

<CallInfoText> string

Example:

```
CAL:ALL:INF?
"Instrument is calibrated, no adjustment required."
"UNCAL, instrument is warming up."
"UNCAL, Please perform full adjustment after warming up."
"UNCAL, Please perform full adjustment."
```

Usage: Query only
Manual operation: See ["Information"](#) on page 555

:CALibration<hw>:ALL:TEMP?

Queries the temperature deviation compared to the calibration temperature.

Suffix:
 <hw> [1]
 Optional suffix

Return values:
 <Temperature> string

Example:
 CALibration:ALL:TEMP?
 // "+12.00 K"

Usage: Query only
Manual operation: See ["Temperature Offset"](#) on page 555

:CALibration<hw>:ALL:TIME?

Queries the time elapsed since the last full adjustment.

Return values:
 <Time> string

Example:
 CAL:ALL:TIME?
 // "22 days"

Usage: Query only
Manual operation: See ["Time"](#) on page 554

:CALibration:DATA:FACTory:DATE?

Queries the date of the last factory calibration.

Return values:
 <Date> string

Example:
 CAL:DATA:FACT:DATE?
 // "2016-01-01"

Usage: Query only
Manual operation: See ["Last Factory Calibration"](#) on page 546

:CALibration<hw>:CONTinueonerror <State>

Continues the calibration even though an error was detected. By default adjustments are aborted on error.

Suffix:

<hw> [1]
Optional suffix

Parameters:

<State> 0 | 1 | OFF | ON
*RST: n.a. (factory preset: 0)

Example:

```
CAL:CONT ON  
// Continues calibration after an error
```

Manual operation: See ["Continue Adjustment on Error"](#) on page 555

12.7 DIAGnostic Subsystem

The `DIAGnostic` subsystem contains the commands used for instrument diagnosis and servicing. SCPI does not define any `DIAGnostic` commands; the commands listed here are all device-specific. All `DIAGnostic` commands are query commands which are not affected by `*RST`.



The test functions are intended for services purposes.

They are thus password-protected functions. Unlock the corresponding protection level to access them, see `:SYSTem:PROTect<ch>[:STATe]`

For more information, see R&S SMB100B Service Manual.

Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
<code>DIAGnostic<hw></code>	[1]	Optional suffix

Example: Programming example

The example lists the commands required to query assemblies and test points for diagnosis purposes.

```
// Query the modules available in the instrument
// and variant and revision state of a certain assembly
:DIAGnostic1:BGInfo:CATalog?
// FRONT_AF,PSU300,IFB.BV,MB2_AF,...
:DIAGnostic1:BGInfo? "PSU300"
// PSU300 2118.2067.02 01.00 100000

// Query the test points available in the instrument
// and trigger the measurement in a selected test point
:DIAGnostic1:POINt:CATalog?
// ATT6HP_AF_DET_N,ATT6HP_AF_DET_P,ATT6HP_AF_DET_TEMP...
:DIAGnostic1:MEASure:POINt? "ATT6HP_AF_DET_N"
// 0.000000V

// Query the operating hours and number of power-on so far.
:DIAGnostic:INFO:OTIME?
// 112 h
:DIAGnostic:INFO:POCount?
// 14
```

Commands

:DIAGnostic<hw>:BGInfo:CATalog?	348
:DIAGnostic<hw>:BGInfo?	348
:DIAGnostic:INFO:OTIME?	349
:DIAGnostic:INFO:POCount?	349
:DIAGnostic<hw>:POINt:CATalog?	350
:DIAGnostic<hw>[:MEASure]:POINt?	350

:DIAGnostic<hw>:BGInfo:CATalog?

Queries the names of the assemblies available in the instrument.

Return values:

<Catalog> string
 List of all assemblies; the values are separated by commas
 The length of the list is variable and depends on the instrument
 equipment configuration.

Example: See [Example "Programming example"](#) on page 348.

Usage: Query only

:DIAGnostic<hw>:BGInfo? [<Board>]

Queries information on the modules available in the instrument, using the variant and revision state.

Query parameters:

<Board> string
 Module name, as queried with the command :
[DIAGnostic<hw>:BGInfo:CATalog?](#).
 To retrieve a complete list of all modules, omit the parameter.
 The length of the list is variable and depends on the instrument equipment configuration.

Return values:

<BgInfo> <Module name> <Module stock number incl. variant> <Module revision> <Module serial number>
 List of comma-separated entries, one entry per module.
 Each entry for one module consists of four parts that are separated by space characters.

Example: See [Example"Programming example"](#) on page 348.

Usage: Query only

Manual operation: See ["Assembly"](#) on page 545

:DIAGnostic:INFO:OTIme?

Queries the operating hours of the instrument so far.

Return values:

<OperationTime> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example"Programming example"](#) on page 348.

Usage: Query only

Manual operation: See ["Operation Time / h"](#) on page 545

:DIAGnostic:INFO:POCount?

Queris how often the instrument has been turned on so far.

Return values:

<PowerOnCount> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example"Programming example"](#) on page 348.

Usage: Query only

Manual operation: See ["Power On Count"](#) on page 546

:DIAGnostic<hw>:POINT:CATalog?

Queries the test points available in the instrument.

For more information, see R&S SMB100B Service Manual.

Return values:

<Catalog> string
List of comma-separated values, each representing a test point

Example: See [Example"Programming example"](#) on page 348.

Usage: Query only

:DIAGnostic<hw>[:MEASure]:POINT? <Name>

Triggers the voltage measurement at the specified test point and returns the measured voltage.

For more information, see R&S SMB100B Service Manual.

Query parameters:

<Name> <test point identifier>
Test point name, as queried with the command :
[DIAGnostic<hw>:POINT:CATalog?](#)

Return values:

<Value> <value><unit>

Example: See [Example"Programming example"](#) on page 348.

Usage: Query only

12.8 DISPlay Subsystem

The DISPlay system contains the commands to set the power-save mode of the instrument.

Programming Examples**Example: Activating screen saver mode and display update**

Use the following commands to switch on the screen saver of your instrument or to automatic display. These settings are particularly useful when you control the instrument remotely.

```
// Set the wait time interval and activate the screen saver
:DISPlay:PSAVE:HOLDoff 10
:DISPlay:PSAVE:STATe ON

// Disable the display of the current frequency and level values in remote control
:DISPlay:ANNotation:ALL ON
```

```
// :DISPlay:ANNotation:FREQuency ON
// :DISPlay:ANNotation:AMPLitude ON

// Enable automatic update of the display at defined time intervals
:DISPlay:UPDate ON
```

Example: Querying the dialog IDs, opening and closing dialogs

Use the following commands to query the dialog IDs of all currently open dialogs. The dialog ID is a prerequisite for opening and closing dialogs via the remote control.



The dialog ID is also required to define user key actions.

See [Chapter 10.2.4, "How to Assign Actions to the \[★ \(User\)\] Key"](#), on page 239.

```
// Query the dialog IDs of all open dialogs
:DISPlay:DIALog:ID?
// CEUtraDLGenSetDlg,_, $A DlgKeyRf_Rosc

// Open and close dialogs via remote control
:DISPlay:DIALog:OPEN "CEUtraDLGenSetDlg,_, $A"
:DISPlay:DIALog:OPEN "DlgKeyRf_Rosc"
:DISPlay:DIALog:CLOSe "DlgKeyRf_Rosc"
:DISPlay:DIALog:CLOSe:ALL

:DISPlay:PSAVe:HOLDoff..... 351
:DISPlay:PSAVe[:STATe]..... 352
:DISPlay:BRIGhtness..... 352
:DISPlay:BUTTOn:BRIGhtness..... 352
:DISPlay:UPDate..... 352
:DISPlay:ANNotation:AMPLitude..... 353
:DISPlay:ANNotation:FREQuency..... 353
:DISPlay:ANNotation[:ALL]..... 353
:DISPlay:DIALog:ID?..... 353
:DISPlay:DIALog:OPEN..... 354
:DISPlay:DIALog:CLOSe..... 354
:DISPlay:DIALog:CLOSe:ALL..... 355
```

:DISPlay:PSAVe:HOLDoff <HoldoffTimeMin>

Sets the wait time for the screen saver mode of the display.

Parameters:

<HoldoffTimeMin> integer
 Range: 1 to 60
 *RST: n.a. (factory preset: 10)
 Default unit: minute

Example: see [Example "Activating screen saver mode and display update"](#) on page 350

Manual operation: See ["Wait Time"](#) on page 230

:DISPlay:PSAVe[:STATe] <State>

Activates the screen saver mode of the display.

We recommend that you use this mode to protect the display, if you operate the instrument in remote control.

To define the wait time, use the command **:DISPlay:PSAVe:HOLDoff**.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: n.a. (factory preset: 0)

Example: See [Example "Activating screen saver mode and display update"](#) on page 350

Manual operation: See ["Screen Saver"](#) on page 230

:DISPlay:BRIGhtness <BRIGhtness>

Sets the brightness of the display.

Parameters:

<BRIGhtness> float
Range: 1.0 to 20.0
Increment: 1.0
*RST: 14.0

Example: `DISPlay:BRIGhtness 14`

Manual operation: See ["Display"](#) on page 230

:DISPlay:BUTTon:BRIGhtness <ButtonBrightnes>

Sets the brightness of the [RF on/off] key.

Parameters:

<ButtonBrightnes> integer
Range: 1 to 20
*RST: n.a. (no preset. default: 14)

Example: `DISPlay:BUTTon:BRIGhtness 15`

Manual operation: See ["RF Hardkey"](#) on page 230

:DISPlay:UPDate <Update>

Activates the refresh mode of the display.

Parameters:

<Update> 0 | 1 | OFF | ON
*RST: n.a. (factory preset: 1)

Example: See [Example](#) "Activating screen saver mode and display update" on page 350

Manual operation: See ["Display Update is"](#) on page 231

:DISPlay:ANNotation:AMPLitude <State>

Indicates asterisks instead of the level values in the status bar.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: n.a. (factory preset: 1)

Example: See [Example](#) "Activating screen saver mode and display update" on page 350

Manual operation: See ["Annotation Amplitude"](#) on page 252

:DISPlay:ANNotation:FREQuency <State>

Indicates asterisks instead of the frequency values in the status bar.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: n.a. (factory preset: 1)

Example: See [Example](#) "Activating screen saver mode and display update" on page 350

Manual operation: See ["Annotation Frequency"](#) on page 252

:DISPlay:ANNotation[:ALL] <State>

Displays asterisks instead of the level and frequency values in the status bar of the instrument.

We recommend that you use this mode if you operate the instrument in remote control.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: See [Example](#) "Activating screen saver mode and display update" on page 350

:DISPlay:DIALog:ID?

Returns the dialog identifiers of the open dialogs in a string separated by blanks.

Return values:

<DialogIdList> <DialogID#1>< ><DialogID#2>< > ... < ><DialogID#n>

Dialog identifiers are string without blanks. Blanks are represented as \$\$.

Dialog identifiers <DialogID> are composed of two main parts: <DialogName> [<OptionalParts>]

<DialogName>

Meaningful information, mandatory input parameter for the commands:

:DISPlay:DIALog:OPEN on page 354

:DISPlay:DIALog:CLOSe on page 354

<Optional parts>

String of \$<X> values, where <X> is a character, interpreted as follows:

\$q<DialogQualifier>: optional dialog qualifier, usually the letter A or B, as displayed in the dialog title.

\$i<Instances>: comma-separated list of instance indexes, given in the order h, c, s, d, g, u, 0. Default is zero; the terminating ", 0" can be omitted.

\$t<TabIds>: comma-separated indexes or tab names; required, if a dialog is composed of several tabs.

\$x<Left>\$y<Top>\$h<Left>\$w<Top>: position and size; superfluous information.

Example: See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 351

Usage: Query only

Manual operation: See ["SCPI"](#) on page 238

:DISPlay:DIALog:OPEN <DialogId>

Opens the specified dialog.

Setting parameters:

<DialogId> string

To find out the dialog identifier, use the query [:DISPlay:DIALog:ID?](#).

The <DialogName> part of the query result is mandatory.

Example: See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 351

Usage: Setting only

Manual operation: See ["SCPI"](#) on page 238

:DISPlay:DIALog:CLOSe <DialogId>

Closes the specified dialog.

Setting parameters:

<DialogId>

string

To find out the dialog identifier, use the query `:DISPlay:DIALog:ID?`.

The <DialogName> part of the query result is sufficient.

Example:

See [Example"Querying the dialog IDs, opening and closing dia-logs"](#) on page 351

Usage:

Setting only

:DISPlay:DIALog:CLOSe:ALL

Closes all open dialogs.

Example:

See [Example"Querying the dialog IDs, opening and closing dia-logs"](#) on page 351

Usage:

Event

12.9 FORMat Subsystem

The commands in the FORMat subsystem determine the format of data returned by the R&S SMB100B to the controller. This affects all query commands that return a list of numerical data or block data, noted in the descriptions of the commands. The set data format applies to both paths.

:FORMat:BORDer.....	355
:FORMat:SREGister.....	356
:FORMat[:DATA].....	356

:FORMat:BORDer <Border>

Determines the sequence of bytes within a binary block. This only affects blocks which use the IEEE754 format internally.

Parameters:

<Border>

NORMal | SWAPped

NORMal

Expects/sends the *least* significant byte of each IEEE754 float-ing-point number first and the *most* significant byte last.

SWAPped

Expects/sends the *most* significant byte of each IEEE754 float-ing-point number first and the *least* significant byte last.

*RST: NORMal

Example:

:FORM:BORD SWAP

transfers the data with the most significant bit first.

:FORMat:SREGister <Format>

Determines the numeric format for responses of the status register.

Parameters:

<Format>

ASCIi | BINary | HEXadecimal | OCTal

ASCIi

Returns the register content as a decimal number.

BINary|HEXadecimal|OCTal

Returns the register content either as a binary, hexadecimal or octal number. According to the selected format, the number starts with #B (binary), #H (hexadecimal) or #O (octal).

*RST: ASCIi

Example:

:FORM:SREG HEX

returns the register content as a hexadecimal number.

:FORMat[:DATA] <Data>

Determines the data format the instrument uses to return data via the IEC/IEEE bus.

The instrument automatically detects the data format used by the controller, and assigns it accordingly. Data format determined by this SCPI command is in this case irrelevant.

Parameters:

<Data>

ASCIi | PACKed

ASCIi

Transfers numerical data as plain text separated by commas.

PACKed

Transfers numerical data as binary block data.

The format within the binary data depends on the command.

The various binary data formats are explained in the description of the parameter types.

*RST: ASCIi

Example:

:FORM ASC

transfers the data as ASCII data.

12.10 HCOPy Subsystem

The **HCOPy** subsystem contains the commands to generate and save a hard copy of the display.



To access a stored hard copy file, use the commands of the **MEMM** subsystem.

Example: Store a hard copy of the display

The following example lists commands to configure and execute a hard copy to an automatic named file.

```
:HCOpy:DEvIce:LANGuage PNG
:HCOpy:FILE:NAME:AUTO:STATe 1
// defines the output format
// sets the instrument to automatically create output file names

// *****
// Configure hard copy options, set automatic naming rules
// An automatically generated file name consists of:
// <Prefix><YYYY><MM><DD><Number>.<Format>
// *****
:HCOpy:DEvIce:LANGuage BMP
// defines output format *.bmp
:HCOpy:REGion DIALog
// selects the region to be copied
:HCOpy:FILE:AUTO:DIR "/usb/HCOpy"
// sets destination directory of automatic named file
:HCOpy:FILE:NAME:AUTO:FILE:PREFix:STATe 1
:HCOpy:FILE:NAME:AUTO:FILE:PREFix:"hardcopy"
:HCOpy:FILE:NAME:AUTO:FILE:YEAR:STATe 1
:HCOpy:FILE:NAME:AUTO:FILE:MONTh:STATe 1
// uses automatic naming prefix
// sets automatic naming prefix to "hardcopy"
// uses automatic naming date parameters year and month

// *****
// Execute and transfer the hard copy
// *****
:HCOpy:EXECute
:HCOpy:DATA
// generates a hard copy
// transfers the hard copy to the remote client
:HCOpy:FILE:AUTO:FILE?
// queries the automatic file name
// "hardcopy1607001.bmp"
:HCOpy:FILE:AUTO:NUMBer?
// queries the number in the automatic file name
// "001"
:HCOpy:FILE:AUTO?
// queries the path and file name of the automatically generated file
// "/usb/HCOpy/hardcopy1607001.bmp"
```

12.10.1 Hard Copy Settings

With the following commands, you can configure the settings of a hard copy.

:HCOPY:DATA?	358
:HCOPY:IMAGe:FORMat	358
:HCOPY:DEVIce:LANGuage	358
:HCOPY:REGion	358
:HCOPY:FILE[:NAME]	358
:HCOPY[:EXECute]	359

:HCOPY:DATA?

Transfers the hard copy data directly as a NByte stream to the remote client.

Return values:

<Data> block data

Example: See [Example"Store a hard copy of the display"](#) on page 357

Usage: Query only

:HCOPY:IMAGe:FORMat <Format>

:HCOPY:DEVIce:LANGuage <Language>

Selects the graphic format for the hard copy. You can use both commands alternatively.

Parameters:

<Language> BMP | JPG | XPM | PNG

*RST: PNG

Example: See [Example"Store a hard copy of the display"](#) on page 357

Manual operation: See ["Format"](#) on page 223

:HCOPY:REGion <Region>

Selects the area to be copied.

You can create a snapshot of the screen or an active dialog.

Parameters:

<Region> ALL | DIALog

*RST: ALL

Example: See [Example"Store a hard copy of the display"](#) on page 357

Manual operation: See ["Region"](#) on page 224

:HCOPY:FILE[:NAME] <Name>

Determines the file name and path to save the hard copy, provided automatic naming is disabled.

Note: If you have enabled automatic naming, the instrument automatically generates the file name and directory, see [Chapter 12.10.2, "Automatic Naming"](#), on page 359.

Parameters:

<Name> string

Example: See [Example"Store a hard copy of the display"](#) on page 357**Manual operation:** See ["File..."](#) on page 223**:HCOPY[:EXECute]**

Generates a hard copy of the current display. The output destination is a file.

Example: See [Example"Store a hard copy of the display"](#) on page 357**Usage:** Event**Manual operation:** See ["Save"](#) on page 223

12.10.2 Automatic Naming

Use the following commands to automatically assign a file name.

:HCOPY:FILE[:NAME]:AUTO?	359
:HCOPY:FILE[:NAME]:AUTO:DIRectory	359
:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar	360
:HCOPY:FILE[:NAME]:AUTO:FILE?	360
:HCOPY:FILE[:NAME]:AUTO:STATe	360
:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe	360
:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe	360
:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe	360
:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?	361
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX	361
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX:STATe	361

:HCOPY:FILE[:NAME]:AUTO?Queries path and file name of the hardcopy file, if you have enabled *Automatic Naming*.**Return values:**

<Auto> string

Example: See [Example"Store a hard copy of the display"](#) on page 357**Usage:** Query only**:HCOPY:FILE[:NAME]:AUTO:DIRectory <Directory>**Determines the path to save the hard copy, if you have enabled *Automatic Naming*.If the directory does not yet exist, the instrument automatically creates a new directory, using the instrument name and `/var/user/` by default.

Parameters:

<Directory> string
 *RST: /var/user/

Example: See [Example"Store a hard copy of the display"](#) on page 357

Manual operation: See ["Path..."](#) on page 225

:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar

Deletes all files with extensions *.bmp, *.jpg, *.png and *.xpm in the directory set for automatic naming.

Example: See [Example"Store a hard copy of the display"](#) on page 357

Usage: Event

Manual operation: See ["Clear Path"](#) on page 225

:HCOPY:FILE[:NAME]:AUTO:FILE?

Queries the name of the automatically named hard copy file.

An automatically generated file name consists of:

<Prefix><YYYY><MM><DD><Number>.<Format>.

You can activate each component separately, to individually design the file name.

Return values:

<File> string

Example: See [Example"Store a hard copy of the display"](#) on page 357.

Usage: Query only

:HCOPY:FILE[:NAME]:AUTO:STATe <State>

Activates automatic naming of the hard copy files.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: See [Example"Store a hard copy of the display"](#) on page 357

Manual operation: See ["Automatic Naming"](#) on page 224

:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe <State>**:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe <State>****:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe <State>**

Uses the date parameters (year, month or day) for the automatic naming. You can activate each of the date parameters separately.

Parameters:
 <State> 0 | 1 | OFF | ON
 *RST: 1

Example: See [Example"Store a hard copy of the display"](#) on page 357

Manual operation: See ["Prefix, Year, Month, Day"](#) on page 225

:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?

Queries the number that is used as part of the file name for the next hard copy in auto-
 matic mode.

At the beginning, the count starts at 0. The R&S SMB100B searches the specified out-
 put directory for the highest number in the stored files. It increases this number by one
 to achieve a unique name for the new file.

The resulting auto number is appended to the resulting file name with at least three
 digits.

Return values:
 <Number> integer
 Range: 0 to 999999
 *RST: 0

Example: See [Example"Store a hard copy of the display"](#) on page 357

Usage: Query only

Manual operation: See ["Current Auto Number"](#) on page 225

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix <Prefix>
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe <State>

Uses the prefix for the automatic generation of the file name, provided PREF:STAT is
 activated.

Parameters:
 <State> 0 | 1 | OFF | ON
 *RST: 1

Example: See [Example"Store a hard copy of the display"](#) on page 357

Manual operation: See ["Prefix, Year, Month, Day"](#) on page 225

12.11 KBOard Subsystem

The KBOard subsystem contains the commands to set a connected keyboard.

[:KBOard:LAYout](#).....362

:KBOard:LAYout <Layout>

Selects the language for an external keyboard and assigns the keys accordingly.

Parameters:

<Layout> CHINese | DANish | DUTCh | DUTBe | ENGLish | ENGUK |
FINNish | FRENch | FREBe | FRECa | GERMan | ITALian |
JAPanese | KORean | NORWegian | PORTuguese | RUSSian |
SPANish | SWEDish | ENGUS
*RST: n.a. (factory preset: ENGLish)

Example:

```
:KBOard:LAYout US
// activates American keyboard
```

Manual operation: See ["USB Keyboard > Layout"](#) on page 230

12.12 OUTPut Subsystem

In the OUTPut subsystem, you can configure the output signals.

The LF output signal is defined with the commands of the [Chapter 12.14.5, "SOURce:LFOutput Subsystem"](#), on page 428 system.

Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
OUTPut<hw>	[1]	Optional suffix

:OUTPut:ALL[:STATe].....	362
:OUTPut<hw>[:STATe].....	363
:OUTPut<hw>[:STATe]:PON.....	363
:OUTPut<hw>:AMODE.....	363
:OUTPut<hw>:IMPedance?.....	363
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	364
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	364
:OUTPut<hw>:PROTection:CLEar.....	364
:OUTPut<hw>:PROTection:TRIPped?.....	364

:OUTPut:ALL[:STATe] <State>

Activates the RF output signal of the instrument.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: n.a. (factory preset: 0)

Example:

```
:OUTPut:ALL:STATe 0
```

:OUTPut<hw>[:STATe] <State>

Activates the RF output signal.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: :OUTPut1 ON
 Activates the RF output.

Manual operation: See ["RF State/RF ON"](#) on page 58

:OUTPut<hw>[:STATe]:PON <Pon>

Defines the state of the RF output signal when the instrument is switched on.

Parameters:

<Pon> OFF | UNCHanged
 *RST: n.a. (factory preset: UNCHanged)

Example: :OUTPut1:PON OFF
 The RF output is deactivated when the instrument is switched on.

Manual operation: See ["Power-On State"](#) on page 231

:OUTPut<hw>:AMODE <AMode>

Sets the step attenuator mode at the RF output.

Parameters:

<AMode> AUTO | FIXEd

AUTO

The step attenuator adjusts the level settings automatically, within the full variation range.

FIXEd

The step attenuator and amplifier stages are fixed at the current position, providing level settings with constant output VSWR. The resulting variation range is calculated according to the position.

*RST: AUTO

Example: :SOURce1:POWer:ALC:STATe 1
 :OUTPut1:AMODE FIXEd

Manual operation: See ["Mode"](#) on page 152

:OUTPut<hw>:IMPedance?

Queries the impedance of the RF outputs.

Return values:

<Impedance> G1K | G50 | G10K
 *RST: G50

Example:

:OUTPut1:IMP?
 queries the impedance of RF output.
 Response: 50
 the impedance is 50 ohms

Usage:

Query only

Manual operation: See ["RF output impedance"](#) on page 58

:OUTPut<hw>:AFIXed:RANGe:LOWer?

:OUTPut<hw>:AFIXed:RANGe:UPPer?

Queries the settable minimum/maximum value in mode :OUTPut:AMODE FIXed, i.e. when the attenuator is not being adjusted.

See [:OUTPut<hw>:AMODE](#) on page 363

Return values:

<Upper> float
 Increment: 0.01
 Default unit: dBm

Example:

```
:OUTPut1:AMODE FIXed
:OUTPut1:AFIXed:RANGe:UPPer?
// -27
:OUTPut1:AFIXed:RANGe:LOW?
// -50
```

Usage:

Query only

Manual operation: See ["Level Range"](#) on page 153

:OUTPut<hw>:PROTection:CLEar

Resets the protective circuit after it has been tripped.

To define the output state, use the command [:OUTPut<hw>\[:STATE\]](#).

Example:

```
:OUTPut1:PROT:CLE
Resets the protective circuit of the RF output.
```

Usage:

Event

Manual operation: See ["Overload"](#) on page 153

:OUTPut<hw>:PROTection:TRIPped?

Queries the state of the protective circuit.

Return values:

<Tripped> 0 | 1 | OFF | ON
 *RST: 0

Example:

:OUTPut1:PROT:TRIP
 queries the state of the protective circuit of the RF output.
 Response: 0
 the protective circuit has not tripped.

Usage:

Query only

Manual operation: See "Overload" on page 153

12.13 SENSe, READ, INITiate and SLISt Subsystems

These subsystems contain the commands for configuring the power measurements with R&S NRP power sensor connected to the R&S SMB100B.



The local state is set with the `INIT` command. Switching off the local state enhances the measurement performance. Measurements results can be retrieved in local state on or off.

Sensor parameters are set with the `SENSe` commands.

To start the measurement and retrieve the result, use the `:READ<ch>[:POWER]?` command.

Suffix	Value range	Description
SENSe<ch>	[1] to 4	Indicates the sensor Use the :SLISt commands to change the sensor mapping
READ<ch>	[1] to 4	Sensor assignment
INITiate<hw>	[1] to 4	Sensor assignment
ELEMent<ch>	[1] to 25	Sensor mapping list

Programming examples

Example: Detecting and assigning a power sensor

```
:SLISt:LIST?
// Response: "NRP33SN-V-900007-USB Legacy","NRP-Z211-900001-USB Legacy"
// list of automatically detected sensors

:SLISt:SCAN:STATe 1
// searches for sensors connected in the LAN or via the USBTMC protocol

:SLISt:SCAN:LENSor 'NRQ6',101624 //sensor name, serial number
:SLISt:SCAN:LENSor 'NRQ6',11.123.1.123, 101624 //IP address, serial number
// add sensor connected in the LAN to the list

:SLISt:SCAN:USENSor 'NRQ6',101624 //sensor name, serial number
:SLISt:SCAN:USENSor #H15b,101624 //device ID (hexadecimal), serial number
:SLISt:SCAN:USENSor 347,101624 //device ID (decimal), serial number
// add sensor connected at the USB interface to the list

:SLISt:LIST?
// Response:
// "NRP33SN-V-900007-USB Legacy","NRP-Z211-900001-USB Legacy",
// "NRP33SN-V-900005-USBTMC","NRP33SN-V-900011-LAN"
// list of automatically detected sensors
// the list can contain more entries

:SLISt:ELEMent3:MAPPing SENS1
// maps the third sensor from the list to the first sensor channel

:SLISt:SENSor:MAP "NRPS18S-100654-USB Legacy", SENS3
// maps the sensor directly to channel 3

:SLISt:CLEar[ALL] // remove all sensors from the list
:SLISt:CLEar:LAN // remove sensors connected in the LAN from the list
:SLISt:CLEar:USB // remove sensors connected over USB from the list
// remove all sensors from the list
```

Example: Performing a simple power measurement

Prerequisite: The sensor is connected to the instrument and mapped to the first sensor channel.

```
:INITiate1:CONTinuous ON
//Switches the continuous power measurement on

:READ1?
// Triggers the measurement and displays the results
```

Example: Performing a power measurement with a fixed filter

Prerequisite: The sensor is connected to the instrument and mapped to the first sensor channel.

```

SENSe1:SOURce RF
//Sensor measures the power of the RF signal

:SENSe1:FILTer:TYPE NSRatio
//Selects fixed noise filter mode

:SENSe1:FILTer:NSRatio 0.02 DB
//Sets the maximum noise component in the result to 0.02 DB

:SENSe1:FILTer:NSRatio:MTIME 10
//Limits the settling time to 10 seconds.

:SENSe1:APERture:DEFAult:STATe 0
// Deactivates the default aperture time of the sensor

:SENSe1:APERture:TIME 10e-6
// Sets the aperture time to 10 us

:SENSe1:UNIT DBM
//Selects unit dBm for the measured value

:INITiate:CONTinuous ON
//Switches the continous power measurement on

:READ?
//Triggers the measurement and displays the results

```

:SLISt[:LIST]?.....	368
:SLISt:SCAN[:STATe].....	368
:SLISt:SCAN:LENSor.....	368
:SLISt:SCAN:USENSor.....	369
:SLISt:CLEar:LAN.....	369
:SLISt:CLEar:USB.....	369
:SLISt:CLEar[:ALL].....	370
:SLISt:ELEMeNt<ch>:MAPPing.....	370
:SLISt:SENSor:MAP.....	370
:INITiate<hw>[:POWeR]:CONTinuous.....	370
:READ<ch>[:POWeR]?.....	371
:SENSe<ch>:UNIT[:POWeR].....	371
:SENSe<ch>[:POWeR]:APERture:DEFAult:STATe.....	372
:SENSe<ch>[:POWeR]:APERture:TIME.....	372
:SENSe<ch>[:POWeR]:CORRection:SPDevice:SELEct.....	372
:SENSe<ch>[:POWeR]:CORRection:SPDevice:STATe.....	373
:SENSe<ch>[:POWeR]:CORRection:SPDevice:LIST?.....	373
:SENSe<ch>[:POWeR]:DISPlay:PERManent:STATe.....	373
:SENSe<ch>[:POWeR]:FILTer:LENGth:AUTO?.....	373

:SENSe<ch>[:POWer]:FILTer:LENGth[:USER].....	374
:SENSe<ch>[:POWer]:FILTer:NSRatio.....	374
:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME.....	375
:SENSe<ch>[:POWer]:FILTer:SONCe.....	375
:SENSe<ch>[:POWer]:FILTer:TYPE.....	375
:SENSe<ch>[:POWer]:FREQuency.....	376
:SENSe<ch>[:POWer]:LOGGing:STATe.....	376
:SENSe<ch>[:POWer]:OFFSet.....	377
:SENSe<ch>[:POWer]:OFFSet:STATe.....	377
:SENSe<ch>[:POWer]:SNUMber?.....	377
:SENSe<ch>[:POWer]:SOURce.....	377
:SENSe<ch>[:POWer]:STATus[:DEVice]?.....	378
:SENSe<ch>[:POWer]:TYPE?.....	378
:SENSe<ch>[:POWer]:ZERO.....	378

:SLISt[:LIST]?

Returns a list of all detected sensors in a comma-separated string.

Return values:

<SensorList> String of comma-separated entries
 Each entry contains information on the sensor type, serial number and interface.
 The order of the entries does not correspond to the order the sensors are displayed in the "NRP Sensor Mapping" dialog.

Example: See [Example "Detecting and assigning a power sensor"](#) on page 366.

Usage: Query only

Manual operation: See ["Sensor Mapping List"](#) on page 170

:SLISt:SCAN[:STATe] <State>

Starts the search for R&S NRP power sensors, connected in the LAN or via the USBTMC protocol.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: See [Example "Detecting and assigning a power sensor"](#) on page 366.

Manual operation: See ["Scan"](#) on page 171

:SLISt:SCAN:LSENSor <IP>

Scans for R&S NRP power sensors connected in the LAN.

Setting parameters:

<IP> string
 *RST: 0

Example: See [Example](#) "Detecting and assigning a power sensor" on page 366.

Usage: Setting only

Manual operation: See ["Add LAN Sensor settings"](#) on page 171

:SLISt:SCAN:USENSor <DeviceID>, <Serial>

Scans for R&S NRP power sensors connected over a USB interface.

Parameters:

<Serial> integer
 Range: 0 to 999999

Setting parameters:

<DeviceID> String or Integer
 Range: 0 to 999999
 *RST: 0

Example: See [Example](#) "Detecting and assigning a power sensor" on page 366.

Usage: Setting only

Manual operation: See ["Add USB Sensor settings"](#) on page 171

:SLISt:CLEar:LAN

Removes all R&S NRP power sensors connected in the LAN from the list.

Example: See [Example](#) "Detecting and assigning a power sensor" on page 366.

Usage: Event

Manual operation: See ["Clear"](#) on page 171

:SLISt:CLEar:USB

Removes all R&S NRP power sensors connected over USB from the list.

Example: See [Example](#) "Detecting and assigning a power sensor" on page 366.

Usage: Event

Manual operation: See ["Clear"](#) on page 171

:SLISt:CLEAr[:ALL]

Removes all R&S NRP power sensors from the list.

Example: See [Example"Detecting and assigning a power sensor"](#) on page 366.

Usage: Event

Manual operation: See ["Clear"](#) on page 171

:SLISt:ELEMent<ch>:MAPPING <Mapping>

Assigns an entry from the `:SLISt[:LIST]?` to one of the four sensor channels.

Parameters:

<Mapping> SENS1 | SENSor1 | SENS2 | SENSor2 | SENS3 | SENSor3 |
SENS4 | SENSor4 | UNMapped
Sensor channel.
*RST: UNMapped

Example: See [Example"Detecting and assigning a power sensor"](#) on page 366.

Manual operation: See ["Sensor Mapping List"](#) on page 170

:SLISt:SENSor:MAP <SensorId>, <Mapping>

Assigns a sensor directly to one of the sensor channels, using the sensor name and serial number.

To find out the the sensor name and ID, you can get it from the label of the R&S NRP, or using the command `:SLISt:SCAN[:STATe]`. This command detects all R&S NRP power sensors connected in the LAN or via 'USBTMC protocol.

Setting parameters:

<SensorId> string
<Mapping> enum

Example: See [Example"Detecting and assigning a power sensor"](#) on page 366.

Usage: Setting only

Manual operation: See ["Sensor Mapping List"](#) on page 170

:INITiate<hw>[:POWER]:CONTinuous <Continuous>

Switches the local state of the continuous power measurement by R&S NRP power sensors on and off. Switching off local state enhances the measurement performance during remote control.

The remote measurement is triggered with `:READ<ch>[:POWER]?`. This command also returns the measurement results. The local state is not affected, measurement results can be retrieved with local state on or off.

Parameters:

<Continuous> 0 | 1 | OFF | ON
 *RST: 0

Example:

`:INIT1:CONT ON`
 Switches local state of continuous power measurement on.

Manual operation: See "State" on page 176

:READ<ch>[:POWER]?

Triggers power measurement and displays the results.

Note: This command does not affect the local state, i.e. you can get results with local state on or off. For long measurement times, we recommend that you use an SRQ for command synchronization (MAV bit).

Suffix:

<ch> 1 to 3

Return values:

<Power> float or float,float

The sensor returns the result in the unit set with command `:SENSe<ch>:UNIT[:POWER]`

Certain power sensors, such as the R&S NRP-Z81, return two values, first the value of the average level and - separated by a comma - the peak value.

Example:

`:SENS1:UNIT DBM`
 Selects unit dBm for presentation of measurement result.
`:READ1?`
 Queries the measurement result of the sensor.
`-45.6246576745440230`
 -45.6 dBm were measured at the given frequency.

Example:

R&S NRP-Z81
`:READ1?`
`-55.62403263352178,-22.419472478812476`
 -55.6 dBm is the measured average level, -22.4 dBm is the measured peak level at the given frequency.

Usage:

Query only

Manual operation: See "Level (Peak) / Level (Average)" on page 176

:SENSe<ch>:UNIT[:POWER] <Power>

Selects the unit (Watt, dBm or dBμV) of measurement result display, queried with `:READ<ch>[:POWER]?`.

Parameters:

<Power> DBM | DBUV | WATT
 *RST: DBM

Example:

```
:SENS2:UNIT DBM
Selects dBm as unit for the measured value returned by command READ.
:READ2?
Response: 7.34
7.34 dBm are measured by sensor 2.
```

Manual operation: See ["Level \(Peak\) / Level \(Average\)"](#) on page 176

:SENSe<ch>[:POWER]:APERTure:DEFault:STATe <UseDefAp>

Deactivates the default aperture time of the respective sensor.

To specify a user-defined value, use the command [:SENSe<ch>\[:POWER\]:APERTure:TIME](#) on page 372.

Parameters:

<UseDefAp> 0 | 1 | OFF | ON
 *RST: 1

Example: See [Example"Performing a power measurement with a fixed filter"](#) on page 367.

Manual operation: See ["Default Aperture Time"](#) on page 179

:SENSe<ch>[:POWER]:APERTure:TIME <ApTime>

Defines the aperture time (size of the acquisition interval) for the corresponding sensor.

Parameters:

<ApTime> float
 Range: depends on connected power sensor
 Increment: 1E-9
 *RST: depends on connected power sensor

Example: See [Example"Performing a power measurement with a fixed filter"](#) on page 367.

Manual operation: See ["Aperture Time"](#) on page 179

:SENSe<ch>[:POWER]:CORRection:SPDevice:SELEct <Select>

Several S-parameter tables can be stored in a sensor. The command selects a loaded data set for S-parameter correction for the corresponding sensor.

Parameters:

<Select> float
 *RST: 0

Manual operation: See ["S-Parameter"](#) on page 179

:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe <State>

Activates the use of the S-parameter correction data.

Note: If you use power sensors with attenuator, the instrument automatically activates the use of S-parameter data.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: :SENSe1:POWer:CORRection:SPDevice:STATe 1
 Activates the use of the S-parameters correction data.

Manual operation: See ["S-Parameter"](#) on page 179

:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?

Queries the list of the S-parameter data sets that have been loaded to the power sensor.

Return values:

<List> string list
 *RST: 0

Usage: Query only

Manual operation: See ["S-Parameter"](#) on page 179

:SENSe<ch>[:POWer]:DISPlay:PERMANent:STATe <State>

Activates the permanent display of the measured power level results. The instrument also indicates the sensor type, the connection, the measurement source and the offset if set.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: :SENSe1:POWer:DISPlay:PERMANent:STATe ON
 Turns on the permanent view.

Manual operation: See ["Permanent"](#) on page 177

:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?

Queries the current filter length in filter mode AUTO ([:SENSe<ch>\[:POWer\]:FILTer:TYPE](#))

Return values:

<Auto> float
Range: 1 to 65536

Example:

```
:SENS1:FILT:TYPE AUTO
Selects auto filter.
:SENS1:FILT:LENG:AUTO?
Queries the automatically set filter length.
Response: 1024
```

Usage: Query only

Manual operation: See ["Filter Length"](#) on page 178

:SENSe<ch>[:POWer]:FILTer:LENGth[:USER] <User>

Selects the filter length for [SENS:POW:FILT:TYPE USER](#). As the filter length works as a multiplier for the time window, a constant filter length results in a constant measurement time (see also ["About the measuring principle, averaging filter, filter length, and achieving stable results"](#) on page 172).

The R&S NRP power sensors provide different resolutions for setting the filter length, depending on the used sensor type:

- Resolution = 1 for R&S NRPxx power sensors
- Resolution = 2^n for sensors of the R&S NRP-Zxx family, with $n = 1$ to 16

Parameters:

<User> float
Range: 1 to 65536
*RST: 1

Example:

```
:SENS1:FILT:TYPE USER
Selects user filter mode.
:SENS1:FILT:LENG 16
Sets a filter length of 16. E.g. using a sensor with 20 ms time
window, the resulting measurement time is 640 ms (2x16x20
ms)
```

Manual operation: See ["Filter Length"](#) on page 178

:SENSe<ch>[:POWer]:FILTer:NSRatio <NSRatio>

Sets an upper limit for the relative noise content in fixed noise filter mode ([:SENSe<ch>\[:POWer\]:FILTer:TYPE](#)). This value determines the proportion of intrinsic noise in the measurement results.

Parameters:

<NSRatio> float
Range: 0.001 to 1
Increment: 0.001
*RST: 0.01

Example: See [Example "Performing a power measurement with a fixed filter"](#) on page 367.

Manual operation: See ["Noise/Signal Ratio"](#) on page 178

:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME <MTime>

Sets an upper limit for the settling time of the auto-averaging filter in the `NSRatio` mode and thus limits the length of the filter. The filter type is set with command `:SENSe<ch>[:POWer]:FILTer:TYPE`.

Parameters:

<MTime>	float
Range:	1 to 999.99
Increment:	0.01
*RST:	4

Example: See [Example "Performing a power measurement with a fixed filter"](#) on page 367.

Manual operation: See ["Timeout"](#) on page 179

:SENSe<ch>[:POWer]:FILTer:SONCe

Starts searching the optimum filter length for the current measurement conditions. You can check the result with command `:SENS1:POW:FILT:LENG:USER?` in filter mode `USER` (`:SENSe<ch>[:POWer]:FILTer:TYPE`).

Example:

```
SENS1:FILT:TYPE USER
Selects user filter mode.
:SENS1:FILT:SONC
Activates the search for the optimum filter length.
:SENS1:FILT:LENG?
Returns the found optimum filter length.
Response: 128
```

Usage: Event

Manual operation: See ["Auto Once"](#) on page 178

:SENSe<ch>[:POWer]:FILTer:TYPE <Type>

Selects the filter mode. The filter length is the multiplier for the time window and thus directly affects the measurement time.

Parameters:

<Type>	AUTO USER NSRatio
--------	-----------------------

AUTO
Automatically selects the filter length, depending on the measured value. The higher the power, the shorter the filter length, and vice versa.

USER

Allows you to set the filter length manually. As the filter-length takes effect as a multiplier of the measurement time, you can achieve constant measurement times.

NSRatio

Selects the filter length (averaging factor) according to the criterion that the intrinsic noise of the sensor (2 standard deviations) does not exceed the specified noise content. You can define the noise content with command `:SENSe<ch>[:POWer]:FILTer:NSRatio`.

Note: To avoid long settling times when the power is low, you can limit the averaging factor limited with the "timeout" parameter (`:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME`).

*RST: AUTO

Example: See [Example "Performing a power measurement with a fixed filter"](#) on page 367.

Manual operation: See ["Filter"](#) on page 178

:SENSe<ch>[:POWer]:FREQuency <Frequency>

Sets the RF frequency of the signal, if signal source "USER" is selected (`:SENSe<ch>[:POWer]:SOURce`).

Parameters:

<Frequency> float
*RST: 1 GHz

Example: `:SENS1:SOUR USER`
Selects user-defined source.
`:SENS1:FREQ 2.44GHz`
Sets the RF frequency of the source which is 2.44 GHz.

Manual operation: See ["Frequency"](#) on page 177

:SENSe<ch>[:POWer]:LOGGing:STATe <State>

Activates the recording of the power values, measured by a connected R&S NRP power sensor.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: `:SENS:LOGG:STAT ON`
Activates recording of the power measurement of the first sensor.

Manual operation: See ["Enable Logging"](#) on page 179

:SENSe<ch>[:POWer]:OFFSet <Offset>

Sets a level offset which is added to the measured level value after activation with command `:SENSe<ch>[:POWer]:OFFSet:STATe`. The level offset allows, e.g. to consider an attenuator in the signal path.

Parameters:

<Offset> float
 Range: -100.0 to 100.0
 *RST: 0
 Default unit: dB

Example: `:SENS1:POW:OFFS 10.0`
 Sets a level offset of 10 dB

Manual operation: See "[Level Offset State, Level Offset](#)" on page 177

:SENSe<ch>[:POWer]:OFFSet:STATe <State>

Activates the addition of the level offset to the measured value. The level offset value is set with command `:SENSe<ch>[:POWer]:OFFSet`.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: `:SENS1:POW:OFFS 0.4dB`
 Sets a level offset of 0.4 dB
`:SENS1:POW:OFFS:STAT ON`
 A level offset of 0.4 dB is added to the measured value.

Manual operation: See "[Level Offset State, Level Offset](#)" on page 177

:SENSe<ch>[:POWer]:SNUMber?

Queries the serial number of the sensor.

Return values:

<SNumber> string

Example: `:SENS1:SNUM?`
 Queries the serial number.

Usage: Query only

Manual operation: See "[Sensor type and serial number](#)" on page 176

:SENSe<ch>[:POWer]:SOURce <Source>

Determines the signal to be measured.

Note: When measuring the RF signal, the sensor considers the corresponding correction factor at that frequency, and uses the level setting of the instrument as reference level.

Parameters:

<Source> A | USER | RF
 *RST: A

Example: See [Example "Performing a power measurement with a fixed filter"](#) on page 367.

Manual operation: See ["Use Frequency Of"](#) on page 177

:SENSe<ch>[:POWer]:STATus[:DEVice]?

Queries if a sensor is connected to the instrument.

Return values:

<Status> 0 | 1 | OFF | ON
 *RST: 0

Example: :SENS1:STAT?
 Response: 1
 A sensor is connected.

Usage: Query only

Manual operation: See ["State"](#) on page 176

:SENSe<ch>[:POWer]:TYPE?

Queries the sensor type. The type is automatically detected.

Return values:

<Type> string

Example: :SENS1:TYPE?
 Queries the type of sensor.
 Response: NRP-Z21
 The R&S NRP-Z21 sensor is used.

Usage: Query only

Manual operation: See ["Sensor type and serial number"](#) on page 176

:SENSe<ch>[:POWer]:ZERO

Performs zeroing of the sensor.

Zeroing is required after warm-up, i.e. after connecting the sensor.

Note: Switch off or disconnect the RF power source from the sensor before zeroing.

We recommend that you zero in regular intervals (at least once a day), if:

- The temperature has varied more than about 5 °C.

- The sensor has been replaced.
- You want to measure very low power.

Example: :SENS1:ZERO
Executes zeroing.

Usage: Event

Manual operation: See "[Zero](#)" on page 176

12.14 SOURce Subsystem

The SOURce subsystem contains the commands for configuring digital and analog signals.

Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
SOURce<hw>	[1]	<ul style="list-style-type: none"> • SOURce[1] = RF output (optional keyword) • LF output = SOURce:LFOutput (SOURce is optional keyword)

• Analog Modulation Subsystems	379
• SOURce:CORRection Subsystem	413
• SOURce:FREQuency Subsystem	421
• SOURce:INPut Subsystem	427
• SOURce:LFOutput Subsystem	428
• SOURce:LIST Subsystem	441
• SOURce:NOISe Subsystem	454
• SOURce:PGEN Subsystem	456
• SOURce:PHASe Subsystem	458
• SOURce:POWer Subsystem	458
• SOURce:ROSCillator Subsystem	467
• SOURce:SWEep Subsystem	472

12.14.1 Analog Modulation Subsystems

Option: see [Chapter 5.1, "Required Options"](#), on page 68.

The subsystems in this section describe all commands for analog modulation of the RF signal. Divided in separate sections, you can configure amplitude modulation (AM), frequency modulation (FM) , phase modulation (PhiM) and pulse modulation (PULM).

You can perform each of the modulations either with an internally generated modulation signal or with an externally applied signal.

To configure the internal signal, use the commands listed in [Chapter 12.14.5, "SOURce:LFOutput Subsystem"](#), on page 428.

For more information:

See [Chapter 5, "Analog Modulations"](#), on page 68.

12.14.1.1 SOURce:MODulation Subsystem

The command in this subsystem allows you to disable all active modulations at once, and, vice versa, to restore the last active ones.

[[:SOURce<hw>]:MODulation[:ALL][:STATe] <State>

Activates all modulations that were active before the last switching off.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

```
SOURce1:AM1:DEPT h 30
SOURce1:AM1:SOURce LF1
SOURce1:AM1:STATe 1
SOURce1:FM1:DEVIation 1000
SOURce1:FM1:STATe 1
// disable both modulation
SOURce1:MODulation:ALL:STATe 0
SOURce1:AM1:STATe?
// 0
SOURce1:FM1:STATe?
// 0
// enable both modulation
SOURce1:MODulation:ALL:STATe 1
SOURce1:AM1:STATe?
// 1
SOURce1:FM1:STATe?
// 1
```

Manual operation: See "[\[Mod on/off\]](#)" on page 70

12.14.1.2 SOURce:AM Subsystem

Option: R&S SMBB-K720

The AM subsystem contains the commands for setting the amplitude modulation and also the broadband amplitude modulation.

The following examples show some variants for generating AM signals.

Example: Creating an amplitude modulated RF signal

Using the internal LF generator, the following command sequence configures an amplitude modulated signal.


```
// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURcel:FREQuency:CW 6000000000
SOURcel:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the modulation signal
SOURcel:LFOutput1:SHAPE SINE
SOURcel:LFOutput1:FREQuency 20000

// Configure the amplitude modulation settings and switch AM on
SOURcel:AM1:SOURce LF1
SOURcel:AM1:DEPTh 30
SOURcel:AM:RATio 40
SOURcel:AM1:DEVIation:MODE UNC
SOURcel:AM1:STATe 1
```

Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure an amplitude modulated signal with determined deviations depths.

```
// Configure the AM modulation settings with combined LF signal sources
SOURcel:AM1:SOURce LF1
SOURcel:AM1:DEPTh 32
// Select the modulation signal source for the second path
SOURcel:AM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURcel:AM1:DEVIation:MODE TOT
SOURcel:AM1:DEPTh:SUM 60

// Query the deviation depth of modulation signal in the second path
SOURcel:AM2:DEPTh?
// Response: 28

// Combine the signals of both paths with fixed ratio
SOURcel:AM1:DEVIation:MODE RAT
SOURcel:AM1:RATio 100
SOURcel:AM2:DEPTh 25

// Query the deviation depth of modulation signal in the first path
SOURcel:AM1:DEPTh?
// Response: 25

SOURcel:AM1:STATe 1
SOURcel:AM2:STATe 1
```

Example: Using an external signal source

Using an external signal source, you can additionally determine whether you want to use only the AC component of the external modulation signal.

```
// Reset the instrument to start from a defined state
*RST

// Set frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the amplitude modulation settings and turn on AM
SOURce1:AM1:SOURce EXT1
SOURce1:AM1:DEPTh 40

// Query the input sensitivity at the external modulation input
SOURce1:AM1:SENSitivity?
// Response: 40
// Since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 50%/V.
// This value is assigned to the voltage value for full
// modulation of the input.

// Select the coupling mode AC for external amplitude modulation
SOURce1:INPut:MODext:COUPling1 AC

// For external AM signal input, adjust the sensitivity
SOURce1:AM1:SOURce EXT1
SOURce1:AM1:SENSitivity 25
SOURce1:AM1:SENSitivity?
Response: 25

// Switch on AM and RF signal output
SOURce1:AM1:STATe 1
OUTPut1:STATe 1
```

The following commands are available:

[SOURce<hw>]:AM<ch>:STATe	382
[SOURce<hw>]:AM<ch>:SOURce	383
[SOURce<hw>]:AM<ch>[:DEPTh]	383
[SOURce<hw>]:AM:DEPTh:SUM	384
[SOURce<hw>]:AM:DEViation:MODE	384
[SOURce<hw>]:AM:RATio	384
[SOURce<hw>]:AM<ch>:SENSitivity	385

[SOURce<hw>]:AM<ch>:STATe <State>

Activates amplitude modulation.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: See [Example"Creating an amplitude modulated RF signal"](#) on page 380.

Manual operation: See ["State"](#) on page 73

[:SOURce<hw>]:AM<ch>:SOURce <Source>

Selects the modulation source for amplitude modulation.

Parameters:

<Source> EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal

LF1|LF2

Uses an internally generated LF signal.

EXT1

Uses an externally supplied LF signal.

NOISe

Uses the internally generated noise signal.

INTernal

Uses the internally generated signal of LF1.

EXTernal

Uses an external LF signal (EXT1).

Example: See [Example"Creating an amplitude modulated RF signal"](#) on page 380.

Manual operation: See ["Source"](#) on page 73

[:SOURce<hw>]:AM<ch>[:DEPT h] <Depth>

Sets the depth of the amplitude modulation in percent.

Suffix:

<ch> 1..2
 Modulation signal channel

Parameters:

<Depth> float
 Range: 0 to 100

Example: See [Example"Creating an amplitude modulated RF signal"](#) on page 380.

Manual operation: See ["Depth"](#) on page 76

[:SOURce<hw>]:AM:DEPT h:SUM <AmDepthSum>

Sets the total depth of the LF signal when using combined signal sources in amplitude modulation.

Parameters:

<AmDepthSum> float
 Range: 0 to 100
 Increment: 0.1
 *RST: 30

Example: See [Example"Using combined LF signals"](#) on page 381.

Manual operation: See [" Total Depth"](#) on page 77

[:SOURce<hw>]:AM:DEVIation:MODE <AmDevMode>

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total depth.

Parameters:

<AmDevMode> UNCOupled | TOTal | RATio

UNCOupled

Does not couple the LF signals.

The deviation depth values of both paths are independent.

TOTal

Couples the deviation depth of both paths.

RATio

Couples the deviation depth ratio of both paths

*RST: UNCOupled

Example: See [Example"Using combined LF signals"](#) on page 381.

Manual operation: See [" Deviation Mode"](#) on page 77

[:SOURce<hw>]:AM:RATio <Ratio>

Sets the deviation ratio (path#2 to path#1) in percent.

Parameters:

<Ratio> float
 Range: 0 to 100
 Increment: 0.1
 *RST: 100

Example: See [Example"Creating an amplitude modulated RF signal"](#) on page 380.

Manual operation: See [" Ratio Path2/Path1"](#) on page 77

[:SOURce<hw>]:AM<ch>:SENSitivity <Sensitivity>

Sets the sensitivity of the external signal source for amplitude modulation in %/V.

Parameters:

<Sensitivity>	float
Range:	0 to 100
Increment:	0.1
*RST:	30

Example: See [Example "Using an external signal source"](#) on page 382.

Manual operation: See ["Sensitivity"](#) on page 77

12.14.1.3 SOURce:FM Subsystem

Option: R&S SMBB-K720

The FM subsystem contains the commands for setting the frequency modulation.

Example: Creating a frequency modulated RF signal

Using the internal LF generator, the following command sequence configures a frequency modulated signal.

```
// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the modulation signal
SOURce1:LFOutput1:SHAPE SINE
SOURce1:LFOutput1:FREQuency 20000

// Configure the frequency modulation settings and switch FM on
SOURce1:FM1:SOURce LF1
SOURce1:FM1:DEVIation 1000
SOURce1:FM:RATio 40
SOURce1:FM:MODE LNOise
SOURce1:FM1:STATe 1

// Switch on LF and RF signal output
SOURce1:LFOutput1:STATe 1
OUTPut1:STATe 1
```

Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure a frequency modulated signal with determined deviations.

```
// Configure the FM modulation settings with combined LF signal sources
SOURcel:FM1:SOURce LF1
SOURcel:FM1:DEVIation 1000
// Select the modulation signal source for the second path
SOURcel:FM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURcel:FM1:DEVIation:MODE TOT
SOURcel:FM1:DEVIation:SUM 5000

// Query the deviation depth of modulation signal in the second path
SOURcel:FM2:DEVIation?
// Response: 4000

// Combine the signals of both paths with fixed ratio
SOURcel:FM1:DEVIation:MODE RAT
SOURcel:FM1:RATio 100
SOURcel:FM2:DEVIation 10000

// Query the deviation depth of modulation signal in the first path
SOURcel:FM1:DEVIation?
// Response: 1000

SOURcel:FM1:STATe 1
SOURcel:FM2:STATe 1
```

Example: Using an external signal source

Alternatively configure the frequency modulation settings with an external modulation signal.

```
// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURcel:FREQuency:CW 6000000000
SOURcel:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the frequency modulation settings and switch FM on
SOURcel:FM1:SOURce EXT1
SOURcel:FM1:DEVIation 5000

// Query the input sensitivity at the external modulation input
:SOURcel:FM1:SENSitivity?
// Response: 1000
// since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 5000 Hz/V.

// Switch on FM and RF signal output
SOURcel:FM1:STATe 1
OUTPut1:STATe 1
```

The following commands are available:

[:SOURce<hw>]:FM<ch>:STATe	387
[:SOURce<hw>]:FM<ch>[:DEViation]	387
[:SOURce<hw>]:FM<ch>:SOURce	387
[:SOURce<hw>]:FM:DEViation:MODE	388
[:SOURce<hw>]:FM:DEViation:SUM	388
[:SOURce<hw>]:FM:RATio	389
[:SOURce<hw>]:FM:MODE	389
[:SOURce<hw>]:FM:SENSitivity?	389

[\[:SOURce<hw>\]:FM<ch>:STATe](#) <State>

Activates frequency modulation.

Suffix:

FM<ch> 1..2
determines the modulation signal channel.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: See [Example"Creating a frequency modulated RF signal"](#)
on page 385.

Manual operation: See ["State"](#) on page 73

[\[:SOURce<hw>\]:FM<ch>\[:DEViation\]](#) <Deviation>

Sets the modulation deviation of the frequency modulation in Hz.

Suffix:

FM<ch> 1|2
Modulation signal channel

Parameters:

<Deviation> float
The maximum deviation depends on the RF frequency and the
selected modulation mode (see data sheet).
Range: 0 to max
Increment: 0.01
*RST: 1E3

Example: See [Example"Creating a frequency modulated RF signal"](#)
on page 385.

Manual operation: See [" Deviation"](#) on page 74

[\[:SOURce<hw>\]:FM<ch>:SOURce](#) <Source>

Selects the modulation source for frequency modulation.

Suffix:

FM<ch> 1|2
Modulation signal channel.

Parameters:

<Source> EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal
LF1|LF2
Uses an internally generated LF signal.
INTernal
Uses the internally generated signal of LF1.
EXTernal
Uses an external LF signal (EXT1).
NOISe
Uses the internally generated noise signal.
*RST: LF1 <FM1>; LF2 <FM2>

Example: See [Example"Creating a frequency modulated RF signal"](#) on page 385.

Manual operation: See ["Source"](#) on page 73

[:SOURce<hw>]:FM:DEViation:MODE <FmDevMode>

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total deviation.

Parameters:

<FmDevMode> UNCoupled | TOTal | RATio
UNCoupled
Does not couple the LF signals.
The deviation values of both paths are independent.
TOTal
Couples the deviation of both paths.
RATio
Couples the deviation ratio of both paths
*RST: UNCoupled

Example: See [Example"Using combined LF signals"](#) on page 385.

Manual operation: See [" Deviation Mode"](#) on page 74

[:SOURce<hw>]:FM:DEViation:SUM <FmDevSum>

Sets the total deviation of the LF signal when using combined signal sources in frequency modulation.

Parameters:

<FmDevSum> float
 Range: 0 to 40E6
 Increment: 0.01
 *RST: 1E3

Example: See [Example"Using combined LF signals"](#) on page 385.

Manual operation: See [" Total Deviation"](#) on page 74

[[:SOURce<hw>]:FM:RATio <Ratio>

Sets the deviation ratio (path2 to path1) in percent.

Parameters:

<Ratio> float
 Range: 0 to 100
 Increment: 0.1
 *RST: 100

Example: See [Example"Creating a frequency modulated RF signal"](#) on page 385.

Manual operation: See [" Ratio Path2/Path1"](#) on page 74

[[:SOURce<hw>]:FM:MODE <Mode>

Selects the mode for the frequency modulation.

Parameters:

<Mode> HBANdwidth | LNOise

HBANdwidth

Selects maximum range for modulation bandwidth.

LNOise

Selects optimized phase noise and spurious characteristics with reduced modulation bandwidth and FM deviation.

*RST: HBANdwidth

Example: See [Example"Creating a frequency modulated RF signal"](#) on page 385.

Manual operation: See ["Mode"](#) on page 75

[[:SOURce<hw>]:FM:SENSitivity?

Queries the sensitivity of the externally supplied signal for frequency modulation. The sensitivity depends on the set modulation deviation.

Return values:

<Sensitivity>

float

Sensitivity in Hz/V.

It is assigned to the voltage value for full modulation of the input.

Range: 0 to max

Increment: 0.01

Example:See [Example "Using an external signal source"](#) on page 386.**Usage:**

Query only

12.14.1.4 SOURce:PM Subsystem

Option: R&S SMBB-K720

The PM subsystem contains the commands for setting the phase modulation. You can configure the internal modulation source (LF generator) with the commands listed in [Chapter 12.14.5, "SOURce:LFOutput Subsystem"](#), on page 428 .

Example: Performing phase modulation

The following example shows a command sequence to perform phase modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the phase modulation settings
SOURcel:LFOutput1:SHAPE SINE
SOURcel:LFOutput1:FREQuency 1000

// Select the LF signal generated by the internal modulation generator
// or the internally generated noise signal
SOURcel:PM1:DEVIation 1
SOURcel:PM1:SOURce LF1
// SOURcel:PM1:SOURce INTERNAL
// SOURcel:PM1:SOURce NOISE
SOURcel:PM1:RATio 40
SOURcel:PM1:MODE HBAN

// Alternatively configure the phase modulation settings for an
// external modulation source and query the input sensitivity.
SOURcel:PM1:SOURce EXT1
// SOURcel:PM1:SOURce EXTERNAL
SOURcel:PM1:DEVIation 1
SOURcel:PM1:SENSitivity?
// Response: 1
// since the voltage value for full modulation is 1V,
```

```
// the resulting sensitivity is precisely 1RAD/V.
```

```
// Activate the signal output
```

```
SOURce1:PM1:STATe 1
```

```
OUTPut1:STATe 1
```

Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure an phase modulated signal with determined deviations.

```
// Configure the Phase modulation settings with combined LF signal sources
```

```
SOURce1:PM1:SOURce LF1
```

```
SOURce1:PM1:DEVIation 1.5
```

```
// Select the modulation signal source for the second path
```

```
SOURce1:PM2:SOURce LF2
```

```
// Combine the signals of both paths with fixed total deviation depth
```

```
SOURce1:PM1:DEVIation:MODE TOT
```

```
SOURce1:PM1:DEVIation:SUM 2
```

```
// Query the deviation depth of the modulation signal in the second path
```

```
SOURce1:PM2:DEVIation?
```

```
// Response: 0.5
```

```
// Combine the signals of both paths with fixed ratio
```

```
SOURce1:PM1:DEVIation:MODE RAT
```

```
SOURce1:PM1:RATio 80
```

```
SOURce1:PM2:DEVIation?
```

```
// Response: 1.2
```

```
// Query the deviation depth of modulation signal in the first path
```

```
SOURce1:PM1:DEVIation?
```

```
// Response: 1.5
```

```
SOURce1:FM1:STATe 1
```

```
SOURce1:FM2:STATe 1
```

The following commands are available:

[SOURce<hw>]:PM<ch>:STATe.....	391
[SOURce<hw>]:PM<ch>:SOURce.....	392
[SOURce<hw>]:PM:MODE.....	392
[SOURce<hw>]:PM:DEVIation:MODE.....	393
[SOURce<hw>]:PM:DEVIation:SUM.....	393
[SOURce<hw>]:PM:RATio.....	393
[SOURce<hw>]:PM:SENSitivity?.....	394
[SOURce]:PM<ch>:[DEVIation].....	394

[SOURce<hw>]:PM<ch>:STATe <State>

Activates phase modulation.

Activation of phase modulation deactivates frequency modulation.

Suffix:

PM<ch> 1|2
Sets the modulation signal channel.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: See [Example "Performing phase modulation"](#) on page 390.

Manual operation: See ["State"](#) on page 73

[:SOURce<hw>]:PM<ch>:SOURce <Source>

Selects the modulation source for phase modulation signal.

Suffix:

PM<ch> 1|2
Sets the modulation signal channel.

Parameters:

<Source> EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal
LF1|LF2
Uses an internally generated LF signal.
EXT1
Uses an externally supplied LF signal.
NOISe
Uses the internally generated noise signal.
INTernal
Uses the internally generated signal of LF1.
EXTernal
Uses an external LF signal (EXT1).

Example: See [Example "Performing phase modulation"](#) on page 390.

Manual operation: See ["Source"](#) on page 73

[:SOURce<hw>]:PM:MODE <Mode>

Selects the mode for the phase modulation.

Parameters:

<Mode> HBANdwidth | HDEViation | LNOise
HBANdwidth
Sets the maximum available bandwidth.
HDEViation
Sets the maximum range for Φ M deviation.

LNOise

Selects a phase modulation mode with phase noise and spurious characteristics close to CW mode.

*RST: HBANdwidth

Example: See [Example"Performing phase modulation"](#) on page 390.

Manual operation: See ["Mode"](#) on page 76

[SOURce<hw>]:PM:DEVIation:MODE <PmDevMode>

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total deviation.

Parameters:

<PmDevMode> UNCOupled | TOTal | RATio

UNCOupled

Does not couple the LF signals.

The deviation values of both paths are independent.

TOTal

Couples the deviation of both paths.

RATio

Couples the deviation ratio of both paths

*RST: UNCOupled

Example: See [Example"Using combined LF signals"](#) on page 391

Manual operation: See [" Deviation Mode"](#) on page 75

[SOURce<hw>]:PM:DEVIation:SUM <PmDevSum>

Sets the total deviation of the LF signal when using combined signal sources in phase modulation.

Parameters:

<PmDevSum> float
Range: 0 to 20
Increment: 1E-6
*RST: 1

Example: See [Example"Using combined LF signals"](#) on page 391

Manual operation: See [" Total Deviation"](#) on page 76

[SOURce<hw>]:PM:RATio <Ratio>

Sets the deviation ratio (path2 to path1) in percent.

Parameters:

<Ratio> float
 Range: 0 to 100
 Increment: 0.01
 *RST: 100

Example: See [Example"Performing phase modulation"](#) on page 390.

Manual operation: See "[Ratio Path2/Path1](#)" on page 76

[[:SOURce<hw>]:PM:SENSitivity?

Queries the sensitivity of the externally applied signal for phase modulation.

The returned value reports the sensitivity in RAD/V. It is assigned to the voltage value for full modulation of the input.

Return values:

<Sensitivity> float

Example: See [Example"Performing phase modulation"](#) on page 390.

Usage: Query only

[[:SOURce]:PM<ch>[:DEViation] <Deviation>

Sets the modulation deviation of the phase modulation in RAD.

Parameters:

<Deviation> float
 The maximal deviation depends on the RF frequency and the selected modulation mode (see data sheet).
 Range: 0 to max
 Increment: 1
 *RST: 1
 Default unit: RAD

Example: See [Example"Performing phase modulation"](#) on page 390.

Manual operation: See "[Deviation](#)" on page 75

12.14.1.5 SOURce:PULM Subsystem

Option: see [Chapter 5.1, "Required Options"](#), on page 68.

The PULM subsystem contains the commands for setting the pulse modulation.

- [Pulse Modulation Settings](#).....395
- [Pulse Train Settings](#).....400
- [Pulse Train Data Exchange](#)..... 403

Pulse Modulation Settings

With the commands described in this section, you can configure the settings for pulse modulation, select the trigger mode and determine delay times for the pulse modulation signal.

Example: Perform pulse modulation

The example shows a command sequence to perform pulse modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the pulse modulation settings
// Select the internal modulation generator,
// set trigger mode, select pulse mode, transition type

// Trigger a single pulse

SOURce:PULM:SOURce INT
SOURce:PULM:TRIGger:MODE SING
SOURce:PULM:MODE DOUB
SOURce:PULM:TTYPe SMO

SOURce:PULM:TRIG:IMM

// Alternatively configure the pulse modulation settings for
// external modulation source
// Select the source, set the polarity of the external signal,
// select the impedance for the external pulse modulation input/
// for the external pulse modulation trigger input
SOURce:PULM:SOURce EXT
SOURce:PULM:POLarity NORMal
SOURce:PULM:IMPedance G1K

// Configure the pulse generator settings
// Set pulse period, width, and delay
SOURce:PULM:PERiod 10 us
SOURce:PULM:WIDth 8 us
SOURce:PULM:DOUBle:WIDTh 0.0000012
SOURce:PULM:DOUBle:DELay 0.0000045

// Route the signal to the signal valid output connector
// to use the signal for synchronizing the pulse modulation.
:SOURce:PULM:OUTPut:SYNC ON

// Activate the signal output
SOURce:PGENERator:OUTPut:STATe 1
SOURce:PULM:STATe 1
OUTPut1:STATe 1
```

The following commands are available:

[:SOURce<hw>]:PULM:MODE	396
[:SOURce<hw>]:PULM:TRIGger:MODE	396
[:SOURce]:PULM[:INTernal][:TRain]:TRIGger:IMMediate	397
[:SOURce<hw>]:PULM:PERiod	397
[:SOURce<hw>]:PULM:WIDTh	397
[:SOURce<hw>]:PULM:DELay	397
[:SOURce<hw>]:PULM:DOUBle:DELay	398
[:SOURce<hw>]:PULM:DOUBle:WIDTh	398
[:SOURce<hw>]:PULM:DOUBle:STATe	398
[:SOURce<hw>]:PULM:STATe	398
[:SOURce<hw>]:PULM:SOURce	398
[:SOURce<hw>]:PULM:TYPe	399
[:SOURce<hw>]:PULM:OUTPut:SYNC[:STATe]	399
[:SOURce<hw>]:PULM:POLarity	399
[:SOURce<hw>]:PULM:IMPedance	400

[\[:SOURce<hw>\]:PULM:MODE](#) <Mode>

Selects the mode for the pulse modulation.

Parameters:

<Mode>	SINGle DOUBle PTRain
SINGle	Generates a single pulse.
DOUBle	Generates two pulses within one pulse period.
PTRain	Generates a user-defined pulse train. Specify the pulse sequence with the commands: [:SOURce<hw>]:PULM:TRain:ONTime [:SOURce<hw>]:PULM:TRain:OFFTime [:SOURce<hw>]:PULM:TRain:REPetition *RST: SINGle

Example: See [Example "Perform pulse modulation"](#) on page 395.

Options: PTRain requires R&S SMBB-K27

Manual operation: See ["Pulse Mode"](#) on page 87

[\[:SOURce<hw>\]:PULM:TRIGger:MODE](#) <Mode>

Selects a trigger mode - auto, single, external, external single or external gated - for generating the modulation signal.

Parameters:

<Mode>	AUTO EXTeRnal EGATe SINGle ESINgle
*RST:	AUTO

Example: See [Example "Perform pulse modulation"](#) on page 395.

Manual operation: See ["Trigger Mode"](#) on page 88

[[:SOURce]:PULM[:INTERNAL][:TRAIN]:TRIGger:IMMediate

If `[[:SOURce<hw>]:PULM:TRIGger:MODESINGLE`, triggers the pulse generator.

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Execute Single Trigger"](#) on page 90

[[:SOURce<hw>]:PULM:PERiod <Period>

Sets the period of the generated pulse, that means the repetition frequency of the internally generated modulation signal.

Parameters:

<Period>	float
	The minimum value depends on the installed options R&S SMBB-K22 or R&S SMBB-K23
Range:	20E-9 to 100
Increment:	5E-9
*RST:	10E-6

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Pulse Period"](#) on page 89

[[:SOURce<hw>]:PULM:WIDTh <Width>

Sets the width of the generated pulse, that means the pulse length. It must be at least 20ns less than the set pulse period.

Parameters:

<Width>	float
Range:	20E-9 to 100
Increment:	10E-9
*RST:	2E-6

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Pulse Width"](#) on page 89

[[:SOURce<hw>]:PULM:DELay <Delay>

Sets the pulse delay.

Parameters:

<Delay>	float
*RST:	1ms

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Pulse Delay"](#) on page 89

[:SOURce<hw>]:PULM:DOUBle:DELay <Delay>

Sets the delay from the start of the first pulse to the start of the second pulse.

Parameters:

<Delay> float
*RST: 1E-6

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Double Pulse Delay"](#) on page 89

[:SOURce<hw>]:PULM:DOUBle:WIDTh <Width>

Sets the width of the second pulse.

Parameters:

<Width> float
Increment: 5E-9

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Double Pulse Width"](#) on page 89

[:SOURce<hw>]:PULM:DOUBle:STATe <State>

Provided for backward compatibility with former Rohde & Schwarz signal generators.

Works like the command [\[:SOURce<hw>\]:PULM:MODEDOUBle](#).

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

[:SOURce<hw>]:PULM:STATe <State>

Activates pulse modulation.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["State"](#) on page 71

[:SOURce<hw>]:PULM:SOURce <Source>

Selects between the internal (pulse generator) or an external pulse signal for the modulation.

Parameters:

<Source> INTernal | EXTernal
 *RST: INTernal

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Source"](#) on page 71

[[:SOURce<hw>]:PULM:TTYPe <Source>

Sets the transition mode for the pulse signal.

Parameters:

<Source> SMOothed | FAST
 SMOothed
 flattens the slew rate, resulting in longer rise/fall times.
 FAST
 enables fast transitions with shortest rise and fall times.
 *RST: FAST

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Transition Type"](#) on page 72

[[:SOURce<hw>]:PULM:OUTPut:SYNC[:STATe] <Sync>

Routes the pulse modulation signal to the [Signal Valid] connector.

Parameters:

<Sync> 0 | 1 | OFF | ON
 *RST: OFF

Options: R&S SMBB-K23 (Pulse Generator)

Manual operation: See ["Pulse Sync Out"](#) on page 90

[[:SOURce<hw>]:PULM:POLarity <Polarity>

Sets the polarity of the externally applied modulation signal.

Parameters:

<Polarity> NORMal | INVerted
 NORMal
 Suppresses the RF signal during the pulse pause.
 INVerted
 Suppresses the RF signal during the pulse.
 *RST: NORMal

Example: See [Example"Perform pulse modulation"](#) on page 395.

Manual operation: See ["Polarity"](#) on page 98

[[:SOURce<hw>]:PULM:IMPedance <Impedance>

Sets the impedance for the external pulse trigger and pulse modulation input.

Parameters:

<Impedance> G50 | G10K
 *RST: G50

Example: See [Example "Perform pulse modulation"](#) on page 395.

Manual operation: See ["Impedance"](#) on page 98

Pulse Train Settings

Option: R&S SMBB-K27

This section describes the commands for the pulse train modulation and the associated file handling. For background information, see [Chapter 5.4.4.2, "Pulse Generator > Pulse Train Settings"](#), on page 90.

Example: Generating a pulse train signal

The following settings are required to perform pulse train modulation.



Always create and select pulse train data list first before you activate the pulse train mode.

Otherwise, an error is displayed

```
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Create a pulse train data list
// Select the directory
MMEM:CDIR '/var/user/'
SOURcel:PULM:TRain:CATalog?
// my_pt
// Create and/or select the pulse train data file
SOURcel:PULM:TRain:SElect "/var/user/pt"
// Enter the pulse train data
SOURce:PULM:TRain:ONTime 0.0001,0.00025,0.0001
SOURce:PULM:TRain:OFFTime 500us,500us,300us
SOURce:PULM:TRain:REPetition 2,0,3
// the second pulse is ignored

// Select pulse train mode
// Select the internal modulation generator and the pulse mode
SOURcel:PULM:SOURce INT
SOURcel:PULM:MODE PTR
```

```

SOURce1:PULM:TRIGger:MODE EXT
SOURce1:PGENerator:OUTPut:STATe 1
SOURce1:PGENerator:OUTPut:POLarity NORM
SOURce:PGENerator:OUTPut:STATe 1
SOURce:PULM:STATe 1
OUTPut1:STATe 1

// SOURce1:PULM:TRAIin:CATalog?
// my_pt, pt
// SOURce1:PULM:TRAIin:DEL "/var/user/my_pt"

```

The following commands are available:

[:SOURce<hw>]:PULM:TRAIin:CATalog?	401
[:SOURce<hw>]:PULM:TRAIin:DELe	401
[:SOURce<hw>]:PULM:TRAIin:ONTime	402
[:SOURce<hw>]:PULM:TRAIin:OFFTime	402
[:SOURce<hw>]:PULM:TRAIin:REPetition:POINts?	402
[:SOURce<hw>]:PULM:TRAIin:ONTime:POINts?	402
[:SOURce<hw>]:PULM:TRAIin:OFFTime:POINts?	402
[:SOURce<hw>]:PULM:TRAIin:REPetition	402
[:SOURce<hw>]:PULM:TRAIin:SELe	403

[\[:SOURce<hw>\]:PULM:TRAIin:CATalog?](#)

Queries the available pulse train files in the specified directory.

Return values:

<Catalog> string
 List of list filenames, separated by commas

Example: See [Example"Generating a pulse train signal"](#) on page 400.

Usage: Query only

Manual operation: See ["Pulse Train Data"](#) on page 92

[\[:SOURce<hw>\]:PULM:TRAIin:DELe](#) <Filename>

Deletes the specified pulse train file.

Setting parameters:

<Filename> string
 Filename or complete file path; file extension is optional.

Example: See [Example"Generating a pulse train signal"](#) on page 400.

Usage: Setting only

Manual operation: See ["Pulse Train Data"](#) on page 92
 See ["Edit Pulse Train Data"](#) on page 92

[:SOURce<hw>]:PULM:TRAI:n:ONTime <OnTime>

[:SOURce<hw>]:PULM:TRAI:n:OFFTime <OffTime>

Enters the pulse on/off times values in the selected list.

Parameters:

<OffTime> Offtime#1{, Offtime#2, ...} | binary block data
 List of comma-separated numeric values or binary block data, where:
 The list of numbers can be of any length.
 In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.
 See :FORMat [:DATA] on page 356 for details.
 The maximum length is 2047 values.
 Range: 0 ns to 5 ms

Example: See [Example"Generating a pulse train signal"](#) on page 400.

Manual operation: See ["Edit Pulse Train Data"](#) on page 92

[:SOURce<hw>]:PULM:TRAI:n:REPetition:POINts?

[:SOURce<hw>]:PULM:TRAI:n:ONTime:POINts?

[:SOURce<hw>]:PULM:TRAI:n:OFFTime:POINts?

Queries the number of on and off time entries and repetitions in the selected list.

Return values:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example"Generating a pulse train signal"](#) on page 400.

Usage: Query only

[:SOURce<hw>]:PULM:TRAI:n:REPetition <Repetition>

Sets the number of repetitions for each pulse on/off time value pair.

Parameters:

<Repetition> Repetition#1{, Repetition#2, ...}
 0 = ignore value pair
 Set "Repetition = 0" to skip a particular pulse without deleting the pulse on/off time value pair
 Range: 0 to 65535

Example: See [Example"Generating a pulse train signal"](#) on page 400.

Manual operation: See ["Edit Pulse Train Data"](#) on page 92

[:SOURce<hw>]:PULM:TRAI:n:SElect <Filename>

Selects or creates a data list in pulse train mode.

If the list with the selected name does not exist, a new list is created.

Parameters:

<Filename> string
 Filename or complete file path; file extension can be omitted.

Example: See [Example "Generating a pulse train signal"](#) on page 400.

Manual operation: See ["Pulse Train Data"](#) on page 92
 See ["File Name"](#) on page 97
 See ["Functions for handling of data lists"](#) on page 208

Pulse Train Data Exchange

Option: R&S SMBB-K27

With the following commands, you can configure pulse trains in ASCII format and export or import them accordingly.

```
SOURce1:PULM:SOURce INT
SOURce1:PULM:MODE PTR
SOURce1:PULM:TRAI:n:SElect "/var/user/pt"
SOURce1:PULM:STATE 1

SOURce1:PULM:TRAI:n:DEXChange:MODE EXP
SOURce1:PULM:TRAI:n:DEXChange:AFIle:EXTension TXT
SOURce1:PULM:TRAI:n:DEXChange:AFIle:SEParator:DECimal DOT
SOURce1:PULM:TRAI:n:DEXChange:AFIle:SEParator:COLumn SEM
SOURce1:PULM:TRAI:n:DEXChange:AFIle:SEParator:COLumn COMM
SOURce1:PULM:TRAI:n:DEXChange:SElect "/var/user/pt.pulstrn"
SOURce1:PULM:TRAI:n:DEXChange:AFIle:SElect "/var/user/pt_script.txt"
SOURce1:PULM:TRAI:n:DEXChange:EXECute
```

The following commands are available:

[:SOURce<hw>]:PULM:TRAI:n:DEXChange:MODE	403
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFIle:EXTension	404
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFIle:SEParator:DECimal	404
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFIle:SEParator:COLumn	404
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFIle:CATalog?	404
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFIle:SElect	405
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:SElect	405
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:EXECute	405

[:SOURce<hw>]:PULM:TRAI:n:DEXChange:MODE <Mode>

Determines the import or export of a list.

Specify the source or destination file with the command [\[:SOURce<hw>\]:PULM:TRAI:n:DEXChange:SElect](#).

Parameters:

<Mode> IMPort | EXPort
 *RST: IMPort

Example: See ["Pulse Train Data Exchange"](#) on page 403.

Manual operation: See ["Mode"](#) on page 95

[[:SOURce<hw>]:PULM:TRAI:DEXChange:AFILe:EXTension <Extension>

Determines the extension of the ASCII file for import or export, or to query existing files.

Parameters:

<Extension> TXT | CSV
 *RST: TXT

Example: See ["Pulse Train Data Exchange"](#) on page 403.

Manual operation: See ["ASCII File Settings"](#) on page 95

[[:SOURce<hw>]:PULM:TRAI:DEXChange:AFILe:SEParator:DECimal <Decimal>

Sets "." (decimal point) or "," (comma) as the decimal separator used in the ASCII data with floating-point numerals.

Parameters:

<Decimal> DOT | COMMa
 *RST: DOT

Example: See ["Pulse Train Data Exchange"](#) on page 403.

Manual operation: See ["ASCII File Settings"](#) on page 95

[[:SOURce<hw>]:PULM:TRAI:DEXChange:AFILe:SEParator:COLumn <Column>

Selects the separator between the frequency and level column of the ASCII table.

Parameters:

<Column> TABulator | SEMicolon | COMMa | SPACe
 *RST: COMMa

Example: See ["Pulse Train Data Exchange"](#) on page 403.

Manual operation: See ["ASCII File Settings"](#) on page 95

[[:SOURce<hw>]:PULM:TRAI:DEXChange:AFILe:CATalog?

Queries the available ASCII files in the current or specified directory.

Return values:

<Catalog> string
 List of ASCII files *.txt or *.csv, separated by commas.

Example: See ["Pulse Train Data Exchange"](#) on page 403.

Usage: Query only

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 96

[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:SElect <Filename>

Selects the ASCII file to be imported or exported.

Parameters:

<Filename> string
Filename or complete file path; file extension can be omitted.

Example: See ["Pulse Train Data Exchange"](#) on page 403.

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 96

[:SOURce<hw>]:PULM:TRAI:n:DEXChange:SElect <Filename>

Selects the ASCII file for import or export, containing a pulse train list.

Parameters:

<Filename> string
Filename or complete file path; file extension can be omitted.

Example: See ["Pulse Train Data Exchange"](#) on page 403.

Manual operation: See ["Select Source/Select ASCII Destination"](#) on page 96

[:SOURce<hw>]:PULM:TRAI:n:DEXChange:EXECute

Usage: Event

Manual operation: See ["Import / Export"](#) on page 96

Executes the import or export of the selected list file, according to the transfer direction set with command [\[:SOURce<hw>\]:PULM:TRAI:n:DEXChange:MODE](#).

12.14.1.6 SOURce:STEReo Subsystem

Option: R&S SMBB-B5

The SOURce:STEReo subsystem contains the commands for generating FM stereo multiplex signals, the radio traffic service ARI (Automotive Radio Information) and Radio Data System (RDS).

Additional functions are available using the SOURce:STEReo:DIReCt commands, see [Chapter 12.20, "Direct Commands for the Stereo/RDS Coder Option R&S SMBB-B5"](#), on page 517.

Example: Activating stereo modulation

The following example shows a command sequence for stereo modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS
// Set the FM deviation, audio source, preemphasis
// and max modulation frequency
```

```
SOURce:STEReo:DEVIation 25000
SOURce:STEReo:SOURce SPEX
SOURce:STEReo:AUDio:PREemphasis:STATe 1
SOURce:STEReo:AUDio:PREemphasis 75 us
SOURce:STEReo:AUDio:MODE RNEL
SOURce:STEReo:MMF 1500
```

```
// Configure the pilot tone
SOURce:STEReo:PILot:DEVIation 5000
SOURce:STEReo:PILot:PHASe 3
```

```
// Configure and activate ARI
STEReo:ARI 2800
SOURce:STEReo:ARI:TYPE BK
STEReo:ARI:BK C
SOURce:Stereo:ARI:STATe 1
```

```
//Configure and activate RDS
STEReo:RDS 1200
SOURce:STEReo:RDS:DATaset DS3
SOURce:STEReo:RDS:TRAFFic:PROGram:STATe 1
SOURce:STEReo:RDS:TRAFFic:ANNouncement:STATe 1
STEReo:RDS:STATe 1
```

```
// Activate the signal output
SOURce:STEReo:STATe 1
```

[SOURce]:STEReo:DIRect.....	407
[SOURce]:STEReo:STATe.....	407
[SOURce]:STEReo[:DEVIation].....	407
[SOURce]:STEReo:AUDio:MODE.....	408
[SOURce]:STEReo:SOURce.....	408
[SOURce]:STEReo:EXTernal:IMPedance.....	409
[SOURce]:STEReo:MMF.....	409
[SOURce]:STEReo:AUDio:PREemphasis.....	409
[SOURce]:STEReo:AUDio:PREemphasis:STATe.....	409
[SOURce]:STEReo:PILot:STATe.....	410
[SOURce]:STEReo:PILot[:DEVIation].....	410
[SOURce]:STEReo:PILot:PHASe.....	410
[SOURce]:STEReo:ARI:STATe.....	410
[SOURce]:STEReo:ARI[:DEVIation].....	411
[SOURce]:STEReo:ARI:TYPE:STATe.....	411

[:SOURce]:STEReo:ARI:TYPE	411
[:SOURce]:STEReo:ARI:BK[:CODE]	412
[:SOURce]:STEReo:RDS:STATe	412
[:SOURce]:STEReo:RDS[:DEViation]	412
[:SOURce]:STEReo:RDS:DATaset	413
[:SOURce]:STEReo:RDS:TRAFfic:PROGram[:STATe]	413
[:SOURce]:STEReo:RDS:TRAFfic:ANNouncement[:STATe]	413

[\[:SOURce\]:STEReo:DIRect](#) <Direct>

Sends a R&S SMB100B command string to the stereo coder.

The direct commands offer extended settings possibilities for the stereo coder, see [Chapter 12.20, "Direct Commands for the Stereo/RDS Coder Option R&S SMBB-B5"](#), on page 517.

Parameters:

<Direct> string

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See " [Program Service Name](#)" on page 85
 See "[Program Identification](#)" on page 85

[\[:SOURce\]:STEReo:STATe](#) <State>

Activates/deactivates stereo modulation.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See "[State](#)" on page 79

[\[:SOURce\]:STEReo\[:DEViation\]](#) <Deviation>

Sets the MPX (Multiplex stereo signal) deviation.

Parameters:

<Deviation> integer
 Range: 0 to depends on instrument hardware
 *RST: 40 kHz

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See "[FM Deviation](#)" on page 79

[[:SOURce]:STEReo:AUDio:MODE <Mode>

Selects the generated identifiers of the AUDio signal.

Parameters:

<Mode>

LEFT | RIGHT | RELeft | REMLeft | RNELeft

LEFT

A mono signal containing the left channel is generated/fed in.

RIGHT

A mono signal containing the right channel is generated/fed in.

RELeft

A stereo signal with right and left channel is generated/fed in.
The channels have the same frequency and phase.

REMLeft

The signal on the left external audio input is used for both channels, left and right. The right channel is inverted.

RNELeft

(External source only)

A stereo signal containing different, independent right and left channels is feed in. It is possible, for example, to feed a fixed audio frequency to the first channel while a frequency sweep is being performed in the second channel.

*RST: LEFT

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Mode"](#) on page 80

[[:SOURce]:STEReo:SOURce <Source>

Selects the source for the audio signal.

Parameters:

<Source>

OFF | LREXt | SPEXt | LFGen

OFF

No audio signal is provided, ARI and RDS signal can be generated separately.

LREX

The external audio signal is feed in via the analog L and R inputs.

SPEX

The external audio signal is feed in via the digital S/P DIF interface

LFG

The audio stereo signal is internally generated by the LF generator.

*RST: LREXt

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Audio Source"](#) on page 80

[[:SOURce]:STEReo:EXternal:IMPedance <Impedance>

For [\[:SOURce\]:STEReo:SOURceLREX](#), selects the input impedance for the external analog audio signal inputs L and R.

Parameters:

<Impedance> 600 | 600Ohm | 100000 | 100kOhm | 100000Ohm
 *RST: 100000

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["External R/L Impedance"](#) on page 80

[[:SOURce]:STEReo:MMF <Mmf>

For [\[:SOURce\]:STEReo:SOURceLREX](#) and [\[:SOURce\]:STEReo:AUDio:PREemphasis:STATe1](#), sets the maximum modulation frequency. It prevents over modulation but decreases S/N ratio.

Parameters:

<Mmf> integer
 Range: 1000 to 18000
 *RST: 1000

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Max Modulation Frequency"](#) on page 81

[[:SOURce]:STEReo:AUDio:PREemphasis <PreEmphasis>

If [\[:SOURce\]:STEReo:AUDio:PREemphasis:STATe1](#), sets the preemphasis used for signal generation.

Parameters:

<PreEmphasis> OFF | 50 | 75
 Range: 50 us to 75 us

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Preemphasis"](#) on page 81

[[:SOURce]:STEReo:AUDio:PREemphasis:STATe <State>

Activates the use of preemphasis for signal generation.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Preemphasis"](#) on page 81

[[:SOURce]:STEReo:PILot:STATe <State>

Activates/deactivates the pilot tone generation.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Pilot State"](#) on page 82

[[:SOURce]:STEReo:PILot[:DEViation] <Deviation>

Sets the deviation of the pilot tone.

Parameters:

<Deviation> integer
Range: 0 to 10 kHz
*RST: 6.75 kHz

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Pilot Deviation"](#) on page 82

[[:SOURce]:STEReo:PILot:PHASe <Phase>

Sets the phase of the pilot tone in degrees, in relation to the 38 kHz carrier signal of the receiver. For a correct demodulation, the pilot tone must be in phase with the 38 kHz carrier.

Parameters:

<Phase> float
Range: -5 to 5
Increment: 0.1
*RST: 0

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Pilot Phase"](#) on page 82

[[:SOURce]:STEReo:ARI:STATe <State>

Activates/deactivates the ARI signal generation. ARI signals can be generated simultaneously with MPX and RDS signals.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["ARI State"](#) on page 83

[[:SOURce]:STEReo:ARI[:DEViation] <Deviation>

Sets the frequency deviation of the ARI subcarrier signal.

Parameters:

<Deviation> integer
 Range: 0 to 10000
 *RST: 3500

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["ARI Deviation"](#) on page 83

[[:SOURce]:STEReo:ARI:TYPE:STATE <State>

Activates/deactivates the Stereo ARI Identifier. Activating selects the previously selected identifier type.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["ARI Identification"](#) on page 83

[[:SOURce]:STEReo:ARI:TYPE <Type>

Selects the generated identifiers of the ARI signal.

DK and BK are abbreviations of the German words Durchsagekennung and Bereichskennung.

Parameters:

<Type> OFF | DK | BK | BKDK

OFF

Only the 57 kHz subcarrier is generated.

DK

The message identification is generated in addition (low-frequency 30% AM).

BK

The area identification is generated in addition (60% AM). The specific code is selected in [\[:SOURce\]:STEReo:ARI:BK\[:CODE\]](#) on page 412.

BKDK

The area and message identification are generated in addition.
The BK code is selected in `[:SOURce] :STEReo:ARI: BK [:CODE]` on page 412.

*RST: OFF

Example: See [Example "Activating stereo modulation"](#) on page 406.

Manual operation: See ["ARI Identification"](#) on page 83

[:SOURce] :STEReo:ARI: BK [:CODE] <Code>

Selects the area identification (BK) code of the ARI signal. The code is generated if the BK or DK+BK identifier of the ARI signal is activated.

Parameters:

<Code> A | B | C | D | E | F

The six letters (six different frequencies) identify a specific region in each country.

*RST: A

Example: See [Example "Activating stereo modulation"](#) on page 406.

Manual operation: See ["ARI BK"](#) on page 83

[:SOURce] :STEReo:RDS:STATE <State>

Activates/deactivates the RDS signal generation. RDS signals can be generated simultaneously with MPX (FM stereo multiplex) and ARI signals.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example: See [Example "Activating stereo modulation"](#) on page 406.

Manual operation: See ["RDS State"](#) on page 84

[:SOURce] :STEReo:RDS [:DEVIation] <Deviation>

Sets the deviation of the RDS subcarrier.

Parameters:

<Deviation> integer

Range: 0 to 10 kHz

*RST: 2 kHz

Example: See [Chapter 12.14.1.6, "SOURce:STEReo Subsystem"](#), on page 405.

Manual operation: See ["RDS Deviation"](#) on page 84

[[:SOURce]:STEReo:RDS:DATaset <Dataset>

Selects one of the five data sets provided on the instrument for use in the RDS signal.

Parameters:

<Dataset> DS1 | DS2 | DS3 | DS4 | DS5
*RST: DS1

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["RDS Data Set"](#) on page 85

[[:SOURce]:STEReo:RDS:TRAFfic:PROGram[:STATe] <State>

Activates the RDS traffic program. The receiver can recognize a frequency as being capable of traffic information only if the TP function is active.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Traffic Program"](#) on page 85

[[:SOURce]:STEReo:RDS:TRAFfic:ANNouncement[:STATe] <State>

Activates the RDS traffic announcement.

If TP is on, this function switches the receiver from the current status, e.g. playing a CD, to the receive mode and enables the broadcast of a traffic announcement.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: See [Example"Activating stereo modulation"](#) on page 406.

Manual operation: See ["Traffic Announcement"](#) on page 86

12.14.2 SOURce:CORRection Subsystem

The SOURce:CORRection subsystem contains the commands for defining correction values for external test assemblies.

You can acquire the correction values any time, regardless of the modulation settings of the generator. The correction is performed by adding the correction values to the output level of the respective RF frequency.

Determine the correction values in one of the following ways:

- Measure the RF output level at several frequency points and enter the value pairs manually in a table

- Connect an R&S NRP to the generator output signal and send the command `[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWER]:SONce` to fill the table automatically.

Correction values can be stored in files with the predefined file extension `*.uco`.

Refer to [Chapter 12.5.2, "Accessing Files in the Default or in a Specified Directory"](#), on page 336 for general information on file handling in the default and in a specific directory.

Programming example

The examples in this section assume that:

- The files are stored in the default directory.
- `*RST` does not affect data lists.

Example: Create a table with user-defined correction values for the RF level

The following example shows a command sequence to create and activate a list for assigning level correction values to arbitrary RF frequencies. Further hardware settings are not considered.

```
// Reset the instrument to start from an initial state
// Query the available user correction list files in the default directory
// Select a file or create a new one
// *****
*RST; *CLS
SOURce1:CORRection:CSET:CATalog?
// Response: shows the name of available user correction files (if applicable)
// Select a file
SOURce1:CORRection:CSET:SElect "/var/user/ucor1"
// Create a new file (if not existing)
SOURce1:CORRection:CSET:SElect "/var/user/ucor2"

// Enter the frequency/level value pairs in the table;
// existing data is overwritten
// Query the number of frequency/power entries in the selected list
SOURce1:CORRection:CSET:DATA:FREQuency 100MHz,110MHz,120MHz,130MHz,140MHz,150MHz
SOURce1:CORRection:CSET:DATA:POWer -10,-7.5,-5.0,-2.5,0,2.5
SOURce1:CORRection:CSET:DATA:FREQuency:POINts?
// 6
SOURce1:CORRection:CSET:DATA:POWer:POINts?
// 6

// Enable user correction mode and RF output
SOURce1:CORRection:STATe 1
OUTPut1:STATe ON

// Query the currently used correction value
SOURce1:CORRection:VALue?
// -2.5
```

```
// Delete a user correction file
SOURcel:CORRection:CSET:DELEte "/var/user/ucor1.uco"
```

Example: Fill user correction data with sensor

The following example shows a command sequence to fill a user correction list automatically supported by a connected R&S NRP.

```
// Fill a user correction list with the level values
// measured by an R&S NRP,
// store the data in a file and enable user correction.

*RST; *CLS

SOURcel:CORRection:CSET:SElect "/var/user/Ucor1_AutoFill.uco"
SOURcel:CORRection:CSET:DATA:FREQuency 100MHz,110MHz,120MHz,130MHz,140MHz,150MHz
SOURcel:CORRection:ZERoing:STATe 1
SOURcel:CORRection:CSET:DATA:SENSor1:POWer:SONCe
// Query the number of automatically filled correction level values
SOURcel:CORRection:CSET:DATA:POWer:POINTs?
// 6
SOURcel:CORRection:STATe 1

// Query the correction value at a certain frequency
FREQ 120000000
SOURcel:CORRection:VALue?
// -52.13
```

Example: User correction data exchange

The following example shows a command sequence to export a user correction list (here the list created with the example before) into an ASCII file. Further hardware settings are not considered.

```
// Select a user correction file for exporting to file in ASCII format
// Set ASCII data parameters
// Set the ASCII file extension, the decimal separator
// and the column separator for the ASCII data
SOURcel:CORRection:DEXChange:AFILe:CATalog?
// my_ucor
SOURcel:CORRection:CSET:CATalog?
// ucor1,Ucor1_AutoFill
SOURcel:CORRection:CSET:SElect "/var/user/Ucor1_AutoFill.uco"
SOURcel:CORRection:DEXChange:AFILe:EXTension CSV
SOURcel:CORRection:DEXChange:AFILe:SEParator:DECimal DOT
SOURcel:CORRection:DEXChange:AFILe:SEParator:COLumn COMMa

// Select source and destination
SOURcel:CORRection:DEXChange:AFILe:SElect "/var/user/ucor2ASCII"
```

```
// Export the user correction data into the ASCII file
SOURCE1:CORREction:DEXChange:MODE EXPORT
SOURCE1:CORREction:DEXChange:EXECute

// Query the available ASCII files with extension .csv
SOURCE1:CORREction:DEXChange:AFILE:CAtalog?
// ucor2ASCII,my_ucor

// Import a user correction ASCII file
SOURCE1:CORREction:DEXChange:MODE IMPORT
SOURCE1:CORREction:DEXChange:AFILE:SElect "/var/user/my_ucor"
SOURCE1:CORREction:DEXChange:EXECute
```

- [Correction Settings](#).....416
- [Correction Data Exchange](#).....419

12.14.2.1 Correction Settings

[:SOURce]:CORRection:CSET:DATA:FREQuency <Frequency>

Enters the frequency value in the table selected with `[:SOURCE<hw>] :CORRection: CSET[:SElect]`.

Parameters:

<Frequency>	Frequency#1[, Frequency#2, ...] String of values with default unit Hz.
-------------	---

Example: See [Example "Create a table with user-defined correction values for the RF level"](#) on page 414 .

Manual operation: See "Edit List Mode Data" on page 146

```
[ :SOURce<hw>]:CORRection:CSET:DATA:POWer <Power>
```

Enters the level values to the table selected with `[:SOURce<hw>] :CORRection:`
`CSET[:SElect]`.

Parameters:

<Power> Power#1[, Power#2, ...]
String of values with default unit dB.
*RST: 0

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 414 .

Manual operation: See ["Edit List Mode Data"](#) on page 146

[:SOURce<hw>]:CORRection:CSET:DATA:FREQUency:POINTs?
[:SOURce<hw>]:CORRection:CSET:DATA:POWEr:POINTs?

Queries the number of frequency/level values in the selected table.

Return values:

<Points> integer
 Range: 0 to 10000
 *RST: 0

Example: See [Example "Create a table with user-defined correction values for the RF level"](#) on page 414 .

Usage: Query only

[[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>]][:POWer]:SONCe

Fills the selected user correction table with the level values measured by the power sensor for the given frequencies.

To select the used power sensor set the suffix in key word `SENSe`.

Example: See [Example "Fill user correction data with sensor"](#) on page 415.

Usage: Event

Manual operation: See ["Fill User Correction Data with Sensor"](#) on page 164

[[:SOURce<hw>]:CORRection:CSET[:SELEct] <Filename>

Selects or creates a file for the user correction data.

If the file with the selected name does not exist, a new file is created.

Parameters:

<Filename> string
 Filename or complete file path; file extension can be omitted.

Example: See [Example "Create a table with user-defined correction values for the RF level"](#) on page 414 .

Manual operation: See ["UCOR Data"](#) on page 160
 See ["Functions for handling of data lists"](#) on page 208

[[:SOURce<hw>]:CORRection:VALue?

Queries the current value for user correction.

Return values:

<Value> float
 Range: -100 to 100
 Increment: 0.01
 *RST: 0

Example: See [Example "Create a table with user-defined correction values for the RF level"](#) on page 414 .

Usage: Query only

Manual operation: See ["User Correction"](#) on page 160

[[:SOURce<hw>]:CORRection:ZERoing:STATe <State>

Activates the zeroing procedure before filling the user correction data acquired by a sensor.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example: See [Example"Fill user correction data with sensor"](#) on page 415.

Manual operation: See ["Fill User Correction Data with Sensor"](#) on page 164

[[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>]][:POWER]:SONCe

Fills the selected user correction list with the level values measured by the power sensor for the given frequencies.

Suffix:

SENSor<ch> Defines the used power sensor, i.e. the sensor whose values are used.

Example: See [Example"Fill user correction data with sensor"](#) on page 415.

Usage: Event

[[:SOURce<hw>]:CORRection[:STATe] <State>

Activates user correction with the currently selected table.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 414 .

Manual operation: See ["State"](#) on page 160

[[:SOURce]:CORRection:CSET:CATalog?

Queries a list of available user correction tables.

Return values:

<Catalog> string
List of list filenames, separated by commas

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 414 .

Usage: Query only

Manual operation: See ["UCOR Data"](#) on page 160
See ["Directory, File List and Filename"](#) on page 203

[[:SOURce]:CORRection:CSET:DELeTe <Filename>

Deletes the specified user correction list file.

Setting parameters:

<Filename> string
 Filename or complete file path; file extension is optional.

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 414 .

Usage: Setting only

Manual operation: See ["UCOR Data"](#) on page 160

12.14.2.2 Correction Data Exchange

With the following commands, you can configure user correction lists and export or import them accordingly.

[[:SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?

Queries the available ASCII files for export or import of user correction data in the current or specified directory.

Return values:

<Catalog> string
 List of ASCII files *.txt or *.csv, separated by commas.

Example: See [Example"Create a table with user-defined correction values for the RF level"](#) on page 414 .

Usage: Query only

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 96

[[:SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension <Extension>

Determines the extension of the ASCII files for file import or export, or to query existing files.

Parameters:

<Extension> TXT | CSV
 *RST: TXT

Example: See [Example"User correction data exchange"](#) on page 415 .

Manual operation: See ["ASCII File Settings"](#) on page 95

[[:SOURce<hw>]:CORRection:DEXChange:AFILe:SELeCt <Filename>

Selects the ASCII file to be imported or exported.

Parameters:

<Filename> string
 Filename or complete file path; file extension can be omitted.

Example: See [Example"User correction data exchange"](#) on page 415 .

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 96

[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn <Column>

Selects the separator between the frequency and level column of the ASCII table.

Parameters:

<Column> TABulator | SEMicolon | COMMa | SPACe
 *RST: COMMa

Example: See [Example"User correction data exchange"](#) on page 415 .

Manual operation: See ["ASCII File Settings"](#) on page 95

[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal <Decimal>

Sets the decimal separator used in the ASCII data between '.' (decimal point) and ',' (comma) with floating-point numerals.

Parameters:

<Decimal> DOT | COMMa
 *RST: DOT

Example: See [Example"User correction data exchange"](#) on page 415 .

Manual operation: See ["ASCII File Settings"](#) on page 95

[:SOURce<hw>]:CORRection:DEXChange:EXECute

Executes the import or export of the selected correction list, according to the previously set transfer direction with command [\[:SOURce<hw>\]:CORRection:DEXChange:MODE](#).

Example: See [Example"User correction data exchange"](#) on page 415 .

Usage: Event

Manual operation: See ["Import / Export"](#) on page 96

[:SOURce<hw>]:CORRection:DEXChange:MODE <Mode>

Determines import or export of a user correction list.

Specify the source or destination file with the command [\[:SOURce<hw>\]:CORRection:DEXChange:SElect](#).

Parameters:

<Mode> IMPort | EXPort
 *RST: IMPort

Example: See [Example "User correction data exchange"](#) on page 415 .

Manual operation: See ["Mode"](#) on page 95

[[:SOURce<hw>]:CORRection:DEXChange:SElect <Filename>

Selects the ASCII file for import or export, containing a user correction list.

Parameters:

<Filename> string
 Filename or complete file path; file extension can be omitted.

Example: See [Example "User correction data exchange"](#) on page 415 .

Manual operation: See ["Select Source/Select ASCII Destination"](#) on page 96

12.14.3 SOURce:FREQuency Subsystem

The SOURce:FREQuency subsystem contains the commands used to define the frequency settings for the RF sources and sweeps.

Example: Frequency configuration

```
SOURce1:FREQuency:MODE CW
SOURce1:FREQuency:CW 6000000000
SOURce1:FREQuency:OFFSet 2000000000
SOURce1:FREQuency:MULTiplier 1.5
SOURce1:FREQuency:CW?
// 11000000000

// SOURce1:FREQuency:STEP:MODE USER
// SOURce1:FREQuency:STEP:INCRement 1000000
// SOURce1:FREQuency:CW UP
```

```
SOURce1:PHASe 2
SOURce1:PHASe:REFerence
```

[:SOURce<hw>]:FREQuency:MODE	422
[:SOURce<hw>]:FREQuency[:CW FIXed]	423
[:SOURce<hw>]:FREQuency[:CW FIXed]:RCL	423
[:SOURce<hw>]:FREQuency:MANual	424
[:SOURce<hw>]:FREQuency:MULTiplier	424
[:SOURce<hw>]:FREQuency:OFFSet	425
[:SOURce<hw>]:FREQuency:CENTer	425
[:SOURce<hw>]:FREQuency:SPAN	425
[:SOURce<hw>]:FREQuency:STARt	426

[:SOURce<hw>]:FREQuency:STOP	426
[:SOURce<hw>]:FREQuency:STEP:MODE	426
[:SOURce<hw>]:FREQuency:STEP[:INCRement]	427

[\[:SOURce<hw>\]:FREQuency:MODE <Mode>](#)

Sets the frequency mode for generating the RF output signal. The selected mode determines the parameters to be used for further frequency settings.

Parameters:

<Mode>

CW | FIXed | SWEep | LIST | COMBined

CW|FIXed

Sets the fixed frequency mode. CW and FIXed are synonyms. The instrument operates at a defined frequency, set with command [\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\]](#).

SWEep

Sets sweep mode.

The instrument processes frequency (and level) settings in defined sweep steps.

Set the range and current frequency with the commands:

[\[:SOURce<hw>\]:FREQuency:START](#) on page 426 and [\[:SOURce<hw>\]:FREQuency:STOP](#) on page 426,

[\[:SOURce<hw>\]:FREQuency:CENTer](#) on page 425,

[\[:SOURce<hw>\]:FREQuency:SPAN](#) on page 425,

[\[:SOURce<hw>\]:FREQuency:MANual](#) on page 424

LIST

Sets list mode.

The instrument processes frequency and level settings by means of values loaded from a list.

To configure list mode settings, use the commands of the [Chapter 12.14.6, "SOURce:LIST Subsystem"](#), on page 441.

COMBined

Sets the combined RF frequency / level sweep mode.

The instrument processes frequency and level settings in defined sweep steps.

Set the range and current frequency with the commands:

[\[:SOURce<hw>\]:COMBined:FREQuency:START](#)

on page 480 and [\[:SOURce<hw>\]:COMBined:FREQuency:STOP](#) on page 480,

[\[:SOURce<hw>\]:COMBined:POWer:START](#) on page 480 and

[\[:SOURce<hw>\]:COMBined:POWer:STOP](#) on page 481

*RST: CW

Example:

See [Example"Frequency configuration"](#) on page 421, and [Example"Setup an RF frequency or power sweep"](#) on page 472

Manual operation: See ["State \(RF frequency sweep\)"](#) on page 129
 See ["State \(RF frequency / level sweep\)"](#) on page 130
 See ["State"](#) on page 140

[:SOURce<hw>]:FREQuency[:CW|FIXed] <Fixed>

Sets the frequency of the RF output signal in the selected path.

The effect depends on the selected mode:

- In CW mode ([FREQ:MODE CW](#) | [FIXed](#)), the instrument operates at a fixed frequency.
- In sweep mode ([FREQ:MODE SWE](#)), the value applies to the sweep frequency. The instrument processes the frequency settings in defined sweep steps.
- In user mode ([FREQ:STEP:MODE USER](#)), you can vary the current frequency step by step.

Parameters:

<Fixed>

float

The following settings influence the value range:

An offset set with the command [\[:SOURce<hw>\]:FREQuency:OFFSet](#)

Numerical value

Sets the frequency in CW and sweep mode

UP|DOWN

Varies the frequency step by step in user mode.

The frequency is increased or decreased by the value set with the command [\[:SOURce<hw>\]:FREQuency:STEP\[:INCRement\]](#).

Range: (RFmin + OFFSet) to (RFmax + OFFSet)

*RST: 100 MHz

Example: See [Example"Frequency configuration"](#) on page 421

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472

Options: RFmax depends on the installed options, for example 3 GHz with R&S SMBB-B103

Manual operation: See ["Frequency"](#) on page 61

[:SOURce<hw>]:FREQuency[:CW|FIXed]:RCL <Rcl>

Set whether the RF frequency value is retained or taken from a loaded instrument configuration, when you recall instrument settings with command *RCL.

Parameters:

<Rcl>

INCLude | EXCLude

INCLude

Takes the frequency value of the loaded settings.

EXCLude

Retains the current frequency when an instrument configuration is loaded.

*RST: INCLude

Example: SOURce1:FREQuency:CW:RCL INCLude

Manual operation: See ["Exclude Frequency"](#) on page 204

[SOURce<hw>]:FREQuency:MANual <Manual>

Sets the frequency and triggers a sweep step manually if [SWEep:MODE MAN](#).

Parameters:

<Manual>

float

You can select any frequency within the setting range, where:

START is set with [\[:SOURce<hw>\]:FREQuency:START](#)

STOP is set with [\[:SOURce<hw>\]:FREQuency:STOP](#)

OFFSet is set with [\[:SOURce<hw>\]:FREQuency:OFFSet](#)

Range: (START + OFFSet) to (STOP + OFFSet)

Increment: 0.01Hz

*RST: 100 MHz

Default unit: Hz

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472

Manual operation: See ["Current Frequency"](#) on page 130

[SOURce<hw>]:FREQuency:MULTiplier <Multiplier>

Sets the multiplication factor $N_{\text{FREQ:MULT}}$ of a subsequent downstream instrument.

The parameters offset $f_{\text{FREQ:OFFSer}}$ and multiplier $N_{\text{FREQ:MULT}}$ affect the frequency value set with the command [FREQ](#).

The query [FREQ?](#) returns the value corresponding to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * N_{\text{FREQ:MULT}} + f_{\text{FREQ:OFFSer}}$$

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

Parameters:

<Multiplier>

float

Range: -10000 to 10000

Increment: 0.001

*RST: 1

Example: See [Example"Frequency configuration"](#) on page 421

Manual operation: See ["Multiplier"](#) on page 61

[[:SOURce<hw>]:FREQUENCY:OFFSet <Offset>

Sets the frequency offset $f_{\text{FREQ:OFFSet}}$ of a downstream instrument.

The parameters offset $f_{\text{FREQ:OFFSet}}$ and multiplier $N_{\text{FREQ:MULT}}$ affect the frequency value set with the command [FREQ](#).

The query [FREQ?](#) returns the value corresponding to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * N_{\text{FREQ:MULT}} + f_{\text{FREQ:OFFSet}}$$

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

Note: The offset also affects RF frequency sweep.

Parameters:

<Offset> float
 Increment: 0.01
 *RST: 0

Example: See [Example"Frequency configuration"](#) on page 421

Manual operation: See ["Offset"](#) on page 61

[[:SOURce<hw>]:FREQUENCY:CENTer <Center>

Sets the center frequency of the sweep.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

<Center> float
 Range: 300 kHz to RFmax
 Increment: 0.01 Hz
 *RST: 300E6
 Default unit: Hz

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472

Manual operation: See ["Center Frequency"](#) on page 135

**[[:SOURce<hw>]:FREQUENCY:SPAN **

Sets the span of the frequency sweep range.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

 float
 Full frequency range
 Increment: 0.01
 *RST: 400E6

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472

Manual operation: See ["Span"](#) on page 135

[:SOURce<hw>]:FREQuency:START <Start>

Sets the start frequency for the RF sweep.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

<Start> float
 Range: 300kHz to RFmax
 Increment: 0.01Hz
 *RST: 100 MHz

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 135

[:SOURce<hw>]:FREQuency:STOP <Stop>

Sets the stop frequency range for the RF sweep.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

<Stop> float
 Range: 300kHz to RFmax
 Increment: 0.01Hz
 *RST: 500 MHz
 Default unit: Hz

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 135

[:SOURce<hw>]:FREQuency:STEP:MODE <Mode>

Defines the type of step size to vary the RF frequency at discrete steps with the commands [FREQ UP](#) or [FREQ DOWN](#).

Parameters:

<Mode> DECimal | USER
DECimal
 Increases or decreases the level in steps of ten.
USER
 Increases or decreases the level in increments, set with the command [FREQ:STEP\[:INCR\]](#).

*RST: DECimal

Example: // increasing the RF frequency with a step size of 50 KHz
 SOURce1:FREQuency:STEP 50E3
 SOURce1:FREQuency:STEP:MODE USER
 SOURce1:FREQuency:CW UP

Manual operation: See ["Variation Active"](#) on page 62

[SOURce<hw>]:FREQuency:STEP[:INCRement] <Increment>

Sets the step width.

You can use this value to vary the RF frequency with command [FREQ UP](#) or [FREQ DOWN](#), if you have activated [FREQ:STEP:MODE USER](#).

Note: This value also applies to the step width of the rotary knob on the instrument and, in user-defined step mode, increases or decreases the frequency.

Parameters:

<Increment> float
 Range: 0 Hz to RFmax - 100 kHz
 Increment: 0.01 Hz
 *RST: 1E6

Example: See [Example"Frequency configuration"](#) on page 421

Manual operation: See ["Variation Step"](#) on page 62

12.14.4 SOURce:INPut Subsystem

The SOURce:INPut subsystem contains the commands for configuring the inputs for external modulation signals. The instrument trigger setting influences all sweeps and is effective in the List mode (Instrument Trigger).

[\[:SOURce<hw>\]:INPut:MODext:COUPling](#).....427
[\[:SOURce<hw>\]:INPut:MODext:IMPedance<ch>](#).....428
[\[:SOURce\]:INPut:TRIGger:SLOPe](#).....428

[SOURce<hw>]:INPut:MODext:COUPling <Coupling>

Selects the coupling mode for an externally applied modulation signal.

Parameters:

<Coupling> AC | DC
 AC
 Passes the AC signal component of the modulation signal.
 DC
 Passes the modulation signal with both components, AC and DC.
 *RST: AC

Example: `SOURce1:INPut:MODext:COUPling AC`
`SOURce1:INPut:MODext:IMPedance G50`

Manual operation: See ["Coupling \(AC/DC\)"](#) on page 104

[:SOURce<hw>]:INPut:MODext:IMPedance<ch> <Impedance>

Sets the impedance for the externally supplied modulation signal.

Parameters:

<Impedance> G50 | G600 | HIGH
 G50 = 50 Ohm to ground
 G600 = 600 Ohm to ground
 HIGH = 100 kOhm to ground
 *RST: HIGH

Example: See `[:SOURce<hw>]:INPut:MODext:COUPling` on page 427.

Manual operation: See ["Impedance"](#) on page 104

[:SOURce]:INPut:TRIGger:SLOPe <Slope>

Sets the polarity of the active slope of an applied instrument trigger.

Parameters:

<Slope> NEGative | POSitive
 *RST: POSitive

Example: `INP:TRIG:SLOP NEG`
 Activates the falling slope of the external trigger signal at the trigger input.

Manual operation: See [" Trigger Slope"](#) on page 133

12.14.5 SOURce:LFOutput Subsystem

The `SOURce:LFOutput` subsystem contains the commands for setting the LF signal source in CW and Sweep mode and for analog modulation.

Example: Setup an LF sweep

The following example shows a command sequence to set up an LF sweep.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the trigger mode, the sweep mode and the sweep range
TRIGger1:LFFSweep:SOURce SINGLE
SOURce1:LFOutput1:SWEep:FREQuency:MODE AUTO
SOURce1:LFOutput1:FREQuency:START 1 kHz
```



```

SOURcel:LFOOutput1:FREQuency:STOP 7 kHz

// Select linear spacing
// Select the waveform shape for the frequency sweep cycle
// Set the step width and the dwell time.
SOURcel:LFOOutput1:SWEep:FREQuency:SPACing LINear
SOURcel:LFOOutput1:SWEep:FREQuency:SHApe SAWtooth
SOURcel:LFOOutput1:SWEep:FREQuency:STEP:LINear 100 Hz
SOURcel:LFOOutput1:SWEep:FREQuency:DWELL 150 ms
// Alternatively to the step width set the number of steps
SOURcel:LFOOutput1:SWEep:FREQuency:POINTs 61

// Activate change to start frequency while waiting for next trigger
// Prerequisites: sweep mode single and sweep waveform sawtooth
SOURcel:LFOOutput:SWEep:FREQuency:RETRace 1

// Activate the LF frequency sweep
SOURcel:LFOOutput:FREQuency:MODE SWE

// Trigger the sweep (depending on the set mode) and query the status
// Perform a one-off LF sweep
SOURcel:LFOOutput1:SWEep:FREQuency:EXECute
SOURcel:LFOOutput1:SWEep:FREQuency:RUNning?
// 1
// the sweep is running

// *****
// For manual step LF sweep use the following commands
*RST; *CLS
SOURcel:LFOOutput:SWEep:FREQuency:MODE MANual
// Activate the LF frequency sweep
SOURcel:LFOOutput:FREQuency:MODE SWEep
// Activate LF Output1.
SOURcel:LFOOutput1:STATe 1
// Input the frequency manually for each step
SOURcel:LFOOutput1:FREQuency:MANual 2 kHz
SOURcel:LFOOutput1:FREQuency:MANual 2.1 kHz
// Alternatively use UP or DOWN parameter with set step width.
SOURcel:LFOOutput1:SWEep:FREQuency:STEP:LINear 500 Hz
SOURcel:LFOOutput1:FREQuency:MANual UP

```

Example: Configuring the LF generator

The following is a simple example on how to configure the LF generator and output the generated signal.

```

// configure the signal of the LF1 generator
SOURcel:LFOOutput1:SHApe SQU
SOURcel:LFOOutput1:SHApe:PULSe:PERiod 0.001
SOURcel:LFOOutput1:SHApe:PULSe:WIDTh 0.0005
SOURcel:LFOOutput1:SHApe:PULSe:DCYCLE 0.5

```

```
// configure the signal of the LF1 generator
SOURce1:LFOutput2:SHApe SINE
SOURce1:LFOutput2:FREQuency 1000000
SOURce1:LFOutput2:PERiod?
// 0.000001

// changing the LF signal shape
// SOURce1:LFOutput2:SHApe TRAP
// SOURce1:LFOutput2:SHApe:PULSe:PERiod 0.2
// SOURce1:LFOutput2:SHApe:TRAPeZe:RISE 0.0001
// SOURce1:LFOutput2:SHApe:TRAPeZe:FALL 0.001
// SOURce1:LFOutput2:SHApe:TRAPeZe:FALL 0.0001
// SOURce1:LFOutput2:SHApe:TRAPeZe:HIGH 0.0005
// SOURce1:LFOutput2:SHApe TRI
// SOURce1:LFOutput2:SHApe:PULSe:PERiod 0.1
// SOURce1:LFOutput2:SHApe:TRIangle:RISE 0.0001

// activate the LF output and select the LF1 as signal source
// configure the LF output signal
SOURce1:LFOutput1:FREQuency:MODE CW
SOURce1:LFOutput1:STATe 1
SOURce1:LFOutput1:SOURce LF1
SOURce1:LFOutput1:INTernal:VOLTage 1
SOURce1:LFOutput1:OFFSet 0.001
```

- [LF Generator Settings](#).....430
- [LF Sweep Settings](#).....438

12.14.5.1 LF Generator Settings

With the commands described in this section, you can configure the LF signal source.

[:SOURce]:LFOutput<ch>:BANDwidth?	431
[:SOURce]:LFOutput<ch>:FREQuency	431
[:SOURce<hw>]:LFOutput<ch>:PERiod?	431
[:SOURce<hw>]:LFOutput:FREQuency:MANual	432
[:SOURce<hw>]:LFOutput:FREQuency:MODE	432
[:SOURce<hw>]:LFOutput:FREQuency:STOP	433
[:SOURce<hw>]:LFOutput:FREQuency:START	433
[:SOURce]:LFOutput<ch>[:STATe]	433
[:SOURce]:LFOutput<ch>:INTernal:VOLTage	433
[:SOURce]:LFOutput:OFFSet	434
[:SOURce]:LFOutput<ch>:SOURce	434
[:SOURce]:LFOutput:SIMPedance	434
[:SOURce]:LFOutput<ch>:SOURce:PATH	435
[:SOURce]:LFOutput:VOLTage	435
[:SOURce<hw>]:LFOutput<ch>:SHApe	435
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:DCYCLE	435
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:PERiod	436
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:WIDTH	436

[:SOURce<hw>]:LFOOutput<ch>:SHAPE:TRAPeZe:FALL.....	436
[:SOURce<hw>]:LFOOutput<ch>:SHAPE:TRAPeZe:HIGh.....	436
[:SOURce<hw>]:LFOOutput<ch>:SHAPE:TRAPeZe:PERiod.....	437
[:SOURce<hw>]:LFOOutput<ch>:SHAPE:TRAPeZe:RISE.....	437
[:SOURce<hw>]:LFOOutput<ch>:SHAPE:TRangle:PERiod.....	437
[:SOURce<hw>]:LFOOutput<ch>:SHAPE:TRangle:RISE.....	437

`[:SOURce]:LFOOutput<ch>:BANDwidth?`

Queries the bandwidth of the external LF signal.

Return values:

<Bandwidth> BW0M2 | BW10m
 *RST: BW10m

Example:

```
LFO:BAND?
// BW10m
// the bandwidth of the externally supplied LF signal is 10 MHz
```

Usage: Query only

Manual operation: See ["Bandwidth"](#) on page 104

`[:SOURce]:LFOOutput<ch>:FREQuency <Frequency>`

Sets the frequency of the LF signal in [\[:SOURce<hw>\]:LFOOutput:FREQuency:MODE](#) CW|FIXed mode.

Note

- If signal source "Internal" is set, the instrument performs the analog modulations (AM/FM/PhiM/PM) with this frequency.
- In sweep mode ([\[:SOURce<hw>\]:LFOOutput:FREQuency:MODE](#) SWE), the frequency is coupled with the sweep frequency.

Parameters:

<Frequency> float
 Range: depends on the installed options
 Increment: 0.01
 *RST: 1000
 Default unit: Hz

Example:

```
SOURce1:LFOOutput1:FREQuency 5 kHz
// sets the LF frequency
```

Manual operation: See ["LF Gen Frequency"](#) on page 80
 See ["Frequency"](#) on page 102

`[:SOURce<hw>]:LFOOutput<ch>:PERiod?`

Queries the repetition frequency of the sine signal.

Return values:

<LfSinePeriod> float
 Range: 1E-6 to 100
 Increment: 10E-9
 *RST: 0.001
 Default unit: s

Example: See [Example "Configuring the LF generator"](#) on page 429.

Usage: Query only

[:SOURce<hw>]:LFOutput:FREQuency:MANual <Manual>

Sets the frequency of the subsequent sweep step if [LFO:SWE:MODE MAN](#).

Use a separate command for each sweep step.

Parameters:

<Manual> float
 You can select any value within the setting range, where:
 START is set with [\[:SOURce<hw>\]:LFOutput:FREQuency:START](#)
 STOP is set with [\[:SOURce<hw>\]:LFOutput:FREQuency:STOP](#)
 Range: START to STOP
 Increment: 0.1
 *RST: 1000

Example: See [Example "Setup an LF sweep"](#) on page 428.

Manual operation: See ["Current Frequency"](#) on page 130

[:SOURce<hw>]:LFOutput:FREQuency:MODE <Mode>

Sets the mode for the output of the LF generator frequency, and determines the commands to be used for frequency settings.

Parameters:

<Mode> CW | FIXed | SWEep
CW|FIXed
 Sets the fixed-frequency mode. CW and FIXed are synonyms.
 To set the output frequency, use command [\[:SOURce\]:LFOutput<ch>:FREQuency](#)
SWEep
 Sets sweep mode.
 To set the frequency, use the commands:
[\[:SOURce<hw>\]:LFOutput:FREQuency:START](#) and [\[:SOURce<hw>\]:LFOutput:FREQuency:STOP](#)
 Or [\[:SOURce<hw>\]:LFOutput:FREQuency:MANual](#)
 *RST: CW

Example: See [Example"Setup an LF sweep"](#) on page 428.

Manual operation: See ["State \(LF frequency sweep\)"](#) on page 100

[:SOURce<hw>]:LFOutput:FREQuency:STOP <Stop>

[:SOURce<hw>]:LFOutput:FREQuency:START <Start>

Sets the start/stop frequency for [\[:SOURce<hw>\]:LFOutput:FREQuency:MODE SWEep](#).

Parameters:

<Start> float
 Range: 0.1 Hz to 1 MHz
 Increment: 0.1
 *RST: 1 KHz

Example: See [Example"Setup an LF sweep"](#) on page 428.

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 135

[:SOURce]:LFOutput<ch>[:STATE] <State>

Activates LF signal output.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["State"](#) on page 106

[:SOURce]:LFOutput<ch>:INTernal:VOLTage <Voltage>

Sets the output voltage for the LF generators.

The sum of both values must not exceed the overall output voltage, set with command [\[:SOURce\]:LFOutput:VOLTage](#).

Suffix:

<ch> [1]|2
 LF1 and LF2

Parameters:

<Voltage> float
 Range: 0 to 4
 Increment: 0.001
 *RST: 1

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["Output Voltage"](#) on page 106

[:SOURce]:LFOutput:OFFSet <Offset>

Sets a DC offset at the LF Output.

Parameters:

<Offset>	float
Range:	depends on lfo voltage
Increment:	0.001
*RST:	0

Example: See [Example "Configuring the LF generator"](#) on page 429.

Manual operation: See ["DC-Offset"](#) on page 107

[:SOURce]:LFOutput<ch>:SOURce <Source>

Determines the LF signal to be synchronized, when monitoring is enabled.

Parameters:

<Source>	LF1 LF2 NOISe AM FMPM EXT1
LF1 LF2	Selects an internally generated LF signal.
NOISe	Selects an internally generated noise signal.
EXT1	Selects an externally supplied LF signal
AM	Selects the AM signal.
FMPM	Selects the signal also used by the frequency or phase modulations.
*RST:	LF1

Example: See [Example "Configuring the LF generator"](#) on page 429.

Manual operation: See ["Source"](#) on page 106

[:SOURce]:LFOutput:SIMPedance <SImpedance>

Selects the impedance of the LF output.

Parameters:

<SImpedance>	G600 G50
*RST:	G50

Example: `SOURce:LFOutput:SIMPedance G600`
Sets the output impedance of the LF generator to 600 Ohm.

Manual operation: See ["Source Impedance"](#) on page 107

[[:SOURce]:LFOutput<ch>:SOURce:PATH <SourPath>

Determines the path of the LF output source.

Parameters:

<SourPath> A | B
*RST: A

Example:

LFO:SOUR:PATH?
Queries the currently set path for the LF output signal source.

[[:SOURce]:LFOutput:VOLTage <Voltage>

Sets the voltage of the LF output.

Parameters:

<Voltage> float
Range: dynamic (see data sheet)
Increment: 0.001
*RST: 1

Example:

SOURce:LFOutput:VOLTage 1.5

[[:SOURce<hw>]:LFOutput<ch>:SHAPE <Shape>

Selects the waveform shape of the LF signal.

Parameters:

<Shape> SINE | SQUARE | PULSE | TRIangle | TRAPeze
*RST: SINE

Example:

See [Example"Configuring the LF generator"](#) on page 429.

Options:

TRIangle|TRAPeze require R&S SMBB-K24

Manual operation:

See ["LF Gen Shape"](#) on page 80
See ["Shape"](#) on page 100

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:DCYCLE <DCycle>

Sets the duty cycle for the shape pulse.

Parameters:

<DCycle> float
Range: 1E-6 to 100
Increment: 1E-6
*RST: 50
Default unit: PCT

Example:

See [Example"Configuring the LF generator"](#) on page 429.

Manual operation:

See ["Pulse Duty Cycle"](#) on page 102

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:PERiod <Period>

Sets the period of the generated pulse. The period determines the repetition frequency of the internal signal.

Parameters:

<Period> float
Range: 1E-6 to 100
Increment: 1E-8
*RST: 1E-3

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["Period"](#) on page 102

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:WIDTH <Width>

Sets the pulse width of the generated pulse.

Parameters:

<Width> float
Range: 1E-6 to 100
Increment: 1E-8
*RST: 5E-4

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["Pulse Width"](#) on page 102

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:FALL <Fall>

Selects the fall time for the trapezoid shape of the LF generator.

Parameters:

<Fall> float
Range: 1E-6 to 100
Increment: 10E-9
*RST: 250E-6

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["Trapezoid Rise / Fall"](#) on page 103

[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:HIGh <High>

Sets the high time for the trapezoid signal of the LF generator.

Parameters:

<High> float
Range: 1E-6 to 100
Increment: 10E-9
*RST: 250E-6

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["Trapezoid High"](#) on page 103

[SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:PERiod <Period>

Sets the period of the generated trapezoid shape. The period determines the repetition frequency of the internal signal.

Parameters:

<Period>	float
Range:	1E-6 to 100
Increment:	1E-8
*RST:	1E-3

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["Period"](#) on page 102

[SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:RISE <Rise>

Selects the rise time for the trapezoid shape of the LF generator.

Parameters:

<Rise>	float
Range:	1E-6 to 100
Increment:	10E-9
*RST:	250E-6

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["Trapezoid Rise / Fall"](#) on page 103

[SOURce<hw>]:LFOutput<ch>:SHAPE:TRIangle:PERiod <Period>

Sets the period of the generated pulse. The period determines the repetition frequency of the internal signal.

Parameters:

<Period>	float
Range:	1E-6 to 100
Increment:	10E-9
*RST:	0.001

Example: See [Example"Configuring the LF generator"](#) on page 429.

Manual operation: See ["Period"](#) on page 102

[SOURce<hw>]:LFOutput<ch>:SHAPE:TRIangle:RISE <Rise>

Selects the rise time for the triangle single of the LF generator.

Parameters:

<Rise> float
 Range: 1E-6 to 100
 Increment: 10E-9
 *RST: 0.5E-3

Example: See [Example "Configuring the LF generator"](#) on page 429.

Manual operation: See ["Triangle Rise"](#) on page 103

12.14.5.2 LF Sweep Settings

With the commands described in this section, you can configure the sweep of the LF signal.

[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:DWELI	438
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:EXECute	438
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:MODE	439
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:POINts	439
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:RETRace	439
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:RUNNING?	440
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:SHAPE	440
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:SPACing	440
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:STEP:LOGarithmic	440
[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:STEP:LINear	441

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQUENCY\]:DWELI](#) <Dwell>

Sets the dwell time for each frequency step of the sweep.

Parameters:

<Dwell> float
 Range: 0.001 to 100
 Increment: 100E-6
 *RST: 0.01
 Default unit: s

Example: See [Example "Setup an LF sweep"](#) on page 428.

Manual operation: See ["Dwell Time"](#) on page 133

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQUENCY\]:EXECute](#)

Immediately starts an LF sweep.

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQUENCY\]:MODE](#) determines which sweep is executed, e.g. `SOURce:LFOutput:SWEep:FREQUENCY:MODE STEP`.

Example: See [Example "Setup an LF sweep"](#) on page 428.

Usage: Event

Manual operation: See ["Execute Single Sweep"](#) on page 134

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE <Mode>

Sets the cycle mode of the LF sweep.

Parameters:

<Mode>

AUTO | MANual | STEP

AUTO

Performs a complete sweep cycle from the start to the end value when a trigger event occurs.

The dwell time determines the time period until the signal switches to the next step.

MANual

Performs a single sweep step when a manual trigger event occurs.

The trigger system is not active. To trigger each frequency step of the sweep individually, use the command `[:SOURce<hw>]:LFOutput:FREQuency:MANual` on page 432.

STEP

Each trigger command triggers one sweep step only.

The frequency increases by the value set with the coammdns:

`[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear]` (linear spacing)

`[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic` (logarithmic spacing)

*RST: AUTO

Example: See [Example"Setup an LF sweep"](#) on page 428.

Manual operation: See ["Mode"](#) on page 130

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:POINTS <Points>

Sets the number of steps in an LF sweep.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122

Parameters:

<Points>

integer

Range: 2 to POINTs

*RST: 50

Example: See [Example"Setup an LF sweep"](#) on page 428.

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RETRace <State>

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Manual operation: See ["Retrace"](#) on page 131

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RUNNING?

Queries the current status of the LF frequency sweep mode.

Return values:

<State> 0 | 1 | OFF | ON

Example: See [Example "Setup an LF sweep"](#) on page 428.

Usage: Query only

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHAPE <Shape>

Sets the cycle mode for a sweep sequence (shape).

Parameters:

<Shape> SAWTooth | TRIangle
 *RST: SAWTooth

Example: See [Example "Setup an LF sweep"](#) on page 428.

Manual operation: See ["Shape"](#) on page 131

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACIng <Spacing>

Selects linear or logarithmic sweep spacing.

Parameters:

<Spacing> LINear | LOGarithmic
 *RST: LINear

Example: See [Example "Setup an LF sweep"](#) on page 428.

Manual operation: See ["Spacing"](#) on page 133

**[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic
<Logarithmic>**

Sets the step width factor for logarithmic sweeps to calculate the frequencies of the steps.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122

Parameters:

<Logarithmic> float
 The unit is mandatory
 Range: 0.01 to 100
 Increment: 0.01
 *RST: 1
 Default unit: PCT

Example: See [Example"Setup an LF sweep"](#) on page 428.

Manual operation: See ["Step Linear/Step Logarithmic"](#) on page 136

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear] <Linear>

Sets the step width for the linear sweep.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122

Parameters:

<Linear> float
 Range: 0.1 to STOP-START
 Increment: 0.1
 *RST: 1000

Example: See [Example"Setup an LF sweep"](#) on page 428.

Manual operation: See ["Step Linear/Step Logarithmic"](#) on page 136

12.14.6 SOURce:LIST Subsystem

The SOURce:LIST subsystem contains all commands for defining lists and for handling of list files.

List files have the predefined file extension *.lsw.

Refer to [Chapter 12.5.2, "Accessing Files in the Default or in a Specified Directory"](#), on page 336 for general information on file handling in the default and in a specific directory.



- *RST does not affect data lists.
- SCPI refers to the individual lists as segments.

Example: Create an RF list and activate the list mode

The following example shows a command sequence to create an RF list and to activate the list mode. Further hardware settings are not considered.

```
// Reset the instrument to start from an initial state
// Query the available list files in the default
// directory /var/user
```

```

// Select the list file or create it (if not existing)
*RST; *CLS
SOUR1:LIST:CAT?
// Response:- shows the name of available list files (if applicable)
SOUR1:LIST:SEL "/var/user/list1.lsw"

// Write the frequency/level/dwell time values in the selected list file
// existing data is overwritten
// Query the number of frequency/power/dwell time entries in the selected list
// Query the amount of free memory (in bytes) for list mode lists
SOUR1:LIST:FREQ 58 MHz, 61 MHz, 73 MHz, 86 MHz, 91 MHz, 92 MHz, 98 MHz
SOUR1:LIST:POW 13 dBm, 12 dBm, 5 dBm, 3 dBm, 0 dBm, 4 dBm, 6 dBm
SOUR1:LIST:DWEL:LIST 10000, 100000, 200000, 19000, 10000, 150000, 220000
SOUR1:LIST:FREQ:POIN?
// 7
SOUR1:LIST:POW:POINT?
// 7
SOUR1:LIST:DWEL:LIST:POIN?
// 7
SOUR1:LIST:FREE?
// 2147483647 (bytes of free memory)

// Use dwell times from list
// Configure the list mode parameters
// Enable RF output
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:MODE "LIST"

OUTP1:STAT ON

// Use global dwell time
// Set only a part of the list (value pairs 3 to 5) to be processed
// Configure the list mode parameters using global dwell time
// Enable RF output
SOUR1:LIST:IND:START 2
SOUR1:LIST:IND:STOP 4
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:LIST 500 ms
OUTP1:STAT ON

// Enable the list mode
// Trigger the list (depending on the mode, not needed with trigger
// mode AUTO); query the current index
// Reset the list to the starting point
SOUR1:FREQ:MODE LIST
SOUR1:LIST:TRIG:EXEC
SOUR1:LIST:RUNN?
SOUR1:LIST:IND?
// 3

```

```

// value changes when the value is queried again
SOUR1:LIST:RES

// For list mode STEP use the following commands
*RST; *CLS
// Change list mode to STEP
SOUR1:LIST:MODE STEP
// Activate RF Output1
OUTP1:STAT 1
// Activate the list mode
SOUR1:FREQ:MODE LIST
// For each step: select frequency/powerlevel pair as index from the list
SOUR1:LIST:IND 2
SOUR1:LIST:IND 3
SOUR1:LIST:IND 4

// Use the selected list for path B (with List Mode B default settings)
SOUR2:LIST:SEL "/var/user/list1.lsw"
OUTP2:STAT ON
SOUR2:FREQ:MODE LIST
SOUR2:LIST:IND?
// 2
// value changes when the value is queried again

// Deactivate the list mode
SOUR1:FREQ:MODE CW

```

Example: List mode data exchange

The following example shows a command sequence to export a list (here the RF list created with the example before) into an ASCII file. Further hardware settings are not considered.

```

*RST; *CLS
LIST:DEXC:MODE EXP

// Set ASCII data parameters
// Set the ASCII file extension, the decimal separator
// and the column separator for the ASCII data
SOUR1:LIST:DEXC:AFIL:EXT CSV
SOUR1:LIST:DEXC:AFIL:SEP:DEC DOT
SOUR1:LIST:DEXC:AFIL:SEP:COL COMM

// Select source and destination path/directory
// Query available listfiles in default directory "/var/user"
SOUR1:LIST:CAT?
// list1
SOUR1:LIST:DEXC:AFIL:SEL "/var/user/list1ASCII"
SOUR1:LIST:DEXC:SEL "/var/user/list1"

// Export the list file data into the ASCII file

```

```
SOUR1:LIST:DEXC:EXEC
```

```
// Query the available ASCII files with extension .csv
```

```
SOUR1:LIST:DEXC:AFIL:CAT?
```

```
// Response: "list1ASCII"
```

```
// Deactivate the list mode
```

```
SOUR1:FREQ:MODE CW
```

- [List Mode Settings](#).....444
- [List Mode File Operation](#).....449
- [List Mode Data Exchange](#).....452

12.14.6.1 List Mode Settings

With the following commands, you can create list mode data, select the trigger mode and determine the dwell time.

[:SOURce<hw>]:LIST:DWELL	444
[:SOURce<hw>]:LIST:DWELL:MODE	445
[:SOURce<hw>]:LIST:DWELL:LIST	445
[:SOURce<hw>]:LIST:DWELL:LIST:POINTS?	445
[:SOURce<hw>]:LIST:FREQuency	446
[:SOURce<hw>]:LIST:FREQuency:POINTS?	446
[:SOURce<hw>]:LIST:INDEX	446
[:SOURce<hw>]:LIST:INDEX:START	447
[:SOURce<hw>]:LIST:INDEX:STOP	447
[:SOURce<hw>]:LIST:MODE	447
[:SOURce<hw>]:LIST:POWer	447
[:SOURce<hw>]:LIST:POWer:POINTS?	448
[:SOURce<hw>]:LIST:TRIGger:EXECute	448
[:SOURce<hw>]:LIST:TRIGger:SOURce	448
[:SOURce<hw>]:LIST:RUNNing?	449

[\[:SOURce<hw>\]:LIST:DWELL <Dwell>](#)

Sets the global dwell time. The instrument generates the signal with the frequency / power value pairs of each list entry for that particular period.

See also [Significant Parameters and Functions](#).

Parameters:

<Dwell>	float
	Range: 1E-3 to 100
	Increment: 1E-6
	*RST: 0.01

Example: See [Example "Create an RF list and activate the list mode"](#) on page 441.

Manual operation: See ["Global Dwell Time"](#) on page 141

[:SOURce<hw>]:LIST:DWELI:MODE <DwellMode>

Selects the dwell time mode.

Parameters:

<DwellMode>

LIST | GLOBal

LIST

Uses the dwell time, specified in the data table for each value pair individually.

GLOBal

Uses a constant dwell time, set with command [:

[SOURce<hw>\]:LIST:DWELL](#).

*RST: GLOBal

Example:

See [Example "Create an RF list and activate the list mode"](#) on page 441.

Manual operation: See ["Dwell Time Mode"](#) on page 140

[:SOURce<hw>]:LIST:DWELI:LIST <Dwell>

Enters the dwell time values in the selected list in μ s.

Parameters:

<Dwell>

<Dwell#1>{, <Dwell#2>, ...} | block data

You can either enter the data as a list of numbers, or as binary block data. The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy. See also :

[FORMat \[:DATA\]](#) on page 356 for more details.

Example:

See [Example "Create an RF list and activate the list mode"](#) on page 441.

Manual operation: See ["Edit List Mode Data"](#) on page 146

[:SOURce<hw>]:LIST:DWELI:LIST:POINTS?

Queries the number (points) of dwell time entries in the selected list.

Return values:

<Points>

integer

Range: 0 to INT_MAX

*RST: 0

Example:

See [Example "Create an RF list and activate the list mode"](#) on page 441.

Usage:

Query only

[:SOURce<hw>]:LIST:FREQuency <Frequency>

Enters the frequency values in the selected list.

Parameters:

<Frequency> <Frequency#1>{, <Frequency#2>, ...} | block data

You can either enter the data as a list of numbers, or as binary block data.

The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.

See also :FORMat [:DATA].

Range: 300 kHz to RFmax (depends on the installed options)

Example: See [Example](#) "Create an RF list and activate the list mode" on page 441.

Manual operation: See ["Edit List Mode Data"](#) on page 146

[:SOURce<hw>]:LIST:FREQuency:POINts?

Queries the number (points) of frequency entries in the selected list.

Return values:

<Points> integer

Range: 0 to INT_MAX

*RST: 0

Example: See [Example](#) "Create an RF list and activate the list mode" on page 441.

Usage: Query only

[:SOURce<hw>]:LIST:INDEx <Index>

Sets the list index in [LIST:MODE STEP](#).

After the trigger signal, the instrument processes the frequency and level settings of the selected index.

Parameters:

<Index> integer

*RST: 0

Example: See [Example](#) "Create an RF list and activate the list mode" on page 441.

Manual operation: See ["Current Index"](#) on page 140

[SOURce<hw>]:LIST:INDEX:START <Start>

[SOURce<hw>]:LIST:INDEX:STOP <Stop>

Sets the start and stop index of the index range which defines a subgroup of frequency/level value pairs in the current list.

Parameters:

<Stop> integer
 Index range
 Only values inside this range are processed in list mode
 Range: 0 to list length
 *RST: 0

Example: See [Example "Create an RF list and activate the list mode"](#) on page 441.

Manual operation: See ["List Range from/to"](#) on page 142

[SOURce<hw>]:LIST:MODE <Mode>

Sets the list mode.

The instrument processes the list according to the selected mode and trigger source. See [LIST:TRIG:SOUR AUTO](#), [SING](#) or [EXT](#) for the description of the trigger source settings.

Parameters:

<Mode> AUTO | STEP
AUTO
 Each trigger event triggers a complete list cycle.
STEP
 Each trigger event triggers only one step in the list processing cycle. The list is processed in ascending order.
 *RST: AUTO

Example: See [Example "Create an RF list and activate the list mode"](#) on page 441.

Manual operation: See ["Mode"](#) on page 140

[SOURce<hw>]:LIST:POWER <Power>

Enters the level values in the selected list. The number of level values must correspond to the number of frequency values. Existing data is overwritten.

Parameters:

<Power> <Power#1>{, <Power#2>, ...} | block data
 You can either enter the data as a list of numbers, or as binary block data.
 The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.

See also : [FORMat \[: DATA \]](#).

Range: depends on the installed options

Default unit: dBm

Example: See [Example"Create an RF list and activate the list mode"](#) on page 441.

Manual operation: See ["Edit List Mode Data"](#) on page 146

[:SOURce<hw>]:LIST:POWer:POINts?

Queries the number (points) of level entries in the selected list.

Return values:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example"Create an RF list and activate the list mode"](#) on page 441.

Usage: Query only

[:SOURce<hw>]:LIST:TRIGger:EXECute

Starts the processing of a list in list mode.

Example: See [Example"Create an RF list and activate the list mode"](#) on page 441.

Usage: Event

Manual operation: See ["Execute Single"](#) on page 141

[:SOURce<hw>]:LIST:TRIGger:SOURce <Source>

Selects the trigger source for processing lists.

The designation of the parameters correspond to those in sweep mode. SCPI standard uses other designations for the parameters, which are also accepted by the instrument. The SCPI designation should be used if compatibility is an important consideration. For an overview, see the following table:

Rohde & Schwarz parameter	SCPI parameter	Applies to the list mode parameters:
AUTO	IMMediate	[:SOURce<hw>] :LIST:MODE AUTO
SINGle	BUS	[:SOURce<hw>] :LIST:MODE AUTO or [:SOURce<hw>] :LIST:MODE STEP
EXTErnal	EXTErnal	[:SOURce<hw>] :LIST:MODE AUTO or [:SOURce<hw>] :LIST:MODE STEP

Parameters:

<Source>

AUTO | IMMediate | SINGle | BUS | EXTErnal

AUTO|IMMediate

The trigger is free-running, i.e. the trigger condition is fulfilled continuously. The selected list is restarted as soon as it is finished.

SINGle|BUS

The list is triggered by the command [:SOURce<hw>] :LIST:TRIGger:EXECute. The list is executed once.

EXTErnal

The list is triggered externally and executed once.

*RST: AUTO

Example:

See [Example "Create an RF list and activate the list mode"](#) on page 441.

Manual operation: See ["Mode"](#) on page 140

[:SOURce<hw>] :LIST:RUNNING?

Queries the current state of the list mode.

Return values:

<State> 0 | 1 | OFF | ON

1

Signal generation based on the list mode is active.

Example:

See [Example "Create an RF list and activate the list mode"](#) on page 441.

Usage:

Query only

12.14.6.2 List Mode File Operation

The following section covers basic commands to file handling in list mode.

[:SOURce<hw>] :LIST:CATalog?	450
[:SOURce<hw>] :LIST:DELeTe	450
[:SOURce<hw>] :LIST:DELeTe:ALL	450

[:SOURce<hw>]:LIST:FREE?	451
[:SOURce<hw>]:LIST:RESet	451
[:SOURce<hw>]:LIST:SElect	451

[\[:SOURce<hw>\]:LIST:CATalog?](#)

Queries the available list files in the specified directory.

Return values:

<Catalog> string
 List of list filenames, separated by commas

Example: See [Example "Create an RF list and activate the list mode"](#) on page 441.

Usage: Query only

Manual operation: See ["List Mode Data"](#) on page 142

[\[:SOURce<hw>\]:LIST:DELeTe <Filename>](#)

Deletes the specified list.

Setting parameters:

<Filename> string
 Filename or complete file path; file extension is optional.

Example: See [\[:SOURce<hw>\]:LIST:DELeTe:ALL](#) on page 450.

Usage: Setting only

Manual operation: See ["List Mode Data"](#) on page 142

[\[:SOURce<hw>\]:LIST:DELeTe:ALL](#)

Deletes all lists in the set directory.

This command can only be executed, if:

- No list file is selected.
- List mode is disabled.

Example:

```

SOUR1:LIST:CAT?
// list,my_list
SOUR1:LIST:DEL "/var/user/list1"
SOUR1:LIST:CAT?
// my_list
SOUR1:FREQ:MODE?
// LIST
SOUR1:LIST:SEL?
// /var/user/my_list.lsw
//deactivate list mode
SOUR1:FREQ:MODE CW
SOUR1:LIST:DELeTe:ALL
SOUR1:LIST:CAT?
// -
// all list files are deleted

```

Usage: Event

Manual operation: See ["List Mode Data"](#) on page 142

[[:SOURce<hw>]:LIST:FREE?

Queries the amount of free memory (in bytes) for list mode lists.

Return values:

<Free> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: See [Example"Create an RF list and activate the list mode"](#) on page 441.

Usage: Query only

[[:SOURce<hw>]:LIST:RESet

Jumps to the beginning of the list.

Example: See [Example"Create an RF list and activate the list mode"](#) on page 441.

Usage: Event

Manual operation: See ["Reset"](#) on page 141

[[:SOURce<hw>]:LIST:SElect <Filename>

Selects or creates a data list in list mode.

If the list with the selected name does not exist, a new list is created.

Parameters:

<Filename> string
 Filename or complete file path; file extension can be omitted.

Example: See [Example "Create an RF list and activate the list mode"](#) on page 441.

Manual operation: See ["List Mode Data"](#) on page 142
 See ["Functions for handling of data lists"](#) on page 208

12.14.6.3 List Mode Data Exchange

With the following commands, you can configure lists in ASCII format and export or import them accordingly.

[:SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?	452
[:SOURce<hw>]:LIST:DEXChange:EXECute	452
[:SOURce<hw>]:LIST:DEXChange:AFILe:EXTension	453
[:SOURce<hw>]:LIST:DEXChange:AFILe:SElect	453
[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn	453
[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal	453
[:SOURce<hw>]:LIST:DEXChange:MODE	454
[:SOURce<hw>]:LIST:DEXChange:SElect	454

[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:CATalog?](#)

Queries the available ASCII files for export or import of list mode data in the current or specified directory.

Return values:

<Catalog> string
 List of ASCII files *.txt or *.csv, separated by commas.

Example: See [Example "List mode data exchange"](#) on page 443.

Usage: Query only

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 96

[\[:SOURce<hw>\]:LIST:DEXChange:EXECute](#)

Executes the import or export of the selected list file, according to the previously set transfer direction with command [\[:SOURce<hw>\]:LIST:DEXChange:MODE](#)

Example: See [Example "List mode data exchange"](#) on page 443.

Usage: Event

Manual operation: See ["Import / Export"](#) on page 96

[:SOURce<hw>]:LIST:DEXChange:AFILe:EXTension <Extension>

Determines the extension of the ASCII file for import or export, or to query existing files.

Parameters:

<Extension> TXT | CSV
*RST: TXT

Example: See [Example "List mode data exchange"](#) on page 443.

Manual operation: See ["ASCII File Settings"](#) on page 95

[:SOURce<hw>]:LIST:DEXChange:AFILe:SELEct <Filename>

Selects the ASCII file to be imported or exported.

Parameters:

<Filename> string
Filename or complete file path; file extension can be omitted.

Example: See [Example "List mode data exchange"](#) on page 443.

Manual operation: See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 96

[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn <Column>

Selects the separator between the frequency and level column of the ASCII table.

Parameters:

<Column> TABulator | SEMicolon | COMMa | SPACe
*RST: COMMa

Example: See [Example "List mode data exchange"](#) on page 443.

Manual operation: See ["ASCII File Settings"](#) on page 95

[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal <Decimal>

Sets "." (decimal point) or "," (comma) as the decimal separator used in the ASCII data with floating-point numerals.

Parameters:

<Decimal> DOT | COMMa
*RST: DOT

Example: See [Example "List mode data exchange"](#) on page 443.

Manual operation: See ["ASCII File Settings"](#) on page 95

[:SOURce<hw>]:LIST:DEXChange:MODE <Mode>

Determines the import or export of a list.

Specify the source or destination file with the command `[:SOURce<hw>]:LIST:DEXChange:SElect`.

Parameters:

<Mode> IMPort | EXPort
*RST: IMPort

Example: See [Example "List mode data exchange"](#) on page 443.

Manual operation: See ["Mode"](#) on page 95

[:SOURce<hw>]:LIST:DEXChange:SElect <Filename>

Selects the ASCII file for import or export, containing a list.

Parameters:

<Filename> string
Filename or complete file path; file extension can be omitted.

Example: See [Example "List mode data exchange"](#) on page 443.

Manual operation: See ["Select Source/Select ASCII Destination"](#) on page 96

12.14.7 SOURce:NOISe Subsystem

The SOURce:NOISe subsystem contains the commands for:

- Setting the noise modulation signal. The noise generator is optional.

Example: Configuring the noise generator

```
SOURce1:NOISe:DIStributioN GAUSs
SOURce1:NOISe:BANDwidth 10000000
SOURce1:NOISe:BANDwidth:STATe 1
```

```
SOURce1:LFOutput1:SOURce NOIS
SOURce1:LFOutput1:STATe 1
```

```
SOURce1:NOISe:LEVel:RELative?
// -83.86
SOURce1:NOISe:LEVel:ABSolute?
// -13.86
```

- [Noise Generator](#).....455

12.14.7.1 Noise Generator

[:SOURce<hw>]:NOISe:BANDwidth BWIDTH.....	455
[:SOURce<hw>]:NOISe:BWIDth:STATe.....	455
[:SOURce<hw>]:NOISe:DISTRibution.....	455
[:SOURce<hw>]:NOISe:LEVel:RELative?.....	455
[:SOURce<hw>]:NOISe:LEVel[:ABSolute]?.....	456

[:SOURce<hw>]:NOISe:BANDwidth|BWIDTH <BWidth>

Sets the noise level in the system bandwidth when bandwidth limitation is enabled.

Parameters:

<BWidth>	float
Range:	100E3 to 10E6
Increment:	100E3
*RST:	100E3

Example: See [Example"Configuring the noise generator"](#) on page 454.

Manual operation: See ["Bandwidth"](#) on page 105

[:SOURce<hw>]:NOISe:BWIDth:STATe <State>

Activates noise bandwidth limitation.

Parameters:

<State>	0 1 OFF ON
*RST:	0

Example: See [Example"Configuring the noise generator"](#) on page 454.

Manual operation: See ["Bandwidth"](#) on page 105

[:SOURce<hw>]:NOISe:DISTRibution <Distribution>

Sets the distribution of the noise power density.

Parameters:

<Distribution>	GAUSs EQUal
*RST:	GAUSs

Example: See [Example"Configuring the noise generator"](#) on page 454.

Manual operation: See ["Distribution"](#) on page 105

[:SOURce<hw>]:NOISe:LEVel:RELative?

Queries the level of the noise signal per Hz in the total bandwidth.

Return values:

<Relative> float
 Range: -149.18 to -52.67
 Increment: 0.1
 *RST: -69.84

Example: See [Example "Configuring the noise generator"](#) on page 454.

Usage: Query only

Manual operation: See ["Noise Density"](#) on page 107

[SOURce<hw>]:NOISe:LEVel[:ABSolute]?

Queries the level of the noise signal in the system bandwidth within the enabled bandwidth limitation.

Return values:

<Absolute> float
 Noise level within the bandwidth limitation
 *RST: 3.84 MHz

Example: See [Example "Configuring the noise generator"](#) on page 454.

Usage: Query only

Manual operation: See ["Noise Level"](#) on page 108

12.14.8 SOURce:PGEN Subsystem

The PGEN subsystem contains the commands for setting output of the pulse modulation signal.

Example: Using pulse generator as source for pulse modulation

```
// select pulse generator as source for pulse modulation
// enable pulse modulation
SOURce1:PULM:SOURce INT
SOURce1:PULM:STATe 1
// pulse generator and signal output are also activated
SOURce1:PGENerator:STATe?
// 1
SOURce1:PGENerator:OUTPut:STATe?
// 1
PGENerator:OUTPut:POLarity NORMal
// to disable pulse generator
SOURce1:PGENerator:STATe 0
// activate the pulse modulation of the RF carrier
SOURce1:PULM:STATe 1
```

[:SOURce<hw>]:PGENerator:OUTPut:POLarity	457
[:SOURce<hw>]:PGENerator:OUTPut[:STATe]	457
[:SOURce<hw>]:PGENerator:STATe	457

`[:SOURce<hw>]:PGENerator:OUTPut:POLarity` <Polarity>

Sets the polarity of the pulse output signal.

Parameters:

<Polarity> NORMal | INVerted

NORMal

Outputs the pulse signal during the pulse width, that means during the high state.

INVerted

Inverts the pulse output signal polarity. The pulse output signal is suppressed during the pulse width, but provided during the low state.

*RST: NORMal

Example: See [Example"Using pulse generator as source for pulse modulation"](#) on page 456.

Manual operation: See ["Pulse Output Polarity"](#) on page 90

`[:SOURce<hw>]:PGENerator:OUTPut[:STATe]` <State>

Activates the output of the pulse modulation signal.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example: See [Example"Using pulse generator as source for pulse modulation"](#) on page 456.

Manual operation: See ["Pulse Output State"](#) on page 89

`[:SOURce<hw>]:PGENerator:STATe` <State>

Enables the output of the video/sync signal.

If the pulse generator is the current modulation source, activating the pulse modulation automatically activates the signal output and the pulse generator.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example: See [Example"Using pulse generator as source for pulse modulation"](#) on page 456.

12.14.9 SOURce:PHASe Subsystem

This subsystem contains the commands for adjusting the phase of the RF output signal relative to a reference signal of the same frequency.

Example: Programming Example

```
// change the phase relative to the current phase
SOURce1:PHASe 2 DEG
// adopt the setting as the current phase
SOURce1:PHASe:REFeRence
```

The following commands are available:

[:SOURce<hw>]:PHASe	458
[:SOURce<hw>]:PHASe:REFeRence	458

[\[:SOURce<hw>\]:PHASe](#) <Phase>

Sets the phase variation relative to the current phase.

Parameters:

<Phase>	float
Range:	-36000 to 36000
Increment:	0.001
*RST:	0
Default unit:	DEG

Example: See [Example"Programming Example"](#) on page 458.

Manual operation: See ["Delta Phase"](#) on page 67

[\[:SOURce<hw>\]:PHASe:REFeRence](#)

Assigns the value set with command [\[:SOURce<hw>\]:PHASe](#) as the reference phase.

Example: See [Example"Programming Example"](#) on page 458.

Usage: Event

Manual operation: See ["Reset Delta Phase Display"](#) on page 67

12.14.10 SOURce:POWer Subsystem

The SOURce:POWer subsystem contains the commands for setting the output level, level control and level correction of the RF signal.

The default units are dBm. To change the units, perform one of the following:

- Enter the unit after the numerical value
Example: `:POW 0.5V`
- Set the unit with the command [:UNIT:POWer](#).

[:SOURce<hw>]:POWer:ALC:MODE?	459
[:SOURce<hw>]:POWer:ALC[:STATe]	459
[:SOURce<hw>]:POWer:ALC:DSEnsitivity	460
[:SOURce<hw>]:POWer:ALC:SONCe	460
[:SOURce<hw>]:POWer:ATTenuation:RFOff:MODE	460
[:SOURce<hw>]:POWer:EMF:STATe	461
[:SOURce<hw>]:POWer:LBEHaviour	461
[:SOURce<hw>]:POWer:LIMit[:AMPLitude]	461
[:SOURce<hw>]:POWer:MANual	462
[:SOURce<hw>]:POWer:MODE	462
[:SOURce<hw>]:POWer:POWer	463
[:SOURce<hw>]:POWer:START	463
[:SOURce<hw>]:POWer:STOP	463
[:SOURce<hw>]:POWer:STEP:MODE	464
[:SOURce<hw>]:POWer:STEP[:INCRement]	464
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:OFFSet	464
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL	465
[:SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude]	465
[:SOURce<hw>]:POWer:RANGe:LOWer?	466
[:SOURce<hw>]:POWer:RANGe:UPPer?	466
[:SOURce]:POWer:WIGNore	466

`[:SOURce<hw>]:POWer:ALC:MODE?`

Queries the currently set ALC mode.

See [\[:SOURce<hw>\]:POWer:ALC\[:STATe\]](#) on page 459.

Return values:

`<PowAlcMode>` 0 | AUTO | 1 | PRESet | OFFTable | ON | OFF | ONSample | ONTable

Example:

`POW:ALC:MODE?`

Response: ONTable "Table and On" is set automatically.

Usage:

Query only

`[:SOURce<hw>]:POWer:ALC[:STATe] <State>`

Parameters:

`<State>` 0 | OFF | AUTO | 1 | ON | ONTable | PRESet | OFFTable

AUTO

Adjusts the output level to the operating conditions automatically.

1|ON

Activates internal level control permanently.

OFFTable

Controls the level using attenuation values of the internal ALC table.

0|OFF

Deactivates the ALC, but allows you to recalibrate the level at each frequency and level change. The value remains up to the next change.

ONTable

Starts with the attenuation setting from the table and continues with automatic level control.

*RST: AUTO

Example:

POW:ALC ON

Activates internal level control.

Manual operation: See ["State"](#) on page 155

[SOURce<hw>]:POWER:ALC:DSENSitivity <Sensitivity>

Sets the sensitivity of the ALC detector.

Parameters:

<Sensitivity>

AUTO | FIXed | LOW | MEDium | HIGH

AUTO

Selects the optimum sensitivity automatically.

LOW|MEDium|HIGH

Sets either low, medium or high sensitivity.

FIXed

Fixes the internal level detector.

*RST: AUTO

Example:

POW:ALC:DSEN FIX

Manual operation: See ["Detector Sensitivity"](#) on page 155

[SOURce<hw>]:POWER:ALC:SONCe

Activates level control for correction purposes temporarily.

Example:

POW:ALC OFF

Deactivates automatic level control at the RF output.

POW:ALC:SONC

Executes level control (once).

Usage:

Event

Manual operation: See ["Readjust"](#) on page 65

[SOURce<hw>]:POWER:ATTenuation:RFOff:MODE <Mode>

Selects the state the attenuator is to assume if the RF signal is switched off.

Parameters:

<Mode>

UNCHanged | FATTenuation

FATTenuation

The step attenuator switches to maximum attenuation

UNCHanged

Retains the current setting and keeps the output impedance constant during RF off.

*RST: n.a. (factory preset: FATTenuation)

Example:

```
SOURce1:POWer:ATTenuation:RFOff:MODE
FATTenuation
```

uses maximum attenuation when the RF output is turned off.

Manual operation: See ["RF OFF Mode"](#) on page 153

[SOURce<hw>]:POWer:EMF:STATe <State>

Displays the signal level as voltage of the EMF. The displayed value represents the voltage over a 50 Ohm load.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: n.a. (factory preset: 0)

Example:

```
POW:EMF:STAT 1
```

Activates voltage level display.

Manual operation: See ["Display Level as Voltage of EMF"](#) on page 231

[SOURce<hw>]:POWer:LBEHaviour <Behaviour>

Selects the level behavior at the RF output over time.

Parameters:

<Behaviour> AUTO | UNInterrupted | MONotone | CVSWr | USER | CPHase

UNInterrupted|MONotone

Uninterrupted level settings and strictly monotone modes.

CWSWr

Constant VSWR

*RST: AUTO

Example:

```
SOURce1:POWer:LBEHaviour AUTO
```

Manual operation: See ["Setting Characteristics"](#) on page 64

[SOURce<hw>]:POWer:LIMit[:AMPLitude] <Amplitude>

Limits the maximum RF output level in CW and sweep mode.

It does not influence the "Level" display or the response to the query `[[:SOURce<hw>]:POWer[:LEVel] [:IMMediate] [:AMPLitude]]`.

Parameters:

<Amplitude> float
 Range: depends on the installed options
 Increment: 0.01
 *RST: n.a. (factory preset: 30)

Example: SOURce1:POWer:LIMit:AMPLitude 10

Manual operation: See "Limit" on page 64

[:SOURce<hw>]:POWer:MANual <Manual>

Sets the level for the subsequent sweep step if `SWE:POW:MODE MAN`.

Use a separate command for each sweep step.

Parameters:

<Manual> float
 You can select any level within the setting range, where:
 START is set with `[:SOURce<hw>]:POWer:START`
 STOP is set with `[:SOURce<hw>]:POWer:STOP`
 OFFSet is set with `[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:OFFSet`
 Range: (START + OFFSet) to (STOP + OFFSet)
 Increment: 0.01
 Default unit: dBm

Example: See "Example"Setup an RF frequency or power sweep" on page 472

Manual operation: See "Current Level" on page 130

[:SOURce<hw>]:POWer:MODE <Mode>

Selects the operating mode of the instrument to set the output level.

Parameters:

<Mode> CW | FIXed | SWEep
CW|FIXed
 Operates at a constant level.
 CW and FIXed are synonyms.
 To set the output level value, use the command `[:SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude]`.
SWEep
 Sets sweep mode.
 Set the range and current level with the commands:
`[:SOURce<hw>]:POWer:START` and `[:SOURce<hw>]:POWer:STOP`,
`[:SOURce<hw>]:POWer:MANual`.

*RST: CW

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472

Manual operation: See ["State \(RF level sweep\)"](#) on page 129
See ["State \(RF frequency / level sweep\)"](#) on page 130

[:SOURce<hw>]:POWER:POWER <Power>

Sets the level **at the RF output** connector.

This value does not consider a specified offset.

The command `[:SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude]` sets the level of the "Level" display, that means the level containing offset.

See ["RF frequency and level display with a downstream instrument"](#) on page 59.

Parameters:

<Power> float
Level at the RF output, without level offset
Range: See data sheet
Increment: 0.01
Default unit: dBm

Example: `SOURce1:POWER:POWER 15`
Sets the level at RF output

Manual operation: See ["Amplitude"](#) on page 63

[:SOURce<hw>]:POWER:START <Start>

[:SOURce<hw>]:POWER:STOP <Stop>

Sets the RF start/stop level in sweep mode.

Parameters:

<Stop> float
Sets the setting range calculated as follows:
 $(Level_min + OFFSET) \text{ to } (Level_max + OFFSET)$
Where the values are set with the commands:
`[:SOURce<hw>]:POWER[:LEVel][:IMMediate]:OFFSET`
`[:SOURce<hw>]:POWER:START`
`[:SOURce<hw>]:POWER:STOP`
Range: Minimum level to maximum level
*RST: -30 (Start)/ -10 (Stop)
Default unit: dBm

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472

Manual operation: See ["Start Level / Stop Level"](#) on page 137

[:SOURce<hw>]:POWER:STEP:MODE <Mode>

Defines the type of step width to vary the RF output power step-by-step with the commands `POW UP` or `POW DOWN`.

Parameters:

<Mode> DECimal | USER

DECimal

Increases or decreases the level in steps of ten.

USER

Increases or decreases the level in increments, determined with the command `[:SOURce<hw>]:POWER:STEP[:INCRement]`.

*RST: DECimal

Example:

```
SOURce1:POWER:STEP:INCRement 2
SOURce1:POWER:STEP:MODE USER
SOURce1:POWER:LEVel:IMMediate:AMPLitude UP
Increasing the RF level with a step size of 2 dB
```

Manual operation: See "[Variation Active](#)" on page 62

[:SOURce<hw>]:POWER:STEP[:INCRement] <Increment>

Specifies the step width in the appropriate path for `POW:STEP:MODE USER`.

To adjust the level step-by-step with this increment value, use the command `POW UP`, or `POW DOWN`.

Note: The command also sets "Variation Step" in the manual control, that means the user-defined step width for setting the level with the rotary knob or the [Up/Down] arrow keys.

Parameters:

<Increment> float
 Range: 0 to 200
 Increment: 0.01
 *RST: 1
 Default unit: dB

Example: See `[:SOURce<hw>]:POWER:STEP:MODE` on page 464.

Manual operation: See "[Variation Step](#)" on page 62

[:SOURce<hw>]:POWER[:LEVel][:IMMediate]:OFFSet <Offset>

Sets the level offset of a downstream instrument.

The level at the RF output is not changed.

To query the resulting level, as it is at the output of the downstream instrument, use the command `[:SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude]`.

See "[RF frequency and level display with a downstream instrument](#)" on page 59.

Note: The level offset also affects the RF level sweep.

Parameters:

<Offset> float
 Range: -100 to 100
 Increment: 0.01
 *RST: 0
 Default unit: dB
 Level offset is always expreced in dB; linear units (V, W, etc.) are not supported

Example: POWer:OFFSet 10
 Sets the RF level offset to 10 dB

Manual operation: See "Offset" on page 64

[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL <Rcl>

Determines whether the current level is retained or if the stored level setting is adopted when an instrument configuration is loaded.

Parameters:

<Rcl> INCLude | EXCLude
INCLude
 Takes the current level when an instrument configuration is loaded.
EXCLude
 Retains the current level when an instrument configuration is loaded.
 *RST: INCLude

Example: POW:RCL INCL
 Takes the level value from an instrument configuration loaded with command *RCL.

Manual operation: See "Exclude Level" on page 205

[:SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude] <Amplitude>

Sets the RF level applied to the DUT.

To activate the RF output use command :OUTPut<hw>[:STATe] ("RF On"/"RF Off").

The following applies $POWER = RF \text{ output level} + OFFSET$, where:

- POWER is the values set with [:SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude]
- RF output level is set with [:SOURce<hw>]:POWer:POWer
- OFFSET is set with [:SOURce<hw>]:POWer[:LEVel][:IMMediate]:OFFSet

Parameters:

<Amplitude> float

The following settings influence the value range:

OFFSet set with the command `[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] :OFFSet`

Numerical value

Sets the level

UP|DOWN

Varies the level step by step.

The level is increased or decreased by the value set with the command `[:SOURce<hw>] :POWer:STEP [:INCRement]`.

Range: (Level_min + OFFSet) to (Level_max + OFFSet)

*RST: -30

Default unit: dBm

Example: `POWer -30`
Sets the RF level

Example: See also `[:SOURce<hw>] :POWer:STEP:MODE` on page 464.

Manual operation: See "Amplitude" on page 63

`[:SOURce<hw>] :POWer:RANGe:LOWer?`

`[:SOURce<hw>] :POWer:RANGe:UPPer?`

Queries the current interruption-free range of the level.

Return values:

<Upper> float
Increment: 0.01
Default unit: dBm

Example: `SOURce1:POWer:RANGe:UPPer?`
`// -15`
`SOURce1:POWer:RANGe:LOW?`
`// -50`

Usage: Query only

Manual operation: See "Level Range" on page 65

`[:SOURce] :POWer:WIGNore <State>`

Ignores level range warnings.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: n.a. (factory preset: 0)

Example: `SOURce:POWer:WIGNore 1`

12.14.11 SOURce:ROSCillator Subsystem

The SOURce:ROSCillator subsystem contains the commands for setting the external and internal reference frequency.



The commands of this subsystem are not affected by an instrument reset (*RST on page 331).

Example: Configuring the reference oscillator

```
// Using 100 MHz external reference source
SOURce:ROSCillator:PRESet
SOURce:ROSCillator:SOURce EXT
SOURce:ROSCillator:EXternal:RFOFF:STATe 1
SOURce:ROSCillator:EXternal:FREQuency 100MHZ
SOURce:ROSCillator:EXternal:SBANDwidth WIDE
// 100 MHz (loop through) and 1 GHz output
SOURce:ROSCillator:OUTPut:FREQuency:MODE LOOP
SOURce:ROSCillator:OUTPut:ALternate:FREQuency:MODE DER1G
SOURce:ROSCillator:INTernal:ADJust:STATe 0

// Variable external reference frequency
// SOURce:ROSCillator:EXternal:FREQuency VAR
// SOURce:ROSCillator:EXternal:FREQuency:VARIABLE 100000000

// Using the internal reference frequency
SOURce:ROSCillator:SOURce INT
SOURce:ROSCillator:INTernal:TUNing:STATe 1
SOURce:ROSCillator:INTernal:TUNing:SLOPe LOW
// 10 MHz and 1 GHz output
SOURce:ROSCillator:OUTPut:FREQuency:MODE DER10M
SOURce:ROSCillator:OUTPut:ALternate:FREQuency:MODE DER1G

// Query calibration value
CALibration:ROSCillator?
// 32767
// Set an internal source
// Activate user-defined adjustment value of 1000
SOURce:ROSCillator:SOURce INT
SOURce:ROSCillator:INTernal:ADJust:STATe 1
SOURce:ROSCillator:INTernal:ADJust:VALue 1000

// to resume calibrated state
SOURce:ROSCillator:INTernal:ADJust:VALue 0
SOURce:ROSCillator:INTernal:ADJust:STATe 0
// or
// SYSTem:FPreSt
```

[SOURce]:ROSCillator:PRESet.....	468
[SOURce]:ROSCillator:SOURce.....	468
[SOURce]:ROSCillator:EXternal:RFOFF[:STATe].....	468

[SOURce]:ROSCillator:EXTernal:FREQuency.....	468
[SOURce]:ROSCillator:EXTernal:FREQuency:VARiable.....	469
[SOURce]:ROSCillator:EXTernal:SBANdwidth.....	469
[SOURce]:ROSCillator:EXTernal:MLRange?.....	469
[SOURce]:ROSCillator:EXTernal:NSBandwidth?.....	470
[SOURce]:ROSCillator:OUTPut:FREQuency:MODE.....	470
[SOURce]:ROSCillator:OUTPut:ALTerNate:FREQuency:MODE.....	470
[SOURce]:ROSCillator[:INTernal]:ADJust:VALue.....	471
[SOURce]:ROSCillator[:INTernal]:ADJust[:STATe].....	471

[SOURce]:ROSCillator:PRESet

Resets the reference oscillator settings.

Example: See [Example"Configuring the reference oscillator"](#) on page 467.

Usage: Event

Manual operation: See ["Set to Default"](#) on page 186

[SOURce]:ROSCillator:SOURce <Source>

Selects between internal or external reference frequency.

Parameters:

<Source> INTernal | EXTernal
 *RST: n.a. (factory preset: INTernal)

Example: See [Example"Configuring the reference oscillator"](#) on page 467.

Manual operation: See ["Source"](#) on page 186

[SOURce]:ROSCillator:EXTernal:RFOFF[:STATe] <State>

Determines that the RF output is turned off when the external reference signal is selected, but missing.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: n.a. (factory preset: 0)

Example: See [Example"Configuring the reference oscillator"](#) on page 467.

Manual operation: See ["Deactivate RF Output \(if external reference is missing\)"](#) on page 186

[SOURce]:ROSCillator:EXTernal:FREQuency <Frequency>

Sets the frequency of the external reference.

Parameters:

<Frequency> 100MHZ | 1GHZ | VARiable | 10MHZ
 *RST: n.a. (factory preset: 10MHZ)

- Example:** See [Example"Configuring the reference oscillator"](#) on page 467.
- Options:** VARIable requires R&S SMBB-K704
1GHZ requires R&S SMBB-B3
- Manual operation:** See ["External Reference Frequency"](#) on page 186

[[:SOURce]:ROSCillator:EXTernal:FREQUENCY:VARIABLE <Frequency>

Specifies the user-defined external reference frequency.

Parameters:

<Frequency> float
Range: 1E6 to 100E6
Increment: 0.1
*RST: n.a. (factory preset: 1E7)
Default unit: Hz

- Example:** See [Example"Configuring the reference oscillator"](#) on page 467.
- Options:** R&S SMBB-K704
- Manual operation:** See ["Variable Reference Frequency"](#) on page 187

[[:SOURce]:ROSCillator:EXTernal:SBANDwidth <SBandwidth>

Selects the synchronization bandwidth for the external reference signal.

Depending on the RF hardware version, and the installed options, the synchronisation bandwidth varies.

For more information, see data sheet.

Parameters:

<SBandwidth> WIDE | NARRow
NARRow
The synchronization bandwidth is a few Hz.
WIDE
Uses the widest possible synchronization bandwidth.
*RST: n.a. (factory preset)

- Example:** See [Example"Configuring the reference oscillator"](#) on page 467.
- Manual operation:** See ["Synchronization Bandwidth"](#) on page 187

[[:SOURce]:ROSCillator:EXTernal:MLRange?

Queries the minimum locking range for the selected external reference frequency.

Depending on the RF hardware version, and the installed options, the minimum locking range varies.

For more information, see data sheet.

Return values:

<MinLockRange> string

Example:

SOUR:ROSC:EXT:MLR?

Usage:

Query only

Manual operation: See ["Minimum Locking Range"](#) on page 187**[[:SOURce]:ROSCillator:EXTernal:NSBandwidth?**

Queries the nominal synchronization bandwidth for the selected external reference frequency and synchronization bandwidth.

Return values:

<NomBandwidth> string

Example:

SOUR:ROSC:EXT:NSB?

Usage:

Query only

Manual operation: See ["Nominal Synchronization Bandwidth"](#) on page 187**[[:SOURce]:ROSCillator:OUTPut:FREQuency:MODE <OutpFreqMode>**

Selects the mode for the output reference frequency.

Parameters:

<OutpFreqMode> DER10M | OFF | LOOPthrough

OFF

Disables the output.

DER10M

Sets the output reference frequency to 10 MHz.

The reference frequency is derived from the internal reference frequency.

LOOPthrough

This option is unavailable for

ROSCillator:EXTernal:FREQuency 1GHZ. Forwards the input reference frequency to the reference frequency output.

*RST: n.a. (factory preset: DER10M)

Example: See [Example"Configuring the reference oscillator"](#) on page 467.**Manual operation:** See ["Reference Output/1 GHz Reference Output"](#) on page 188**[[:SOURce]:ROSCillator:OUTPut:ALTernate:FREQuency:MODE <OutpFreqMode>**

Sets the output reference frequency.

Parameters:

<OutpFreqMode> LOOPthrough | DER1G | OFF

OFF

Disables the output.

DER1G

Sets the output reference frequency to 1 GHz.

The reference frequency is derived from the internal reference frequency.

LOOPthrough

If `[[:SOURce]:ROSCillator:EXternal:FREQuency 1GHZ,` forwards the input reference frequency to the reference frequency output.

*RST: n.a. (factory preset: OFF)

Example: See [Example"Configuring the reference oscillator"](#) on page 467.

Options: DER1G requires R&S SMBB-B3

Manual operation: See ["Reference Output/1 GHz Reference Output"](#) on page 188

[[:SOURce]:ROSCillator[:INTernal]:ADJust:VALue <Value>

Specifies the frequency correction value (adjustment value).

Parameters:

<Value> integer

*RST: 0

Example: See `[[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe]` on page 471

Manual operation: See ["Adjustment Value"](#) on page 189

[[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe] <State>

Determines whether the calibrated (off) or a user-defined (on) **adjustment value** is used for fine adjustment of the frequency.

Parameters:

<State> 0 | 1 | OFF | ON

0

Fine adjustment with the calibrated frequency value

1

User-defined adjustment value.

The instrument is no longer in the calibrated state.

The calibration value is, however, not changed. The instrument resumes the calibrated state if you send

`SOURce:ROSCillator:INTernal:ADJust:STATe 0.`

*RST: n.a. (factory preset: 0)

Example: See [Example"Configuring the reference oscillator"](#) on page 467.

Manual operation: See ["Adjustment Active"](#) on page 189

12.14.12 SOURce:SWEep Subsystem

The SOURce:SWEep subsystem contains the commands for configuring RF sweep signals.



- The keyword [:FREQuency] can be omitted, then the commands are SCPI-compliant.
- To activate an RF sweep mode, use the following commands:
 - RF frequency sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
 - RF level sweep: SOURce:POWEr:MODE SWEep (SOURce:POWEr:MODE CW (off))
 - RF combined sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
- All sweeps, including the LF sweep, can be set independently of each other.
- All sweeps can be set independently of each other.

See [Chapter 6.1, "Signal Generation and Triggering in the Sweep and List Modes"](#), on page 114.

Example: Setup an RF frequency or power sweep

The following example shows a command sequence to set up an RF frequency sweep, triggered by the execute command. For an RF power sweep, replace FREQuency in the SWEep commands with POWEr.

Exceptions are the power spacing (defined with LINear only) and the power step width (defined with LOGarithmic only).

```
// Reset the instrument to start from an initial state
// Switch off display update to improve performance
// (especially with short dwell times)
// Set the sweep mode (first two commands) and the sweep range
// Select linear spacing
// Select the waveform shape for the frequency sweep
*RST; *CLS
SYSTem:DISPlay:UPDate OFF
TRIGger1:FSWep:SOURce SINGLE
SOURce1:SWEep:FREQuency:MODE AUTO
SOURce1:FREQuency:SPAN 300 MHz
SOURce1:FREQuency:CENTer 200 MHz
// Alternatively use
// SOURce1:FREQuency:START 50 MHz
// SOURce1:FREQuency:STOP 350 MHz
SOURce1:SWEep:FREQuency:SPACing LINear
SOURce1:SWEep:FREQuency:SHApe SAWTooth

// Activate change to start frequency while waiting for next trigger
// Prerequisites: sweep mode single and sweep waveform sawtooth
```

```

SOURcel:SWEep:FREQuency:RETRace 1
// Alternatively reset all sweeps to their initial value
SOURcel:SWEep:RESet:ALL

// Set the step width and dwell time
SOURcel:SWEep:FREQuency:STEP:LINear 1 MHz
// Alternatively set the number of steps, then the sweep step width is
// set automatically
SOURcel:SWEep:FREQuency:POINTs 301
SOURcel:SWEep:FREQuency:DWELL 500 ms
// With logarithmic spacing select the step width as follows
// (steps of 10 percent of the previous frequency in each instance)
SOURcel:SWEep:FREQuency:SPACing LOG
SOURcel:SWEep:FREQuency:STEP:LOGarithmic 10PCT

// Activate the sweep
// Trigger the sweep (depending on the set mode) and query the status
SOURcel:FREQuency:MODE SWEep
// Perform a one-off RF frequency sweep
SOURcel:SWEep:FREQuency:EXECute
SOURcel:SWEep:FREQuency:RUNning?
// 1
// the frequency sweep is running

// For manual step RF sweep use the following commands
*RST; *CLS
// Activate manual step RF sweep
SOURcel:SWEep:FREQuency:MODE MANual
// Activate the RF frequency sweep.
SOURcel:FREQuency:MODE SWEep
// Activate RF Output1.
Output1:STATe 1
// Input the frequency manually for each step
SOURcel:FREQuency:MANual 200 MHz
SOURcel:FREQuency:MANual 201 MHz
// Alternatively use the UP or DOWN commands with the set step width.
SOURcel:SWEep:FREQuency:STEP:LINear 1 MHz
SOURcel:FREQuency:MANual UP

// Activate combined RF frequency / level sweep
*RST; *CLS
*RST; *CLS
SYSTem:DISPlay:UPDate OFF
TRIGger1:FSWep:SOURce SINGLE
SOURcel:SWEep:COMBined:MODE AUTO
SOURcel:SWEep:COMBined:COUNt 200
SOURcel:FREQuency:STARt 1000000000 Hz
SOURcel:FREQuency:STOP 5000000000 Hz
SOURcel:POWer:STARt -30 dBm
SOURcel:POWer:STOP -10 dBm

```

```

SOURce1:SWEEP:COMBined:RETRace 1
SOURce1:SWEEP:COMBined:SHAPE SAWT
SOURce1:SWEEP:COMBined:DWELL 0.01
// Activate combined RF frequency/level sweep
SOURce1:FREQuency:MODE COMB
// Activate RF Output1.
Output1:STATe 1
// Execute combined frequency / level sweep
SOURce1:SWEEP:COMBined:EXECute

```

[SOURce<hw>]:SWEEP:POWER:DWELL.....	474
[SOURce<hw>]:SWEEP:POWER:MODE.....	475
[SOURce<hw>]:SWEEP:POWER:POINTS.....	475
[SOURce<hw>]:SWEEP:POWER:SPACing:MODE?.....	475
[SOURce<hw>]:SWEEP:POWER:STEP[:LOGarithmic].....	476
[SOURce<hw>]:SWEEP[:FREQuency]:DWELL.....	476
[SOURce<hw>]:SWEEP[:FREQuency]:MODE.....	476
[SOURce<hw>]:SWEEP[:FREQuency]:POINTS.....	477
[SOURce<hw>]:SWEEP[:FREQuency]:SPACing.....	477
[SOURce<hw>]:SWEEP:POWER:SHAPE.....	478
[SOURce<hw>]:SWEEP[:FREQuency]:SHAPE.....	478
[SOURce<hw>]:SWEEP:POWER:EXECute.....	478
[SOURce<hw>]:SWEEP[:FREQuency]:EXECute.....	478
[SOURce<hw>]:SWEEP:POWER:RETRace.....	478
[SOURce<hw>]:SWEEP[:FREQuency]:RETRace.....	478
[SOURce<hw>]:SWEEP:POWER:RUNNing?.....	479
[SOURce<hw>]:SWEEP[:FREQuency]:RUNNing?.....	479
[SOURce<hw>]:SWEEP[:FREQuency]:STEP:LOGarithmic.....	479
[SOURce<hw>]:SWEEP[:FREQuency]:STEP[:LINear].....	479
[SOURce<hw>]:COMBined:FREQuency:START.....	480
[SOURce<hw>]:COMBined:FREQuency:STOP.....	480
[SOURce<hw>]:COMBined:POWER:START.....	480
[SOURce<hw>]:COMBined:POWER:STOP.....	481
[SOURce<hw>]:SWEEP:COMBined:COUNt.....	481
[SOURce<hw>]:SWEEP:COMBined:DWELL.....	481
[SOURce<hw>]:SWEEP:COMBined:EXECute.....	481
[SOURce<hw>]:SWEEP:COMBined:MODE.....	482
[SOURce<hw>]:SWEEP:COMBined:RETRace.....	482
[SOURce<hw>]:SWEEP:COMBined:SHAPE.....	483
[SOURce<hw>]:SWEEP:RESet[:ALL].....	483

[SOURce<hw>]:SWEEP:POWER:DWELL <Dwell>

Sets the dwell time for a level sweep step.

Parameters:

<Dwell>	float
Range:	0.001 to 100
Increment:	100E-6
*RST:	0.01

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Dwell Time"](#) on page 133

[:SOURce<hw>]:SWEep:POWer:MODE <Mode>

Sets the cycle mode for the level sweep.

Parameters:

<Mode> AUTO | MANual | STEP

AUTO

Each trigger triggers exactly one complete sweep.

MANual

The trigger system is not active. You can trigger every step individually with the command `[:SOURce<hw>]:POWer:MANual`.

The level value increases at each step by the value that you define with `[:SOURce<hw>]:POWer:STEP[:INCRement]`.

Values directly entered with the command `[:SOURce<hw>]:POWer:MANual` are not taken into account.

STEP

Each trigger triggers one sweep step only. The level increases by the value entered with `[:SOURce<hw>]:POWer:STEP[:INCRement]`.

*RST: AUTO

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Mode"](#) on page 130

[:SOURce<hw>]:SWEep:POWer:POINts <Points>

Sets the number of steps within the RF level sweep range.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

<Points> integer

Range: 2 to Max

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

[:SOURce<hw>]:SWEep:POWer:SPACing:MODE?

Queries the level sweep spacing. The sweep spacing for level sweeps is always linear.

Return values:

<Mode> LINear

*RST: LINear

Example: `SWE:POW:SPAC:MODE?`
 queries the sweep spacing for a level sweep at RF output.
 Result: "LIN"
 linear spacing

Usage: Query only

`[[:SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic] <Logarithmic>`

Sets a logarithmically determined step size for the RF level sweep. The level is increased by a logarithmically calculated fraction of the current level.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

<Logarithmic> float
 The unit dB is mandatory.
 Range: 0.01 to 139 dB
 Increment: 0.01
 *RST: 1
 Default unit: dB

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Step"](#) on page 137

`[[:SOURce<hw>]:SWEep[:FREQuency]:DWEll <Dwell>`

Sets the dwell time for a frequency sweep step.

Parameters:

<Dwell> float
 Range: 0.001 to 100
 Increment: 100E-6
 *RST: 0.01

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Dwell Time"](#) on page 133

`[[:SOURce<hw>]:SWEep[:FREQuency]:MODE <Mode>`

Sets the cycle mode for the frequency sweep.

Parameters:

<Mode> AUTO | MANual | STEP

AUTO

Each trigger event triggers exactly one complete sweep.

MANual

The trigger system is not active. You can trigger every step individually by input of the frequencies with the command [:

[SOURce<hw>\]:FREQuency:MANual.](#)

STEP

Each trigger event triggers one sweep step. The frequency increases by the value entered with [:[SOURce<hw>\]:SWEep\[:FREQuency\]:STEP\[:LINear\]](#) (linear spacing) or [:[SOURce<hw>\]:SWEep\[:FREQuency\]:STEP:LOGarithmic](#) (logarithmic spacing).

*RST: AUTO

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Mode"](#) on page 130

[:[SOURce<hw>\]:SWEep\[:FREQuency\]:POINTs <Points>](#)

Sets the number of steps within the RF frequency sweep range.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Two separate POINTs values are used for linear or logarithmic sweep spacing ([:[SOURce<hw>\]:SWEep\[:FREQuency\]:SPACing LIN | LOG](#)). The command always affects the currently set sweep spacing.

Parameters:

<Points> integer
Range: 2 to Max

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

[:[SOURce<hw>\]:SWEep\[:FREQuency\]:SPACing <Spacing>](#)

Selects the mode for the calculation of the frequency intervals, with which the current frequency at each step is increased or decreased.

The keyword [:[FREQuency](#)] can be omitted; then the command is SCPI-compliant.

Parameters:

<Spacing> LINear | LOGarithmic

LINear

Sets a fixed frequency value as step width and adds it to the current frequency.

The linear step width is entered in Hz, see [:[SOURce<hw>\]:SWEep\[:FREQuency\]:STEP\[:LINear\]](#).

LOGarithmic

Sets a constant fraction of the current frequency as step width and adds it to the current frequency.

The logarithmic step width is entered in %, see [:
SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.

*RST: LINear

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Spacing"](#) on page 133

[:SOURce<hw>]:SWEep:POWer:SHAPE <Shape>
[:SOURce<hw>]:SWEep[:FREQuency]:SHAPE <Shape>

Determines the waveform shape for a frequency sweep sequence.

Parameters:

<Shape> SAWTooth | TRlangle
*RST: SAWTooth

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Shape"](#) on page 131

[:SOURce<hw>]:SWEep:POWer:EXECute
[:SOURce<hw>]:SWEep[:FREQuency]:EXECute

Executes an RF frequency sweep.

The command performs a single sweep and is therefore only effective in manual sweep mode.

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Usage: Event

Manual operation: See ["Execute Single Sweep"](#) on page 134

[:SOURce<hw>]:SWEep:POWer:RETRace <State>
[:SOURce<hw>]:SWEep[:FREQuency]:RETRace <State>

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: See [Example](#) "Setup an RF frequency or power sweep" on page 472.

Manual operation: See ["Retrace"](#) on page 131

[:SOURce<hw>]:SWEep:POWer:RUNNing?
[:SOURce<hw>]:SWEep[:FREQuency]:RUNNing?

Queries the current sweep state.

Return values:

<State> 0 | 1 | OFF | ON

Example: See [Example](#) "Setup an RF frequency or power sweep" on page 472.

Usage: Query only

[:SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic <Logarithmic>

Sets a logarithmically determined step width for the RF frequency sweep. The value is added at each sweep step to the current frequency.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

<Logarithmic> float
 The unit is mandatory.
 Range: 0.01 to 100
 Increment: 1E-3
 *RST: 1
 Default unit: PCT

Example: See [Example](#) "Setup an RF frequency or power sweep" on page 472.

Manual operation: See ["Step Linear/Step Logarithmic"](#) on page 136

[:SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear] <Linear>

Sets the step width for linear sweeps.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Omit the optional keywords so that the command is SCPI-compliant.

Parameters:

<Linear> float
 Range: 0.001 Hz to (STOP - START)
 Increment: 0.01

Example: See [Example](#) "Setup an RF frequency or power sweep" on page 472.

Manual operation: See ["Step Linear/Step Logarithmic"](#) on page 136

[[:SOURce<hw>]:COMBined:FREQUENCY:START <CombFreqStart>

Sets the start frequency of the combined RF frequency / level sweep.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

<CombFreqStart> float
 Range: -59999E5 to 12E9
 Increment: 0.01
 *RST: 100E6

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 135

[[:SOURce<hw>]:COMBined:FREQUENCY:STOP <CombFreqStop>

Sets the end frequency of the combined RF frequency / level sweep.

Parameters:

<CombFreqStop> float
 Range: -59999E5 to 12E9
 Increment: 0.01
 *RST: 500E6

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Start Frequency/Stop Frequency"](#) on page 135

[[:SOURce<hw>]:COMBined:POWER:START <CombPowStart>

Sets the start level value of the combined RF frequency / level sweep.

See [Chapter 6.2.1, "Correlating Parameters in Sweep Mode"](#), on page 122.

Parameters:

<CombPowStart> float
 Range: -245 to 120
 Increment: 0.01
 *RST: -30

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Start Level / Stop Level"](#) on page 137

[:SOURce<hw>]:COMBined:POWer:STOP <CombPowStop>

Sets the stop level value of the combined RF frequency / level sweep.

Parameters:

<CombPowStop>	float
Range:	-245 to 120
Increment:	0.01
*RST:	-10

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Start Level / Stop Level"](#) on page 137

[:SOURce<hw>]:SWEep:COMBined:COUNT <StepCount>

Defines the number of sweeps you want to execute.

This parameter applies to `[:SOURce<hw>]:SWEep:COMBined:MODE > SINGLE`. To start the sweep signal generation, use the command `[:SOURce<hw>]:SWEep:COMBined:EXECute` on page 481.

Parameters:

<StepCount>	integer
Range:	1 to SeMAX_INT_STEP-1
*RST:	501

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Step Count"](#) on page 137

[:SOURce<hw>]:SWEep:COMBined:DWELL <Dwell>

Sets the dwell time for the combined frequency / level sweep.

Parameters:

<Dwell>	float
Range:	0.01 to 100
Increment:	100E-6
*RST:	0.01

Example: See [Example"Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Dwell Time"](#) on page 133

[:SOURce<hw>]:SWEep:COMBined:EXECute

Executes an RF frequency / level sweep cycle.

The command triggers one single sweep manually. Therefore, you can use it in manual sweep mode, selected with the command `[:SOURce<hw>] :SWEep:COMBined:MODE > MANual`.

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

Usage: Event

Manual operation: See ["Execute Single Sweep"](#) on page 134

`[:SOURce<hw>] :SWEep:COMBined:MODE <SweepCombMode>`

Sets the cycle mode for the combined frequency / level sweep.

Parameters:

<SweepCombMode> AUTO | MANual | STEP

AUTO

Each trigger event triggers exactly one complete sweep.

MANual

The trigger system is not active. You can trigger every step individually by input of the frequencies with the commands `[:SOURce<hw>] :FREQuency:MANual` and `[:SOURce<hw>] :POWER:MANual`.

STEP

Each trigger event triggers one sweep step.

*RST: AUTO

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Mode"](#) on page 130

`[:SOURce<hw>] :SWEep:COMBined:RETRace <RetraceState>`

Activates that the signal changes to the start level value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

Parameters:

<RetraceState> 0 | 1 | OFF | ON

*RST: 0

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Retrace"](#) on page 131

[[:SOURce<hw>]:SWEep:COMBined:SHApe <Shape>

Selects the waveform shape for the combined frequency / level sweep sequence.

Parameters:

<Shape> SAWTooth | TRlangle
 *RST: SAWTooth

Example: See [Example "Setup an RF frequency or power sweep"](#) on page 472.

Manual operation: See ["Shape"](#) on page 131

[[:SOURce<hw>]:SWEep:RESet[:ALL]

Resets all active sweeps to the starting point.

Usage: Event

Manual operation: See ["Reset Sweep"](#) on page 134

12.15 SYSTem Subsystem

The SYSTem subsystem contains a series of commands for general functions which do not directly affect signal generation.

Example: Retrieving information on network-related settings

```
SYSTem:COMMunicate:NETWork:STATus?
// 1
SYSTem:PROTection1:STATe 0,123456

SYSTem:COMMunicate:NETWork:IPAdDress:MODE STAT
SYSTem:COMMunicate:NETWork:IPAdDress "10.113.0.104"
SYSTem:COMMunicate:NETWork:IPAdDress:DNS "10.0.2.166"
SYSTem:COMMunicate:NETWork:COMMon:HOSTname?
// "SMB100B-102030"
SYSTem:COMMunicate:NETWork:COMMon:WORKgroup "instrument"
SYSTem:COMMunicate:NETWork:COMMon:DOMain "rsint.net"
SYSTem:COMMunicate:NETWork:IPAdDress:GATeway "10.113.0.1"
SYSTem:COMMunicate:NETWork:IPAdDress:SUBNet:MASK "255.255.252.0"
SYSTem:COMMunicate:NETWork:MACAdDress "08 00 27 a3 a1 70"
SYSTem:PROTection1:STATe 1
```

Example: Finding out the used VISA ressource strings

```
SYSTem:COMMunicate:NETWork:RESource?
// "TCPIP::10.113.0.104::inst0::INSTR"

SYSTem:COMMunicate:HISLip:RESource?
```

```
// "TCPIP::10.113.0.104::hislip0::INSTR"

SYSTem:COMMunicate:SOCKet:RESource?
// "TCPIP::10.113.0.104::5025::SOCKET"
SYSTem:COMMunicate:USB:RESource?
// "USB::0x0AAD::0x01DE::100001::INSTR"

SYSTem:COMMunicate:GPIB:RESource?
// "GPIB::28::INSTR"
SYSTem:COMMunicate:GPIB:SELF:ADDRESS?
// 28
SYSTem:COMMunicate:GPIB:LTERminator?
// STAN

SYSTem:COMMunicate:SERial:RESource?
// "ASRL1::INSTR"
SYSTem:COMMunicate:SERial:SBITs?
// 1
SYSTem:COMMunicate:SERial:BAUD?
// 115200
SYSTem:COMMunicate:SERial:PARity?
// NONE
```

Example: Querying the error queue

```
SYSTem:ERRor:STATic?
// -221,"Settings conflict", 153,"Input voltage out of range", ...
// returns all static errors that are collected in the error queue

SYSTem:ERRor:HISTory:CLear
// deletes the history entries
```

:SYSTem:ERRor:ALL?	486
:SYSTem:ERRor:CODE:ALL?	486
:SYSTem:ERRor:CODE[:NEXT]?	487
:SYSTem:ERRor:COUNt?	487
:SYSTem:ERRor[:NEXT]?	488
:SYSTem:ERRor:GNEXt?	488
:SYSTem:ERRor:HISTory:CLear	488
:SYSTem:ERRor:STATic?	489
:SYSTem:DLOCK	489
:SYSTem:KLOCK	489
:SYSTem:NINFormation?	489
:SYSTem:ULOCK	490
:SYSTem:LOCK:OWNer?	490
:SYSTem:LOCK:RELease:ALL	491
:SYSTem:LOCK:REQuest[:EXCLusive]?	491
:SYSTem:SAV	491
:SYSTem:RCL	491
:SYSTem:PROTect<ch>[:STATe]	492
:SYSTem:SECurity:VOLMode[:STATe]	492

:SYSTem:COMMUnicate:GPIB:LTERminator.....	493
:SYSTem:COMMUnicate:GPIB:RESource?.....	493
:SYSTem:COMMUnicate:GPIB[:SELF]:ADDResS.....	493
:SYSTem:COMMUnicate:HISLip:RESource?.....	494
:SYSTem:COMMUnicate:NETWork:IPADdress.....	494
:SYSTem:COMMUnicate:NETWork:IPADdress:MODE.....	494
:SYSTem:COMMUnicate:NETWork:MACAddress.....	495
:SYSTem:COMMUnicate:NETWork:RESource?.....	495
:SYSTem:COMMUnicate:NETWork:REStart.....	495
:SYSTem:COMMUnicate:NETWork:STATus?.....	495
:SYSTem:COMMUnicate:NETWork[:COMMon]:DOMain.....	495
:SYSTem:COMMUnicate:NETWork[:COMMon]:HOSTname.....	496
:SYSTem:COMMUnicate:NETWork[:COMMon]:WORKgroup.....	496
:SYSTem:COMMUnicate:NETWork[:IPADdress]:DNS.....	496
:SYSTem:COMMUnicate:NETWork[:IPADdress]:GATeway.....	496
:SYSTem:COMMUnicate:NETWork[:IPADdress]:SUBNet:MASK.....	497
:SYSTem:COMMUnicate:SERial:BAUD.....	497
:SYSTem:COMMUnicate:SERial:PARity.....	497
:SYSTem:COMMUnicate:SERial:RESource?.....	497
:SYSTem:COMMUnicate:SERial:SBITS.....	498
:SYSTem:COMMUnicate:SOCKet:RESource?.....	498
:SYSTem:COMMUnicate:USB:RESource?.....	498
:SYSTem:HELP:EXPort.....	498
:SYSTem:IDENtification.....	499
:SYSTem:IDENtification:PRESet.....	499
:SYSTem:IRESpOnse.....	499
:SYSTem:ORESpOnse.....	500
:SYSTem:LANGuage.....	500
:SYSTem:INFormation:SCPI.....	500
:SYSTem:SECurity:SANitize[:STATe].....	501
:SYSTem:SECurity:SUPolicy.....	501
:SYSTem:SPECification?.....	501
:SYSTem:SPECification:VERsion.....	502
:SYSTem:SPECification:IDENtification:CATalog?.....	502
:SYSTem:SPECification:PARAmeter?.....	503
:SYSTem:SPECification:VERsion:CATalog?.....	503
:SYSTem:SPECification:VERsion:FACTory?.....	503
:SYSTem:SRData?.....	504
:SYSTem:STARtup:COMPLetE?.....	504
:SYSTem:DATE.....	504
:SYSTem:NTP:HOSTname.....	505
:SYSTem:NTP:STATe.....	505
:SYSTem:TIME.....	505
:SYSTem:TIME:ZONE.....	505
:SYSTem:TIME:ZONE:CATalog?.....	506
:SYSTem:UPTime?.....	506
:SYSTem:BIOS:VERsion?.....	506
:SYSTem:VERsion?.....	506
:SYSTem:OSYStem?.....	507
:SYSTem:MMEMory:PATH:USER?.....	507

:SYSTem:DFPR?	507
:SYSTem:REBoot	507
:SYSTem:REStArT	507
:SYSTem:SHUTdown	508
:SYSTem:WAIT	508
:SYSTem:FILEs:TEMPorary:DELeTe	508

:SYSTem:ERRor:ALL?

Queries the error/event queue for all unread items and removes them from the queue.

Return values:

<All> string
 Error/event_number,"Error/event_description>[;Device-dependent info]"
 A comma separated list of error number and a short description of the error in FIFO order.
 If the queue is empty, the response is 0, "No error"
 Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.
 Volatile errors are reported once, at the time they appear. Identical errors are reported repeatedly only if the original error has already been retrieved from (and hence not any more present in) the error queue.

Example:

SYST:ERR:ALL?
 Queries all entries in the error queue.
 Response: 0, 'no error'
 No errors have occurred since the error queue was last read out.

Usage: Query only

Manual operation: See ["Clear History"](#) on page 543

:SYSTem:ERRor:CODE:ALL?

Queries the error numbers of all entries in the error queue and then deletes them.

Return values:

<All> string
 Returns the error numbers. To retrieve the entire error text, send the command :SYSTem:ERRor:ALL?.
 0
 "No error", i.e. the error queue is empty
Positive value
 Positive error numbers denote device-specific errors
Negative value
 Negative error numbers denote error messages defined by SCPI.

Example: `SYST:ERR:CODE:ALL`
Queries all entries in the error queue.
Response: 0
No errors have occurred since the error queue was last read out.

Usage: Query only

:SYSTem:ERRor:CODE[:NEXT]?

Queries the error number of the oldest entry in the error queue and then deletes it.

Return values:

<Next> string
Returns the error number. To retrieve the entire error text, send the command `:SYSTem:ERRor:ALL?`.

0
"No error", i.e. the error queue is empty

Positive value
Positive error numbers denote device-specific errors

Negative value
Negative error numbers denote error messages defined by SCPI.

Example: `SYST:ERR:CODE`
Queries the oldest entry in the error queue.
Response: 0
No errors have occurred since the error queue was last read out.

Usage: Query only

:SYSTem:ERRor:COUNT?

Queries the number of entries in the error queue.

Return values:

<Count> integer
0
The error queue is empty.

Example: `SYST:ERR:COUN`
Queries the number of entries in the error queue.
Response: 1
One error has occurred since the error queue was last read out.

Usage: Query only

:SYSTem:ERRor[:NEXT]?

Queries the error/event queue for the oldest item and removes it from the queue.

Return values:

<Next> string

Error/event_number,"Error/event_description">[;Device-dependent info]"

Error number and a short description of the error.

If the queue is empty, the response is 0, "No error"

Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.

Volatile errors are reported once, at the time they appear. Identical errors are reported repeatedly only if the original error has already been retrieved from (and hence not any more present in) the error queue.

Example:

SYST:ERR?

Queries the oldest entry in the error queue.

Response: 0, 'no error'

No errors have occurred since the error queue was last read out.

Usage: Query only

Manual operation: See ["Static Errors/Error History"](#) on page 542

:SYSTem:ERRor:GNEXt?

Similar to [:SYSTem:ERRor\[:NEXT\]?](#), but queries the next entry from the global persistent error/event queue.

Return values:

<NextGlobalError> string

Error/event number, "Error/event description" [;Device dependent info]"

An error number and a short description of the error.

Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.

Example:

SYST:ERR:GNEX?

Returns the next error message from the global error queue.

Usage: Query only

:SYSTem:ERRor:HISTory:CLEar

Clears the error history.

Example: See [Example"Querying the error queue"](#) on page 484

Usage: Event

Manual operation: See ["Clear History"](#) on page 543

:SYSTem:ERRor:STATic?

Returns a list of all errors existing at the time when the query is started. This list corresponds to the display on the info page under manual control.

Return values:

<StaticErrors> string

Example: See [Example "Querying the error queue"](#) on page 484

Usage: Query only

Manual operation: See ["Static Errors/Error History"](#) on page 542

:SYSTem:DLOCK <DispLockStat>

Disables the manual operation via the display, including the front panel keyboard of the instrument and the Local key.

Parameters:

<DispLockStat> 0 | 1 | OFF | ON
 *RST: n.a. (factory preset: 0)

Example: SYST:DLOC ON
 Activates the display lock. The instrument cannot be operated via the display until it has been enabled with SYST:DLOC OFF.

Manual operation: See ["User Interface"](#) on page 252
 See ["Enabling a locked user interface for manual operation"](#) on page 254

:SYSTem:KLOCK <State>

Disables the front panel keyboard of the instrument including the Local key.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: n.a. (factory preset: 0)

Example: SYST:KLOC ON
 Locks the front panel and external controls.
 To enable the controls, send SYST:KLOC OFF.

Manual operation: See ["User Interface"](#) on page 252
 See ["Enabling a locked user interface for manual operation"](#) on page 254

:SYSTem:NINformation?

Queries the oldest information message ("Error History > Level > Info") in the error/event queue.

Return values:**<NextInfo>** string**Example:**`:SYSTem:NINFormation?`

Queries the oldest entry in the info message queue.

Response: 90,"Info;=== Instrument startup...
==="

Information message containing error number 90, that states, that the instrument startup is complete.

Usage:

Query only

:SYSTem:ULOCK <Mode>

Locks or unlocks the user interface of the instrument.

Parameters:**<Mode>** ENABLEd | DONLy | DISabled | TOFF | VNConly**ENABLEd**

Unlocks the display, the touchscreen and all controls for the manual operation.

DONLy

Locks the touchscreen and controls for the manual operation of the instrument. The display shows the current settings.

VNConly

Locks the touchscreen and controls for the manual operation, and enables remote operation over VNC. The display shows the current settings.

TOFF

Locks the touchscreen for the manual operation of the instrument. The display shows the current settings.

DISabled

Locks the display, the touchscreen and all controls for the manual operation.

***RST:** n.a. (factory preset: ENABLEd)**Example:**`:SYST:ULOC DIS`

Activates the user interface lock, including display and controls.

Manual operation:See ["User Interface"](#) on page 252See ["Enabling a locked user interface for manual operation"](#) on page 254

:SYSTem:LOCK:OWNer?

Queries the sessions that have locked the instrument currently.

If an exclusive lock is set, the query returns the owner of this exclusive lock, otherwise it returns NONE.

Return values:

<Owner> string

Example:

SYST:LOCK:OWN?

Returns the owner of locking.

Response: NONE

The instrument is not locked.

Usage:

Query only

:SYSTem:LOCK:RELease:ALL

Revokes the exclusive access to the instrument.

Usage:

Setting only

:SYSTem:LOCK:REQuest[:EXCLusive]?

Queries whether a lock for exclusive access to the instrument via ethernet exists. If successful, the query returns a 1, otherwise 0.

Return values:

<Success> integer

Example:

SYST:LOCK:REQ?

Queries the state of exclusive locking.

Response: 1

The exclusive locking is active.

Usage:

Query only

:SYSTem:SAV <Pathname>

Saves the current R&S SMB100B settings into a file with defined filename and into a specified directory. The file extension (*.savrc1txt) is assigned automatically.

Setting parameters:

<Pathname> string

Example:

SYSTem:SAV "/var/user/temp/Test"

Saves the file Test.savrc1txt into the directory /var/user/temp/.

Usage:

Setting only

:SYSTem:RCL <Pathname>

Loads a file with previously saved R&S SMB100B settings.

Loads the selected file with previously saved R&S SMB100B settings from the default or the specified directory. Loaded are files with extension *.savrc1txt.

Setting parameters:**<Pathname>** string**Example:**

SYSTem:RCL "/var/user/temp/Test"
 Loads the file Test.savrc1txt from the directory /var/user/temp/.

Usage:

Setting only

:SYSTem:PROTect<ch>[:STATe] <State>[, <Key>]

Activates and deactivates the specified protection level.

Suffix:

<ch> Indicates the protection level.
 See also ["Protection"](#) on page 246

Parameters:

<State> 0 | 1 | OFF | ON
***RST:** n.a. (factory preset: 1)

Setting parameters:

<Key> integer
 The respective functions are disabled when the protection level is activated. No password is required for activation of a level. A password must be entered to deactivate the protection level. The default password for the first level is 123456. This protection level is required to unlock internal adjustments for example.

Example:

To activate protection level:
 SYSTem:PROTect1:STATe 1
 Internal adjustments or hostname cannot be changed.
 To unlock protection level 1:
 SYSTem:PROTect1:STATe 0,123456
 Internal adjustments are accessible.

Manual operation: See ["Protection Level/Password"](#) on page 248**:SYSTem:SECurity:VOLMode[:STATe] <SecPassWord>, <MmemProtState>**

Activates volatile mode, so that no user data can be written to the internal memory permanently.

To enable volatile mode, reboot the instrument. Otherwise the change has no effect.

Parameters:

<MmemProtState> 0 | 1 | OFF | ON
***RST:** 0

Setting parameters:

<SecPassWord> string
 Current security password
 The default password is 123456.

Example: SYSTem:SECurity:VOLMode:STATe "123456", 1
 SYSTem:REBoot

Manual operation: See ["Volatile Mode"](#) on page 251

:SYSTem:COMMunicate:GPIB:LTERminator <LTerminator>

Sets the terminator recognition for remote control via GPIB interface.

Parameters:

<LTerminator> STANDard | EOI
EOI
 Recognizes an LF (Line Feed) as the terminator only when it is sent with the line message EOI (End of Line). This setting is recommended particularly for binary block transmissions, as binary blocks may coincidentally contain a character with value LF (Line Feed), although it is not determined as a terminator.
STANDard
 Recognizes an LF (Line Feed) as the terminator regardless of whether it is sent with or without EOI.
 *RST: n.a. (factory preset: STANDard)

Example: See [Example"Finding out the used VISA resource strings"](#) on page 483.

:SYSTem:COMMunicate:GPIB:RESource?

Queries the visa resource string for remote control via the GPIB interface.

To change the GPIB address, use the command `:SYSTem:COMMunicate:GPIB[:SELF]:ADDRESS`.

Return values:

<Resource> string

Example: See [Example"Finding out the used VISA resource strings"](#) on page 483.

Usage: Query only

:SYSTem:COMMunicate:GPIB[:SELF]:ADDRESS <Address>

Sets the GPIB address.

Parameters:

<Address> integer
 Range: 0 to 30
 *RST: 28

Example: See [Example"Finding out the used VISA ressource strings"](#) on page 483.

:SYSTem:COMMunicate:HISLip:RESource?

Queries the VISA resource string. This string is used for remote control of the instrument with HiSLIP protocol.

Return values:

<Resource> string

Example: See [Example"Finding out the used VISA ressource strings"](#) on page 483.

Usage: Query only

:SYSTem:COMMunicate:NETWork:IPAdDress <IpAddress>

Sets the IP address.

Parameters:

<IpAddress> string
 Range: 0.0.0.0. to ff.ff.ff.ff

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Manual operation: See ["IP Address"](#) on page 277

:SYSTem:COMMunicate:NETWork:IPAdDress:MODE <Mode>

Selects manual or automatic setting of the IP address.

Parameters:

<Mode> AUTO | STATic
 *RST: n.a. (factory preset: AUTO)

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Example: SYSTem:COMMunicate:NETWork:IPAdDress:MODE
 STATic
 SYSTem:COMMunicate:NETWork:IPAdDress
 "10.113.0.105"

Manual operation: See ["Address Mode"](#) on page 277

:SYSTem:COMMunicate:NETWork:MACaddress <MacAddress>

Queries the MAC address of the network adapter.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

<MacAddress> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Manual operation: See ["MAC Address"](#) on page 278

:SYSTem:COMMunicate:NETWork:RESource?

Queries the visa resource string for Ethernet instruments.

Return values:

<Resource> string

Example: See [Example"Finding out the used VISA ressource strings"](#) on page 483.

Usage: Query only

:SYSTem:COMMunicate:NETWork:REStart

Restarts the network.

Example:

```
SYSTem:COMMunicate:NETWork:REStart
// Terminates the network connection and sets it up again
```

Usage: Event

Manual operation: See ["Restart Network"](#) on page 276

:SYSTem:COMMunicate:NETWork:STATus?

Queries the network configuration state.

Return values:

<State> 0 | 1 | OFF | ON

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Usage: Query only

Manual operation: See ["Network Status"](#) on page 276

:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain <Domain>

Determines the primary suffix of the network domain.

Parameters:

<Domain> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Manual operation: See ["DNS Suffix"](#) on page 278

:SYSTem:COMMunicate:NETWork[:COMMON]:HOSTname <Hostname>

Sets an individual hostname for the RF signal generator.

Note:We recommend that you do not change the hostname to avoid problems with the network connection. If you change the hostname, be sure to use a unique name.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

<Hostname> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Manual operation: See ["Hostname"](#) on page 276

:SYSTem:COMMunicate:NETWork[:COMMON]:WORKgroup <Workgroup>

Sets an individual workgroup name for the instrument.

Parameters:

<Workgroup> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Manual operation: See ["Workgroup"](#) on page 277

:SYSTem:COMMunicate:NETWork[:IPAdDress]:DNS <DNS>

Determines or queries the network DNS server to resolve the name.

Parameters:

<DNS> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Manual operation: See ["DNS Server"](#) on page 278

:SYSTem:COMMunicate:NETWork[:IPAdDress]:GATeway <Gateway>

Sets the IP address of the default gateway.

Parameters:

<Gateway> string
 Range: 0.0.0.0 to ff.ff.ff.ff

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Manual operation: See ["Default Gateway"](#) on page 278

:SYSTem:COMMunicate:NETWork[:IPADdress]:SUBNet:MASK <Mask>

Sets the subnet mask.

Parameters:

<Mask> string

Example: See [Example"Retrieving information on network-related settings"](#) on page 483.

Manual operation: See ["Subnet Mask"](#) on page 277

:SYSTem:COMMunicate:SERial:BAUD <Baud>

Defines the baudrate for the serial remote control interface.

Parameters:

<Baud> 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200
 *RST: n.a. (factory preset: 115200)

Example: See [Example"Finding out the used VISA resource strings"](#) on page 483.

Manual operation: See ["Baud Rate"](#) on page 280

:SYSTem:COMMunicate:SERial:PARity <Parity>

Enters the parity for the serial remote control interface.

Parameters:

<Parity> NONE | ODD | EVEN
 *RST: n.a. (factory preset: NONE)

Example: See [Example"Finding out the used VISA resource strings"](#) on page 483.

Manual operation: See ["Parity"](#) on page 280

:SYSTem:COMMunicate:SERial:RESource?

Queries the visa resource string for the serial remote control interface. This string is used for remote control of the instrument.

Return values:

<Resource> string

Example:See [Example"Finding out the used VISA ressource strings"](#) on page 483.**Usage:**

Query only

:SYSTem:COMMunicate:SERial:SBITs <SBits>

Defines the number of stop bits for the serial remote control interface.

Parameters:

<SBits> 1 | 2

*RST: n.a. (factory preset: 1)

Example:See [Example"Finding out the used VISA ressource strings"](#) on page 483.**Manual operation:** See ["Stop Bits"](#) on page 280**:SYSTem:COMMunicate:SOCKet:RESource?**

Queries the visa resource string for remote control via LAN interface, using TCP/IP socket protocol.

Return values:

<Resource> string

Example:See [Example"Finding out the used VISA ressource strings"](#) on page 483.**Usage:**

Query only

:SYSTem:COMMunicate:USB:RESource?

Queries the visa resource string for remote control via the USB interface.

Return values:

<Resource> string

Example:See [Example"Finding out the used VISA ressource strings"](#) on page 483.**Usage:**

Query only

:SYSTem:HELP:EXPort

Saves the online help as zip archive in the user directory.

Example:

```
:SYSTem:HELP:EXPort
MMEM:CDIR?
// "/var/user"
MMEM:CAT?
// .., "Log,DIR,4096", "help.tgz,BIN,69836600"
// confirms that help zip archive is saved.
```

Usage: Event

Manual operation:: "Setup > Help > Export Help to User Path"

:SYSTem:IDENtification <Identification>

Selects the mode to determine the "IDN String" and the "OPT String" for the instrument, selected with command :SYSTem:LANGuage.

Note: While working in an emulation mode, the R&S SMB100B specific command set is disabled, that is, the SCPI command SYST:IDEN is discarded.

Parameters:

<Identification> AUTO | USER

AUTO
Automatically determines the strings.

USER
User-defined strings can be selected.

*RST: n.a. (factory preset: AUTO)

Example:

```
SYST:IDEN AUTO
```

Automatically assigns the OPT and IDN strings according to the selected instrument language.

Manual operation: See "Mode" on page 281

:SYSTem:IDENtification:PRESet

Sets the *IDN and *OPT strings in user defined mode to default values.

Example:

```
SYST:IDEN USER
SYST:IDEN:PRES
```

Usage: Event

Manual operation: See "Set to Default" on page 281

:SYSTem:IRESpOnse <IdnResponse>

Defines the user defined identification string for *IDN.

Note: While working in an emulation mode, the instrument's specific command set is disabled, i.e. the SCPI command SYST:IRES is discarded.

Parameters:

<IdnResponse> string

Example:

```

SYST:IDEN USER
// Selects a user-defined identification
SYST:IRES "Test Device"
// Defines identification string 'test device'
*IDN?
// Response: 'test device'

```

Manual operation: See ["IDN String"](#) on page 282

:SYSTem:ORESpone <OResponse>

Defines the user defined response string for *OPT.

Note: While working in an emulation mode, the instrument's specific command set is disabled, i.e. the SCPI command SYST:ORES is discarded.

Parameters:

<OResponse> string

Example:

```

SYST:IDEN USER
// Selects a user-defined identification
SYST:ORES "Test Option"
// Defines the OPT string 'test option'
*OPT?
// Response: 'test option'

```

Manual operation: See ["OPT String"](#) on page 282

:SYSTem:LANGuage <Language>

Sets the remote control command set.

Parameters:

<Language> string

Example:

```

SYSTem:LANGuage "SCPI"
// selects SCPI command set

```

Manual operation: See ["Language"](#) on page 281

:SYSTem:INFormation:SCPI <InfoString>

Inserts system information in recorded SCPI command lists, for example information on a missing command.

Parameters:

<InfoString> string

Example:

```

SYST:INF:SCPI "missing command"

```

enters the information into a recorded SCPI command list.

:SYSTem:SECurity:SANitize[:STATe] <SecPassWord>, <MmemProtState>

Sanitizes the internal memory.

Parameters:

<MmemProtState> 0 | 1 | OFF | ON
 *RST: 0

Setting parameters:

<SecPassWord> string

Example: SYSTem:SECurity:SANitize[:STATe] 1

Manual operation: See ["Sanitize"](#) on page 251

:SYSTem:SECurity:SUPolicy <SecPassWord>, <UpdatePolicy>

Configures the automatic signature verification for firmware installation.

Parameters:

<UpdatePolicy> STRict | CONFirm | IGNore
 *RST: n.a. (factory preset: CONFirm)

Setting parameters:

<SecPassWord> string

Manual operation: See ["Secure Update Policy"](#) on page 249

:SYSTem:SPECification? <Id>

Retrieves data sheet information for a specific parameter.

Setting parameters:

<Id> string
 Identifies the name of the entry in the data sheet, as queried with the command [:SYSTem:SPECification:IDENTification:CATalog?](#) on page 502

Return values:

<ValList> float
 Comma-separated list with the specified and, if available, the typical value of the parameter, as specified in the data sheet. See also ["Data Sheet"](#) on page 292.

Example:

Retrieving instruments specification

Note: The following values are merely an example.

Query the data sheet versions stored in the instrument:

```
:SYSTem:SPECification:VERSion:CATalog?
"04.03,04.02,04.01,04.00,03.04,03.03,03.02,
03.01,03.00,02.96,02.95,02.94,02.02,02.01,
02.00,01.03,01.02,01.01,01.00"
```

Query the data sheet version with that the instrument was delivered:

```
:SYSTem:SPECification:VERSion:FACTory?
"04.00"
```

Select a data sheet version:

```
:SYSTem:SPECification:VERSion?
"04.00"
```

```
:SYSTem:SPECification:VERSion "04.01"
```

Selects one particular data sheet version.

Queries regarding data sheet parameters (IDs) and their values

Refer to this particular data sheet

Query the IDs of all parameters listed in the **selected** data sheet version:

```
:SYSTem:SPECification:IDENtification:CATalog?
"ID_RF_FREQ_SETTING_TIME_ALC_ON_MS,
ID_RF_FREQ_SETTING_TIME_MS,..."
```

Query the data sheet information on a specific parameter, defined by its ID

```
:SYSTem:SPECification?
"ID_RF_FREQ_SETTING_TIME_ALC_ON_MS"
```

Returned is the specified and, if available, the typical value of the parameter

Usage:

Query only

:SYSTem:SPECification:VERSion <Version>

Selects a data sheet version from the data sheets saved on the instrument.

Further queries regarding the data sheet parameters (<Id>) and their values refer to the selected data sheet.

To query the list of data sheet versions, use the command `:SYSTem:SPECification:VERSion:CATalog?` on page 503.**Parameters:**

<Version> string

Example: See `:SYSTem:SPECification?` on page 501.**:SYSTem:SPECification:IDENtification:CATalog?**

Queries the parameter identifiers (<Id>) available in the data sheet.

Return values:

<IdList> string
Comma-separated string of the parameter identifiers (<Id>)

Example: See :SYSTem:SPECification? on page 501.

Usage: Query only

:SYSTem:SPECification:PARAmeter? <Id>[, <Parameter>]

Retrieves data sheet information for a specific parameter.

Setting parameters:

<Id> string
Identifies the name of the entry in the data sheet.
Query the data sheet parameters with the command :SYSTem:SPECification:IDENtification:CATalog?.

<Parameter> float
An additional value the result (ValList) depends on.

Return values:

<ValList> float
Comma-separated list with the specified and, if available, the typical value of the parameter, as specified in the data sheet.

Example: **Note:** The following values are merely an example. Your instrument may not support the same parameters.
SYST:SPEC:PAR? "ID_RF_FREQ_SETTING_TIME_MS",0.1
SYST:SPEC:PAR? "ID_RF_LEVEL_MAX_GENERAL_DBM",
0.1

Usage: Query only

:SYSTem:SPECification:VERSion:CATalog?

Queries all data sheet versions stored in the instrument.

Return values:

<VersCatalog> string

Example: See :SYSTem:SPECification? on page 501.

Usage: Query only

:SYSTem:SPECification:VERSion:FACTory?

Queries the data sheet version of the factory setting.

Return values:

<Version> string

Example: See :SYSTem:SPECification? on page 501.

Usage: Query only

Manual operation: See "[Versions](#)" on page 547

:SYSTem:SRData?

Queries the SCPI recording data from the internal file.

This feature enables you to transfer an instrument configuration to other test environments, as e.g. laboratory virtual instruments.

Return values:

<FileData> block data

Example:

```
SYSTem:SRData?
// #3118:SOURce1:ROSCillator:SOURce EXT
// :SOURce1:FREQuency:CW 4000000000
// :SOURce1:FREQuency:OFFSet 1000000
// :SOURce1:AM1:STATe 1
// :OUTPut1:STATe 1
```

Usage: Query only

:SYSTem:STARtup:COMPLet?

Queries if the startup of the instrument is completed.

Return values:

<Complete> 0 | 1 | OFF | ON
*RST: 0

Example:

```
SYST:STAR:COMP?
Response: 1
the startup of the instrument is completed.
```

Usage: Query only

:SYSTem:DATE <Year>, <Month>, <Day>

Queries or sets the date for the instrument-internal calendar.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

<Year> integer

<Month> integer
Range: 1 to 12

<Day> integer
Range: 1 to 31

Example:

```
:SYSTem:DATE?
// 2016,05,01
```

Manual operation: See ["Date"](#) on page 557

:SYSTem:NTP:HOSTname <NTPName>

Sets the address of the NTP server. You can enter the IP address, or the hostname of the time server, or even set up an own vendor zone. See the Internet for more information on NTP.

Parameters:

<NTPName> string

Manual operation: See ["NTP Address"](#) on page 558

:SYSTem:NTP:STATe <UseNtpState>

Activates clock synchronization via NTP.

Parameters:

<UseNtpState> 0 | 1 | OFF | ON
 *RST: n.a. (factory preset: 0)

Example: SYSTem:NTP:STATe 1

Manual operation: See ["Use Time from NTP Server"](#) on page 558

:SYSTem:TIME <Hour>, <Minute>, <Second>

Queries or sets the time for the instrument-internal clock.

This is a password-protected function. Unlock the protection level 1 to access it.

Parameters:

<Hour> integer
 Range: 0 to 23

 <Minute> integer
 Range: 0 to 59

 <Second> integer
 Range: 0 to 59

Example: SYSTem:TIME?
 // 10,27,14

Manual operation: See ["Time"](#) on page 557

:SYSTem:TIME:ZONE <TimeZone>

Sets the timezone. You can query the list of the available timezones with [:SYSTem:TIME:ZONE:CATalog?](#).

Parameters:

<TimeZone> string

Manual operation: See ["Timezone"](#) on page 557

:SYSTem:TIME:ZONE:CATalog?

Queries the list of available timezones.

Return values:

<Catalog>

Usage: Query only

Manual operation: See ["Timezone"](#) on page 557

:SYSTem:UPTime?

Queries the up time of the operating system.

Return values:

<UpTime> "<ddd.hh:mm:ss>"

Example: SYSTem:UPTime?
Response: "0.08:11:00"

Usage: Query only

:SYSTem:BIOS:VERSion?

Queries the BIOS version of the instrument.

Return values:

<Version> string

Example: SYST:BIOS:VERS?
queries the BIOS version.
Response: 123456

Usage: Query only

:SYSTem:VERSion?

Queries the SCPI version the instrument's command set complies with.

Return values:

<Version> string

Example: SYST:VERS
queries the SCPI version.
Response: "1996"
The instrument complies with the SCPI version from 1996.

Usage: Query only

:SYSTem:OSYSstem?

Queries the operating system of the instrument.

Return values:

<OperSystem> string

Example: SYSTem:OSYSstem?
 Response: "Linux"

Usage: Query only

:SYSTem:MMEMory:PATH:USER?

Queries the user directory, that means the directory the R&S SMB100B stores user files on.

Return values:

<PathUser> string

Example: SYSTem:MMEMory:PATH:USER?
 Response: "/var/user/"

Usage: Query only

:SYSTem:DFPR?

Queries the device footprint of the instrument. The retrieved information is in machine-readable form suitable for automatic further processing.

Return values:

<DeviceFootprint> string
 Information on the instrument type, device identification and details on the installed FW version, hardware and software options.

Example: :SYSTem:DFPR?

Usage: Query only

:SYSTem:REBoot

Reboots the instrument including the operating system.

Usage: Event

:SYSTem:REStart

Restarts the instrument without restarting the operating system.

Usage: Event

:SYSTem:SHUTdown

Shuts down the instrument.

Usage: Event

Manual operation: See ["Shut down"](#) on page 563

:SYSTem:WAIT <TimeMs>

Delays the execution of the subsequent remote command by the specified time.

This function is useful, for example to execute an SCPI sequence automatically but with a defined time delay between some commands.

See [Chapter 10.2.4, "How to Assign Actions to the \[★ \(User\)\] Key"](#), on page 239.

Setting parameters:

<TimeMs> integer
Wait time in ms
Range: 0 to 10000
*RST: 0

Example:

```
:SYSTem:WAIT 10000
// waits 10s before resetting the instrument
*RST
```

Usage: Setting only

:SYSTem:FILEs:TEMPorary:DELeTe

Deletes the temporary files from the internal memory.

Example:

```
:SYSTem:FILEs:TEMPorary:DELeTe
// temporary files are removed
```

Usage: Event

12.16 STATus Subsystem

This system contains the commands for the status reporting system. See also [Chapter A.1.5, "Status Reporting System"](#), on page 577 for detailed information.

*RST on page 331 has no effect on the status registers.

Value ranges

- Queries return the current value of the respective register, which permits a check of the device status.
Return values: A decimal value in the range 0 to 32767 ($=2^{15}-1$)

- The configuration commands set the respective register thus determining which status changes of the R&S SMB100B cause the status registers to be changed.
Setting values: A decimal value in the range 0 to 32767 ($=2^{15}-1$)

:STATus:OPERation:CONDition?	509
:STATus:OPERation:ENABLE	509
:STATus:OPERation[:EVENT]	509
:STATus:OPERation:NTRansition	510
:STATus:OPERation:PTRansition	510
:STATus:PRESet	510
:STATus:QUESTionable:CONDition	511
:STATus:QUESTionable:ENABLE	511
:STATus:QUESTionable[:EVENT]	511
:STATus:QUESTionable:NTRansition	511
:STATus:QUESTionable:PTRansition	512
:STATus:QUEue[:NEXT]?	512

:STATus:OPERation:CONDition?

Queries the content of the CONDition part of the STATus:OPERation register.

This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out because it indicates the current hardware status.

Return values:

<Condition> string

Example: :STATus:OPERation:CONDition?

Usage: Query only

:STATus:OPERation:ENABLE <Enable>

Sets the bits of the ENABLE part of the STATus:OPERation register. This setting determines which events of the Status-Event part are forwarded to the sum bit in the status byte. These events can be used for a service request.

Parameters:

<Enable> string

Example: :STAT:OPER:ENAB 32767
all events are forwarded to the sum bit of the status byte.

:STATus:OPERation[:EVENT] <Event>

Queries the content of the EVENT part of the STATus:OPERation register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

Parameters:

<Event> string

Example: `:STAT:OPER:EVEN?`
queries the STATus:OPERation:EVENT register.

:STATus:OPERation:NTRansition <Ntransition>

Sets the bits of the NTRansition part of the STATus:OPERation register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register. The disappearance of an event in the hardware is thus registered, for example the end of an adjustment.

Parameters:

<Ntransition> string

Example: `:STAT:OPER:NTR 0`
a transition from 1 to 0 in the condition part of the Status:Operation register does not cause an entry to be made in the EVENT part.

:STATus:OPERation:PTRansition <Ptransition>

Sets the bits of the PTRansition part of the STATus:OPERation register. If a bit is set, a transition from 0 to 1 in the condition part causes an entry to be made in the EVENT part of the register. A new event in the hardware is thus registered, for example the start of an adjustment.

Parameters:

<Ptransition> string

Example: `:STAT:OPER:PTR 32767`
all transitions from 0 to 1 in the condition part of the Status:Operation register cause an entry to be made in the EVENT part.

:STATus:PRESet <Preset>

Resets the status registers. All PTRansition parts are set to FFFFh (32767), i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABLE parts of STATus:OPERation and STATus:QUESTionable are set to 0, i.e. all events in these registers are not passed on.

Parameters:

<Preset> string

Example: `STAT:PRES`
resets the status registers.

:STATus:QUESTionable:CONDition <Condition>

Queries the content of the CONDition part of the STATus:QUESTionable register. This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out since it indicates the current hardware status.

Parameters:

<Condition> string

Example:

`:STATus:QUESTionable:CONDition?`
queries the Status:Questionable:Condition register.

:STATus:QUESTionable:ENABLE <Enable>

Sets the bits of the ENABLE part of the STATus:QUESTionable register. The enable part determines which events of the STATus:EVENT part are enabled for the summary bit in the status byte. These events can be used for a service request.

If a bit in the ENABLE part is 1, and the corresponding EVENT bit is true, a positive transition occurs in the summary bit. This transition is reported to the next higher level.

Parameters:

<Enable> string

Example:

`STAT:QUES:ENAB 1`
Problems when performing an adjustment cause an entry to be made in the sum bit.

:STATus:QUESTionable[:EVENT] <Event>

Queries the content of the EVENT part of the STATus:QUESTionable register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

Parameters:

<Event> string

Example:

`STAT:QUES:EVEN?`
queries the Status:Questionable:Event register.

:STATus:QUESTionable:NTRansition <Ntransition>

Sets the bits of the NTRansition part of the STATus:QUESTionable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

Parameters:

<Ntransition> string

Example: `STAT:QUES:NTR 0`
 a transition from 1 to 0 in the condition part of the STATUS:QUESTIONable register does not cause an entry to be made in the EVENT part

:STATUS:QUESTIONable:PTRansition <PTransition>

Sets the bits of the NTRansition part of the STATUS:QUESTIONable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

Parameters:

<PTransition> string

Example: `STAT:QUES:PTR 32767`
 all transitions from 0 to 1 in the condition part of the STATUS:QUESTIONable register cause an entry to be made in the EVENT part

:STATUS:QUEue[:NEXT]?

Queries the oldest entry in the error queue and then deletes it. Positive error numbers denote device-specific errors, and negative error numbers denote error messages defined by SCPI. If the error queue is empty, 0 ("No error") is returned.

The command is identical to `:SYSTEM:ERROR[:NEXT]?` on page 488.

Return values:

<Next> string

Example: `:STATUS:QUEue?`
 queries the oldest entry in the error queue.
 Response: 0, 'no error'
 no errors have occurred since the error queue was last read out

Usage: Query only

12.17 TEST Subsystem

The TEST subsystem contains the commands for performing test routines directly at the hardware assemblies.

The selftest responses with a 0 if the test is performed successfully, otherwise a value other than 0 is returned. None of the commands of this system has a *RST value.

`:TEST<hw>:ALL:START`..... 512
`:TEST<hw>:ALL:RESult?`..... 513

:TEST<hw>:ALL:START

Usage: Event

Starts the selftest. Use the command `:TEST<hw>:ALL:RESult?` to query the result.

:TEST<hw>:ALL:RESult?

Queries the result of the performed selftest. Start the selftest with `:TEST<hw>:ALL:START`.

Return values:

<Result> 0 | 1 | RUNning | STOPped
*RST: STOPped

Usage: Query only

12.18 TRIGger Subsystem

The TRIGger system contains the commands for selecting the trigger source for the RF and LF sweep.

You can work with an internal or with an externally applied trigger signal. In this case, use the commands in the `SOURCE:INPut` subsystem to configure the signal.

The trigger system of the R&S SMB100B is a simplified implementation of the SCPI trigger system. The TRIGger system differs from the SCPI system as follows:

- No `INITiate` command; the instrument behaves as if `INITiate:CONTinuous ON` were set.
- Under TRIGger several sweep subsystems exist.
- The trigger source names correspond directly to the various settings of manual control. SCPI uses different names which are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration.

In addition to these commands, see more trigger-related commands in the modulation and RF signal subsystems.

Table 12-1: Cross-reference between the manual and remote control

R&S proprietary value name	SCPI conform value name	Parameter in manual control
AUTO	IMMediate	"Auto" mode
SINGLE	BUS	"Single" mode.
EXTernal	EXTernal	"Ext Single" and "Ext Step" mode. Use command <code>LFO:SWEep:MODE</code> to select between the two sweep modes.
EAUTo	-	"Ext Start/Stop" mode.

<code>:TRIGger<hw>:FSWeep:SOURce</code>	514
<code>:TRIGger<hw>:LFFSweep:SOURce</code>	514
<code>:TRIGger<hw>:PSWeep:SOURce</code>	514
<code>:TRIGger<hw>[:SWEep]:SOURce</code>	514

:TRIGger<hw>:FSSweep:SOURce.....	515
:TRIGger<hw>:FSSweep[:IMMediate].....	515
:TRIGger<hw>:LFFSweep:IMMediate.....	515
:TRIGger<hw>:PSSweep[:IMMediate].....	516
:TRIGger<hw>[:SWEep][:IMMediate].....	516
:TRIGger<hw>:LFFSweep.....	516

```

:TRIGger<hw>:FSSweep:SOURce <Source>
:TRIGger<hw>:LFFSweep:SOURce <Source>
:TRIGger<hw>:PSSweep:SOURce <Source>
:TRIGger<hw>[:SWEep]:SOURce <Source>

```

Selects the trigger source for the corresponding sweeps:

- FSSweep - RF frequency
- LFFSweep - LF frequency
- PSSweep - RF level
- SWEep - all sweeps

The source names of the parameters correspond to the values provided in manual control of the instrument. They differ from the SCPI-compliant names, but the instrument accepts both variants.

Use the SCPI name, if compatibility is an important issue. Find the corresponding SCPI-compliant commands in [Cross-reference between the manual and remote control](#).

Setting parameters:

<Source> AUTO | IMMediate | SINGLE | BUS | EXTERNAL | EAUTO

AUTO [IMMediate]

Executes a sweep automatically.

In this free-running mode, the trigger condition is met continuously. I.e. when a sweep is completed, the next one starts immediately.

SINGLE [BUS]

Executes one complete sweep cycle.

The following commands initiate a trigger event:

*TRG on page 332

```

[:SOURce<hw>]:SWEep:POWer:EXECute
[:SOURce<hw>]:SWEep[:FREQuency]:EXECute
:TRIGger<hw>[:SWEep][:IMMediate], :TRIGger<hw>:
PSSweep[:IMMediate] and :TRIGger<hw>:FSSweep[:
IMMediate].

```

Set the sweep mode with the commands:

```

[:SOURce<hw>]:SWEep:POWer:MODEAUTO|STEP
[:SOURce<hw>]:SWEep[:FREQuency]:MODEAUTO|STEP
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE
AUTO|STEP

```

In step mode (STEP), the instrument executes only one step.

EXternal

An external signal triggers the sweep.

EAUTO

An external signal triggers the sweep. When one sweep is finished, the next sweep starts.

A second trigger event stops the sweep at the current frequency, a third trigger event starts the trigger at the start frequency, and so on.

*RST: AUTO

Example: See [Example "Setup an LF sweep"](#) on page 428

Usage: Setting only

:TRIGger<hw>:FPSweep:SOURce <FpTrigSource>

Selects the trigger source for the combined RF frequency / level sweep.

The parameter names correspond to the manual control. If needed, see table [Table 12-1](#) for selecting the trigger source with SCPI compliant parameter names.

Parameters:

<FpTrigSource> AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL | EAUTO

AUTO|IMMEDIATE

Executes the combined RF sweep automatically. In this free-running mode, the trigger condition is met continuously. I.e. as soon as a sweep is completed, the next one starts immediately.

SINGLE|BUS

Executes one complete sweep cycle triggered by the GPIB commands `[:SOURce<hw>] :SWEep:COMBined:EXECute` or `*TRG`. The mode has to be set to `[:SOURce<hw>] :SWEep:COMBined:MODE > AUTO`.

EXternal

An external signal triggers the sweep.

EAUTO

An external signal triggers the sweep. As soon as one sweep is finished, the next sweep starts. A second trigger event stops the sweep at the current frequency and level value pairs, a third trigger event starts the trigger at the start values, and so on.

*RST: No enum range assigned!

Manual operation: See ["Mode"](#) on page 130

:TRIGger<hw>:FSweep[:IMMEDIATE]

:TRIGger<hw>:LFFSweep:IMMEDIATE

:TRIGger<hw>:PSWeep[:IMMediate]
:TRIGger<hw>[:SWEep][:IMMediate]

Performs a single sweep and immediately starts the activated, corresponding sweep:

- FSWeep - RF frequency
- PSWeep - RF level
- LFFSweep - LF frequency
- SWEep - all sweeps

Effective in the following configuration:

- TRIG:FSW|LFFS|PSW|[:SWE]:SOUR **SING**
- SOUR:SWE:FREQ|POW:MODE **AUTO** or SOUR:LFO:SWE:[FREQ:]MODE **AUTO**

Alternatively, you can use the IMMediate command instead of the respective SWEep:
[FREQ:]|POW:EXECute command.

Example: TRIG
Starts all active sweeps.

Usage: Event

Manual operation: See "Execute Single Sweep" on page 134

:TRIGger<hw>:LFFSweep

Executes an LF frequency sweep in the following configuration:

- TRIG:LFFS:SOUR SING
- LFO:SWE:MODE AUTO

Example: LFO:SWE:MODE AUTO
TRIG:LFFS:SOUR SING
TRIG:LFFSweep

Usage: Event

12.19 UNIT Subsystem

The UNIT subsystem is used to set default units for parameters if no unit is indicated in a command. These settings are valid for the entire instrument.

Example: Setting default units for remote control

UNIT:POW V
UNIT:ANGL DEG

Sets V (volts) as unit of all power parameters, DEG (degrees) for the phase modulation angle and KMH for the speed.

:UNIT:ANGLE.....517
:UNIT:POWer.....517

:UNIT:ANGLE <Angle>

Sets the default unit for phase modulation angle. The command affects no other parameters, such as RF phase, or the manual control or display.

Parameters:

<Angle> DEGREE | DEGREE | RADIAN
 *RST: RADIAN

:UNIT:POWER <Power>

Sets the default unit for all power parameters. This setting affects the GUI, as well as all remote control commands that determine power values.

Parameters:

<Power> V | DBUV | DBM
 *RST: DBM

12.20 Direct Commands for the Stereo/RDS Coder Option R&S SMBB-B5

The direct commands allow you the access to all functions of the stereo coder option R&S SMBB-B5.

Some of the functions are also available via SCPI commands. In this case, we recommend that you use the SCPI commands to keep the settings of the R&S SMB100B and the stereo coder synchronized. Direct commands for which an SCPI command is available are marked with “for documentation reasons only” and the SCPI command is given.

To send the direct commands, use the command `[:SOURce] :STEReo:DIRect "command string"`.

To retrieve information, send the query `[:SOURce] :STEReo:DIRect? "command string"`.

All parameters are string parameters. Send them in quotation marks ("). These characters are part of the full direct command.

Before using the stereo coder, activate stereo modulation of the R&S SMB100B with the command `SOURce:STEReo:STATE ON`. The SCPI command `SOURce:STEReo:AUDio:FREQuency` sets the LF-Generator frequency. `SOURce:STEReo:MMF` limits the modulation frequency. These commands have no counterpart in the direct commands.

12.20.1 Programming Examples

Example: Alternative frequency lists (AF)

Alternative frequency lists can be transmitted in two ways.

- **Method A:**
Set the frequencies of an AF list one after the other; the frequency currently transmitted has to be specified as the first frequency.
- **Method B:**
Set the frequencies of an AF list in pairs, where each pair contains the frequency currently transmitted and an alternative frequency.
Enter the frequency pairs in ascending order.
Choose descending order only if the alternative frequencies belong to different regions or are used to broadcast different programs at different times.

A maximum of five AF lists can be generated. For type A lists, max. 25 frequencies per list can be specified, for type B lists, max. 12 frequencies per list.



Consider the following:

- Do not combine method A and B.
- You can generate a maximum of five AF lists.
For type A lists, you can specify up to 25 frequencies per list; for type B - up to 12.
- There is no validity check for the frequency lists. Make sure that the syntax is correct.

```
// Method A
// Generate a new alternative frequency list
STEReo:DIrect "AF=N,87.6,87.7,87.8"
// Set the group sequence
STEReo:DIrect "GS=0A,14A"
// The group sequence must contain group 0A
// The alternative frequencies are now transmitted in group 0A

// Add another alternative frequency list
STEReo:DIrect "AF=+,88.6,88.7,88.8"

// Method B
// Generate a new alternative frequency list
STEReo:DIrect "AF=N,87.6,90.2,87.6,90.2"
// Set the group sequence
STEReo:DIrect "GS=0A,14A"
// The group sequence must contain group 0A
// The alternative frequencies are now transmitted in group 0A

// Add another alternative frequency list
STEReo:DIrect "AF=+,88.6,91.2,88.6,91.2"
```

Example: Creating an EON (Enhanced Other Networks) data set

```
// Query the list of existing EON data sets
STEReo:DIrect? "EON-PI"

// the list shows the EON PI codes already used and codes remaining for new data sets

// Create an EON data set
STEReo:DIrect "EON-PI=1234"
// Set the program service (PS) name for the EON data set
STEReo:DIrect "EON-PS=1234,TEST EON"
// Set the group sequence, e.g. group 14A with variants 0 to 3
STEReo:DIrect "GS=0A,14A"

// Create an AF list for the EON
// Method A
STEReo:DIrect "EON-AFA=1234,N,87.6,87.7,87.8"
// Add further AF lists for the EON
STEReo:DIrect "EON-AFA=1234,+,88.6,88.7,88.8"
// Query the first AF list of the EON
STEReo:DIrect? "EON-AFA,1234,1"

// Create an AF list for the EON
// Method B
STEReo:DIrect "EON-AFB=1234,N,87.6,87.7,87.8"
// 87.6 = tuned frequency, 87.7 = mapped frequency 1 (variant 5),
// 87.8 = mapped frequency 2 (variant 6)
```

Example: Free Format Groups (FFGs)

In the user-definable groups 1A, 3A, 5A, 6A, 7A, 8A, 9A, 10A, 11A, 12A and 13A, any desired data can be transmitted. Five bits of this data are transmitted in block B and 16 bits each in blocks C and D of the specified group.

You can define up to 20 different data sequences.

```
// Define the transmitted data in group 1A
STEReo:DIrect "1A=05,0000000000,1FFFFFFFFF"
// Group 1A transmits 5 times "0000000000" followed by 5 times "1FFFFFFFFF"

// Set the group sequence, e.g. transmit the defined data in group 1A
STEReo:DIrect "GS=0A,1A"
```

Example: Transparent Mode

The transparent mode allows you to transmit user-defined binary data instead of the standard RDS data. The transparent mode uses blocks A to D of the RDS groups. Standard RDS data is suppressed and not transmitted.

You can define up to 20 different data sequences.

The binary data is sent even if it constitutes no valid or meaningful RDS data. Always delete the transparent data first, before you resume the transmission of standard RDS data.

Direct Commands for the Stereo/RDS Codex Option R&S SMBB-B5

```
// Transmit the alternating sequences '0123456789ABCDEF' and
// 'ABCDEF0123456789' instead of the RDS data

// Delete the transparent data
// Enable standard RDS data transmission
STEReo:DIReCt "TRANS=0"
```

12.20.2 Remote-Control Commands

STEReo:DIReCt "<FFG>=<RetrNumb>,<DataSeq#1>,<DataSeq#2>,..."
STEReo:DIReCt? "<FFG>"

Transmits data via free format groups (FFGs). A free format group can be filled with any desired data. (5 bits in block B and 16 bits each in blocks C and D of the group).

Note: This command causes that a queue is filled with data for a specific group. Sends the data only if the group in question is added to the group sequence with the command [STEReo:DIReCt](#).

Setting parameters:

<RetrNumb> Number of retransmissions

<DataSeq> You can define up to 20 different data sequences.
 Specify at least 10 characters per <DataSeq>. Add leading
 zeros, if any.
 00 Erases the data.
 Range: 0000000000 to 1FFFFFFFFF (10 ASCII coded
 hexadecimal characters each)

Parameters for setting and query:

<FFG> 1A | 3A | 5A | 6A | 7A | 8A | 9A | 10A | 11A | 12A | 13A
 Determines the free format group.
 To transmit the FFGs of the B group, use same commands.
 Replace the A groups by the B groups in the group
 sequence. If B groups are transmitted, block C is overwritten
 with the PI code.

Example: STEReo:DIReCt "1A=01,0123456789,1FFFFFFFFF"
 Fills a queue with the data "0123456789,1FFFFFFFFF". The
 data is sent in consecutive order in group 1A after group 1A is
 added to the group sequence.
 Query the data of group 1A
 STEReo:DIReCt? "1A"
 Response: "01,0123456789,1FFFFFFFFF"

STEReo:DIReCt "AF=<A>,<Freq#1>,<Freq#2>,..."
STEReo:DIReCt? "AF<z>"

Defines an alternative frequency list.

A maximum of five AF lists with max. 25 frequencies per list can be created.

Parameters:

<Freq> xxx.x
 Sets the alternative frequencies as ASCII coded decimal numbers.
 If list <z> is not available, the response is ().
 Range: 87.6 to 107.9

Setting parameters:

<A> **N**
 New AF list
 +
 AF list to be added.

Query parameters:

<z> AF list to be read.
 Range: 1 to 5

Example:

STEReo:DIReCt "AF=N,97.4,98.3"
 Defines an alternative frequency list, the alternative frequencies 97.4 and 98.3 are inserted.
 STEReo:DIReCt? "AF1"
 Response: "97.4,98.3"
 STEReo:DIReCt "AF=N"
 Deletes all frequency lists.

STEReo:DIReCt "ARI=<State>"

STEReo:DIReCt? "ARI"

(for documentation reasons only)

Activates ARI signal transmission.

Use the command [:SOURce]:STEReo:ARI:STATe instead.

Setting parameters:

<State> 0 | 1

Example:

STEReo:DIReCt "ARI=0"
 Deactivates ARI signal transmission.
 STEReo:DIReCt? "ARI"
 Response: "0"

STEReo:DIReCt "ARI-DEV=<Deviation>"

STEReo:DIReCt? "ARI-DEV"

(for documentation reasons only)

Sets the frequency deviation of the ARI signal (max. deviation).

Use the command [:SOURce]:STEReo:ARI[:DEViation] instead.

Setting parameters:

<Deviation>

Sets the frequency deviation.

Note: Always set a four-digit value. Specify leading zeros, if any.Range: 0000 to 1000 (ASCII coded decimal numbers),
corresponding to 0 Hz to 10 kHz**Example:**

STEReo:DIReCt "ARI-DEV=1000

Sets the ARI frequency deviation to 10 kHz.

STEReo:DIReCt? "ARI"

Response: "1000"

STEReo:DIReCt "ARI-ID=<Id>"**STEReo:DIReCt? "ARI-ID"**

(for documentation reasons only)

Selects the ARI identification.

Use the command [:SOURce] :STEReo:ARI:TYPE instead.

Parameters:

<Id>

0 | 1 | 2 | 3

0

Off

1

DK (traffic announcement identification)

2

BK (area identification)

3

DK and BK (traffic announcement identification and area identification)

Example:

STEReo:DIReCt "ARI-ID=0"

Deactivates the ARI identification.

STEReo:DIReCt? "ARI-ID"

Response: "0"

STEReo:DIReCt "BIN=<x>"

Defines and sends, or queries, binary test patterns. The BIN command causes the Stereo/RDS Coder to send periodic binary bit patterns instead of RDS data.

Parameters:

<x>

0

Binary mode OFF

1

00000000...,

2

11111111...,

Direct Commands for the Stereo/RDS Codex Option R&S SMBB-B5

3
01010101...,
4
11001100...

Example:

```
STEReo:DIrect "BIN=2"
```

The binary test pattern is set to "2" so that only "1s" are transmitted.

```
STEReo:DIrect "BK=<Code>"
```

```
STEReo:DIrect? "BK"
```

(for documentation reasons only)

Sets the ARI area identification.

Use the command `[:SOURce] :STEReo:ARI:BK [:CODE]` instead.

Parameters:

<Code> A | B | C | D | E | F

Example:

```
STEReo:DIrect "BK=E"
```

The ARI area identification is set to "E".

```
STEReo:DIrect? "BK"
```

Response: "E"

```
STEReo:DIrect "CT= <Hour>:<Min>:<Sec>,<Day>.<Month>.<Year>"
```

```
STEReo:DIrect? "CT"
```

Sets and activates transmission of the real-time clock.

Note: The CT data is transmitted in group 4A. Setting the real-time clock (CT command) automatically adds group 4A to the group sequence.

Do not manually add group 4A to, or remove group 4A from, the group sequence.

To remove group 4A from the group sequence, use the command `STEReo:DIrect`.

Setting parameters:

<Hour>:<Min>:<Sec> Range: 00:00:00 to 23:59:59

<Day>.<Month>.<Year> Range: 01.01.00 to 31.12.85

Example:

```
STEReo:DIrect "CT=20:30:59,01.08.03"
```

The real-time clock is set.

```
STEReo:DIrect? "CT"
```

Response: "20:31:06,01.08.03"

```
STEReo:DIrect "CT=off"
```

Deactivates transmission of the real-time clock signal in the RDS signal.

Note: This command is used to remove group 4A from the group sequence. Do not manually remove group 4A from the group sequence.

Example: `STEReo:DIrect "CT=off"`
 The real-time clock signal is no longer transmitted in the RDS signal.

Usage: Setting only

STEReo:DIrect "DI=<x>"

STEReo:DIrect? "DI"

Sets or reads the decoder information (DI).

This command reads, and if necessary changes, the current decoder operating mode (mono, stereo, etc.).

Parameters:

<x> Range: 0 to F (ASCII coded hexadecimal numbers)

Example: `STEReo:DIrect "DI=4"`

STEReo:DIrect "DS=<x>"

STEReo:DIrect? "DS"

(for documentation reasons only)

Selects/activates a storage area in the Stereo/RDS Coder.

If activated, the settings stored in the selected area can be loaded.

Use the command `[:SOURce] :STEReo:RDS:DATaset` instead.

Parameters:

<x> Range: 1 to 5

Example: `STEReo:DIrect "DS=2"`
 Storage area 2 is activated.

STEReo:DIrect "EON-AFA= <PI>,<A>,<Freq#1>,<Freq#2>,..."

STEReo:DIrect? "EON-AFA,<PI>,<z>"

Enhanced Other Networks: Defines type A alternative frequencies for the EON with the selected PI.

Parameters:

<PI> Range: 0000 to FFFF (ASCII coded hexadecimal numbers)

Direct Commands for the Stereo/RDS Coder Option R&S SMBB-B5

<Freq> xxx.x

Sets the alternative frequencies as ASCII coded decimal numbers.

If list <z> is not available, the response is ().

Note: For each Enhanced Other Network (EON), a maximum of five type A alternative frequency lists can be created.

Range: 87.6 to 107.9

Setting parameters:

<A> **N**

New AF list

+

AF list to be added.

Query parameters:

<z> AF list to be read.

Range: 1 to 5

Example:

STEReo:DIReCt "EON-AFA=1000,N,97.4,98.3"

Creates a type A alternative frequency list for the EON with PI=1000. The new list contains the alternative frequencies 97.4 MHz and 98.3 MHz.

STEReo:DIReCt? "EON-AFA,1000,1"

Queries the first type A alternative frequency list of the EON with PI=1000.

Response: "97.4,98.3"

STEReo:DIReCt "EON-AFB= <PI>,<A>,<Freq#1>,<Freq#2>,..."

STEReo:DIReCt? "EON-AFB,<PI>,<z>"

Enhanced Other Networks: Defines type B alternative frequencies for the EON with the selected PI.

Parameters:

<PI> Range: 0000 to FFFF (ASCII coded hexadecimal numbers)

Direct Commands for the Stereo/RDS Coder Option R&S SMBB-B5

<Freq> xxx.x

Sets the alternative frequencies as ASCII coded decimal numbers.

If list <z> is not available, the response is ().

Note: For each Enhanced Other Network (EON), a maximum of five type B alternative frequency lists can be created. Each list contains a maximum of five frequencies, where <Freq#1> is Tuned Frequency (TF) and <Freq#2..5> are the Mapped Frequencies (MF). A minimum of two frequencies per EON is required.

Range: 87.6 to 107.9

Setting parameters:

<A> **N**

New AF list

+

AF list to be added.

Query parameters:

<z> AF list to be read.

Range: 1 to 5

Example: See [STEReo:DIReCt](#).

STEReo:DIReCt "EON-DEL=<PI>"

Enhanced Other Networks: Deletes the complete EON with selected <PI>.

Parameters:

<PI> Range: 0000 to FFFF (ASCII coded hexadecimal numbers)

Example: STEReo:DIReCt "EON-DEL=1000"

Deletes the EON with PI=1000.

Usage: Setting only

STEReo:DIReCt "EON-PI=<PI>"**STEReo:DIReCt? "EON-PI"**

Enhanced Other Networks: Creates an EON or reads the list of the program identification (PI) codes of all EONs created so far.

Note: A maximum of eight EONs can be created.

Parameters:

<PI> **Note:** Always set a four-digit value. Leading zeros, if any, must also be specified.

Range: 0000 to FFFF (ASCII coded hexadecimal numbers)

Example: `STEReo:DIReCt "EON-PI=1000"`
Creates an EON with PI=1000.

STEReo:DIReCt "EON-PS=<PI>,<PS>"
STEReo:DIReCt? "EON-PS,<PI>"

Enhanced Other Networks: Sets the program service (PS) name for the EON with the selected <PI>.

Parameters:

<PI> Range: 0000 to FFFF (ASCII coded hexadecimal numbers)

Setting parameters:

<PS> 8 ASCII characters

Note: Always set an eight-digit value. Blank spaces, if any, must also be entered.

Example: `STEReo:DIReCt "EON-PS=1000,Test 123"`
Sets the program service name for the EON with PI=1000 to "Test 123".

STEReo:DIReCt "EON-PTY=<PI>,<PTY>"
STEReo:DIReCt? "EON-PTY,<PI>"

Enhanced Other Networks: Sets the program type (PTY) for the EON with the selected <PI>.

Parameters:

<PI> Range: 0000 to FFFF (ASCII coded hexadecimal numbers)

Setting parameters:

<PTY> Range: 00 to 31 (ASCII coded decimal numbers)

Example: `STEReo:DIReCt "EON-PTY=1000,10"`
Sets the program type for the EON with PI=1000 to "10".

STEReo:DIReCt "EON-TA=<PI>,<TA>"
STEReo:DIReCt? "EON-TA,<PI>"

Enhanced Other Networks: Sets the TA flag for the EON with the selected <PI>.

Parameters:

<PI> Range: 0000 to FFFF (ASCII coded hexadecimal numbers)

Setting parameters:

<TA> 0 | 1

Example: `STEReo:DIReCt "EON-TA=1000,1"`
Sets the TA flag for the EON with PI=1000 to "1".

STEReo:DIReCt "EON-TP=<PI>,<TP>"
STEReo:DIReCt? "EON-TP,<PI>"

Enhanced Other Networks: Sets the TP flag for the EON with the selected <PI>.

Parameters:

<PI>	Range:	0000 to FFFF (ASCII coded hexadecimal numbers)
------	--------	--

Setting parameters:

<TP>	0 1
------	-------

Example:

STEReo:DIReCt "EON-TP=1000,1"

Sets the TP flag for the EON with PI=1000 to "1".

STEReo:DIReCt "GS=<Group#1>,<Group#2>,...<Group#36>"
STEReo:DIReCt? "GS"

Sets or reads the group sequence.

Note: Sends only group A **or** group B data at a time. Transmits only groups that contain data. The groups 4A, 14B and 15B are automatically added to the group sequence and must not be added or removed manually.

Setting parameters:

<Group>	0A,1A,2A, ... to 15B
---------	----------------------

Example:

STEReo:DIReCt "GS=0A,1B,10A,15A"

The groups 0A, 1B, 10A and 15A are transmitted.

STEReo:DIReCt "IMP=<x>"
STEReo:DIReCt? "IMP"

(for documentation reasons only)

Sets external L, R impedances.

Use the SCPI command `[:SOURce] :STEReo:EXTeRnal:IMPedance` instead.

Setting parameters:

<x>	1 2
	1
	600 Ohms
	2
	100 kOhm

Example:

STEReo:DIReCt "IMP=1"

Sets the external impedance to 600 Ohms.

STEReo:DIReCt

"MASK=<NumbGroups>,<ErrFreeGroups>,<BitMaskBlcA>,<BitMaskBlcB>,<BitMaskBlcC>,<BitMaskBlcD>"

STEReo:DIReCt? "MASK"

Sets a bit mask to generate defined bit errors in the RDS data stream.

Setting parameters:

<NumbGroups>	<p>Number of groups to be masked.</p> <p>If <NumbGroups> = 0, the RDS groups are continuously linked to the error mask.</p> <p>If <NumbGroups> ≠ 0, this value is decremented after each errored group transmitted. When zero count is reached, no further errored groups are transmitted, and STEReo:DIReCt is set to "0".</p> <p>Range: 00 to FF (hexadecimal values)</p>
<ErrFreeGroups>	<p>Number of error-free groups to be inserted after each errored group.</p> <p>Range: 00 to FF (hexadecimal values)</p>
<BitMaskBlc>	<p><BitMaskBlcA>,<BitMaskBlcB>,<BitMaskBlcC>,<BitMaskBlcD></p> <p>Hexadecimal bit mask for blocks A, B, C and D of the RDS groups. For each block, 26 bits (16 data bits and 10 CRC bits) have to be entered in hexadecimal code.</p> <p>Range: 00000000 to 3FFFFFFF</p>

Example:

STEReo:DIReCt
 "MASK=09,01,0000001,0000000,0000000,0000000"
 In nine RDS groups, the least significant bit of the CRC code of block A is inverted, i.e. an errored bit is sent. After each errored group, one error-free group is inserted. After transmission of the complete sequence, MASK_STATE is set to "0".
 With the command MASK_STATE=1, the above sequence (9 errored groups with one error-free group inserted after each errored group) is retransmitted once.
 Then, MASK_STATE is again set to "0".

STEReo:DIReCt "MASK_STATE=<State>"**STEReo:DIReCt? "MASK_STATE"**

Switches on or off the transmission of defined bit errors in the RDS data stream.

Setting parameters:

<State> 0 | 1

Example:

```
STEReo:DIReCt "MASK_STATE=1"
```

With the command `MASK_STATE=1`, a sequence of errored groups as defined by the `MASK` command is retransmitted once if the number of groups to be masked is other than zero. Then, `MASK_STATE` is automatically set to "0".

If the number of groups to be masked is equal to zero in the `MASK` command (which means continuous error transmission), the masking function can be switched off with `MASK_STATE=0`.

Example:

```
STEReo:DIReCt? "MASK_STATE"
```

Response: "1"

The `MASK_STATE` query provides information whether the RDS data stream is linked to an error mask.

```
STEReo:DIReCt "MODE=<EMODE>"
```

```
STEReo:DIReCt? "MODE"
```

(for documentation reasons only)

Sets one of various transmission modes.

Use the command `[:SOURce] :STEReo:AUDio:MODE` instead.

Setting parameters:

```
<EMODE> 1 | 2 | 3 | 4 | 5
```

1

L: Signal in left channel only

2

R: Signal in right channel only

3

Signal of equal frequency and phase in left and right channel

4

Signal of equal frequency and opposite phase in left and right channel

5

Different, independent signals in left and right channel (5 is not possible if the internal LF generator is selected as source (SRC = LFGen)).

Example:

```
STEReo:DIReCt "MODE=1"
```

Only the signal of the left channel is transmitted.

```
STEReo:DIReCt "MS=<Flag>"
```

```
STEReo:DIReCt? "MS"
```

Sets or reads the music/speech flag.

The flag signals whether music or speech is being transmitted.

Setting parameters:

```
<Flag> M | S
```

Example: `STEReo:DIReCt "MS=M"`
 The music/speech flag is set to "M", which signals that music is transmitted.

STEReo:DIReCt "MPX-DEV=<Deviation>"
STEReo:DIReCt? "MPX-DEV"

(for documentation reasons only)

Sets the MPX frequency deviation (max. deviation).

Use the the command `[:SOURce] :STEReo [:DEViation]` instead.

Setting parameters:

<Deviation> **Note:** Always set a four-digit value. Leading zeros, if any, must also be specified.

Range: 00000 to 10000 (ASCII coded decimal numbers),
 corresponding to 0 Hz to 100 kHz

Example: `STEReo:DIReCt "MPX-DEV=00201"`
 Sets the MPX frequency deviation to 2.01 kHz.

STEReo:DIReCt "PI=<PI>"
STEReo:DIReCt? "PI"

Sets or reads the RDS program identification (PI) code.

Setting parameters:

<PI> **Note:** Always set a four-digit value. Add leading zeros, if any.

Range: 0000 to FFFF (ASCII coded hexadecimal numbers)

Example: `STEReo:DIReCt "PI=1234"`
 The program identification code to be transmitted is set to "1234".

STEReo:DIReCt "PIL=<State>"
STEReo:DIReCt? "PIL"

(for documentation reasons only)

Activates/deactivates the pilot tone.

Use the command `[:SOURce] :STEReo:PILot:STATe` instead.

Setting parameters:

<State> 0 | 1

Example: `STEReo:DIReCt "PIL=1"`
 The pilot tone is activated.

STEReo:DIReCt "PIL-DEV=<Deviation>"

STEReo:DIReCt? "PIL-DEV"

(for documentation reasons only)

Sets the pilot tone frequency deviation (max. deviation).

Use the command `[:SOURce] :STEReo:PILot[:DEViation]` instead.

Setting parameters:

<Deviation>

Note: Always set a four-digit value. Add leading zeros, if any.

Range: 0000 to 1000 (ASCII coded decimal numbers),
corresponding to 0 Hz to 10 kHz

Example:

`STEReo:DIReCt "PIL-DEV=1000"`

Sets the frequency deviation of the pilot tone to 10 kHz.

STEReo:DIReCt "PIL-PH=<Phase>"

STEReo:DIReCt? "PIL-PH"

(for documentation reasons only)

Sets the pilot tone phase.

Use the command `[:SOURce] :STEReo:PILot:PHASe` instead.

Setting parameters:

<Phase>

Note: Always set a two-digit value with a sign ("+" or "-") in front of it. Add leading zeros, if any.

Range: -5.0 to +5.0 (ASCII coded decimal numbers), corresponding to ± 5.0

Example:

`STEReo:DIReCt "PIL-PH=-33"`

Sets the pilot tone phase.

STEReo:DIReCt "PRE=<Preemphasis>"

STEReo:DIReCt? "PRE"

(for documentation reasons only)

Sets one of various preemphasis options.

Use the commands `[:SOURce] :STEReo:AUDio:PREemphasis:STATe` and `[:SOURce] :STEReo:AUDio:PREemphasis` instead.

Setting parameters:

<Preemphasis>

0 | 1 | 2

0

Off

1

50 μ s

2

75 μ s

Example: `STEReo:DIReCt "PRE=1"`
 The preemphasis is set to 50 us.

STEReo:DIReCt "PRESET"

Sets the default settings in accordance with specifications.

Example: `STEReo:DIReCt "PRESET"`

Usage: Event

STEReo:DIReCt "PS=<PS>"

STEReo:DIReCt? "PS"

Sets or reads the RDS program service (PS) name.

Setting parameters:

<PS> 8 ASCII characters

Note: Always set an eight-digit value. Blank spaces, if any, must also be entered.

Special characters in the program service name are entered with a leading back slash (\) followed by the decimal code of the special character according to table E1 of CENELEC.

Example: `STEReo:DIReCt "RT=02,0,test text with \217"`
 Sets the program service name. 217 denotes the German letter ü.

STEReo:DIReCt "PS-TABLE=<Table>"

STEReo:DIReCt? "PS-TABLE"

Selects the character set table used for the display of the RDS program service (PS) name in the receiver.

The information concerning the character set is transmitted in segment 0 of the PS. Segment 0 is repeatedly transmitted if the value for `PS-TABLE > 0`. For `PS-TABLE = 0` no information concerning the character set is transmitted.

Setting parameters:

<Table> 0 | 1 | 2 | 3

0

No information concerning the character set table in the PS

1

Table E.1 is used.

2

Table E.2 is used.

3

Table E.3 is used.

Example: `STEReo:DIReCt "PS-TABLE=2"`

The information concerning the character set is transmitted in segment 0 of the PS in group 0A. To this end, segment 0 is transmitted repeatedly. At the first transmission segment 0 contains the information about the character set, at the second transmission segment 0 contains the first two characters of the PS.

STEReo:DIReCt "PTY=<PTY>"

STEReo:DIReCt? "PTY"

Sets or reads the program type (PTY).

Setting parameters:

<PTY>

Note: Always set a two-digit value. Add leading zero, if any.

Range: 00 to 31 (ASCII coded decimal numbers)

Example: `STEReo:DIReCt "PTY=08"`

Sets the program type.

STEReo:DIReCt "PTYN=<PTYN>"

STEReo:DIReCt? "PTYN"

Sets or reads the RDS program type (PTY) name.

Setting parameters:

<PTYN>

8 ASCII characters

Note: Always set an eight-digit value. Add blank spaces, if any.

Example: `STEReo:DIReCt "PTYN=Football"`

Sets the program type name.

`STEReo:DIReCt "GS=0A,10A"`

Group 10A is activated in addition to group 0A.

The specified program type name is transmitted.

STEReo:DIReCt "RDS=<State>"

STEReo:DIReCt? "RDS"

(for documentation reasons only)

Switches RDS on or off.

Use the command `[:SOURce] :STEReo:RDS:STATe` instead.

Setting parameters:

<State>

0 | 1

Example: `STEReo:DIReCt "RDS=1"`

Activates RDS.

STEReo:DIRect "RDS-PH=<Phase>"

STEReo:DIRect? "PDS-PH"

Sets the RDS phase.

Setting parameters:

<Phase> Range: 000 to 359 (ASCII coded decimal numbers)

Example: STEReo:DIRect "RDS-PH=100"

Sets the RDS phase.

STEReo:DIRect "RDS-DEV=<Deviation>"

STEReo:DIRect? "RDS-DEV"

(for documentation reasons only)

Sets the RDS frequency deviation (max. deviation).

Use the command `[:SOURce] :STEReo:PILot [:DEVIation]` instead.

Setting parameters:

Note: Always set a four-digit value. Add leading zeros, if any.
Range: 0000 to 1000 (ASCII coded decimal numbers),
corresponding to 0 Hz to 10.00 kHz)

Example: STEReo:DIRect "RDS-DEV=0201"

Sets the RDS frequency deviation to 2.01 kHz.

STEReo:DIRect "RDS-PRESET"

All RDS-specific parameters are deleted or set to default values.

Example: STEReo:DIRect "RDS-PRESET"

Sets all RDS parameter to their preset values.

Usage: `Event`

STEReo:DIRect "RT=<RetranNumber>,<A/
BFlag>,<RadioTextMsg#1>,<RadioTextMsg#2>"

STEReo:DIRect? "RT"

Sets a flag signaling the transmission of new radio text and the message of the radio text.

Setting parameters:

<RetranNumber>	Range:	00 to 15 (ASCII coded decimal numbers), number of retransmissions of radio text message
----------------	--------	---

<A/BFlag>	0 1
-----------	-------

If the A/B flag is set, the A/B bit in group 2A is toggled to signal that a new radio text message is transmitted.

Direct Commands for the Stereo/RDS Coder Option R&S SMBB-B5

<RadioTextMsg> Max. 64 characters

Two texts of 64 characters each can be transmitted in a radio text message.

Note: For group B, the length of a radio text is limited to 32 characters. Special characters in the radio text are entered with a leading back slash (\) followed by the decimal code of the special character according to table E1 of CENELEC.

Example: STEReo:DIReCt "RT=02,0,test text with \217"

Sets the radio text message. 217 denotes the German letter ü.

STEReo:DIReCt "SPS=<Time>,<PSN#1>,<PSN#2>,...<PSN#20>"
STEReo:DIReCt? "SPS"

Switches program service names (PSN). The program service name automatically changes after the set time interval.

Parameters:

<PSN> 8 ASCII characters

Max. 20 program service names of eight characters each can be entered.

Note: Enter the program service names as 8-digit texts. Add blank spaces, if any.

STEReo:DIReCt "SPS=0" stops the transmission of the scrolling PS and starts the transmission of the standard PS.

Setting parameters:

<Time> Time interval in seconds

Range: 00 to 59 s

Example: STEReo:DIReCt "SPS=05,TEST0123,TEST4567"

Transmits the program service names "TEST0123" and "TEST4567" alternately, each 5 seconds.

STEReo:DIReCt "SRC=<SigSource>"
STEReo:DIReCt? "SRC"

(for documentation reasons only)

Selects the signal source.

Use the command [:SOURce] :STEReo:SOURce instead.

Setting parameters:

<SigSource> 0 | 1 | 2 | 3

0
Off

1
External analog (via L and R inputs)

2
External digital

3

Internal with LF generator

Example:`STEReo:DIReCt "SRC=1"`

Selects the external analog L and R inputs as source.

STEReo:DIReCt? "STATUS"

Status request whether the encoder or the update loader program is being executed.

Return values:

<Status>

ENC

Encoder program is running.

UPL

Update loader program is running.

Example:`STEReo:DIReCt? "STATUS"`

Response: "ENC"

Usage:

Query only

STEReo:DIReCt "STORE=<DataSet#>"

Saves data in the flash memory. All RDS-specific settings are stored in data set <Data-Set#> of the flash memory.

Setting parameters:

<DataSet#>

Range: 1 to 5

Example:`STEReo:DIReCt "STORE=1"`

Current setting are saved as data set 1.

Usage:

Setting only

STEReo:DIReCt "TA=<State>"**STEReo:DIReCt? "TA"**

(for documentation reasons only)

Sets or reads the traffic announcement flag.

This flag signals whether traffic information is being broadcast.

Use the command `[:SOURce] :STEReo:RDS:TRAFfic:ANNouncement [:STATe]` instead.**Setting parameters:**

<State>

0 | 1

Example:`STEReo:DIReCt "TA=1"`

STEReo:DIReCt "TP=<State>"

STEReo:DIReCt? "TP"

(for documentation reasons only)

Sets or reads the traffic program flag. This flag signals whether traffic information is transmitted.

Use the command `[:SOURce] :STEReo:RDS:TRAFfic:PROGram[:STATe]` instead.

Setting parameters:

<State> 0 | 1

Example: STEReo:DIReCt "TP=1"

STEReo:DIReCt "TRANS<DataNumber>=<DataStream>"

STEReo:DIReCt? "TRANS<DataNumber>"

Transparent mode.

An RDS data stream of binary data is generated. If transparent data is selected, all other RDS data is ignored.

Parameters:

<DataNumber> Max. 20 different data sequences can be defined.

Range: 0 to 13

<DataStream> 16 ASCII coded hexadecimal characters (blocks A to D of the RDS groups)

TRANS=0 deletes all transparent data and switches back to normal RDS data transmission.

Note: 16 characters must be specified for each data sequence. Leading zeros, if any, must also be specified. Transmits the data even if it constitutes no meaningful RDS data.

Example: STEReo:DIReCt "TRANS1=0123456789ABCDEF"
Sends the data "0123456789ABCDEF" instead of the RDS data.

13 Troubleshooting and Error Messages

The R&S SMB100B distinguishes between various messages such as status messages, error messages, warnings, or information that are displayed in the "Info" line on the screen, and also entered in the error/event queue of the status reporting system.

This section describes the types of error messages and warnings. The status reporting system is described in detail in [Chapter A.1.5, "Status Reporting System"](#), on page 577.

You can also access an info window with detailed information about all messages in a history list. For details, see [Chapter 13.4, "Querying Error Messages"](#), on page 541

13.1 Error Messages

Error messages indicate errors in the instrument. They are displayed in different colors depending on their importance and display duration. Errors (e.g. no calibration data) are displayed in red, information (e.g. file not found) and warnings in black. Warnings indicate less significant errors (e.g. the instrument operates outside specified data).

Some error messages require that the error must be eliminated before correct instrument operation can be ensured. To access the "Info" dialog with a list of current messages and a detailed description of each message, select "Info".

In the remote control mode, error messages are entered in the error/event queue of the status reporting system and can be queried with the command `SYSTem:ERRor?`. If the error queue is empty, 0 ("No error") is returned.

13.1.1 Volatile Messages

Volatile messages report automatic settings in the instrument (e.g. switching off incompatible types of modulation) or on illegal entries that are not accepted by the instrument (e.g. range violations). They are displayed in the info line on a yellow background. They are displayed on top of status information or permanent messages.

Volatile messages do not normally demand user actions and disappear automatically after a brief period of time. They are stored in the history, however.

Remote command:

```
:SYSTem:ERRor:ALL? or  
:SYSTem:ERRor:CODE[:NEXT]?
```

13.1.2 Permanent Messages

Permanent messages are displayed if an error occurs that impairs further instrument operation, e.g. a hardware fault. The error signaled by a permanent message must be eliminated before correct instrument operation can be continued.

The message is displayed until the error is eliminated. It covers the status display in the info line. After error elimination, the message automatically disappears and is also recorded in the history.

Remote command:

```
:SYSTem:ERRor:STATic?
```

13.2 SCPI-Error Messages

The SCPI error messages are the same in all SCPI instruments. Detailed information and an overview of all error messages as defined in SCPI standard can be found in the corresponding documentation.

SCPI errors have negative codes (numbers). The error text being entered into the error/event queue or being displayed is printed in bold face on the left together with the error code. Below the error text, there is an explanation as to the respective error.

13.3 Device-Specific Error Messages

The following table contains all error messages specific for the instrument in alphabetical order and an explanation of the error situation. The positive error codes mark the errors specific to the instrument.

The device-specific error messages set bit 3 in the ESR register.



The index provides a list of the error messages sorted according to their error codes.

Error code	Error	Description	Remedy
50	Extern reference out of range or disconnected	External reference is selected but no external signal is applied or the signal is out of range.	<ul style="list-style-type: none"> Check the selected reference signal source (internal or external) in the "Setup > Reference Oscillator" dialog. Change setting to 'internal' if no appropriate external source is available.
140	This modulation forces other modulations off	A modulation has been switched on which cannot be used at the same time as an already active modulation. The previous modulation has been switched off.	
180	Adjustment failed	Adjustment could not be executed.	Generate the adjustment data and load it into the device
182	Adjustment data missing	Adjustment data is missing.	Generate the adjustment data and load it into the device

Error code	Error	Description	Remedy
183	Adjustment data invalid	Adjustment data is invalid and must be restored.	Generate the adjustment data and load it into the device
200	Cannot access hardware	The data transmission to a module was unsuccessful.	The module is not installed, not properly installed or missing.
201	Hardware revision out of date	A later version of certain parts of the instrument is necessary to execute the function selected.	The driver does not support the installed version of a module.
202	Cannot access the EEPROM	An error occurs when writing or reading a EEPROM.	The EEPROM is possibly defect. Replace it.
203	Invalid EEPROM data	Reading a EEPROM is possible, however the data are inconsistent.	
204	Driver initialization failed	Initialization of a driver fails when booting the instrument firmware.	The driver is not compatible with the hardware or software configuration of the instrument.
241	No current list	There is no list selected. To execute the required operation, a list has to be selected in the related dialog. If no list is available, a new list must be created.	
242	Unknown list type specified	The list type selected is not valid for the required operation.	Check the selected list type.
460	Cannot open the file	The selected file cannot be opened.	Check the path and file name.
461	Cannot write file	The file cannot be written.	Check if the file is read-only.
462	Cannot read file	The file cannot be read.	Check if the file contents are compatible with the file type.
463	Filename missing	The required operation cannot be executed because the file name is not specified.	Enter file name when creating list.
464	Invalid filename extension	The file extension is not valid for the required operation.	Check the file extension.
465	File contains invalid data	The selected file contains data that is not valid for the file type. The file extension determines the data that is valid for this file type. If the file extension is changed, the lists are no longer recognized and the data is therefore invalid.	Check the file extension.

Also the R&S SMB100B provides


13.4 Querying Error Messages

The R&S SMB100B monitors the functions performed and automatically detects errors and irregularities. The instrument displays the messages in the "Info" line and records them in the background with a detailed description.

Find details to the system messages in [Chapter 13, "Troubleshooting and Error Messages"](#), on page 539.

To display information on static errors and error history

1. In the taskbar, select the "Info" icon.
2. For some messages, the information line appears briefly on the home screen. Selecting the info line also opens the dialog.

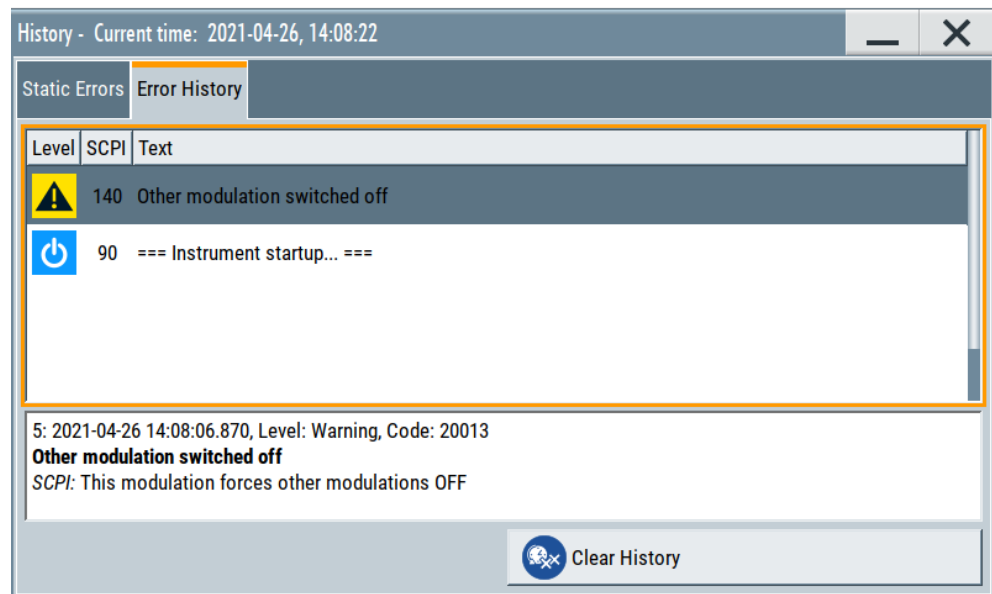

- The "Static Errors" dialog lists the last monitored messages chronologically and displays additional information on the highlighted message.
- The "Error History" dialog lists the accumulated messages with a short description.

Volatile errors are reported once, at the time they appear. If identical errors occur subsequently, they are not reported repeatedly.

In the "Info" line, identical errors are displayed repeatedly only if the original error has already disappeared from the display. If queried by SCPI command, identical errors are only reported if the original error has already been retrieved from (and hence not any more present in) the error queue.



Indication and handling of permanent messages

If any critical error occurs, the R&S SMB100B automatically shows the icon in the taskbar. Select the icon to obtain information on the error and the number of occurrences.

The icon is assigned to permanent messages. The message and icon are displayed until the error is eliminated.

Static Errors/Error History

Toggles between "Static" and "History" view of the info dialog.

Remote command:

`:SYSTem:ERRor[:NEXT]?` on page 488

Each time a `SYST:ERR:NEXT?` query is sent, the eldest entry in the error queue is returned and at the same time cleared in the list.

[:SYSTem:ERRor:STATic?](#) on page 489

Queries the list of all errors.

Clear History

Clears all messages in the "History" view.

Remote command:

[:SYSTem:ERRor:ALL?](#) on page 486

Each time a `SYST:ERR:ALL?` query is sent, the error queue is returned and at the same time cleared.

[:SYSTem:ERRor:HISTory:CLEar](#) on page 488

Clears the messages in the "History" view.

13.5 Resolving Network Connection Failures

Several issues may cause failures in the network connection to the instrument. This section lists the most likely reasons and the recommended solutions.

Common reasons for network connection failures

- Network connecting cables and cable connectors of poor quality
- Incompatibility between the network interface of the R&S SMB100B and certain switches or routers available on the market
- An invalid IP address assigned to the instrument

Possible solutions to network connection failures

1. **NOTICE!** Connecting to the network can cause network failure. Errors can affect the entire network.

Consult your network administrator before performing the following tasks:

- Connecting the instrument to the network
- Configuring the network
- Changing IP addresses

2. Try out the following to resolve network connection failures:

- Check the network infrastructure. Exchange connecting cables, if obvious damage is visible.
See also ["Cable selection and electromagnetic interference \(EMI\)"](#) on page 26.
- Observe the link status LED on the R&S SMB100B or the connected network device. The link status LED is located next to the LAN connector.
If a link failure is detected, connect the instrument to a different device port or to a different network device.
- Check whether the LAN interface and the required LAN services are enabled.
See [Chapter 10.4.3, "Configuring LAN Services"](#), on page 254.
- If the IP address is set manually (no DHCP) or obtained via the Zeroconf (APIPA) protocol:

- Check whether the IP address of the instrument is within the network's address range.
- Check whether the IP address is valid.

See also "IP Address" on page 277.

13.6 Measuring USB Cable Quality

To check the quality of the USB cable, see the service manual of the R&S SMB100B.

13.7 Requesting Instrument Configuration and Specifications

The R&S SMB100B is equipped with various hardware and software components. To get an overview of what your instrument is equipped with, you can request the assemblies, hardware and software options, and the firmware version. The components are structured according to the hardware configuration, software options, including the license management, and externally used Rohde & Schwarz equipment, like R&S NRP power sensors.



Software options purchased at a later stage can be activated with a keycode. The activation code is supplied with the software option. How to install options is described in chapter 4 of the R&S SMB100B service manual.

The installation of hardware options purchased at a later stage is also described in chapter 4 of the service manual. Most of the hardware options have to be installed at an authorized Rohde & Schwarz service center.

13.7.1 Hardware Configuration Settings

Access:

- Select "System Config > Setup > Instrument Assembly > Hardware Config".

Home

Hardware Config

Info

General

RF Assembly

Counter

Assembly	Part Number	Serial Number	Revision	Slot
SMB100B	1422.1000k02	0		
FRONT.BB	1422.4350.02	100000	01.00	PCI-E slot
MB150	1422.4550.02	100000	01.00	PCI-E slot
PSU150	2118.2067.01	100000	01.00	Not detected, but inserted
IFB.BV	1423.5009.02	100000	01.00	
GPB-FPGA			01.00	
IPM21	1206.3122.00	100000	01.00	PCI-E slot
BIOS				

The "Hardware Config" dialog lists all installed assemblies and externally connected instruments with information on their part and serial numbers, and revision states. The BIOS version is also listed; firmware updates do not update the BIOS version.

The dialog is divided in tabs, according to the hardware components of the signal domains. The "Counter" tab provides information on the operation time and number of times the instrument was powered on.

The remote commands required to query the hardware configuration are described in [Chapter 12.7, "DIAGnostic Subsystem"](#), on page 347.

Assembly

The tables in the tabs show characteristics of the installed assemblies.

"Assembly" Assembly designation.

"Part Number" Part number of the assembly.

"Serial Number" Serial number of the assembly.

"Revision" Revision state of the assembly.

"Slot" Indicates whether the assembly is connected to the serial bus or PCI bus.

Remote command:

`:DIAGnostic<hw>:BGInfo?` on page 348

Counter

Displays information on the operation times of the R&S SMB100B.

Operation Time / h ← Counter

Displays the operation time in hours so far.

Remote command:

[:DIAGnostic:INFO:OTIME?](#) on page 349

Power On Count ← Counter

Displays the number the instrument has been turned on.

Remote command:

[:DIAGnostic:INFO:POCount?](#) on page 349

Last Factory Calibration ← Counter

Displays the date of the last factory calibration.

Remote command:

[:CALibration:DATA:FACTory:DATE?](#) on page 346

13.7.2 Versions/Options Settings

Access:

- Select "System Config > Setup > Instrument Assembly > Versions / Options".

Firmware	Hardware Options	Software Options	Versions	
Package	Version			
FW	4.20.044			
Service Pack	not installed			
Bios Version	VirtualBox			

Downgrade Info:

Package	Version		
Factory Version	4.20.044		
Min. Version	4.00.016.00		

The Min. Version is the first version supporting all hardware modules installed in this instrument.
Please read release notes carefully before downgrading, some software options and features may get lost.

Show Open Source Acknowledgements

The "Versions/Options" dialog shows the version of the installed instrument firmware, the hardware and software options, the data sheet and the software components of the firmware. The BIOS version is also listed; firmware updates do not update the BIOS version.

The remote commands required to query the hardware configuration are described in [Chapter 12.7, "DIAGnostic Subsystem"](#), on page 347.

Firmware

Shows the firmware version and the version of the software platform.

Note: Your instrument is delivered with the latest firmware version available.

You can download firmware updates and the "Release Notes" that describe the modifications and the firmware update procedure.

See www.rohde-schwarz.com/firmware/smb100b

Remote command:
n.a.

Downgrade Info

Shows downgrade information, like factory firmware version and minimum firmware version to that the instrument can be downgraded.

Remote command:
n.a.

Show Open Source Acknowledgments

Accesses the list of the used open-source software packages and the corresponding verbatim license texts.

Hardware Options/Software Options

The tables in the "Hardware" and "Software" tabs list the installed hardware and software options.

"Option"	Short name of option
"Designation"	Name of option
"Expiration Date"	For regular options, "Permanent" is indicated in this column. Some options are available as trial versions. This column shows their expiration date. After this date, the option is no longer available on the instrument.

Remote command:
*OPT? on page 330
*IDN? on page 329

Versions

The "Versions" tab shows the versions of the technical specification of the R&S SMB100B and of the software components that comprise the firmware.

"Package"	Name of the component.
"Version"	Current issue of the component. E.g. the data sheet covers the technical data of the hardware components of the factory settings. See also "Data Sheet" on page 292.

Remote command:
:SYSTem:SPECification:VERSion:FACTory? on page 503

13.7.3 How to Query Instrument Configuration

To get information on the components and installed options of the R&S SMB100B, proceed as described in the following examples.

Checking the installed hardware options

To find out the installed options:

1. Select "System Config > Setup > Instrument Assembly > Versions/Options".
2. Select "Hardware Options".

Firmware	Hardware Options	Software Options	Versions	
				X
Option	Designation			
SMBB-B3	1 GHz Reference			
SMBB-B5	Stereo/RDS Coder			
SMBB-B1H	High Performance OCXO			
SMBB-B86	Remote Control (GPIB and USB)			
SMBB-B106	RF option 9 KHz to 6 GHz			

The dialog lists all hardware options that are installed on the R&S SMB100B.

Proceed the same way to get information for instance on the firmware, or the installed software options in the corresponding tab.

Checking the RF hardware assembly

To find out the installed RF hardware:

1. Select "System Config > Setup > Instrument Assembly > Hardware Config".

2. Select "RF Assembly".

General RF Assembly Counter ✕				
Assembly	Part Number	Serial Number	Revision	Slot
STEREOCODER	1407.3240.00	100000	01.00	
FIRMWARE			01.00	
DSP			01.00	
OCX10M	1416.2508.04	100000	04.00	
HP6	1422.4180.02	100000	01.00	
HP6-CPLD (Hw)			00.00	
RFBB	1422.4009.02	100000	01.00	
MOD-FPGA			01.00	
SMBB_MOD (Hw)			00.00	
SMBB_MOD (Fw)			00.00.00.00	

The dialog lists the RF hardware components that are installed on the R&S SMB100B.

Proceed the same way to get information for instance on general or baseband hardware modules, or on the operating times of the R&S SMB100B in the corresponding tab.

13.7.4 How to Request the Data Sheet

You can access data sheet related information via the LXI web browser, see "[Data Sheet](#)" on page 292.

13.8 Collecting Information for Technical Support

If you encounter problems that you cannot solve yourself, contact your Rohde & Schwarz support center as listed at <http://www.customersupport.rohde-schwarz.com>. Our support center staff is optimally trained to assist you in solving problems.

The support center finds solutions more quickly and efficiently if you provide them with information on the instrument and an error description.


- The following dialog boxes in the "Setup > Instrument Assembly" menu provide useful information:
 - **Hardware Configuration:** hardware assemblies

- **Software and Options:** the status of all software and hardware options installed on your instrument
- **System Messages:** displayed in the "Info" line and provide information on any errors that have occurred
- **Support file:** a special file (*.tar.gz file) with important support information that can be created automatically.
The support *.tar.gz file has a user definable name and contains the following files and information:
 - SgErrors.txt: chronological record of errors
 - SystemRestaurationSMBB.savrc1.txt: instrument settings at the last correct shutdown of the instrument
 - UndoHistSuppInfo.xml: list of the last user interactions
 - DeviceFootprint_<SerialNumber>_<Date>_<Time>.xml: service-related information on the instrument's configuration.
 - crashlog.txt, coredump: Postmortem debug info
 - Several files with information on the last performed adjustment and self-test.

See also the description of error messages [Chapter 13.1, "Error Messages"](#), on page 539.

To collect error information in a support file

1. Connect a USB device to the R&S SMB100B.
2. Select "System Config > Setup > Maintenance > Create R&S Support Information".
3. In the "Create R&S Support Information" dialog, navigate to the /usb directory. Enter the support filename, for example RSSupport_DeviceInfo.

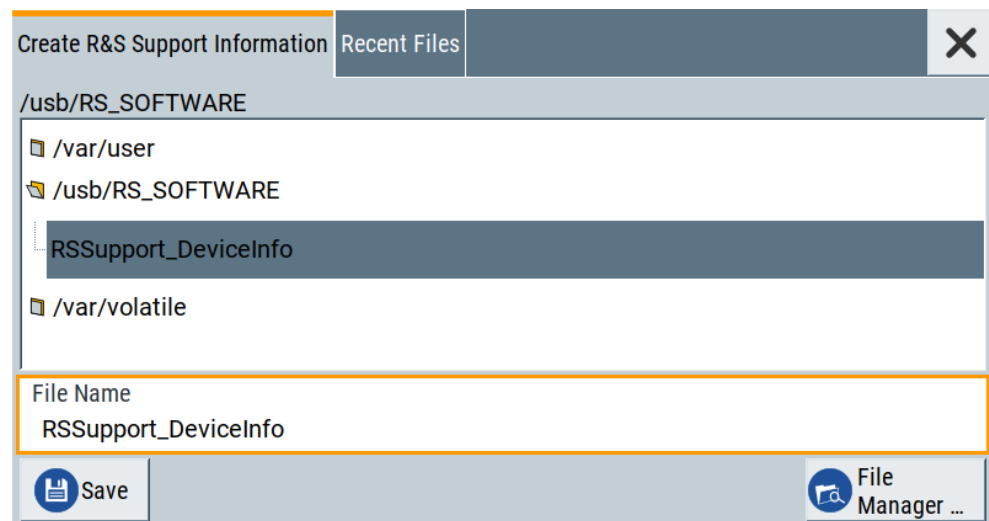

The error information and further required data is collected automatically. The support file `RSSupport_DeviceInfo.tar.gz` is created and stored in the /usb directory.

Collect the error information and attach it to an email in which you describe the problem. Send the email to the customer support address for your region as listed on the Internet (<http://www.customersupport.rohde-schwarz.com>).

To remove sensitive data

- For information on how to handle or remove the sensitive data from your instrument, refer to the description "Resolving Security Issues when working with R&S SMB100B".

Packing and transporting the instrument

- If the instrument has to be transported or shipped, see [Chapter 14, "Transporting"](#), on page 552.

13.9 Contacting Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 13-1: QR code to the Rohde & Schwarz support page

14 Transporting

Lifting and carrying

See:

- ["Lifting and carrying the product"](#) on page 19
- [Chapter 3.1.1, "Lifting and Carrying"](#), on page 23.

Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection.

Securing

When moving the R&S SMB100B in a vehicle or using transporting equipment, make sure that the R&S SMB100B is properly secured. Only use items intended for securing objects.

Transport altitude

Unless otherwise specified in the data sheet, the maximum transport altitude without pressure compensation is 4500 m above sea level.

15 Maintenance, Storage and Disposal

The product does not require regular maintenance. It only requires occasional cleaning. It is however advisable to check the nominal data from time to time.

15.1 Cleaning

How to clean the product is described in "[Cleaning the product](#)" on page 21.

Do not use any liquids for cleaning. Cleaning agents, solvents (thinners, acetone), acids and bases can damage the front panel labeling, plastic parts and display.

15.2 Storage

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the data sheet.

15.3 Performing Maintenance Tasks

The R&S SMB100B is accurate due to integrated adjustment procedures. Internal adjustments are integrated self-calibration routines, which you can execute directly on the instrument.

Self-calibration routines that require additional equipment are performed at an authorized Rohde & Schwarz service center. For description, see R&S SMB100B service manual.

When to start internal adjustments?

We recommend that you run internal adjustments in the following cases:

- Before starting any application that requires a maximum of level accuracy.
- When a long period of time has passed since the last adjustments.
- If the ambient temperature of the instrument significantly differs from the one of the last adjustments.

How to: See [Chapter 15.3.1.2, "How to Use the Internal Adjustments"](#), on page 555.

15.3.1 Internal Adjustments

Internal adjustments are integrated adjustment procedures, which you can execute directly on the instrument.

15.3.1.1 Internal Adjustments Settings

Access:

- Select "System Config > Setup > General > Internal Adjustments".

The screenshot shows a software dialog box titled "Internal Adjustments". At the top left is a button labeled "Adjust All" with a right-pointing arrow icon. Below this is a field labeled "Last Full Adjustment". A section titled "Since Last Full Adjustment" contains two fields: "Time" with the value "4 days" and "Temperature Offset" with the value "0.0 K" and a green checkmark icon. At the bottom of the dialog is an "Information:" field. The dialog has a close button (X) in the top right corner.

In this dialog, you can perform internal calibration routines and get information on the last performed calibration.

The "Temperature Offset" indicates the deviation of the current temperature of the instrument, compared to the temperature of the last adjustment.

The remote commands required to define these settings are described in [Chapter 12.6, "CALibration Subsystem"](#), on page 344.

How to: See [Chapter 15.3.1.2, "How to Use the Internal Adjustments"](#), on page 555.

Adjust All

Performs all available internal calibration routines of the instrument.

How to: See [Chapter 15.3.1.2, "How to Use the Internal Adjustments"](#), on page 555.

Remote command:

`:CALibration:ALL[:MEASure]?` on page 345

Last Full Adjustment

Displays the date of the last fully performed adjustment.

Remote command:

`:CALibration<hw>:ALL:DATE?` on page 345

Time

Displays the elapsed time since the last full adjustment.

Remote command:

`:CALibration<hw>:ALL:TIME?` on page 346

Temperature Offset

Displays the temperature difference, comparing the temperature of the last adjustment to the current instrument temperature.

A green checkmark indicates that the offset is within the permitted range. If the temperature deviates more than ± 5 K, the instrument indicates a warning icon.

Remote command:

`:CALibration<hw>:ALL:TEMP?` on page 346

Information

Displays information to the current adjustment state.

Remote command:

`:CALibration<hw>:ALL:INformation?` on page 345

Continue Adjustment on Error

Continues the calibration even though an error was detected. By default adjustments are aborted on error.

This function is password-protected. Unlock the protection level 1 to access it.

Remote command:

`:CALibration<hw>:CONTinueonerror` on page 346

15.3.1.2 How to Use the Internal Adjustments

Deciding whether to run internal adjustments

1. Select "System Config > Setup > Internal Adjustment".
2. Observe the status and color indication in the section "Since Last Full Adjustment".
Green: Internal adjustments are not required.
Red: Internal adjustments are required. Observe also the indication in the "Information" field.
3. We recommend that you run internal adjustments in the following cases:
 - Before starting any application that requires a maximum of level accuracy.
 - When a long period of time has passed since the last adjustments.
 - If the ambient temperature of the instrument significantly differs from the one of the last adjustments.
4. Proceed as described in "[Running internal adjustments](#)" on page 555.

Running internal adjustments

1. **NOTICE!** Adjustments can be invalid if performed when the instrument is not warmed-up.
Wait until the instrument has reached its operating temperature before you start the adjustment procedure.
The warm-up time is up to 30 minutes.
2. Select "System Config > Setup > Internal Adjustment > Adjust All".

The adjustment process starts.

3. Do not interrupt the adjustment process.

The extent of the adjustments depends on the installed options.

A progress indicator shows the status of the adjustment process.

If any error occurs, the process aborts and an error message appears in the "Info" line.

If there is an error:

- Select "Info".
Observe the error message.
- Continue the process.
See ["Continuing the adjustment process if error appears"](#) on page 556.

Continuing the adjustment process if error appears

Per default, if any error occurs during the adjustment process, the process aborts. An error message appears in the "Info" line.

If you prefer to finish the adjustments also if there is an error, proceed as follows:

1. Select "System Config > Setup > Security > Protection" and unlock the protection level 1.
See ["Protection Level/Password"](#) on page 248.
2. Select "System Config > Setup > Internal Adjustment > Configuration > Continue Adjustment on Error > On".
3. Proceed as described in ["Running internal adjustments"](#) on page 555.

15.3.2 Date and Time

The R&S SMB100B uses an internal real-time clock to determine the date and time. It adjusts the time and date to the timezone of your location automatically, by providing a selection list of continents and cities.


The instrument records the time whenever you create or modify files on your instrument or you use timed licenses. By default, the instrument is set to the UTC timezone, but you can select the timezone according to your location.

Moreover, the instrument supports [NTP](#) protocol for synchronizing all connected instruments and computer systems to minimize time delays in the network.

15.3.2.1 Data and Time Settings

Access:

- ▶ Select "System Config > Setup > Maintenance > Date / Time".

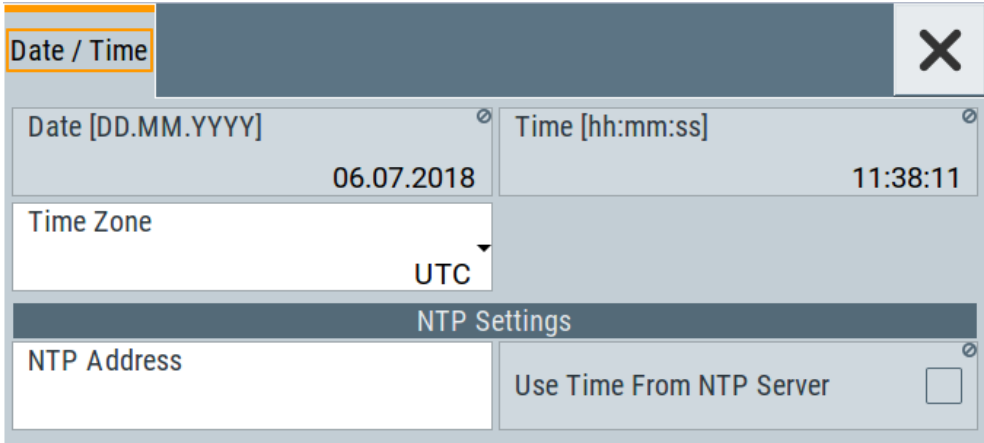

The "Date / Time" dialog contains the time and data settings of the operating system.
This function is password-protected. Unlock the protection level 1 to access it.

The required remote commands are described in [Chapter 12.15, "SYSTem Subsystem"](#), on page 483.

Settings:

Date	557
Time	557
Timezone	557
NTP Address	558
Use Time from NTP Server	558

Date

Displays the date set in the operating system in the format [dd.mm.yyyy].

Remote command:
[:SYSTem:DATE](#) on page 504

Time

Displays the time set in the operating system in the format [hh.mm.ss].
The time setting corresponds to the selected [Use Time from NTP Server](#).

Remote command:
[:SYSTem:TIME](#) on page 505

Timezone

Selects the timezone.
You can select the timezone according to the major cities on the respective continents.

Note: By typing the first letter, you can quickly navigate through the lists to find the desired destination.

Remote command:

:SYSTem:TIME:ZONE on page 505

:SYSTem:TIME:ZONE:CATalog? on page 506

NTP Address

Sets the IP address or host name of the NTP server.

NTP is a network time protocol used for synchronizing all participating devices in a data network.

You can select a high-precision time server to reduce the impact of varying network delays.

Remote command:

:SYSTem:NTP:HOSTname on page 505

Use Time from NTP Server

Activates clock synchronization of the network via the NTP protocol.

Remote command:

:SYSTem:NTP:STATE on page 505

15.3.2.2 How To Set Data and Time

To select the timezone

1. Press the [Setup] key.
2. Select "Maintenance > Date /Time > Timezone".
3. Select continent and city of your location.
Tip: By typing the first letter, you can quickly navigate through the lists to find the desired destination.
4. Close the dialogs.

The instrument adjusts the time according to the selected location.

To set the date and time

1. Press the [Setup] key.
2. Select "Security > Protection".
3. Enable the "Protection Level 1".
The default password is 123456.
4. Select "Setup > Maintenance > Date / Time".
5. Adjust the settings.

6. Close the dialogs.

The instrument adopts the new date and time.

15.3.3 Check Front Panel

Within this dialog, you can verify the functionality of the control keys.

How To: See [Chapter 15.3.3.2, "How to Test the Front Panel"](#), on page 559

15.3.3.1 Check Front Panel Settings

Access:

- ▶ Select "System Config > Setup > Maintenance > Check Front Panel".



Reflecting the front panel, the "Check Front Panel" dialog contains all functions to test the operating elements of the instrument.

15.3.3.2 How to Test the Front Panel

See:

- ["Testing the key panel"](#) on page 560
- ["Testing the touchscreen"](#) on page 560
- ["Terminating the test"](#) on page 561
- ["Debugging"](#) on page 561

Testing the key panel

To perform the key panel test, you operate the keys at the front panel, and check the response of the instrument in the "Check Front Panel" dialog. To perform this test properly, check each key of the front panel. The test is only completed, when you have verified all keys.


During the test, the actual functions of the keys are disabled.

1. Press the [Setup] key.
2. Select "Maintenance > Check Front Panel"
The "Check Front Panel" dialog opens.
3. Press a key on the front panel.
Check if the corresponding key in the "Check Front Panel" dialog turns green.
4. Press the same key a second time.
Check that the key in the dialog turns red.
Note: Pressing the same key again has no further effect, except for the [Esc] key. Pressing this key a third time, terminates the test procedure.
5. Continue with the next key on the front panel and repeat [step 3](#) to [step 5](#) until all keys are tested.

The test is completed, when each key is verified successfully, confirmed by a "Test passed" message.

Testing the touchscreen


1. Press the [Setup] key.
2. Select "Maintenance > Check Touch Panel"
The "Finger Paint" test window opens.

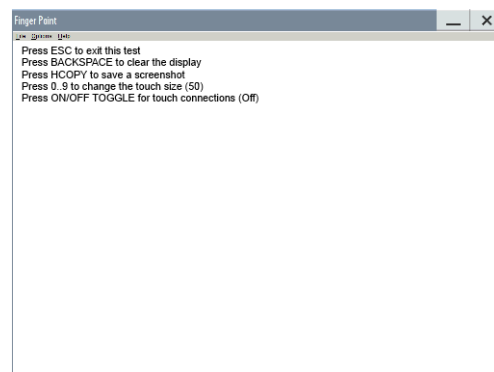


3. Drag with your finger one or more lines, for example diagonally across the screen.
The test traces the movements of your finger on the screen.

The following results are expected:

- If the lines are uninterrupted, the touchscreen works properly.

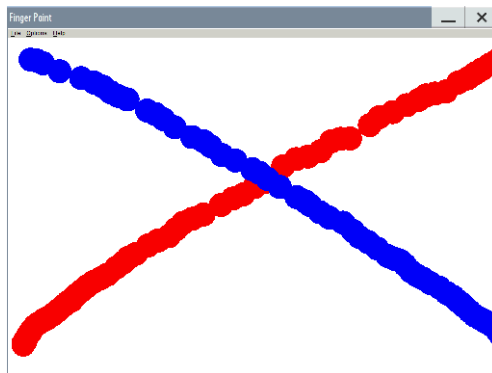

- If there are any gaps, the touch-sensitive functionality is damaged.

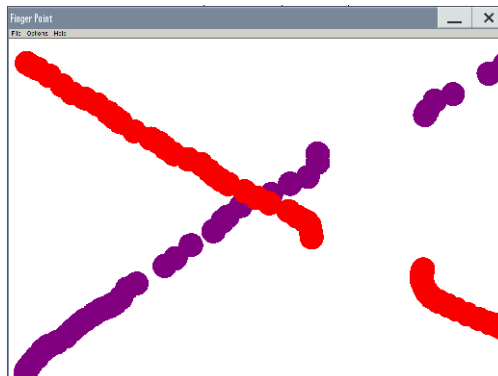

- To return to the "Check Front Panel" dialog, press [Esc].

Terminating the test

- Press the [Esc] key.
Exits the "Check Front Panel" dialog.


Debugging

1. If you detect a malfunction, for example, you press the front panel key the first time, and the color of the button in the dialog turns red (instead of green), the front panel key may be stuck.
2. Contact the Rohde & Schwarz customer support, see [Chapter 13.8, "Collecting Information for Technical Support"](#), on page 549.

15.3.4 FPGA/uC Update Settings

Access:

- Select "System Config > Setup > Maintenance > FPGA/uC Update".

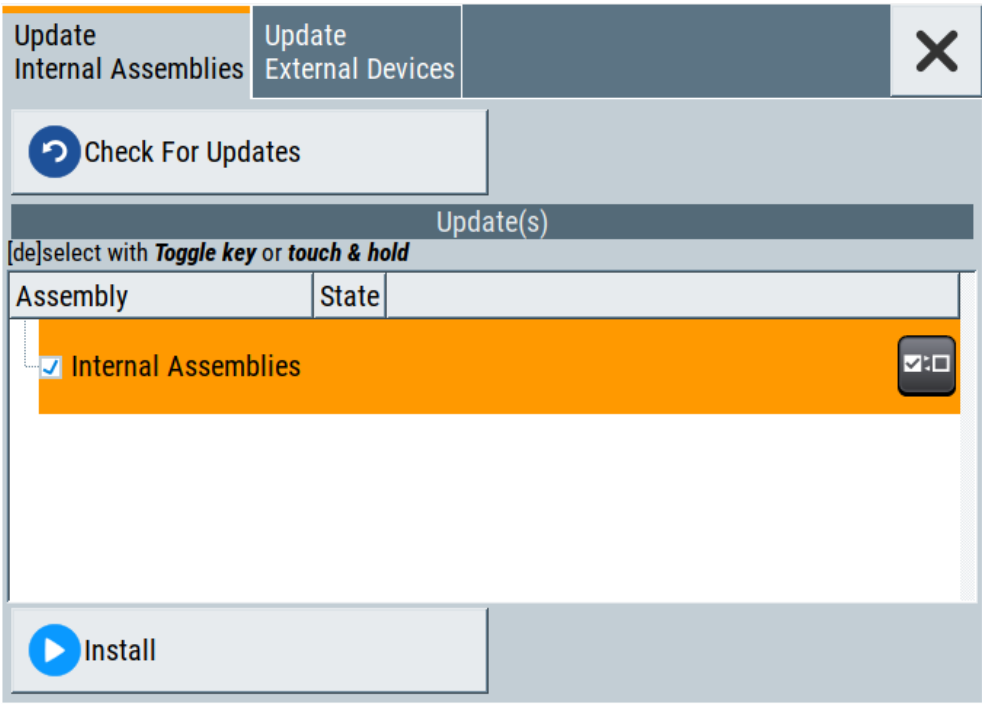

This dialog enables you to check for internal assembly updates and perform updates.

Settings:

Check For Updates.....	562
Assembly.....	562
Install.....	562
Shut down.....	563
Update External Devices.....	563
L Check For Updates.....	563

Check For Updates

Check for updates of the FPGA/μC.
Remote command:
n.a.

Assembly

The table shows the installed assemblies and their states.
"Assembly" Assembly designation.
"State" Indicates the current state of installed assemblies.

Install

Install all available updates for the FPGA/μC.
Remote command:
n.a.

Shut down

For at least one assembly "State = Done" and no pending assemblies, shuts the instrument down to apply installed updates.

Remote command:

:SYSTem:SHUTdown on page 508

Update External Devices

This dialog shows the update options of external devices connected to the instrument.

Check For Updates ← Update External Devices

Check for updates of external devices.

Remote command:

n.a.

15.4 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

Disposing electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its service life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.



Figure 15-1: Labeling in line with EU directive WEEE

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

Annex

A Reference Information for Remote Control

A.1 Additional Basics on Remote Control

This section provides basic information using the remote control.

A.1.1 Messages

The messages transferred on the data lines are divided into the following categories:

- **Interface messages**
Interface messages are transmitted to the instrument on the data lines, with the attention line being active (LOW). They are used to communicate between the controller and the instrument. Interface messages can only be sent by instruments that have GPIB bus functionality. For details see the sections for the required interface.
- **Instrument messages**
Instrument messages are employed in the same way for all interfaces, if not indicated otherwise in the description. Structure and syntax of the instrument messages are described in [Chapter A.1.3, "SCPI Command Structure"](#), on page 565. A detailed description of all messages available for the instrument is provided in the chapter "Remote Control Commands".
There are different types of instrument messages, depending on the direction they are sent:
 - Commands
 - Instrument responses

Commands

Commands (program messages) are messages the controller sends to the instrument. They operate the instrument functions and request information. The commands are subdivided according to two criteria:

- According to the effect they have on the instrument:
 - **Setting commands** cause instrument settings such as a reset of the instrument or setting the frequency.
 - **Queries** cause data to be provided for remote control, e.g. for identification of the instrument or polling a parameter value. Queries are formed by directly appending a question mark to the command header.
- According to their definition in standards:
 - **Common commands:** their function and syntax are precisely defined in standard IEEE 488.2. They are employed identically on all instruments (if implemented). They refer to functions such as management of the standardized status registers, reset and self-test.

- **Instrument control commands** refer to functions depending on the features of the instrument such as frequency settings. Many of these commands have also been standardized by the SCPI committee. These commands are marked as "SCPI confirmed" in the command reference chapters. Commands without this SCPI label are instrument-specific; however, their syntax follows SCPI rules as permitted by the standard.

Instrument responses

Instrument responses (response messages and service requests) are messages the instrument sends to the controller after a query. They can contain measurement results, instrument settings and information on the instrument status.

A.1.2 LAN Interface Messages

In the LAN connection, the interface messages are called low-level control messages. These messages can be used to emulate interface messages of the GPIB bus.

Command	Long term	Effect on the instrument
&ABO	Abort	Aborts processing of the commands just received.
&DCL	Device Clear	Aborts processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument setting.
>L	Go to Local	Transition to the "local" state (manual control). (The instrument automatically returns to remote state when a remote command is sent UNLESS &NREN was sent before.)
>R	Go to Remote	Enables automatic transition from local state to remote state by a subsequent remote command (after &NREN was sent).
&GET	Group Execute Trigger	Triggers a previously active instrument function (e.g. a sweep). The effect of the command is the same as with that of a pulse at the external trigger signal input.
&LLO	Local Lockout	Disables transition from remote control to manual control by means of the front panel keys.
&NREN	Not Remote Enable	Disables automatic transition from local state to remote state by a subsequent remote command. (To re-activate automatic transition use >R.)
&POL	Serial Poll	Starts a serial poll.

A.1.3 SCPI Command Structure

SCPI commands consist of a header and, usually, one or more parameters. The headers may consist of several mnemonics (keywords). Queries are formed by appending a question mark directly to the header.

The commands can be either instrument-specific or instrument-independent (common commands). Common and instrument-specific commands differ in their syntax.

A.1.3.1 Syntax for Common Commands

Common (= instrument-independent) commands consist of a header preceded by an asterisk (*), and possibly one or more parameters.

Table A-1: Examples of common commands

*RST	RESET	Resets the instrument.
*ESE	EVENT STATUS ENABLE	Sets the bits of the event status enable registers.
*ESR?	EVENT STATUS QUERY	Queries the contents of the event status register.
*IDN?	IDENTIFICATION QUERY	Queries the instrument identification string.

A.1.3.2 Syntax for Instrument-Specific Commands



Not all commands used in the following examples are necessarily implemented in the instrument. For demonstration purposes only, assume the existence of the following commands for this section:

- DISPlay[:WINDow<1...4>]:MAXimize <Boolean>
 - FORMat:READings:DATA <type>[,<length>]
 - HCOpy:DEvice:COLor <Boolean>
 - HCOpy:DEvice:CMAP:COLor:RGB <red>,<green>,<blue>
 - HCOpy[:IMMediate]
 - HCOpy:ITEM:ALL
 - HCOpy:ITEM:LABel <string>
 - HCOpy:PAGE:DIMensions:QUADrant [<N>]
 - HCOpy:PAGE:ORientation LANDscape | PORTrait
 - HCOpy:PAGE:SCALE <numeric value>
 - MMEMemory:COpy <file_source>,<file_destination>
 - SENSE:BANDwidth|BWIDth[:RESolution] <numeric_value>
 - SENSE:FREQuency:STOP <numeric value>
 - SENSE:LIST:FREQuency <numeric_value>{,<numeric_value>}
-
- [Long and Short Form](#)..... 566
 - [Numeric Suffixes](#)..... 567
 - [Optional Mnemonics](#)..... 567

Long and Short Form

The mnemonics feature a long form and a short form. The short form is marked by upper case letters, the long form corresponds to the complete word. Either the short form or the long form can be entered; other abbreviations are not permitted.

Example:

HCOPy:DEvIce:COLor ON is equivalent to HCOP:DEV:COL ON.

**Case-insensitivity**

Upper case and lower case notation only serves to distinguish the two forms in the manual, the instrument itself is case-insensitive.

Numeric Suffixes

If a command can be applied to multiple instances of an object, e.g. specific channels or sources, the required instances can be specified by a suffix added to the command. Numeric suffixes are indicated by angular brackets (<1...4>, <n>, <i>) and are replaced by a single value in the command. Entries without a suffix are interpreted as having the suffix 1.

Example:

Definition: HCOPy:PAGE:DIMensions:QUADrant [<N>]

Command: HCOP:PAGE:DIM:QUAD2

This command refers to the quadrant 2.

**Different numbering in remote control**

For remote control, the suffix may differ from the number of the corresponding selection used in manual operation. SCPI prescribes that suffix counting starts with 1. Suffix 1 is the default state and used when no specific suffix is specified.

Some standards define a fixed numbering, starting with 0. If the numbering differs in manual operation and remote control, it is indicated for the corresponding command.

Optional Mnemonics

Some command systems permit certain mnemonics to be inserted into the header or omitted. These mnemonics are marked by square brackets in the description. The instrument must recognize the long command to comply with the SCPI standard. Some commands are considerably shortened by these optional mnemonics.

Example:

Definition: HCOPy[:IMMediate]

Command: HCOP:IMM is equivalent to HCOP



Optional mnemonics with numeric suffixes

Do not omit an optional mnemonic if it includes a numeric suffix that is relevant for the effect of the command.

Example:

Definition: `DISPlay[:WINDow<1...4>]:MAXimize <Boolean>`

Command: `DISP:MAX ON` refers to window 1.

To refer to a window other than 1, you must include the optional `WINDow` parameter with the suffix for the required window.

`DISP:WIND2:MAX ON` refers to window 2.

A.1.3.3 SCPI Parameters

Many commands are supplemented by a parameter or a list of parameters. The parameters must be separated from the header by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank).

The parameters required for each command and the allowed range of values are specified in the command description.

Allowed parameters are:

• Numeric Values	568
• Special Numeric Values	569
• Boolean Parameters	569
• Text Parameters	570
• Character Strings	570
• Block Data	570

Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the exponent must lie inside the value range -32000 to 32000. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not allowed.

Example:

`SENS:FREQ:STOP 1500000 = SENS:FREQ:STOP 1.5E6`

Units

For physical quantities, the unit can be entered. If the unit is missing, the basic unit is used. Allowed unit prefixes are:

- G (giga)
- MA (mega), MOHM, MHZ
- K (kilo)
- M (milli)
- U (micro)

- N (nano)

Example:

```
SENSe:FREQ:STOP 1.5GHz = SENSe:FREQ:STOP 1.5E9
```

Some settings allow relative values to be stated in percent. According to SCPI, this unit is represented by the `PCT` string.

Example:

```
HCOP:PAGE:SCAL 90PCT
```

Special Numeric Values

The following mnemonics are special numeric values. In the response to a query, the numeric value is provided.

- **MIN and MAX:** denote the minimum (MINimum) and maximum (MAXimum) value.
- **DEF:** denotes a preset value (DEFault) which has been stored in the EPROM. This value conforms to the default setting, as it is called by the `*RST` command.
- **UP and DOWN:** increases or reduces the numeric value by one step. The step width can be specified via an allocated step command for each parameter which can be set via UP and DOWN.
- **INF and NINF:** INFinity and Negative INFinity (NINF) represent the numeric values $9.9E37$ or $-9.9E37$, respectively. INF and NINF are only sent as instrument responses.
- **NAN:** Not A Number (NAN) represents the value $9.91E37$. NAN is only sent as an instrument response. This value is not defined. Possible causes are the division of zero by zero, the subtraction of infinite from infinite and the representation of missing values.

Example:

Setting command: `SENSe:LIST:FREQ MAXimum`

Query: `SENS:LIST:FREQ?`

Response: `3.5E9`

**Queries for special numeric values**

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding mnemonic after the question mark.

Example: `SENSe:LIST:FREQ? MAXimum`

Returns the maximum numeric value as a result.

Boolean Parameters

Boolean parameters represent two states. The "ON" state (logically true) is represented by "ON" or a numeric value 1. The "OFF" state (logically untrue) is represented by "OFF" or the numeric value 0. The numeric values are provided as the response for a query.

Example:

Setting command: `HCOPY:DEV:COL ON`

Query: `HCOPY:DEV:COL?`

Response: 1

Text Parameters

Text parameters observe the syntactic rules for mnemonics, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the response to a query, the short form of the text is provided.

Example:

Setting command: `HCOPY:PAGE:ORIENTATION LANDscape`

Query: `HCOPY:PAGE:ORI?`

Response: LAND

Character Strings

Always enter strings in quotation marks (' or ").

Example:

`HCOPY:ITEM:LABEL "Test1"`

`HCOPY:ITEM:LABEL 'Test1'`

Block Data

Block data is a format which is suitable for the transmission of large amounts of data. For example, a command using a block data parameter has the following structure:

`FORMAT:READINGS:DATA #45168xxxxxxxx`

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example, the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted.

#0 specifies a data block of indefinite length. The use of the indefinite format requires a `NL^END` message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

A.1.3.4 Overview of Syntax Elements

The following tables provide an overview of the syntax elements and special characters.

Table A-2: Syntax elements

:	The colon separates the mnemonics of a command.
;	The semicolon separates two commands of a command line. It does not alter the path.
,	The comma separates several parameters of a command.
?	The question mark forms a query.
*	The asterisk marks a common command.
' '	Quotation marks introduce a string and terminate it (both single and double quotation marks are possible).
#	The hash symbol introduces the following numeral systems: <ul style="list-style-type: none"> • Binary: #B10110 • Octal: #O7612 • Hexadecimal: #HF3A7 • Block data: #21312
	A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates the header from the parameters.

Table A-3: Special characters

	<p>Parameters</p> <p>A pipe in parameter definitions indicates alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.</p> <p>Example:</p> <p>Definition: HCOPy:PAGE:ORIENTATION LANDscape PORtTrait</p> <p>Command HCOP:PAGE:ORI LAND specifies landscape orientation</p> <p>Command HCOP:PAGE:ORI PORT specifies portrait orientation</p> <p>Mnemonics</p> <p>A selection of mnemonics with an identical effect exists for several commands. These mnemonics are indicated in the same line; they are separated by a pipe. Only one of these mnemonics needs to be included in the header of the command. The effect of the command is independent of which of the mnemonics is used.</p> <p>Example:</p> <p>Definition SENSE:BANDwidth BWIDTH[:RESolution] <numeric_value></p> <p>The two following commands with identical meaning can be created:</p> <p>SENS:BAND:RES 1</p> <p>SENS:BWID:RES 1</p>
[]	<p>Mnemonics in square brackets are optional and may be inserted into the header or omitted.</p> <p>Example: HCOPy[:IMMEDIATE]</p> <p>HCOP:IMM is equivalent to HCOP</p>
{ }	<p>Parameters in curly brackets are optional and can be inserted once or several times, or omitted.</p> <p>Example: SENSE:LIST:FREQUENCY <numeric_value>{,<numeric_value>}</p> <p>The following are valid commands:</p> <p>SENS:LIST:FREQ 10</p> <p>SENS:LIST:FREQ 10,20</p> <p>SENS:LIST:FREQ 10,20,30,40</p>

A.1.3.5 Structure of a Command Line

A command line may consist of one or several commands. It is terminated by one of the following:

- <New Line>
- <New Line> with EOI
- EOI together with the last data byte

Several commands in a command line must be separated by a semicolon ";".

Example:

```
MMEM:COPY "Test1", "MeasurementXY";:HCOP:ITEM ALL
```

This command line contains two commands. The first command belongs to the MMEM system, the second command belongs to the HCOP system. If the next command belongs to a different command system, the semicolon is followed by a colon.

Example:

```
HCOP:ITEM ALL;:HCOP:IMM
```

This command line contains two commands. Both commands are part of the HCOP command system, i.e. they have one level in common.

If the successive commands belong to the same system, having one or several levels in common, the command line can be abbreviated. When abbreviating the command line, the second command begins with the level below HCOP. The colon after the semicolon is omitted. The abbreviated form of the command line reads as follows:

```
HCOP:ITEM ALL;IMM
```

Example:

```
HCOP:ITEM ALL
```

```
HCOP:IMM
```

A new command line always begins with the complete path.

A.1.3.6 Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

- The requested parameter is transmitted without a header.

Example: HCOP:PAGE:ORI?

Response: LAND

- Maximum values, minimum values and all other quantities that are requested via a special text parameter are returned as numeric values.

Example: SENSE:FREQuency:STOP? MAX

Response: 3.5E9

- Numeric values are output without a unit. Physical quantities are referred to the basic units or to the units set using the `Unit` command. The response `3.5E9` in the previous example stands for 3.5 GHz.

- Truth values (Boolean values) are returned as 0 (for OFF) and 1 (for ON).

Example:

Setting command: `HCOPY:DEV:COL ON`

Query: `HCOPY:DEV:COL?`

Response: `1`

- Text (character data) is returned in a short form.

Example:

Setting command: `HCOPY:PAGE:ORIENTATION LANDscape`

Query: `HCOPY:PAGE:ORI?`

Response: `LAND`

- Invalid numerical results

Sometimes, particularly when a result consists of multiple numeric values, invalid values are returned as `9.91E37` (not a number).

A.1.4 Command Sequence and Synchronization

IEEE 488.2 defines a distinction between overlapped and sequential commands:

- A sequential command always completes executing before the next command starts. Commands that are processed quickly are defined as sequential commands. They are not implemented in the instrument. However, the execution time of most of the commands is so short that they act as sequential commands, if they are sent in separate command lines.
- An overlapping command is still running when the next command starts. Usually, an overlapping command takes a certain time to process its task, and thus allows the program to execute other tasks, while it is still running. If overlapping commands have to follow a specific order, for example to avoid incorrect measurement readings, they must be executed in sequence. This is called synchronization between the controller and the instrument.

Several setting commands within a command line are not necessarily processed in the order they are received. Even if they are implemented as sequential commands. To follow a particular sequence, send each command in a separate line.



As a rule, send commands and queries in different program messages.

A.1.4.1 Preventing Overlapping Execution

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used. All three commands cause a certain action only to be carried out after the hardware has been set. The controller can be forced to wait for the corresponding action to occur.

Table A-4: Synchronization using *OPC, *OPC? and *WAI

Com-mand	Action	Programming the controller
*OPC	Sets the Operation Complete bit in the Standard Event Status Register (ESR) after all previous commands have been executed.	<ul style="list-style-type: none"> Setting bit 0 in the ESE Setting bit 5 in the SRE Waiting for service request (SRQ)
*OPC?	Stops command processing until 1 is returned. This occurs when all pending operations are completed.	Send *OPC? directly after the command whose processing must be terminated before other commands can be executed.
*WAI	Stops further command processing until all commands sent before Wait-to-Continue Command (WAI) have been executed.	Send *WAI directly after the command whose processing must be terminated before other commands are executed.

Command synchronization using *WAI or *OPC? is a good choice if the overlapped command takes only little time to process. The two synchronization commands simply block overlapping execution of the command. Append the synchronization command to the overlapped command, for example:

SINGLE; *OPC?

For time consuming overlapped commands, you can allow the controller or the instrument to do other useful work while waiting for command execution. Use one of the following methods:

***OPC with a service request**

1. Execute *ESE 1

Sets the OPC mask bit (bit No. 0) of the Standard Event Status Register (ESR) to 1

2. Execute *SRE 32

Sets the Event Status Bit (ESB - bit No. 5) of the Service Request Enable Register (SRE) to 1 to enable ESB service request.

3. Send the overlapped command with *OPC

Example: INIT; *OPC

4. Wait for an ESB service request.

The service request indicates that the overlapped command has finished.

***OPC? with a service request**

1. Execute *SRE 16

Sets the Message Available bit (MAV - bit No. 4) of the Service Request Enable Register (SRE) to 1 to enable MAV service request.

2. Send the overlapped command with *OPC?

Example: INIT; *OPC?

3. Wait for an MAV service request.

The service request indicates that the overlapped command has finished.

Event status enable register (ESE)

1. Execute `*ESE 1`

Sets the OPC mask bit (bit No. 0) of the Standard Event Status Register (ESR) to 1

2. Send the overlapped command without `*OPC`, `*OPC?` or `*WAI`.

Example: `INIT; *OPC?`

3. Poll the operation complete state periodically (with a timer) using the sequence:

`*OPC; *ESR?`

A return value (LSB) of 1 indicates that the overlapped command has finished.

A.1.4.2 Examples to Command Sequence and Synchronization

See the following examples to command sequences and synchronization. Some examples given illustrate possible constellations for overlapping tasks.

Example: Commands and queries in one message

The response to a query combined in a program message with commands that affect the queried value is not predictable.

The following commands always return the specified result:

`:FREQ:STAR 1GHZ;SPAN 100 :FREQ:STAR?`

Result:

1000000000 (1 GHz)

Whereas the result for the following commands is not specified by SCPI:

`:FREQ:STAR 1GHz;STAR?;SPAN 1000000`

The result could be the value of `START` before the command was sent since the instrument might defer executing the individual commands until a program message terminator is received. The result could also be 1 GHz if the instrument executes commands as they are received.

Example: Overlapping command with *OPC

The instrument implements `*RST` as an overlapped command. Assuming that `*RST` takes longer to execute than `*OPC`, sending the following command sequence results in initiating a reset and, after some time, setting the `OPC` bit in the `ESR`:

`*RST; *OPC`

Sending the following commands still initiates a reset:

`*RST; *OPC; *CLS`

However, since the operation is still pending when the instrument executes `*CLS`, forcing it into the "Operation Complete Command Idle" State (OCIS), `*OPC` is effectively skipped. The `OPC` bit is not set until the instrument executes another `*OPC` command.

Example: Overlapped command followed by non-conflicting commands

Suppose that the instrument is switched on to provide a real time test signal that requires some calculation time. At the same time, some settings for the configuration of a different signal are made which do not interact with the generated signal (for example the signal may be used later on). The signal generation and the signal configuration are independent from each other, so there is no need to synchronize the following overlapped commands:

```
SOUR:BB:3GPP:STAT ON
SOUR:BB:GSM:FORM FSK2
```

Example: Overlapped command followed by conflicting commands

Suppose that the generator is switched on to provide a real time test signal that requires some calculation time. This signal is to be added to a waveform from the second baseband generator. In this case, the application program has to make sure that the real signal is available in the added signal before further action is started. This involves an appropriate synchronization technique for the first command (the following sequence assumes an appropriate routing):

```
SOUR:BB:3GPP:STAT ON
```

The instrument waits until command has finished.

```
SOUR2:BB:GSM:STAT ON
```

Depending on the selected synchronization techniques, non-conflicting commands can be executed while waiting until the synchronized overlapped command has finished.

Example: Polling the progress of the zeroing process

Suppose that you start the zeroing for a connected power sensor via the remote control command `SENS1:ZERO`. This process blocks the processing of further tasks during execution. The query for completeness is performed with the `*OPC?` command. It returns a 1 in the output buffer when the process is completed.

```
SENS:ZERO;*OPC?
```

Instead of waiting via `*OPC?`, you can perform alternative tasks while the zeroing is running, as for example updating the GUI or adjusting other instruments. Synchronize the commands by querying the progress of the zeroing process periodically via the event status register `*ESR?`:

```
*SRE 32
```

Sets the service request enable. The bit is set when an event in the event status register occurs.

```
*ESE 1
```

Configures the mask of the event status register to "Operation Complete".

```
SENS:ZERO;*OPC
```

Sets the evaluation via the status byte query. It uses `*OPC?` as the reference.

```
*CLS
```

Clears all status registers.

Even if the instrument is busy, you can perform this procedure, since the query is executed in a subchannel.

A.1.5 Status Reporting System

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue.

You can query both with the commands of the [STATus Subsystem](#).

A.1.5.1 Hierarchy of the Status Registers

The [Figure A-1](#) shows the hierarchical structure of information in the status registers (ascending from left to right).

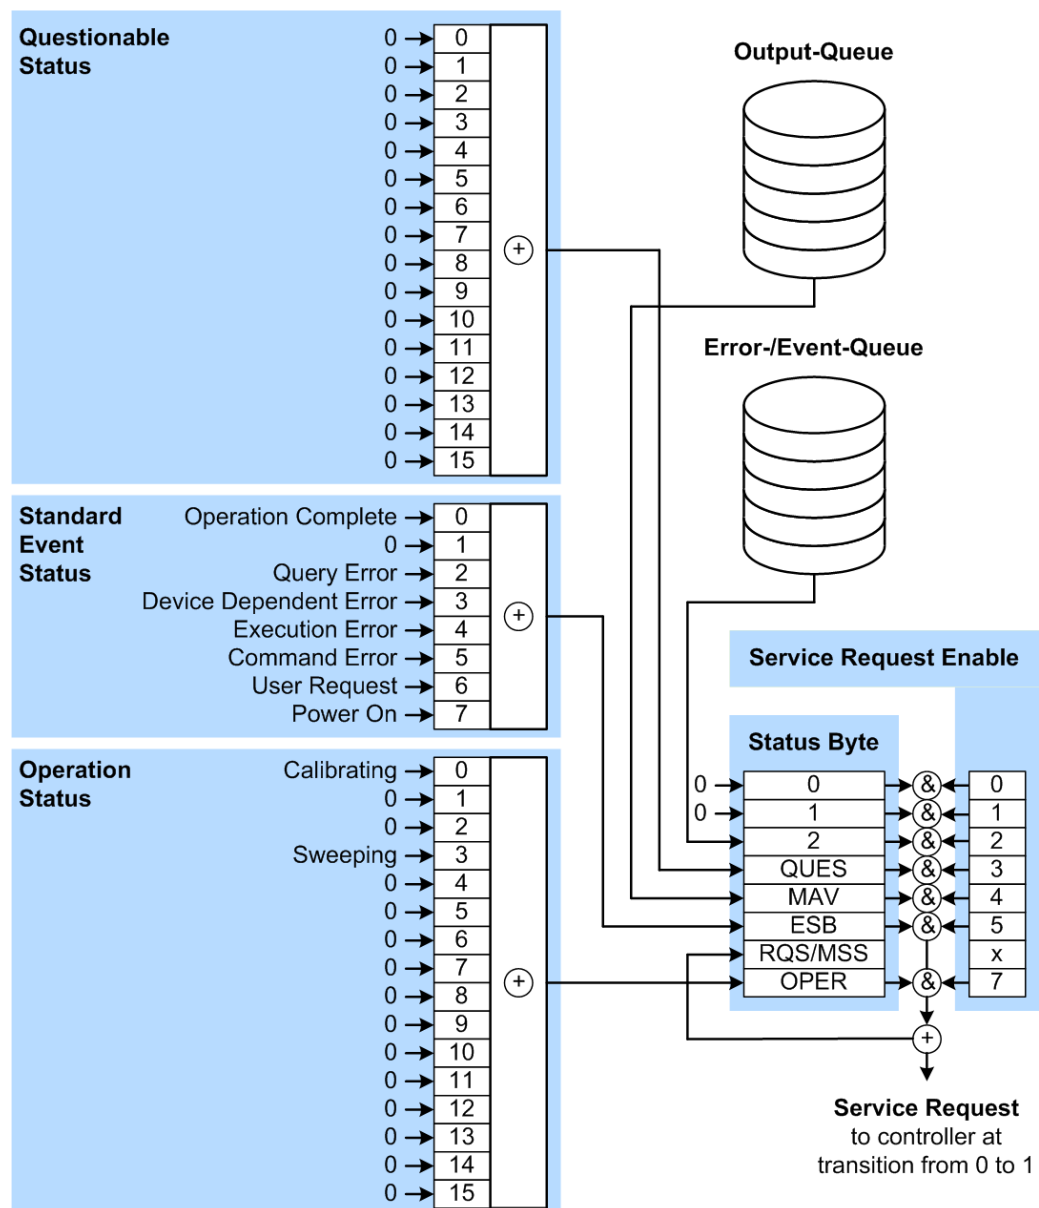


Figure A-1: Graphical overview of the status registers hierarchy

OPER	= Operation Status Summary Bit
RQS/MSS	= Service Request Generation
ESB	= Standard Event Status Summary Bit
MAV	= Message Available in Output Queue
QUES	= Questionable Status Summary Bit
2	= Error- /Event-Queue
1, 0	= not used

Note: This legend explains the abbreviations to the Status Byte Register.

The R&S SMB100B uses the following status registers:

- **Status Byte (STB) and Service Request Enable (SRE)**, see [Chapter A.1.5.3, "Status Byte \(STB\) and Service Request Enable Register \(SRE\)"](#), on page 580.
- **Standard Event Status**, i.e. the Event status Register (ESR) and the Event Status Enable (ESE), see [Chapter A.1.5.4, "Event Status Register \(ESR\) and Event Status Enable Register \(ESE\)"](#), on page 581.
- **Questionable Status and Operation Status**, the (SCPI) status registers, see [Chapter A.1.5.2, "Structure of a SCPI Status Register"](#), on page 578, [Chapter A.1.5.5, "Questionable Status Register \(STATUS:QUESTIONable\)"](#), on page 582 and [Chapter A.1.5.6, "Operation Status Register \(STATUS:OPERation\)"](#), on page 582.
- **Output-Queue**
The output queue contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the overview.
- **Error- /Event-Queue**
The error-/event-queue contains all errors and events that have occurred in the past. When reading the queue, the instrument starts with the first occurred error/event.

All status registers have the same internal structure.



SRE, ESE

The service request enable register SRE can be used as ENABLE part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be used as the ENABLE part of the ESR.

A.1.5.2 Structure of a SCPI Status Register

Each standard SCPI register consists of 5 parts. Each part has a width of 16 bits and has different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus the contents of the register parts can be processed by the controller as positive integers.

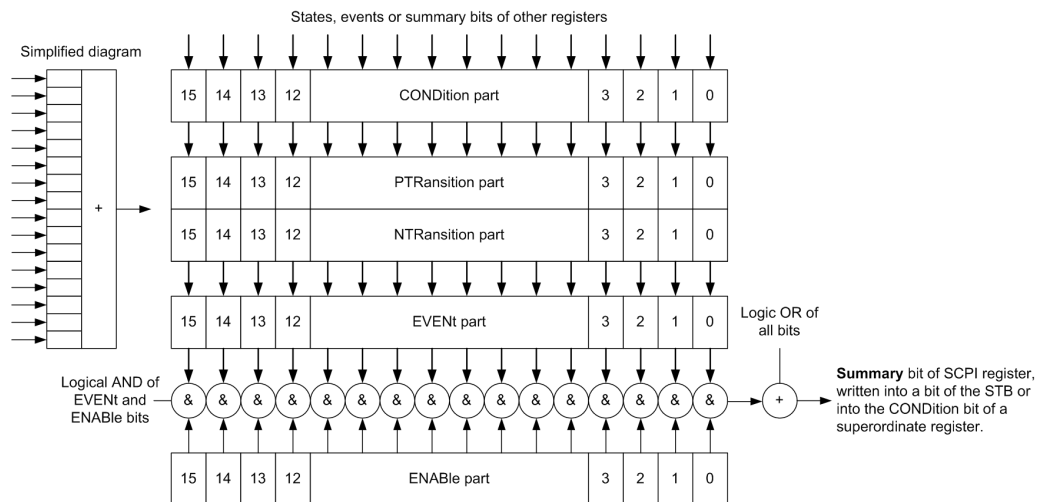


Figure A-2: The status-register model

Description of the five status register parts

The five parts of a SCPI register have different properties and functions:

- **CONDition**

The **CONDition** part is written into directly by the hardware or the sum bit of the next lower register. Its contents reflect the current instrument status. This register part can only be read, but not written into or cleared. Its contents are not affected by reading.

- **PTRansition / NTRansition**

The two transition register parts define which state transition of the **CONDition** part (none, 0 to 1, 1 to 0 or both) is stored in the **EVENT** part.

The **Positive-TRansition** part acts as a transition filter. When a bit of the **CONDition** part is changed from 0 to 1, the associated **PTR** bit decides whether the **EVENT** bit is set to 1.

- **PTR** bit =1: the **EVENT** bit is set.
- **PTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the **CONDition** part is changed from 1 to 0, the associated **NTR** bit decides whether the **EVENT** bit is set to 1.

- **NTR** bit =1: the **EVENT** bit is set.
- **NTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

- **EVENT**

The **EVENT** part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be

read by the user. Reading the register clears it. This part is often equated with the entire register.

- **ENABLE**

The `ENABLE` part determines whether the associated `EVENT` bit contributes to the sum bit (see below). Each bit of the `EVENT` part is "ANDed" with the associated `ENABLE` bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an "OR" function (symbol '+').

`ENABLE` bit = 0: the associated `EVENT` bit does not contribute to the sum bit

`ENABLE` bit = 1: if the associated `EVENT` bit is "1", the sum bit is set to "1" as well.

This part can be written into and read by the user as required. Its contents are not affected by reading.

Sum bit

The sum bit is obtained from the `EVENT` and `ENABLE` part for each register. The result is then entered into a bit of the `CONDition` part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event can lead to a service request throughout all levels of the hierarchy.

A.1.5.3 Status Byte (STB) and Service Request Enable Register (SRE)

The `STatus Byte` (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB is read using the command `*STB?` or a serial poll.

The `STatus Byte` (STB) is linked to the `Service Request Enable` (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command `*SRE` and read using the command `*SRE?`.

Table A-5: Meaning of the bits used in the status byte

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUESTIONable status register summary bit The bit is set if an <code>EVENT</code> bit is set in the <code>QUESTIONable</code> status register and the associated <code>ENABLE</code> bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the <code>STATUS:QUESTIONable</code> status register.

Bit No.	Meaning
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (main status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	STATUS:OPERation status register summary bit The bit is set if an EVENT bit is set in the OPERATION status register and the associated ENABLE bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the STATUS:OPERation status register.

A.1.5.4 Event Status Register (ESR) and Event Status Enable Register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the EVENT part of a SCPI register. The event status register can be read out using command `*ESR?`.

The ESE corresponds to the ENABLE part of a SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the STB is set. The ESE register can be set using the command `*ESE` and read using the command `*ESE?`.

Table A-6: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command <code>*OPC</code> exactly when all previous commands have been executed.
1	Not used
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent Error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution Error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.

Bit No.	Meaning
5	Command Error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	User Request This bit is set when the instrument is switched over to manual control.
7	Power On (supply voltage on) This bit is set on switching on the instrument.

A.1.5.5 Questionable Status Register (STATus:QUESTionable)

This register contains information on questionable instrument states. Such states may occur when the instrument is not operated in compliance with its specifications.

To read the register, use the query commands `STAT:QUEST:COND?` or `STAT:QUEST[:EVEN]?`.

Table A-7: Meaning of the bits used in the questionable status register

Bit No.	Meaning
0–15	Not used

A.1.5.6 Operation Status Register (STATus:OPERation)

This condition part contains information on the actions currently being performed by the instrument, while the event part contains information on the actions performed by the instrument since the last readout of the register.

To read the register, use the query commands `STAT:OPER:COND?` or `STAT:OPER[:EVEN]?`.

Table A-8: Meaning of the bits used in the operation status register

Bit No.	Meaning
0	Calibrating The bit is set during the calibration phase.
1–2	Not used
3	Sweeping This bit is set during a sweep in automatic or single mode.
4–15	Not used

A.1.5.7 Application of the Status Reporting System

The purpose of the status reporting system is to monitor the status of one or several devices in a measuring system. To do this and react appropriately, the controller must

receive and evaluate the information of all devices. The following standard methods are used:

- **Service request** (SRQ) initiated by the instrument
- **Serial poll** of all devices in the bus system, initiated by the controller to find out who sent an SRQ and why
- Query of a **specific instrument status** by commands
- Query of the **error queue**

Service Request

Under certain circumstances, the instrument can send a service request (SRQ) to the controller. Usually this service request initiates an interrupt at the controller, to which the control program can react appropriately. An SRQ is always initiated if one or several of bits 2, 4 or 5 of the status byte are set and enabled in the SRE. Each of these bits combines the information of the error queue or the output buffer. To use the possibilities of the service request effectively, all bits should be set to "1" in the enable registers SRE and ESE.

Example:

Use command *OPC to generate an SRQ .

*ESE 1 - set bit 0 of ESE (Operation Complete)

*SRE 32 - set bit 5 of SRE (ESB).

After its settings have been completed, the instrument generates an SRQ.

The SRQ is the only possibility for the instrument to become active on its own. Each controller program should set the instrument such that a service request is initiated in the case of malfunction. The program should react appropriately to the service request.

Serial Poll

In a serial poll, just as with command *STB, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster.

The serial poll method is defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works for instruments which do not adhere to SCPI or IEEE 488.2.

The serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

Query of an instrument status

Each part of any status register can be read using queries. There are two types of commands:

- The common commands *ESR?, *IDN?, *IST?, *STB? query the higher-level registers.
- The commands of the STATus system query the SCPI registers (STATus:QUEStionable...)

The returned value is always a decimal number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

Error Queue

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain text error messages that can be looked up in the Error Log or queried via remote control using `SYSTem:ERRor[:NEXT]?`. Each call of `SYSTem:ERRor[:NEXT]?` provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

A.1.5.8 Reset Values of the Status Reporting System

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except of `*RST` and `SYSTem:PRESet` affect the functional instrument settings. In particular, `DCL` does not change the instrument settings.

Table A-9: Resetting the status reporting system

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYSTem: PRESet	STATus: PRESet	*CLS
Effect	0	1				
Clear STB, ESR	-	Yes	-	-	-	Yes
Clear SRE, ESE	-	Yes	-	-	-	-
Clear PPE	-	Yes	-	-	-	-
Clear error queue	Yes	Yes	-	-	-	Yes
Clear output buffer	Yes	Yes	Yes	1)	1)	1)
Clear command processing and input buffer	Yes	Yes	Yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.						

A.1.6 General Programming Recommendations

Initial instrument status before changing settings

Manual operation is designed for maximum possible operating convenience. In contrast, the priority of remote control is the "predictability" of the instrument status. Thus, when a command attempts to define incompatible settings, the command is ignored and the instrument status remains unchanged, i.e. other settings are not automatically adapted. Therefore, control programs should always define an initial instrument status (e.g. using the *RST command) and then implement the required settings.

Command sequence

As a general rule, send commands and queries in different program messages. Otherwise, the result of the query may vary depending on which operation is performed first (see also Preventing Overlapping Execution).

Reacting to malfunctions

The service request is the only possibility for the instrument to become active on its own. Each controller program should instruct the instrument to initiate a service request in case of malfunction. The program should react appropriately to the service request.

Error queues

The error queue should be queried after every service request in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

A.2 Telnet program examples

The following program example shows a simple `TcpClient` class that is intended to explain on how to get started with programming of sockets.

The example sets up a socket communication to R&S SMB100B and opens a simple user interface, very similar to the telnet, which allows input of commands. To enable real automation, further development of the program is required.

TcpClient.h

```
#include <string>
//defines structs for socket handling
#include <netinet/in.h>
using namespace std;
typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent      HostInfoStruct;
```

```

class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int    getCurrentPort( ) const;
private:
    string      currentHostName;
    int         currentPort;
    int         currentSocketDescr;
    SockAddrStruct  serverAddress;
    HostInfoStruct * currentHostInfo;
    bool        clientIsConnected;
    int         receiveBufferSize;
};

```

TcpClient.cpp

```

#include <string>
//defines structs for socket handling
#include <netinet/in.h>
using namespace std;
typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent     HostInfoStruct;
class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int    getCurrentPort( ) const;
private:
    string      currentHostName;
    int         currentPort;
    int         currentSocketDescr;
    SockAddrStruct  serverAddress;
    HostInfoStruct * currentHostInfo;
    bool        clientIsConnected;
    int         receiveBufferSize;
};

```

```

#include <netdb.h>
#include <netinet/in.h>
#include <unistd.h>
#include "TcpClient.h"
TcpClient::TcpClient()
: currentHostName( "" )
, currentPort( 0 )
, currentSocketDescr( 0 )
, serverAddress ( )
, currentHostInfo( NULL )
, clientIsConnected( false )
, receiveBufferSize( 1024 )
{
}
TcpClient::~~TcpClient()
{
    currentHostInfo = NULL;
}

void TcpClient::connectToServer( string &hostname, int port )
{
    currentHostInfo = gethostbyname( hostname.c_str( ) );
    if( currentHostInfo == NULL )
    {
        currentHostName = "";
        currentPort = 0;
        currentHostInfo = NULL;
        clientIsConnected = false;
        printf("error connecting host\n" );
    }
    currentHostName = hostname;
    currentPort = port;
    currentSocketDescr = socket(AF_INET, SOCK_STREAM, 0);
    if( currentSocketDescr == 0 )
    {
        currentHostName = "";
        currentPort = 0;
        currentHostInfo = NULL;
        clientIsConnected = false;
        printf("can't create socket\n" );
    }
    serverAddress.sin_family = currentHostInfo->h_addrtype;
    serverAddress.sin_port = htons( currentPort );
    memcpy( (char *) &serverAddress.sin_addr.s_addr,
        currentHostInfo->h_addr_list[0], currentHostInfo->h_length );
    if( connect( currentSocketDescr, ( struct sockaddr *) &serverAddress,
        sizeof( serverAddress ) ) < 0 )
    {
        throw string("can't connect server\n" );
    }
}

```

```

        clientIsConnected = true;
    }
void TcpClient::disconnect( )
{
    if( clientIsConnected )
    {
        close( currentSocketDescr );
    }
    currentSocketDescr = 0;
    currentHostName    = "";
    currentPort        = 0;
    currentHostInfo    = NULL;
    clientIsConnected  = false;
}
void TcpClient::transmit( string &txString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be sent\n");
    }
    char * transmitBuffer = new char[txString.length() +1];
    memcpy( transmitBuffer, txString.c_str(), txString.length() );
    transmitBuffer[txString.length()] = '\n'; //newline is needed!
    if( send( currentSocketDescr, transmitBuffer, txString.length() + 1, 0 ) < 0 )
    {
        throw string("can't transmit data\n");
    }
    delete [] transmitBuffer;
}
void TcpClient::receive( string &rxString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be received\n");
    }
    char * receiveBuffer = new char[receiveBufferSize];
    memset( receiveBuffer, 0, receiveBufferSize );
    bool receiving = true;
    while( receiving )
    {
        int receivedByteCount = recv( currentSocketDescr,
            receiveBuffer, receiveBufferSize, 0 );
        if( receivedByteCount < 0 )
        {
            throw string("error while receiving data\n");
        }
        rxString += string( receiveBuffer );
        receiving = ( receivedByteCount == receiveBufferSize );
    }
    delete [] receiveBuffer;
}

```



```

}
string TcpClient::getCurrentHostName( ) const
{
    return currentHostName;
}
int TcpClient::getCurrentPort( ) const
{
    return currentPort;
}

```

TelnetClient.cpp

```

#include <iostream>
#include "TcpClient.h"
void printUsage()
{
    cout<<"usage: EthernetRawCommand <server-ip> [scpi-command]"<<endl;
}
int main( int argc, char *argv[] )
{
    int errorCode          = 0; //no error
    bool useSingleCommand = false;
    string singleCommand   = "";
    string hostname        = "";
    int    port            = 5025;
    string input           = "";
    TcpClient client;
    switch( argc )
    {
        case 3:
            useSingleCommand = true;
            singleCommand    = argv[2];
        case 2:
            hostname         = argv[1];
            break;
        default:
            printUsage();
            return(-1);
    }
    try
    {
        client.connectToServer( hostname, port );
        bool terminate = false;
        while( !terminate )
        {
            char buffer[1024];
            if( useSingleCommand )
            {
                input = singleCommand; //send string
            }
        }
    }
}

```

```

else
{
    cin.getline( buffer, 1024 );
    input = buffer;
    if( input == "end" )
    {
        terminate = true;
    }
}
if( !terminate)
{
    client.transmit( input ); //send string
    int qPos = input.find( "?", 0 );
    //receive string only when needed
    if( qPos > 0 )
    {
        string rcStr = "";
        client.receive( rcStr );
        cout << rcStr << endl;
    }
}
if( useSingleCommand )
{
    terminate = true;
}
}
} catch( const string errorString )
{
    cout<<errorString<<endl;
}
client.disconnect( );
return errorCode;
}

```

A.3 Extensions for User Files

The [Table A-10](#) lists all available file extensions for user files. The currently available files on the instrument depend on the installed options.

Table A-10: List of the automatically assigned file extensions in the instrument

Function	List type	Contents	File suffix
Instrument State	Settings	Instrument settings	*.savrc.txt
User Menu	Settings	User-defined favorite settings	*.user_menu
License Key		License Key	*.xml
"User Correction"	List	User-defined level correction values	*.uco
"List Mode"	List	User-defined frequency/level value pairs	*.lsw

Function	List type	Contents	File suffix
	Settings	Response file	*.txt
"Pulse Train"	Settings	Pulse train data	*.pulstrn
"NRP Settings"	Settings	R&S NRP Settings	*.nrp, *.rsu
SCPI command list	List	Export file containing list of SCPIs	*.iee
SCPI command script		SCPI script file formats: Plain SCPI, MATLAB, NICVI, Python3	*.txt, *.m, *.c, *.py
R&S Support Info Archive	Support File	Automatically collected support information	*.tar.gz
Tutorials	Tutorial files	Lists containing SCPIs and explanations	*.tut

B Unit Shortcuts

When specifying units or quantities during data entry, the R&S SMB100B provides the following shortcuts for simplified input.

Shortcut	Designation	Context	Unit
a, A	ampere	Current	A
	atto-	Area, surface	am ²
c, C	centi-	Distance, length	cm
d, D	deci-	Distance, length	dm
		Level, power	dB, dBFS, dBm, dBu, dBW
	degree	Phase, polar/spherical coordinates	deg
e, E	exa-	Area, surface	em ²
f, F	femto-	Area, surface	fm ²
g, G	giga-	Area, surface	Gm ²
		Data rate, sample rate, symbol rate	Gbit/s, Gsample/s, Gsymbol/s, Gchip/s
		Frequency	GHz
		Impedance, resistance	GΩ
h, H	hertz	Frequency	Hz
k, K	kilo-	Area, surface	km ²
		Data rate, sample rate, symbol rate	kbit/s, ksample/s, ksymbol/s, kchip/s
		Distance, length	km
		Frequency	kHz
		Impedance, resistance	kΩ
		Velocity	km/h
m, M	milli-	Area, surface	mm ²
		Current	mA
		Distance, length	mm
		Electromagnetic force, level	mV
		Power	mW
		Time, period, etc.	ms
	mega-	Area, surface	Mm ²
		Data rate, sample rate, symbol rate	Mbit/s, Msample/s, Msym/s, Mchip/s
		Frequency	MHz
		Impedance, resistance	MΩ

Shortcut	Designation	Context	Unit
n, N	nano-	Area, surface	nm ²
		Current	nA
		Distance, length	nm
		Electromagnetic force, level	nV
		Power	nW
		Time, period, etc.	ns
o, O	ohm	Impedance, resistance	Ω
p, P	peta-	Area, surface	pm ²
	percent	Level, ratio	%
	pico-	Area, surface	pm ²
		Current	pA
		Electromagnetic force, level	pV
		Power	pW
		Time, period, etc.	ps
r, R	radiant	Phase, polar/spherical coordinates	rad
s, S	second	Time, period, etc.	s
t, T	terra-	Area, surface	Tm ²
		Data rate, sample rate, symbol rate	Tbit/s, Tsample/s, Tsym/s, Tchip/s
		Frequency	THz
		Impedance, resistance	TΩ
u, U	micro-	Current	μA
		Distance, length	μm
		Electromagnetic force, level	μV
		Power	μW
		Time, period, etc.	μs
v, V	volt	Level, voltage	V
w, W	watt	Level, power	W

C Hardware Interfaces

This section covers hardware-related topics, like pin assignment of the IEC 625/IEEE 488 interface.

The remote control interfaces are described in details in [Chapter 11, "Network Operation and Remote Control"](#), on page 264.

All other interfaces are described in [Chapter 3.2, "Instrument Tour"](#), on page 32.

For more information, see data sheet.

C.1 GPIB-Bus Interface

Option: R&S SMBB-B86.

Pin assignment

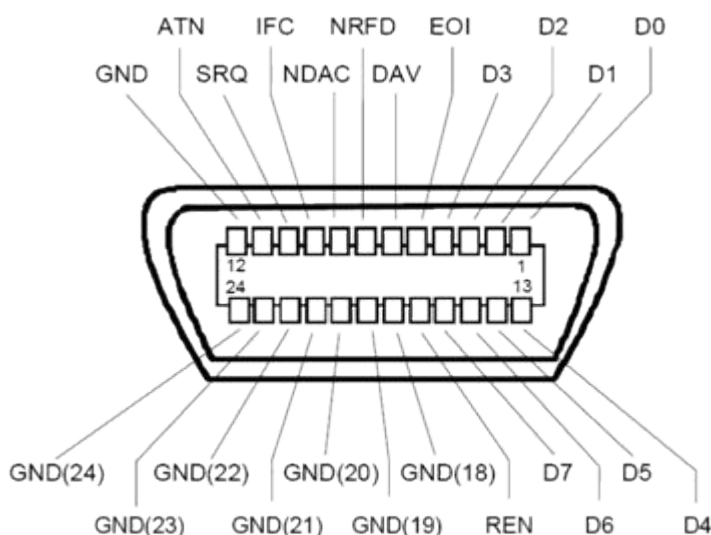


Figure C-1: Pin assignment of GPIB-bus (IEEE 488) interface

Bus lines

- Data bus with 8 lines D0 to D7:
The transmission is bit-parallel and byte-serial in the ASCII/ISO code. D0 is the least significant bit, D7 the most significant bit.
- Control bus with five lines:
IFC (Interface Clear): active LOW resets the interfaces of the instruments connected to the default setting.
ATN (Attention): active LOW signals the transmission of interface messages, inactive HIGH signals the transmission of device messages.

SRQ (Service Request): active LOW enables the connected device to send a service request to the controller.

REN (Remote Enable): active LOW permits switchover to remote control.

EOI (End or Identify): has two functions in connection with ATN:

- ATN=HIGH active LOW marks the end of data transmission.
- ATN=LOW active LOW triggers a parallel poll.

- Handshake bus with three lines:

DAV (Data Valid): active LOW signals a valid data byte on the data bus.

NRFD (Not Ready For Data): active LOW signals that one of the connected devices is not ready for data transfer.

NDAC (Not Data Accepted): active LOW signals that the instrument connected is accepting the data on the data bus.

Interface functions

Instruments which can be controlled via GPIB-bus interface can be equipped with different interface functions. [Table C-1](#) lists the interface functions for the R&S SMB100B.

Table C-1: GPIB-bus interface functions

Control character	Interface function
SH1	Handshake source function (source handshake), full capability
AH1	Handshake sink function (acceptor handshake), full capability
L4	Listener function, full capability, de-addressed by MTA.
T6	Talker function, full capability, ability to respond to serial poll, deaddressed by MLA
SR1	Service request function (Service Request), full capability
PP1	Parallel poll function, full capability
RL1	Remote/Local switch over function, full capability
DC1	Reset function (Device Clear), full capability
DT1	Trigger function (Device Trigger), full capability

Glossary: List of the Often Used Terms and Abbreviations

B

Base unit: This term describes a R&S SMB100B equipped with the option R&S SMBB-B103.

C

Clock: A mandatory internal or an external reference clock signal for generating the timing pulse in the instrument.

Complete file path: The complete file path specifies the root directory and all subdirectories that contain a file or folder.

Synonyms to this expression are "full file path" and "absolute file path".

See also [Chapter 12.5.2, "Accessing Files in the Default or in a Specified Directory"](#), on page 336.

Computer name: An unambiguous indication of the instrument in a LAN that uses a [DNS](#) server.

The default computer name follows the syntax `SMBB-<serial number>`, e.g.

`SMB100B-102030`.

Synonym: [Hostname](#)

See [Serial number](#).

D

daisy chain: A connection scheme in which instruments are connected together in sequence, i.e. an output of the first one is connected to an input of the second one, etc.

DHCP: Dynamic host configuration protocol

DNS: Domain name system server

E

e.g.: For example

External mass memory: External memory, connected to the instrument via USB connector (Type A female). It can hold stored files with user data.

See also [System drive](#)

F

File transfer: The transmission of files from or to the instrument by a remote client. The instrument supports the standard methods [FTP](#) and file sharing according to [SAMBA/SMB](#).

FTP: File transfer protocol

G

Glossary: List of the often used terms and abbreviations

GUI: Graphical user interface

H

Hostname: [Computer name](#)

I

i.e.: That is

L

LF: Low frequency

LSB: Least significant bit

M

MIMO: Multiple input multiple outputs

MSB: Most significant bit

N

NTP: Network Time Protocol synchronizes all connected instruments and computer systems to minimize time delays in the network.

P

PC: Personal computer

Power: A term describing the signal level of the RF signal

product page: A designation of the R&S SMB100B product page <http://www.rohde-schwarz.com/product/SMA100B.html>

R

Remote access: [Remote operation](#)

Remote control: The operation of the R&S SMB100B by remote control commands or programs to perform automated tests.
The instrument is connected to a system controller via LAN/VXI-11, GPIB or USB using [VISA](#). The instrument is controlled directly or supported by instrument drivers.

Remote device: External device controls the R&S SMB100B in remote operation mode, see [Remote operation](#).

Synonyms: External controller, client device

Remote operation: Allows you to operate the R&S SMB100B from a remote device via VNC.

Both the R&S SMB100B and the remote device are connected in a LAN.

Synonym: Remote access

Removable memory: General term describing mass memory that can be unmounted from the instrument.

RF: Radio frequency

S

SAMBA/SMB: Server message protocol

Serial number: Unique instrument identification, provided on the rear panel of the instrument and required to build the [Computer name](#).

The serial number are the last 6 digits in the string <stock no.>-<serial number>, e.g. SMB100B-102030

Smart device: A mobile, cordless device, such as a smartphone or tablet, capable of Internet browsing.

Synonyms: Smartphone, tablet

System drive: The system drive is a built-in internal memory that holds the operating system, the firmware, and the stored user data.

Throughout this description, the system drive is referred as an internal memory.

See also [Removable memory](#)

T

Trigger: Internally generated or externally supplied signal which starts signal generation at a particular point in time.

Trigger event: A trigger event is caused by the received trigger signal or executed manual trigger.

U

UE: User equipment

USBTC: (USB test & measurement class)

A protocol built on top of USB for communication with USB devices. Using [VISA](#) library, it supports service request, triggers, and other specific operations, similar to GPIB.

User directory: Describes the default file storage location for user data.

Depending on the installed options, the user directory is physically located on the [System drive](#) or on the [Removable memory](#)

In the file system, user directory is always indicated as `/var/user`

V

VISA: Virtual instrument software architecture

List of commands

:CALibration:ALL[:MEASure]?	345
:CALibration:DATA:FACTory:DATE?	346
:CALibration<hw>:ALL:DATE?	345
:CALibration<hw>:ALL:INformation?	345
:CALibration<hw>:ALL:TEMP?	346
:CALibration<hw>:ALL:TIME?	346
:CALibration<hw>:CONTinueonerror	346
:DEvice:PRESet	333
:DIAGnostic:INFO:OTime?	349
:DIAGnostic:INFO:POCount?	349
:DIAGnostic<hw>:BGInfo:CATalog?	348
:DIAGnostic<hw>:BGInfo?	348
:DIAGnostic<hw>:POINT:CATalog?	350
:DIAGnostic<hw>[:MEASure]:POINT?	350
:DISPlay:ANNotation:AMPLitude	353
:DISPlay:ANNotation:FREQuency	353
:DISPlay:ANNotation[:ALL]	353
:DISPlay:BRIGhtness	352
:DISPlay:BUtTon:BRIGhtness	352
:DISPlay:DIALog:CLOSe	354
:DISPlay:DIALog:CLOSe:ALL	355
:DISPlay:DIALog:ID?	353
:DISPlay:DIALog:OPEN	354
:DISPlay:PSAVe:HOLDoff	351
:DISPlay:PSAVe[:STATe]	352
:DISPlay:UPDate	352
:FORMat:BORDER	355
:FORMat:SREGister	356
:FORMat[:DATA]	356
:HCOPy:DATA?	358
:HCOPy:DEvice:LANGuage	358
:HCOPy:FILE[:NAME]	358
:HCOPy:FILE[:NAME]:AUTO:DIRectory	359
:HCOPy:FILE[:NAME]:AUTO:DIRectory:CLEar	360
:HCOPy:FILE[:NAME]:AUTO:FILE?	360
:HCOPy:FILE[:NAME]:AUTO:STATe	360
:HCOPy:FILE[:NAME]:AUTO?	359
:HCOPy:FILE[:NAME]:AUTO[:FILE]:DAY:STATe	360
:HCOPy:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe	360
:HCOPy:FILE[:NAME]:AUTO[:FILE]:NUMBer?	361
:HCOPy:FILE[:NAME]:AUTO[:FILE]:PREFix	361
:HCOPy:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe	361
:HCOPy:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe	360
:HCOPy:IMAGe:FORMat	358
:HCOPy:REGion	358
:HCOPy[:EXECute]	359
:INITiate<hw>[:POWER]:CONTinuous	370

:KBOard:LAYout.....	362
:MEMory:HFRee?.....	344
:MMEMory:CATalog:LENGth?.....	339
:MMEMory:CATalog?.....	339
:MMEMory:CDIRectory.....	340
:MMEMory:COPI.....	340
:MMEMory:DATA.....	341
:MMEMory:DCATalog:LENGth?.....	342
:MMEMory:DCATalog?.....	341
:MMEMory:DELeTe.....	342
:MMEMory:LOAD:STATe.....	342
:MMEMory:MDIRectory.....	342
:MMEMory:MOVE.....	343
:MMEMory:MSIS.....	343
:MMEMory:RDIRectory.....	343
:MMEMory:STORe:STATe.....	343
:OUTPut:ALL[:STATe].....	362
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	364
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	364
:OUTPut<hw>:AMODE.....	363
:OUTPut<hw>:IMPedance?.....	363
:OUTPut<hw>:PROTection:CLear.....	364
:OUTPut<hw>:PROTection:TRIPped?.....	364
:OUTPut<hw>[:STATe].....	363
:OUTPut<hw>[:STATe]:PON.....	363
:READ<ch>[:POWer]?.....	371
:SENSe<ch>:UNIT[:POWer].....	371
:SENSe<ch>[:POWer]:APERTure:DEFault:STATe.....	372
:SENSe<ch>[:POWer]:APERTure:TIME.....	372
:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?.....	373
:SENSe<ch>[:POWer]:CORRection:SPDevice:SELeCt.....	372
:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe.....	373
:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe.....	373
:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?.....	373
:SENSe<ch>[:POWer]:FILTer:LENGth[:USER].....	374
:SENSe<ch>[:POWer]:FILTer:NSRatio.....	374
:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME.....	375
:SENSe<ch>[:POWer]:FILTer:SONCe.....	375
:SENSe<ch>[:POWer]:FILTer:TYPE.....	375
:SENSe<ch>[:POWer]:FREQuency.....	376
:SENSe<ch>[:POWer]:LOGGing:STATe.....	376
:SENSe<ch>[:POWer]:OFFSet.....	377
:SENSe<ch>[:POWer]:OFFSet:STATe.....	377
:SENSe<ch>[:POWer]:SNUMber?.....	377
:SENSe<ch>[:POWer]:SOURce.....	377
:SENSe<ch>[:POWer]:STATus[:DEVice]?.....	378
:SENSe<ch>[:POWer]:TYPE?.....	378
:SENSe<ch>[:POWer]:ZERO.....	378
:SLISt:CLear:LAN.....	369
:SLISt:CLear:USB.....	369

:SLIST:CLEAr[:ALL].....	370
:SLIST:ELEMEnt<ch>:MAPPing.....	370
:SLIST:SCAN:LSEnSor.....	368
:SLIST:SCAN:USEnSor.....	369
:SLIST:SCAN[:STATe].....	368
:SLIST:SENsOr:MAP.....	370
:SLIST[:LIST]?.....	368
:SOURce<hw>:PRESet.....	333
:STATus:OPERation:CONDition?.....	509
:STATus:OPERation:ENABLE.....	509
:STATus:OPERation:NTRansition.....	510
:STATus:OPERation:PTRansition.....	510
:STATus:OPERation[:EVENT].....	509
:STATus:PRESet.....	510
:STATus:QUEStionable:CONDition.....	511
:STATus:QUEStionable:ENABLE.....	511
:STATus:QUEStionable:NTRansition.....	511
:STATus:QUEStionable:PTRansition.....	512
:STATus:QUEStionable[:EVENT].....	511
:STATus:QUEue[:NEXT]?.....	512
:SYSTem:BIOS:VERSion?.....	506
:SYSTem:COMMunicate:GPIB:LTERminator.....	493
:SYSTem:COMMunicate:GPIB:RESourcE?.....	493
:SYSTem:COMMunicate:GPIB[:SELF]:ADDReSS.....	493
:SYSTem:COMMunicate:HISLip:RESourcE?.....	494
:SYSTem:COMMunicate:NETWork:IPADdress.....	494
:SYSTem:COMMunicate:NETWork:IPADdress:MODE.....	494
:SYSTem:COMMunicate:NETWork:MACAdress.....	495
:SYSTem:COMMunicate:NETWork:RESourcE?.....	495
:SYSTem:COMMunicate:NETWork:REStart.....	495
:SYSTem:COMMunicate:NETWork:STATus?.....	495
:SYSTem:COMMunicate:NETWork[:COMMon]:DOMain.....	495
:SYSTem:COMMunicate:NETWork[:COMMon]:HOSTName.....	496
:SYSTem:COMMunicate:NETWork[:COMMon]:WORKgrouP.....	496
:SYSTem:COMMunicate:NETWork[:IPADdress]:DNS.....	496
:SYSTem:COMMunicate:NETWork[:IPADdress]:GATeway.....	496
:SYSTem:COMMunicate:NETWork[:IPADdress]:SUBNet:MASK.....	497
:SYSTem:COMMunicate:SERial:BAUD.....	497
:SYSTem:COMMunicate:SERial:PARity.....	497
:SYSTem:COMMunicate:SERial:RESourcE?.....	497
:SYSTem:COMMunicate:SERial:SBITs.....	498
:SYSTem:COMMunicate:SOCKet:RESourcE?.....	498
:SYSTem:COMMunicate:USB:RESourcE?.....	498
:SYSTem:DATE.....	504
:SYSTem:DFPR?.....	507
:SYSTem:DLOCK.....	489
:SYSTem:ERRor:ALL?.....	486
:SYSTem:ERRor:CODE:ALL?.....	486
:SYSTem:ERRor:CODE[:NEXT]?.....	487
:SYSTem:ERRor:COUNt?.....	487

:SYSTem:ERRor:GNEXt?	488
:SYSTem:ERRor:HISTory:CLear	488
:SYSTem:ERRor:STATic?	489
:SYSTem:ERRor[:NEXT]?	488
:SYSTem:FILEs:TEMPorary:DELeTe	508
:SYSTem:FPReset	334
:SYSTem:HELP:EXPort	498
:SYSTem:IDENtification	499
:SYSTem:IDENtification:PRESet	499
:SYSTem:INFormation:SCPI	500
:SYSTem:IRESpone	499
:SYSTem:KLOCK	489
:SYSTem:LANGUage	500
:SYSTem:LOCK:OWNer?	490
:SYSTem:LOCK:RELease:ALL	491
:SYSTem:LOCK:REQuest[:EXCLusive]?	491
:SYSTem:MMEMory:PATH:USER?	507
:SYSTem:NINFormation?	489
:SYSTem:NTP:HOSTname	505
:SYSTem:NTP:STATe	505
:SYSTem:ORESpone	500
:SYSTem:OSYSem?	507
:SYSTem:PRESet	334
:SYSTem:PROTect<ch>[:STATe]	492
:SYSTem:RCL	491
:SYSTem:REBoot	507
:SYSTem:REStArT	507
:SYSTem:SAV	491
:SYSTem:SECurity:SANitizE[:STATe]	501
:SYSTem:SECurity:SUPolicy	501
:SYSTem:SECurity:VOLMode[:STATe]	492
:SYSTem:SHUTdown	508
:SYSTem:SPECification:IDENtification:CATalog?	502
:SYSTem:SPECification:PARAmeter?	503
:SYSTem:SPECification:VERSIon	502
:SYSTem:SPECification:VERSIon:CATalog?	503
:SYSTem:SPECification:VERSIon:FACTory?	503
:SYSTem:SPECification?	501
:SYSTem:SRData?	504
:SYSTem:STARtup:COMPLete?	504
:SYSTem:TIME	505
:SYSTem:TIME:ZONE	505
:SYSTem:TIME:ZONE:CATalog?	506
:SYSTem:ULOCK	490
:SYSTem:UPTime?	506
:SYSTem:VERSIon?	506
:SYSTem:WAIT	508
:TEST<hw>:ALL:RESult?	513
:TEST<hw>:ALL:STARt	512
:TRIGger<hw>:FPSWeep:SOURce	515

:TRIGger<hw>:FSWeep:SOURce.....	514
:TRIGger<hw>:FSWeep[:IMMediate].....	515
:TRIGger<hw>:LFFSweep.....	516
:TRIGger<hw>:LFFSweep:IMMediate.....	515
:TRIGger<hw>:LFFSweep:SOURce.....	514
:TRIGger<hw>:PSWeep:SOURce.....	514
:TRIGger<hw>:PSWeep[:IMMediate].....	516
:TRIGger<hw>[:SWEep]:SOURce.....	514
:TRIGger<hw>[:SWEep][:IMMediate].....	516
:UNIT:ANGLE.....	517
:UNIT:POWer.....	517
[:SOURce]:CORRection:CSET:CATalog?.....	418
[:SOURce]:CORRection:CSET:DELeTe.....	419
[:SOURce]:INPut:TRIGger:SLOPe.....	428
[:SOURce]:LFOutput:OFFSet.....	434
[:SOURce]:LFOutput:SIMPedance.....	434
[:SOURce]:LFOutput:VOLTagE.....	435
[:SOURce]:LFOutput<ch>:BANDwidth?.....	431
[:SOURce]:LFOutput<ch>:FREQuency.....	431
[:SOURce]:LFOutput<ch>:INTErnal:VOLTagE.....	433
[:SOURce]:LFOutput<ch>:SOURce.....	434
[:SOURce]:LFOutput<ch>:SOURce:PATH.....	435
[:SOURce]:LFOutput<ch>[:STATe].....	433
[:SOURce]:PM<ch>[:DEViation].....	394
[:SOURce]:POWer:WIGNore.....	466
[:SOURce]:PULM[:INTErnal][:TRAIn]:TRIGger:IMMediate.....	397
[:SOURce]:ROSCillator:EXTErnal:FREQuency.....	468
[:SOURce]:ROSCillator:EXTErnal:FREQuency:VARiable.....	469
[:SOURce]:ROSCillator:EXTErnal:MLRange?.....	469
[:SOURce]:ROSCillator:EXTErnal:NSBAndwidth?.....	470
[:SOURce]:ROSCillator:EXTErnal:RFOFF[:STATe].....	468
[:SOURce]:ROSCillator:EXTErnal:SBANDwidth.....	469
[:SOURce]:ROSCillator:OUTPut:ALTErnate:FREQuency:MODE.....	470
[:SOURce]:ROSCillator:OUTPut:FREQuency:MODE.....	470
[:SOURce]:ROSCillator:PRESet.....	468
[:SOURce]:ROSCillator:SOURce.....	468
[:SOURce]:ROSCillator[:INTErnal]:ADJJust:VALue.....	471
[:SOURce]:ROSCillator[:INTErnal]:ADJJust[:STATe].....	471
[:SOURce]:STEReo:ARI:BK[:CODE].....	412
[:SOURce]:STEReo:ARI:STATe.....	410
[:SOURce]:STEReo:ARI:TYPE.....	411
[:SOURce]:STEReo:ARI:TYPE:STATe.....	411
[:SOURce]:STEReo:ARI[:DEViation].....	411
[:SOURce]:STEReo:AUDio:MODE.....	408
[:SOURce]:STEReo:AUDio:PREEmphasis.....	409
[:SOURce]:STEReo:AUDio:PREEmphasis:STATe.....	409
[:SOURce]:STEReo:DIRect.....	407
[:SOURce]:STEReo:EXTErnal:IMPedance.....	409
[:SOURce]:STEReo:MMF.....	409
[:SOURce]:STEReo:PILot:PHASe.....	410

[SOURce]:STEReo:PILot:STATe.....	410
[SOURce]:STEReo:PILot[:DEVIation].....	410
[SOURce]:STEReo:RDS:DATaset.....	413
[SOURce]:STEReo:RDS:STATe.....	412
[SOURce]:STEReo:RDS:TRAFfic:ANNouncement[:STATe].....	413
[SOURce]:STEReo:RDS:TRAFfic:PROGram[:STATe].....	413
[SOURce]:STEReo:RDS[:DEVIation].....	412
[SOURce]:STEReo:SOURce.....	408
[SOURce]:STEReo:STATe.....	407
[SOURce]:STEReo[:DEVIation].....	407
[SOURce<hw>]:AM:DEPTh:SUM.....	384
[SOURce<hw>]:AM:DEVIation:MODE.....	384
[SOURce<hw>]:AM:RATio.....	384
[SOURce<hw>]:AM<ch>:SENSitivity.....	385
[SOURce<hw>]:AM<ch>:SOURce.....	383
[SOURce<hw>]:AM<ch>:STATe.....	382
[SOURce<hw>]:AM<ch>[:DEPTh].....	383
[SOURce<hw>]:COMBined:FREQuency:START.....	480
[SOURce<hw>]:COMBined:FREQuency:STOP.....	480
[SOURce<hw>]:COMBined:POWEr:START.....	480
[SOURce<hw>]:COMBined:POWEr:STOP.....	481
[SOURce<hw>]:CORRection:CSET:DATA:FREQuency.....	416
[SOURce<hw>]:CORRection:CSET:DATA:FREQuency:POINts?.....	416
[SOURce<hw>]:CORRection:CSET:DATA:POWEr.....	416
[SOURce<hw>]:CORRection:CSET:DATA:POWEr:POINts?.....	416
[SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWEr]:SONCe.....	417
[SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWEr]:SONCe.....	418
[SOURce<hw>]:CORRection:CSET[:SELEct].....	417
[SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?.....	419
[SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension.....	419
[SOURce<hw>]:CORRection:DEXChange:AFILe:SELEct.....	419
[SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn.....	420
[SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal.....	420
[SOURce<hw>]:CORRection:DEXChange:EXECute.....	420
[SOURce<hw>]:CORRection:DEXChange:MODE.....	420
[SOURce<hw>]:CORRection:DEXChange:SELEct.....	421
[SOURce<hw>]:CORRection:VALue?.....	417
[SOURce<hw>]:CORRection:ZERoing:STATe.....	418
[SOURce<hw>]:CORRection[:STATe].....	418
[SOURce<hw>]:FM:DEVIation:MODE.....	388
[SOURce<hw>]:FM:DEVIation:SUM.....	388
[SOURce<hw>]:FM:MODE.....	389
[SOURce<hw>]:FM:RATio.....	389
[SOURce<hw>]:FM:SENSitivity?.....	389
[SOURce<hw>]:FM<ch>:SOURce.....	387
[SOURce<hw>]:FM<ch>:STATe.....	387
[SOURce<hw>]:FM<ch>[:DEVIation].....	387
[SOURce<hw>]:FREQuency:CENTer.....	425
[SOURce<hw>]:FREQuency:MANual.....	424
[SOURce<hw>]:FREQuency:MODE.....	422

[SOURce<hw>]:FREQuency:MULTIplier.....	424
[SOURce<hw>]:FREQuency:OFFSet.....	425
[SOURce<hw>]:FREQuency:SPAN.....	425
[SOURce<hw>]:FREQuency:START.....	426
[SOURce<hw>]:FREQuency:STEP:MODE.....	426
[SOURce<hw>]:FREQuency:STEP[:INCRement].....	427
[SOURce<hw>]:FREQuency:STOP.....	426
[SOURce<hw>]:FREQuency[:CW FIXed].....	423
[SOURce<hw>]:FREQuency[:CW FIXed]:RCL.....	423
[SOURce<hw>]:INPut:MODext:COUPling.....	427
[SOURce<hw>]:INPut:MODext:IMPedance<ch>.....	428
[SOURce<hw>]:LFOutput:FREQuency:MANual.....	432
[SOURce<hw>]:LFOutput:FREQuency:MODE.....	432
[SOURce<hw>]:LFOutput:FREQuency:START.....	433
[SOURce<hw>]:LFOutput:FREQuency:STOP.....	433
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:DWELl.....	438
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:EXECute.....	438
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE.....	439
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:POINts.....	439
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RETRace.....	439
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RUNNING?.....	440
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHApe.....	440
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACing.....	440
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic.....	440
[SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear].....	441
[SOURce<hw>]:LFOutput<ch>:PERiod?.....	431
[SOURce<hw>]:LFOutput<ch>:SHApe.....	435
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:DCYClE.....	435
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:PERiod.....	436
[SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:WIDTh.....	436
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:FALL.....	436
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:HIGH.....	436
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:PERiod.....	437
[SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:RISE.....	437
[SOURce<hw>]:LFOutput<ch>:SHApe:TRIangle:PERiod.....	437
[SOURce<hw>]:LFOutput<ch>:SHApe:TRIangle:RISE.....	437
[SOURce<hw>]:LIST:CATalog?.....	450
[SOURce<hw>]:LIST:DELeTe.....	450
[SOURce<hw>]:LIST:DELeTe:ALL.....	450
[SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?.....	452
[SOURce<hw>]:LIST:DEXChange:AFILe:EXTension.....	453
[SOURce<hw>]:LIST:DEXChange:AFILe:SELeCt.....	453
[SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn.....	453
[SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal.....	453
[SOURce<hw>]:LIST:DEXChange:EXECute.....	452
[SOURce<hw>]:LIST:DEXChange:MODE.....	454
[SOURce<hw>]:LIST:DEXChange:SELeCt.....	454
[SOURce<hw>]:LIST:DWELl.....	444
[SOURce<hw>]:LIST:DWELl:LIST.....	445
[SOURce<hw>]:LIST:DWELl:LIST:POINts?.....	445

[SOURce<hw>]:LIST:DWELI:MODE.....	445
[SOURce<hw>]:LIST:FREE?.....	451
[SOURce<hw>]:LIST:FREQuency.....	446
[SOURce<hw>]:LIST:FREQuency:POINts?.....	446
[SOURce<hw>]:LIST:INDEx.....	446
[SOURce<hw>]:LIST:INDEx:STARt.....	447
[SOURce<hw>]:LIST:INDEx:STOP.....	447
[SOURce<hw>]:LIST:MODE.....	447
[SOURce<hw>]:LIST:POWer.....	447
[SOURce<hw>]:LIST:POWer:POINts?.....	448
[SOURce<hw>]:LIST:RESEt.....	451
[SOURce<hw>]:LIST:RUNNing?.....	449
[SOURce<hw>]:LIST:SELEct.....	451
[SOURce<hw>]:LIST:TRIGGer:EXECute.....	448
[SOURce<hw>]:LIST:TRIGGer:SOURce.....	448
[SOURce<hw>]:MODulation[:ALL][:STATe].....	380
[SOURce<hw>]:NOISe:BANDwidth BWIDth.....	455
[SOURce<hw>]:NOISe:BWIDth:STATe.....	455
[SOURce<hw>]:NOISe:DISTRibution.....	455
[SOURce<hw>]:NOISe:LEVel:RELAtive?.....	455
[SOURce<hw>]:NOISe:LEVel[:ABSolute]?.....	456
[SOURce<hw>]:PGENERator:OUTPut:POLarity.....	457
[SOURce<hw>]:PGENERator:OUTPut[:STATe].....	457
[SOURce<hw>]:PGENERator:STATe.....	457
[SOURce<hw>]:PHASe.....	458
[SOURce<hw>]:PHASe:REFerence.....	458
[SOURce<hw>]:PM:DEVIation:MODE.....	393
[SOURce<hw>]:PM:DEVIation:SUM.....	393
[SOURce<hw>]:PM:MODE.....	392
[SOURce<hw>]:PM:RATio.....	393
[SOURce<hw>]:PM:SENSitivity?.....	394
[SOURce<hw>]:PM<ch>:SOURce.....	392
[SOURce<hw>]:PM<ch>:STATe.....	391
[SOURce<hw>]:POWer:ALC:DSENSitivity.....	460
[SOURce<hw>]:POWer:ALC:MODE?.....	459
[SOURce<hw>]:POWer:ALC:SONCe.....	460
[SOURce<hw>]:POWer:ALC[:STATe].....	459
[SOURce<hw>]:POWer:ATTenuation:RFOff:MODE.....	460
[SOURce<hw>]:POWer:EMF:STATe.....	461
[SOURce<hw>]:POWer:LBEHaviour.....	461
[SOURce<hw>]:POWer:LIMit[:AMPLitude].....	461
[SOURce<hw>]:POWer:MANual.....	462
[SOURce<hw>]:POWer:MODE.....	462
[SOURce<hw>]:POWer:POWer.....	463
[SOURce<hw>]:POWer:RANGe:LOWer?.....	466
[SOURce<hw>]:POWer:RANGe:UPPer?.....	466
[SOURce<hw>]:POWer:STARt.....	463
[SOURce<hw>]:POWer:STEP:MODE.....	464
[SOURce<hw>]:POWer:STEP[:INCRement].....	464
[SOURce<hw>]:POWer:STOP.....	463

[SOURce<hw>]:POWER[:LEVel][:IMMediate]:OFFSet.....	464
[SOURce<hw>]:POWER[:LEVel][:IMMediate]:RCL.....	465
[SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude].....	465
[SOURce<hw>]:PULM:DELay.....	397
[SOURce<hw>]:PULM:DOUBle:DELay.....	398
[SOURce<hw>]:PULM:DOUBle:STATe.....	398
[SOURce<hw>]:PULM:DOUBle:WIDTh.....	398
[SOURce<hw>]:PULM:IMPedance.....	400
[SOURce<hw>]:PULM:MODE.....	396
[SOURce<hw>]:PULM:OUTPut:SYNC[:STATe].....	399
[SOURce<hw>]:PULM:PERiod.....	397
[SOURce<hw>]:PULM:POLarity.....	399
[SOURce<hw>]:PULM:SOURce.....	398
[SOURce<hw>]:PULM:STATe.....	398
[SOURce<hw>]:PULM:TRAI:n:CATalog?.....	401
[SOURce<hw>]:PULM:TRAI:n:DELete.....	401
[SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:CATalog?.....	404
[SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:EXTension.....	404
[SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:SELect.....	405
[SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:SEParator:COLUMN.....	404
[SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:SEParator:DECimal.....	404
[SOURce<hw>]:PULM:TRAI:n:DEXChange:EXECute.....	405
[SOURce<hw>]:PULM:TRAI:n:DEXChange:MODE.....	403
[SOURce<hw>]:PULM:TRAI:n:DEXChange:SELect.....	405
[SOURce<hw>]:PULM:TRAI:n:OFFTime.....	402
[SOURce<hw>]:PULM:TRAI:n:OFFTime:POINts?.....	402
[SOURce<hw>]:PULM:TRAI:n:ONTime.....	402
[SOURce<hw>]:PULM:TRAI:n:ONTime:POINts?.....	402
[SOURce<hw>]:PULM:TRAI:n:REPetition.....	402
[SOURce<hw>]:PULM:TRAI:n:REPetition:POINts?.....	402
[SOURce<hw>]:PULM:TRAI:n:SELect.....	403
[SOURce<hw>]:PULM:TRIGger:MODE.....	396
[SOURce<hw>]:PULM:TTYPe.....	399
[SOURce<hw>]:PULM:WIDTh.....	397
[SOURce<hw>]:SWEep:COMBined:COUNT.....	481
[SOURce<hw>]:SWEep:COMBined:DWELI.....	481
[SOURce<hw>]:SWEep:COMBined:EXECute.....	481
[SOURce<hw>]:SWEep:COMBined:MODE.....	482
[SOURce<hw>]:SWEep:COMBined:RETRace.....	482
[SOURce<hw>]:SWEep:COMBined:SHAPE.....	483
[SOURce<hw>]:SWEep:POWER:DWELI.....	474
[SOURce<hw>]:SWEep:POWER:EXECute.....	478
[SOURce<hw>]:SWEep:POWER:MODE.....	475
[SOURce<hw>]:SWEep:POWER:POINts.....	475
[SOURce<hw>]:SWEep:POWER:RETRace.....	478
[SOURce<hw>]:SWEep:POWER:RUNNing?.....	479
[SOURce<hw>]:SWEep:POWER:SHAPE.....	478
[SOURce<hw>]:SWEep:POWER:SPACing:MODE?.....	475
[SOURce<hw>]:SWEep:POWER:STEP[:LOGarithmic].....	476
[SOURce<hw>]:SWEep:RESet[:ALL].....	483

[:SOURce<hw>]:SWEep[:FREQuency]:DWELL.....	476
[:SOURce<hw>]:SWEep[:FREQuency]:EXECute.....	478
[:SOURce<hw>]:SWEep[:FREQuency]:MODE.....	476
[:SOURce<hw>]:SWEep[:FREQuency]:POINts.....	477
[:SOURce<hw>]:SWEep[:FREQuency]:RETRace.....	478
[:SOURce<hw>]:SWEep[:FREQuency]:RUNNing?.....	479
[:SOURce<hw>]:SWEep[:FREQuency]:SHApe.....	478
[:SOURce<hw>]:SWEep[:FREQuency]:SPACing.....	477
[:SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.....	479
[:SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear].....	479
*CLS.....	329
*ESE.....	329
*ESR?.....	329
*IDN?.....	329
*IST?.....	330
*OPC.....	330
*OPT?.....	330
*PRE.....	330
*PSC.....	330
*RCL.....	331
*RST.....	331
*SAV.....	331
*SRE.....	332
*STB?.....	332
*TRG.....	332
*TST?.....	332
*WAI.....	332
STEReo:DIRect.....	520
STEReo:DIRect.....	520
STEReo:DIRect.....	521
STEReo:DIRect.....	521
STEReo:DIRect.....	522
STEReo:DIRect.....	522
STEReo:DIRect.....	523
STEReo:DIRect.....	523
STEReo:DIRect.....	523
STEReo:DIRect.....	524
STEReo:DIRect.....	524
STEReo:DIRect.....	524
STEReo:DIRect.....	525
STEReo:DIRect.....	526
STEReo:DIRect.....	526
STEReo:DIRect.....	527
STEReo:DIRect.....	527
STEReo:DIRect.....	527
STEReo:DIRect.....	528
STEReo:DIRect.....	528
STEReo:DIRect.....	528
STEReo:DIRect.....	529
STEReo:DIRect.....	529

STEReo:DIReCt.....	530
STEReo:DIReCt.....	530
STEReo:DIReCt.....	531
STEReo:DIReCt.....	531
STEReo:DIReCt.....	531
STEReo:DIReCt.....	532
STEReo:DIReCt.....	532
STEReo:DIReCt.....	532
STEReo:DIReCt.....	533
STEReo:DIReCt.....	533
STEReo:DIReCt.....	533
STEReo:DIReCt.....	534
STEReo:DIReCt.....	534
STEReo:DIReCt.....	534
STEReo:DIReCt.....	535
STEReo:DIReCt.....	535
STEReo:DIReCt.....	535
STEReo:DIReCt.....	535
STEReo:DIReCt.....	536
STEReo:DIReCt.....	536
STEReo:DIReCt.....	537
STEReo:DIReCt.....	537
STEReo:DIReCt.....	538
STEReo:DIReCt.....	538
STEReo:DIReCt?.....	537

Index

Symbols

*OPC	574
*OPC?	574
*RST	585
*WAI	574
/var/user directory	334
/var/volatile directory	334
>L	306
&LLO	306
&NREN	306
9.91E37	
Remote control	573
50 - Extern reference out of range or disconnected	540
140 - This modulation forces other modulations off	540
180 - Adjustment failed	540
182 - Adjustment data missing	540
183 - Adjustment data invalid	541
200 - Cannot access hardware	541
201 - Hardware revision out of date	541
202 - Cannot access the EEPROM	541
203 - Invalid EEPROM data	541
204 - river initialization failed	541
241 - No current list	541
242 - Unknown list type specified	541
460 - Cannot open the file	541
461 - Cannot write file	541
462 - Cannot read file	541
463 - Filename missing	541
464 - Invalid filename extension	541
465 - File contains invalid data	541

A

About	
ALC states and their effects	154
Attenuator	151
Internal adjustments	553
Power-On/EMF	231
Reference oscillator	184
Selftests	553
UCOR	156
Accept	
Security settings	256
Active connections	
Remote access	282
Active elements	50
Add LAN sensor	
NRP sensor mapping	171
Add sensor	
NRP sensor mapping	171
Add USBTMC sensor	
NRP sensor mapping	171
Add, change, delete	
User key action	238
Adjust	
Display and keyboard	229
Display settings	228
Keyboard settings	228
Adjustment frequency	
Reference oscillator	189

Adjustments	
All	554
Continue	555
Information	555
Last full adjustment	554
Settings	554
Advanced configuration	
LXI	289
ALC	
Detector sensitivity	155
Settings	155
State	155
ALC states and their effects	154
All packages	
Secure update policy	249
Alphanumeric parameters	53
AM	68
Deviation mode	77
Overview	109
Ratio	77
Subsystem	380
Total deviation	77
Amplitude modulation	76
Depth	76
Deviation mode	77
Ratio	77
Sensitivity	77
Subsystem	380
Analog modulation	
Options	68
Overview	108
Signal source	68
Annotation	
Disable amplitude display	252
Disable frequency display	252
Disable level	252
Aperture time	
Power sensors	179
Application cards	18
Application notes	18
ARI	
BK code	83
Deviation	83
Enabling	83
Identification of ARI signal	83
ATN	594
Attention	594
Attenuator	
About	151
RF signal	151
Settings	152
Attenuator settings	
Level range	153
Mode	152
RF OFF mode	153
Auto once	
Power sensors	178
Power viewer	178
Automatic level control	
Detector sensitivity	155
Readjust internal switch position	65
Settings	155
State	155

Automation	264
Autonegotiation	
Failed	543
Avahi	
LAN services	255
Average level	
Power viewer	176

B

Bandwidth	
Modulation input	104
Noise generator	105
Basics	
Editor	93, 147, 162
Export list files	94, 165
Fill with sensor list files	164
Import list files	94, 165
Baud rate	
RS232 interface	280
Bench top, placing	24
Block data	570
Boolean parameters	569
Brackets	570
Brochures	17
Browser settings	
LXI	287
Bytes order	
Definition	355

C

CALibration subsystem	344
Carrying the instrument	23
Case-sensitivity	
SCPI	566
Central storage	
Accessing	221
Change	
GPIB address	297, 304
Change password	
Setup (security)	259
Change user password	
Setup (security)	258
Check front panel	
Key panel test	560
Performing	559
Settings	559
Check touch panel	
Touchscreen test	560
Checking the instrument	23
Cleaning	553
Clear	
NRP sensor mapping	171
RF output protection	153
User menu	234
Clear history	
Undo/Redo	263
Clear status	
Remote	329
Close	
Show SCPI command	310
Colon	570
Combined RF frequency / level sweep	
Step count	137
Combined sweep	
Spacing	133, 135

Comma	570
Command sequence	
recommendation	585
Remote	332
Commands	564
Brackets	570
Colon	570
Comma	570
Command line structure	572
Common	564
Double dagger	570
Instrument control	564
Overlapping	573
Pipe	570
Question mark	570
Quotation mark	570
SCPI confirmed	564
Sequential	573
Syntax elements	570
White space	570
Commands of all settings	
SCPI list	204
Common commands	
Syntax	566
Computer name	
Changing	294
Syntax	294
Use instead of IP address	294
CONDition	579
Configuration	
Restoring	205
Restoring instrument settings	201
Configuring LAN services	254
Confirm unsigned	
Secure update policy	249
Confirm user password	
Setup (security)	258
Connecting	
Keyboard	28
LAN	27
Memory stick	28
Mouse	28
Power	27
To Ref In/Ref Out	29
To RF	28
USB devices	28
Connection fault	
169.254.*.*	543
Connector	
AC power supply	37
GPIB	37
IEC/IEEE	37
Inst Trig	38
LAN	37
LF	38
Mod. Ext.	38
Pulse Ext.	38
Pulse Video	38
Ref In	38
Ref Out	38
RF	36
S/P Dif	37
Signal Valid	38
Stereo L/R	38
USB	36, 37
USB In	37
Context-sensitive menu	50

Continue	
Internal adjustments	555
Control bus	594
Copy	
Instrument settings	211
Several files	209, 218, 219
Show SCPI command	310
Counter	545
Coupling mode	
AM, FM, PhiM	104
External modulation input	104
Create	
New directory	211
Current frequency	
Sweep	130
Current index	
List mode	140
Current level	
Sweep	130
Customer support	551
Cut	
Instrument settings	211
CW	
Frequency	61
CW mode	
Output level	63
CW signal	
Settings	58
D	
Data entry	52
Data format	
Definition	356
Data list	
Access	206
How to access	336
Select, edit, new	208
Data sheets	17
Data valid	594
Datasheet	
LXI	292
Date	557
DAV	594
Deactivate RF output	186
Deactivated licenses	242
Declassification	251
DEF	569
Default directory	
Mass memory	334
User data	194, 334
Default values	
Remote	331
Define	
User key action	238
Delay	
Double pulse (PULM)	89
PULM	89
Delete	
Instrument settings	211
List mode file	142
Delete instrument settings	342
Delta phase	
RF frequency	67
Detector sensitivity	
Automatic level control	155

Deviation	
Fixed total deviation	74, 76
PhiM	75
Deviation mode	
AM	77
Amplitude modulation	77
FM	74
Frequency modulation	74
Phase modulation	75
PhiM	75
Device ID	242, 507
NRP sensor mapping	171
Device reset	333
Device-specific error messages	540
DHCP	293
Dialog boxes	51
Directory	
Temporary data	334
User data	334
Disable	
Frequency display	252
Level display	252
Display	
Active elements	50
Brightness	230
Context-sensitive menu	50
Info line	50
Information	48
Keyboard layout	230
Lock	252
On-screen keypad	50
Overview	33
Power sensors	177
SCPI list	310
Screen saver	230
Settings	229
Setup	229
Status bar	49
Tab labels	50
Taskbar	49
Tile diagram	49
Wait time (screen saver)	230
Display correction value	
UCOR	160
DISPlay subsystem	350
Disposal	553
Distribution	
Noise generator	105
DNS server	278
DNS suffix	278
Documentation overview	16
Double dagger	570
Double pulse delay	
PULM	89
Double pulse width	
PULM	89
DOWN	569
Downgrade information	547
Factory version	547
Min. version	547
Dwell time	
Sweep	133
Dwell time mode	
List mode	140

E

Edit	
Editor	93, 147, 163
List mode data	142
UCOR data	160
Editor	
Basics	93, 147, 162
Edit	93, 147, 163
Fill with sensor	147, 163
Goto	93, 147, 163
Save	93, 147, 163
Save as	93, 147, 163
EMF display	
RF level	231
Emulating front panel keys	56
Emulation	
IDN string	282
Language	281
Mode	281
Set IDN and OPT to default	281
Enable	
LAN interface	255
ENABLE	579
Enable registers	
Remote	330
Enter license key	242
Enter password	
Setup (security)	256
EOI	594
Error log	549
Error messages	539, 541
Adjustment data invalid (183)	541
Adjustment data missing (182)	540
Adjustment failed (180)	540
Cannot access hardware (200)	541
Cannot access the EEPROM (202)	541
Cannot open file (460)	541
Cannot read file (462)	541
Cannot write file (461)	541
device-specific	540
Driver initialization failed (204)	541
Extern reference out of range or disconnected (50)	540
File contains invalid data (465)	541
Filename missing (463)	541
Hardware revision out of date (201)	541
Invalid EEPROM data (203)	541
Invalid filename extension (464)	541
No current list (241)	541
SCPI	540
This modulation forces other modulations off (140)	540
Unknown list type specified (242)	541
Error queue	580
Error queue query	486, 487, 488
Error queues	
recommendations	585
ESE (event status enable register)	581
ESR	578
ESR (event status register)	581
EVENT	579
Event status enable register (ESE)	581
Remote	329
Event status register (ESR)	581
Remote	329
Exclude frequency	204
Exclude level	205

Execute	
Single sweep	134
Trigger (list mode)	141
Expiration date of option	547
Export	
Execute	96, 144, 167
SCPI	208
SCPI export	312
SCPI list	311
SCPI settings	311
Export deactivation response	242
Export license key	243
Export list files	
Basics	94, 165
Express level in	
Volts	458
External frequency	
Reference oscillator	186
F	
Factory	
Preset	198
Factory preset	
Change GPIB address	297
GPIB address	304
Factory version	
Firmware	547
File	
SCPI export	312
File catalog	
List mode	142
File handling	195
File list	339
File manager	209
File name	223
File select	
Dialog	206
File server	
Data exchange	221
File sharing	216
File storage location	334
File system	193
Accessing	216
File transfer	195
From file server	221
FTP/SAMBA	264
How to	216
File type selection	211
Filename	
Pulse graph	97
Files	
User data	193
Fill	
User correction data	93, 147, 163
Fill table	
Automatically	93, 147, 163
UCOR	160
Fill with sensor	
Basics	164
Editor	147, 163
Filter	
Power sensors	178
Filter length	
Auto	178
User-defined	178
Finding out the default directory	194, 334

Firmware	
Factory version	547
Min. version	547
Version	546
Fixed	
Frequency	61
Floating licenses	547
FM	68
Deviation	74
Deviation mode	74
Ratio	74
Subsystem	385
Total deviation	74
FM deviation	
Stereo modulation	79
Format	
SCPI Export	311
FORMat subsystem	355
FPGA/μC	
Check for updates	562
Check for updates of external	563
Shut down after update internal	563
Update installation internal assembly	562
Update table	562
Frequency	
Annotation disable	252
CW, fixed	61
LF gen frequency	80
LF generator	102
LF sweep	102
Multiplier	61
Offset	61
Power sensors	177
RF signal	60
UCOR	160
Frequency modulation	74
Deviation mode	74
Ratio	74
Subsystem	385
Frequency, internal	
AM	102
FM	102
Front panel	
Checking	559
Front panel test	
Performing	559
Front panel tour	32
ftp	
How to access the instrument	216
FTP	
LAN services	255
Function keys	
Overview	34

G

Gateway	278
General configuration of instrument	228
General instrument functions	
User key	233
User menu	233
General instrument settings	228
Generating an unmodulated signal	58
Getting started	17
Global dwell time	
List mode	141

Goto	
Editor	93, 147, 163
GPIO	
Bus address	279
Change address	297, 304
Characteristics	270
Set up remote control	304
GPIO address	279
Factory preset	304
GUI	
Setting	232
GUI update	
Setup	228

H

Hard copy	
Create, how to	226
File format	223, 224
Print, how to	226
Hardcopy	222
Options	223
Help	17, 54
HiSLIP	
Protocol	269
Resource string	267
History	
Undo/Redo	263
Host name	
NRP sensor mapping	171
see computer name	294
Hostname	276
LXI	286
see computer name	294
How to	
Change the default directory	336
Query hardware options	548
Query RF assembly	548
Use an complete file path	336
User key	239
User menu	235
HTTP	
LAN services	255

I

Identification	
Emulation mode	281
Remote	329
IDN string	
Emulation mode	282
IFC	594
Impedance	
External modulation source	104
Impedance audio signal	80
Import	
Execute	96, 144, 167
SCPI	208
Import license key	242
Import list files	
Basics	94, 165
Import/Export	
Lists	142
Select file	96, 144, 167
Inactive licenses	242
Index	
List mode	140

INF	569
Info line	50, 541
Information	
Internal adjustments	555
Input	
Impedance external modulations	104
Pulse polarity	98
Stereo modulation	78
Trigger impedance	98
Input connector	38
Input connectors	
Mod. Ext.	38
S/P Dif	37
Stereo L/R	38
Installed assembly	545
Instrument	
Carrying	23
Checking	23
Lifting	23
Operating site	23, 24
Unpacking	23
Instrument control	46
Instrument emulations	275, 281
Instrument help	17
Instrument messages	564
Instrument security procedures	17
Instrument settings	
Recall	331, 342
Save	331, 343
Instrument tour	32
Instrument-specific commands	564
Interface	
functions (GPIB bus)	595
Interface clear	594
Interface messages	564, 565
Interfaces	
GPIB	270
USB	270
Internal adjustments	
About	553
Interrupt	583
Invalid results	
Remote control	573
IP address	267
Changing	293
Dynamic	277
LXI	286
Not recognized	543
NRP sensor mapping	171
Zeroconf	277
IP address mode	277
IP configuration	
LXI	288
IST	578
IST flag	
Remote	330
K	
Key	
★ (User)	36
Access on a remote computer	56
Arrow	35
Backspace	35
Down	35
Emulation	56
Enter	35

Esc	35
Freq	34
Help	33
Home	36
Left	35
Level	34
Local	33
Mod on/off	34, 70
Next window	36
On/Off	36
On/Standby	34
Preset	33
Resize window	36
RF on/off	34
Right	35
Setup	33
Up	35
Key panel test	
Check front panel	560
Keyboard	
On-screen	52
Setting	232
Settings	229
Setup	229
Subsystem	361
Usage	47
Keypad	
On-screen	52
Overview	34
Keywords	
Mnemonics	565

L

LAN	
Connecting	27
Environment	27
Interface	267
IP address	267
Main services	255
Reset	286
Samba services	256
Services	254
VXI protocol	269
LAN configuration	292
LXI	288
LAN interface	
Avahi	255
Enable	255
FTP	255
HTTP	255
LAN over SCPI	255
SMB (Samba)	255
SSH	255
VNC	255
LAN status	
LXI	286
Language	
Emulation	281
Last factory calibration	546
Last full adjustment	
Internal adjustments	554
Layout	
Keyboard	230

Level		
Annotation disable	252	
Behavior (RF)	64, 137	
Noise generator	108	
Level default unit		
Change	458	
Level in SCPI in V	458	
Level limit	64	
Level offset		
Power sensors	177	
RF level	64	
State (power sensors)	177	
Level range		
Attenuator settings	153	
Level settings		
On start-up	231	
LF frequency sweep		
State	100, 130	
LF generator		
Shape	100	
LF Out		
Overview	109	
LF output	105	
Load impedance	107	
Offset	107	
Period	102	
Pulse duty cycle	102	
Pulse width	102	
Shape	100	
Source	106, 109	
Source impedance	107	
Sweep reset	134	
Trapezoid high	103	
Trapezoid rise, fall	103	
Triangle rise	103	
Voltage	106	
LF sweep		
Frequency	102	
License		
Keys	240	
License for software option	547	
Infos	547	
Licenses	240	
Server	243	
Settings	240	
Lifting the instrument	23	
Limit		
RF level	64	
List		
Define	142	
Range	142	
State	140	
Values, defining	146, 162	
List file		
Catalog	142	
List mode		
Create list automatically	93, 147, 163	
Current index	140	
Dwell time mode	140	
Edit	142	
Execute trigger	141	
Export user data	96, 144, 167	
File settings, import/export	95, 143, 166	
Global dwell time	141	
Import/export	95, 142, 143, 166	
Load from file	96, 144, 167	
Load user data	142	
Reset	141	
Select file	142	
Settings	138	
State	140	
Trigger execute	141	
Trigger source	140	
Load		
Impedance	107	
See recall	202	
Load instrument settings	331, 342	
Loading		
Trying out	44	
Local to remote switch over	306	
Lock		
Display	252	
LSB/MSB order		
Definition	355	
LXI		
Advanced configuration	289	
Browser settings	287	
Configuration	323	
Datasheet	292	
Hostname	286	
IP address	286	
IP configuration	288	
LAN configuration	288	
LAN status	286	
MAC address	286	
Ping	290	
Remote trace (SCPI)	290	
Reset (LCI)	286	
Status settings	285	
Traicing	306	
LXI settings	285	
M		
Mac address	278	
MAC address		
LXI	286	
Maintenance	553	
Malfunctions		
reacting	585	
Managing license keys	240	
Managing licenses	240	
Manual interaction	47	
Map network share		
Settings	211	
Mapping network drives/folders		
How to	213	
Mass storage location	334	
MAX	569	
Maximal deviation		
Frequency modulation	74	
PhiM	75	
Maximal modulation frequency	81	
Messages		
Commands	564	
Instrument	564	
Instrument responses	565	
Interface	564	
MIN	569	
Min. version		
Firmware	547	
Minimum locking range	187	
Mnemonics	565	
Optional	567	

Mod. Ext. connector	38
Mode	
Attenuator settings	152
Emulation	281
Frequency modulation	75
IP address	277
List	140
PhiM	76
PULM	87
Pulse modulation	87
Sweep	130
User variation	62, 65
Modulation	
AM	70
Analog	68
Bandwidth, external input	104
External coupling	104
FM	70
Input impedance	104
Overview	108
Phase	70
PhiM	70
PM	70, 71
Pulse	70
Source	73
State	73
Stereo modulation	70, 78
Modulation depth	
AM	76
Modulation sensitivity	
AM	77
Modulations state	
Toggle	70
Mount network drive	
How to	213
Mounting, in a rack	25
Mouse	
Usage	47
Multiple files	
Copy	209, 218, 219
Multiplier	
Frequency	61

N

Naming conventions	
Allowed file names	193
NAN	569
NAN (not a number)	
Remote control	573
Navigation	
Keys	35
Navigation controls	
Overview	34
NDAC	594
Network	
Connection fails	543
Environment	27
Settings	275
Network share	
Mapping	211
Mapping, how to	213
Network status	276
New password	
Setup (security)	258
New user password	
Setup (security)	258

NINF	569
Noise	
Distribution	105
Noise bandwidth limitation	
System bandwidth	105
Noise generator	
Bandwidth	105
Noise level	
Absolute system bandwidth	108
Relative system bandwidth	107
Noise ratio	
Power sensors	178
NRFD	594
NRP power viewer	
Settings	174
Use S-Parameter	179
NRP sensor mapping	169
Add LAN sensor	171
Add sensor	171
Add USBTMC sensor	171
Clear	171
Connector	170
Device ID	171
Host name	171
IP address	171
Protocol	170
Scan	171
Sensor name	170, 171
Serial number	171
Settings	170
NTP	
Address	558
NTRansition	579
Number of licenses	547
Numeric data entry	52
Numeric parameters	53, 568
Numeric values	
Special	569

O

Offset	
Frequency	61
Old password	
Setup (security)	258
Old user password	
Setup	258
On-screen keyboard	53
On-screen keypad	50
Open source acknowledgment (OSA)	18
Open-source acknowledgments	547
Operating site	
Choosing	23
Setting up the instrument	24
Operation	
Manual	47
Operation complete	
Remote	330
Operation hours	545
Operation mode	202
Option	
Expiration date	547
Option: expiration date	547
Options	
Analog modulation	68
Identification (remote)	330

Oscillator	
Reference	184
Output	
LF	106
SCPI list (select file)	312
Source (LF output)	109
OUTPut	
Subsystem	362
Output connector	38
Output connectors	
RF	36
Output queue	578
Output, LF	
Offset	107
Voltage	106
Overlapped commands	
Preventing	574
Overlapping commands	573
Overview	
AM	109
LF Out	109

P

Parallel poll register enable	
Remote	330
Parameters	
Block data	570
Boolean	569
Entering	53
Numeric values	568
SCPI	568
Special numeric values	569
String	570
Text	570
Parity	
RS232 interface	280
Password	
Change (security password)	259
Change (user password (security))	258
Confirm (security password)	258
Confirm (user password (security))	258
Enter (security password)	256
New (security password)	258
New (user password (security))	258
Old (security password)	258
Old user password	258
Protection level	248
Password management	
Security	256
Paste	
Instrument settings	211
PCI bus	545
Phase	
Subsystem	458
Phase modulation	75
Deviation	75
Deviation mode	75
Mode	76
Ratio	76
Subsystem	390
Phase reference	67
PhiM	
Deviation mode	75
Mode	76
Ratio	76
Settings	75
Total deviation	76
Pilot tone	
Enabling	82
Pilot deviation	82
Pilot phase	82
Ping	
LXI	290
Pipe	570
Placing, on a bench top	24
PM	68
Subsystem	390
Polarity	
Pulse generator output	90
Pulse modulation	98
Power	
Connecting the instrument	27
UCOR	160
Power On	34
Power sensors	
Activation	176
Aperture time	179
Auto once	178
Filter	178
Filter length	178
Frequency	177
Level (average)	176
Level (peak)	176
Level offset	177
Noise ratio	178
Serial number	176
Source	177
State	176
State (level offset)	177
Timeout	179
Unit	176
Update	174
Use default aperture time	179
Zero	176
Power Sensors	
Display	177
Power supply	
Connector	37
Power viewer	
Auto once	178
Power-On	
Settings	231
Power-On count	546
Power-On state	
RF level	231
Power-On/EMF	
About	231
RF signal	231
PPE	578
Preemphasis	81
Prefix, year, month, Day	225
Preparing for use	23
Preset	
Factory preset	198
Print	
Hard copy	226
Protection	
Settings	248
Setup	246
Protection level	
1	247
2	247

3, 4, 5	247
Adjustments	247
Calibration	247
Factory only	247
Protection level	248
Service department	247
Protocol	
VXI	269
PTTransition	579
PULM	
Delay	89
Double pulse delay	89
Double pulse width	89
Impedance (trigger input)	98
Mode	87
Period	89
Pulse polarity (input)	98
see PM	71
Source	71
State	71
Subsystem	394
Transition type	72
Width	89
Pulse	
Duty cycle	102
Length (PULM)	89
Period	102
Width	102
Width (PULM)	89
Pulse generator	
Delay	89
Output polarity	90
Output state	89
Pulse sync signal output	90
Single Trigger	90
Subsystem	456
Width	89
Pulse graph	
Filename	97
Zoom In/Out	97
Zoom position	97
Zooming	97
Pulse modulation	71
Double pulse delay	89
Double pulse width	89
Mode	87
Period	89
Pulse polarity (input)	98
Repetition frequency	89
see PM	71
Select pulse train file	92
Source	71
State	71, 72
Subsystem	394
Trigger input impedance	98
Trigger mode	88
Pulse sync out	
Pulse generator	90
Pulse train	
File catalog	92
Import/export	95, 143, 166
On/off time	92
Repetition	92
Select	92

Q

QR code	284
Queries	564, 572
Status	583
Question mark	570, 572
Questionable status register	582
Quotation mark	570

R

R&S signed packages	
Secure update policy	249
Rack, mounting	25
Ratio	
AM	77
Amplitude modulation	77
FM	74
Frequency modulation	74
Phase modulation	76
PhiM	76
RDS	
Data set	85
Deviation	84
Enable identification of program	85
Enable traffic announcement function	86
Enable traffic program function	85
Enabling	84
Show program service name	85
Readjust	
Automatic level control	65
Recall	
Instrument settings	205
User menu	234
Recall instrument settings	331, 342
Recall intermediate	205, 331
Recommendations	
remote control programming	585
Recorded SCPI commands	
SCPI list	311
Redo	262
Clear history	263
History	263
Settings	262
State	262
Reference frequency output	
1 GHz	188
10 MHz, 100 MHz	188
Loop through	188
Reference oscillator	184
Adjustment	189
Adjustment frequency	189
External frequency	186
Output frequency	188
Preset	186
Reference frequency, variable	187
RF off state	186
Source	186
Synchronization bandwidth	187
Registers	578
Release notes	18
Reload	
SCPI list	312
Remote access	264
Active connections	282
DNS server	278
DNS suffix	278

GPIB address	279	Setting characteristics	64, 137
GPIB resource (VISA resource string)	278	Settings	62
HISLIP resource (VISA resource string)	278	RF level sweep	
Identification	281	State	129
IDN string	282	RF OFF mode	
Instrument emulations	281	Attenuator settings	153
IP address mode	277	RF off state	
Language	281	Reference oscillator	186
Network gateway	278	RF ON, RF OFF, RF ON/OFF	58
Network hostname	276	RF output	
Network IP address	277	Amplitude	63
Network Mac address	278	Impedance	58
Network resource (Ethernet resource string)	278	Protection	153
Network settings	275	State	58
Network status	276	RF Output	
OPT string	282	Level range	65, 138
QR code	284	RF output signal	
RS232	280	Phase	67
see Remote operation from a computer	47	Phase reference	67
Serial	278	RF phase	
Set IDN and OPT to default	281	Configuring	58
Settings	274	RF signal	
Socket resource (VISA resource string)	278	Analog modulation	68
Subnet mask	277	Attenuator	151
USB VISA resource string	278	Frequency	60
Visa resource strings	278	Power-On/EMF	231
Workgroup name	277	User correction	156
Remote control	55	Rotary knob	34
Basics	564	User variation	62, 65
GPIB	304	RS232	
Programming examples	328	Baud rate	280
SCPI	264	Parity	280
Source subsystem	379	Remote access	280
Remote operation	56	Stop bits	280
VNC	264	S	
Remote trace		S-Parameter	
LXI	290	Activate corrections	179
Removing sensitive data	549	S/P Dif connector	37
REN	594	Safety instructions	17
Rename		Samba services	
File	343	SMB client	256
Instrument settings	211	SMB server	256
Reset		SAMBA/SMB	
List mode	141	How to access the instrument	216
RF frequency (delta phase)	67	Sanitize	251
Sweep	134	Save	
Reset device parameters	333	Editor	93, 147, 163
Reset values		Instrument settings	204
Remote	331	User menu	234
Resource string		Save and load	201
VISA	267	Save as	
Restoring configuration	197	Editor	93, 147, 163
Resulting file name	225	Save hard copy as	
Retrace		bmp, jpg, png	223, 224
Sweep	131	Save immediate	204
RF combined sweep		Save instrument settings	331, 343
State	130	Save intermediate	331
RF connector	36	Save/Recall	201
RF frequency		Dialog	202
Configuring	58	How to	205
RF frequency sweep		SCPI-Export	313
State	129	Saving	43
RF level		Saving files	336
Configuring	58	Scan	
EMF display	231	NRP sensor mapping	171
Offset	64		
Power-On state	231		

SCPI		Select file	208
Error messages	540	Self-test	
Export	208	Remote	332
Export settings	311	Selftests	
Import	208	About	553
LAN services	255	Sensitive information	
Output file	312	Protecting	194, 201
Parameters	568	Sensor name	
Syntax	566	NRP sensor mapping	171
Version	267	Sequential commands	573
SCPI confirmed commands	564	Serial bus	545
SCPI export	312	Serial number	295
Select file	312	NRP sensor mapping	171
Show file content	312	Power sensors	176
SCPI Export		Service manual	17
Format	311	Service request (SRQ)	580, 583
SCPI list		Service request enable register (SRE)	580
Commands of all settings	204	Remote	332
Display	310	Services	
Export	311	LAN	254
Recorded SCPI commands	311	Set IDN and OPT to default	
Show all commands	204	Emulation mode	281
SCPI remote trace		Set up remote control	
LXI	290	GPIB	304
SCPI script		Setting commands	564
Select	238	Settings	
SCPI-Export		Active connections	282
Save/Recall	313	ALC	155
Screen saver		AM	76
Activate	232	Attenuator	152
State	230	Automatic level control	155
Wait time	230	Check front panel	559
Secure update policy		Display	229
All packages	249	Instrument emulations	281
Confirm unsigned	249	Internal adjustments	554
R&S signed packages	249	Keyboard	229
Security		Licenses	240
Accept settings	256	List mode	138
Change password (setup)	259	Managing	193
Change user password (setup)	258	NRP power viewer	174
Confirm password (setup)	258	NRP sensor mapping	170
Confirm user password (setup)	258	On power-on	231
Display lock	252	Protection	248
Enter password (setup)	256	Remote access	274
New password (setup)	258	RF level	62
New user password (setup)	258	SCPI export	311
Old password (setup)	258	Security	248
Old user password	258	UCOR	159
Password management	256	Undo/Redo	262
Sanitize	251	User key	237
Secure update policy	249	Setup	
Security password	258	Accept security settings	256
Settings	248	Adjusting display	228
Setup	246	Adjusting keyboard	228
USB storage (setup)	250	Annotation frequency	252
User name (setup)	257	Annotation level	252
User password	258	Change password	258
Volatile memory	251	Change password (security)	259
Security password		Confirm password	258
Security	258	Confirm password (security)	258
Setup	258	Display lock	252
Security procedures	17	Enter password (security)	256
Security settings	246	GUI update	228
Select		Keyboard settings	229
List mode data file	142	Layout (keyboard)	230
Setup file	238	New password	258
User correction data file	160	New password (security)	258

- Old password (security) 258
- Password (protection) 248
- Performing the front panel test 559
- Protection level 248
- Screen saver 230
- Secure update policy 249
- Security password 258
- USB storage (security) 250
- User name (security) 257
- User password 258
- Wait time 230
- Setup files
 - Data exchange 221
- Setup key 228
- Shape
 - LF gen shape 80
 - LF generator 100
 - LF output 100
 - Period 102
 - Pulse duty cycle 102
 - Pulse width 102
 - Sweep 131
 - Trapeze high 103
 - Trapezoid rise, fall 103
 - Triangle rise 103
- Shortcut to a network drives
 - How to 213
- Show
 - SCPI list 204
- Show file content
 - SCPI export 312
- Show SCPI command 310
 - Close 310
 - Copy 310
- Signal output
 - LF 105
- Signal source
 - Analog modulation 68
- Single
 - Execute (list mode) 141
- SMB (Samba)
 - LAN services 255
- Softkey bar
 - see Taskbar 49
- Source
 - AM, FM, Φ M 73
 - Analog modulation 68
 - Impedance 107
 - LF output 106, 109
 - Power sensors 177
 - Pulse modulation 71
 - Reference oscillator 186
 - Sweep trigger 130
- Source subsystem
 - Remote control commands 379
- Spacing
 - Frequency sweep 133, 135
 - RF frequency / level sweep 133, 135
 - RF level sweep 137
- Span
 - Frequency sweep 135
- SRE 578
- SRE (service request enable register) 580
- SRQ 594
- SRQ (service request) 580, 583
- SSH
 - LAN services 255
- Standby 34
- Start
 - Frequency sweep 135
 - RF level sweep 137
- State
 - Adjustment (reference oscillator) 189
 - AM, FM, Φ iM 73
 - Automatic level control 155
 - LF frequency sweep 100, 130
 - List mode 140
 - Power sensors 176
 - Pulse generator output 89
 - Pulse modulation 71
 - RF frequency / level sweep 130
 - RF frequency sweep 129
 - RF level sweep 129
 - RF output 58
 - RF output protection 153
 - Screen saver 230
 - Stereo modulation 79
 - UCOR 160
 - Undo/Redo 262
- Status
 - Queries 583
- Status bar
 - Display 49
- Status byte
 - Remote 329, 332
- Status byte (STB) 580
- Status information 242
- Status register
 - Response format deinition 356
- Status registers 578
 - CONDition 579
 - ENABle 579
 - EVENT 579
 - model 579
 - NTRansition 579
 - parts 579
 - PTRansition 579
- Status reporting system 577
 - Application 583
 - Common commands 328
- Status settings
 - LXI 285
- STB 578
- Step
 - Frequency sweep 136
 - Linear (frequency sweep) 136
 - Logarithmic (frequency sweep) 136
 - RF level sweep 137
- Step count
 - Combined RF frequency / level sweep 137
- Step width
 - User variation 62, 65
- Stereo L/R connector 38
- Stereo modulation 68, 78
 - Change modes 80
 - Enabling 79
 - Frequency of LF generator signal 80
 - Impedance of external analog audio signal 80
 - Maximal modulation frequency 81
 - MPX deviation 79
 - Preemphasis 81
 - Shape of LF generator signal 80
 - Source of audio signal 80

Stop
 Frequency sweep 135
 RF level sweep 137
 Stop bits
 RS232 interface 280
 Storage 553
 Storage location
 /usb/ 193
 /var/user 193
 /var/volatile 193
 Mass memory 334
 Store
 Save 202
 String in remote commands 570
 Subnet mask 277
 Subsystem
 AM 380
 FM 385
 Keyboard 361
 Phase 458
 PM 390
 Power 458
 PULM 394
 Pulse generator 456
 Stereo modulation 405
 Suffixes 567
 Support 549
 Sweep
 Center frequency 135
 Current frequency 130
 Current level 130
 Dwell time 133
 Execute single 134
 Frequency span 135
 Mode 130
 Reset 134
 Retrace 131
 Shape 131
 Spacing 133, 135, 137
 Start/stop frequency 135
 Start/stop level 137
 State (LF frequency) 100, 130
 State (RF combined) 130
 State (RF frequency) 129
 State (RF level) 129
 Step 136, 137
 Trigger manually 134
 Switching
 On or off 31
 Synchronization bandwidth
 Reference oscillator 187
 Syntax elements
 SCPI 570
 System
 Factory preset 198
 System bandwidth
 Noise level (absolute) 108
 Noise level (relative) 107

T

Tab labels 50
 Temperature offset
 Internal adjustments 555
 Temporary files 194, 201
 Test
 Check front panel 559

Text entry 52
 Text parameters in remote commands 570
 Tile diagram
 Display 49
 Time
 UTC 557
 Timeout
 Filter (power sensors) 179
 Tooltips
 Show 54
 Touchscreen 33
 Compared with mouse 47
 Usage 47
 Touchscreen test
 Perform 560
 Traicing
 Messages 306
 SCPI commands 306
 Transition
 PULM 72
 Pulse modulation 72
 Trapezoid
 High (LF generator) 103
 Rise, fall 103
 Triangle
 Rise 103
 Trigger
 Event (remote) 332
 Execute (list mode) 141
 Sweep, manually 134
 Trigger source
 List mode 140
 Sweep 130
 Tripped
 RF output protection 153

U

UCOR
 About 156
 Data 160
 Display correction value 160
 Edit data 160
 Export user data 96, 144, 167
 File catalog 160
 File settings, import/export 95, 143, 166
 Fill with sensor 164
 Import/export 95, 142, 143, 166
 Load from file 96, 144, 167
 RF signal 156
 Select file 160
 Settings 159
 State 160
 Values, defining 146, 162
 Undo 262
 Clear history 263
 History 263
 Settings 262
 State 262
 Unpacking the instrument 23
 UP 569
 USB
 Interfaces 270
 Storage (security) 250
 Use default aperture time
 Power sensors 179

User correction	
see UCOR	156
User data	
Access	206
Load from a specific directory	336
User files	193
User interface	
Lock	252
User key	233
Action name	237
Add, change, delete action	238
Assign actions	239
Define action	237, 238
SCPI command	238
Select dialog ID	238
Settings	237
Toggle between define and execute mode	238
User manual	17
User menu	233
Access	235
Clear	234
Create	235
Recall	234
Save	234
Settings	234
User name	
Setup (security)	257
User password	
Security	258
Setup	258
User preset	197
User variation	
Activating	62, 65
Level	62, 65
RF	62, 65
User-definable preset	
Recall	234
Utility keys	
Overview	33

V

Variable reference frequency	187
Varying	
RF frequency and level	62, 65
Version	
Firmware	546
Vertical bar	570
VISA	267
Libraries	272
Resource string	267
Visa resource string	
Ethernet	278
GPIO	278
HISLIP	278
Serial	278
Socket	278
USB	278
Visa resource strings	278
VNC	
LAN services	255
Using in a LAN	56
Volatile memory	194, 201
Volatile mode	
Activate	251
VXI protocol	269

W

Wait	
Remote	332
Wait time	
Screen saver	230
Warnings	539, 541
White papers	18
White space	570
Wi-Fi	
WLAN	320
Width	
Double pulse (PULM)	89
PULM	89
Pulse modulation	89
Workgroup name	277

Z

Zero	
Power Sensors	176
Zeroconf	
IP address	543
Zeroconf (APIPA) protocol	293
Zoom In/Out	
Pulse graph	97
Zoom position	
Pulse graph	97
Zooming	
Pulse graph	97



Mess- und Prüftechnik. Die Experten.

**Ihr Ansprechpartner /
Your Partner:**

dataTec AG

E-Mail: info@datatec.eu

>>> www.datatec.eu