

# **BROADBAND LINEAR AMPLIFIER**

# Model F70PV



HIGH OUTPUT CURRENT

+70 V 2 A

**HIGH SLEW RATE** 

500 V/μs

**VARIABLE GAIN** 

0-10x


**BROADBAND** 

DC to ca 5 MHz

### GENERAL DESCRIPTION

The **F70PV** is a broadband, high output current, general purpose linear amplifier designed for laboratory use. It is based on a fast operational amplifier with a feedback network chosen to give a voltage amplification of 10 times. Any function or arbitrary waveform generator can be used as an input device. The output is unipolar.

The amplifier combines very high speed with high output current. It is, thus, of the outmost importance for the safe operation that the user understands the possibilities as well as the limitations of the instrument. A functional diagram of the instrument is shown below:

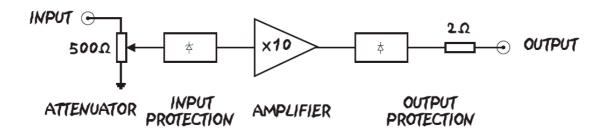

## INPUT AMPLITUDE

The amplifier has an attenuator at the input. At the knob position "10" the amplification is equal to 10x. Standard value is 500 ohm, but 50 ohm, 1kohm or other values can be fitted in on request.

The amplitude of the input signal should normally be kept within the range from zero to +7 V. The input protection network limits the amplitude of the input signal to a safe value (between -1 V and +11 V). It also effectively cuts accidental spikes and overshoots. However, large and prolonged overvoltage at the input may blow the microfuse in the input protection circuit. (A spare fuse is provided inside the instrument. If possible, contact <a href="mailto:service@pendulum-instruments.com">service@pendulum-instruments.com</a> for advice before opening the instrument case.)

Keep input signal positive and below +7 V. Avoid negative input voltage!


Never connect the output to the input of the amplifier!

### LOAD

The amplifier is intended to drive resistive and capacitive loads. It can also be used to drive an inductance in series with resistance. The maximum load that can be safely connected depends on the slew rate of the amplifier. Unless agreed otherwise, this is normally set at the factory to ca 500 V/ $\mu$ s which yields a capacitive load limit of about **1 nF**. This limit includes the capacitance of the connection cable (ca 100 pF/m for a standard coaxial cable). Increasing the capacitive load causes overshoot and may cause instability of the amplifier. If a larger capacitive load is required then the slew rate should be reduced accordingly (see the Load vs. Frequency plot below). Such an adjustment (within a limited load range) may be performed by qualified personnel and the factory should be contacted for advice, since opening the instrument voids the warranty. Inside the cabinet exist hazardous voltage levels and the amplifier circuit is extremely sensitive to static discharge.

### Overloading the output may cause instability.

The frequency response to 1  $V_{pp}$  input amplitude and with 50 ohm load is shown in the following diagram:

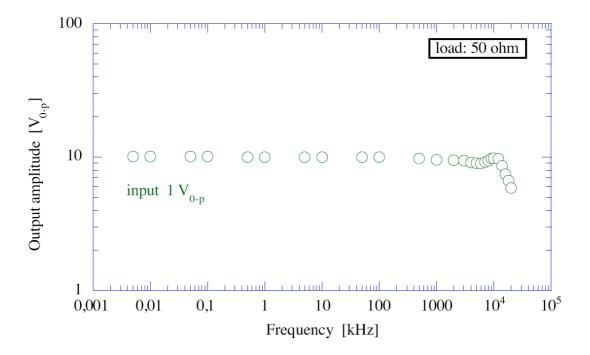

The output current limit is set to ca 2 A. The output is equipped with a current limiting circuit that withstands accidental short-circuits and with a protective 1  $\Omega$  resistance. However, prolonged short-circuiting or overload should be avoided.


The amplifier may be overheated and enter thermal shutoff if its output is short-circuited for a long time.

# The amplifier cannot be used to drive an inductive load.

Maximum frequency depends on the load capacitance. For safe operation with high loads the slew rate has to be reduced by adjusting internal trim capacitor. The slew rate is roughly equal to the max current (2 A) divided by the load capacitance:

$$SR [V/\mu s] \approx I_{MAX} [A] / C_L [\mu F]$$

The diagram below shows the **possible adjustment range**. It <u>does not mean</u> that higher loads can be driven just by lowering the frequency. The slew rate adjustment is necessary!

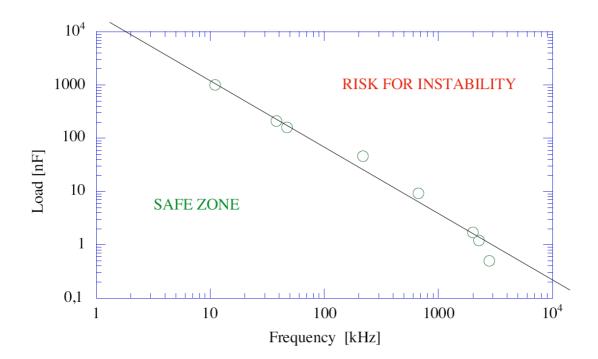

Total noise at the output with short-circuited input is:

frequency [kHz]	0,5	1	10	50
U <sub>NOISE</sub> [μV/√Hz]	<1.3	<0.32	<0.06	<0.05

### SUMMARY OF TECHNICAL DATA

Bandwidth: DC to about 5 MHz at 70 V and 50 ohm load Amplification: 10 times fixed; variable with input attenuator

Load: type resistive || capacitive, factory adjusted for 1nF

max load unless requested otherwise

Impedance: input 500  $\Omega \parallel 30$  pF, custom values possible

output  $2 \Omega$  in the linear mode

Voltage: input nominal from 0 to +7 V

maximum -5V...+11 V peak

Current: output maximum 2 A

Slew Rate: output ca 500 V/ $\mu$ s at 50  $\Omega$  load

Input protection fuse 15 mA (Littelfuse, part number 272.015)

one spare fuse provided inside the instrument, additional fuses available from Littelfuse resellers

or from Pendulum Instruments .

Operating Ambient Temperature: 0°C to 30°C Storage Temperature: 0°C to 60°C

Relative Humidity: up to 90% (operation)

30% to 50% (storage)

Power Requirements: 100/110 V or 220/230 V, 50/60 Hz

Fuse: 100/110 V: 3.15 A (slow),

220/230 V: 2 A (slow)

Dimensions (H/W/L):  $112 \times 255 \times 316 \text{ (mm)}$ 

Weight: 4.5 kg
Country of Origin: Poland

<u>Note</u>: Specifications apply to instruments operating at  $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$  ambient temperature after 15 min. warm-up time. Due to ongoing product development, specifications are subject to change without notice.

WARNING It is not allowed to connect the 100...230V AC line power input of the amplifier to DC-AC converters or solid state AC generators with non-sinusoidal output.

Data sheet revision date: 13 August 2019

# I M P O R T A N T



Inside the amplifier case exist dangerous voltage levels.



The amplifier cannot be used to drive an inductive load.



The instrument cannot be powered from a DC-AC converter nor from a solid-state AC generator with non-sinusoidal output.



Loads sensitive to voltage transients should be disconnected from the amplifier during power-up and power-down.



Never connect the output to the input of the amplifier!



The amplifier may be overheated if the output is shortcircuited for a long time.



It is recommended to monitor the output signal of the amplifier on the oscilloscope.

## **WARRANTY**

The Warranty Statement is part of the folder *Important Information* that is included with the shipment.

# **DECLARATION OF CONFORMITY**

The complete text with formal statements concerning product identification, manufacturer and standards used for type testing is available on request.

F70PV page 7

### **CONTACT PENDULUM INSTRUMENTS**

#### **SWEDEN**

phone +46 31 741 26 31 info@pendulum-instruments.com

### UNITED STATES

phone +1(866) 644-1230 us-office@pendulum-instruments.com

### **POLAND**

phone. +48 (58) 681 8901 info@pendulum-instruments.com © Pendulum Instruments2020 September 2020 Specifications subject to change or improvements without notice.

Distributed by: