MXO 5 Series Oscilloscope User Manual

dataTec
Mess- und Prüftechnik. Die Experten.

Ihr Ansprechpartner / Your Partner:

dataTec AG
E-Mail: info@datatec.eu
datatec.eu



1802336902
Version 15

ROHDE&SCHWARZ
Make ideas real

This document describes the following MXO 5 series models with firmware version 2.11.x.x.

- MXO 54, 4 channels (1802.1008K04)
- MXO 58, 8 channels (1802.1008K08)

Mess- und Prüftechnik. Die Experten.

Ihr Ansprechpartner /
Your Partner:

dataTec AG
E-Mail: info@datatec.eu
datatec.eu

© 2026 Rohde & Schwarz
Muehldorfstr. 15, 81671 Muenchen, Germany
Phone: +49 89 41 29 - 0
Email: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com
Subject to change – data without tolerance limits is not binding.
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.
The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
MATLAB® is a registered trademark of The MathWorks, Inc.
TEKTRONIX, TEK, and TEKPROBE are registered trademarks of Tektronix, Inc.
All other trademarks are the properties of their respective owners.

1802.3369.02 | Version 15 | MXO 5 Series

Throughout this document, R&S® is indicated as R&S.

Contents

1 Safety and regulatory information....25
1.1 Safety instructions....25
1.2 Labels on the product....31
1.3 Warning messages in the documentation....31
1.4 CE declaration of conformity....32
1.5 Where to find key documents on Rohde & Schwarz....32
1.6 Korea certification class A....32
2 Preface....33
2.1 Key features....33
2.2 Documentation overview....33
2.2.1 Manuals and instrument help....34
2.2.2 Specifications and product brochure....34
2.2.3 Calibration certificate....35
2.2.4 Release notes, open source acknowledgment....35
2.2.5 Application notes, application cards, videos....35
2.3 Options described in this document....35
3 Getting Started....37
3.1 Preparing for use....37
3.1.1 Lifting and carrying....37
3.1.2 Unpacking and checking....37
3.1.3 Choosing the operating site....37
3.1.4 Setting up the product....38
3.1.5 Considerations for test setup....40
3.1.6 Connecting to power....40
3.1.7 Connecting to LAN....41
3.1.8 Connecting external devices....41
3.1.9 Switching on or off....42
3.2 Instrument tour....43
3.2.1 Front view....43
3.2.2 Side view....45
3.2.3 Rear view....47

3.2.4 Keys and controls....48
3.2.5 Checking the functionality....56
4 Operating the instrument....59
4.1 Means of manual interaction....59
4.2 Touchscreen display....60
4.2.1 Information on the display....60
4.2.2 Control elements on the GUI....62
4.3 Applications....65
4.4 Toolbar....66
4.4.1 Using the toolbar....66
4.4.2 Configuring the toolbar....67
4.4.3 Toolbar functions....67
4.5 Signal bar....71
4.6 Working with waveforms....72
4.7 Rohde & Schwarz SmartGrid....74
4.8 Using the selection menu....75
4.9 Using dialogs....77
4.10 Entering data....78
4.11 Displaying results....80
4.12 Adding annotations....81
4.13 Information and notifications....83
4.14 Getting user assistance....84
4.14.1 Displaying help....85
4.14.2 Using help....85
5 Instrument setup....87
5.1 System settings....88
5.1.1 About settings....88
5.1.2 Network settings....89
5.1.3 Network drive mapping....92
5.1.4 Remote settings....94
5.1.5 Localization settings....95
5.1.6 Date and time settings....95
5.2 Option settings....97

5.2.1 Software options settings....97
5.3 Appearance settings....100
5.3.1 Colors....100
5.3.2 Grid....103
5.3.3 SmartGrid....105
5.3.4 Dialogs....106
5.3.5 Measure....107
5.3.6 Peak list....108
5.3.7 Miscellaneous....108
5.4 Display settings....109
5.4.1 Persistence settings....109
5.4.2 Signal settings....110
5.4.3 Backlight settings....111
5.5 Front panel settings....112
5.5.1 Hardkeys: function assignment....112
5.5.2 Knobs....112
5.5.3 LED....113
5.6 Preset setup....113
5.6.1 Preset settings....114
5.6.2 Factory preset....115
5.6.3 Restoring settings....115
5.7 Maintenance settings....116
5.7.1 Firmware update....116
5.7.2 Alignment....116
5.7.3 Power management....119
5.7.4 Self-test....119
5.7.5 Service....120
5.7.6 Hardware info....121
5.8 Save / recall settings....121
5.8.1 Autonaming....121
5.8.2 CSV export....124
6 Acquisition and waveform setup....125
6.1 Horizontal setup....125

6.1.1 About the horizontal system....125
6.1.2 Horizontal Setup settings....126
6.1.3 Zoom settings....127
6.1.4 Roll mode....127
6.1.5 Reference clock....129
6.2 Acquisition....130
6.2.1 About the acquisition system....131
6.2.2 Acquisition setup....132
6.2.3 Segmentation settings....137
6.2.4 High definition mode....138
6.2.5 History settings....139
6.2.6 Speed....140
6.3 Vertical setup....140
6.3.1 About the vertical system....141
6.3.2 Vertical Setup settings....141
6.3.3 Channel groups: linked settings....144
6.3.4 Bandwidth settings....146
6.3.5 Probe settings....147
6.3.6 Other vertical settings....147
6.4 Probes....149
6.4.1 Common probe settings....149
6.4.2 Setup for passive probes....151
6.4.3 Setup for active voltage probes....152
6.4.4 Setup for current probes....158
6.4.5 Modular probes....160
6.4.6 Setup for optical isolated probe systems....163
6.4.7 Probe adapter R&S RT-Z2T....167
6.4.8 Probe info....168
6.4.9 Adjusting passive probes....170
7 Trigger....171
7.1 Basics of triggering....171
7.1.1 Trigger information....172
7.2 Common trigger settings....173

7.3 Trigger sequence 175
7.3.1 Sequence setup 176
7.4 Trigger types 177
7.4.1 Edge trigger 178
7.4.2 Edge trigger on external trigger source 179
7.4.3 Glitch trigger 180
7.4.4 Width trigger 182
7.4.5 Runt trigger 183
7.4.6 Window trigger 185
7.4.7 Timeout trigger 187
7.4.8 Interval trigger 188
7.4.9 Slew rate trigger 190
7.4.10 Setup & Hold 192
7.4.11 State trigger 194
7.4.12 Pattern trigger 195
7.4.13 Line trigger 200
7.5 Trigger mode / holdoff 200
7.6 Hysteresis 202
7.7 Channel filter 204
7.8 Actions on trigger 205
7.9 Zone trigger 207
7.9.1 Using trigger zones and areas 212
7.9.2 Zone trigger settings 214
7.9.3 Logic operator settings 216
7.9.4 History settings 218
8 Signal configuration 219
8.1 Signals 219
8.1.1 General settings of signals 219
8.2 Reference level setup 221
8.3 Gate setup 224
8.4 Timing reference 225
8.4.1 General settings of the timing reference 225
8.4.2 Explicit clock signal 227

8.4.3 Clock data recovery by software CDR 228
8.4.4 Clock derived from protocol timing information 232

9 Waveform analysis 234
9.1 Zoom 234
9.1.1 Zoom settings 234
9.1.2 Zooming for details 238
9.2 Mathematics 239
9.2.1 Creating math waveforms 240
9.2.2 General math waveforms settings 240
9.2.3 Operator settings 242
9.2.4 Filter settings 243
9.2.5 Equations 245
9.2.6 Scale settings for math waveforms 251
9.3 History 252
9.3.1 About history 252
9.3.2 History setup 253
9.3.3 Quick access history dialog 255
9.3.4 Using history 256
9.4 Reference waveforms 257
9.4.1 Working with reference waveforms 258
9.4.2 Settings for reference waveforms 260
9.5 Waveform histograms 266
9.5.1 Histogram settings 267
9.5.2 Creating histograms 271
9.5.3 Analysis of waveform histograms 272

10 Measurements 273
10.1 Cursor measurements 273
10.1.1 Cursors and results of cursor measurements 273
10.1.2 Using cursors 274
10.1.3 Settings for cursor measurements 276
10.2 Automatic measurements 284
10.2.1 Measurement setup in general 284
10.2.2 Reference levels for measurements 291

10.2.3 Gate settings for measurements 292
10.2.4 Amplitude/time measurements 293
10.2.5 Histogram measurements 302
10.2.6 Basic jitter analysis (option R&S MXO5-K12) 306
10.2.7 Eye measurements (option R&S MXO5-K136) 311
10.2.8 Protocol measurements (option R&S MXO5-K500) 318
10.2.9 Annotation for measurements 322
10.2.10 Measurement results and their analysis 323

11 Spectrum analysis 340
11.1 Fundamentals of spectrum analysis 340
11.2 Configuring spectrum waveforms 343
11.3 Spectrum setup 345
11.4 Spectrum scale 348
11.5 Spectrum gate 349
11.6 Spectrum peak list 350
11.7 Spectrum overlap 354

12 Applications 356
12.1 Mask testing 356
12.1.1 About mask testing 356
12.1.2 Mask test setup: general settings 358
12.1.3 Mask definition: polygon 361
12.1.4 Mask definition: auto mask 363
12.1.5 Actions on mask test results 364
12.1.6 Working with masks 366
12.2 Frequency response and impedance analyses (options R&S MXO5-K36/K337) 371
12.2.1 Results and plot of analysis 371
12.2.2 Using frequency response and impedance analysis 375
12.2.3 Dependencies of the measurement setup 376
12.2.4 Settings for frequency response and impedance analysis 377
12.2.5 Saving analysis results 389
12.2.6 Reference waveforms of FRA curves 390
12.2.7 Example of impedance analysis 394
12.3 Power analysis (option R&S MXO5-K31) 396

12.3.1 Power analysis initial settings ... 396
12.3.2 Power quality ... 400
12.3.3 Power harmonics ... 406
12.3.4 Switching loss ... 413
12.3.5 Turn on/off time ... 419
12.3.6 Power efficiency ... 424
12.3.7 Safe operating area (SOA) ... 431
12.3.8 Common functions for power measurements ... 438
12.4 3-phase power and motor drive analysis (options R&S MXO5-K333/K360) ... 445
12.4.1 3-phase power analysis initial settings ... 445
12.4.2 Common functions for 3-phase power measurements ... 447
12.4.3 3-phase power quality ... 455
12.4.4 3-phase power harmonics ... 461
12.4.5 3-phase power efficiency ... 468
12.4.6 3-phase power motor drive analysis ... 472
12.5 Digital voltmeter ... 481
12.5.1 Using the digital voltmeter ... 481
12.5.2 Settings of the digital voltmeter ... 482
12.6 XY-plot ... 484
12.6.1 Settings for XY-plots ... 484
12.6.2 Displaying an XY-diagram ... 485
12.7 Eye analysis (option R&S MXO5-K136) ... 485
12.7.1 Calculation and display of eye diagrams ... 485
12.7.2 Eye diagram setup ... 486
12.7.3 Analysis of eye diagrams ... 493
13 Data and file management ... 494
13.1 Accessing, retrieving and handling data ... 494
13.2 Save/recall dialog ... 495
13.3 General and measurement settings: savesets ... 497
13.3.1 Using savesets ... 497
13.3.2 Waveform generator saveset ... 499
13.4 Data of analog waveforms ... 501
13.4.1 Save waveforms: settings ... 501

13.4.2 Saving waveforms....506
13.4.3 Waveform export files....508
13.5 Data of logic channels....517
13.5.1 Save logic channels....518
13.6 Sessions....519
13.6.1 Save a session....519
13.6.2 Load a session....521
13.7 Histogram data....522
13.7.1 Settings for histogram export....522
13.7.2 Files with waveform histograms....524
13.7.3 Files with histograms on measurement results....525
13.7.4 Data conversion....526
13.8 Results....527
13.8.1 Save results: settings....527
13.8.2 Saving results....528
13.9 Screenshots....529
13.9.1 Screenshot settings....530
13.9.2 Configuring and saving screenshots....533
13.9.3 Image viewer....534
13.10 File browser dialog....534
14 Protocol analysis....536
14.1 Basics of protocol analysis....537
14.1.1 Setup - general settings....537
14.1.2 Thresholds....538
14.1.3 Display....540
14.1.4 Filter....543
14.1.5 Format....544
14.1.6 Trigger....550
14.1.7 Measure....554
14.1.8 Export....555
14.1.9 Performing protocol analysis....556
14.1.10 Bit pattern editor....558
14.2 SPI bus (IC electronics, option R&S MXO5-K510)....560

14.2.1 About the SPI protocol ... 560
14.2.2 SPI configuration ... 561
14.2.3 SPI filter ... 565
14.2.4 SPI format configuration ... 567
14.2.5 SPI hardware trigger ... 573
14.2.6 SPI software trigger ... 575
14.2.7 Measure ... 577
14.2.8 SPI decode results ... 578
14.3 QUAD-SPI bus (IC electronics, option R&S MXO5-K510) ... 580
14.3.1 About the QUAD-SPI protocol ... 580
14.3.2 QUAD-SPI configuration ... 581
14.3.3 QUAD SPI filter ... 584
14.3.4 QUAD-SPI format configuration ... 586
14.3.5 QUAD SPI software trigger ... 590
14.3.6 Measure ... 593
14.3.7 QUAD-SPI decode results ... 593
14.4 OCTO-SPI bus (IC electronics, option R&S MXO5-K510) ... 595
14.4.1 About the OCTO-SPI protocol ... 596
14.4.2 OCTO-SPI configuration ... 597
14.4.3 OCTO SPI filter ... 601
14.4.4 OCTO-SPI format configuration ... 603
14.4.5 OCTO SPI software trigger ... 607
14.4.6 Measure ... 609
14.4.7 OCTO-SPI decode results ... 610
14.5 I²C (IC electronics, option R&S MXO5-K510) ... 611
14.5.1 About the I²C protocol ... 612
14.5.2 I²C configuration ... 614
14.5.3 I²C filter ... 617
14.5.4 I2C format configuration ... 620
14.5.5 I²C hardware trigger ... 626
14.5.6 I²C software trigger ... 629
14.5.7 Measure ... 632
14.5.8 I²C decode results ... 633

14.6 I3C (IC electronics, option R&S MXO5-K550)..... 635
14.6.1 About the I3C protocol..... 635
14.6.2 I3C configuration..... 637
14.6.3 I3C filter..... 640
14.6.4 I3C format configuration..... 642
14.6.5 I3C software trigger..... 648
14.6.6 Measure..... 651
14.6.7 I3C decode results..... 651
14.7 D-PHY (option R&S MXO5-K580)..... 654
14.7.1 D-PHY basics..... 654
14.7.2 D-PHY configuration..... 655
14.7.3 D-PHY filter..... 660
14.7.4 D-PHY format configuration..... 663
14.7.5 D-PHY software trigger..... 669
14.7.6 D-PHY decode results..... 672
14.8 UART (IC electronics, option R&S MXO5-K510)..... 675
14.8.1 About the UART / RS-232 interface..... 675
14.8.2 UART configuration..... 676
14.8.3 UART filter..... 680
14.8.4 UART format configuration..... 682
14.8.5 UART hardware trigger..... 688
14.8.6 UART software trigger..... 689
14.8.7 Measure..... 692
14.8.8 UART decode results..... 692
14.8.9 Performing UART decoding..... 694
14.9 NRZ clocked & unclocked (option R&S MXO5-K510)..... 696
14.9.1 NRZ basics..... 697
14.9.2 NRZ configuration..... 697
14.9.3 NRZ filter..... 701
14.9.4 NRZ format configuration..... 705
14.9.5 NRZ software trigger..... 712
14.9.6 Measure..... 716
14.9.7 NRZ decode results..... 716

14.10 Manchester (option R&S MXO5-K510)..... 719
14.10.1 Manchester basics..... 719
14.10.2 Manchester configuration..... 721
14.10.3 Manchester filter..... 726
14.10.4 Manchester format configuration..... 729
14.10.5 Manchester software trigger..... 734
14.10.6 Measure..... 738
14.10.7 Manchester decode results..... 738
14.11 8b/10b (option R&S MXO5-K510)..... 740
14.11.1 About the 8b/10b code..... 740
14.11.2 8b/10b configuration..... 741
14.11.3 8b/10b filter..... 743
14.11.4 8b/10b format configuration..... 746
14.11.5 8b/10b software trigger..... 752
14.11.6 Measure..... 755
14.11.7 8b/10b decode results..... 756
14.12 CAN (automotive electronics, option R&S MXO5-K520)..... 758
14.12.1 CAN configuration..... 758
14.12.2 CAN filter..... 762
14.12.3 CAN format configuration..... 765
14.12.4 CAN hardware trigger..... 771
14.12.5 CAN software trigger..... 779
14.12.6 Measure..... 783
14.12.7 CAN decode results..... 783
14.13 LIN (automotive electronics, option R&S MXO5-K520)..... 786
14.13.1 About the LIN protocol..... 786
14.13.2 LIN configuration..... 787
14.13.3 LIN filter..... 790
14.13.4 LIN format configuration..... 792
14.13.5 LIN hardware trigger..... 798
14.13.6 LIN software trigger..... 800
14.13.7 Measure..... 803
14.13.8 LIN decode results..... 803

14.14 SENT (automotive electronics, option R&S MXO5-K520)..... 806
14.14.1 About the SENT protocol..... 806
14.14.2 SENT configuration..... 810
14.14.3 SENT filter..... 813
14.14.4 SENT format configuration..... 817
14.14.5 SENT software trigger..... 822
14.14.6 Measure..... 826
14.14.7 SENT decode results..... 826
14.15 ARINC 429 (aerospace electronics, option R&S MXO5-K530)..... 828
14.15.1 About the ARINC 429..... 828
14.15.2 ARINC 429 configuration..... 829
14.15.3 ARINC 429 filter..... 832
14.15.4 ARINC 429 format configuration..... 835
14.15.5 ARINC 429 software trigger..... 841
14.15.6 Measure..... 844
14.15.7 ARINC 429 decode results..... 844
14.16 SpaceWire (aerospace communications, option R&S MXO5-K530)..... 845
14.16.1 SpaceWire basics..... 846
14.16.2 SpaceWire configuration..... 847
14.16.3 SpaceWire filter..... 849
14.16.4 SpaceWire format configuration..... 852
14.16.5 SpaceWire software trigger..... 858
14.16.6 Measure..... 860
14.16.7 SpaceWire decode results..... 860
14.17 MIL-1553 (aerospace electronics, option R&S MXO5-K530)..... 862
14.17.1 About the MIL-1553 protocol..... 862
14.17.2 MIL-1553 configuration..... 865
14.17.3 MIL-1553 filter..... 867
14.17.4 MIL-1553 format configuration..... 870
14.17.5 MIL-1553 software trigger..... 875
14.17.6 Measure..... 878
14.17.7 MIL-1553 decode results..... 878
14.18 SPMI (mobile electronics, option R&S MXO5-K550)..... 880

14.18.1 SPMI configuration....880
14.18.2 SPMI filter....883
14.18.3 SPMI format configuration....886
14.18.4 SPMI hardware trigger....892
14.18.5 SPMI software trigger....896
14.18.6 Measure....900
14.18.7 SPMI decode results....900
14.19 RFFE (mobile electronics, option R&S MXO5-K550)....903
14.19.1 About the RFFE protocol....903
14.19.2 RFFE configuration....905
14.19.3 RFFE filter....907
14.19.4 RFFE format configuration....911
14.19.5 RFFE software trigger....917
14.19.6 Measure....921
14.19.7 RFFE decode results....921
14.20 10BASE-T1S (automotive Ethernet, option R&S MXO5-K560)....923
14.20.1 10BASE-T1S basics....923
14.20.2 10BASE-T1S configuration....925
14.20.3 10BASE-T1S filter....927
14.20.4 10BASE-T1S format configuration....930
14.20.5 10BASE-T1S hardware trigger....936
14.20.6 10BASE-T1S software trigger....937
14.20.7 Measure....939
14.20.8 10BASE-T1S decode results....940
14.21 100BASE-T1 (automotive Ethernet, option R&S MXO5-K560)....942
14.21.1 100BASE-T1 configuration....943
14.21.2 100BASE-T1S filter....944
14.21.3 PPIFormat.PPIFrame.Color100BASE-T1 format configuration....946
14.21.4 100BASE-T1 software trigger....952
14.21.5 Measure....956
14.21.6 100BASE-T1 decode results....956
14.22 1000BASE-T1 (automotive Ethernet, option R&S MXO5-K560)....958
14.22.1 1000BASE-T1 basics....959

14.22.2 1000BASE-T1 configuration....959
14.22.3 1000BASE-T1 filter....961
14.22.4 1000BASE-T1 format configuration....964
14.22.5 1000BASE-T1 software trigger....970
14.22.6 Measure....973
14.22.7 1000BASE-T1 decode results....974
14.23 USB 1.1 (option R&S MXO5-K570)....976
14.23.1 USB protocol basics....976
14.23.2 USB 1.1 configuration....981
14.23.3 USB 1.1 filter....985
14.23.4 USB1.1 format configuration....988
14.23.5 USB 1.1 trigger....994
14.23.6 Measure....997
14.23.7 USB 1.1 decode results....997
14.24 USB 2.0 (option R&S MXO5-K570)....999
14.24.1 About the USB protocol....999
14.24.2 USB 2.0 configuration....1000
14.24.3 USB 2.0 filter....1003
14.24.4 USB 2.0 format configuration....1006
14.24.5 USB 2.0 trigger....1011
14.24.6 Measure....1015
14.24.7 USB 2.0 decode results....1015
15 Logic analysis on digital channels....1018
15.1 Logic configuration....1018
15.1.1 Setup....1019
15.1.2 Bus....1021
15.1.3 Label settings....1022
15.1.4 Skew settings....1023
15.2 Display....1024
15.2.1 Logic bus - decode table....1025
16 Waveform generator (option R&S MXO5-B6)....1026
16.1 Setup of the waveform generator....1026
16.1.1 General settings....1026

16.1.2 Modulation settings 1031
16.1.3 Sweep settings 1033
16.1.4 Arbitrary waveforms 1034
16.2 Synchronize settings 1038
16.3 Configuring the waveform generator 1039
16.3.1 Configuring a function waveform 1039
16.3.2 Configuring a modulation waveform 1039
16.3.3 Configuring a sine sweep waveform 1041
16.3.4 Configuring an arbitrary waveform 1041
17 Network operation 1043
17.1 Connecting the instrument to the network (LAN) 1043
17.1.1 Connecting the instrument to the network 1043
17.1.2 Assigning the IP address 1044
17.1.3 Using host names 1044
17.2 ScopeSync 1045
17.2.1 ScopeSync concept 1045
17.2.2 Using ScopeSync 1049
17.2.3 ScopeSync settings 1053
17.3 Web browser interface (device web) 1060
17.3.1 Settings on the MXO 5 1061
17.3.2 Web browser (device web) 1061
17.4 Remote operation with VNC® client 1066
17.5 Remote control 1066
17.5.1 Remote control interfaces and protocols 1066
17.5.2 Starting and stopping remote control 1069
17.6 Remote control - status reporting system 1070
17.6.1 Hierarchy of status registers 1070
17.6.2 Structure of a SCPI status register 1072
17.6.3 Contents of the status registers 1073
17.6.4 Error queue 1078
17.6.5 Reset values of the status reporting system 1078
18 Remote control commands 1080
18.1 Conventions used in remote command description 1080

18.2 Finding the appropriate command....1081
18.3 Error messages on remote commands....1081
18.4 Frequently used parameters and suffixes....1082
18.4.1 Waveform parameter....1082
18.4.2 Slope parameter....1084
18.4.3 Polarity parameter....1084
18.5 Programming examples....1084
18.5.1 SmartGrid layout with zoom....1084
18.5.2 Creating a mask....1088
18.5.3 Saving screenshots to file....1089
18.5.4 Data transfer in roll mode....1089
18.6 Common commands....1090
18.7 General remote settings....1093
18.8 Instrument setup....1096
18.8.1 System....1096
18.8.2 Network drive mapping....1098
18.8.3 SmartGrid....1100
18.8.4 Toolbar....1107
18.8.5 Annotations....1108
18.8.6 Appearance....1120
18.8.7 Display....1126
18.8.8 Save/Recall....1129
18.8.9 Preset....1131
18.8.10 Maintenance....1132
18.9 Acquisition and waveform setup....1134
18.9.1 Starting and stopping acquisition....1134
18.9.2 Horizontal setup....1135
18.9.3 Roll mode....1136
18.9.4 Acquisition setup....1138
18.9.5 Vertical setup....1144
18.9.6 Channel groups: linked settings....1150
18.9.7 Probes....1152
18.9.8 Fast segmentation....1177

18.9.9 High definition mode....1177
18.9.10 Waveform data export....1178
18.9.11 Reference clock....1179
18.10 Trigger....1179
18.10.1 Common trigger settings....1180
18.10.2 Trigger sequence....1183
18.10.3 Edge trigger....1185
18.10.4 Glitch trigger....1187
18.10.5 Width trigger....1188
18.10.6 Runt trigger....1190
18.10.7 Window trigger....1193
18.10.8 Timeout trigger....1196
18.10.9 Interval trigger....1197
18.10.10 Slew rate trigger....1198
18.10.11 Setup & Hold....1201
18.10.12 State trigger....1203
18.10.13 Pattern trigger....1204
18.10.14 Trigger mode, holdoff....1206
18.10.15 Hysteresis....1210
18.10.16 Channel filter....1212
18.10.17 Actions on trigger....1213
18.10.18 Zone trigger....1216
18.11 Signal configuration....1223
18.11.1 Signals....1223
18.11.2 Reference levels....1227
18.11.3 Gate....1232
18.11.4 Timing reference....1235
18.12 Waveform analysis....1245
18.12.1 Zoom....1246
18.12.2 Mathematics....1256
18.12.3 History....1260
18.12.4 Reference waveforms....1264
18.12.5 Waveform histograms....1272

18.13 Data management 1277
18.13.1 Instrument settings 1277
18.13.2 Saveset 1284
18.13.3 Generator saveset 1284
18.13.4 Waveform data: export to file 1285
18.13.5 Histogram data: export to file 1289
18.13.6 Sessions 1291
18.13.7 Results 1292
18.13.8 Screenshots 1294
18.13.9 Data transfer to remote computer 1298
18.14 Automatic measurements 1308
18.14.1 General settings 1308
18.14.2 Settings for amplitude/time measurements 1313
18.14.3 Settings for histogram measurements 1317
18.14.4 Settings for jitter measurements 1318
18.14.5 Default settings for eye measurements 1321
18.14.6 Settings for eye measurements 1323
18.14.7 Settings for protocol measurements 1327
18.14.8 Results 1329
18.14.9 Statistics 1333
18.14.10 Tracks 1334
18.14.11 Histograms on measurement results 1337
18.14.12 Limit checks 1339
18.15 Cursor measurements 1347
18.15.1 Cursor setup 1347
18.15.2 Cursor results 1356
18.15.3 Peak search using cursors 1358
18.15.4 Cursor appearance 1360
18.16 Spectrum analysis 1360
18.16.1 Spectrum setup 1360
18.16.2 Spectrum gate 1370
18.16.3 Peak list 1371
18.16.4 Spectrum with frames and overlap 1376

18.16.5 Data export of spectrum waveforms 1378
18.17 Applications 1378
18.17.1 Mask testing 1378
18.17.2 Frequency response and impedance analyses (options R&S MXO5-K36/K337) 1392
18.17.3 Power analysis (option R&S MXO5-K31) 1418
18.17.4 3-phase power analysis (option R&S MXO5-K333) 1484
18.17.5 Digital voltmeter 1550
18.17.6 XY-plot 1553
18.17.7 Eye analysis (option R&S MXO5-K136) 1555
18.18 Protocols 1563
18.18.1 Configuration settings for all serial protocols 1563
18.18.2 SPI (option R&S MXO5-K510) 1568
18.18.3 QUAD-SPI (option R&S MXO5-K510) 1603
18.18.4 OCTO-SPI (option R&S MXO5-K510) 1635
18.18.5 I²C (option R&S MXO5-K510) 1666
18.18.6 I3C (option R&S MXO5-K550) 1702
18.18.7 D-PHY (option R&S MXO5-K580) 1735
18.18.8 UART / RS-232 (option R&S MXO5- K510) 1771
18.18.9 NRZ Clocked (option R&S MXO5-K510) 1804
18.18.10 NRZ Unclocked (option R&S MXO5-K510) 1834
18.18.11 Manchester (option R&S MXO5-K510) 1863
18.18.12 8b/10b (option R&S MXO5-K510) 1893
18.18.13 CAN (option R&S MXO5-K520) 1920
18.18.14 LIN (option R&S MXO5-K520) 1968
18.18.15 SENT (option R&S MXO5-K520) 2001
18.18.16 ARINC 429 (option R&S MXO5-K530) 2037
18.18.17 MIL-1553 (option R&S MXO5-K530) 2065
18.18.18 SpaceWire (option R&S MXO5-K530) 2094
18.18.19 SPMI (option R&S MXO5-K550) 2123
18.18.20 RFFE (option R&S MXO5-K550) 2154
18.18.21 10BASE-T1S (option R&S MXO5-K560) 2186
18.18.22 100BASE-T1 (option R&S MXO5-K560) 2219
18.18.23 1000BASE-T1 (option R&S MXO5-K560) 2250

18.18.24 USB 1.1 (option R&S MXO5-K570)... 2282
18.18.25 USB 2.0 (option R&S MXO5-K570)... 2313
18.19 Logic analysis on digital channels... 2347
18.19.1 Digital channels... 2347
18.19.2 Logic configuration... 2351
18.19.3 Digital resolution... 2359
18.19.4 Export of digital data... 2360
18.20 Waveform generator (option R&S MXO5-B6)... 2360
18.20.1 Waveform generator setup... 2360
18.20.2 Synchronize settings... 2378
18.21 ScopeSync... 2380
18.22 Status reporting... 2385
18.22.1 General commands... 2386
18.22.2 STATus:OPERation register... 2386
18.22.3 STATus:QUEStionable registers... 2388
18.22.4 Reading out the CONDition part... 2390
18.22.5 Reading out the EVENt part... 2390
18.22.6 Controlling the ENABle part... 2391
18.22.7 Controlling the negative transition part... 2392
18.22.8 Controlling the positive transition part... 2392
18.22.9 Other status commands... 2393
18.22.10 Programming tips and examples... 2394
18.23 Deprecated commands... 2396
18.23.1 Base instrument... 2396
18.23.2 Applications... 2397
18.23.3 Serial protocols... 2398
19 Maintenance and support... 2409
19.1 Cleaning... 2409
19.2 Changing fuses... 2409
19.3 Contacting customer support... 2410
19.4 Information for technical support... 2410
19.5 Data security... 2411
19.6 Reporting cybersecurity issues... 2411

19.7 Transporting..... 2411
19.8 Storage.....2412
19.9 Disposal..... 2412

List of commands..... 2413

1 Safety and regulatory information

The product documentation helps you to use the product safely and efficiently.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In Section 1.1, "Safety instructions", on page 25. The same information is provided in many languages in printed format. The printed "Safety Instructions" for "Oscilloscopes and Accessories" are delivered with the instrument and the probes.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

Intended use

The MXO 5 product is designed for measurements on circuits that are only indirectly connected to the mains or not connected at all. It is not rated for any measurement category.

The product is intended for the development, production and verification of electronic components and devices in industrial, administrative, and laboratory environments. Use the product only for its designated purpose. Observe the operating conditions and performance limits stated in the specifications document.

Target audience

The target audience of this document includes developers and technicians, administrators and maintenance personnel using oscilloscopes and probes. The required skills and experience of the users depend on the test setup and application of the product.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the specifications document, manuals and the printed "Safety Instructions" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer support.

Using the product requires skilled persons or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the specifications document. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer support at https://www.rohde-schwarz.com/support.

In these safety instructions, the term "product" covers instruments (oscilloscopes), probes and their accessories.

Lifting and carrying the instrument

Check the specifications document for the maximum weight of the instrument. A single person can only carry a maximum of 18 kg safely depending on age, gender and physical condition. If your instrument is heavier than 18 kg, do not move or carry it by yourself.

Use the instrument handles to move or carry the instrument. Do not use the mounted accessories instead of the handles. Accessories are not designed to carry the weight of the instrument.

To move the instrument safely, you can use lifting or transporting equipment such as lift trucks and forklifts. Follow the instructions provided by the equipment manufacturer.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing.

If Rohde & Schwarz provides accessories designed for outdoor use of your product, e.g. a protective cover, you can use the product outdoors.

You can operate the product up to an altitude of 2000 m above sea level. If a higher altitude is permissible, the value is provided in the specifications document. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the specifications document.

Setting up the product

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

Connecting the product

Before connecting the interfaces or measuring inputs of the product to other products or electrical circuits, make sure that the other products or electrical circuits provide special protection against electric shock. This protection principle is referred to as SELV (safety extra-low voltage) and is based on a low voltage level and increased insulation. Exceptions are indicated by a measurement category on the product and given in the specifications document.

Connecting to power and grounding

The mains power supply input of the instrument complies with overvoltage category II. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such as electric shock, fire, personal injury or even death.

Take the following measures for your safety:

- Do not use an isolating transformer to connect the instrument to the mains power supply.
- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- If a product has an exchangeable fuse, its type and characteristics are indicated next to the fuse holder. Before changing the fuse, switch off the product and disconnect it from the power source. How to change the fuse is described in the product documentation.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.
- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- If you connect the product to an external power supply, use the one delivered with the product or recommended in the product documentation. The external power supply must conform to the country-specific regulations.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.
- Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.

Performing measurements

Take the following measures for your safety:

- To ascertain a voltage-free state, use an appropriate voltage tester. Any measurement setup including an oscilloscope is not suitable for this purpose.
- The maximum input voltage on channel inputs and the external trigger input must not exceed the value specified in the specifications document.
- Observe all voltage and current ratings of the instrument, the probes, and the accessories. Exceeding the allowed voltages can lead to an electric shock.
  Limits and ratings are marked on the products and listed in the specifications documents.
  Consider that the rated voltage depends on the frequency. The voltage limitation curves or values are provided in the specifications document.
- Never cause any short circuits when measuring sources with high output currents.
- Use only probes and accessories that comply with the measurement category (CAT) of your measurement task. If the product is rated for any measurement category, the permitted category is indicated on the product and in the specifications document. If you use other than Rohde & Schwarz accessories, make sure that they are suitable for the instrument and the measurement task.
- Set the correct attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.
- When working with high voltages and current probes, observe the additional operating conditions specified in these safety instructions.
- The probe pins are extremely pointed and can easily penetrate clothes and the skin. Handle the probe pins with great care. To exchange a probe pin, use tweezers or pliers to avoid injuries. When transporting the accessories, always use the box supplied with the probe.
- Prevent the probe from receiving mechanical shock. Avoid putting excessive strain on the probe cable or exposing it to sharp bends. Touching a broken cable during measurements can cause injuries.
- Set up all probe connections to the instrument before applying power.

Working with hazardous voltages

Voltages higher than 30 V RMS, or 42 V peak, or 60 V DC are regarded as hazardous contact voltages. Direct contact with them can cause serious injuries.

Make sure that only electrically skilled persons use the products for measurements on hazardous contact voltages. These working conditions require special education and experience to perceive risks and to avoid hazards which electricity can create.

When working with hazardous contact voltages, use protective measures to preclude direct contact with the measurement setup:

- Do not touch exposed connections and components when power is applied.
- Switch off the test circuit while connecting and disconnecting probe leads.
- Use only insulated voltage probes, test leads and adapters.
- Make sure that the input leads fulfill the safety requirements for your measurement.

The delivered input leads might have a jacket wear indicator that indicates a worn jacket by different jacket color. In this case, do not use the input lead. Replace it with a new one.

- When connecting to the DUT, keep your fingers behind finger guard. Remove jewelry, watches, and other metallic objects. Only use 4 mm safety banana plugs.

Using optical isolated probe systems

Optical isolated probes are classified as class 1 laser product. Class 1 lasers are safe under all conditions of normal use. The product fully contains the beam of a higher-class laser. Take the following measures for your safety:

- To avoid exposure to the laser beam, never remove any covers from the probe head or probe receiver, and never disassemble the product.
- Check the product before using to ensure that it is undamaged. If you have dropped the product or exposed it to excessive mechanical stress, always check the product. Do not use the product if any component is damaged.
- Send the product to service regularly.

Optical isolated probes measure differential voltages. The test circuit can have a different potential. The common mode voltage between the potentials of the DUT and the oscilloscope can be much higher than the differential voltage and is not measured by the probe. To avoid the risk of electrical shock, use protective measures:

- Always de-energize the test circuit before installing or removing the tip module.
- Never exceed the differential voltage rating.
- When measuring on a test circuit with high common mode voltage, use a tripod to hold the probe head.
- Keep the probe head and the tip cable away from circuits with different potential to prevent arc flash caused by a different potential.

Working with current probes


When working with current probes, you can measure high-frequency currents or currents that contain high-frequency components.

- Switch off the test circuit while connecting the probe.
- Do not attach the clamp to bare unisolated conductors. To avoid injury from a short circuit, measure at a location on an insulated wire where the insulation is sufficient for the circuit voltage.
- Connect the probe only to the secondary side of a breaker. With this measure, you can avoid injury if a short circuit occurs.
- The following effects can cause burns and fire or damage to the measurement site:
  - Eddy current loss can cause heating of the sensor head.
  - Dielectric heating can cause heating of cord insulation and other materials.
- When measuring current that includes a high-frequency component, consider the derating characteristics of the probe. Do not measure any current that exceeds the rated current.
- Using the probes with high frequencies or strong magnetic fields may cause the device to become abnormally hot, resulting in fire, equipment damage, or burns.

Measurement categories

IEC 61010-2-030 defines measurement categories that rate instruments on their ability to resist short transient overvoltages that occur in addition to the working voltage. Use the measurement setup only in electrical environments for which they are rated.

- 0 - Instruments without rated measurement category
  For measurements performed on circuits not directly connected to mains, for example, electronics, circuits powered by batteries, and specially protected secondary circuits. This measurement category is also known as CAT I.
- CAT II:
  For measurements performed on circuits directly connected to the low-voltage installation by a standard socket outlet, for example, household appliances and portable tools.
- CAT III:
  For measurements performed in the building installation, such as junction boxes, circuit breakers, distribution boards, and equipment with permanent connection to the fixed installation.
- CAT IV:
  For measurements performed at the source of the low-voltage installation, such as electricity meters and primary overcurrent protection devices.

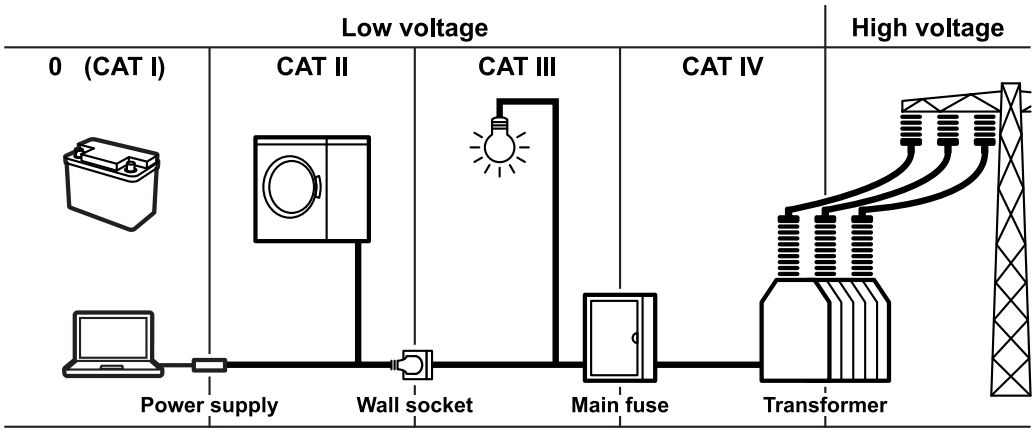

Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

Meaning of safety labels

Safety labels on the product and its accessories warn against potential hazards.

	Potential hazard Read the product documentation to avoid personal injury or product damage.

	Electrical hazard Indicates live parts. Risk of electric shock, fire, personal injury or even death.

	Protective conductor terminal Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.

1.2 Labels on the product

Labels on the casing inform about:

- Personal safety, see "Meaning of safety labels" on page 30
- Product and environment safety, see Table 1-1
- Identification of the product

Table 1-1: Labels regarding product and environment safety

	Chassis grounding terminal
	Take care when handling electrostatic sensitive devices.
	Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its life. For more information, see "Disposing of electrical and electronic equipment" on page 2412.

1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

1.4 CE declaration of conformity

The CE declaration of conformity of the instrument is delivered with the product. Keep the document for further reference.

The current version of this CE declaration of conformity is available at:

www.rohde-schwarz.com/company-documents/mxo5/

1.5 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at www.rohde-schwarz.com/key-documents, e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations

1.6 Korea certification class A



이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

2 Preface

2.1 Key features

The MXO 5 series oscilloscope is a next generation oscilloscope with 4 or 8 channels, evolved for more challenges.

Using the MXO 5, you can:

- Acquire, process and display signals with unrivaled speed.
- Detect signal details, faults and anomalies instantly.
- Increase your statistical confidence.

The MXO 5 series oscilloscopes utilize advanced technologies:

- Fastest update rate of up to 4.5 million waveforms/s thanks to MXO-EP ASIC
- 12 bit ADC at all sample rates, and 18 bit vertical resolution in HD mode
- Bandwidth up to 2 GHz, and up to 5 Gsample/s sample rate
- Deep standard memory: 500 Mpoints per channel
- High-precision digital trigger with best-in-class trigger jitter, also available in HD mode
- Nearly zero blind time: up to 99% real-time signal activity capture
- Lowest measurement noise
- Eco-friendly design: low power consumption, automatic power-up capability, scarcely audible

Features and applications help achieve fast and accurate results, for example:

- Segmented memory & history mode to analyze previous acquisitions
- Superior spectrum analysis with 45 000 FFT/s, which allows capture of spurious spectrum events
  4 simultaneous spectrums with independent time and frequency control
- Integrated arbitrary waveform generator
- Logic analysis with 16 digital channels
- Dual-path serial protocol analysis
- Frequency response analysis (Bode plots)
- Large high-resolution touchscreen, R&S SmartGrid, configurable toolbar, intuitive navigation
- Wide selection of compatible probes

2.2 Documentation overview

This section provides an overview of the MXO 5 user documentation.

2.2.1 Manuals and instrument help

You find the manuals on the product page at:

www.rohde-schwarz.com/manual/mxo5

Getting started manual

Introduces the MXO 5 and describes how to set up the product. A printed English version is included in the delivery.

User manual and help

Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance and instrument interfaces. Includes the contents of the getting started manual.

The contents of the user manual are available as help in the MXO 5. The help offers quick, context-sensitive access to the complete information on the instrument and its firmware.

The user manual is available for download or immediate display on the internet.

Safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

Instrument security procedures manual

Deals with security issues when working with the MXO 5 in secure areas. It is available for download on the internet.

Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance. The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS, https://gloris.rohde-schwarz.com).

2.2.2 Specifications and product brochure

The specifications document, also known as the data sheet, contains the technical specifications of the MXO 5. It also lists the firmware applications and their order numbers, and optional accessories. The product brochure provides an overview of the instrument and deals with the specific characteristics.

www.rohde-schwarz.com/brochure-datasheet/mxo5

2.2.3 Calibration certificate

The document is available on https://gloris.rohde-schwarz.com/calcert. You need the device ID of your instrument, which you can find on a label on the rear panel.

2.2.4 Release notes, open source acknowledgment

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation. The open source acknowledgment document provides verbatim license texts of the used open source software. It can also be read directly on the instrument.

www.rohde-schwarz.com/firmware/mxo5

2.2.5 Application notes, application cards, videos

Various documents and videos deal with special applications or background information on particular topics.

R&S®MXO 5 - Mediacenter

R&S®MXO 5 - Applications

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: https://www.youtube.com/@Rohde-Schwarz

2.3 Options described in this document

In addition to the base unit, the following options are described in this documentation:

Type	Designation	Order No.
R&S MXO5-B1	MSO	1802.0660.02
R&S MXO5-B6	Waveform and pattern generator	1802.0753.02
R&S MXO5-K12	Basic jitter analysis	1802.1295.02
R&S MXO5-K31	Power analysis	1802.0799.02
R&S MXO5-K36	Frequency response analysis	1802.1943.02
R&S MXO5-K136	Eye analysis	1801.8621.02
R&S MXO5-K333	3-phase power analysis	1801.8650.02
R&S MXO5-K337	Impedance analysis	
R&S MXO5-K500	Bus analysis	1802.1308.02
R&S MXO5-K510	Triggering and decoding low speed serial buses: I2C, SPI, UART/RS-232/RS-422/RS-485, QUAD-SPI, NRZ clocked, NRZ unclocked, Manchester	1802.1243.02

Type	Designation	Order No.
R&S MXO5-K520	Triggering and decoding automotive protocols: CAN, CAN FD, CAN XL, LIN, SENT	1802.1920.02
R&S MXO5-K530	Decoding aerospace protocols: ARINC 429, MIL-STD-1553, SpaceWire	1802.1266.02
R&S MXO5-K550	Decoding MIPI® low speed protocols: I3C, RFFE, SPMI	1802.1266.02
R&S MXO5-K560	Decoding automotive Ethernet protocols: 10BASE-T1S, 100BASE-T1, 1000BASE-T1	1802.1250.02
R&S MXO5-K570	Decoding automotive USB protocols: USB 1.1, USB 2.0	1801.9028.02

3 Getting Started

3.1 Preparing for use

Here, you can find basic information about setting up the instrument for the first time or when changing the operating site.

3.1.1 Lifting and carrying

See: "Lifting and carrying the instrument" on page 26.

3.1.2 Unpacking and checking

1. Unpack the product carefully.
2. Retain the original packing material. Use it when transporting or shipping the product later.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

   If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

3.1.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the specifications document.

For safety information, see "Choosing the operating site" on page 26.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the specifications document.

- Class B equipment is suitable for use in:
  - Residential environments
  - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments.

If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

3.1.4 Setting up the product

When setting up the instrument, follow the safety instructions:

- "Setting up the product" on page 26
- "Intended use" on page 25


3.1.4.1 Placing the product on a bench top

For standalone operation, place the instrument on a horizontal bench with even, flat surface. The instrument can be used in horizontal position, standing on its feet, or with the support feet on the bottom extended.

To place the product on a bench top

1. Place the product on a stable, flat and level surface.
2. **CAUTION!** The top surface of the product is too small for stacking. If you stack another product on top of the product, the stack can fall over and cause injury.

   If you want to save space, mount several products in a rack.

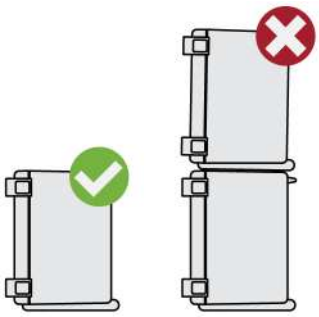

3. **CAUTION!** Foldable feet can collapse. For safety information, see "Setting up the product" on page 26.

   Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath.
4. **NOTICE!** Overheating can damage the product.

   Prevent overheating as follows:

   - Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.
   - Do not place the product next to heat-generating equipment such as radiators or other products.

3.1.4.2 Mounting the product on a monitor arm

You can mount the oscilloscope to a monitor arm with VESA mount.

1. **NOTICE!** Only use a VESA mount compatible to FDMI MIS-D, up to 14 kg with M4x10 screws and standard 100 mm × 100 mm pattern.
   Order the VESA adapter R&S MXO5-Z7. For the order number, see the specifications document.
2. Mount the adapter to the rear panel of the oscilloscope. Follow the assembly instructions provided with the adapter.
3. Mount the VESA mount of the monitor arm to the VESA adapter.

3.1.4.3 Mounting the product in a rack

To prepare the rack

1. Observe the requirements and instructions in "Setting up the product" on page 26.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product.
   Design and implement an efficient ventilation concept for the rack.

To mount the oscilloscope in a rack

1. Use a rackmount kit to prepare the instrument for rack mounting.
   a) Order the rackmount kit designed for your oscilloscope. For the order number, see specifications document.
   b) Mount the rackmount kit. Follow the assembly instructions provided with the rackmount kit.
2. Lift the product to shelf height. If the rack is high, use a safe climbing aid when placing on upper shelves.
3. Grip the product by the handles. Slide the product onto the shelf until the rack brackets fit closely to the rack.
4. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the product at the rack.

To unmount the product from a rack

1. Loosen the screws at the rack brackets.
2. Remove the product from the rack.
3. If placing the product on a bench top again, unmount the rackmount kit from the product. Follow the instructions provided with the rackmount kit.

3.1.5 Considerations for test setup

Observe safety instructions, see "Performing measurements" on page 28.

Cable selection and electromagnetic interference (EMI)

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, for example, double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.

Measuring accessories

Use only probes and measuring accessories that comply with IEC 61010-031.

Signal input and output levels

Information on signal levels is provided in the specifications document. Keep the signal levels within the specified ranges to avoid damage to the product and connected devices.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

► **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

a) Use a wrist strap and cord to connect yourself to ground.
b) Use a conductive floor mat and heel strap combination.

During operation, if the firmware observes a serious unexpected disturbance (e.g. due to ESD), it resets some hardware components and initiates a new alignment to ensure proper instrument functioning. Then it restores the user settings to the state before the disturbance.

3.1.6 Connecting to power

For safety information, see "Connecting to power and grounding" on page 27.

The MXO 5 can be used with different AC power voltages and adapts itself automatically to it.

The nominal ranges are indicated on a label near the power connector on the instrument and in the specifications document.

1. Plug the AC power cable into the AC power connector on the rear panel of the product. Only use the AC power cable that is delivered with the product.
2. Plug the AC power cable into a power outlet with ground contact.

If the voltage dips at the AC power connector (according to EN 61326-2-1 6.4.101), a restart of the MXO 5 can happen. All instrument settings are restored after the restart.

3.1.7 Connecting to LAN

For remote operation of the instrument using a computer, you need a local area network (LAN) connection.

Network environment

Before connecting the product to a LAN, consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

To connect a LAN cable

► Connect an RJ-45 cable to the LAN connector on the rear panel, and to the LAN.

For supported LAN interfaces, refer to the specifications document.

By default, the MXO 5 is configured to use DHCP. Configuration of a static IP address is not required.

3.1.8 Connecting external devices

3.1.8.1 Connecting USB devices

You can use USB connectors to connect various devices:

- Connect a keyboard and a mouse for operation and data entry, alternatively or in addition to the touchscreen functionality.
- Connect USB flash drives to save screenshots, and to transfer files to and from the instrument without a network connection.

► Connect the USB device to any of the USB connectors.

You can connect or disconnect USB devices during operation of the instrument.

3.1.8.2 Connecting external monitors

Using the HDMI™ or DisplayPort™ connector on the side panel, you can connect one external monitor or projector to the oscilloscope. The display connectors do *not* support hot swapping, the monitor is recognized by the instrument during the boot process.

1. **NOTICE!** Missing ground contact can damage the oscilloscope.
   Ensure that the monitor and the oscilloscope are connected to a ground contact.
   See also: Section 3.1.6, "Connecting to power", on page 40.
2. **NOTICE!** Use only standard-compliant monitor cables.
   Connect the monitor or projector to a display connector.
3. Switch on the oscilloscope. See also "To switch on the product" on page 42.
   The oscilloscope recognizes the external monitor. During the running session, you can disconnect the monitor and connect it again.

If the monitor provides touch functionality, an additional connection can be required, e.g. a USB connection. Refer to the documentation of your monitor.

The oscilloscope outputs a Full HD image with 1920x1080 pixel. If the screen resolution of the monitor is set higher than the instrument's resolution, the application window uses a 1920x1080 area of the monitor display. For full-screen display, adjust the monitor's screen resolution.

3.1.9 Switching on or off

The instrument is switched on or off with the power switch and the [Power] key. The [Power] key is located in the bottom left corner of the front panel. The power switch is located at the rear panel of the instrument.

Table 3-1: Overview of power states

Status	LED	Power switch
Off	(unlighted)	[0] (off)
Standby	yellow	[I] (on)
Ready	green	[I] (on)

To switch on the product

The product is off but connected to power.

1. Set the switch on the power supply to position [I].
   The power key on the front panel lights up.
2. Press the [Power] key on the front panel.

The instrument performs a system check, boots the operating system, and then starts the MXO 5 firmware.
The [Power] key turns green and the illuminated keys on the front panel light up.
If the previous session was terminated regularly, the oscilloscope uses the last settings.

Before you start measurements, be sure to comply with the warm-up phase specified in the specifications document.

To shut down the product

The product is in the ready state.

► Press the [Power] key.

All current settings are saved, and the software shuts down. The [Power] key turns yellow. The standby power supplies only the power switch circuits.

The "Power" icon in the "Menu" shuts down only the firmware application. To shut down the instrument completely, use the [Power] key.

Remote command for firmware shutdown: `SYSTem:EXIT` on page 1097.

To disconnect from power

The product is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.

   Set the switch on the power supply to position [0].

   The LED of the [Power] key is switched off.

2. Disconnect the product from the power source.

3.2 Instrument tour

This section describes the front, rear and side view of the instrument including all function keys and connectors.

3.2.1 Front view

This section provides an overview of the MXO 5 front panel.



Figure 3-1: Front view of MXO 5 with 8 input channels

1 = Display
2 = Keys and controls
3 = Analog input channels
4 = Connectors for demo signal output
5 = Connectors for logic probe (R&S MXO5-B1 Mixed Signal Option)
6 = [Power] key
7 = USB connectors
8 = Connectors for probe compensation

Analog channel inputs

The MXO 5 has 4 or 8 channel inputs to connect the input signals, depending on the model.

You can connect probes with Rohde & Schwarz probe interface or BNC connectors. The input impedance is selectable, the values are 50 Ω and 1 MΩ.

The maximum input voltage on channel inputs is:

- 400 V (V_p) and 300 V (RMS) at 1 MΩ input impedance, derates at 20 dB/decade to 5 V (RMS) above 250 kHz.
- 30 V (V_p) and 5 V (RMS) at 50 Ω input impedance

Demo
The pins are intended for demonstration purposes.

Logic Channels
Two connectors for logical probes with 8 digital channels each (D0 to D7 and D8 to D15). Using logic channels requires the Mixed Signal Option R&S MXO5-B1.

The maximum input voltage at 100 kΩ input impedance is ±40 V (Vp) and 32 V (RMS), derates to 7 V (RMS) with 20 dB/decade at frequencies above 25 MHz. The maximum input frequency for a signal with the minimum input voltage swing and normal hysteresis setting is 400 MHz.

USB
Three USB 3.1 gen1 interfaces of type A. They are used to connect a mouse or keyboard, a USB flash drive for storing and reloading instrument settings and measurement data, and to update the firmware.

Probe Comp.
Probe compensation terminal to adjust passive probes to the input channel.

⎍ Square-wave signal for probe compensation.

⊥ Ground connector for probes.

For details, see the specifications document.

3.2.2 Side view

On the side of the instrument, you can find the computer connectors and the ground connector for probes.

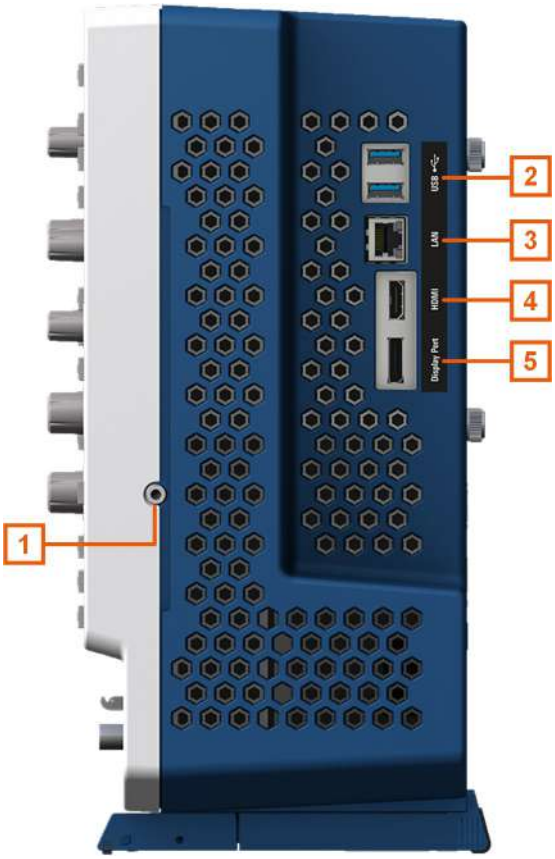


Figure 3-2: Side view of MXO 5

1 = Grounding terminal
2 = USB connector
3 = LAN connector
4 = HDMI display output
5 = DisplayPort connector

Grounding terminal ⏚
4 mm banana jack to connect ground of DUT and test fixtures, and wrist strap.

USB
Two USB 3.1 gen1 interfaces of type A.

LAN
8-pin RJ-45 connector used to connect the instrument to a Local Area Network (LAN). It supports 10/100/1000BASE-T, LXI compliant.

HDMI
HDMI Version 2.0 connector for an external monitor or projector. The monitor shows the complete content of the instrument's screen.

DisplayPort
DisplayPort connector for an external monitor or projector. It supports DisplayPort++ version 1.3.

3.2.3 Rear view

On the rear panel of the MXO 5, you find more connectors and the power supply switch.



Figure 3-3: Rear panel view of MXO 5

USB Device = USB connector, type B
Trigger Out = BNC connector for trigger out signal
Ref In 10MHz = BNC connector for incoming reference signal
Ref Out 10MHz = BNC connector for outgoing reference signal
Gen1, Gen 2 = BNC connectors for optional function generator output (option R&S MXO5-B6)
Trigger In = BNC connector for external trigger input
1 = Kensington lock slot to secure the instrument against theft
2 = AC power supply connector and mains power switch
3 = Exchangeable solid state disk (SSD, option R&S MXO5-B19)

USB Device
USB 3.1 gen1 interface of type B (device USB), to be used for remote control of the instrument.

Trigger Out
BNC output that can function as pass/fail output or trigger output.

Ref In 10 MHz
BNC input connector for 10 MHz reference frequency signals.

Ref Out 10 MHz
BNC output for 10 MHz frequency reference. Can be switched between internal and external reference.

See also: "Menu" > "Horizontal" > "Setup" tab > "Ref clock"

Gen1, Gen 2: Function generator
BNC output of the function generator, requires option R&S MXO5-B6.

Trigger In
The external trigger input is a BNC connector that is used to control the measurement by an external signal. The trigger level can be set from -5 V to 5 V.

For the external trigger input, the maximum input voltage is 400 V (V_p) and 300 V (RMS) at 1 MΩ input impedance.

Transient overvoltages on all input connectors must not exceed 400 V (V_p).

AC power supply connector and mains power switch
The instrument supports a wide range power supply. It automatically adjusts to the correct range for the applied voltage. There is no line voltage selector.

The AC mains power switch disconnects the instrument from the AC power line.

When you power up the instrument, be sure to comply with the warm-up phase specified in the specifications document before you start measurements.

3.2.4 Keys and controls

For an overview of the front panel keys, see Section 3.2.1, "Front view", on page 43.

3.2.4.1 Power key

The [Power] key is located on the lower left corner of the front panel. It starts up and shuts down the instrument's software.

The light of the key shows the instrument state, see Section 3.1.9, "Switching on or off", on page 42.

Remote command: `SYSTem:SHUTdown` on page 1098.

3.2.4.2 Trigger controls

The keys and knob in the Trigger functional block adjust the trigger and start or stop acquisition.



[Run / Stop]
Starts and stops the continuous acquisition.

The [Run / Stop] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

Remote command:
`RUN` on page 1134
`STOP` on page 1134

[Single]
Starts a defined number of acquisitions.

The [Single] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

Press the key again to stop a running acquisition. To set the number of acquisitions, select "Menu" > "Acquisition", and set "N-single/avg count".

Remote command:
`SINGle` on page 1134

[Level]
The rotary knob sets the trigger level for all trigger types that require one level. For trigger types with two levels, the knob sets the lower level. Turn clockwise to move up the trigger level. Press the knob to set the trigger level to 50% of the signal amplitude.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181

[Auto Norm]
Toggles the trigger mode between "Auto" and "Normal". The current setting is shown on the trigger label.

Auto	The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. The time interval depends on the timebase.

Norm The instrument acquires a waveform only if a trigger occurs. The "Norm" indicator turns green.

Remote command:
TRIGger:MODE on page 1206

[Source]
Toggles the trigger source: C1, C2, C3, etc. The key lights up in the color of the selected channel.

[Slope]
Toggles the trigger slope or trigger polarity, dependent on the trigger type. The current setting is shown on the trigger label.

[Zone]
Opens the configuration for the zone trigger. A zone trigger combines the trigger condition with the intersection or non-intersection of one or more zones or masks.

Remote command:
TRIGger:ZONE:EXPRession[:DEFine] on page 1217

3.2.4.3 Horizontal controls

The rotary knobs in the Horizontal functional block adjust the horizontal parameters. These settings are effective for all channel waveforms. In addition, a [Zoom] key is available.



[Position]
The rotary knob changes the horizontal position of the waveforms. Turn clockwise to move the waveforms to the right. To set the value to zero, press the knob. The current value is shown in the "Horizontal" label above the diagram.

The horizontal position defines the zero point of the diagram. It is the time distance to the reference point, which marks the rescaling center of the horizontal scale.

In a spectrum diagram, the knob changes the center frequency.

Remote command:
TIMebase:HORizontal:POSition on page 1136
CALCulate:SPECtrum<sp>:FREQuency:CENTer on page 1363

[Scale]
The rotary knob adjusts the horizontal scale for all signals. The horizontal scale is also known as timebase.

Turn clockwise to stretch the waveforms. Doing so, the scale value *time/div* decreases. Press the knob to toggle between coarse and fine scale adjustment.

In a spectrum diagram, the knob changes the span.

Remote command:
`TIMebase:SCALe` on page 1135
`CALCulate:SPECtrum<sp>:FREQuency:SPAN` on page 1364

[Zoom]
Activates a zoom and supports the zoom setup.

If no zoom is on, the first press opens a zoom diagram for the active diagram. If at least one zoom is shown, the keypress opens the "Zoom" dialog. If only one zoom is defined, the next press closes the dialog and removes the zoom. If several zooms are defined and the dialog is open, the key toggles the zooms.

3.2.4.4 Vertical controls

The keys and knobs in the Vertical functional block select a signal and adjust the vertical scale and position of the selected signal.



Figure 3-4: Vertical controls of MXO 5 with 4 input channels



Figure 3-5: Vertical controls of MXO 5 with 8 input channels

[C<n>]
Turns on and selects a channel. If the channel is active, the key lights up in the corresponding channel color.

The effect of the keypress depends on state of the channel:

- If channel is off: turns on the channel and selects it.
- If the channel is on and in focus (selected): opens the corresponding channel dialog.
- If the channel is on, but not in focus (not selected): selects the channel waveform.
- If the channel is selected, and the dialog is open: turns off the channel, and closes the dialog.

The vertical rotary knobs are focused on the selected waveform. They are illuminated in the color of the selected waveform.

Remote command:
`CHANnel<ch>:STATe` on page 1144

[Position]
The vertical [Position] knob changes the vertical offset or the position of the selected waveform. You can select whether the knob changes the offset or the position in the "Menu" > "Settings" > "Frontpanel" > "Knobs" dialog.

- Position indicates the vertical location in divisions. The horizontal axis and the selected waveform are moved vertically.

- Offset sets the vertical center of the selected channel to the offset value. The current offset value is shown in the channel icon, and on the vertical scale at the waveform marker.

If the selected waveform is a math or reference waveform, serial bus, or logic channel, the knob changes its vertical position.

The knob lights up in the color of the selected waveform. To set the value to zero, press the knob.

Remote command:
`CHANnel<ch>:POSition` on page 1146
`CHANnel<ch>:OFFSet` on page 1145

[Scale]
Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The [Scale] knob lights up in the color of the selected waveform.

Turn the knob clockwise to stretch the waveform. Doing so, the scale value V/div decreases. Press the knob to toggle between fine and coarse adjustment. For analog waveforms, the scale value is shown in the signal icon.

To get the maximum resolution of the waveform amplitude, make sure that the waveforms cover most of the diagram's height.

Remote command:
`CHANnel<ch>:SCALe` on page 1144
`CALCulate:MATH<m>:VERTical:SCALe[:VALue]` on page 1258
`REFCurve<rc>:SCALe` on page 1268

[Gen]
Available only for MXO 5 with 4 input channels.

Opens the "Waveform Generator" dialog, if option R&S MXO5-B6 is installed.

The waveform generator can generate various function and arbitrary waveforms, sweeps, and parallel patterns. For detailed characteristics, refer to the specifications document.

[Logic]
Available only for MXO 5 with 4 input channels.

Opens the "Logic" dialog to configure and enable the logic buses L1 to L4. A logic bus (or parallel bus) has up to 16 logic (digital) channels. If logic buses are active, pressing the key toggles these buses.

The key lights up if at least one logic bus is enabled.

[Bus]
Available only for MXO 5 with 4 input channels.

Opens and closes the "Protocol" tab in the "Apps" dialog, where you can select the required serial protocol and proceed to the protocol setup. The key lights up if the decoding of a serial bus is active.

[FFT]
Available only for MXO 5 with 4 input channels.

Opens and closes the "Spectrum" dialog. The key lights up if a spectrum is active.

[Ref]
Opens the "Reference" dialog box, where you can configure and display reference waveforms. Press the key repeatedly to switch the reference waveform.

If a reference waveform is selected, the vertical rotary knobs are illuminated in white or light gray (default colors), depending on the selected waveform.

[Math]
Opens the "Math" dialog, where you can configure the calculation of mathematical waveforms using various mathematic operations on other waveforms. Press the key repeatedly to toggle the selected math waveform. If no math waveform is active, the key closes the dialog.

If a math waveform is selected, the vertical rotary knobs are illuminated in blue (default color).

3.2.4.5 Analysis keys

The controls in the bottom functional block have various functions.



[Multiuse]
The multiuse knob changes the element that is in focus. It lights up when a function is active on the knob.

- If a numeric entry field in a dialog has the focus: turn to increase or decrease the value. Press the knob to toggle fine and coarse increment.
- If a cursor set has the focus: press to toggle the cursor line, and turn to adjust its position.
- If a zoom has the focus: press to toggle the edges of the zoom, and turn to adjust its position.
- If a gate has the focus: press to toggle the complete gate and the edges of the gate, and turn to adjust its position.
- To change the intensity, press the [Intensity] key and turn the knob.

[Intensity]
Adjusts the intensity of the waveforms on the screen: Press the [Intensity] key and turn the [Multiuse] knob. The current value is shown in the input box in the upper right corner of the screen.

[Cursor]
Starts a cursor measurement: sets vertical and horizontal cursors in the active diagram, and displays results of the cursor measurement. If cursors are already set, the keypress opens the "Cursor" dialog, where you can adjust the settings. The next keypress closes the dialog.

Cursors are markers which are placed at points of interest on a waveform. The instrument measures the cursor positions and delta values between parallel cursors.

If cursors are already set but not in focus, pressing the key sets the focus on the cursor set. You can adjust the cursor lines using the [Multiuse] knob.

If a cursor set has the focus, the key opens the "Cursor" dialog. If one cursor set is "On", the next press closes the dialog. If several cursors are "On", pressing the key toggles the cursor sets.

[Measure]
Opens the "Measurement" dialog, where you can set up various measurements. If the dialog is open, pressing the key closes the dialog.

[History]
Activates the history and opens the history player. The next keypress closes the player. The history shows stored acquisitions that were acquired before the current one. The key is illuminated as long as the history is active.

[HD]
Activates the high definition mode and opens the HD settings dialog.

If the dialog is open, pressing the key closes the dialog. If the dialog is closed, the key disables the high definition mode. The key is illuminated as long as the HD mode is active.

[Touch Lock]
Locks the touchscreen to prevent unintended use. When the touchscreen is off, the key is illuminated. Press again to unlock the touchscreen.

Camera
Performs the action that is assigned to the key in "Settings" > "Front panel" > "Hard-keys". By default, the key saves a screenshot of the waveform display.

[Preset]
Resets the instrument to a predefined state and starts the continuous acquisition. All measurements, mask tests, zoom, and most individual settings are deleted, and all channels except for channel 1 are disabled.

You can define preset configurations and save them to a file. The [Preset] key can be configured to set either factory defaults or a user-defined preset configuration.

[Autoset]
The instrument analyzes the enabled channel signals, and adjusts appropriate horizontal, vertical, and trigger settings to display stable waveforms.

In particular, the horizontal scale is set to a common value for all active channels, record length and sample rate are set to automatic detection. Vertical scale and offset are set for each channel individually. Probe settings, channel coupling and impedance remain unchanged. The trigger source is set to the signal with the lowest frequency, and the trigger type to positive edge. The trigger level is adjusted, and the trigger position is set to the reference point. Measurements, math and spectrum waveforms are kept. Undo and redo of an autoset is possible.

[Clear]
Deletes all measurement results including long-term measurement and statistics, all waveforms, and the history.

Apps
Opens the "Apps" dialog, where you can start an application, serial protocol or another analysis function.


3.2.5 Checking the functionality

To check if the instrument works correctly, you can use the probe compensation signal and check the displayed signal.


1. Perform a self-alignment of the instrument:
   a) Warm up the instrument. The minimum warm-up time is indicated in the specifications document.
   b) Remove all probes from the input connectors.
   c) Open the "Menu", and select "Settings" > "Maintenance" > "Alignment".
   d) Tap "Start Alignment". Wait until the alignment has finished successfully.
2. Connect the probe's ground connector to the ground pin ⊥, and the tip to the square wave pin ⎍.
3. Press the [Preset] key.
4. Connect the probe to the input connector [C1].

The instrument recognizes the probe, and a signal is displayed in the diagram.

5. Tap the signal icon of C1 to open the vertical settings.
6. In the "Vertical" > "Setup" dialog, adjust the following:
   - "Scale" = 600 mV/div
   - "Offset" = 900 mV

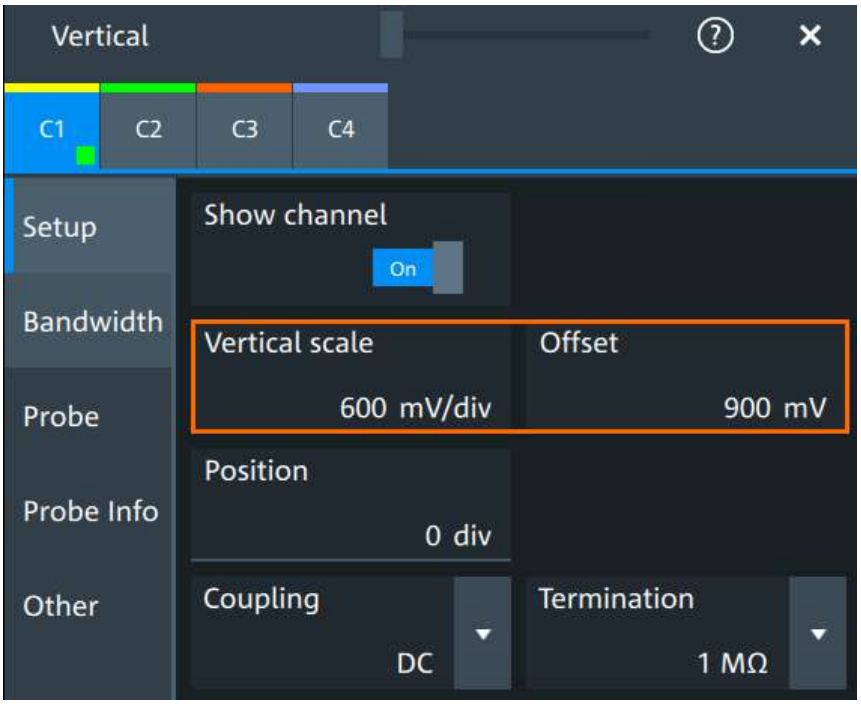

7. Turn the horizontal [Scale] knob to set the horizontal scale to 1 ms/div.
8. Press the [Source] key to set the trigger source to C1. The color of the key indicates the selected channel.
9. Turn the [Level] knob to set the trigger level to 300 mV.
10. Check the rectangle signal on the screen. The displayed signal should have an amplitude of about 3.3 V, which covers 5.5 divisions.

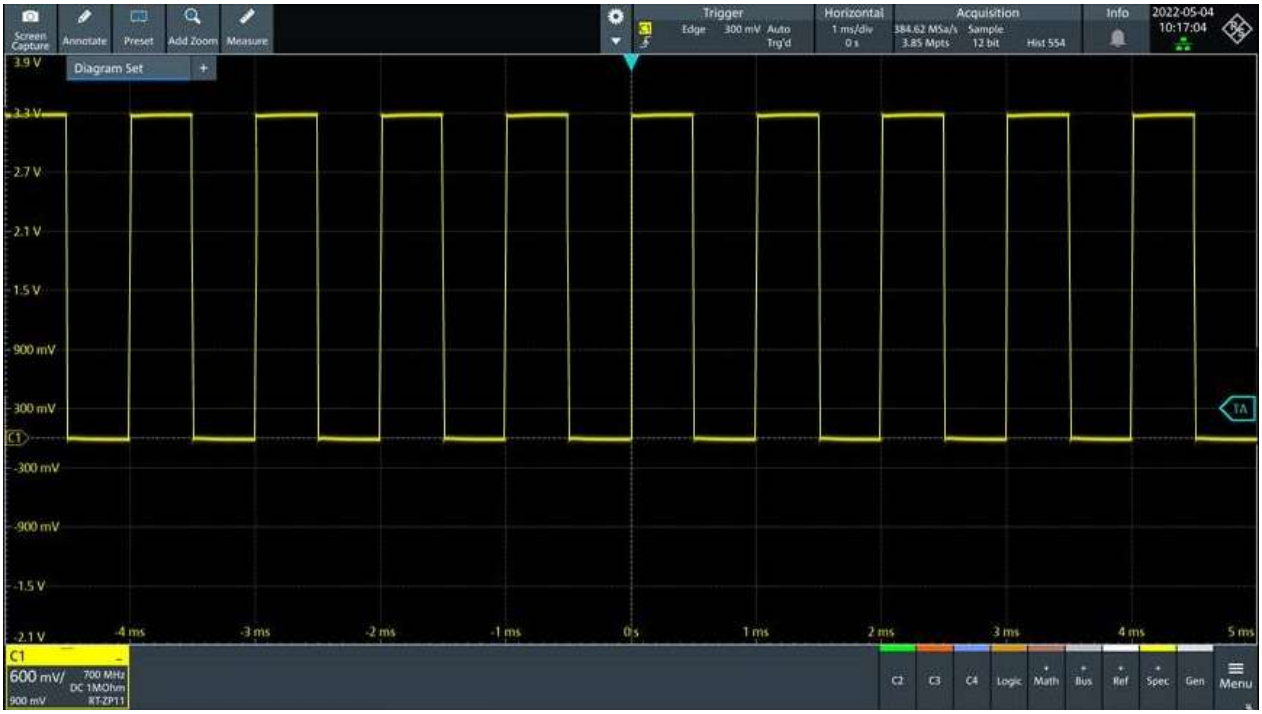

11. Repeat steps 4 to 10 for all other channels. Make sure to adjust the vertical settings for the connected channel, and also to set the trigger source to the connected channel.

4 Operating the instrument

There are three ways to operate the MXO 5.

Manual operation

Use the touchscreen, keys and rotary knobs, or an optional mouse and/or keyboard. The principles of manual operation are explained in this section.

Remote control

Create programs to automatize repeating settings, tests, and measurements. The instrument is connected to a computer that runs the program.

This way of operation is described in: Section 18, "Remote control commands", on page 1080.

Remote operation

For remote monitoring and operation of the instrument, a VNC® server is installed on the MXO 5. You need a LAN connection to the computer, and a VNC client or web browser to connect to the instrument.

For details, refer to Section 17, "Network operation", on page 1043.

4.1 Means of manual interaction

The MXO 5 provides the following means of manual interaction, which you can use alternatively or complementary:

- Touchscreen:
  Using the touchscreen allows for direct interaction with the instrument. Use your finger to place waveforms on the screen, mark areas for zoom, set parameters in dialogs, enter data, and much more. The control elements and actions on the screen are based on common concepts, and you easily become familiar with the user interface.

  Tapping the screen works like clicking mouse buttons:
  - Tap = click: Selects a waveform or parameter, or provokes an action.
  - Double-tap = double-click: Has the same effect as touch and hold, it opens the on-screen keyboard or keypad, or a specific editor if available.

  Use gestures to scale the waveform:
  - Spread or pinch two fingers horizontally to change the time scale.
  - Spread or pinch two fingers vertically to change the vertical scale of the active waveform.
- Function keys and rotary knobs:
  The front panel provides frequently used functions and controls to operate the instrument. Use knobs to set levels and scales, and keys to initiate actions and to open dialogs.

- Optional mouse and/or keyboard
  These devices work in the normal manner.

4.2 Touchscreen display

4.2.1 Information on the display

The GUI shows the waveforms and measurement results, and also information and everything that you need to control the measurements. All waveform-related GUI elements are explained in this section. An overview of control elements - like dialog, toolbar - is given in Section 4.2.2, "Control elements on the GUI", on page 62.

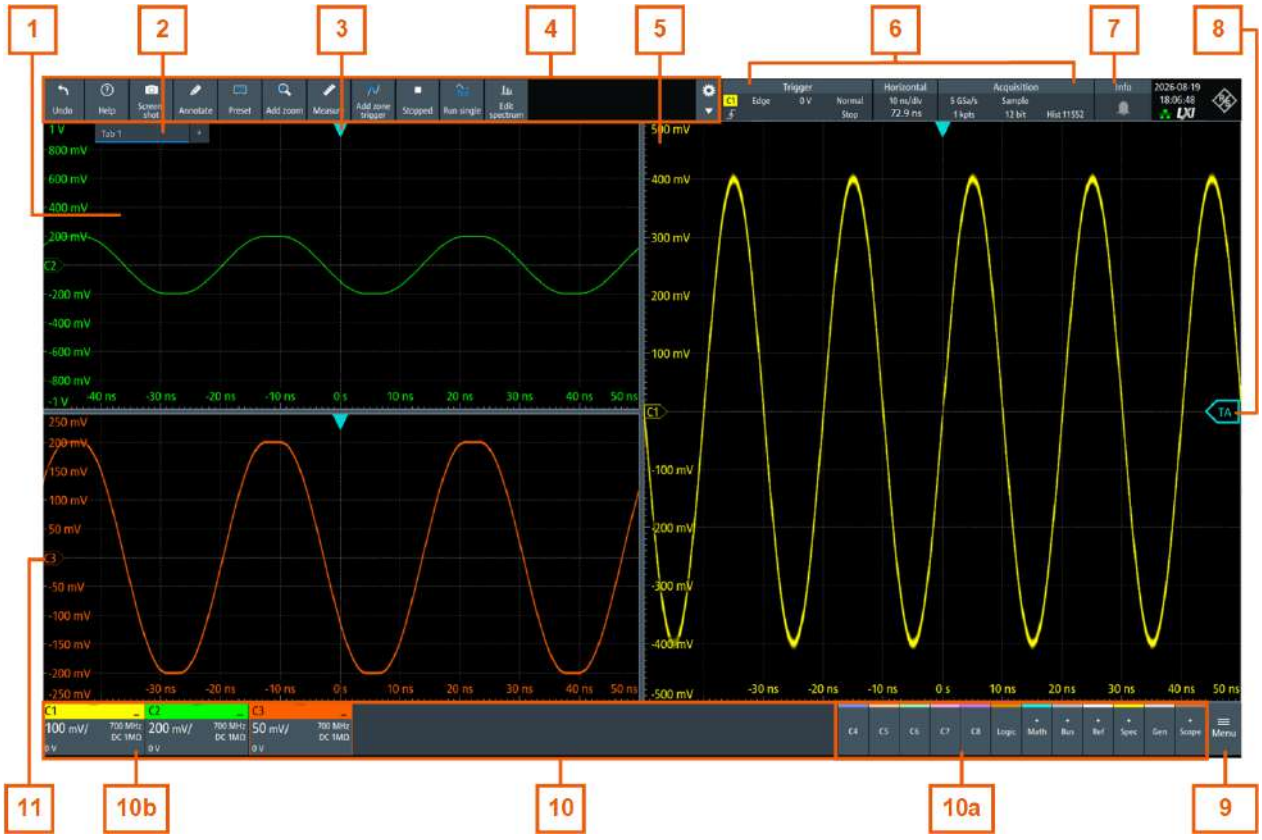


Figure 4-1: Information in the graphical user interface

1 = Diagram
2 = Layout
3 = Trigger position
4 = Toolbar
5 = Grid
6 = Trigger, horizontal and acquisition label
7 = Info
8 = Trigger level

9 = Menu
10 = Signal bar with signal activators (10a), and active waveforms (10b)
11 = Waveform markers indicate the position of the waveforms. The vertical scale value of this position is the offset value.

Diagram
A diagram shows one or more waveforms: analog and digital channels, reference and math waveforms, tracks, and serial buses. Zoom details, spectrum and other special waveforms are shown in separate diagrams. One diagram can hold up to 16 analog waveforms, i.e. analog channels, reference and math waveforms, and tracks.

To arrange the diagrams on the screen, the Rohde & Schwarz SmartGrid function helps you to find the target place simply and quickly. For details, see Section 4.7, "Rohde & Schwarz SmartGrid", on page 74. You can also adjust the diagram size by dragging the diagram border.

Layout tab
A layout is a set of diagrams and result tables. You can configure up to four layout tabs using the SmartGrid functionality. For details, see Section 4.7, "Rohde & Schwarz SmartGrid", on page 74.

Grid
The grid shows the vertical and horizontal divisions. The division lines are labeled with the correspondent values. The grid labels have the color of the waveform to which they belong. If several waveforms are shown in one diagram, the grid has the color of the selected waveform.

Trigger position and trigger level
The blue markers show the horizontal position of the trigger and the vertical trigger level. You can touch and move the trigger markers in the diagram to set the positions. The trigger point is the zero point of the diagram.

The trigger position can be moved outside the diagram.

Trigger
The "Trigger" label shows the main trigger settings. If you tap the label, the corresponding dialog opens.



Figure 4-2: Trigger label

1 = Trigger source
2 = Trigger type
3 = Trigger level
4 = Trigger mode

5 = Trigger state
6 = Trigger type specific settings
7 = Trigger slope

See also: Section 7.1.1, "Trigger information", on page 172.

Horizontal
The "Horizontal" label shows the main timebase settings. If you tap the label, the corresponding dialog opens.




Figure 4-3: Horizontal label

1 = Time scale
2 = Horizontal position

Acquisition
The "Acquisition" label shows the main acquisition settings, and the progress of long acquisitions. If you tap the label, the corresponding dialog opens.



Figure 4-4: Acquisition label

1 = Sample rate (before interpolation)
2 = Record length. A yellow warning icon indicates insufficient memory.
3 = Acquisition mode
4 = Number of acquired waveforms
5 = Resolution. Active high definition mode is indicated by "HD".

Info
The "Info" button on the toolbar points to the status messages and other information. To open the message box, tap the button.

See also: Section 4.13, "Information and notifications", on page 83.

Signal bar
The signal bar summarizes all waveforms as described in Section 4.5, "Signal bar", on page 71.

4.2.2 Control elements on the GUI

The GUI provides everything that you need for control, to analyze waveforms, and to get measurement results. Figure 4-5 shows the control elements at a glance.



Figure 4-5: Control elements on the graphical user interface

1 = Toolbar
2 = Tab in a dialog
3 = Dialog
4 = Result table
5 = Signal bar
6 = Menu

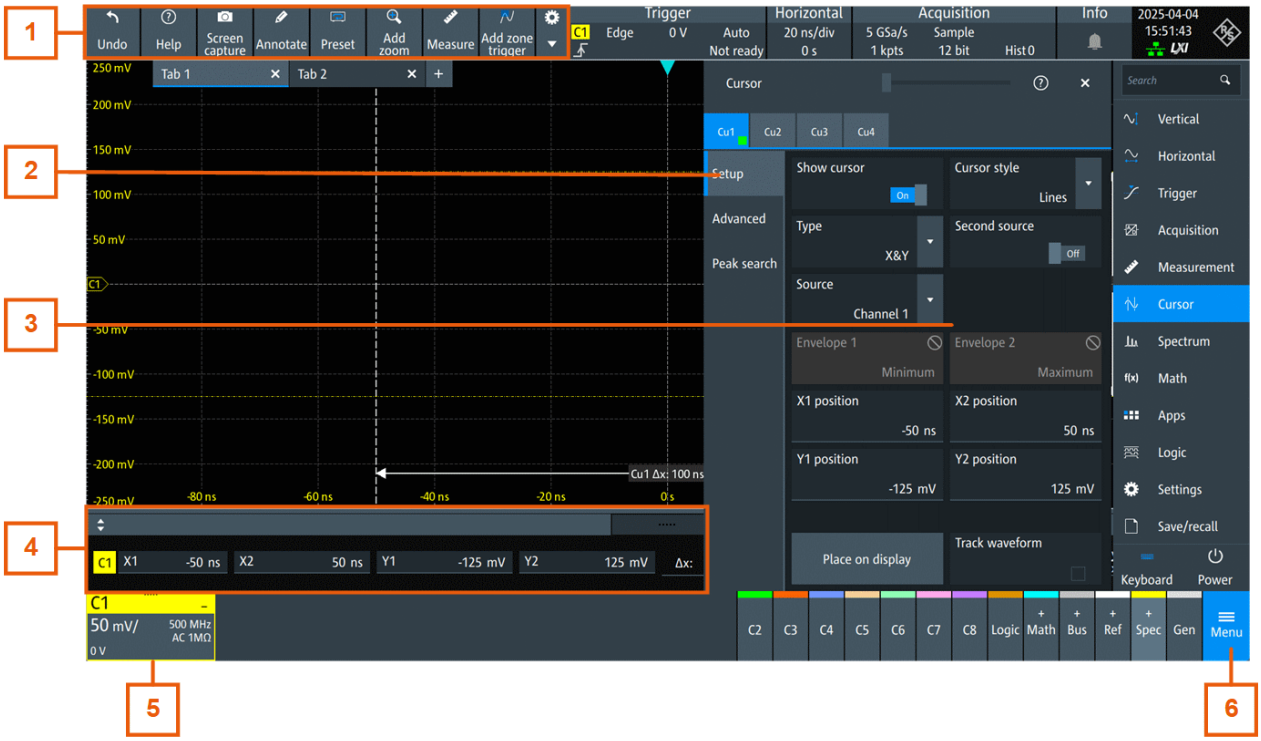


Figure 4-6: Control elements on the graphical user interface

1 = Toolbar
2 = Tab in a dialog
3 = Dialog
4 = Result table
5 = Signal bar
6 = Menu

Toolbar (1)

The icons on the toolbar provide quick and easy access to the most important functionality. For a detailed description, refer to Section 4.4, "Toolbar", on page 66.

If you adjust the settings of an analyzing function, e.g., cursor measurement, the overlay menu is shown instead of the icons. The overlay menu provides the most important settings of the current action. If you need more settings, "Setup" opens the corresponding dialog.

Dialog (2, 3)

The tabs of the dialogs contain all task-oriented settings and operations, and buttons for calling related tabs. The usage of dialogs is described in Section 4.9, "Using dialogs", on page 77.

Result table (4)

If you perform cursor or automatic measurements, the result table shows the results of the action below the diagrams. You can move the result tables to the left or right of the diagrams.


See also: Section 4.11, "Displaying results", on page 80.

Signal bar (5)
The signal bar summarizes all waveforms as described in Section 4.5, "Signal bar", on page 71.

Menu (6)
The menu provides access to the complete functionality of the MXO 5.

At the bottom of the menu, you find the "Keyboard" icon to open the on-screen keyboard. The "Power" icon shuts down the firmware.

At the top of the menu, you can find a search field for a quick access to any parameter you need. A list of all found results is shown on the left side of the menu. Tap the result entry and the dialog containing this parameter opens.

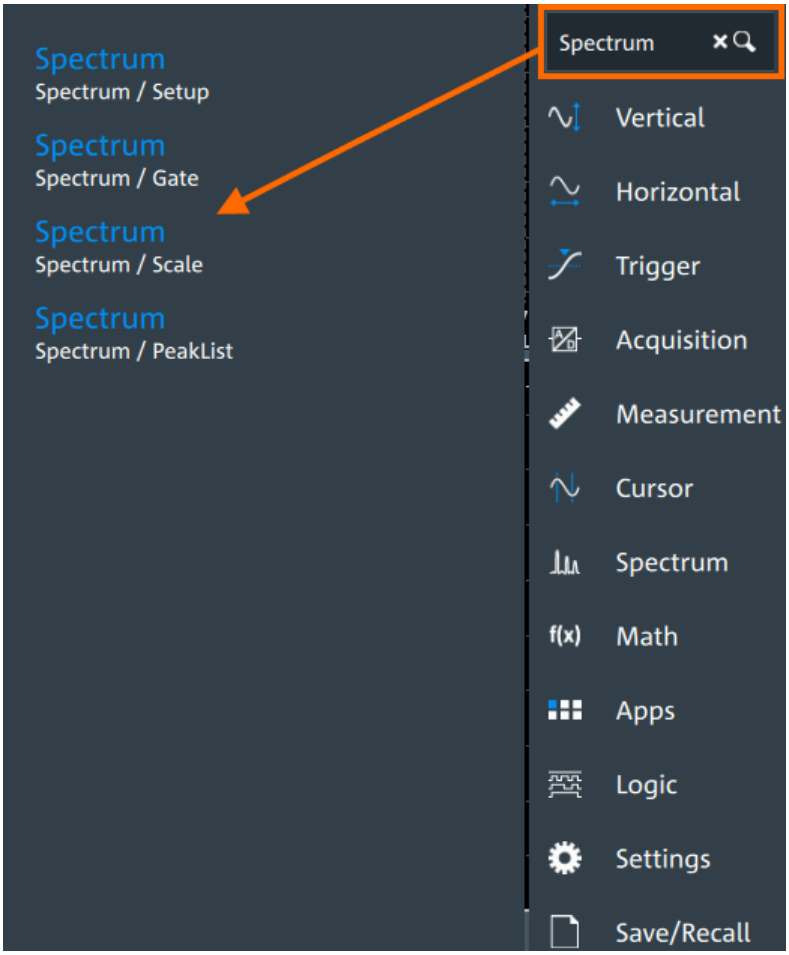


4.3 Applications

The "Apps" dialog provides fast access to all available applications, for example, to serial protocols, frequency response analysis or file browser.

► To open the "Apps" dialog:

- Open "Menu" > "Apps".
- Press the [Apps] key on the front panel.

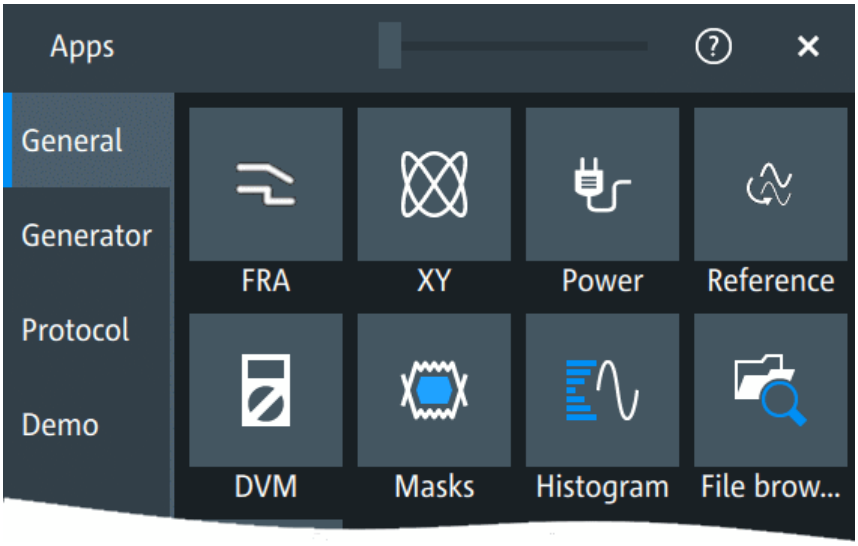

4.4 Toolbar

The toolbar provides direct access to important control and measurement functions.



By default, the toolbar shows the most frequently used functions. You can configure the content of the toolbar, see Section 4.4.2, "Configuring the toolbar", on page 67.

4.4.1 Using the toolbar

Using the toolbar is easy and straightforward.

Some of the toolbar functions are one-click actions. These actions are performed immediately when you tap the icon.

Other toolbar functions are analyzing functions. These actions are interactive actions.

To use analyzing functions (interactive actions)

1. Tap the icon of the function in the toolbar.
2. Check and adjust the settings in the overlay menu.
3. Select the source waveform if needed. For zoom, drag a rectangle, or tap the diagram to define the zoom area.
4. If the overlay menu does not close automatically, tap the icon.

4.4.2 Configuring the toolbar

You can configure the content of the toolbar so that only the required functions are displayed.

The toolbar configuration is part of the user preferences. It is retained when you switch off and on the instrument, and you can save it in the user preferences and user-defined preset.

1. To open the toolbar configuration, tap the icon in the toolbar:

2. Select the required toolbar functions:
   a) In the "Show/Hide tools" section, disable all functions that you do not need.
   b) In the "Show/Hide tools" section, enable the functions that you want to add to the toolbar.
   c) In the "Drag to rearrange tools" section, move the icons to arrange them as required.
3. To empty the toolbar, select "Deslect all".
4. To get the factory configuration of the toolbar, select "Restore default".

A detailed description of the toolbar functions is given in Section 4.4.3, "Toolbar functions", on page 67.

Remote commands:

- `DISPlay:TOOLbar:COUNt?` on page 1107
- `DISPlay:TOOLbar:DESelect` on page 1108
- `DISPlay:TOOLbar:RESTore` on page 1108

4.4.3 Toolbar functions

This section describes all toolbar functions.



You can configure the content of the toolbar, see Section 4.4.2, "Configuring the toolbar", on page 67.

Undo....68
Redo....68
Help....68
Recall....68
Save setup....68
Screenshot....69
Annotate....69
Clear....69
Autoset....69
Preset....69

Run / stop and Run single....69
Force trigger....69
Add zoom....69
Add cursor....69
Measure....69
Add mask....70
Histogram....70
Add gate....70
Edit spectrum....70
Save waveform....70
Add zone trigger....70
Delete....70
File browser....70
DVM....70
XY....70
Get signals....71
Image viewer....71
Gen1, Gen2....71
Ext ref info....71



Undo
Undoes the last setting actions step by step. On a keyboard, you can use the shortcut [Ctrl]+[Z].

Some actions cannot be revoked: locking the touchscreen with [Touch Lock], and saving data.

The undo stack is deleted when reloading settings from file, and during reference waveform actions (save, load and preset with active reference waveform).



Redo
Recovers the undo steps in reverse order. On a keyboard, you can use the shortcut [Ctrl]+[Y].



Help
Enables the context help display. The help window opens when you tap a parameter.

See also: "To display the context help" on page 85.



Recall
Opens a window to select and load instrument settings that were previously stored in a saveset.



Save setup
Saves the current instrument settings in a saveset.

You can reload the saveset using the "Recall" toolbar icon, or using "Menu" >"Save/ recall" > "Recall" tab > "Saveset".

The filename is created according to the autonaming pattern, defined in "Menu" > "Settings" > "Save / recall" > "Autonaming" tab.



Screenshot
Saves a screenshot of the current display using the settings defined in "Menu" >"Save/ recall" > "Save" tab > "Screenshot".



Annotate
Displays drawing tools for marking areas on the diagram, and for adding text. You can also select the color.

See also: Section 4.12, "Adding annotations", on page 81.



Clear
Deletes all measurement results including all waveforms and statistics.

Remote command:
`DISPlay:CLR` on page 1129



Autoset
Performs an autoset. The instrument analyzes the enabled channel signals, and adjusts appropriate horizontal, vertical, and trigger settings to display stable waveforms.

The icon has the same functionality as the corresponding key on the front panel. It is useful when you operate the instrument remotely.



Preset
Resets the instrument to a predefined state and starts the continuous acquisition. All measurements, mask tests, zoom, and most individual settings are deleted, and all channels except for channel 1 are disabled.

The icon has the same functionality as the corresponding key on the front panel. It is useful when you operate the instrument remotely.





Run / stop and Run single
Starts and stops the continuous acquisition, or starts a defined number of acquisition cycles. The icons have the same functionality as the corresponding keys on the front panel. They are useful when you operate the instrument remotely.



Force trigger
Starts an immediate single acquisition. If the acquisition is running in normal mode and no valid trigger occurs, use "Force trigger" to confirm that a signal is available. Then you can use the displayed waveform to determine how to trigger on it.



Add zoom
Adds a zoom diagram, an area of the acquired waveform which is visually enlarged. Click a diagram to create a zoom or draw a rectangle to define the range of the zoom.



Add cursor
Adds a cursor set. Select the cursor type and the source to be measured.

See also: Section 10.1, "Cursor measurements", on page 273.



Measure
Adds one or more measurements to the waveform.

Tap the icon, and select the category and the measurements in the overlay menu. Select the waveform to be measured, and close the overlay menu.



Add mask
Starts the on-screen mask definition and the testing against the defined mask.

Tap the icon and draw a rectangle for the first mask segment. Use the overlay menu to add more segments to the mask, to create more masks, and to edit mask segments on the display. You can also move the mask segments on the screen.



Histogram
Creates a histogram. Tapping the icon opens the overlay menu, where you select the histogram type. Tap a diagram, or drag a rectangle on the diagram to define the histogram window. The histogram for the selected waveform is created.



Add gate
Creates a new gate.

Tap the icon, and then tap the diagram or draw a rectangle to define the limits of the gate. The "Gate" dialog opens, where you can adjust the geate settings and add measurements to use the gate.



Edit spectrum
Edit the existing spectrum settings in the overlay menu.



Save waveform
Saves the selected waveform.



Add zone trigger
Defines a zone trigger, which combines the trigger condition with the intersection or non-intersection of one or more zones.

See also: Section 7.9, "Zone trigger", on page 207.



Delete
Removes waveforms, diagrams, zooms, trigger zones and other elements from the display.

Tap the "Delete" icon. A recycle bin icon marks all objects that can be deleted. Tap this icon to remove an object. Tap the "Delete" icon again to disable the function.



File browser
Opens the file browser dialog.

See: Section 13.10, "File browser dialog", on page 534.



DVM
Starts the digital voltmeter application.

See: Section 12.5, "Digital voltmeter", on page 481.



XY
Starts the XY-plot application.

See: Section 12.6, "XY-plot", on page 484.



Get signals
Imports the active analog channel waveforms from the connected oscilloscope.

See Section 17.2, "ScopeSync", on page 1045.



Image viewer
Starts the screenshot viewer.

See: Section 13.9.3, "Image viewer", on page 534.



Gen1, Gen2
Turns on or off the waveform generator. For better visibility, a gererator icon is darker than the other icons in the toolbar.



Ext ref info
Monitors the status of the external reference clock. The status is green if the active reference clock is an external clock signal connected to the "Ref In 10 MHz" connector.

4.5 Signal bar

The signal bar is the control center for all waveforms. All enabled waveforms are shown on the left side of the signal bar. On the right side of the signal bar, you see the signal activators of inactive waveforms and buses. On the right of the signal bar, you find signal activators for the waveform generator and ScopeSync connections.

When you tap a signal activator, the corresponding dialog opens. to enable the waveform. The signal activators for analog and digital channels and for math waveforms also activate the waveform.

Each waveform is represented by a signal icon. If the waveform is shown in a diagram, the signal icon displays its main settings. If you tap a signal icon, the dialog with settings for this waveform opens. If you tap the "Minimize" icon on the signal icon, the waveform switches from the diagram area to the signal icon: the icon is grayed out. See Section 4.6, "Working with waveforms", on page 72 for a detailed description.

In Figure 4-1, the signal icons C1, C2 and C3 show the main settings, and the waveforms are displayed in diagrams.




Figure 4-7: Signal label of an active analog channel

1 = Vertical scale
2 = Offset
3 = Bandwidth
4 = Coupling and termination

If many waveforms are active, then waveforms of the same type are grouped in one signal icon. Tap the group icon to open the individual signal icons.

4.6 Working with waveforms

The MXO 5 can create and display many waveform types. The most important are:

- Channel waveforms:
  For each analog input channel, one channel waveform is shown.
- Reference waveforms:
  Reference waveforms can be used as reference for comparison and analysis.
- Math waveforms:
  Mathematic waveforms can be created with mathematic operations performed on channel, reference, and other math waveforms.
- Zoom waveforms:
  Zoom waveforms show the details of waveforms.
- Digital waveforms:
  The Mixed Signal Option R&S MXO5-B1 provides 16 digital channels grouped in two logic probes (pods) with 8 channels each.

Waveform handling

The MXO 5 can show and analyze many waveforms. To handle this multitude while keeping track of it, the MXO 5 provides intelligent support:

- The color system helps to distinguish the waveforms.
  The color of the vertical rotary knobs indicates the signal that is focused (selected).
  The color of each waveform can be changed, the color of its signal icon and of the illuminated keys is adjusted to the new color. Alternatively, a color table can be assigned to a waveform.
  Settings: "Menu" > "Settings" > "Appearance" > "Colors" tab.
- You can arrange the waveforms in one diagram, or in separate diagrams. The Rohde & Schwarz SmartGrid function helps to arrange the waveforms.
  See also: "Diagram" on page 61.

Waveform states

Depending on its place on the screen and the effect of settings, a waveform has one of the following states:

- Off
- Active:
  The waveform is shown in a diagram
- Selected:
  One of the active waveforms that has the focus. In each diagram, one of the assigned waveforms is selected – it appears "on top" in the diagram, and the grid labels have the color of the selected waveform.
  The vertical [Position] and the [Scale] knobs are illuminated with the color of the selected waveform.
- Minimized:
  The waveform signal icon is greyed out, and the waveform is removed from the diagram.

To switch a waveform on

A channel waveform is activated when you connect the probe. You can switch it on and off according to your needs.

► Choose one of the following ways:

- Press the channel key.
- Select the signal activator in the signal bar.
- In the "Vertical" dialog box, select the channel. Tap "State" > "On".

The waveform is now active, selected, and is shown in the diagram.

Remote command: `CHANnel<ch>:STATe` on page 1144

To select a waveform

► Choose one of the following ways:

- Tap the waveform in the waveform diagram.
- Tap the signal icon.
- To select a channel, reference, or math waveform, press the corresponding key.

Note: Zoom waveforms in zoom diagrams cannot be selected.

To minimize a waveform

► Tap the "Minimize" icon in the upper right corner of the waveform's signal icon in the signal bar.

The waveform disappears from the diagram and the signal icon turns lighter gray.

► To set the waveform back to its previous diagram immediately, use "Undo".

To arrange a waveform using the SmartGrid

► See Section 4.7, "Rohde & Schwarz SmartGrid", on page 74.

To switch off a waveform

► Do one of the following:

- Tap the "Delete" icon in the toolbar, and then signal icon of the waveform. You can also tap the waveform directly. If several waveforms overlap or lie close together, a selection list is shown.
- To switch off a minimized waveform, tap the "Close" icon in the upper right corner of the signal icon.
- If the waveform is an input channel:
  - Disable "State" in the "Vertical" > "Setup" tab.
  - Select the channel. Then press its channel key twice.

Remote command: `CHANnel<ch>:STATe` on page 1144

4.7 Rohde & Schwarz SmartGrid

The Rohde & Schwarz SmartGrid helps to create and arrange the diagrams on the screen with drag&drop. The diagram layout depends on the position where you drop the signal icon, in relation to an existing diagram.

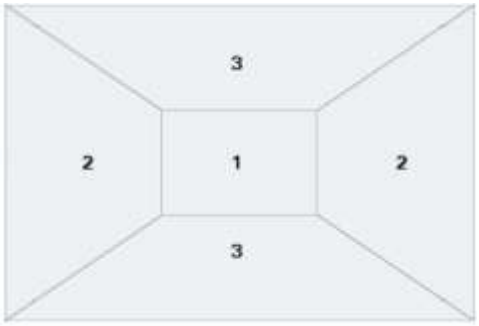


Figure 4-8: SmartGrid positions

1 = In the existing diagram, overlay of signal
2 = New diagram on the left or right
3 = New diagram above or below

The diagram configuration is deleted when you use "Preset" or `*RST`.

For more information on how to set up SmartGrid, see Section 5.3.3, "SmartGrid", on page 105.

To arrange a waveform using SmartGrid

1. Select the layout that you want to rearrange.
2. Drag the signal icon to the diagram area, and move it around.
   The SmartGrid appears and a blue or highlighted area shows where the waveform will be placed.



3. Drop the waveform in the target area.
   The waveform appears in an existing or in a new diagram, and it is selected for further actions.
4. To change the size of a diagram, touch the border between two diagram frames and drag it to the required position.
5. If a diagram is empty, you see a trash can icon in the diagram center. Use the icon to delete the diagram, or drag waveform icons into the diagram.

Remote commands: see Section 18.8.3, "SmartGrid", on page 1100.

Working with layouts

A SmartGrid configuration of one or more diagrams is called "tab" or "layout". You can define several layouts and switch between them.



1 = Tab 1 (layout 1, blue underline indicates that the set is currently displayed)
2 = Tab 2 (layout 2)
3 = Tap to remove a layout
4 = Tap to add a layout


You can add up to four layouts at the upper left corner of the screen:

1. Tap on the ⊞ icon next to the layout.
   A new layout is created.
2. To change the layout name, touch and hold the tab name. The on-screen keyboard opens to enter the new name. Names must be unique.
3. To remove the layout, tap on the ⊠ next to the layouts title.

4.8 Using the selection menu

The selection menu, or comb menu, helps select objects on the screen if several objects are close beside. These objects are, for example, waveforms, zoom edges, gate limits, trigger zones and cursor lines. When you tap or click a point in a diagram, the firmware determines the objects around the point and provides an appropriate menu. Each found object is represented by a comb. The selection menu is created and arranged anew at each finger tap, there are no predefined positions for the objects.


Table 4-1: Selection menu icons

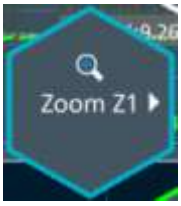Symbol	Description
	Comb
	: indicates that a submenu is available. If more than 6 objects are detected, related objects are grouped to submenus. Tap on the object group to display the submenu
	: indicates that there are more than 6 objects that are available. In this case some of the objects are not directly displayed. Tap on one of the combs and rotate the selection to display all the choices.

To use the selection menu


1. Tap the screen at the point of interest.

   The selection menu provides all objects that were found around the point. In the image below, the objects of "Cursor Cu1" and "Zoom Z1" are grouped in submenus.

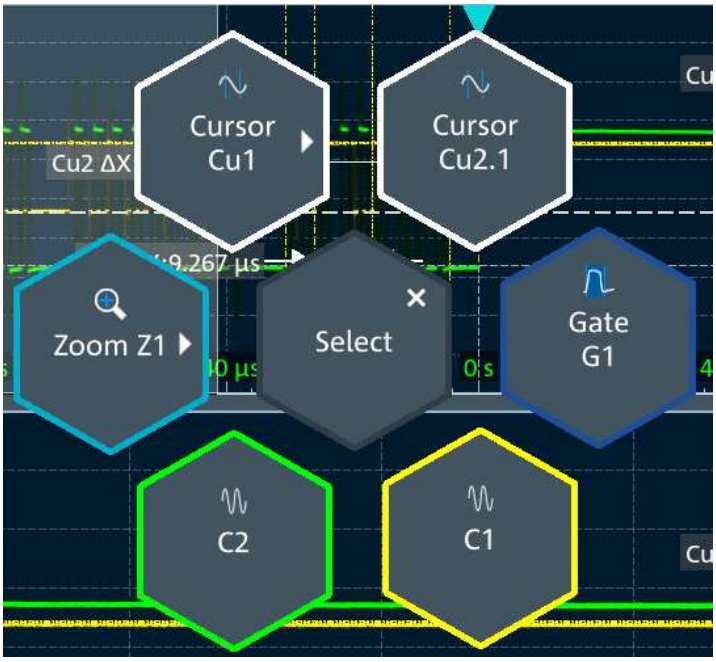

2. Select the comb of the needed object, or object group.
3. If you have selected an object, the object gets the focus. Change its position directly on the screen or with the [Multiuse] knob, or perform other actions depending on the selected object.
4. If you have selected an object group, the submenu opens.

   The image shows the submenu of "Zoom Z1".

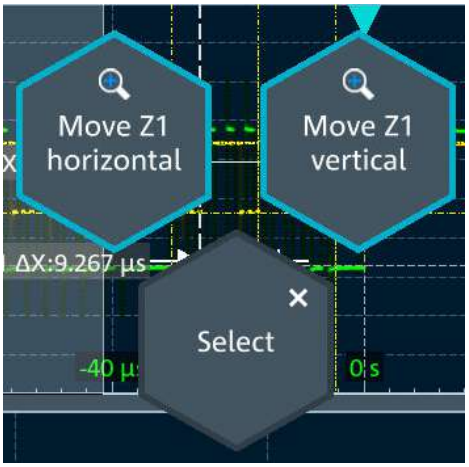

5. In the submenu, select the comb of the needed object.
6. Modify the selected object as required.

4.9 Using dialogs

All functionality is provided in dialogs as known from computer programs. This section provides an overview of the accessing methods and describes how to use the dialogs.

Each dialog has icons in the upper right corner:

	Closes the dialog.
	Opens the help window for the dialog.
	Shift sideways to change the transparency of the dialog.



For direct access to important control and measurement functions, use the toolbar, see Section 4.4, "Toolbar", on page 66.

To open a dialog

► Perform one of the following actions:

- Open the "Menu", and select the menu entry.
- Press the function key on the front panel.
- Double-tap a result to open the corresponding settings dialog.
- To open the "Vertical" dialog of a waveform, tap the signal icon.
- Tap the "Horizontal", "Acquisition" or "Trigger" label to open the corresponding dialog.

To close a dialog

► Tap the "Close" icon in the upper right corner.

4.10 Entering data

To set parameter values and enter other data, you use the various knobs and the on-screen keypad or keyboard.

To use scale, position and level knobs

The instrument has dedicated rotary knobs to set vertical and horizontal positions and scale, and the trigger level.

1. Turn the knob to change the value.
2. Press the knob:
   - [Scale]: to toggle the increment.
   - [Position]: to set to zero.
   - [Level]: to set the trigger level to 50% of the signal.

To enter values with the on-screen keypad

To enter numeric values and units in dialogs, an on-screen keypad is available.

1. Double-tap the entry field. The on-screen keypad opens.



2. Enter a numeric value using the following methods:
   - To use the default value, tap "Reset" (if available).
   - To get the value that was used before the keypad was displayed, tap "CE".
   - To use the minimum or maximum value, tap "Min" or "Max", respectively.
   - To increase the displayed value in fixed steps, tap "Inc".
     To decrease the value in fixed steps, tap "Dec".
   - To enter a user-defined value, tap the numbers and complete the entry by tapping the unit button.
     – "±" changes the sign of the value.
   - To calculate a value, tap the calculator to display the arithmetic operators. Use the displayed fields to calculate your values.




3. To activate caps lock when you enter a text value, double-tap the shift key (up arrow key).

4. Tap ↵ to complete the entry.

To enable the on-screen keyboard

1. Tap "Menu".
2. Tap on "Keyboard" to enable the on-screen keyboard.

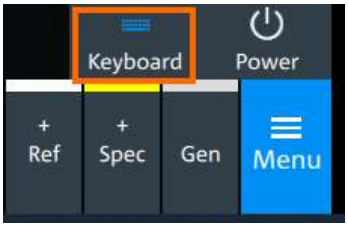

If the on-screen keyboard is enabled, the keyboard icon is colored blue. If it is disabled, the color is white.

To enter data with the on-screen keyboard

1. Double-tap the entry field to open the on-screen keyboard.



2. Enter the text as you would on a normal keyboard.
   - To change the language, tap 🌐. The current language is shown on the blank key.
   - To display numbers and signs, tap &123.
3. Tap ↵ to complete the entry or ⌨ to minimize the keyboard.

4.11 Displaying results

The results of measurements, protocol decoding and others are displayed immediately.


The font size and the number of digits can be adjusted.

To arrange the results on the display

1. Touch and hold the "....." field on top of the results table.



2. Drag on the screen. The SmartGrid indicates where the result table can be placed. Drop the box on one of the buttons. The results are shown at the left the right, or below the diagrams.

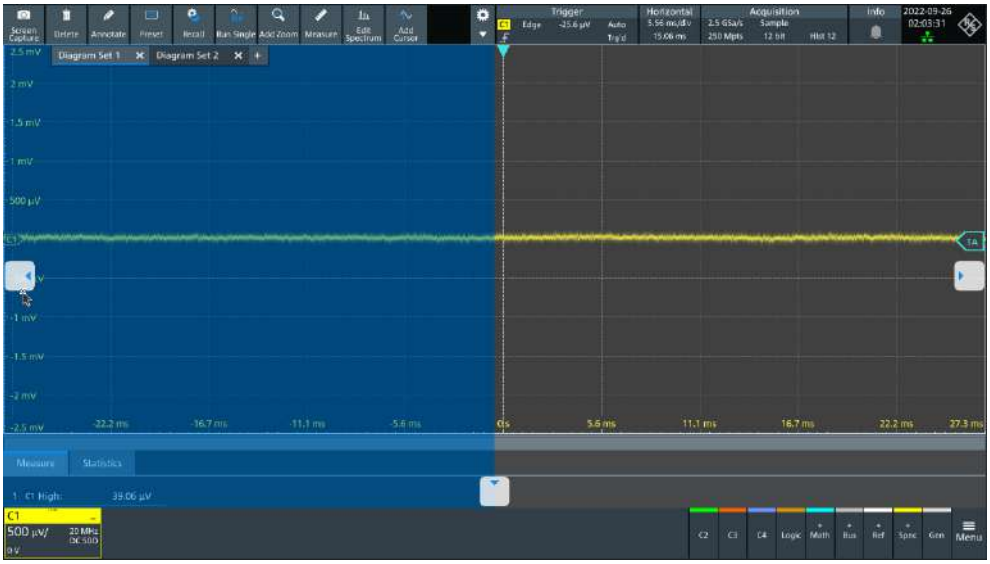

To open the corresponding settings

► Double-tap one of the result values.

The corresponding dialog opens.

To adjust the font size of results

1. Open the "Menu" > "Settings" > "Appearance" dialog.
2. Select the "Measure" tab.
3. Set the "Font size".

4.12 Adding annotations


The MXO 5 provides an easy way to add annotations to the screen. With the toolbar "Annotate" you can add text, forms or even draw.

To add an annotation


1. On the toolbar, tap on the "Annotate" icon.



The annotation overlay menu opens.

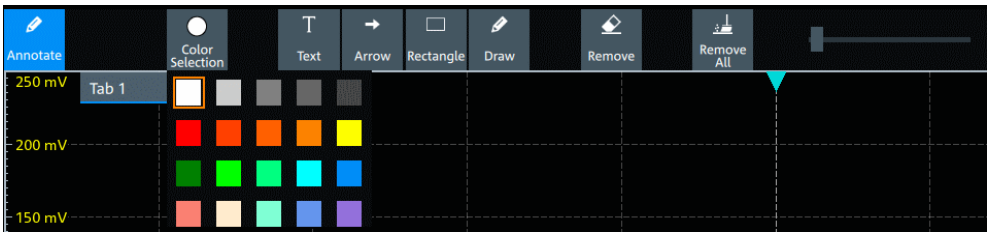

2. Tap "Color selection" and select the color that you want to use for your annotations.
3. Add one or more of the following:
   - One of the predefined forms: "Arrow" or "Rectangle"
   - "Text": adds a text element to the screen and opens on-screen keyboard. You can change the text later, by tapping on an existing annotation and typing in the new text.
   - "Draw": you can draw any form on the screen.

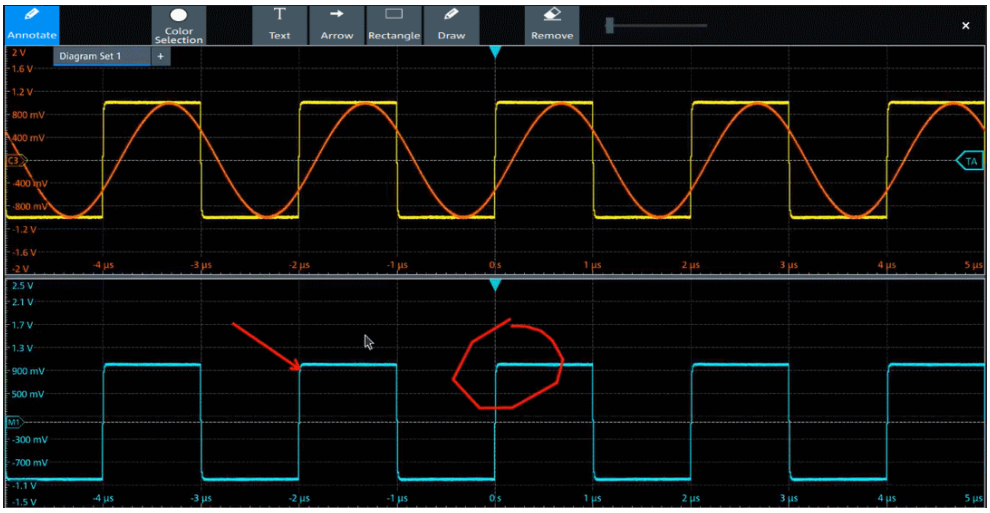

4. To move one of the annotations, tap on it and drag it to the required position.

To remove an annotation

1. In the "Annotate" overlay menu, tap on "Remove".
2. Tap on any existing "Arrow", "Rectangle" or "Text" annotation to remove it.
3. The "Remove" function, acts as an eraser on drawings: it enables you to erase only certain parts of your drawing. Drag your finger over any part of your drawing to erase it.
4. To remove all annotations from the screen, tap on "Remove all".

Remote commands: see Section 18.8.5, "Annotations", on page 1108.


4.13 Information and notifications

The MXO 5 provides various information:

- Instrument information, e.g. connection status, firmware version
- Notifications, e.g. status messages, incompatible settings, insuffcient memory
- Progress information, e.g. for long acquisitions, data saving

Instrument information

In the upper right corner of the screen, you see the Rohde & Schwarz logo, date and time, the symbolic information on LAN connection and the notifications status.



The connection status icon in the upper right corner indicates the status of the LAN connection.

- Green indicates that the instrument is connected to the LAN.
- Red indicates a connection error - mostly the LAN cable is not connected.
- Blinking indicates that the device indicator on the instrument's homepage is switched on, and a device identification command was sent.

► To see the instrument information, select the Rohde & Schwarz logo.

You can find information about the instrument model, bandwidth, network settings, firmware version and operating time.


► To hide the date and time or change the display format, select the date/time display.

Notifications

Notifications are status messages, information on mismatching settings, insufficient memory and similar information. They are displayed for a few seconds and saved.

► To read the notifications, select "Info".

You can delete the list of notifications.

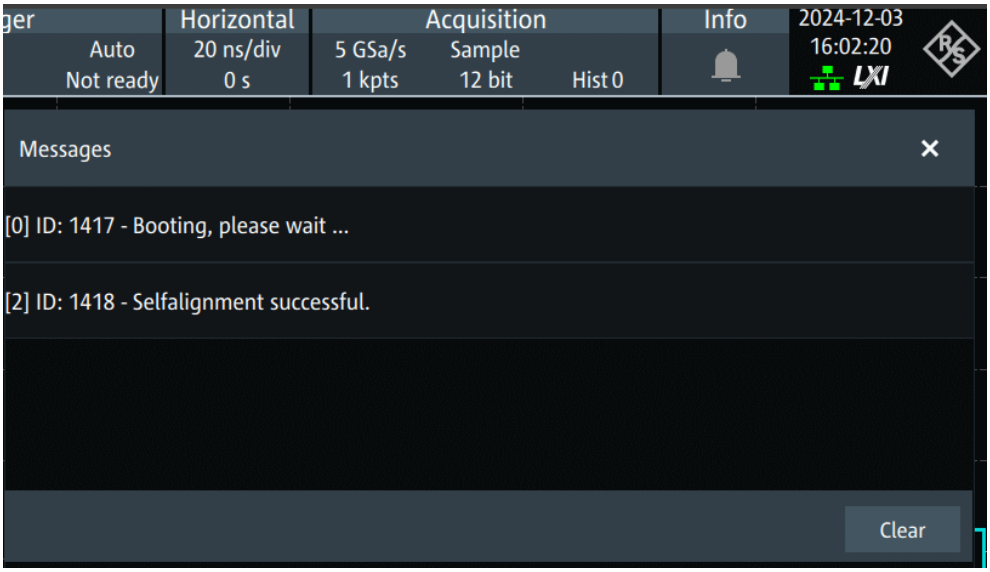

Progress information

If an acquisition, operation or process takes more time until results are displayed, a progress bar or symbol indicates that a process is running.

The progress of saving operations and update or creation of a reference waveform is shown in a progress bar. You can cancel the process. A notification informs about the result.



Figure 4-9: Progress bar for saving waveform data

The progress of running acquisitions is shown in the acquisition label. A circle indicates the state of the current, incomplete acquisition. Progress in roll mode, average mode and single acquisition with N > 1 is indicated by a progress bar and counter.



Figure 4-10: Progress of incomplete long acquisition in average mode, Run single = 5, first acquisition is finished

4.14 Getting user assistance


If you need information on the functionality, you can use the integrated product help. It provides contextual information on a setting or dialog. If the help window is open,

you can browse and search for further information using links, table of contents, and search.

4.14.1 Displaying help

To display the context help

1. Enable the "Help" icon on the toolbar.



2. Tap the parameter for which you need information.

   The "Help" window opens and displays the comprehensive description and the corresponding remote command. You can browse the help for further information.

To open a dialog help

1. Open a dialog.
2. Tap the "Help" icon in the dialog header.
3. Tap a subtab or menu item.

   The help window opens with the dialog help page, where you can select the topics.


4.14.2 Using help

You can find a specific information and navigate the contents by following means:

- Table of contents
- Buttons in the help window title:



  – "Home": Go to the start page
  – "Back", "Forward": Browse the pages that you visited before
- Search with filter:

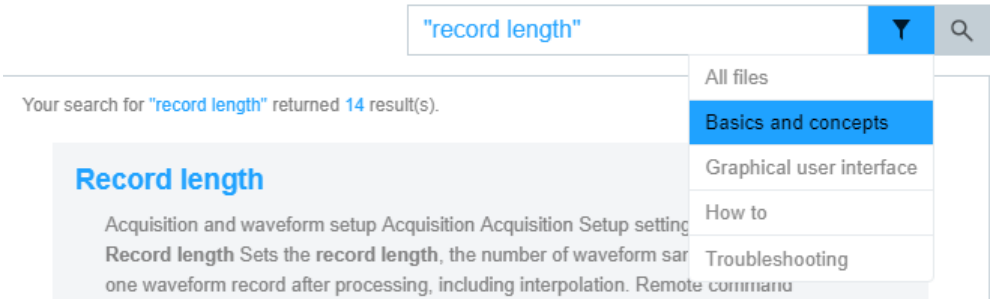


– Enter the word to be found, or a phrase in quotes.
– Tap the filter icon and select the information type.

5 Instrument setup

Access: "Menu" > "Settings".

In the "Settings" dialog, you can adapt various instrument settings to your requirements, such as language, display appearance, and assign functions to some keys.

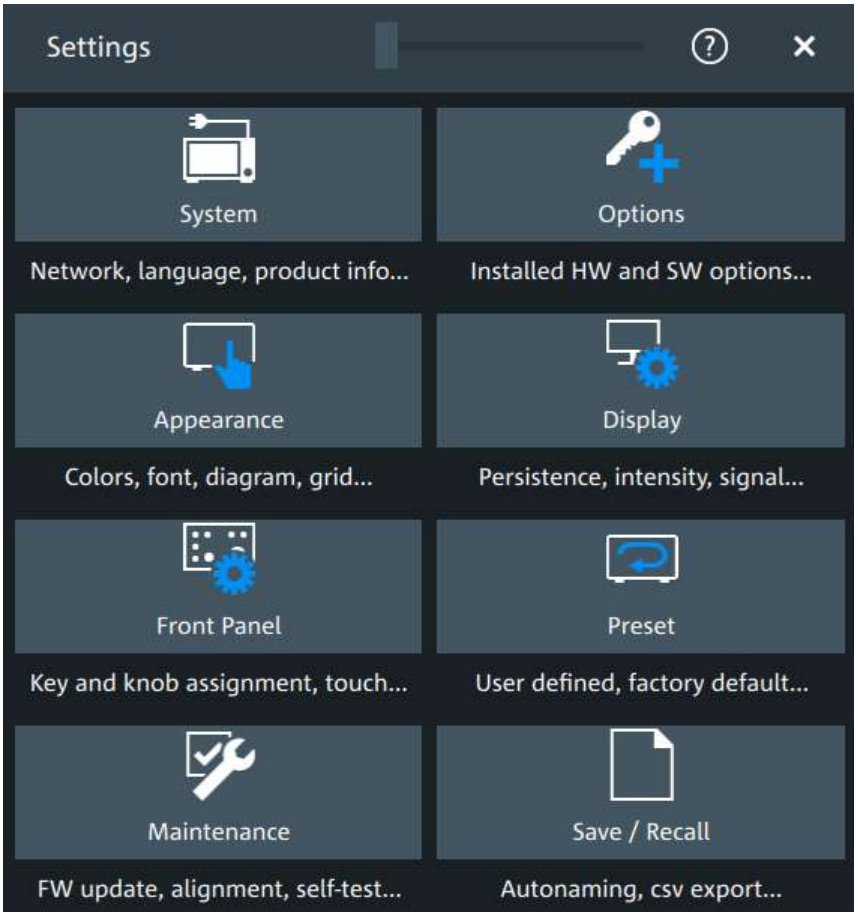

The following settings and procedures are described in the current section:


- System settings 88
- Option settings 97
- Appearance settings 100
- Display settings 109
- Front panel settings 112
- Preset setup 113
- Maintenance settings 116
- Save / recall settings 121

5.1 System settings

In the "Settings" > "System" dialog box, you find all instrument, firmware and network-related information. Here you can also set the language that is used in the dialogs.

5.1.1 About settings

Access: "Menu" > "Settings" > "System" > "About".

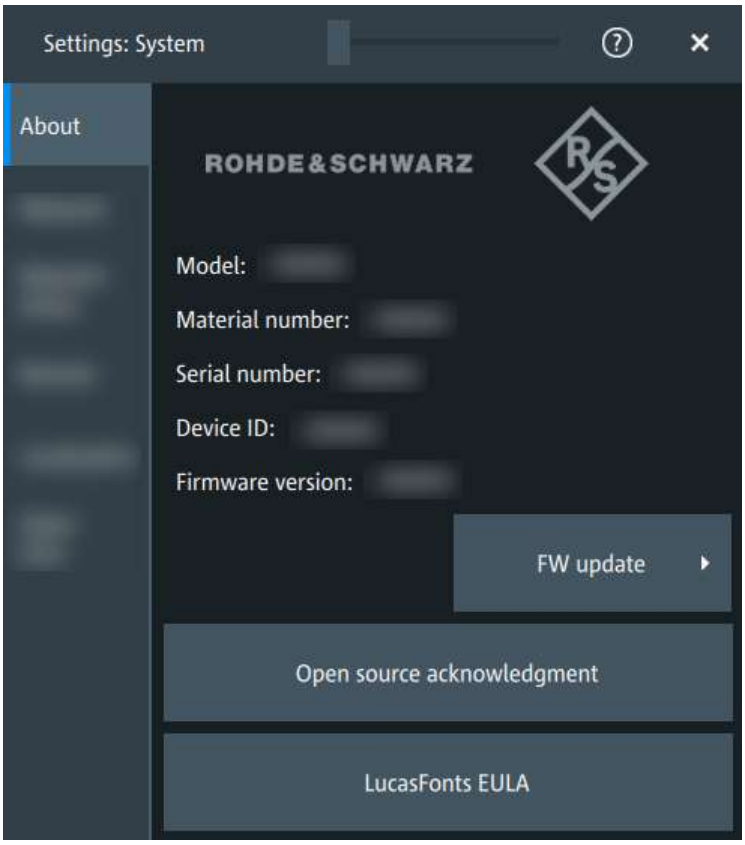

Instrument
Displays general information about the instrument, including:

- "Material number"
- "Serial number"
- "Device ID"
- "Firmware version"

Remote command:
`*IDN?` on page 1091


FW update
Opens the "FW update" dialog box. See Section 5.7.1, "Firmware update", on page 116.

Open source acknowledgment
Displays the "Open Source Acknowledgment" document.

LucasFonts EULA
Displays the copyright of the font provider.

5.1.2 Network settings

Access: "Menu" > "Settings" > "System" > "Network".

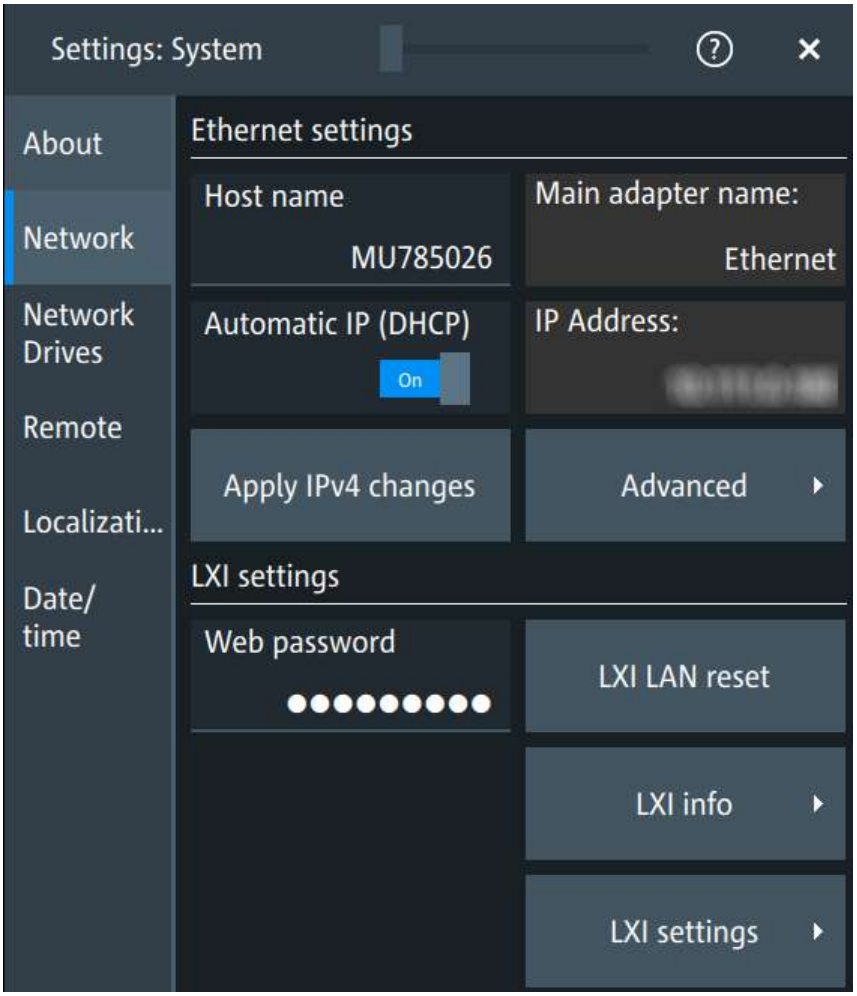

Host name
Indicates the currently defined host name. This value is required to configure the instrument for work in a network.

You can change the host name here. After changing the host name, you have to reboot the instrument.


NOTICE! Risk of network problems. Incorrect configuration of the host name can create network problems. Consult your network administrator before changing the name.

Remote command:
SYSTem:COMMunicate:NET[:HOSTname] on page 1096

Automatic IP (DHCP)
If enabled, the IP address of the oscilloscope is obtained automatically.

IP address
Shows the current IP address of the instrument. If "Automatic IP (DHCP)" is "Off", you can change the IP address here. For complete manual configuration, select "Advanced". See also: Section 17.1, "Connecting the instrument to the network (LAN)", on page 1043.

Advanced
Opens a dialog box to configure the network connection.

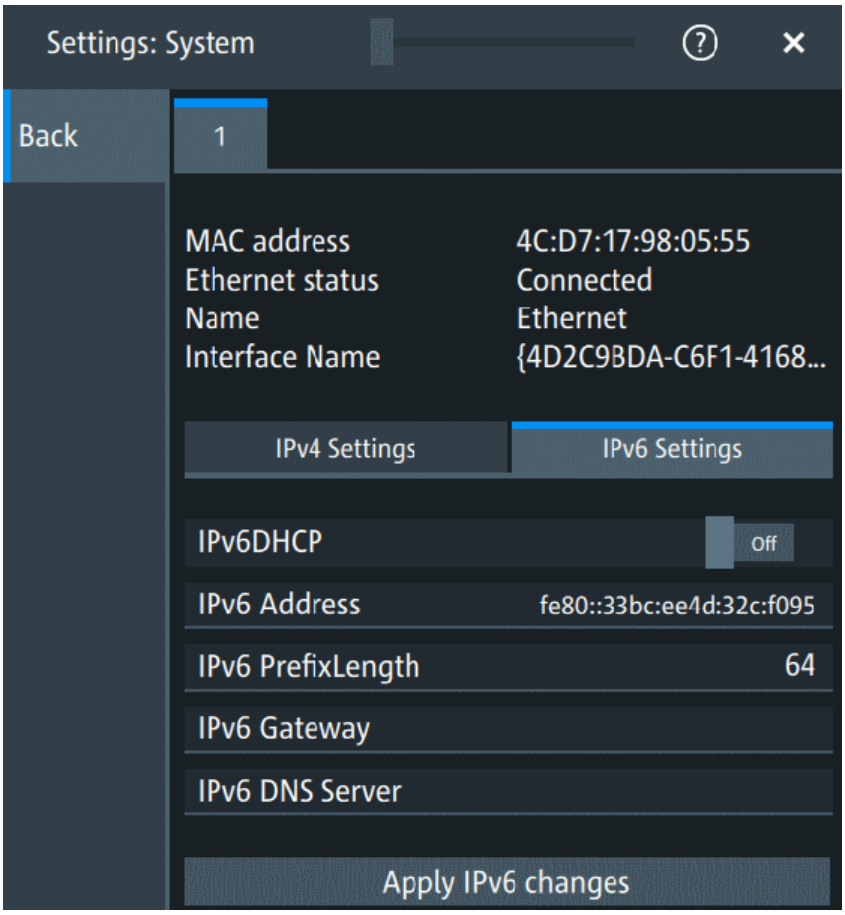

You need these settings to configure the LAN connection manually, without DHCP.

NOTICE! Connection errors can affect the entire network. Make sure to assign valid address information before connecting the instrument to the LAN. Contact your network administrator to obtain a valid IP address and other connection data.

See also: Section 17.1, "Connecting the instrument to the network (LAN)", on page 1043.

Web password
Password for LAN configuration. The default password is *LxiWebIfc*.

LXI LAN reset
Resets the LAN configuration to its default configuration. Use the reset when you cannot access the instrument via LAN due to invalid configuration.

The LAN settings are configured in the "Advanced" dialog, or using the instrument's web browser (see Section 17.3, "Web browser interface (device web)", on page 1060).

The LAN reset uses the LAN Configuration Initialize (LCI) reset mechanism for the instrument. According to the LXI® standard, a LAN reset must set the following network parameters to a default state:


Parameter	Value
TCP/IP mode	DHCP + auto IP address
Dynamic DNS	Enabled
ICMP ping	Enabled
Password for LAN configuration	LxiWebIfc

LXI info
Opens a dialog with relevant LXI information. You can reload the information, for example, after changing connection data in the instrument's web browser.

For information on the LXI standard, refer to the LXI website at https://www.lxistandard.org.

LXI settings
Opens a dialog with important LXI settings. These settings are also available in the instrument's web browser.

There are no remote commands for these settings, since a change via remote control affects the remote control itself.

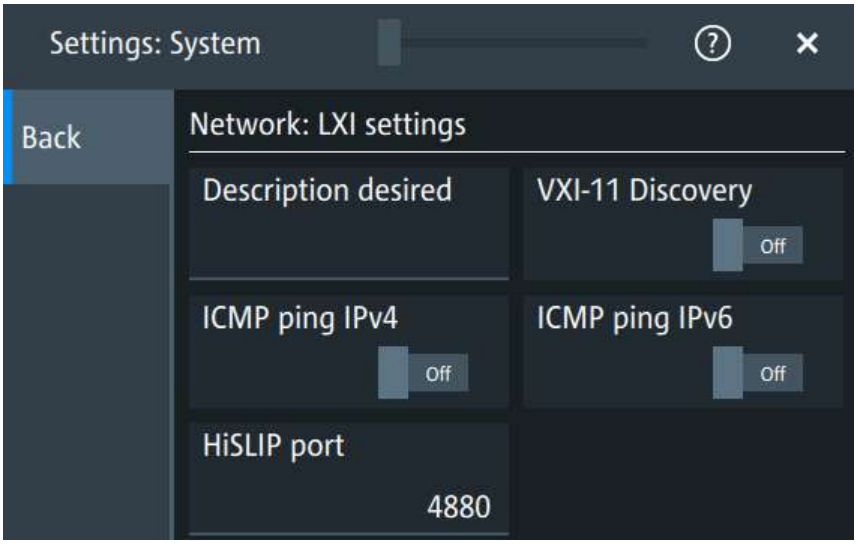

Description desired ← LXI settings
Network description of the instrument.

VXI-11 Discovery ← LXI settings
Enables the automatic detection in a LAN via the VXI-11 discovery protocol and programming by IVI drivers.

ICMP ping IPv4, ICMP ping IPv6 ← LXI settings
Enables the ping utility to verify the connection between the LXI-compliant instrument and another device. Ping is useful for diagnosing IP network or router failures. The ping utility is not password-protected.

HiSLIP port ← LXI settings
Sets the port that is used by the High Speed LAN Instrument Protocol (HiSLIP).

5.1.3 Network drive mapping

You can map up to 8 network drives or shared folders to the MXO 5 and store the measurement data directly in one of these folders.

Requirements:

- The MXO 5 and the target folder must be in the same network. Connection is established via DHCP. Direct connection is not supported.
- You need administrative rights and credentials to access the folder.
- Make sure that the network connection is not restricted by security settings.


5.1.3.1 Connecting a network drive

1. Open "Menu" > "Settings" > "System" > "Network drives".
2. Select "+ Add".
3. Tap the "Empty" button.
4. Enter the "Local folder" on the MXO 5, the "Network folder", and access credentials. For details, see Section 5.1.3.2, "Network drive settings", on page 92.
5. Tap "Connect".

If you want to connect a folder on your personal computer, share this folder and give full permissions to all users before you connect the folder to the MXO 5: Folder properties > "Sharing" > "Advanced Sharing".

5.1.3.2 Network drive settings

Access: "Menu" > "Settings" > "System" > "Network drives" > "+ Add" > select drive

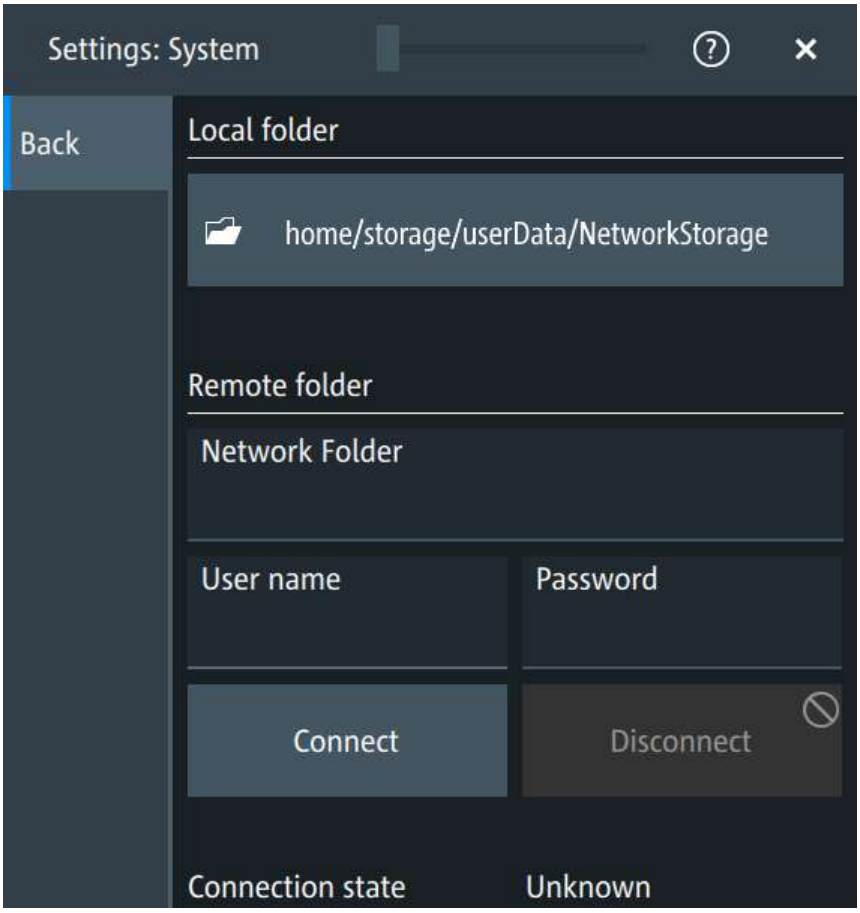

Local folder
Set the local folder on the MXO 5, to which the network folder is mapped. Under this name, you find the connected folder in the file browser on the instrument and in the "File manager" of the web interface.

Remote command:
`MMEMory:NDRive<m>:LPATh` on page 1099

Network folder
Sets the network folder that is mapped to the local folder. Use the full path in UNC syntax, for example, `\\net1\data\team1\osc`.

Remote command:
`MMEMory:NDRive<m>:NPATh` on page 1099

User name, Password
Enter the user name and the password to access the network folder.


Remote command:
`MMEMory:NDRive<m>:UNAMe` on page 1100
`MMEMory:NDRive<m>:PWORd` on page 1100

Connect, Disconnect, Connection state
Connect or disconnects the remote network folder to the local folder. An "Info" message informs on success or failure, and the overall connection state is shown in the dialog.

Remote command:
`MMEMory:NDRive<m>:CONNect` on page 1099
`MMEMory:NDRive<m>:DCONnect` on page 1099

5.1.4 Remote settings

Access: "Menu" > "Settings" > "System" > "Remote".

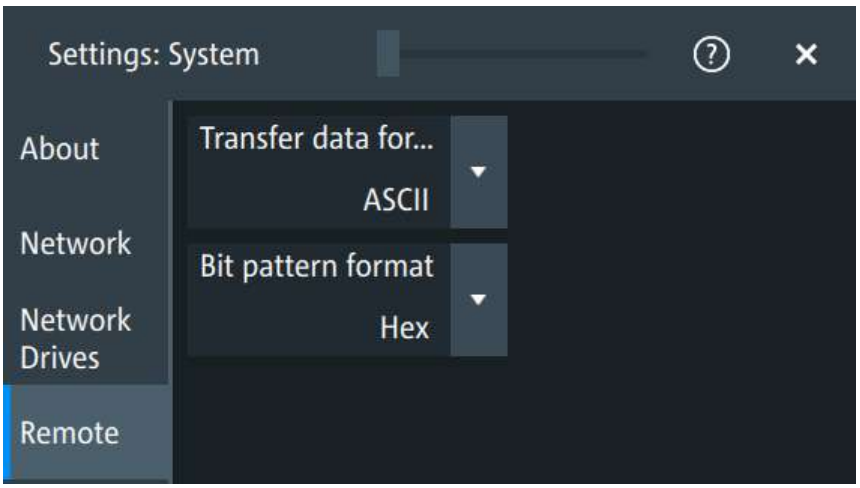

The following settings are required for remote control and data transfer via a connected computer.

Transfer data format
Selects the data format that is used for transmission of waveform data from the MXO 5 to the controlling computer.

If you need physical data (e.g. in Volt or Ampere) for further analysis, use the floating point formats for export. No data conversion is needed.

"Ascii"	Data values are returned in ASCII format as a list of comma-separated values in floating point format.
"FLOAT"	Binary format. Up to 7 significant digits are stored (32 bit). If there are more than 7 digits, the number is rounded off.
"DOUBLE"	Binary format. Up to 15 significant digits of the numbers (64 bit) are stored.
"INT8/16/32"	Signed integer data with length 8/16/ 32 bit.


Remote command:
`FORMat[:DATA]` on page 1093

Bit pattern format
Sets the format for all bit pattern queries.

Remote command:
FORMat:BPATtern on page 1095

5.1.5 Localization settings

Access: "Menu" > "Settings" > "System" > "Localization".

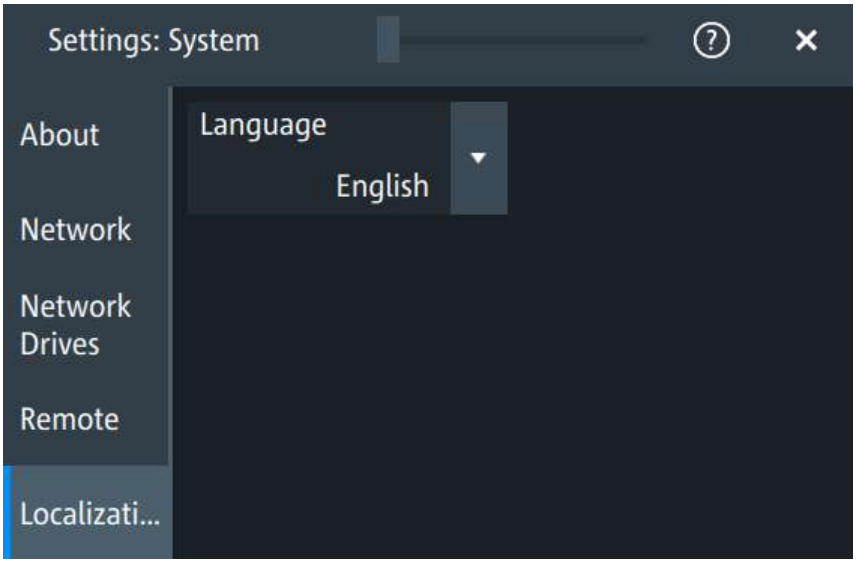


Language
Selects the language in which the menu, dialogs, results and other screen information is displayed. You can change the language on runtime.

Available languages are, for example, English, German, French, Japanese. For a complete list of supported languages, refer to the specifications document.

5.1.6 Date and time settings

Access: "Menu" > "Settings" > "System" > "Date/time".

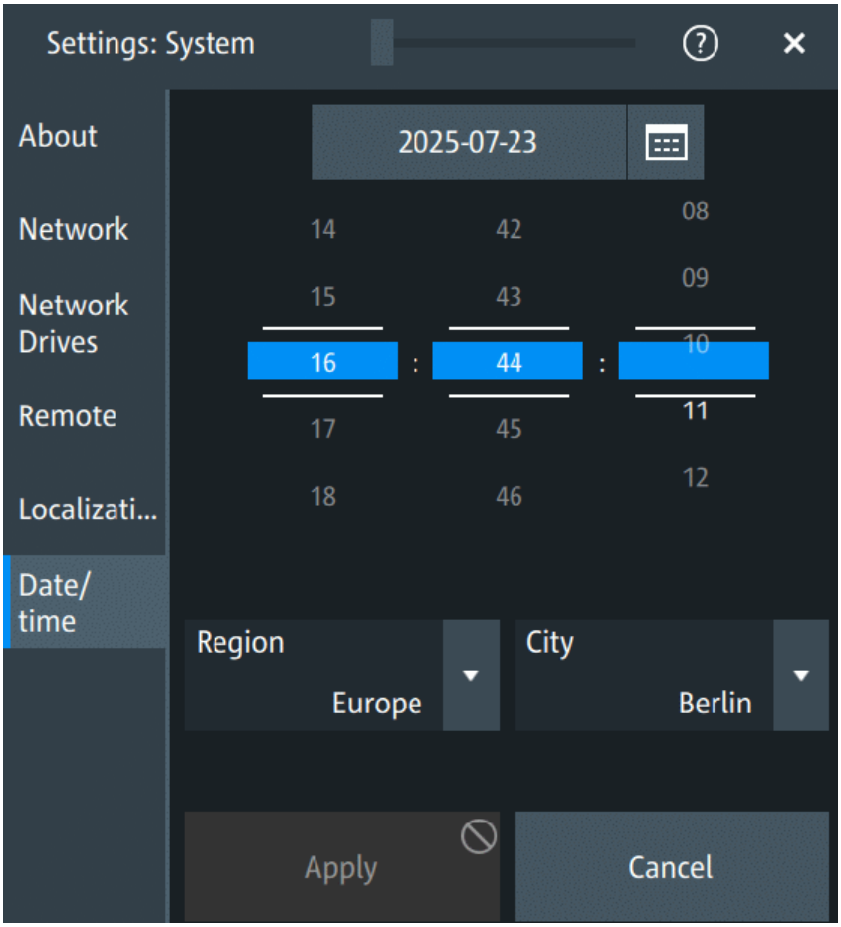

The instrument uses the system time of the operating system, but you can change date and time for the MXO 5 firmware.

1. To change the date:
   a) Tap the date button.
   b) Select the date in the calendar.
   c) Tap the blue calendar icon to close the calendar.
2. To change the time, move the hour, minute and second sliders to the required values.
3. Adjust the "Region" and "City" to indicate your location.
4. Tap "Apply".

Remote command:

- `SYSTem:DATE` on page 1097
- `SYSTem:TIME` on page 1098

5.2 Option settings

Additional options for the MXO 5 are enabled using a license key. To obtain the license key, consult your sales representative.


You can obtain registered or unregistered licenses.

Unregistered licenses

Unregistered licenses are not assigned to a particular instrument. The instrument accepts only registered licenses. If your license is delivered unregistered, use the online tool R&S License Manager to register the license for your instrument. The registration of a permanent license is irreversible, so ensure that you register it for the correct instrument. For registration, you need the device ID of the instrument on which the option will be installed.

5.2.1 Software options settings


Access: "Settings" > "Options" > "Software"

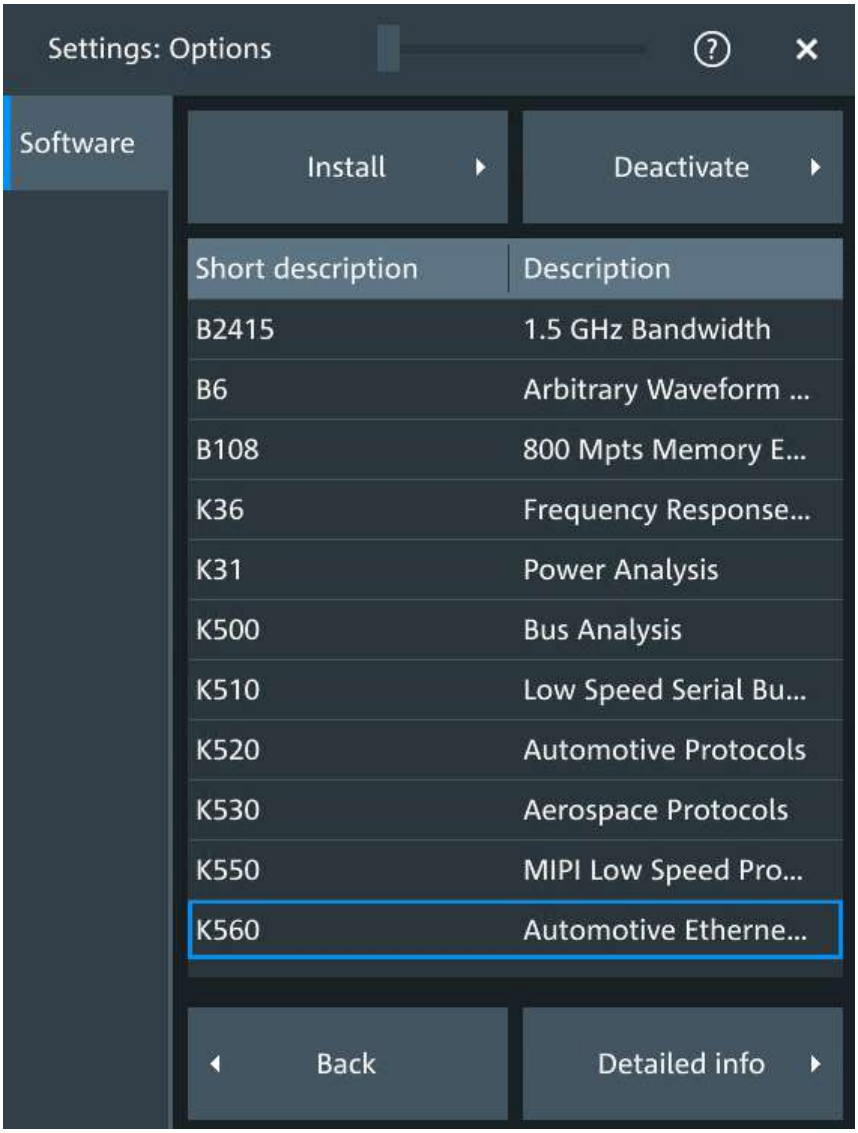

In this dialog, you can access settings for installing and deactivating options. In the "Detailed info" dialog, you can get an overview of all options installed on your MXO 5.

5.2.1.1 Install options

Access: "Settings" > "Options" > "Software" > "Install"

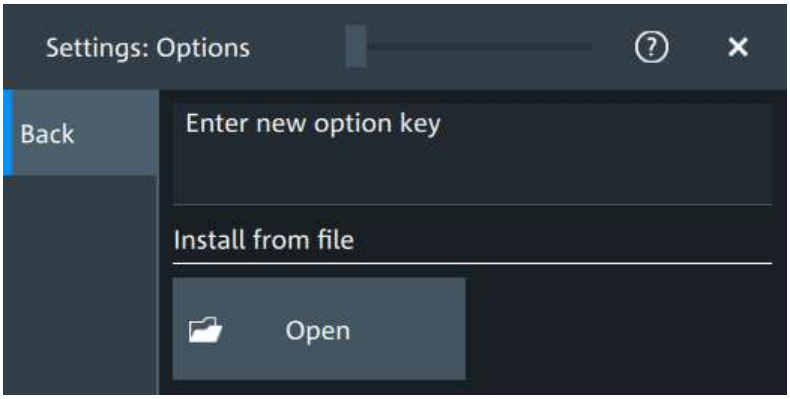

In the "Install" tab, you can install new options using license keys.

Enter new option key
Enter the license key here to activate the option. For license keys delivered as a file, use "Install from file" on page 99.

Install from file
If you got a license file, install the license here.

Tap "Open" to open the file selection dialog, or enter the complete path and filename.


5.2.1.2 Deactivate options

Access: "Settings" > "Options" > "Software" > "Deactivate"

To deactivate an option, use the "Deactivate" dialog. When you deactivate, note the response key, or save the response to a file. Registered options cannot be deactivated, they are bound to the instrument.

5.2.1.3 Detailed info

In the "Detailed info" dialog, you can get an overview of all options installed on your MXO 5 with status and expire information.

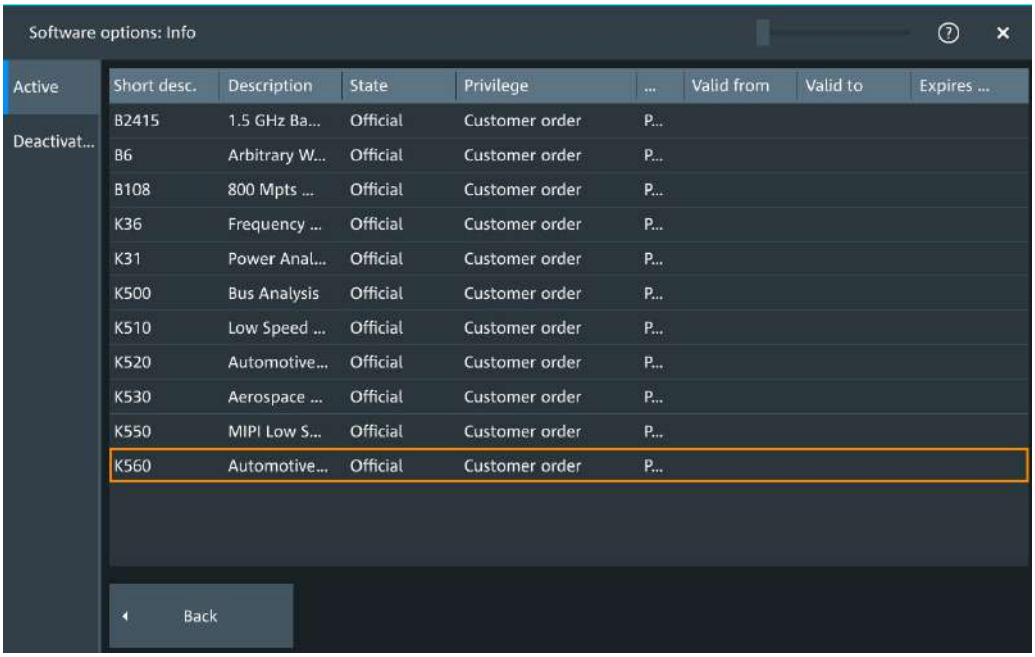

5.3 Appearance settings


In the "Settings" > "Appearance" dialog box, you define the look and feel of the display element, e.g. waveform colors, result position, or grid behavior.

Appearance settings are not included in user-defined presets. To reset all appearance settings at once, use the factory preset.

5.3.1 Colors

Access: "Settings" > "Appearance" > "Colors"

By default, various colors are assigned to the different waveform types for better visibility and distinguishability. You can change the color assignment and assign another color or a color table to waveforms. For digital channels, you can select any color, or use the default color with state coloring.

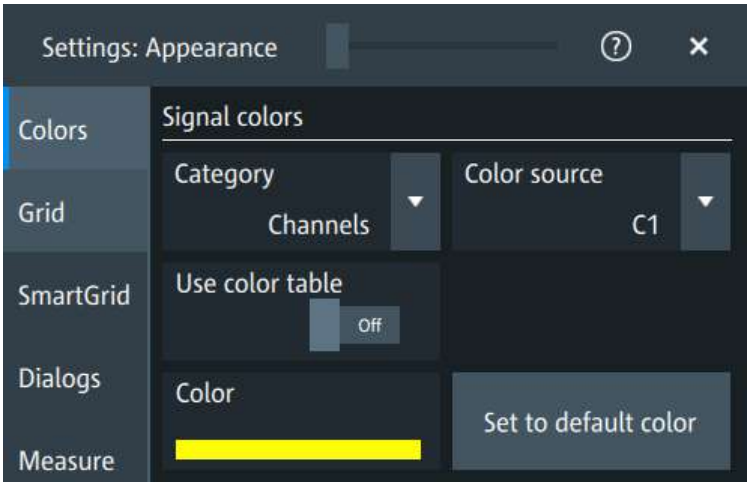

Category
Selects the category of the waveform, e.g. "Channels", "Math", "Reference".

You can then select one of the waveforms of the selected category with "Color source".

Color source
Selects the waveform to which the color or the color table is assigned.

Remote command:
The source is defined by the parameter <Signal> in DISPlay:COLor commands.

Use color table
If enabled, the selected waveform is displayed according to its assigned color table.

If disabled, the selected color is displayed, and the intensity of the signal color varies according to the cumulative occurrence of the values.

The setting is not available for digital channels and parallel buses.

Remote command:
`DISPlay:COLor:SIGNal:USE` on page 1122


Assigned color table
Assigns a color table to the source waveform instead of a dedicated color. Color tables define the color of the waveform pixels depending on the cumulative occurrence of the associated values.

The following color tables are provided:
- "False colors": color changes gradually in a wide color spectrum.
- "Single Event": single events and seldom events appear yellow, a higher cumulative occurrence is shown with blue color. This view helps to identify specific events.
- "Spectrum": colors display the wavelengths of the light. Low cumulative occurrence is displayed blue like high wavelength.
- "Temperature": color changes gradually from blue (low temperature) to red (high temperature) with increasing cumulative occurrence.

Remote command:
`DISPlay:COLor:SIGNal:ASSign` on page 1121

Color
Shows the current color of the selected waveform. To change the color, tap the button.

In the "Color" dialog, you can pick from a list of basic colors. To define another color, select "User defined colors", and adjust the color settings.

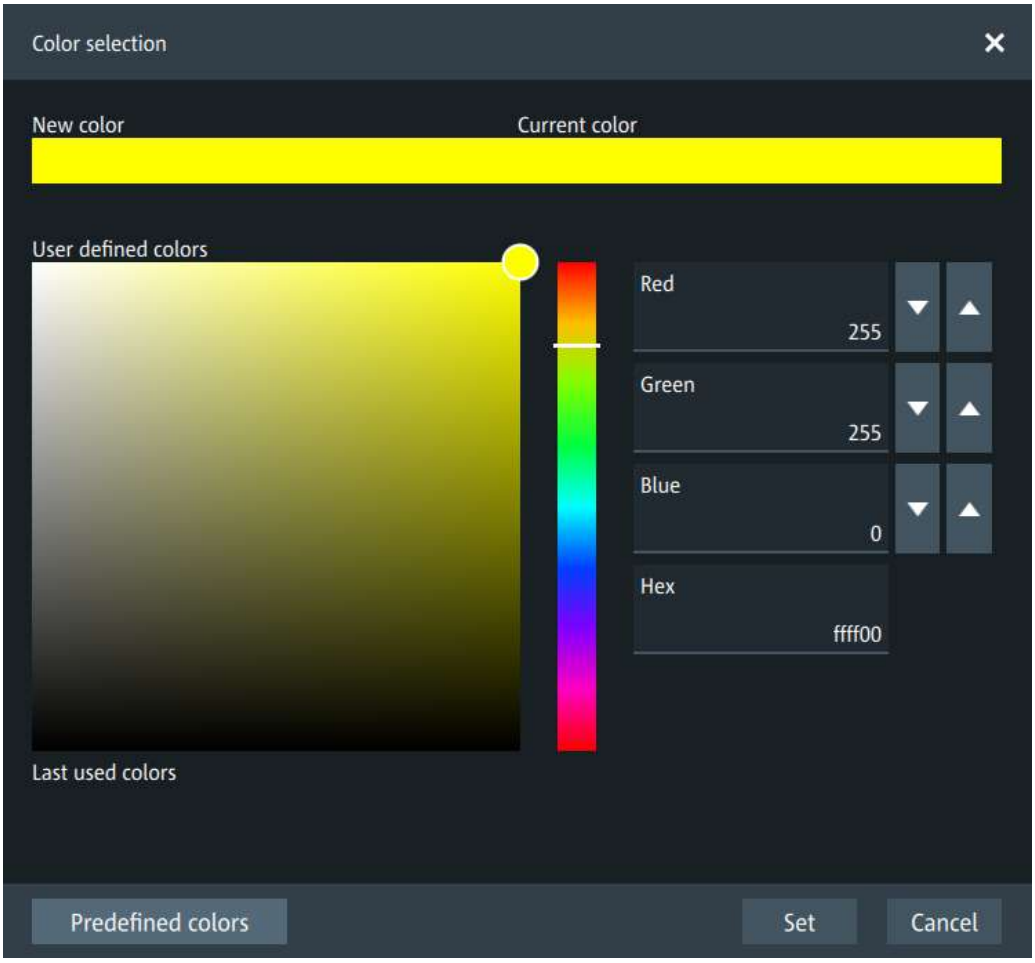

The color of the waveform, its signal icon, and the illuminated keys are adjusted to the new color. If the waveform is a spectrum, the knobs for vertical scale and position retain the color of the spectrum's source.

Remote command:
`DISPlay:COLor:SIGNal:COLor` on page 1121

Set to default color
Resets the color of the selected waveform to the factory default.

Remote command:
`DISPlay:COLor:SIGNal:COLor <Signal>,DEF`

Use state coloring
The setting is available for digital channels and logic buses.

If enabled, the high and low levels and the state transition get different predefined colors.

If disabled, you can select a color for the digital channel or bus. The channel is displayed with the selected color, and the high level has a thicker line than the low level.


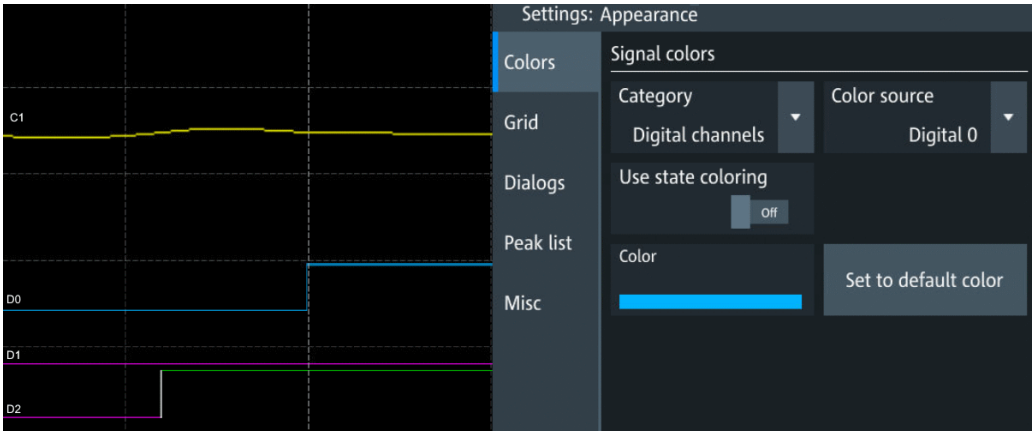


Figure 5-1: D0 has a selected color (blue). D1 and D2 have state coloring. D1 is on low level, D2 changes from low to high.

5.3.2 Grid

Access: "Settings" > "Appearance" > "Grid"

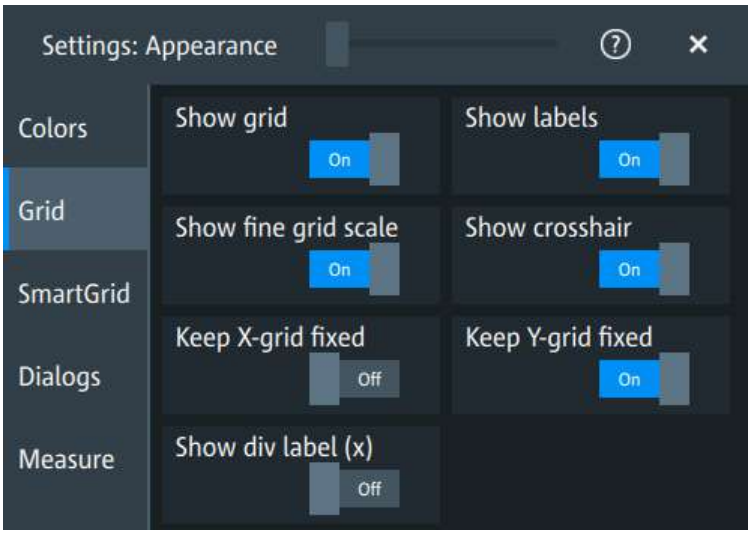


Show grid
If selected, a grid is displayed in the diagram area. A grid helps you associate a specific data point to its exact value on the x- or y-axis.

Remote command:
`DISPlay:DIAGram:GRID` on page 1123

Show labels
If selected, labels mark values on the x- and y-axes in specified intervals in the diagram.

Remote command:
`DISPlay:DIAGram:LABels` on page 1123

Show fine grid scale
If selected, the crosshair is displayed as a ruler with scale markers. If disabled, the crosshair is shown as dashed lines.

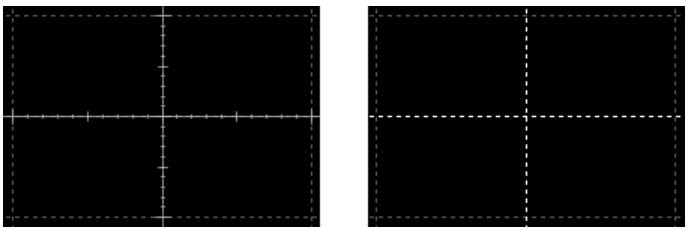

Remote command:
`DISPlay:DIAGram:FINegrid` on page 1122

Show crosshair
If selected, a crosshair is displayed in the diagram area. A crosshair allows you to select a specific data point by its coordinates.

Remote command:
`DISPlay:DIAGram:CROSshair` on page 1122

Keep X-grid fixed
If enabled, the vertical grid lines remain in their position when the horizontal position is changed. Only the values at the grid lines are adapted.

Remote command:
`DISPlay:DIAGram:XFIXed` on page 1123

Keep Y-grid fixed
If enabled, the horizontal grid lines remain in their position when the position of the curve is changed. Only the values at the grid lines are adapted.

Fixed horizontal grid lines correspond to the behavior of traditional oscilloscopes.

Remote command:
`DISPlay:DIAGram:YFIXed` on page 1124


Show div label (x)
If selected, the time scale value is shown at the diagram bottom instead of the horizontal grid labels. For example, 10 ns/div is shown instead of the values 0, 10, 20, 30... ns.

Remote command:
`DISPlay:DIAGram:XPDivlabel` on page 1123

5.3.3 SmartGrid

Access: "Settings" > "Appearance" > "SmartGrid"

For more information on working with SmartGrid, see Section 4.7, "Rohde & Schwarz SmartGrid", on page 74.

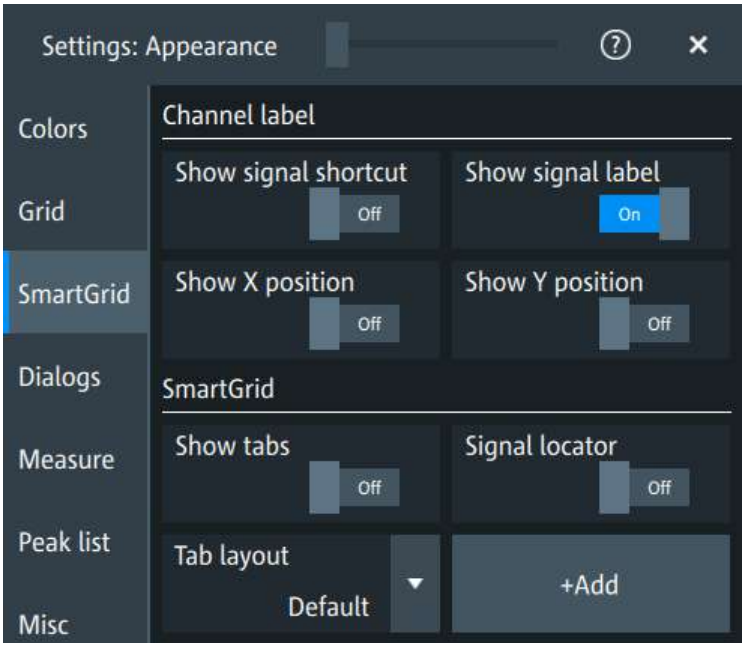

Channel label
Select the information to be shown in the waveform labels at the waveform.

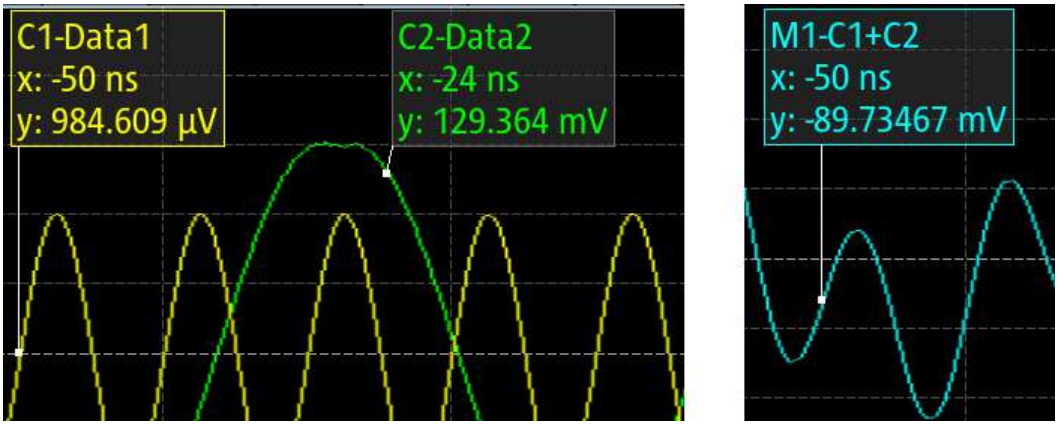


Figure 5-2: Waveform labels with complete information for analog channels and math waveform

"Show signal shortcut"	Shows the generic short name of the waveform, e.g, C1, C2, R1, M1.
"Show signal label"	Shows the user-defined label. These labels are defined in the setup dialog of the waveform, e.g. in the "Vertical" > "Setup" tab for analog channels, and in the "Math" > "Setup" tab for math waveforms.

"Show X position"	Shows the x-position of the attachment point of the waveform label to the waveform.
"Show Yposition"	Shows the y-position of the attachment point of the waveform label to the waveform.

Show tabs
Shows or hides the layout tabs in the upper left corner of the diagram area. You need the tabs if you work with several layouts to create a layout and to change between the layouts.

See also: "Working with layouts" on page 75.



Remote command:
`GUI:SGRid:STABs` on page 1107

Signal locator
Shows or hides the indicators of the waveforms that are contained in one diagram. The indicators are shown in the upper right corner of the diagram.




Remote command:
`GUI:SGRid:SLOCator` on page 1107

Tab layout
Selects the layout template that SmartGrid uses for the selected layout tab. It defines how the display area is divided into one or more diagram, which then determines where waveforms appear.

+ Add
Adds the layout template to the selected layout tab.

5.3.4 Dialogs

Access: "Settings" > "Appearance" > "Dialogs"

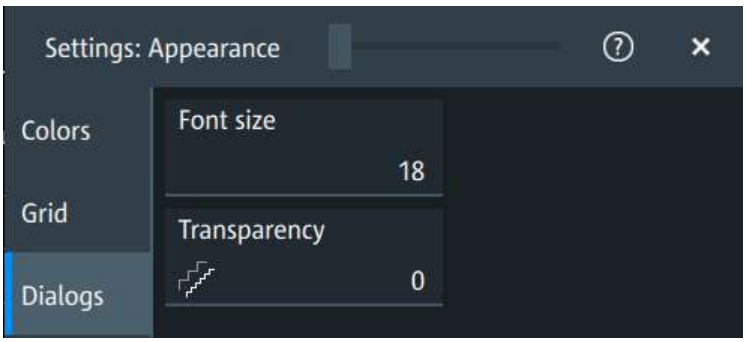

Font size
Sets the font size of the text in dialog boxes.

Remote command:
`DISPlay:DIALog:FONTsize` on page 1124

Transparency
Sets the transparency of the dialog box background. For high transparency values, you can see the waveform display in the background, and possibly check the effect of the changed setting. For lower transparency values, readability in the dialog box improves.


You can also set the dialog transparency by moving the transparency bar at the top of the dialog.



Remote command:
`DISPlay:DIALog:TRANsparency` on page 1124

5.3.5 Measure

Access: "Settings" > "Appearance" > "Measure"

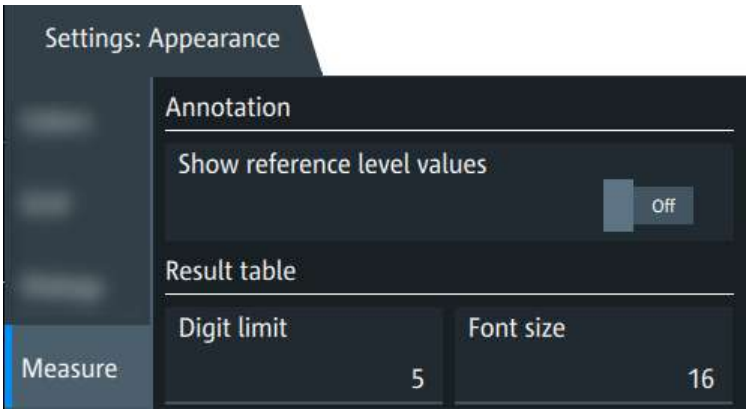

Show reference level values
If selected, the values of the reference levels are displayed.

Remote command:
DISPlay:MEASurements:LEVels on page 1125

Digit limit
Sets the number of digits for the result values in result tables.

Examples:

"Digit limit" = 5, frequency result "Freq: 50.167"

"Digit limit" = 7, frequency result "Freq: 50.16757"


Remote command:
MEASurement<mg>:DISPlay:DIGits on page 1125

Font size
Sets the font size of the text in result tables.

Remote command:
DISPlay:RESult:FONTsize on page 1124

5.3.6 Peak list

Access: "Settings" > "Appearance" > "Peak list"

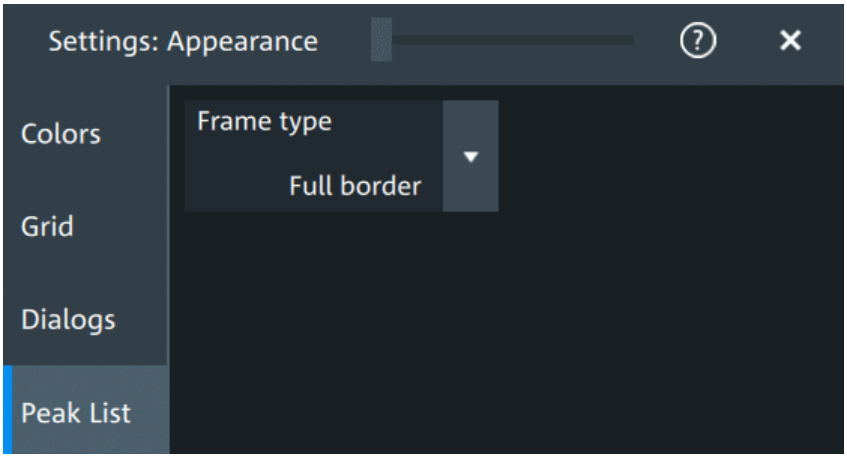


Peak list settings apply to peak list measurements. They are visible when the peak list for spectrum measurements is enabled.

Frame type
Defines the layout of the labels, full border or none.

Remote command:
CALCulate:SPECtrum<sp>:PLISt:LABel:BORDer on page 1125

5.3.7 Miscellaneous

Access: "Settings" > "Appearance" > "Misc"

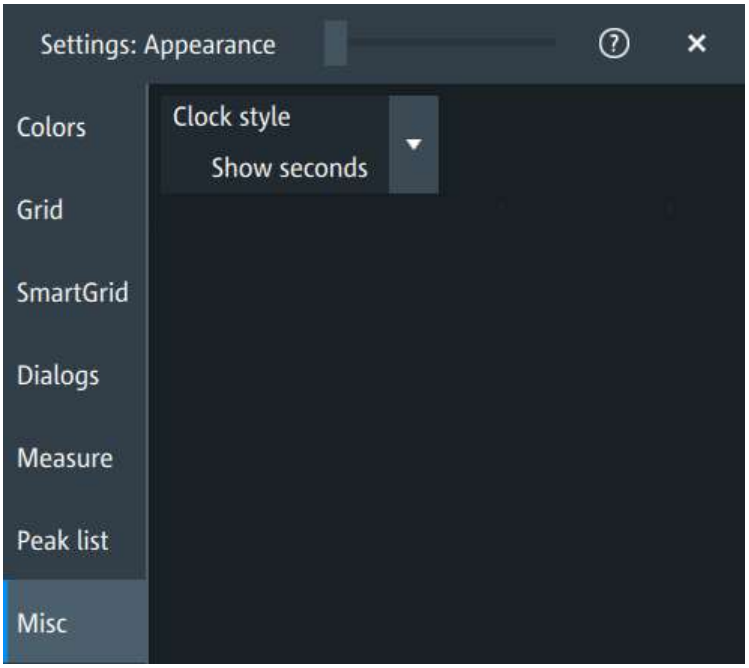

Clock style
Select how the clock in the upper right corner of the screen is displayed:



- "Show seconds": format is hh:mm:ss
- "Hide seconds": format is hh:mm
- "Hide clock": no time is shown


Remote command:
`GUI:CSTYle` on page 1107

5.4 Display settings

In the "Settings" > "Display" dialog, you can define the display settings like brightness and signal intensity.

5.4.1 Persistence settings

Access: "Menu" > "Settings" > "Display" > "Persistence".

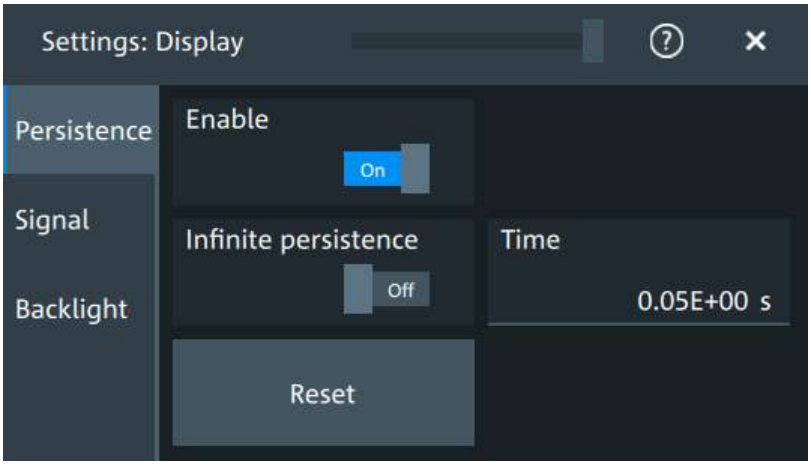

Enable
If enabled, each new data point in the diagram area remains on the screen for the duration that is defined using Time, or as long as Infinite persistence / Overlay is enabled.

If disabled, the waveform points are displayed only for the current acquisition.

Remote command:
`DISPlay:PERSistence[:STATe]` on page 1127

Infinite persistence / Overlay
If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled. Use infinite persistence to display rare events in the signal.

In active history mode, the player shows the history waveforms with infinite persistence. Thus, you can see all data points of all recorded history waveforms of a player cycle.

Remote command:
`DISPlay:PERSistence:INFinite` on page 1126

Time
Sets a time factor that controls how long the waveforms points fade away from the display. Thus, the MXO 5 emulates the persistence of analog phosphor screens.


Remote command:
`DISPlay:PERSistence:TIME` on page 1127

Reset
Resets the display, removing all persistent waveform points.

Remote command:
`DISPlay:PERSistence:RESet` on page 1126

5.4.2 Signal settings

Access: "Menu" > "Settings" > "Display" > "Signal".

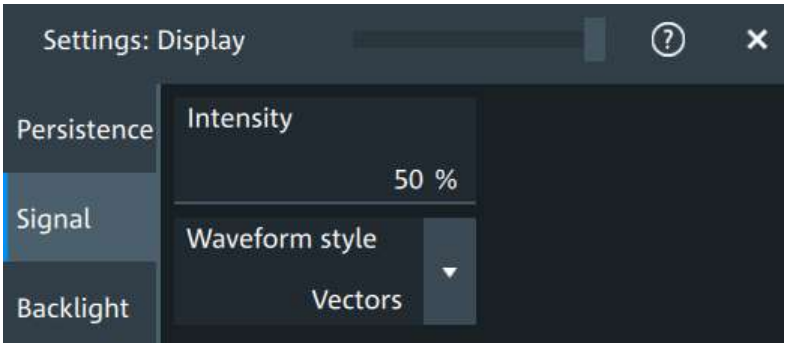

Intensity
The intensity determines the strength of the waveform line in the diagram. Enter a percentage between 0 (not visible) and 100% (strong). The default value is 50%.

You can also use the [Intensity] knob to adjust the waveform intensity directly.

Remote command:
`DISPlay:INTensity` on page 1127

Waveform style
Selects the style in which the waveform is displayed.


"Vectors" The individual waveform points are connected by a line.
Define the strength of the line using the [Intensity] knob.

"Dots" Only the individual waveform points are displayed.
To see the dots of one waveform, perform one acquisition with [Single] and N=1 (N-single/avg count). During continuous acquisition, or a [Single] acquisition with N > 1, the dots of multiple subsequent waveforms are displayed on the screen, and the waveform looks like a line.

Remote command:
`DISPlay:DIAGram:STYLe` on page 1128

5.4.3 Backlight settings

Access: "Menu" > "Settings" > "Display" > "Backlight".

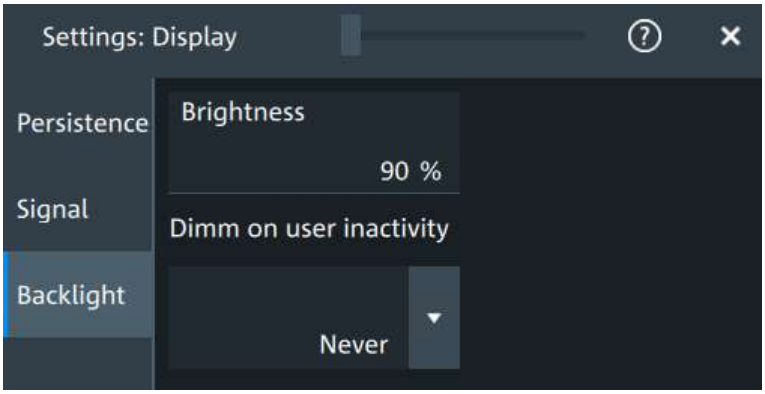

Brightness
Sets the background luminosity of the touchscreen.

Remote command:
`DISPlay:BACKlight[:BRIGtness]` on page 1128

Dimm on user inactivity
Selects a time, after which the monitor brightness is reduced, if the instrument was inactive. Remote control of the instrument is also considered as an activity.


Remote command:
`DISPlay:BACKlight:DIMMing` on page 1128

5.5 Front panel settings

In the "Front panel" dialog box, you can assign functions to keys and knobs and adjust the brightness of the keys.

5.5.1 Hardkeys: function assignment

Access: "Settings" > "Front panel" > "Hardkeys"

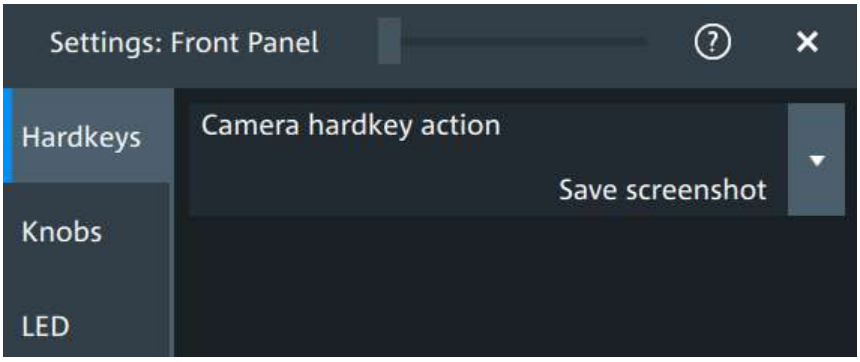


Camera hardkey action
The Camera key on the bottom right is a shortcut key that initiates an associated action.

You can assign one of the following actions:
- Save screenshot
- Open screenshot setup

Configure the settings for the selected action.
- Screenshots: "Save/recall" key > "Save" tab > "Screenshot", see Section 13.9, "Screenshots", on page 529.

5.5.2 Knobs

Access: "Settings" > "Front panel" > "Knobs"

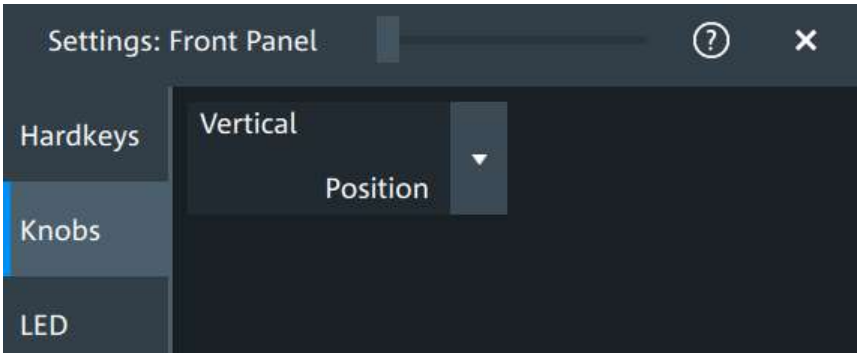


Vertical
The vertical Position knob can change the waveform position or the offset of the selected waveform. Select the action that you want to perform.

See also: "[Position]" on page 52.

5.5.3 LED

Access: "Settings" > "Front panel" > "LED".

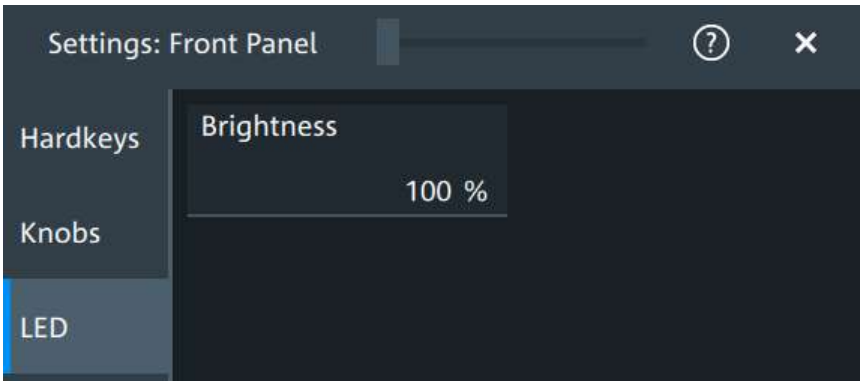

Brightness
Defines the luminosity of illuminated front panel keys and knobs.


5.6 Preset setup

The preset sets the MXO 5 to a default configuration, or to a user-defined configuration. A user-defined preset file is one of the saveset files, which are stored locally. It contains the measurement setup, while the user's display settings are not included. You can save the current configuration to a preset file, and enable the saved preset file to be applied with the "Preset" toolbar icon.

See also: Section 13.3, "General and measurement settings: savesets", on page 497.

5.6.1 Preset settings

Access: "Menu" > "Settings" > "Preset" > "Settings".

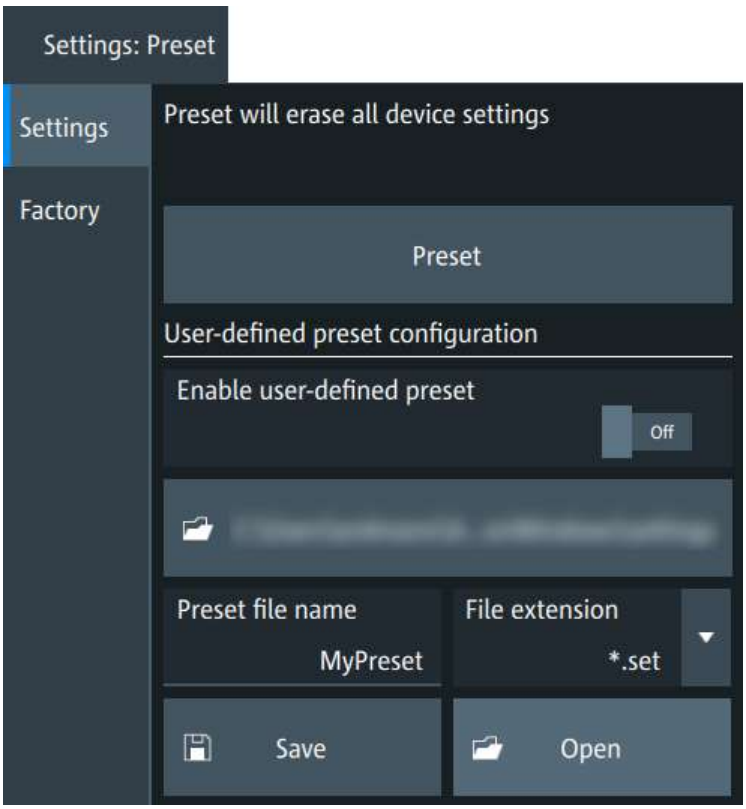

Preset
Set the MXO 5 to a default configuration, or to a user-defined configuration.

Remote command:
`*RST` on page 1092

Enable user-defined preset
If enabled, the settings from the selected saveset are restored when the [Preset] key is pressed.

If disabled, [Preset] sets the instrument to the factory defaults.

Remote command:
`USERdefined:PRESet[:ENABle]` on page 1132

Preset file selection
Select the saveset file that contains the required settings.

<Directory>	Shows the currently used directory. To change the directory, tap the button and select the correct directory in the file dialog.
"Preset file name"	Enter the filename of the preset file. This file is loaded on user-defined preset. The filename is also used when you save a preset file with "Save".

"File extension" The file extension is `.set`.

Remote command:
`USERdefined:PRESet:NAME` on page 1131
`USERdefined:PRESet:OPEN` on page 1131

Save, Open
"Save" writes the current settings immediately to the file that is named in "Preset file name" in the selected directory. "Open" loads a saveset file as preset settings.

Remote command:
`USERdefined:PRESet:SAVE` on page 1132
`USERdefined:PRESet:OPEN` on page 1131

5.6.2 Factory preset

Access: "Menu" > "Settings" > "Preset" > "Factory".

Factory preset
Resets the MXO 5 to the factory default settings, to the initial state. Factory settings comprise all instrument settings.

Remote command:
`SYSTem:PRESet` on page 1097

5.6.3 Restoring settings

When you have changed many settings, and you are not sure which settings are causing which effect, you can restore the default settings and start anew. The following methods are available:

- Saving the settings as a user-defined preset and rest the settings to user-defined default values
- Restoring all settings on the MXO 5 to the factory-defined values
- Loading settings from a file

To save a user-defined preset

1. Open the "Menu" > "Settings" > "Preset" tab.
2. Enter a name for the preset file. Select the file format.
3. Tap "Save".

   Note: If you want to store the file in another directory than the displayed one, select "Save as". See also: Section 13.10, "File browser dialog", on page 534.

To rest the settings to user-defined default values

1. Open the "Menu" > "Settings" > "Preset" > "Settings" tab.

2. In "Preset file name", enter the name of the file that contains the required settings.
3. To use these settings as preset values, select "Enable user-defined preset".
4. Tap "Preset".

   To preset the instrument whenever needed, press the [Preset] key.

To restore all settings to the factory defaults

1. Open the "Menu" > "Settings" > "Preset" > "Factory" tab.
2. Tap the "Factory preset" button.

   All settings on the MXO 5 are reset to their factory-defined values.
   As long as no user-defined preset file is loaded and "Enable user-defined preset" is disabled, the preset also resets the settings to factory defaults.

5.7 Maintenance settings

In the "Settings" > "Maintenance" dialog box, you can update the firmware, perform self-alignment.

5.7.1 Firmware update

Access: "Menu" > "Settings" >"Maintenance" > "FW update".

Your instrument is delivered with the latest firmware version. Firmware updates are provided on the internet at:

The "Release Notes" describe the improvements and modifications of all firmware versions. They also explain how to update the firmware. They are available along with the firmware on the same web page.

Remote commands:


- `SYSTem:FW:FILepath` on page 1097
- `SYSTem:FW:STARt` on page 1098

5.7.2 Alignment

When data from several input channels is displayed at the same time, it can be necessary to align the data. Alignment is done vertically or horizontally to synchronize the time bases or amplitudes and positions. Perform an alignment, for example, when strong temperature changes occur (> 5°).

5.7.2.1 Alignment settings

Access: "Menu" > "Settings" > "Maintenance" > "Alignment"

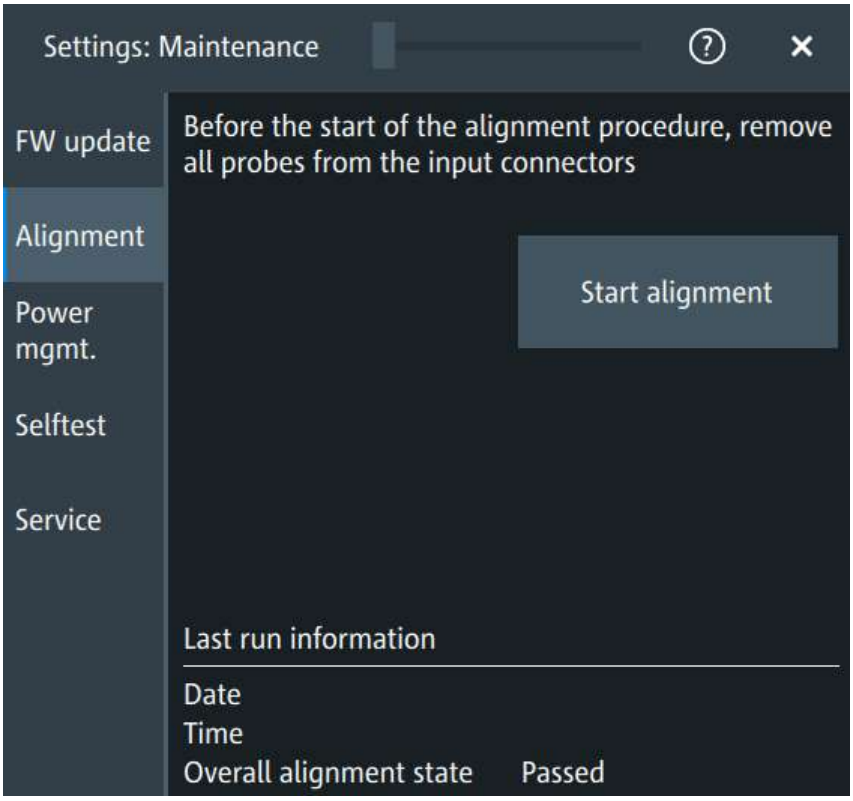

Start alignment
Starts the self-alignment procedure for all channels.


Remote command:
`*CAL?` on page 1090

Date, Time, Overall alignment state
Show the date, time and the summary result of the self-alignment process: not aligned, passed or failed. Detailed results are provided on the "Alignment results" tab.

Remote command:
`CALibration:DATE?` on page 1133
`CALibration:TIME?` on page 1133
`CALibration:RESult?` on page 1133

Show results
Opens a dialog to display the alignment results.

For each channel, the results of the individual alignment steps are shown for all technical channel component. In case you require support, you may be asked to provide this information.

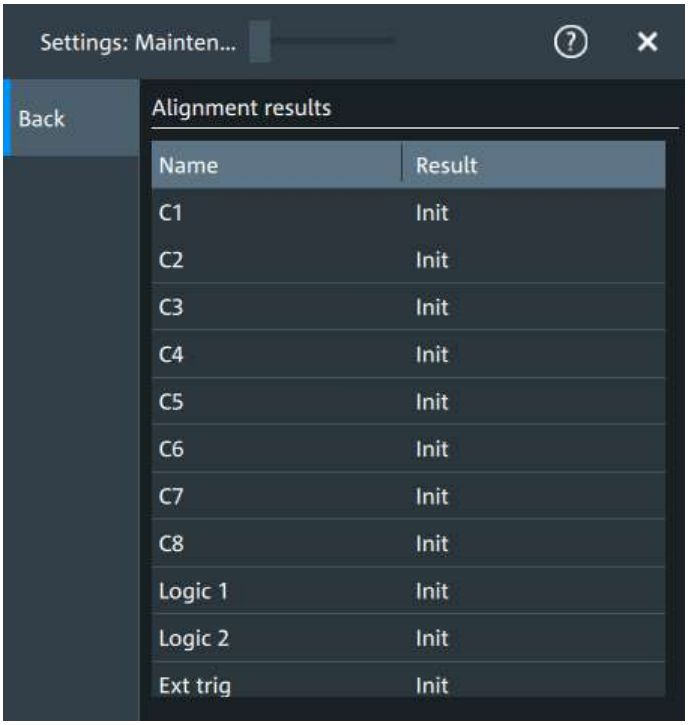

5.7.2.2 Performing a self-alignment

The self-alignment aligns the data from several input channels vertically and horizontally to synchronize the timebases, amplitudes and positions. The self-alignment process includes a basic hardware check.

Recommendation on performing the self-alignment:


- When putting the instrument into operation for the first time
- After a firmware update
- Once a week
- When major temperature changes occur (> 5°)

1. Warm up the instrument before you start the self-alignment. The minimum warm-up time is indicated in the specifications document.
2. Remove the probes from the input connectors.
3. Open "Menu" > "Settings" > "Maintenance".
4. In the "Alignment" tab, tap "Start alignment".

   The alignment is performed, the process can take several minutes. A message box informs you about the running process, wait until this message box closes.
   The overall pass/fail result is shown in the "Overall alignment state" field.

5.7.3 Power management

Access: "Menu" > "Settings" > "Maintenance" > "Power mgmt."

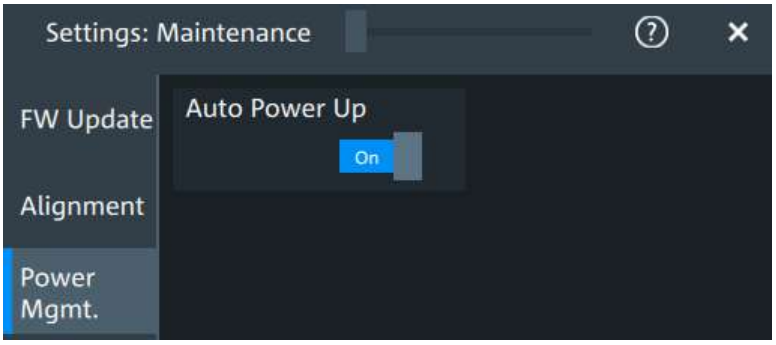


Auto power up
If enabled, the instrument powers up automatically when it is connected to the mains voltage, and after a power outage. If disabled, the instrument also powers up after a power outage if it was running when the power outage occurred.

Remote command:
`SYSTem:APUP` on page 1134

5.7.4 Self-test

The instrument's selftest checks the hardware for correct operation. Perform the self-test if you suspect problems in hardware operation.

Access: "Settings" > "Maintenance"> "Selftest"

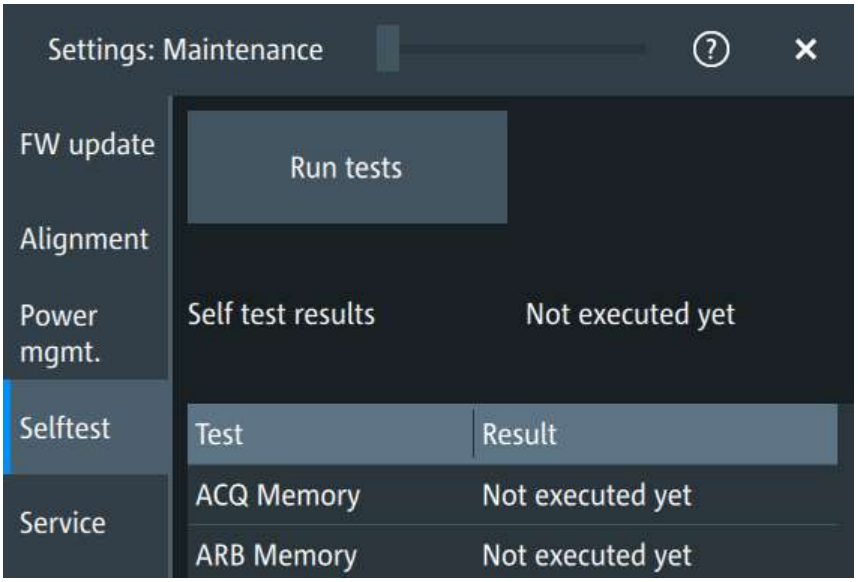

The selftest can take several minutes. The summary result is shown in the "Selftest results" field, and the results of the single tests are shown in the "Result" column of the test table.

Run tests
Starts the selftest.

Remote command:
*TST? on page 1093


Selftest results
Shows the summary result of the self-test: pass or fail.

Remote command:
*TST? on page 1093

Test table
The table shows the available tests and their particular tests results. This can be helpful in case you need support.

5.7.5 Service

Access: "Menu" > "Settings" > "Maintenance" > "Service"

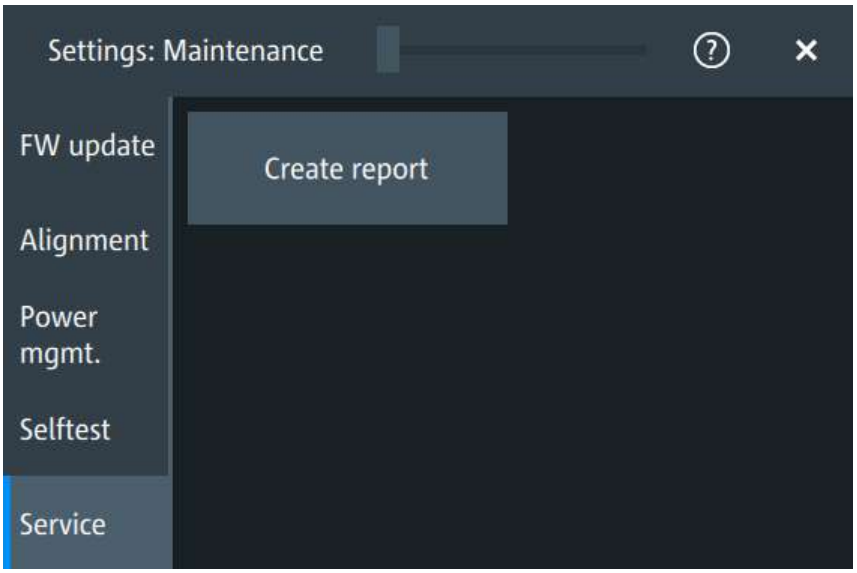

Create report
Creates a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder `/home/storage/userData`.

See also: Section 19.4, "Information for technical support", on page 2410.

Remote command:
SERVice:REPort on page 1133

5.7.6 Hardware info

Access: "Menu" > "Settings" > "Maintenance" > "Hardware info"


The dialog shows important hardware components of the instrument with their material number, serial number and version. The information can be useful in case of support or service.

5.8 Save / recall settings

5.8.1 Autonaming

Access: "Menu" > "Settings" > "Save/recall" > "Autonaming" tab.

5.8.1.1 Autonaming settings

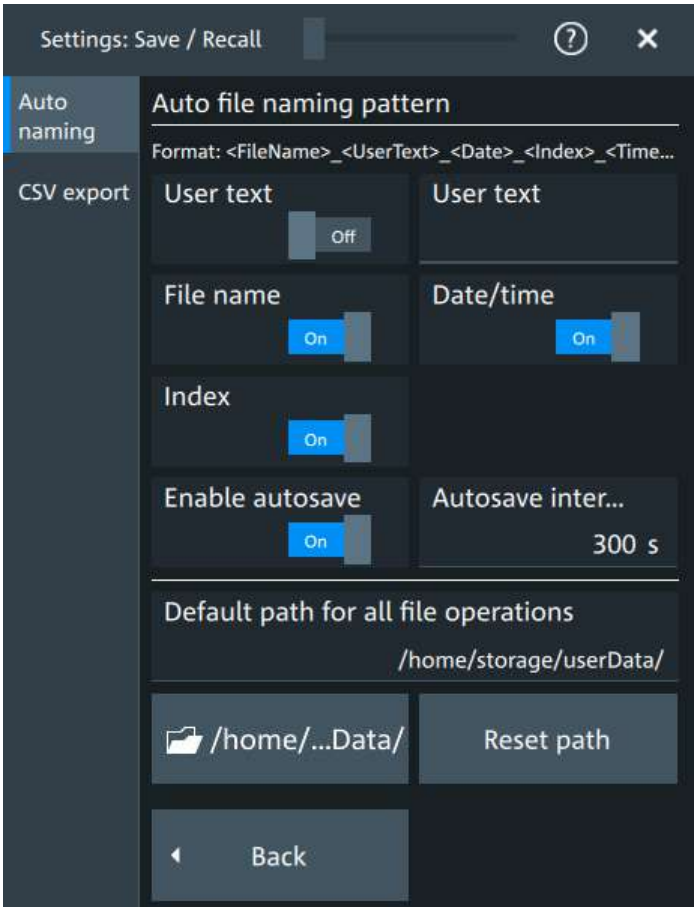

In the "Autonaming" tab, you can define the pattern for automatic filename generation. This name is used as the default filename. The default path is the stor-

age location for all saved files and their subdirectories. The local directory for user data is `/home/storage/userData`, the path to a USB storage device is `/run/media/usb/<MyDriveName>/`.

User text
If enabled, inserts the specified user text after the prefix.

Remote command:
`MMEMory:AUTonaming:USERtext` on page 1130
`MMEMory:AUTonaming:TEXT` on page 1131

File name base
If enabled, inserts the default filename. The filename indicates the type of data that is saved, for example, RefCurve.

Remote command:
`MMEMory:AUTonaming:PREFix` on page 1129

Date/time
If enabled, the current date and time are inserted in the filename pattern.

Remote command:
`MMEMory:AUTonaming:TIME` on page 1129

Index
If enabled, inserts an index.

Remote command:
`MMEMory:AUTonaming:INDex` on page 1129

Enable autosave
Enables the automatic saving. A saveset is generated and saved in a given interval that you define with "Autosave interval". If you switch off the instrument, the last saved settings are recovered.

Remote command:
`MMEMory:AUSave:ENABle` on page 1129
`MMEMory:AUSave:INTerval` on page 1130

Default path for all file operations
Defines the path that is displayed in the file selection dialog box for loading and storing operations. Locally, all user data is written to `/home/storage/userData`. You can create subfolders in this folder.

If a USB storage device is connected, the path is automatically changed to the USB path `/run/media/usb/<MyDriveName>/`.

To switch the directory quickly, double-tap the path button. Use the symbols on the left of the file explorer box to change the directory.

Remote command:
`MMEMory:AUTonaming:DEFaultpath` on page 1130

Reset path
Resets the default file path to the factory default.

Remote command:
MMEMory:AUTonaming:RESPath on page 1131
MMEMory:AUTonaming:RESall on page 1130

5.8.1.2 Defining default file paths and names

When a save or load operation is performed, a default filename and path is provided. You can configure which path is used, and how the filename is generated. In the file selection dialog box, you can change the folder and name as desired.

To define the default file path

1. Tap "Menu" > "Settings".
2. Select the "Save/recall" tab.
3. Select the "Autonaming" tab.
4. Double-tap the path button.

   The directory selection dialog box is opened.
5. Select the folder in which the data is stored by default. Use the symbols on the left of the file explorer box to switch to often used directories.
   Alternatively, you can tap the "Default path for all file operations" field and type the path.
6. To restore the factory-set default path, tap "Reset" next to the path field.

To define the automatic filename pattern

The automatic filename pattern can consist of the following elements:

<FileName>_<UserText>_<Date>_<Index>_<Time>

The prefix depends on the data type to be stored and cannot be changed by the user. The other elements can be enabled or disabled as required.

1. Tap "Menu" > "Settings".
2. Select the "Save/recall" tab.
3. Select the "Autonaming" tab.
4. If you want to exclude the "File name base", "Date/time" or an "Index" (serial number), disable the corresponding option.
5. To insert a user-defined text after the prefix, enable "User text". Enter the text in the edit field.

   The specified elements are used to generate the default filename for the next storage operation.

5.8.2 CSV export

Access: "Menu" > "Settings" > "Save/recall" > "CSV export" tab.

Currently, there are no active settings in this dialog.

6 Acquisition and waveform setup

6.1 Horizontal setup


The "Horizontal" dialog provides the timebase configuration for channel and spectrum waveforms.

6.1.1 About the horizontal system

Horizontal settings, also known as timebase settings, adjust the waveforms in horizontal direction.

Typically, the trigger is the determining point of the waveform record. In many scenarios, you want to analyze the waveform some time before or after the trigger. To adjust the horizontal acquisition window to the waveform section of interest, you can use the following parameters:

- The **horizontal position** defines the time distance of the trigger point (the zero point of the diagram) to the reference point. Changing the horizontal position, you can move the trigger point, even outside the screen.
- The **reference point** is the rescaling center of the time scale on the screen. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point.

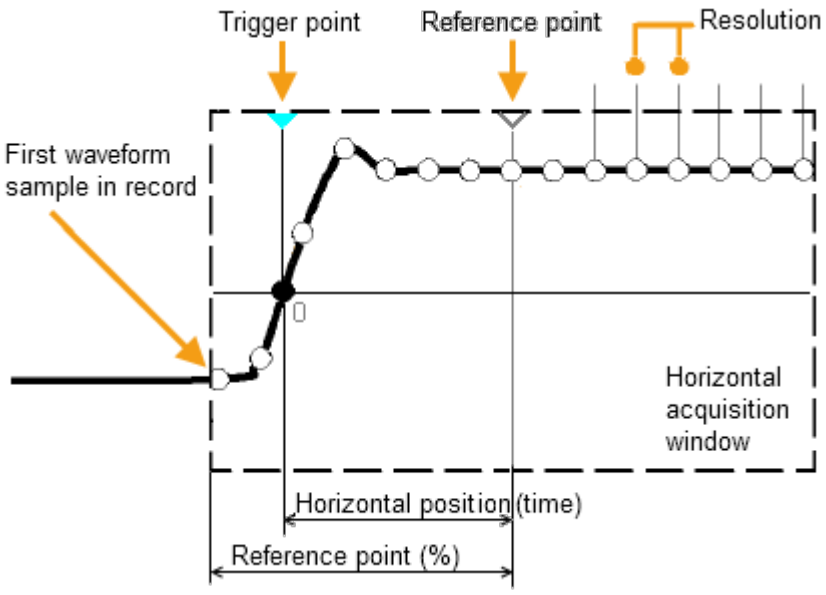

Unlike vertical settings, which are waveform-specific, the horizontal settings apply to all active waveforms.


Timebase settings are interdependent:

*Timebase range = Time scale * Number of divisions*

The number of divisions is 10, which is the only constant parameter.

6.1.2 Horizontal Setup settings

Access: "Menu" > "Horizontal" > "Setup" tab, or tap the "Horizontal" label above the diagram.

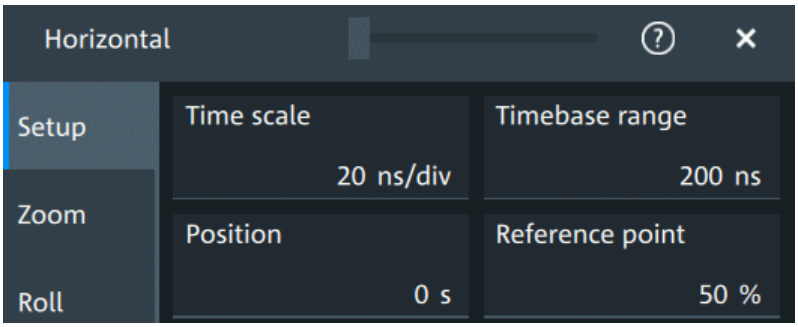

Time scale
Sets the horizontal scale, the time per division, for all waveforms in the time domain, for example, channel and math waveforms.

Increase the scale to see a longer time interval of the waveform. Decrease the scale to see it in more detail. The scale has a point that remains fixed on the screen when the scale value is changing: the reference point.

Remote command:
`TIMebase:SCALe` on page 1135

Timebase range
Sets the time of one acquisition, which is the time across the 10 divisions of the diagram: *Acquisition time = Time scale * 10 divisions*.

Changing the acquisition time changes the time scale, too.

For long timebases, the acquisition progress is shown in the acquisition label.

Remote command:
`TIMebase:RANGe` on page 1135

Position
Defines the time distance between the reference point and the trigger point, which is the zero point of the diagram. The horizontal position is also known as trigger offset.

If you want to see a section of the waveform some time before or after the trigger, enter this time as horizontal position. The requested waveform section is shown around the reference point. Use positive values to see waveform sections after the trigger - the waveform and the diagram origin move to the left.

Remote command:
`TIMebase:HORizontal:POSition` on page 1136

Reference point
Sets the position of the reference point in % of the screen. It defines which part of the waveform is shown.

The reference point marks the rescaling center of the time scale on the screen. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point. If the "Position" is 0, the trigger point is on the reference point.

The reference point is not marked in the diagram.


Remote command:
`TIMebase:REFerence` on page 1136

6.1.3 Zoom settings

The zoom settings are described in Section 9.1, "Zoom", on page 234.

6.1.4 Roll mode

Access: "Menu" > "Horizontal" > "Roll" tab.

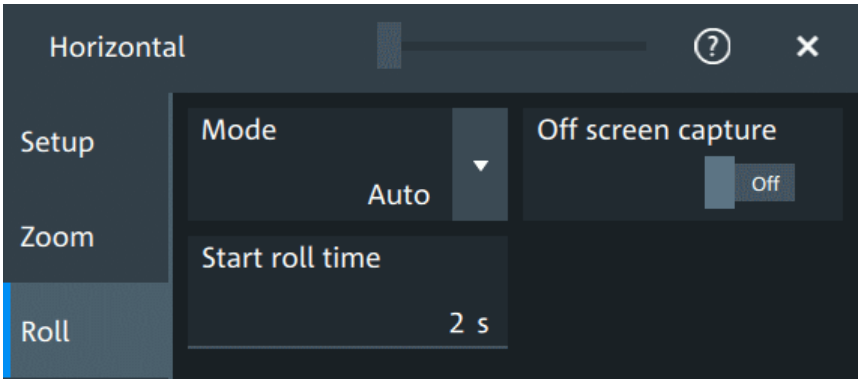

In this dialog, you can define the behavior of the roll mode.

Roll mode and acquisition setup

The settings "SR mode" and "RL mode" can affect the display of the waveform display in roll mode if these settings are set to "Manual". The resulting acquisition time is centered on the screen center.

If the acquisition time (*record length / sample rate*) is longer than the timebase range, the roll mode starts invisibly, outside the right screen edge. The data appears with some delay.


If the acquisition time is shorter than the timebase range, there is a gap from the right screen edge to the beginning of the data. If "SR mode" and "RL mode" are set to "Auto", the instrument optimizes the acquisition settings.

Roll mode settings

Progress bar....128
Mode....128
Start roll time....128
Off screen capture....129

Progress bar

The "Roll" progress bar in the "Acquisition" label shows how the record length is filled. The bar turns green when all samples are acquired, and the record is filled.



Left = incomplete roll waveform
Middle = roll completed with "Off screen capture" = Off
Right = roll completed with "Off screen capture" = On

Mode

Selects, if the roll mode is started automatically by the instrument or if it is turned off.

In roll mode, the instrument shows the waveforms immediately, without waiting for the complete acquisition of the waveform record. If the timebase is slow - at long time scale values - the roll mode saves time waiting for the waveform display. The instrument displays the newly acquired waveform points at the right edge of the display and moves the waveform to the left.

The roll mode has the following restrictions:

- Roll mode disables persistence.
- Event actions are not possible.

The instrument activates the roll mode automatically if the following conditions are fulfilled:

- "Timebase range" exceeds the defined "Start roll time".
- "Acquisition mode" is set to "Sample" or "Peak detect".
- Actual sample rate ≤ 0.05 * sample rate of the instrument, i.e. ≤ 250 Msample/s or 125 Msample/s depending on the number of active channels.
- "N-single/avg count" = 1.
- Fast segmentation is disabled.
- Event actions are disabled.
- All serial buses are disabled.
- All mask tests are disabled.

Measurement statistics evaluate the currently displayed waveform. Therefore, "Measure all events" is enabled automatically in roll mode.

See also: "Roll mode and acquisition setup" on page 127.

Remote command:

`TIMebase:ROLL:ENABle` on page 1137

`TIMebase:ROLL:STATe?` on page 1138

Start roll time

Sets the minimum acquisition time for the automatic start of the roll mode.

The instrument activates the roll mode automatically if the "Timebase range" exceeds the value of the "Start roll time".

Remote command:
`TIMebase:ROLL:MTIMe` on page 1137

Off screen capture
If enabled, the analyzable waveform in roll mode is extended. You can run the roll mode, stop the acquisition after some time, and analyze the data that is on the display and in the unvisible area on the left.

If "Off screen capture" = Off, the analyzable record length is the value that is set in the "Acquisition" > "Setup" tab. The record length determines the length of the displayed waveform.

If "Off screen capture" = On, the whole acquisition memory can be used. After the defined record length is filled, more data is recorded at the left of the completed record length until you stop the acquisition or the acquisition memory is filled.

The current number of recorded data points is shown in the progress bar when the bar is green, or returned by the remote command `ACQuire:ROLLmode:POINts?`. See also: "Roll mode and acquisition setup" on page 127.

The "Roll" progress bar in the "Acquisition" label shows how the record length is filled.

After stopping the acquisition, you can analyze the complete roll waveform, including the invisible part:
- Increase the "Time scale" to see a longer part of the waveform.
- Scroll the waveform: tap and drag the waveform to the right.

If you want to save the waveform, disable "Off screen capture". When the needed data is displayed, save the waveform. Thus, one record length is saved. With active "Off screen capture", the amount of data cannot be limited.


Remote command:
`ACQuire:ROLLmode:OSCapture` on page 1137
`ACQuire:ROLLmode:POINts?` on page 1137

6.1.5 Reference clock

Access: "Menu" > "Horizontal" > "Setup" tab > "Ref clock"

The oven-controlled crystal oscillator (OCXO) produces a 10 MHz internal reference signal with precise and stable frequency. You can output this clock signal for synchronization of other instruments. Conversely, you can also use an external 10 MHz reference signal. The input and output connectors for reference signals are on the rear panel of the instrument.

The toolbar provides a toolbar icon that indicates the status of the external reference clock. See "Ext ref info" on page 71.

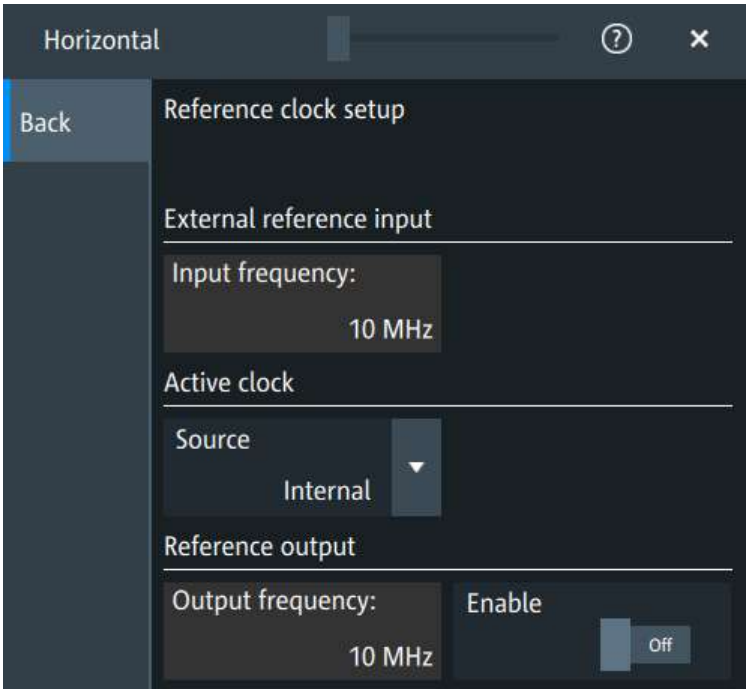

Input frequency
Shows the frequency of the external reference signal. The frequency of the external reference must be 10 MHz.

Active clock: Source
Selects the source of the reference clock: internal reference signal of the OCXO, or an external reference signal.

Remote command:
`SENSe[:ROSCillator]:SOURce` on page 1179

Output frequency
Shows the frequency of the output reference signal. The frequency is always 10 MHz.

Remote command:
`SENSe[:ROSCillator]:OUTPut:FREQuency?` on page 1179

Reference output: Enable
Sends the used reference clock signal to the Ref Out 10MHz connector.

If "Active clock: Source" is set to extern, the external reference signal is output instead of the internal clock.

Remote command:
`SENSe[:ROSCillator]:OUTPut[:ENABle]` on page 1179

6.2 Acquisition


Access: "Menu" > "Acquisition".

Acquisition settings define the processing of the captured samples in the instrument.

6.2.1 About the acquisition system

Sampling and processing

The A/D converter samples the continuous signal under test at specific points in time and captures digital values. The converter is working at a constant rate specified in GHz.

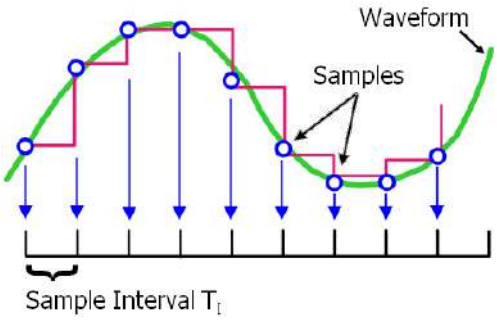

The captured values are processed according to the acquisition settings. The result is a waveform record that contains **waveform samples** and is stored in the **waveform memory**. The waveform samples are displayed on the screen and build up the waveform.

The number of waveform samples in one waveform record is called **record length**. The rate of recording waveform samples - the number of waveform samples per second - is the **sample rate**. The higher the sample rate, the better the resolution is and the more details of the waveform are visible.

Sample rate = 1 / Resolution

The sample rate can be the same as the constant rate of the A/D converter, or higher, or lower. To get a higher sample rate, interpolation is used. Several interpolation methods are available. Other processing methods reduce the sample rate, or build the resulting waveform from several consecutive acquisitions of the signal. These methods are called acquisition modes.

Minimum sample rate and aliasing

A sufficient resolution is essential for correct reconstruction of the waveform. If the signal is undersampled, aliasing occurs - a false waveform is displayed. To avoid aliasing and accurately reconstruct a signal, the sample rate must be at least 3 to 5 times the fastest frequency component of the signal. A higher sample rate increases signal fidelity, increases the chance to capture glitches and other signal anomalies, and improves the zoom-in capabilities.

Interleaving

The MXO 5 with **8 channels** achieves its highest sample rate of 5 Gsample/s by interleaving channels by twos. Interleaving assumes that only one of the paired channels

is used. If the second channel of a pair is used (on display, or as trigger source, math source, or measurement source), the interleaving mode is disabled. Without interleaving, the channels work with 2.5 Gsample/s and reduced bandwidth.

The interleaved channels of an 8-channel oscilloscope are:

- C1 and C5
- C2 and C6
- C3 and C7
- C4 and C8

The **4-channel** MXO 5 is always in interleaving mode, and all 4 channels work with 5 Gsample/s and maximum bandwidth.

6.2.2 Acquisition setup

Access: "Menu" > "Acquisition" > "Setup" tab.

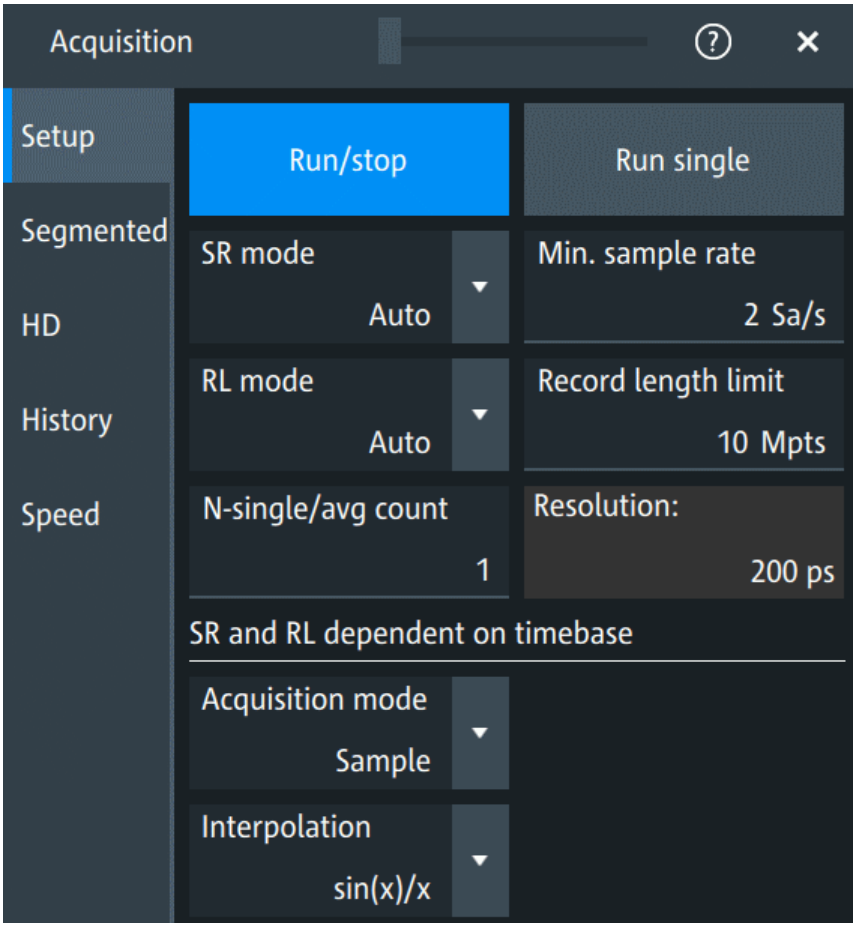


Figure 6-1: Acquisition settings: automatic sample rate and record length

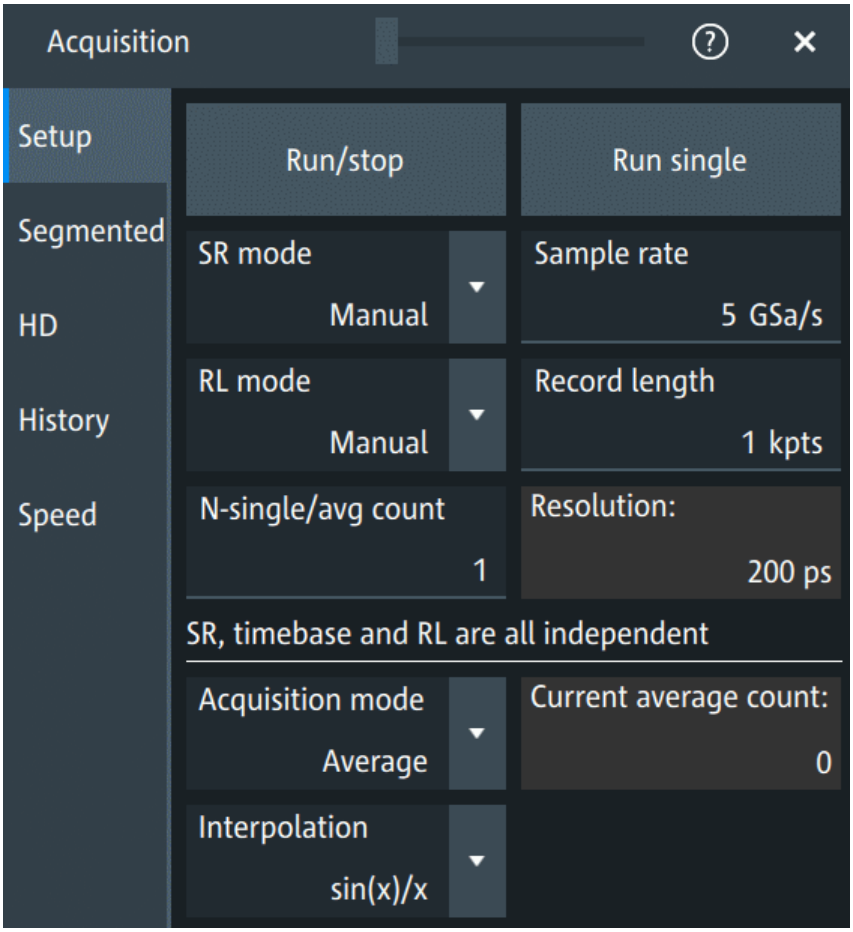


Figure 6-2: Acquisition settings: manual sample rate and record length

Run/stop
Starts and stops the continuous acquisition.

The [Run / Stop] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

As a remote action in a ScopeSync setup, "Run/stop" starts a continuous acquisition on both connected scopes, or stops the acquisition. With active ScopeSync, continuous acquisition is a series of single acquisitions: after each trigger, the acquired waveforms of selected channels are transferred to the leading scope. Only waveforms that are based on the identical trigger event are shown simultaneously on the leading scope. When you stop the acquisition, the ongoing waveform import is completed. There is no waveform or measurement result persistence.

The Run / Stop key and the "Run / stop" tool adapt their function if ScopeSync is active.

Remote command:
`RUN` on page 1134
`STOP` on page 1134

Run single
Starts a defined number of acquisitions.

The [Single] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

To set the number of acquisitions, set "N-single/avg count" in the "Acquisition" setup. The acquisition progress is shown in the acquisition label, see "Progress information" on page 84.

As a remote action in a ScopeSync setup, "Run single" starts a single acquisition on both connected oscilloscopes. It is a real single acquisition, the "N-single/avg count" setting is ignored. The [Single] key and the "Run single" tool adapt their function if ScopeSync is active. Single mode is the preferred acquisition mode in ScopeSync.

Remote command:
`SINGle` on page 1134

SR mode
Defines how the sample rate is set.

The sample rate considers the samples of the ADC, and the processing of the captured samples including interpolation.

"Auto" Sample rate is determined automatically and changes due to instrument internal adjustments due to other setting changes. You can set a minimum sample rate with Min. sample rate.

"Manual" The sample rate is manually defined with Sample rate.

Remote command:
`ACQuire:SRATe:MODE` on page 1143

Min. sample rate
Sets the minimum value of the sample rate for calculation in automatic sample rate mode. It is the sample rate of the processed waveform record including interpolation.

Remote command:
`ACQuire:SRATe:MINimum` on page 1142

Sample rate
Sets the number of waveform points per second in manual sample rate mode. It is the sample rate of the processed waveform record including interpolation.

The sample rate in the dialog differs from the sample rate that is shown in the acquisition label above the diagram. The value in the acquisition label shows the sample rate of the acquisition itself, before interpolation. It is the ADC sample rate or an integer decimated value of the ADC sample rate, which allows you to estimate whether the signal was sufficiently sampled in the acquisition.

If interpolation is used to reach the defined value, it is indicated by "Sample rate (IT)" in the dialog.

Remote command:
`ACQuire:SRATe[:VALue]` on page 1142

RL mode
Selects the mode of the waveform record length adjustment.

The record length is the number of waveform samples that are stored in one waveform record after processing, including interpolation. It determines the length of the displayed waveform.

"Auto" Record length is determined automatically and changes due to instrument internal adjustments due to other setting changes. You can set a maximum record length with Record length limit.

"Manual" The waveform record length is manually defined with Record length.

Remote command:
`ACQuire:POINts:MODE` on page 1141

Record length limit
Sets the maximum value of the record length for calculation in automatic record length mode.

Remote command:
`ACQuire:POINts:MAXimum` on page 1140

Record length
Sets the record length in manual record length mode.

If the record length value is too high in combination with other settings and activated features, the memory is not sufficient to process the data. In this case, a warning information is shown in the dialog.

Remote command:
`ACQuire:POINts[:VALue]` on page 1140
`ACQuire:POMemory?` on page 1141

N-single/avg count
The acquisition and average count has several effects:

- It sets the number of waveforms acquired with "Run single".
- It defines the number of waveforms used to calculate the average waveform. Thus, the instrument acquires sufficient waveforms to calculate the correct average if "Average" is enabled for waveform arithmetic. The higher the value is, the better the noise is reduced.
- It sets the number of acquisitions to be acquired in a fast-segmentation acquisition series, and in the history.
- It is the "Finished" criteria for a mask test.

The setting is read-only if "Segmented" > "Acquire maximum" is "On". See also "Acquire maximum" on page 138.

Remote command:
`ACQuire:COUNt` on page 1139

Resolution
Shows the current resolution.

The resolution is the time between two waveform samples in the waveform record. It considers the processing of the captured samples including interpolation. A fine resolution with low values produces a more precise waveform record. The resolution is the reciprocal of the sample rate.

If interpolation is used to reach the defined value, it is indicated by "Resolution (IT)" in the dialog.

Remote command:
`ACQuire:RESolution?` on page 1141

Acquisition mode
Sets how the waveform is built from the captured samples.

"Sample" Usually, most signals are displayed optimally with this acquisition mode but very short glitches can remain undiscovered by this method.

"Peak detect" The minimum and the maximum of n samples are recorded as waveform points, the other samples are discarded. Thus the instrument can detect fast signal peaks at slow time scale settings that would be missed with other acquisition modes.

"Envelope" Each acquisition is done in peak detection mode, and the minimum and maximum values in a sample interval over some consecutive acquisitions build the envelope. The resulting diagram shows two envelope waveforms: the minimums (floor) and maximums (roof).

"Average" The average is calculated from the data of the current acquisition and a specific number of consecutive acquisitions before. The method reduces random noise. It requires a stable, triggered and repetitive signal.
The number of acquisitions for average calculation is defined with N-single/avg count.
If the waveform is clipped, the instrument shows a distorted average waveform to indicate the clipping. Adjust the vertical scale to avoid the clipping. The acquisition progress is shown in the acquisition label.

Remote command:
`ACQuire:TYPE` on page 1143

Current average count
Shows the current number of acquired waveforms that contribute to the average, for Acquisition mode = "Average".

Remote command:
`ACQuire:AVERage?` on page 1139

Interpolation
Selects the interpolation method.

If the defined sample rate ("Sample rate") is higher than the ADC sample rate, interpolation adds points between the captured samples of the waveform by various mathematic methods. All captured and interpolated points are used in measurements, and they are included in exports. If interpolation of samples is active, it is indicated by "Sample rate (IT)" and "Resolution (IT)".

"Linear" Two adjacent ADC sample points are connected by a straight line, the interpolated points are located on the line. You see a polygonal waveform similar to the real signal, and also the ADC sample points as vertexes.

"sin (x)/x" Two adjacent ADC sample points are connected by a sin(x)/x curve, and also the adjoining sample points are considered by this curve. The interpolated points are located on the resulting curve. This interpolation method is precise and shows the best signal curve.

"Sample/Hold" The ADC sample points are displayed like a histogram. For each sample interval, the voltage is taken from the sample point and considered as constant, and the intervals are connected with vertical lines. Thus, you see the discrete values of the ADC - the measured samples.

Visual interpolation of the waveforms and zoom waveforms on the display is independent of the calculated sample interpolation, and it is not indicated.


Remote command:
`ACQuire:INTerpolate` on page 1140

6.2.3 Segmentation settings

Access: "Menu" > "Acquisition" > "Segmented" tab.

You can acquire a limited number of segments, or the maximum number.

In the R&S ScopeStudio software, acquisition settings and functions that need an acquisition take effect if the channel source is a simulated waveform, created by the generator. If the channel source is loaded from a file, the acquisition-related settings can be imported with the data from the oscilloscope, either as a saveset, or included in a session. Changing imported acquisition-related settings has no effect.

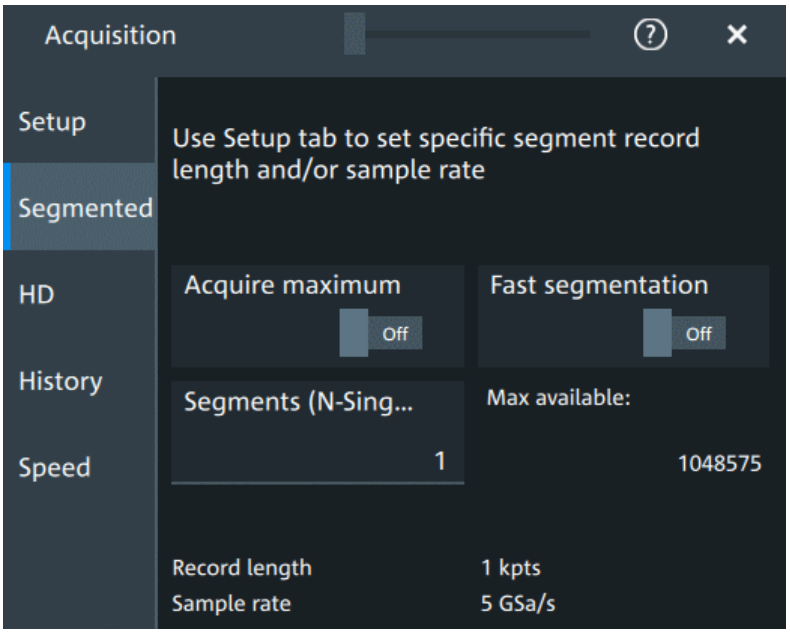

Acquire maximum
The setting takes effect for N-single acquisitions ("Run single"). During continuous acquisition ("Run / stop"), the history is used completely.

If "On", "Segments (N-single)" is set to the maximum number of available segments. Thus, the history is filled completely with an N-single acquisition. "Segments (N-single)" is read-only, you cannot change the value. The number of available segments depends on current the number of active channels, sample rate, record length, and other settings.

If "Off", set the number of segments in "Segments (N-single)", which is the same setting as "N-single/avg count" on the "Setup" tab. Thus you can acquire a fast segmentation acquisition series and history of defined length with "Run single".

You can stop the running acquisition before the series is completed.

The number of acquired waveforms is shown in the "History" dialog, when the history is active.

Remote command:
`ACQuire:SEGMented:MAX` on page 1177

Fast segmentation
If fast segmentation is enabled, the acquisitions are performed as fast as possible, without processing and displaying the waveforms. When acquisition has been stopped, the data is processed and the latest waveform is displayed. Older waveforms are stored in segments. You can display and analyze the segments using the history.

Remote command:
`ACQuire:SEGMented:STATe` on page 1177

Segments (N-single)
See "N-single/avg count" on page 135.

Max available
Shows the maximum number of segments that can be captured with current sample rate and record length settings.

6.2.4 High definition mode

The high definition mode increases the numeric resolution of the waveform signal by using digital filtering, leading to reduced noise. The higher vertical resolution reduces quantization noise and acquires waveforms of higher accuracy with finer details of the signal to be seen. The high definition is also applied to the digital trigger, thus the MXO 5 can trigger with the same high resolution with which they can display signals.

The maximum numeric resolution in high definition mode is 18 bit. The actual value depends on the selected bandwidth. Increasing the bandwidth reduces the resulting digital resolution. For dependencies and details, refer to the MXO 5 specifications.

The number of vertical resolution bits defines the number of vertical levels that the acquisition samples are mapped to (quantization). For example, 16 bits of resolution represent 65536 voltage quantization levels, while 8 bits of resolution represent only

256 voltage levels. The waveform values are recorded with a word length of 16 bit, except for peak detect decimation.

6.2.4.1 High definition settings

Access: "Menu" > "Acquisition" > "HD" tab.



High definition is a special acquisition mode of the oscilloscope. The dialog provides the filter settings.

State
Enables high definition mode, which increases the numeric resolution of the waveform signal.

Remote command:
`HDEFinition:STATe` on page 1178

Bandwidth
Sets the filter bandwidth for the high definition mode.

Increasing the bandwidth reduces the resulting digital resolution. For dependencies and details, refer to MXO 5 specifications.

Remote command:
`HDEFinition:BWIDth` on page 1177

Resolution in bits
Displays the resulting vertical resolution in high definition mode. The higher the filter bandwidth, the lower the resolution.

Remote command:
`HDEFinition:RESolution?` on page 1178

6.2.5 History settings

The history settings are described in Section 9.3.2, "History setup", on page 253.

6.2.6 Speed

Access: "Menu" > "Acquisition" > "Speed" tab.



The "Speed" dialog shows information on the current acquisition performance values of the MXO 5.

You can see the number of "Acquisitions per second", "Average blind time" and the "Percentage of time captured".

6.3 Vertical setup

The controls and parameters of the vertical system adjust the vertical scale and position of the waveform, and the waveform display. The probe settings also belong to the vertical setup.

The signal icons at the bottom of the display show the most important actual settings for each channel.

The signal icon also indicates if the incoming data is clipped before processing, i.e. the input range of the ADC is exceeded.

There are several ways to adjust vertical settings:

- Use the keys and knobs in the Vertical functional block of the front panel to select the channel, to scale the waveform, and to set the position or offset.
  See Section 3.2.4.4, "Vertical controls", on page 51.
- Use the "Vertical" dialog to adjust all vertical settings. See:
  - Section 6.3.2, "Vertical Setup settings", on page 141
  - Section 6.3.4, "Bandwidth settings", on page 146
  - Section 6.4, "Probes", on page 149
  - Section 6.3.6, "Other vertical settings", on page 147
- On the touchscreen, you can adjust the vertical settings directly on the screen:

– Drag one finger vertically on the screen to change the position of the selected channel waveform.
– Spread or pinch two fingers in vertical direction to change the vertical scale of the selected waveform.

6.3.1 About the vertical system

The controls and parameters of the vertical system are used to scale and position the waveform vertically.

Vertical scale and resolution

Vertical scale and vertical position directly affect the resolution of the waveform amplitude. The vertical scale corresponds to the ADC input range. To get the full resolution of the ADC, set up the waveforms to cover most of the height of the diagram.

With an MXO 5, you work with multiple diagrams, and each diagram obtains the full vertical resolution, no matter where the diagram is placed. Therefore, use a separate diagram for each waveform instead of the traditional setup that arranges the waveforms side by side in one diagram.

Bandwidth

For analog applications, the highest signal frequency determines the required oscilloscope bandwidth. The oscilloscope bandwidth should be higher than the maximum frequency included in the analog test signal to measure the amplitude with very little measurement error. To avoid aliasing, the oscilloscope bandwidth should be at least 3 times higher than the maximum frequency included in the signal.


Most test signals are more complex than a simple sine wave and include several spectral components. A digital signal, for example, is built up of several odd harmonics. For digital signals, the oscilloscope bandwidth should be at least 5 times higher than the clock frequency to be measured.

The oscilloscope is not a stand-alone system. You need a probe to measure the signal of interest, and the probe has a limited bandwidth, too. The combination of oscilloscope and probe creates a system bandwidth. To reduce the effect of the probe on the system bandwidth, the probe bandwidth should exceed the bandwidth of the oscilloscope, the recommended factor is 1.5 x oscilloscope bandwidth.

6.3.2 Vertical Setup settings

Access: "Menu" > "Vertical" > "Setup" tab

The "Setup" tab provides all basic vertical settings. The channels are listed in horizontal subtabs. Make sure to select the correct channel tab before you enter the settings.

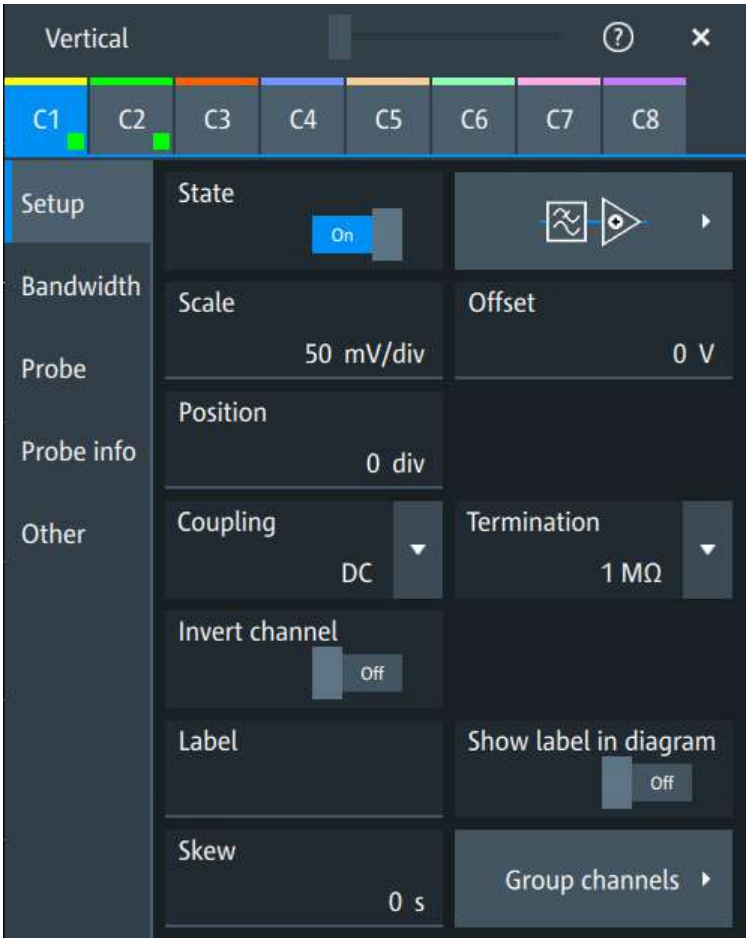

State
Switches the selected channel signal on or off.

The signal icon opens on the signal bar. The waveform of the last acquisition is displayed in the diagram.

Remote command:
`CHANnel<ch>:STATe` on page 1144

Signal flow (graphical button)
Opens a dialog that shows the signal flow as currently configured. In addition, the main settings are shown for information.

Scale
Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The unit depends on the connected probe.

The current value is shown in the signal icon. Vertical scale directly affects the resolution of the waveform amplitude. To get the best resolution of the ADC, set the waveforms to cover most of the height of the diagram.

Remote command:
CHANnel<ch>:SCALe on page 1144

Offset
Sets the offset voltage, which corrects an offset-affected signal. The vertical center of the selected channel is set to the offset value and the vertical scale is adjusted.

The waveform marker indicates the offset value on the vertical scale.

To set the offset automatically, use [Autoset]. The current value is shown in the signal icon.

Use the offset to measure small AC voltages that are overlaid by higher DC voltages. Unlike AC coupling, the DC part of the signal is not lost with offset setting.

If an active probe is connected, the offset limit is defined by the probe. Refer to the documentation of the probe for allowed values.

If a Rohde & Schwarz differential probe is connected, the "Offset" is the common-mode offset. Set the common-mode offset to compensate for a common DC voltage applied to both input sockets (referenced to the ground socket). Thus, you can measure on differential signals with high common mode levels. You can measure the common mode input voltage using the R&S ProbeMeter.

Remote command:
CHANnel<ch>:OFFSet on page 1145

Position
Moves the selected signal up or down in the diagram. While the offset sets a voltage, position is a graphical setting given in divisions.

Remote command:
CHANnel<ch>:POSition on page 1146

Coupling
Sets the filter for the input signal. The coupling determines what part of the signal is used for waveform analysis and triggering.

The selected coupling is shown in the signal icon.

"DC" Passes both DC and AC components of the signal.

"AC" Connection through DC capacitor, removes DC and very low-frequency components. AC coupling is useful if the DC component of a signal is of no interest. The waveform is centered on zero volts. AC coupling is available with termination 1 MΩ.

If AC coupling is set, the attenuation of passive probes has no effect, and voltage is applied to the instrument with factor 1:1. Observe the voltage limits, otherwise you can damage the instrument.

Remote command:
CHANnel<ch>:COUPling on page 1146

Termination
Selects the input impedance of the channel input according to the connected probe.

Connection with 50 Ω termination is used to connect, for example, active probes. Connection with 1 MΩ termination is used to connect standard passive probes.

Remote command:
CHANnel<ch>:COUPling on page 1146

Invert channel
Turns the inversion of the signal amplitude on or off. To invert means to reflect the voltage values of all signal components against the ground level.

Inversion is indicated in the signal icon by a line above the channel name.

If the inverted channel is the trigger source, the instrument triggers on the inverted signal. You can use inversion, for example, to switch the polarity of a differential signal without changing the probe connections.

Remote command:
CHANnel<ch>:INVert on page 1147

Label
Defines a label text. The label is shown on the signal icon. Characters and label length are not resticted.

Remote command:
DISPlay:SIGNal:LABel on page 1147

Show label in diagram
Displays a waveform label at the waveform in the diagram, with the content defined in "Settings" > "Appearance" > "Grid".

See Section 5.3.2, "Grid", on page 103 for details on the content settings.

Remote command:
CHANnel<ch>:SLABel on page 1147

Skew
Sets a skew value to compensate for the delay of the measurement setup or from the circuit specifics that the instrument cannot compensate automatically. It affects only the selected input channel.

Delay differences between channels are caused by the different length of cables, probes, and other sources. Correct deskew values are important for accurate triggering. Signals that are routed over lines with different lengths have a different propagation delay. This delay can lead to a non-synchronous waveform display.

Remote command:
CHANnel<ch>:SKEW:TIME on page 1147

Group channels
Opens a dialog where you can create channel groups that share selected settings. See Section 6.3.3, "Channel groups: linked settings", on page 144.

6.3.3 Channel groups: linked settings

You can assign analog channels to channel groups and select the settings to be linked in a group. Up to four groups are possible, and each channel can be assigned to one channel group.

Access: "Menu" > "Vertical" > "Setup" tab > "Group channels"




Add group
Creates a channel group. Select the analog channels that belong to this group, and define the "Channel group settings" on page 145.

Remote command:
`COUPling<m>:ADD` on page 1151
`COUPling<m>:STATe` on page 1152

Remove group
Deletes the selected channel group.

Remote command:
`COUPling<m>:REMove` on page 1151

Channel group settings
Opens a dialog to select the settings to be synchronized in the group.

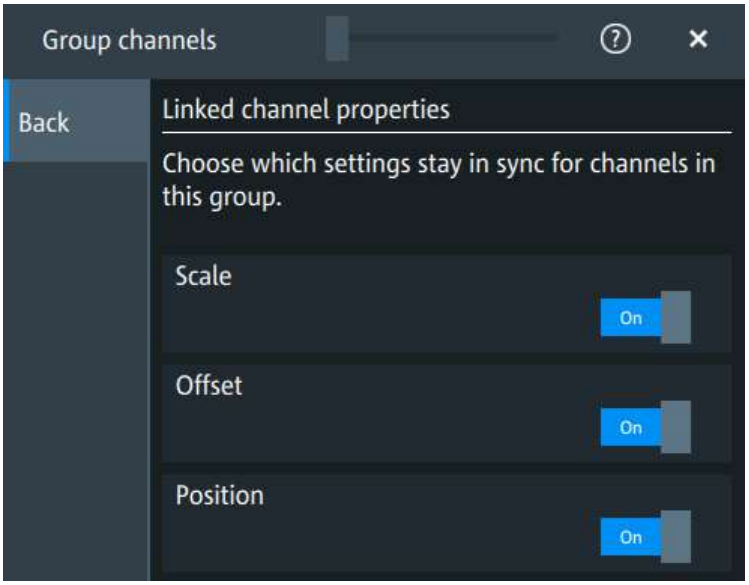

Scale ← Channel group settings
If selected, all channels in the group use the same vertical scale. If you change the scale for one of the channels in the group, it is changed for the other channels, too.

Remote command:
`COUPling<m>:SCALing` on page 1152

Offset ← Channel group settings
If selected, all channels in the group use the same offset. If you change the offset for one of the channels in the group, it is changed for the other channels, too.

Remote command:
`COUPling<m>:OFFSet` on page 1151


Position ← Channel group settings
If selected, all channels in the group use the same vertical position. If you change the position for one of the channels in the group, it is changed for the other channels, too.

Remote command:
`COUPling<m>:POSition` on page 1151

6.3.4 Bandwidth settings

Access: "Menu" > "Vertical" > "Bandwidth" tab

The "Bandwidth" tab provides all settings that affect the bandwidth of the measurement system. The channels are listed in horizontal subtabs. Make sure to select the correct channel tab before you enter the settings.

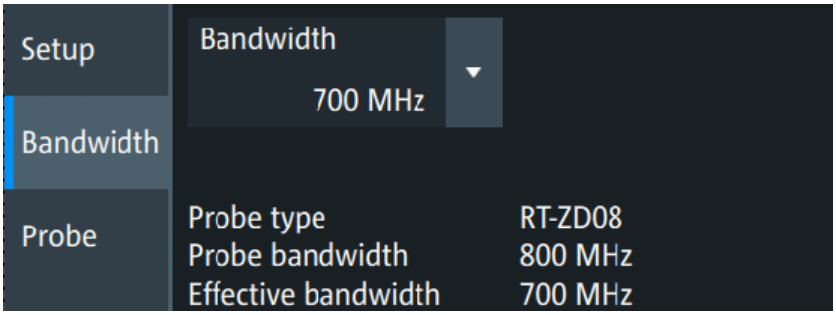

Bandwidth
Sets the bandwidth limit. The specified bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3 dB attenuation. Frequencies above the limit are removed from the signal, and noise is reduced.

The selected bandwidth is shown on the signal icon.

For basic information, see also: "Bandwidth" on page 141.

"Full"	At full bandwidth, all frequencies in the instrument's frequency range are acquired and displayed. Full bandwidth is used for most applications. However, at full bandwidth, the displayed bandwidth can be less than the instrument bandwidth depending on the connected probe, the number of active channels and other settings.
"xx MHz"	Frequencies above the selected limit are removed to reduce noise.

Remote command:
`CHANnel<ch>:BANDwidth` on page 1148

Probe type, Probe bandwidth
Shows the type of the connected probe and its bandwidth. The probe is recognized automatically, or selected in the "Probe" tab. See Section 6.4.1, "Common probe settings", on page 149.


Effective bandwidth
Shows the effective bandwidth of probe and oscilloscope system.

6.3.5 Probe settings

See Section 6.4, "Probes", on page 149.

6.3.6 Other vertical settings

Access: "Menu" > "Vertical" > "Other" tab

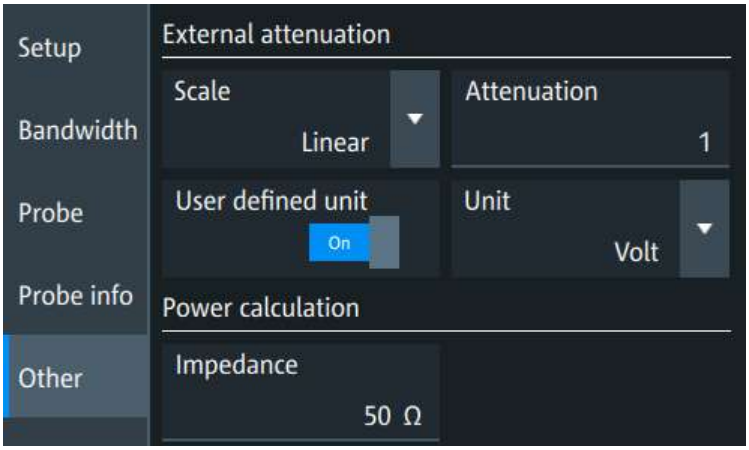

External Attenuation: Scale, Attenuation
Consider a voltage divider that is part of the DUT before the measuring point. The external attenuation is included in the measurement, and the instrument shows the results that would be measured before the divider. External attenuation can be used with all probes.

"Scale" Select linear or logarithmic attenuation scale.

"Attenuation" Enter the attenuation of the voltage divider according to the selected scale. The conversion from linear to logarithmic values depends on the "Vertical unit" of the probe:
For voltage-based unit (V and A):
*attenuation (dB) = 20 * log_{10}(attenuation factor)*
For power-based unit (W):
*attenuation (dB) = 10 * log_{10}(attenuation factor)*

Remote command:
`CHANnel<ch>:EATScale` on page 1148
`CHANnel<ch>:EATTenuation` on page 1149

User defined unit, Unit
If "User defined unit" is enabled, you can select the "Unit" to be used for the channel. This setting overwrites the unit of the probe, which is shown or set in the "Probe" tab.

Remote command:
`CHANnel<ch>:UDUNit` on page 1150
`PROBe<ch>:SETup:ADVanced:UNIT` on page 1150

Impedance
Sets the impedance of the connected probe for power calculations and measurements.

The value is used, for example, for scale calculation in the spectrum diagram.

Remote command:
`CHANnel<ch>:IMPedance` on page 1149

6.4 Probes

With MXO oscilloscopes, you can use various probe types. Mostly these probes are passive and active voltage probes. The instrument can detect many probes and read out the probe-specific parameters, for example, bandwidth and attenuation.


You find all settings that are relevant for the connected probe in the "Vertical" > "Probe" tab. The settings on the "Probe" tab change according to the type of the attached probe. Probes with Rohde & Schwarz probe interface (probe box), and also many other passive voltage probes, are recognized by the instrument. The oscilloscope reads out the main characteristics of the probe and displays them. Other probes cannot be detected, but their characteristics are known to the instrument. These known probes are called "Predefined probes". Probes that are not recognized automatically and not predefined are unknown probes, they require manual setting of measurement unit and attenuation.

The complete characteristic of the connected probe is shown on the "Vertical" > "Probe Info" tab.

6.4.1 Common probe settings

Access: "Menu" > "Vertical" > "Probe" tab

Most the settings in the "Probe" tab are available for all probes. For some probe types, additional settings are needed. These settings are described in the sections for the individual probe types.

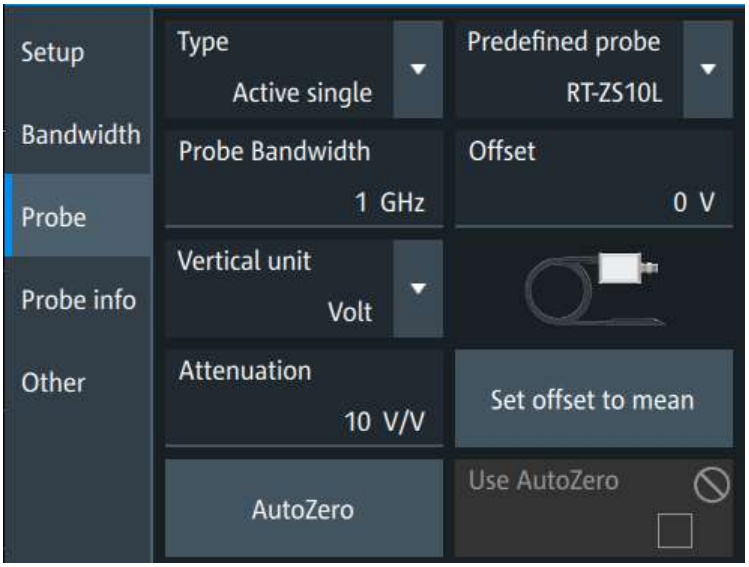

An external attenuation can be set on the "Other" tab, see Section 6.3.6, "Other vertical settings", on page 147.

The common probe settings are:

Predefined probe, Type and Name of the probe 150
Probe bandwidth 150
Offset 150
Vertical unit 150
Attenuation 150
Set offset to mean 151
AutoZero, Use AutoZero 151

Predefined probe, Type and Name of the probe
The model name and type of a detected probe are shown in the dialog.

If the instrument cannot recognize the probe, "None" is indicated in the "Type" and "Predefined probe" lists. Select the used probe "Type", and then the used model in "Predefined probe". The corresponding bandwidth, and attenuation or gain are shown.

If the probe is not detected and not listed as predefined probe, it is an unknown probe. To configure these probes, set "Type" to "User defined". Then select the attenuation or gain in "Predefined probe". You can also adjust the Vertical unit and Attenuation separately.

Remote command:
`PROBe<ch>:SETup:NAME?` on page 1156
`PROBe<ch>:SETup:TYPE?` on page 1157
`PROBe<ch>:SETup:STATe?` on page 1157
`PROBe<ch>:SETup:ATTenuation:DEFProbe` on page 1154

Probe bandwidth
Shows the bandwidth of the connected probe. For probes that are not detected or predefined, set the bandwidth manually.

Remote command:
`PROBe<ch>:SETup:BANDwidth?` on page 1155

Offset
Channel offset that is also set on "Vertical" > "Setup" tab. See "Offset" on page 143.

Vertical unit
Shows the unit of the connected probe if the probe is detected or predefined. For unknown probes, select the unit that the probe can measure.

Remote command:
`PROBe<ch>:SETup:ATTenuation:UNIT` on page 1155

Attenuation
Shows the attenuation of the connected probe if the probe is detected or predefined. If the probe is unknown to the instrument, set the correct attenuation of the probe in "Manual attenuation".

The vertical scaling and measured values are multiplied by this factor so that the displayed values are equal to the actual measured signal values.

Make sure to set the attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.

Remote command:
PROBe<ch>:SETup:ATTenuation[:AUTO]? on page 1153
PROBe<ch>:SETup:ATTenuation:MANual on page 1153

Set offset to mean
Compensates automatically for a DC component of the input signal using the result of a background mean measurement.

The result is shown in "Offset". The function is probe-independent and supports quick and convenient measurements of input signals with different DC offsets. It detects offset values even when the signal is out of the current measurement range. It also sets the zero level to the determined DC offset in the middle of the screen and thus prevents clipping of the waveform.

Remote command:
PROBe<ch>:SETup:OFFSet:TOMean on page 1156

AutoZero, Use AutoZero
Voltage probes can have a zero error. The zero error is the voltage appearing at the probe output when nothing is connected to the probe. If a zero error occurs, it results in an external offset and the waveform is not displayed around 0 V.

To correct the zero error of voltage probes, short the signal pin and the ground pin together. Then select "AutoZero". While the alignment is running, the instrument switches to DC coupling to display the waveform correctly.

To correct the zero error, enable "Use AutoZero".

"AutoZero" uses the current scale and attenuation settings during alignment. If you change these settings, e.g. the vertical scale, repeat "AutoZero".

If a current probe is connected, the function demagnetizes the probe's sensor head and sets the waveform to zero position.

Remote command:
PROBe<ch>:SETup:OFFSet:AZERo on page 1156
PROBe<ch>:SETup:OFFSet:USEautozero on page 1156

6.4.2 Setup for passive probes

Passive probes are the most widely used probes for voltage measurements with oscilloscopes. If a passive probe is connected, the probe attenuation is read out and shown in the "Probe" tab.

Passive probes require compensation, see Section 6.4.9, "Adjusting passive probes", on page 170.

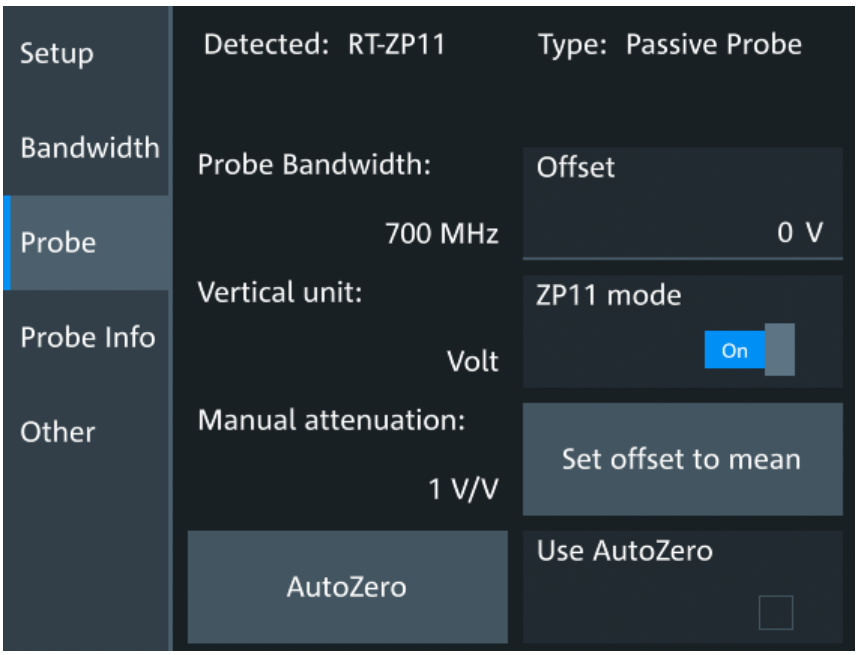


Figure 6-3: Passive probe R&S RT-ZP11, detected by the oscilloscope

The settings for passive probes are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 149 for description of the settings.

For R&S RT-ZP11, a special setting is available.

ZP11 mode
Enable if R&S RT-ZP11 is connected to adjust the probe bandwidth to 700 MHz.

If you use 500 MHz passive probe, e.g. R&S RT-ZP10, disable the setting.

6.4.3 Setup for active voltage probes

Active voltage probes with Rohde & Schwarz probe interface have an integrated data memory that contains identification data and individual probe correction parameters. The MXO 5 can detect these probes and read out the data. Furthermore, the Rohde & Schwarz probe interface provides special features: the micro button and the ProbeMeter.

Active voltage probes that are offered by Rohde & Schwarz but not equipped with a Rohde & Schwarz probe interface are known to the MXO 5 as predefined probes.

6.4.3.1 Settings for the Rohde & Schwarz probe interface

The Rohde & Schwarz probe interface provides special features: the micro button and the ProbeMeter.

MicroButton
The micro button is located on the probe head. Pressing this button, you initiate an action on the instrument directly from the probe. The button is disabled during internal automatic processes, for example, during self-alignment, autoset, and level detection.

Select the action that you want to start from the probe.

"Run continuous"
Starts or stops the acquisition (same as Run / Stop key).

"Run single" Starts a defined number of acquisitions (same as [Single] key).

"Autoset" Starts the autoset procedure (same as Autoset key).

"Auto zero" Starts an auto zero measurement.

"Offset to mean"
Performs an automatic compensation for a DC component of the input signal using the result of a background mean measurement.

"Save image to file"
Saves the current display as image according to the image settings.

"No action" Select this option to prevent unwanted actions due to unintended usage of the micro button.

"Find trigger level" Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

"Probe mode" Only available if a R&S RT-ZM modular probe is connected. Sets the measurement mode of the modular probe.

"Probe setup" Opens the probe setup on the screen.

Remote command:
`PROBe<ch>:SETup:MODE` on page 1158

ProbeMeter
Activates the integrated R&S ProbeMeter on probes with Rohde & Schwarz probe interface.

The R&S ProbeMeter is a voltmeter. It measures DC voltages between the probe tip and ground connection or between the probe tips with very high precision. The measurement runs continuously and in parallel to the measurements of the oscilloscope.

If a single-ended or power rail probe is connected, the ProbeMeter measures DC voltages between the probe tip and ground connection and enables ground-referenced measurements of voltages.

If a differential probe is connected, you can select if the ProbeMeter measures differential and common mode voltages, or single-ended voltages. See "Display" on page 155.

Remote command:
`PROBe<ch>:PMETer:STATe` on page 1160
`PROBe<ch>:PMETer:RESults:SINGle?` on page 1161
`PROBe<ch>:PMETer:RESults:COMMon?` on page 1161
`PROBe<ch>:PMETer:RESults:DIFFerential?` on page 1161
`PROBe<ch>:PMETer:RESults:NEGative?` on page 1162
`PROBe<ch>:PMETer:RESults:POSitive?` on page 1162

6.4.3.2 Setup for R&S RT-ZD differential probes

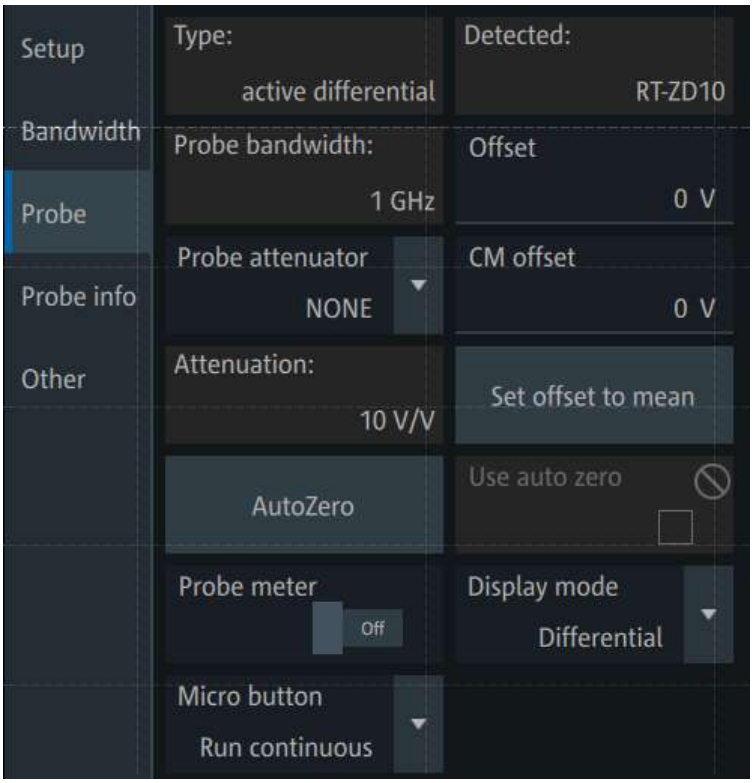


Figure 6-4: Probe setup for active differential probe R&S RT-ZD30

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 149 for description of these settings.

R&S RT-ZD differential probes have the Rohde & Schwarz probe interface and support its functions. For details, see Section 6.4.3.1, "Settings for the Rohde & Schwarz probe interface", on page 152.

The "Offset" is the differential offset, see "Offset" on page 143.

Specific settings for R&S RT-ZD probes are the following:

CM offset
Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Offset compensation is particularly helpful for measurements on differential signals with high common mode levels, for example, current measurements using a shunt resistor. You can measure the common mode input voltage using the R&S ProbeMeter.

Remote command:
`PROBe<ch>:SETup:CMOFfset` on page 1159

Probe attenuator
If you use an external attenuator together with one of the differential active probes R&S RT-ZD10/20/30, select the attenuator used to include its attenuation in the measurements.

Remote command:
`PROBe<ch>:SETup:EPATtenuator` on page 1160

Display
Selects the voltage to be measured by the ProbeMeter of differential active probes:

- "Differential / Common Mode":
  Differential voltage is the voltage between the positive and negative signal sockets. Common mode voltage is the mean voltage between the signal sockets and the ground socket. It measures the voltage level relative to ground, for example, to check the operating voltage window.
- "Single Ended Pos/Neg":
  Measures the voltage between the positive/negative signal socket and the ground. The ProbeMeter always measures the common mode and differential voltages. Single-ended voltages are calculated values:
  $V_p = V_{cm} + 0.5 * V_{in}$ and $V_n = V_{cm} - 0.5 * V_{in}$

Remote command:
`PROBe<ch>:SETup:DISPlaydiff` on page 1160

6.4.3.3 Setup for R&S RT-ZPR power rail probes

R&S RT-ZPR power rail probes are designed for power integrity measurements. They can measure small signals in the millivolt range with large DC-offset components.

R&S RT-ZPR power rail probes have the Rohde & Schwarz probe interface and support the ProbeMeter, but not the micro button. For details, see Section 6.4.3.1, "Settings for the Rohde & Schwarz probe interface", on page 152.

R&S RT-ZPR probes require 50 Ω input termination.

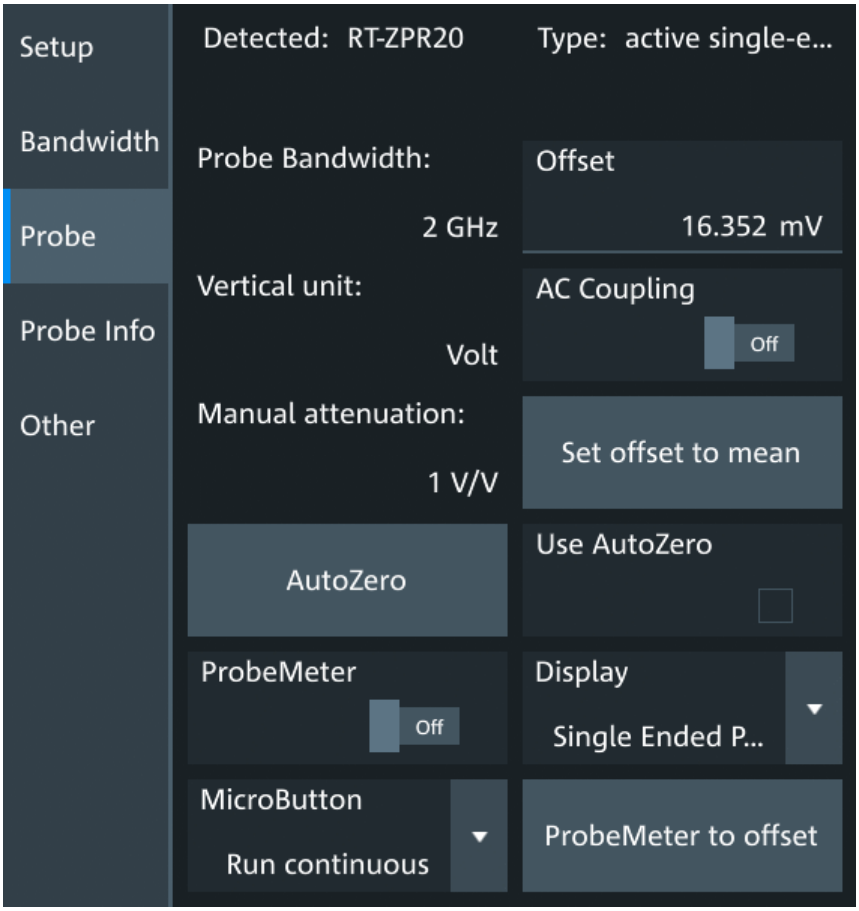


Figure 6-5: Probe setup for power rail probe R&S RT-ZPR20

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 149 for description of these settings.

The "Offset" is the channel offset, see "Offset" on page 143.

Specific settings for R&S RT-ZPR probe are the following:

AC Coupling
Enables AC coupling in R&S RT-ZPR power rail probes, which removes DC and very low-frequency components. The R&S RT-ZPR probe requires 50 Ω input termination, for which the channel AC coupling is not available. The probe setting allows AC coupling also at 50 Ω inputs.

Remote command:
`PROBe<ch>:SETup:ACCoupling` on page 1159

Set offset to ProbeMeter value, ProbeMeter to offset
Sets the measured R&S ProbeMeter value as offset. Thus, the value is considered in measurements.

The function is available if the ProbeMeter is active.

Remote command:
PROBe<ch>:SETup:ADVanced:PMToffset on page 1164

6.4.3.4 Setup for R&S RT-ZHD high-voltage differential probes

R&S RT-ZHD high-voltage differential probes are designed to measure safely high-voltage floating circuits using a grounded oscilloscope. They extend the measurement capability of oscilloscopes to measure electronic power converters, inverters, motor speed controls, switch mode power supplies and many other applications.

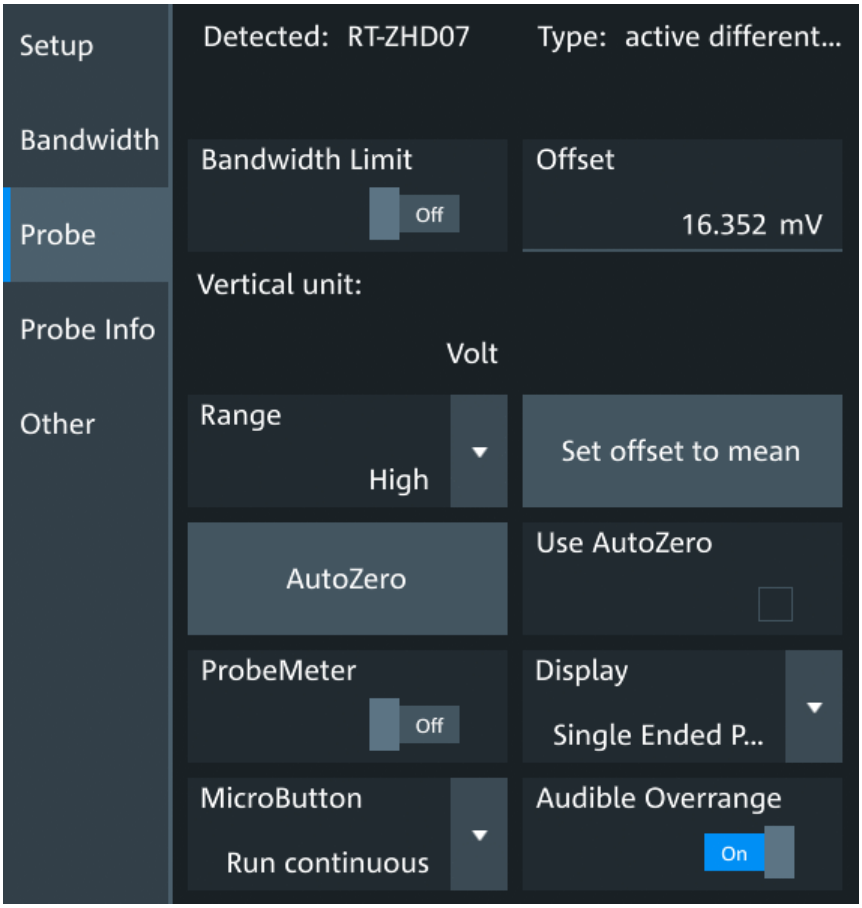


Figure 6-6: Setup for high-voltage differential probe R&S RT-ZHD07

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 149 for description of these settings.

Bandwidth and attenuation values are indicated on the probe control box. The "Offset" is the differential offset, see "Offset" on page 143.

R&S RT-ZHD high-voltage differential probes have the Rohde & Schwarz probe interface and support its functions. For details, see Section 6.4.3.1, "Settings for the Rohde & Schwarz probe interface", on page 152.

Specific settings for R&S RT-ZHD probes are the following:

Bandwidth limit
Activates the lowpass filter in the probe control box. The filter frequency depends on the probe type and is indicated on the probe control box.

You can set the filter on the probe control box or at the oscilloscope.

Remote command:
`PROBe<ch>:SETup:ADVanced:FILTer` on page 1163

Range
Sets the voltage range of an R&S RT-ZHD probe. You can set the range on the probe control box or at the oscilloscope.

"Auto" The voltage range is set only at the oscilloscope with "Scale".

"Low" Sets the lower voltage range of the connected probe. The range values depend on the probe type and are indicated on the probe control box.

"High" Sets the higher voltage range of the connected probe. The range values depend on the probe type and are indicated on the probe control box.

Remote command:
`PROBe<ch>:SETup:ADVanced:RANGe` on page 1163

Audible overrange
Activates the acoustic overrange warning in the probe control box. You can also activate the sound directly on the probe control box.

Remote command:
`PROBe<ch>:SETup:ADVanced:AUDioverload` on page 1163

6.4.4 Setup for current probes

The setup and adjustment of current probes depends on the output connector of the probe: BNC or Rohde & Schwarz probe box.

Current probes R&S RT-ZCxx

The current probes **R&S RT-ZCxx** have BNC connectors. They are known to the MXO 5 as predefined probes, see "Predefined probe, Type and Name of the probe" on page 150. Demagnetizing and zero adjustment is done on the probe, see the probe's User Manual for details. Make sure to demagnetize and adjust the probe before taking measurements.

Current probes R&S RT-ZCxxB

Current probes **R&S RT-ZCxxB** have a Rohde & Schwarz probe interface; they are powered and remotely controlled by the oscilloscope.

When the probe is connected, demagnetization is performed automatically.

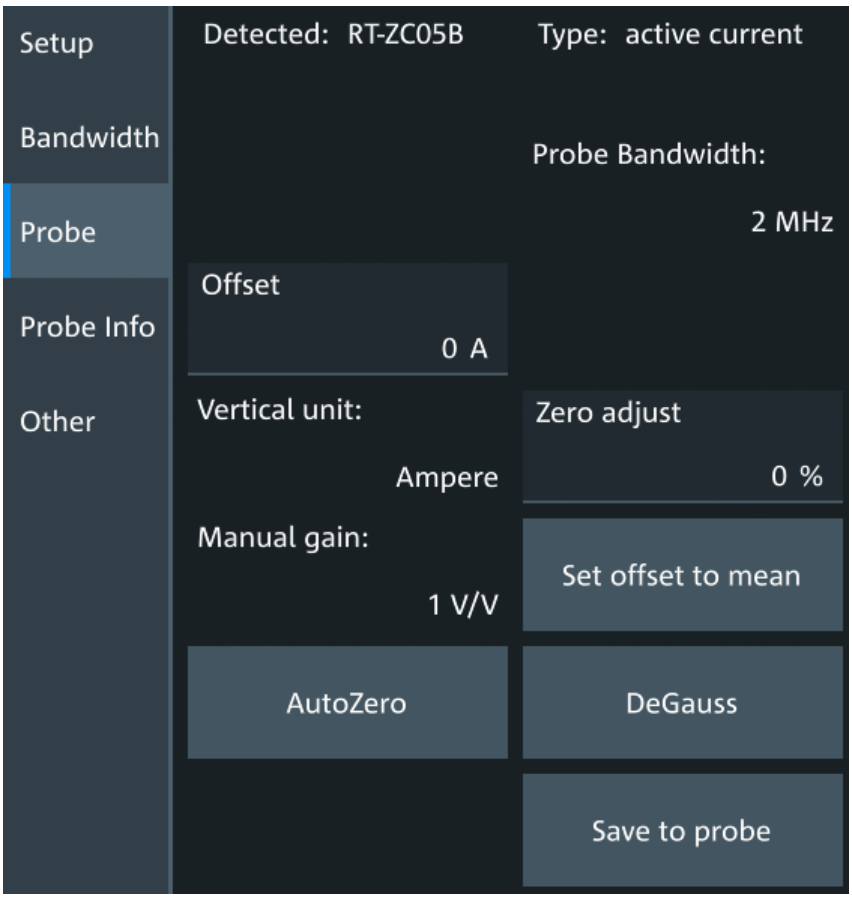


Figure 6-7: Setup for current probe R&S RT-ZC05B

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 149 for description of these settings.

Current probes are adjusted by the following functions.

Gain, Manual gain
Shows the gain of the connected probe if the probe is detected or predefined. For unknown current probes, set the correct gain of the probe.

The vertical scaling and measured values are multiplied by this factor so that the displayed values are equal to the actual measured signal values.

Remote command:
`PROBe<ch>:SETup:GAIN:AUTO?` on page 1168
`PROBe<ch>:SETup:GAIN:MANual` on page 1168

DeGauss
Demagnetizes the core if it has been magnetized by switching the power on and off, or by an excessive input. Always carry out demagnetizing before measurement.

The demagnetizing process takes about one second. During demagnetizing, a demagnetizing waveform is displayed.

Demagnetizing is done automatically when R&S RT-ZCxxB is connected to the oscilloscope, or when "AutoZero" is performed.

Remote command:
PROBe<ch>:SETup:DEGauss on page 1168

Zero adjust
Zero adjust corrects the effect of an offset caused by temperature drift, and compensates for the remanence. The setting is only available if DC coupling is set.

To set the waveform to zero level by the instrument, use "AutoZero". The detected value is displayed.

Alternatively, you can adjust the value manually until the waveform is set to zero level. Make sure to demagnetize the probe before zero adjustment.

The value is given in percent of the maximum range, which is internally defined. The actual setup range depends on the temperature drift, the measured current and other variables, and it can change over time. If you measure high currents, the probe core magnetizes, which impairs the measurement results. Therefore, repeat "AutoZero" before the measurement.

Remote command:
PROBe<ch>:SETup:OFFSet:ZADJust on page 1169

Save to probe
Saves the zero adjust value in the probe box. If you connect the probe to another channel or to another Rohde & Schwarz oscilloscope, the value is read out again, and you can use the probe without further adjustment.

Remote command:
PROBe<ch>:SETup:OFFSet:STPRobe on page 1169

6.4.5 Modular probes


The probes of the R&S RT-ZM family are modular probes. They have a probe head and a probe amplifier connected by a cable, and various probe tip modules and tip cables for different applications. R&S RT-ZM probes are equipped with Rohde & Schwarz probe interface, and provide special features: R&S ProbeMeter, micro button, and a wide offset compensation range.

The following common probe settings are available:

- "Probe bandwidth" on page 150
- "Vertical unit" on page 150
- "Attenuation" on page 150
- "AutoZero, Use AutoZero" on page 151

The R&S RT-ZM probes support the following features of the Rohde & Schwarz probe interface:

- "MicroButton" on page 153
- "ProbeMeter" on page 153

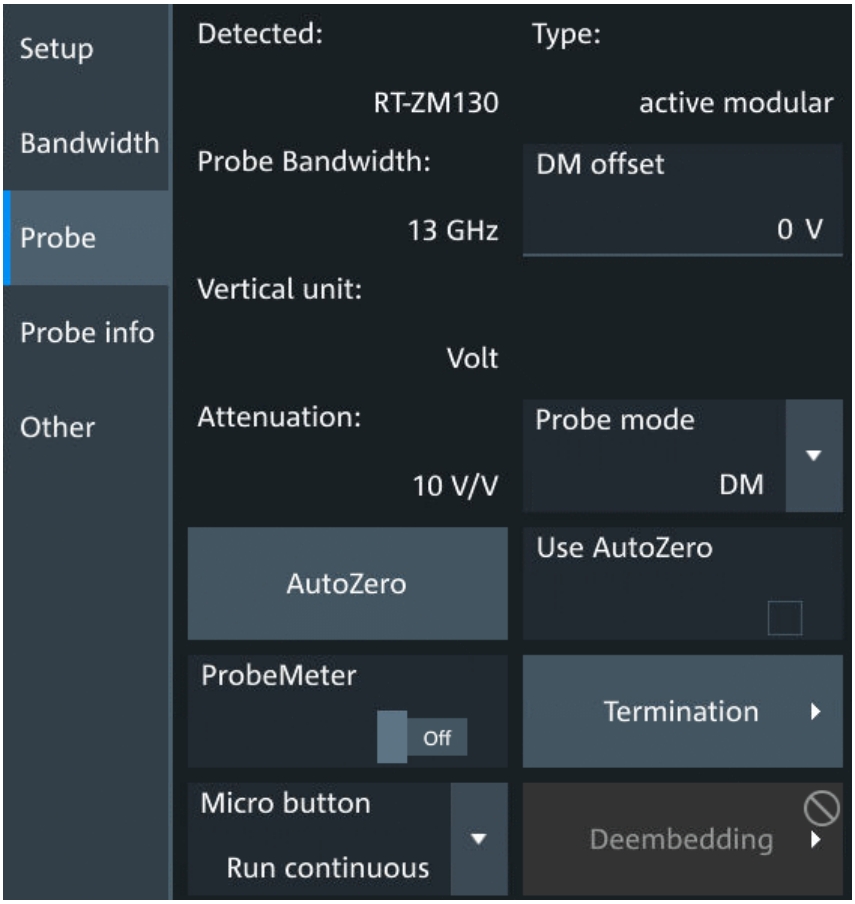

The specific functions of modular probes are described in the following sections:

- Setup parameters of modular probes.....161
- Termination voltage with R&S RT-ZMA40 SMA module.....162

6.4.5.1 Setup parameters of modular probes

Access: "Menu" > "Vertical" > "Probe" tab, and R&S RT-ZM probe is connected to the channel

Probe mode
Sets the measurement mode of modular probes.

The modular probes of the R&S RT-ZM family have a multimode function. You can switch between single-ended, differential and common mode measurements without reconnecting or resoldering the probe. You can set the probe mode in the dialog, and you can assign the probe mode setting to the micro button.

If you use the R&S RT-ZMA30 browser module, only DM measurements are possible because this module has no ground connector.

The measurement modes are:

"DM" Differential-mode input voltage (V_{dm}), the voltage between the positive and negative input terminal.

$$V_{dm} = V_p - V_n$$

"CM" Common-mode input voltage (V_{cm}), the mean voltage between the positive and negative input terminal vs. ground.

$$V_{cm} = \frac{V_p + V_n}{2}$$

"P" Positive single-ended input voltage (V_p). The voltage between the positive input terminal and the ground.

"N" Negative single-ended input voltage (V_N). The voltage between the negative input terminal and the ground.

Remote command:
`PROBe<ch>:SETup:PRMode` on page 1164

DM offset, CM offset, P offset, N offset
Compensate offset voltages. The dialog shows the offset of the selected probe mode.

The offset of the selected probe mode is used as the channel offset and considered automatically for correction. For example, in CM mode, the common mode offset is used as the channel offset.

"DM Offset" Compensates a DC voltage applied between the positive (V_p) and the negative (V_n) input terminal at the probe tip.

"CM Offset" Compensates a DC voltage applied to both input terminals referenced to ground.

"P Offset" Compensates a DC voltage applied to the positive input terminal (V_p) referenced to ground.

"N Offset" Compensates a DC voltage applied to the negative input terminal (V_n) referenced to ground.

Remote command:
`PROBe<ch>:SETup:DMOFfset` on page 1165
`PROBe<ch>:SETup:CMOFfset` on page 1159
`PROBe<ch>:SETup:NOFFset` on page 1166
`PROBe<ch>:SETup:POFFset` on page 1166


6.4.5.2 Termination voltage with R&S RT-ZMA40 SMA module

Access: "Menu" > "Vertical" > "Probe" tab > "Termination"

Termination voltage is relevant if you use the R&S RT-ZMA40 SMA module. The SMA module applies a termination voltage (±4 V) to the DUT to enable measurements against a common mode DC voltage instead of ground. This measurement is required for many digital signal standards.

The termination voltage can be controlled at the oscilloscope. Therefore, connect the V_T terminal of the R&S RT-ZM probe amplifier to the V_T terminal of the R&S RT-ZMA40

SMA module using the red DC lead (see R&S RT-ZM User Manual). The required termination voltage is measured and adjusted automatically, but can also be set manually.

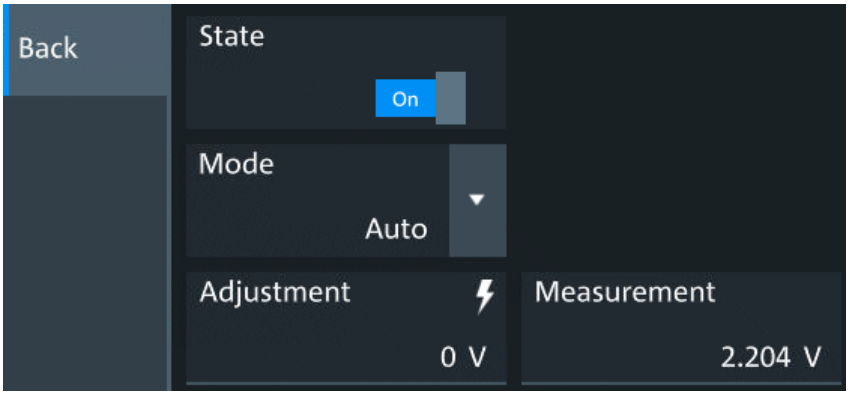

State
Activates control of the termination voltage.

Remote command:
`PROBe<ch>:SETup:TERM:STATe` on page 1167

Mode
Selects the voltage that is used for termination.

In auto mode, the instrument uses the measured common mode voltage for termination. In manual mode, you can enter the voltage to be used for termination. Use the manual mode if you know the common mode voltage of the DUT.

Remote command:
`PROBe<ch>:SETup:TERM:MODE` on page 1167

Adjustment
Sets the voltage to be used for termination correction in manual termination mode.

Remote command:
`PROBe<ch>:SETup:TERM:ADJust` on page 1166

Measurement
Shows the measured common mode voltage.

Remote command:
`PROBe<ch>:SETup:TERM:MEASure?` on page 1167


6.4.6 Setup for optical isolated probe systems

The R&S RT-ZISO is an optical isolated probe system. It consists of the probe head with exchangeable tip module, probe receiver, and scope connector cable. The probe head is permanently connected to the probe receiver by an optical cable, which is an optical isolated cable with multifiber system. To connect the probe receiver to the MXO 5, the scope connector cable is used. This cable provides the required supply voltage and transmits the measurement data and control signals simultaneously.

The power consumption of the probes is monitored by the power monitor. See Section 6.4.8.1, "Power monitor", on page 169 for details.

6.4.6.1 Setup parameters of optical isolated probes

Access: "Menu" > "Vertical" > "Probe" tab > select channel with connected R&S RT-ZISO probe.

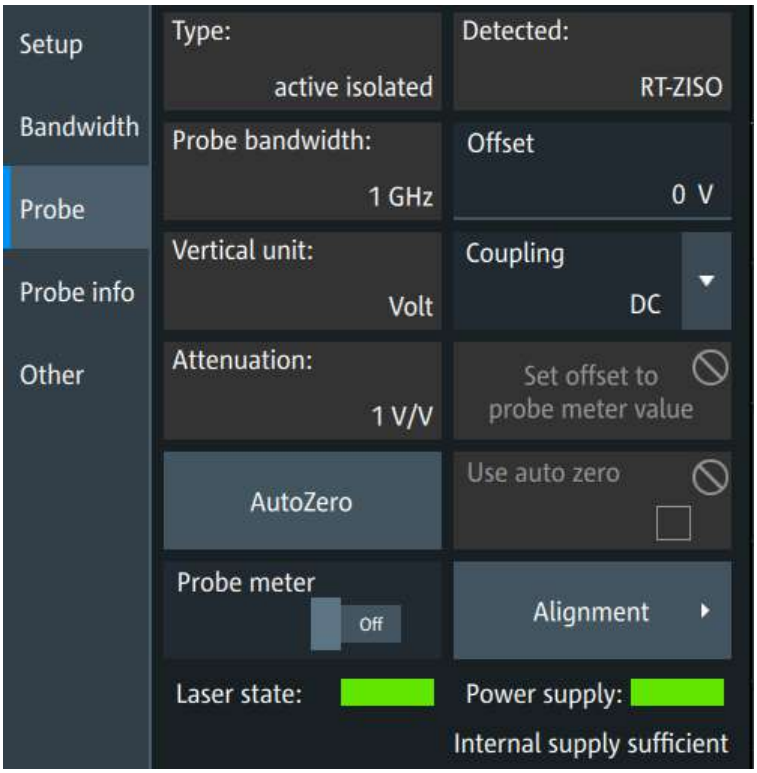

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 149 for description of these settings.

The dialog also shows some vertical settings

- "Offset". See "Offset" on page 143 for details.
- "Coupling". See "Coupling" on page 143 for details.

Set the vertical scale in the "Setup" tab. The probe adjusts its attenuation automatically.

Set offset to ProbeMeter value, ProbeMeter to offset
Sets the measured R&S ProbeMeter value as offset. Thus, the value is considered in measurements.

The function is available if the ProbeMeter is active.

Remote command:
`PROBe<ch>:SETup:ADVanced:PMToffset` on page 1164

Alignment
Opens the "Alignment" dialog. See Section 6.4.6.2, "Alignment", on page 165.

Laser state
The color indicates the current status of the laser:

- Green: the laser is working.
- Yellow: the laser needs service, but is still working.
- Red: defective laser, send it to your Rohde & Schwarz service center.

Remote command:
`PROBe<ch>:SETup:LASer:STATe?` on page 1170

Power supply
Indicates wether the power supply of the R&S RT-ZISO is sufficient.

Details on power consumption are given in the power monitor. See Section 6.4.8.1, "Power monitor", on page 169.


If you use an MXO 5 with more than four R&S RT-ZISO probes, an external power supply is needed. Refer to the documentation of the R&S RT-ZISO probe.

6.4.6.2 Alignment

Access: "Menu" > "Vertical" > "Probe" tab > select channel with connected R&S RT-ZISO probe > "Alignment".

The dialog provides functions to correct the zero point and gain errors.

Align the probe before first use, and when the ambient conditions have been changed, for example, when strong temperature changes occur (> 5°).

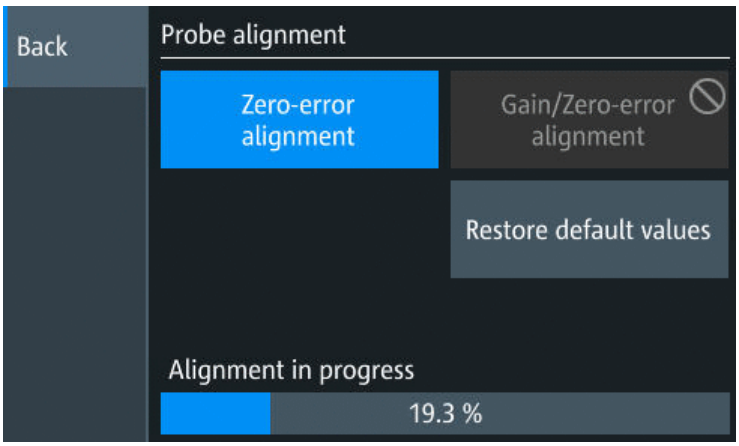

The progress of the alignment process is shown in a progress bar below the buttons.

Zero-error alignment
Performs a self-alignment and corrects the zero point error of the R&S RT-ZISO probe.

Tip modules are not affected by the alignment. Attaching or removing the tip module does not change the process or result.

The alignment can take about a minute, the progress is shown in the dialog. Wait until the process has been finished. After successful alignment, the correction data is automatically written to the non-volatile flash of the probe.

Remote command:
PROBe<ch>:SETup:ALIGnment:ZERO:EXECute on page 1171

Gain/Zero-error alignment
Corrects the zero point error and the gain error of the R&S RT-ZISO probe.

Tip modules are not affected by the alignment. Attaching or removing the tip module does not change the process or result.

The alignment can take about a minute, the progress is shown in the dialog. Wait until the process has been finished. After successful alignment, the correction data is automatically written to the non-volatile flash of the probe.

Remote command:
PROBe<ch>:SETup:ALIGnment:GAIN:EXECute on page 1170


Restore default values
Resets the zero point and gain error correction to the factory default values.

Remote command:
PROBe<ch>:SETup:ADVanced:RDEFaults on page 1171

6.4.6.3 Tip info dialog

Access: "Menu" > "Vertical" > "Probe" > select channel with connected R&S RT-ZISO probe > "Tip info"

The dialog shows the characteristics of the tip modules that are connected to the probes.

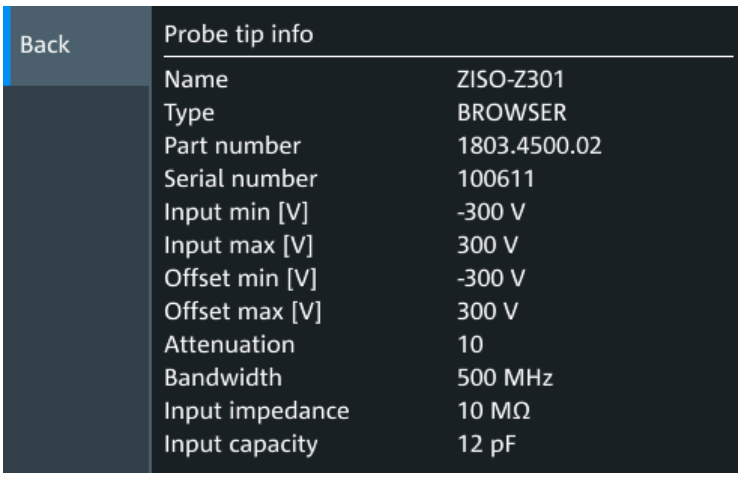

Remote commands:


- PROBe<ch>:SETup:TIPModel:NAME? on page 1171
- PROBe<ch>:SETup:TIPModel:INFO? on page 1172

6.4.7 Probe adapter R&S RT-Z2T


Using the R&S RT-Z2T probe interface adapter, you can connect selected Tektronix active probes with TekProbe BNC™ level II interface.

1. Connect the R&S RT-Z2T adapter to the channel input.
2. Connect the probe to the adapter.

   The instrument identifies the adapter.
3. Select "Menu" > "Vertical" > "Probe" tab.

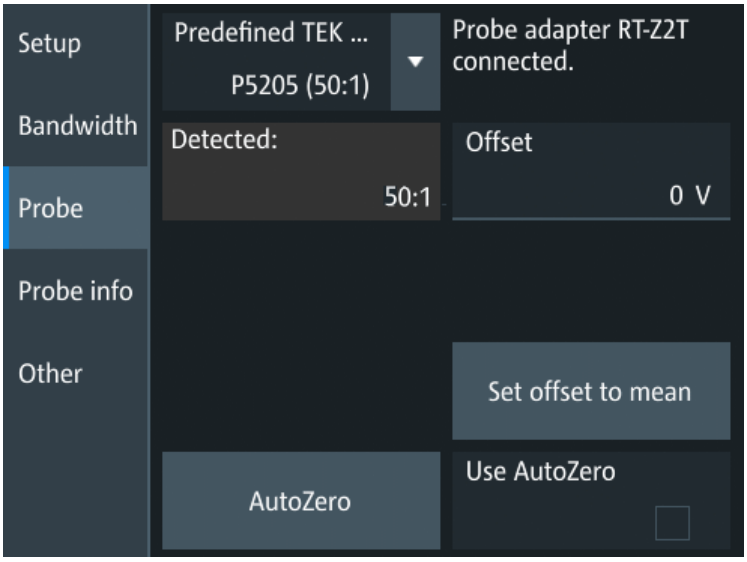

   The dialog shows that the R&S RT-Z2T probe interface adapter is connected, and supported Tektronix probes are listed as "Predefined probe".
4. Select the "Predefined probe" in the "Probe" tab.

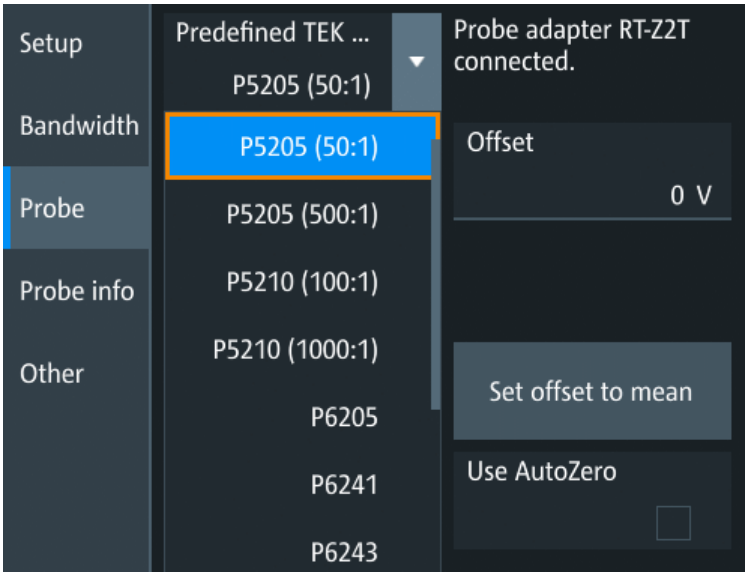

See also: "Predefined probe, Type and Name of the probe" on page 150.


The power consumption of the R&S RT-Z2T probe interface adapter in the "Power monitor": "Vertical" > "Probe Info" > "Power monitor".



6.4.8 Probe info

The dialog shows general information on the connected probe, for example, type, serial number, and part number. Below, electrical characteristics are shown, like bandwidth, attenuation, input capacitance and impedance, voltage and DC offset range.

For a specification of the probe parameters, refer to the specifications document.

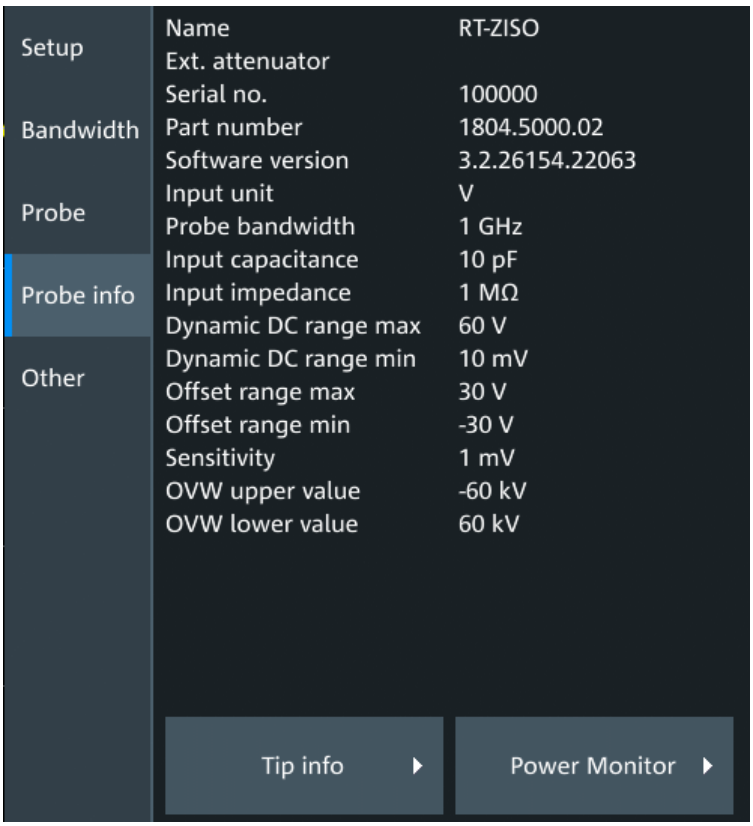

Remote commands: Section 18.9.7.7, "Probe attributes", on page 1173.

6.4.8.1 Power monitor

The power monitor informs about the connected probes and their power consumption. The maximum available power per rail and per single channel are also shown.

If you use several R&S RT-ZISO probes, the power of the instrument can be insuffcient to power all probes. The power monitor notifies you of insufficient power. To solve the problem, you can remove redundant probes, or use the external power supplies to power the R&S RT-ZISO probes.



6.4.8.2 Tip info

The "TIP info" button and dialog are available if an R&S RT-ZISO probe is connected to the channel. See Section 6.4.6.3, "Tip info dialog", on page 166 for details.


6.4.9 Adjusting passive probes

When using a passive probe, you have to compensate it when you connect it to the instrument the first time. Compensation matches the probe cable capacitance to the oscilloscope input capacitance to assure good amplitude accuracy from DC to upper bandwidth limit frequencies. A poorly compensated probe reduces the performance of the probe-oscilloscope system and introduces measurement errors resulting in distorted waveforms and inaccurate results.

Two connector pins are located on the front panel. The ⊥ pin is on ground level. The ⎍ pin supplies a square wave signal with 1 kHz for low frequency probe compensation.

1. Connect the BNC connector of the probe to one of the channel inputs.
2. Connect the probe's ground connector to the ground compensation pin, and the probe tip to the signal pin.
3. Press [Autoset].

   A square wave appears on the display.
4. Adjust the compensation trimmer of the probe to optimum square wave response. For details, refer to the documentation of your probe.

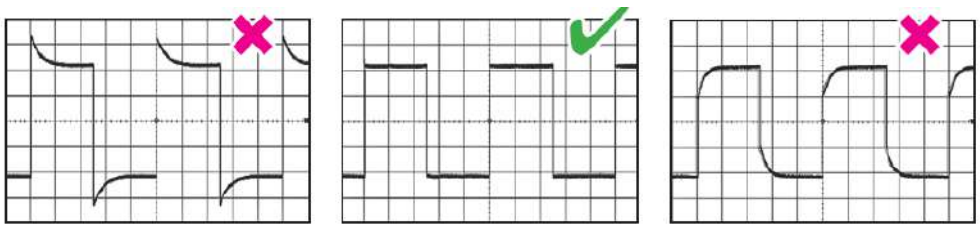

7 Trigger

This section describes the trigger capabilities of the MXO 5.

- Basics of triggering....171
- Common trigger settings....173
- Trigger sequence....175
- Trigger types....177
- Trigger mode / holdoff....200
- Hysteresis....202
- Channel filter....204
- Actions on trigger....205
- Zone trigger....207

7.1 Basics of triggering

Triggering means to capture the interesting part of the relevant waveforms, and the trigger point is the determining point in the waveform record. Choosing the right trigger type and configuring all trigger settings correctly allows you to detect various incidents in analog, digital, and protocol signals.

How the oscilloscope triggers

A trigger occurs if the complete set of trigger conditions is fulfilled. The instrument acquires continuously and keeps the sample points to fill the pre-trigger part of the waveform record. When the trigger occurs, the instrument continues acquisition until the post-trigger part of the waveform record is filled. Then it stops acquiring and waits for the next trigger. When a trigger is recognized, the instrument does not accept another trigger until the acquisition is complete and the holdoff time has expired.

Trigger setup on the oscilloscope

A simple trigger setup includes:

- Source of the trigger signal
- Trigger type selection and setup
- Horizontal position of the trigger, see: Section 6.1.1, "About the horizontal system", on page 125
- Trigger mode

The MXO oscilloscopes provide various trigger types for troubleshooting and signal analysis, for example, edge trigger, glitch trigger, interval trigger, pattern trigger, and much more.

For complex tasks like verifying and debugging designs, advanced trigger settings are available:

- Filter to remove high or low frequencies from the trigger signal.
- Hysteresis to avoid unwanted trigger events caused by noise.
- Holdoff to define exactly which trigger event causes the trigger.

- Trigger sequences to combine several event conditions.

Action on trigger

A trigger can initiate one or more actions, for example, a trigger out signal, saving a screenshot or saving waveform data. All available actions can be initiated at the same time.

Trigger sequence

A trigger sequence joins two or more separate trigger conditions with an optional delay time and an optional reset time or reset condition. Similar setups are also known as multi-step triggers or A/B trigger.

7.1.1 Trigger information

Information on the most important trigger settings is shown in the trigger label above the diagram. If you tap the trigger label, the "Trigger" dialog opens.

If you trigger on a single event, the trigger label shows:

- Trigger source
- Trigger type
- Trigger level
- Trigger mode
- Edge or polarity, and important trigger-type specific settings
- Trigger state

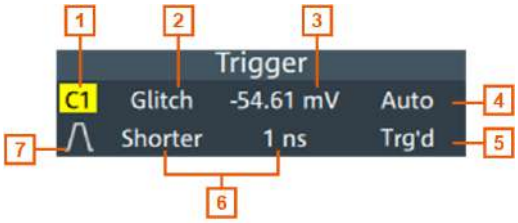


Figure 7-1: Trigger label on the toolbar

1 = Trigger source
2 = Trigger type
3 = Trigger level
4 = Trigger mode
5 = Trigger state
6 = Trigger type specific settings
7 = Trigger slope

If you trigger on a sequence, the trigger label shows:


- Sequence type
- Trigger mode
- Trigger state

7.2 Common trigger settings

Access: "Menu" > "Trigger" > "Setup" tab

The common trigger settings are the trigger sequence, trigger source, the trigger type, and the trigger level. To set the trigger level automatically, use "Find level".

These common settings are set once for a single event. In a trigger sequence, they are specific for each condition.

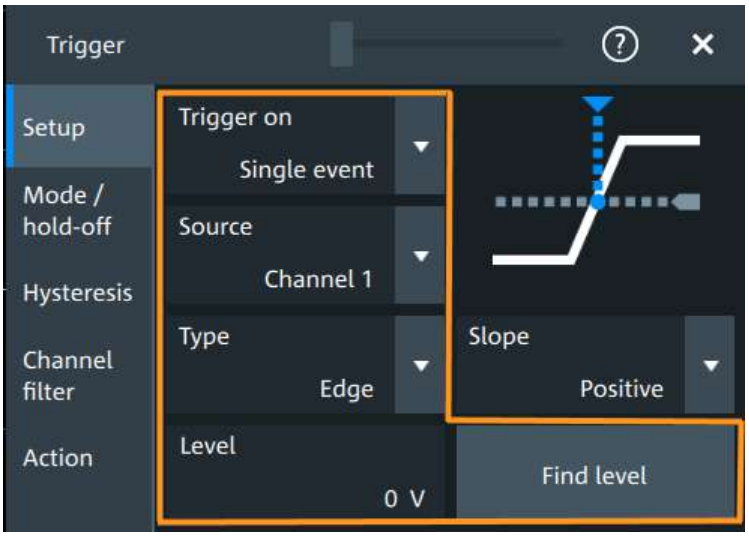

Depending on the trigger type, additional settings are needed. They are explained in the trigger-type specific sections, see Section 7.4, "Trigger types", on page 177.

Trigger on 173
Source 173
Type 174
Level 174
Find level 175

Trigger on
Selects, if you want to trigger on a single event, or on a series of events.

Remote command:
`TRIGger:MEVents:MODE` on page 1180

Source
Selects the source of the trigger signal for the selected trigger event. The trigger source works even if it is not displayed in a diagram.

Available sources depend on the trigger sequence setting. If you trigger on a single event, all inputs can be used as trigger source. If you trigger on a sequence, only analog channels can be set as trigger source for A, B, and R-events.

The trigger source can be:
- Channel <n>: an analog input channel
- Extern: external analog signal connected to the external trigger input. For the external trigger source, the analog edge trigger is available.

- Line: The instrument generates the trigger from the AC power input and synchronizes the signal to the AC power frequency. Use this source if you want to analyze signals related to the power line frequency, such as lighting equipment and power supply devices. For the line trigger source, the edge trigger type is available.
- Digital channels D0 to D15
  Requires option R&S MXO5-B1. Digital channels are only available for triggering on single event. Available trigger types are: edge, width, timeout, state and pattern.
- Serial buses
  If one or more serial protocol options are installed, you can trigger on various conditions in the bus signal. If the hardware trigger is supported for a protocol, triggering on single event is possible. For all protocols, the software trigger is supported in a "A → Serial bus". hardware and software trigger have different trigger settings.

For the state trigger, this source is the "Clock source", the clock signal.

For the setup & hold trigger, this source is the "Data source", the data signal.

Remote command:
`TRIGger:EVENt<ev>:SOURce` on page 1182

Type
Selects the trigger type. In a trigger sequence, the trigger type is set for each condition.

The current trigger type is shown on the button and in the trigger label above the diagram.

The following trigger types are available:
- Edge trigger, see page 178
- Glitch trigger, see page 180
- Width trigger, see page 182
- Runt trigger, see page 183
- Window trigger, see page 185
- Timeout trigger, see page 187
- Interval trigger, see page 188
- Slew rate trigger, see page 190
- Setup & Hold, see page 192
- State trigger, see page 194
- Pattern trigger, see page 195

If the external trigger input is used as the trigger source, the analog edge trigger is the only available trigger type.

For digital channels, the edge, width, timeout, state and pattern trigger are available.

Remote command:
`TRIGger:EVENt<ev>:TYPE` on page 1181

Level
Sets the voltage level or threshold for the trigger.

You can also drag the trigger level marker on the display, or turn the [Level] knob. To set the trigger level to 50% of the signal amplitude, press the [Level] knob.

For the setup & hold trigger, this level sets the voltage level for the data signal. At this level, the setup and hold time are measured.

For the timeout trigger, the trigger level is the threshold for the high and low signal states.

Runt, window and slew rate triggers require two trigger levels (upper and lower), which are defined as specific settings.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181
`TRIGger:ANEDge:LEVel` on page 1185 (for external trigger source)

Find level
Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

The function is not available for trigger sources "Extern" and "Line".

Remote command:
`TRIGger:FINDlevel` on page 1182

7.3 Trigger sequence

With MXO 5, you can trigger on a single trigger event, or on a sequence of events. A trigger sequence consists of at least two event conditions and additional conditions defining when the trigger occurs.

All trigger sequences require that analog input channels C<n> are set as trigger source for the A-trigger. The instrument checks all trigger settings for compatibility and adjusts them if they do not fit.

The following trigger types are only available for triggering on single event:

- Setup & Hold
- State
- Pattern

A → B → R sequence

The trigger sequence "A → B → R", for example, consists of two subsequent events: A-trigger and B-trigger with optional B-trigger delay and count. In addition, an optional reset condition R can be configured: timeout or R-trigger condition. A-, B-, and R-triggers are configured in the same way.

After the A-trigger conditions have been met, and an optional delay has passed, the B-trigger with independent conditions is enabled. The instrument waits until one or a specified number of B-trigger conditions occur. If the reset condition is not fulfilled, the latest B-trigger causes the trigger event, and then the sequence starts again. The B-trigger can only cause the trigger event if it occurs after the A-trigger and after the delay time.

If you expect, for example, an irregular B-trigger, you can configure a reset condition to restart the sequence. The reset condition can be a simple timeout, and/or a reset event that is defined in the same way as the A- and B-trigger conditions.

7.3.1 Sequence setup

Access: "Menu" > "Trigger" > "Setup" tab > "Trigger on" = "Sequence"

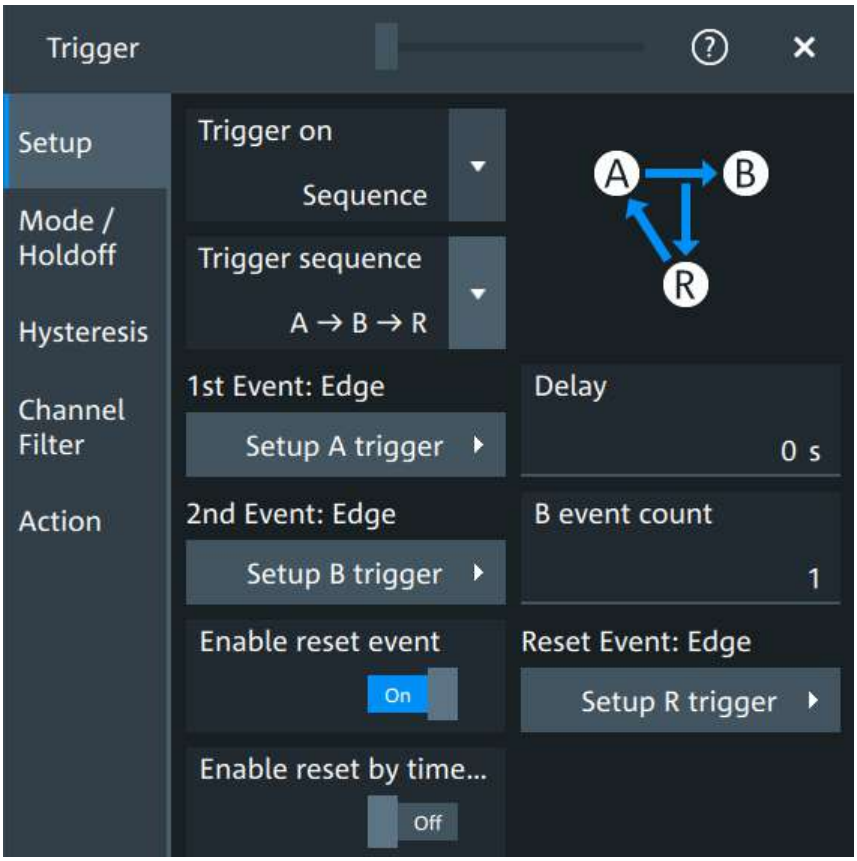


Figure 7-2: Trigger setup dialog with selected A → B → R sequence

Trigger sequence
Selects the type of the trigger sequence.

"A → B → R" Triggers if all conditions of A- and B-events, as well as additional delay and count, and optional reset timeout and/or R-event conditions are fulfilled.
B-trigger and R-trigger are configured in the same way as the A-trigger. You can configure a delay between the A- and B-trigger, and define a number of fulfilled B-trigger conditions to be ignored. The reset condition R can be a timeout or a trigger condition, or a combination of both.

"A → Zone Trigger" Triggers if the conditions of the A-event and the zone trigger are fulfilled.
See Section 7.9, "Zone trigger", on page 207

"A → Serial bus" Triggers if the conditions of the A-event and the serial bus are fulfilled.
See Section 14.1.6, "Trigger", on page 550.

Remote command:
TRIGger:MEVents:AEVents on page 1183

Delay
Sets the time that the instrument waits after an A-trigger until it recognizes B-triggers.

Remote command:
TRIGger:MEVents:SEQuence<se>:DELay on page 1184

B event count
Sets the number of B-trigger conditions to be fulfilled after an A-trigger. The last B-trigger causes the trigger event. The waiting time for B-triggers can be restricted with a reset condition: timeout or reset event.

Remote command:
TRIGger:MEVents:SEQuence<se>:COUNt on page 1183

Enable reset event
If enabled, the trigger sequence is restarted by the R-trigger condition if the specified number of B-triggers does not occur before the R-trigger conditions are fulfilled.

Remote command:
TRIGger:MEVents:SEQuence<se>:RESet:EVENt on page 1184

Enable reset by time, Reset timeout
If reset timeout is enabled, the instrument waits for the "Reset timeout" time for the specified number of B-triggers. If no trigger occurs during that time, the sequence is restarted with the A-trigger.

Remote command:
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout[:ENABle] on page 1185
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME on page 1184

7.4 Trigger types

- Edge trigger....178
- Edge trigger on external trigger source....179
- Glitch trigger....180
- Width trigger....182
- Runt trigger....183
- Window trigger....185
- Timeout trigger....187
- Interval trigger....188
- Slew rate trigger....190
- Setup & Hold....192


- State trigger....194
- Pattern trigger....195
- Line trigger....200

7.4.1 Edge trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Edge"

The edge trigger is the most common trigger type. The trigger occurs when the signal from the trigger source passes the trigger level in the specified direction (slope).

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

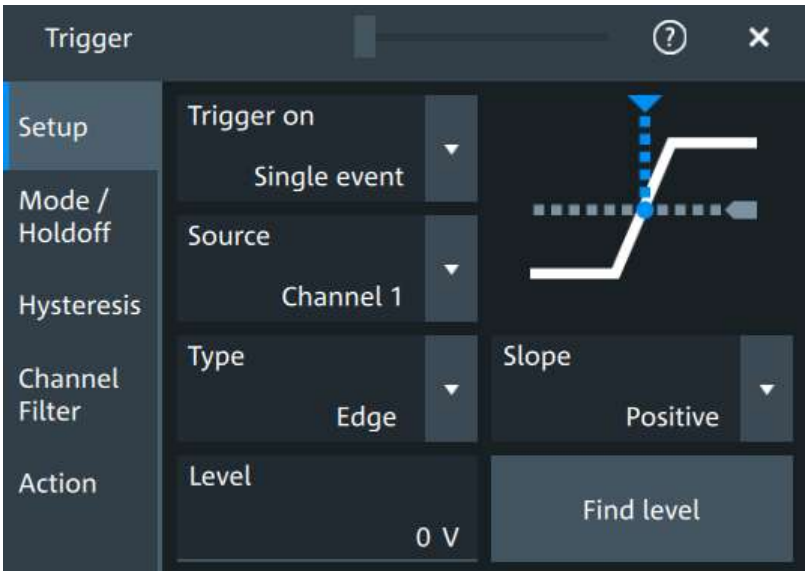

Level
See "Level" on page 174.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181

Slope
Sets the edge direction for the trigger.

"Positive"	Selects the rising edge, which is a positive voltage change.
"Negative"	Selects the falling edge, which is a negative voltage change.
"Either"	Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.


Remote command:
`TRIGger:EVENt<ev>:EDGE:SLOPe` on page 1185

7.4.2 Edge trigger on external trigger source

Access: "Menu" > "Trigger" > "Setup" tab > "Source" = "Extern" > "Type = Analog Edge"

If an external trigger signal is connected to the Trigger In connector, and the trigger source is set to "Extern", the analog edge trigger is available. Triggering on an external source is only possible if you trigger on a single event but not for sequences.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

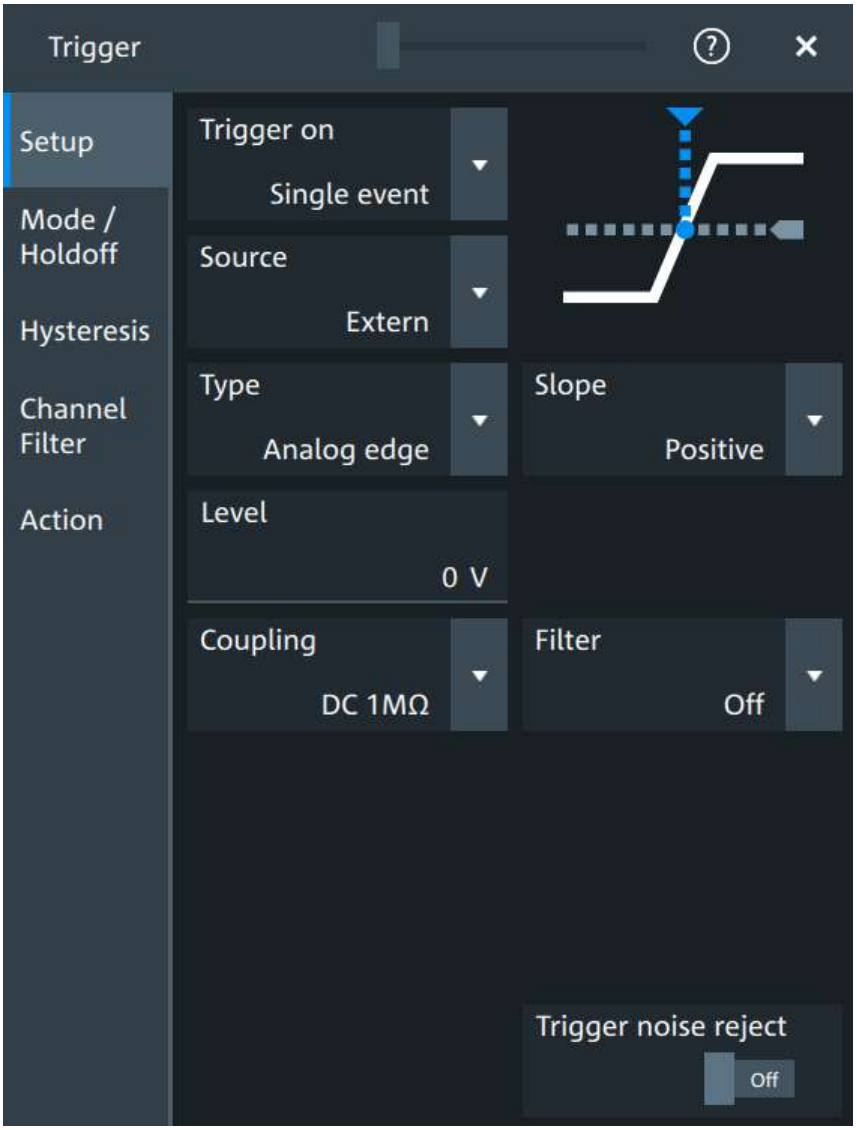

The "Slope" and "Level" are the same settings as for the edge trigger, see:

- "Level" on page 174
- "Slope" on page 178

Specific settings for the analog edge trigger are the following:

Coupling
Sets the connection of the external trigger signal, i.e. the input impedance and a termination. The coupling determines what part of the signal is used for triggering.

"DC 50 Ω" Connection with 50 Ω termination, passes both DC and AC components of the signal.

"DC 1 MΩ" Connection with 1 MΩ termination, passes both DC and AC components of the signal.

"AC 1 MΩ" Connection with 1 MΩ termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

Remote command:
`TRIGger:ANEDge:COUPling` on page 1186

Filter, Cut-off
Selects the filter mode for the external trigger signal, and sets the cut-off frequency.

"Off" The trigger signal is not filtered.

"LF reject" Frequencies lower than the "Cut-off" frequency are rejected, higher frequencies pass the filter.

"RF reject" Frequencies higher than the "Cut-off" frequency are rejected, lower frequencies pass the filter.

Remote command:
`TRIGger:ANEDge:FILTer` on page 1186
`TRIGger:ANEDge:CUToff:HIGHpass` on page 1186
`TRIGger:ANEDge:CUToff:LOWPass` on page 1187

Trigger noise reject
Enables an automatic hysteresis on the trigger level to avoid unwanted trigger events caused by noise.

Remote command:
`TRIGger:ANEDge:NREJect` on page 1187

7.4.3 Glitch trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Glitch"

The glitch trigger detects pulses shorter or longer than a specified time. It identifies deviation from the nominal data rate and helps to analyze causes of even rare glitches and their effects on other signals.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.



Level
See "Level" on page 174.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181

Polarity
Sets the polarity of a pulse, which is the direction of the first pulse slope.

"Positive"	Selects positive going pulses, the width is defined from the rising to the falling slopes.
"Negative"	Selects negative going pulses, the width is defined from the falling to the rising slopes.
"Either"	Selects both positive and negative going pulses.

Remote command:
`TRIGger:EVENt<ev>:GLITch:POLarity` on page 1187
`TRIGger:EVENt<ev>:RUNT:POLarity` on page 1191

Range
Selects how the time limit of the runt pulse is defined.

Remote command:
`TRIGger:EVENt<ev>:GLITch:RANGe` on page 1188

Width
Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value, depending on the value set with "Range".

You need to know the expected pulse widths of the circuit to set the glitch width correctly.


Remote command:
`TRIGger:EVENt<ev>:GLITch:WIDTh` on page 1188

7.4.4 Width trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Width"

The width trigger compares the pulse width (duration) with given time limits. It detects pulses with an exact pulse width, pulses shorter or longer than a given time, and also pulses inside or outside the allowable time range. The pulse width is measured at the trigger level.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

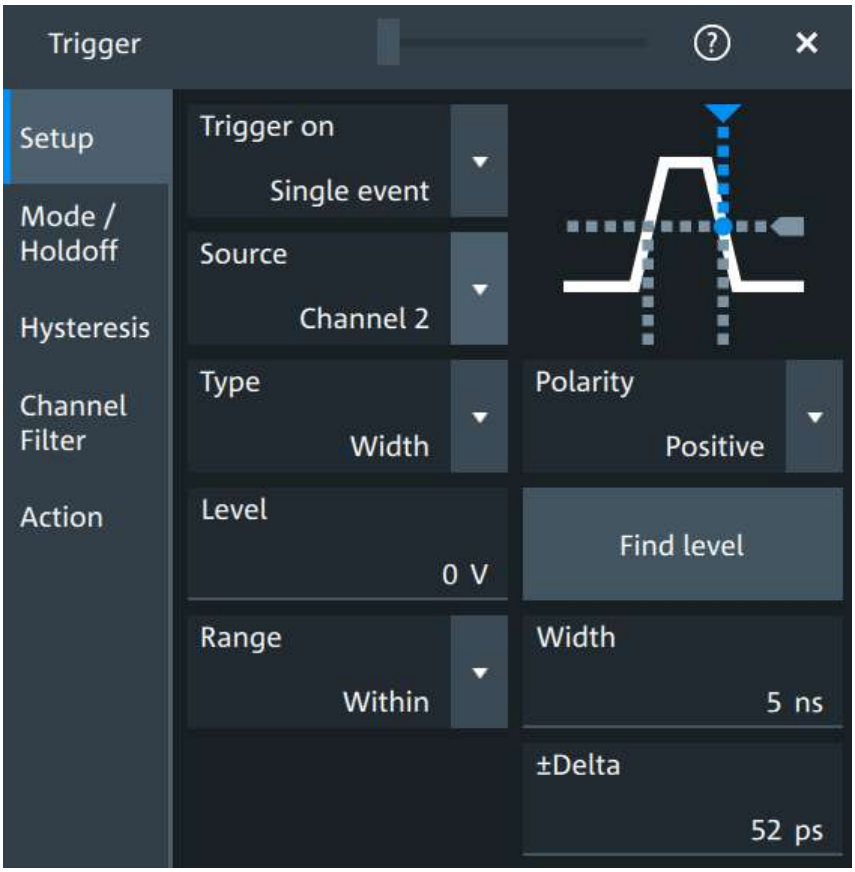

Level
See "Level" on page 174.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181

Polarity
Sets the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Selects positive going pulses, the width is defined from the rising to the falling slopes.

"Negative" Selects negative going pulses, the width is defined from the falling to the rising slopes.

"Either" Selects both positive and negative going pulses.

Remote command:
`TRIGger:EVENt<ev>:WIDTh:POLarity` on page 1189

Range
Selects how the range of a pulse width is defined.

"Longer" Triggers on pulses longer than the given "Width".

"Shorter" Triggers on pulses shorter than the given "Width".

"Within" Triggers on pulses inside a given range. The range of the pulse width is defined by "±Delta" related to "Width".

"Outside" Triggers on pulses outside a given range. The range definition is the same as for "Within" range.

Remote command:
`TRIGger:EVENt<ev>:WIDTh:RANGe` on page 1189

Width
For the ranges "Within" and "Outside", the width defines the center of a range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", the width defines the maximum and minimum pulse width, respectively.

Remote command:
`TRIGger:EVENt<ev>:WIDTh:WIDTh` on page 1189

±Delta
Defines a range around the width value.

The combination "Range" = "Within" and "±Delta" = 0 triggers on pulses with a pulse width that equals "Width".

The combination "Range" = "Outside" and "±Delta" = 0 means to trigger on pulse widths ≠ "Width".

Remote command:
`TRIGger:EVENt<ev>:WIDTh:DELTa` on page 1188


7.4.5 Runt trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Runt"

A runt is a pulse lower than normal in amplitude. The amplitude crosses the first threshold twice in succession without crossing the second one. For example, this trig-

ger can detect logic, digital, and analog signals remaining below a specified threshold amplitude because I/O ports are in undefined state.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

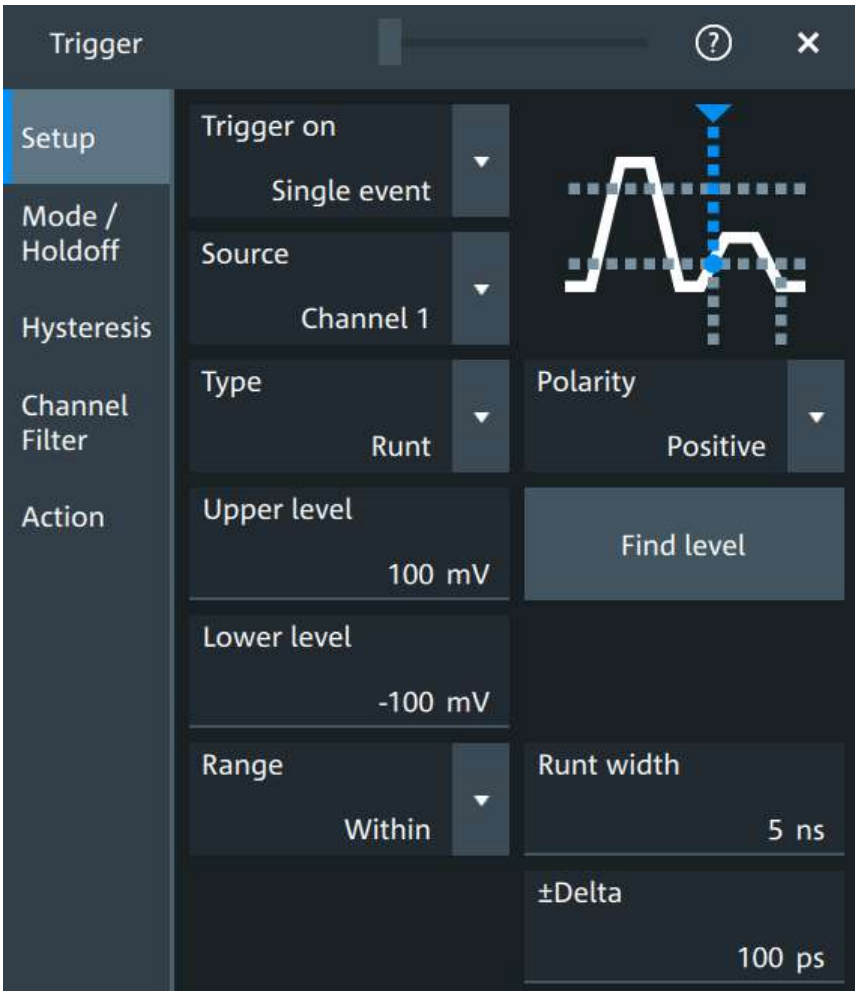

Polarity
Sets the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Selects positive going pulses, the width is defined from the rising to the falling slopes.

"Negative" Selects negative going pulses, the width is defined from the falling to the rising slopes.

"Either" Selects both positive and negative going pulses.

Remote command:
`TRIGger:EVENt<ev>:GLITch:POLarity` on page 1187
`TRIGger:EVENt<ev>:RUNT:POLarity` on page 1191

Upper level
Sets the upper voltage limit.

Remote command:
TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer on page 1190

Lower level
Sets the lower voltage limit.

Remote command:
TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer on page 1190

Range
Selects how the time limit of the runt pulse is defined.

"Any runt"	Triggers on all runts fulfilling the level condition, without time limitation.
"Longer"	Triggers on runts longer than the given "Runt width".
"Shorter"	Triggers on runts shorter than the given "Runt width".
"Within"	Triggers if the runt length is inside a given time range. The range is defined by "Runt width" and "±Delta".
"Outside"	Triggers if the runt length is outside a given time range. The range definition is the same as for "Within" range.

Remote command:
TRIGger:EVENt<ev>:RUNT:RANGe on page 1192

Runt width
For the ranges "Shorter" and "Longer", the runt width defines the maximum and minimum pulse width, respectively.

For the ranges "Within" and "Outside", the runt width defines the center of a range which is defined by "±Delta".

Remote command:
TRIGger:EVENt<ev>:RUNT:WIDTh on page 1192

±Delta
Defines a range around the runt width value.

Remote command:
TRIGger:EVENt<ev>:RUNT:DELTa on page 1191


7.4.6 Window trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Window"

The window trigger checks the signal run in relation to a "window". The window is formed by the upper and lower voltage levels. The trigger condition is fulfilled, if the waveform enters or leaves the window, or if the waveform stays inside or outside for a time longer or shorter than specified.

With the window trigger, you can display longer transient effects.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

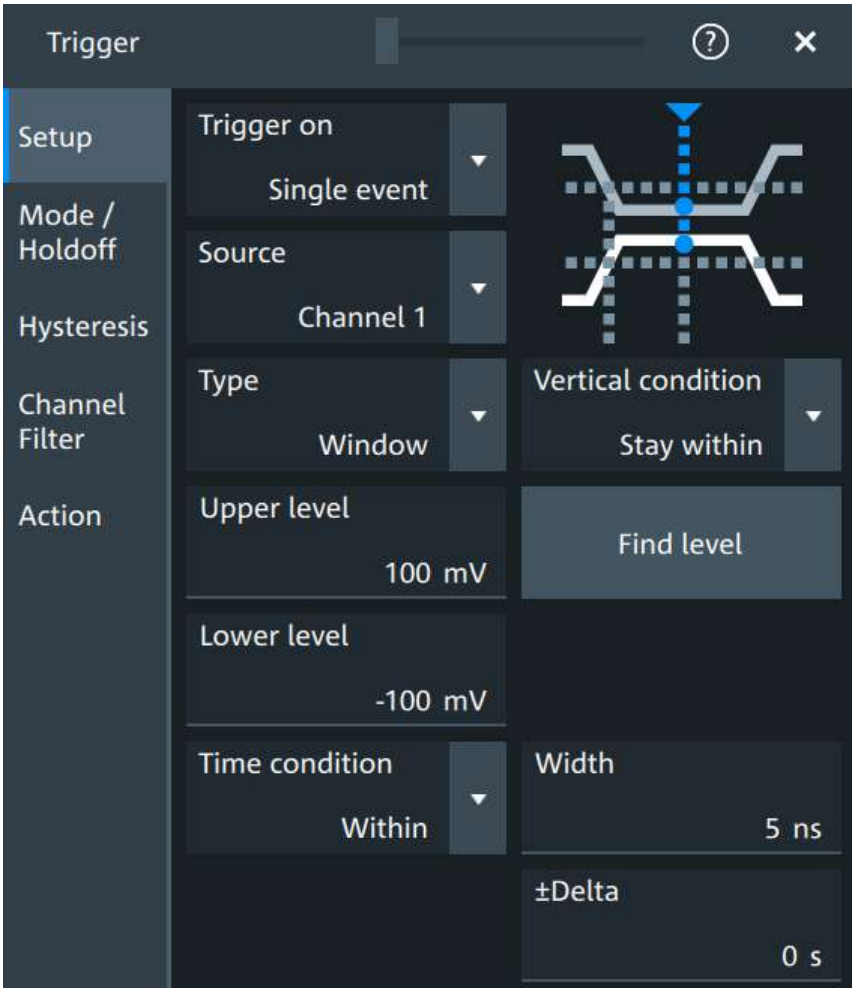

Vertical condition
Selects how the signal run is compared with the window.

"Enter"	Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.
"Exit"	Triggers when the signal leaves the window.
"Stay within"	Triggers if the signal stays between the upper and lower level for a specified time. The time is defined in various ways by the "Time condition".
"Stay outside"	Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is also defined by the "Time condition".

Remote command:
`TRIGger:EVENt<ev>:WINDow:RANGe` on page 1194

Upper level
Sets the upper voltage limit.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer` on page 1193

Lower level
Sets the lower voltage limit.

Remote command:
TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer on page 1193

Time condition
Available for "Vertical condition" = "Stay within"/"Stay outside".

Selects how the time limit of the window is defined.

"Within"	Triggers if the signal stays inside or outside the vertical window limits at least for the time *Width - Delta* and for *Width + Delta* at the most.
"Outside"	"Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than *Width - Delta* or longer than *Width + Delta*.
"Shorter"	Triggers if the signal crosses vertical limits before the specified "Width" time is reached.
"Longer"	Triggers if the signal crosses vertical limits after the specified "Width" time is reached.

Remote command:
TRIGger:EVENt<ev>:WINDow:TIME on page 1195

Width
For the ranges "Within" and "Outside", the width defines the center of a time range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", it defines the maximum and minimum time lapse, respectively.

Remote command:
TRIGger:EVENt<ev>:WINDow:WIDTh on page 1195

±Delta
Defines a range around the width value.


Remote command:
TRIGger:EVENt<ev>:WINDow:DELTa on page 1194

7.4.7 Timeout trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Timeout"

The timeout trigger checks if the signal stays above or below the threshold voltage for a specified time lapse. In other words, the trigger occurs if the trigger source does not have the expected transition within the specified time.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

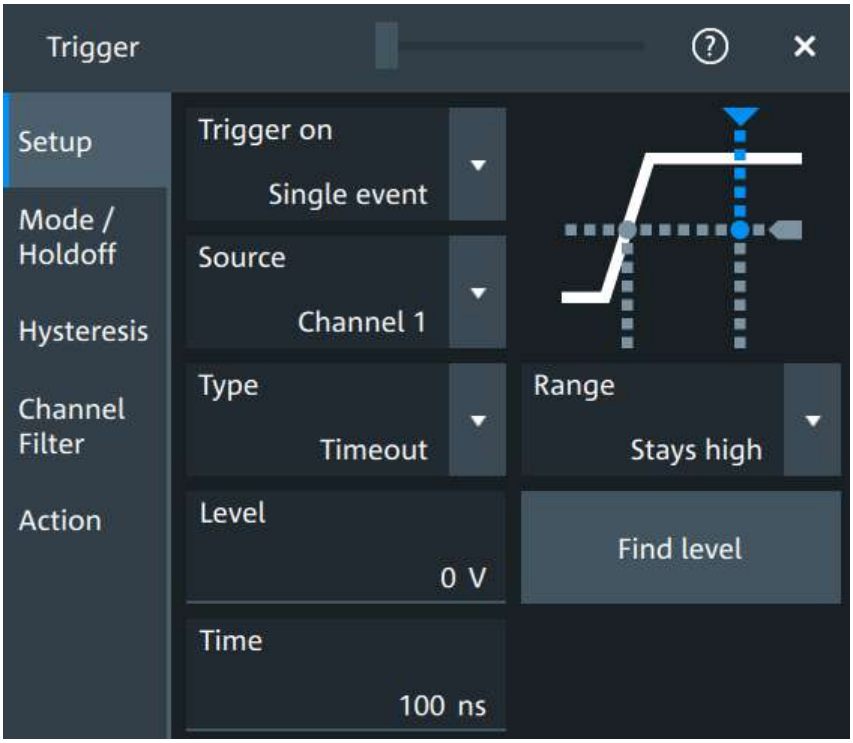

Level
Sets the threshold for the high and low signal states.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181

Range
Sets the relation of the signal level to the trigger level for the timeout trigger.

"Stays high" The signal level stays above the trigger level.

"Stays low" The signal level stays below the trigger level.

"High or low" The signal level stays above or below the trigger level.

Remote command:
`TRIGger:EVENt<ev>:TIMeout:RANGe` on page 1196

Time
Sets the time limit for the timeout at which the instrument triggers.

Remote command:
`TRIGger:EVENt<ev>:TIMeout:TIME` on page 1196


7.4.8 Interval trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Interval"

The interval trigger analyzes the time between two pulses.

The interval trigger can analyze either rising or falling edges, but searching for an interval is also possible for both edges at the same time ("Either").

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

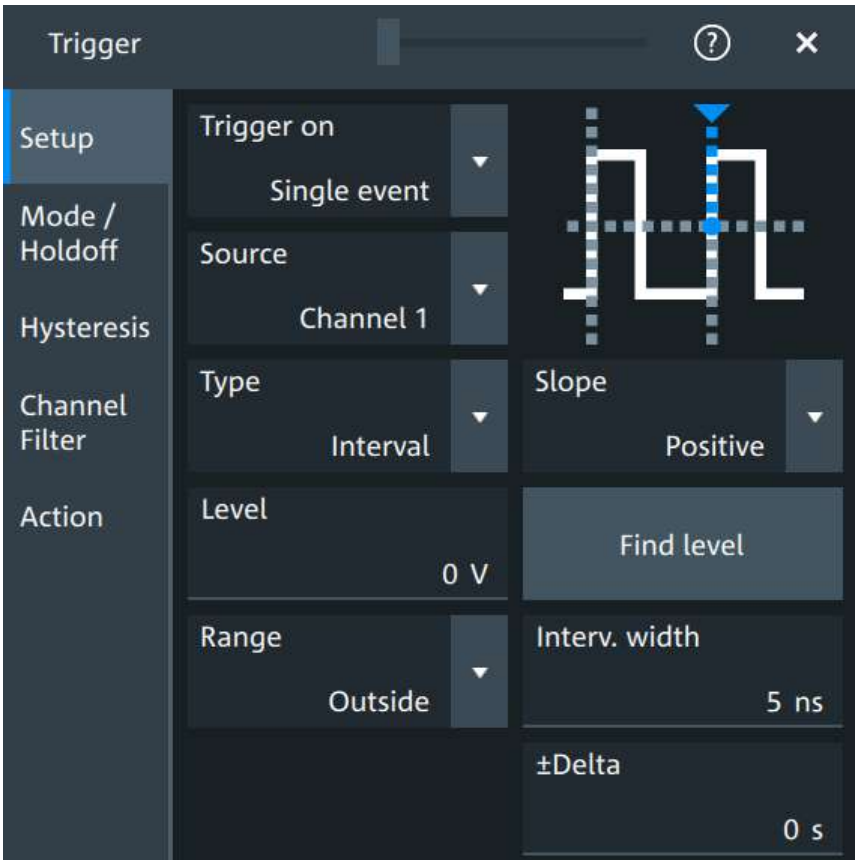

Level
See "Level" on page 174.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181

Slope
Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Remote command:
`TRIGger:EVENt<ev>:INTerval:SLOPe` on page 1198

Range
Selects how the range of an interval is defined:

"Within" Triggers on pulse intervals inside a given range. The range is defined by "Interv. width" and "±Delta".

"Outside" Triggers on intervals outside a given range. The range definition is the same as for "Within" range.

"Shorter" Triggers on intervals shorter than the given "Interv. width".

"Longer" Triggers on intervals longer than the given "Interv. width".

Remote command:
`TRIGger:EVENt<ev>:INTerval:RANGe` on page 1197

Interv. width
Sets the time between two pulses for the interval trigger.

Remote command:
`TRIGger:EVENt<ev>:INTerval:WIDTh` on page 1198

±Delta
Defines a range around the "Interv. width" value.

Remote command:
`TRIGger:EVENt<ev>:INTerval:DELTa` on page 1197


7.4.9 Slew rate trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Slew rate"

The slew rate trigger is also known as transition trigger. It triggers if the transition time from the lower to higher voltage level (or vice versa) is shorter or longer as defined, or outside or inside a specified time range.

The slew rate trigger finds slew rates faster than expected or permissible to avoid overshooting and other interfering effects. It also detects slow edges violating the timing in pulse series.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

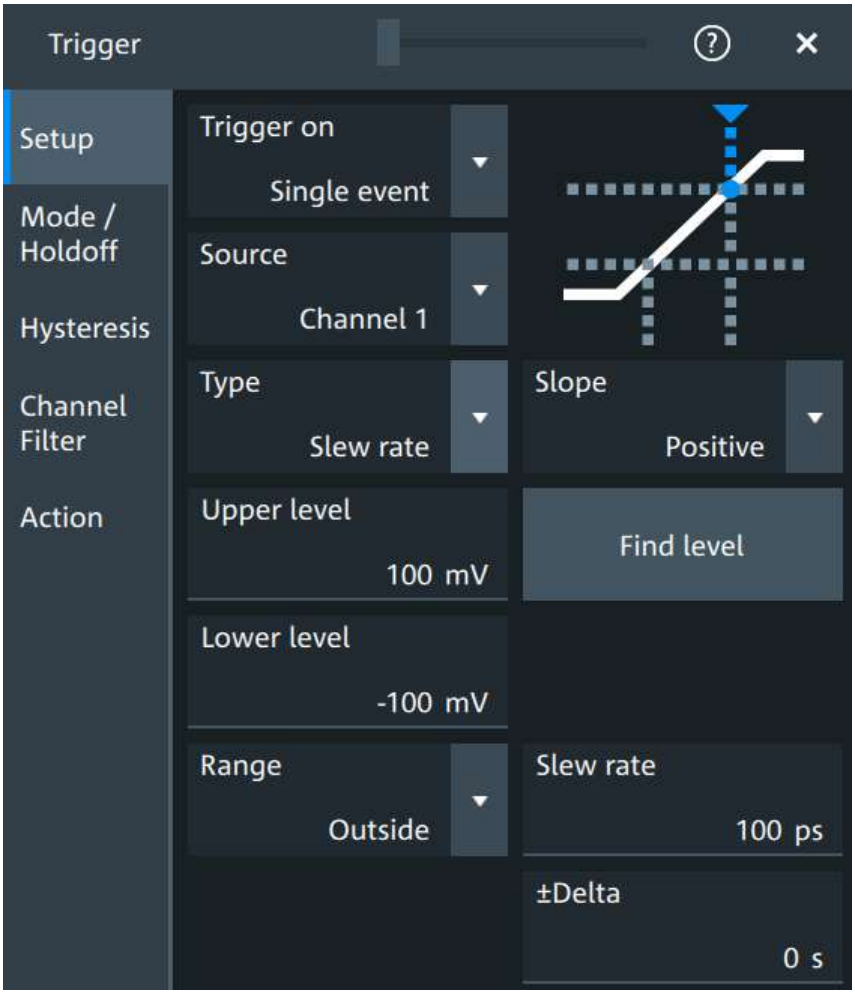

Slope
Sets the edge direction for the trigger.

"Positive"	Selects the rising edge, which is a positive voltage change.
"Negative"	Selects the falling edge, which is a negative voltage change.
"Either"	Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.

Remote command:
`TRIGger:EVENt<ev>:SLEW:SLOPe` on page 1201

Upper level
Sets the upper voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer` on page 1198

Lower level
Sets the lower voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:
TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer on page 1198

Range
Selects how the time limit for the slew rate is defined. The time measurement starts when the signal crosses the first trigger level - the upper or lower limit depending on the selected slope. The measurement stops when the signal crosses the second level.

"Within" Triggers on slew rates inside a given time range. The range is defined by "Slew rate" and "±Delta".

"Outside" Triggers on slew rates outside a given time range. The range definition is the same as for "Within" range.

"Shorter" Triggers on slew rates shorter than the given "Slew rate" limit.

"Longer" Triggers on slew rates longer than the given "Slew rate" limit.

Remote command:
TRIGger:EVENt<ev>:SLEW:RANGe on page 1200

Slew rate
For the ranges "Within" and "Outside", the slew rate defines the center of a range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", the slew rate defines the maximum and minimum slew rate limits, respectively.

Remote command:
TRIGger:EVENt<ev>:SLEW:RATE on page 1200

±Delta
Defines a time range around the given slew rate.

Remote command:
TRIGger:EVENt<ev>:SLEW:DELTa on page 1199


7.4.10 Setup & Hold

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Setup & Hold"

The setup & hold trigger analyzes the relative timing between two signals: a data signal and the synchronous clock signal. Many systems require, that the data signal must be steady for some time before and after the clock edge, for example, the data transmission on parallel interfaces. With this trigger type, you can also test the time correlation of sideband and in-band signals.

The setup & hold trigger is also known as Data2Clock trigger.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

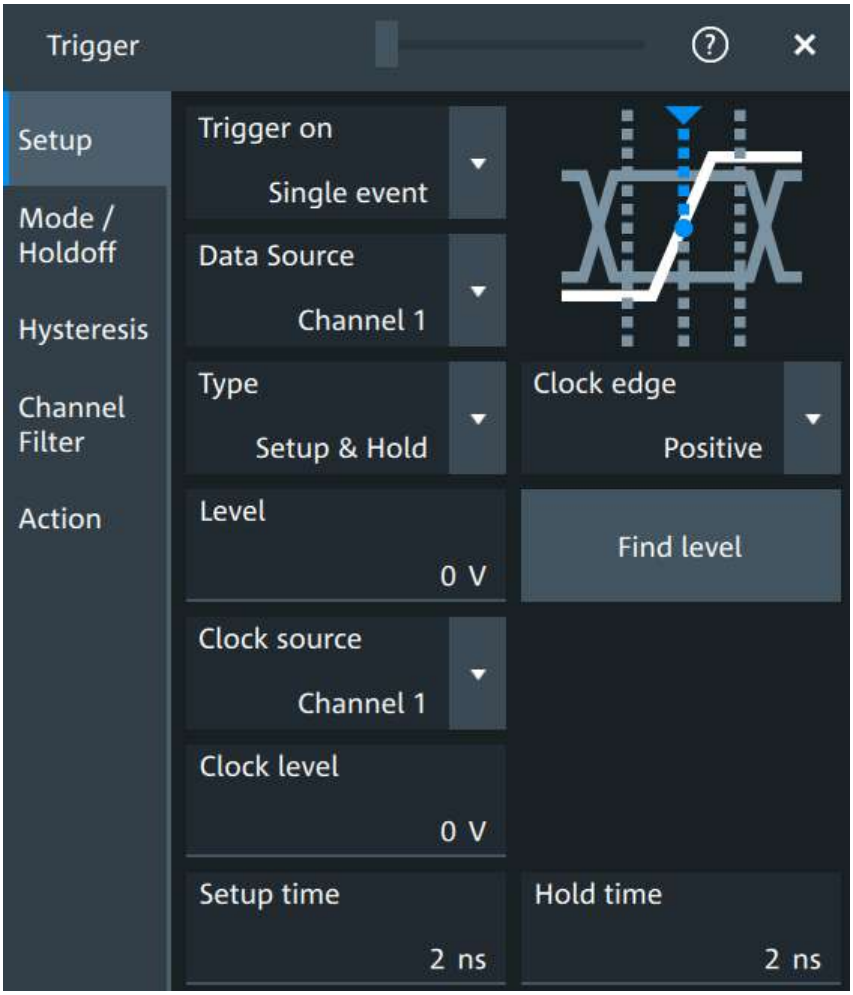

Data source
Selects the input channel of the data signal.

Remote command:
`TRIGger:EVENt<ev>:SOURce` on page 1182

Level
Sets the voltage level for the data signal. At this level, the setup and hold time are measured.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181

Clock source
Selects the input channel of the clock signal.

Remote command:
`TRIGger:EVENt<ev>:SETHold:CSOurce[:VALue]` on page 1202

Clock edge
Sets the edge of the clock signal. Edge and level define the time reference point.

"Positive" Rising edge, a positive voltage change.

"Negative" Falling edge, a negative voltage change.

"Both" Both the rising and the falling edge.

Remote command:
`TRIGger:EVENt<ev>:SETHold:CSOurce:EDGE` on page 1201

Clock level
Sets the voltage level for the clock signal.

Both the clock level and the clock edge define the starting point for calculation of the setup and hold time.

Remote command:
`TRIGger:EVENt<ev>:SETHold:CSOurce:LEVel` on page 1201

Setup time
Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

Remote command:
`TRIGger:EVENt<ev>:SETHold:STIMe` on page 1202

Hold time
Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.


Remote command:
`TRIGger:EVENt<ev>:SETHold:HTIMe` on page 1202

7.4.11 State trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = State"

The state trigger verifies if the channel states match the defined pattern at the clock edge. The trigger occurs if the logical combination of the input channels is true at the crossing point of the selected clock edge and the trigger level.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

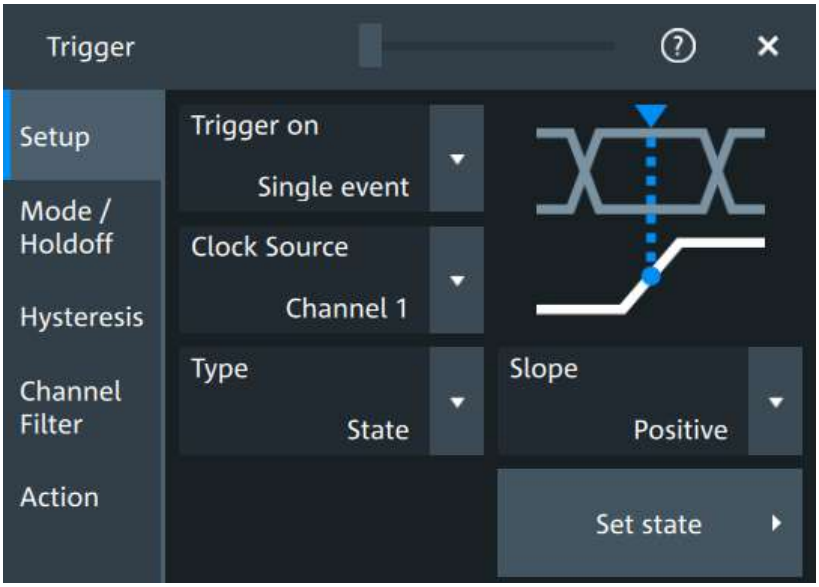

1. Select the "Clock source" and the "Slope".
2. Tap "Set state".
   See Section 7.4.12.2, "Settings for state and pattern trigger of analog channels", on page 197 for setting details.

Slope
Sets the edge direction for the trigger.

"Positive"	Selects the rising edge, which is a positive voltage change.
"Negative"	Selects the falling edge, which is a negative voltage change.
"Either"	Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.


Remote command:
`TRIGger:EVENt<ev>:STATe:SLOPe` on page 1204

7.4.12 Pattern trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern"

The pattern trigger works like a logic trigger. It provides logical combinations of the input channels and can be used for verifying the operation of digital logic. If the channel states match the desired pattern, the pattern trigger occurs.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 173.

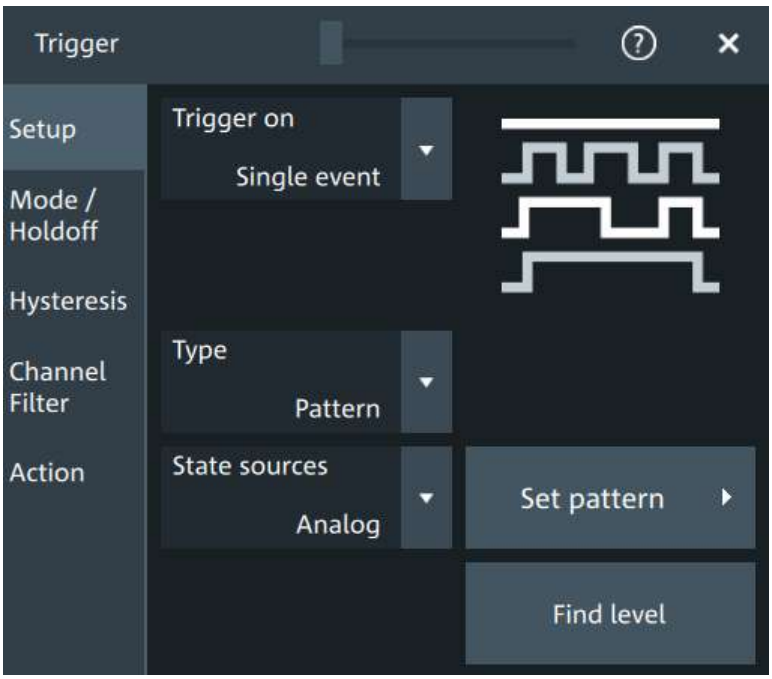

► Tap "Set pattern".
See Section 7.4.12.2, "Settings for state and pattern trigger of analog channels", on page 197 for setting details.

7.4.12.1 General settings

State sources
Selects if the source of the trigger for the pattern type is an "Analog" or "Digital" channel.

Remote command:
`TRIGger:EVENt<ev>:PATTern:QUALify:SOURces` on page 1206

Set pattern
Opens a dialog for setting the pattern by defining the channel stated and logic operator..

For analog channels, see Section 7.4.12.2, "Settings for state and pattern trigger of analog channels", on page 197.

For digital channels, see Section 7.4.12.3, "Settings for state and pattern trigger of digital channels", on page 199.

Find level
Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

The function is not available for trigger sources "Extern" and "Line".

Remote command:
TRIGger:FINDlevel on page 1182

7.4.12.2 Settings for state and pattern trigger of analog channels

Access for state trigger: "Menu" > "Trigger" > "Setup" tab > "Type = State" > "Set state"

Access for pattern trigger: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern" > "Set pattern"

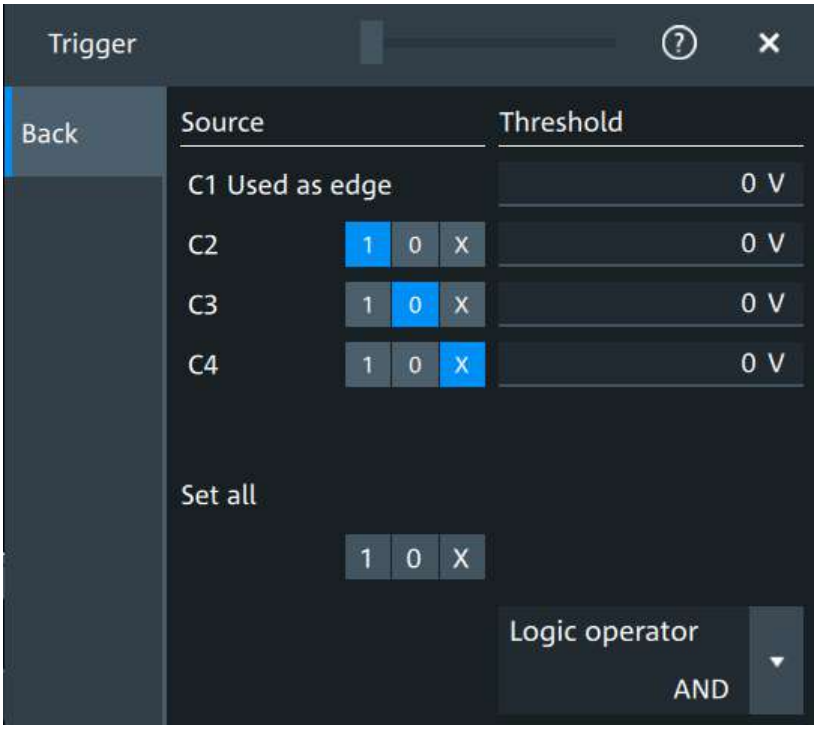


Figure 7-3: Detailed settings for state trigger

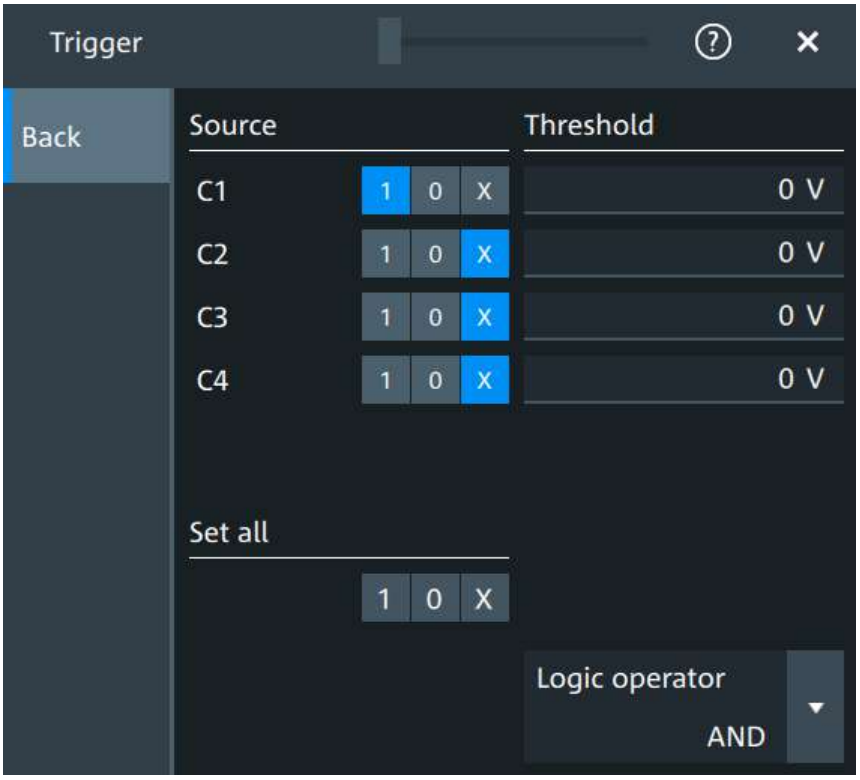


Figure 7-4: Detailed settings for pattern trigger

Source: channel states
Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Remote command:
`TRIGger:EVENt<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX` on page 1203
`TRIGger:EVENt<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX` on page 1205

Threshold
Set the threshold for each channel.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1181

Set all
Sets all channels to the selected state.

Logic Operator
Defines the logic combination of the channels and their states.


- "AND": logical AND, conjunctive combination
- "OR": logical OR, disjunctive combination

Remote command:
`TRIGger:EVENt<ev>:STATe:QUALify:LOGic` on page 1203
`TRIGger:EVENt<ev>:PATTern:QUALify:LOGic` on page 1205

TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic on page 1206
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic on page 1204

7.4.12.3 Settings for state and pattern trigger of digital channels

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern" > "Set pattern"

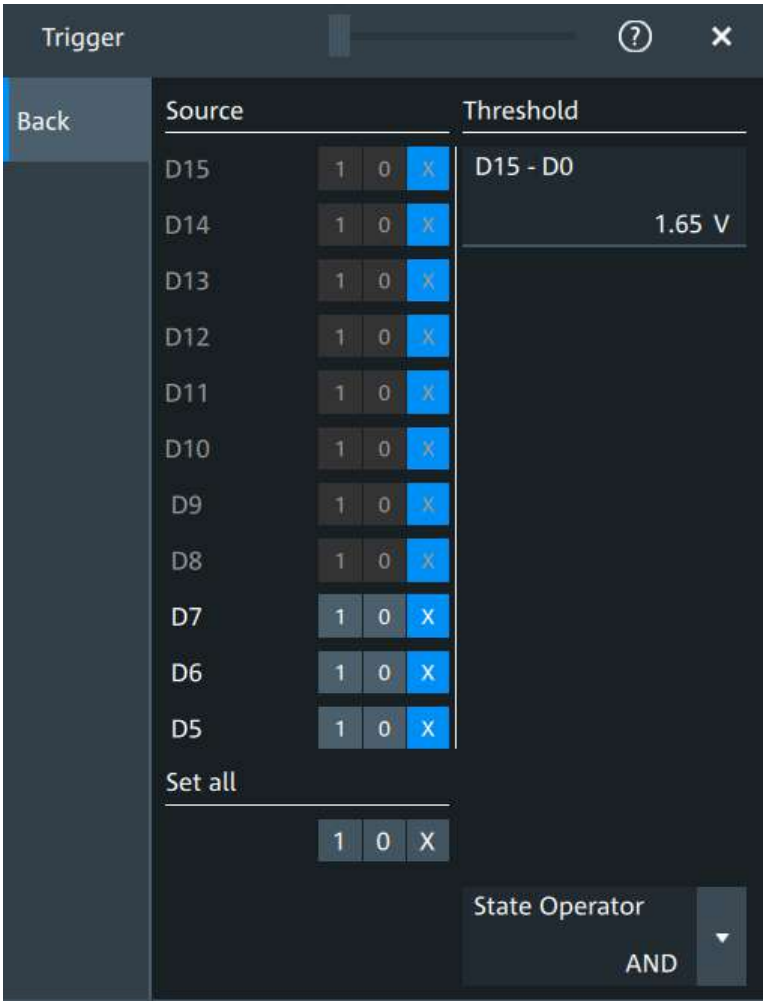

Source: channel states
Set the state for each channel.

Remote command:
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX on page 1205
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX on page 1204

Set all
Sets all channels to the selected state.

Logic Operator
Defines the logic combination of the channels and their states.

- "AND": logical AND, conjunctive combination
- "OR": logical OR, disjunctive combination

Remote command:
`TRIGger:EVENt<ev>:STATe:QUALify:LOGic` on page 1203
`TRIGger:EVENt<ev>:PATTern:QUALify:LOGic` on page 1205
`TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic` on page 1206
`TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic` on page 1204

7.4.13 Line trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Source" = "Line"

The line trigger is an edge trigger that triggers on the AC power input and synchronizes the signal to the AC power frequency. It is not a trigger type but rather a special trigger source. Use the line source if you want to analyze signals related to the power line frequency, such as lighting equipment and power supply devices.


Slope
Selects the rising or falling edges of the AC power input.

Remote command:
`TRIGger:EVENt<ev>:EDGE:SLOPe` on page 1185

7.5 Trigger mode / holdoff

Access: "Trigger" menu > "Mode / holdoff" tab

Holdoff conditions define a waiting time after the current trigger until the next trigger can be recognized.

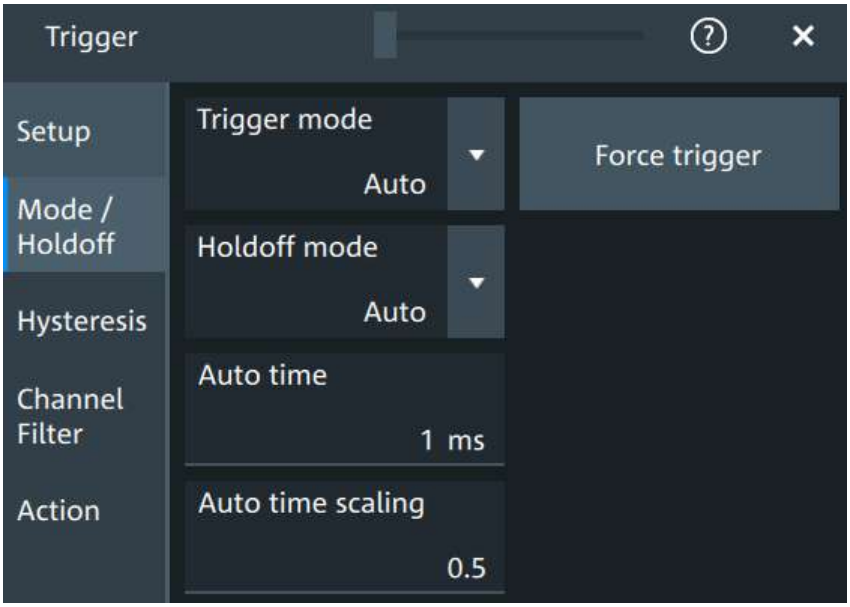

Trigger mode
Sets the trigger mode which determines the behavior of the instrument if no trigger occurs. The current setting is shown on the trigger label.

In a trigger sequence, the trigger mode affects only the A-trigger.

To toggle quickly between "Auto" and "Normal" mode, use the [Auto Norm] key on the front panel (in "Trigger" section).

"Auto" The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. This mode helps to see the waveform even before the trigger conditions are set correctly. The waveform on the screen is not synchronized, and successive waveforms are not triggered at the same point of the waveform. The time interval depends on the timebase settings.

"Normal" The instrument acquires a waveform only if a trigger occurs, that is, if all trigger conditions are fulfilled. If no trigger occurs, no waveform is acquired and the last acquired waveform is displayed. If no waveform was captured before, none is displayed.
When no trigger has been found for longer than one second, a message box appears that shows the time elapsed since the last trigger.

"Free run" The instrument starts acquisition immediately and triggers after a short time interval independent of the timebase settings and faster than in "Auto" mode. Real triggers are ignored. Use this mode if the "Auto" mode is too slow.

Remote command:
`TRIGger:MODE` on page 1206

Force trigger
Provokes an immediate single acquisition. Force the trigger if the acquisition is running in normal mode and no valid trigger occurs. Thus, you can confirm that a signal is available and use the waveform display to determine how to trigger on it.

Remote command:
`TRIGger:FORCe` on page 1207

Holdoff mode
Selects the method to define the holdoff condition.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.

Holdoff settings are not available if the trigger source is an external trigger input or serial bus, and if you trigger on a sequence of events.

Example:

For example, you want to analyze the first pulse in a burst of several pulses. At first, you select a sufficiently slow time base to display the entire burst. Then, you set the holdoff time a little longer than the length of the burst. Now, each trigger corresponds to the first pulse in successive bursts, and you can change the time base to display the waveform in more detail.

The following methods are available:

"Time" Defines the holdoff directly as a time period. The next trigger occurs only after the "Holdoff time" has passed.

"Events" Defines the holdoff as a number of trigger events. The next trigger only occurs when this number of events is reached. The number of triggers to be skipped is defined in "Holdoff events".

"Random" Defines the holdoff as a random time limited by "Minimum time" and "Maximum time". For each acquisition cycle, the instrument selects a new random holdoff time from the specified range.
Random holdoff prevents synchronization to discover effects invisible with synchronized triggering, for example, the features of a pulse train.


"Auto" The holdoff time is calculated automatically based on the current horizontal scale.
"Auto time scaling" defines the factor that the horizontal scale is multiplied with.
"Auto time" shows the resulting holdoff time: *Auto time = Auto time scaling * Horizontal scale*.

"Off" No holdoff

Remote command:
`TRIGger:HOLDoff:MODE` on page 1207
`TRIGger:HOLDoff:TIME` on page 1209
`TRIGger:HOLDoff:EVENts` on page 1209
`TRIGger:HOLDoff:MAX` on page 1209
`TRIGger:HOLDoff:MIN` on page 1209
`TRIGger:HOLDoff:AUTotime?` on page 1208
`TRIGger:HOLDoff:SCALing` on page 1208

7.6 Hysteresis

Access: "Menu">"Trigger" > "Hysteresis"

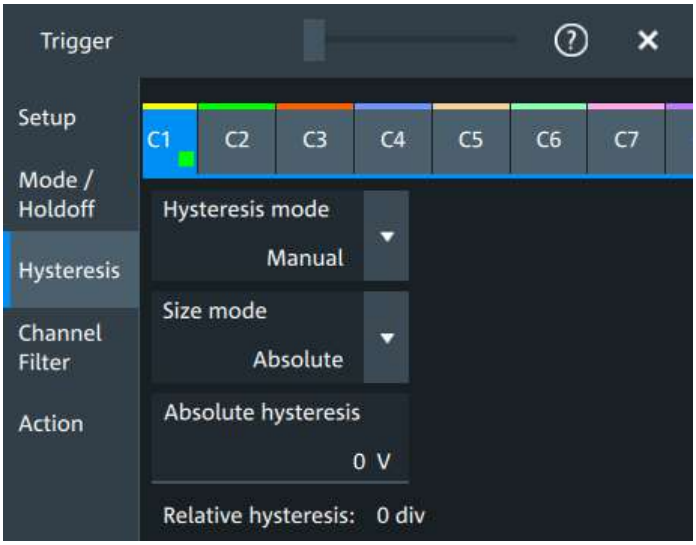

The rejection of noise by setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level. You can select the hysteresis mode and value for each channel separately.

HW hysteresis
Displays the hysteresis that is set by the instrument in automatic hysteresis mode.

Remote command:
`TRIGger:NOISe<m>:EFFective?` on page 1210

Hysteresis mode
Selects how the hysteresis is set.

"Auto" Automatic mode is the recommended mode. The hysteresis is set by the instrument to reject the internal noise of the instrument.

"Manual" The hysteresis is defined directly in absolute or relative values.

Remote command:
`TRIGger:NOISe<m>:MODE` on page 1211

Size mode
Selects whether the hysteresis is defined in absolute or relative values. The setting is available only in manual hysteresis mode.

Remote command:
`TRIGger:NOISe<m>:MODE` on page 1211

Absolute hysteresis
Defines a range in absolute values around the trigger level. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.


Remote command:
`TRIGger:NOISe<m>:ABSolute` on page 1210

Relative hysteresis
Defines a range in divisions around the trigger level in division or as percentage. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.

Remote command:
`TRIGger:NOISe<m>:PERDivision` on page 1211
`TRIGger:NOISe<m>:RELative` on page 1211

7.7 Channel filter

Access: "Menu">"Trigger" > "Channel filter"

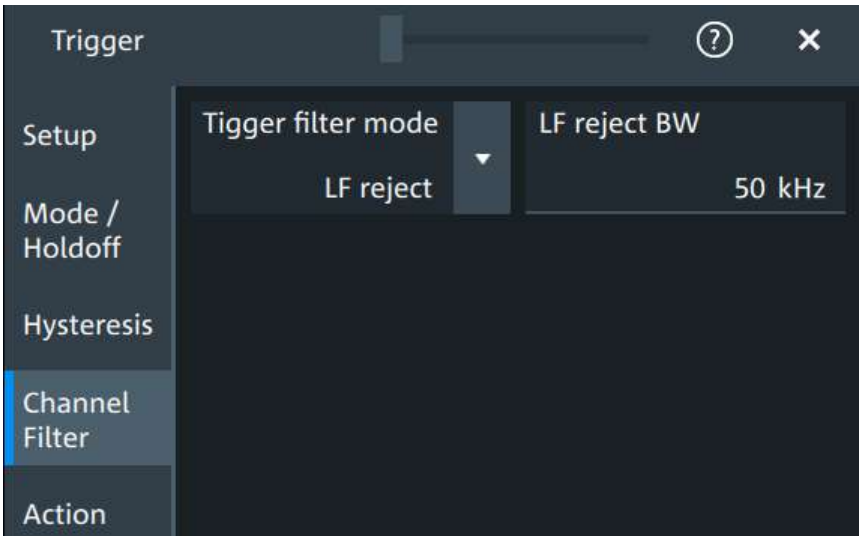

Trigger filter mode
Selects the filter mode for the trigger channel.

"Off"	The trigger signal is not filtered.
"LF reject"	Frequencies lower than the "LF reject BW" are rejected, higher frequencies pass the filter.
"RF reject"	Frequencies higher than the "RF reject BW" are rejected, lower frequencies pass the filter.

Remote command:
`TRIGger:FILTermode` on page 1212

LF reject BW
Sets the limit frequency limit for the highpass filter of the trigger signal. Frequencies lower than this value are rejected, higher frequencies pass the filter.


Remote command:
`TRIGger:LFReject` on page 1213

RF reject BW
Sets the limit frequency limit for the lowpass filter of the trigger signal. Frequencies higher than this value are rejected, lower frequencies pass the filter.

Remote command:
`TRIGger:RFReject` on page 1213

7.8 Actions on trigger

Access: "Menu" > "Trigger" > "Action" tab

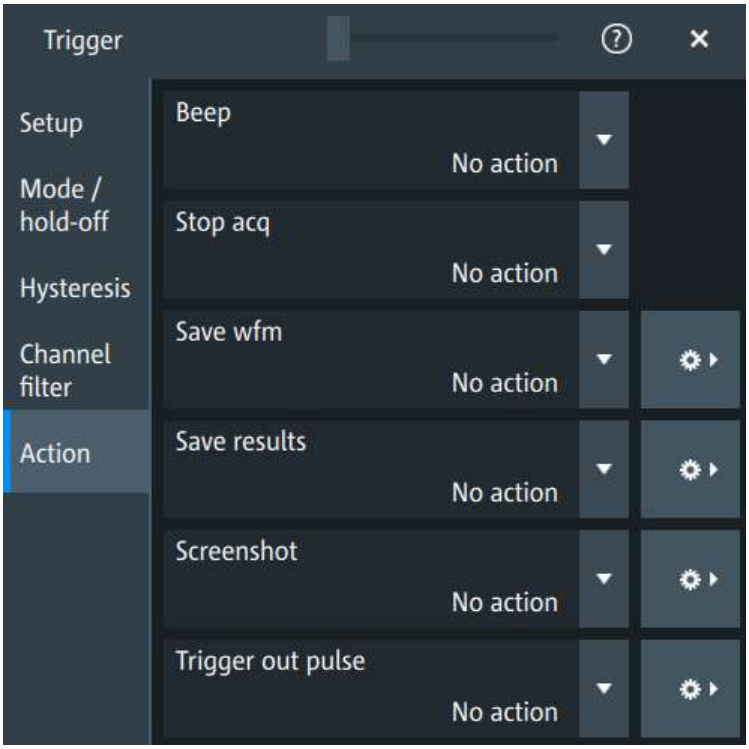

The action settings define what happens when a trigger occurs. All available actions can be initiated at the same time. To activate an action, set it to "On trigger".

Beep
Generates a beep sound.

Remote command:
`TRIGger:ACTions:BEEP` on page 1213

Stop acq
Stops the acquisition when a trigger occurs.

Remote command:
`TRIGger:ACTions:STOP` on page 1216

Save wfm
Saves the waveform data to a file according to the folder, filename and extension settings in the "Menu" > "Save/recall" > "Save" > "Waveform" dialog.

To select the waveforms and adjust the file path, tap the settings icon.

See also Section 13.4.2, "Saving waveforms", on page 506.

Remote command:
`TRIGger:ACTions:WFMSave` on page 1216

Save results
Saves the results to a file according to the settings in "Menu" > "Save/recall" > "Save" > "Results".

To select the waveforms and adjust the file path, tap the settings icon.

See also Section 13.8, "Results", on page 527.

Remote command:
`TRIGger:ACTions:SRESults` on page 1215

Screenshot
Saves a screenshot according to the settings in the "Menu" > "Save/recall" > "Save" > "Screenshot" dialog.

To adjust the screenshot settings, tap the settings icon.

See also Section 13.9, "Screenshots", on page 529.

Remote command:
`TRIGger:ACTions:SCReenshot` on page 1215


Trigger out pulse
Selects, if a pulse is provided to the [Trigger Out] connector on the rear panel. The trigger-out signal is used to synchronize the measurements of other instruments.

A trigger out pulse can be provided either when a trigger occurs, or when a mask test violation occurs, or when a limit check violation in a measurement occurs.

To adjust the outgoing signal, tap the settings icon.

Remote command:
`TRIGger:ACTions:OUT:STATe` on page 1214

Settings for the trigger out pulse
In this dialog you can adjust the trigger out pulse.

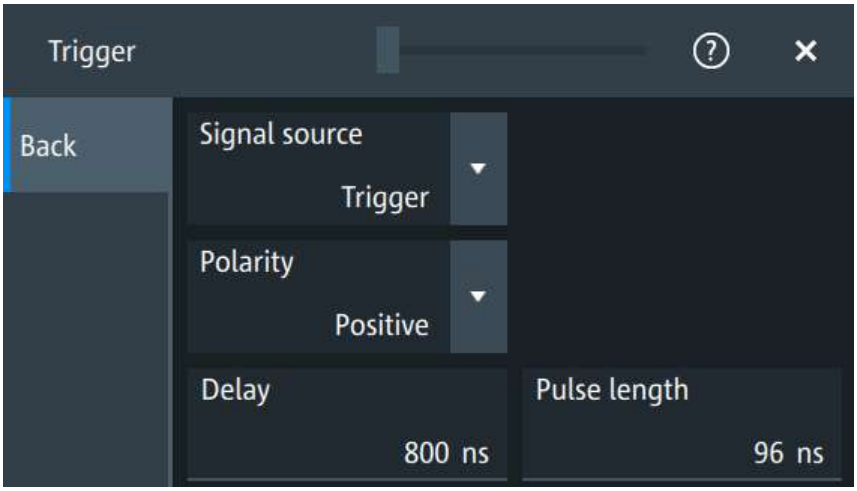

Signal source ← Settings for the trigger out pulse
Defines when the trigger out signal is initiated: at the trigger point, when waiting for the trigger, or when the post-trigger time is finished.

Remote command:
`TRIGger:ACTions:OUT:SOURce` on page 1214

Polarity ← Settings for the trigger out pulse
Sets the polarity of the trigger out pulse, which is the direction of the first pulse edge.

Remote command:
`TRIGger:ACTions:OUT:POLarity` on page 1215

Delay ← Settings for the trigger out pulse
Defines the delay of the first pulse edge to the trigger point. The minimum delay is 600 ns.

Remote command:
`TRIGger:ACTions:OUT:DELay` on page 1214

Pulse length ← Settings for the trigger out pulse
Sets the length of the trigger out pulse.

Remote command:
`TRIGger:ACTions:OUT:PLENgth` on page 1214

7.9 Zone trigger

The zone trigger triggers on the intersection or non-intersection of the signal and one or more zones. The zone can be applied to any active input signal like the normal hardware trigger, and also to math waveforms, XY-plots and normal spectrum traces. So, the zone trigger works in the time domain and in the frequency domain.

You can use the zone trigger, for example, to solve the following tasks:

- Triggering on differential math signals.

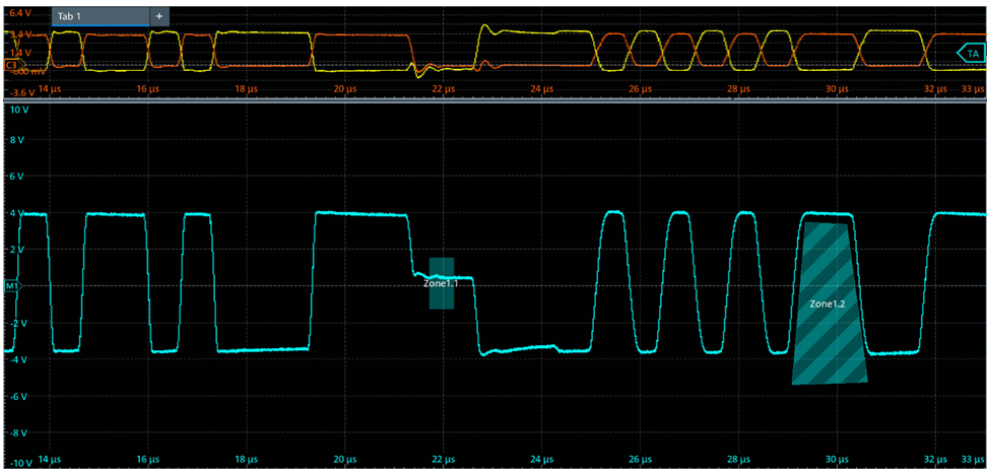


Figure 7-5: Zone trigger on math

- Trigger if a peak in the spectrum occurs: define a zone in the spectrum diagram to filter amplitude peaks.

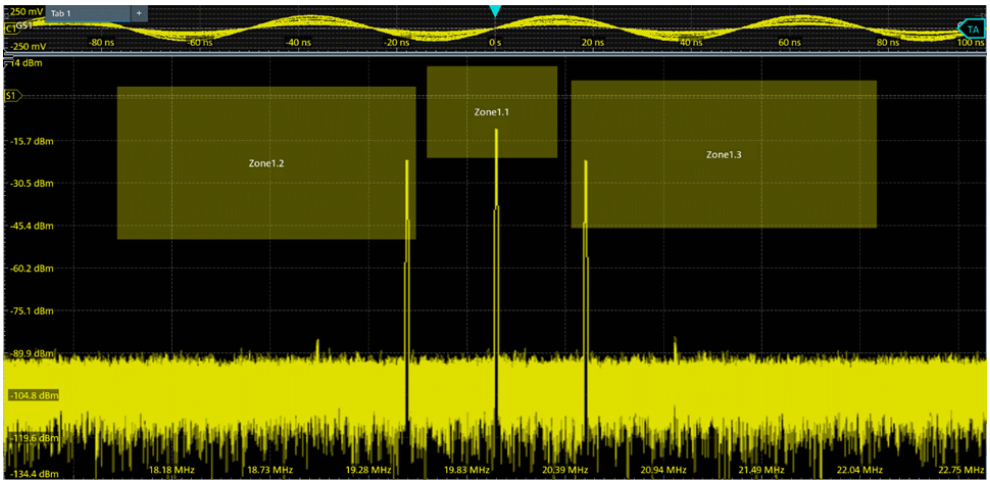


Figure 7-6: Zone trigger on spectrum

- Separate rising and falling edges: define a zone around the base or top of the digital signal.

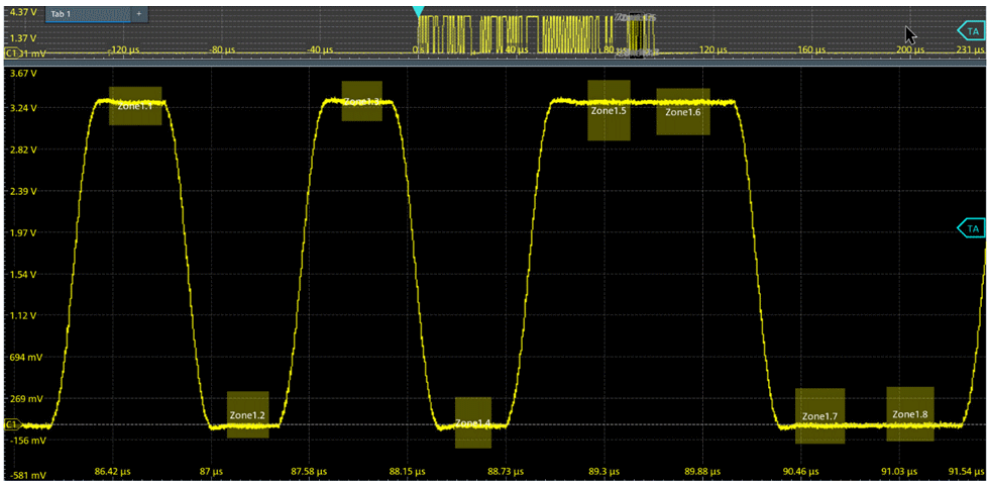


Figure 7-7: Zone trigger on digital serial pattern

- Zoom on a trigger event, even when capturing large amounts of time.

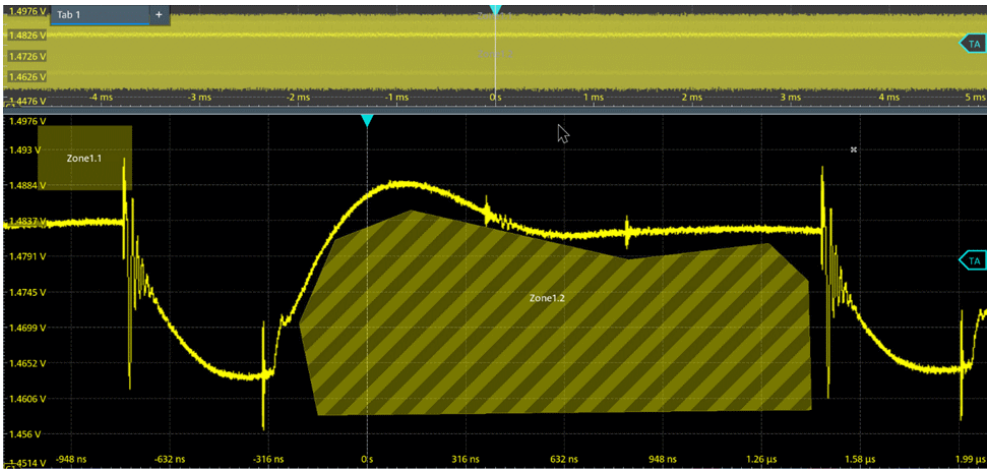


Figure 7-8: Zoom on a zone trigger in the mV and ns range

- Filter events in the history after the acquisition has finished.

The zone trigger is the second step of the "A → ZoneTrigger" trigger sequence and acts like a filter on previous acquisitions. The A-trigger condition and then the zone condition must be fulfilled independently.

Note that the trigger mode applies only to the A-trigger. If only the zone trigger conditions are relevant for the trigger, you can set the trigger mode to "Free run". Thus, you can use the zone trigger to trigger on a spectrum trace without triggering on a signal in the time domain, or you can analyze DC signals.

When an acquisition fulfills the complete trigger definition including the zone trigger, the acquisition is kept in the history memory. Otherwise, the acquisition is discarded. Moreover, you can apply the zone trigger to stored history waveforms that were acquired without zone trigger and thus filter the history waveforms on replay.

Trigger zone definition

With the MXO 5, you can define up to 4 trigger zones. A zone consists of up to 8 areas associated with a single source. In total, 32 areas can be defined.

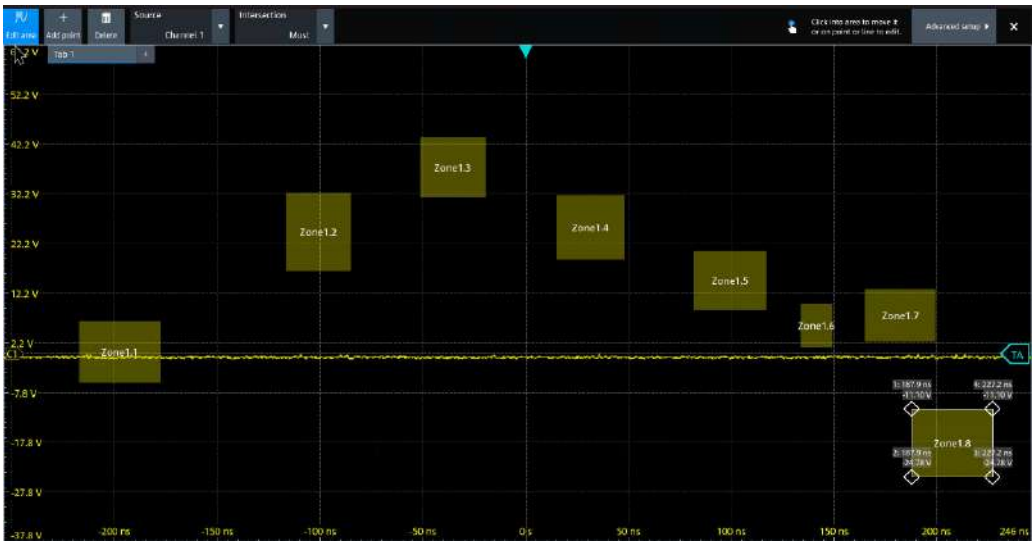


Figure 7-9: 1 trigger zone with 8 areas

The zone is applied to the diagram onto which it is drawn and has the color of the source. All areas of the zone have to be in the same diagram. If a zone is shown in a diagram for which it is not applied, for example in a zoom diagram, it is shown in a gray color.

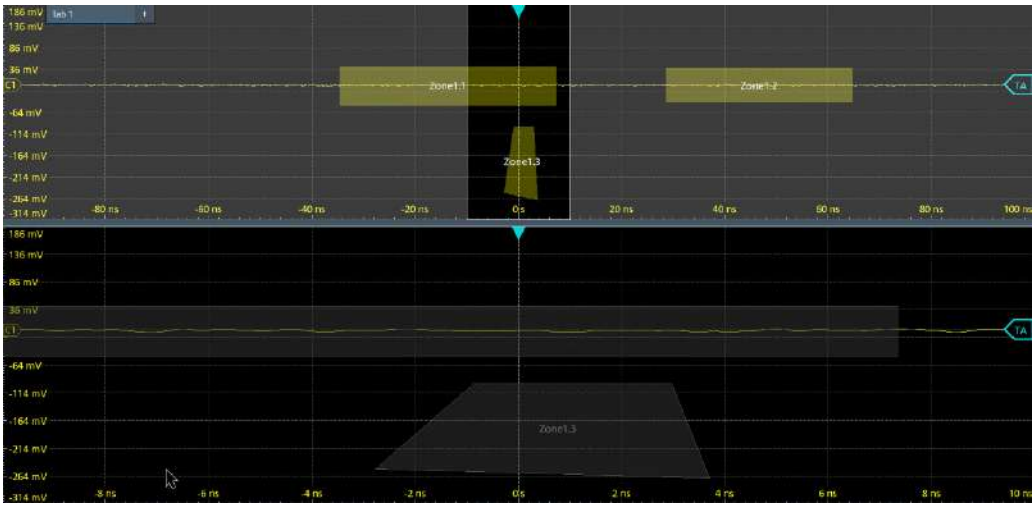


Figure 7-10: Trigger zone and a zoom diagram

Trigger zones can be applied to different sources, for example, the source of zone 1 is channel 1, and the source of zone 2 is a math signal. For the zone trigger condition, the zones are combined by Boolean operators: AND, OR, XOR, NOT. Thus, you can trigger on different waveform types simultaneously.

Trigger area definition

An area is a graphical shape on the screen, defined by pixels. It is a part of the zone for a trigger. The area has the following characteristics:

- An area is a polygon that is applied against a captured waveform. All areas of the same zone have the same source.

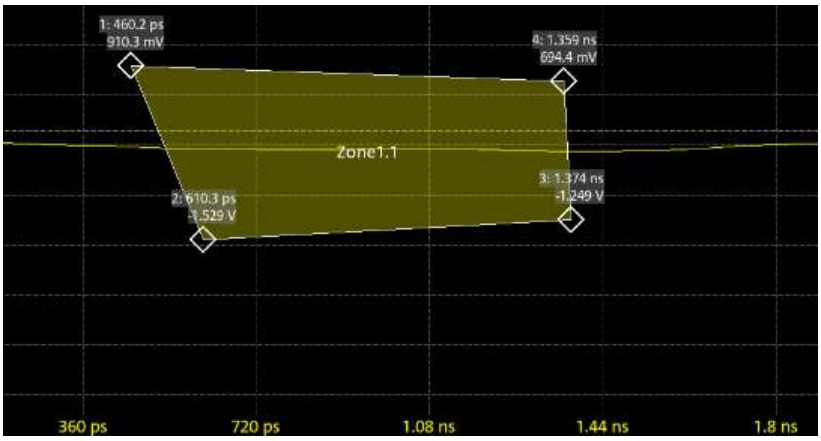


Figure 7-11: 1 area of a trigger zone

- An area can be defined from 3 up to 16 sides.

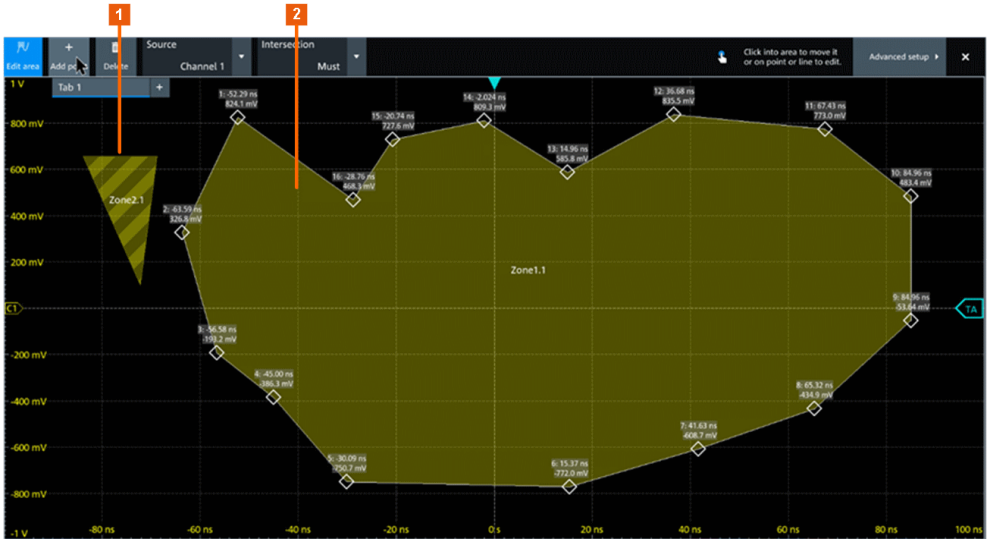


Figure 7-12: Area sizes

1 = 3 point area with "Intersection" = "Must not"
2 = 16 point area with "Intersection" = "Must"

- A zone area can have only one range in y-direction at a certain time point. If a shape is not valid, the invalid point is marked red, and an attention symbol is shown at the area name.

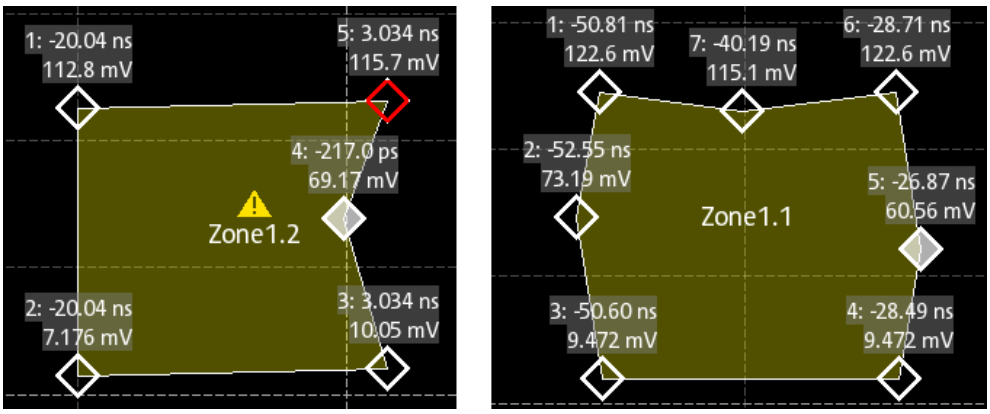


Figure 7-13: Invalid zone area (left) and valid zone area (right)

To check the validity in remote control, use `ZONE<m>:AREA<n>:VALid?` and `ZONE<m>:AREA<n>:POINt<o>:VALid?`.

- Next to each point, the number of the point and the horizontal and vertical values are shown.



Figure 7-14: Area point definition

1 = Number of the point
2 = Horizontal and vertical values of the point

- An area has a defined intersect condition, defining if the signal must intersect the area to allow the instrument to trigger, or if it must not intersect the area.
On the screen, an area that fulfills a "Must" condition has a solid fill in the color of the source channel. An area that fulfills a "Must not" also has the same color as the source channel, but is striped.

7.9.1 Using trigger zones and areas


You can define the trigger zones on the display through the toolbar:

To add trigger zones and areas

1. Tap the "Add zone trigger" icon on the toolbar.



The trigger zone toolbar opens.
Alternatively, you can use the Zone key on the front panel.



2. Select the "Source" of the zone, the signal to which the zone condition is applied.
3. Select if the signal must violate the zone to cause a trigger ("Intersect" = "Must"), or vice versa ("Intersect" = "Must not").
4. Tap "Add zone".
5. Draw a rectangle in the diagram to create the first area of a new zone trigger.
6. To add more areas to the zone, tap "Add Area".




7. Draw a rectangle in the same diagram to add a new trigger area.
8. Select if the signal must violate the area to cause a trigger (must intersect), or vice versa (must not intersect).
9. You can add more areas and further more zones to the zone trigger.

   Make sure to draw them in the correct diagram because zones affect only the diagram where they were defined.

To edit an existing area

1. Tap an existing zone area.
2. To change the shape of the zone area, tap the corner points of the zone on the SmartGrid.
3. Move the point to the required coordinates on the SmartGrid.
4. If necessary, add more points to the zone area:
   a) In the toolbar, tap "Add point".

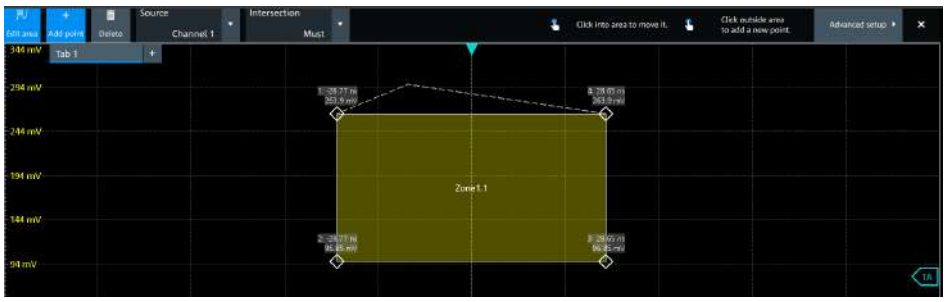

   b) Tap outside of the area to add the new point.
   c) If necessary, add more points.
   d) If necessary to change the coordinates of a point, tap on it and move it.

To delete an area or point

1. Tap an existing zone area.
2. In the "Edit area" toolbar, tap the delete icon.
3. Tap on the area that you want to delete or edit.




Delete icons appear at the area points and in the middle of the area.


4. To delete a point from the area, tap on the "Delete" icon on top of the point.
5. To delete the whole area, tap the "Delete" icon in the middle of the area next to the area "Label".

7.9.2 Zone trigger settings

Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "Setup" tab, or: Toolbar > "Add zone trigger" icon > "Advanced setup".

In this dialog, you can add zones and areas to your zone trigger and adjust their shapes.

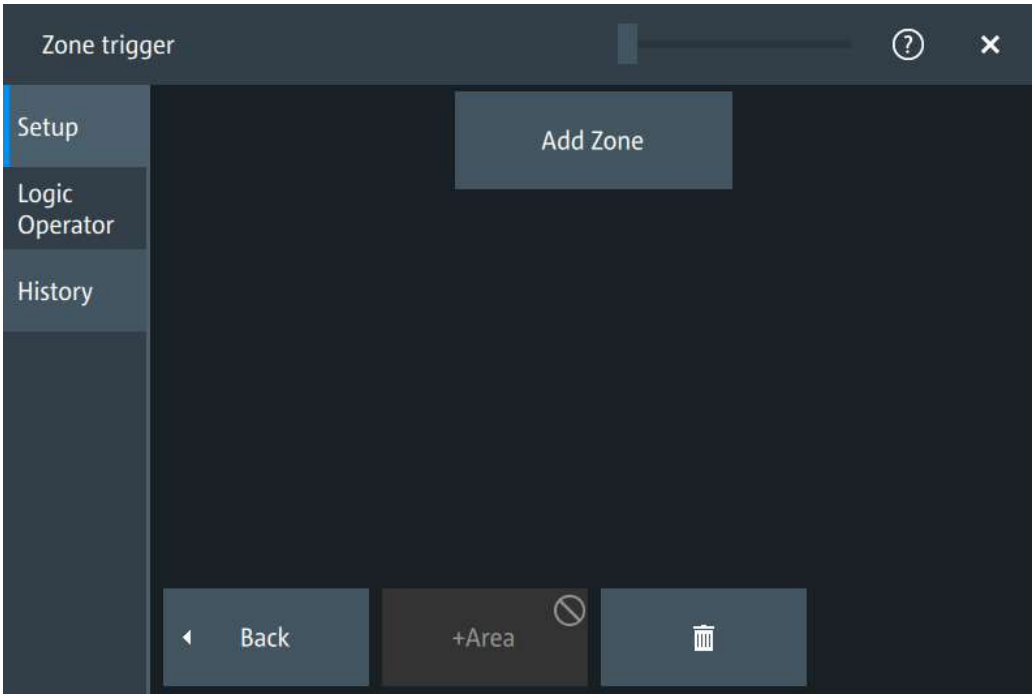

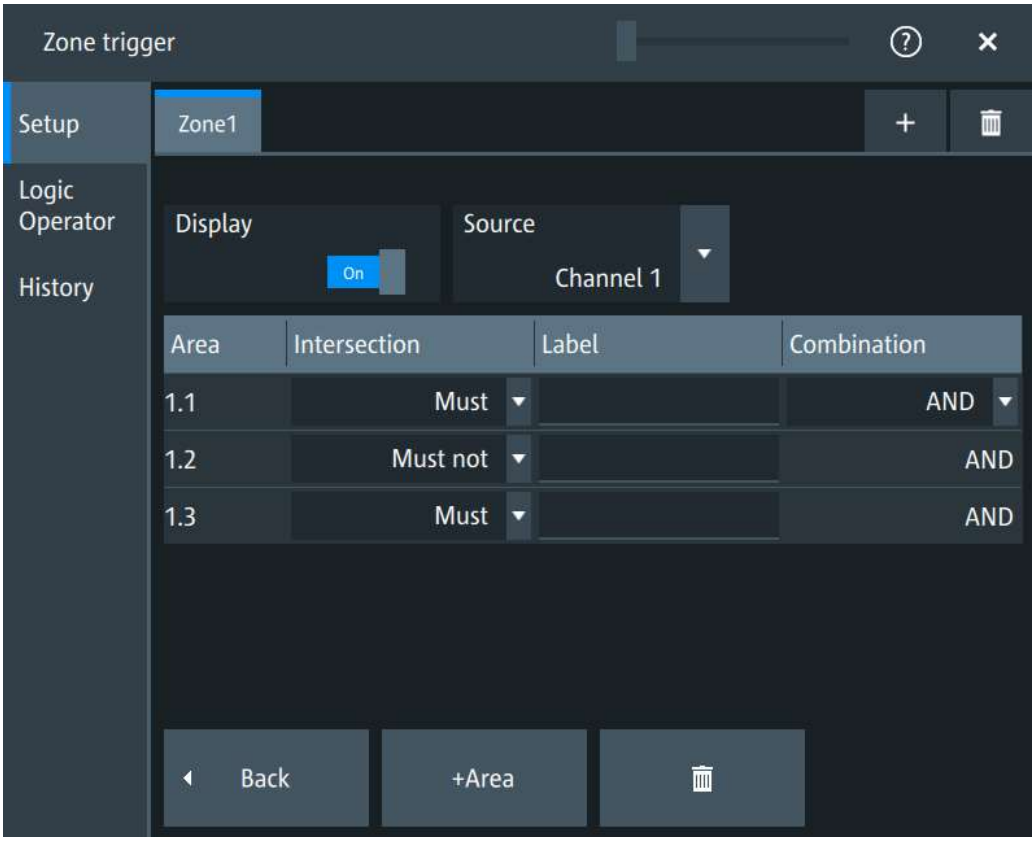

Add zone,
Adds a new trigger zone. You can add up to four zones.

Remote command:
`ZONE<m>:ADD` on page 1217

Display
Enables the display of the zone on the screen.

Remote command:
`ZONE<m>[:VISible]` on page 1223

Source
Sets the source of the zone trigger. The zone can be applied to any active input signal, math waveform, XY-plot, normal spectrum trace and power waveforms.

Reference waveforms are not supported as a spurce for the zone trigger. Thus, also math waveforms are not supported if they are calculated on reference waveforms.

Remote command:
`ZONE<m>:SOURce` on page 1222

Area
Defines the area and its condition for the zone.

"+Area" Adds a new area to the zone. You can add up to 8 areas.

"Intersect" Defines if the signal must intersect the area to allow the instrument to trigger, or if it must not intersect the area.

"Label" Defines a label for the selected area.

"Combination" Sets the logic combination that applies to all areas in a zone. Available are "AND" or "OR".
Example: If three areas are defined and the combination is "OR", then the Boolean state of the zone is Zone1 = Area1 OR Area2 OR Area3..

Remote command:
`ZONE<m>:AREA<n>:ADD` on page 1217
`ZONE<m>:AREA<n>:COUNt?` on page 1218
`ZONE<m>:AREA<n>:INTersect` on page 1218
`ZONE<m>:AREA<n>:LABel` on page 1218
`ZONE<m>:ACOMbination` on page 1217


Delete icon
Enables the removal of areas of the zone.

You can also delete all current areas with "Delete All".

Remote command:
`ZONE<m>:REMove` on page 1222
`ZONE<m>:AREA<n>:REMove` on page 1221

7.9.3 Logic operator settings


Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "Logic operator" tab.

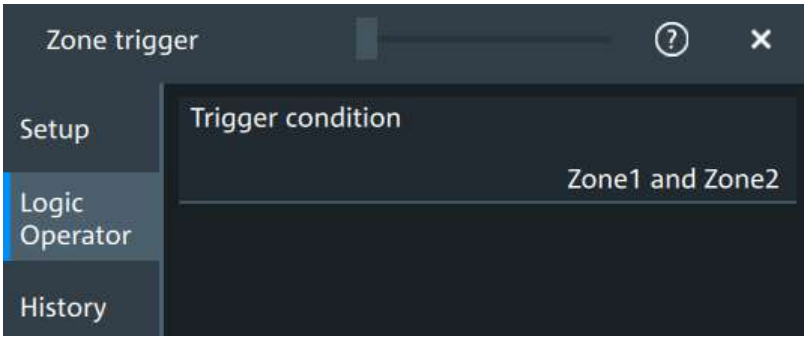

Trigger condition
Sets a logical expression for the trigger condition between different defined zones.

If all required zones are defined, you can type the logical expression directly, or use the trigger condition editor.

Double-tap the "Trigger condition" field to open the editor:

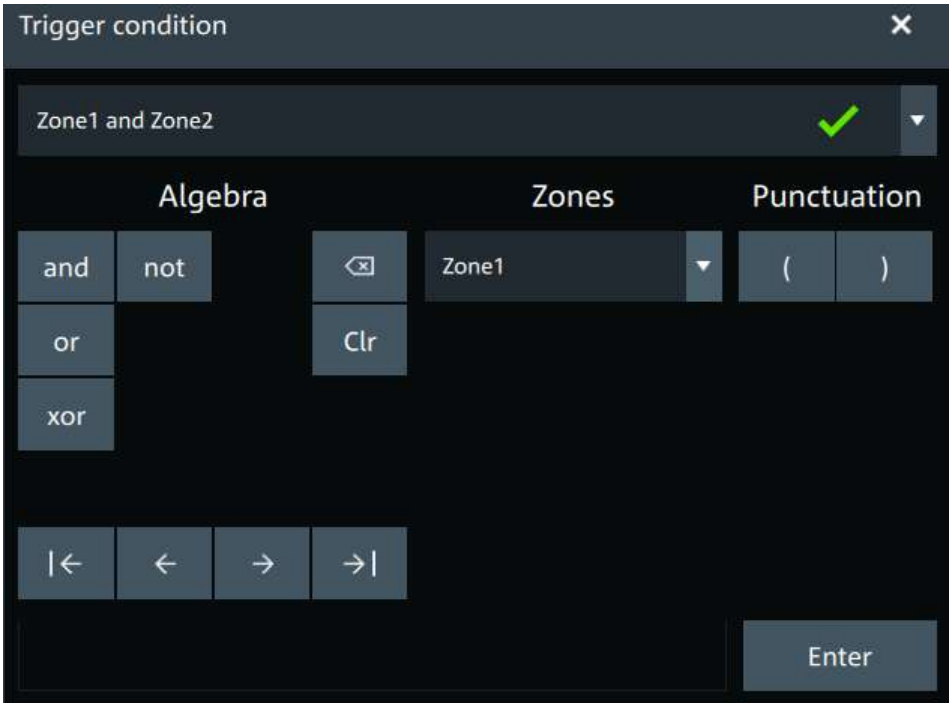

The keys of the "Trigger condition" editor are described in Trigger condition keys.


Table 7-1: Trigger condition keys

Icon	Description
and	And
not	Must not intersect
or	Or
xor	Exclusive or
Zone	Selects the zone
Clr	Clear expression in editor
(	Left bracket to enclose operands
)	Right bracket to enclose operands
|←	Moves cursor to beginning
←	Moves cursor 1 step to the left
→	Moves cursor 1 step to the right
→|	Moves cursor to end

Remote command:
`TRIGger:ZONE:EXPRession[:DEFine]` on page 1217

7.9.4 History settings

Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "History" tab.

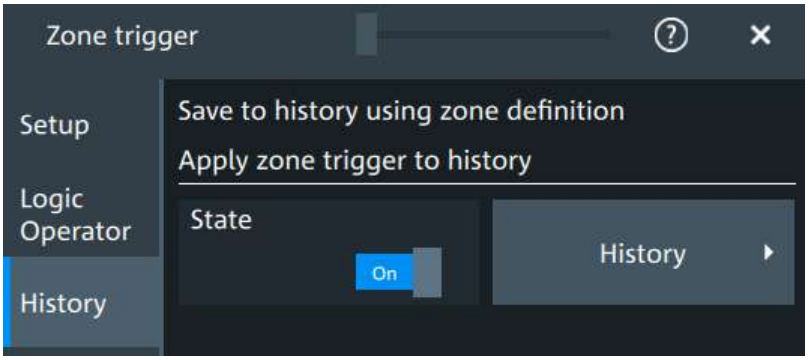

When a zone trigger is defined, the history saves only acquisitions that fulfill the complete trigger condition including the zone trigger condition. On the other hand, you can use the current zone trigger definition to filter the history replay.

Apply zone trigger to history
If enabled, the instrument applies the zone trigger condition to the acquisitions that are stored in the history memory. Tap "History" to open the history player and analyze the filtered waveforms.

Using "Apply zone trigger to history", you can:
- Acquire waveforms with high speed and filter them afterwards in the history.
- Change the zone trigger condition after acquisition.

Remote command:
`TRIGger:ZONE:HISTory` on page 1222


8 Signal configuration

8.1 Signals

The "Signals" tab lists the configured signals. You can add a signal and set its source, technology, serial standard and symbol rate.

8.1.1 General settings of signals

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Signals" > "Add".

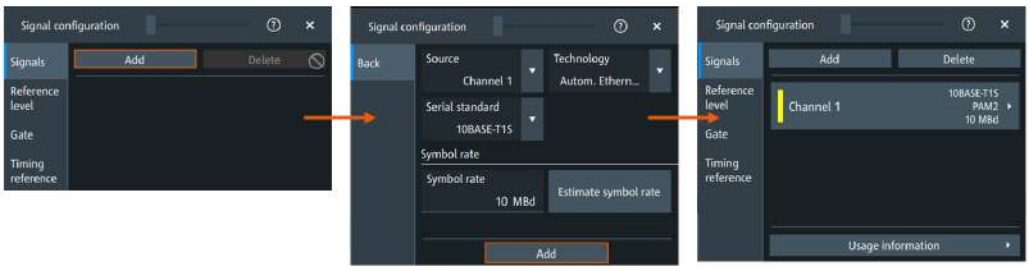

Add
Adds a new signal for configuration.

Remote command:
`SIGNalconfig:SETup:ADD` on page 1223
`SIGNalconfig:SETup:COUNt?` on page 1226
`SIGNalconfig:SETup:LIST?` on page 1226

Delete
If enabled, a delete icon appears next to each signl. Select the icon to delete the signal.

Remote command:
`SIGNalconfig:SETup:REMove` on page 1224

Source
Selects the source waveform of the signal from the active waveforms, e.g. input channels, math waveforms, or reference waveforms.

Remote command:
`SIGNalconfig:SETup:SOURce` on page 1224

Technology, Serial standard
Selects the technology and the serial standard of the signal.

For some technologies, the instrument sets the serial standard and the symbol rate automatically. Serial standards are available if the instrument supports the required symbol rate.

Table 8-1: Technology and serial standard properties

Technology	Serial standard	PAM order	Symbol rate	SCPI abbreviation
ASA	Downstream SG1 Downstream SG2 Upstream SG1 Upstream SG2	2/NRZ 2/NRZ 2/NRZ 2/NRZ	2 GBd 4 GBd 2 GBd 2 GBd	ADSG1 ADSG2 AUSG1 AUSG2
Automotive Ethernet	10BASE-T1S 100BASE-T1 1000BASE-T1 2.5BASE-T1 5GBASE-T1	2/NRZ 3 3 4 4	10 MBd 66.67 MBd 750 MBd 1.4602 GBd 2.8125 GBd	TBTS HBTO TBTO TPFGBTO FGBTO
DisplayPort™	Displayport 1.1	2/NRZ	1.296 GBd	DISPPORT11
Ethernet	100BASE-TX 1000BASE-T	3 5	125 MBd 125 MBd	HBT TBT
Fibre Channel	Fibre Channel 1x Fibre Channel 2x Fibre Channel 4x	2/NRZ	1 GBd 2 GBd 4 GBd	FIBCHAN1 FIBCHAN2 FIBCHAN4
GMSL	GMSL1 GMSL2 (3 Gbit/s) GMSL3 (6 Gbit/s)	2/NRZ 2/NRZ 4	3 GBd 3 GBd 3 GBd	GMSL1 GMSL23G GMSL36G
HDMI™	HDMI 1.2 HDMI 1.4	2/NRZ	1.32 GBd 3.4 GBd	HDMI12 HDMI14
MII	USXGMII	2/NRZ	322.27 MBd	USXGMII
PCIe®	PCIe Gen 1	2/NRZ	2.5 GBd	PCIGEN1
SAS	SAS Gen 1	2/NRZ	3 GBd	SASGEN1
SATA	SATA Gen 1 (1/500) SATA Gen 1 (1/1667) SATA Gen 1 SATA Gen 2 (1/500) SATA Gen 2 (1/1667) SATA Gen 2	2/NRZ	1.5 GBd 1.5 GBd 1.5 GBd 3 GBd 3 GBd 3 GBd	SATAGEN1500 SATAGEN11667 SATAGEN1 SATAGEN2500 SATAGEN21667 SATAGEN2
USB	USB 2.0	2/NRZ	480 MBd	USB20
XAUI	XAUI	2/NRZ	3.75 GBd	XAUI

Remote command:
`SIGNalconfig:SETup:TECHnology` on page 1224
`SIGNalconfig:SETup:SERStandard` on page 1225
`SIGNalconfig:SETup:PAMorder` on page 1225

Symbol rate
Sets or displays the symbol rate. For most serial standards, the symbol rate is predefined.

Remote command:
SIGNalconfig:SETup:SYMBolrate on page 1225

Estimate symbol rate
Starts a software algorithm to detect the symbol rate for the selected source automatically.

Remote command:
SIGNalconfig:SETup:SREStimation on page 1226

Usage information
Opens a list of configured signals with their type and usages, e.g. the jitter measurements based on this signals.

8.2 Reference level setup

Some measurements and analysis tasks require reference levels to obtain the measurement points, e.g. time measurements or timing reference. You can define 8 sets of reference levels. During configuration of the analysis task, you select which set of reference levels is used.

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Reference level" tab

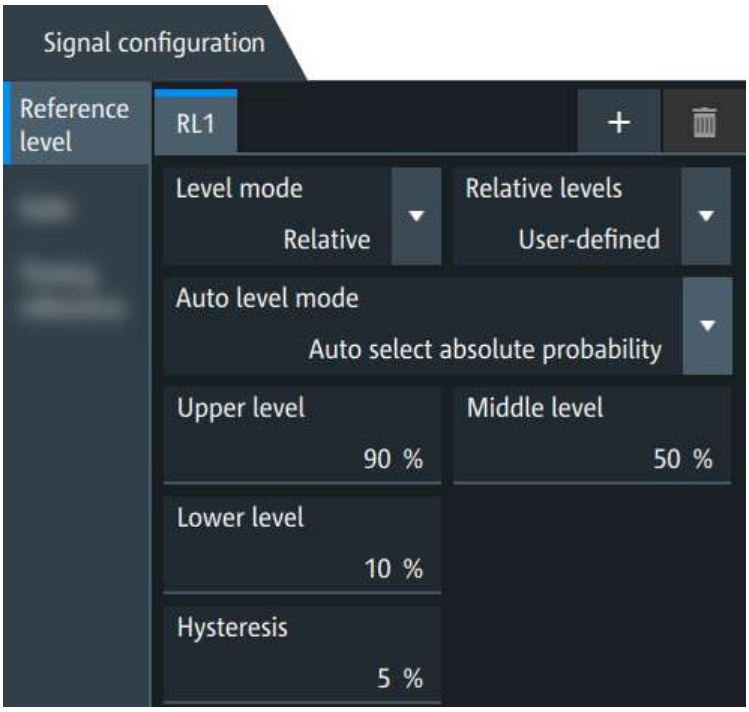


Figure 8-1: Relative reference level settings

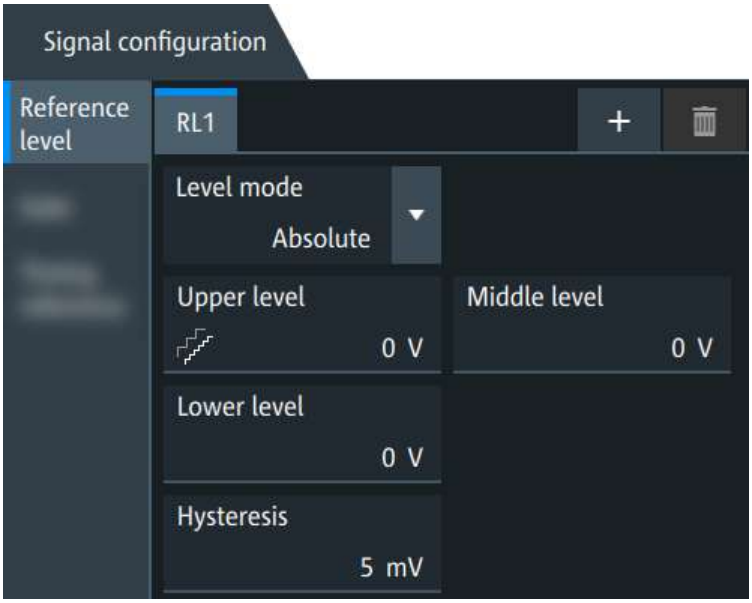


Figure 8-2: Absolute reference level settings

RLx
Select the correct reference level tab before you enter the settings.

You can add up to 8 reference levels.

Remote command:
`REFLevel<rl>:ENABle` on page 1227

Level mode
Defines if the reference level is set in absolute or relative values.

Remote command:
`REFLevel<rl>:LMODe` on page 1227

Absolute Level mode
In the absolute mode, the reference values are set in absolute values with the unit of the vertical axis.

Upper level, Middle level, Lower level ← Absolute Level mode
Set the lower, middle and upper reference signal levels.

Remote command:
`REFLevel<rl>:ABSolute:LLEVel` on page 1228
`REFLevel<rl>:ABSolute:MLEVel` on page 1229
`REFLevel<rl>:ABSolute:ULEVel` on page 1229

Relative Level mode
In the relative mode, the reference values are set as percentages of the signal amplitude.

Auto level mode ← Relative Level mode
Defines the computation method for high and low signal levels. The instrument analyzes and measures the signal, and defines the signal levels using the selected method. The reference levels are then defined on the computed signal levels.

See also: Section 10.2.5, "Histogram measurements", on page 302.

"Auto select absolute probability"	The most suitable signal levels are used.
"Peak probability"	The signal levels with the highest probability values are used. These values are the upper peak value and the lower peak value of the histogram measurement.
"Mean probability"	The signal levels with mean probabilities are used.
"Absolute peak"	The absolute peak signal levels are used. These values are the maximum and minimum signal values of the amplitude measurement.

Remote command:
`REFLevel<rl>:AUTO:MODE` on page 1227

Relative levels ← Relative Level mode
Selects the lower, middle and upper reference levels, defined as percentages of the signal amplitude.

Available relative levels:

- 5/50/95
- 10/50/90
- 20/50/80
- User defined: Enter "Upper level", "Middle level", and "Lower level".

For example, for "5/50/95" the levels are set to the following values:

- Lower level = 5% of the signal amplitude
- Middle level = 50% of the signal amplitude
- Upper level = 95% of the signal amplitude

Remote command:
`REFLevel<rl>:RELative:MODE` on page 1230

Upper level, Middle level,Lower level ← Relative Level mode
Define the reference levels in percent, if "Level mode" is set to "User-defined".

Remote command:
`REFLevel<rl>:RELative:LOWer` on page 1230
`REFLevel<rl>:RELative:MIDDle` on page 1230
`REFLevel<rl>:RELative:UPPer` on page 1231

Hysteresis
Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Remote command:
`REFLevel<rl>:ABSolute:HYSTeresis` on page 1228
`REFLevel<rl>:RELative:HYSTeresis` on page 1229


8.3 Gate setup

Gate areas limit various measurements to a user-defined range of the waveform.

You can define up to 8 separate gates. You can define absolute or relative limit values, or use an existing zoom, cursor set or spectrum as a gate.

Then, you assign the gates to analysis tasks, for example, to measurements or power analysis.

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Gate" tab

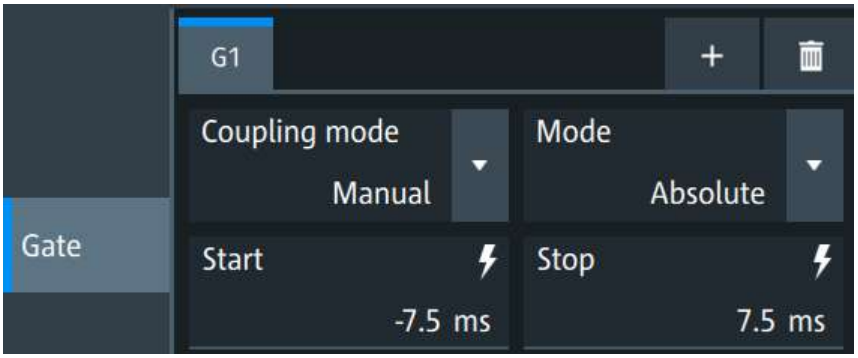

Add
Creates a new gate.

Remote command:
`GATE<g>:ENABle` on page 1232

Coupling mode
The gate coupling mode selects how the gate area is defined.

"Manual"	Manually define the gate with a user-defined start and stop values.
"Cursor"	Cursor coupling is available if a cursor is defined. The gate area is defined by the cursor lines of an active cursor measurement. If several cursor measurements are enabled, select the "Cursor" to be used for gating. The start and stop values of the gate are adjusted to the values of the cursor line positions. The measurement is limited to the part of the waveform between the cursor lines.
"Zoom"	Zoom coupling is available if a zoom is defined. The gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well. If several zoom diagrams are defined, select the "Zoom" diagram to be used for gating. The start and stop values of the gate are adjusted to the values of the zoom positions.
"Spectrum"	Spectrum coupling is available if a spectrum is enabled. If several spectrums are enabled, select the "Spectrum" diagram to be used for gating.

Remote command:
`GATE<g>:GCOupling` on page 1232
`GATE<g>:CURSor` on page 1233

GATE<g>:ZDIagram on page 1234
GATE<g>:SPECtrum on page 1233

Mode, Start, Stop
Selects if the gate settings are configured using absolute or relative values.

"Absolute" The gate is defined by absolute start and stop values with "Start" and "Stop".

"Relative" The gate's start and stop values are defined by a percentage of the value range with "Relative start" and "Relative stop".

Lightning symbols in the value fields indicate that the gate is not yet assigned to any measurement.


Remote command:
GATE<g>:MODE on page 1234
GATE<g>:ABSolute:STARt on page 1234
GATE<g>:ABSolute:STOP on page 1234
GATE<g>:RELative:STARt on page 1235
GATE<g>:RELative:STOP on page 1235

8.4 Timing reference

The timing reference is the clock that is used for jitter measurements, for example. You can configure up to 4 timing references. The clock can be a captured clock signal, or it can be recovered from the data signal by software CDR.

8.4.1 General settings of the timing reference

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Timing reference".

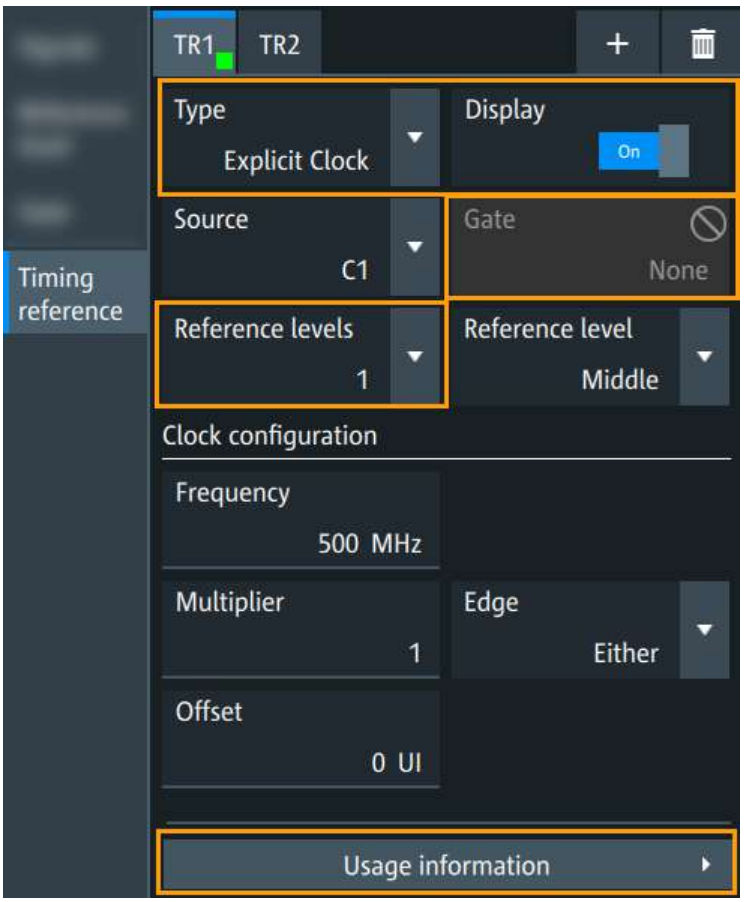

Type
Defines the origin of the clock signal - either an existing clock signal or waveform, or a clock generated by clock data recovery (CDR).

"Explicit clock"	The clock is an existing clock signal. See Section 8.4.2, "Explicit clock signal", on page 227.
"Software CDR"	The clock is generated by a software algorithm. See Section 8.4.3, "Clock data recovery by software CDR", on page 228.
"Protocol"	The clock is derived from a protocol-specific timing information. See Section 8.4.4, "Clock derived from protocol timing information", on page 232.

Remote command:
`TREFerence<m>:TYPE` on page 1238

Display
Enables the display of the clock signal in the diagram. The corresponding signal icon appears on the signal bar, e.g. TR1. You can handle the clock signal like any other waveform on the display.

Remote command:
`TREFerence<m>:DISPlay` on page 1236

Gate
Selects the gate that limits the part of the waveform used for clock recovery. Enable and configure a gate before you assign it.

Remote command:
`TREFerence<m>:GATE` on page 1237

Reference levels
Selects the set of reference levels that is used for the timing reference measurements.


Remote command:
`TREFerence<m>:RFLSet` on page 1237

Usage information
Opens a list of configured timing references with their type and usages, e.g. the jitter measurements based on this timing reference.

Remote command:
`TREFerence<m>:STATe?` on page 1238

8.4.2 Explicit clock signal

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Timing reference" > "Type" = "Explicit clock".

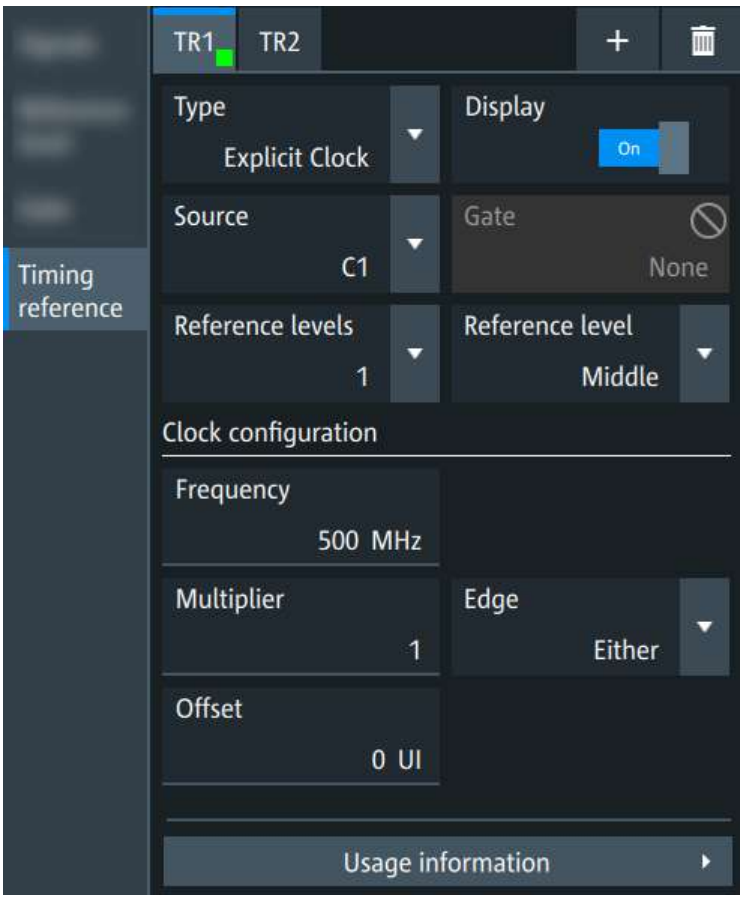

Reference level
Selects the reference level that is used for the timing reference measurement if the clock is an existing clock signal.

Remote command:
`TREFerence<m>:CLK:REFLevel` on page 1240

Source
Selects the channel of the clock signal.

Remote command:
`TREFerence<m>:SOURce` on page 1237

Frequency
Sets the frequency of the clock signal. The setting is relevant if the clock is an explicit clock signal.

Remote command:
`TREFerence<m>:CLK:FREQuency` on page 1239

Multiplier
Sets a value for the clock multiplier, which is the ratio of an internal clock rate to the externally supplied clock. It defines the number of samples per clock interval. The setting is relevant if the clock is an explicit clock signal.

Remote command:
`TREFerence<m>:CLK:FACTor` on page 1239

Edge
Sets the clock edges that are used for measurements. The setting is relevant if the clock is an explicit clock signal.

"Positive"	The positive clock slope can be used, for example, for single data rate (SDR) signals with bit start at the positive clock edge.
"Negative"	The negative clock slope can be used, for example, for SDR signals with bit start at the negative clock edge.
"Either"	Both edges can be used for double data rate (DDR) signals.

Remote command:
`TREFerence<m>:EDGE` on page 1236


Offset
Sets the offset between the clock edge and the data edge in unit intervals. The setting is relevant if the clock is an explicit clock signal.

Remote command:
`TREFerence<m>:CLK:OFFSet` on page 1240

8.4.3 Clock data recovery by software CDR

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Timing reference" > "Type" = "Software CDR".

If "Type" is set to "Software CDR", you need to set up the algorithm for the clock data recovery.

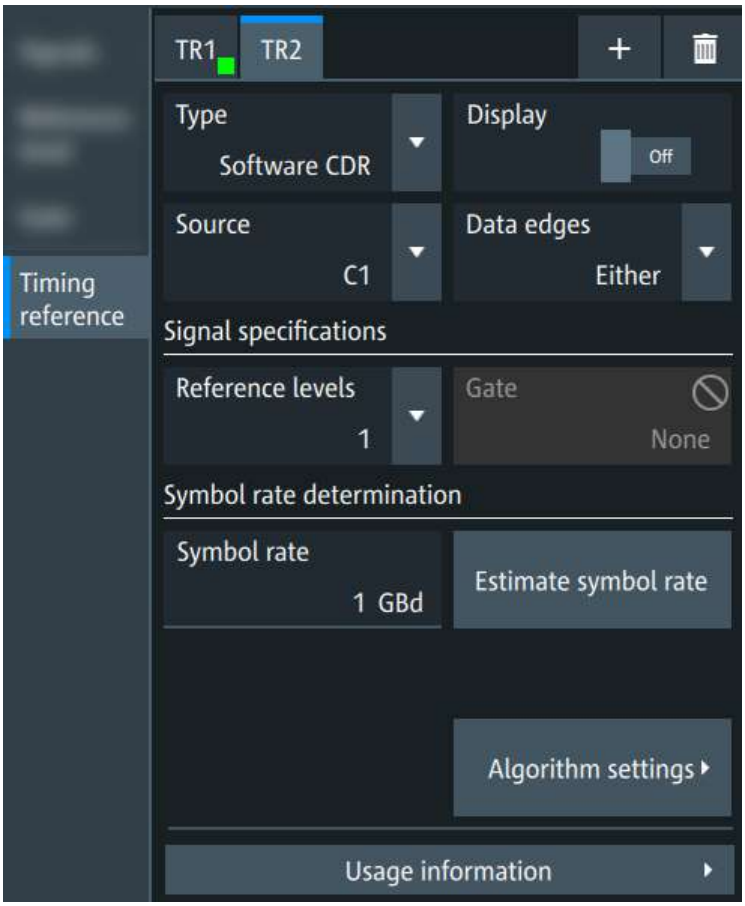

Source
Selects the signal from which the clock is recovered.

Remote command:
`TREFerence<m>:SOURce` on page 1237

Data edges
Selects the edges of the data stream that are used for the clock recovery.

- "Either": Both positive and negative edges are used.
- "Positive" or "Negative": Only one edge direction is used. Use one of these settings if the other edge delivers unreliable results.

Remote command:
`TREFerence<m>:EDGE` on page 1236


Symbol rate
Sets the quiescent frequency of the PLL. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Remote command:
`TREFerence<m>:SYMRate` on page 1238

Estimate symbol rate
Starts a software algorithm to detect the symbol rate for the selected source automatically.

Remote command:
TREFerence<m>:CDR:SOFTware:SREStimate on page 1242

Algorithm settings
Opens a dialog to set up the recovery algorithm.

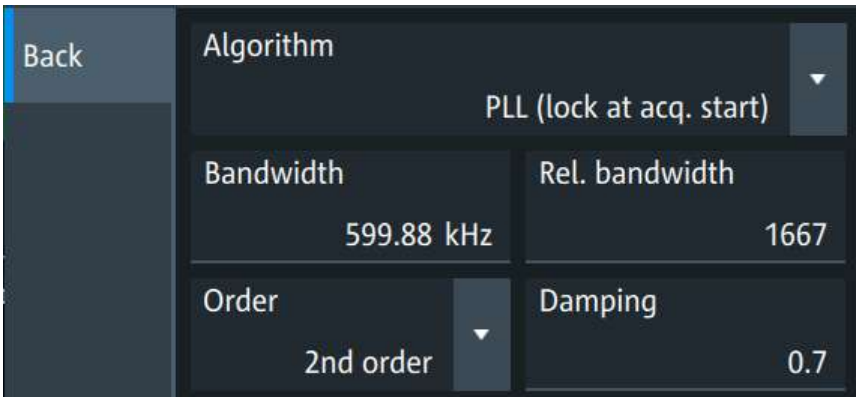

Algorithm ← Algorithm settings
Sets the software algorithm that is used for software clock data recovery.

"Constant freq."	CDR uses the nominal symbol rate to generate the clock signal. The method assumes that the frequency of the signal is constant during the complete acquisition.
"PLL"	PLL is the phase-locked loop control system. It can follow slow deviations in the frequency of the data stream. Thus, it acts as a highpass filter regarding the jitter that remains on the signal.
"Feed Forward"	The feed-forward algorithm is a mathematical optimization method used for clock data recovery. It is faster than PLL, i.e., the settling time is shorter. Feed forward is also more precise than PLL.
"PLL (lock at acq. start)"	Phase-locked loop control system, which is locked at the acquisition start.

Remote command:
TREFerence<m>:CDR:SOFTware:ALGorithm on page 1240

Clock resync ← Algorithm settings
Available for "Algorithm" = "Constant freq.".

Enables continuous synchronization of the clock with the data signal. At constant clock frequency without resync, the clock starts at the first detected edge and clocks with the given or estimated bit rate or symbol rate. With synchronization, the clock searches for the next data edge and synchronizes to this edge. Thus, the sampling points are not exactly at constant frequency but aligned to the defined edges of the data signal.

Remote command:
TREFerence<m>:CDR:SOFTware:CFRequency:CRSYnc on page 1241

Bandwidth
Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization. The PLL bandwidth is usually defined by the transmission standard.

Remote command:
`TREFerence<m>:CDR:SOFTware:BWIDth` on page 1241

Rel. bandwidth
Sets the relative bandwidth, which is the ratio of the nominal bit rate to the PLL bandwidth.

Remote command:
`TREFerence<m>:CDR:SOFTware:RELBwidth` on page 1243

Order
Sets the order of the PLL: first or second order. PLL of higher order can compensate for more complex jitter behavior.

Remote command:
`TREFerence<m>:CDR:SOFTware:PLL:ORDer` on page 1242

Damping
Sets the damping factor, which is only relevant for second order PLL.

Remote command:
`TREFerence<m>:CDR:SOFTware:PLL:DAMPing` on page 1241

Initial phase sync
Available for "Algorithm" = "PLL".

Defines the phase reference for the first clock edge.

"First data edge"	The first clock edge matches the first edge of the data signal.
"First sample"	The first clock edge matches the first sample of the waveform at the left border of the display.

Remote command:
`TREFerence<m>:CDR:SOFTware:PLL:SYNC` on page 1242

Selected results
Available for "Algorithm" = "PLL".

The PLL requires some time to synchronize to the phase of the data stream. You can select when the CDR algorithm returns clock edges:


"All"	All clock edges are used.
"After initial sync."	The clock edges of the synchronization time are discarded; results are gathered after initial synchronization of the CDR. Thus, meaningful TIE measurement results can be obtained.

Remote command:
`TREFerence<m>:CDR:SOFTware:SELResults` on page 1243

8.4.4 Clock derived from protocol timing information

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Timing reference" > "Type" = "Protocol".

If "Type" is set to "Protocol", the timing reference clock is derived from timing information of a configured serial bus. Only available for CAN protocol.

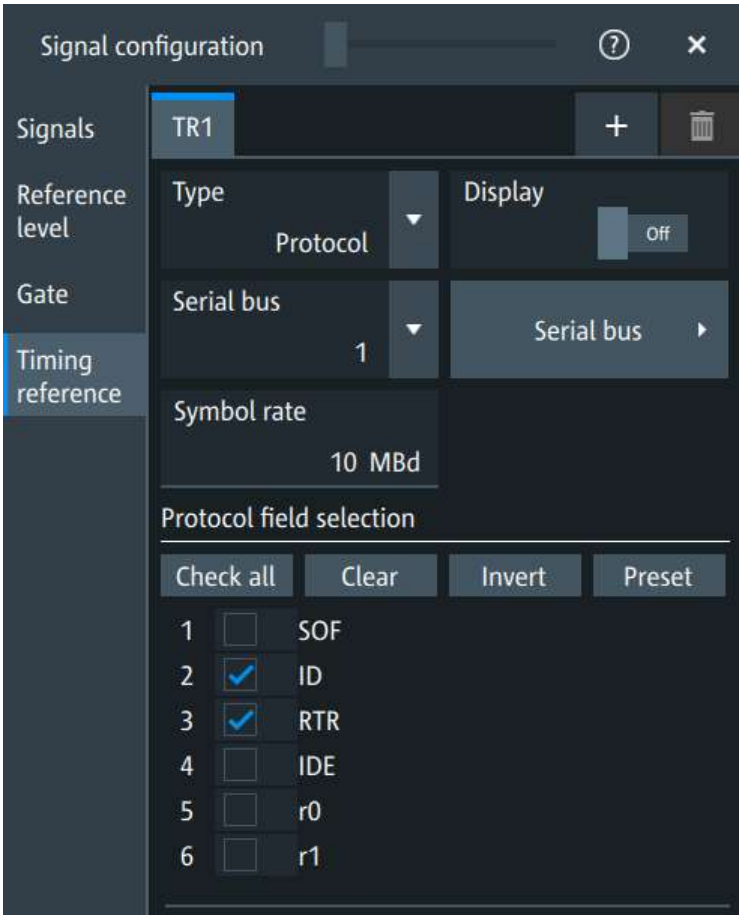

Serial bus
Selects the serial bus that provides the timing information for the timing reference.

Remote command:
`TREFerence<m>:PROTocol:SBUS` on page 1244

Serial bus button
Opens the serial bus configuration dialog. Use this dialog to configure the selected bus, see Section 14.1, "Basics of protocol analysis", on page 537.

Symbol rate
Adapts the symbol rate that results from the selected serial bus configuration.

Remote command:
`TREFerence<m>:SYMRate` on page 1238

Protocol field selection
Defines which protocol fields are used to derive the timing reference clock.

Remote command:
`TREFerence<m>:PROTocol:FIENable` on page 1244

Check all, Clear, Invert, Preset
The following settings help you select the protocol fields for clock derivation. Only the selected protocol fields are used to derive the timing reference.

"Check all"	Enables all available protocol fields for clock derivation.
"Clear"	Disables all selected protocol fields.
"Invert"	Inverts the current field selection: all fields that were enabled are disabled and vice versa.
"Preset"	Restores the predefined field selection.

Remote command:
`TREFerence<m>:PROTocol:CHKall` on page 1244
`TREFerence<m>:PROTocol:CLR` on page 1245
`TREFerence<m>:PROTocol:INVert` on page 1245
`TREFerence<m>:PROTocol:RST` on page 1245

9 Waveform analysis

This chapter describes general methods to check and analyze waveforms. These are:

- Zoom....234
- Mathematics....239
- History....252
- Reference waveforms....257
- Waveform histograms....266

9.1 Zoom

The zoom magnifies a part of the waveform to view more details. The zoom is applied to all waveforms that are visible in a diagram. Zoom areas can be used for gating, for example, to define a measurement gate. You can set the gate exactly to the limits of the zoom.

For each diagram, you can define one zoom area.


- You can define the zoom by drawing, moving and adjusting the zoom area on the touchscreen.
- You can precisely define the size of the zoom area by entering start and stop values in a dialog box.

Zoomed waveforms are shown in one or more separate zoom diagrams, in addition to the waveform diagrams. On the original waveform diagram, a rectangle indicates the zoomed section of the waveforms - this is the zoom area. You can modify the zoom area by moving the rectangle as a whole, and by moving its edges. To toggle between these modes, tap the zoom area. You can also set exact positions.

9.1.1 Zoom settings

Access: "Menu" > "Horizontal" > "Zoom" tab.

The "Zoom" tab allows you to specify start and stop values for the x-axis and the y-axis. The data acquired within these limits is zoomed.

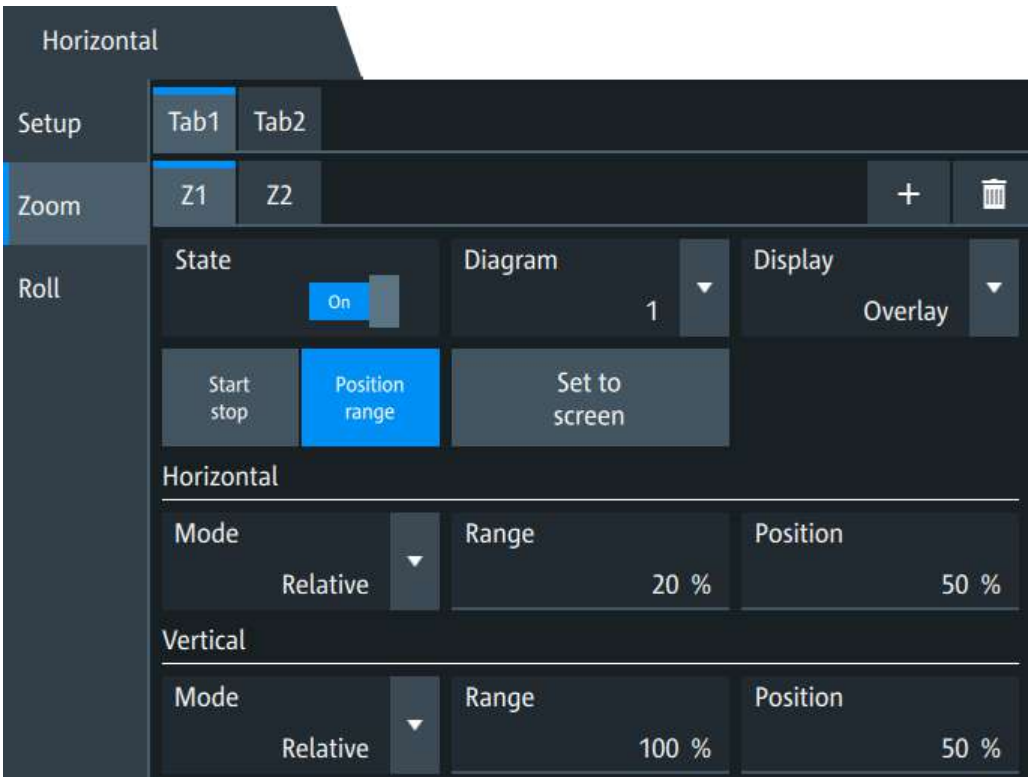

Tabx
Selects one of the enabled SmartGrid layouts.

Zx
Selects the zoom window. You can add up to 8 different zooms.

State
Enables the zoom.


Remote command:
`LAYout<ly>:ZOOM<zo>[:ENABle]` on page 1246

Diagram
Indicates which of the waveform diagrams is selected for zooming. The number is displayed on the screen in the middle of each diagram.


Remote command:
`LAYout<ly>:ZOOM<zo>:SOURce` on page 1252

Display
Selects how the zoomed waveforms are arranged if the zoom area contains several waveforms.


"Overlay" All zoomed waveforms are shown in one zoom diagram.

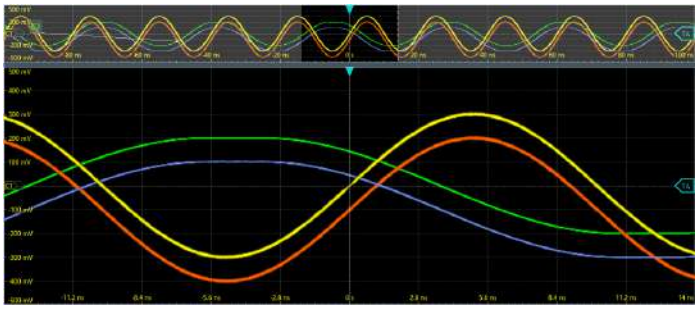

"Stacked" Each zoomed waveform has its own zoom diagram, and the zoom diagrams are shown one above the other.

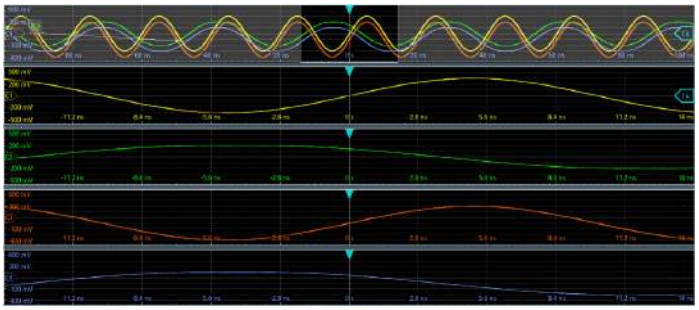

"Side by side" Each zoomed waveform has its own zoom diagram, and the zoom diagrams are shown side by side.

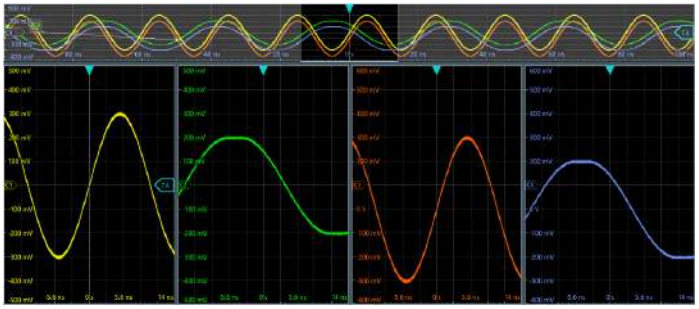

Analog channels and spectrum traces are considered as single waveforms. For logic channels, each the parallel bus gets its own zoom diagram, but not the individual logic channels.

Cursor measurements work in all displays as usual.

Remote command:
`LAYout<ly>:ZOOM<zo>:DISPlay` on page 1247

Start stop, Position range
Selects how the window for the zoom diagram is defined. You can select between defining "Start stop" values or "Position range".

Start, Stop
The "Start stop" tab allows you to specify start and stop values for the x-axis and y-axis. The data acquired within this range is zoomed.

According to the selected "Mode", absolute or relative values are used.

"Start", "Relative start"
Defines the lower limit of the zoom area on the axis.

"Stop", "Relative stop"
Defines the upper limit of the zoom area on the axis.

Remote command:
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt on page 1249
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STARt on page 1251
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP on page 1249
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP on page 1251
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt on page 1254
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt on page 1253
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP on page 1255
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP on page 1253

Range, Position
If "Position range" is selected, you specify the x and y position of center point of the zoom area plus a range for the x-axis and y-axis. The area defined by that point and the ranges is zoomed. You can set absolute values or relative values (in percent of the screen, depending on the "Mode" selection.

"Range" Defines the width or height of the zoom area.

"Position" Defines the x or y value of the centerpoint of the zoom area.

Remote command:
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition on page 1248
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition on page 1250
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN on page 1248
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN on page 1250
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition on page 1252
LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition on page 1254
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN on page 1253
LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN on page 1255

Set to screen
Sets the zoom area to the whole screen.

Remote command:
LAYout<ly>:ZOOM<zo>:SSCReen on page 1255

Mode
Defines if absolute or relative values are used to specify the "Horizontal" (x-axis) and the "Vertical" (y-axis) values.

Remote command:
LAYout<ly>:ZOOM<zo>:HORizontal:MODE on page 1250
LAYout<ly>:ZOOM<zo>:VERTical:MODE on page 1254

9.1.2 Zooming for details

To define the zoom area on the touchscreen

For graphical zooming, you use your finger on the screen.

1. On the toolbar, tap the "Add zoom" icon.

   The zoom overlay menu opens.

2. Draw a rectangle in the diagram that defines the zoomed area.
   While you drag your finger on the screen, a dotted rectangle indicates the current zoom area.

   The indicated area is magnified in a new zoom diagram. The original diagram shows the zoom area as a rectangle.

3. If the position of the zoom area is not correct, drag the rectangle in the overview to the correct position.

4. If the size of the zoom area is not yet ideal, tap the rectangle in the overview diagram.
   Now, 4 white lines indicate the edges of the zoom area. A dashed white line indicates the selected edge, which you can adjust.

5. Touch the edge that you want to move. Drag it to the required position.

To create a zoom using the zoom dialog box

► If you want to create a new, unconfigured zoom, tap the "Add" icon.



To define the zoom area numerically using start/stop values

1. Open "Menu" > "Horizontal".
2. In the "Zoom" tab, select "Start stop".
3. Select a value for "Horizontal" > "Mode" to define "Absolute" or "Relative" x-values.
   Relative values cause the zoom area to adapt to the input values dynamically.
4. Define the horizontal start and stop values. They define the left and right borders of the zoom area.
5. Select the "Vertical" > "Mode" to define "Absolute" or "Relative" y-values.

6. Define the vertical start and stop values. They define the lower and upper borders of the zoom area.

   When you close the dialog box, the specified area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle.

To define the zoom area numerically using position and range values

1. Open "Menu" > "Horizontal".
2. In the "Zoom" tab, select "Position range".
3. Select a value for "Horizontal" > "Mode" to define "Absolute" or "Relative" x-values. Relative values cause the zoom area to adapt to the input values dynamically.
4. Define the horizontal position, which is the x-value of the center point of the zoom area.
5. Define the horizontal range, which is the width of the zoom area.
6. Select the "Vertical" > "Mode" to define "Absolute" or "Relative" y-values.
7. Define the vertical position, which is the y-value of the center point of the zoom area.
8. Define the vertical range, which is the height of the zoom area.

   When you close the dialog box, the specified area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle.

To arrange the zoom waveforms

You have created a zoom in a diagram with several waveforms. By default, all zoom waveforms are shown overlaid in one diagram. To see the details of each zoom, you can arrange them.

1. Tap in the zoom diagram.

   On top, the zoom overlay menu is shown.
2. Tap "Display".
3. Select how to arrange the zoom waveforms:
   - One above the other: "Stacked".
   - Side by side: "Line up".

   See also: "Display" on page 235.

9.2 Mathematics

Math waveforms are calculated waveforms. You can define up to 8 math waveforms and display them on the screen, and use it as source for further analysis.

It is calculated out of one or two analog channels, or another math waveform using several predefined operations. You can define up to 5 equations. The complete configuration is called equation set and can be saved for later use.

Activating math waveforms reduces the available memory.

You can analyze math waveforms in the same way as channel waveforms: use zoom, perform automatic and cursor measurements, and save as reference waveform.

You can store a math waveform as a reference waveform and restore it later. See Section 9.4, "Reference waveforms", on page 257.

9.2.1 Creating math waveforms

Math waveforms are created and displayed in addition to the channel and other waveforms. They can also be used for analysis, e.g. measurements, even if the math waveform is not active.

1. Open "Menu" > "Math" > "Setup".
   Alternatively, press the [Math] key.
2. Define the mathematic operation with one of the following methods:
   - Use basic operations in "Operator" subtab.
   - Define a filtered waveform in the "Filter" subtab.
   - Create a mathematic equation in the formula editor on the "Equation" subtab.
3. Enable "State".

   The math waveform is displayed on the screen. A green dot in the math waveform tab indicates that the waveform is active.


4. To change the vertical scaling of the math waveform, open the "Scale" tab.
5. Set the "Scale mode" to "Manual".
6. Enter the "Vertical scale" factor (per division). If necessary, add a "Vertical offset". Default is the automatic scaling.
7. Close the "Math" dialog box.

9.2.2 General math waveforms settings

Access: "Menu" > "Math" > "Setup" tab


You can define up to 8 different math waveforms. Each waveform is defined in a separate tab in the "Math" dialog.

You can find a summary of the state and operations of all math waveforms in the "All" tab.

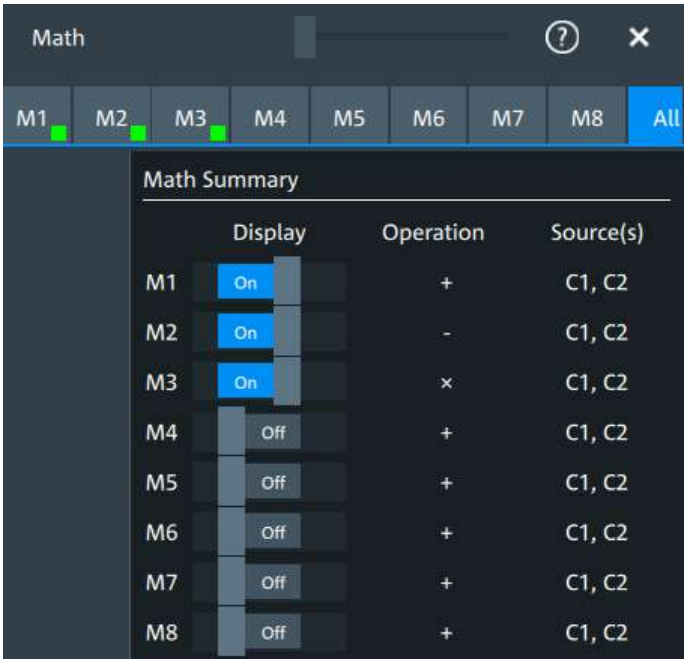

This section describes the general settings in the "Setup" tab. The subtabs for the definition of the mathematic operation are explained separately:

- Section 9.2.3, "Operator settings", on page 242
- Section 9.2.4, "Filter settings", on page 243
- Section 9.2.5, "Equations", on page 245

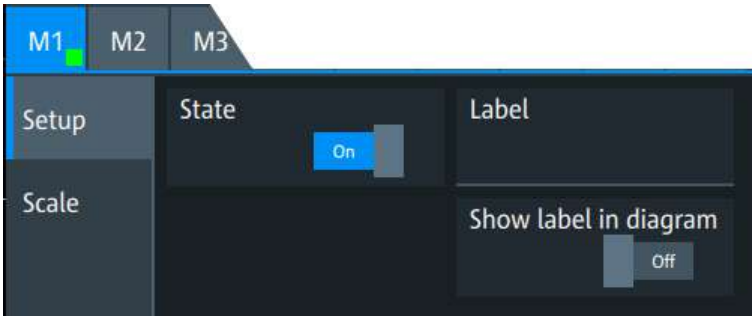

State
Activates the selected Math channel and displays the defined math waveforms.

Remote command:
`CALCulate:MATH<m>:STATe` on page 1256

Label
Defines a label for the selected math waveform.

Remote command:
`CALCulate:MATH<m>:LABel` on page 1258

Show label in diagram
Displays a waveform label at the waveform in the diagram, with the content defined in "Settings" > "Appearance" > "Grid".


See Section 5.3.2, "Grid", on page 103 for details on the content settings.

Remote command:
`CALCulate:MATH<m>:SLABel` on page 1258

9.2.3 Operator settings

Access: "Menu" > "Math" > "Setup" tab > "Operator".

To create simple math waveforms, use the settings in the "Operator" subtab. It provides common math functions.

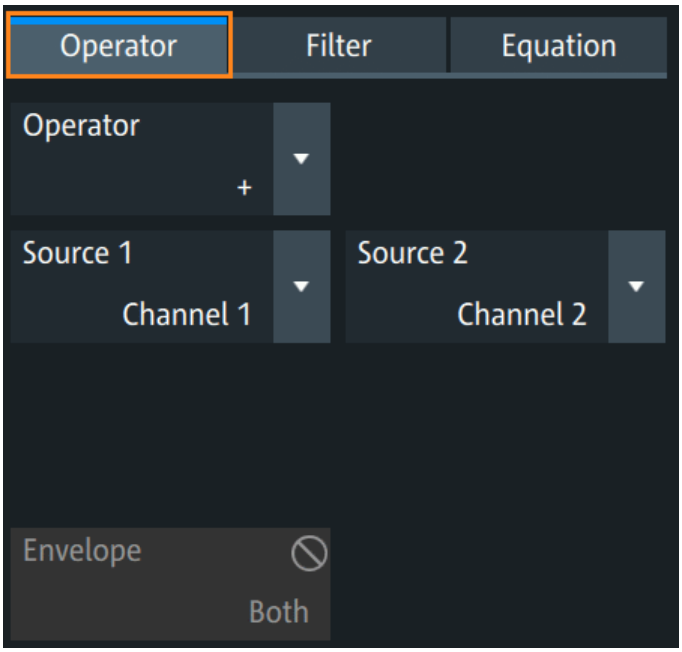

Operator
Defines the type of operation to be performed on the selected signal sources.

The following functions are available:

"+"	Adds the values of 2 sources (channel or math waveform).
"-"	Subtracts source 2 from source 1.
"x"	Multiplies the two sources.
"/"	Divides source 1 by source 2.
"1/x"	Calculates the reciprocal of the source.
"- x"	Calculates the negative value of the source.
"|x|"	Determines the absolute value of the source.

"Δx/Δt"	Differentiates the source value relating to the time value. Not possible on envelope waveforms and waveforms with "Peak detect" decimation.
"Integral"	Calculates the definite integral of the source.
"log(x)"	Calculates the logarithm of the source value based on 10.
"ln(x)"	Calculates the natural logarithm of the source value (based on e).
"ld(x)"	Calculates the binary logarithm of the source value (binary logarithm, based on 2).
"x^2"	Squares the source. If the source contains negative values that have been clipped, then the result contains positive clipping.
"√x"	Calculates the square root of the source. Note that the square root of a negative number is undefined and the result is clipped.
"Rescale"	Rescaling of x.

Remote command:
`CALCulate:MATH<m>[:EXPRession][:DEFine]` on page 1256

Source 1, Source 2
Defines the signal source to be evaluated by the math function.

a, b
Define the values for the rescale function, if "Operator" = "Rescale"

"a"	Multiplication factor
"b"	Offset of the signal source on the y-axis.

Noise reject
Only available for "Operator" = "Δx/Δt".

Sets the number of neighboring samples that are skipped for differentiation.

To suppress noise effects during differentiation, it can be useful not to consider two directly neighboring points to calculate *dx* (x_n-x_{n-1}). Instead, some samples in-between are skipped and a point a few samples further is used (e.g. x_n-x_{n-3}).

Envelope wfm selection
Selects the upper or lower part of the input waveform for mathematic calculation, or a combination of both.

Remote command:
`CALCulate:MATH<m>:ENVSelection` on page 1259

9.2.4 Filter settings

Access: "Menu" > "Math" > "Setup" > "Filter" tab

The finite impulse response filter is a filter to create filtered math waveforms with lowpass, highpass, or bandpass. The filter requires additional settings.

You can set up the filter in the "Filter" tab, or enter the filter formula in the formula editor. The editor provides more filters than the "Filter" tab. For details, see Table 9-3.

You can also define the filter coefficients in a CSV file and use the file for filtering. See "Bandpass and bandstop FIR filter with CSV file" on page 244.

In remote control, filter settings are defined in the expression string, see `CALCulate:MATH<m>[:EXPRession][:DEFine]` on page 1256.




Bandpass and bandstop FIR filter with CSV file

To define a bandpass or bandstop, you need a CSV file that contains the comma-separated filter coefficients in one row. The maximum number of filter coefficients is 100 000 taps. No other parameters are allowed in the file.

To create the CSV file, we recommend using the MATLAB® Filter Design & Analysis tool. In the tool, enter the filter type, filter order and filter frequencies. Alternatively, you can create the filter and the CSV file with Python®.

Make sure to set the sample frequency in MATLAB or Python and the sample rate at the oscilloscope to the same value. If the values differ, the filter is shifted in frequency.

On the MXO 5, select "Menu" > "Math" > "Setup" > "Filter", the filter "Type" = "User defined", and load the CSV file.

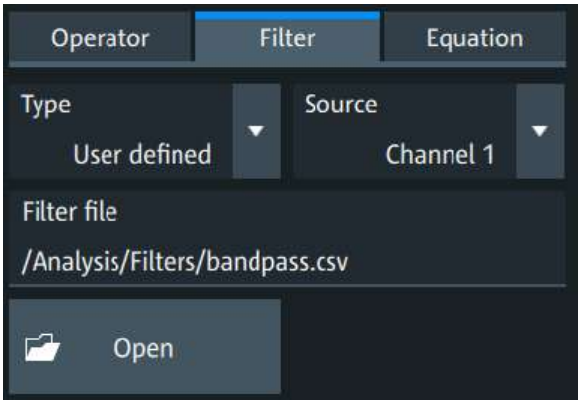

All settings on the "Filter" tab are explained below. You can also enter the appropriate function in the formula editor, see Table 9-3.

Type
Selects if the filter is a highpass, lowpass, or user-defined filter (bandpass/bandstop filter defined in a CSV file).

Source 1
Selects the input channel of the signal.

Cut-off
Sets the limit frequency for the filter.

Cutoff frequency for lowpass filter

The cutoff frequency depends on the horizontal resolution and the filter characteristics. The cutoff frequency range for the lowpass filter is:

$f_c = (0.01 ... 0.2) * f_a$ for Gaussian FIR filter

$f_c = (0,01 ... 0.4) * f_a$ for rectangular FIR filter

Cutoff frequency for highpass filter

The highpass filter is always rectangular. The cutoff frequency range for the highpass filter is:

$f_c = (0,01 ... 0.4) * f_a$

Where: f_c = cutoff frequency to be set for the lowpass filter, and f_a = reciprocal of the resolution, or sample rate of the postprocessing system (including, for example, interpolation).

Characteristics
Selects if a Gaussian or a rectangular shape is used for the lowpass filter. The high-pass filter always uses a rectangular shape.

Filter file, Open
If the "User defined" filter type is selected, choose the file with the filter coefficients. Select "Filter file" to type the path and filename, or tap "Open" to select the file in the file browser.

For information on filter files, see "Bandpass and bandstop FIR filter with CSV file" on page 244.

9.2.5 Equations

In the "Equation" tab, you can enter complex formulas to define a math waveform. The formula editor helps to enter formulas easily with correct syntax, using a large selection of operators and signal sources.

1. In the "Math" dialog, open the "Equation" tab.
2. Double-tap on "Math formula" to display the formula editor.

9.2.5.1 Math formula editor

Using the formula editor you can define math functions freely, using a selection of operators and signal sources.

9-1 shows an overview of the math formula dialog and its different sections. The separate functions are described below.

For a procedure to create equations, see Section 9.2.5.2, "Defining a formula in the formula editor", on page 250.



Figure 9-1: Math formula editor overview

1 = Math expression
2 = Numeric
3 = Unit
4 = Source
5 = Filters
6 = Algebra
7 = Math punctuation
8 = "Enter": press to complete the equation entry . The button is grayed out if the expression is not valid.
9 = Information display: additional information about the selected function is displayed.
10 = Cursor keys

Math expression

Use the various buttons of the editor to assemble the equation. If you know the exact syntax, you can also type the equation. You can see immediately whether the input is complete and correct.

We recommend connecting a keyboard to type the equations.

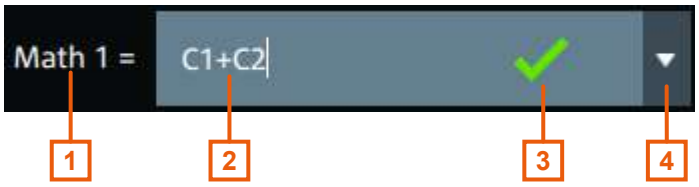


Figure 9-2: Math expression line

1 = Indicates the math waveform that is configured, e.g "Math 1" = "M1"
2 = Math expression input field
3 = Displays the status of the current expression: valid or not
4 = Displays a list of the last 20 used expressions

Buttons of the formula editor and their usage

Table 9-1: Source

Unit	Description
Analog channels	All analog channel waveforms of the device
Other math waveforms	All math waveforms of the device
Track channels	All track waveforms of a device
Reference	All reference waveforms of the device for which the source of reference is an analog channel (e.g. R3)

Table 9-2: Unit

Unit	Description
A	Ampere: the unit for electrical current.
V	Volt: the unit for electrical difference of potential
W	Watt: the unit for power. It is used to quantify the rate of energy transfer.
Ohm	Ohm: the unit for electrical resistance
Siemens	Siemens: the unit for electrical conductance
S	Second: the unit for time
Hz	Hertz: the unit for frequency, the number of occurrences of a repeating event per second.
dBm	dBm: the unit for power level. dBm is expressed in decibels (dB) with reference to 1 milliwatt (mW).
dB	dB: the unit for power gain, expressed in the base-10 logarithm of the ratio between two power levels.
dBµV	dBµV: the unit for voltage level. dBµV is expressed in decibels (dB) relative to 1µV across 50Ω resistance.
dBV	dBV: the unit for voltage level. dBV is expressed in decibels (dB) relative to 1V across 50Ω resistance

Unit	Description
Degree	Degree: the unit for an angle. A degree is a measure of angle equal to 1/360 of a full rotation.
rad	Radian: the unit for an angle. 2π radians make up a full rotation.

If you type the unit, put it in square brackets, for example *C1[A]*C3[V]*. Additional parenthesizes are required if you want to assign the unit to the result of the equation, for example *(C1*C3)[W]*

Table 9-3: Filters

Value	Usage/Comment *FormulaEditor expression*
FIR highpass	*FIR(highpass,source,limit,shape)*: source = input channel of the signal, limit = cutoff frequency shape = rectangle for the highpass filter **Example:** *FIR(highpass,C2,3e+09,rectangle)* Sets a rectangle highpass filter on Channel 2 with a 3 GHz cutoff frequency
FIR lowpass	*FIR(lowpass,source,limit,shape)* source = input channel of the signal limit = cutoff frequency shape = Gaussian or rectangle for the lowpass filter **Example:** *FIR(lowpass,C1,1e+07,gaussian)* Sets a Gaussian lowpass filter on Channel 1 with a 10 MHz cutoff frequency
FIR user defined	*FIR(userdef,source,path)* source = input channel of the signal path = string containing the path and filename of the filter file. The file contains the comma-separated filter coefficients. **Example:** *FIR(userdef,Ch1,"/run/media/usb/<MyDriveName>//bandpass.csv")* Sets a bandpass on channel 1 with filter coefficients saved in the `bandpass.csv` file.
IIR lowpass	*IIR(lowpass,source,limit,shape,order)* source = input channel of the signal limit = cutoff frequency shape = Bessel or Butterworth filter order = feedback filter order, 1 or 2 **Example:** *IIR(lowpass,C1,100000,bessel,1)* Sets a Bessel lowpass filter of first order on channel 1 with 100 kHz cutoff frequency.

Table 9-4: Numeric

Icon	Description	Usage/Comment *FormulaEditor expression*
0...9	Numeric characters	
 Backspace	Erases the character before the cursor	
Clr	Clear expression in editor	Restart editing
e	Math. constants, Euler number	Euler number: 2.7182...
π	Math. constants, Pi	Pi: 3.14159...
.	Decimal point	
±	Changes the sign of the equation	

Table 9-5: Algebra

Icon	Description	Usage/Comment *FormulaEditor expression*
+	Addition	
-	Subtraction	
*	Multiplication	
/	Division	
a^b	Exponentiation with base a	a: base, b: exponent *a^b*
|x|	Absolute x value	*abs(x)*
√x	Square root of x	*sqrt(x)*
x^2	x*x	*pow(x)*
1/x	Reciprocal of x	*1/(x)*
d/dx	Derivation of x	*Derivation(x,y)* With x = waveform and y = number of skipped samples (noise reject)
∫xdx	Integral of x	*integral(x)*
ax+b	Scaling of x	*Rescale(x,a,b)* With x = waveform, a= gain factor, and b= constant
$\log_{10}$	Decimal logarithm (base 10)	*log(x)*
$\log_e$	Natural logarithm (base e)	*ln(x)*
$\log_2$	Binary logarithm (base 2)	*ld(x)*

Table 9-6: Math punctuation

Icon	Description	Usage/Comment *FormulaEditor expression*
(	Left bracket	Enclose operands
)	Right bracket	Enclose operands

Icon	Description	Usage/Comment *FormulaEditor expression*
,	Comma	Separates operands
[	Left square bracket	Enclose unit
]	Right square bracket	Enclose unit

Table 9-7: Cursor keys

Icon	Description
|←	Moves cursor to beginning
←	Moves cursor 1 step to the left
→	Moves cursor 1 step to the right
→|	Moves cursor to end

9.2.5.2 Defining a formula in the formula editor

1. Open the "Menu" > "Math" dialog.
2. Select the "Equation" tab.
3. Double-tap the editing area.


   The "Formula Editor" is displayed.
4. Enter the math formula including all required signal sources and operators by selecting the corresponding keys in the editor. For details on the available keys, see Section 9.2.5.1, "Math formula editor", on page 246.
5. To perform a rescaling function, proceed as follows:
   a) Select the rescaling function using the "ax+b" key.
   b) Behind the left bracket, insert the signal source using one of the following keys:
      - "Cx" for a channel
      - "Mx" for a math function
      - "Rx" for a reference waveform
   c) After the first comma, insert the "a" value, i.e. the scaling factor, using the number keys.
   d) After the second comma, insert the "b" value, i.e. the scaling offset, using the number keys.

   The resulting expression could be, for example: `rescale(C1,3,4)`
6. To insert a unit, press "Unit". Select a value from the list.

   If you type the unit, put it in square brackets, for example *C1[A]*C3[V]*. Additional parenthesizes are required if you want to assign the unit to the result of the equation, for example *(C1*C3)[W]*

9.2.6 Scale settings for math waveforms

Access:"Menu" > "Math" > "Scale" tab

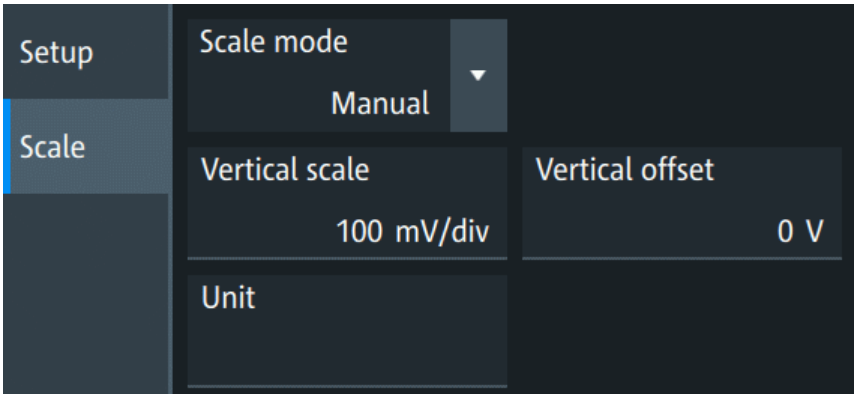

Scale mode
By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

"Manual" Enter the required values for "Vertical scale" and "Vertical offset".

"Auto" "Vertical scale" and "Vertical offset" are read-only.

Remote command:
`CALCulate:MATH<m>:VERTical:SCALe:MODE` on page 1260

Vertical scale
Sets the scale of the y-axis in the math function diagram. The value is defined as "<unit> per division", e.g. *50 mV/div*. In this case, the horizontal grid lines are displayed in intervals of 50 mV.

If Scale mode is set to "Auto", this setting is read-only.

Remote command:
`CALCulate:MATH<m>:VERTical:SCALe[:VALue]` on page 1258

Vertical offset
Sets a voltage offset to adjust the vertical position of the math function on the screen. Negative values move the waveform up, positive values move it down.

If Scale mode is set to "Auto", this setting is read-only.

Remote command:
`CALCulate:MATH<m>:VERTical:OFFSet` on page 1259

Unit
Sets a user-defined unit for the math operation.

Remote command:
`CALCulate:MATH<m>:UNIT` on page 1259

9.3 History

The history accesses the data of previous acquisitions and provides them for further analysis.

9.3.1 About history

If a continuous acquisition runs, the captured data is stored in the sample memory and the current acquisition is processed and shown on the display. After the acquisition is stopped, the history accesses the captured samples that were stored, displays these samples as history waveforms, and makes them available for further analysis. It considers all channels that were enabled during the running acquisition.

When a new single acquisition is started, the memory is cleared and written anew. In continuous acquisition, stopping and starting the acquisition does not clear the memory, and the history memory is continued. When the memory is full, new acquisitions are stored, and the oldest are removed (first in, first out). The history memory is cleared when the acquisition parameters are changed. To clear the history memory on demand, use the "Clear" tool on the toolbar.

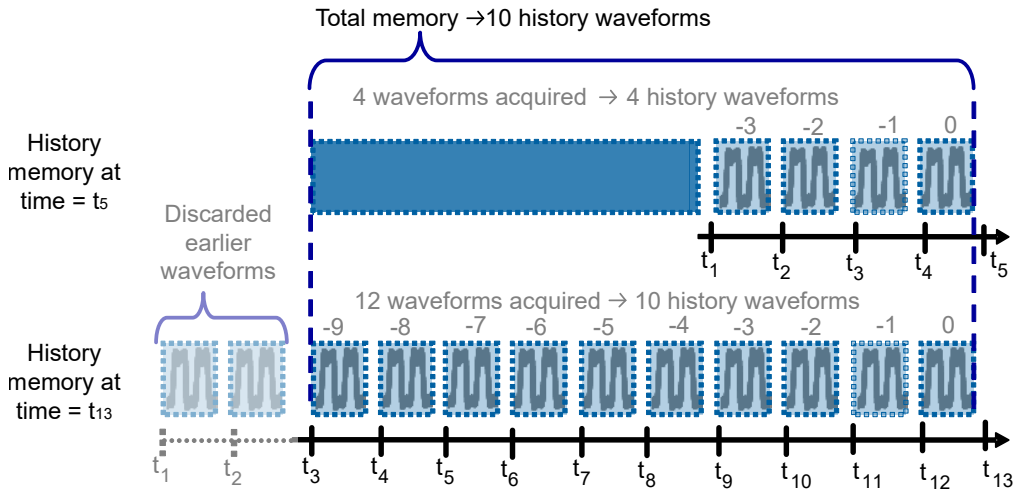


Figure 9-3: History memory. In this example, the memory can store 10 waveforms.

The number of stored history waveforms depends on the memory size, the number of enabled channels, and the record length. The shorter the record length, the less the number of channels, and the larger the memory, the more history waveforms are saved.

You can work with history waveforms in the same way as with the waveform of the latest acquisition: use zoom, cursors, measurements, create math waveforms and so on. You can also save a single history waveform for further analysis.


9.3.2 History setup

The "History" dialog contains the complete functionality on history viewing and information.

The most important information and functions are also provided in the quick-access history dialog box.

In the R&S ScopeStudio software, acquisition settings and functions that need an acquisition take effect if the channel source is a simulated waveform, created by the generator. If the channel source is loaded from a file, the acquisition-related settings can be imported with the data from the oscilloscope, either as a saveset, or included in a session. Changing imported acquisition-related settings has no effect.

Access: "Menu" > "Acquisition" > "History" tab.

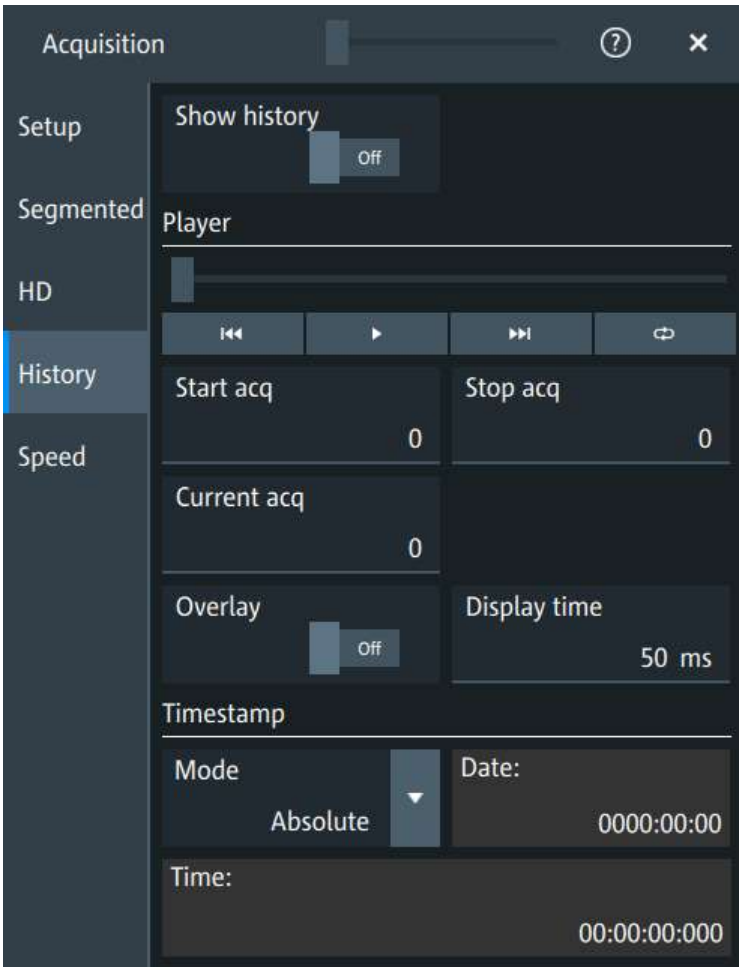

Show history....254
Player....254
Start acq....254
Stop acq....254
Current acq....254

Overlay....254
Display time....255
Time stamp....255

Show history
Enables the history mode and allows you to save history waveforms to file.

The history display is enabled automatically when you press the [History] button.

To disable the history, you can also close the quick-access "History" dialog box.

Remote command:
`ACQuire:HISTory[:STATe]` on page 1263

Player
The player can be used to control the playback of the history waveforms.


Sets the oldest acquisition in the sample memory as "Start acq" and "Current acq".


Starts and stops the replay of the history waveforms from "Start acq" to "Stop acq".


Sets the newest acquisition in the sample memory as "Stop acq" and "Current acq". This acquisition always has the index "0".


"Auto repeat": If selected, the playback of the selected history segments repeats automatically. See also: "Auto repeat" on page 256.

Remote command:
`ACQuire:HISTory:PLAY` on page 1261

Start acq
Sets the index of the first (oldest) acquisition to be displayed or exported. The index is always negative.

Remote command:
`ACQuire:HISTory:STARt` on page 1261

Stop acq
Sets the index of the last (newest) acquisition to be displayed or exported. The newest acquisition of the complete acquisition series always has the index "0".

Remote command:
`ACQuire:HISTory:STOP` on page 1262

Current acq
Accesses a particular acquisition in the memory to display it, or to save it. The newest acquisition always has the index "0". Older acquisitions have a negative index.

If a history replay is running, the field shows the number of the currently shown acquisition.

Remote command:
`ACQuire:HISTory:CURRent` on page 1260

Overlay
Same setting as "Infinite persistence / Overlay" on page 110.

Display time
Sets the display time for one acquisition. The shorter the time, the faster the replay is.

The setting takes effect for usual history replay and the display of a fast segmentation series via the history.

Remote command:
`ACQuire:HISTory:TPACq` on page 1262

Time stamp
The time stamp shows the time of the currently displayed history acquisition. Thus, the time relation between acquisitions is always available.

The time stamp "Mode" can be absolute or relative:
- In "Absolute" mode, the instrument shows the date and the daytime of the current acquisition.
- In "Relative" mode, the time difference to the newest acquisition (index = 0) is shown.


During history replay, the time value is displayed and updated if the replay speed ("Display time") is slow enough, that is 40 ms or slower.

The quick-access history dialog box always shows the time according to the "Mode" that is selected in the "Acquisition" > "History" tab.

Remote command:
`ACQuire:HISTory:TSDate?` on page 1262
`ACQuire:HISTory:TSABsolute?` on page 1262
`ACQuire:HISTory:TSRelative?` on page 1263
`ACQuire:HISTory:TSRReference?` on page 1263

9.3.3 Quick access history dialog

The quick access history dialog is visible when the history is active. Closing the dialog disables the history display ("Show history" = "Off")

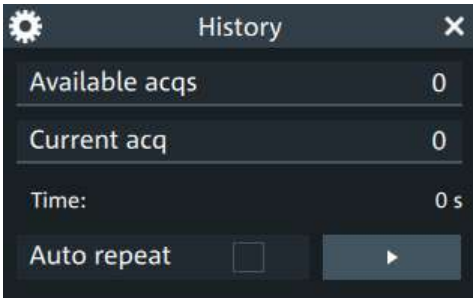

Available acqs 256
Current acq 256
Time 256
Auto repeat 256
Play 256

Available acqs
Number of acquisitions that is saved in the memory and available for history viewing. It is also the number of acquisitions in a fast segmentation acquisition series.

Remote command:
`ACQuire:AVAilable?` on page 1138

Current acq
Index of the current acquisition, same as Current acq in the history setup.

Time
Shows the timestamp of the current acquisition. See "Time stamp" on page 255.

Auto repeat
If selected, the playback of the selected history segments repeats automatically.

Remote command:
`ACQuire:HISTory:REPLay` on page 1261

Play
Starts and stops the replay of the history waveforms. See also: "Player" on page 254.

9.3.4 Using history

You can access the history of waveforms in two ways:

- Display a particular acquisition.
- Replay all or a part of the saved waveforms to track the signal run.

To open the history and get information

1. Press the [History] key on the front panel.


   A running acquisition is stopped, the history mode is enabled and the quick-access "History" dialog box is displayed. The [History] key lights up as long as the history mode is active.

2. Open the full configuration dialog box:
   - Tap the icon.
   - Open "Menu" > "Acquisition" dialog > "History" tab.

To display a particular acquisition

You can analyze a selected history waveform, and save it to a file.

► In the quick-access "History" dialog, enter the number of the required acquisition in the "Current acq" field. The newest acquisition always has the index "0", older acquisitions have a negative index.

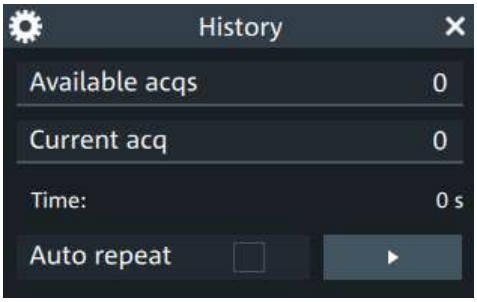

Alternatively, you can configure and start the history display from the "History" configuration dialog:

1. Open the "History" configuration tab.
2. If the history mode is off (the [History] key is not illuminated), select "Show history".
3. Drag the slider to the required acquisition. The current number is shown in the "Current acq" field.
   Alternatively, enter the number of the required acquisition in the "Current acq" field.

To save a single history waveform

1. Select and display the required history waveform as described in "To display a particular acquisition" on page 256.
2. Save the selected waveform using "Save/recall" > "Save" tab > "Waveform". For details, see Section 13.4, "Data of analog waveforms", on page 501.

To replay history waveforms

If you want to see the complete acquisition series without any setup, simply tap in the quick-access "History" dialog box. For specific analysis of history data, use the history "Viewer" setup.

1. Open the "History" configuration dialog tab.
2. If the history mode is off, enable "Show history".
3. Tap ▶ to start.

To exit the history

► Choose one of the following ways:
- Close the quick-access "History" dialog box.
- In the "History" configuration tab, disable "Show history".
- Start the acquisition.

9.4 Reference waveforms

Reference waveforms can be displayed in addition to the signal waveforms, saved to a file, and loaded back for further analysis.

You can configure up to 8 reference waveforms to display stored waveforms. Various waveform types can be used as reference waveforms, for example, analog signals, math waveforms, or spectrum.

Supported file formats

Reference waveforms can be loaded from REF, BIN and CSV files.

BIN is supported for waveforms that were saved on RTO2000, RTO6, RTE or RTP in BIN format.

Loading from CSV is supported under the following conditions:

- One analog channel waveform is stored in the CSV file. Envelope values are supported.
  Other waveform types than analog channels are not supported.
  Multichannel CSV files are not supported.
- The trigger time is not reconstructed, the trigger is always in the middle of the waveform.
- Clipping detection on measurements on a reference waveform from CSV is not supported.

9.4.1 Working with reference waveforms

- "To open the "Reference waveform" dialog" on page 258
- "To load a reference waveform" on page 258
- "To display and configure a reference waveform" on page 259
- "To save a reference waveform" on page 259

To open the "Reference waveform" dialog

► There are several ways to open the "Reference waveform" dialog:

- In the "Menu" > "Apps" > "General" tab, select "Reference".
- Select the "+ Ref" signal activator on the signal bar.
- Press the [Ref] key

To load a reference waveform

Note: Reference waveforms can be loaded from REF files and CSV files with single channel waveforms.

1. Open the "Reference waveform" dialog as described in "To open the "Reference waveform" dialog" on page 258.
2. Select the tab for the reference waveform that you want to load ("R1/2/3/4/5/6/7/8").
3. In the "Setup" tab, select "Open".
4. In the file browser dialog, select the "File type": "*.ref" or "*.csv".
5. Select the file.

6. Tap "Open".

   The selected waveform is loaded to the specified reference waveform.

To display and configure a reference waveform

1. Open the "Reference waveform" dialog as described in "To open the "Reference waveform" dialog" on page 258.
2. Select the tab for the reference waveform that you want to display, e.g. "R1".
3. Load a stored reference waveform as described in To load a reference waveform. Alternatively, select a source that you want to display as a reference:
   a) In the "Setup" tab, select "Source".
   b) Select the "Source" from the selection list. The list shows all active waveforms that you can save as references.
   c) Tap the "Create/Update" button to update the current reference waveform with the source data.
4. Tap the "Show" button.

   The reference waveform is displayed on the screen.
5. A reference waveform can have its own scaling settings or it can be scaled according to the source settings. By default, the scaling of the reference waveform is coupled to the source settings. Also, you can stretch it or compress it in vertical and horizontal directions.
   If necessary, change the settings on the "Vertical" and "Rescale" tabs of the "Reference waveform" dialog.
   To restore the original settings, tap the "Set to original" in the "Vertical" tab.
   For a description of the scaling settings, see Section 9.4.2.4, "Rescale settings", on page 264.

To save a reference waveform

1. Open the "Reference waveform" dialog as described in "To open the "Reference waveform" dialog" on page 258.
2. Select the tab for the reference waveform that you want to store, e.g. "R1".
3. Display and configure the reference waveform as described in "To display and configure a reference waveform" on page 259.
4. Tap "File extension" to select the file format.
   Note that reference waveforms can be loaded from REF files and CSV files only.
5. To save the waveform, tap "Save as".
6. Enter a filename and select the directory. The file type is defined according to the selection in the previous steps.

   The source settings of the reference waveform and the current scaling settings are stored to the specified file.

9.4.2 Settings for reference waveforms


To compare waveforms and analyze differences between waveforms, you can use up to 8 reference waveforms.

You can save an unlimited number of reference waveforms and load them for further use.

The display of a reference waveform is independent from the display of the source waveform; you can move, stretch and compress the curve vertically and horizontally.

9.4.2.1 Reference waveform setup

Access: "Menu" > "Apps" > "General" tab > "Reference" > "Setup" tab

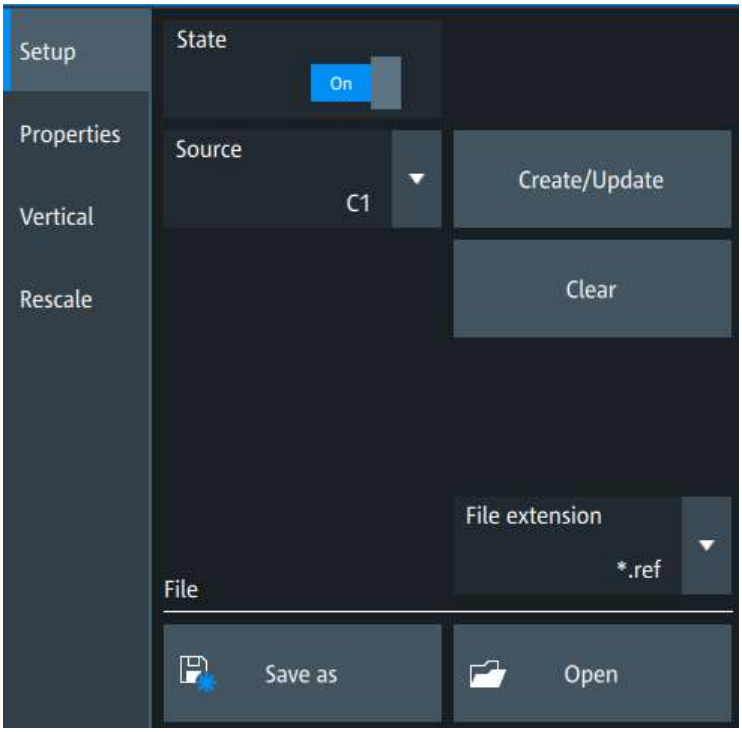

In the "Setup" tab, you select the target reference waveform and its source.

R1/2/3/4/5/6/7/8
Each tab contains the settings for one of the available reference waveforms.

Show
Enables the display of the reference waveform in the diagram. Before you can display it, create the reference waveform.

Remote command:
`REFCurve<rc>:STATe` on page 1266

Source
Selects the source waveform from the active waveforms, e.g. input channels, math waveforms, or spectrum.

Remote command:
`REFCurve<rc>:SOURce` on page 1266

Create/Update
Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform. If the acquisition is running, the reference waveform is a snapshot.

A progress bar informs you about the process.

Remote command:
`REFCurve<rc>:UPDate` on page 1267

Clear
Deletes the selected reference waveform. It disappears from the display, and its memory is deleted.

Remote command:
`REFCurve<rc>:CLEar` on page 1264

File extension
Selects the file format.

Save as
Saves the reference waveform. The complete reference waveform is stored in a file and can be reloaded later.

A progress bar informs you about the process.

See also:
- Section 13.4, "Data of analog waveforms", on page 501
- Section 13.4.3, "Waveform export files", on page 508

Remote command:
`REFCurve<rc>:NAME` on page 1264
`REFCurve<rc>:SAVE` on page 1266
To abort the saving, use `REFCurve<rc>:ABORt` on page 1264.


Open
Opens a file selection dialog box and loads the selected reference waveform file.

See "Supported file formats" on page 258.

Remote command:
`REFCurve<rc>:OPEN` on page 1265

9.4.2.2 Reference waveform properties

Access: "Menu" > "Apps" > "General" tab > "Reference" > "Properties" tab

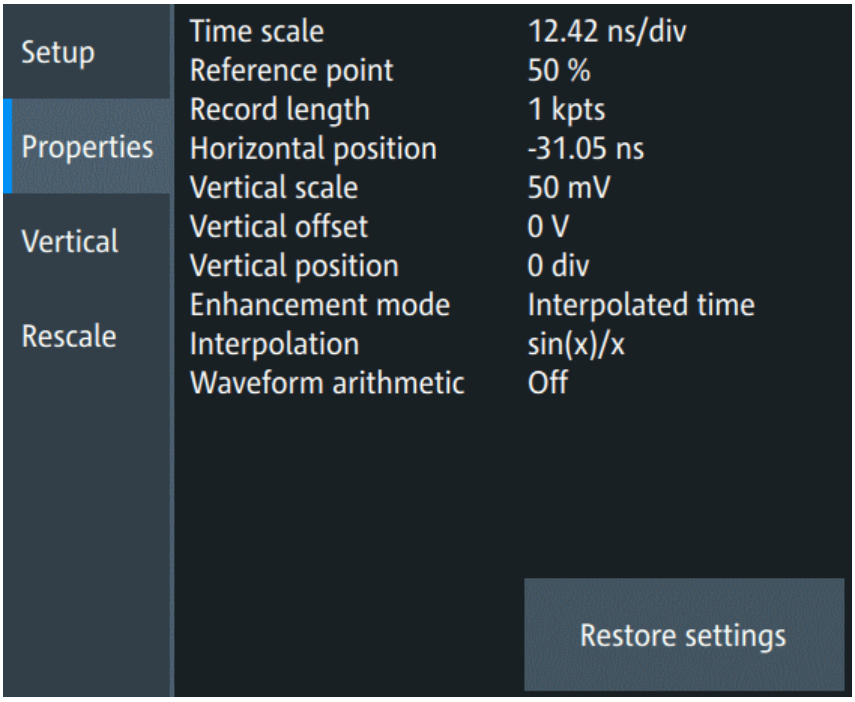

A reference waveform can be scaled, stretched and positioned in the diagram. The "Properties" tab shows the original settings of the reference waveform, which are stored together with the waveform data.

The following settings are displayed:

- Time scale
- Reference point
- Record length
- Position
- Scale
- Offset
- Position
- Enhancement mode
- Interpolation
- Waveform arithmetic

Enhancement mode
The enhancement mode is taken from the source waveform of the reference. The enhancement mode is set automatically by the instrument and depends on the sample rate. As long as the waveform sample rate is not higher than the ADC sample rate, the instrument works automatically in real time mode (RT). At higher waveform sample rates, the instrument changes to interpolated time mode (IT), where interpolation adds waveform points between the captured ADC samples by various mathematical methods, see Interpolation.


Waveform arithmetic
The waveform arithmetic is taken from the source waveform of the reference, and it cannot be changed for the reference. Waveform arithmetic builds the resulting waveform from several consecutive acquisitions of the signal. The arithmetic methods are envelope and average, which are set in the Acquisition mode.

Restore settings
Applies the original settings of the reference waveform to the horizontal and vertical settings of the selected waveform.

Remote command:
`REFCurve<rc>:RESTore` on page 1265

9.4.2.3 Vertical settings for reference waveforms

Access: "Menu" > "Apps" > "General" tab > "Reference" > "Vertical" tab

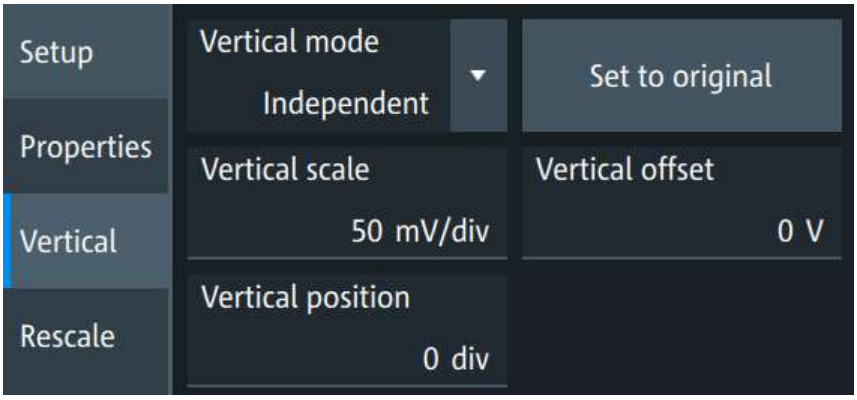

Vertical mode
Selects the type of vertical settings:

"Coupled to source" Vertical position and scale of the source are used.

"Independent" Scaling and position can be set specific to the reference waveform.

Remote command:
`REFCurve<rc>:VMODe` on page 1271

Set to original
Available, if "Vertical mode" = "Independent".

Restores the original vertical settings of the reference waveform.

Remote command:
`REFCurve<rc>:TOORiginal` on page 1271

Vertical scale
Available, if "Vertical mode" = "Independent".

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The unit of the reference is the same as the unit of the source waveform.

Remote command:
`REFCurve<rc>:SCALe` on page 1268

Vertical offset
The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Remote command:
`REFCurve<rc>:OFFSet` on page 1265


Vertical position
Available, if "Vertical mode" = "Independent".

Moves the reference waveform up or down in the diagram.

Remote command:
`REFCurve<rc>:POSition` on page 1268

9.4.2.4 Rescale settings

Access: "Menu" > "Apps" > "General" tab > "Reference" > "Rescale" tab

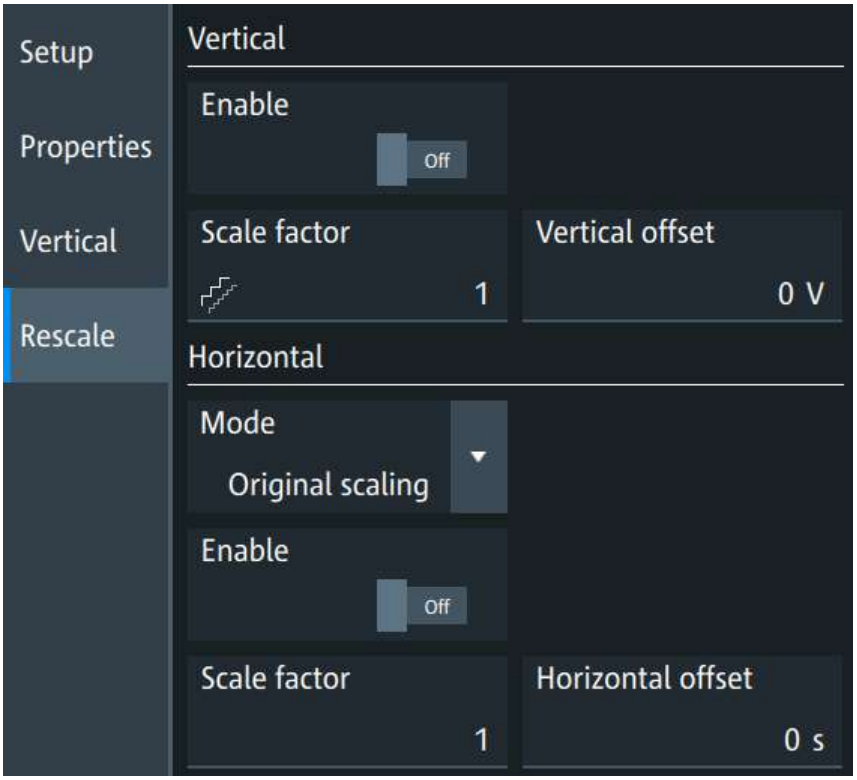

In the "Rescale" tab you can adjust the vertical and horizontal scaling of the reference waveform.

Vertical
Stretching and offset change the display of the waveform independent of the vertical scale and position.

Enable ← Vertical
If enabled, the vertical offset and factor are applied to the reference waveform.

Remote command:
REFCurve<rc>:RESCale:VERTical:STATe on page 1270

Scale factor ← Vertical
Sets the vertical scale factor. A factor greater than 1 stretches the waveform vertically, a factor lower than 1 compresses the curve.

Remote command:
REFCurve<rc>:RESCale:VERTical:FACTor on page 1270

Vertical offset ← Vertical
The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Like vertical offset of a channel waveform, the offset of a reference waveform is subtracted from the measured value. Negative values shift the waveform up, positive values shift it down.

Remote command:
REFCurve<rc>:RESCale:VERTical:OFFSet on page 1270

Horizontal
Stretching and offset change the display of the waveform independent of the horizontal settings of the source waveform and of the horizontal diagram settings.

Mode ← Horizontal
Selects the type of horizontal settings:

"Original scaling"	Horizontal scaling and reference point of the source waveform are used.
"Adjust to X Axis"	The current horizontal settings of the diagram are used.

Remote command:
REFCurve<rc>:HMODe on page 1268

Enable ← Horizontal
If enabled, the horizontal offset and factor are applied to the reference waveform.

Remote command:
REFCurve<rc>:RESCale:HORizontal:STATe on page 1269

Scale factor ← Horizontal
Sets the horizontal scale factor. A factor greater than 1 stretches the waveform horizontally, a factor lower than 1 compresses the curve.

Remote command:
REFCurve<rc>:RESCale:HORizontal:FACTor on page 1269

Horizontal offset ← Horizontal
Moves the waveform horizontally. Enter a value with a time unit suitable for the time scale of the diagram.

Positive values shift the waveform to the right, negative values shift it to the left.

Remote command:
`REFCurve<rc>:RESCale:HORizontal:OFFSet` on page 1269

9.5 Waveform histograms

Histograms are used to plot density of data. They show graphically how often which signal values occur. The histogram accumulates the measured y-values (vertical histogram), or the occurrence of a sample at a given time on the x-axis (horizontal histogram). The data is accumulated during the running acquisition cycle. They are a prerequisite for histogram measurements.

You can analyze the complete waveform by a histogram, or a part of it by defining a histogram window. The maximum count of a waveform value is assigned to the full height (histogram peak). All other count values are displayed relative to the maximum.

You can define up to 8 histograms. They are created quickly using the toolbar icon and overlay menu, or in the "Histogram" app dialog.

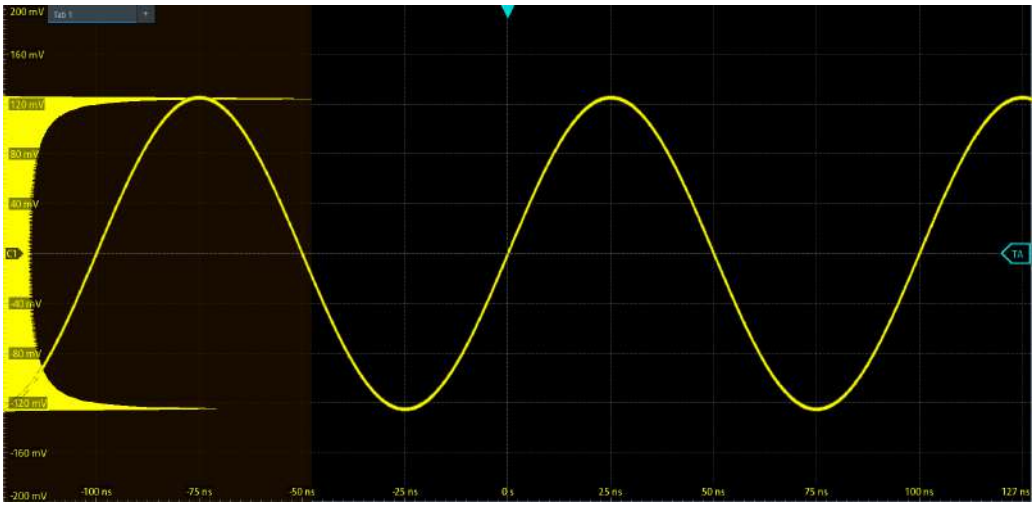


Figure 9-4: Full histogram

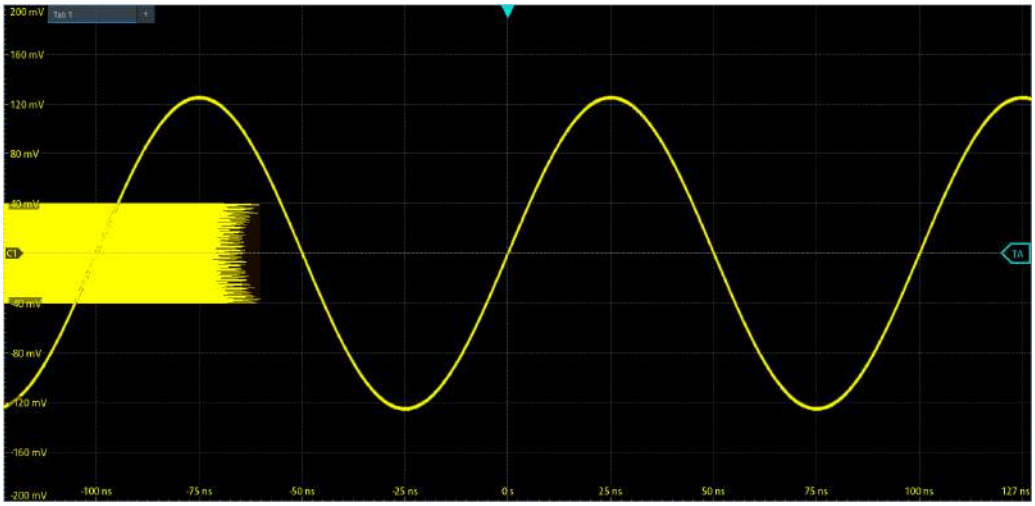


Figure 9-5: Histogram window

9.5.1 Histogram settings

Access: "Menu" > "Apps" > "General" tab > "Histogram".

The general histogram setup is done in the "Setup" tab. To analyze a part of the waveform, use the "Window" tab.

9.5.1.1 Add histogram

Access: "Menu" > "Apps" > "General" tab > "Histogram"


Before you can configure a histogram, you must add it to the histogram list.

Add histogram
Creates the first histogram. For more histograms, use the ⊞ button.

Remote command:
`HISTogram<m>:ADD` on page 1272

9.5.1.2 Setup for histograms

Access: "Menu" > "Apps" > "General" tab > "Histogram" > "Setup" tab

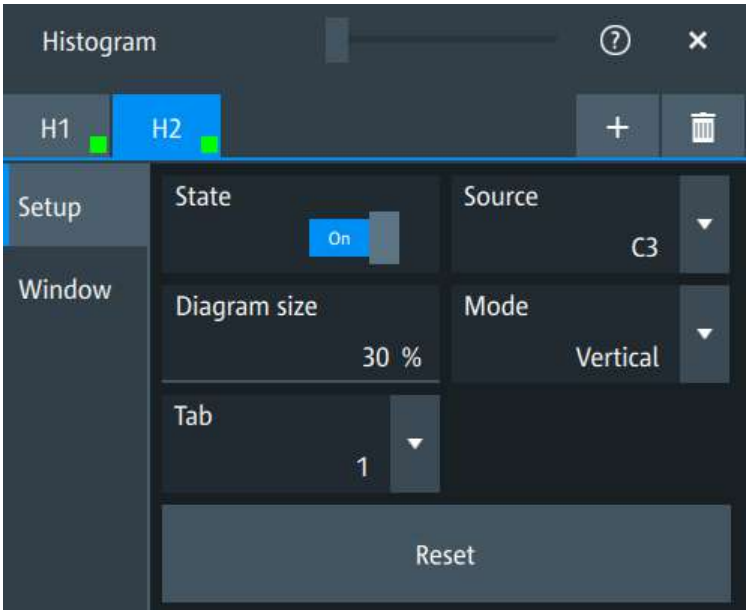

State
Enables or disables the histogram evaluation and display. The histogram settings are kept until the histogram is deleted.

Remote command:
`HISTogram<m>:ENABle` on page 1272

Source
Defines the source, the waveform that is analyzed by the histogram. Any analog channel waveform, math or reference waveform can be selected.

Remote command:
`HISTogram<m>:SOURce` on page 1274

Diagram size
Defines the size of the histogram in percent of the diagram width or height.

Remote command:
`HISTogram<m>:SIZE` on page 1273

Mode
Defines the type of histogram.

A vertical histogram has horizontal bars that show the occurrence of the vertical values.

A horizontal histogram has vertical bars the show the occurrence of a sample at a given time on the x-axis. This histogram type is in particular relevant for histogram windows.

Remote command:
`HISTogram<m>:MODE` on page 1273

Tab
If several tabs are available in the diagram, you can select the tab that displays the histogram.

The histogram is always in the same diagram as the source waveform is. If the source waveform is not displayed in the tab selected for the histogram, the source is automatically enabled in this tab, together with the histogram. If you delete a tab with a histogram, the histogram is deleted also.


Reset
Restarts the calculation of the selected histogram.

To reset all histograms and measurements, select "Clear" on the toolbar.

Remote command:
`HISTogram<m>:RESet` on page 1273

9.5.1.3 Window settings for histograms

Access: "Menu" > "Apps" > "General" tab > "Histogram" > "Window" tab

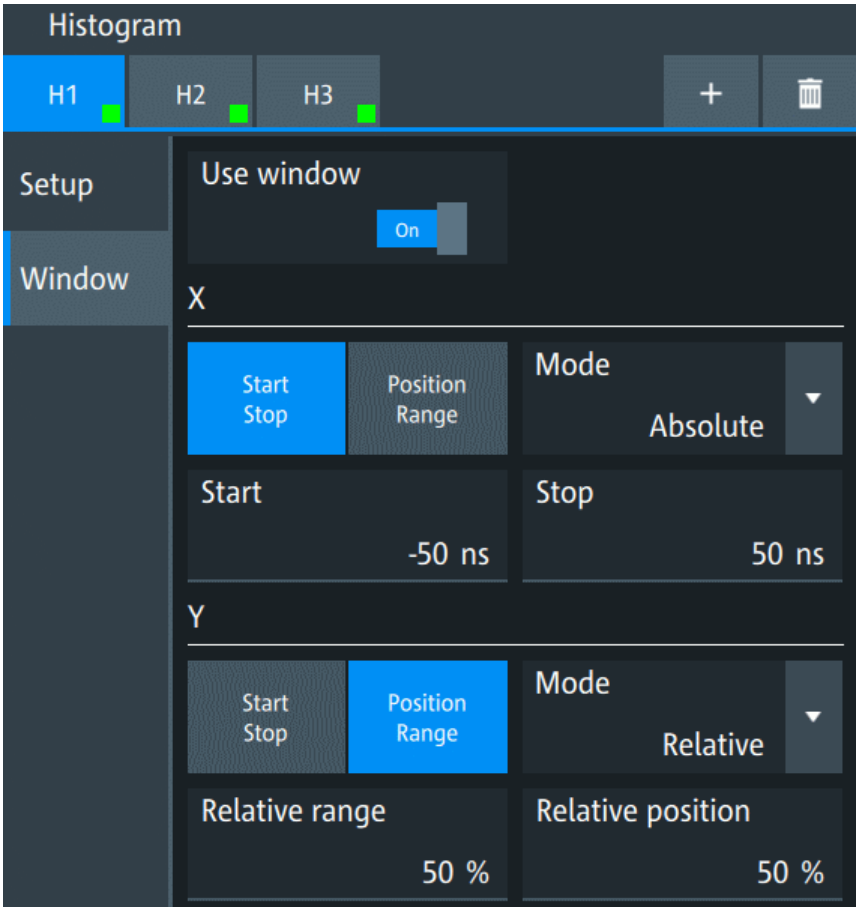

Use window
When you use a histogram window, the analyzed part of the source waveform is limited vertically and horizontally.

Remote command:
HISTogram<m>:WINDow:ENABle on page 1275

Start Stop | Position Range
Select whether you want to use start and stop values to limit the histogram window, or the center position and range of the window. The selections can be different for the vertical and horizontal limit.

Mode
Defines whether the window limits are entered as absolute or relative values.

Remote command:
HISTogram<m>:WINDow:HORizontal:MODE on page 1275
HISTogram<m>:WINDow:VERTical:MODE on page 1275

Start, Stop, Range, Position
Set the horizontal window limits as absolute values: start and stop, or center position and range of the window.

Remote command:
HISTogram<m>:WINDow:HORizontal:ABSolute:STARt on page 1275
HISTogram<m>:WINDow:HORizontal:ABSolute:STOP on page 1275
HISTogram<m>:WINDow:HORizontal:ABSolute:POSition on page 1275
HISTogram<m>:WINDow:HORizontal:ABSolute:SPAN on page 1275

Relative start, Relative stop, Relative range, Relative position
Set the horizontal window limits as relative values in % of the diagram width: start and stop, or center position and range of the window.

Remote command:
HISTogram<m>:WINDow:HORizontal:RELative:STARt on page 1276
HISTogram<m>:WINDow:HORizontal:RELative:STOP on page 1276
HISTogram<m>:WINDow:HORizontal:RELative:POSition on page 1276
HISTogram<m>:WINDow:HORizontal:RELative:SPAN on page 1276

Start, Stop, Range, Position
Set the vertical window limits as absolute values: start and stop, or center position and range of the window. The values remain unchanged if you change the unit of the y-axis.

Remote command:
HISTogram<m>:WINDow:VERTical:ABSolute:STARt on page 1276
HISTogram<m>:WINDow:VERTical:ABSolute:STOP on page 1276
HISTogram<m>:WINDow:VERTical:ABSolute:POSition on page 1276
HISTogram<m>:WINDow:VERTical:ABSolute:SPAN on page 1276

Start, Stop, Range, Position
Set the vertical window limits as relative values in % of the diagram height: start and stop, or center position and range of the window. The values remain unchanged if you change the unit of the y-axis.

Remote command:
HISTogram<m>:WINDow:VERTical:RELative:STARt on page 1276
HISTogram<m>:WINDow:VERTical:RELative:STOP on page 1276
HISTogram<m>:WINDow:VERTical:RELative:POSition on page 1276
HISTogram<m>:WINDow:VERTical:RELative:SPAN on page 1276

9.5.2 Creating histograms

To create a histogram quickly with toolbar icons

1. Select the waveform for which you need a histogram.
2. Tap the histogram icon on the toolbar.
3. Select the histogram type on the overlay menu: vertical or horizontal. See "Mode" on page 268.
4. Tap the diagram with the waveform to be measured, or draw a rectangle on the screen to define the window for histogram calculation.

   The histogram range is shown in the diagram and a histogram with the selected waveform as a source is defined and displayed.
5. To adjust the histogram range:
   a) Double-tap the histogram.
   b) Tap "Setup" on the overlay menu.
   c) Adjust the start and stop values.

To create and configure a histogram in the dialog box

1. Select "Menu" > "Apps" > "General" tab > "Histogram".



2. To create a histogram, tap the "Add" icon in the upper right corner of the dialog box.
3. Select a "Source" for the histogram. The source can be any analog input signal, math or reference waveform.
4. Define the histogram "Mode": vertical for an amplitude, horizontal for a time-based histogram.
5. If you need to evaluate only a part of the waveform:
   a) Select the "Window" tab.
   b) Enter the start value and the stop value in x and in y direction, either as absolute or relative values. Alternatively, you can enter the center position of the window, and its range.
   c) Enable "Use window".
6. On the "Setup" tab, enable the histogram.

9.5.3 Analysis of waveform histograms

To view the histogram in more detail, use the zoom.

To get exact numeric results of the histogram, use the measurement functions. See Section 10.2.5, "Histogram measurements", on page 302.

You can export the histogram data to file, one histogram per file. See Section 13.7, "Histogram data", on page 522.

For remote transfer of histogram data, use `EXPort:HISTogram<m>:DATA:HEADer?` and `EXPort:HISTogram<m>:DATA[:VALues]?`.

10 Measurements

Using the MXO 5 you can perform and display different measurements simultaneously, based on the active signal or math waveforms. The color of the results in the result table corresponds with the source waveform color.

10.1 Cursor measurements

- Cursors and results of cursor measurements 273
- Using cursors 274
- Settings for cursor measurements 276

10.1.1 Cursors and results of cursor measurements

Cursor measurements determine the results at the current cursor positions. The cursors can be positioned manually, or can be configured to follow the waveform. You can measure on one waveform, on two different waveforms, or on multiple different waveforms (sources).

Up to 4 cursor sets can be configured and displayed. Each cursor set consists of a pair of horizontal or vertical cursor lines, or both. Cursor lines can be coupled so that the initially defined distance is always maintained.

The cursors are displayed in the diagrams of the source waveform only, or in all diagrams. For each measurement, labels can be defined for the cursors. By default, the cursor lines are labeled as Cu1.1 and Cu1.2.

How to set up cursor measurements is described in Section 10.1.2, "Using cursors", on page 274. The Section 10.1.3, "Settings for cursor measurements", on page 276 provides a detailed description of all settings.

For details on using the result table, see Section 4.11, "Displaying results", on page 80.

10.1.1.1 Cursor measurements on time-based waveforms

The cursor for measurement on time-based waveforms returns the following results. The results are displayed automatically when a cursor measurement is enabled.



Label	Description
"X1, X2"	Time at the position of the vertical cursors.
"Y1, Y2"	Vertical values of the waveform at the position of the horizontal cursors in V or A.

Label	Description
"Δx"	Difference between the vertical cursor (time) values
"1/Δx"	Inverse time difference
"Δy"	Difference between the horizontal cursor values
"Δy/Δx"	Slope of the waveform between the cursors (if measured on one source)

For measurements on multiple waveforms, the Y-values are measured on each source waveform.

With option R&S MXO5-K136, these values are also measured with cursors in eye diagrams. The unit of the results corresponds to the selected "Mode" of the eye. See also: Section 12.7, "Eye analysis (option R&S MXO5-K136)", on page 485.

10.1.2 Using cursors

You can start cursor measurements in the toolbar, or using the [Cursor] key. For detailed configuration, use the "Cursor" dialog.

10.1.2.1 Starting a simple cursor measurement

To add cursors using the toolbar

1. Tap the "Add cursor" icon on the toolbar.



2. Select the channel that you want to apply the cursor to.
   Tap the waveform that you want to measure. Alternatively, you can draw a rectangle in the diagram to position the cursor lines.

   The cursor lines appear and the cursor results are displayed in the result table.

To display cursors using the [Cursor] key

1. Select the waveform that you want to measure.
2. Press the [Cursor] key.

   The cursor lines and the measurement results are displayed.

10.1.2.2 Configuring a cursor measurement

To modify the position of the cursor lines, you can drag the lines on the screen. In addition, various settings are possible to refine the measurement.

The complete configuration of cursor measurements is provided in the "Cursor" dialog. The settings of the dialog are described in Section 10.1.3, "Settings for cursor measurements", on page 276.

1. To open the "Cursor" dialog, use one of these ways:
   - Select "Menu" > "Cursor".
   - Press the [Cursor] key.
   - Double-tap in the results table (but not on a result).
2. Select the "Setup" tab.
3. Select the subtab for the cursor set that you want to use.
4. Select the Source mode.
5. Depending on the selected "Source mode", select one, two or several sources - the measured waveforms. Available sources are shown in the source list.
6. For single source and second source mode, select the "Type": X (vertical), Y (horizontal), or XY (both).
7. If the acquisition mode is set to "Envelope" or "Peak detect", select which horizontal cursor is positioned to the maximum and which to the minimum envelope values.
8. Define the exact position of the cursor lines:
   a) Enter the X-position for each vertical cursor.
   b) To position the horizontal cursors automatically, select "Track waveform". The Y-position follows the waveforms.
   In this case, Cu 1.1 indicates the current maximum, Cu 1.2 indicates the current minimum. If both horizontal and vertical cursor lines are displayed, the horizontal cursors are placed at the crossing points of the vertical cursor lines with the waveform. If you adjust the vertical cursor lines, the horizontal cursors follow.
   c) If "Track waveform" is off, enter the Y-position for each horizontal cursor.
9. To display the cursor in all diagrams that are in the same domain as the selected source (time or spectrum), enable "Show in all diagrams" in the "Advanced" tab.
10. To keep the distance between the vertical cursors when one cursor is moved, enable "X" or "Y" in the "Advanced" tab.
11. To set the cursors for a spectrum measurement to peak values, select the "Peak search" tab.
    Tap one of the buttons to place the cursors on the selected peak value. For details, see Section 10.1.3.3, "Peak search tab", on page 281.
12. Tap "Show cursor" in the "Setup" tab to activate the cursor measurement.

    The cursors lines and the results are displayed. For details on cursor measurement results, see Section 10.1.1, "Cursors and results of cursor measurements", on page 273.

10.1.2.3 Configuring the cursor display

By default, the cursors are displayed as lines in the diagrams and labeled according to the syntax: Cu<cursor set number>.<1|2>

For example, the cursors for the cursor set 2 are labeled 2.1 and 2.2. The horizontal and the vertical cursors lines have the same labels.

You can change the default cursor display and labels.

To set the cursor style

1. Select "Menu" > "Cursor".
2. Select the subtab for the cursor set you want to configure.
3. Select the "Setup" tab.
4. Select the "Cursor style". See also: "Cursor style" on page 277.

To add labels to cursor lines

1. Select "Menu" > "Cursor".
2. Select the subtab for the cursor set you want to configure.
3. Select the "Advanced" tab.
4. Enter a label for "Vertical cursor 1", "Vertical cursor 2", "Horizontal cursor 1", "Horizontal cursor 2".
5. Enable "Show label".


10.1.3 Settings for cursor measurements

Cursor measurements are configured in the "Cursor" dialog.

10.1.3.1 Setup tab

Access: "Menu" > "Cursor" > "Setup" tab

You can define up to 4 cursor sets (or cursor measurements). Each cursor set is configured on a separate tab.

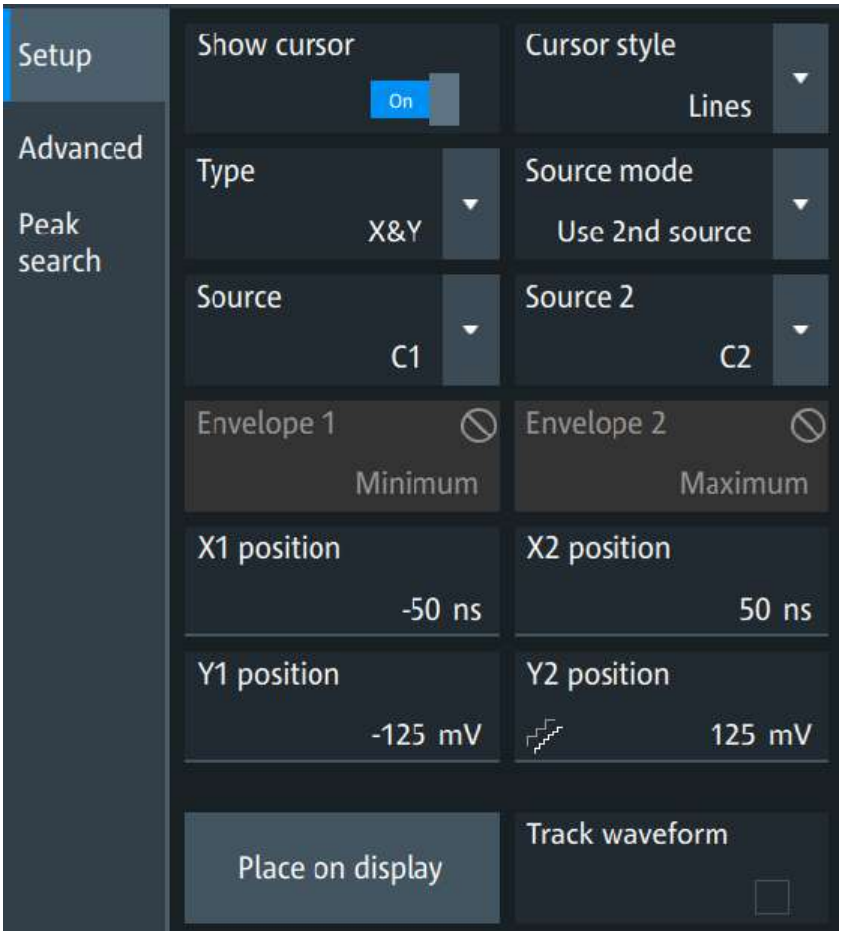

Show cursor
Enables the selected cursor measurement.

Remote command:
`CURSor<cu>:STATe` on page 1348

Cursor style
Defines how the cursor is displayed in the diagram.

"Lines" The cursors are displayed as lines.

"Line & Rhombus"
The cursors are displayed as lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

"VLine & Rhombus"
Vertical line and rhombus: the cursors are displayed as vertical lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

"Rhombus" The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

Remote command:
`CURSor<cu>:STYLe` on page 1360

Type
Defines the cursor type to be used for the measurement.

"X" (vertical cursors)
Both vertical cursor lines are set automatically to the trigger position, and you can reposition them manually. Not available for measurements on multiple sources.

"Y" (horizontal cursors)
Horizontal cursors are positioned automatically along the waveform and can be adjusted manually. Not available for measurements on multiple sources.

"X&Y" (both vertical and horizontal cursors)
Horizontal cursors are positioned automatically along the waveform and vertical cursors are set to the trigger position. You can reposition all cursor lines manually.

Remote command:
`CURSor<cu>:FUNCtion` on page 1348

Source mode
Selects the number of sources that you want to measure. The dialog adapts to the selected mode.

"Single source"	The cursor lines are set on one waveform.
"Use 2nd source"	The cursor lines are set on two waveforms. The second cursor lines Cu2 are set on the second source to measure differences between the two waveforms.
"Multiple sources"	Several waveforms are selected to be measured with one cursor set. The cursor type is always "X&Y", and "Track waveform" is active. For each waveform, the Y-value at the position of the vertical cursor line is measured.

Remote command:
`CURSor<cu>:SMODe` on page 1349

Source
Defines the source of the cursor measurement. Various waveform types can be measured. The available sources are listed.

With option R&S MXO5-K136, eyes also can be measured. If an eye is selected as a source, the second source is also an eye. The eye source is not available if you measure on multiple sources.

Remote command:
`CURSor<cu>:SOURce` on page 1349

Source 2
Selects a second source for the cursor measurement if "Source mode" is set to "Use 2nd source". The second cursor lines Cu2 measure on the second source. Using a second source, you can measure differences between two channels with cursors.

Remote command:
`CURSor<cu>:SSOurce` on page 1351

Select sources
Select the waveforms to be measured if "Source mode" is set to "Multiple sources". The selection dialog lists all possible active sources.

Remote command:
`CURSor<cu>:SOURce` on page 1349

Envelope 1, Envelope 2
Define which horizontal cursor is positioned to the maximum and which to the minimum envelope values.

Envelope selection is effective under the following conditions:
- The acquisition mode of the cursor source waveform is set to envelope or peak detect, see Acquisition mode.
- Both horizontal and vertical cursors are enabled (Type = "X&Y").
- Track waveform is enabled.

"Minimum" The horizontal cursor is set to the crossing point of the vertical cursor line with the minimum waveform envelope.

"Maximum" The horizontal cursor is set to the crossing point of the vertical cursor line with the maximum waveform envelope.

Remote command:
`CURSor<cu>:X1ENvelope` on page 1356
`CURSor<cu>:X2ENvelope` on page 1356

X1 position, X2 position
Define the left and right position of the vertical cursor lines.

Remote command:
`CURSor<cu>:X1Position` on page 1351
`CURSor<cu>:X2Position` on page 1351

Y1 position, Y2 position
Define the upper and lower position of the horizontal cursor lines.

If Track waveform is enabled, the user setting is disabled and the Y-position is determined by the instrument.

Remote command:
`CURSor<cu>:Y1Position` on page 1351
`CURSor<cu>:Y2Position` on page 1352

Track waveform
If enabled, the horizontal cursor lines track the waveform. If the waveform changes, e.g. during a running measurement, the cursors move along with it.

The function is available if both horizontal and vertical cursors are displayed. The horizontal cursor lines are positioned to the crossing points of the vertical cursors with the waveform. For cursor measurements on multiple sources, tracking is always active.

Tracking disables the Y-coupling (coupling horizontal cursor lines) and the Y-position settings.

In envelope or peak detect acquisition mode, the envelope is tracked.

The function is not available for measurements on eyes (R&S MXO5-K136).

Remote command:
CURSor<cu>:TRACking[:STATe] on page 1353


Place on display
Resets the cursors to their initial positions. Reset is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.

Remote command:
CURSor<cu>:SSCReen on page 1353

10.1.3.2 Advanced settings

Access: "Menu" > "Cursor" > "Advanced" tab

The settings in the "Advanced" cursor tab configure the behavior and display of cursor lines, and labels for the lines.

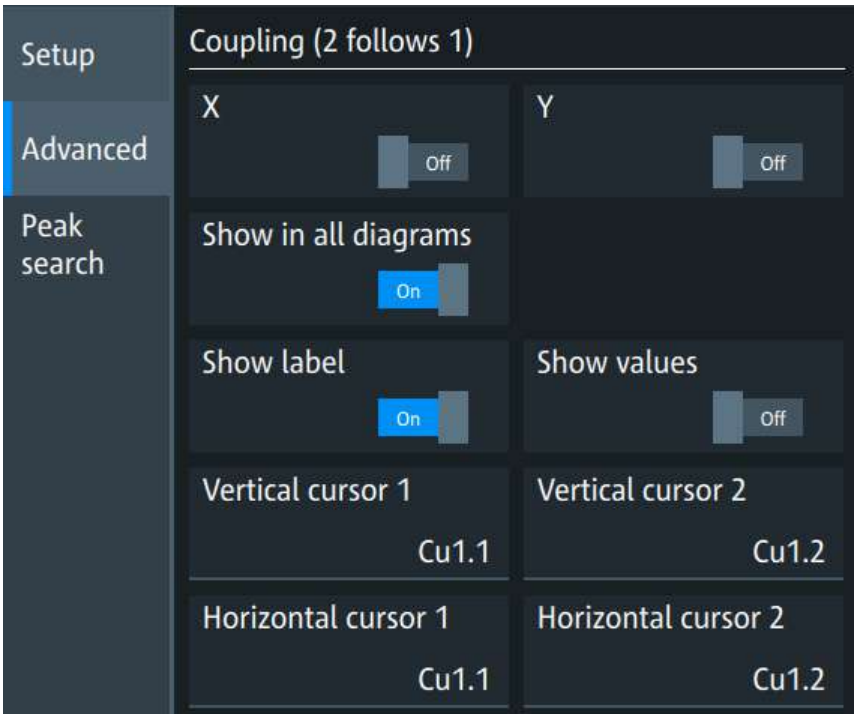

X, Y
Couple the horizontal or vertical cursor lines so that the distance between the two lines remains the same if one cursor is moved. "X" couples the vertical cursor lines, and "Y" couples the horizontal cursor lines.

Remote command:
CURSor<cu>:XCOupling on page 1355
CURSor<cu>:YCOupling on page 1355

Show in all diagrams
Shows the enabled cursor measurements in all active diagrams of the time domain.

In the spectrum domain, the setting is disabled. The cursors are shown only on the source spectrum of the measurement.

Remote command:
`CURSor<cu>:SIAD` on page 1355

Show label
Shows the cursor labels in the diagram.

Remote command:
`CURSor<cu>:LABel` on page 1353

Show values
Shows the measured values in the cursor labels.

Remote command:
`CURSor<cu>:DISPlay:VALues` on page 1354

Vertical cursor 1, Vertical cursor 2
Defines the label to be displayed with the vertical cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Remote command:
`CURSor<cu>:VERTical<n>:LABel` on page 1354


Horizontal cursor 1, Horizontal cursor 2
Defines the label to be displayed with the horizontal cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Remote command:
`CURSor<cu>:HORizontal<n>:LABel` on page 1354

10.1.3.3 Peak search tab

Access: "Menu" > "Cursor" > "Peak search" tab

The settings on this tab are only available in spectrum mode, i.e. the source of the cursor measurement is a spectrum. In this case, the cursors can indicate the results of a peak search on the waveform. Changing the noise reject settings, you can define which peaks are detected.

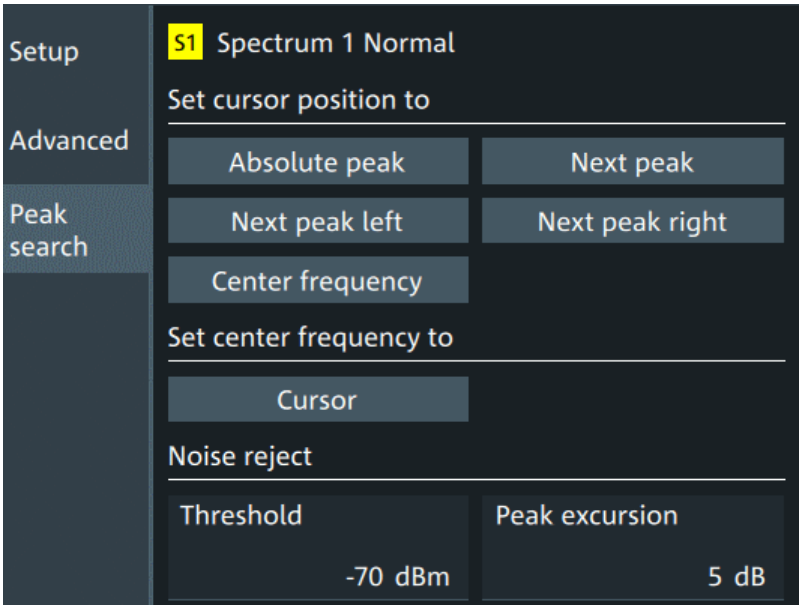

Absolute peak
Sets both cursors to the absolute peak value.

Remote command:
`CURSor<cu>:MAXimum[:PEAK]` on page 1358

Next peak
Cursor 2 is set to the next smaller absolute peak from the current position.

Remote command:
`CURSor<cu>:MAXimum:NEXT` on page 1359

Next peak left
Cursor 2 is set to the next peak to the left of the current position.

Remote command:
`CURSor<cu>:MAXimum:LEFT` on page 1359

Next peak right
Cursor 2 is set to the next peak to the right of the current position.

Remote command:
`CURSor<cu>:MAXimum:RIGHt` on page 1359

Center frequency
Sets the vertical cursor line Cu1 to the center frequency.

Remote command:
`CURSor<cu>:FFT:TOCenter` on page 1358

Set center frequency to
Sets the center frequency to the frequency value that is measured at cursor line Cu1.

Remote command:
`CURSor<cu>:FFT:SETCenter` on page 1358

Threshold
Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.


Remote command:
`CALCulate:SPECtrum<sp>:THReshold` on page 1368

Peak excursion
Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Example:

In the figure below, 2 peaks are shown, that rise above the defined "Threshold". Peak 1 fulfills the defined "Peak excursion" value and is counted as a peak. Peak 2 does not fulfill the defined "Peak excursion" value on the right and is not counted as a peak.

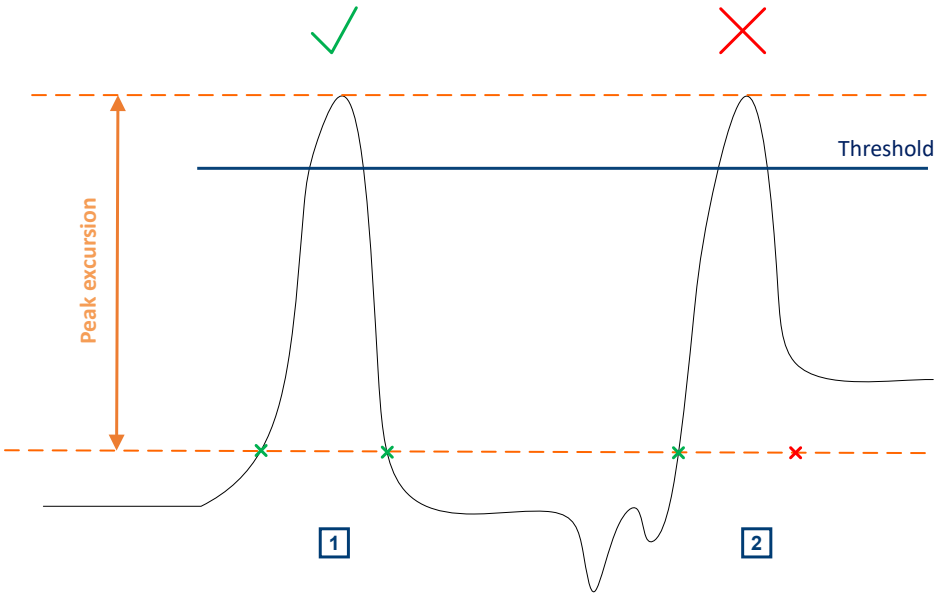

Remote command:
`CALCulate:SPECtrum<sp>:PEXCursion` on page 1368
`CURSor<cu>:PEXCursion` on page 1359

10.2 Automatic measurements

You can perform up to 24 different measurements simultaneously. Available sources and measurement types depend on the selected category. For most measurement types, specific settings are available for configuration.

10.2.1 Measurement setup in general

10.2.1.1 Starting an automatic measurement

There are several methods to start a measurement, each with slightly different effects:

- Using the "Measure" icon on the toolbar:
  See: "To start a measurement using the toolbar icon" on page 284.
- Pressing the [Measure] key on the front panel.
- Using the "Measurement" dialog.
  See: "To add a new measurement in the measurement dialog" on page 284.

To start a measurement using the toolbar icon

1. Tap the "Measure" icon on the toolbar.

   The measurement overlay menu opens.



2. Select the "Category".
3. Tap the measurements that you want to perform. You can scroll left and right through the measurement list to view all available measurements for the selected "Category".
4. Select the source that you want to apply the measurement on.
5. If needed, click "Setup" to configure further measurements.

   The measurement results are displayed.


To add a new measurement in the measurement dialog

1. Press the [Measure] key to open the measurement dialog.
2. In the "Setup" tab, press "+ Add".


   A dialog opens to select the measurements.
3. Select the "Source" for the measurement.
4. Select the "Category" of the measurement that you want to add, e.g. "Horizontal".

All available measurements for this category are displayed. For more details on the available measurement types, see the correspondig section.

5. Tap a measurement on the list to select it.
   Selected measurements are marked with a blue check mark in their checkbox.

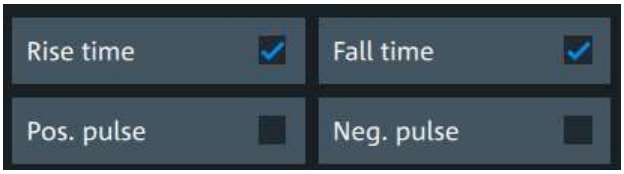


6. The measurements of some categories are listed on several tabs. To switch between the tabs, tap the points at the bottom of the list.

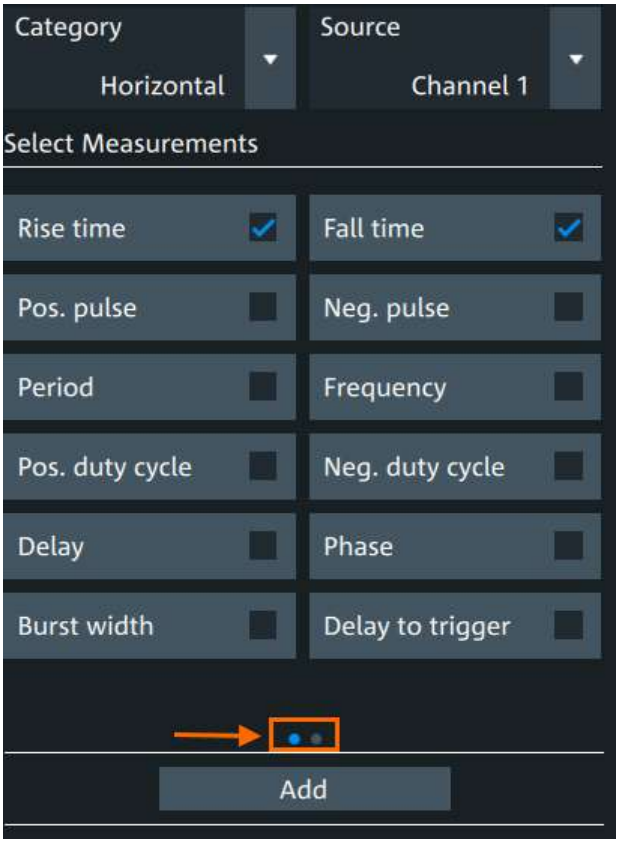

7. Tap "Add" to add the selected measurements.

   All selected measurements are active by default.

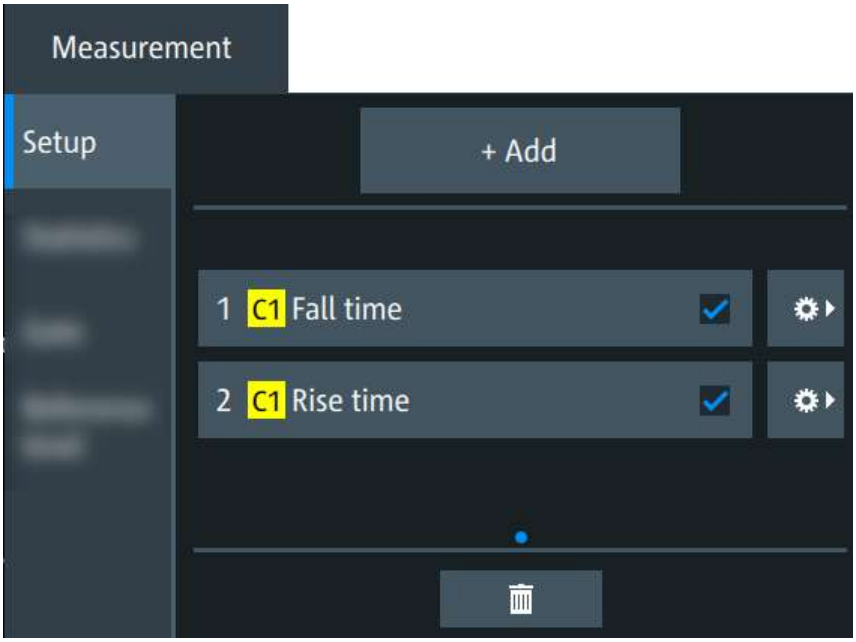


8. To deactivate a measurement while leaving it in the measurement list, deselect the checkmark.
9. To configure a measurement, select the (settings icon).

To delete a measurement

1. Press the [Measure] key to open the measurement dialog.
2. In the "Setup" tab, tap .

   A delete icon appears in the selection button of each measurement.

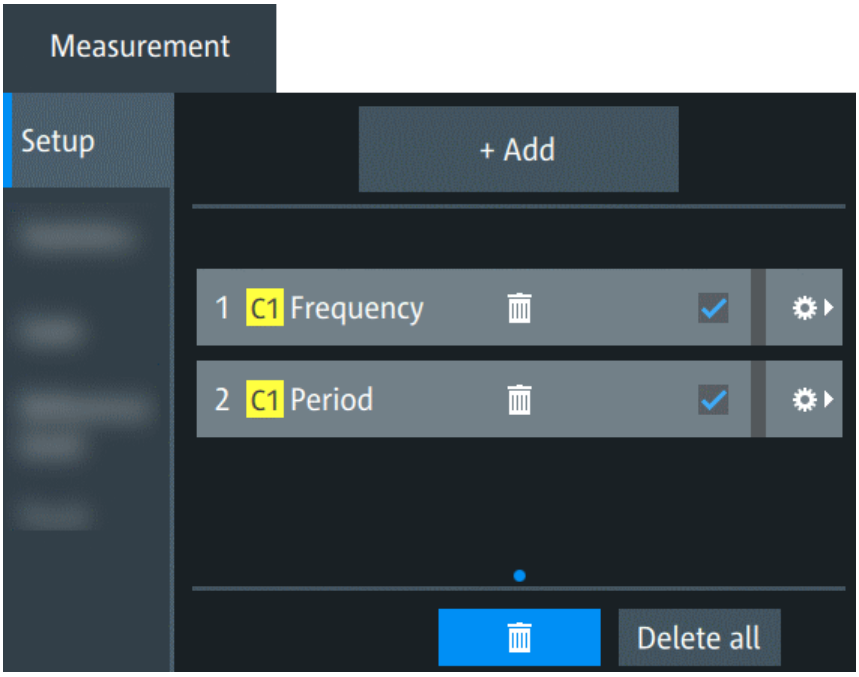


3. Tap the button of the measurement that you want to delete. Alternatively, tap "Delete All" to delete all measurements.

10.2.1.2 Setup tab

Access: "Menu" > "Measurement" > "Setup" tab.

The "Setup" tab shows the selected measurements. You can activate or deactivate the measurements. Tap the "Settings" icon to open the specific settings for the measurement type.

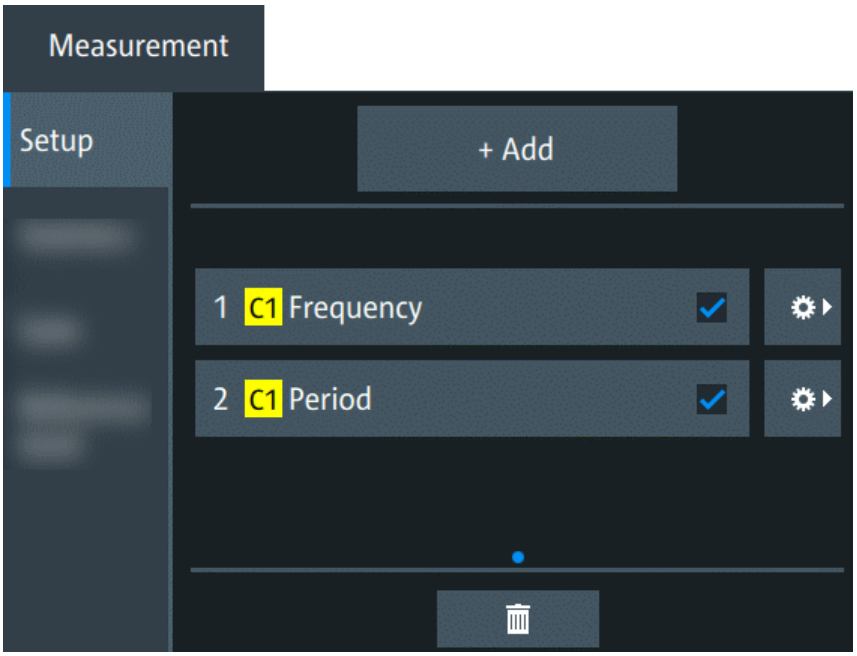

+ Add
Opens a dialog to select the measurements. See Section 10.2.1.3, "Add measurement dialog", on page 287.


Delete icon
Enables the removal of measurements. You can delete a single measurement by tapping the "Delete" icon next on it.

You can also delete all current measurements with "Delete All".

10.2.1.3 Add measurement dialog

Access: "Menu" > "Measurement" > "Setup" tab > "+ Add".

In this dialog, you select the category and the measurements to be done.

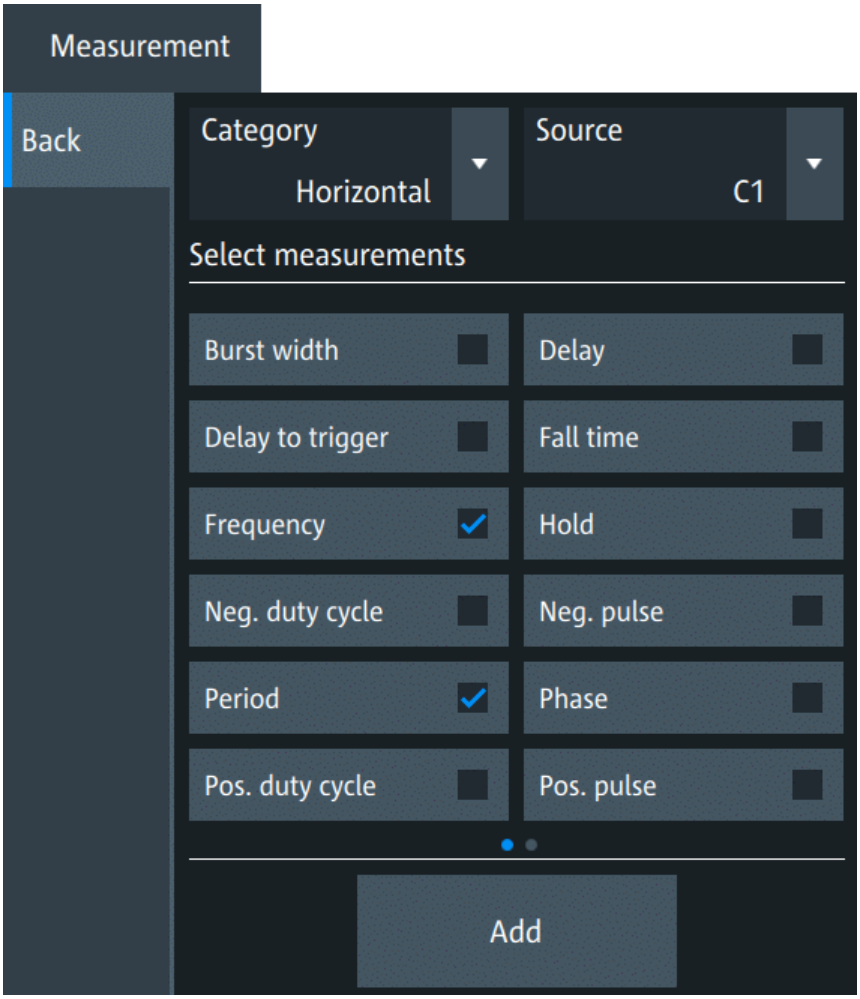

Category
Selects the measurement category. Some measurements are listed in more than one category.

The following categories are available:

- Amp/time: amplitude and time measurements, includes the categories "Horizontal", "Vertical" and "Count"
- Jitter measurements (available if the jitter option is installed)
- Histogram: measurements on waveform histograms
- Protocol: advanced analysis of serial protocols with option R&S MXO5-K500

Remote command:
In remote control, the measurements are selected directly. A preselection of the category is not neccessary.

Source
Sets the source of the measurement.

Available sources depend on the selected category. For example, histogram measurements require a waveform histogram as source, and protocol measurements require a serial bus.

The source is applied to all measurements that are selected in the dialog. You can change it later for the individual measurement.

Remote command:
MEASurement<mg>:SOURce on page 1309

Select measurements
Select the required measurements of the selected category. The list can have several pages, which are represented by dots at the bottom of the list. Tap a dot to change the page.

Remote command:
MEASurement<mg>:MAIN on page 1311

Add
Adds the selected measurements and returns to the "Setup" tab.

The measurements are listed and activated by default. You can deactivate single measurements in the "Setup" tab.


Remote command:
MEASurement<mg>[:ENABle] on page 1309
MEASurement<mg>:ACTive on page 1309

10.2.1.4 Configuration of measurement types: common settings

When you select the settings icon of a measurement in the "Setup" tab, a dialog with more setting opens. Some of these settings are common for many or all measurement types, independent of their category, others are specific for the selected measurement type.

For category and type-specific settings, see:

- Section 10.2.4.2, "Settings for amplitude/time measurements", on page 297
- Section 10.2.6.2, "Settings for jitter measurements", on page 307
- Section 10.2.5.2, "Settings for measurements on histograms", on page 304
- Section 10.2.8.2, "Settings for protocol measurements", on page 320

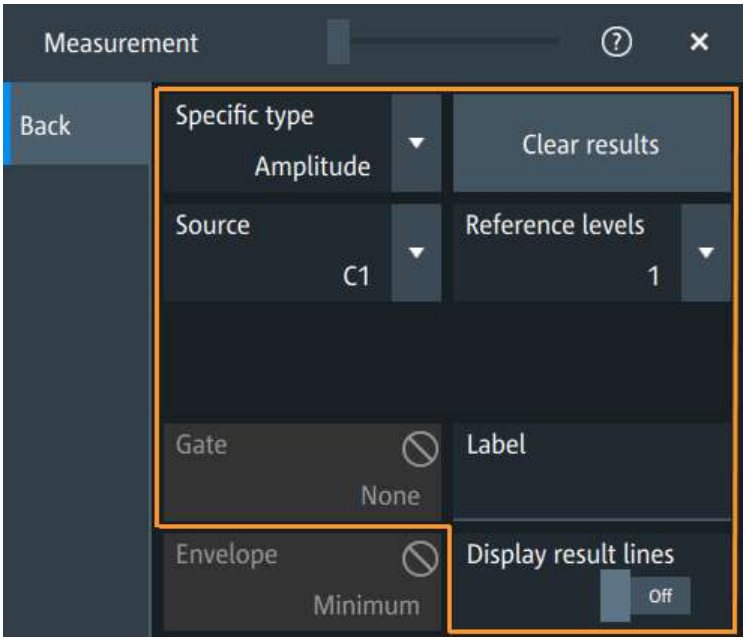

This section describes the common settings.

Specific type
Selects the type of measurement that you want to define the settings for. The list provides all measurement types of the same category.

Remote command:
`MEASurement<mg>:MAIN` on page 1311

Clear results
Deletes all results of the selected measurement.

Remote command:
`MEASurement<mg>:CLEar` on page 1312

Source
Sets the source of the measurement.

Available sources depend on the category of the measurement. For example, histogram measurements require a waveform histogram as source, and protocol measurements require a serial bus.

In setup/hold measurements, this source is the "Data source".

Remote command:
`MEASurement<mg>:SOURce` on page 1309

Reference levels
Selects the set of reference levels that is used for the measurement and for the first measurement source. Each source of the measurement can have its own reference level set. For most measurements, one source is needed. For delay measurements, for example, two measurement sources are required, and each source can have its own reference levels.

Only the numbers of defined reference level sets are listed. Define the reference level set before you select it, see Section 8.2, "Reference level setup", on page 221.

Remote command:
`MEASurement<mg>:REFLevel<rl>:REFerence` on page 1316

Gate
Assigns a gate to the selected measurement to limit the measurement range. Define a gate before you select it, see Section 8.3, "Gate setup", on page 224.

Alternativley, you can assign the gates to measurements in the "Gate" tab, see Section 10.2.3, "Gate settings for measurements", on page 292.

Remote command:
`MEASurement<mg>:GATE` on page 1311

Label
Adds a user-defined label to the measurement.

Remote command:
`MEASurement<mg>:LABel` on page 1313

Display result lines
Enables the measurement annotations for the selected measurement. These annotations are, for example, periods, maximum and minimum values, relevant reference levels, and more.


See also: Section 10.2.9, "Annotation for measurements", on page 322.

Remote command:
`MEASurement<mg>:DISPlay:RESults` on page 1312

10.2.2 Reference levels for measurements

Access: "Menu" > "Measurement" > "Reference level" tab

Measurements require reference levels to obtain the measurement points, e.g. time measurements or pulse count. The dialog shows the definition of the selected reference level set and all active measurements. If no reference level set has been defined before, or the correct definition is missing, select "RL setup" and configure the the reference level set before you assign it. See Section 8.2, "Reference level setup", on page 221 for details.

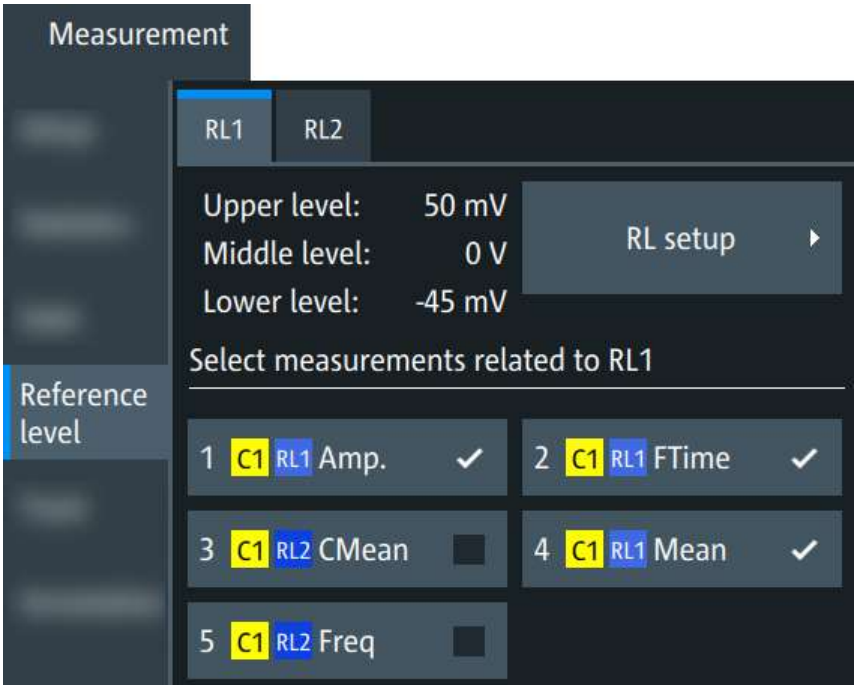

1. Select the RL subtab, e.g. "RL1".
2. Select the measurements that use the selected reference level set.


Remote command: `MEASurement<mg>:REFLevel<rl>:REFerence` on page 1316

10.2.3 Gate settings for measurements

Access: "Menu" > "Measurement" > "Gate" tab.

You can limit the measurements to a user-defined range of the waveform. The dialog shows the limits of the selected gate and all active measurements. If no gate has been defined before, or the correct gate is missing, select "Gate setup" and configure the gate before you assign it. See Section 8.3, "Gate setup", on page 224 for details.

1. Select the gate subtab, e.g. "G1".
2. Select the measurements to be limited by the selected gate.

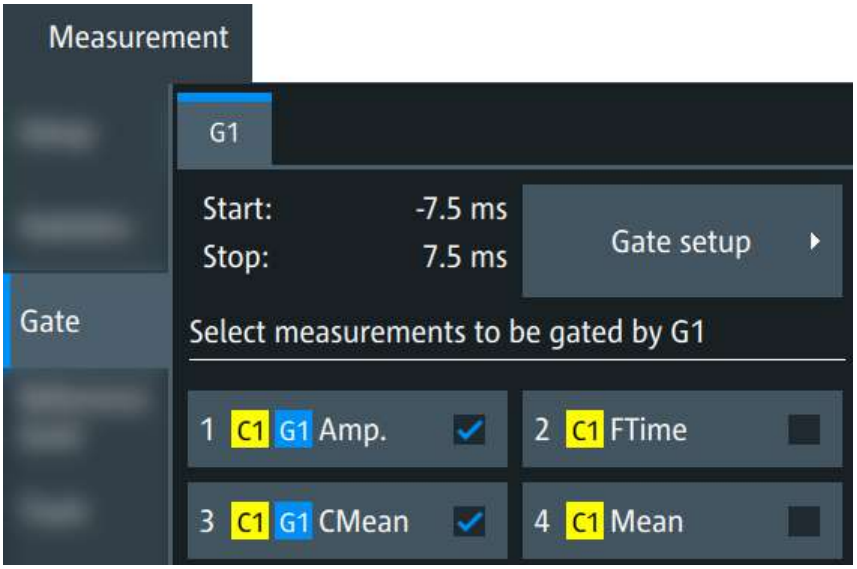




Remote command: `MEASurement<mg>:GATE` on page 1311.






10.2.4 Amplitude/time measurements



10.2.4.1 Overview of amplitude/time measurements

The MXO 5 provides many measurement types in the "Amp/time" category to measure time, amplitude and area characteristics, and to count pulses and edges.

Horizontal measurements (time)


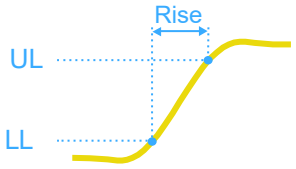
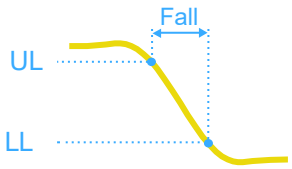
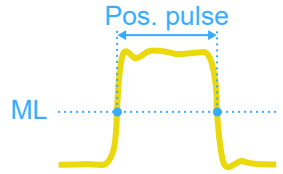
Meas. type	Label	Description	Formula, graphic
Rise Time	RTime	Rise time of the first rising edge, the time it takes the signal to rise from the lower reference level to the upper reference level. Measurement of all events in the acquisition is possible.	
Fall Time	FTime	Fall time of the first falling edge, the time it takes the signal to fall from the upper reference level to the lower reference level. Measurement of all events in the acquisition is possible.	
Pos. pulse	PPuls	Duration of the first positive pulse: time between a rising edge and the following falling edge measured on the middle reference level. Measurement of all events in the acquisition is possible.	

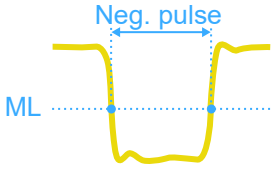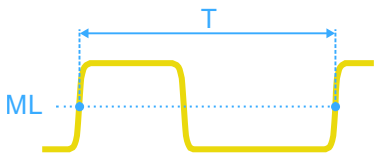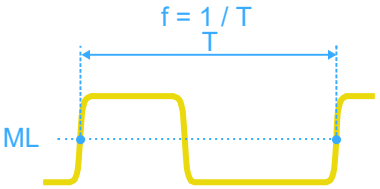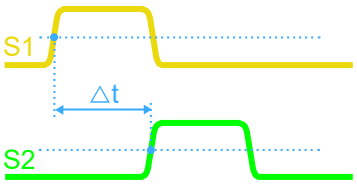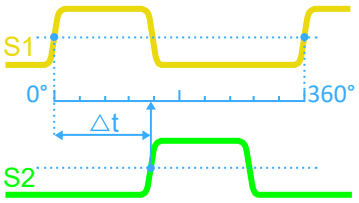
Meas. type	Label	Description	Formula, graphic
Neg. pulse	NPuls	Duration of the first negative pulse: time between a falling edge and the following rising edge measured on the middle reference level. Measurement of all events in the acquisition is possible.	
Period	T	Time between the first two consecutive waveform edges of the same direction, measured on the middle reference level. The measurement requires at least one complete period of a triggered signal. Measurement of all events in the acquisition is possible.	
Frequency	Freq	Frequency of the signal, reciprocal value of the measured period.	
Delay	Delay	Time difference between two slopes of the same or different waveforms, measured on the middle reference level. A negative result indicates that the slope of the second source comes before the slope of the first source.	
Phase	Phs in °	Phase difference between two waveforms, measured on the middle reference level.	*Phase = Delay / Period * 360* 
Burst width	Bst	Duration of one burst. The burst is measured on the middle reference level from the first edge to the last edge, regardless of whether these edges rise or fall.	
Setup Hold Setup/Hold time	Setup Hold SHT	Setup and Hold time measurements with positive and/or negative clock edge, measured on the middle reference level. See "Setup/Hold time measurement" on page 299.	
Setup/Hold ratio	SHR	Setup/Hold ratio measurement with positive and/or negative clock edge.	*SHR = Setup / (Setup + Hold)*
Delay to trigger	DTO	Time between the trigger point and the next signal slope, measured on the middle reference level. Slope direction can be selected. If the edge is to the left of the trigger (before trigger), the result is negative.	

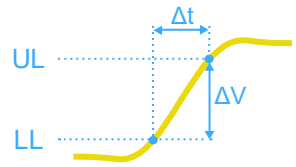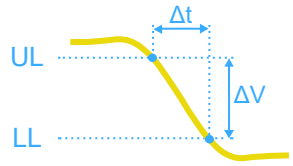Meas. type	Label	Description	Formula, graphic
Slew rate rising	SRRise in V/s = V*Hz	Steepness of the rising edge: voltage difference between the lower and higher reference level, divided by the rise time.	*SRRise = ΔV / Δt* 
Slew rate falling	SRFall in V/s = V*Hz	Steepness of the falling edge: voltage difference between the higher and lower reference level, divided by the fall time.	*SRFall = ΔV / Δt* 
Pos. duty cycle	PDCyc	Width of the first positive pulse in relation to the period in %.	$PDCyc = \frac{T_{PosPulse}}{T_{Period}} \times 100\%$
Neg. duty cycle	NDCyc	Width of the first negative pulse in relation to the period in %.	$PDCyc = \frac{T_{NegPulse}}{T_{Period}} \times 100\%$

Vertical measurements (amplitude)

The unit of most amplitude measurement results depends on the measured source.

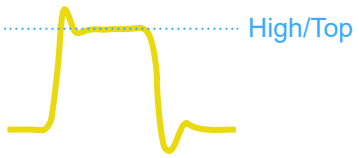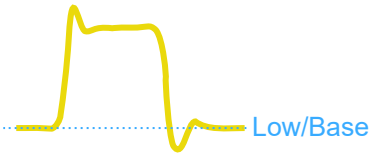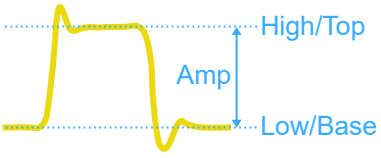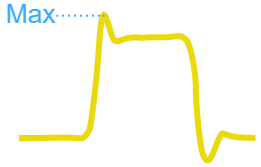Meas. type	Label	Description	Formula, graphic
High	High	High level of the displayed waveform - the upper maximum of the sample distribution, or the mean value of the high level of a square wave without overshoot. The measurement requires at least one complete period of the signal. Also known as top level.	
Low	Low	Low level of the displayed waveform - the lower maximum of the sample distribution, or the mean value of the low level of a square wave without overshoot. The measurement requires at least one complete period of the signal. Also known as base level.	
Amplitude	Amp	Difference between the high level and the low level of the signal. The measurement requires at least one complete period of the signal.	
Max	Max	Maximum value within the displayed waveform.	


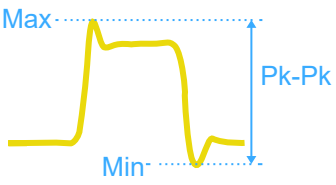
Meas. type	Label	Description	Formula, graphic
Min	Min	Minimum value within the displayed waveform.	
Peak to peak	PTP	Difference of maximum and minimum values.	
Mean	Mean	Arithmetic average of the complete displayed waveform.	$Mean = \frac{1}{N}\sum_{k=1}^{N} x^k$
RMS	RMS	RMS (root mean square) value of the voltage of the complete displayed waveform.	$RMS = \sqrt{\frac{1}{N}\sum_{k=1}^{N} {x_k}^2}$
σ (S-dev/AC-RMS)	σ	Standard deviation of one cycle, usually of the first, left-most signal period.	$\sigma = \sqrt{\frac{1}{N-1}\sum_{k=1}^{N} (x_k - Mean)^2}$
Crest factor	Crest	The crest factor is also known as the peak-to-average ratio. It is the maximum value divided by the RMS value of the displayed waveform.	$Crest = \frac{Max\,\lvert x_k \rvert}{RMS}$
Pos. Overshoot	P.OS	Overshoot of a square wave after a rising edge. It is calculated from measurement values High, local Max and Amplitude.	$OSpos = \frac{Max_{local} - High}{Amplitude} \times 100\%$
Neg. Overshoot	N.OS	Overshoot of a square wave after a falling edge. It is calculated from measurement values Low, local Min and Amplitude.	$OSneg = \frac{Low - Min_{local}}{Amplitude} \times 100\%$
Cycle Amp	CAmp	Amplitude of one cycle	
Cycle mean	CMean	Mean value of one cycle	
Cycle RMS	CRMS	RMS (root mean square) value of one cycle	
Cycle σ(S-dev)	Cycσ	Standard deviation of one cycle	
Cycle max	CMax	Maximum value of one cycle	
Cycle min	CMin	Minimum value of one cycle	
Cycle peak to peak	CPTP	Peak-to-peak value of one cycle: the difference of CMax and CMin	
Cycle crest	CCrest	Crest factor of one cycle	

Area and cycle measurements

All cycle measurements require that at least one complete period of the signal is acquired. Cycle measurements can be found in the "Amp/time" category.

Meas. type	Label	Description/result	
Area	Area	Area between the waveform and ground. T_{Eval}: evaluation time, time of a full waveform or limited by a gate	$Area = \frac{T_{Eval}}{N_{Eval}} \times \sum_{k=1}^{N_{Eval}} x(k)$
Cycle area	CArea	Area between the waveform and ground, measured for one period, see also "Area" measurement.	


Counting

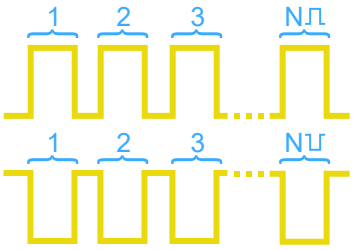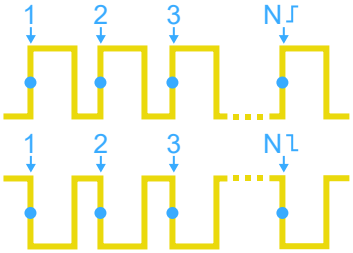Meas. type	Label	Description/result	
Pulse count	PCount	The number of positive or negative pulses of the waveform, or of both positive and negative pulses. The mean value of the signal is determined. If the signal passes the mean value, an edge is counted. A positive pulse is counted if a rising edge and a following falling edge are detected. A negative pulse is counted if a falling edge and a following rising edge are detected.	
Edge count	EdCo	The number of positive or negative edges, or of both positive and negative edges. The mean value of the signal is determined, and an edge is counted every time the signal passes the mean value.	

10.2.4.2 Settings for amplitude/time measurements

You can define additional parameters for some measurements.

Access: "Menu" > "Measurement" > "Setup" tab > add amplitude/time measurement > ⚙ settings of a measurement.

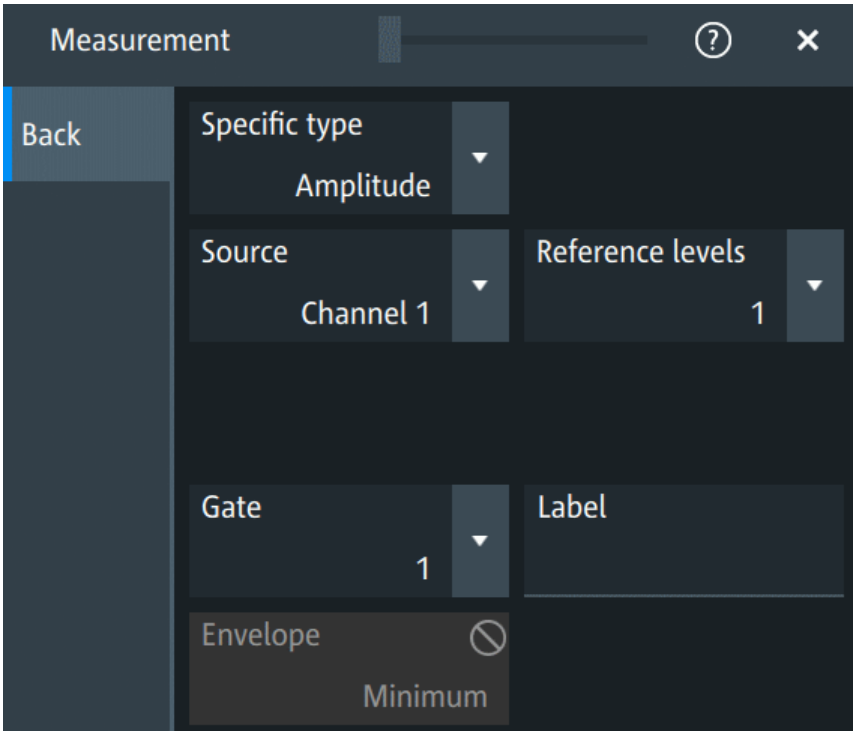

For a description of common measurement settings, see:

- "Clear results" on page 290
- "Specific type" on page 290
- "Source" on page 290
- "Reference levels" on page 290
- "Gate" on page 291
- "Label" on page 291
- "Display result lines" on page 291

Envelope
This setting is only available for measurements on envelope waveforms, see Acquisition mode.

"Both"	The upper and the lower envelope are used in measurements. For time measurements, the averages of min and max values are used, that is, the measurement is performed on the average waveform built from the upper and lower envelope.
"Maximum"	Measurements are performed on the upper envelope.
"Minimum"	Measurements are performed on the lower envelope.

Remote command:
`MEASurement<mg>:ENVSelect` on page 1313

Pulse count
Available, if "Specific type" is set to "Pulse train".

Sets the number N of positive pulses for the "Pulse train" measurement. This measurement measures the duration of N pulses, measured from the selected edge of the first pulse to the opposite edge of the N-th pulse.

Remote command:
`MEASurement<mg>:AMPTime:PTCount` on page 1314

Pulse slope
Available, if "Specific type" is set to "Pulse count" or "Pulse train".

Sets the first slope of the pulses to be counted.

"Positive" Positive pulses are counted.

"Negative" Negative pulses are counted.

"Either" Both positive and negative pulses are counted.

Remote command:
`MEASurement<mg>:AMPTime:PSLope` on page 1315

Edges slope
Available, if "Specific type" is set to "Edge count".


Sets the edge direction to be used for the selected measurement: positive, negative, or either edge.


Remote command:
`MEASurement<mg>:AMPTime:ESLope` on page 1314

Setup/Hold time measurement
Setup/Hold measurements analyze the relative timing between two signals: a data signal and the synchronous clock signal. Setup time is the time that the data signal is steady before the clock edge. Hold time is the time that the data signal is steady after the clock edge.

"Setup/Hold time" measures and displays the setup and hold durations. "Setup/Hold ratio" measurements return the ratio of the setup time to the sum of hold and setup time: $T_{Setup} / (T_{Setup} + T_{Hold})$.

The clock edge can be defined, the polarity of the data signal does not matter.

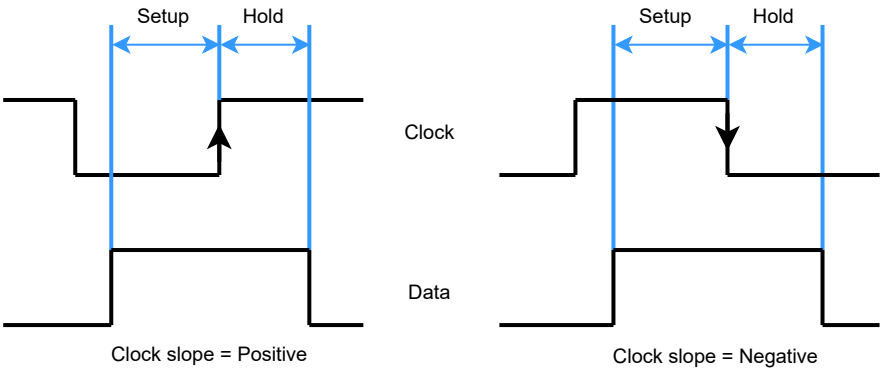

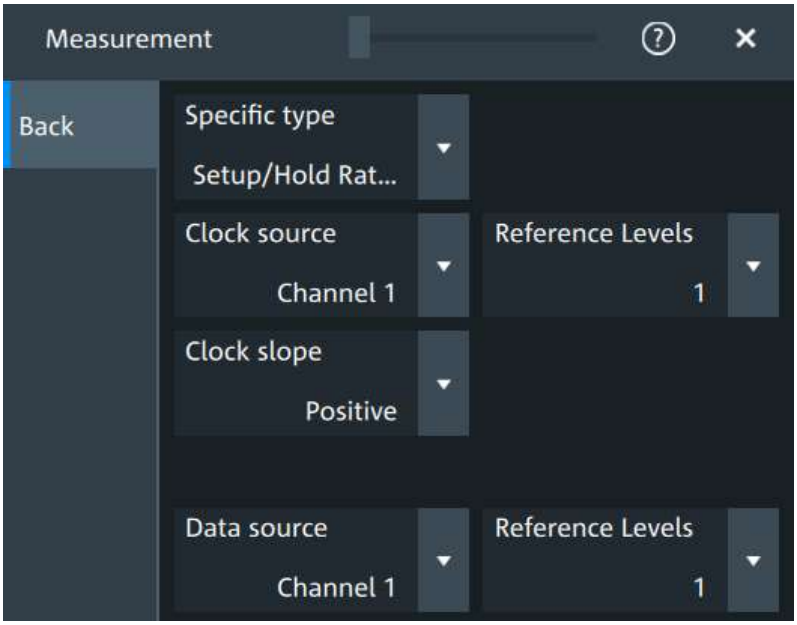

Source 2, Clock source ← Setup/Hold time measurement
Sets the waveform used as the clock for the setup/hold measurement, or the second source waveform for delay and phase measurements.

Remote command:
`MEASurement<mg>:SSRC` on page 1310


Clock slope ← Setup/Hold time measurement
Sets the edge of the clock from which the setup and hold times are measured: positive, negative, or either of them. If "Either" is selected, the clock edges next to the data edge are considered regardless of the clock slope.

Remote command:
`MEASurement<mg>:AMPTime:CSLope` on page 1314

Data source ← Setup/Hold time measurement
Sets the source for the data signal. See also: "Source" on page 290.

Delay and phase measurement
The specific settings for delay measurement allow you to measure the time between any two slopes at any reference level. Therefore, the reference levels and the slopes must be defined for each source individually. The measurement result is negative if the edge of the second source comes before the edge of the first source.

To measure the phase difference between two waveforms, you also set the slope, direction and reference level for each source individually. You can also specify the phase unit.

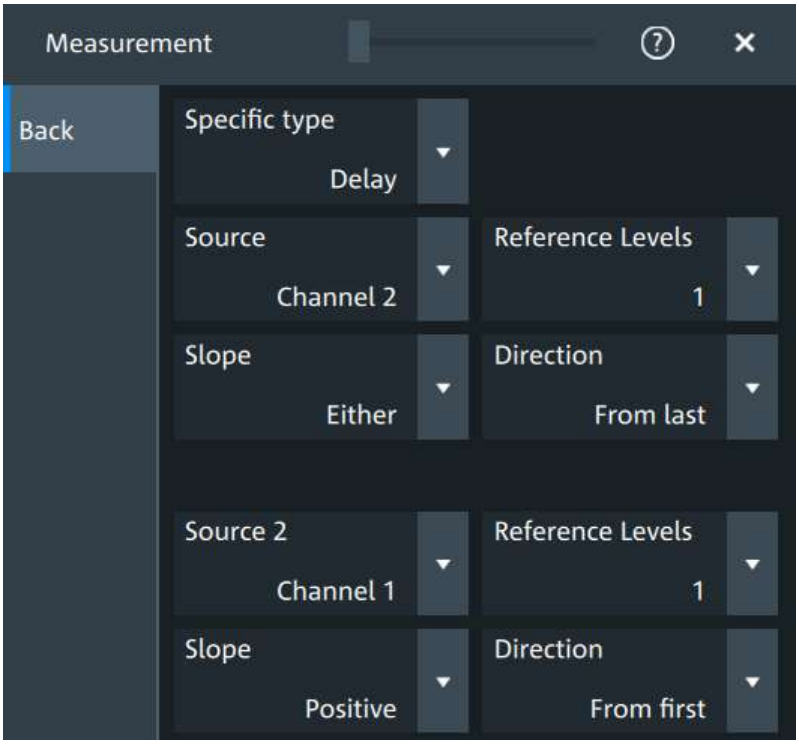

Slope ← Delay and phase measurement
Available, if "Specific type" is set to "Phase" or "Delay".

Sets the edge direction to be used for the selected measurement: positive, negative, or either edge.

Remote command:
`MEASurement<mg>:AMPTime:DELay<n>:SLOPe` on page 1316


Direction ← Delay and phase measurement
Selects the direction for counting slopes for each source: from the beginning of the waveform, or from the end.

Remote command:
`MEASurement<mg>:AMPTime:DELay<n>:DIRection` on page 1315

Phase unit ← Delay and phase measurement
Selects the unit of the oase: degrees or radians.

Remote command:
`MEASurement<mg>:AMPTime:PHASe:UNIT` on page 1316

Delay to trigger measurement settings
Delay to trigger measures the time between the trigger point and the following slope of a waveform. The delay between the trigger and the slope can be high compared to the accuracy of the acquisition, and the trigger point can even be outside of the current acquisition.

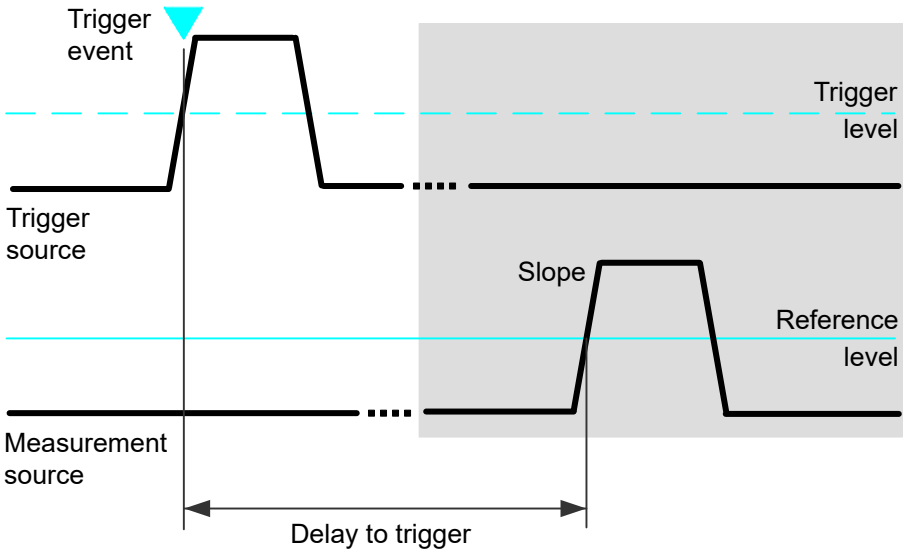

To configure the trigger conditions, use the trigger setup.

"Edges slope" Sets the edge direction to be used for delay measurement: positive, negative, or either edge.

Remote command:
`MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe` on page 1315

Unit (slew rate measurements)
Sets the denominator of the unit for slew rate measurements.

10.2.5 Histogram measurements

You can perform measurements on waveform histograms.








Note that graphical changes on the display, e.g. changing the diagram size or the size of the result table, reset the histogram measurements in run mode and also in stop mode.







10.2.5.1 Overview of measurements on histograms

The specific measurement types for waveform histograms are provided in the "Histogram" category. To see these measurement types, an active waveform histogram is required.

To select and activate measurements in remote control, use:


- `MEASurement<mg>:MAIN` on page 1311
- `MEASurement<mg>[:ENABle]` on page 1309
- `MEASurement<mg>:ACTive` on page 1309

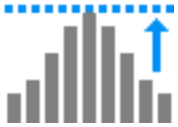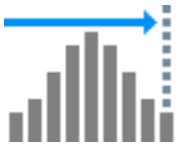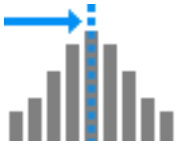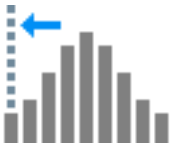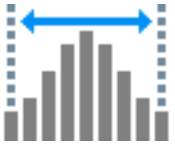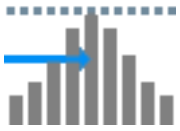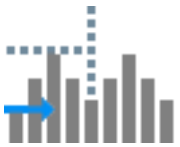Meas. type	Label	Description, result	Graphic
Histogram peak	HPeak	The maximum sample value in the histogram.	
Histogram samples	HSamp	The number of samples from all acquisitions included in the current histogram.	
Maximum	HMax	The highest signal value with a probability > 0.	
Mean	HMean	The weighted arithmetic average of the histogram.	
Minimum	HMin	The lowest signal value with a probability > 0.	
Max - Min	MxMn	The range of signal values with a probability > 0.	
Median	Med	The signal value for which half the samples lie above, the other half below in the histogram. The sample count of one signal value after the other are accumulated until half the total number of samples in the histogram is reached. The signal value for which 50% of the samples are accumulated is the median.	
Peak value	Peak	The signal value at the histogram peak.	
Lower peak value	LPeak	The signal value at the maximum sample value in the lower half of the histogram.	
Upper peak value	UPeak	The signal value at the maximum sample value in the upper half of the histogram.	

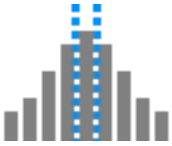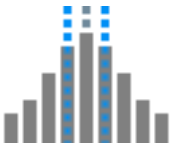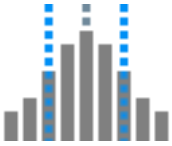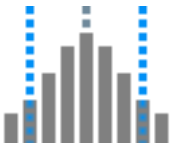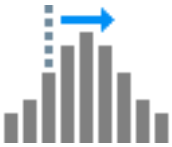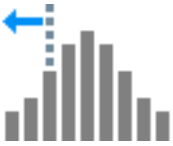Meas. type	Label	Description, result	Graphic
σ(S-dev)	H σ	Standard deviation of the sample numbers.	
Mean ± σ	Mn±σ	Percentage of samples in the range between (mean value + standard deviation) and (mean value - standard deviation).	
Mean ± 2 * σ	Mn±2*σ	Percentage of samples in the range between (mean value + 2 * standard deviation) and (mean value - 2 * standard deviation)	
Mean ± 3 * σ	Mn ±3*σ	Percentage of samples in the range between (mean value + 3* standard deviation) and (mean value - 3* standard deviation)	
Marker - P	Mkr-%	The marker value (according to the selected probability domain marker type) minus the defined limit. The value is restricted to the histogram range.	
Marker + P	Mkr+%	The marker value (according to the selected probability domain marker type) plus the defined limit. The value is restricted to the histogram range.	
Waveform count	WCount	The number of waveforms the histogram is based on.	

10.2.5.2 Settings for measurements on histograms

Access: "Menu" > "Measurement" > "Setup" tab > add histogram measurement > ⚙ settings of a measurement.

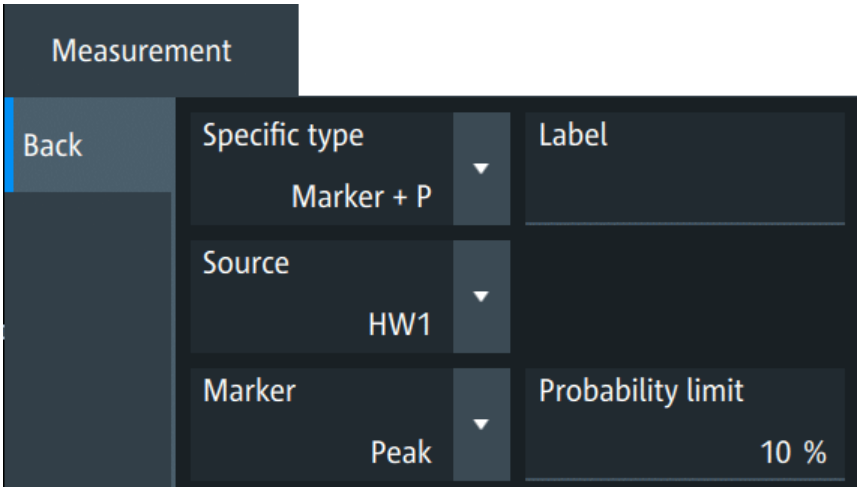

For most measurements on histograms, only common settings are required.

The measurement types "Marker + P" and "Marker - P" require additional settings.

For a description of common measurement settings, see:

- "Specific type" on page 290
- "Clear results" on page 290
- "Source" on page 290
- "Label" on page 291

Marker
Defines the marker position in the probability domain.

The setting is relevant for measurements "Marker + P" and "Marker - P".

"Peak"	The y-value with the maximum sample value in the histogram
"Upper Peak"	The y-value at the maximum sample value in the upper half of the histogram
"Lower Peak"	The y-value at the maximum sample value in the lower half of the histogram
"Maximum"	The highest y-value with a probability > 0
"Minimum"	The lowest y-value with a probability > 0
"Median"	The y-value for which half the samples lie above, the other half below in the histogram
"Mean"	The weighted arithmetic average of the histogram

Remote command:
`MEASurement<mg>:HISTogram:PROBability:TYPE` on page 1317

Probability limit
Defines a range around the marker.

The setting is relevant for measurements "Marker + P" and "Marker - P".

Remote command:
`MEASurement<mg>:HISTogram:PROBability:LIMit` on page 1317

10.2.6 Basic jitter analysis (option R&S MXO5-K12)




10.2.6.1 Overview of basic jitter measurements


The specific measurements for basic jitter analysis are provided in the "Jitter" category.

To select and activate measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1311
- `MEASurement<mg>[:ENABle]` on page 1309
- `MEASurement<mg>:ACTive` on page 1309

Table 10-1: Jitter measurements

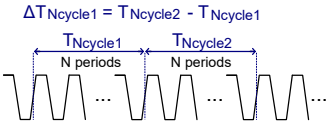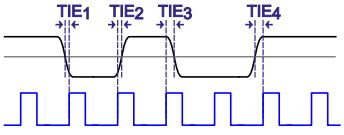Meas. type	Label	Description	Formula, graphic
Cycle-cycle duty cycle	CCDCyc	Difference between the duty cycle of two adjacent cycles. The measurement is based on the duty cycle measurement. You can select the pulse polarity for the duty cycle measurement.	$\Delta R_{Cyc\ k} = R_{Cyc\ k+1} - R_{Cyc\ k}$ for $k = 1,...,K-1$
Cycle-cycle width	CCWid	Difference between the pulse width of two adjacent cycles. The measurement is based on the pulse width measurement. You can select the pulse polarity to be measured.	$\Delta T_{Pulse\ k} = T_{Pulse\ k+1} - T_{Pulse\ k}$ for $k = 1,...,K-1$
Cycle-cycle jitter	CCJit	Difference between the periods of two adjacent cycles. The measurement is based on the period measurement. You can select the slope and the reference level on which the period is measured.	$\Delta T_{Period\ k} = T_{Period\ k+1} - T_{Period\ k}$ for $k = 1,...,K-1$ 
N-cycle jitter	NCJit	Difference between the time of two adjacent groups of N cycles (periods) each. You can select the slope and the reference level on which the time is measured, and the number of periods in the groups.	$\Delta T_{Ncycle\ k} = T_{Ncycle\ k+1} - T_{Ncycle\ k}$ for k = *cycle group index* 
Time interval error	TIE	Time difference between the slope of the input signal and the slope of a reference signal. The reference signal can be a captured clock waveform, or a clock generated by clock data recovery (CDR, software algorithm or hardware generation). You can select the slope and the reference level on which the TIE is measured.	$TIE_k = t_{Signal\ k} - t_{Clock\ k}$ for $k = 1,...,K$ 
Unit interval	UI	Period of the clock signal. If no clock signal is available, it is recovered by CDR. The period is calculated as the time difference between two consecutive clock edges of the same polarity.	$UI_k = t_{Clock\ k+1} - t_{Clock\ k}$ for $k = 1,...,K-1$
Data rate	DR	Frequency of the clock signal. If no clock signal is available, it is recovered by CDR. The measurement is based on the unit interval measurement.	$R_{Clock\ k} = 1 / UI_k$ for $k = 1,...,K-1$

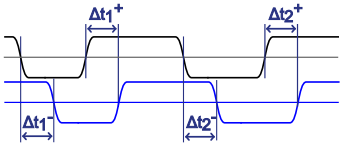Meas. type	Label	Description	Formula, graphic
Skew delay	SkwD	Delay between the edges of two interdependent waveforms. The measurement is a simplified variant of the "Delay" measurement assuming that both sources are similar except for the delay.	*Skew delay* = $\Delta t_k = t_{Source2} - t_{Source1}$ for $k = 1,...,K$ 
Skew phase	SkwP	Phase difference between the edges of two waveforms.	*Skew phase = Skew delay / Period * 360°* = $\Delta t_k / \Delta T_{Period\ k} * 360°$

10.2.6.2 Settings for jitter measurements

Access: "Menu" > "Measurement" > "Setup" tab > add jitter measurement > ⚙ settings of a measurement.

For a description of common measurement settings, see:

- "Specific type" on page 290
- "Source" on page 290
- "Reference levels" on page 290
- "Gate" on page 291
- "Label" on page 291

Settings for cycle-cycle measurement

The cycle-cycle measurements are used to analyze the quality of clock signals. They require a few additional settings for period and pulse width measurement.

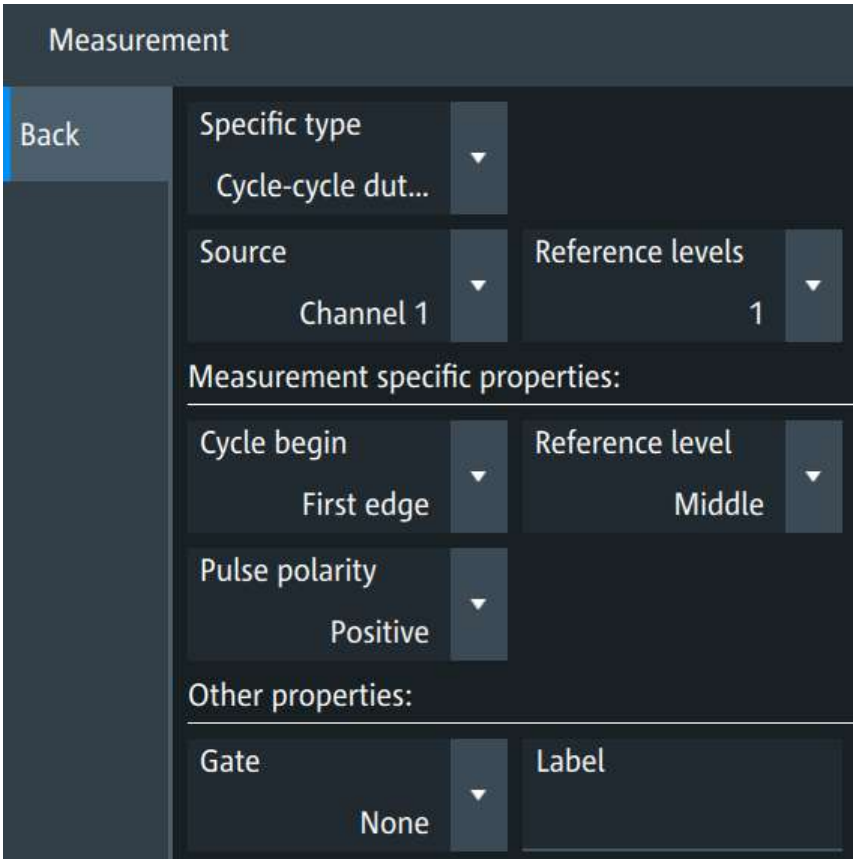


Figure 10-1: Setup for cycle-cycle duty cycle measurement

Cycle begin, Slope
For cycle-cycle jitter, N-cycle jitter, and cycle-cycle duty cycle measurements, "Cycle begin" selects the slope at which the periods and thus the jitter is measured: first edge, positive, negative or either.

For time-interval error measurements, "Slope" sets the edges of the data signal that are used for measurements: positive, negative or either.

"First edge" Measures the period from the first edge that is found, no matter of its direction.

"Positive" Measures the period at positive going edges.

"Negative" Measures the period at negative going edges.

"Either" Measures the period at both positive and negative going edges. This option is useful, for example, to check the clock stability of a double data rate clock.

Remote command:
`MEASurement<mg>:JITTer:SLOPe` on page 1320

Pulse polarity
For cycle-cycle width and the cycle-cycle duty cycle measurements, "Pulse polarity" sets the polarity of pulses for which the pulse width is measured: positive or negative.


For skew delay and skew phase measurements, "Edge polarity" sets the edge of the first waveform from which the measurements starts: positive, negative or either.

Remote command:
MEASurement<mg>:JITTer:POLarity on page 1319

Reference level
Selects the reference level that is used for time measurements.

Remote command:
MEASurement<mg>:JITTer:REFLevel<rl> on page 1319

Number of cycles
Sets the number of periods (cycles) that are accumulated to measure the N-cycle jitter.

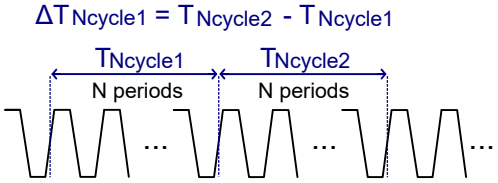

Remote command:
MEASurement<mg>:JITTer:NCYCles on page 1318

Settings for delay measurements

Skew delay and skew phase measurements are intended to measure the time difference between the edges of two waveforms. The measurements are simplified variants of the "Delay" and "Phase" measurements assuming that both sources are similar except for the delay.

Source 1, Source 2
"Source 1" is the reference signal, and "Source 2" is the signal compared to the reference signal.

Skew delay = $\Delta t_k = t_{Source2} - t_{Source1}$ for $k = 1,...,K$

See also: "Clock slope" on page 300.

Remote command:
MEASurement<mg>:SOURce on page 1309

Edge polarity
See "Pulse polarity" on page 308.

Relative polarity
Sets the edge of the second waveform relative to the first waveform.

"Matching" Measures from positive to positive edge or from negative to negative edge.

"Inverse" Measures from positive to negative edge or from negative to positive edge.

Remote command:
MEASurement<mg>:JITTer:RELPolarity on page 1320

Reference level
Selects the reference level that is used for time measurements on "Source 2".

Remote command:
`MEASurement<mg>:JITTer:REFLevel<rl>` on page 1319

Settings for data measurements

The following measurements are intended to analyze serial data:

- Time interval error
- Unit interval
- Data rate

The clock can be a captured clock signal, or it can be recovered from the data signal. The clock or CDR is configured in the "Timing reference" dialog, see Section 8.4, "Timing reference", on page 225.

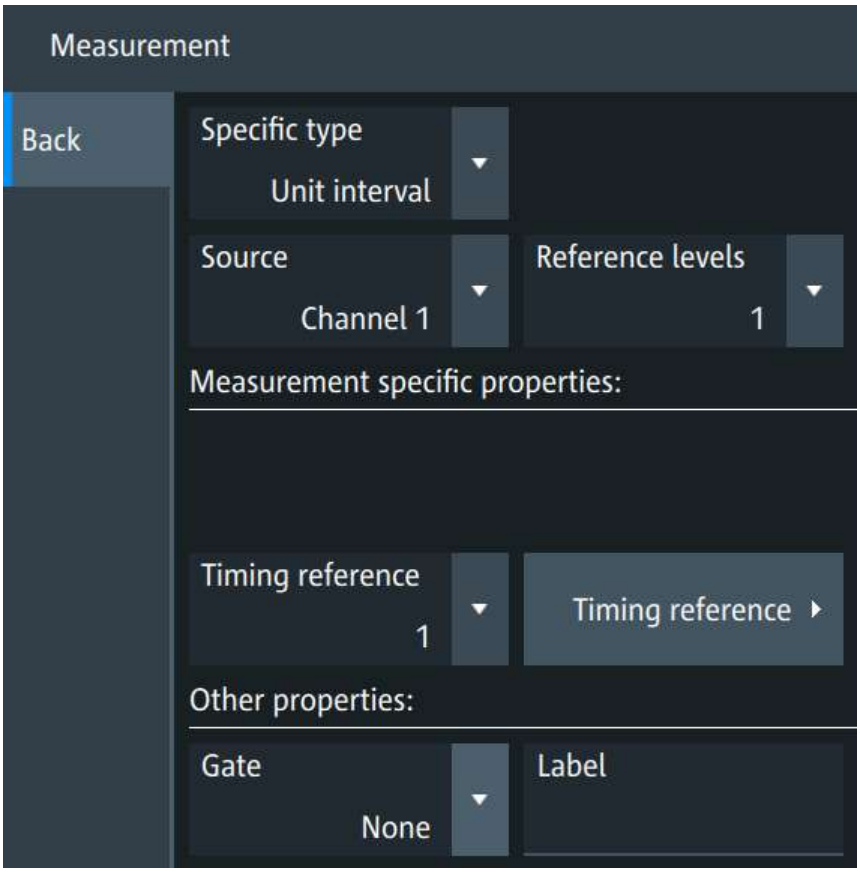


Figure 10-2: Setup for unit interval measurement

Slope
Sets the edges of the data signal that are used for measurements. The setting is relevant for time-interval error measurements.

See also: "Cycle begin, Slope" on page 308.

Timing reference
Selects the timing reference, which is one of the available clock configurations.

For configuration of the timing reference, see Section 8.4, "Timing reference", on page 225.

Remote command:
`MEASurement<mg>:JITTer:TREF` on page 1321

Unit
Sets the unit to bps (bit per second), or to Hz for analysis of radar signals. The setting is available for data rate measurements.

Remote command:
`MEASurement<mg>:JITTer:UNIT` on page 1321

10.2.7 Eye measurements (option R&S MXO5-K136)

The measurements on eye diagrams are used for evaluation of signal quality and show the combined effects of channel noise and intersymbol interference. By creating histograms of the eye diagram, important jitter parameters can be determined. See also: Section 12.7.1, "Calculation and display of eye diagrams", on page 485.

Eye measurements are done on active configured eye diagrams. For configuration, see Section 12.7.2, "Eye diagram setup", on page 486.

The following characteristic values can be determined:

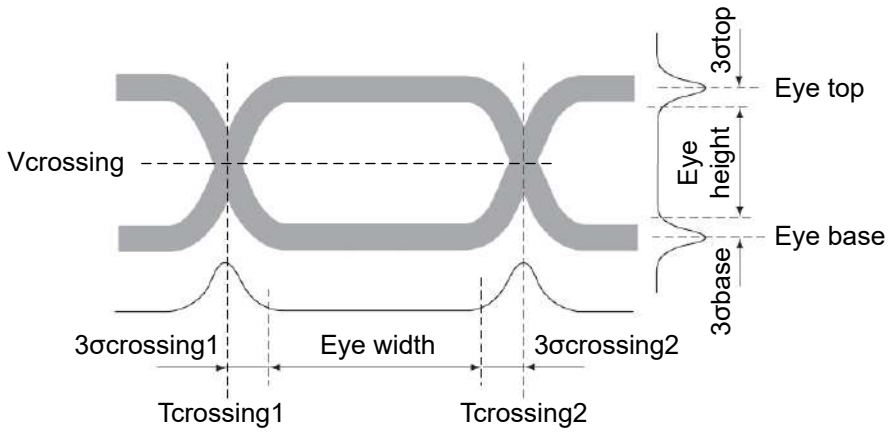


Figure 10-3: Basic eye diagram characteristics

Eye top = Mean of the upper vertical histogram
σtop = Standard deviation of the upper vertical histogram
Eye base = Mean of the lower vertical histogram
σbase = Standard deviation of the lower vertical histogram
Tcrossing = First and second mean of the horizontal histogram
σcrossing = Standard deviation of the horizontal histogram

10.2.7.1 Overview of eye measurements

The specific measurement types for eye diagrams are provided in the "Eye" category. To see these measurement types, an active eye diagram is required.

To select and activate measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1311
- `MEASurement<mg>[:ENABle]` on page 1309
- `MEASurement<mg>:ACTive` on page 1309

Table 10-2: Eye measurements


Meas. type	Description/Result
Extinction ratio (%)	The extinction ratio is an indication of efficiency. It describes the ratio of the power used to transmit a logic level 1, to the energy used to transmit a logic level 0. The MXO 5 provides extinction ratio measurements as a percentage, and in decibels. *ER(%) = Eye base / Eye top * 100* Prerequisite: *Eye base > 0* and *Eye top > 0* because the extinction ratio is defined only for positive values.
Extinction ratio (dB)	Extinction ratio in decibels. The fraction is inverted in comparison to ER(%). *ER(dB) = 10log (Eye top / Eye base)*
Eye height	The vertical eye opening indicates the sensitivity of the transmission to noise. With algorithm "Three sigma": *(Eye top – 3 * σtop) – (Eye base + 3 * σbase)* With algorithm "Actual": eye height is calculated in a user-defined window, in % of the eye period.
Eye width	The horizontal eye opening indicates the time range during which the sampling of the logical state is possible. With algorithm "Three sigma": *(Tcrossing2 – 3 * σcrossing2) – (Tcrossing 1 – 3 * σcrossing1)*
Eye top	Mean of the upper vertical histogram, mean value of a logic 1 inside a window defined in in the measurement defaults. The default window is 40% – 60% of the eye period. The eye top is also known as level 1.
Eye base	Mean of the lower vertical histogram, mean value of a logic 0 inside a window defined in in the measurement defaults. The default window is 40% – 60% of the eye period. The eye base is also known as level 0.
Q factor	*Q factor = (Eye amplitude) / (σtop + σbase)*
Noise (RMS)	Quadratic mean of the noise of eye top and eye base. *Noise(RMS) = (σtop + σbase)/2*
S/N ratio	Signal-to-noise ratio *SNR = 10log (Eye amplitude / Noise(RMS)*
Duty cycle distortion	Difference of mean time of rising and falling edges at a user defined level relative to the difference of crossing times. The default level is 50% of the amplitude.
Eye rise time	Duration for signal to rise from 10% to 90% of the high signal level.

Meas. type	Description/Result
Eye fall time	Duration for signal to fall from 90% to 10% of the high signal level.
Eye bit rate	Frequency between two crossings. *Eye bit rate = 1 / difference of crossing times*
Eye amplitude	*Eye amplitude = Eye top - Eye base*
Jitter (peak to peak)	Average of the jitter for both crossing points. *Jitter = (σcrossing1 + σcrossing2) / 2*
Jitter (6 * σ)	*Jitter (6 * σ) = Jitter (RMS) * 6*
Jitter (RMS)	Standard deviation of a histogram around crossing time at crossing level or at a user defined level.
Crossing points (%)	Percentage of points crossing the eye. *Eye crossing = 100 * (Crossing level - Eye base) / (Eye top - Eye base)*

10.2.7.2 Settings for eye measurements

Common settings for all eye measurement types

Access: "Menu" > "Measurement" > "Setup" tab > add eye measurement > ⚙ settings of a measurement.

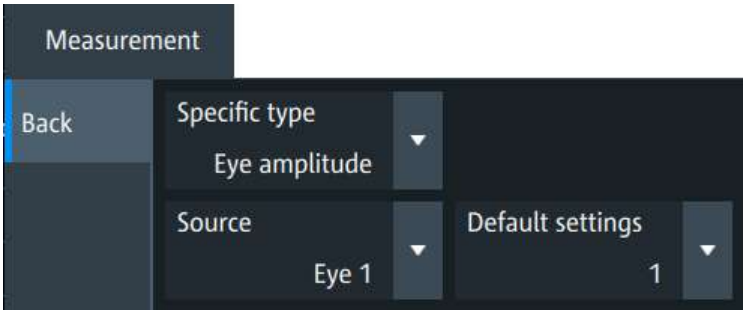

Specific type
Selects the specific measurement type of eye measurements.

Source
See "Source" on page 290.


Default settings
Selects the default measurement configuration.

Remote command:
`MEASurement<mg>:EYE:DEFSettings` on page 1325

Default settings for all eye measurement types

The settings in the "Defaults" tab are relevant for all eye measurements. You can define up to 8 sets of default measurement configurations.

Access: "Menu" > "Measurement" > "Defaults" tab

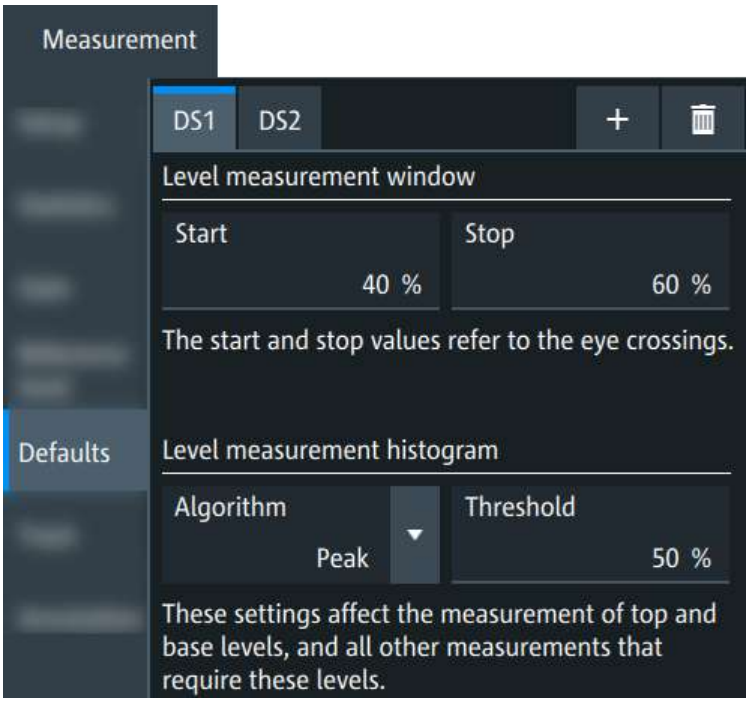

Start, Stop
Define the global start and stop times for the eye measurements.

Remote command:
`MDEFaults:SETTings<m>:EYE:RELative:STARt` on page 1322
`MDEFaults:SETTings<m>:EYE:RELative:STOP` on page 1323

Algorithm
Selects the algorithm, which defines how to compute the top and base levels and the corresponding sigma values.

"Mean"	Mean value of the histogram. The Sigma value is the standard deviation of the histogram.
"Peak"	Maximum peak of the histogram. Only values corresponding to this peak are used to compute sigma.
"Inner peak"	Inner peak of the histogram. Only values corresponding to this peak are used to compute sigma.
"Outer peak"	Outer peak of the histogram. Only values corresponding to this peak are used to compute sigma.

Remote command:
`MDEFaults:SETTings<m>:EYE:ALGorithm` on page 1321

Threshold
Sets the threshold that is used to separate peaks. Two peaks are separated if they are split by a valley of height *Threshold * Maximal_histogram_value*.

The threshold is only relevant for the peak algorithms.

Remote command:
MDEFaults:SETTings<m>:EYE:THReshold on page 1323

Specific settings for eye measurement types

Access: "Menu" > "Measurement" > "Setup" tab > add eye measurement > ⚙ settings of a measurement.

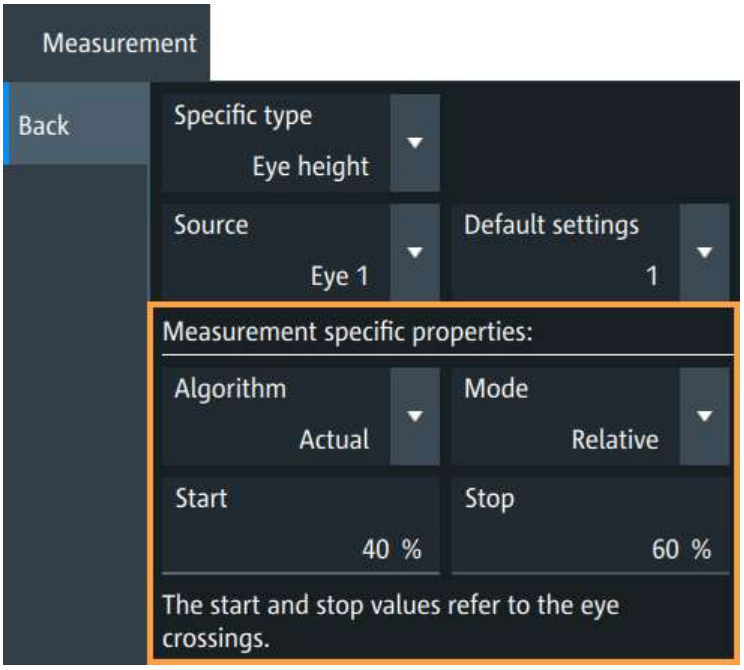


Figure 10-4: Settings for eye height measurement. The same settings are used for eye width measurements.

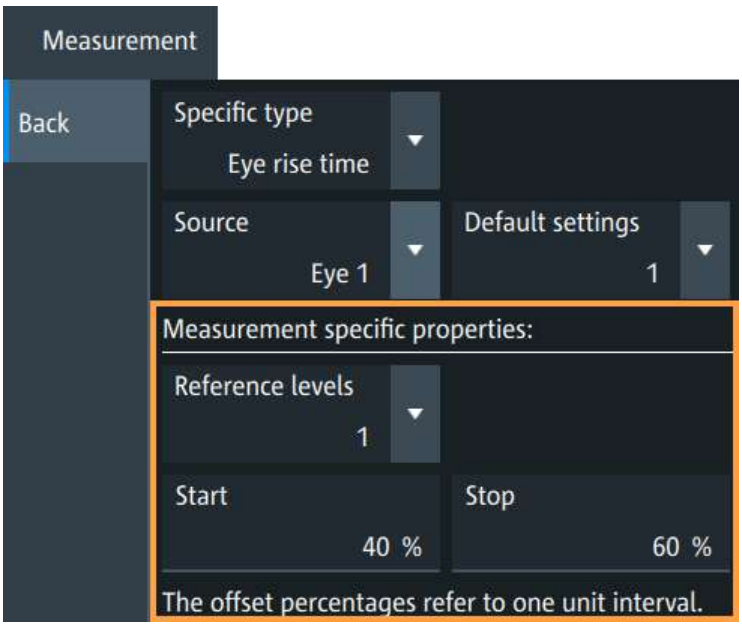


Figure 10-5: Settings for eye rise and fall time measurements

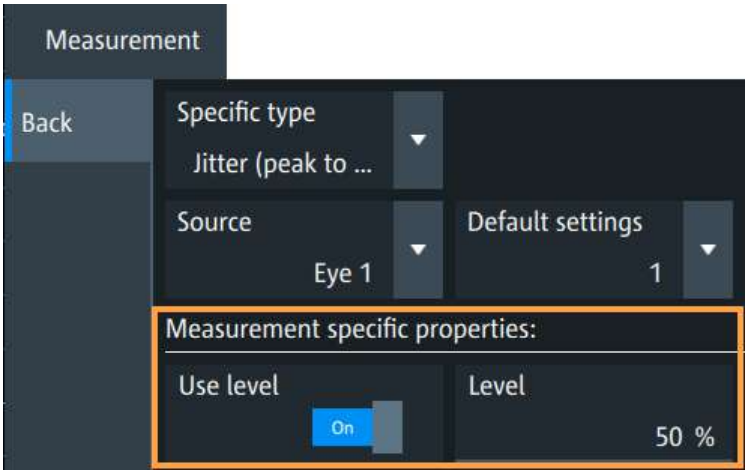


Figure 10-6: Settings for jitter measurements

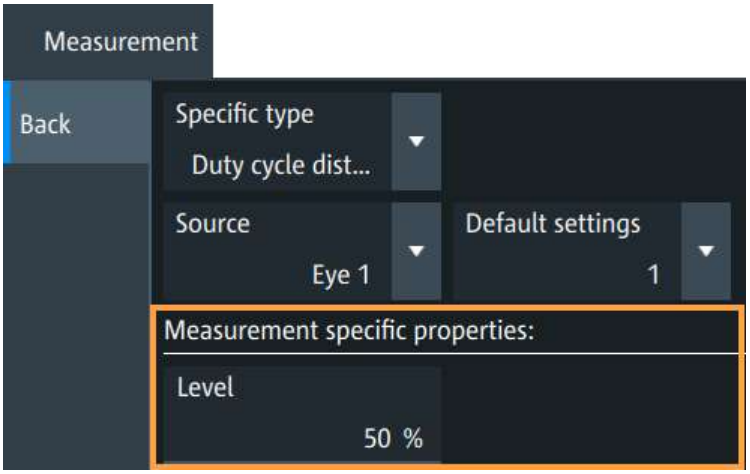


Figure 10-7: Settings for duty cycle measurement

Algorithm (for eye height, eye width)
Selects the algorithm for the measurement of the eye height and eye width.

"Three sigma" The eye height is measured with the settings defined in the "Defaults" tab:
Eye height = (Eye top - 3σtop) - (Eye base + 3σbase)
The eye width is measured at the crossing level:
Eye width = (Tcrossing2 - 3σcrossing2) - (Tcrossing1 + 3σcrossing1)

"Actual" The actual height is the vertical distance between the top and the bottom of the eye opening at the sampling point. It represents the range of levels over which the signal can reliably distinguish between logical 1 and logical 0. The default window is 40% - 60% of the eye period. Specific start and stop values are used for calculation.

"Maximum"	The maximum height is the theoretical maximum vertical distance between the highest possible 1 level and the lowest possible 0 level. The default measurement window is 40% - 60% of the eye period. The maximum width of an eye diagram is the maximum horizontal distance between the points where the ideal eye opening crosses the decision threshold level. Perfect signal timing, no jitter and no distortions are assumed. Specific start and stop values are used for maximum calculation.
"Crossing level"	The eye width is measured at the crossing level.
"Meas. window"	The eye width is measured as the horizontal distance between the points where the eye opening crosses the threshold level. Specific start and stop values are used for calculation.

Remote command:
`MEASurement<mg>:EYE:ALGorithm` on page 1324

Mode (for eye height, eye width)
Selects between absolute and relative values for the measurement-specific start and stop values.

Remote command:
`MEASurement<mg>:EYE:MODE` on page 1326

Start, Stop (for eye height, eye width)
Set the absolute start and stop values for the selected algorithm.

Remote command:
`MEASurement<mg>:EYE:ABSolute:STARt` on page 1324
`MEASurement<mg>:EYE:ABSolute:STOP` on page 1324

Start, Stop (eye height and width, rise/fall time)
Set the relative start and stop values for the selected algorithm of eye height and eye width measurements.

For rise time and fall time eye measurements, the settings define the offset before and after the first eye crossing. Only values inside the specified horizontal range are considered for the measurements.

Remote command:
`MEASurement<mg>:EYE:RELative:STARt` on page 1326
`MEASurement<mg>:EYE:RELative:STOP` on page 1327

Use level (jitter)
If enabled, you can define a user-defined level for the jitter measurements on eye diagrams ("Jitter (peak to peak)", "Jitter (RMS)", "Jitter (6 * σ)").

Remote command:
`MEASurement<mg>:EYE:USELevel` on page 1327

Level (jitter, duty cycle)
Defines the relative level for the jitter measurements on eye diagrams if "Use level" is on. The setting also defines the level for duty cycle distortion measurement.

Remote command:
MEASurement<mg>:EYE:LEVel on page 1325






10.2.8 Protocol measurements (option R&S MXO5-K500)








10.2.8.1 Overview of protocol measurements

The specific measurement types for protocol measurements are provided in the "Protocol" category. To see these measurement types, an active serial bus is required.

To select and activate measurements in remote control, use:

- MEASurement<mg>:MAIN on page 1311
- MEASurement<mg>[:ENABle] on page 1309
- MEASurement<mg>:ACTive on page 1309

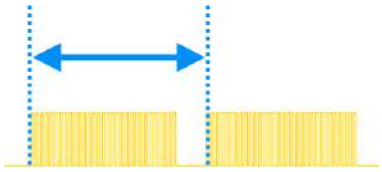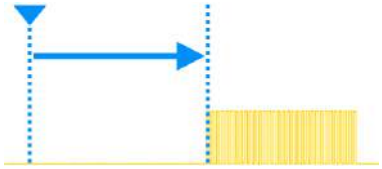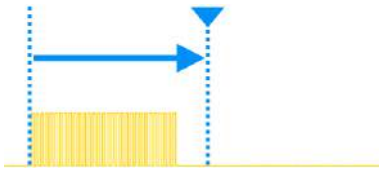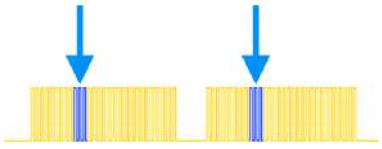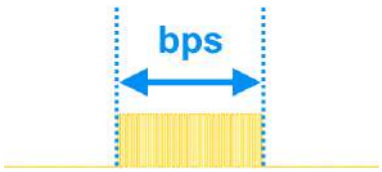Meas. type	Label	Description/result	
Frame/frame	F2F	The time from the start of one frame to the start of the next frame.	
Trig/frame	T2F	The time from a trigger event to the start of the next frame.	
Frame/trig	F2T	The time from the start of a frame to the next trigger event.	
Field value	FVal	The value of a selected field in a frame.	
Main bit rate	BPS	The nominal bits per second (bps) in a selected frame. The measurement ignores, for example, gaps in a LIN frame or a bus park bit in an RFFE or SPMI frame.	

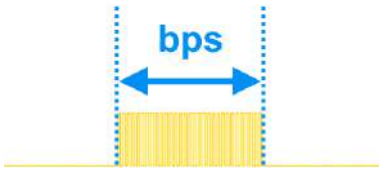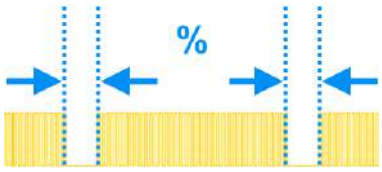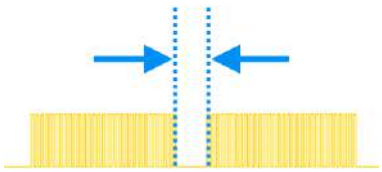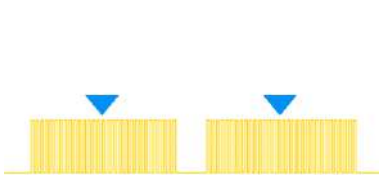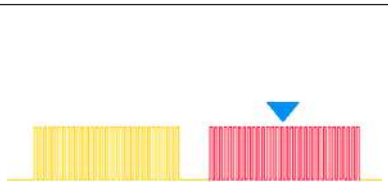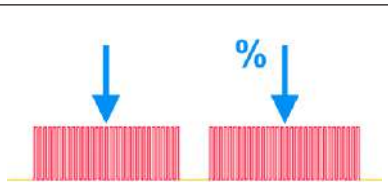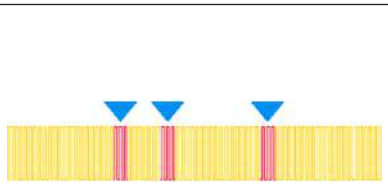
Meas. type	Label	Description/result	
2nd bit rate	BPS2	Like main bit rate, but optional for protocols with multiple bit rates, e.g. CAN/CAN-XL, SPMI or RFFE write / read.	
Bus idle	Idle	Percentage of idle times between all frames in an acquisition.	
Gap	Gap	The gap time (not necessarily idle) between two frames.	
Frame count	FCnt	The number of complete frames in an acquisition.	
Frame errors	FECnt	The number of erroneous frames in an acquisition.	
FER	FER	The frame error rate, hence the percentage of erroneous frames in an acquisition.	
Cons FER	CFER	The frame error rate (percentage) of two or more consecutive erroneous frames.	
RS errors	RSErr	Available only in the 1000BASE-T1 protocol: The number of transmission errors in a PHY frame, in which the forward error correction algorithm of the Reed-Solomon decoder can correct up to 25 errors.	

10.2.8.2 Settings for protocol measurements

You can define additional parameters for some protocol measurements.

Access: "Menu" > "Measurement" > "Setup" tab > add protocol measurement > ⚙ settings of a measurement.

Available only, if "Source" = "Serial Bus N".

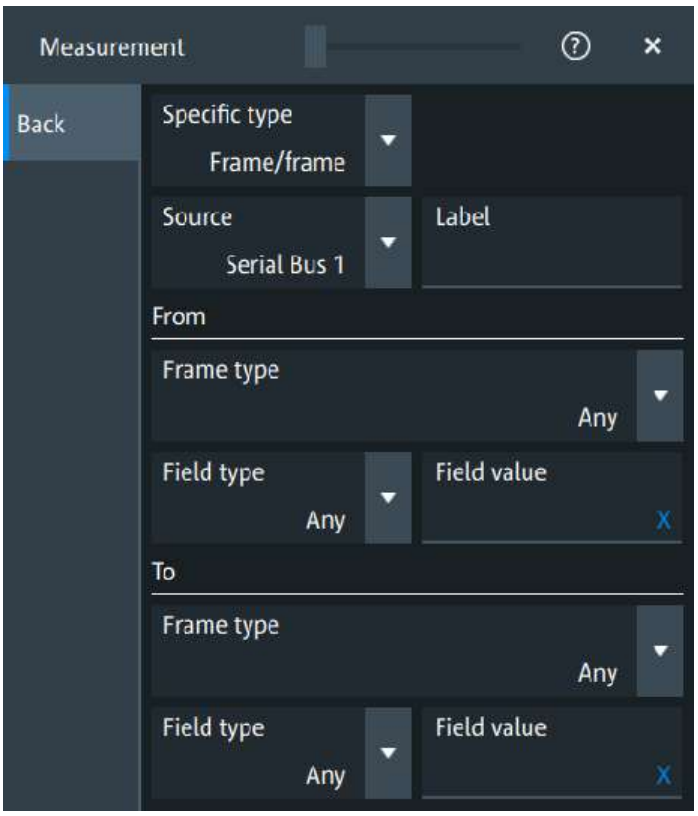

For a description of common measurement settings, see:

- "Specific type" on page 290
- "Clear results" on page 290
- "Source" on page 290
- "Label" on page 291

Frame Identification or From

"Frame Identification" is available only for the measurement types "Frame/trig", "Trig/frame" and "Field value". "Frame Identification" specifies where the measurement is executed.

"From" is available only for the measurement type "Frame/frame", which requires a "From" - "To" condition. "From" specifies where the measurement starts.

All other measurement types do not require these settings.

Frame Type ← Frame Identification or From
In a "Frame Identification", this setting specifies the type of the frame at which the measurement is executed.

In a "From" - "To" condition, this setting specifies the type of the frame at which the measurement starts.

Remote command:
`MEASurement<mg>:PROTocol:FNAMe` on page 1328

Field Type ← Frame Identification or From
In a "Frame Identification", this setting specifies the type of the field at which the measurement is executed.

In a "From" - "To" condition, this setting specifies the type of the field at which the measurement starts.

Remote command:
`MEASurement<mg>:PROTocol:FDName` on page 1328

Field Value ← Frame Identification or From
In a "Frame Identification", this setting specifies the value of the field at which the measurement is executed.

In a "From" - "To" condition, this setting specifies the value of the field at which the measurement starts.

Remote command:
`MEASurement<mg>:PROTocol:FDValue` on page 1328

To
"To" is available only for the measurement type "Frame/frame", which requires a "From" - "To" condition. "To" specifies where the measurement ends.

Frame Type ← To
Specifies the type of the frame at which the "Frame/frame" measurement ends.

Remote command:
`MEASurement<mg>:PROTocol:F2Name` on page 1328

Field Type ← To
Specifies the type of the field at which the "Frame/frame" measurement ends.

Remote command:
`MEASurement<mg>:PROTocol:FD2Name` on page 1329 (used also for Tracked)

Field Value ← To
Specifies the value of the field at which the "Frame/frame" measurement ends.

Remote command:
`MEASurement<mg>:PROTocol:FD2Value` on page 1329


Tracked
Available only for the measurement type "Field value". This setting selects the field type to be displayed.

Remote command:
`MEASurement<mg>:PROTocol:FD2Name`, the same command is used for Field Type.

10.2.9 Annotation for measurements

Measurement annotations mark the significant places in the diagram, for example, periods, maximum and minimum values, relevant reference levels, and more. The lines help understand the measurement results.

In the "Annotation" tab, you can select the measurements to be annotated. Alternatively, you can enable "Display result lines" in the "Setup" of a selected measurement. See "Display result lines" on page 291.

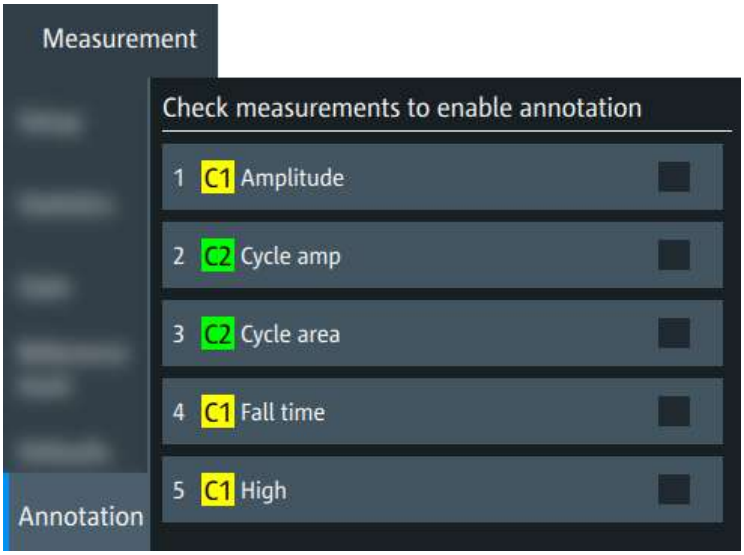

The "Check measurements to enable annotations" list shows all active measurements. The list is empty if no measurement is active. Configure and activate the measurements first, then select them for annotation.

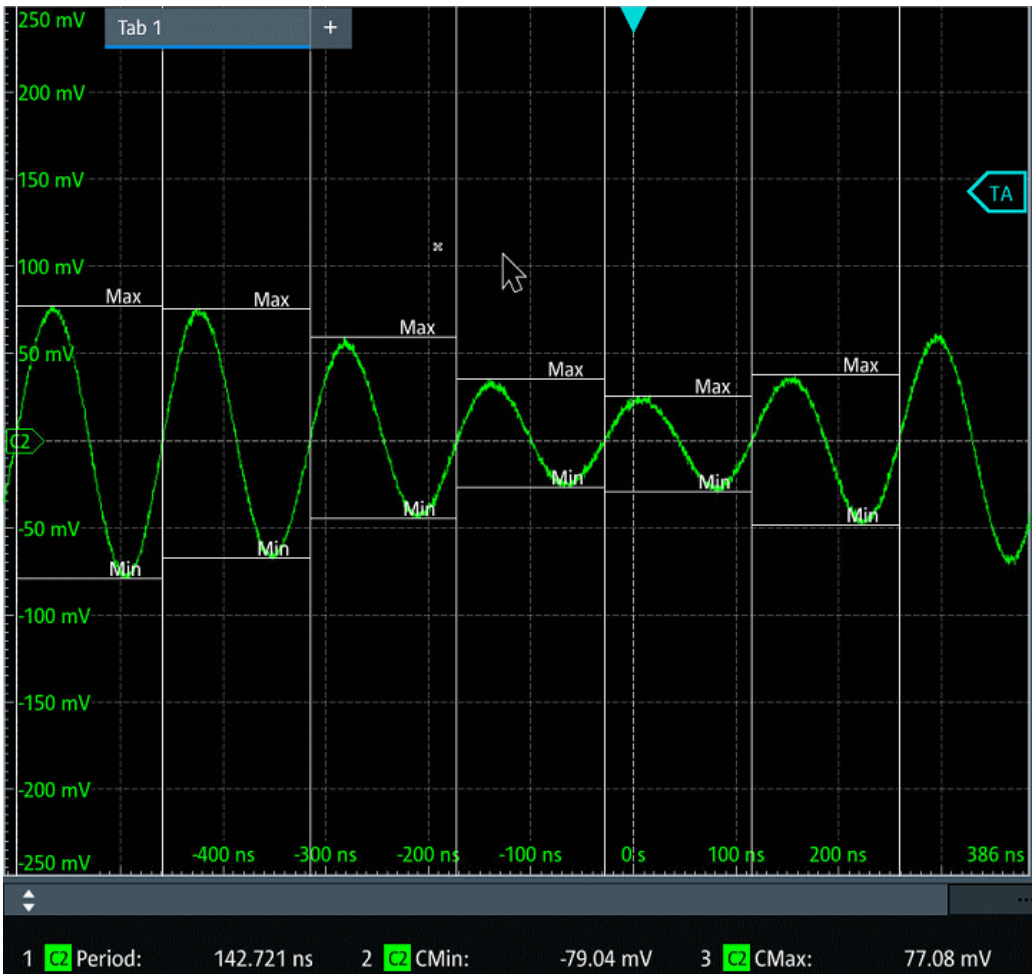


Figure 10-8: Example of annotations for cycle measurements

10.2.10 Measurement results and their analysis

The measurement results are shown in a table below the grid.



Dashes (---) indicate that no valid waveform is available, for example, if the source waveform is off.Statistical results and limit checks are shown in separate tables.

You can save the measurement results to file, see Section 13.8, "Results", on page 527.

The behavior of measurement results over time can be evaluated in different ways:

- Statistics.....324
- Track.....325
- Histograms on measurement results.....330
- Limit checks.....333

10.2.10.1 Statistics


In addition to the current measurement results, you can enable a statistical evaluation. It returns the current, minimum and maximum measurement values, the average and standard deviation, and the number of measured waveforms. The results are shown in a separate tab below the grid. If the cursor measurement is active simultaneously, its results are shown beside the statistics results.

If statistics are enabled, the following results are calculated. .

Label	Description
Max	Positive peak value (maximum)
Min	Negative peak value (minimum)
Mean	Arithmetic mean (average)
RMS	Root mean square
σ (S-dev)	Standard deviation
Rel. σ	Relative standard deviation (*S-dev / Mean*)
Event count	Number of measured events (e.g. rising edges, pulses etc.)
Wave count	Number of waveforms (acquisitions) the measurement is based on



Access: "Menu" > "Measurement" > "Statistics" tab.

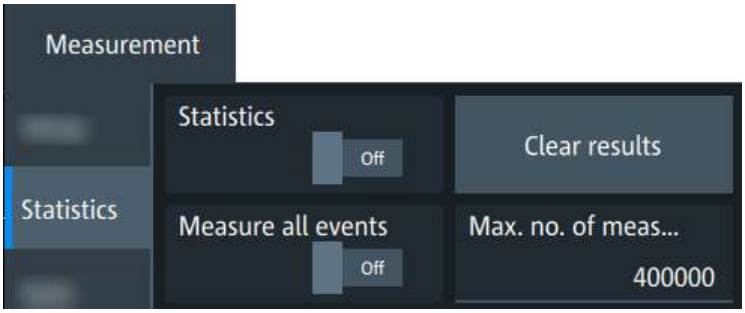

Statistics
Activates or deactivates the statistical evaluation for all measurements.

Remote command:
`MEASurement<mg>:STATistics[:ENABle]` on page 1333

Clear results
Deletes the statistical results for all measurements including the histogram, and starts a new statistical evaluation.

Remote command:
`MEASurement<mg>:STATistics:ARESet` on page 1333
To delete results of individual measurements, use `MEASurement<mg>:CLEar` on page 1312 or `MEASurement<mg>:STATistics:RESet` on page 1312.

Measure all events
Normally, only one measurement is performed for each acquired waveform to get best performance. If "Measure all events" is enabled, more than one result is taken from one acquired waveform and the results are included in evaluation. For example, the rise time is measured on all pulses in the waveform, not only on the first.

The result table shows only the first result of the waveform, the following results are used only for evaluation. The number of considered results can be restricted: see Max. No. of events.

Measuring all events is useful when calculating statistics and histograms.

The setting affects all measurements, it is a global setting. If a track is enabled for a selected measurement, all results are considered for this measurement, independent from the global setting.

All event results are also always considered in limit checks and can initiate an action.

Remote command:
`MEASurement<mg>:MULTiple` on page 1333

Max. No. of events
Sets the maximum number of measured events per acquisition.

Remote command:
`MEASurement<mg>:MNOMeas` on page 1334

10.2.10.2 Track

A track shows the measurement results over time for an acquired waveform. The track is the graphical interpretation of all measurement values of a single acquisition. Furthermore, the track reveals trends of change in the analysis and preserves the timing relationship of the measurement results to the signal.

Tracks can be enabled for each active measurement. Enabling the track also activates the measurement of all events for the selected measurement, independent of the "Measure all events" global setting.

To analyze tracks, you can use cursor measurements, zoom, mathematics and spectrum.

Track activation

Access: "Menu" > "Measurement" > "Track" tab.

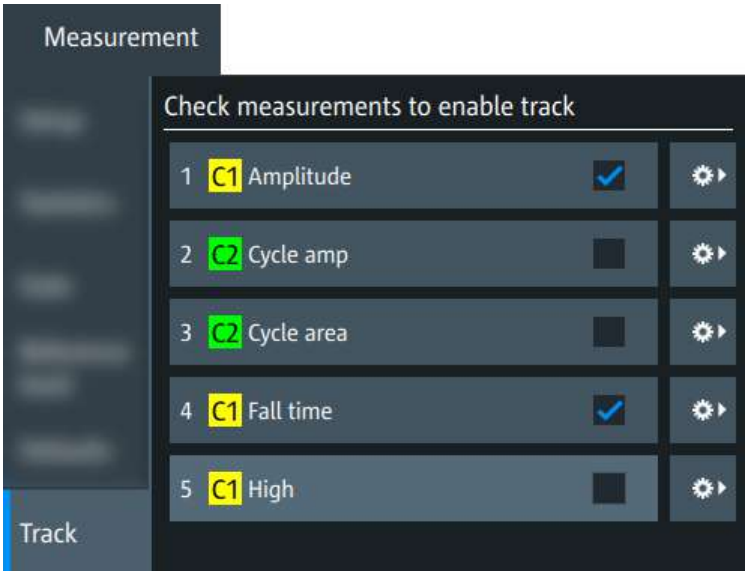


Figure 10-9: Measurement selection for tracks

Check measurements to enable track
The list shows all active measurements. The list is empty if no measurement is active. Enable the measurements first, then select them for track analysis.

Select the checkbox of a measurement to enable the track for this measurement.

Tap the settings icon to open the track settings.

Track settings

Access: "Menu" > "Measurement" > "Track" tab > tap measurement button.

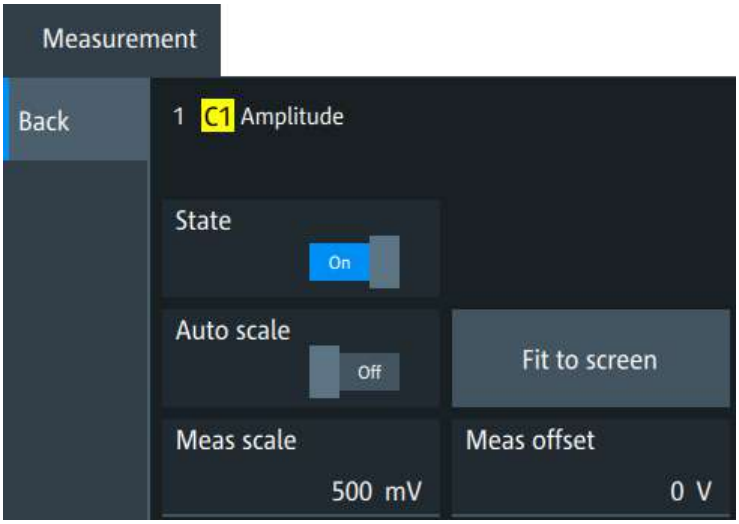


Figure 10-10: Track settings

State
Enables or disables the track for the selected measurement.

Enabling the track also enables "Measure all events" for the selected measurement.

Remote command:
MEASurement<mg>:TRACk[:STATe] on page 1334

Auto scale
Performs an automatic scaling whenever the track does not fit in the diagram during the measurement period.

Remote command:
MEASurement<mg>:TRACk:CONTiunous on page 1335

Fit to screen
Sets the vertical scale and the offset of the track, so that the complete height of the diagram is used.

Remote command:
MEASurement<mg>:TRACk:AUTO on page 1334

Meas scale
Defines the vertical scale of the track diagram. If "Auto scale" is on, the current scale value is displayed.

You can also select the track waveform and use the vertical [Scale] knob to change the scale.

Remote command:
MEASurement<mg>:TRACk:SCALe on page 1335

Meas offset
Defines the offset of the track waveform. If "Auto scale" is on, the current offset value is displayed.

You can also select the track waveform and use the vertical [Position] knob to change the offset.

Remote command:
MEASurement<mg>:TRACk:OFFSet on page 1335

Examples of track usage

The examples in this section provide ideas on how you can use tracks for waveform analysis.

Tracks with math functions



Figure 10-11: Tracks used in math functions

The example is set up as follows:

- Waveform on channel 1
- 3 measurements on C1: positive duty cycle, period and positive pulse width
- Enable track for each measurement: Track 1 (positive duty cycle), Track 2 (period), Track 3 (positive pulse width)
- Math1 = Trk1 * Trk2
- Math2 = Math1 / 100
  Expected values: Period * Pos. duty cycle / 100 = Positive pulse width, i.e. Math2 = Trk3
- Math3 = Math2 - Trk3
  Expected values = 0

Spectrum on tracks



Figure 10-12: Track and spectrum on this track. C1 is not in the diagram.

The example is set up as follows:

- Waveform on channel 1
- Period measurement on C1
- Enable track for the period measurement: Track 1
- Spectrum with "Source" = Track 1
- Enable "Peak list" > "Peak on waveform"

Zoom on tracks

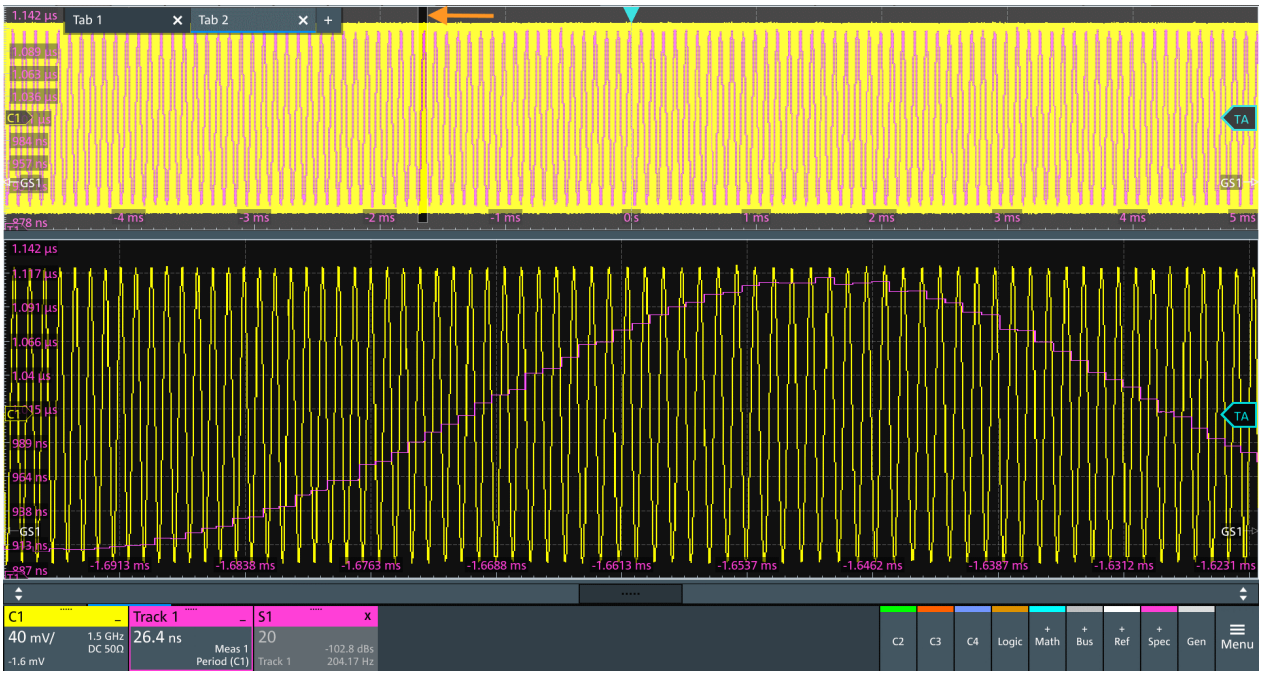


Figure 10-13: Track and C1 in the upper diagram, zoom below


The example is set up as follows:

- Waveform on channel 1
- Period measurement on C1
- Enable track for the period measurement: Track 1.
- Drag and drop the track on the channel waveform.
- Create zoom.

10.2.10.3 Histograms on measurement results

Access: "Menu" > "Measurement" > "Histogram" tab.

Histograms are available not only for channel, math and reference waveforms, but also for measurement results. A histogram on measurement results is the cumulative occurrence distribution of measurement results in a graphic. Each histogram is shown in a separate diagram; one histogram per measurement can be created. The source is a measurement, and all events in all acquisitions are measured and included in the histogram.

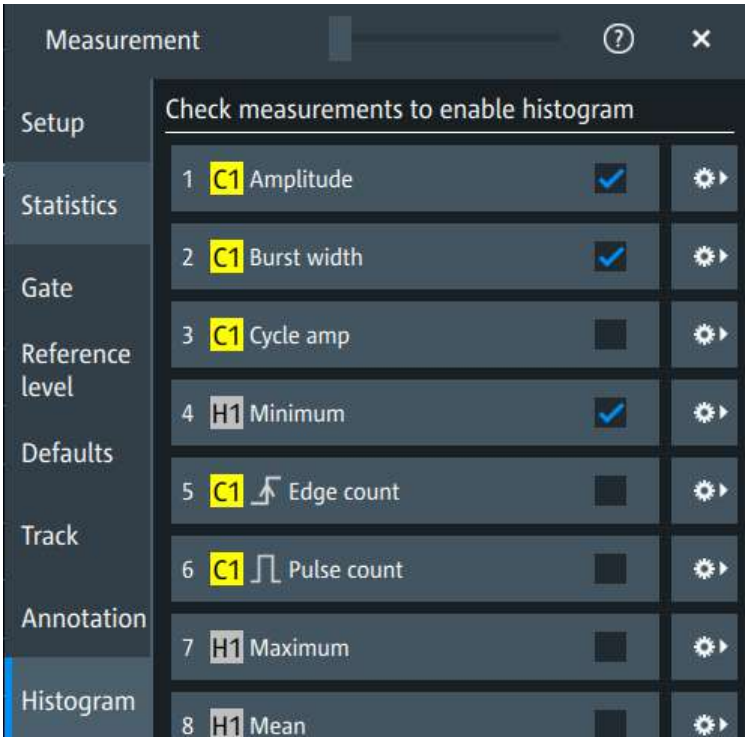


The list shows all active measurements. The list is empty if no measurement is active. Enable and configure the measurements first, then select them for histogram analysis.

1. Select the checkbox of a measurement to enable the histogram for this measurement.
2. Tap the settings icon to open the histogram settings for the selected measurement.

Histogram settings

Access: "Menu" > "Measurement" > "Histogram" tab > Settings of a measurement

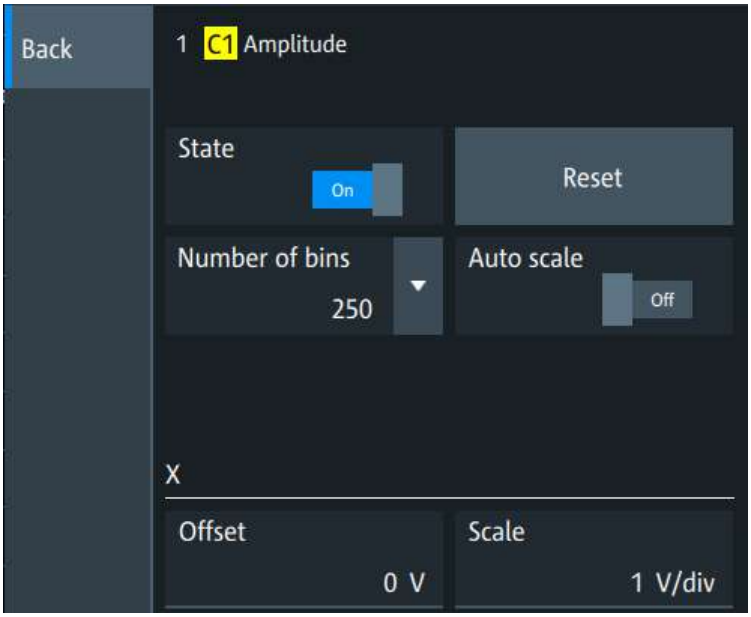

State
Enables the histogram for the selected measurement. Enabling the histogram enables also the statistics and "Measure all events".

Remote command:
`MEASurement<mg>:STATistics:HISTogram[:ENABle]` on page 1337

Reset
Resets the cumulation of measurement results, all bins are set to zero.

Remote command:
`MEASurement<mg>:STATistics:HISTogram:RESet` on page 1339

Number of bins
Sets the number of columns (bins) to be displayed in the histogram. Cumulative histogram values are kept if you change the number of bins.

Remote command:
`MEASurement<mg>:STATistics:HISTogram:HBINs` on page 1338

Auto scale
If on, the range on the x-axis is continuously adjusted to the measured values. If off, you can set the offset and the scale of the histogram.

The unit of the x-axis is the unit of the measurement, e.g. Volt for an amplitude measurement.

Remote command:
`MEASurement<mg>:STATistics:HISTogram:AUTOscale` on page 1337

Offset
Sets the center value of the histogram on the x-axis if "Auto scale" is off. The offset is the measurement result in the middle of the histogram.

Remote command:
MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet on page 1338

Scale
Sets the horizontal scale of the histogram if "Auto scale" is off.

Remote command:
MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe on page 1338

Analysis of histograms on measurement results

To view the histogram in more detail, use the zoom.

To measure the histogram, use the cursor measurements.

You can export the histogram data to file, one histogram per file. See Section 13.7, "Histogram data", on page 522.

For remote transfer of histogram data, use EXPort:HMEasurement<m>:DATA:HEADer? and EXPort:HMEasurement<m>:DATA[:VALues]?.

10.2.10.4 Limit checks

Limit checks evaluate whether the measurement result exceeds a specified value. Violations are indicated in the result table. Furthermore, you can define actions that are performed on limit violation, like saving the waveform or measurement results.

You can define two limit ranges for each measurement. For example, you can define a strict limit and a more flexible one, and simultaneously check the measurement results. The limit ranges are specific for each measurement.

Checking measurement limits

Before you can perform limit checks, configure the measurements to be checked.

1. Open the "Measurement" dialog.
2. Select the "Limit check" tab.

   You see all the configured measurements. Inactive measurements are marked but you can configure the limit checks for them.
3. Select the "Settings" icon for the required measurement.
4. Configure the first limit range:
   a) Set the "Condition".
   b) Select "Copy from recent result" to get limit values close the the recent measurement result.
   c) Adjust the "Lower limit" and the "Upper limit".

   See "Limit settings" on page 334 for details.
5. Activate the limit range with "Range state" in the "LC1" subtab.
6. Select "Actions".


7. Define the actions to be initiated by a limit violation, or on successful completion of the limit check.
   See "Actions on limit checks" on page 337 for details.
8. To configure a second limit range, add it with the + icon.
9. Configure the second limit range, the actions, and activate the range.
10. Activate the limit checks for the measurement:
    - Select the upper "State" in the limit check dialog, or
    - Select the measurement in the "Limit check" tab.

Results of a limit check

The result table of limit checks has one row for each active check.

It shows the following settings and results:

- Measurement source and type
- Current measurement result and its status, indicated by a checkmark or fail icon
- Summary status since the last reset: pass or fail
- Settings of the limit check: "Lower limit", "Upper limit" and "Condition"
- Number of passed acquisitions
- Number of failed acquisitions that violated the measurement limits
- Total number of measured acquisitions
- Fail rate = failed acquisitions / total acquisitions

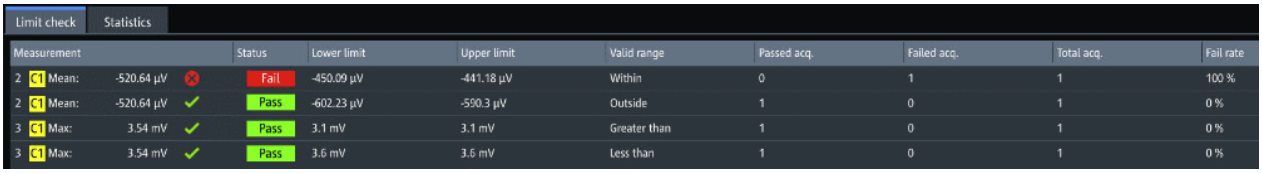

In the "Measure" result table, the status icon at the measurement result indicates the summary status of both limit checks (LC1 and LC2). The status is ok if the results of both limit checks passed the limits. Otherwise, the fail icon is shown.



You can reset the limit check results in the "Limit check" tab with "Clear results".

Remote commands: see Section 18.14.12.2, "Results", on page 1341.

Limit settings

Access: "Menu" > "Measurement" > "Limit check" tab > select measurement > "Settings" icon.

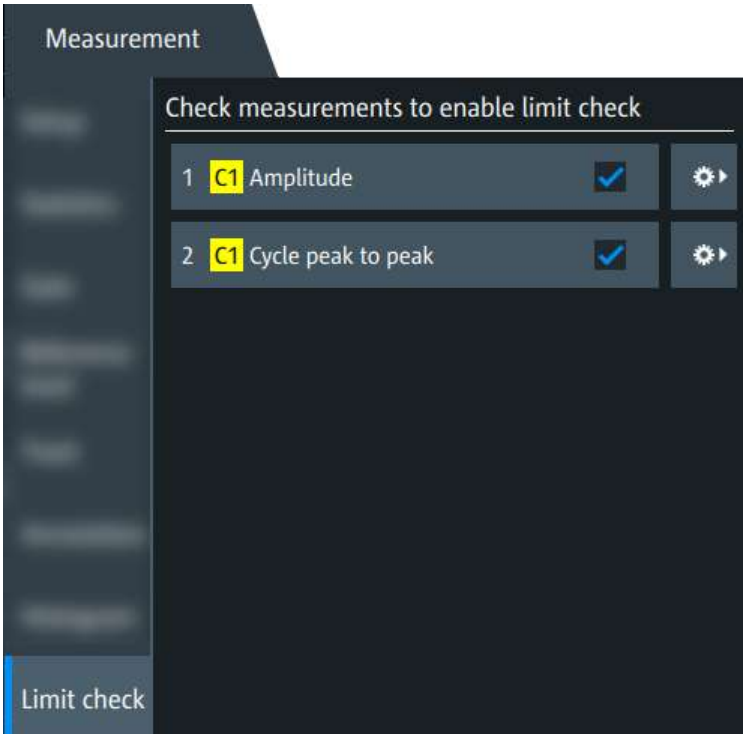


Figure 10-14: Activate measurements for limit check

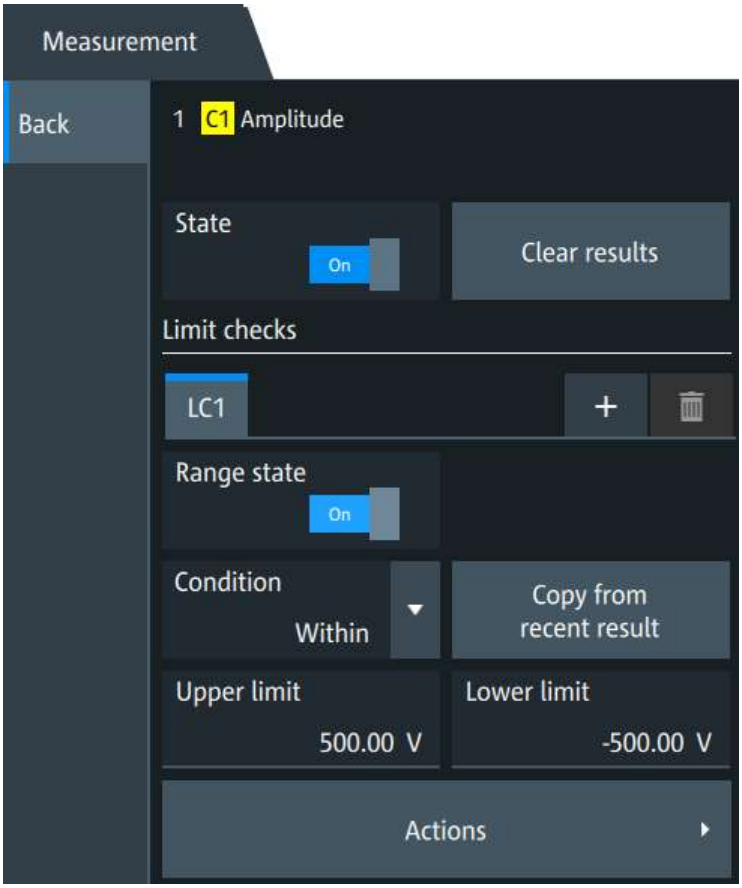


Figure 10-15: Limit check settings

State
Activates the limit checks on the selected measurement. Limit check activation for the measurement is the upper activation step. You can also activate and deactivate directly in the "Limit check" tab.

Remote command:
`MEASurement<mg>:LIMits[:STATe]` on page 1339

Clear results
Deletes all limit check results of the selected measurement. If acquisition is running, the check restarts immediately. Measurement results and statistics are not affected.


Remote command:
`MEASurement<mg>:LIMits:RESet` on page 1341

Range state
Activates the limit range (LC<x>). The range activation is the second activation step. You can activate LC1 or LC2 or both. The results are visible if the limit check on the measurement is also active.

Remote command:
`MEASurement<mg>:LIMits:CHECk<n>[:ENABle]` on page 1339

Condition
Sets the limit range for the measurement values, in combination with the upper and lower limit values.

- Within: measurement values must stay in between the upper and lower limit values.
- Outside: measurement values must stay above the upper limit value, or below the lower limit value.
- Greater than: measurement values must stay above the upper limit value.
- Less than: measurement values must stay below the lower limit value.

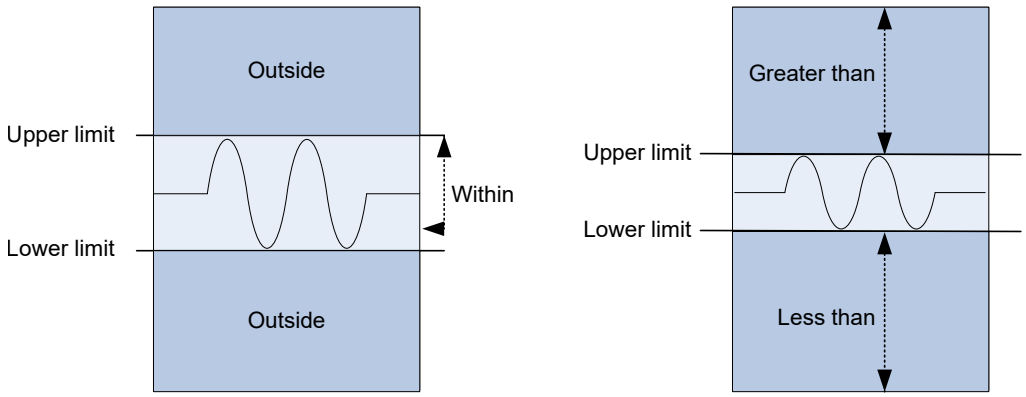

Remote command:
`MEASurement<mg>:LIMits:CHECk<n>:CONDition` on page 1340

Copy from recent result
Sets the upper and lower limit automatically. The function uses the most recent measurement result and adds some distance to it to get the limits. Thus, the limits are close to the measurement values, and it is easier to refine the limits.

Remote command:
`MEASurement<mg>:LIMits:CHECk<n>:CVALue` on page 1340

Upper limit
Sets the upper limit value. If the lower limit is greater than the new upper limit, the lower limit is automatically set to the value of the upper limit.


Remote command:
`MEASurement<mg>:LIMits:CHECk<n>:UPPer` on page 1341

Lower limit
Sets the lower limit value. If the upper limit is less than the new lower limit, the upper limit is automatically set to the value of the lower limit.

Remote command:
`MEASurement<mg>:LIMits:CHECk<n>:LOWer` on page 1341

Actions on limit checks

Access: "Menu" > "Measurement" > "Limit check" tab > select measurement > "Settings" icon > "Actions" button.

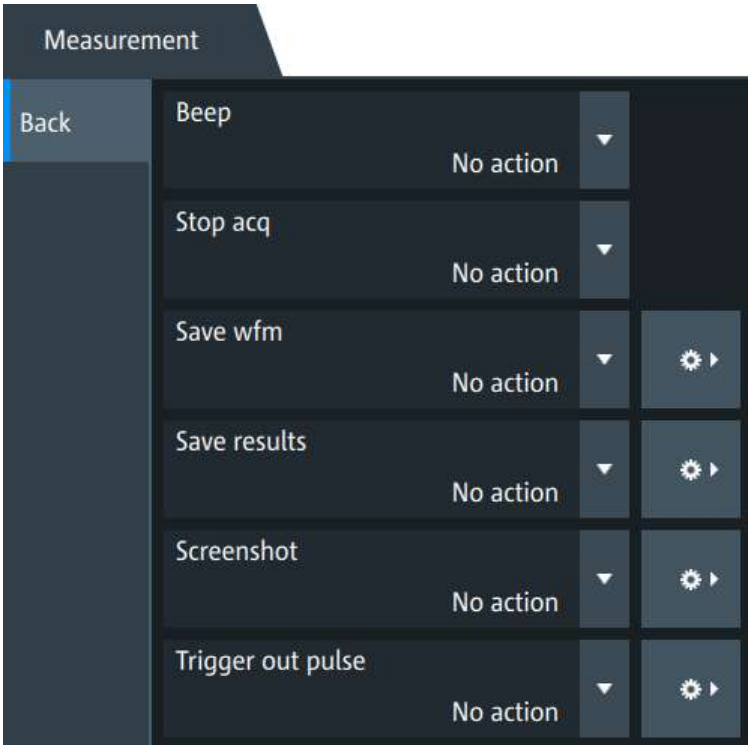

Beep
Generates a beep sound.

Remote command:
`MEASurement<mg>:LIMits:CHECk<n>:ONViolation:BEEP` on page 1344

Stop acq
Stops the acquisition when a limit violation occurs.

Remote command:
`MEASurement<mg>:LIMits:CHECk<n>:ONViolation:STOP` on page 1345

Save wfm
Saves the waveform data to a file according to the folder, filename and extension settings in the "Menu" > "Save/recall" > "Save" > "Waveform" dialog.

To select the waveforms and adjust the file path, tap the settings icon.

See also Section 13.4.2, "Saving waveforms", on page 506.

Remote command:
`MEASurement<mg>:LIMits:CHECk<n>:ONViolation:WFMS` on page 1346

Save results
Saves the results to a file according to the settings in "Menu" > "Save/recall" > "Save" > "Results".

To select the waveforms and adjust the file path, tap the settings icon.

See also Section 13.8, "Results", on page 527.

Remote command:
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:SRESults on page 1345

Screenshot
Saves a screenshot according to the settings in the "Menu" > "Save/recall" > "Save" > "Screenshot" dialog.

To adjust the screenshot settings, tap the settings icon.

See also Section 13.9, "Screenshots", on page 529.

Remote command:
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:SCReenshot on page 1345

Trigger out pulse
Selects, if a pulse is provided to the [Trigger Out] connector on the rear panel. The trigger-out signal is used to synchronize the measurements of other instruments.

A trigger out pulse can be provided either when a trigger occurs, or when a mask test violation occurs, or when a limit check violation in a measurement occurs.

To adjust the outgoing signal, tap the settings icon. See "Settings for the trigger out pulse" on page 206.

Remote command:
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:WFMS on page 1346

11 Spectrum analysis


The MXO 5 provides an easy way to set up a spectrum analysis. The spectrum settings are independent of the time domain settings but the time and frequency domains are time-correlated.

You can analyze spectrum traces in various ways:

- Use peak lists.
- Use zoom.
- Perform cursor measurements.
- Export the spectrum data to files.
- Retrieve and transmit spectrum data for further analysis using remote commands.

11.1 Fundamentals of spectrum analysis

During spectrum analysis, a signal in the time domain is converted to a spectrum of frequencies. As a result, either the magnitude or the phase of the determined frequencies can be displayed. Spectrum analysis can be restricted to an extract of the original time base, and the results display can be restricted to a specified frequency range.

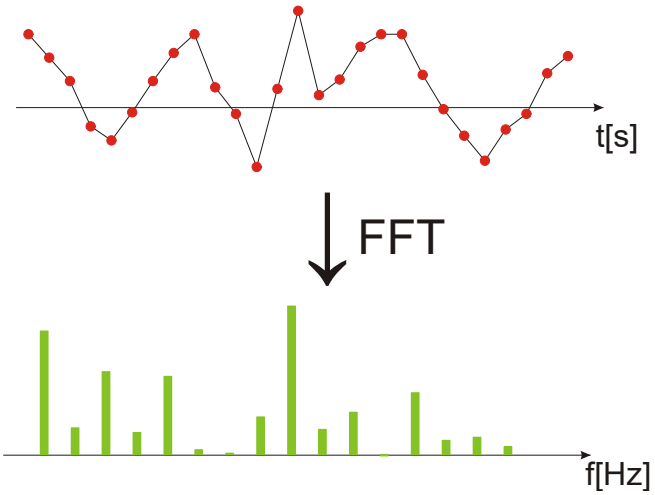


Frames in FFT

By default, one FFT per acqusition is calculated. The MXO 5 can calculate multiple FFTs per acquisition by dividing one record length into several *frames*. Thus, the MXO 5 can visualize how the frequency content of a signal changes over time which helps to detect intermittent or sporadic signal details. Furthermore, the MXO 5 allows consecutive frames to overlap. This is especially useful in conjunction with window functions since it enables a gap-free frequency analysis of the signal.

The overlapping factor can be set freely. The higher the overlap factor, the more frames are used. This leads to more individual results and improves detection of transient signal effects. However, it also extends the duration of the calculation. The

size of the frame depends on the number of input signal values (record length), the overlap factor, and the number of samples used for FFT calculation.

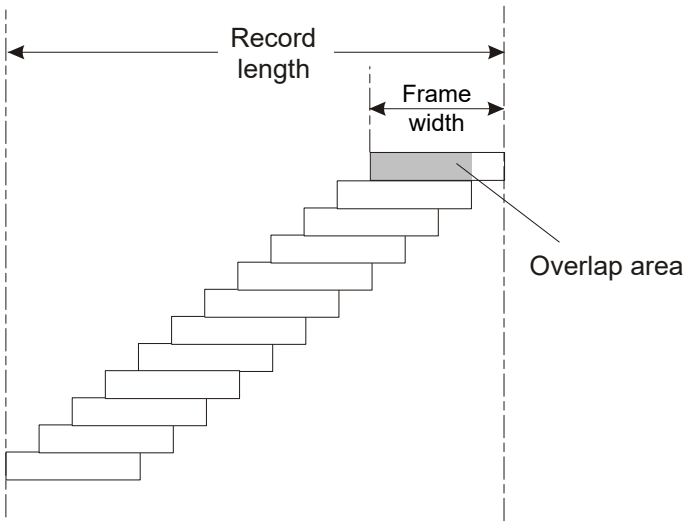

Window functions


Each frame is multiplied with a specific window function after sampling in the time domain. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

There are several window functions that can be used in FFT analysis. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

For details, see "Window type" on page 347.

Gating functions

You can restrict the time base of the input signal for which spectrum analysis is to be performed. You can define start and stop times for the time base extract.

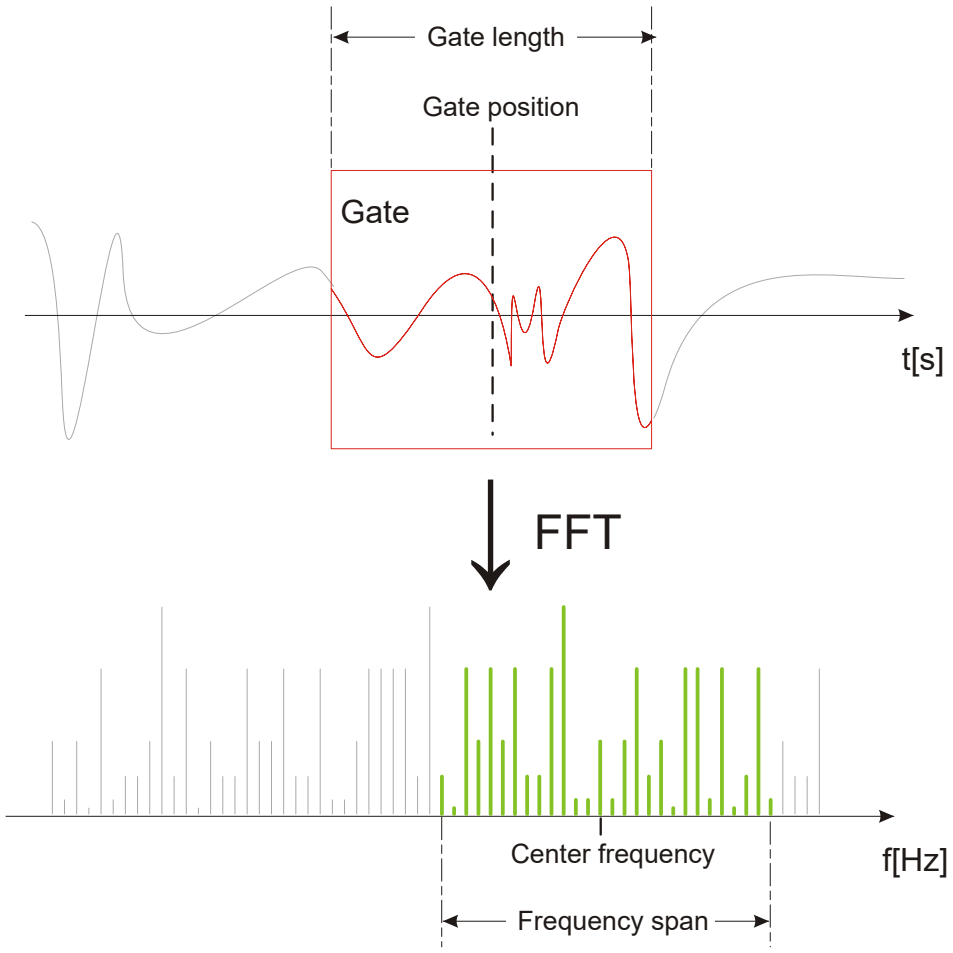

Restricting the result range

You can restrict the results of the spectrum analysis to a specified frequency range. The frequency range can be defined in two ways:

- Define a center frequency and frequency span
- Define start and stop frequencies

Dependencies between spectrum parameters

Spectrum analysis in the MXO 5 is highly configurable. Several parameters, including the resolution bandwidth, frequency span and center frequency, can be defined according to your requirements. Note, however, that several parameters are correlated and not all can be configured independently of the others.

The **resolution bandwidth** defines the minimum frequency separation at which the individual components of a spectrum can be distinguished. Small values result in high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase measurement speed.

The minimum achievable RBW depends on the integration time which is equivalent to the number of samples available for calculation. If a higher spectral resolution is

required, the number of samples must be increased by using a higher sample rate or longer record length. To simplify operation, some parameters are coupled and automatically calculated, such as record length and RBW.

The **frequency span** and **center frequency** define the start and stop frequency of the spectral diagram. By default, a suitable frequency range according to the resolution bandwidth is selected, in respect to performance and precision. Span and RBW settings are coupled, so that the parameters can be adjusted automatically as necessary.

With a **Span/RBW ratio** of 100 and a screen resolution of 1000 pixels, each frequency in the spectrum is displayed by 10 pixels. A span/RBW ratio of 1000 provides the highest resolution. For full flexibility, the span/RBW coupling can also be disabled. Note, however, that a higher span/RBW ratio (i.e. low RBW values and large frequency spans) result in large amounts of data and extend the duration of the calculation.

11.2 Configuring spectrum waveforms

During spectrum analysis, a signal in the time domain is converted to a spectrum of frequencies. A basic spectrum waveform can be displayed quickly. By defining additional parameters, the waveform can be configured in more detail.


To display a basic spectrum waveform

1. Press the [FFT] key.

   The "Setup" tab of the "Spectrum" dialog box opens.

2. Set the "Source" to the input signal.

3. Enable "Display".

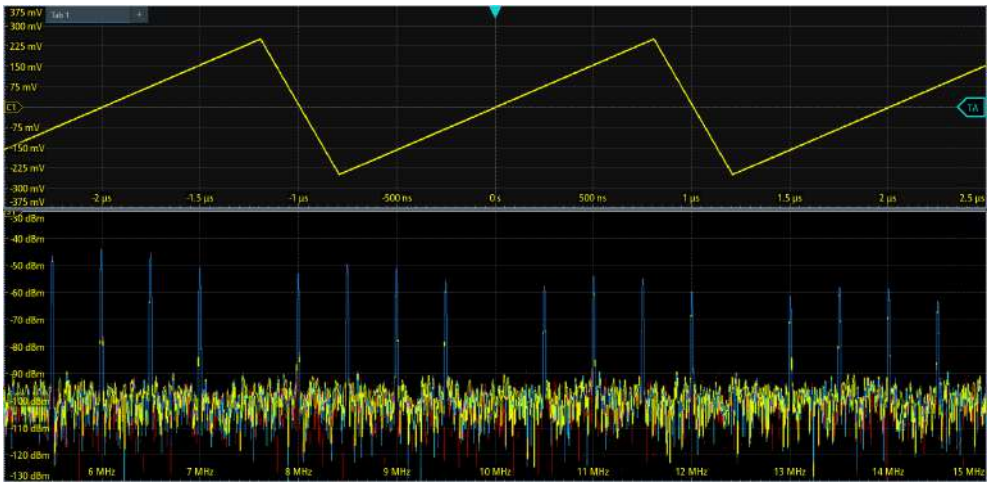

4. If necessary, edit the spectrum waveform parameters as described in the following procedures.

To configure the spectrum

By default, a suitable frequency range for the expected horizontal values according to the resolution bandwidth is selected, in respect to performance and precision. Span and RBW settings are coupled. If a more precise evaluation is required, for example for postprocessing in a different application, disable the coupling and change the frequency ranges and resolution bandwidth values as required.

1. Press the [FFT] key.

   The "Setup" tab of the "Spectrum" dialog box opens.

2. In the "Setup" tab, specify the frequency range you want to display using one of the following methods:
   - Select "CF span". Enter a "Center" and a "Span" that define the spectrum.
   - Select "Start Stop". Enter a "Start" and "Stop" frequencies that define the spectrum.
   - Tap the "Full span" button to display the complete spectrum resulting from the FFT analysis.

3. Define the resolution bandwidth for the spectrum result.
   The resolution bandwidth defines how precise the results are, i.e. how close together the individual frequencies can be. Small values result in high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase performance.

   You can define the RBW manually, or couple it to other settings. Do one of the following:
   - To couple the RBW to the span, enable "Auto RBW". Define the "Span/RBW" ratio, the smaller the ratio, the higher the RBW becomes to display the same frequency span.
   - Disable "Auto RBW". Enter the "RBW" manually.

4. Tap "Advanced".

5. Select the most suitable "Window type" for your source data. Window functions are multiplied with the input values and thus can improve the spectrum display. For details, see "Window type" on page 347.

To restrict the input values (gating)

You can restrict the time range for which the FFT is calculated, resulting in a restricted spectrum.

1. Open "Menu" > "Spectrum" > "Gate" tab.


2. Enter the "Start" and the "Stop" times that define the gate area.

3. Set the "Position" and the "Width".

   The spectrum waveform displays the spectrum for the specified time span.

11.3 Spectrum setup

Access: "Menu" > "Spectrum" > "Setup" tab.

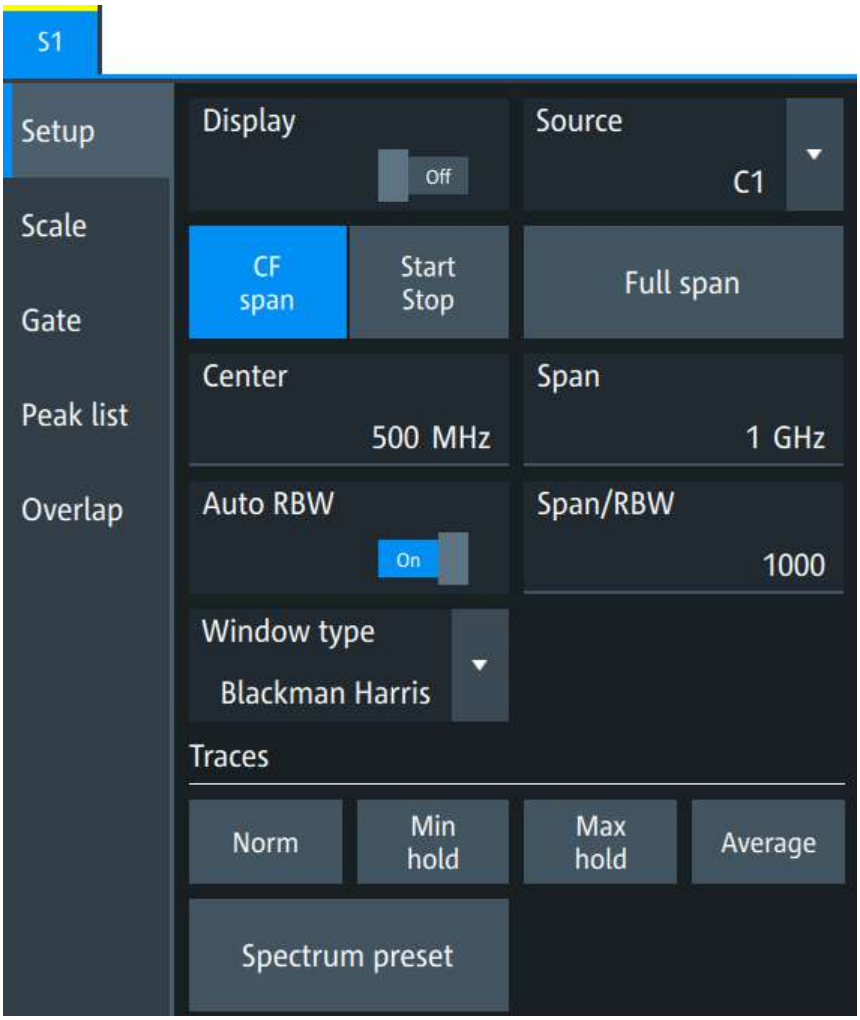

In this tab, you define the settings for the spectrum window. The display can be restricted to the results for a certain time base extract and to a specified frequency range.

The settings in this dialog are greyed out and cannot be changed, if "Coupling" is enabled in the "Scale" tab.

Display
Enables the spectrum.

Remote command:
`CALCulate:SPECtrum<sp>:STATe` on page 1368

Source
Selects the source for the spectrum.

Remote command:
CALCulate:SPECtrum<sp>:SOURce on page 1367

Full span
Displays the full frequency span.

CF span, Start Stop
Selects if the frequency span is defined through a "Center"/"Span" pair or through the "Start"/"Stop".

Center
Defines the position of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The width of the range is defined using the frequency span setting.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:CENTer on page 1363

Span
The span is specified in Hertz and defines the width of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The position of the span is defined using the "Center" setting.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:SPAN on page 1364

Start
Defines the start frequency of the displayed frequency span.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:STARt on page 1364

Stop
Sets the stop frequency of the displayed frequency span.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:STOP on page 1365

Auto RBW
Couples the frequency span to the "RBW" setting.

If span and RBW values are coupled, changing the span also changes the RBW.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO on page 1362

Span/RBW
Defines the coupling ratio for Span/RBW.

This setting is only available if "Auto RBW" is enabled.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio on page 1363

RBW
Defines the resolution bandwidth. Note that the resolution bandwidth is correlated with the span, record length and acquisition time. If a constant record length is to be used, the RBW can be adapted if the required number of samples cannot be acquired.

Remote command:
`CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue]` on page 1363

Window type
Selects the window type. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the MXO 5 to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully, to find the optimum solution for the measurement task.

Window type	Frequency resolution	Magnitude resolution	Measurement recommendation
Rectangular	Best	Worst	Separation of two tones with almost equal amplitudes and a small frequency distance
Hamming Hann	Good	Poor	Frequency response measurements, sine waves, periodic signals and narrow-band noise
Blackman Harris (default)	Good	Good	Mainly for signals with single frequencies to detect harmonics Accurate single-tone measurements Best compromise of frequency and magnitude resolutions
Gaussian	Good	Good	Weak signals and short duration
Flattop2	Poor	Best	Accurate single-tone measurements
Kaiser Bessel	Poor	Good	Separation of two tones with differing amplitudes and a small frequency distance

Remote command:
`CALCulate:SPECtrum<sp>:FREQuency:WINDow:TYPE` on page 1365

Traces
Spectrum analysis can only be performed on a maximum number of values at once. If more values must be calculated, the input signal is divided into segments, each of which is calculated separately. The segments need not to be disjunct. In this case, the arithmetic mode defines how the final result is calculated from the individual results.

The following methods are available:

"Norm" The data of only one segment is considered. In effect, no arithmetics are processed.

"Min hold" Determines the minimum result for each input value from the data of the current acquisition and the acquisitions before.

"Max hold" Determines the maximum result for each input value from the data of the current acquisition and the acquisitions before.

"Average" The average is calculated over the number of segments set with "Average count".


Remote command:
CALCulate:SPECtrum<sp>:WAVeform:AVERage:ENABle on page 1369
CALCulate:SPECtrum<sp>:WAVeform:AVERage:COUNt on page 1369
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:ENABle on page 1369
CALCulate:SPECtrum<sp>:WAVeform:MINimum:ENABle on page 1369
CALCulate:SPECtrum<sp>:WAVeform:NORMal[:ENABle] on page 1370

Spectrum preset
Presets the spectrum measurement.

Remote command:
CALCulate:SPECtrum<sp>:PRESet on page 1367

11.4 Spectrum scale

Access: "Menu" > "Spectrum" > "Scale".

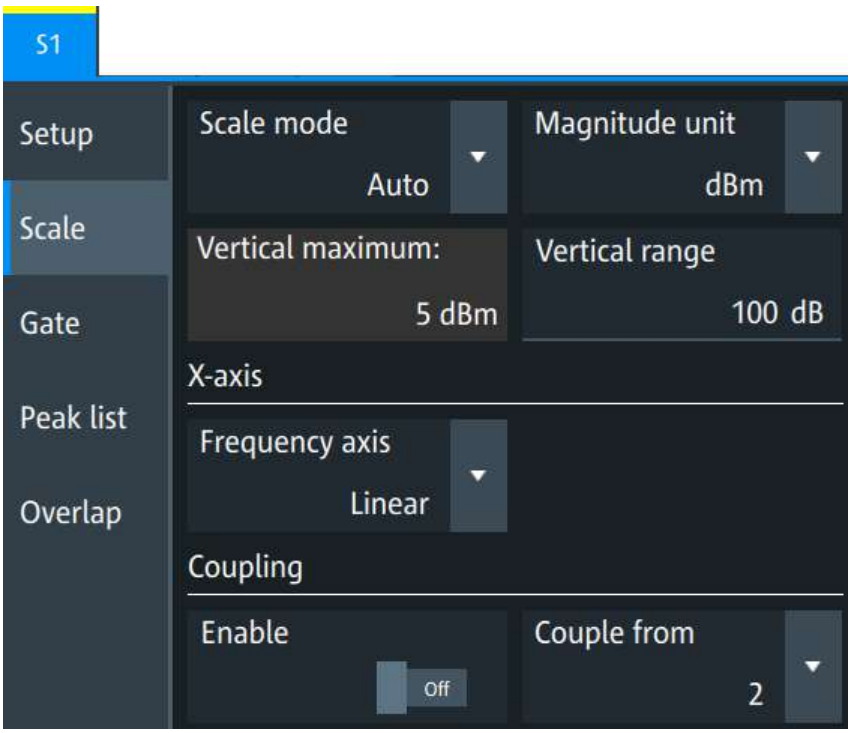

Scale mode
By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Note: When you change the scaling values manually using the [Scale] rotary knob, the scale mode is set to "Manual" temporarily.

"Manual" Enter the required values for "Vertical maximum" and "Vertical range".

"Auto" "Vertical maximum" is read-only.

Remote command:
`CALCulate:SPECtrum<sp>:COUPling:MODE` on page 1361

Magnitude unit
Sets the unit for the y-axis.

The display values are calculated for the termination impedance that is set in "Vertical" > "Other" tab > "Impedance".

Remote command:
`CALCulate:SPECtrum<sp>:MAGNitude:SCALe` on page 1366

Vertical maximum
Sets the maximum displayed value on the vertical scale.

Remote command:
`CALCulate:SPECtrum<sp>:MAGNitude:LEVel` on page 1366

Vertical range
Sets the range of the spectrum values to be displayed.

Remote command:
`CALCulate:SPECtrum<sp>:MAGNitude:RANGe` on page 1366

Frequency axis
Defines the scaling method for the frequency axis (x-axis) of the spectrogram.

Available are logarithmic and linear scaling.


Remote command:
`CALCulate:SPECtrum<sp>:FREQuency:SCALe` on page 1364

Coupling: Enable, Couple from
If the coupling is enabled, the settings of the selected "Couple from" spectrum are used in the "Setup" of the current spectrum. Enable "Enable", then select "Couple from".

Remote command:
`CALCulate:SPECtrum<sp>:COUPling[:ENABle]` on page 1361
`CALCulate:SPECtrum<sp>:COUPling:FROM` on page 1361

11.5 Spectrum gate

Access: "Menu" > "Spectrum" > "Gate"

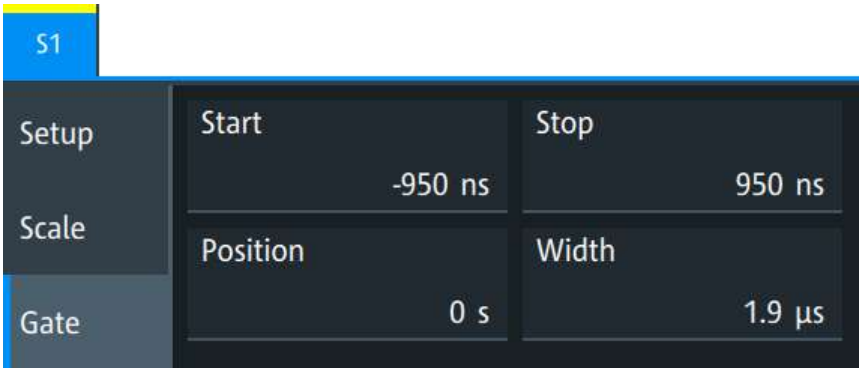

Spectrum gating restricts the spectrum analysis to a user-defined region of the captured time domain signal.

Start
Sets the starting value for the gate.

Remote command:
`CALCulate:SPECtrum<sp>:GATE:STARt` on page 1370

Stop
Sets the end value for the gate.

Remote command:
`CALCulate:SPECtrum<sp>:GATE:STOP` on page 1371

Position
Sets the position of the displayed frequency range.

The width of the gate is defined using the "Width" setting.

Remote command:
`CALCulate:SPECtrum<sp>:GATE:POSition` on page 1370

Width
Defines the width of the displayed gate.


The position of the span is defined using the "Position" setting.

Remote command:
`CALCulate:SPECtrum<sp>:GATE:WIDTh` on page 1371

11.6 Spectrum peak list


A peak list measurement detects all peaks above a user-definable threshold and optionally indicates the peaks in the spectrum diagram.

Access: "Menu" > "Spectrum" > "Peak list".

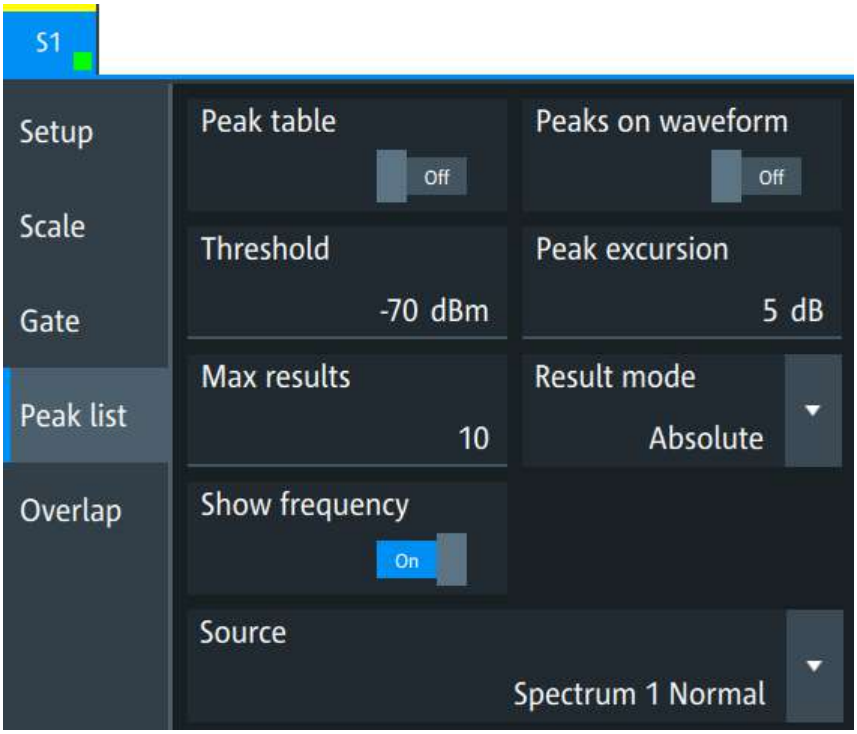

In the peak list dialog, you can define various criteria for a peak search. The peaks can be indicated in the frequency diagram by peak boxes, and the measured peak frequencies and magnitudes are listed in the peak list table.

The number of determined peaks can be defined. You can sort the results by frequency or power value, and the peak labels are adjusted accordingly.

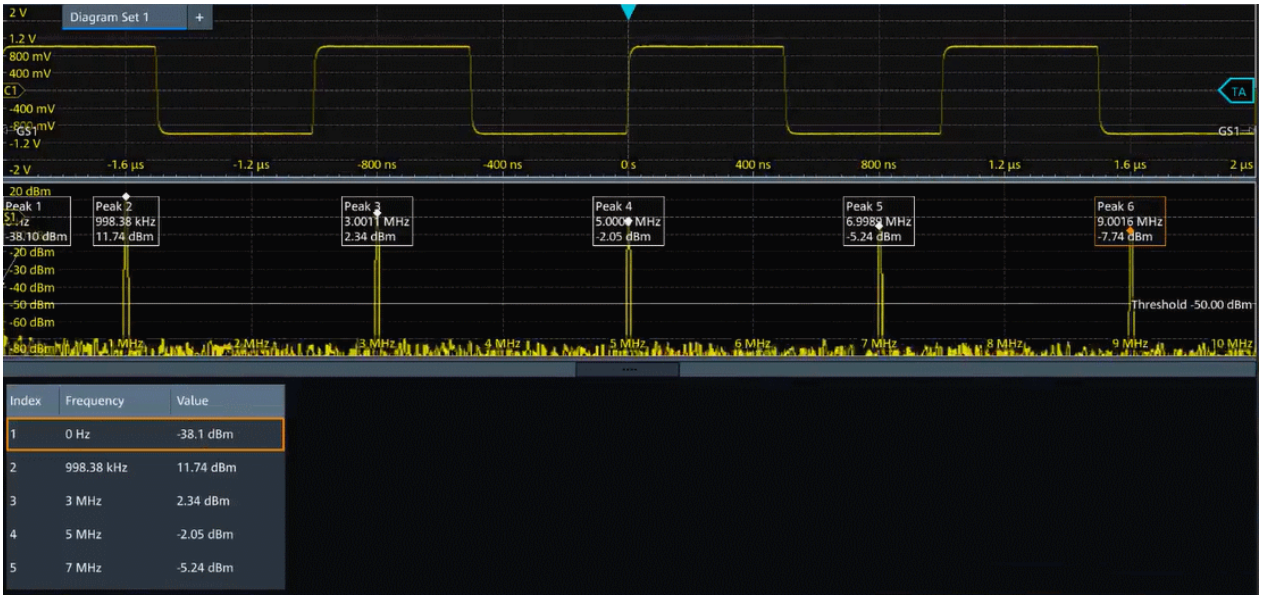

Also, you can adjust some of the display settings, see Section 5.3.6, "Peak list", on page 108.

To analyze the peaks in a spectrum, you can use cursors on the spectrum waveform and peak search functions. For details, see Section 10.1.3.3, "Peak search tab", on page 281.

The results in the peak table can be saved to file. See Section 13.8, "Results", on page 527.

Remote commands query peak results and to change the results display:



- `CALCulate:SPECtrum<sp>:PLISt:RESult[:VALue]?` on page 1373
- `CALCulate:SPECtrum<sp>:PLISt:SORT:COLumn` on page 1374
- `CALCulate:SPECtrum<sp>:PLISt:SORT:ORDer` on page 1374
- `CALCulate:SPECtrum<sp>:PLISt:LABel:INVert` on page 1375

Peak table
Enables the display of the peak table.

Remote command:
`CALCulate:SPECtrum<sp>:PLISt[:STATe]` on page 1372

Peak on waveform
Displays a box with a description for each detected peak in the spectrum, including the magnitude. If "Show frequency" is enabled, the frequency values are also displayed.

If this option is disabled, the peaks are marked on the diagram only with a point marker.

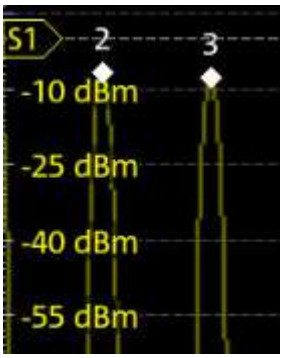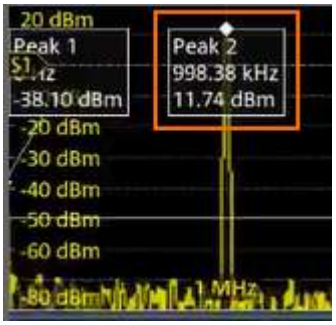"Peak on waveform" > "Off"	"Peak on waveform" > "On"
	

Remote command:
`CALCulate:SPECtrum<sp>:PLISt:SPOW` on page 1373

Threshold
Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.


Remote command:
`CALCulate:SPECtrum<sp>:THReshold` on page 1368

Peak excursion
Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Example:

In the figure below, 2 peaks are shown, that rise above the defined "Threshold". Peak 1 fulfills the defined "Peak excursion" value and is counted as a peak. Peak 2 does not fulfill the defined "Peak excursion" value on the right and is not counted as a peak.

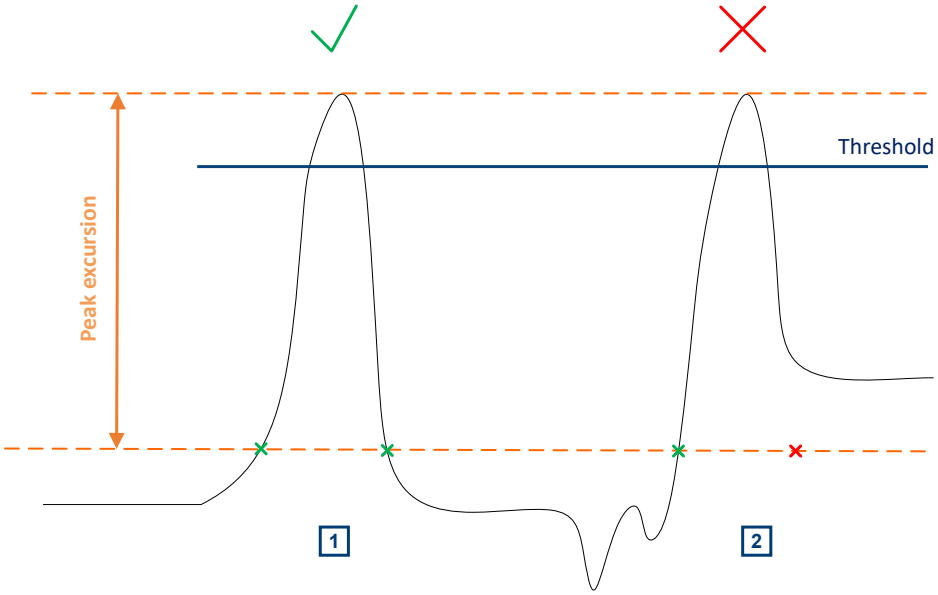

Remote command:
`CALCulate:SPECtrum<sp>:PEXCursion` on page 1368
`CURSor<cu>:PEXCursion` on page 1359

Max results
Sets the maximum number of measurement results that are listed in the result table.

Remote command:
`CALCulate:SPECtrum<sp>:PLISt:MAXCount` on page 1372

Result mode
Selects how the measurement results are displayed.

"Absolute" The peaks are shown in absolute value, dBm.

"Relative" The level of the carrier is shown in absolute value dBm. The values of the peaks are shown relatively to the carrier in dBc.

Remote command:
CALCulate:SPECtrum<sp>:PLISt:MODE on page 1372

Show frequency
Includes the frequency of the detected peak in the diagram labels.

Remote command:
CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe] on page 1374


Source
Selects the source of the peak table. You can select one of the traces that is enabled with Traces.

Remote command:
CALCulate:SPECtrum<sp>:PLISt:SOURce on page 1373

11.7 Spectrum overlap

Access: "Menu" > "Spectrum" > "Setup" tab.

For an description of the basic principles of FFt frames and overlapping, see "Frames in FFT" on page 340.

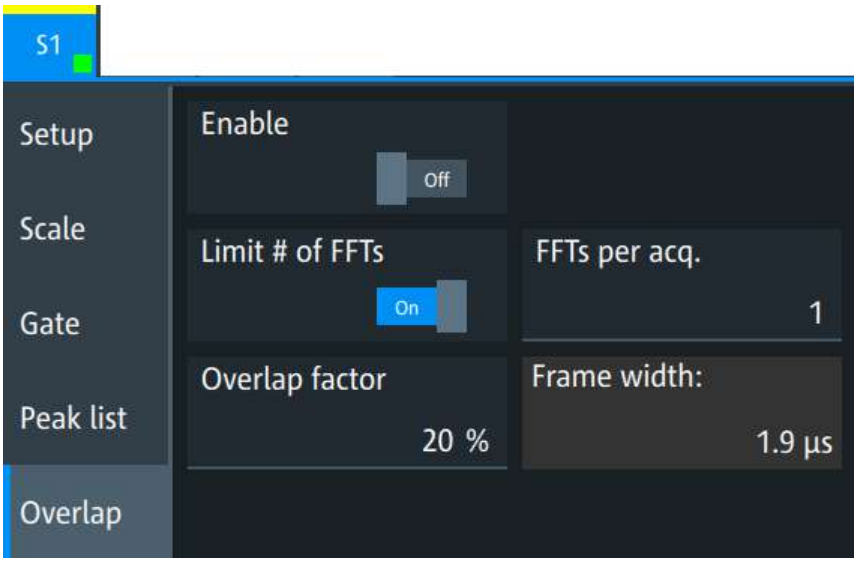

Enable
Activates the use of frames and overlap to create the FFT spectrum.

Remote command:
CALCulate:SPECtrum<sp>:OVERlap:ENABle on page 1376

Limit # of FFTs
Limits the number of FFTs that are done per acquisition.

If limitation is off, the firmware sets the number of FFTs automatically to the maximum number that fit in the width of the overview window. It is possible, that some data at the left and the right of the display does not fit in the frames. The gate is set automatically and cannot be changed.

If limitation is active, you can set the number of frames ("FFTs per acq." on page 355). You can change the gate, which changes the frame width, too.

Remote command:
`CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle` on page 1377

FFTs per acq.
Sets the number of frames to be used for FFT with active limitation. The frame width remains unchanged, and the resulting gate width is *frame width * FFTs per acqu*.

Remote command:
`CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue` on page 1377
`CALCulate:SPECtrum<sp>:OVERlap:FCOunt:ADJusted?` on page 1377

Overlap factor
Defines the minimum factor by which two neighboring frames overlap. Depending on the settings, the system adjusts the value upward.

The higher the overlap factor, the more frames are used. This leads to more detailed results and improves detection of transient signal effects. However, it also extends the duration of the calculation.

Remote command:
`CALCulate:SPECtrum<sp>:OVERlap:FACTor:VALue` on page 1376
`CALCulate:SPECtrum<sp>:OVERlap:FACTor:ADJusted?` on page 1376

Frame width
Shows the current frame width.

Increasing the RBW increases the frame width, and vice versa. With active limitation of the frame number, changing the gate results in adjustment of the frame width.

Remote command:
`CALCulate:SPECtrum<sp>:OVERlap:FWIDth?` on page 1378

12 Applications

All available applications are provided in the "Apps" dialog.

► To open an application, press the [Apps] key.

Some applications are described in other sections. See:

- Section 9.4, "Reference waveforms", on page 257
- Section 9.5, "Waveform histograms", on page 266
- Section 16, "Waveform generator (option R&S MXO5-B6)", on page 1026
- Section 13.10, "File browser dialog", on page 534
- Section 14, "Protocol analysis", on page 536
- "Add scope": Section 17.2, "ScopeSync", on page 1045

Also the "Demo" is available in the "Apps" dialog. It is for demonstration purposes of the functionalities of MXO 5.

12.1 Mask testing

12.1.1 About mask testing

Masks are used to determine whether the signal remains within specified limits, e.g. to uncover signal anomalies or test compliance and stability of digital signals. The limits are specified as "mask", which is laid over the input signal in the display. Thus you can easily detect where the signal violates the mask.

Mask testing with MXO 5 is hardware accelerated. It is the industry's fastest mask test with hardly any impact on the acquisition rate, thus mask violations are detected fast and reliably.

With MXO 5, you can define your own masks easily. Specific actions can be executed when mask violations occur. For error analysis, you can stop the acquisition on a failed test and use the history to look at the previous waveforms.

Mask test

A mask test consists of:

- Mask definition.
- Waveform to be tested.
- Actions to be taken on violation or successful completion.

Mask definition

A mask can be created in several ways:

- The individual mask points are defined, either on the touchscreen or as numerical values. This mask type is called *polygon*. A polygon can have several segments.
  For details, see Section 12.1.3, "Mask definition: polygon", on page 361.
- The mask is derived from an existing waveform. This mask type is called *auto mask*.
  For details, see Section 12.1.4, "Mask definition: auto mask", on page 363.

Polygon masks

A polygon mask can have one or more segments. Each segment has a predefined shape: rectangle, square, diamond, hexagon or octagon. You can change the shape by moving the edge points on the screen or change the numerical values. You can also add and remove single edge points.

A mask segment can have only one range in y direction at a certain time point. If a shape is not valid, the invalid point is marked red, and an attention symbol is shown at the segment name.


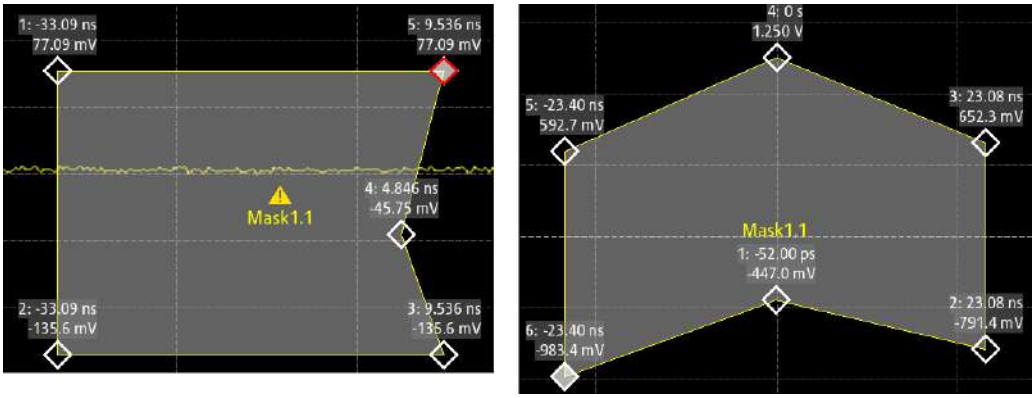


Figure 12-1: Invalid mask segment (left) and valid mask segment (right)

To check the validity in remote control, use `MTESt<m>:SEGMent<n>:VALid?` and `MTESt<m>:SEGMent<n>:POINt<o>:VALid?`.

12.1.1.1 Results of a mask test

A mask test shows the following test results:

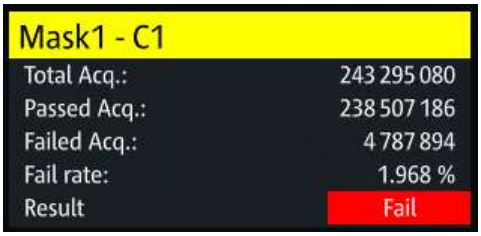

Total acq.
Number of tested acquisitions.

Remote command:
`MTESt<m>:RESult:COUNt:WAVeforms?` on page 1391

Passed acq.
Number of acquisitions that passed the test.

Remote command:
`MTESt<m>:RESult:COUNt:PWAVeforms?` on page 1391

Failed acq.
Number of failed acquisitions.

Remote command:
`MTESt<m>:RESult:COUNt:FWAVeforms?` on page 1391

Fail rate
Ratio of failed acquisitions to the number of tested acquisitions.


Remote command:
`MTESt<m>:RESult:FRATe?` on page 1391

Result
A test has failed if at least one acquisition violated the mask.

Remote command:
`MTESt<m>:RESult[:RESult]?` on page 1392

12.1.2 Mask test setup: general settings

Access: "Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab

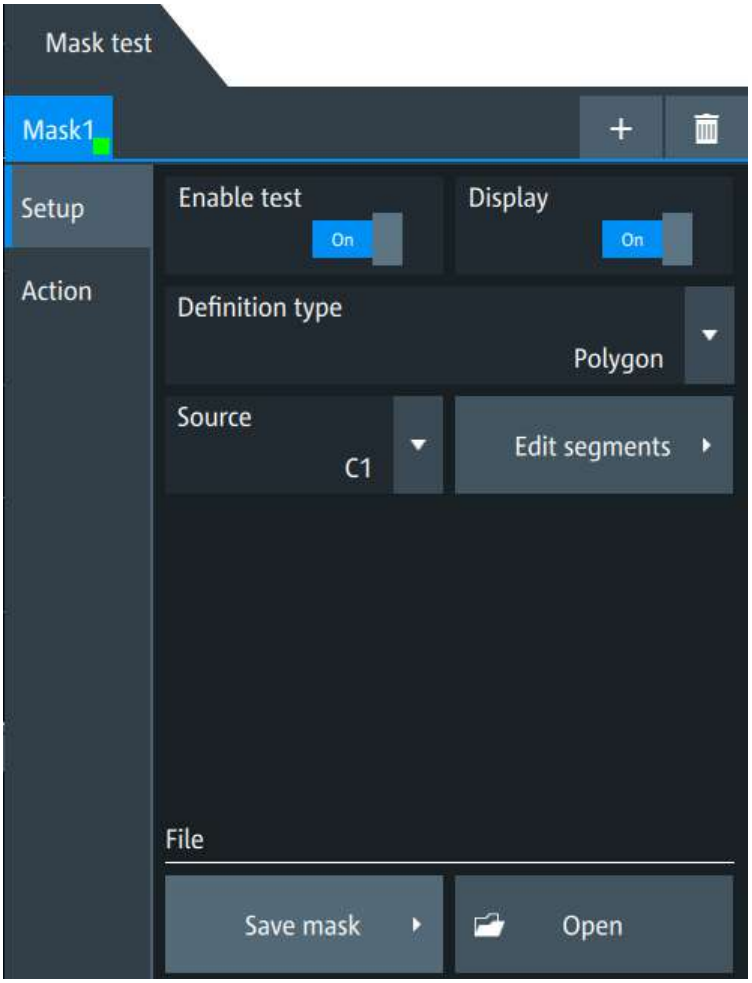

Add mask
Adds a mask test and opens the subtab to configure the new test.

Remote command:
`MTESt<m>:ADD` on page 1379

Enable test
Activates or deactivates the mask test.

If the acquisition is running, the test starts immediately. Otherwise, the test starts when acquisition is started. The testing is stopped when acquisition is stopped, or if a stop action is configured.

Remote command:
`MTESt<m>:STATe` on page 1381

Display
Displays all mask segments of the selected mask in the diagrams, or hides them.

Remote command:
`MTESt<m>:VISible` on page 1381

Definition type
Selects the mask type.

- Polygon: define mask segments by setting their corner points. See Section 12.1.3, "Mask definition: polygon", on page 361.
- Auto mask: define the mask based on an active waveform. See Section 12.1.4, "Mask definition: auto mask", on page 363.

In the power analysis application (option R&S MXO5-K31), the safe operating area (SOA) analysis sets the "Definition type" to SOA mask in the background.

"Edit segments" opens a dialog to define the mask with the selected mask type.

Remote command:
None, each mask type has its own commands for definition.

Source
Selects the waveform to be tested against the mask. For auto mask definition, it is also the waveform from which the mask is created.

All analog channel waveforms, math waveforms, XY-plots and norm traces of spectrums can be tested.

Remote command:
`MTESt<m>:SOURce` on page 1381

Edit segments
Opens a dialog to define the mask, depending on the selected "Definition type" on page 360.

Save mask
Opens a dialog to define the storage location and filename, and save the mask.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the mask file is always `.xml`.
"Save"	Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.
"Save As"	Opens a file explorer where you select the folder, the file type, enter the filename and save the file.


Remote command:
`MTESt<m>:IMEXport:NAME` on page 1380
`MTESt<m>:IMEXport:SAVE` on page 1380

Open
Opens a file explorer to select a previously stored mask file. The selected mask is loaded and used for test.

Remote command:
MTESt<m>:IMEXport:NAME on page 1380
MTESt<m>:IMEXport:OPEN on page 1380

12.1.3 Mask definition: polygon

"Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab > select "Definition type" = "Polygon" > "Edit segments"

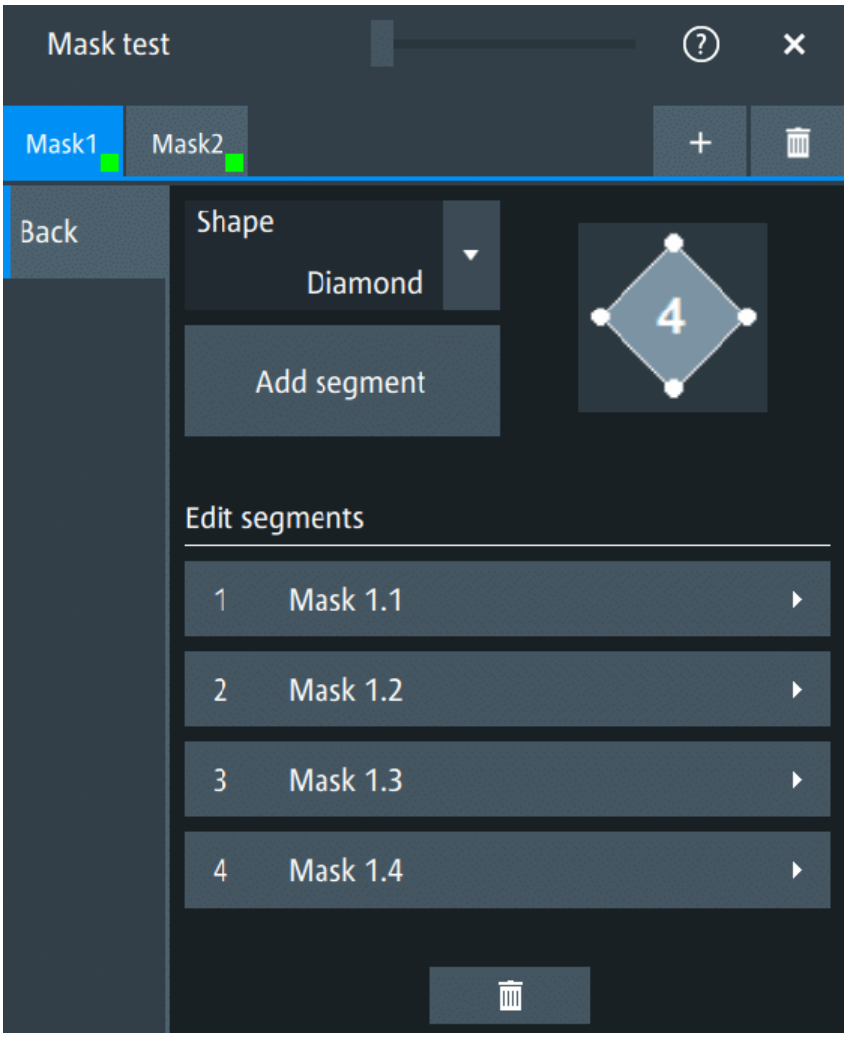


Shape
Selects the shape of the user-defined mask: rectangle, diamond, hexagon, octagon.

Add segment
Adds a new segment with the selected shape to the mask.

Remote command:
MTESt<m>:SEGMent<n>:ADD on page 1382

Edit segments
Dialog to edit the mask segment. For each segment, you define the coordinates of the corner points. You can add and remove points and define the shape as needed.

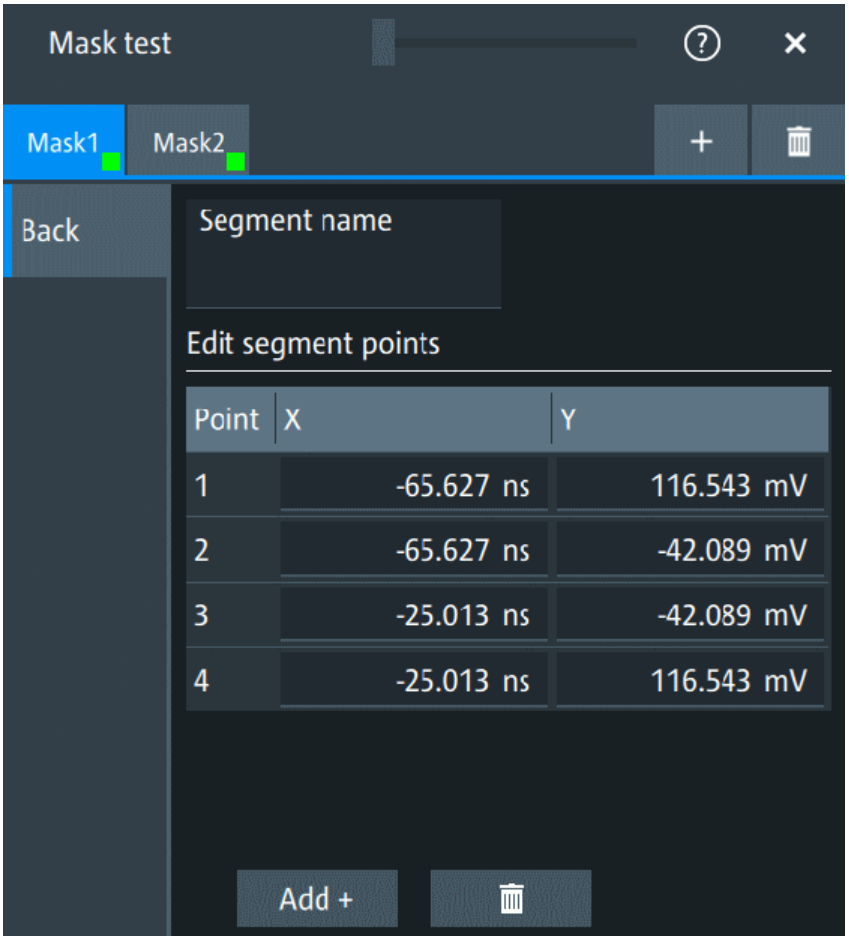

Point, X, Y ← Edit segments
The table shows the horizontal and vertical positions of the corner points. You can change each value.

Remote command:
`MTESt<m>:SEGMent<n>:POINt<o>:X` on page 1384
`MTESt<m>:SEGMent<n>:POINt<o>:Y` on page 1384

Add + ← Edit segments
Appends a new point to the segment. You cannot change the order of the points.

Remote command:
`MTESt<m>:SEGMent<n>:POINt<o>:ADD` on page 1383
`MTESt<m>:SEGMent<n>:POINt<o>:COUNt?` on page 1383

Segment name ← Edit segments
Enter a name for the selected mask segment.


Delete, Delete all
switches to the delete mode. You can delete single segments or single points by selecting the delete icon in the table row. You can also delete all segments or points with "Delete all". To leave the delete mode, tap the blue delete icon.

Remote command:
`MTESt<m>:SEGMent<n>:POINt<o>:REMove` on page 1383
`MTESt<m>:SEGMent<n>:REMove` on page 1385

12.1.4 Mask definition: auto mask

"Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab > select "Definition type" = "Auto mask" > "Edit segments"

An auto mask, also known as waveform mask, is created from an existing waveform. The waveform envelope builds the upper and lower limit line of the mask, and the limits are moved by a given value from the original waveform. The result is a tolerance tube around the waveform that is used as mask.

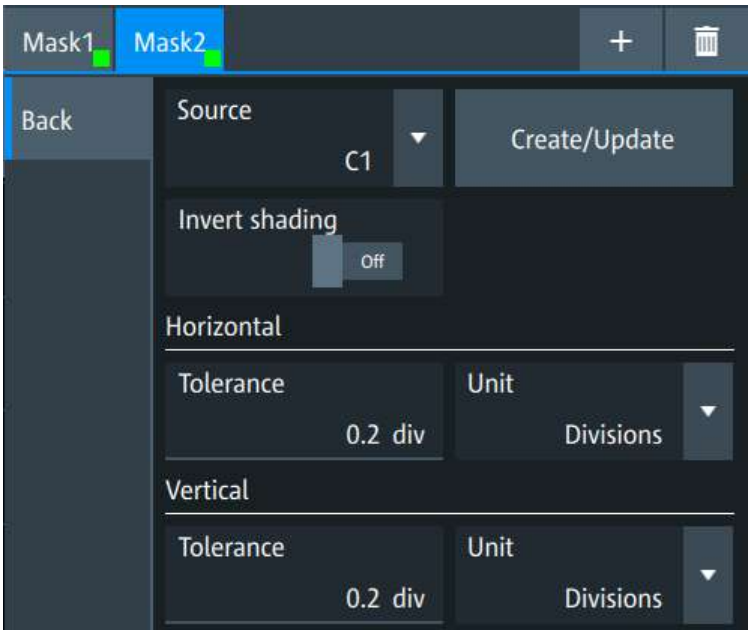

Source
See "Source" on page 360.

Create/Update
Creates or updates the upper and lower mask limit from the envelope of the selected "Source" waveform by copying the waveform data.

Remote command:
`MTESt<m>:AUTomask:UPDate` on page 1386

Invert shading
If enabled, the area inside the mask is highlighted. If disabled, the area outside the mask limits is highlighted.

Tolerance (Horizontal)
Sets the width of the mask in horizontal direction. The value is added to the left and the right of the x-values of the copied source waveform. The overall mask width is twice the specified horizontal tolerance. Depending on the selected "Unit" on page 364, you can enter the tolerance in divisions or in the unit of the waveform's x-axis.

Remote command:
`MTESt<m>:AUTomask:XTOLerance:DIVisions` on page 1386
`MTESt<m>:AUTomask:XTOLerance:PHYSical` on page 1386

Tolerance (Vertical)
Sets the height of the mask in vertical direction. The value is added to and subtracted from y-values of the copied source waveform. The overall mask height is twice the specified vertical tolerance. Depending on the selected "Unit" on page 364, you can enter the tolerance in divisions or in the unit of the waveform's y-axis.


Remote command:
`MTESt<m>:AUTomask:YTOLerance:DIVisions` on page 1387
`MTESt<m>:AUTomask:YTOLerance:PHYSical` on page 1387

Unit
Set the unit of the mask tolerance in horizontal and vertical direction: divisions or in the unit of the corresponding axis.

Remote command:
`MTESt<m>:AUTomask:XTUNit` on page 1387
`MTESt<m>:AUTomask:YTUNit` on page 1387

12.1.5 Actions on mask test results

Access: "Menu" > "Apps" > "General" tab > "Masks" > "Action" tab

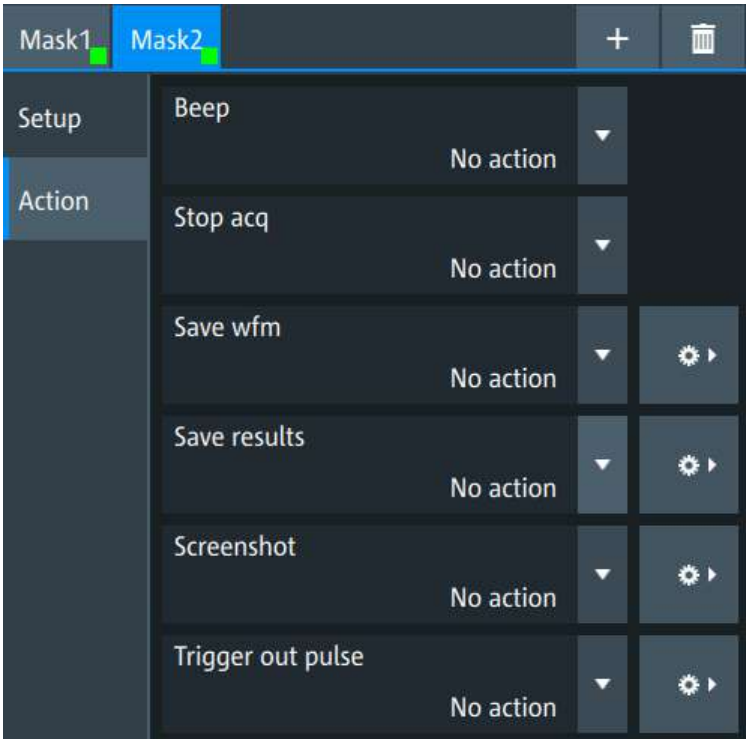

The action settings define what happens when an acquisition passes the mask test successfully, or when it hits the mask. All available actions can be initiated at the same time.

Beep
Generates a beep sound.

Remote command:
`MTESt<m>:ONViolation:BEEP` on page 1388
`POWer<m>:SOA:MTESt<n>:ONViolation:BEEP` on page 1470

Stop acq
Stops the acquisition on completion or violation.

Remote command:
`MTESt<m>:ONViolation:STOP` on page 1389
`POWer<m>:SOA:MTESt<n>:ONViolation:STOP` on page 1471

Save wfm
Saves the waveform data to a file according to the folder, filename and extension settings in the "Menu" > "Save/recall" > "Save" > "Waveform" dialog.

To select the waveforms and adjust the file path, tap the settings icon .

See also Section 13.4.2, "Saving waveforms", on page 506.

Remote command:
`MTESt<m>:ONViolation:WFMSave` on page 1390
`POWer<m>:SOA:MTESt<n>:ONViolation:WFMSave` on page 1472

Save results
Saves the results to a file according to the settings in "Menu" > "Save/recall" > "Save" > "Results".

To select the waveforms and adjust the file path, tap the settings icon.

See also Section 13.8, "Results", on page 527.

Remote command:
`MTESt<m>:ONViolation:SRESults` on page 1389

Screenshot
Saves a screenshot according to the settings in the "Menu" > "Save/recall" > "Save" > "Screenshot" dialog.

To adjust the screenshot settings, tap the settings icon.

See also Section 13.9, "Screenshots", on page 529.

Remote command:
`MTESt<m>:ONViolation:SCReenshot` on page 1389
`POWer<m>:SOA:MTESt<n>:ONViolation:SCReenshot` on page 1470

Trigger out pulse
Selects, if a pulse is provided to the [Trigger Out] connector on the rear panel. The trigger-out signal is used to synchronize the measurements of other instruments.

A trigger out pulse can be provided either when a trigger occurs, or when a mask test violation occurs, or when a limit check violation in a measurement occurs.

To adjust the outgoing signal, tap the settings icon. See "Settings for the trigger out pulse" on page 206.

Remote command:
`MTESt<m>:ONViolation:TRIGgerout` on page 1390
`POWer<m>:SOA:MTESt<n>:ONViolation:TRIGgerout` on page 1471

12.1.6 Working with masks

This section explains step by step how mask tests are configured. For the explanation of the individual settings, see Section 12.1.2, "Mask test setup: general settings", on page 358.

12.1.6.1 Working with masks using the toolbar

To create a polygon mask graphically using the toolbar

1. Select the "Add mask" icon on the toolbar. If the icon is not visible, configure the toolbar as described in Section 4.4.2, "Configuring the toolbar", on page 67.



2. In the "Add mask" overlay menu, select the "Definition type" of the mask: "Polygon".



3. In the overlay menu, select the channel that you want to test against the mask.
4. In the overlay menu, the "Add mask" function is selected. Draw the diagonal of the rectangle on the screen.
5. Now, the "Add segment" function is selected in the overlay menu. Draw another segment on the screen.
6. If you need another mask, select "Add mask". Draw the first segment of the new mask.
7. To finish the mask definition, close the overlay menu.

   The mask test is enabled by default. If the acquisition is running, the mask test starts automatically and immediately. Otherwise, start the acquisition to start the test.

To modify a polygon mask using the toolbar

You already have created a mask and want to change its shape and add segments.

1. Select the mask segment in the diagram.


   The segment is marked and the overlay menu opens. One of the points is selected by default, and its coordinates are shown.



2. In the diagram, you can change the shape of the mask segment:
   - To move the segment, tap in the segment, hold and move it.
   - To move an edge, tap and hold the edge and move it.
   - To move a point, tap and hold the point and move it.
3. The overlay menu provides more functions.
   To add a point to the selected segment:

   a) Select "Add point" in the overlay menu.
   b) Tap outside the segment, hold and move the point to the required position.
4. To delete a segment or point:

a) Select "Delete" in the overlay menu.

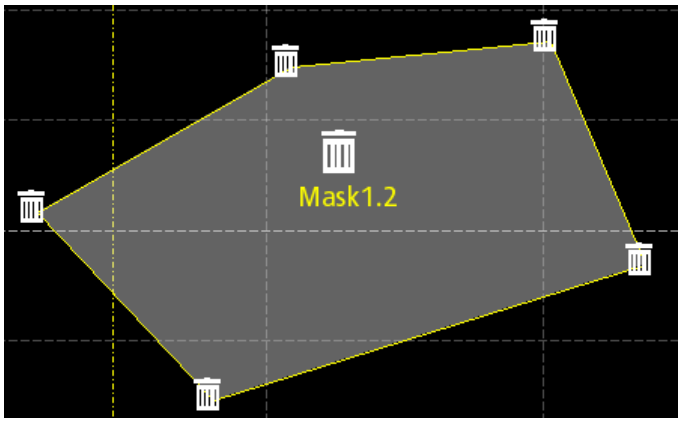

b) To delete a point, tap its delete icon.
c) To delete the segment, tap the "Delete" icon inside the segment.

5. To enter the exact coordinates of a point:
   a) Select the mask segment and the point in the diagram.
   b) In the overlay menu, change the X- and Y-values.
6. To change the waveform to be tested, select "Source" in the overlay menu.

To create an auto mask using the toolbar

1. Select the "Add mask" icon on the toolbar. If the icon is not visible, configure the toolbar as described in Section 4.4.2, "Configuring the toolbar", on page 67.



2. In the "Add mask" overlay menu, select the "Definition type" of the mask: "Auto mask".
3. In the overlay menu, select the channel that you want to use for mask definition.
4. In the overlay menu, select "Copy".

   The mask is created with default settings, and the selected source is tested against the mask immediately.
5. To change the mask tube, select "Setup" in the overlay menu.

12.1.6.2 Working with masks using the dialog

1. Open the "Mask test" dialog: "Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab.
   If there is already at least one defined mask, tap its result table to open the dialog.
2. Select "Delete mask" to create the first mask. To create more masks, use the + icon.

3. Select the "Source", the waveform to be tested.
4. Select "Edit segments".
5. Select the "Shape" of the new segment.
6. Select "Add segment".

   The new segment is listed in the dialog and shown in the diagram.
7. Under "Edit segments", select the segment.
8. Change the X- and Y-values as needed.
9. To name the segment, select "Segment name". Enter the name.
10. To add more points, use "Add +".
11. To delete points:
    a) Select .
    b) To delete one point, select the delete icon in its table row.
    c) To delete all points, select "Delete all"
    d) To leave the delete mode, tap the blue delete icon.
12. Select "Back" twice to finish the segment setup.
13. In the "Setup" tab, enable the test if it is off.
14. If the acquisition is running, the mask test starts automatically and immediately. Otherwise, start the acquisition to start the test.

12.1.6.3 Setting up a mask test

In addition to the mask definition, you can define the actions to be taken if a test has failed or completed successfully.

1. Open the "Mask test" dialog: "Menu" > "Apps" > "General" tab > "Masks".
2. Select the "Action" tab.
3. For each action, select when the action will be executed:
   - No action
   - On successful completion
   - On violation of the mask
4. For the actions "Save wfm" and "Trigger out pulse", tap the icon and configure the settings.

12.1.6.4 Running a mask test

You can perform continuous testing with "Run / stop" or test a specified number of acquisitions with "Run single". If the test is enabled in the "Setup" tab, the test starts when the acquisition starts. The test runs until the acquisition is stopped.

12.1.6.5 Saving and loading masks

Mask definitions are remained until they are changed or deleted, or a preset is performed. If you want to keep a mask definition, you can save and reload it.

To save a mask

1. Open "Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab.
2. Select "Save mask".
3. Select "Save as".
4. In the file browser, select the directory and enter the filename. The format of the mask file is always `.xml`.
5. Select "Save". If the specified file already exists, it is overwritten with the new data.

To load a mask

1. In the "Masks" >"Setup" tab, select "Open".
2. In the file browser, select the mask file.
3. Select "Open".

12.1.6.6 Mask testing on history waveforms

In the same way as for running acquisitions, you can set up and perform the mask testing on history waveforms.

1. Perform and finish the acquisition.
2. Define the mask, and enable the test. See Section 12.1.6.1, "Working with masks using the toolbar", on page 366 and Section 12.1.6.2, "Working with masks using the dialog", on page 368.
3. Set up the test actions. See Section 12.1.6.3, "Setting up a mask test", on page 369.
4. Select "Menu" > "Acquisition" > "History".
5. Activate "Show history".
6. Select  "Play".

12.2 Frequency response and impedance analyses (options R&S MXO5-K36/K337)

Frequency response analysis

The frequency response analysis (FRA) option lets you perform low-frequency response analysis on your oscilloscope. It characterizes the frequency response of various electronic devices, including passive filters and amplifier circuits. For switching power supplies, it measures the control loop response (CLR) and power supply rejection ratio (PSRR).

For more basic information, see Understanding Bode plots.

Impedance analysis

With the impedance analysis option, you can measure the impedance of, for example, power distribution networks (PDN) over frequency. The analysis helps to improve the power integrity, reduce EMI, characterize components, and much more.

General notes for both options

Both options use the oscilloscope's built-in waveform generator (option R&S MXO5-B6) to create stimulus signals ranging from 10 mHz to 100 MHz. The stimulus signal and the output signal of the DUT are measured at each test frequency. The oscilloscope calculates the gain, phase and impedance and plots the resulting curves in the plot diagram (Bode plot).

Seeing both time and frequency domain signals in parallel, you can monitor if the injected signal causes distortion that leads to errors in the measurement.

The setup of both options is very similar. They use the same measurement mode and dialog. Most settings are common for both options. Restrictions to one of the options are mentioned in the descriptions.

12.2.1 Results and plot of analysis

FRA window

The FRA window has several sections. They are mainly the same for frequency response analysis and impedance analysis. Frequency response analysis delivers the results for gain and phase, and impedance analysis the impedance. Margin values are only available for frequency response analysis.



Figure 12-2: Display of frequency response analysis

1 = Toolbar
2 = Progress bar
3 = Plot results table
4 = Marker value table
5 = Margin value table
6 = Exit application
7 = Inactive waveforms
8 = Active waveforms and plots
9 = Controls
10 = Plot diagram, gain: blue color; phase: red color; amplitude: green color; reference: white color
11 = Channel diagram



Figure 12-3: Display of impedance analysis (shunt through measurement): same sections as for frequency response analysis, except for margin value table

12.2.1.1 Progress bar

Displays the current status of the measurement: how many points have already been displayed and the total set number of points.

12.2.1.2 Plot diagram


The FRA plot diagram has the frequency presented on the x-axis. The gain or impedance (blue color waveform in the image) and phase (red color waveform) scales are on the y-axis. The gain plot represents the ratio between input and output. The phase plot shows the phase shift between input and output.

For better visibility and distinguishability, FRA waveforms and their reference waveforms have their own color category in "Settings" > "Appearance" > "Colors" > "Category". You can change the color assignment and assign another color or a color table to FRA waveforms. See Section 5.3.1, "Colors", on page 100 for details.

12.2.1.3 Plot results table

In the plot results table for frequency response analysis, all sample points are displayed with their values for the frequency, gain, phase and amplitude. The plot results table for impedance analysis lists the sample points with frequncy, impedance and amplitude values.

If you select a sample in the table, the respective points in the FRA plot are highlighted by a white vertical helper line on the gain and the phase curve.

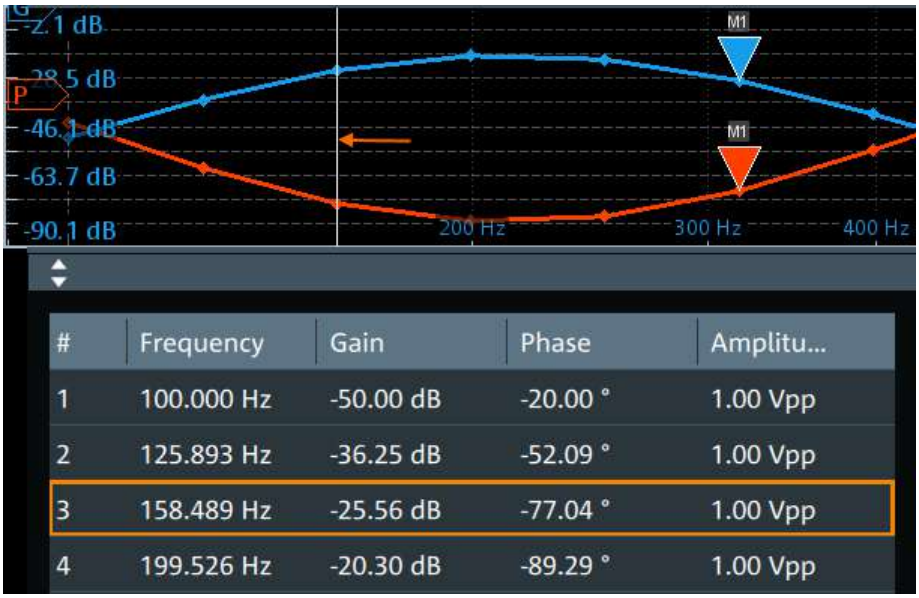

#	Frequency	Gain	Phase	Amplitu...
1	100.000 Hz	-50.00 dB	-20.00 °	1.00 Vpp
2	125.893 Hz	-36.25 dB	-52.09 °	1.00 Vpp
3	158.489 Hz	-25.56 dB	-77.04 °	1.00 Vpp
4	199.526 Hz	-20.30 dB	-89.29 °	1.00 Vpp

12.2.1.4 Marker value table

There are two markers available for the plot, which visualize the points of the margin measurement in frequency response analysis. They are highlighted on the plot diagram by a white line and the marker number 1 or 2. You can move the markers as needed.

In the marker table you can see the frequency, phase and gain (or impedance) values for both markers.

Remote commands:

- `FRANalysis:MARKer<m>:FREQuency` on page 1408
- `FRANalysis:MARKer<m>:GAIN?` on page 1409
- `FRANalysis:MARKer<m>:PHASe?` on page 1409

12.2.1.5 Margin value table

The margin value displays the values of gain margin and the phase margin and their frequencies. Higher margin values are an indicator for higher stability of the system.

- Gain margin is measured at the frequency where the phase shift equals -180°. Gain margin indicates the distance from the measured gain to a gain of 0 dB.
- Phase margin is measured at the frequency where the gain equals 0 dB (also known as crossover frequency). Phase margin indicates the distance from the measured phase to a phase shift of -180°.

The margin value table is only available for frequency response analysis.

Remote commands:

- `FRANalysis:MARGin:STATe` on page 1408
- `FRANalysis:MARGin:GAIN:FREQuency?` on page 1407
- `FRANalysis:MARGin:GAIN:VALue?` on page 1407
- `FRANalysis:MARGin:PHASe:FREQuency?` on page 1408
- `FRANalysis:MARGin:PHASe:VALue?` on page 1408

12.2.1.6 Vertical position and size of the curves

To set the position and the vertical scaling of the gain, phase, amplitude and impedance waveforms:

► Select the waveform and use the vertical [Scale] and [Position] (upper knob) knobs.
Or: Use the settings in the "Scale" tab.

The remote commands for setting the position and scales of the are described in Section 18.17.2.4, "Display and scale settings", on page 1403.

12.2.2 Using frequency response and impedance analysis


Connecting the test setup

To avoid measurement uncertainties, make sure that the cables connecting the input and the output of your DUT to the oscilloscope are of similar length.

Starting the analysis


1. Press the [Apps] key.
2. In the "General" tab, tap "FRA" or "Impedance".

   The FRA window opens. Only the settings relevant for the FRA setup are included in the "Menu". The menu provides access to the following dialogs: "Setup", "Vertical", "Horizontal", "Settings", "Save/recall".

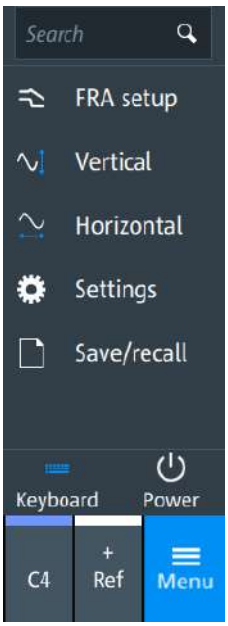

Closing the FRA window

► Tap the "Exit FRA" button at the bottom-right corner of the display.

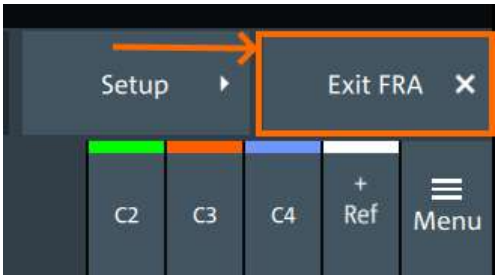

12.2.3 Dependencies of the measurement setup

When performing the analysis, consider the following dependencies of vertical parameters.


- Coupling:
  - For frequencies smaller than 10 Hz, the "Coupling" on page 143 is set to DC.
  - For frequencies higher than 10 Hz, you can select a Coupling manually. The default value is AC.
- The bandwidth value is changed to a higher value, if the selected bandwidth is smaller than double the stop frequency.
- If the bandwidth of the connected probe is lower than the "Stop" frequency, a warning is shown.

12.2.4 Settings for frequency response and impedance analysis

The following sections describe the settings that you can define for the frequency response analysis and impedance analysis.

12.2.4.1 Setup

Access: [Apps] > "General" > "FRA" or "Impedance" > "Setup".

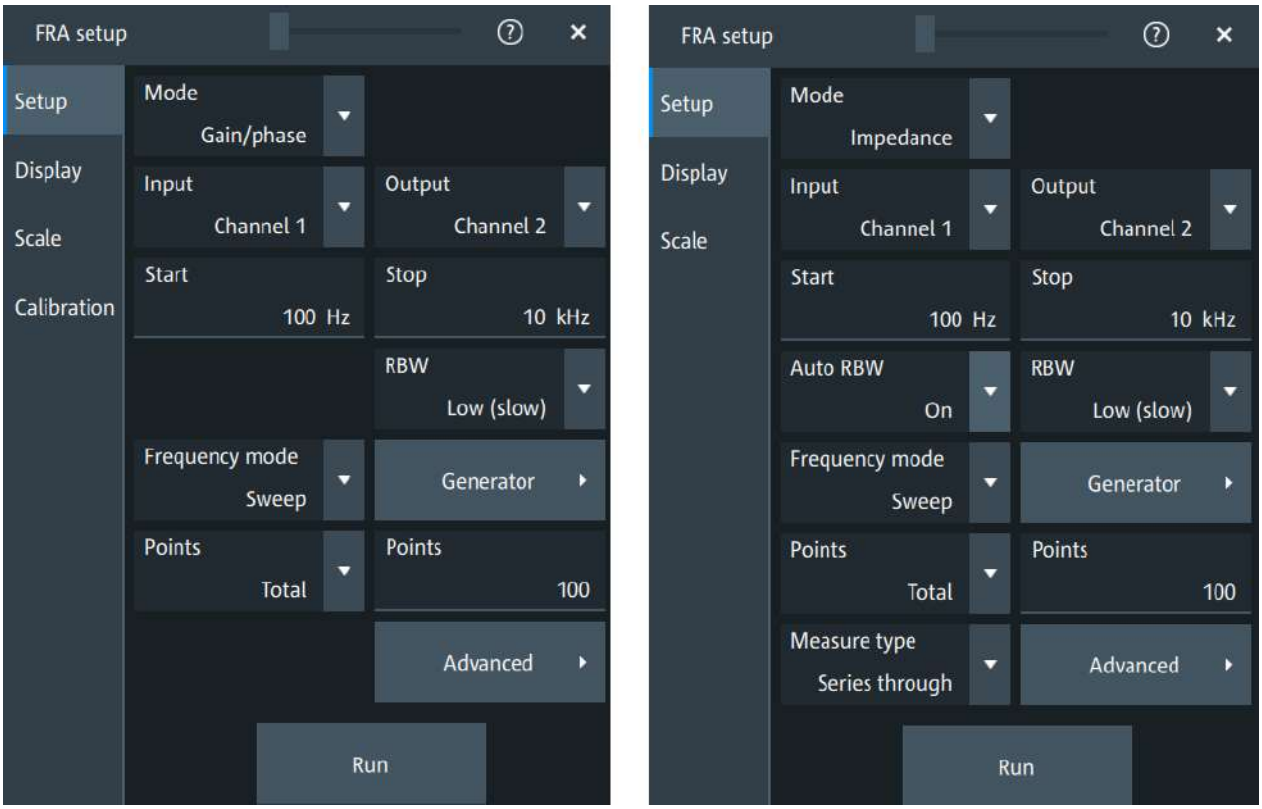

The "Setup" tab provides the analysis settings and access to the generator setup and advanced settings.

Mode
Selects the application mode.

- "Gain/phase": Frequency response analysis (option R&S MXO5-K36)
- "Impedance": Impedance analysis (option R&S MXO5-K337)

The mode is set according to your selection in the "Apps" menu. If you have obtained both options, you can change the analysis mode directly in the "Setup" dialog.

Remote command:
`FRANalysis:MODE` on page 1398

Input
Sets the channel for the input signal of the DUT.

Also math waveforms can be used as input source.

Remote command:
FRANalysis:INPut[:SOURce] on page 1395

Output
Sets the channel for the output signal of the DUT.

Also math waveforms can be used as output source.

Remote command:
FRANalysis:OUTPut[:SOURce] on page 1398

Start, Stop
Set the start and stop frequency of the sweep.

Remote command:
FRANalysis:FREQuency:STARt on page 1394
FRANalysis:FREQuency:STOP on page 1394

Auto RBW
Enables automatic selection of the RBW for impedance analysis. You can select an RBW range with "RBW" on page 378.

If automatic RBW is off, you can set a fixed value with "RBW" on page 378.

Remote command:
FRANalysis:MEASurement:RBW:AUTO on page 1397

RBW
Sets the resolution bandwidth, which determines the number of measurements that are used for creating the plot.

"High (fast)" A high RBW value is useful for obtaining a general understanding of a system's behavior over a wide frequency range. The accuracy of the measurement is not as good, but the measurement is completed fast.

"Medium" A medium RBW value is a compromise between the measurement time and measurement accuracy.

"Low (slow)" A low RBW value allows for a more detailed analysis of the system. Since more data needs to be collected, the measurement time can increase significantly.

Remote command:
FRANalysis:MEASurement:RBW[:MODE] on page 1397

RBW
Sets the RBW value for impedance analysis if "Auto RBW" on page 378 is disabled.

Remote command:
FRANalysis:MEASurement:RBW:VALue on page 1397

Frequency mode
Selects between single frequency and sweep analysis.

"Sweep" Set the start and stop frequency, the points measurement mode and the number of points.

"Single" Set the signal frequency in "Start", and the number of points. The points define the scale of the horizontal axis.

Remote command:
`FRANalysis:FREQuency:MODE` on page 1394

Generator
See Section 12.2.4.2, "Generator settings", on page 379.

Points
Selects if the number of points is measured as total or per decade and sets the number of points.

Remote command:
`FRANalysis:POINts:TOTal` on page 1399
`FRANalysis:POINts:MODE` on page 1399
`FRANalysis:POINts:LOGarithmic` on page 1398

Measure type
Selects the measurement method for the impedance analysis. Select the measurement method according to the impedance magnitude of your DUT.

"Shunt through" The shunt through method can measure very low impedance.

"Series through" The series-through method is most effective when measuring high impedance values: the 10% accuracy range is about 5 Ω to 20 kΩ or roughly one decade higher than the reflection method.

"Voltage current" This setup is very flexible and especially suitable to measure input impedance and output impedance of active circuits, such as DC/DC converter.

Remote command:
`FRANalysis:IMPedance[:MODE]` on page 1395

Run
Starts the frequency response analysis.

Remote command:
`FRANalysis:STATe` on page 1400


Repeat
Repeats the measurement, using the same parameters.

Only available in the FRA control menu.

Remote command:
`FRANalysis:REPeat` on page 1399

12.2.4.2 Generator settings

Access: [Apps] > "General" > "FRA" > "Setup" > "Generator".

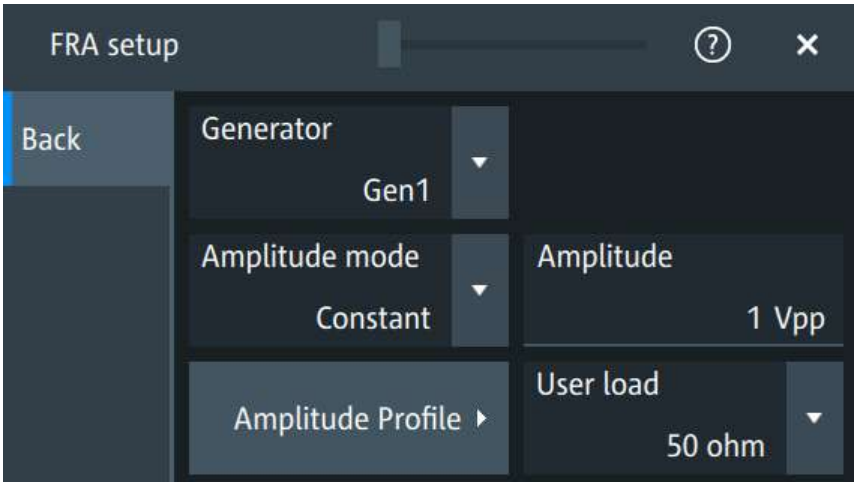

The dialog provides the settings for the generator.

Generator
Selects the built-in generator to start a frequency sweep for a defined frequency range.

If "Both" is selected, the generators are synchronized and deliver the same signal. Thus, you do not need a splitter in the measurement setup.

Remote command:
`FRANalysis:GENerator[:CHANnel]` on page 1400

Amplitude mode
Selects, if the amplitude is a constant value ("Amplitude") or is defined as an amplitude profile.

If the amplitude profile is selected, a green-colored waveform of the amplitudes for the different frequencies is displayed in the analysis plot, and scale settings for this waveform are available.

Remote command:
`FRANalysis:AMPLitude:MODE` on page 1400
`FRANalysis:AMPLitude:ENABle` on page 1403

Amplitude
Sets a fixed amplitude for the generated signal.

Remote command:
`FRANalysis:GENerator:AMPLitude` on page 1400

Amplitude profile
Opens a dialog to set the amplitude profile. See Section 12.2.4.3, "Amplitude profile", on page 381.


You can define specific amplitudes for different frequencies. The amplitude profile is useful when testing sensitive circuits, where the amplitude gets too high. In this case, distortion can occur.

User load
Selects the generator voltage display for 50Ω or high impedance load.

Remote command:
FRANalysis:GENerator:LOAD on page 1401

12.2.4.3 Amplitude profile

Access: [Apps] > "General" > "FRA" > "Setup" > "Generator" > "Amplitude profile".

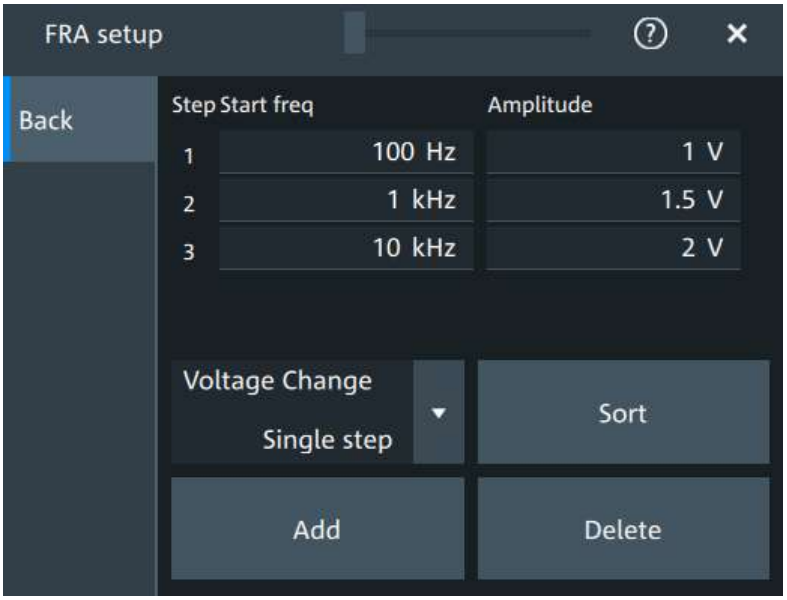

Opens a dialog to set the amplitude profile. You can then define different amplitudes for different frequency, and also the number of points (steps) in the profile. The amplitude profile is useful when testing sensitive circuits, where the amplitude gets too high. In this case distortion can occur.



Step start freq, Amplitude
Set the frequency and amplitude values for the selected step.

Remote command:
FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude on page 1402
FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency on page 1402

Voltage change
Selects if the voltage change is done as a single step or as a ramp.

Remote command:
FRANalysis:AMPLitude:PROFile:MODE on page 1402


Add
Adds a new step to the amplitude profile.

Remote command:
FRANalysis:AMPLitude:PROFile:APOint on page 1401
FRANalysis:AMPLitude:PROFile:COUNt on page 1401

Sort
Sorts the steps in the amplitude table by frequency, starting with the lowest frequency.

Remote command:
FRANalysis:AMPLitude:PROFile:SORT on page 1403


Delete
If enabled, a delete icon appears next to each step in the amplitude profile table. Tap the icon to delete the step.

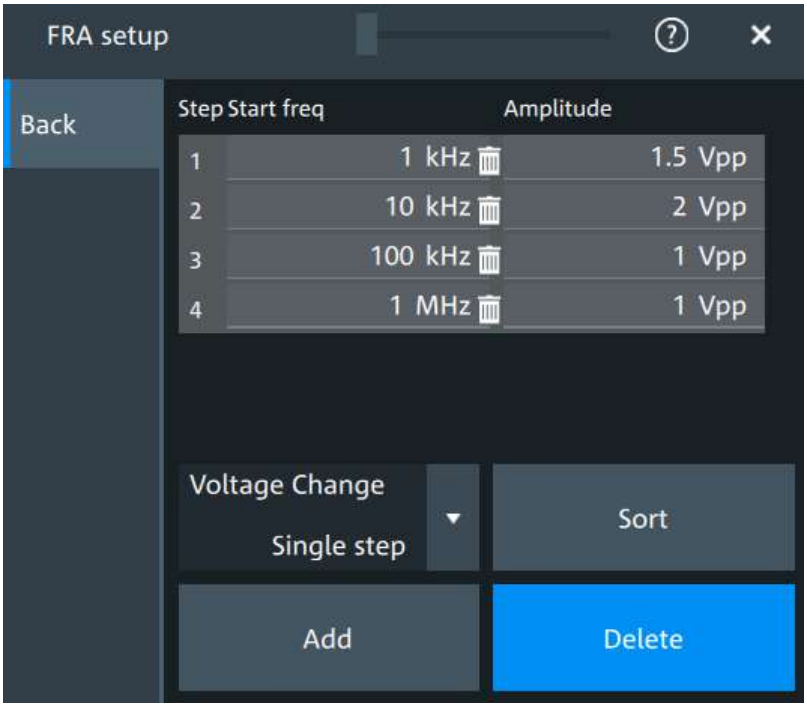


Remote command:
FRANalysis:AMPLitude:PROFile:POINt<m>:REMove on page 1402

12.2.4.4 Advanced

Access: [Apps] > "General" > "FRA" > "Setup" > "Advanced".

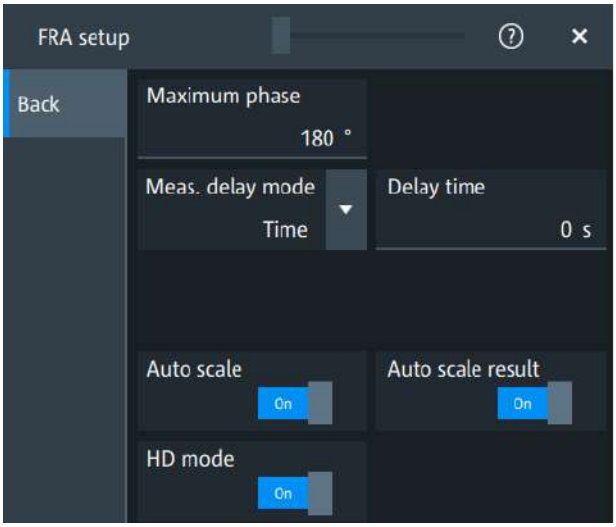

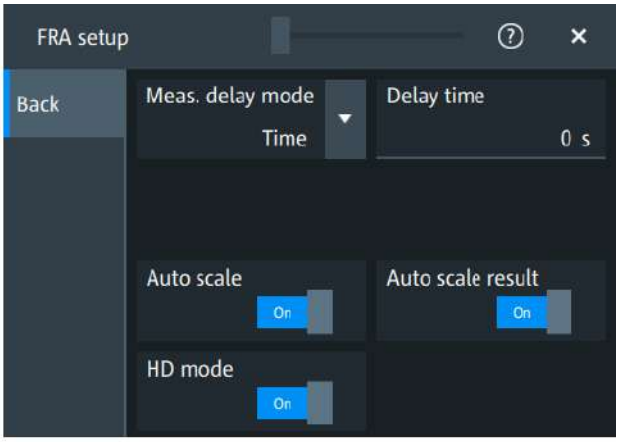

Maximum phase
Sets the upper boundary of the vertical phase window.

The lower boundary is given by "Maximum phase" - 360°.

By default, the "Maximum phase" is set to 180° for a phase window ranging from -180° to 180° accordingly.

Only available for frequency response analysis.

Remote command:
`FRANalysis:PHASe:MAXimum` on page 1398

Meas. delay mode, Delay time, Delay period
Selects the type of delay that the system waits before measuring the next point of the plot. Delay is helpful in systems that need more time to adapt to the new frequency, for example if filters with significant time group delays are present. You can select a time delay and set the "Delay time", or a period delay and set the "Delay period".

Remote command:
`FRANalysis:MEASurement:DELay:STATe` on page 1395
`FRANalysis:MEASurement:DELay:MODE` on page 1395
`FRANalysis:MEASurement:DELay[:TIME]` on page 1396
`FRANalysis:MEASurement:DELay:PERiod[:NUMBer]` on page 1396

Auto scale
If enabled, the vertical scaling of input and output channel is done automatically for every new measurement frequency point.

Automatic scaling ensures a non-disturbed signal and a maximum of measurement resolution.

For Coupling = "DC", the channel offset is also changed to compensate the signal offset.

The function is disabled if calibration is active.

Remote command:
`FRANalysis:AUToscale[:ENABle]` on page 1393

Auto scale result
If enabled, the scaling of the plot diagram is adjusted when new measurement results are determined. Thus, all values are included in the plot.

Remote command:
`FRANalysis:AUToscale:RESult[:ENABle]` on page 1393


HD mode
Disables the HD mode, which is active by default. In particular, disable the HD mode if you analyze switching peaks.


The frequency in HD mode must be at least 3 times the current frequency. The bandwidth filter of the channel is adjusted automatically to the generator frequency.

Remote command:
`FRANalysis:HDEFinition[:ENABle]` on page 1394

12.2.4.5 Display

Access: [Apps] > "General" > "FRA" > "Display".

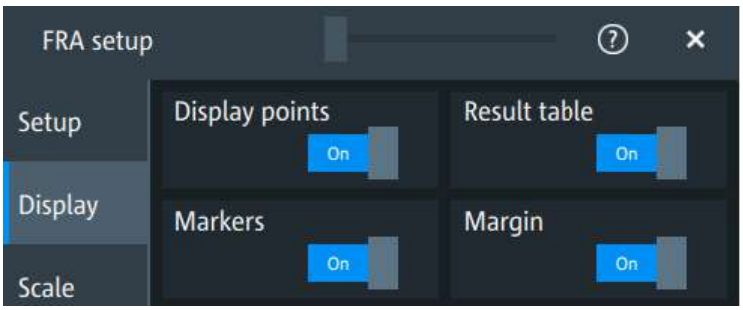

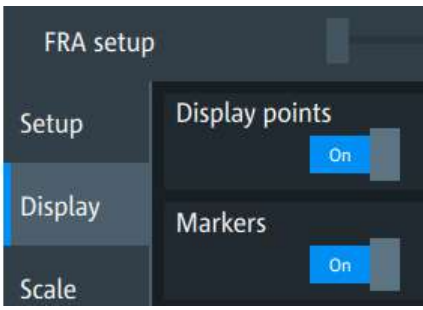

In this dialog, you can select which elements are displayed in the FRA diagram.

Display points
Enables the display of the measurement points for the frequency response analysis.

Remote command:
`FRANalysis:MEASurement:POINt[:DISPlay]` on page 1396

Result table
Enables the display of the result table for the FRA.

Remote command:
`FRANalysis:RESult:STATe` on page 1411

Markers
Activates the display of the marker table and the markers in the plot.

See also: Section 12.2.1.4, "Marker value table", on page 374.

Remote command:
`FRANalysis:MARKer<m>:STATe` on page 1411

Margin
Enables the display of the margin table for the frequency response analysis.


Available only for frequency response analysis. See also: Section 12.2.1.5, "Margin value table", on page 374.


Remote command:
`FRANalysis:MARGin:STATe` on page 1408

12.2.4.6 Scale

Access: [Apps] > "General" > "FRA" > "Scale".

The settings are different for frequency response analysis and impedance analysis.

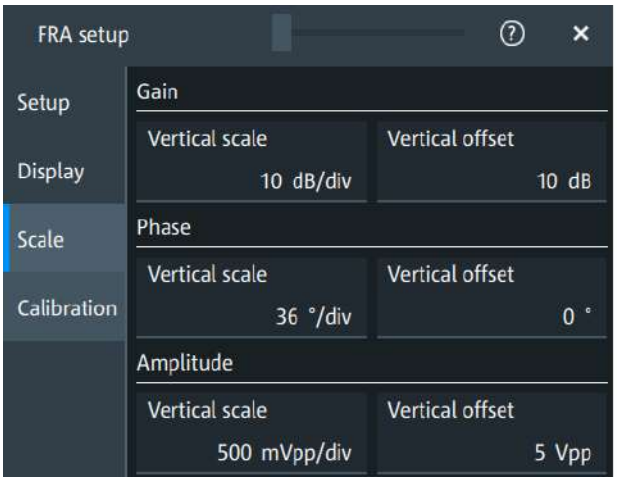

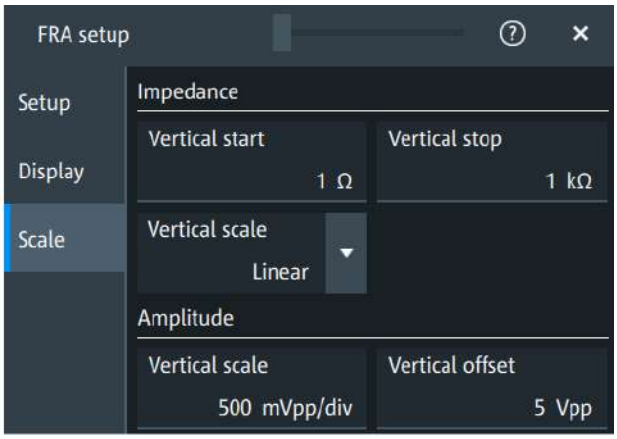

Vertical scale
Sets the scale of the y-axis in the function diagram for gain, phase and amplitude.

Remote command:
`FRANalysis:PHASe:SCALe` on page 1406
`FRANalysis:GAIN:SCALe` on page 1404

Vertical offset
Sets a voltage offset to adjust the vertical position on the screen for gain, phase and amplitude.

Remote command:
`FRANalysis:PHASe:OFFSet` on page 1406
`FRANalysis:GAIN:OFFSet` on page 1404

Vertical start, Vertical stop
Set the lower and upper value of the vertical scale for the impedance trace.

Remote command:
`FRANalysis:IMPedance:STARt` on page 1405
`FRANalysis:IMPedance:STOP` on page 1405

Vertical scale
Sets the scale mode for the impedance trace: linear or logarithmic.


Remote command:
`FRANalysis:IMPedance:SCALe` on page 1405

12.2.4.7 Calibration

Calibration is used to compensate the electrical parameter of probes, cables, connectors or fixtures.

Access: [Apps] > "General" > "FRA" > "Calibration".

Calibration is only available for frequency response analysis.

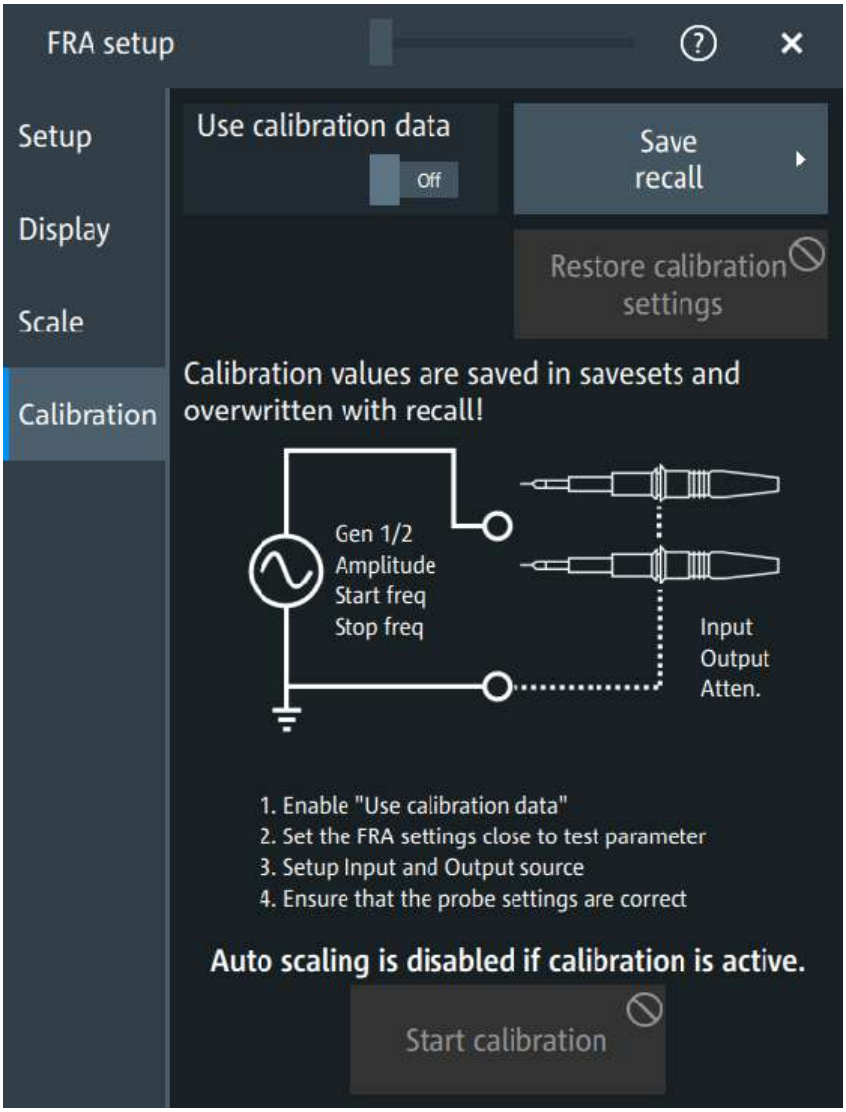

Test setup considerations

Example of a calibration test setup shows an example of a test setup, where the input probe is connected to [C1] and the output probe is connected to [C2]. The input is also connected to the waveform generator.

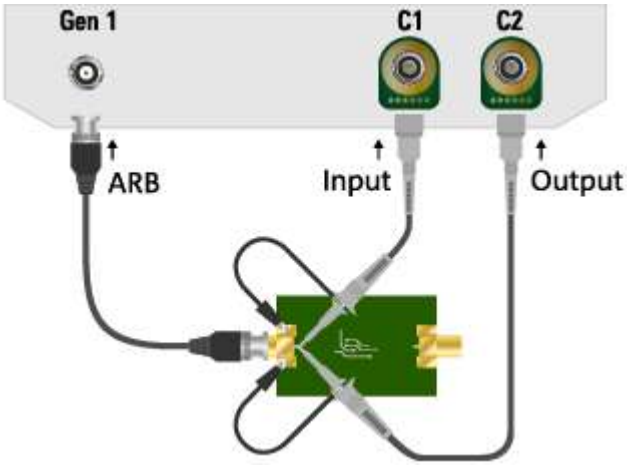


Figure 12-4: Example of a calibration test setup

Input = [C1], [Gen1]
Output = [C2]

Consider also the following:

- Calibration for FRA is only possible with probes connected to the input and output channels.
- For best FRA calibration results, shorten the DUT and place the probe tips as near as possible to each other.
- If there is a fixture for the DUT, include it in the calibration setup.
- If the DUT needs a termination, conduct it with an external termination directly on the DUT output or input.

Calibration state

Once the calibration is started, a label is shown in the toolbar.



The calibration label displays the status of the calibration. The following states are available:

- "Valid": calibration values are used
- "Invalid": device settings changed
- "Running": a calibration cycle is running
- "None": not performed or no data

Settings influencing calibration

Calibration is only valid for the settings that are active during its execution. If one of the following settings is changed, the calibration becomes "Invalid":

- "Input" and "Output" channel
- "Channel coupling" and "Bandwidth"
- "Channel scaling"

- "Generator"
- "User load"
- "Amplitude mode"
- "Amplitude profile"
- "Amplitude profile" > "Voltage change"
- "Start" frequency
- "Stop" frequency
- "Points" mode and total points
- "Meas. delay mode"
- "Delay time"
- "RBW"

If calibration is active, "Auto scale" is disabled.

To perform a calibration

1. Enable "Use calibration data".
2. Set the FRA settings close to the test parameters.
3. Select the Input and Output source.
4. Ensure that the probe settings are correct.

The following settings are available for the calibration:

Use calibration data
If enabled, the user calibration data is used for the frequency response analysis.

Remote command:
`FRANalysis:CALibration:STATe` on page 1407

Save/recall
Opens the "Save/recall" dialog. You can save the instrument setting in a saveset, and load an existing saveset. For details, see Section 13.3, "General and measurement settings: savesets", on page 497.

The saveset includes the calibration data. If you load a saveset, the current calibration values are overwritten.

Restore calibration settings
Restores the FRA settings to the values that were selected during the calibration process. Restore allows you to repeat measurements with a valid calibration state. See also "Settings influencing calibration" on page 387.

To keep and restore calibration settings in remote control, set up and calibrate the frequency analysis, and save the instrument settings in a saveset. When you load this saveset later, the calibration data is restored together with the instrument settings.

Start calibration
Starts the calibration. The button is only enabled if there is a valid test setup.


The state of the calibration process is displayed in the calibration label in the toolbar.

After a calibration is performed successfully, the calibration values are saved automatically.

Remote command:
`FRANalysis:CALibration:CALibration` on page 1406
`FRANalysis:CALibration:RESult?` on page 1406

12.2.5 Saving analysis results

Access: "Menu" > "Save/recall" > "Results".

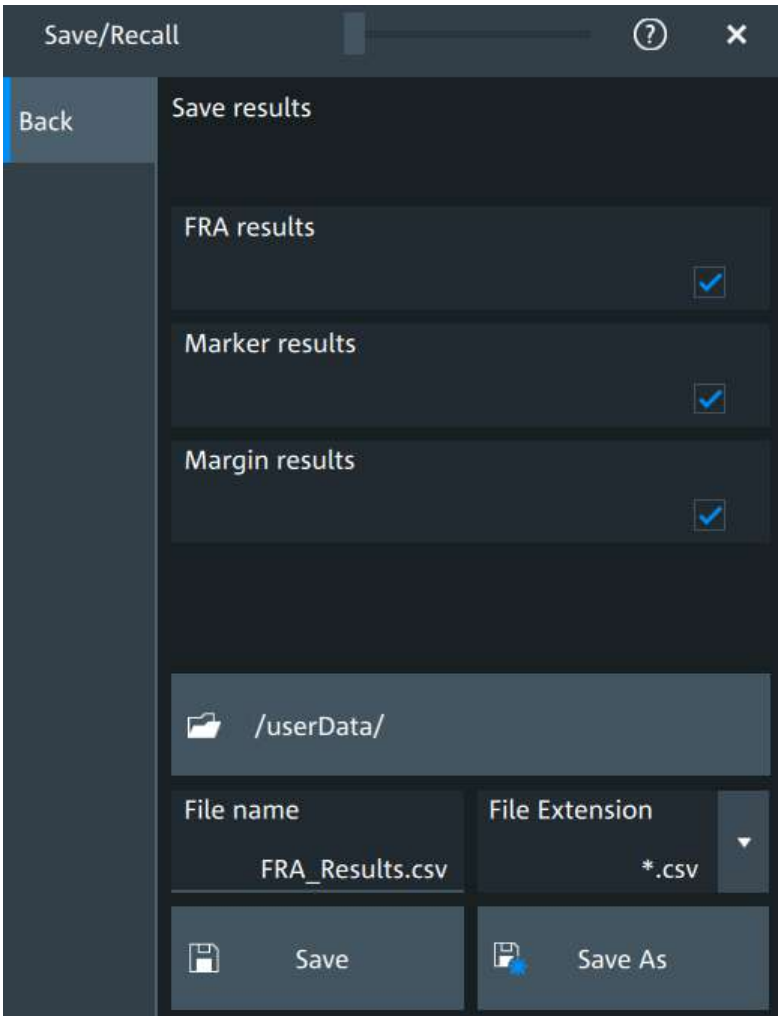

FRA results
In this dialog, you can select which result values you want to include in your FRA export results file.

The following options are available:
- "FRA results": includes the frequency, gain, phase and amplitude
- "Marker results": includes the marker frequency and gain

- "Margin results": includes the margin gain and phase

Remote command:
`EXPort:RESult:SELect:FRA:MARGin` on page 1415
`EXPort:RESult:SELect:FRA:MARKer` on page 1416
`EXPort:RESult:SELect:FRA:RESult` on page 1416

12.2.6 Reference waveforms of FRA curves

To compare the results of frequency resonse analysis and analyze differences between them, you can use up to 4 specific reference waveforms. These references can be created from gain and phase curves, and from other references. The type of the source waveform is included in the reference waveform data.


You can save an unlimited number of reference waveforms and load them for further use. Markers are also set on these reference waveforms.

The display of a reference waveform is independent from the display of the source waveform; you can move, stretch and compress the curve vertically. A loaded reference waveform is restored when you leave the FRA mode and enter it again with no preset inbetween. Reference waveforms are aligned horizontally to the actual start and stop position in the waveform diagram.

When a FRA reference waveform is selected, you can change scale and position using the knobs on the front panel.

12.2.6.1 Reference waveform setup

Access: perform a frequency response analysis and display resulting waveforms > select the "+ Ref" signal activator > "Setup" > select reference waveform

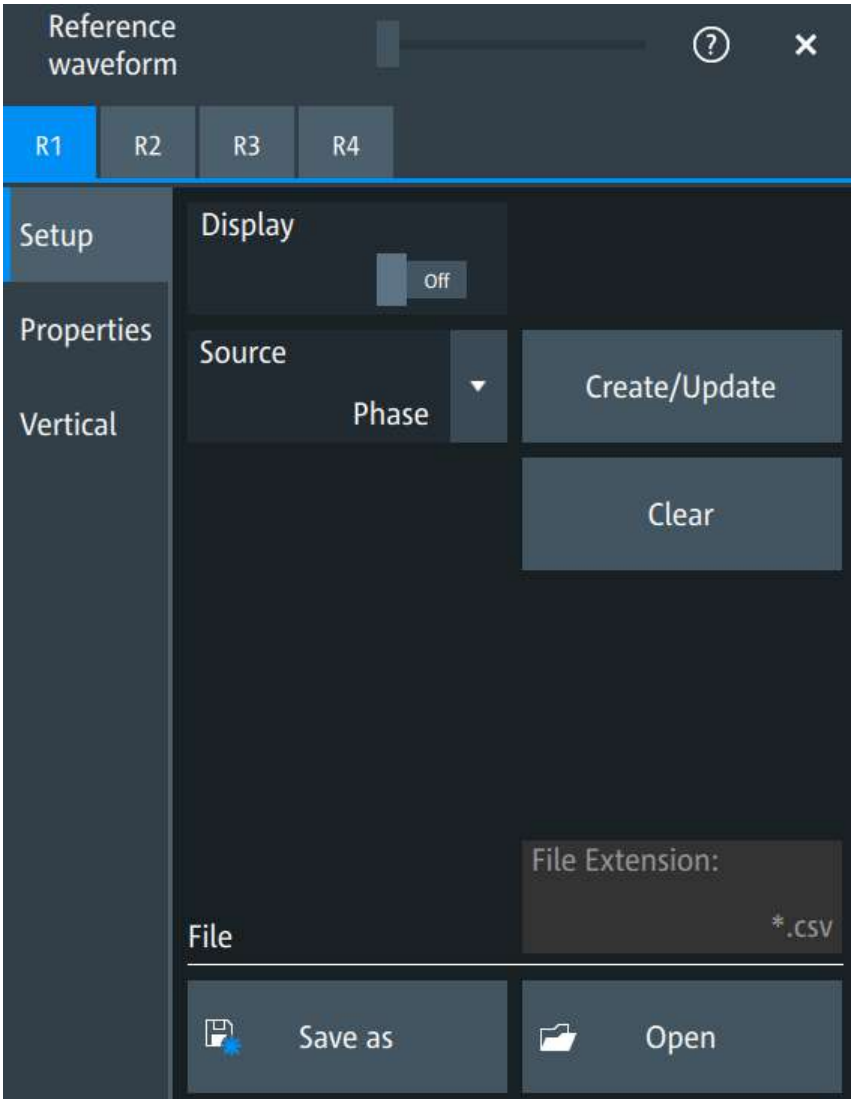

In the "Setup" tab, you select the source of the reference waveform and create the reference.

Display
Enables the display of the reference waveform in the diagram. Before you can display it, create the reference waveform.

Remote command:
`FRANalysis:REFCurve<rc>:ENABle` on page 1412

Source
Selects the source waveform of the reference from the existing frequency response waveforms, e.g. gain, phase or an other reference.

Remote command:
`FRANalysis:REFCurve<rc>:SOURce` on page 1414

Create/Update
Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform.

A progress bar informs you about the process.

Remote command:
`FRANalysis:REFCurve<rc>:UPDate` on page 1414

Clear
Deletes the selected reference waveform. It disappears from the display, and its memory is deleted.

Remote command:
`FRANalysis:REFCurve<rc>:CLEar` on page 1411

File extension
Shows the file format. Currently, only CSV files are supported.

Save as
Opens a file explorer where you select the folder, enter the filename and save the file. The complete reference waveform is stored in a CSV file and can be reloaded later.

A progress bar informs you about the process.


Remote command:
`FRANalysis:REFCurve<rc>:NAME` on page 1412
`FRANalysis:REFCurve<rc>:SAVE` on page 1413

Open
Opens a file selection dialog box and loads the selected reference file.

Remote command:
`FRANalysis:REFCurve<rc>:OPEN` on page 1413

12.2.6.2 Reference waveform properties

Access: perform a frequency response analysis and display resulting waveforms > select the "+ Ref" signal activator > "Properties" tab > select reference waveform

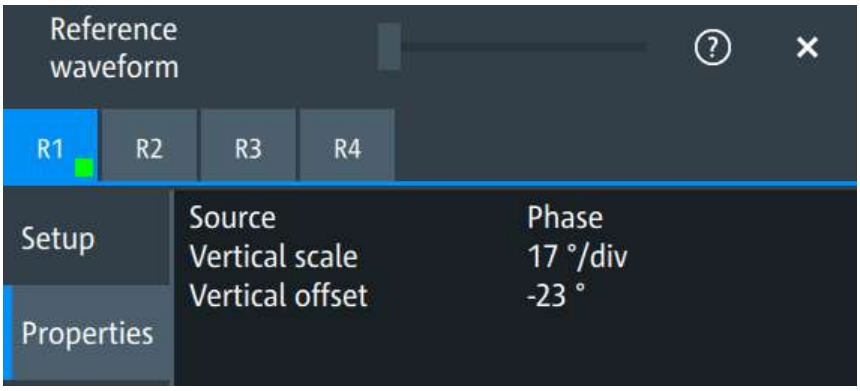


A FRA reference waveform can be vertically scaled and positioned in the diagram. The "Properties" tab shows the original settings of the reference waveform, which are stored together with the waveform data.

The following settings are displayed:

- Type of the source waveform
- Vertical scale and offset that are defined in the "Scale" tab (Section 12.2.4.6, "Scale", on page 385)

12.2.6.3 Vertical settings for reference waveforms

Access: perform a frequency response analysis and display resulting waveforms > select the "+ Ref" signal activator > "Vertical" tab > select reference waveform

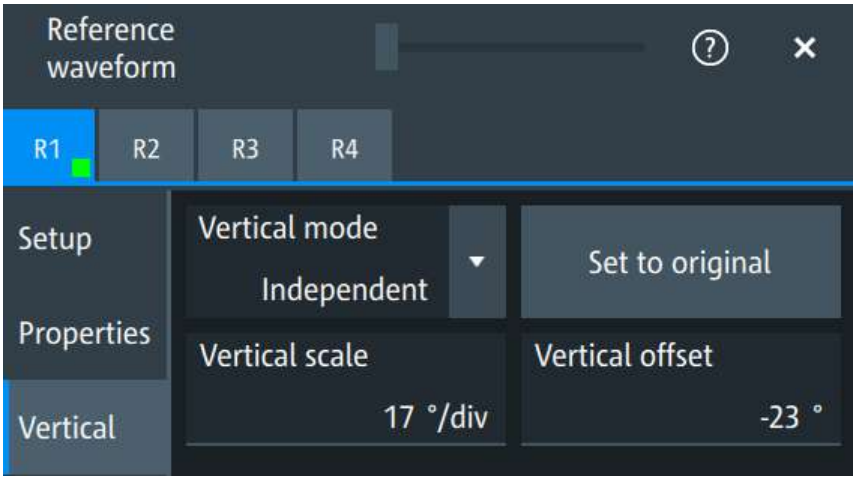

Vertical mode
Selects the type of vertical settings:

"Coupled to source" Vertical position and scale of the source are used.

"Independent" Scaling and position can be set specific to the reference waveform.

Remote command:
`FRANalysis:REFCurve<rc>:VMODe` on page 1414

Set to original
Available, if "Vertical mode" = "Independent".

Restores the original vertical settings of the reference waveform.

Remote command:
`FRANalysis:REFCurve<rc>:TOORiginal` on page 1414

Vertical scale
Available, if "Vertical mode" = "Independent".

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The unit of the reference is the same as the unit of the source waveform.

Remote command:
`FRANalysis:REFCurve<rc>:SCALe` on page 1413

Vertical offset
The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Remote command:
`FRANalysis:REFCurve<rc>:OFFSet` on page 1412

12.2.7 Example of impedance analysis

The following screenshots show a series through measurement of a lowpass filter that has its maximum attenuation near 5 MHz. The logarithmic scale is used for the impedance curve.



Figure 12-5: Initial impedance measurement



Figure 12-6: Reference waveform was created from the impedance curve



Figure 12-7: New impedance measurement around 5 MHz to analyze the peak, with the reference waveform of the previous measurement

12.3 Power analysis (option R&S MXO5-K31)

With the MXO 5 and option R&S MXO5-K31, you can perform power analysis measurements.

For best measurement results, we recommended setting channel Bandwidth = 20 MHz.
If using the HD mode, we recommended setting Bandwidth = 100 MHz.

12.3.1 Power analysis initial settings

In the main "Power analysis" dialog, you select the required power measurements, align the channels and set the offset compensation to get correct measurements.

12.3.1.1 Select power measurements


In the "Analysis" tab, you select the power analysis measurements.

You can add up to 6 power analysis measurements, including several instances of the same measurement.

From here, you can access the settings for the enabled power analysis measurements.


To add a new power measurement

1. Select "Menu" > "Apps" > "General" tab > "Power".
2. In the "Analysis" tab, select "+ Add".

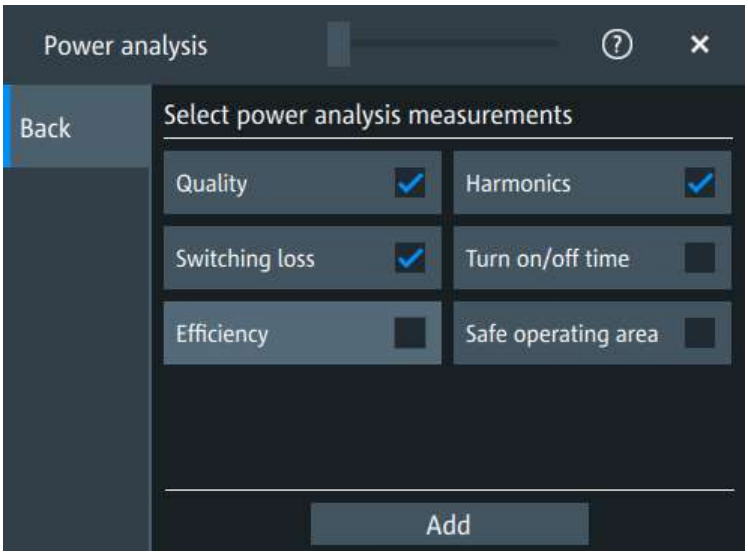

3. Select a power measurement on the list to enable it.
4. Select "+ Add" to add the selected measurements.


All selected measurements are enabled.

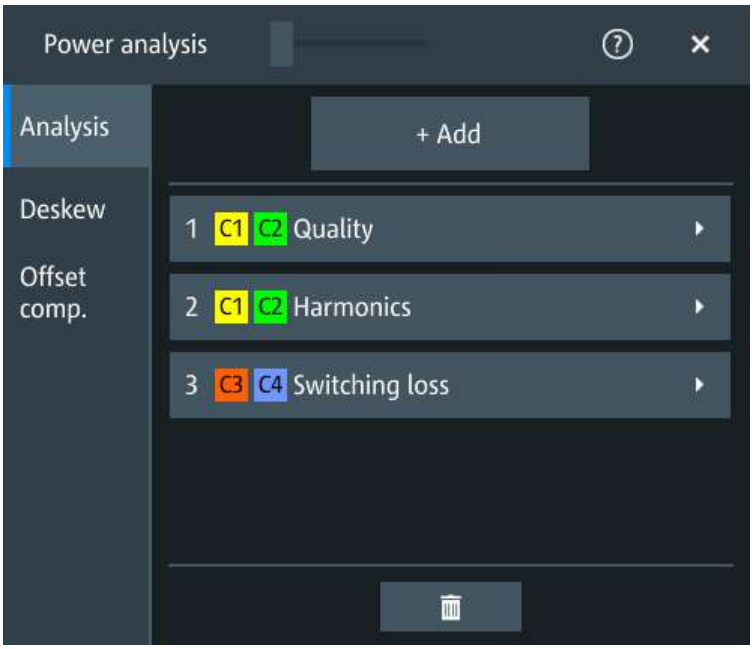

To delete a measurement

1. Select the "Menu" > "Apps" > "General" tab > "Power", to open the power measurement dialog.
2. In the "Analysis" tab, select .

   A delete icon appears in the selection button of each measurement.

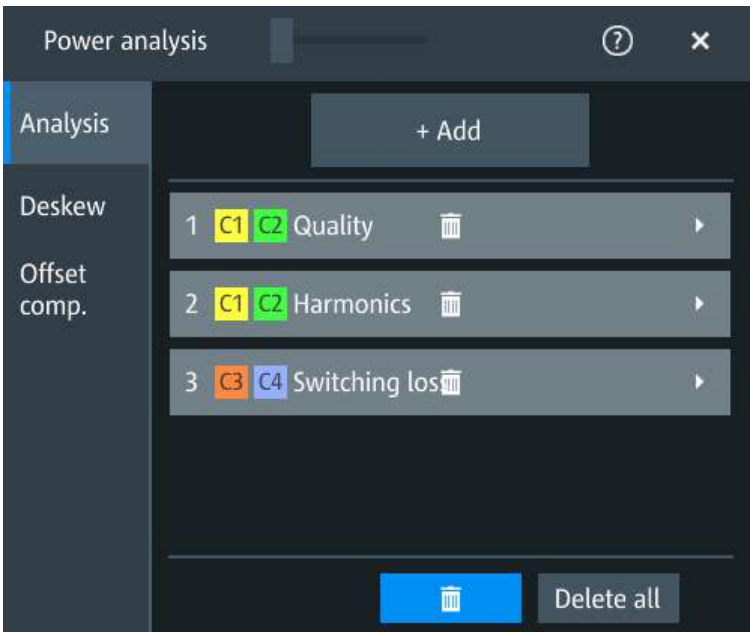

3. Select the power measurement that you want to delete. Alternatively, select "Delete All" to delete all measurements.

+ Add
Opens a dialog to select the power analysis measurements. See "To add a new power measurement" on page 396.

Remote command:
`POWer<m>[:ENABle]` on page 1419
`POWer<m>:TYPE` on page 1419


12.3.1.2 Deskew

In the dialog box you can perform a deskew of your current and voltage probes.

Required equipment:

- R&S RT-ZF20 power deskew fixture
- Rohde & Schwarz voltage probe
- Rohde & Schwarz current probe

Deskew settings

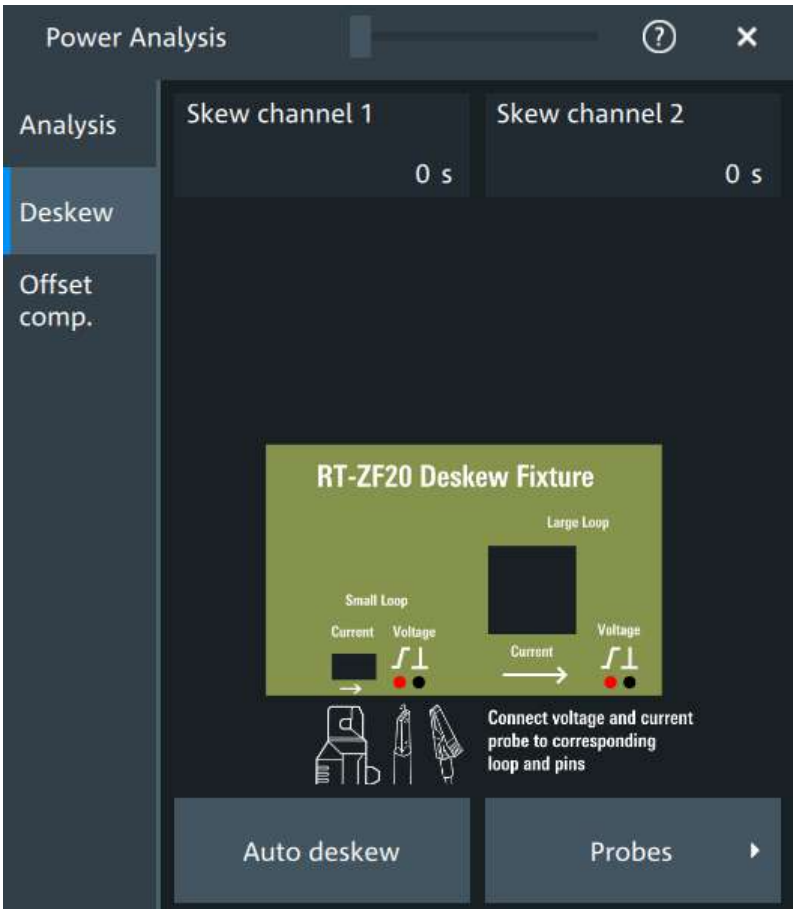

Skew channel
Sets user-defined skew settings for the channel connected to the current probe.

Alternatively, you can start an "Auto deskew".

Remote command:
CHANnel<ch>:SKEW:TIME on page 1147

Auto deskew
Starts an auto deskew. It is used to determine the trigger and scaling properties.

For an auto deskew, only Rohde & Schwarz probes are supported.

Make sure that the probes are configured correctly before you start the deskewing.

After the deskew, the result values are written in the "Skew" value of the corresponding channel.


If there are more than two active channels, you can perform automatic deskew step by step and exchange the probes connected fixture between the steps.

Remote command:
POWer<m>:ASKew[:EXECute] on page 1420

Probes
Opens the vertical setup dialog, where you find the probe settings.

12.3.1.3 Offset compensation

The offset compensation adjustments are applied to all 3-phase power analysis measurements.

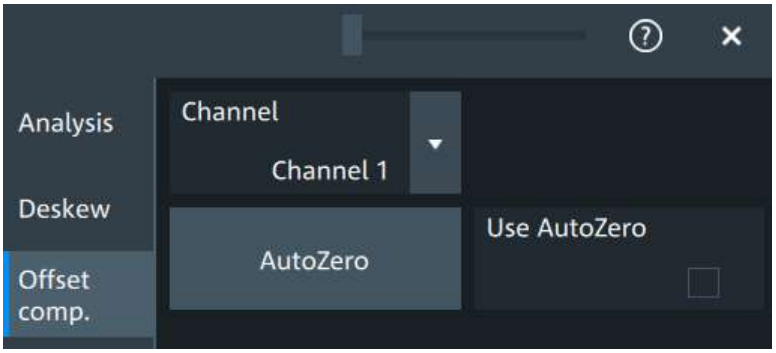

Channel
Select the channel for the offset compensation.

Remote command:
PROBe<ch>:SETup:OFFSet:ZADJust on page 1169

AutoZero, Use AutoZero
Voltage probes can have a zero error. The zero error is the voltage appearing at the probe output when nothing is connected to the probe. If a zero error occurs, it results in an external offset and the waveform is not displayed around 0 V.

To correct the zero error of voltage probes, short the signal pin and the ground pin together. Then select "AutoZero". While the alignment is running, the instrument switches to DC coupling to display the waveform correctly.

To correct the zero error, enable "Use AutoZero".

"AutoZero" uses the current scale and attenuation settings during alignment. If you change these settings, e.g. the vertical scale, repeat "AutoZero".

If a current probe is connected, the function demagnetizes the probe's sensor head and sets the waveform to zero position.

Remote command:
`PROBe<ch>:SETup:OFFSet:AZERo` on page 1156
`PROBe<ch>:SETup:OFFSet:USEautozero` on page 1156

12.3.2 Power quality

In an electric circuit power is a measure for the rate of flow of energy at a certain point of the circuit. The active power of a circuit is the portion of energy that is transferred in one direction over a complete cycle of the AC waveform. The active power is the energy that can be used for work. In AC circuits, however, inductive and capacitive elements can store energy temporarily. This portion of the power flow known as reactive power is then returned to the source without doing any work.

The power quality analysis measurements include the active power, the reactive power, the apparent power and the power factor. The crest factors and the phase angle between the current and voltage are also measured. These properties describe the power transfer in the system and allow you to characterize the power quality of the system.


Required probes:

- Differential voltage probe
- Current probe

12.3.2.1 Configuring power quality

For details of the configuration settings, see Section 12.3.1.1, "Select power measurements", on page 396.

1. Add a new power quality measurement as described in "To add a new power measurement" on page 396.
2. Connect the differential voltage probe and the current probe to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. Connect the probes to the DUT:

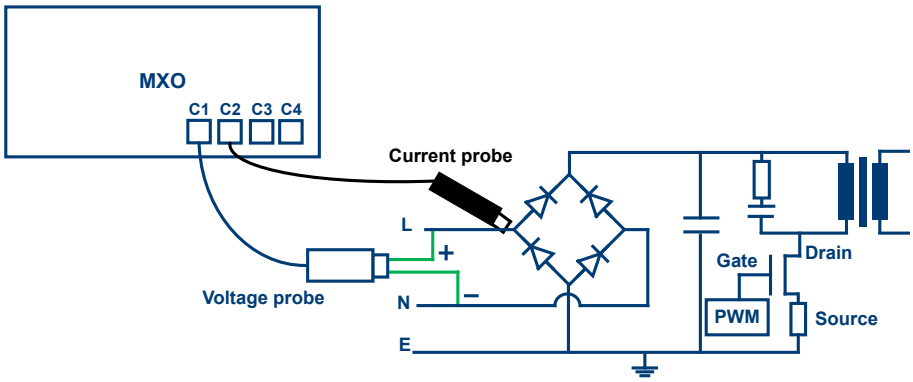

a) Connect the positive (+) signal socket of the differential voltage probe to the line of the AC input.
b) Connect the negative (-) signal socket of the differential voltage probe to the neutral of the AC input.
c) Connect the current probe to the line of the AC input.

5. In the "Analysis" tab, tap the "Quality" measurement.

   The "Quality" setup dialog opens.

6. Select the correct channels for the "Voltage" and the "Current" probes.


7. Set the "Fund. frequency" according to your signal.

8. If necessary, enable "Statistics".

   On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.3.2.7, "Power quality results", on page 405.

12.3.2.2 Power quality settings

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Quality" > select "Quality" > "Setup".

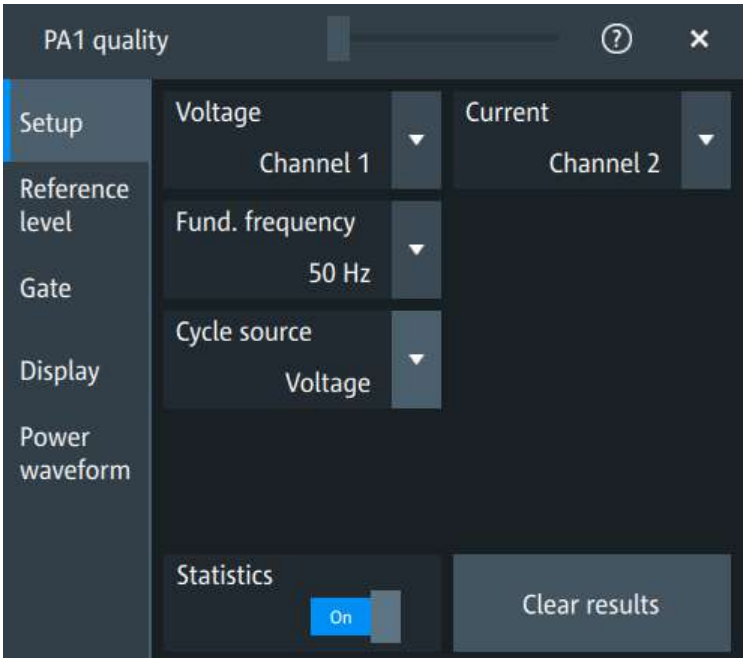

In the "Setup" tab, you configure the power quality measurement: select the sources, the fundamental frequency, and enable statistics.

Voltage
Selects the voltage source waveform. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:QUALity:SOURce[:VOLTage]` on page 1422

Current
Selects the current source waveform. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:QUALity:SOURce:CURRent` on page 1421

Fund. frequency
Selects the input frequency of the source signal.

Remote command:
`POWer<m>:QUALity:FREQuency[:VALue]` on page 1422
`POWer<m>:QUALity:FREQuency:USER` on page 1422

Cycle source
Selects the source of the period measurement. This period is the reference for related measurements and calculations.

Remote command:
`POWer<m>:QUALity:SOURce:CYCLe` on page 1422

Statistics
Activates or deactivates the statistical evaluation for the selected power measurement. If statistics are enabled, the following results are calculated:

Label	Description
Current	Current value
Max	Maximum value
Min	Minimum value
Mean	Average
RMS	Root mean square
σ (S-dev)	Standard deviation
Event count	Number of measured events
Wave count	Number of waveforms (acquisitions)

Remote command:
`POWer<m>:QUALity:STATistics[:ENABle]` on page 1420
`POWer<m>:QUALity:STATistics:WFMCount?` on page 1421
`POWer<m>:SWITching:STATistics:ENABle` on page 1420
`POWer<m>:SWITching:STATistics:WFMCount?` on page 1421
`POWer<m>:EFFiciency:STATistics[:ENABle]` on page 1420
`POWer<m>:EFFiciency:STATistics:WFMCount?` on page 1421


Clear results
Resets the statistical results for the respective power measurements, and starts a new statistical evaluation if the acquisition is running.

Remote command:
`POWer<m>:QUALity:STATistics:RESet` on page 1420
`POWer<m>:SWITching:STATistics:RESet` on page 1420
`POWer<m>:EFFiciency:STATistics:RESet` on page 1420

12.3.2.3 Power quality display

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Quality" > select "Quality" > "Display".

In this dialog, you select the power quality analysis measurements that you want to display. For more details on the different measurements, see Section 12.3.2.7, "Power quality results", on page 405.

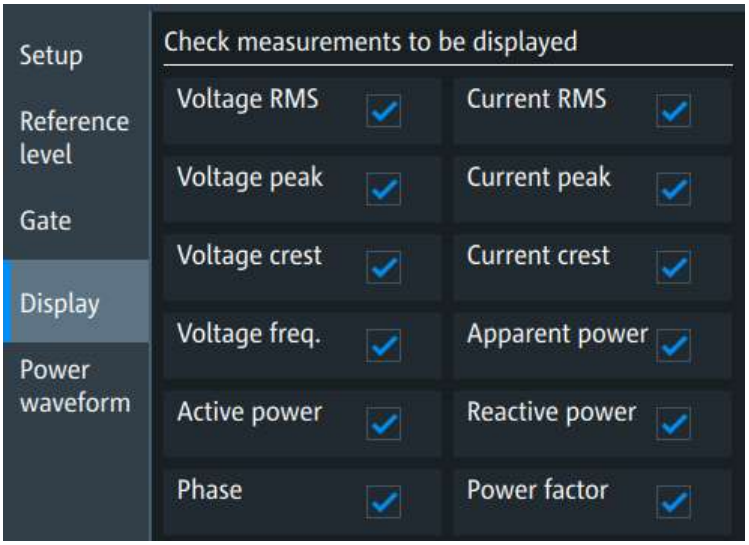

Remote commands

- `POWer<m>:QUALity:DISPlay:CURRent:CREStfactor` on page 1423
- `POWer<m>:QUALity:DISPlay:CURRent:PEAK` on page 1423
- `POWer<m>:QUALity:DISPlay:CURRent:RMS` on page 1424
- `POWer<m>:QUALity:DISPlay:POWer:ACTive` on page 1424
- `POWer<m>:QUALity:DISPlay:POWer:APParent` on page 1424
- `POWer<m>:QUALity:DISPlay:POWer:PFACtor` on page 1424
- `POWer<m>:QUALity:DISPlay:POWer:PHASe` on page 1425
- `POWer<m>:QUALity:DISPlay:POWer:REACtive` on page 1425
- `POWer<m>:QUALity:DISPlay:VOLTage:CREStfactor` on page 1425
- `POWer<m>:QUALity:DISPlay:VOLTage:FREQuency` on page 1425
- `POWer<m>:QUALity:DISPlay:VOLTage:PEAK` on page 1426
- `POWer<m>:QUALity:DISPlay:VOLTage:RMS` on page 1426

12.3.2.4 Reference level

See Section 12.3.8.1, "Reference level", on page 438.

12.3.2.5 Gate

See Section 12.3.8.2, "Gate settings for power measurements", on page 442.

12.3.2.6 Power waveform

For a description of the power waveform scaling, see Section 12.3.8.3, "Power waveform", on page 443.

12.3.2.7 Power quality results



The results of power quality measurements are provided in two ways:

- The diagram shows the graphical presentation of:
  - The voltage waveform
  - The current waveform
  - The power waveform, which is the product of the current and voltage waveforms.
- The result table displays the numeric measurement results:

Voltage and current results

The voltage and current results are defined as follows:

Result	Description
Current RMS, voltage RMS	Square root of the mean of the square of the current or voltage averaged over N cycles
Voltage frequency	Frequency of the signal
Current cycle crest factor, voltage cycle crest factor	Peak value / RMS value

Power results

The power in a system is described by several physical quantities:

Result	Unit	Formula	Description
Apparent power, |S|	VA	$\|S\| = V_{RMS} \cdot I_{RMS}$	|S| is the magnitude of the vector sum of active and reactive power (the complex power S).
Reactive power, Q	VAR (Volt-Ampere reactive)	$Q = \|S\| \sin\varphi$	Power flow that is temporally stored in a system because of the inductive and capacitive elements. For the individual phase values, Q<0 indicates a capacitive load, Q>0 indicates an inductive load. The total reactive power is always positive.
Power factor, P_{Factor}	-	$P_{Factor} = P / \|S\|$	Measure of the system efficiency. The value varies between -1 and 1.
Active power, P	W	$P = V_{INSTANTENEOUS} \cdot I_{INSTANTENEOUS}$	Real power that can be converted into work. The result can be positive or negative. Positive values indicate active power consumption. Negative values indicate active power generation.
Phase, φ	°	$\varphi = acos\ (P_{Factor})$	Phase angle between the current and the voltage sine waves. φ<0 indicates a capacitive load, φ>0 indicates an inductive load. The total phase angle has the same sign convention as Q.

Remote commands: "Power quality results" on page 1426.

12.3.3 Power harmonics

Current harmonics appear in an electric power system due to nonlinear electric loads. The harmonics can be ejected back into the AC line and disturb other equipment on the grid. To avoid this disturbance, there are often standards of compliance that consumer or industry end-products must meet.

The "Harmonics" analysis tests the devices according to the precompliance standards EN 61000-3-2, MIL-STD-1399 and RTCA DO-160.


Required probes:

- Differential voltage probe
- Current probe

12.3.3.1 Configuring power harmonics

For details of the configuration settings, see Section 12.3.3.2, "Power harmonic settings", on page 408.

1. Add a new power quality measurement as described in Section 12.3.1.1, "Select power measurements", on page 396.
2. Connect the differential voltage probe and the current probe to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. Connect the probes to the DUT:

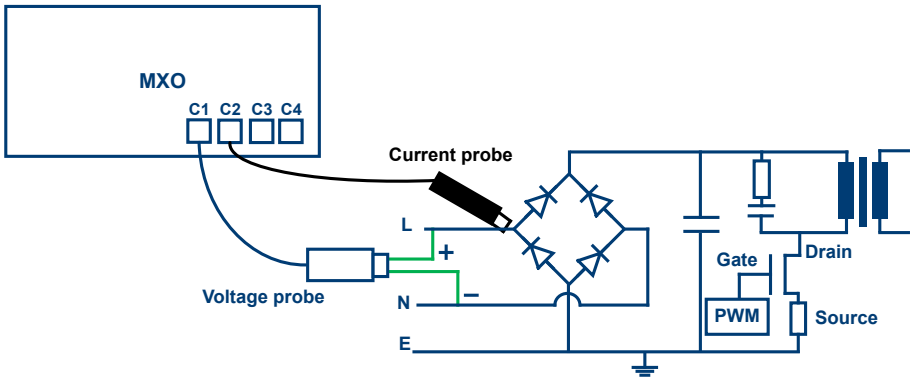

   a) Connect the positive (+) signal socket of the differential voltage probe to the line of the AC input.
   b) Connect the negative (-) signal socket of the differential voltage probe to the neutral of the AC input.
   c) Connect the current probe to the line of the AC input.
5. In the "Analysis" tab, tap the "Harmonics" measurement.

   The "Harmonics" setup dialog opens.
6. Select the correct channels for the "Voltage" and the "Current" probes.
7. Select the "Standard".
8. Select the "Fund. frequency" according to your signal.

   On the screen, you can see the measurement of the current, the voltage and the power. Also there is a table giving information about important measurement parameters. For details, see Section 12.3.3.6, "Power harmonic results", on page 412.

12.3.3.2 Power harmonic settings

In this tab, you configure the current harmonic measurement parameters and display settings.

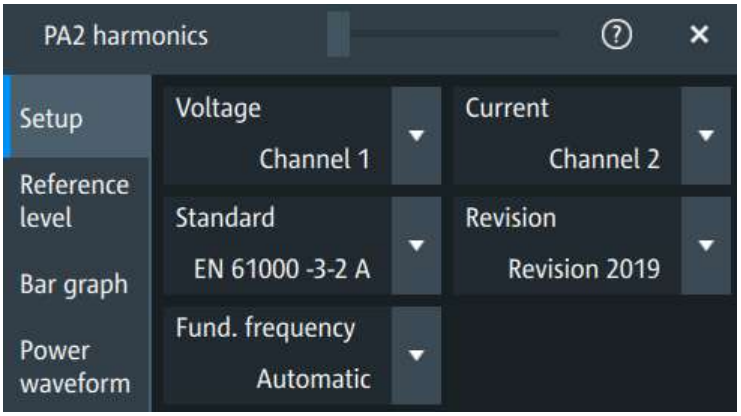


Figure 12-8: Power harmonic setup for EN 61000-3-2 A / EN 61000-3-2 B

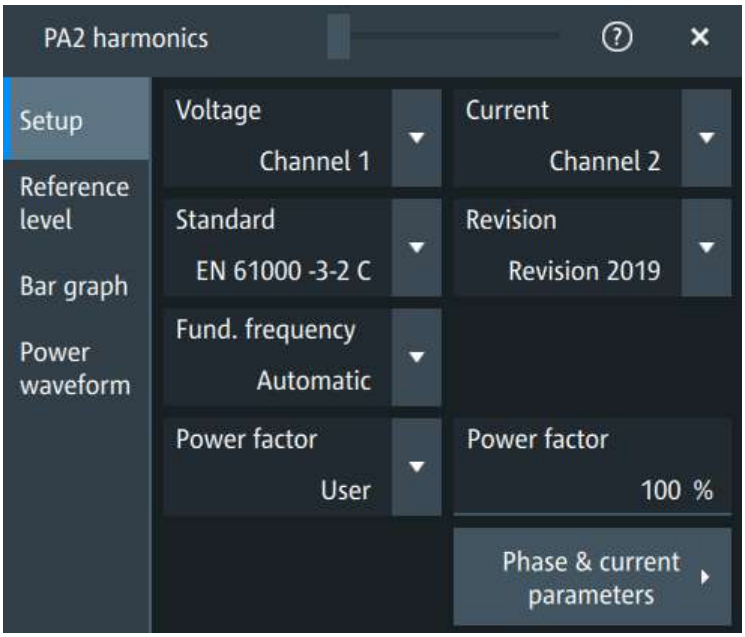


Figure 12-9: Power harmonic setup for EN 61000-3-2 C

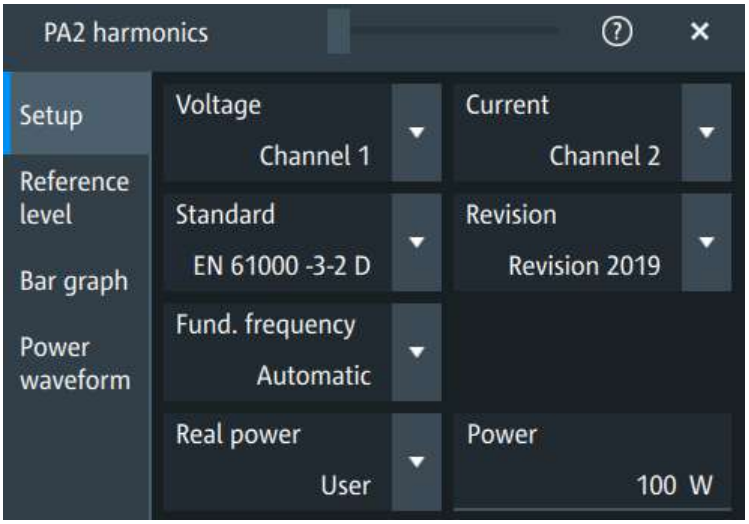


Figure 12-10: Power harmonic setup for EN 61000-3-2 D

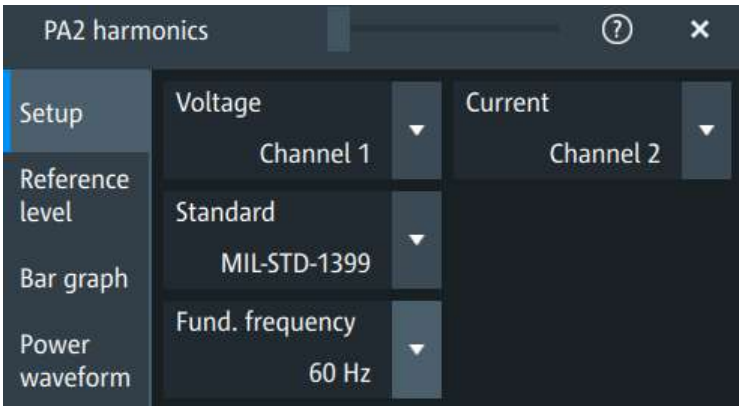


Figure 12-11: Power harmonic setup for MIL-STD-1399/ RTCA DO-160

Voltage
Selects the voltage source waveform. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:HARMonics:SOURce[:VOLTage]` on page 1434

Current
Selects the current source waveform. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:HARMonics:SOURce:CURRent` on page 1434

Standard
Select the standard in use.

For EN 61000-3-2 you can also select which "Revision" of the standard is used, "Revision 2011" or "Revision 2019".

Table 12-1: Current harmonic precompliance standards

Standard	Application
EN 61000-3-2 Class A	Balanced 3-phase equipment, household appliances (excluding equipment identified as class D), tools (excluding portable tools), dimmers for incandescent lamps, audio equipment
EN 61000-3-2 Class B	Portable tools, not professional arc welding equipment
EN 61000-3-2 Class C[1)]	Lighting equipment
EN 61000-3-2 Class D	PC, PC monitors, radio, or TV receivers with an input power less than or equal to 600W
MIL-STD-1399	Military shipboard user equipment
RTCA DO-160	Environmental tests of avionics hardware
[1)] The EN 61000-3-2 defines different limits for EN 61000-3-2 Class C equipment with an input power smaller or equal than 25W either. The limits that are implemented in the MXO 5 firmware comply with the limits of table 3 (column two) of the EN 61000-3-2 standard.	

Remote command:
`POWer<m>:HARMonics:STANdard` on page 1435
`POWer<m>:HARMonics:REVision` on page 1435

Fund. frequency
Selects the frequency of the input signal. The available frequencies depend on the selected Standard.

Remote command:
`POWer<m>:HARMonics:FREQuency:EN` on page 1435
`POWer<m>:HARMonics:FREQuency:MIL` on page 1436
`POWer<m>:HARMonics:FREQuency:RTCA` on page 1436

Power factor
Available only for "Standard" = EN 61000-3-2 Class C.

Selects if the power factor is defined automatically, or a user-defined value ("Power factor") is used.

Remote command:
`POWer<m>:HARMonics:PFACtor[:MODE]` on page 1439
`POWer<m>:HARMonics:PFACtor:USER` on page 1438

Phase & current parameters
Shows a graphical explanation of the relative phase angle and current parameters for "Standard" = EN 61000-3-2 Class C.

Real power, Power
Available only for "Standard" = EN 61000-3-2 Class D.

Selects if the real power is defined automatically, or a user-defined value ("Power") is used.


Remote command:
POWer<m>:HARMonics:RPOWer[:MODE] on page 1437
POWer<m>:HARMonics:RPOWer:USER on page 1438

12.3.3.3 Reference level

See Section 12.3.8.1, "Reference level", on page 438.

12.3.3.4 Bar graph

In this tab you can configure the bar graph display.

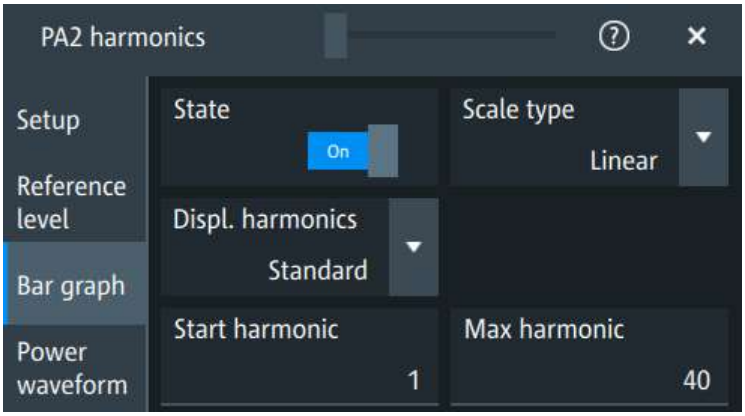

State
Shows the bar graph in the diagram.

Scale type
Selects a logarithmic or linear scale for the display for the harmonics bar graph.

Remote command:
POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE
on page 1437

Displ. harmonics
Selects which harmonics are displayed in the bar graph: all, odd even or depending on the standard definition.

Remote command:
POWer<m>:HARMonics:DISPlay:HARMonics[:DISPlay] on page 1436

Start harmonic, Max harmonic
Set the first and last harmonic to be shown in the bar graph.


Remote command:
POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] on page 1437
POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] on page 1437

12.3.3.5 Power waveform

A power waveform is available if "Standard" is set to EN 61000-3-2 Class C or EN 61000-3-2 Class D.

For a description of the power waveform scaling, see Section 12.3.8.3, "Power waveform", on page 443.

12.3.3.6 Power harmonic results

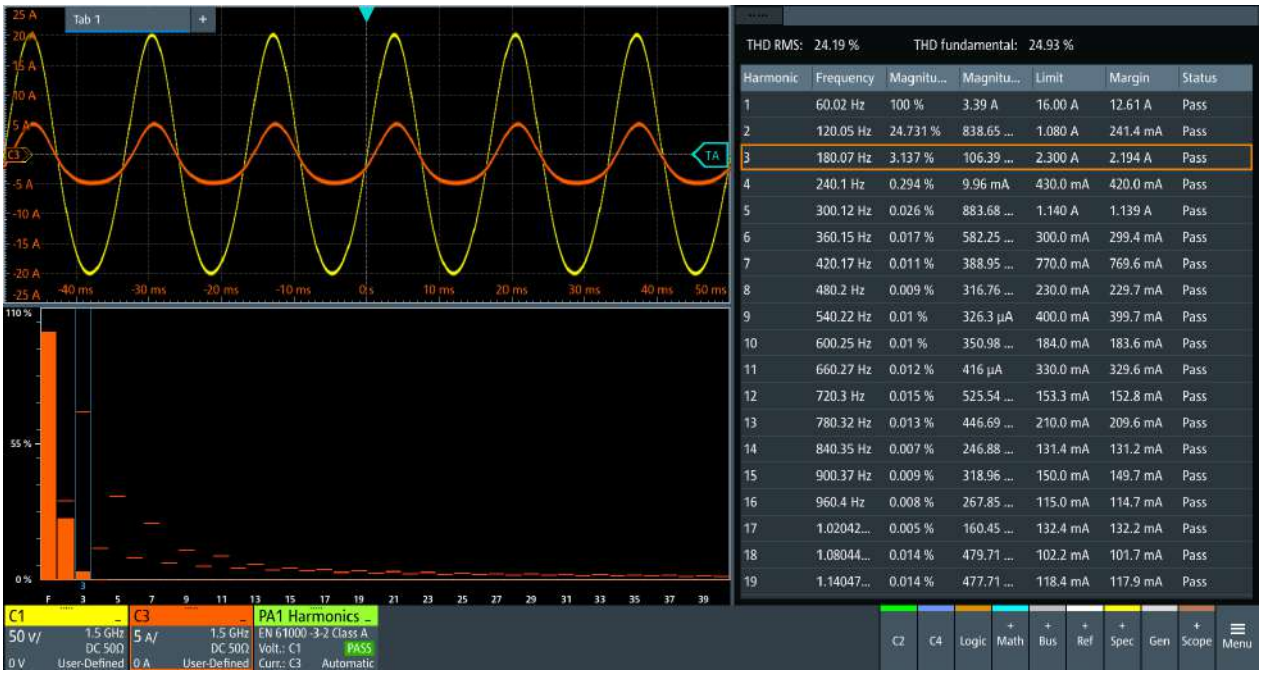

The results of the harmonic measurements are provided in two ways:

- The diagram shows the graphical presentation of the voltage waveform, the current waveform and the power waveform.
- The results are a bar chart and a table with the numerical measurement results. The number of displayed harmonics depends on the standard definition. When you tap on a harmonic in the bar chart, the corresponding row in the result table is highlighted.

The current harmonic results displayed in the result table are defined as follows:

Result table	Bar chart match	Description
THD RMS	-	Total harmonic distortion relative to the RMS amplitude
THD fundamental	-	Total harmonic distortion relative to the fundamental
Harmonic index	Value of the x-axis	The harmonic order
Frequency	-	The frequency value of the signal

Result table	Bar chart match	Description
Magnitude (%)	Value of the y-axis	The present value of the current harmonic
Magnitude (RMS)		The measured RMS value of the magnitude
Limit	Dark orange line	The maxim allowed value according to the selected standard
Margin		Sets the upper limit for the display of the Y scale.
Status	Bar for magnitude below limit has the color of the channel (pass) Bar for magnitude outside limit is orange (fail)	Displays, if the harmonics is within the defined limit (pass) or not (fail).


12.3.4 Switching loss

The switching loss analysis measures the power and energy losses of a switching device. The losses occur during the switching phases and the conduction phase of the switching transistor.

Required probes:

- Differential voltage probe
- Current probe

Phases of the switching cycle

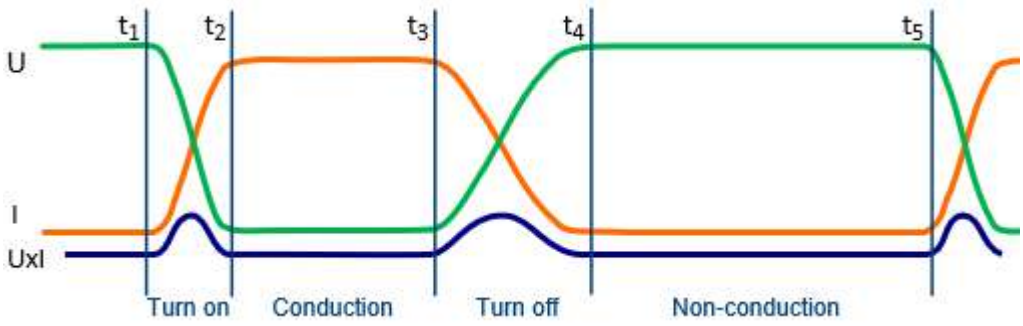


Phase	Definition Points	Description
Turn on	The area between "t_1" and "t_2"	The time after switching on the device, during which the current rises until it reaches the saturation current level.
Conduction	The area between "t_2" and "t_3"	The time during which the voltage is at the transistors saturated minimum and the current flows.

Phase	Definition Points	Description
Turn off	The area between "t_3" and "t_4"	The time during which after a short delay the voltage rises until it reaches its final value.
Non conduction	The area between "t_4" and "t_5"	The time when the current does not flow. The losses during this period should be theoretically zero.

12.3.4.1 Configuring switching loss measurements

For details of the configuration settings, see Section 12.3.4.2, "Switching loss setup", on page 415.

1. Add a switching loss measurement as described in Section 12.3.1.1, "Select power measurements", on page 396.
2. Connect the differential voltage probe and the current probe to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. Connect the probes to the DUT:

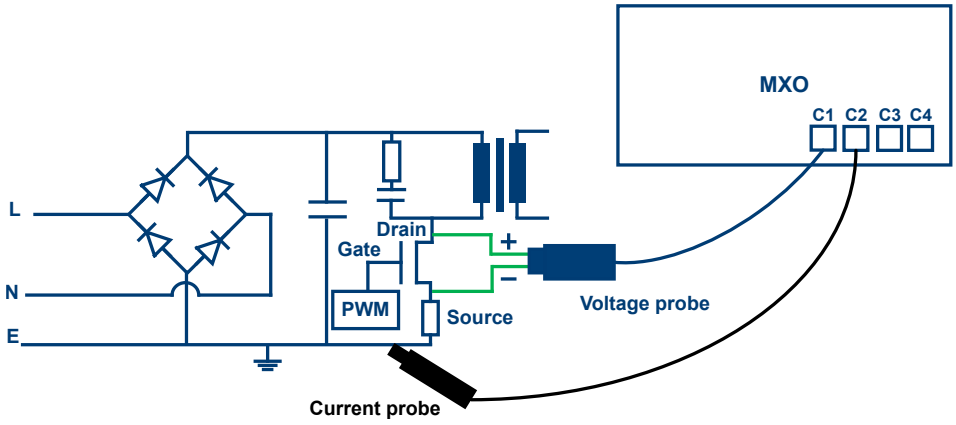


   a) Connect the positive (+) signal socket of the differential voltage probe to the drain of the transistor.
   b) Connect the negative (-) signal socket of the differential voltage probe to the source of the transistor.
   c) Connect the current probe to the source of the transistor.
5. Measure the time points of the switching cycle, for example, using cursor measurements.
6. In the signal bar, tap twice the signal icon of the switching loss power measurement to open its settings dialog.
7. Select the correct channels for the "Voltage" and the "Current" probes.
8. Set the "Unit" for the trace: power or energy.

9. Set the "T<n> position" values.
10. Enable statistics.
11. Select the "Display" tab.
12. Select the measurements that you want to see. You can also change the color of the partial measurements.
13. Select the "Power waveform" tab.
14. Adjust the scale and offset of the resulting trace if necessary.

    On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.3.4.5, "Switching loss results", on page 418.

12.3.4.2 Switching loss setup

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Switching loss" > select "Switching loss" > "Setup".

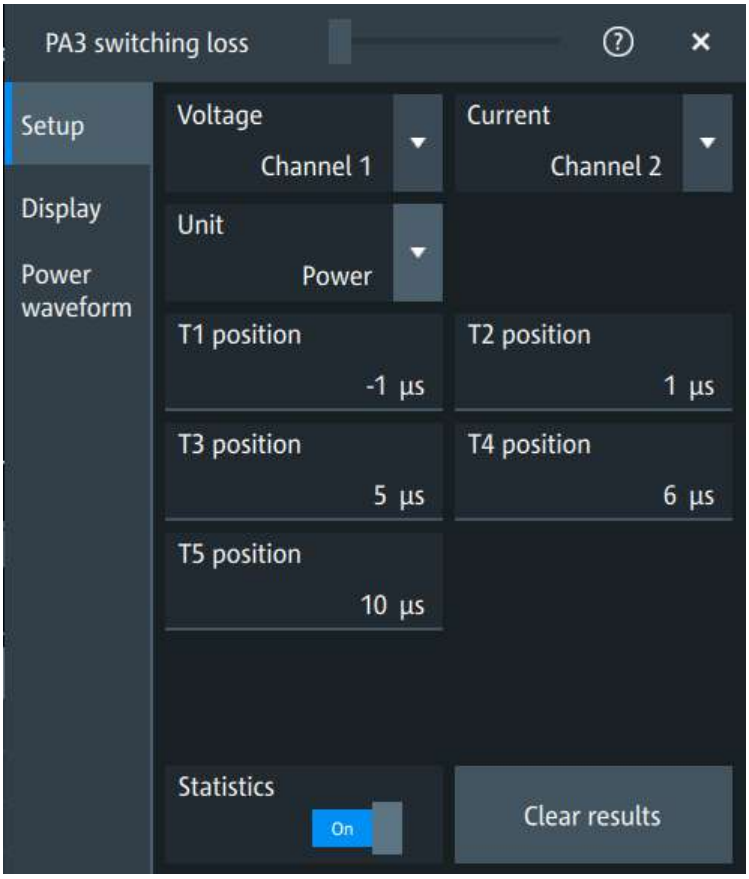

In the "Setup" tab, you configure the switching loss measurement: select the sources, the time points of the switching loss cycle, and if you want to measure either power or energy.

Voltage
Selects the voltage source waveform. Analog channels and math waveforms can be used.

Remote command:
POWer<m>:SWITching:SOURce[:VOLTage] on page 1443

Current
Selects the current source waveform. Analog channels and math waveforms can be used.

Remote command:
POWer<m>:SWITching:SOURce:CURRent on page 1443

Unit
Selects the measurement type: power or energy.

Remote command:
POWer<m>:SWITching:DISPlay:TYPE on page 1444

T<n> position
T1 to T5 define the time points in the switching cycle. You can use cursor measurements to get the time values.

- T1: Start of the turn-on area, and start of the total switching cycle.
- T2: End of the turn-on area, and start of the conduction area.
- T3: End of the conduction area, and start of the turn-off area.
- T4: End of the turn-off area, and start of the non-conduction area.
- T5: End of non-conduction area, and end of the total switching cycle.


See "Phases of the switching cycle" on page 413.

Remote command:
POWer<m>:SWITching:REGion:TOTal[:STARt] on page 1444 (T1)
POWer<m>:SWITching:REGion:TON[:STARt] on page 1444 (T1)
POWer<m>:SWITching:REGion:TON:STOP on page 1444 (T2)
POWer<m>:SWITching:REGion:CONDuction[:STARt] on page 1444 (T2)
POWer<m>:SWITching:REGion:CONDuction:STOP on page 1445 (T3)
POWer<m>:SWITching:REGion:TOFF[:STARt] on page 1445 (T3)
POWer<m>:SWITching:REGion:TOFF:STOP on page 1445 (T4)
POWer<m>:SWITching:REGion:NCONduction[:STARt] on page 1445 (T4)
POWer<m>:SWITching:REGion:NCONduction:STOP on page 1445 (T5)
POWer<m>:SWITching:REGion:TOTal:STOP on page 1445 (T5)

Statistics, Clear results
See "Statistics" on page 403 and "Clear results" on page 403.

12.3.4.3 Switching loss display

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Switching loss" > select "Switching loss" > "Display".

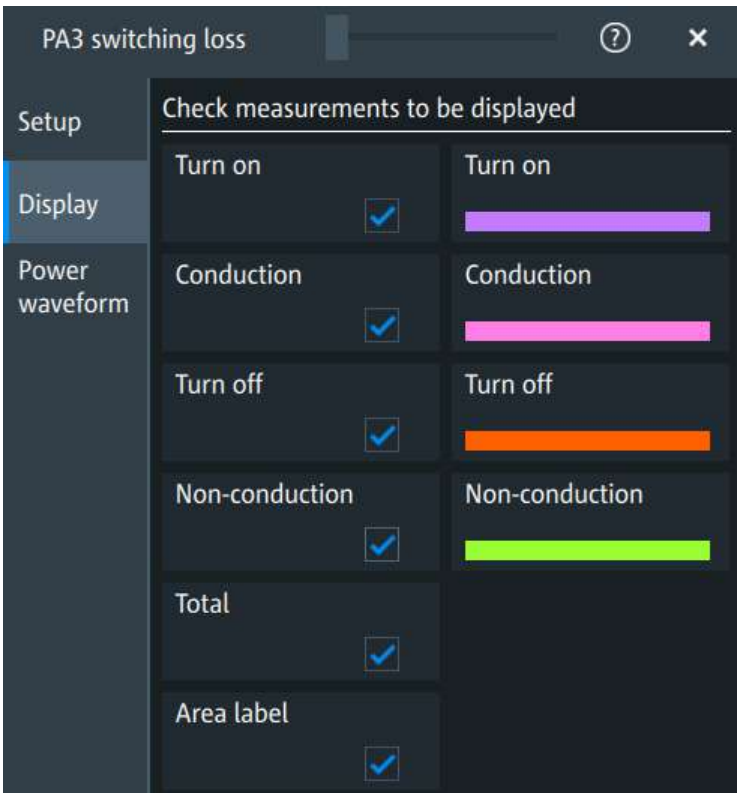

In the "Display" dialog, you select which measurements are performed. The results are displayed in the result table. You can change the colors of the cycle areas in the diagram.

Turn on
Enables the measurements of the turn-on area, and selects the display color.

Remote command:
`POWer<m>:SWITching:DISPlay:TON[:ENABle]` on page 1446
`POWer<m>:SWITching:DISPlay:TON:COLor` on page 1446

Conduction
Enables the measurements of the conduction area, and selects the display color.

Remote command:
`POWer<m>:SWITching:DISPlay:CONDuction[:ENABle]` on page 1446
`POWer<m>:SWITching:DISPlay:CONDuction:COLor` on page 1446

Turn off
Enables the measurements of the turn-off area, and selects the display color.

Remote command:
`POWer<m>:SWITching:DISPlay:TOFF[:ENABle]` on page 1446
`POWer<m>:SWITching:DISPlay:TOFF:COLor` on page 1446

Non-conduction
Enables the measurements of the non-conduction area, and selects the display color.

Remote command:
POWer<m>:SWITching:DISPlay:NCONduction[:ENABle] on page 1446
POWer<m>:SWITching:DISPlay:NCONduction:COLor on page 1446

Total
Enables the measurements of the total switching cycle.

Remote command:
POWer<m>:SWITching:DISPlay:TOTal[:ENABle] on page 1447

Area label
Displays the names of the switching cycle areas.

Remote command:
POWer<m>:SWITching:DISPlay:LABel[:ENABle] on page 1447

12.3.4.4 Power waveform


For a description of the power waveform display and scaling, see Section 12.3.8.3, "Power waveform", on page 443.

12.3.4.5 Switching loss results

The results of switching loss measurements are:

- Voltage waveform
- Current waveform
- Power waveform, which is the product of the current and voltage waveforms.
- Numeric measurement results of the selected measurement type (power or energy). The results are given for each phase of the switching cycle.


See "Phases of the switching cycle" on page 413 for an explanation of the switching cycle.

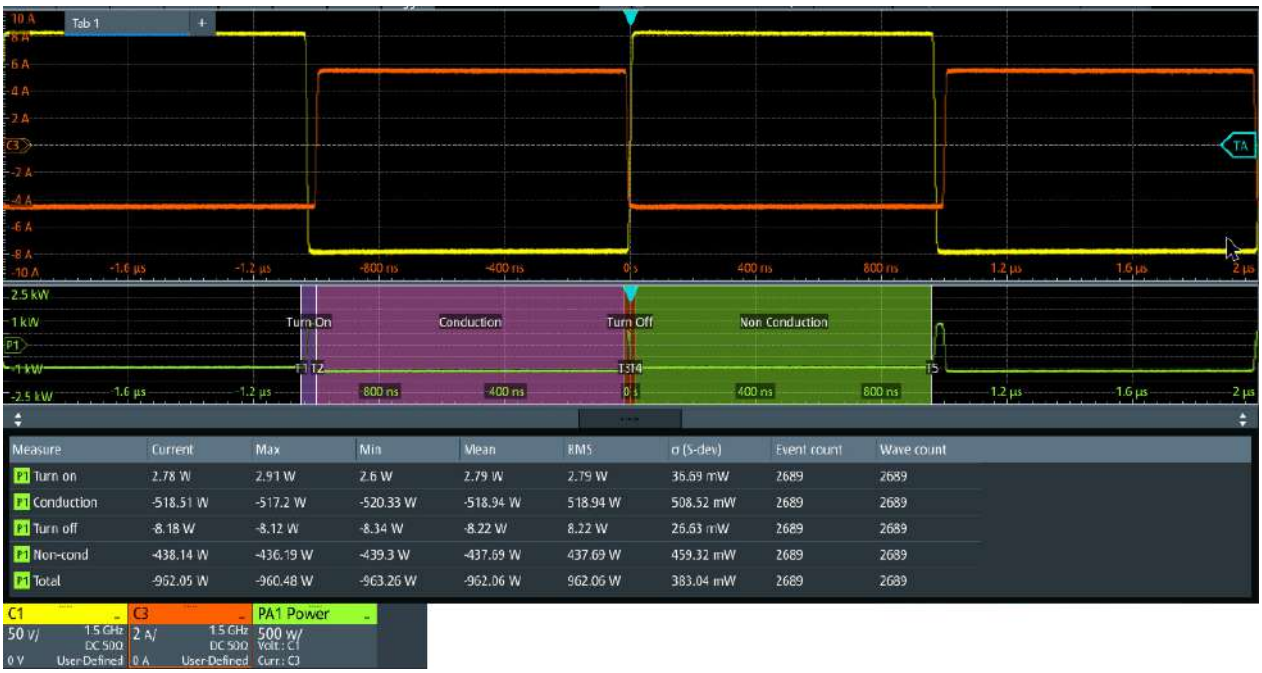

Remote commands are described in "Switching loss results" on page 1447.

12.3.5 Turn on/off time

The turn-on/off time analysis measures the time that a power supply takes to reach a certain output threshold when turned on or turned off. The output thresholds are usually a percentage of the steady state output level: 90% for turn-on, and 10% for turn-off time.

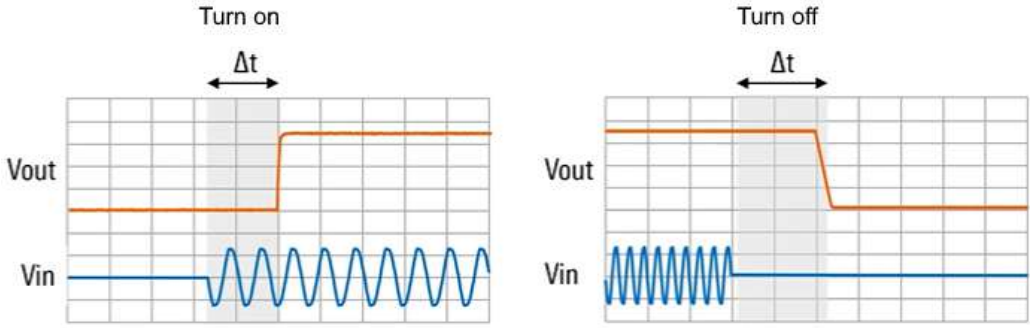

Required probes:

- AC input: differential voltage probe
- DC input: passive or differential voltage probe
- DC output: passive or differential voltage probe
  You can measure several outputs in parallel. The maximum number of output connections depends on the number of channels on the instrument: 3 outputs (4-channel instrument) or 7 outputs (8-channel instrument).

12.3.5.1 Configuring turn on/off time measurements

For details of the configuration settings, see Section 12.3.5.2, "Turn on/off setup", on page 421.

1. Add a turn on/off time measurement as described in Section 12.3.1.1, "Select power measurements", on page 396.
2. Connect all voltage probes to the oscilloscope.
3. Connect the probes to the DUT:

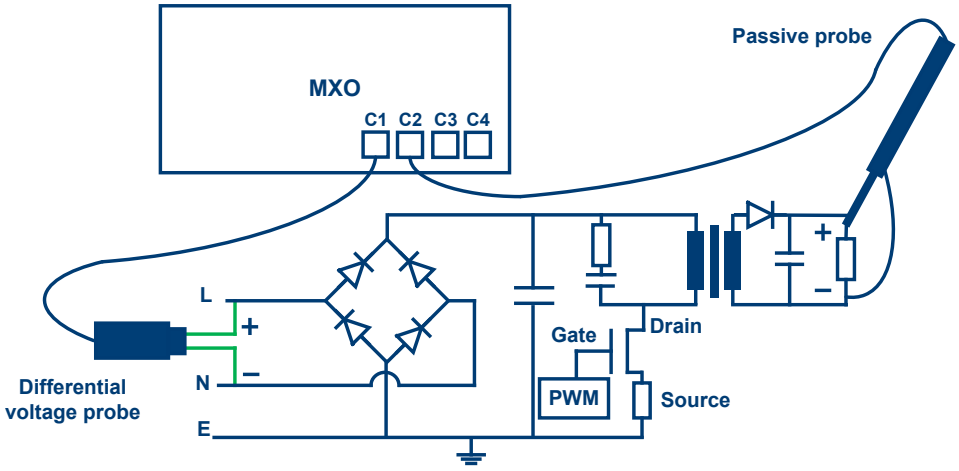


Figure 12-12: Connection with AC input

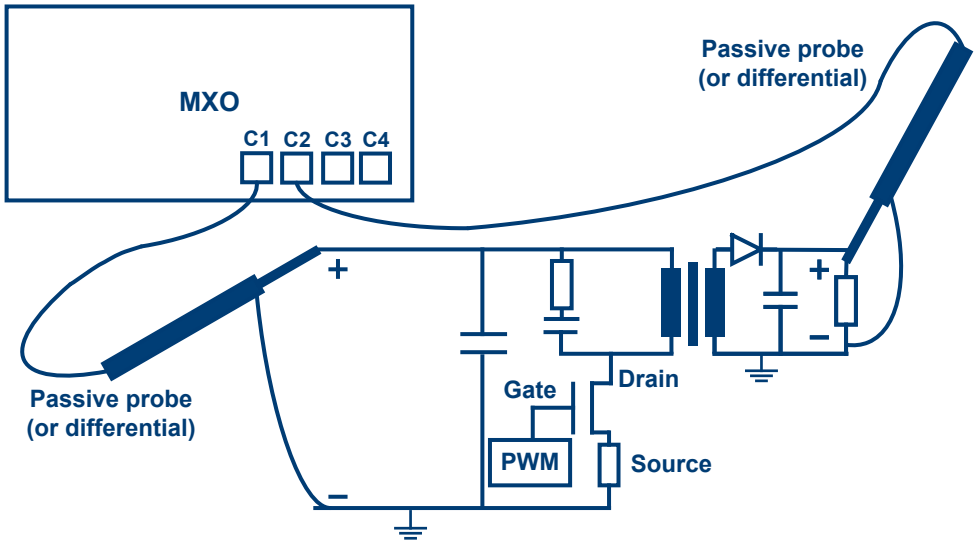


Figure 12-13: Connection with DC input


a) AC input:
Connect the positive (+) signal socket of the differential voltage probe to the line (L) of the AC input.
Connect the negative (-) signal socket of the differential voltage probe to the neutral (N) of the AC input.
b) DC input:
Connect the passive or differential voltage probe to the DC input of the power supply.
c) Outputs:
Connect the passive or differential voltage probes to the DC outputs of the power supply.

4. In the "Analysis" tab, tap the "Turn on/off time" measurement.
5. Configure the input settings:
   a) Select the correct channel for the "Input source".
   b) Select the "Mode" (turn on or turn off) and the "Input type" (AC or DC).
   c) Enter the threshold. The measurement starts when the input signal crosses this threshold.
6. Use the + to add the required number of outputs
7. Configure the outputs. For each output:
   a) Select the correct channel for the "Output source".
   b) Enter the threshold. The measurement stops when the output signal crosses this threshold.
   c) Enable the output signal to see the waveform and the results.
8. Select the "Display" tab.
9. Select the outputs for which you want to see the result lines.

   On the screen, you can see the waveforms of the input and the outputs. Also, the result table with numeric measurement results is shown. For details, see Section 12.3.5.4, "Turn on/off results", on page 424.

12.3.5.2 Turn on/off setup

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Turn on/off time" > select "Turn on/off time" > "Setup".

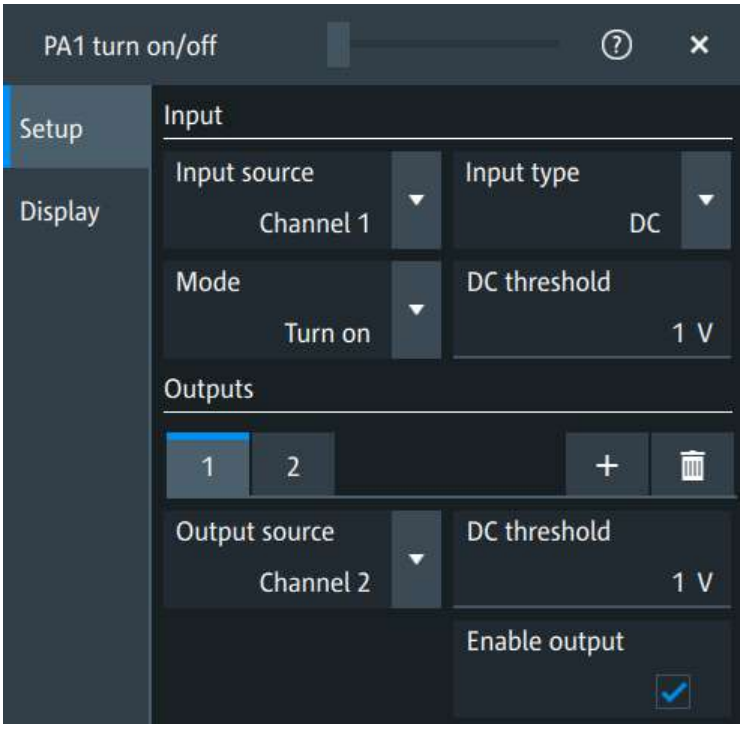

In the "Setup" tab, you configure the turn-on/off time measurement: select the sources, the thresholds, and the measurement.

Input source
Selects the channel of the input signal. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:ONOFf:INPut[:SOURce]` on page 1454

Input type
Selects whether the input signal is AC or CD.

Remote command:
`POWer<m>:ONOFf:INPut:TYPE` on page 1454

Mode
Selects the turn-on or turn-off measurement.

Remote command:
`POWer<m>:ONOFf[:TYPE]` on page 1456

DC threshold
Sets the threshold for the DC input signal.

The time starts when the first edge exceeds a positive threshold value, or falls below a negative threshold value.

Remote command:
`POWer<m>:ONOFf:INPut:DC:ABSolute[:VALue]` on page 1454

AC threshold
Sets the threshold for the AC input signal. You set the absolute value, the instrument uses the positive and negative values of the given absolute value.

The time starts when the signal crosses either the positive threshold value, or the negative value - the first crossing point is considered.

Remote command:
`POWer<m>:ONOFf:INPut:AC:ABSolute[:VALue]` on page 1453

Output source
Selects the channel of the output signal. Analog channels except for the input channel and math waveforms can be used.

You can set up several outputs in parallel. The maximum number of output connections depends on the number of channels on the instrument.

Remote command:
`POWer<m>:ONOFf:OUTPut<n>[:SOURce]` on page 1455

DC threshold
Sets the threshold for the selected output signal.

When the output signal crosses this threshold, the turn-on time ends, or the turn-off time starts.


Remote command:
`POWer<m>:ONOFf:OUTPut<n>:DC:ABSolute[:VALue]` on page 1455

Enable output
Activates the selected output line.

Remote command:
`POWer<m>:ONOFf:OUTPut<n>:DISPlay:RESult[:ENABle]` on page 1455

12.3.5.3 Turn on/off display

For better understanding, you can display result lines for each output separately.

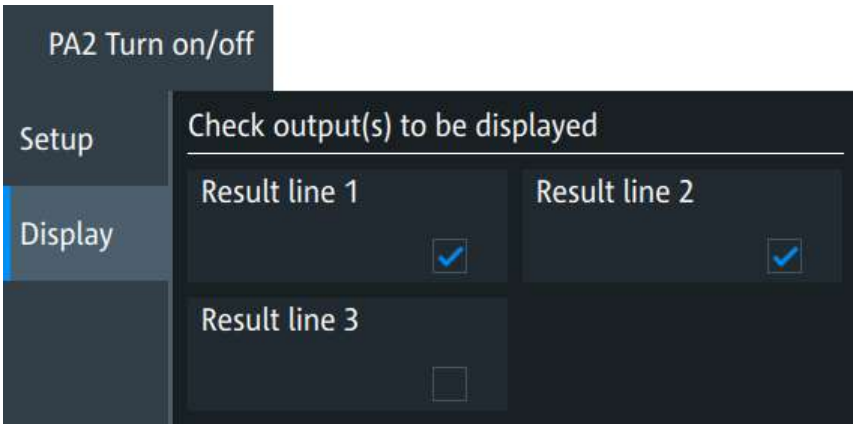

Result line <n>
Enables the display of result lines and threshold for the selected output. Result lines are only visible if the threshold is within the signal amplitude. Start and stop time are displayed with vertical dashed lines.


Remote command:
`POWer<m>:ONOFf:OUTPut<n>:DISPlay:RLINe[:ENABle]` on page 1456

12.3.5.4 Turn on/off results

The results of turn-on/off time measurements are:

- Input waveform
- Output waveforms
- Measured values of turn-on or turn-off time for each input-output pair.

You can visualize the measured points on the waveform, see Section 12.3.5.3, "Turn on/off display", on page 423.

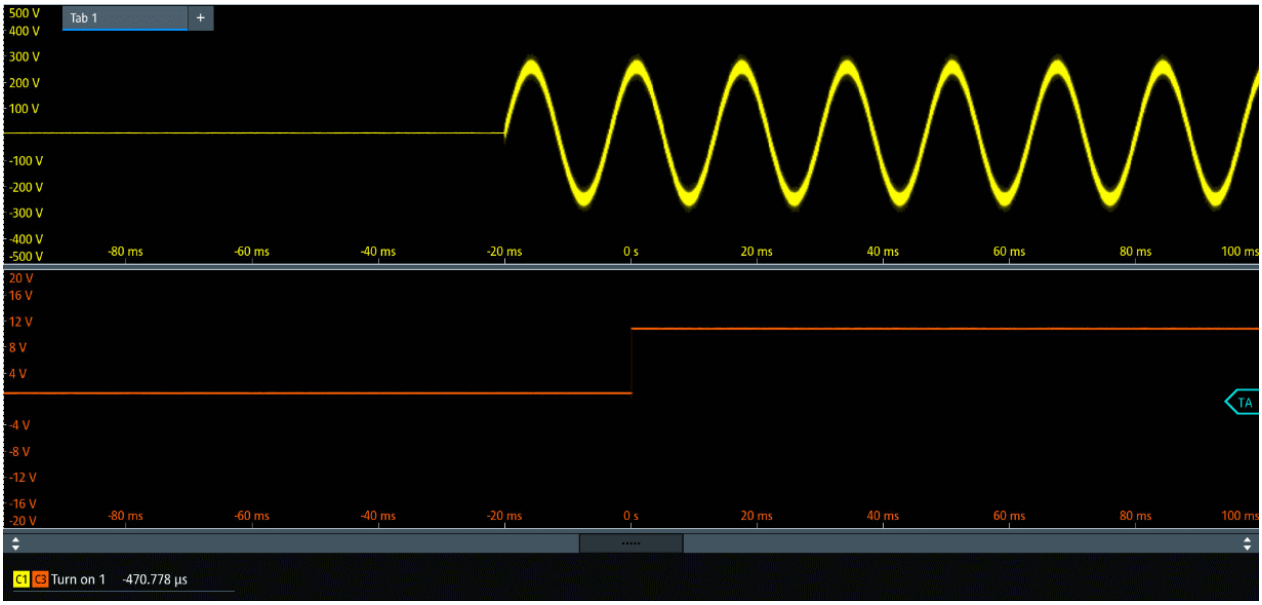

Remote commands are described in "Turn on/off results" on page 1456.

12.3.6 Power efficiency

Power efficiency analysis assesses how effectively a device converts input power into useful output power. It measures the input voltage and current and the output voltage and current, calculates the input and the output power, and the ratio of output power to input power. This ratio percentage is the power efficiency.

Required probes:


- Input: current probe and differential voltage probe
- Output: current probe and differential voltage probe

If your MXO oscilloscope has more than 4 channels, you can measure several outputs in parallel and obtain the total power and efficiency of the DUT. The maximum number of output lines is *Number of channels / 2 - 1*.

12.3.6.1 Configuring power efficiency measurements

For details of the configuration settings, see Section 12.3.6.2, "Power efficiency setup", on page 426.

1. Add a power efficiency measurement as described in Section 12.3.1.1, "Select power measurements", on page 396.
2. Connect the differential voltage probes and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. Connect the probes to the DUT:

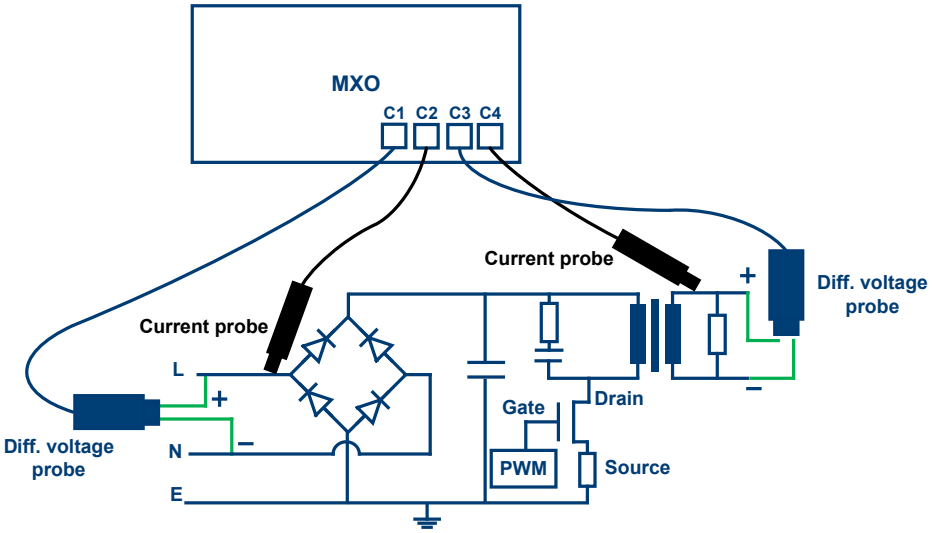

   a) Connect the positive (+) signal socket of the differential voltage probe to the line of the input.
   b) Connect the negative (-) signal socket of the differential voltage probe to the neutral of the input.
   c) Connect the current probe to the line of the input.
   d) Connect a differential voltage probe and a current probe to each output to be measured.
5. In the signal bar, tap twice the signal icon of the efficiency measurement to open its settings dialog.
6. Select the correct channels for the "Voltage" and the "Current" probes of the input and the output.
7. Selects the type of the current flow for input and output: AC or DC: "Input type" and "Output type".

8. Enable statistics.
9. Select the "Display" tab.
10. Select the measurements that you want to see.
11. Select the "Power waveform" tab.
12. Adjust the scale and offset of the resulting waveforms if necessary.

    On the screen, you can see the selected measurement waveforms of the input power and the output power. If your instrument has more than 4 channels and the DUT several outputs, you can see all output power waveforms and the total power if selected. Also, the result table with numeric measurement results is shown. For details, see Section 12.3.6.7, "Efficiency results", on page 430.

12.3.6.2 Power efficiency setup

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Efficiency" > select "Efficiency" > "Setup".



Figure 12-14: Efficieny measurement setup of an 4-channel instrument

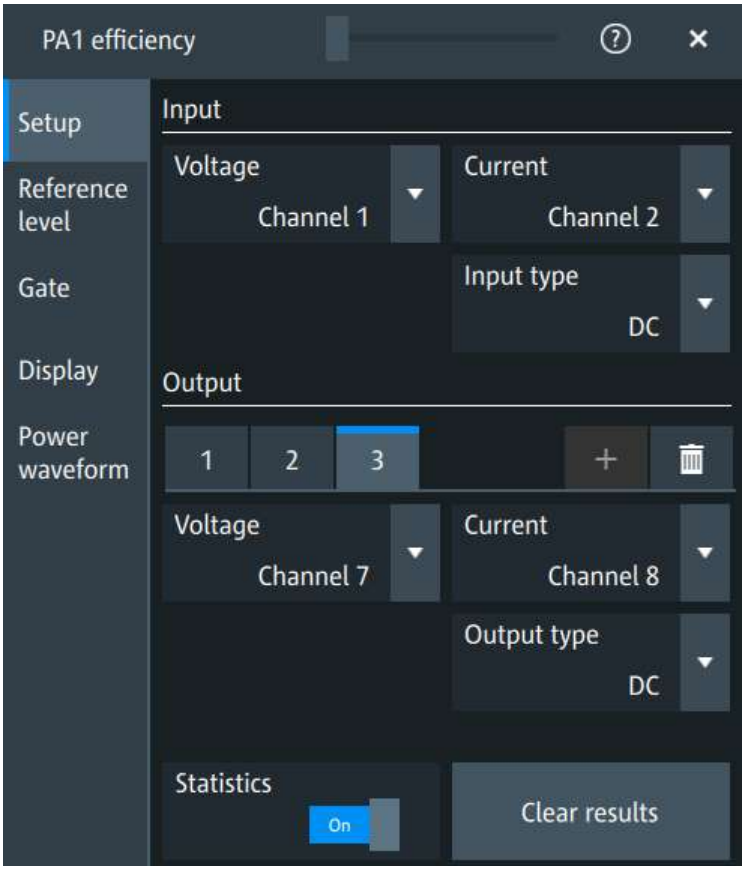


Figure 12-15: Efficieny measurement setup of an 8-channel instrument

In the "Setup" tab, you configure the efficiency measurement: select the sources for input and outputs and select whether they are AC or CD. Using several outputs requires more than 4 input channels. You also enable statistics here.

Voltage (Input)
Selects the voltage source waveform of the input line. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:EFFiciency:INPut<n>:VOLTage[:SOURce]` on page 1457

Current (Input)
Selects the current source waveform of the input line. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:EFFiciency:INPut<n>:CURRent[:SOURce]` on page 1457

Input type
Selects the type of the current flow: AC or DC.

Remote command:
`POWer<m>:EFFiciency:INPut<n>[:TYPE]` on page 1458

Voltage (Output)
Selects the voltage source waveform of the selected output line. Analog channels and math waveforms can be used.

Using several outputs requires more than 4 input channels.

Remote command:
`POWer<m>:EFFiciency:OUTPut<n>:VOLTage[:SOURce]` on page 1459

Current (Output)
Selects the current source waveform of the selected output line. Analog channels and math waveforms can be used.

Using several outputs requires more than 4 input channels.

Remote command:
`POWer<m>:EFFiciency:OUTPut<n>:CURRent[:SOURce]` on page 1458

Output type
Selects the type of the current flow: AC or DC.

Using several outputs requires more than 4 input channels.

Remote command:
`POWer<m>:EFFiciency:OUTPut<n>[:TYPE]` on page 1459

Statistics, Clear results
See "Statistics" on page 403 and "Clear results" on page 403.

12.3.6.3 Reference level

See Section 12.3.8.1, "Reference level", on page 438.

Separate reference level settings are available for input and output. The reference levels take effect only for the AC input and output types.

12.3.6.4 Gate

See Section 12.3.8.2, "Gate settings for power measurements", on page 442.

12.3.6.5 Power efficiency display

In this dialog, you select the power efficiency measurements that you want to display. For more details on the different measurements, see Section 12.3.6.7, "Efficiency results", on page 430.

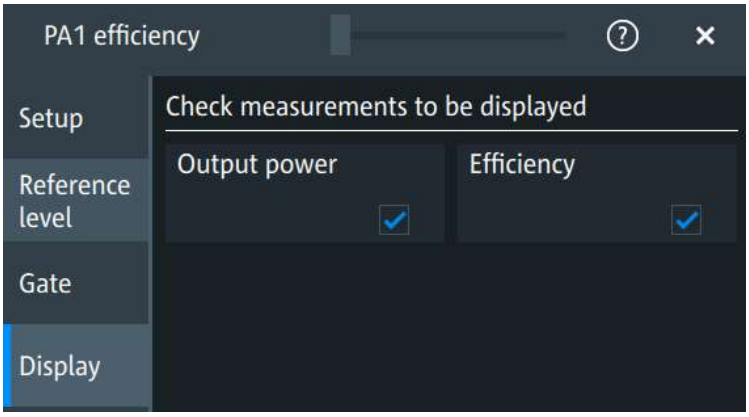


Figure 12-16: Display settings of an 4-channel instrument

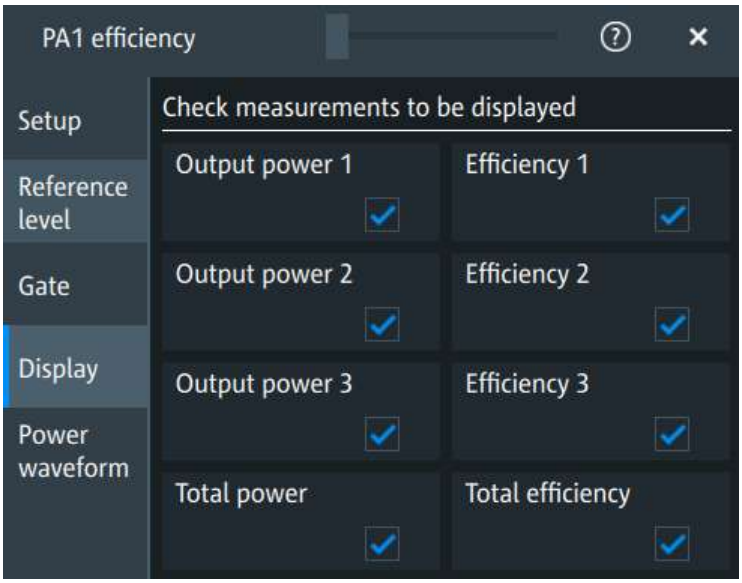


Figure 12-17: Display settings of an 8-channel instrument

Remote commands:

- `POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:EFFiciency[:ENABle]` on page 1460
- `POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:POWer[:ENABle]` on page 1460
- `POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:EFFiciency[:ENABle]` on page 1460
- `POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:OPOWer[:ENABle]` on page 1460

12.3.6.6 Power waveform

You can enable and scale the input, output and total waveforms individually.



Figure 12-18: Waveform settings of an 4-channel instrument

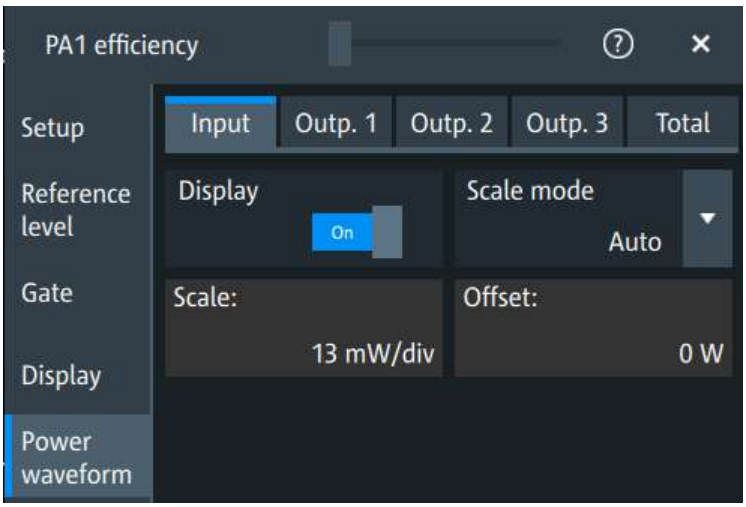


Figure 12-19: Waveform settings of an 8-channel instrument

For a description of the power waveform display and scaling, see Section 12.3.8.3, "Power waveform", on page 443.

12.3.6.7 Efficiency results

The results of efficiency measurements are:

- Input current and voltage waveforms
- Output current and voltage waveforms
- Input power waveform, which is the product of the input current and input voltage waveforms.
- Output power waveforms, which are the products of the corresponding output current and output voltage waveforms.
  Using several outputs requires more than 4 input channels.
- Total power waveform, which is the sum of the output power values.

Total power requires more than 4 input channels.

- Numeric measurement results of input power, output power, total power and efficiencies. The total efficiency is the ratio of input power to the sum of output power values.

If the input or output type is set to AC, the period is measured on the AC voltage source. If one of these measurements fails, the efficiency result is invalid.

If statistics are enabled, every period for an AC source is analyzed. Without statistics, only the first period is analyzed.

Remote commands are described in section "Efficiency results" on page 1460.

12.3.7 Safe operating area (SOA)

The safe operating area (SOA) analysis is defined by the voltage and current conditions over which a power semiconductor device is expected to operate without self-damage. The safe operating area analysis provides a diagram of the safe operating conditions of your DUT.

In parallel to the time domain diagram, an XY-plot is created, with voltage points on the x-axis, while current is shown on the y-axis. The XY-plot is tested against a mask, which represents the safe operating area.


Required probes:

- Differential voltage probe
- Current probe

12.3.7.1 Configuring SOA measurements

For details of the configuration settings, see Section 12.3.7.2, "SOA setup", on page 432 and Section 12.3.7.3, "SOA masks", on page 434.

1. Add a SOA measurement as described in Section 12.3.1.1, "Select power measurements", on page 396.
2. Connect the differential voltage probes and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. Connect the probes to the DUT:

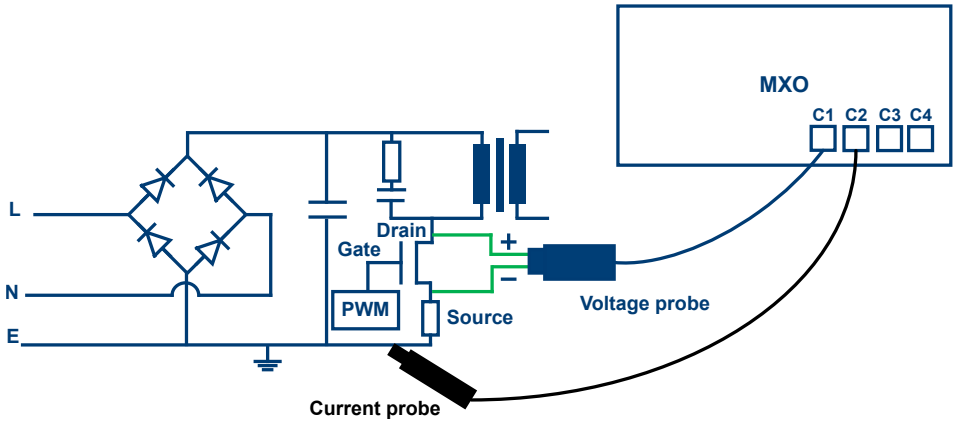

a) Connect the positive (+) signal socket of the differential voltage probe to the drain of the transistor.
b) Connect the negative (-) signal socket of the differential voltage probe to the source of the transistor.
c) Connect the current probe to the source of the transistor.


5. In the signal bar, tap twice the signal icon of the SOA measurement to open its settings dialog.
6. Select the correct channels for the "Voltage" and the "Current" probes.
7. If a SOA mask is already available, select "Open" and load the mask.
8. If no mask is available, select "Edit segments". Create the mask segments, either under "Predefined" or "Limit".

   Both segment types can be combined in one mask. For more information on predefined masks, see also Section 12.1.5, "Actions on mask test results", on page 364.
9. "Save mask" if you want to keep it for further tests.
10. Select the "Action" tab.
11. Select the actions to be initiated on mask violation or successful completion of the test. You can select several actions.
12. Run the acquisitions.

    On the screen, you can see the voltage and current waveforms and the XY-diagram with the mask. Also, the result table with numeric measurement results and the test status is shown. For details, see Section 12.3.7.5, "SOA results", on page 437.

12.3.7.2 SOA setup

Access: "Menu" > "Apps" > "Power" > "+ Add" > "SOA" > select "SOA" > "Setup".

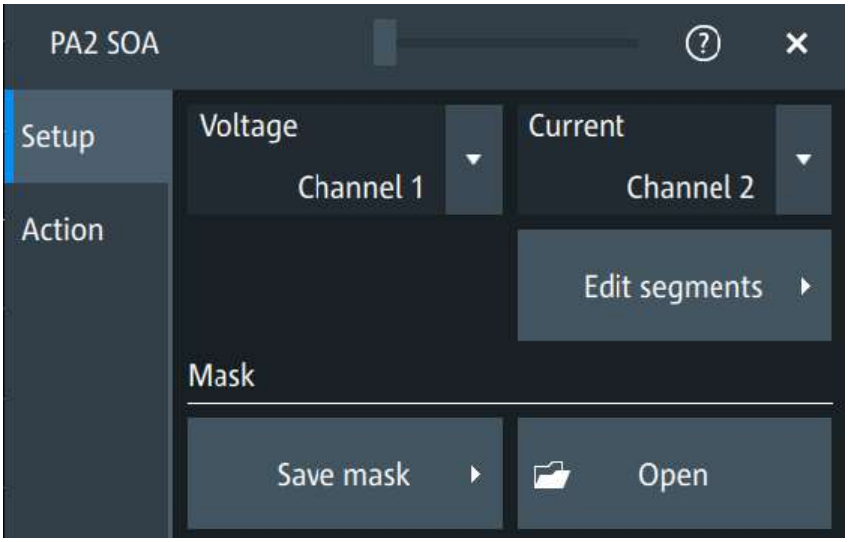

In the "Setup" tab, you configure the SOA measurement: select the sources, load and save the mask, and start creating a mask.

Voltage
Selects the voltage source waveform. Analog channels and math waveforms can be used.

In the SOA diagram, voltage points are plotted on the x-axis.

Remote command:
`POWer<m>:SOA:SOURce:VOLTage` on page 1465

Current
Selects the current source waveform. Analog channels and math waveforms can be used.

In the SOA diagram, current is plotted on the y-axis.

Remote command:
`POWer<m>:SOA:SOURce:CURRent` on page 1465

Edit segments
Opens a dialog to create and configure the SOA mask. See Section 12.3.7.3, "SOA masks", on page 434.

Save mask
Define the storage location and filename, and save the mask.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the mask file is always `.xml`.

"Save" Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

"Save As" Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

Remote command:
POWer<m>:SOA:MTESt<n>:IMEXport:NAME on page 1464
POWer<m>:SOA:MTESt<n>:IMEXport:SAVE on page 1464

Open
Opens a file explorer to select a previously stored mask file. The selected mask is loaded.


Remote command:
POWer<m>:SOA:MTESt<n>:IMEXport:NAME on page 1464
POWer<m>:SOA:MTESt<n>:IMEXport:OPEN on page 1464

12.3.7.3 SOA masks

Access: "Menu" > "Apps" > "Power" > "+ Add" > "SOA" > select "SOA" > "Setup" > "Edit segments".

You can define and edit 1 mask with up to 4 segments.

Predefined
To create a predefined mask, you select the shape of a mask segment, add it and then edit the positions of the corner points.

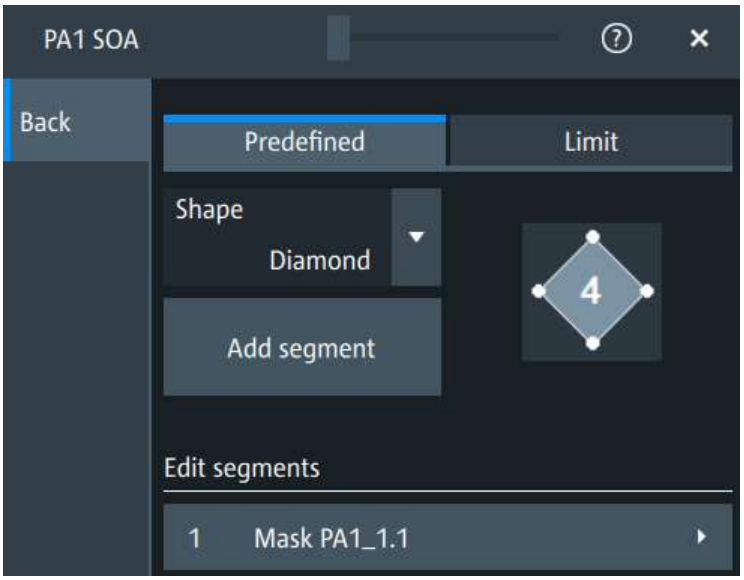

Shape ← Predefined
Selects the shape of the SOA mask: rectangle, diamond, hexagon, octagon.

Add segment ← Predefined
Adds a new segment with the selected shape to the mask. To adjust the size and position of the mask segment, select the segment and configure it. The procedure is the same as in the mask test application. See "Add segment" on page 361 and "Edit segments" on page 362.

Remote command:
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:ADD` on page 1467
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:COUNt?` on page 1467
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove` on page 1470

Edit segments
Dialog to edit the mask segment. For each segment, you define the coordinates of the corner points. You can add and remove points and define the shape as needed.

The table shows the horizontal and vertical positions of the corner points. You can change each value.


Remote command:
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X` on page 1469
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y` on page 1469

Add + ← Edit segments
Appends a new point to the segment. You cannot change the order of the points.

Remote command:
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD` on page 1467
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:COUNt?` on page 1468
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:REMove` on page 1468
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:VALid?` on page 1468

Segment name ← Edit segments
Enter a name for the selected mask segment.

Limit
You can use the values I_{max}, V_{max} and P_{max} from the transistor specification to calculate a mask. I_{max}, V_{max} and P_{max} must be positive values. The result is a mask segment in the first quadrant of the XY-diagram. You can change the generated segment like other segments: move, add and remove points.

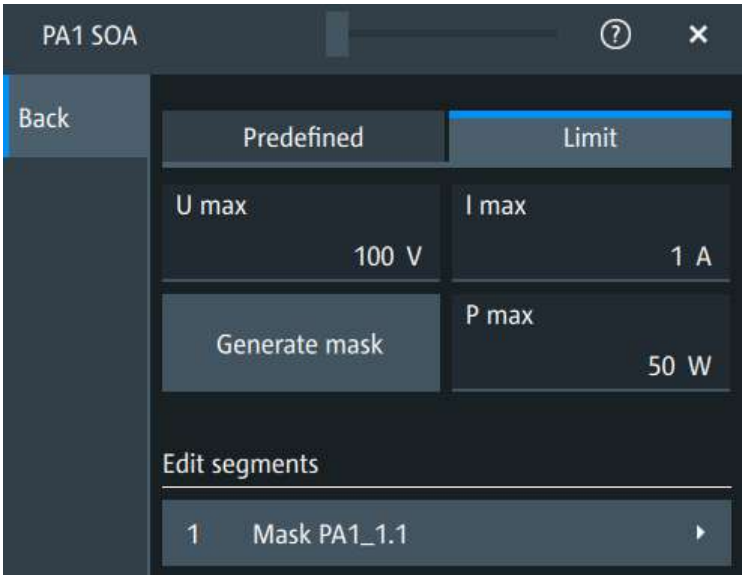

U max ← Limit
Sets the maximum voltage for the mask. The value must be positive.

Remote command:
`POWer<m>:SOA:LIMit:VMAX` on page 1466

I max ← Limit
Sets the maximum current for the mask. The value must be positive.

Remote command:
`POWer<m>:SOA:LIMit:IMAX` on page 1466

P max ← Limit
Sets the maximum power for the mask. The value must be positive.


Remote command:
`POWer<m>:SOA:LIMit:PMAX` on page 1466

Generate mask ← Limit
Generates a mask using the given maximum values. The result is a mask segment in the first quadrant of the XY-diagram.

Remote command:
`POWer<m>:SOA:LIMit:APPLy` on page 1465

12.3.7.4 SOA actions

The safe operating analysis uses the same actions as the general mask test. For details, see Section 12.1.5, "Actions on mask test results", on page 364.

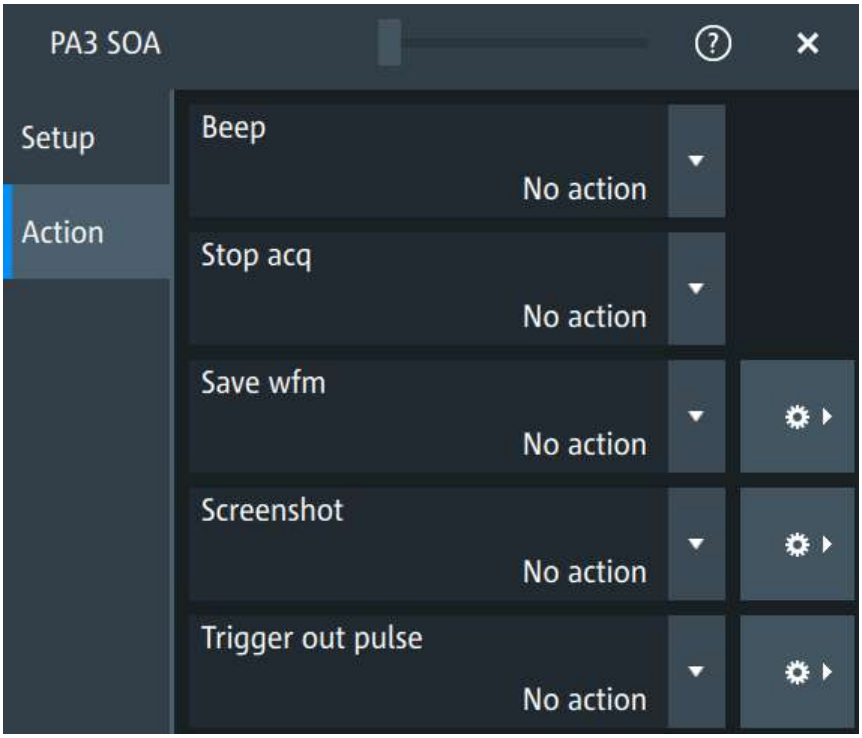

12.3.7.5 SOA results

The results of safe operating area measurements are provided in the following ways:

- Voltage source waveform and current source waveform in the diagram
- A logarithmic or linear XY-diagram of the voltage (x-axis) and current (y-axis) waveforms. This XY-diagram is a graphical representation of the power handling capability of the DUT under various conditions.
- If a power waveform in the XY diagram violates a mask, the violation is marked.
- The result table provides the numeric results of the SOA mask test.

Table 12-2: Results of the SOA test

Result	Description
Total acq.	Number of tested acquisitions (waveforms)
Passed acq.	Number of acquisitions that have passed the mask test, i.e. they are within the defined safe operating area mask
Failed acq.	Number of acquisitions that have failed the mask test, i.e. they are out of the defined safe operating area mask
Fail rate	Ratio of failed acquisitions to the number of tested acquisitions in %
Result	Summary test status: Pass or Fail

Remote commands are described in "SOA results" on page 1472.

12.3.8 Common functions for power measurements

12.3.8.1 Reference level

Some power analysis measurements require reference levels to obtain the measurement points. Power analysis uses its own reference level set, which is independent from other measurements and is used for all power measurements.

To ensure that the correct value for the period is used for the measurements, the period is determined on a voltage channel first. This period value is then applied wherever it is required to the current waveform and to the power (Math) waveform.

In power efficiency measurements, separate reference level settings are available for input and outputs. The reference levels take effect only for the AC input and output types.



Figure 12-20: Relative reference level

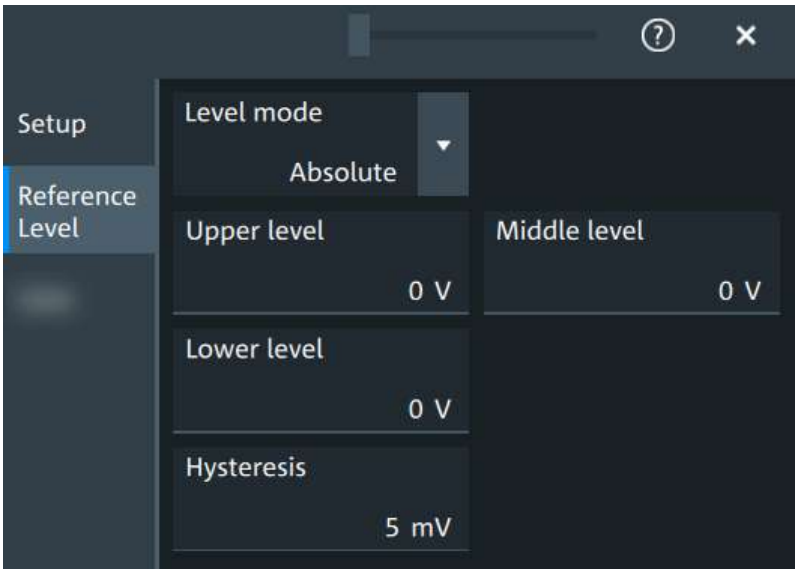


Figure 12-21: Absolute reference level

Level mode
Defines if the reference level is set in absolute or relative values.

Remote command:
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe on page 1479
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe on page 1479
POWer<m>:HARMonics:REFLevel<rl>:LMODe on page 1479
POWer<m>:QUALity:REFLevel<rl>:LMODe on page 1479
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe on page 1543
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe on page 1543
P3PHase<m>:HARMonics:REFLevel<rl>:LMODe on page 1543
P3PHase<m>:QUALity:REFLevel<rl>:LMODe on page 1543
P3PHase<m>:MDRive:INPut:REFLevel<rl>:LMODe on page 1543
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:LMODe on page 1543

Absolute Level mode
In the absolute mode, the reference values are set as voltages, in absolute values.

Upper level, Middle level, Lower level ← Absolute Level mode
Sets the low, middle and upper reference signal levels.

Remote command:
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel on page 1478
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel on page 1478
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel on page 1479
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel on page 1478
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel on page 1478
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel on page 1479
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel on page 1478
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel on page 1478
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel on page 1479
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel on page 1478
POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel on page 1478
POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel on page 1479
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel on page 1542
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel on page 1542
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel on page 1542
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel on page 1542
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel on page 1542
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel on page 1543

P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel on page 1542
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel on page 1542
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel on page 1543
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel on page 1542
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel on page 1542
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel on page 1543
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:LLEVel on page 1541
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:MLEVel on page 1542
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:ULEVel on page 1542
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:LLEVel on page 1541
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:MLEVel on page 1542
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:ULEVel on page 1542

Relative Level mode
In the relative mode, the reference values are set as percentages of the signal amplitude.

Relative levels ← Relative Level mode
Selects the lower, middle and upper reference levels, defined as percentages of the signal amplitude.

Available relative levels:

- 5/50/95
- 10/50/90
- 20/50/80
- User defined: Enter "Upper level", "Middle level", and "Lower level".

For example, for "5/50/95" the levels are set to the following values:

- Lower level = 5% of the signal amplitude
- Middle level = 50% of the signal amplitude
- Upper level = 95% of the signal amplitude

Remote command:
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE on page 1481
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE on page 1481
POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE on page 1481
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE on page 1481
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE on page 1545
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE on page 1545
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE on page 1545
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MODE on page 1545
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:MODE on page 1545
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:MODE on page 1545

Upper level, Middle level,Lower level ← Relative Level mode
Define the reference levels in percent, if "Level mode" is set to "User-defined".

Remote command:
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer on page 1480
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle on page 1480
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer on page 1482
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer on page 1480
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle on page 1480
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer on page 1482
POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer on page 1480
POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDle on page 1481
POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer on page 1482
POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer on page 1480
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle on page 1481
POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer on page 1482
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer on page 1544
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle on page 1544
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer on page 1546
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer on page 1544
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle on page 1544
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer on page 1546
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer on page 1544
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle on page 1544
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer on page 1546
P3PHase<m>:QUALity:REFLevel<rl>:RELative:LOWer on page 1544
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MIDDle on page 1544
P3PHase<m>:QUALity:REFLevel<rl>:RELative:UPPer on page 1546
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:LOWer on page 1544
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:MIDDle on page 1544
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:UPPer on page 1546
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:LOWer on page 1544
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:MIDDle on page 1544
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:UPPer on page 1546


Hysteresis
Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Remote command:
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis on page 1477
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis on page 1479
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis on page 1477
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis on page 1479
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis on page 1477
POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis on page 1480
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis on page 1477
POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis on page 1480
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis on page 1541
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis on page 1543
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis on page 1541
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis on page 1543
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis on page 1541
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis on page 1543
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis on page 1541
P3PHase<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis on page 1543
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:HYSTeresis on page 1541
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:HYSTeresis on page 1543
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:HYSTeresis on page 1541
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:HYSTeresis on page 1543

12.3.8.2 Gate settings for power measurements

Access: Select power measurement > "Gate".

You can limit the some power measurement to a user-defined range of the waveform. In the "Gate" tab, you select the gate to be used for the selected power analysis. If no gate has been defined before, or the correct gate is missing, select "Gate setup" and configure the gate. See Section 8.3, "Gate setup", on page 224 for details.

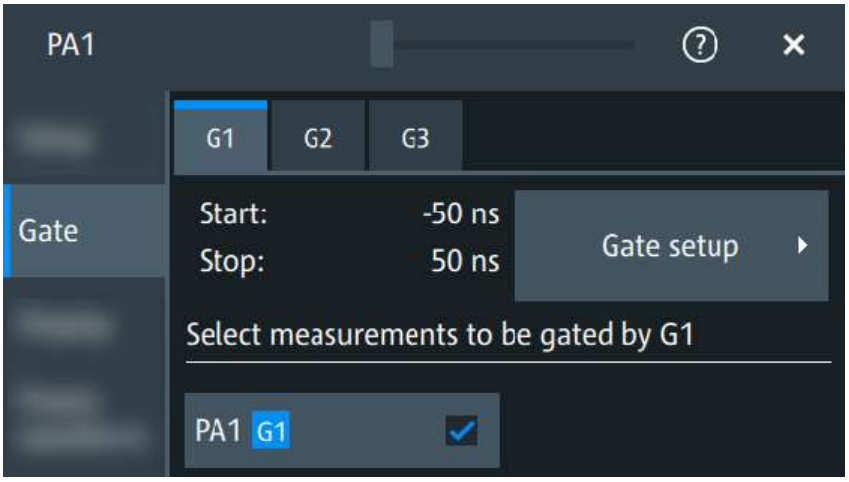

Remote commands:

- POWer<m>:EFFiciency:GATE on page 1459
- POWer<m>:QUALity:GATE on page 1423
- P3PHase<m>:EFFiciency:GATE on page 1535
- P3PHase<m>:QUALity:GATE on page 1535
- P3PHase<m>:MDRive:GATE on page 1535

12.3.8.3 Power waveform

Some power analysis measurements create a power waveform as one of the measurement results.

In the "Power waveform" dialog, you can change the scaling of the power waveform.



Display
Displays or hides the power waveform.

Remote command:
POWer<m>:EFFiciency:DISPlay:WAVeform:INPut<n>:POWer[:ENABle] on page 1474
POWer<m>:EFFiciency:DISPlay:WAVeform:OUTPut<n>:POWer[:ENABle] on page 1474

POWer<m>:EFFiciency:DISPlay:WAVeform:TOTal<n>:OPOWer[:ENABle] on page 1474
POWer<m>:HARMonics:DISPlay:POWer:WAVeform:ENABle on page 1474
POWer<m>:QUALity:DISPlay:POWer:WAVeform:ENABle on page 1474
POWer<m>:SWITching:DISPlay:POWer:WAVeform[:ENABle] on page 1474

Scale mode
Selects the scaling mode for display of the resulting waveform. By default, the instrument selects the most appropriate scale. In "Manual" mode, you can change the vertical scale and offset.

Remote command:
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE on page 1475
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE on page 1475
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe:MODE on page 1475
POWer<m>:HARMonics:POWer:VERTical:SCALe:MODE on page 1475
POWer<m>:QUALity:POWer:VERTical:SCALe:MODE on page 1475
POWer<m>:SWITching:POWer:VERTical:SCALe:MODE on page 1475

Scale
Sets the vertical scale of the resulting power waveform if "Scale mode" is set to "Manual".

Remote command:
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue] on page 1476
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue] on page 1476
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe[:VALue] on page 1476
POWer<m>:HARMonics:POWer:VERTical:SCALe[:VALue] on page 1476
POWer<m>:QUALity:POWer:VERTical:SCALe[:VALue] on page 1476
POWer<m>:SWITching:POWer:VERTical:SCALe[:VALue] on page 1476

Offset
Sets the offset of the resulting power waveform if "Scale mode" is set to "Manual".

Remote command:
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet on page 1475
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet on page 1475
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:OFFSet on page 1475
POWer<m>:HARMonics:POWer:VERTical:OFFSet on page 1475
POWer<m>:QUALity:POWer:VERTical:OFFSet on page 1475
POWer<m>:SWITching:POWer:VERTical:OFFSet on page 1475

12.4 3-phase power and motor drive analysis (options R&S MXO5-K333/K360)

With the MXO 5 and option R&S MXO5-K333, you can perform 3-phase power and motor drive measurements.

For best measurement results, we recommended setting channel Bandwidth = 20 MHz.

If using the HD mode, we recommended setting Bandwidth = 100 MHz.

- 3-phase power analysis initial settings....445
- Common functions for 3-phase power measurements....447
- 3-phase power quality....455
- 3-phase power harmonics....461
- 3-phase power efficiency....468
- 3-phase power motor drive analysis....472

12.4.1 3-phase power analysis initial settings

In the main "3-phase" dialog, you select the required power measurements, align the channels and set the offset compensation to get correct measurements.

12.4.1.1 Select 3-phase measurements


In the "Analysis" tab, you select the 3-phase measurements.

You can add up to 6 3-phase measurements, including several instances of the same measurement.

From here, you can access the settings for the enabled 3-phase measurements.


To add a new 3-phase measurement

1. Select the "Menu" > "Apps" > "General" tab > "3-phase".
2. In the "Analysis" tab, select "+ Add".

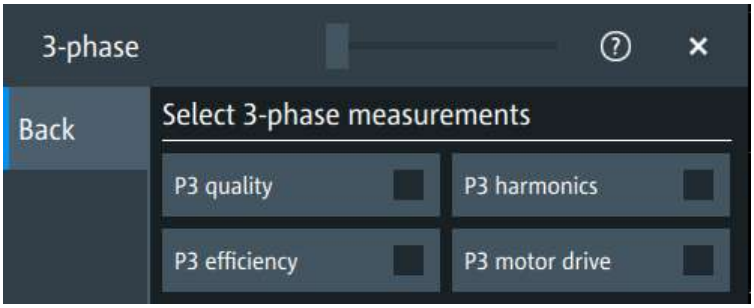

3. Select a 3-phase measurement on the list to enable it.
4. Select "+ Add" to add the selected measurements.


All selected measurements are enabled.

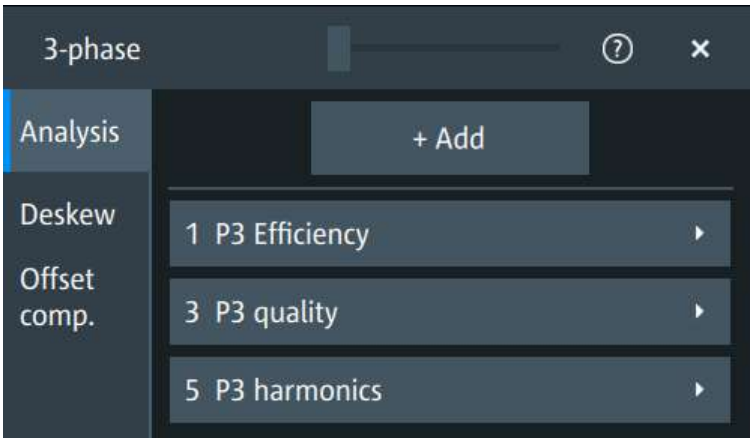

To delete a 3-phase measurement

1. Select the "Menu" > "Apps" > "General" tab > "3-phase", to open the 3-phase measurement dialog.
2. In the "Analysis" tab, select .

   A delete icon appears next to each measurement.

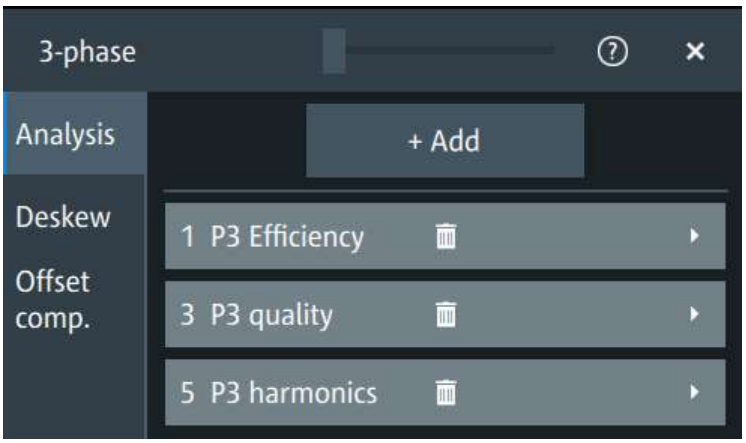

3. Select the power measurement that you want to delete. Alternatively, select "Delete All" to delete all measurements.

+ Add
Opens a dialog to select the 3-phase measurements. See "To add a new 3-phase measurement" on page 445.

Remote command:
`P3PHase<m>[:ENABle]` on page 1484
`P3PHase<m>:TYPE` on page 1484

12.4.1.2 Deskew

See Section 12.3.1.2, "Deskew", on page 398.

12.4.1.3 Offset compensation

See Section 12.3.1.3, "Offset compensation", on page 399.

12.4.2 Common functions for 3-phase power measurements

12.4.2.1 3-phase power sources

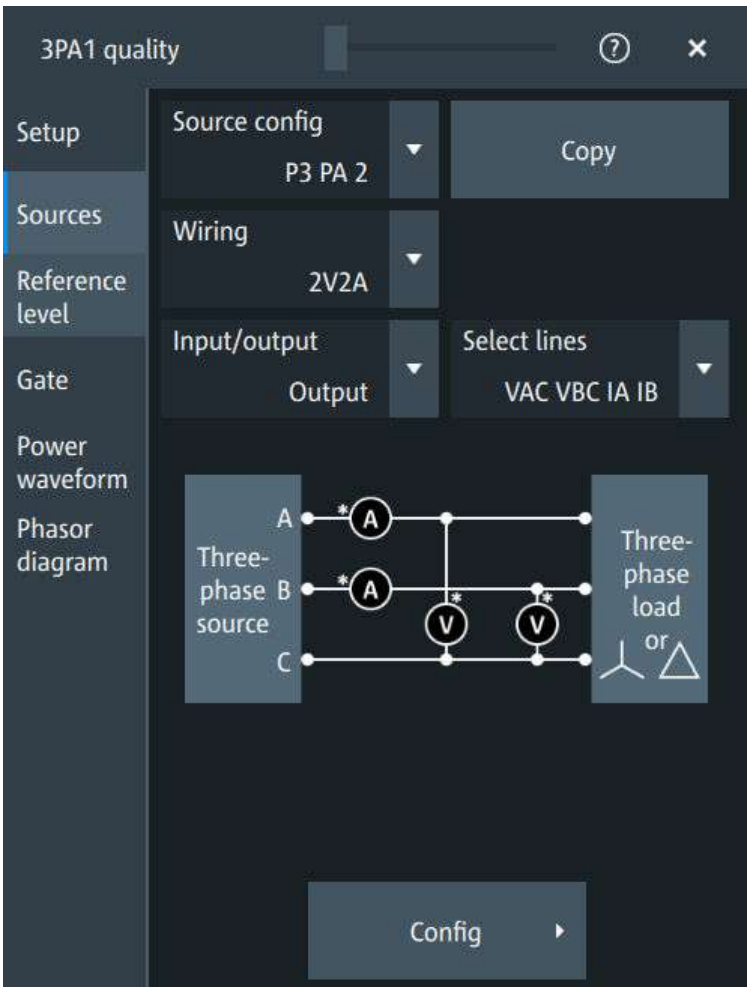


Figure 12-22: 3-phase quality source configuration (also applicable to the other 3-phase measurements)

Source config
Select a source configuration previously defined for another 3-phase measurement.

Copy
Copies the selected source configuration to the current configuration.

Type
Selects the type of the current flow for the input and output channel: AC or DC. Only available for the efficiency measurement.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:TYPE on page 1531
P3PHase<m>:EFFiciency:OUTPut<n>:TYPE on page 1531
P3PHase<m>:MDRive:INPut:ELECtrical:TYPE on page 1531
P3PHase<m>:MDRive:OUTPut:ELECtrical:TYPE on page 1531

Wiring
Configures how you connect the probes to the three-phase device. For quality and harmonics measurements, this setting also shows the corresponding connection diagram for correct setup.

- "1V1A": Measures one line-to-line voltage and its corresponding phase current; the instrument assumes a single-phase system.
- "2V2A": Measures two line-to-line voltages and two phase currents; the third voltage and current are derived and the full three-phase power is computed.
- "3V3A": Measures the voltages and currents of all three phases directly
- "3VN3A": The voltages are measured against the neutral line and the currents in the individual phases.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:WIRing on page 1531
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:WIRing on page 1531
P3PHase<m>:HARMonics:SOURce:WIRing on page 1531
P3PHase<m>:QUALity:SOURce:WIRing on page 1531
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:WIRing on page 1531
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:WIRing on page 1531

Input/output
Configures whether the oscilloscope is configured to receive signals (input) for analysis, or to generate signals output) as a source for testing. Only available for the quality and harmonics measurements.


Remote command:
P3PHase<m>:HARMonics:SOURce:INOut on page 1532
P3PHase<m>:QUALity:SOURce:INOut on page 1532

Select lines
Select the configuration for your probe setup. The visualization is adapted accordingly. This setting is only available for "Wiring"="2V2A".

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:LINes:W2V2a on page 1532
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:LINes:W2V2a on page 1532
P3PHase<m>:HARMonics:SOURce:LINes:W2V2a on page 1532
P3PHase<m>:QUALity:SOURce:LINes:W2V2a on page 1532

P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:LINes:W2V2a on page 1532
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W2V2a on page 1533

Config or Source config
Opens the "Source config" dialog.

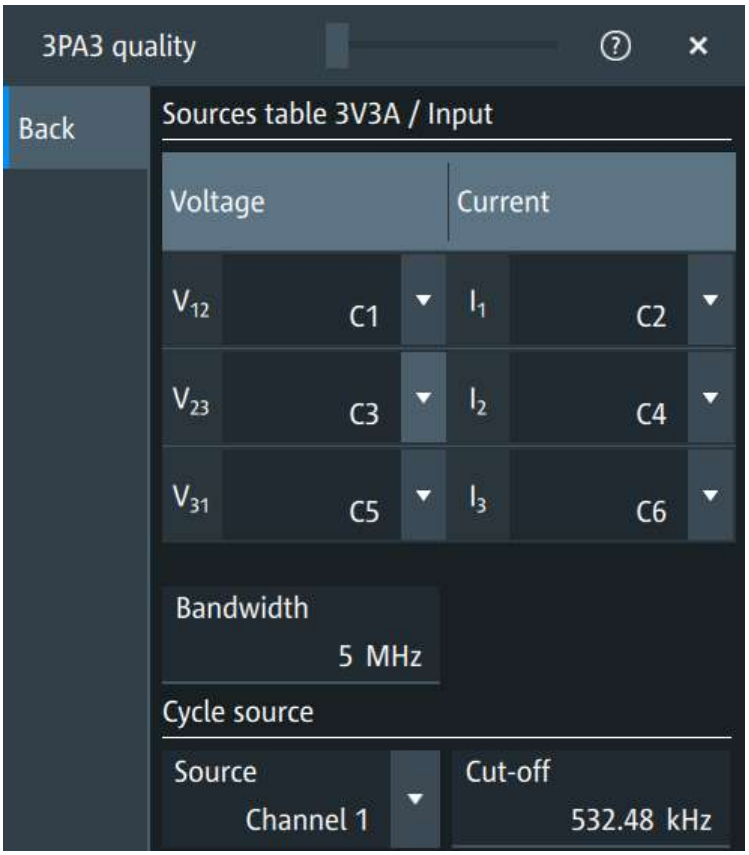

Voltage ← Config or Source config
Selects the voltage source waveform. Analog channels and math waveforms can be used.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W1V1a on page 1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W2V2a on page 1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3V3a on page 1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3VN3a on page 1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W1V1a on page 1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W2V2a on page 1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3V3a on page 1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3VN3a on page 1534
P3PHase<m>:HARMonics:SOURce:VOLTage:W2V2a on page 1534
P3PHase<m>:HARMonics:SOURce:VOLTage:W3V3a on page 1534
P3PHase<m>:HARMonics:SOURce:VOLTage:W3VN3a on page 1534
P3PHase<m>:QUALity:SOURce:VOLTage:W2V2a on page 1534

P3PHase<m>:QUALity:SOURce:VOLTage:W3V3a on page 1534
P3PHase<m>:QUALity:SOURce:VOLTage:W3VN3a on page 1534
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W1V1a on page 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W2V2a on page 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W3V3a on page 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W3VN3a on page 1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W1V1a on page 1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W2V2a on page 1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W3V3a on page 1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W3VN3a on page 1533

Current ← Config or Source config
Selects the current source waveform. Analog channels and math waveforms can be used.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W1V1a on page 1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W2V2a on page 1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3V3a on page 1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3VN3a on page 1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W1V1a on page 1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W2V2a on page 1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3V3a on page 1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3VN3a on page 1533
P3PHase<m>:HARMonics:SOURce:CURRent:W2V2a on page 1533
P3PHase<m>:HARMonics:SOURce:CURRent:W3V3a on page 1533
P3PHase<m>:HARMonics:SOURce:CURRent:W3VN3a on page 1533
P3PHase<m>:QUALity:SOURce:CURRent:W2V2a on page 1533
P3PHase<m>:QUALity:SOURce:CURRent:W3V3a on page 1533
P3PHase<m>:QUALity:SOURce:CURRent:W3VN3a on page 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W1V1a on page 1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W2V2a on page 1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W3V3a on page 1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W3VN3a on page 1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W1V1a on page 1533

P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W2V2a
on page 1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W3V3a
on page 1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W3VN3a
on page 1533

Bandwidth ← Config or Source config
If a warning message appears indicating differing bandwidths on the input channels, verify and adjust the bandwidth settings to match across all channels.


Source ← Config or Source config
Selects the channel (voltage source) to serve as the timing reference for data calculations across all sources when the periods are not aligned on the x-axis.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:SOURce on page 1534
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:SOURce on page 1534
P3PHase<m>:HARMonics:SOURce:CYCLe[:SOURce] on page 1534
P3PHase<m>:QUALity:SOURce:CYCLe[:SOURce] on page 1534
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CYCLe:SOURce on page 1534
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CYCLe:SOURce
on page 1534

Cut-off ← Config or Source config
Configures a bandwidth limitation. The adjustable filter frequency is linked to the sample rate. To access a wider range of frequencies not achievable with the current configuration, configure the sample rate in "Menu" > "Acquisition".

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:FILTer on page 1535
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:FILTer on page 1535
P3PHase<m>:HARMonics:SOURce:CYCLe:FILTer on page 1535
P3PHase<m>:QUALity:SOURce:CYCLe:FILTer on page 1535
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CYCLe:FILTer on page 1534
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CYCLe:FILTer
on page 1534

12.4.2.2 3-phase power waveform

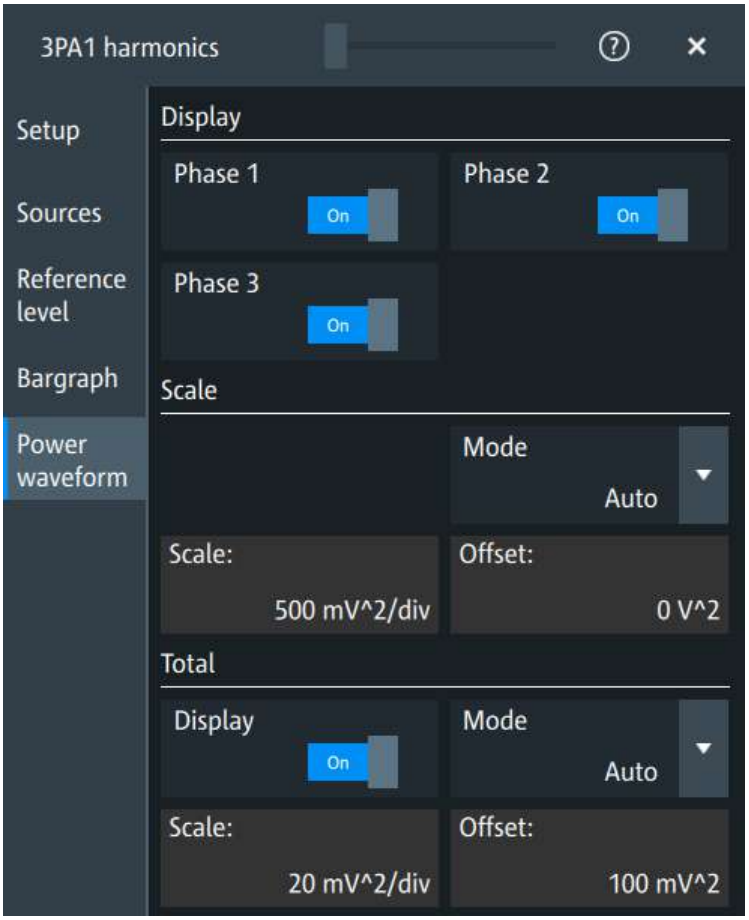

In the "Power waveform" dialog, you can change the display and scaling of the power waveform of the single and total phases.

Display individual phases
Displays or hides the power waveform of the individual phases.

For harmonics analysis, a power waveform is available if "Standard" is set to EN 61000-3-2 Class C or EN 61000-3-2 Class D.

Remote command:
`P3PHase<m>:QUALity:DISPlay:POWer<n>:WAVeform[:ENABle]` on page 1536
`P3PHase<m>:HARMonics:DISPlay:POWer<n>:WAVeform[:ENABle]` on page 1536
`P3PHase<m>:MDRive:DISPlay:INPut:ELECtrical:POWer<n>:WAVeform[:ENABle]` on page 1536
`P3PHase<m>:MDRive:DISPlay:OUTPut:ELECtrical:POWer<n>:WAVeform[:ENABle]` on page 1536

Scale individual phases
Configures the scaling of the individual phases.

Mode ← Scale individual phases
Selects the scaling mode for display of the resulting waveform. By default, the instrument selects the most appropriate scale. In "Manual" mode, you can change the vertical scale and offset.

Remote command:
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe:MODE on page 1538
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe:MODE on page 1538
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE on page 1538
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE on page 1538

Scale ← Scale individual phases
Sets the vertical scale of the resulting power waveform if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe[:VALue] on page 1539
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe[:VALue] on page 1539
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue] on page 1539
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue] on page 1539

Offset ← Scale individual phases
Sets the offset of the resulting power waveform if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:QUALity:POWer<n>:VERTical:OFFSet on page 1537
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet on page 1538
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet on page 1537
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet on page 1537

Total phase
Configures the display and the scaling of the total phase.

Display ← Total phase
Enables the display of the total phase.

Remote command:
P3PHase<m>:EFFiciency:DISPlay:WAVeform:INPut:TOTal:POWer[:ENABle] on page 1537
P3PHase<m>:EFFiciency:DISPlay:WAVeform:OUTPut:TOTal:POWer[:ENABle] on page 1537
P3PHase<m>:QUALity:DISPlay:TOTal:POWer:WAVeform[:ENABle] on page 1537
P3PHase<m>:HARMonics:DISPlay:TOTal:POWer:WAVeform[:ENABle] on page 1537

P3PHase<m>:MDRive:DISPlay:INPut:ELECtrical:TOTal:POWer:WAVeform[:ENABle] on page 1537
P3PHase<m>:MDRive:DISPlay:OUTPut:ELECtrical:TOTal:POWer:WAVeform[:ENABle] on page 1537

Mode ← Total phase
Selects the scaling mode for display of the resulting waveform. By default, the instrument selects the most appropriate scale. In "Manual" mode, you can change the vertical scale and offset.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe:MODE on page 1538
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe:MODE on page 1538
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe:MODE on page 1538
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe:MODE on page 1538
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:SCALe:MODE on page 1538
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:SCALe:MODE on page 1538

Scale ← Total phase
Sets the vertical scale of the resulting power waveform if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] on page 1539
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] on page 1539
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe[:VALue] on page 1539
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe[:VALue] on page 1539
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:SCALe[:VALue] on page 1539
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:SCALe[:VALue] on page 1539

Offset ← Total phase
Sets the offset of the resulting power waveform if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:OFFSet on page 1537
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:OFFSet on page 1537
P3PHase<m>:QUALity:TOTal:POWer:VERTical:OFFSet on page 1538
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet on page 1538

P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:OFFSet
on page 1537
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:OFFSet
on page 1537

12.4.3 3-phase power quality

Expanding on single-phase power quality principles, three-phase systems require dedicated analysis due to inherent phase shifts and potential imbalances. See also Section 12.3.2, "Power quality", on page 400. While active, reactive, and apparent powers remain key metrics, three-phase assessment focuses on inter-phase relationships.

The power quality analysis measurement provides per-phase data ("C1"-"C6") alongside total system values ("V", "A"), see Section 12.4.3.8, "3-phase power quality results", on page 459. Evaluating these metrics for each phase helps identify imbalances or anomalies. Optimal systems exhibit minimal inter-phase variations and low harmonic distortion.

Required probes:

- 3x differential voltage probes (one for each phase)
- 3x current probes (one for each phase)

Use the ScopeSync functionality if the selected configuration requires additional channels. See also Section 17.2, "ScopeSync", on page 1045.

12.4.3.1 Configuring 3-phase power quality


For details of the configuration settings, see:

- Section 12.4.3.2, "3-phase power quality setup", on page 456.
- Section 12.4.3.3, "3-phase power sources", on page 457

1. Add a new power quality measurement as described in Section 12.4.1, "3-phase power analysis initial settings", on page 445.
2. Connect the differential voltage and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. In the "Analysis" tab, select the "P3 quality" measurement.

   The "P3 quality" setup dialog opens.
5. Select the "Fund. frequency" according to your signal.
6. Set a "User Frequency" to set the horizontal timebase.
7. Select the "Sources" tab.
8. Select the "Wiring" and if necessary "Select lines" to configure how your probes are connected to the DUT.


9. Select if you have an "Input/output" setup.
10. Select "Config".
11. Assign the correct channels for the "Voltage" and the "Current" probes.
12. Select the required "Bandwidth" for signal acquisition.
13. Select "Back".
14. Connect the probes to the DUT according to the visualization of the setup. For example a "3V3A" wiring:

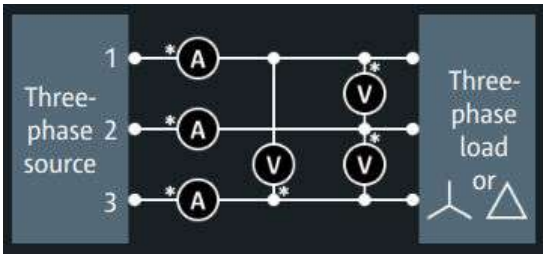

On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.4.3.8, "3-phase power quality results", on page 459.

12.4.3.2 3-phase power quality setup

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 quality" > select "P3 quality" > "Setup".

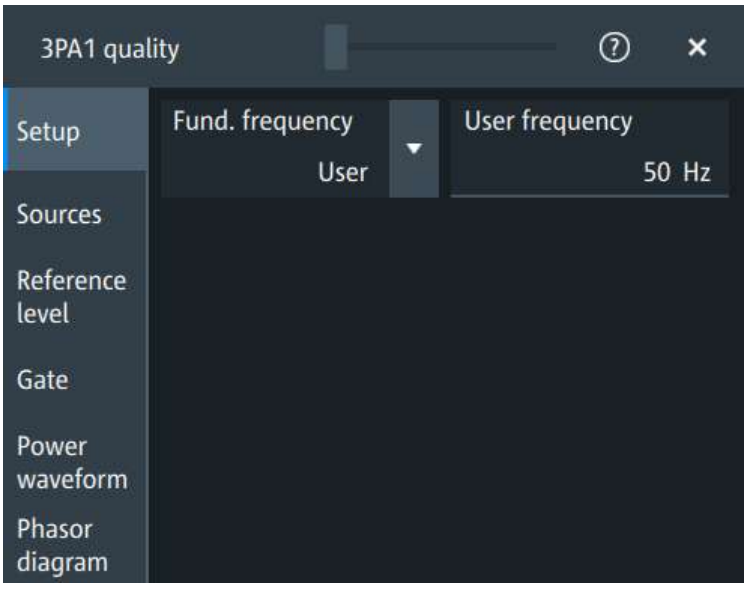

In the "Setup" tab, you configure the frequencies.

Fund. frequency
Selects the input frequency of the source signal.

- "50 Hz": Standard power grid frequency in Europe, Asia, and parts of Africa
- "60 Hz": Standard power grid frequency in North America and parts of South America
- "400 Hz": Used in aerospace and submarine applications and some industrial equipment
- "User": Custom fundamental frequency value
- "Automatic": Automatic detection of the fundamental frequency of the input signal

Remote command:
`P3PHase<m>:QUALity:FREQuency[:VALue]` on page 1485

User Frequency
Sets the horizontal timebase to control the time scale of the waveform display.

Remote command:
`P3PHase<m>:QUALity:FREQuency:USER` on page 1486

12.4.3.3 3-phase power sources

See Section 12.4.2.1, "3-phase power sources", on page 447.

12.4.3.4 3-phase power reference level

See Section 12.3.8.1, "Reference level", on page 438.

12.4.3.5 3-phase power gate

See Section 12.3.8.2, "Gate settings for power measurements", on page 442.

12.4.3.6 3-phase power waveform

For a description of the power waveform scaling, see Section 12.4.2.2, "3-phase power waveform", on page 452.

12.4.3.7 3-phase phasor diagram

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 quality" > select "P3 quality" > "Phasor diagram".



In the "Phasor diagram" tab, you configure the display of the phasor diagram.

State
Displays or hides the phasor diagram.

Remote command:
`P3PHase<m>:QUALity:PHASor[:ENABle]` on page 1486

Voltage range, Current range
Configures the voltage and current ranges of the phasor diagram.

Offset ← Voltage range, Current range
Sets the inner point of the phasor diagram.

Remote command:
`P3PHase<m>:QUALity:PHASor:VOLTage:OFFSet` on page 1486
`P3PHase<m>:QUALity:PHASor:CURRent:OFFSet` on page 1486

Maximum ← Voltage range, Current range
Sets the outer circumference of the phasor diagram.

Remote command:
`P3PHase<m>:QUALity:PHASor:VOLTage:MAXimum` on page 1487
`P3PHase<m>:QUALity:PHASor:CURRent:MAXimum` on page 1487

Fit to Screen
The instrument selects the most appropriate scale for the voltage and current phasors.

Remote command:
`P3PHase<m>:QUALity:PHASor:FSCReen` on page 1487

12.4.3.8 3-phase power quality results

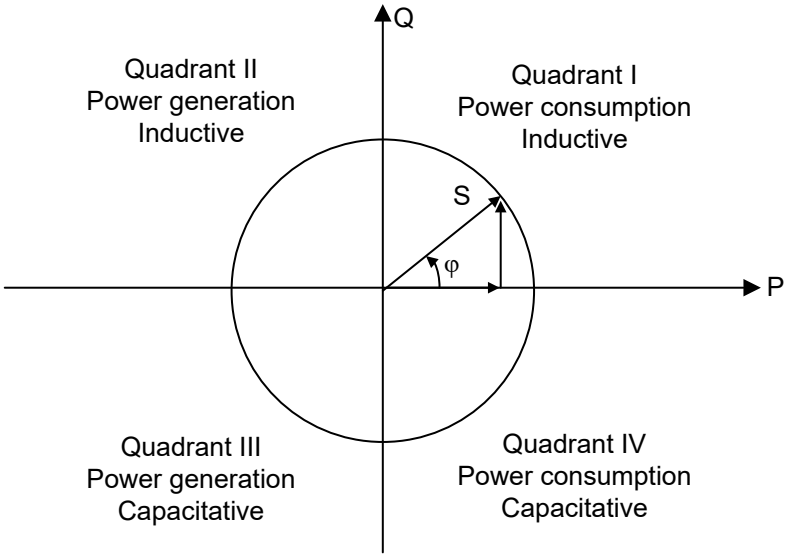


Figure 12-23: 3-phase power quality measurement of a symmetrical inductive load with balanced phase voltages, currents, and power values.



Figure 12-24: 3-phase power quality measurement with one phase in the third quadrant, showing negative active power and negative reactive power.

The operating condition of each phase can be interpreted with the four-quadrant analysis of active power and reactive power. Positive active power indicates power consumption, while negative active power indicates power generation. Positive reactive power indicates inductive behavior, while negative reactive power indicates capacitive behavior. The quadrant therefore identifies whether a phase operates as a consumer or source and whether the reactive component is inductive or capacitive.



The results of power quality measurements are provided as follows:

- The waveform diagram shows the graphical presentation of:
  - The voltage waveform of the individual and total phases
  - The current waveform of the individual and total phases
  - The power waveform of the individual and total phases, The power waveform is the product of the current and voltage waveforms.
    See also Section 12.4.2.2, "3-phase power waveform", on page 452.
- Results are visualized in a phasor diagram, which graphically displays the magnitude and phase angles of each phase voltage and current. In a balanced 3-phase system, the phase voltages are typically spaced by 120 degrees, and the phase currents are also typically spaced by 120 degrees.
  See also Section 12.4.3.7, "3-phase phasor diagram", on page 457.
- The result table displays the numeric measurement results. The total power values are the sum of the individual phase power values:

Result table	Description
Cycle source	Channel (voltage) used as the timing reference for all measurements.
Cycle source frequency	Nominal (rated) system frequency, e.g., 50 Hz or 60 Hz.
Input, output	Selected lines in the source configuration
Current RMS, voltage RMS ("CRMS")	Square root of the mean of the square of the current or voltage. Represents the effective value of the AC waveform.

Result table	Description
Current cycle crest factor, voltage cycle crest factor ("CCrest")	Ratio of the peak (maximum absolute value) to the RMS value of the waveform. Indicates the level of waveform distortion.
Current maximum, voltage maximum	Highest measured value of the current or voltage
Active power (P)	Real power that can be converted into work. The result can be positive or negative. Positive values indicate active power consumption. Negative values indicate active power generation.
Reactive power (Q)	Power flow that is temporally stored in a system because of the inductive and capacitive elements. For the individual phase values, Q<0 indicates a capacitive load, Q>0 indicates an inductive load. The total reactive power is always positive because of $Q_{TOT} = \sqrt{(S_{TOT}^2 - P_{TOT}^2)}$.
Apparent power (S)	Magnitude of the vector sum of active and reactive power
Power factor	Measure of the system efficiency. The value varies between -1 and 1. Positive values indicate active power consumption. Negative values indicate active power generation.
Phase (φ)	Phase differences between the current and the voltage sine waves of the different phases. For the individual phase values, φ<0 indicates a capacitive load, φ>0 indicates an inductive load. The total phase angle has the same sign convention as Q_{TOT}.

Remote commands: "3-phase power quality results" on page 1491.

12.4.4 3-phase power harmonics

Harmonic currents generated by nonlinear loads in 3-phase systems can impact power quality by affecting other equipment on the grid, see Section 12.3.3, "Power harmonics", on page 406. Unlike single-phase systems, harmonics in a 3-phase environment can exist with different phase angles and magnitudes on each line, requiring analysis of both individual harmonic components and their relationships to each other. To ensure power quality and prevent interference, industry and regulatory bodies have established compliance standards for end-products.

The power harmonics analysis tests the devices according to the precompliance standard EN 61000-3-2.

Required probes:

- 3x differential voltage probes (one for each phase)
- 3x current probes (one for each phase + optionally a neutral current probe)

Use the ScopeSync functionality if the selected configuration requires additional channels. See also Section 17.2, "ScopeSync", on page 1045.


12.4.4.1 Configuring 3-phase power harmonics

For details of the configuration settings, see:

- Section 12.4.4.2, "3-phase power harmonics setup", on page 463
- Section 12.4.4.3, "3-phase power sources", on page 465

1. Add a new power quality measurement as described in Section 12.4.1, "3-phase power analysis initial settings", on page 445.
2. Connect the differential voltage and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. In the "Analysis" tab, select the "P3 harmonics" measurement.

   The "P3 harmonics" setup dialog opens.
5. Select the "Standard".
6. Select the "Fund. frequency" according to your signal.
7. Select the "Sources" tab.
8. Select the "Wiring" and if necessary "Select lines" to configure how your probes are connected to the DUT.
9. Select if you have an"Input/output" setup.
10. Select "Config".
11. Assign the correct channels for the "Voltage" and the "Current" probes.
12. Select the desired "Bandwidth" for signal acquisition.
13. Select "Back".
14. Connect the probes to the DUT according to the visualization of the setup. For example a "3V3A" wiring:

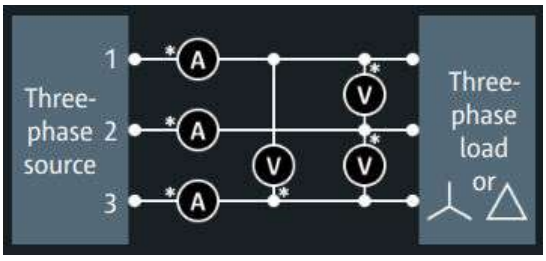

On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.4.4.7, "3-phase power harmonic results", on page 467.

12.4.4.2 3-phase power harmonics setup

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 harmonics" > select "P3 harmonics" > "Setup".

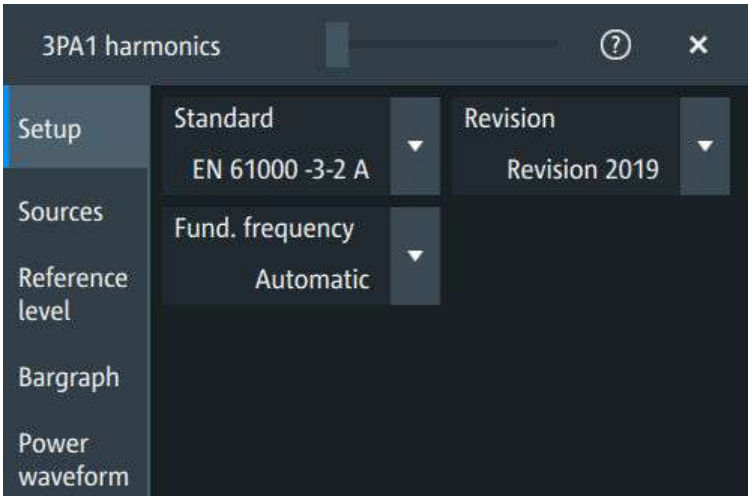


Figure 12-25: 3-phase power harmonic setup for EN 61000-3-2 A / EN 61000-3-2 B

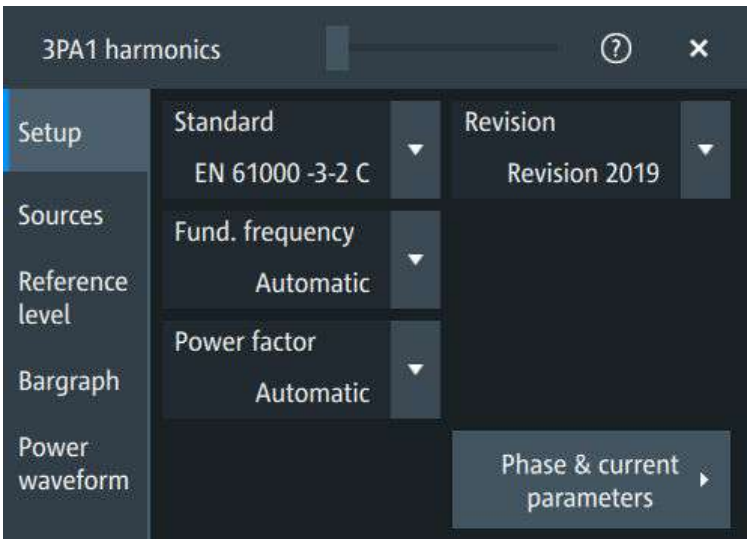


Figure 12-26: 3-phase power harmonic setup for EN 61000-3-2 C

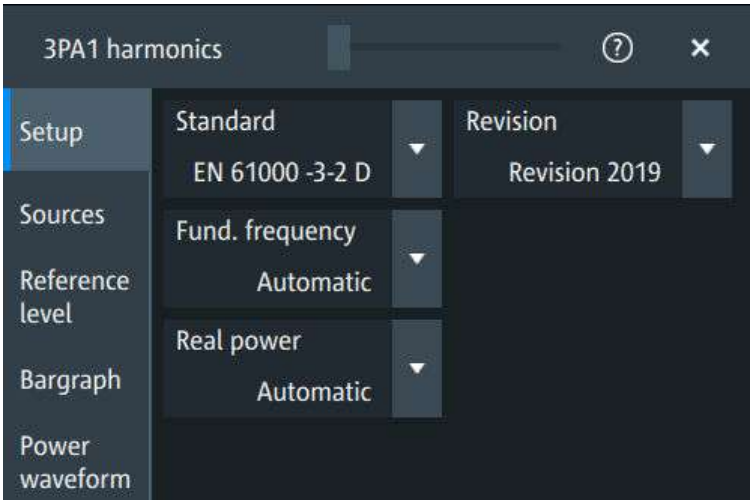


Figure 12-27: 3-phase power harmonic setup for EN 61000-3-2 D

Standard, Revision
Select the standard in use, including which "Revision" of the standard is used, "Revision 2011" or "Revision 2019".

Table 12-3: Current harmonic precompliance standards

Standard	Application
EN 61000-3-2 Class A	Balanced 3-phase equipment, household appliances (excluding equipment identified as class D), tools (excluding portable tools), dimmers for incandescent lamps, audio equipment
EN 61000-3-2 Class B	Portable tools, not professional arc welding equipment
EN 61000-3-2 Class C[1)]	Lighting equipment
EN 61000-3-2 Class D	PC, PC monitors, radio, or TV receivers with an input power less than or equal to 600W
MIL-STD-1399	Military shipboard user equipment
[1)] The EN 61000-3-2 defines different limits for EN 61000-3-2 Class C equipment with an input power smaller or equal than 25W either. The limits that are implemented in the MXO 5 firmware comply with the limits of table 3 (column 2) of the EN 61000-3-2 standard.	

Remote command:
`P3PHase<m>:HARMonics:STANdard` on page 1500
`P3PHase<m>:HARMonics:REVision` on page 1500

Fund. frequency
Selects the frequency of the input signal. The available frequencies depend on the selected Standard, Revision.

Remote command:
`P3PHase<m>:HARMonics:FREQuency:EN` on page 1501
`P3PHase<m>:HARMonics:FREQuency:MIL` on page 1501

Power factor
Available only for "Standard" = EN 61000-3-2 Class C.

Selects if the power factor is defined automatically, or a user-defined value ("Power factor") is used.

Remote command:
`P3PHase<m>:HARMonics:PFACtor:MODE` on page 1501
`P3PHase<m>:HARMonics:PFACtor:USER` on page 1502

Phase & current parameters
Shows a graphical explanation of the relative phase angle and current parameters.

Real power, Power
Available only for "Standard" = EN 61000-3-2 Class D.

Selects if the real power is defined automatically, or a user-defined value ("Power") is used.

Remote command:
`P3PHase<m>:HARMonics:RPOWer:MODE` on page 1502
`P3PHase<m>:HARMonics:RPOWer:USER` on page 1502

12.4.4.3 3-phase power sources

See Section 12.4.2.1, "3-phase power sources", on page 447.


12.4.4.4 3-phase power reference level

See Section 12.3.8.1, "Reference level", on page 438.

12.4.4.5 3-phase power bar graph

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 harmonics" > select "P3 harmonics" > "Bargraph".

In this tab you can configure the scale for the bar graph display.

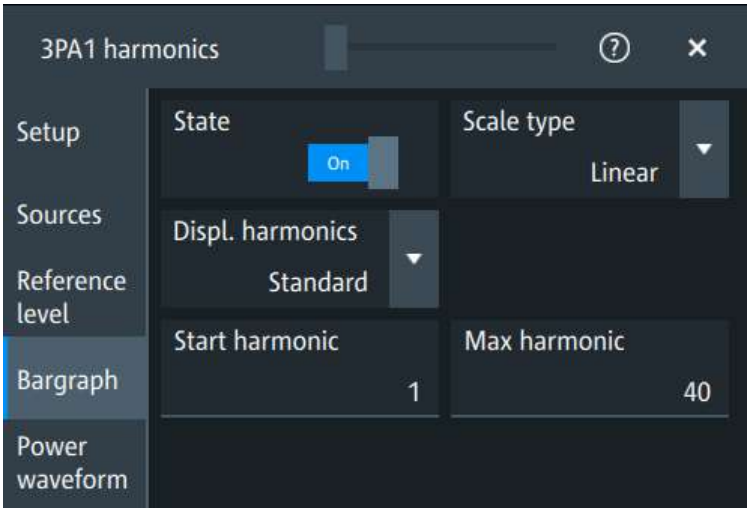

State
Displays or hides the bar graph.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:BARGraph[:ENABle]` on page 1503

Scale type
Selects a logarithmic or linear scale for the display for the harmonics bar graph.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE` on page 1503

Displ. harmonics
Selects which harmonics are displayed in the bar graph: all, odd even or depending on the standard definition.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:HARMonics[:DISPlay]` on page 1503

Start harmonic
Sets the start frequency of a bar graph display. At least three bars are displayed.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue]` on page 1504


Max harmonic
Sets the stop frequency of the bar graph display. The maximum value is defined by standard and fundamental frequency.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue]` on page 1504

12.4.4.6 3-phase power waveform

For a description of the power waveform scaling, see Section 12.4.2.2, "3-phase power waveform", on page 452.

12.4.4.7 3-phase power harmonic results

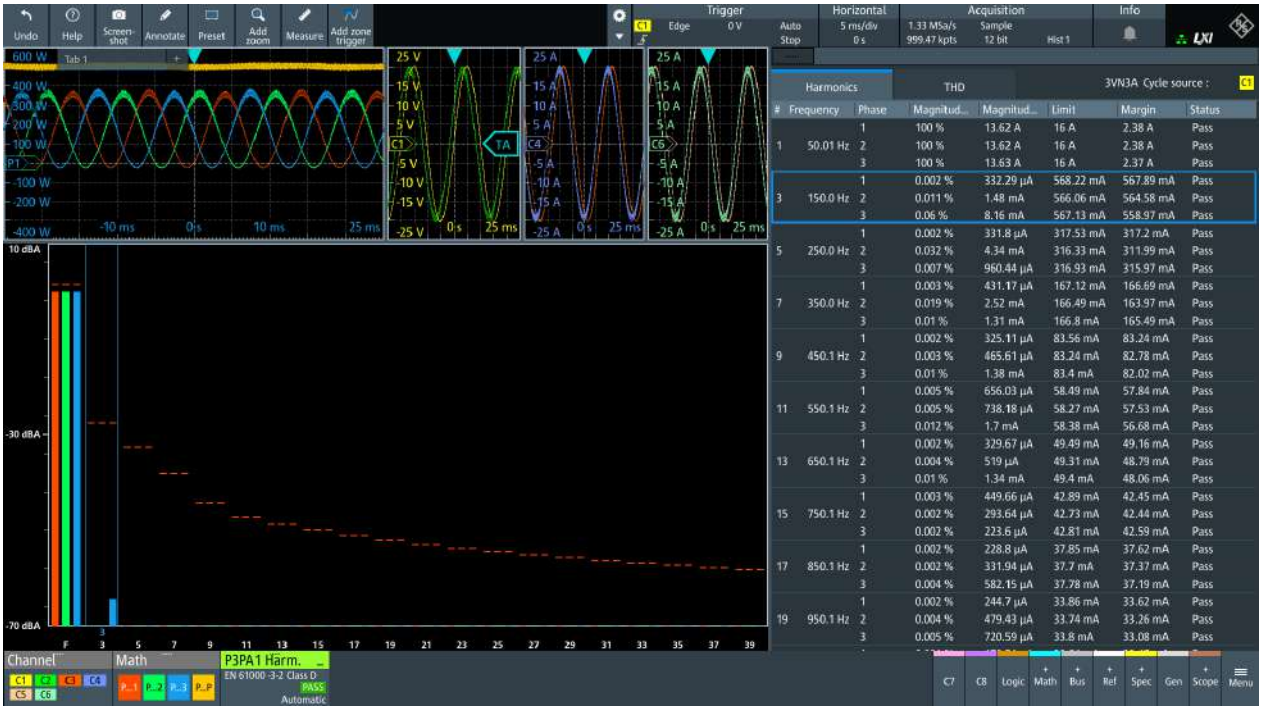

The results of the harmonic measurements are provided as follows:

- The waveform diagram shows the graphical presentation of:
  - The voltage waveform of the individual and total phases
  - The current waveform of the individual and total phases
  - The power waveform of the individual and total phases. The power waveform is the product of the current and voltage waveforms.
    See also Section 12.4.2.2, "3-phase power waveform", on page 452.
- The results are visualized in a bar graph. The number of displayed harmonics depends on the standard definition. When you select a harmonic in the bar chart, the corresponding row in the result table is highlighted.
  See also Section 12.4.4.5, "3-phase power bar graph", on page 465.
- The result table displays the numeric measurement results:

Result table	Description
THD RMS	Total harmonic distortion (THD) relative to the RMS amplitude
THD fundamental	Total harmonic distortion relative to the fundamental

Result table	Description
Harmonic index	Harmonic order. Represents the multiple of the fundamental frequency. Value of the x-axis in the bar graph
Frequency	Nominal frequency of the power system.
Phase	Phase differences between the current and the voltage sine waves of the different phases.
Magnitude (%)	Present value of the current harmonic expressed as a percentage of the fundamental component. Value of the y-axis in the bar graph
Magnitude (RMS)	Measured RMS value of the harmonic component.
Limit	Maximum allowed value according to the selected standard. Visually represented by a dark orange line in the bar graph.
Margin	Sets the upper limit for the display of the Y scale.
Status	Displays whether the harmonic's magnitude is within the limit (pass - green bar) or exceeds the limit (fail - orange bar).

Remote commands: "3-phase power harmonics results" on page 1504.

12.4.5 3-phase power efficiency

In a standard 3-phase drive setup, a single-phase AC or DC supply is converted into a 3-phase PWM output by a microcontroller-driven inverter. Real-time feedback such as speed, torque, or position is continuously read and used to modulate the inverter's switching pattern for precise motor control.

The 3-phase efficiency analysis determines how efficiently a 3-phase device converts total input power into total useful output power. The method is identical to the single-phase analysis, but the results from the three phases are summed to obtain the overall input, output and efficiency of the device. See also Section 12.3.6, "Power efficiency", on page 424.

Required probes for an example "1V-1A" input to a "2V-2A" output configuration:

- 3x differential voltage probes
- 3x current probes

Use the ScopeSync functionality if the selected configuration requires additional channels. See also Section 17.2, "ScopeSync", on page 1045.

12.4.5.1 Configuring 3-phase power efficiency

For details of the configuration settings, see:

- Section 12.4.5.2, "3-phase power efficiency setup", on page 470.
- Section 12.4.2.1, "3-phase power sources", on page 447

1. Add a power efficiency measurement as described in Section 12.4.1, "3-phase power analysis initial settings", on page 445.
2. Connect the differential voltage probes and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. Connect the probes to the DUT. Figure 12-28 shows an exemplary configuration. Adjust your settings based on your connections to the DUT.

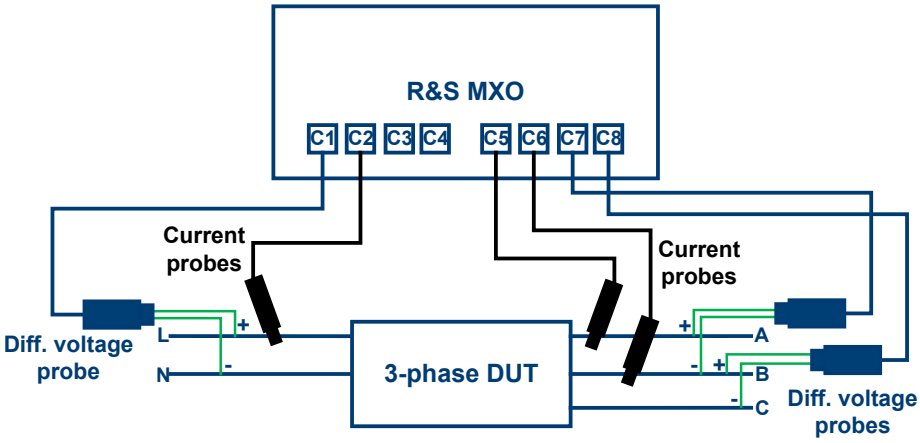


Figure 12-28: Example for a 1V-1A input to a 2V-2A output wiring with selected lines VAB VBC IA IB


5. In the "Analysis" tab, select the "P3 efficiency" measurement.

   The "P3 efficiency" setup dialog opens.
6. If necessary, enable "Statistics".
7. Select the "Sources" tab.
8. Select the "Type" of the current flow for input and output: AC or DC.
9. Select the "Wiring" and "Select lines" to configure how your probes are connected to the DUT.
10. Select "Config" for input and output.
11. Assign the correct channels for the "Voltage" and the "Current" probes.
12. Select the required "Bandwidth" for signal acquisition.
13. Select "Back".
14. Select the "Power waveform" tab.
15. Adjust the scale and offset of the resulting waveforms if necessary.

    On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.4.5.7, "3-phase power efficiency results", on page 471.

12.4.5.2 3-phase power efficiency setup

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 quality" > select "P3 efficiency" > "Setup".

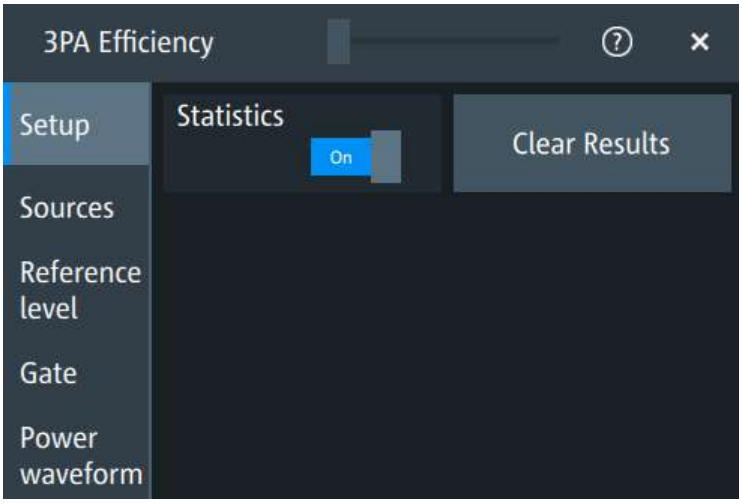

Statistics
Activates or deactivates the statistical evaluation for the selected 3-phase measurement. If statistics are enabled, the following results are calculated:

Label	Description
Current	Current value
Max	Maximum value
Min	Minimum value
Mean	Average
RMS	Root mean square
σ (S-dev)	Standard deviation
Event count	Number of measured events
Wave count	Number of waveforms (acquisitions)

Remote command:
`P3PHase<m>:EFFiciency:STATistic:ENABle` on page 1507
`P3PHase<m>:EFFiciency:STATistic:WFMCount?` on page 1508

Clear results
Resets the statistical results for the respective 3-phase measurement, and starts a new statistical evaluation if the acquisition is running.

Remote command:
`P3PHase<m>:EFFiciency:STATistic:RESet` on page 1508

12.4.5.3 3-phase power sources

See Section 12.4.2.1, "3-phase power sources", on page 447.

Separate source settings are available for input and output.

12.4.5.4 3-phase power reference level

See Section 12.3.8.1, "Reference level", on page 438.

Separate reference level settings are available for input and output. The reference levels take effect only for the AC input and output types.

12.4.5.5 3-phase power gate


See Section 12.3.8.2, "Gate settings for power measurements", on page 442.

12.4.5.6 3-phase power waveform

For a description of the power waveform scaling, see Section 12.4.2.2, "3-phase power waveform", on page 452.

Separate power waveform settings are available for input and output.

12.4.5.7 3-phase power efficiency results

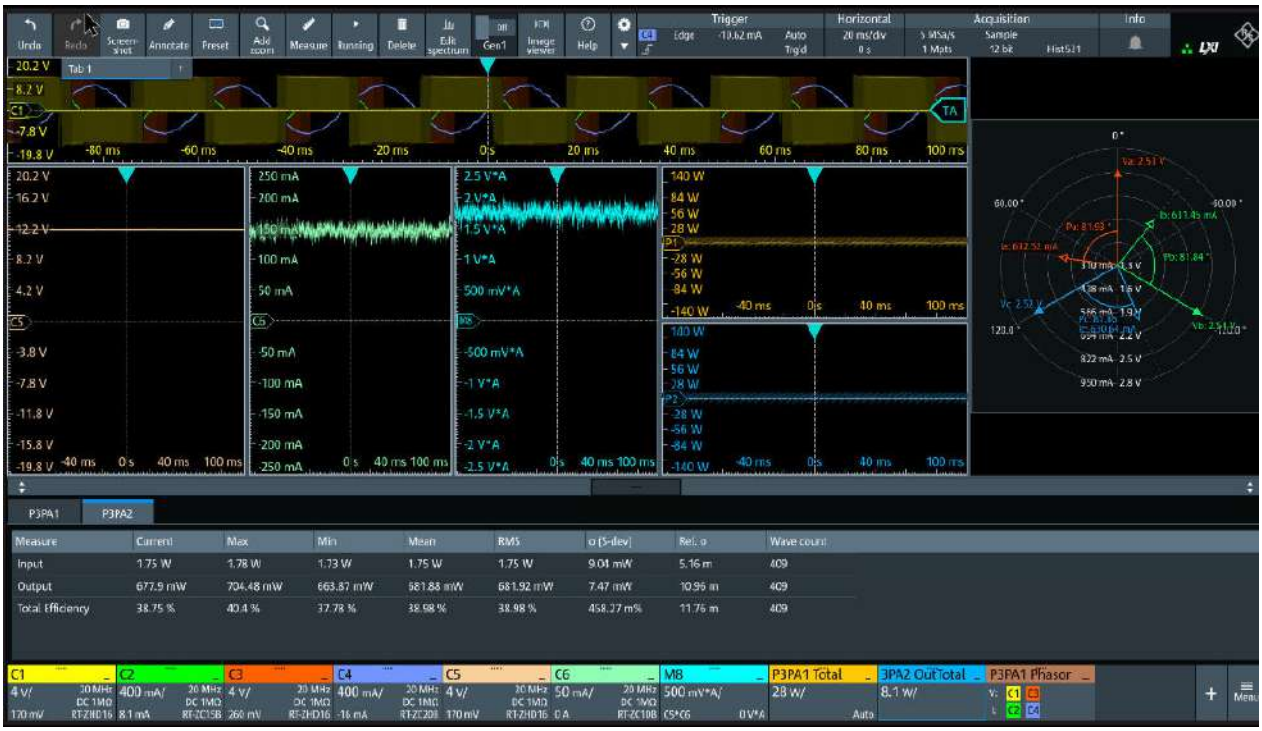

The results of power efficiency measurements are provided as follows:

- The waveform diagram shows the graphical presentation for the input and output of:
  - The voltage and current waveforms of the individual and total phases.
  - The power waveform of the total phase. The power waveform is the product of the current and voltage waveforms.
    See also Section 12.4.2.2, "3-phase power waveform", on page 452.
- The result table displays the numeric measurement results of input power, output power and total efficiency. The total efficiency is the ratio of input power to output power.

Remote commands: "3-phase power efficiency results" on page 1508.

12.4.6 3-phase power motor drive analysis

With the MXO 5 and option R&S MXO5-K360, you can perform motor drive measurements on inverter-fed electrical drives. In contrast to pure 3-phase analysis, motor drive analysis links electrical power signals with switching behavior, control signals, and mechanical quantities such as speed and torque. The method therefore extends beyond observing three voltages and three currents and includes the electromechanical behavior of the complete drive system.

For best practical results, use bandwidth settings that fit the measurement goal. General motor drive power measurements often work well with limited bandwidth, while inverter switching analysis can require higher bandwidth when wide bandgap devices or very fast transitions are present.

In many cases, a bandwidth of 100 MHz to 200 MHz is sufficient. Higher bandwidth is typically required for wide bandgap inverter switching, while most control-related measurements can be limited to about 20 MHz because the control loop is often around 1 MHz.

Required probes:

- 3x differential voltage probes (one for each phase)
- 3x current probes (one for each phase)
- Optional: logic or analog channels for Hall sensors, encoder signals, gate signals, or torque sensor signals


12.4.6.1 Configuring motor drive analysis

For details of the configuration settings, see:

- Section 12.4.6.2, "Motor drive setup", on page 474
- Section 12.4.6.3, "Motor drive electrical setup", on page 475
- Section 12.4.6.4, "Motor drive mechanical setup", on page 475

1. Add a motor drive measurement as described in Section 12.4.1, "3-phase power analysis initial settings", on page 445.
2. Connect the differential voltage and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 398.
4. In the "Analysis" tab, select the "P3 motor drive" measurement.

   The "P3 motor drive" setup dialog opens.
5. Select the "Mode" depending on whether the DUT operates as a motor or as a generator.
6. If necessary, enable "Statistics".
7. Select the "Electrical" tab.
8. Select the "Wiring" and if necessary "Select lines" to configure how your probes are connected to the DUT.
9. Select "Config".
10. Assign the correct channels for the "Voltage" and the "Current" probes.
11. Select the required "Bandwidth" for signal acquisition.
12. Select "Back".
13. Connect the probes to the DUT according to the visualization of the setup. For example a "3V3A" wiring:

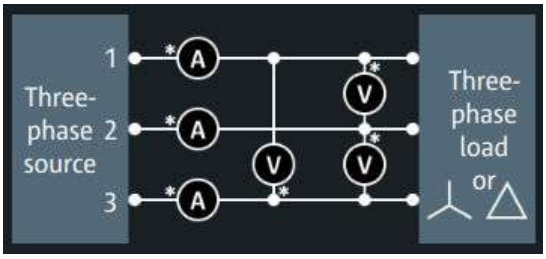


14. Select the "Mechanical" tab.
15. Configure the "Torque" input by selecting the encoder type and the torque source.
16. Depending on the encoder type, define the scaling range with the low and high torque values and the corresponding voltage values, sensitivity or frequency values. This setup defines how the input voltage is converted into torque values.
17. Configure the "Speed / Angle" input by selecting the input type, the unit, and the corresponding speed signals.
18. Set the motor-specific scaling parameters such as the number of pole pairs and the gear ratio. These values are used for correct speed calculation and mechanical correlation.
19. Select "Back".

20. For additional visualization, add a power quality measurement as described in Section 12.4.1, "3-phase power analysis initial settings", on page 445.
21. Select the "Phasor diagram" tab. Enable "State".

    On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.4.6.8, "Motor drive results", on page 480.

12.4.6.2 Motor drive setup

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 quality" > select "Mode" > "Setup".

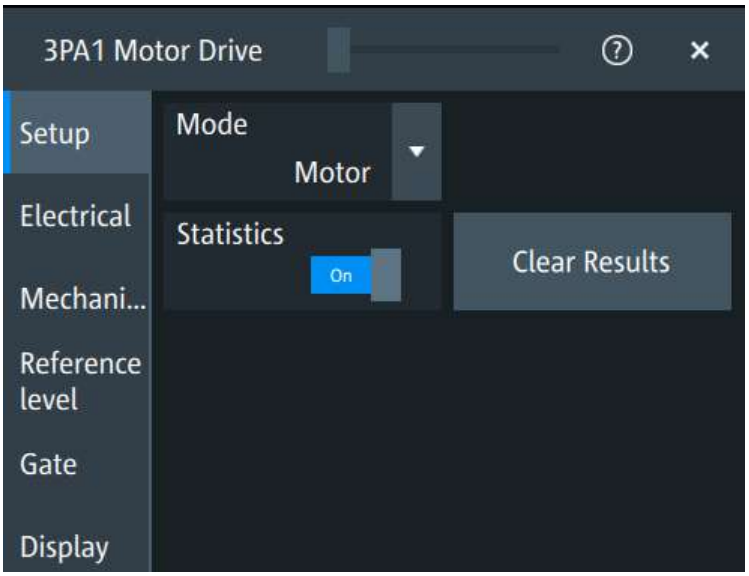

In the "Setup" tab, you configure the frequencies.

Mode
Sets the operating mode of the DUT.

- "Motor": The DUT consumes electrical power and provides mechanical output power.
- "Generator": The DUT converts mechanical input power into electrical output power.

Remote command:
`P3PHase<m>:MDRive:MODE` on page 1512

Statistics
Activates or deactivates the statistical evaluation for the selected 3-phase measurement. If statistics are enabled, the following results are calculated:

Label	Description
Current	Current value
Max	Maximum value
Min	Minimum value
Mean	Average
RMS	Root mean square
σ (S-dev)	Standard deviation
Event count	Number of measured events
Wave count	Number of waveforms (acquisitions)

Remote command:
`P3PHase<m>:MDRive:STATistic:ENABle` on page 1512
`P3PHase<m>:MDRive:STATistic:WFMCount?` on page 1512

Clear results
Resets the statistical results for the respective 3-phase measurement, and starts a new statistical evaluation if the acquisition is running.

Remote command:
`P3PHase<m>:MDRive:STATistic:RESet` on page 1512

12.4.6.3 Motor drive electrical setup

In the electrical setup, assign the voltage and current sources used for motor drive analysis. The electrical source configuration follows the common 3-phase source configuration.

See Section 12.4.2.1, "3-phase power sources", on page 447.

12.4.6.4 Motor drive mechanical setup

In the mechanical setup, configure the sources and scaling for torque and speed measurements.

Torque
Configures the source and scaling for the torque measurement. The torque setup defines how the input signal is converted into mechanical torque values for the motor drive analysis.

Encoder ← Torque
Selects the type of torque sensor interface used for the torque measurement.

- "Analog 0-VDC": Analog voltage signal with a defined voltage-to-torque scaling.
- "Analog mV/V": Ratiometric mV/V torque sensor signal.
- "Analog Frequency": Analog frequency signal that is proportional to the applied torque.

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TYPE on page 1513
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TYPE on page 1513

Source ← Torque
Selects the input or output source for the torque signal. This source can be an analog channel or another supported signal source, depending on the instrument configuration.

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:SOURce on page 1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:SOURce on page 1514

Low torque, High torque ← Torque
Defines the low end of the torque scaling range.

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:LOW on page 1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:LOW on page 1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:HIGH on page 1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:HIGH on page 1514

Low voltage, High voltage ← Torque
Defines the low and high end of the voltage range that corresponds to the configured torque range. Available for "Encoder" = "Analog 0-VDC".

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:VOLTage:LOW on page 1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:VOLTage:LOW on page 1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:VOLTage:HIGH on page 1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:VOLTage:HIGH
on page 1514

Low frequency, High frequency ← Torque
Defines the low and high end of the frequency range that corresponds to the configured torque range. Available for "Encoder" = "Analog Frequency".

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:FREQuency:LOW
on page 1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:FREQuency:LOW
on page 1515
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:FREQuency:HIGH
on page 1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:FREQuency:HIGH
on page 1515

Sensitivity ← Low frequency, High frequency ← Torque
Sets the sensitivity of the torque sensor. The sensitivity defines the output signal level of the sensor in mV/V for the specified torque range. This value is used together with the supply voltage to convert the measured sensor signal into torque values. Available for "Encoder" = "Analog mV/V".

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:MVVolt on page 1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:MVVolt on page 1515

Supply voltage ← Low frequency, High frequency ← Torque
Sets the supply voltage of the torque sensor. This value is used together with the sensor sensitivity to calculate the corresponding torque from the measured sensor output signal. Available for "Encoder" = "Analog mV/V".

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:SUPPly:VOLTage on page 1516
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:SUPPly:VOLTage on page 1516

Speed
Configures the source and scaling for the speed measurement. The speed setup defines how the input signals are used to determine the rotational speed and related mechanical quantities of the motor drive.

Input type ← Speed
Selects the type of speed sensor used for the input or output.

- "Quadrature": The encoder provides two signals with a phase shift that allow direction detection and rotational speed calculation.
- "Resolver": Resolver signals are used to determine the rotor position and rotational speed.
- "Hall sensor": Hall sensors detect the rotor magnetic position and provide commutation-related speed information.

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:TYPE on page 1516
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:TYPE on page 1516

Hall U/V/W, Quad A/B, Source sin/cos ← Speed
Depending on the speed sensor type, selects the input or output sources for the torque signal.

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:SOURce on page 1516
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:SOURce on page 1516

Unit
Sets the unit of the speed input or output.

- "rpm": Rotational speed in revolutions per minute.
- "rps": Rotational speed in revolutions per second.
- "Hz": Rotational speed as frequency in hertz.

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:UNIT on page 1517
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:UNIT on page 1517

Pulse/rotation
Defines the number of pulses per revolution of the quadrature encoder. Available for "Input type" = "Quadrature".

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:PPRotation on page 1517
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:PPRotation on page 1517

Pole pairs
Defines the number of motor pole pairs used for speed calculation. Available for "Input type" = "Resolver" and "Hall sensor"

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:POLE on page 1517
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:POLE on page 1517

Gear ratio
Defines the gear ratio between the motor shaft and the measured mechanical input or output.

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:GEARratio on page 1518
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:GEAR on page 1518

12.4.6.5 Motor drive reference level

See Section 12.3.8.1, "Reference level", on page 438.

Separate reference level settings are available for electrical and mechanical power.

12.4.6.6 Motor drive gate

See Section 12.3.8.2, "Gate settings for power measurements", on page 442.

12.4.6.7 Motor drive display

For a description of the electrical power waveform scaling in the "Elec. Power" tab, see Section 12.4.2.2, "3-phase power waveform", on page 452.

In the "Torque", "Speed / Angle", "Mech. Power", and "Efficiency" tabs, the same display settings are available for the corresponding mechanical track.

Display
Enables or disables the display of the corresponding mechanical track in the selected tab.

Remote command:
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:ANGLe:TRACk[:ENABle] on page 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:ANGLe:TRACk[:ENABle] on page 1519
P3PHase<m>:MDRive:DISPlay:EFFiciency:TRACk[:ENABle] on page 1519

P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:POWer:TRACk[:ENABle] on page 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:POWer:TRACk[:ENABle] on page 1519
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:SPEed:TRACk[:ENABle] on page 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:SPEed:TRACk[:ENABle] on page 1519
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:TORQue:TRACk[:ENABle] on page 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:TORQue:TRACk[:ENABle] on page 1519

Mode
Selects the scaling mode for display of the corresponding mechanical track. By default, the instrument selects the most appropriate scale. In "Manual" mode, you can change the vertical scale and offset.

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:AUTO on page 1519
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:AUTO on page 1519
P3PHase<m>:MDRive:EFFiciency:TRACk:AUTO on page 1519
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:AUTO on page 1519
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:AUTO on page 1519
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:AUTO on page 1519
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:AUTO on page 1519
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:AUTO on page 1519
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:AUTO on page 1519

Scale
Sets the vertical scale of the corresponding mechanical track if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:SCALe on page 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:SCALe on page 1520
P3PHase<m>:MDRive:EFFiciency:TRACk:SCALe on page 1520
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:SCALe on page 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:SCALe on page 1520
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:SCALe on page 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:SCALe on page 1520
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:SCALe on page 1521
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:SCALe on page 1521

Offset
Sets the offset of the corresponding mechanical track if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:OFFSet on page 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:OFFSet on page 1520

P3PHase<m>:MDRive:EFFiciency:TRACk:OFFSet on page 1520
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:OFFSet on page 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:OFFSet on page 1520
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:OFFSet on page 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:OFFSet on page 1520
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:OFFSet on page 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:OFFSet
on page 1520

12.4.6.8 Motor drive results



The results of motor drive measurements are provided as follows:

- The diagrams show the graphical presentation of the electrical waveforms and, if configured, the mechanical tracks. Depending on the selected configuration, the display can include:
  - The voltage waveform of the individual and total phases
  - The current waveform of the individual and total phases
  - The power waveform of the individual and total phases, The power waveform is the product of the current and voltage waveforms.
    See also Section 12.4.2.2, "3-phase power waveform", on page 452.
  - Mechanical tracks for speed, torque, angle, or mechanical power. See also Section 12.4.6.7, "Motor drive display", on page 478.
- For additional electrical visualization and detailed 3-phase analysis, it is recommended to add a 3-phase quality measurement and enable the display of a phasor diagram.
  See also:

– Section 12.4.3, "3-phase power quality", on page 455
– Section 12.4.3.7, "3-phase phasor diagram", on page 457

- The result table displays the numeric measurement results for the electrical and mechanical quantities of the motor drive measurement. If statistics are enabled, the table also shows the statistical values for each result:

Result table	Description
Angle	Mechanical angle or electrical angle, depending on the configured source and scaling
Speed	Rotational speed of the motor or shaft in the selected unit
Torque	Mechanical torque derived from the configured sensor scaling
Mechanical power	Mechanical output or input power calculated from torque and speed
Electrical power	Electrical input or output power calculated from the measured phase voltages and currents
Efficiency	Ratio between electrical power and mechanical power, depending on the selected operating mode and configured power flow direction

Remote commands: "3-phase power motor drive results" on page 1521.

12.5 Digital voltmeter

The software-based voltmeter features AC RMS, DC and DC RMS voltage measurements on a specific analog channel.

12.5.1 Using the digital voltmeter


To start a digital voltmeter measurement

1. Tap the "Menu" > "Apps" > "General" tab > "DVM", to open the digital voltmeter measurement dialog.



2. Select the channel for your measurement.
3. Select a "Filter bandwidth" from the list.
4. Set a "Measurement time".
5. Tap on a measurement to enable it. Available are "DC", "DC RMS", "AC RMS".

   The measurement results of all enabled measurements are displayed in the result table.

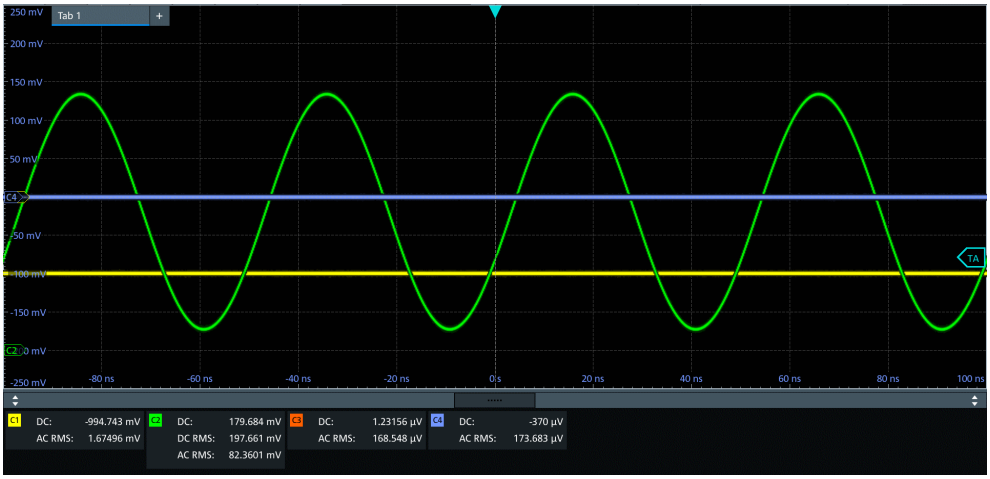

12.5.2 Settings of the digital voltmeter

Access: "Menu" > "Apps" > "General" tab > "DVM".



C<n>
Selects the channel which is measured by the digital voltmeter.

Filter bandwidth
Selects the filter bandwidth.

Remote command:
`METer:BANDwidth` on page 1550

Measurement time
Sets the measurement time. The time begins in the moment that a measurement is enabled.

Remote command:
`METer:MTIMe` on page 1553

Measurements
Enables the voltmeter measurements. When a measurement is enabled, the voltmeter is turned on automatically.

"DC" Enables the DC voltage measurement.

"DC RMS" Enables the DC RMS voltage measurement.

"AC RMS" Enables the AC RMS voltage measurement.

Remote command:
`METer:DVMeter<m>:ACRMs:ENABle` on page 1551
`METer:DVMeter<m>:ACRMs:RESult?` on page 1551
`METer:DVMeter<m>:DC:ENABle` on page 1552
`METer:DVMeter<m>:DC:RESult?` on page 1552
`METer:DVMeter<m>:DCRMs:ENABle` on page 1552
`METer:DVMeter<m>:DCRMs:RESult?` on page 1553

All on, All off
Enables/disables all voltmeter measurements.


12.6 XY-plot

XY-plots combine the voltage levels of two waveforms in one diagram. They use the voltage level of a second waveform as the x-axis, rather than a time base. This allows you to perform phase shift measurements, for example. You can display up to four different XY-plots.

You can analyse XY-plots, for example, with cursor and automatic measurements, zone trigger and mask test. Available analysis methods depend on the selected sources of the XY-plot.

12.6.1 Settings for XY-plots

Access: "Menu" > "Apps" > "General" tab > "XY"

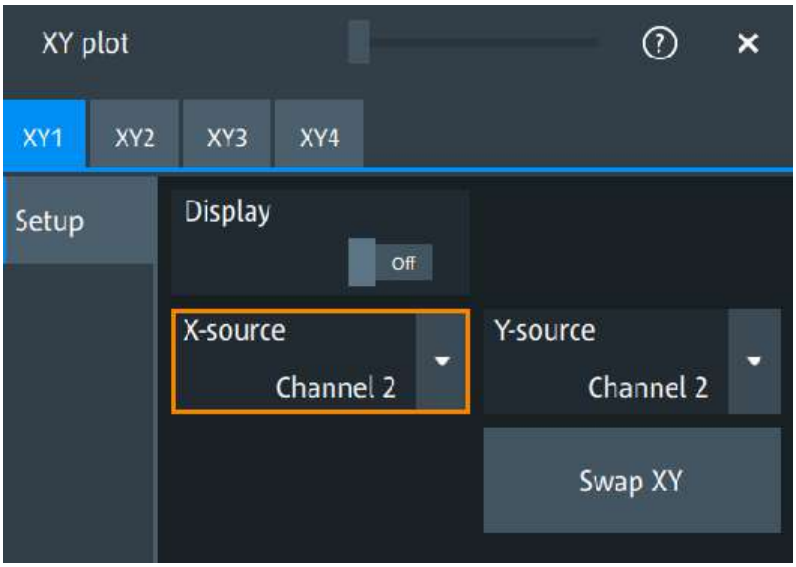

You can display up to four different XY-plots that use the voltage level of a waveform as the x-axis, rather than a time base.

Make sure to select the tab of the required XY-plot.

Display
If activated, the XY-waveform is active and shown in a diagram, or it is minimized in a signal icon.

Remote command:
`XY<m>[:STATe]` on page 1554

X-source, Y-source
Define the signal sources that supply the x-values and y-values of the XY-diagram.

Select from the active waveforms:

- Analog channel waveform
- Reference waveform
- Math waveform
- Track waveform (mask test and zone trigger on the resulting XY-plot is not possible)

Remote command:
`XY<m>:XSOurce` on page 1554
`XY<m>:YSOurce` on page 1554

Swap XY
Replaces the source of the x-axis with the source of the y-axis and vice versa.

Remote command:
`XY<m>:SWAP` on page 1553

12.6.2 Displaying an XY-diagram

To set up an XY-plot

1. Select "Menu" > "Apps".
2. In the > "General" tab, tap "XY".
3. In the "X-source" field, define the signal source that supplies the x-values of the XY-diagram.
4. In the "Y-source" field, define the signal source that supplies the y values of the XY-diagram.
5. Enable the "Display".
6. To switch the x- and y-values quickly, tap the "Swap XY" button.

12.7 Eye analysis (option R&S MXO5-K136)

The main application of eye diagrams is the analysis of signal integrity and signal quality. In particular, eye diagram analysis is used for serial communication standards, for both high-speed serial protocols (e.g. USB) and low-speed serial protocols (e.g. CAN).

12.7.1 Calculation and display of eye diagrams

The MXO 5 can generate eye diagrams. To build the eyes, the oscilloscope acquires a long waveform containing many bits. The instrument uses a timing reference (clock

signal or CDR) to cut the waveform into slices of 1-bit length, and superimposes the individual slices. The superimposed slices of consecutive bits build the eye. The timing reference defines the position of the individual data bits on the time axis, and so it provides the necessary timing marks to align and superimpose the waveform slices.

The method combines consecutive bits in the eye diagram and does not miss any bit of the acquisition. Eye generation also offers time control over the waveform slices contributing to the eye diagram. For example, you can select the bits contributing to the eye using a gate.

You can define up to 8 eye diagrams and configure them independently. Each eye has its own signal icon. You can move and minimize eye diagrams like any waveform diagram and analyze all eye diagrams in parallel.

The analysis functions for eye diagrams are described in Section 12.7.3, "Analysis of eye diagrams", on page 493.

12.7.2 Eye diagram setup


The configuration of an eye diagram consists of the selection and setup of the input source and timing reference. You can also adjust display settings and restrict the slices that contribute to the eye generation.

You can define up to 8 eye diagrams and configure them independently.

12.7.2.1 Basic setup

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Setup" tab

In the "Setup" tab, you configure the source, the reference levels, the timing reference and other eye definition settings.

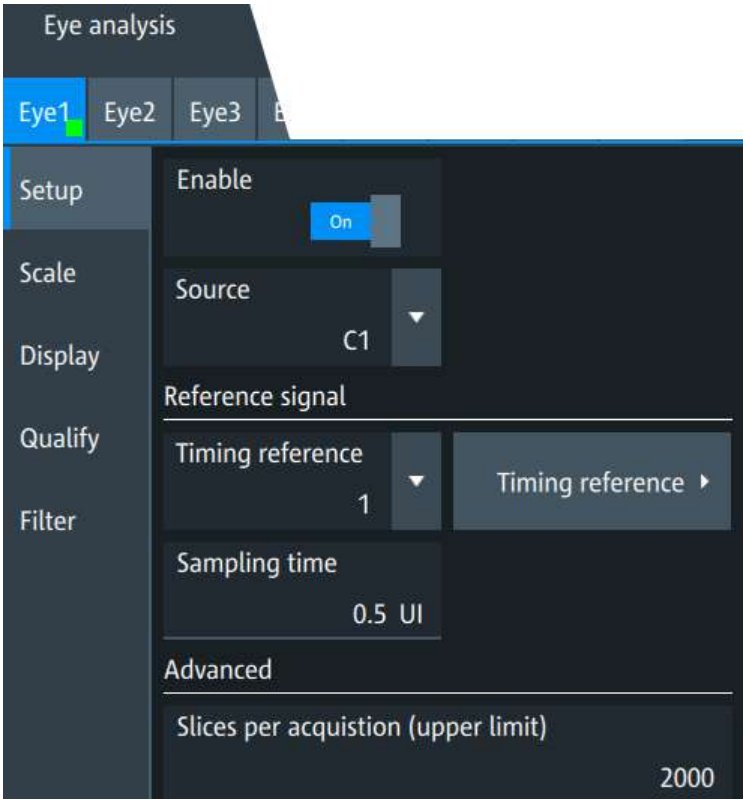

Enable
Activates or deactivates the eye diagram.

Remote command:
`EYE<e>:STATe` on page 1557

Source
Selects the waveform from which the eye diagram is generated. You can select analog channels, reference and math waveforms. For analog channels, peak detect, envelope, and average waveforms are not supported.

If the source waveform is minimized or hidden, no measurement results for the eye diagram are shown.

Remote command:
`EYE<e>:SOURce` on page 1557

Timing reference
Selects the timing reference, which defines the reference signal and the method that are used to obtain the timing information required to slice the data source waveform.

Remote command:
`EYE<e>:TREFerence` on page 1558

Timing reference
Opens the "Timing reference" tab, where you can configure the timing definitions using an explicit clock or clock data recovery. See Section 8.4, "Timing reference", on page 225 for details.

Sampling time
Sets a sampling time for the clock signal, an offset for the clock edge in relation to the bit start. A unit interval typically corresponds to a bit in the input data signal. The clock edge sets the beginning of the unit interval. The sampling time is a number between 0 and 1. Value 0 sets the clock edge to the beginning of the bit period; value 0.5 sets the clock edge to the middle of the bit period.


Remote command:
`EYE<e>:SAMTime` on page 1557

Slices per acquisition
Sets the number of waveform slices for a single acquisition.

Remote command:
`EYE<e>:MSLices` on page 1556

12.7.2.2 Scale settings

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Scale" tab

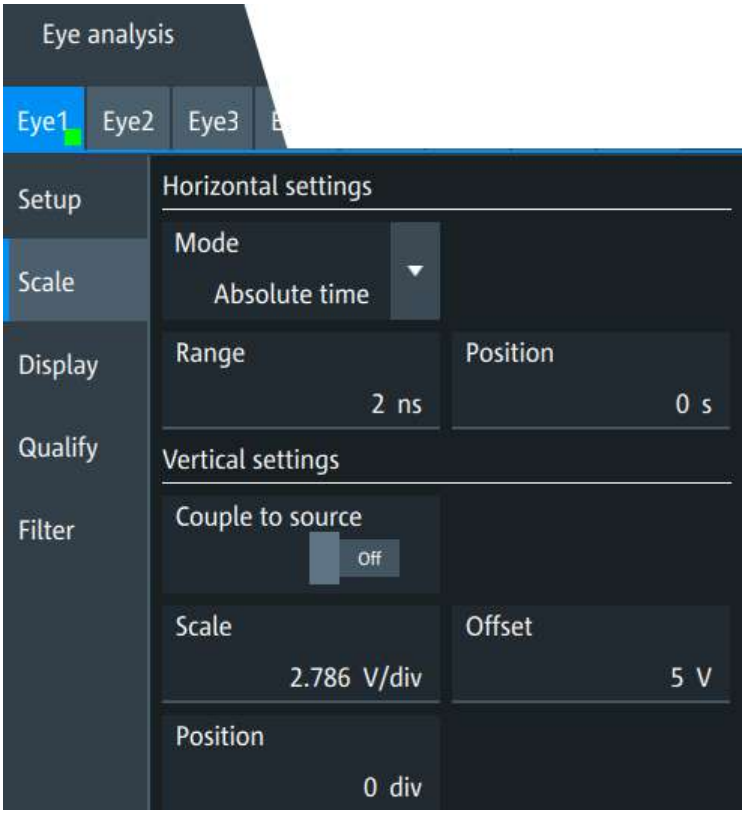

Mode
Sets the method to define the horizontal scale of the eye diagram: as absolute time, or in unit intervals. You can use a unit interval, if the nominal frequency of the clock signal is known.

Indirectly, the horizontal scale determines the size of one waveform slice. The waveform slice must be fully contained in the waveform acquisition to contribute to the eye diagram.

The time units value effects the following parameters:
- The units of the "Eye diagram".
- The position of cursor lines in the eye diagram.
- The X-position of segment points in mask tests on eye.

Remote command:
`EYE<e>:HORizontal:UNIT` on page 1559

Range
Sets the time range that is covered by the eye diagram in absolute time values or unit intervals.

Remote command:
`EYE<e>:HORizontal:ABSolute:RANGe` on page 1558
`EYE<e>:HORizontal:UINTerval:RANGe` on page 1559

Position
Defines the position of the zero point in the diagram, in seconds or unit intervals. The zero point is the alignment point on which the slice timestamps are superimposed.

Remote command:
`EYE<e>:HORizontal:ABSolute:POSition` on page 1558
`EYE<e>:HORizontal:UINTerval:POSition` on page 1559

Couple to source
If enabled, the vertical position and scale of the source are used.

Remote command:
`EYE<e>:VERTical:COUPle` on page 1560

Scale
Defines the vertical scale in Volts per division if the vertical settings are independent of the source settings. Increasing the scale compresses the display of the eye.

Remote command:
`EYE<e>:VERTical:SCALe` on page 1561

Offset
Sets the offset voltage of the eye if the vertical settings are independent of the source settings.

Remote command:
`EYE<e>:VERTical:OFFSet` on page 1560


Position
Moves the selected eye up or down in the diagram if the vertical settings are independent of the source settings.

Remote command:
`EYE<e>:VERTical:POSition` on page 1560

12.7.2.3 Display settings

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Display" tab

Each eye diagram has its specific persistence settings, independent of the general waveform persistence.

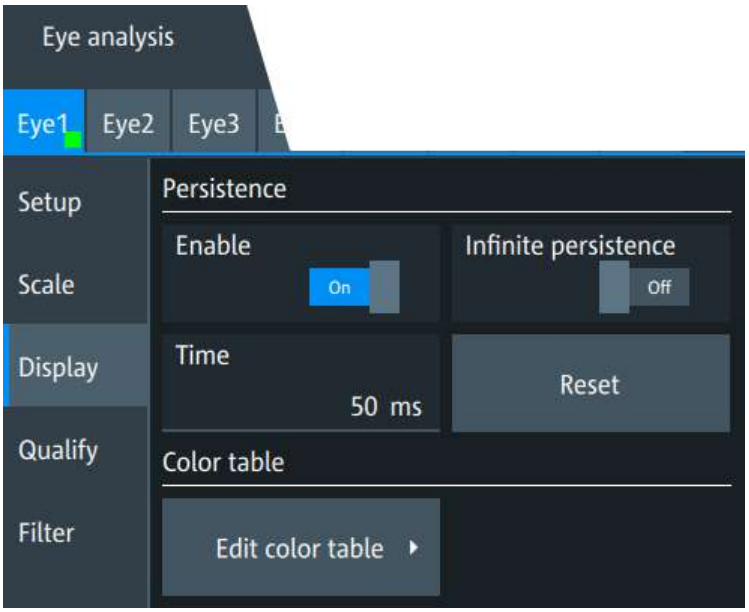

Enable
If enabled, each new data point in the diagram area remains on the screen for the duration that is defined using Time, or as long as Infinite persistence is selected.

If disabled, the waveform points are displayed only for the current acquisition.

Remote command:
`EYE<e>:DISPlay:PERSistence:STATe` on page 1555

Infinite persistence
If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled, or the display is reset. Use infinite persistence to display rare events in the signal.

Remote command:
`EYE<e>:DISPlay:PERSistence:INFinite` on page 1555

Time
Sets the time how long the eye points remain on the display.

Remote command:
`EYE<e>:DISPlay:PERSistence:TIME` on page 1556

Reset
Resets the display, removing all waveform points.


Remote command:
`EYE<e>:DISPlay:PERSistence:RESet` on page 1555

Edit color table
Like any other waveform, you can show the eye waveform in solid color, or apply a color table.

For a description of the color table settings, see Section 5.3.1, "Colors", on page 100.

12.7.2.4 Qualify settings

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Qualify" tab

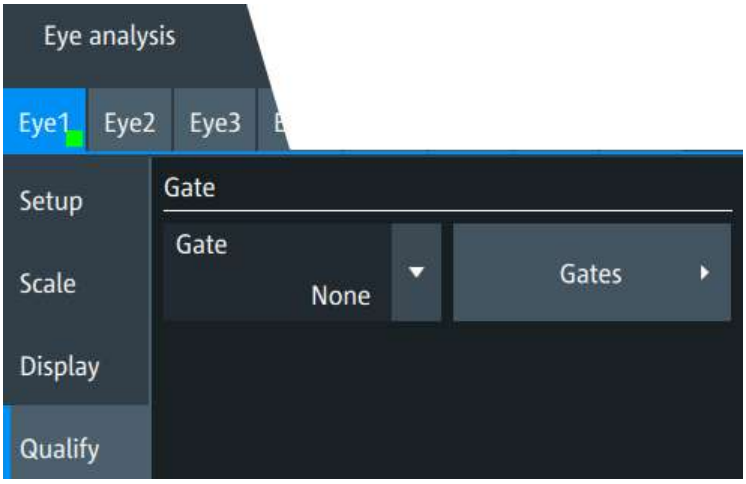

Gate
Selects the gate, which restricts the contributing slices in horizontal direction. Only the timestamps within the defined horizontal interval qualify for eye generation.


Remote command:
`EYE<e>:QUALify:GATE` on page 1556

Gates
Opens the "Gate" dialog, where you can configure the gates. See Section 8.3, "Gate setup", on page 224 for details.

12.7.2.5 Filter settings

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Filter" tab

In the "Filter" tab, you can set up an additional filter for the eye analysis. The filter selects waveform slices for eye generation dependent on the bit status.

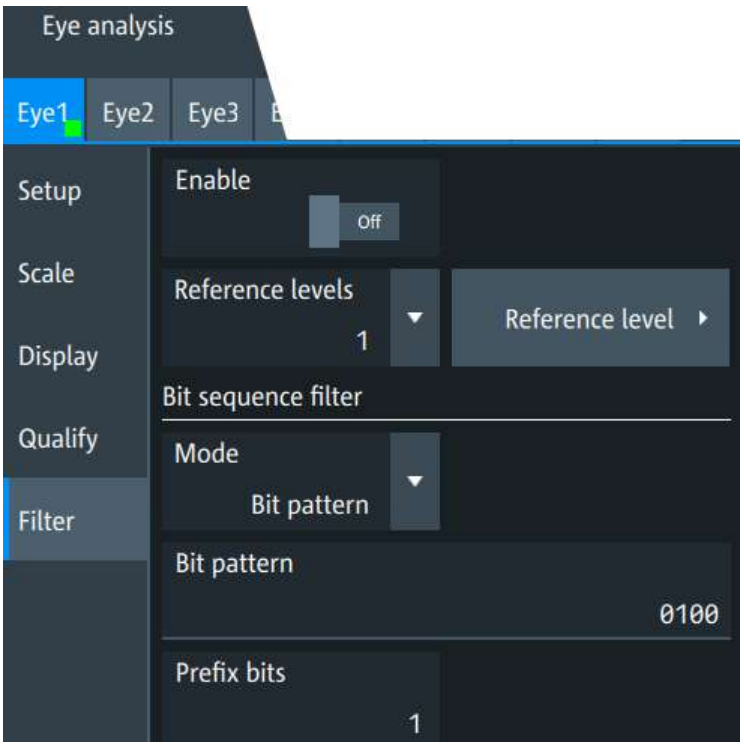

Make sure to select the correct eye diagram subtab before you adjust the settings.

Enable
Applies the filter settings.

Remote command:
`EYE<e>:FILTer:STATe` on page 1562

Reference levels
Selects the reference level set that is used by the filter to obtain the bits.

Remote command:
`EYE<e>:FILTer:RFLSet` on page 1562

Reference level
Opens the "Reference level" dialog, where you can configure the reference level sets. See Section 8.2, "Reference level setup", on page 221 for details.

Mode
Selects which bits contribute to the eye generation.

"Transition bits"	Only bits after a signal transition contribute (0 to 1, or 1 to 0).
"Non-transition bits"	Only bits without a preceding signal transition contribute (0 to 0, or 1 to 1).
"Bit pattern"	Only bits contribute that match the defined pattern around the center eye. Use the bit pattern, for example, to measure the effect of data-dependent jitter on the eye diagram.

Remote command:
EYE<e>:FILTer:BPATtern:MODE on page 1561

Bit pattern
Defines the bit pattern if "Mode" = "Bit pattern". You can define the length of the bit pattern, select the format, and enter the pattern.

Remote command:
EYE<e>:FILTer:BPATtern:SEQuence on page 1562

Prefix bits
Sets the number of prefix bits, which are the bits before the center eye (reference bit). Changing the number of prefix bits shifts the pattern to the left or to the right.

Remote command:
EYE<e>:FILTer:BPATtern:NPRBits on page 1562

12.7.3 Analysis of eye diagrams

To analyze eye diagrams, you can use the following functions of the MXO 5:

- **Zoom**
  You can zoom into eye diagrams using the zoom functions.
  For details, see Section 9.1, "Zoom", on page 234.
- **Cursor measurements**
  Cursors can be used on eye diagrams in the usual way. "Envelope 1", "Envelope 2" and "Track waveform" are not supported.
  For details, see Section 10.1, "Cursor measurements", on page 273.
- **Mask testing**
  You can test the created signal eye against a mask. Using this mask test, you can test data signals against eye shapes that are required in the standards. You can select and modify the shape of the eye and enter the position of the corner points.
  For details, see Section 12.1, "Mask testing", on page 356.

13 Data and file management

This section describes how to manage general and measurement settings, waveform data, measurement results, and screenshots.

13.1 Accessing, retrieving and handling data

Depending on the origin and content, this description distinguishes between the following data types:

- Operational data
- Non-operational data

Operational data (data for intended use)

The MXO 5 uses and creates this data because of its intended use and according to the settings and configuration you have made. Thus, this data makes up most of the data that the MXO 5 creates, such as user files that contain user-defined configurations or data, like instrument settings or measurement data.

You can access, retrieve and delete user files, see Section 13.2, "Save/recall dialog", on page 495.

Non-operational data (usage data)

The MXO 5 creates this data during and through its use. Such data is collected e.g. for troubleshooting, to help our customer support center find solutions quickly.

The MXO 5 does not generate this data continuously and in real-time; this data is saved on the product. You can store the data on a remote server, for example via a network connection.

The MXO 5 generates the following data:

- User and authentication data
- Security and access control
- Network and communication data
- Software and firmware update data
- Diagnostic and troubleshooting data
- Environmental conditions
- Hardware component metadata.

Only when you create a service report, this data is stored in a ZIP file, see Section 19.4, "Information for technical support", on page 2410. The ZIP file contains files in TXT, XML, LOG, and CSV format, as well as binary database formats for the diagnostic and troubleshooting data. The volume of the non-operational data depends on the usage of the product and typically amounts to about 20 MB.

For additional information on the different memory types of your product and on how to protect sensitive data, see Section 19.5, "Data security", on page 2411.

13.2 Save/recall dialog

The "Save/recall" dialog provides functions for saving and restoring data.

Access to save settings and data: "Menu" > "Save/recall" > "Save" tab.

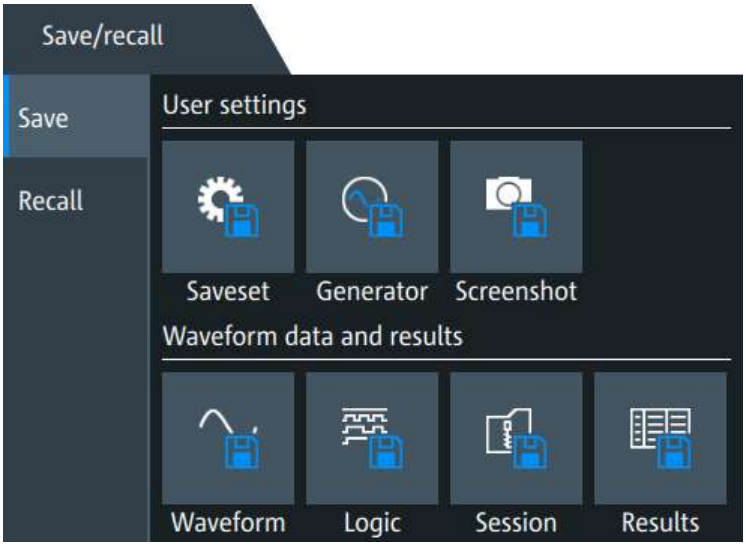


Figure 13-1: Save tab

Access to load settings and data: "Menu" > "Save/recall" > "Recall" tab.

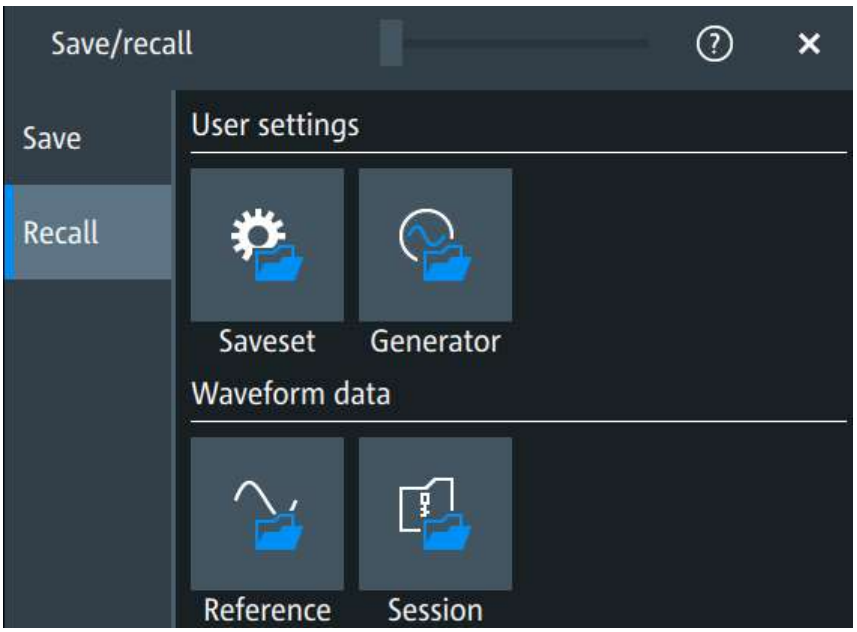


Figure 13-2: Recall tab

Using the "Save/recall" dialog, you can store or load various data to files for further usage, analysis and reporting:

- General settings: Section 13.3, "General and measurement settings: savesets", on page 497
- Analog waveforms: Section 13.4, "Data of analog waveforms", on page 501
- Logic channels: Section 13.5, "Data of logic channels", on page 517
- Reference waveforms: Section 13.4, "Data of analog waveforms", on page 501 and Section 9.4, "Reference waveforms", on page 257
- Histograms: Section 13.7, "Histogram data", on page 522
- Measurement results: Section 13.8, "Results", on page 527
- Sessions: Section 13.6, "Sessions", on page 519
- Screenshots: Section 13.9, "Screenshots", on page 529
- Decode results of serial buses: Section 14.1.8, "Export", on page 555

The [Camera] key can be configured to save or set up screenshots.

Storage locations

You can store data locally, or to a USB flash drive. For local storage, the path is always `/home/storage/userData`. The path has subdirectories to organize the data. For storage on USB flash drive, the default path is `/run/media/usb/<MyDriveName>/`. On both storage media, you can create directories to organize the data. You can also copy, paste and delete data.

On USB flash drives, the following file systems are supported: FAT32, FAT16, exFAT and NTFS.

The operating system differentiates between relative and absolute paths.
A relative path starts with your current directory and does not start with a `/`, e.g. `userData`.
An absolute path defines the location from the root directory, e.g. `/home/storage/userData`.

13.3 General and measurement settings: savesets

To repeat measurements at different times or perform similar measurements with different test data, you can save the used settings and load them again later. Furthermore, you can refer to the settings of a particular measurement when analyzing the results. Optionally, the current toolbar and dialog configuration can be included into the saveset.

Access: "Menu" > "Save/recall" > "Save" tab > "Saveset".

If you often save and load settings, try the following shortcuts:

- The "Save setup" toolbar icon saves the current settings to a file according to the settings in "Save/recall" > "Save".
- The "Recall" toolbar icon opens the dialog to select and load a setup.
- You can assign a saveset to the [Preset] key and the "Preset" function on the toolbar.
  See Section 5.6, "Preset setup", on page 113.

13.3.1 Using savesets

Savesets contain the complete general and measurement configuration. You can save an unlimited number of setting files.

To save settings to a saveset file

1. Open "Menu" > "Save/recall".
2. In the "Save" tab, tap the "Saveset" button.
   The save "Saveset" dialog opens.

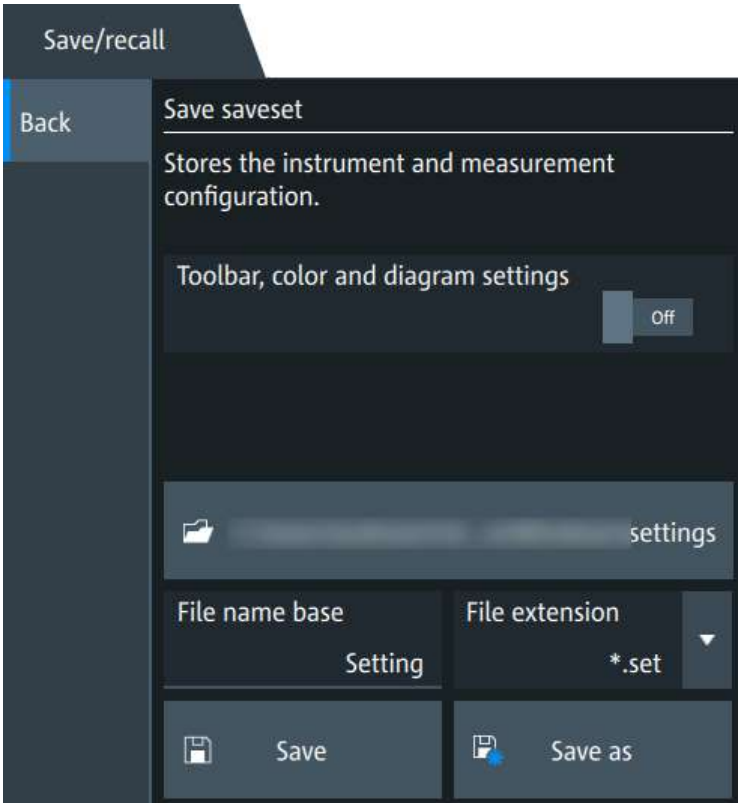


Figure 13-3: Save saveset dialog

3. If needed, enable "Toolbar, color and diagram settings".
4. Check the path on the "<Folder>" button. If the path does not fit, tap the button. Navigate to the folder, where you want to save the settings file.
5. Tap "Save to file".
   Alternatively, select "Save As" and select the destination folder and file name in the file selection dialog.

   The current settings are saved to the selected file.

To load settings from a saveset file

1. Open "Menu" > "Save/recall".
2. In the "Recall" tab, press the "Saveset" button.

   The recall "Saveset" dialog opens.

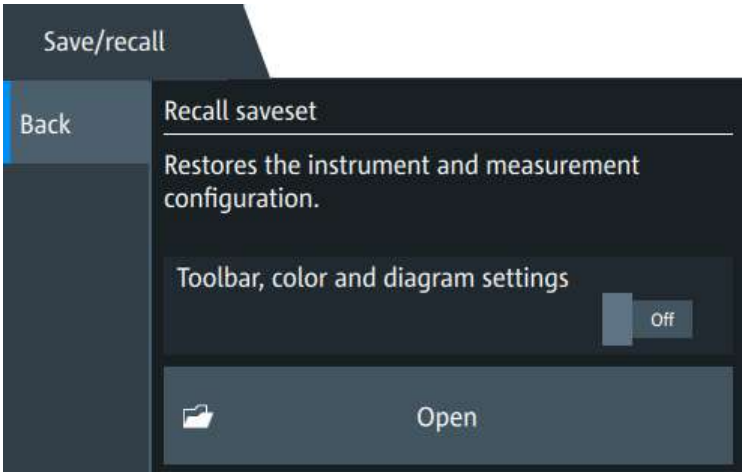


Figure 13-4: Recall saveset dialog

3. Tap "Open".
4. Navigate to the required saveset.

   The saved settings are loaded to the MXO 5.

Remote commands:

- `SAVeset:CONFig:UPReferences` on page 1284
- `MMEMory:SAV` on page 1283
- `MMEMory:RCL` on page 1283

13.3.2 Waveform generator saveset

Generator savesets store the instruments generator configuration.

To save settings to a saveset file

1. Open "Menu" > "Save/recall".
2. In the "Save" tab, press the "Generator" button.
   The save "Gen saveset" dialog opens.

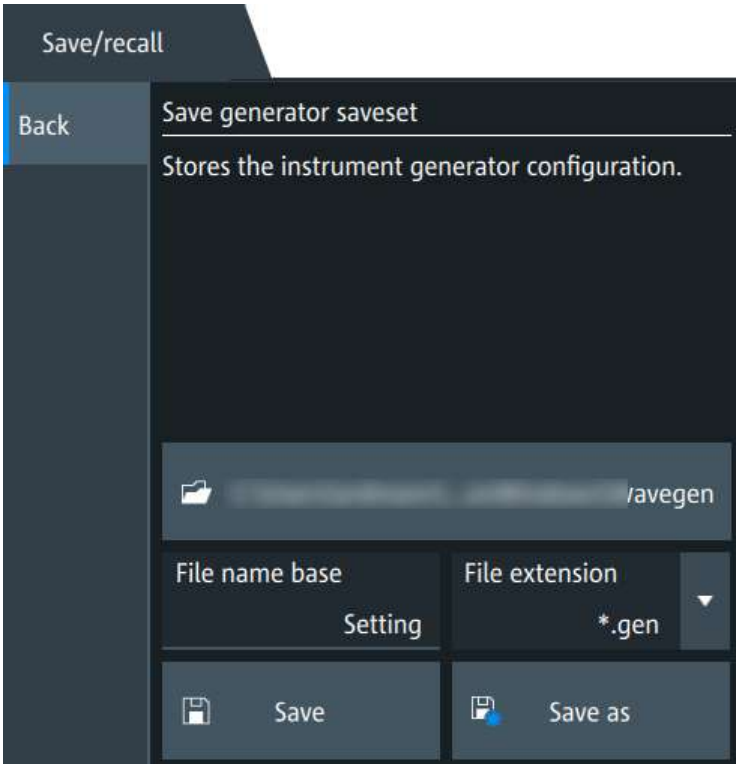


Figure 13-5: Save generator saveset dialog

3. Tap "Browse"

   The current settings are saved to the selected file.

To load settings from a saveset file

1. Open "Menu" > "Save/recall".
2. In the "Recall" tab, press the "Generator" button.

   The recall "Gen saveset" dialog opens.

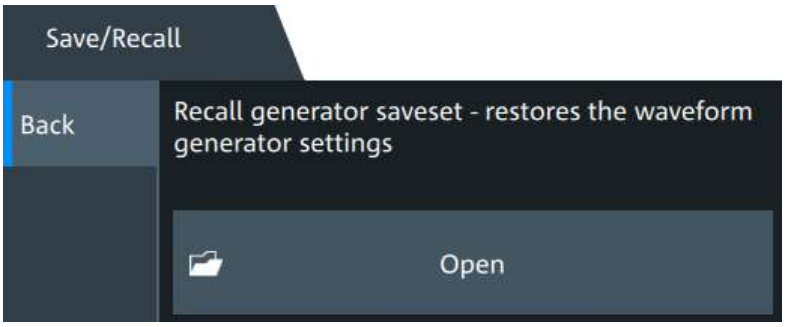


Figure 13-6: Recall generator saveset dialog

3. Tap "Open".

4. Navigate to the saveset.

   The saved settings are loaded to the MXO 5.

Remote commands:

- `GENerator:SAV` on page 1285
- `GENerator:RCL` on page 1284

13.4 Data of analog waveforms

You can save waveform data to files, and reload the data of REF files as reference waveforms.

13.4.1 Save waveforms: settings

Access: "Menu" > "Save/recall" > "Save" tab > "Waveform".

In this dialog, you define the storage settings for waveform data.

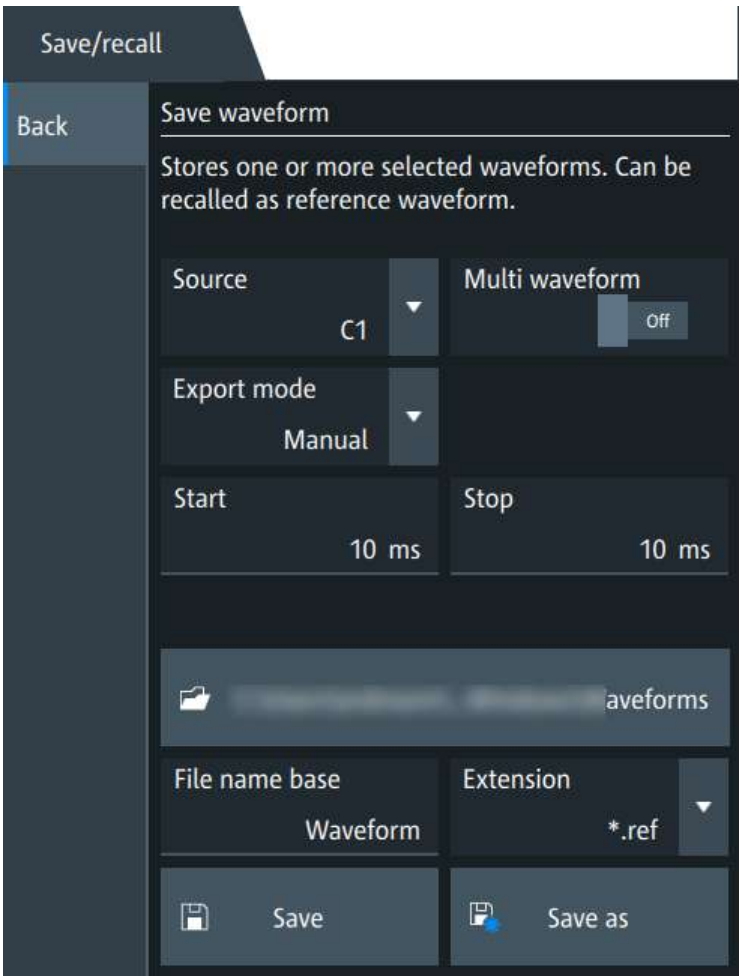


Figure 13-7: Save a single waveform

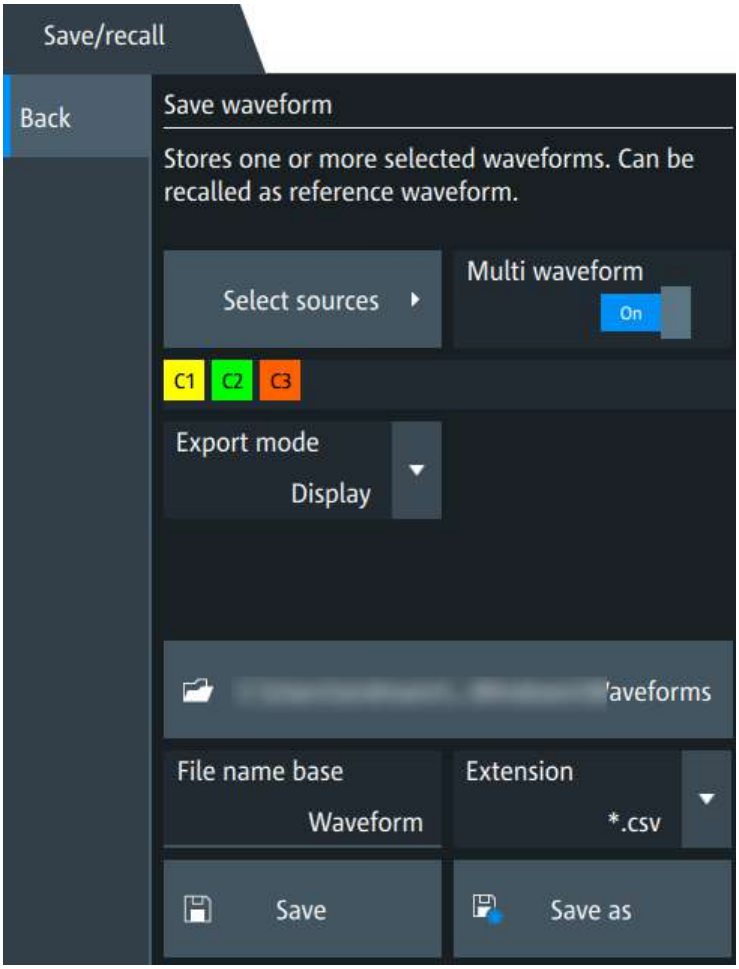


Figure 13-8: Save multiple waveforms

Source
Selects the waveform to be exported with single waveform export. The list shows all active waveforms that are available for export.

Analog and digital channels, math and reference waveforms, tracks and spectrum traces can be exported.

Remote command:
`EXPort:WAVeform:SOURce` on page 1288

Multi waveform
If set to "On", you can export several waveforms at once. Use Select sources to define the waveforms for data export. The following export formats are supported:

- REF files: One REF file per waveform is created. All REF files are combined in a ZIP file.
- HDF5 files: All data are written in one `.h5` file.
- CSV files: Multiple analog channels can be saved in one CSV file. Other waveform types are not supported.

For details, see Section 13.4.3, "Waveform export files", on page 508.

Select sources
The selection dialog provides all active waveforms. You can select or deselect all available waveforms at once with "All on" or "All off" on top of the dialog. You can also select or deselect all waveforms of a waveform group, using the button to the right of the group.

Analog and digital channels, math and reference waveforms, tracks and spectrum traces can be exported. Note that in CSV files, only multiple analog channels can be saved.



Remote command:
`EXPort:WAVeform:SOURce` on page 1288

Export mode
Defines the part of the waveform record that has to be stored.

"Display"	Saves the waveform data that is displayed in the diagram.
"All data"	Saves the complete waveform record.
"Cursor"	Saves the data between the cursor lines if at least one cursor measurement is defined for the source waveform. If several cursor sets are defined, select the "Cursor set" to be used for export.
"Gate"	Saves the data included in the measurement gate if a gated measurement is defined for the source waveform. Select the "Gate" to be used for export.
"Manual"	Saves the data between user-defined "Start" and "Stop" values.

Remote command:
`EXPort:WAVeform:SCOPe` on page 1287
`EXPort:WAVeform:CURSorset` on page 1286

EXPort:WAVeform:GATE on page 1286
EXPort:WAVeform:STARt on page 1289
EXPort:WAVeform:STOP on page 1289

Save settings
You define the details of the filename, extension and directory, and save the file.

A progress bar informs you about the process.

<Folder> ← Save settings
Opens a file explorer where you can select the directory where the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on EXPort:WAVeform:SAVE.

Remote command:
EXPort:WAVeform:AUTonaming:PATH on page 1286

File name base ← Save settings
Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on EXPort:WAVeform:SAVE.

Remote command:
EXPort:WAVeform:AUTonaming:NAME on page 1285

File extension ← Save settings
Selects the format of the exported file.

You can select between "*.csv" (Excel format), "*.ref" (Reference Waveform Format) and "*.h5" (HDF5 format). REF files can be reloaded as reference waveforms. See: Section 13.4.3, "Waveform export files", on page 508. If you have selected multiple waveforms other than analog channels, CSV is not available.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on EXPort:WAVeform:SAVE.

Remote command:
EXPort:WAVeform:AUTonaming:TYPE on page 1286

Save ← Save settings
Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

Save As ← Save settings
Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

Remote command:
EXPort:WAVeform:NAME on page 1287
EXPort:WAVeform:SAVE on page 1287

13.4.2 Saving waveforms

To save a single waveform

1. Open "Menu" > "Save/recall".
2. On the "Save" tab, tap "Waveform".

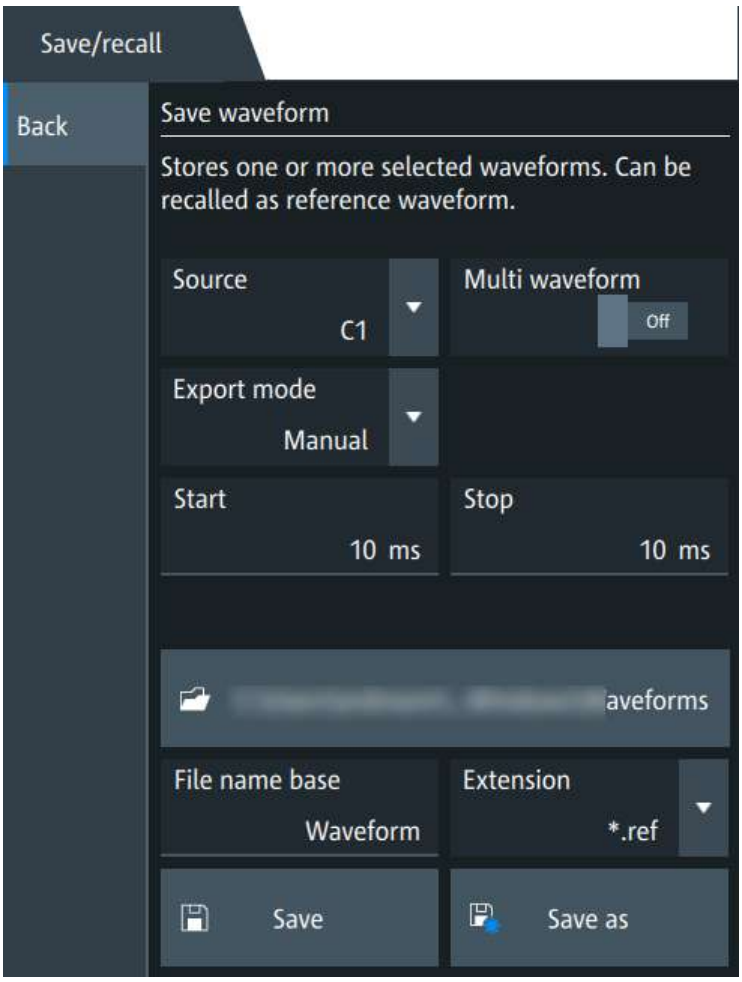


Figure 13-9: Save waveform dialog

3. Select the "Source".
4. Select the "Export mode" to define the exported part of the waveform.
5. If necessary, define the cursor, gate or start/stop values for the data.
6. Select the format of the export file: "File extension".
7. Set the "File name base".
8. Tap "Save" or "Save As".

   The selected waveform is saved to the specified file. A progress bar informs you about the saving process.

To save multiple waveforms

1. Open "Menu" > "Save/recall".
2. In the "Save" tab, tap "Waveform".
3. Enable "Multi waveform"


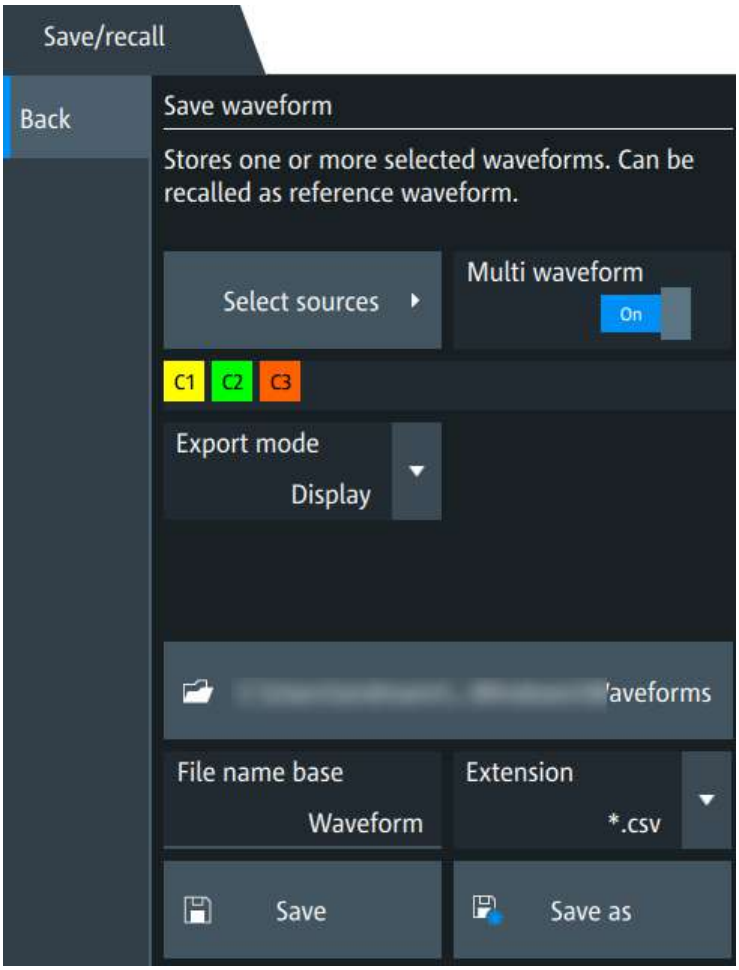


Figure 13-10: Save multiple waveforms dialog

4. Tap "Select sources".
5. Select the waveforms for export.

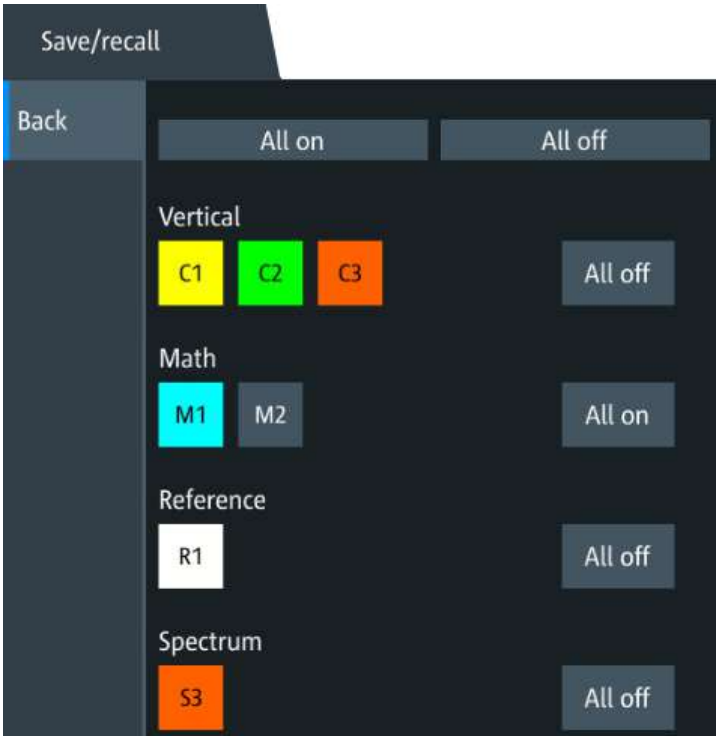

6. Tap "Back".
7. Select the "Export mode" to define the exported part of the waveform.
8. If necessary, define the cursor, gate or start/stop values for the data.
9. Select the format of the export file: "File extension".
10. Set the "File name base".
11. Tap "Save" or "Save As".

    The selected waveforms are saved to the specified file. A progress bar informs you about the saving process.

13.4.3 Waveform export files

You can store the waveform data in several formats:

- CSV (comma-separated values): ASCII-based format, easy access with Excel or text tools. See Section 13.4.3.1, "CSV files", on page 508.
- REF (reference waveform): binary data with XML header, can be reloaded as reference waveforms. See Section 13.4.3.2, "REF files", on page 512.
- HDF5 (`.h5`): binary container format for external processing of waveform data.

13.4.3.1 CSV files

A CSV file is a comma-separated values (CSV) text file, the waveform is stored in a table. The values are separated by commas.

You can convert the comma-separated text to columns. If you convert the data, take care of the correct number conversion, depending on the tool in use.

Content of waveform files

Header and data are written into one file. The first lines of the file contain header data, for example, time scale, vertical scale, vertical and horizontal positions. Header data is required to interpret the waveform data, and to analyze the data values of the data file.

Below the header, the waveform data follows. For each sample, one line is written. The first value is the X-value (time or frequency), the next is the Y-value in the unit indicated in the header data. For envelope or peak detect waveforms, two Y-values (minimum and maximum) are written for each sample.

	A	B	C	D	E	F
1	Model,MXO54					
2	SerialNumber,101416					
3	,					
4	SourceType,CHANNEL_TRACE					
5	SignalSource,Ch1Wfm1					
6	Resolution,2e-10					
7	RecordLength,1000					
8	HWRecordLength,1000					
9	HorizontalPosition,0					
10	TraceArithmetics,SINGLE					
11	BaseUnit,LEVEL_V					
12	BaseUnitRelative,OFF					
13	Impedance,50					
14	UserTermination,1M_OHM					
15	XStart,-1.0000000000000001e-07					
16	XStop,1.0000000000000001e-07					
17	TimebaseScale,2e-08					

37	TIME,C1
38	-1e-07,0.0031761544099682382
39	-9.98e-08,0.002565355484974346
40	-9.9599999999999999e-08,0.000977278279990227
41	-9.939999999999999e-08,0.0008551184949914487
42	-9.919999999999999e-08,0.00036647935499633513
43	-9.899999999999999e-08,-0.0010994380649890054
44	-9.879999999999998e-08,-0.0018323967749816759
45	-9.859999999999998e-08,-0.0020767163449792324
46	-9.839999999999998e-08,-0.002321035914976789
47	-9.819999999999998e-08,-0.001954556559980454
48	-9.799999999999998e-08,-0.0008551184949914487

Figure 13-11: CSV file of a time waveform, opened in Excel

	A	B	C	D	E
1	Model,MXO54				
2	SerialNumber,101416				
3	,				
4	SourceType,SPECTRUM				
5	SignalSource,SPECTRUM1_NORMAL				
6	BaseUnit,LEVEL_V				
7	BaseUnitRelative,OFF				
8	Impedance,50				
9	UserTermination,1M_OHM				
10	VerticalPosition,0				
11	VerticalScale,10				
12	VerticalOffset,-45				
13	BaseYStart,0				
14	BaseYStop,0				
15	ViewUnit,LEVEL_DBM				
16	ViewUnitRelative,OFF				
17	ViewReferenceLevel,0				
18	NumericFormat,DECIMAL				
19	CenterFreq,1000000000.0000001				
20	FreqSpan,2000000000				

33	FREQUENCY,SPECNORM1
34	-213623.27970552444,-49.02157013180808
35	549316.1734194754,-49.76955610540214 5
36	1312255.6265444753,-53.96493039074978
37	2075195.079669475,-61.57760265043916
38	2838134.532794475,-70.19729413316635
39	3601073.985919475,-73.24404760765583
40	4364013.439044475,-75.68197528968501
41	5126952.892169475,-91.81643862397064

Figure 13-12: CSV file of a spectrum waveform, opened in Excel

If you export multiple analog channels at once, one column per channel is written. For envelope or peak detect waveforms, two values per channel are written.

1	Model	MXO54C						
2	SerialNumber	100864						
3								
4	SourceType	CHANNEL_TRACE		CHANNEL_TRACE		CHANNEL_TRACE		CHANNEL_TRACE
5	SignalSource	Ch1Wfm1		Ch2Wfm1		Ch3Wfm1		Ch4Wfm1
6	Resolution	2.00E-10		2.00E-10		2.00E-10		2.00E-10
7	RecordLength	1000		1000		1000		1000
8	HWRecordLength	1000		1000		1000		1000
9	HorizontalPosition	0		0		0		0
10	TraceArithmetics	ENVELOPE		ENVELOPE		ENVELOPE		ENVELOPE
11	BaseUnit	LEVEL_V		LEVEL_V		LEVEL_V		LEVEL_V
12	BaseUnitRelative	OFF		OFF		OFF		OFF
13	Impedance	50		50		50		50
14	UserTermination	1M_OHM		1M_OHM		1M_OHM		1M_OHM
15	XStart	-1.00E-07		-1.00E-07		-1.00E-07		-1.00E-07
16	XStop	1.00E-07		1.00E-07		1.00E-07		1.00E-07

	TIME	C1 MAX	C1 MIN	C2 MAX	C2 MIN	C3 MAX	C3 MIN	C4 MAX	C4 MIN
37									
38	-1.00E-07	0.00586367	-0.006352309	0.002565355	-0.005130711	0.003786953	-0.005008551	0.003542634	-0.004275592
39	-9.98E-08	0.008551185	-0.003664794	0.002687515	-0.005252871	0.003542634	-0.004642072	0.003664794	-0.003909113
40	-9.96E-08	0.010750061	-0.000732959	0.003053995	-0.005008551	0.003176154	-0.00561935	0.003420474	-0.004275592
41	-9.94E-08	0.013804056	0.001588077	0.002931835	-0.005252871	0.003298314	-0.005375031	0.003786953	-0.004031273
42	-9.92E-08	0.016247251	0.004519912	0.003053995	-0.005130711	0.003053995	-0.005008551	0.003786953	-0.004764232
43	-9.90E-08	0.019179086	0.007451747	0.002565355	-0.005130711	0.003420474	-0.004764232	0.003909113	-0.004397752
44	-9.88E-08	0.021133643	0.010017102	0.002687515	-0.005130711	0.002931835	-0.004764232	0.004519912	-0.004397752
45	-9.86E-08	0.023576839	0.012582458	0.003420474	-0.004886391	0.003664794	-0.004397752	0.004275592	-0.004519912
46	-9.84E-08	0.025897874	0.015392133	0.003053995	-0.005130711	0.003664794	-0.004397752	0.004153433	-0.004031273

Figure 13-13: CSV file of four analog channels, envelope acquisition mode, opened in Excel and converted to columns

Header data

The header lines contain the following properties, depending on the type of the exported waveform (time or frequency):

Table 13-1: Header file properties in CSV files

Value	Description	Time	Frequency
Model	Model of the instrument	X	X
SerialNumber	Serial number of the instrument	X	X
SourceType	Type of the exported waveform	X	X
SignalSource	Source of the exported waveform	X	X
Resolution	Time between two samples *Resolution = 1 / Sample Rate*	X	
RecordLength	Number of samples in a waveform record of one acquisition	X	
HWRecordLength	Equivalent to the RecordLength	X	
HorizontalPosition	Horizontal position of the waveform in divisions	X	
TraceArithmetics	Arithmetic of the waveform: off, envelope, or average	X	
BaseUnit	Base unit of a mathematic waveform, for example, linear unit	X	X
BaseUnitRelative	Base unit, if a relative unit (e.g. dB) is enabled	X	X
Impedance	Input impedance, used for power calculation	X	X
UserTermination	User-defined load impedance connected to the probe	X	X
XStart	Horizontal start value of the waveform (time or frequency), as defined in the export settings	X	
XStop	Horizontal stop value of the waveform (time or frequency), as defined in the export settings	X	
TimebaseScale	Horizontal scale in seconds per division	X	
ReferencePoint	Position of the zero point in % of the screen	X	
VerticalPosition	Vertical position of the waveform in divisions	X	X
VerticalScale	Vertical scale of the waveform	X	X
VerticalOffset	Vertical offset of the waveform in Volts, or other unit	X	X
BaseYStart	Vertical start value of the waveform	X	X
BaseYStop	Vertical stop value of the waveform	X	X
ViewUnit	User-selected unit of a waveform, for example, logarithmic unit for a spectrum.	X	X
ViewUnitRelative	Indication of a relative unit. It is true if the ViewUnit implies a reference level, for example dB.	X	X
ViewReferenceLevel	Reference level for a relative unit. The value is only valid if the unit is relative (ViewUnitRelative = ON).	X	X
NumericFormat	Number format of bus values and digital channel data (bit pattern format)	X	X
EnhancementMode	Method to increase the sample rate if the required sample rate is higher than the ADC sample rate.	X	

Value	Description	Time	Frequency
InterpolationMode	Interpolation method. The value is relevant when the enhancement mode is interpolated time.	X	
CenterFreq	Center frequency of the spectrum		X
FreqSpan	Frequency span of the spectrum		X
ResolutionBW	Resolution bandwidth of the spectrum		X
FrequencyStart	Start frequency of the spectrum		X
FrequencyStop	Stop frequency of the spectrum		X
WindowType	Window used for the spectrum computation		X
GateRBWCoupling	Indication whether the record length or the resolution bandwidth is a constant for the spectrum computation		X
XAxisMode	Indicates a linear or logarithmic x-axis		X
HorizontalDivisionCount	Number of horizontal divisions	X	X
VerticalDivisionCount	Number of vertical divisions	X	X
FirmwareVersion	Firmware version that is installed on the MXO 5	X	X
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate: Sample, peak detect, HiRes, RMS	X	

13.4.3.2 REF files

The REF format is a specific format, which allows you to reload the waveform data as a reference waveform. The data is saved in a zipped file that contains two files per waveform. One file is a binary file (BIN file) and contains the waveform data values. The second file is an XML file and contains the header data in several data groups. Header data is required to reload the waveform from data, or to analyze the data values of the data file.

```
<?xml version="1.0" encoding="UTF-8"?>
<Group Name="SignalExportBase">
  <Group Name="SignalAttributes">
    <Prop Name="SourceType" Value="CHANNEL_TRACE" UserValue="NONE" />
    <Prop Name="SignalSource" Value="Ch1Wfm1" />
    <Prop Name="Resolution" Value="2.0000000000000001e-10" />
    <Prop Name="RecordLength" Value="1000" />
    <Prop Name="HWRecordLength" Value="1000" />
    <Prop Name="HorizontalPosition" Value="0" />
    <Prop Name="TraceArithmetics" Value="SINGLE" UserValue="SINGLE" />
    <Prop Name="BaseUnit" Value="LEVEL_V" UserValue="LEVEL_V" />
    <Prop Name="BaseUnitRelative" Value="OFF" UserValue="OFF" />
                        ⋮
    <Group Name="PostProcessingBufferSampleCounts">
      <Prop Name="DeltaPreSamples" Value="25" />
      <Prop Name="PreSamples" Value="500" />
      <Prop Name="PostSamples" Value="500" />
      <Prop Name="DeltaPostSamples" Value="29" />
    </Group>
  </Group>
</Group>
```

Figure 13-14: Header file in XML format, part of the REF file container

Table 13-2: Header file properties in REF files

Value	Description
SignalAttributes Same values as in CSV files, except for Model and SerialNumber. See Table 13-1.	
SignalAttributesPostProcessing	
SignalFormat	Format of the data values in the BIN file: INT8BIT, INT16BIT, INT32BIT, FLOAT, DOUBLE
Origin	WFM_EXPORT: export of one acquisition or export of multiple acquisitions
ByteOrder	Byte order of the values in the BIN file ● LSB first: little endian, least significant byte first ● MSB first: big endian, most significant byte first
NumberOfWaveforms	Number of waveforms. always = 1
TimestampState	OFF
Timestamp	Absolute time of the waveform recording in ISO 8601 format
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate
IsMinMax	If ON, then min and max values are saved for each sample. For envelope and peak detect waveforms.
IsComplex	If ON, then two values are saved for each sample (I and Q value).
TriggerOffsetToPostSampleInSeconds	Offset between the exact trigger position and the first sample after the trigger
SignalRecordLength	Number of samples in the BIN file. If the signal is a spectrum, the value indicates the number of FFT bins. The value can differ from RecordLength and HWRecordLength because the data file has additional samples before and after the record to consider interpolation and other waveform parameters and their dependencies.

Value	Description
SignalXStart	Time of the first sample in the acquired data. Different from XStart because the data file has additional samples before and after the record, and if only part of the data is exported.
SignalXStop	Time of the last sample in the data acquired. Different from XStop because the data file has additional samples before and after the record, and if only part of the data is exported.
AdjustedResolutionBW	Actual resolution bandwidth of a spectrum waveform. Only valid if the exported waveform is a spectrum.
NoiseBandwidth	Noise bandwidth of a spectrum waveform, required for power calculation. Only valid if the exported waveform is a spectrum.
ValuesPerSample	Number of y-values saved at each sampling time. The value is usually 1. The value is 2, if min and max values are saved for each sample, for example, for envelope waveforms.
NofQuantisationLevels	Number of quantization levels of y values
TOADone	If ON, then TriggerOffsetToPostSampleInSeconds is compensated.
SignalResolution	Time between two samples in this waveform. The value can differ from Resolution if the source is, for example, a spectrum. The value is determined automatically considering the waveform parameters and their dependencies. If the signal is a spectrum, the value indicates the frequency range of FFT bins.
HorizontalDomain	Domain of the x-axis (time or frequency)
PostProcessingVerticalAxisAttributes	
Range	Range of the signal in y-direction
Offset	Center of the y-range
Resolution	Resolution of the y-axis
IsLogarithmic	Indicates if the y-axis is logarithmic (ON or OFF)
PostProcessingSampleFormatAttributes	
ValueStorage	Interpretation of the data: is integer or float (floating point data)
ValueInterpretation	Indicates if the data is saved as binary ADC values (BINARY), or physical values (PHYSICAL)
SampleBitSize	Value size in bit, as used in processing
ValueBitSize	Value size of ADC data in bit
LsbExtensionBits	Number of bits the ADC value is shifted to the left in the CPU sample size
AdcValueBitSize	Number of bits of the ADC that was used to sample the signal. It does not include any additionally gained bits due to high definition mode.
IsSigned	Signed values (ON) or unsigned values (OFF)

Value	Description
PostProcessingBufferSampleCounts	
[DeltaPreSamples | PreSamples || PostSamples | DeltaPostSamples]	Indicates the distribution of the samples. || marks the trigger time. The sum of PreSamples and PostSamples matches the requested record length. DeltaSamples are additional samples that are needed for computation but they are not measured or displayed.

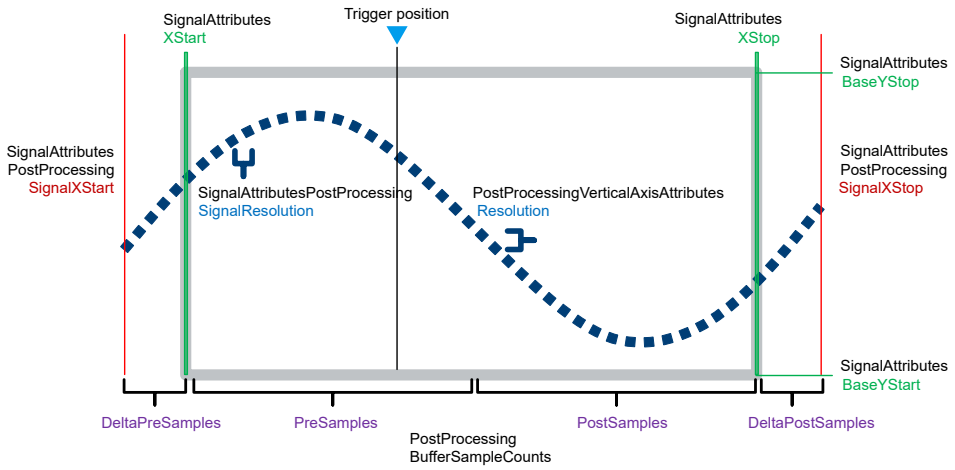


Figure 13-15: Main header properties at the waveform

Note: FractionalBits was removed in FW version 1.3.x. Reference waveforms created with older FW versions are compatible and can be reloaded.

13.4.3.3 HDF5 files

An HDF5 (`.h5`) file is a container format that contains attributes and waveform data. The format can be read by different programming languages with existing libraries. HDF5 stores binary data, thus the file size is smaller than CSV files.

Use the HDF5 format to export data from the MXO 5 and analyze the waveforms with external software.

You can save one or more waveforms in one HDF5 file.

The HDF5 file consists of several groups in a hierarchical structure. The data samples are float32 values of the physical values. No conversion is needed. For envelope and peak detect waveforms, two Y-values are written for each sample ("min" and "max").

Table 13-3: Contents and structure of the HDF5 file

Group	Subgroup	Attribute, example values, data	Description
/FileType			Type of the HDF5 file.
		Rohde&Schwarz: "MXO"	Instrument family.
		Version: "1.0"	Version of the HDF5 format.

Group	Subgroup	Attribute, example values, data	Description
/Frame			Export information.
		DateTime: "<ISO time stamp>"	Date and time of the file export.
		FirmwareVersion: "2.5.0.60"	Version of the instrument firmware.
		Model: "MXO44"	Instrument model.
		SerialNumber: "100000"	Serial number of the exporting instrument.
/Waveforms			Attributes and data.
	/Waveforms/C1		One subgroup for each waveform.
		Count: 1	Number of acquisitions, always = 1.
		NumPoints: 1000	Number of exported samples (record length of the exported waveform).
		XInc: 2e-10	Resolution, the time between two samples.
		XOrg: -1.0e-7	Horizontal start value of the waveform, time of the first sample.
		XUnit: "Time"	Unit of the horizontal axis (Time, Frequency).
		YUnit: "V"	Unit of the vertical axis.
		/Waveforms/C1/C1 Additional Info	Subgroup with further information. See "Additional info (/Waveforms/C1/C1 Additional Info)" on page 516.
		DataSet(/Waveforms/C1/C1 Data)	Data values.
		DateTime: "<ISO time stamp>"	Date and time of the trigger of this acquisition.
		TriggerOffsetToPostSampleInSeconds: 1.1e-12	Offset between the trigger time and the first sample after the trigger, in seconds.
		DataSet(/Waveforms/C1/C1 PreData)	Additional samples before the samples in DataSet, are used to settle the filters.
		DataSet(/Waveforms/C1/C1 PostData)	Additional samples after the samples in DataSet, are used to settle the filters.
	/Waveforms/C2	Analogous to /Waveforms/C1	
	/Waveforms/C3	Analogous to /Waveforms/C1	

Additional info (/Waveforms/C1/C1 Additional Info)

The `/Waveforms/C1/C1 Additional Info` group provides additional information on the waveform, which is not essential to interpret the waveform data. Most of this information is also available in the header of CSV or REF files.

Field	Description	Identical to CSV	Identical to REF
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate.	X	
EnhancementMode	Method to increase the sample rate if the required sample rate is higher than the ADC sample rate.	X	
HorizontalPosition	Horizontal position of the waveform in divisions.	X	
Impedance	Input impedance, used for power calculation.	X	
InterpolationMode	Interpolation method. The value is relevant when the enhancement mode is interpolated time.	X	
Label	Channel label, currently empty.		
NofQuantisationLevels	Number of quantization levels of y values.		X
ReferencePoint	Position of the zero point in % of the screen.	X	
SignalSource	Source of the exported waveform.	X	
SourceType	Type of the exported waveform.		X
TOADone	If ON, then TriggerOffsetToPostSampleInSeconds is compensated.	X	
TimebaseScale	Horizontal scale in seconds per division.	X	
TraceArithmetics	Arithmetic of the waveform: off, envelope, or average.	X	
UserTermination	User-defined load impedance connected to the probe.	X	
VerticalOffset	Vertical offset of the waveform in Volts, or other unit.	X	
VerticalPosition	Vertical position of the waveform in divisions.	X	
VerticalScale	Vertical scale of the waveform.	X	
XDispOrigin	X value on the left border of the screen.		
XDispRange	X value range that is shown on the screen.		
YDispOrigin	Y value of the bottom border of the screen.		
YDispRange	Y value range that is shown on the screen.		
YInc	Value of the quantization level of the Y values.		

13.5 Data of logic channels

You can save the data of logic channels only, without any other waveforms. This data is stored in a special session file, which you can analyze, and import in R&S ScopeStudio.

13.5.1 Save logic channels

Access: "Menu" > "Save/recall" > "Save" tab > "Logic".

You can save the data of all active logic channels together with relevant user settings to session files.

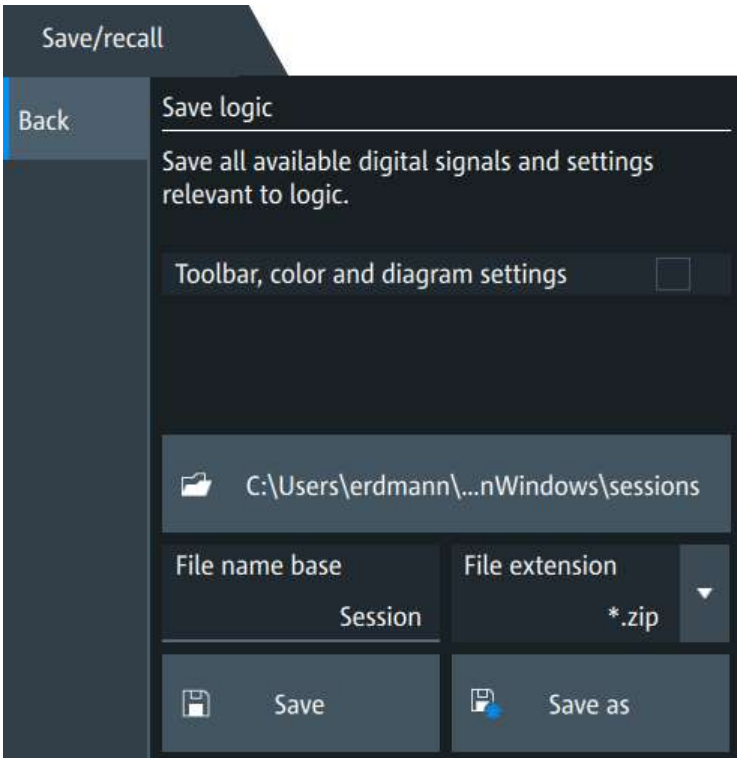


Figure 13-16: Save logic channels

Toolbar, color and diagram settings
If selected, the user-specific display settings for the toolbar, waveform colors and diagram settings are included in the file.

Remote command:
`SESSion:SAVE:REFerence` on page 1292

Save settings
Defines the filename and storage location.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the session file is always `.zip`.
"Save"	Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

"Save As" Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

A progress bar informs you about the process.

Remote command:
`SESSion:SAVE[:EXECute]` on page 1292
`SESSion:SAVE:ABORt` on page 1291

13.6 Sessions

Sessions store the general and measurement settings and the data of active channel waveforms and reference waveforms together in a ZIP file. The user-specific display settings for the toolbar, waveform colors and diagrams can also be included.

13.6.1 Save a session

Access: "Menu" > "Save/recall" > "Save" tab > "Session"

The session file includes active channel and reference waveforms and the current measurement setup. Before saving the session, consider where you want to use the session data.

- In R&S ScopeStudio, included waveforms and settings can be recalled. If both analog and digital channels are active, only digital channels are saved in the session file and can be loaded. Sessions with only digital waveforms can be saved and loaded.
- When recalling on an MXO oscilloscope, channel waveforms are not imported. Therefore, if you want to recall the session on an instrument, save channel waveforms as references and change the sources of analysis functions to these references before saving the session.

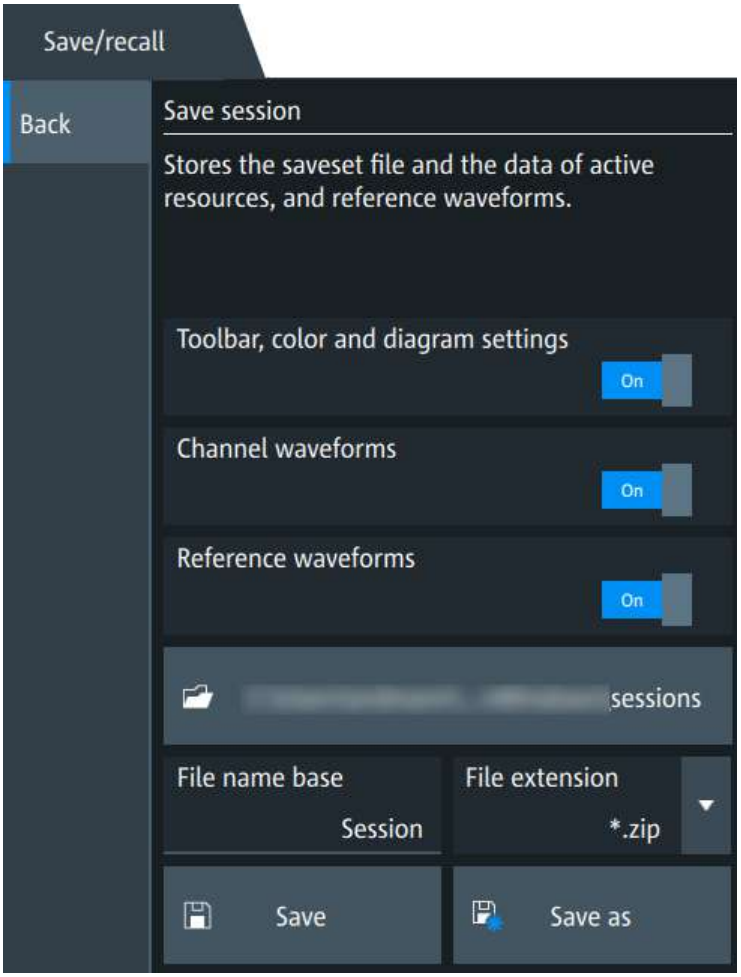


Figure 13-17: Save session dialog

Toolbar, color and diagram settings
If selected, the user-specific display settings for the toolbar, waveform colors and diagram settings are included in the file.

If you load a session, you can laod also the user settings if they are included in the file.

Remote command:
`SESSion:USERpref` on page 1292

Channel waveforms
Select if you want to include channel waveform data in the session file.

Remote command:
`SESSion:SAVE:CHANnel` on page 1291

Reference waveforms
Select if you want to include reference waveform data in the session file.

Remote command:
`SESSion:SAVE:REFerence` on page 1292

Save settings
Defines the filename and storage location.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the session file is always `.zip`.
"Save"	Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.
"Save As"	Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

A progress bar informs you about the process.

Remote command:
`SESSion:SAVE[:EXECute]` on page 1292
`SESSion:SAVE:ABORt` on page 1291

13.6.2 Load a session

Access: "Menu" > "Save/recall" > "Recall" tab > "Session"

When you recall a session, the settings and the reference waveforms (if included in the session file) are restored. You can also restore some user-specific display settings: toolbar, waveform colors, and diagram settings. Channel waveforms are not imported even if they are included in the session file. Therefore, save channel waveforms as references and change the sources of analysis functions to these references before saving the session.

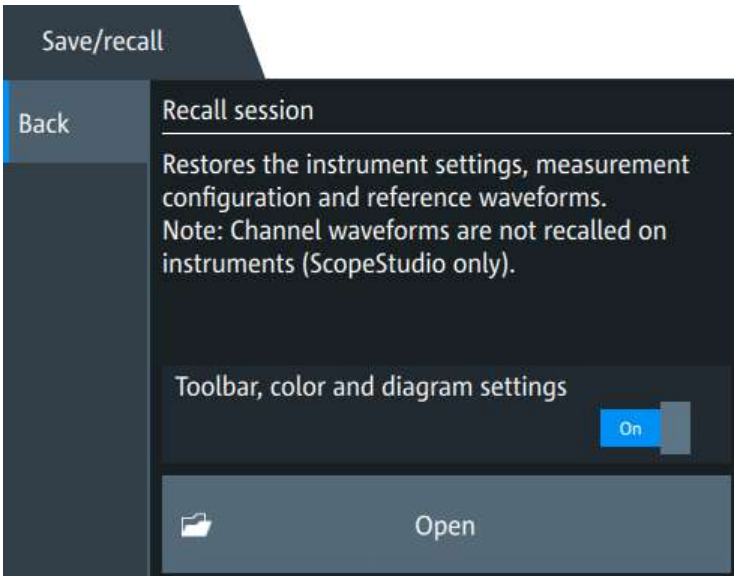


Figure 13-18: Recall session dialog

Toolbar, color and diagram settings
If selected, the user-specific display settings for the toolbar, waveform colors and diagram settings are included in the file.

If you load a session, you can laod also the user settings if they are included in the file.

Remote command:
`SESSion:USERpref` on page 1292

Open
Opens the file browser dialog. Select the required session file and tap "Open".

Remote command:
`SESSion:LOAD[:EXECute]` on page 1291


13.7 Histogram data

You can export the data of waveform histograms and histograms on measurement results to file.

13.7.1 Settings for histogram export

Access: "Menu" > "Save/recall" > "Save" tab > "Histogram".

The settings in the dialog are identical for all histogram types.

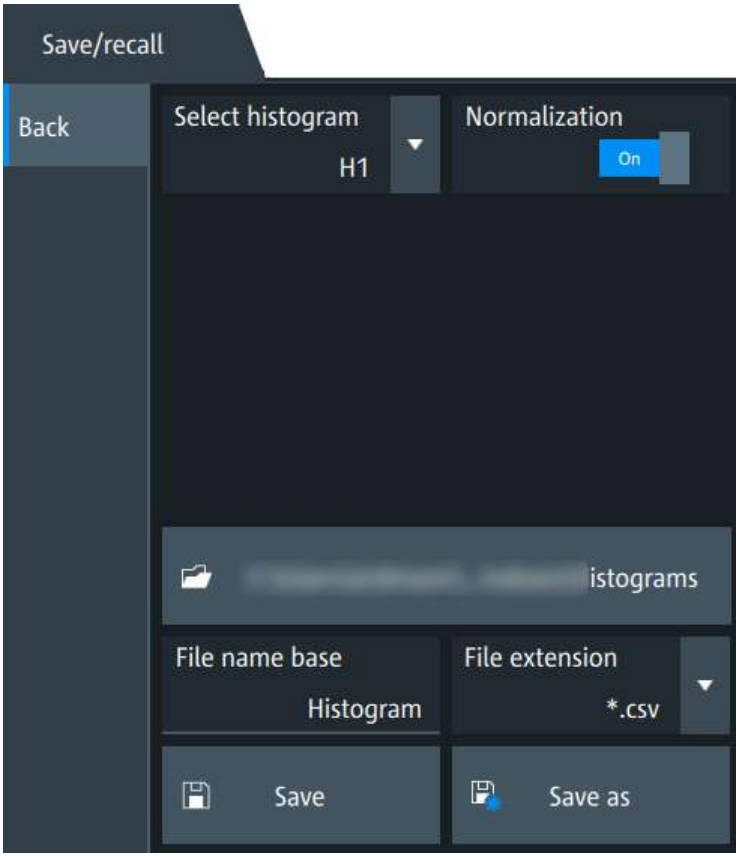

Select histogram
Select the histogram that you want to save. All active waveform histograms and histograms on measurement results are listed.

Normalization
If normalization is off, the number of samples in a given bin is exported as integer values. With normalization, the ratio of samples in a given bin to the sum of all samples is exported as float value. The sum of all normalized values is 1.

Remote command:
`EXPort:HISTogram<m>:NORMalize` on page 1290
`EXPort:HMEasurement<m>:NORMalize` on page 1290

Save settings
Define the filename and storage location, and start the saving process.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the histogram file is always `.csv`.

"Save" Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

"Save As" Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

A progress bar informs you about the process.

Remote command:
`EXPort:HISTogram<m>:NAME` on page 1290
`EXPort:HISTogram<m>:SAVE` on page 1290
`EXPort:HMEasurement<m>:NAME` on page 1290
`EXPort:HMEasurement<m>:SAVE` on page 1290

13.7.2 Files with waveform histograms

The data of one histogram is saved to one CSV file. The file content starts with header data followed by normalized or absolute histogram values.

The header has the following information:

- Name of the histogram
- Source waveform of the histogram
- Histogram mode: vertical or horizontal
- Normalization on or off
  - On: Data values are float values that represent the ratio of samples in a given bin to the sum of all samples. The sum of all normalized values is 1.
  - Off: Data values are integer values that represent the number of samples in a given bin.
- Histogram range: start and end values.
  - Vertical histograms: the values are given in the unit of the vertical axis
  - Horizontal histograms: the unit is s.
- Number of histogram bins

Example of file content

Table 13-4: Content of histogram CSV file

Normalization on	Normalization off	Number of the data row for value calculation
HistogramName,Hist1	HistogramName,Hist1	
HistogramSource,Ch1Wfm1	HistogramSource,Ch1Wfm1	
HistogramType,VERTICAL	HistogramType,VERTICAL	
Normalization,OFF	Normalization,ON	
HistogramStart,-0.25024431956999754	HistogramStart,-0.25024431956999754	
HistogramEnd,0.25012215978499874	HistogramEnd,0.25012215978499874	
BinCount,1024	BinCount,1024	
,	,	
,	,	
,	,	
DATA	DATA	
0	0	1
0	0	2
100	0.1	3
800	0.8	4
100	0.1	5
0	0	6
0	0	7
0	0	8

13.7.3 Files with histograms on measurement results

The data of one histogram is saved to one CSV file. The file content starts with header data followed by normalized or absolute histogram values.

The header has the following information:

- Index of the measurement
- Measurement type
- Measurement source
- Normalization on or off
  - On: Data values are float values that represent the ratio of samples in a given bin to the sum of all samples. The sum of all normalized values is 1.
  - Off: Data values are integer values that represent the number of samples in a given bin.
- Histogram range: start and end values in the measurement unit
- Number of histogram bins

Example of file content

Table 13-5: Content of histogram CSV file

Normalization on	Normalization off	Number of the data row for value calculation
MeasurementIndex,1	MeasurementIndex,1	
MeasurementType,AMPLITUDE	MeasurementType,AMPLITUDE	
MeasurementSource,C1	MeasurementSource,C1	
Normalization,OFF	Normalization,ON	
HistogramStart,-0.25024431956999754	HistogramStart,-0.25024431956999754	
HistogramEnd,0.25012215978499874	HistogramEnd,0.25012215978499874	
BinCount,1024	BinCount,1024	
,	,	
,	,	
,	,	
DATA	DATA	
0	0	1
3	0.003	2
100	0.1	3
700	0.7	4
...	...	5...

The bins that correspond to the clipping values are excluded in the histogram export. The limits of the histogram correspond to XRangeStart and XRangeEnd.

13.7.4 Data conversion

Using the header data, you can calculate the waveform value to which a histogram value belongs. The calculation is valid for vertical and horizontal histograms.

A histogram bin covers a domain of this width:

BinWidth = (HistogramStart - HistogramEnd) / BinCount

BinIndex is the index of the histogram bin of interest, starting with 1. It is the number of the DATA row in the CSV file.

The center value corresponding to a histogram bin is:

*Value = (HistogramStart - HistogramEnd) * (BinIndex - 0.5) / BinCount + Histogram-Start*

The domain covered by the histogram bin is: *Value +/- 0.5 * BinWidth*.

For the example in Table 13-4, the voltage value that corresponds to the histogram value 800 or 0.8 (histogram bin number 4) is:

*(0.25 - (-0.25)) * (4 - 0.5) / 8 - 0.25 = -0.03125 V*

The bin width in this example is *(0.25 - (-0.25)) / 8 = 0.0625 V*.

The 4th bin with value 800 covers a voltage domain of

*-0.03125 + 0.5 * 0.0625 = 0 V* to *-0.03125 - 0.5 * 0.0625 = -0.0625 V*


13.8 Results

You can save measurement results manually to a file, and automatically on trigger event or mask violation.

13.8.1 Save results: settings

Access: "Menu" > "Save/recall" > "Save" tab > "Results".

In this dialog, you define the storage settings for measurement results.

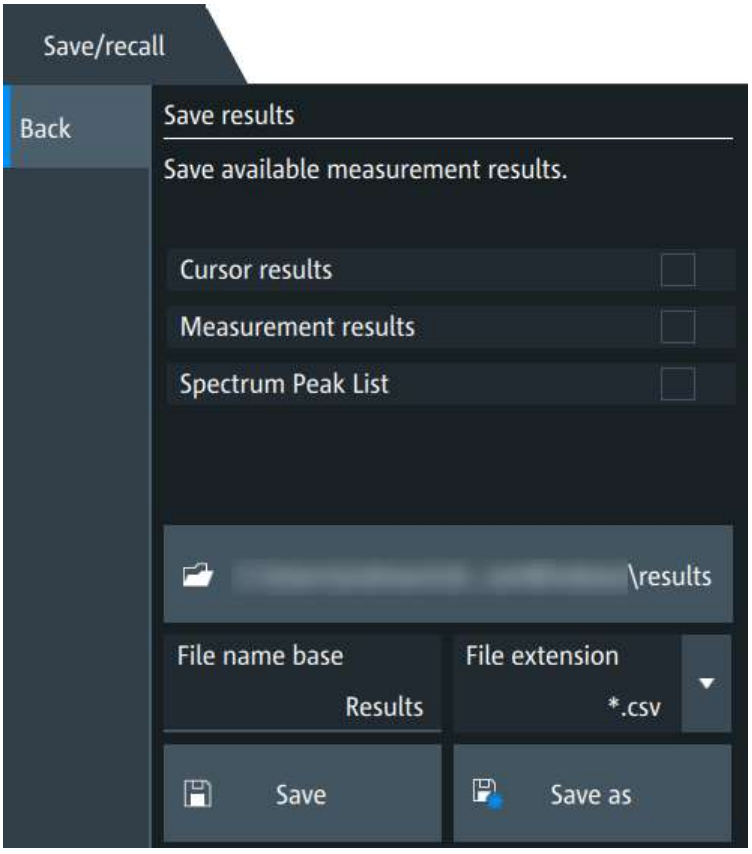

Save results name
Select the result tables to be saved: "Cursor results", "Measurement results", "Spectrum peak list". Only active result tables can be selected.

Remote command:
`EXPort:RESult:SELect:CURSor` on page 1294
`EXPort:RESult:SELect:MEASurement` on page 1294
`EXPort:RESult:SELect:PLISt` on page 1294

Save settings
You define the details of the filename, extension and directory, and save the file.

A progress bar informs you about the process.

<Folder> ← Save settings
Opens a file explorer where you can select the directory where the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Remote command:
`EXPort:RESult:AUTonaming:PATH` on page 1293

File name base ← Save settings
Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Remote command:
`EXPort:RESult:AUTonaming:NAME` on page 1293

File extension ← Save settings
Selects the format of the exported file. Result files have always the CSV format.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Remote command:
`EXPort:RESult:AUTonaming:TYPE` on page 1293

Save ← Save settings
Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

Save As ← Save settings
Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

Remote command:
`EXPort:RESult:NAME` on page 1293
`EXPort:RESult:SAVE` on page 1294

13.8.2 Saving results

1. Open "Menu" > "Save/recall".
2. In the "Save" tab, press the "Results" button.
   The "Results" dialog opens.

3. Select the results to be saved. The "Save results" results list shows all result tables that are currently open.
4. Select the target folder. Enter a "File name base" and select "Save".
   Alternatively, select "Save As" and define the target directory and filename in the file selection dialog.

   All selected results are written into one file.

13.9 Screenshots

To store the graphical results of the measurement, you can save a screenshot of the graphic area. To document current settings, the open dialog box can be included in the screenshot.

If you often save screenshots, try the following shortcuts:

- The "Screenshot" toolbar icon saves the current display to a file according to the settings in "Menu" > "Save/recall" > "Save" tab > "Screenshot".
- You can configure the [Camera] key to save screenshots by a single keypress. See also "Camera hardkey action" on page 112.

If a USB flash drive is connected, the default path of the user data directory is set to the USB flash drive. Thus, you save data to USB flash drive automatically, and you can change the directory in the file explorer at any time.

Screenshots on a computer using the Web interface

If the MXO 5 is connected to a LAN, you can create and save screenshots of the instrument's display on a computer. See Section 17.3.2.3, "Web control", on page 1063.

Meta information in screenshots

The metadata of the screenshot also contains instrument information. In PNG and JPEG files, meta information is saved as EXIF information and can be read, for example, using the ExifTool.

Example:

Reading meta information using the ExifTool.


Command: `# exif C:\Screenshot_2020-07-14_0_110551.png`

Result:

```
ExifTool Version Number         : 10.20
File Name                       : Screenshot_2016-07-14_0_110551.png
Directory                       : C:/
File Size                       : 37 kB
File Modification Date/Time     : 2020:07:14 11:05:51+02:00
File Access Date/Time           : 2020:07:14 11:05:51+02:00
File Creation Date/Time         : 2020:07:14 11:05:51+02:00
...
Instrument Firmware Version     : 3.30.0.46
Instrument Material Number      : 1329.7002k44
Instrument Serial Number        : 123456
Image Size                      : 1280x800
Megapixels                      : 1.0
```

13.9.1 Screenshot settings

Access: "Menu" > "Save/recall" > "Save" tab > "Screenshot"

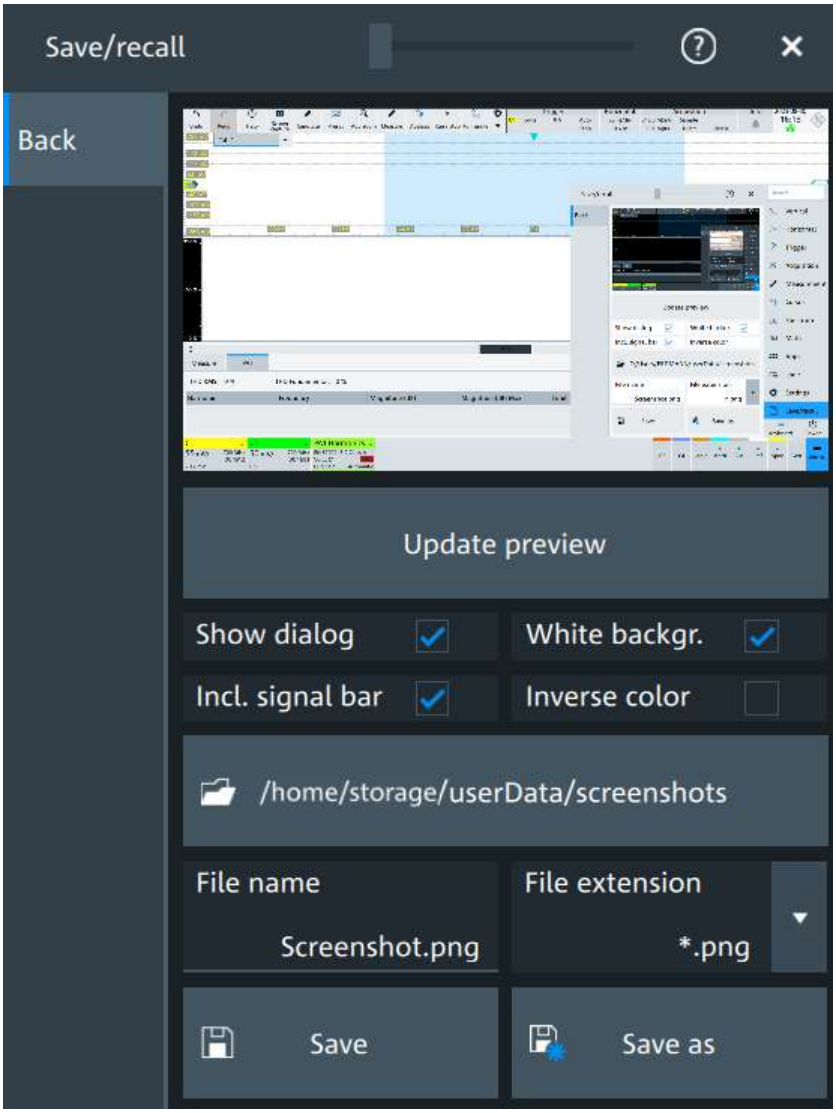

In the "Screenshot" dialog box, you configure the image to be saved or included in a report. You select the storage location for screenshot files. The image is created when you open the dialog box, and can be updated at any time.

You can also edit the colors of the image before saving it, and include an open dialog box or the sidebar in the image.

Preview 532
Update 532
Show setup dialog 532
White background 532
Include signal bar 532
Inverse color 532
Save settings 532
└ <Folder> 533
└ File name base 533

└ File extension....533
└ Save....533
└ Save As....533

Preview
Shows a preview of the screenshot. The image is created when the dialog box opens.

Update
Updates the preview of the screenshot with the current display view, e.g. after changes to the settings have been made, or an additional channel has been activated.

Show setup dialog
If enabled, the currently open dialog box is included in the screenshot.

Remote command:
`HCOPy:SSD` on page 1297

White background
Inverts the background color, so you can picture waveforms with normal waveform colors on white background.

If both "White background" and "Inverse color" are enabled, the background is inverted twice, and it appears black.

"White background"	"Inverse color"	Background	Waveform and results
On	Off	White	Screen colors
Off	On	White	Inverted colors
On	On	Black	Inverted colors
Off	Off	Black	Screen colors

Remote command:
`HCOPy:WBKG` on page 1297

Include signal bar
If enabled, the screenshot shows the signal bar below the diagram area.

Remote command:
`HCOPy:ISBA` on page 1297

Inverse color
Inverts the colors of the output, i.e. a dark waveform is shown on a white background.

Remote command:
`HCOPy:DEVice<m>:INVerse` on page 1296

Save settings
You define the details of the filename, extension and directory, and save the screenshot.

A progress bar informs you about the process.

<Folder> ← Save settings
Opens a file explorer where you can select the directory where the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation.

Remote command:
`HCOPy:DESTination<m>` on page 1295

File name base ← Save settings
Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation.

Remote command:
`MMEMory:NAME` on page 1295

File extension ← Save settings
Selects the format of the exported file.

You can save the screenshot as `*.jpg` or `*.png` file.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation.

Remote command:
`HCOPy:DEVice<m>:LANGuage` on page 1295

Save ← Save settings
Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

Remote command:
`HCOPy:IMMediate<m>:NEXT` on page 1296
`HCOPy:IMMediate<m>` on page 1296

Save As ← Save settings
Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

13.9.2 Configuring and saving screenshots

You can select which elements are shown in the screenshot, invert the colors and the background color. A preview of the current image is shown for reference.

1. Open the "Menu" > "Save/recall" > "Save" tab > "Screenshot".
2. To enhance the images for later print on white paper, enable "White background" or "Inverse color". If you print this image later on a monochrome printer, you get a grayscaled picture. The contrast of the gray lines depends on waveform colors and the printer used.

3. To change the directory, tap "<Folder>", and configure the path.

   The symbols of often used target folders are listed on the left of the file explorer. By default, screenshots are saved in the `/home/storage/userData/ScreenShots` directory.

4. Select the "File extension".

5. Tap "Save".

   The file is saved with an automatic name in the specified folder.

6. To save further screenshots, use one of the following ways:

   - Configure the [Camera] key. Press the key to save a screenshot.
     See also Camera hardkey action.
   - Add the "Screenshot" icon to the toolbar. Tap the icon to save an image.
     See Section 4.4.2, "Configuring the toolbar", on page 67.
   - Tap "Save" in the "Screenshot" dialog. The filename contains a number, which is automatically counted up.
   - To save the image with a dedicated filename or to another directory, tap "Save As" in the "Screenshot" dialog.
     Select the path, enter a filename, and tap "Save".

13.9.3 Image viewer

You can look at the saved screenshots directly, without transferring them to a computer or using a dedicated software.

1. Add the "Image viewer" icon to the toolbar.

2. To view the saved screenshots, select the icon.

   You can scroll the images, browse in other folders, and use the "Auto play" function for viewing.

13.10 File browser dialog

The file browser dialog provides a file explorer from which you can select a file to load or to save data to. You can also manage your files in this dialog.

Access: "Menu" > "Apps" > "File browser".



Path
Navigate the path elements to change the current folder. The default folder is defined in Section 5.8.1, "Autonaming", on page 121.

You can save the data in a local folder, to an external storage device (usually a USB flash drive), or to a folder on a connected network drive. The path list provides all available drives and folders.

On the left, shortcut icons provide access to often used folders.

Toolbar
The toolbar on the top provides various functions for file management.

"Filter"	Displays only the files and folders that match the current search term.
"Delete"	Deletes the selected file or folder.
"New folder"	Creates new folder in the current directory.
"Rename"	Renames the selected file.
"Find"	Searches for files within the current folder.
"Copy"	Copies the selected file.
"Paste"	Pastes the file.

File name
The file name to be loaded or stored to. Tap the file name, or tap the keyboard icon to enter the file name using the online keyboard.

The default file name for new files is defined in the "Autonaming" tab, see Section 5.8.1, "Autonaming", on page 121.


File type
The file extension of the file to be loaded or stored to.

Save, Select
Selects the specified file for the open or save operation and closes the dialog box.

Cancel
Closes the dialog box without selecting a file.

14 Protocol analysis

Using the serial protocol options for the MXO 5, you can analyze various serial protocols.

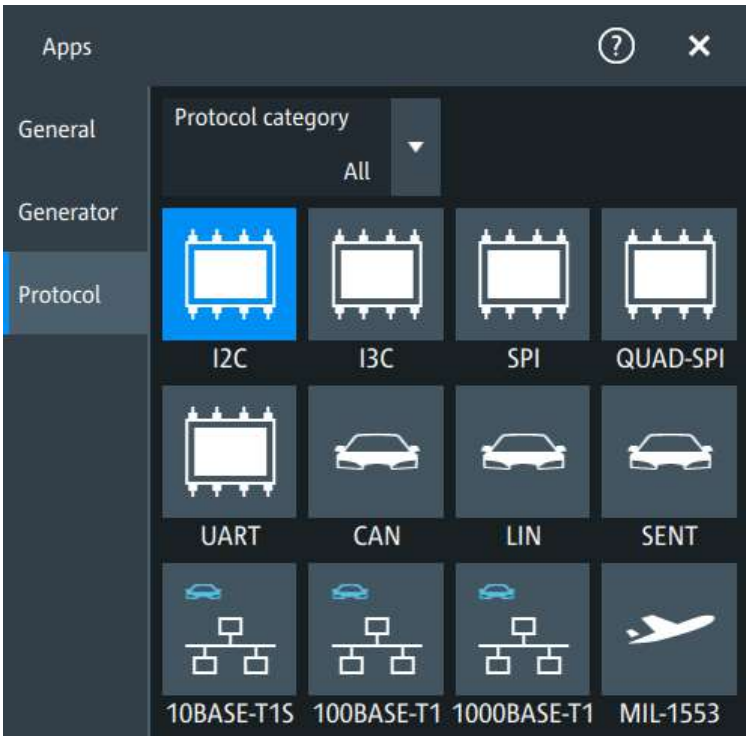

- Basics of protocol analysis....537
- SPI bus (IC electronics, option R&S MXO5-K510).... 560
- QUAD-SPI bus (IC electronics, option R&S MXO5-K510)....580
- OCTO-SPI bus (IC electronics, option R&S MXO5-K510)....595
- I²C (IC electronics, option R&S MXO5-K510).... 611
- I3C (IC electronics, option R&S MXO5-K550).... 635
- D-PHY (option R&S MXO5-K580)....654
- UART (IC electronics, option R&S MXO5-K510).... 675
- NRZ clocked & unclocked (option R&S MXO5-K510)....696
- Manchester (option R&S MXO5-K510)....719
- 8b/10b (option R&S MXO5-K510)....740
- CAN (automotive electronics, option R&S MXO5-K520).... 758
- LIN (automotive electronics, option R&S MXO5-K520).... 786
- SENT (automotive electronics, option R&S MXO5-K520).... 806
- ARINC 429 (aerospace electronics, option R&S MXO5-K530)....828
- SpaceWire (aerospace communications, option R&S MXO5-K530).... 845
- MIL-1553 (aerospace electronics, option R&S MXO5-K530)....862
- SPMI (mobile electronics, option R&S MXO5-K550).... 880
- RFFE (mobile electronics, option R&S MXO5-K550)....903
- 10BASE-T1S (automotive Ethernet, option R&S MXO5-K560).... 923
- 100BASE-T1 (automotive Ethernet, option R&S MXO5-K560)....942

- 1000BASE-T1 (automotive Ethernet, option R&S MXO5-K560)..... 958
- USB 1.1 (option R&S MXO5-K570)..... 976
- USB 2.0 (option R&S MXO5-K570)..... 999

14.1 Basics of protocol analysis

With the MXO 5 oscilloscope, you can decode selected protocols.

With dual-path protocol analysis, you can set the instrument sample rate for the waveform path and the oscilloscope automatically uses another internal decoupled sample rate for the decoding path. Even with very slow sample rates, the protocol data is correctly decoded.

With the MXO 5, you can use deep memory to capture more packets. The oscilloscope can capture long time periods where the cause and result are distanced in time. Over the entire capture, signal detail is time-correlated with packet content for fast debug.

Before you can analyze a serial signal, the bus has to be configured according to the protocol and specifics of the signal. The configuration contains:


- Assignment of the data and clock lines to the input channels
- Logical thresholds
- Protocol-specific settings

Serial data can be analyzed in several ways:

- Triggering: You can trigger on various events that are typical for the selected protocol type, for example, on start and stop of messages, or on specified data patterns in the message.
  Triggering on a trigger event sequence is not supported, and holdoff settings are not available.
- Protocol decoding: The digitized signal data is displayed on the screen together with the decoded content of the messages in readable form, and the decode results are listed in a table.

14.1.1 Setup - general settings

For all protocols, configuration starts with the selection of the serial bus and the protocol.

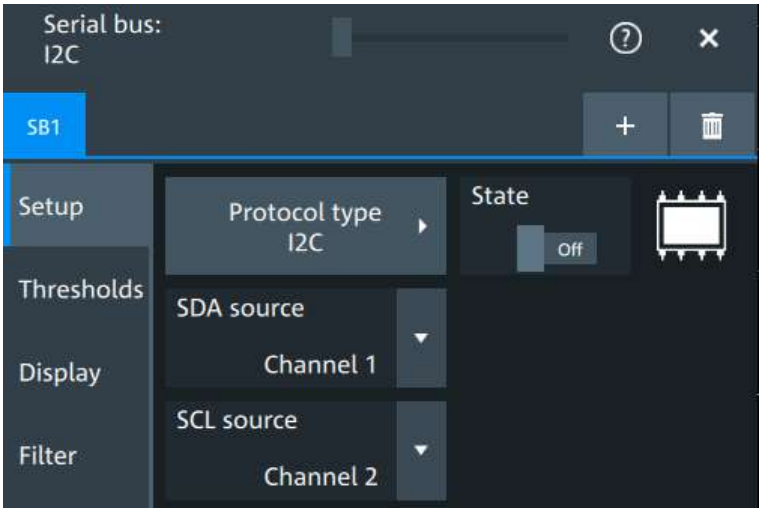

Configuration settings are protocol-specific. They are described in the related sections.

Make sure that the tab of the correct serial bus is selected.

SB1 /SB2 /SB3 /SB4
Select the correct bus tab before you enter the settings.

Add serial bus, Delete serial bus
Use the icons on the upper right to add a new bus, or to delete the selected serial bus.

Remote command:
`SBUS<sb>:RMSBus` on page 1566 (delete)

Protocol type
Selects the protocol type to be decoded.


Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

14.1.2 Thresholds

In the "Thresholds" tab, you can set values for the threshold and hysteresis of the signal.

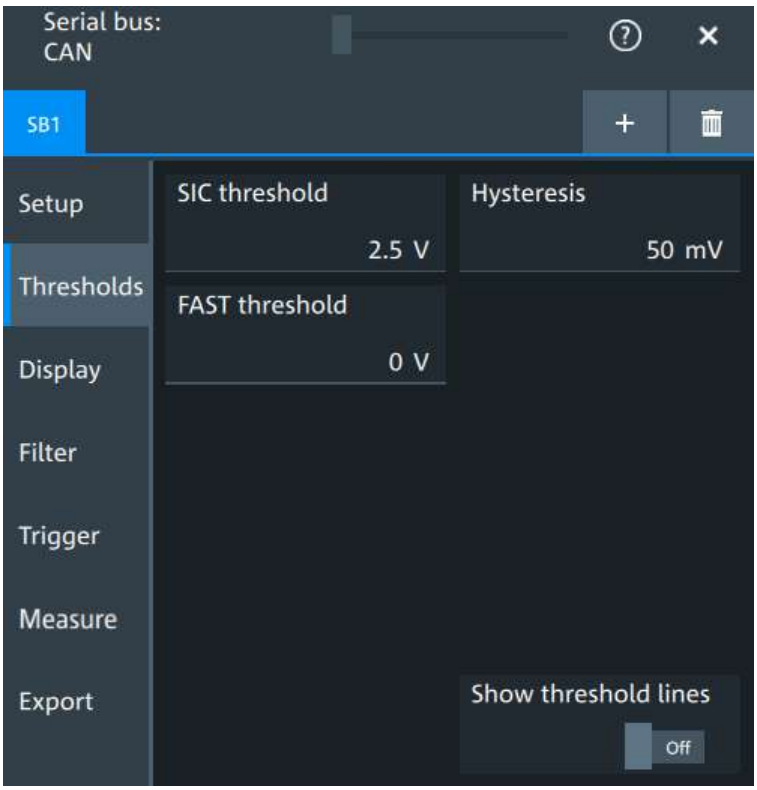

Show threshold lines
Enables the display of the threshold lines in the diagram.

The label of the threshold line is set according to the signal that it is referring to. It is displayed in the color of the signal channel.

Example:

When you enable "Show threshold lines", the threshold lines are shown on the display, and also the hysteresis ranges are shown for a few seconds. Afterwards only the threshold lines are visible. When you click the diagram near or on a threshold line, its hysteresis is shown again briefly.

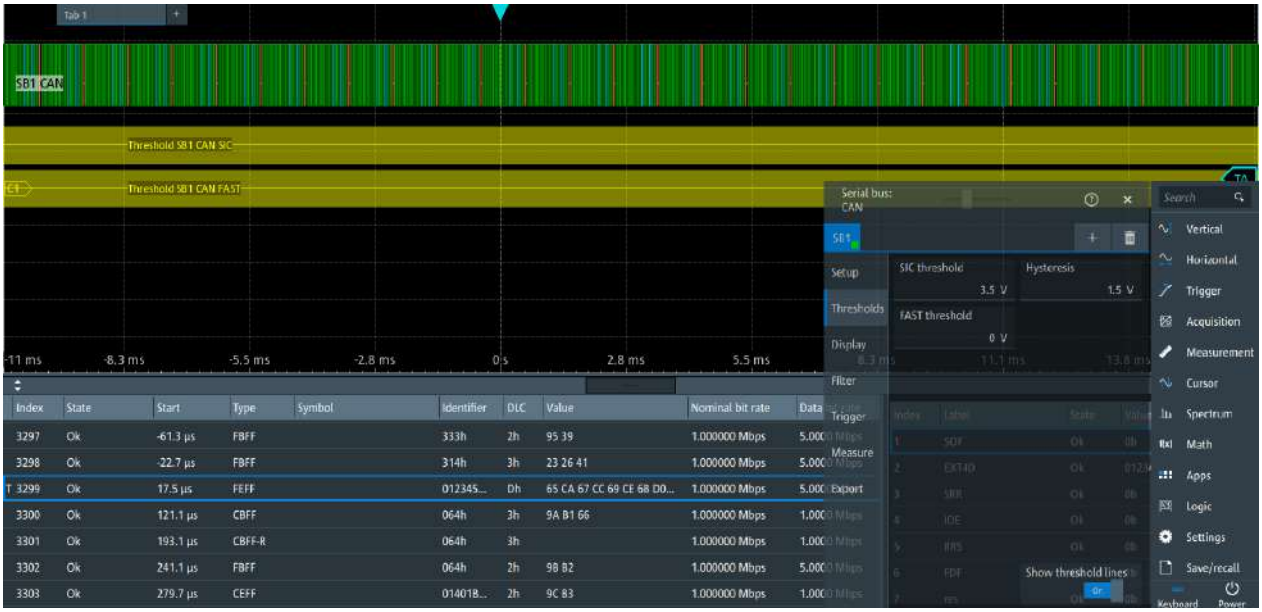


Figure 14-1: Threshold lines, shortly after enabling Show threshold lines

Remote command:
`SBUS<sb>:THReshold` on page 1566


14.1.3 Display

The following subsections describe the display settings and its zoom-coupling features.

- Display settings 540
- Display synchronization 542

14.1.3.1 Display settings

For all protocols, you can select how to display the decoded signal and its results table along with the waveform diagram.

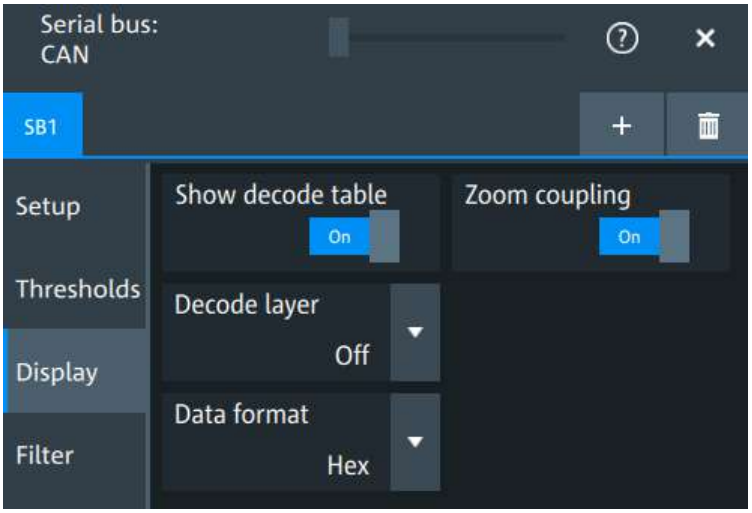

Show decode table
Opens a table with decoded data of the serial signal. The function requires the option for the analyzed protocol.

Decode results are protocol-specific.

Remote command:
`SBUS<sb>:RESult` on page 1565

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

The available values are protocol-specific. For example:

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of all bits.
"Words"	Enables the display of all words.

Data format
Sets the data format for the values displayed in the decode table and in the combs of the decoded signal.

Available formats are: hex, octal, binary, ASCii, signed, unsigned.

For more information on the available formats, see Section 14.1.10, "Bit pattern editor", on page 558.

Remote command:
`SBUS<sb>:FORMat` on page 1565

Zoom coupling
Available only, if Show decode table is enabled. If you enable "Zoom coupling", the software synchronizes the decode zoom window with the result tables, as described in Section 14.1.3.2, "Display synchronization", on page 542.

Remote command:
`SBUS<sb>:ZCOupling` on page 1566

14.1.3.2 Display synchronization

This section describes the synchronization (or coupling) of the following components in the display:

- The waveform diagram and its zoom window
- Decode results table with decoded frames
- Frame details table with fields of selected frame

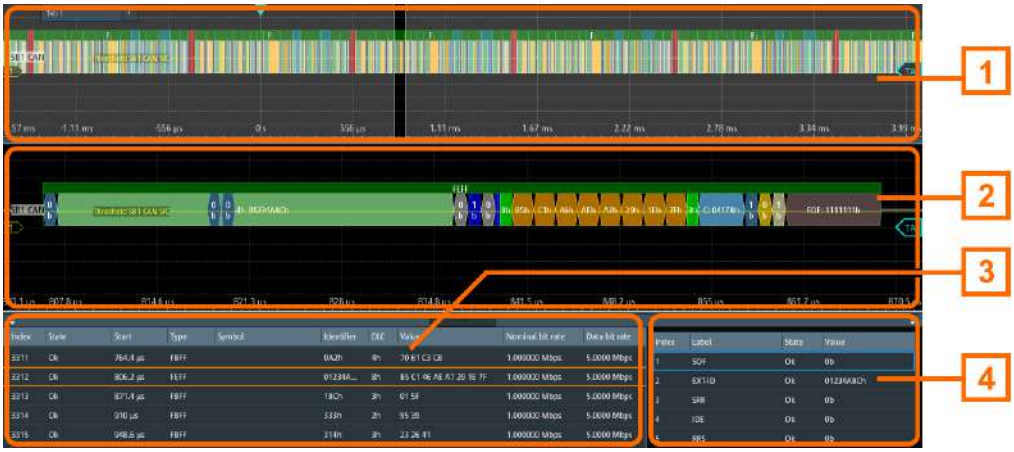


Figure 14-2: Main components in the decoded results display, here for the CAN protocol

1 = Waveform diagram, it shows an overview of some part of the acquisition, or even all of it
2 = Zoom window, it shows the zoom area selected in the waveform diagram
3 = Decode results table, it lists all frames of the acquisition
4 = Frame details table, it lists all fields of the frame selected in the results table

Prerequisites for synchronizing displayed results:

- State is enabled in the "Setup" tab.
- Show decode table is enabled in the "Display" tab.
- Zoom coupling is enabled in the "Display" tab.
- Decoded results are available.
  The dialog shows the results for frames in the results table and for fields in the details table.

When you select a row in one of the tables, hence a decoded frame or field, the software automatically synchronizes the zoom window to display this frame or field on the screen with a margin at each side. For details of the synchronization and margin, see Figure 14-3 and Figure 14-4. The software also synchronizes the waveform diagram with the zoom window.

When you move the zoom window to the left or right, the software updates the results table to highlight the window's center frame, without resizing.

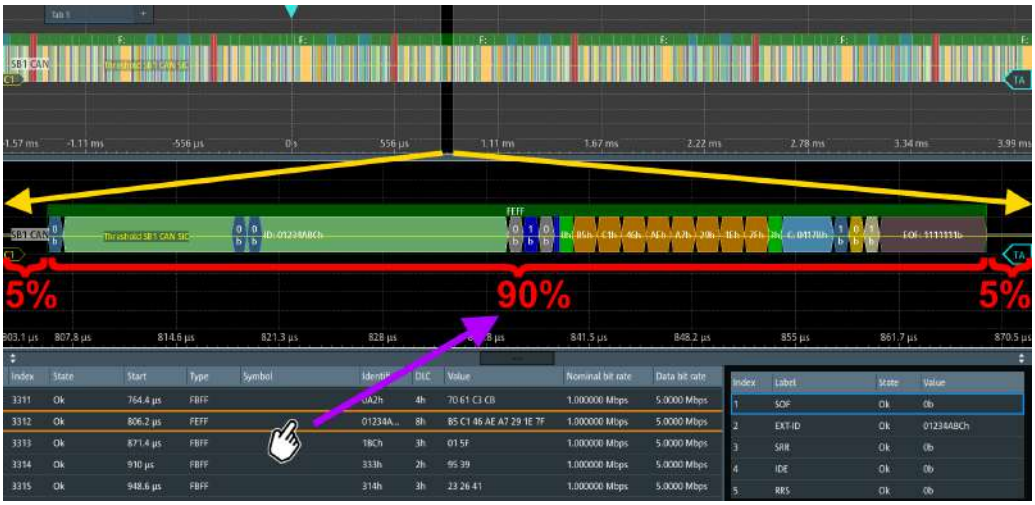


Figure 14-3: Zoom coupling of selected frame (left table)

Pink arrow = Selected frame covers 90% of the zoom window's width (red scale), centered on the screen
Yellow arrows = Zoom segment, automatically selected in the diagram, covers the full zoom window's width


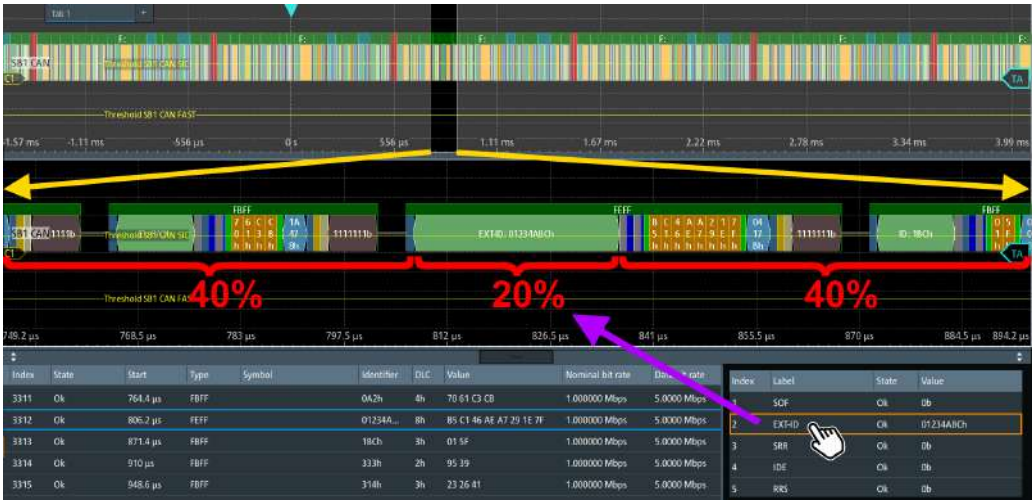


Figure 14-4: Zoom coupling of selected field (right table)

Pink arrow = Selected field covers 20% of the zoom window's width (red scale), centered on the screen
Yellow arrows = Zoom segment, automatically selected in the diagram, covers the full zoom window's width

14.1.4 Filter

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

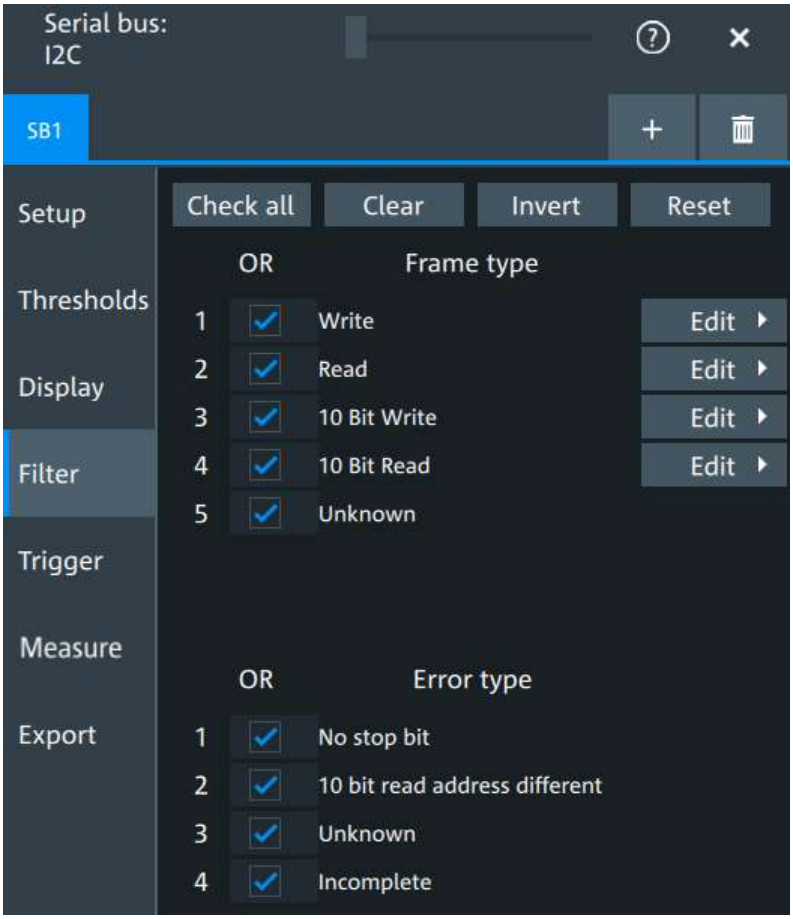

The settings are protocol-specific and are described in the corresponding protocol section.

14.1.5 Format

The format tab allows you to configure certain aspects of how the decoding results are translated and visualized. The defined formats are applied by the filter, the software trigger, and the measurements.


The format configuration differs depending on the protocol.

- Format for custom protocols 544
- Format for QUAD-SPI and OCTO-SPI 547
- Format for all other protocols 548

14.1.5.1 Format for custom protocols

For the custom protocols NRZ-(un)clocked, Manchester, 8b/10b, the format tab fully specifies how frames and their fields are identified and created during the decoding. The decoder reads the incoming raw bitstream, applies the custom frame list defined in the tab, and instantiates frames and their fields according to the field definitions. You

can also use functions to calculate new values based on the data fields, for example see also "Numeric format" on page 733.

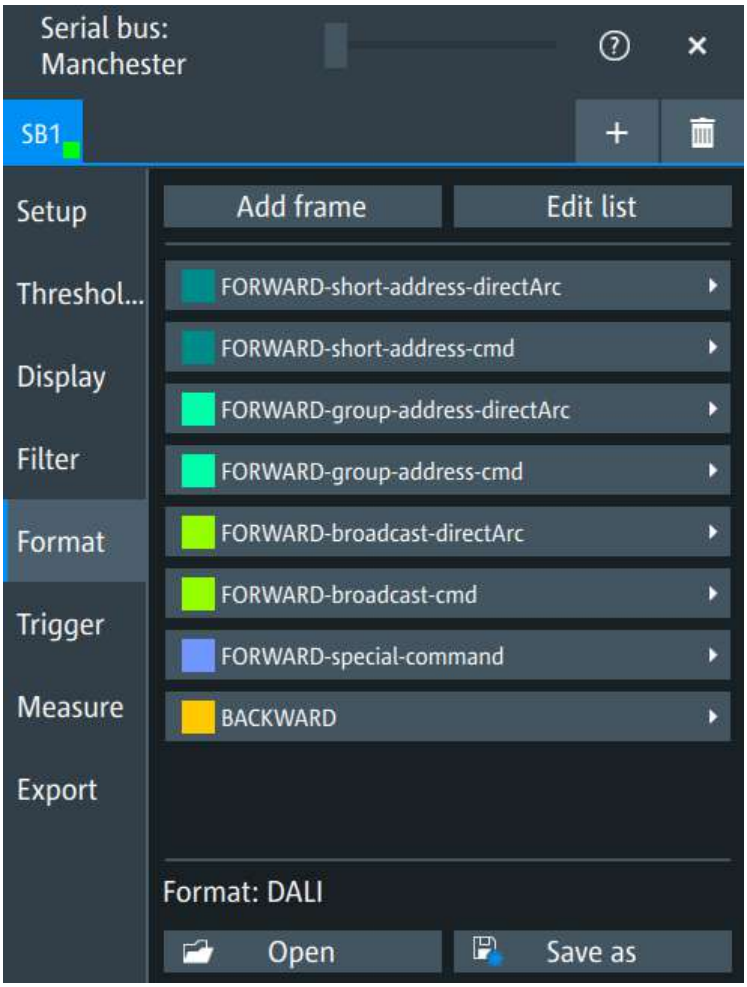

Each frame format occupies one line in the frame list. The frame identification is executed top down in the frame list.

Describing a frame format requires assigning it a name and specifying field descriptions, which must be sequential and complete. No gaps are allowed, because the field descriptions are used to calculate the start position of the next frame.

A frame is identified when all user-defined conditions of the field descriptions are met. These conditions can be regarded as related by the Boolean `AND` operator.

A condition can also locate a synchronization pattern, specified by the equal operator in the field. For example, if you define a "Preamble" field with the condition *=FFFFFFFF*, the decoder scans the data for this pattern, and then synchronizes to it.

If no frame format is suitable to identify an incoming frame, by default such a "missed" frame is reproduced as "Undescribed Bits" in the honeycomb display. These bits are not shown in the results table.

If you have not defined an "equal" operator for any field of a frame format, you can use this description to positively identify each kind of frame. Hence, it "catches" every


frame, even if there are other frame formats to follow in the frame list. Therefore, if you use a "catch all" frame format, we recommend to place it at the end of the frame list, otherwise it overwrites any subsequent frame format. However, instead of using a "catch all" frame format, consider using the default "Undescribed Bits" display mentioned above.

It is in your responsibility to define unambiguous formats for each frame type.


If you do not want to start from scratch, you can load a predefined format table via "Menu" > "Apps" > "Protocol" tab > select "DALI" or "MDIO". You can always configure additional formats with the following procedure.

To configure formats for custom protocols


1. Navigate to "Menu" > "Apps" > "Protocol" tab > select a custom protocol > "Format".
2. Select "Add frame".

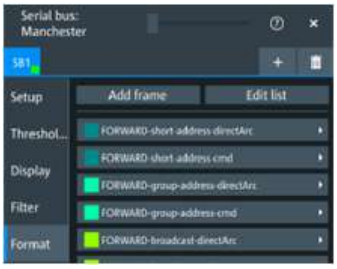

3. Specify the frame details: Name and color.

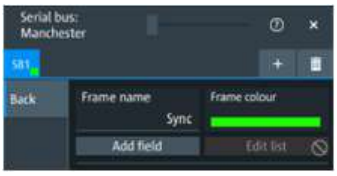

4. Select "Add field".
5. Specify the field details: Name, color and display features.

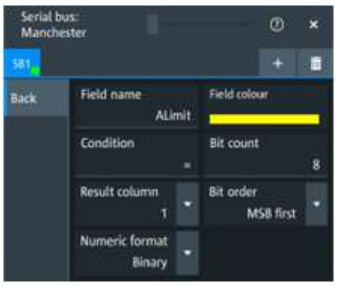

6. Add a "Condition".

   Note: The fields must be sequential and complete. No gaps are allowed, because the field definitions are used to calculate the start position of the next frame.


7. Select "Back".
8. Repeat the previous steps to add and define more fields.
9. Select "Back".

   The "Decode results" table, filter and trigger tabs display the new fields instead of the original fields.

14.1.5.2 Format for QUAD-SPI and OCTO-SPI


For QUAD-SPI and OCTO SPI, the format tab provides a customizable list of opcode descriptions and the formatting of the opcode data.

Opcode is a specific command byte sent from the microcontroller to the QUAD-SPI or OCTO-SPI device to initiate a particular action, such as reading, writing or erasing data. The opcodes vary by device manufacturer and memory model. Opcode files are in JSON format, and contain frame formats for each hexadecimal opcode value.

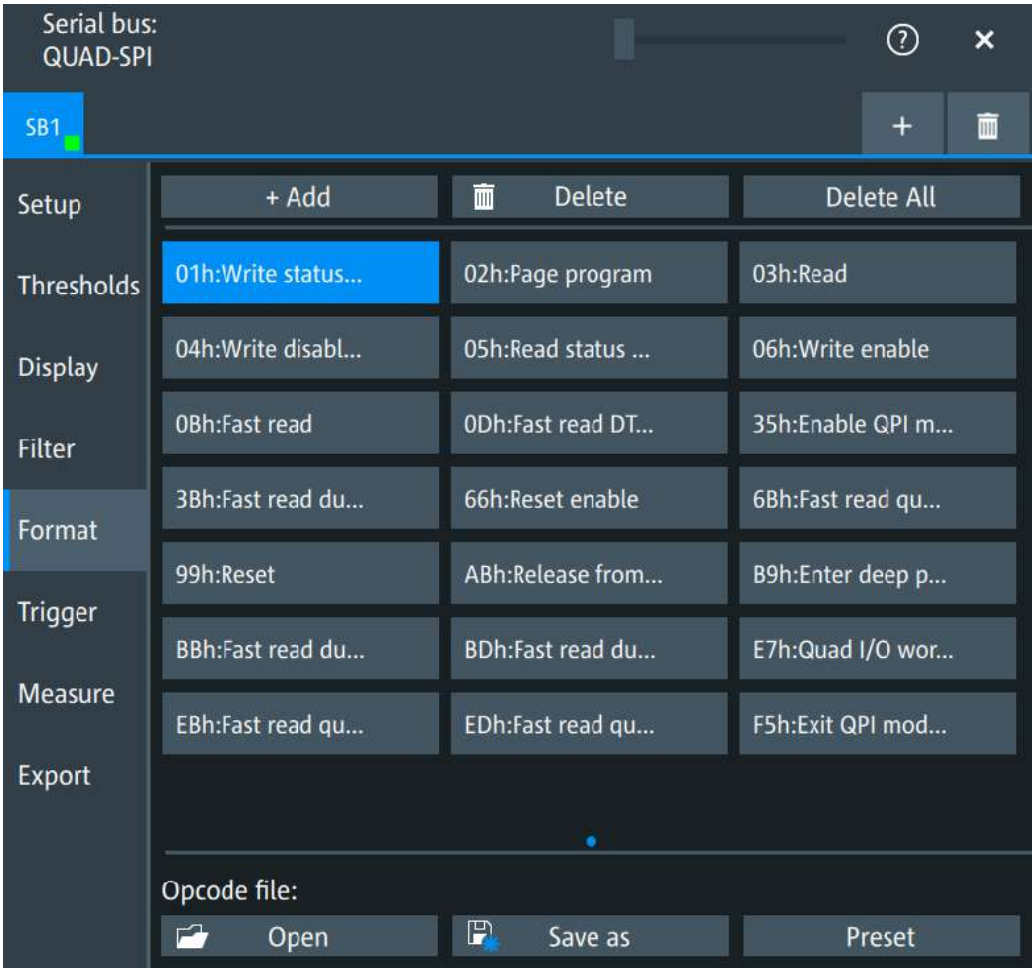

14.1.5.3 Format for all other protocols

For protocols that are not custom protocols, the protocol decoder identifies frames and their fields in the bit stream. With the format tab, you can identify specific data fields in the decoded frames and further characterize it by redefining them to new fields of user-defined properties, such as name, color, length, and format. You can also use functions to calculate new values based on the data fields, for example see also "Numeric format" on page 572.

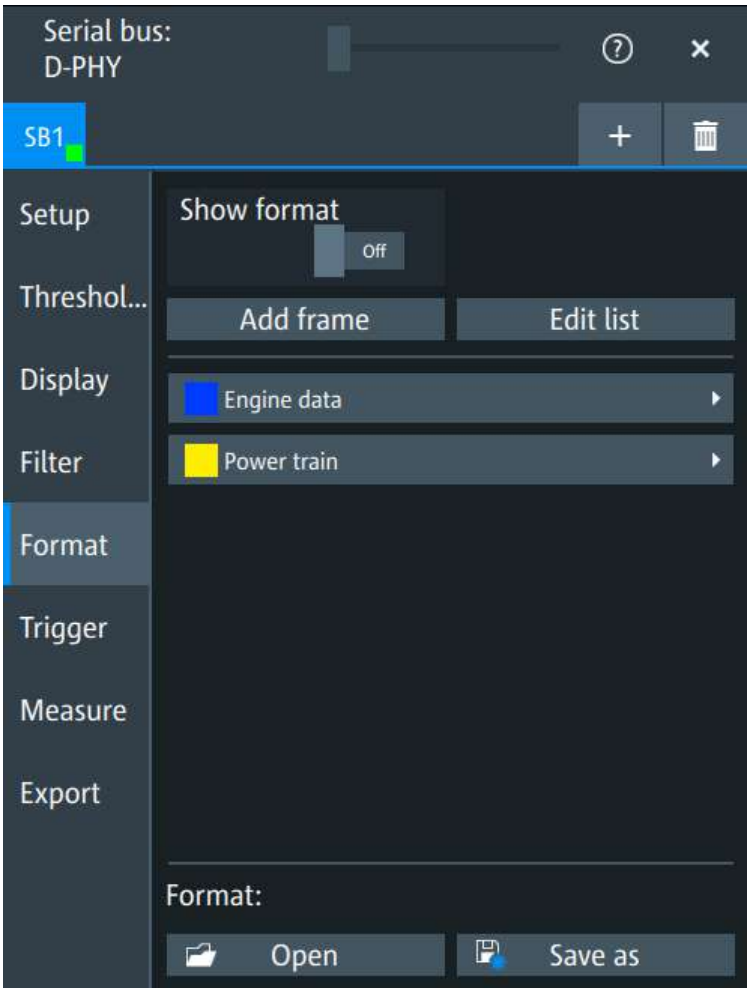

Each frame format occupies one line in the frame list. The frame identification is executed top down in the frame list.


The following applies for the field descriptions:

- Define individual bit start positions and lengths; any gaps in the bit order are automatically filled with “undescribed” fields.
- Bits do not need to be consecutive, but must not be overlapping.
- The upper boarder of a field (bit start position + length) must not exceed the total payload length.


To configure formats for protocols like CAN, SENT

Every change in the format configuration triggers a re-decode. We recommend pre-defining the frame formats before loading the files and starting the acquisition.

1. Navigate to "Menu" > "Apps" > "Protocol" tab > select a higher layer protocol > "Format".
2. Select "Add frame".

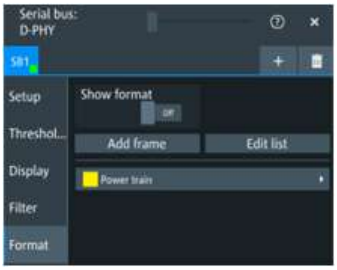

3. Specify the frame details: Name, color, frame type.

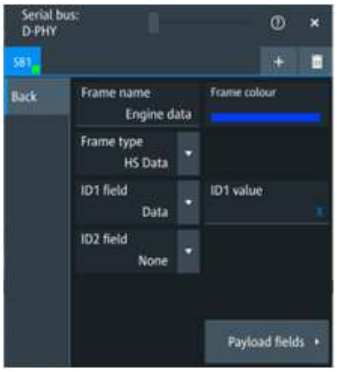

4. Select an "ID<n> field".
5. Add a condition "ID<n> value" to the respective "ID<n> field".
6. Add fields to interpret the payload (optional):
   a) Select "Payload fields".
   b) Select "Add field".



c) Specify the field details: Name, color and display features.



Note: Gaps in the bit order are filled as "Undescribed" fields and not shown in the honey-comb view.


7. Select "Back".
8. Repeat the previous steps to add and define more fields.
9. Select "Back".
10. Enable "Show format" to turn on the format display.

    The "Decode results" table, filter and trigger tabs display the new fields instead of the original payload fields.

14.1.6 Trigger

The "Trigger" tab provides functionality to quickly set up protocol triggers and navigates to the "Trigger" dialogs for further settings.

A trigger is a function that determines when the instrument starts capturing a signal. There are two primary types of triggers on the MXO 5, depending on the selected protocol: software trigger and hardware trigger.

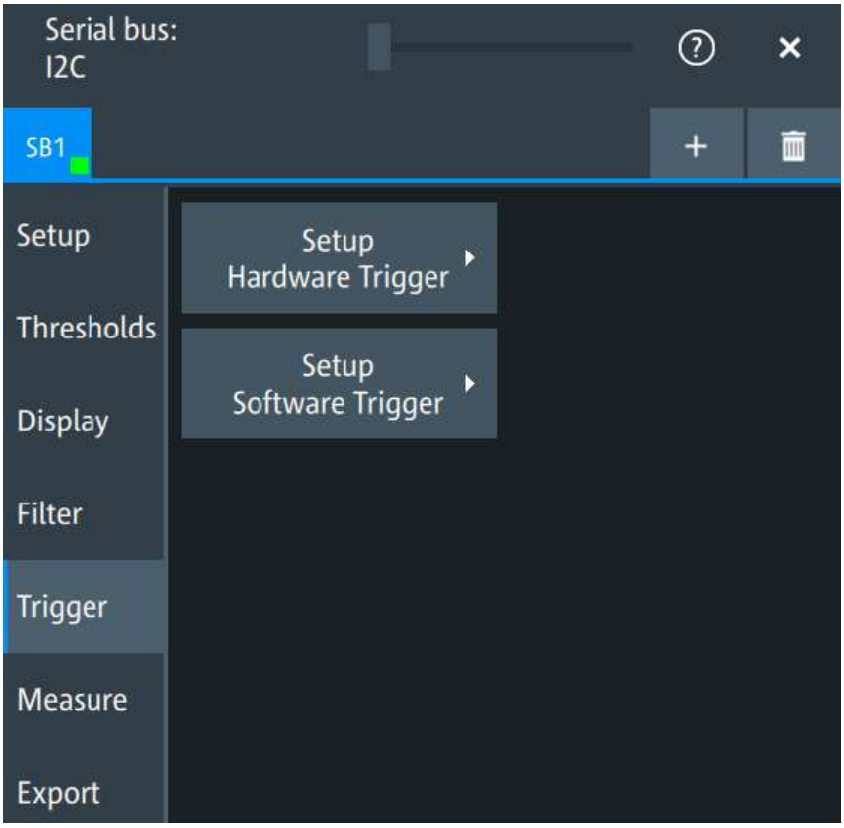

14.1.6.1 Hardware trigger

A hardware trigger is a trigger that is generated by the oscilloscope's hardware circuitry.

The protocol hardware trigger is available only for the few protocols that support it (listed below). A single click of the "Setup Hardware Trigger" button in the protocol dialog is equivalent with the following actions in the "Trigger" dialog:

1. "Trigger on" > "Single event".
2. "Source" > selects the active serial bus, for example "Serial bus 1".
3. "Type" > selects the most simple protocol-specific trigger type:
   - I²C: "Start"
   - SPI: "Start of frame"
   - UART: "Start bit"
   - LIN: "Start of frame"
   - CAN: "Start of frame"
   - 10BASE-T1S: "MAC"

   This action also executes the "Type" command and resets the trigger settings.

   Optionally proceed with the trigger settings in the "Trigger" dialog.

14.1.6.2 Software trigger

The protocol software trigger is a sequence "A → Serial bus" of events. Hence, it consists of two subsequent events: A-trigger and a serial bus trigger.

Loss of settings


If you have already configured the SW trigger, do not click "Software Trigger" in the protocol dialog, because it overwrites your settings. Instead, use the "Trigger" dialog.

For an initial configuration, a single click of the "Software Trigger" button is equivalent with the following actions in the "Trigger" dialog:

1. "Trigger on" > "Sequence".
2. "Trigger sequence" > "A → Serial bus"
3. Configures the 1st event:
   a) Sets the "1st event" ("A trigger") to a protocol-specific trigger that is most suited for this protocol, for example "Edge".
   b) Sets the "Level" to the threshold level defined in the protocol dialog.
   c) Sets other parameters, depending on the event type and protocol requirements, for example "Slope" for "Edge", or "Time" for "Timeout".
4. Configures the software trigger:
   Preselects recommended frame types and error types, which you can change later.

After the A-trigger conditions have been met, the serial bus trigger with independent conditions is enabled. The oscilloscope waits until one or a specified number of serial bus trigger conditions occur. The serial bus trigger can only cause the trigger event if it occurs after the A-trigger.

All trigger sequences require that analog input channels C<n> are set as trigger sources for all events. The oscilloscope checks all trigger settings for compatibility and adjusts them if they do not fit.

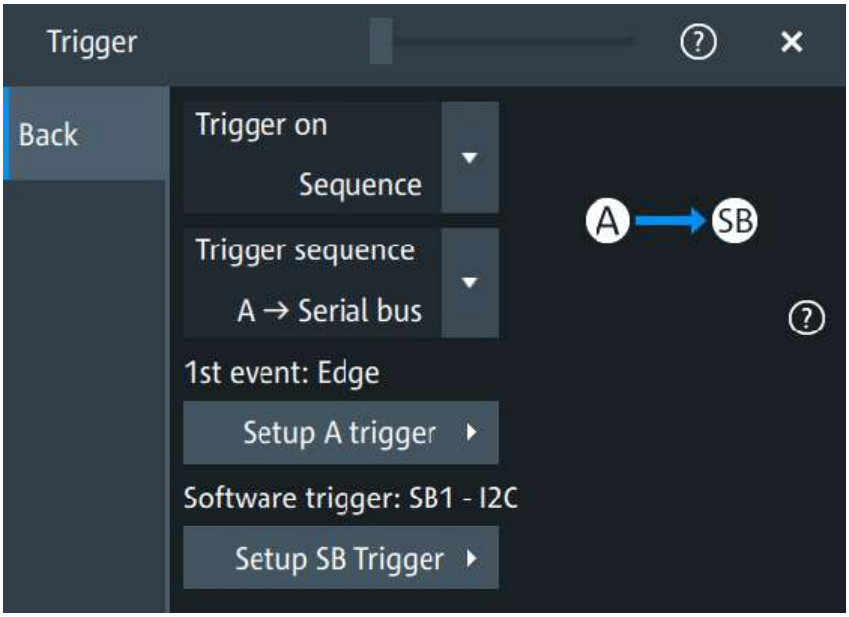

To indicate the 1st (main, general) trigger position in the captured signal, the top of the display shows a triangular trigger marker (1 in Figure 14-5). If you enable displaying the results table (see "Show decode table" on page 541), the triggered frame is marked in the table by the letter "T" left of the frame index (2 in Figure 14-5):

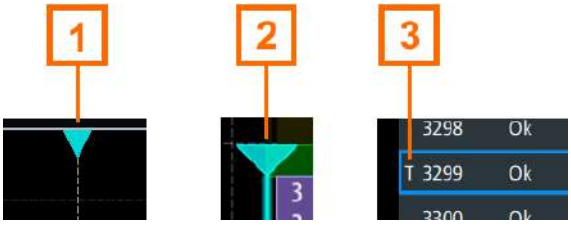


Figure 14-5: Trigger markers

1 = Triangular main trigger marker at the top of the waveform display, indicates the position of the single trigger or the position of the 1st trigger event of a trigger sequence
2 = Triangular secondary trigger marker with bold line in the zoom diagram of the decoded signal, indicates the 2nd event trigger position, hence the software trigger
3 = Letter "T" marks the 2nd event trigger position (the triggered frame) in the decode results table

The following scenarios are possible:

- 1st case, triggering on a *single event* while the source is a serial bus:
  - The main trigger marker indicates the single event trigger position.
  - There is no secondary trigger marker in the decoded signal diagram.
  - The "T" trigger marker in the protocol decode results table corresponds to the main trigger marker.

  This scenario uses the hardware trigger, which is not available for all protocols.
- 2nd case, triggering on a *single event* while the source is *not* a serial bus:
  - The main trigger marker indicates the single event trigger position.
  - There is no secondary trigger marker in the decoded signal diagram.

  - There is no "T" trigger marker in the protocol decode results table.
- 3rd case, triggering on a *sequence* of "Trigger A" and "serial bus event":
  - The main trigger marker indicates the 1st event trigger position.
  - The secondary trigger marker indicates the 2nd event trigger position (software trigger).
  - The "T" trigger marker in the protocol decode results table corresponds to the 2nd event trigger position (software trigger).

Figure 14-6 shows an example of these markers.

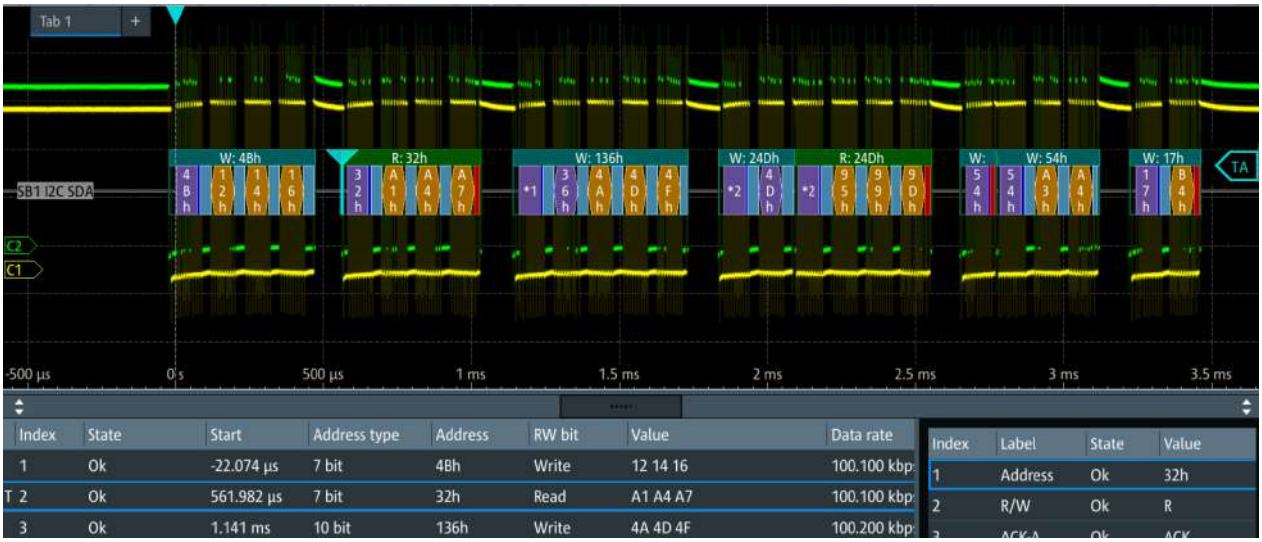


Figure 14-6: Example of sequence trigger in I2C signal with "Trigger A" (interval > 1 ms) and software trigger (first "Read" frame)

See also "Source" on page 173.

Check all, Clear, Invert, Preset

The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
The remote control commands for these functions are protocol-specific. Refer to the descriptions of the software trigger setup for each individual protocol.


14.1.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8, "Protocol measurements (option R&S MXO5-K500)", on page 318.

14.1.8 Export

In the "Export results" tab, you can export the results and all details of the selected protocol.

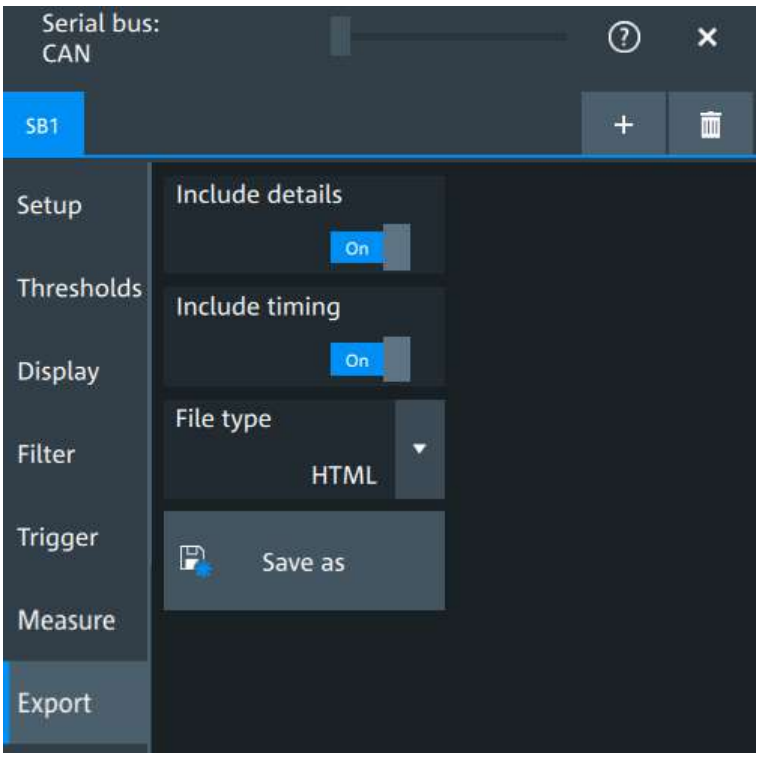

Include details
If enabled, includes the detailed results for all frames in the export result file.

Remote command:
`SBUS<sb>:EXPResult:DETail` on page 1567

Include timing
If enabled, includes the frame timing in the export result file.

Remote command:
`SBUS<sb>:EXPResult:TIME` on page 1567

File type
Selects the file format.

"HTML"	Saves the results as a webpage in hypertext markup language for display in a browser.
"CSV"	Saves the results as comma-separated values in a "`.csv`" file.
"XML"	Saves the results in a file compatible with an extended markup language.

"Python" Saves the results in a Python®-compatible ".py" file format.

Remote command:
SBUS<sb>:EXPResult:EXTension on page 1568

Save as
Opens a dialog box where you can select a filename and a path for the export results file.

Remote command:
SBUS<sb>:EXPResult:SAVE on page 1567
SBUS<sb>:EXPResult:PATH on page 1568

14.1.9 Performing protocol analysis

This section explains step by step how to configure and decode a protocol bus.

14.1.9.1 Configuring protocol signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.

1. Select the "+ Bus" activator in the bottom-right corner.



2. Select the bus tab that you want to configure, for example "SB1".
3. Select the "Protocol type" button. Select the protocol, for example "CAN".
4. Select "State" to enable the decoding.

   A CAN shortcut appears at the bottom-left corner. Select the shortcut for quick access to the respective protocol dialog settings.



5. Verify that all signals are visible on the screen. If a line is missing, adjust the vertical and/or horizontal scaling.
6. Configure the protocol specific details. They are described in the related sections.
7. Set the logical thresholds:
   a) Select the "Thresholds" tab.
   b) For each wire, set the threshold value.
   c) If necessary, set the hysteresis value for the wires.

d) Optionally, select "Show threshold lines".

14.1.9.2 Hardware triggering

A hardware trigger is available for the following protocols:

- CAN
- SPI
- I²C
- LIN
- UART

Prerequisites: A configured protocol signal. See Section 14.1.9.1, "Configuring protocol signals", on page 556.

1. Open "Menu" > "Trigger".
2. Set "Trigger on" to "Single event".
3. Ensure that the "Source" is set to the configured serial bus, e.g. "Serial bus 1".
4. Select the "Type".
5. If available, select "Set details" to define additional settings for more complex trigger types.

   The following figures illustrate examples for protocol-specific trigger configurations.

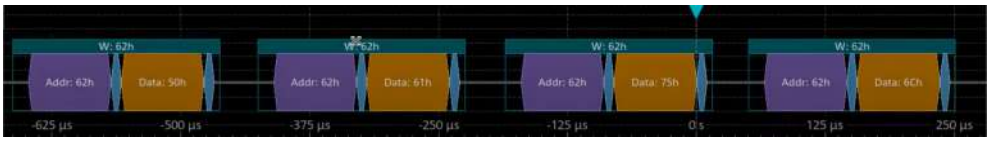


Figure 14-7: I²C signal with trigger on Type=Data, Data=0x75 and Position=1

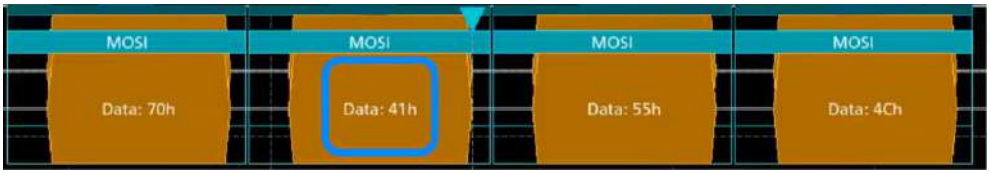


Figure 14-8: SPI signal with trigger on Type= MOSI, Data pattern = 0x41.

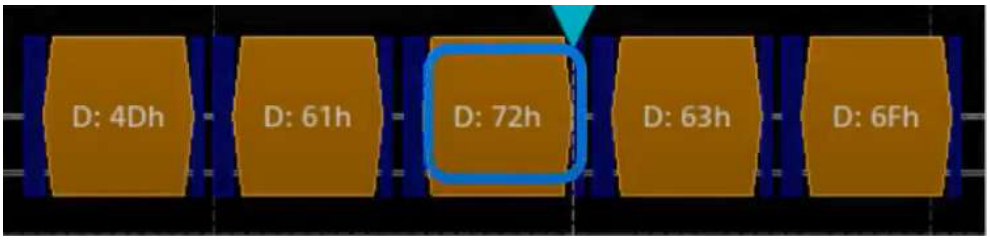


Figure 14-9: UART signal with trigger on Type= Tx, Data =0x72 and Position=3

14.1.9.3 Decoding protocol signals

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also Section 14.1.3.1, "Display settings", on page 540.

For a description of how to synchronize the displayed results, see Section 14.1.3.2, "Display synchronization", on page 542.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

14.1.9.4 Exporting decode results

Once a decode has been completed, you can generate an export of all decode results.


Prerequisites: A bus is configured for the 8b/10b protocol and decoded.

1. Select the protocol shortcut.
2. Select the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".
6. Select "Save as".
7. Enter a filename. Select "Save".

   An export file is saved in the "User data" directory.

14.1.10 Bit pattern editor

If you want to enter a specified address or data pattern, the pattern editor helps you to enter the pattern in various formats - decimal, hexadecimal, octal, binary and ASCII.

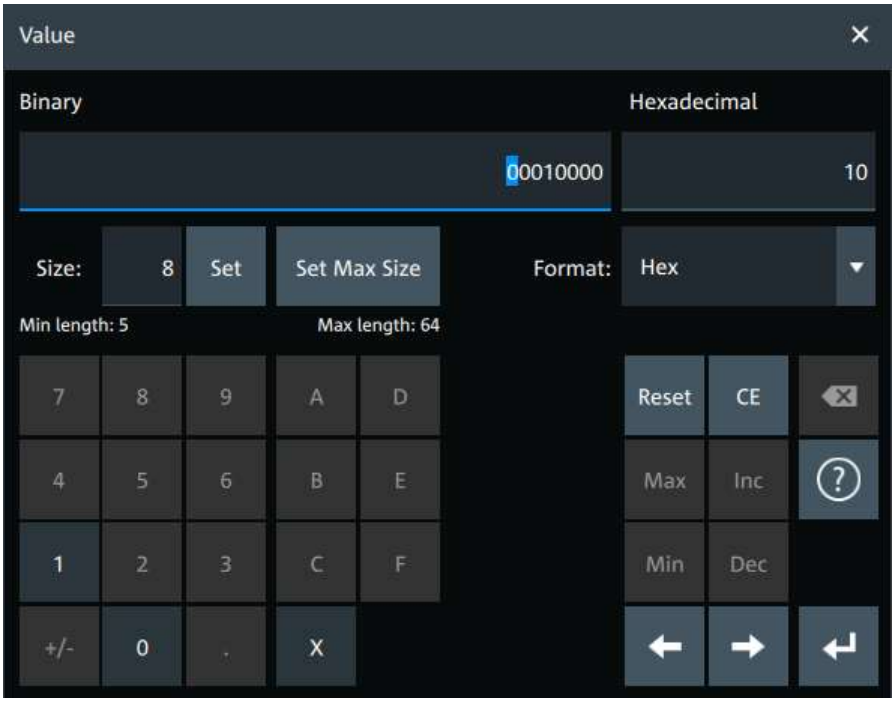

The editor at the top displays the pattern in two columns. The left column always shows binary data. For the right column, you can select the "Format". The default depends on the data specifics. You can edit data in the left or right column. The keypad adapts itself to the column format and only keys appropriate to the format are enabled.

The data is grouped and converted in bit groups. The size of a bit group depends on the address or data specifics and is set by the instrument. Groups are automatically separated by blanks. The maximum size of a bit group is 64 bit, the most common group size is 1 byte.

Format-specific information

- Binary: 0, 1 and X (do not care) is allowed.
- Octal: Each digit represents 3 bit.
- Hex: most common format in the right column.
- ASCII: In the ASCII column, "X" is the character X. The binary X (do not care) is not allowed. If an X is included in the binary value in the left column, the ASCII column displays "§" to indicate that the value is not defined.
- Unsigned: Decimal data format without a sign for positive or negative numbers. 3 digits are grouped, and the next group is separated by a comma, e.g. 653,848.
- Signed: Decimal format with a sign for positive or negative numbers. 3 digits are grouped, where the first bit represents the sign. You can use the 2's complement format. After a group of 3 digits the next group is separated by a comma, e.g. -653,848.

14.2 SPI bus (IC electronics, option R&S MXO5-K510)

The Serial Peripheral Interface SPI is used for communication with slow peripheral devices, in particular, for transmission of data streams.

For basic information on SPI, you can also refer to a video, available on the Rohde & Schwarz YouTube channel: Understanding SPI.

Requirements

For performing SPI decode measurements, you need the following:

- MXO 5 with 4 channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Option R&S MXO5-K510

- About the SPI protocol 560
- SPI configuration 561
- SPI filter 565
- SPI format configuration 567
- SPI hardware trigger 573
- SPI software trigger 575
- Measure 577
- SPI decode results 578

14.2.1 About the SPI protocol

A 4-channel instrument is required for full support of the SPI protocol, or the MSO option R&S MXO5-B1.

The Serial Peripheral Interface SPI is used for communication with slow peripheral devices, in particular, for transmission of data streams.

The main characteristics of SPI are:

- Main-subnode communication
- No device addressing. The sub is accessed by a chip select, or sub select line.
- No acknowledgment mechanism to confirm receipt of data
- Duplex capability

Most SPI buses have four lines, two data and two control lines:

- Clock line to all subs (SCLK)
- Sub select or Chip select line (SS or CS)
- Main data output, sub data input (MOSI or SDI)
- Main data input, sub data output (MISO or SDO)

When the main generates a clock and selects a sub device, data can be transferred in either or both directions simultaneously.

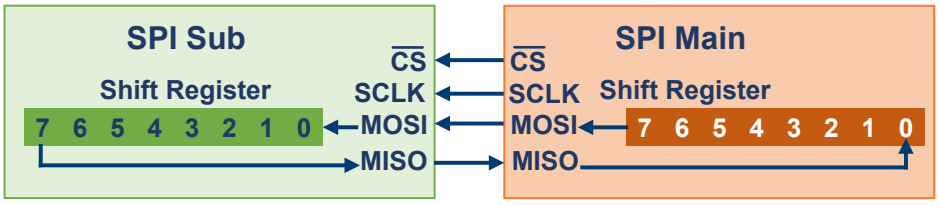


Figure 14-10: Simple configuration of SPI bus

The data bits of a message are grouped by the following criteria:

- A word contains several successive bits. The word length is defined in the protocol configuration.
- A frame contains several successive words, at least one word.

Supported frame types


- MISO: Main data output, sub data input
- MOSI: Main data input, sub data output
- MISOMOSI: Combined view of both SPI data directions

14.2.2 SPI configuration

14.2.2.1 SPI configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Setup".

Make sure that the tab of the correct serial bus is selected.

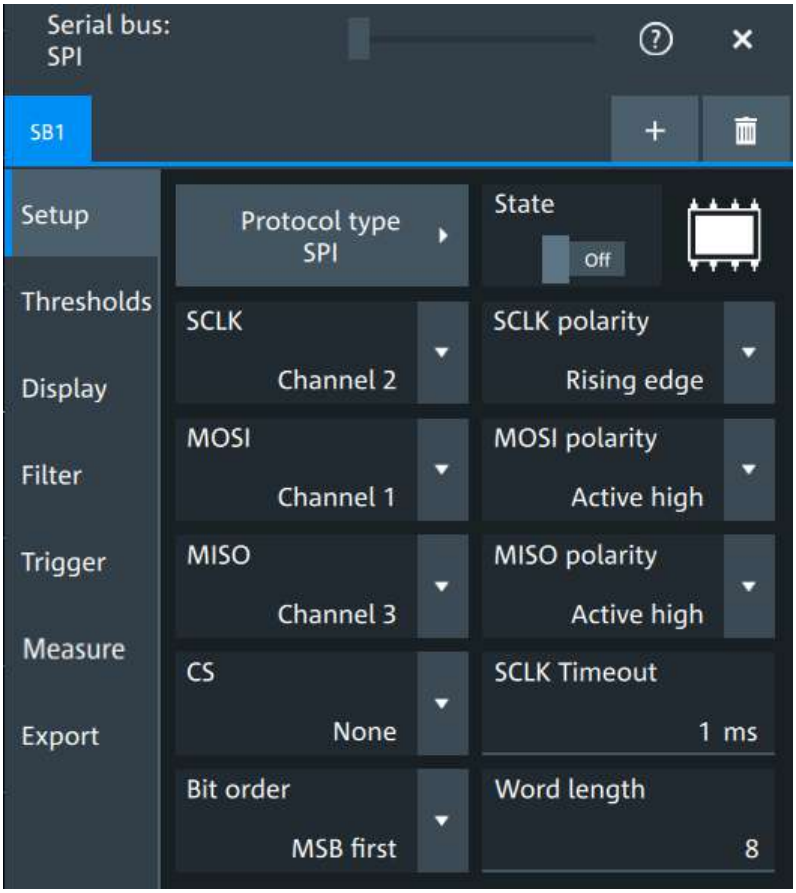

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

SCLK,MOSI,MISO,CS
Sets the input channel for the respective line:

- SCLK: clock line
- MOSI line
- MISO line
- CS: chip select

Alternatively, digital channels can be used if MSO option R&S MXO5-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
SBUS<sb>:SPI:MISO:SOURce on page 1571
SBUS<sb>:SPI:MOSI:SOURce on page 1573
SBUS<sb>:SPI:SCLK:SOURce on page 1573
SBUS<sb>:SPI:CSELect:SOURce on page 1570

Clock polarity
Two settings define the clock mode: the clock polarity and the clock phase. Together, they determine the edges of the clock signal on which the data are driven and sampled.

A main/subnode pair must use the same parameter pair values to communicate. The clock phase defines the slope. It selects if data is stored with the rising or falling slope of the clock. The slope marks the begin of a new bit.

Polarity: MOSI, MISO, CS
Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
SBUS<sb>:SPI:MISO:POLarity on page 1571
SBUS<sb>:SPI:MOSI:POLarity on page 1572
SBUS<sb>:SPI:CSELect:POLarity on page 1570

Bit order
Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Remote command:
SBUS<sb>:SPI:BORDer on page 1569

Word length
Sets the word length (or symbol size), which is the number of bits in a message. The maximum word length is 32 bit.

Remote command:
SBUS<sb>:SPI:WSIZe on page 1574


Timeout
Sets the minimum clock idle time if a timeout on the clock line SCLK is used as limiter between two frames.

This setting is only available, for "CS" = "None".

Remote command:
SBUS<sb>:SPI:TIMeout on page 1574

14.2.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Thresholds".

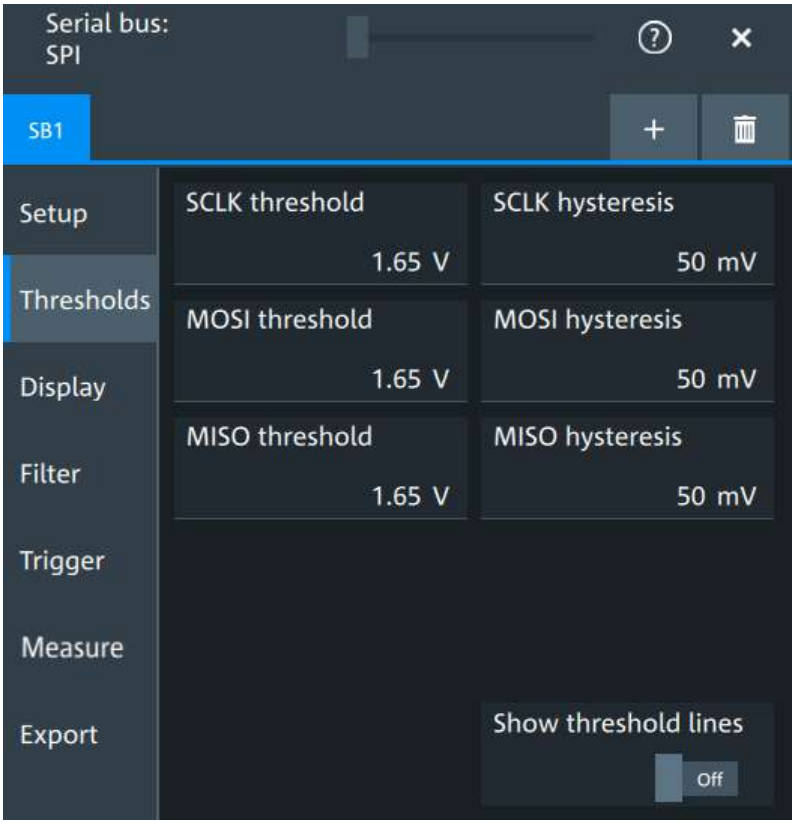

Threshold
Sets the threshold for the SCLK, MOSI and MISO channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

If the signal value on the line is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low if the signal value is below the threshold.

The interpretation of high and low is defined by the "Polarity: MOSI, MISO, CS" on page 563.

Remote command:
`SBUS<sb>:SPI:MISO:HYSTeresis` on page 1571
`SBUS<sb>:SPI:MOSI:HYSTeresis` on page 1572
`SBUS<sb>:SPI:SCLK:HYSTeresis` on page 1573
`SBUS<sb>:SPI:CSELect:HYSTeresis` on page 1570
`SBUS<sb>:SPI:MISO:THReshold` on page 1572
`SBUS<sb>:SPI:MOSI:THReshold` on page 1573
`SBUS<sb>:SPI:SCLK:THReshold` on page 1574
`SBUS<sb>:SPI:CSELect:THReshold` on page 1571

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.


Remote command:
SBUS<sb>:THReshold on page 1566

14.2.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

14.2.3 SPI filter

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Filter" tab

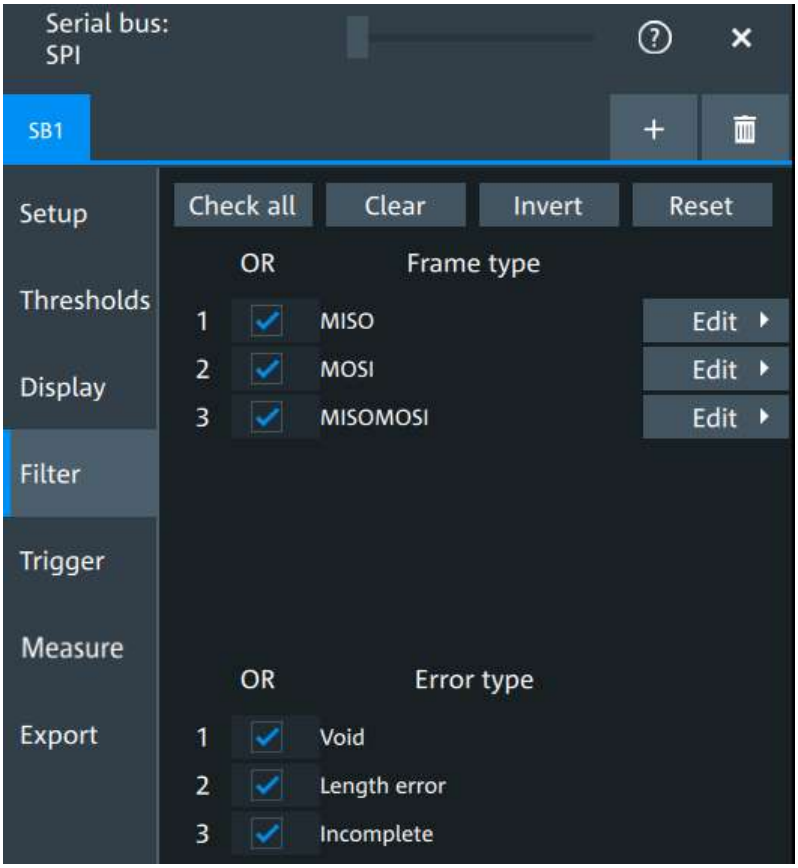

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
SBUS<sb>:SPI:FILTer:CHKall on page 1576
SBUS<sb>:SPI:FILTer:CLR on page 1577
SBUS<sb>:SPI:FILTer:INVert on page 1577
SBUS<sb>:SPI:FILTer:RST on page 1577


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frames are "MOSI", "MISO" and "MOSI/MISO".

Remote command:
SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle on page 1579
SBUS<sb>:SPI:FILTer:FRENable on page 1579

Edit
Opens a dialog to define the details of the selected frame.

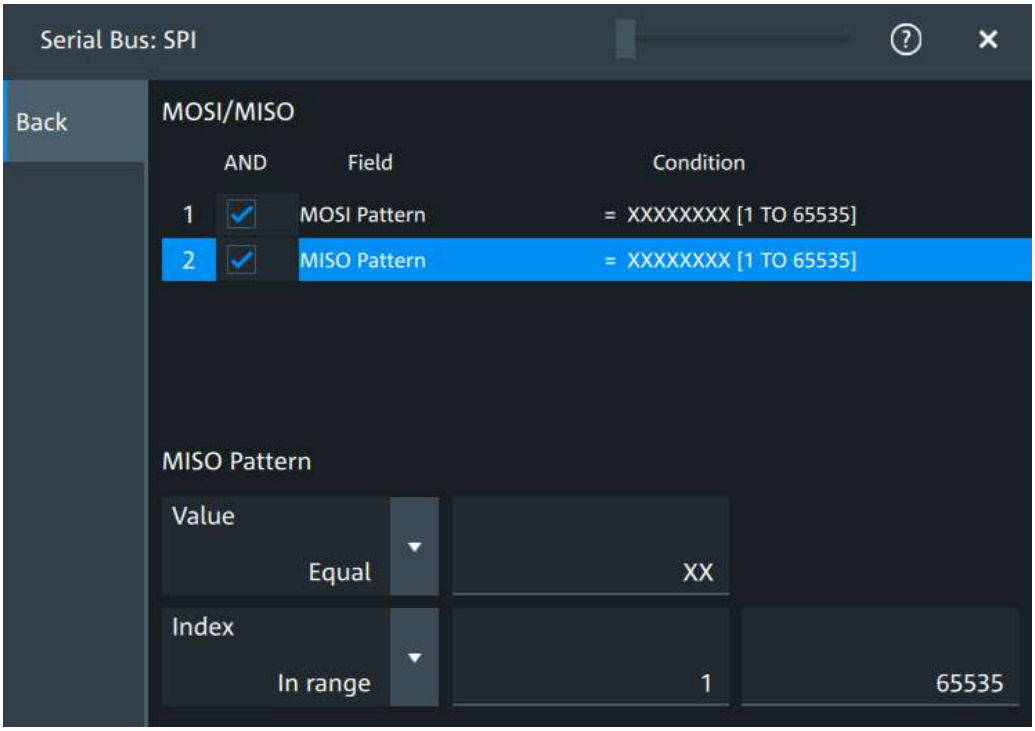

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "MOSI Pattern" and "MISO Pattern".

Remote command:
SBUS<sb>:SPI:FILTer:FIENable on page 1579
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1579

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT
on page 1577

"Data" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX
on page 1578
SBUS<sb>:SPI:FILTer:DMAX on page 1578
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN
on page 1578
SBUS<sb>:SPI:FILTer:DMIN on page 1578
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator
on page 1578
SBUS<sb>:SPI:FILTer:DOPerator on page 1578

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX
on page 1580
SBUS<sb>:SPI:FILTer:IMAX on page 1580
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN
on page 1580
SBUS<sb>:SPI:FILTer:IMIN on page 1580
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator
on page 1581
SBUS<sb>:SPI:FILTer:IOPerator on page 1581

Edit
Opens a dialog to define the details of the selected frame.

Error type
Enables filtering on the selected error type.

Available error types are "Void", "Length error" and "Incomplete".

Remote command:
SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle on page 1579

14.2.4 SPI format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:SPI:FORMat:SELect` on page 1582

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

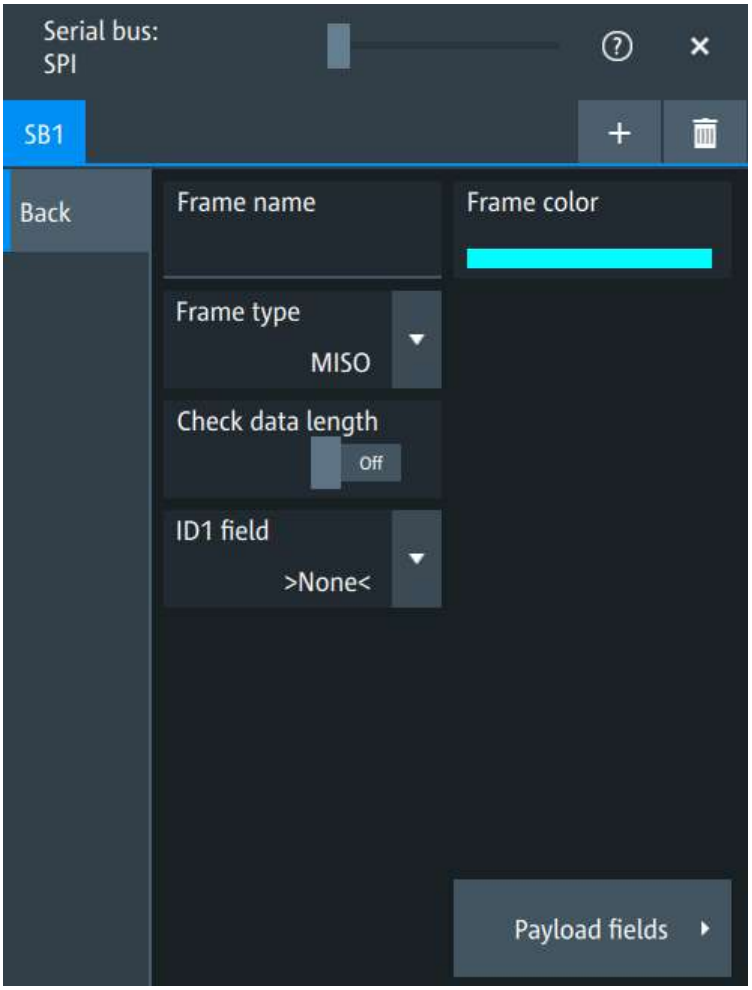

Remote command:
`SBUS<sb>:SPI:FORMat:ADDFrame` on page 1582

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:SPI:FORMat:CLR on page 1583
SBUS<sb>:SPI:FORMat:FCOunt? on page 1583

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:SPI:FORMat:LOAD on page 1582

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:SPI:FORMat:SAVE on page 1582

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:NAME on page 1584

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:COLor on page 1584

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:TYPE on page 1584

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENCheck on page 1585

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENValue on page 1585

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Field on page 1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Field on page 1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Field on page 1585


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Value on page 1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Value on page 1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Value on page 1586

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

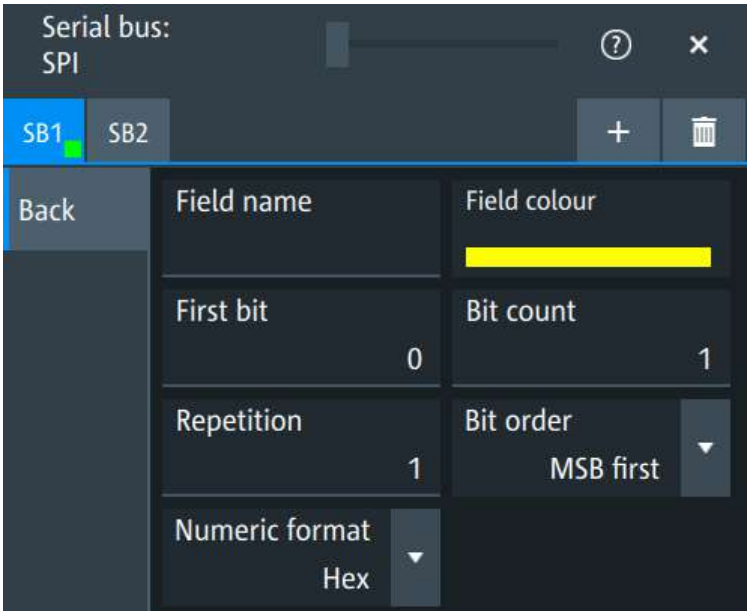

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ADDField on page 1583

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1586

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1586

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1587

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 1587

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 1587

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1588

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1588

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1589

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1589

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1590

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1590

Parameter A,B
Defines the parameters of the linear function.


- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1591
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1591

14.2.5 SPI hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Trigger" tab > "Setup Hardware Trigger"

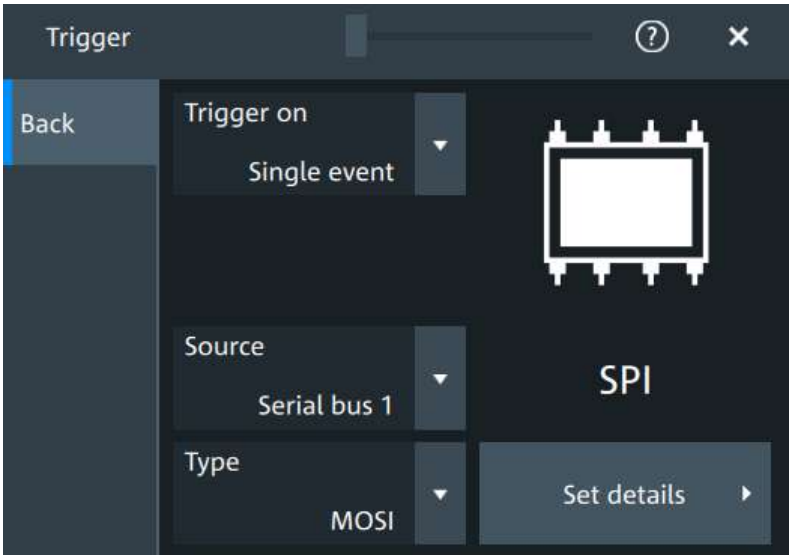

Type
Selects the trigger type for SPI analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start of frame" Sets the trigger to the beginning of the frame.


"End of frame" Sets the trigger to the end of the frame.

"MOSI" Sets the trigger to a specified data pattern expected on the MOSI line.
Available, if there is a channel assigned to the "MOSI" line in the "Setup" tab.

"MISO" Sets the trigger to a specified data pattern expected on the MISO line.
Available, if there is a channel assigned to the "MISO" line in the "Setup" tab.

Remote command:
`TRIGger:SBHW:SPI:TYPE` on page 1591

Data conditions
The trigger on MOSI and MISO patterns is defined in the same way:

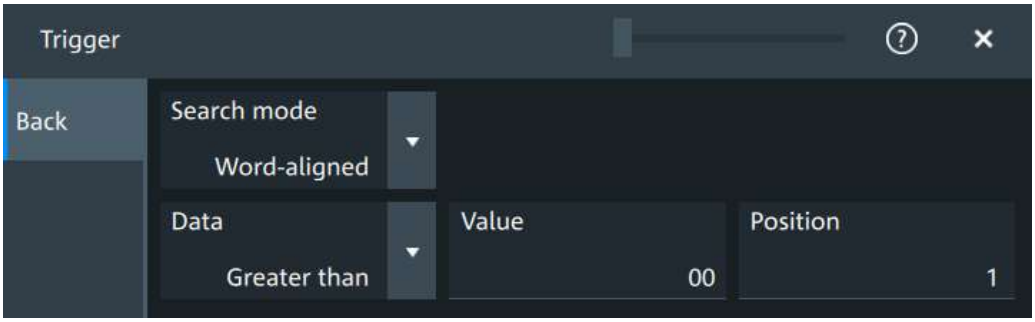

Search mode ← Data conditions
Defines how the specified data pattern is searched.

"Bit-aligned" Bit-by-bit: the pattern can start at any position in the message.

"Word-aligned" The pattern is matched only at word boundaries.

Remote command:
`TRIGger:SBHW:SPI:PALignment` on page 1592

Data ← Data conditions
Selects the operator condition for the data pattern and sets the data pattern.

Remote command:
`TRIGger:SBHW:SPI:FCONdition` on page 1592
`TRIGger:SBHW:SPI:DMINpattern` on page 1593

Position ← Data conditions
Sets the number of bits or words to be ignored before the first bit or word of interest.

Remote command:
`TRIGger:SBHW:SPI:DPOSition` on page 1592


14.2.6 SPI software trigger

14.2.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.2.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

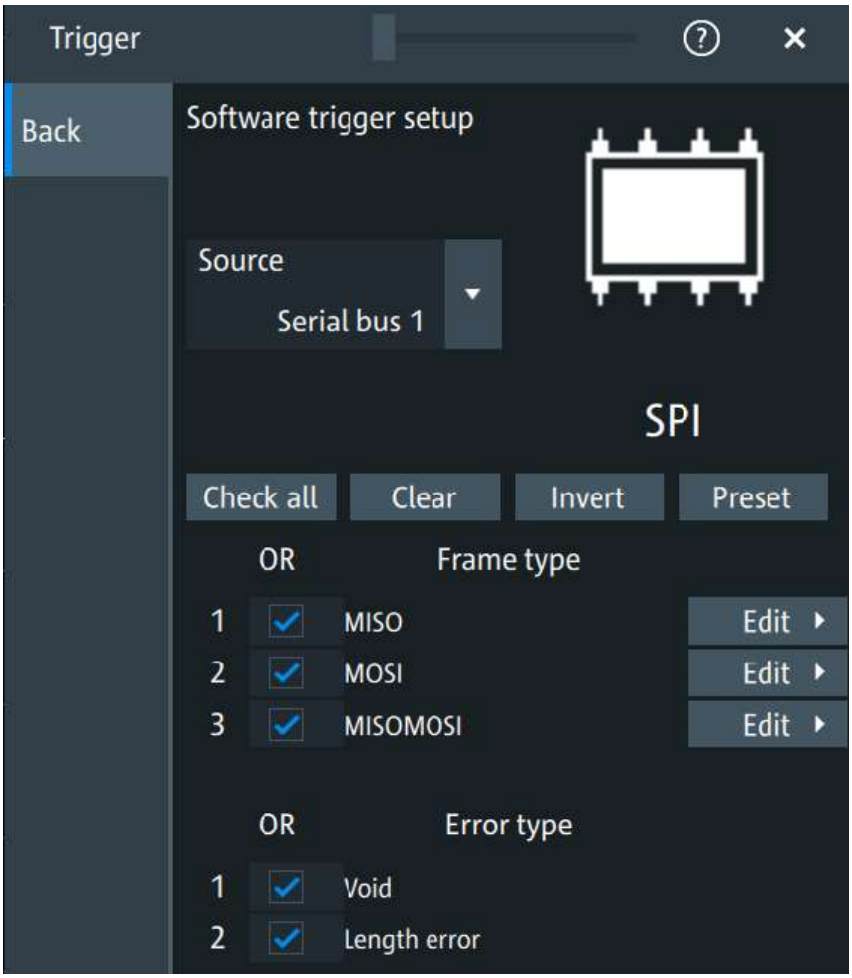

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear"	Disables the software trigger for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:SPI:CHKall` on page 1594
`TRIGger:SBSW:SPI:CLR` on page 1594
`TRIGger:SBSW:SPI:INVert` on page 1594
`TRIGger:SBSW:SPI:RST` on page 1594


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "MISO", "MOSI" and "MISO/MOSI".

Remote command:
`TRIGger:SBSW:SPI:FRENable` on page 1594
`TRIGger:SBSW:SPI:FRAMe<fr>:ENABle` on page 1594

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

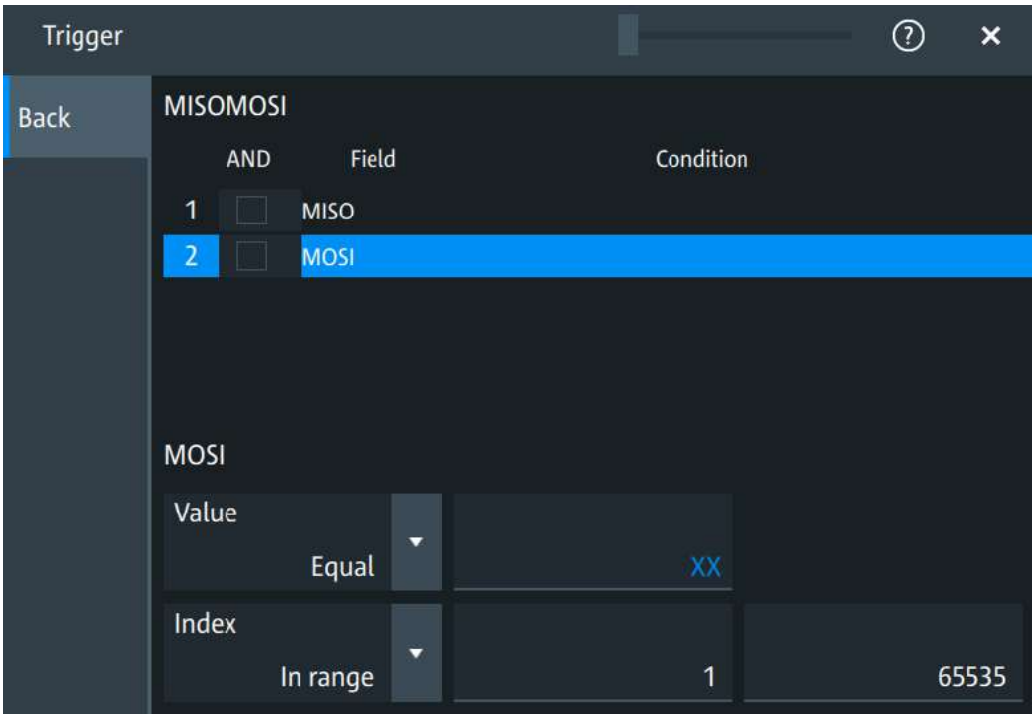

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "MOSI" and "MISO".

Remote command:
TRIGger:SBSW:SPI:FIENable on page 1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:ENABle on page 1596

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:SPI:BIT on page 1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:BIT on page 1595

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:SPI:DMAX on page 1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMAX on page 1595
TRIGger:SBSW:SPI:DMIN on page 1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMIN on page 1595
TRIGger:SBSW:SPI:DOPerator on page 1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator on page 1596

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:SPI:IMAX on page 1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMAX on page 1596
TRIGger:SBSW:SPI:IMIN on page 1597
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMIN on page 1597
TRIGger:SBSW:SPI:IOPerator on page 1597
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator on page 1597

Error type
Enables triggering on the selected error type.

The following error types are available: "Void" and "Length error".

Remote command:
TRIGger:SBSW:SPI:ERENable on page 1598
TRIGger:SBSW:SPI:ERRor<m>:ENABle on page 1598

14.2.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.2.8 SPI decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

For more information on decoding SPI, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding SPI with MXO Series Oscilloscopes.

Decode results table

The "Decode results" table contains information about all decoded frames.

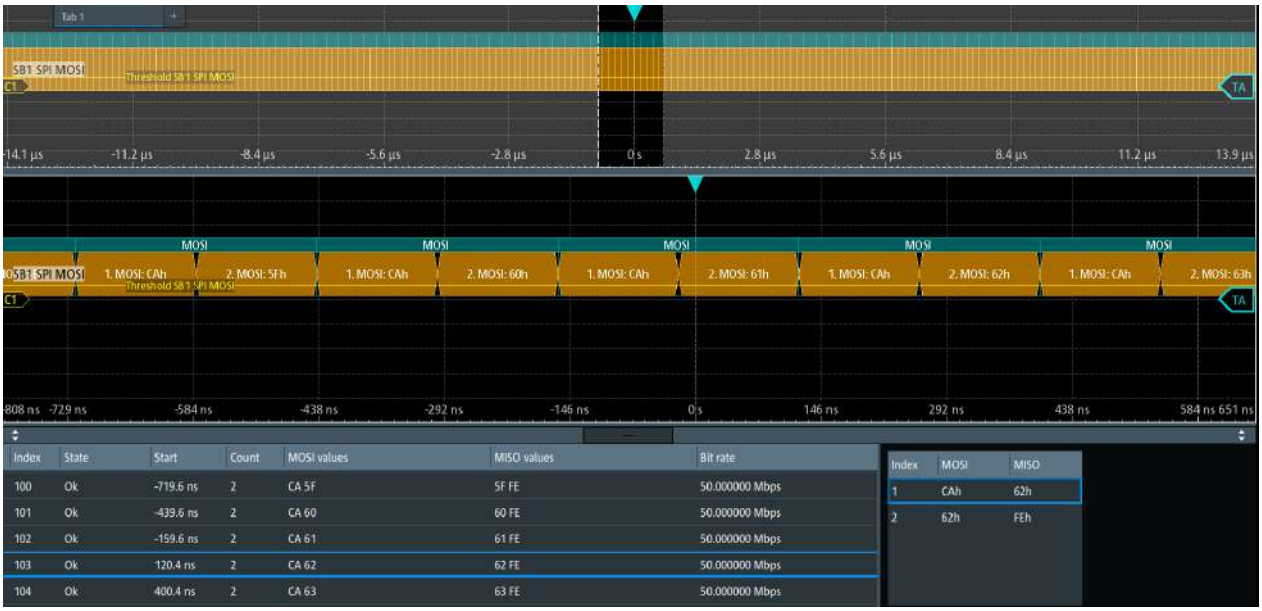


Figure 14-11: Decoded SPI signal

The decode results table contains information about all decoded frames.

Table 14-1: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Count	Number of words in the frame
MOSI values	Value of the MOSI data words. Select the data format in the "Display" tab.
MISO values	Value of the MISO data words. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-2: Content of the frame details table

Column	Description
Index	Index of the field
MOSI	Values of the MOSI fields
MISO	Values of the MISO fields

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.2.6, "Decode results", on page 1599.

To query the MOSI and MISO values, use the remote command `SBUS<sb>:SPI:FRAMe<fr>:DATA?`.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example SPI export file

```
Index,Start,Stop,State,Count,BitRate
1,-2.9e-05,-2.872e-05,'OK',2,50000000
2,-2.844e-05,-2.83e-05,'OK',1,50000000
3,-2.816e-05,-2.788e-05,'OK',2,50000000
4,-2.76e-05,-2.746e-05,'VOID',0,---

Details frame 1
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.9e-05,-2.886e-05,AFh,---
2,-2.886e-05,-2.872e-05,FEh,---

Details frame 2
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.844e-05,-2.83e-05,---,34h

Details frame 3
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.816e-05,-2.802e-05,CAh,F0h
2,-2.802e-05,-2.788e-05,05h,0Dh
```

14.3 QUAD-SPI bus (IC electronics, option R&S MXO5-K510)

QUAD-SPI also known as QSPI is a protocol that extends the standard SPI by using four data lanes instead of one. This protocol enables a faster data transfer.

Requirements

For performing QUAD-SPI decode measurements, you need the following:

- MXO 5 with 4 channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Option R&S MXO5-K510

- About the QUAD-SPI protocol 580
- QUAD-SPI configuration 581
- QUAD SPI filter 584
- QUAD-SPI format configuration 586
- QUAD SPI software trigger 590
- Measure 593
- QUAD-SPI decode results 593

14.3.1 About the QUAD-SPI protocol

Quad Serial Peripheral Interface is an extension of the standard Serial Peripheral Interface (SPI). It enhances the data transfer capabilities by utilizing four data lines instead of the single data line used in traditional SPI. This expansion significantly increases the data throughput, making it ideal for applications requiring rapid data exchange, such as memory devices, display controllers, and sensors.

Key features

Key features of QSPI are:

- **Increased data throughput**: By using four data lines (IO0, IO1, IO2, IO3), QSPI can achieve higher data transfer rates compared to standard SPI. This makes it suitable for high-speed applications.
- **Enhanced flexibility**: QSPI supports various modes of operation, including single, dual, and quad modes, allowing for flexible communication tailored to specific needs.
- **Memory mapping**: one of the standout features of QSPI is its ability to map external flash memory directly into the memory space of a microcontroller, enabling efficient and seamless data access.

Communication Lines

QSPI uses 6 primary lines:

- SCLK (serial clock): generates the clock signal

- CS (chip select): selects the device for communication
- IO0-IO3 (data lines): four lines for data transfer.

14.3.2 QUAD-SPI configuration

14.3.2.1 QUAD-SPI configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Setup".

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

CS, SCLK, IO n
Sets the input channel for the respective line:

- CS: chip select
- SCLK: clock line
- IO0, IO1, IO2, IO3, IO4: data lines

Remote command:
`SBUS<sb>:QSPI:CSEL:SOURce` on page 1605
`SBUS<sb>:QSPI:IOONe:SOURce` on page 1607
`SBUS<sb>:QSPI:IOTHree:SOURce` on page 1608
`SBUS<sb>:QSPI:IOTWo:SOURce` on page 1610
`SBUS<sb>:QSPI:IOZero:SOURce` on page 1612
`SBUS<sb>:QSPI:SCLK:SOURce` on page 1613

SCLK SDR Polarity
Selects if the transmitted signal for the respective line is rising or falling.

Remote command:
`SBUS<sb>:QSPI:SCLK:POLarity` on page 1612

Polarity: CS, IO<n>
Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Remote command:
SBUS<sb>:QSPI:CSEL:POLarity on page 1605
SBUS<sb>:QSPI:IOONe:POLarity on page 1606
SBUS<sb>:QSPI:IOTHree:POLarity on page 1608
SBUS<sb>:QSPI:IOTWo:POLarity on page 1609
SBUS<sb>:QSPI:IOZero:POLarity on page 1611

Instruction
Selects the instruction mode that defines how many lanes are used to transmit data.

"Single" Only one data line is used, IO0.


"Dual" Two lines are used for data transmission IO0 and IO1. This mode doubles the data rate compared to a single mode, as it can send or receive 2 bits per clock cycle.

"Quad" Four lines are used for data transmission IO0, IO1, IO2 and IO3. This mode provides the highest data transfer rate. This mode quadruples the data transfer rate compared to a single mode, as it can send or receive 4 bits per clock cycle.

Remote command:
SBUS<sb>:QSPI:INSTruction on page 1605

14.3.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Thresholds".

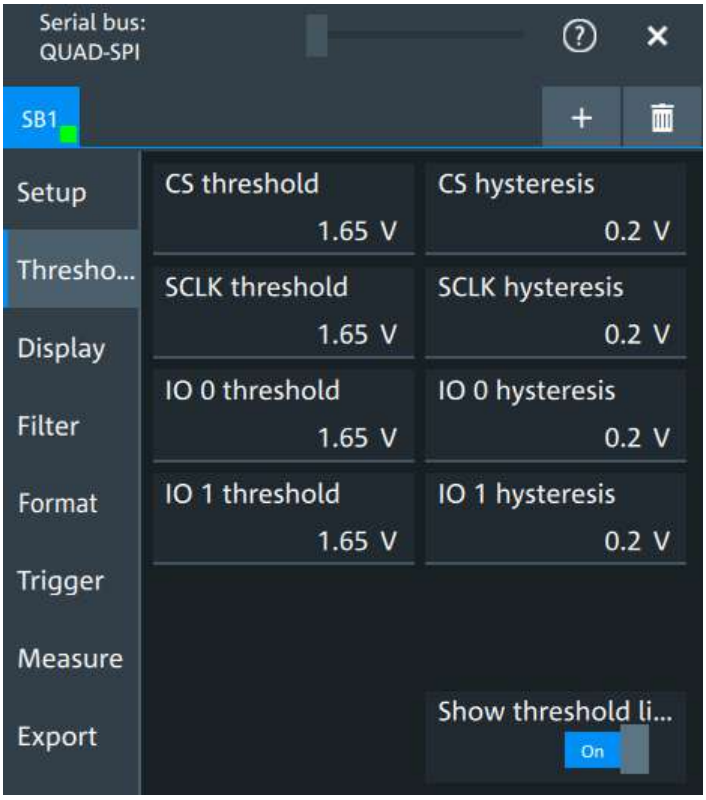

CS/SCLK/IO<n> threshold
Set the threshold for each signal channel. Enter the value directly in the fields.

Remote command:
SBUS<sb>:QSPI:CSEL:THReshold on page 1605
SBUS<sb>:QSPI:IOONe:THReshold on page 1607
SBUS<sb>:QSPI:IOTWo:THReshold on page 1610
SBUS<sb>:QSPI:IOTHree:THReshold on page 1609
SBUS<sb>:QSPI:IOZero:THReshold on page 1612
SBUS<sb>:QSPI:SCLK:THReshold on page 1613

CS/SCLK/IO<n> hysteresis
Set the hysteresis for each signal channel. Enter the value directly in the fields.

Remote command:
SBUS<sb>:QSPI:CSEL:HYSTeresis on page 1604
SBUS<sb>:QSPI:IOONe:HYSTeresis on page 1606
SBUS<sb>:QSPI:IOTWo:HYSTeresis on page 1609
SBUS<sb>:QSPI:IOTHree:HYSTeresis on page 1607
SBUS<sb>:QSPI:IOZero:HYSTeresis on page 1610
SBUS<sb>:QSPI:SCLK:HYSTeresis on page 1612

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.3.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.


Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges for each lane.
"Bits"	Enables the display of all bits for each lane.
"Merged bits"	Enables the display of the bits merged across multiple lanes.
"Words"	Enables the display of all words.

14.3.3 QUAD SPI filter

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Filter" tab

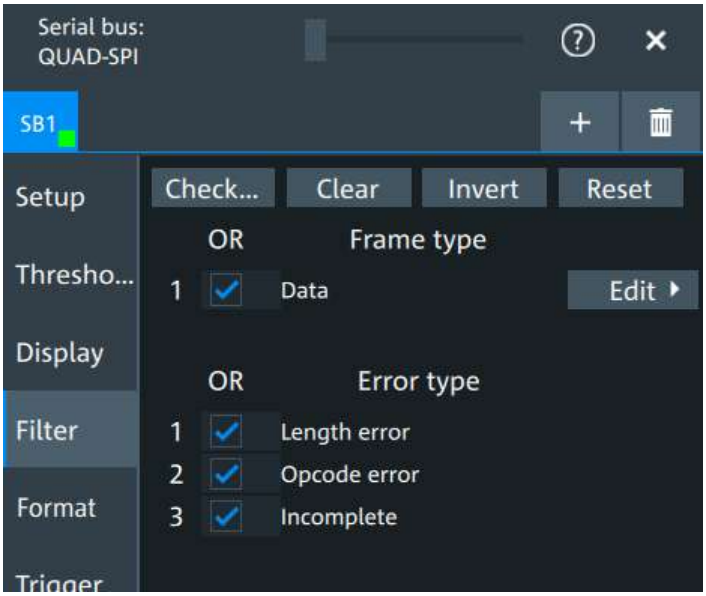

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:QSPI:FILTer:CHKall` on page 1614
`SBUS<sb>:QSPI:FILTer:CLR` on page 1614
`SBUS<sb>:QSPI:FILTer:INVert` on page 1614
`SBUS<sb>:QSPI:FILTer:RST` on page 1615

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.


For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame types are the opcodes and an "Undescribed", to support custom coding.

If you have created own opcodes, they also appear in this list.

See Section 14.1.5, "Format", on page 544.

Edit
Opens a dialog to define the details of the selected frame.

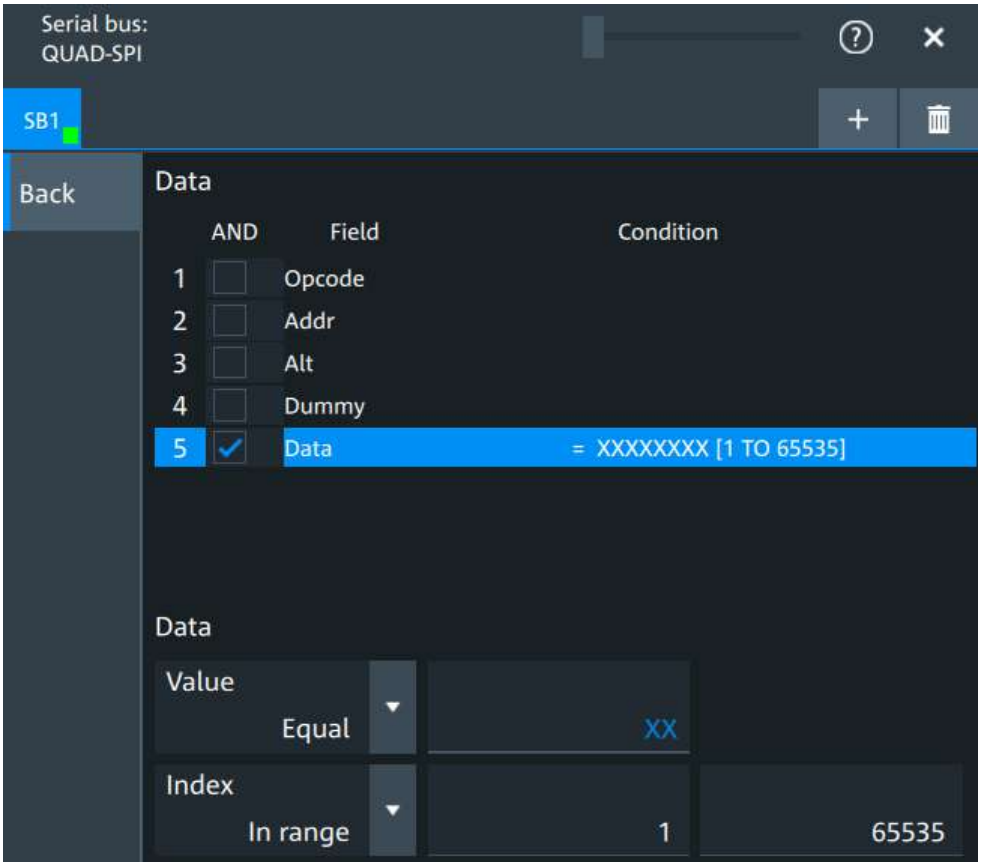

"Field" Enables the field type that you want to filter on for the selected frame.

Depending on the frame type, the available fields are:

- "Opcode"
- "Addr"
- "Alt"
- "Dummy"
- "Data"

Remote command:
`SBUS<sb>:QSPI:FILTer:FIENable` on page 1618
`SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1618

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:QSPI:FILTer:BIT` on page 1615
`SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1615

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:QSPI:FILTer:DMAX on page 1615
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1615
SBUS<sb>:QSPI:FILTer:DMIN on page 1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1616
SBUS<sb>:QSPI:FILTer:DOPerator on page 1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1616

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:QSPI:FILTer:IMAX on page 1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1616
SBUS<sb>:QSPI:FILTer:IMIN on page 1617
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1617
SBUS<sb>:QSPI:FILTer:IOPerator on page 1617
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1617

Error type
Enables filtering on the selected error type.

Available error types are "Length error", "Opcode error", "Incomplete".

Remote command:
SBUS<sb>:QSPI:FILTer:ERENable on page 1618
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle on page 1618

14.3.4 QUAD-SPI format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Format".

See Section 14.1.5, "Format", on page 544.

Add
Adds a new item to the opcode list.

Remote command:
SBUS<sb>:QSPI:OPCode:APPend on page 1619

Delete
Deletes the currently selected opcode from the list.

Remote command:
SBUS<sb>:QSPI:OPCode:DELete on page 1619

Delete all
Deletes all defined opcodes from the list.

Remote command:
SBUS<sb>:QSPI:OPCode:DALL on page 1619


Open, Save as
Opens a dialog box where you can select a filename and a path for the export results file.

Remote command:
SBUS<sb>:QSPI:LDOPcode on page 1620
SBUS<sb>:QSPI:SVOP on page 1623

Preset
Resets the opcode fields to the predefined values.

Remote command:
SBUS<sb>:QSPI:OPCode:RESet on page 1620

Opcode settings

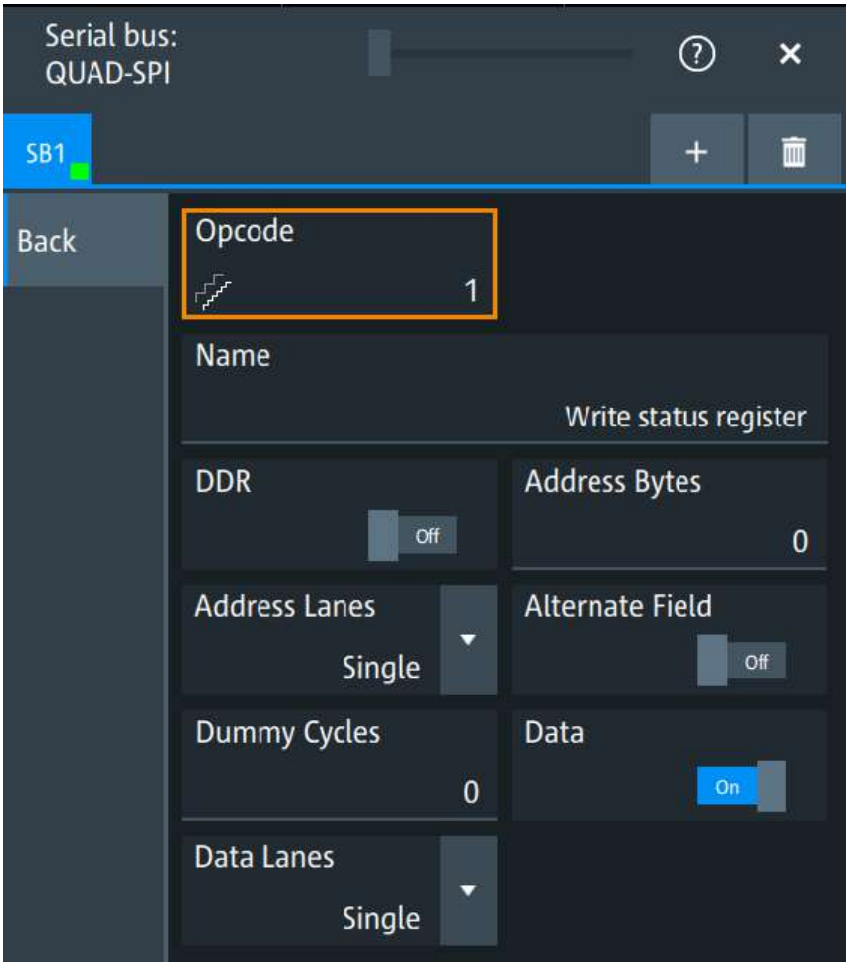

You can define the following settings for each opcode separately:

Opcode ← Opcode settings
Sets the opcode value.

Remote command:
`SBUS<sb>:QSPI:OPCode:ITEM<n>:CODE` on page 1621

Name ← Opcode settings
Sets the name for the opcode.

Remote command:
`SBUS<sb>:QSPI:OPCode:ITEM<n>:NAME` on page 1623

DDR ← Opcode settings
If enabled, the data is transferred on both the rising and falling edges of the clock signal. This method effectively doubles the data transfer rate compared to a single data rate (SDR), which transfers data only on one clock edge.

Remote command:
`SBUS<sb>:QSPI:OPCode:ITEM<n>:DDR` on page 1622

Address Bytes ← Opcode settings
Sets the address byte. It specifies the location in the flash memory where the operation (e.g., read, write) is performed.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADBYtes on page 1620

Address Lanes ← Opcode settings
Selects how many lines or lanes are used to send the address bytes to the flash memory.

"Single" Address is sent over one serial line.

"Dual" Address is sent over two lines.

"Quad" Address is sent over four lines.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADLanes on page 1621

Alternative Field ← Opcode settings
Enable, if an "Alt" field is available. The alternative field can be implemented according to the preferences of the manufacturer of the device under test, for example a flash memory device.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:ALT on page 1621

Dummy Cycles ← Opcode settings
Sets the number of dummy cycles. Dummy cycles are clock cycles inserted after the address or other command sequences but before data transfer begins. These cycles allow the flash memory device additional time to perform internal operations or latch onto the correct data to ensure accurate read or write operations.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:DMCYcles on page 1622

Data ← Opcode settings
Enable, if data is being transferred in the opcode operation.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:DATA on page 1622

Data Lanes ← Opcode settings
Selects how many lanes are used for the data transfer.

The data lanes refer to the physical connections through which data is transmitted between the main (typically a microcontroller) and the secondary (typically a flash memory device).

"Single" Data is sent over one serial line.

"Dual" Data is sent over two lines.

"Quad" Data is sent over four lines.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:DTLanes on page 1623


14.3.5 QUAD SPI software trigger

14.3.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.3.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Trigger" tab > "Setup Software Trigger"

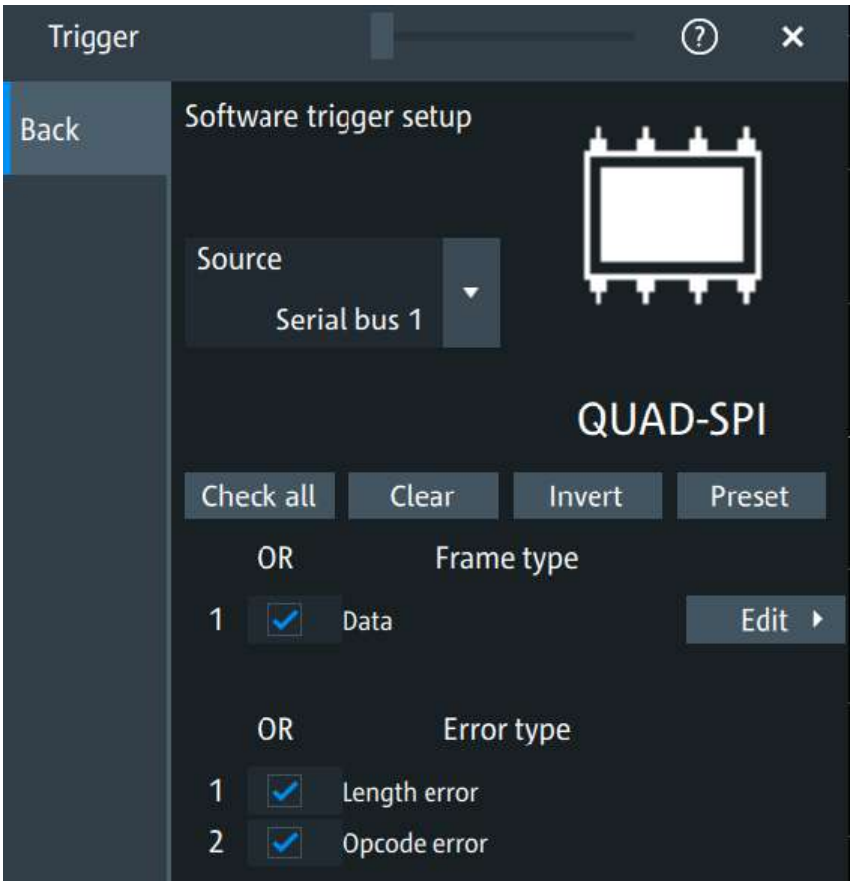

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:QSPI:CHKall` on page 1624
`TRIGger:SBSW:QSPI:CLR` on page 1625
`TRIGger:SBSW:QSPI:INVert` on page 1625
`TRIGger:SBSW:QSPI:RST` on page 1625


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame is "Data".

Remote command:
`TRIGger:SBSW:QSPI:FRENable` on page 1625
`TRIGger:SBSW:QSPI:FRAMe<fr>:ENABle` on page 1625

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

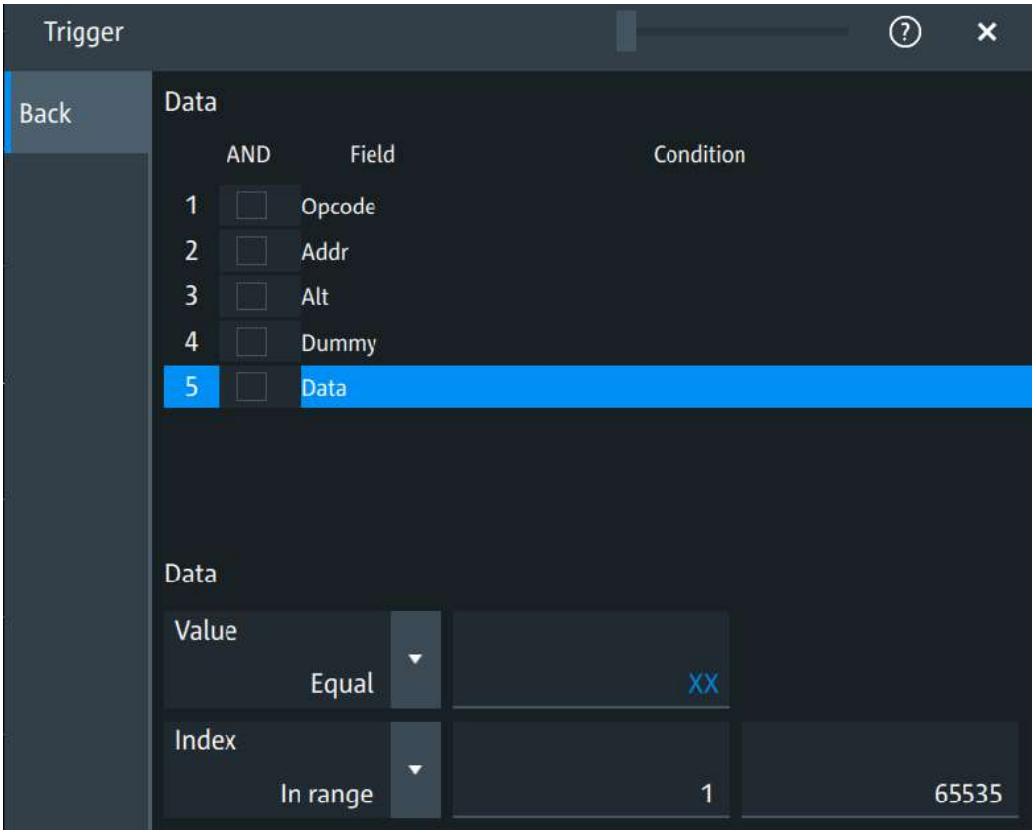

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Opcode", "Addr", "Alt", "Dummy" and "Data".

Remote command:
`TRIGger:SBSW:QSPI:FIENable` on page 1627
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:ENABle` on page 1627

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:QSPI:BIT` on page 1626
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:BIT` on page 1626

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:QSPI:DMAX` on page 1626
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMAX` on page 1626
`TRIGger:SBSW:QSPI:DMIN` on page 1626
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMIN` on page 1626
`TRIGger:SBSW:QSPI:DOPerator` on page 1627
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator` on page 1627

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:QSPI:IMAX on page 1627
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMAX on page 1627
TRIGger:SBSW:QSPI:IMIN on page 1628
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMIN on page 1628
TRIGger:SBSW:QSPI:IOPerator on page 1628
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator on page 1628

Error type
Enables triggering on the selected error type.

The following error types are available: "Length error" and "Opcode error".

Remote command:
TRIGger:SBSW:QSPI:ERENable on page 1629
TRIGger:SBSW:QSPI:ERRor<m>:ENABle on page 1629

14.3.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.3.7 QUAD-SPI decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

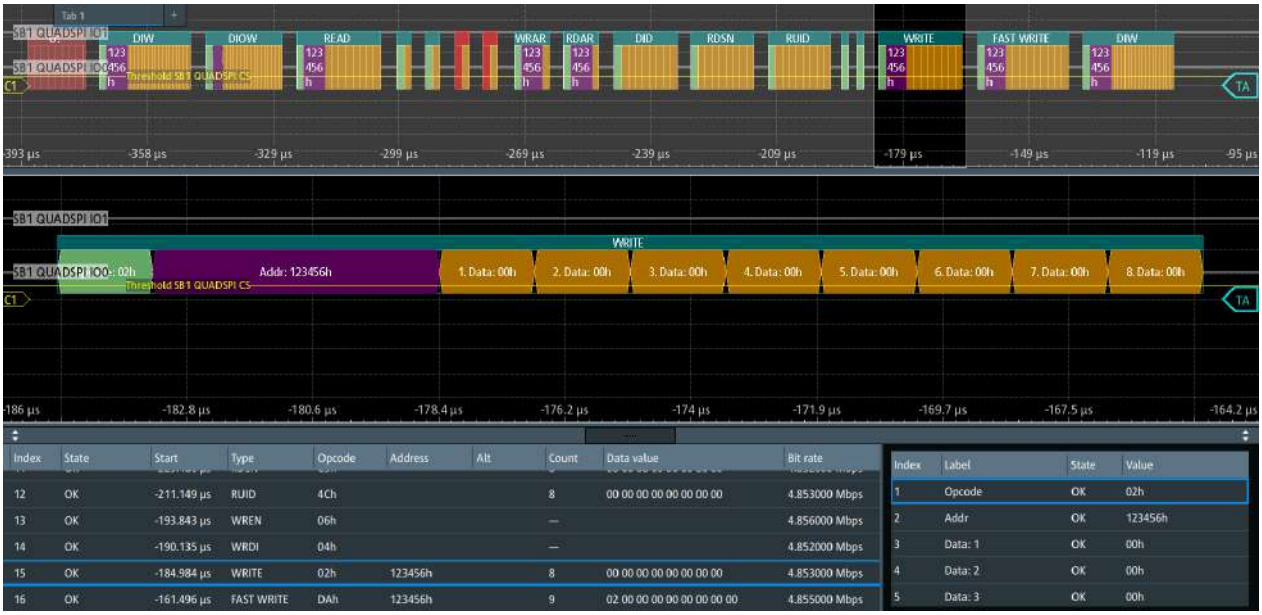


Figure 14-12: Decoded QUAD-SPI signal

The decode results table contains information about all decoded frames.

Table 14-3: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Opcode	Operation code value
Address	Address value
Alt	Value of the alternate byte
Count	Number of words in the frame
Data value	Value of the data frame. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-4: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.3.5, "Decode results", on page 1630.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example QUAD-SPI export file

```
Index,Start,Stop,State,Opcode,Address,Alt,Count,Bit rate
1,-7.04e-05,-5.28e-05,'OK',0Ah,12345678h,0Ch,4,5000000
2,-5.28e-05,-3.52e-05,'OK',0Ah,12345678h,0Ch,4,5000000
3,-3.52e-05,-1.76e-05,'OK',0Ah,12345678h,0Ch,4,5000000
4,-1.76e-05,0,'OK',0Ah,12345678h,0Ch,4,5000000

Details frame 1
Index,Data
1,52h
2,53h
3,54h
4,55h

Details frame 2
Index,Data
1,56h
2,57h
3,58h
4,59h
```

14.4 OCTO-SPI bus (IC electronics, option R&S MXO5-K510)

Requirements

For performing OCTO-SPI decode measurements, you need the following:

- MXO 5 with 8 channels. The channels can be a combination of the following:
  - Analog channels (C1-C8)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)

- Option R&S MXO5-K510

- About the OCTO-SPI protocol....596
- OCTO-SPI configuration....597
- OCTO SPI filter....601
- OCTO-SPI format configuration....603
- OCTO SPI software trigger....607
- Measure....609
- OCTO-SPI decode results....610

14.4.1 About the OCTO-SPI protocol

Octal Serial Peripheral Interface (Octo-SPI or OSPI) is an extension of the classic Serial Peripheral Interface (SPI) protocol that employs eight bidirectional data lines (IO0-IO7) instead of the single MOSI/MISO pair used in conventional SPI. By transferring up to 8 bits per clock edge or 16 bits when dual-data-rate (DDR) is enabled, OSPI can deliver throughput that is roughly twice that of QUAD-SPI while still using the same basic command-address-data transaction format.

Key features

Key features of OSPI are:

- **Very high data throughput**: Up to several gigabits per second, depending on clock frequency (often 100 to 200 MHz) and DDR operation.
- **Enhanced Flexibility**: Devices can be addressed in single-, dual-, quad-, or octal-mode, allowing to start with a simple 1-bit interface and later switch to 8-bit for maximum speed.
- **Memory Mapping**: external OSPI flash can be mapped directly into the microcontroller's address space, enabling execute-in-place (XIP) code and fast random reads without CPU-managed byte-wise transfers.
- **Extended address space**: OSPI controllers typically support 24-, 32-, or even 40-bit address fields, making it suitable for very large flash devices.
- **Optional dual-data-rate (DDR)**: Sampling on both clock edges doubles the effective bit rate without increasing the pin count.

Communication Lines


OSPI uses up to 11 primary lines:

- CK (clock line): Generates the clock signal.
- CS (chip select line): Selects the device for communication.
- IO0-IO7 (data lines): Eight bidirectional I/O pins that carry command, address, and data bits.
- DS (data strobe): Optional line that marks the valid data edge when DDR is used.

14.4.2 OCTO-SPI configuration

14.4.2.1 OCTO-SPI configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Setup".

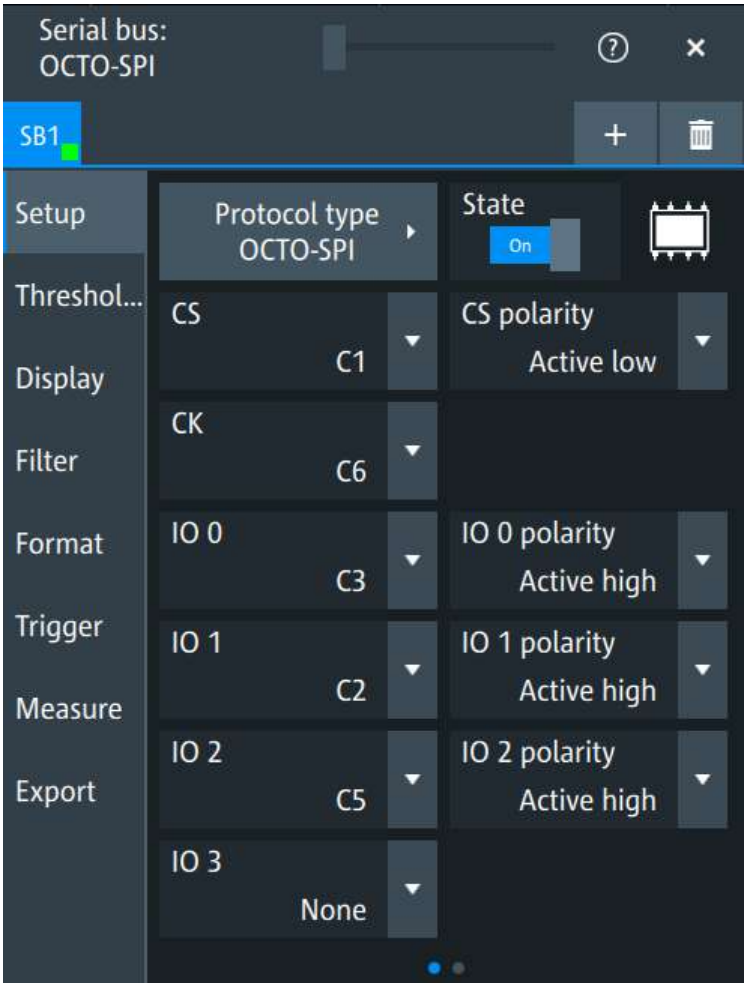

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
SBUS<sb>[:STATe] on page 1564

CS, CK, IO n
Sets the input channel for the respective line:

- CS: chip select
- CK: clock line
- IO0-IO7: data lines
- DS: data strobe line (optional, for DDR)

Remote command:
SBUS<sb>:OSPI:CSEL:SOURce on page 1638
SBUS<sb>:OSPI:CK:SOURce on page 1639
SBUS<sb>:OSPI:IOZero:SOURce on page 1641
SBUS<sb>:OSPI:IOONe:SOURce on page 1641
SBUS<sb>:OSPI:IOTWo:SOURce on page 1641
SBUS<sb>:OSPI:IOTHree:SOURce on page 1641
SBUS<sb>:OSPI:IOFR:SOURce on page 1641
SBUS<sb>:OSPI:IOFV:SOURce on page 1641
SBUS<sb>:OSPI:IOSX:SOURce on page 1641
SBUS<sb>:OSPI:IOSV:SOURce on page 1641
SBUS<sb>:OSPI:DS:SOURce on page 1642

Polarity: CS, IO<n>
Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Remote command:
SBUS<sb>:OSPI:CSEL:POLarity on page 1637
SBUS<sb>:OSPI:IOZero:POLarity on page 1640
SBUS<sb>:OSPI:IOONe:POLarity on page 1640
SBUS<sb>:OSPI:IOTWo:POLarity on page 1640
SBUS<sb>:OSPI:IOTHree:POLarity on page 1640
SBUS<sb>:OSPI:IOFR:POLarity on page 1640
SBUS<sb>:OSPI:IOFV:POLarity on page 1640
SBUS<sb>:OSPI:IOSX:POLarity on page 1640
SBUS<sb>:OSPI:IOSV:POLarity on page 1640


Instruction
Selects the instruction mode that defines how many lines are used to transmit data.

"1S", "2S", "4S", "8S"	Defines the number of lines in single data rate mode, i.e. 8S = “8-line-Single-Data-Rate” (octal-SDR)
"1D", "2D", "4D", "8D"	Defines the number of lines in dual data rate mode, i.e. 4D = “4-line-Dual-Data-Rate” (quad-DDR)

Remote command:
SBUS<sb>:OSPI:MODE on page 1638

14.4.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Thresholds".

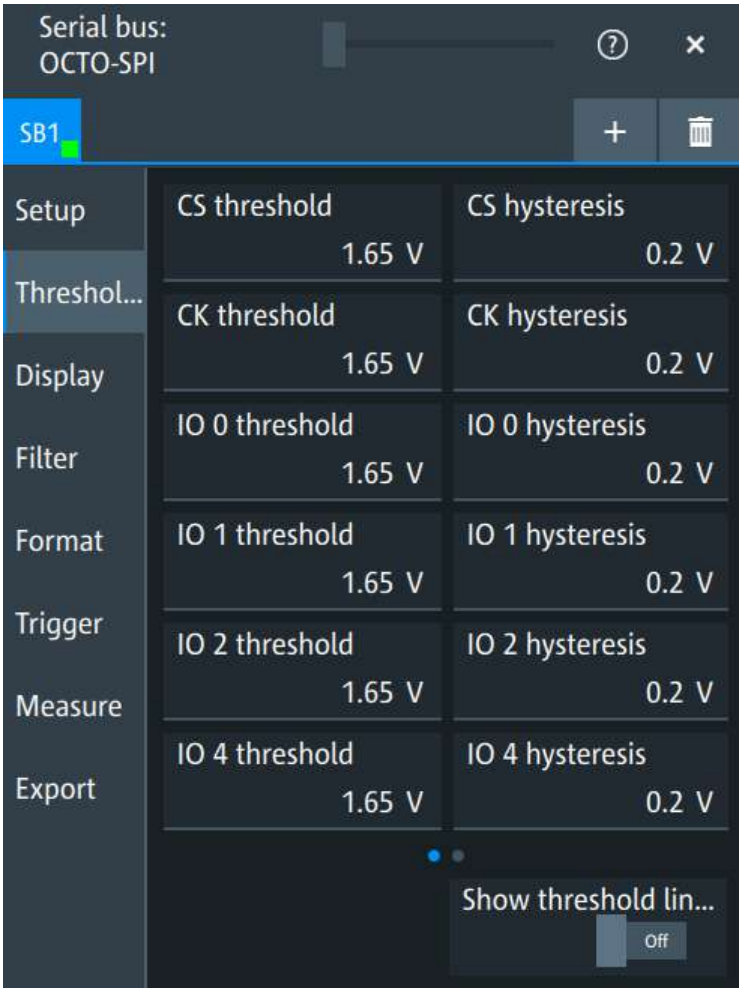

CS/CK/IO<n>/DS threshold
Set the threshold for each signal channel. Enter the value directly in the fields.

Remote command:
`SBUS<sb>:OSPI:CSEL:THReshold` on page 1638
`SBUS<sb>:OSPI:CK:THReshold` on page 1639
`SBUS<sb>:OSPI:IOZero:THReshold` on page 1641
`SBUS<sb>:OSPI:IOONe:THReshold` on page 1641
`SBUS<sb>:OSPI:IOTWo:THReshold` on page 1641
`SBUS<sb>:OSPI:IOTHree:THReshold` on page 1641
`SBUS<sb>:OSPI:IOFR:THReshold` on page 1641
`SBUS<sb>:OSPI:IOFV:THReshold` on page 1641
`SBUS<sb>:OSPI:IOSX:THReshold` on page 1641
`SBUS<sb>:OSPI:IOSV:THReshold` on page 1641
`SBUS<sb>:OSPI:DS:THReshold` on page 1642

CS/CK/IO<n>/DS hysteresis
Set the hysteresis for each signal channel. Enter the value directly in the fields.

Remote command:
SBUS<sb>:OSPI:CSEL:HYSTeresis on page 1637
SBUS<sb>:OSPI:CK:HYSTeresis on page 1638
SBUS<sb>:OSPI:IOZero:HYSTeresis on page 1639
SBUS<sb>:OSPI:IOONe:HYSTeresis on page 1639
SBUS<sb>:OSPI:IOTWo:HYSTeresis on page 1639
SBUS<sb>:OSPI:IOTHree:HYSTeresis on page 1639
SBUS<sb>:OSPI:IOFR:HYSTeresis on page 1639
SBUS<sb>:OSPI:IOFV:HYSTeresis on page 1639
SBUS<sb>:OSPI:IOSX:HYSTeresis on page 1639
SBUS<sb>:OSPI:IOSV:HYSTeresis on page 1639
SBUS<sb>:OSPI:DS:HYSTeresis on page 1642


Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.4.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

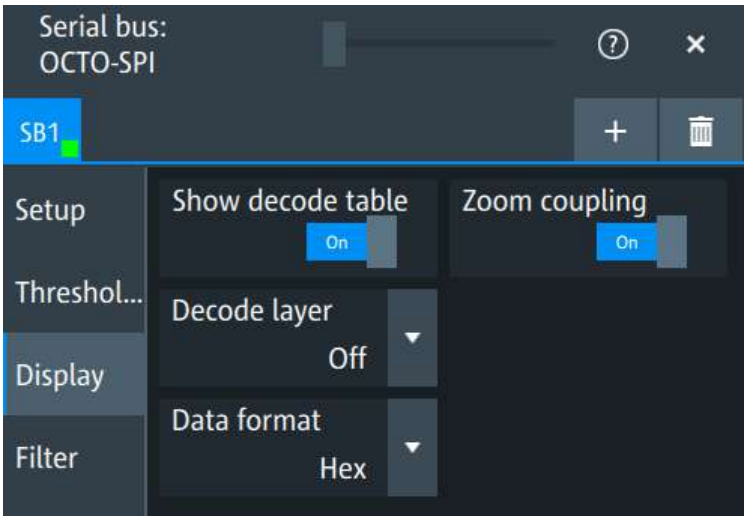


Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges for each line.
"Bits"	Enables the display of all bits for each line.
"Merged bits"	Enables the display of the bits merged across multiple lines.
"Words"	Enables the display of all words.

14.4.3 OCTO SPI filter

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Filter" tab

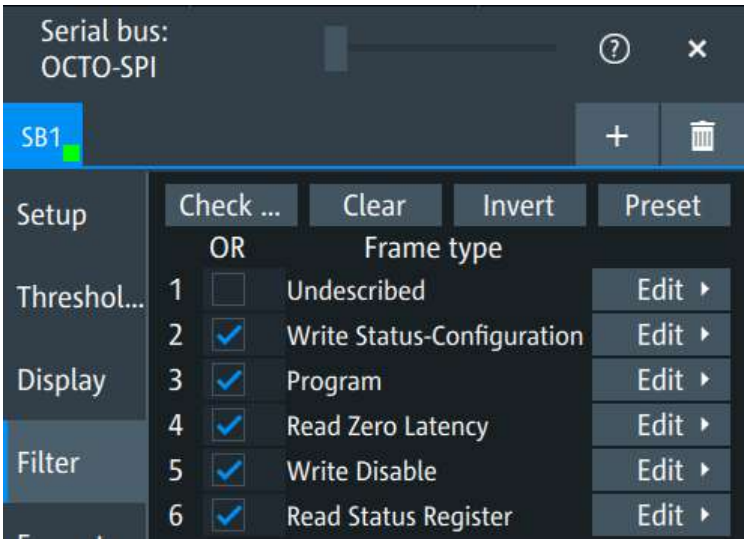

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all"	Enables the filter for all available frames and error types.
"Clear"	Disables the filter for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:OSPI:FILTer:CHKall` on page 1643
`SBUS<sb>:OSPI:FILTer:CLR` on page 1644
`SBUS<sb>:OSPI:FILTer:INVert` on page 1644
`SBUS<sb>:OSPI:FILTer:RST` on page 1644

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.


For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame types are the opcodes and an "Undescribed", to support custom coding.

If you have created own opcodes, they also appear in this list.

See Section 14.1.5, "Format", on page 544.

Edit
Opens a dialog to define the details of the selected frame.

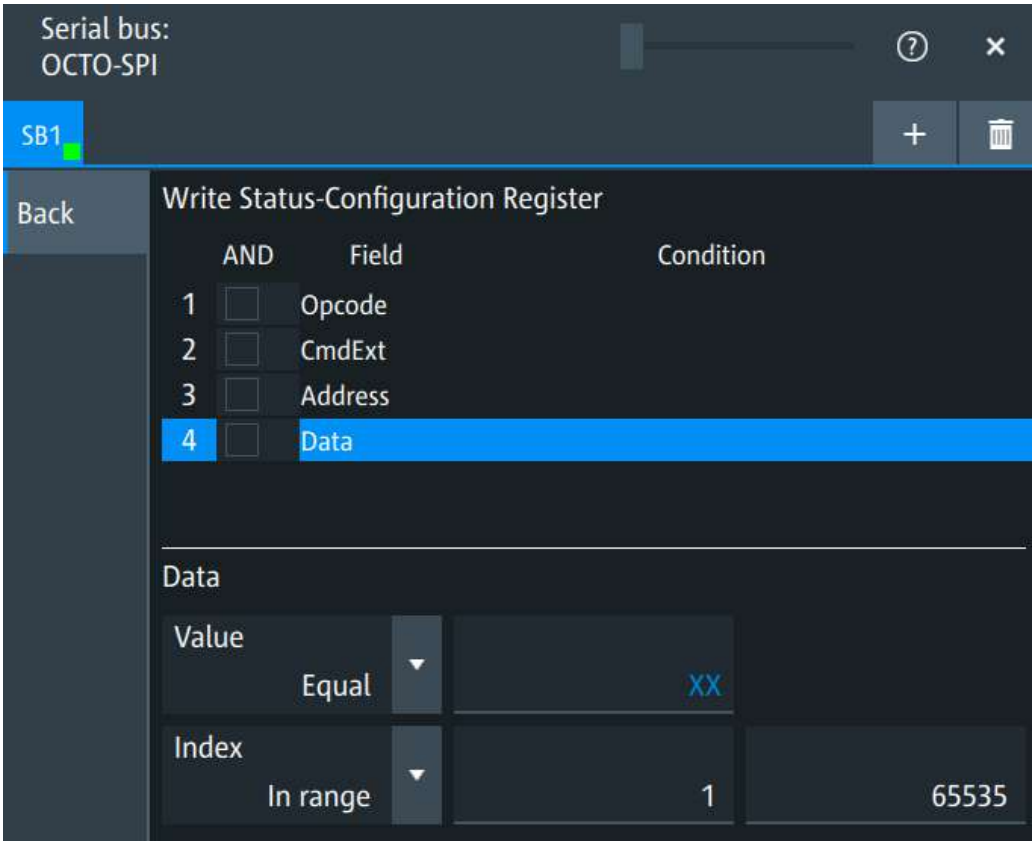

"Field" Enables the field type that you want to filter on for the selected frame.

Depending on the frame type, the available fields are:

- "Opcode"
- "Addr"
- "CmdExt"
- "Data"

Remote command:
`SBUS<sb>:OSPI:FILTer:FIENable` on page 1647
`SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1647

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:OSPI:FILTer:BIT on page 1644
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1644

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:OSPI:FILTer:DMAX on page 1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1645
SBUS<sb>:OSPI:FILTer:DMIN on page 1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1645
SBUS<sb>:OSPI:FILTer:DOPerator on page 1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1645

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:OSPI:FILTer:IMAX on page 1646
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1646
SBUS<sb>:OSPI:FILTer:IMIN on page 1646
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1646
SBUS<sb>:OSPI:FILTer:IOPerator on page 1647
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1647

Error type
Enables filtering on the selected error type.

Available error types are "Length error", "Opcode error", "Incomplete".

Remote command:
SBUS<sb>:OSPI:FILTer:ERENable on page 1647
SBUS<sb>:OSPI:FILTer:ERRor<n>:ENABle on page 1647

14.4.4 OCTO-SPI format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Format".

See Section 14.1.5, "Format", on page 544.

Add
Adds a new item to the opcode list.

Remote command:
SBUS<sb>:OSPI:OPCode:APPend on page 1648

Delete
Deletes the currently selected opcode from the list.

Remote command:
SBUS<sb>:OSPI:OPCode:DELete on page 1649

Delete all
Deletes all defined opcodes from the list.

Remote command:
SBUS<sb>:OSPI:OPCode:DALL on page 1649


Open, Save as
Opens a dialog box where you can select a filename and a path for the export results file.

Remote command:
SBUS<sb>:OSPI:LDOPcode on page 1649
SBUS<sb>:OSPI:SVOP on page 1650

Preset
Resets the opcode fields to the predefined values.

Remote command:
SBUS<sb>:OSPI:OPCode:RESet on page 1649

Opcode settings

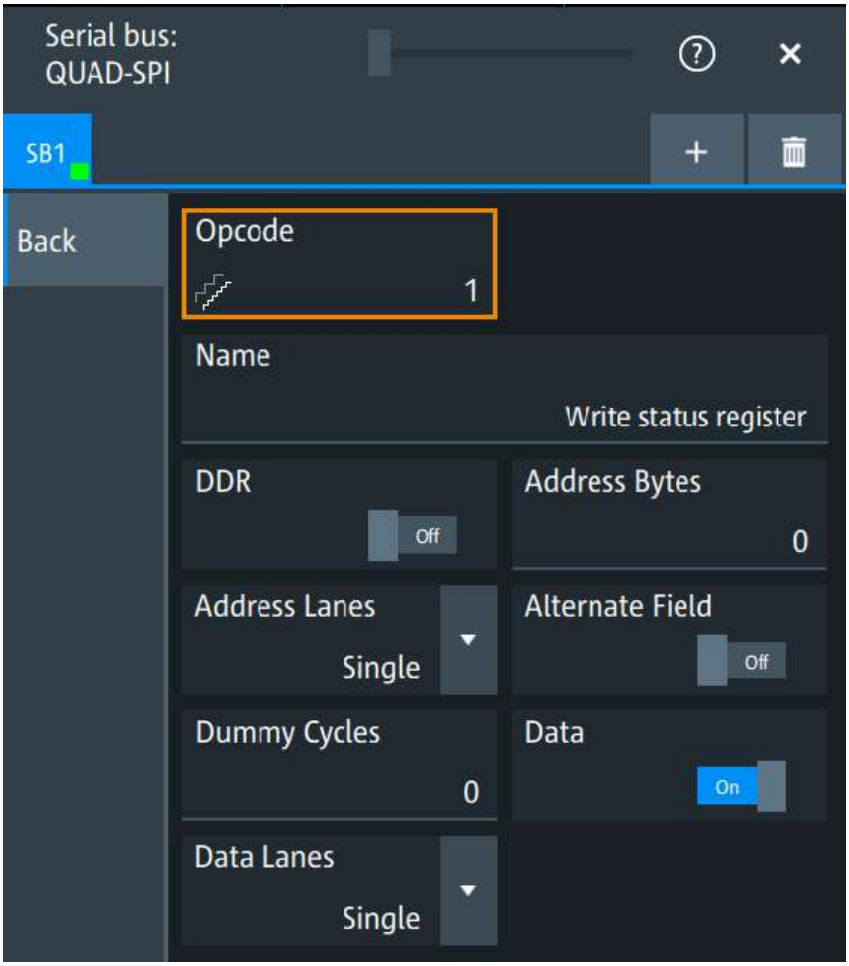

You can define the following settings for each opcode separately:

Command ← Opcode settings
Sets the opcode value.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:CODE` on page 1650

Name ← Opcode settings
Sets the name for the opcode.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:NAME` on page 1650

Command extension ← Opcode settings
If enabled, an extra extension byte is sent immediately after the command opcode.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:CMMode` on page 1651

Cmd. ext.mode ← Opcode settings
Selects how many lines are used for sending the command extension byte.

"1S", "2S", "4S", "8S" Number of lines in single data rate mode, i.e. 8S = “8-line-Single-Data-Rate” (octal-SDR)

"1D", "2D", "4D", "8D" Number of lines in dual data rate mode, i.e. 4D = “4-line-Dual-Data-Rate” (quad-DDR)

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:CMEXtension` on page 1651

Address Bytes ← Opcode settings
Sets the address byte. It specifies the location in the flash memory where the operation (e.g., read, write) is performed.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:ADBYtes` on page 1651

Address mode ← Opcode settings
Selects how many lines are used to send the address bytes to the flash memory.

"1S", "2S", "4S", "8S" Number of lines in single data rate mode, i.e. 8S = “8-line-Single-Data-Rate” (octal-SDR)

"1D", "2D", "4D", "8D" Number of lines in dual data rate mode, i.e. 4D = “4-line-Dual-Data-Rate” (quad-DDR)

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:ADMode` on page 1652

Latency Cycles ← Opcode settings
Sets the number of latency cycles. Latency cycles are clock cycles inserted after the address or other command sequences but before data transfer begins. These cycles allow the flash memory device additional time to perform internal operations or latch onto the correct data to ensure accurate read or write operations.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:LACYcles` on page 1652

Data type ← Opcode settings
Determines the direction of the data flow for the payload after the command and address are sent.

"Read data" Controller is requesting information from the device.

"Write data" Controller is sending information to the device.

"No data" Controller sends a command and sometimes an address, but no actual payload is transferred.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:DTTYpe` on page 1653

Data mode ← Opcode settings
Selects how many lines are used for the data transfer.

The data lines refer to the physical connections through which data is transmitted between the main (typically a microcontroller) and the secondary (typically a flash memory device).

"1S", "2S", "4S", "8S" Number of lines in single data rate mode, i.e. 8S = “8-line-Single-Data-Rate” (octal-SDR)

"1D", "2D", "4D", "8D" Number of lines in dual data rate mode, i.e. 4D = “4-line-Dual-Data-Rate” (quad-DDR)

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:DTMode` on page 1653


14.4.5 OCTO SPI software trigger

14.4.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.4.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Trigger" tab > "Setup Software Trigger"

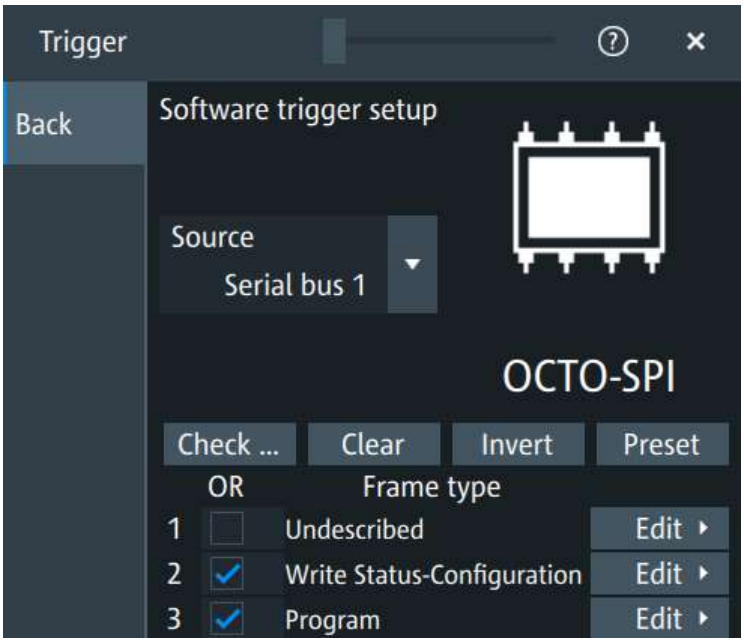

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:OSPI:CHKall` on page 1654
`TRIGger:SBSW:OSPI:CLR` on page 1654
`TRIGger:SBSW:OSPI:INVert` on page 1654
`TRIGger:SBSW:OSPI:RST` on page 1655


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame is "Data".

Remote command:
`TRIGger:SBSW:OSPI:FRENable` on page 1655
`TRIGger:SBSW:OSPI:FRAMe<fr>:ENABle` on page 1655

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

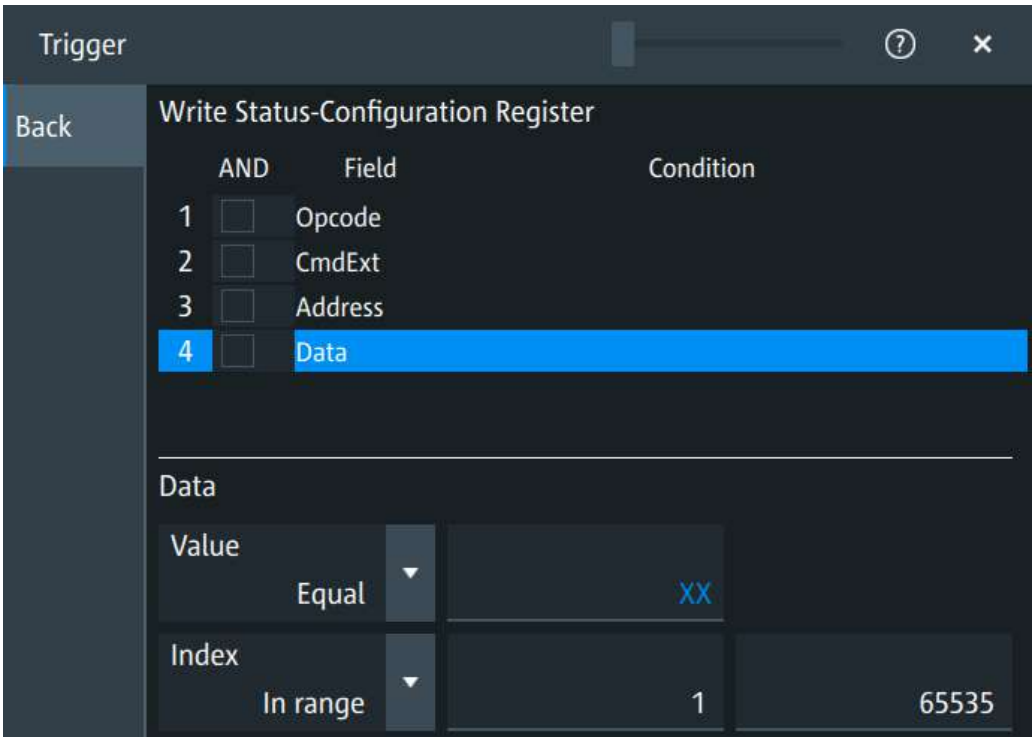

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Opcode", "Addr", "Alt", "Dummy" and "Data".

Remote command:
`TRIGger:SBSW:OSPI:FIENable` on page 1657
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:ENABle` on page 1657

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:OSPI:BIT` on page 1655
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:BIT` on page 1655

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:OSPI:DMAX` on page 1656
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMAX` on page 1656
`TRIGger:SBSW:OSPI:DMIN` on page 1656
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMIN` on page 1656
`TRIGger:SBSW:OSPI:DOPerator` on page 1656
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DOPerator` on page 1656

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:OSPI:IMAX` on page 1657
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMAX` on page 1657
`TRIGger:SBSW:OSPI:IMIN` on page 1658
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMIN` on page 1658
`TRIGger:SBSW:OSPI:IOPerator` on page 1658
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IOPerator` on page 1658

Error type
Enables triggering on the selected error type.

The following error types are available: "Length error" and "Opcode error".

Remote command:
`TRIGger:SBSW:OSPI:ERENable` on page 1658
`TRIGger:SBSW:OSPI:ERRor<m>:ENABle` on page 1658

14.4.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.4.7 OCTO-SPI decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

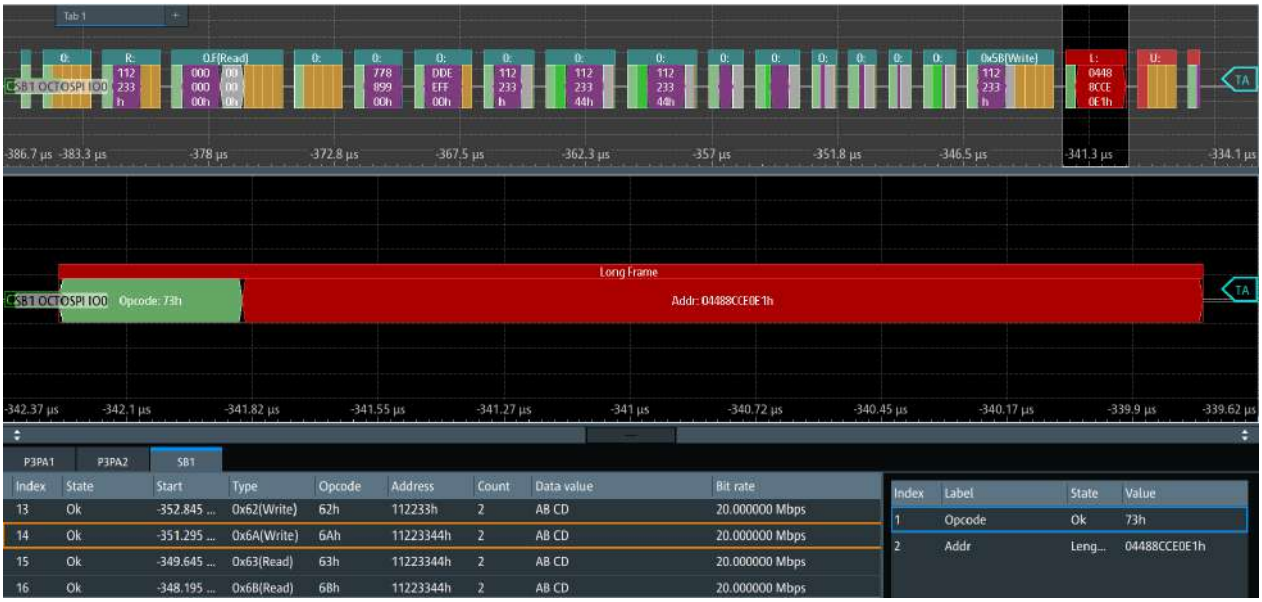


Figure 14-13: Decoded OCTO-SPI signal

The decode results table contains information about all decoded frames.

Table 14-5: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Time of frame start
Type	Frame type
Opcode	Operation code value
Address	Address value
Count	Number of words in the frame
Data value	Value of the data frame. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-6: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.4.5, "Decode results", on page 1659.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example OCTO-SPI export file

```
Index,Start,Stop,State,Type,Command,CommandExt,Address,Count,Bit rate
1,-0.000385847,-0.000385447,'OK','0.A',00h,---,---,---,20000000
2,-0.000384947,-0.000382945,'OK','0.B(Read)',FFh,---,---,4,20000000
3,-0.000382448,-0.00038004,'OK','Read Zero Latency',03h,---,112233h,2,20000000
4,-0.000379547,-0.000374945,'OK','0.F(Read)',01h,---,00000000h,4,20000000


Details frame 2
Index,Label,State,Value
1,'Data: 1','OK',01h
2,'Data: 2','OK',02h
3,'Data: 3','OK',03h
4,'Data: 4','OK',04h
```

14.5 I²C (IC electronics, option R&S MXO5-K510)

The Inter-Integrated Circuit is a simple, low-bandwidth, low-speed protocol used for communication between on-board devices, for example, in LCD and LED drivers, RAM, EEPROM, and others.

For basic information on I²C, you can also refer to a video, available on the Rohde & Schwarz YouTube channel: Understanding I2C.

Requirements

For performing I²C decode measurements, you need the following:

- MXO 5 with 2 available channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Option R&S MXO5-K510

- About the I²C protocol 612
- I²C configuration 614
- I²C filter 617
- I2C format configuration 620
- I²C hardware trigger 626
- I²C software trigger 629
- Measure 632
- I²C decode results 633

14.5.1 About the I²C protocol

This section provides an overview of protocol characteristics, data format, address types and trigger possibilities. For detailed information, read the "I2C-bus specification and user manual" available on the NXP manuals webpage at http://www.nxp.com/.

I²C characteristics

The main characteristics of I²C are:

- Two-wire design: serial clock (SCL) and serial data (SDA) lines
- Controller/ target communication: the controller generates the clock and addresses the targets. Targets receive the address and the clock. Both controller and targets can transmit and receive data.
- Addressing scheme: each target device is addressable by a unique address. Multiple target devices can be linked together and can be addressed by the same controller.
- Read/write bit: specifies if the controller reads (=1) or writes (=0) the data.
- Acknowledge: takes place after every byte. The receiver of the address or data sends the acknowledge bit to the transmitter.

The MXO 5 supports all operating speed modes: high-speed, fast mode plus, fast mode, and standard mode.

Data transfer

The format of a simple I²C message (frame) with 7-bit addressing consists of the following parts:

- Start condition: a falling slope on SDA while SCL is high
- 7-bit address of the target device that is either written to or read from
- R/W bit: specifies if the data is written to or read from the target
- ACKnowledge bits: is issued by the receiver of the previous byte if the transfer was successful
  Exception: At read access, the controller terminates the data transmission with a NACK bit after the last byte.
- Data: several data bytes with an ACK bit after every byte
- Stop condition: a rising slope on SDA while SCL is high

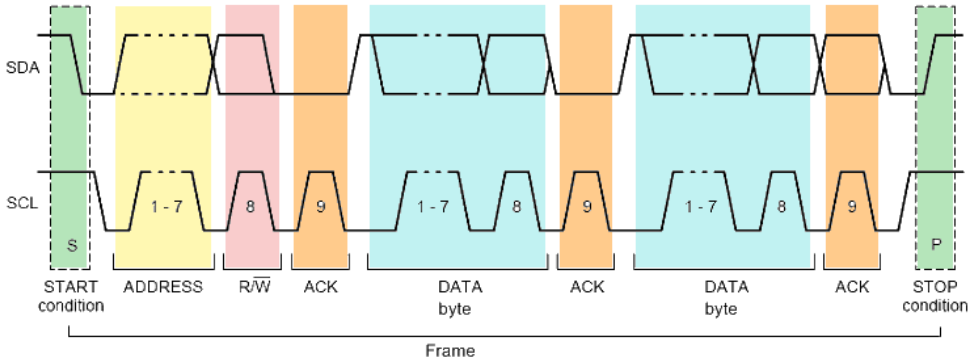


Figure 14-14: I2C write access with a 7-bit address

Address types: 7-bit and 10-bit

Target addresses can be 7 bits or 10 bits long. A 7-bit address requires 1 byte, 7 bits for the address followed by the R/W bit.

A 10-bit address for write access requires 2 bytes: the first byte starts with the reserved sequence 11110, followed by the two MSB of the address and the write bit. The second byte contains the remaining 8 LSB of the address. The target acknowledges each address byte.



Figure 14-15: 10-bit address, write access

A 10-bit address for read access requires 3 bytes. The first 2 bytes are identical to the write access address. The third byte repeats the address bits of the first byte and sets the read bit.




Figure 14-16: 10-bit address, read access

Trigger

The MXO 5 can trigger on various parts of I²C messages. You must connect the data and clock lines to the input channels; triggering on math and reference waveforms is not possible.


You can trigger on:

- Start or stop condition
- Repeated start condition
- Transfer direction (read or write)
- Bytes with missing acknowledge bit
- Specific data pattern in the message

14.5.2 I²C configuration

14.5.2.1 I²C configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Setup".

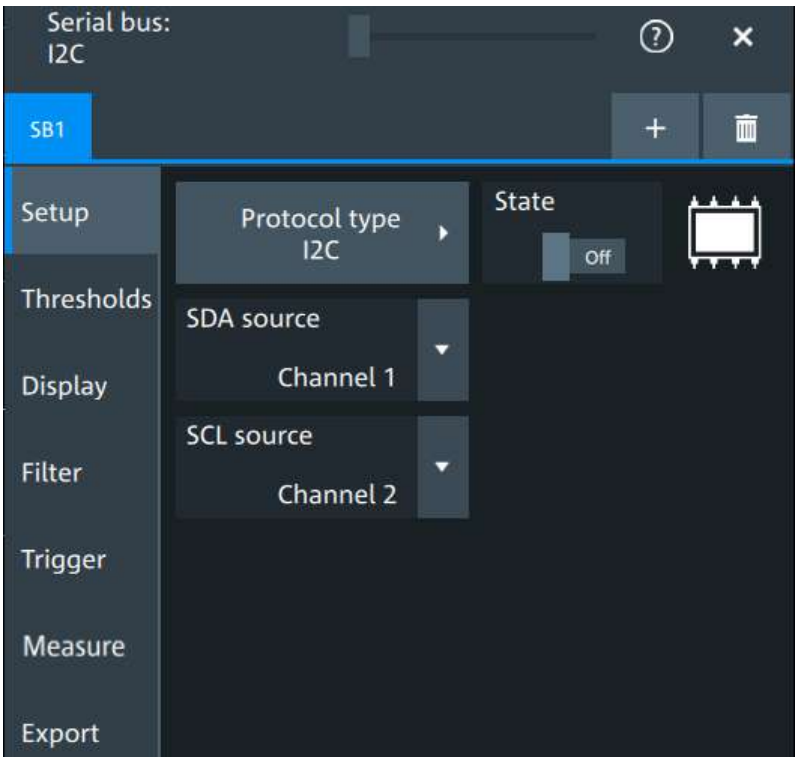

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

SDA source
Sets the source channel to which the data line is connected.


Remote command:
`SBUS<sb>:I2C:SDA:SOURce` on page 1668

SCL source
Selects the source channel to which the clock line is connected.

Remote command:
`SBUS<sb>:I2C:SCL:SOURce` on page 1667

14.5.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Thresholds".

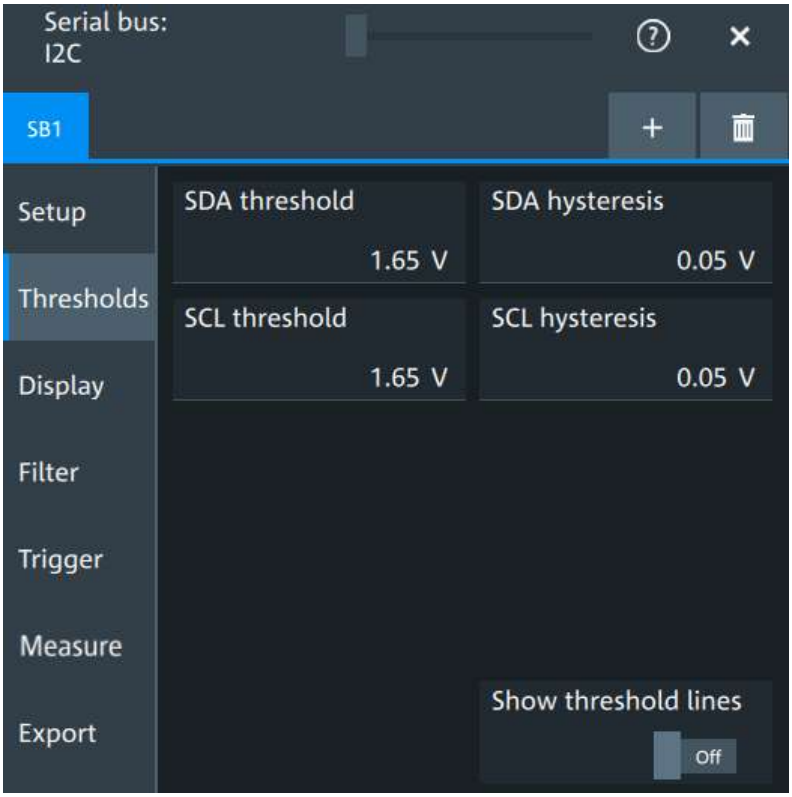

SDA/SCL threshold, SDA/SCL hysteresis
Set the threshold for the SDA and SCL channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis for each channel.

Remote command:
`SBUS<sb>:I2C:SCL:THReshold` on page 1667
`SBUS<sb>:I2C:SDA:THReshold` on page 1668
`SBUS<sb>:I2C:SCL:HYSTeresis` on page 1667
`SBUS<sb>:I2C:SDA:HYSTeresis` on page 1667

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566

14.5.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.


See "Decode layer" on page 541.

Data format
See "Data format" on page 541.

Zoom coupling
See "Zoom coupling" on page 542.

14.5.3 I²C filter

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Filter" tab

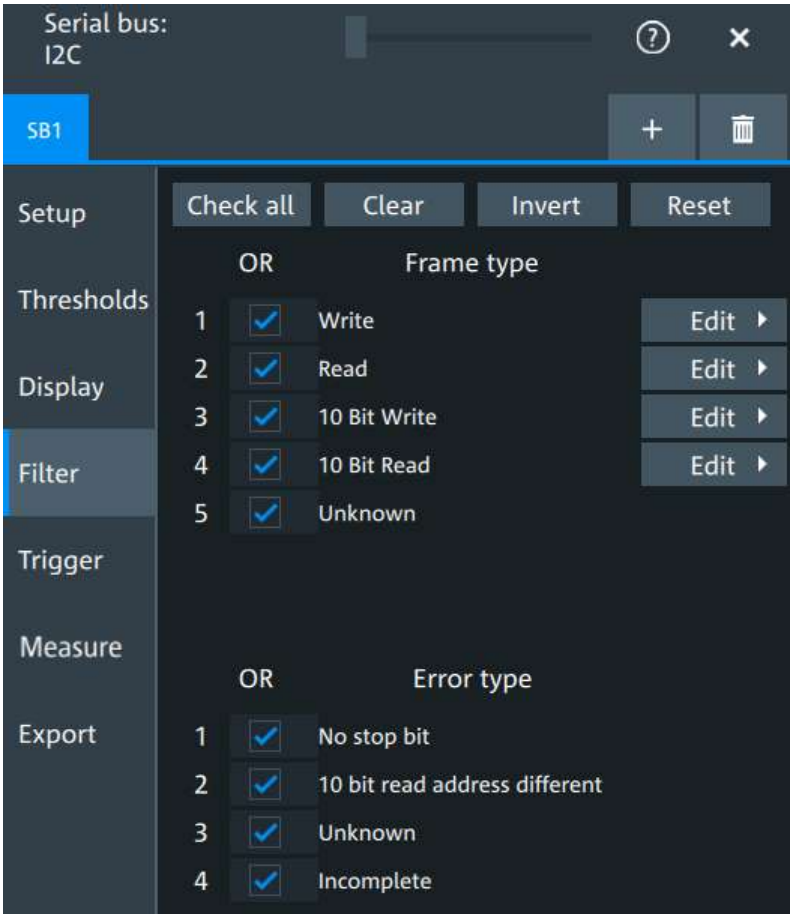

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all"	Enables the filter for all available frames and error types.
"Clear"	Disables the filter for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types.


Remote command:
`SBUS<sb>:I2C:FILTer:CHKall` on page 1669
`SBUS<sb>:I2C:FILTer:CLR` on page 1670
`SBUS<sb>:I2C:FILTer:INVert` on page 1670
`SBUS<sb>:I2C:FILTer:RST` on page 1670

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
`SBUS<sb>:I2C:FILTer:FRENable` on page 1670
`SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle` on page 1670

Edit
Opens a dialog to define the details of the selected frame.

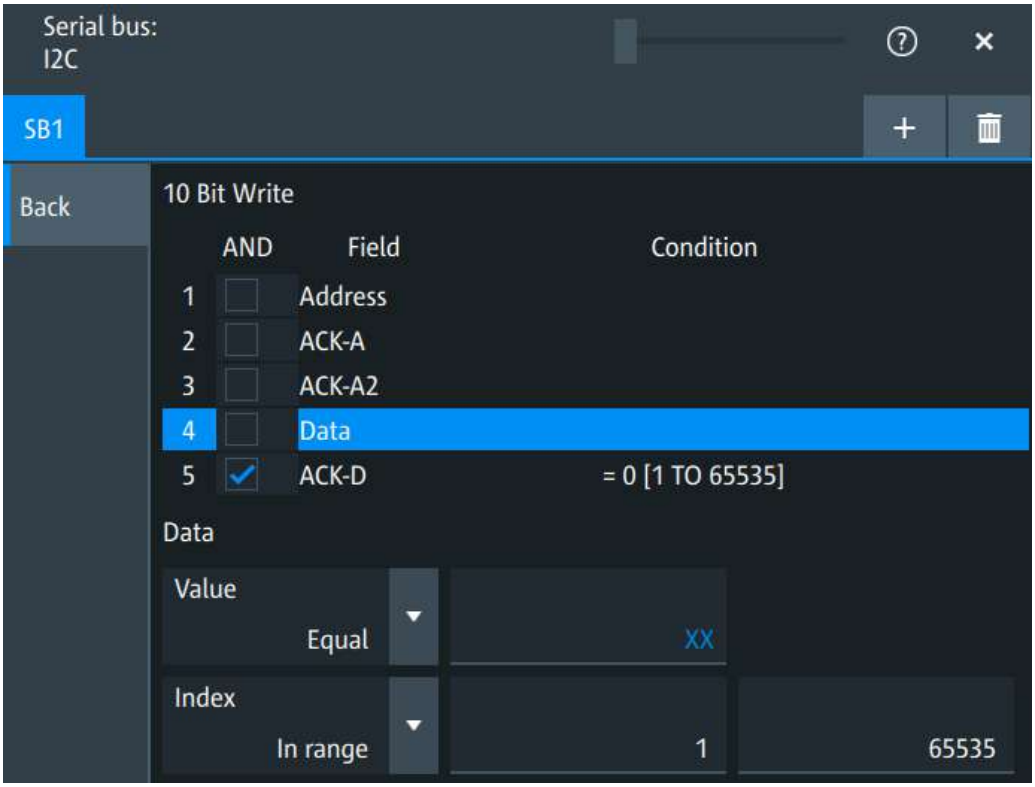

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Address", "R/W", "ACK_A", "ACK_A2", "Data", and "ACK_D".

Remote command:
`SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1674
`SBUS<sb>:I2C:FILTer:FIENable` on page 1674

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1673

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 1671
`SBUS<sb>:I2C:FILTer:DMAX` on page 1671
`SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 1671
`SBUS<sb>:I2C:FILTer:DMIN` on page 1671
`SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 1671
`SBUS<sb>:I2C:FILTer:DOPerator` on page 1671

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1672
SBUS<sb>:I2C:FILTer:IMAX on page 1672
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1673
SBUS<sb>:I2C:FILTer:IMIN on page 1673
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1673
SBUS<sb>:I2C:FILTer:IOPerator on page 1673

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:I2C:FILTer:ERENable on page 1672
SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle on page 1672

14.5.4 I2C format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:I2C:FORMat:SELect on page 1675

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

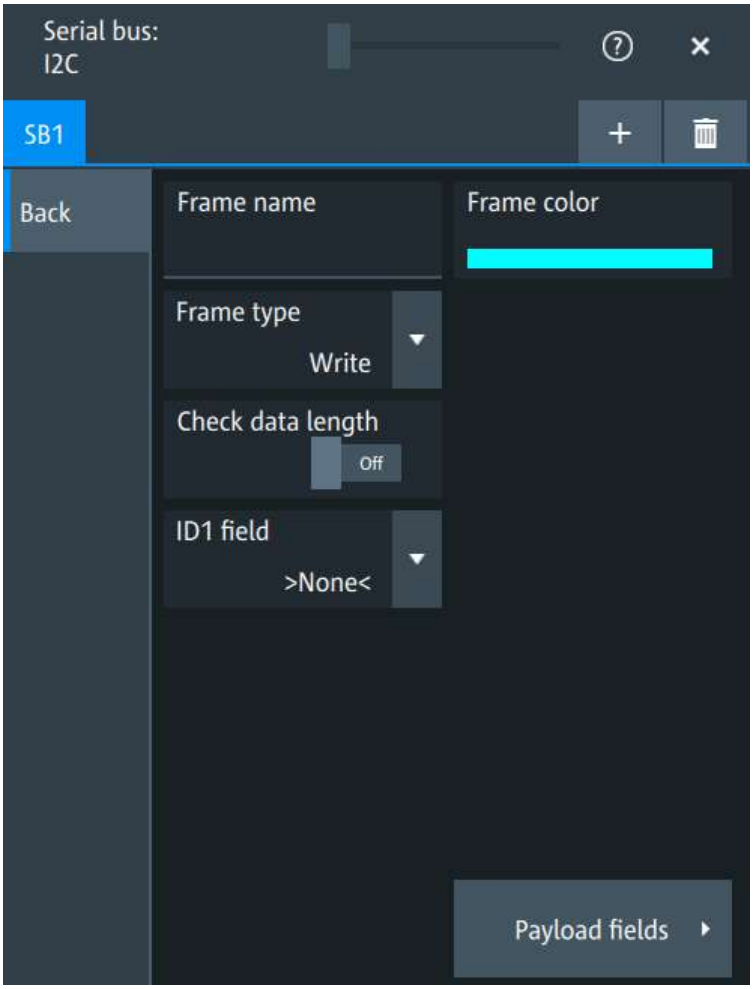

Remote command:
SBUS<sb>:I2C:FORMat:ADDFrame on page 1675

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:I2C:FORMat:CLR on page 1676
SBUS<sb>:I2C:FORMat:FCOunt? on page 1676

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:I2C:FORMat:LOAD on page 1675

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:I2C:FORMat:SAVE on page 1676

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:NAME on page 1677

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:COLor on page 1677

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:TYPE on page 1677

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENCheck on page 1678

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENValue on page 1678

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Field on page 1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Field on page 1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Field on page 1678


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Value on page 1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Value on page 1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Value on page 1679

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

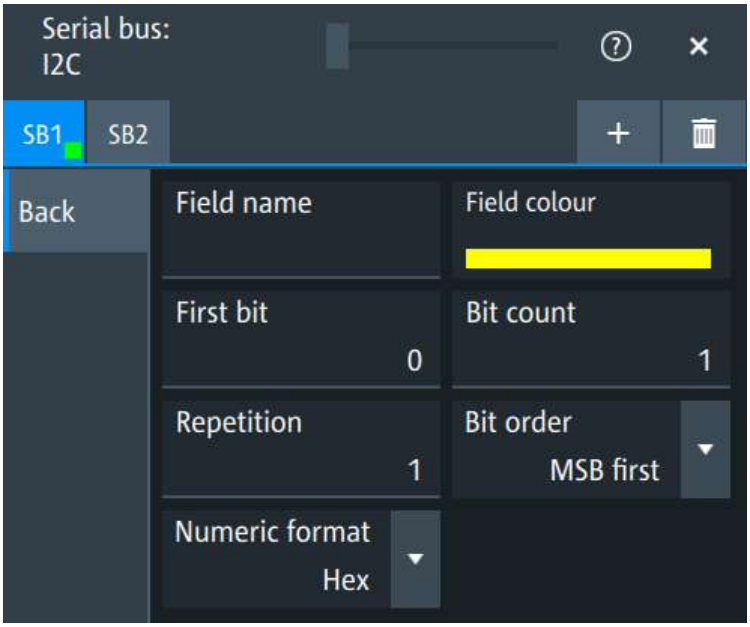

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ADDField on page 1676

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1679

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1679

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1680

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 1680

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 1680

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1681

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1681

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1682

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1682

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1683

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1683

Parameter A,B
Defines the parameters of the linear function.


- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1684
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1684

14.5.5 I²C hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Trigger" tab > "Setup Hardware Trigger"

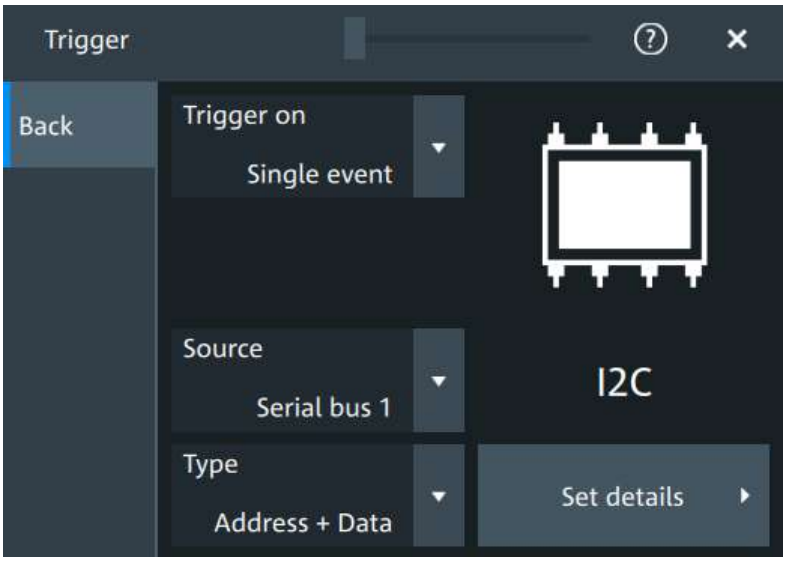

Type
Selects the trigger type for I²C analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

Remote command:
TRIGger:SBHW:I2C:TYPE on page 1684


Start ← Type
Sets the trigger to the start of the message. The start condition is a falling edge on SDA while SCL is high. The trigger instant is the falling edge of the SDA line.

You can change the SDA and SCL lines here if necessary.

Repeated start ← Type
Sets the trigger to a repeated start - when the start condition occurs without previous stop condition. Repeated start conditions occur when a controller exchanges multiple messages with a target device without releasing the bus.

Stop ← Type
Sets the trigger to the end of the message. The stop condition is a rising slope on SDA while SCL is high.


No Ack ← Type
Missing acknowledge bit: the instrument triggers if the data line remains HIGH during the clock pulse following a transmitted byte.

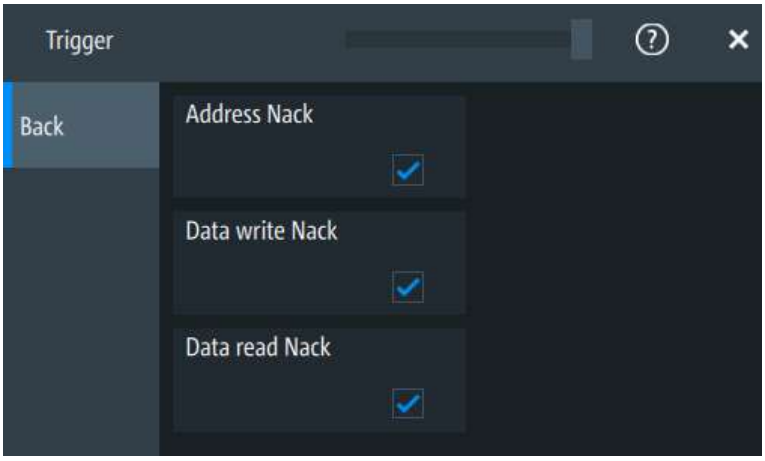

Address ← Type
Sets the trigger to one specific address condition or a combination of address conditions. The trigger time is the falling clock edge of the acknowledge bit after the address.



Data ← Type
Sets the trigger to one specific data condition or a combination of address conditions.

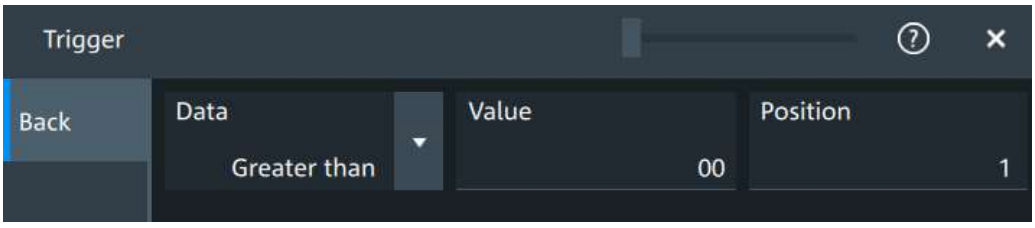

Address and data ← Type
Sets the trigger to a combination of address and data condition.



No Ack conditions
Selects which missing acknowledge bits is detected if the trigger type is set to "No Ack".

"Address Nack"
No secondary recognizes the address.

"Data write Nack"
The addressed secondary does not accept the data.

"Data read Nack"
Marks the end of the read process when the primary reads data from the secondary. This Nack is sent according to the protocol definition, it is not an error.

Remote command:
`TRIGger:SBHW:I2C:ADNack` on page 1686
`TRIGger:SBHW:I2C:DWNack` on page 1688
`TRIGger:SBHW:I2C:DRNack` on page 1687

Address type
Sets the address length to be triggered on: 7 bit or 10 bit.

Remote command:
`TRIGger:SBHW:I2C:AMODe` on page 1686

R/W bit
Toggles the trigger condition between read and write access of the primary. Select "Either" if the transfer direction is not relevant for the trigger condition.

Remote command:
`TRIGger:SBHW:I2C:ACCess` on page 1685

Address
The trigger address setup consists of a comparison condition and one or two address patterns.

Defines the bit pattern of the secondary device address. The length of the entry is adjusted to the selected address type.

"Condition" Sets the comparison condition to a specific value or a range.

"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger:SBHW:I2C:ADDRess` on page 1686
`TRIGger:SBHW:I2C:ADDTo` on page 1686

Data
Specifies the trigger conditions for the data bit pattern.

"Condition" Sets the comparison condition to a specific value or a range.

"Value" Specifies the value or sets the start value of a range.
Enter the bytes in msb first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

Remote command:
`TRIGger:SBHW:I2C:DCONdition` on page 1687
`TRIGger:SBHW:I2C:DMIN` on page 1687

Position
Sets the number of data bytes to be skipped after the address.

Remote command:
`TRIGger:SBHW:I2C:DPOSition` on page 1687


14.5.6 I²C software trigger

14.5.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.5.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger"

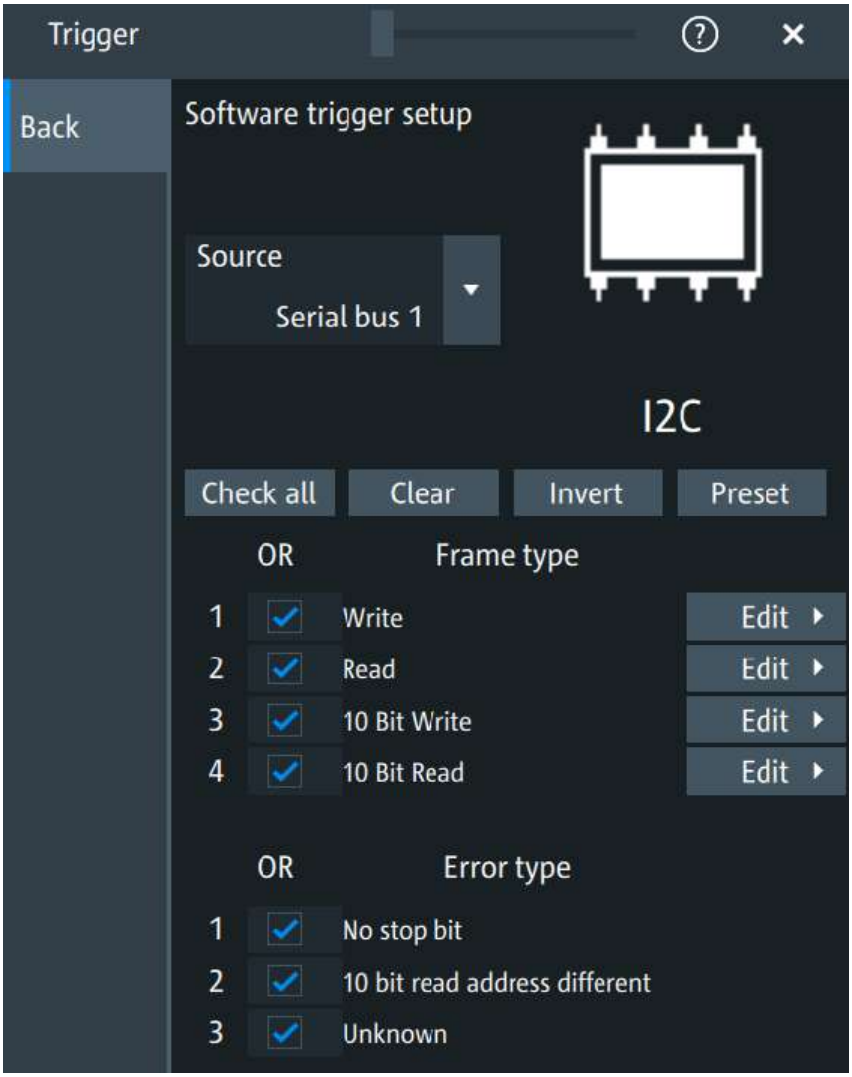

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:I2C:CHKall` on page 1689
`TRIGger:SBSW:I2C:CLR` on page 1689

TRIGger:SBSW:I2C:INVert on page 1689
TRIGger:SBSW:I2C:RST on page 1689


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Write", "Read", "10 Bit Write", "10 Bit Read".

Remote command:
TRIGger:SBSW:I2C:FRENable on page 1689
TRIGger:SBSW:I2C:FRAMe<fr>:ENABle on page 1689

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

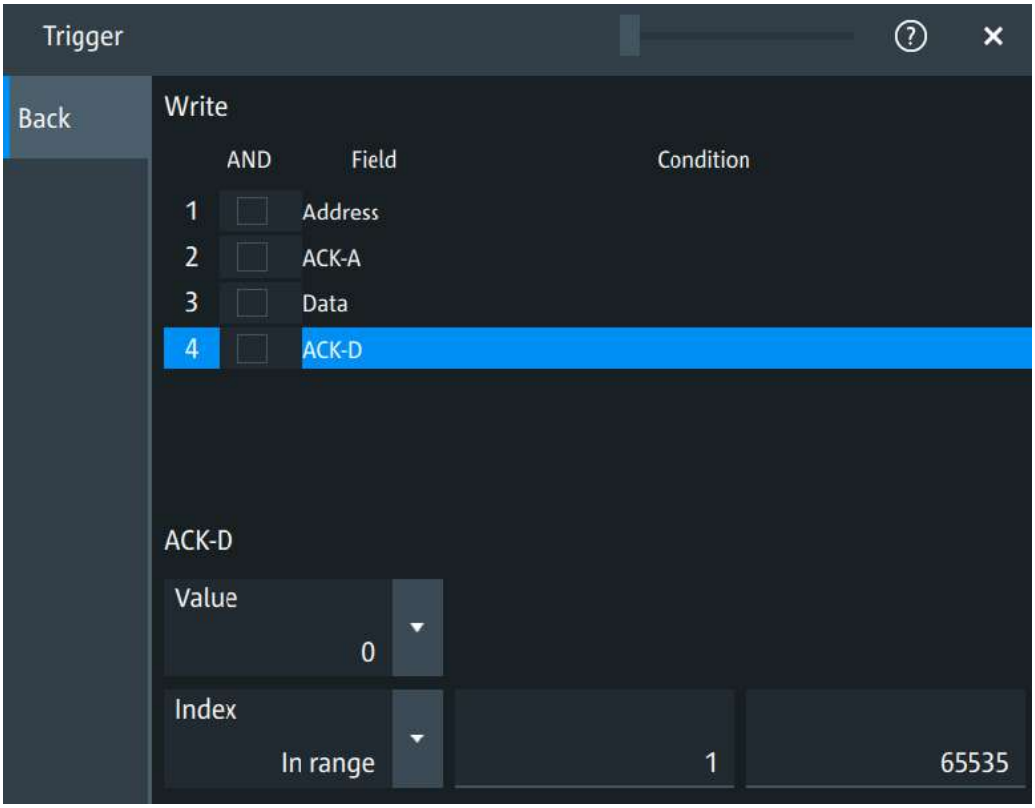

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "Address", "ACK-A", "ACK-A2", "Data", "ACK-D".

Remote command:
TRIGger:SBSW:I2C:FIENable on page 1691
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:ENABle on page 1691

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:I2C:BIT on page 1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:BIT on page 1690

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:I2C:DMAX on page 1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMAX on page 1690
TRIGger:SBSW:I2C:DMIN on page 1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMIN on page 1690
TRIGger:SBSW:I2C:DOPerator on page 1691
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator on page 1691

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:I2C:IMAX on page 1692
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMAX on page 1692
TRIGger:SBSW:I2C:IMIN on page 1692
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMIN on page 1692
TRIGger:SBSW:I2C:IOPerator on page 1692
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator on page 1692

Error type
Enables triggering on the selected error type.

Remote command:
TRIGger:SBSW:I2C:ERENable on page 1693
TRIGger:SBSW:I2C:ERRor<m>:ENABle on page 1693

14.5.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.5.8 I²C decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

For more information on decoding I3C, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding I2C with MXO Series Oscilloscope.

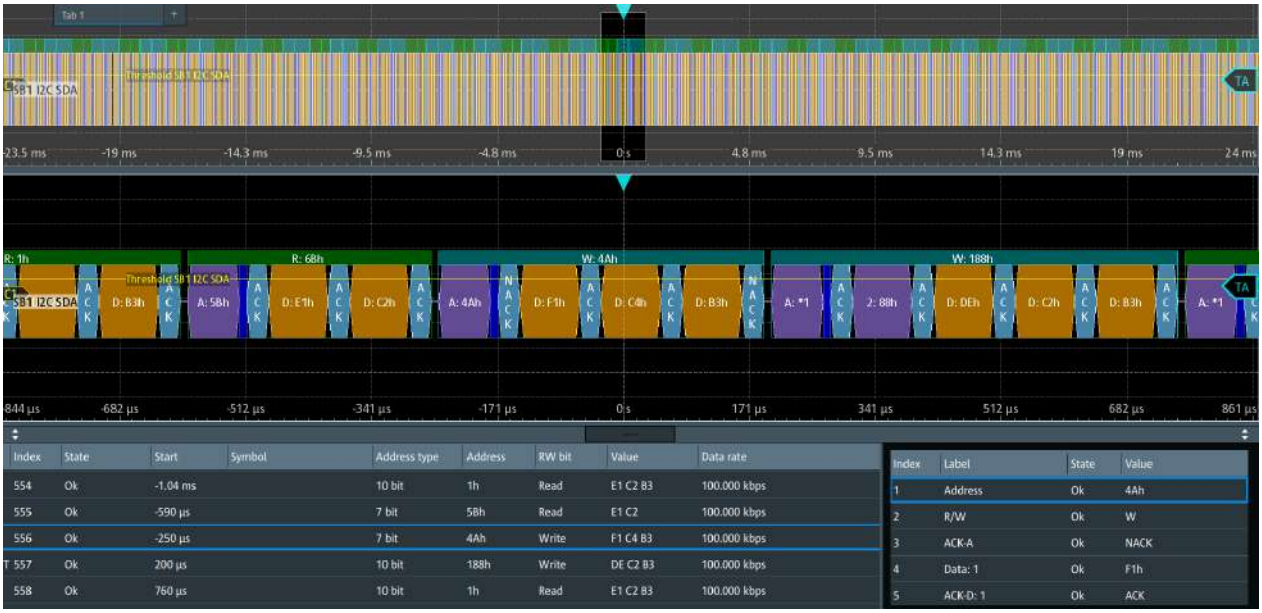


Figure 14-17: Decoded I2C signal

The decode results table contains information about all decoded frames.

Table 14-7: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of frame start
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Address type	Address length, 7 bit or 10 bit
Address	Hexadecimal value of the address
RW bit	Value of the read/write bit
Value	The actual data payload values. Select the data format in the "Display" tab.
Data rate	Value of the data rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-8: Content of the frame details table

Item	Description
Index	Number of the decoded field
Label	Label (name) of each word of the data field
State	State of each word of the data field, for example "OK" or "Incomplete"
Value	Value of each word of the data field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.5.6, "Decode results", on page 1694.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example of an I²C export file

```
Index,Start,Stop,State,Address type,Address value,R/W bit,Bit rate
1,-0.25,-0.24945,'OK','BIT10',188h,'WRIT',100000
2,-0.24944,-0.249,'OK','BIT10',1h,'READ',100000
3,-0.24899,-0.24866,'OK','BIT7',5Bh,'READ',100000
4,-0.24865,-0.24821,'OK','BIT7',4Ah,'WRIT',100000
5,-0.2482,-0.24765,'OK','BIT10',188h,'WRIT',100000
6,-0.24764,-0.2472,'OK','BIT10',1h,'READ',100000

Details frame 1
Index,Formatted data,Ack bit start,Ack bit
1,DEh,-0.2497,'ACK'
2,C2h,-0.24959,'ACK'
3,B3h,-0.24948,'ACK'

Details frame 2
Index,Formatted data,Ack bit start,Ack bit
1,E1h,-0.24925,'ACK'
2,C2h,-0.24914,'ACK'
3,B3h,-0.24903,'ACK'

Details frame 3
Index,Formatted data,Ack bit start,Ack bit
```

```
1,E1h,-0.2488,'ACK'
2,C2h,-0.24869,'ACK'

Details frame 4
Index,Formatted data,Ack bit start,Ack bit
1,F1h,-0.24846,'ACK'
2,C4h,-0.24835,'ACK'
3,B3h,-0.24824,'NACK'

Details frame 5
Index,Formatted data,Ack bit start,Ack bit
1,DEh,-0.2479,'ACK'
2,C2h,-0.24779,'ACK'
3,B3h,-0.24768,'ACK'
```

14.6 I3C (IC electronics, option R&S MXO5-K550)

The Improved Inter-Integrated Circuit (I3C) is a low-speed MIPI® protocol used for communication between chips and signaling patterns by a 2-wire serial data bus.

Requirements

For performing I3C decode measurements, you need the following:

- MXO 5 with 2 available channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Option R&S MXO5-K550

- About the I3C protocol 635
- I3C configuration 637
- I3C filter 640
- I3C format configuration 642
- I3C software trigger 648
- Measure 651
- I3C decode results 651

14.6.1 About the I3C protocol

This section provides an overview of protocol characteristics, data format, address types and trigger possibilities. For detailed information, read the "MIPI I3C and I3C Basic" specifications, available at www.mipi.org/groups/I3C.

I3C characteristics

The Improved Inter-Integrated Circuit (I3C) protocol is a high-speed, low-power, and low-latency interface standard. Typical applications are mobile devices, IoT devices and automotive systems, for example. It incorporates the capabilities of I²C and SPI, while offering several advantages over these protocols.

The main characteristics of I3C are:

- Significantly lower energy consumption and higher data rate than I²C, but backward compatible with it.
- 2-wire operation with a serial clock line (SCL) and a serial data line (SDA) simplifies data exchange at low pin count and reduced signal paths.
- Supports multiple devices on the same bus, enabling a multi-drop topology.
- Optional messaging modes (HDR-DDR or HDR ternary) with high data rate up to 33.33 Mbit/s.
- In-band interrupt support without requiring a separate interrupt line.
- Hot-join support for dynamic device attachment and detachment.
- Synchronous timing support and asynchronous time stamping.
- Broadcast transactions allow sending commands or data to all devices on the bus simultaneously.

The MXO 5 supports all operating speed modes: legacy I²C modes (see I²C characteristics), SDR standard mode, DDR mode and ternary mode.

Data transfer

An I3C transaction consists of the following phases:

- **Start condition**: The controlling device sends a start condition to initiate the transaction.
- **Device addressing**: The controlling device sends the address of the responding device to select the target device.
- **Command**: The controlling device sends a command to the responding device, specifying the operation to be performed (e.g., read or write).
- **Data transfer**: The responding device responds with the requested data or sends data to the controlling device.
- **Stop condition**: The controlling device sends a stop condition to terminate the transaction.

The address format is the same as in I²C: 7 bits of address, 1 bit of RnW, and 1 bit of ACK/NACK. See Section 14.5.1, "About the I²C protocol", on page 612.

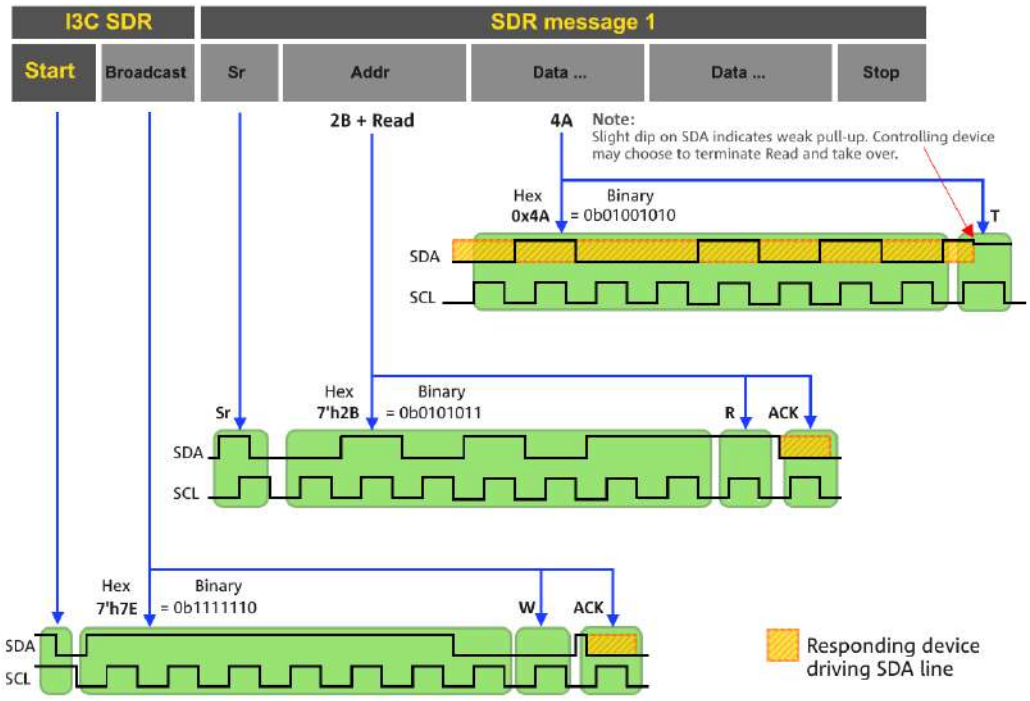


Figure 14-18: Example of using I3C coding SDR

Trigger

The MXO 5 can trigger on various parts of I3C messages. You must connect the data and clock lines to the input channels. Triggering on math and reference waveforms is not possible.


You can trigger on:

- Start or stop condition
- Repeated start condition
- Transfer direction (read or write)
- Bytes with missing acknowledge bit
- Specific target address or address range
- Specific data pattern in the message

14.6.2 I3C configuration

14.6.2.1 I3C configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "I3C" > "Setup".

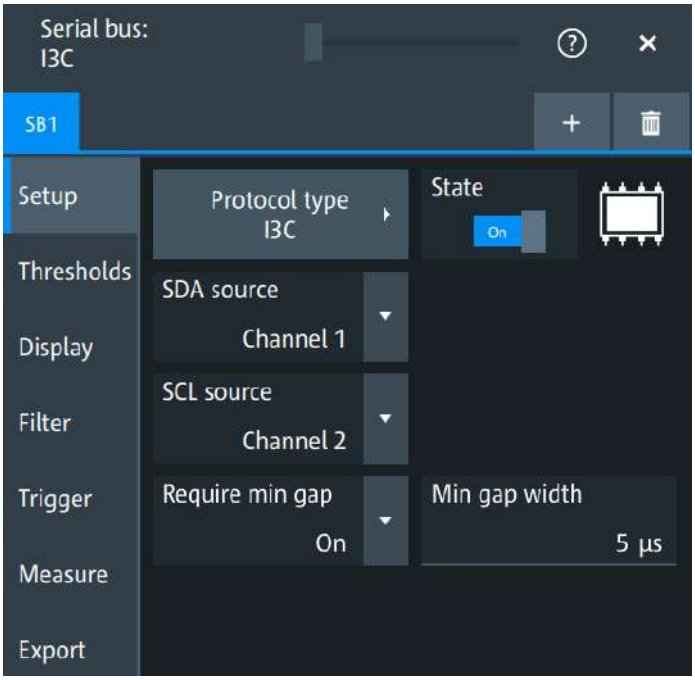

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

SDA source
Sets the source channel to which the data line is connected.

Remote command:
`SBUS<sb>:I3C:SDA:SOURce` on page 1703

SCL source
Selects the source channel to which the clock line is connected.

Remote command:
`SBUS<sb>:I3C:SCL:SOURce` on page 1703

Require min gap
If enabled, the application requires a minimum gap on the left-hand side of the screen before the 1st decoded frame. Enabling this feature can prevent errors due to truncation of an HDR-type frame.


Remote command:
`SBUS<sb>:I3C:MINGap:SELect` on page 1704

Min gap width
Specifies the minimum gap width in units of time of the Require min gap, if enabled.

Remote command:
`SBUS<sb>:I3C:MINGap:WIDTh` on page 1704

14.6.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Thresholds".

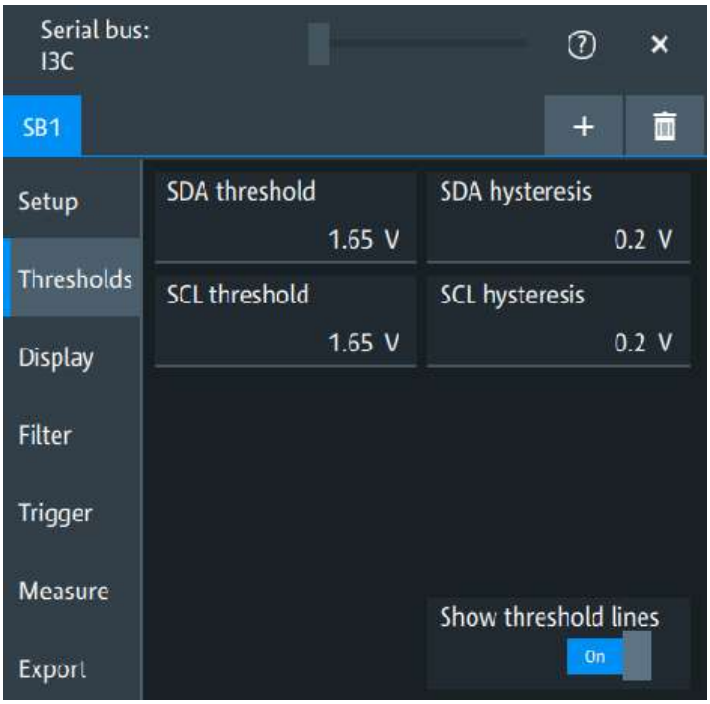

SDA/SCL threshold, SDA/SCL hysteresis
Set the threshold for the SDA and SCL channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis for each channel.

Remote command:
`SBUS<sb>:I3C:SCL:THReshold` on page 1703
`SBUS<sb>:I3C:SDA:THReshold` on page 1704
`SBUS<sb>:I3C:SCL:HYSTeresis` on page 1702
`SBUS<sb>:I3C:SDA:HYSTeresis` on page 1703

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.6.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.


See "Decode layer" on page 541.

Data format
See "Data format" on page 541.

Zoom coupling
See "Zoom coupling" on page 542.

14.6.3 I3C filter

Access: "Menu" > "Apps" > "Protocol" tab > "I3C" > "Filter" tab

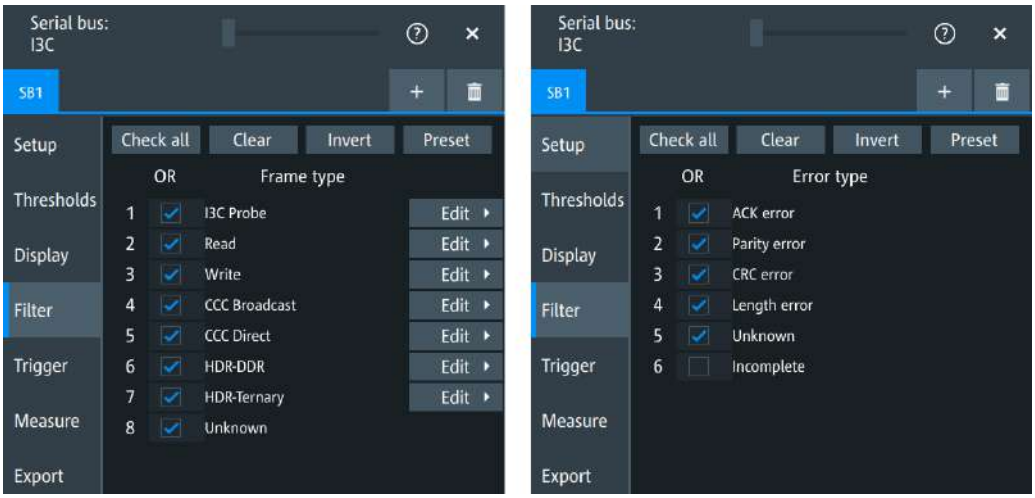

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.


Remote command:
`SBUS<sb>:I3C:FILTer:CHKall` on page 1706
`SBUS<sb>:I3C:FILTer:CLR` on page 1706
`SBUS<sb>:I3C:FILTer:INVert` on page 1706
`SBUS<sb>:I3C:FILTer:RST` on page 1706

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
`SBUS<sb>:I3C:FILTer:FRENable` on page 1707
`SBUS<sb>:I3C:FILTer:FRAMe<fr>:ENABle` on page 1707

Edit
Opens a dialog to define the details of the selected frame.

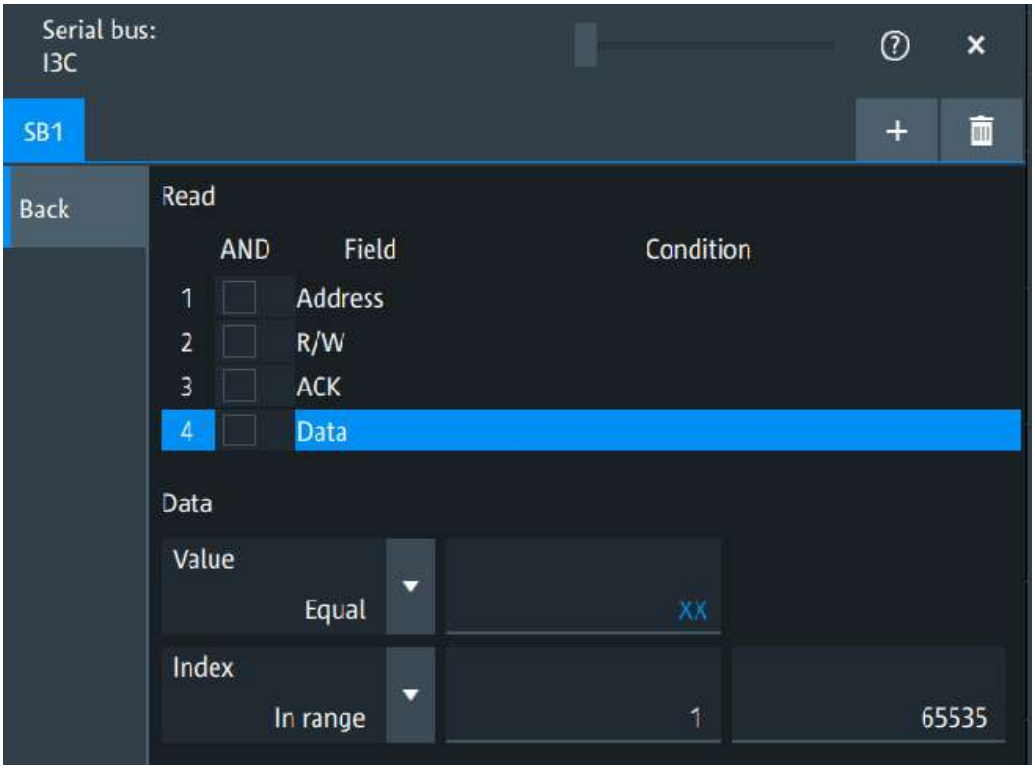

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "ACK", "Address", "CCC", "Command", "CRC", "Data", "Def Byte", "P", "R/W" and "Reserved".

Remote command:
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1710
SBUS<sb>:I3C:FILTer:FIENable on page 1710

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1710

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1707
SBUS<sb>:I3C:FILTer:DMAX on page 1707
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1707
SBUS<sb>:I3C:FILTer:DMIN on page 1707
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1708
SBUS<sb>:I3C:FILTer:DOPerator on page 1708

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1709
SBUS<sb>:I3C:FILTer:IMAX on page 1709
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1709
SBUS<sb>:I3C:FILTer:IMIN on page 1709
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1709
SBUS<sb>:I3C:FILTer:IOPerator on page 1709

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:I3C:FILTer:ERENable on page 1708
SBUS<sb>:I3C:FILTer:ERRor<n>:ENABle on page 1708

14.6.4 I3C format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "I3C" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:I3C:FORMat:SELect on page 1711

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

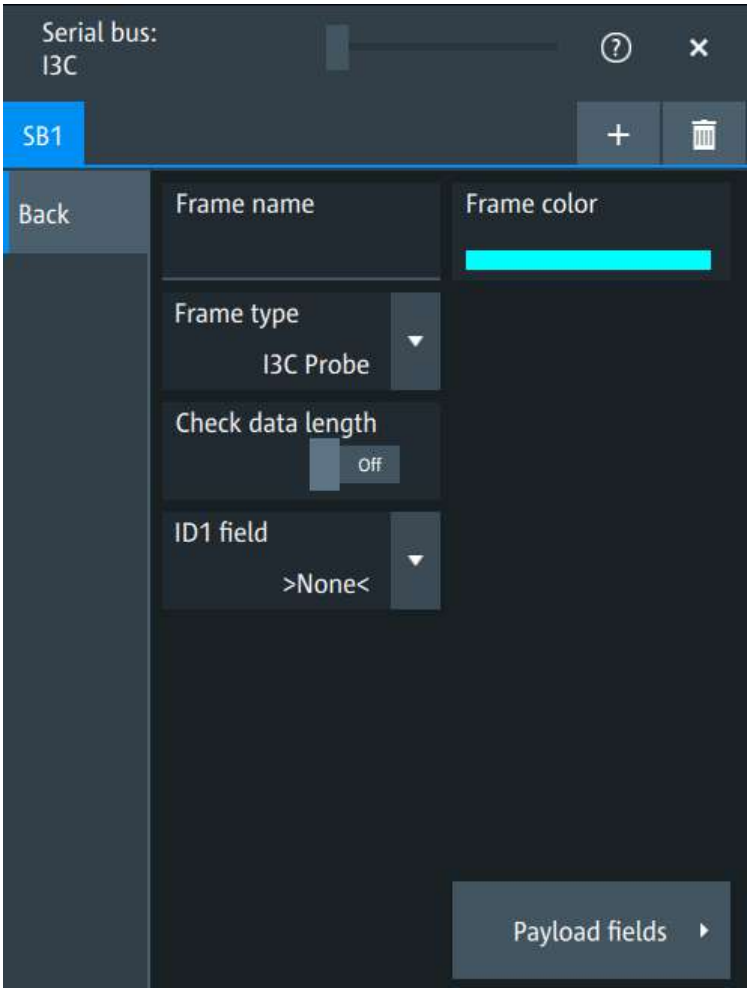

Remote command:
SBUS<sb>:I3C:FORMat:ADDFrame on page 1712

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:I3C:FORMat:CLR on page 1712
SBUS<sb>:I3C:FORMat:FCOunt? on page 1713

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:I3C:FORMat:LOAD on page 1712

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:I3C:FORMat:SAVE on page 1712

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:NAME on page 1713

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:COLor on page 1714

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:TYPE on page 1714

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENCheck on page 1714

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENValue on page 1715

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Field on page 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Field on page 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Field on page 1715


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Value on page 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Value on page 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Value on page 1715

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

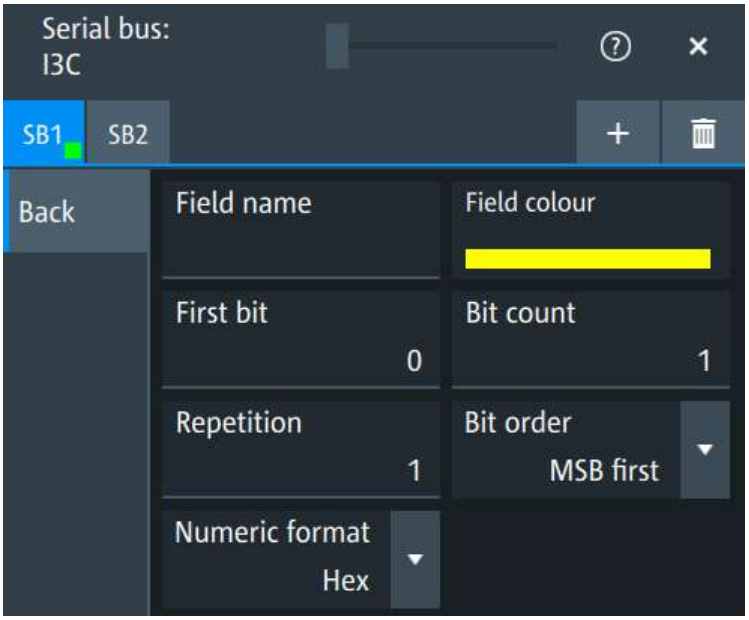

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ADDField on page 1713

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1716

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1716

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1716

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 1717

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 1717

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1717

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1718

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1718

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1719

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1719

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1720

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1720
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1720

14.6.5 I3C software trigger


14.6.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.6.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "I3C" > "Trigger" tab > "Setup SB Trigger"



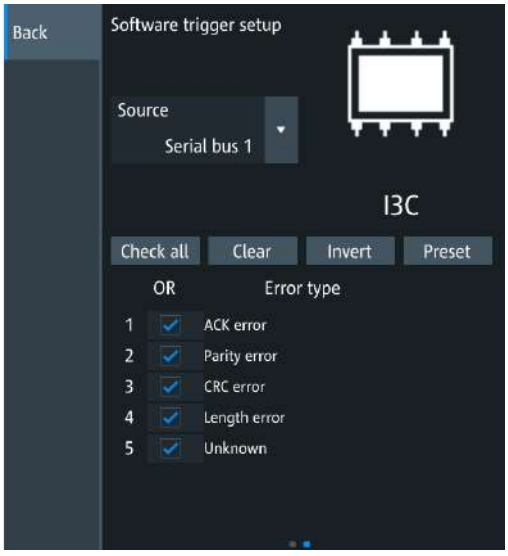

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:I3C:CHKall` on page 1721
`TRIGger:SBSW:I3C:CLR` on page 1721
`TRIGger:SBSW:I3C:INVert` on page 1722
`TRIGger:SBSW:I3C:RST` on page 1722


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "CCC Broadcast", "CCC Direct", "HDR-DDR", "HDR-Ternary", "I3C Probe", "Read" and "Write".

Remote command:
`TRIGger:SBSW:I3C:FRENable` on page 1722
`TRIGger:SBSW:I3C:FRAMe<fr>:ENABle` on page 1722

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

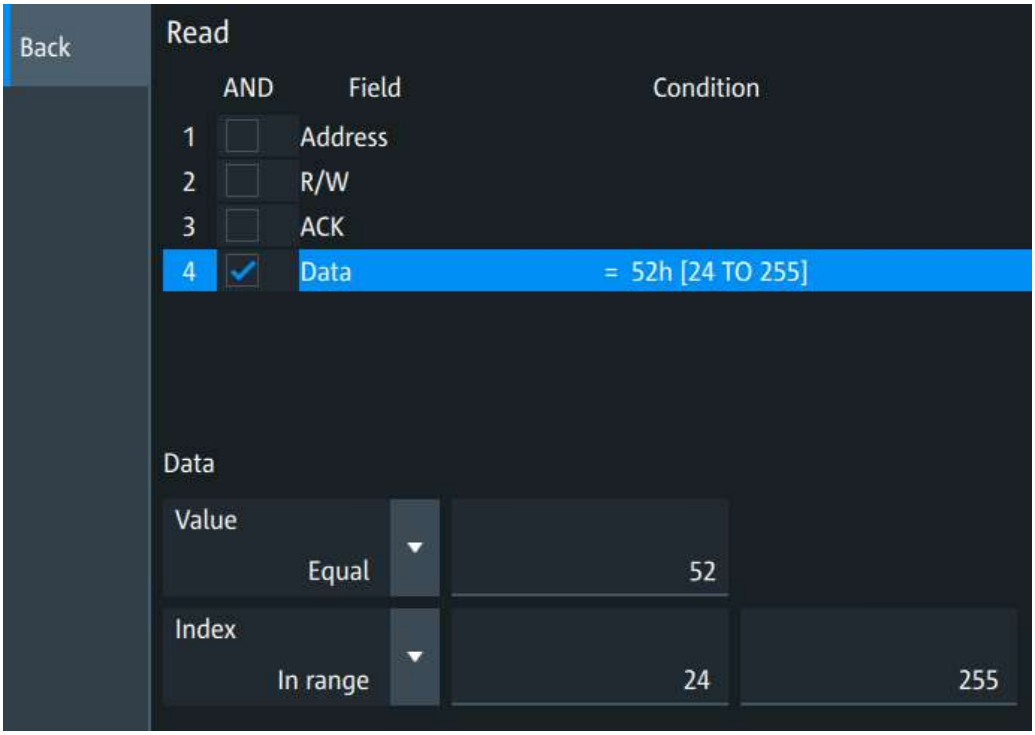

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "ACK", "Address", "CCC", "Command", "CRC", "Data", "Def Byte", "P", "R/W" and "Reserved".

Remote command:
`TRIGger:SBSW:I3C:FIENable` on page 1724
`TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:ENABle` on page 1724

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:I3C:BIT` on page 1722
`TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:BIT` on page 1722

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:I3C:DMAX` on page 1723
`TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMAX` on page 1723
`TRIGger:SBSW:I3C:DMIN` on page 1723
`TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMIN` on page 1723
`TRIGger:SBSW:I3C:DOPerator` on page 1723
`TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator` on page 1723

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:I3C:IMAX on page 1724
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMAX on page 1724
TRIGger:SBSW:I3C:IMIN on page 1725
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMIN on page 1725
TRIGger:SBSW:I3C:IOPerator on page 1725
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator on page 1725

Error type
Enables triggering on the selected error type.

Remote command:
TRIGger:SBSW:I3C:ERENable on page 1725
TRIGger:SBSW:I3C:ERRor<m>:ENABle on page 1725

14.6.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.6.7 I3C decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

For more information on decoding I3C, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding I2C with MXO Series Oscilloscope.

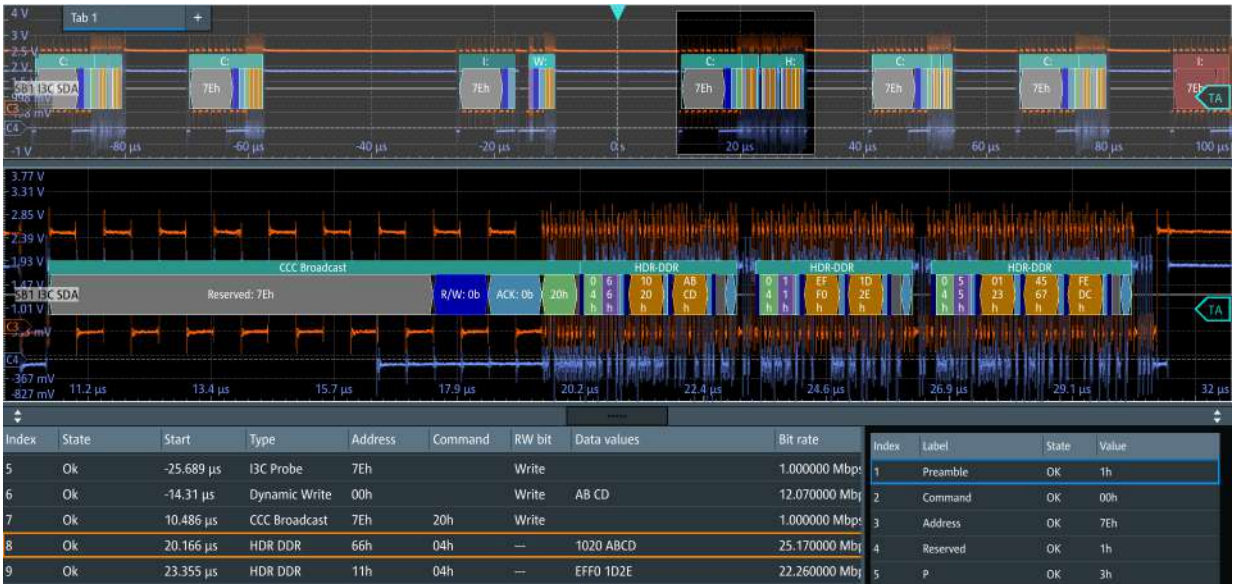


Figure 14-19: Decoded I3C signal

Purple = Address byte
Blue = R/W bit
Cyan = ACK bit
Red = NACK bit
Gold = Data byte
Turquoise = Write frame
Green = Read frame
Crimson red = Incomplete frame

The decode results table contains information about all decoded frames.

Table 14-9: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame. "Incomplete" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of frame start
Type	Frame type
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Address	Value of the address field of the frame, if available
Command	Value of the command field of the frame, if available
RW bit	Value of the read/write bit
Data values	The actual data payload values. Select the data format in the "Display" tab.
Bit rate	Calculated bit rate for this frame

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-10: Content of the frame details table

Item	Description
Index	Number of the decoded field
Label	Label (name) of each word of the data field
State	State of each word of the data field, for example "OK" or "Incomplete"
Value	Value of each word of the data field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.6.5, "Decode results", on page 1726.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example of an I3C export file

```
Index,Start,Stop,State,Type,Address,Command,RWBit,CRC,Bit-rate
1,-4.38003e-05,-3.19206e-05,'OK','BRDC',7Eh,00h,'WRIT',---,1000000
2,3.45864e-08,8.9946e-06,'OK','PROB',7Eh,---,'WRIT',---,1000000
3,1.14144e-05,1.54345e-05,'OK','WRIT',00h,---,'WRIT',---,12070000
4,3.62096e-05,4.58891e-05,'OK','BRDC',7Eh,20h,'WRIT',---,1000000
5,4.58891e-05,4.87292e-05,'OK','HDDR',66h,04h,---,05h,25170000
6,4.9079e-05,5.19291e-05,'OK','HDDR',11h,04h,---,1Fh,22270000
7,5.2279e-05,5.59291e-05,'OK','HDDR',55h,04h,---,1Bh,22280000

Details frame 1
Index,Label,State,Value
1,'Data: 1','OK',12h
2,'Data: 2','OK',34h
3,'Data: 3','OK',56h

Details frame 3
Index,Label,State,Value
1,'Data: 1','OK',ABh
2,'Data: 2','OK',CDh

Details frame 5
Index,Label,State,Value
```

```
1,'Data: 1','OK',1020h
2,'Data: 2','OK',ABCDh

Details frame 6
Index,Label,State,Value
1,'Data: 1','OK',EFF0h
2,'Data: 2','OK',1D2Eh

Details frame 7
Index,Label,State,Value
1,'Data: 1','OK',0123h
2,'Data: 2','OK',4567h
3,'Data: 3','OK',FEDCh
```

14.7 D-PHY (option R&S MXO5-K580)

The D-PHY is a specification developed by the Mobile Industry Processor Interface (MIPI) alliance as a standard for the communication of high-speed components, like cameras and displays, within mobile devices.

- D-PHY basics....654
- D-PHY configuration....655
- D-PHY filter....660
- D-PHY format configuration....663
- D-PHY software trigger....669
- D-PHY decode results....672

14.7.1 D-PHY basics

A D-PHY interface consists of one clock lane and up to four data lanes. The D-PHY data lanes have three operational modes:

- A high speed mode (HS): differential signal with a data rate of 80 Mbps to 1.5 GHz. This mode is used for the transmission of large volumes of information.
- A low power mode (LP): single-ended signal with a data rate < 10 Mbps. This mode is used for conserving power.
- An alternate low power mode (ALP): single-ended signal with a data rate < 10 Mbps. This mode is an alternative to LP and used for control commands and low-bandwidth data transmission.

D-PHY provides a framework for other protocols such as the Display Serial Interface (DSI) and Camera Serial Interface (CSI-2).

Supported frame types


- HS data: HS payload frame that carries user data on the HS channel.
- HS skew calibration: Calibration burst used to measure and correct timing skew between the transmitter and receiver on the HS channel.

- HS alternate calibration: Backup/calibration burst (alternative pattern) employed when the primary HS skew calibration fails or is unavailable.
- LP HS request: LP mode command that asks the remote node to switch into or acknowledge the HS mode.
- Escape mode: Special framing mode that allows the transmission of control symbols or error handling sequences that are otherwise interpreted as data.
- Turnaround: Short frame that signals the end of a transmission burst and grants the medium to the opposite direction (TX → RX).
- ALP control burst: Signaling sequence that carries control information in alternate low power mode.
- Long packet: Packet type defined at the higher-level protocols, CSI-2 and DSI, and not at the D-PHY layer. Its data field contains an arbitrary number of bytes.
- Short packet: Packet type defined at the higher-level protocols, CSI-2 and DSI, and not at the D-PHY layer. Its data field contains one byte.

14.7.2 D-PHY configuration

14.7.2.1 D-PHY configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "D-PHY" > "Setup".

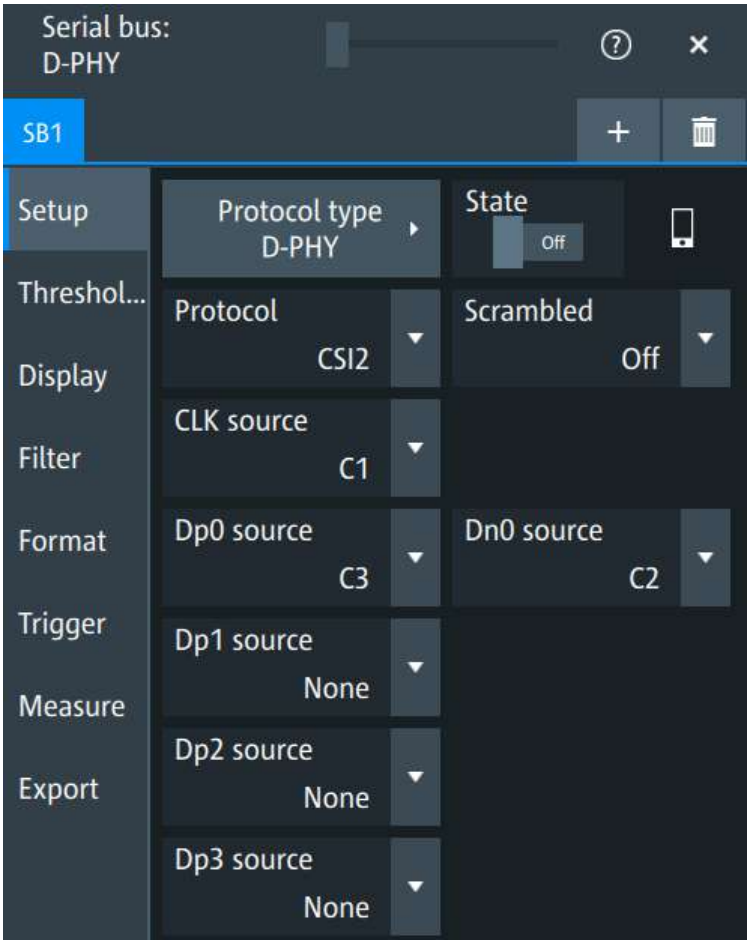

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

Protocol
Select which MIPI-based protocol is used.

- "DPHY": Raw MIPI D-PHY signalling, no higher-level framing.
- "CSI2": MIPI Camera Serial Interface2, D-PHY transport together with the standard CSI-2 packet format for image-sensor data.

- "DSI": MIPI Display Serial Interface, D-PHY transport together with the DSI command/video packet format for driving displays.

Remote command:
SBUS<sb>:DPHY:MODE on page 1736

Scrambled
Enables data scrambling that randomises the high-speed line bit-stream

This setting is only available, for "Protocol" = "CSI2" or "DSI".

Remote command:
SBUS<sb>:DPHY:SCRambled on page 1736

CLK source
Sets the source of the clock line.

Remote command:
SBUS<sb>:DPHY:CLK:SOURce on page 1737

Dp0, Dn0 source
Selects the source of the low-power data lines.


Remote command:
SBUS<sb>:DPHY:DPZero:SOURce on page 1738
SBUS<sb>:DPHY:DNZero:SOURce on page 1738

DP<n> source
Selects the source of the high-speed data lines.

Remote command:
SBUS<sb>:DPHY:DPONe:SOURce on page 1740
SBUS<sb>:DPHY:DPTWo:SOURce on page 1740
SBUS<sb>:DPHY:DPTHree:SOURce on page 1740

14.7.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Thresholds".

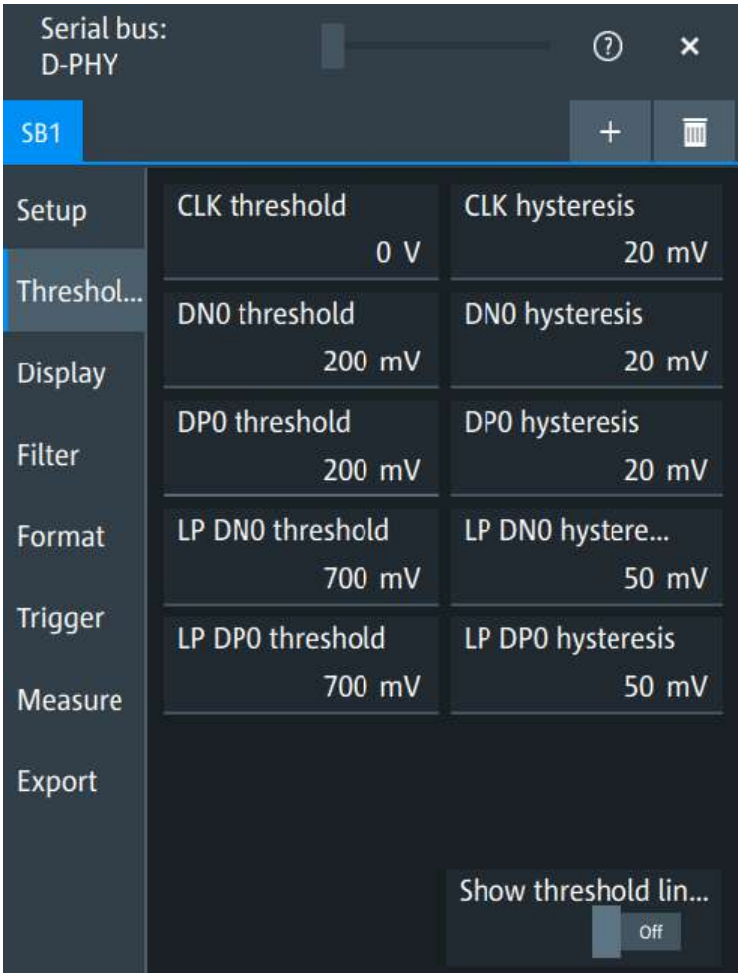

CLK threshold, CLK hysteresis
Sets the threshold for the clock line. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:DPHY:CLK:THReshold` on page 1737
`SBUS<sb>:DPHY:CLK:HYSTeresis` on page 1737

Dp0, Dn0 threshold, Dp0, Dn0 hysteresis
Sets the threshold for the low-power data lines. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:DPHY:DPZero:THReshold` on page 1738
`SBUS<sb>:DPHY:DPZero:HYSTeresis` on page 1739
`SBUS<sb>:DPHY:DNZero:THReshold` on page 1738
`SBUS<sb>:DPHY:DNZero:HYSTeresis` on page 1739

LP Dp0, LP Dn0 threshold, LP Dp0, LP Dn0 hysteresis
Sets the threshold for the LP transitions. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:DPHY:DPZero:LPTHreshold on page 1739
SBUS<sb>:DPHY:DPZero:LPHYsteresis on page 1740
SBUS<sb>:DPHY:DNZero:LPTHreshold on page 1739
SBUS<sb>:DPHY:DNZero:LPHYsteresis on page 1740

DP<n> threshold, DP<n> hysteresis
Sets the threshold for the for the digitization of high-speed data lines. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:DPHY:DPONe:THReshold on page 1740
SBUS<sb>:DPHY:DPONe:HYSTeresis on page 1741
SBUS<sb>:DPHY:DPTWo:THReshold on page 1740
SBUS<sb>:DPHY:DPTWo:HYSTeresis on page 1741
SBUS<sb>:DPHY:DPTHree:THReshold on page 1740
SBUS<sb>:DPHY:DPTHree:HYSTeresis on page 1741

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.7.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.


See "Decode layer" on page 541.

"HS edges"	High-speed edges of each lane, showing the transitions in high-speed mode.
"HS bits"	High-speed bits of each lane.
"HS bytes"	High-speed bytes of each lane.
"HS merged"	Bytes that are combined/split into words.
"LP edges"	Low-power transition edges from the single-ended DP0 and DN0 signals.
"LP states"	Low-power states LP00, LP01, LP10, LP11 of DP0 and DN0.

"LP bits" Low-power bits of each lane.

14.7.3 D-PHY filter

Access: "Menu" > "Apps" > "Protocol" tab > "D-PHY" > "Filter" tab

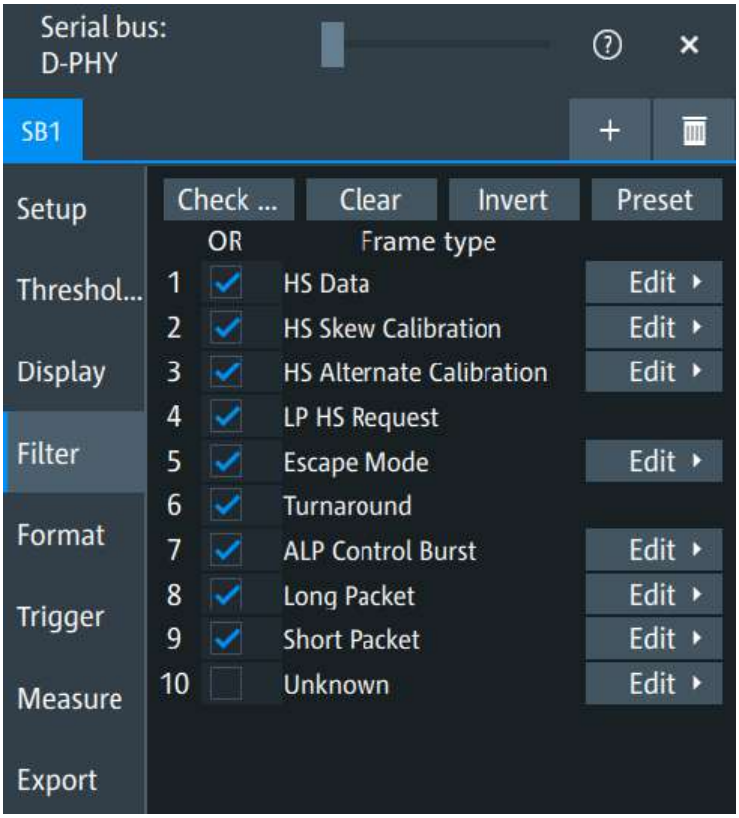

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:DPHY:FILTer:CHKall` on page 1742
`SBUS<sb>:DPHY:FILTer:CLR` on page 1742
`SBUS<sb>:DPHY:FILTer:INVert` on page 1743
`SBUS<sb>:DPHY:FILTer:RST` on page 1743


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

As soon as you create frame formats, those types also appear in this list.

Remote command:
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:ENABle on page 1745
SBUS<sb>:DPHY:FILTer:FRENable on page 1745

Edit
Opens a dialog to define the details of the selected frame.

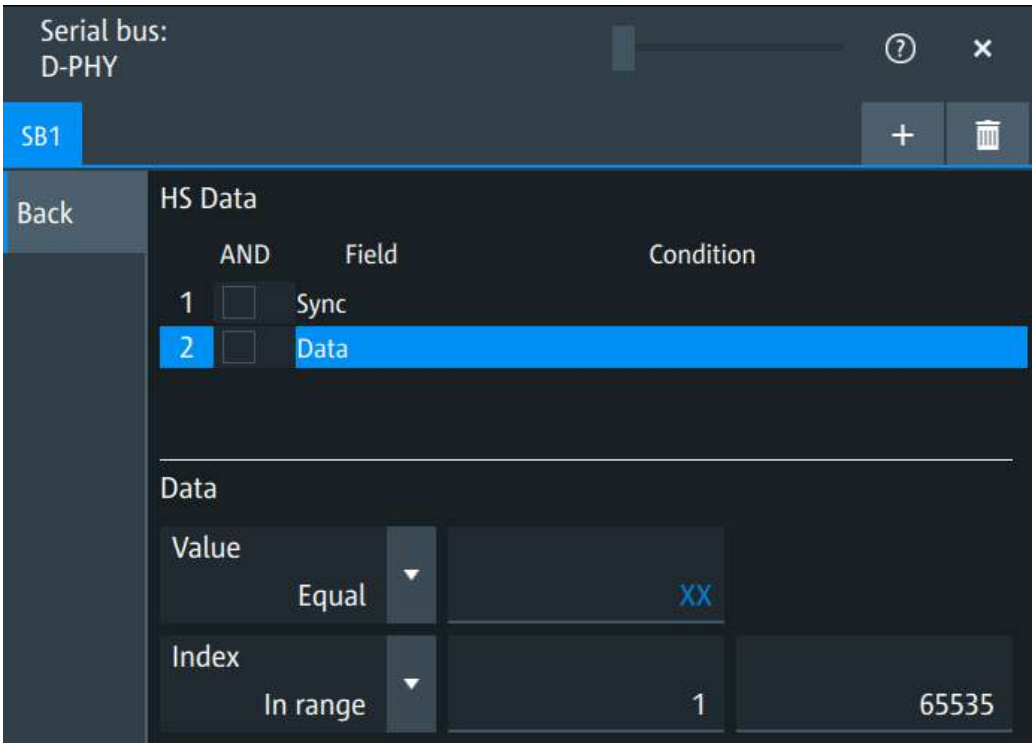

"Field" Enables the field type that you want to filter on for the selected frame.

As soon as you create field formats, those types also appear in this list.
The available fields depend on the selected frame type.

Remote command:
SBUS<sb>:DPHY:FILTer:FIENable on page 1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1745

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:DPHY:FILTer:BIT on page 1743
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1743


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:DPHY:FILTer:DMAX on page 1744SBUS<sb>:SPMI:FILTer:DMAX on page 2129
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1744
SBUS<sb>:DPHY:FILTer:DMIN on page 1744
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1744
SBUS<sb>:DPHY:FILTer:DOPerator on page 1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1745

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:DPHY:FILTer:IMAX on page 1746
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1746
SBUS<sb>:DPHY:FILTer:IMIN on page 1746
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1746
SBUS<sb>:DPHY:FILTer:IOPerator on page 1747
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1747

Error type
Enables filtering on the selected error type.

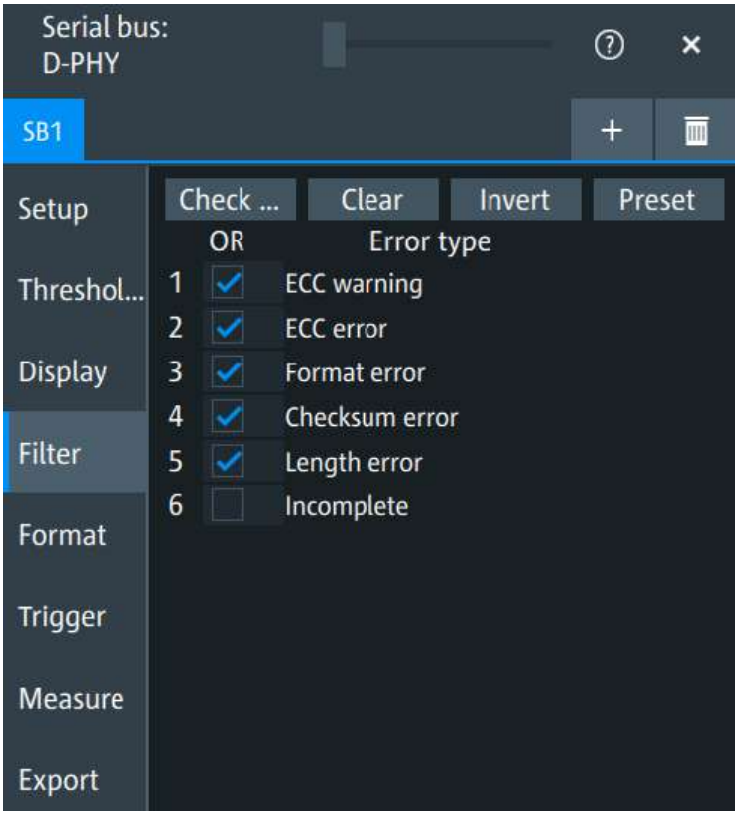

Remote command:
SBUS<sb>:DPHY:FILTer:ERRor<n>:ENABle on page 1744
SBUS<sb>:DPHY:FILTer:ERENable on page 1744

14.7.4 D-PHY format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "D-PHY" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:DPHY:FORMat:SELect on page 1748

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

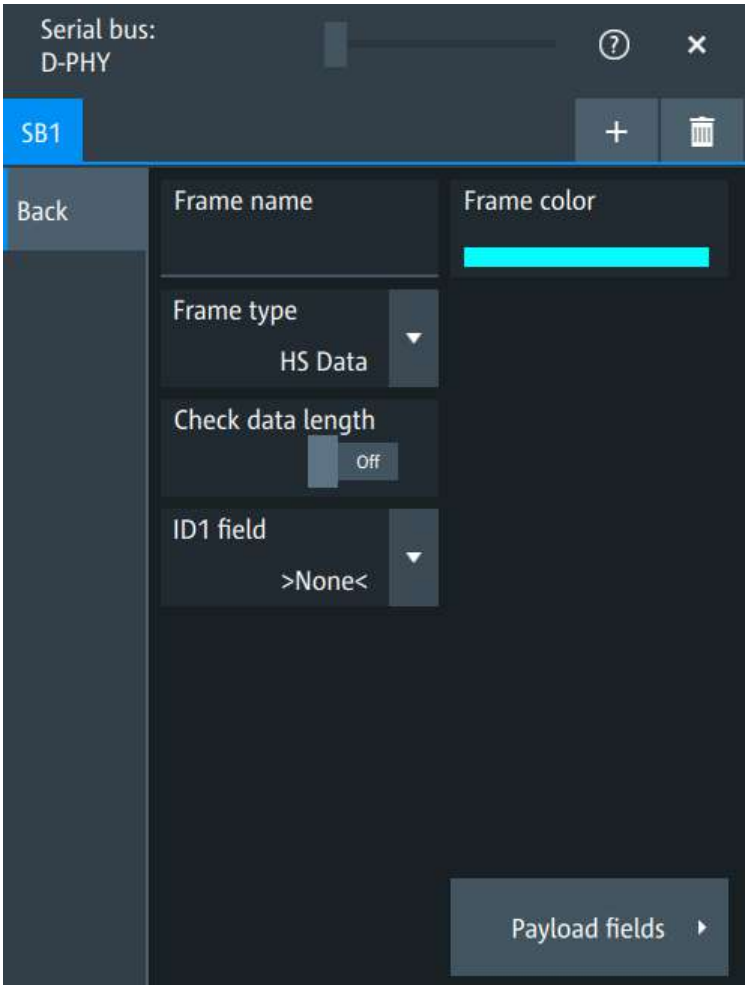

Remote command:
SBUS<sb>:DPHY:FORMat:ADDFrame on page 1748

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:DPHY:FORMat:CLR on page 1749
SBUS<sb>:DPHY:FORMat:FCOunt? on page 1749

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:DPHY:FORMat:LOAD on page 1748

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:DPHY:FORMat:SAVE on page 1748

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:NAME on page 1750

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:COLor on page 1750

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:TYPE on page 1750

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENCheck on page 1751

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENValue on page 1751

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Field on page 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Field on page 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Field on page 1751


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Value on page 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Value on page 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Value on page 1752

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

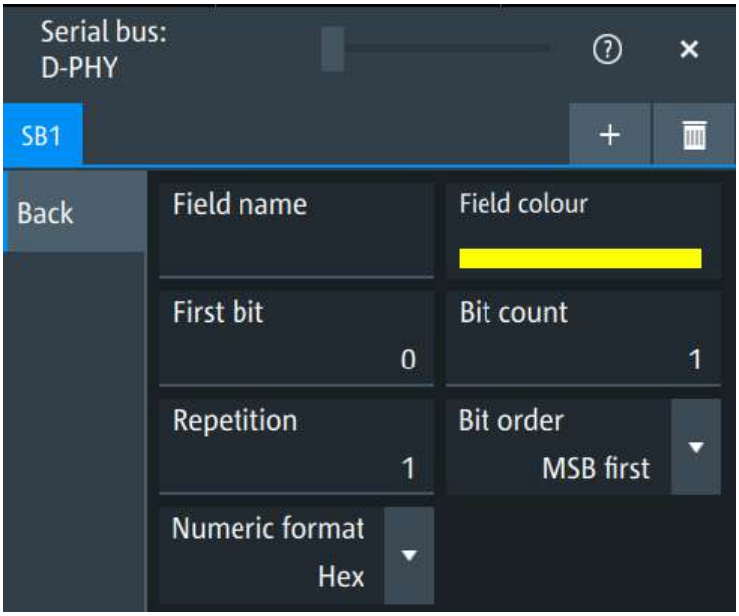

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ADDField on page 1749

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1752

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1752

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1753

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 1753

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 1753

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1754

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1754

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1755

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1755

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1756

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1756

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1757
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1757


14.7.5 D-PHY software trigger

14.7.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.7.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "D-PHY" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

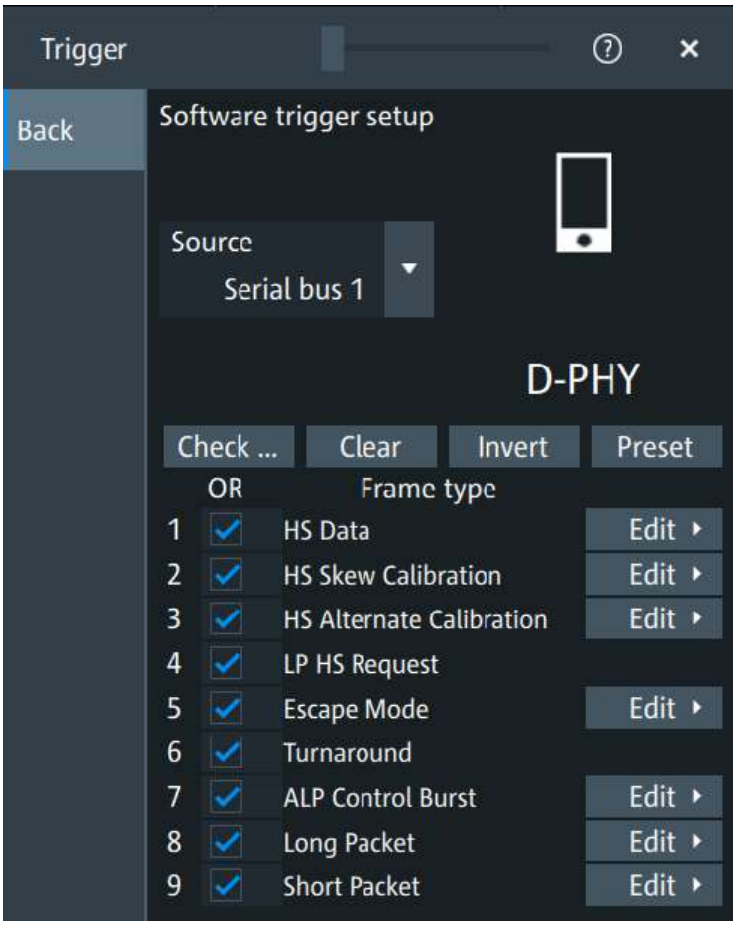

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all"	Enables the software trigger for all available frames and error types.
"Clear"	Disables the software trigger for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:DPHY:CHKall` on page 1758
`TRIGger:SBSW:DPHY:CLR` on page 1758
`TRIGger:SBSW:DPHY:INVert` on page 1758
`TRIGger:SBSW:DPHY:RST` on page 1759


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

As soon as you create frame formats, those types also appear in this list.

Remote command:
`TRIGger:SBSW:DPHY:FRENable` on page 1759
`TRIGger:SBSW:DPHY:FRAMe<fr>:ENABle` on page 1759

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

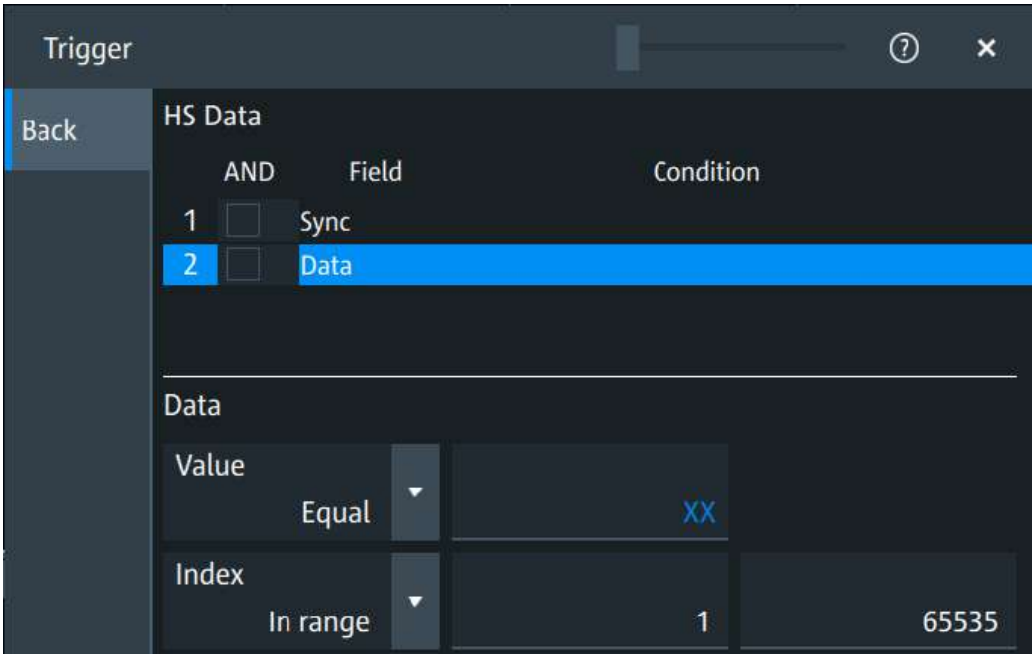

"Field" Enables the field type that you want to trigger on for the selected frame.

As soon as you create field formats, those types also appear in this list.

Remote command:
`TRIGger:SBSW:DPHY:FIENable` on page 1761
`TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:ENABle` on page 1761

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:DPHY:BIT` on page 1759
`TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:BIT` on page 1759


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:DPHY:DMAX` on page 1759
`TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMAX` on page 1759
`TRIGger:SBSW:DPHY:DMIN` on page 1760
`TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMIN` on page 1760
`TRIGger:SBSW:DPHY:DOPerator` on page 1760
`TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator` on page 1760

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:DPHY:IMAX on page 1761
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMAX on page 1761
TRIGger:SBSW:DPHY:IMIN on page 1761
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMIN on page 1761
TRIGger:SBSW:DPHY:IOPerator on page 1762
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator on page 1762

Error type
Enables triggering on the selected error type.

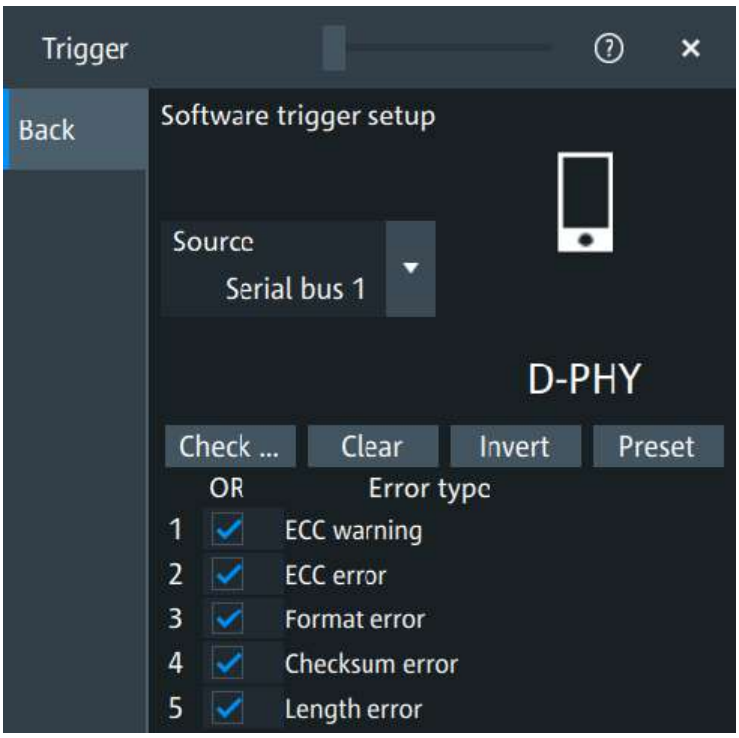

Remote command:
TRIGger:SBSW:DPHY:ERENable on page 1762
TRIGger:SBSW:DPHY:ERRor<m>:ENABle on page 1762

14.7.6 D-PHY decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

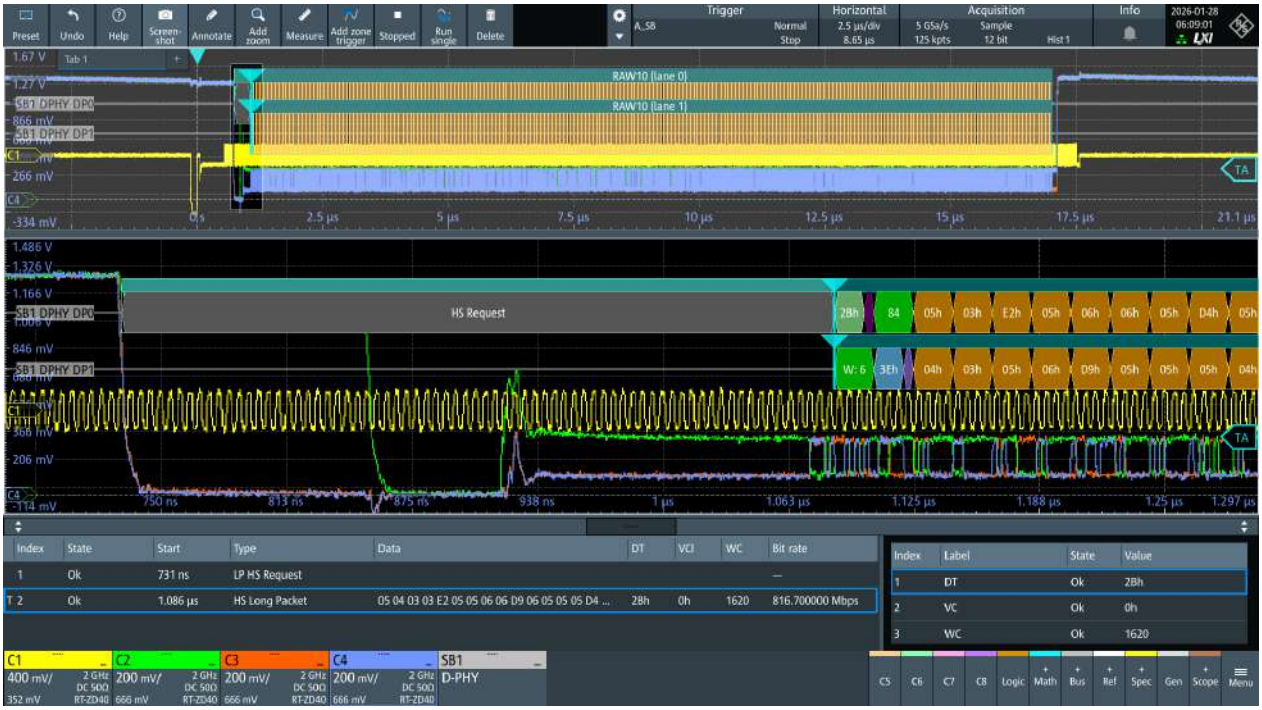


Figure 14-20: Decoded DPHY signal

The decode results table contains information about all decoded frames.

Table 14-11: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Start time of the frame
Type	Frame types, see "Supported frame types" on page 654. For configured frame formats, the "Format" tab controls the format of each field. See Section 14.7.4, "D-PHY format configuration", on page 663.
DT	Data type
VCI	Virtual channel
WC	Word count
ECC	Error correction code
CRC	Cyclic redundancy check
Bit rate	Bit rate of the frame

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-12: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.7.5, "Decode results", on page 1763.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example D-PHY export file

```
Index,Start,Stop,State,Type,DT,VCI,WC,ECC,CRC,Bit-rate
1,4.82e-08,2.688e-06,'OK','LPES',---,---,---,---,---,18870000
2,2.936e-06,2.9937e-06,'OK','LPHS',---,---,---,---,---,---
3,2.9937e-06,3.0095e-06,'OK','HS_SP',00h,5h,---,08h,---,2025000000
4,3.384e-06,3.5136e-06,'OK','LPHS',---,---,---,---,---,---
5,3.5136e-06,3.5296e-06,'OK','HS_SP',08h,0h,---,10h,---,2000000000
6,3.9042e-06,3.9536e-06,'OK','LPHS',---,---,---,---,---,---
7,3.9536e-06,4.0497e-06,'OK','HSSC',---,---,---,---,---,998900000
8,4.424e-06,4.4736e-06,'OK','LPHS',---,---,---,---,---,---
9,4.4736e-06,4.5297e-06,'OK','HSSC',---,---,---,---,---,998200000
10,4.9042e-06,4.9535e-06,'OK','LPHS',---,---,---,---,---,---
11,4.9535e-06,5.0017e-06,'OK','HSAC',---,---,---,---,---,995800000
12,5.376e-06,5.4335e-06,'OK','LPHS',---,---,---,---,---,---
13,5.4335e-06,5.46965e-06,'OK','HS_LP',38h,5h,3,25h,DDADh,1993000000
14,5.648e-06,5.7682e-06,'OK','LPTA',---,---,---,---,---,---
15,5.9922e-06,6.0496e-06,'OK','LPHS',---,---,---,---,---,---
16,6.0496e-06,6.10965e-06,'OK','HS_LP',13h,5h,9,0Bh,EB66h,2000000000
17,6.464e-06,6.5217e-06,'OK','LPHS',---,---,---,---,---,---
18,6.5217e-06,6.5576e-06,'OK','HS_LP',38h,5h,3,25h,3F6Eh,2007000000
19,6.736e-06,6.8562e-06,'OK','LPTA',---,---,---,---,---,---
20,7.104e-06,7.1617e-06,'OK','LPHS',---,---,---,---,---,---
21,7.1617e-06,7.1777e-06,'OK','HS_SP',04h,0h,---,13h,---,2000000000
22,7.376e-06,7.8562e-06,'OK','LPES',---,---,---,---,---,20830000
23,8.1202e-06,8.7202e-06,'OK','LPES',---,---,---,---,---,15870000
24,9.04e-06,9.0977e-06,'OK','LPHS',---,---,---,---,---,---
```

```
25,9.0977e-06,9.14165e-06,'OK','HS_LP',2Bh,0h,5,2Eh,7426h,2000000000
26,9.3442e-06,9.8242e-06,'OK','LPES',---,---,---,---,---,20830000

Details frame 1
Index,Label,State,Value
1,'Data: 1','OK',01h
2,'Data: 2','OK',02h
3,'Data: 3','OK',03h
4,'Data: 4','OK',05h
5,'Data: 5','OK',06h
```

14.8 UART (IC electronics, option R&S MXO5-K510)

The Universal Asynchronous Receiver/Transmitter UART converts a word of data into serial data, and vice versa. It is the base of many serial protocols such as RS-232.

For basic information on UART, you can also refer to a video, available on the Rohde & Schwarz YouTube channel: Understanding UART.

Requirements

For performing UART decode measurements, you need the following:

- MXO 5 with 2 available channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Two probes
- Option R&S MXO5-K510

- About the UART / RS-232 interface 675
- UART configuration 676
- UART filter 680
- UART format configuration 682
- UART hardware trigger 688
- UART software trigger 689
- Measure 692
- UART decode results 692
- Performing UART decoding 694

14.8.1 About the UART / RS-232 interface

The UART uses only one line, or two lines for transmitter and receiver.

Data transfer

The data is transmitted in words, also referred to as symbols or characters. Each word consists of a start bit, several data bits, an optional parity bit, and one or more stop bits. Several words can form a package, or frame. The end of a package is marked with a reserved word or by a pause between two words.




Figure 14-21: Bit order in a UART word (symbol)

- The start bit is a logic 0.
- The stop bits and the idle state are always logic 1.

The UART protocol has no clock for synchronization. The receiver synchronizes by the start and stop bits, and the bit rate that must be known to the receiver.

Trigger


The MXO 5 can trigger on specified parts of UART serial signals:

- Start bit
- Packet start
- Parity errors, and breaks
- Stop errors
- A serial pattern at any or a specified position

14.8.2 UART configuration

14.8.2.1 UART configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Setup".

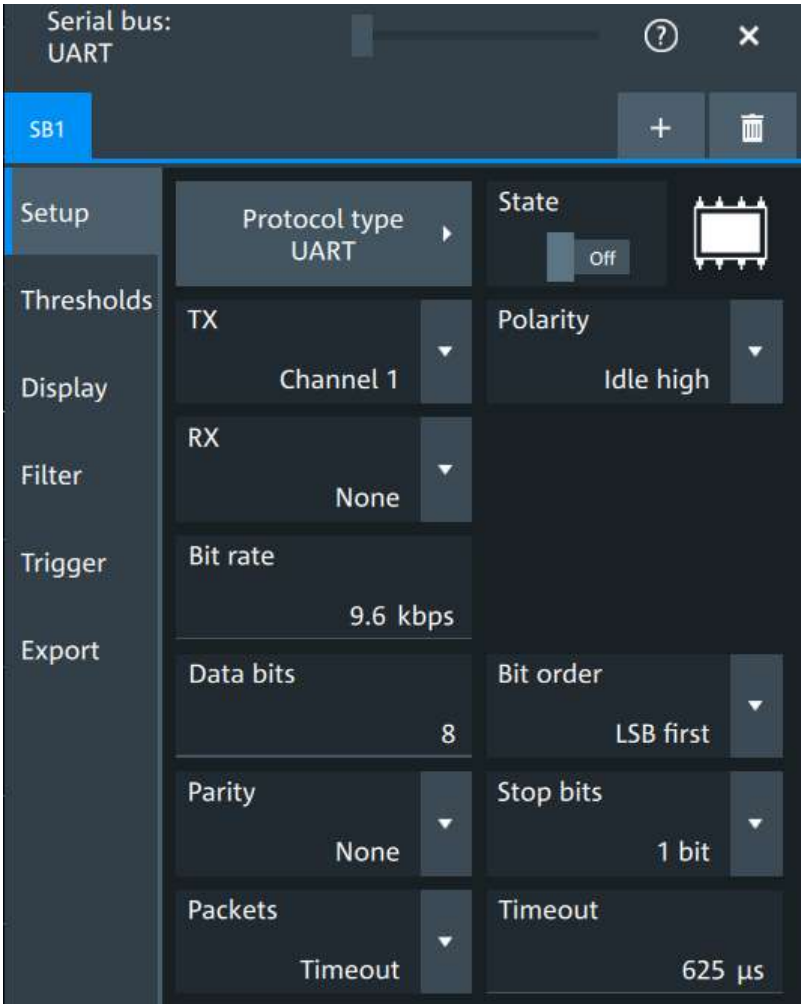

Protocol type
Selects the protocol type to be decoded.

Remote command:
SBUS<sb>:TYPE on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
SBUS<sb>[:STATe] on page 1564

Source: Tx, Rx
Select the input channels for the transmitter and receiver signals.

Do not combine a reference waveform with a channel or math waveform because the time correlation of these waveforms can differ.

Remote command:
SBUS<sb>:UART:TX:SOURce on page 1775
SBUS<sb>:UART:RX:SOURce on page 1774

Bit order
Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Remote command:
SBUS<sb>:UART:BORDer on page 1772

Polarity
Defines the logic levels of the bus. The idle state corresponds to a logic 1. The start bit corresponds to a logic 0. "Idle high" (high=1) is used, for example, for control signals, while "Idle low" (low=1) is defined for data lines (RS-232).

Remote command:
SBUS<sb>:UART:POLarity on page 1773

Bit rate
Sets the number of transmitted bits per second.

Remote command:
SBUS<sb>:UART:BITRate on page 1772

Stop bits
Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

Remote command:
SBUS<sb>:UART:SBIT on page 1774

Data bits
Sets the number of data bits of a word in a range from 5 bits to 8 bits. If no parity bit is used, then 9 data bits are possible.

Remote command:
SBUS<sb>:UART:SSIZe on page 1775

Parity
Defines the optional parity bit that is used for error detection.

"None"	No parity bit is used.
"Odd"	The parity bit is set to "1" if the number of data bits set to "1" is even.
"Even"	The parity bit is set to "1" if the number of data bits set to "1" is odd.
"Mark"	The parity bit is always a logic 1.
"Space"	The parity bit is always a logic 0.
"Don't care"	The parity is ignored.

Remote command:
SBUS<sb>:UART:PARity on page 1773

Packets
Allows you to define packets of several words in the data stream.


"None"	Packets are not considered.

"Timeout" Defines a timeout between a stop bit and the next start bit. Enter the minimum time that marks the end of a packet.
A new packet starts with the first start bit after the timeout.

Remote command:
SBUS<sb>:UART:PACKets on page 1772
SBUS<sb>:UART:TOUT on page 1775

14.8.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Thresholds".

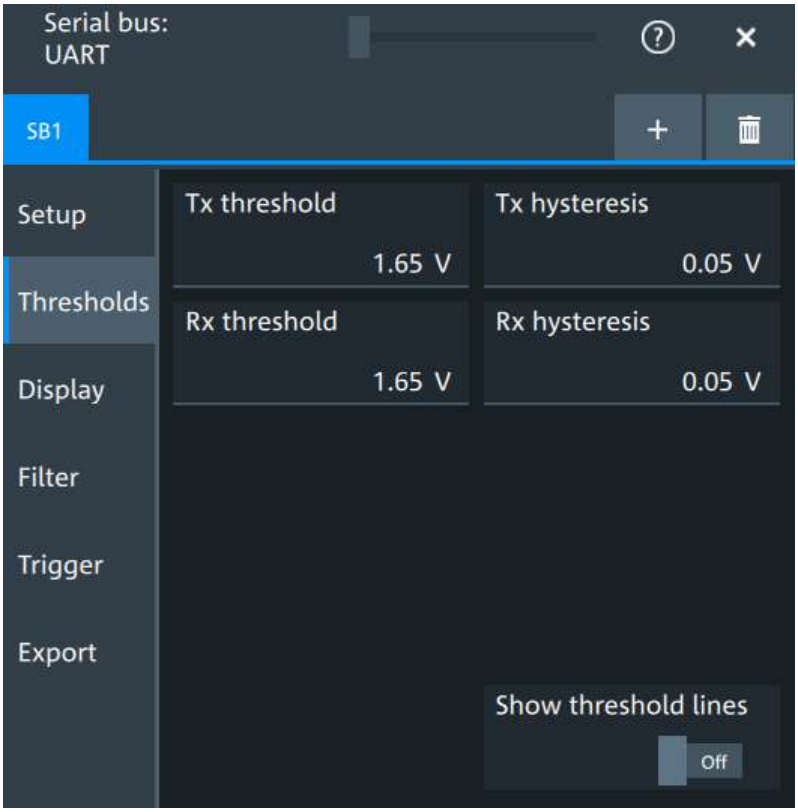

Threshold
Sets the threshold for the TX and RX channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:UART:RX:HYSTeresis on page 1773
SBUS<sb>:UART:RX:THReshold on page 1774
SBUS<sb>:UART:TX:HYSTeresis on page 1775
SBUS<sb>:UART:TX:THReshold on page 1776

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.


Remote command:
SBUS<sb>:THReshold on page 1566

14.8.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

14.8.3 UART filter

Access:"Menu" > "Apps" > "Protocol" tab >"UART / RS232" > "Filter" tab

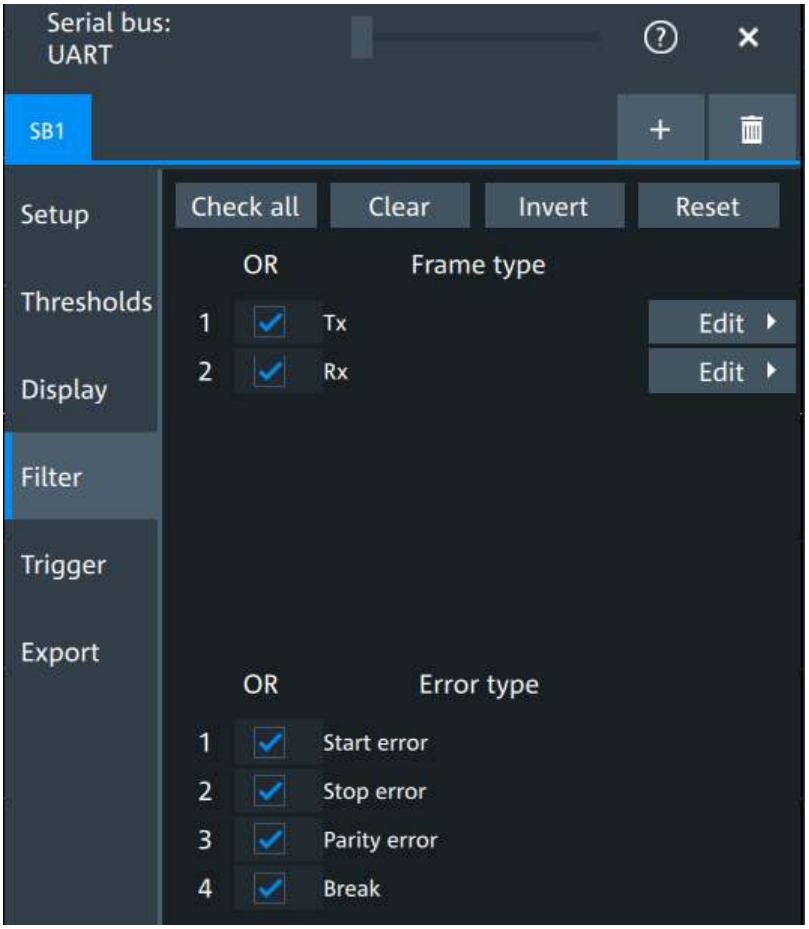

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:UART:FILTer:CHKall` on page 1778
`SBUS<sb>:UART:FILTer:CLR` on page 1778
`SBUS<sb>:UART:FILTer:INVert` on page 1778
`SBUS<sb>:UART:FILTer:RST` on page 1778


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frames are "Tx", "Rx".

Remote command:
`SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle` on page 1782
`SBUS<sb>:UART:FILTer:FRENable` on page 1782

Edit
Opens a dialog to define the details of the selected frame.

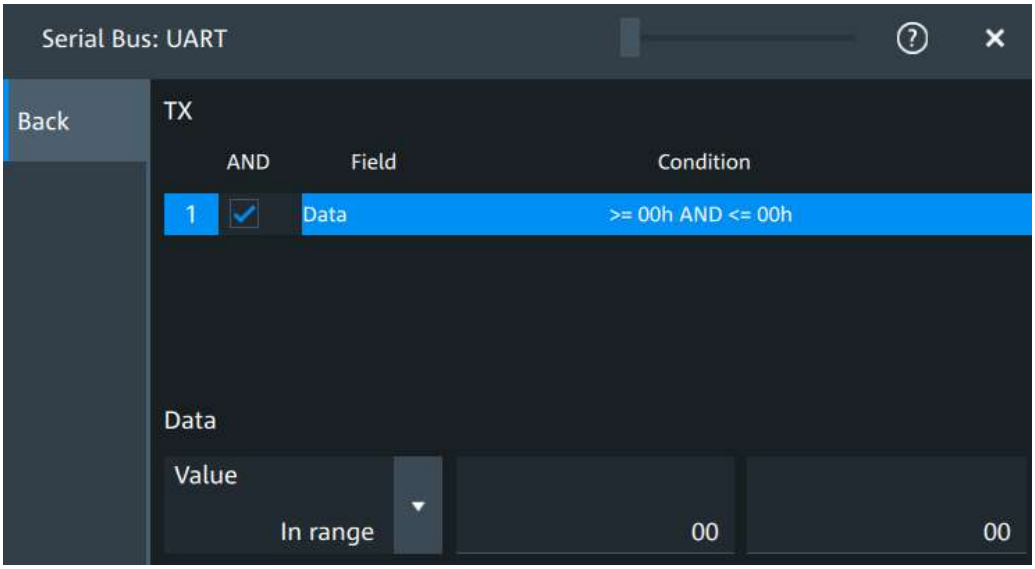

"Field" Enables the field type that you want to filter on for the selected frame. The available field is "Data".

Remote command:
`SBUS<sb>:UART:FILTer:FIENable` on page 1782
`SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1782

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1781

"Data" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1781
SBUS<sb>:UART:FILTer:DMAX on page 1781
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1780
SBUS<sb>:UART:FILTer:DMIN on page 1780
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1780
SBUS<sb>:UART:FILTer:DOPerator on page 1780

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1779
SBUS<sb>:UART:FILTer:IMAX on page 1779
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1779
SBUS<sb>:UART:FILTer:IMIN on page 1779
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1779
SBUS<sb>:UART:FILTer:IOPerator on page 1779

Error type
Enables filtering on the selected error type.

Available error types are "Start error", "Stop error", "Parrity error", "Break".

Remote command:
SBUS<sb>:UART:FILTer:ERRor<n>:ENABle on page 1780

14.8.4 UART format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:UART:FORMat:SELect on page 1783

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

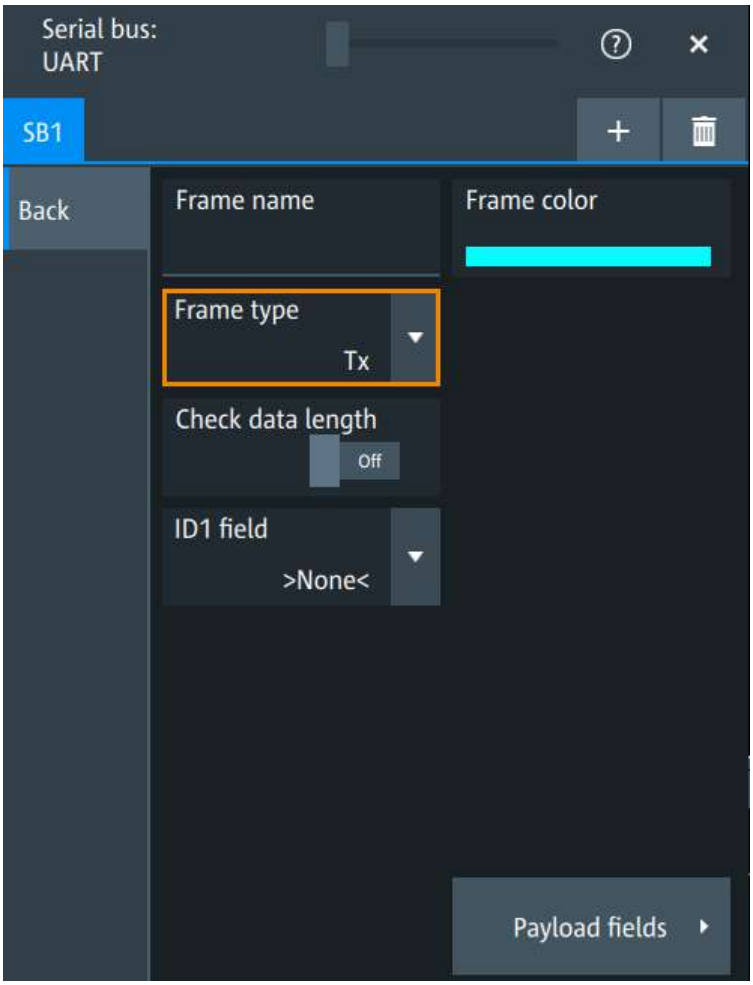

Remote command:
SBUS<sb>:UART:FORMat:ADDFrame on page 1783

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:UART:FORMat:CLR on page 1784
SBUS<sb>:UART:FORMat:FCOunt? on page 1784

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:UART:FORMat:LOAD on page 1784

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:UART:FORMat:SAVE on page 1784

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:NAME on page 1785

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:COLor on page 1785

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:TYPE on page 1786

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:LENCheck on page 1786

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:LENValue on page 1786

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Field on page 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Field on page 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Field on page 1787


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Value on page 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Value on page 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Value on page 1787

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

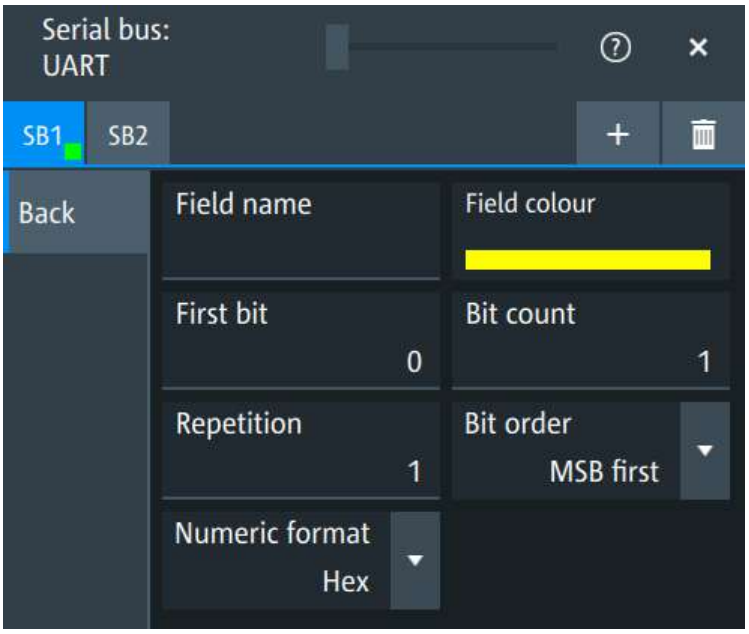

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:ADDField on page 1785

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1787

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:COLor` on page 1788

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FSTBit` on page 1788

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1788

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 1789

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1789

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1790

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1790

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1790

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1791

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1791

Parameter A,B
Defines the parameters of the linear function.


- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARA` on page 1792
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARB` on page 1792

14.8.5 UART hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Trigger" tab > "Setup Hardware Trigger"

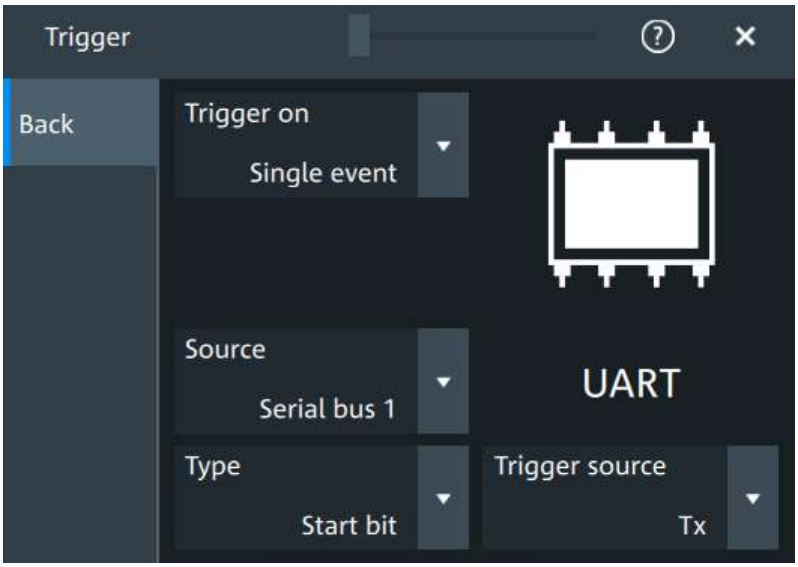

Type
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

Remote command:
`TRIGger:SBHW:UART:TYPE` on page 1793

Trigger source
Selects the trigger type condition.

Selects the transmitter or receiver line as trigger source.

Remote command:
`TRIGger:SBHW:UART:SOURce` on page 1793

Data conditions
Specify the data conditions if the trigger type is set to "Data".

Data ← Data conditions
Selects the operator for the "Data" pattern.

Remote command:
`TRIGger:SBHW:UART:FCONdition` on page 1793

Value ← Data conditions
Specifies the data pattern to be found on the specified trigger source. Enter the words in MSB first bit order.

Remote command:
`TRIGger:SBHW:UART:DATA` on page 1792

Position ← Data conditions
Sets the number of words before the first word of interest. These offset words are ignored.

The setting is available if packet detection is enabled in the protocol configuration.

Remote command:
`TRIGger:SBHW:UART:DPOSition` on page 1792


14.8.6 UART software trigger

14.8.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.8.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

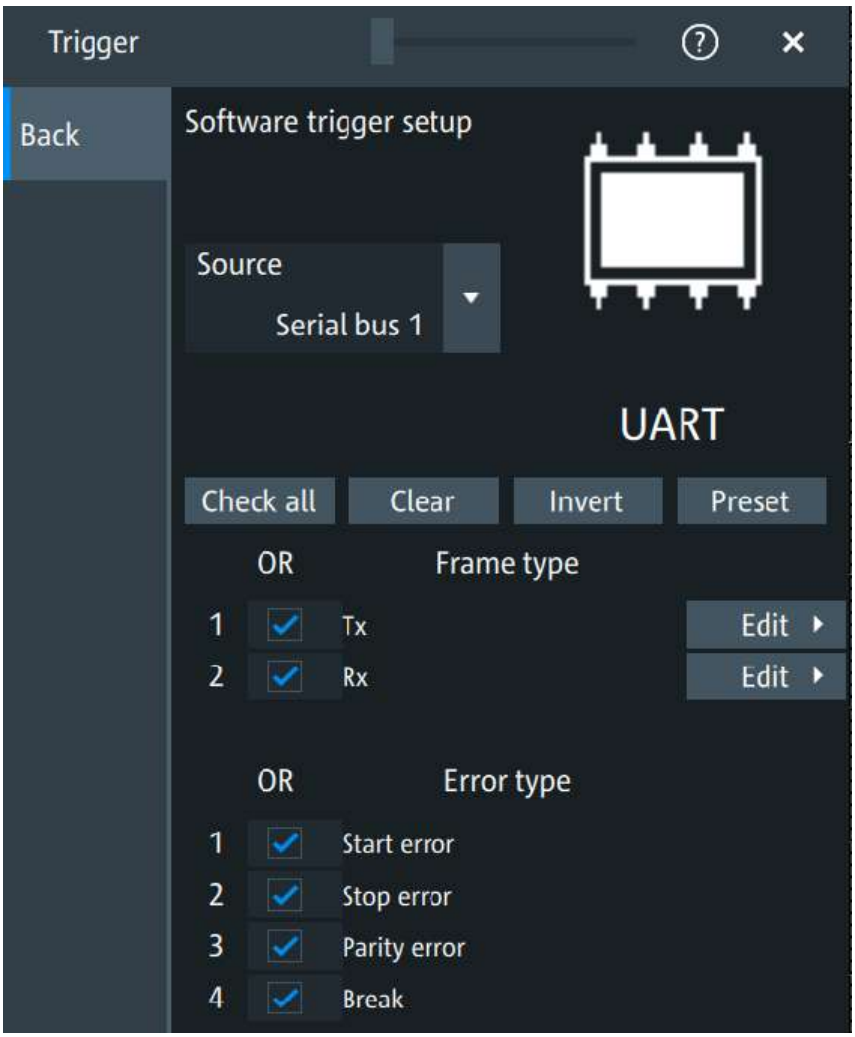

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:UART:CHKall` on page 1795
`TRIGger:SBSW:UART:CLR` on page 1795
`TRIGger:SBSW:UART:INVert` on page 1795
`TRIGger:SBSW:UART:RST` on page 1795


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Tx" and "Rx".

Remote command:
`TRIGger:SBSW:UART:FRAMe<fr>:ENABle` on page 1795
`TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle` on page 1797

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

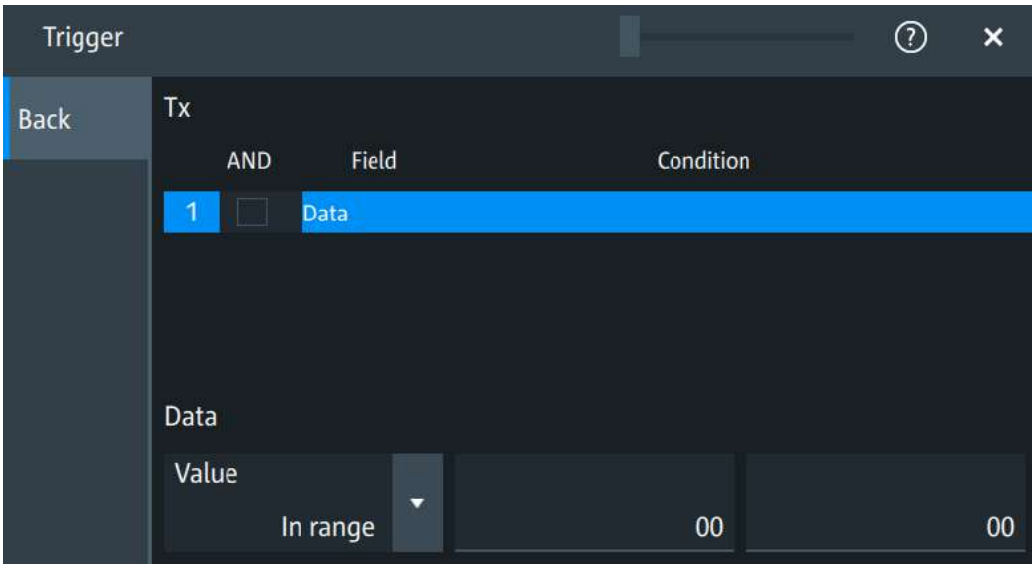

"Field" Enables the field type that you want to trigger on for the selected frame.
The available field is "Data".

Remote command:
`TRIGger:SBSW:UART:FIENable` on page 1797
`TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle` on page 1797

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:UART:BIT` on page 1796
`TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:BIT` on page 1796

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:UART:DMAX on page 1796
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMAX on page 1796
TRIGger:SBSW:UART:DMIN on page 1796
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMIN on page 1796
TRIGger:SBSW:UART:DOPerator on page 1797
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator on page 1797

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:UART:IMAX on page 1797
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMAX on page 1797
TRIGger:SBSW:UART:IMIN on page 1798
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMIN on page 1798
TRIGger:SBSW:UART:IOPerator on page 1798
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator on page 1798

Error type
Enables triggering on the selected error type.

The following error types are available: "Start error", "Stop error", "Parity error", "Break".

Remote command:
TRIGger:SBSW:UART:ERENable on page 1799
TRIGger:SBSW:UART:ERRor<m>:ENABle on page 1799

14.8.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.8.8 UART decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

For more information on decoding UART, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding UART with MXO Series Oscilloscopes.



Figure 14-22: Decoded UART signal

The decode results table contains information about all decoded frames.

Table 14-13: Content of the decode results table

Column	Description
Index	Number of the decoded frames
State	Decoding state of the word. "Insuffcient waveform length" indicates that the word is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of the word start (start bit)
Stop	Time of the word stop (stop bit)
Tx value	Value of the Tx word. Select the data format in the "Display" tab.
Rx value	Value of the Rx word. Select the data format in the "Display" tab.
Data rate	Value of the data rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.8.6, "Decode results", on page 1800.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example UART export file

```
Index,Start,Stop,Source,State,Tx value,Rx value,Bit rate
1,-0.0629961,-0.0629531,'TX','OK',33h,---,256000
2,-0.0629453,-0.0629023,'RX','OK',---,F5h,256000
3,-0.0628945,-0.0628516,'TX','STER',C8h,---,256000
4,-0.0628438,-0.0628008,'RX','SPER',---,28h,256000
5,-0.062793,-0.06275,'TX','PRER',A8h,---,256000
```

14.8.9 Performing UART decoding

This section explains step by step how to configure and decode the UART bus.

For more information on decoding UART, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding UART with MXO Series Oscilloscopes.

14.8.9.1 Configuring UART signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.

For details on configuration settings, see UART configuration.

1. Tap the "+ Bus" activator in the bottom right of the screen.




2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "UART".
4. Tap on "State" to enable the decoding.

   An SPI shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "UART / RS232" dialog settings.




5. Select the correct channels for each active line: "Tx" and "Rx".
6. Set the "Bit rate".
7. Set the "Data bits". Typical value is 7 or 8.

8. Set the "Stop bits". Typical value is 1.
9. Set the "Parity" to "None", "Odd" or "Even".
10. Set "Bit order" to "MSB" or "LSB first".
11. Set the "Packets".
12. Set the "Timeout".
13. Set the "Polarity" to "Idle high" or "Idle low".
14. Check that the signals are on the screen.
    If not try adjusting the vertical and horizontal settings.

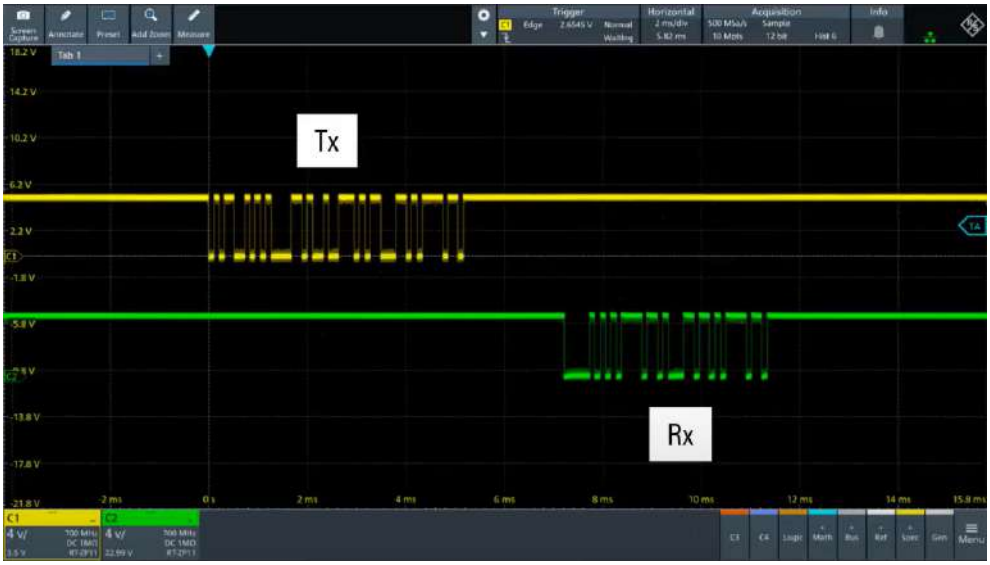

15. Set the logical thresholds:
    a) Tap the "Thresholds" tab.
    b) For each line, set the threshold value. A typical value is 2.5 V.
    c) If necessary, set the hysteresis value for the wires.
    d) Optionally, tap on "Show threshold lines".

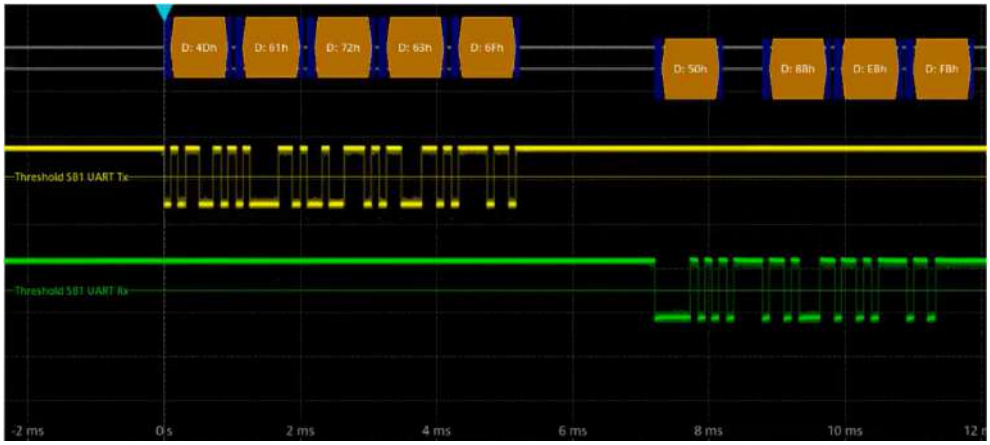

14.8.9.2 Exporting decode results

Once a decode has been completed, you can generate an export of all decode results.

Prerequisites: A bus is configured for the UART and decoded.

1. Tap on the "UART / RS232" shortcut.
2. Tap on the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".

   An export file is saved in the selected directory.

The UART export files contain the following fields:

- Index
- Start
- Stop
- Source
- State
- TX value
- RX value
- Bit rate

Example UART export file

```
Index,Start,Stop,Source,State,Tx value,Rx value,Bit rate
1,-0.0629961,-0.0629531,'TX','OK',33h,---,256000
2,-0.0629453,-0.0629023,'RX','OK',---,F5h,256000
3,-0.0628945,-0.0628516,'TX','STER',C8h,---,256000
4,-0.0628438,-0.0628008,'RX','SPER',---,28h,256000
5,-0.062793,-0.06275,'TX','PRER',A8h,---,256000
```

14.9 NRZ clocked & unclocked (option R&S MXO5-K510)

NRZ is a communication protocol for triggering at data rates up to 50 Mbit/s. It is suited for fast eye-diagram mask testing.


The NRZ protocol can either be **clocked** or **unclocked**. NRZ unclocked signals require a user-defined bit rate and gap time setting for triggering and decoding.

- NRZ basics 697
- NRZ configuration 697
- NRZ filter 701
- NRZ format configuration 705

- NRZ software trigger 712
- Measure 716
- NRZ decode results 716

14.9.1 NRZ basics

In this line coding scheme, NRZ stands for "non-return-to-zero": The logical 1 is represented by a high voltage level, and the logical 0 is represented by a low voltage level:

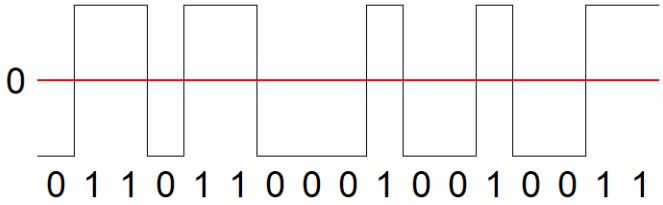

The voltage remains at the same level for the entire bit period, without returning to a zero voltage level between bits. The voltage level changes only when the data bit changes.

Therefore, NRZ is an efficient protocol for high-speed serial data transmission. Its simplicity and low overhead make it a good choice for applications where data integrity and reliability are critical. It requires only half the bandwidth of the related Manchester code, which uses phase-shift keying.

14.9.2 NRZ configuration

14.9.2.1 NRZ configuration settings

Access:

- "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked" > "Setup".
- "Menu" > "Apps" > "Protocol" tab > "NRZ Unclocked" > "Setup".

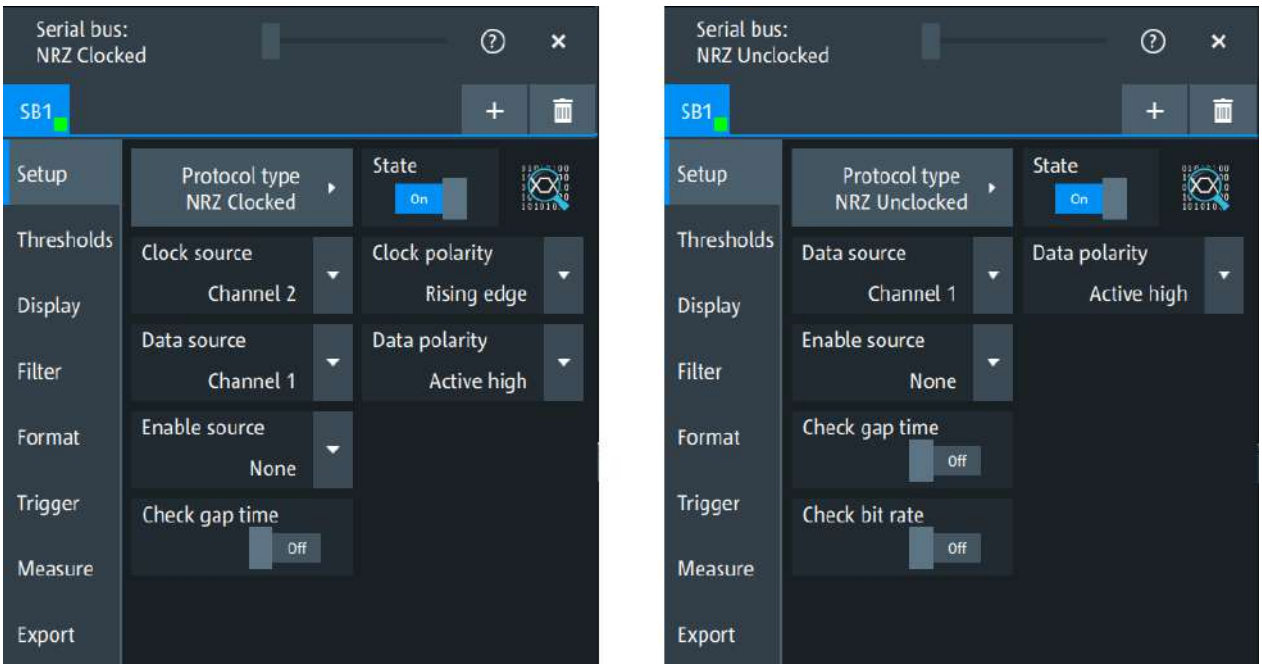


Figure 14-23: Setup dialog, left: clocked version, right: unclocked version of NRZ

Data source
Selects the source for the data signal.

Remote command:
`SBUS<sb>:NRZC:DATA:SOURce` on page 1806
`SBUS<sb>:NRZU:DATA:SOURce` on page 1835

Clock source
Available only for "NRZ Clocked".

Selects the source for the clock signal.

Remote command:
`SBUS<sb>:NRZC:CLK:SOURce` on page 1805

Data polarity
Selects the polarity for the data signal.

Remote command:
`SBUS<sb>:NRZC:DATA:POLarity` on page 1806
`SBUS<sb>:NRZU:DATA:POLarity` on page 1835

Clock polarity
Available only for "NRZ Clocked".

Selects the polarity for the clock signal.

Remote command:
`SBUS<sb>:NRZC:CLK:POLarity` on page 1805

Enable source
Selects the source of the enable signal.

If you select any source other than "None", the "Enable polarity" becomes available, which selects the polarity of the enable signal.

Remote command:
`SBUS<sb>:NRZC:ENABle:SOURce` on page 1806
`SBUS<sb>:NRZC:ENABle:POLarity` on page 1807
`SBUS<sb>:NRZU:ENABle:SOURce` on page 1835
`SBUS<sb>:NRZU:ENABle:POLarity` on page 1836

Check gap time
Enables the detection of the minimum idle time between two frames during decoding. Also enables setting the "Min gap time". If you set it, the decoder considers any longer idle time a gap.

Remote command:
`SBUS<sb>:NRZC:MINGap:SELect` on page 1807
`SBUS<sb>:NRZU:MINGap:SELect` on page 1836
`SBUS<sb>:NRZC:MINGap:WIDTh` on page 1807
`SBUS<sb>:NRZU:MINGap:WIDTh` on page 1836

Check bit rate
Available only for "NRZ Unclocked".

Enables setting the "Bit rate".
- If you define a bit rate, it is used for triggering and decoding.
- If you disable this option, the decoder calculates the bit rate.

Remote command:
`SBUS<sb>:NRZU:BITRate:SELect` on page 1837
`SBUS<sb>:NRZU:BITRate:WIDTh` on page 1837

14.9.2.2 Thresholds

Access:
- "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked" > "Thresholds"
- "Menu" > "Apps" > "Protocol" tab > "NRZ Unclocked" > "Thresholds"

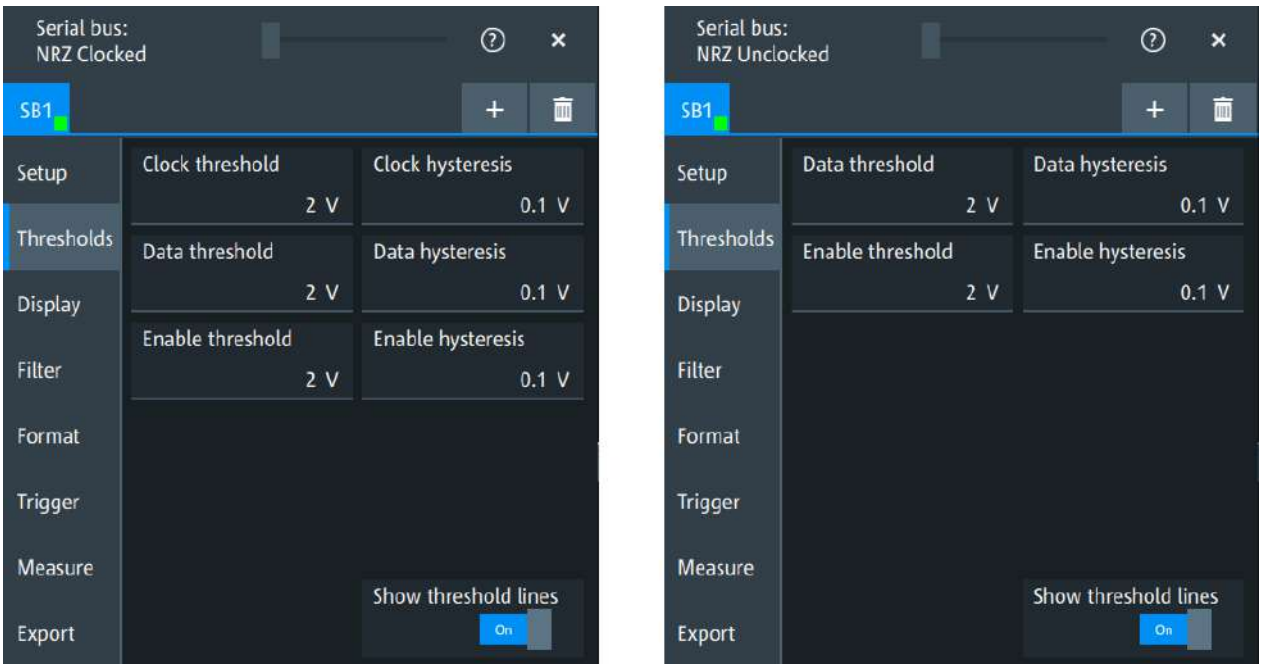


Figure 14-24: Thresholds dialog, left: clocked version, right: unclocked version of NRZ

Enter the values directly in the fields.

Data threshold, Data hysteresis
Sets the middle threshold and the hysteresis for the data source channel.

Remote command:
`SBUS<sb>:NRZU:DATA:THReshold` on page 1837
`SBUS<sb>:NRZU:DATA:HYSTeresis` on page 1838
`SBUS<sb>:NRZC:DATA:THReshold` on page 1808
`SBUS<sb>:NRZC:DATA:HYSTeresis` on page 1808

Clock threshold, Clock hysteresis
Available only for "NRZ Clocked".

Sets the middle threshold and the hysteresis for the clock source channel.

Remote command:
`SBUS<sb>:NRZC:CLK:THReshold` on page 1808
`SBUS<sb>:NRZC:CLK:HYSTeresis` on page 1808

Enable threshold, Enable hysteresis
Available only, if you have selected a source for the enable signal. See "Enable source" on page 699.

Sets the middle threshold and the hysteresis for the enable source channel.

Remote command:
`SBUS<sb>:NRZC:ENABle:THReshold` on page 1809
`SBUS<sb>:NRZC:ENABle:HYSTeresis` on page 1809

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566

14.9.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of all encoded bits.

Data format
See "Data format" on page 541.

14.9.2.4 NRZ symbols

There is no symbolic translation for NRZ protocols, because of the custom frame definitions.


14.9.3 NRZ filter

Access:

- "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked" > "Filter" tab
- "Menu" > "Apps" > "Protocol" tab > "NRZ Unclocked" > "Filter" tab

Although NRZ has a free format description according to section Section 14.9.4, "NRZ format configuration", on page 705, we provide a dynamic filter solution that can adapt to custom frames and fields in the decoded events.

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

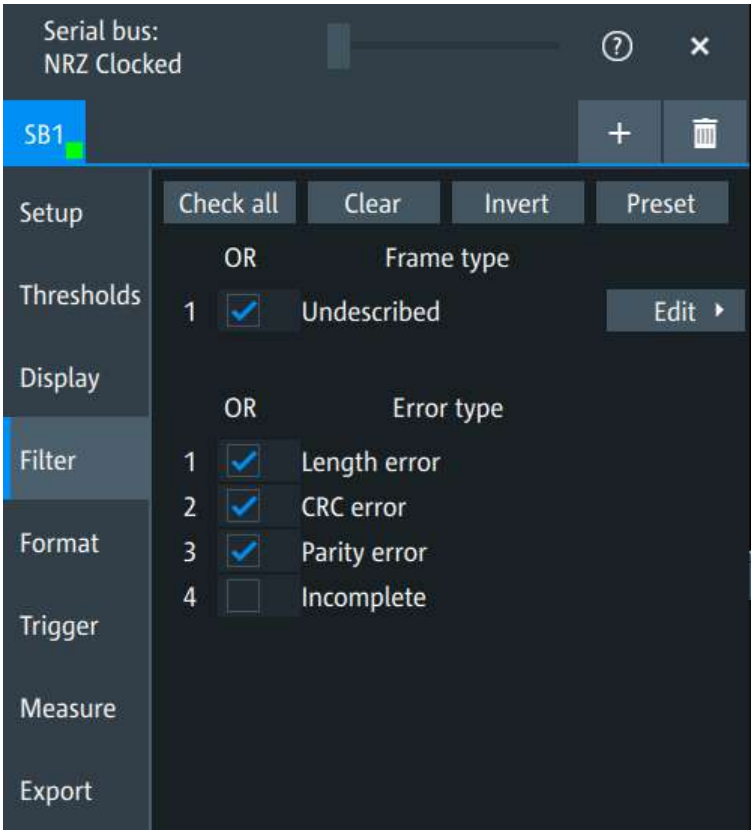

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:NRZC:FILTer:CHKall` on page 1810
`SBUS<sb>:NRZU:FILTer:CHKall` on page 1840
`SBUS<sb>:NRZC:FILTer:CLR` on page 1811
`SBUS<sb>:NRZU:FILTer:CLR` on page 1840
`SBUS<sb>:NRZC:FILTer:INVert` on page 1811
`SBUS<sb>:NRZU:FILTer:INVert` on page 1840
`SBUS<sb>:NRZC:FILTer:RST` on page 1811
`SBUS<sb>:NRZU:FILTer:RST` on page 1840

Enable
Enables the filtering on NRZ frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
SBUS<sb>:NRZC:FILTer:FRENable on page 1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:ENABle on page 1814
SBUS<sb>:NRZU:FILTer:FRENable on page 1843
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:ENABle on page 1843


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because the NRZ protocols support custom coding.

However, the frame formats that you define appear in this list, too. See Section 14.9.4, "NRZ format configuration", on page 705.

Edit
Opens a dialog to define the details of the selected frame.

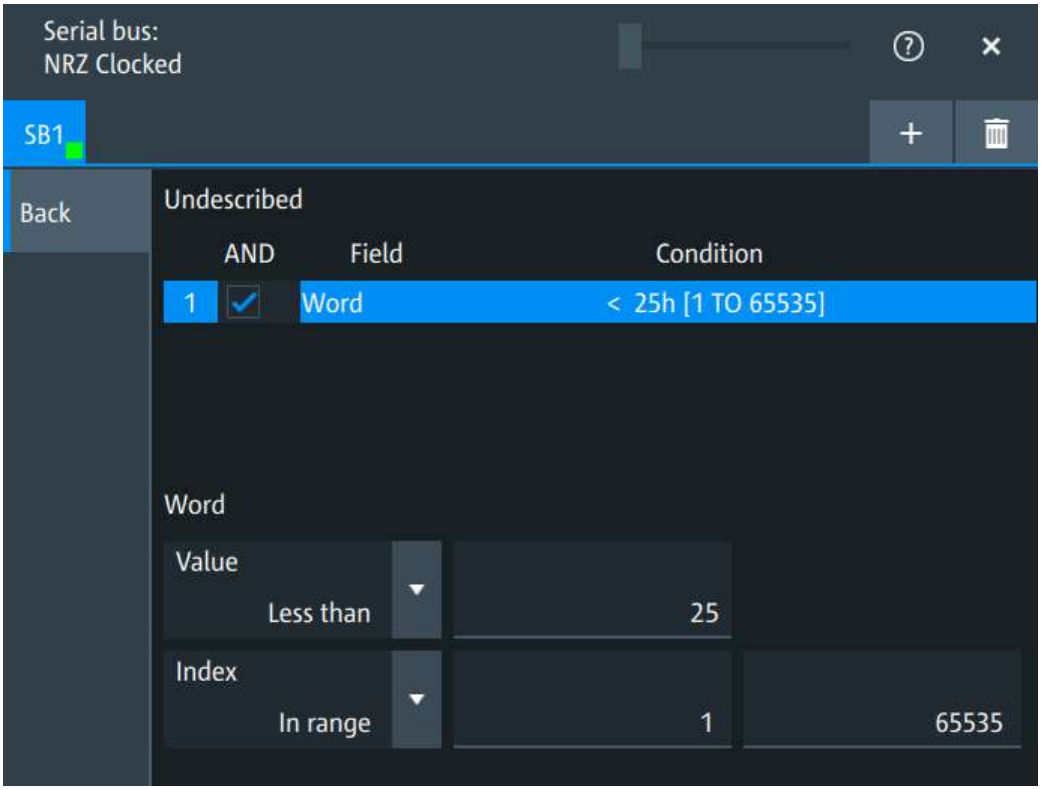

"Field" Enables the field type that you want to filter on for the selected frame. For the default "Undescribed" frame, the only available field type is "Word", which is the payload component of an undescribed frame. See "Frame type" on page 703.
However, the field formats that you define appear in this list, too. See Section 14.9.4, "NRZ format configuration", on page 705.

Remote command:
`SBUS<sb>:NRZC:FILTer:FIENable` on page 1813
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1813
`SBUS<sb>:NRZU:FILTer:FIENable` on page 1842
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1842

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:NRZC:FILTer:BIT` on page 1811
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1811
`SBUS<sb>:NRZU:FILTer:BIT` on page 1840
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1840

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:NRZC:FILTer:DMAX` on page 1812
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 1812
`SBUS<sb>:NRZU:FILTer:DMAX` on page 1841
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 1841
`SBUS<sb>:NRZC:FILTer:DMIN` on page 1812
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 1812
`SBUS<sb>:NRZU:FILTer:DMIN` on page 1842
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 1842
`SBUS<sb>:NRZC:FILTer:DOPerator` on page 1813
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 1813
`SBUS<sb>:NRZU:FILTer:DOPerator` on page 1842
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 1842

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:NRZC:FILTer:IMAX on page 1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1814
SBUS<sb>:NRZU:FILTer:IMAX on page 1843
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1843
SBUS<sb>:NRZC:FILTer:IMIN on page 1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1814
SBUS<sb>:NRZU:FILTer:IMIN on page 1844
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1844
SBUS<sb>:NRZC:FILTer:IOPerator on page 1815
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1815
SBUS<sb>:NRZU:FILTer:IOPerator on page 1844
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1844

Error type
Enables filtering on the selected error type.

The available error types are "Length error", "CRC error", "Parity error", "Incomplete".


Remote command:
SBUS<sb>:NRZC:FILTer:ERENable on page 1812
SBUS<sb>:NRZC:FILTer:ERRor<n>:ENABle on page 1812
SBUS<sb>:NRZU:FILTer:ERENable on page 1841
SBUS<sb>:NRZU:FILTer:ERRor<n>:ENABle on page 1841

14.9.4 NRZ format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked"or "NRZ Unclocked" > "Format".

See Section 14.1.5, "Format", on page 544.

Add Frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

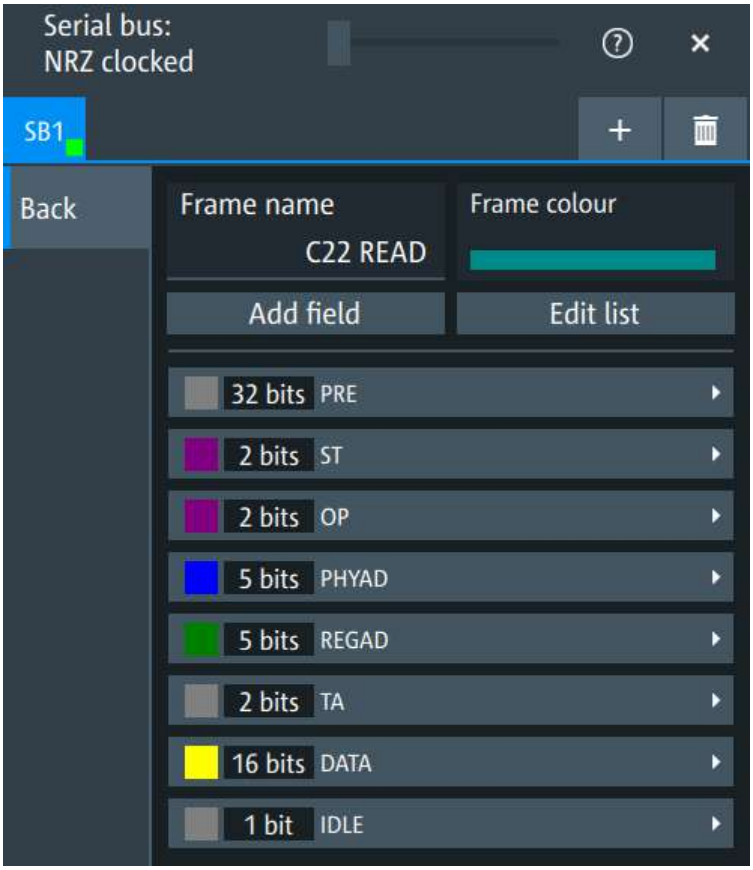

Remote command:
SBUS<sb>:NRZC:FORMat:ADDFrame on page 1816
SBUS<sb>:NRZU:FORMat:ADDFrame on page 1845

Edit List
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:NRZC:FORMat:CLR on page 1816
SBUS<sb>:NRZU:FORMat:CLR on page 1846
SBUS<sb>:NRZC:FORMat:FCOunt? on page 1817
SBUS<sb>:NRZU:FORMat:FCOunt? on page 1846

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:NRZC:FORMat:LOAD on page 1816
SBUS<sb>:NRZU:FORMat:LOAD on page 1845

Save as
Opens a dialog for saving your current list of frame formats to an `XML` file. Saved frame formats can support efficient and convenient working.

Remote command:
`SBUS<sb>:NRZC:FORMat:SAVE` on page 1816
`SBUS<sb>:NRZU:FORMat:SAVE` on page 1845

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.


Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:NAME` on page 1818
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:NAME` on page 1847

Frame Color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:COLor` on page 1818
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:COLor` on page 1847

Add Field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

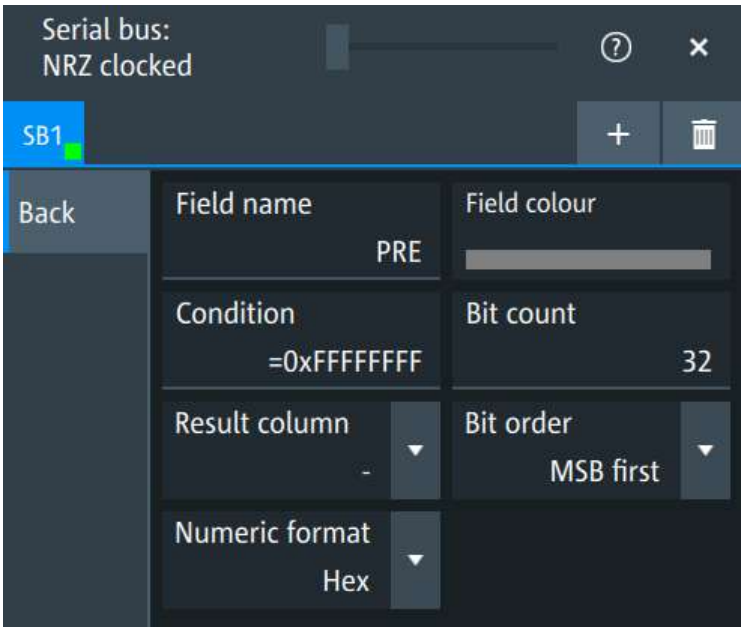

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:ADDField on page 1817
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:ADDField on page 1846

Edit List
Enables editing the field list. If enabled, you can delete a field description by clicking its "Delete" icon. In a list with several entries, you can move field descriptions up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLDCount? on page 1817
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLDCount? on page 1846

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1818
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1847

Field Color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1818
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1848

Condition
Defines a rule or pattern that a field must match to help identify a frame and/or validate mandatory values, e.g., CRC, ID. The condition must match the field's "Numeric format", "Bit order", and "Bit length".

The following conditions are implemented:

"=" (equal / pattern match)

Defines a bit pattern that the field must match. Allowed characters depend on the field's "Format", "Bit order", and "Bits". In binary format, for example, valid characters are "1", "0", "H" (high), and "L" (low).

The behavior depends on whether the frame contains a variable-length array [ ]:

- **No [ ] in the frame**: All fields using = act as keys to identify the frame type. The frame matches only if all such fields match.
- **Frame contains one [ ]**: If there is a "Variable Length Array" field, then the equal operator has two different functionalities, depending on the position of the equal-operator field within the frame format configuration:
  - **Field is before the [ ]**: The condition acts as a key to identify a frame type and matches starting bits.
  - **Field is immediately after the [ ]**: The condition acts as an array delimiter and matches the bits right after the variable-length data to terminate the array.
    Note: If a = field is after the [ ] but not immediately after it, decode results are unpredictable.

"[ ]" (array / repetition)

Defines the number of permissible repetitions of the field.

- **Fixed-length array [n] (n > 0)**: Repeat the field n times. Effective length is n × "Bit count". Elements appear individually in results/ honeycomb under the same name and color.
- **Variable-length array [ ]**: Repeat the field 0 or more times, so the frame length is unspecified and ends via an end-of-frame condition, which can be an operator or gap.
  Constraints:
  - Only one variable-length array is supported per frame (processing limitation).
  - A delimiter field must follow immediately after [ ] (unless [ ] is the last field) so the decoder can terminate the array.
  - Variable-length array elements appear in details as Name: 1, Name: 2, etc. The selected field shows as Name[n] where n is the detected size.
  - Exception: Consecutive variable arrays can form a repeated structure, e.g. A[] + B[] → ABABAB... until the end condition has been detected.
  - Check functions can be combined in dynamic arrays, e.g., B[] can check parity relative to A[] by index.

"crc5usb(n-m)" (CRC check, 5-bit, USB polynomial)

Verifies a 5-bit CRC over fields in the index range n to m. For example, use "crc5usb(1-5)" to check fields 1 through 4. If the range includes an array, all elements in the array are included.
If the CRC check fails, the CRC field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

"odd(n-m), even(n-m)" (parity check)	Checks odd/even parity over the index range n to m including the parity bit. If the parity check fails, the parity field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CONDition` on page 1819
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CONDition` on page 1848

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1819
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1848

Result column
Determines which field is displayed in which result column of the decode table.

- Selecting "-" (no index) means that the result is not displayed.
- Selecting "1", "2" or "3" means that the result is displayed in the 1st, 2nd or 3rd result column, that the decode table supports. Each of the three result columns has to be unique for each frame type. But to display unrelated information for different frame types, you can define different result columns.

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CLMN` on page 1821
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CLMN` on page 1850

Bit order
Selects, in order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1820
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1850

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1820
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1849

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1821
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1851

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1822
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1851

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1822
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1851

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1823
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1852

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1823
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1823
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1852
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1852

14.9.5 NRZ software trigger


14.9.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.9.5.2 Software trigger settings

Access:

- "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked" > "Trigger" tab > "Setup Software Trigger"
- "Menu" > "Apps" > "Protocol" tab > "NRZ Unclocked" > "Trigger" tab > "Setup Software Trigger"

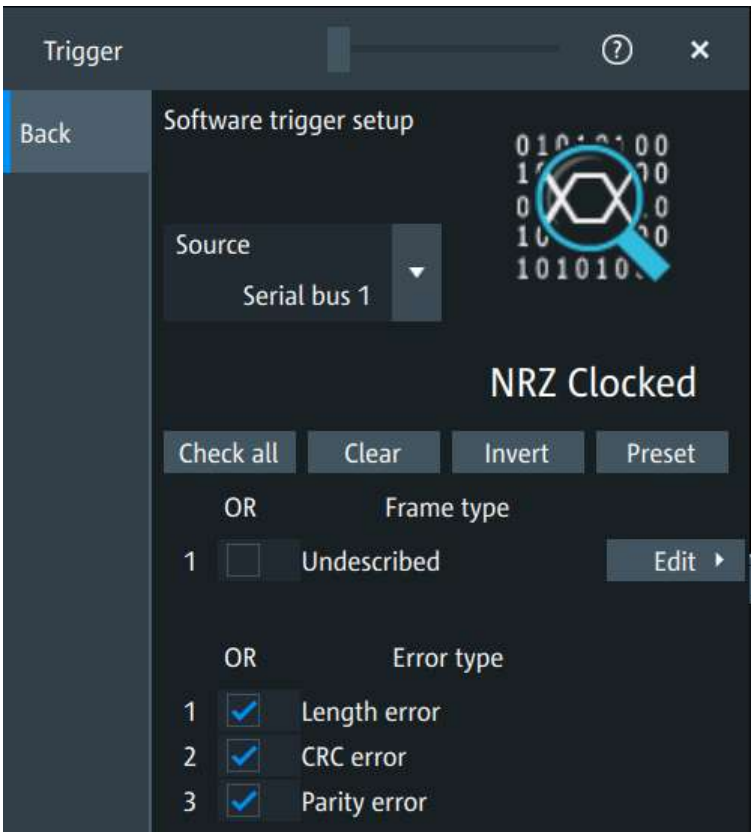

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:NRZC:CHKall` on page 1824
`TRIGger:SBSW:NRZU:CHKall` on page 1853
`TRIGger:SBSW:NRZC:CLR` on page 1824
`TRIGger:SBSW:NRZU:CLR` on page 1854
`TRIGger:SBSW:NRZC:INVert` on page 1825
`TRIGger:SBSW:NRZU:INVert` on page 1854
`TRIGger:SBSW:NRZC:RST` on page 1825
`TRIGger:SBSW:NRZU:RST` on page 1854

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.


For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because the NRZ protocols support custom coding.

However, the frame formats that you define appear in this list, too. See Section 14.9.4, "NRZ format configuration", on page 705.

Remote command:
`TRIGger:SBSW:NRZC:FRENable` on page 1825
`TRIGger:SBSW:NRZU:FRENable` on page 1854
`TRIGger:SBSW:NRZC:FRAMe<fr>:ENABle` on page 1825
`TRIGger:SBSW:NRZU:FRAMe<fr>:ENABle` on page 1854

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

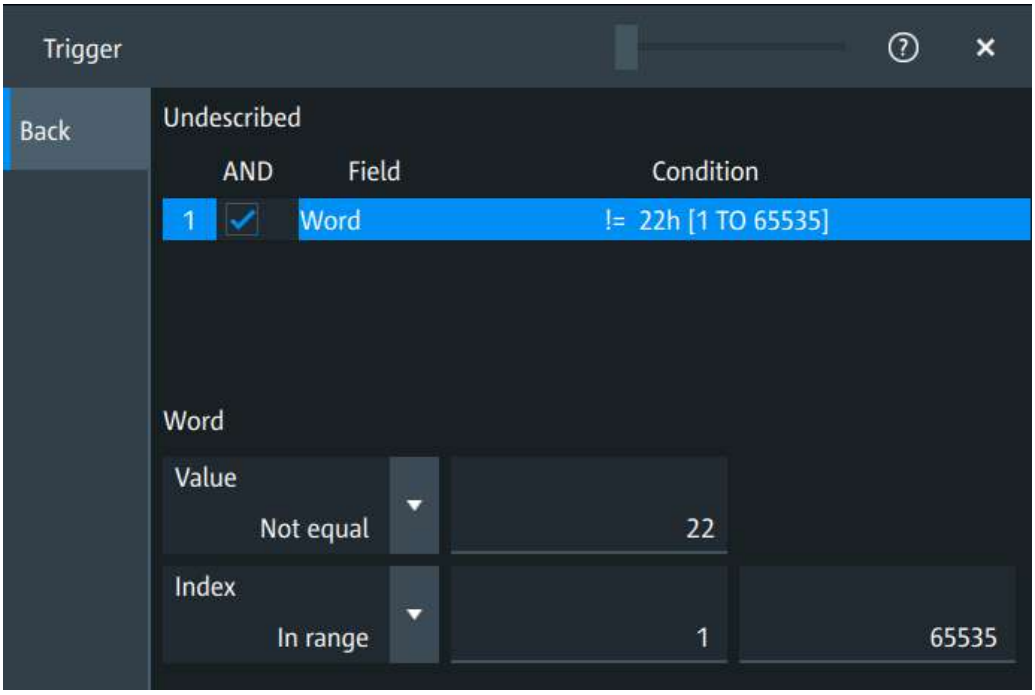

"Field" Enables the field type that you want to trigger on for the selected frame.
For the default "Undescribed" frame, the only available field type is "Word". See "Frame type" on page 714.
However, the field formats that you define appear in this list, too. See Section 14.9.4, "NRZ format configuration", on page 705.

Remote command:
`TRIGger:SBSW:NRZC:FIENable` on page 1827
`TRIGger:SBSW:NRZU:FIENable` on page 1856
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:ENABle` on page 1827
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:ENABle` on page 1856

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:NRZC:BIT` on page 1825
`TRIGger:SBSW:NRZU:BIT` on page 1854
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:BIT` on page 1825
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:BIT` on page 1854

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:NRZC:DMAX` on page 1826
`TRIGger:SBSW:NRZU:DMAX` on page 1855
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMAX` on page 1826
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMAX` on page 1855
`TRIGger:SBSW:NRZC:DMIN` on page 1826
`TRIGger:SBSW:NRZU:DMIN` on page 1855
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMIN` on page 1826
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMIN` on page 1855
`TRIGger:SBSW:NRZC:DOPerator` on page 1826
`TRIGger:SBSW:NRZU:DOPerator` on page 1856
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator` on page 1826
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator` on page 1856

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:NRZC:IMAX on page 1827
TRIGger:SBSW:NRZU:IMAX on page 1856
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMAX on page 1827
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMAX on page 1856
TRIGger:SBSW:NRZC:IMIN on page 1828
TRIGger:SBSW:NRZU:IMIN on page 1857
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMIN on page 1828
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMIN on page 1857
TRIGger:SBSW:NRZC:IOPerator on page 1828
TRIGger:SBSW:NRZU:IOPerator on page 1857
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator on page 1828
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator on page 1857

Error type
Enables triggering on the selected error type.

The available error types are "Length error", "CRC error", "Parity error".

Remote command:
TRIGger:SBSW:NRZC:ERENable on page 1828
TRIGger:SBSW:NRZU:ERENable on page 1857
TRIGger:SBSW:NRZC:ERRor<m>:ENABle on page 1828
TRIGger:SBSW:NRZU:ERRor<m>:ENABle on page 1857

14.9.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.9.7 NRZ decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

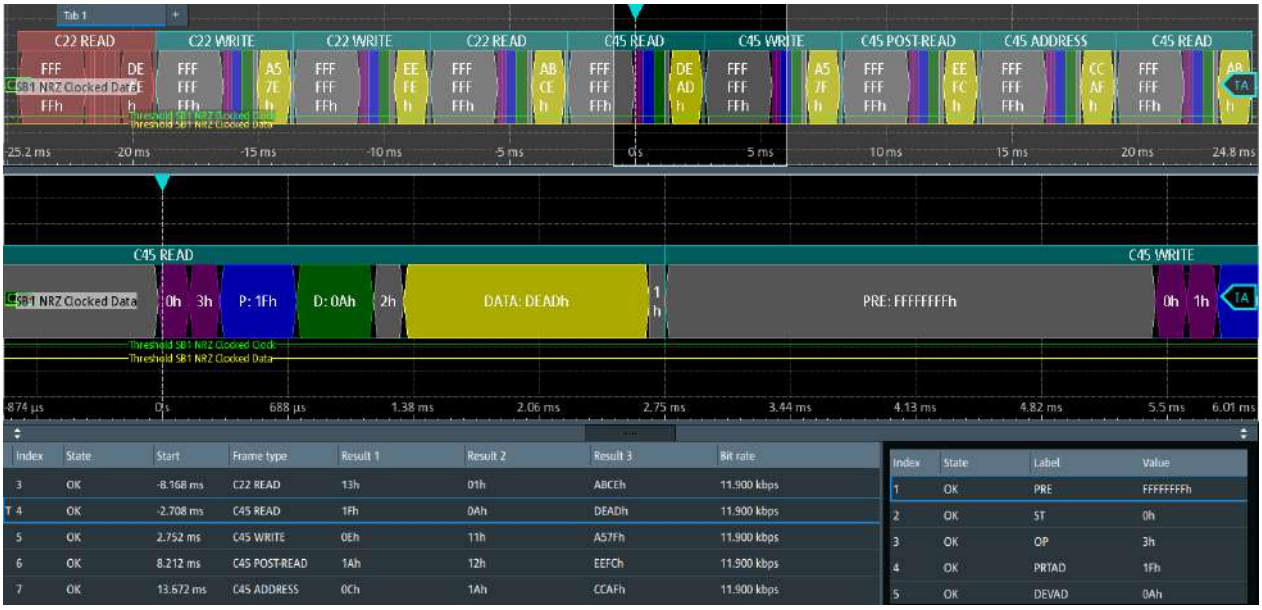


Figure 14-25: Decoded NRZ clocked signal

The decode results table contains information about all decoded frames.

Table 14-14: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Frame type	The type of the frame
Result	Data displayed in the 1st, 2nd and 3rd results column. For "undescribed" frames (see Frame type), you can select the data format in the "Display" tab. For other frames, the "Format" table controls the format of each field. See Section 14.9.4, "NRZ format configuration", on page 705.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-15: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.9.5, "Decode results", on page 1829 (NRZ clocked) and Section 18.18.10.5, "Decode results", on page 1858 (NRZ unclocked).

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example NRZC export file

```
Index,Start,Stop,State,Type,Result 1,Result 2,Result 3,Bit-rate
1,-0.019539,-0.014079,'OK','C22 WRITE',0Eh,11h,A57Eh,11900
2,-0.014079,-0.008619,'OK','C22 WRITE',1Ah,12h,EEFEh,11900
3,-0.008619,-0.00315997,'OK','C22 READ',13h,01h,ABCEh,11910
4,-0.00315997,0.0023,'OK','C45 READ',1Fh,0Ah,DEADh,11900
5,0.0023,0.0077608,'OK','C45 WRITE',0Eh,11h,A57Fh,11900
6,0.0077608,0.013221,'OK','C45 POST-READ',1Ah,12h,EEFCh,11900
7,0.013221,0.018681,'OK','C45 ADDRESS',0Ch,1Ah,CCAFh,11900
8,0.018681,0.0241433,'OK','C45 READ',13h,01h,ABCDh,11900

Details frame 1
Index,Label,State,Value
1,'PRE','OK',FFFFFFFFh
2,'ST','OK',1h
3,'OP','OK',1h
4,'PHYAD','OK',0Eh
5,'REGAD','OK',11h
6,'TA','OK',2h
7,'DATA','OK',A57Eh
8,'IDLE','OK',1h

Details frame 2
Index,Label,State,Value
1,'PRE','OK',FFFFFFFFh
2,'ST','OK',1h
3,'OP','OK',1h
4,'PHYAD','OK',1Ah
5,'REGAD','OK',12h
6,'TA','OK',2h
7,'DATA','OK',EEFEh
8,'IDLE','OK',1h
```

(...)

14.10 Manchester (option R&S MXO5-K510)

Manchester is a simple protocol for enhanced data integrity and reliability in serial bus communication. It is based on a self-clocked coding scheme also known as binary phase-shift keying (BPSK, or phase encoding, PE). Manchester is used in protocols such as ProfiBus (IEC 61158), DALI (Digital Addressable Lighting Interface, IEC 60929 and IEC 62386), MVB (Multifunction Vehicle Bus, part of IEC 61375 for Train Communication Networks, TCN), and Ethernet 10BASE-T (10 Mbit/s, IEEE 802.3i®).

- Manchester basics 719
- Manchester configuration 721
- Manchester filter 726
- Manchester format configuration 729
- Manchester software trigger 734
- Measure 738
- Manchester decode results 738

14.10.1 Manchester basics

There are two opposing data polarity conventions:

- In Manchester coding (as per G. E. Thomas), a logical 0 is expressed by a low-to-high transition, while a logical 1 is represented by a high-to-low transition. These line voltage transitions occur at the middle of each bit period.
- In "Manchester II" coding (as per IEEE 802.3), the value of each bit is the Boolean exclusive disjunction (XOR) of the original data value and the clock value. Hence, it is equivalent to inverted Manchester coding: a logical 0 is represented by a high-to-low transition, a logical 1 is represented by a low-to-high transition.

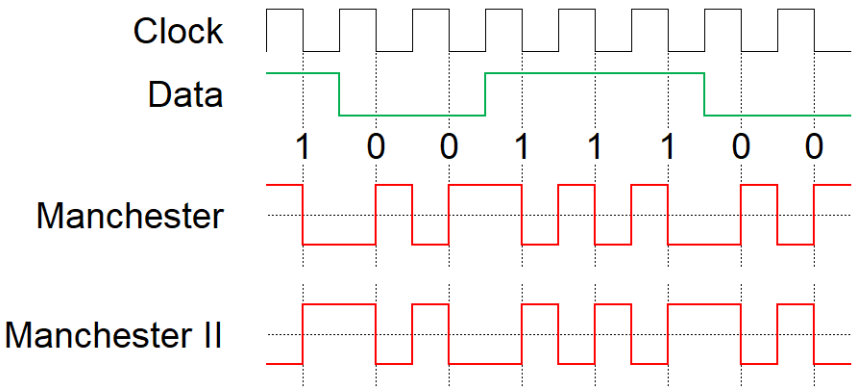


Figure 14-26: Data polarity conventions for Manchester and Manchester II

Transitions at the start of a bit period are overhead and do not represent data. Because of this overhead, Manchester coding requires twice the bandwidth of the related NRZ code.

However, the frequent transitions at the beginning and middle of bit periods support clock recovery. All transitions are directly proportional to the clock rate, allowing the signal to be self-clocked. Unless idle, the voltage level is either high or low: it does not return to a zero voltage level between bits.

14.10.1.1 Special features of Manchester coding

In practical protocols, Manchester coding appears in many variations, often employing deliberate coding violations to encode special waveform features, such as unambiguous synchronization and termination patterns. To adapt to these specific Manchester implementations and handle ambiguous signals, the option R&S MXO5-K510 uses a combination of automatic algorithms and user configurable parameters.

Quaternary Symbols

The software supports not just traditional binary symbols "0" and "1", but also arbitrary violation waveforms that use two additional symbols, yielding a total of four valid "quaternary bit" values. The two additional violation symbols are "H" (high) and "L" (low). Values of "H" correspond to a waveform lacking a transition in the center of the bit, with a physical high voltage state. Similarly, "L" violations also lack a center transition, but have a physical low voltage state. Most Manchester synchronization and termination conventions, even those containing violations, may be expressed as sequences of these four symbols. R&S MXO5-K510 uses the quaternary notation to support Manchester patterns in the honeycomb display and to describe synchronization and termination patterns in the frame description table.

Idle Conditions

The state of the signal line in between messages is the idle condition. Manchester appears in practical standards with varying idle conditions: it can idle at the high, low, or middle voltage state. High and low idle states correspond to "biphase" Manchester, while the middle voltage (often ground) adds a third state to become "ternary" Manchester. Using ternary Manchester, option R&S MXO5-K510 can usually establish the gaps between messages automatically. Using binary Manchester, the software has no way to automatically discriminate an idling bus from monotonic sequences of "H" or "L" violations. For these biphase situations, R&S MXO5-K510 offers a "Gap Time" detection feature, which allows to distinguish long intervals of non-transitions between bus idling and sequences of violations. Other differences between biphase and ternary Manchester are managed automatically by the software, with no user input required.

Edge Conventions

Most Manchester encodings establish the beginning of the first bit by a first transition, hence an "overhead" edge. The center of the bit is then marked by a second transition, which is a "sampling" edge. Some Manchester implementations, however, sample the first bit on the first edge. The option R&S MXO5-K510 attempts to automatically detect this situation. Unfortunately, it is possible to trick the algorithm with waveforms that

contain many (legitimate) violations. In these situations, the user can force a "First Edge" or "Second Edge" convention for handling edges. Edge sampling according to the "First Edge" convention is more likely to appear in biphase Manchester, but the software also supports this setting for ternary Manchester situations.

Bit Rate

Typically, a single bit rate is clearly specified in Manchester protocols; however, some implementations use a variable bit rate. If you do not specify it in the "Setup" tab, R&S MXO5-K510 by default automatically estimates it. However, with an estimated (hence, undefined) bit rate, fundamental ambiguities are possible in Manchester. In particular, sequences like "0000", "1111", "0101", "1010", and many situations involving "H" and "L" violations, cannot be decoded without it. The situation becomes even less defined with eventual Manchester coding violations. In these situations, you must provide a fixed ""Bit rate"" setting to bypass the software's estimation algorithm.

14.10.2 Manchester configuration

14.10.2.1 Manchester configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Setup".

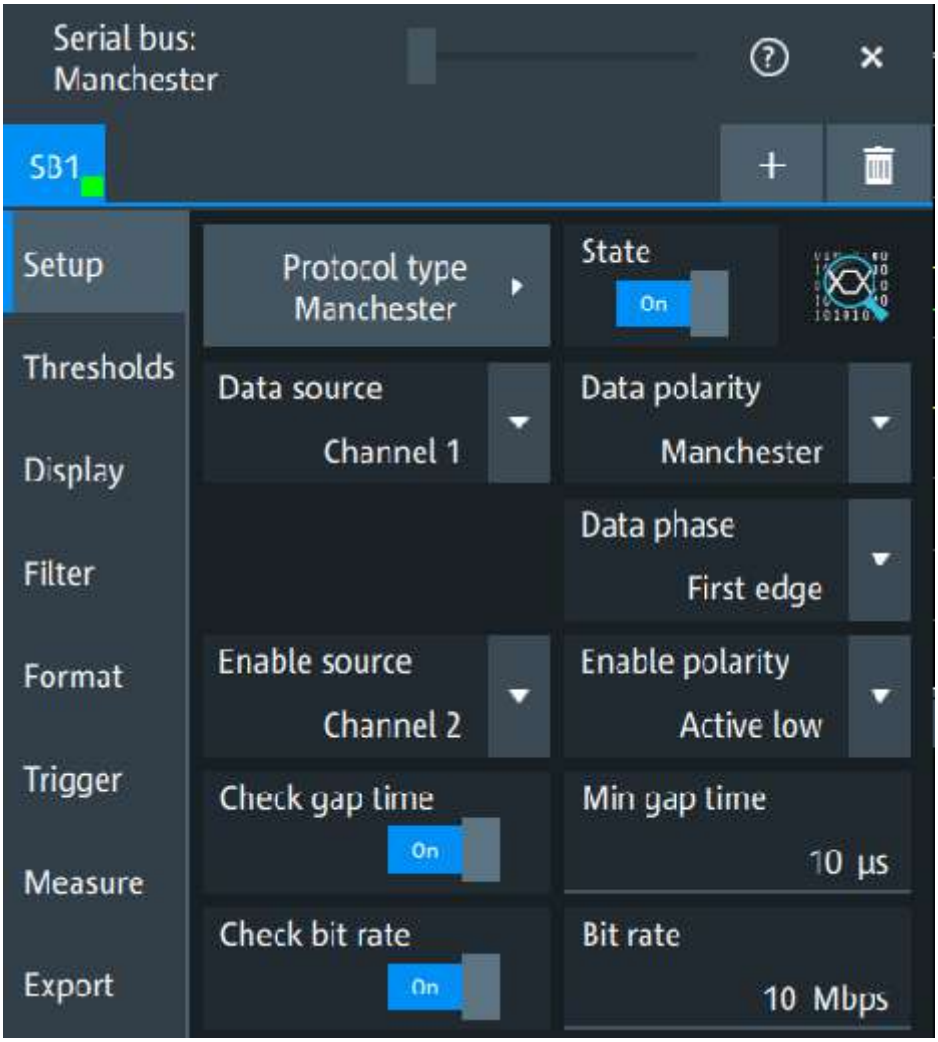


Figure 14-27: Setup dialog, Data polarity selects "Manchester" or "Manchester II"

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

Data source
Selects the source for the data signal.

Remote command:
SBUS<sb>:MANCh:DATA:SOURce on page 1864

Data polarity
Selects the polarity for the data signal, and hence the data representation convention, see Figure 14-26.

- "Manchester" (as per G. E. Thomas):
  – Low-to-high transition for logical 0
  – High-to-low transition for logical 1
- "Manchester II" (as per IEEE 802.3):
  – High-to-low transition for logical 0
  – Low-to-high transition for logical 1

Remote command:
SBUS<sb>:MANCh:DATA:POLarity on page 1864

Data phase
Defines the phase for the Manchester data signal. The available settings are:

- "First edge": the decoder captures data bits on the clock's rising edge (low-to-high transition).
  Select this option, if the 1st transition is no overhead and needs to be sampled.
- "Second edge": the decoder captures data bits on the clock's falling edge (high-to-low transition).
  Select this option, if the 1st edge is only an overhead transition from the idle state.

Note: The requirement to specify "First edge" or "Second edge" has the following background: An edge is always a transition from high to low or from low to high. In Manchester coding, however, if the signal comes from the idle state, there is right before the first valid edge always an overhead transition from idle to high or from idle to low. Some standards can regard this as a valid transition. Defining the phase avoids this potential ambiguity.
See also Special features of Manchester coding.

Remote command:
SBUS<sb>:MANCh:DATA:PHASe on page 1865

Enable source
Selects the source of the enable signal.

If you select any source other than "None", the "Enable polarity" becomes available, which selects the polarity of the enable signal.

Remote command:
SBUS<sb>:MANCh:ENABle:SOURce on page 1865
SBUS<sb>:MANCh:ENABle:POLarity on page 1865

Check gap time
Enables the detection of the minimum idle time between two frames during decoding. Also enables setting the "Min gap time". Optionally, if you set it, the decoder considers any longer idle time a gap. A known minimum gap time helps the decoder with frame synchronization.

Remote command:
`SBUS<sb>:MANCh:MINGap:SELect` on page 1866
`SBUS<sb>:MANCh:MINGap:WIDTh` on page 1866

Check bit rate
Enables setting the "Bit rate".
- If you define a bit rate, it is used for triggering and decoding.
- If you disable this option, the decoder calculates the bit rate.

Remote command:
`SBUS<sb>:MANCh:BITRate:SELect` on page 1867
`SBUS<sb>:MANCh:BITRate:WIDTh` on page 1867

14.10.2.2 Thresholds

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Thresholds"

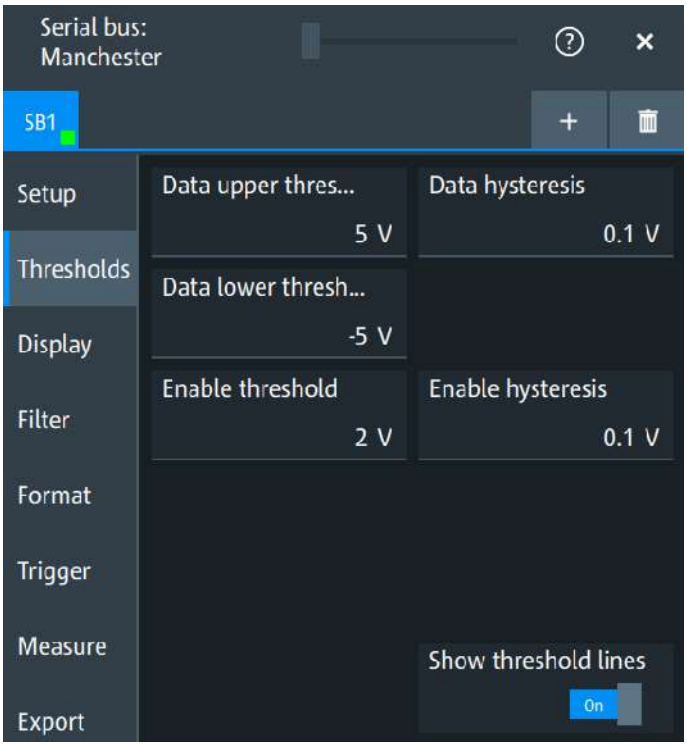


Figure 14-28: Thresholds dialog

Enter the values directly in the fields.

Upper threshold, Lower threshold, Hysteresis
Sets the upper and lower threshold and the hysteresis for the data source channel.

Remote command:
SBUS<sb>:MANCh:DATA:THUPper on page 1867
SBUS<sb>:MANCh:DATA:THLower on page 1867
SBUS<sb>:MANCh:DATA:HYSTeresis on page 1868

Enable threshold, Enable hysteresis
Available only, if you have selected a source for the enable signal. See "Enable source" on page 723.

Sets the middle threshold and the hysteresis for the enable source channel.

Remote command:
SBUS<sb>:MANCh:ENABle:THReshold on page 1868
SBUS<sb>:MANCh:ENABle:HYSTeresis on page 1868

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.10.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of all encoded bits.

Data format
See "Data format" on page 541.

14.10.2.4 Manchester symbols


There is no symbolic translation for the Manchester protocol, because of the custom frame definitions. See Section 14.10.4, "Manchester format configuration", on page 729.

14.10.3 Manchester filter

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Filter" tab

Although Manchester has a free format description according to section Section 14.10.4, "Manchester format configuration", on page 729, we provide a dynamic filter solution that can adapt to custom frames and fields in the decoded events.

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

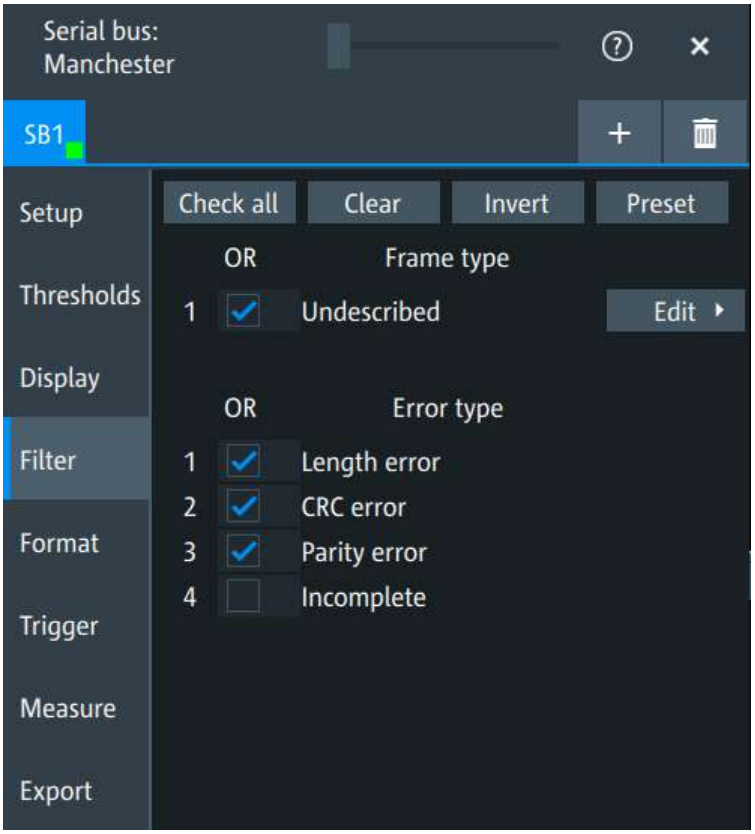

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:MANCh:FILTer:CHKall` on page 1870
`SBUS<sb>:MANCh:FILTer:CLR` on page 1870
`SBUS<sb>:MANCh:FILTer:INVert` on page 1870
`SBUS<sb>:MANCh:FILTer:RST` on page 1870

Enable
Enables the filtering on Manchester frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
`SBUS<sb>:MANCh:FILTer:FRENable` on page 1873
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:ENABle` on page 1873


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because the Manchester protocol supports custom coding.

However, the frame formats that you define appear in this list, too. See Section 14.10.4, "Manchester format configuration", on page 729.

Edit
Opens a dialog to define the details of the selected frame.

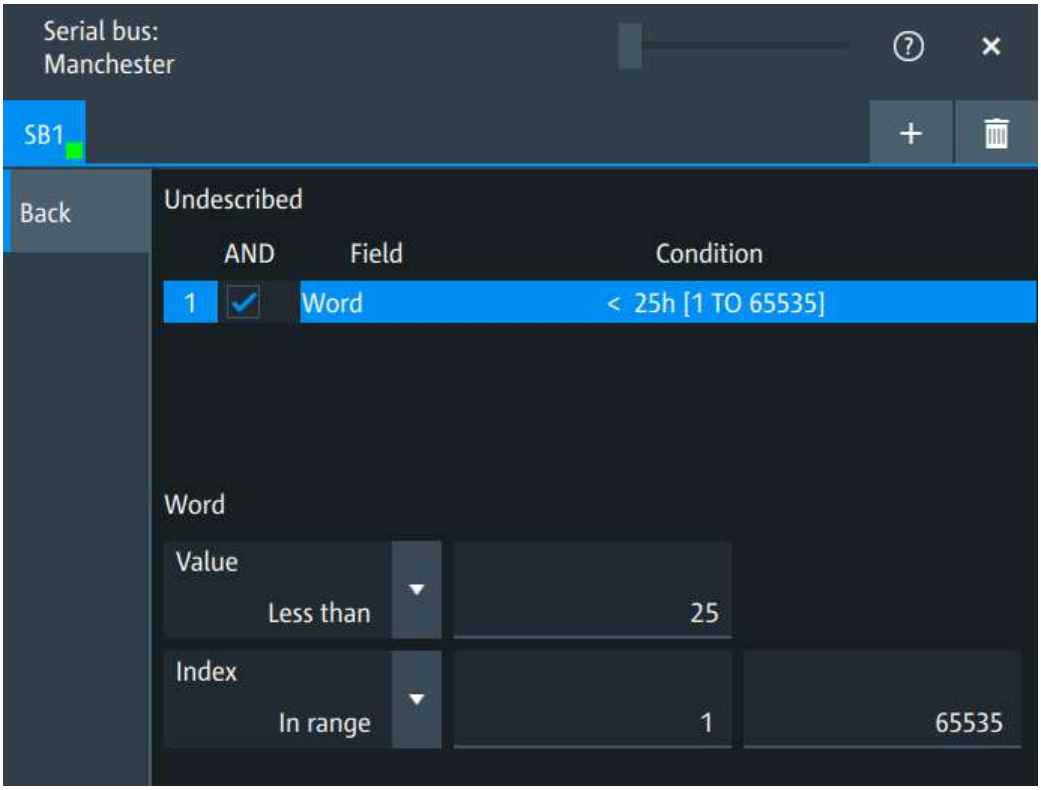

"Field" Enables the field type that you want to filter on for the selected frame. For the default "Undescribed" frame, the only available field type is "Word", which is the payload component of an undescribed frame. See "Frame type" on page 727.
However, the field formats that you define appear in this list, too. See Section 14.10.4, "Manchester format configuration", on page 729.

Remote command:
`SBUS<sb>:MANCh:FILTer:FIENable` on page 1872
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1872

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:MANCh:FILTer:BIT` on page 1871
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1871

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:MANCh:FILTer:DMAX` on page 1871
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 1871
`SBUS<sb>:MANCh:FILTer:DMIN` on page 1872
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 1872
`SBUS<sb>:MANCh:FILTer:DOPerator` on page 1872
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 1872

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`SBUS<sb>:MANCh:FILTer:IMAX` on page 1873
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMAX` on page 1873
`SBUS<sb>:MANCh:FILTer:IMIN` on page 1874
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMIN` on page 1874
`SBUS<sb>:MANCh:FILTer:IOPerator` on page 1874
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator` on page 1874

Error type
Enables filtering on the selected error type.

The available error types are "Length error", "CRC error", "Parity error", "Incomplete".


Remote command:
`SBUS<sb>:MANCh:FILTer:ERENable` on page 1871
`SBUS<sb>:MANCh:FILTer:ERRor<n>:ENABle` on page 1871

14.10.4 Manchester format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Format".

See Section 14.1.5, "Format", on page 544.

Add Frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

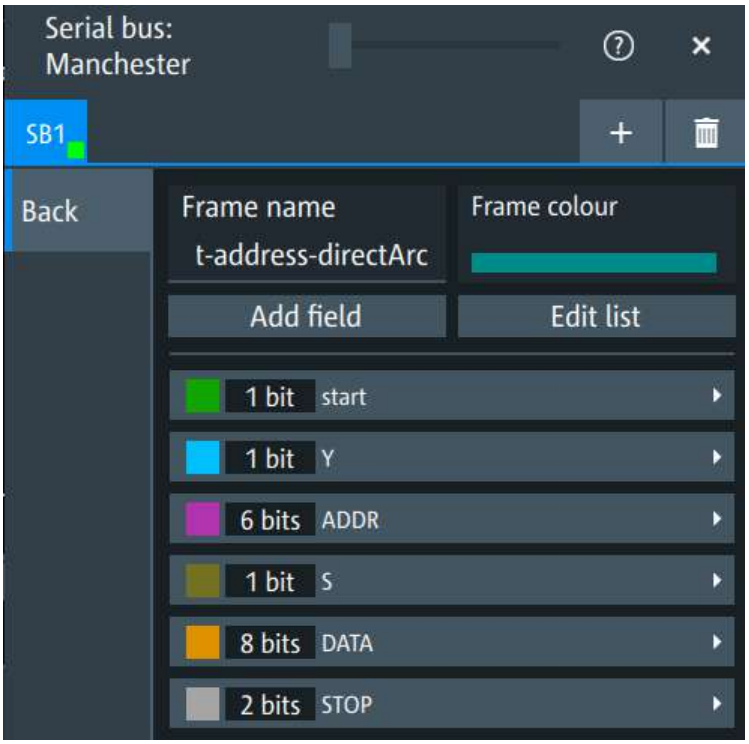

Remote command:
SBUS<sb>:MANCh:FORMat:ADDFrame on page 1875

Edit List
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:MANCh:FORMat:CLR on page 1876
SBUS<sb>:MANCh:FORMat:FCOunt? on page 1876

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:MANCh:FORMat:LOAD on page 1875

Save as
Opens a dialog for saving your current list of frame formats to an `XML` file. Saved frame formats can support efficient and convenient working.

Remote command:
`SBUS<sb>:MANCh:FORMat:SAVE` on page 1875

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.


Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:NAME` on page 1877

Frame Color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:COLor` on page 1877

Add Field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

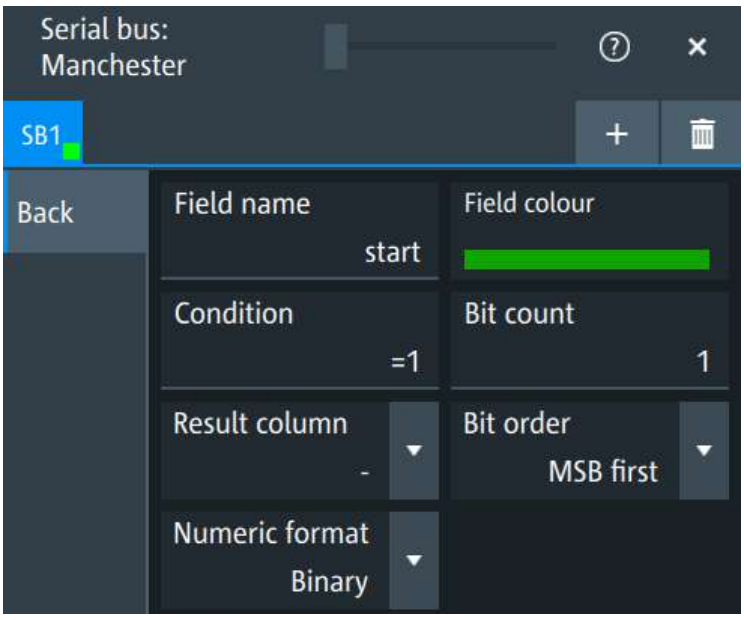

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:ADDField` on page 1876

Edit List
Enables editing the field list. If enabled, you can delete a field description by clicking its "Delete" icon. In a list with several entries, you can move field descriptions up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLDCount?` on page 1876

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:NAME` on page 1877

Field Color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:COLor` on page 1878

Condition
Defines a rule or pattern that a field must match to help identify a frame and/or validate mandatory values, e.g., CRC, ID. The condition must match the field's "Numeric format", "Bit order", and "Bit length".

The following conditions are implemented:

"=" (equal / pattern match) — Defines a bit pattern that the field must match. Allowed characters depend on the field's "Format", "Bit order", and "Bits". In binary format, for example, valid characters are "1", "0", "H" (high), and "L" (low).

The behavior depends on whether the frame contains a variable-length array [ ]:

- **No [ ] in the frame**: All fields using = act as keys to identify the frame type. The frame matches only if all such fields match.
- **Frame contains one [ ]**: If there is a "Variable Length Array" field, then the equal operator has two different functionalities, depending on the position of the equal-operator field within the frame format configuration:
  - **Field is before the [ ]**: The condition acts as a key to identify a frame type and matches starting bits.
  - **Field is immediately after the [ ]**: The condition acts as an array delimiter and matches the bits right after the variable-length data to terminate the array.
    Note: If a = field is after the [ ] but not immediately after it, decode results are unpredictable.

"[ ]" (array / repetition)
Defines the number of permissible repetitions of the field.

- **Fixed-length array [n] (n > 0)**: Repeat the field n times. Effective length is n × "Bit count". Elements appear individually in results/ honeycomb under the same name and color.
- **Variable-length array [ ]**: Repeat the field 0 or more times, so the frame length is unspecified and ends via an end-of-frame condition, which can be an operator or gap.
  Constraints:
  – Only one variable-length array is supported per frame (processing limitation).
  – A delimiter field must follow immediately after [ ] (unless [ ] is the last field) so the decoder can terminate the array.
  – Variable-length array elements appear in details as Name: 1, Name: 2, etc. The selected field shows as Name[n] where n is the detected size.
  – Exception: Consecutive variable arrays can form a repeated structure, e.g. A[] + B[] → ABABAB... until the end condition has been detected.
  – Check functions can be combined in dynamic arrays, e.g., B[] can check parity relative to A[] by index.

"crc5usb(n-m)" (CRC check, 5-bit, USB polynomial)
Verifies a 5-bit CRC over fields in the index range n to m. For example, use "crc5usb(1-5)" to check fields 1 through 4. If the range includes an array, all elements in the array are included.
If the CRC check fails, the CRC field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

"odd(n-m), even(n-m)" (parity check)
Checks odd/even parity over the index range n to m including the parity bit.
If the parity check fails, the parity field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CONDition` on page 1878

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100

- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1878

Result column
Determines which field is displayed in which result column of the decode table.

- Selecting "-" (no index) means that the result is not displayed.
- Selecting "1", "2" or "3" means that the result is displayed in the 1st, 2nd or 3rd result column, that the decode table supports. Each of the three result columns has to be unique for each frame type. But to display unrelated information for different frame types, you can define different result columns.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CLMN` on page 1880

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1880

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)
  - "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  - "=5X12": invalid
  - "=1H33": invalid

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1879

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1881

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1881

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1881

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1882

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1882
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1882


14.10.5 Manchester software trigger

14.10.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.10.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Trigger" tab > "Setup Software Trigger"

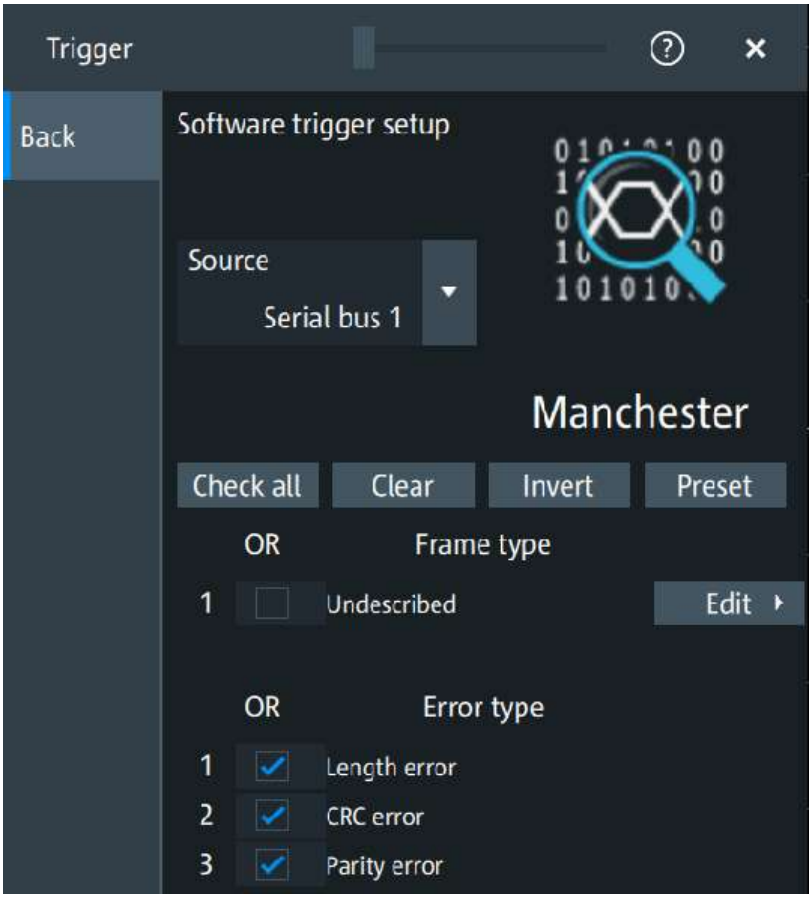

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:MANCh:CHKall` on page 1883
`TRIGger:SBSW:MANCh:CLR` on page 1884

TRIGger:SBSW:MANCh:INVert on page 1884
TRIGger:SBSW:MANCh:RST on page 1884

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.


For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because the Manchester protocol supports custom coding.

However, the frame formats that you define appear in this list, too. See Section 14.10.4, "Manchester format configuration", on page 729.

Remote command:
TRIGger:SBSW:MANCh:FRENable on page 1884
TRIGger:SBSW:MANCh:FRAMe<fr>:ENABle on page 1884

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

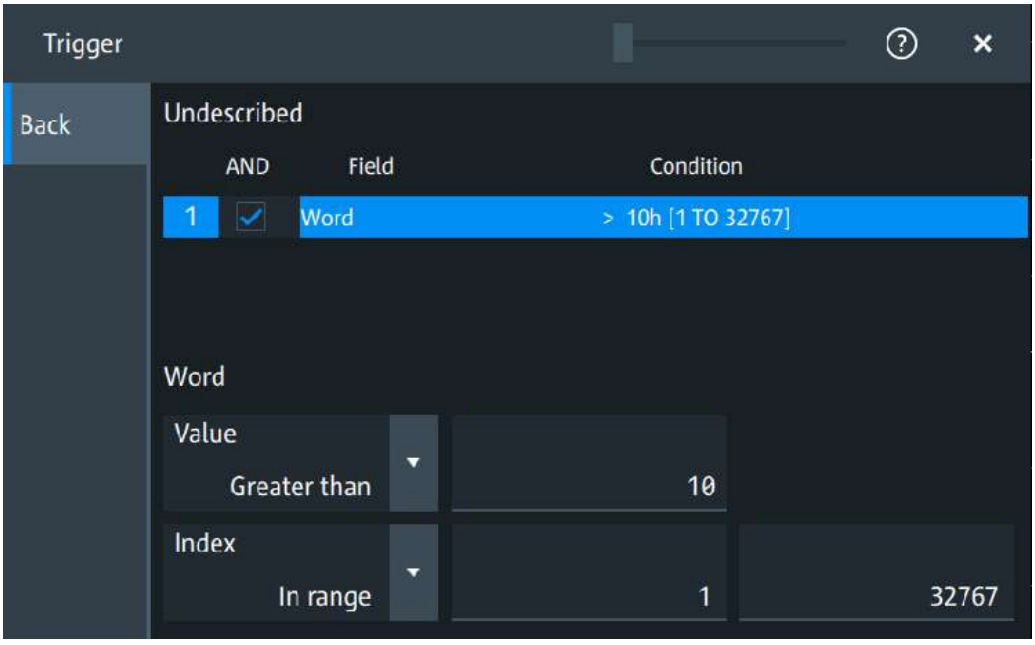

"Field" Enables the field type that you want to trigger on for the selected frame.
For the default "Undescribed" frame, the only available field type is "Word". See "Frame type" on page 736.
However, the field formats that you define appear in this list, too. See Section 14.10.4, "Manchester format configuration", on page 729.

Remote command:
`TRIGger:SBSW:MANCh:FIENable` on page 1886
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:ENABle` on page 1886

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:MANCh:BIT` on page 1884
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:BIT` on page 1884

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:MANCh:DMAX` on page 1885
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMAX` on page 1885
`TRIGger:SBSW:MANCh:DMIN` on page 1885
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMIN` on page 1885
`TRIGger:SBSW:MANCh:DOPerator` on page 1886
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator` on page 1886

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:MANCh:IMAX` on page 1886
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMAX` on page 1886
`TRIGger:SBSW:MANCh:IMIN` on page 1887
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMIN` on page 1887
`TRIGger:SBSW:MANCh:IOPerator` on page 1887
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator` on page 1887

Error type
Enables triggering on the selected error type.

The available error types are "Length error", "CRC error", "Parity error".

Remote command:
`TRIGger:SBSW:MANCh:ERENable` on page 1887
`TRIGger:SBSW:MANCh:ERRor<m>:ENABle` on page 1887

14.10.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.10.7 Manchester decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.



Figure 14-29: Decoded Manchester signal

The decode results table contains information about all decoded frames.

Table 14-16: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Frame type	The type of the frame
Result	Data displayed in the 1st, 2nd and 3rd results column. For "undescribed" frames (see Frame type), you can select the data format in the "Display" tab. For other frames, the "Format" table controls the format of each field. See Section 14.10.4, "Manchester format configuration", on page 729.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-17: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.11.5, "Decode results", on page 1888.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example Manchester export file

```
Index,State,Type,Result 1,Result 2,Result 3,Bit-rate
1,'OK','Cmd/Stat',3h,049h,1h,14280
2,'OK','Data',4h,1234h,0h,14290
3,'OK','Data',4h,5678h,1h,14280
4,'OK','Data',4h,9ABCh,0h,14280
5,'OK','Data',4h,DEF0h,1h,14280
6,'OK','Cmd/Stat',3h,000h,0h,14270
7,'OK','Cmd/Stat',3h,083h,1h,14280
8,'PAR','Cmd/Stat',3h,083h,0h,14280

Details frame 1
Index,Label,State,Value
1,'Sync','OK',3h
2,'RTA','OK',01h
3,'Info','OK',049h
4,'P','OK',1h

Details frame 2
Index,Label,State,Value
1,'Sync','OK',4h
2,'Data','OK',1234h
3,'P','OK',0h
```

(...)

14.11 8b/10b (option R&S MXO5-K510)

The 8b/10b coding scheme is used for high-speed serial data transmission, used by different standards, like Fibre Channel, PCIe®, DVI and USB 3.0. Also the MIPI UniPro M-PHY interface in smartphones and display interfaces such as HDMI™ use 8b/10b encoding, as do base stations based on the Common Public Radio Interface (CPRI).

The MXO 5 can decode differential and single-ended 8b/10b signals. Furthermore, you can search the decoded data to isolate data contents and error states such as disparity violations.

You can also trigger on defined data contents and on error states.

- About the 8b/10b code....740
- 8b/10b configuration....741
- 8b/10b filter....743
- 8b/10b format configuration....746
- 8b/10b software trigger....752
- Measure....755
- 8b/10b decode results....756

14.11.1 About the 8b/10b code

The 8b10b is a code where an 8-bit parallel data input is mapped into a 10-bit output. This code achieves a DC-balance and bounded disparity and simultaneously allows a reasonable clock recovery.

In the coding scheme, the original 8 bits are split into two blocks, three most significant bits and five least significant bits, see Figure 14-30. After that the 3-bit block is encoded into 4 bits and the 5-bit block into 6 bits. The 4-bit and the 6-bit blocks are then combined into a 10-bit.

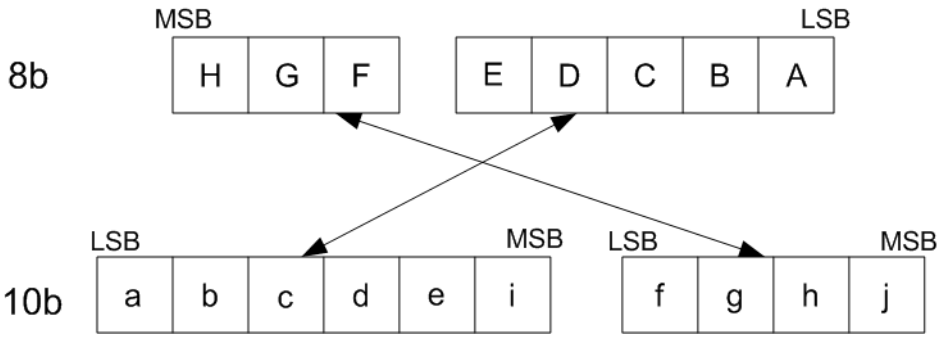


Figure 14-30: Coding scheme of the 8b/10b

The additional two bits I and j that join the stream are variable and ensure the running disparity.

There are two types of characters used in the 8b/10b coding, special characters Kx.y and data characters Dx.y. x denotes the decimal value of EDCBA and is within the range from 0 to 31. y denotes the decimal value of HGF and is within the range 0 to 7.

Supported frame types


The only frame type available by default is "Undescribed", because this protocol supports custom coding.

If you have created frame formats, those types also appear in this list.

14.11.2 8b/10b configuration

14.11.2.1 8b/10b configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Setup".

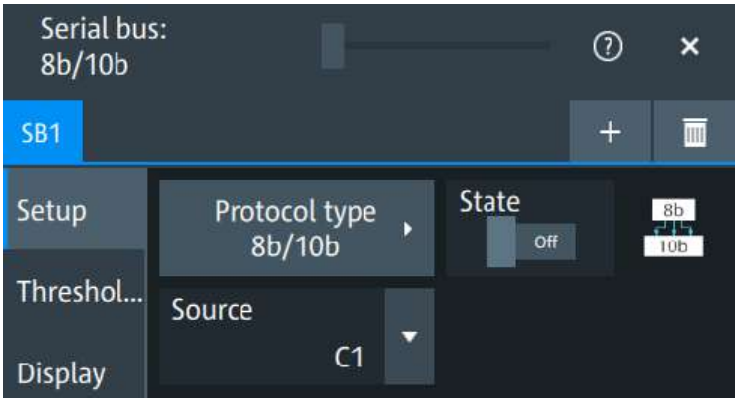

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.


Remote command:
`SBUS<sb>[:STATe]` on page 1564

Source
Sets the source of the selected data line. Usually, the source is one of the analog channels.

Remote command:
SBUS<sb>:EBTB:DATA:SOURce on page 1894

14.11.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Thresholds".

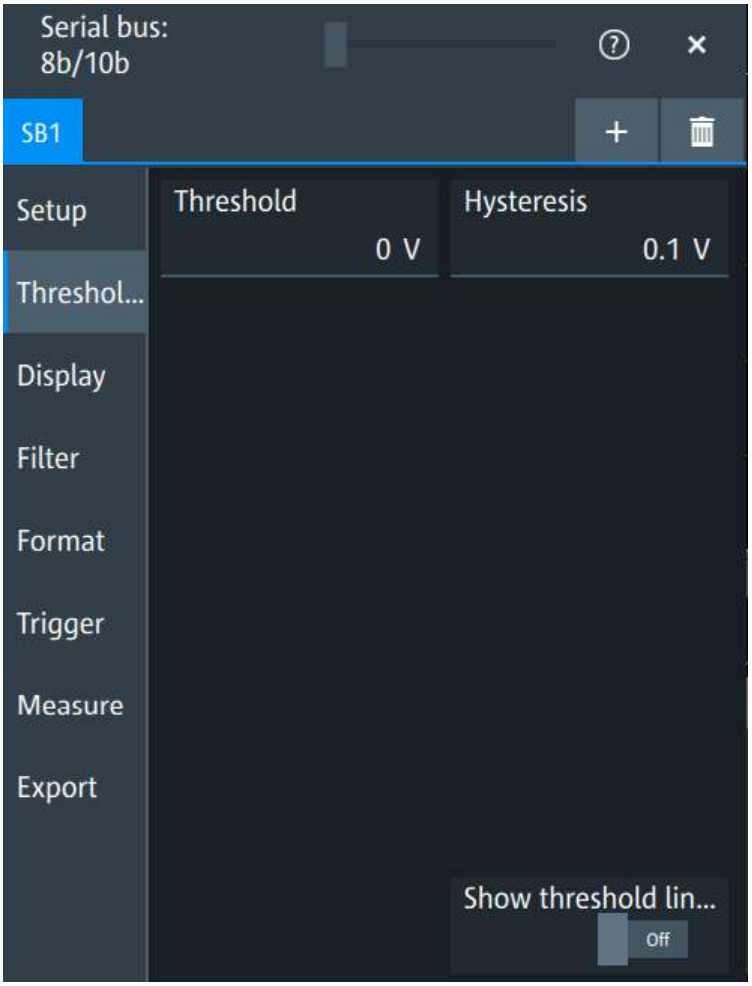

Threshold
Sets the threshold for the source channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:EBTB:DATA:THReshold on page 1894

Hysteresis
Additional to the threshold, you can also set a hysteresis. Enter the value directly in the fields.

Remote command:
SBUS<sb>:EBTB:DATA:HYSTeresis on page 1894

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566

14.11.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.


Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Show transition edges to see the timing of each threshold crossover point.
"10b bits"	Show the bits that constitute the 10b representation
"K/D symbols"	Show K/D symbol classification. Each 10b symbol is labeled with K/D value, and disparity (e.g. K28.5+ or D0.5-).
"Bytes"	Show the decoded 8-bit value of each symbol in hexadecimal format.

14.11.3 8b/10b filter

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Filter" tab

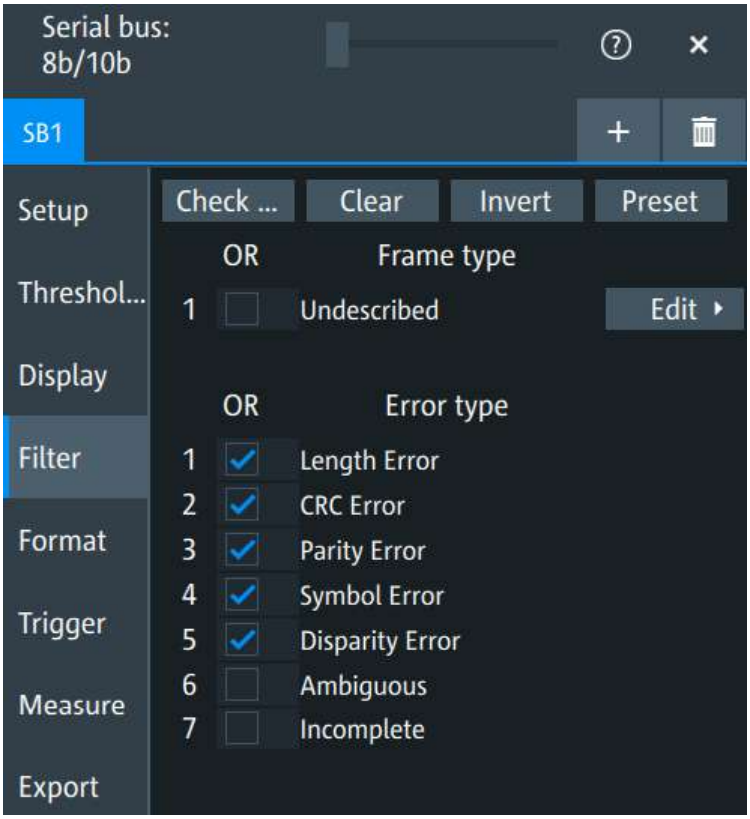

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:EBTB:FILTer:CHKall` on page 1896
`SBUS<sb>:EBTB:FILTer:CLR` on page 1896
`SBUS<sb>:EBTB:FILTer:INVert` on page 1896
`SBUS<sb>:EBTB:FILTer:RST` on page 1897

Enable
Enables the filtering on 8b/10b frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
`SBUS<sb>:EBTB:FILTer:FRENable` on page 1899
`SBUS<sb>:EBTB:FILTer:FRAMe<fr>:ENABle` on page 1899

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.


For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because this protocol supports custom coding.

If you have created frame formats, those types also appear in this list.

See Section 14.1.5, "Format", on page 544.

Edit
Opens a dialog to define the details of the selected frame.

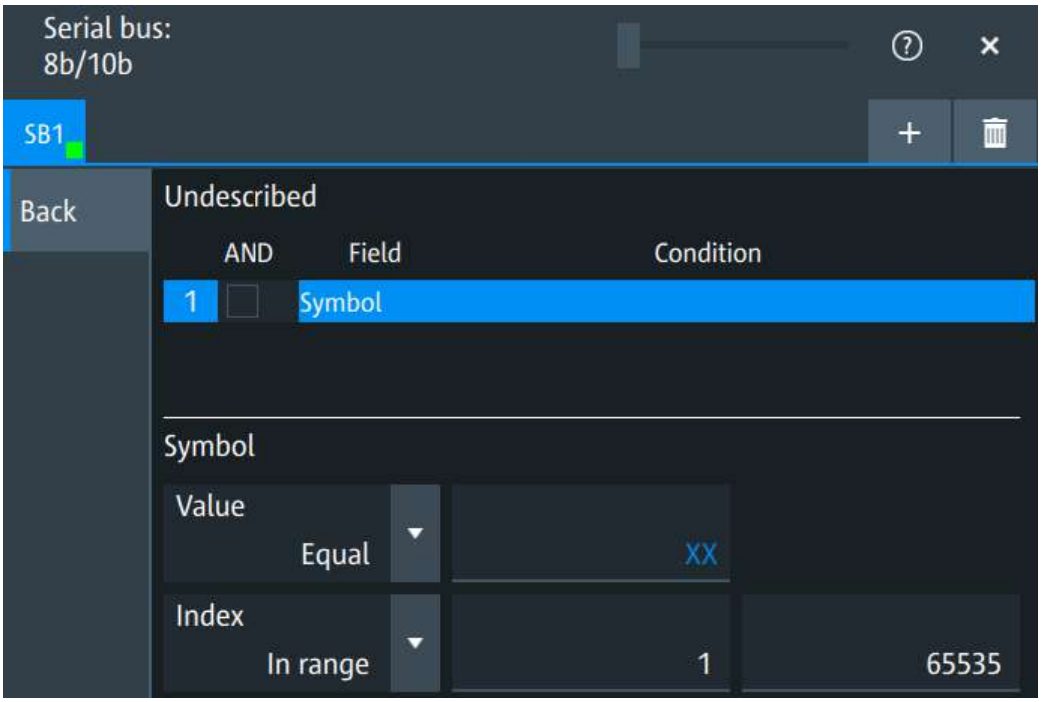

"Field"
Enables the field type that you want to filter on for the selected frame.

For the default "Undescribed" frame, the only available field types are the payload components of an undescribed frame.
As soon as you create field formats, those types also appear in this list.

See Section 14.1.5, "Format", on page 544.

Remote command:
`SBUS<sb>:EBTB:FILTer:FIENable` on page 1899
`SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1899

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:EBTB:FILTer:BIT on page 1897
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1897

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:EBTB:FILTer:DMAX on page 1898
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1898
SBUS<sb>:EBTB:FILTer:DMIN on page 1898
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1898
SBUS<sb>:EBTB:FILTer:DOPerator on page 1898
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1898

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:EBTB:FILTer:IMAX on page 1899
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1899
SBUS<sb>:EBTB:FILTer:IMIN on page 1900
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1900
SBUS<sb>:EBTB:FILTer:IOPerator on page 1900
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1900

Error type
Enables filtering on the selected error type.


Remote command:
SBUS<sb>:EBTB:FILTer:ERENable on page 1897
SBUS<sb>:EBTB:FILTer:ERRor<n>:ENABle on page 1897

14.11.4 8b/10b format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Format".

See Section 14.1.5, "Format", on page 544.

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

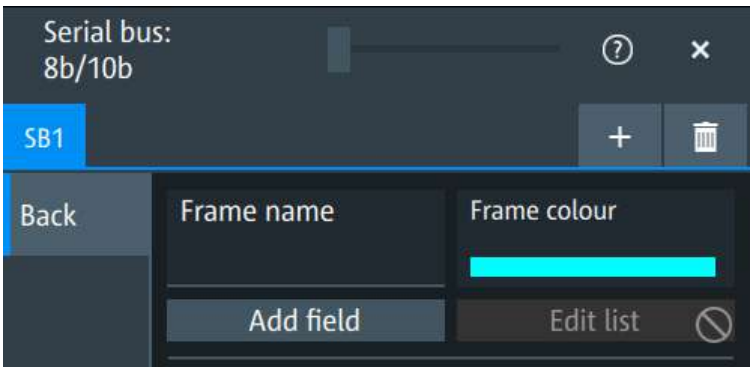

Remote command:
SBUS<sb>:EBTB:FORMat:ADDFrame on page 1901

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:EBTB:FORMat:CLR on page 1902
SBUS<sb>:EBTB:FORMat:FCOunt? on page 1902

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:EBTB:FORMat:LOAD on page 1901

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:EBTB:FORMat:SAVE on page 1902

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.


Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:NAME on page 1903

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:COLor on page 1903

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

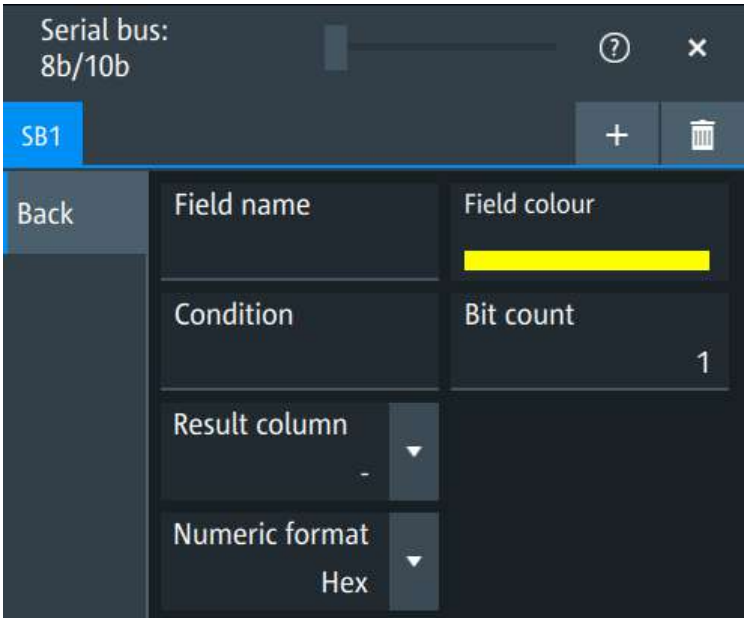

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:ADDField on page 1902

Edit list
Enables editing the field list. If enabled, you can delete a field description by clicking its "Delete" icon. In a list with several entries, you can move field descriptions up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLDCount? on page 1903

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1904

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1904

Condition
Defines a rule or pattern that a field must match to help identify a frame and/or validate mandatory values, e.g., CRC, ID. The condition must match the field's "Numeric format", "Bit order", and "Bit length".

The following conditions are implemented:

"=" (equal / pattern match)

Defines a bit pattern that the field must match. Allowed characters depend on the field's "Format", "Bit order", and "Bits". In binary format, for example, valid characters are "1", "0", "H" (high), and "L" (low).

The behavior depends on whether the frame contains a variable-length array [ ]:

- **No [ ] in the frame**: All fields using = act as keys to identify the frame type. The frame matches only if all such fields match.
- **Frame contains one [ ]**: If there is a "Variable Length Array" field, then the equal operator has two different functionalities, depending on the position of the equal-operator field within the frame format configuration:
  - **Field is before the [ ]**: The condition acts as a key to identify a frame type and matches starting bits.
  - **Field is immediately after the [ ]**: The condition acts as an array delimiter and matches the bits right after the variable-length data to terminate the array.
    Note: If a = field is after the [ ] but not immediately after it, decode results are unpredictable.

"[ ]" (array / repetition)

Defines the number of permissible repetitions of the field.

- **Fixed-length array [n] (n > 0)**: Repeat the field n times. Effective length is n × "Bit count". Elements appear individually in results/honeycomb under the same name and color.
- **Variable-length array [ ]**: Repeat the field 0 or more times, so the frame length is unspecified and ends via an end-of-frame condition, which can be an operator or gap.
  Constraints:
  - Only one variable-length array is supported per frame (processing limitation).
  - A delimiter field must follow immediately after [ ] (unless [ ] is the last field) so the decoder can terminate the array.
  - Variable-length array elements appear in details as Name: 1, Name: 2, etc. The selected field shows as Name[n] where n is the detected size.
  - Exception: Consecutive variable arrays can form a repeated structure, e.g. A[] + B[] → ABABAB... until the end condition has been detected.
  - Check functions can be combined in dynamic arrays, e.g., B[] can check parity relative to A[] by index.

"crc5usb(n-m)" (CRC check, 5-bit, USB polynomial)	Verifies a 5-bit CRC over fields in the index range n to m. For example, use "crc5usb(1-5)" to check fields 1 through 4. If the range includes an array, all elements in the array are included. If the CRC check fails, the CRC field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.
"odd(n-m), even(n-m)" (parity check)	Checks odd/even parity over the index range n to m including the parity bit. If the parity check fails, the parity field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CONDition` on page 1905

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1904

Result column
Determines which field is displayed in which result column of the decode table.

- Selecting "-" (no index) means that the result is not displayed.
- Selecting "1", "2" or "3" means that the result is displayed in the 1st, 2nd or 3rd result column, that the decode table supports. Each of the three result columns has to be unique for each frame type. But to display unrelated information for different frame types, you can define different result columns.

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CLMN` on page 1906

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first

- "MSB first": big endian, most significant bit first

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1905

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1906

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1907

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1907

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1908

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARA` on page 1908
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARB` on page 1908

14.11.5 8b/10b software trigger


If you need information on how to get started with triggering on 8b/10b signals, see Section 14.11.2, "8b/10b configuration", on page 741. Otherwise proceed with the 8b/10b trigger settings.

14.11.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.11.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Trigger" tab > "Setup Software Trigger"

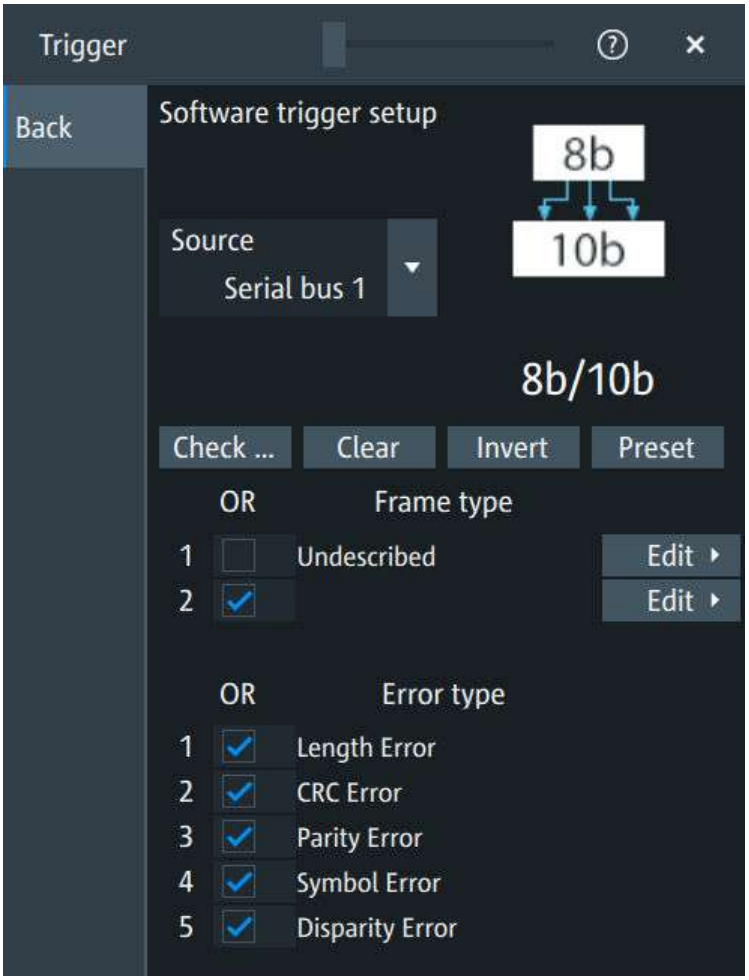

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:EBTB:CHKall` on page 1909
`TRIGger:SBSW:EBTB:CLR` on page 1909
`TRIGger:SBSW:EBTB:INVert` on page 1758
`TRIGger:SBSW:EBTB:RST` on page 1910

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.


The only frame type available by default is "Undescribed", because this protocol supports custom coding.

If you have created frame formats, those types also appear in this list.

See Section 14.1.5, "Format", on page 544.

Remote command:
`TRIGger:SBSW:EBTB:FRENable` on page 1910
`TRIGger:SBSW:EBTB:FRAMe<fr>:ENABle` on page 1910

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

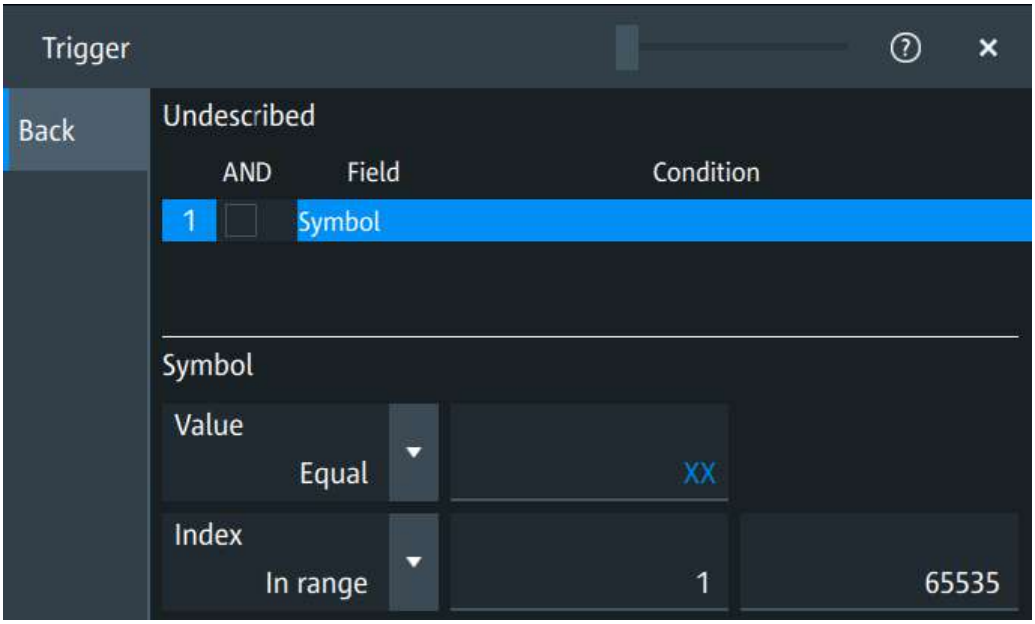

"Field"
Enables the field type that you want to trigger on for the selected frame.

For the default "Undescribed" frame, the only available field types are the payload components of an undescribed frame.
As soon as you create field formats, those types also appear in this list.

See Section 14.1.5, "Format", on page 544.

Remote command:
`TRIGger:SBSW:EBTB:FIENable` on page 1912
`TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:ENABle` on page 1912

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:EBTB:BIT on page 1910
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:BIT on page 1910

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:EBTB:DMAX on page 1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMAX on page 1911
TRIGger:SBSW:EBTB:DMIN on page 1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMIN on page 1911
TRIGger:SBSW:EBTB:DOPerator on page 1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DOPerator on page 1911

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:EBTB:IMAX on page 1912
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMAX on page 1912
TRIGger:SBSW:EBTB:IMIN on page 1912
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMIN on page 1912
TRIGger:SBSW:EBTB:IOPerator on page 1913
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IOPerator on page 1913

Error type
Enables triggering on the selected error type.

The following error types are available:
- "Length error"
- "CRC error"
- "Parity error"
- "Symbol error"
- "Disparity error"

Remote command:
TRIGger:SBSW:EBTB:ERENable on page 1913
TRIGger:SBSW:EBTB:ERRor<m>:ENABle on page 1913

14.11.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.11.7 8b/10b decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

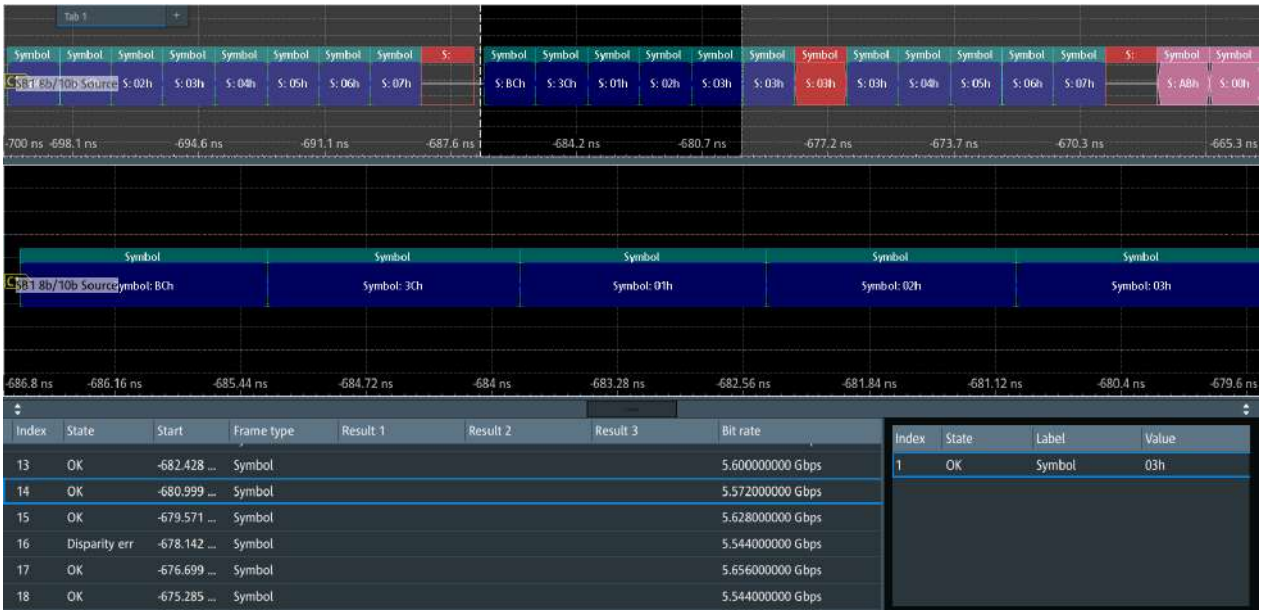


Figure 14-31: Decoded 8b/10b signal

The decode results table contains information about all decoded frames.

Table 14-18: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Frame type	Frame types
Result	Data displayed in the 1st, 2nd and 3rd results column. For "undescribed" frame types, you can select the data format in the "Display" tab. For configured frame formats, the "Format" tab controls the format of each field. See Section 14.11.4, "8b/10b format configuration", on page 746.
Bit rate	Bit rate of the frame

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-19: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.12.5, "Decode results", on page 1914.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example 8b/10b export file

```
Index,Start,Stop,State,Type,Result 1,Result 2,Result 3,Bit-rate
1,-6.99857e-07,-6.98414e-07,'OK','Symbol',---,---,---,5544000000
2,-6.98414e-07,-6.96986e-07,'OK','Symbol',---,---,---,5600000000
3,-6.96986e-07,-6.95571e-07,'OK','Symbol',---,---,---,5656000000
4,-6.95571e-07,-6.94129e-07,'OK','Symbol',---,---,---,5544000000
5,-6.94129e-07,-6.927e-07,'OK','Symbol',---,---,---,5600000000
6,-6.927e-07,-6.91271e-07,'OK','Symbol',---,---,---,5600000000
7,-6.91271e-07,-6.89843e-07,'OK','Symbol',---,---,---,5600000000
8,-6.89843e-07,-6.88429e-07,'OK','Symbol',---,---,---,5656000000
9,-6.88429e-07,-6.87e-07,'SYMB','Symbol Error',---,---,---,---
10,-6.867e-07,-6.85286e-07,'OK','Symbol',---,---,---,5656000000
11,-6.85286e-07,-6.83843e-07,'OK','Symbol',---,---,---,5544000000
12,-6.83843e-07,-6.82429e-07,'OK','Symbol',---,---,---,5656000000
13,-6.82429e-07,-6.81e-07,'OK','Symbol',---,---,---,5600000000
14,-6.81e-07,-6.79564e-07,'OK','Symbol',---,---,---,5572000000
15,-6.79564e-07,-6.78143e-07,'OK','Symbol',---,---,---,5628000000
16,-6.78143e-07,-6.767e-07,'DISP','Symbol',---,---,---,5544000000
17,-6.767e-07,-6.75286e-07,'OK','Symbol',---,---,---,5656000000
18,-6.75286e-07,-6.73843e-07,'OK','Symbol',---,---,---,5544000000
19,-6.73843e-07,-6.72414e-07,'OK','Symbol',---,---,---,5600000000
20,-6.72414e-07,-6.70986e-07,'OK','Symbol',---,---,---,5600000000
21,-6.70986e-07,-6.69557e-07,'OK','Symbol',---,---,---,5600000000
22,-6.69557e-07,-6.68129e-07,'SYMB','Symbol Error',---,---,---,---

Details frame 1
```

```
Index,Label,State,Value
1,'Symbol','OK',BCh
```

14.12 CAN (automotive electronics, option R&S MXO5-K520)

CAN is the Controller Area Network, a bus system designed by Bosch for use within automotive network architecture, for example, for brake, power train and engine management. Today, it is also used in many other systems, for example, in industrial machines, aerospace, subsea, merchant marine.

With the MXO 5 you can decode frames from some of the most common CAN protocols standards:

- Classical CAN (CAN 2.0): includes the standard frame format (11-bit identifier) and the extended frame format (29-bit identifier).
- CAN FD: CAN with flexible data rate. It is an extension of the classical CAN protocol and allows for increased data rates and payloads. It is backward compatible with CAN 2.0.
- CAN XL: an advanced version of the CAN protocol designed to handle higher data rates and larger payloads compared to classical CAN and CAN FD.

Requirements

For performing CAN decode measurements, you need the following:


- MXO 5 with 1 available channel. The channel can be:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- One probe
- Option R&S MXO5-K520

- CAN configuration....758
- CAN filter....762
- CAN format configuration....765
- CAN hardware trigger....771
- CAN software trigger....779
- Measure....783
- CAN decode results....783

14.12.1 CAN configuration

14.12.1.1 CAN configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Setup".

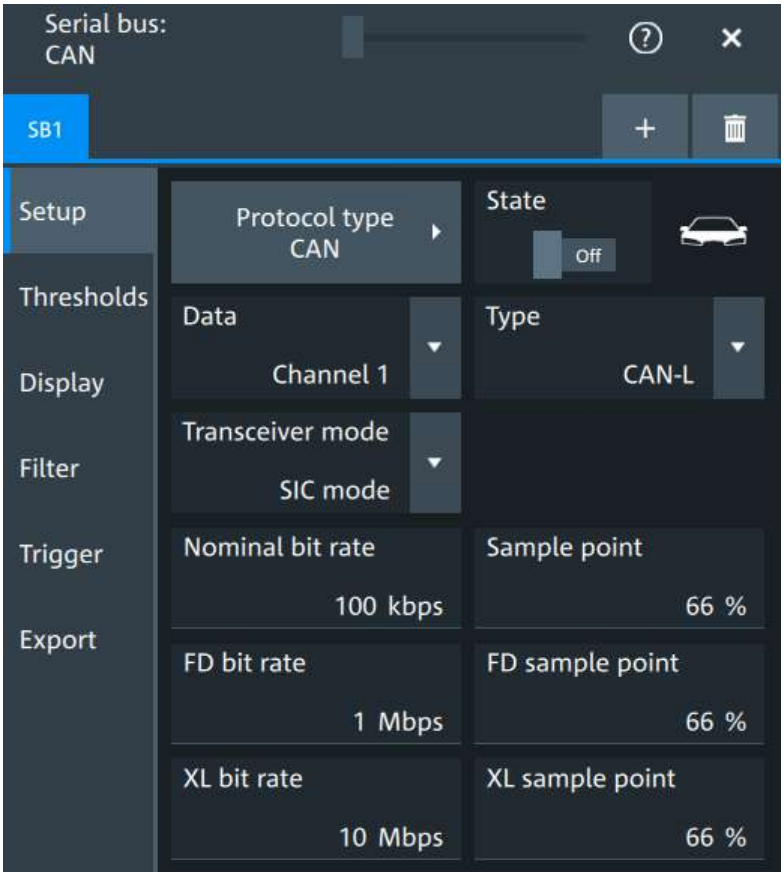

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

Data
Sets the source of the selected data line.

Remote command:
`SBUS<sb>:CAN:SOURce` on page 1921

Type
Selects the CAN-High or CAN-Low line. CAN uses both lines for differential signal transmission.

If you measure with a differential probe, connect the probe to both CAN-H and CAN-L lines, and select the data "Type" = *CAN-H*.

If you use a single-ended probe, connect the probe to either CAN_L or CAN_H, and select the data type accordingly.

Remote command:
`SBUS<sb>:CAN:TYPE` on page 1920

Transceiver mode
Selects the transceiver mode for the CAN decoding.

"SIC mode" The signal improvement capability (SIC) mode supports bit rates up to 8 Mbit/s.

"FAST mode" The fast mode supports bit rates up to 20 Mbit/s.

Remote command:
`SBUS<sb>:CAN:TRCVmode` on page 1924

Nominal bit rate
Sets the number of transmitted bits per second.

Remote command:
`SBUS<sb>:CAN:BITRate` on page 1920

Sample point
Sets the position of the sample point within the bit in percent of the nominal bit time.

Remote command:
`SBUS<sb>:CAN:SAMPlepoint` on page 1921

FD bit rate
Sets the number of transmitted bits per second for the CAN FD frame.

Remote command:
`SBUS<sb>:CAN:FDATa:DBITrate` on page 1922

FD sample point
Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN FD frame.

Remote command:
`SBUS<sb>:CAN:FDATa:SAMPlepoint` on page 1922

XL bit rate
Sets the number of transmitted bits per second for the CAN XL frame.


Remote command:
`SBUS<sb>:CAN:XDATa:DBITrate` on page 1923

XL sample point
Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN XL frame.

Remote command:
`SBUS<sb>:CAN:XDATa:SAMPlepoint` on page 1924

14.12.1.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Thresholds".

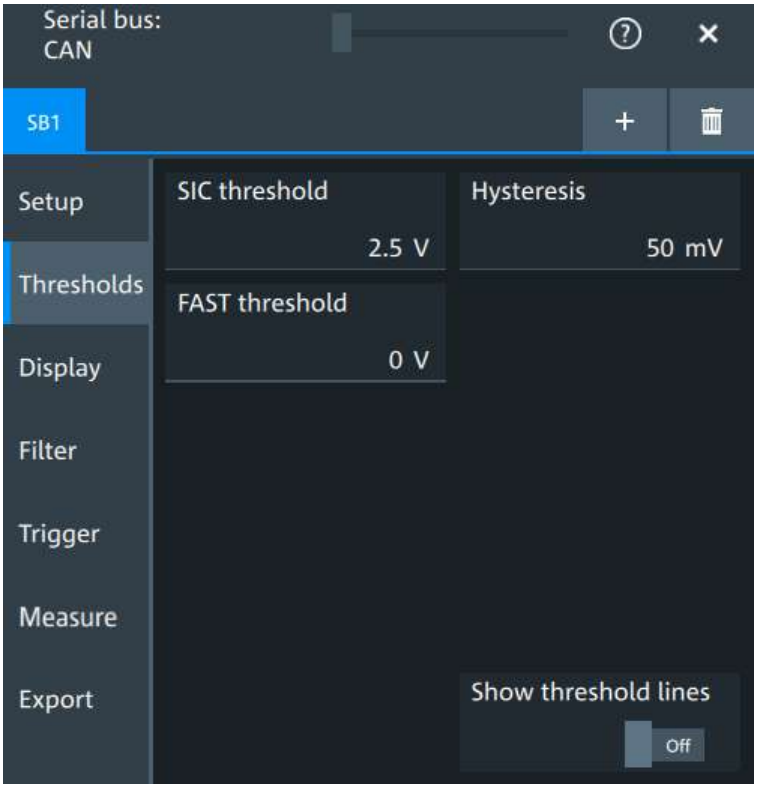

Threshold
Sets the threshold for the SIC and Fast channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:CAN:FAST:HYSTeresis` on page 1923
`SBUS<sb>:CAN:FAST:THReshold` on page 1923
`SBUS<sb>:CAN:SIC:HYSTeresis` on page 1922
`SBUS<sb>:CAN:SIC:THReshold` on page 1922


Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.12.1.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

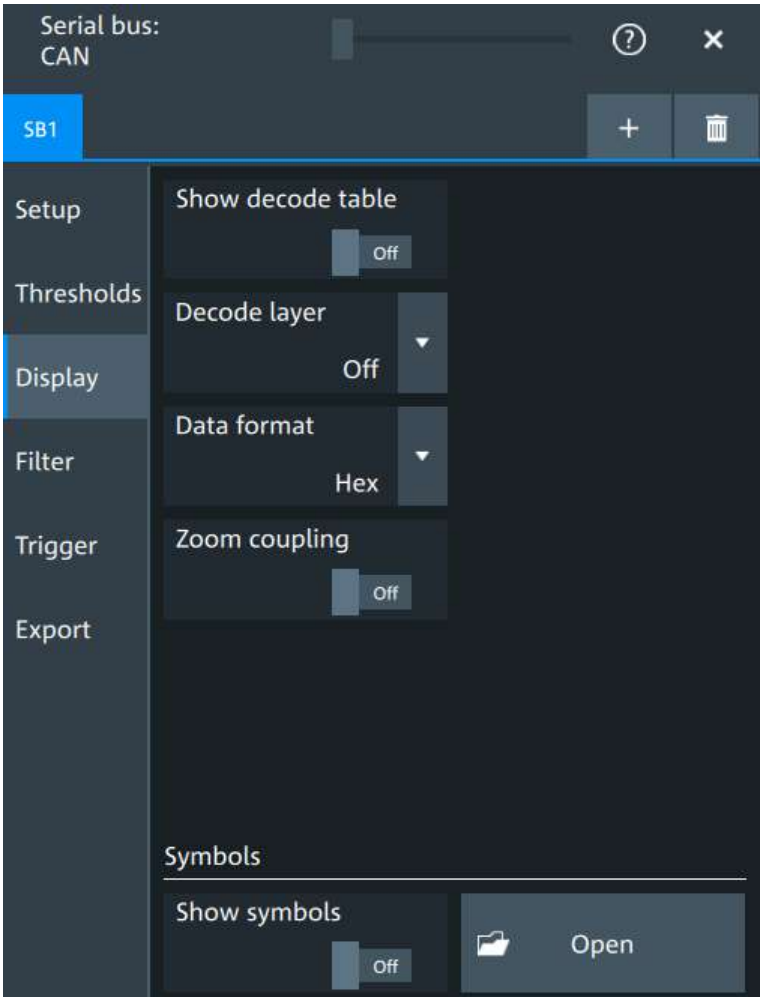


Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display. See "Decode layer" on page 541.

14.12.2 CAN filter

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Filter" tab

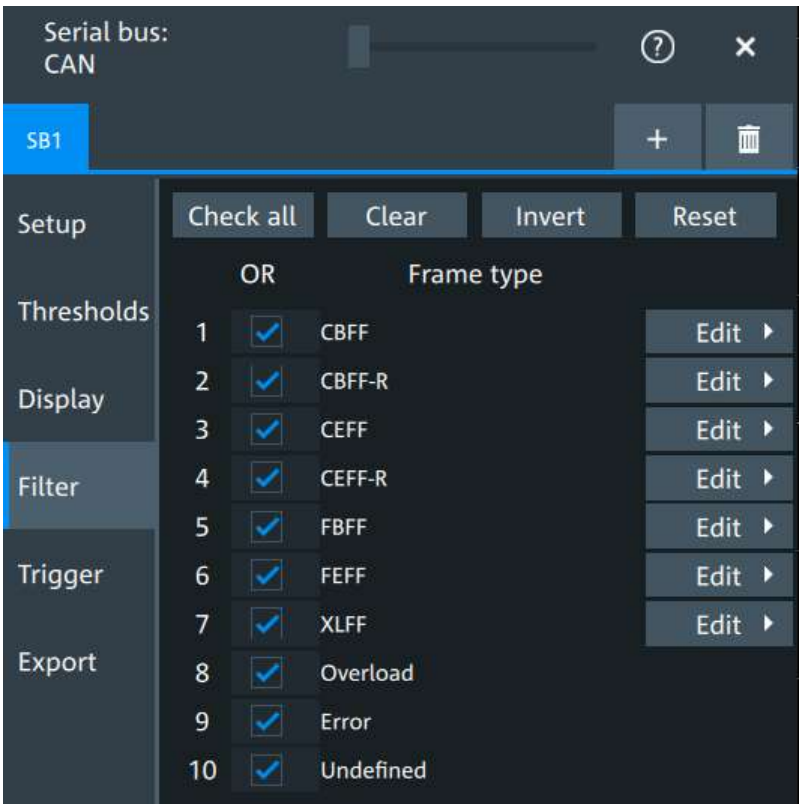

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:CAN:FILTer:CHKall` on page 1925
`SBUS<sb>:CAN:FILTer:CLR` on page 1926
`SBUS<sb>:CAN:FILTer:INVert` on page 1926
`SBUS<sb>:CAN:FILTer:RST` on page 1926


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "CBFF", "CBFF-R", "CEFF", "CEFF-R", "FBFF", "FEFF", "XLFF", "Overload" and "Error".

Remote command:
SBUS<sb>:CAN:FILTer:FRENable on page 1928
SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle on page 1928

Edit
Opens a dialog to define the details of the selected frame.

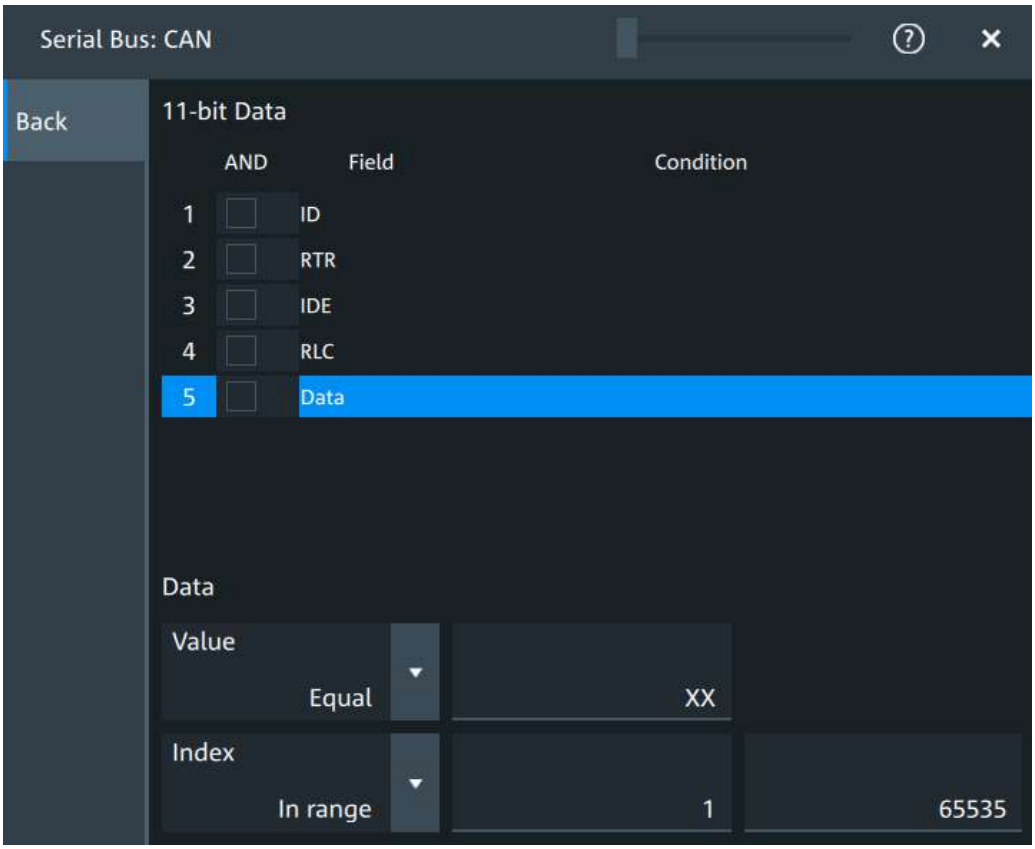

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "ID", "RTR", "ITE", "RLC" and "Data".

Remote command:
SBUS<sb>:CAN:FILTer:FIENable on page 1928
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1928

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:CAN:FILTer:BIT on page 1926
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1926

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:CAN:FILTer:DMAX on page 1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1927
SBUS<sb>:CAN:FILTer:DMIN on page 1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1927
SBUS<sb>:CAN:FILTer:DOPerator on page 1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1927

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:CAN:FILTer:IMAX on page 1929
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1929
SBUS<sb>:CAN:FILTer:IMIN on page 1929
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1929
SBUS<sb>:CAN:FILTer:IOPerator on page 1930
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1930

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:CAN:FILTer:ERENable on page 1928
SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle on page 1928

14.12.3 CAN format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:CAN:FORMat:SELect on page 1931

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

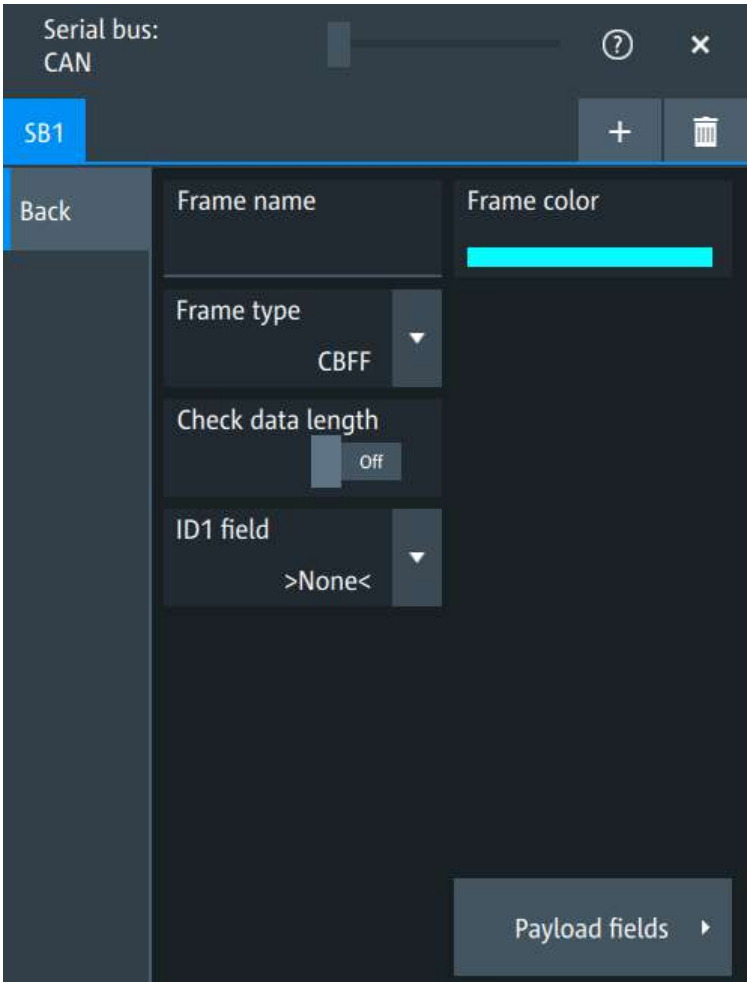

Remote command:
SBUS<sb>:CAN:FORMat:ADDFrame on page 1931

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:CAN:FORMat:CLR on page 1932
SBUS<sb>:CAN:FORMat:FCOunt? on page 1932

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:CAN:FORMat:LOAD on page 1931

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:CAN:FORMat:SAVE on page 1931

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:NAME on page 1933

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:COLor on page 1933

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:TYPE on page 1933

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck on page 1934

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENValue on page 1934

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Field on page 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Field on page 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Field on page 1934


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Value on page 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Value on page 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Value on page 1935

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

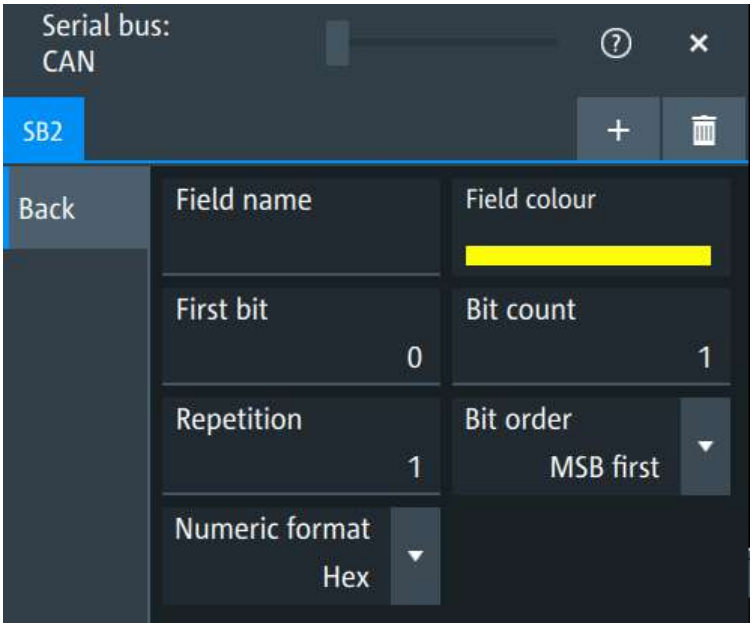

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ADDField on page 1932

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1935

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1935

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1936

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 1936

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 1936

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1937

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1937

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1938

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1938

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1939

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1939

Parameter A,B
Defines the parameters of the linear function.


- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1940
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1940

14.12.4 CAN hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Trigger" tab > "Setup Hardware Trigger"

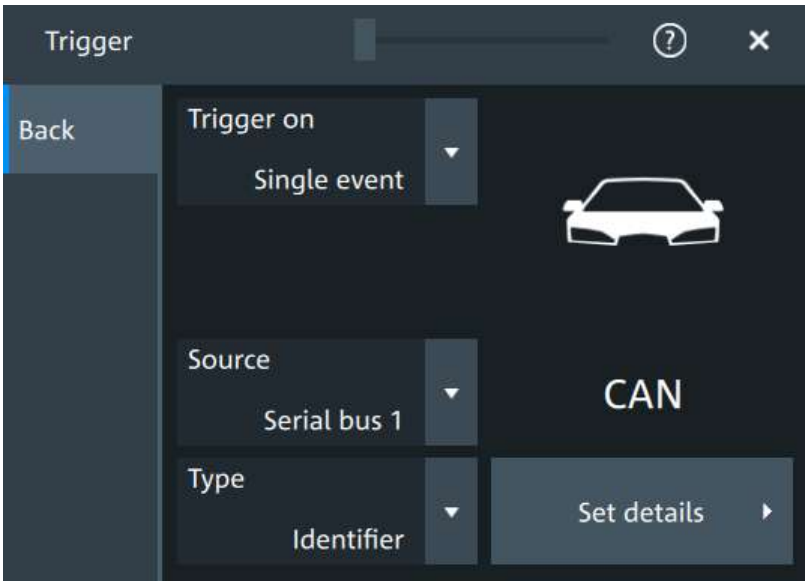


Type
Selects the trigger type for CAN analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start of frame" Triggers on the first edge of the dominant SOF bit (synchronization bit).

"End of frame" Triggers on the end of frame.

"Frame type" Triggers on a specified frame type (data, remote, error, or overload). For data and remote frames, also the identifier format is considered.

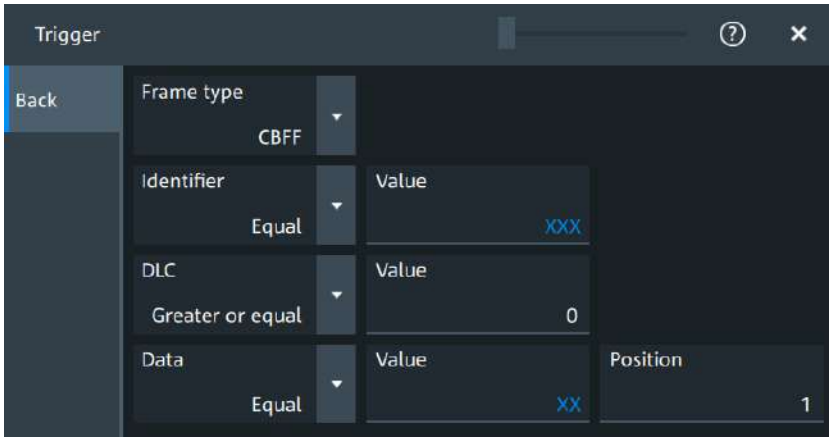

"Identifier" Sets the trigger to a specific message identifier or an identifier range.




"Identifier + Data"
Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.



"Error condition"

Identifies various errors in the frame.

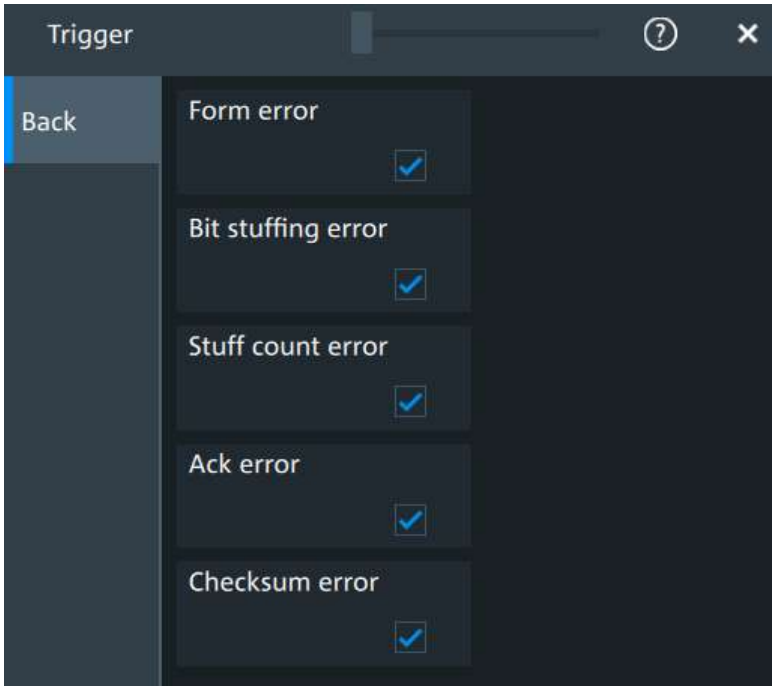

Remote command:
`TRIGger:SBHW:CAN:TYPE` on page 1946

Frame type

CAN has different frame types which can be used as trigger condition. Depending on the selected frame, you can specify further parameters.

"CBFF" Classical base frame format data: supports a length of 11 bit for the CAN identifier. The data frame is the only frame for actual data transmission.



Figure 14-32: Settings for CBFF and CEFF frames

"CBFF-R" Classical base frame format remote: supports a length of 11 bit for the CAN identifier.
The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.



Figure 14-33: Settings for CBFF-R and CEFF-R frames

"CEFF" Classical extended frame format data: supports a length of 29 bit for the CAN identifier. The data frame is the only frame for actual data transmission.

"CEFF-R" Classical extended frame format remote: supports a length of 29 bit for the CAN identifier.
The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.


"FBFF" FD base frame format: supports a length of 11 bit for the CAN identifier.



Figure 14-34: Settings for FBFF and FEFF frames

"FEFF" FD extended frame format: supports a length of 29 bit for the CAN identifier.

"XLFF" XL frame format: supports a length of 29 bit for the CAN identifier.

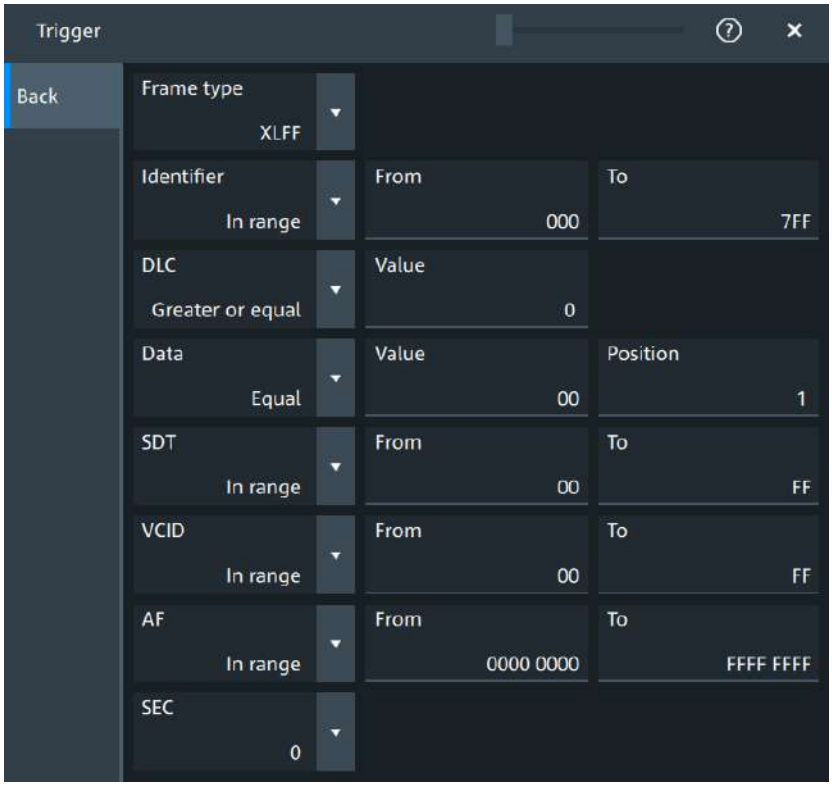

"Error" When a node recognizes an error, it cancels transmission by sending an error frame.
The ID type is irrelevant for error frames.

"Overload" When a node needs a delay between data and/or remote frames, it sends and overload frame.
The ID type is irrelevant for overload frames.

Remote command:
`TRIGger:SBHW:CAN:FTYPe` on page 1944

Identifier
Specifies the identifier pattern.

"Condition" Sets the comparison condition to a specific value or a range.

"Value"/"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger:SBHW:CAN:ICONdition` on page 1945
`TRIGger:SBHW:CAN:IMAX` on page 1945
`TRIGger:SBHW:CAN:IMIN` on page 1945

DLC
The data length code (DLC) defines the number of data bytes to be found. You can set a fixed value for the DLC or define a minimum value.

Remote command:
TRIGger:SBHW:CAN:DLC on page 1942
TRIGger:SBHW:CAN:DLCCondition on page 1942

Data pattern
Specifies the data pattern.

"Condition" Sets the comparison condition to a specific value or a range.

"Value" Specifies the value or sets the start value of a range.

Remote command:
TRIGger:SBHW:CAN:DCONdition on page 1942
TRIGger:SBHW:CAN:DMIN on page 1943

ID type
Selects the length of the identifier:

"11 bit" Identifier length of the CAN base frame format. The instrument triggers on the sample point of the identifier extension flag (IDE) bit.

"29 bit" Identifier length of the CAN extended frame format. The instrument triggers on the sample point of the remote transmission request (RTR) bit.

"Any" The ID type and ID pattern are not relevant for the trigger condition.
If the trigger type is "Identifier", the instrument triggers on any identifier in the specified frame type.
If the trigger type is "Identifier + Data", set the "ID type" to "Any" if you want to trigger only on data.

Remote command:
TRIGger:SBHW:CAN:ITYPe on page 1946

BRS, ESI
If "Frame type" = "FBFF"/"FEFF", you can trigger on specific bits.

"BRS" The bit rate switch bit. Value 1 means that the bit rate switches from the arbitration rate to the faster data rate.

"ESI" The error state indicator bit. Set "X" if the bit is not relevant.

Remote command:
TRIGger:SBHW:CAN:FDATa:BRS on page 1943
TRIGger:SBHW:CAN:FDATa:ESI on page 1943

SDT
Specifies a value or a range for the service data unit type.

"Condition" Sets the comparison condition to a specific value or a range.

"Value"/"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger:SBHW:CAN:XDATa:SDT:CONDition on page 1948
TRIGger:SBHW:CAN:XDATa:SDT:MAX on page 1948
TRIGger:SBHW:CAN:XDATa:SDT:MIN on page 1948

VCID
Specifies a value or a range for the virtual CAN network ID (VCID).

"Condition"	Sets the comparison condition to a specific value or a range.
"Value"/"From"	Specifies the value or sets the start value of a range.
"To"	Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger:SBHW:CAN:XDATa:VCID:CONDition on page 1949
TRIGger:SBHW:CAN:XDATa:VCID:MAX on page 1949
TRIGger:SBHW:CAN:XDATa:VCID:MIN on page 1949

AF
Specifies a value or a range for the CAN XL acceptance field (AF).


"Condition"	Sets the comparison condition to a specific value or a range.
"Value"/"From"	Specifies the value or sets the start value of a range.
"To"	Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger:SBHW:CAN:XDATa:AF:CONDition on page 1947
TRIGger:SBHW:CAN:XDATa:AF:MAX on page 1947
TRIGger:SBHW:CAN:XDATa:AF:MIN on page 1947

SEC
Sets a value for the simple extended content (SEC) field. It indicates, if the CAN XL data frame uses the CADsec protocol.

Remote command:
TRIGger:SBHW:CAN:XDATa:SEC on page 1949

Error conditions
If a CAN detects an error, it transmits an error flag at the next bit. The MXO 5 detects errors in the message and triggers on these errors even if no CAN node sends an error flag.

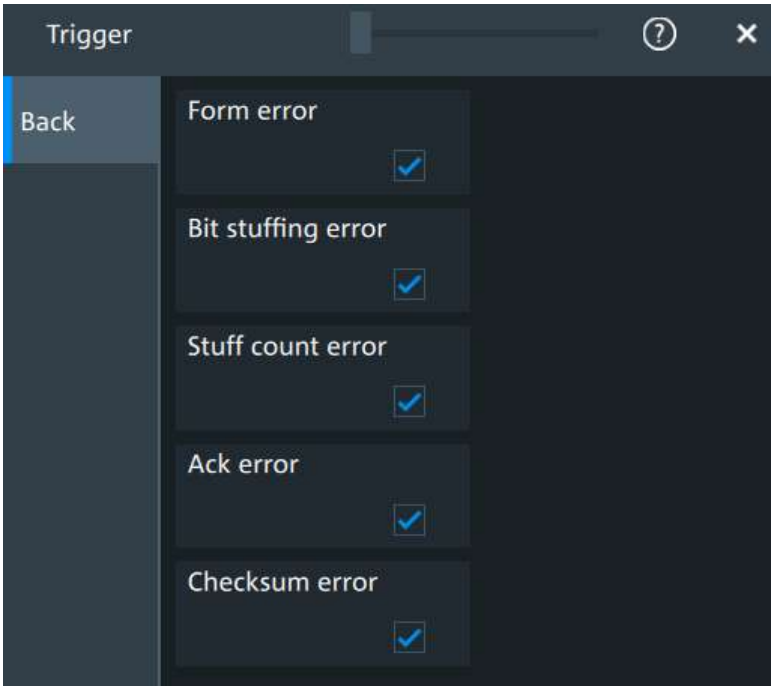

"Form error" A form error occurs when a fixed-form bit field contains one or more illegal bits.

"Bit stuffing error" The frame segments Start of Frame, Arbitration Field, Control Field, Data Field and CRC Sequence are coded by the bit stuffing method. The transmitter automatically inserts a complementary bit into the bitstream when it detects five consecutive bits of identical value in the bitstream to be transmitted. A stuff error occurs when the 6th consecutive equal bit level in the mentioned fields is detected.

"Stuff count error" A stuff bit error occurs, if more than five consecutive bits of the same level occur on the bus.

"Ack error" An acknowledgment error occurs when the transmitter does not receive an acknowledgment - a dominant bit during the ACK Slot.

"Checksum error" CAN uses the Cyclic Redundancy Check, which is a complex checksum calculation method. The transmitter calculates the CRC and sends the result in the CRC sequence. The receiver calculates the CRC in the same way. A CRC error occurs when the calculated result differs from the received value in the CRC sequence.

Remote command:
`TRIGger:SBHW:CAN:FORMerror` on page 1944
`TRIGger:SBHW:CAN:BITSterror` on page 1941
`TRIGger:SBHW:CAN:FDATa:SCERror` on page 1944
`TRIGger:SBHW:CAN:ACKerror` on page 1941
`TRIGger:SBHW:CAN:CRCerror` on page 1942


14.12.5 CAN software trigger

14.12.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.12.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

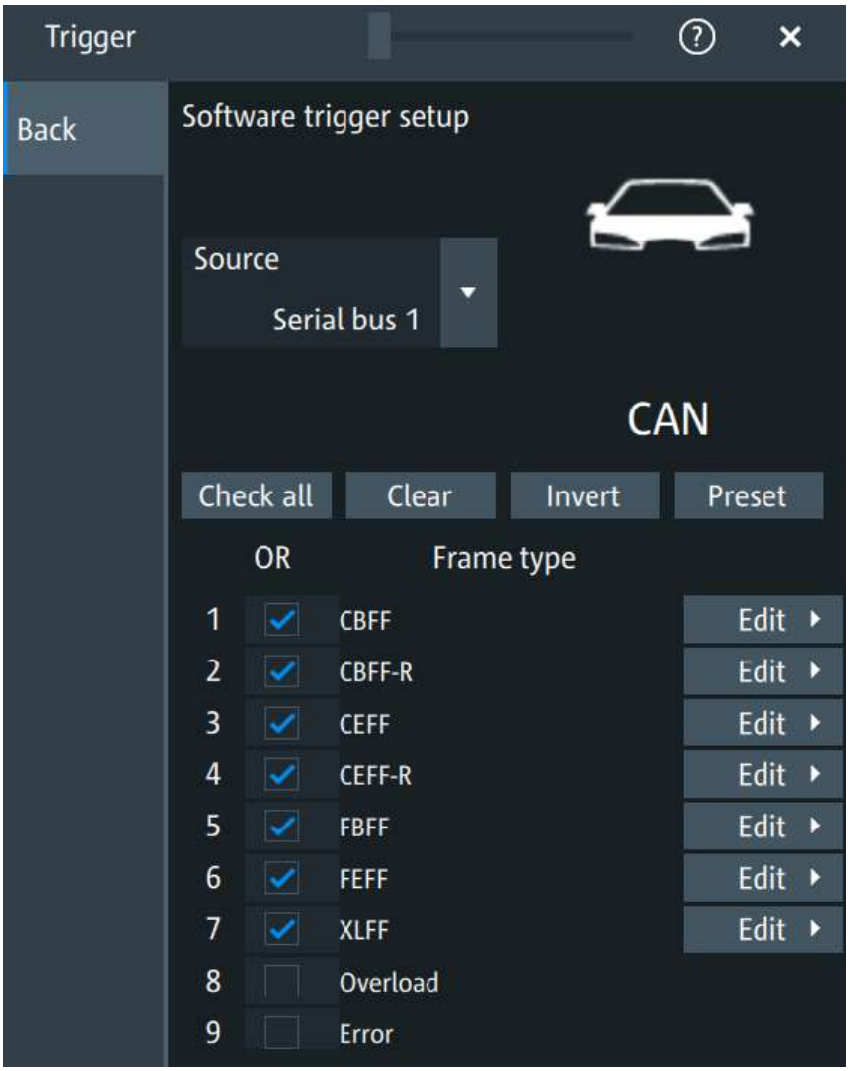

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.


Remote command:
`TRIGger:SBSW:CAN:CHKall` on page 1950
`TRIGger:SBSW:CAN:CLR` on page 1951
`TRIGger:SBSW:CAN:INVert` on page 1951
`TRIGger:SBSW:CAN:RST` on page 1951

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
`TRIGger:SBSW:CAN:FRENable` on page 1951
`TRIGger:SBSW:CAN:FRAMe<fr>:ENABle` on page 1951

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

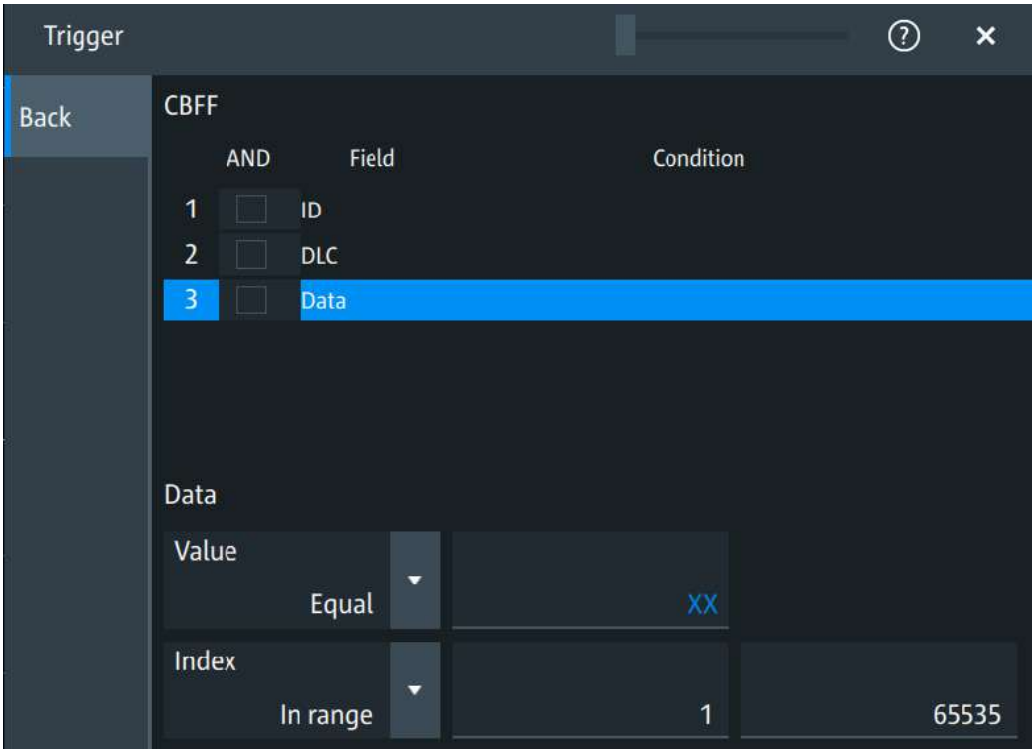

"Field" Enables the field type that you want to trigger on for the selected frame.

Remote command:
`TRIGger:SBSW:CAN:FIENable` on page 1953
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:ENABle` on page 1953

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:CAN:BIT` on page 1951
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:BIT` on page 1951


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:CAN:DMAX` on page 1952
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMAX` on page 1952
`TRIGger:SBSW:CAN:DMIN` on page 1952
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMIN` on page 1952
`TRIGger:SBSW:CAN:DOPerator` on page 1953
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator` on page 1953

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:CAN:IMAX` on page 1953
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMAX` on page 1953
`TRIGger:SBSW:CAN:IMIN` on page 1954
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMIN` on page 1954
`TRIGger:SBSW:CAN:IOPerator` on page 1954
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator` on page 1954

Error type
Enables triggering on the selected error type.

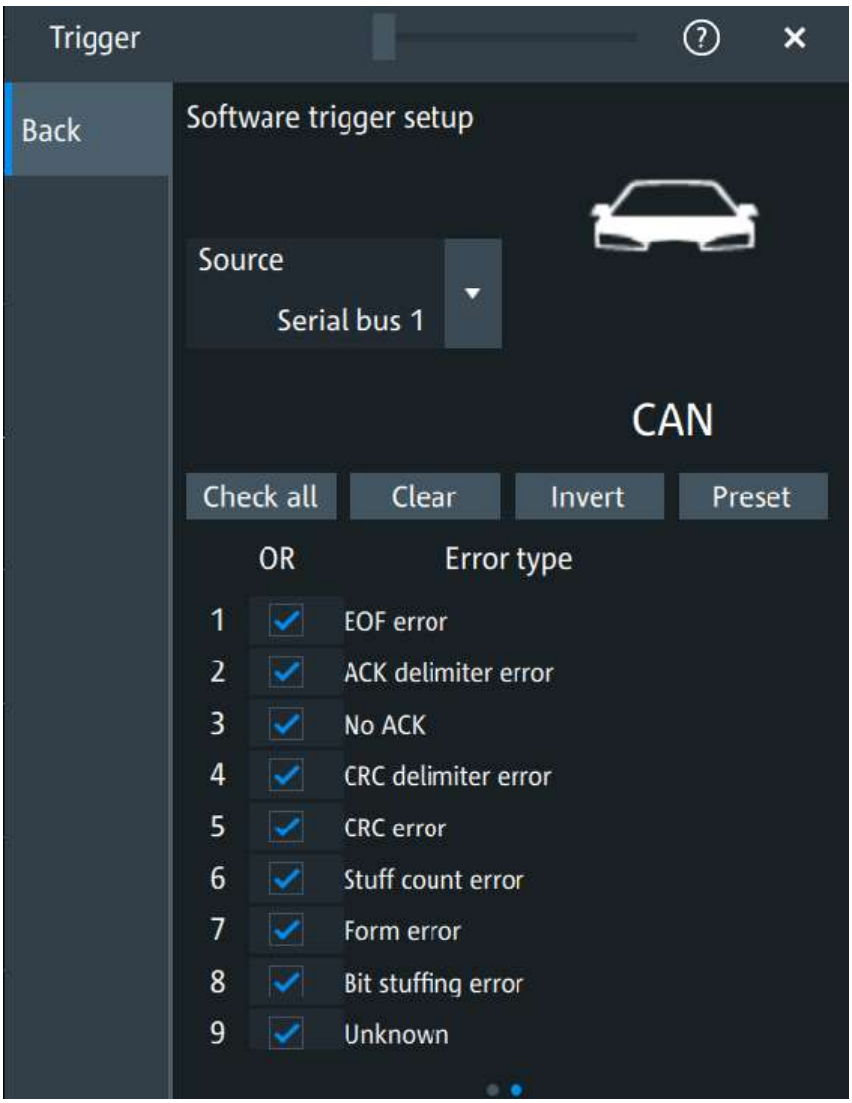

Remote command:
`TRIGger:SBSW:CAN:ERENable` on page 1954
`TRIGger:SBSW:CAN:ERRor<m>:ENABle` on page 1954

14.12.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.12.7 CAN decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

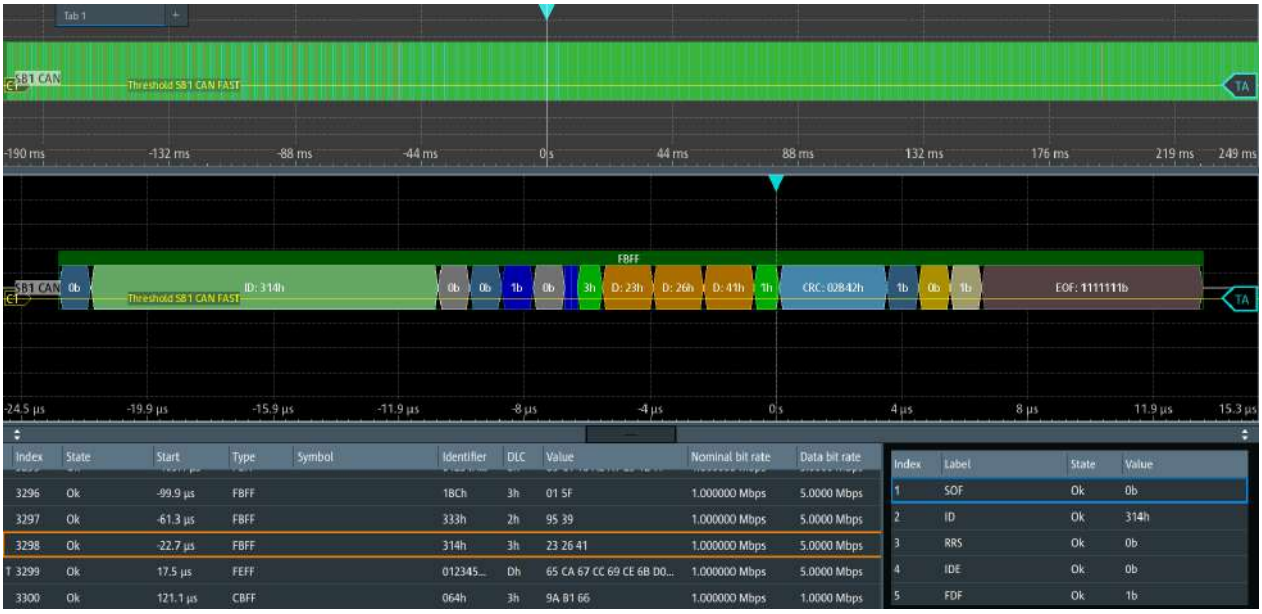


Figure 14-35: Decoded CAN signal

The decode results table contains information about all decoded frames.

Table 14-20: Content of the decode results table

Column	Description
"Index"	Number of the decoded frame
"State"	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
"Start"	Time of frame start
"Type"	Frame type
"Symbol"	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
"Identifier"	Identifier value in hexadecimal format. Select the data format in the "Display" tab.
"DLC"	Data length code, coded number of data bytes. Select the data format in the "Display" tab.

Column	Description
"Value"	Value of the data frame. Remote frames do not transmit data, therefore "- - -" is displayed. Select the data format in the "Display" tab.
"Nominal bit rate"	Number of bits per second
"Data bit rate"	Number of data bits per second

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-21: Content of the frame details table

Column	Description
"Index"	Number of the decoded field
"Label"	Field type. Values depend on the decoded frame "Type", see Table 14-22.
"State"	Overall state of the frame
"Value"	Value of the field

Depending on the decoded type of frame, the following fields are available:

Table 14-22: Decoded fields, depending on the frame type

Frame	Fields
CBFF/CBFF-R	CRC: cyclic redundancy check
CEFF/CEFF-R	CRC: cyclic redundancy check
FBFF/FEFF	BRS: bit rate switch
	ESI: error state indicator
	SBC: stuff bit count
	CRC: cyclic redundancy check
XLFF	SBC: stuff bit count
	SDT: service data unit
	SEC: simple extended content
	VCID: virtual CAN network ID
	AF: acceptance field
	PCRC: preamble cyclic redundancy check
	FCRC: frame CRC

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.13.6, "Decode results", on page 1955.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example of a CAN export file

```
Index,Start,Stop,State,Type,ID value,DLC,Nominal bit rate,Data bit rate,CRC,BRS,ESI,
  SBC,SDT,SEC,VCID,AF,PCRC
1,-0.19,-0.188,'OK','XLFF',064h,7FFh,1000000,10000000,0000AABBh,-,-,6h,FFh,1b,AAh,
  000ABCDh,01FFh
2,-0.188311,-0.188243,'OK','CBFF',064h,3h,1000000,1000000,35CEh,-,-,-,-,-,-,-,-
3,-0.188239,-0.188195,'OK','CBFR',064h,3h,1000000,1000000,5AA0h,-,-,-,-,-,-,-,-
4,-0.188191,-0.188157,'OK','FBFF',064h,2h,1000000,5000000,035FFh,0b,1b,Eh,-,-,-,-,-
5,-0.188153,-0.188075,'OK','CEFF',01401B26h,2h,1000000,1000000,32A0h,-,-,-,-,-,-,-,-
6,-0.188071,-0.188008,'OK','CEFR',01900064h,3h,1000000,1000000,32AAh,-,-,-,-,-,-,-,-
7,-0.188004,-0.187951,'OK','FEFF',01900064h,3h,1000000,5000000,032AAh,1b,0b,Fh,-,-,-,-,-
8,-0.187947,-0.187899,'OK','XLFF',064h,046h,1000000,10000000,000032AAh,-,-,6h,03h,0b,0Ah,
  0000ABCFh,1FFFh
9,-0.187895,-0.187881,'INC','ERR',---,---,1000000,1000000,-,-,-,-,-,-,-,-,-
10,-0.187877,-0.187863,'UNKN','OVER',---,---,1000000,1000000,-,-,-,-,-,-,-,-,-


Details frame 2
Index,Data
1,D0h
2,E7h
3,20h

Details frame 4
Index,Data
1,D1h
2,E8h

Details frame 5
Index,Data
1,D2h
2,E9h

Details frame 7
Index,Data
1,D3h
2,EAh
3,21h
```

14.13 LIN (automotive electronics, option R&S MXO5-K520)

The Local Interconnect Network (LIN) is a simple, low-cost bus system used within automotive network architectures. LIN is usually a subnetwork of a CAN bus. The primary purpose of LIN is the integration of uncritical sensors and actuators with low-bandwidth requirements. Common applications in a motor vehicle are the control of doors, windows, wing mirrors, and wipers.

Requirements

For performing LIN decode measurements, you need the following:

- MXO 5 with 1 available channel. The channel can be:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- One probe
- Option R&S MXO5-K520

- About the LIN protocol 786
- LIN configuration 787
- LIN filter 790
- LIN format configuration 792
- LIN hardware trigger 798
- LIN software trigger 800
- Measure 803
- LIN decode results 803

14.13.1 About the LIN protocol

This section provides an overview of protocol characteristics, frame format, identifiers and trigger possibilities. For detailed information, order the LIN specification on http://www.lin-subbus.org/ (free of charge).

LIN characteristics

The main characteristics of LIN are:

- Single-wire serial communications protocol, based on the UART byte-word interface
- Single primary, multiple secondaries - usually up to 12 nodes
- Primary-controlled communication: primary coordinates communication with the LIN schedule and sends the identifier to the secondaries
- Synchronization mechanism for clock recovery by secondary nodes without crystal or ceramic resonator

Data transfer

Basic communication concept of LIN:

- Communication in an active LIN network is always initiated by the primary.

- The primary sends a message header including the synchronization break, the synchronization byte, and the message identifier.
- The identified node sends the message response: one to eight data bytes and one checksum byte.
- Header and response form the message frame.

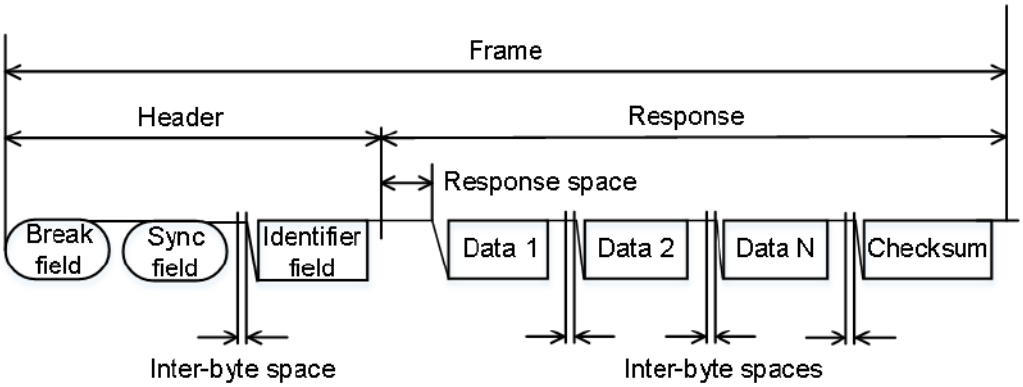


Figure 14-36: LIN frame with header and response


Data bytes are transmitted with LSB first.

The identifier byte consists of 6 bits for the frame identifier and two parity bits. This combination is known as protected identifier.

14.13.2 LIN configuration

14.13.2.1 LIN configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Setup".

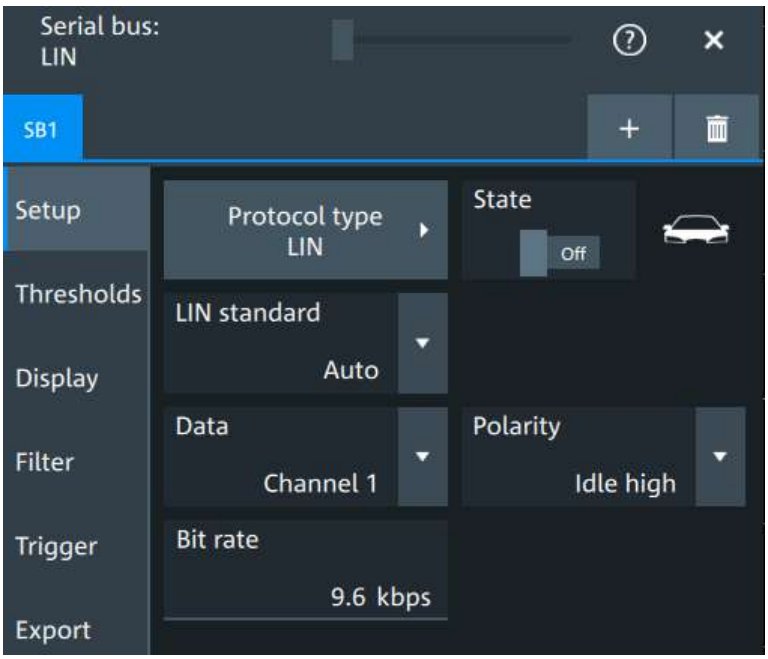

LIN standard
Selects the version of the LIN standard that is used in the DUT. The setting mainly defines the checksum version used during decoding.

The most common version is LIN v.2.x. For mixed networks, or if the standard is unknown, set the LIN standard to "Auto".

Remote command:
`SBUS<sb>:LIN:STANdard` on page 1970

Data
Sets the source waveform of the data line.

Remote command:
`SBUS<sb>:LIN:DATA:SOURce` on page 1969

Polarity
Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logic high.

Remote command:
`SBUS<sb>:LIN:POLarity` on page 1970


Bit rate
Sets the number of transmitted bits per second. The maximum bit rate for LIN is 20 kbit/s.

If the LIN standard is "J2602", the bit rate is 10.417 kbit/s and cannot be changed.

Remote command:
`SBUS<sb>:LIN:BITRate` on page 1968

14.13.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Thresholds".

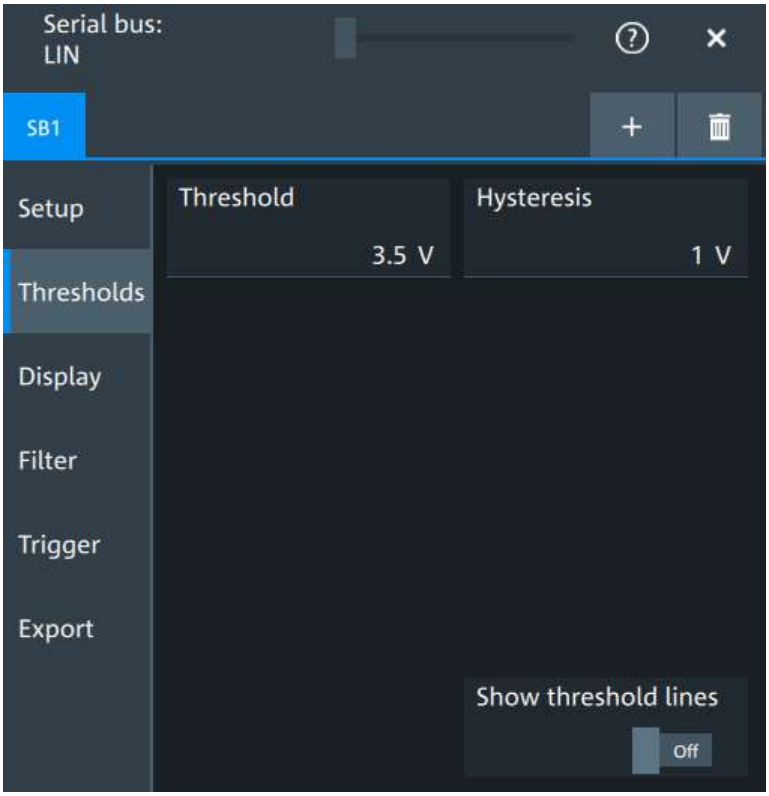

Threshold
Sets the threshold for the data channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:LIN:DATA:THReshold` on page 1969
`SBUS<sb>:LIN:DATA:HYSTeresis` on page 1969

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.


Remote command:
`SBUS<sb>:THReshold` on page 1566

14.13.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

14.13.3 LIN filter

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Filter" tab

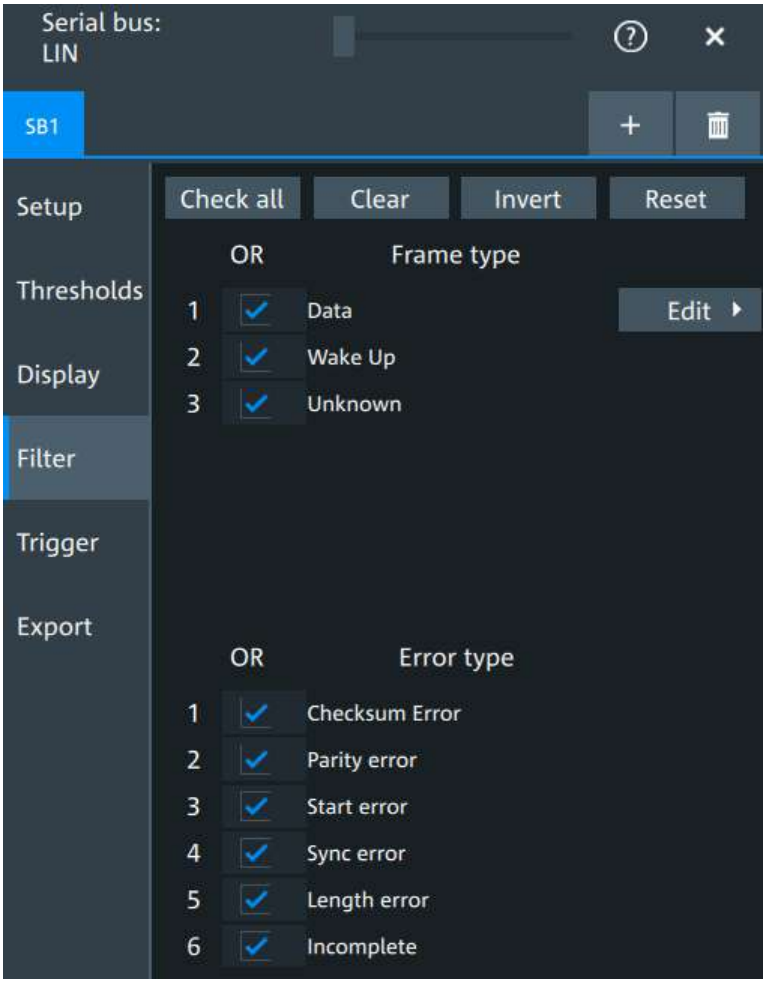

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:LIN:FILTer:CHKall` on page 1971
`SBUS<sb>:LIN:FILTer:CLR` on page 1972

SBUS<sb>:LIN:FILTer:INVert on page 1972
SBUS<sb>:LIN:FILTer:RST on page 1972

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.


For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "Data", "Wake" and "Unknown".

Remote command:
SBUS<sb>:LIN:FILTer:FRENable on page 1974
SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle on page 1974

Edit
Opens a dialog to define the details of the selected frame.

"Field" Enables the field type that you want to filter on for the selected frame.

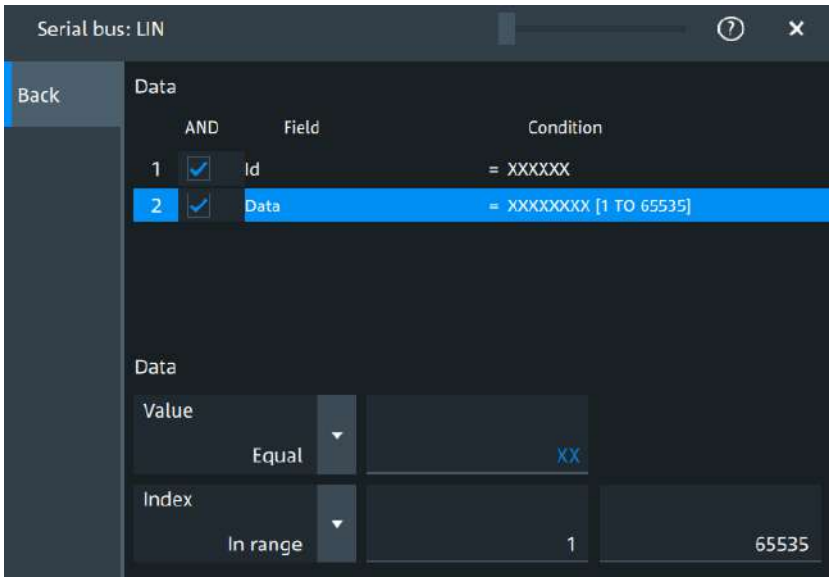

The available fields are "Id" and "Data".

Remote command:
SBUS<sb>:LIN:FILTer:FIENable on page 1974
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1974

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:LIN:FILTer:BIT on page 1972
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1972

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:LIN:FILTer:DMAX on page 1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1973
SBUS<sb>:LIN:FILTer:DMIN on page 1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1973
SBUS<sb>:LIN:FILTer:DOPerator on page 1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1973

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:LIN:FILTer:IMAX on page 1975
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1975
SBUS<sb>:LIN:FILTer:IMIN on page 1975
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1975
SBUS<sb>:LIN:FILTer:IOPerator on page 1976
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1976

Error type
Enables filtering on the selected error type.

The available errors are "Checksum error", "Parity error","Start error", "Sync error", "Length error" and "Incomplete".

Remote command:
SBUS<sb>:LIN:FILTer:ERENable on page 1974
SBUS<sb>:LIN:FILTer:ERRor<n>:ENABle on page 1974

14.13.4 LIN format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:LIN:FORMat:SELect on page 1977

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

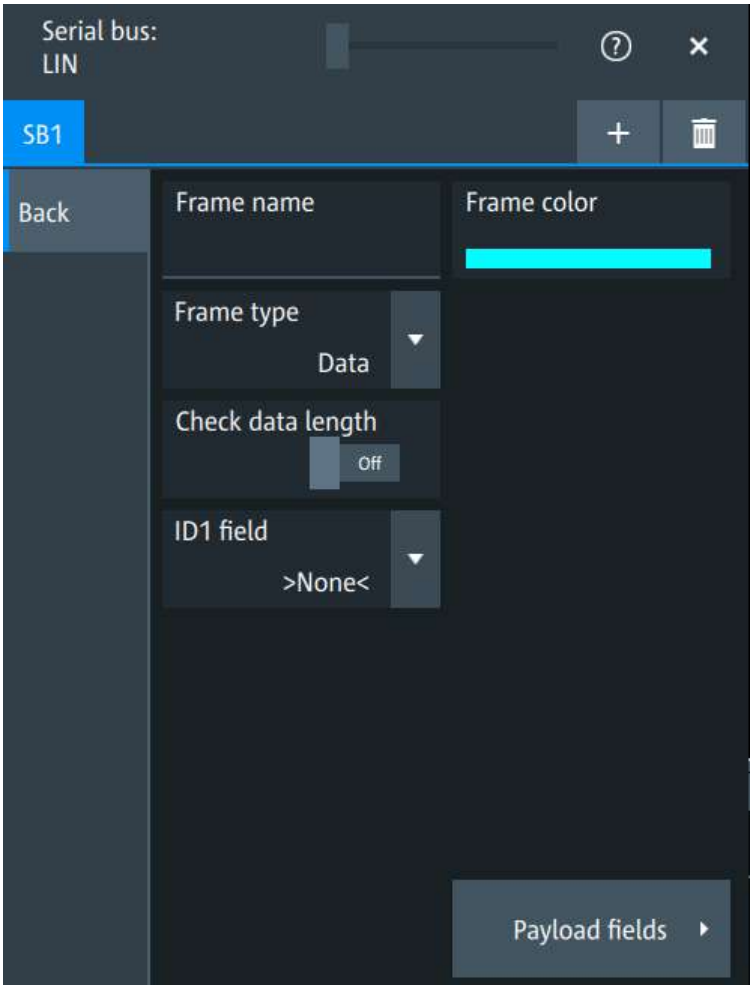

Remote command:
SBUS<sb>:LIN:FORMat:ADDFrame on page 1977

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:LIN:FORMat:CLR on page 1978
SBUS<sb>:LIN:FORMat:FCOunt? on page 1978

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:LIN:FORMat:LOAD on page 1977

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:LIN:FORMat:SAVE on page 1977

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:NAME on page 1979

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:COLor on page 1979

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:TYPE on page 1979

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENCheck on page 1980

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENValue on page 1980

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Field on page 1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Field on page 1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Field on page 1980


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Value on page 1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Value on page 1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Value on page 1981

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

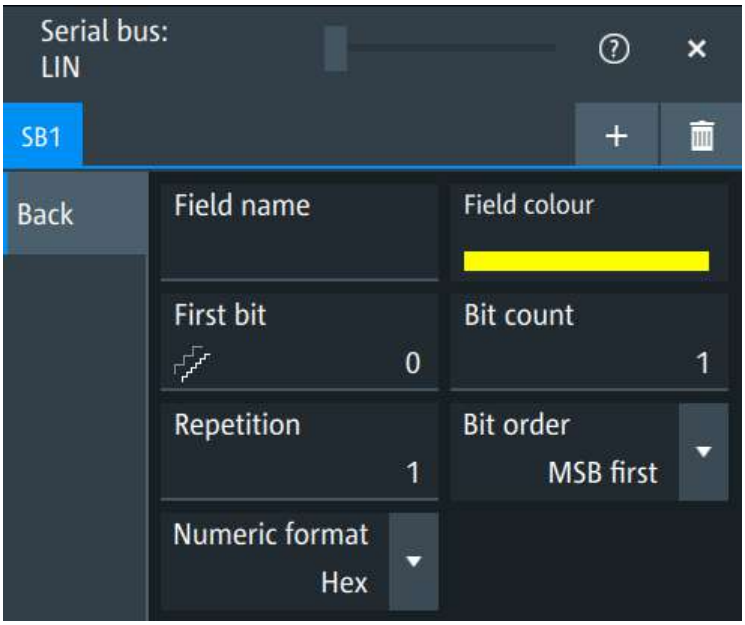

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ADDField on page 1978

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1981

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1981

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1982

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 1982

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 1982

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1983

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".

- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)
  - "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  - "=5X12": invalid
  - "=1H33": invalid

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1983

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1984

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1984

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1985

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1985

Parameter A,B
Defines the parameters of the linear function.


- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARA` on page 1986
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARB` on page 1986

14.13.5 LIN hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Trigger" tab > "Setup Hardware Trigger"

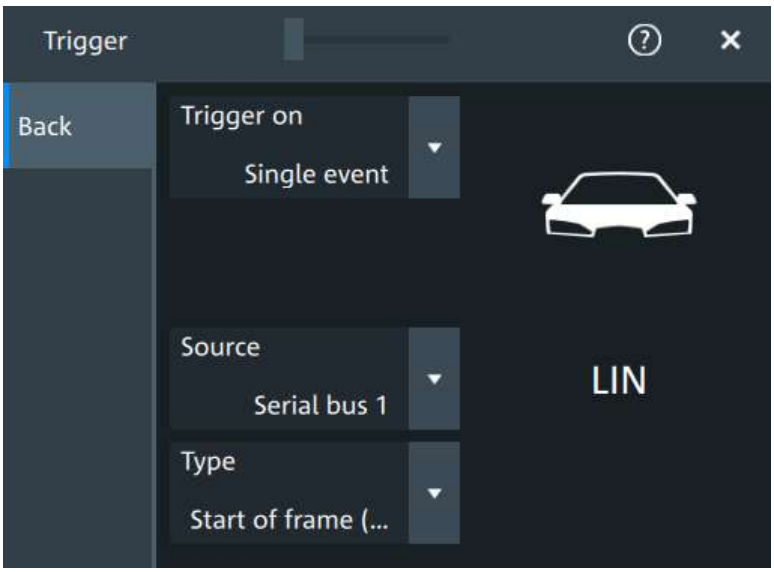

Type
Selects the trigger type for LIN analysis.


Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start of frame (Sync)" — Triggers on the stop bit of the sync field.

"Identifier" — Sets the trigger to one specific identifier or an identifier range. Enter only the 6-bit identifier without parity bits, not the protected identifier. Description of trigger type specific settings: Identifier setup: Condition, Frame ID min, Frame ID max.



"Identifier + Data" Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

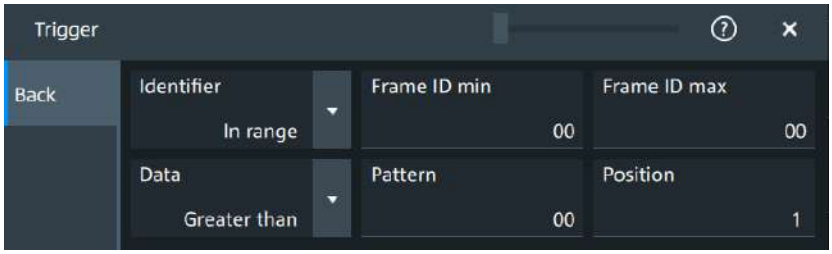

The identifier conditions are the same as for the "Identifier" trigger type, see Identifier setup: Condition, Frame ID min, Frame ID max. Data conditions are set with Data setup: Condition, Pattern, Position.

"Wake-up frame" Triggers after a wake-up frame.

"Error condition" Identifies various errors in the frame, see Error conditions.

Remote command:
`TRIGger:SBHW:LIN:TYPE` on page 1986

Identifier setup: Condition, Frame ID min, Frame ID max
The identifier setup consists of the condition and one or two identifier pattern.

Condition Sets the comparison condition to a specific value or a range.

"Frame ID min" Defines the bit pattern of the identifier. Enter only the 6-bit identifier without parity bits, not the protected identifier.

"Frame ID max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger:SBHW:LIN:IMIN` on page 1987
`TRIGger:SBHW:LIN:IMAX` on page 1988
`TRIGger:SBHW:LIN:ICONdition` on page 1988

Data setup: Condition, Pattern, Position
The data setup consists of the the condition, the position of the pattern, and one data pattern.


Condition Sets the operator to define a specific data pattern ("Equal" or "Not equal") or a range smaller or bigger than a specific pattern.

"Pattern" Defines the data pattern.

"Position" Sets the number of data events that are ignored, before trigger condition check of the data starts.

Remote command:
`TRIGger:SBHW:LIN:DCONdition` on page 1989
`TRIGger:SBHW:LIN:DMIN` on page 1989
`TRIGger:SBHW:LIN:DPOSition` on page 1988

Error conditions
Triggers if one or more of the following errors occur.

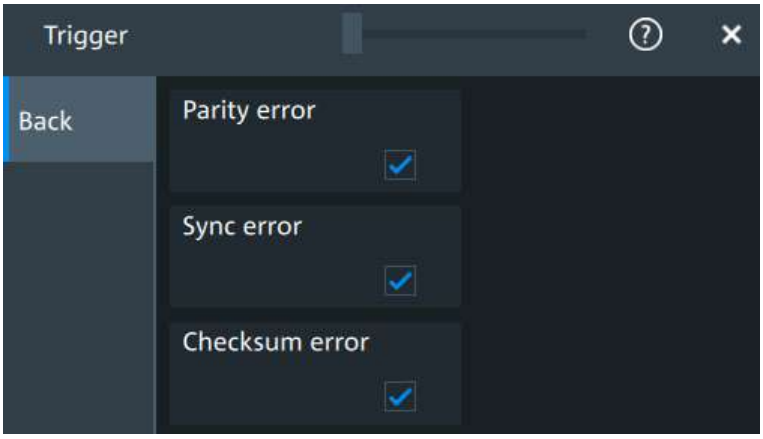

"Parity error"	Parity bits are the bits 6 and 7 of the identifier. They verify the correct transmission of the identifier.
"Sync error"	Synchronization error.
"Checksum error"	The checksum verifies the correct data transmission. It is the last byte of the frame response. The checksum includes not only the data but also the protected identifier (PID).

Remote command:
`TRIGger:SBHW:LIN:IPERror` on page 1987
`TRIGger:SBHW:LIN:SYERror` on page 1987
`TRIGger:SBHW:LIN:CHKSerror` on page 1989


14.13.6 LIN software trigger

14.13.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.13.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Trigger" tab > "Setup Software Trigger"

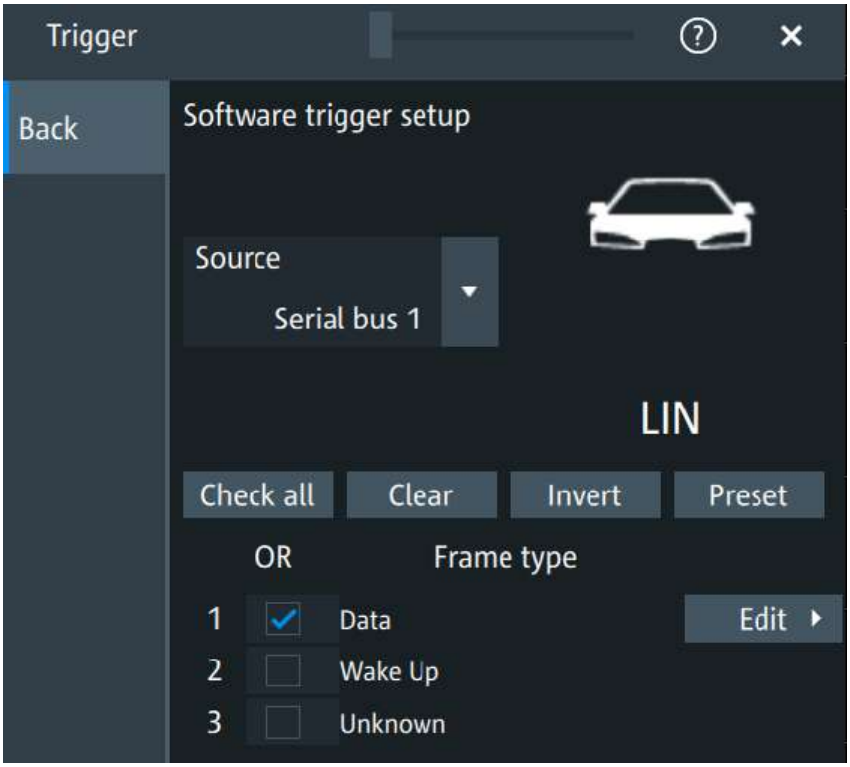

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:LIN:CHKall` on page 1990
`TRIGger:SBSW:LIN:CLR` on page 1990
`TRIGger:SBSW:LIN:INVert` on page 1990
`TRIGger:SBSW:LIN:RST` on page 1991


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Data", "Wake Up", "Unknown".

Remote command:
TRIGger:SBSW:LIN:FRENable on page 1991
TRIGger:SBSW:LIN:FRAMe<fr>:ENABle on page 1991

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

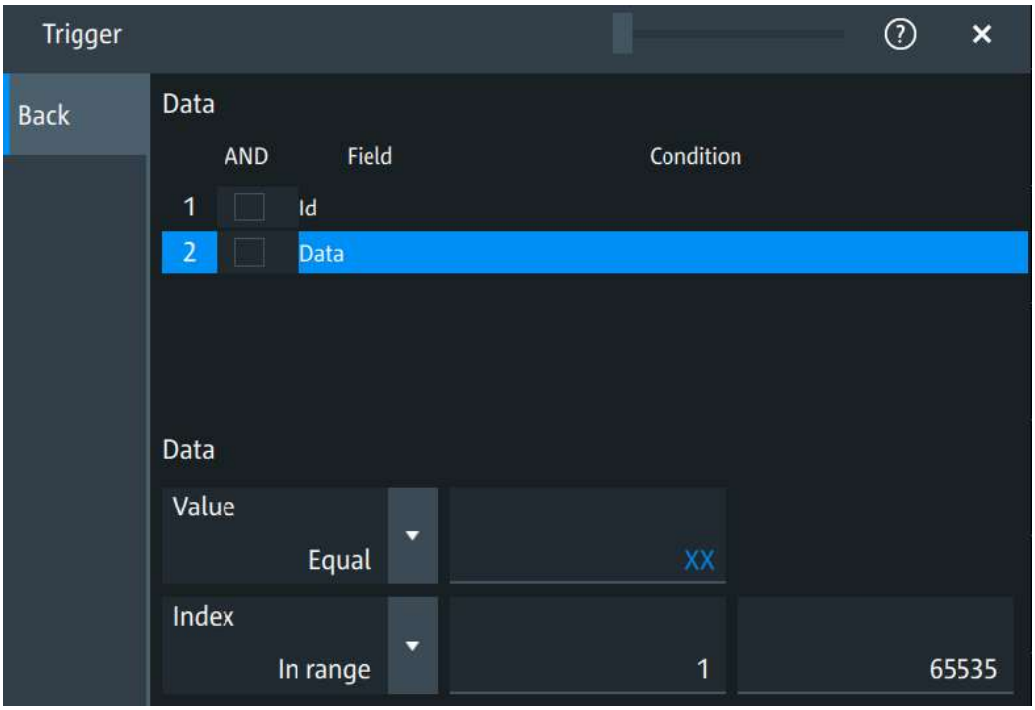

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available:

Remote command:
TRIGger:SBSW:LIN:FIENable on page 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:ENABle on page 1993

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:LIN:BIT on page 1991
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:BIT on page 1991

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:LIN:DMAX on page 1991
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMAX on page 1991
TRIGger:SBSW:LIN:DMIN on page 1992
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMIN on page 1992
TRIGger:SBSW:LIN:DOPerator on page 1992
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator on page 1992

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:LIN:IMAX on page 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMAX on page 1993
TRIGger:SBSW:LIN:IMIN on page 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMIN on page 1993
TRIGger:SBSW:LIN:IOPerator on page 1994
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator on page 1994

Error type
Enables triggering on the selected error type.

The following error types are available:"Checksum error", "Parity error","Start error", "Sync error", "Length error" and "Incomplete".

Remote command:
TRIGger:SBSW:LIN:ERENable on page 1994
TRIGger:SBSW:LIN:ERRor<m>:ENABle on page 1994

14.13.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.13.8 LIN decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

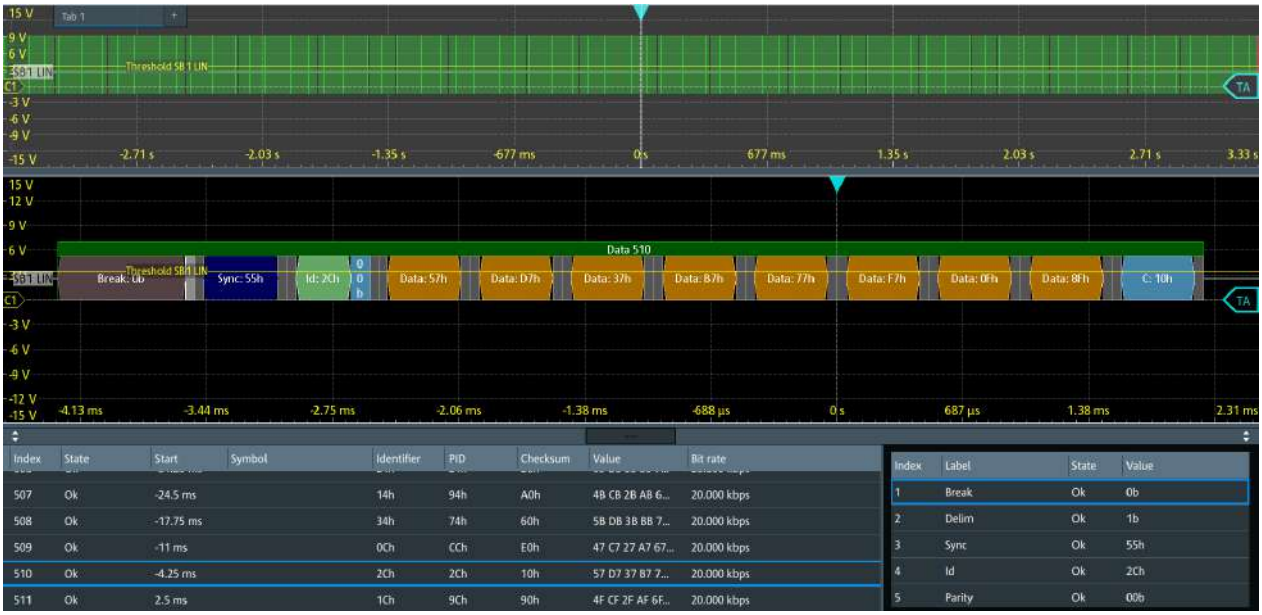


Figure 14-37: Decoded LIN signal

The decode results table contains information about all decoded frames.

Table 14-23: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Time of frame start
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Identifier	Identifier value
PID	Protected identifier
Checksum	Checksum value
Values	Value of the data bytes. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-24: Content of the frame details table

Column	Description
Index	Index of the field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.14, "LIN (option R&S MXO5-K520)", on page 1968.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example of LIN export file

```
Index,Start,Stop,State,Identifier,PID,Checksum,Bit rate
1,-3.44,-3.43375,'OK',02h,C2h,D0h,20000
2,-3.43325,-3.427,'OK',22h,22h,30h,20000
3,-3.4265,-3.42025,'OK',12h,92h,B0h,20000
4,-3.41975,-3.4135,'OK',32h,72h,70h,20000
5,-3.413,-3.40675,'OK',0Ah,CAh,F0h,20000

Details frame 1
Index,State,Value
1,'OK',40h
2,'OK',C0h
3,'OK',20h
4,'OK',A0h
5,'OK',60h
6,'OK',E0h
7,'OK',10h
8,'OK',90h

Details frame 2
Index,State,Value
1,'OK',50h
2,'OK',D0h
3,'OK',30h
4,'OK',B0h
5,'OK',70h
6,'OK',F0h
7,'OK',08h
8,'OK',88h
```

14.14 SENT (automotive electronics, option R&S MXO5-K520)

Single Ended Nibble Transmission (SENT) is a serial transmission interface protocol originally specified for the communication of sensors and control units in automotive electronics.

SENT is a protocol standard governed by the Society of Automotive Engineers (SAE J2716). For detailed information, refer to the SENT standard specification on http://www.sae.org.

The SENT protocol is used exclusively in automotive applications. Examples are electrical power steering, and advanced driver assistance such as parking assist or sensing of pressure, throttle position, pedal position, airflow mass, liquid level, etc.

Requirements

For performing SENT decode measurements, you need the following:

- MXO 5 with 1 available channel. The channel can be:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- One probe
- Option R&S MXO5-K520

- About the SENT protocol 806
- SENT configuration 810
- SENT filter 813
- SENT format configuration 817
- SENT software trigger 822
- Measure 826
- SENT decode results 826

14.14.1 About the SENT protocol

This section provides an overview of the protocol characteristics, encoding scheme, identifiers and trigger possibilities.

The SENT protocol transmits signal values point-to-point from a sensor to a controller (electronic control unit ECU), unidirectional. In contrast to conventional measurements, you can receive multiple data parameters via the SENT interface in a single transmission. Nevertheless, SENT is characterized by its simplicity and yet high customizability to meet the individual requirements of the applications.

SENT operates via a three-wire connection, a signal line, a supply voltage line for the sensor and a ground line. It transmits data digitally in variable timing units and evaluates the time between two falling edges (single edges). The signal is amplitude modulated with a constant amplitude voltage. Thus the influences of disturbance signals are not critical.

SENT key features

The main characteristics of SENT are:

- Serial communication protocol
- 3 wires: SENT (signal line), 5V (voltage line), GND (ground line)
- Output only, from sensor to receiver
- Point-to-point transmission, no bus
- Digital transmission
- High baud rate
- Data transmission in variable timing units of 4 bits (1 nibble) between two falling edges
- Transmitter-specific clock period (tick)
- Time measured between single falling edges

14.14.1.1 SENT transmission concept

A sensor converts the analog measured data to a digital signal, and thus transmits a series of pulses to the receiver. The receiver, e.g. an ECU processes the received signal also digitally.

The format of a SENT message frame has a fixed pulse order and a transmitter-specific clock period. The total transmission time varies depending on the clock variation of the transmitter and the transmitted data values. The data pulses embedded in the transmission sequence represent one or multiple data parameters to be communicated. The last pulses in a message frame are the CRC check pulse, allowing the receiver to perform some diagnostic tests, and an optional pause pulse.

A SENT transmission starts without a request from the receiver. Consecutive sequences are transmitted continuously after the falling edge of the last pulse.

The SENT protocol distinguishes between two channel types:

- **Fast channel:** transmits primary data, i.e. sensor readings like temperature, pressure, mass air flow, throttle position.
- **Slow channel:** transmits secondary data consisting of transfer characteristics, sensor ID, type, manufacturer diagnostic, etc.
  The slow channel transmission provides two serial message formats *Short* and *Enhanced* for customizing the secondary data.

The data of both channels is transmitted simultaneously, by including two bits of a slow channel message in the message frame of the fast channel. Even though it requires many fast channel messages to complete a slow channel message, you can use this function to transmit several slow channel messages with minimal impact on the primary sensor data and the data rate.

14.14.1.2 SENT message definitions

SENT terms

See the specific terms and definitions used in the SENT protocol:

- **Tick (clock tick):** basic unit of time
  - Transmitter-specific nominal clock period
  - 3 µs < clock tick <90 µs, with max. 20 % clock variation
- **Nibble:** minimum unit of data
  - Used to transmit data
  - Variable timing units between two falling edges

SENT fast channel

The SENT protocol enables you to transmit measurements of multiple sensors in one transmission sequence with data signals of varying length. The diagram in Figure 14-38 shows, for example, the encoding scheme for two 12-bit data signals.

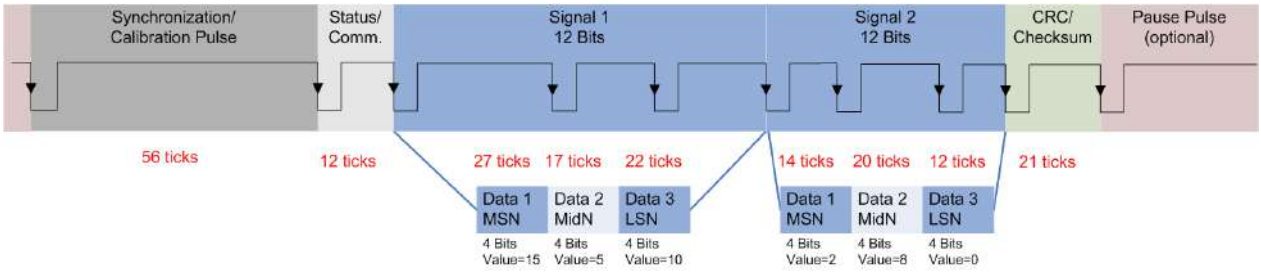


Figure 14-38: Example of a SENT transmission sequence

The format of a SENT transmission sequence consists of the following pulses:

- **Synchronization/Calibration pulse:**
  - Initial sequence of the receiver
  - The start condition is the falling edge of the last pulse (CRC or Pause)
  - The nominal pulse period is 56 clock ticks
  - Measures the actual clock variation of the transmitter and calculates the tick timing
- **Status/Communication Pulse (Nibble)**
  - One 4 bit pulse
  - Communicates status and enables the sensor to include slow channel message bits
    0: (LSB) specific application
    1: specific application
    2: Serial Data message or specific application (e.g. Infineon TLE4998S)
    3: (MSB) 1= message start; 0=Serial Data message or specific application (e.g. Infineon TLE4998S)
  - 12 to 27 clock ticks
  - Not included in CRC frame calculation

- **Data Pulses (Nibbles)**
  - One up to six 4 bit data nibbles
  - 12 to 27 clock ticks pulse period
  - Initial logic 0 time with ≥5 ticks, subsequent logical 1 with variable duration
- **CRC/Checksum**
  - One 4 bit pulse
  - Used for error checking of data nibbles (status nibble not included)
  - Detects single bit, odd number of nonconsecutive and single burst errors
- **Pause Pulse**
  - One optional pulse
  - Variable pulse length: 12 to 768 clock ticks
  - Can be used to create a transmission with a constant number of clock ticks

SENT slow channel

Short Serial Messages

For transmission of a slow channel message, 2 bits are included in a fast channel message, see the status nibble (Bit 2,3) in Figure 14-39.

A short serial message needs 16 fast channel messages until it is completely transmitted. Prerequisite for the complete transmission of the slow channel message is 16 consecutive error-free fast channel transmissions.

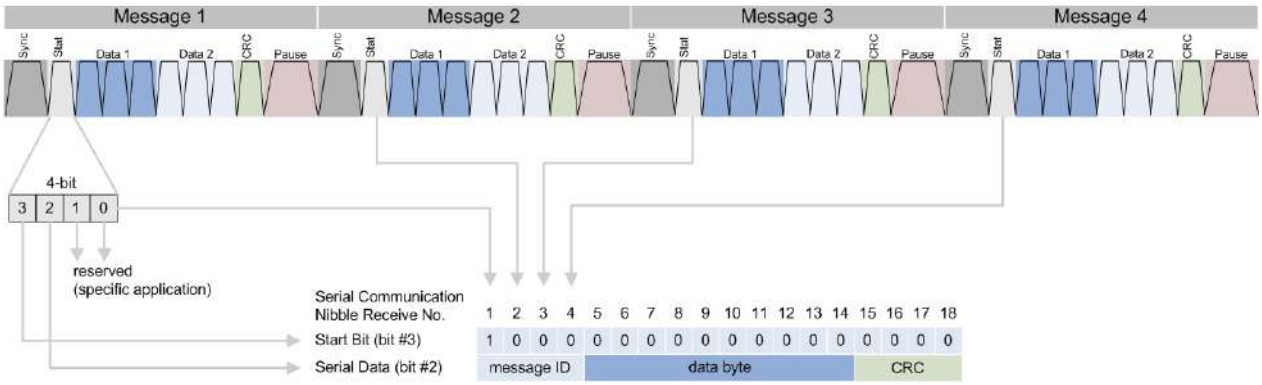


Figure 14-39: One serial message, composed of 16 SENT consecutive fast channel transmissions

Enhanced Serial Messages


The transmission of an enhanced serial message format requires 18 fast channel transmissions. Each slow channel message is assigned a message ID, which is transmitted with the data.

The enhanced serial message format provides two alternatives for configuring the message:


- 4-bit ID and 16-bit data
- 8-bit ID and 12-bit data

The graphs below illustrate the variants.

Table 14-25: Enhanced serial message formats

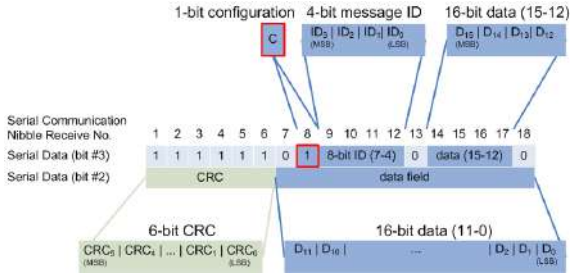

16-bit data and 4-bit message ID

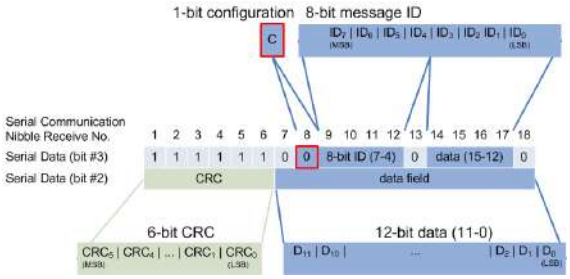


12-bit data and 8-bit message ID

14.14.2 SENT configuration

14.14.2.1 SENT configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Setup".

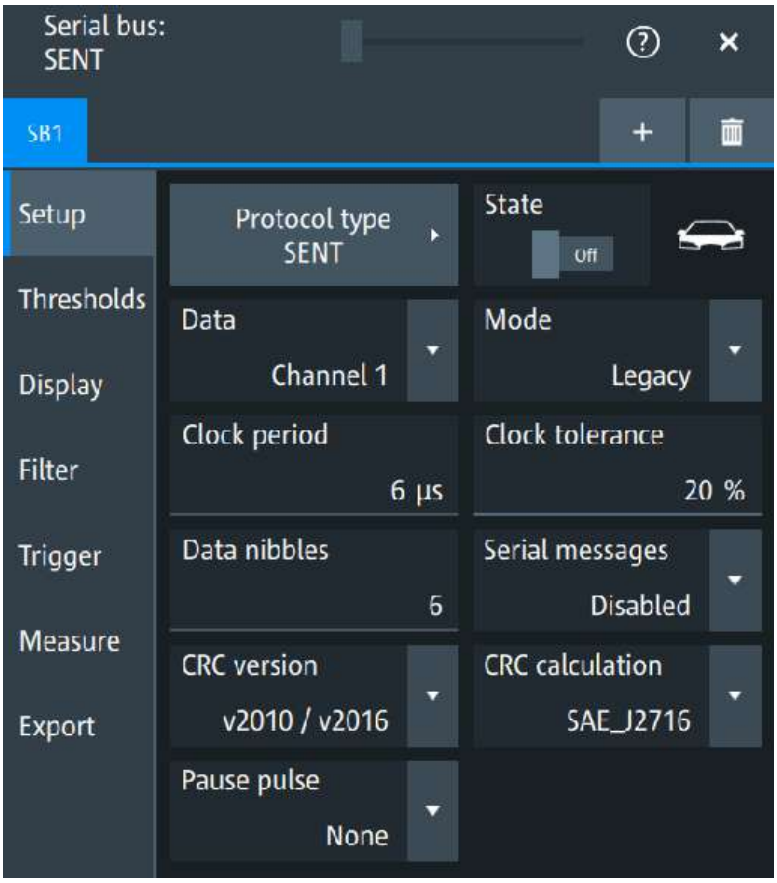

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
SBUS<sb>:TYPE on page 1564

Data
Sets the source of the data line.

Remote command:
SBUS<sb>:SENT:DATA:SOURce on page 2003

Mode
Selects the operating mode of the SENT protocol.

If "Mode" = "Legacy", the "SPC" mode is not supported.

The single point calibration ("SPC") mode was introduced in the SENT 2.0 specification. If "SPC" mode is selected, the SENT protocol allows for the calibration of a sensor's output by sending a single calibrated value. It is particularly useful for applications where a sensor needs to be calibrated to ensure accurate readings. The SPC mode typically involves the transmission of a single data frame that contains the calibrated value, which can then be used by the receiving device to interpret the sensor's output correctly.

Remote command:
SBUS<sb>:SENT:MODE on page 2004

Clock period
Sets the transmitter-specific nominal clock period (clock tick).

The clock period and signal length determine the speed of transmission.

Remote command:
SBUS<sb>:SENT:CLKPeriod on page 2002

Clock tolerance
Specifies a tolerated deviation of the clock.

Remote command:
SBUS<sb>:SENT:CLKTolerance on page 2002

Data nibbles
Sets the number of data units in a single transmission sequence.

The maximum number of data nibbles is 6.

Remote command:
SBUS<sb>:SENT:DNIBbles on page 2004

Serial message
Selects if serial messages are enabled or disabled.

Remote command:
SBUS<sb>:SENT:SFORmat on page 2006

CRC version
Selects the version that the CRC check is based on.

"Legacy" Based on the CRC calculation version used earlier than 2010.

"v2010/v2016" Based on the CRC calculation version updated in 2010/2016.

Remote command:
SBUS<sb>:SENT:CRCVersion on page 2003

CRC calculation
Selects the method for CRC calculation.

"SAE_J2716" Calculates the CRC according to the SAE standard.
For this method, the checksum is calculated over all nibbles except the communication and status nibble.

"TLE_4998X" Calculates the CRC according to the standard computing method for Infineon TLE_4998X sensors.
For this method, the checksum is calculated over all nibbles except the communication nibble.

Remote command:
SBUS<sb>:SENT:CRCMethod on page 2002

Pause pulse
Determines whether a pause pulse is transmitted after the checksum nibble.

You can use this pulse to create a transmission with a constant number of clock ticks. The pause pulse length can be between a minimum of 12 clock ticks up to 768 (3*256) ticks at a maximum.

Remote command:
SBUS<sb>:SENT:PPULse on page 2005

Frame length
Determines the frame length in terms of ticks. The dialog displays this settings parameter, if the signal has a constant frame length.

Remote command:
SBUS<sb>:SENT:PPFLength on page 2005

14.14.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Thresholds".

Threshold
Sets the threshold for the data channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:SENT:DATA:THReshold on page 2003
SBUS<sb>:SENT:DATA:HYSTeresis on page 2003

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566

14.14.2.3 Display settings


For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

14.14.3 SENT filter

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Filter" tab

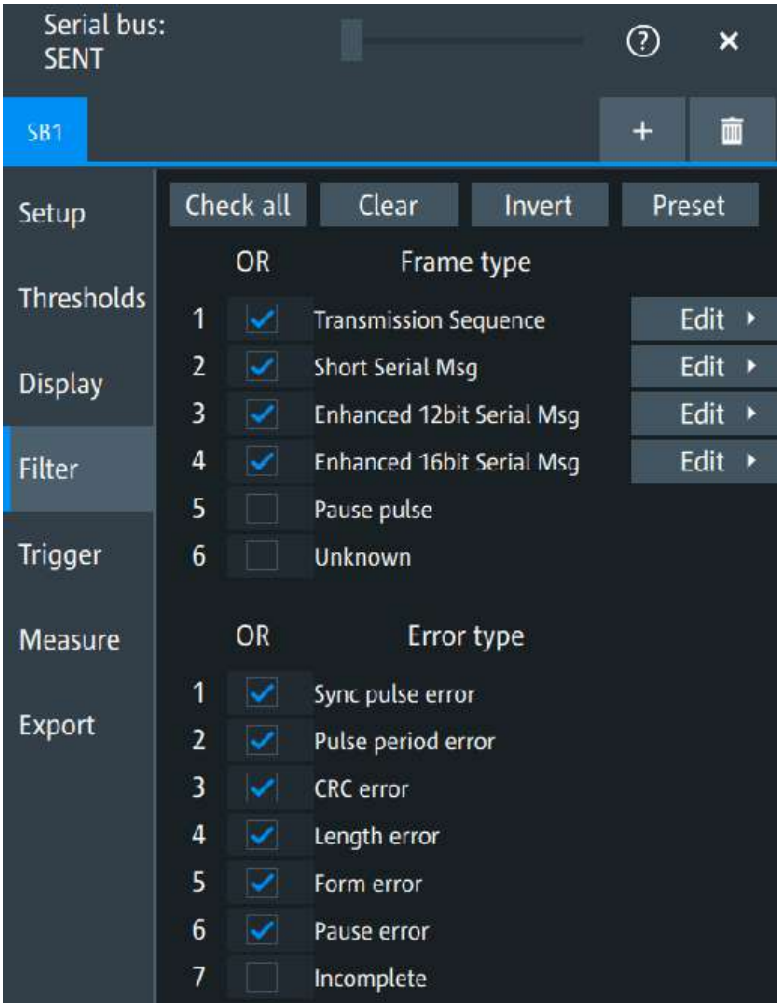

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:SENT:FILTer:CHKall` on page 2008
`SBUS<sb>:SENT:FILTer:CLR` on page 2008
`SBUS<sb>:SENT:FILTer:INVert` on page 2008
`SBUS<sb>:SENT:FILTer:RST` on page 2008

Enable
Enables the filtering on SENT frames. Only the frames that match the selected filter conditions are displayed.


Remote command:
`SBUS<sb>:SENT:FILTer:FRENable` on page 2009
`SBUS<sb>:SENT:FILTer:FRAMe<fr>:ENABle` on page 2009

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frame types are available: "Transmission Sequence", "Short Serial Msg", "Enhanced 12bit Serial Msg", "Enhanced 16bit Serial Msg", "Pause pulse", "Unknown".

Edit
Opens a dialog to define the details of the selected frame.

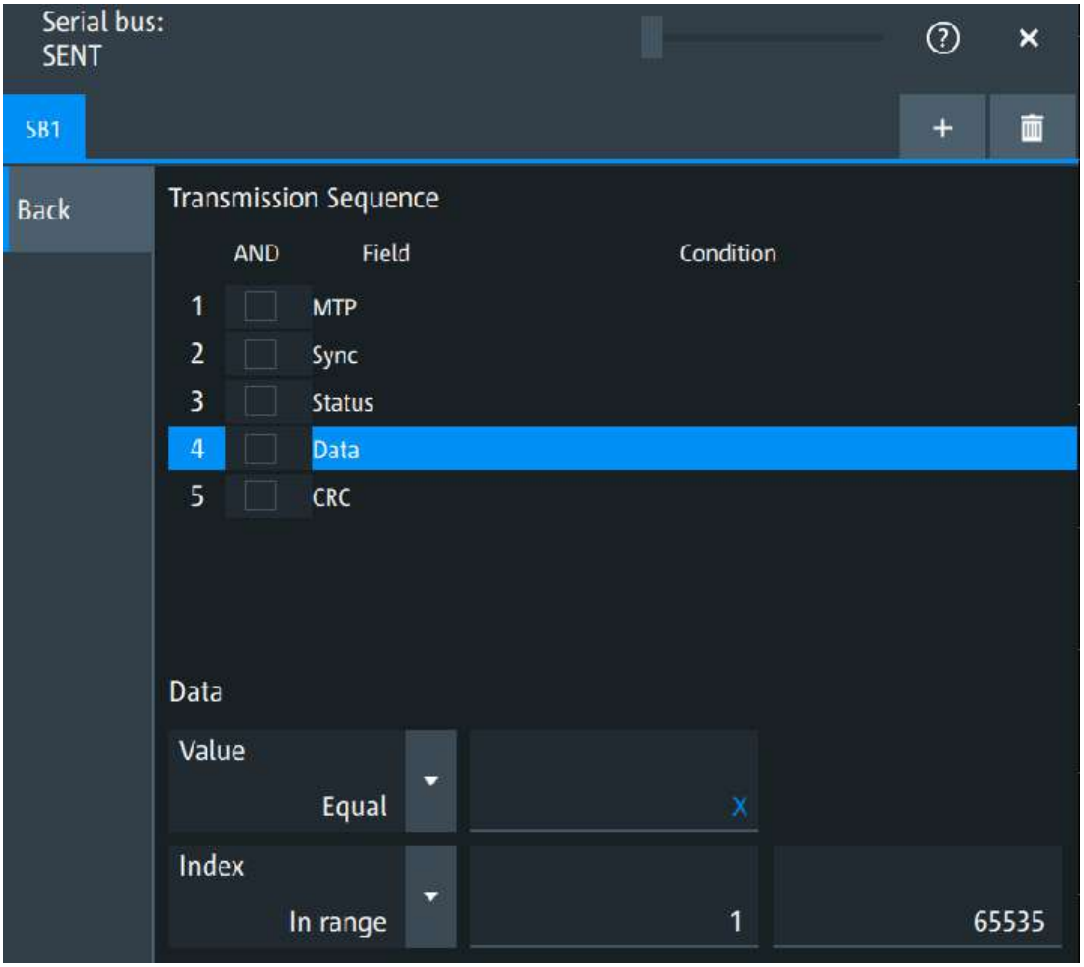

"Field" Enables the field type that you want to filter on for the selected frame. The following fields are available: "MTP", "Sync", "Status", "Data", "CRC", "ID".

Remote command:
SBUS<sb>:SENT:FILTer:FIENable on page 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2010

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:SENT:FILTer:BIT on page 2009
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2009

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:SENT:FILTer:DMAX on page 2009
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2009
SBUS<sb>:SENT:FILTer:DMIN on page 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2010
SBUS<sb>:SENT:FILTer:DOPerator on page 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2010

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:SENT:FILTer:IMAX on page 2011
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2011
SBUS<sb>:SENT:FILTer:IMIN on page 2011
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2011
SBUS<sb>:SENT:FILTer:IOPerator on page 2012
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2012

Error type
Enables filtering on the selected error type.

The available error types are "Sync pulse error", "Pulse period error", "CRC error", "Length error", "Form error", "Pause error", "Incomplete".

Remote command:
SBUS<sb>:SENT:FILTer:ERENable on page 2012
SBUS<sb>:SENT:FILTer:ERRor<n>:ENABle on page 2012

14.14.4 SENT format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:SENT:FORMat:SELect` on page 2013

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

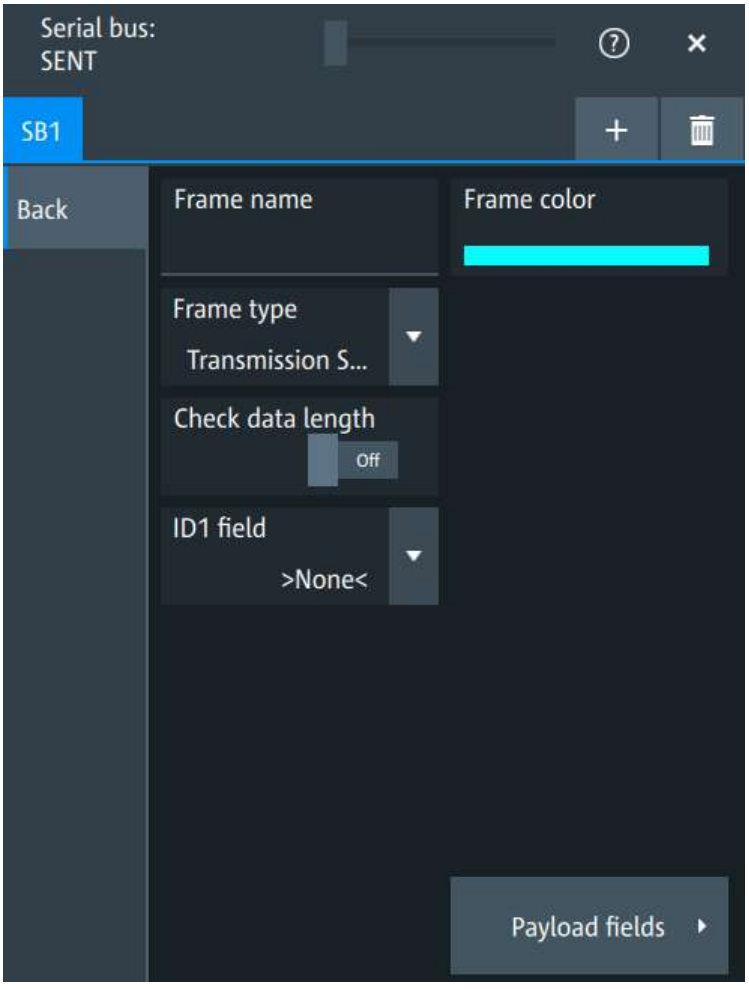

Remote command:
`SBUS<sb>:SENT:FORMat:ADDFrame` on page 2013

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:SENT:FORMat:CLR on page 2014
SBUS<sb>:SENT:FORMat:FCOunt? on page 2014

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:SENT:FORMat:LOAD on page 2014

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:SENT:FORMat:SAVE on page 2014

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:NAME on page 2015

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:COLor on page 2015

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:TYPE on page 2016

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENCheck on page 2016

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENValue on page 2016

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Field on page 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Field on page 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Field on page 2017


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Value on page 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Value on page 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Value on page 2017

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

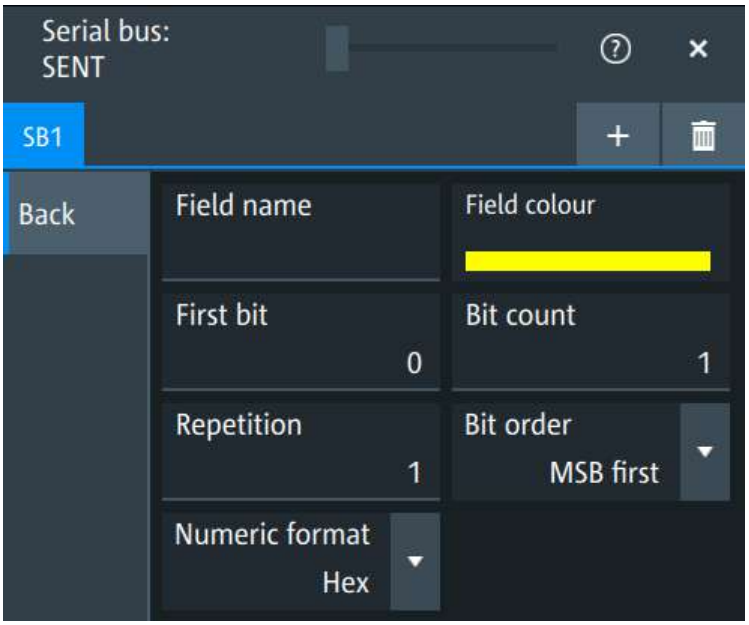

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ADDField on page 2015

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2017

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2018

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2018

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2018

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2019

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2019

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2020

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2020

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2021

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 2021

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2021

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2022
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2022


14.14.5 SENT software trigger

14.14.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.14.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger"

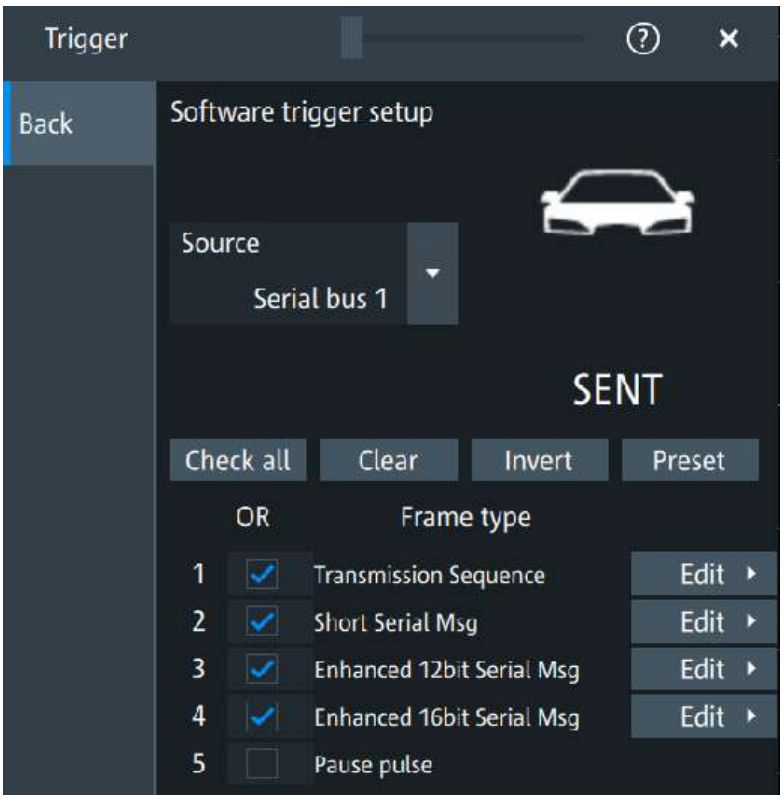

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:SENT:CHKall` on page 2023
`TRIGger:SBSW:SENT:CLR` on page 2023
`TRIGger:SBSW:SENT:INVert` on page 2023
`TRIGger:SBSW:SENT:RST` on page 2024


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frame types are available: "Transmission Sequence", "Short Serial Msg", "Enhanced 12bit Serial Msg", "Enhanced 16bit Serial Msg", "Pause pulse", "Unknown".

Remote command:
`TRIGger:SBSW:SENT:FRENable` on page 2024
`TRIGger:SBSW:SENT:FRAMe<fr>:ENABle` on page 2024

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

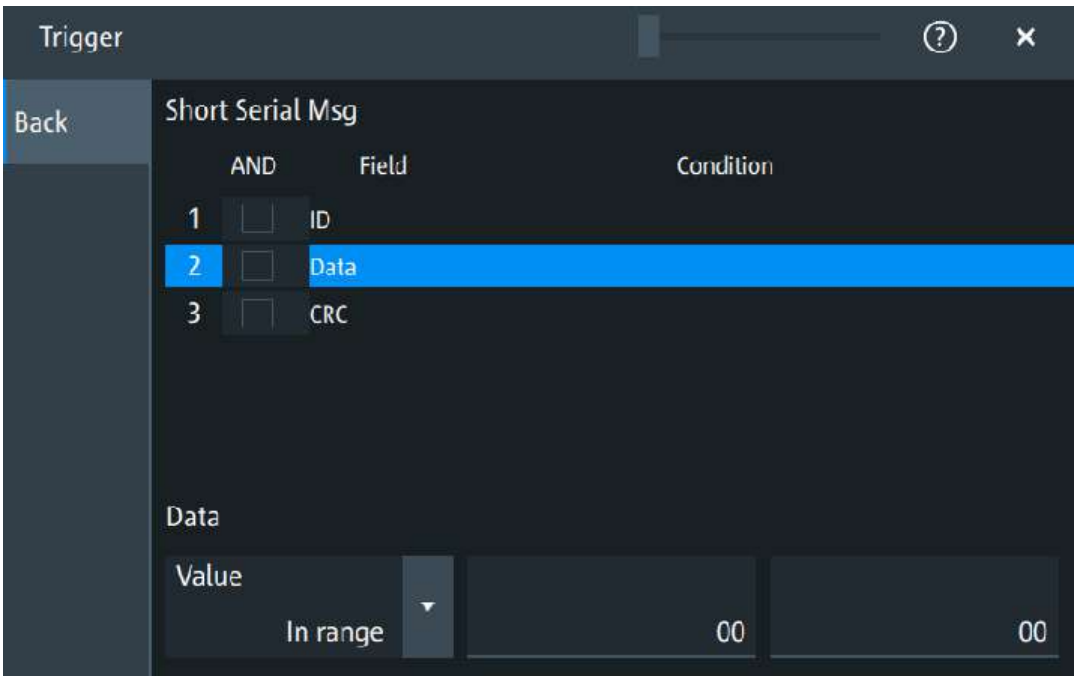

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "MTP", "Sync", "Status", "Data", "CRC", "ID".

Remote command:
`TRIGger:SBSW:SENT:FIENable` on page 2024
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:ENABle` on page 2024

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:SENT:BIT` on page 2024
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:BIT` on page 2024


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:SENT:DMAX` on page 2025
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMAX` on page 2025
`TRIGger:SBSW:SENT:DMIN` on page 2025
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMIN` on page 2025
`TRIGger:SBSW:SENT:DOPerator` on page 2025
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator` on page 2025

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:SENT:IMAX` on page 2026
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMAX` on page 2026
`TRIGger:SBSW:SENT:IMIN` on page 2026
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMIN` on page 2026
`TRIGger:SBSW:SENT:IOPerator` on page 2027
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator` on page 2027

Error type
Enables triggering on the selected error type.

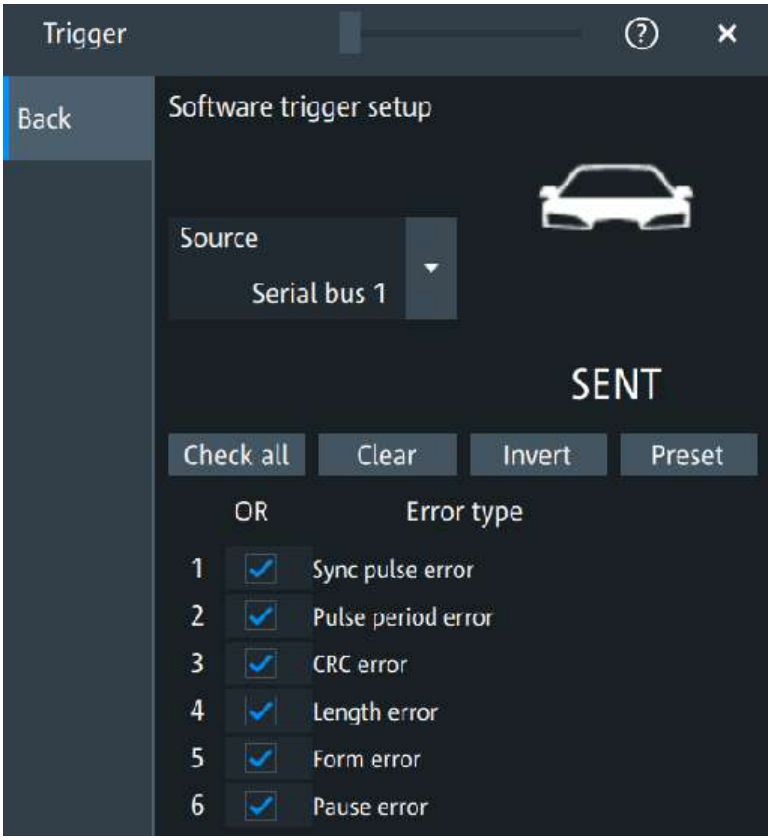

The following error types are available: "Sync pulse error", "Pulse period error", "CRC error", "Length error", "Form error", "Pause error".

Remote command:
`TRIGger:SBSW:SENT:ERENable` on page 2027
`TRIGger:SBSW:SENT:ERRor<m>:ENABle` on page 2027

14.14.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.14.7 SENT decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.



Figure 14-40: Decoded SENT signal

The decode results table contains information about all decoded frames.

Table 14-26: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame

Column	Description
Start	Time of frame start
Frame type	The type of frame
Symbolic name	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Sync time	Synchronisation time
Status [bin]	Status value
Data nibbles	Values of the data nibbles. Select the data format in the "Display" tab.
ID value	Identifier value
Clock rate	Value of the clock rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-27: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.15.5, "Decode results", on page 2028.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example SENT export file

```
Index,Start,Stop,State,Type,Symbol,SyncDur,Status,CRC,ID,MTP,SensorRespTime,BR
1 -0.0534 -0.0523 'OK' 'TRSQ' 0.000280 3h Bh - - - 199900
2 -0.0521 -0.0509 'PULS' 'TRSQ' 0.000280 3h Bh - - - 199900
3 -0.050  -0.0499 'OK' 'TRSQ' 0.000280 0h Fh - - - 199900
4 -0.0496 -0.0486 'OK' 'TRSQ' 0.000280 0h 4h - - - 199900
5 -0.0483 -0.0472 'CRC' 'TRSQ' 0.000280 0h 4h - - - 199900
6 -0.0470 -0.0460 'OK' 'TRSQ' 0.000280 0h 1h - - - 199900
```

```
7 -0.0457 -0.0447 'OK' 'TRSQ' 0.000280 0h 0h - - - 199900
8 -0.0447 -0.0435 'OK' 'TRSQ' 0.000280 0h Bh - - - 199900
9 -0.0432 -0.0422 'OK' 'TRSQ' 0.000280 0h Eh - - - 199900
10 -0.041 -0.0410 'OK' 'TRSQ' 0.000280 0h 3h - - - 199900

Details frame 1
Index    State    Value
1    'OK'    14h
2    'OK'    15h
3    'OK'    16h
4    'OK'    17h
5    'OK'    18h
6    'OK'    19h
7    'OK'    1Ah
8    'OK'    1Bh

Details frame 2
Index    State    Value
1    'OK'    1Ch
2    'OK'    1Dh
3    'OK'    1Eh
4    'OK'    1Fh
5    'OK'    20h
6    'OK'    21h
7    'OK'    22h
8    'OK'    23h
9    'OK'    24h
```

14.15 ARINC 429 (aerospace electronics, option R&S MXO5-K530)

The ARINC 429 is a specification that defines the characteristics of an avionic data bus used on commercial and transport aircraft.

- About the ARINC 429 828
- ARINC 429 configuration 829
- ARINC 429 filter 832
- ARINC 429 format configuration 835
- ARINC 429 software trigger 841
- Measure 844
- ARINC 429 decode results 844

14.15.1 About the ARINC 429

In an ARINC 429 system, a single transmitter/source is connected to 1 to 20 receivers/sinks on one twisted wire pair. The bus uses differential signals. The ARINC 429

standard uses a simplex communication - data may be transmitted in only one direction. The information is transmitted over the bus in defined series of words.

Word Format

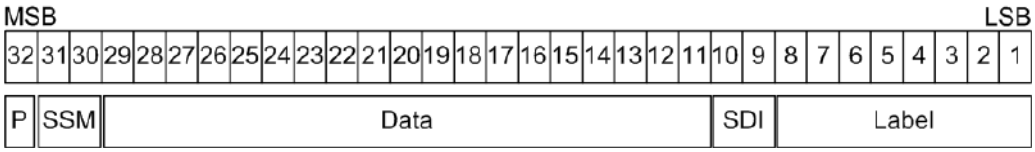


Figure 14-41: Structure of an ARINC 429 word

An ARINC 429 word is 32-bits and consists of the following parts (see Figure 14-41):


- Parity: the most significant bit (MSB). Checks if there are bit errors during the transmission. The total number of logic 1 bits for the word shall be odd.
- Sign/Status Matrix (SSM): the value of these bits depends on the data type. It may be used to report the status of hardware equipment.
- Data:
  - Binary (BNR): stores the data as a binary number.
  - Binary Coded Decimal (BCD): uses 4 data field bits to represent a decimal digit.
  - Discrete data: a combination of BNR and/ or BCD or individual bits that express specific equipment conditions.
  - Maintenance data and acknowledgment
  - Williamsburg / Buckhorn protocol: a bit-oriented protocol that is used for file transfer.
- Source/Destination Identifier (SDI): indicates the intended receiver or the transmitting subsystem.
- Label: gives information about the word's data type.

For comfortable analysis, you can load an editable label list, to interpret transferred numeric values as meaningful text labels.

14.15.2 ARINC 429 configuration

14.15.2.1 ARINC 429 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Setup".

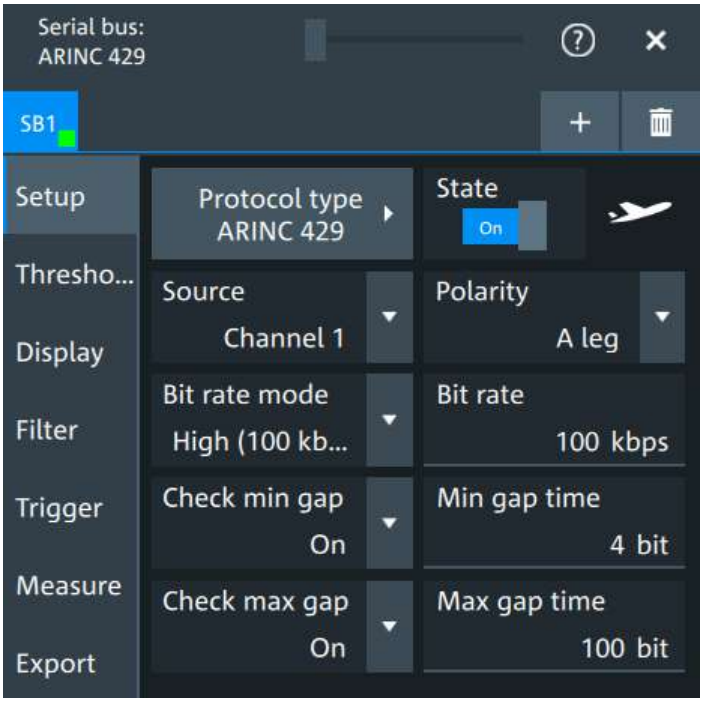

Source
Sets the source of the selected data line. Usually, the source is one of the analog channels.

Remote command:
`SBUS<sb>:ARINc:SOURce` on page 2038

Polarity
Selects the wire on which the bus signal is measured : A Leg or B Leg. The setting affects the digitization of the signal.

Remote command:
`SBUS<sb>:ARINc:POLarity` on page 2038

Bit rate mode, Bit rate
Selects the number of transmitted bits per second. The value can be set to high speed (100 kbit/s) or low speed (12.0- 14.5 kbit/s).

Remote command:
`SBUS<sb>:ARINc:BRMode` on page 2037
`SBUS<sb>:ARINc:BRValue` on page 2037

Min gap time,Max gap time
The gap time defines the idle time between two words, which is needed for word synchronization. The beginning of the first bit after the gap marks the start of a new word.


If "Check min gap" and/or "Check max gap" are enabled, the instrument detects the specified gaps during decoding.

You can define a minimum idle time "Min gap time", and/or a maximum time "Max gap time". The standard defines a minimum of 4-bit times to separate two subsequent words.

Remote command:
SBUS<sb>:ARINc:MAXGap:BITS on page 2039
SBUS<sb>:ARINc:MAXGap:SELect on page 2039
SBUS<sb>:ARINc:MINGap:BITS on page 2040
SBUS<sb>:ARINc:MINGap:SELect on page 2040

14.15.2.2 Thresholds

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Thresholds".

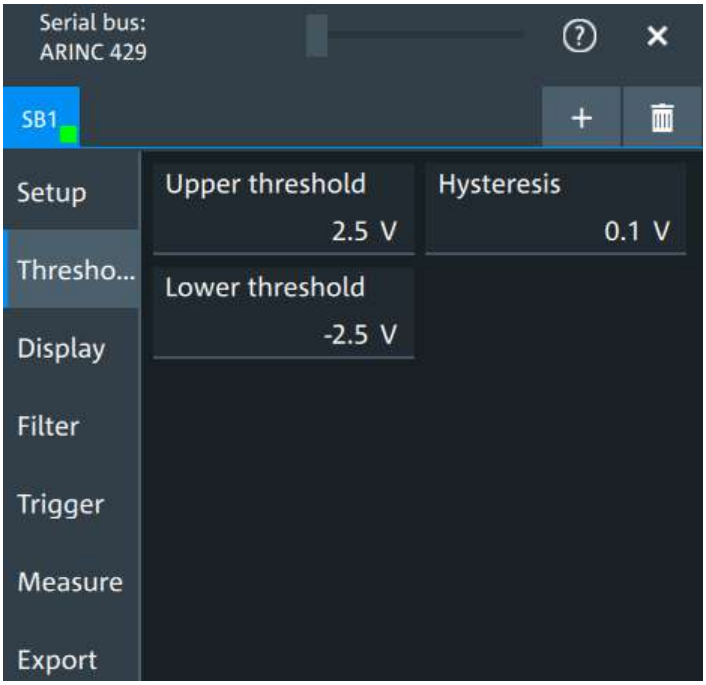

Threshold
Sets the upper and lower threshold for the source channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:ARINc:THReshold:HIGH on page 2038
SBUS<sb>:ARINc:THReshold:LOW on page 2039
SBUS<sb>:ARINc:THReshold:HYSTeresis on page 2039

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.15.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.


Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Ternary symbols"	Enables the display of the raw, ternary encoded symbols, consisting of the three states "-1", "0" and "+1".
"Bits"	Enables the display of all bits.
"Words"	Enables the display of all words.

14.15.3 ARINC 429 filter

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Filter" tab

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

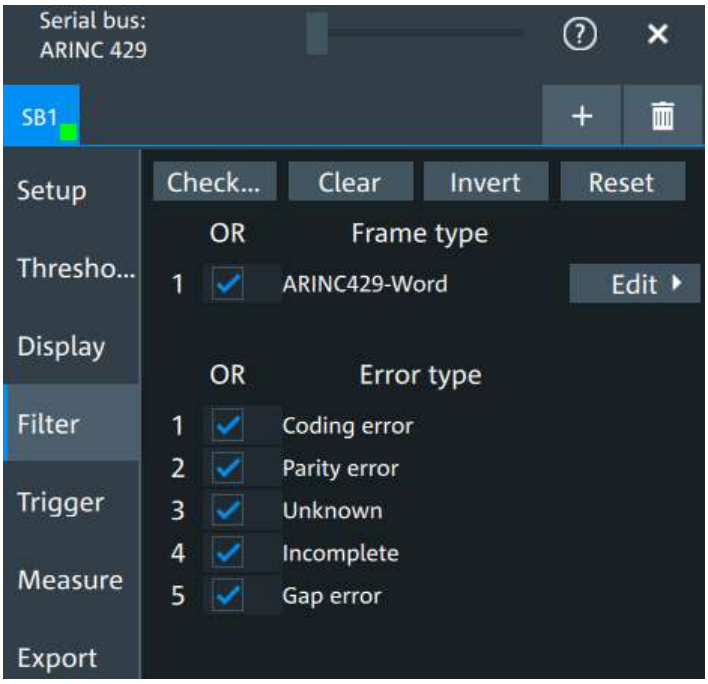

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:ARINc:FILTer:RST` on page 2042
`SBUS<sb>:ARINc:FILTer:INVert` on page 2042
`SBUS<sb>:ARINc:FILTer:CHKall` on page 2041
`SBUS<sb>:ARINc:FILTer:CLR` on page 2042


Enable
Enables the filtering on ARINC 429 frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
`SBUS<sb>:ARINc:FILTer:FRENable` on page 2045
`SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle` on page 2045

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Edit
Opens a dialog to define the details of the selected frame.

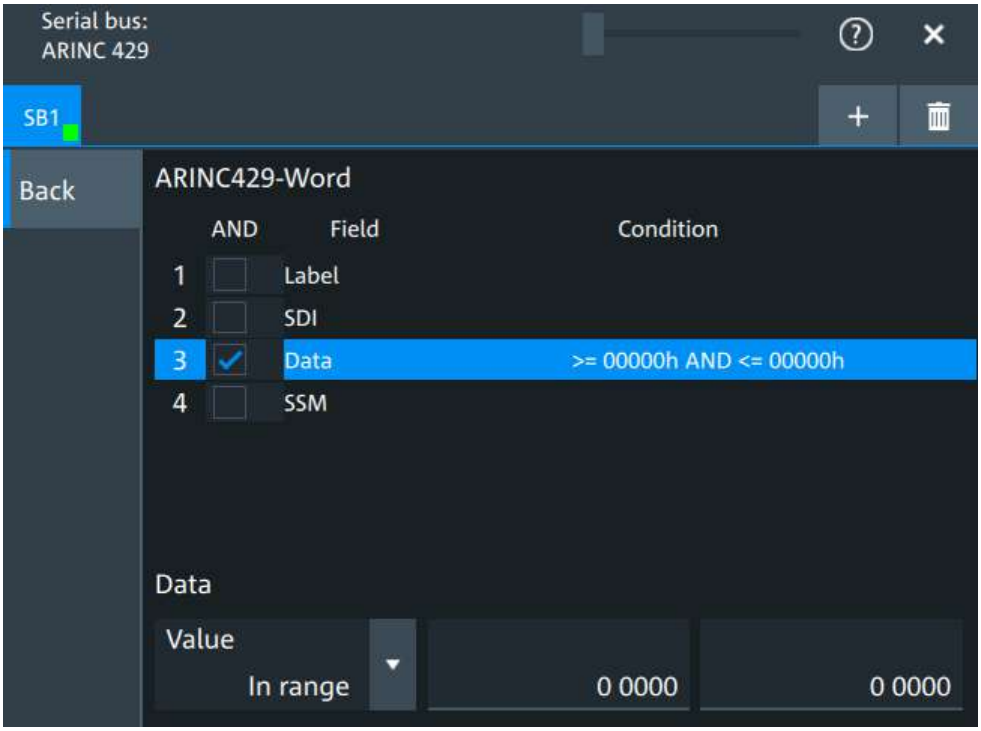

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Label", "SDI", "Data", "SSM".

Remote command:
`SBUS<sb>:ARINc:FILTer:FIENable` on page 2044
`SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2044

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:ARINc:FILTer:BIT` on page 2042
`SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2042

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:ARINc:FILTer:DMAX` on page 2043
`SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 2043
`SBUS<sb>:ARINc:FILTer:DMIN` on page 2044
`SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 2044
`SBUS<sb>:ARINc:FILTer:DOPerator` on page 2044
`SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 2044

Error type
Enables filtering on the selected error type.

The available error types are "Coding error", "Parity error", "Unknown", "Incomplete", "Gap error".

Remote command:
SBUS<sb>:ARINc:FILTer:ERENable on page 2043
SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABle on page 2043

14.15.4 ARINC 429 format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:ARINc:FORMat:SELect on page 2046

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

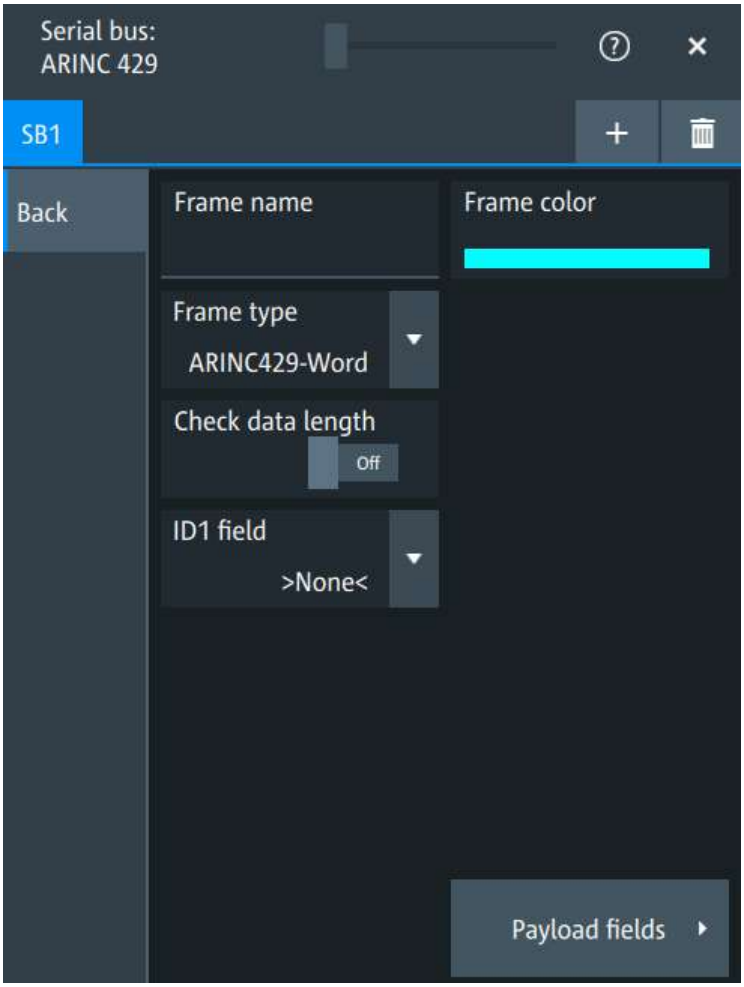

Remote command:
SBUS<sb>:ARINc:FORMat:ADDFrame on page 2046

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:ARINc:FORMat:CLR on page 2047
SBUS<sb>:ARINc:FORMat:FCOunt? on page 2047

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:ARINc:FORMat:LOAD on page 2046

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:ARINc:FORMat:SAVE on page 2047

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:NAME on page 2048

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:COLor on page 2048

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:TYPE on page 2048

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENCheck on page 2049

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENValue on page 2049

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Field on page 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Field on page 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Field on page 2049


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Value on page 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Value on page 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Value on page 2050

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

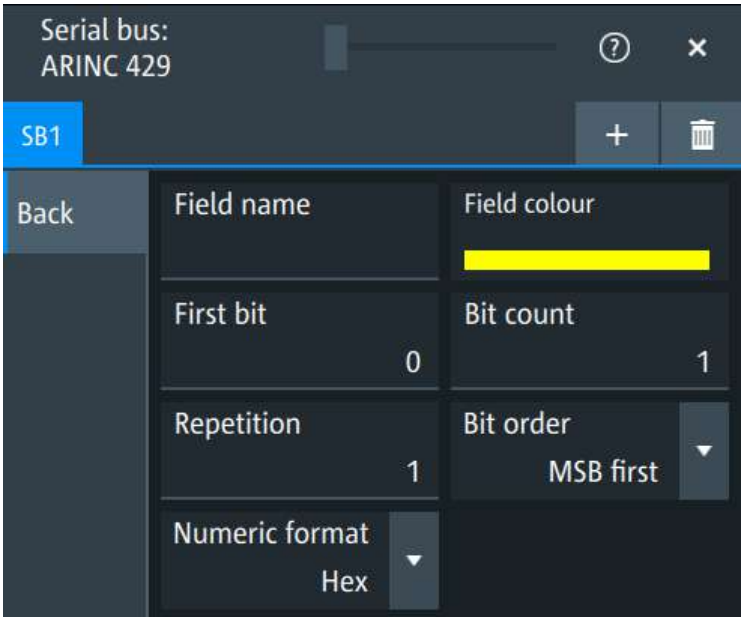

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ADDField` on page 2047

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:NAME` on page 2050

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:COLor` on page 2050

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2051

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2051

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2051

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2052

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2052

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2053

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 2053

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2054

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2054

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2055
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2055


14.15.5 ARINC 429 software trigger

14.15.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.15.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Trigger" tab > "Setup Software Trigger"

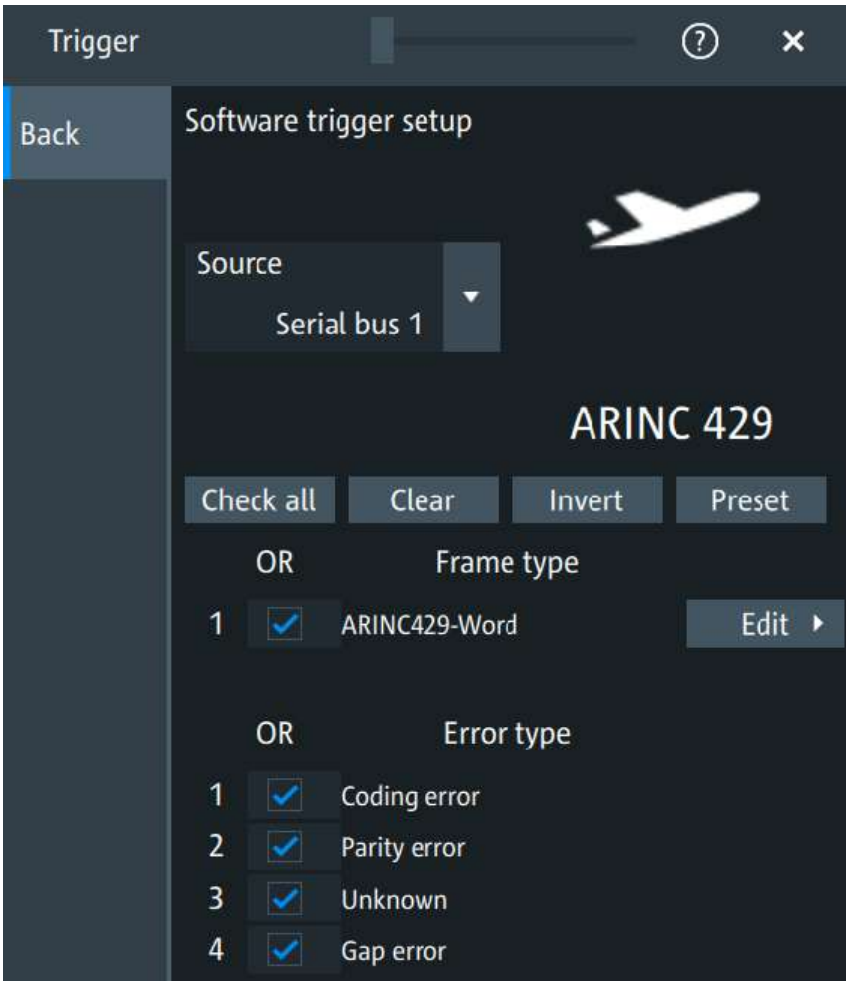

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:ARINc:CHKall` on page 2056
`TRIGger:SBSW:ARINc:CLR` on page 2056
`TRIGger:SBSW:ARINc:INVert` on page 2056
`TRIGger:SBSW:ARINc:RST` on page 2056


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "ARINC429-Word".

Remote command:
`TRIGger:SBSW:ARINc:FRENable` on page 2056
`TRIGger:SBSW:ARINc:FRAMe<fr>:ENABle` on page 2056

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

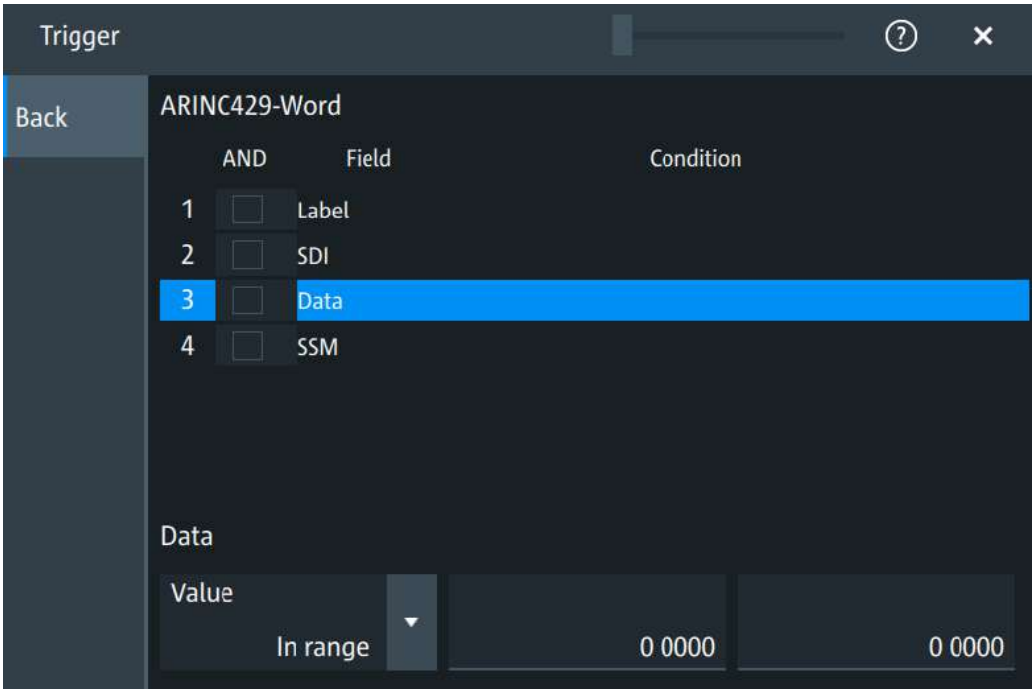

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "Label", "SDI", "Data", "SSM".

Remote command:
`TRIGger:SBSW:ARINc:FIENable` on page 2058
`TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:ENABle` on page 2058

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:ARINc:BIT` on page 2057
`TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:BIT` on page 2057

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:ARINc:DMAX` on page 2057
`TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMAX` on page 2057
`TRIGger:SBSW:ARINc:DMIN` on page 2057
`TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMIN` on page 2057
`TRIGger:SBSW:ARINc:DOPerator` on page 2058
`TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator` on page 2058

Error type
Enables triggering on the selected error type.

The available error types are "Coding error", "Parity error", "Unknown", "Gap error".

Remote command:
`TRIGger:SBSW:ARINc:ERENable` on page 2059
`TRIGger:SBSW:ARINc:ERRor<m>:ENABle` on page 2059

14.15.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.15.7 ARINC 429 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.



Figure 14-42: Decoded ARINC429 signal

The decode results table contains information about all decoded frames.

Table 14-28: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame

Column	Description
Start	Start time of the frame
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Label	The label name
SDI	The state of the SDI bits
Data	All 32 bits of the word. Select the data format in the "Display" tab.
SSM	The state of the SSM bits
32-bit word	The value of the data bytes. Select the data format in the "Display" tab.
Data rate	Value of the data rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.16.5, "Decode results", on page 2060.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example ARINC export file

```
Index,Start,Stop,Symbol,State,Label,SDI,Data,SSM,Raw Data,Bit Rate
1,-0.103,-0.10268,---,'OK',257o,3h,72470h,01b,#HC1,#HC4,#H9F,#HF5,100000
2,-0.10268,-0.10236,---,'OK',316o,0h,22608h,00b,#H02,#H0C,#H88,#H73,100000
3,-0.10236,-0.10204,---,'OK',257o,3h,72470h,01b,#HC1,#HC4,#H9F,#HF5,100000
4,-0.10204,-0.10172,---,'OK',317o,0h,62608h,00b,#H02,#H0C,#H8C,#HF3,100000
5,-0.10172,-0.1014,---,'OK',257o,3h,72470h,01b,#HC1,#HC4,#H9F,#HF5,100000
```

14.16 SpaceWire (aerospace communications, option R&S MXO5-K530)

The SpaceWire is a communication network standard used for spacecraft. It is based on the IEEE 1355 standard of communications and coordinated by the European Space Agency (ESA).

- SpaceWire basics 846
- SpaceWire configuration 847
- SpaceWire filter 849
- SpaceWire format configuration 852
- SpaceWire software trigger 858
- Measure 860
- SpaceWire decode results 860

14.16.1 SpaceWire basics

The SpaceWire links are a Point-to-point (P2P) connection between a node and another node or a router. The link is full-duplex bidirectional serial data link.

The SpaceWire has two types of characters:

- Data characters containing a parity bit, a data control flag and eight bits of data.

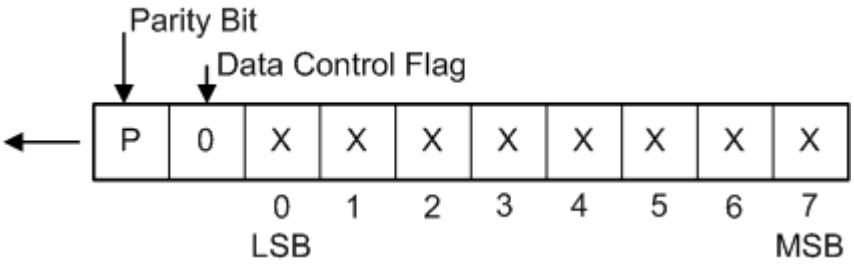


Figure 14-43: SpaceWire data characters

- Control characters containing a parity-bit, a data-control flag and the 2-bit control code. The data control flag is set to 1 and indicates that this is a control character.

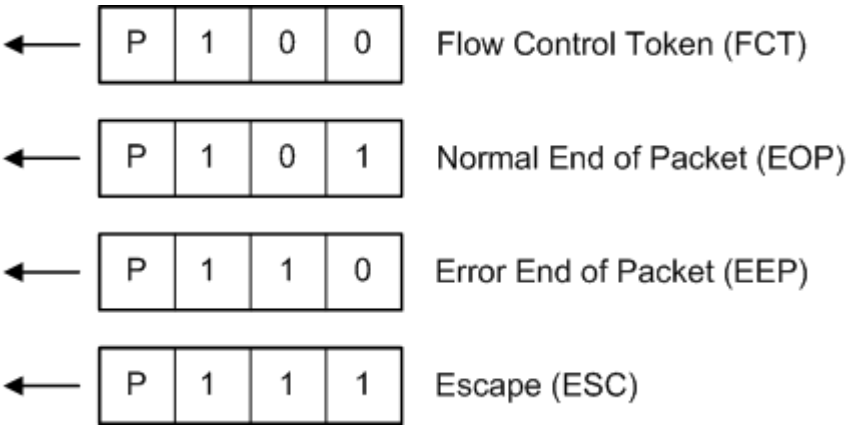


Figure 14-44: SpaceWire control characters

Also there are two control codes:

- NULL code consisting of an Escape (ESC) and a Flow Control Token (FCT)
- Time Code consisting of an ESC followed by a single data character


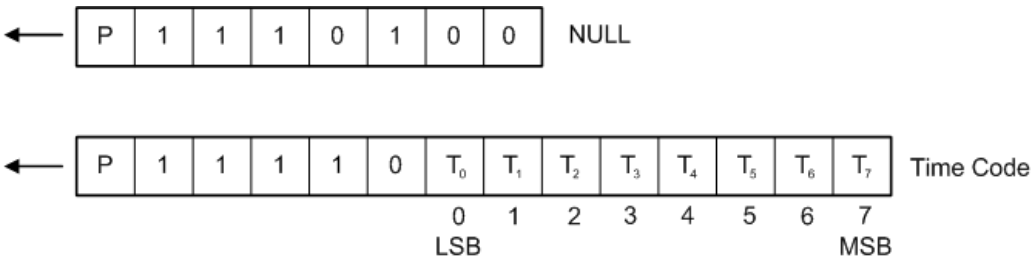


Figure 14-45: SpaceWire control codes

14.16.2 SpaceWire configuration

14.16.2.1 SpaceWire configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Setup".

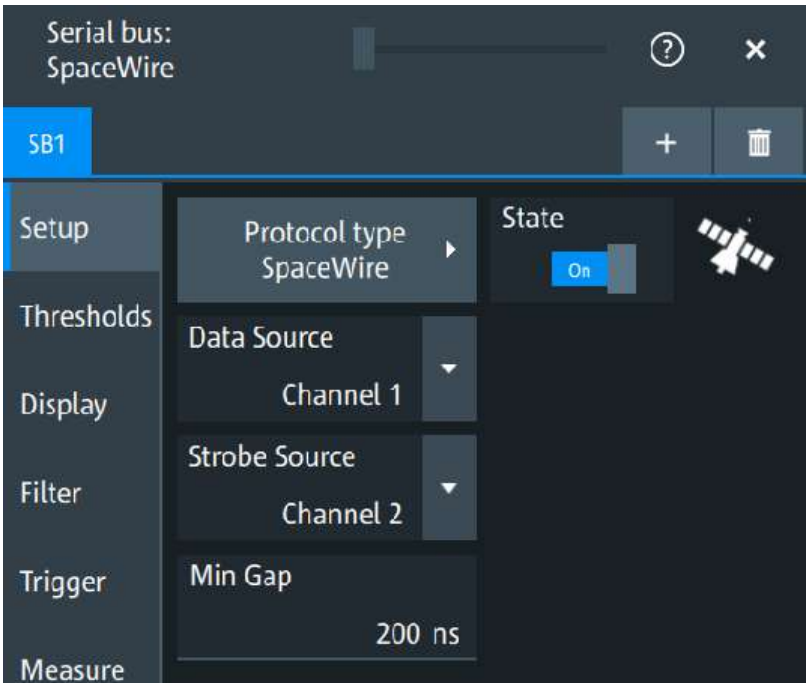

Data Source
Selects the source for the data signal. Typically, the data source is one of the analog channels.

Remote command:
`SBUS<sb>:SWIRe:DATA:SOURce` on page 2095

Strobe Source
Selects the source for the strobe signal. Typically, the strobe source is an analog channel different from the data source.


Remote command:
SBUS<sb>:SWIRe:STRBe:SOURce on page 2095

Min Gap
Specifies the minimum idle time between two frames, which is needed for synchronization. The beginning of the first bit after the gap marks the start of a new frame.

Remote command:
SBUS<sb>:SWIRe:MGAP on page 2097
SBUS<sb>:SWIRe:MINGap on page 2097

14.16.2.2 Thresholds

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Thresholds".

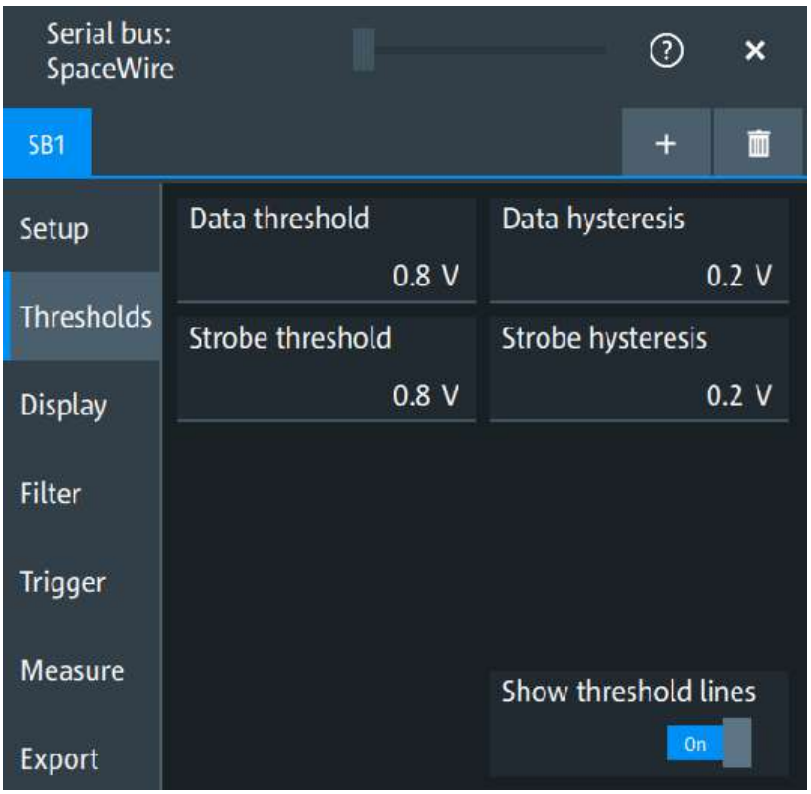

Thresholds
Sets the middle threshold for the data source and strobe source channels. Enter the values directly in the fields.

Additional to the thresholds, you can also set the hysteresis for the data source and strobe source, respectively.

Remote command:
SBUS<sb>:SWIRe:DATA:THReshold on page 2096
SBUS<sb>:SWIRe:DATA:HYSTeresis on page 2096
SBUS<sb>:SWIRe:STRBe:THReshold on page 2096
SBUS<sb>:SWIRe:STRBe:HYSTeresis on page 2096

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566

14.16.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.


"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Binary"	Enables the display of the raw, binary encoded symbols, consisting of the states "0" and "1".

Data format
See "Data format" on page 541.

14.16.3 SpaceWire filter

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Filter" tab

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

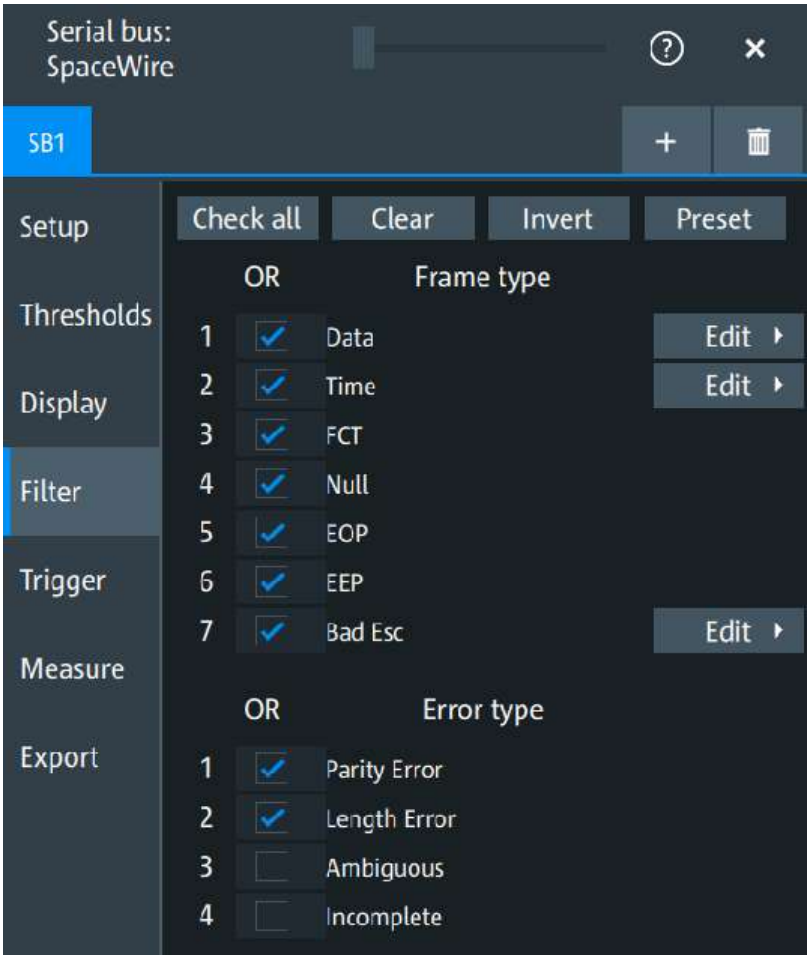

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:SWIRe:FILTer:CHKall` on page 2098
`SBUS<sb>:SWIRe:FILTer:CLR` on page 2098
`SBUS<sb>:SWIRe:FILTer:INVert` on page 2098
`SBUS<sb>:SWIRe:FILTer:RST` on page 2099

Enable
Enables the filtering on SpaceWire frames. Only the frames that match the selected filter conditions are displayed.


Remote command:
SBUS<sb>:SWIRe:FILTer:FRENable on page 2101
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:ENABle on page 2101

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame types are "Data", "Time", "FCT", "Null", "EOP", "EEP", "Bad Esc".

Edit
Opens a dialog to define the details of the selected frame.

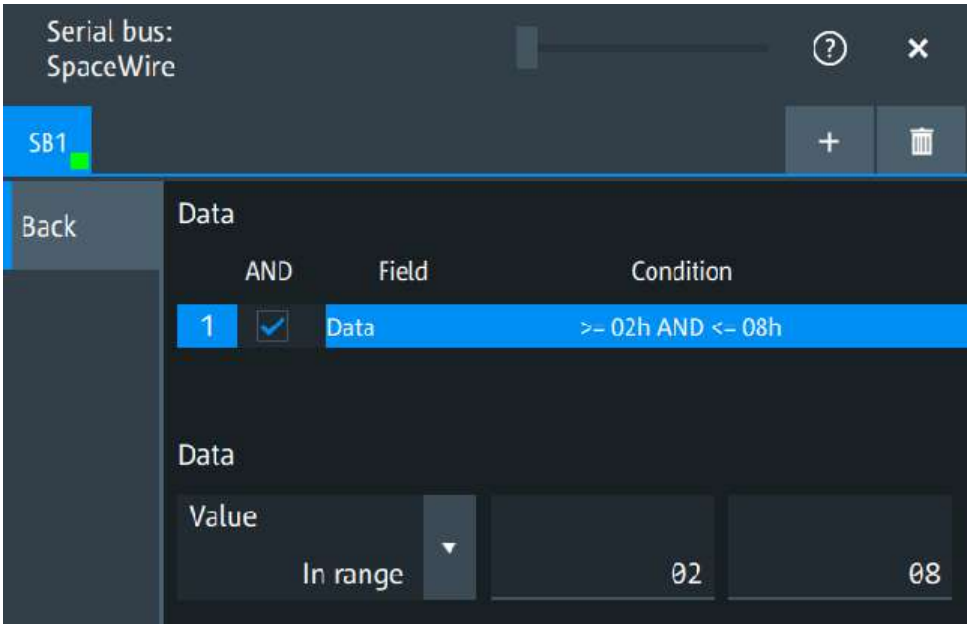

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Data", "Time", "Bad Esc".

Remote command:
SBUS<sb>:SWIRe:FILTer:FIENable on page 2101
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2101

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:SWIRe:FILTer:BIT on page 2099
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2099

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:SWIRe:FILTer:DMAX on page 2100
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2100
SBUS<sb>:SWIRe:FILTer:DMIN on page 2100
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2100
SBUS<sb>:SWIRe:FILTer:DOPerator on page 2100
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2100

Error type
Enables filtering on the selected error type.

The available error types are "Parity error", "Length error", "Ambiguous", "Incomplete".

Remote command:
SBUS<sb>:SWIRe:FILTer:ERENable on page 2099
SBUS<sb>:SWIRe:FILTer:ERRor<n>:ENABle on page 2099

14.16.4 SpaceWire format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:SWIRe:FORMat:SELect on page 2102

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

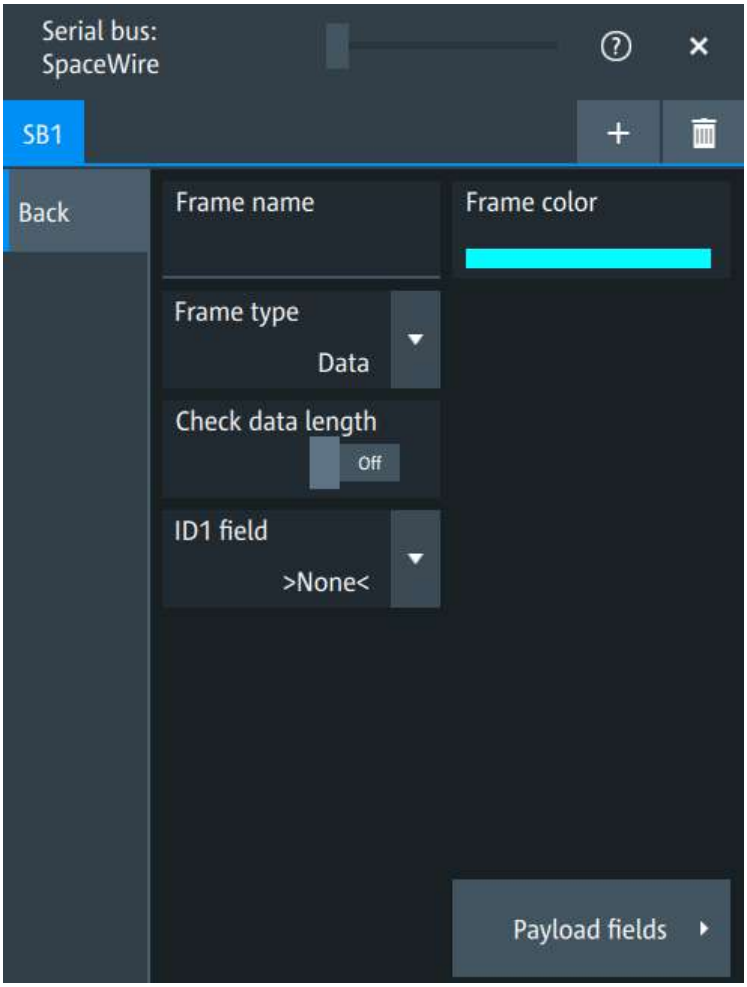

Remote command:
SBUS<sb>:SWIRe:FORMat:ADDFrame on page 2103

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:SWIRe:FORMat:CLR on page 2103
SBUS<sb>:SWIRe:FORMat:FCOunt? on page 2104

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:SWIRe:FORMat:LOAD on page 2103

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:SWIRe:FORMat:SAVE on page 2103

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:NAME on page 2104

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:COLor on page 2105

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:TYPE on page 2105

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENCheck on page 2105

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENValue on page 2106

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Field on page 2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value on page 2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value on page 2106


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Value on page 2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value on page 2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value on page 2106

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

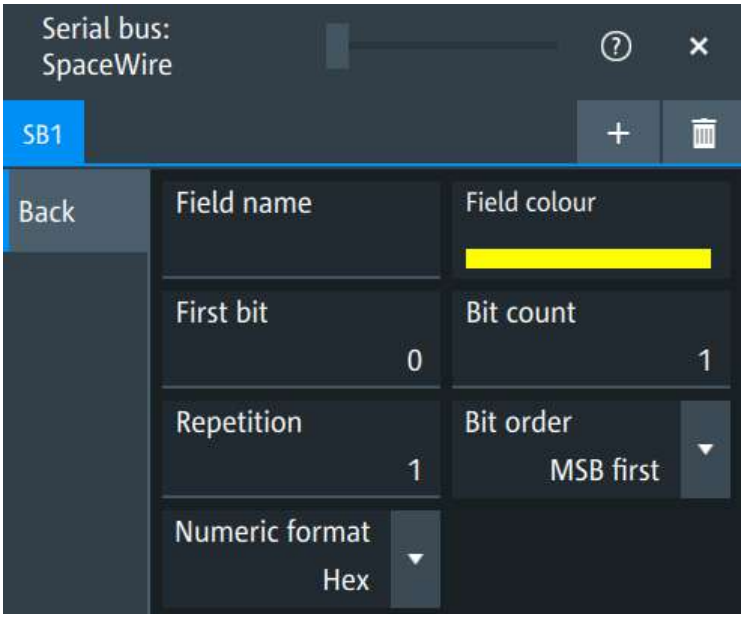

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ADDField on page 2104

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2107

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2107

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2107

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2108

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2108

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2108

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)
  - "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  - "=5X12": invalid
  - "=1H33": invalid

Remote command:
`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2109

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2109

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 2110

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2110

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2111

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2111
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2111


14.16.5 SpaceWire software trigger

14.16.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.16.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Trigger" tab > "Setup Software Trigger"

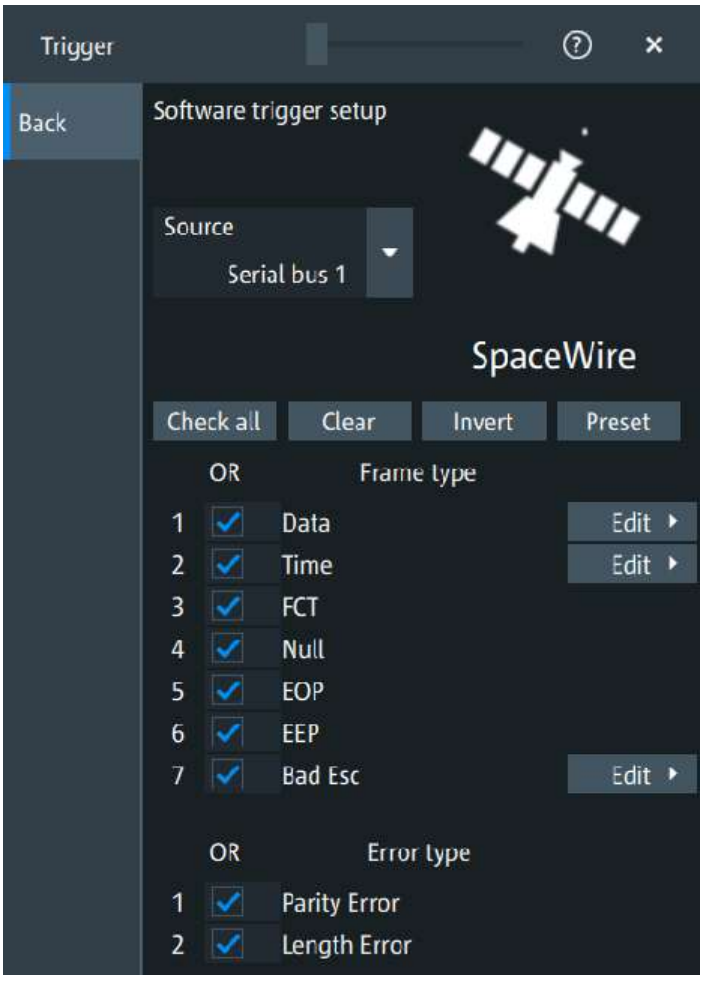

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:SWIRe:CHKall` on page 2112
`TRIGger:SBSW:SWIRe:CLR` on page 2112
`TRIGger:SBSW:SWIRe:INVert` on page 2112
`TRIGger:SBSW:SWIRe:RST` on page 2113


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Data", "Time", "FCT", "Null", "EOP", "EEP", "Bad Esc".

Remote command:
`TRIGger:SBSW:SWIRe:FRENable` on page 2113
`TRIGger:SBSW:SWIRe:FRAMe<fr>:ENABle` on page 2113

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

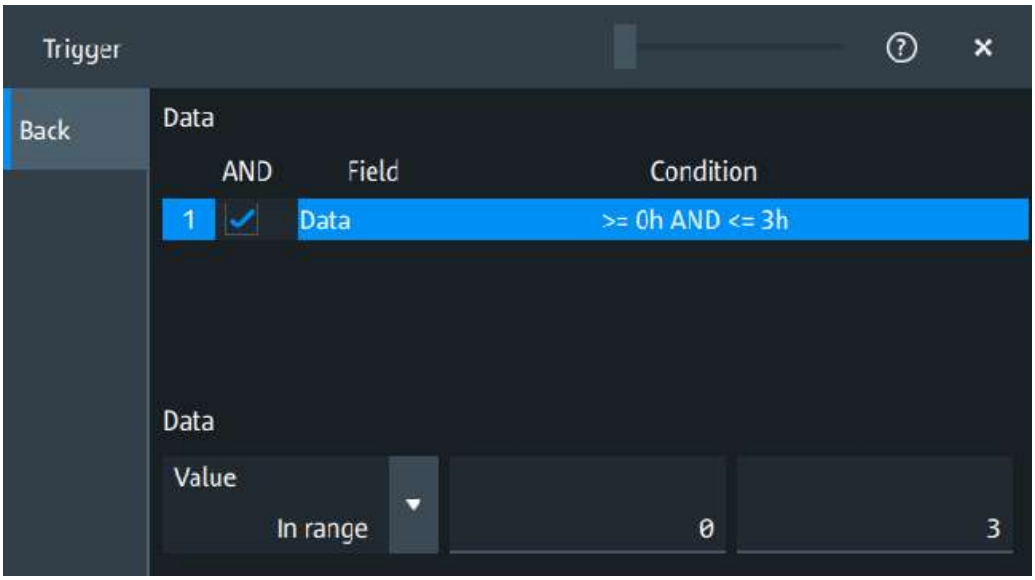

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "Data", "Time", "Code".

Remote command:
`TRIGger:SBSW:SWIRe:FIENable` on page 2115
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:ENABle` on page 2115

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:SWIRe:BIT` on page 2113
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:BIT` on page 2113

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:SWIRe:DMAX` on page 2114
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMAX` on page 2114
`TRIGger:SBSW:SWIRe:DMIN` on page 2114
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMIN` on page 2114
`TRIGger:SBSW:SWIRe:DOPerator` on page 2114
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator` on page 2114

Error type
Enables triggering on the selected error type.

The available error types are "Parity error", "Length error".

Remote command:
`TRIGger:SBSW:SWIRe:ERENable` on page 2115
`TRIGger:SBSW:SWIRe:ERRor<m>:ENABle` on page 2115

14.16.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.16.7 SpaceWire decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

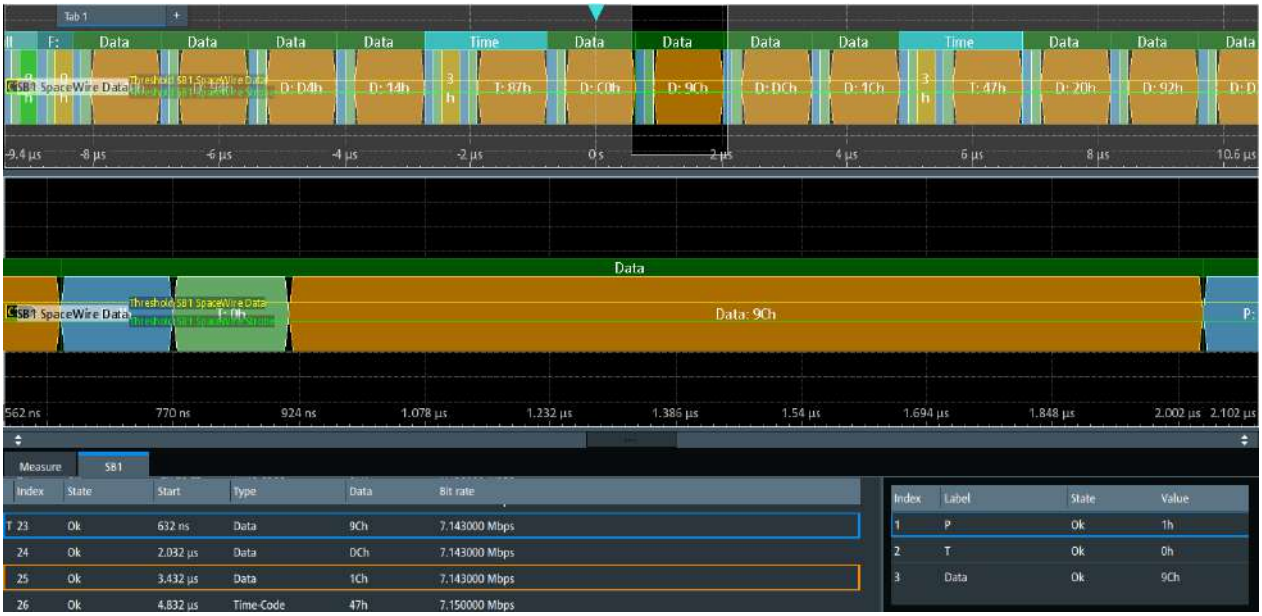


Figure 14-46: Decoded SpaceWire signal

The decode results table contains information about all decoded frames.

Table 14-29: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Type	The type of the frame
Data	Value of the data byte. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-30: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field (OK / Not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- SBUS<sb>:FORMat on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.18.5, "Decode results", on page 2116.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example SpaceWire export file

```
Index,Start,Stop,State,Type
1,-2.7928e-05,-2.6808e-05,'OK','NULL'
2,-2.6808e-05,-2.5688e-05,'OK','NULL'
3,-2.5688e-05,-2.5128e-05,'OK','FCT'
4,-2.5128e-05,-2.3728e-05,'OK','DATA'
5,-2.3728e-05,-2.2328e-05,'OK','DATA'
6,-2.2328e-05,-2.0928e-05,'OK','DATA'
7,-2.0928e-05,-1.897e-05,'OK','TCOD'
8,-1.897e-05,-1.7568e-05,'OK','DATA'
9,-1.7568e-05,-1.617e-05,'OK','DATA'
10,-1.617e-05,-1.477e-05,'OK','DATA'
11,-1.477e-05,-1.4208e-05,'OK','EEP'
```

14.17 MIL-1553 (aerospace electronics, option R&S MXO5-K530)

The MIL-1553 (or MIL-STD-1553) specification defines the characteristics of a serial data bus originally designed for use in the military avionics. Nowadays it is also used in spacecraft on-board data handling.

- About the MIL-1553 protocol....862
- MIL-1553 configuration....865
- MIL-1553 filter....867
- MIL-1553 format configuration....870
- MIL-1553 software trigger....875
- Measure....878
- MIL-1553 decode results....878

14.17.1 About the MIL-1553 protocol

The MIL-1553 bus is a 2-wire bus that uses differential signals.

A MIL-1553 system consists of the following components:

- Bus Controller (BC): initiates and coordinates the data flow in the system.

- Remote Terminal (RT): interfaces various subsystems with the data bus. A system consists of up to 31 RTs and each RT can have 31 subaddresses.
  The subaddresses 0 and 31 refer to a mode code command.
- Bus Monitor (BM) (optional): listens to all messages and can record selected data for real-time or off-line analysis.

The information is transmitted over the bus in defined series of words using Manchester code, where each bit is transmitted as high-low for a logical 1 or a low-high for a logical 0. There are three types of words: command, data and status.

Command Word

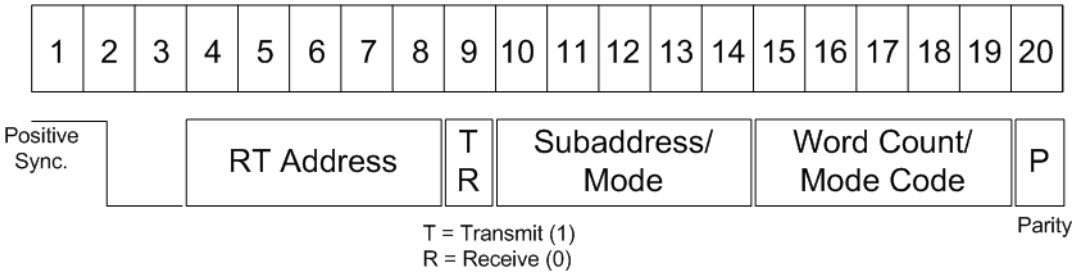


Figure 14-47: Structure of a command word

The format of a command word consists of the following parts (see Figure 14-47):

- Sync: an invalid Manchester waveform.
- Remote Terminal (RT) Address: the unique address of the corresponding RT.
- Transmit/Receive (T/R): indicates the action required from the RT.
- Subaddress/Mode Code: indicates the RT subaddress. The subaddresses 0 and 31 signalize the transmission of a mode code.
- Data Word Count /Mode Code: indicates the number of words that are sent/ received by the RT. A maximum of 32 words is allowed. This field may be used for the transmission of the mode code value.
- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

Data Word

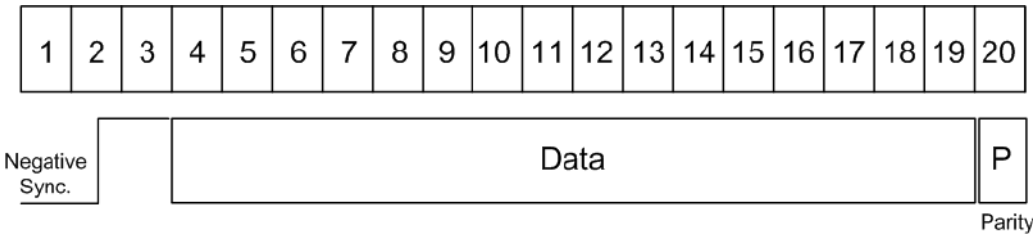


Figure 14-48: Structure of a data word

The format of a data word consists of the following parts (see Figure 14-48):

- Sync: an invalid Manchester waveform.
- Data: the transferred information (16 bit).

- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

Status Word

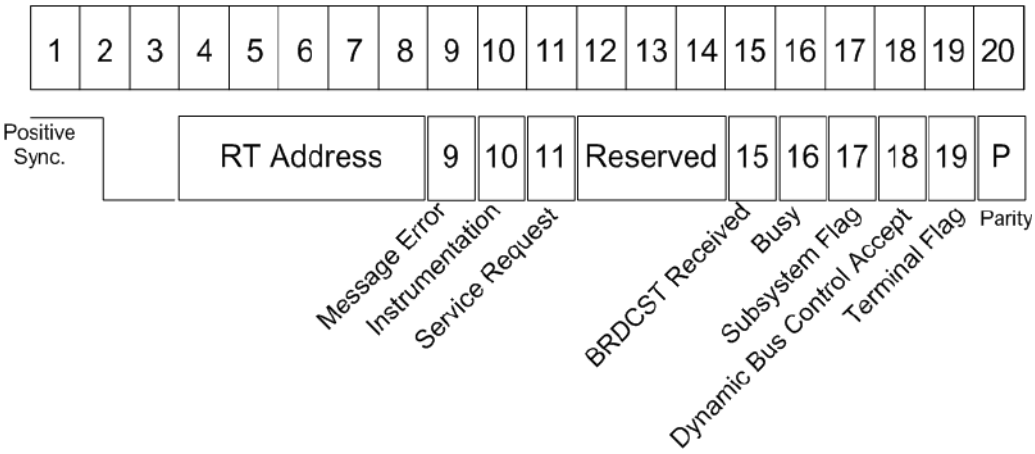


Figure 14-49: Structure of a status word

The format of a status word consists of the following parts (see Figure 14-49):


- Sync: an invalid Manchester waveform.
- Remote Terminal (RT) Address: the unique address of the corresponding RT.
- Message error: indicates an error in the command/data word transmission from the BC. A logic 1 indicates presence of a message error and a logic 0 indicates its absence.
- Instrumentation: helps to distinguish between a status word and a command word. The logic state of this bit shall be 0.
- Service Request: indicates that the RT requires service. A logic 1 indicates a presence of a service request and logic 0 indicates its absence.
- Reserved: bits reserved for future uses.
- Broadcast Command: a logic 1 indicates that the preceding valid command word was a broadcast command and a logic 0 that it was not.
- Busy: a busy state indicates that the RT or the subsystem is not able to transfer data. A logic 1 indicates a presence of a busy condition and logic 0 indicates its absence.
- Subsystem Flag: flags a subsystem fault. A logic 1 indicates a presence of a flag and logic 0 indicates its absence.
- Dynamic Bus Control Acceptance: a logic 1 indicates acceptance of a dynamic bus control and a logic 0 a rejection.
- Terminal Flag: flags an RT fault condition. A logic 1 indicates a presence of a flag and logic 0 indicates its absence.
- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

For comfortable analysis, you can load an editable label list, to interpret transferred numeric values as meaningful text labels.

14.17.2 MIL-1553 configuration

14.17.2.1 MIL-1553 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Setup".

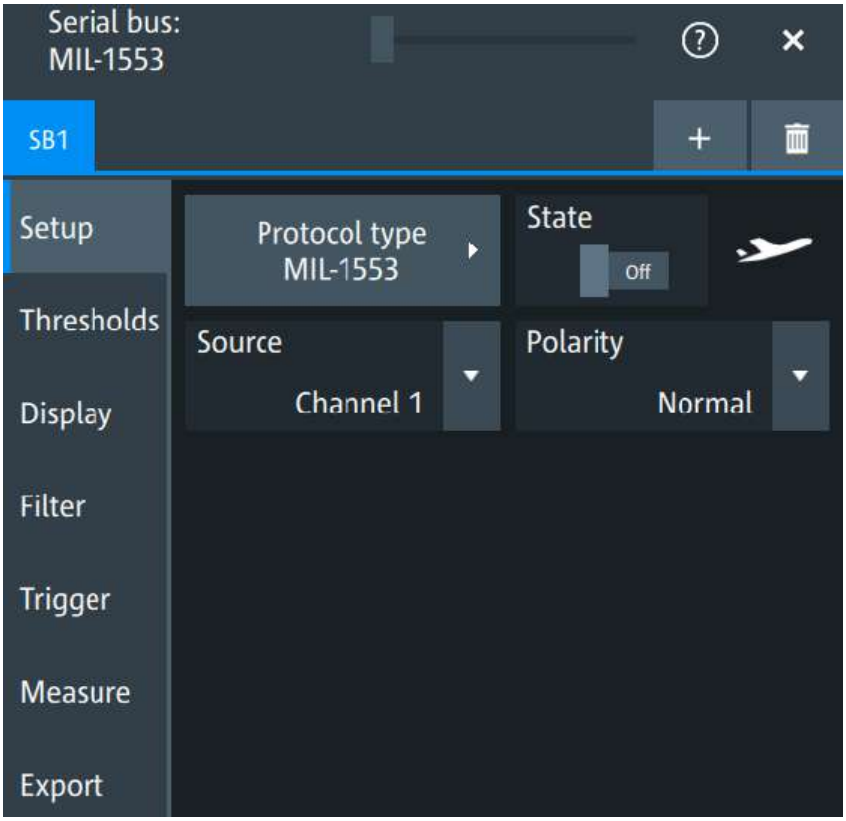

Source
Sets the source of the selected data line. Usually, the source is one of the analog channels.


Remote command:
`SBUS<sb>:MILStd:SOURce` on page 2066

Polarity
Sets the wire on which the bus signal is measured : normal or inverted. The setting affects the digitization of the signal.

Remote command:
`SBUS<sb>:MILStd:POLarity` on page 2066

14.17.2.2 Threshold

Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Thresholds".

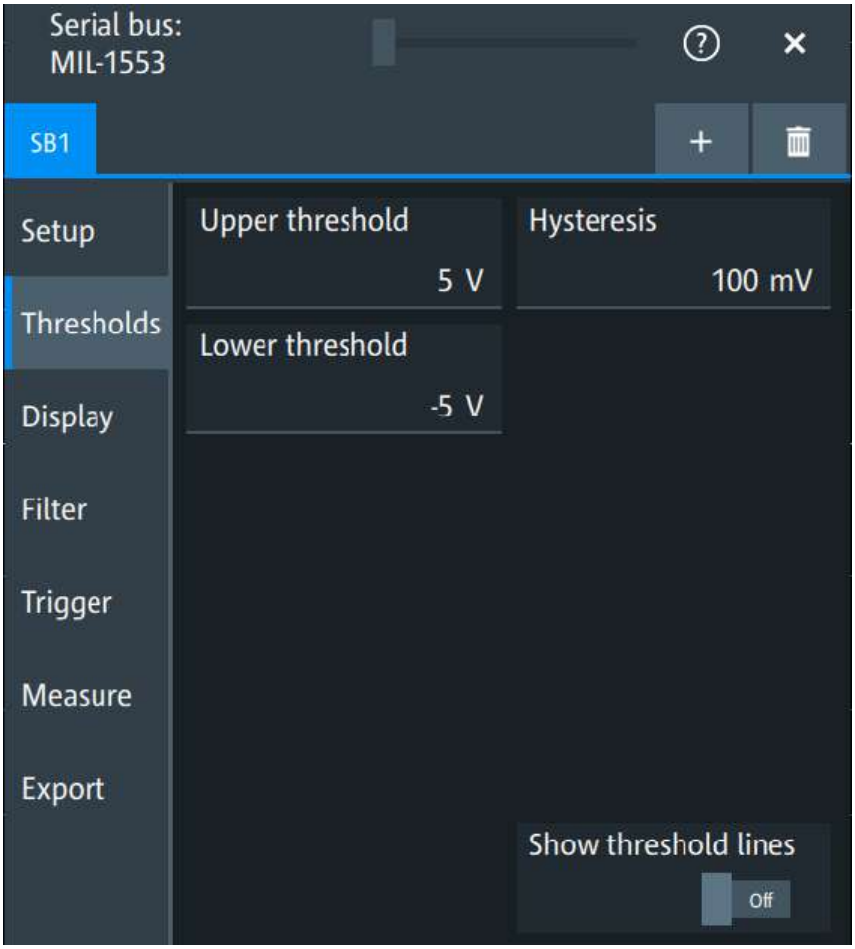

Threshold
Sets the upper and lower threshold for the source channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:MILStd:THReshold:HIGH` on page 2066
`SBUS<sb>:MILStd:THReshold:LOW` on page 2067
`SBUS<sb>:MILStd:THReshold:HYSTeresis` on page 2067

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566


14.17.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

14.17.3 MIL-1553 filter

Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Filter" tab

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

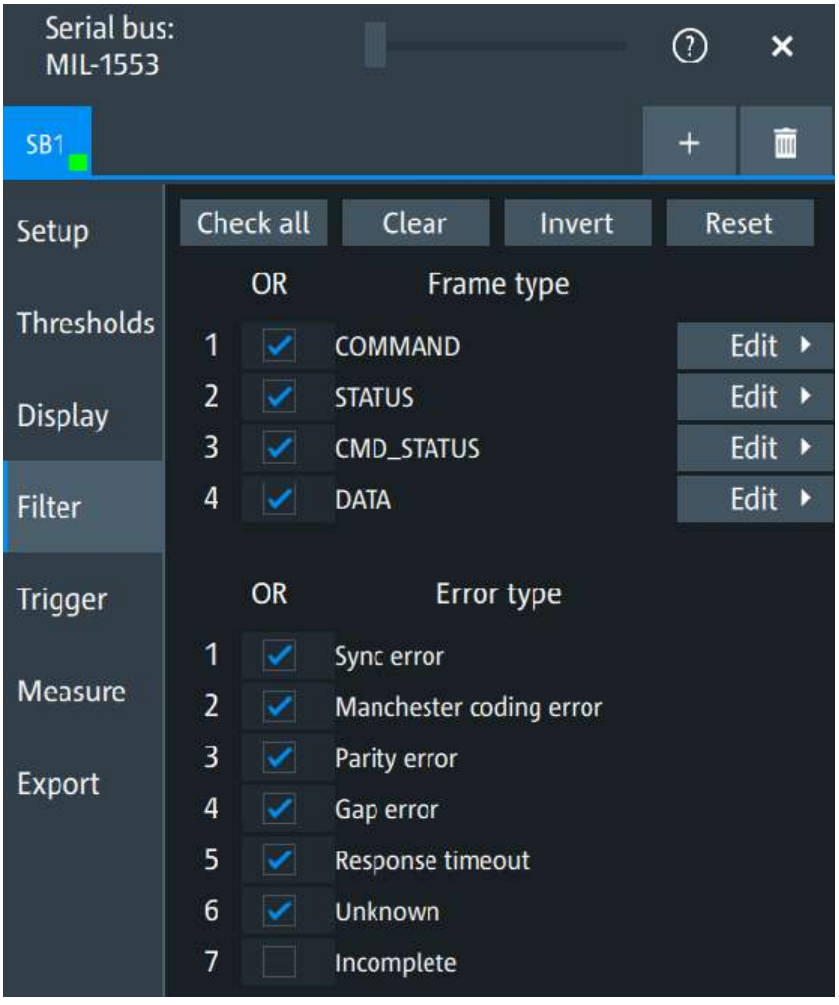

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:MILStd:FILTer:RST` on page 2069
`SBUS<sb>:MILStd:FILTer:INVert` on page 2069
`SBUS<sb>:MILStd:FILTer:CHKall` on page 2068
`SBUS<sb>:MILStd:FILTer:CLR` on page 2069


Enable
Enables the filtering on MIL-1553 frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
`SBUS<sb>:MILStd:FILTer:FRENable` on page 2072
`SBUS<sb>:MILStd:FILTer:FRAMe<fr>:ENABle` on page 2072

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Edit
Opens a dialog to define the details of the selected frame.

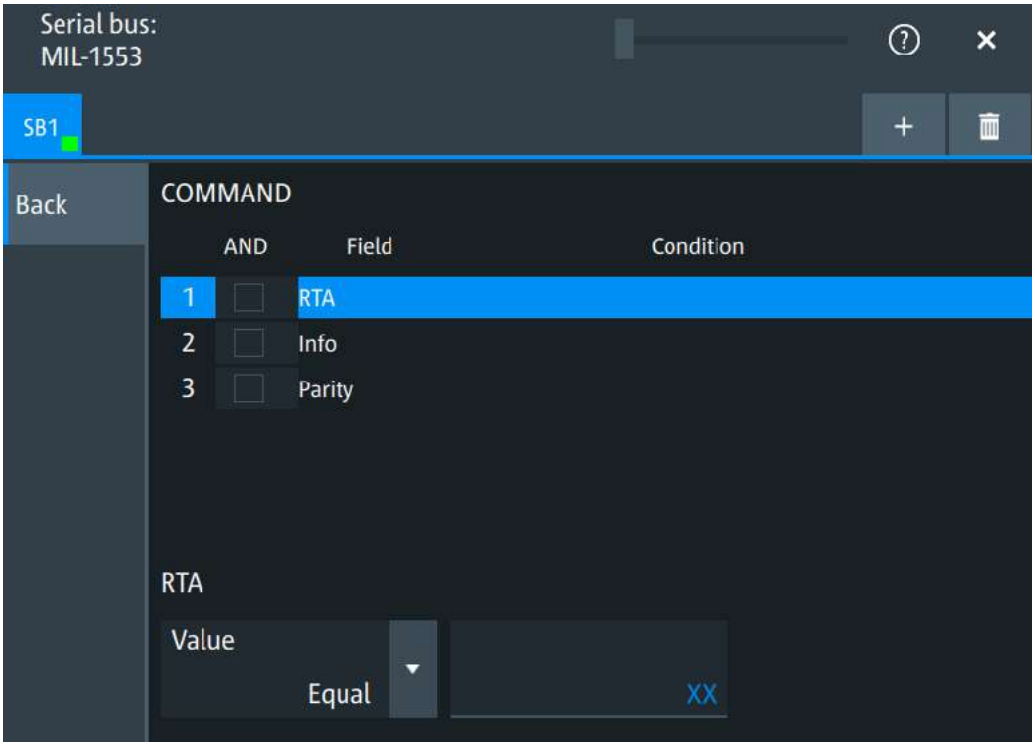

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "RTA", "Info", "Parity", "Data".

Remote command:
SBUS<sb>:MILStd:FILTer:FIENable on page 2073
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2073

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:MILStd:FILTer:BIT on page 2069
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2069

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:MILStd:FILTer:DMAX on page 2070
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2070
SBUS<sb>:MILStd:FILTer:DMIN on page 2070
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2070
SBUS<sb>:MILStd:FILTer:DOPerator on page 2071
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2071

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:MILStd:FILTer:IMAX on page 2071
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2071
SBUS<sb>:MILStd:FILTer:IMIN on page 2072
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2072
SBUS<sb>:MILStd:FILTer:IOPerator on page 2072
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2072

Error type
Enables filtering on the selected error type.

The available error types are "Sync error", "Manchester coding error", "Parity error", "Gap error", "Response timeout", "Unknown", "Incomplete".

Remote command:
SBUS<sb>:MILStd:FILTer:ERENable on page 2070
SBUS<sb>:MILStd:FILTer:ERRor<n>:ENABle on page 2070

14.17.4 MIL-1553 format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:MILStd:FORMat:SELect` on page 2074

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

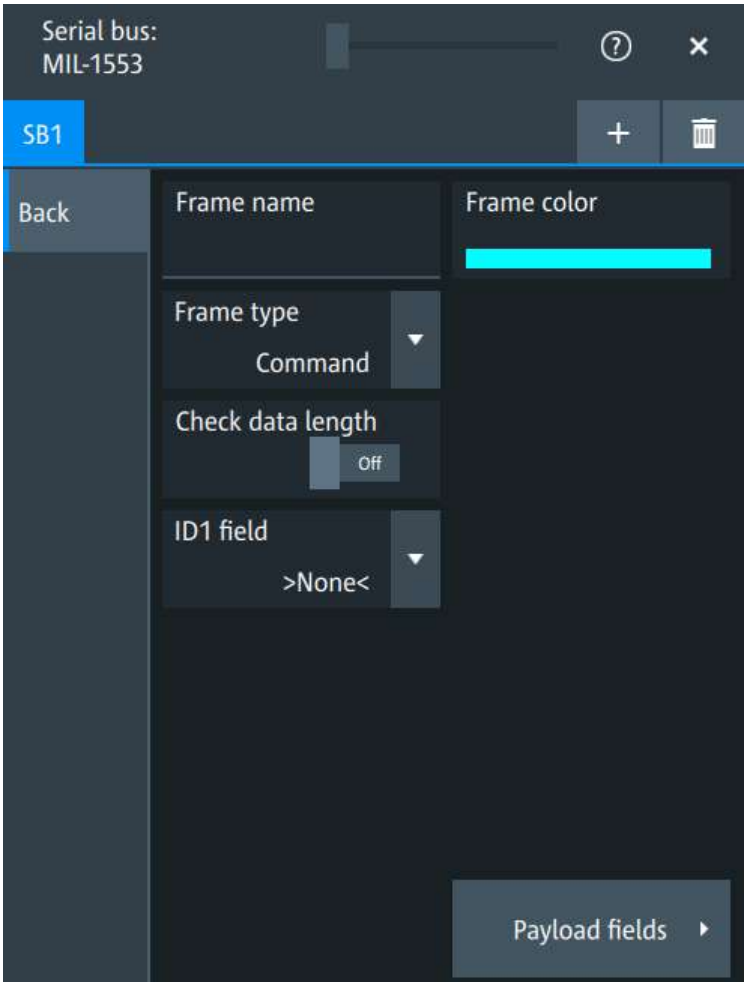

Remote command:
`SBUS<sb>:MILStd:FORMat:ADDFrame` on page 2074

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:MILStd:FORMat:CLR on page 2075
SBUS<sb>:MILStd:FORMat:FCOunt? on page 2075

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:MILStd:FORMat:LOAD on page 2074

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:MILStd:FORMat:SAVE on page 2075

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:NAME on page 2076

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:COLor on page 2076

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:TYPE on page 2077

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENCheck on page 2077

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENValue on page 2077

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Field on page 2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Field on page 2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Field on page 2078


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Value on page 2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Value on page 2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Value on page 2078

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

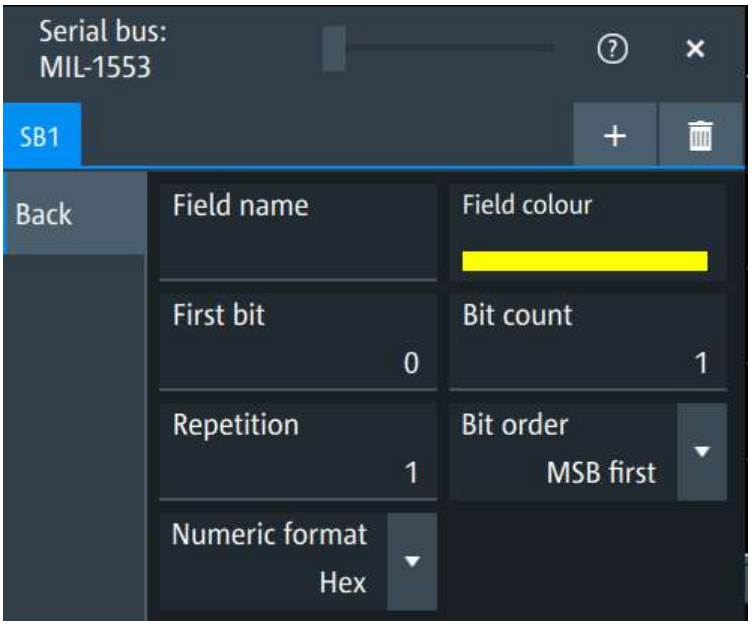

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ADDField on page 2075

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:NAME` on page 2078

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:COLor` on page 2078

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FSTBit` on page 2079

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 2079

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 2080

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2080

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2080

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2081

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2082

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel
on page 2082

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2082

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2083
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2083


14.17.5 MIL-1553 software trigger

14.17.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.17.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Trigger" tab > "Setup Software Trigger"

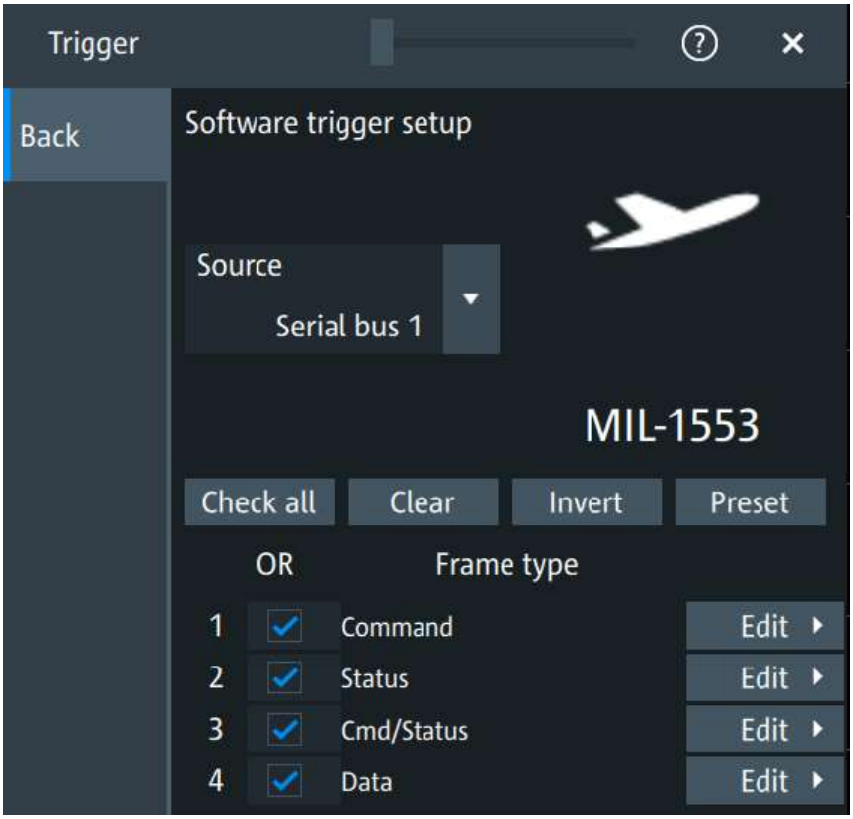

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:MILStd:CHKall` on page 2084
`TRIGger:SBSW:MILStd:CLR` on page 2084
`TRIGger:SBSW:MILStd:INVert` on page 2084
`TRIGger:SBSW:MILStd:RST` on page 2084


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Command", "Status", "Cmd/Status", "Data".

Remote command:
TRIGger:SBSW:MILStd:FRENable on page 2085
TRIGger:SBSW:MILStd:FRAMe<fr>:ENABle on page 2085

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

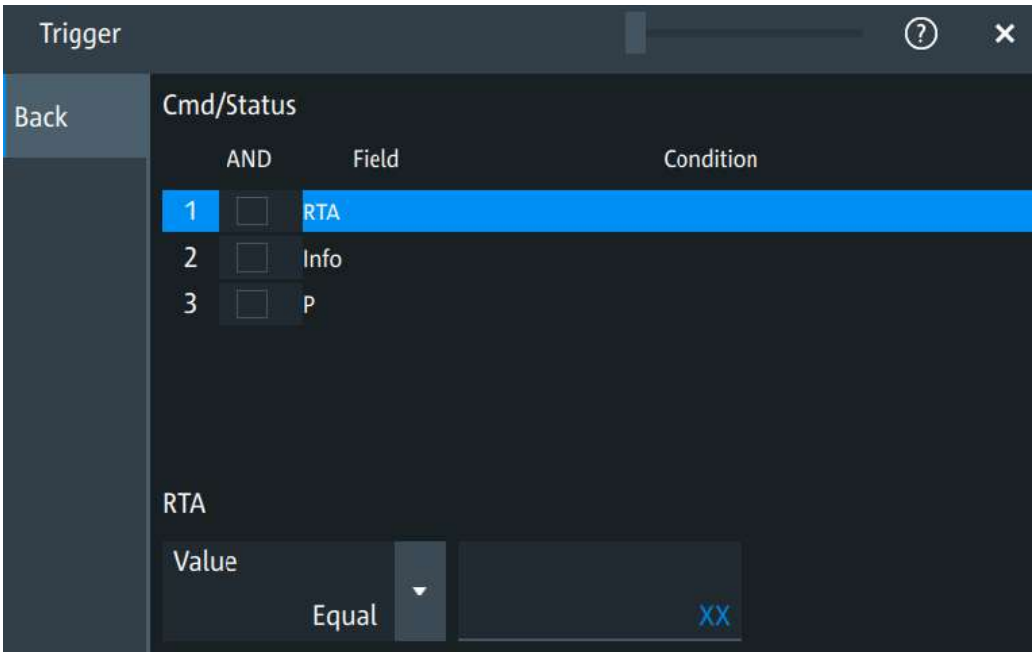

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "RTA", "Info", "Parity", "Data".

Remote command:
TRIGger:SBSW:MILStd:FIENable on page 2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:ENABle on page 2086

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:MILStd:BIT on page 2085
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:BIT on page 2085

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:MILStd:DMAX on page 2085
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMAX on page 2085
TRIGger:SBSW:MILStd:DMIN on page 2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMIN on page 2086
TRIGger:SBSW:MILStd:DOPerator on page 2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator on page 2086

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:MILStd:IMAX on page 2087
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMAX on page 2087
TRIGger:SBSW:MILStd:IMIN on page 2087
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMIN on page 2087
TRIGger:SBSW:MILStd:IOPerator on page 2088
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator on page 2088

Error type
Enables triggering on the selected error type.

The following error types are available: "Sync error", "Manchester coding error", "Parity error", "Gap error", "Response timeout".

Remote command:
TRIGger:SBSW:MILStd:ERENable on page 2088
TRIGger:SBSW:MILStd:ERRor<m>:ENABle on page 2088

14.17.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.17.7 MIL-1553 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

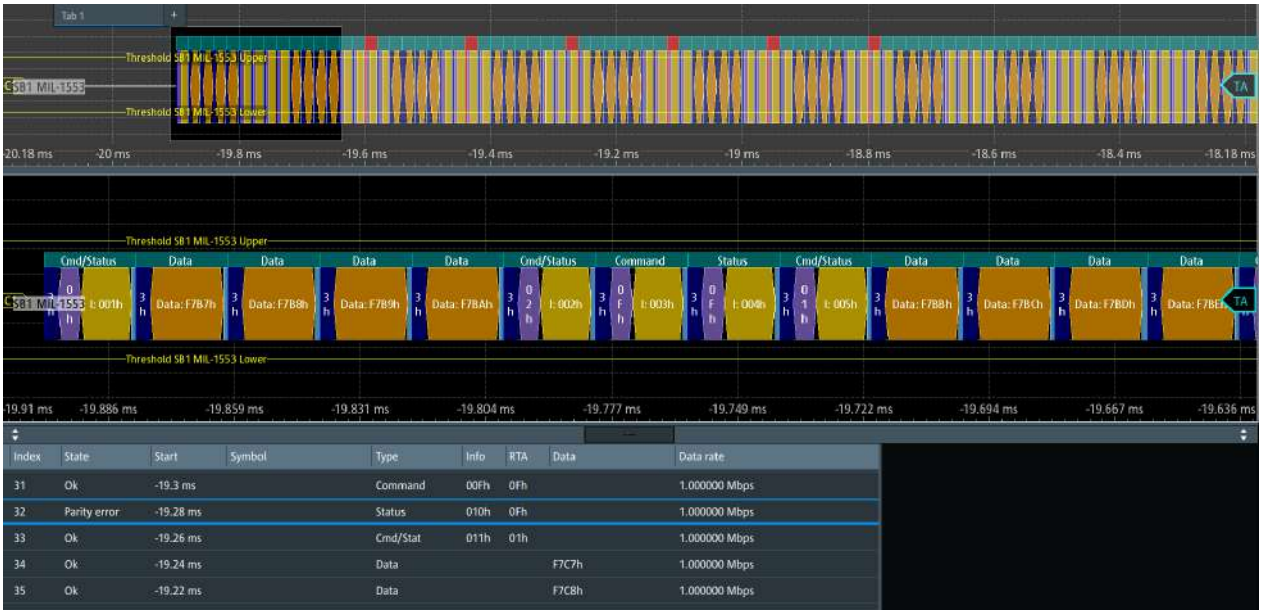


Figure 14-50: Decoded MIL-1553 signal

The decode results table contains information about all decoded frames.

Table 14-31: Content of the Decode results table

Column	Description
Index	Index of the decoded word
State	Overall state of the word
Start	Time of word start in relation to the trigger point
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Type	Word type
Info	The hexadecimal value of the 9th to 1th bit of a command/status word
RTA	Remote terminal address
Data	The values of the data bytes. Select the data format in the "Display" tab.
Data rate	Data rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.17.5, "Decode results", on page 2089.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example MIL-1553 export file

```
Index,Start,Stop,Type,State,RTA,Info,Data,Bit Rate
1,-0.0199,-0.01988,'STAT','OK',1Dh,027h,---,1000000
2,-0.01988,-0.01986,'DATA','OK',---,---,F7C0h,1000000
3,-0.01986,-0.01984,'DATA','OK',---,---,F7CAh,1000000
4,-0.01984,-0.01982,'DATA','OK',---,---,F7D4h,1000000
5,-0.01982,-0.0198,'DATA','OK',---,---,F7DEh,1000000
```

14.18 SPMI (mobile electronics, option R&S MXO5-K550)

The System Power Management Interface (SPMI) is a high-speed, low-latency, bi-directional, 2-wire serial bus.


For basic information on SPMI, you can also refer to a video, available on the Rohde & Schwarz YouTube channel: Understanding SPMI.

- SPMI configuration....880
- SPMI filter....883
- SPMI format configuration....886
- SPMI hardware trigger....892
- SPMI software trigger....896
- Measure....900
- SPMI decode results....900

14.18.1 SPMI configuration

14.18.1.1 SPMI configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Setup".

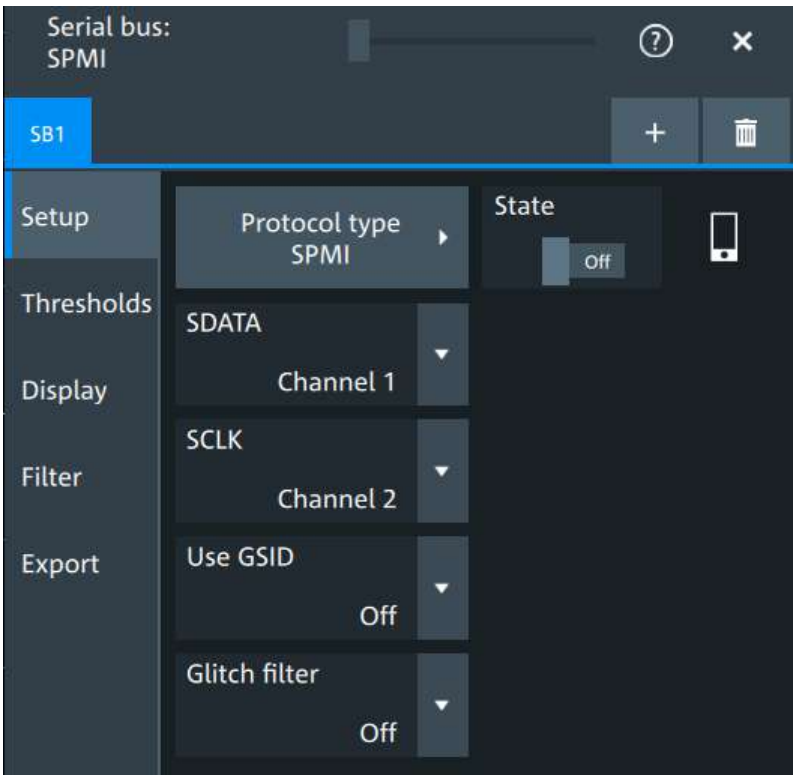

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

SDATA
Sets the source of the data line.

Remote command:
`SBUS<sb>:SPMI:SDATa:SOURce` on page 2125

SCLK
Sets the source of the clock line.

Remote command:
`SBUS<sb>:SPMI:SCLK:SOURce` on page 2125

Use GSID, GSID (hex)
Enables the use of the group sub ID (GSID). You can then enter a value for the "GSID (hex)". If the "SA" value of a frame matches this "GSID (hex)" value, the interpreter reverses the meaning of the "ACK" field: It interprets a bit value of zero in the ACK field as an error, and a bit value of one as OK.

Remote command:
SBUS<sb>:SPMI:GSIDenable on page 2123
SBUS<sb>:SPMI:GIDValue on page 2123


Glitch filter, Glitch width
A glitch filter can help to filter out short-duration voltage spikes/ glitches that can occur on the communication line.

If "Glitch filter" > "On" you can set the "Glitch width". Any signal transitions with a duration smaller than this value are considered a glitch and filtered out.

Remote command:
SBUS<sb>:SPMI:GTCHenable on page 2124
SBUS<sb>:SPMI:GTWDith on page 2124

14.18.1.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Thresholds".

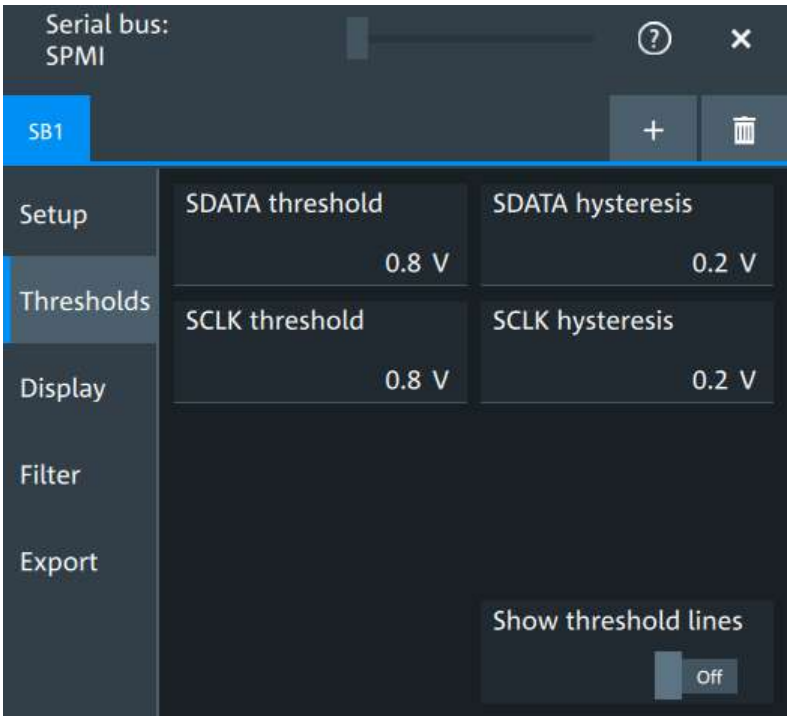

Threshold
Sets the threshold for the data/clock channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:SPMI:SCLK:THReshold on page 2125
SBUS<sb>:SPMI:SDATa:THReshold on page 2126
SBUS<sb>:SPMI:SCLK:HYSTeresis on page 2124
SBUS<sb>:SPMI:SDATa:HYSTeresis on page 2125

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566

14.18.1.3 Display settings


For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

14.18.2 SPMI filter

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Filter" tab

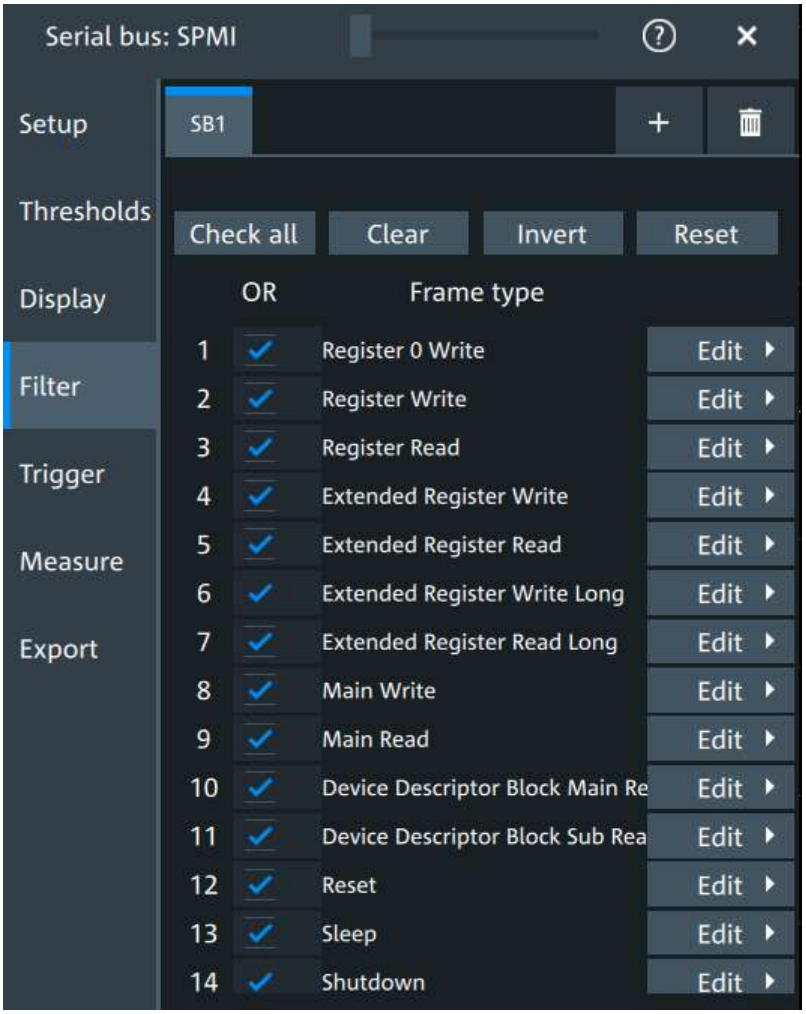

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.


Remote command:
`SBUS<sb>:SPMI:FILTer:CHKall` on page 2127
`SBUS<sb>:SPMI:FILTer:CLR` on page 2128
`SBUS<sb>:SPMI:FILTer:INVert` on page 2128
`SBUS<sb>:SPMI:FILTer:RST` on page 2128

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
`SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle` on page 2131
`SBUS<sb>:SPMI:FILTer:FRENable` on page 2131

Edit
Opens a dialog to define the details of the selected frame.

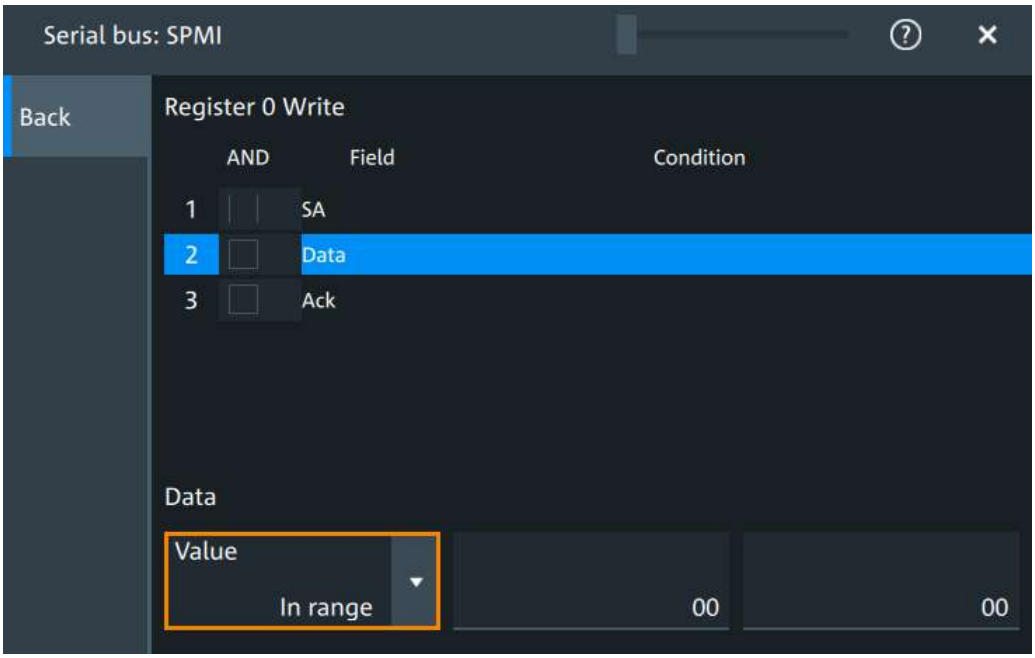

"Field" Enables the field type that you want to filter on for the selected frame. The available fields depend on the selected frame type.

Remote command:
`SBUS<sb>:SPMI:FILTer:FIENable` on page 2132
`SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2132

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:SPMI:FILTer:BIT` on page 2128
`SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2128

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:SPMI:FILTer:DMAX on page 2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2129
SBUS<sb>:SPMI:FILTer:DMIN on page 2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2129
SBUS<sb>:SPMI:FILTer:DOPerator on page 2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2129

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:SPMI:FILTer:IMAX on page 2131
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2131
SBUS<sb>:SPMI:FILTer:IMIN on page 2131
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2131
SBUS<sb>:SPMI:FILTer:IOPerator on page 2130
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2130

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle on page 2130
SBUS<sb>:SPMI:FILTer:ERENable on page 2130

14.18.3 SPMI format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:SPMI:FORMat:SELect on page 2133

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

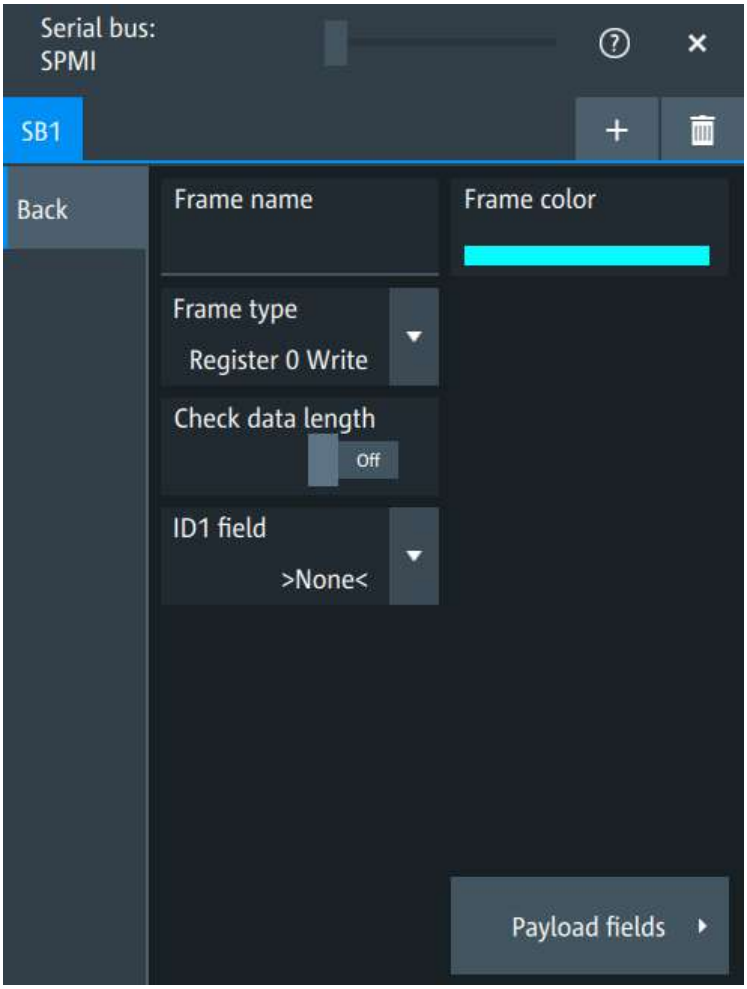

Remote command:
SBUS<sb>:SPMI:FORMat:ADDFrame on page 2133

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:SPMI:FORMat:CLR on page 2134
SBUS<sb>:SPMI:FORMat:FCOunt? on page 2134

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:SPMI:FORMat:LOAD on page 2133

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:SPMI:FORMat:SAVE on page 2134

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:NAME on page 2135

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:COLor on page 2135

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:TYPE on page 2136

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENCheck on page 2136

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENValue on page 2136

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Field on page 2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Field on page 2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Field on page 2137


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Value on page 2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Value on page 2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Value on page 2137

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

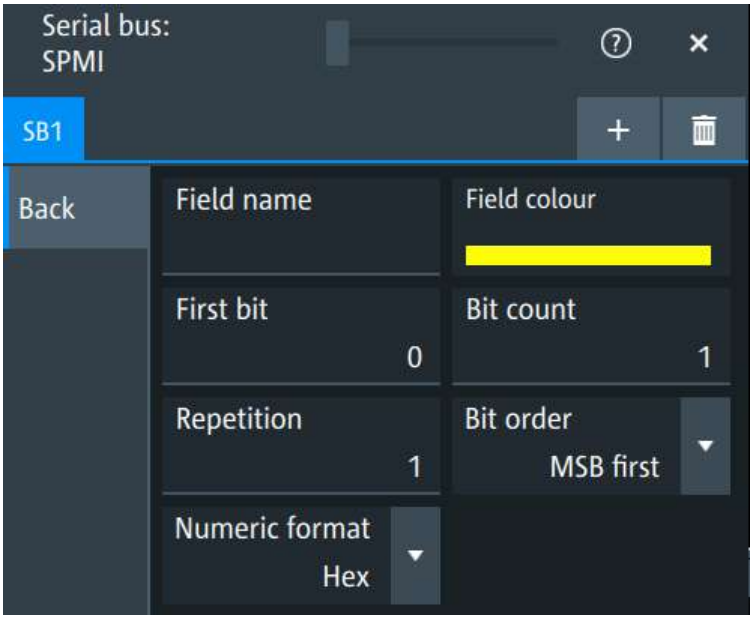

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ADDField on page 2134

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2137

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2137

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2138

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2138

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2139

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2139

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2139

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2140

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 2141

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2141

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2141

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2142
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2142

14.18.4 SPMI hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Trigger" tab > "Setup Hardware Trigger"



Type
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

In practical measurements, sequence-based triggers usually provide the most efficient setup because they operate on decoded protocol content instead of raw bit patterns. SDA pattern triggers are better suited for low-level timing or physical layer correlation. Error triggers are best for fault isolation and compliance troubleshooting.

Sequence start ← Type
Triggers on the start of an SPMI command sequence. Use this trigger type to detect the beginning of any valid SPMI frame sequence, independent of the command content. This trigger is useful when you want to capture the complete protocol transaction from its first bus event. The trigger reacts to the protocol-defined sequence start condition.

SDA conditions ← Type
Specify the data conditions if the trigger type is set to "SDA". Use this trigger type when you want to trigger on a specific bit pattern on the SPMI data line. This method is useful for low-level analysis when you know the expected bus pattern but do not want to trigger on a decoded command type.

SA ← SDA conditions ← Type
Selects the comparison operator for the SDA pattern.

Value ← SDA conditions ← Type
Specifies the SDA pattern to be found on the specified trigger source. Enter the words in MSB first bit order.

Sequence type conditions ← Type
Specify the data conditions if the trigger type is set to "Sequence type". Use this trigger when you analyze security-related bus transactions or device authentication procedures.

Sequence type ← Sequence type conditions ← Type
Specifies the sequence type.

"Register 0 write"
Triggers on "Register 0 write" command sequences. This sequence sends 7 data bits in the command payload followed by an ACK/NACK bit.

"Register Read"
Triggers on "Register Read" command sequences. This sequence sends the register address in the command payload, and reads back one data frame.

"Register Write"
Triggers on "Register Write" command sequences. This sequence sends the register address in the command payload, and sends one data frame followed by an ACK/NACK bit.

"Extended Register Write"
Triggers on "Extended Register Write" command sequences. This sequence sends the byte count of data frames in the command payload, followed by one address frame with the address of the first extended register, and up to 16 data frames followed by an ACK/NACK bit.

"Extended Register Read"
Triggers on "Extended Register Read" command sequences. This sequence sends the byte count of data frames in the command payload, followed by one address frame with the address of the first extended register, and reads back up to 16 data frames.

"Extended Register Read Long"
Triggers on "Extended Register Read Long" command sequences. This sequence sends the byte count of data frames in the command payload, followed by two address frames with the address of the first extended register, and reads back up to 8 data frames.

"Main Write"
Triggers on "Main Write" command sequences. This sequence writes data to a device by using the main command format defined by the SPMI protocol.

"Main Read"
Triggers on "Main Read" command sequences. This sequence reads data from a device by using the main command format defined by the SPMI protocol.

"Device Descriptor Block Main Read"
Triggers on "Device Descriptor Block Main Read" command sequences. This sequence accesses information from the device descriptor block. It is commonly used during discovery, identification, or capability evaluation.

"Device Descriptor Block Main Sub Read"
Triggers on "Device Descriptor Block Main Sub Read" command sequences. This sequence reads a subfield or subsection of the device descriptor block.

"Transfer Bus Ownership"
Triggers on "Transfer Bus Ownership" command sequences. This command is relevant in systems with bus master handover. It indicates a change of bus ownership between controllers.

"Reset"
Triggers on "Reset" command sequences. Use this trigger to capture bus activity around device reset events.

"Sleep"
Triggers on the "Sleep" command sequence. The sequence sends the command payload followed by an ack/nack bit. Use this power-state related trigger when you analyze power management behavior of PMICs and other SPMI connected devices.

"Shutdown"
Triggers on the "Shutdown" command sequence. The sequence sends the command payload followed by an ack/nack bit. Use this power-state related trigger when you analyze power management behavior of PMICs and other SPMI connected devices.

"Wakeup"
Triggers on the "Wakeup" command sequence. The sequence sends the command payload followed by an ack/nack bit. Use this power-state related trigger when you analyze power management behavior of PMICs and other SPMI connected devices.

"Authenticate"
Triggers on the "Authenticate" command sequence. This sequence sends the Sub Device id in the command payload, sends 4-byte challenge data frame and read back 4-byte response data frames. Use this trigger when you analyze security-related bus transactions or device authentication procedures.


Data ← Sequence type conditions ← Type
Selects the operator for the "Data" pattern.

Value (Data) ← Sequence type conditions ← Type
Specifies the data pattern to be found on the specified trigger source. Enter the words in MSB first bit order.

ACK ← Sequence type conditions ← Type
Selects the operator for the ACK pattern. Use the ACK condition to distinguish between acknowledged and not acknowledged transactions. This setting helps you isolate accepted commands or communication failures.

Error conditions ← Type
Specify the error conditions if the trigger type is set to "Error". This trigger type is useful for protocol debugging because it captures only faulty bus activity.

Error ← Error conditions ← Type
Triggers, if any of the enabled errors occurs.

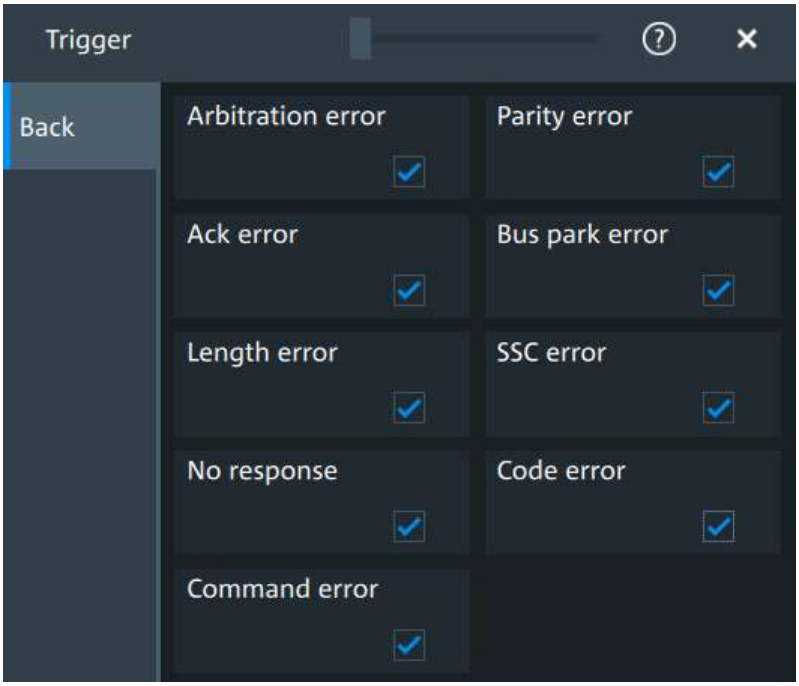

"Arbitration error"
Triggers on bus arbitration errors. This error occurs when the observed bus behavior violates the arbitration rules of the SPMI protocol.

"Parity error"
Triggers on incorrect parity bits.

"Ack error"
Triggers, if an incorrect acknowledgment behavior is detected. This error can indicate that a connected device does not respond as expected or that bus timing or signal integrity problems are present.

"Bus park error"
Triggers on an incorrect bus park cycle: the instrument expects a low bit in bus park but detects high bit.

"Length error"
Triggers on an incorrect length of the command sequence: additional or missing bits are detected and the sequence of bits is not as expected.

"SSC error"
Triggers on a sequence start condition error. This error indicates that the start of a protocol sequence does not follow the expected SPMI definition.

"No response"
Triggers on an invalid or unexpected response sequence from the addressed device. This error can indicate a protocol violation, an unsupported command, or a corrupted transfer.

"Code error"
Triggers on an invalid or reserved command or response code. This error indicates that the decoded protocol field contains a value that is not valid in the current SPMI context.

"Command error"
Triggers on an invalid command sequence. This error indicates that the command structure, command type, or command field content does not match the expected SPMI protocol definition.


14.18.5 SPMI software trigger

14.18.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.18.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

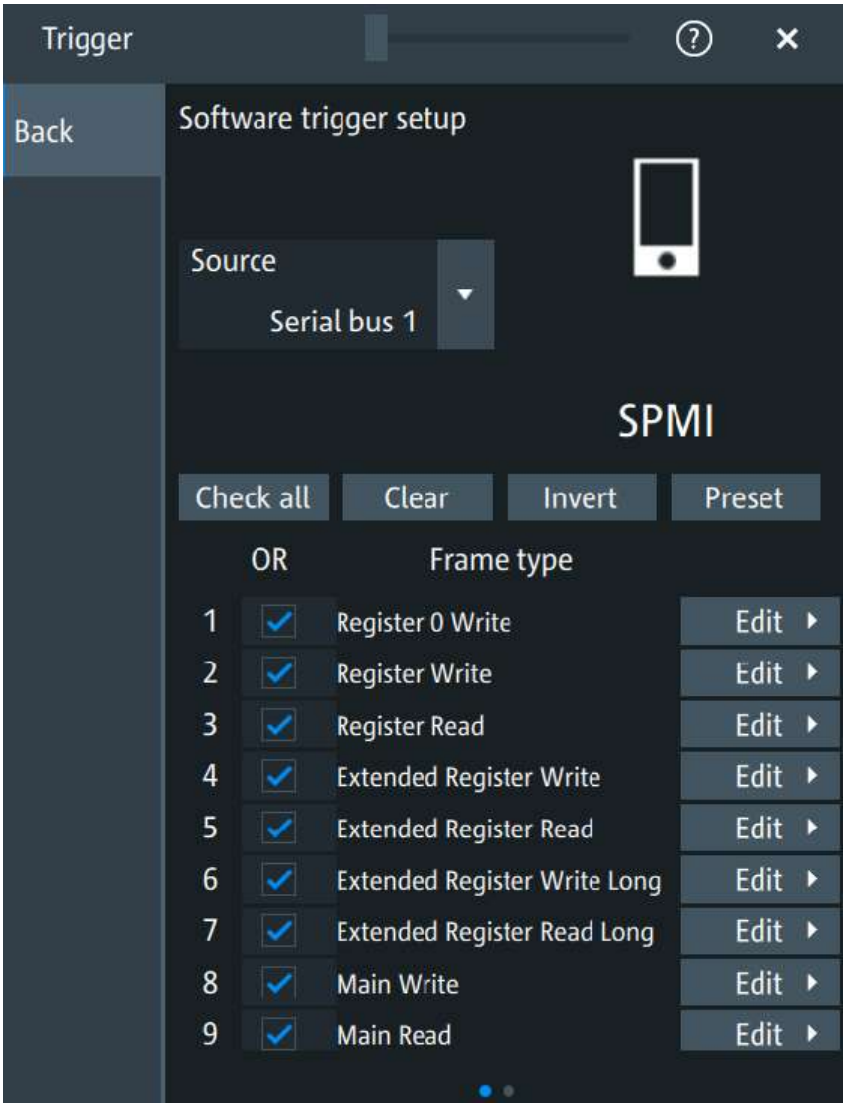

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:SPMI:CHKall` on page 2143
`TRIGger:SBSW:SPMI:CLR` on page 2143


TRIGger:SBSW:SPMI:INVert on page 2143
TRIGger:SBSW:SPMI:RST on page 2143

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
TRIGger:SBSW:SPMI:FRENable on page 2144
TRIGger:SBSW:SPMI:FRAMe<fr>:ENABle on page 2144

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

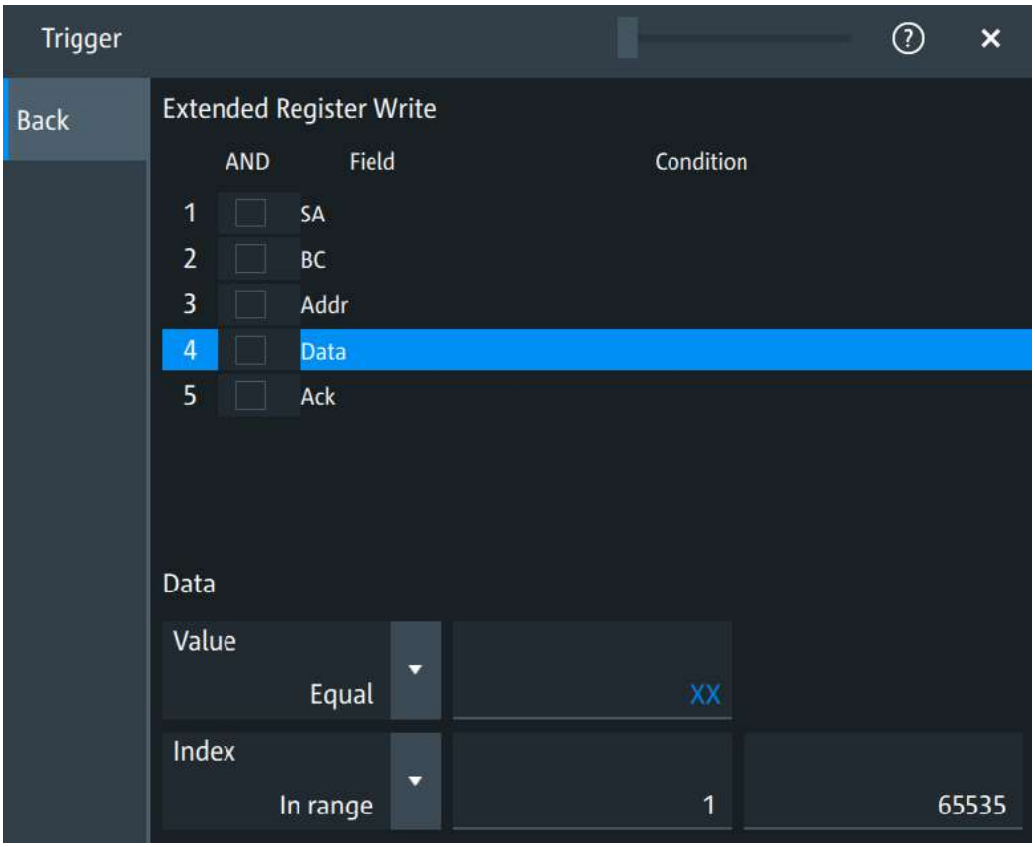

"Field" Enables the field type that you want to trigger on for the selected frame.

Remote command:
TRIGger:SBSW:SPMI:FIENable on page 2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:ENABle on page 2145

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:SPMI:BIT on page 2144
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:BIT on page 2144


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:SPMI:DMAX on page 2144
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMAX on page 2144
TRIGger:SBSW:SPMI:DMIN on page 2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMIN on page 2145
TRIGger:SBSW:SPMI:DOPerator on page 2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator on page 2145

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:SPMI:IMAX on page 2146
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMAX on page 2146
TRIGger:SBSW:SPMI:IMIN on page 2146
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMIN on page 2146
TRIGger:SBSW:SPMI:IOPerator on page 2147
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator on page 2147

Error type
Enables triggering on the selected error type.

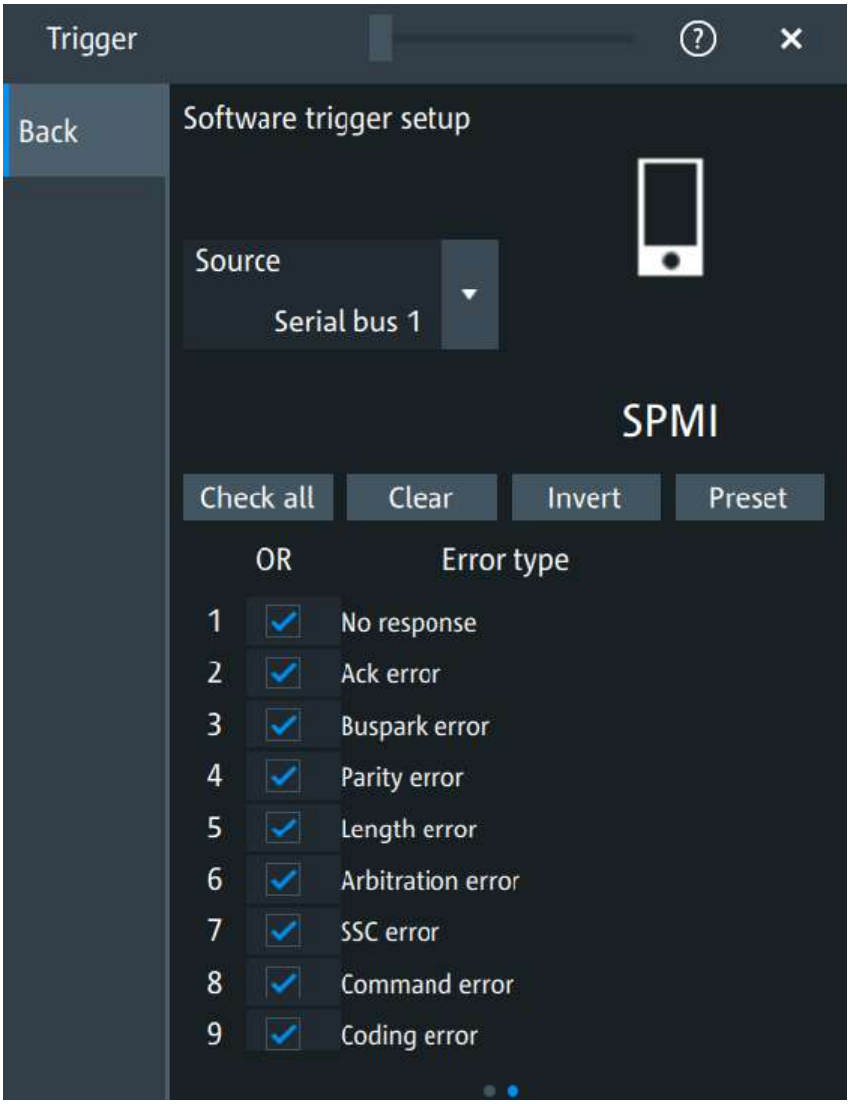

Remote command:
`TRIGger:SBSW:SPMI:ERENable` on page 2147
`TRIGger:SBSW:SPMI:ERRor<m>:ENABle` on page 2147

14.18.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.18.7 SPMI decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

For more information on decoding SPMI, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding SPMI with MXO Series Oscilloscopes.

Decode results table

The "Decode results" table contains information about all decoded frames.

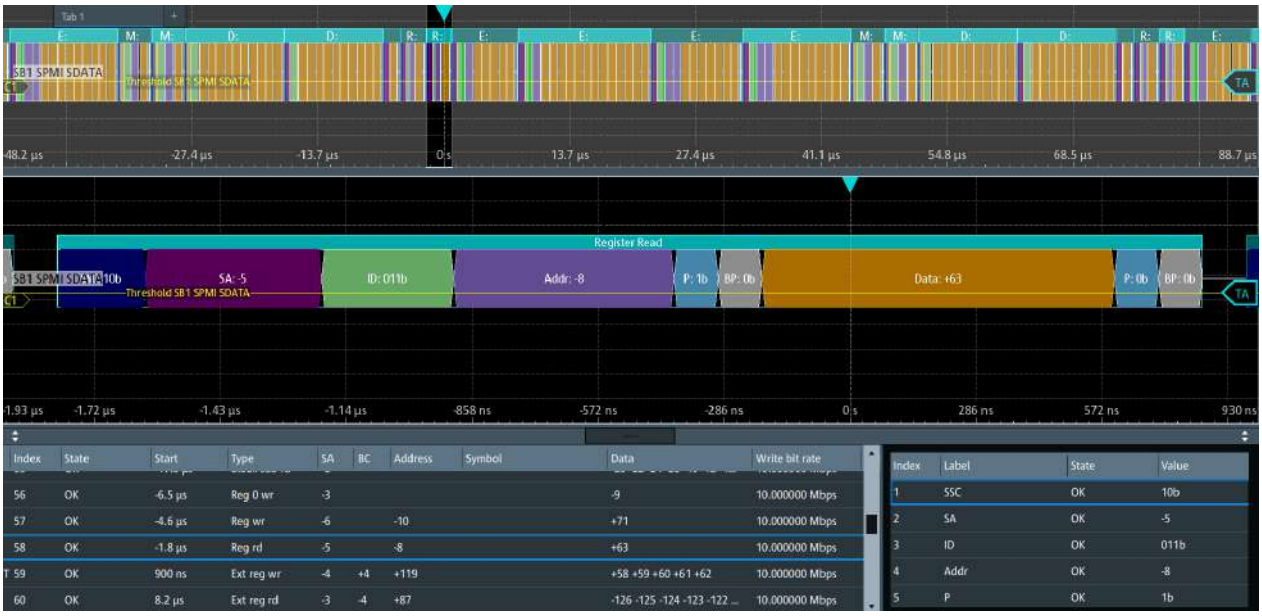


Figure 14-51: Decoded SPMI signal

The decode results table contains information about all decoded frames.

Table 14-32: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Time of frame start
Type	The type of frame
SA	Secondary node address. Select the data format in the "Display" tab.
BC	Byte count value. Select the data format in the "Display" tab.
Address	Register address. Select the data format in the "Display" tab.
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Data	Data value. Select the data format in the "Display" tab.
Write bit rate	Value of the write bit rate
Read bit rate	Value of the read bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-33: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.19, "SPMI (option R&S MXO5-K550)", on page 2123.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example SPMI export file

```
Index,Start,Stop,State,Type,SA,BC,Address,Write bit rate,Read bit rate
1,-0.000405,-0.0004032,'OK','RZWR',Dh,---,---,10000000,---
2,-0.0004031,-0.0004004,'OK','RWR',Ah,---,16h,10000000,---
3,-0.0004003,-0.0003977,'OK','RRD',Bh,---,18h,10000000,10000000
4,-0.0003976,-0.0003904,'OK','ERWR',Ch,4h,77h,10000000,---
5,-0.0003903,-0.000376,'OK','ERRD',Dh,Ch,57h,10000000,10000000

Details frame 1
Index,Label,State,Value
1,'"SSC"','OK','"10b"'
2,'"SA"','OK','"Dh"'
3,'"ID"','OK','"1b"'
4,'"Data"','OK','"77h"'
5,'"P"','OK','"1b"'
6,'"BP"','OK','"0b"'
7,'"Ack"','OK','"1b"'
8,'"BP"','OK','"0b"'

Details frame 2
Index,Label,State,Value
1,'"SSC"','OK','"10b"'
2,'"SA"','OK','"Ah"'
```

```
3,'"ID"','OK','"010b"'
4,'"Addr"','OK','"16h"'
5,'"P"','OK','"1b"'
6,'"Data"','OK','"47h"'
7,'"P"','OK','"1b"'
8,'"BP"','OK','"0b"'
9,'"Ack"','OK','"1b"'
10,'"BP"','OK','"0b"'
```

14.19 RFFE (mobile electronics, option R&S MXO5-K550)

Requirements

For performing RFFE decode measurements, you need the following:

- MXO 5 with 2 available channels. The channel can be:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Two probes
- Option R&S MXO5-K550

- About the RFFE protocol 903
- RFFE configuration 905
- RFFE filter 907
- RFFE format configuration 911
- RFFE software trigger 917
- Measure 921
- RFFE decode results 921

14.19.1 About the RFFE protocol

The RFFE interface is specified in the "MIPI® Alliance Specification for RF Front-End Control Interface". The RFFE interface is used by the radio frequency front-end interface chips in most LTE-Advanced™ platforms and in smart phones in general. RFFE is a replacement for existing standards like SPI and I²C that do no meet performance requirements.

Bus structure

RFFE is a two-wire, serial interface that connects up to 4 main devices (Radio Frequency IC, RFIC) to up to 15 sub devices (front-end modules, FEM) on a single RFFE bus. A sub device has read-write capability, or it is write only. Only one of the main devices is the active main device (bus owner main device, BOM), which can initiate command sequences on the bus.

The interface has two lines: one clock signal (SCLK) controlled by the main device, and a serial bidirectional data signal (SDATA). Furthermore, a VIO supply/reference voltage from a common source is applied to all components on the bus.

Command sequences

Protocol messages are called command sequences in RFFE. The standard defines various command sequences to accomplish read and write access to sub devices and to non-active main devices. Command sequences are initiated by the BOM main device on the SDATA line.

In general, a command sequence consists of:

- Sequence start condition (SSC)
  Two bits: 1 followed by 0 on SDATA while SCLK is at logic level zero.
- Command frame
  Consist of a 4-bit sub device address field (SA), followed by 8 command payload bits and a single parity bit.
- Address and/or data frames, depending on the command sequence
  A frame consists of 8 data bits or 8 register address bits, followed by a single parity bit. The number of address and data frames varies depending on the command sequence type.
- Bus park cycle (BP)
  A BP cycle is sent at the end of a command sequence, and when the device transfers control of SDATA to another device.

Between the end of a command sequence and the beginning of a new command sequence, the bus is in idle condition at least for 10 ns.

The bits are sent MSB first.

SSC	Command frame		Address and data frames		BP
	SA	Command payload	[Address frames]	[Data frames]	
	4 bits	8 bits + P	8 bits + P	8 bits + P	

Figure 14-52: General structure of a RFFE Write command sequence


SSC	Command frame		Address and data frames			BP
	SA	Command payload	[Address frames]	BP	[Data frames]	
	4 bits	8 bits + P	8 bits + P		8 bits + P	

Figure 14-53: General structure of a RFFE Read command sequence

14.19.2 RFFE configuration

14.19.2.1 RFFE configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Setup".

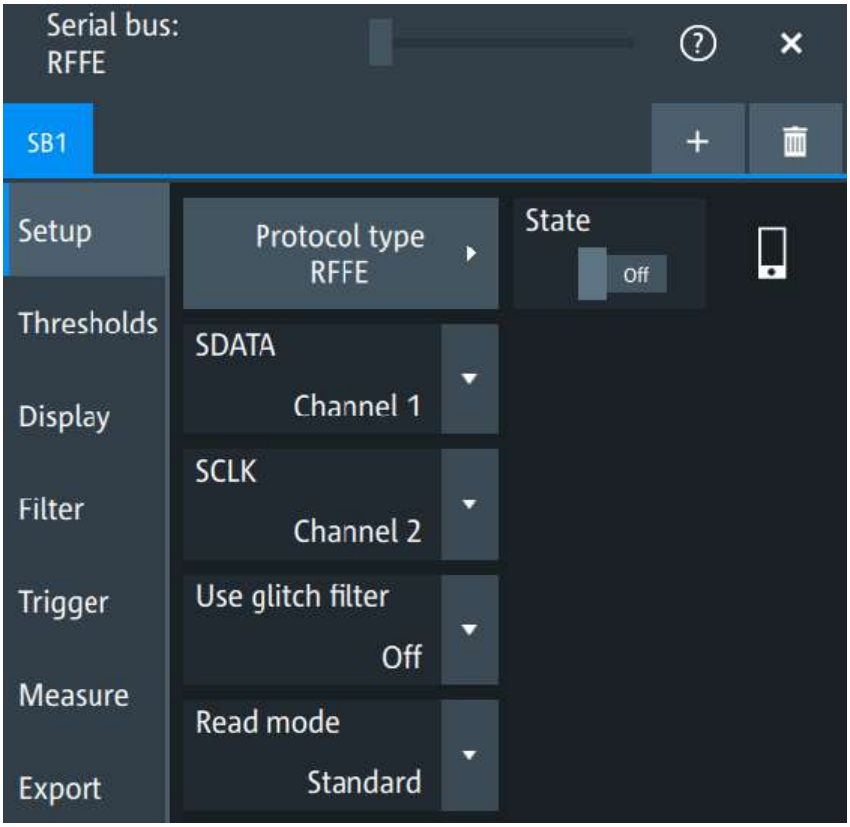

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

SDATA
Sets the source of the data line.

Remote command:
SBUS<sb>:RFFE:DATA:SOURce on page 2155

SCLK
Sets the source of the clock line.

Remote command:
SBUS<sb>:RFFE:CLOCk:SOURce on page 2155

Use glitch filter, Glitch filter width
Enables the glitch filter on the SCLK and SDATA lines to improve decode accuracy.

The "Glitch filter width" field sets the maximum glitch width to be ignored.

Remote command:
SBUS<sb>:RFFE:GFILter on page 2156
SBUS<sb>:RFFE:GFWidth on page 2156

Read mode
Selects, if the standard or synchronous read ("sRead") mode is used.

Remote command:
SBUS<sb>:RFFE:RDMD on page 2157

14.19.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Thresholds".

Threshold
Sets the threshold for the data and clock channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:RFFE:DATA:THReshold on page 2156
SBUS<sb>:RFFE:DATA:HYSTeresis on page 2155
SBUS<sb>:RFFE:CLOCk:THReshold on page 2155
SBUS<sb>:RFFE:CLOCk:HYSTeresis on page 2154

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.19.2.3 Display settings


For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

14.19.3 RFFE filter

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Filter" tab

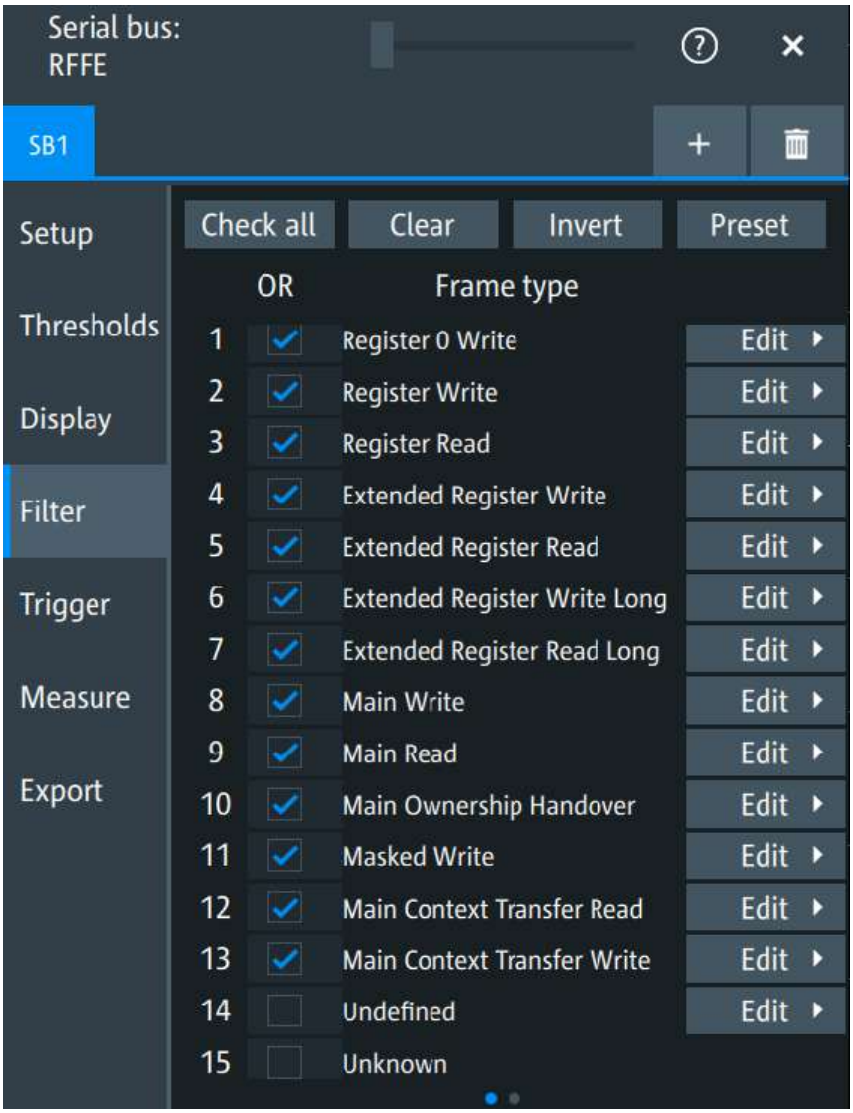

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:RFFE:FILTer:CHKall` on page 2158
`SBUS<sb>:RFFE:FILTer:CLR` on page 2158
`SBUS<sb>:RFFE:FILTer:INVert` on page 2159
`SBUS<sb>:RFFE:FILTer:RST` on page 2159

Enable
Enables the filtering on RFFE frames. Only the frames that match the selected filter conditions are displayed.


Remote command:
`SBUS<sb>:RFFE:FILTer:FRENable` on page 2159
`SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2161

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Register 0 Write", "Register Write", "Register Read", "Extended Register Write", "Extended Register Read", "Extended Register Write Long", "Extended Register Read Long", "Main Write", "Main Read".

Edit
Opens a dialog to define the details of the selected frame.

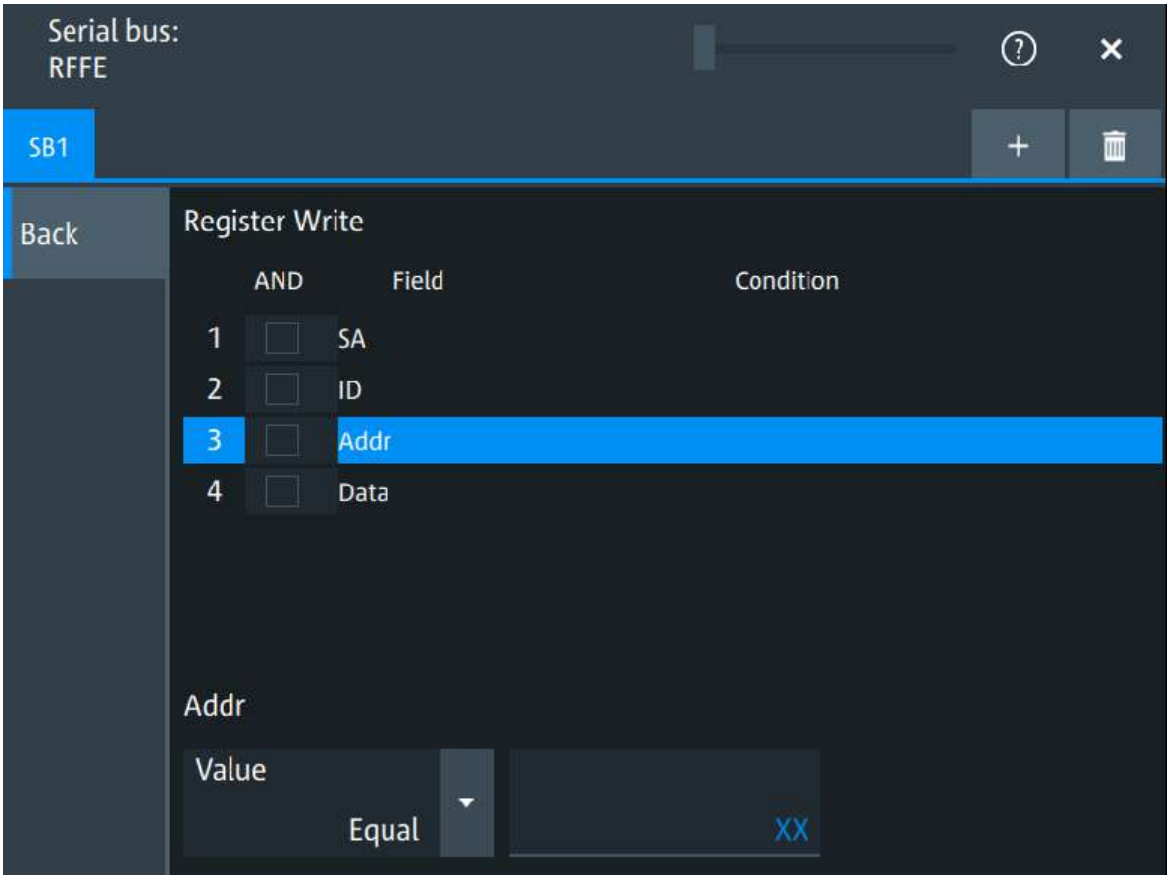

"Field" Enables the field type that you want to filter on for the selected frame. The following fields are available: "SA", "ID", "Data", "Addr", "BC", "MID", "Data MSB", "Data LSB".

Remote command:
`SBUS<sb>:RFFE:FILTer:FIENable` on page 2161
`SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2161

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:RFFE:FILTer:BIT` on page 2159
`SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2159


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:RFFE:FILTer:DMAX on page 2160
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2160
SBUS<sb>:RFFE:FILTer:DMIN on page 2160
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2160
SBUS<sb>:RFFE:FILTer:DOPerator on page 2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2161

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:RFFE:FILTer:IMAX on page 2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2161
SBUS<sb>:RFFE:FILTer:IMIN on page 2162
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2162
SBUS<sb>:RFFE:FILTer:IOPerator on page 2162
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2162

Error type
Enables filtering on the selected error type.

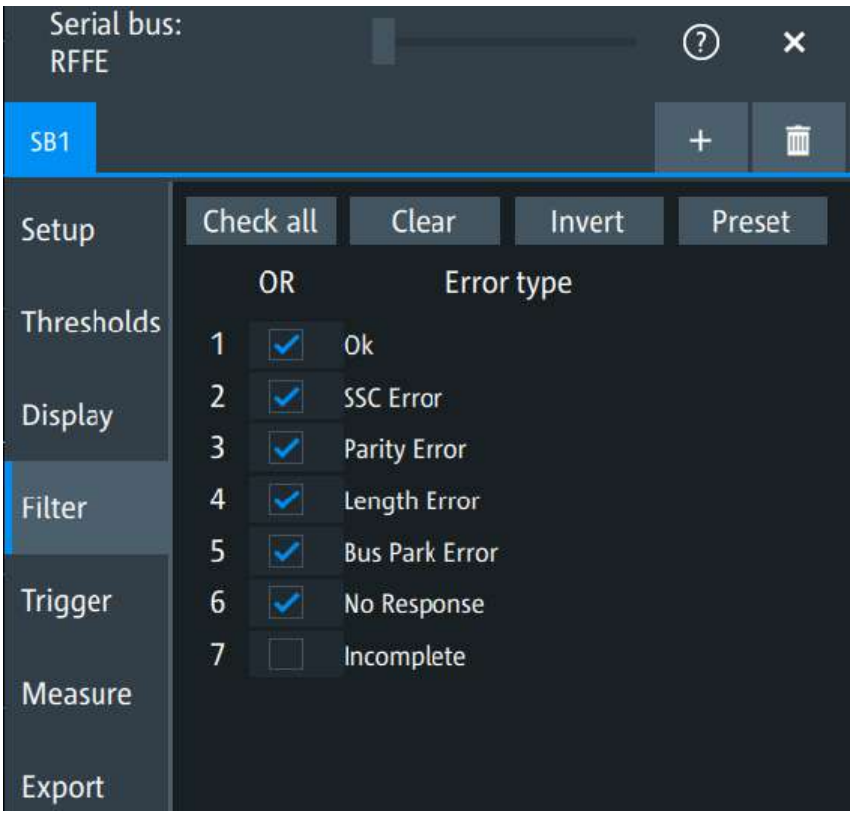

The following error types are available: "OK", "SSC Error", "Parity error", "Length error", "Bus park error", "No response".

Remote command:
`SBUS<sb>:RFFE:FILTer:ERENable` on page 2163
`SBUS<sb>:RFFE:FILTer:ERRor<n>:ENABle` on page 2163

14.19.4 RFFE format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:RFFE:FORMat:SELect` on page 2164

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

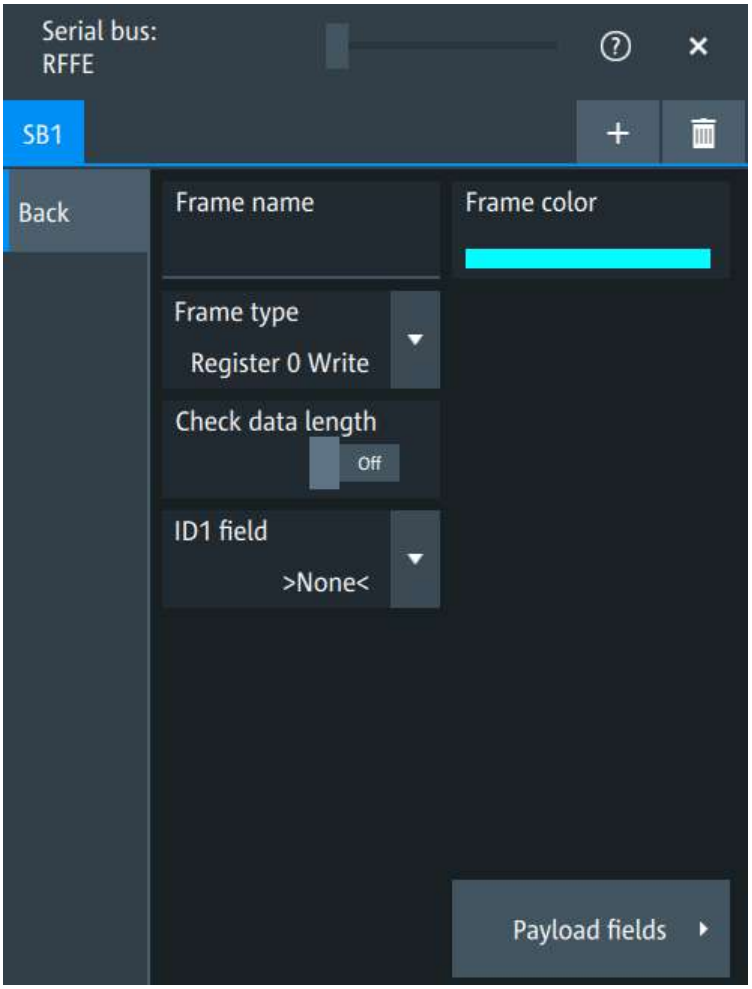

Remote command:
SBUS<sb>:RFFE:FORMat:ADDFrame on page 2164

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:RFFE:FORMat:CLR on page 2165
SBUS<sb>:RFFE:FORMat:FCOunt? on page 2165

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:RFFE:FORMat:LOAD on page 2164

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:RFFE:FORMat:SAVE on page 2164

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:NAME on page 2166

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:COLor on page 2166

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:TYPE on page 2166

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENCheck on page 2167

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENValue on page 2167

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Field on page 2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Field on page 2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Field on page 2167


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Value on page 2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Value on page 2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Value on page 2168

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

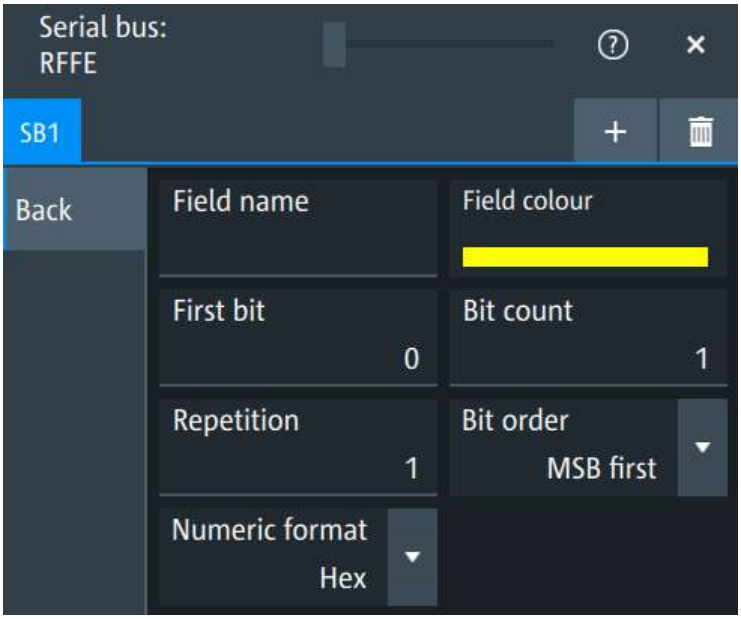

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ADDField` on page 2165

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:NAME` on page 2168

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:COLor` on page 2168

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2169

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2169

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2169

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2170

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2170

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2171

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 2171

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2172

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2172

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2173
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2173


14.19.5 RFFE software trigger

14.19.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.19.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger"

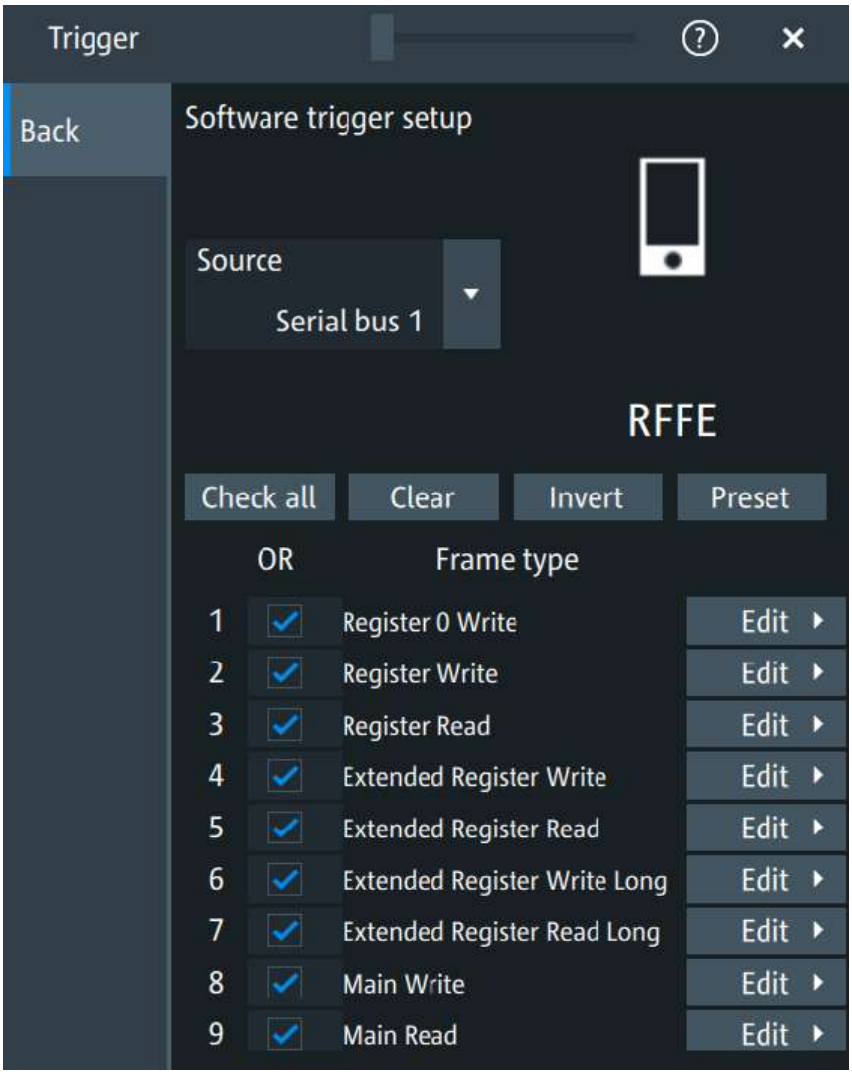

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:RFFE:CHKall` on page 2174
`TRIGger:SBSW:RFFE:CLR` on page 2174
`TRIGger:SBSW:RFFE:INVert` on page 2174
`TRIGger:SBSW:RFFE:RST` on page 2174


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: : "Register 0 Write", "Register Write", "Register Read", "Extended Register Write", "Extended Register Read", "Extended Register Write Long", "Extended Register Read Long", "Main Write", "Main Read".

Remote command:
`TRIGger:SBSW:RFFE:FRENable` on page 2175
`TRIGger:SBSW:RFFE:FRAMe<fr>:ENABle` on page 2175

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

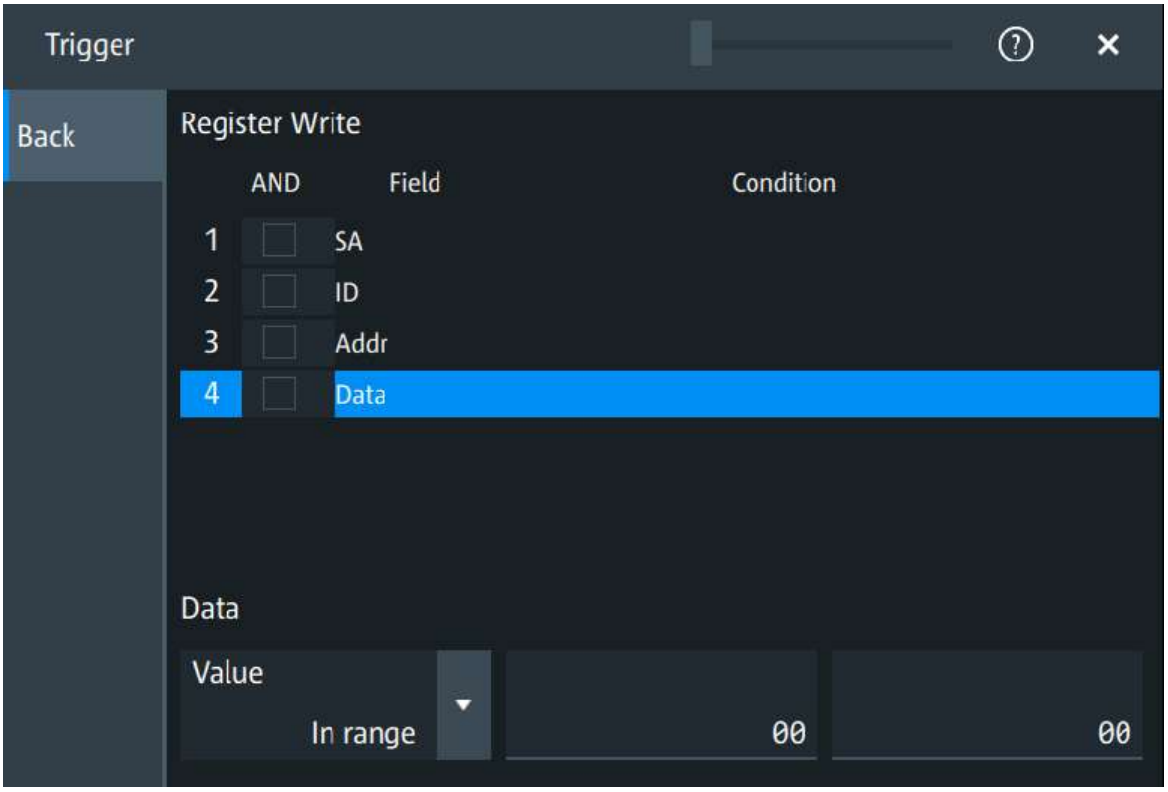

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are: "SA", "ID", "Data", "Addr", "BC", "MID", "Data MSB", "Data LSB".

Remote command:
`TRIGger:SBSW:RFFE:FIENable` on page 2176
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:ENABle` on page 2176

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:RFFE:BIT` on page 2175
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:BIT` on page 2175


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:RFFE:DMAX` on page 2175
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMAX` on page 2175
`TRIGger:SBSW:RFFE:DMIN` on page 2176
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMIN` on page 2176
`TRIGger:SBSW:RFFE:DOPerator` on page 2176
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator` on page 2176

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:RFFE:IMAX on page 2177
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMAX on page 2177
TRIGger:SBSW:RFFE:IMIN on page 2177
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMIN on page 2177
TRIGger:SBSW:RFFE:IOPerator on page 2178
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator on page 2178

Error type
Enables triggering on the selected error type.

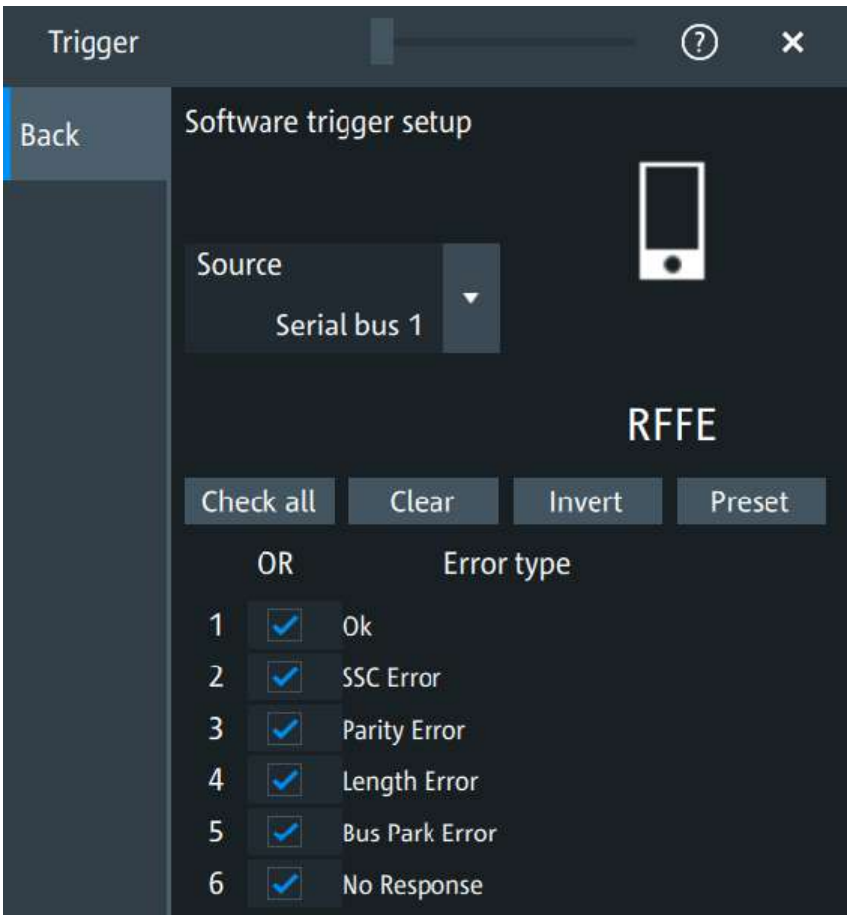

The following error types are available: "OK", "SSC Error", "Parity error", "Length error", "Bus park error", "No response".

Remote command:
TRIGger:SBSW:RFFE:ERENable on page 2178
TRIGger:SBSW:RFFE:ERRor<m>:ENABle on page 2178

14.19.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.19.7 RFFE decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

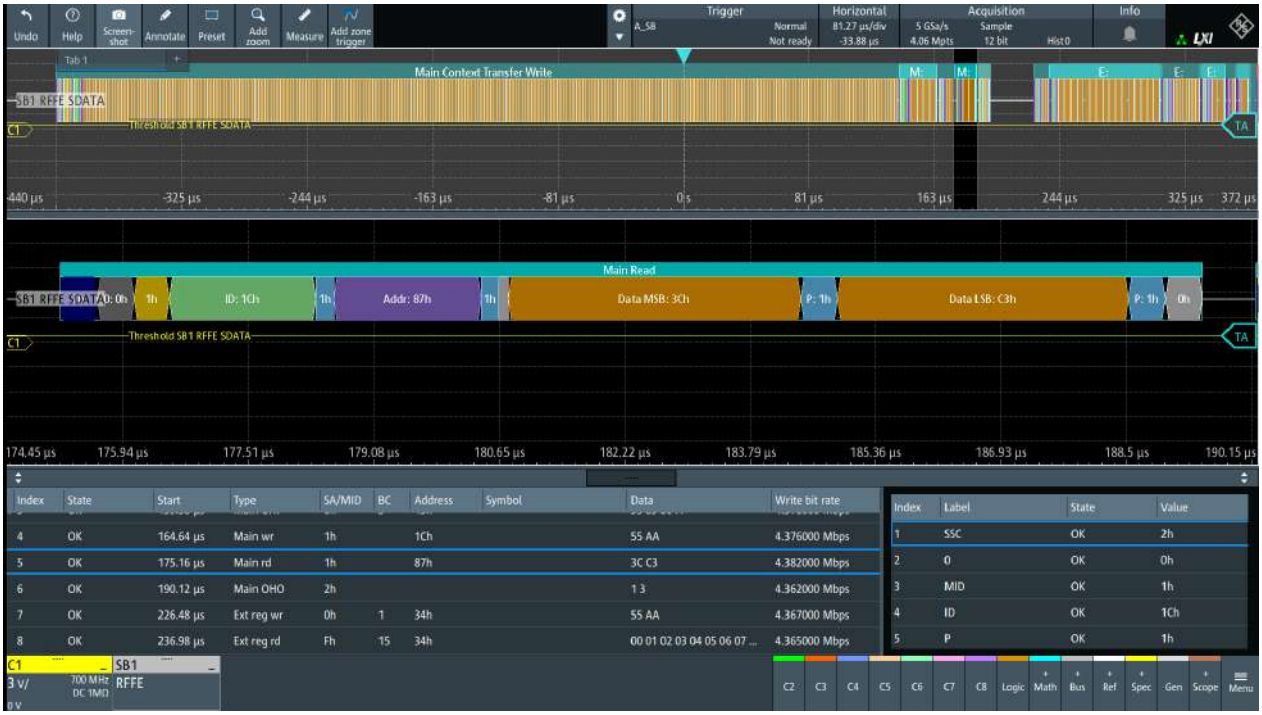


Figure 14-54: Decoded RFFE signal

The decode results table contains information about all decoded frames.

Table 14-34: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Type	The type of command
SA/MID	Address of the sub device

Column	Description
BC	Byte count
Address	Register address
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Data	Values of the data bytes. Select the data format in the "Display" tab.
Write bit rate	Value of the write bit rate
Read bit rate	Value of the read bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-35: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Data	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.20.5, "Decode results", on page 2179.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example of RFFE export file

```
Index,Start,Stop,State,Type,SA, BC,    Addr,    Write BR,    Read BR
1    -0.1000402    -0.0003965    OK    MSKW    5h    ---    2Eh    4376000    ---
2    -0.0003957    0.00013858    OK    MCTW    0h    255    3Ah    4375000    ---
3    0.00013938    0.00016396    OK    MCTR    0h    3      43h    4378000    2187000
4    0.00016464    0.00017436    OK    MWR     1h    ---    1Ch    4376000    ---
5    0.00017516    0.00018944    OK    MRD     1h    ---    87h    4382000    2190000
6    0.00019012    0.00019824    OK    MOHO    2h    ---    ---    4362000    2195000
7    0.00022648    0.00023618    OK    ERWR    0h    1      34h    4367000    ---
8    0.00023698    0.00030888    OK    ERRD    Fh    15     34h    4365000    2187000
```

```
Details frame 1
Index    Label    State    Value
1    'Mask'    'OK'    3Fh
2    'Data'    'OK'    15h

Details frame 3
Index    Label    State    Value
1    'Data: 1'    'OK'    55h
2    'Data: 2'    'OK'    83h
3    'Data: 3'    'OK'    00h
4    'Data: 4'    'OK'    FFh

Details frame 4
Index    Label    State    Value
1    'Data MSB'    'OK'    55h
2    'Data LSB'    'OK'    AAh
```

14.20 10BASE-T1S (automotive Ethernet, option R&S MXO5-K560)

10BASE-T1S technology provides a 10 Mbit/s, multidrop transmission over a single pair physical layer. It is defined in the IEEE standard 802.3cg-2019 specification.

Requirements

For performing 10BASE-T1S decode measurements, you need the following:

- MXO 5. One of the analog input channels is used for analysis.
- Option R&S MXO5-K560

10BASE-T1S does not support logical channels for decoding, because it requires two thresholds, which are not available with this option.

- 10BASE-T1S basics 923
- 10BASE-T1S configuration 925
- 10BASE-T1S filter 927
- 10BASE-T1S format configuration 930
- 10BASE-T1S hardware trigger 936
- 10BASE-T1S software trigger 937
- Measure 939
- 10BASE-T1S decode results 940

14.20.1 10BASE-T1S basics

This option provides in-demand monitor and decode functions for 10BASE-T1S, where S stands for short reach. This standard, officially IEEE 802.3cg, attracted attention even before the specification was published in 2020. It was specified with automotive

requirements in mind, as an alternative to CAN, CAN-FD or LIN. Target application is short-range data transmission with data rates up to 10 Mbit/s.

10BASE-T1S supports half-duplex and full-duplex communication, providing a point-to-point direct connection between two nodes. It is also suited for using a multidrop topology with up to eight nodes, connected on a single 25 m bus segment. Typical application examples are automotive interior lighting, parking radar, active suspension, motor management, and audio connections. It also supports networks of incompatible devices and different physical hardware.

Advantages over previously established 10 Mbit/s protocols include:

- Connecting all sensors over the same unshielded twisted pair cable, which saves interfaces, connectors, and cables, hence reducing weight, cost, and complexity.
- The simplified architecture, entirely Ethernet-based, eliminates any need for gateways between the networks. The unified design is also simpler to test and maintain.
- Maximized data rate: With Physical Layer Collision Avoidance (PLCA), only the node that currently has the right to transmit can send data. Nodes with no data to transmit will be given a reduced slot to send data, increasing the available bandwidth.


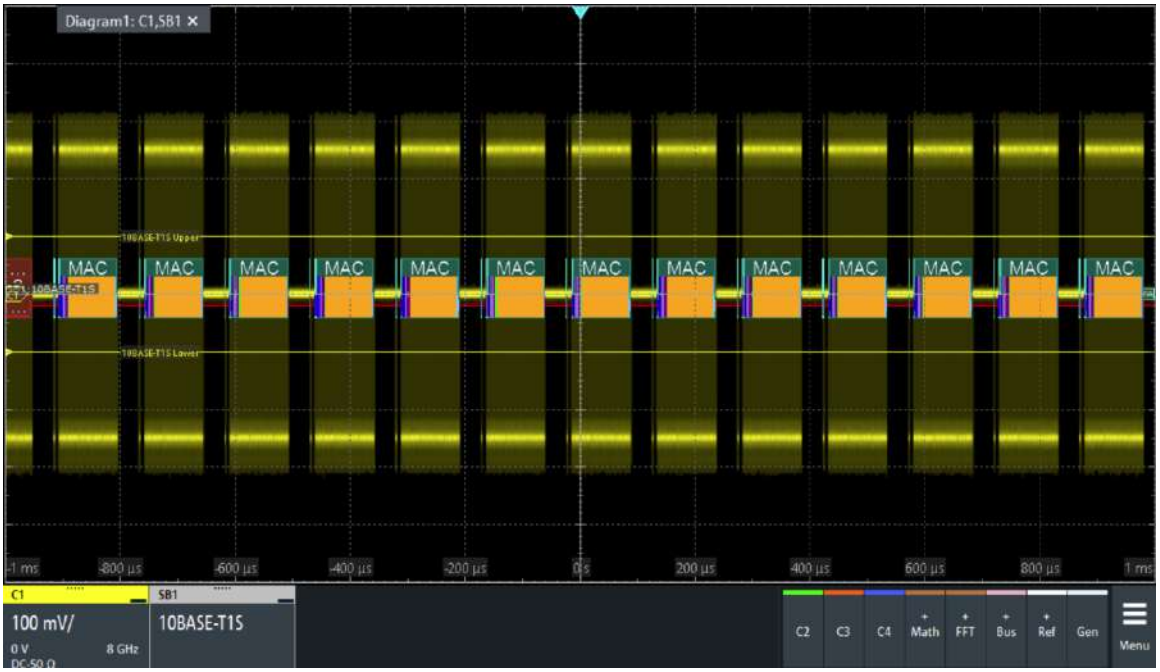


Figure 14-55: Example of a decoded 10BASE-T1S signal

14.20.2 10BASE-T1S configuration

14.20.2.1 10BASE-T1S configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Setup".

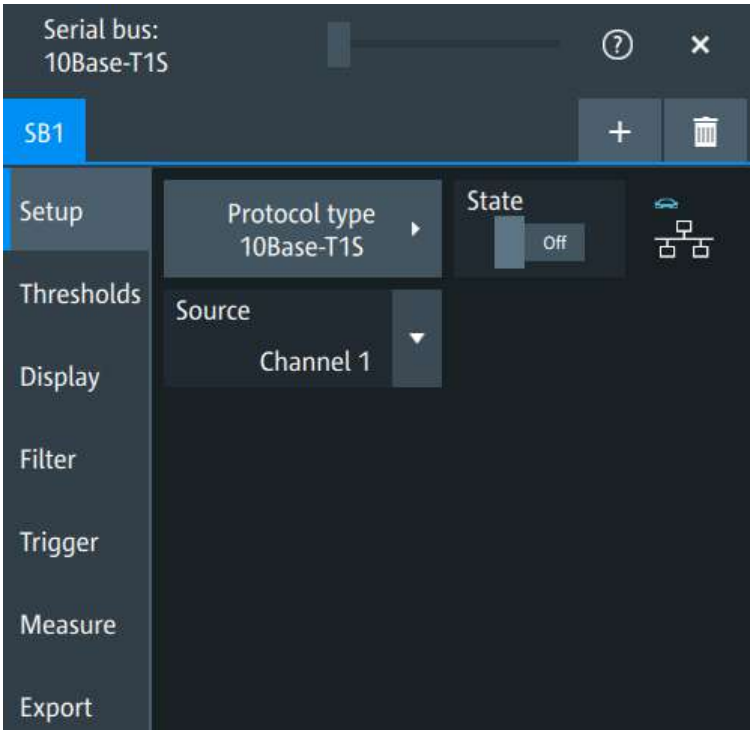

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.


Remote command:
`SBUS<sb>:TYPE` on page 1564

Source
Selects the source channel for the 10BASE-T1S protocol. Only analog channels can be used.

Remote command:
`SBUS<sb>:TNOS:SOURce` on page 2187

14.20.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Thresholds".

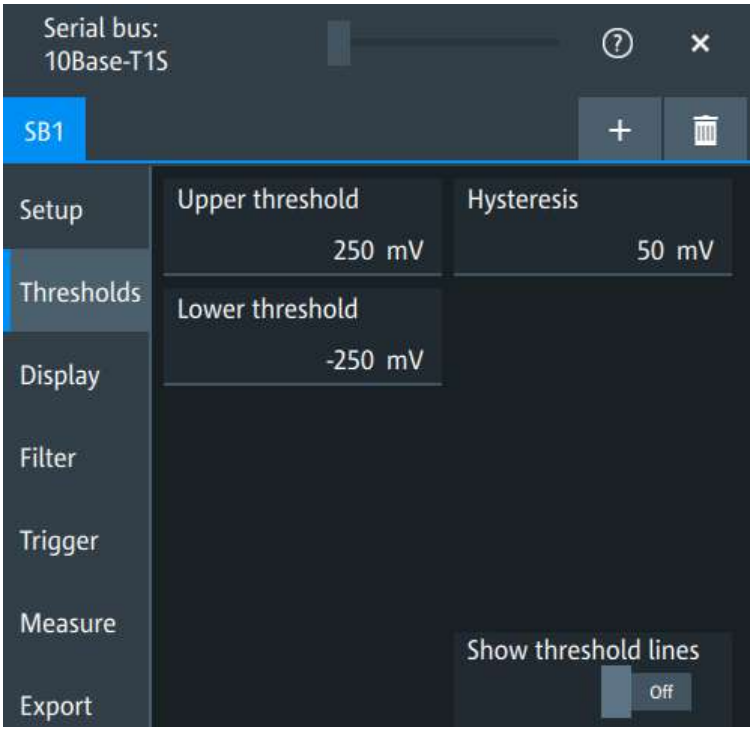

Threshold
Sets the threshold for the data channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:TNOS:THReshold:LOWer` on page 2187
`SBUS<sb>:TNOS:THReshold:UPPer` on page 2188
`SBUS<sb>:TNOS:THReshold:HYSTeresis` on page 2188

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566

14.20.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display:


"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of the raw, encoded bits.
"Symbols"	Enables the display of the raw, encoded symbols.
"Descrambled bits"	Enables the display of the fully decoded and descrambled binary data, representing the original information being transmitted over the 10BASE-T1S link.

Data format
See "Data format" on page 541.

Zoom coupling
See "Zoom coupling" on page 542.

14.20.3 10BASE-T1S filter

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Filter" tab

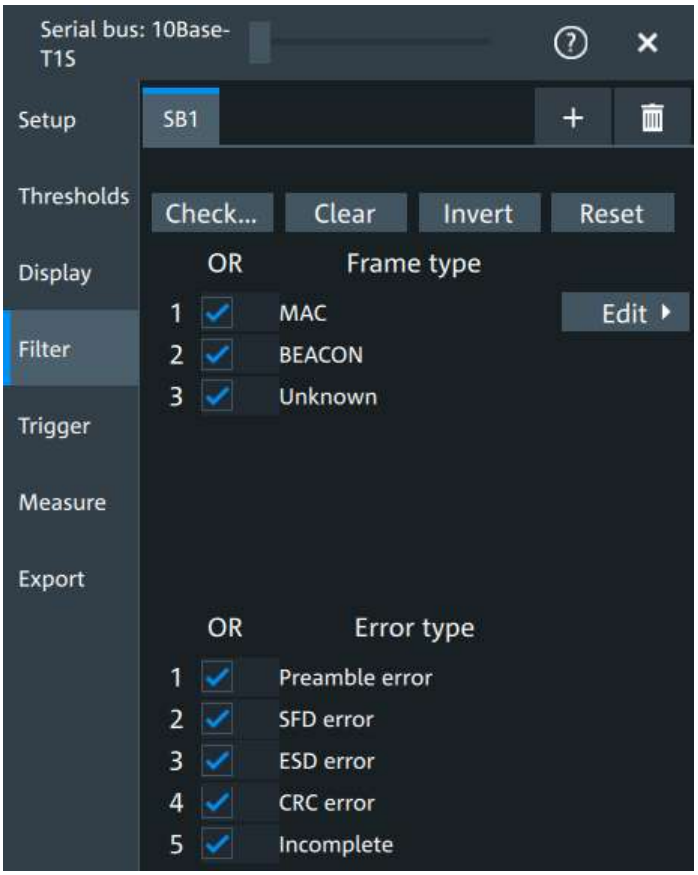

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:TNOS:FILTer:CHKall` on page 2189
`SBUS<sb>:TNOS:FILTer:CLR` on page 2189
`SBUS<sb>:TNOS:FILTer:INVert` on page 2190
`SBUS<sb>:TNOS:FILTer:RST` on page 2189


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "MAC", "BEACON" and "Unknown".

Remote command:
`SBUS<sb>:TNOS:FILTer:FRENable` on page 2193
`SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABle` on page 2193

Edit
Opens a dialog to define the details of the selected frame.

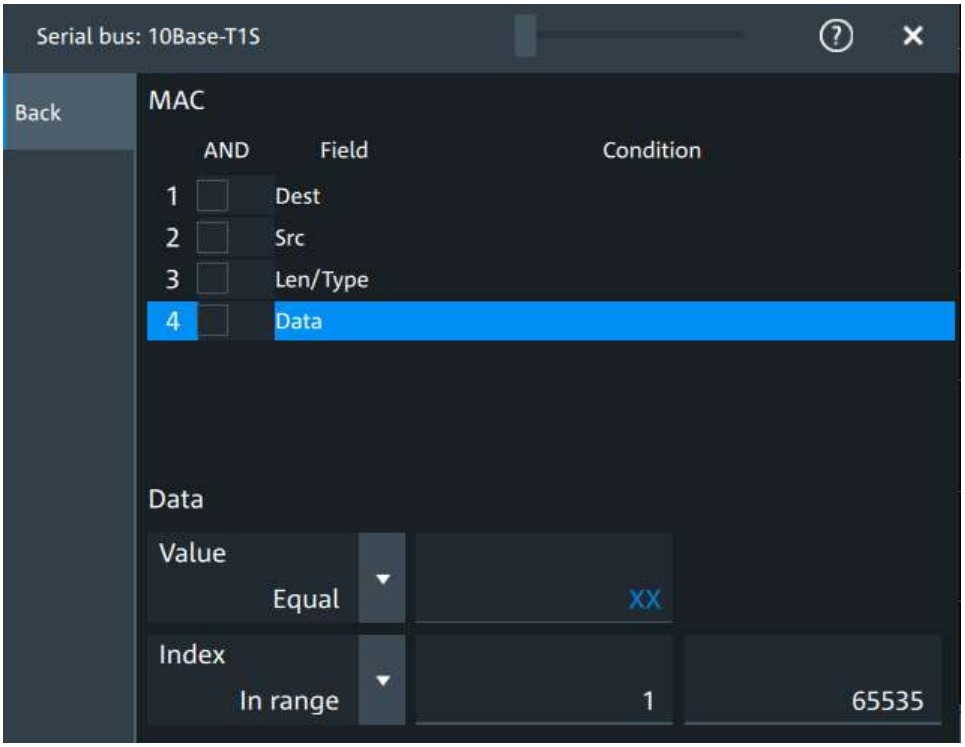

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Dest", "Src", "Len/Type" and "Data".

Remote command:
`SBUS<sb>:TNOS:FILTer:FIENable` on page 2192
`SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2192

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:TNOS:FILTer:BIT` on page 2190
`SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2190

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:TNOS:FILTer:DMAX` on page 2190
`SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 2190
`SBUS<sb>:TNOS:FILTer:DMIN` on page 2191
`SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 2191
`SBUS<sb>:TNOS:FILTer:DOPerator` on page 2191
`SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 2191

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:TNOS:FILTer:IMAX on page 2192
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2192
SBUS<sb>:TNOS:FILTer:IMIN on page 2193
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2193
SBUS<sb>:TNOS:FILTer:IOPerator on page 2193
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2193

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:TNOS:FILTer:ERENable on page 2191
SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABle on page 2191

14.20.4 10BASE-T1S format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:TNOS:FORMat:SELect on page 2194

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

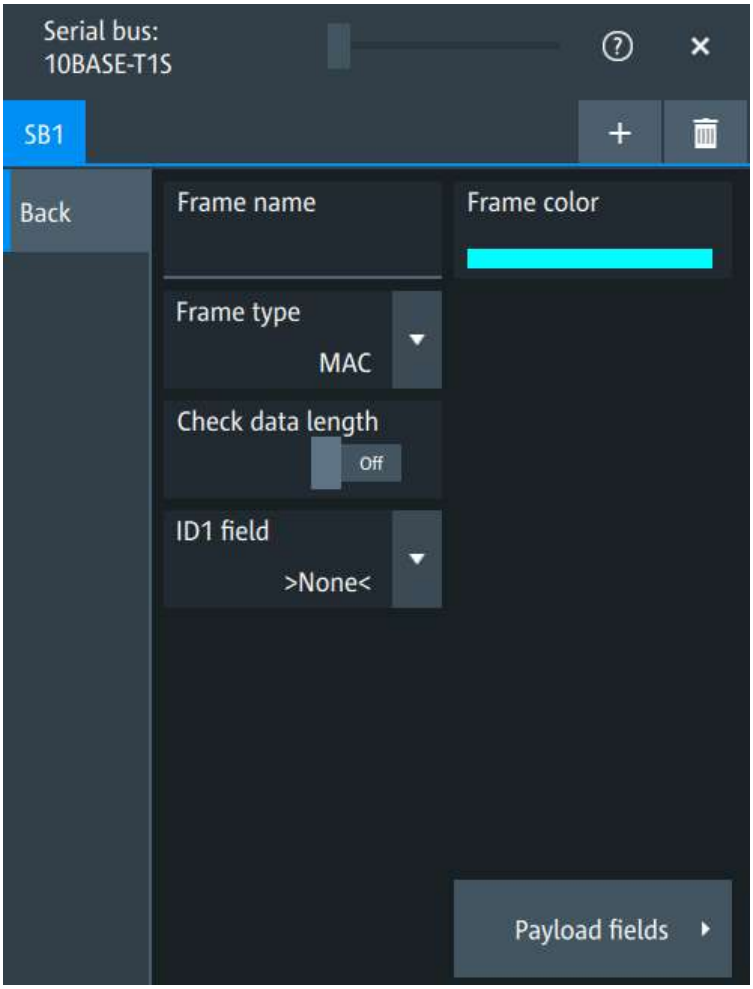

Remote command:
SBUS<sb>:TNOS:FORMat:ADDFrame on page 2195

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:TNOS:FORMat:CLR on page 2196
SBUS<sb>:TNOS:FORMat:FCOunt? on page 2196

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:TNOS:FORMat:LOAD on page 2195

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:TNOS:FORMat:SAVE on page 2195

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:NAME on page 2197

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:COLor on page 2197

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:TYPE on page 2197

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENCheck on page 2197

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENValue on page 2198

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Field on page 2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Field on page 2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Field on page 2198


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Value on page 2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Value on page 2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Value on page 2198

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

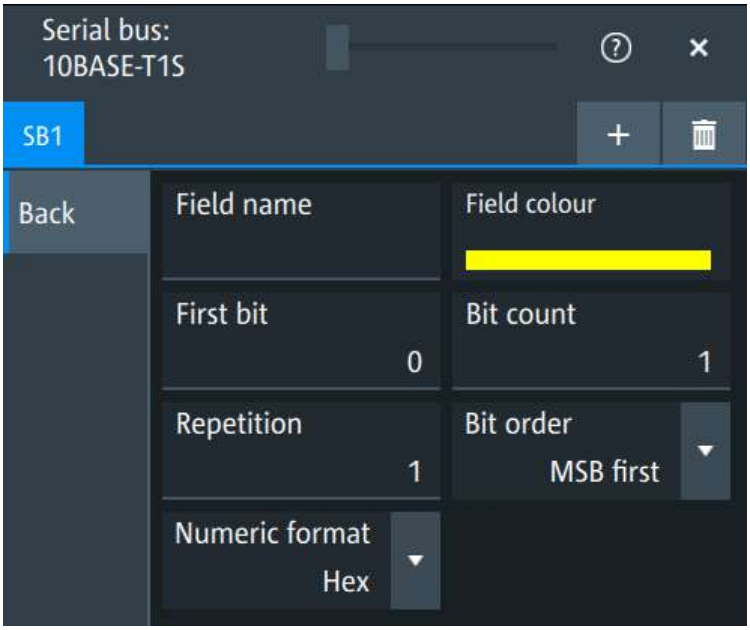

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ADDField on page 2196

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2199

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2199

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2199

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2200

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2200

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2201

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2201

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2202

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 2202

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2203

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2203

Parameter A,B
Defines the parameters of the linear function.


- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2203
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2203

14.20.5 10BASE-T1S hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Trigger" tab > "Setup Hardware Trigger"

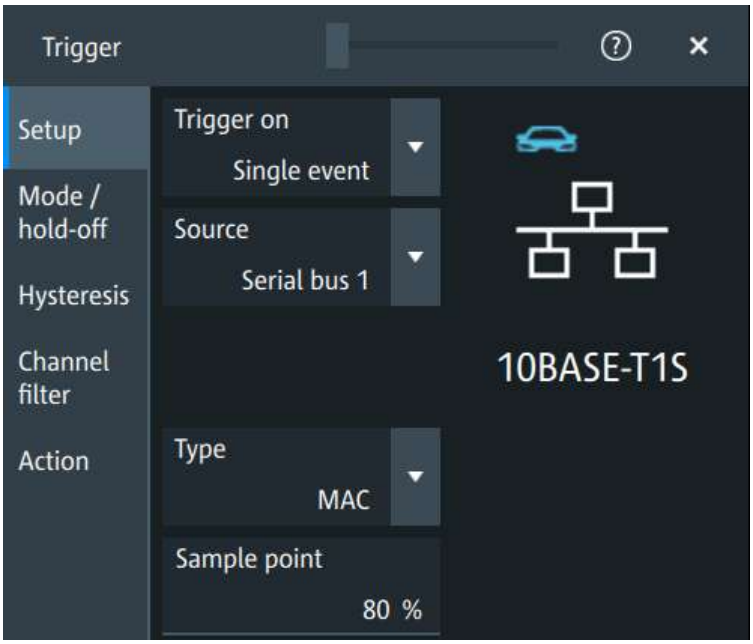

Type
Selects the trigger type for analysis.

"MAC" Triggers on a MAC frame.

"Commit" Triggers on a commit sequence.

"Beacon" Triggers on a beacon transmission.

"Unknown" Identifies TNOS symbols or events that are classified as unknown.

Remote command:
TRIGger:SBHW:TNOS:TYPE on page 2204

Sample point
Sets the position of the sample point in percent of the nominal bit time.

Remote command:
TRIGger:SBHW:TNOS:SAMPlepoint on page 2204


14.20.6 10BASE-T1S software trigger

14.20.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.20.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Trigger" tab > "Setup Software Trigger"

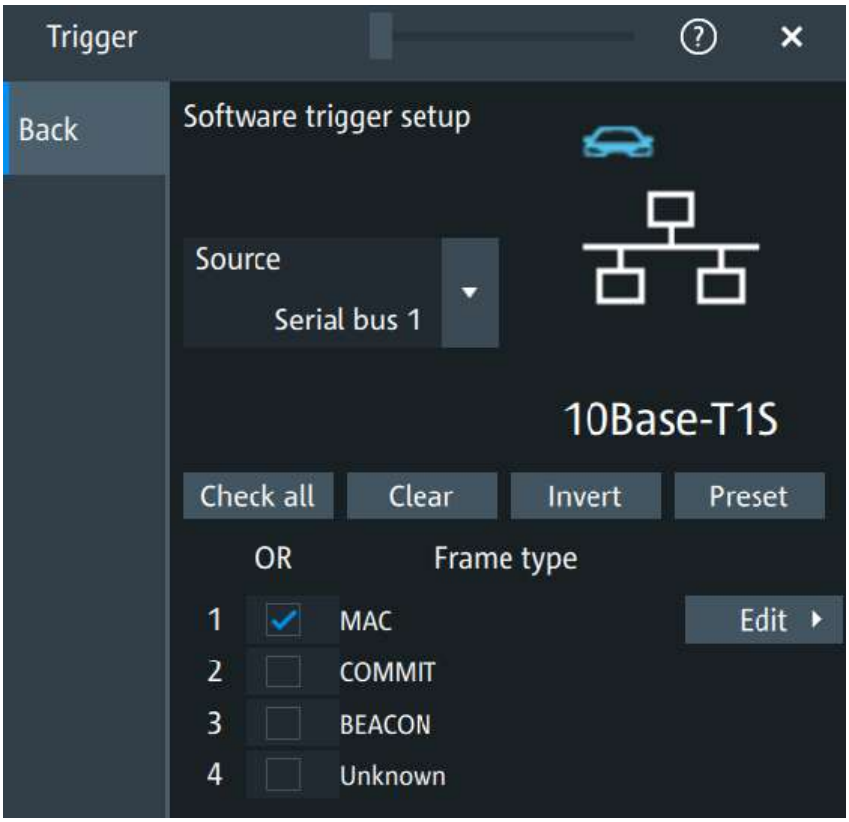

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
TRIGger:SBSW:TNOS:CHKall on page 2205
TRIGger:SBSW:TNOS:CLR on page 2205
TRIGger:SBSW:TNOS:INVert on page 2206
TRIGger:SBSW:TNOS:RST on page 2206


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "MAC", "COMMIT", "BEACON", "Unknown".

Remote command:
TRIGger:SBSW:TNOS:FRENable on page 2206
TRIGger:SBSW:TNOS:FRAMe<fr>:ENABle on page 2206

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

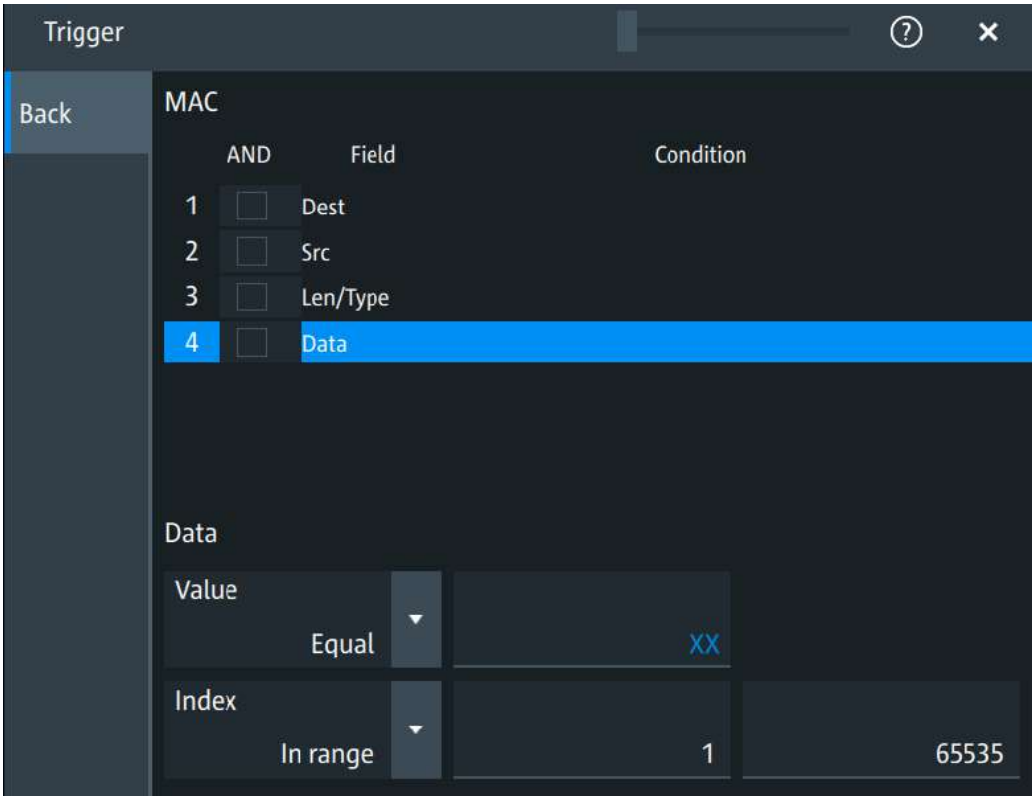

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Dest", "Src", "Len/Type", "Data".

Remote command:
TRIGger:SBSW:TNOS:FIENable on page 2208
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:ENABle on page 2208

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:TNOS:BIT on page 2206
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:BIT on page 2206

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:TNOS:DMAX on page 2207
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMAX on page 2207
TRIGger:SBSW:TNOS:DMIN on page 2207
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMIN on page 2207
TRIGger:SBSW:TNOS:DOPerator on page 2207
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator on page 2207

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:TNOS:IMAX on page 2208
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMAX on page 2208
TRIGger:SBSW:TNOS:IMIN on page 2209
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMIN on page 2209
TRIGger:SBSW:TNOS:IOPerator on page 2209
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator on page 2209

Error type
Enables triggering on the selected error type.

The following error types are available: "Preamble error", "SFD error", "ESD error", "CRC error".

Remote command:
TRIGger:SBSW:TNOS:ERENable on page 2209
TRIGger:SBSW:TNOS:ERRor<m>:ENABle on page 2209

14.20.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.20.8 10BASE-T1S decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

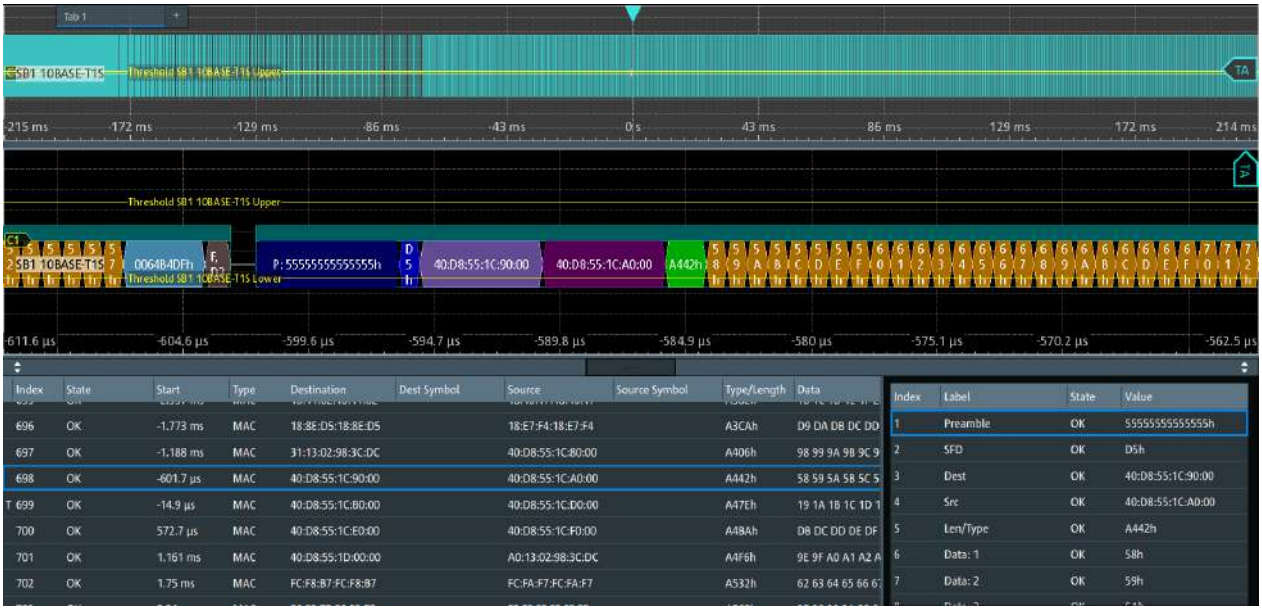


Figure 14-56: Decoded 10BASE-T1S signal

The decode results table contains information about all decoded frames.

Table 14-36: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame
Dest Symbol	Symbolic name of the destination defined in the symbol list. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Source	Source address of the frame
Source Symbol	Symbolic name of the source defined in the symbol list. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.

Column	Description
Type/Length	The sub-protocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the sub-protocol) or the word length.
Data	Value of the data. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-37: Content of the frame details table

Column	Description
Index	Index of the decoded field
Label	Name of the field
State	State of the field (OK / not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.21.6, "Decode results", on page 2210.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example 10BASE-T1S export file

```
Index,Start,Stop,State,Type,Destination,Dest Symbol,Source,Source Symbol,
  Type/Len,CRC,Bit rate
1,-0.214999,-0.214971,'OK','MAC','00:00:0C:12:14:65',,'00:01:13:AB:C1:9C',
  ,00E6h,00002507h,12500000
2,-0.21497,-0.214941,'EPRM','MAC','00:01:14:06:C0:00',,'00:04:07:C6:C0:00',
  ,0122h,00004A04h,12500000
3,-0.21494,-0.21491,'ESFD','MAC','00:13:02:98:3C:CC',,'00:0B:64:06:C0:12',
  ,015Eh,00006F01h,12500000
4,-0.214909,-0.214878,'EESD','MAC','00:1B:C5:06:C0:00',,'00:1B:C5:06:D0:00',
  ,019Ah,000093FEh,12500000
5,-0.214877,-0.214846,'ECRC','MAC','00:1B:C5:06:E0:00',,'00:1B:C5:06:F0:00',
  ,01D6h,0000B8FBh,12500000
```

```
Details frame 1
Index,State,Value
1,'OK',14h
2,'OK',15h
3,'OK',16h
4,'OK',17h
5,'OK',18h
6,'OK',19h
7,'OK',1Ah
8,'OK',1Bh

Details frame 2
Index,State,Value
1,'OK',1Ch
2,'OK',1Dh
3,'OK',1Eh
4,'OK',1Fh
5,'OK',20h
6,'OK',21h
7,'OK',22h
8,'OK',23h
9,'OK',24h
```

14.21 100BASE-T1 (automotive Ethernet, option R&S MXO5-K560)

100BASE-T1 is an Ethernet based protocol. It is specialized for the needs of the automotive industry, such as in the automotive networking applications, enabling advanced safety, comfort and infotainment features within the automobile.

100BASE-T1 is also known as BroadR-Reach Physical Layer (BR-PHY) or Open Alliance BroadR-Reach PHY (OABR PHY). For more details on the specifications, refer to opensig.org/automotive-ethernet-specifications and ieeexplore.ieee.org/document/7433918.


The 100BASE-T1 option is compatible with the MII (IEEE 802.3 Clause 22) and IEEE 802.3 MAC operating at 100 Mbit/s.

- 100BASE-T1 configuration....943
- 100BASE-T1S filter....944
- PPIFormat.PPIFrame.Color100BASE-T1 format configuration....946
- 100BASE-T1 software trigger....952
- Measure....956
- 100BASE-T1 decode results....956

14.21.1 100BASE-T1 configuration

14.21.1.1 100BASE-T1 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "100BASE-T1" > "Setup".

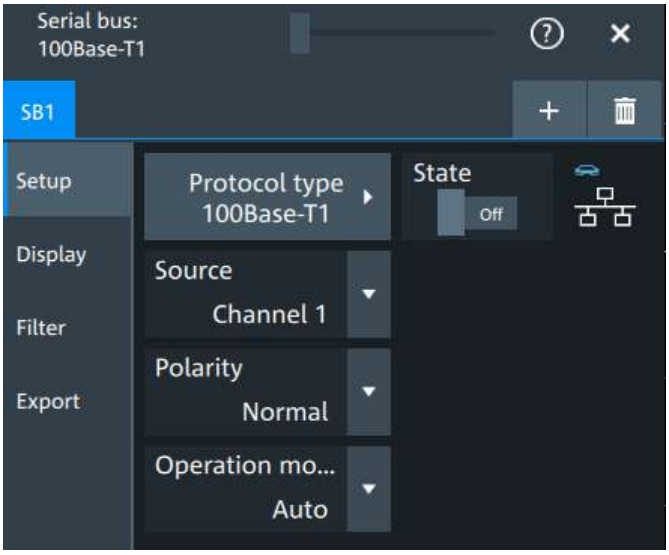

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

Source
Selects the source channel.

Remote command:
`SBUS<sb>:HBTO:SOURce` on page 2220

Polarity
Selects the polarity of the data signal. You can select between "Normal" and "Inverted".

For "Normal" polarity, active high is defined as +1 V and active low is defined as -1 V.
For "Inverted" polarity, active high is defined as -1 V and active low is defined as +1 V.

Remote command:
`SBUS<sb>:HBTO:POLarity` on page 2219

Operation mode
Selects the desired direction of the full duplex signal for analysis You can choose between "Auto", "Main" and "Subordinate".

If "Auto" is selected, the decoder automatically detects the "Main" or "Subordinate" mode.

Remote command:
SBUS<sb>:HBTO:MODE on page 2219

14.21.1.2 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.


"Off"	Disables the display of the decode layer.
"Ternary symbols"	Enables the display of the raw, ternary encoded symbols, consisting of the three states "-1", "0" and "+1".
"Scrambled bits"	Enables the display of the binary bits, decoded from the ternary symbols, but still in a scrambled (pre-descrambling) state.
"Descrambled bits"	Enables the display of the fully decoded and descrambled binary data, representing the original information being transmitted over the 100BASE-T1 link.
"Reversed bits"	Enables display of the bits after a byte-wise reversal of the descrambled bits of the MAC frame.

Data format
See "Data format" on page 541.

Zoom coupling
See "Zoom coupling" on page 542.

14.21.2 100BASE-T1S filter

Access: "Menu" > "Apps" > "Protocol" tab > "100BASE-T1" > "Filter" tab

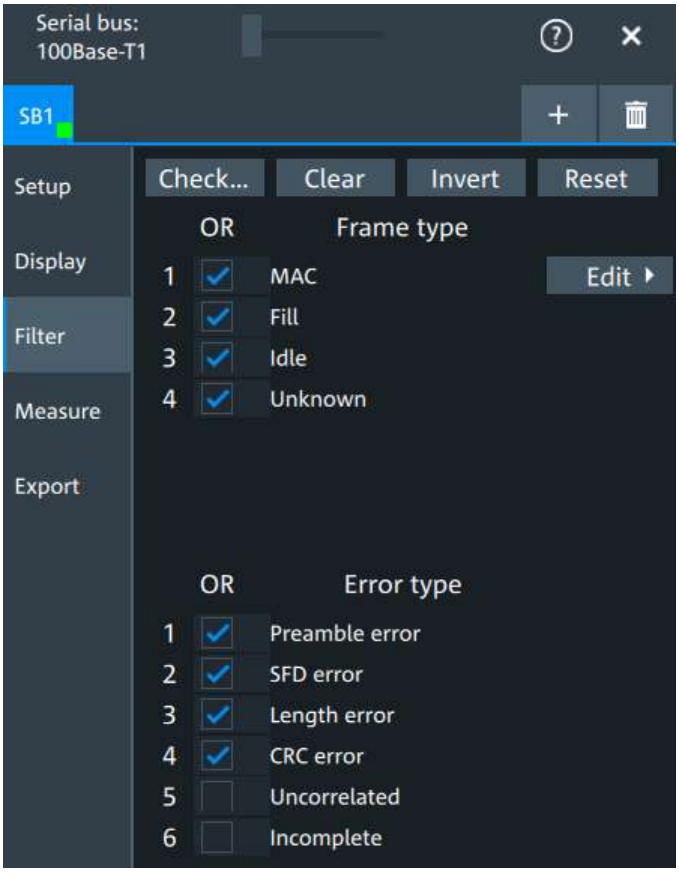

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.


Remote command:
`SBUS<sb>:HBTO:FILTer:CHKall` on page 2221
`SBUS<sb>:HBTO:FILTer:CLR` on page 2221
`SBUS<sb>:HBTO:FILTer:INVert` on page 2221
`SBUS<sb>:HBTO:FILTer:RST` on page 2222

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "MAC", "Fill", "Idle" and "Unknown".

Edit
Opens a dialog to define the details of the selected frame.

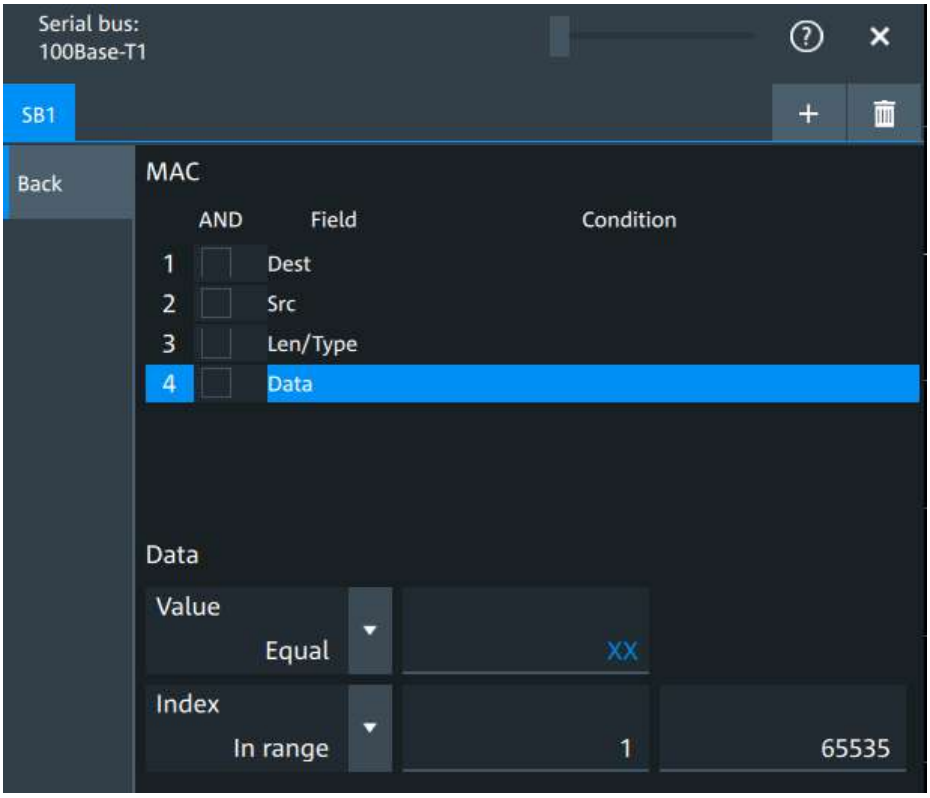

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Dest", "Src", "Len/Type" and "Data".

"Condition" Displays the value condition for the selected field.

"Value" The data setup consists of a comparison condition and one or two data patterns.

"Index" The index setup consists of a comparison condition and one or two index values.

Error type
Enables filtering on the selected error type.

14.21.3 PPIFormat.PPIFrame.Color100BASE-T1 format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "100BASE-T1" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:HBTO:FORMat:SELect` on page 2226

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

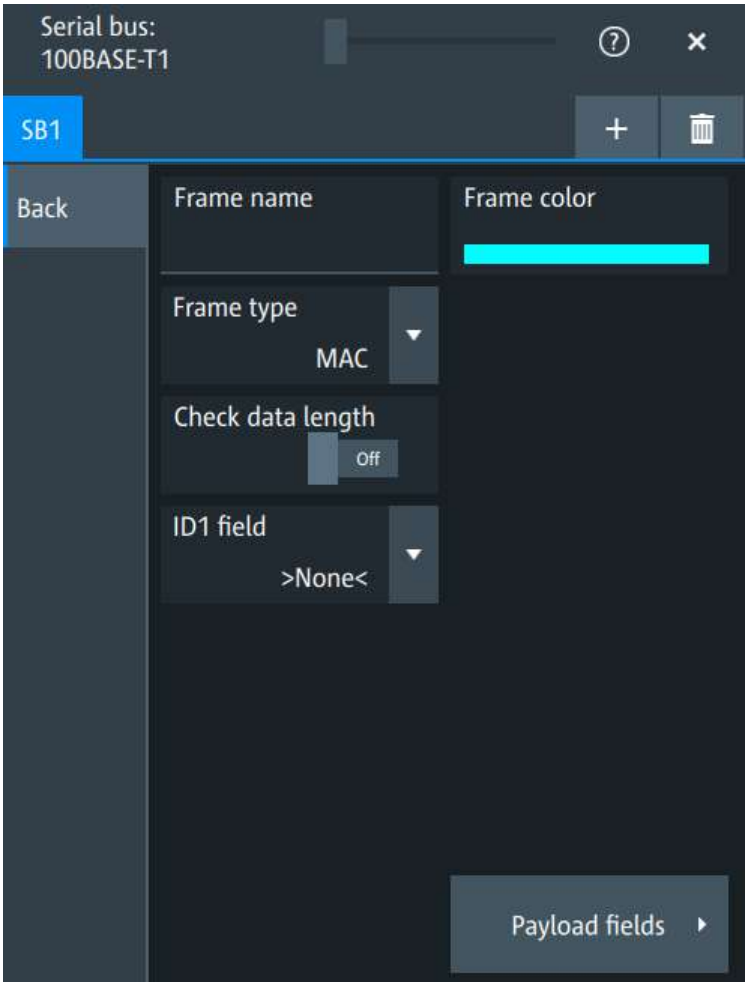

Remote command:
`SBUS<sb>:HBTO:FORMat:ADDFrame` on page 2226

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:HBTO:FORMat:CLR on page 2227
SBUS<sb>:HBTO:FORMat:FCOunt? on page 2227

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:HBTO:FORMat:LOAD on page 2227

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:HBTO:FORMat:SAVE on page 2227

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:NAME on page 2228

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:COLor on page 2229

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:TYPE on page 2229

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck on page 2229

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENValue on page 2230

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Field on page 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Field on page 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Field on page 2230


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Value on page 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Value on page 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Value on page 2230

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

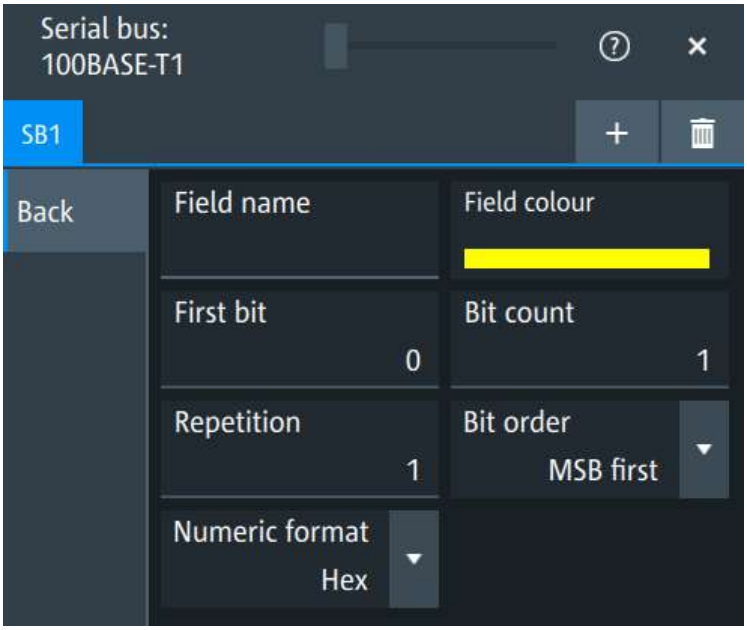

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ADDField on page 2228

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2231

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2231

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2231

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2232

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2232

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2232

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2233

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2233

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2234

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 2234

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2235

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2235
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2235


14.21.4 100BASE-T1 software trigger

14.21.4.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.21.4.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "100BASE-T1" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

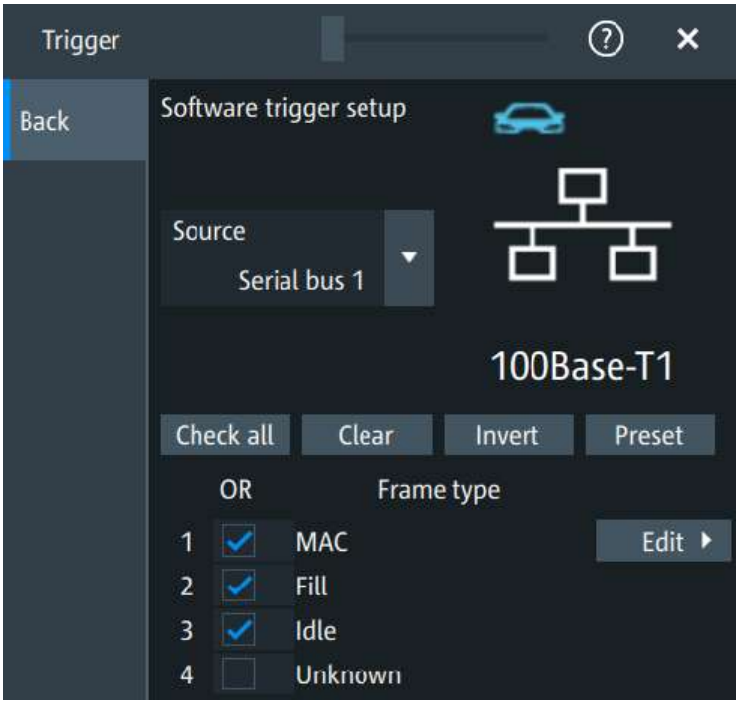

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all"	Enables the software trigger for all available frames and error types.
"Clear"	Disables the software trigger for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:HBTO:CHKall` on page 2236
`TRIGger:SBSW:HBTO:CLR` on page 2236
`TRIGger:SBSW:HBTO:INVert` on page 2237
`TRIGger:SBSW:HBTO:RST` on page 2237


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "MAC", "Fill", "Idle", "Unknown".

Remote command:
TRIGger:SBSW:HBTO:FRENable on page 2237
TRIGger:SBSW:HBTO:FRAMe<fr>:ENABle on page 2237

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

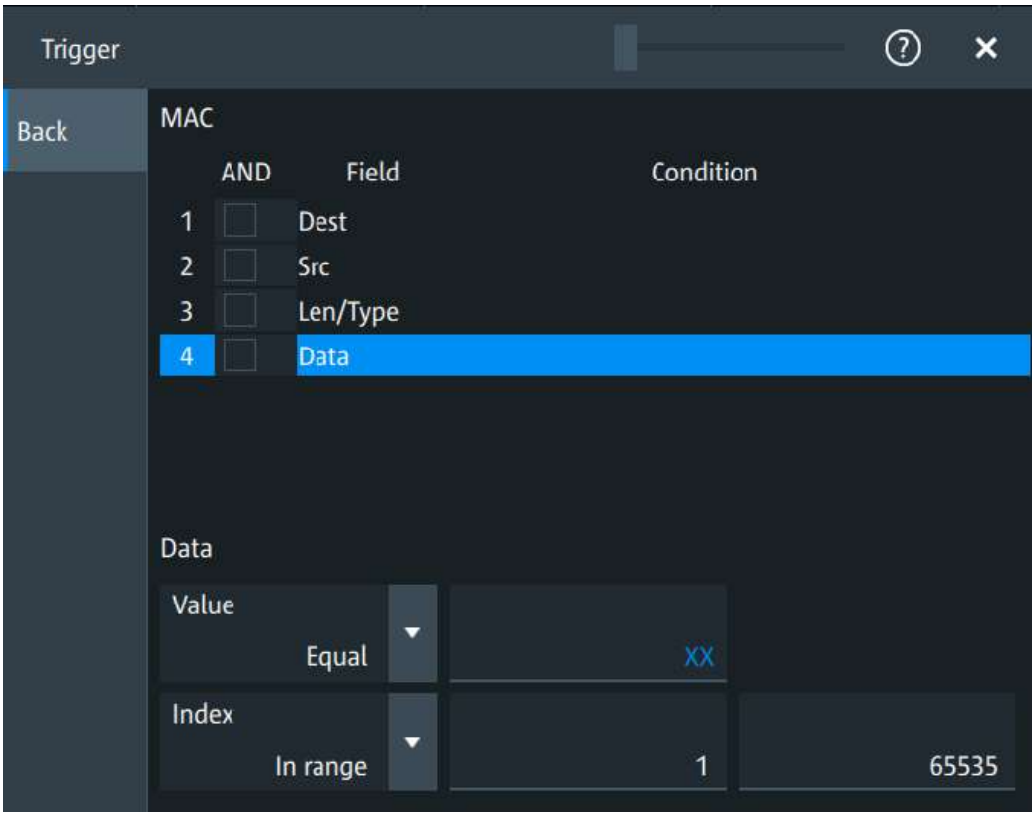

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Dest", "Src", "Len/Type", "Data".

Remote command:
TRIGger:SBSW:HBTO:FIENable on page 2239
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:ENABle on page 2239

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:HBTO:BIT on page 2237
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:BIT on page 2237


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:HBTO:DMAX on page 2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMAX on page 2238
TRIGger:SBSW:HBTO:DMIN on page 2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMIN on page 2238
TRIGger:SBSW:HBTO:DOPerator on page 2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator on page 2238

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:HBTO:IMAX on page 2239
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMAX on page 2239
TRIGger:SBSW:HBTO:IMIN on page 2240
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMIN on page 2240
TRIGger:SBSW:HBTO:IOPerator on page 2240
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator on page 2240

Error type
Enables triggering on the selected error type.

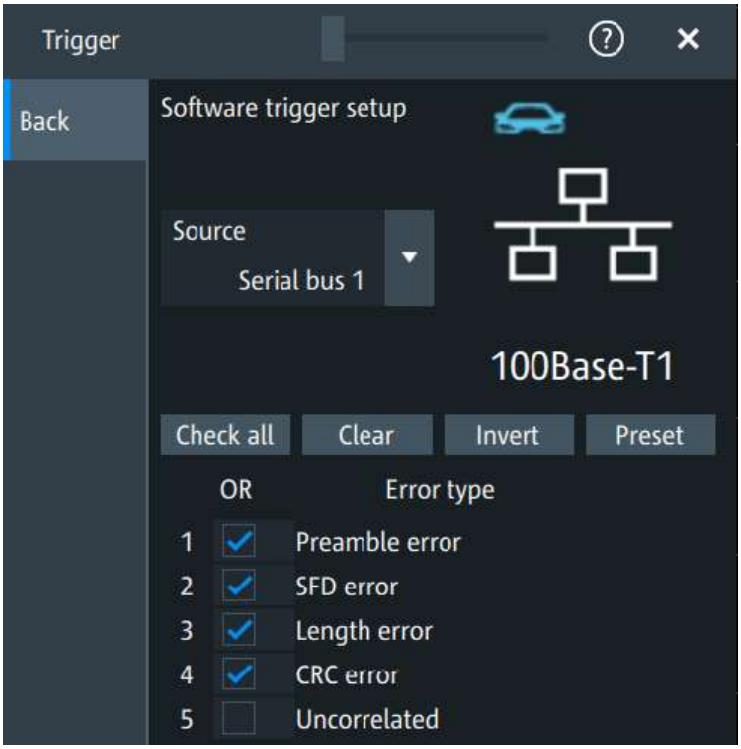

The following error types are available: "Preamble error", "SFD error", "Length error", "CRC error", "Uncorrelated".

Remote command:
TRIGger:SBSW:HBTO:ERENable on page 2240
TRIGger:SBSW:HBTO:ERRor<m>:ENABle on page 2240

14.21.5 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.21.6 100BASE-T1 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

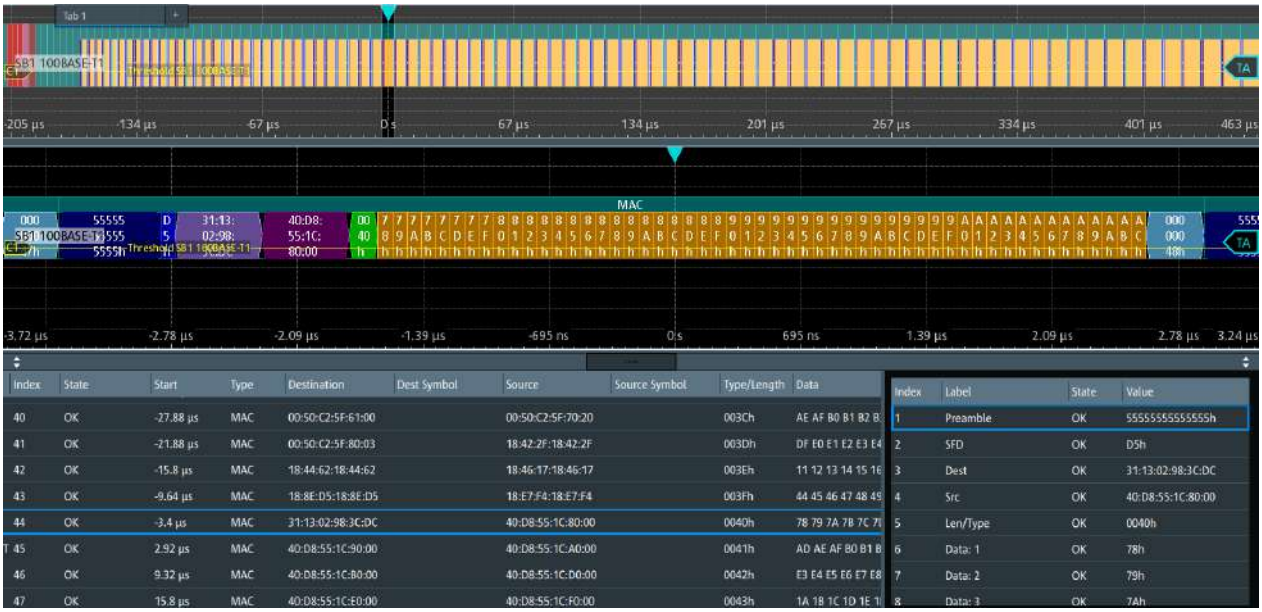


Figure 14-57: Decoded 100BASE-T1 signal

The decode results table contains information about all decoded frames.

Table 14-38: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)

Column	Description
Destination	Destination address of the frame
Dest Symbol	Symbolic name of the destination defined in the symbol list. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Source	Source address of the frame
Source Symbol	Symbolic name of the source defined in the symbol list. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Type/Length	The subprotocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the sub-protocol) or the word length.
Data	Value of the data. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-39: Content of the frame details table

Column	Description
Index	Index of the decoded field
Label	Name of the field
State	State of the field (OK / not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.22.5, "Decode results", on page 2241.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example 100BASE-T1 export file

```
Index,Start,Stop,State,Type,Destination,Dest Symbol,Source,Source Symbol,
  Type/Len,CRC,Bit rate
1,-0.214999,-0.214971,'OK','MAC','00:00:0C:12:14:65',,'00:01:13:AB:C1:9C',
  ,00E6h,00002507h,12500000
2,-0.21497,-0.214941,'EPRM','MAC','00:01:14:06:C0:00',,'00:04:07:C6:C0:00',
```

```
  ,0122h,00004A04h,12500000
3,-0.21494,-0.21491,'ESFD','MAC','00:13:02:98:3C:CC',,'00:0B:64:06:C0:12',
  ,015Eh,00006F01h,12500000
4,-0.214909,-0.214878,'EESD','MAC','00:1B:C5:06:C0:00',,'00:1B:C5:06:D0:00',
  ,019Ah,000093FEh,12500000
5,-0.214877,-0.214846,'ECRC','MAC','00:1B:C5:06:E0:00',,'00:1B:C5:06:F0:00',
  ,01D6h,0000B8FBh,12500000

Details frame 1
Index,Label,State,Value
1,'"Data: 1"','OK','"32h"'
2,'"Data: 2"','OK','"33h"'
3,'"Data: 3"','OK','"34h"'
4,'"Data: 4"','OK','"35h"'
5,'"Data: 5"','OK','"36h"'
6,'"Data: 6"','OK','"37h"'
7,'"Data: 7"','OK','"38h"'
8,'"Data: 8"','OK','"39h"'

Details frame 2
Index,Label,State,Value
1,'"Data: 1"','OK','"3Ah"'
2,'"Data: 2"','OK','"3Bh"'
3,'"Data: 3"','OK','"3Ch"'
4,'"Data: 4"','OK','"3Dh"'
5,'"Data: 5"','OK','"3Eh"'
6,'"Data: 6"','OK','"3Fh"'
7,'"Data: 7"','OK','"40h"'
8,'"Data: 8"','OK','"41h"'
9,'"Data: 9"','OK','"42h"'
```

14.22 1000BASE-T1 (automotive Ethernet, option R&S MXO5-K560)

1000BASE-T1 is a single-pair Ethernet-based protocol, specialized for the needs of the automotive industry. Main applications are in automotive networking, enabling advanced safety, comfort and infotainment features within the automobile. For specifications, refer to IEEE P802.3bp.

- 1000BASE-T1 basics 959
- 1000BASE-T1 configuration 959
- 1000BASE-T1 filter 961
- 1000BASE-T1 format configuration 964
- 1000BASE-T1 software trigger 970
- Measure 973
- 1000BASE-T1 decode results 974

14.22.1 1000BASE-T1 basics

The 1000BASE-T1 has the following objectives:

- Provides a PHY that supports full duplex operating at 1000 Mbps over a pair of unshielded sheathed twisted-pair cable or better cable.
- Achieves bit error rate (BER) of less than $1e^{-10}$.
- Support for up to at least 15 meters of cable length in the automotive link segment.


To achieve the above objectives, 1000BASE-T1 uses Physical Coding Sublayer (PCS) and Physical Medium Attachment (PMA) sublayer as follows:

- Adopts full duplex communication of 1000BASE-T1 and therefore echo cancellation on a single twisted-pair channel. This feature reduces cabling while preserving the Ethernet MAC compatibility
- Adopts Pulse Amplitude Modulation (PAM-3) encoding scheme with the following encoding techniques:
  - PAM-3 is transmitted at 750 MB data rate.
  - It uses 15-bit scrambler to improve the EMC performance.
  - Data is encoded in 80B/81B blocks.
  - 396 bits of Reed-Solomon forward error correction (FEC) parity is added to each group of 45 80B/81B blocks.
  - 9-bit OAM symbol is added, then 396 bits Reed-Solomon. Together, they shape a PHY frame of 4050 bits, or 450 forward error correction (FEC) symbols of 9 bits. FEC allows for correction of up to 22 FEC symbols per PHY frame.

14.22.2 1000BASE-T1 configuration

14.22.2.1 1000BASE-T1 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "1000BASE-T1" > "Setup".

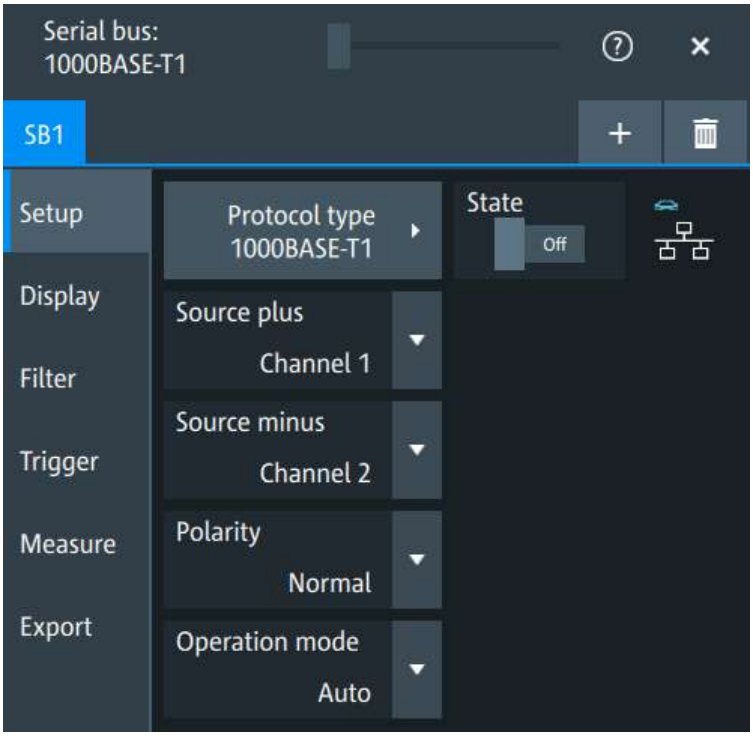

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

Source plus
Selects the D+ data source channel for the 1000BASE-T1 protocol. No digital channels can be used.

Remote command:
`SBUS<sb>:TBTO:SRCPlus` on page 2251

Source minus
Selects the D- data source channel for the 1000BASE-T1 protocol. No digital channels can be used.

Remote command:
`SBUS<sb>:TBTO:SRCMinus` on page 2251

Polarity
Selects the polarity of the data signal. You can select between "Normal" and "Inverted".

For "Normal" polarity, active high is defined as +1 V and active low is defined as -1 V.
For "Inverted" polarity, active high is defined as -1 V and active low is defined as +1 V.

Remote command:
SBUS<sb>:TBTO:POLarity on page 2250

Operation mode
Selects the desired direction of the full duplex signal for analysis You can choose between "Auto", "Main" and "Subordinate".

If "Auto" is selected, the decoder automatically detects the "Main" or "Subordinate" mode.

Remote command:
SBUS<sb>:TBTO:MODE on page 2250

14.22.2.2 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display:


"Off"	Disables the display of the decode layer.
"Ternary symbols"	Enables the display of the raw, ternary encoded symbols, consisting of the three states "-1", "0" and "+1".
"Scrambled bits"	Enables the display of the binary bits, decoded from the ternary symbols, but still in a scrambled (pre-descrambling) state.
"Descrambled bits"	Enables the display of the fully decoded and descrambled binary data, representing the original information being transmitted over the 10BASE-T1S link.
"Corrected RS-FEC"	Enables the display of the corrected Reed-Solomon frame error count, which is the number of errors corrected by the Reed-Solomon recovery algorithm.

Data format
See "Data format" on page 541.

Zoom coupling
See "Zoom coupling" on page 542.

14.22.3 1000BASE-T1 filter

Access: "Menu" > "Apps" > "Protocol" tab > "1000BASE-T1" > "Filter" tab

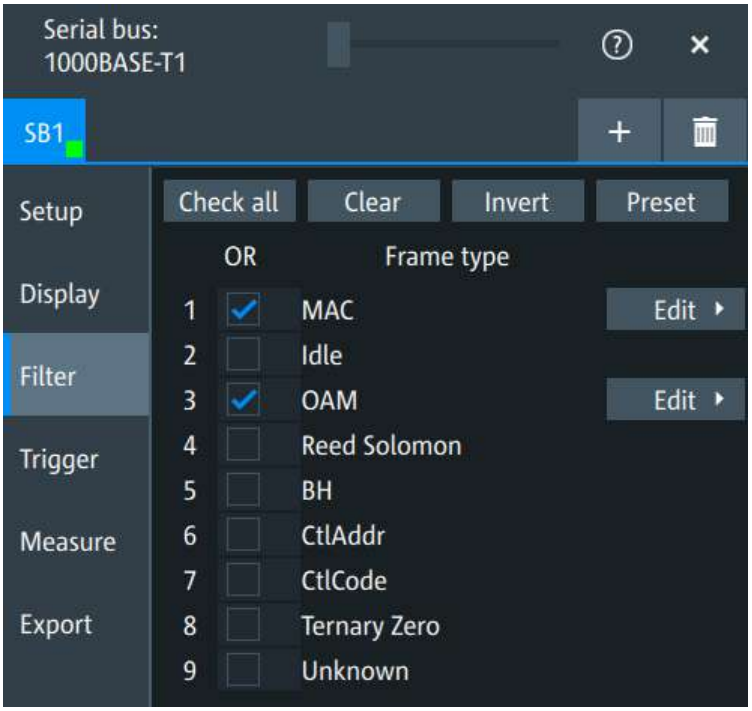

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:TBTO:FILTer:CHKall` on page 2252
`SBUS<sb>:TBTO:FILTer:CLR` on page 2253
`SBUS<sb>:TBTO:FILTer:INVert` on page 2253
`SBUS<sb>:TBTO:FILTer:RST` on page 2253


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are:
- "MAC"
- "Idle"
- "OAM"

- "Reed Solomon"
- "BH"
- "CtlAddr"
- "CtlCode"
- "Ternary Zero"
- "Unknown"

Edit
Opens a dialog to define the details of the selected frame.

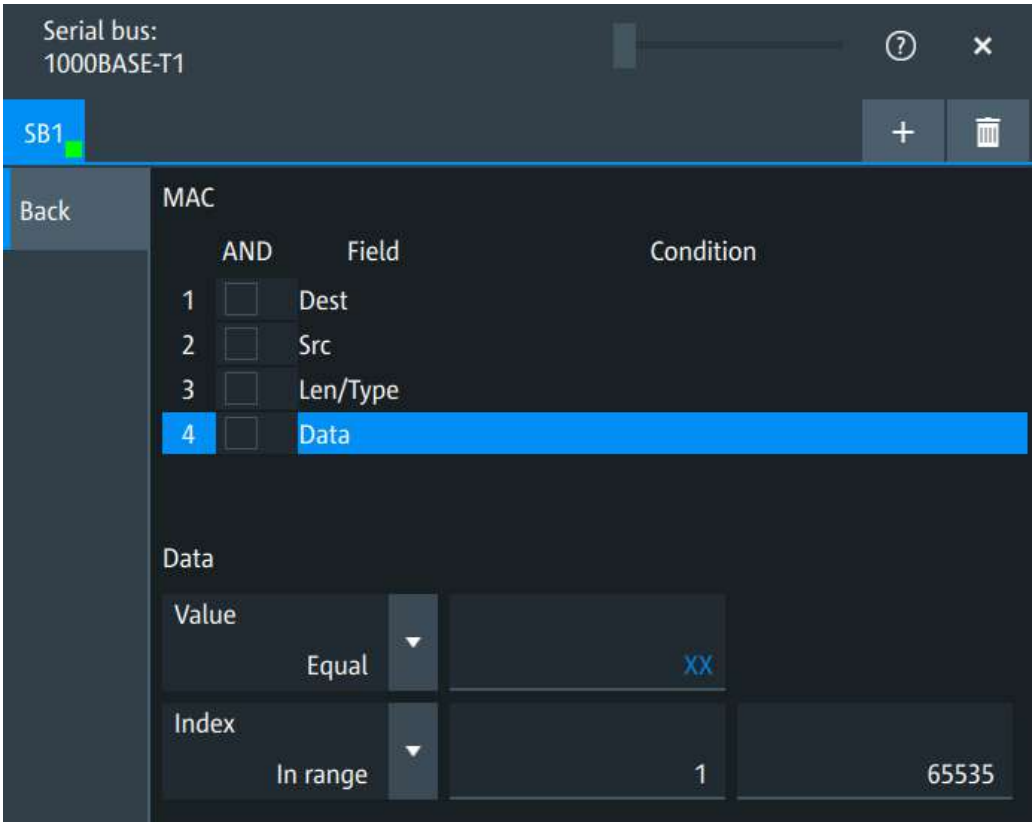

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Dest", "Src", "Len/Type", "Data" and "OAM".

Remote command:
`SBUS<sb>:TBTO:FILTer:FIENable` on page 2255
`SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2255

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:TBTO:FILTer:BIT` on page 2253
`SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2253

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:TBTO:FILTer:DMAX on page 2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2254
SBUS<sb>:TBTO:FILTer:DMIN on page 2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2254
SBUS<sb>:TBTO:FILTer:DOPerator on page 2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2254

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:TBTO:FILTer:IMAX on page 2256
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2256
SBUS<sb>:TBTO:FILTer:IMIN on page 2256
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2256
SBUS<sb>:TBTO:FILTer:IOPerator on page 2257
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2257

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:TBTO:FILTer:ERENable on page 2255
SBUS<sb>:TBTO:FILTer:ERRor<n>:ENABle on page 2255

14.22.4 1000BASE-T1 format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "1000BASE-T1" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:TBTO:FORMat:SELect on page 2258

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

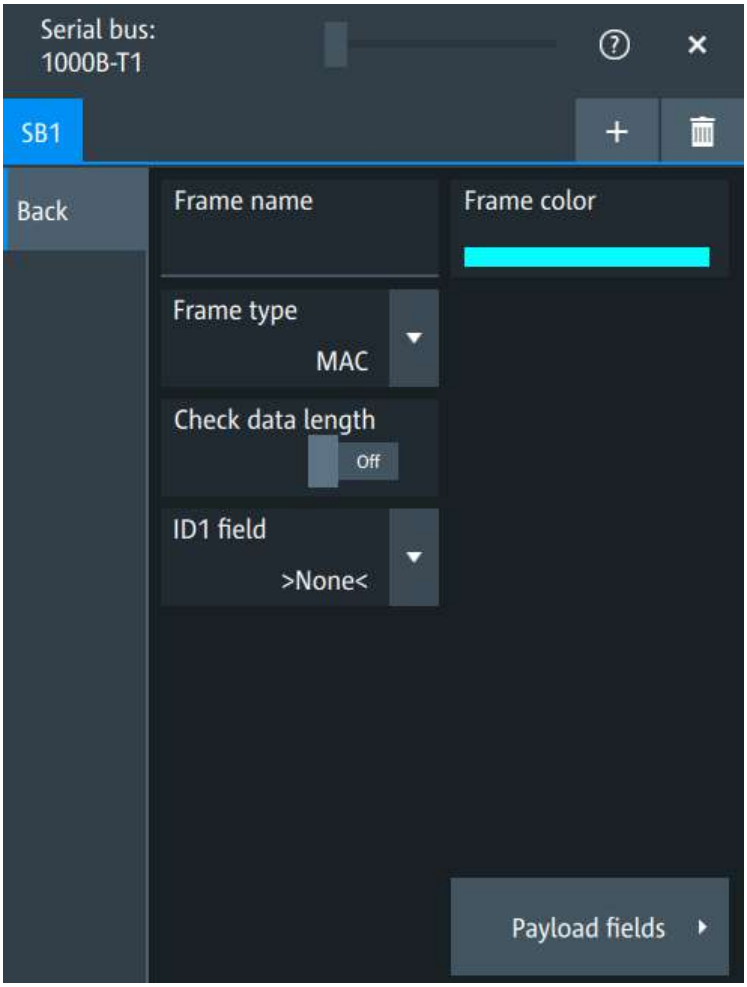

Remote command:
SBUS<sb>:TBTO:FORMat:ADDFrame on page 2258

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:TBTO:FORMat:CLR on page 2259
SBUS<sb>:TBTO:FORMat:FCOunt? on page 2259

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:TBTO:FORMat:LOAD on page 2258

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:TBTO:FORMat:SAVE on page 2259

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:NAME on page 2260

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor on page 2260

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:TYPE on page 2261

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENCheck on page 2262

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENValue on page 2262

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Field on page 2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Field on page 2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Field on page 2262


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Value on page 2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Value on page 2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Value on page 2263

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

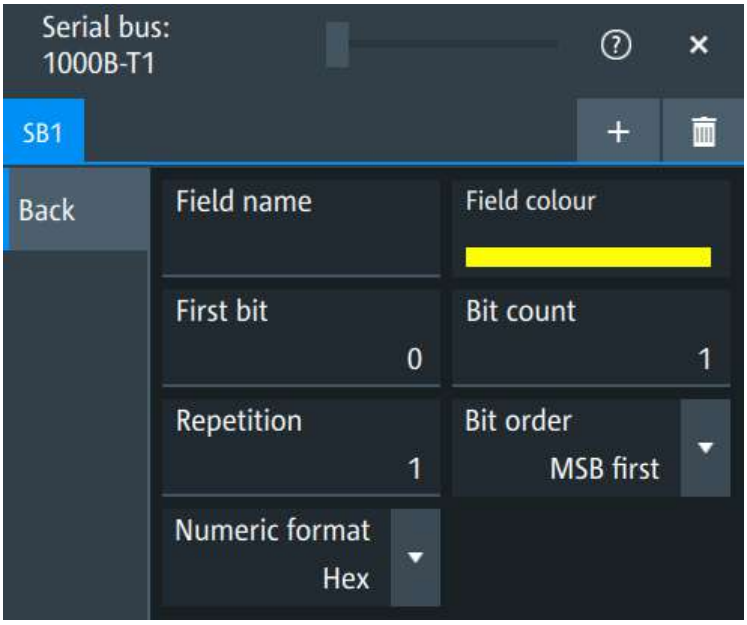

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ADDField on page 2259

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2263

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor on page 2260

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2264

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2264

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2264

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2265

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2265

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2266

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 2266

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2267

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2267

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2267
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2267


14.22.5 1000BASE-T1 software trigger

14.22.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.22.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "1000BASE-T1" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

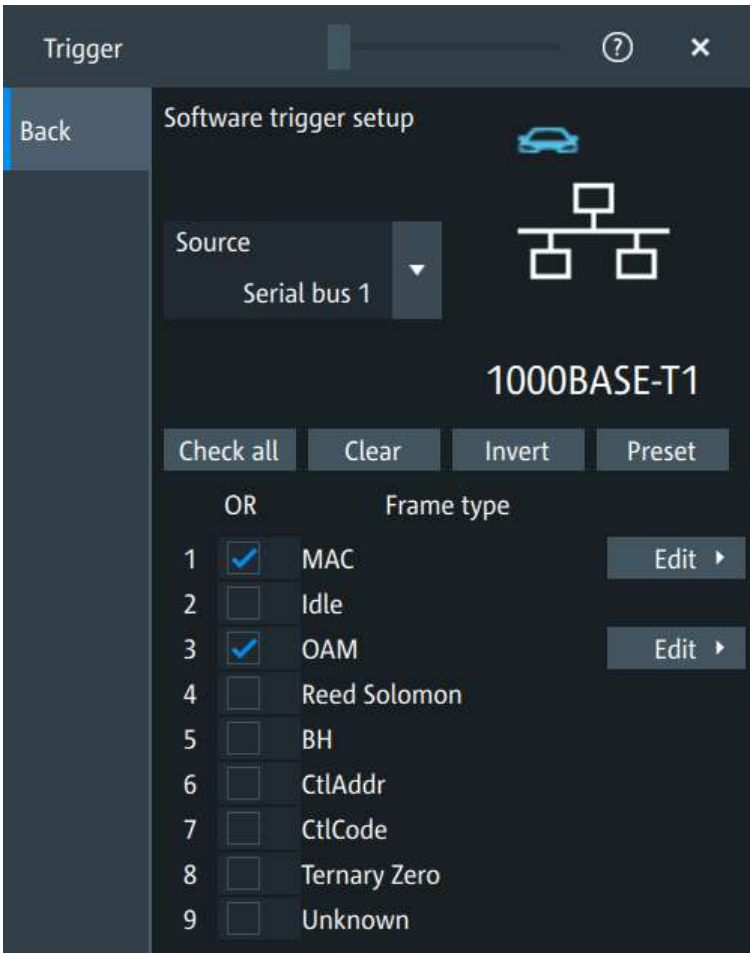

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:TBTO:CHKall` on page 2269
`TRIGger:SBSW:TBTO:CLR` on page 2269
`TRIGger:SBSW:TBTO:INVert` on page 2269
`TRIGger:SBSW:TBTO:RST` on page 2269


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "MAC", "Idle", "OAM", "Reed Solomon", "BH", "CtlAddr", "CtlCode", "Ternary Zero", "Unknown".

Remote command:
`TRIGger:SBSW:TBTO:FRENable` on page 2269
`TRIGger:SBSW:TBTO:FRAMe<fr>:ENABle` on page 2269

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

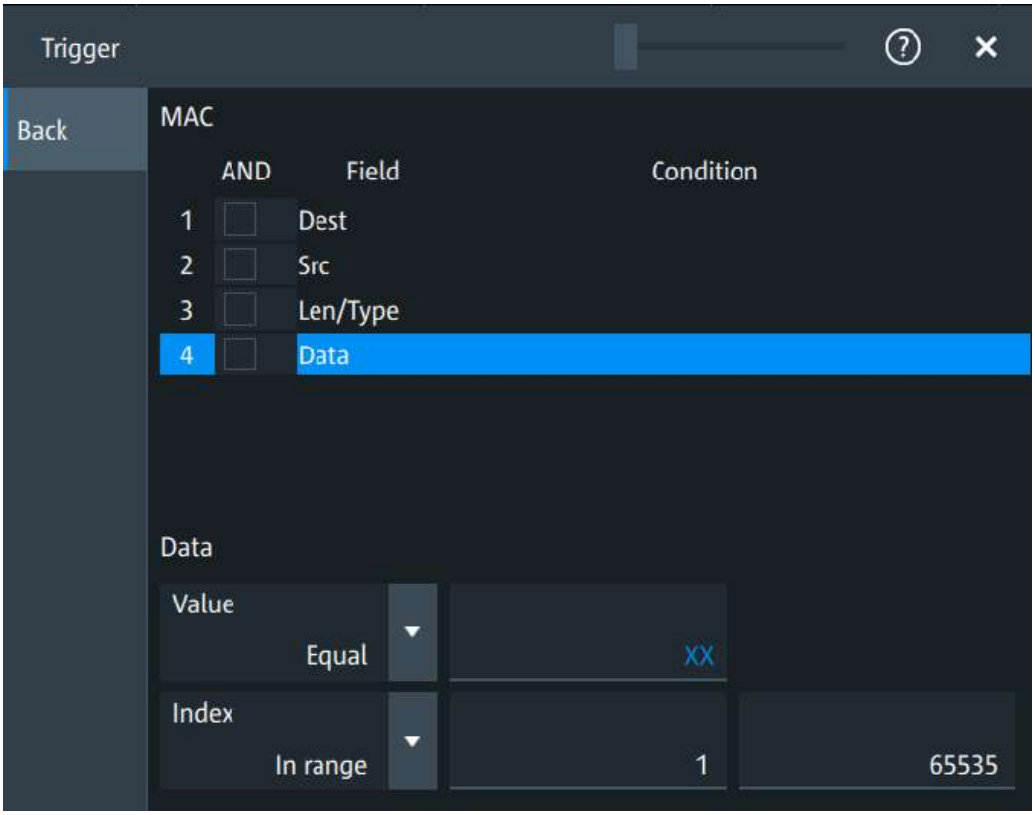

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Dest", "Src", "Len/Type", "Data", "OAM".

Remote command:
`TRIGger:SBSW:TBTO:FIENable` on page 2271
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:ENABle` on page 2271

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:TBTO:BIT` on page 2270
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:BIT` on page 2270


"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:TBTO:DMAX` on page 2270
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMAX` on page 2270
`TRIGger:SBSW:TBTO:DMIN` on page 2270
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMIN` on page 2270
`TRIGger:SBSW:TBTO:DOPerator` on page 2271
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator` on page 2271

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:TBTO:IMAX` on page 2272
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMAX` on page 2272
`TRIGger:SBSW:TBTO:IMIN` on page 2272
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMIN` on page 2272
`TRIGger:SBSW:TBTO:IOPerator` on page 2272
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator` on page 2272

Error type
Enables triggering on the selected error type.

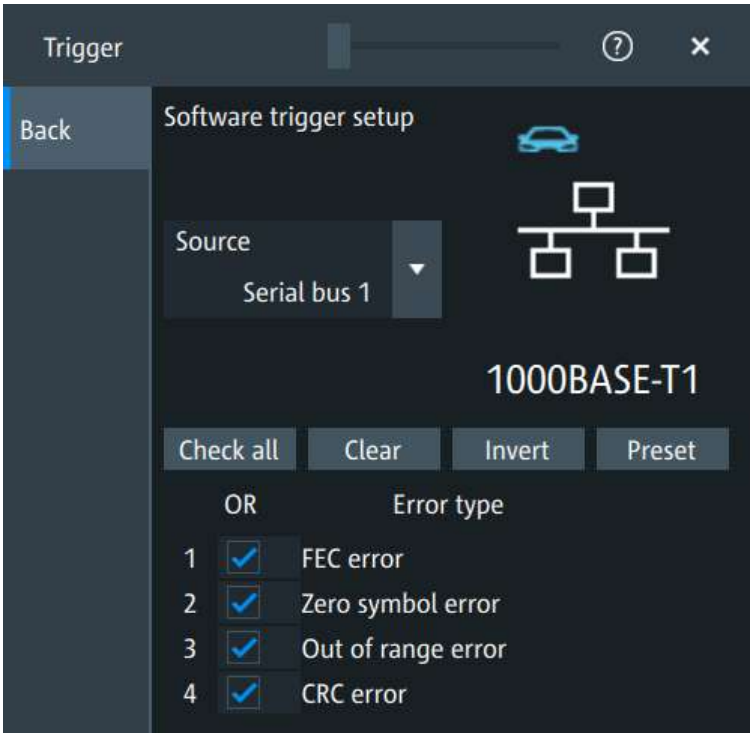

The following error types are available: "FEC error", "Zero symbol error", "Out of range error", "CRC error".

Remote command:
`TRIGger:SBSW:TBTO:ERENable` on page 2273
`TRIGger:SBSW:TBTO:ERRor<m>:ENABle` on page 2273

14.22.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.22.7 1000BASE-T1 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

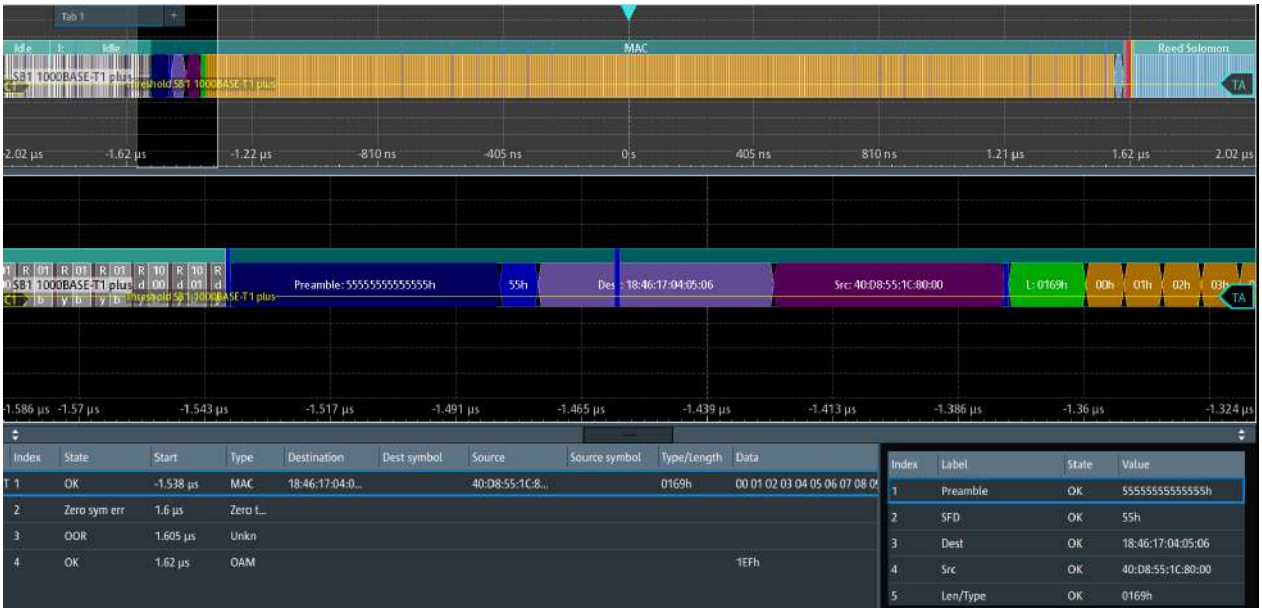


Figure 14-58: Decoded 1000BASE-T1 signal

The decode results table contains information about all decoded frames.

Table 14-40: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame
Dest symbol	Symbolic destination name. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Source	Source address of the frame
Source Symbol	Symbolic source name. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Type/Length	The subprotocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the subprotocol) or the word length.

Column	Description
Data	Value of the data. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-41: Content of the frame details table

Column	Description
Index	Index of the decoded field
Label	Name of the field
State	State of the field (OK / not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.23, "1000BASE-T1 (option R&S MXO5-K560)", on page 2250.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

Example 1000BASE-T1 export file

```
Index,Start,Stop,State,Type,Destination,Source,Type/Len,Data,CRC,Bit rate
1,-1.538e-06,1.596e-06,'OK','MAC','18:46:17:04:05:06','40:D8:55:1C:80:00',0169h,
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10 11 12 13 14 15 16 17 18 19 1A
1B 1C 1D 1E 1F 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30 31 32 33 34 35
36 37 38 39 3A 3B 3C 3D 3E 3F 40 41 42 43 44 45 46 47 48 49 4A 4B 4C 4D 4E 4F 50
51 52 53 54 55 56 57 58 59 5A 5B 5C 5D 5E 5F 60 61 62 63 64 65 66 67 68 69 6A 6B
6C 6D 6E 6F 70 71 72 73 74 75 76 77 78 79 7A 7B 7C 7D 7E 7F 80 81 82 83 84 85 86
87 88 89 8A 8B 8C 8D 8E 8F 90 91 92 93 94 95 96 97 98 99 9A 9B 9C 9D 9E 9F A0 A1
A2 A3 A4 A5 A6 A7 A8 A9 AA AB AC AD AE AF B0 B1 B2 B3 B4 B5 B6 B7 B8 B9 BA BB BC
BD BE BF C0 C1 C2 C3 C4 C5 C6 C7 C8 C9 CA CB CC CD CE CF D0 D1 D2 D3 D4 D5 D6 D7
D8 D9 DA DB DC DD DE DF E0 E1 E2 E3 E4 E5 E6 E7 E8 E9 EA EB EC ED EE EF F0 F1 F2
F3 F4 F5 F6 F7 F8 F9 FA FB FC FD FE FF 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D
0E 0F 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20 21 22 23 24 25 26 27 28
29 2A 2B 2C 2D 2E 2F 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F 40 41 42 43
44 45 46 47 48 49 4A 4B 4C 4D 4E 4F 50 51 52 53 54 55 56 57 58 59 5A 5B 5C 5D 5E
5F 60 61 62 63 64 65 66 67 68,AFFEAFFEh,987900000
2,1.6e-06,1.602e-06,'ERRZERO','ZEROTSYM',---,---,---,---,---,1500000000
```

```
3,1.605e-06,1.62e-06,'ERROOR','UNKN',---,---,---,---,---,1067000000
4,1.62e-06,1.629e-06,'OK','OAM',---,---,---,1EFh,---,1000000000

Details frame 1
Index,Label,State,Value
1,'"Data: 1"','OK','"00h"'
2,'"Data: 2"','OK','"01h"'
3,'"Data: 3"','OK','"02h"'
4,'"Data: 4"','OK','"03h"'
5,'"Data: 5"','OK','"04h"'
6,'"Data: 6"','OK','"05h"'
7,'"Data: 7"','OK','"06h"'
8,'"Data: 8"','OK','"07h"'
9,'"Data: 9"','OK','"08h"'
10,'"Data: 10"','OK','"09h"'
(...)
```

14.23 USB 1.1 (option R&S MXO5-K570)

R&S MXO5-K570 is a firmware option that enables the MXO 5 to analyze Universal Serial Bus (USB) protocols, by triggering and decoding them. The option is compatible with the standards USB 1.0, USB 1.1 and USB 2.0, but not with USB HSIC. It supports the data rates "Low Speed" (1.5 Mbit/s) and "Full Speed" (12 Mbit/s), both in USB 1.0 and USB 1.1, and "High Speed" (480 Mbit/s in USB 2.0).

For USB 2.0, refer to Section 14.24, "USB 2.0 (option R&S MXO5-K570)", on page 999.

- USB protocol basics....976
- USB 1.1 configuration....981
- USB 1.1 filter....985
- USB1.1 format configuration....988
- USB 1.1 trigger....994
- Measure....997
- USB 1.1 decode results....997

14.23.1 USB protocol basics

The USB protocol was developed, starting in 1996, by the nonprofit organization USB Implementers Forum, Inc. (USB-IF), formed by Compaq, Hewlett-Packard, Intel®, Lucent Technologies, Microsoft®, NEC, and Philips. The purpose was to provide a common "plug-and-play" solution to replace a multitude of interfaces for the communication between computers and devices. It allows even unskilled users to connect many devices to a PC easily. USB was originally used for devices that feature low signaling rates (up to 1.5 Mbit/s), especially human interface devices like mouse, joystick or keyboard. With the release of USB 2.0 in April 2000, devices such as printers, cameras and mass storage media were enabled to exchange data at faster rates (up to

480 Mbit/s). Also, the high-speed protocol HSIC (High Speed Inter Chip) is used for the communication between on-board devices.

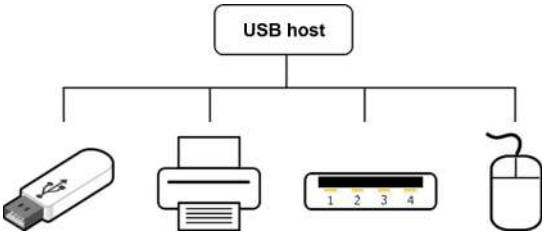


Figure 14-59: USB Topology: mass storage device, printer, USB hub, and mouse (human interface device) connected to a USB host

More information, including the USB specification, is available online within the web domain http://usb.org.

This section provides an overview of protocol characteristics, data transfer, packet structure, address and endpoint formats of USB and trigger possibilities.

USB characteristics

The main characteristics of USB are:

- Four-wire design: USB requires a shielded cable containing four wires. Two of them, called D+ and D-, form a twisted pair (for low speed, they can be non-twisted). These data lines transmit differential data signals and single-ended signal states, both referenced to a third wire: the GND or ground. The fourth wire is called VBUS (voltage bus). It carries a nominal 5 V supply, which can be used to power a device.
- Host-to-device communication: in USBs "speak-when-spoken-to" protocol, communication is always initiated by the host. Consequently, there is no direct communication between USB devices, apart from a few exceptions.
- The addressing scheme can distinguish a maximum of 127 connected devices, because a packet's address field length is limited to 7 bits. USB devices have up to 16 OUT endpoints (from host to device) and up to 16 IN endpoints (from device to host).
- USB transactions consist of two or three packets: token, data, and typically handshake
- Packet type: a packet identifier (PID) is sent as a first byte within the packet and specifies the different packet types.
- NRZI (Non Return to Zero Inverted): a zero (0) is encoded as a transition of the physical level, whereas a one (1) has no transition, thus it is represented by a steady level.




Figure 14-60: Example of an NRZI sequence

- Bit stuffing: a zero (0) is inserted after every 6 consecutive ones (111111). This insertion ensures sufficient transitions to keep the phase-locked loop (PLL) synchronized and locked onto the data stream.
- Little Endian scheme: both multiple bits and multiple bytes are transmitted with the least significant bit/byte (LSB) sent first, while the most significant bit/byte (MSB) is sent last.
- HSIC (high-speed inter-chip): an industry standard for USB chip-to-chip interconnection with a 2-signal (strobe, data) source synchronous serial interface, using 240 MHz DDR signaling to provide only high-speed (480 Mbit/s) data rate.

Table 14-42: Simplified symbolic representation from the USB standard

Bus State	Protocol	Levels
Differential **"1"**		D+ High, D- Low
Differential **"0"**		D+ Low, D- High
Data **"J"** State	Low speed	D+ Low, D- High (differential **"0"**)
	Full speed	D+ High, D- Low (differential **"1"**)
Data **"K"** State	Low speed	D+ High, D- Low (differential **"1"**)
	Full speed	D+ Low, D- High (differential **"0"**)

In the example in Table 14-42, "High" speed can be assumed to be like "Full" speed. For a complete overview of bus states and for an electrical definition of "High" and "Low" speed, refer to section 7 of the USB specification.

Data transfer

In contrast to a conventional bus, USB is more like a network protocol, using target addresses and endpoints. However, USB features a primary on the bus, called the host. It transmits packets of data to all devices or hubs connected to the host (or connected to a device or hub, which is in turn connected to the host). All connected devices receive each data packet, but disregard it unless it carries the correct address. In reply, only the addressed device (one at a time) can send data upstream to the host.

The USB architecture supports four different kinds of data transfer: control, bulk, interrupt or isochronous transfer. For example, a "bulk OUT" transfer (from host to device) can look like this:

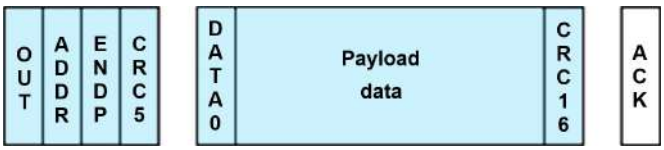


Figure 14-61: Example of a bulk OUT transfer. Blue: host speaks, white: device speaks

Packet structure

All packets must start with a **SYNC** field, also called **SOP** (start of packet), which indicates data transmission. It consists of "KJ" pairs, followed by one "KK". At low

speed and full speed (USB 1.x), it is 8 bits long, encoded as "KJKJKJKK". At high speed (USB 2.0 and HSIC), it is up to 32 bits long, encoded as "KJKJKJKJKJKJ...KK".

The SYNC field is used to synchronize the clock of the receiver with the clock of the transmitter. The final 2 bits ("KK") indicate where the PID field starts.

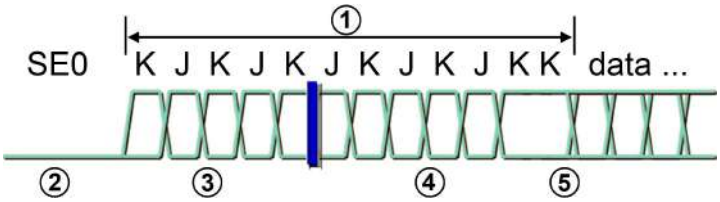


Figure 14-62: Start of a high-speed packet: after an SE0, the packet starts with a SYNC field (or SOP), followed by the data packet

SE0 = Single-ended zero, both D+ and D- wire are on low level
1 = High-speed SYNC field (or SOP), length up to 32 bits
2 = Receiver-squelched differential envelope, below 100 mV
3 = Differential envelope exceeds 150 mV, reception enabled with 4 symbol times
4 = Clock recovery must lock in time to detect the end of SYNC
5 = End of SYNC detected, receiver begins data recovery

After the SYNC (or SOP), USB data packets consist of (in this order):

- **PID** (packet identifier): specifies the type of packet. Examples are:
  - Token packets (IN, OUT, SETUP) are always the first packet in a USB transaction, containing the address of the device and its endpoint.
  - Token SOF packets (start of frame) are there to schedule a data transfer.
  - Handshake packets provide the status of the transaction.
  - Data packets are dedicated for the data transfer payload.
  - Various special packets provide special characteristics: for instance, SPLIT packets are used to communicate with low or full speed devices on a high-speed link.

  The PID's length is 8 bit, beginning (LSB) with the fields PID0, PID1, PID2 and PID3. Those 4 bits are repeated in PID4, PID5, PID6 and PID7, but in complementary form (for integrity checking). The PID is the only part of a packet not to be covered by the CRC (see below). Packets with invalid or non-supported PID fields are rejected. For valid PIDs, see Table 14-43.
- **ADDR** (address): contains the USB address of the target device. The length of this field is 7 bits, resulting in addresses 0 through 127 (with 0 reserved as the default address after reset).
- **ENDP** (endpoint): number of the endpoint. The length of this field is 4 bits, resulting in a maximum of 16 different endpoints.
- **Frame number**: this field with a length of 11 bits specifies the current frame number 0 to 2047. It is only sent in SOF packets.
- **Data field** (or "payload data"): the length of this field is not fixed, it can contain between 0 bytes and 1024 bytes.
- **CRC** (cyclic redundancy check): Finally, the CRC field ensures that the received data is correct. If an error is detected in the CRC calculation, the packet is rejected. Packets (in this case IN, OUT, SOF, SETUP, PING, SPLIT) are followed by a CRC5

(which is 5 bits long) over ADDR and ENDP (or the frame number field in the SOF packet). Data packets (DATA0, DATA1, MDATA, DATA2) are followed by a CRC16 (which is 16 bits long) over the data field. No CRC is used for handshake packets.

- **EOP** (end of package): the devices determine the length of the data field with the EOP signal, which indicates the end of a packet. In low and full speed, it consists of two SE0 bits, followed by a J state. For high speed, the current state is inverted and kept for 7-bit times, leading to a bit-stuff error that is used as an EOP indicator. This state corresponds to the bit sequence 01111111 ahead of NRZI. For the SOF token, the bit sequence 01111111111111111111111111111111111111111111 is transmitted (five NRZI bytes), which is used to recognize disconnects (since high-speed devices normally do not apply voltage to D+/D-). If no device is present, a higher voltage is measured. After that, the idle state (SE0) is occupied.

Table 14-43: Valid PIDs for different packet types

Packet type	Name	PID value	Meaning
Token	OUT	0xE1	Starts data transfer towards a device
	IN	0x69	Starts data transfer towards the host
	SOF	0xA5	Indicates start of frame
	SETUP	0x2D	Starts a setup transfer and sends information on this start to the device
Data	DATA0	0xC3	Data packet with data-toggle bit 0
	DATA1	0x4B	Data packet with data-toggle bit 1
	DATA2	0x87	Data packet for high speed IN isochronous transfers that require high bandwidth
	MDATA	0x0F	Data packet for high-speed OUT isochronous transfers that require high bandwidth
Handshake	ACK	0xD2	Acknowledgment of a packet received without error
	NAK	0x5A	Data not accepted, typically equivalent with some type of EAGAIN, meaning that the data needs to be resent later
	STALL	0x1E	A severe error has occurred, the target endpoint cannot be addressed until it is explicitly cleared again
	NYET	0x96	Only used in high-speed transfers, meaning ACK, but in the next interval no data can be received. Therefore the host must apply a PING first.
Special	PRE	0x3C	Starts a low speed transfer via a full speed bus
	ERR	0x3C	Indicates an error in an SPLIT transaction (using the same PID as PRE, however, these indications cannot be mistaken for each other)
	SPLIT	0x78	Starts an SPLIT transaction (thus: a low speed or full speed transfer via a high-speed bus)
	PING	0xB4	Used for monitoring high-speed data flow

- Token packets (IN, OUT, SETUP) and PING packets have the following format:

SYNC	PID	ADDR	ENDP	CRC5	EOP

- Start of frame packets (SOF) have the following format:

SYNC	PID	Frame number	CRC5	EOP

- Data packets have the following format:

SYNC	PID	Data	CRC16	EOP

- Handshake packets have the following format:

SYNC	PID	EOP

- SPLIT packets have the following format:

SYNC	PID	ADDR	SC	PORT	S	E	ET	CRC5	EOP

Trigger possibilities

Signals on the input channels can be triggered. The following trigger types are available:

- ANY Packet - Packet Sync: Triggering on the first rising slope after transmission of the packet Sync. Various lengths according to standard (in USB 2.0: 32 bit)
- Any token, OUT, IN, SOF, SETUP, AND-ing with user-defined PID check, address, endpoint, CRC5: For OUT, IN, SETUP, the endpoint and CRC5 follow from the bit order, therefore such patterns can be recognized.
- Data Selection: DATA0, DATA1, DATA2, MDATA, (for USB 1.x only: AND-ing with user-defined PID check, payload and CRC values)
- Handshake Packet Setup: Triggering on handshake packet, trigger with specific settings: ACK, NAK, NYET, STALL or ERR handshake packet
- Protocol Error: Triggering on PID/check error, CRC5 error, CRC16 (for USB 1.x only), frame length error (for USB 1.x only)
- Bus Event: Triggering on reset, resume, or suspend.

14.23.2 USB 1.1 configuration

If you need information on how to get started with configuring the USB 1.1 setup, see Section 14.23.2.2, "Configuring USB 1.1 signals", on page 983. Otherwise proceed with the configuration settings.

14.23.2.1 USB 1.1 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

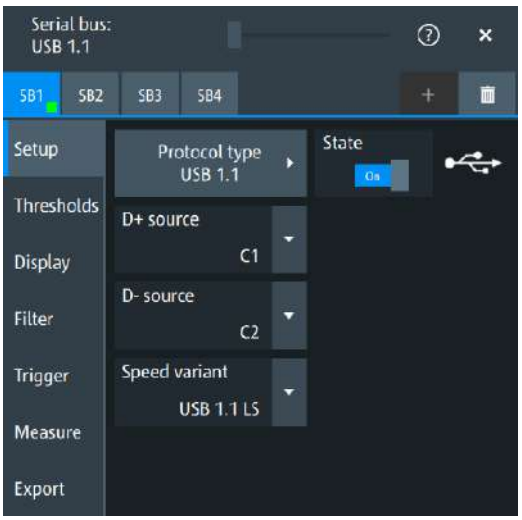


Figure 14-63: Serial bus protocol configuration dialog for USB 1.1 LS or FS

See also: Section 14.1.1, "Setup - general settings", on page 537.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

D+ source, D- source
Defines the source settings for the D+ and the D- data signals for USB 1.1 low speed (LS) or full speed (FS) protocols.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Remote command:
`SBUS<sb>:USBone:DPLus:SOURce` on page 2283
`SBUS<sb>:USBone:DMINus:SOURce` on page 2283

Speed variant
Selects the low or full speed variant of USB:

"USB 1.1 LS"
Selects the 1.5 Mbit/s low speed (LS) protocol variant of USB 1.1.

"USB 1.1 FS"

Selects the 12 Mbit/s full speed (FS) protocol variant of USB 1.1.

Note: Instead of selecting the speed variant in this "Setup" dialog, you can select it in the protocol selection table:



To access the protocol selection table, select "Menu" > "Apps" > "Protocol", or use the "Protocol type" button in the "Setup" dialog.

Remote command:
`SBUS<sb>:USBone:MODE` on page 2283

14.23.2.2 Configuring USB 1.1 signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.23.2.1, "USB 1.1 configuration settings", on page 981.

Serial Bus Setup

1. Tap the "+ Bus" activator in the bottom right of the screen.
2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select "Protocol type" = "USB 1.1 LS" or "USB 1.1 FS".
4. Select the waveform for the "D+ source" and "D- source" lines.
5. In the "Thresholds" tab, specify the logical thresholds: "D+ threshold" and "D- threshold".
   Specify also hysteresis settings: "D+ hysteresis" and "D- hysteresis".
6. In the "Display" tab, enable "Show decode table".

14.23.2.3 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Thresholds" tab

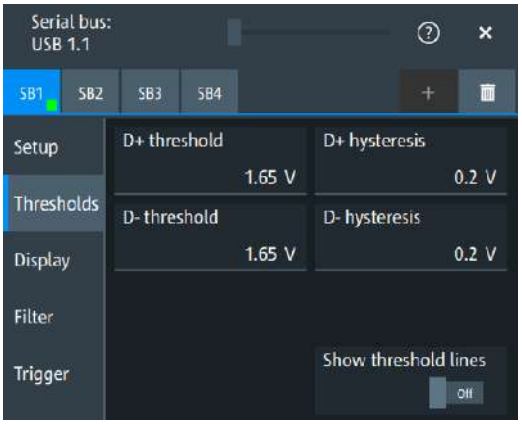


Figure 14-64: Serial bus threshold configuration dialog for USB 1.1

Threshold and hysteresis settings
Specifies the following values:

D+ threshold ← Threshold and hysteresis settings
Sets the threshold value for the digitization of the signal on the D+ data line.

For transformation of high or low levels into J or K states of the bus, refer to Table 14-42. The J and K states are transformed into bits according to the rules of non-return-to-zero inverted (NRZI) encoding.

Remote command:
`SBUS<sb>:USBone:DPLus:THReshold` on page 2283

D- threshold ← Threshold and hysteresis settings
Sets the threshold value for the digitization of the signal on the D- data line.

See also "D+ threshold" on page 984.

Remote command:
`SBUS<sb>:USBone:DMINus:THReshold` on page 2284

D+ hysteresis ← Threshold and hysteresis settings
Sets the hysteresis value for the D+ data line.

Remote command:
`SBUS<sb>:USBone:DPLus:HYSTeresis` on page 2284

D- hysteresis ← Threshold and hysteresis settings
Sets the hysteresis value for the D- data line.

Remote command:
`SBUS<sb>:USBone:DMINus:HYSTeresis` on page 2284

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1566

14.23.2.4 Display settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Display" tab

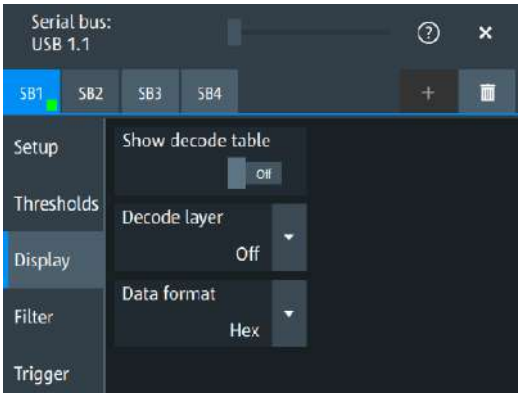


Figure 14-65: Serial bus display configuration dialog for USB 1.1

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 540.


Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"States"	"Enables the display of J and K states according to Table 14-42 in Section 14.23.1, "USB protocol basics", on page 976.
"Bits"	Enables the display of the raw, binary encoded symbols, consisting of the states "0" and "1".
"Words"	Enables the display of words, which are the numerical values of the individual fields that compose each packet, like PID, ADDR, DATA or CRC.

14.23.3 USB 1.1 filter

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Filter" tab

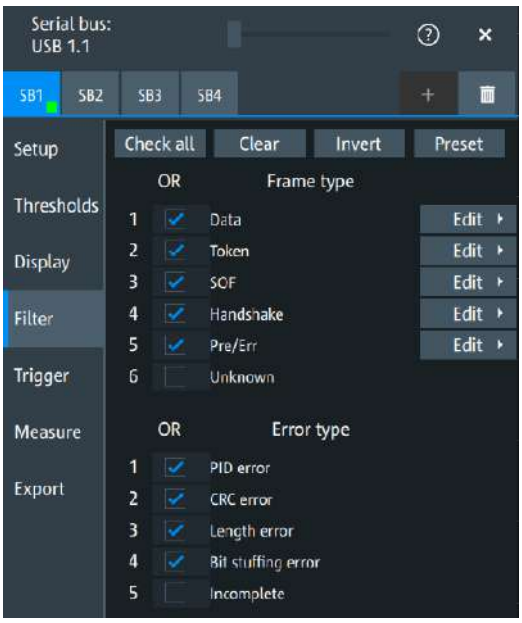

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:USBone:FILTer:CHKall` on page 2286
`SBUS<sb>:USBone:FILTer:CLR` on page 2286
`SBUS<sb>:USBone:FILTer:INVert` on page 2286
`SBUS<sb>:USBone:FILTer:RST` on page 2286


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "Data", "Token", "SOF", "Handshake", "Pre/Err" and "Unknown".

Remote command:
`SBUS<sb>:USBone:FILTer:FRENable` on page 2287
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:ENABle` on page 2287

Edit
Opens a dialog to define the details of the selected frame.

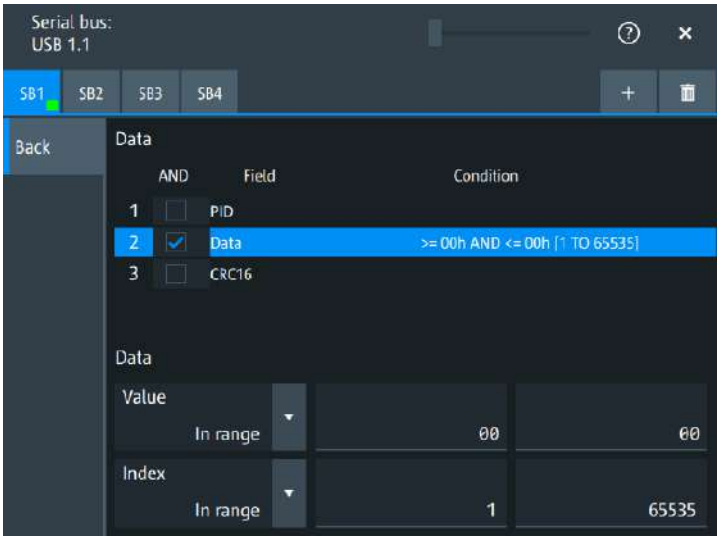

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "PID", "Data", "CRC5", "CRC16", "Addr", "Endp" and "Frame No.".

Remote command:
`SBUS<sb>:USBone:FILTer:FIENable` on page 2290
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2290

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:USBone:FILTer:BIT` on page 2290
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2290

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:USBone:FILTer:DMAX` on page 2287
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 2287
`SBUS<sb>:USBone:FILTer:DMIN` on page 2287
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 2287
`SBUS<sb>:USBone:FILTer:DOPerator` on page 2288
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 2288

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:USBone:FILTer:IMAX on page 2288
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2288
SBUS<sb>:USBone:FILTer:IMIN on page 2289
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2289
SBUS<sb>:USBone:FILTer:IOPerator on page 2289
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2289

Error type
Enables filtering on the selected error type.

The available error types are "PID error" (packet identifier), "CRC error" (cyclic redundancy check), "Length error", "Bit stuffing error" and "Incomplete".

Remote command:
SBUS<sb>:USBone:FILTer:ERENable on page 2288
SBUS<sb>:USBone:FILTer:ERRor<n>:ENABle on page 2288

14.23.4 USB1.1 format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:USBone:FORMat:SELect on page 2291

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

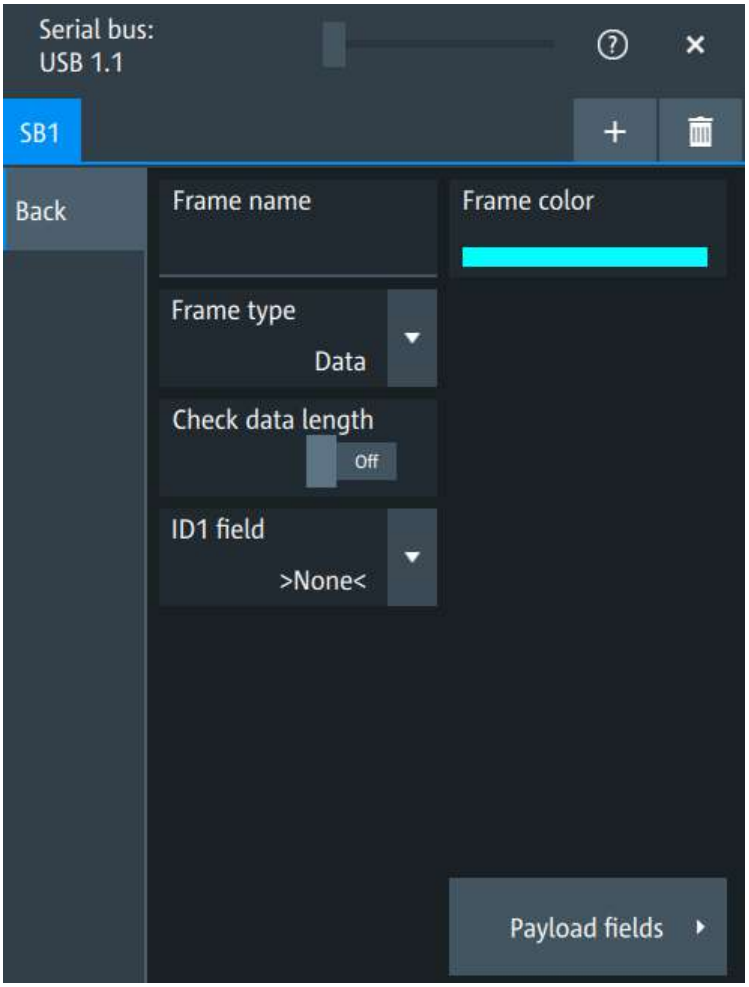

Remote command:
SBUS<sb>:USBone:FORMat:ADDFrame on page 2291

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:USBone:FORMat:CLR on page 2292
SBUS<sb>:USBone:FORMat:FCOunt? on page 2292

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:USBone:FORMat:LOAD on page 2292

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:USBone:FORMat:SAVE on page 2292

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:NAME on page 2293

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:COLor on page 2293

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:TYPE on page 2294

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENCheck on page 2294

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENValue on page 2294

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Field on page 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Field on page 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Field on page 2295


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Value on page 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Value on page 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Value on page 2295

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

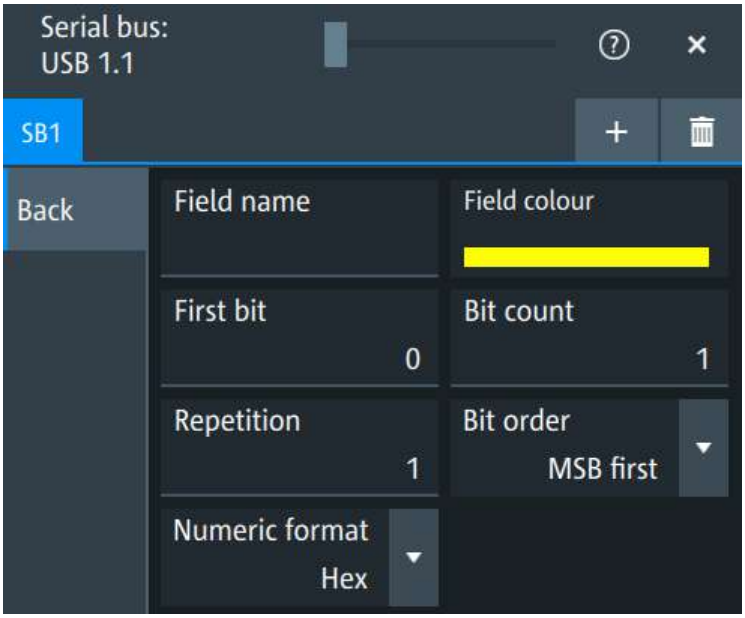

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ADDField on page 2293

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2295

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2296

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2296

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2296

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2297

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2297

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2298

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2298

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`
on page 2299

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`
on page 2299

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2299

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)

- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2300
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2300

14.23.5 USB 1.1 trigger

14.23.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.23.5.2 Software trigger setup

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Trigger" > "Setup Software Trigger" tab

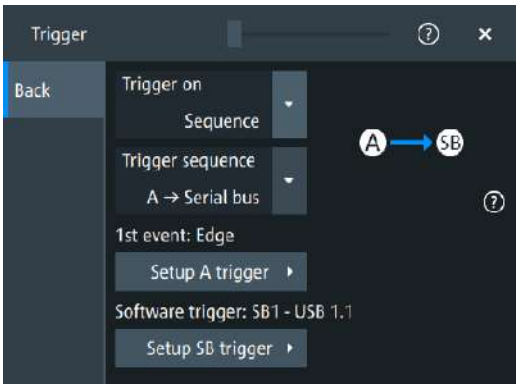


Figure 14-66: Serial bus Trigger setup dialog for USB 1.1

Make sure that:

- In the "Trigger" tab (Figure 14-63):
  - The correct protocol type and speed variant are selected.
  - The correct channels are assigned to the corresponding data source of the serial bus.
- In the "Trigger" tab (Figure 14-66):
  - The "Trigger on" = "Sequence"
  - The "Trigger sequence" = "A → Serial bus"
  - The 1st event is set according to your requirements.
- In the "Setup SB Trigger" tab (Figure 14-67):
  - The trigger "Source" is set to the correct serial bus, for example "Serial bus 1".

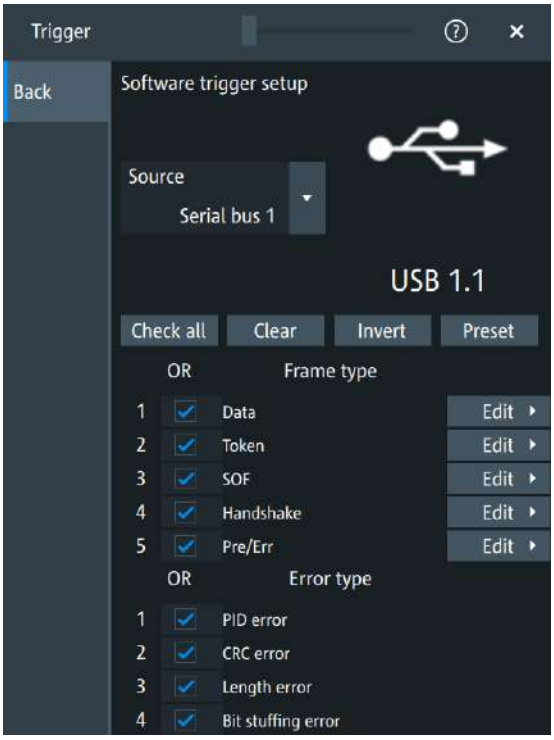


Figure 14-67: Serial bus Software trigger setup dialog for USB 1.1

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:USBone:CHKall` on page 2301
`TRIGger:SBSW:USBone:CLR` on page 2301
`TRIGger:SBSW:USBone:INVert` on page 2301
`TRIGger:SBSW:USBone:RST` on page 2302


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Data", "Token", "SOF", "Handshake" and "Pre/Err".

Remote command:
TRIGger:SBSW:USBone:FRENable on page 2302
TRIGger:SBSW:USBone:FRAMe<fr>:ENABle on page 2302

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

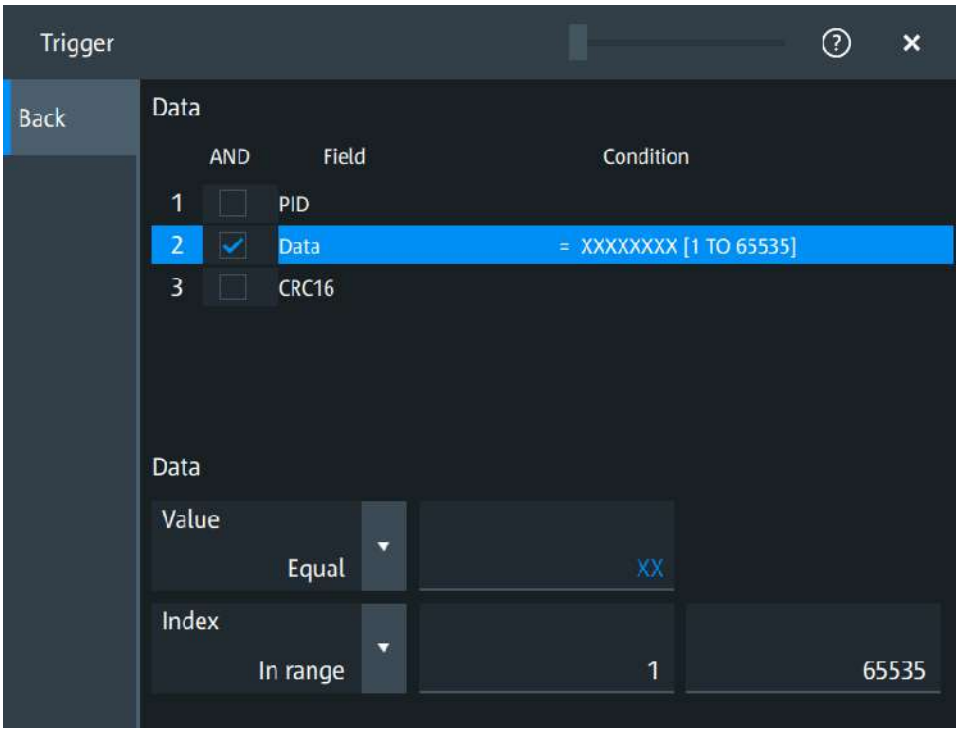

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "PID", "Data", "CRC5", "CRC16", "Addr", "Endp" and "Frame No.".

Remote command:
TRIGger:SBSW:USBone:FIENable on page 2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:ENABle on page 2304

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:USBone:BIT on page 2302
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:BIT on page 2302

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:USBone:DMAX on page 2302
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMAX on page 2302
TRIGger:SBSW:USBone:DMIN on page 2303
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMIN on page 2303
TRIGger:SBSW:USBone:DOPerator on page 2303
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator on page 2303

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:USBone:IMAX on page 2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMAX on page 2304
TRIGger:SBSW:USBone:IMIN on page 2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMIN on page 2304
TRIGger:SBSW:USBone:IOPerator on page 2305
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator on page 2305

Error type
Enables triggering on the selected error type.

The available error types are "PID error" (packet identifier), "CRC error" (cyclic redundancy check), "Length error" and "Bit stuffing error".

Remote command:
TRIGger:SBSW:USBone:ERENable on page 2305
TRIGger:SBSW:USBone:ERRor<m>:ENABle on page 2305

14.23.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.23.7 USB 1.1 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

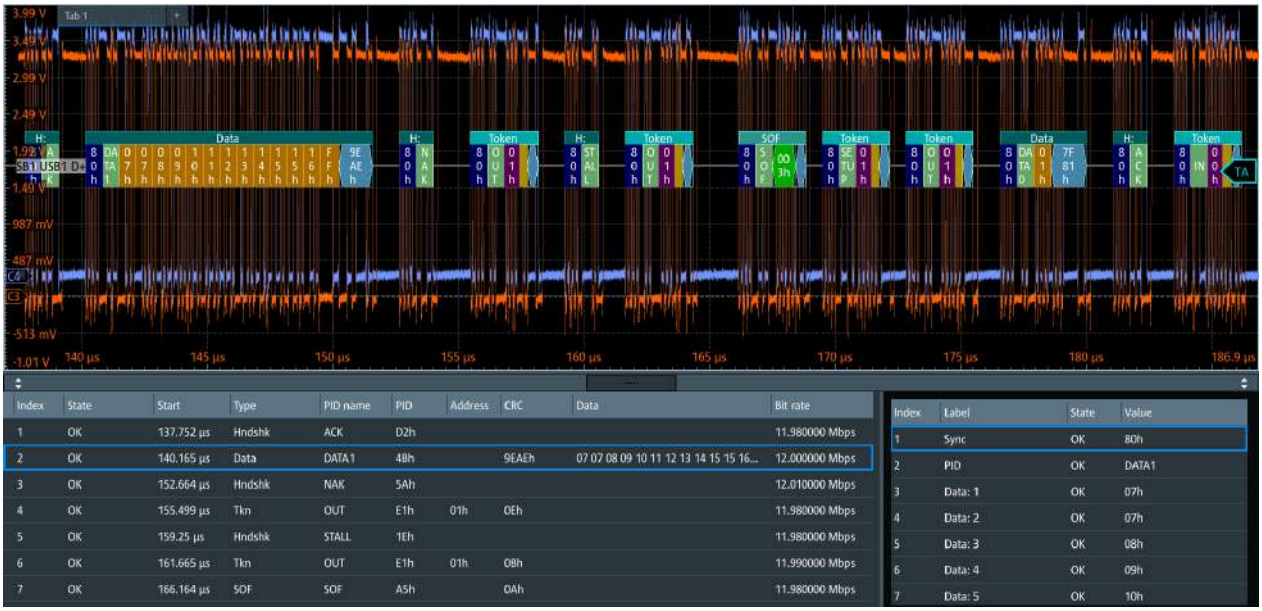


Figure 14-68: Example of a decoded USB 1.1 signal

The decode results table contains information about all decoded frames.

Table 14-44: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Type	Type of the frame
PID name	Name of the packet identifier
PID	Value of the packet identifier
Address	Address of the frame
CRC	CRC value (cyclic redundancy check)
Data	Payload data bytes
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-45: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field

Column	Description
State	State of the field (OK / Not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.24.5, "Decode results", on page 2306.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

14.24 USB 2.0 (option R&S MXO5-K570)

R&S MXO5-K570 is a firmware option that enables the MXO 5 to analyze Universal Serial Bus (USB) protocols, by triggering and decoding them. The option is compatible with the standards USB 1.0, USB 1.1 and USB 2.0, but not with USB HSIC (High-Speed Inter-Chip, 480 Mbit/s). It supports the data rates "Low Speed" (1.5 Mbit/s) and "Full Speed" (12 Mbit/s), both in USB 1.0 and USB 1.1, and "High Speed" (480 Mbit/s in USB 2.0).

For USB 1.1, refer to Section 14.23, "USB 1.1 (option R&S MXO5-K570)", on page 976.

- About the USB protocol....999
- USB 2.0 configuration....1000
- USB 2.0 filter....1003
- USB 2.0 format configuration....1006
- USB 2.0 trigger....1011
- Measure....1015
- USB 2.0 decode results....1015

14.24.1 About the USB protocol

Refer to Section 14.23.1, "USB protocol basics", on page 976 in the USB 1.1 (option R&S MXO5-K570) section.

14.24.2 USB 2.0 configuration

If you need information on how to get started with configuring the USB 2.0 setup, see Section 14.24.2.2, "Configuring USB 2.0 signals", on page 1001. Otherwise proceed with the configuration settings.

14.24.2.1 USB 2.0 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

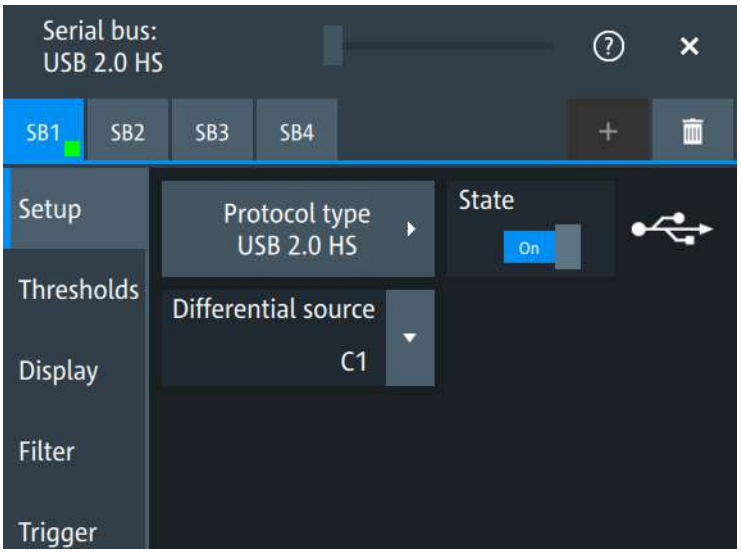


Figure 14-69: Serial bus protocol configuration dialog for USB 2.0 HS

See also: Section 14.1.1, "Setup - general settings", on page 537.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1564

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1564

Differential source
Selects the differential signal source of the data line for the USB 2.0 high speed (HS) protocol.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Remote command:
`SBUS<sb>:USBHspeed:SOURce` on page 2314

14.24.2.2 Configuring USB 2.0 signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.24.2.1, "USB 2.0 configuration settings", on page 1000.

Serial Bus Setup

1. Tap the "+ Bus" activator in the bottom right of the screen.
2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "USB 2.0 HS".
4. Select the waveform for the "Differential" source.
5. In the "Thresholds" tab, specify the upper and lower logical thresholds and the hysteresis.
6. In the "Display" tab, enable "Show decode table".

14.24.2.3 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Thresholds" tab



Figure 14-70: Serial bus threshold configuration dialog for USB 2.0

Upper threshold
Sets the upper threshold value for the digitization of the data line's differential signal.

For transformation of high or low levels into bus states, refer to Table 14-42. The bus states are transformed into bits according to the rules of non-return-to-zero inverted (NRZI) encoding.

For transformation of high or low levels into J or K states of the bus, refer to Table 14-42. The J and K states are transformed to bits according to the rules of non-return-to-zero inverted (NRZI) encoding.

Remote command:
`SBUS<sb>:USBHspeed:THReshold:UPPer` on page 2314

Lower threshold
Sets the lower threshold value for the digitization of the data line's differential signal.

See also "Upper threshold" on page 1001.

Remote command:
`SBUS<sb>:USBHspeed:THReshold:LOWer` on page 2314

Hysteresis
Sets the hysteresis value for the data line's differential signal.

Remote command:
`SBUS<sb>:USBHspeed:THReshold:HYSTeresis` on page 2315

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1566

14.24.2.4 Display settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Display" tab

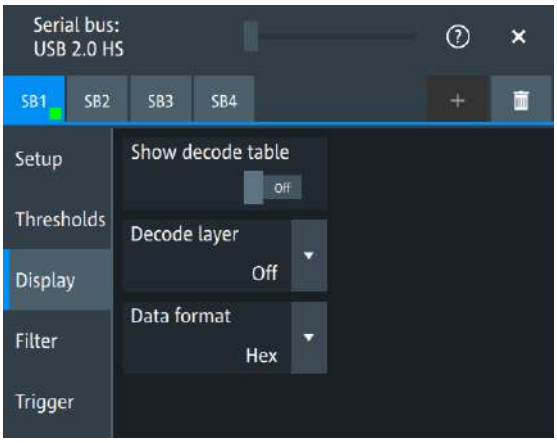


Figure 14-71: Serial bus display configuration dialog for USB 2.0


Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"States"	"Enables the display of J and K states according to Table 14-42 in Section 14.23.1, "USB protocol basics", on page 976.
"Bits"	Enables the display of the raw, binary encoded symbols, consisting of the states "0" and "1".
"Words"	Enables the display of words, which are the numerical values of the individual fields that compose each packet, like PID, ADDR, DATA or CRC.

14.24.3 USB 2.0 filter

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Filter" tab

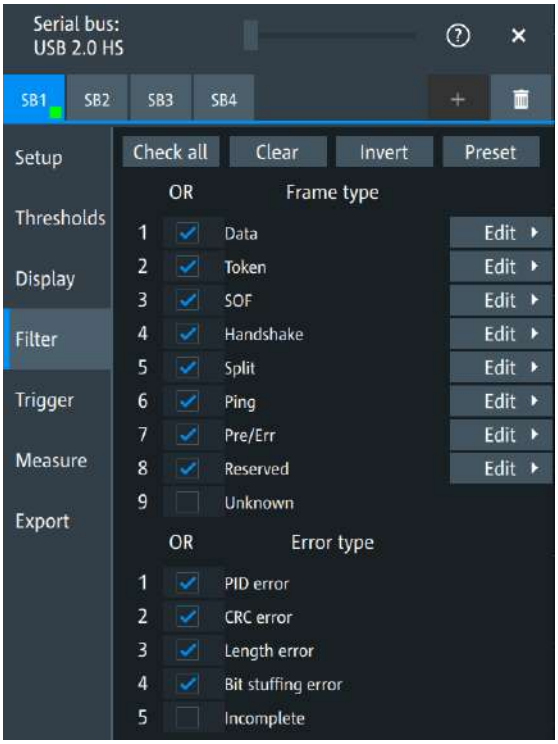

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:USBHspeed:FILTer:CHKall` on page 2316
`SBUS<sb>:USBHspeed:FILTer:CLR` on page 2316
`SBUS<sb>:USBHspeed:FILTer:INVert` on page 2317
`SBUS<sb>:USBHspeed:FILTer:RST` on page 2317


Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "Data", "Token", "SOF", "Handshake", "Split", "Ping", "Pre/Err", "Reserved" and "Unknown".

Remote command:
`SBUS<sb>:USBHspeed:FILTer:FRENable` on page 2317
`SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:ENABle` on page 2317

Edit
Opens a dialog to define the details of the selected frame.

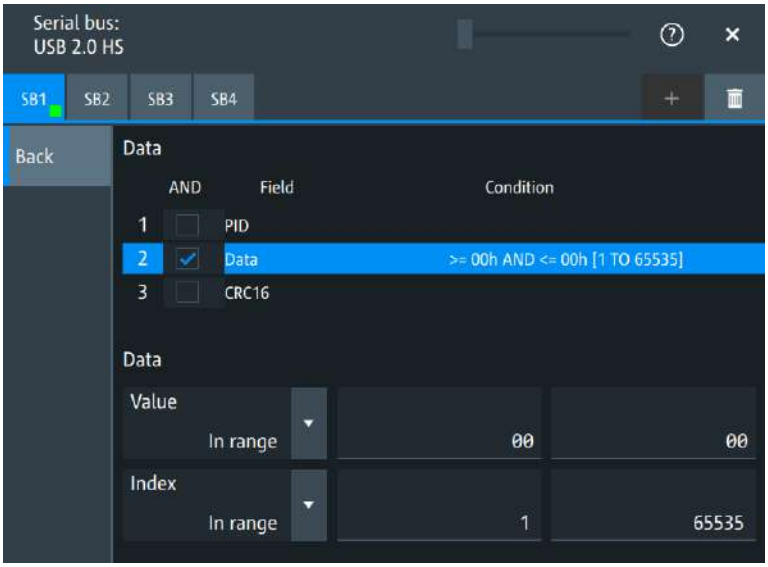

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "PID", "Data", "CRC5", "CRC16", "Addr", "Endp", "SC", "Port", "S", "E/U", "ET" and "Frame No.".

Remote command:
SBUS<sb>:USBHspeed:FILTer:FIENable on page 2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2320

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:USBHspeed:FILTer:BIT on page 2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2320

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:USBHspeed:FILTer:DMAX on page 2317
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2317
SBUS<sb>:USBHspeed:FILTer:DMIN on page 2318
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2318
SBUS<sb>:USBHspeed:FILTer:DOPerator on page 2318
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2318

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:USBHspeed:FILTer:IMAX on page 2319
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2319
SBUS<sb>:USBHspeed:FILTer:IMIN on page 2319
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2319
SBUS<sb>:USBHspeed:FILTer:IOPerator on page 2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2320

Error type
Enables filtering on the selected error type.

The available error types are "PID error" (packet identifier), "CRC error" (cyclic redundancy check), "Length error", "Bit stuffing error" and "Incomplete".

Remote command:
SBUS<sb>:USBHspeed:FILTer:ERENable on page 2319
SBUS<sb>:USBHspeed:FILTer:ERRor<n>:ENABle on page 2319

14.24.4 USB 2.0 format configuration


Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Format".

See Section 14.1.5, "Format", on page 544.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:USBHspeed:FORMat:SELect` on page 2322

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

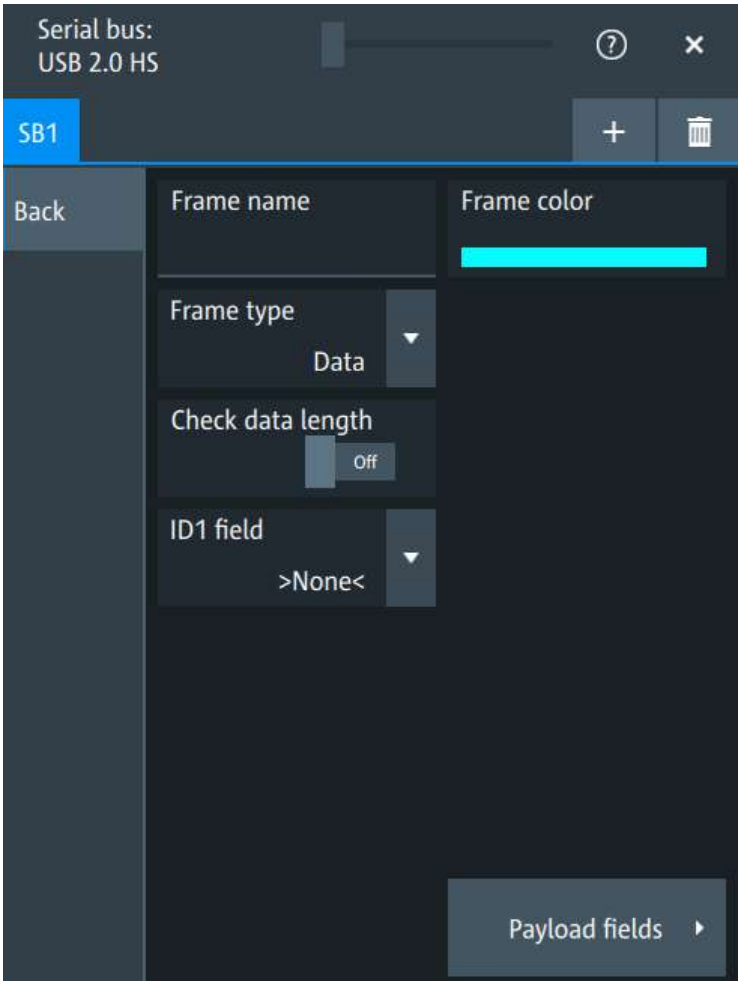

Remote command:
`SBUS<sb>:USBHspeed:FORMat:ADDFrame` on page 2322

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:USBHspeed:FORMat:CLR on page 2323
SBUS<sb>:USBHspeed:FORMat:FCOunt? on page 2323

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:USBHspeed:FORMat:LOAD on page 2322

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:USBHspeed:FORMat:SAVE on page 2322

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:NAME on page 2324

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:COLor on page 2324

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:TYPE on page 2324

Check data length
Enables checking of the data length for the currently selected frame format. If enabled, the decoder compares the frame against the specified data length.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENCheck on page 2325

Data length
Specifies the data length for the currently selected frame format. The value is used only if "Check data length" is enabled.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENValue on page 2326

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Field on page 2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Field on page 2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Field on page 2326


ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Value on page 2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Value on page 2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Value on page 2326

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

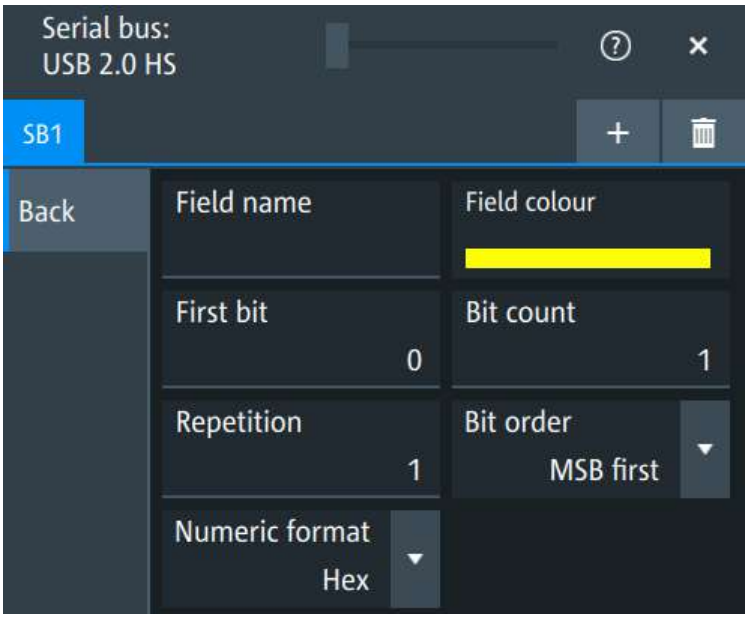

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ADDField on page 2323

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2327

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2327

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2327

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2328

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:REPetition
on page 2328

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2328

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 559.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2329

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2329

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2330

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2330

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2331

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARA` on page 2331
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARB` on page 2331

14.24.5 USB 2.0 trigger

14.24.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.24.5.2 Software trigger setup

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Trigger" > "Setup Software Trigger" tab

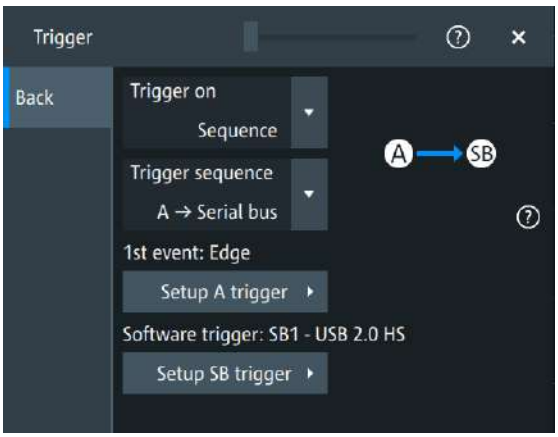


Figure 14-72: Serial bus Trigger setup dialog for USB 2.0

Make sure that:

- In the "Trigger" tab (Figure 14-69):
  - The correct protocol type is selected.
  - The correct channels are assigned to the corresponding data source of the serial bus.
- In the "Trigger" tab (Figure 14-72):
  - The "Trigger on" = "Sequence"
  - The "Trigger sequence" = "A → Serial bus"
  - The 1st event is set according to your requirements.
- In the "Setup SB Trigger" tab (Figure 14-73):
  - The trigger "Source" is set to the correct serial bus, for example "Serial bus 1".

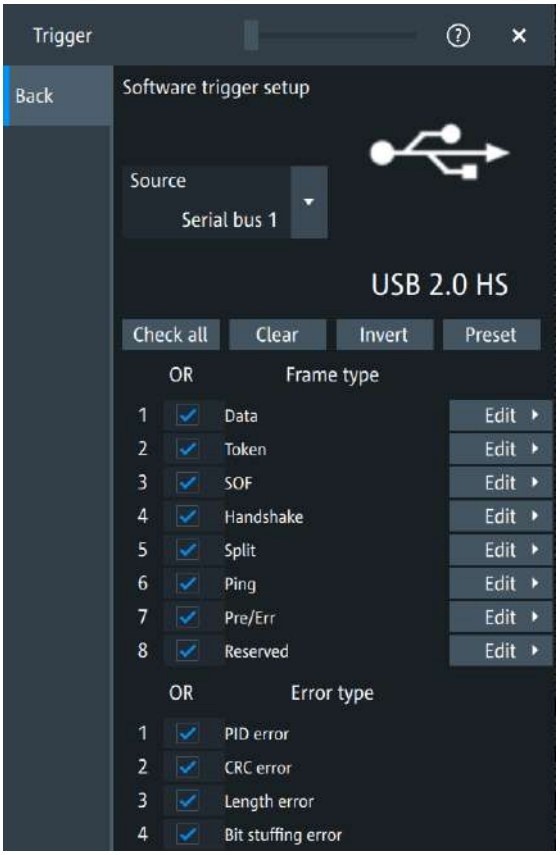


Figure 14-73: Serial bus Software trigger setup dialog for USB 2.0

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:USBHspeed:CHKall` on page 2332
`TRIGger:SBSW:USBHspeed:CLR` on page 2333
`TRIGger:SBSW:USBHspeed:INVert` on page 2333
`TRIGger:SBSW:USBHspeed:RST` on page 2333


Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Data", "Token", "SOF", "Handshake", "Split", "Ping", "Pre/Err" and "Reserved".

Remote command:
`TRIGger:SBSW:USBHspeed:FRENable` on page 2333
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:ENABle` on page 2333

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

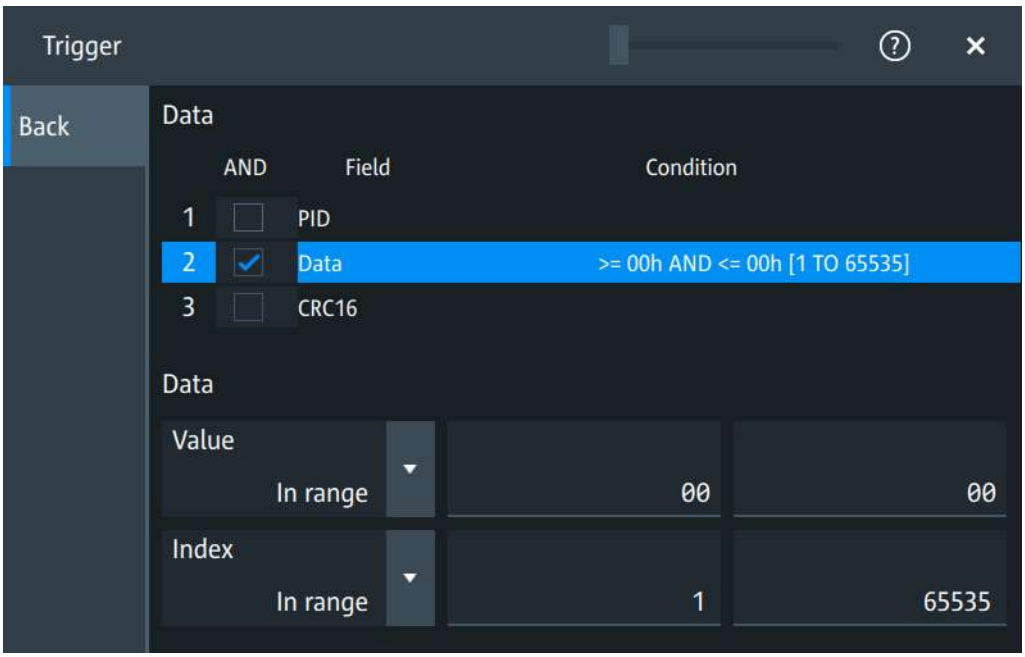

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "PID", "Data", "CRC5", "CRC16", "Addr", "Endp", "SC", "Port", "S", "E/U", "ET" and "Frame No.".

Remote command:
`TRIGger:SBSW:USBHspeed:FIENable` on page 2335
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:ENABle` on page 2335

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:USBHspeed:BIT` on page 2333
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:BIT` on page 2333

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:USBHspeed:DMAX on page 2334
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMAX on page 2334
TRIGger:SBSW:USBHspeed:DMIN on page 2334
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMIN on page 2334
TRIGger:SBSW:USBHspeed:DOPerator on page 2335
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator on page 2335

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:USBHspeed:IMAX on page 2335
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMAX on page 2335
TRIGger:SBSW:USBHspeed:IMIN on page 2336
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMIN on page 2336
TRIGger:SBSW:USBHspeed:IOPerator on page 2336
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IOPerator on page 2336

Error type
Enables triggering on the selected error type.

The available error types are "PID error" (packet identifier), "CRC error" (cyclic redundancy check), "Length error" and "Bit stuffing error".

Remote command:
TRIGger:SBSW:USBHspeed:ERENable on page 2336
TRIGger:SBSW:USBHspeed:ERRor<m>:ENABle on page 2336

14.24.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 320.

14.24.7 USB 2.0 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

Decode results table

The "Decode results" table contains information about all decoded frames.

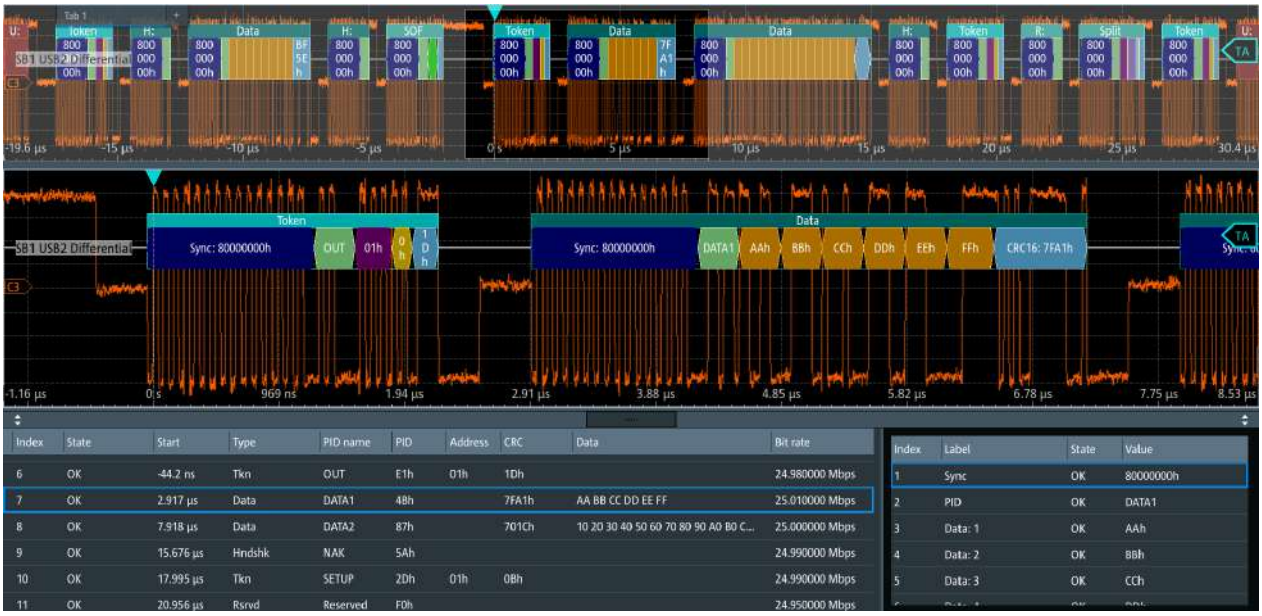


Figure 14-74: Example of a decoded USB 2.0 signal

The decode results table contains information about all decoded frames.

Table 14-46: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Type	Type of the frame
PID name	Name of the packet identifier
PID	Value of the packet identifier
Address	Address of the frame
CRC	CRC value (cyclic redundancy check)
Data	Payload data bytes
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-47: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field (OK / Not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1565

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.25, "USB 2.0 (option R&S MXO5-K570)", on page 2313.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 558.

15 Logic analysis on digital channels

The Mixed Signal Option R&S MXO5-B1 adds logic analyzer functions to the classical oscilloscope functions. Using the MSO option, you can analyze and debug embedded systems with mixed-signal designs that use analog signals and correlated digital signals simultaneously.

The Mixed Signal Option provides 16 digital channels grouped in two logic probes (pods) with 8 channels each. The instrument ensures that analog and digital waveforms are time-aligned and synchronized so that critical timing interactions between analog and digital signals can be displayed and tested. The automatic alignment compensates the skew between the probe connectors of the analog channels and the probe boxes of the digital channels.

Trigger

You can trigger on digital channels. Digital channels are available as trigger source if you trigger on single events, but not in any trigger sequence. The level is the threshold of the digital signal, which is configured in "Logic" > "Setup". All other trigger settings are configured in the "Trigger" dialog.

The following trigger types are available for digital trigger sources:

- Edge
- Width
- Timeout
- State
- Pattern

Data export

You can export the data of digital channels to waveform files and sessions, and you can use remote commands to retrieve and transmit digital data for further analysis.

15.1 Logic configuration

Access: "Menu" > "Logic" > "Setup" tab


You can display digital channels individually, and you can group them and display as a logic group. 4 logic groups are available. Each digital channel can be assigned to one *active* logic only. Conflicting buses are disabled automatically.

For clocked buses, you can display the decoded data in a result box.

If you have configured several logic groups and you want to modify the settings, make sure that the tab of the correct logic is selected. Disable the logic before you change the settings.

15.1.1 Setup

Access: "Menu" > "Logic" > "Setup" tab

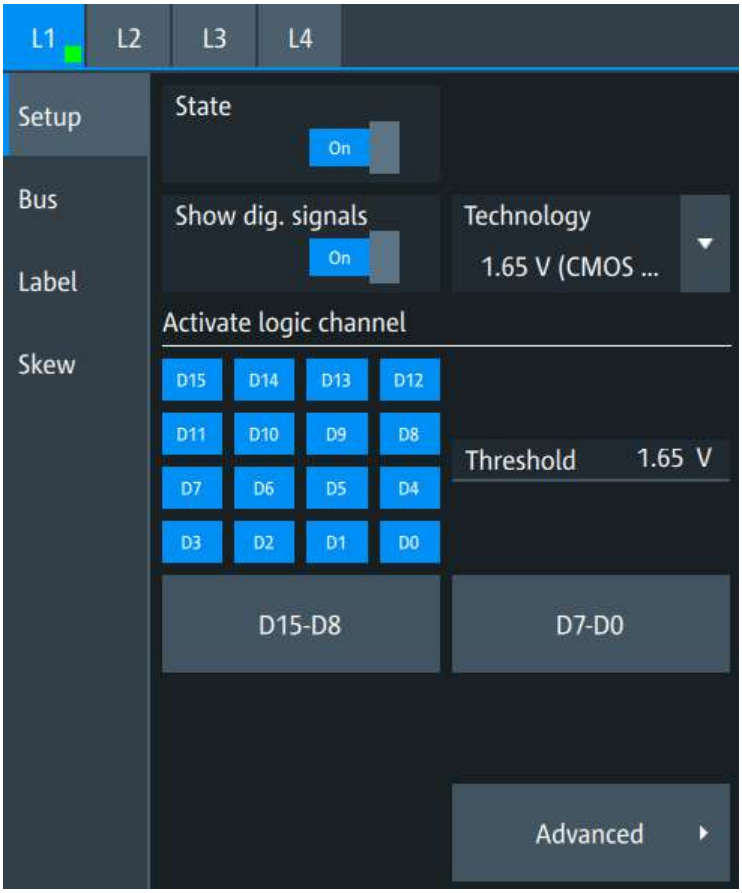

State
Enables the selected logic group. The corresponding signal icon appears on the signal bar.

If another active bus already uses the same digital channel, the instrument disables the other bus and shows a message.


Remote command:
`PBUS<pb>:STATe` on page 2357

Show dig. signals
If enabled, the selected digital channels are shown in the diagram. Each channel is displayed as a logic signal.

Remote command:
`PBUS<pb>:DISPlay:SHDI` on page 2355

Technology, Threshold
Sets the logical threshold. For each sample, the instrument compares the input voltage with the threshold value. If the input voltage is above the threshold, the signal state "1" is stored. Otherwise, the signal state "0" is stored if the input voltage is below the threshold.

To avoid the change of signal states due to noise, a hysteresis is considered.

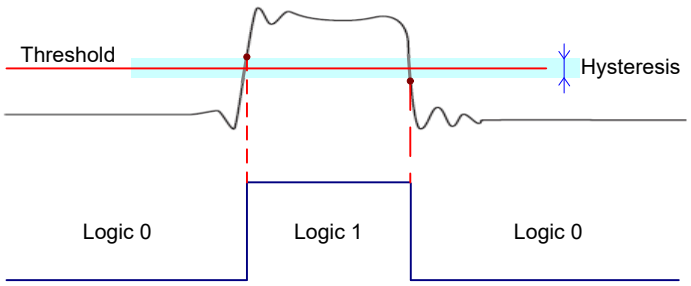

By default, the same threshold and hysteresis value are used for all digital channels and all logic buses: "Couple thresholds" is enabled.

You can also set different thresholds for the individual channel groups. As long as the buses are disabled, you can set different thresholds for each bus. Active buses use the same threshold and hysteresis values, the settings of the last activated bus take effect.

The range of threshold levels and the minimum voltage swing is given in the specifications document.

"Threshold" Enter the value directly in the field.

"Technology" Selects the threshold voltage for various types of integrated circuits from a list and applies it to all digital channels. The value is set to "Manual" if a user-defined threshold was entered directly.

Remote command:
`PBUS<pb>:TECHnology` on page 2358
`PBUS<pb>:THReshold<n>` on page 2358

Active logic channel
Set the state of the individual digital channels.

Remote command:
`PBUS<pb>:BIT<n>[:STATe]` on page 2352
`DIGital<m>:STATe` on page 2349

Enable/Disable D7-D0,D15-D8
The buttons select or deselect all digital channels of a pod at once.

Advanced
Opens a dialog for advanced threshold and hysteresis settings. You can define them in addition to the "Threshold" and "Technology".

Level coupling ← Advanced
Sets the threshold and the hysteresis for all digital channels and all buses to the same value.

If level coupling is off, you can set the thresholds individually for the channel groups D0 to D3, D4 to D7, D8 to D11 and D12 to D15 in the "Setup" tab. The hysteresis for each channel group is set in the "Advanced" dialog.

Remote command:
PBUS<pb>:THCoupling on page 2358

Hysteresis ← Advanced
Defines the size of the hysteresis for the respective channels.

"Small" The instrument sets a small value suitable for the signal and its settings. Use this setting for clean signals.


"Medium" The instrument sets the maximum value that is possible and useful for the signal and its settings. Use this setting for noisy signals.

"Large" Sets different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system. Use this setting for very noisy signals.

Remote command:
PBUS<pb>:HYSTeresis<n> on page 2356

15.1.2 Bus

Access: "Menu" > "Logic" > "Bus" tab

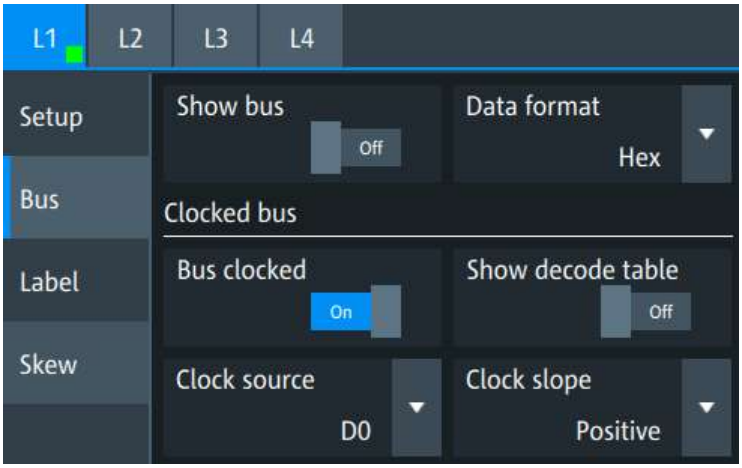

Show bus
If enabled, the resulting bus signal and bus values are displayed in the diagram.

Remote command:
PBUS<pb>:DISPlay:SHBU on page 2355

Data format
Sets the data format of bus values, which are displayed in the decode table and on the comb bus display.

Available formats are: Hex, octal, binary, ASCII, string, signed, unsigned, symbolic, and auto.

Signed and Unsigned are integer data types with a maximum 16-bit length. Unsigned is used for positive integers. Signed is used for positive and negative integers.

If the target file format is BIN, you can save only signed and unsigned binary data. The data format "Signed" writes signed data; all other formats are saved as unsigned binary data.

Remote command:
`PBUS<pb>:DATA:FORMat` on page 1305
`PBUS<pb>:DATA:HEADer?` on page 1305
`PBUS<pb>:DATA[:VALues]?` on page 1306

Bus clocked
Enable this option to activate the clocked bus. If a bus is a clocked bus, one of the digital channels serves as the clock.

Remote command:
`PBUS<pb>:CLON` on page 2353

Show decode table
If enabled, a result table is shown with decoded values and corresponding points in time of the bus signal. Each clock edge corresponds to one row in the table.

The decode table is only available for clocked buses to check the data words.

Remote command:
`PBUS<pb>:DECTable:SHOW` on page 2354
`PBUS<pb>:DECTable:COUNt?` on page 2354
`PBUS<pb>:DECTable:DATA?` on page 2354

Clock source
Selects the digital channel used as clock.

Remote command:
`PBUS<pb>:CLOCk` on page 2353


Clock slope
Selects the slope of the clock signal at which all digital channels of the bus are analyzed.

For an unclocked bus, the logical state of the bus is determined for each sample. For a clocked bus, the logical state is determined only at the specified clock edges.

Remote command:
`PBUS<pb>:CLSLope` on page 2353

15.1.3 Label settings

Access: "Menu" > "Logic" > "Label" tab

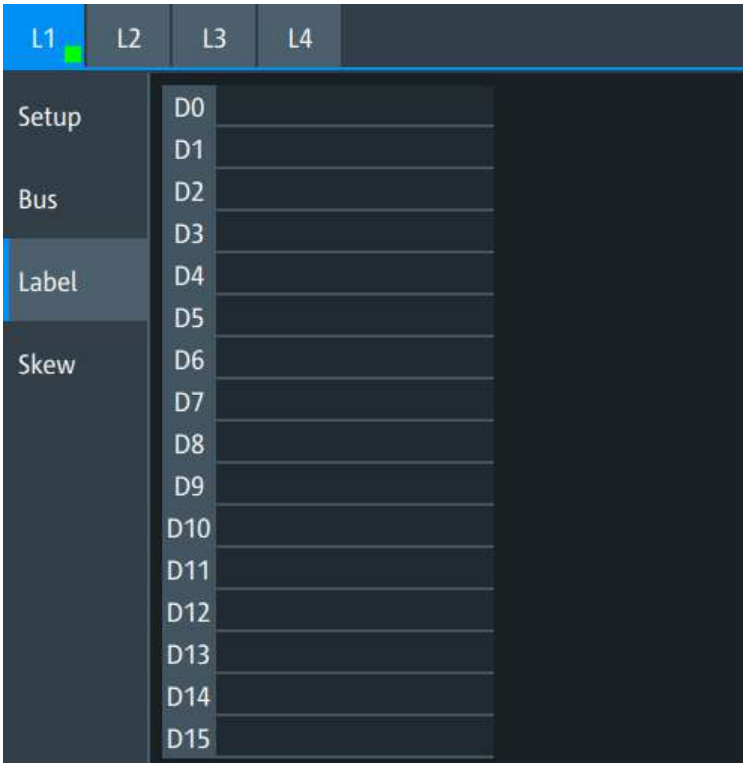

In this tab, you can enter a name for each digital channel. The name is displayed in the diagram.

PBUS<pb>:BIT<n>:LABel on page 2351

15.1.4 Skew settings

Access: "Menu" > "Logic" > "Skew" tab

You can set individual skew values for each logic channel, or a common value that is valid for all logic channels.



D0-D15
Sets an individual delay for each digital channel to time-align it with other digital channels.

The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables. The skew between the probe boxes of the digital channels and the probe connectors of the analog channels is automatically aligned by the instrument.


Remote command:
`PBUS<pb>:BIT<n>:SKEW` on page 2352

Skew
Sets a general delay for all digital channels.

Remote command:
`PBUS<pb>:SKEW` on page 2357

15.2 Display

Each logic group is shown in a separate diagram, and the diagrams can be minimized and arranged as usual.

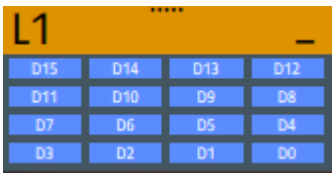

You can adjust the display of the logic bus signals and the individual digital channels to optimize the analysis of bus data:

- Select the digital channels to be displayed.
  Drag the logic signals and the digital channels to the optimal position.
- Adjust the size and position of the logic signal: Tap the Lx signal or its signal icon, and use the [Position] and [Scale] knobs.
- Adjust the size and position of active digital channels: Tap one of the Dx signals, and use the [Position] and [Scale] knobs.
- Show the result table of the decoded clocked bus signal.

Remote commands:

- `PBUS<pb>:DIGSignals:POSition` on page 2355
- `PBUS<pb>:DIGSignals:SCALe` on page 2355
- `PBUS<pb>:POSition` on page 2356
- `PBUS<pb>:SCALe` on page 2357

To access and analyze one or more specific acquisitions, you can use the "History" in the common way.

Furthermore, you can zoom in digital signals and bus signal in the same way as in analog waveforms.

15.2.1 Logic bus - decode table

Decoding is available for clocked buses.

The decode table shows the decoded data words of the bus signal and the corresponding time. Each clock edge corresponds to one row in the table. Beside the table, you can select the data format of the bus values.



The results can be saved to a `.csv` or `.html` file.

16 Waveform generator (option R&S MXO5-B6)

The MXO 5 includes a two-channel 100 MHz waveform generator. Each waveform generator can output simple functions, modulated sine waveform, arbitrary waveforms and sweep waveforms. It is possible to couple and synchronize the settings of the waveform generators.

The instrument preset does not affect the generator settings. Each generator has its own preset ("Default setup"). When the instrument is shut down, the waveform generator settings are stored. At the instrument start, these settings are restored but the generators are switched off. When a saveset of instrument settings is recalled, generators are also switched off but the generator settings remain unchanged.


If you often switch on and off a generator, add a generator icon to the toolbar ("Gen1", "Gen2"). Tap the icon to switch on or off the generator.

16.1 Setup of the waveform generator

Access: "Gen" signal activator > "Gen"1 or "Gen"2 > "Setup" tab.

16.1.1 General settings

The "Setup" tab provides general settings like enabling the waveform generator, and setting that depend on the selected function type.

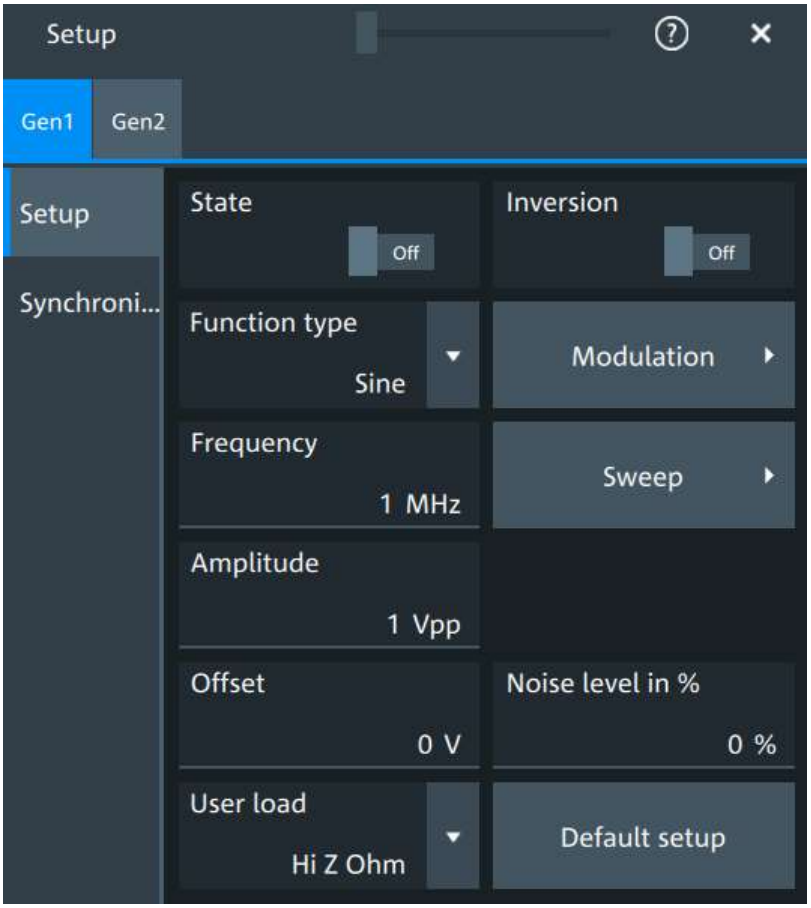

State
Enables the function generator.

If you often switch on and off a generator, use the generator icon on the toolbar ("Gen1", "Gen2").

Remote command:
`WGENerator<wg>[:ENABle]` on page 2365

Inversion
Inverts the waveform at the offset level.

Remote command:
`WGENerator<wg>:VOLTage:INVersion` on page 2365

Function type
Selects the type of waveform to be generated.

For all waveforms, you can set:

- Frequency
- Amplitude, Peak amplitude
- Offset
- Noise level in % or DC level
- User load

"Sine"	Generates a sine wave. Modulation settings and Sweep settings are available.
"Square"	Generates a square wave. You can set the Duty cycle. Modulation settings is available.
"Ramp"	Generates a ramp signal. You can set the Symmetry.
"DC"	Generates a direct current (DC) signal. You can set the DC level.
"Pulse"	Generates a pulse signal. Additional settings are the Period and the Pulse width. Modulation settings is available.
"Cardinal sine"	Generates a cardinal sine wave. No additional settings are needed.
"Cardiac"	Generates a cardiac signal. No additional settings are needed.
"Gauss"	Generates a Gaussian signal. No additional settings are needed.
"Lorentz"	Generates a Lorentz signal. No additional settings are needed.
"Haversine"	Generates a haversine function signal (great-circle distance between two points on a sphere). No additional settings are needed.
"Exp. rise"	Generates an exponential rise signal. No additional settings are needed.
"Exp. fall"	Generates an exponential fall signal. No additional settings are needed.
"Arbitrary"	Generates an arbitrary waveform, which is copied from an existing waveform, or loaded from a file. See Section 16.1.4, "Arbitrary waveforms", on page 1034.

Remote command:
`WGENerator<wg>:FUNCtion[:SELect]` on page 2362

Frequency
Sets the frequency of the waveform.

The available frequency range depends on the selected "Function type", see Frequency range of the function generator waveforms.

Table 16-1: Frequency range of the function generator waveforms

"Function type"	Min frequency	Max frequency
"Sine"	0.001 Hz	100 MHz
"Square"	0.001 Hz	30 MHz
"Ramp"	0.001 Hz	1 MHz
"DC"	-	-
"Pulse"	0.001 Hz	30 MHz
"Cardinal sine"	0.001 Hz	5 MHz
"Cardiac"	0.001 Hz	1 MHz
"Gauss"	0.001 Hz	25 MHz
"Lorentz"	0.001 Hz	10 MHz

"Function type"	Min frequency	Max frequency
"Haversine"	0.001 Hz	100 MHz
"Exp.rise"	0.001 Hz	10 MHz
"Ep. fall"	0.001 Hz	10 MHz

Remote command:
`WGENerator<wg>:FREQuency` on page 2361

Amplitude, Peak amplitude
Sets the amplitude of the waveform. If AM modulation is active, this value defines the peak amplitude of the modulated signal.

Remote command:
`WGENerator<wg>:VOLTage[:VPP]` on page 2365

Carrier amplitude
Sets the mean peak-to-peak voltage of the modulated signal if AM modulation is active.

The setting is only available, if "Modulation" is on and set to "AM".

Remote command:
`WGENerator<wg>:MODulation:AM:CAMPlitude` on page 2363

Offset
Sets the vertical offset of the generated waveform.

Remote command:
`WGENerator<wg>:VOLTage:OFFSet` on page 2365

Arbitrary Setup
Opens a menu to configure the arbitrary waveform.

See Section 16.1.4, "Arbitrary waveforms", on page 1034.

Sweep
Opens a menu to configure the sweep.

See Section 16.1.3, "Sweep settings", on page 1033.

Modulation
Opens a menu to configure the modulation.

See Section 16.1.2, "Modulation settings", on page 1031.

Noise level in %
Sets the level of the noise in percentage of the set "Amplitude" output of the signal.

Remote command:
`WGENerator<wg>:MODulation:NLPCent` on page 2371

User load
Select the user load, the load of the DUT at its connection.

You can select either a "50Ω" or a "High-Z" (high input impedance) load.

Remote command:
WGENerator<wg>:OUTPut[:LOAD] on page 2362

Symmetry
Sets the symmetry of a ramp waveform, the percentage of time the waveform is rising. By changing the symmetry of the ramp, you can create, for example, triangular waveforms.

50% defines symmetric triangles. Values <50% define triangles with a steeper rising edge leaned to the left. Values >50% define triangles with a steeper falling edge leaned to the right.

Remote command:
WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] on page 2361

Duty cycle
Sets the duty cycle for the pulse function.

The duty cycle expresses for what percentage of the period, the signal state is high.

Remote command:
WGENerator<wg>:FUNCtion[:SQUare]:DCYCle on page 2362

Pulse width
Sets the pulse width, the pulse duration of the generated pulse waveform.

Remote command:
WGENerator<wg>:FUNCtion:PULSe[:WIDTh] on page 2361

Default setup
Presets the generator to a default setup. The default includes the following settings:

- "Function type" = "Sine"
- "Frequency" = "1 MHz"
- "Amplitude" = "1 Vpp"

Remote command:
WGENerator<wg>:PRESet on page 2363

DC level
Available for "Function type" = DC.

Sets the level for the DC signal.

Remote command:
WGENerator<wg>:VOLTage:DCLevel on page 2364

Noise level for DC
Available for "Function type" = "DC".

Sets the level of the noise for the DC signal.

Remote command:
WGENerator<wg>:MODulation:NDCLevel on page 2371

Period
Available for "Function type" = "Pulse".

Sets the period of the pulse waveform.

Remote command:
`WGENerator<wg>:PERiod` on page 2363

16.1.2 Modulation settings

Modulation is available only for sine and square waveforms.

Access: "Gen" signal activator > "Gen"1 or "Gen"2 > "Setup" tab > "Function type" = "Sine" or "Square" > "Modulation".

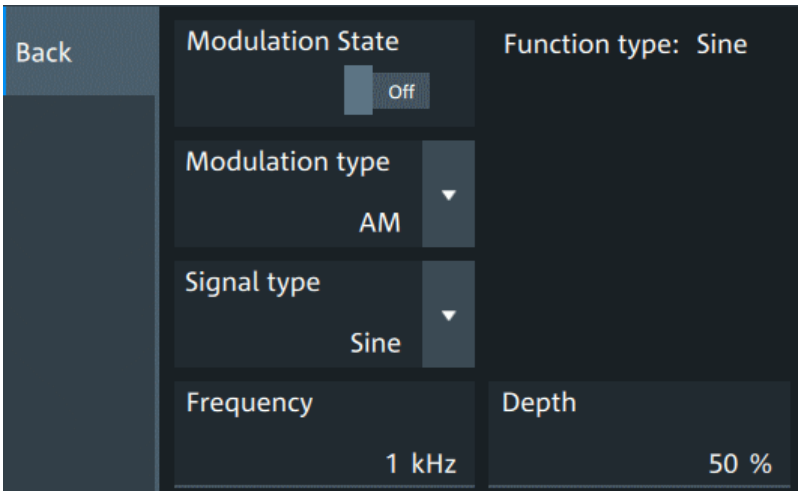


Figure 16-1: Modulation setup

Modulation state
Enables or disables modulation.

Modulation is available only for "Function type" = "Sine"/"Square".

Remote command:
`WGENerator<wg>:MODulation[:STATe]` on page 2366

Modulation type
Selects the modulation type, which defines how the carrier signal is modified.

"AM"	Amplitude modulation. The amplitude of the carrier signal is varied according to the modulation signal. Available for "Function type" = "Sine".
"FM"	Frequency modulation. The frequency of the carrier signal is varied according to the modulation signal. Available for "Function type" = "Sine".
"PWM"	Pulse width modulation. The time for which the signal is in a high state is varied according to the modulation signal. Available for "Function type" = "Square".

"FSK" Frequency shift keying (FSK) modulation. The signal frequency switches between "Frequency 1" and "Frequency 2" at a "FSK rate". Available for "Function type" = "Sine".

Remote command:
WGENerator<wg>:MODulation:TYPE on page 2373

Signal type
Selects the type of the modulating signal for AM, FM or PWM modulation.

Remote command:
WGENerator<wg>:MODulation:AM[:FUNCtion] on page 2368
WGENerator<wg>:MODulation:FM[:FUNCtion] on page 2370
WGENerator<wg>:MODulation:PWM[:FUNCtion] on page 2373

Frequency
Sets the frequency of the modulating waveform for AM/FM/PWM modulation.

Remote command:
WGENerator<wg>:MODulation:AM:FREQuency on page 2367
WGENerator<wg>:MODulation:FM:FREQuency on page 2369
WGENerator<wg>:MODulation:PWM:FREQuency on page 2372

Depth
Sets the modulation depth, the percentage of the amplitude range that is used for AM modulation.

Remote command:
WGENerator<wg>:MODulation:AM:DEPTh on page 2367

Duty cycle
Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Remote command:
WGENerator<wg>:MODulation:AM:DCYCle on page 2367
WGENerator<wg>:MODulation:FM:DCYCle on page 2369
WGENerator<wg>:MODulation:PWM:DCYCle on page 2372

Symmetry
Sets the symmetry for the ramp modulation waveform, the percentage of time that the waveform is rising.

Remote command:
WGENerator<wg>:MODulation:AM:SYMMetry on page 2368
WGENerator<wg>:MODulation:FM:SYMMetry on page 2370
WGENerator<wg>:MODulation:PWM:SYMMetry on page 2373

Deviation
Sets the frequency deviation, the maximum difference between the FM modulated signal and the carrier signal.

Remote command:
WGENerator<wg>:MODulation:FM:DEViation on page 2369

Modulation depth
Sets the modulation depth, the percentage of the amplitude range that is used for PWM modulation.

Remote command:
`WGENerator<wg>:MODulation:PWM:DEPTh` on page 2372

Frequency 1/Frequency 2
Sets the frequency of the first /second signal in FSK modulated signal.

Remote command:
`WGENerator<wg>:MODulation:FSK:FONE` on page 2370
`WGENerator<wg>:MODulation:FSK:FTWO` on page 2370

FSK rate
Sets the frequency at which signal switches between "Frequency 1" and "Frequency 2".

Remote command:
`WGENerator<wg>:MODulation:FSK[:RATE]` on page 2371

16.1.3 Sweep settings

Sweep is available only for sine waveforms.

Access: "Gen" signal activator > "Gen1" or "Gen2" > "Setup" tab > "Function type" = "Sine" > "Sweep".

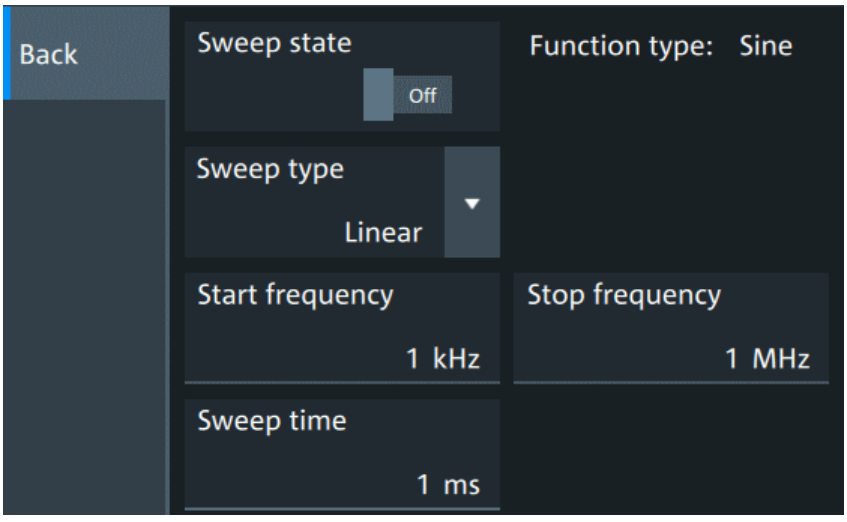


Figure 16-2: Sweep setup

In the sweep mode, the MXO 5 generates a signal whose frequency gradually changes from the "Start frequency" to the "Stop frequency" for a certain "Sweep time".

For a step-by-step description of the sweep setup, see Section 16.3.3, "Configuring a sine sweep waveform", on page 1041.

Sweep state
Enables or disables the sweeping.

Remote command:
WGENerator<wg>:SWEep[:STATe] on page 2376

Sweep type
Sets the type of the sweep, a linear or logarithmic change of the frequency.

Remote command:
WGENerator<wg>:SWEep:TYPE on page 2376

Start frequency
Sets the start frequency of the sweep signal.

Remote command:
WGENerator<wg>:SWEep:FSTart on page 2377

Stop frequency
Sets the stop frequency of the sweep signal.

Remote command:
WGENerator<wg>:SWEep:FEND on page 2377

Sweep time
Sets the duration of the sweep.

Remote command:
WGENerator<wg>:SWEep:TIME on page 2377

16.1.4 Arbitrary waveforms

The arbitrary waveform generator allows you to output a user-defined waveform for testing your devices. An arbitrary waveform is loaded from a file. You can load CSV files that follow a defined structure, or saved reference waveforms.

See also: Section 16.3.4, "Configuring an arbitrary waveform", on page 1041.

16.1.4.1 Arbitrary waveform files

You can load CSV files that have a Rohde & Schwarz WaveGen format.

Content and format of the Rohde & Schwarz arbitrary waveform CSV files

The waveform generator format can contain the following values:

- Rate
- Time value
- Voltage value

If all the values are defined, the file format is as follows:

```
Rate 5000000            //Sample rate of the arbitrary waveform.
0.000000E+000,-5.995    //Time value 1, Voltage value 1
1.237011E-005,-6.0      //Time value 2, Voltage value 2
.......
```

In this case, the rate is reflected in the "Sample Rate" field of the user interface. The total number of Time/Voltage values is reflected in the "Samples" of the user interface. Anything written after `//` is ignored as a comment.

You can define only some of the values. According to what you define, the file format looks different and is handled differently:

- With specified *Rate*:
  Time values are ignored. You can specify just rate and voltage values as below:

```
Rate 5000000               //Sample rate of the arbitrary waveform
-5.995                     //Voltage value 1
-6.0                       //Voltage value 2
.......
```

- Without specified *Rate* and without specified *Time* values:
  The last user-defined sample rate is used to calculate the waveform. You can change the "Sample rate" in the user interface. The voltage values are then played with this sample rate.

```
-5.995                //Voltage value 1
-6.0                   //Voltage value 2
.......
```

- Without specified *Rate* and with specified *Time*:
  The timing information of the first 2 time values is used to calculate the sample rate.

Example:

Consider the following file:

```
0.000000E+000,-5.995    //Time value 1, Voltage value 1
1.237011E-005,-6.0      //Time value 2, Voltage value 2
```

The sample rate is:


Sample rate = 1/ Time between first two samples =1 / 1.237011E-005 = 80.840KSampe/sec

16.1.4.2 Arbitrary settings

Access: "Gen" signal activator> "Gen1" or "Gen2" > "Setup" tab > "Function type" = "Arbitrary"

Access: "Gen" signal activator > "Gen"1 or "Gen"2 > "Setup" tab > "Function type" = "Arbitrary".

The following settings in the "Setup" tab and the "Arbitrary Setup" dialog are specific for generated arbitrary waveforms.

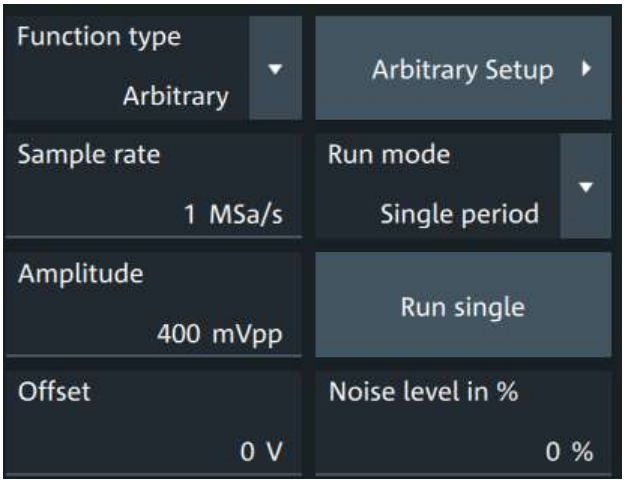

Run mode....1036
Run single....1036
Arbitrary Setup....1036
Arb wfm source....1037
Sample rate....1037
Number of samples....1037
Open....1037

Run mode
Selects the duration for which the signal of the arbitrary generator is output after the trigger event. You can choose between a "Continuous" and "Single period" duration.


Remote command:
`WGENerator<wg>:ARBGen:RUNMode` on page 2374

Run single
Generates a single period of the arbitrary waveform if "Run mode" is set to "Single period".

If you load the arbitrary waveform from a file, first load the file, and then connect the DUT. See also: "Open" on page 1037.

Remote command:
`WGENerator<wg>:ARBGen:RUNSingle` on page 2375

Arbitrary Setup
Opens a dialog to define the arbitrary waveform.

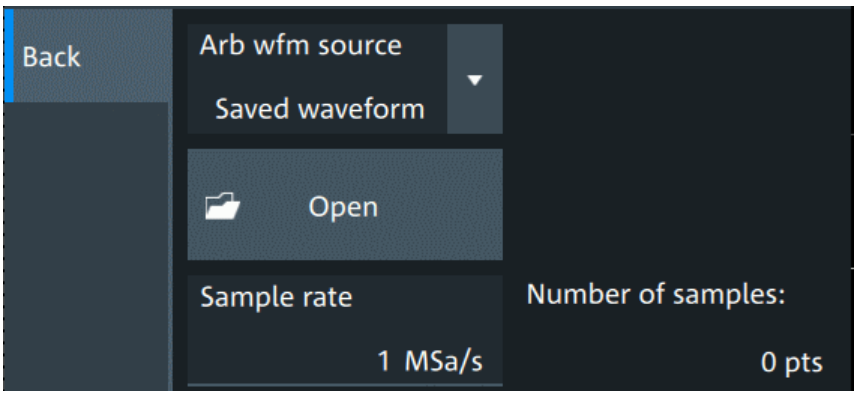

Arb wfm source
Selects the source of the arbitrary waveform.

You can load CSV files that follow a defined structure, or saved reference waveforms.

Remote command:
`WGENerator<wg>:ARBGen[:SOURce]` on page 2376

Sample rate
Sets the sample rate for the arbitrary waveform.

If the sample rate is given in the arbitrary waveform file (CSV or REF file), the instrument displays the value here, and you can change it. If no sample rate is available in the data, you can set the required sample rate.

Remote command:
`WGENerator<wg>:ARBGen:SRATe` on page 2375

Number of samples
Displays the number of samples in the loaded waveform.

Remote command:
`WGENerator<wg>:ARBGen:SAMPles?` on page 2375

Open
Opens a dialog to select the saved waveform, and loads the file. The setting is available if "Arb wfm source" is set to "Saved waveform".


You can load CSV files, or REF waveforms (saved reference waveforms). See also: Section 16.1.4.1, "Arbitrary waveform files", on page 1034.

When the file is loaded, the output voltage is set to the value of the first sample in the file. Therefore, if you want to output single periods of the arbitrary waveform, first load the waveform file, and then connect the DUT.

Remote command:
`WGENerator<wg>:ARBGen:NAME` on page 2374
`WGENerator<wg>:ARBGen:OPEN` on page 2374

16.2 Synchronize settings

Access: "Menu" > "Apps" > "Gen1" > "Synchronisation" tab.

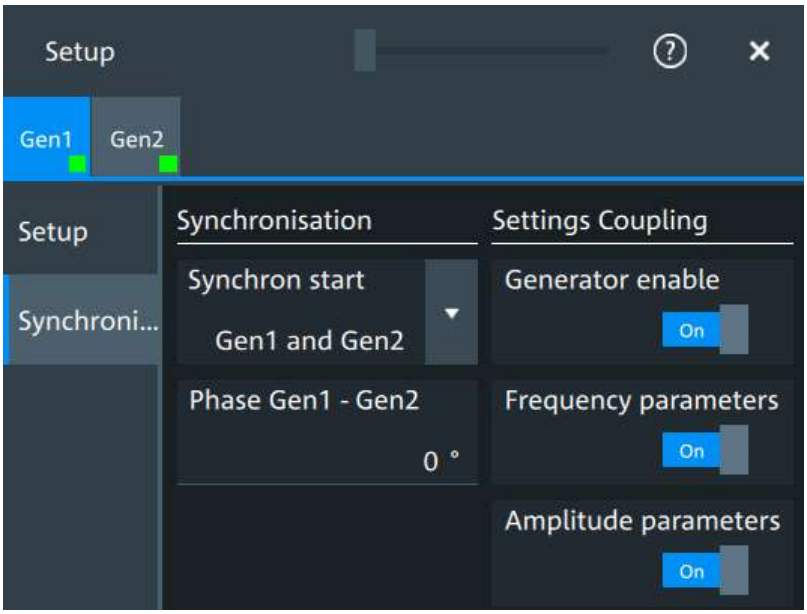

Synchron start
Selects, which signals generated from the waveform generator are synchronized.

Selecting one of the sync options indicates that the first samples of those signals are generated at the same time, irrespective of if the generators are on or off. Selecting one of the coupling options automatically syncs the signals generated by the two waveform generators.

Remote command:
`GENerator:SYNC[:COMBination]` on page 2379

Phase Gen1 - Gen2
Sets the phase shift between the waveform of Gen1 and Gen2 when the frequency parameters of the two waveforms are coupled.

Remote command:
`WGENerator<wg>:COUPling:PHASeshift` on page 2379

Generator enable
Enables the coupling of the generators, with the selected set of parameters: amplitude and frequency.

Remote command:
`WGENerator<wg>:COUPling:STATe` on page 2378

Frequency parameters
Couples all frequency parameters of "Gen1" and "Gen2". The values are taken from the currently selected generator.

You can still change the other settings of the generators independently.

Remote command:
WGENerator<wg>:COUPling:AMPLitude on page 2378

Amplitude parameters
Couples all amplitude parameters of "Gen1" and "Gen2" including the load. The values are taken from the currently selected generator.

Remote command:
WGENerator<wg>:COUPling[:FREQuency] on page 2379

16.3 Configuring the waveform generator

This section explains step by step how to configure the waveform generator.

- Configuring a function waveform....1039
- Configuring a modulation waveform....1039
- Configuring a sine sweep waveform....1041
- Configuring an arbitrary waveform....1041

16.3.1 Configuring a function waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, select the "Function type" that you want to generate, e.g. "Sine".
4. Depending on the selected "Function type", configure the settings of the waveform like "Frequency" and "Amplitude".
5. If necessary, change the "User load" settings, or add "Noise level in %" to the waveform.
6. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

16.3.2 Configuring a modulation waveform

Generating an AM modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "AM".

6. Set the "Carrier frequency" and the "Carrier period".
7. Tap "Modulation signal", and select the required waveform.
8. Depending on the selected "Modulation signal", configure the settings of the waveform like "Modulation freq" and "Modulation depth".
9. Set "Modulation state" = "On" to enable the modulation.
10. Press "Back" to return to the "Setup" tab.
11. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating an FM modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "FM".
6. Select the "Signal type".
7. Set the "Frequency" and the "Deviation".
8. Set "Modulation state" = "On" to enable the modulation.
9. Press "Back" to return to the "Setup" tab.
10. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating an FSK modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "FSK".
6. Set the "Frequency 1", "Frequency 2" and the "FSK rate".
7. Set "Modulation state" = "On" to enable the modulation.
8. Press "Back" to return to the "Setup" tab.
9. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating a PWM modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Square".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "PWM".
6. Tap "Signal type", and select the required waveform.
7. Configure the settings of the waveform like "Frequency" and "Modulation depth".
8. Set "Modulation state" = "On" to enable the modulation.
9. Press "Back" to return to the "Setup" tab.
10. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

16.3.3 Configuring a sine sweep waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set "Function type" = "Sine".
4. Press "Sweep" to open the sweep dialog.
5. Select the "Sweep type".
6. Set the "Start frequency", the "Stop frequency" and the "Sweep time".
7. Set "Sweep state" = "On" to enable the sweep.
8. Press "Back" to return to the "Setup" tab.
9. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

16.3.4 Configuring an arbitrary waveform

For a description of the settings, see Section 16.1.4, "Arbitrary waveforms", on page 1034.

Generating an arbitrary waveform from a saved file

If you want to output single periods of the arbitrary waveform, first set up the generator, and then connect the DUT.

1. Tap the "Gen" signal activator.

2. Select the tab of the generator that you want to configure: "Gen1" or "Gen2".
3. In the "Setup" tab, set "Function type" = "Arbitrary".
4. Select "Arbitrary Setup" to open the arbitrary dialog.
5. Set the "Arb wfm source" to "Saved waveform".
6. Set the "Sample rate" if it is not defined in the file data.
7. Check "Number of samples".
8. Select "Back" to return to the "Setup" tab.
9. Select the "Run mode".
10. If "Run mode" = "Repetitive", set "State" = "On" to output the waveform at the output connector of the waveform generator.
11. If "Run mode" = "Single period":
    a) Connect the DUT.
    b) Set "State" = "On" to enable the output of the waveform generator.
    c) Tap "Run single" to output one waveform.

17 Network operation

The operating system is the basis of the instrument's firmware, it provides basic functions such as logon, password protection, virus protection, and connection to a network.

In addition to working with the MXO 5 directly with the touchscreen and the keys, you can also operate the instrument from a remote PC. Various methods of remote operation and control in a LAN network are supported:

- Using the web interface
- Using a VNC client
- Remote control with SCPI commands

You can also connect and synchronize two MXO oscilloscopes together and thus extend the number of channels. If you use R&S ScopeStudio on a computer, you can connect and synchronize two oscilloscopes to the software.

- Connecting the instrument to the network (LAN)..... 1043
- ScopeSync..... 1045
- Web browser interface (device web)..... 1060
- Remote operation with VNC® client..... 1066
- Remote control..... 1066
- Remote control - status reporting system..... 1070

17.1 Connecting the instrument to the network (LAN)

Network environment

Before connecting the product to a LAN, consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

17.1.1 Connecting the instrument to the network

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network.

- A dedicated network connection (Point-to-point connection) between the instrument and a single computer.

To connect a LAN cable

► Connect an RJ-45 cable to the LAN connector on the rear panel, and to the LAN.

For supported LAN interfaces, refer to the specifications document.

17.1.2 Assigning the IP address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports the Dynamic Host Configuration Protocol (DHCP), the address is assigned automatically.
- If the network does not support DHCP, or if the instrument is set to use manual configuration, the addresses must be set manually.

By default, the instrument is configured to use DHCP and obtains all address information automatically. Thus it is safe to establish a physical connection to the LAN without any previous instrument configuration.

To assign the IP address manually on the instrument

1. **NOTICE!** Connection errors can affect the entire network. If your network does not support DHCP, or if you choose to disable dynamic TCP/IP configuration, you must assign valid address information before connecting the instrument to the LAN.

   Contact your network administrator to obtain a valid IP address.
2. Open "Menu" > "Settings".
3. Select "System" > "Network" > "Advanced".
4. Disable "Automatic IP (DHCP)".
5. Enter the address information as obtained from the network administrator.

17.1.3 Using host names

In a LAN that uses a DNS server (Domain Name System server), each computer and instrument in the LAN can be accessed via an unambiguous host name (or computer name) instead of the IP address. The DNS server translates the host name to the IP address. Host names are useful when a DHCP server is used, as a new IP address can be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned host name, but you can change this name.

The default host name is the device name, a non-case-sensitive string with the following syntax: <instrument_model>-<serial_number>.

For example, the default host name of an MXO58 with serial number 123456 is MXO58-123456.

You can find the current host name, the model and the serial number in the "Device summary", when you tap the Rohde & Schwarz logo in the upper right corner of the screen. See also: Section 4.13, "Information and notifications", on page 83.

The serial number can also be found on the rear panel of the instrument. It is the third part of the device ID printed on the barcode sticker:



To change the host name

1. Open the "Menu".
2. Select "Settings" > "System" > "Network".
3. In "Host name", enter the new host name.
4. Confirm the entry.
5. Reboot the instrument.

17.2 ScopeSync

- ScopeSync concept 1045
- Using ScopeSync 1049
- ScopeSync settings 1053

17.2.1 ScopeSync concept

Using the ScopeSync functionality, you can extend the number of channels in analysis. You find the maximum number of synchronized channels in the specifications document. ScopeSync is useful in applications that need more signals than one oscilloscope has. Such applications are, for example, power sequencing, power conversion, multi-phase buck converters, 6-phase motor drives, and automotive applications. You can use most measurement and analysis functions across all channels.

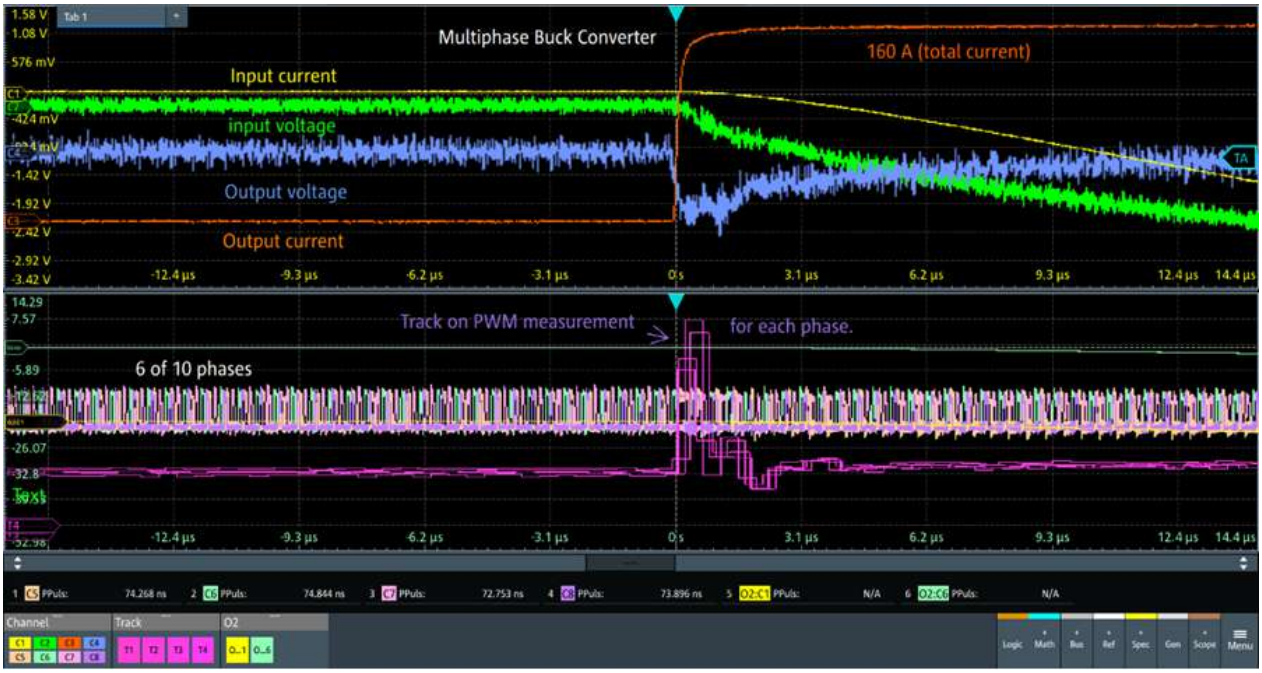


Figure 17-1: Example: analysis of multi-phase buck converter on MXO 5 with ScopeSync

The following products can be connected via ScopeSync with MXO 5:

- MXO 3 with 4 or 8 channels
- MXO 4 with 4 channels
- MXO 5 with 4 or 8 channels
- MXO 5C with 4 or 8 channels

Each instrument can have different specifications, like bandwidth, sample rate, memory depth, timebase and so on.

R&S ScopeStudio uses the ScopeSync interface to import sessions and signals.

17.2.1.1 Connections between oscilloscopes

In a ScopeSync setup, there is the leading oscilloscope (also called scope 1), where the analysis is done. Other oscilloscopes are the secondary oscilloscopes, and one of these is the connected one. The leading and the connected oscilloscopes are set up independently, and you can use the front panel keys and the touchscreen on each instrument. It is possible to use several secondary oscilloscopes.

ScopeSync of two oscilloscopes

ScopeSync of two oscilloscopes requires several cable connections:

- Connect "Ref Out 10 MHz" of the leading scope to "Ref In 10 MHz" of the connected scope with BNC cable. This connection ensures the timing accuracy across the oscilloscopes.
- Connect "Trigger Out" of the leading scope to "Trigger In" of the connected scope with BNC cable. This connection ensures trigger alignment. The trigger is set on

the leading scope, and the connected scope triggers when the leading scope triggers. The trigger out delay is eliminated by a skew value that is measured during skew setup.

- Ethernet LAN connection between the two oscilloscopes, either directly, via network, or using a switch. This connection is used for the communication of the scopes: sending commands from the leading scope to the connected scope, and transferring waveforms vice versa.
  Instead of Ethernet, a direct connection via USB TMC is also possible. It requires a USB 3.0 cable that connects the USB-B connectors of the instruments. For MXO 5C, you need also the USBTMC data link (R&S UT-CNCT3.0) for connection to one of the USB-A connectors.

ScopeSync of several oscilloscopes

You can configure several devices to act as secondary oscilloscopes (O2, O3, O4,...). One of these secondary scopes has the active connection. You can use the secondary scopes alternatively by activating the required connection. The currently active connection is terminated when you activate another oscilloscope.


You can also use several secondary scopes together and synchronize their waveforms at once on the leading oscilloscope.

ScopeSync of several oscilloscopes requires more cable connections:


- Connect "Ref Out 10 MHz" of the leading scope to a splitter, and "Ref In 10 MHz" of the secondary scopes with the splitter using BNC cables. These connections ensure the timing accuracy across the oscilloscopes.
- Connect "Trigger Out" of the leading scope to another splitter, and "Trigger In" of the secondary scopes with this splitter using BNC cables. These connections ensure trigger alignment. The trigger is set on the leading scope, and the secondary scopes trigger when the leading scope triggers. The trigger out delay is eliminated by a skew value that is measured during the skew setup of each secondary scope.
- LAN connection between all oscilloscopes. This connection is used for the communication of the scopes: sending commands from the leading scope to the secondary scopes, and transferring waveforms vice versa.

Synchronized waveforms on the leading oscilloscope

When acquiring the waveforms with "Run Single" or "Run/Stop", the currently active waveforms on the connected scopes are transferred to the leading scope, and you can analyze them. Only waveforms that are based on the identical trigger event are shown simultaneously in run mode.

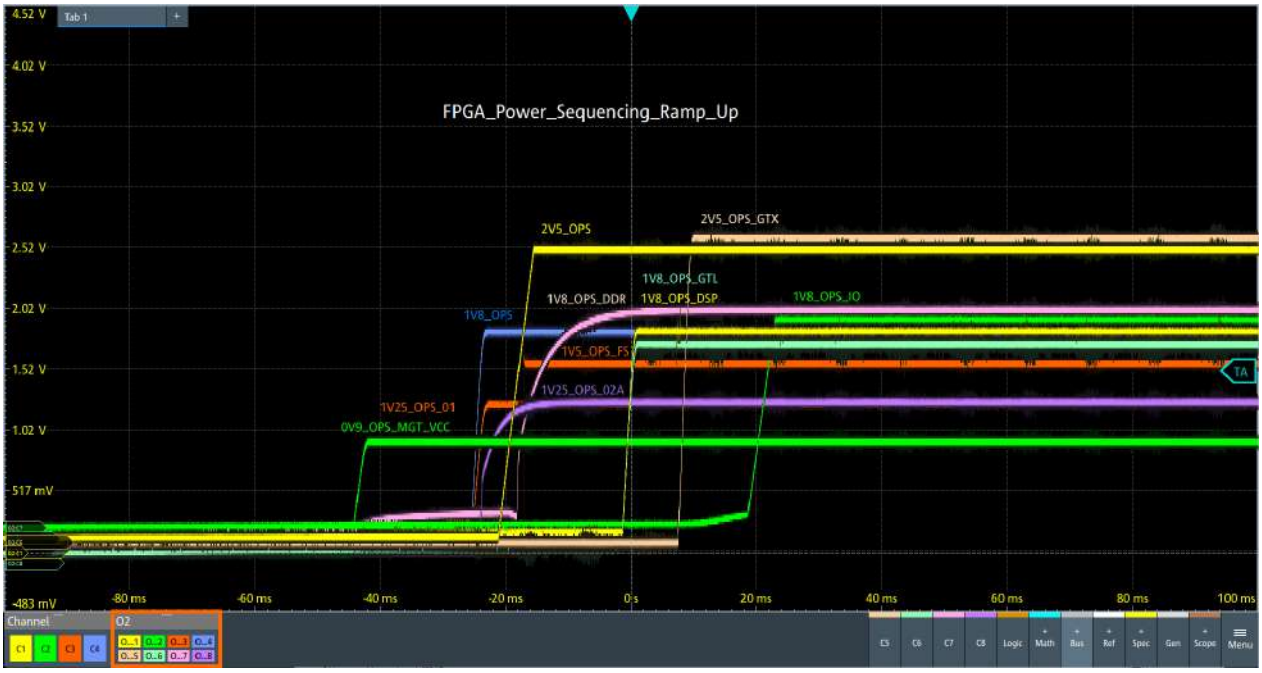

The channels of each oscilloscope are grouped in the signal bar. Select the channel group to open it. Channels of secondary scopes are named "O2:C<n>", "O3:C<n>" and so on. They are available as sources along with the waveforms of the leading scope, for example, for math, measurements, masks, serial buses.

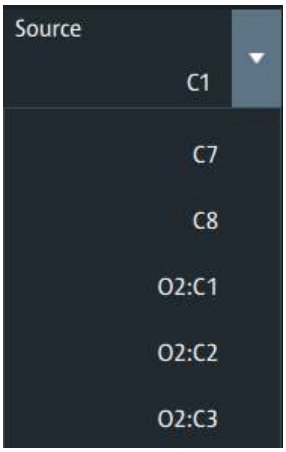

Limitations

When working with ScopeSync and analyzing waveforms from a connected oscilloscope, some limitations exist.

- ScopeSync with MXO 3:
  - MXO 3 is supported only as secondary oscilloscope.
  - ScopeSync has reduced time-dependent measurement accuracy, as it is not possible to connect the reference clock. MXO 3 does not have "Ref Out 10 MHz" and "Ref In 10 MHz" connectors.
- ScopeSync "Get signals" transfers only analog channels.

- You can actively connect one oscilloscope at a time.
- Waveform persistence, measurement statistics, and other functions that require repeated acquisitions are not available on waveforms of connected scopes. These waveforms are handled like reference waveforms in the background.
- Up to 24 waveforms can be displayed in one diagram. If you have more waveforms, you need a second diagram to display all.
- Triggering is possible only on signals of the leading oscilloscope. Connected scopes use the external trigger.
- You can save a session or saveset when the connection to a connected scope is active. When you recall a saveset or session in the "Recall" tab with active connection, the file is loaded, but the connection is terminated. You have to reconnect the connected oscilloscope. Recalling a session file loads the saveset and reference waveforms (if included). See Section 13.6, "Sessions", on page 519.
- The higher the record length of the signals on the connected scope, the longer it takes to transfer the waveforms. The time also depends on the type of the leading oscilloscope.

17.2.1.2 R&S ScopeStudio connection

With R&S ScopeStudio, which is the oscilloscope application on a computer, you can retrieve the signals and settings from an MXO oscilloscope and analyze the waveforms on the computer. If the oscilloscope is connected to another one with ScopeSync, you can analyze the waveforms and data of both scopes.

You need a working Ethernet or USB 3.0 (USB TMC) connection between the computer with R&S ScopeStudio and the leading scope, usually via the network, or a direct connection. For USB connection to MXO 5C, you need also the USBTMC data link (R&S UT-CNCT3.0) for connection to one of the USB-A connectors. Then you can load the data from the leading scope into R&S ScopeStudio:

- "Get signals" to load analog channel waveforms.
- "Get session" to load all settings and waveforms.

You can also load a session in the "Recall" tab when the connection to the leading scope is active. The file is loaded, but the connection is terminated. You have to reconnect the oscilloscope.

Instead, save the complete session on the oscilloscope and use "Get session" in R&S ScopeStudio, which keeps the connection active.

17.2.2 Using ScopeSync


This section describes the basic procedures on how to use ScopeSync.

- "To set up the physical connection of two oscilloscopes" on page 1050
- "To configure the connection" on page 1050
- "To align the scopes" on page 1050
- "To get signals for analysis on the leading scope" on page 1052

- "To analyze waveforms of two or more secondary scopes" on page 1052

To set up the physical connection of two oscilloscopes

1. Connect "Ref Out 10 MHz" of the leading scope to "Ref In 10 MHz" of the connected scope with a BNC cable.
2. Connect "Trigger Out" of the leading scope to "Trigger In" of the connected scope with a BNC cable.
3. Establish a LAN connection (Ethernet or USB TMC) between the two scopes.
   You can connect both instruments to the network, connect them directly, or use a switch.

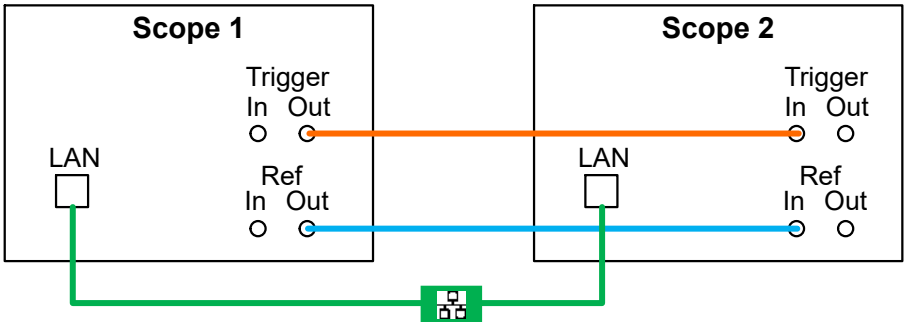

4. Configure the connection, see "To configure the connection" on page 1050.

To configure the connection

All settings are described in Section 17.2.3, "ScopeSync settings", on page 1053. The setup is the same for each secondary scope. The cable connections are complete.


1. On leading scope, tap the "+ Scope" activator on the signal bar.
2. On the "Remote" tab, tap "+ Add".
3. Enter the "Resource" of the secondary scope. To get the information, tap the Rohde & Schwarz logo on the display of the secondary scope.
   You can also use "Find devices" to get a list of available instruments and select the required one.
4. Enter a name for the secondary scope.
5. Tap "Connect".
6. Proceed with "To align the scopes" on page 1050 or "To get signals for analysis on the leading scope" on page 1052

To align the scopes

If you connect the scopes for the first time for the current measurement setup, you need to deskew them for correct horizontal synchronization.

1. Set up both scopes independently for edge trigger.
2. Connect the scopes as described in "To configure the connection" on page 1050.

3. On leading scope, tap the "+ Scope" activator on the signal bar.
4. Select the "Remote" tab.
5. Tap "Skew setup".
6. Connect two passive probes to the Probe Comp. connectors of the leading scope and to C1 both scopes as shown in the dialog.

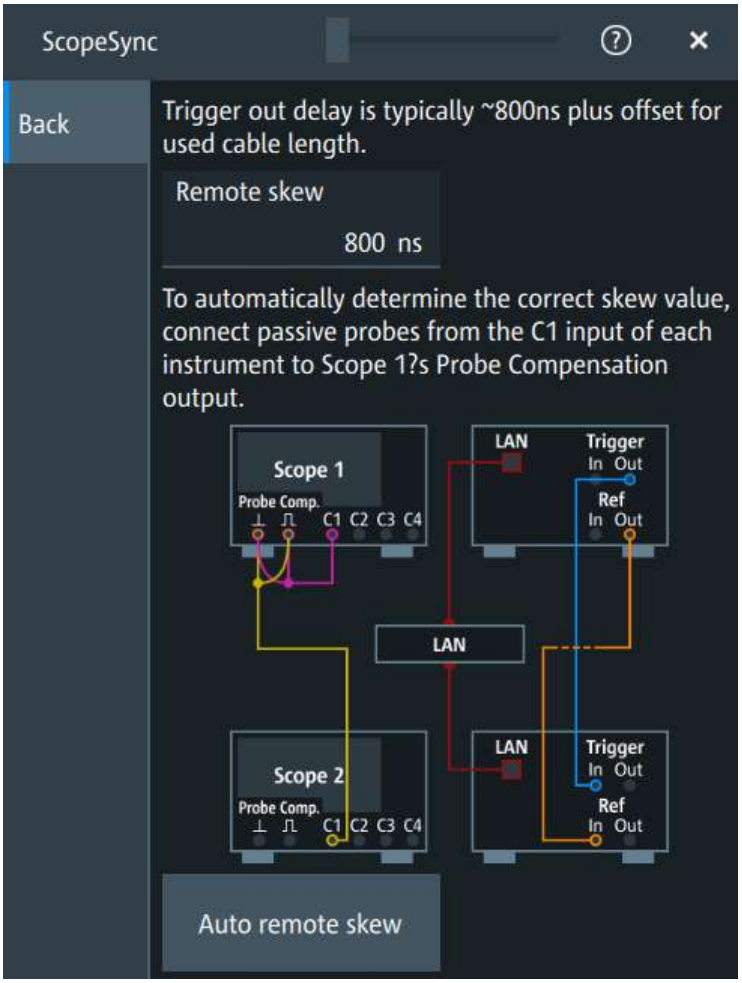

7. Tap "Auto remote skew".

   The skew is measured and the result is written to "Remote skew" and used for alignment of the channels.
8. Tap "Back" to return to the "Remote" tab.
9. Select the "Control" tab.
10. Activate "Timebase".
11. Preset the connected scope.
12. Proceed with "To get signals for analysis on the leading scope" on page 1052.

To get signals for analysis on the leading scope

1. To prepare the analysis:
   - Connect the scopes as described in "To set up the physical connection of two oscilloscopes" on page 1050.
   - Configure the connection as described in "To configure the connection" on page 1050.
   - For a new test setup, configure the deskew as described in "To align the scopes" on page 1050.
2. Set up both scopes independently for the measurement task.
3. On the leading scope, open the "Remote" tab in the "Add scope" dialog.
4. To get the signals, tap "Run Single" or "Run/Stop".


   Now you can start the analysis of the signals.

To analyze waveforms of two or more secondary scopes

If you need more channels than available on the leading and one connected scope, you can include more scopes in the measurement setup and connect them with the leading scope. All connected scopes use the external trigger of the leading scope, and the reference clock of the leading scope.

1. Connect "Ref Out 10 MHz" of the leading scope to a high-quality power splitter, and "Ref In 10 MHz" of the secondary scopes with the splitter using BNC cables.
2. Connect "Trigger Out" of the leading scope to another high-quality power splitter, and "Trigger In" of the secondary scopes with this splitter using BNC cables.
3. Establish a LAN connection (Ethernet or USB TMC) between the all scopes. You can connect both instruments to the network, connect them directly, or use a switch.
4. Configure and align each scope as described in "To configure the connection" on page 1050 and "To align the scopes" on page 1050.
5. Set up all scopes independently for the measurement task.
6. Press [Single] on each oscilloscope to put in wait for trigger.
7. On the leading scope, open the "Control" tab in the "ScopeSync" dialog.
8. Tap "Run Single".

   When the leading scope triggers, a trigger-out signal is sent to all connected scopes, and they acquire the waveforms.
9. Select the "All" subtab.
10. Select all secondary scopes that contribute to the measurement.

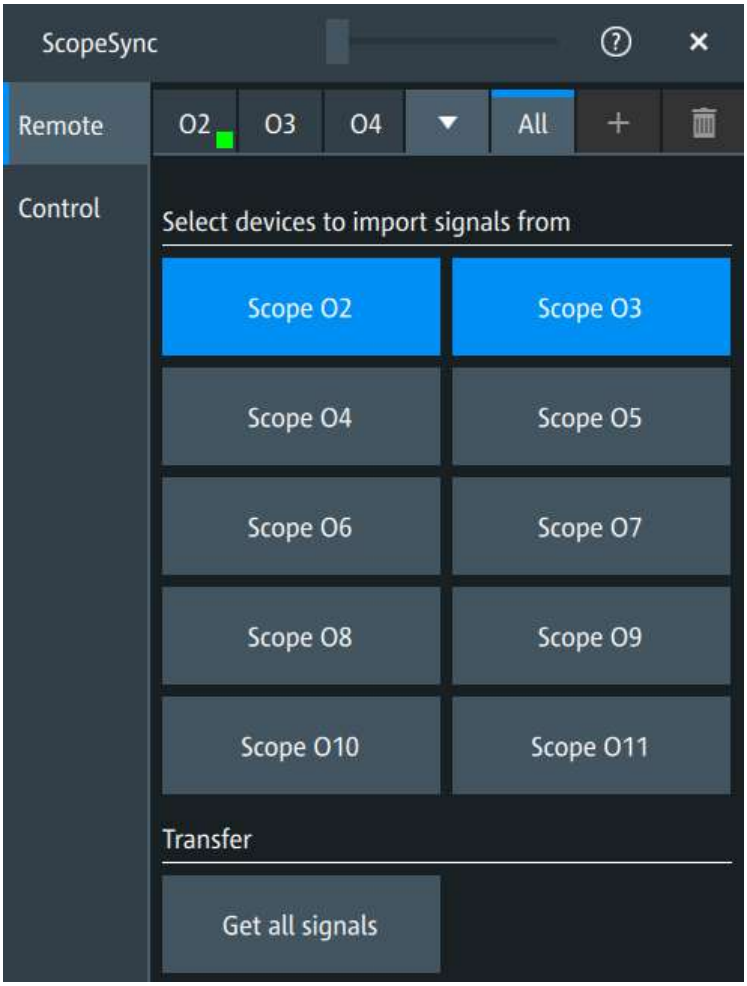

11. Tap "Get all signals".


    Now you can start the analysis of the signals.


17.2.3 ScopeSync settings

- Connection setup 1053
- Control 1057
- Scope selection for data transfer 1059

17.2.3.1 Connection setup

Access: "Menu" > "Apps" > "General" tab > "Add scope" > "Remote" tab

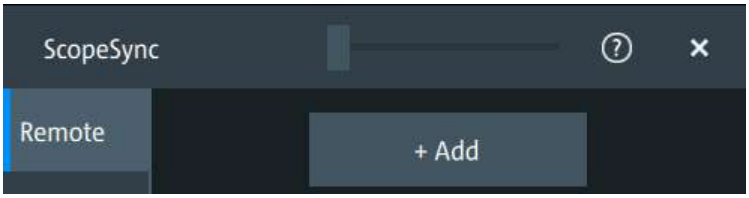

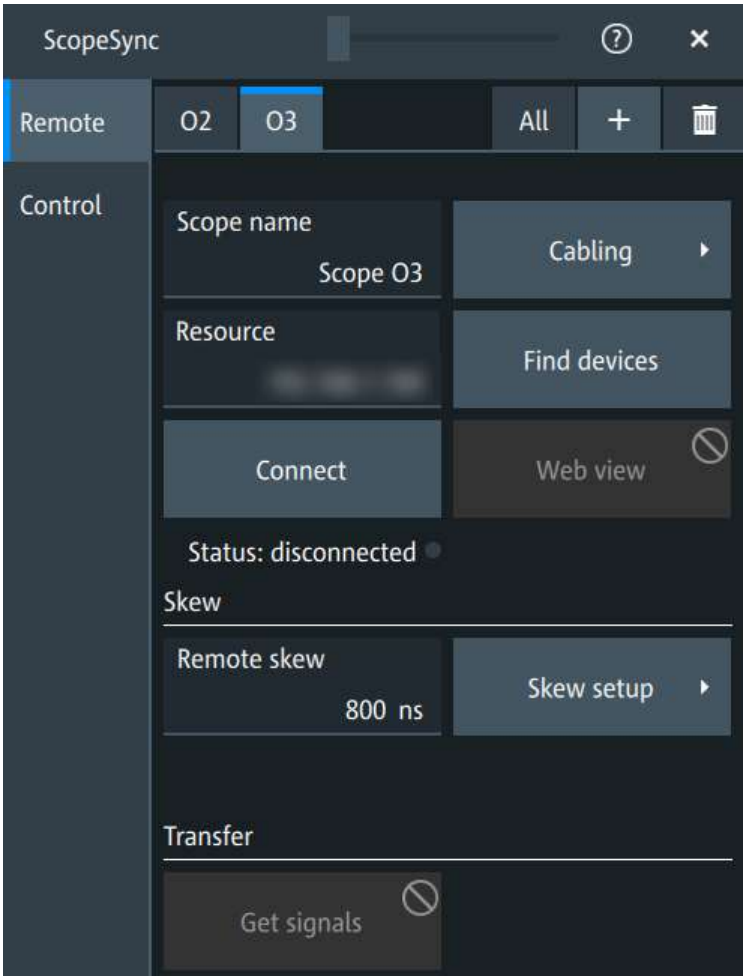

+ Add
Adds a tab for the first secondary oscilloscope ("O2") to the dialog. To add more oscilloscopes, use the ⊞ icon in the tab line. Each secondary instrument gets its own tab and is configured in the same way. The active connection is indicated by a green square.

Remote command:
`SYNChronize:DEVice<m>[:ENABle]` on page 2382

Scope name
Enter a name for the secondary oscilloscope. This name is used on the "All" tab.


Remote command:
`SYNChronize:DEVice<m>:NAME` on page 2381

Cabling
A dialog shows the required cable connections of two oscilloscopes. To connect more oscilloscopes, place a splitter in the trigger connection line, and another splitter in the reference line. Thus, all wired secondary scopes get the same reference clock and trigger signal.

Resource
Enter the IP address or the host name of the secondary oscilloscope. To find and connect available oscilloscopes in the network, use Find devices.

Remote command:
SYNChronize:DEVice<m>:COMMunicate:NET[:HOSTname] on page 2380

Find devices
The button starts a search for available oscilloscopes and opens a dialog with the results and some search settings.

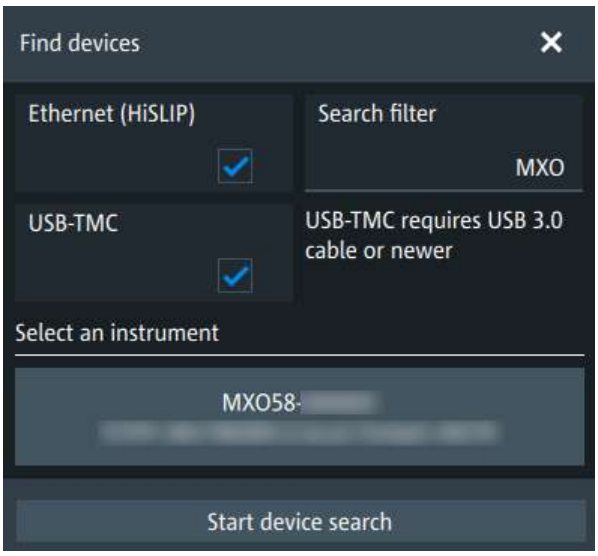

"Ethernet (HiSLIP)"	Filters the instruments that are connected via Ethernet.
"USB-TMC"	Filters the instruments that are connected via USB.
"Search filter"	Filters for instruments that contain the specified string in the device name.
"Start device search"	Starts the search using the configured filters.

Connect
Activates the connection between the two oscilloscopes, or between the R&S ScopeStudio software and the oscilloscope.

Another active connection is terminated.

On the leading scope, the reference clock output and the "Trigger out pulse" are activated. On the secondary scope, the source of the reference clock and the trigger source are set to "External".

Remote command:
SYNChronize:DEVice<m>:CONNect on page 2380

Disconnect
Terminates the active connection.

The reference clock and trigger source and action settings on the leading scope and secondary scope remain unchanged.

Remote command:
`SYNChronize:DISConnect` on page 2382

Web view
Opens the web interface of the connected oscilloscope. There, you can control the connected scope directly from the leading scope. "Web view" is particulary helpful if the connected oscilloscopes is an MXO5C, which has no display and front panel control.


WebView is only available if the oscilloscopes are connected via Ethernet LAN.

See also: Section 17.3, "Web browser interface (device web)", on page 1060.

Remote skew
Shows the skew value that was measured by "Auto remote skew". If you know the skew, or measure it manually, you can also enter the value.

Remote command:
`SYNChronize:DEVice<m>:SKEW[:VALue]` on page 2381

Skew setup
Opens a dialog to compensate for the delay between the scopes. The delay is caused by the trigger out delay and the cable length of the trigger out to trigger in connection.

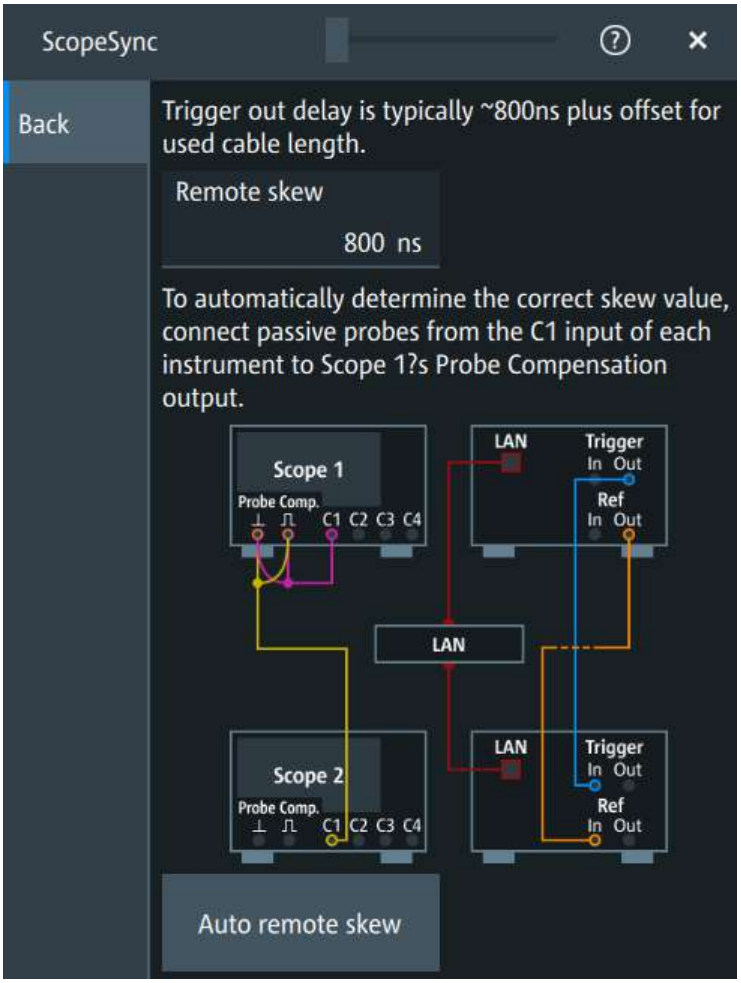

Auto remote skew ← Skew setup
Measures the delay between the scopes automatically, and sets the skew. Connect the scopes as shown in the dialog, and tap "Auto remote skew".


Remote command:
`SYNChronize:DEVice<m>:SKEW:AUTO` on page 2381

Get signals
Retrieves the active analog waveforms of the latest acquisition from the connected oscilloscope. Digital channels and reference waveforms are not transferred.

Remote command:
`SYNChronize:LOAD[:WAVeform]` on page 2383
`SYNChronize:LOAD:ABORt` on page 2382

17.2.3.2 Control

Access: "Menu" > "Apps" > "General" tab > "Add scope" > "Control" tab

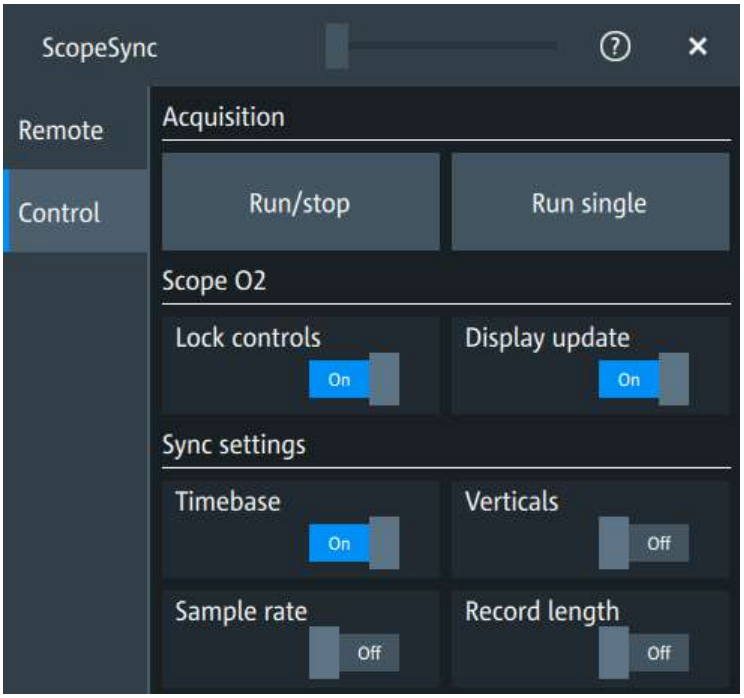

Run/Stop
See "Run/stop" on page 133.

Run Single
See "Run single" on page 134.

"Run Single" is the preferred acquisition mode in ScopeSync.

Lock controls
Locks the touchscreen and the front panel keys on the connected oscilloscope.

Remote command:
`SYNChronize:LOCKcontrols` on page 2383

Display update
Enables the continuous display update on the connected secondary oscilloscope when acquisition is controlled on the leading oscilloscope.

The display update allows for visual comparison of the waveforms on different displays.

"Display update" is available if "Lock controls" is on.

Remote command:
`SYNChronize:DISPlay` on page 2382

Timebase
Synchronizes the settings of time scale, position and refrence point. If enabled, all secondary scopes use the settings of the leading scope.

Remote command:
`SYNChronize:TIMebasesync` on page 2384

Verticals
If enabled, all secondary scopes use the vertical settings of the leading scope.

Remote command:
`SYNChronize:VERTicalsync` on page 2384

Sample rate
If enabled, all secondary scopes use the sample rate of the leading scope.

Remote command:
`SYNChronize:SRATesync` on page 2384

Record length
If enabled, all secondary scopes use the record length of the leading scope.


Remote command:
`SYNChronize:RECLensync` on page 2384

17.2.3.3 Scope selection for data transfer

Access: "Menu" > "Apps" > "General" tab > "Add scope" > "Remote" tab > "All" subtab

You can transfer signals from more than one secondary scope to the leading scope. On the "All" subtab, you select the scopes that contribute, and start the signal transfer.

For the complete procedure, see "To analyze waveforms of two or more secondary scopes" on page 1052.

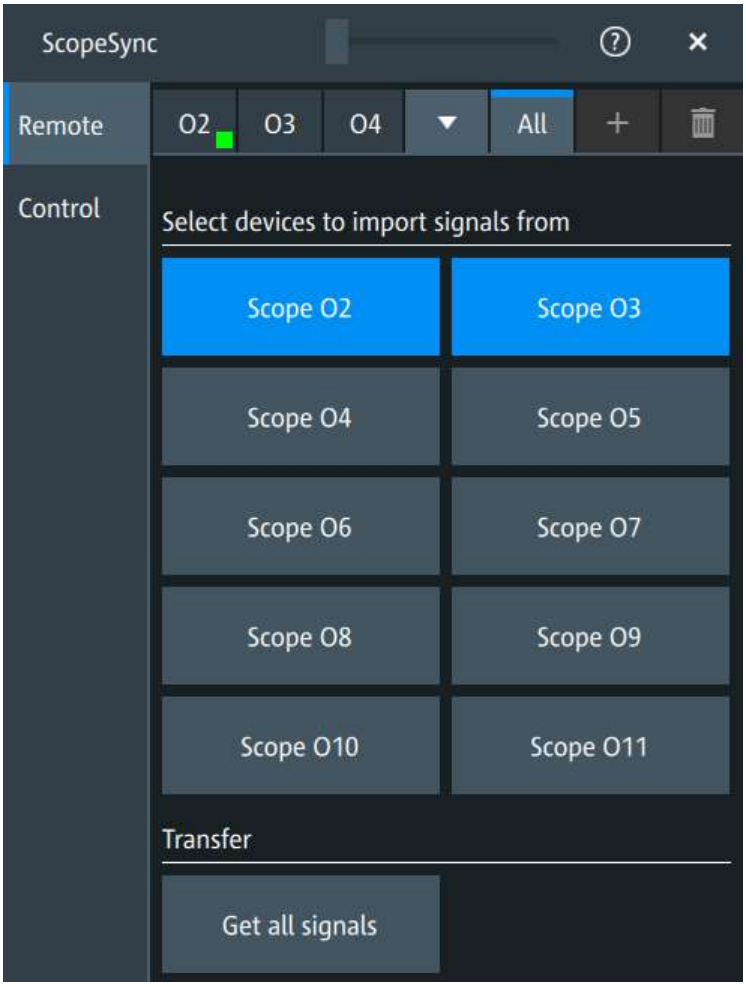

Get all signals
Retrieves the active analog waveforms of the latest acquisition from the selected oscilloscopes. The software connects, retrieves the signals and disconnects the selected scopes one by one. When finished, it restores the connection that was active before starting "Get all signals", or disconnects all if no connection was active.

All selected scopes require a correct cabling and correct connection settings.

Remote command:
`SYNChronize:DEVice<m>:LOADall` on page 2382
`SYNChronize:LOAD:ALL` on page 2383

17.3 Web browser interface (device web)

If the MXO 5 is connected to a computer via LAN, you can operate the instrument from the computer. No additional tools are required, you need only a web browser.

17.3.1 Settings on the MXO 5

The "Network" tab of the "System" dialog box provides network information and settings. See Section 5.1.2, "Network settings", on page 89.

17.3.2 Web browser (device web)

The instrument's web interface works with all W3C compliant browsers.

To open the instrument's web browser


1. Open a browser on a computer connected to the instrument via LAN.
2. Type the instrument's host name or IP address in the address field of the browser on your PC, e.g. "http://11.111.11.222".

   The instrument homepage opens.

17.3.2.1 Instrument homepage

The instrument homepage displays the device information in read-only format, including DNS host names, IP address, and the VISA resource strings.

At the bottom of the homepage, you find the "Device Indicator". Activate the indicator to find the instrument. In the instrument GUI, above the waveform diagram, the connection status icon starts blinking.



The navigation menu of the instrument's browser interface has the following items.



- "LAN Configuration" opens the menu with configuration pages.
- "Web Control" emulates the front panel and shows the instrument display. You see a live image of the instrument, and you can operate the instrument remotely. You can use the keys, the knobs and the menus in the same way as directly on the instrument.
- "File Manager" provides access to the user data that is saved on the instrument, upload and download.

17.3.2.2 LAN configuration


The LAN configuration consists of several parts:

- "General"
- "IP Configuration" provides all mandatory LAN parameters.
- "Advanced Configuration" provides LAN settings that are not declared mandatory by the standard.
- "Ping Client" provides the ping utility to verify the connection between the instrument and other devices.

Changing the LAN parameters requires the "Web password" password, which is set on the instrument.

IP configuration

The "LAN Configuration > IP Configuration" page displays all mandatory LAN parameters and allows their modification. Changing the LAN parameters requires the "Web password" password, which is set on the instrument.

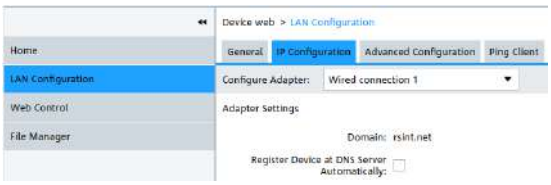


The "IP Address Mode" controls how the IP address for the instrument gets assigned. For the manual configuration mode, at least the static IP address, subnet mask, and default gateway are used to configure the LAN. The automatic configuration mode uses a DHCP server or Dynamic Link Local Addressing to obtain the instrument IP address.

The same settings are available on the instrument under "Menu" > "Settings" > "System" > "Network" > "Advanced".

Advanced configuration

The "LAN Configuration > Advanced Configuration" parameters are used as follows:

- "mDNS and DNS-SD" are two additional protocols: Multicast DNS and DNS Service Discovery are used for device communication in zero configuration networks working without DNS and DHCP.
- "ICMP Ping" allows the instrument to use the ping utility.
- "VXI-11 Discovery" (IPv4) enables the protocol that is used to detect the instrument in the LAN.
- "Privacy Extension" (IPv6) allows the instrument to generate a temporary, random IPv6 address, which is used for outgoing connections.

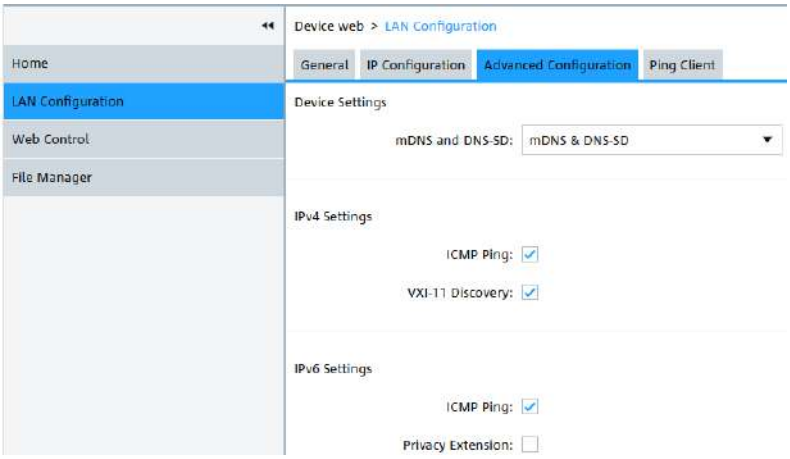

Ping client

Ping is a utility that verifies the connection between the instrument and another device. The ping command uses the `ICMP` echo request and echo reply packets to determine whether the LAN connection is functional. Ping is useful for diagnosing IP network or router failures. The ping utility is not password-protected.



To initiate a ping between the compliant instrument and a second connected device:

1. On the "Advanced Configuration" page, make sure "ICMP ping" is enabled (default).
2. On the "Ping Client" page, enter the IP address of the second device **without the ping command and without any further parameters** into the "Destination address" field (e.g. *11.113.11.203*).
3. Click "Submit".

17.3.2.3 Web control

"Web Control" emulates the front panel and shows the instrument display. You see a live image of the instrument, and you can operate the instrument remotely. You can use the keys, the knobs and the menus in the same way as directly on the instrument.




In the upper right corner above the emulated display, you see some options:

- "Front panel" hides or shows the front panel.
- "Scaling" scales the diagram to show it completely. If disabled, the diagram is shown in its original size.
- "Read-only" disables operating, only viewing is possible.
- The camera icon saves a screenshot.
- The arrows icon hides or shows the menu.

17.3.2.4 File manager

The file manager on the instrument's webpage provides access to the user data that is stored on the instrument, or on a USB flash device connected to the instrument.

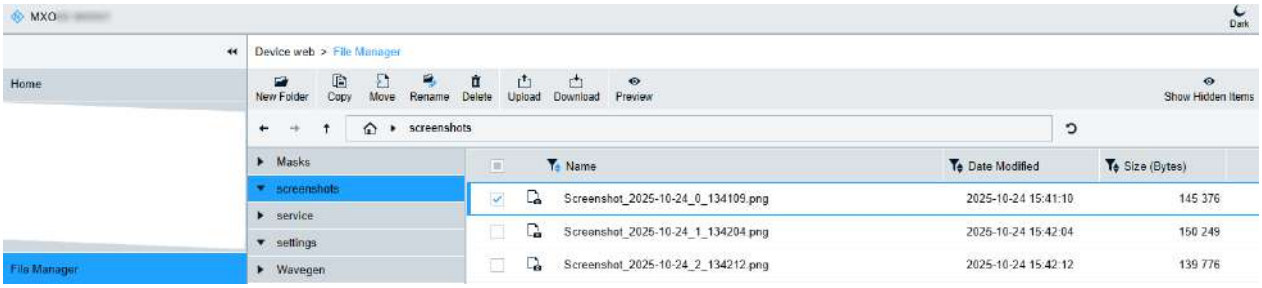

In the browser's file manager, you can organize the data:

- Create folders.
- Copy files within the instrument's file system, or from and to a USB flash device. Multiple files selection is possible.
- Move files within the instrument's file system, or from and to a USB flash device. Multiple files selection is possible.
- Rename files.
- Delete files.
- Upload files from the operating computer to the instrument. Multiple files can be uploaded at once.
- Download files from the instrument to the operating computer. Multiple files selection is possible.
- Preview file content of text files with maximum size of 500 kbyte.

Notes on USB flash devices

If no USB flash device is connected to the MXO 5, the "USB" folder is empty but still listed. Do NOT upload files to this main "USB" folder because data will be lost. Upload files only to the subfolders of connected USB flash devices.

After attaching a USB flash device, creating a screenshot or other actions, the file manager might not display the last change:

► Click the "Refresh" icon on the right of the address field to update the display.

The "Eject" button for USB flash devices has no function when operating the instrument remotely.

17.3.2.5 Mapping the instrument's file system as a network drive


Using web-based distributed authoring and versioning (WebDAV), you can access and exchange files over the internet: move, cut, copy and paste files from the instrument to the computer and vice versa. To prepare file exchange, map the instrument's file system as a network drive in the file explorer of the operating computer:

1. Check if the connection status icon in the upper right corner of the instrument's display is green.

   If it is green, the instrument is connected to the LAN.

2. Open the file explorer on the operating computer.
3. In the left list, right-click "Network" or the entry of the operating computer, and select "Map network drive".
4. Enter the path to the instrument's file system:
   `http://<hostname>/webdavData`.
   Example: `http://MXO58-123456/webdavData`

   You can find the host name in the "Device summary", which is shown when you tap the Rohde & Schwarz logo in the upper right corner of the instrument's screen. The default host name is <instrument_model>-<serial_number>.
5. Activate "Connect using different credentials".

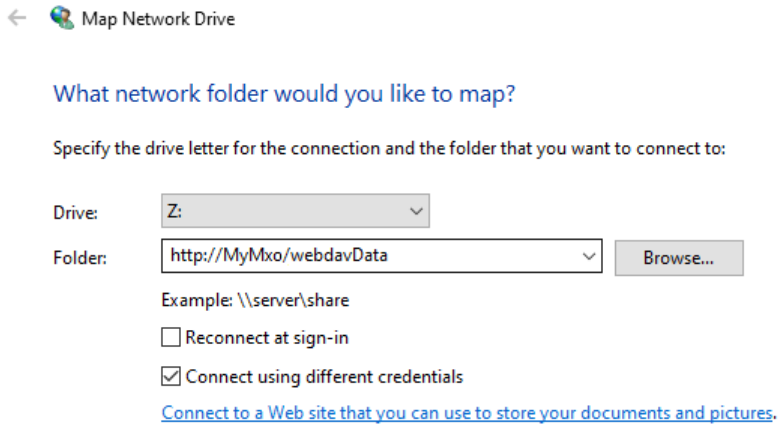

6. Click "Finish".
7. Leave the "User name" and "Password" empty. Click "OK".

If there are problems with the connection, check if the "WebClient" service is running: "Task Manager" > "Services" tab. If the "WebClient" service is not running, start it.

17.4 Remote operation with VNC® client

If the MXO 5 is connected to a computer via LAN, you can operate the instrument from the computer using a VNC client. Therefore, install a VNC client on the computer.

To operate the instrument via VNC client:

1. Start the VNC client.
2. Enter the hostname (device name) of the instrument. You find the name in the instrument information on the oscilloscope. Tap the Rohde & Schwarz logo to show the information.
3. Connect to the instrument.

   You see the display of the oscilloscope and can use the menus, dialogs, SmartGrid and all operating means of the display.

17.5 Remote control

Remote control automates the operation of the MXO 5 using SCPI commands, scripts and programs.

For general information on remote control of Rohde & Schwarz products via SCPI, refer to www.rohde-schwarz.com/rc-via-scpi.

The following sections describe the specific basics of remote control. Definitions specified in the SCPI standard are not provided.

SCPI commands are listed and described in Section 18, "Remote control commands", on page 1080.

- Remote control interfaces and protocols.....1066
- Starting and stopping remote control.....1069

17.5.1 Remote control interfaces and protocols

The MXO 5 supports the following interfaces for remote control:

- LAN interface with HiSLIP protocol, VXI-11 protocol or raw socket.
  See Section 17.5.1.1, "LAN interface", on page 1067.
- USB TMC interface (USB Test & Measurement Class), allows test instruments to be connected to and controlled by a computer via a standard USB cable. A VISA installation is required.
  See Section 17.5.1.2, "USB interface", on page 1069.

17.5.1.1 LAN interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols. The interface details are given in the specifications.

For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ-45 cable (shielded or unshielded twisted-pair category 5 or better). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and the VISA program library must be installed on the controller.

The MXO 5 supports the following ways of LAN communication:

- HiSLIP protocol (high-speed LAN interface protocol): recommended protocol for remote control via LAN, successor of VXI-11.
- VXI-11 protocol: first LAN-based protocol, developed for test and measurement instruments communication as a replacement for the expensive GPIB equipment.
- Raw socket: universal I/O protocol, usually over the port 5025. No need for VISA installation. Communication without control channel, hence there is no support for events like Service Request (SRQ) or Device Clear (DCL).

HiSLIP protocol

The high-speed LAN instrument protocol (HiSLIP) was defined by the IVI Foundation and adopted by the LXI® Consortium as the recommended LAN protocol.

The HiSLIP protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. `Device Clear` or `SRQ`).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections.
- Compatible IEEE 488.2 support for message exchange protocol, device clear, serial poll, remote/local, trigger, and service request.
- It uses a single IANA-registered port (4880), which simplifies the configuration of firewalls.
- It supports simultaneous access of multiple users by providing versatile locking mechanisms.
- Usable for IPv6 or IPv4 networks.

Note that HiSLIP data is sent to the device using the "fire and forget" method with immediate return. A successful return of a VISA operation such as `viWrite()` does not ensure that the instrument has finished or started the requested command. It only indicates that the command has been delivered to the TCP/IP buffers.

VXI-11 protocol

The VXI-11 standard is based on the open network computing remote procedure call (ONC RPC) protocol, which in turn relies on TCP/IP at the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured.

TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

Raw socket mode

With raw socket communication, the instrument communicates directly with the TCP transport layer. A VISA library is not required, but VISA offers an option to open a raw socket session. Service requests and status byte polling are not supported in the raw socket mode.

TCP/IP raw socket connections for SCPI commands use port 5025. Terminate all commands with a line feed (LF).

IP address (VISA resource string) for LAN connections

Only the IP address or a valid DNS host name is required to set up the connection. The host address is part of the "VISA resource string" used by programs to identify and control the target application. The VISA resource string has the form:

- **HiSLIP protocol**
  `TCPIP::<host address>::hislip0[,<port>][::INSTR]`
  Examples:
  IP address is *192.1.2.3*, resource string: `TCPIP::192.1.2.3::hislip0`
  Instrument name is *RSRT1*, resource string: `TCPIP::RSRT1::hislip0`.
  DNS host name is *MXO 5-123456*, resource string:
  `TCPIP::MXO 5-123456::hislip0`.
- **VXI-11 protocol**
  `TCPIP::<host address>[::inst0][::INSTR]`
  Examples
  IP address is *192.1.2.3*, resource string: `TCPIP::192.1.2.3`
  Instrument name is *RSRT1*, resource string: `TCPIP::RSRT1`.
  DNS host name is *MXO 5-123456*, resource string: `TCPIP::MXO 5-123456`.
- **Raw socket communication**
  `TCPIP::<host address>::<port>::SOCKET`
  Example
  TCPIP::192.1.2.3::5025::SOCKET

Where:

- `host address` identifies the MXO 5 in the network, usually the IP address. If the LAN is supported by a DNS server, the host name can be used instead of the IP address. The DNS server (Domain Name System server) translates the host name to the IP address.
- `hislip0` indicates the HiSLIP protocol.
- `inst0` is the default LAN device name. VISA supports several devices running on the instrument. On MXO 5, only one device is configured, so the LAN device name can be omitted.
- `INSTR` specifies a VISA resource of the type INSTR. By default, the VISA resource name control is set to the INSTR class.

- `port` is the port number, for raw socket communication, port 5025 is used.

17.5.1.2 USB interface

For remote control using USB TMC, the controller PC and the instrument are connected over the USB type B interface.

A VISA installation is required, because it contains the necessary USB drivers to be able to connect and communicate with the instrument.

USB resource string

`USB::<vendor ID>::<product ID>::<serial number>[::INSTR]`

- <vendor ID> is the manufacturer ID for Rohde & Schwarz.
- <product ID> is the product identification of the instrument.
- <serial number> is the individual serial number of the instrument.
- [::INSTR] indicates the instrument resource class (optional).

17.5.2 Starting and stopping remote control

17.5.2.1 Starting a remote control session

When you switch on the instrument or start the firmware, it is always in manual operation state ("local" state).

► To start the remote control:

- Send a command from the controller.
- VXI-11 protocol (LAN or USB interface): Use `&GTR` interface message.

While remote control is active, the settings are optimized for maximum measurement speed; the display is switched off.

Operation via the front panel is disabled.

On the screen, two buttons appear in the upper left corner: "Local" and "View".

17.5.2.2 Using the display during remote control

You can observe the screen while a remote control script is executed. Displaying the results of script execution is helpful for program test purposes but tends to slow down the measurement. Therefore it is recommended that you switch off the display in real measurement applications where a tested program script is to be executed repeatedly.

► To switch on the display, do one of the following:

- Tap the "View" button in the upper left corner of the screen.
- Use the `SYSTem:DISPlay:UPDate ON` command.

► To switch off the display, do one of the following:

- Tap the "View" button again.
- Use the `SYSTem:DISPlay:UPDate OFF` command.

17.5.2.3 Returning to manual operation

The MXO 5 switches back to manual operation when the remote connection is closed. Besides, you can return to manual operation manually or via remote control.

► To return to manual operation:

- Tap the "Local" button in the upper left corner of the screen.
- VXI-11 protocol: Use `&GTL` interface message.

17.6 Remote control - status reporting system

The status reporting system stores all information on the current operating state of the instrument, and on errors that have occurred. This information is stored in the status registers and in the error queue. Both can be queried via `STATus...` commands.

17.6.1 Hierarchy of status registers

As shown in the following figure, the status information is of hierarchical structure.

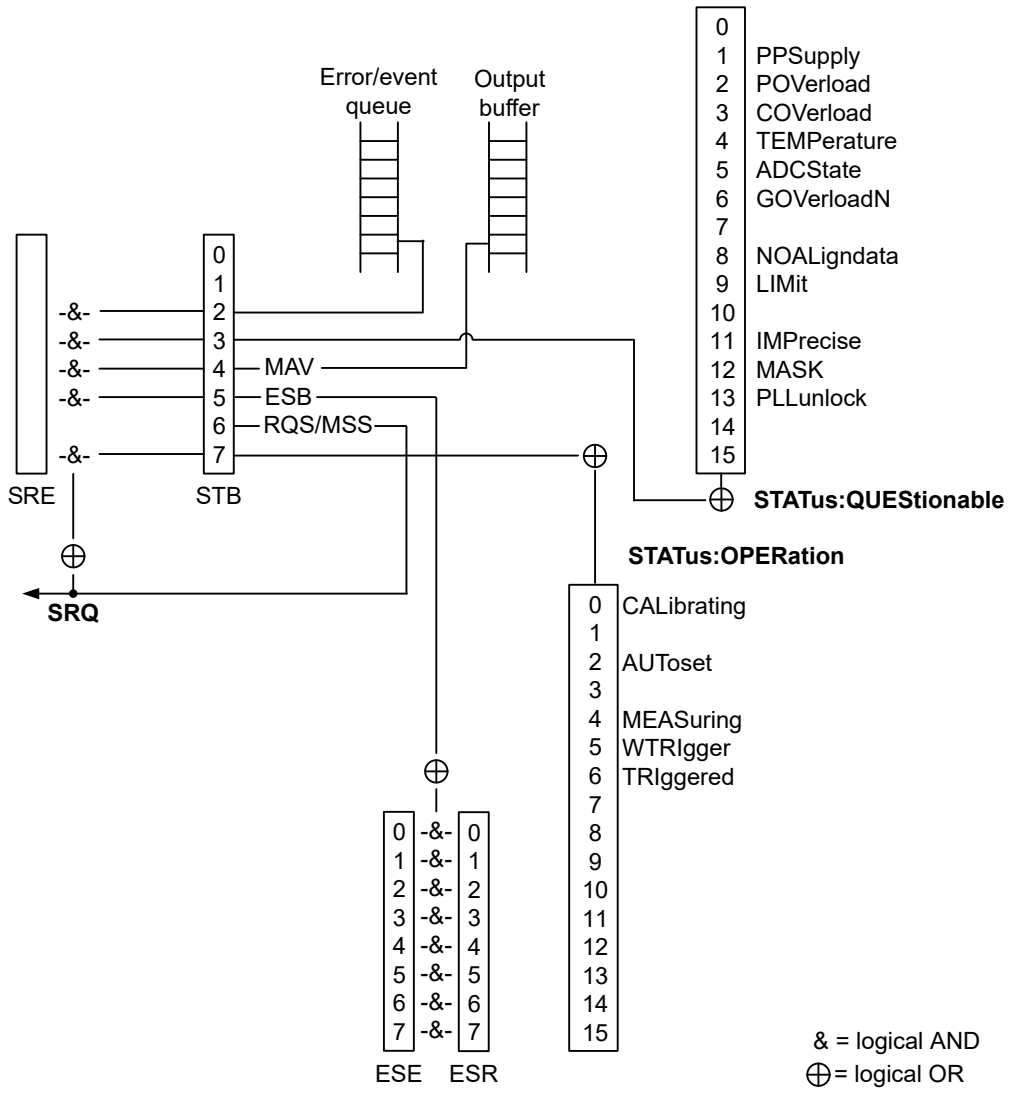


Figure 17-2: Overview of the status registers hierarchy

- **STB, SRE**
  The STatus Byte (`STB`) register and its associated mask register Service Request Enable (`SRE`) form the highest level of the status reporting system. The `STB` provides a rough overview of the instrument status, collecting the information of the lower-level registers.
- **ESR and SCPI registers**
  The STB receives its information from the following registers:
  - The Event Status Register (`ESR`) with the associated mask register standard Event Status Enable(`ESE`).
  - The `STATus:OPERation` and `STATus:QUEStionable` registers are defined by SCPI and contain detailed information on the instrument.
- **Output buffer**

The output buffer contains the messages that the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the overview.


All status registers have the same internal structure.

17.6.2 Structure of a SCPI status register

The STATus:OPERation and the STATus:QUEStionable SCPI status registers consists of five parts.

The individual bits are independent of each other, i.e. each hardware status is assigned a bit number, which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus, the contents of the register parts can be processed by the controller as positive integers.

Description of the five status register parts

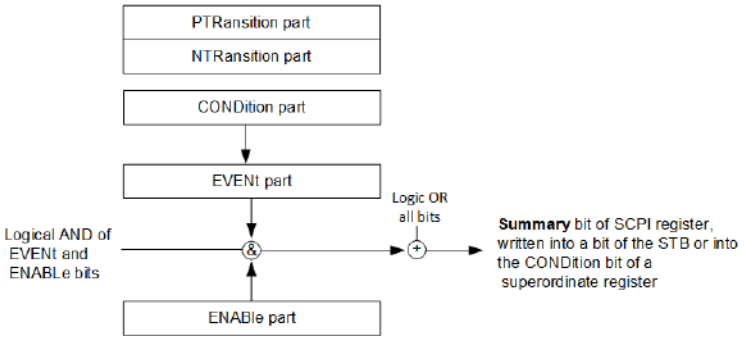

The five parts of a SCPI status register have different properties and functions:

- **CONDition**
  The CONDition part reflects the current instrument status. For summary bits, the CONDition bit mirrors the sum of the enabled EVENt bits of the next lower register.
  This register part can only be read, but not written into or cleared. Its contents are not affected by reading.
- **PTRansition / NTRansition**
  The two transition register parts define which state transition of the CONDition part (none, 0 to 1, 1 to 0 or both) is stored in the EVENt part.
  The **Positive-TRansition** part acts as a transition filter. When a bit of the CONDition part is changed from 0 to 1, the associated PTR bit decides whether the EVENt bit is set to 1.
  - PTR bit =1: the EVENt bit is set.
  - PTR bit =0: the EVENt bit is not set.

  All positive transitions are enabled by default.
  This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the CONDition part is changed from 1 to 0, the associated NTR bit decides whether the EVENt bit is set to 1.

– NTR bit =1: the EVENt bit is set.

– NTR bit =0: the EVENt bit is not set.

All negative transitions are disabled by default.
This part can be written into and read as required. Its contents are not affected by reading.

- **EVENt**
  The EVENt part indicates whether an event has occurred since the last reading. It is the "memory" of the condition part. It allows you to detect the occurrence of events reliably, even if they have changed the state of the CONDition bit for a very brief interval. It only indicates events passed on by the transition filters.
  This part can only be read by the user. **Reading the register clears it.**
- **ENABle**
  The ENABle part determines whether the associated EVENt bit contributes to the summary bit (see below). Each bit of the EVENt part is "ANDed" with the associated ENABle bit (symbol '&'). The results of all logical operations of this part are passed on to the summary bit via an "OR" function (symbol '+').
  ENABle bit = 0: the associated EVENt bit does not contribute to the summary bit
  ENABle bit = 1: if the associated EVENt bit is "1", the summary bit is set to "1" as well.
  This part can be written into and read by the user as required. Its contents are not affected by reading.

17.6.3 Contents of the status registers

17.6.3.1 Status byte (STB) and service request enable register (SRE)

The STatus Byte (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB can thus be compared with the CONDition part of an SCPI register and assumes the highest level within the SCPI hierarchy.

The STB is read using the command *STB? or a serial poll.

The STatus Byte (STB) is linked to the Service Request Enable (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command *SRE and read using the command *SRE?.

Table 17-1: Meaning of the bits used in the status byte

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUEStionable status register summary bit The bit is set if an `EVENt` bit is set in the `QUEStionable` status register and the associated `ENABle` bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the `STATus:QUEStionable` status register.
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (main status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	`STATus:OPERation` status register summary bit The bit is set if an `EVENt` bit is set in the `OPERation` status register and the associated `ENABle` bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the `STATus:OPERation` status register.

17.6.3.2 Event status register (ESR) and event status enable register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the `EVENt` part of a SCPI register. The event status register can be read out using command `*ESR?`.

The ESE corresponds to the `ENABle` part of a SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the STB is set.

The ESE register can be set using the command `*ESE` and read using the command `*ESE?`.

Table 17-2: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation complete This bit is set on receipt of the command `*OPC` exactly when all previous commands have been executed.
1	Not used

Bit No.	Meaning
2	Query error This bit is set if the controller wants to read data from the instrument without having sent a query. It is also set if the controller does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query that is faulty and hence cannot be executed.
3	Device-dependent error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	User request This bit is set when the instrument is switched over to manual control.
7	Power on (supply voltage on) This bit is set when you turn on the instrument.

17.6.3.3 STATus:OPERation register

In the `CONDition` part, this register contains information on which actions the instrument is executing. In the `EVENt` part, it contains information on which actions the instrument has executed since the last reading.

It can be read using the commands `STATus:OPERation:CONDition?` or `STATus:OPERation[:EVENt]?`, see also Section 18.22.2, "STATus:OPERation register", on page 2386.

Table 17-3: Bits in the STATus:OPERation register

Bit No.	Meaning
0	`CALibrating` This bit is set as long as the instrument is performing a self-alignment.
1	Not used
2	`AUToset` This bit is set while the instrument is performing an auto setup.
3	Not used
4	`MEASuring` The bit is set as long as an acquisition - sampling and postprocessing - is running. In run continuous mode, the bit is always set.

Bit No.	Meaning
5	WTRIgger Available only for single acquisitions or the first acquisition of continuous acquisitions. The wait for trigger status bit indicates that the instrument is ready to trigger, and the pre-trigger time is expired. The bit is set for as long as a measurement is running.
6	TRIggered Available only for single acquisitions or the first acquisition of continuous acquisitions. The triggered status bit indicates that the instrument has been triggered.
7 - 15	Not used

17.6.3.4 STATus:QUEStionable register

This register contains specific information on instrument operation and signal reliability. It can be read using the commands `STATus:QUEStionable:CONDition?` and `STATus:QUEStionable[:EVENt]?`.

The remote commands for the STATus:QUEStionable register are described in Section 18.22, "Status reporting", on page 2385.

Table 17-4: Bits in the STATus:QUEStionable register

Bit No.		Meaning
0	-	For future use.
1	PPSupply	This bit is set if probe power supply overload occurs.
2	POVerload	This bit is set if a probe overload occurs.
3	COVerload	This bit is set if a questionable channel overload occurs.
4	TEMPerature	This bit is set if a questionable temperature occurs.
5	ADCState	The bit is set if the signal is clipped on the upper or lower edge of the screen overflow of the ADC occurs.
6	GOVerload	This bit is set if a generator overload occurs.
7	-	For future use.
8	NOALigndata	This bit is set if no alignment data is available - the instrument is uncalibrated.
9	LIMit	For future use.
10	-	For future use.
11	IMPRecise	This bit is set if the magnitude of the signal is too low to get reliable measurement results.
12	MASK	This bit is set if a mask is violated.

Bit No.		Meaning
13	PLLunlock	This bit is set if a phase-locked loop process is unlocked. There are two reasons: ● external reference is missing or defect ● hardware defect of internal PLL
14	-	For future use.

17.6.3.5 Application of the status reporting system

The purpose of the status reporting system is to monitor the status of one or several instruments in a test system. In particular, it monitors continuous measurements to detect errors in the signal. The controller must receive and evaluate the information of all devices.

The following standard methods are used:

- **Service request**: An SRQ is initiated by the instrument.
- Query of a **specific register** by commands
- Query of the **error queue**

These methods are described in the following sections.

Service request

The instrument can send a service request (SRQ) to the controller. Usually, this service request initiates an interrupt at the controller, to which the control program can react appropriately.


An SRQ is initiated if one or several of bits 2, 3, 4, 5 or 7 of the STB are set and enabled in the SRE. Each of these bits combines the information of a lower-level register, the error queue or the output buffer.

The ENABle parts of the status registers can be set such that arbitrary bits in an arbitrary status register initiate an SRQ. To use service requests effectively, set all bits to "1" in the mask registers SRE and ESE.

The SRQ is the only possibility for the instrument to become active on its own. Configure the instrument so that it initiates a service request if errors occur. And ensure that your program reacts appropriately to service requests.

Query of a register

The STB and ESR registers contain 8 bits, the SCPI registers 16 bits. The contents of a status register are specified and transferred as a single decimal number. Therefore, each bit is assigned a weighted value. The decimal number is calculated as the sum of the weighted values of all bits in the register that are set to 1.

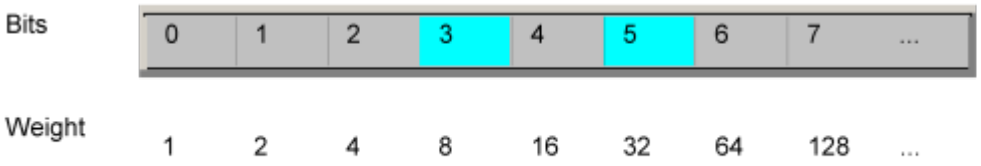

Example:

The decimal value 40 = 32 + 8 indicates that bits no. 3 and 5 in the status register (e.g. the `QUEStionable` status summary bit and the `ESB` bit in the `STatus` byte) are set.

17.6.4 Error queue

Each error state in the instrument leads to an entry in the error queue.

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

17.6.5 Reset values of the status reporting system

The following table contains the commands and events that reset the status reporting system. Only `*RST` and `SYSTem:PRESet` change the functional instrument settings, all others do not.

`DCL` means Device clear and is a GPIB interface command. The command aborts the processing of the commands received and sets the command processing software to a defined initial state and does not change the instrument settings. In a VISA implementation, viClear translates to the DCL interface command.

All other commands are explained in the "Remote control commands" section.

Table 17-5: Resets of the status reporting system

Event	`DCL` **(GPIB)** **viClear (VISA)** **Device clear**	`*RST` **or** `SYSTem:PRESet`	`STATus:PRESet`	`*CLS` **Clear status**
Clear STB, ESR	-	-	-	yes
Clear SRE, ESE	-	-	-	-
Clear EVENt parts of the registers	-	-	-	yes
Clear ENABle parts of all OPERation and QUEStionable registers; Fill ENABle parts of all other registers with "1".	-	-	yes	-

Event	`DCL` **(GPIB)** **viClear (VISA)** **Device clear**	`*RST` **or** `SYSTem:PRESet`	`STATus:PRESet`	`*CLS` **Clear status**
Fill PTRansition parts with "1"; Clear NTRansition parts	-	-	yes	-
Clear error queue	-	-	-	yes
Clear output buffer	yes	1)	1)	1)
Clear command processing and input buffer	yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.				

18 Remote control commands

This section describes all remote commands available for MXO 5 and provides examples and information on how to use the commands.

For general information on remote control of Rohde & Schwarz products via SCPI, refer to www.rohde-schwarz.com/rc-via-scpi.

See also Section 17.5, "Remote control", on page 1066 and Section 17.6, "Remote control - status reporting system", on page 1070 for further information on remote control.

The descriptions of the remote commands assume a MXO 5 with the highest available bandwidth and number of channels. Depending on your model, some of the available command ranges can differ from the values stated in the following sections.

18.1 Conventions used in remote command description

The basics of SCPI command structure, syntax and command parameters are explained in www.rohde-schwarz.com/rc-via-scpi.

SCPI-confirmed commands are explicitly marked in the command descriptions. Commands without SCPI label are instrument-specific. However, their syntax follows SCPI rules.

The following conventions are used in the remote command descriptions:

- *Command usage*
  If not specified otherwise, commands can be used both for setting and for querying parameters.
  If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- *Parameter usage*
  If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.
  Parameters required only for setting are indicated as "Setting parameters".
  Parameters required only to refine a query are indicated as "Query parameters".
  Parameters that are only returned as the result of a query are indicated as "Return values".
- *Conformity*
  Commands that are taken from the SCPI standard are indicated as "SCPI confirmed". All commands used by the MXO 5 follow the SCPI syntax rules.
- *Asynchronous commands*
  A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an "Asynchronous command".
- *Reset values (*RST)*

Default parameter values that are used directly after resetting the instrument (`*RST` command) are indicated as "*RST" values, if available.

- *Default unit*
  The default unit is used for numeric values if no other unit is provided with the parameter.


18.2 Finding the appropriate command

In the following sections, the commands are sorted according to the menu and dialog structure.

A list of all commands in alphabetical order is given in the "List of Commands" at the end of this documentation.

To find the appropriate command for a setting easily, you can use the context help:

1. Enable the "Help" icon on the toolbar.



2. Tap the parameter for which you need information.

   The "Help" window opens and displays the comprehensive description and the corresponding remote command.

3. Tap the remote command link to open the command description.

18.3 Error messages on remote commands

The systerm returns error codes and messages if it cannot execute a command, or if there is no valid result.

Error message	Description
-131, "Invalid suffix"	The measurement with the used suffix is not configured, and similar situations.
-221, "Settings conflict“	The command is not available with current settings. If you change the related settings, the command might work.
-394; "Overload detected"	The result is not trustworthy because the data is not in the ADC range.
-395; "Value not set"	Message is returned, e.g. for a measurement results when the acquisition isn’t complete. It is the default for results after preset or when relevant settings have changed.
-396; "Invalid data"	The acquisition is complete, but some requirements are not met that are required to calculate the result.

Error message	Description
-397; "Not available"	The command is not available due to hardware restrictions, missing option, inappropriate probe is connected, and other misfits.
-398; "Operation aborted"	
-399; "Operation failed"	

18.4 Frequently used parameters and suffixes

This chapter describes in general those parameters and suffixes that are used in several subsystems.

18.4.1 Waveform parameter

Many commands require one of the waveforms to be specified as source. The following table lists all waveforms. For each command using a waveform parameter, the available waveforms are specified in the command description.

Waveform	Description
C1 | C2 | ... | C8 CHAN1 = C1, CHAN2 = C2, CHAN3 = C3, CHAN4 = C4 , CHAN5 = C5, CHAN6 = C6, CHAN7 = C7, CHAN8 = C8	Analog channel waveforms
M1 | M2 | ... | M8	Math waveforms
R1 | R2 | ... | R8	Reference waveforms
XY1 | XY2 | XY3 | XY4	XY-waveforms
SBUS1 | SBUS2 | SBUS3 | SBUS4	Serial buses
D0 | D1 | D2 | ... | D14 | D15	Digital channels
PBUS1 | PBUS2 | PBUS3 | PBUS4	Digital buses
TRK1 | TRK2 | TRK3 | ... | TRK24	Track waveforms
HWAVeform1 | HWAVeform2 | ... | HWAVeform8	Histograms on waveforms
HMEas1 | HMEas2 | HMEas3 | ... | HMEas24	Histograms on measurement results
O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)	Analog channels of ScopeSync-connected oscilloscopes. Up to 7 oscilloscope connections can be configured: O2, O3, O4, ... , O8. One of these configurations can be activated at a time.
SPECMAXH1 | SPECMINH1 | SPECNORM1 | SPECAVER1 | SPECMAXH2 | SPECMINH2 | SPECNORM2 | SPECAVER2 | SPECMAXH3 | SPECMINH3 | SPECNORM3 | SPECAVER3 | SPECMAXH4 | SPECMINH4 | SPECNORM4 | SPECAVER4	Spectrum traces: SPECMAXH : Spectrum max hold SPECMINH: Spectrum min hold SPECNORM: Spectrum normal SPECAVER: Spectrum average

Waveform	Description
PA1QPOWER | PA2QPOWER | ... | PA6QPOWER	Power waveforms of power quality analysis
PA1HPOWER1 | PA2HPOWER1 | ... | PA6HPO-WER1|	Power waveforms of power harmonics analysis, only available for standards EN 61000-3-2 Class C and EN 61000-3-2 Class D
PA1SPOWER | PA2SPOWER | ... | PA6SPOWER	Power waveforms of switching loss analysis
PA1IPOWER | PA2IPOWER | ... | PA6IPOWER	Input power waveforms of power efficiency analysis
PA1OPOWER1 | PA2OPOWER1 | ... | PA6OPO-WER1 | PA1OPOWER2 | PA2OPOWER2 | ... | PA6OPOWER2 | PA1OPOWER3 | PA2OPOWER3 | ... | PA6OPOWER3	Output power waveforms of power efficiency analy-sis
PA1TOPOWER | PA2TOPOWER | ... | PA6TOP-OWER	Total power waveforms of efficieny analysis, requires more than 4 channels
PA1SOA | PA2SOA | ... | PA6SOA	Waveform of power safe operating area (SOA) analysis
PTHREE<n>QPOWER1 | PTHREE<n>QPOWER2 | PTHREE<n>QPOWER3 | PTHREE<n>QTPOWER (<n> = 1 to 6)	3-phase power quality waveforms
PTHREE<n>HPOWER1 | PTHREE<n>HPOWER2 | PTHREE<n>HPOWER3 | PTHREE<n>HTPOWER (<n> = 1 to 6)	3-phase power harmonics waveforms; available only for EN 61000-3-2 Class C and Class D
PTHREE<n>EIP1 | PTHREE<n>EIP2 | PTHREE<n>EIP3 | PTHREE<n>EITP (<n> = 1 to 6)	3-phase efficiency input power waveforms
PTHREE<n>EOP1 | PTHREE<n>EOP2 | PTHREE<n>EOP3 | PTHREE<n>EOTP (<n> = 1 to 6)	3-phase efficiency output power waveforms
PTHREE<n>MIP1 | PTHREE<n>MIP2 | PTHREE<n>MIP3 | PTHREE<n>MITP (<n> = 1 to 6)	3-phase motor drive input mechanical tracks
PTHREE<n>MOP1 | PTHREE<n>MOP2 | PTHREE<n>MOP3 | PTHREE<n>MOTP (<n> = 1 to 6)	3-phase motor drive output mechanical tracks
PTHREE<n>TIA | PTHREE<n>TOA (<n> = 1 to 6)	3-phase motor drive input and output angle tracks
PTHREE<n>TIS | PTHREE<n>TOS (<n> = 1 to 6)	3-phase motor drive input and output speed tracks
PTHREE<n>TIT | PTHREE<n>TOT (<n> = 1 to 6)	3-phase motor drive input and output torque tracks
PTHREE<n>TIMP | PTHREE<n>TOMP (<n> = 1 to 6)	3-phase motor drive input and output mechanical power tracks
PTHREE<n>TTE (<n> = 1 to 6)	3-phase motor drive efficiency tracks
FGAin | FPHase | FIMP	Resulting waveforms of frequency and impedance analysis
FREF1 | FREF2 | FREF3 | FREF4	References of frequency analysis waveforms
EYE1 | EYE2 | ... | EYE8	Eye diagrams

18.4.2 Slope parameter

The slope parameter is used with several trigger and search condition commands.

Slope	Description
POSitive	Rising edge, which is a positive voltage change.
NEGative	Falling edge, which is a negative voltage change.
EITHer	Rising as well as the falling edge.

18.4.3 Polarity parameter

The polarity parameter is used with several trigger and search condition commands.

Polarity	Description
POSitive	Positive going pulses.
NEGative	Negative going pulses.
EITHer	Both positive and negative going pulses.

18.5 Programming examples

18.5.1 SmartGrid layout with zoom


The following example uses 3 sine waves, all with frequency 20 MHz and an amplitude of ±0.4 V. The vertical scale is 100 mV/div, the time scale is 20 ns/div.

In the example, 2 layouts are created, waveforms are assigned, and zoom and spectrum are added.


For a description of the commands, see:

- Section 18.8.3, "SmartGrid", on page 1100
- Section 18.12.1, "Zoom", on page 1246
- Section 18.16.1, "Spectrum setup", on page 1360


```
//Prepare: 3 channel signals.
//Enable C1, C2 and C3.
CHAN1:STAT 1
CHAN2:STAT 1
CHAN3:STAT 1
```

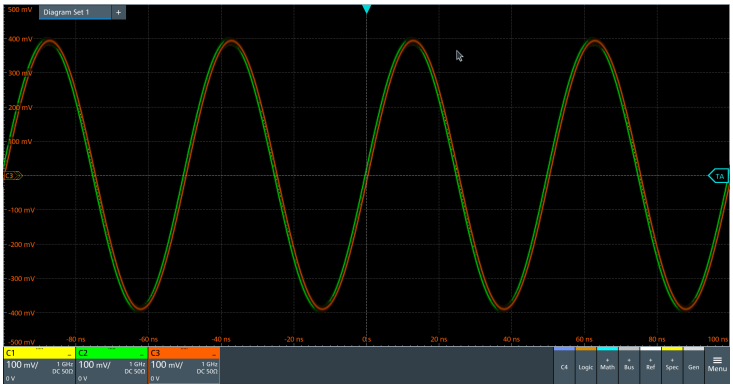

```
//Create new diagrams for C2 and C3.
//Assign sources C2 and C3 to these diagrams.
LAY:DIAG2:ENAB 1
LAY:DIAG2:SOUR C2
LAY:DIAG3:ENAB 1
LAY:DIAG3:SOUR C3
//Create new node (node 2) and assign new diagrams to that node
//Place C2 on top, C3 at bottom
LAY:NODE2:ENAB 1
LAY:NODE2:CHIL1:CONT:TYPE DIAG
LAY:NODE2:CHIL1:CONT:ID 2
LAY:NODE2:CHIL2:CONT:TYPE DIAG
LAY:NODE2:CHIL2:CONT:ID 3
LAY:NODE2:STYP VERT
//Insert node 2 into the base node (initial node)
//Diagram1 is initially located at child 1
LAY:NODE1:CHIL2:CONT:TYPE NODE
LAY:NODE1:CHIL2:CONT:ID 2
//Place both nodes side by side
LAY:NODE1:STYP HOR
```

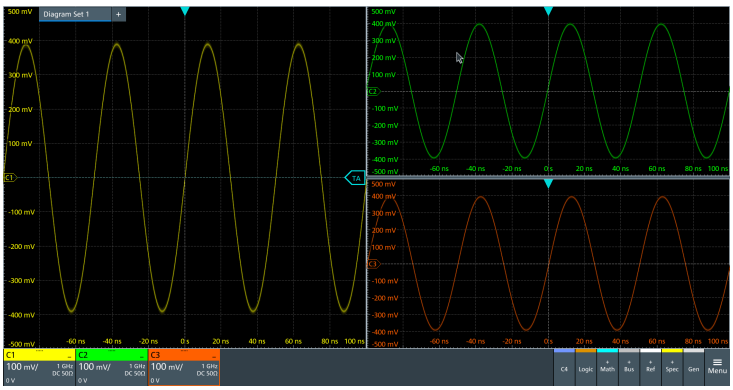


```
//Add zoom to C3. The zoom is located in diagram 3.
LAY:ZOOM:ENAB 1
LAY:ZOOM:SOUR 3
```

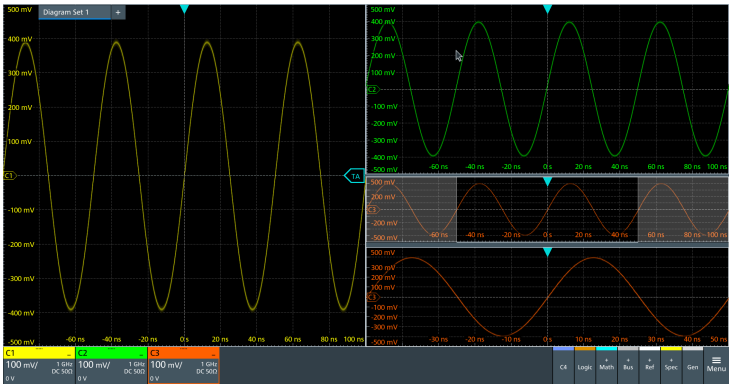


```
//Add a second layout with C1 and spectrum of C1.
//By default, the new layout is empty.
LAY2:ENAB 1
```




```
//Assign C1 to layout 2.
LAY2:DIAG1:SOUR C1
```

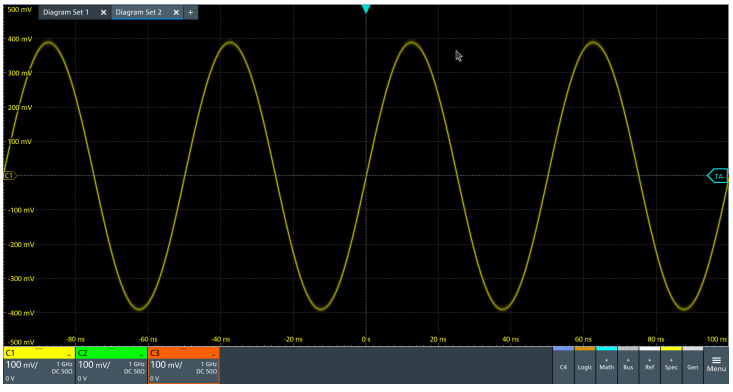


```
//Turn on spectrum of C1.
//By default, the spectrum is set below its analog source, and into the next
//free diagram (here diagram 2).
CALC:SPEC:STAT 1
CALC:SPEC:FREQ:CENT 20e6
CALC:SPEC:FREQ:SPAN 4e6
CALC:SPEC:FREQ:SCAL 15
```

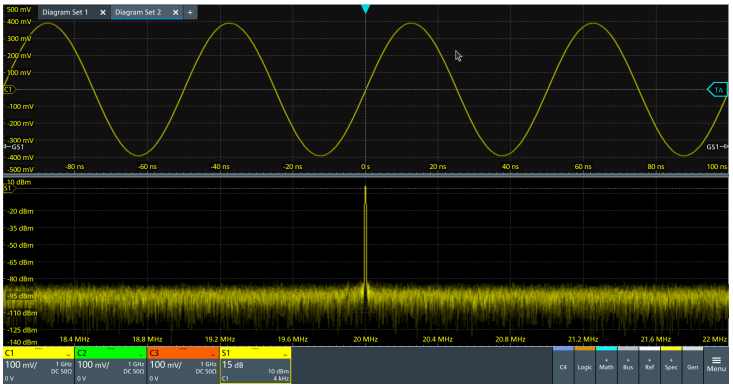


```
//Set C1 and spectrum side by side by changing the split type.
LAY2:NODE1:STYP HOR
```

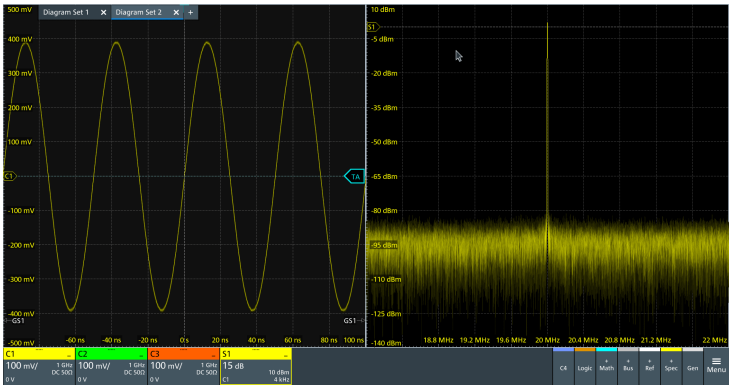


```
//Add zoom to spectrum. The zoom is located in layout 2, in diagram 2.
LAY2:ZOOM:ENAB 1
LAY2:ZOOM:SOUR 2
```

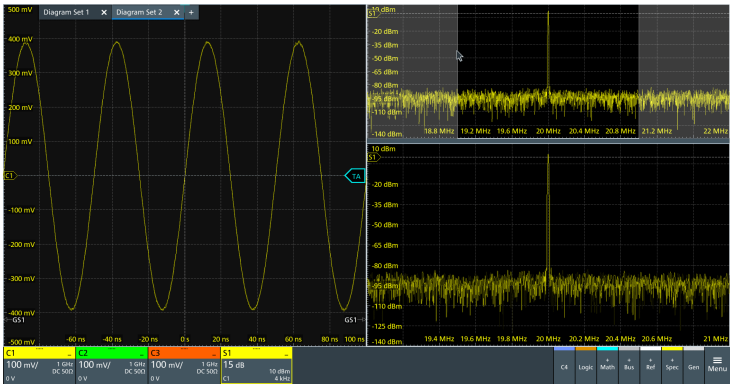

```
//Change zoom area.
LAY2:ZOOM:HOR:MODE REL
LAY2:ZOOM:HOR:REL:START 48
LAY2:ZOOM:HOR:REL:STOP 52
```

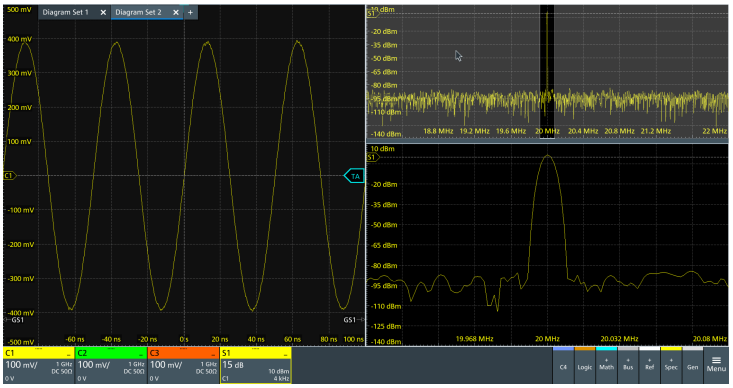

```
//Switch back to first layout (Tab 1).
LAY1:SACT
```

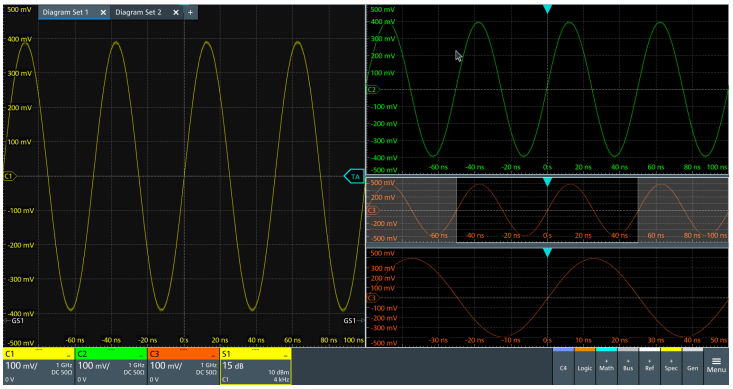

18.5.2 Creating a mask

The example creates a segment in mask 1 and defines the positions of the corner points.

```
:MTESt:ADD                      //Create mask 1
:MTESt:SEGMent:ADD              //Create segment 1 in mask 1
:MTESt:SEGMent:POINt:ADD        //Add 4 points at coordinate 0;0
:MTESt:SEGMent:POINt:ADD
:MTESt:SEGMent:POINt:ADD
:MTESt:SEGMent:POINt:ADD
:MTESt:SEGMent:POINt:COUNt?     //Query the number of points
-->4
:MTESt:SEGMent:POINt:X -60NS    //Set the coordinates of point 1
:MTESt:SEGMent:POINt:Y 50 MV
:MTESt:SEGMent:POINt2:X -40NS   //Set the coordinates of point 2
:MTESt:SEGMent:POINt2:Y -50 MV
:MTESt:SEGMent:POINt3:X -20NS   //Set the coordinates of point 3
:MTESt:SEGMent:POINt4:Y 100 MV  //Set the coordinates of point 4, X = 0
```

18.5.3 Saving screenshots to file

The example saves three display images in png format to the files `Print.png`, `Print_001.png`, and `Print_002.png` on USB flash drive in the directory `/run/media/usb/<MyDriveName>`. For <MyDriveName>, use the name that was defined when formatting of the USB flash drive. To get a correct screenshot, turn on the display first.

Command description in: Section 18.13.8, "Screenshots", on page 1294.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

► Connect a USB flash drive.

```
SYST:DISP:UPD ON
HCOP:DEST MMEM
HCOP:DEV:LANG PNG
*OPC?
MMEM:NAME '/run/media/usb/<MyDriveName>/Print.png'
HCOP:IMMediate; *OPC?
HCOP:IMM:NEXT; *OPC?
HCOP:IMM:NEXT; *OPC?
```

18.5.4 Data transfer in roll mode

The example shows the effects of `EXPort:WAVeform:SCOPe` and `ACQuire:ROLLmode:OSCapture` in roll mode.

Sample rate mode and record length mode are set to AUTO, and the record length is 10 M points.

```
ACQuire:SRATe:MODE AUTO
ACQuire:POINts:MODE AUTO
ACQuire:POINts?
--> 10000000
ACQuire:ROLLmode:OSCapture OFF
CHANnel1:DATA:HEADer?
--> -5,4.999999,10000000,1     //10 M points of data are transferred
ACQuire:ROLLmode:OSCapture ON
EXPort:WAVeform:SCOPe DISP     //Export of the displayed data
CHANnel1:DATA:HEADer?
--> -5,4.999999,10000000,1     //10 M points of data are transferred
EXPort:WAVeform:SCOPe ALL      //Export of all data
CHANnel1:DATA:HEADer?
--> -31.702346,4.99999999,36702346,1   //36.7 M points of data are transferred
```

18.6 Common commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CAL? 1090
*CLS 1090
*IDN? 1091
*OPC 1091
*OPT? 1091
*RCL 1091
*RST 1092
*SAV 1092
*SRE 1092
*STB? 1092
*TRG 1092
*TST? 1093
*WAI 1093

***CAL?**

Starts a self-alignment of the instrument, and then queries a status response. Return values ≠ 0 indicate an error.

Return values:

<State> 0: no error
1: alignment failed
2: not aligned, e.g. init
3: device needs longer warmup time before selfalignment can start
4: input signal connected during selfalignment

Usage: Query only

Manual operation: See "Start alignment" on page 117

***CLS**

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENt` part of the `QUEStionable` and the `OPERation` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

***IDN?**

Identification

Returns the instrument identification.

Return values:

<ID> "Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>"

Example: `Rohde&Schwarz,MXO5,1802.1008k08/100222,2.00.0.2`
Model assignment:

Usage: Query only

Manual operation: See "Instrument" on page 88

***OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query writes a "1" into the output buffer when all preceding commands have been executed, which is useful for command synchronization.

***OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description, refer to the specifications document.

Return values:

<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

Usage: Query only

***RCL** <Number>

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command `*SAV` with the associated number.

The stored instrument settings do not include waveform generator settings.

It also activates the instrument settings which are stored in a file and loaded using `MMEMory:LOAD:STATe`.

***RST**

Reset

Sets the instrument to a default status. The default settings are indicated in the description of commands. Default settings are fixed, they are *not* changed by user-defined preset.

The command does not affect the waveform generator settings. To reset the generator, use `WGENerator<wg>:PRESet`.

Usage: Setting only

Manual operation: See "Preset" on page 114

***SAV** <Number>

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command `*RCL` with the associated number.

Waveform generator settings are not included.

To transfer the stored instrument settings in a file, use the command `:MMEM:STOR:STAT`.

***SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form. Bit 6 (MSS mask bit) is always 0.

Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the TRIGger subsystem.

*TRG corresponds to the INITiate:IMMediate command.

Usage: Event

***TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code.

Return values:

<ErrorCode> **integer > 0 (in decimal format)**
An error occurred.

0
No errors occurred.

Usage: Query only

Manual operation: See "Run tests" on page 120

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

Usage: Event

18.7 General remote settings

This section describes commands that affect many other remote commands in different applications of the MXO 5.

FORMat[:DATA] 1093
FORMat:BORDer 1094
FORMat:BPATtern 1095
SYSTem:DISPlay:UPDate 1095
SYSTem:DISPlay:MESSage:STATe 1095
SYSTem:DISPlay:MESSage[:TEXT] 1096

FORMat[:DATA] [<Format>],[<Length>]

Selects the data type that is used for transmission of data from analog channels, math and reference waveforms, and some measurement results from the instrument to the controlling computer.

For INT and REAL formats, use `FORMat:BORDer` to set the byte order.

If you need physical data (e.g. in Volt or Ampere) for further analysis, use the floating point formats (REAL) for export. No data conversion is needed.

Parameters:

<Format>,<Length> ASCii | REAL,32 | REAL,64 | INT,8 | INT,16 | INT,32

ASCii
Data values are returned in ASCII format as a list of comma-separated values in floating point format. The length can be omitted. It is 0, which means that the instrument selects the number of digits to be returned. The query returns both values (`ASC,0`).

REAL,32
Physical data in single precision, 32 bit floating point format. The data is stored as binary data (Definite Length Block Data according to IEEE 488.2). Each waveform value is formatted in the 32-Bit IEEE 754 floating point format.
The schema of the result string is as follows:
`#41024<value1><value2>…<value n>`, with:
`#4` = number of digits (= 4 in the example) of the following number
`1024` = number of following data bytes (= 1024 in the example)
`<value>` = 4-byte floating point values
For large data (≥ 1 GB), the result string starts with "#(data length)". The number inside the parentheses indicates the real data length in bytes.

REAL,64
Double precision, 64 bit floating point format.

INT,8 | INT,16 | INT,32
Signed integer data with length 8 bit, 16 bit, or 32 bit.
The result string has the same schema as the REAL format.
For INT,16, you can set the byte order using the command.
For digital channel data, math and histogram data, INT formats are not available.

*RST: ASCii

Example:

```
FORMat:DATA REAL,32
FORMat:DATA?
REAL,32
```

Usage: SCPI confirmed
Asynchronous command

Manual operation: See "Transfer data format" on page 94

FORMat:BORDer <ByteOrder>

Sets the endianness.

The command is only relevant for data in integer and float format.

Parameters:

<ByteOrder> LSBFirst | MSBFirst

LSB first: little endian, least significant byte first
MSB first: big endian, most significant byte first

*RST: LSBFirst

Example: A number in INT32 format is 439041101, which is hex 1A2B3C4D.
With LSBFirst (default), 4D 3C 2B 1A is returned.
With MSBFirst, 1A 2B 3C 4D is returned.

Usage: Asynchronous command

FORMat:BPATtern <BtPattFmt>

Sets the number format for remote bit pattern queries on serial protocols.

Parameters:

<BtPattFmt> DEC | HEX | OCT | BIN | ASCII | ASCii | STRG

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Bit pattern format" on page 94

SYSTem:DISPlay:UPDate <DisplayUpdate>

Defines whether the display is updated while the instrument is in the remote state.
If the display is switched off, the normal GUI is replaced by a static image while the instrument is in the remote state. Switching off the display can speed up the measurement. OFF is the recommended state.

Parameters:

<DisplayUpdate> OFF | ON

`ON| 1`: The display is shown and updated during remote control.
`OFF| 0`: The display shows a static image during remote control.

*RST: OFF

Example:
```
SYSTem:DISPlay:UPDate 1
```
Switch on the display update.

Usage: Asynchronous command

SYSTem:DISPlay:MESSage:STATe <DispMessSt>

Enables and disables the display of an additional text in remote control.

To define the text, use `SYSTem:DISPlay:MESSage[:TEXT]`.

Parameters:
<DispMessSt> OFF | ON
*RST: OFF

Usage: Asynchronous command

SYSTem:DISPlay:MESSage[:TEXT] <DisplayMessage>

Defines an additional text that is displayed during remote control operation.

To enable the text display, use `SYSTem:DISPlay:MESSage:STATe`.

Parameters:
<DisplayMessage>

Usage: Asynchronous command

18.8 Instrument setup

- System 1096
- Network drive mapping 1098
- SmartGrid 1100
- Toolbar 1107
- Annotations 1108
- Appearance 1120
- Display 1126
- Save/Recall 1129
- Preset 1131
- Maintenance 1132

18.8.1 System

SYSTem:COMMunicate:NET[:HOSTname] 1096
SYSTem:DATE 1097
SYSTem:EXIT 1097
SYSTem:FW:FILepath 1097
SYSTem:PRESet 1097
SYSTem:SHUTdown 1098
SYSTem:FW:STARt 1098
SYSTem:TIME 1098

SYSTem:COMMunicate:NET[:HOSTname] <Hostname>

Sets the host name of the instrument, which is required when configuring a network. After changing the host name, you have to reboot the instrument.

The query `SYSTem:COMMunicate:NET:HOSTname?` returns the currently defined host name.

Parameters:

<Hostname> String parameter

Usage: Asynchronous command

Manual operation: See "Host name" on page 89

SYSTem:DATE <Year>,<Month>,<Day>

Sets the date of the internal calendar.

Parameters:

<Year> Year, to be entered as a four-digit number (including the century and millennium information)

Range: 2012 to 2099
Increment: 1
*RST: 2012

<Month> Range: 1 (January) to 12 (December)
Increment: 1
*RST: 1

<Day> Range: 1 to maximum number of days in the specified month
Increment: 1
*RST: 1

Example: `SYSTem:DATE?`
Returned value: `2022,09,28`

Usage: Asynchronous command

SYSTem:EXIT

Starts the shutdown of the firmware.

Usage: Setting only
Asynchronous command

SYSTem:FW:FILepath <FilePath>

Sets the path and the filename of the firmware installation file.

Parameters:

<FilePath> String with path and filename

Usage: SCPI confirmed
Asynchronous command

SYSTem:PRESet

Resets the instrument to the default state, has the same effect as `*RST`.

Usage: Setting only
SCPI confirmed
Asynchronous command

Manual operation: See "Factory preset" on page 115

SYSTem:SHUTdown

Starts the shutdown of the instrument (firmware and operating system).

Usage: Setting only
Asynchronous command

SYSTem:FW:STARt

Starts the firmware update. Before starting, make sure that the correct path is set with `SYSTem:FW:FILepath`.

Usage: Event
SCPI confirmed
Asynchronous command

SYSTem:TIME <Hours>,<Minutes>,<Seconds>

Returns the current time of the clock.

Parameters:

<Hours>
Range: 0 to 24
Increment: 1
*RST: 1

<Minutes>
Range: 0 to 59
Increment: 1
*RST: 1

<Seconds>
Range: 0 to 59
Increment: 1
*RST: 1

Usage: Asynchronous command

18.8.2 Network drive mapping

MMEMory:NDRive<m>:CONNect 1099
MMEMory:NDRive<m>:DCONnect 1099
MMEMory:NDRive<m>:LPATh 1099
MMEMory:NDRive<m>:NPATh 1099
MMEMory:NDRive<m>:PWORd 1100
MMEMory:NDRive<m>:UNAMe 1100

MMEMory:NDRive<m>:CONNect

Connects the remote network folder to the local folder.

Suffix:
<m> 1 to 8, index of the network drive

Usage: Event
Asynchronous command

Manual operation: See "Connect, Disconnect, Connection state" on page 94

MMEMory:NDRive<m>:DCONnect

Disconnects the remote network folder from the local folder.

Suffix:
<m> 1 to 8, index of the network drive

Usage: Event
Asynchronous command

Manual operation: See "Connect, Disconnect, Connection state" on page 94

MMEMory:NDRive<m>:LPATh <LocalPath>

Sets the local folder on the MXO 5, to which the network folder is mapped. With this name, you can access the connected folder on the instrument.

Suffix:
<m> 1 to 8, index of the network drive

Parameters:
<LocalPath> String with the path of the local folder

Usage: Asynchronous command

Manual operation: See "Local folder" on page 93

MMEMory:NDRive<m>:NPATh <FilePath>

Sets the network folder that is mapped to the local folder.

Suffix:
<m> 1 to 8, index of the network drive

Parameters:
<FilePath> String with the full path in UNC syntax, for example, `\\net1\data\team1\osc`.

Usage: Asynchronous command

Manual operation: See "Network folder" on page 93

MMEMory:NDRive<m>:PWORd <Password>

Sets the password that is used to access the network folder.

Note that the SCPI protocol is NOT encrypted, so the password can be read on the network. Use the password at your own risk.

Suffix:
<m> 1 to 8, index of the network drive

Setting parameters:
<Password> String with the password

Usage: Setting only
Asynchronous command

Manual operation: See "User name, Password" on page 93

MMEMory:NDRive<m>:UNAMe <UserName>

Sets the user name that is used to access the network folder.

Suffix:
<m> 1 to 8, index of the network drive

Parameters:
<UserName> String with the user name

Usage: Asynchronous command

Manual operation: See "User name, Password" on page 93

18.8.3 SmartGrid

The following `LAYout` commands configure the SmartGrid. In manual operation, you configure the SmartGrid by drag and drop.See Section 4.7, "Rohde & Schwarz SmartGrid", on page 74.

Table 18-1: Terms and definitions of SmartGrid configuration

Term	Definition
Layout	A layout is a SmartGrid configuration. Several layouts can exist but only one layout is active. By default, layouts are named "Tab <n>" on the display.
Children	A child is an area where data (data table, result table) or waveforms (diagram) are displayed. A node can also be a child. A child can be empty.
Node	A node consists of one or two children. A node is created by default with one child that has content.
Diagram	A diagram displays waveforms, the graphical visualization of data.

LAYout<ly>:COUNt? 1101
LAYout<ly>[:ENABle] 1101
LAYout<ly>:ACTive 1102

LAYout<ly>:SACTive....1102
LAYout<ly>:LABel....1102
LAYout<ly>:DIAGram<da>:COUNt?....1102
LAYout<ly>:DIAGram<da>[:ENABle]....1103
LAYout<ly>:DIAGram<da>:SOURce....1103
LAYout<ly>:DIAGram<da>:LABel....1103
LAYout<ly>:NODE<no>:COUNt?....1104
LAYout<ly>:NODE<no>[:ENABle]....1104
LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:ID....1104
LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:TYPE....1105
LAYout<ly>:NODE<no>:RATio....1105
LAYout<ly>:NODE<no>:STYPe....1105
LAYout<ly>:RESult<n>:HORizontal:RATio....1106
LAYout<ly>:RESult<n>:VERTical:RATio....1106
LAYout<ly>:RPOSition....1106
GUI:CSTYle....1107
GUI:SGRid:SLOCator....1107
GUI:SGRid:STABs....1107

LAYout<ly>:COUNt?

Returns the number of available layouts, i.e. SmartGrid configurations. By default, they named "Diagram Set" on the display.

You can query the maximum number of layouts with `LAYout:COUNt? MAX`.

Suffix:
<ly> Irrelevant, omit the suffix.

Return values:
<Count> Number of SmartGrid configurations

Usage: Query only
Asynchronous command

LAYout<ly>[:ENABle] <State>

Creates a new SmartGrid configuration and sets it active.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

Parameters:
<State> OFF | ON

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

LAYout<ly>:ACTive <ActiveKey>

Sets the active SmartGrid configuration. The query returns the index of the active layout.

Suffix:
<ly> Irrelevant, omit the suffix.

Parameters:
<ActiveKey> Index of the active layout

Usage: Asynchronous command

LAYout<ly>:SACTive

Activates the specified SmartGrid configuration. The command has the same effect as `LAYout<ly>:ACTive` but it has no query, and the active layout is specified by the suffix.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Setting only
Asynchronous command

LAYout<ly>:LABel <Label>

Defines a name for the specified layout (SmartGrid configuration).

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

Parameters:
<Label> String with the layout name

Usage: Asynchronous command

LAYout<ly>:DIAGram<da>:COUNt?

Returns the number of diagrams in a specified layout.

You can query the maximum number of diagrams with `LAYout<ly>:DIAGram:COUNt? MAX`.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<da> Irrelevant, omit the suffix.

Return values:
<Count> Number of diagrams

Usage: Query only
Asynchronous command

LAYout<ly>:DIAGram<da>[:ENABle] <State>

Creates and displays a specified diagram in a specified layout. OFF deletes the diagram.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<da> 1 to 8, index of the diagram

Parameters:
<State> OFF | ON

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

LAYout<ly>:DIAGram<da>:SOURce <SignalKeys>

Assigns the waveforms to a diagram.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<da> 1 to 8, index of the diagram

Parameters:
<SignalKeys> String with a comma-separated list of waveforms, e.g. `"C1, C2, M1"`

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

LAYout<ly>:DIAGram<da>:LABel <Label>

Defines a name for the specified diagram in a specified layout.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<da> 1 to 8, index of the diagram

Parameters:
<Label> String with the diagram name

Usage: Asynchronous command

LAYout<ly>:NODE<no>:COUNt?

Returns the maximum number of nodes that can be defined. This number is the maximum value for the node suffix.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<no> Irrelevant, omit the suffix.

Return values:
<Count> Maximum value for the node suffix

Usage: Query only
Asynchronous command

LAYout<ly>:NODE<no>[:ENABle] <State>

Creates the specified node in the specified layout. OFF deletes the node and its children.

The query returns whether the specified node exists (1) or not (0).

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

Parameters:
<State> OFF | ON

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:ID <ID>

Sets the content ID, the number of the specified content type.

For example, the "Diagram5" has Type=DIAGRAM and ID=5.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

<o> 1 | 2, child index

<p> Irrelevant, omit the suffix.

Parameters:
<ID> Numeric value

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:TYPE <Type>

Sets the content type for a specified child in a specified node: diagram, result table, another node, or empty.

For example, the "Diagram5" has Type=DIAGRAM and ID=5.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

<o> 1 | 2, child index

<p> Irrelevant, omit the suffix.

Parameters:

<Type> NONE | DIAG | DIAGRAM | RES | RESULT | NODE

DIAG = DIAGRAM, RES = RESULT

*RST: NONE

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:RATio <SplitRatio>

Sets the size ratio of the two children in the specified node.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

Parameters:

<SplitRatio> Size ratio of the children. 0.5 assigns 50% of the node size to each child. 0.3 assigns 30% to child 1% and 70% to child 2.

Range: 0 to 1
Increment: 0.0001
*RST: 0.5

Usage: Asynchronous command

LAYout<ly>:NODE<no>:STYPe <SplitType>

Creates a second child (e.g. diagram) in the node if only one child exists, and sets the splitting of the node. If two children exist, only the splitting is set.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

Parameters:

<SplitType> HOR | HORizontal | VERT | VERTical
HOR = HORizontal, VERT = VERTical
*RST: NONE

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

LAYout<ly>:RESult<n>:HORizontal:RATio <SplitRatio>

Sets the horizontal ratio between the cursor result table and the measurement result table inside the result display container if the results are displayed at the bottom.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<n> Suffix is irrelevant, index of the result container

Parameters:

<SplitRatio> Range: 0 to 1
Increment: 0.0001
*RST: 0.8

Usage: Asynchronous command

LAYout<ly>:RESult<n>:VERTical:RATio <SplitRatio>

Sets the vertical ratio between the cursor result table and the other measurement results inside the result display container if the results are displayed on the right or left.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<n> Suffix is irrelevant, index of the result container

Parameters:

<SplitRatio> Range: 0 to 1
Increment: 0.0001
*RST: 0.8

Usage: Asynchronous command

LAYout<ly>:RPOSition <ResultPosition>

Defines the position of the result container inside the layout.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

Parameters:

<ResultPosition> BOTT | BOTTOM | LEFT | RIGH | RIGHT
*RST: NONE

Usage: Asynchronous command

GUI:CSTYle <ClockStyle>

Selects how the clock in the upper right corner of the screen is displayed.

Parameters:
<ClockStyle> SHSC | HDSC | HDCLk
`SHSC` = Show seconds (hh:mm:ss)
`HDSC` = Hide seconds (hh:mm)
`HDCLk` = Hide clock
*RST: SHSC

Usage: Asynchronous command

Manual operation: See "Clock style" on page 109

GUI:SGRid:SLOCator <ShwSignLocator>

Shows or hides the indicators of the waveforms that are contained in one diagram. The indicators are shown in the upper right corner of the diagram.

Parameters:
<ShwSignLocator> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Signal locator" on page 106

GUI:SGRid:STABs <ShowTabs>

Shows or hides the layout tabs in the upper left corner of the diagram area.

Parameters:
<ShowTabs> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show tabs" on page 106

18.8.4 Toolbar

DISPlay:TOOLbar:COUNt? 1107
DISPlay:TOOLbar:DESelect 1108
DISPlay:TOOLbar:RESTore 1108

DISPlay:TOOLbar:COUNt?

Returns the number of tools that are currently assigned to the toolbar.

Return values:

<ToolCount> Range: 0 to 100
Increment: 1
*RST: 8

Usage: Query only
Asynchronous command

DISPlay:TOOLbar:DESelect

Removes all tools from the toolbar.

Usage: Setting only
SCPI confirmed
Asynchronous command

DISPlay:TOOLbar:RESTore

Resets the toolbar to the factory configuration.

Usage: Setting only
SCPI confirmed
Asynchronous command


18.8.5 Annotations

The following `DISPlay:ANNotation` commands configure the annotations. With these commands you can select the type of annotation you want to add, define its value, position and color.

Defining the position of the annotation

With some of the following commands, you can define the position of the annotation on the screen. When defining the position, consider the following:

- A position is defined with two elements. The first element refers to the X dimension and the second to the Y dimension.
- The minimum position (0,0) is the lower left corner of the SmartGrid.

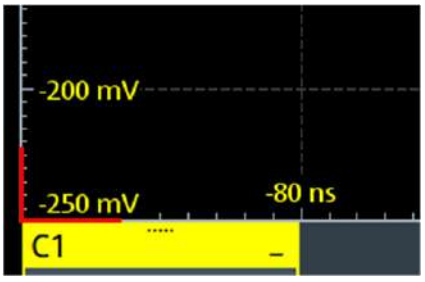

- The maximum position (100,100) is the upper right corner of the SmartGrid.



- The position is defined in percent with a range from 0 to 100. The minimum increment is 0.01.
- An annotation element cannot be moved outside the SmartGrid, the position is limited depending on the size of the annotation element.

Color catalog

When using annotations, you can select their color from a list of predefined colors. The following table gives an overview on the available colors and their command parameter name.

Table 18-2: Color catalog for annotations

Color	Color command parameter	Description
	WHITe	White
	LGRay	Light gray
	MGRay	Middle gray
	GRAY	Gray
	DGRay	Dark gray
	RED	Red
	DORange	Dark orange
	ORANge	Orange
	LORange	Light orange
	YELLow	Yellow

Color	Color command parameter	Description
	DGReen	Dark green
	GREen	Green
	LGReen	Light green
	LBLue	Light blue
	BLUE	Blue
	PINK	Pink
	LPINk	Light pink
	TURQuoise	Turquoise
	LPURple	Light purple
	PURPle	Purple

18.8.5.1 General settings

DISPlay:ANNotation:CLEar....1110
DISPlay:ANNotation:COLor<m>:CATalog?....1110
DISPlay:ANNotation:TRANsparency....1111

DISPlay:ANNotation:CLEar

Removes all existing annotations.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:COLor<m>:CATalog?

Returns the list of possible colors, see Color catalog for annotations.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:

<ColorCatalog> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

Returned as comma-separated values:
WHIT,LGR,MGR,GRAY,DGR,RED,DOR,ORAN,LOR,YELL,DAGR,GRE,LIGR,LBL,BLUE,PINK,LPIN,TURQ,LPUR,PURP

Usage: Query only
Asynchronous command

DISPlay:ANNotation:TRANsparency <Transparency>

Sets a transparency of all annotations. For high transparency values, you can see the waveform display in the background. For lower transparency values, readability of the annotation improves.

Parameters:

<Transparency>
Range: 0 to 90
Increment: 1
*RST: 0

Usage: Asynchronous command

18.8.5.2 Rectangle

DISPlay:ANNotation:RECTangle<m>:CLEar 1111
DISPlay:ANNotation:RECTangle<m>:COLor 1111
DISPlay:ANNotation:RECTangle<m>:HEIGht 1112
DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition 1112
DISPlay:ANNotation:RECTangle<m>:REMove 1112
DISPlay:ANNotation:RECTangle<m>:VERTical:POSition 1113
DISPlay:ANNotation:RECTangle<m>:WIDTh 1113
DISPlay:ANNotation:RECTangle<m>[:VALue] 1113

DISPlay:ANNotation:RECTangle<m>:CLEar

Deletes all rectangle annotations.

Suffix:

<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:RECTangle<m>:COLor <Type>

Sets the color of the indicated rectangle annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

See Color catalog for annotations.

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:HEIGht <Height>

Sets the height (vertical size) of the rectangle annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<Height> In % of the screen.

Range: 0 to 100
Increment: 1
0 results in an invisible rectangle, 100 takes the complete height of the screen.

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position of the left edge of the rectangle annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<HorizontalPos> In % of the screen

Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:REMove

Removes the specified rectangle annotation from the screen.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:RECTangle<m>:VERTical:POSition <VerticalPos>

Sets the vertical position of the lower edge of the rectangle annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<VerticalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:WIDTh <Width>

Sets the width (horizontal size) of the rectangle annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<Width> In % of the screen
Range: 0 to 100
Increment: 1
0 results in an invisible rectangle, 100 takes the complete width of the screen.

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>[:VALue] [<HorizontalPos>],[<VerticalPos>], [<Width>],[<Height>]

Adds a new rectangle annotation, or replaces the annotation if it already exists. If no parameters are defined, the default values are used.

All parameters are given in % of the screen.

Suffix:
<m> *
Index of the created rectangle annotation

Parameters:
<HorizontalPos> Range: 0 to 99

<VerticalPos> Range: 0 to 99

<Width> Range: 0 to 100

<Height> Range: 0 to 100

Usage: Asynchronous command

18.8.5.3 Arrow

DISPlay:ANNotation:ARRow<m>:CLEar 1114
DISPlay:ANNotation:ARRow<m>:COLor 1114
DISPlay:ANNotation:ARRow<m>:DIRection 1114
DISPlay:ANNotation:ARRow<m>:HEIGht 1115
DISPlay:ANNotation:ARRow<m>:HORizontal:POSition 1115
DISPlay:ANNotation:ARRow<m>:REMove 1115
DISPlay:ANNotation:ARRow<m>:VERTical:POSition 1116
DISPlay:ANNotation:ARRow<m>:WIDTh 1116
DISPlay:ANNotation:ARRow<m>[:VALue] 1116

DISPlay:ANNotation:ARRow<m>:CLEar

Deletes all arrow annotations.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:ARRow<m>:COLor <Type>

Sets the color of the indicated arrow annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

See Color catalog for annotations.

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:DIRection <Type>

Sets the direction of the indicated arrow annotation from starting point to arrow tip.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<Type> TLEFt | TRIGht | BLEFt | BRIGht

TLEFt: to top left
TRIGht: to top right
BLEFt: to bottom left
BRIGht: to bottom right

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:HEIGht <Height>

Sets the height (vertical size) of the arrow annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<Height> In % of the screen.
Range: 0 to 100
Increment: 1
0 results in an invisible rectangle, 100 takes the complete height of the screen.

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position of the left point of the arrow annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<HorizontalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:REMove

Removes the specified arrow annotation from the screen.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:ARRow<m>:VERTical:POSition <VerticalPos>

Sets the vertical position of the lower point of the arrow annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<VerticalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:WIDTh <Width>

Sets the width (horizontal size) of the arrow annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<Width> In % of the screen
Range: 0 to 100
Increment: 1
0 results in an invisible rectangle, 100 takes the complete width of the screen.

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>[:VALue] [<HorizontalPos>],[<VerticalPos>], [<Width>],[<Height>]

Adds a new arrow annotation, or replaces the annotation if it already exists. If no parameters are defined, the default values are used.

All parameters are given in % of the screen.

Suffix:
<m> *
Index of the created arrow annotation

Parameters:
<HorizontalPos> Range: 0 to 99
<VerticalPos> Range: 0 to 99
<Width> Range: 0 to 100
<Height> Range: 0 to 100

Usage: Asynchronous command

18.8.5.4 Text

DISPlay:ANNotation:TEXT<m>:CLEar 1117
DISPlay:ANNotation:TEXT<m>:COLor 1117
DISPlay:ANNotation:TEXT<m>:FONTsize 1117
DISPlay:ANNotation:TEXT<m>:HORizontal:POSition 1118
DISPlay:ANNotation:TEXT<m>:REMove 1118
DISPlay:ANNotation:TEXT<m>:VERTical:POSition 1118
DISPlay:ANNotation:TEXT<m>[:VALue] 1118

DISPlay:ANNotation:TEXT<m>:CLEar

Deletes all text annotations.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:TEXT<m>:COLor <Type>

Sets the color of the indicated text annotation.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Parameters:
<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

See Color catalog for annotations.

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:FONTsize <Fontsize>

Sets the font size of the text.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Parameters:
<Fontsize> Range: 12 to 30
Default unit: px

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position of the left edge of the text annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Parameters:
<HorizontalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:REMove

Removes the specified text annotation from the screen.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:TEXT<m>:VERTical:POSition <VerticalPos>

Sets the vertical position of the lower edge of the text annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Parameters:
<VerticalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>[:VALue] [<Text>]

Adds a new text annotation or replaces the text value of an already existing text annotation.

Suffix:
<m> *
Index of the created text annotation

Parameters:
<Text> String with the annotation text

Usage: Asynchronous command

18.8.5.5 Draw

DISPlay:ANNotation:PLINe<m>:CLEar 1119
DISPlay:ANNotation:PLINe<m>:COLor 1119
DISPlay:ANNotation:PLINe<m>:EXTend 1119
DISPlay:ANNotation:PLINe<m>:REMove 1120
DISPlay:ANNotation:PLINe<m>[:VALue] 1120

DISPlay:ANNotation:PLINe<m>:CLEar

Deletes all draw annotations.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:PLINe<m>:COLor <Type>

Sets the color of the indicated draw annotation.

Suffix:
<m> 1 to <number of draw annotations>
Index of the drawn annotation.

Parameters:
<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

See Color catalog for annotations.

Usage: Asynchronous command

DISPlay:ANNotation:PLINe<m>:EXTend [<x>],[<y>]

Expands the drawn item with a segment. The x and y position of the existing endpoint is the start point of the new segment. The segments are always straight lines.

Suffix:
<m> 1 to <number of draw annotations>
Index of the draw annotation

Setting parameters:
<x> Horizontal position of the endpoint of the new segment

<y> Vertical position of the endpoint of the new segment

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:PLINe<m>:REMove

Removes the specified draw annotation from the screen.

Suffix:
<m> 1 to <number of draw annotations>
Index of the draw annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:PLINe<m>[:VALue] <x1>,<y1>,<x2>,<y2>,[<xn>]

Adds a new draw annotation, or replaces the annotation if it already exists. If no parameters are defined, the default values are used.

All parameters are given in % of the screen.

Suffix:
<m> *
Index of the created draw annotation

Parameters:
<x1> Horizontal position of the start point of the new line

<y1> Vertical position of the start point of the new line

<x2> Horizontal position of the endpoint of the new line

<y2> Vertical position of the endpoint of the new line

<xn> Vertical or horizontal position of extension points. For each point, you need two values, first the horizontal and second the vertical value. All values are separated by commas.

Usage: Asynchronous command

18.8.6 Appearance

- Waveform colors....1120
- Grid appearance....1122
- Dialog appearance....1124
- Measurement appearance....1125
- Peak list appearance....1125

18.8.6.1 Waveform colors

DISPlay:COLor:SIGNal:CATalog?....1121
DISPlay:COLor:SIGNal:COLor....1121
DISPlay:COLor:SIGNal:ASSign....1121
DISPlay:COLor:SIGNal:USE....1122

DISPlay:COLor:SIGNal:CATalog?

Returns a list of valid signal names. The signal names are needed in other DISPlay:COLor commands to set the <Signal> parameter.

Return values:

<Signals> Comma-separated list of signal names, see Section 18.4.1, "Waveform parameter", on page 1082

Usage: Query only
Asynchronous command

DISPlay:COLor:SIGNal:COLor <Signal>,<Value>
DISPlay:COLor:SIGNal:COLor? <Signal>

Sets the color of the selected waveform.

Parameters:

<Value> Decimal value of the ARGB color. Use the color dialog box on the instrument to get the hex value of the color, and convert the hex value to a decimal value.
0 is fully transparent black.
4278190080 (dec) = FF000000 (hex) is opaque black.
4294967295 (dec) = FFFFFFFF (hex) is opaque white.
To reset the color to its default, use `DISPlay:COLor:SIGNal:COLor <Signal>,DEF`.

Parameters for setting and query:

<Signal> Signal name as returned by `DISPlay:COLor:SIGNal:CATalog?`.

Usage: Asynchronous command

Manual operation: See "Color" on page 102

DISPlay:COLor:SIGNal:ASSign <Signal>,<ColorTable>
DISPlay:COLor:SIGNal:ASSign? <Signal>

Assigns a color table to the source waveform instead of a dedicated color.

Parameters:

<ColorTable> String with the name of the color table.
Valid values are: `"FalseColors"`, `"Spectrum"`, `"SingleEvent"` and `"Temperature"`.

Parameters for setting and query:

<Signal> Signal name as returned by `DISPlay:COLor:SIGNal:CATalog?`.

Usage: Asynchronous command

Manual operation: See "Assigned color table" on page 101

DISPlay:COLor:SIGNal:USE <Signal>,<State>
DISPlay:COLor:SIGNal:USE? <Signal>

If enabled, the selected waveform is displayed according to its assigned color table.

If disabled, the selected color is displayed, and the intensity of the signal color varies according to the cumulative occurrence of the values.

The setting is not available for digital channels and parallel buses.

Parameters:
<State> OFF | ON

Parameters for setting and query:
<Signal> Signal name as returned by `DISPlay:COLor:SIGNal:CATalog?`.

Usage: Asynchronous command

Manual operation: See "Use color table" on page 101

18.8.6.2 Grid appearance

DISPlay:DIAGram:CROSshair 1122
DISPlay:DIAGram:FINegrid 1122
DISPlay:DIAGram:GRID 1123
DISPlay:DIAGram:LABels 1123
DISPlay:DIAGram:XPDivlabel 1123
DISPlay:DIAGram:XFIXed 1123
DISPlay:DIAGram:YFIXed 1124

DISPlay:DIAGram:CROSshair <Crosshair>

If selected, a crosshair is displayed in the diagram area. A crosshair allows you to select a specific data point by its coordinates.

Parameters:
<Crosshair> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show crosshair" on page 104

DISPlay:DIAGram:FINegrid <ShowFineScale>

If selected, the crosshair is displayed as a ruler with scale markers. If disabled, the crosshair is shown as dashed lines.

Parameters:
<ShowFineScale> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show fine grid scale" on page 104

DISPlay:DIAGram:GRID <Show>

If selected, a grid is displayed in the diagram area. A grid helps you associate a specific data point to its exact value on the x- or y-axis.

Parameters:
<Show> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show grid" on page 103

DISPlay:DIAGram:LABels <ShowLabels>

If selected, labels mark values on the x- and y-axes in specified intervals in the diagram.

Parameters:
<ShowLabels> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show labels" on page 104

DISPlay:DIAGram:XPDivlabel <ShowDivLabelX>

If selected, the time scale value is shown at the diagram bottom instead of the horizontal grid labels. For example, 10 ns/div is shown instead of the values 0, 10, 20, 30... ns.

Parameters:
<ShowDivLabelX> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show div label (x)" on page 104

DISPlay:DIAGram:XFIXed <XGridFixed>

If enabled, the vertical grid lines remain in their position when the horizontal position is changed. Only the values at the grid lines are adapted.

Parameters:
<XGridFixed> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Keep X-grid fixed" on page 104

DISPlay:DIAGram:YFIXed <YGridFixed>

If enabled, the horizontal grid lines remain in their position when the position of the curve is changed. Only the values at the grid lines are adapted.

Fixed horizontal grid lines correspond to the behavior of traditional oscilloscopes.

Parameters:

<YGridFixed> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Keep Y-grid fixed" on page 104

18.8.6.3 Dialog appearance

DISPlay:DIALog:FONTsize 1124
DISPlay:DIALog:TRANsparency 1124
DISPlay:RESult:FONTsize 1124

DISPlay:DIALog:FONTsize <DialogFontSize>

Sets the font size of the text in dialog boxes.

Parameters:

<DialogFontSize> Range: 16 to 25
Increment: 1
*RST: 21

Usage: Asynchronous command

Manual operation: See "Font size" on page 107

DISPlay:DIALog:TRANsparency <DialogTransp>

Sets the transparency of the dialog box background. For high transparency values, you can see the waveform display in the background, and possibly check the effect of the changed setting. For lower transparency values, readability in the dialog box improves.

Parameters:

<DialogTransp> Range: 0 to 70
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Transparency" on page 107

DISPlay:RESult:FONTsize <ResultFontSize>

Sets the font size of the text in result tables.

Parameters:

<ResultFontSize> Range: 16 to 25
Increment: 1
*RST: 21

Usage: Asynchronous command

Manual operation: See "Font size" on page 108

18.8.6.4 Measurement appearance

DISPlay:MEASurements:LEVels 1125
MEASurement<mg>:DISPlay:DIGits 1125

DISPlay:MEASurements:LEVels <RefLevelValues>

If selected, the values of the reference levels are displayed.

Parameters:

<RefLevelValues> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show reference level values" on page 107

MEASurement<mg>:DISPlay:DIGits <MeasDigitsLim>

Sets the number of digits for the result values in result tables.

Suffix:

<mg> *

Parameters:

<MeasDigitsLim> Range: 3 to 16
Increment: 1
*RST: 5

Usage: Asynchronous command

Manual operation: See "Digit limit" on page 108

18.8.6.5 Peak list appearance

CALCulate:SPECtrum<sp>:PLISt:LABel:BORDer 1125

CALCulate:SPECtrum<sp>:PLISt:LABel:BORDer <LabelBorder>

Defines the layout of the labels, full border or none.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:
<LabelBorder> NOBorder | FULL
`FULL`: Full border
*RST: FULL

Usage: Asynchronous command

Manual operation: See "Frame type" on page 108

18.8.7 Display

- Persistence....1126
- Signal....1127
- Backlight....1128
- Clear results....1129

18.8.7.1 Persistence

DISPlay:PERSistence:INFinite....1126
DISPlay:PERSistence:RESet....1126
DISPlay:PERSistence:TIME....1127
DISPlay:PERSistence[:STATe]....1127

DISPlay:PERSistence:INFinite <State>

If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled. Use infinite persistence to display rare events in the signal.

In active history mode, the player shows the history waveforms with infinite persistence. Thus, you can see all data points of all recorded history waveforms of a player cycle.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Infinite persistence / Overlay" on page 110

DISPlay:PERSistence:RESet

Resets the display, removing all persistent waveform points.

Usage: Setting only
Asynchronous command

Manual operation: See "Reset" on page 110

DISPlay:PERSistence:TIME <Time>

Sets a time factor that controls how long the waveforms points fade away from the display. Thus, the MXO 5 emulates the persistence of analog phosphor screens.

Parameters:

<Time>
Range: 0.05 to 50
Increment: 0.05
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 110

DISPlay:PERSistence[:STATe] <State>

If enabled, each new data point in the diagram area remains on the screen for the duration defined using `DISPlay:PERSistence:TIME`, or as long as `DISPlay:PERSistence:INFinite` is enabled.

If disabled, the signal value is only displayed as long as it actually occurs.

Parameters:

<State>
OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 110

18.8.7.2 Signal

DISPlay:INTensity....1127
DISPlay:DIAGram:STYLe....1128

DISPlay:INTensity <Intensity>

The intensity determines the strength of the waveform line in the diagram. Enter a percentage between 0 (not visible) and 100% (strong). The default value is 50%.

Parameters:

<Intensity>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Intensity" on page 111

DISPlay:DIAGram:STYLe <Style>

Selects the style in which the waveform is displayed.

Parameters:

<Style> VECTors | DOTS

VECTors
The individual data points are connected by a line.

DOTS
Only the individual data points are displayed.

*RST: VECTors

Usage: Asynchronous command

Manual operation: See "Waveform style" on page 111

18.8.7.3 Backlight

DISPlay:BACKlight[:BRIGtness] 1128
DISPlay:BACKlight:DIMMing 1128

DISPlay:BACKlight[:BRIGtness] <LCDIntensity>

Sets the background luminosity of the touchscreen.

Parameters:

<LCDIntensity> Range: 5 to 100
Increment: 1
*RST: 90
Default unit: %

Usage: Asynchronous command

Manual operation: See "Brightness" on page 112

DISPlay:BACKlight:DIMMing <InactiveTime>

Selects a time, after which the monitor brightness is reduced, if the instrument was inactive. Remote control of the instrument is also considered as an activity.

Parameters:

<InactiveTime> OFF | T1Minute | T2Minutes | T3Minutes | T5Minutes | T10Minutes | T15Minutes | T20Minutes | T25Minutes | T30Minutes | T45Minutes | T1Hour | T2Hours | T3Hours | T4Hours

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Dimm on user inactivity" on page 112

18.8.7.4 Clear results

DISPlay:CLR

Deletes all measurement results including all waveforms and statistics.

Usage: Setting only
Asynchronous command

Manual operation: See "Clear" on page 69

18.8.8 Save/Recall

18.8.8.1 Autonaming

MMEMory:AUTonaming:PREFix 1129
MMEMory:AUTonaming:TIME 1129
MMEMory:AUTonaming:INDex 1129
MMEMory:AUSave:ENABle 1129
MMEMory:AUSave:INTerval 1130
MMEMory:AUTonaming:USERtext 1130
MMEMory:AUTonaming:DEFaultpath 1130
MMEMory:AUTonaming:RESall 1130
MMEMory:AUTonaming:RESPath 1131
MMEMory:AUTonaming:TEXT 1131

MMEMory:AUTonaming:PREFix <MainNmeStemSt>
MMEMory:AUTonaming:TIME <DateTime>
MMEMory:AUTonaming:INDex <NameIndex>

Includes or excludes the prefix/ date/time /index in the filename pattern for automatic filename generation. This name is used as the default filename.

The prefix indicates the type of data that is saved, for example, RefCurve, Settings.

Parameters:
<NameIndex> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Index" on page 122

MMEMory:AUSave:ENABle <EnableAutosave>

Enables the automatic saving of the waveform. You can set the autosave interval with `MMEMory:AUSave:INTerval`.

Parameters:
<EnableAutosave> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable autosave" on page 122

MMEMory:AUSave:INTerval <AutosaveIntvl>

Defines the time interval for the automatic saving of the waveform, if `MMEMory:AUSave:ENABle` is set to `ON`.

Parameters:
<AutosaveIntvl> Range: 1 to 360000
Increment: 1
*RST: 300
Default unit: s

Usage: Asynchronous command

Manual operation: See "Enable autosave" on page 122

MMEMory:AUTonaming:USERtext <State>

If enabled, inserts the specified user text after the prefix.

You can define the text with `MMEMory:AUTonaming:TEXT`.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "User text" on page 122

MMEMory:AUTonaming:DEFaultpath <Path>

Sets the path where data and settings files are stored. On the instrument, all user data is written to `/home/storage/userData`. You can create subfolders in this folder.

Parameters:
<Path> String parameter

Usage: Asynchronous command

Manual operation: See "Default path for all file operations" on page 122

MMEMory:AUTonaming:RESall

Resets all autonaming settings to the default value, including the path.

Usage: Setting only
Asynchronous command

Manual operation: See "Reset path" on page 122

MMEMory:AUTonaming:RESPath

Resets the path for file operations to the factory default path.

Usage: Setting only
Asynchronous command

Manual operation: See "Reset path" on page 122

MMEMory:AUTonaming:TEXT <NameString>

Defines a text that can be included in the autonaming pattern.

Parameters:
<NameString> String parameter

Usage: Asynchronous command

Manual operation: See "User text" on page 122

18.8.9 Preset

USERdefined:PRESet:NAME 1131
USERdefined:PRESet:OPEN 1131
USERdefined:PRESet:SAVE 1132
USERdefined:PRESet[:ENABle] 1132

USERdefined:PRESet:NAME <Name>

Sets the path, the filename and the file format of the preset file.

Parameters:
<Name> String with path and filename with extension `.set`.

Example:
```
USERdefined:PRESet:NAME '/home/storage/userData/settings/Preset_SPI.set'
```

Manual operation: See "Preset file selection" on page 114

USERdefined:PRESet:OPEN

Opens and loads the preset file that is defined with `USERdefined:PRESet:NAME`.

Usage: Event

Manual operation: See "Preset file selection" on page 114

USERdefined:PRESet:SAVE

Saves the current settings as a preset file. You define the storage location and file-name with `USERdefined:PRESet:NAME`.

Usage: Event

Manual operation: See "Save, Open" on page 115

USERdefined:PRESet[:ENABle] <Name>

If enabled, the settings from the selected saveset are restored when the [Preset] key is pressed.

If disabled, [Preset] sets the instrument to the factory defaults.

The saveset to be used as preset file is defined with `USERdefined:PRESet:NAME`.

Parameters:

<Name> OFF | ON

*RST: OFF

Manual operation: See "Enable user-defined preset" on page 114

18.8.10 Maintenance

Use also:

- `*CAL?` on page 1090
- `*TST?` on page 1093

CALibration[:ALL] 1132
CALibration:DATE? 1133
CALibration:TIME? 1133
CALibration:RESult? 1133
SERVice:REPort 1133
SYSTem:APUP 1134

CALibration[:ALL]

`Calibration:ALL` starts the self-alignment process without returning status information. To get the status, use the commands of the operation status register.

`Calibration:ALL?` starts the self-alignment process and returns information on the state of the self-alignment. (Same as `*CAL?`).

The process can take several minutes. Consider your timeout settings.

Return values:

<Result> Numeric status indicator. Return values ≠ 0 indicate an error.

Usage: Asynchronous command

CALibration:DATE?

Returns the date of the last self-alignment.

Return values:
<Date>

Usage: Query only
Asynchronous command

Manual operation: See "Date, Time, Overall alignment state" on page 117

CALibration:TIME?

Returns the time of the last self-alignment.

Return values:
<Time>

Usage: Query only
Asynchronous command

Manual operation: See "Date, Time, Overall alignment state" on page 117

CALibration:RESult?

Returns the result of the last self-alignment and the current alignment status. In remote mode, `*CAL?` provides more detailed information.

Return values:
<ResultState> PASSed | FAILed | NOALigndata
*RST: FAILed

Usage: Query only
Asynchronous command

Manual operation: See "Date, Time, Overall alignment state" on page 117

SERVice:REPort

Creates a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder `/home/storage/userData`.

Usage: Event
Asynchronous command

Manual operation: See "Create report" on page 120

SYSTem:APUP <AutoPowerUp>

If enabled, the instrument powers up automatically when it is connected to the mains voltage.

Parameters:

<AutoPowerUp> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto power up" on page 119

18.9 Acquisition and waveform setup

18.9.1 Starting and stopping acquisition

Use the following commands to start and stop acquisitions.

RUNCont....1134
RUN....1134
RUNSingle....1134
SINGle....1134
STOP....1134

RUNCont
RUN

Starts the continuous acquisition.

Usage: Setting only
Asynchronous command

Manual operation: See "[Run / Stop]" on page 49

RUNSingle
SINGle

Starts a defined number of acquisition cycles. The number of cycles is set with `ACQuire:COUNt`.

Usage: Setting only
Asynchronous command

Manual operation: See "[Single]" on page 49

STOP

Stops the running acquisition.

Usage: Event
Asynchronous command

Manual operation: See "[Run / Stop]" on page 49

18.9.2 Horizontal setup

AUToscale....1135
TIMebase:SCALe....1135
TIMebase:RANGe....1135
TIMebase:DIVisions?....1136
TIMebase:HORizontal:POSition....1136
TIMebase:REFerence....1136

AUToscale

Performs an autoset process: analyzes the enabled channel signals, and obtains appropriate horizontal, vertical, and trigger settings to display stable waveforms.

Rohde & Schwarz does not recommend using the autoset in remote control. To adjust the oscilloscope remotely, especially for automated testing applications, use the remote commands that adjust the horizontal, vertical and trigger settings.

Usage: Event
Asynchronous command

TIMebase:SCALe <TimebaseScale>

Sets the horizontal scale, the time per division, for all waveforms in the time domain, for example, channel and math waveforms.

Parameters:
<TimebaseScale> Range: 200E-12 to 10E+3
Increment: 1E-12
*RST: 20E-9
Default unit: s/div

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 51

TIMebase:RANGe <TimebaseRange>

Sets the time of one acquisition, which is the time across the 10 divisions of the diagram: *Acquisition time = Time scale * 10 divisions*.

Parameters:
<TimebaseRange> Range: 2E-9 to 100E+3
Increment: 1E-12
*RST: 200E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Timebase range" on page 126

TIMebase:DIVisions?

Returns the number of horizontal divisions on the screen. The number cannot be changed.

Return values:
<HorizDivCnt> *RST: 10

Usage: Query only
Asynchronous command

TIMebase:HORizontal:POSition <Position>

Defines the time distance between the reference point and the trigger point, which is the zero point of the diagram. The horizontal position is also known as trigger offset.

Parameters:
<Position>
Range: -50000 to 50000 at maximum timebase range
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "[Position]" on page 50

TIMebase:REFerence <RescaleCtrPos>

Sets the position of the reference point in % of the screen. It defines which part of the waveform is shown.

Parameters:
<RescaleCtrPos>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Reference point" on page 127

18.9.3 Roll mode

TIMebase:ROLL:ENABle....1137
TIMebase:ROLL:MTIMe....1137
ACQuire:ROLLmode:OSCapture....1137
ACQuire:ROLLmode:POINts?....1137
TIMebase:ROLL:STATe?....1138

TIMebase:ROLL:ENABle <Mode>

Selects, if the roll mode is started automatically by the instrument or if it is turned off.

Parameters:

<Mode> AUTO | OFF
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 128

TIMebase:ROLL:MTIMe <MinAcquTime>

Sets the minimum acquisition time for the automatic start of the roll mode.

Parameters:

<MinAcquTime> Range: 0.5 to 100000
Increment: 1
*RST: 2
Default unit: s

Usage: Asynchronous command

Manual operation: See "Start roll time" on page 128

ACQuire:ROLLmode:OSCapture <OffScreenCapture>

If enabled, the analyzable waveform in roll mode is extended. You can run the roll mode, stop the acquisition after some time, and analyze the data that is on the display and in the unvisible area on the left.

Parameters:

<OffScreenCapture> OFF | ON
*RST: OFF

Example: See Section 18.5.4, "Data transfer in roll mode", on page 1089.

Usage: Asynchronous command

Manual operation: See "Off screen capture" on page 129

ACQuire:ROLLmode:POINts?

Returns the record length of the roll mode. In roll mode, the complete record is always captured, independently of the displayed waveform.

To process and analyze the complete roll waveform, enable `ACQuire:ROLLmode:OSCapture`.

Return values:

<RecordLength> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0
Default unit: pts

Usage: Query only
Asynchronous command

Manual operation: See "Off screen capture" on page 129

TIMebase:ROLL:STATe?

Returns the status of the roll mode.

Return values:

<State> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

Manual operation: See "Mode" on page 128

18.9.4 Acquisition setup

This section describes all remote commands for acquisition.

ACQuire:AVAilable? 1138
ACQuire:AVERage? 1139
ACQuire:COUNt 1139
ACQuire:CURRent? 1139
ACQuire:INTerpolate 1140
ACQuire:POINts[:VALue] 1140
ACQuire:POINts:ARATe? 1140
ACQuire:POINts:MAXimum 1140
ACQuire:POINts:MODE 1141
ACQuire:POMemory? 1141
ACQuire:RESolution? 1141
ACQuire:RLReal? 1142
ACQuire:SRATe[:VALue] 1142
ACQuire:SRATe:MINimum 1142
ACQuire:SRATe:MODE 1143
ACQuire:SRReal? 1143
ACQuire:TYPE 1143

ACQuire:AVAilable?

Number of acquisitions that is saved in the memory and available for history viewing. It is also the number of acquisitions in a fast segmentation acquisition series.

Return values:
<AcquisitionCount> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Available acqs" on page 256

ACQuire:AVERage?

Returns the current number of acquired waveforms that contribute to the average.

Return values:
<CurrAverageCount> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Current average count" on page 136

ACQuire:COUNt <MaxAcqCnt>

Sets the acquisition and average count, which has a double effect:

- It sets the number of waveforms acquired with `RUNSingle`.
- It defines the number of waveforms used to calculate the average waveform.

Parameters:
<MaxAcqCnt> Range: 1 to 16777215
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "N-single/avg count" on page 135

ACQuire:CURRent?

Returns the current number of acquisitions that have been acquired.

Return values:
<CurrAcqCnt> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

ACQuire:INTerpolate <IntpolMd>

Selects the interpolation method.

Parameters:

<IntpolMd> SINX | LINear | SMHD

LINear
Linear interpolation between two adjacent sample points

SINX
Interpolation with a sin(x)/x function.

SMHD
Sample/Hold causes a histogram-like interpolation.

*RST: SINX

Usage: Asynchronous command

Manual operation: See "Interpolation" on page 136

ACQuire:POINts[:VALue] <RecordLength>

Sets the record length, if `ACQuire:POINts:MODE` is set to `MANual`.

Parameters:

<RecordLength>
Range: 1000 to 1E+9
Increment: 2
*RST: 1000
Default unit: pts

Usage: Asynchronous command

Manual operation: See "Record length" on page 135

ACQuire:POINts:ARATe?

Returns the sample rate of the ADC, before waveform processing. The result is the interleaved sample rate or the non-interleaved one, depending on the channel usage.

Return values:

<ADCSampleRate>
Range: 5 Gsample/s (interleaved), 2,5 Gsample/s (non-interleaved)
Default unit: Hz

Usage: Query only
Asynchronous command

ACQuire:POINts:MAXimum <RecLengthLimit>

Sets the maximum record length, if `ACQuire:POINts:MODE` is set to `AUTO`.

Parameters:

<RecLengthLimit> Range: 1000 to 1E+9
Increment: 2
*RST: 10E+6
Default unit: pts

Usage: Asynchronous command

Manual operation: See "Record length limit" on page 135

ACQuire:POINts:MODE <RecLengthMode>

Selects the mode of the waveform record length adjustment.

The record length is the number of waveform samples that are stored in one waveform record after processing, including interpolation. It determines the length of the displayed waveform.

Parameters:

<RecLengthMode> AUTO | MANual

AUTO
Record length is determined automatically and changes due to instrument internal adjustments.

MANual
The waveform record length is defined with `ACQuire:POINts[:VALue]`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "RL mode" on page 134

ACQuire:POMemory?

The command returns 1 if the memory is not sufficient to process the data with the current settings. To solve the problem, reduce the record length or use automatic record length setting.

Return values:

<OutOfMemory> OFF | ON

*RST: OFF

Usage: Query only
Asynchronous command

Manual operation: See "Record length" on page 135

ACQuire:RESolution? [<MIN | MAX>]

Returns the current resolution.

The resolution is the time between two waveform samples in the waveform record. It considers the processing of the captured samples including interpolation. A fine resolution with low values produces a more precise waveform record. The resolution is the reciprocal of the sample rate.

You can query the minimum and maximum values with `<command>? MIN` and `<command>? MAX`.

Return values:

<Resolution> Range: 1E-15 to 100
Increment: 1E-11
*RST: 200E-12
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Resolution" on page 135

ACQuire:RLReal?

Returns the internal record length used by the acquisition system.

Return values:

<HWRecordLength> Range: 2 to 4294967295
Increment: 1
*RST: 1000
Default unit: pts

Usage: Query only
Asynchronous command

ACQuire:SRATe[:VALue] <SampleRate>

Sets the number of waveform points per second if `ACQuire:SRATe:MODE` is set to MANual.

Parameters:

<SampleRate> Range: 2 to 5E+12
Increment: 1
*RST: 5E+9
Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "Sample rate" on page 134

ACQuire:SRATe:MINimum <SampleRateMin>

Sets the minimum sample rate if `ACQuire:SRATe:MODE` is set to `AUTO`.

Parameters:

<SampleRateMin> Range: 2 to 5E+12
Increment: 1
*RST: 2
Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "Min. sample rate" on page 134

ACQuire:SRATe:MODE <SampleRateMode>

Defines how the sample rate is set.

The sample rate considers the samples of the ADC, and the processing of the captured samples including interpolation.

Parameters:

<SampleRateMode> AUTO | MANual

AUTO
Sample rate is determined automatically and changes due to instrument internal adjustments. You can set a minimum sample rate with `ACQuire:SRATe:MINimum`.

MANual
The sample rate is defined with `ACQuire:SRATe[:VALue]`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "SR mode" on page 134

ACQuire:SRReal? [<MIN | MAX>]

Returns the sample rate of the waveform after HW processing. Interpolation is not considered. This value is shown in the acquisition label above the diagram.

You can query the minimum and maximum values with `<command>? MIN` and `<command>? MAX`.

Return values:

<HWSampleRate> Range: 2 to ADC sample rate
Increment: 1
*RST: 5E+9
Default unit: Sa/s

Usage: Query only
Asynchronous command

ACQuire:TYPE <AcquMode>

Sets how the waveform is built from the captured samples.

Parameters:

<AcquMode> SAMPle | PDETect | ENVelope | AVERage

*RST: SAMPle

Usage: Asynchronous command

Manual operation: See "Acquisition mode" on page 136

18.9.5 Vertical setup

The channel suffix <ch> selects the input channel that is affected by the command.

CHANnel<ch>:STATe....1144
CHANnel<ch>:SCALe....1144
CHANnel<ch>:RANGe....1145
CHANnel<ch>:OFFSet....1145
CHANnel<ch>:POSition....1146
CHANnel<ch>:COUPling....1146
CHANnel<ch>:INVert....1147
DISPlay:SIGNal:LABel....1147
CHANnel<ch>:SLABel....1147
CHANnel<ch>:SKEW:TIME....1147
CHANnel<ch>:BANDwidth....1148
CHANnel<ch>:EATScale....1148
CHANnel<ch>:EATTenuation....1149
CHANnel<ch>:IMPedance....1149
CHANnel<ch>:UDUNit....1150
PROBe<ch>:SETup:ADVanced:UNIT....1150

CHANnel<ch>:STATe <State>

Switches the selected channel signal on or off.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "[C<n>]" on page 52

CHANnel<ch>:SCALe <Scale>

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Scale> Range: 0.001 to 1
Increment: 0.001
*RST: 0.05
Default unit: Depends on the connected probe

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 53

CHANnel<ch>:RANGe <Range>

Sets the voltage range across the 10 vertical divisions of the diagram. The command is an alternative to `CHANnel<ch>:SCALe`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Range> Range: 0.01 to 10
Increment: 0.01
*RST: 0.5
Default unit: V/div

Usage: Asynchronous command

CHANnel<ch>:OFFSet <Offset>

Sets the offset voltage, which corrects an offset-affected signal. The vertical center of the selected channel is set to the offset value and the vertical scale is adjusted.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Offset> Range: -1 to 1
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Position]" on page 52

CHANnel<ch>:POSition <Position>

Moves the selected signal up or down in the diagram. While the offset sets a voltage, position is a graphical setting given in divisions.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Position> Positive values move up the waveform, negative values move it down.

Range: -5 to 5
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "[Position]" on page 52

CHANnel<ch>:COUPling <UserCoupling>

Sets the connection of the channel signal, i.e. the input impedance (termination) and a filter (coupling). The command determines what part of the signal is used for waveform analysis and triggering.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<UserCoupling> DC | DCLimit | AC

DC
Connection with 50 Ω termination, passes both DC and AC components of the signal.

DCLimit
Connection with 1 MΩ termination, passes both DC and AC components of the signal.

AC
Connection with 1 MΩ termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

*RST: Instrument specific

Usage: Asynchronous command

Manual operation: See "Coupling" on page 143

CHANnel<ch>:INVert <InvertChannel>

Turns the inversion of the signal amplitude on or off. To invert means to reflect the voltage values of all signal components against the ground level.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<InvertChannel> OFF | ON

ON: inverted waveform
OFF: normal waveform

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Invert channel" on page 144

DISPlay:SIGNal:LABel <Signal>,<Label>

Defines and assigns a label to the specified channel waveform.

Parameters:
<Label> String with the waveform label

Setting parameters:
<Signal> C1 | C2 | ... | C8

Usage: Asynchronous command

Manual operation: See "Label" on page 144

CHANnel<ch>:SLABel <ShowLabel>

Displays a waveform label at the waveform in the diagram, with the content defined in "Settings" > "Appearance" > "Grid".

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ShowLabel> OFF | ON

Usage: Asynchronous command

Manual operation: See "Show label in diagram" on page 144

CHANnel<ch>:SKEW:TIME <Offset>

Sets a skew value to compensate for the delay of the measurement setup or from the circuit specifics that the instrument cannot compensate automatically. It affects only the selected input channel.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Offset> Range: -100E-9 to 100E-9
Increment: 1E-13
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Skew" on page 144

CHANnel<ch>:BANDwidth <BandwidthLimit>

Sets the bandwidth limit. The specified bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3 dB attenuation. Frequencies above the limit are removed from the signal, and noise is reduced.

To set the bandwidth, use one of the <BandwidthLimit> values. The query returns always a numeric result.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Setting parameters:
<BandwidthLimit> FULL | B20 | B50 | B100 | B200 | B350 | B500 | B700 | B1G | B1G5

Availability depends on the maximum bandwidth of the instrument and installed bandwidth extension options. Instead of the given values, you can also set the corresponding numeric value in Hz.

FULL sets the bandwidth to the maximum bandwidth of the instrument. Bandwidth extension options are considered.
All other values set a bandwidth limit lower than the maximum. The number indicates the bandwidth limit in MHz.

Return values:
<Result> Numeric result in Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 147

CHANnel<ch>:EATScale <ExtAttScl>

Sets the attenuation scale for an external divider: linear or logarithmic.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<ExtAttScl> LIN | LOG

*RST: LIN

Usage: Asynchronous command

Manual operation: See "External Attenuation: Scale, Attenuation" on page 148

CHANnel<ch>:EATTenuation <ExtAtt>

Consider a voltage divider that is part of the DUT before the measuring point. The external attenuation is included in the measurement, and the instrument shows the results that would be measured before the divider. External attenuation can be used with all probes.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<ExtAtt> Values depend on the selected scale (`CHANnel<ch>:EATScale` on page 1148) and the unit of the waveform. See "External Attenuation: Scale, Attenuation" on page 148. Limits below are for linear scale.

Range: 0.005 to 1000000
Increment: 0.01
*RST: 1

Usage: Asynchronous command

Manual operation: See "External Attenuation: Scale, Attenuation" on page 148

CHANnel<ch>:IMPedance <Impedance>

Sets the impedance of the connected probe for power calculations and measurements.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Impedance> Range: 0.1 to 100000
Increment: 1
*RST: 50
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Impedance" on page 148

CHANnel<ch>:UDUNit <UseUserUnit>

If ON, you can set the unit to be used for the channel. This setting overwrites the unit of the probe.

See also `PROBe<ch>:SETup:ATTenuation:UNIT`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<UseUserUnit> OFF | ON
*RST: OFF

Example:
```
PROBe2:SET:ATT:UNIT?
--> V
CHAN2:UDUN ON
PROB2:SET:ADV:UNIT W
```
Sets the unit for channel 2 to Watt.

Usage: Asynchronous command

Manual operation: See "User defined unit, Unit" on page 148

PROBe<ch>:SETup:ADVanced:UNIT <UserUnit>

Selects the unit to be used for the specified channel if `CHANnel<ch>:UDUNit` is ON. This setting overwrites the unit of the probe.

See also `PROBe<ch>:SETup:ATTenuation:UNIT`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<UserUnit> V | A | W
*RST: V

Usage: Asynchronous command

Manual operation: See "User defined unit, Unit" on page 148

18.9.6 Channel groups: linked settings

COUPling<m>:ADD 1151
COUPling<m>:OFFSet 1151
COUPling<m>:POSition 1151
COUPling<m>:REMove 1151
COUPling<m>:SCALing 1152
COUPling<m>:STATe 1152

COUPling<m>:ADD

Creates the channel group with the specified index.

Select the analog channels that belong to this group with `COUPling<m>:STATe`.

Suffix:
<m> 1 to 4, index of the channel group.

Usage: Setting only
Asynchronous command

Manual operation: See "Add group" on page 145

COUPling<m>:OFFSet <OffsetState>

If ON, all channels in the specified group use the same offset.

Suffix:
<m> 1 to 4, index of the channel group.

Parameters:
<OffsetState> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Offset" on page 146

COUPling<m>:POSition <PositionState>

If ON, all channels in the specified group use the same vertical position.

Suffix:
<m> 1 to 4, index of the channel group.

Parameters:
<PositionState> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Position" on page 146

COUPling<m>:REMove

Deletes the specified channel group.

Suffix:
<m> 1 to 4, index of the channel group.

Usage: Setting only
Asynchronous command

Manual operation: See "Remove group" on page 145

COUPling<m>:SCALing <ScaleState>

If ON, all channels in the specified group use the same vertical scale.

Suffix:
<m> 1 to 4, index of the channel group.

Parameters:
<ScaleState> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Scale" on page 146

COUPling<m>:STATe <Signal>,<State>
COUPling<m>:STATe? <Signal>

Assigns an analog channel to the specified group. Each channel can be assigned to one channel group.

Suffix:
<m> 1 to 4, index of the channel group.

Parameters:
<State> OFF | ON

Parameters for setting and query:
<Signal> C1 | C2 | ... | C8

Usage: Asynchronous command

Manual operation: See "Add group" on page 145

18.9.7 Probes

This section describes all remote commands for probes.

- Common probe settings 1152
- Settings for active voltage probes 1157
- Settings for modular probes 1164
- Settings for current probes 1168
- Optical isolated probes 1169
- Probe adapter R&S RT-Z2T 1172
- Probe attributes 1173
- Probe at external trigger input 1175

18.9.7.1 Common probe settings

The probe suffix <ch> selects the input channel to which the probe is connected.

PROBe<ch>:SETup:ATTenuation[:AUTO]? 1153
PROBe<ch>:SETup:ATTenuation:MANual 1153
PROBe<ch>:SETup:ATTenuation:MODE 1153
PROBe<ch>:SETup:ATTenuation:DEFProbe 1154
PROBe<ch>:SETup:ATTenuation:UNIT 1155
PROBe<ch>:SETup:BANDwidth? 1155
PROBe<ch>:SETup:OFFSet:TOMean 1156
PROBe<ch>:SETup:OFFSet:AZERo 1156
PROBe<ch>:SETup:OFFSet:USEautozero 1156
PROBe<ch>:SETup:NAME? 1156
PROBe<ch>:SETup:STATe? 1157
PROBe<ch>:SETup:TYPE? 1157

PROBe<ch>:SETup:ATTenuation[:AUTO]?

Returns the attenuation of a detected or predefined probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Attenuation> Range: 0.0002 to 1000
Increment: 0.1
*RST: 1
Default unit: V/V

Usage: Query only
Asynchronous command

Manual operation: See "Attenuation" on page 150

PROBe<ch>:SETup:ATTenuation:MANual <Attenuation>

Sets the attenuation for an unknown probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Attenuation> Range: 0.0001 to 10000
Increment: 0.1
*RST: 1
Default unit: V/V

Usage: Asynchronous command

Manual operation: See "Attenuation" on page 150

PROBe<ch>:SETup:ATTenuation:MODE <AttenuationMode>

Set the mode to MANual if the instrument does not detect the passive probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<AttenuationMode> AUTO | MANual
*RST: AUTO

Usage: Asynchronous command

PROBe<ch>:SETup:ATTenuation:DEFProbe <PredefinedProbe>

Selects one of the predefined probes, or a user-defined probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<PredefinedProbe> NONE | ZC10 | ZC20 | ZC30 | ZD01A100 | ZD01A1000 | HZ15 | HZ17 | RTZ25C1 | ZZ80 | ZS10L | ZD02 | ZD08 | ZC02100 | ZC021000 | ZC03 | ZD002A10 | ZD002A100 | ZD003A20 | ZD003A200 | ZC3110 | ZC311 | ZC3101 | ZH03 | ZP1X | CWT15 | CWT30 | CWTMN1 | CMN50HF3 | CMN50HF15 | CMN50HF30 | CMN50HF015 | CMN50HF06 | CWTUM015 | CWTUM06 | CWTUM1 | V1V1 | V10V1 | V100V1 | V200V1 | V1000V1 | V1A1 | V1A10 | V1A100 | V1A1000 | USER

ZC10 | ZC20 | ZC30 | ZC03
Current probes

ZD02 | ZD08 | ZD01A100 | ZD01A1000 | ZD002A10 | ZD002A100 | ZD003A20 | ZD003A200
Active differential probes, attenuation ratio according to the setting on the probe.
A100 = 100:1
A1000 = 1000:1

HZ15 | HZ17
Near field probes (EMI)

ZC02100 | ZC021000 | ZC3110 | ZC311 | ZC3101
Current probes 100 A/V or 1000 A/V according to the setting on the probe.

CWT15 | CWT30 | CWTMN1 |CWTUM015 | CWTUM06 | CWTUM1 | CMN50HF3 | CMN50HF15 | CMN50HF30 | CMN50HF015 | CMN50HF06
PEM Rogowski probes

ZZ80 | ZH03 | ZP1X |
Passive probes

V1V1 | V10V1 | V100V1 | V200V1 | V1000V1 | V1A1 | V1A10 | V1A100 | V1A1000
Common gain and attenuation settings if the probe type is not in the list.

USER
Probe is not detected and not known to the instrument. Set unit and attenuation manually.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Predefined probe, Type and Name of the probe" on page 150

PROBe<ch>:SETup:ATTenuation:UNIT <Unit>

Returns the unit of the connected probe if the probe is detected or predefined. For unknown probes, you can select the required unit.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Unit> V | A | W
Voltage probe (V), current probe (A), power probe (W)
*RST: V

Usage: Asynchronous command

Manual operation: See "Vertical unit" on page 150

PROBe<ch>:SETup:BANDwidth?

Returns the bandwidth of the connected probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Bandwidth> Range: 10000 to 40E+9
Increment: 10
*RST: 1.5E+9
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "Probe bandwidth" on page 150

PROBe<ch>:SETup:OFFSet:TOMean

Compensates automatically for a DC component of the input signal using the result of a background mean measurement.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Set offset to mean" on page 151

PROBe<ch>:SETup:OFFSet:AZERo

Measures the zero error of the probe. Short the signal pin and the ground pin together, then send the command.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "AutoZero, Use AutoZero" on page 151

PROBe<ch>:SETup:OFFSet:USEautozero <UseAutoZeroOffset>

Corrects the zero error of the probe. The zero error is detected with `PROBe<ch>:SETup:OFFSet:AZERo`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<UseAutoZeroOffset> OFF | ON
*RST: OFF

Example:
```
PROB2:SET:OFFS:AZER
PROB2:SET:OFFS:USE ON
```
Detects the zero error and uses it for correction.

Usage: Asynchronous command

Manual operation: See "AutoZero, Use AutoZero" on page 151

PROBe<ch>:SETup:NAME?

Queries the name of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Name> Name string

Usage: Query only
Asynchronous command

Manual operation: See "Predefined probe, Type and Name of the probe" on page 150

PROBe<ch>:SETup:STATe?

Queries if the probe at the specified input channel is active (detected) or not active (not detected). To switch the probe on, use `CHANnel<ch>:STATe`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<State> DETected | NDETected
*RST: NDETected

Usage: Query only
Asynchronous command

Manual operation: See "Predefined probe, Type and Name of the probe" on page 150

PROBe<ch>:SETup:TYPE?

Queries the class of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Type> String containing the probe class, e.g. None (no probe detected), passive, current, active diff., active single-ended.

Usage: Query only
Asynchronous command

Manual operation: See "Predefined probe, Type and Name of the probe" on page 150

18.9.7.2 Settings for active voltage probes

The probe suffix <ch> selects the input channel to which the probe is connected.

PROBe<ch>:SETup:MODE 1158
PROBe<ch>:SETup:ACCoupling 1159
PROBe<ch>:SETup:CMOFfset 1159
PROBe<ch>:SETup:DISPlaydiff 1160
PROBe<ch>:SETup:EPATtenuator 1160
PROBe<ch>:PMETer:STATe 1160
PROBe<ch>:PMETer:RESults:SINGle? 1161
PROBe<ch>:PMETer:RESults:COMMon? 1161
PROBe<ch>:PMETer:RESults:DIFFerential? 1161
PROBe<ch>:PMETer:RESults:NEGative? 1162
PROBe<ch>:PMETer:RESults:POSitive? 1162
PROBe<ch>:SETup:ADVanced:AUDioverload 1163
PROBe<ch>:SETup:ADVanced:FILTer 1163
PROBe<ch>:SETup:ADVanced:RANGe 1163
PROBe<ch>:SETup:ADVanced:PMToffset 1164

PROBe<ch>:SETup:MODE <Mode>

The micro button is located on the probe head. Pressing this button, you initiate an action on the instrument directly from the probe. The button is disabled during internal automatic processes, for example, during self-alignment, autoset, and level detection.

Select the action that you want to start from the probe.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Mode> RCONtinuous | RSINgle | AUToset | AZERo | OTMean | SITFile | NOACtion | FTRiglevel | PRSetup

RCONtinuous
Run continuous: the acquisition is running as long as the probe button is pressed.

RSINgle
Run single: starts a defined number of acquisitions (same as [Single] key).

AUToset
Starts the autoset procedure.

AZERo
AutoZero: performs an automatic correction of the zero error.

OTMean
Set offset to mean: performs an automatic compensation for a DC component of the input signal.

SITFile
Save image to file: saves the display image in a file.

NOACtion
Nothing is started on pressing the micro button.

FTRiglevel
Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*. The function is not available for an external trigger source.

PRSetup
Opens the "Probes Setup" dialog box.

*RST: RCONtinuous

Usage: Asynchronous command

Manual operation: See "MicroButton" on page 153

PROBe<ch>:SETup:ACCoupling <ProbeCouplingAC>

Enables AC coupling in R&S RT-ZPR power rail probes, which removes DC and very low-frequency components. The R&S RT-ZPR probe requires 50 Ω input termination, for which the channel AC coupling is not available. The probe setting allows AC coupling also at 50 Ω inputs.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ProbeCouplingAC> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "AC Coupling" on page 156

PROBe<ch>:SETup:CMOFfset <CMOffset>

Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<CMOffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "CM offset" on page 154

PROBe<ch>:SETup:DISPlaydiff <DisplayDiff>

Selects the voltage to be measured by the R&S ProbeMeter of differential active probes:

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<DisplayDiff> DIFFerential | SINGleended

DIFFerential
Measures differential and common mode voltages

SINGleended
Measures the voltage between the positive/negative signal socket and the ground.

*RST: DIFFerential

Usage: Asynchronous command

Manual operation: See "Display" on page 155

PROBe<ch>:SETup:EPATtenuator <ProbeAttenuator>

If you use an external attenuator together with one of the differential active probes R&S RT-ZD10/20/30, select the attenuator used to include its attenuation in the measurements.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ProbeAttenuator> NONE | ZA15 | ZA100

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Probe attenuator" on page 155

PROBe<ch>:PMETer:STATe <State>

Activates the integrated R&S ProbeMeter on probes with Rohde & Schwarz probe interface.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "ProbeMeter" on page 153

PROBe<ch>:PMETer:RESults:SINGle?

Returns the R&S ProbeMeter measurement result of single-ended active Rohde & Schwarz probes, the voltage measured between the probe tip and the ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Result>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 153

PROBe<ch>:PMETer:RESults:COMMon?

Returns the R&S ProbeMeter measurement result of differential active R&S probes: the common mode voltage, which is the mean voltage between the signal sockets and the ground socket.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Result>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 153

PROBe<ch>:PMETer:RESults:DIFFerential?

Returns the R&S ProbeMeter measurement result of differential active Rohde & Schwarz probes, the differential voltage - the voltage between the positive and negative signal sockets.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 153

PROBe<ch>:PMETer:RESults:NEGative?

Returns the R&S ProbeMeter measurement result of differential active R&S probes, the voltage that is measured between the negative signal socket and the ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 153

PROBe<ch>:PMETer:RESults:POSitive?

Returns the R&S ProbeMeter measurement result of differential active R&S probes: the voltage that is measured between the positive signal socket and the ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 153

PROBe<ch>:SETup:ADVanced:AUDioverload <Sound>

Activates the acoustic overrange warning in the probe control box. The command is relevant for R&S RT-ZHD probes.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Sound> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Audible overrange" on page 158

PROBe<ch>:SETup:ADVanced:FILTer <State>

Activates the lowpass filter in the probe control box. The filter frequency depends on the probe type and is indicated on the probe control box.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Bandwidth limit" on page 158

PROBe<ch>:SETup:ADVanced:RANGe <ProbeRange>

Sets the voltage range of an R&S RT-ZHD probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ProbeRange> AUTO | MHIGh | MLOW

AUTO
The voltage range is set with `CHANnel<ch>:SCALe`.

MHIGh
Sets the higher voltage range of the connected probe. To query the value, use `PROBe<ch>:SETup:ATTenuation[:AUTO]?`.

MLOW
Sets the lower voltage range of the connected probe. To query the value, use `PROBe<ch>:SETup:ATTenuation[:AUTO]?`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Range" on page 158

PROBe<ch>:SETup:ADVanced:PMToffset

Sets the measured ProbeMeter value as offset. Thus, the value is considered in measurements.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Setting only
Asynchronous command

Manual operation: See "Set offset to ProbeMeter value, ProbeMeter to offset" on page 156

18.9.7.3 Settings for modular probes

PROBe<ch>:SETup:PRMode 1164
PROBe<ch>:SETup:CMOFfset 1165
PROBe<ch>:SETup:DMOFfset 1165
PROBe<ch>:SETup:NOFFset 1166
PROBe<ch>:SETup:POFFset 1166
PROBe<ch>:SETup:TERM:ADJust 1166
PROBe<ch>:SETup:TERM:MEASure? 1167
PROBe<ch>:SETup:TERM:MODE 1167
PROBe<ch>:SETup:TERM:STATe 1167

PROBe<ch>:SETup:PRMode <MeasMode>

Sets the measurement mode of modular probes.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<PrbMeasMd> DMODe | CMODe | PMODe | NMODe

DMODe
Differential mode input voltage (V_{dm}), the voltage between the positive and negative input terminal.

CMODe
Common mode input voltage (V_{cm}), the mean voltage between the positive and negative input terminal vs. ground.

PMODe
Positive single-ended input voltage (V_p). the voltage between the positive input terminal and ground.

NMODe
Negative single-ended input voltage (V_N). the voltage between the negative input terminal and ground.

*RST: DMODe

Usage: Asynchronous command

Manual operation: See "Probe mode" on page 161

PROBe<ch>:SETup:CMOFfset <CMOffset>

Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<CMOffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "CM offset" on page 154

PROBe<ch>:SETup:DMOFfset <DMOffset>

Sets the differential offset to compensate a DC voltage applied between the positive (V_p) and the negative (V_n) input terminal at the probe tip.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<DMOffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM offset, CM offset, P offset, N offset" on page 162

PROBe<ch>:SETup:NOFFset <NOffset>

Sets the negative offset to compensate a DC voltage applied to the negative input terminal (V_n) referenced to ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<NOffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM offset, CM offset, P offset, N offset" on page 162

PROBe<ch>:SETup:POFFset <POffset>

Sets the positive offset to compensate a DC voltage applied to the positive input terminal (V_p) referenced to ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<POffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM offset, CM offset, P offset, N offset" on page 162

PROBe<ch>:SETup:TERM:ADJust <VoltageAdj>

Activates control of the termination voltage.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<VoltageAdj>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Adjustment" on page 163

PROBe<ch>:SETup:TERM:MEASure?

Returns the measured common mode voltage.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<VoltageMeas> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurement" on page 163

PROBe<ch>:SETup:TERM:MODE <Mode>

Selects the voltage that is used for termination.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Mode> AUTO | MANual

AUTO: the instrument uses the measured common mode voltage for termination.
MANual: enter the voltage to be used for termination with `PROBe<ch>:SETup:TERM:ADJust`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 163

PROBe<ch>:SETup:TERM:STATe <VoltageState>

Activates control of the termination voltage.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<VoltageState> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 163

18.9.7.4 Settings for current probes

The probe suffix <ch> selects the input channel to which the probe is connected.

PROBe<ch>:SETup:GAIN:AUTO? 1168
PROBe<ch>:SETup:GAIN:MANual 1168
PROBe<ch>:SETup:DEGauss 1168
PROBe<ch>:SETup:OFFSet:ZADJust 1169
PROBe<ch>:SETup:OFFSet:STPRobe 1169

PROBe<ch>:SETup:GAIN:AUTO?

Returns the gain of a detected or predefined current probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Gain> Range: 0.001 to 5000
Increment: 0.1
*RST: 1
Default unit: A/V

Usage: Query only
Asynchronous command

Manual operation: See "Gain, Manual gain" on page 159

PROBe<ch>:SETup:GAIN:MANual <Gain>

Sets the gain for an unknown current probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Gain> Range: 0.0001 to 10000
Increment: 0.0001
*RST: 1
Default unit: V/V

Usage: Asynchronous command

Manual operation: See "Gain, Manual gain" on page 159

PROBe<ch>:SETup:DEGauss

Demagnetizes the core if it has been magnetized by switching the power on and off, or by an excessive input. Always carry out demagnetizing before measurement.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "DeGauss" on page 159

PROBe<ch>:SETup:OFFSet:ZADJust <ZeroAdjustValue>

Set the waveform to zero position. It corrects the effect of a voltage offset or temperature drift. To set the value by the instrument, use `PROBe<ch>:SETup:OFFSet:AZERo`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ZroAdjVal>
Range: -100 to 100
Increment: 0.1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Zero adjust" on page 160

PROBe<ch>:SETup:OFFSet:STPRobe

Saves the zero adjust value in the probe box. If you connect the probe to another channel or to another Rohde & Schwarz oscilloscope, the value is read out again, and you can use the probe without further adjustment.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Save to probe" on page 160

18.9.7.5 Optical isolated probes

The commands of this section are relevant for optical isolated probes. The commands are available in firmware version 2.2 and higher.

PROBe<ch>:SETup:ADVanced:PMToffset 1170
PROBe<ch>:SETup:LASer:STATe? 1170
PROBe<ch>:SETup:ALIGnment:GAIN:EXECute 1170
PROBe<ch>:SETup:ALIGnment:ZERO:EXECute 1171

PROBe<ch>:SETup:ALIGnment:WRITe....1171
PROBe<ch>:SETup:ADVanced:RDEFaults....1171
PROBe<ch>:SETup:TIPModel:NAME?....1171
PROBe<ch>:SETup:TIPModel:INFO?....1172

PROBe<ch>:SETup:ADVanced:PMToffset

Sets the measured ProbeMeter value as offset. Thus, the value is considered in measurements.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Setting only
Asynchronous command

Manual operation: See "Set offset to ProbeMeter value, ProbeMeter to offset" on page 156

PROBe<ch>:SETup:LASer:STATe?

Returns the current status of the laser.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<LaserState> 1 | 2 | 3

1
The laser is working.

2
The laser needs service, but is still working.

3
Defective laser, send to your Rohde & Schwarz service center.

*RST: 1

Usage: Query only
Asynchronous command

Manual operation: See "Laser state" on page 165

PROBe<ch>:SETup:ALIGnment:GAIN:EXECute

Corrects the zero point error and the gain error of the R&S RT-ZISO probe.

To write the alignment result to the non-volatile flash of the probe, use `PROBe<ch>:SETup:ALIGnment:WRITe`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Gain/Zero-error alignment" on page 166

PROBe<ch>:SETup:ALIGnment:ZERO:EXECute

Performs a self-alignment and corrects the zero point error of the R&S RT-ZISO probe.

To write the alignment result to the non-volatile flash of the probe, use `PROBe<ch>:SETup:ALIGnment:WRITe`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Zero-error alignment" on page 165

PROBe<ch>:SETup:ALIGnment:WRITe

The command writes the alignment result to the non-volatile flash of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

PROBe<ch>:SETup:ADVanced:RDEFaults

Resets the zero point and gain error correction to the factory default values.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Restore default values" on page 166

PROBe<ch>:SETup:TIPModel:NAME?

Returns the name of the tip module that is connected to the R&S RT-ZISO probe at the specified channel.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<ProbeTipModel> UNKNOWN | Z101 | Z201 | Z202 | Z203 | Z301 | Z302 | NONE
*RST: NONE

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:TIPModel:INFO?

Return detailed information on the tip module that is connected to a R&S RT-ZISO probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<TipInfo> Comma-separated list of tip module attributes: Name, Type, PartNumber, SerialNumber, InputCapacity, InputImpedance, InputMin, InputMax, OffsetMin, OffsetMax, Unit, Bandwidth, Attenuation.

Usage: Query only
Asynchronous command

18.9.7.6 Probe adapter R&S RT-Z2T

PROBe<ch>:SETup:ADAPter 1172
PROBe<ch>:SETup:ATTenuation:TDEFprobe 1172

PROBe<ch>:SETup:ADAPter <Type>

Selects the adapter. The query returns the identified adapter type.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Type> NONE | Z2T
*RST: NONE

Usage: Asynchronous command

PROBe<ch>:SETup:ATTenuation:TDEFprobe <TekPredefProbe>

Selects the Tektronix probe that is connected to the R&S RT-Z2T adapter.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<TekPredefProbe> NONE | P5205A50 | P5205A500 | P5210A100 | P5210A1000 | P6205 | P6241 | P6243 | P6245 | P6246A1 | P6246A10 | P6247A1 | P6247A10 | P6248A1 | P6248A10 | P6249 | P6250A5 | P6250A50 | P6251A5 | P6251A50 | P6701B | P6703B | P6711 | P6713 | TCP202

*RST: NONE

Example:
```
PROBe2:SETup:ADAPter
<-- Z2T
PROBe2:SETup:ATTenuation:TDEFprobe P5205A50
```

Checks the adapter state on channel 2, and selects the probe P5205A50.

Usage: Asynchronous command

18.9.7.7 Probe attributes

PROBe<ch>:ID:PARTnumber? 1173
PROBe<ch>:ID:PRDate? 1173
PROBe<ch>:ID:SRNumber? 1174
PROBe<ch>:ID:SWVersion? 1174
PROBe<ch>:SETup:CAPacitance? 1174
PROBe<ch>:SETup:DCRange:MAX? 1174
PROBe<ch>:SETup:DCRange:MIN? 1175
PROBe<ch>:SETup:IMPedance? 1175

PROBe<ch>:ID:PARTnumber?

Queries the Rohde & Schwarz part number of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<PartNumber> Part number in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:ID:PRDate?

Queries the production date of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<ProductionDate> Date in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:ID:SRNumber?

Queries the serial number of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<SerialNo> Serial number in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:ID:SWVersion?

Queries the version of the probe firmware.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Softwareversion> Version number in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:CAPacitance?

Queries the input capacitance of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<InputCapacity> Range: 1E-13 to 1E-07
Default unit: F

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:DCRange:MAX?

Returns the maximum value of the dynamic DC range.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<DynDCrangeMax> Range: -1E+26 to 1E+26
Increment: 1E-12
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:DCRange:MIN?

Returns the minimum value of the dynamic DC range.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<DynDCrangeMin> Range: -1E+26 to 1E+26
Increment: 1E-12
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:IMPedance?

Queries the termination of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<InputImpedance> Range: 0 to 1E+9
Default unit: Ω

Usage: Query only
Asynchronous command

18.9.7.8 Probe at external trigger input

TRPRobe:SETup:ATTenuation:UNIT?....1176
TRPRobe:SETup:ATTenuation[:AUTO]?....1176
TRPRobe:SETup:NAME?....1176
TRPRobe:SETup:STATe?....1176
TRPRobe:SETup:TYPE?....1176

TRPRobe:SETup:ATTenuation:UNIT?

Returns the unit of the probe that is connected to the external trigger input.

Return values:

<PrbAttUnt> V | A | W
*RST: V

Usage: Query only
Asynchronous command

TRPRobe:SETup:ATTenuation[:AUTO]?

Returns the attenuation of the probe that is connected to the external trigger input.

Return values:

<PrbAttMdAuto> Range: 0.001 to 1000
Increment: 0.1
*RST: 1
Default unit: V/V

Usage: Query only
Asynchronous command

TRPRobe:SETup:NAME?

Returns the name of the probe that is connected to the external trigger input.

Return values:

<Name> String parameter

Usage: Query only
Asynchronous command

TRPRobe:SETup:STATe?

Returns the state of the probe that is connected to the external trigger input.

Return values:

<State> DETected | NDETected
*RST: NDETected

Usage: Query only
Asynchronous command

TRPRobe:SETup:TYPE?

Returns the type of the probe that is connected to the external trigger input.

Return values:

<Type> String parameter

Usage: Query only
Asynchronous command

18.9.8 Fast segmentation

ACQuire:SEGMented:MAX <MaxAcqs>

If ON, the instrument acquires the maximum number of segments that can be stored in the memory. The maximum number depends on the current sample rate and record length settings.

If OFF, define the number of segments in a fast segmentation cycle with `ACQuire:COUNt`.

Parameters:
<MaxAcqs> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Acquire maximum" on page 138

ACQuire:SEGMented:STATe <State>

If fast segmentation is enabled, the acquisitions are performed as fast as possible, without processing and displaying the waveforms. When acquisition has been stopped, the data is processed and the latest waveform is displayed. Older waveforms are stored in segments. You can display and analyze the segments using the history.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Fast segmentation" on page 138

18.9.9 High definition mode

HDEFinition:BWIDth 1177
HDEFinition:RESolution? 1178
HDEFinition:STATe 1178

HDEFinition:BWIDth <Bandwidth>

Sets the filter bandwidth for the high definition mode.

Parameters:

<Bandwidth>
Range: 1000 to 500E+6
Increment: 1000
*RST: 100E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 139

HDEFinition:RESolution?

Displays the resulting vertical resolution in high definition mode. The higher the filter bandwidth, the lower the resolution.

Return values:

<Resolution>
Range: 0 to 18
Increment: 0.1
*RST: 0
Default unit: bit

Usage: Query only
Asynchronous command

Manual operation: See "Resolution in bits" on page 139

HDEFinition:STATe <State>

Enables high definition mode, which increases the numeric resolution of the waveform signal.

Parameters:

<State>
OFF | ON

`ON`: high definition mode
`OFF`: normal oscilloscope mode

*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 139

18.9.10 Waveform data export

To transfer the waveform data to a remote computer, use:

- `CHANnel<ch>:DATA:HEADer?` on page 1299
- `CHANnel<ch>:DATA[:VALues]?` on page 1299

For fast export of several waveforms at once, use `EXPort:WAVeform:DATA[:VALues]?` on page 1307.

For export of waveform data to file, see Section 18.13.4, "Waveform data: export to file", on page 1285.

18.9.11 Reference clock

SENSe[:ROSCillator]:OUTPut[:ENABle] <ReferenceOutput>

Sends the used reference clock signal to the Ref Out 10 MHz connector.

Parameters:
<ReferenceOutput> OFF | ON
*RST: OFF

Usage: SCPI confirmed
Asynchronous command

Manual operation: See "Reference output: Enable" on page 130

SENSe[:ROSCillator]:OUTPut:FREQuency?

Returns the frequency of the output reference signal.

Return values:
<OutputFreq> Range: 10 MHz
Default unit: Hz

Usage: Query only
SCPI confirmed
Asynchronous command

Manual operation: See "Output frequency" on page 130

SENSe[:ROSCillator]:SOURce <RefSource>

Selects the source of the reference clock: internal reference signal of the OCXO, or an external reference signal.

Parameters:
<RefSource> INTernal | EXTernal
*RST: INTernal

Usage: Asynchronous command

Manual operation: See "Active clock: Source" on page 130

18.10 Trigger

Trigger commands use several suffixes.

LEVel<n>, NOISe<m>

The suffix indicates the analog channel for which the command takes effect. C1 has suffix 1, C2 has suffix 2, and so on.

Event<ev>

The suffix indicates the sequence step, for which the command takes effect when you trigger on a sequence. If you trigger on a single event, the suffix = 1 and can be omitted.

- 1 = A-trigger
- 2 = B-trigger
- 3 = R-trigger (reset event)

Asynchronous commands

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

18.10.1 Common trigger settings

TRIGger:MEVents:MODE....1180
TRIGger:EVENt<ev>:TYPE....1181
TRIGger:EVENt<ev>:LEVel<n>[:VALue]....1181
TRIGger:EVENt<ev>:LSET[:VALue]....1181
TRIGger:FINDlevel....1182
TRIGger:EVENt<ev>:SOURce....1182

TRIGger:MEVents:MODE <Class>

Selects, if you want to trigger on a single event, or on a series of events.

Parameters:

<Class> SINGle | SEQuence
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Trigger on" on page 173

TRIGger:EVENt<ev>:TYPE <Type>

Selects the trigger type. In a trigger sequence, the trigger type is set for each condition.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Type> EDGE | GLITch | WIDTh | RUNT | WINDow | TIMeout | INTerval | SLEWrate | ANEDge | SETHold | STATe | PATTern

ANEDge = analog edge trigger is the only trigger type if the extern trigger source is used.
For SETHold, also DATatoclock can be used.

*RST: EDGE

Usage: Asynchronous command

Manual operation: See "Type" on page 174

TRIGger:EVENt<ev>:LEVel<n>[:VALue] <Level>

Sets the trigger level for the specified event for all trigger types that require one trigger level. The trigger event and the source are specified by suffixes.

If the trigger source is serial bus, the trigger level is set by the thresholds in the protocol configuration.

Alternatively, you can use `TRIGger:EVENt<ev>:LSET[:VALue]`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level>
Range: -4.8 to 5
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Level]" on page 49

TRIGger:EVENt<ev>:LSET[:VALue] <Source>,<Level>

Sets the trigger level for the specified event for all trigger types that require one trigger level. The trigger event and the source are specified by suffixes.

If the trigger source is serial bus, the trigger level is set by the thresholds in the protocol configuration.

Alternatively, you can use `TRIGger:EVENt<ev>:LEVel<n>[:VALue]`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Level> Range: -4.8 to 5
Increment: 0.01
*RST: 0
Default unit: V

Setting parameters:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8

Usage: Asynchronous command

TRIGger:FINDlevel

Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

Usage: Event
Asynchronous command

Manual operation: See "Find level" on page 175

TRIGger:EVENt<ev>:SOURce <SourceDetailed>

Selects the source of the trigger signal for the selected trigger event. The trigger source works even if it is not displayed in a diagram.

Available sources depend on the trigger sequence setting. If you trigger on a single event, all inputs can be used as trigger source. If you trigger on a sequence, only analog channels can be set as trigger source for A, B, and R-events.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<SourceDetailed> **C1 | C2 | ... | C8**
Available for single event, and A, B and R-events in a trigger sequence

EXTernanalog | LINE |
Available for single event (suffix 1)

D0 | D1 | D2 | ... | D14 | D15
Digital channels, require MSO option. Available for single event (suffix 1)

SBUS1 | SBUS2 | SBUS3 | SBUS4
Available if one or more serial protocol options are installed. If the hardware trigger is supported for a protocol, triggering on single event is possible with hardware trigger settings. For all protocols, the software trigger is supported in a "A → Serial bus" (event 2).

*RST: C1

Usage: Asynchronous command

Manual operation: See "Source" on page 173

18.10.2 Trigger sequence

TRIGger:MEVents:AEVents....1183
TRIGger:MEVents:SEQuence<se>:COUNt....1183
TRIGger:MEVents:SEQuence<se>:DELay....1184
TRIGger:MEVents:SEQuence<se>:RESet:EVENt....1184
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME....1184
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout[:ENABle]....1185

TRIGger:MEVents:AEVents <Type>

Selects the type of the trigger sequence.

Parameters:

<Type> AONLy | ABR | AZ | ASB

AONLy = single event, same as `TRIGger:MEVents:MODE SINGle`
ABR = sequence A → B → R
AZ = sequence A → Zone trigger
ASB = sequence A → Serial bus

*RST: AONLy

Usage: Asynchronous command

Manual operation: See "Trigger sequence" on page 176

TRIGger:MEVents:SEQuence<se>:COUNt <Events>

Sets the number of B-trigger conditions to be fulfilled after an A-trigger. The last B-trigger causes the trigger event. The waiting time for B-triggers can be restricted with a reset condition: timeout or reset event.

Suffix:

<se> 1..3
2

Parameters:

<Events> Range: 1 to 2147483647
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "B event count" on page 177

TRIGger:MEVents:SEQuence<se>:DELay <Delay>

Sets the time that the instrument waits after an A-trigger until it recognizes B-triggers.

Suffix:
<se> 1

Parameters:
<Delay> Range: 0 to 50
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Delay" on page 177

TRIGger:MEVents:SEQuence<se>:RESet:EVENt <State>

If enabled, the trigger sequence is restarted by the R-trigger condition if the specified number of B-triggers does not occur before the R-trigger conditions are fulfilled.

Suffix:
<se> 3

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable reset event" on page 177

TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME <ResetTimeout>

The time the instrument waits for the number of B-events specified using `TRIGger:MEVents:SEQuence<se>:COUNt`, before the sequence is restarted with the A-trigger.

Suffix:
<se> Irrelevant, omit the suffix.

Parameters:
<ResetTimeout> Range: 0 to 50
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Enable reset by time, Reset timeout" on page 177

TRIGger:MEVents:SEQuence<se>:RESet:TIMeout[:ENABle] <State>

If set to ON, the instrument waits for the time defined using `TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME` for the specified number of B-events. If no trigger occurs during that time, the sequence is restarted with the A-event.

Suffix:
<se> Irrelevant, omit the suffix.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable reset by time, Reset timeout" on page 177

18.10.3 Edge trigger

TRIGger:EVENt<ev>:EDGE:SLOPe....1185
TRIGger:ANEDge:LEVel....1185
TRIGger:ANEDge:COUPling....1186
TRIGger:ANEDge:FILTer....1186
TRIGger:ANEDge:CUToff:HIGHpass....1186
TRIGger:ANEDge:CUToff:LOWPass....1187
TRIGger:ANEDge:NREJect....1187

TRIGger:EVENt<ev>:EDGE:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 178

TRIGger:ANEDge:LEVel <ExtTrigLev>

Sets the trigger level for the external trigger source.

Parameters:
<ExtTrigLev> Range: - 5 to 5
Default unit: V

Usage: Asynchronous command

Manual operation: See "Level" on page 174

TRIGger:ANEDge:COUPling <Coupling>

Sets the connection of the external trigger signal, i.e. the input impedance and a termination. The coupling determines what part of the signal is used for triggering.

Parameters:

<Coupling> DC | DCLimit | AC

DC
Connection with 50 Ω termination, passes both DC and AC components of the signal.

DCLimit
Connection with 1 MΩ termination, passes both DC and AC components of the signal.

AC
Connection with 1 MΩ termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

*RST: DCLimit

Usage: Asynchronous command

Manual operation: See "Coupling" on page 180

TRIGger:ANEDge:FILTer <Filter>

Selects the filter mode for the external trigger signal.

Parameters:

<Filter> OFF | LFReject | RFReject

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Filter, Cut-off" on page 180

TRIGger:ANEDge:CUToff:HIGHpass <CutOffFreq>

Frequencies below the cutoff frequency are rejected, higher frequencies pass the filter.

Parameters:

<CutOffFreq> KHZ5 | KHZ50

KHZ5 = 5 kHz
KHZ50 = 50 kHz

*RST: KHZ50

Usage: Asynchronous command

Manual operation: See "Filter, Cut-off" on page 180

TRIGger:ANEDge:CUToff:LOWPass <CutOffFreq>

Frequencies higher than the cutoff frequency are rejected, lower frequencies pass the filter.

Parameters:

<CutOffFreq> KHZ50 | MHZ50

KHZ50 = 50 kHz
MHZ50 = 50 MHz

*RST: KHZ50

Usage: Asynchronous command

Manual operation: See "Filter, Cut-off" on page 180

TRIGger:ANEDge:NREJect <NoiseReject>

Enables an automatic hysteresis on the trigger level to avoid unwanted trigger events caused by noise.

Parameters:

<NoiseReject> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Trigger noise reject" on page 180

18.10.4 Glitch trigger

TRIGger:EVENt<ev>:GLITch:POLarity....1187
TRIGger:EVENt<ev>:GLITch:RANGe....1188
TRIGger:EVENt<ev>:GLITch:WIDTh....1188

TRIGger:EVENt<ev>:GLITch:POLarity <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Polarity> POSitive | NEGative | EITHer

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 181

TRIGger:EVENt<ev>:GLITch:RANGe <RangeMode>

Selects which glitches are identified: shorter or longer than the width specified using `TRIGger:EVENt<ev>:GLITch:WIDTh`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<RangeMode> SHORter | LONGer

SHORter
Glitches shorter than the specified width are identified.

LONGer
Glitches longer than the specified width are identified.

*RST: SHORter

Usage: Asynchronous command

Manual operation: See "Range" on page 181

TRIGger:EVENt<ev>:GLITch:WIDTh <Width>

Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value, depending on the value set with `TRIGger:EVENt<ev>:GLITch:RANGe`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Width>
Range: 1E-10 to 10000
Increment: 0.0001
*RST: 1E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 181

18.10.5 Width trigger

TRIGger:EVENt<ev>:WIDTh:DELTa 1188
TRIGger:EVENt<ev>:WIDTh:POLarity 1189
TRIGger:EVENt<ev>:WIDTh:RANGe 1189
TRIGger:EVENt<ev>:WIDTh:WIDTh 1189

TRIGger:EVENt<ev>:WIDTh:DELTa <WidthDelta>

Defines a range around the width value.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<WidthDelta>
Range: 0 to 432
Increment: 5E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 183

TRIGger:EVENt<ev>:WIDTh:POLarity <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Polarity> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 183

TRIGger:EVENt<ev>:WIDTh:RANGe <RangeMode>

Selects how the range of a pulse width is defined.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<RangeMode> WITHin | OUTSide | SHORter | LONGer
*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Range" on page 183

TRIGger:EVENt<ev>:WIDTh:WIDTh <Width>

Depending on the values of `TRIGger:EVENt<ev>:WIDTh:RANGe` the width sets:

- For the ranges `Within` and `Outside`, the width defines the center of a time range which is defined by the limits "±Delta" (see `TRIGger:EVENt<ev>:WIDTh:DELTa`).
- For the ranges `Shorter` and `Longer`, it defines the maximum and minimum time lapse, respectively.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Width>
Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 183

18.10.6 Runt trigger

TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer....1190
TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer....1190
TRIGger:EVENt<ev>:LSET:RUNT:LOWer....1190
TRIGger:EVENt<ev>:LSET:RUNT:UPPer....1190
TRIGger:EVENt<ev>:RUNT:DELTa....1191
TRIGger:EVENt<ev>:RUNT:POLarity....1191
TRIGger:EVENt<ev>:RUNT:RANGe....1192
TRIGger:EVENt<ev>:RUNT:WIDTh....1192

TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer <Level>
TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer <Level>

Set the lower and upper trigger levels for the runt trigger. The trigger event and the source are specified by suffixes.

Alternatively, you can use `TRIGger:EVENt<ev>:LSET:RUNT:LOWer` and `TRIGger:EVENt<ev>:LSET:RUNT:UPPer`.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Level>
Range: -10 to 10
Increment: 0.001
*RST: -0.1 (lowerlevel), 0.1 (upper level)
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 184

TRIGger:EVENt<ev>:LSET:RUNT:LOWer <Source>,<Level>
TRIGger:EVENt<ev>:LSET:RUNT:UPPer <Source>,<Level>
TRIGger:EVENt<ev>:LSET:RUNT:UPPer? <Source>

Set the lower and upper trigger levels for the runt trigger. The trigger event is specified by a suffix, and the source by a parameter.

Alternatively, you can use `TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer` and `TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Level> Range: -10 to 10
Increment: 0.001
*RST: -0.1 (lowerlevel), 0.1 (upper level)
Default unit: V

Parameters for setting and query:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8
Trigger source

Usage: Asynchronous command

TRIGger:EVENt<ev>:RUNT:DELTa <WidthDelta>

Defines a range around the runt width specified using `TRIGger:EVENt<ev>:RUNT:WIDTh`.

Available if `TRIGger:EVENt<ev>:RUNT:RANGe` is set to `WITHin` or `OUTSide`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<WidthDelta> Range: 1E-10 to 864
Increment: 1E-07
*RST: 1E-10
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 185

TRIGger:EVENt<ev>:RUNT:POLarity <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Polarity> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 181

TRIGger:EVENt<ev>:RUNT:RANGe <Mode>

Defines the time limit of the runt pulse in relation to the `TRIGger:EVENt<ev>:RUNT:WIDTh` and `TRIGger:EVENt<ev>:RUNT:DELTa` settings.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Mode> ANY | LONGer | SHORter | WITHin | OUTSide

ANY
Triggers on all runts fulfilling the level condition, without time limitation.

LONGer
Triggers on runts longer than the given runt width.

SHORter
Triggers on runts shorter than the given runt width.

WITHin
Triggers if the runt length is inside a given time range. The range is defined by runt width and ±Delta.

OUTSide
Triggers if the runt length is outside a given time range. The range is defined by runt width and ±Delta.

*RST: ANY

Usage: Asynchronous command

Manual operation: See "Range" on page 185

TRIGger:EVENt<ev>:RUNT:WIDTh <Width>

Defines the upper or lower voltage threshold.

It is not available if `TRIGger:EVENt<ev>:RUNT:RANGe` is set to `ANY`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Width>
Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Runt width" on page 185

18.10.7 Window trigger

TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer....1193
TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer....1193
TRIGger:EVENt<ev>:LSET:WINDow:LOWer....1193
TRIGger:EVENt<ev>:LSET:WINDow:UPPer....1193
TRIGger:EVENt<ev>:WINDow:DELTa....1194
TRIGger:EVENt<ev>:WINDow:RANGe....1194
TRIGger:EVENt<ev>:WINDow:TIME....1195
TRIGger:EVENt<ev>:WINDow:WIDTh....1195

TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer <Level>
TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer <Level>

Set the lower and upper trigger levels for the window trigger. The trigger event and the source are specified by suffixes.

Alternatively, you can use `TRIGger:EVENt<ev>:LSET:WINDow:LOWer` and `TRIGger:EVENt<ev>:LSET:WINDow:UPPer`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level>
Range: -0.24 to 0.24
Increment: 0.0005
*RST: -0.1 (lowerlevel), 0.1 (upper level)
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 186

TRIGger:EVENt<ev>:LSET:WINDow:LOWer <Source>,<Level>
TRIGger:EVENt<ev>:LSET:WINDow:UPPer <Source>,<Level>
TRIGger:EVENt<ev>:LSET:WINDow:UPPer? <Source>

Set the lower and upper trigger levels for the window trigger. The trigger event is specified by a suffix, and the source by a parameter.

Alternatively, you can use `TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer` and `TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Level>
Range: -0.24 to 0.24
Increment: 0.0005
*RST: -0.1 (lowerlevel), 0.1 (upper level)
Default unit: V

Parameters for setting and query:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8

Usage: Asynchronous command

TRIGger:EVENt<ev>:WINDow:DELTa <WidthDelta>

Defines a range around the width value.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<WidthDelta>
Range: 0 to 432
Increment: 5E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 187

TRIGger:EVENt<ev>:WINDow:RANGe <RangeMode>

Selects how the signal run is compared with the window.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<RangeMode> ENTer | EXIT | WITHin | OUTSide

ENTer
Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.

EXIT
Triggers when the signal leaves the window.

WITHin
Triggers if the signal stays between the upper and lower level for a specified time. The time is defined with `TRIGger:EVENt<ev>:WINDow:TIME`.

OUTSide
Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is defined with `TRIGger:EVENt<ev>:WINDow:TIME`.

*RST: ENTer

Usage: Asynchronous command

Manual operation: See "Vertical condition" on page 186

TRIGger:EVENt<ev>:WINDow:TIME <TimeRangeMode>

Available for `TRIGger:EVENt<ev>:WINDow:RANGe` = `WITHin` and `OUTSide`.

Selects how the time limit of the window is defined.

You can specify the width with `TRIGger:EVENt<ev>:WINDow:WIDTh` and the delta with `TRIGger:EVENt<ev>:WINDow:DELTa`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<TimeRangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers if the signal stays inside or outside the vertical window limits at least for the time *Width - Delta* and for *Width + Delta* at the most.

OUTSide
"Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than *Width - Delta* or longer than *Width + Delta*.

SHORter
Triggers if the signal crosses vertical limits before the specified width time is reached.

LONGer
Triggers if the signal crosses vertical limits before the specified width time is reached.

*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Time condition" on page 187

TRIGger:EVENt<ev>:WINDow:WIDTh <Width>

Depending on the values of `TRIGger:EVENt<ev>:WINDow:RANGe` the width sets:

- For the ranges `Within` and `Outside`, the width defines the center of a time range. The range is defined by the limits "±Delta", see `TRIGger:EVENt<ev>:WINDow:DELTa`.
- For the ranges `Shorter` and `Longer`, it defines the maximum and minimum time lapse, respectively.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Width>
Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 187

18.10.8 Timeout trigger

TRIGger:EVENt<ev>:TIMeout:RANGe 1196
TRIGger:EVENt<ev>:TIMeout:TIME 1196

TRIGger:EVENt<ev>:TIMeout:RANGe <TimeoutMode>

Sets the relation of the signal level to the trigger level for the timeout trigger.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<TimeoutMode> HIGH | LOW | EITHer

HIGH = stays high, the signal level stays above the trigger level.
LOW = stays low, the signal level stays below the trigger level.
EITHer = stays high or low.

*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Range" on page 188

TRIGger:EVENt<ev>:TIMeout:TIME <Time>

Sets the time limit for the timeout at which the instrument triggers.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Time>
Range: 1E-10 to 10000
Increment: 1E-07
*RST: 1E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 188

18.10.9 Interval trigger

TRIGger:EVENt<ev>:INTerval:DELTa 1197
TRIGger:EVENt<ev>:INTerval:RANGe 1197
TRIGger:EVENt<ev>:INTerval:SLOPe 1198
TRIGger:EVENt<ev>:INTerval:WIDTh 1198

TRIGger:EVENt<ev>:INTerval:DELTa <WidthDelta>

Sets a range around the interval width value specified with `TRIGger:EVENt<ev>:INTerval:WIDTh`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<WidthDelta>
Range: 0 to 10
Increment: 1E-07
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 190

TRIGger:EVENt<ev>:INTerval:RANGe <RangeMode>

Defines the range of an interval in relation to the interval width specified using `TRIGger:EVENt<ev>:INTerval:WIDTh` and `TRIGger:EVENt<ev>:INTerval:DELTa`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<RangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers on pulses inside a given range. The range is defined by the interval width ±delta.

OUTSide
Triggers on pulses outside a given range. The range is defined by the interval width ±delta.

SHORter
Triggers on pulses shorter than the given interval width.

LONGer
Triggers on pulses longer than the given interval width.

*RST: OUTSide

Usage: Asynchronous command

Manual operation: See "Range" on page 189

TRIGger:EVENt<ev>:INTerval:SLOPe <Slope>

Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 189

TRIGger:EVENt<ev>:INTerval:WIDTh <Width>

Sets the time between two pulses for the interval trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Width> Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Interv. width" on page 190

18.10.10 Slew rate trigger

TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer 1198
TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer 1198
TRIGger:EVENt<ev>:LSET:SLEW:LOWer 1199
TRIGger:EVENt<ev>:LSET:SLEW:UPPer 1199
TRIGger:EVENt<ev>:SLEW:DELTa 1199
TRIGger:EVENt<ev>:SLEW:RANGe 1200
TRIGger:EVENt<ev>:SLEW:RATE 1200
TRIGger:EVENt<ev>:SLEW:SLOPe 1201

TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer <Level>
TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer <Level>

Set the lower and upper trigger levels for the slew rate trigger. The trigger event and the source are specified by suffixes.

Alternatively, you can use `TRIGger:EVENt<ev>:LSET:SLEW:LOWer` and `TRIGger:EVENt<ev>:LSET:SLEW:UPPer`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level> Range: -4.8 to 5
Increment: 0.01
*RST: -0.1 (lowerlevel), 0.1 (upper level)
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 191

TRIGger:EVENt<ev>:LSET:SLEW:LOWer <Source>,<Level>
TRIGger:EVENt<ev>:LSET:SLEW:UPPer <Source>,<Level>
TRIGger:EVENt<ev>:LSET:SLEW:UPPer? <Source>

Set the lower and upper trigger levels for the slew rate trigger. The trigger event is specified by a suffix, and the source by a parameter.

Alternatively, you can use `TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer` and `TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Level> Range: -4.8 to 5
Increment: 0.01
*RST: -0.1 (lowerlevel), 0.1 (upper level)
Default unit: V

Parameters for setting and query:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8

Usage: Asynchronous command

TRIGger:EVENt<ev>:SLEW:DELTa <TimeDelta>

Defines a time range around the given slew rate.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<TimeDelta> Range: 0 to 10
Increment: 1E-07
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 192

TRIGger:EVENt<ev>:SLEW:RANGe <RangeMode>

Selects how the time limit for the slew rate is defined. The time measurement starts when the signal crosses the first trigger level - the upper or lower limit depending on the selected slope. The measurement stops when the signal crosses the second level.

You can select the rate with `TRIGger:EVENt<ev>:SLEW:RATE` and set the delta with `TRIGger:EVENt<ev>:SLEW:DELTa`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<RangeMode> INSRange | OUTRange | LTHan | GTHan

INSRange
Triggers on pulses inside a given range. The range is defined by the slew rate ±delta.

OUTRange
Triggers on pulses outside a given range. The range is defined by the slew rate ±delta.

LTHan
Triggers on pulses shorter than the given slew rate.

GTHan
Triggers on pulses longer than the given slew rate.

*RST: GTHan

Usage: Asynchronous command

Manual operation: See "Range" on page 192

TRIGger:EVENt<ev>:SLEW:RATE <Time>

For `TRIGger:EVENt<ev>:SLEW:RANGe` = `INSRange` and `OUTRange`, the slew rate defines the center of a range which is defined by the limits "±Delta".

For `TRIGger:EVENt<ev>:SLEW:RANGe` = `LTHan` and `GTHan`, the slew rate defines the maximum and minimum slew rate limits, respectively. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope (see `TRIGger:EVENt<ev>:SLEW:SLOPe`).

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Time>
Range: 1E-10 to 10000
Increment: 1E-07
*RST: 1E-10
Default unit: s

Usage: Asynchronous command

Manual operation: See "Slew rate" on page 192

TRIGger:EVENt<ev>:SLEW:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 191

18.10.11 Setup & Hold

TRIGger:EVENt<ev>:SETHold:CSOurce:EDGE....1201
TRIGger:EVENt<ev>:SETHold:CSOurce:LEVel....1201
TRIGger:EVENt<ev>:SETHold:CSOurce[:VALue]....1202
TRIGger:EVENt<ev>:SETHold:HTIMe....1202
TRIGger:EVENt<ev>:SETHold:STIMe....1202

TRIGger:EVENt<ev>:SETHold:CSOurce:EDGE <ClockEdge>

Sets the edge of the clock signal. Edge and level define the time reference point.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock edge" on page 193

TRIGger:EVENt<ev>:SETHold:CSOurce:LEVel <ClockLevel>

Sets the voltage level for the clock signal.

Both the clock level and the clock edge define the starting point for calculation of the setup and hold time.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<ClockLevel> Range: -10 to 10
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Clock level" on page 194

TRIGger:EVENt<ev>:SETHold:CSOurce[:VALue] <ClockSource>

Selects the input channel of the clock signal.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<ClockSource> C1 | C2 | ... | C8

The following values are also accepted:
C1 = CHAN1 = CHANnel1, C2 = CHAN2 = CHANnel2,
C3 = CHAN3 = CHANnel3, C4 = CHAN4 = CHANnel4

*RST: C1

Usage: Asynchronous command

Manual operation: See "Clock source" on page 193

TRIGger:EVENt<ev>:SETHold:HTIMe <HoldTime>

Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<HoldTime>
Range: -9.9999E-08 to 1E-07
Increment: 1E-09
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Hold time" on page 194

TRIGger:EVENt<ev>:SETHold:STIMe <SetupTime>

Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<SetupTime>
Range: -9.9999E-08 to 1E-07
Increment: 1E-09
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Setup time" on page 194

18.10.12 State trigger

TRIGger:EVENt<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX 1203
TRIGger:EVENt<ev>:STATe:QUALify:LOGic 1203
TRIGger:EVENt<ev>:STATe:SLOPe 1204
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic 1204
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX 1204

TRIGger:EVENt<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX <HLX>

Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<HLX> HIGH | LOW | DONTcare
State of the individual channels
*RST: DONTcare

Example:
```
TRIG:EVEN1:SOUR C1
TRIG:EVEN1:SLOP POS
TRIG:EVEN1:STAT:QUAL:ANAL:CHAN2:HLX HIGH
TRIG:EVEN1:STAT:QUAL:ANAL:CHAN3:HLX LOW
TRIG:EVEN1:STAT:QUAL:ANAL:CHAN4:HLX HIGH
TRIG:EVEN1:STAT:QUAL:LOG AND
```

Usage: Asynchronous command

Manual operation: See "Source: channel states" on page 198

TRIGger:EVENt<ev>:STATe:QUALify:LOGic <StateOperator>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<StateOperator> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic Operator" on page 198

TRIGger:EVENt<ev>:STATe:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 195

TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic <Logic>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Logic> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic Operator" on page 198

TRIGger:EVENt<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX <HLX>

Sets the required state for each digital channel that is used for triggering.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
<n> 0 to 15, index of the logic channel

Parameters:
<HLX> HIGH | LOW | DONTcare
*RST: DONTcare

Usage: Asynchronous command

Manual operation: See "Source: channel states" on page 199

18.10.13 Pattern trigger

TRIGger:EVENt<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX 1205
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX 1205
TRIGger:EVENt<ev>:PATTern:QUALify:LOGic 1205
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic 1206
TRIGger:EVENt<ev>:PATTern:QUALify:SOURces 1206

TRIGger:EVENt<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX <HLX>

Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<HLX> HIGH | LOW | DONTcare

State of the individual channels

*RST: DONTcare

Example:
```
TRIG:EVEN1:PATT:QUAL:ANAL:CHAN1:HLX LOW
TRIG:EVEN1:PATT:QUAL:ANAL:CHAN2:HLX HIGH
TRIG:EVEN1:PATT:QUAL:ANAL:CHAN3:HLX LOW
TRIG:EVEN1:PATT:QUAL:ANAL:CHAN4:HLX HIGH
TRIG:EVEN1:PATT:QUAL:LOG AND
```

Usage: Asynchronous command

Manual operation: See "Source: channel states" on page 198

TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX <HLX>

Sets the required state for each digital channel that is used for triggering.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 0 to 15, index of the logic channel

Parameters:
<HLX> HIGH | LOW | DONTcare

*RST: DONTcare

Usage: Asynchronous command

Manual operation: See "Source: channel states" on page 199

TRIGger:EVENt<ev>:PATTern:QUALify:LOGic <StateOperator>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<StateOperator> AND | OR

*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic Operator" on page 198

TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic <Logic>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1..3

Parameters:
<Logic> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic Operator" on page 198

TRIGger:EVENt<ev>:PATTern:QUALify:SOURces <StateSources>

Selects if the source of the trigger for the pattern type is an analog or digital channel.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<StateSources> ANALog | DIGital
*RST: ANALog

Usage: Asynchronous command

Manual operation: See "State sources" on page 196

18.10.14 Trigger mode, holdoff

TRIGger:MODE 1206
TRIGger:FORCe 1207
TRIGger:HOLDoff:MODE 1207
TRIGger:HOLDoff:AUTotime? 1208
TRIGger:HOLDoff:SCALing 1208
TRIGger:HOLDoff:EVENts 1209
TRIGger:HOLDoff:MAX 1209
TRIGger:HOLDoff:MIN 1209
TRIGger:HOLDoff:TIME 1209

TRIGger:MODE <TriggerMode>

Sets the trigger mode which determines the behavior of the instrument with and without a trigger event.

Parameters:
<TriggerMode> AUTO | NORMal | FREerun

AUTO
The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. The time interval depends on the time base.

NORMal
The instrument acquires a waveform only if a trigger occurs.

FREerun
The instrument triggers after a very short time interval - faster than in AUTO mode. Real triggers are ignored.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "[Auto Norm]" on page 49

TRIGger:FORCe

Provokes an immediate single acquisition. Force the trigger if the acquisition is running in normal mode and no valid trigger occurs. Thus, you can confirm that a signal is available and use the waveform display to determine how to trigger on it.

Usage: Setting only
Asynchronous command

Manual operation: See "Force trigger" on page 201

TRIGger:HOLDoff:MODE <Mode>

Selects the method to define the holdoff condition.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.

Holdoff settings are not available if the trigger source is an external trigger input or serial bus, and if you trigger on a sequence of events.

Parameters:
<Mode> TIME | EVENts | RANDom | AUTO | OFF

TIME
Defines the holdoff directly as a time period. The next trigger occurs only after the holdoff time has passed, which is defined using `TRIGger:HOLDoff:TIME`).

EVENts
Defines the holdoff as a number of trigger events. The next trigger occurs only when this number of events is reached. The number of triggers to be skipped is defined with `TRIGger:HOLDoff:EVENts`.

RANDom
Defines the holdoff as a random time limited by TRIGger:HOLDoff:MIN and TRIGger:HOLDoff:MAX. For each acquisition cycle, the instrument selects a new random holdoff time from the specified range.

AUTO
The holdoff time is calculated automatically based on the current horizontal scale.

OFF
No holdoff

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 201

TRIGger:HOLDoff:AUTotime?

Returns the resulting holdoff time, if TRIGger:HOLDoff:MODE is set to AUTO: *Auto time = Auto time scaling * Horizontal scale*. The auto time scaling factor is defined with TRIGger:HOLDoff:SCALing.

Return values:
<AutoTime>
Range: 1E-07 to 10
Increment: 0.0002
*RST: 0.001
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Holdoff mode" on page 201

TRIGger:HOLDoff:SCALing <AutoTimeScl>

Sets the auto time scaling factor that the horizontal scale is multipied with, if TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE is set to AUTO. *Auto time = Auto time scaling * Horizontal scale*

The next trigger occurs only after this time has passed.

Parameters:
<AutoTimeScl>
Range: 0.001 to 1000
Increment: 1
*RST: 0.5

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 201

TRIGger:HOLDoff:EVENts <Events>

Defines the number of triggers to be skipped, if `TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `EVENts`. The next trigger only occurs when this number of events is reached.

Parameters:

<Events>
Range: 1 to 2147483647
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 201

TRIGger:HOLDoff:MAX <RandomMaxTime>

Defines the upper limit for the random time holdoff, if `TRIGger:HOLDoff:MODE TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `RANDom`.

Parameters:

<RandomMaxTime>
Range: 1E-07 to 10
Increment: 0.0002
*RST: 0.002
Default unit: s

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 201

TRIGger:HOLDoff:MIN <RandomMinTime>

Defines the lower limit for the random time holdoff, if `TRIGger:HOLDoff:MODE TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `RANDom`.

Parameters:

<RandomMinTime>
Range: 1E-07 to 5
Increment: 0.0002
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 201

TRIGger:HOLDoff:TIME <Time>

Defines the holdoff time period, if `TRIGger:HOLDoff:MODE` is set to `TIME`. The next trigger occurs only after this time has passed.

Parameters:

<Time>
Range: 1E-07 to 10
Increment: 0.0002
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 201

18.10.15 Hysteresis

TRIGger:NOISe<m>:ABSolute 1210
TRIGger:NOISe<m>:EFFective? 1210
TRIGger:NOISe<m>:MODE 1211
TRIGger:NOISe<m>:PERDivision 1211
TRIGger:NOISe<m>:RELative 1211
TRIGger:NOISe<m>[:STATe] 1212

TRIGger:NOISe<m>:ABSolute <Absolute>

Defines a range in absolute values around the trigger level. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Absolute>
Range: 0 to 10000000
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Absolute hysteresis" on page 203

TRIGger:NOISe<m>:EFFective?

Returns the hysteresis that is set by the instrument in automatic hysteresis mode.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<Effective> numeric value

Range: 0 to 10000000
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "HW hysteresis" on page 203

TRIGger:NOISe<m>:MODE <Mode>

Selects whether the hysteresis is defined in absolute or relative values. The setting is available only in manual hysteresis mode.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Mode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Hysteresis mode" on page 203

TRIGger:NOISe<m>:PERDivision <InDivision>

Defines a range in divisions around the trigger level in division units. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<InDivision> Range: 0 to 5
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Relative hysteresis" on page 204

TRIGger:NOISe<m>:RELative <Relative>

Defines a range in divisions around the trigger level as percentage. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Relative>
Range: 0 to 50
Increment: 1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Relative hysteresis" on page 204

TRIGger:NOISe<m>[:STATe] <Mode>

Selects how the hysteresis is set.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Mode> AUTO | MANual

AUTO
Automatic mode is the recommended mode. The hysteresis is set by the instrument to reject the internal noise of the instrument.

MANual
The hysteresis is defined with `TRIGger:NOISe<m>:ABSolute` or `TRIGger:NOISe<m>:RELative`.

*RST: AUTO

Usage: Asynchronous command

18.10.16 Channel filter

TRIGger:FILTermode 1212
TRIGger:LFReject 1213
TRIGger:RFReject 1213

TRIGger:FILTermode <Mode>

Selects the filter mode for the trigger channel.

Parameters:

<Mode> OFF | LFReject | RFReject

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Trigger filter mode" on page 204

TRIGger:LFReject <Bandwidth>

Sets the limit frequency limit for the highpass filter of the trigger signal. Frequencies lower than this value are rejected, higher frequencies pass the filter.

Parameters:

<Bandwidth>
Range: 50 kHz
*RST: 50 kHz
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "LF reject BW" on page 204

TRIGger:RFReject <Bandwidth>

Sets the limit frequency limit for the lowpass filter of the trigger signal. Frequencies higher than this value are rejected, lower frequencies pass the filter.

Parameters:

<Bandwidth>
Range: 1E+3 to 500E+6
Increment: 1000
*RST: 1E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "RF reject BW" on page 205

18.10.17 Actions on trigger

TRIGger:ACTions:BEEP....1213
TRIGger:ACTions:OUT:STATe....1214
TRIGger:ACTions:OUT:SOURce....1214
TRIGger:ACTions:OUT:DELay....1214
TRIGger:ACTions:OUT:PLENgth....1214
TRIGger:ACTions:OUT:POLarity....1215
TRIGger:ACTions:SCReenshot....1215
TRIGger:ACTions:SRESults....1215
TRIGger:ACTions:STOP....1216
TRIGger:ACTions:WFMSave....1216

TRIGger:ACTions:BEEP <Beep>

Generates a beep sound if the command is set to `TRIGger`.

Parameters:

<Beep>
NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Beep" on page 205

TRIGger:ACTions:OUT:STATe <State>

Activates the outgoing pulse on the [Trigger Out] connector on the rear panel.

If ON, a pulse is sent out each time when a trigger occurs.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Trigger out pulse" on page 206

TRIGger:ACTions:OUT:SOURce <SignalSource>

Defines when the trigger out signal is initiated: at the trigger point, when waiting for the trigger, or when the post-trigger time is finished.

Parameters:

<SignalSource> TRIG | TRIGGER | POST | POSTTRIGGER | WAIT | WAITTRIGGER
TRIG = TRIGGER, POST = POSTTRIGGER, WAIT = WAIT-TRIGGER
*RST: TRIG

Usage: Asynchronous command

Manual operation: See "Signal source" on page 207

TRIGger:ACTions:OUT:DELay <Delay>

Defines the delay of the first pulse edge to the trigger point. The minimum delay is 600 ns.

Parameters:

<Delay> Range: 8E-07 to 1
Increment: 4E-09
*RST: 8E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Delay" on page 207

TRIGger:ACTions:OUT:PLENgth <PulseLength>

Sets the length of the trigger out pulse.

Parameters:

<PulseLength>
Range: 1.6E-08 to 0.05
Increment: 1.6E-08
*RST: 9.6E-08
Default unit: s

Usage: Asynchronous command

Manual operation: See "Pulse length" on page 207

TRIGger:ACTions:OUT:POLarity <Polarity>

Sets the polarity of the trigger out pulse, which is the direction of the first pulse edge.

Parameters:

<Polarity>
POSitive | NEGative
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 207

TRIGger:ACTions:SCReenshot <SaveScreenshot>

Saves a screenshot at each trigger if the command is set to `TRIGger`.

To configure the screenshot settings, use the commands described in Section 18.13.8, "Screenshots", on page 1294.

Parameters:

<SaveScreenshot>
NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Screenshot" on page 206

TRIGger:ACTions:SRESults <SaveResults>

Saves the selected result to file at each trigger if the command is set to `TRIGger`.

To define the path and file names, use the EXPort:RESult:AUTonaming:* commands:

- `EXPort:RESult:AUTonaming:NAME` on page 1293
- `EXPort:RESult:AUTonaming:PATH` on page 1293
- `EXPort:RESult:AUTonaming:TYPE` on page 1293

Parameters:

<SaveResults>
NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save results" on page 206

TRIGger:ACTions:STOP <StopAcq>

Stops the running acquisition if the command is set to `TRIGger`.

Parameters:

<StopAcq> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 205

TRIGger:ACTions:WFMSave <SaveWfm>

Saves the waveform data to file at each trigger if the command is set to `TRIGger`.

To define the path and file names, use the EXPort:WAVeform:AUTonaming:* commands:

- `EXPort:WAVeform:AUTonaming:NAME` on page 1285
- `EXPort:WAVeform:AUTonaming:PATH` on page 1286
- `EXPort:WAVeform:AUTonaming:TYPE` on page 1286

Parameters:

<SaveWfm> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save wfm" on page 206

18.10.18 Zone trigger

Zone trigger commands are available since FW version 2.2.x.x.

ZONE<m>:ADD 1217
TRIGger:ZONE:EXPRession[:DEFine] 1217
ZONE<m>:ACOMbination 1217
ZONE<m>:AREA<n>:ADD 1217
ZONE<m>:AREA<n>:COUNt? 1218
ZONE<m>:AREA<n>:INTersect 1218
ZONE<m>:AREA<n>:LABel 1218
ZONE<m>:AREA<n>:VALid? 1219
ZONE<m>:AREA<n>:POINt<o>:ADD 1219
ZONE<m>:AREA<n>:POINt<o>:COUNt? 1219
ZONE<m>:AREA<n>:POINt<o>:REMove 1220
ZONE<m>:AREA<n>:POINt<o>:X 1220
ZONE<m>:AREA<n>:POINt<o>:Y 1220
ZONE<m>:AREA<n>:POINt<o>:VALid? 1221
ZONE<m>:AREA<n>:REMove 1221
ZONE<m>:AREA<n>:STATe 1221
ZONE<m>:COUNt? 1221

ZONE<m>:DIAGram 1222
TRIGger:ZONE:HISTory 1222
ZONE<m>:REMove 1222
ZONE<m>:SOURce 1222
ZONE<m>[:VISible] 1223

ZONE<m>:ADD

Adds a new trigger zone.

Suffix:
<m> 1 to 4, index of the zone

Usage: Setting only
Asynchronous command

Manual operation: See "Add zone, ➕" on page 215

TRIGger:ZONE:EXPRession[:DEFine] <LogicExpression>

Defines the zone trigger. The available operators for the combination between the zones are `AND | NOT | OR | XOR`.

Parameters:
<LogicExpression> String with the logical expression

Example: Prerequisite: Zone1 and Zone2 are defined.

```
TRIGger:ZONE:EXPRession 'Zone1 and Zone2'
TRIGger:ZONE:EXPRession?
<-- Zone1 and Zone2
```

Usage: Asynchronous command

Manual operation: See "[Zone]" on page 50

ZONE<m>:ACOMbination <AreaCombination>

Sets the logic combination that applies to all areas in the indicated zone.

Suffix:
<m> 1 to 4, index of the zone

Parameters:
<AreaCombination> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Area" on page 215

ZONE<m>:AREA<n>:ADD

Adds a new area to the trigger zone.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Usage: Setting only
Asynchronous command

Manual operation: See "Area" on page 215

ZONE<m>:AREA<n>:COUNt?

Returns the number of the defined areas in the zone.

`ZONE<m>:AREA:COUNt? MAX` returns the maximum number of areas that can be created.

Suffix:
<m> 1 to 4, index of the zone

<n> Irrelevant, omit the suffix.

Return values:
<Count> Number of defined zone areas

Usage: Query only
Asynchronous command

Manual operation: See "Area" on page 215

ZONE<m>:AREA<n>:INTersect <Intersection>

Defines if the signal must intersect the zone to allow the instrument to trigger, or if it must not intersect the zone.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Parameters:
<Intersection> MUST | NOT
*RST: MUST

Usage: Asynchronous command

Manual operation: See "Area" on page 215

ZONE<m>:AREA<n>:LABel <Label>

Defines a label for the selected area.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Area" on page 215

ZONE<m>:AREA<n>:VALid?

Checks the validity of the indicated zone area. The area is invalid if one of its points is invalid. See Figure 7-13.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Return values:
<Valid> OFF | ON
*RST: ON

Usage: Query only
Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:ADD

Adds a new point to the area at the indicated point index.

To define the coordinates of the point, use `ZONE<m>:AREA<n>:POINt<o>:X` and `ZONE<m>:AREA<n>:POINt<o>:Y`.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Usage: Setting only
Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:COUNt?

Queries the number of the defined points in the area.

`ZONE<m>:AREA<n>:POINt:COUNt? MAX` returns the maximum number of points that can be created.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> Irrelevant, omit the suffix.

Return values:
<Count> Range: 0 to 16

Usage: Query only
Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:REMove

Removes the selected point from the area.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Usage: Setting only
Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:X <X>

Sets the horizontal X coordinates for the selected point of the area.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Parameters:
<X> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: s

Usage: Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:Y <Y>

Sets the vertical Y coordinates for the selected point of the area.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Parameters:
<Y> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: V

Usage: Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:VALid?

Checks the validity of the selected point. See Figure 7-13.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Return values:
<Valid> OFF | ON

*RST: ON

Usage: Query only
Asynchronous command

ZONE<m>:AREA<n>:REMove

Removes the selected area from the trigger zone.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Usage: Setting only
Asynchronous command

Manual operation: See "Delete icon" on page 216

ZONE<m>:AREA<n>:STATe <State>

Enables the selected area.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Parameters:
<State> OFF | ON

*RST: ON

Usage: Asynchronous command

ZONE<m>:COUNt? <Count>

Returns the number of zones.

`ZONE:COUNt? MAX` returns the maximum number of zones that can be created.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<Count> Number of defined zones

Usage: Query only
Asynchronous command

ZONE<m>:DIAGram <SignDiagKey>

Selects the diagram on which the zone trigger is applied, for example layoutset1 diagram1 (`L1_D1`).

For more information about the SmartGrid definition, see Section 18.8.3, "SmartGrid", on page 1100.

Suffix:
<m> 1 to 4, index of the zone

Parameters:
<SignDiagKey> String that indicates the layout set and the diagram, e.g. "L1_D1".

Usage: Asynchronous command

TRIGger:ZONE:HISTory <ApplyToHistory>

Applies the zone trigger condition to the acquisitions that are stored in the history memory. Thus, you can filter the history of waveforms on zone conditions.

Parameters:
<ApplyToHistory> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Apply zone trigger to history" on page 218

ZONE<m>:REMove

Removes the selected trigger zone.

Suffix:
<m> 1 to 4, index of the zone

Usage: Setting only
Asynchronous command

Manual operation: See "Delete icon" on page 216

ZONE<m>:SOURce <Source>

Sets the source of the zone trigger.

Suffix:
<m> 1 to 4, index of the zone

Parameters:
<Source> NONE | C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | XY1 | XY2 | XY3 | XY4 | SPECNORM1 | SPECNORM2 | SPECNORM3 | SPECNORM4

Usage: Asynchronous command

Manual operation: See "Source" on page 215

ZONE<m>[:VISible] <DisplayState>

Enables the display of the zone on the screen.

Suffix:
<m> 1 to 4, index of the zone

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Display" on page 215

18.11 Signal configuration

18.11.1 Signals

18.11.1.1 Signals settings

SIGNalconfig:SETup:ADD....1223
SIGNalconfig:SETup:REMove....1224
SIGNalconfig:SETup:SOURce....1224
SIGNalconfig:SETup:TECHnology....1224
SIGNalconfig:SETup:SERStandard....1225
SIGNalconfig:SETup:PAMorder....1225
SIGNalconfig:SETup:SYMBolrate....1225
SIGNalconfig:SETup:SREStimation....1226

SIGNalconfig:SETup:ADD <signalIndex>,[<serialStandard>],[<pamOrder>], [<symbolRate>]

Adds a new signal for configuration.

Setting parameters:

<signalIndex> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

<serialStandard> CUSTOM | USB20 | FIBCHAN1 | FIBCHAN2 | FIBCHAN4 | HDMI12 | HDMI14 | HBT | TBT | HBTO | TBTO | TPFGBTO | FGBTO | USXGMII | ADSG1 | ADSG2 | AUSG1 | AUSG2 | DISPPORT11 | GMSL1 | GMSL23G | GMSL36G | PCIGEN1 | SASGEN1 | SATAGEN1500 | SATAGEN11667 | SATAGEN1 | SATAGEN2500 | SATAGEN21667 | SATAGEN2 | XAUI

<pamOrder>

<symbolRate>

Usage: Setting only
Asynchronous command

Manual operation: See "Add" on page 219

SIGNalconfig:SETup:REMove <SignalSource>

Deletes the selected signal.

Setting parameters:

<SignalSource> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

Usage: Setting only
Asynchronous command

Manual operation: See "Delete" on page 219

SIGNalconfig:SETup:SOURce <OldSignSrc>,<NewSignSrc>

Selects the signal source for the current configuration by replacing the existing old source with a new source. You can only select sources that has been enabled. You can start the estimation of the symbol rate with `SIGNalconfig:SETup:SREStimation`.

Setting parameters:

<OldSignSrc> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

<NewSignSrc> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

Usage: Setting only
Asynchronous command

Manual operation: See "Source" on page 219

SIGNalconfig:SETup:TECHnology <SignalSource>,[<Technology>]
SIGNalconfig:SETup:TECHnology? <SignalSource>

Sets the technology of the signal. Set `CUSTOM` to adjust the symbol rate manually.

Parameters:
<Technology> CUSTOM | ASA | AUTOETHERNET | | ETHERNET | FIBRECHANNEL | HDMI | MII | SATA | USB | DISPLAYPORT | GMSL | PCIE | SAS | XAUI

Parameters for setting and query:
<SignalSource> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Technology, Serial standard" on page 219

SIGNalconfig:SETup:SERStandard <SignalSource>,[<SerialStandard>]
SIGNalconfig:SETup:SERStandard? <SignalSource>

Sets the serial standard of the signal. Set `CUSTOM` to adjust the symbol rate and PAM order manually.

Parameters:
<SerialStandard> CUSTOM | USB20 | FIBCHAN1 | HDMI12 | SATAGEN1500 | SATAGEN11667 | SATAGEN1 | HBT | TBT | HBTO | TBTO | TPFGBTO | USXGMII | ADSG1 | AUSG1 | DISPPORT11 | FIBCHAN2 | GMSL1 | GMSL23G | GMSL36G | PCIGEN1 | SASGEN1 | SATAGEN2500 | SATAGEN21667 | SATAGEN2 | FGBTO | FIBCHAN4 | HDMI14 | XAUI | ADSG2 | AUSG2

Parameters for setting and query:
<SignalSource> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Technology, Serial standard" on page 219

SIGNalconfig:SETup:PAMorder <SignalSource>,[<PAMOrder>]
SIGNalconfig:SETup:PAMorder? <SignalSource>

Selects the PAM order. You can select a value up to 8. Most standards have a pre-defined PAM order, see Table 8-1.

Parameters:
<PAMOrder>

Parameters for setting and query:
<SignalSource> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Technology, Serial standard" on page 219

SIGNalconfig:SETup:SYMBolrate <SignalSource>,[<SymbolRate>]
SIGNalconfig:SETup:SYMBolrate? <SignalSource>

Sets the symbol rate of the signal. Most standards have a pre-defined symbol rate, see Table 8-1.

Parameters:
<SymbolRate>

Parameters for setting and query:
<SignalSource> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Symbol rate" on page 220

SIGNalconfig:SETup:SREStimation <SignalSource>

Starts a software algorithm for the automatic determination of the symbol rate for the selected signal.

Setting parameters:
<SignalSource> C1 | C2 | ... | C8 | R1 | R2 | ... | R8 | M1 | M2 | ... | M8

Usage: Setting only
Asynchronous command

Manual operation: See "Estimate symbol rate" on page 221

18.11.1.2 Signals results

SIGNalconfig:SETup:LIST? 1226
SIGNalconfig:SETup:COUNt? 1226

SIGNalconfig:SETup:LIST?

Returns the list of available signals.

Return values:
<SignalList>

Usage: Query only
Asynchronous command

Manual operation: See "Add" on page 219

SIGNalconfig:SETup:COUNt?

Returns the number of available signals.

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Add" on page 219

18.11.2 Reference levels

- Reference level settings....1227
- Reference level results....1231

18.11.2.1 Reference level settings

REFLevel<rl>:ENABle....1227
REFLevel<rl>:LMODe....1227
REFLevel<rl>:AUTO:MODE....1227
REFLevel<rl>:ABSolute:HYSTeresis....1228
REFLevel<rl>:ABSolute:LLEVel....1228
REFLevel<rl>:ABSolute:MLEVel....1229
REFLevel<rl>:ABSolute:ULEVel....1229
REFLevel<rl>:RELative:HYSTeresis....1229
REFLevel<rl>:RELative:LOWer....1230
REFLevel<rl>:RELative:MIDDle....1230
REFLevel<rl>:RELative:MODE....1230
REFLevel<rl>:RELative:UPPer....1231

REFLevel<rl>:ENABle <First>

Enables the specified reference level.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "RLx" on page 222

REFLevel<rl>:LMODe <LevelMode>

Defines if the reference level is set in absolute or relative values.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<LevelMode> ABS | REL

*RST: REL

Usage: Asynchronous command

Manual operation: See "Level mode" on page 222

REFLevel<rl>:AUTO:MODE <AutoLevelMode>

Defines the high and low signal levels from which the reference levels are derived.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<AutoLevelMode> AUTO | PPRobability | MPRobability | ABSolutepeak

AUTO
Auto select absolute probability: most suitable signal levels

PPRobability
Peak probability: signal levels with the highest probability value

MPRobability
Mean probability: signal levels with mean probability

ABSolutepeak
Absolute peak: absolute peak signal levels

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Auto level mode" on page 223

REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<HystAbs>
Range: 0 to 1E+26
Increment: 0.001
*RST: 0.005
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 223

REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

Sets the lower reference level in absolute values. This is required, e.g., to determine a fall.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<LowerLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 222

REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>

Sets the middle reference level in absolute values.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<MiddleLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 222

REFLevel<rl>:ABSolute:ULEVel <UpperLevel>

Sets the upper reference level in absolute values. This is required to determine a rise.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<UpperLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 222

REFLevel<rl>:RELative:HYSTeresis <HystRel>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<HystRel>
Range: 0 to 50
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 223

REFLevel<rl>:RELative:LOWer <LowRefLevRel>

Sets the lower relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<LowRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 223

REFLevel<rl>:RELative:MIDDle <MidRefLevRel>

Sets the middle relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<MidRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 223

REFLevel<rl>:RELative:MODE <RelativeLevels>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<RelativeLevels> FIVE | TEN | TWENty | USER

FIVE
5/50/95

TEN
10/50/90

TWENty
20/50/80

USER
Set the reference levels to individual values with `REFLevel<rl>:RELative:LOWer`, `REFLevel<rl>:RELative:MIDDle`, and `REFLevel<rl>:RELative:UPPer`.
*RST: TEN

Usage: Asynchronous command

Manual operation: See "Relative levels" on page 223

REFLevel<rl>:RELative:UPPer <UppRefLevRel>

Sets the upper relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<UppRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 90
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 223

18.11.2.2 Reference level results

MEASurement<mg>:REFLevel<rl>:RESult:LOWer? 1231
MEASurement<mg>:REFLevel<rl>:RESult:MIDDle? 1231
MEASurement<mg>:REFLevel<rl>:RESult:UPPer? 1231
MEASurement<mg>:REFLevel<rl>:RESult:SIGHigh? 1232
MEASurement<mg>:REFLevel<rl>:RESult:SIGLow? 1232

MEASurement<mg>:REFLevel<rl>:RESult:LOWer?
MEASurement<mg>:REFLevel<rl>:RESult:MIDDle?
MEASurement<mg>:REFLevel<rl>:RESult:UPPer?

Return the lower, middle, and upper reference level, respectively.

Suffix:
<mg> 1 to 24, index of the measurement

<rl> Irrelevant, omit the suffix.

Return values:
<Value>
Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:REFLevel<rl>:RESult:SIGHigh?
MEASurement<mg>:REFLevel<rl>:RESult:SIGLow?

Return the high and low signal level, respectively.

Suffix:
<mg> 1 to 24, index of the measurement

<rl> Irrelevant, omit the suffix.

Return values:
<SignalValue> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

18.11.3 Gate

GATE<g>:ENABle....1232
GATE<g>:GCOupling....1232
GATE<g>:CURSor....1233
GATE<g>:SPECtrum....1233
GATE<g>:ZDIagram....1234
GATE<g>:MODE....1234
GATE<g>:ABSolute:STARt....1234
GATE<g>:ABSolute:STOP....1234
GATE<g>:RELative:STARt....1235
GATE<g>:RELative:STOP....1235
GATE<g>:SHOW....1235

GATE<g>:ENABle <First>

Enables the gate.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "Add" on page 224

GATE<g>:GCOupling <CouplingMode>

The gate coupling mode selects how the gate area is defined.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<CouplingMode> MANual | CURSor | ZOOM | SPECtrum

MANual
Manually define the gate with a user-defined start and stop values.

CURSor
Cursor coupling is available if a cursor is defined. The gate area is defined by the cursor lines of an active cursor measurement.

ZOOM
Zoom coupling is available if a zoom is defined. The gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well.

SPECtrum
Spectrum coupling is available if a spectrum is enabled.

*RST: MANual

Usage: Asynchronous command

Manual operation: See "Coupling mode" on page 224

GATE<g>:CURSor <Cursor>

Available for `GATE<g>:GCOupling` = `CURSor`.

Selects the cursor set to be used for measurement gating. The gate area is defined by the cursor lines.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<Cursor> CURSOR1 | CURSor1 | CURSOR2 | CURSor2 | CURSOR3 | CURSor3 | CURSOR4 | CURSor4

Usage: Asynchronous command

Manual operation: See "Coupling mode" on page 224

GATE<g>:SPECtrum <Spectrum>

Available for `GATE<g>:GCOupling` = `SPECtrum`.

Selects the spectrum to be used for gating.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<Spectrum> Number of the spectrum.

Usage: Asynchronous command

Manual operation: See "Coupling mode" on page 224

GATE<g>:ZDIagram <SignalSource>,[<SignalSource2>]

Available for `GATE<g>:GCOupling` = `ZOOM`.

The gate area is defined identically to the zoom area for the selected zoom diagram.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<SignalSource>

<SignalSource2>

Usage: Asynchronous command

Manual operation: See "Coupling mode" on page 224

GATE<g>:MODE <Mode>

Selects if the gate settings are configured using absolute or relative values.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<Mode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Mode, Start, Stop" on page 225

GATE<g>:ABSolute:STARt <Start>
GATE<g>:ABSolute:STOP <Stop>

Define the absolute start and end values for the gate, respectively.

Available, if `GATE<g>:GCOupling` = `MANUal` and `GATE<g>:MODE` =`ABS`.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<Stop> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Mode, Start, Stop" on page 225

GATE<g>:RELative:STARt <RelativeStart>
GATE<g>:RELative:STOP <RelativeStop>

Define the relative start and end values for the gate, respectively.

Available, if `GATE<g>:GCOupling` = `MANUal` and `GATE<g>:MODE` =`REL`.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Mode, Start, Stop" on page 225

GATE<g>:SHOW <DisplayState>

If enabled, the gate area is indicated in the source diagram.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

18.11.4 Timing reference

- General settings of the timing reference 1235
- Explicit clock signal 1239
- Clock data recovery by software CDR 1240
- Clock derived from protocol timing information 1244

18.11.4.1 General settings of the timing reference

TREFerence<m>:DISPlay 1236
TREFerence<m>:EDGE 1236
TREFerence<m>:ENABle 1236
TREFerence<m>:GATE 1237
TREFerence<m>:RFLSet 1237
TREFerence<m>:SOURce 1237
TREFerence<m>:STATe? 1238
TREFerence<m>:SYMRate 1238
TREFerence<m>:TYPE 1238
TRFS:COUNt? 1239

TREFerence<m>:DISPlay <State>

Enables the display of the clock signal in the diagram.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 226

TREFerence<m>:EDGE <Edge>

Sets the clock edges that are used for measurements if `TREFerence<m>:TYPE CLOCk` is set for the indicated measurement.

Sets the data edges for clock data recovery if `TREFerence<m>:TYPE SCDR` is set for the indicated measurement.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Edge> POSitive | NEGative | EITHer

POSitive
The positive clock slope can be used, for example, for single data rate (SDR) signals with bit start at the positive clock edge.

NEGative
The negative clock slope can be used, for example, for SDR signals with bit start at the negative clock edge.

EITHer
Can be used for double data rate (DDR) signals and clock edges. For data edges, it is the most common setting.

*RST: EITHer

Usage: Asynchronous command

Manual operation: See "Edge" on page 228

TREFerence<m>:ENABle <TimeRef>

Adds the indicated timing reference (ON) or removes it (OFF).

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<TimeRef> OFF | ON

Usage: Asynchronous command

TREFerence<m>:GATE <Gate>

Sets the gate for the timing reference. Enable and configure a gate before you assign it (`GATE<g>:ENABle` =`ON`).

The query returns 0, if no gate is assigned.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

Manual operation: See "Gate" on page 227

TREFerence<m>:RFLSet <RefLevelSet>

Selects the set of reference levels that is used for the timing reference measurements.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<RefLevelSet> 1 to 8, index of the reference level set
Number of the reference level set. Define the reference level set before you use it.

Usage: Asynchronous command

Manual operation: See "Reference levels" on page 227

TREFerence<m>:SOURce <Source>

Selects the clock source if `TREFerence<m>:TYPE CLOCk` is set.

Sets the data source for clock data recovery if `TREFerence<m>:TYPE SCDR` is set for the indicated measurement.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Source> C1 | C2 | ... | C8 | D0 | D1 | D2 | ... | D14 | D15 | M1 | M2 | ... | M8 | SBUS1 | SBUS2 | SBUS3 | SBUS4 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 228

TREFerence<m>:STATe?

Returns if the specified timing reference is used by an application, e.g. by jitter measurements.

Suffix:
<m> 1...4, index of the timing reference

Return values:
<State> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

Manual operation: See "Usage information" on page 227

TREFerence<m>:SYMRate <SymbolRate>

Sets the symbol rate of the data signal for the indicated timing reference.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<SymbolRate> Range: 100 to 5000000000
Increment: 10
*RST: 1000000000
Default unit: Bd

Usage: Asynchronous command

Manual operation: See "Symbol rate" on page 229

TREFerence<m>:TYPE <Type>

Defines the type of clock origin for timing reference <m>. The clock origin can be an explicit clock signal, a software-recovered clock, or a protocol-based clock.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Type> CLOCk | SCDR | PROTocol
CLOCk: explicit clock signal
SCDR: software CDR
PROTocol: protocol
*RST: SCDR

Usage: Asynchronous command

Manual operation: See "Type" on page 226

TRFS:COUNt?

Returns the number of defined timing references.

Return values:
<Count> Range: 1 to 4

Usage: Query only
Asynchronous command

18.11.4.2 Explicit clock signal

TREFerence<m>:CLK:FACTor....1239
TREFerence<m>:CLK:FREQuency....1239
TREFerence<m>:CLK:OFFSet....1240
TREFerence<m>:CLK:REFLevel....1240

TREFerence<m>:CLK:FACTor <Multiplier>

Sets a value for the clock multiplier if `TREFerence<m>:TYPE CLOCk` is set. The muliplier is the ratio of an internal clock rate to the externally supplied clock. It defines the number of samples per clock interval.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Multiplier> Range: 1 to 100
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Multiplier" on page 228

TREFerence<m>:CLK:FREQuency <Frequency>

Sets the frequency of the clock signal if `TREFerence<m>:TYPE CLOCk` is set.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Frequency> Range: 1000 to Device specific: DoubleVal(uso::db::wfa::IDeviceConstDataWFA::DOUBLE_ITEM::MaxDeviceBandwidth)
Increment: 10
*RST: 500000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 228

TREFerence<m>:CLK:OFFSet <Offset>

Sets the offset between the clock edge and the data edge if `TREFerence<m>:TYPE CLOCk` is set.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Offset> Range: -1000 to 1000
Increment: 0.01
*RST: 0
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Offset" on page 228

TREFerence<m>:CLK:REFLevel <ReferenceLevel>

Selects the reference level that is used for the timing reference if the indicated timing reference uses an explicit clock signal.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<ReferenceLevel> UPPer | MIDDle | LOWer
*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Reference level" on page 228

18.11.4.3 Clock data recovery by software CDR

TREFerence<m>:CDR:SOFTware:ALGorithm....1240
TREFerence<m>:CDR:SOFTware:BWIDth....1241
TREFerence<m>:CDR:SOFTware:CFRequency:CRSYnc....1241
TREFerence<m>:CDR:SOFTware:PLL:DAMPing....1241
TREFerence<m>:CDR:SOFTware:PLL:ORDer....1242
TREFerence<m>:CDR:SOFTware:SREStimate....1242
TREFerence<m>:CDR:SOFTware:PLL:SYNC....1242
TREFerence<m>:CDR:SOFTware:RELBwidth....1243
TREFerence<m>:CDR:SOFTware:SELResults....1243

TREFerence<m>:CDR:SOFTware:ALGorithm <Algorithm>

Sets the software algorithm that is used for software clock data recovery.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Algorithm> CFRequency | PLL | FF | PLLRlock
CFRequency: constant frequency
PLL: phase-locked loop control system
FF: feed forward
PLLRlock: PLL which is locked at the acquisition start.
*RST: PLLRlock

Usage: Asynchronous command

Manual operation: See "Algorithm" on page 230

TREFerence<m>:CDR:SOFTware:BWIDth <Bandwidth>

Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Bandwidth> Range: 20000 to Device specific: DoubleVal(uso::db::wfa::IDeviceConstDataWFA::DOUBLE_ITEM::MaxDeviceBandwidth)
Increment: 10
*RST: 599880
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 231

TREFerence<m>:CDR:SOFTware:CFRequency:CRSYnc <ClockResync>

Enables continuous synchronization of the clock with the data signal.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<ClockResync> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Clock resync" on page 230

TREFerence<m>:CDR:SOFTware:PLL:DAMPing <Damping>

Sets the damping factor, which is only relevant for second order PLL.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Damping> Range: 0.5 to 2
Increment: 0.01
*RST: 0.7

Usage: Asynchronous command

Manual operation: See "Damping" on page 231

TREFerence<m>:CDR:SOFTware:PLL:ORDer <PLLOrder>

Sets the order of the PLL: first or second order. PLL of higher order can compensate for more complex jitter behavior.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<PLLOrder> FIRSt | SECond
*RST: SECond

Usage: Asynchronous command

Manual operation: See "Order" on page 231

TREFerence<m>:CDR:SOFTware:SREStimate

Starts a software algorithm to detect the symbol rate for the selected source automatically.

Suffix:
<m> 1...4, index of the timing reference

Usage: Event
Asynchronous command

Manual operation: See "Estimate symbol rate" on page 230

TREFerence<m>:CDR:SOFTware:PLL:SYNC <InitialPhase>

Defines the phase reference for the first clock edge.

Suffix:
<m> 1...4, index of the timing reference

Parameters:

<InitialPhase> SAMPle | DATaedge

SAMPle: the first clock edge matches the first sample of the waveform at the left border of the display.
DATaedge: the first clock edge matches the first edge of the data signal.

*RST: DATaedge

Usage: Asynchronous command

Manual operation: See "Initial phase sync" on page 231

TREFerence<m>:CDR:SOFTware:RELBwidth <RelBw>

Sets the relative bandwidth, that is the ratio of the nominal bit rate to the PLL bandwidth.

Suffix:

<m> 1...4, index of the timing reference

Parameters:

<RelBw> Range: 1 to 10000
Increment: 1
*RST: 1667

Usage: Asynchronous command

Manual operation: See "Rel. bandwidth" on page 231

TREFerence<m>:CDR:SOFTware:SELResults <Results>

Selects when the CDR algorithm returns clock edges.

Suffix:

<m> 1...4, index of the timing reference

Parameters:

<Results> ALL | LOCKed | AISYnc

ALL: all clock edges are used.
AISYnc = LOCKed: the clock edges of the synchronization time are discarded; results are gathered after initial synchronization of the CDR.

*RST: ALL

Usage: Asynchronous command

Manual operation: See "Selected results" on page 231

18.11.4.4 Clock derived from protocol timing information

TREFerence<m>:PROTocol:SBUS 1244
TREFerence<m>:PROTocol:FIENable 1244
TREFerence<m>:PROTocol:CHKall 1244
TREFerence<m>:PROTocol:CLR 1245
TREFerence<m>:PROTocol:INVert 1245
TREFerence<m>:PROTocol:RST 1245

TREFerence<m>:PROTocol:SBUS <SerialBus>

Selects the serial bus that provides the timing information for the timing reference.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<SerialBus> 1 to 4, index of the serial bus

Usage: Asynchronous command

Manual operation: See "Serial bus" on page 232

TREFerence<m>:PROTocol:FIENable <Field>,<Enabler>
TREFerence<m>:PROTocol:FIENable? <Enabler>

Enables the protocol fields that are used to derive the timing reference clock.

Suffix:
<m> 1...4, index of the timing reference

Setting parameters:
<Field>

Parameters for setting and query:
<Enabler> OFF | ON

Usage: Asynchronous command

Manual operation: See "Protocol field selection" on page 233

TREFerence<m>:PROTocol:CHKall

Enables all available protocol fields for clock derivation.

Suffix:
<m> 1...4, index of the timing reference

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 233

TREFerence<m>:PROTocol:CLR

Disables all selected protocol fields.

Suffix:
<m> 1...4, index of the timing reference

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 233

TREFerence<m>:PROTocol:INVert

Inverts the current field selection: all fields that were enabled are disabled and vice versa.

Suffix:
<m> 1...4, index of the timing reference

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 233

TREFerence<m>:PROTocol:RST

Restores the predefined field selection.

Suffix:
<m> 1...4, index of the timing reference

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 233

18.12 Waveform analysis

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- Zoom....1246
- Mathematics....1256
- History....1260
- Reference waveforms....1264
- Waveform histograms....1272

18.12.1 Zoom

LAYout<ly>:ZOOM<zo>[:ENABle]....1246
LAYout<ly>:ZOOM<zo>:COUNt?....1247
LAYout<ly>:ZOOM<zo>:DIAGram?....1247
LAYout<ly>:ZOOM<zo>:DISPlay....1247
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition....1248
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN....1248
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt....1249
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP....1249
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh....1249
LAYout<ly>:ZOOM<zo>:HORizontal:MODE....1250
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition....1250
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN....1250
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STARt....1251
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP....1251
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh....1252
LAYout<ly>:ZOOM<zo>:SOURce....1252
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition....1252
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe....1253
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN....1253
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt....1253
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP....1253
LAYout<ly>:ZOOM<zo>:VERTical:MODE....1254
LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition....1254
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt....1254
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP....1255
LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTh....1255
LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN....1255
LAYout<ly>:ZOOM<zo>:SSCReen....1255

LAYout<ly>:ZOOM<zo>[:ENABle] <State>

Enables the zoom.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<State> OFF | ON

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

Manual operation: See "State" on page 235

LAYout<ly>:ZOOM<zo>:COUNt?

Returns the max number of available zooms.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Return values:
<Count>

Usage: Query only
Asynchronous command

LAYout<ly>:ZOOM<zo>:DIAGram?

Returns a comma-separated list of diagram keys of all zoom sub diagrams if `LAYout<ly>:ZOOM<zo>:DISPlay` is set to `STACked` or LINeup.

For overlay display, one diagram key is returned because only one sub diagram with all zoom waveforms is available.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Return values:
<DiagramKeys> Comma-separated list of diagram keys

Usage: Query only
Asynchronous command

LAYout<ly>:ZOOM<zo>:DISPlay <Mode>

Selects how the zoomed waveforms are arranged if the zoom area contains several waveforms.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<Mode> OVER | OVERlay | STAC | STACked | SBS | SBSide

OVER = OVERlay: All zoomed waveforms are shown in one zoom diagram.
STAC = STACked: Each zoomed waveform has its own zoom diagram, and the zoom diagrams are shown one above the other.
SBS = SBSide: Each zoomed waveform has its own zoom diagram, and the zoom diagrams are shown side by side.

*RST: OVER

Usage: Asynchronous command

Manual operation: See "Display" on page 235

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition <Center>

Defines the x-value of the centerpoint of the zoom area in absolute values.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<Center>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 237

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN <Span>

Defines the width of the zoom area in absolute values.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<Span>
Range: 0 to 1E+26
Increment: 0.01
*RST: 0.02
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 237

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt <Start>

Defines the lower limit of the zoom area on the x-axis in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Start>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: -0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 236

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP <Stop>

Defines the upper limit of the zoom area on the x-axis in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Stop>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 236

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh <Span>

Defines the width of the zoom area in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Span>
Range: 0 to 1E+26
Increment: 0.01
*RST: 0.02
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

LAYout<ly>:ZOOM<zo>:HORizontal:MODE <Mode>

Defines if absolute or relative values are used to specify the x-axis values. Since the zoom area refers to the active signal, relative values ensure that the zoom area remains the same.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Mode> ABS | REL

*RST: ABS

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

Manual operation: See "Mode" on page 237

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition <RelativeCenter>

Defines the x-value of the centerpoint of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeCenter> Relative position of the centerpoint (x-value)

Range: 0 to 100
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 237

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN <RelativeSpan>

Defines the width of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<RelativeSpan>
Range: 1E-15 to 100
Increment: 0.1
*RST: 1
Default unit: %

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 237

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STARt <RelativeStart>

Defines the lower limit of the zoom area on the x-axis in relative values.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<RelativeStart>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 236

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP <RelativeStop>

Defines the upper limit of the zoom area on the x-axis in relative values.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 236

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh <RelativeSpan>

Defines the width of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeSpan> Range: 1E-15 to 100
Increment: 0.1
*RST: 1
Default unit: %

Usage: Asynchronous command

LAYout<ly>:ZOOM<zo>:SOURce <Diagrams>

Indicates which of the waveform diagrams is selected for zooming. The number is displayed on the screen in the middle of each diagram.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Diagrams> Index of the diagram that is zoomed.

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1084.

Usage: Asynchronous command

Manual operation: See "Diagram" on page 235

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition <Center>

Defines the y-value of the centerpoint of the zoom area in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Center> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 237

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe <Span>
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN <Span>

Defines the height of the zoom area in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Span> Range: 0 to 1E+26
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 237

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt <Start>

Defines the lower limit of the zoom area on the y-axis in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Start> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 236

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP <Stop>

Defines the upper limit of the zoom area on the y-axis in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Stop> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 236

LAYout<ly>:ZOOM<zo>:VERTical:MODE <Mode>

Defines if absolute or relative values are used to specify the y-axis values. Since the zoom area refers to the active signal, relative values ensure that the zoom area remains the same.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Mode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Mode" on page 237

LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition <RelativeCenter>

Defines the y-value of the centerpoint of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeCenter> Range: 0 to 100
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 237

LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt <RelativeStart>

Defines the lower limit of the zoom area on the y-axis in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeStart> Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 236

LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP <RelativeStop>

Defines the upper limit of the zoom area on the x-axis, in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 236

LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTh <RelativeSpan>
LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN <RelativeSpan>

Defines the height of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeSpan>
Range: 1E-15 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 237

LAYout<ly>:ZOOM<zo>:SSCReen

Sets the zoom area to the whole screen.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Usage: Setting only
Asynchronous command

Manual operation: See "Set to screen" on page 237

18.12.2 Mathematics

To transfer the math waveform data to a remote computer, use:

- `CALCulate:MATH<m>:DATA:HEADer?` on page 1302
- `CALCulate:MATH<m>:DATA[:VALues]?` on page 1302
- `CALCulate:MATH<m>:DATA:STYPe?` on page 1302

For fast export of several waveforms at once, use `EXPort:WAVeform:DATA[:VALues]?` on page 1307.

For export of waveform data to file, see Section 18.13.4, "Waveform data: export to file", on page 1285.

CALCulate:MATH<m>:STATe 1256
CALCulate:MATH<m>[:EXPRession][:DEFine] 1256
CALCulate:MATH<m>:LABel 1258
CALCulate:MATH<m>:SLABel 1258
CALCulate:MATH<m>:VERTical:SCALe[:VALue] 1258
CALCulate:MATH<m>:UNIT 1259
CALCulate:MATH<m>:VERTical:OFFSet 1259
CALCulate:MATH<m>:ENVSelection 1259
CALCulate:MATH<m>:VERTical:SCALe:MODE 1260

CALCulate:MATH<m>:STATe <First>

Activates the selected Math channel and displays the defined math waveforms.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "State" on page 241

CALCulate:MATH<m>[:EXPRession][:DEFine] <Expression>

Defines the math expression to be calculated for the specified math channel.

Operation	<Expression> as example with "Source 1" = C1 and "Source 2" = C2	Comment
Addition	"C1+C2"	
Subtraction	"C1-C2"	
Multiplication	"C1*C2"	
Division	"C1/C2"	0/0 = 0 +1 / 0 = Clip+ -1 / 0 = Clip-

Operation	<Expression> as example with "Source 1" = C1 and "Source 2" = C2	Comment
Inverting	"-C1"	
Absolute value	"abs(C1)"	
Square root	"sqrt(C1)"	Uses the absolute value of the source in calculation.
Square	"pow(C1)"	
Reciprocal	1/(C1)	
Derivation	"derivation(C1,NoiseReject)"	NoiseReject can get any value between 1 and 5000 points Default = 50
Integral	"integral(C1)"	
Rescale	"rescale(C1,a,b)"	a = scale, default = 1 b = offset, default = 0
Logarithm (based on 10)	"log(C1)"	Uses the absolute value of the source in calculation. Log(0) = Clip -
Natural logarithm (based on e)	"ln(C1)"	Uses the absolute value of the source in calculation. Log(0) = Clip -
Binary logarithm (based on 2)	"ld(C1)"	Uses the absolute value of the source in calculation. Log(0) = Clip -
FIR	"FIR(type,C1,cut-off,characteristics)" Examples: "FIR(highpass,C1,10000000,brickwall)" "FIR(lowpass,C1,10000000,bessel)"	Type = lowpass, highpass Cut-Off = limit frequency Cut-Off can get any value between 4 GHz and 1 kHz Characteristics for highpass: brickwall Characteristics for lowpass = gaus-sian, bessel, brickwall
FIR user defined	"FIR(userdef,C1,file)" Example: "FIR(userdef,C1,"/run/media/usb/<MyDriveName>/bandpass.csv")"	file = path and filename of the filter file You can select the file in the file browser with "Open".
IIR low pass	IIR(lowpass,C1,cut-off,shape,order) Example: "IIR(lowpass,C1,100000,bessel,1)"	Cut-off = limit frequency Shape = bessel or butterworth Order = feedback filter order, 1 or 2

Suffix:

<m> 1 to 8, index of the math waveform

Parameters:
<Expression> String with regular expression for calculation

Example: `CALC:MATH 'C1*C2'`
Defines the multiplication of waveforms channel 1 and channel 2.

Usage: Asynchronous command

Manual operation: See "Operator" on page 242

CALCulate:MATH<m>:LABel <Label>

Defines a label for the selected math waveform.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<Label> String with the label

Example: `CALCulate:MATH3:LABel 'M3AddC1C2'`

Usage: Asynchronous command

Manual operation: See "Label" on page 241

CALCulate:MATH<m>:SLABel <ShowLabel>

Displays a waveform label at the waveform in the diagram, with the content defined in "Settings" > "Appearance" > "Grid".

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<ShowLabel> OFF | ON

Usage: Asynchronous command

Manual operation: See "Show label in diagram" on page 242

CALCulate:MATH<m>:VERTical:SCALe[:VALue] <VerticalScale>

Sets the scale of the y-axis in the math function diagram. The value is defined as "<unit> per division", e.g. *50 mV/div*. In this case, the horizontal grid lines are displayed in intervals of 50 mV.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:

<VerticalScale> Range: 1E-12 to 100E+12
Increment: 1E-05
*RST: 0.5
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 53

CALCulate:MATH<m>:UNIT <UserUnit>

Sets a user-defined unit for the math operation.

Suffix:

<m> 1 to 8, index of the math waveform

Parameters:

<UserUnit> String with the base unit

Example:

```
CALCulate:MATH:UNIT 'A'
```

Usage: Asynchronous command

Manual operation: See "Unit" on page 251

CALCulate:MATH<m>:VERTical:OFFSet <VerticalOffset>

Sets a voltage offset to adjust the vertical position of the math function on the screen. Negative values move the waveform up, positive values move it down.

Suffix:

<m> 1 to 8, index of the math waveform

Parameters:

<VerticalOffset> Range: -100E12 to 100E12
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 251

CALCulate:MATH<m>:ENVSelection <EnvelopeCurve>

Selects the upper or lower part of the input waveform for mathematic calculation, or a combination of both.

Suffix:

<m> 1 to 8, index of the math waveform

Parameters:

<EnvelopeCurve> MIN | MAX | BOTH
*RST: BOTH

Usage: Asynchronous command

Manual operation: See "Envelope wfm selection" on page 243

CALCulate:MATH<m>:VERTical:SCALe:MODE <VertSclMd>

Sets how the vertical scale is adapted to the current measurement results. By default, scaling is done automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<VertSclMd> MANual | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Scale mode" on page 251

18.12.3 History

ACQuire:HISTory:CURRent....1260
ACQuire:HISTory:ISODate?....1261
ACQuire:HISTory:PLAY....1261
ACQuire:HISTory:REPLay....1261
ACQuire:HISTory:STARt....1261
ACQuire:HISTory:STOP....1262
ACQuire:HISTory:TPACq....1262
ACQuire:HISTory:TSABsolute?....1262
ACQuire:HISTory:TSDate?....1262
ACQuire:HISTory:TSRelative?....1263
ACQuire:HISTory:TSRReference?....1263
ACQuire:HISTory[:STATe]....1263

ACQuire:HISTory:CURRent <CurrentAcqIndex>

Accesses a particular acquisition in the memory to display it, or to save it. The newest acquisition always has the index "0". Older acquisitions have a negative index.

Parameters:
<CurrentAcqIndex> Range: -2147483648 to 0
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Current acq" on page 254

ACQuire:HISTory:ISODate?

Returns the absolute date and time of the acquisition that is selected in history view in ISO 8601 format. The same format is used in the header of exported waveform data files.

See also: `ACQuire:HISTory:CURRent`).

Return values:

<DateTimeISO8601> String with absolute date and time in this order: year, month, day, hour, minutes, seconds, and milliseconds.

Example:

```
ACQ:HIST:ISOD?
<-- "2024-10-02T10:11:09.603208067"
```

Usage: Query only
Asynchronous command

ACQuire:HISTory:PLAY

Starts and stops the replay of the history waveforms.

Usage: Event
Asynchronous command

Manual operation: See "Player" on page 254

ACQuire:HISTory:REPLay <AutoRepeat>

If enabled, the replay of the history waveform sequence repeats automatically.

Otherwise, the replay stops at the stop index set with `ACQuire:HISTory:STOP` on page 1262.

Parameters:

<AutoRepeat> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Auto repeat" on page 256

ACQuire:HISTory:STARt <StartAcqIndex>

Sets the index of the first (oldest) acquisition to be displayed or exported. The index is always negative.

Parameters:

<StartAcqIndex> Range: -2147483648 to 0
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Start acq" on page 254

ACQuire:HISTory:STOP <StopAcqIndex>

Sets the index of the last (newest) acquisition to be displayed or exported. The newest acquisition of the complete acquisition series always has the index "0".

Parameters:

<StopAcqIndex>
Range: -2147483648 to 0
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 254

ACQuire:HISTory:TPACq <TimePerAcq>

Sets the display time for one acquisition. The shorter the time, the faster the replay is.

Parameters:

<TimePerAcq>
Range: 4E-05 to 10
Increment: 1
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Display time" on page 255

ACQuire:HISTory:TSABsolute?

Returns the absolute daytime of the selected acquisition (`ACQuire:HISTory:CURRent`).

For automatic parsing of the time, use `ACQuire:HISTory:ISODate?`.

Return values:

<TimeAbsString> String containing the time and unit

Example:

```
ACQ:HIST:TSAB?
<-- "10:11 9,603.208.067 s"
```

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 255

ACQuire:HISTory:TSDate?

Returns the date of the selected acquisition (`ACQuire:HISTory:CURRent`).

For automatic parsing of the time, use `ACQuire:HISTory:ISODate?`.

Return values:

<DateAbsString> String parameter with acquisition date

Example:
```
ACQ:HIST:TSD?
<-- "2024:10:02"    //02 Oct 2024
```

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 255

ACQuire:HISTory:TSRelative?

Returns the relative time of the current acquisition - the time difference to the newest acquisition (index = 0).

See also: `ACQuire:HISTory:CURRent`.

Return values:
<TimeRelativ> Range: -1E+26 to 1E+26
Increment: 1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 255

ACQuire:HISTory:TSRReference?

Returns the relative time of the currently selected acquisition and the internal reference time (horizontal alignment) in history view in relation to the acquisition with index 0.

Return values:
<TimeRelIntRef> Range: -1E+26 to 1E+26
Increment: 1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 255

ACQuire:HISTory[:STATe] <State>

Enables the history mode and allows you to save history waveforms to file.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show history" on page 254

18.12.4 Reference waveforms

- Setup....1264
- Scaling....1267
- Reference waveform data export....1271

18.12.4.1 Setup

REFCurve<rc>:ABORt....1264
REFCurve<rc>:CLEar....1264
REFCurve<rc>:NAME....1264
REFCurve<rc>:OFFSet....1265
REFCurve<rc>:OPEN....1265
REFCurve<rc>:RESTore....1265
REFCurve<rc>:SAVE....1266
REFCurve<rc>:SOURce....1266
REFCurve<rc>:STATe....1266
REFCurve<rc>:UPDate....1267

REFCurve<rc>:ABORt

Aborts a running reference waveform export, which was started with `REFCurve<rc>:SAVE`, or a running reference waveform update, which was started with `REFCurve<rc>:UPDate`.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Save as" on page 261

REFCurve<rc>:CLEar

Deletes the selected reference waveform. It disappears from the display, and its memory is deleted.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Clear" on page 261

REFCurve<rc>:NAME <Name>

Defines the path, filename and extension of the reference waveform file to be loaded, saved or deleted.

For supported file types, see "Supported file formats" on page 258.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<Name> String with path, filename and extension

Usage: Asynchronous command

Manual operation: See "Save as" on page 261

REFCurve<rc>:OFFSet <VerticalOffset>

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<VerticalOffset>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 264

REFCurve<rc>:OPEN

Loads the reference waveform file selected by `REFCurve<rc>:NAME`.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 261

REFCurve<rc>:RESTore

Applies the original settings of the reference waveform to the horizontal and vertical settings of the selected waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Restore settings" on page 263

REFCurve<rc>:SAVE

Saves the reference waveform to the file selected by `REFCurve<rc>:NAME`.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Save as" on page 261

REFCurve<rc>:SOURce <Source>

Selects the source waveform from the active waveforms, e.g. input channels, math waveforms, or spectrum.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<Source> One of the following waveforms:
NONE
C1 | C2 | ... | C8: analog channels
M1 | M2 | ... | M8: math waveforms
R1 | R2 | ... | R8: reference waveforms
TRK1 | TRK2 | TRK3 | ... | TRK24: tracks
SPECMAXH1 | SPECMINH1 | SPECNORM1 | SPECAVER1 | SPECMAXH2 | SPECMINH2 | SPECNORM2 | SPECAVER2 | SPECMAXH3 | SPECMINH3 | SPECNORM3 | SPECAVER3 | SPECMAXH4 | SPECMINH4 | SPECNORM4 | SPECAVER4: spectrum waveforms
O<n>C1,O<n>C2, ... ,O<n>C8 (<n> = 2 to 11): ScopeSync waveforms, retrieved from connected oscilloscopes
Power waveforms of power analysis measurements with option R&S MXO5-K31.
Power waveforms of 3-phase power analysis measurements with option R&S MXO5-K333.
Mechanical tracks of motor drive analysis with option R&S MXO5-K360.
All waveforms are listed in Section 18.4.1, "Waveform parameter", on page 1082.

Usage: Asynchronous command

Manual operation: See "Source" on page 261

REFCurve<rc>:STATe <State>

Enables the display of the reference waveform in the diagram. Before you can display it, create the reference waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show" on page 260

REFCurve<rc>:UPDate

Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform. If the acquisition is running, the reference waveform is a snapshot.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Create/Update" on page 261

18.12.4.2 Scaling

REFCurve<rc>:AXIS[:XMODe] 1267
REFCurve<rc>:SCALe 1268
REFCurve<rc>:POSition 1268
REFCurve<rc>:HMODe 1268
REFCurve<rc>:RESCale:HORizontal:FACTor 1269
REFCurve<rc>:RESCale:HORizontal:OFFSet 1269
REFCurve<rc>:RESCale:HORizontal:STATe 1269
REFCurve<rc>:RESCale:VERTical:FACTor 1270
REFCurve<rc>:RESCale:VERTical:OFFSet 1270
REFCurve<rc>:RESCale:VERTical:STATe 1270
REFCurve<rc>:TOORiginal 1271
REFCurve<rc>:VMODe 1271

REFCurve<rc>:AXIS[:XMODe] <XAxisMode>

Defines the scaling method for the frequency (x-axis) of the reference curve.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<XAxisMode> LIN | LOG
`LIN`: Linear scaling
`LOG`: Logarithmic scaling
*RST: LIN

Usage: Asynchronous command

REFCurve<rc>:SCALe <VerticalScale>

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<VerticalScale> Range: 1E-15 to 1E+26
Increment: 1E-05
*RST: 0.5
Default unit: Unit of the source waveform

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 53

REFCurve<rc>:POSition <VertPosi>

Available, if `REFCurve<rc>:VMODe` is set to `INDependent`.

Moves the reference waveform up or down in the diagram.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<VertPosi> Range: -1E+26 to 1E+26
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Vertical position" on page 264

REFCurve<rc>:HMODe <HorizontalMode>

Selects the coupling of horizontal settings.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<HorizontalMode> ORIGinal | COUPled

ORIGinal
Horizontal scaling and reference point of the source waveform are used.

COUPled
The current horizontal settings of the diagram are used.

*RST: ORIGinal

Usage: Asynchronous command

Manual operation: See "Mode" on page 265

REFCurve<rc>:RESCale:HORizontal:FACTor <ScaleFactor>

Sets the horizontal scale factor. A factor greater than 1 stretches the waveform horizontally, a factor lower than 1 compresses the curve.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<ScaleFactor>
Range: 1E-14 to 100000000000000
Increment: 0.1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Scale factor" on page 265

REFCurve<rc>:RESCale:HORizontal:OFFSet <Offset>

Moves the waveform horizontally. Enter a value with a time unit suitable for the time scale of the diagram.

Positive values shift the waveform to the right, negative values shift it to the left.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<Offset>
Range: -5000000 to 5000000
Increment: 0.01
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Horizontal offset" on page 266

REFCurve<rc>:RESCale:HORizontal:STATe <State>

If enabled, the horizontal offset and factor are applied to the reference waveform.

Stretching and offset change the display of the waveform independent of the horizontal settings of the source waveform and of the horizontal diagram settings.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 265

REFCurve<rc>:RESCale:VERTical:FACTor <ScaleFactor>

Sets the vertical scale factor. A factor greater than 1 stretches the waveform vertically, a factor lower than 1 compresses the curve.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<ScaleFactor> Range: -100000000 to 100000000
Increment: 0.1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Scale factor" on page 265

REFCurve<rc>:RESCale:VERTical:OFFSet <Offset>

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Like vertical offset of a channel waveform, the offset of a reference waveform is subtracted from the measured value. Negative values shift the waveform up, positive values shift it down.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<Offset> Range: -100000000 to 100000000
Increment: 1E-06
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 265

REFCurve<rc>:RESCale:VERTical:STATe <State>

If enabled, the vertical offset and factor are applied to the reference waveform.

Stretching and offset change the display of the waveform independent of the vertical scale and position.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 265

REFCurve<rc>:TOORiginal

Available, if `REFCurve<rc>:VMODe` is set to `INDependent`.

Restores the original vertical settings of the reference waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Set to original" on page 263

REFCurve<rc>:VMODe <VerticalMode>

Selects the coupling of vertical settings.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<VerticalMode> COUPled | INDependent

COUPled
Vertical position and scale of the source are used.

INDependent
Scaling and position can be set specific to the reference waveform.

*RST: INDependent

Usage: Asynchronous command

Manual operation: See "Vertical mode" on page 263

18.12.4.3 Reference waveform data export

Commands to transmit the data of reference waveforms are the following:

- `REFCurve<rc>:DATA:HEADer?` on page 1300
- `REFCurve<rc>:DATA[:VALues]?` on page 1301

- REFCurve<rc>:DATA:STYPe? on page 1301

Commands for saving waveform data to a file are described in Section 18.13.4, "Waveform data: export to file", on page 1285.

18.12.5 Waveform histograms

- Histogram settings 1272
- Window settings 1274
- Histogram data transfer 1277

18.12.5.1 Histogram settings

HISTogram<m>:ADD

Creates a new histogram with the specified index.

Suffix:
<m> 1...8, index of the histogram

Usage: Setting only
Asynchronous command

Manual operation: See "Add histogram" on page 267

HISTogram<m>:COUNt? <Count>

Returns the number of created histograms.

You can query the minimum and maximum values with `<command>? MIN` and `<command>? MAX`.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<Count> Counted number of histograms

Usage: Query only
Asynchronous command

HISTogram<m>:ENABle <State>

Enables or disables the histogram evaluation and display. The histogram settings are kept until the histogram is deleted.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 268

HISTogram<m>:MODE <Mode>

Defines the type of histogram.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Mode> VERTical | HORizontal

VERTical
A vertical histogram has horizontal bars that show the occurence of amplitude, or vertical values.

HORizontal
A horizontal histogram has vertical bars that show the occurrence of a sample at a given time on the x-axis.

*RST: VERTical

Usage: Asynchronous command

Manual operation: See "Mode" on page 268

HISTogram<m>:REMove

Deletes the specified histogram.

Suffix:
<m> 1...8, index of the histogram

Usage: Setting only
Asynchronous command

HISTogram<m>:RESet

Restarts the calculation of the selected histogram.

To reset all histograms and measurements, use `DISPlay:CLR`.

Suffix:
<m> 1...8, index of the histogram

Usage: Setting only
Asynchronous command

Manual operation: See "Reset" on page 269

HISTogram<m>:SIZE <RelativeSize>

Defines the size of the histogram in percent of the diagram width or height.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<RelativeSize> Range: 10 to 90
Increment: 5
*RST: 30
Default unit: %

Usage: Asynchronous command

Manual operation: See "Diagram size" on page 268

HISTogram<m>:SOURce <Source>

Defines the source of the histogram.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Source> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 268

18.12.5.2 Window settings

HISTogram<m>:WINDow:ENABle....1275
HISTogram<m>:WINDow:HORizontal:MODE....1275
HISTogram<m>:WINDow:VERTical:MODE....1275
HISTogram<m>:WINDow:HORizontal:ABSolute:POSition....1275
HISTogram<m>:WINDow:HORizontal:ABSolute:SPAN....1275
HISTogram<m>:WINDow:HORizontal:ABSolute:STARt....1275
HISTogram<m>:WINDow:HORizontal:ABSolute:STOP....1275
HISTogram<m>:WINDow:HORizontal:RELative:POSition....1276
HISTogram<m>:WINDow:HORizontal:RELative:SPAN....1276
HISTogram<m>:WINDow:HORizontal:RELative:STARt....1276
HISTogram<m>:WINDow:HORizontal:RELative:STOP....1276
HISTogram<m>:WINDow:VERTical:ABSolute:POSition....1276
HISTogram<m>:WINDow:VERTical:ABSolute:SPAN....1276
HISTogram<m>:WINDow:VERTical:ABSolute:STARt....1276
HISTogram<m>:WINDow:VERTical:ABSolute:STOP....1276
HISTogram<m>:WINDow:VERTical:RELative:POSition....1276
HISTogram<m>:WINDow:VERTical:RELative:SPAN....1276
HISTogram<m>:WINDow:VERTical:RELative:STARt....1276
HISTogram<m>:WINDow:VERTical:RELative:STOP....1276

HISTogram<m>:WINDow:ENABle <State>

When you use a histogram window, the analyzed part of the source waveform is limited vertically and horizontally.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use window" on page 269

HISTogram<m>:WINDow:HORizontal:MODE <Mode>
HISTogram<m>:WINDow:VERTical:MODE <Mode>

The commands define whether the window limits are entered as absolute or relative values, in horizontal and vertical direction.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Mode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Mode" on page 270

HISTogram<m>:WINDow:HORizontal:ABSolute:POSition <Value>
HISTogram<m>:WINDow:HORizontal:ABSolute:SPAN <Value>
HISTogram<m>:WINDow:HORizontal:ABSolute:STARt <Value>
HISTogram<m>:WINDow:HORizontal:ABSolute:STOP <Value>

Set the horizontal window limits as absolute values. Enter the unit of the horizontal axis together with the value.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Value> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0 for position, 0.02 for span, -0.01 for start and 0.01 for stop

Usage: Asynchronous command

Manual operation: See "Start, Stop, Range, Position" on page 270

HISTogram<m>:WINDow:HORizontal:RELative:POSition <Value>
HISTogram<m>:WINDow:HORizontal:RELative:SPAN <Value>
HISTogram<m>:WINDow:HORizontal:RELative:STARt <Value>
HISTogram<m>:WINDow:HORizontal:RELative:STOP <Value>

Set the horizontal window limits as relative values in % of the diagram width.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Value>
Range: 0 for position, start and stop, 1E-15 for span to 100
Increment: 0.1
*RST: position: 50, span: 1, start: 0, stop: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Relative start, Relative stop, Relative range, Relative position" on page 270

HISTogram<m>:WINDow:VERTical:ABSolute:POSition <Value>
HISTogram<m>:WINDow:VERTical:ABSolute:SPAN <Value>
HISTogram<m>:WINDow:VERTical:ABSolute:STARt <Value>
HISTogram<m>:WINDow:VERTical:ABSolute:STOP <Value>

Set the vertical window limits as absolute values. Enter the unit of the vertical axis together with the value.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Value>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0 for position, 0.02 for span, -0.01 for start and 0.01 for stop

Usage: Asynchronous command

Manual operation: See "Start, Stop, Range, Position" on page 270

HISTogram<m>:WINDow:VERTical:RELative:POSition <Value>
HISTogram<m>:WINDow:VERTical:RELative:SPAN <Value>
HISTogram<m>:WINDow:VERTical:RELative:STARt <Value>
HISTogram<m>:WINDow:VERTical:RELative:STOP <Value>

Set the vertical window limits as relative values in % of the diagram height.

Suffix:
<m> 1...8, index of the histogram

Parameters:

<Value>	Range:	0 for position, start and stop, 1E-15 for span to 100
	Increment:	0.1
	*RST:	position: 50, span: 1, start: 0, stop: 100
	Default unit:	%

Usage: Asynchronous command

Manual operation: See "Start, Stop, Range, Position" on page 270

18.12.5.3 Histogram data transfer

To transfer the waveform histogram data to a remote computer, use:

- `EXPort:HISTogram<m>:DATA:HEADer?` on page 1306
- `EXPort:HISTogram<m>:DATA[:VALues]?` on page 1307

For export of histogram data to file, see Section 18.13.5, "Histogram data: export to file", on page 1289.

18.13 Data management

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

18.13.1 Instrument settings

The Mass MEMory subsystem provides commands to access the storage media and to save and reload instrument settings.

File and directory names

The <file_name> and <directory_name> parameters are strings. Some commands use a fixed directory; for others the <file_name> can contain the complete path including the drive name and all subdirectories. If no complete path is specified, the file location is relative to the current directory, queried with `MMEMory:CDIRectory?`. The filename itself may contain the period as a separator for extensions.

File and directory names can be chosen according to Windows® conventions. All letters and numbers are allowed, as well as the special characters "_", "^", "$", "~",

"!", "#", "%", "&", "-", "{", "}", "(", ")", "@" and "`". Reserved filenames are CON, AUX, COM1, ..., COM4, LPT1, ..., LPT3, NUL and PRN.

The use of wildcards ? and * is not allowed.

MMEMory:DRIVes? 1278
MMEMory:DCATalog? 1278
MMEMory:DCATalog:LENGth? 1279
MMEMory:CDIRectory 1279
MMEMory:MDIRectory 1279
MMEMory:RDIRectory 1280
MMEMory:CATalog? 1280
MMEMory:CATalog:LENGth? 1280
MMEMory:COPY 1281
MMEMory:MOVE 1281
MMEMory:DELete 1281
MMEMory:DATA 1282
MMEMory:ATTRibute 1282
MMEMory:SAV 1283
MMEMory:RCL 1283
MMEMory:STORe:STATe 1283
MMEMory:LOAD:STATe 1283
MMEMory:GENerator:RCL 1284
MMEMory:GENerator:SAV 1284

MMEMory:DRIVes?

Returns the path list of available drives.

Return values:

<Drive> List of strings, for example:
Instrument only: `"/home/storage/userData"`
Instrument with connected USB flash drive:
`"/home/storage/userData","/run/media/usb/<MyDriveName>/MYD`
. MYDATA is the partition name, which is also shown in the file explorer.
Instrument with connected USB flash drive:
`"/home/storage/userData","/run/media/usb/<MyDriveName>/8AF`
. 8AF8-3EBA is an example ID. ID is used if the partition does not have a name, or the name cannot be read.

Usage: Query only

MMEMory:DCATalog? [<PathName>]

Returns the subdirectories of the current or of a specified directory.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be set and queried with `MMEMory:CDIRectory`.

Return values:

<FileEntry> Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

Example:
```
MMEM:DCAT?
```

Usage: Query only

MMEMory:DCATalog:LENGth? [<PathName>]

Returns the number of subdirectories of the current or of a specified directory. The number includes the parent directory strings "." and ".." and corresponds to the number of strings returned by the `MMEMory:DCATalog?` command.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be set and queried with `MMEMory:CDIRectory`.

Return values:

<FileEntryCount> Number of parent directories and subdirectories.

Example:
```
MMEM:DCAT:LENG?
5
```

Usage: Query only

MMEMory:CDIRectory [<DirectoryName>]

Changes the default directory for file access.

Parameters:

<DirectoryName> String parameter to specify the directory.

*RST: "\"

Example:
```
MMEM:CDIR '/home/storage/userData/Waveforms'
```

Usage: SCPI confirmed

MMEMory:MDIRectory <DirectoryName>

Creates a new directory with the specified name.

Setting parameters:

<DirectoryName> String parameter to specify the new directory. If the path consists of several subdirectories, the complete tree is created if necessary.

Example:
```
MMEM:MDIR '/home/storage/userData/Waveforms'
```

Usage: Setting only

MMEMory:RDIRectory <DirectoryName>

Deletes the specified directory.

Setting parameters:

<DirectoryName> String parameter to specify the directory to be deleted.
This directory must be empty, otherwise it is not deleted.

Example:
```
MMEM:RDIR '/home/storage/userData/Test'
```

Usage: Setting only

MMEMory:CATalog? [<PathName>][, <Format>]

Returns a list of files contained in the specified directory. The result corresponds to the number of files returned by the MMEMory:CATalog:LENgth command.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries directory specified with `MMEMory:CDIRectory`.

<Format> ALL | WTIMe
ALL: Extended result including file, date, time and attributes
WTIMe: Extended result including file, date, time

Return values:

<UsedMemory> Total amount of storage currently used in the directory, in bytes.

<FreeMemory> Total amount of storage available in the directory, in bytes.

<FileEntry> All files and subdirectories of the directory are listed with their filename, format and size in bytes. The first two strings are related to the parent directory.

Example:
```
MMEM:CAT? '/home/storage/userData'
529479,1831777894400,".,DIR,0","..,DIR,0",
"Backup,DIR,0","CSS,DIR,0","DATEN,DIR,0",
"Commands.jar,BIN,529479","FAVORITES,DIR,0",
"LOG,DIR,0","DATA,DIR,0","test,DIR,0",
"TotalCMD,DIR,0"
```

Usage: Query only
SCPI confirmed

MMEMory:CATalog:LENGth? [<PathName>]

Returns the number of files and subdirectories of the current or specified directory. The number includes the parent directory strings "." and ".." and it corresponds to the number of <FileEntry> strings returned by the `MMEMory:CATalog?` command.

Query parameters:

<PathName> String parameter, directory to be queried. If the directory is omitted, the current directory is queried, specified with `MMEMory:CDIRectory`.

Return values:

<Count> Number of files and subdirectories including parent directory entries.

Example:

```
MMEM:CDIR '/home/storage/userData'
MMEM:CAT:LENG?
11
```

Usage: Query only

MMEMory:COPY <FileSource>[, <FileDestination>]

Copies an existing file to a new file.

Setting parameters:

<FileSource> String parameter. Contains name and path of the file to be copied. Wildcards (* and ?) are allowed.

<FileDestination> String parameter. Contains name and path of the new file. If the file already exists, it is overwritten without notice. If no file destination is specified, the source file is written to the current directory specified with `MMEMory:CDIRectory`.

Usage: Setting only
SCPI confirmed

MMEMory:MOVE <FileSource>, <FileDestination>

Moves the specified file to a new location on the same drive and renames it.

Setting parameters:

<FileSource> String parameter, contains name and path of the file to be copied.
Wildcards (* and ?) are allowed. Therefore, specify a directory for <FileDestination>. Renaming is not possible.

<FileDestination> String parameter. Contains name and path of the new file. If no path is specified, the <FileSource> directory is used - the file is renamed.

Usage: Setting only
SCPI confirmed

MMEMory:DELete <FileName>

Removes the specified file/files. To delete directories, use `MMEMory:RDIRectory`.

Setting parameters:

<FileName> String parameter to specify the name and directory of the file to be removed. Wildcards (* and ?) are allowed.
If no path is defined, the current directory is used, specified with `MMEMory:CDIRectory`.

Example: `MMEM:DEL '*.CFG'`
Deletes all CFG files from the current directory.

Usage: Setting only
SCPI confirmed

MMEMory:DATA <FileName>, <Data>
MMEMory:DATA? <FileName>

Stores data in the specified file to the storage location specified using `MMEMory:CDIRectory`.

Parameters:

<Data> <block>
488.2 block data format. The delimiter EOI must be selected to achieve correct data transfer.
The block begins with character '#'. The next digit is the length of the length information, followed by this given number of digits providing the number of bytes in the following binary data.

Parameters for setting and query:

<FileName> String parameter, the name of the file the data is stored to.

Example: `MMEM:DATA 'abc.txt', #216This is the file`
#2: the length information has two digits.
16: the binary data has 16 bytes.

Example: `MMEM:DATA? 'abc.txt'`
Returns the data from file `abc.txt`.

MMEMory:ATTRibute <FileName>, <Attributes>
MMEMory:ATTRibute? <FileName>

Sets file attributes for the specified file/files. The command can be used for files only.

Setting parameters:

<Attributes> String with attributes and setting information.
'+' before the attribute: sets the attribute
'-' before the attribute: deletes the attribute
'R': read only
'H': hidden file

Parameters for setting and query:

<FileName> String parameter, contains name and path of the file. Wildcards (* and ?) are allowed.

Return values:
<FileEntry> String containing: "<file_name>,<file_attributes>"

MMEMory:SAV <FileDestination>

Stores the current instrument settings to the specified file.

Waveform generator settings are not included.

This command has the same effect as the combination of `*SAV` and `MMEMory:STORe:STATe`.

Parameters:
<FileDestination> String parameter specifying path and filename of the target file. Wildcards are not allowed.

Usage: Event

MMEMory:RCL <FileSource>

Restores the instrument settings from the specified file.

The stored instrument settings do not include waveform generator settings.

This command has the same effect as the combination of `MMEMory:LOAD:STATe` and `*RCL`.

Parameters:
'<FileSource>' String parameter specifying the path and filename of the source file. Wildcards are not allowed.

Usage: Event

MMEMory:STORe:STATe <MemoryNumber>, <FileName>

Stores the instrument settings from the specified internal memory to the specified file. To store the current instrument settings to the internal memory, use `*SAV` first.

Setting parameters:
<MemoryNumber> Number of the internal memory

Range: 1 to 99

<FileName> String parameter specifying the complete path and filename of the source file.

Usage: Setting only

MMEMory:LOAD:STATe <MemoryNumber>, <FileName>

Loads the instrument settings from the specified file to the specified internal memory. After the file has been loaded, the settings must be activated using a `*RCL` command.

Setting parameters:

<MemoryNumber> Number of the internal memory

Range: 1 to 99

<FileName> String parameter specifying the complete path and filename of the source file.

Usage: Setting only

MMEMory:GENerator:RCL <FilePath>

Restores the waveform generator settings from the specified file.

Parameters:

<FilePath> String parameter specifying the path and filename of the settings file.

Usage: Asynchronous command

MMEMory:GENerator:SAV <FilePath>

Stores the current waveform generator settings to the specified file.

Parameters:

<FilePath> String parameter specifying path and filename of the settings file.

Usage: Asynchronous command

18.13.2 Saveset

SAVeset:CONFig:UPReferences <UserSettings>

If ON, the user-specific display settings for the toolbar, waveform colors and diagram presentation are included in the saveset file. The setting affects the saving and the recall actions.

Parameters:

<UserSettings> OFF | ON

*RST: OFF

Usage: Asynchronous command

18.13.3 Generator saveset

GENerator:RCL <filePath>

Restores the waveform generator from the specified file.

Parameters:
<filePath> String parameter specifying the path and filename of the source file.

Usage: Asynchronous command

GENerator:SAV <filePath>

Stores the current waveform generator settings to the specified file.

Parameters:
<filePath> String parameter specifying path and filename of the target file.

Usage: Asynchronous command

18.13.4 Waveform data: export to file

EXPort:WAVeform:ABORt 1285
EXPort:WAVeform:AUTonaming:NAME 1285
EXPort:WAVeform:AUTonaming:PATH 1286
EXPort:WAVeform:AUTonaming:TYPE 1286
EXPort:WAVeform:CURSorset 1286
EXPort:WAVeform:GATE 1286
EXPort:WAVeform:NAME 1287
EXPort:WAVeform:SAVE 1287
EXPort:WAVeform:SCOPe 1287
EXPort:WAVeform:SOURce 1288
EXPort:WAVeform:STARt 1289
EXPort:WAVeform:STOP 1289

EXPort:WAVeform:ABORt

Aborts a running waveform export, which was started with `EXPort:WAVeform:SAVE`.

Usage: Event
Asynchronous command

EXPort:WAVeform:AUTonaming:NAME <FileName>

Sets a name for the waveform file, without extension. The name is extended with a time stamp when the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:WAVeform:SAVE`.

Parameters:
<FileName> String with the filename.

Usage: Asynchronous command

Manual operation: See "File name base" on page 505

EXPort:WAVeform:AUTonaming:PATH <FolderPath>

Sets the directory where the waveform file is saved. For local storage, the path is always `/home/storage/userData`.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:WAVeform:SAVE`.

Parameters:

<FolderPath> String with the path.

Usage: Asynchronous command

Manual operation: See "<Folder>" on page 505

EXPort:WAVeform:AUTonaming:TYPE <FileExtension>

Sets the file type of the waveform file.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:WAVeform:SAVE`.

Parameters:

<FileExtension> CSV | REF | ZIP | H5

*RST: REF

Usage: Asynchronous command

Manual operation: See "File extension" on page 505

EXPort:WAVeform:CURSorset <Cursorset>

Sets the cursor set to be used for limited data export if `EXPort:WAVeform:SCOPe` is set to `CURSor`.

Parameters:

<Cursorset> CURSOR1 | CURSor1 | CURSOR2 | CURSor2 | CURSOR3 | CURSor3 | CURSOR4 | CURSor4

Usage: Asynchronous command

Manual operation: See "Export mode" on page 504

EXPort:WAVeform:GATE <Gate>

Selects the gate to be used for limited data export if `EXPort:WAVeform:SCOPe` is set to `GATE`.

Parameters:

<Gate> Number of the gate to be applied to exported data.

Usage: Asynchronous command

Manual operation: See "Export mode" on page 504

EXPort:WAVeform:NAME <name>

Sets the path, the filename and the file format of the export file. The setting is used for save-as operations that do not use the autonaming settings.

Parameters:

<name> String with path and filename with extension `.ref`, `.csv`, `.zip`, or `.h5`. Extension `.ref` is provided for single waveform export only, while `.zip` is for export of multiple waveforms in REF format. CSV can be used for export of single waveforms, and multiple analog channels.
For local storage, the path is always `/home/storage/userData`.

Example:

```
EXP:WAV:NAME
'/home/storage/userData/Export_C1.csv'
EXP:WAV:SCOP DISP
EXP:WAV:SAVE
```

Saves the visible waveform data of channel 1 in xml format to `/home/storage/userData/Export_C1.csv`.

Usage: Asynchronous command

Manual operation: See "Save As" on page 505

EXPort:WAVeform:SAVE

Saves the waveform to the file specified with `EXPort:WAVeform:NAME`.

Usage: Event
Asynchronous command

Manual operation: See "Save As" on page 505

EXPort:WAVeform:SCOPe <Scope>

Defines the part of the waveform record that has to be stored.

Parameters:

<Scope> DISPlay | ALL | CURSor | GATE | MANual

DISPlay
Waveform data that is displayed in the diagram.

ALL
Complete waveform, which is usually longer than the displayed waveform.

CURSor
Data between the cursor lines if a cursor measurement is defined for the source waveform.

GATE
Data included in the measurement gate if a gated measurement is defined for the source waveform.

MANual
Saves the data between user-defined start and stop values to be set with `EXPort:WAVeform:STARt` and `EXPort:WAVeform:STOP`.

*RST: DISPlay

Example: See Section 18.5.4, "Data transfer in roll mode", on page 1089.

Usage: Asynchronous command

Manual operation: See "Export mode" on page 504

EXPort:WAVeform:SOURce <Sources>

Selects the waveform or waveforms to be exported to file.

Parameters:

<Sources> Comma-separated list of waveforms

Possible waveform sources are:
Analog signals: C1,C2,...,C8
Digital signals: D0,D1,D2,...,D15
Math waveforms: M1,M2,M3,M4,M5
Reference waveforms: R1,R2,R3,R4
Spectrum
traces: SPECMAXH1,SPECMINH1,SPECNORM1,SPECAVER1,SPECMAXH2,SPECMINH2,SPECNORM2,SPECAVER2,SPECMAXH3,SPECMINH3,SPECNORM3,SPECAVER3,SPECMAXH4,SPECMINH4,SPECNORM4,SPECAVER4
Tracks: TRK1,TRK2,TRK3, ...,TRK24
Analog channels of connected scopes (ScopeSync):
O<n>C1,O<n>C2, ... ,O<n>C8 (<n> = 2 to 11)
Power waveforms of power analysis measurements with option R&S MXO5-K31.
Power waveforms of 3-phase power analysis measurements with option R&S MXO5-K333.
Mechanical tracks of motor drive analysis with option R&S MXO5-K360.
All waveforms are listed in Section 18.4.1, "Waveform parameter", on page 1082.

Example:

```
EXP:WAV:NAME '/home/storage/userData/Export_C2.csv'
EXPort:WAVeform:SOURce C2
EXP:WAV:SCOP DISP
EXP:WAV:SAVE
```

Exports the data of channel 2 to a CSV file.

Example:
```
EXP:WAV:NAME '/home/storage/userData/Export_multi.zip'
EXPort:WAVeform:SOURce C1,C2,SPECNORM1,SPECAVER1
EXP:WAV:SCOP DISP
EXP:WAV:SAVE
```
Exports the data of channel 1, channel 2, normal and average spectrum traces to a zip file.

Usage: Asynchronous command

Manual operation: See "Source" on page 503

EXPort:WAVeform:STARt <Start>

Sets the start time value of the waveform section for export, if `EXPort:WAVeform:SCOPe` on page 1287 is set to `Manual`.

Parameters:

<Start>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: s

Usage: Asynchronous command

Manual operation: See "Export mode" on page 504

EXPort:WAVeform:STOP <Stop>

Sets the end time value of the waveform section for export, if `EXPort:WAVeform:SCOPe` on page 1287 is set to `Manual`.

Parameters:

<Stop>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: s

Usage: Asynchronous command

Manual operation: See "Export mode" on page 504

18.13.5 Histogram data: export to file

You can export the data of waveform histograms, and the data of histograms on measurement results. One histogram per file can be exported.

EXPort:HMEasurement<m>:NORMalize....1290
EXPort:HISTogram<m>:NORMalize....1290
EXPort:HMEasurement<m>:NAME....1290
EXPort:HISTogram<m>:NAME....1290
EXPort:HMEasurement<m>:SAVE....1290
EXPort:HISTogram<m>:SAVE....1290

EXPort:HMEasurement<m>:NORMalize <Normalization>
EXPort:HISTogram<m>:NORMalize <Normalization>

If normalization is off, the number of samples in a given bin is exported as integer values. With normalization, the ratio of samples in a given bin to the sum of all samples is exported as float value. The sum of all normalized values is 1.

The command affects all histogram exports.

Suffix:
<m> Irrelevant, omit the suffix.

Parameters:
<Normalization> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Normalization" on page 523

EXPort:HMEasurement<m>:NAME <SaveAsPath>
EXPort:HISTogram<m>:NAME <SaveAsPath>

Sets the path, the filename and the file format of the export file for histogram. The command affects all histogram exports.

Suffix:
<m> Irrelevant, omit the suffix.

Parameters:
<SaveAsPath> String with path and file name with extension `.csv`.

Usage: Asynchronous command

Manual operation: See "Save settings" on page 523

EXPort:HMEasurement<m>:SAVE

Saves the histogram on the results of the specified measurement to file. The target file is set using `EXPort:HMEasurement<m>:NAME`.

Suffix:
<m> 1 to 24, index of the measurement

Usage: Event
Asynchronous command

Manual operation: See "Save settings" on page 523

EXPort:HISTogram<m>:SAVE

Saves the specified histogram to file. The target file is set using `EXPort:HISTogram<m>:NAME` on page 1290.

Suffix:
<m> 1...8, index of the histogram

Usage: Event
Asynchronous command

Manual operation: See "Save settings" on page 523

18.13.6 Sessions

SESSion:LOAD[:EXECute] 1291
SESSion:SAVE:ABORt 1291
SESSion:SAVE:CHANnel 1291
SESSion:SAVE:REFerence 1292
SESSion:SAVE[:EXECute] 1292
SESSion:USERpref 1292

SESSion:LOAD[:EXECute] <Filepath>

Loads a session file.

To reload also user-specific display settings (if included in the session file), set `SESSion:USERpref ON`.

Setting parameters:
<Filepath> String parameter specifying path and filename of the session file.

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 522

SESSion:SAVE:ABORt

Stops the saving process of a session file.

Usage: Setting only
Asynchronous command

Manual operation: See "Save settings" on page 518

SESSion:SAVE:CHANnel <ChWfms>

Includes the channel waveform data in the session file.

Parameters:
<ChWfms> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Channel waveforms" on page 520

SESSion:SAVE:REFerence <RefWfms>

Includes the reference waveform data in the session file.

Parameters:
<RefWfms> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Toolbar, color and diagram settings" on page 518

SESSion:SAVE[:EXECute] <Filepath>

Saves the current session with selected content to the specified file.

Setting parameters:
<Filepath> String parameter specifying path and filename of the target file.

Usage: Setting only
Asynchronous command

Manual operation: See "Save settings" on page 518

SESSion:USERpref <UserSettings>

If ON, the user-specific display settings for the toolbar, waveform colors and diagram presentation are included in the session file. The setting affects the saving and the recall actions.

Parameters:
<UserSettings> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Toolbar, color and diagram settings" on page 520

18.13.7 Results

EXPort:RESult:AUTonaming:NAME ... 1293
EXPort:RESult:AUTonaming:PATH ... 1293
EXPort:RESult:AUTonaming:TYPE ... 1293
EXPort:RESult:NAME ... 1293
EXPort:RESult:SAVE ... 1294
EXPort:RESult:SELect:CURSor ... 1294
EXPort:RESult:SELect:MEASurement ... 1294
EXPort:RESult:SELect:PLISt ... 1294

EXPort:RESult:AUTonaming:NAME <FileName>

Sets a name for the result file, without extension. The name is extended with a time stamp when the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Parameters:
<FileName> String with the filename.

Usage: Asynchronous command

Manual operation: See "File name base" on page 528

EXPort:RESult:AUTonaming:PATH <FolderPath>

Sets the directory where the waveform file is saved. For local storage, the path is always `/home/storage/userData`.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Parameters:
<FolderPath> String with the path.

Usage: Asynchronous command

Manual operation: See "<Folder>" on page 528

EXPort:RESult:AUTonaming:TYPE <FileExtension>

Sets the file type of the waveform file.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Parameters:
<FileExtension> CSV

Usage: Asynchronous command

Manual operation: See "File extension" on page 528

EXPort:RESult:NAME <FilePath>

Sets the path, the filename and the file format of the export file.

Parameters:
<FilePath> String with path and file name with extension `.csv`.

Usage: Asynchronous command

Manual operation: See "Save As" on page 528

EXPort:RESult:SAVE

Saves the results to file. The target file is set using `EXPort:RESult:NAME`. To select the results to be exported, use `EXPort:RESult:SELect:CURSor` and `EXPort:RESult:SELect:MEASurement`.

Usage: Event
Asynchronous command

Manual operation: See "Save As" on page 528

EXPort:RESult:SELect:CURSor <CursorResult>

Includes the current cursor results in the export file.

Parameters:
<CursorResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Save results name" on page 527

EXPort:RESult:SELect:MEASurement <MeasResult>

Includes the current automatic measurement results in the export file.

Parameters:
<MeasResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Save results name" on page 527

EXPort:RESult:SELect:PLISt <SpectrumPeakList>

Includes the peak list results in the export file.

Parameters:
<SpectrumPeakList> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Save results name" on page 527

18.13.8 Screenshots

The `HCOPy` subsystem and some other commands control the output of display information for documentation purposes. The instrument allows two independent output configurations which can be set separately with the suffix.

Note that the remote mode is intended for maximum performance. Therefore, the display does not follow the remote commands constantly. To get a correct screenshot, turn the display on using `SYSTem:DISPlay:UPDate`.

HCOPy:DESTination<m> 1295
MMEMory:NAME 1295
HCOPy:DEVice<m>:LANGuage 1295
HCOPy:DEVice<m>:INVerse 1296
HCOPy:IMMediate<m>:NEXT 1296
HCOPy:IMMediate<m> 1296
HCOPy:ISBA 1297
HCOPy:SSD 1297
HCOPy:WBKG 1297
HCOPy:DATA? 1298

HCOPy:DESTination<m> <medium>

Selects the output medium: file or clipboard.

Suffix:
<m> 1..2
Selects the output configuration.

Parameters:
<medium> MMEM | CLIPBOARD
`MMEM`: saves image to a file.
`CLIPBOARD`: directs the image to the clipboard.
*RST: MMEM

Usage: Asynchronous command

Manual operation: See "<Folder>" on page 533

MMEMory:NAME <FileName>

Defines the filename for a screenshot that is stored to a file.

Parameters:
<FileName> String parameter specifying path and filename of the screenshot.

Example: See Section 18.5.3, "Saving screenshots to file", on page 1089.

Usage: SCPI confirmed
Asynchronous command

Manual operation: See "File name base" on page 533

HCOPy:DEVice<m>:LANGuage <FileFormat>

Defines the file format for output of the screenshot to file.

To set the output to file, use `HCOPy:DESTination<m>` with parameter `MMEM`.

Suffix:
<m> 1..2
Selects the output configuration.

Parameters:
<FileFormat> PNG | JPG
*RST: PNG

Usage: Asynchronous command

Manual operation: See "File extension" on page 533

HCOPy:DEVice<m>:INVerse <InverseColor>

Inverts the colors of the output, i.e. a dark waveform is shown on a white background.

See also `HCOPy:WBKG` and White background.

Suffix:
<m> 1..2
Selects the output configuration.

Parameters:
<InverseColor> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Inverse color" on page 532

HCOPy:IMMediate<m>:NEXT

Starts the output of the next display image, depending on the `HCOPy:DESTination<m>` destination setting.

If the screenshot is saved to a file, the file name used in the last saving process is automatically counted up to the next unused name. To define the file name, use `MMEMory:NAME`.

Suffix:
<m> 1..2
Selects the output configuration.

Example: See Section 18.5.3, "Saving screenshots to file", on page 1089.

Usage: Asynchronous command

Manual operation: See "Save" on page 533

HCOPy:IMMediate<m>

Starts the immediate output of the display image, depending on the `HCOPy:DESTination<m>` destination setting.

To define the file name, use `MMEMory:NAME`. Existing files are overwritten by the `HCOP:IMMM` command.

To get a correct screenshot of the diagrams, results, and dialog boxes, turn on the display using `SYSTem:DISPlay:UPDate`.

Suffix:
<m> 1..2
Selects the output configuration.

Example: See Section 18.5.3, "Saving screenshots to file", on page 1089.

Usage: Event
Asynchronous command

Manual operation: See "Save" on page 533

HCOPy:ISBA <IncludeSignBar>

If enabled, the screenshot shows the signal bar below the diagram area.

Parameters:
<IncludeSignBar> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Include signal bar" on page 532

HCOPy:SSD <ShowSetupDialog>

If enabled, the currently open dialog box is included in the screenshot.

Parameters:
<ShowSetupDialog> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show setup dialog" on page 532

HCOPy:WBKG <WhiteBackground>

Inverts the background color, so you can picture waveforms with normal waveform colors on white background.

If both `HCOPy:WBKG` and `HCOPy:DEVice<m>:INVerse` are ON, the instrument inverts the background twice, and it appears black.

Parameters:
<WhiteBackground> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "White background" on page 532

HCOPy:DATA?

Creates a PNG screenshot and returns the data of the image file in a binary data stream. When receiving the data, write them into a PNG file which you can open later.

Usage: Query only
Asynchronous command

18.13.9 Data transfer to remote computer

The commands in this section return the data of waveform points or histogram bins for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Usually, for each waveform type a `...:HEADer` command and a `....:VALue` command are available. For some waveforms, additional commands provided. For fast export of several waveforms at once, you can use `EXPort:WAVeform:DATA[:VALues]?`.

<Offset> and <Length> parameters in ...DATA[:VALues] commands

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

- <Offset>:
  Number of offset waveform points to be skipped. The range is 0 to m, and the limit is *n* + *m* <= *record length*.
- <Length>:
  Number of waveform points to be retrieved. The range is 0 to n, and the limit is *n* + *m* <= *record length*.

CHANnel<ch>:DATA:HEADer? 1299
CHANnel<ch>:DATA[:VALues]? 1299
REFCurve<rc>:DATA:HEADer? 1300
REFCurve<rc>:DATA[:VALues]? 1301
REFCurve<rc>:DATA:STYPe? 1301
CALCulate:MATH<m>:DATA:HEADer? 1302
CALCulate:MATH<m>:DATA[:VALues]? 1302
CALCulate:MATH<m>:DATA:STYPe? 1302
CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA:HEADer? 1303
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA:HEADer? 1303
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA:HEADer? 1303
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:HEADer? 1303
CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA[:VALues]? 1303
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA[:VALues]? 1303
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA[:VALues]? 1303
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA[:VALues]? 1303

CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:FRAMe<fr>[:VALues]?....1304
DIGital<m>:DATA:HEADer?....1304
DIGital<m>:DATA[:VALues]?....1305
PBUS<pb>:DATA:FORMat....1305
PBUS<pb>:DATA:HEADer?....1305
PBUS<pb>:DATA[:VALues]?....1306
EXPort:HMEasurement<m>:DATA:HEADer?....1306
EXPort:HISTogram<m>:DATA:HEADer?....1306
EXPort:HMEasurement<m>:DATA[:VALues]?....1307
EXPort:HISTogram<m>:DATA[:VALues]?....1307
EXPort:WAVeform:DATA[:VALues]?....1307

CHANnel<ch>:DATA:HEADer?

Returns the header of channel waveform data, the attributes of the waveform.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<XStart> 1. header value: time of the first sample in s

<XStop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length, number of samples

<ValuesPerSample> 4. header value: number of values per sample. For most waveforms, the result is 1. For peak detect and envelope waveforms, it is 2. If the number is 2, the number of returned values is twice the number of samples (record length).

Example:

```
CHAN1:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```

Start time of the data is -1E-07 = 100 ns, and end time of the data is 9.980000000000001E-08 = 99.8 ns. The data stream has 1000 values with one value per sample.

Usage: Query only
Asynchronous command

CHANnel<ch>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified channel waveform.

To set the export format, use `FORMat[:DATA]` on page 1093.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Query parameters:

<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1298.

Return values:

<Data> List of values according to the format and content settings.

Example: Retrieve the complete channel 1 waveform, only Y-values:

```
FORM ASC
CHAN1:DATA?
<-- -0.125000,-0.123016,-0.123016,-0.123016,-0.123016,-0.123016,...
```

Example: Retrieve the first 10 values of the waveform:

```
CHANnel:DATA:VALues? 0,10
<-- -0.10079051554203,-0.098814234137535,-0.098814234137535,
    -0.096837945282459,-0.094861663877964,-0.094861663877964,
    -0.092885382473469,-0.090909093618393,-0.090909093618393,
    -0.088932812213898
```

Example: Skip 5 samples and retrieve the next 5 samples:

```
CHANnel:DATA:VALues? 5,5
<-- -0.094861663877964,-0.092885382473469,-0.090909093618393,
    -0.090909093618393,-0.088932812213898
```

Usage: Query only
Asynchronous command

REFCurve<rc>:DATA:HEADer?

Returns header information on the reference waveform, the attributes of the waveform.

The information depends on the waveform domain, it is different for time domain and frequency domain reference waveforms. See:

- `CHANnel<ch>:DATA:HEADer?` on page 1299
- `CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:HEADer?` on page 1303

Suffix:

<rc> 1 to 8, index of the reference waveform

Return values:

<XStart> 1. header value: time of the first sample in s for a time domain signal, or start frequency of the first spectrum bin in Hz for a frequency domain signal

<XStop> 2. header value: time of the last sample in s for a time domain signal, or start frequency of the last spectrum bin in Hz for a frequency domain signal

<RecordLength> 3. header value: record length of the waveform in samples or bins

<ValuesPerSample> 4. header value: number of values per sample or bin. The number depends on the source waveform from which the reference waveform was created.

Example: Time domain signal:

```
REFC:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```

Start time of the data is -1E-07= -100 ns and stop time of the data is 9.980000000000001E-08= 99.8 ns. The data stream has 1000 values with one value per sample.

Example: Frequency domain signal:

```
REFC:DATA:HEAD?
549316.1734194756,1999450683.360919,2621,1
```

Start frequency of the first spectrum bin is 549316.1734194756 = ~ 549.3 kHz and start frequency of the last spectrum bin is 1999450683.360919 = ~ 1.999 GHz. The data stream has 2621 values with one value per bin.

Usage: Query only
Asynchronous command

REFCurve<rc>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified reference waveform.

To set the export format, use `FORMat[:DATA]` on page 1093.

Suffix:
<rc> 1 to 8, index of the reference waveform

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1298.

Return values:
<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

REFCurve<rc>:DATA:STYPe?

Returns the type of the source signal from which the reference waveform was created.

Suffix:
<rc> 1 to 8, index of the reference waveform

Return values:
<SignalType> NONE | CHANNEL | MATH | TRACK | REFERENCE | SPECTRUM | FRA_REF

Usage: Query only
Asynchronous command

CALCulate:MATH<m>:DATA:HEADer?

Returns the header of math waveform data, the attributes of the waveform.

Suffix:
<m> 1 to 8, index of the math waveform

Return values:
<XStart> 1. header value: time of the first sample in s

<XStop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For most waveforms, the result is 1. For peak detect and envelope waveforms, it is 2. If the number is 2, the number of returned values is twice the number of samples (record length).

Example:
```
CALC:MATH1:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```
Start time of the data is -1E-07 = 100 ns, and end time of the data is 9.980000000000001E-08 = 99.8 ns. The data stream has 1000 values with one value per sample.

Usage: Query only
Asynchronous command

CALCulate:MATH<m>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified math waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 8, index of the math waveform

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1298.

<Length> Number of waveform points to be retrieved.

Example:
```
:CALC:MATH1:DATA:VAL? 100,10
```
Returns 10 points from the start index 100.

Usage: Query only
Asynchronous command

CALCulate:MATH<m>:DATA:STYPe?

Returns the signal type of the math waveform.

Suffix:
<m> 1 to 8, index of the math waveform

Return values:
<SignalType> MATH

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA:HEADer?
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA:HEADer?
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA:HEADer?
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:HEADer?

Returns the header of spectrum data, the attributes of the waveform.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:
<XStart> 1. header value: start frequency of the first spectrum bin in Hz

<XStop> 2. header value: start frequency of the last spectrum bin in Hz

<RecordLength> 3. header value: record length of the waveform in bins

<ValuesPerSample> 4. header value: the number of values per bin is always = 1.

Example:
```
CALC:SPEC1:WAV:NORM:DATA:HEAD?
549316.1734194756,1999450683.360919,2621,1
```
Start frequency of the first spectrum bin is 549316.1734194756 = ~ 549.3 kHz. Start frequency of the last spectrum bin is 1999450683.360919 = ~ 1.999 GHz. The data stream has 2621 values with one value per bin.

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA[:VALues]?
[<Offset>[,<Length>]]
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA[:VALues]?
[<Offset>[,<Length>]]
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA[:VALues]?
[<Offset>[,<Length>]]
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA[:VALues]?
[<Offset>[,<Length>]]

Returns the data of the specified spectrum trace.

To set the export format, use `FORMat[:DATA]` on page 1093.

Suffix:
<sp> 1 to 4, index of the spectrum

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1298.

Return values:
<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:FRAMe<fr>[:VALues]?
[<Offset>[,<Length>]]

Returns the data of the normal spectrum trace of the specified frame.

To set the export format, use `FORMat[:DATA]` on page 1093.

Suffix:
<sp> 1 to 4, index of the spectrum

<fr> 1..*
Index of the frame

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1298.

Return values:
<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

DIGital<m>:DATA:HEADer?

Returns the header of digital channel data, the attributes of the waveform.

Suffix:
<m> 0 to 15, index of the logic channel

Return values:
<XStart> 1. header value: time of the first sample in s

<XStop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For digital data, the result is always 1.

Example:
```
DIG3:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```
Start time of the data is -1E-07 = -100 ns, and end time of the data is 9.980000000000001E-08= 99.8 ns. The data stream has 1000 values with one value per sample.

Usage: Query only
Asynchronous command

DIGital<m>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified digital channel.

Suffix:
<m> 0..15
Selects the digital channel.

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1298.

Return values:
<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

PBUS<pb>:DATA:FORMat <DataFormat>

Sets the data format of bus values, which are displayed in the decode table and on the comb bus display.

It also sets the format for the number representation for remote data transfer with `PBUS<pb>:DATA[:VALues]?`.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG
*RST: HEX

Usage: Asynchronous command

Manual operation: See "Data format" on page 1021

PBUS<pb>:DATA:HEADer?

Returns the header data of the indicated bus, the attributes of the data.

See also `DIGital<m>:DATA:HEADer?`.

Suffix:
<pb> 1 to 4, index of the logic group

Return values:
<XStart> 1. header value: time of the first sample in s

<XStop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For digital data, the result is always 1.

Usage: Query only
Asynchronous command

Manual operation: See "Data format" on page 1021

PBUS<pb>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified logic bus.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

Requirements:

- `PBUS<pb>:STATe` is set to `ON`.
- `PBUS<pb>:DISPlay:SHBU` is set to `ON`.
- A number format is set with `PBUS<pb>:DATA:FORMat`.

Suffix:
<pb> 1 to 4, index of the logic group

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1298.

Return values:
<Data> List of values according to the format and content settings.

Example:
```
PBUS:STAT ON
PBUS:DISP:SHBU ON
PBUS:DISP:BTYP COMB
PBUS:DATA:FORMat HEX
PBUS:DATA:VAL?
```

Usage: Query only
Asynchronous command

Manual operation: See "Data format" on page 1021

EXPort:HMEasurement<m>:DATA:HEADer?
EXPort:HISTogram<m>:DATA:HEADer?

Returns the header of the histogram data, the attributes of the waveform histogram or of the histogram on measurement results.

Suffix:
<m> 1 to 24, index of the measurement
or 1...8, index of the histogram

Return values:
<Start> 1. header value: start value. For measurement results in the measurement unit, for vertical waveform histogram in the waveform unit, for horizontal waveform histogram in s.

<End> 2. header value: end value, same units as for the start value.

<HistogrLength> 3. header value: number of histogram bins

Example: `EXP:HIST3:DATA:HEAD?`
`-0.250244,0.250122,1024`
Start value of the histogram is about -250 mV, and end value is about 250 mV. The data stream has 1024 values, one value for each bin.

Usage: Query only
Asynchronous command

EXPort:HMEasurement<m>:DATA[:VALues]?
EXPort:HISTogram<m>:DATA[:VALues]?

Returns the data of the specified waveform histogram or of the histogram on measurement results.

To set the export format, use `FORMat[:DATA]`. For histogram data, only ASCii and REAL,32 and REAL,64 are supported. The normalization setting is considered: `EXPort:HISTogram<m>:NORMalize` or `EXPort:HMEasurement<m>:NORMalize`.

Suffix:
<m> 1 to 24, index of the measurement
or 1...8, index of the histogram

Return values:
<Data> Comma-separated list of values according to the format setting.

Usage: Query only
Asynchronous command

EXPort:WAVeform:DATA[:VALues]?

Starts a fast export of the selected waveforms for use in automated analysis systems. There is no corresponding `...:DATA:HEADer` command. Offset and length parameters are not available.

Select the waveforms for export with `EXPort:WAVeform:SOURce`, and the data scope with `EXPort:WAVeform:SCOPe`.

The data stream contains the pure data of the exported sources. The order of the sources can be read with `EXPort:WAVeform:SOURce?`. The order is predefined and independent of the setting order to ensure the same order for the same selection of waveforms.

Fast export is possible at low record length, depending on the instrument and active functionality. If fast export is not possible, you can export the single signals.

Parameters:
<Values> Binary format: stream of bytes, without delimiter
ASCII: comma-separated value list

Example: The following waveforms are active and acquired: C1, C2 and SPECNORM1.
Determine the number of values per waveform:

```
CHANnel1:WAVeform:DATA:HEADer? --> 1000 values
CHANnel2:WAVeform:DATA:HEADer?      --> 1000 values
CALCulate:SPECtrum1:WAVeform:NORMal:DATA:HEADer? --> 2867 values
```

Fast export of all waveforms at once as float values:

```
FORMat:DATA REAL, 32
EXPort:WAVeform:SOURce C2,C1,SPECNORM1
EXPort:WAVeform:SOURce?      --> C1,C2,SPECNORM1
EXPort:WAVeform:DATA:VALues?
--> data stream of 1000 values C1, then 1000 values C2, then 2867 values
```

If the fast export fails, use the export of single waveforms:

```
CHANnel1:WAVeform:DATA:VALues?
CHANnel2:WAVeform:DATA:VALues?
CALCulate:SPECtrum1:WAVeform:NORMal:DATA:VALues?
```

Usage: Query only
Asynchronous command

18.14 Automatic measurements

This section contains all remote commands to set up automatic measurements and to analyze the measurement results.

Measurement suffix <mg>

The suffix <mg> indicates the number of the measurement for which the command takes effect.

18.14.1 General settings

MEASurement<mg>:ACTive....1309
MEASurement<mg>:COUNt?....1309
MEASurement<mg>[:ENABle]....1309
MEASurement<mg>:SOURce....1309
MEASurement<mg>:FSRC....1310
MEASurement<mg>:SSRC....1310
MEASurement<mg>:MAIN....1311
MEASurement<mg>:GATE....1311
MEASurement<mg>:STATistics:RESet....1312
MEASurement<mg>:CLEar....1312
MEASurement<mg>:DISPlay:RESults....1312
MEASurement<mg>:DISPlay:REFLevel<rl>:LEVels....1312
MEASurement<mg>:LABel....1313
MEASurement<mg>:ENVSelect....1313

MEASurement<mg>:ACTive <First>

Activates or deactivates the indicated measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "Add" on page 289

MEASurement<mg>:COUNt?

Returns the maximum number of measurements, which is the maximum value for the <mg> suffix.

Suffix:
<mg> Irrelevant, omit the suffix.

Return values:
<Count> Maximum number of measurements

Usage: Query only
Asynchronous command

MEASurement<mg>[:ENABle] <First>

Selects the indicated measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "Add" on page 289

MEASurement<mg>:SOURce <SignalSource>,[<SignalSource2>]

Sets the source of the measurement.

The source must fit the selected measurement type. For example, histogram measurements require a waveform histogram as source, and protocol measurements require a serial bus.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<SignalSource> One of the following waveforms:
NONE

C1 | C2 | ... | C8: analog channels
D0 | D1 | D2 | ... | D14 | D15: digital channels
M1 | M2 | ... | M8: math waveforms
R1 | R2 | ... | R8: reference waveforms
HWAVeform1 | HWAVeform2 | ... | HWAVeform8: histograms
TRK1 | TRK2 | TRK3 | ... | TRK24: tracks
HMEas1 | HMEas2 | HMEas3 | ... | HMEas24: histograms on measurement results
O<n>C1,O<n>C2, ... ,O<n>C8 (<n> = 2 to 11): ScopeSync waveforms, retrieved from connected oscilloscopes
EYE1 | EYE2 | ... | EYE8: eyes for eye measurements with option R&S MXO5-K136.
Power waveforms of power analysis measurements with option R&S MXO5-K31.
Power waveforms of 3-phase power analysis measurements with option R&S MXO5-K333.
Mechanical tracks of motor drive analysis with option R&S MXO5-K360.
All waveforms are listed in Section 18.4.1, "Waveform parameter", on page 1082.

<SignalSource2> Same as <SignalSource>

Usage: Asynchronous command

Manual operation: See "Source" on page 288

MEASurement<mg>:FSRC <Source>

Defines the first measurement source.

The command is an alternative to `MEASurement<mg>:SOURce`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Source> See `MEASurement<mg>:SOURce` on page 1309.

Usage: Asynchronous command

MEASurement<mg>:SSRC <Source2>

Defines the second measurement source.

The command is an alternative to `MEASurement<mg>:SOURce`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Source2> See `MEASurement<mg>:SOURce` on page 1309.

Usage: Asynchronous command

Manual operation: See "Source 2, Clock source" on page 300

MEASurement<mg>:MAIN <MeasType>

Defines the measurement type that is assigned to the indicated measurement. To query the result, use `MEASurement<mg>:RESult[:ACTual]?` on page 1330.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<MeasType>

Amplitude/time measurements
HIGH | LOW | AMPLitude | MAXimum | MINimum | PDELta | MEAN | RMS | STDDev | CRESt | POVershoot | NOVershoot | AREA | RTIMe | FTIMe | PPULse | NPULse | PERiod | FREQuency | PDCYcle | NDCYcle | CYCarea | CYCMean | CYCRms | CYCStddev | CYCCrest | CAMPlitude | CMAXimum | CMINimum | CPDelta | PULCnt | DELay | PHASe | BWIDth | EDGecount | SETup | HOLD | SHT | SHR | DTOTrigger | SLERising | SLEFalling

Jitter measurements
CCJitter | NCJitter | CCWidth | CCDutycycle | TIE | UINTerval | DRATe | SKWDelay | SKWPhase
Require option R&S MXO5-K12.

Measurements on waveform histograms
WCOunt | HSAMples | HPEak | PEAK | UPEakvalue | LPEakvalue | HMAXimum | HMINimum | MEDian | MAXMin | HMEan | HSTDdev | M1STddev | M2STddev | M3STddev | MKPositive | MKNegative

Measurements for serial protocols
F2F | T2F | F2T | FLDValue | MBITrate | SBITrate | BIDLe | GAP | FCNT | FEC | FER | CFER | RSERr
Require option R&S MXO5-K500.

Eye measurements
ERPercent | ERDB | EHEight | EWIDth | ETOP | EBASe | QFACtor | RMSNoise | SNRatio | DCDistortion | ERTime | EFTime | EBRate | EAMPlitude | PPJitter | STDJitter | RMSJitter | CPPercent
Require option R&S MXO5-K136.

Usage: Asynchronous command

Manual operation: See "Select measurements" on page 289

MEASurement<mg>:GATE <Gate>

Sets the gate of the indicated measurement. Enable a gate before you assign a measurement to it (`GATE<g>:ENABle` =`ON`).

The query returns 0, if no gate is assigned.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

Manual operation: See "Gate" on page 291

MEASurement<mg>:STATistics:RESet
MEASurement<mg>:CLEar

Deletes the results of the specified measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 290

MEASurement<mg>:DISPlay:RESults <ResultLines>

Enables the measurement annotations for the selected measurement. These annotations are, for example, periods, maximum and minimum values, relevant reference levels, and more.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<ResultLines> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display result lines" on page 291

MEASurement<mg>:DISPlay:REFLevel<rl>:LEVels <DisplayLevels>

Displays the reference levels of the indicated measurement.

Suffix:
<mg> 1 to 24, index of the measurement

<rl> Irrelevant, omit the suffix.
Reference level set is assigned to the measurement.

Parameters:
<DisplayLevels> OFF | ON
*RST: OFF

Usage: Asynchronous command

MEASurement<mg>:LABel <Label>

Adds a user-defined label to the measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 291

MEASurement<mg>:ENVSelect <EnvelopeCurve>

Relevant only for measurements on envelope waveforms. It selects the envelope to be used for measurement.

Prerequisites:

- `ACQuire:TYPE` is set to `ENVElope`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<EnvelopeCurve> MIN | MAX | BOTH

MIN
Measures on the lower envelope.

MAX
Measures on the upper envelope.

BOTH
The envelope is ignored, and the waveform is measured as usual.

*RST: BOTH

Usage: Asynchronous command

Manual operation: See "Envelope" on page 298

18.14.2 Settings for amplitude/time measurements

MEASurement<mg>:AMPTime:CSLope ... 1314
MEASurement<mg>:AMPTime:ESLope ... 1314
MEASurement<mg>:AMPTime:PTCount ... 1314
MEASurement<mg>:AMPTime:PSLope ... 1315
MEASurement<mg>:AMPTime:DELay<n>:DIRection ... 1315
MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe ... 1315
MEASurement<mg>:AMPTime:DELay<n>:SLOPe ... 1316
MEASurement<mg>:AMPTime:PHASe:UNIT ... 1316
MEASurement<mg>:REFLevel<rl>:REFerence ... 1316

MEASurement<mg>:AMPTime:CSLope <SetHoldClkSlp>

Sets the edge of the clock from which the setup and hold times are measured.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<SetHoldClkSlp> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock slope" on page 300

MEASurement<mg>:AMPTime:ESLope <EdgesSlope>

Sets the edge direction to be counted: rising edges, falling edges, or both. The setting is only relevant for edge count measurement `MEASurement<mg>:MAIN` is set to `EDGecount`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<EdgesSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Edges slope" on page 299

MEASurement<mg>:AMPTime:PTCount <PulseCount>

Sets the number of positive pulses for the pulse train measurement. It measures the duration of N positive pulses from the rising edge of the first pulse to the falling edge of the N-th pulse.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<PulseCount> Range: 1 to 2147483647
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Pulse count" on page 298

MEASurement<mg>:AMPTime:PSLope <PulsesSlope>

Sets the first slope of the pulses to be counted. The setting is only relevant for pulse count and pulse train measurements (`MEASurement<mg>:MAIN` is set to `PULCnt` or `PULSetrain`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<PulsesSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Pulse slope" on page 299

MEASurement<mg>:AMPTime:DELay<n>:DIRection <EdgeCountDir>

Selects the direction for counting slopes for each source: from the beginning of the waveform, or from the end.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1..2
Selects the source number.

Parameters:
<EdgeCountDir> FRFI | FRLA
`FRFI` - FRom FIrst, counting starts with the first edge of the waveform.
`FRLA` - FRom LAst, counting starts with the last edge of the waveform.
*RST: FRFI

Usage: Asynchronous command

Manual operation: See "Direction" on page 301

MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe <DlyTrigSlp>

Sets the edge direction to be used for delay measurement.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1..2
Selects the source number.

Parameters:
<DlyTrigSlp> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Delay to trigger measurement settings" on page 301

MEASurement<mg>:AMPTime:DELay<n>:SLOPe <Slope>

Sets the edge of each source, between which the delay is measured.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1..2
Selects the source number.

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 301

MEASurement<mg>:AMPTime:PHASe:UNIT <PhaseMode>

Selects the unit of the oase: degrees or radians.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<PhaseMode> DEGRees | RADians
*RST: DEGRees

Usage: Asynchronous command

Manual operation: See "Phase unit" on page 301

MEASurement<mg>:REFLevel<rl>:REFerence <RefLevSet>

Selects the set of reference levels that is used for the measurement and for the indicated measurement source. Each source of the measurement can have its own reference level set.

Suffix:
<mg> 1 to 24, index of the measurement

<rl> 1..2
Measurement source, to which the reference level set is applied. For most measurements, one source is needed. For delay measurements, for example, two measurement sources are required, and each source can have its own reference levels.

Parameters:

<RefLevSet> Number of the reference level set. Define the reference level set before you use it.

Example:

```
MEASurement1:MAIN DELay
MEASurement1:SOURce C1,C2
MEASurement1:REFLevel1:REFerence 1
MEASurement1:REFLevel2:REFerence 2
```

Measurement 1 is a delay measurement on channel 1 and channel 2. C1 is the first source and uses reference level set 1 (RL1). C2 is the second source and uses reference level set 2 (RL2).

Usage: Asynchronous command

Manual operation: See "Reference levels" on page 290

18.14.3 Settings for histogram measurements

MEASurement<mg>:HISTogram:PROBability:LIMit....1317
MEASurement<mg>:HISTogram:PROBability:TYPE....1317

MEASurement<mg>:HISTogram:PROBability:LIMit <Limit>

Defines a range around the probability marker.

The setting is relevant hor histogram measurements: `MEASurement<mg>:MAIN` on page 1311 is set to `MKPositive` or `MKNegative`.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<Limit>

Range: 0 to 100
Increment: 10
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Probability limit" on page 305

MEASurement<mg>:HISTogram:PROBability:TYPE <Marker>

Defines the marker position in the probability domain.

The setting is relevant hor histogram measurements: `MEASurement<mg>:MAIN` on page 1311 is set to `MKPositive` or `MKNegative`.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<Marker> PEAK | UPPK | LWPK | MAXimum | MINimum | MEDian | MEAN

PEAK
The y-value with the maximum sample value in the histogram

UPPK
Upper peak, the y-value at the maximum sample value in the upper half of the histogram

LWPK
Lower peak: the y-value at the maximum sample value in the lower half of the histogram

MAXimum
The highest y-value with a probability > 0

MINimum
The lowest y-value with a probability > 0

MEDian
The lowest y-value with a probability > 0

MEAN
The weighted arithmetic average of the histogram

*RST: PEAK

Usage: Asynchronous command

Manual operation: See "Marker" on page 305

18.14.4 Settings for jitter measurements

Jitter measurements require option R&S MXO5-K12.

MEASurement<mg>:JITTer:NCYCles....1318
MEASurement<mg>:JITTer:POLarity....1319
MEASurement<mg>:JITTer:REFLevel<rl>....1319
MEASurement<mg>:JITTer:RELPolarity....1320
MEASurement<mg>:JITTer:SLOPe....1320
MEASurement<mg>:JITTer:TREF....1321
MEASurement<mg>:JITTer:UNIT....1321

MEASurement<mg>:JITTer:NCYCles <NumberCycles>

Sets the number of periods (cycles) that are accumulated to measure the N-cycle jitter.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<NumberCycles> Range: 1 to 4294967295
Increment: 1
*RST: 2

Usage: Asynchronous command

Manual operation: See "Number of cycles" on page 309

MEASurement<mg>:JITTer:POLarity <Polarity>

For cycle-cycle width and the cycle-cycle duty cycle measurements, the command sets the polarity of pulses for which the pulse width is measured: POSitive or NEGative. `MEASurement<mg>:MAIN` is set to measurements CCWidth | CCDutycycle.

For skew delay and skew phase measurements, the command sets the edge of the first waveform from which the measurements starts: POSitive, NEGative or EITHer. `MEASurement<mg>:MAIN` is set to measurements SKWDelay | SKWPhase.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Polarity> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Pulse polarity" on page 308

MEASurement<mg>:JITTer:REFLevel<rl> <ReferenceLevel>

Selects the reference level that is used for the measurement and for the indicated measurement source. Each source of the measurement can have its own reference level .

Suffix:
<mg> 1 to 24, index of the measurement

<rl> 1..2
Measurement source, to which the reference level set is applied. For most measurements, one source is needed. For delay measurements, for example, two measurement sources are required, and each source can have its own reference levels.

Parameters:
<ReferenceLevel> UPPer | MIDDle | LOWer
*RST: MIDDle

Example:
```
MEASurement1:MAIN SKWDelay
MEASurement1:SOURce C1,C2
MEASurement1:JITTer:REFLevel1 MIDDle
MEASurement1:JITTer:REFLevel2 UPPer
```

Measurement 1 is a skew delay measurement on channel 1 and channel 2. C1 is the first source and uses the middle reference level. C2 is the second source and uses the upper reference level.

Usage: Asynchronous command

Manual operation: See "Reference level" on page 309

MEASurement<mg>:JITTer:RELPolarity <RelPolarity>

Sets the edge of the second waveform relative to the first waveform.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<RelPolarity> MATChing | INVerse

MATChing
Measures from positive to positive edge or from negative to negative edge.

INVerse
Measures from positive to negative edge or from negative to positive edge.

*RST: MATChing

Usage: Asynchronous command

Manual operation: See "Relative polarity" on page 309

MEASurement<mg>:JITTer:SLOPe <Slope>

For cycle-cycle jitter, N-cycle jitter, and cycle-cycle duty cycle measurements, the setting selects the slope at which the periods and thus the jitter is measured: FIRSt, POSitive, NEGative or EITHer. `MEASurement<mg>:MAIN` is set to measurements CCJitter | NCJitter | CCDutycycle.

For time-interval error measurements, the command sets the edges of the data signal that are used for measurements: POSitive, NEGative or EITHer. `MEASurement<mg>:MAIN` is set to TIE.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Slope> FIRSt | POSitive | NEGative | EITHer

*RST: FIRSt

<Slope> FIRSt | POSitive | NEGative | EITHer

FIRSt
Measures the period from the first edge that is found, no matter of its direction.

POSitive
Measures the period at positive going edges.

NEGative
Measures the period at negative going edges.

EITHer
Measures the period at both positive and negative going edges. This option is useful, for example, to check the clock stability of a double data rate clock.

*RST: FIRSt

Usage: Asynchronous command

Manual operation: See "Cycle begin, Slope" on page 308

MEASurement<mg>:JITTer:TREF <TimingReference>

Selects the timing reference, which is one of the available clock configurations. The timing reference must be defined before it can be used.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<TimingReference> Range: 1 to 4

Usage: Asynchronous command

Manual operation: See "Timing reference" on page 311

MEASurement<mg>:JITTer:UNIT <Unit>

Sets the unit for data rate measurements.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Unit> BIT_S | HZ
*RST: BIT_S

Usage: Asynchronous command

Manual operation: See "Unit" on page 311

18.14.5 Default settings for eye measurements

Measurement defaults are available for eye measurements, which require option R&S MXO5-K136.

MDEFaults:SETTings<m>:EYE:ALGorithm <MeasLevAlgorithm>

Selects the algorithm, which defines how to compute the top and base levels and the corresponding sigma values.

Suffix:
<m> 1 to 8, index of the default measurement configuration

Parameters:
<MeasLevAlgorithm> MEAN | PEAK | INNPeak | OUTPeak

MEAN
Mean value of the histogram. The Sigma value is the standard deviation of the histogram.

PEAK
Maximum peak of the histogram. Only values corresponding to this peak are used to compute sigma.

INNPeak
Inner peak of the histogram. Only values corresponding to this peak are used to compute sigma.

OUTPeak
Outer peak of the histogram. Only values corresponding to this peak are used to compute sigma.

*RST: MEAN

Usage: Asynchronous command

Manual operation: See "Algorithm" on page 314

MDEFaults:SETTings<m>:EYE:COUNt?

Returns the number of available default sets.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<Count> Number of default sets

Usage: Query only
Asynchronous command

MDEFaults:SETTings<m>:EYE:ENABle <Item>

Activates the specified set of default settings.

Suffix:
<m> 1 to 8, index of the default measurement configuration

Parameters:
<Item> OFF | ON

Usage: Asynchronous command

MDEFaults:SETTings<m>:EYE:RELative:STARt <MeasWindowStart>

Defines the global start time for the eye measurements.

Suffix:
<m> 1 to 8, index of the default measurement configuration

Parameters:

<MeasWindowStart> Start time of the window in % of the difference of the eye crossings. Tcrossing1 relates to 0 %, and Tcrossing2 relates to 100 %.

Range: 1 to 99
Increment: 1
*RST: 40
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 314

MDEFaults:SETTings<m>:EYE:RELative:STOP <RelTimeStpLevMeasWind>

Defines the global stop time for the eye measurements.

Suffix:

<m> 1 to 8, index of the default measurement configuration

Parameters:

<RelTimeStpLevMeasWind> Stop time of the window in % of the difference of the eye crossings. Tcrossing1 relates to 0 %, and Tcrossing2 relates to 100 %.

Range: 1 to 99
Increment: 1
*RST: 60
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 314

MDEFaults:SETTings<m>:EYE:THReshold <MeasLevThres>

Sets the threshold that is used to separate peaks. Two peaks are separated if they are split by a valley of height *Threshold * Maximal_histogram_value*.

Suffix:

<m> 1 to 8, index of the default measurement configuration

Parameters:

<MeasLevThres> Range: 1 to 99
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Threshold" on page 314

18.14.6 Settings for eye measurements

Eye measurements require option R&S MXO5-K136.

MEASurement<mg>:EYE:ABSolute:STARt <AbsoluteStart>

Sets the absolute start value for the selected algorithm for eye height and eye width measurements.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<AbsoluteStart>
Range: -1E+26 to 1E+26
Increment: 0.1
*RST: -2.5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Start, Stop (for eye height, eye width)" on page 317

MEASurement<mg>:EYE:ABSolute:STOP <AbsoluteStop>

Sets the absolute stop value for the selected algorithm for eye height and eye width measurements.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<AbsoluteStop>
Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 2.5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Start, Stop (for eye height, eye width)" on page 317

MEASurement<mg>:EYE:ALGorithm <Algorithm>

Selects the algorithm for the measurement of the eye height and eye width.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Algorithm> ACTHeight | MAXHeight | ACTWidth | AWMWindow | MAXWidth | TSIGma

TSIGma
Three sigma: The eye height is measured with the settings defined with MDEFaults:Settings:EYE commands.
The eye width is measured at the crossing level.

ACTHeight
The actual height is the vertical distance between the top and the bottom of the eye opening at the sampling point. The default window is 40% - 60% of the eye period. Specific start and stop values are used for calculation.

ACTWidth
The eye width is measured at the crossing level. Refers to "Crossing level" in the GUI.

MAXHeight
The maximum height is the theoretical maximum vertical distance between the highest possible 1 level and the lowest possible 0 level. The default measurement window is 40% - 60% of the eye period. Specific start and stop values are used for maximum calculation.

MAXWidth
The maximum width of an eye diagram is the maximum horizontal distance between the points where the ideal eye opening crosses the decision threshold level. Specific start and stop values are used for maximum calculation.

AWMWindow
The eye width is measured as the horizontal distance between the points where the eye opening crosses the threshold level. Specific start and stop values are used for calculation.

*RST: TSIGma

Usage: Asynchronous command

Manual operation: See "Algorithm (for eye height, eye width)" on page 316

MEASurement<mg>:EYE:DEFSettings <CommonDefaults>

Selects the default measurement configuration.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<CommonDefaults> Number of the default measurement configuration to be used.

Usage: Asynchronous command

Manual operation: See "Default settings" on page 313

MEASurement<mg>:EYE:LEVel <RelativeLevel>

Defines the relative level for the jitter measurements on eye diagrams if `MEASurement<mg>:EYE:USELevel` on page 1327 is ON. The setting also defines the level for duty cycle distortion measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:

<RelativeLevel>
Range: 1 to 99
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Level (jitter, duty cycle)" on page 317

MEASurement<mg>:EYE:MODE <Mode>

Selects between absolute and relative values for the eye measurement-specific start and stop values.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<Mode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Mode (for eye height, eye width)" on page 317

MEASurement<mg>:EYE:RELative:STARt <RelativeStart>

Sets the relative start value for the selected algorithm of eye height and eye width measurements.

For rise time and fall time eye measurements, the command sets the offset before the first eye crossing (local start level). Only values inside the specified horizontal range are considered for the measurements.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<RelativeStart> The value refers to one unit interval for rise and fall time measurements.
For eye width, the value refers to the eye top and base levels.
For eye height, the value refers to the eye crossings.
Range: 1 to 99
Increment: 1
*RST: 40
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop (eye height and width, rise/fall time)" on page 317

MEASurement<mg>:EYE:RELative:STOP <RelativeStop>

Sets the relative stop value for the selected algorithm of eye height and eye width measurements.

For rise time and fall time eye measurements, the command sets the offset after the first eye crossing (local stop level). Only values inside the specified horizontal range are considered for the measurements.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<RelativeStop> The value refers to one unit interval for rise and fall time measurements.
For eye width, the value refers to the eye top and base levels.
For eye height, the value refers to the eye crossings.

Range: 1 to 99
Increment: 1
*RST: 60
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop (eye height and width, rise/fall time)" on page 317

MEASurement<mg>:EYE:USELevel <UseLevel>

If ON, you can define a user-defined level for the jitter measurements on eye diagrams with `MEASurement<mg>:EYE:LEVel`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<UseLevel> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use level (jitter)" on page 317

18.14.7 Settings for protocol measurements

Protocol measurements require option R&S MXO5-K500, and at least one serial protocol option.

MEASurement<mg>:PROTocol:FNAMe....1328
MEASurement<mg>:PROTocol:FDName....1328
MEASurement<mg>:PROTocol:FDValue....1328

MEASurement<mg>:PROTocol:F2Name 1328
MEASurement<mg>:PROTocol:FD2Name 1329
MEASurement<mg>:PROTocol:FD2Value 1329

MEASurement<mg>:PROTocol:FNAMe <FrameName>

Sets or queries the name of the frame or the frame type, at which the oscilloscope executes or starts the measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<FrameName>

Usage: Asynchronous command

Manual operation: See "Frame Type" on page 321

MEASurement<mg>:PROTocol:FDName <FieldName>

Sets or queries the name of the field or the field type, at which the oscilloscope executes or starts the measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<FieldName>

Usage: Asynchronous command

Manual operation: See "Field Type" on page 321

MEASurement<mg>:PROTocol:FDValue <FieldValue>

Sets or queries the one or more values of the field, at which the oscilloscope executes or starts the measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<FieldValue> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Field Value" on page 321

MEASurement<mg>:PROTocol:F2Name <Frame2Name>

Sets or queries the name of the frame or the frame type, at which the oscilloscope ends the measurement in a "From" - "To" condition.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Frame2Name>

Usage: Asynchronous command

Manual operation: See "Frame Type" on page 321

MEASurement<mg>:PROTocol:FD2Name <Field2Name>

Sets or queries the name of the field or the field type, at which the oscilloscope ends the measurement in a "From" - "To" condition.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Field2Name>

Usage: Asynchronous command

Manual operation: See "Field Type" on page 321

MEASurement<mg>:PROTocol:FD2Value <Field2Value>

Sets or queries the one or more values of the field, at which the oscilloscope ends the measurement in a "From" - "To" condition.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Field2Value> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Field Value" on page 321

18.14.8 Results

MEASurement<mg>:RESult[:ACTual]?....1330
MEASurement<mg>:RESult:AVG?....1330
MEASurement<mg>:RESult:EVTCount?....1330
MEASurement<mg>:RESult:NPEak?....1330
MEASurement<mg>:RESult:PPEak?....1330
MEASurement<mg>:RESult:RMS?....1330
MEASurement<mg>:RESult:WFMCount?....1330
MEASurement<mg>:RESult:RSTDdev?....1330
MEASurement<mg>:RESult:STDDev?....1330
MEASurement<mg>:RESult:EVENts:COUNt?....1330
MEASurement<mg>:RESult:EVENts:STARt?....1331

MEASurement<mg>:RESult:EVENts:STOP? 1331
MEASurement<mg>:RESult:EVENts:VALue? 1331
MEASurement<mg>:RESult:LINes? 1332
MEASurement<mg>:RESult:STARt? 1332
MEASurement<mg>:RESult:STOP? 1332

MEASurement<mg>:RESult[:ACTual]?
MEASurement<mg>:RESult:AVG?
MEASurement<mg>:RESult:EVTCount?
MEASurement<mg>:RESult:NPEak?
MEASurement<mg>:RESult:PPEak?
MEASurement<mg>:RESult:RMS?
MEASurement<mg>:RESult:WFMCount?
MEASurement<mg>:RESult:RSTDdev?
MEASurement<mg>:RESult:STDDev?

Return the statistic results of the specified measurement. The measurement type is defined with `MEASurement<mg>:MAIN`.

- [:ACTual]: current measurement result
- AVG: arithmetic mean of the measurement results
- EVTCount: number of measurement results in the measurement
- NPEak: negative peak value of the measurement results
- PPEak: positive peak value of the measurement results
- RMS: RMS value of the measurement results
- STDDev: standard deviation of the measurement results
- RSTDdev: relative standard deviation (*STDDev / AVG*)
- WFMCount: number of measured waveforms

Suffix:
<mg> 1 to 24, index of the measurement

Return values:
<Result> Numeric result value

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:EVENts:COUNt?

Returns the number of measured events in one acquisition.

The command is relevant for measurements of all events, see `MEASurement<mg>:MULTiple`.

Suffix:
<mg> 1 to 24, index of the measurement

Return values:
<Count> Number of events

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:EVENts:STARt? <EventIndex>

Returns the start time of the indicated measured event.

The command is relevant for measurements of all events, see `MEASurement<mg>:MULTiple`.

Suffix:
<mg> 1 to 24, index of the measurement

Setting parameters:
<EventIndex> Index number of the measured event.

Return values:
<EventStart> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:EVENts:STOP? <EventIndex>

Returns the end time of the indicated measured event.

The command is relevant for measurements of all events, see `MEASurement<mg>:MULTiple`.

Suffix:
<mg> 1 to 24, index of the measurement

Setting parameters:
<EventIndex> Index number of the measured event.

Return values:
<EventStop> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:EVENts:VALue? <MeasResEvtIdx>

Returns the measured value of the indicated measured event.

The command is relevant for measurements of all events, see `MEASurement<mg>:MULTiple`.

Suffix:
<mg> 1 to 24, index of the measurement

Setting parameters:

<EventIndex> Index number of the measured event.

Return values:

<EventValue> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:LINes?

Returns the positions of the result lines for the specified measurement.

Suffix:

<mg> 1 to 24, index of the measurement

Example: Result line information for an amplitude measurement on measurement 2, the horizontal and vertical values of the result line positions:

```
:MEASurement2:RESult:LINes?
{
 "data" : {
  "Ch1Wfm1" : [
   {
    "Start" : -1.0000000000000001e-07,
    "Stop" : 1.0000000000000001e-07,
    "High" : {
      "Start" : [ -1.0000000000000001e-07, 0.29913818836212158 ],
      "Stop" : [ 1.0000000000000001e-07, 0.29913818836212158 ]
    },
    "Low" : {
      "Start" : [ -1.0000000000000001e-07, -0.30011576414108276 ],
      "Stop" : [ 1.0000000000000001e-07, -0.30011576414108276 ]
```

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:STARt?
MEASurement<mg>:RESult:STOP?

Return the start and stop times of the specified measurement. The parameter defines the measurement. If no parameter is specified, the result of the main measurement is returned. The main measurement is defined using `MEASurement<mg>:MAIN`.

Suffix:

<mg> 1 to 24, index of the measurement

Return values:

<Stop> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

18.14.9 Statistics

MEASurement<mg>:STATistics:ARESet....1333
MEASurement<mg>:STATistics[:ENABle]....1333
MEASurement<mg>:MULTiple....1333
MEASurement<mg>:MNOMeas....1334

MEASurement<mg>:STATistics:ARESet

Resets the statistics for all measurements.

Suffix:
<mg> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 325

MEASurement<mg>:STATistics[:ENABle] <GlobalEnable>

Enables statistics calculation for all measurements.

Suffix:
<mg> Irrelevant, omit the suffix.

Parameters:
<GlobalEnable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Statistics" on page 324

MEASurement<mg>:MULTiple <GlobalMeassAll>

If ON, the measurement is performed repeatedly if the measured parameter occurs several times inside the acquisition or defined gate. All results are included in evaluation, e.g. in statistics. To set the number of results to be considered, use `MEASurement<mg>:MNOMeas`.

Suffix:
<mg> Irrelevant, omit the suffix.

Parameters:
<GlobalMeassAll> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measure all events" on page 325

MEASurement<mg>:MNOMeas <MaxMeasPerAcq>

Sets the maximum number of measurements per acquisition if `MEASurement<mg>:MULTiple` is on. The setting affects all measurements.

Suffix:
<mg> Irrelevant, omit the suffix.

Parameters:
<MaxMeasPerAcq> Range: 2 to 1E6
Increment: 1
*RST: 1E6

Usage: Asynchronous command

Manual operation: See "Max. No. of events" on page 325

18.14.10 Tracks

MEASurement<mg>:TRACk[:STATe] 1334
MEASurement<mg>:TRACk:AUTO 1334
MEASurement<mg>:TRACk:CONTiunous 1335
MEASurement<mg>:TRACk:OFFSet 1335
MEASurement<mg>:TRACk:SCALe 1335
MEASurement<mg>:TRACk:DATA:HEADer? 1336
MEASurement<mg>:TRACk:DATA[:VALues]? 1336

MEASurement<mg>:TRACk[:STATe] <State>

Enables or disables the track for the selected measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 326

MEASurement<mg>:TRACk:AUTO

Sets the vertical scale and the offset of the track, so that the complete height of the diagram is used.

Suffix:
<mg> 1 to 24, index of the measurement

Usage: Event
Asynchronous command

Manual operation: See "Fit to screen" on page 327

MEASurement<mg>:TRACk:CONTiunous <AutoScale>

Performs an automatic scaling whenever the track does not fit in the diagram during the measurement period.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<AutoScale> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto scale" on page 327

MEASurement<mg>:TRACk:OFFSet <VerticalOffset>

Sets or queries the offset of the track waveform.

If `MEASurement<mg>:TRACk:CONTiunous` is ON, use the command to query the current value.

If `MEASurement<mg>:TRACk:CONTiunous` is OFF, the command sets the offset.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<VerticalOffset> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Meas offset" on page 327

MEASurement<mg>:TRACk:SCALe <VerticalScale>

Sets or queries the vertical scale of the track diagram.

If `MEASurement<mg>:TRACk:CONTiunous` is ON, use the command to query the current value.

If `MEASurement<mg>:TRACk:CONTiunous` is OFF, the command sets the scale.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:

<VerticalScale>
Range: 1E-26 to 1E+26
Increment: 1E-05
*RST: 0.5
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Meas scale" on page 327

MEASurement<mg>:TRACk:DATA:HEADer?

Returns the header of track data, the attributes of the waveform.

Suffix:

<mg> 1 to 24, index of the measurement

Return values:

<XStart> 1. header value: time of the first track value in s

<XStop> 2. header value: time of the last track value in s

<RecordLength> 3. header value: number of measured events = number of points in the track waveform

<ValuesPerSample> 4. header value: number of values per sample. For tracks, the result is always 1.

Example:

```
MEAS1:TRAC:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```

Start time of the data is -1E-07 = -100 ns, and end time of the data is 9.980000000000001E-08= 99.8 ns. The data stream has 1000 values with one value per sample, inn other words, the track waveform has 1000 points.

Usage: Query only
Asynchronous command

MEASurement<mg>:TRACk:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the indicated track waveform for transmission from the instrument to the controlling computer. The data can be used in MATLAB®, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

Suffix:

<mg> 1 to 24, index of the measurement

Query parameters:

<Offset> Number of offset track points, which are ignored in the data transfer.

[<Length>] Number of track points to be retrieved.

Return values:
<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

18.14.11 Histograms on measurement results

To transfer the histogram data to a remote computer, use:

- `EXPort:HMEasurement<m>:DATA:HEADer?` on page 1306
- `EXPort:HMEasurement<m>:DATA[:VALues]?` on page 1307

For export of histogram data to file, see Section 18.13.5, "Histogram data: export to file", on page 1289.

MEASurement<mg>:STATistics:HISTogram:AUToscale....1337
MEASurement<mg>:STATistics:HISTogram[:ENABle]....1337
MEASurement<mg>:STATistics:HISTogram:HBINs....1338
MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet....1338
MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe....1338
MEASurement<mg>:STATistics:HISTogram:RESet....1339

MEASurement<mg>:STATistics:HISTogram:AUToscale <AutoScaleMode>

If ON, the range on the x-axis is continuously adjusted to the measured values. If OFF, you can set the offset and the scale of the histogram with `MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet` and `MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<AutoScaleMode> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto scale" on page 332

MEASurement<mg>:STATistics:HISTogram[:ENABle] <State>

Enables the histogram for the specified measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 332

MEASurement<mg>:STATistics:HISTogram:HBINs <NrBinsUser>

Sets the number of bins to be displayed in the histogram of the specified measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<NrBinsUser>
Range: Possible values: 10, 25, 50, 100, 250, 500, 1000, 2000
*RST: 250

Usage: Asynchronous command

Manual operation: See "Number of bins" on page 332

MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet <Center>

Sets the center value of the histogram on the x-axis, which is the measurement result in the middle of the histogram.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Center>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: Specify the unit with the value.

Example:
```
MEASurement:STATistics:HISTogram:HORizontal:OFFSet 3mV
```

Usage: Asynchronous command

Manual operation: See "Offset" on page 332

MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe <Scale>

Sets the horizontal scale of the histogram.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Scale>
Range: 0 to INF
Increment: 0.1
*RST: 1
Default unit: Specify the unit with the value.

Usage: Asynchronous command

Manual operation: See "Scale" on page 333

MEASurement<mg>:STATistics:HISTogram:RESet

Resets the cumulation of measurement results, all bins are set to zero.

Suffix:
<mg> 1 to 24, index of the measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Reset" on page 332

18.14.12 Limit checks

18.14.12.1 Limit settings

MEASurement<mg>:LIMits[:STATe] 1339
MEASurement<mg>:LIMits:CHECk<n>[:ENABle] 1339
MEASurement<mg>:LIMits:CHECk<n>:CONDition 1340
MEASurement<mg>:LIMits:CHECk<n>:CVALue 1340
MEASurement<mg>:LIMits:CHECk<n>:LOWer 1341
MEASurement<mg>:LIMits:CHECk<n>:UPPer 1341

MEASurement<mg>:LIMits[:STATe] <State>

Activates the limit checks on the selected measurement.

Make sure to activate also the required limit check zone with `MEASurement<mg>:LIMits:CHECk<n>[:ENABle]`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 336

MEASurement<mg>:LIMits:CHECk<n>[:ENABle] <State>

Activates the specified limit check zone. You can activate LC1 or LC2 or both.

Make sure to activate also the limit checks for the measurement with `MEASurement<mg>:LIMits[:STATe]`.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Range state" on page 336

MEASurement<mg>:LIMits:CHECk<n>:CONDition <Condition>

Sets the limit range for the measurement values, in combination with the upper and lower limit values.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Parameters:
<Condition> INSide | GTHan | LTHan | OUTSide

INSide: measurement values must stay in between the upper and lower limit values.
OUTSide: measurement values must stay above the upper limit value, or below the lower limit value.
GTHan: measurement values must stay above the upper limit value.
LTHan: measurement values must stay below the lower limit value.

*RST: INSide

Usage: Asynchronous command

Manual operation: See "Condition" on page 337

MEASurement<mg>:LIMits:CHECk<n>:CVALue

Sets the upper and lower limit automatically. The function uses the most recent measurement result and adds some distance to it to get the limits.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Usage: Setting only
Asynchronous command

Manual operation: See "Copy from recent result" on page 337

MEASurement<mg>:LIMits:CHECk<n>:LOWer <LowerLimit>

Sets the lower limit value for the specified measurement and limit check setup.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Parameters:
<LowerLimit> Range: -100 to 100
Increment: 1E-05
*RST: 0

Usage: Asynchronous command

Manual operation: See "Lower limit" on page 337

MEASurement<mg>:LIMits:CHECk<n>:UPPer <UpperLimit>

Sets the upper limit value for the specified measurement and limit check setup.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Parameters:
<UpperLimit> Range: -100 to 100
Increment: 1E-05
*RST: 0

Usage: Asynchronous command

Manual operation: See "Upper limit" on page 337

18.14.12.2 Results

MEASurement<mg>:LIMits:RESet 1341
MEASurement<mg>:LIMits:CHECk<n>:RESult:CRESult? 1342
MEASurement<mg>:LIMits:CHECk<n>:RESult[:RESult]? 1342
MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:FRATe? 1342
MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:FWAVeforms? 1343
MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:PWAVeforms? 1343
MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:WAVeforms? 1343
MEASurement<mg>:LIMits:CRESult? 1344
MEASurement<mg>:LIMits:RESult? 1344

MEASurement<mg>:LIMits:RESet

Deletes all limit check results of the specified measurement. If acquisition is running, the check restarts immediately. Measurement results and statistics are not affected.

Suffix:
<mg> 1 to 24, index of the measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 336

MEASurement<mg>:LIMits:CHECk<n>:RESult:CRESult?

Returns the current result of the specified limit range: pass or fail.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Return values:
<Result> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

MEASurement<mg>:LIMits:CHECk<n>:RESult[:RESult]?

Returns the overall status of the specified limit range since the last limit check reset: pass or fail.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Return values:
<ResultSinceReset> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:FRATe?

Returns the fail rate = failed acquisitions / total acquisitions.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Return values:

<FailRate> Range: 0 to 100
Increment: 1E-09
*RST: 0
Default unit: %

Usage: Query only
Asynchronous command

MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:FWAVeforms?

Returns the number of failed acquistions that violated the measurement limits.

Suffix:

<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Return values:

<FailedAcqs> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:PWAVeforms?

Returns the number of acquistions that passed the limit check.

Suffix:

<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Return values:

<PassedAcqs> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:WAVeforms?

Returns the number of total measured acquisitions.

Suffix:

<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Return values:
<TotalAcqs> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:LIMits:CRESult?

Returns the current combined result of all limit ranges.

Suffix:
<mg> 1 to 24, index of the measurement

Return values:
<SumResult> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

MEASurement<mg>:LIMits:RESult?

Returns the combined result of all limit ranges since the last limit check reset.

Suffix:
<mg> 1 to 24, index of the measurement

Return values:
<SumResSinceRst> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

18.14.12.3 Actions on limit checks

MEASurement<mg>:LIMits:CHECk<n>:ONViolation:BEEP 1344
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:SCReenshot 1345
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:SRESults 1345
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:STOP 1345
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:TRIGgerout 1346
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:WFMS 1346

MEASurement<mg>:LIMits:CHECk<n>:ONViolation:BEEP <Beep>

Generates a beep sound at each limit violation or on successful completion of the limit check.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Parameters:
<Beep> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Beep" on page 338

MEASurement<mg>:LIMits:CHECk<n>:ONViolation:SCReenshot
<SaveScreenshot>

Suffix:
<mg> *

<n> *

Parameters:
<SaveScreenshot> NOACtion | SUCCess | VIOLation | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Screenshot" on page 339

MEASurement<mg>:LIMits:CHECk<n>:ONViolation:SRESults <SaveResults>

Saves the selected result to file at each limit violation or on successful completion of the limit check.

To define the path and file names, use the EXPort:RESult:AUTonaming:* commands:

- `EXPort:RESult:AUTonaming:NAME` on page 1293
- `EXPort:RESult:AUTonaming:PATH` on page 1293
- `EXPort:RESult:AUTonaming:TYPE` on page 1293

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1 | 2, index of the limit range

Parameters:
<SaveResults> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save results" on page 338

MEASurement<mg>:LIMits:CHECk<n>:ONViolation:STOP <StopAcq>

Stops the acquisition when a limit violation occurs.

Suffix:
<mg> 1 to 24, index of the measurement
<n> 1 | 2, index of the limit range

Parameters:
<StopAcq> NOACtion | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 338

MEASurement<mg>:LIMits:CHECk<n>:ONViolation:TRIGgerout <TrigOutPls>

Sends an outgoing pulse to the [Trigger Out] connector if the command is set to `SUCCess` or `VIOLation`.

To configure the pulse, use the following commands:

- `TRIGger:ACTions:OUT:SOURce` on page 1214
- `TRIGger:ACTions:OUT:POLarity` on page 1215
- `TRIGger:ACTions:OUT:DELay` on page 1214
- `TRIGger:ACTions:OUT:PLENgth` on page 1214

Suffix:
<mg> 1 to 24, index of the measurement
<n> 1 | 2, index of the limit range

Parameters:
<TrigOutPls> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

MEASurement<mg>:LIMits:CHECk<n>:ONViolation:WFMS <SaveWfm>

Saves the waveform data to file at each limit violation or on successful completion of the limit check.

To define the path and file names, use the EXPort:WAVeform:AUTonaming:* commands:

- `EXPort:WAVeform:AUTonaming:NAME` on page 1285
- `EXPort:WAVeform:AUTonaming:PATH` on page 1286
- `EXPort:WAVeform:AUTonaming:TYPE` on page 1286

Suffix:
<mg> 1 to 24, index of the measurement
<n> 1 | 2, index of the limit range

Parameters:

<SaveWfm> NOACtion | SUCCess | VIOLation

*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save wfm" on page 338

18.15 Cursor measurements

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- Cursor setup....1347
- Cursor results....1356
- Peak search using cursors....1358
- Cursor appearance....1360

18.15.1 Cursor setup

CURSor<cu>:AOFF....1348
CURSor<cu>:COUNt?....1348
CURSor<cu>:STATe....1348
CURSor<cu>:FUNCtion....1348
CURSor<cu>:SMODe....1349
CURSor<cu>:SOURce....1349
CURSor<cu>:USSource....1350
CURSor<cu>:SSOurce....1351
CURSor<cu>:X1Position....1351
CURSor<cu>:X2Position....1351
CURSor<cu>:Y1Position....1351
CURSor<cu>:Y2Position....1352
CURSor<cu>:SSCReen....1353
CURSor<cu>:TRACking[:STATe]....1353
CURSor<cu>:LABel....1353
CURSor<cu>:HORizontal<n>:LABel....1354
CURSor<cu>:VERTical<n>:LABel....1354
CURSor<cu>:DISPlay:VALues....1354
CURSor<cu>:SIAD....1355
CURSor<cu>:XCOupling....1355

CURSor<cu>:YCOupling 1355
CURSor<cu>:X1ENvelope 1356
CURSor<cu>:X2ENvelope 1356

CURSor<cu>:AOFF

Switches all cursors off.

Suffix:
<cu> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

CURSor<cu>:COUNt?

Returns the maximum number of cursor sets, which is the maximum value for the cursor suffix.

Suffix:
<cu> Irrelevant, omit the suffix.

Return values:
<Count> Maximum number of cursor sets

Usage: Query only
Asynchronous command

CURSor<cu>:STATe <State>

Enables the selected cursor measurement.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show cursor" on page 277

CURSor<cu>:FUNCtion <Type>

Defines the cursor type to be used for the measurement.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Type> VERTical | HORizontal | PAIRed

HORizontal
A pair of horizontal cursor lines. Not available for measurements on multiple sources.

VERTical
A pair of vertical cursor lines. Not available for measurements on multiple sources.

PAIRed
Both vertical and horizontal cursor line pairs.

*RST: PAIRed

Usage: Asynchronous command

Manual operation: See "Type" on page 278

CURSor<cu>:SMODe <SourceMode>

Selects the number of sources that you want to measure.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<SourceMode> SINGle | SECond | MSOurce

SINGle
The cursor lines are set on one waveform. Select the source with `CURSor<cu>:SOURce`.

SECond
The cursor lines are set on two waveforms. To set the second souce, use `CURSor<cu>:SSOurce`.

MSOurce
Multiple waveforms are selected to be measured with one cursor set. Activates `CURSor<cu>:TRACking[:STATe]` and sets `CURSor<cu>:FUNCtion` to PAIRed. Select the sources with `CURSor<cu>:SOURce`.

*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Source mode" on page 278

CURSor<cu>:SOURce <Signal>

Selects the cursor source or multiple sources, which are the waveforms to be measured. The query returns the waveforms sorted by category and number.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Signal> One source, or comma-separated list of waveforms:
C1,C2,...,C8: analog channels

D0,D1,D2,...,D15: digital channels
M1,M2,M3,M4,M5: math waveforms
R1,R2,R3,R4: reference waveforms
SPECMAXH1,SPECMINH1,SPECNORM1,SPECAVER1,SPECMAXH2,SPECMINH2,SPECNORM2,SPECAVER2,SPECMAXH3,SPECMINH3,SPECNORM3,SPECAVER3,SPECMAXH4,SPECMINH4,SPECNORM4,SPECAVER4: spectrum traces
TRK1,TRK2,TRK3, ...,TRK24: tracks
PBUS1,PBUS2,PBUS3,PBUS4: parallel buses
XY1,XY2,XY3,XY4: xy plots
HMEas1 | HMEas2 | HMEas3 | ... | HMEas24: histograms on measurement results
O<n>C1,O<n>C2, ... ,O<n>C8 (<n> = 2 to 11): ScopeSync waveforms, retrieved from connected oscilloscopes
EYE1 | EYE2 | ... | EYE8: eyes with option R&S MXO5-K136
Power waveforms of power analysis measurements with option R&S MXO5-K31.
Power waveforms of 3-phase power analysis measurements with option R&S MXO5-K333.
Mechanical tracks of motor drive analysis with option R&S MXO5-K360.
All waveforms are listed in Section 18.4.1, "Waveform parameter", on page 1082.

Example: `CURSor:SOURce C1`
Sets channel 1 as cursor source and changes `CURSor<cu>:SMODe` to SINGle if MSOurce was set before.

Example:
```
CURSor:SOURce C1,M1,C3
CURSor:SOURce? --> C1,C3,M1
```
Sets channel 1, 3 and math 1 as cursor sources and changes `CURSor<cu>:SMODe` to MSOurce if SINGle was set before.
Activates `CURSor<cu>:TRACking[:STATe]` for the specified cursor set.

Usage: Asynchronous command

Manual operation: See "Source" on page 278

CURSor<cu>:USSource <UseSource2>

Enables the second cursor source. To select the second source, use `CURSor<cu>:SSOurce`.

The command has the same effect as `CURSor<cu>:SMODe SECond`.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<UseSource2> OFF | ON

Usage: Asynchronous command

CURSor<cu>:SSOurce <Source2>

Selects the second cursor source.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Source2> One of the possible cursor sources, see `CURSor<cu>:SOURce`.

Usage: Asynchronous command

Manual operation: See "Source 2" on page 278

CURSor<cu>:X1Position <X1Position>

Defines the position of the left vertical cursor line.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<X1Position>
Range: -1E+26 to 1E+26
Increment: 0.1
*RST: depends on time scale, at 25% of the time axis
Default unit: s

Usage: Asynchronous command

Manual operation: See "X1 position, X2 position" on page 279

CURSor<cu>:X2Position <X2Position>

Defines the position of the right vertical cursor line.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<X2Position>
Range: -1E+26 to 1E+26
Increment: 0.1
*RST: depends on time scale, at 75% of the time axis
Default unit: s

Usage: Asynchronous command

Manual operation: See "X1 position, X2 position" on page 279

CURSor<cu>:Y1Position [<Signal>]

The command usage depends on the setting of `CURSor<cu>:SMODe`.

In single source and second source mode, the command sets or queries the position of the lower horizontal cursor line. The <Signal> parameter is irrelevant. If `CURSor<cu>:TRACking[:STATe]` is enabled, the Y-positions are set automatically, and the query returns the measurement result.

In multiple source mode, tracking is always on. The command is used as query only, and you specify the signal for which you want to get the value.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Value> Y-position of the first horizontal cursor line.

Query parameters:
<Signal> Only relevant for `CURSor<cu>:SMODe MSource`. One of the sources that are specified with `CURSor<cu>:SOURce`.

Example:
```
CURSor2:SMODe SINGle
CURSor2:FUNCtion PAIRed
CURSor2:TRACking ON
CURSor2:Y1Position?
--> 0.123859
```

In single source mode with active tracking, the command returns the Y-value.

Example:
```
CURSor:SMODe SINGle
CURSor:FUNCtion PAIRed
CURSor:TRACking OFF
CURSor:Y1Position 0.15
```

In single source mode with disabled tracking, the command sets the Y-value.

Example:
```
CURSor2:SMODe MSOurce
CURSor2:Y1Position? C1
--> 0.123859
```

In multiple source mode, tracking is always active. The command returns the Y-value for the specified source.

Usage: Asynchronous command

Manual operation: See "Y1 position, Y2 position" on page 279

CURSor<cu>:Y2Position [<Signal>]

Defines or queries the position of the upper horizontal cursor line. The command works in the same way as `CURSor<cu>:Y1Position`.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Value> Y-position of the second horizontal cursor line.

Query parameters:
<Signal> Only relevant for `CURSor<cu>:SMODe MSource`. One of the sources that are specified with `CURSor<cu>:SOURce`.

Usage: Asynchronous command

Manual operation: See "Y1 position, Y2 position" on page 279

CURSor<cu>:SSCReen

Resets the cursors to their initial positions. Reset is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Setting only
Asynchronous command

Manual operation: See "Place on display" on page 280

CURSor<cu>:TRACking[:STATe] <TrackCurve>

If enabled, the horizontal cursor lines follow the waveform. The function is available if both horizontal and vertical cursors are displayed (`CURSor<cu>:FUNCtion PAIRed`).

The function is not available for measurements on eyes (R&S MXO5-K136).

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<TrackCurve> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Track waveform" on page 279

CURSor<cu>:LABel <ShowLabel>

Shows the cursor labels in the diagram.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<ShowLabel> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show label" on page 281

CURSor<cu>:HORizontal<n>:LABel <Label>

Defines the label to be displayed with the horizontal cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Suffix:
<cu> 1 to 4, index of the cursor set

<n> 1..2
Number of the cursor line

Parameters:
<Label> String with the cursor label

Example:
```
CURSor1:HORizontal1:LABel 'Cu1H1'
CURSor1:HORizontal2:LABel "Cu1H2"
```

Usage: Asynchronous command

Manual operation: See "Horizontal cursor 1, Horizontal cursor 2" on page 281

CURSor<cu>:VERTical<n>:LABel <Label>

Defines the label to be displayed with the vertical cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Suffix:
<cu> 1 to 4, index of the cursor set

<n> 1..2
Number of the cursor line

Parameters:
<Label> String with the cursor label

Example:
```
CURSor2:VERTical1:LABel 'Cu2V1'
CURSor2:VERTical2:LABel "Cu2V2"
```

Usage: Asynchronous command

Manual operation: See "Vertical cursor 1, Vertical cursor 2" on page 281

CURSor<cu>:DISPlay:VALues <AddValuesLabel>

Shows the measured values in the cursor labels.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<AddValuesLabel> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show values" on page 281

CURSor<cu>:SIAD <ShwInAllDiags>

Shows the enabled cursor measurements in all active diagrams of the time domain.

In the spectrum domain, the setting is disabled. The cursors are shown only on the source spectrum of the measurement.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<ShwInAllDiags> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Show in all diagrams" on page 280

CURSor<cu>:XCOupling <Coupling>

Defines the positioning mode of the vertical cursor.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Coupling> OFF | ON

ON
Moving one cursor line moves the other cursor line too. The cursor lines always remain a fixed distance.

OFF
Each cursor line is positioned independently.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "X, Y" on page 280

CURSor<cu>:YCOupling <Coupling>

Defines the positioning mode of the horizontal cursor. If the horizontal cursor lines track the waveform, the y coupling is irrelevant (`CURSor<cu>:TRACking[:STATe]` is `ON`).

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Coupling> OFF | ON

ON
Moving one cursor line moves the other cursor line too. The cursor lines always remain a fixed distance.

OFF
Each cursor line is positioned independently.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "X, Y" on page 280

CURSor<cu>:X1ENvelope <EnvelopeSelect>
CURSor<cu>:X2ENvelope <EnvelopeSelect>

Define which horizontal cursor is positioned to the maximum and which to the minimum envelope values.

Prerequisites:

- `ACQuire:TYPE` is set to `ENVElope` or `PDETect`.
- `CURSor<cu>:TRACking[:STATe]` is set to `ON`.
- `CURSor<cu>:FUNCtion` is set to `PAIRed`.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<EnvelopeSelect> MIN | MAX

MIN
The horizontal cursor is set to the crossing point of the vertical cursor with the minimum waveform envelope.

MAX
The horizontal cursor is set to the crossing point of the vertical cursor with the maximum waveform envelope.

*RST: MAX

Usage: Asynchronous command

Manual operation: See "Envelope 1, Envelope 2" on page 279

18.15.2 Cursor results

CURSor<cu>:XDELta[:VALue]?....1356
CURSor<cu>:XDELta:INVerse?....1357
CURSor<cu>:YDELta:SLOPe?....1357
CURSor<cu>:YDELta[:VALue]?....1357

CURSor<cu>:XDELta[:VALue]?

Queries the delta value (distance) of two vertical cursor lines.

Suffix:
<cu> 1 to 4, index of the cursor set

Return values:

<Delta> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

CURSor<cu>:XDELta:INVerse?

Queries the inverse value of the delta value (distance) of the two vertical cursor lines.

Suffix:

<cu> 1 to 4, index of the cursor set

Return values:

<DeltaInverse> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: Hz

Usage: Query only
Asynchronous command

CURSor<cu>:YDELta:SLOPe? [<SignalValue>]

Returns the inverse value of the voltage difference, the reciprocal of the vertical distance of two horizontal cursor lines: *1/ΔV*.

In multiple source mode, specify the signal for which you want to get the value.

Suffix:

<cu> 1 to 4, index of the cursor set

Query parameters:

<Signal> Only relevant for `CURSor<cu>:SMODe MSource`. One of the sources that are specified with `CURSor<cu>:SOURce`.

Return values:

<Value> Inverse value of the delta value of the two cursor lines.

Usage: Query only
Asynchronous command

CURSor<cu>:YDELta[:VALue]? [<SignalValue>]

Returns the delta value (distance) of the two horizontal cursor lines.

In multiple source mode, specify the signal for which you want to get the value.

Suffix:

<cu> 1 to 4, index of the cursor set

Query parameters:

<Signal> Only relevant for `CURSor<cu>:SMODe MSource`. One of the sources that are specified with `CURSor<cu>:SOURce`.

Return values:

<Value> Inverse value of the delta value of the two horizontal cursor lines.

Usage: Query only
Asynchronous command

18.15.3 Peak search using cursors

CURSor<cu>:FFT:SETCenter....1358
CURSor<cu>:FFT:TOCenter....1358
CURSor<cu>:MAXimum[:PEAK]....1358
CURSor<cu>:MAXimum:LEFT....1359
CURSor<cu>:MAXimum:RIGHt....1359
CURSor<cu>:MAXimum:NEXT....1359
CURSor<cu>:PEXCursion....1359

CURSor<cu>:FFT:SETCenter

Sets the center frequency to the frequency value that is measured at cursor line Cu1.

Suffix:

<cu> 1 to 4, index of the cursor set

Usage: Setting only
Asynchronous command

Manual operation: See "Set center frequency to" on page 282

CURSor<cu>:FFT:TOCenter

Sets the vertical cursor line Cu1 to the center frequency.

Suffix:

<cu> 1 to 4, index of the cursor set

Usage: Setting only
Asynchronous command

Manual operation: See "Center frequency" on page 282

CURSor<cu>:MAXimum[:PEAK]

Sets both cursors to the absolute peak value.

Suffix:

<cu> 1 to 4, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See "Absolute peak" on page 282

CURSor<cu>:MAXimum:LEFT

Cursor 2 is set to the next peak to the left of the current position.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See "Next peak left" on page 282

CURSor<cu>:MAXimum:RIGHt

Cursor 2 is set to the next peak to the right of the current position.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See "Next peak right" on page 282

CURSor<cu>:MAXimum:NEXT

Cursor 2 is set to the next smaller absolute peak from the current position.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See "Next peak" on page 282

CURSor<cu>:PEXCursion <Value>

Sets the minimum level by which the waveform must rise or fall so that it will be identified as a maximum or a minimum by the search functions.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Peak excursion" on page 283

18.15.4 Cursor appearance

CURSor<cu>:STYLe <Style>

Defines how the cursor is displayed in the diagram.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Style> LINes | LRHombus | VLRHombus | RHOMbus

LINes
The cursors are displayed as lines.

LRHombus
The cursors are displayed as lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

VLRHombus
The cursors are displayed only as vertical lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

RHOMbus
The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

*RST: LINes

Usage: Asynchronous command

Manual operation: See "Cursor style" on page 277

18.16 Spectrum analysis

18.16.1 Spectrum setup

CALCulate:SPECtrum<sp>:COUPling[:ENABle] 1361
CALCulate:SPECtrum<sp>:COUPling:FROM 1361
CALCulate:SPECtrum<sp>:COUPling:MODE 1361
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:ADJusted? 1362
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO 1362
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio 1363
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue] 1363
CALCulate:SPECtrum<sp>:FREQuency:CENTer 1363
CALCulate:SPECtrum<sp>:FREQuency:SCALe 1364
CALCulate:SPECtrum<sp>:FREQuency:SPAN 1364
CALCulate:SPECtrum<sp>:FREQuency:STARt 1364
CALCulate:SPECtrum<sp>:FREQuency:STOP 1365
CALCulate:SPECtrum<sp>:FREQuency:WINDow:TYPE 1365

CALCulate:SPECtrum<sp>:MAGNitude:LEVel 1366
CALCulate:SPECtrum<sp>:MAGNitude:RANGe 1366
CALCulate:SPECtrum<sp>:MAGNitude:SCALe 1366
CALCulate:SPECtrum<sp>:PRESet 1367
CALCulate:SPECtrum<sp>:SOURce 1367
CALCulate:SPECtrum<sp>:STATe 1368
CALCulate:SPECtrum<sp>:THReshold 1368
CALCulate:SPECtrum<sp>:PEXCursion 1368
CALCulate:SPECtrum<sp>:WAVeform:AVERage:COUNt 1369
CALCulate:SPECtrum<sp>:WAVeform:AVERage:ENABle 1369
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:ENABle 1369
CALCulate:SPECtrum<sp>:WAVeform:MINimum:ENABle 1369
CALCulate:SPECtrum<sp>:WAVeform:NORMal[:ENABle] 1370

CALCulate:SPECtrum<sp>:COUPling[:ENABle] <Enable>

Activates the settings coupling for the specified spectrum.

`CALCulate:SPECtrum<sp>:COUPling:FROM` selects the spectrum whose settings you want to use.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Enable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Coupling: Enable, Couple from" on page 349

CALCulate:SPECtrum<sp>:COUPling:FROM <Spectrum>

Selects the spectrum whose settings are used for the spectrum specified in the suffix if `CALCulate:SPECtrum<sp>:COUPling[:ENABle]` is ON.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Spectrum> Number of the source spectrum

Usage: Asynchronous command

Manual operation: See "Coupling: Enable, Couple from" on page 349

CALCulate:SPECtrum<sp>:COUPling:MODE <ScaleMode>

By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ScaleMode> MANual | AUTO

AUTO
Vertical scale is set automatically.

MANual
Set the vertical scale with `CALCulate:SPECtrum<sp>:MAGNitude:SCALe` and `CALCulate:SPECtrum<sp>:MAGNitude:RANGe`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Scale mode" on page 348

CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:ADJusted?

Queries the effective resolution bandwidth.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:
<AdjResBW> Range: 0 to 200E+9
Increment: 0.01
*RST: 0
Default unit: Hz

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO <AutoRBW>

Couples the frequency span to the "RBW" setting.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<AutoRBW> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto RBW" on page 346

CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio <SpanRBWRatio>

Defines the coupling ratio for Span/RBW.

Available, if `CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO` is set to `ON`.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<SpanRBWRatio> Range: 10 to 10000
Increment: 1
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Span/RBW" on page 346

CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue] <RBW>

Queries or defines the used resolution bandwidth.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<RBW> Range: 0.0002 to 2000000
Increment: 0.01
*RST: 2000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "RBW" on page 347

CALCulate:SPECtrum<sp>:FREQuency:CENTer <Center>

Defines the position of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The width of the range is defined using the frequency span setting.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Center> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[Position]" on page 50

CALCulate:SPECtrum<sp>:FREQuency:SCALe <XAxisMode>

Defines the scaling method for the frequency axis (x-axis) of the spectrogram.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<XAxisMode> LIN | LOG
`LIN`: linear scaling
`LOG`: logarithmic scaling
*RST: LIN

Usage: Asynchronous command

Manual operation: See "Frequency axis" on page 349

CALCulate:SPECtrum<sp>:FREQuency:SPAN <Span>

The span is specified in Hertz and defines the width of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The position of the span is defined using the "Center" setting.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Span> Range: 0 to 1E+26
Increment: 0.01
*RST: 0.02
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 51

CALCulate:SPECtrum<sp>:FREQuency:STARt <Start>

Defines the start frequency of the displayed frequency span.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Start> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: -0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Start" on page 346

CALCulate:SPECtrum<sp>:FREQuency:STOP <Stop>

Sets the stop frequency of the displayed frequency span.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Stop>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Stop" on page 346

CALCulate:SPECtrum<sp>:FREQuency:WINDow:TYPE <WindowFunction>

Selects the window type. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the MXO 5 to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<WindowFunction> RECTangular | HAMMing | HANN | BLACkharris | GAUSsian | FLATTOP2 | KAISerbessel

RECTangular
The rectangular window has the best frequency resolution, but a poor amplitude accuracy and is recommended for separating two tones with almost equal amplitudes and a small frequency distance.

HAMMing
The Hamming window is bell shaped and has a good frequency resolution and fair amplitude accuracy. It is recommended for frequency response measurements and sine waves, periodic signals and narrowband noise.

HANN
The Hann window is bell shaped and has a slightly worse frequency resolution but smaller sidelobe level than the Hamming window. The applications are the same.

BLACkharris
The Blackman window is bell shaped and has a poor frequency resolution, but very good amplitude accuracy. It is recommended mainly for signals with single frequencies to detect harmonics.

GAUSsian
Good frequency resolution and best magnitude resolution, recommended for weak signals and short duration

FLATTOP2
The flat top window has a poor frequency resolution, but the best amplitude accuracy and the sharpest sidelobe. It is recommended for accurate single tone amplitude measurements.

KAISerbessel
The kaiser-bessel window has a fair frequency resolution and good amplitude accuracy, and a very high sidelobe level. It is recommended for separating two tones with differing amplitudes and a small frequency distance.

*RST: BLACkharris

Usage: Asynchronous command

Manual operation: See "Window type" on page 347

CALCulate:SPECtrum<sp>:MAGNitude:LEVel <VerticalMax>

Sets the maximum displayed value on the vertical scale.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<VerticalMax>
Range: -1E+26 to 1000000000000000
Increment: 1
*RST: 10

Usage: Asynchronous command

Manual operation: See "Vertical maximum" on page 349

CALCulate:SPECtrum<sp>:MAGNitude:RANGe <VerticalRange>

Sets the range of the spectrum values to be displayed.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<VerticalRange>
Range: 0 to 1000000000000000
Increment: 0.01
*RST: 100

Usage: Asynchronous command

Manual operation: See "Vertical range" on page 349

CALCulate:SPECtrum<sp>:MAGNitude:SCALe <Unit>

Sets the unit for the y-axis.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Unit> LINear | DB | DBM | DBV | DBUV | DBS | DBHZ
*RST: DBM

Usage: Asynchronous command

Manual operation: See "Magnitude unit" on page 349

CALCulate:SPECtrum<sp>:PRESet

Presets the spectrum measurement.

Suffix:
<sp> 1 to 4, index of the spectrum

Usage: Setting only
Asynchronous command

Manual operation: See "Spectrum preset" on page 348

CALCulate:SPECtrum<sp>:SOURce <Source>

Selects the source for the spectrum.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Source> One of the following waveforms:
NONE
C1 | C2 | ... | C8: analog channels
M1 | M2 | ... | M8: math waveforms
R1 | R2 | ... | R8: reference waveforms
TRK1 | TRK2 | TRK3 | ... | TRK24: tracks
O<n>C1,O<n>C2, ... ,O<n>C8 (<n> = 2 to 11): ScopeSync waveforms, retrieved from connected oscilloscopes
Power waveforms of power analysis measurements with option R&S MXO5-K31.
Power waveforms of 3-phase power analysis measurements with option R&S MXO5-K333.
Mechanical tracks of motor drive analysis with option R&S MXO5-K360.
All waveforms are listed in Section 18.4.1, "Waveform parameter", on page 1082.

Usage: Asynchronous command

Manual operation: See "Source" on page 345

CALCulate:SPECtrum<sp>:STATe <State>

Enables the spectrum.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 345

CALCulate:SPECtrum<sp>:THReshold <Threshold>

Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Threshold> Range: -500 to 500
Increment: 1
*RST: -70
Default unit: dBm

Usage: Asynchronous command

Manual operation: See "Threshold" on page 283

CALCulate:SPECtrum<sp>:PEXCursion <PeakExcursion>

Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<PeakExcursion> Range: 0 to 100
Increment: 1
*RST: 5
Default unit: dB

Usage: Asynchronous command

Manual operation: See "Peak excursion" on page 283

CALCulate:SPECtrum<sp>:WAVeform:AVERage:COUNt <AverageCount>

Sets the number of segments used for the averaging of the spectrum.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<AverageCount> Range: 2 to 65534
Increment: 1
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Traces" on page 347

CALCulate:SPECtrum<sp>:WAVeform:AVERage:ENABle <Enable>

Enables the average trace.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Enable> OFF | ON

Usage: Asynchronous command

Manual operation: See "Traces" on page 347

CALCulate:SPECtrum<sp>:WAVeform:MAXimum:ENABle <Enable>

Enables the maximum trace.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Enable> OFF | ON

Usage: Asynchronous command

Manual operation: See "Traces" on page 347

CALCulate:SPECtrum<sp>:WAVeform:MINimum:ENABle <Enable>

Enables the minimum trace.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Enable> OFF | ON

Usage: Asynchronous command

Manual operation: See "Traces" on page 347

CALCulate:SPECtrum<sp>:WAVeform:NORMal[:ENABle] <Enable>

Enables the normal spectrum trace.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Enable> OFF | ON

Usage: Asynchronous command

Manual operation: See "Traces" on page 347

18.16.2 Spectrum gate

CALCulate:SPECtrum<sp>:GATE:POSition....1370
CALCulate:SPECtrum<sp>:GATE:STARt....1370
CALCulate:SPECtrum<sp>:GATE:STOP....1371
CALCulate:SPECtrum<sp>:GATE:WIDTh....1371

CALCulate:SPECtrum<sp>:GATE:POSition <Center>

Sets the position of the displayed frequency range.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Center>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Position" on page 350

CALCulate:SPECtrum<sp>:GATE:STARt <Start>

Sets the starting value for the gate.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Start>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: -0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Start" on page 350

CALCulate:SPECtrum<sp>:GATE:STOP <Stop>

Sets the end value for the gate.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Stop>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Stop" on page 350

CALCulate:SPECtrum<sp>:GATE:WIDTh <Span>

Defines the width of the displayed gate.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Span>
Range: 0 to 1E+26
Increment: 0.01
*RST: 0.02
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Width" on page 350

18.16.3 Peak list

CALCulate:SPECtrum<sp>:PLISt:COUNt? 1372
CALCulate:SPECtrum<sp>:PLISt[:STATe] 1372
CALCulate:SPECtrum<sp>:PLISt:MAXCount 1372
CALCulate:SPECtrum<sp>:PLISt:MODE 1372
CALCulate:SPECtrum<sp>:PLISt:SOURce 1373
CALCulate:SPECtrum<sp>:PLISt:SPOW 1373
CALCulate:SPECtrum<sp>:PLISt:RESult[:VALue]? 1373
CALCulate:SPECtrum<sp>:PLISt:SORT:COLumn 1374
CALCulate:SPECtrum<sp>:PLISt:SORT:ORDer 1374
CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe] 1374
CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount 1374

CALCulate:SPECtrum<sp>:PLISt:LABel:INVert....1375
CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount....1375
CALCulate:SPECtrum<sp>:PLISt:LABel[:STATe]....1375

CALCulate:SPECtrum<sp>:PLISt:COUNt?

Returns the current number of peak list results.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:
<Count>

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:PLISt[:STATe] <ShowTable>

Enables the display of the peak table.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ShowTable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Peak table" on page 352

CALCulate:SPECtrum<sp>:PLISt:MAXCount <MaxNoRess>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<MaxNoRess> Range: 1 to 1000
Increment: 1
*RST: 10

Usage: Asynchronous command

Manual operation: See "Max results" on page 353

CALCulate:SPECtrum<sp>:PLISt:MODE <ResultMode>

Selects how the measurement results are displayed.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ResultMode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Result mode" on page 353

CALCulate:SPECtrum<sp>:PLISt:SOURce <Source>

Selects the source of the peak table. You can select one of the traces that is enabled with Traces.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Source> SPECMAXH1 | SPECMINH1 | SPECNORM1 | SPECAVER1 | SPECMAXH2 | SPECMINH2 | SPECNORM2 | SPECAVER2 | SPECMAXH3 | SPECMINH3 | SPECNORM3 | SPECAVER3 | SPECMAXH4 | SPECMINH4 | SPECNORM4 | SPECAVER4

Usage: Asynchronous command

Manual operation: See "Source" on page 354

CALCulate:SPECtrum<sp>:PLISt:SPOW <ShowPeaks>

Displays a box with a description for each detected peak in the spectrum, including the magnitude.

If `CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe]` is `ON`, the frequency values are also displayed.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ShowPeaks> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Peak on waveform" on page 352

CALCulate:SPECtrum<sp>:PLISt:RESult[:VALue]?

Returns the current peak list measurement results.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:
<Value> Comma-separated list of results

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:SORT:COLumn <ResultColumn>

Sorts the results in the spectrum peak list table either according to the frequency or according to the value.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ResultColumn> FREQ | VAL
*RST: FREQ

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:SORT:ORDer <ResultOrder>

Defines if the spectrum peak list results are sorted in an ascending (increasing) or descending (decreasing) order.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ResultOrder> ASC | DESC
`ASC`: ascending
`DESC`: descending
*RST: ASC

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe] <ShowFrequency>

Includes the frequency of the detected peak in the diagram labels.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ShowFrequency> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show frequency" on page 354

CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount <MaxNumberPeaks>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<MaxNumberPeaks> Range: 1 to 100
Increment: 1
*RST: 10

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:LABel:INVert <Inverse>

Inverts the colors of the peak list labels, the peak boxes are shown with a white background.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Inverse> OFF | ON
*RST: OFF

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount <MaxNumberPeaks>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<MaxNumberPeaks> Range: 1 to 100
Increment: 1
*RST: 10

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:LABel[:STATe] <ShowLabels>

Displays the labels in the peak list diagram.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ShowLabels> OFF | ON
*RST: ON

Usage: Asynchronous command

18.16.4 Spectrum with frames and overlap

CALCulate:SPECtrum<sp>:OVERlap:ENABle....1376
CALCulate:SPECtrum<sp>:OVERlap:FACTor:VALue....1376
CALCulate:SPECtrum<sp>:OVERlap:FACTor:ADJusted?....1376
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle....1377
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue....1377
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:ADJusted?....1377
CALCulate:SPECtrum<sp>:OVERlap:FWIDth?....1378

CALCulate:SPECtrum<sp>:OVERlap:ENABle <State>

Activates the use of frames and overlap to create the FFT spectrum.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 354

CALCulate:SPECtrum<sp>:OVERlap:FACTor:VALue <OverlapFactor>

Defines the minimum factor by which two neighboring frames overlap.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<OverlapFactor> Range: 0 to 90
Increment: 1
*RST: 20
Default unit: %

Usage: Asynchronous command

Manual operation: See "Overlap factor" on page 355

CALCulate:SPECtrum<sp>:OVERlap:FACTor:ADJusted?

Returns the adjusted overlap factor that is used for calculation. It is based on the given minimum overlap factor and the current settings.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:

<AdjOverlapFact> Range: 0 to 100
Increment: 1
*RST: 20
Default unit: %

Usage: Query only
Asynchronous command

Manual operation: See "Overlap factor" on page 355

CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle <LimitNumberFFT>

Limits the number of FFTs that are done per acquisition. To set the number of FFTs, use `CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue`.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<LimitNumberFFT> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Limit # of FFTs" on page 354

CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue <FFTPerAcq>

Sets the number of frames to be used for FFT with `CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle` set ON.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<FFTPerAcq> Range: 1 to 4294967295
Increment: 1
*RST: 1000

Usage: Asynchronous command

Manual operation: See "FFTs per acq." on page 355

CALCulate:SPECtrum<sp>:OVERlap:FCOunt:ADJusted?

Returns the adjusted number of frames that is used for FFT calculation.

Suffix:

<sp> 1 to 4, index of the spectrum

Return values:

<AdjFFTPerAcq> Range: 1 to 4294967295
Increment: 1
*RST: 1000

Usage: Query only
Asynchronous command

Manual operation: See "FFTs per acq." on page 355

CALCulate:SPECtrum<sp>:OVERlap:FWIDth?

Returns the frame width.

Suffix:

<sp> 1 to 4, index of the spectrum

Return values:

<FrameWidth> Range: 1E-16 to 10000
Increment: 1
*RST: 1
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Frame width" on page 355

18.16.5 Data export of spectrum waveforms

For each of the spectrum traces, a dedicated command is available. You find the commands in Section 18.13.9, "Data transfer to remote computer", on page 1298. For a description of the traces, see "Traces" on page 347.

For fast export of several waveforms at once, use `EXPort:WAVeform:DATA[:VALues]?` on page 1307.

For export of spectrum data to file, see Section 18.13.4, "Waveform data: export to file", on page 1285.

18.17 Applications

18.17.1 Mask testing

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- Mask test definition 1379
- Polygon definition 1382
- Auto mask definition 1385
- Actions 1388
- Results 1390

18.17.1.1 Mask test definition

MTESt<m>:ADD 1379
MTESt<m>:COUNt? 1379
MTESt<m>:DIAGram 1380
MTESt<m>:IMEXport:NAME 1380
MTESt<m>:IMEXport:OPEN 1380
MTESt<m>:IMEXport:SAVE 1380
MTESt<m>:REMove 1381
MTESt<m>:SOURce 1381
MTESt<m>:STATe 1381
MTESt<m>:VISible 1381

MTESt<m>:ADD

Creates a mask test with the indicated index.

Suffix:
<m> 1 to 8, index of the mask

Example: See Section 18.5.2, "Creating a mask", on page 1088.

Usage: Setting only
Asynchronous command

Manual operation: See "Add mask" on page 359

MTESt<m>:COUNt?

Returns the number of masks.

`MTESt:COUNt? MAX` returns the maximum number of masks that can be created.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<Count> Number of defined masks

Usage: Query only
Asynchronous command

MTESt<m>:DIAGram <DiagramKey>

Sets the layout and the diagram where the mask is located and the test runs.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<DiagramKey> String with the layout-diagram key.

Example:
```
:MTESt:DIAGram?
-->"L1_D1"
```

Usage: Asynchronous command

MTESt<m>:IMEXport:NAME <Name>

Sets the path, the filename and the file format of the mask file.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<Name> String with path and file name with extension `.xml`.

Example:
```
MTES2:IMEX:NAME
'/home/storage/userData/Masks/MyMask2.xml'
```
File and path definition for mask test 2.

Usage: Asynchronous command

Manual operation: See "Save mask" on page 360

MTESt<m>:IMEXport:OPEN

Opens and loads the mask selected by `MTESt<m>:IMEXport:NAME`.

Suffix:
<m> 1 to 8, index of the mask

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 360

MTESt<m>:IMEXport:SAVE

Saves the mask test to the file selected by `MTESt<m>:IMEXport:NAME`.

Suffix:
<m> 1 to 8, index of the mask

Usage: Event
Asynchronous command

Manual operation: See "Save mask" on page 360

MTESt<m>:REMove

Deletes the selected mask.

Suffix:
<m> 1 to 8, index of the mask

Usage: Setting only
Asynchronous command

MTESt<m>:SOURce <Source>

Selects the waveform to be tested against the mask. For auto mask definition, it is also the waveform from which the mask is created.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<Source> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | XY1 | XY2 | XY3 | XY4 | SPECNORM1 | SPECNORM2 | SPECNORM3 | SPECNORM4 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11) | EYE1 | EYE2 | ... | EYE8

Usage: Asynchronous command

Manual operation: See "Source" on page 360

MTESt<m>:STATe <State>

Activates or deactivates the mask test.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable test" on page 359

MTESt<m>:VISible <DisplayState>

Displays all mask segments of the selected mask in the diagrams, or hides them.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Display" on page 359

18.17.1.2 Polygon definition

MTESt<m>:SEGMent<n>:ADD 1382
MTESt<m>:SEGMent<n>:COUNt? 1382
MTESt<m>:SEGMent<n>:POINt<o>:ADD 1383
MTESt<m>:SEGMent<n>:POINt<o>:COUNt? 1383
MTESt<m>:SEGMent<n>:POINt<o>:REMove 1383
MTESt<m>:SEGMent<n>:POINt<o>:VALid? 1384
MTESt<m>:SEGMent<n>:POINt<o>:X 1384
MTESt<m>:SEGMent<n>:POINt<o>:Y 1384
MTESt<m>:SEGMent<n>:REMove 1385
MTESt<m>:SEGMent<n>:VALid? 1385

MTESt<m>:SEGMent<n>:ADD

Adds a new segment to the selected mask. The segment has no points, use `MTESt<m>:SEGMent<n>:POINt<o>:ADD` to add the points.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment
Omit the suffix to use the next free suffix.

Example: See Section 18.5.2, "Creating a mask", on page 1088.

Usage: Setting only
Asynchronous command

Manual operation: See "Add segment" on page 361

MTESt<m>:SEGMent<n>:COUNt?

Returns the number of segments that belong to the indicated mask.

`MTESt<m>:SEGMent:COUNt? MAX` returns the maximum number of segments that can be created.

Suffix:

<m> 1 to 8, index of the mask

<n> Irrelevant, omit the suffix.

Return values:

<Count> Number of defined masks

Usage: Query only
Asynchronous command

MTESt<m>:SEGMent<n>:POINt<o>:ADD

Adds a corner point to the selected mask segment at the next free suffix. The new point has the coordinates 0;0.

Suffix:
<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Example: See Section 18.5.2, "Creating a mask", on page 1088.

Usage: Setting only
Asynchronous command

Manual operation: See "Add +" on page 362

MTESt<m>:SEGMent<n>:POINt<o>:COUNt?

Returns the number of points that was added to the indicated mask segment.

You can query the maximum value with `<command>? MAX`.

Suffix:
<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> Irrelevant, omit the suffix.

Parameters:
<Count> Number of defined points

Example: See Section 18.5.2, "Creating a mask", on page 1088.

Usage: Query only
Asynchronous command

Manual operation: See "Add +" on page 362

MTESt<m>:SEGMent<n>:POINt<o>:REMove

Deletes the indicated corner point of the mask segment.

Suffix:
<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Usage: Setting only
Asynchronous command

Manual operation: See "Delete, Delete all" on page 363

MTESt<m>:SEGMent<n>:POINt<o>:VALid?

Checks the validity of the selected point. See "Polygon masks" on page 357.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Return values:

<Valid> OFF | ON

ON = valid
OFF = invalid

*RST: ON

Usage: Query only
Asynchronous command

MTESt<m>:SEGMent<n>:POINt<o>:X <X>

Sets the horizontal position of the selected corner point.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Parameters:

<X> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: s

Example: See Section 18.5.2, "Creating a mask", on page 1088.

Usage: Asynchronous command

Manual operation: See "Point, X, Y" on page 362

MTESt<m>:SEGMent<n>:POINt<o>:Y <Y>

Sets the vertical position of the selected corner point.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Parameters:

<Y> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: V

Example: See Section 18.5.2, "Creating a mask", on page 1088.

Usage: Asynchronous command

Manual operation: See "Point, X, Y" on page 362

MTESt<m>:SEGMent<n>:REMove

Deletes the specified mask segment.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

Usage: Setting only
Asynchronous command

Manual operation: See "Delete, Delete all" on page 363

MTESt<m>:SEGMent<n>:VALid?

Checks the validity of the indicated segment. The segment is invalid if one of its points is invalid. See "Polygon masks" on page 357.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

Return values:

<Valid> OFF | ON

ON = valid
OFF = invalid

*RST: ON

Usage: Query only
Asynchronous command

18.17.1.3 Auto mask definition

MTESt<m>:AUTomask:UPDate 1386
MTESt<m>:AUTomask:XTOLerance:DIVisions 1386
MTESt<m>:AUTomask:XTOLerance:PHYSical 1386
MTESt<m>:AUTomask:YTOLerance:DIVisions 1387
MTESt<m>:AUTomask:YTOLerance:PHYSical 1387
MTESt<m>:AUTomask:XTUNit 1387

MTESt<m>:AUTomask:YTUNit 1387
MTESt<m>:AUTomask:VALues:BOTTom? 1388
MTESt<m>:AUTomask:VALues:TOP? 1388

MTESt<m>:AUTomask:UPDate

Creates or updates the upper and lower mask limit from the envelope of the selected source by copying the waveform data. See also: `MTESt<m>:SOURce` on page 1381.

Suffix:
<m> 1 to 8, index of the mask

Usage: Event
Asynchronous command

Manual operation: See "Create/Update" on page 363

MTESt<m>:AUTomask:XTOLerance:DIVisions <HorizTol>

Sets the width of the mask in horizontal direction in divisions, and sets `MTESt<m>:AUTomask:XTUNit` to `DIVisions`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<HorizTol> Tolerance value in divisions. The overall mask width is twice the specified value.

Range: 0 to 10
Increment: 0.01
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Tolerance (Horizontal)" on page 364

MTESt<m>:AUTomask:XTOLerance:PHYSical <HorizTol>

Sets the width of the mask in horizontal direction in the unit of the horizontal axis, and sets `MTESt<m>:AUTomask:XTUNit` to `PHYSical`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<HorizTol> Tolerance value in the physical unit of the x-axis. The overall mask width is twice the specified value.

Range: 0 to 10
Increment: 0.01
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Tolerance (Horizontal)" on page 364

MTESt<m>:AUTomask:YTOLerance:DIVisions <VertTol>

Sets the height of the mask in vertical direction in divisions, and sets `MTESt<m>:AUTomask:YTUNit` to `DIVisions`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<VertTol> Tolerance value in divisions. The overall mask height is twice the specified value.

Range: 0 to 10
Increment: 0.01
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Tolerance (Vertical)" on page 364

MTESt<m>:AUTomask:YTOLerance:PHYSical <VertTol>

Sets the height of the mask in vertical direction in the unit of the vertical axis, and sets `MTESt<m>:AUTomask:YTUNit` to `PHYSical`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<VertTol> Tolerance value in the physical unit of the y-axis. The overall mask height is twice the specified value.

Range: 0 to 10
Increment: 0.01
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Tolerance (Vertical)" on page 364

MTESt<m>:AUTomask:XTUNit <HorizTolUnt>
MTESt<m>:AUTomask:YTUNit <VertTolUnt>

Set the unit of the mask tolerance in horizontal and vertical direction: divisions or in the unit of the corresponding axis.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<VertTolUnt> DIVisions | PHYSical

*RST: DIVisions

Usage: Asynchronous command

Manual operation: See "Unit" on page 364

MTESt<m>:AUTomask:VALues:BOTTom?

Returns the points of the lower mask limit.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<Points> Comma-separated list of values
Range: -INF to INF
Increment: 0.01
*RST: 0

Usage: Query only
Asynchronous command

MTESt<m>:AUTomask:VALues:TOP?

Returns the points of the upper mask limit.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<Points> Comma-separated list of values
Range: -INF to INF
Increment: 0.01
*RST: 0

Usage: Query only
Asynchronous command

18.17.1.4 Actions

MTESt<m>:ONViolation:BEEP 1388
MTESt<m>:ONViolation:SCReenshot 1389
MTESt<m>:ONViolation:SRESults 1389
MTESt<m>:ONViolation:STOP 1389
MTESt<m>:ONViolation:TRIGgerout 1390
MTESt<m>:ONViolation:WFMSave 1390

MTESt<m>:ONViolation:BEEP <Beep>

Generates a beep sound if the command is set to `SUCCess` or `VIOLation`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<Beep> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Beep" on page 365

MTESt<m>:ONViolation:SCReenshot <SaveScreenshot>

Saves the waveform data to file if the command is set to `SUCCess` or `VIOLation`.

To configure the screenshot settings, use the commands described in Section 18.13.8, "Screenshots", on page 1294.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<SaveScreenshot> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Screenshot" on page 366

MTESt<m>:ONViolation:SRESults <SaveResults>

Saves the selected results to file if the command is set to `SUCCess` or `VIOLation`.

To define the path and file names, use the EXPort:RESult:AUTonaming:* commands:

- `EXPort:RESult:AUTonaming:NAME` on page 1293
- `EXPort:RESult:AUTonaming:PATH` on page 1293
- `EXPort:RESult:AUTonaming:TYPE` on page 1293

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<SaveResults> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save results" on page 366

MTESt<m>:ONViolation:STOP <StopAcq>

Stops the running acquisition if the command is set to `SUCCess` or `VIOLation`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<StopAcq> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 365

MTESt<m>:ONViolation:TRIGgerout <TrigOutPls>

Sends an outgoing pulse to the [Trigger Out] connector if the command is set to `SUCCess` or `VIOLation`.

To configure the pulse, use the following commands:

- `TRIGger:ACTions:OUT:SOURce` on page 1214
- `TRIGger:ACTions:OUT:POLarity` on page 1215
- `TRIGger:ACTions:OUT:DELay` on page 1214
- `TRIGger:ACTions:OUT:PLENgth` on page 1214

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<TrigOutPls> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Trigger out pulse" on page 366

MTESt<m>:ONViolation:WFMSave <SaveWfm>

Saves the waveform data to file if the command is set to `SUCCess` or `VIOLation`.

To define the path and file names, use the EXPort:WAVeform:AUTonaming:* commands:

- `EXPort:WAVeform:AUTonaming:NAME` on page 1285
- `EXPort:WAVeform:AUTonaming:PATH` on page 1286
- `EXPort:WAVeform:AUTonaming:TYPE` on page 1286

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<SaveWfm> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save wfm" on page 365

18.17.1.5 Results

MTESt<m>:RESult:COUNt:FWAVeforms? 1391
MTESt<m>:RESult:COUNt:PWAVeforms? 1391
MTESt<m>:RESult:COUNt:WAVeforms? 1391
MTESt<m>:RESult:FRATe? 1391
MTESt<m>:RESult[:RESult]? 1392

MTESt<m>:RESult:COUNt:FWAVeforms?

Returns the number of failed acquisitions.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<AcqsFailed> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Failed acq." on page 358

MTESt<m>:RESult:COUNt:PWAVeforms?

Returns the number of acquisitions that passed the test successfully.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<AcqsPassed> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Passed acq." on page 358

MTESt<m>:RESult:COUNt:WAVeforms?

Returns the number of tested acquisitions.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<AcqsCompleted> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Total acq." on page 358

MTESt<m>:RESult:FRATe?

Returns the fail rate, the ratio of failed acquisitions to the number of tested acquisitions.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<FailRate> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0
Default unit: %

Usage: Query only
Asynchronous command

Manual operation: See "Fail rate" on page 358

MTESt<m>:RESult[:RESult]?

Returns the overall test result.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<TestResult> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

Manual operation: See "Result" on page 358

18.17.2 Frequency response and impedance analyses (options R&S MXO5-K36/K337)

- Settings....1392
- Generator settings....1400
- Amplitude profile....1401
- Display and scale settings....1403
- Calibration settings for frequency response analysis....1406
- Analysis results....1407
- Reference waveforms....1411
- Export of analysis data....1415

18.17.2.1 Settings

FRANalysis:AUToscale[:ENABle]....1393
FRANalysis:AUToscale:RESult[:ENABle]....1393
FRANalysis:ENABle....1393
FRANalysis:FREQuency:MODE....1394
FRANalysis:FREQuency:STARt....1394
FRANalysis:FREQuency:STOP....1394
FRANalysis:HDEFinition[:ENABle]....1394

FRANalysis:IMPedance[:MODE] 1395
FRANalysis:INPut[:SOURce] 1395
FRANalysis:MEASurement:DELay:STATe 1395
FRANalysis:MEASurement:DELay:MODE 1395
FRANalysis:MEASurement:DELay[:TIME] 1396
FRANalysis:MEASurement:DELay:PERiod[:NUMBer] 1396
FRANalysis:MEASurement:POINt[:DISPlay] 1396
FRANalysis:MEASurement:RBW:AUTO 1397
FRANalysis:MEASurement:RBW:VALue 1397
FRANalysis:MEASurement:RBW[:MODE] 1397
FRANalysis:MODE 1398
FRANalysis:OUTPut[:SOURce] 1398
FRANalysis:PHASe:MAXimum 1398
FRANalysis:POINts:LOGarithmic 1398
FRANalysis:POINts:MODE 1399
FRANalysis:POINts:TOTal 1399
FRANalysis:REPeat 1399
FRANalysis:RESet 1399
FRANalysis:STATe 1400

FRANalysis:AUToscale[:ENABle] <AutoScale>

Enables the auto scaling function for each measurement.

Parameters:

<AutoScale> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto scale" on page 383

FRANalysis:AUToscale:RESult[:ENABle] <State>

If ON, the scaling of the plot diagram is adjusted when new measurement results are determined.

Parameters:

<State> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto scale result" on page 384

FRANalysis:ENABle <State>

Enables the frequency response analysis application.

If the frequency response analysis is disabled, the instrument does not accept any `FRANalysis` command.

You can start the analysis with `FRANalysis:STATe`.

Parameters:
<State> OFF | ON

Usage: Asynchronous command

FRANalysis:FREQuency:MODE <FrequencyMode>

Selects between single frequency and sweep analysis.

Parameters:
<FrequencyMode> SWEep | SINGle
*RST: SWEep

Usage: Asynchronous command

Manual operation: See "Frequency mode" on page 378

FRANalysis:FREQuency:STARt <StartFrequency>

Sets the start frequency of the sweep.

Parameters:
<StartFrequency> Range: 0.01 to 100E+6
Increment: 1
*RST: 100
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 378

FRANalysis:FREQuency:STOP <StopFrequency>

Sets the stop frequency of the sweep.

Parameters:
<StopFrequency> Range: 0.01 to 100E+6
Increment: 1
*RST: 10000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 378

FRANalysis:HDEFinition[:ENABle] <HDMode>

Disables the HD mode, which is active by default. In particular, disable the HD mode if you analyze switching peaks.

Parameters:
<HDMode> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "HD mode" on page 384

FRANalysis:IMPedance[:MODE] <MeasMode>

Selects the measurement method for the impedance analysis.

Parameters:
<MeasMode> SHUNt | SERies | VCURrent
SHUNt: Shunt through
SERies: Series through
VCURrent: Voltage current
*RST: SERies

Manual operation: See "Measure type" on page 379

FRANalysis:INPut[:SOURce] <InputSignal>

Sets the channel for the input signal of the DUT.

Parameters:
<InputSignal> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Input" on page 377

FRANalysis:MEASurement:DELay:STATe <MeasDelay>

Enables the measurement delay.

Parameters:
<MeasDelay> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Meas. delay mode, Delay time, Delay period" on page 383

FRANalysis:MEASurement:DELay:MODE <MeasDelayMode>

Selects the delay mode.

Parameters:
<MeasDelayMode> TIME | PERiod
*RST: TIME

Usage: Asynchronous command

Manual operation: See "Meas. delay mode, Delay time, Delay period" on page 383

FRANalysis:MEASurement:DELay[:TIME] <MeasDelayTime>

Sets a time delay, that the system waits before measuring the next point of the plot. This is helpful in systems that need more time to adapt to the new frequency, for example if filters with significant time group delays are present.

The settings takes effect if if `FRANalysis:MEASurement:DELay:STATe` = `ON` and `FRANalysis:MEASurement:DELay:MODE` = `PERiod`.

Parameters:

<MeasDelayTime>
Range: 0 to 10
Increment: 0.001
*RST: 0
Default unit: s

Example:

```
FRANalysis:MEASurement:DELay:STATe ON
FRANalysis:MEASurement:DELay:MODE TIME
FRANalysis:MEASurement:DELay 0.005
```

Usage: Asynchronous command

Manual operation: See "Meas. delay mode, Delay time, Delay period" on page 383

FRANalysis:MEASurement:DELay:PERiod[:NUMBer] <MeasDelayPeriod>

Sets a period delay, which the system waits before measuring the next point of the plot.

The settings takes effect if if `FRANalysis:MEASurement:DELay:STATe` = `ON` and `FRANalysis:MEASurement:DELay:MODE` = `PERiod`.

Parameters:

<MeasDelayPeriod>
Range: 0.01 to 1000
Increment: 0.01
*RST: 1

Example:

```
FRANalysis:MEASurement:DELay:STATe ON
FRANalysis:MEASurement:DELay:MODE PERiod
FRANalysis:MEASurement:DELay:PERiod 0.05
```

Usage: Asynchronous command

Manual operation: See "Meas. delay mode, Delay time, Delay period" on page 383

FRANalysis:MEASurement:POINt[:DISPlay] <Points>

Enables the display of the measurement points for the frequency response analysis.

Parameters:

<Points>
OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Display points" on page 384

FRANalysis:MEASurement:RBW:AUTO <RBWAutoMode>

Enables automatic selection of the RBW for impedance analysis.

If ON, select an RBW range with `FRANalysis:MEASurement:RBW[:MODE]`.

If automatic RBW is off, set a fixed value with `FRANalysis:MEASurement:RBW:VALue`.

Parameters:

<RBWAutoMode> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto RBW" on page 378

FRANalysis:MEASurement:RBW:VALue <RBWFixedValue>

Sets the RBW value for impedance analysis if `FRANalysis:MEASurement:RBW:AUTO` is OFF.

Parameters:

<RBWFixedValue> Range: 1 to 1000000
Increment: 1
*RST: 100
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "RBW" on page 378

FRANalysis:MEASurement:RBW[:MODE] <RBW>

Sets the resolution bandwidth, which determines the number of measurements that are used for creating the plot.

In impedance analysis, the setting takes effect if `FRANalysis:MEASurement:RBW:AUTO` is ON.

Parameters:

<RBW> HIGH | MID | LOW

*RST: HIGH

Usage: Asynchronous command

Manual operation: See "RBW" on page 378

FRANalysis:MODE <ApplicationMd>

Selects the application mode.

- "Gain/phase": Frequency response analysis (option R&S MXO5-K36)
- "Impedance": Impedance analysis (option R&S MXO5-K337)

Parameters:
<ApplicationMd> GPHase | IMPedance
*RST: GPHase

Usage: Asynchronous command

Manual operation: See "Mode" on page 377

FRANalysis:OUTPut[:SOURce] <OutputSignal>

Sets the channel for the output signal of the DUT.

Parameters:
<OutputSignal> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Output" on page 378

FRANalysis:PHASe:MAXimum <MaxPhase>

Sets the upper boundary of the vertical phase window.

The lower boundary is given by "Maximum phase" - 360°.

By default, the "Maximum phase" is set to 180° for a phase window ranging from -180° to 180° accordingly.

Only available for frequency response analysis.

Parameters:
<MaxPhase> Range: 0 to 360
Increment: 1
*RST: 180
Default unit: °

Usage: Asynchronous command

Manual operation: See "Maximum phase" on page 383

FRANalysis:POINts:LOGarithmic <PtsPerDecade>

Selects the number of points that are measured per decade, if `FRANalysis:POINts:MODE` is set to `DECade`.

Parameters:

<PtsPerDecade>	Range:	10 to 500
	Increment:	1
	*RST:	10

Usage: Asynchronous command

Manual operation: See "Points" on page 379

FRANalysis:POINts:MODE <PointsMode>

Selects, if the number of points for the FRA are measured as total or per decade.

You can set the number of points with `FRANalysis:POINts:TOTal`/ `FRANalysis:POINts:LOGarithmic`.

Parameters:

<PointsMode>	TOTal | DECade	
	*RST:	DECade

Usage: Asynchronous command

Manual operation: See "Points" on page 379

FRANalysis:POINts:TOTal <TotalPoints>

Set the total number of points for the FRA analysis, if `FRANalysis:POINts:MODE` on page 1399 is set to `TOTal`.

Parameters:

<TotalPoints>	Range:	10 to 5000
	Increment:	1
	*RST:	100

Usage: Asynchronous command

Manual operation: See "Points" on page 379

FRANalysis:REPeat <Repeat>

Repeats the measurement, using the same parameters.

Parameters:

<Repeat>	OFF | ON	
	*RST:	OFF

Usage: Asynchronous command

Manual operation: See "Repeat" on page 379

FRANalysis:RESet

Resets the frequency response analysis.

Usage: Setting only
Asynchronous command

FRANalysis:STATe <Value>

Starts the frequency response analysis.

Parameters:
<Value> RUN | STOP | OFF

Usage: Asynchronous command

Manual operation: See "Run" on page 379

18.17.2.2 Generator settings

FRANalysis:AMPLitude:MODE 1400
FRANalysis:GENerator[:CHANnel] 1400
FRANalysis:GENerator:AMPLitude 1400
FRANalysis:GENerator:LOAD 1401

FRANalysis:AMPLitude:MODE <AmplitudeMode>

Selects, if the amplitude is a constant value (`FRANalysis:GENerator:AMPLitude`) or is defined as an amplitude profile.

Parameters:
<AmplitudeMode> CONStant | PROFile
*RST: CONStant

Usage: Asynchronous command

Manual operation: See "Amplitude mode" on page 380

FRANalysis:GENerator[:CHANnel] <GenCh>

Selects the built-in generator to start a frequency sweep for a defined frequency range.

BOTH synchronizes the generators.

Parameters:
<GenCh> GEN1 | GEN2 | BOTH
*RST: GEN1

Usage: Asynchronous command

Manual operation: See "Generator" on page 380

FRANalysis:GENerator:AMPLitude <GenAmplitude>

Sets a fixed amplitude for the generated signal.

Parameters:

<GenAmplitude>
Range: 0.01 to 12
Increment: 0.1
*RST: 1
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Amplitude" on page 380

FRANalysis:GENerator:LOAD <GenLoad>

Selects the generator voltage display for 50Ω or high impedance load.

Parameters:

<GenLoad>
FIFTy | HIZ
`HIZ`: high input impedance
*RST: FIFTy

Usage: Asynchronous command

Manual operation: See "User load" on page 380

18.17.2.3 Amplitude profile

FRANalysis:AMPLitude:PROFile:APOint 1401
FRANalysis:AMPLitude:PROFile:COUNt 1401
FRANalysis:AMPLitude:PROFile:MODE 1402
FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude 1402
FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency 1402
FRANalysis:AMPLitude:PROFile:POINt<m>:REMove 1402
FRANalysis:AMPLitude:PROFile:SORT 1403

FRANalysis:AMPLitude:PROFile:APOint

Adds a new step to the amplitude profile.

Usage: Setting only
Asynchronous command

Manual operation: See "Add" on page 381

FRANalysis:AMPLitude:PROFile:COUNt <Value>

Sets the number of defined points for the amplitude profile.

Parameters:

<Value>

Usage: Asynchronous command

Manual operation: See "Add" on page 381

FRANalysis:AMPLitude:PROFile:MODE <VoltageChange>

Selects if the voltage change is done as a single step or as a ramp.

Parameters:

<VoltageChange> SINGle | RAMP
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Voltage change" on page 381

FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude <Amplitude>

Sets the amplitude for the selected point.

Suffix:

<m> Index of the amplitude profile point

Parameters:

<Amplitude> Range: 0 to 5.995
Increment: 0.1
*RST: 1
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Step start freq, Amplitude" on page 381

FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency <Frequency>

Sets the start frequency for the selected point.

Suffix:

<m> Index of the amplitude profile point

Parameters:

<Frequency> Range: 0.01 to 100E6
Increment: 1
*RST: 100
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Step start freq, Amplitude" on page 381

FRANalysis:AMPLitude:PROFile:POINt<m>:REMove

Removes the specified step from the amplitude profile.

Suffix:

<m> 1..*, step index

Usage: Setting only
Asynchronous command

Manual operation: See "Delete" on page 382

FRANalysis:AMPLitude:PROFile:SORT

Sorts the steps in the amplitude table by frequency, starting with the lowest frequency.

Usage: Setting only
Asynchronous command

Manual operation: See "Sort" on page 382

18.17.2.4 Display and scale settings

FRANalysis:AMPLitude:ENABle 1403
FRANalysis:AMPLitude:OFFSet 1403
FRANalysis:AMPLitude:SCALe 1404
FRANalysis:GAIN:ENABle 1404
FRANalysis:GAIN:OFFSet 1404
FRANalysis:GAIN:SCALe 1404
FRANalysis:IMPedance:ENABle 1404
FRANalysis:IMPedance:SCALe 1405
FRANalysis:IMPedance:STARt 1405
FRANalysis:IMPedance:STOP 1405
FRANalysis:PHASe:ENABle 1405
FRANalysis:PHASe:OFFSet 1406
FRANalysis:PHASe:SCALe 1406

FRANalysis:AMPLitude:ENABle <State>

Enables the amplitude signal for the frequency response analysis. You can then define the amplitude profile of the signal.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Amplitude mode" on page 380

FRANalysis:AMPLitude:OFFSet <VerticalOffset>

Sets a vertical offset of the amplitude waveform.

Parameters:
<VerticalOffset> Range: -100 to 100
Increment: 0.01
*RST: 5
Default unit: Vpp

Usage: Asynchronous command

FRANalysis:AMPLitude:SCALe <VerticalScale>

Sets the vertical scale for the amplitude waveform.

Parameters:

<VerticalScale>
Range: 0.01 to 10
Increment: 0.01
*RST: 0.5
Default unit: Vpp/div

Usage: Asynchronous command

FRANalysis:GAIN:ENABle <State>

Enables the gain waveform for the frequency response analysis.

Parameters:

<State>
OFF | ON
*RST: OFF

Usage: Asynchronous command

FRANalysis:GAIN:OFFSet <VerticalOffset>

Sets a vertical offset of the gain waveform.

Parameters:

<VerticalOffset>
Range: -2000 to 2000
Increment: 0.001
*RST: 10
Default unit: dB

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 385

FRANalysis:GAIN:SCALe <VerticalScale>

Sets the vertical scale for the gain waveform.

Parameters:

<VerticalScale>
Range: 0.1 to 20
Increment: 1
*RST: 10
Default unit: dB/div

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 385

FRANalysis:IMPedance:ENABle <State>

Enables the impedance waveform for the impedance analysis.

Parameters:
<State> OFF | ON
*RST: OFF

FRANalysis:IMPedance:SCALe <Mode>

Sets the scale mode for the impedance trace.

Parameters:
<Mode> LIN | LOG
*RST: LOG

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 385

FRANalysis:IMPedance:STARt <Value>

Sets the lower value of the vertical scale for the impedance trace.

Parameters:
<Value> Range: 1E-06 to 1000000000
Increment: 1
*RST: 1
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Vertical start, Vertical stop" on page 385

FRANalysis:IMPedance:STOP <Value>

Sets the upper value of the vertical scale for the impedance trace.

Parameters:
<Value> Range: 2E-06 to 1000000000
Increment: 1
*RST: 1000
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Vertical start, Vertical stop" on page 385

FRANalysis:PHASe:ENABle <State>

Enables the phase waveform for the frequency response analysis.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

FRANalysis:PHASe:OFFSet <VerticalOffset>

Sets a vertical offset of the phase waveform.

Parameters:

<VerticalOffset>
Range: -10000 to 10000
Increment: 0.001
*RST: 0
Default unit: °

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 385

FRANalysis:PHASe:SCALe <VerticalScale>

Sets the vertical scale for the phase waveform.

Parameters:

<VerticalScale>
Range: 1 to 180
Increment: 1
*RST: 36
Default unit: °/div

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 385

18.17.2.5 Calibration settings for frequency response analysis

FRANalysis:CALibration:CALibration....1406
FRANalysis:CALibration:RESult?....1406
FRANalysis:CALibration:STATe....1407

FRANalysis:CALibration:CALibration

Runs a calibration sequence.

Usage: Event

Manual operation: See "Start calibration" on page 388

FRANalysis:CALibration:RESult?

Returns the result of the calibration.

Return values:

<States>
PASS | FAIL | RUN | NOAL
PASS: the calibration is successful.
FAIL: the calibration failed.
RUN: a calibration cycle is running.
NOAL: no active calibration.

*RST: NOAL

Usage: Query only

Manual operation: See "Start calibration" on page 388

FRANalysis:CALibration:STATe <UseCalData>

If ON, the user calibration data is used for the frequency response analysis.

Parameters:
<UseCalData> OFF | ON

*RST: OFF

Manual operation: See "Use calibration data" on page 388

18.17.2.6 Analysis results

FRANalysis:MARGin:GAIN:FREQuency? 1407
FRANalysis:MARGin:GAIN:VALue? 1407
FRANalysis:MARGin:PHASe:FREQuency? 1408
FRANalysis:MARGin:PHASe:VALue? 1408
FRANalysis:MARGin:STATe 1408
FRANalysis:MARKer<m>:FREQuency 1408
FRANalysis:MARKer<m>:IMPedance? 1408
FRANalysis:MARKer<m>:GAIN? 1409
FRANalysis:MARKer<m>:PHASe? 1409
FRANalysis:MARKer<m>:DIFFerence:FREQuency? 1409
FRANalysis:MARKer<m>:DIFFerence:IMPedance? 1409
FRANalysis:MARKer<m>:DIFFerence:GAIN? 1410
FRANalysis:MARKer<m>:DIFFerence:PHASe? 1410
FRANalysis:MARKer<m>:INDex? 1410
FRANalysis:MARKer<m>:SSCReen 1410
FRANalysis:MARKer<m>:STATe 1411
FRANalysis:RESult:STATe 1411

FRANalysis:MARGin:GAIN:FREQuency?

Returns the frequency of the gain margin.

Return values:
<Frequency>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:GAIN:VALue?

Returns the value of the gain margin.

Return values:
<Phase>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:PHASe:FREQuency?

Returns the frequency of the phase margin.

Return values:
<Frequency>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:PHASe:VALue?

Returns the value of the phase margin.

Return values:
<Phase>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:STATe <Margins>

Enables the display of the margin table for the frequency response analysis.

Parameters:
<Margins> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Margin" on page 384

FRANalysis:MARKer<m>:FREQuency <Frequency>

Sets the frequency for the specified marker, which defines the horizontal marker position.

Suffix:
<m> 1..2
Selects the marker number.

Parameters:
<Frequency> Numeric value in Hz

Usage: Asynchronous command

FRANalysis:MARKer<m>:IMPedance?

Returns the impedance for the specified marker.

Suffix:
<m> 1..2
Selects the marker number.

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:GAIN?

Returns the gain for the specified marker.

Suffix:
<m> 1..2
Selects the marker number.

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:PHASe?

Returns the phase value for the specified marker.

Suffix:
<m> 1..2
Selects the marker number.

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:FREQuency?

Returns the delta value of the frequency between the two markers.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<DeltaFrequency>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:IMPedance?

Returns the delta value of the impedance between the two markers.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<DeltaImpedance>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:GAIN?

Returns the delta value of the gain between the two markers.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<DeltaGain>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:PHASe?

Returns the delta value of the phase between the two markers.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<DeltaPhase>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:INDex?

Returns the point index in the plot where the specified marker is positioned.

Suffix:
<m> 1..2
Selects the marker number.

Return values:
<Index> The lowest index is 0, which corresponds to line 1 in the result table.
PointIndex = # in result table - 1

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:SSCReen

Resets the markers to their initial positions. Reset is helpful if the markers have disappeared from the display or need to be moved for a larger distance.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

FRANalysis:MARKer<m>:STATe <Markers>

Activates the display of the marker table and the markers in the plot.

Suffix:
<m> Irrelevant, omit the suffix.

Parameters:
<Markers> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Markers" on page 384

FRANalysis:RESult:STATe <Table>

Enables the display of the result table for the FRA.

Parameters:
<Table> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Result table" on page 384

18.17.2.7 Reference waveforms

FRANalysis:REFCurve<rc>:CLEar ... 1411
FRANalysis:REFCurve<rc>:DATA? ... 1412
FRANalysis:REFCurve<rc>:ENABle ... 1412
FRANalysis:REFCurve<rc>:NAME ... 1412
FRANalysis:REFCurve<rc>:OFFSet ... 1412
FRANalysis:REFCurve<rc>:OPEN ... 1413
FRANalysis:REFCurve<rc>:SAVE ... 1413
FRANalysis:REFCurve<rc>:SCALe ... 1413
FRANalysis:REFCurve<rc>:SOURce ... 1414
FRANalysis:REFCurve<rc>:TOORiginal ... 1414
FRANalysis:REFCurve<rc>:UPDate ... 1414
FRANalysis:REFCurve<rc>:VMODe ... 1414
FRANalysis:MARKer<m>:REFerence<rc>? ... 1415
FRANalysis:MARKer<m>:DIFFerence:REFerence<rc>? ... 1415

FRANalysis:REFCurve<rc>:CLEar

Deletes the selected reference waveform. It disappears from the display, and its memory is deleted.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Clear" on page 392

FRANalysis:REFCurve<rc>:DATA?

Returns the data of the specified reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Return values:
<Data> Comma-separated values

Usage: Query only
Asynchronous command

FRANalysis:REFCurve<rc>:ENABle <State>

Enables the display of the reference waveform in the diagram. Before you can display it, create the reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 391

FRANalysis:REFCurve<rc>:NAME <Name>

Defines the name of the reference waveform file to be loaded, saved or deleted.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<Name> String with the file path, filename and extension.

Usage: Asynchronous command

Manual operation: See "Save as" on page 392

FRANalysis:REFCurve<rc>:OFFSet <VerticalOffset>

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<VerticalOffset> Range: -100 to 100
Increment: 1
*RST: 5

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 394

FRANalysis:REFCurve<rc>:OPEN

Loads the reference waveform file selected by `FRANalysis:REFCurve<rc>:NAME`.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 392

FRANalysis:REFCurve<rc>:SAVE

Saves the FRA reference waveform to the file defined by `FRANalysis:REFCurve<rc>:NAME`.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Save as" on page 392

FRANalysis:REFCurve<rc>:SCALe <VerticalScale>

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<VerticalScale> Range: -100 to 100
Increment: 1
*RST: 0.5

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 393

FRANalysis:REFCurve<rc>:SOURce <Source>

Selects the source waveform of the reference.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<Source> FGAin | FPHase | FIMP | FREF1 | FREF2 | FREF3 | FREF4

Usage: Asynchronous command

Manual operation: See "Source" on page 391

FRANalysis:REFCurve<rc>:TOORiginal

Restores the original vertical settings of the reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Set to original" on page 393

FRANalysis:REFCurve<rc>:UPDate

Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Create/Update" on page 392

FRANalysis:REFCurve<rc>:VMODe <VerticalMode>

Selects the type of vertical settingsfor the reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<VerticalMode> COUPled | INDependent

COUPled
Vertical position and scale of the source are used.

INDependent
Scaling and position can be set specific to the reference waveform.

*RST: COUPled

Usage: Asynchronous command

Manual operation: See "Vertical mode" on page 393

FRANalysis:MARKer<m>:REFerence<rc>?

Returns the vertical value of the reference waveform at the specified marker.

Suffix:
<m> 1..2
Selects the marker number.

<rc> 1...4, index of the reference waveform

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:REFerence<rc>?

Returns the difference between the two markers on the reference waveform. If no marker values are exist, or they are invalid, an execution erroris returned.

Suffix:
<m> Irrelevant, omit the suffix.

<rc> 1...4, index of the reference waveform

Return values:
<DeltaReference> Value of the difference

Usage: Query only
Asynchronous command

18.17.2.8 Export of analysis data

EXPort:RESult:SELect:FRA:MARGin 1415
EXPort:RESult:SELect:FRA:MARKer 1416
EXPort:RESult:SELect:FRA:RESult 1416
FRANalysis:AMPLitude:DATA? 1416
FRANalysis:FREQuency:DATA? 1416
FRANalysis:GAIN:DATA? 1417
FRANalysis:IMPedance:DATA? 1417
FRANalysis:PHASe:DATA? 1417

EXPort:RESult:SELect:FRA:MARGin <MarginResult>

If enabled, includes the margin results in the results export file of the FRA.

Parameters:
<MarginResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 389

EXPort:RESult:SELect:FRA:MARKer <MarkerResult>

If enabled, includes the marker results in the results export file of the FRA.

Parameters:
<MarkerResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 389

EXPort:RESult:SELect:FRA:RESult <Result>

If enabled, includes the frequency response analysis results, including the frequency, gain, phase and amplitude, in the results export file of the FRA.

Parameters:
<Result> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 389

FRANalysis:AMPLitude:DATA?

Returns the amplitude values as a list of comma-separated values in V (Vpp).

Return values:
<Data> Comma-separated list of values

Usage: Query only
Asynchronous command

FRANalysis:FREQuency:DATA?

Returns the data of the frequency points for which gain and phase have been calculated as a list of comma-separated values in Hz.

Return values:
<Data> Comma-separated list of values

Example: FRAN:FREQ:DATA?
Result:
-0.07463742650985239,-0.09417628145200041,
-0.1457021392091207,-0.1914790795969807,
-0.2494368612845221,-0.3415108478964939,
-0.4350150706042513,-0.5673151547214843,
-0.7363486980048108,-0.9055923620805615,
-1.0829557075417

Usage: Query only
Asynchronous command

FRANalysis:GAIN:DATA?

Returns the data of the gain as a list of comma-separated values in dB.

Return values:
<Data> Comma-separated list of values

Example: FRAN:GAIN:DATA?
Result:
0.4381956630254851,0.4593246383252179,
0.461895233375762,0.4570717993766185,
0.4623802509651942,0.4533450898899926,
0.4408194360143725,0.4221600784741697,
0.4483342212879299,0.4473558449908476,
0.4915016244058707

Usage: Query only
Asynchronous command

FRANalysis:IMPedance:DATA?

Returns the impedance results as a list of comma-separated values in Ohm.

Return values:
<Data> Comma-separated list of values

Usage: Query only

FRANalysis:PHASe:DATA?

Returns the data of the phase as a list of comma-separated values in degree.

Return values:
<Data> Comma-separated list of values

Example: `FRAN:PHAS:DATA?`
Result:
`-0.07463742650985239,-0.09417628145200041,`
`-0.1457021392091207,-0.1914790795969807,`
`-0.2494368612845221,-0.3415108478964939,`
`-0.4350150706042513,-0.5673151547214843,`
`-0.7363486980048108,-0.9055923620805615,`
`-1.0829557075417`

Usage: Query only
Asynchronous command

18.17.3 Power analysis (option R&S MXO5-K31)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

Overview of statistic results

The remote commands for the power analysis measurements can retrieve statistic results. The abbreviations in the commands have the following meaning:

Command	Description
`POWer<m>:xxx:RESult:nnn:[:ACTual]?`	Current measurement result
`POWer<m>:xxx:RESult:nnn::AVERage?`	Average of the measurement results
`POWer<m>:xxx:RESult:nnn::EVTCount?`	Number of calculated measurement results (periods)
`POWer<m>:xxx:RESult:nnn:RMS?`	RMS value of the measurement results
`POWer<m>:xxx:RESult:nnn::PPEak?`	Positive peak value of the measurement results
`POWer<m>:xxx:RESult:nnn::NPEak?`	Negative peak value of the measurement results
`POWer<m>:xxx:RESult:xxx::STDDev?`	Standard deviation of the measurement results
`POWer<m>:xxx:RESult:nnn::WFMCount?`	Number of calculated waveforms

- General settings 1419
- Power quality 1421
- Power harmonics 1434
- Switching loss 1443
- Turn on/off time 1453

- Power efficiency....1457
- Safe operating area (SOA)....1464
- Power waveform....1474
- Reference level....1476
- Power analysis data....1482

18.17.3.1 General settings

POWer<m>[:ENABle]....1419
POWer<m>:TYPE....1419
POWer<m>:ASKew[:EXECute]....1420
EXPort:RESult:SELect:POWer<m>....1420
POWer<m>:EFFiciency:STATistics[:ENABle]....1420
POWer<m>:SWITching:STATistics:ENABle....1420
POWer<m>:QUALity:STATistics[:ENABle]....1420
POWer<m>:EFFiciency:STATistics:RESet....1420
POWer<m>:SWITching:STATistics:RESet....1420
POWer<m>:QUALity:STATistics:RESet....1420
POWer<m>:EFFiciency:STATistics:WFMCount?....1421
POWer<m>:SWITching:STATistics:WFMCount?....1421
POWer<m>:QUALity:STATistics:WFMCount?....1421

POWer<m>[:ENABle] <State>

Enables the power measurement instance.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "+ Add" on page 398

POWer<m>:TYPE <Type>

Sets the type for the respective power analysis measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Type> QUALity | HARMonics | SWITching | ONOFf | EFFiciency | SOA

SWITching = switching loss
ONOFf = turn on/off time
SOA = safe operating area

Example: `POW1:TYPE QUAL`
Sets the first power analysis measurement to quality.

Usage: Asynchronous command

Manual operation: See "+ Add" on page 398

POWer<m>:ASKew[:EXECute]

Performs auto deskew adjustment.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Event
Asynchronous command

Manual operation: See "Auto deskew" on page 399

EXPort:RESult:SELect:POWer<m> <ExportResults>

If enabled, includes the results of selected power analysis measurement in the results export file.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ExportResults> OFF | ON
*RST: OFF

Usage: Asynchronous command

POWer<m>:EFFiciency:STATistics[:ENABle] <State>
POWer<m>:SWITching:STATistics:ENABle <State>
POWer<m>:QUALity:STATistics[:ENABle] <State>

The commands activate statistical calculation for the selected power measurement. Make sure that the suffix matches the selected power measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Statistics" on page 403

POWer<m>:EFFiciency:STATistics:RESet
POWer<m>:SWITching:STATistics:RESet
POWer<m>:QUALity:STATistics:RESet

The commands restart statistical calculation for the selected power measurement. Make sure that the suffix matches the selected power measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 403

POWer<m>:EFFiciency:STATistics:WFMCount?
POWer<m>:SWITching:STATistics:WFMCount?
POWer<m>:QUALity:STATistics:WFMCount?

Return the number of waveforms included in the selected power analysis. Make sure that the suffix matches the selected power measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformCount> Number of analyzed waveforms.

Usage: Query only
Asynchronous command

Manual operation: See "Statistics" on page 403

18.17.3.2 Power quality

- Power quality setup....1421
- Power quality measurement display....1423
- Power quality results....1426

Power quality setup

POWer<m>:QUALity:SOURce:CURRent....1421
POWer<m>:QUALity:SOURce[:VOLTage]....1422
POWer<m>:QUALity:SOURce:CYCLe....1422
POWer<m>:QUALity:FREQuency[:VALue]....1422
POWer<m>:QUALity:FREQuency:USER....1422
POWer<m>:QUALity:GATE....1423

POWer<m>:QUALity:SOURce:CURRent <CurrentSource>

Selects the current source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current" on page 402

POWer<m>:QUALity:SOURce[:VOLTage] <VoltageSource>

Selects the voltage source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VoltageSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage" on page 402

POWer<m>:QUALity:SOURce:CYCLe <CycleSource>

Selects if voltage or current is used for the cycle measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CycleSource> VOLTage | CURRent
*RST: VOLTage

Usage: Asynchronous command

Manual operation: See "Cycle source" on page 402

POWer<m>:QUALity:FREQuency[:VALue] <FundamFreq>

Sets the input frequency of the source signal in Hz.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamFreq> F50 | F60 | F400 | USER | AUTO
*RST: F50

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 402

POWer<m>:QUALity:FREQuency:USER <FundamentalFreq>

Sets the user-defined frequency, if `POWer<m>:QUALity:FREQuency[:VALue]` is set to `USER`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:

<FundamentalFreq>	Range:	10 to 1000000
	Increment:	1
	*RST:	50
	Default unit:	Hz

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 402

POWer<m>:QUALity:GATE <Gate>

Selects the gate that is used for limiting the range of the power quality measurement.

Enable the gate before you assign a measurement to it (`GATE<g>:ENABle` =`ON`).

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<Gate> Number of the gate to be used

Usage: Asynchronous command

Power quality measurement display

POWer<m>:QUALity:DISPlay:CURRent:CRESTfactor <ShwCurrCrest>

Enables the current crest factor measurement for the power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<ShwCurrCrest>	OFF | ON	
	*RST:	ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:CURRent:PEAK <ShwCurrPeak>

Enables the current peak measurement for the power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<ShwCurrPeak>	OFF | ON	
	*RST:	ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:CURRent:RMS <ShowCurrentRMS>

Enables the current RMS measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowCurrentRMS> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:ACTive <ShwActPow>

Enables the active power measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwActPow> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:APParent <ShwApparentPow>

Enables the apparent power measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwApparentPow> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:PFACtor <ShwPowFact>

Enables the power factor measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwPowFact> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:PHASe <ShowPhase>

Enables the power phase measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowPhase> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:REACtive <ShwReactivePow>

Enables the reactive power measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwReactivePow> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:VOLTage:CREStfactor <ShwVoltageCrest>

Enables the voltage crest factor measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwVoltageCrest> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:VOLTage:FREQuency <ShwVoltageFreq>

Enables the voltage frequency measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwVoltageFreq> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:VOLTage:PEAK <ShwVoltagePeak>

Enables the voltage peak value measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwVoltagePeak> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:VOLTage:RMS <ShowVoltageRMS>

Enables the voltage RMS measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowVoltageRMS> OFF | ON
*RST: ON

Usage: Asynchronous command

Power quality results

See "Overview of statistic results" on page 1418.

POWer<m>:QUALity:RESult:CURRent:CRESTfactor[:ACTual]? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:AVERage? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:EVTCount? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:NPEak? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:PPEak? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:RMS? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:WFMCount? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:STDDev? 1428
POWer<m>:QUALity:RESult:CURRent:PEAK[:ACTual]? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:AVERage? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:EVTCount? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:NPEak? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:PPEak? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:RMS? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:WFMCount? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:STDDev? 1429
POWer<m>:QUALity:RESult:CURRent:RMS[:ACTual]? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:AVERage? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:EVTCount? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:NPEak? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:PPEak? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:RMS? 1429

POWer<m>:QUALity:RESult:CURRent:RMS:WFMCount? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:STDDev? 1429
POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]? 1429
POWer<m>:QUALity:RESult:POWer:ACTive:AVERage? 1429
POWer<m>:QUALity:RESult:POWer:ACTive:EVTCount? 1429
POWer<m>:QUALity:RESult:POWer:ACTive:NPEak? 1429
POWer<m>:QUALity:RESult:POWer:ACTive:PPEak? 1430
POWer<m>:QUALity:RESult:POWer:ACTive:RMS? 1430
POWer<m>:QUALity:RESult:POWer:ACTive:WFMCount? 1430
POWer<m>:QUALity:RESult:POWer:ACTive:STDDev? 1430
POWer<m>:QUALity:RESult:POWer:APParent[:ACTual]? 1430
POWer<m>:QUALity:RESult:POWer:APParent:AVERage? 1430
POWer<m>:QUALity:RESult:POWer:APParent:EVTCount? 1430
POWer<m>:QUALity:RESult:POWer:APParent:NPEak? 1430
POWer<m>:QUALity:RESult:POWer:APParent:PPEak? 1430
POWer<m>:QUALity:RESult:POWer:APParent:RMS? 1430
POWer<m>:QUALity:RESult:POWer:APParent:WFMCount? 1430
POWer<m>:QUALity:RESult:POWer:APParent:STDDev? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor[:ACTual]? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:AVERage? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:EVTCount? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:NPEak? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:PPEak? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:RMS? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:WFMCount? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:STDDev? 1430
POWer<m>:QUALity:RESult:POWer:PHASe[:ACTual]? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:AVERage? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:EVTCount? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:NPEak? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:PPEak? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:RMS? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:WFMCount? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:STDDev? 1431
POWer<m>:QUALity:RESult:POWer:REACtive[:ACTual]? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:AVERage? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:EVTCount? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:NPEak? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:PPEak? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:RMS? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:WFMCount? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:STDDev? 1431
POWer<m>:QUALity:RESult:VOLTage:CREStfactor[:ACTual]? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:AVERage? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:EVTCount? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:NPEak? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:PPEak? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:RMS? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:WFMCount? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:STDDev? 1432

POWer<m>:QUALity:RESult:VOLTage:FREQuency[:ACTual]? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:AVERage? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:EVTCount? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:NPEak? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:PPEak? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:RMS? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:WFMCount? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:STDDev? 1432
POWer<m>:QUALity:RESult:VOLTage:PEAK[:ACTual]? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:AVERage? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:EVTCount? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:NPEak? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:PPEak? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:RMS? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:WFMCount? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:STDDev? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS[:ACTual]? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:AVERage? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:EVTCount? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:NPEak? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:PPEak? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:RMS? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:WFMCount? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:STDDev? 1433

POWer<m>:QUALity:RESult:CURRent:CREStfactor[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:AVERage?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:EVTCount?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:NPEak?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:PPEak?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:RMS?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:WFMCount?
POWer<m>:QUALity:RESult:CURRent:CREStfactor:STDDev?

Returns the current crest factor, the *Peak value / RMS value* for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:CURRent:PEAK[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:PEAK:AVERage?
POWer<m>:QUALity:RESult:CURRent:PEAK:EVTCount?
POWer<m>:QUALity:RESult:CURRent:PEAK:NPEak?
POWer<m>:QUALity:RESult:CURRent:PEAK:PPEak?
POWer<m>:QUALity:RESult:CURRent:PEAK:RMS?
POWer<m>:QUALity:RESult:CURRent:PEAK:WFMCount?
POWer<m>:QUALity:RESult:CURRent:PEAK:STDDev?

Returns the current peak value, the highest measured magnitude value for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:CURRent:RMS[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:RMS:AVERage?
POWer<m>:QUALity:RESult:CURRent:RMS:EVTCount?
POWer<m>:QUALity:RESult:CURRent:RMS:NPEak?
POWer<m>:QUALity:RESult:CURRent:RMS:PPEak?
POWer<m>:QUALity:RESult:CURRent:RMS:RMS?
POWer<m>:QUALity:RESult:CURRent:RMS:WFMCount?
POWer<m>:QUALity:RESult:CURRent:RMS:STDDev?

Returns the root mean square of the current for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]?
POWer<m>:QUALity:RESult:POWer:ACTive:AVERage?
POWer<m>:QUALity:RESult:POWer:ACTive:EVTCount?
POWer<m>:QUALity:RESult:POWer:ACTive:NPEak?

POWer<m>:QUALity:RESult:POWer:ACTive:PPEak?
POWer<m>:QUALity:RESult:POWer:ACTive:RMS?
POWer<m>:QUALity:RESult:POWer:ACTive:WFMCount?
POWer<m>:QUALity:RESult:POWer:ACTive:STDDev?

Returns the active power for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:APParent[:ACTual]?
POWer<m>:QUALity:RESult:POWer:APParent:AVERage?
POWer<m>:QUALity:RESult:POWer:APParent:EVTCount?
POWer<m>:QUALity:RESult:POWer:APParent:NPEak?
POWer<m>:QUALity:RESult:POWer:APParent:PPEak?
POWer<m>:QUALity:RESult:POWer:APParent:RMS?
POWer<m>:QUALity:RESult:POWer:APParent:WFMCount?
POWer<m>:QUALity:RESult:POWer:APParent:STDDev?

Returns the apparent power for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:PFACtor[:ACTual]?
POWer<m>:QUALity:RESult:POWer:PFACtor:AVERage?
POWer<m>:QUALity:RESult:POWer:PFACtor:EVTCount?
POWer<m>:QUALity:RESult:POWer:PFACtor:NPEak?
POWer<m>:QUALity:RESult:POWer:PFACtor:PPEak?
POWer<m>:QUALity:RESult:POWer:PFACtor:RMS?
POWer<m>:QUALity:RESult:POWer:PFACtor:WFMCount?
POWer<m>:QUALity:RESult:POWer:PFACtor:STDDev?

Returns the power factor for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:PHASe[:ACTual]?
POWer<m>:QUALity:RESult:POWer:PHASe:AVERage?
POWer<m>:QUALity:RESult:POWer:PHASe:EVTCount?
POWer<m>:QUALity:RESult:POWer:PHASe:NPEak?
POWer<m>:QUALity:RESult:POWer:PHASe:PPEak?
POWer<m>:QUALity:RESult:POWer:PHASe:RMS?
POWer<m>:QUALity:RESult:POWer:PHASe:WFMCount?
POWer<m>:QUALity:RESult:POWer:PHASe:STDDev?

Returns the phase for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:REACtive[:ACTual]?
POWer<m>:QUALity:RESult:POWer:REACtive:AVERage?
POWer<m>:QUALity:RESult:POWer:REACtive:EVTCount?
POWer<m>:QUALity:RESult:POWer:REACtive:NPEak?
POWer<m>:QUALity:RESult:POWer:REACtive:PPEak?
POWer<m>:QUALity:RESult:POWer:REACtive:RMS?
POWer<m>:QUALity:RESult:POWer:REACtive:WFMCount?
POWer<m>:QUALity:RESult:POWer:REACtive:STDDev?

Returns the reactive power for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:CRESTfactor[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:AVERage?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:EVTCount?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:NPEak?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:PPEak?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:RMS?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:WFMCount?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:STDDev?

Returns the voltage crest factor, the *Peak value / RMS value* for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:FREQuency[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:AVERage?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:EVTCount?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:NPEak?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:PPEak?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:RMS?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:WFMCount?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:STDDev?

Returns the voltage frequency value for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:PEAK[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:PEAK:AVERage?
POWer<m>:QUALity:RESult:VOLTage:PEAK:EVTCount?
POWer<m>:QUALity:RESult:VOLTage:PEAK:NPEak?
POWer<m>:QUALity:RESult:VOLTage:PEAK:PPEak?
POWer<m>:QUALity:RESult:VOLTage:PEAK:RMS?
POWer<m>:QUALity:RESult:VOLTage:PEAK:WFMCount?
POWer<m>:QUALity:RESult:VOLTage:PEAK:STDDev?

Returns the voltage peak value, the highest measured magnitude value for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:RMS[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:RMS:AVERage?
POWer<m>:QUALity:RESult:VOLTage:RMS:EVTCount?
POWer<m>:QUALity:RESult:VOLTage:RMS:NPEak?
POWer<m>:QUALity:RESult:VOLTage:RMS:PPEak?
POWer<m>:QUALity:RESult:VOLTage:RMS:RMS?
POWer<m>:QUALity:RESult:VOLTage:RMS:WFMCount?
POWer<m>:QUALity:RESult:VOLTage:RMS:STDDev?

Returns the root mean square of the voltage for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

18.17.3.3 Power harmonics

- Power harmonics setup....1434
- Power harmonics results....1439

Power harmonics setup

POWer<m>:HARMonics:SOURce:CURRent....1434
POWer<m>:HARMonics:SOURce[:VOLTage]....1434
POWer<m>:HARMonics:STANdard....1435
POWer<m>:HARMonics:REVision....1435
POWer<m>:HARMonics:FREQuency:EN....1435
POWer<m>:HARMonics:FREQuency:MIL....1436
POWer<m>:HARMonics:FREQuency:RTCA....1436
POWer<m>:HARMonics:DISPlay:HARMonics[:DISPlay]....1436
POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE....1437
POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue]....1437
POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue]....1437
POWer<m>:HARMonics:RPOWer[:MODE]....1437
POWer<m>:HARMonics:RPOWer:USER....1438
POWer<m>:HARMonics:PFACtor:USER....1438
POWer<m>:HARMonics:PFACtor[:MODE]....1439

POWer<m>:HARMonics:SOURce:CURRent <CurrentSource>

Sets the channel for the current source input of the power harmonics analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current" on page 409

POWer<m>:HARMonics:SOURce[:VOLTage] <VoltageSource>

Sets the channel for the voltage source input of the power harmonics analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VoltageSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage" on page 409

POWer<m>:HARMonics:STANdard <Standard>

Sets a standard for the current harmonic measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Standard> ENA | ENB | ENC | END | MIL | RTCA
ENA: EN 61000-3-2 Class A
ENB: EN 61000-3-2 Class B
ENC: EN 61000-3-2 Class C
END: EN 61000-3-2 Class D
MIL: MIL-STD-1399
RTCA: RTCA DO-160
*RST: ENA

Usage: Asynchronous command

Manual operation: See "Standard" on page 409

POWer<m>:HARMonics:REVision <Revision>

Selects the revision of the EN61000 standard, if POWer<m>:HARMonics:STANdard is set to ENA / ENB / ENC / END.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Revision> REV2011 | REV2019
*RST: REV2019

Usage: Asynchronous command

Manual operation: See "Standard" on page 409

POWer<m>:HARMonics:FREQuency:EN <FundFreqEN61000>

Sets the fundamental frequency of the input signal for the EN61000 standard, if POWer<m>:HARMonics:STANdard is set to ENA / ENB / ENC / END.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundFreqEN61000> F50 | F60 | AUTO
F50: 50 Hz
F60: 60 Hz
AUTO: automatically set
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 410

POWer<m>:HARMonics:FREQuency:MIL <FundFreqMIL>

Sets the fundamental frequency of the input signal for the MIL standard, if `POWer<m>:HARMonics:STANdard` is set to `MIL`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundFreqMIL> F60 | F400

`F60`: 60 Hz
`F400`: 400 Hz

*RST: F60

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 410

POWer<m>:HARMonics:FREQuency:RTCA <FundamFreqRTCA>

Sets the fundamental frequency of the input signal for the RTCA standard, if `POWer<m>:HARMonics:STANdard` is set to `RTCA`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundFreqRTCA> F400 | NVF | WVF

`F400`: 400 Hz
`NVF`
`WVF`

*RST: F400

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 410

POWer<m>:HARMonics:DISPlay:HARMonics[:DISPlay] <DispedHarmonics>

Selects which harmonics are displayed in the bar graph: all, odd even or depending on the standard definition.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<DispedHarmonics> ALL | EVEN | ODD | STANdard

*RST: STANdard

Usage: Asynchronous command

Manual operation: See "Displ. harmonics" on page 411

POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE <Scaling>

Selects a logarithmic or linear scale for the display for the harmonics bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Scaling> LIN | LOG
*RST: LIN

Usage: Asynchronous command

Manual operation: See "Scale type" on page 411

POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] <BarGraphStart>

Sets the first harmonic to be shown in the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<BarGraphStart> Range: 1 to 37
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Start harmonic, Max harmonic" on page 411

POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] <BarGraphStop>

Sets the last harmonic to be shown in the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<BarGraphStop> Range: 3 to 40
Increment: 1
*RST: 40

Usage: Asynchronous command

Manual operation: See "Start harmonic, Max harmonic" on page 411

POWer<m>:HARMonics:RPOWer[:MODE] <ActPowMd>

Available if `POWer<m>:HARMonics:STANdard` is set to `END`.

Selects if the power factor is defined automatically, or a user-defined value is used (POWer<m>:HARMonics:RPOWer:USER).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ActPowMd> AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 410

POWer<m>:HARMonics:RPOWer:USER <UsrActPow>

Selects the revision of the EN61000 standard, if POWer<m>:HARMonics:STANdard is set to END and POWer<m>:HARMonics:RPOWer:USER is set to USER.

Sets a user-defined power value.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrActPow> Range: 0 to 10000
Increment: 1
*RST: 100
Default unit: W

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 410

POWer<m>:HARMonics:PFACtor:USER <UsrPowFact>

Available if POWer<m>:HARMonics:STANdard is set to ENC and POWer<m>:HARMonics:PFACtor[:MODE] is set to USER.

Sets a user-defined power factor.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrPowFact> Range: 0 to 100
Increment: 1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Power factor" on page 410

POWer<m>:HARMonics:PFACtor[:MODE] <PowFactMd>

Available if `POWer<m>:HARMonics:STANdard` is set to `ENC`.

Selects if the power factor is defined automatically, or a user-defined value is used (`POWer<m>:HARMonics:PFACtor:USER`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<PowFactMd> AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Power factor" on page 410

Power harmonics results

POWer<m>:HARMonics:AVAilable? 1439
POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]? 1439
POWer<m>:HARMonics:MEASurement:POWer:ACTive[:ACTual]? 1440
POWer<m>:HARMonics:MEASurement:THDFundament[:ACTual]? 1440
POWer<m>:HARMonics:MEASurement:THDRms[:ACTual]? 1440
POWer<m>:HARMonics:RESult<n>:VIOLation? 1440
POWer<m>:HARMonics:RESult<n>[:FREQuency]? 1441
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MAXimum? 1441
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MINimum? 1441
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent[:ACTual]? 1441
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MAXimum? 1442
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MINimum? 1442
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS[:ACTual]? 1442

POWer<m>:HARMonics:AVAilable?

Returns the number of measured harmonics.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Count>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]?

Returns the frequency of measured harmonics.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:POWer:ACTive[:ACTual]?

Returns the active power. Only available, if `POWer<m>:HARMonics:STANdard` on page 1435 is set to `ENC / END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:THDFundament[:ACTual]?

Returns the total harmonic distortion relative to fundamental (THDF).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:THDRms[:ACTual]?

Returns the total harmonic distortion relative to the RMS amplitude (THD RMS).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:VIOLation?

Queries if the value of n-th harmonic is within the defined limit for the current measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>[:FREQuency]?

Returns the frequency of the n-th harmonic.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MAXimum?

Returns the maximum magnitude of the n-th harmonic in percent.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MINimum?

Returns the minimum magnitude of the n-th harmonic in percent.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent[:ACTual]?

Returns the magnitude of the n-th harmonic in percent.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MAXimum?

Returns the maximum magnitude of the n-th harmonic in RMS.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MINimum?

Returns the minimum magnitude of the n-th harmonic in RMS.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS[:ACTual]?

Returns the magnitude of the n-th harmonic in RMS.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

18.17.3.4 Switching loss

- Switching loss setup....1443
- Switching loss display....1446
- Switching loss results....1447

Switching loss setup

POWer<m>:SWITching:SOURce:CURRent....1443
POWer<m>:SWITching:SOURce[:VOLTage]....1443
POWer<m>:SWITching:DISPlay:TYPE....1444
POWer<m>:SWITching:REGion:TOTal[:STARt]....1444
POWer<m>:SWITching:REGion:TON[:STARt]....1444
POWer<m>:SWITching:REGion:TON:STOP....1444
POWer<m>:SWITching:REGion:CONDuction[:STARt]....1444
POWer<m>:SWITching:REGion:CONDuction:STOP....1445
POWer<m>:SWITching:REGion:TOFF[:STARt]....1445
POWer<m>:SWITching:REGion:TOFF:STOP....1445
POWer<m>:SWITching:REGion:NCONduction[:STARt]....1445
POWer<m>:SWITching:REGion:NCONduction:STOP....1445
POWer<m>:SWITching:REGion:TOTal:STOP....1445

POWer<m>:SWITching:SOURce:CURRent <SourceCurrent>

Selects the current source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SourceCurrent> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current" on page 416

POWer<m>:SWITching:SOURce[:VOLTage] <SourceVoltage>

Selects the voltage source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SourceVoltage> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage" on page 416

POWer<m>:SWITching:DISPlay:TYPE <Unit>

Selects the measurement type: power or energy.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Unit> POWer | ENERgy
*RST: POWer

Usage: Asynchronous command

Manual operation: See "Unit" on page 416

POWer<m>:SWITching:REGion:TOTal[:STARt] <T1Position>
POWer<m>:SWITching:REGion:TON[:STARt] <T1Position>

Sets the start time for the turn on area in relation to the trigger point. This value is also the start time of the total switching cycle.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T1Position> Range: -500 to 500
Increment: 1E-09
*RST: -1E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 416

POWer<m>:SWITching:REGion:TON:STOP <T2Position>
POWer<m>:SWITching:REGion:CONDuction[:STARt] <T2Position>

Sets the start time for the conduction area in relation to the trigger point. This value is also end time of the turn on area.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T2Position> Range: -500 to 500
Increment: 1E-09
*RST: 1E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 416

POWer<m>:SWITching:REGion:CONDuction:STOP <T3Position>
POWer<m>:SWITching:REGion:TOFF[:STARt] <T3Position>

Sets the start time for the turn off area in relation to the trigger point. This value is also the end time of the conduction area.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T3Position>
Range: -500 to 500
Increment: 1E-09
*RST: 5E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 416

POWer<m>:SWITching:REGion:TOFF:STOP <T4Position>
POWer<m>:SWITching:REGion:NCONduction[:STARt] <T4Position>

Sets the start time for the non-conduction area in relation to the trigger point. This value is also the end time of the turn off area.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T4Position>
Range: -500 to 500
Increment: 1E-09
*RST: 6E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 416

POWer<m>:SWITching:REGion:NCONduction:STOP <T5Position>
POWer<m>:SWITching:REGion:TOTal:STOP <T5Position>

Sets the end time for the non-conduction area in relation to the trigger point. This value is also the end of the total switching cycle.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T5Position>
Range: -500 to 500
Increment: 1E-09
*RST: 1E-05
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 416

Switching loss display

POWer<m>:SWITching:DISPlay:CONDuction[:ENABle] 1446
POWer<m>:SWITching:DISPlay:NCONduction[:ENABle] 1446
POWer<m>:SWITching:DISPlay:TOFF[:ENABle] 1446
POWer<m>:SWITching:DISPlay:TON[:ENABle] 1446
POWer<m>:SWITching:DISPlay:CONDuction:COLor 1446
POWer<m>:SWITching:DISPlay:NCONduction:COLor 1446
POWer<m>:SWITching:DISPlay:TOFF:COLor 1446
POWer<m>:SWITching:DISPlay:TON:COLor 1446
POWer<m>:SWITching:DISPlay:TOTal[:ENABle] 1447
POWer<m>:SWITching:DISPlay:LABel[:ENABle] 1447

POWer<m>:SWITching:DISPlay:CONDuction[:ENABle] <Show>
POWer<m>:SWITching:DISPlay:NCONduction[:ENABle] <Show>
POWer<m>:SWITching:DISPlay:TOFF[:ENABle] <Show>
POWer<m>:SWITching:DISPlay:TON[:ENABle] <Show>

The commands enable the measurements of the conduction area, non-conduction area, turn off area and turn on area, respectively. Results of enabled mesurements are shown in the result table.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Show> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Turn on" on page 417

POWer<m>:SWITching:DISPlay:CONDuction:COLor <Color>
POWer<m>:SWITching:DISPlay:NCONduction:COLor <Color>
POWer<m>:SWITching:DISPlay:TOFF:COLor <Color>
POWer<m>:SWITching:DISPlay:TON:COLor <Color>

The commands set the display color of the conduction area, non-conduction area, turn off area and turn on area, respectively.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Color> Decimal value of the ARGB color. Use the color dialog on the instrument to get the hex value of the color, and convert the hex value to a decimal value.
0 is fully transparent black.
4278190080 (dec) = FF000000 (hex) is opaque black.
4294967295 (dec) = FFFFFFFF (hex) is opaque white.

Range: 0 to 4294967295
Increment: 1

Usage: Asynchronous command

Manual operation: See "Turn on" on page 417

Reset values:

Conduction	2030010343
Non-conduction	2023358259
Turn off	2030002176
Turn on	2026077439

POWer<m>:SWITching:DISPlay:TOTal[:ENABle] <ShowTotal>

Enables the measurements of the total switching cycle.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowTotal> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Total" on page 418

POWer<m>:SWITching:DISPlay:LABel[:ENABle] <ShowLabel>

Displays the names of the switching cycle areas.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowLabel> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Area label" on page 418

Switching loss results

See "Overview of statistic results" on page 1418.

POWer<m>:SWITching:RESult:CONDuction:ENERgy[:ACTual]? 1449
POWer<m>:SWITching:RESult:CONDuction:POWer[:ACTual]? 1449
POWer<m>:SWITching:RESult:NCONduction:ENERgy[:ACTual]? 1449
POWer<m>:SWITching:RESult:NCONduction:POWer[:ACTual]? 1449
POWer<m>:SWITching:RESult:TOFF:ENERgy[:ACTual]? 1449
POWer<m>:SWITching:RESult:TOFF:POWer[:ACTual]? 1449
POWer<m>:SWITching:RESult:TON:ENERgy[:ACTual]? 1449

POWer<m>:SWITching:RESult:TON:POWer[:ACTual]?....1449
POWer<m>:SWITching:RESult:TOTal:ENERgy[:ACTual]?....1449
POWer<m>:SWITching:RESult:TOTal:POWer[:ACTual]?....1449
POWer<m>:SWITching:RESult:CONDuction:ENERgy:AVERage?....1449
POWer<m>:SWITching:RESult:CONDuction:POWer:AVERage?....1449
POWer<m>:SWITching:RESult:NCONduction:ENERgy:AVERage?....1449
POWer<m>:SWITching:RESult:NCONduction:POWer:AVERage?....1450
POWer<m>:SWITching:RESult:TOFF:ENERgy:AVERage?....1450
POWer<m>:SWITching:RESult:TOFF:POWer:AVERage?....1450
POWer<m>:SWITching:RESult:TON:ENERgy:AVERage?....1450
POWer<m>:SWITching:RESult:TON:POWer:AVERage?....1450
POWer<m>:SWITching:RESult:TOTal:ENERgy:AVERage?....1450
POWer<m>:SWITching:RESult:TOTal:POWer:AVERage?....1450
POWer<m>:SWITching:RESult:CONDuction:ENERgy:EVTCount?....1450
POWer<m>:SWITching:RESult:CONDuction:POWer:EVTCount?....1450
POWer<m>:SWITching:RESult:NCONduction:ENERgy:EVTCount?....1450
POWer<m>:SWITching:RESult:NCONduction:POWer:EVTCount?....1450
POWer<m>:SWITching:RESult:TOFF:ENERgy:EVTCount?....1450
POWer<m>:SWITching:RESult:TOFF:POWer:EVTCount?....1450
POWer<m>:SWITching:RESult:TON:ENERgy:EVTCount?....1450
POWer<m>:SWITching:RESult:TON:POWer:EVTCount?....1450
POWer<m>:SWITching:RESult:TOTal:ENERgy:EVTCount?....1450
POWer<m>:SWITching:RESult:TOTal:POWer:EVTCount?....1450
POWer<m>:SWITching:RESult:CONDuction:ENERgy:NPEak?....1450
POWer<m>:SWITching:RESult:CONDuction:POWer:NPEak?....1450
POWer<m>:SWITching:RESult:NCONduction:ENERgy:NPEak?....1450
POWer<m>:SWITching:RESult:NCONduction:POWer:NPEak?....1450
POWer<m>:SWITching:RESult:TOFF:ENERgy:NPEak?....1450
POWer<m>:SWITching:RESult:TOFF:POWer:NPEak?....1450
POWer<m>:SWITching:RESult:TON:ENERgy:NPEak?....1451
POWer<m>:SWITching:RESult:TON:POWer:NPEak?....1451
POWer<m>:SWITching:RESult:TOTal:ENERgy:NPEak?....1451
POWer<m>:SWITching:RESult:TOTal:POWer:NPEak?....1451
POWer<m>:SWITching:RESult:CONDuction:ENERgy:PPEak?....1451
POWer<m>:SWITching:RESult:CONDuction:POWer:PPEak?....1451
POWer<m>:SWITching:RESult:NCONduction:ENERgy:PPEak?....1451
POWer<m>:SWITching:RESult:NCONduction:POWer:PPEak?....1451
POWer<m>:SWITching:RESult:TOFF:ENERgy:PPEak?....1451
POWer<m>:SWITching:RESult:TOFF:POWer:PPEak?....1451
POWer<m>:SWITching:RESult:TON:ENERgy:PPEak?....1451
POWer<m>:SWITching:RESult:TON:POWer:PPEak?....1451
POWer<m>:SWITching:RESult:TOTal:ENERgy:PPEak?....1451
POWer<m>:SWITching:RESult:TOTal:POWer:PPEak?....1451
POWer<m>:SWITching:RESult:CONDuction:ENERgy:RMS?....1451
POWer<m>:SWITching:RESult:CONDuction:POWer:RMS?....1451
POWer<m>:SWITching:RESult:NCONduction:ENERgy:RMS?....1451
POWer<m>:SWITching:RESult:NCONduction:POWer:RMS?....1451
POWer<m>:SWITching:RESult:TOFF:ENERgy:RMS?....1451
POWer<m>:SWITching:RESult:TOFF:POWer:RMS?....1451
POWer<m>:SWITching:RESult:TON:ENERgy:RMS?....1451

POWer<m>:SWITching:RESult:TON:POWer:RMS?....1451
POWer<m>:SWITching:RESult:TOTal:ENERgy:RMS?....1452
POWer<m>:SWITching:RESult:TOTal:POWer:RMS?....1452
POWer<m>:SWITching:RESult:CONDuction:ENERgy:STDDev?....1452
POWer<m>:SWITching:RESult:CONDuction:POWer:STDDev?....1452
POWer<m>:SWITching:RESult:NCONduction:ENERgy:STDDev?....1452
POWer<m>:SWITching:RESult:NCONduction:POWer:STDDev?....1452
POWer<m>:SWITching:RESult:TOFF:ENERgy:STDDev?....1452
POWer<m>:SWITching:RESult:TOFF:POWer:STDDev?....1452
POWer<m>:SWITching:RESult:TON:ENERgy:STDDev?....1452
POWer<m>:SWITching:RESult:TON:POWer:STDDev?....1452
POWer<m>:SWITching:RESult:TOTal:ENERgy:STDDev?....1452
POWer<m>:SWITching:RESult:TOTal:POWer:STDDev?....1452
POWer<m>:SWITching:RESult:CONDuction:ENERgy:WFMCount?....1452
POWer<m>:SWITching:RESult:CONDuction:POWer:WFMCount?....1452
POWer<m>:SWITching:RESult:NCONduction:ENERgy:WFMCount?....1452
POWer<m>:SWITching:RESult:NCONduction:POWer:WFMCount?....1452
POWer<m>:SWITching:RESult:TOFF:ENERgy:WFMCount?....1452
POWer<m>:SWITching:RESult:TOFF:POWer:WFMCount?....1452
POWer<m>:SWITching:RESult:TON:ENERgy:WFMCount?....1452
POWer<m>:SWITching:RESult:TON:POWer:WFMCount?....1452
POWer<m>:SWITching:RESult:TOTal:ENERgy:WFMCount?....1453
POWer<m>:SWITching:RESult:TOTal:POWer:WFMCount?....1453

POWer<m>:SWITching:RESult:CONDuction:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:CONDuction:POWer[:ACTual]?
POWer<m>:SWITching:RESult:NCONduction:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:NCONduction:POWer[:ACTual]?
POWer<m>:SWITching:RESult:TOFF:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:TOFF:POWer[:ACTual]?
POWer<m>:SWITching:RESult:TON:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:TON:POWer[:ACTual]?
POWer<m>:SWITching:RESult:TOTal:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:TOTal:POWer[:ACTual]?

Return the current result value of the selected measurement type.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:AVERage?
POWer<m>:SWITching:RESult:CONDuction:POWer:AVERage?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:AVERage?

POWer<m>:SWITching:RESult:NCONduction:POWer:AVERage?
POWer<m>:SWITching:RESult:TOFF:ENERgy:AVERage?
POWer<m>:SWITching:RESult:TOFF:POWer:AVERage?
POWer<m>:SWITching:RESult:TON:ENERgy:AVERage?
POWer<m>:SWITching:RESult:TON:POWer:AVERage?
POWer<m>:SWITching:RESult:TOTal:ENERgy:AVERage?
POWer<m>:SWITching:RESult:TOTal:POWer:AVERage?

Return the average value of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Average> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:CONDuction:POWer:EVTCount?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:NCONduction:POWer:EVTCount?
POWer<m>:SWITching:RESult:TOFF:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:TOFF:POWer:EVTCount?
POWer<m>:SWITching:RESult:TON:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:TON:POWer:EVTCount?
POWer<m>:SWITching:RESult:TOTal:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:TOTal:POWer:EVTCount?

Return the number of calculated measurement results of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Count> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:NPEak?
POWer<m>:SWITching:RESult:CONDuction:POWer:NPEak?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:NPEak?
POWer<m>:SWITching:RESult:NCONduction:POWer:NPEak?
POWer<m>:SWITching:RESult:TOFF:ENERgy:NPEak?
POWer<m>:SWITching:RESult:TOFF:POWer:NPEak?

POWer<m>:SWITching:RESult:TON:ENERgy:NPEak?
POWer<m>:SWITching:RESult:TON:POWer:NPEak?
POWer<m>:SWITching:RESult:TOTal:ENERgy:NPEak?
POWer<m>:SWITching:RESult:TOTal:POWer:NPEak?

Return the negative peak value (minimum) of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MinPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:PPEak?
POWer<m>:SWITching:RESult:CONDuction:POWer:PPEak?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:PPEak?
POWer<m>:SWITching:RESult:NCONduction:POWer:PPEak?
POWer<m>:SWITching:RESult:TOFF:ENERgy:PPEak?
POWer<m>:SWITching:RESult:TOFF:POWer:PPEak?
POWer<m>:SWITching:RESult:TON:ENERgy:PPEak?
POWer<m>:SWITching:RESult:TON:POWer:PPEak?
POWer<m>:SWITching:RESult:TOTal:ENERgy:PPEak?
POWer<m>:SWITching:RESult:TOTal:POWer:PPEak?

Return the positive peak value (maximum) of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MaxPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:RMS?
POWer<m>:SWITching:RESult:CONDuction:POWer:RMS?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:RMS?
POWer<m>:SWITching:RESult:NCONduction:POWer:RMS?
POWer<m>:SWITching:RESult:TOFF:ENERgy:RMS?
POWer<m>:SWITching:RESult:TOFF:POWer:RMS?
POWer<m>:SWITching:RESult:TON:ENERgy:RMS?
POWer<m>:SWITching:RESult:TON:POWer:RMS?

POWer<m>:SWITching:RESult:TOTal:ENERgy:RMS?
POWer<m>:SWITching:RESult:TOTal:POWer:RMS?

Return the RMS value of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<RMS> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:STDDev?
POWer<m>:SWITching:RESult:CONDuction:POWer:STDDev?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:STDDev?
POWer<m>:SWITching:RESult:NCONduction:POWer:STDDev?
POWer<m>:SWITching:RESult:TOFF:ENERgy:STDDev?
POWer<m>:SWITching:RESult:TOFF:POWer:STDDev?
POWer<m>:SWITching:RESult:TON:ENERgy:STDDev?
POWer<m>:SWITching:RESult:TON:POWer:STDDev?
POWer<m>:SWITching:RESult:TOTal:ENERgy:STDDev?
POWer<m>:SWITching:RESult:TOTal:POWer:STDDev?

Return the standard deviation of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:CONDuction:POWer:WFMCount?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:NCONduction:POWer:WFMCount?
POWer<m>:SWITching:RESult:TOFF:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:TOFF:POWer:WFMCount?
POWer<m>:SWITching:RESult:TON:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:TON:POWer:WFMCount?

POWer<m>:SWITching:RESult:TOTal:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:TOTal:POWer:WFMCount?

Return the number of calculated waveforms of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformsCount> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.17.3.5 Turn on/off time

- Turn on/off setup....1453
- Turn on/off display....1456
- Turn on/off results....1456

Turn on/off setup

POWer<m>:ONOFf:INPut:AC:ABSolute[:VALue]....1453
POWer<m>:ONOFf:INPut:DC:ABSolute[:VALue]....1454
POWer<m>:ONOFf:INPut:TYPE....1454
POWer<m>:ONOFf:INPut[:SOURce]....1454
POWer<m>:ONOFf:ONUMber....1454
POWer<m>:ONOFf:OUTPut<n>:DC:ABSolute[:VALue]....1455
POWer<m>:ONOFf:OUTPut<n>:DISPlay:RESult[:ENABle]....1455
POWer<m>:ONOFf:OUTPut<n>[:SOURce]....1455
POWer<m>:ONOFf[:TYPE]....1456

POWer<m>:ONOFf:INPut:AC:ABSolute[:VALue] <InputACThreshold>

Sets the threshold for the AC input signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputACThreshold> Range: 0 to 1E+26
Increment: 0.001
*RST: 1
Default unit: V

Usage: Asynchronous command

Manual operation: See "AC threshold" on page 423

POWer<m>:ONOFf:INPut:DC:ABSolute[:VALue] <InputDCThreshold>

Sets the threshold for the DC input signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputDCThreshold> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 1
Default unit: V

Usage: Asynchronous command

Manual operation: See "DC threshold" on page 422

POWer<m>:ONOFf:INPut:TYPE <InputType>

Selects whether the input signal is AC or CD.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputType> DC | AC
*RST: DC

Usage: Asynchronous command

Manual operation: See "Input type" on page 422

POWer<m>:ONOFf:INPut[:SOURce] <InputSource>

Selects the source waveform of the input signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Input source" on page 422

POWer<m>:ONOFf:ONUMber <OutputCount>

Sets the number of outputs to be used in the measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<OutputCount>

Usage: Asynchronous command

POWer<m>:ONOFf:OUTPut<n>:DC:ABSolute[:VALue] <OutDCThreshold>

Sets the threshold for the selected output signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, index of the output signal (4-channel instrument).
1..7, index of the output signal (8-channel instrument).

Parameters:
<OutDCThreshold> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 1
Default unit: V

Usage: Asynchronous command

Manual operation: See "DC threshold" on page 423

POWer<m>:ONOFf:OUTPut<n>:DISPlay:RESult[:ENABle] <Enable>

Activates the indicated output line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, index of the output signal (4-channel instrument).
1..7, index of the output signal (8-channel instrument).

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable output" on page 423

POWer<m>:ONOFf:OUTPut<n>[:SOURce] <OutputSource>

Selects the channel of the output signal. All analog channels except for the input channel can be used. Each channel can be used only once.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, index of the output signal (4-channel instrument).
1..7, index of the output signal (8-channel instrument).

Parameters:
<OutputSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Example: `POW2:ONOF:OUTP3 C4`
Sets the 3rd output to channel 4.

Usage: Asynchronous command

Manual operation: See "Output source" on page 423

POWer<m>:ONOFf[:TYPE] <Mode>

Selects the turn on or turn off measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Mode> TON | TOFF
*RST: TON

Usage: Asynchronous command

Manual operation: See "Mode" on page 422

Turn on/off display

POWer<m>:ONOFf:OUTPut<n>:DISPlay:RLINe[:ENABle] <Display>

Enables the result lines for the selected output.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, index of the output signal (4-channel instrument).
1..7, index of the output signal (8-channel instrument).

Parameters:
<Display> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Result line <n>" on page 424

Turn on/off results

POWer<m>:ONOFf:RESult<n>:TIME[:ACTual]?

Returns the measured turn-on time or turn-off time of the specified input-output pair.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..*
Index of the output signal.

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.17.3.6 Power efficiency

- Efficiency setup 1457
- Efficiency gate 1459
- Efficiency display 1459
- Efficiency results 1460

Efficiency setup

POWer<m>:EFFiciency:INPut<n>:CURRent[:SOURce] 1457
POWer<m>:EFFiciency:INPut<n>:VOLTage[:SOURce] 1457
POWer<m>:EFFiciency:INPut<n>[:TYPE] 1458
POWer<m>:EFFiciency:ONUMber? 1458
POWer<m>:EFFiciency:OUTPut<n>:CURRent[:SOURce] 1458
POWer<m>:EFFiciency:OUTPut<n>:VOLTage[:SOURce] 1459
POWer<m>:EFFiciency:OUTPut<n>[:TYPE] 1459

POWer<m>:EFFiciency:INPut<n>:CURRent[:SOURce] <SourceCurrent>

Selects the current source waveform of the input line.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:

<SourceCurrent> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current (Input)" on page 427

POWer<m>:EFFiciency:INPut<n>:VOLTage[:SOURce] <SourceVoltage>

Selects the voltage source waveform of the input line.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:

<SourceVoltage> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage (Input)" on page 427

POWer<m>:EFFiciency:INPut<n>[:TYPE] <Type>

Selects the type of the current flow: AC or DC.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<Type> DC | AC
*RST: DC

Usage: Asynchronous command

Manual operation: See "Input type" on page 427

POWer<m>:EFFiciency:ONUMber? [MAX]

Returns the number of available outputs.

You can query the maximum value with `<command>? MAX`.

The maximum number of output lines is *Number of channels / 2 - 1*.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<OutputCount> Number of outputs

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:OUTPut<n>:CURRent[:SOURce] <SourceCurrent>

Selects the current source waveform of the selected output line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, output index
Suffix >1 requires an instrument with more than 4 channels.

Parameters:
<SourceCurrent> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current (Output)" on page 428

POWer<m>:EFFiciency:OUTPut<n>:VOLTage[:SOURce] <SourceVoltage>

Selects the voltage source waveform of the selected output line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, output index
Suffix >1 requires an instrument with more than 4 channels.

Parameters:
<SourceVoltage> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage (Output)" on page 428

POWer<m>:EFFiciency:OUTPut<n>[:TYPE] <Type>

Selects the type of the current flow: AC or DC.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, output index
Suffix >1 requires an instrument with more than 4 channels.

Parameters:
<Type> DC | AC
*RST: DC

Usage: Asynchronous command

Manual operation: See "Output type" on page 428

Efficiency gate

POWer<m>:EFFiciency:GATE <Gate>

Sets the gate for the specified efficiency analysis. Configure the gate before you can assign it. Make sure that the suffix matches the power effciency measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Gate> 0 to 8, index of the assigned gate. The value 0 indicates that no gate is assigned.

Usage: Asynchronous command

Efficiency display

POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:EFFiciency[:ENABle] 1460
POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:POWer[:ENABle] 1460

POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:EFFiciency[:ENABle]....1460
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:OPOWer[:ENABle]....1460

POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:EFFiciency[:ENABle] <Show>
POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:POWer[:ENABle] <Show>

The commands enable the power and efficiency measurements of the selected output line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, output index
Suffix >1 requires an instrument with more than 4 channels.

Parameters:
<Show> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:EFFiciency[:ENABle] <Show>
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:OPOWer[:ENABle] <Show>

The commands enable the total power and efficiency measurements of the selected output line. These measurements require an instrument with more than 4 channels.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<Show> OFF | ON
*RST: ON

Usage: Asynchronous command

Efficiency results

See "Overview of statistic results" on page 1418.

POWer<m>:EFFiciency:RESult:INPut:POWer[:ACTual]?....1461
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency[:ACTual]?....1461
POWer<m>:EFFiciency:RESult:TOTal:OPOWer[:ACTual]?....1461
POWer<m>:EFFiciency:RESult:INPut:POWer:AVERage?....1461
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:AVERage?....1461
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:AVERage?....1461
POWer<m>:EFFiciency:RESult:INPut:POWer:EVTCount?....1462
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:EVTCount?....1462
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:EVTCount?....1462
POWer<m>:EFFiciency:RESult:INPut:POWer:NPEak?....1462
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:NPEak?....1462

POWer<m>:EFFiciency:RESult:TOTal:OPOWer:NPEak? 1462
POWer<m>:EFFiciency:RESult:INPut:POWer:PPEak? 1462
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:PPEak? 1462
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:PPEak? 1462
POWer<m>:EFFiciency:RESult:INPut:POWer:RMS? 1463
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:RMS? 1463
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:RMS? 1463
POWer<m>:EFFiciency:RESult:INPut:POWer:STDDev? 1463
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:STDDev? 1463
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:STDDev? 1463
POWer<m>:EFFiciency:RESult:INPut:POWer:WFMCount? 1463
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:WFMCount? 1463
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:WFMCount? 1463

POWer<m>:EFFiciency:RESult:INPut:POWer[:ACTual]?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency[:ACTual]?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer[:ACTual]?

Return the current result value for input power, total efficiency and total output power.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:AVERage?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:AVERage?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:AVERage?

Return the average value for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Average> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:EVTCount?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:EVTCount?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:EVTCount?

Return the number of calculated measurement results for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Count> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:NPEak?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:NPEak?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:NPEak?

Return the negative peak value (minimum) for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MinPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:PPEak?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:PPEak?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:PPEak?

Return the npositive peak value (maximum) for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MaxPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:RMS?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:RMS?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:RMS?

Return the RMS value for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<RMS> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:STDDev?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:STDDev?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:STDDev?

Return the standard deviation for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:WFMCount?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:WFMCount?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:WFMCount?

Return the number of calculated waveforms for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformsCount> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.17.3.7 Safe operating area (SOA)

- SOA setup....1464
- SOA mask....1465
- SOA actions....1470
- SOA results....1472

SOA setup

POWer<m>:SOA:MTESt<n>:IMEXport:NAME <Name>

Sets the path, the filename and the file format of the mask file.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<Name> String with path and file name with extension `.xml`.

Usage: Asynchronous command

Manual operation: See "Save mask" on page 433

POWer<m>:SOA:MTESt<n>:IMEXport:OPEN

Opens and loads the mask selected by `POWer<m>:SOA:MTESt<n>:IMEXport:NAME`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 434

POWer<m>:SOA:MTESt<n>:IMEXport:SAVE

Saves the mask test to the file selected by `POWer<m>:SOA:MTESt<n>:IMEXport:NAME`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Usage: Event
Asynchronous command

Manual operation: See "Save mask" on page 433

POWer<m>:SOA:SOURce:CURRent <SourceCurrent>

Selects the current source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SourceCurrent> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current" on page 433

POWer<m>:SOA:SOURce:VOLTage <SourceVoltage>

Selects the voltage source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SourceVoltage> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage" on page 433

SOA mask

POWer<m>:SOA:LIMit:APPLy 1465
POWer<m>:SOA:LIMit:IMAX 1466
POWer<m>:SOA:LIMit:PMAX 1466
POWer<m>:SOA:LIMit:VMAX 1466
POWer<m>:SOA:MTESt<n>:SEGMent<o>:ADD 1467
POWer<m>:SOA:MTESt<n>:SEGMent<o>:COUNt? 1467
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD 1467
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:COUNt? 1468
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:REMove 1468
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:VALid? 1468
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X 1469
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y 1469
POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove 1470

POWer<m>:SOA:LIMit:APPLy

Generates a mask using the given maximum values. The result is mask segment in the first quadrant of the XY-diagram.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Generate mask" on page 436

POWer<m>:SOA:LIMit:IMAX <CurrentMax>

Sets the maximum current for the mask.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentMax>
Range: 0 to 1E+26
Increment: 0.001
*RST: 1
Default unit: A

Usage: Asynchronous command

Manual operation: See "I max" on page 436

POWer<m>:SOA:LIMit:PMAX <PowerMax>

Sets the maximum power for the mask.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<PowerMax>
Range: 0 to 1E+26
Increment: 0.001
*RST: 50
Default unit: W

Usage: Asynchronous command

Manual operation: See "P max" on page 436

POWer<m>:SOA:LIMit:VMAX <VoltageMax>

Sets the maximum voltage for the mask.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VoltageMax>
Range: 0 to 1E+26
Increment: 0.001
*RST: 100
Default unit: V

Usage: Asynchronous command

Manual operation: See "U max" on page 436

POWer<m>:SOA:MTESt<n>:SEGMent<o>:ADD

Adds a new segment to the SOA mask. Consider the order of the segments (1, 2, 3, 4) and use the next free segment index. If the specified segment index already exists, the given number is ignored and the new segment gets the next free index.

The new segment has no points. Use `POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD` to add the points.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

Usage: Setting only
Asynchronous command

Manual operation: See "Add segment" on page 435

POWer<m>:SOA:MTESt<n>:SEGMent<o>:COUNt?

Returns the number of segments that belong to the SOA mask.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> Irrelevant, omit the suffix.

Return values:

<Count> Number of the mask segments

Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Add segment" on page 435

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD

Adds a corner point to the selected mask segment at the next free suffix. The new point has the coordinates 0;0.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> Index is ignored.

Usage: Setting only
Asynchronous command

Manual operation: See "Add +" on page 435

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:COUNt? [MAX]

Returns the number of points that was added to the indicated mask segment.

You can query the maximum value with `<command>? MAX`.

Suffix:
<m> 1..*
<n> *
<o> *
<p> *

Return values:
<Count> Number of defined points

Usage: Query only
Asynchronous command

Manual operation: See "Add +" on page 435

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:REMove

Deletes the specified corner point of the mask segment. When a point is deleted, the remaining points are reordered similar to segment deletion (`POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove`).

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> Irrelevant, omit the suffix.
<o> 1...4, index of the segment.
<p> 1...9, point index

Usage: Setting only
Asynchronous command

Manual operation: See "Add +" on page 435

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:VALid?

Checks the validity of the selected point.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> 1...9, point index

Return values:

<Valid> OFF | ON

ON = valid
OFF = invalid

*RST: ON

Usage: Query only
Asynchronous command

Manual operation: See "Add +" on page 435

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X <X>

Sets the horizontal position of the selected point.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> 1...4, index of the segment.

Parameters:

<X> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Edit segments" on page 435

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y <Y>

Sets the vertical position of the selected point.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> 1...4, index of the segment.

Parameters:

<Y> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Edit segments" on page 435

POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove

Deletes the specified mask segment. When a segment is deleted, the remaining segments are reordered. For example, there are 3 segments (1, 2, 3). When you delete segment 2, then segment 3 gets the index 2.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

Usage: Setting only
Asynchronous command

Manual operation: See "Add segment" on page 435

SOA actions

POWer<m>:SOA:MTESt<n>:ONViolation:BEEP 1470
POWer<m>:SOA:MTESt<n>:ONViolation:SCReenshot 1470
POWer<m>:SOA:MTESt<n>:ONViolation:STOP 1471
POWer<m>:SOA:MTESt<n>:ONViolation:TRIGgerout 1471
POWer<m>:SOA:MTESt<n>:ONViolation:WFMSave 1472

POWer<m>:SOA:MTESt<n>:ONViolation:BEEP <Beep>

Generates a beep sound if the command is set to `SUCCess` or `VIOLation`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<Beep> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Beep" on page 365

POWer<m>:SOA:MTESt<n>:ONViolation:SCReenshot <SaveScreenshot>

Saves the waveform data to file if the command is set to `SUCCess` or `VIOLation`.

To configure the screenshot settings, use the commands described in Section 18.13.8, "Screenshots", on page 1294.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> Irrelevant, omit the suffix.

Parameters:
<SaveScreenshot> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Screenshot" on page 366

POWer<m>:SOA:MTESt<n>:ONViolation:STOP <StopAcq>

Stops the running acquisition if the command is set to `SUCCess` or `VIOLation`.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> Irrelevant, omit the suffix.

Parameters:
<StopAcq> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 365

POWer<m>:SOA:MTESt<n>:ONViolation:TRIGgerout <TrigOutPls>

Sends an outgoing pulse to the [Trigger Out] connector if the command is set to `SUCCess` or `VIOLation`.

To configure the pulse, user the following commands:

- `TRIGger:ACTions:OUT:SOURce` on page 1214
- `TRIGger:ACTions:OUT:POLarity` on page 1215
- `TRIGger:ACTions:OUT:DELay` on page 1214
- `TRIGger:ACTions:OUT:PLENgth` on page 1214

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> Irrelevant, omit the suffix.

Parameters:
<TrigOutPls> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Trigger out pulse" on page 366

POWer<m>:SOA:MTESt<n>:ONViolation:WFMSave <SaveWfm>

Saves the waveform data to file if the command is set to `SUCCess` or `VIOLation`.

To define the path and file names, use the EXPort:WAVeform:AUTonaming:* commands:

- `EXPort:WAVeform:AUTonaming:NAME` on page 1285
- `EXPort:WAVeform:AUTonaming:PATH` on page 1286
- `EXPort:WAVeform:AUTonaming:TYPE` on page 1286

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<SaveWfm> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save wfm" on page 365

SOA results

POWer<m>:SOA:RESult<n>:COUNt:FWAVeforms? 1472
POWer<m>:SOA:RESult<n>:COUNt:PWAVeforms? 1472
POWer<m>:SOA:RESult<n>:COUNt:WAVeforms? 1473
POWer<m>:SOA:RESult<n>:FRATe? 1473
POWer<m>:SOA:RESult<n>[:RESult]? 1473

POWer<m>:SOA:RESult<n>:COUNt:FWAVeforms?

Returns the number of acquisitions that have failed the mask test, they hit the mask limits.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<AcqsFailed> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SOA:RESult<n>:COUNt:PWAVeforms?

Returns the number of acquisitions that have passed the mask test without violation.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<AcqsPassed> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SOA:RESult<n>:COUNt:WAVeforms?

Returns the number of tested acquisitions (waveforms).

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<AcqsCompleted> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SOA:RESult<n>:FRATe?

Returns the ratio of failed acquisitions to the number of tested acquisitions.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<FailRate> *RST: 0
Default unit: %

Usage: Query only
Asynchronous command

POWer<m>:SOA:RESult<n>[:RESult]?

Returns the summary test status.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<TestResult> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

18.17.3.8 Power waveform

POWer<m>:EFFiciency:DISPlay:WAVeform:INPut<n>:POWer[:ENABle] 1474
POWer<m>:EFFiciency:DISPlay:WAVeform:OUTPut<n>:POWer[:ENABle] 1474
POWer<m>:EFFiciency:DISPlay:WAVeform:TOTal<n>:OPOWer[:ENABle] 1474
POWer<m>:HARMonics:DISPlay:POWer:WAVeform:ENABle 1474
POWer<m>:QUALity:DISPlay:POWer:WAVeform:ENABle 1474
POWer<m>:SWITching:DISPlay:POWer:WAVeform[:ENABle] 1474
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet 1475
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet 1475
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:OFFSet 1475
POWer<m>:HARMonics:POWer:VERTical:OFFSet 1475
POWer<m>:QUALity:POWer:VERTical:OFFSet 1475
POWer<m>:SWITching:POWer:VERTical:OFFSet 1475
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE 1475
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE 1475
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe:MODE 1475
POWer<m>:HARMonics:POWer:VERTical:SCALe:MODE 1475
POWer<m>:QUALity:POWer:VERTical:SCALe:MODE 1475
POWer<m>:SWITching:POWer:VERTical:SCALe:MODE 1475
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue] 1476
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue] 1476
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe[:VALue] 1476
POWer<m>:HARMonics:POWer:VERTical:SCALe[:VALue] 1476
POWer<m>:QUALity:POWer:VERTical:SCALe[:VALue] 1476
POWer<m>:SWITching:POWer:VERTical:SCALe[:VALue] 1476

POWer<m>:EFFiciency:DISPlay:WAVeform:INPut<n>:POWer[:ENABle] <State>
POWer<m>:EFFiciency:DISPlay:WAVeform:OUTPut<n>:POWer[:ENABle] <State>
POWer<m>:EFFiciency:DISPlay:WAVeform:TOTal<n>:OPOWer[:ENABle] <State>
POWer<m>:HARMonics:DISPlay:POWer:WAVeform:ENABle <State>
POWer<m>:QUALity:DISPlay:POWer:WAVeform:ENABle <State>
POWer<m>:SWITching:DISPlay:POWer:WAVeform[:ENABle] <State>

Displays or hides the specified power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> INPut and TOTal index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Display" on page 443

POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:HARMonics:POWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:QUALity:POWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:SWITching:POWer:VERTical:OFFSet <VerticalOffset>

Sets the vertical offset of the power waveform if the relevant `POWer<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> INPut and TOTal index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<VerticalOffset>
Range: -100000000000000 to 100000000000000
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Offset" on page 444

POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:HARMonics:POWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:QUALity:POWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:SWITching:POWer:VERTical:SCALe:MODE <VertSclMd>

Selects the scaling mode for display of the power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> INPut and TOTal index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<VertSclMd> MANual | AUTO

AUTO
The instrument selects the most appropriate scale.

MANual
You can change the vertical scale and offset.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Scale mode" on page 444

POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue]
<VerticalScale>
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue]
<VerticalScale>
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe[:VALue]
<VerticalScale>
POWer<m>:HARMonics:POWer:VERTical:SCALe[:VALue] <VerticalScale>
POWer<m>:QUALity:POWer:VERTical:SCALe[:VALue] <VerticalScale>
POWer<m>:SWITching:POWer:VERTical:SCALe[:VALue] <VerticalScale>

Sets the vertical scale of the power waveform if the relevant `POWer<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> INPut and TOTal index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<VerticalScale>
Range: 1E-12 to 100000000000000
Increment: 1E-05
*RST: 0.5
Default unit: V

Usage: Asynchronous command

Manual operation: See "Scale" on page 444

18.17.3.9 Reference level

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1477
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1477
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis....1477
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis....1477
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel....1478
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel....1478
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel....1478
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel....1478
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel....1478
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel....1478
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel....1478
POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel....1478
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel....1479
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel....1479
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel....1479
POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel....1479
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe....1479

POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe ... 1479
POWer<m>:HARMonics:REFLevel<rl>:LMODe ... 1479
POWer<m>:QUALity:REFLevel<rl>:LMODe ... 1479
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis ... 1479
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis ... 1479
POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis ... 1480
POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis ... 1480
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer ... 1480
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer ... 1480
POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer ... 1480
POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer ... 1480
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle ... 1480
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle ... 1480
POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDle ... 1481
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle ... 1481
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE ... 1481
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE ... 1481
POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE ... 1481
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE ... 1481
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer ... 1482
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer ... 1482
POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer ... 1482
POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer ... 1482

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:

<m>	1 to 6, index of the power analysis measurement
<rl>	Irrelevant, omit the suffix.
<n>	INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<HystAbs>	Range: 0 to 1E+26 Increment: 0.001 *RST: 0.005 Default unit: V
Usage:	Asynchronous command
Manual operation:	See "Hysteresis" on page 441

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

Sets the lower reference level in absolute values. This is required, e.g., to determine a fall.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<rl> Irrelevant, omit the suffix.
<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<LowerLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 439

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>

Sets the middle reference level in absolute values.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<rl> Irrelevant, omit the suffix.
<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<MiddleLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 439

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>

Sets the upper reference level in absolute values. This is required to determine a rise.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<rl> Irrelevant, omit the suffix.
<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<UpperLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 439

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe <LevelMode>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe <LevelMode>
POWer<m>:HARMonics:REFLevel<rl>:LMODe <LevelMode>
POWer<m>:QUALity:REFLevel<rl>:LMODe <LevelMode>

Defines if the reference level is set in absolute or relative values.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<rl> Irrelevant, omit the suffix.
<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<LevelMode>
ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Level mode" on page 438

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis <HystRel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis <HystRel>

POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis <HystRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis <HystRel>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<HystRel>
Range: 0 to 50
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 441

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer <LowRefLevRel>

Sets the lower relative reference level if `POWer<m>:QUALity:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<LowRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 440

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>

POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>

Sets the middle relative reference level if `POWer<m>:QUALity:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<MidRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 440

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE <RelativeLevels>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE <RelativeLevels>
POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE <RelativeLevels>
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE <RelativeLevels>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<RelativeLevels> FIVE | TEN | TWENty | USER

FIVE
5/50/95

TEN
10/50/90

TWENty
20/50/80

USER
Set the reference levels to individual values with `POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer`, `POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle`, and `POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer`.

*RST: TEN

Usage: Asynchronous command

Manual operation: See "Relative levels" on page 440

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer <UppRefLevRel>

Sets the upper relative reference level if `POWer<m>:QUALity:REFLevel<rl>:RELative:MODE` on page 1481 is set to `USER`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<UppRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 90
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 440

18.17.3.10 Power analysis data

This section describes the commands for exporting power analysis measurement data.

POWer<m>:EFFiciency:INPut<n>:POWer:DATA:HEADer? 1482
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA:HEADer? 1482
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA:HEADer? 1482
POWer<m>:HARMonics:POWer:DATA:HEADer? 1483
POWer<m>:QUALity:POWer:DATA:HEADer? 1483
POWer<m>:SWITching:POWer:DATA:HEADer? 1483
POWer<m>:EFFiciency:INPut<n>:POWer:DATA[:VALues]? 1483
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA[:VALues]? 1483
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA[:VALues]? 1483
POWer<m>:HARMonics:POWer:DATA[:VALues]? 1483
POWer<m>:QUALity:POWer:DATA[:VALues]? 1483
POWer<m>:SWITching:POWer:DATA[:VALues]? 1483

POWer<m>:EFFiciency:INPut<n>:POWer:DATA:HEADer?
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA:HEADer?
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA:HEADer?

POWer<m>:HARMonics:POWer:DATA:HEADer?
POWer<m>:QUALity:POWer:DATA:HEADer?
POWer<m>:SWITching:POWer:DATA:HEADer?

Returns the header of the power analysis waveform data. The header contains the attributes of the waveform.

For power harmonics measurements, data is only available if `POWer<m>:HARMonics:STANdard` is set to `ENC` or `END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<XStart> 1. header value: start time in s

<XStop> 2. header value: end time in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For power quality measurements, the value is 1.

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:INPut<n>:POWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:HARMonics:POWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:QUALity:POWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:SWITching:POWer:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the power analysis waveform points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Query parameters:
<Offset> Number of offset waveform points to be skipped.

<Length> Number of waveform points to be retrieved.

Return values:
<Data> List of comma-separated values according to the format and content settings.

Usage: Query only
Asynchronous command

18.17.4 3-phase power analysis (option R&S MXO5-K333)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- 3-phase general settings....1484
- 3-phase power quality....1485
- 3-phase power harmonics....1500
- 3-phase power efficiency....1507
- 3-phase power motor drive....1511
- 3-phase power electrical sources....1529
- 3-phase power electrical waveforms....1535
- 3-phase reference level....1540
- 3-phase power analysis data....1546

18.17.4.1 3-phase general settings

P3PHase<m>[:ENABle]....1484
P3PHase<m>:TYPE....1484
EXPort:RESult:SELect:P3PHase<m>....1485

P3PHase<m>[:ENABle] <State>

Enables the 3-phase power measurement instance.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "+ Add" on page 446

P3PHase<m>:TYPE <Type>

Sets the type for the respective 3-phase power analysis measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Type> P3Quality | P3Harmonics | P3EFficiency | P3Motordrive

P3Quality = 3-phase power quality
P3Harmonics = 3-phase power harmonics
P3EFficiency = 3-phase power efficiency
P3Motordrive = 3-phase motor drive

Example: `P3PH1:TYPE P3Q`
Sets the first power analysis measurement to quality.

Usage: Asynchronous command

Manual operation: See "+ Add" on page 446

EXPort:RESult:SELect:P3PHase<m> <ExportResults>

If enabled, includes the results of selected 3-phase power analysis measurement in the results export file.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ExportResults> OFF | ON
*RST: OFF

Usage: Asynchronous command

18.17.4.2 3-phase power quality

- 3-phase power quality setup 1485
- 3-phase phasor diagram 1486
- 3-phase power quality measurement display 1487
- 3-phase power quality results 1491

3-phase power quality setup

P3PHase<m>:QUALity:FREQuency[:VALue] 1485
P3PHase<m>:QUALity:FREQuency:USER 1486

P3PHase<m>:QUALity:FREQuency[:VALue] <FundamFreq>

Sets the input frequency of the source signal in Hz.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamFreq> F50 | F60 | F400 | USER | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 457

P3PHase<m>:QUALity:FREQuency:USER <UsrFundamFreq>

Sets the horizontal timebase to control the time scale of the waveform display.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrFundamFreq> Range: 10 to 1000000
Increment: 1
*RST: 50
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "User Frequency" on page 457

3-phase phasor diagram

P3PHase<m>:QUALity:PHASor[:ENABle] 1486
P3PHase<m>:QUALity:PHASor:VOLTage:OFFSet 1486
P3PHase<m>:QUALity:PHASor:CURRent:OFFSet 1486
P3PHase<m>:QUALity:PHASor:VOLTage:MAXimum 1487
P3PHase<m>:QUALity:PHASor:CURRent:MAXimum 1487
P3PHase<m>:QUALity:PHASor:FSCReen 1487

P3PHase<m>:QUALity:PHASor[:ENABle] <State>

Enables the phasor measurement for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 458

P3PHase<m>:QUALity:PHASor:VOLTage:OFFSet <VoltageOffset>
P3PHase<m>:QUALity:PHASor:CURRent:OFFSet <CurrentOffset>

Sets the inner point of the phasor diagram.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentOffset> Range: -100000 to 100000
Increment: 0.1
*RST: 0
Default unit: A

Usage: Asynchronous command

Manual operation: See "Offset" on page 458

P3PHase<m>:QUALity:PHASor:VOLTage:MAXimum <VoltageMaximum>
P3PHase<m>:QUALity:PHASor:CURRent:MAXimum <CurrentMaximum>

Sets the outer circumference of the phasor diagram.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentMaximum>
Range: -100000 to 100000
Increment: 0.1
*RST: 3
Default unit: A

Usage: Asynchronous command

Manual operation: See "Maximum" on page 458

P3PHase<m>:QUALity:PHASor:FSCReen

Selects the most appropriate scale for the voltage and current phasors.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Fit to Screen" on page 458

3-phase power quality measurement display

P3PHase<m>:QUALity:DISPlay:CURRent:CREStfactor<n>[:ENABle] 1488
P3PHase<m>:QUALity:DISPlay:CURRent:PEAK<n>[:ENABle] 1488
P3PHase<m>:QUALity:DISPlay:CURRent:RMS<n>[:ENABle] 1488
P3PHase<m>:QUALity:DISPlay:POWer<n>:ACTive[:ENABle] 1488
P3PHase<m>:QUALity:DISPlay:POWer<n>:APParent[:ENABle] 1489
P3PHase<m>:QUALity:DISPlay:POWer<n>:PFACtor[:ENABle] 1489
P3PHase<m>:QUALity:DISPlay:POWer<n>:PHASe[:ENABle] 1489
P3PHase<m>:QUALity:DISPlay:POWer<n>:REACtive[:ENABle] 1490
P3PHase<m>:QUALity:DISPlay:VOLTage:CREStfactor<n>[:ENABle] 1490
P3PHase<m>:QUALity:DISPlay:VOLTage:FREQuency<n>[:ENABle] 1490
P3PHase<m>:QUALity:DISPlay:VOLTage:PEAK<n>[:ENABle] 1491
P3PHase<m>:QUALity:DISPlay:VOLTage:RMS<n>[:ENABle] 1491

P3PHase<m>:QUALity:DISPlay:CURRent:CRESTfactor<n>[:ENABle]
<DisplayState>

Enables the current crest factor measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:CURRent:PEAK<n>[:ENABle] <DisplayState>

Enables the current peak value measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:CURRent:RMS<n>[:ENABle] <DisplayState>

Enables the current RMS measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:ACTive[:ENABle] <DisplayState>

Enables the active measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:APParent[:ENABle] <DisplayState>

Enables the apparent power measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:PFACtor[:ENABle] <DisplayState>

Enables the power factor measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:PHASe[:ENABle] <DisplayState>

Enables the power phase measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:REACtive[:ENABle] <DisplayState>

Enables the reactive power measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:VOLTage:CRESTfactor<n>[:ENABle]
<DisplayState>

Enables the voltage crest factor measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:VOLTage:FREQuency<n>[:ENABle]
<DisplayState>

Enables the voltage frequency measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:VOLTage:PEAK<n>[:ENABle] <DisplayState>

Enables the voltage peak value measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:VOLTage:RMS<n>[:ENABle] <DisplayState>

Enables the voltage RMS measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

3-phase power quality results

P3PHase<m>:QUALity:RESult:CSOurce:FREQuency<n>[:ACTual]?....1492
P3PHase<m>:QUALity:RESult:CURRent:CREStfactor<n>[:ACTual]?....1492
P3PHase<m>:QUALity:RESult:TOTal:CURRent:CREStfactor<n>[:ACTual]?....1492
P3PHase<m>:QUALity:RESult:CURRent:PEAK<n>[:ACTual]?....1493
P3PHase<m>:QUALity:RESult:TOTal:CURRent:PEAK<n>[:ACTual]?....1493
P3PHase<m>:QUALity:RESult:CURRent:RMS<n>[:ACTual]?....1493
P3PHase<m>:QUALity:RESult:TOTal:CURRent:RMS<n>[:ACTual]?....1494
P3PHase<m>:QUALity:RESult:POWer:ACTive<n>[:ACTual]?....1494
P3PHase<m>:QUALity:RESult:TOTal:POWer:ACTive<n>[:ACTual]?....1494
P3PHase<m>:QUALity:RESult:POWer:APParent<n>[:ACTual]?....1495
P3PHase<m>:QUALity:RESult:TOTal:POWer:APParent<n>[:ACTual]?....1495
P3PHase<m>:QUALity:RESult:POWer:PFACtor<n>[:ACTual]?....1495
P3PHase<m>:QUALity:RESult:TOTal:POWer:PFACtor<n>[:ACTual]?....1496
P3PHase<m>:QUALity:RESult:POWer:PHASe<n>[:ACTual]?....1496
P3PHase<m>:QUALity:RESult:TOTal:POWer:PHASe<n>[:ACTual]?....1496
P3PHase<m>:QUALity:RESult:POWer:REACtive<n>[:ACTual]?....1497

P3PHase<m>:QUALity:RESult:TOTal:POWer:REACtive<n>[:ACTual]? 1497
P3PHase<m>:QUALity:RESult:VOLTage:CRESt factor<n>[:ACTual]? 1497
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:CRESt factor<n>[:ACTual]? 1498
P3PHase<m>:QUALity:RESult:VOLTage:PEAK<n>[:ACTual]? 1498
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:PEAK<n>[:ACTual]? 1498
P3PHase<m>:QUALity:RESult:VOLTage:RMS<n>[:ACTual]? 1499
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:RMS<n>[:ACTual]? 1499
P3PHase<m>:QUALity:PHASor:RESult:VOLTage<n>:ANGLe[:ACTual]? 1499

P3PHase<m>:QUALity:RESult:CSOurce:FREQuency<n>[:ACTual]?

Returns the cycle source frequency of each channel for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:CURRent:CRESt factor<n>[:ACTual]?

Returns the current crest factors for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:CURRent:CRESt factor<n>[:ACTual]?

Returns the current total crest factor for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:CURRent:PEAK<n>[:ACTual]?

Returns the current peak values for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:CURRent:PEAK<n>[:ACTual]?

Returns the total current peak values for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:CURRent:RMS<n>[:ACTual]?

Returns the current RMS values for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:CURRent:RMS<n>[:ACTual]?

Returns the current total RMS for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:ACTive<n>[:ACTual]?

Returns the active power for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:ACTive<n>[:ACTual]?

Returns the total active power for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:APParent<n>[:ACTual]?

Returns the apparent power for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:APParent<n>[:ACTual]?

Returns the total apparent power for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:PFACtor<n>[:ACTual]?

Returns the power factor for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:PFACtor<n>[:ACTual]?

Returns the total power factor for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:PHASe<n>[:ACTual]?

Returns the phase values for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:PHASe<n>[:ACTual]?

Returns the total phase value for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:REACtive<n>[:ACTual]?

Returns the reactive power for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:REACtive<n>[:ACTual]?

Returns the total reactive power for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:VOLTage:CREStfactor<n>[:ACTual]?

Returns the voltage crest factors for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:VOLTage:CREStfactor<n>[:ACTual]?

Returns the total voltage crest factor for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:VOLTage:PEAK<n>[:ACTual]?

Returns the voltage peak values for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:VOLTage:PEAK<n>[:ACTual]?

Returns the total voltage peak value for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:VOLTage:RMS<n>[:ACTual]?

Returns the voltage RMS values for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:VOLTage:RMS<n>[:ACTual]?

Returns the total voltage RMS value for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:PHASor:RESult:VOLTage<n>:ANGLe[:ACTual]?

Returns the voltage angle of the selected phasor phase relative to phase 1.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

18.17.4.3 3-phase power harmonics

- 3-phase power harmonics setup....1500
- 3-phase bar graph....1503
- 3-phase power harmonics results....1504

3-phase power harmonics setup

P3PHase<m>:HARMonics:STANdard....1500
P3PHase<m>:HARMonics:REVision....1500
P3PHase<m>:HARMonics:FREQuency:EN....1501
P3PHase<m>:HARMonics:FREQuency:MIL....1501
P3PHase<m>:HARMonics:PFACtor:MODE....1501
P3PHase<m>:HARMonics:PFACtor:USER....1502
P3PHase<m>:HARMonics:RPOWer:MODE....1502
P3PHase<m>:HARMonics:RPOWer:USER....1502

P3PHase<m>:HARMonics:STANdard <Limits>

Sets a standard for the current harmonic measurement.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<Limits> ENA | ENB | ENC | END | MIL

`ENA`: EN 61000-3-2 Class A
`ENB`: EN 61000-3-2 Class B
`ENC`: EN 61000-3-2 Class C
`END`: EN 61000-3-2 Class D
`MIL`: MIL-STD-1399

*RST: ENA

Usage: Asynchronous command

Manual operation: See "Standard, Revision" on page 464

P3PHase<m>:HARMonics:REVision <Revision>

Selects the revision of the EN61000 standard, if `P3PHase<m>:HARMonics:STANdard` is set to `ENA / ENB / ENC / END`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:
<Revision> REV2011 | REV2019
*RST: REV2019

Usage: Asynchronous command

Manual operation: See "Standard, Revision" on page 464

P3PHase<m>:HARMonics:FREQuency:EN <FundamFreqEN61000>

Sets the fundamental frequency of the input signal for the EN61000 standard, if `P3PHase<m>:HARMonics:STANdard` is set to `ENA / ENB / ENC / END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamFreqEN61000> F50 | F60 | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 464

P3PHase<m>:HARMonics:FREQuency:MIL <FundamFreqMIL>

Sets the fundamental frequency of the input signal for the MIL-STD-1399 standard, if `P3PHase<m>:HARMonics:STANdard` is set to `MIL`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamFreqMIL> F60 | F400
*RST: F60

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 464

P3PHase<m>:HARMonics:PFACtor:MODE <PowFactMd>

Available if `P3PHase<m>:HARMonics:STANdard` is set to `ENC`.

Selects if the power factor is defined automatically, or a user-defined value is used (`P3PHase<m>:HARMonics:PFACtor:USER`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<PowFactMd> AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Power factor" on page 465

P3PHase<m>:HARMonics:PFACtor:USER <UsrPowFact>

Available if `P3PHase<m>:HARMonics:STANdard` is set to `ENC` and `P3PHase<m>:HARMonics:PFACtor:MODE` is set to `USER`.

Sets a user-defined power factor.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrPowFact>
Range: 0 to 100
Increment: 1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Power factor" on page 465

P3PHase<m>:HARMonics:RPOWer:MODE <ActPowMd>

Available if `P3PHase<m>:HARMonics:STANdard` is set to `END`.

Selects if the power factor is defined automatically, or a user-defined value is used (`P3PHase<m>:HARMonics:RPOWer:USER`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ActPowMd> AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 465

P3PHase<m>:HARMonics:RPOWer:USER <UsrActPow>

Available if `P3PHase<m>:HARMonics:STANdard` is set to `END` and `P3PHase<m>:HARMonics:RPOWer:USER` is set to `USER`.

Sets a user-defined real power value.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:

<UsrActPow> Range: 0 to 10000
Increment: 1
*RST: 100
Default unit: W

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 465

3-phase bar graph

P3PHase<m>:HARMonics:DISPlay:BARGraph[:ENABle] 1503
P3PHase<m>:HARMonics:DISPlay:HARMonics[:DISPlay] 1503
P3PHase<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE 1503
P3PHase<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] 1504
P3PHase<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] 1504

P3PHase<m>:HARMonics:DISPlay:BARGraph[:ENABle] <State>

Displays or hides the bar graph.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 466

P3PHase<m>:HARMonics:DISPlay:HARMonics[:DISPlay] <DispedHarmonics>

Selects which harmonics are displayed in the bar graph: all, odd even or depending on the standard definition.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<DispedHarmonics> ALL | EVEN | ODD | STANdard
*RST: STANdard

Usage: Asynchronous command

Manual operation: See "Displ. harmonics" on page 466

P3PHase<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE <Scaling>

Selects a logarithmic or linear scale for the display for the harmonics bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Scaling> LIN | LOG
*RST: LIN

Usage: Asynchronous command

Manual operation: See "Scale type" on page 466

P3PHase<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] <BarGraphStart>

Sets the first harmonic to be shown in the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<BarGraphStart> Range: 1 to 37
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Start harmonic" on page 466

P3PHase<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] <BarGraphStop>

Sets the last harmonic to be shown in the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<BarGraphStop> Range: 3 to 40
Increment: 1
*RST: 40

Usage: Asynchronous command

Manual operation: See "Max harmonic" on page 466

3-phase power harmonics results

P3PHase<m>:HARMonics:AVAilable<n> 1505
P3PHase<m>:HARMonics:MEASurement:CSOurce:FREQuency<n>[:ACTual]? 1505
P3PHase<m>:HARMonics:MEASurement:POWer<n>:ACTive[:ACTual]? 1505
P3PHase<m>:HARMonics:MEASurement:THDFundament<n>[:ACTual]? 1505
P3PHase<m>:HARMonics:MEASurement:THDRms<n>[:ACTual]? 1506
P3PHase<m>:HARMonics:RESult<n>:VIOLation<o>? 1506
P3PHase<m>:HARMonics:RESult<n>[:FREQuency]? 1506
P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:PERCent[:ACTual]? 1506
P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:RMS[:ACTual]? 1507

P3PHase<m>:HARMonics:AVAilable<n>

Returns the number of measured harmonics for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:
<Count>

Usage: Asynchronous command

P3PHase<m>:HARMonics:MEASurement:CSOurce:FREQuency<n>[:ACTual]?

Returns the cycle source frequency of each channel for the 3-phase power harmonics analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:MEASurement:POWer<n>:ACTive[:ACTual]?

Returns the active power for the individual phases.. Only available, if `P3PHase<m>:HARMonics:STANdard` is set to `ENC / END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:MEASurement:THDFundament<n>[:ACTual]?

Returns the total harmonic distortion relative to fundamental (THDF) for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:MEASurement:THDRms<n>[:ACTual]?

Returns the total harmonic distortion relative to the RMS amplitude (THD RMS) for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:RESult<n>:VIOLation<o>?

Queries if the value of o-th harmonic is within the defined limit for the current measurement for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

<o> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:RESult<n>[:FREQuency]?

Returns the frequency of the n-th harmonic.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:PERCent[:ACTual]?

Returns the magnitude of the o-th harmonic in percent for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

<o> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:RMS[:ACTual]?

Returns the magnitude of the o-th harmonic as RMS for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

<o> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

18.17.4.4 3-phase power efficiency

- 3-phase power efficiency setup....1507
- 3-phase power efficiency results....1508

3-phase power efficiency setup

P3PHase<m>:EFFiciency:STATistic:ENABle....1507
P3PHase<m>:EFFiciency:STATistic:RESet....1508
P3PHase<m>:EFFiciency:STATistic:WFMCount?....1508

P3PHase<m>:EFFiciency:STATistic:ENABle <EnabStatistics>

Enable the statistical calculation for the selected 3-phase efficiency measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<EnabStatistics> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Statistics" on page 470

P3PHase<m>:EFFiciency:STATistic:RESet

Restarts the statistical calculation for the selected 3-phase efficiency measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 470

P3PHase<m>:EFFiciency:STATistic:WFMCount?

Returns the number of waveforms included in the 3-phase efficiency measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformCount>

Usage: Query only
Asynchronous command

Manual operation: See "Statistics" on page 470

3-phase power efficiency results

See "Overview of statistic results" on page 1418.

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer[:ACTual]? 1509
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer[:ACTual]? 1509
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult[:ACTual]? 1509
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:AVERage? 1509
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:AVERage? 1509
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:AVERage? 1509
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:EVTCount? 1509
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:EVTCount? 1509
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:EVTCount? 1509
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:NPEak? 1510
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:NPEak? 1510
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:NPEak? 1510
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:PPEak? 1510
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:PPEak? 1510
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:PPEak? 1510
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:RMS? 1510
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:RMS? 1510
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:RMS? 1510
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:STDDev? 1511
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:STDDev? 1511
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:STDDev? 1511

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:WFMCount?.....1511
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:WFMCount?..... 1511
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:WFMCount?.....1511

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer[:ACTual]?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer[:ACTual]?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult[:ACTual]?

Returns the current result value for the total input and output power and total efficiency.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:AVERage?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:AVERage?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:AVERage?

Returns the average value for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Average> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:EVTCount?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:EVTCount?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:EVTCount?

Returns the number of calculated measurement results for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Count> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:NPEak?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:NPEak?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:NPEak?

Returns the negative peak value (minimum) for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MinPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:PPEak?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:PPEak?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:PPEak?

Returns the positive peak value (maximum) for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MaxPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:RMS?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:RMS?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:RMS?

Returns the RMS value for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<RMS> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:STDDev?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:STDDev?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:STDDev?

Returns the standard deviation for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:WFMCount?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:WFMCount?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:WFMCount?

Returns the number of calculated waveforms for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformsCount> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.17.4.5 3-phase power motor drive

- 3-phase power motor drive setup....1511
- 3-phase motor drive mechanical sources....1513
- 3-phase motor drive mechanical tracks....1518
- 3-phase power motor drive results....1521

3-phase power motor drive setup

P3PHase<m>:MDRive:MODE....1512
P3PHase<m>:MDRive:STATistic:ENABle....1512
P3PHase<m>:MDRive:STATistic:RESet....1512
P3PHase<m>:MDRive:STATistic:WFMCount?....1512

P3PHase<m>:MDRive:MODE <Mode>

Sets the operating mode of the DUT.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Mode> MOTor | GENerator
*RST: MOTor

Usage: Asynchronous command

Manual operation: See "Mode" on page 474

P3PHase<m>:MDRive:STATistic:ENABle <EnabStatistics>

Enable the statistical calculation for the selected 3-phase motor drive measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<EnabStatistics> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Statistics" on page 474

P3PHase<m>:MDRive:STATistic:RESet

Restarts the statistical calculation for the selected 3-phase motor drive measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 475

P3PHase<m>:MDRive:STATistic:WFMCount?

Returns the number of waveforms included in the 3-phase motor drive measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformCount>

Usage: Query only
Asynchronous command

Manual operation: See "Statistics" on page 474

3-phase motor drive mechanical sources

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TYPE....1513
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TYPE....1513
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:SOURce....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:SOURce....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:LOW....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:LOW....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:HIGH....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:HIGH....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:VOLTage:LOW....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:VOLTage:LOW....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:VOLTage:HIGH....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:VOLTage:HIGH....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:FREQuency:LOW....1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:FREQuency:LOW....1515
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:FREQuency:HIGH....1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:FREQuency:HIGH....1515
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:MVVolt....1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:MVVolt....1515
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:SUPPly:VOLTage....1516
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:SUPPly:VOLTage....1516
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:TYPE....1516
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:TYPE....1516
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:SOURce....1516
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:SOURce....1516
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:UNIT....1517
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:UNIT....1517
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:PPRotation....1517
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:PPRotation....1517
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:POLE....1517
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:POLE....1517
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:GEARratio....1518
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:GEAR....1518

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TYPE <TorqueEncoderTyp>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TYPE <TorqueEncoderTyp>

Selects the type of torque sensor interface used for the torque measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<TorqueEncoderTyp> A0VDC | AMVPerv | AFRequency

A0VDC = Analog voltage input
AMVPerv = mV/V sensor input
AFRequency = Frequency input

*RST: A0VDC

Usage: Asynchronous command

Manual operation: See "Encoder" on page 475

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:SOURce <TorqueSrcSign>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:SOURce <TorqueSrcSign>

Selects the input or output source for the torque signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<TorqueSrcSign> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 476

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:LOW <TorqueLow>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:LOW <TorqueLow>
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:HIGH <TorqueHigh>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:HIGH <TorqueHigh>

Defines the high or low end of the torque scaling range.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<TorqueHigh>
Range: -1000000000000 to 1000000000000
Increment: 0.01
*RST: 1
Default unit: Nm

Usage: Asynchronous command

Manual operation: See "Low torque, High torque" on page 476

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:VOLTage:LOW <VoltageLow>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:VOLTage:LOW
<VoltageLow>
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:VOLTage:HIGH <VoltageHigh>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:VOLTage:HIGH
<VoltageHigh>

Defines the low and high end of the voltage range that corresponds to the configured torque range. Only available for `P3PHase<m>:MDRive:*:MECHanical:TORQue:TYPE` = `AFRequency`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:

<VoltageHigh>
Range: -1000000000000 to 1000000000000
Increment: 0.01
*RST: 1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Low voltage, High voltage" on page 476

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:FREQuency:LOW
<FrequencyLow>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:FREQuency:LOW
<FrequencyLow>
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:FREQuency:HIGH
<FrequencyHigh>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:FREQuency:HIGH
<FrequencyHigh>

Defines the low and high end of the frequency range that corresponds to the configured torque range. Only available for `P3PHase<m>:MDRive:*:MECHanical:TORQue:TYPE` = `A0VDC`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<FrequencyHigh>
Range: 0 to 1000000000000
Increment: 1
*RST: 1
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Low frequency, High frequency" on page 476

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:MVVolt <MilliVoltPerVolt>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:MVVolt <MilliVoltPerVolt>

Sets the sensitivity of the torque sensor in mV/V. Only available for `P3PHase<m>:MDRive:*:MECHanical:TORQue:TYPE` = `AMVPerv`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<MilliVoltPerVolt>
Range: 0 to 1000000000000
Increment: 0.01
*RST: 500
Default unit: V/V

Usage: Asynchronous command

Manual operation: See "Sensitivity" on page 476

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:SUPPly:VOLTage <SupplyVoltage>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:SUPPly:VOLTage <SupplyVoltage>

Sets the supply voltage of the torque sensor. Only available for `P3PHase<m>:MDRive:*:MECHanical:TORQue:TYPE` = `AMVPerv`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SupplyVoltage>
Range: 0 to 1000000000000
Increment: 0.01
*RST: 1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Supply voltage" on page 477

P3PHase<m>:MDRive:INPut:MECHanical:SENSor:TYPE <InputType>
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:TYPE <InputType>

Selects the type of speed sensor used for the input or output source.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputType> QUADencoder | RESolver | HALL
*RST: HALL

Usage: Asynchronous command

Manual operation: See "Input type" on page 477

P3PHase<m>:MDRive:INPut:MECHanical:SENSor:SOURce <Sources>
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:SOURce <Sources>

Depending on the speed sensor type, selects the input or output sources for the torque signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Sources> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Hall U/V/W, Quad A/B, Source sin/cos" on page 477

P3PHase<m>:MDRive:INPut:MECHanical:SPEed:UNIT <SpeedUnit>
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:UNIT <SpeedUnit>

Sets the unit of the speed input or output.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SpeedUnit> RPM | RPS | HZ
*RST: RPM

Usage: Asynchronous command

Manual operation: See "Unit" on page 477

P3PHase<m>:MDRive:INPut:MECHanical:SENSor:PPRotation <PlsPerRotation>
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:PPRotation <PlsPerRotation>

Defines the number of pulses per revolution of the quadrature encoder. Available for `P3PHase<m>:MDRive:INPut:MECHanical:SENSor:TYPE` = `QUADencoder`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<PlsPerRotation> Range: 1 to 1000000000
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Pulse/rotation" on page 478

P3PHase<m>:MDRive:INPut:MECHanical:SENSor:POLE <PolePairs>
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:POLE <PolePairs>

Defines the number of motor pole pairs used for speed calculation. Available for `P3PHase<m>:MDRive:INPut:MECHanical:SENSor:TYPE` = `RESolver` and `HALL`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<PolePairs> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Pole pairs" on page 478

P3PHase<m>:MDRive:INPut:MECHanical:SENSor:GEARratio <GearRatio>
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:GEAR <GearRatio>

Defines the gear ratio between the motor shaft and the measured mechanical input or output.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<GearRatio>
Range: 1E-12 to 1000000000000
Increment: 0.01
*RST: 1

Usage: Asynchronous command

Manual operation: See "Gear ratio" on page 478

3-phase motor drive mechanical tracks

P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:ANGLe:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:ANGLe:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:EFFiciency:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:POWer:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:POWer:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:SPEed:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:SPEed:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:TORQue:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:TORQue:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:AUTO 1519
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:AUTO 1519
P3PHase<m>:MDRive:EFFiciency:TRACk:AUTO 1519
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:AUTO 1519
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:AUTO 1519
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:AUTO 1519
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:AUTO 1519
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:AUTO 1519
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:AUTO 1519
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:OFFSet 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:OFFSet 1520
P3PHase<m>:MDRive:EFFiciency:TRACk:OFFSet 1520
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:OFFSet 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:OFFSet 1520
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:OFFSet 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:OFFSet 1520
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:OFFSet 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:OFFSet 1520
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:SCALe 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:SCALe 1520
P3PHase<m>:MDRive:EFFiciency:TRACk:SCALe 1520
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:SCALe 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:SCALe 1520

P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:SCALe..... 1520
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:SCALe.....1520
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:SCALe..... 1521
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:SCALe.....1521

P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:ANGLe:TRACk[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:ANGLe:TRACk[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:EFFiciency:TRACk[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:POWer:TRACk[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:POWer:TRACk[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:SPEed:TRACk[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:SPEed:TRACk[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:TORQue:TRACk[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:TORQue:TRACk[:ENABle] <State>

Displays or hides the specified mechanical tracks.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 478

P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:AUTO <AutoSclEnab>
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:AUTO <AutoSclEnab>
P3PHase<m>:MDRive:EFFiciency:TRACk:AUTO <AutoSclEnab>
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:AUTO <AutoSclEnab>
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:AUTO <AutoSclEnab>
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:AUTO <AutoSclEnab>
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:AUTO <AutoSclEnab>
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:AUTO <AutoSclEnab>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:AUTO <AutoSclEnab>

Enables or disables the automatic scaling for the display of the different motor drive tracks.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:

<AutoSclEnab> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Mode" on page 479

P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:EFFiciency:TRACk:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:OFFSet <VerticalOffset>

Sets the vertical offset of the different motor drive tracks if the relevant `P3PHase<m>:MDRive:*:MECHanical:*:TRACk:AUTO` command is set to `OFF`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<VerticalOffset> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Offset" on page 479

P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:SCALe <VerticalScale>
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:SCALe <VerticalScale>
P3PHase<m>:MDRive:EFFiciency:TRACk:SCALe <VerticalScale>
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:SCALe <VerticalScale>
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:SCALe <VerticalScale>
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:SCALe <VerticalScale>
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:SCALe <VerticalScale>

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:SCALe <VerticalScale>
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:SCALe <VerticalScale>

Sets the vertical scale of the different motor drive tracks if the relevant `P3PHase<m>:MDRive:*:MECHanical:*:TRACk:AUTO` command is set to `OFF`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<m> 1..*

Parameters:
<VerticalScale>
Range: 1E-26 to 1E+26
Increment: 1E-05
*RST: 0.5
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Scale" on page 479

3-phase power motor drive results

P3PHase<m>:MDRive:RESult:EFFiciency:AVERage? 1523
P3PHase<m>:MDRive:RESult:EFFiciency:EVTCount? 1523
P3PHase<m>:MDRive:RESult:EFFiciency:NPEak? 1523
P3PHase<m>:MDRive:RESult:EFFiciency:PPEak? 1523
P3PHase<m>:MDRive:RESult:EFFiciency:RMS? 1523
P3PHase<m>:MDRive:RESult:EFFiciency:STDDev? 1523
P3PHase<m>:MDRive:RESult:EFFiciency:WFMCount? 1523
P3PHase<m>:MDRive:RESult:EFFiciency[:ACTual]? 1523
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:AVERage? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:EVTCount? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:NPEak? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:PPEak? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:RMS? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:STDDev? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:WFMCount? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer[:ACTual]? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:AVERage? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:EVTCount? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:NPEak? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:PPEak? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:RMS? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:STDDev? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:WFMCount? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer[:ACTual]? 1524
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:AVERage? 1524
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:EVTCount? 1524
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:NPEak? 1524
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:PPEak? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:RMS? 1525

P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:STDDev?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:WFMCount?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration[:ACTual]?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:AVERage?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:EVTCount?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:NPEak?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:PPEak?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:RMS?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:STDDev?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:WFMCount?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration[:ACTual]?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:AVERage?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:EVTCount?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:NPEak?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:PPEak?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:RMS?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:STDDev?....1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:WFMCount?....1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe[:ACTual]?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:AVERage?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:EVTCount?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:NPEak?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:PPEak?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:RMS?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:STDDev?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:WFMCount?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe[:ACTual]?....1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:AVERage?....1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:EVTCount?....1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:NPEak?....1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:PPEak?....1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:RMS?....1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:STDDev?....1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:WFMCount?....1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer[:ACTual]?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:AVERage?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:EVTCount?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:NPEak?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:PPEak?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:RMS?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:STDDev?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:WFMCount?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer[:ACTual]?....1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:AVERage?....1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:EVTCount?....1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:NPEak?....1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:PPEak?....1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:RMS?....1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:STDDev?....1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:WFMCount?....1528

P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed[:ACTual]?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:AVERage?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:EVTCount?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:NPEak?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:PPEak?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:RMS?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:STDDev?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:WFMCount?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed[:ACTual]?....1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:AVERage?....1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:EVTCount?....1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:NPEak?....1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:PPEak?....1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:RMS?....1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:STDDev?....1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:WFMCount?....1529
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue[:ACTual]?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:AVERage?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:EVTCount?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:NPEak?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:PPEak?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:RMS?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:STDDev?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:WFMCount?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue[:ACTual]?....1529

P3PHase<m>:MDRive:RESult:EFFiciency:AVERage?
P3PHase<m>:MDRive:RESult:EFFiciency:EVTCount?
P3PHase<m>:MDRive:RESult:EFFiciency:NPEak?
P3PHase<m>:MDRive:RESult:EFFiciency:PPEak?
P3PHase<m>:MDRive:RESult:EFFiciency:RMS?
P3PHase<m>:MDRive:RESult:EFFiciency:STDDev?
P3PHase<m>:MDRive:RESult:EFFiciency:WFMCount?
P3PHase<m>:MDRive:RESult:EFFiciency[:ACTual]?

Returns the selected statistical result for the efficiency of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:AVERage?
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:EVTCount?
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:NPEak?
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:PPEak?
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:RMS?
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:STDDev?
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:WFMCount?
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer[:ACTual]?

Returns the selected statistical result for the total electrical active input power of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:AVERage?
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:EVTCount?
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:NPEak?
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:PPEak?
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:RMS?
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:STDDev?
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:WFMCount?
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer[:ACTual]?

Returns the selected statistical result for the total electrical output power of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:AVERage?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:EVTCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:NPEak?

P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:PPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:RMS?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:STDDev?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:WFMCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration[:ACTual]?

Returns the selected statistical result for the mechanical input acceleration of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:AVERage?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:EVTCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:NPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:PPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:RMS?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:STDDev?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:WFMCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration[:ACTual]?

Returns the selected statistical result for the mechanical output acceleration of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:AVERage?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:EVTCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:NPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:PPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:RMS?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:STDDev?

P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:WFMCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe[:ACTual]?

Returns the selected statistical result for the mechanical input angle of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:AVERage?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:EVTCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:NPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:PPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:RMS?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:STDDev?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:WFMCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe[:ACTual]?

Returns the selected statistical result for the mechanical output angle of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:AVERage?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:EVTCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:NPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:PPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:RMS?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:STDDev?

P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:WFMCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer[:ACTual]?

Returns the selected statistical result for the mechanical input power of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:AVERage?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:EVTCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:NPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:PPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:RMS?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:STDDev?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:WFMCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer[:ACTual]?

Returns the selected statistical result for the mechanical output power of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:AVERage?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:EVTCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:NPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:PPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:RMS?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:STDDev?

P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:WFMCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed[:ACTual]?

Returns the selected statistical result for the mechanical input speed of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:AVERage?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:EVTCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:NPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:PPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:RMS?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:STDDev?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:WFMCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed[:ACTual]?

Returns the selected statistical result for the mechanical output speed of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:AVERage?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:EVTCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:NPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:PPEak?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:RMS?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:STDDev?

P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:WFMCount?
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue[:ACTual]?

Returns the selected statistical result for the mechanical input torque of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:AVERage?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:EVTCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:NPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:PPEak?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:RMS?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:STDDev?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:WFMCount?
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue[:ACTual]?

Returns the selected statistical result for the mechanical output torque of the selected motor drive measurement.

For details on the statistics, see "Overview of statistic results" on page 1418.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

18.17.4.6 3-phase power electrical sources

P3PHase<m>:MDRive:INPut:ELECtrical:TYPE 1531
P3PHase<m>:MDRive:OUTPut:ELECtrical:TYPE 1531
P3PHase<m>:EFFiciency:INPut<n>:TYPE 1531
P3PHase<m>:EFFiciency:OUTPut<n>:TYPE 1531
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:WIRing 1531
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:WIRing 1531
P3PHase<m>:EFFiciency:INPut<n>:SOURce:WIRing 1531
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:WIRing 1531

P3PHase<m>:QUALity:SOURce:WIRing....1531
P3PHase<m>:HARMonics:SOURce:WIRing....1531
P3PHase<m>:QUALity:SOURce:INOut....1532
P3PHase<m>:HARMonics:SOURce:INOut....1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:LINes:W2V2a....1532
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:LINes:W2V2a....1532
P3PHase<m>:EFFiciency:INPut<n>:SOURce:LINes:W2V2a....1532
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:LINes:W2V2a....1532
P3PHase<m>:QUALity:SOURce:LINes:W2V2a....1532
P3PHase<m>:HARMonics:SOURce:LINes:W2V2a....1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W1V1a....1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W2V2a....1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W3V3a....1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W1V1a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W2V2a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W3V3a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W1V1a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W2V2a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3V3a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W1V1a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W2V2a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3V3a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:QUALity:SOURce:CURRent:W2V2a....1533
P3PHase<m>:QUALity:SOURce:CURRent:W3V3a....1533
P3PHase<m>:QUALity:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:HARMonics:SOURce:CURRent:W2V2a....1533
P3PHase<m>:HARMonics:SOURce:CURRent:W3V3a....1533
P3PHase<m>:HARMonics:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W1V1a....1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W2V2a....1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W3V3a....1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W3VN3a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W1V1a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W2V2a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W3V3a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W3VN3a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W1V1a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W2V2a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3V3a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3VN3a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W1V1a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W2V2a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3V3a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3VN3a....1534
P3PHase<m>:QUALity:SOURce:VOLTage:W2V2a....1534
P3PHase<m>:QUALity:SOURce:VOLTage:W3V3a....1534

P3PHase<m>:QUALity:SOURce:VOLTage:W3VN3a 1534
P3PHase<m>:HARMonics:SOURce:VOLTage:W2V2a 1534
P3PHase<m>:HARMonics:SOURce:VOLTage:W3V3a 1534
P3PHase<m>:HARMonics:SOURce:VOLTage:W3VN3a 1534
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CYCLe:SOURce 1534
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CYCLe:SOURce 1534
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:SOURce 1534
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:SOURce 1534
P3PHase<m>:QUALity:SOURce:CYCLe[:SOURce] 1534
P3PHase<m>:HARMonics:SOURce:CYCLe[:SOURce] 1534
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CYCLe:FILTer 1534
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CYCLe:FILTer 1534
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:FILTer 1535
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:FILTer 1535
P3PHase<m>:QUALity:SOURce:CYCLe:FILTer 1535
P3PHase<m>:HARMonics:SOURce:CYCLe:FILTer 1535
P3PHase<m>:MDRive:GATE 1535
P3PHase<m>:EFFiciency:GATE 1535
P3PHase<m>:QUALity:GATE 1535

P3PHase<m>:MDRive:INPut:ELECtrical:TYPE <InputType>
P3PHase<m>:MDRive:OUTPut:ELECtrical:TYPE <InputType>
P3PHase<m>:EFFiciency:INPut<n>:TYPE <InputType>
P3PHase<m>:EFFiciency:OUTPut<n>:TYPE <InputType>

Selects the type of the current flow: AC or DC.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<InputType> DC | AC
*RST: AC

Usage: Asynchronous command

Manual operation: See "Type" on page 448

P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:WIRing <Wiring>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:WIRing <Wiring>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:WIRing <Wiring>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:WIRing <Wiring>
P3PHase<m>:QUALity:SOURce:WIRing <Wiring>
P3PHase<m>:HARMonics:SOURce:WIRing <Wiring>

Configures how your probes are connected to the three-phase device. It allows you to visualize the connections for proper setup. If you can only measure on four channels, select the "W2V2A" wiring.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Wiring> W1V1A | W2V2A | W3V3A | W3VN3A
*RST: W3VN3A

Usage: Asynchronous command

Manual operation: See "Wiring" on page 448

P3PHase<m>:QUALity:SOURce:INOut <InputOutput>
P3PHase<m>:HARMonics:SOURce:INOut <InputOutput>

Configures whether the oscilloscope is configured to receive signals (input) for analysis, or to generate signals output) as a source for testing.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputOutput> INPut | OUTPut
*RST: INPut

Usage: Asynchronous command

Manual operation: See "Input/output" on page 448

P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:LINes:W2V2a <InputSelcLines>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:LINes:W2V2a <OutputSelcLines>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:LINes:W2V2a <InputSelcLines>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:LINes:W2V2a <OutputSelcLines>
P3PHase<m>:QUALity:SOURce:LINes:W2V2a <Lines>
P3PHase<m>:HARMonics:SOURce:LINes:W2V2a <LineType>

Select the configuration for your probe setup.

Selects the gate that is used for limiting the range of the 3-phase power quality measurement.

This setting is only necessary, if you have configured `P3PHase<m>:HARMonics:SOURce:WIRing` =`W2V2A`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<LineType> V12LV32L | V13LV23L | V21LV31L | V12LV23L

Usage: Asynchronous command

Manual operation: See "Select lines" on page 448

P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W1V1a <Sources>
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W3V3a <Sources>

P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W3VN3a <Sources>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W1V1a <Sources>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W3VN3a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W1V1a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3VN3a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W1V1a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3VN3a <Sources>
P3PHase<m>:QUALity:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:QUALity:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:QUALity:SOURce:CURRent:W3VN3a <Sources>
P3PHase<m>:HARMonics:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:HARMonics:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:HARMonics:SOURce:CURRent:W3VN3a <Sources>

Selects the current source waveform. Analog channels and math waveforms can be used.

Provide the sources as comma-separated values.

Suffix:

<m>	1 to 6, index of the power analysis measurement
<n>	1...3, index of the individual phase

Parameters:

<Sources>	C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Current" on page 450

P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W1V1a <Sources>
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W3VN3a <Sources>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W1V1a <Sources>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W3VN3a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W1V1a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3VN3a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W1V1a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3V3a <Sources>

P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3VN3a <Sources>
P3PHase<m>:QUALity:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:QUALity:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:QUALity:SOURce:VOLTage:W3VN3a <Sources>
P3PHase<m>:HARMonics:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:HARMonics:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:HARMonics:SOURce:VOLTage:W3VN3a <Sources>

Selects the voltage source waveform. Analog channels and math waveforms can be used.

Provide the sources as comma-separated values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<Sources> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Voltage" on page 449

P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CYCLe:SOURce <CycleSource>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CYCLe:SOURce <CycleSource>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:SOURce <CycleSource>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:SOURce <CycleSource>
P3PHase<m>:QUALity:SOURce:CYCLe[:SOURce] <CycleSource>
P3PHase<m>:HARMonics:SOURce:CYCLe[:SOURce] <CycleSource>

Selects the channel (voltage source) to serve as the timing reference for data calculations across all sources when the periods are not aligned on the x-axis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<CycleSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | TRK1 | TRK2 | TRK3 | ... | TRK24 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 451

P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CYCLe:FILTer <DigFilterLowpassCutOffFreq>
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CYCLe:FILTer <DigFilterLowpassCutOffFreq>

P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:FILTer <DigFilterLowpassCutOffFreq>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:FILTer <DigFilterLowpassCutOffFreq>
P3PHase<m>:QUALity:SOURce:CYCLe:FILTer <DigFilterLowpassCutOffFreq>
P3PHase<m>:HARMonics:SOURce:CYCLe:FILTer <DigFilterLowpassCutOffFreq>

Configures a bandwidth limitation.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<DigFilterLowpassCutOffFreq> Range: 100 to 4000000000
Increment: 1000
*RST: 10000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Cut-off" on page 451

P3PHase<m>:MDRive:GATE <Gate>
P3PHase<m>:EFFiciency:GATE <Gate>
P3PHase<m>:QUALity:GATE <Gate>

Selects the gate that is used for limiting the range of the 3-phase power quality and efficiency measurements.

Enable the gate before you assign a measurement to it (`GATE<g>:ENABle` =`ON`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

18.17.4.7 3-phase power electrical waveforms

P3PHase<m>:MDRive:DISPlay:INPut:ELECtrical:POWer<n>:WAVeform[:ENABle] 1536
P3PHase<m>:MDRive:DISPlay:OUTPut:ELECtrical:POWer<n>:WAVeform[:ENABle] 1536
P3PHase<m>:QUALity:DISPlay:POWer<n>:WAVeform[:ENABle] 1536
P3PHase<m>:HARMonics:DISPlay:POWer<n>:WAVeform[:ENABle] 1536
P3PHase<m>:MDRive:DISPlay:INPut:ELECtrical:TOTal:POWer:WAVeform[:ENABle] 1537
P3PHase<m>:MDRive:DISPlay:OUTPut:ELECtrical:TOTal:POWer:WAVeform[:ENABle] 1537
P3PHase<m>:EFFiciency:DISPlay:WAVeform:INPut:TOTal:POWer[:ENABle] 1537
P3PHase<m>:EFFiciency:DISPlay:WAVeform:OUTPut:TOTal:POWer[:ENABle] 1537
P3PHase<m>:QUALity:DISPlay:TOTal:POWer:WAVeform[:ENABle] 1537
P3PHase<m>:HARMonics:DISPlay:TOTal:POWer:WAVeform[:ENABle] 1537
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet 1537
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet 1537
P3PHase<m>:QUALity:POWer<n>:VERTical:OFFSet 1537

P3PHase<m>:HARMonics:POWer<n>:VERTical:OFFSet....1537
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:OFFSet....1537
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:OFFSet....1537
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:OFFSet....1537
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:OFFSet....1537
P3PHase<m>:QUALity:TOTal:POWer:VERTical:OFFSet....1538
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet....1538
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe:MODE....1538
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe:MODE....1538
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe[:VALue]....1539
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe[:VALue]....1539
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe[:VALue]....1539

P3PHase<m>:MDRive:DISPlay:INPut:ELECtrical:POWer<n>:WAVeform[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:OUTPut:ELECtrical:POWer<n>:WAVeform[:ENABle] <State>
P3PHase<m>:QUALity:DISPlay:POWer<n>:WAVeform[:ENABle] <State>
P3PHase<m>:HARMonics:DISPlay:POWer<n>:WAVeform[:ENABle] <State>

Displays or hides the specified power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> 1...3, index of the individual phase

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Display individual phases" on page 452

P3PHase<m>:MDRive:DISPlay:INPut:ELECtrical:TOTal:POWer:WAVeform[:ENABle] <State>
P3PHase<m>:MDRive:DISPlay:OUTPut:ELECtrical:TOTal:POWer:WAVeform[:ENABle] <State>
P3PHase<m>:EFFiciency:DISPlay:WAVeform:INPut:TOTal:POWer[:ENABle] <State>
P3PHase<m>:EFFiciency:DISPlay:WAVeform:OUTPut:TOTal:POWer[:ENABle] <State>
P3PHase<m>:QUALity:DISPlay:TOTal:POWer:WAVeform[:ENABle] <State>
P3PHase<m>:HARMonics:DISPlay:TOTal:POWer:WAVeform[:ENABle] <State>

Displays or hides the total power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Display" on page 453

P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:QUALity:POWer<n>:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:HARMonics:POWer<n>:VERTical:OFFSet <VerticalOffset>

Sets the vertical offset of the specified power waveform if the relevant `P3PHase<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<VerticalOffset>
Range: -100000000000000 to 100000000000000
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:OFFSet <VerticalOffset>

P3PHase<m>:QUALity:TOTal:POWer:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet <VerticalOffset>

Sets the vertical offset of the total power waveform if the relevant `P3PHase<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VerticalOffset> Range: -100000000000000 to 100000000000000
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Offset" on page 453

P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe:MODE <VertSclMd>

Selects the scaling mode for display of the specific power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<VertSclMd> MANual | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 453

P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>

Selects the scaling mode for display of the total power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:

<VertSclMd> MANual | AUTO

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 454

P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe[:VALue] <VerticalScale>

Sets the vertical scale of the specific power waveform if the relevant `P3PHase<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:

<VerticalScale> Range: 1E-12 to 100000000000000
Increment: 1E-05
*RST: 0.5
Default unit: VA

Usage: Asynchronous command

Manual operation: See "Scale" on page 453

P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>

Sets the vertical scale of the total power waveform if the relevant `P3PHase<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<VerticalScale>

Range: 1E-12 to 100000000000000
Increment: 1E-05
*RST: 0.5
Default unit: V

Usage: Asynchronous command

Manual operation: See "Scale" on page 454

18.17.4.8 3-phase reference level

P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:LLEVel....1541
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:LLEVel....1541
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel....1542
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel....1542
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel....1542
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel....1542
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:ULEVel....1542
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:ULEVel....1542
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel....1542
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel....1543
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel....1543
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel....1543
P3PHase<m>:MDRive:INPut:REFLevel<rl>:LMODe....1543
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:LMODe....1543
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe....1543
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe....1543
P3PHase<m>:QUALity:REFLevel<rl>:LMODe....1543
P3PHase<m>:HARMonics:REFLevel<rl>:LMODe....1543
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:LOWer....1544

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:QUALity:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:QUALity:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer....1546

P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:

<HystAbs>
Range: 0 to 1E+26
Increment: 0.001
*RST: 0.005
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 441

P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

Sets the lower reference level in absolute values. This is required, e.g., to determine a fall.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<LowerLevel> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 439

P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>

Sets the middle reference level in absolute values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<MiddleLevel> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 439

P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>

P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>

Sets the upper reference level in absolute values. This is required to determine a rise.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<UpperLevel> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 439

P3PHase<m>:MDRive:INPut:REFLevel<rl>:LMODe <LevelMode>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:LMODe <LevelMode>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe <LevelMode>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe <LevelMode>
P3PHase<m>:QUALity:REFLevel<rl>:LMODe <LevelMode>
P3PHase<m>:HARMonics:REFLevel<rl>:LMODe <LevelMode>

Defines if the reference level is set in absolute or relative values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<LevelMode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Level mode" on page 438

P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:HYSTeresis <HystRel>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:HYSTeresis <HystRel>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis <HystRel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis <HystRel>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis <HystRel>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis <HystRel>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<HystRel>
Range: 0 to 50
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 441

P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer <LowRefLevRel>

Sets the lower relative reference level if `P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<LowRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 440

P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>

Sets the middle relative reference level if `P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<MidRefLevRel> Range: -100 to 200
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 440

P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:MODE <RelativeLevels>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:MODE <RelativeLevels>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE <RelativeLevels>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE <RelativeLevels>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MODE <RelativeLevels>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE <RelativeLevels>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<RelativeLevels> FIVE | TEN | TWENty | USER

FIVE
5/50/95

TEN
10/50/90

TWENty
20/50/80

USER
Set the reference levels to individual values with `P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer`, `P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle`, and `P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer`.

*RST: TEN

Usage: Asynchronous command

Manual operation: See "Relative levels" on page 440

P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer <UppRefLevRel>

Sets the upper relative reference level if `P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<UppRefLevRel> Range: -100 to 200
Increment: 1
*RST: 90
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 440

18.17.4.9 3-phase power analysis data

This section describes the commands for exporting 3-phase power analysis measurement data.

P3PHase<m>:QUALity:POWer<n>:DATA:HEADer? 1547
P3PHase<m>:HARMonics:POWer<n>:DATA:HEADer? 1547
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:EFFiciency:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:DATA:HEADer? 1548
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:DATA:HEADer? 1548
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA:HEADer? 1548
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA:HEADer? 1548
P3PHase<m>:QUALity:TOTal:POWer:DATA:HEADer? 1548
P3PHase<m>:HARMonics:TOTal:POWer:DATA:HEADer? 1548
P3PHase<m>:QUALity:POWer<n>:DATA[:VALues]? 1548
P3PHase<m>:HARMonics:POWer<n>:DATA[:VALues]? 1548
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:DATA[:VALues]? 1549

P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:EFFiciency:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:QUALity:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:HARMonics:TOTal:POWer:DATA[:VALues]?....1550

P3PHase<m>:QUALity:POWer<n>:DATA:HEADer?
P3PHase<m>:HARMonics:POWer<n>:DATA:HEADer?

Returns the header of the 3-phase power analysis waveform data for the individual phases. The header contains the attributes of the waveform.

For power harmonics measurements, data is only available if `P3PHase<m>:HARMonics:STANdard` is set to `ENC` or `END`.

Suffix:

<m>	1 to 6, index of the power analysis measurement
<n>	1...3, index of the individual phase

Return values:

<XStart>	1. header value: start time in s
<XStop>	2. header value: end time in s
<RecordLength>	3. header value: record length of the waveform in samples
<ValsPerSmp>	4. header value: number of values per sample. For 3-phase power quality measurements, the value is 1.
Usage:	Query only Asynchronous command

P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:DATA:HEADer?
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:DATA:HEADer?
P3PHase<m>:MDRive:EFFiciency:TRACk:DATA:HEADer?
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:DATA:HEADer?
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:DATA:HEADer?
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:DATA:HEADer?
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:DATA:HEADer?
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:DATA:HEADer?
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:DATA:HEADer?

Returns the header of the 3-phase motor drive mechanical data. The header contains the attributes of the torque, speed, angle or mechanical power tracks.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<XStart> 1. header value: start time in s

<XStop> 2. header value: end time in s

<RecordLength> 3. header value: record length of the track in samples

<ValsPerSmp> 4. header value: number of values per sample.

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:DATA:HEADer?
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:DATA:HEADer?
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA:HEADer?
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA:HEADer?
P3PHase<m>:QUALity:TOTal:POWer:DATA:HEADer?
P3PHase<m>:HARMonics:TOTal:POWer:DATA:HEADer?

Returns the header of the 3-phase power analysis waveform data for the total phase. The header contains the attributes of the waveform.

For power harmonics measurements, data is only available if `P3PHase<m>:HARMonics:STANdard` is set to `ENC` or `END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<XStart> 1. header value: start time in s

<XStop> 2. header value: end time in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValsPerSmp> 4. header value: number of values per sample. For 3-phase power quality measurements, the value is 1.

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:POWer<n>:DATA[:VALues]? [<Offset>],[<Length>]
P3PHase<m>:HARMonics:POWer<n>:DATA[:VALues]? [<Offset>],[<Length>]

Returns the individual phase data of the 3-phase power analysis waveform points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Query parameters:
<Offset> Number of offset waveform points to be skipped.

<Length> Number of waveform points to be retrieved.

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:DATA[:VALues]?
[<Offset>],[<Length>]
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:DATA[:VALues]?
[<Offset>],[<Length>]
P3PHase<m>:MDRive:EFFiciency:TRACk:DATA[:VALues]? [<Offset>],[<Length>]
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:DATA[:VALues]?
[<Offset>],[<Length>]
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:DATA[:VALues]?
[<Offset>],[<Length>]
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:DATA[:VALues]?
[<Offset>],[<Length>]
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:DATA[:VALues]?
[<Offset>],[<Length>]
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:DATA[:VALues]?
[<Offset>],[<Length>]
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:DATA[:VALues]?
[<Offset>],[<Length>]

Returns the data of the different 3-phase motor drive track points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Query parameters:
<Offset> Number of offset track points to be skipped.

<Length> Number of track points to be retrieved.

Usage: Query only
Asynchronous command

P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:DATA[:VALues]? [<Offset>], [<Length>]
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:DATA[:VALues]? [<Offset>],[<Length>]
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA[:VALues]? [<Offset>], [<Length>]
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA[:VALues]? [<Offset>], [<Length>]
P3PHase<m>:QUALity:TOTal:POWer:DATA[:VALues]? [<Offset>],[<Length>]
P3PHase<m>:HARMonics:TOTal:POWer:DATA[:VALues]? [<Offset>],[<Length>]

Returns the total phase data of the 3-phase power analysis waveform points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Query parameters:
<Offset> Number of offset waveform points to be skipped.

<Length> Number of waveform points to be retrieved.

Usage: Query only
Asynchronous command

18.17.5 Digital voltmeter

This section describes the commands for setting up and querying the results of the digital voltmeter.

METer:BANDwidth 1550
METer:DVMeter<m>:ENABle? 1551
METer:DVMeter<m>:ACRMs:ENABle 1551
METer:DVMeter<m>:ACRMs:RESult? 1551
METer:DVMeter<m>:DC:ENABle 1552
METer:DVMeter<m>:DC:RESult? 1552
METer:DVMeter<m>:DCRMs:ENABle 1552
METer:DVMeter<m>:DCRMs:RESult? 1553
METer:MTIMe 1553

METer:BANDwidth <Bandwidth>

Sets the filter bandwidth.

Parameters:
<Bandwidth> B20M | B10M | B5M | B2M | B1M | B500 | B200

B20M: 20 MHz
B10M: 10 MHz
B5M: 5 MHz
B2M: 2 MHz
B1M: 1 MHz
B500: 500 kHz
B200: 200 kHz

*RST: B20M

Usage: Asynchronous command

Manual operation: See "Filter bandwidth" on page 483

METer:DVMeter<m>:ENABle?

Queries the state of the voltmeter for the respective channel.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<State> OFF | ON

*RST: OFF

Usage: Query only
Asynchronous command

METer:DVMeter<m>:ACRMs:ENABle <ACRMSResults_St>

Enables the AC RMS voltmeter measurement for the respective channel.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ACRMSResults_St> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measurements" on page 483

METer:DVMeter<m>:ACRMs:RESult?

Returns the result of the AC RMS voltmeter measurement.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<Results_ACRMS> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurements" on page 483

METer:DVMeter<m>:DC:ENABle <DCResults_St>

Enables the DC voltmeter measurement for the respective channel.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<DCResults_St> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measurements" on page 483

METer:DVMeter<m>:DC:RESult?

Returns the result of the DC voltmeter measurement.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<Results_DC> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurements" on page 483

METer:DVMeter<m>:DCRMs:ENABle <DCRMSResults_St>

Enables the DC RMS voltmeter measurement for the respective channel.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<DCRMSResults_St> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measurements" on page 483

METer:DVMeter<m>:DCRMs:RESult?

Returns the result of the DC RMS voltmeter measurement.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Results_DCRMS> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurements" on page 483

METer:MTIMe <MeasTime>

Sets the measurement time. The time begins in the moment that a measurement is enabled.

Parameters:
<MeasTime> Range: 0.05 to 1
Increment: 0.05
*RST: 0.5
Default unit: s

Usage: Asynchronous command

Manual operation: See "Measurement time" on page 483

18.17.6 XY-plot

XY<m>:SWAP 1553
XY<m>[:STATe] 1554
XY<m>:YSOurce 1554
XY<m>:XSOurce 1554

XY<m>:SWAP

Replaces the source of the x-axis with the source of the y-axis and vice versa.

Suffix:
<m> 1 to 4, index of the XY-plot

Usage: Setting only
Asynchronous command

Manual operation: See "Swap XY" on page 485

XY<m>[:STATe] <State>

Activates an XY-waveform.

Suffix:
<m> 1 to 4, index of the XY-plot

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 484

XY<m>:YSOurce <YSource>

Defines the signal source that supplies the y-values of the XY-diagram.

Suffix:
<m> 1 to 4, index of the XY-plot

Parameters:
<YSource> NONE | C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | TRK1 | TRK2 | TRK3 | ... | TRK24 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "X-source, Y-source" on page 485

XY<m>:XSOurce <XSource>

Defines the signal source that supplies the x-values of the XY-diagram.

Suffix:
<m> 1 to 4, index of the XY-plot

Parameters:
<XSource> NONE | C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | TRK1 | TRK2 | TRK3 | ... | TRK24 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "X-source, Y-source" on page 485

18.17.7 Eye analysis (option R&S MXO5-K136)

18.17.7.1 General settings

EYE<e>:DISPlay:PERSistence:INFinite....1555
EYE<e>:DISPlay:PERSistence:RESet....1555
EYE<e>:DISPlay:PERSistence:STATe....1555
EYE<e>:DISPlay:PERSistence:TIME....1556
EYE<e>:MSLices....1556
EYE<e>:QUALify:GATE....1556
EYE<e>:SAMTime....1557
EYE<e>:SOURce....1557
EYE<e>:STATe....1557
EYE<e>:TREFerence....1558

EYE<e>:DISPlay:PERSistence:INFinite <InfPersist>

If infinite persistence is ON, each new waveform point remains on the screen until this option is disabled, or the display is reset.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<InfPersist> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Infinite persistence" on page 490

EYE<e>:DISPlay:PERSistence:RESet

Resets the display, removing all waveform points.

Suffix:
<e> 1 to 8, index of the eye

Usage: Setting only
Asynchronous command

Manual operation: See "Reset" on page 490

EYE<e>:DISPlay:PERSistence:STATe <State>

If ON, each new data point in the diagram area remains on the screen for the duration that is defined using `EYE<e>:DISPlay:PERSistence:TIME`, or as long as `EYE<e>:DISPlay:PERSistence:INFinite` is ON.

If OFF, the waveform points are displayed only for the current acquisition.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 490

EYE<e>:DISPlay:PERSistence:TIME <Time>

Sets the time how long the eye points remain on the display.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Time> Range: 0.05 to 50
Increment: 0.05
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 490

EYE<e>:MSLices <MaxSliceCount>

Sets the number of waveform slices for a single acquisition.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<MaxSliceCount> Range: 1 to 2500000
Increment: 1
*RST: 2000

Usage: Asynchronous command

Manual operation: See "Slices per acquisition" on page 488

EYE<e>:QUALify:GATE <Gate>

Selects the gate, which restricts the contributing slices in horizontal direction. Only the timestamps within the defined horizontal interval qualify for eye generation.

Enable and configure a gate before you assign it (`GATE<g>:ENABle` =`ON`). The query returns 0, if no gate is assigned.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

Manual operation: See "Gate" on page 491

EYE<e>:SAMTime <SamplingTime>

Sets a sampling time for the clock signal, an offset for the clock edge in relation to the bit start.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<SamplingTime>
Range: 0 to 1
Increment: 0.0001
*RST: 0.5
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Sampling time" on page 488

EYE<e>:SOURce <Source>

Selects the waveform from which the eye diagram is generated.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Source> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8

Usage: Asynchronous command

Manual operation: See "Source" on page 487

EYE<e>:STATe <State>

Activates or deactivates the eye diagram.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 487

EYE<e>:TREFerence <TimingReference>

Selects the timing reference, which defines the reference signal and the method that are used to obtain the timing information required to slice the data source waveform.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<TimingReference> Range: 1 to 4

Usage: Asynchronous command

Manual operation: See "Timing reference" on page 487

18.17.7.2 Scale settings

EYE<e>:HORizontal:ABSolute:POSition....1558
EYE<e>:HORizontal:ABSolute:RANGe....1558
EYE<e>:HORizontal:UINTerval:POSition....1559
EYE<e>:HORizontal:UINTerval:RANGe....1559
EYE<e>:HORizontal:UNIT....1559
EYE<e>:VERTical:COUPle....1560
EYE<e>:VERTical:OFFSet....1560
EYE<e>:VERTical:POSition....1560
EYE<e>:VERTical:SCALe....1561

EYE<e>:HORizontal:ABSolute:POSition <HorizPosition>

Defines the position of the zero point in the diagram in seconds. The zero point is the alignment point on which the slice timestamps are superimposed.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<HorizPosition> Range: -100 to 100
Increment: 1 ps
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Position" on page 489

EYE<e>:HORizontal:ABSolute:RANGe <HorizRange>

Sets the time range that is covered by the eye diagram in absolute time values.

Suffix:
<e> 1 to 8, index of the eye

Parameters:

<HorizRange>
Range: 100 ps to 100 s
Increment: 4 ns
*RST: 2 ns
Default unit: s

Usage: Asynchronous command

Manual operation: See "Range" on page 489

EYE<e>:HORizontal:UINTerval:POSition <HorizPosition>

Defines the position of the zero point in the diagram in unit intervals. The zero point is the alignment point on which the slice timestamps are superimposed.

Suffix:

<e> 1 to 8, index of the eye

Parameters:

<HorizPosition>
Range: -100E+9 to 100E+9
Increment: -0.001
*RST: 0

Usage: Asynchronous command

Manual operation: See "Position" on page 489

EYE<e>:HORizontal:UINTerval:RANGe <HorizRange>

Sets the time range that is covered by the eye diagram in unit intervals.

Suffix:

<e> 1 to 8, index of the eye

Parameters:

<HorizRange>
Range: 0.1 to 100E+9
Increment: 2
*RST: 2

Usage: Asynchronous command

Manual operation: See "Range" on page 489

EYE<e>:HORizontal:UNIT <HorizontalUnit>

Sets the method to define the horizontal scale of the eye diagram: as absolute time, or in unit intervals.

Suffix:

<e> 1 to 8, index of the eye

Parameters:
<HorizontalUnit> ATIMe | UI | UINTerval
UI = UINTerval
*RST: ATIMe

Usage: Asynchronous command

Manual operation: See "Mode" on page 488

EYE<e>:VERTical:COUPle <VertCoupling>

If ON, the vertical position and scale of the source are used.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<VertCoupling> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Couple to source" on page 489

EYE<e>:VERTical:OFFSet <Offset>

Defines the vertical offset in divisions if `EYE<e>:VERTical:COUPle` is OFF. If coupling is ON, the query returns the coupled value.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Offset> Range: -100E+12 to 100E+12
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 489

EYE<e>:VERTical:POSition <VertPosition>

Defines the vertical position in divisions if `EYE<e>:VERTical:COUPle` is OFF. If coupling is ON, the query returns the coupled value.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<VertPosition> Range: -1E+26 to 1E+26
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Position" on page 489

EYE<e>:VERTical:SCALe <Scale>

Defines the vertical scale in Volts per division if `EYE<e>:VERTical:COUPle` is OFF. If coupling is ON, the query returns the coupled value.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Scale>
Range: 1E-12 to 100E+12
Increment: 4
*RST: 0.5
Default unit: V

Usage: Asynchronous command

Manual operation: See "Scale" on page 489

18.17.7.3 Filter settings

EYE<e>:FILTer:BPATtern:MODE 1561
EYE<e>:FILTer:BPATtern:NPRBits 1562
EYE<e>:FILTer:BPATtern:SEQuence 1562
EYE<e>:FILTer:RFLSet 1562
EYE<e>:FILTer:STATe 1562

EYE<e>:FILTer:BPATtern:MODE <Mode>

Selects which bits contribute to the eye generation.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Mode> TBITs | NTBits | BPATtern

TBITs
Transition bits, only bits after a signal transition contribute (0 to 1, or 1 to 0).

NTBits
Non-transition bits, only bits without a preceding signal transition contribute (0 to 0, or 1 to 1).

BPATtern
Bit pattern, only bits contribute that match the pattern defined with `EYE<e>:FILTer:BPATtern:SEQuence` and `EYE<e>:FILTer:BPATtern:NPRBits`.

*RST: TBITs

Usage: Asynchronous command

Manual operation: See "Mode" on page 492

EYE<e>:FILTer:BPATtern:NPRBits <NumPrefixBits>

Sets the number of prefix bits if `EYE<e>:FILTer:BPATtern:MODE BPATtern`.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<NumPrefixBits> Number of bits before the center eye

Range: 0 to 15
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Prefix bits" on page 493

EYE<e>:FILTer:BPATtern:SEQuence <Sequence>

Defines the bit pattern if `EYE<e>:FILTer:BPATtern:MODE BPATtern`.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Sequence> List of comma-separated bit values

Usage: Asynchronous command

Manual operation: See "Bit pattern" on page 493

EYE<e>:FILTer:RFLSet <RefLevSet>

Selects the reference level set that is used by the filter to obtain the bits.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<RefLevSet> Number of the reference level set

Usage: Asynchronous command

Manual operation: See "Reference levels" on page 492

EYE<e>:FILTer:STATe <State>

Applies the filter settings.

Suffix:
<e> 1 to 8, index of the eye

Parameters:

<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 492

18.18 Protocols

- Configuration settings for all serial protocols 1563
- SPI (option R&S MXO5-K510) 1568
- QUAD-SPI (option R&S MXO5-K510) 1603
- OCTO-SPI (option R&S MXO5-K510) 1635
- I²C (option R&S MXO5-K510) 1666
- I3C (option R&S MXO5-K550) 1702
- D-PHY (option R&S MXO5-K580) 1735
- UART / RS-232 (option R&S MXO5- K510) 1771
- NRZ Clocked (option R&S MXO5-K510) 1804
- NRZ Unclocked (option R&S MXO5-K510) 1834
- Manchester (option R&S MXO5-K510) 1863
- 8b/10b (option R&S MXO5-K510) 1893
- CAN (option R&S MXO5-K520) 1920
- LIN (option R&S MXO5-K520) 1968
- SENT (option R&S MXO5-K520) 2001
- ARINC 429 (option R&S MXO5-K530) 2037
- MIL-1553 (option R&S MXO5-K530) 2065
- SpaceWire (option R&S MXO5-K530) 2094
- SPMI (option R&S MXO5-K550) 2123
- RFFE (option R&S MXO5-K550) 2154
- 10BASE-T1S (option R&S MXO5-K560) 2186
- 100BASE-T1 (option R&S MXO5-K560) 2219
- 1000BASE-T1 (option R&S MXO5-K560) 2250
- USB 1.1 (option R&S MXO5-K570) 2282
- USB 2.0 (option R&S MXO5-K570) 2313

18.18.1 Configuration settings for all serial protocols

18.18.1.1 General settings

SBUS<sb>[:STATe] 1564
SBUS<sb>:TYPE 1564
SBUS<sb>:FORMat 1565
SBUS<sb>:RESult 1565

SBUS<sb>:RMSBus....1566
SBUS<sb>:THReshold....1566
SBUS<sb>:ZCOupling....1566

SBUS<sb>[:STATe] <ProtocolState>

Enables the decoding of the specified bus.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ProtocolState> OFF | ON

Usage: Asynchronous command

Manual operation: See "State" on page 538

SBUS<sb>:TYPE <Protocol Type>

Selects the bus type for analysis. The type of buses available depends on the installed options.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Protocol Type> I2C | I3C | SPI | QSPI | OSPI | UART | CAN | LIN | SENT | TNOS | MILS1553 | MILStd | ARIN429 | ARINc429 | SWIR | SWIRe | RFFE | SPMI | MANC | NRZC | NRZU | MDIO | DALI | USB1 | USBone | USB2 | USBHspeed | HBTO | TBTO | DPHY | EBTB | CSI | DSI

`SPI`: SPI (option R&S MXO5-K510).
`OSPI`: OCTO-SPI (option R&S MXO5-K510).
`QSPI`: QUAD-SPI (option R&S MXO5-K510).
`I2C`: I²C (option R&S MXO5-K510).
`I3C`: I3C (option R&S MXO5-K550).
`UART`: UART / RS-232 (option R&S MXO5- K510).
`NRZC | MDIO`: NRZ Clocked (option R&S MXO5-K510).
`NRZU`: NRZ Unclocked (option R&S MXO5-K510).
`MANC | DALI`: Manchester (option R&S MXO5-K510)
`CAN`: CAN (option R&S MXO5-K520).
`LIN`: LIN (option R&S MXO5-K520).
`SENT`: SENT (option R&S MXO5-K520).
`ARIN429 | ARINc429`: ARINC 429 (option R&S MXO5-K530).
`MILS1553 | MILStd`: MIL-1553 (option R&S MXO5-K530).
`SWIR | SWIRe`: SpaceWire (option R&S MXO5-K530).
`SPMI`: SPMI (option R&S MXO5-K550).
`RFFE`: RFFE (option R&S MXO5-K550).
`TNOS`: 10BASE-T1S (option R&S MXO5-K560).
`HBTO`: 100BASE-T1 (option R&S MXO5-K560).

`TBTO`: 1000BASE-T1 (option R&S MXO5-K560).
`EBTB`: 8b/10b (option R&S MXO5-K510).
`DPHY | CSI | DSI`: D-PHY (option R&S MXO5-K580).
`USB1 | USBone`: USB 1.1 (option R&S MXO5-K570)
`USB2 | USBHspeed`: USB 2.0 (option R&S MXO5-K570)

Usage: Asynchronous command

Manual operation: See "Protocol type" on page 538

SBUS<sb>:FORMat <DataFormat>

Sets the number format for decoded data values of the indicated serial bus. It defines the format in the decode table, and in the combs of the decoded signal on the screen.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | SYMB | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, e.g. 8 bits signed ranges from -128 to +127 decimal

DEC=USIG
Unsigned, e.g. 8 bits unsigned ranges from 0 to 255 decimal

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Data format" on page 541

SBUS<sb>:RESult <ShwResTbl>

Enables a table with decoded data of the serial signal. The function requires the option for the analyzed protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShwResTbl> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show decode table" on page 541

SBUS<sb>:RMSBus

Deletes the specified serial bus.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add serial bus, Delete serial bus" on page 538

SBUS<sb>:THReshold <ShwThresLines>

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Suffix:
<sb> 1..4

Parameters:
<ShwThresLines> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show threshold lines" on page 539

SBUS<sb>:ZCOupling <ZoomCoupling>

If enabled, the protocol decode zoom and result table are synchronized.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ZoomCoupling> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Zoom coupling" on page 542

18.18.1.2 Export results settings

SBUS<sb>:EXPResult:DETail 1567
SBUS<sb>:EXPResult:SAVE 1567
SBUS<sb>:EXPResult:TIME 1567
SBUS<sb>:EXPResult:EXTension 1568
SBUS<sb>:EXPResult:PATH 1568

SBUS<sb>:EXPResult:DETail <IncludeDetails>

If enabled, includes the detailed results for all frames in the export result file.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IncludeDetails> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Include details" on page 555

SBUS<sb>:EXPResult:SAVE <FileName>

Saves the selected results to the indicated file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Example:
```
SBUS1:EXPResult:SAVE
'/home/storage/userData/export_10base-t1s.csv'
```

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 556

SBUS<sb>:EXPResult:TIME <IncludeTiming>

If enabled, includes the frame timing in the export result file.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IncludeTiming> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Include timing" on page 555

SBUS<sb>:EXPResult:EXTension <FileType>

Selects the file format.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FileType> HTML | CSV | XML | PY

HTML
Hypertext markup language

CSV
Comma-separated values

XML
Extensible markup language

PY
Python

*RST: HTML

Usage: Asynchronous command

Manual operation: See "File type" on page 555

SBUS<sb>:EXPResult:PATH <Path>

Sets the path where the protocol export files are stored. On the instrument, the default path is `/home/storage/userData/Protocol`. You can create subfolders in this folder.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Path> String parameter

Usage: Asynchronous command

Manual operation: See "Save as" on page 556

18.18.2 SPI (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1569
- Filter....1576
- Format....1581
- Hardware trigger....1591
- Software trigger....1593
- Decode results....1599

18.18.2.1 Configuration

SBUS<sb>:SPI:BORDer....1569
SBUS<sb>:SPI:FRCondition....1569
SBUS<sb>:SPI:CSELect:HYSTeresis....1570
SBUS<sb>:SPI:CSELect:POLarity....1570
SBUS<sb>:SPI:CSELect:SOURce....1570
SBUS<sb>:SPI:CSELect:THReshold....1571
SBUS<sb>:SPI:MISO:HYSTeresis....1571
SBUS<sb>:SPI:MISO:POLarity....1571
SBUS<sb>:SPI:MISO:SOURce....1571
SBUS<sb>:SPI:MISO:THReshold....1572
SBUS<sb>:SPI:MOSI:HYSTeresis....1572
SBUS<sb>:SPI:MOSI:POLarity....1572
SBUS<sb>:SPI:MOSI:SOURce....1573
SBUS<sb>:SPI:MOSI:THReshold....1573
SBUS<sb>:SPI:SCLK:HYSTeresis....1573
SBUS<sb>:SPI:SCLK:SOURce....1573
SBUS<sb>:SPI:SCLK:THReshold....1574
SBUS<sb>:SPI:TIMeout....1574
SBUS<sb>:SPI:WSIZe....1574
SBUS<sb>:SPI:MISO:POSition....1575
SBUS<sb>:SPI:MISO:SCALe....1575
SBUS<sb>:SPI:MOSI:POSition....1575
SBUS<sb>:SPI:MOSI:SCALe....1575

SBUS<sb>:SPI:BORDer <BitOrder>

Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitOrder> LSBF | MSBF
*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 563

SBUS<sb>:SPI:FRCondition <FrameCondition>

Defines the start of a frame. A frame contains a number of successive words, at least one word.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FrameCondition> CS | CLKTimeout

CS
Start and end of the frame is defined by the active state of the sub select signal, see `SBUS<sb>:SPI:CSELect:POLarity`.

CLKTimeout
Defines a timeout on the clock line SCLK as limiter between two frames. The timeout condition is used for SPI connections without a CS line.

*RST: CS

Usage: Asynchronous command

SBUS<sb>:SPI:CSELect:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the CS channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 564

SBUS<sb>:SPI:CSELect:POLarity <CSPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSPolarity> ACTLow | ACTHigh
*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "Polarity: MOSI, MISO, CS" on page 563

SBUS<sb>:SPI:CSELect:SOURce <CSSource>

Sets the input channel of the CS line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK,MOSI,MISO,CS" on page 562

SBUS<sb>:SPI:CSELect:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 564

SBUS<sb>:SPI:MISO:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the MISO channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 564

SBUS<sb>:SPI:MISO:POLarity <MISOPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MISOPolarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: MOSI, MISO, CS" on page 563

SBUS<sb>:SPI:MISO:SOURce <MISOSource>

Sets the input channel of the MISO line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MISOSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK,MOSI,MISO,CS" on page 562

SBUS<sb>:SPI:MISO:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 564

SBUS<sb>:SPI:MOSI:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the MOSI channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 564

SBUS<sb>:SPI:MOSI:POLarity <MOSIPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MOSIPolarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: MOSI, MISO, CS" on page 563

SBUS<sb>:SPI:MOSI:SOURce <MOSISource>

Sets the input channel of the MOSI line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MOSISource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK,MOSI,MISO,CS" on page 562

SBUS<sb>:SPI:MOSI:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 564

SBUS<sb>:SPI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the SCLK channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 564

SBUS<sb>:SPI:SCLK:SOURce <SCLKSource>

Sets the input channel of the SCLK line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLKSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK,MOSI,MISO,CS" on page 562

SBUS<sb>:SPI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 564

SBUS<sb>:SPI:TIMeout <ClockTimeout>

Sets the minimum clock idle time if a timeout on the clock line SCLK is used as limiter between two frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ClockTimeout>
Range: 5E-08 to 10
Increment: 1E-06
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "Timeout" on page 563

SBUS<sb>:SPI:WSIZe <WordLength>

Sets the word length (or symbol size), which is the number of bits in a message. The maximum word length is 32 bit.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<WordLength>
Range: 4 to 32
Increment: 1
*RST: 8

Usage: Asynchronous command

Manual operation: See "Word length" on page 563

SBUS<sb>:SPI:MISO:POSition <SPI MISO position>

Sets the vertical position of the MISO signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPI MISO position>

Usage: Asynchronous command

SBUS<sb>:SPI:MISO:SCALe <SPI MISO scale>

Set the vertical scale of the MISO signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPI MISO scale>

Usage: Asynchronous command

SBUS<sb>:SPI:MOSI:POSition <SPI MISO position>

Sets the vertical position of the MOSI signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPI MISO position>

Usage: Asynchronous command

SBUS<sb>:SPI:MOSI:SCALe <SPI MOSI scale>

Set the vertical scale of the MOSI signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPI MOSI scale>

Usage: Asynchronous command

18.18.2.2 Filter

There are two commands for each parameter, that you can use for defining the SPI settings.

For example, to set the *Frame type =MISO > Field =MISO >01100* value you can use one of the following commands:

- `SBUS:SPI:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:SPI:FILTer:DMIN "MISO", "MISO", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:SPI:FILTer:CHKall ... 1576
SBUS<sb>:SPI:FILTer:CLR ... 1577
SBUS<sb>:SPI:FILTer:INVert ... 1577
SBUS<sb>:SPI:FILTer:RST ... 1577
SBUS<sb>:SPI:FILTer:BIT ... 1577
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1577
SBUS<sb>:SPI:FILTer:DMAX ... 1578
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1578
SBUS<sb>:SPI:FILTer:DMIN ... 1578
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1578
SBUS<sb>:SPI:FILTer:DOPerator ... 1578
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1578
SBUS<sb>:SPI:FILTer:ERENable ... 1579
SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle ... 1579
SBUS<sb>:SPI:FILTer:FIENable ... 1579
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1579
SBUS<sb>:SPI:FILTer:FRENable ... 1579
SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle ... 1579
SBUS<sb>:SPI:FILTer:IMAX ... 1580
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1580
SBUS<sb>:SPI:FILTer:IMIN ... 1580
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1580
SBUS<sb>:SPI:FILTer:IOPerator ... 1581
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1581

SBUS<sb>:SPI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 565

SBUS<sb>:SPI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 565

SBUS<sb>:SPI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 565

SBUS<sb>:SPI:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 565

SBUS<sb>:SPI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SPI:FILTer:BIT? <Bit>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 566

SBUS<sb>:SPI:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:SPI:FILTer:DMAX? <Data>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 566

SBUS<sb>:SPI:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:SPI:FILTer:DMIN? <Data>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 566

SBUS<sb>:SPI:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SPI:FILTer:DOPerator? <Operator>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 566

SBUS<sb>:SPI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:SPI:FILTer:ERENable? <Enabler>
SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 567

SBUS<sb>:SPI:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:SPI:FILTer:FIENable? <Enabler>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 566

SBUS<sb>:SPI:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:SPI:FILTer:FRENable? <Enabler>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 566

SBUS<sb>:SPI:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:SPI:FILTer:IMAX? <Data>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 566

SBUS<sb>:SPI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:SPI:FILTer:IMIN? <Data>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 566

SBUS<sb>:SPI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SPI:FILTer:IOPerator? <Operator>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 566

18.18.2.3 Format

This section describes the commands to specify and query frame formats for the "SPI" protocol.

SBUS<sb>:SPI:FORMat:SELect....1582
SBUS<sb>:SPI:FORMat:ADDFrame....1582
SBUS<sb>:SPI:FORMat:LOAD....1582
SBUS<sb>:SPI:FORMat:SAVE....1582
SBUS<sb>:SPI:FORMat:CLR....1583
SBUS<sb>:SPI:FORMat:FCOunt?....1583
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ADDField....1583
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLDCount?....1583
SBUS<sb>:SPI:FORMat:FRAMe<fr>:NAME....1584
SBUS<sb>:SPI:FORMat:FRAMe<fr>:COLor....1584
SBUS<sb>:SPI:FORMat:FRAMe<fr>:TYPE....1584
SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENCheck....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENValue....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Field....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Field....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Field....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Value....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Value....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Value....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:NAME....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:COLor....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1587
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1587
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1587
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1588
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1588
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1589

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1589
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1590
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1590
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARA 1591
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARB 1591

SBUS<sb>:SPI:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 568

SBUS<sb>:SPI:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 568

SBUS<sb>:SPI:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 569

SBUS<sb>:SPI:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 569

SBUS<sb>:SPI:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 568

SBUS<sb>:SPI:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 568

SBUS<sb>:SPI:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 570

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 569

SBUS<sb>:SPI:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 569

SBUS<sb>:SPI:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 569

SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 569

SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 569

SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 570

SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 570

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 571

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 571

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 571

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 571

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 571

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 571

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 572

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 572

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 572

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 572

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 573

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 573

18.18.2.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:SPI:TYPE....1591
TRIGger:SBHW:SPI:PALignment....1592
TRIGger:SBHW:SPI:FCONdition....1592
TRIGger:SBHW:SPI:DPOSition....1592
TRIGger:SBHW:SPI:DMINpattern....1593

TRIGger:SBHW:SPI:TYPE <Type>

Selects the trigger type for SPI analysis.

Parameters:
<Type> FRSTart | FRENd | MOSI | MISO

FRSTart
Triggers on the beginning of the frame.

FRENd
Triggers on the end of the frame.

MOSI
Triggers on a specified data pattern in that is expected on the MOSI line.

MISO
Triggers on a specified data pattern in that is expected on the MISO line.

*RST: FRSTart

Usage: Asynchronous command

Manual operation: See "Type" on page 573

TRIGger:SBHW:SPI:PALignment <DataAlignment>

Defines how the specified data pattern is searched.

Parameters:
<DataAlignment> WORD | BIT

WORD
The pattern is matched only at word boundaries.

BIT
Bit-by-bit: the pattern can start at any position in the message.

*RST: WORD

Usage: Asynchronous command

Manual operation: See "Search mode" on page 574

TRIGger:SBHW:SPI:FCONdition <DataOperator>

Selects the operator for the MISO and MOSI pattern.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data" on page 574

TRIGger:SBHW:SPI:DPOSition <DataPosition>

Sets the number of bits or words to be ignored before the first bit or word of interest. The effect is defined by `TRIGger:SBHW:SPI:PALignment`.

Parameters:
<DataPosition> Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Position" on page 574

TRIGger:SBHW:SPI:DMINpattern <DataPattern>

Specifies a data bit pattern, or sets the start value of a pattern range.

Parameters:
<DataPattern>

Usage: Asynchronous command

Manual operation: See "Data" on page 574

18.18.2.5 Software trigger

There are two commands for each parameter, that you can use for defining the SPI settings.

For example, to set the *Frame type =MISO > Field =MISO >01100* value you can use one of the following commands:

- `TRIGger:SBSW:SPI:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:SPI:DMIN "MISO", "MISO", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:SPI:CHKall ... 1594
TRIGger:SBSW:SPI:CLR ... 1594
TRIGger:SBSW:SPI:INVert ... 1594
TRIGger:SBSW:SPI:RST ... 1594
TRIGger:SBSW:SPI:FRENable ... 1594
TRIGger:SBSW:SPI:FRAMe<fr>:ENABle ... 1594
TRIGger:SBSW:SPI:BIT ... 1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:BIT ... 1595
TRIGger:SBSW:SPI:DMAX ... 1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMAX ... 1595
TRIGger:SBSW:SPI:DMIN ... 1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMIN ... 1595
TRIGger:SBSW:SPI:DOPerator ... 1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator ... 1596
TRIGger:SBSW:SPI:FIENable ... 1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:ENABle ... 1596
TRIGger:SBSW:SPI:IMAX ... 1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMAX ... 1596
TRIGger:SBSW:SPI:IMIN ... 1597
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMIN ... 1597
TRIGger:SBSW:SPI:IOPerator ... 1597
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator ... 1597
TRIGger:SBSW:SPI:ERENable ... 1598
TRIGger:SBSW:SPI:ERRor<m>:ENABle ... 1598
SBUS<sb>:SPI:SWTindex? ... 1598
SBUS<sb>:SPI:SWTTime? ... 1598

TRIGger:SBSW:SPI:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 575

TRIGger:SBSW:SPI:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 575

TRIGger:SBSW:SPI:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 575

TRIGger:SBSW:SPI:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 575

TRIGger:SBSW:SPI:FRENable <Frame>,<Enabler>
TRIGger:SBSW:SPI:FRENable? <Enabler>
TRIGger:SBSW:SPI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 576

TRIGger:SBSW:SPI:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:SPI:BIT? <Bit>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 576

TRIGger:SBSW:SPI:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SPI:DMAX? <Data>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 576

TRIGger:SBSW:SPI:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SPI:DMIN? <Data>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 576

TRIGger:SBSW:SPI:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SPI:DOPerator? <Operator>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 576

TRIGger:SBSW:SPI:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:SPI:FIENable? <Enabler>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 576

TRIGger:SBSW:SPI:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SPI:IMAX? <Data>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 576

TRIGger:SBSW:SPI:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SPI:IMIN? <Data>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 576

TRIGger:SBSW:SPI:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SPI:IOPerator? <Operator>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 576

TRIGger:SBSW:SPI:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:SPI:ERENable? <Enabler>
TRIGger:SBSW:SPI:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 577

SBUS<sb>:SPI:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.2.6 Decode results

SBUS<sb>:SPI:FCOunt? 1599
SBUS<sb>:SPI:FRAMe<fr>:BITRate? 1599
SBUS<sb>:SPI:FRAMe<fr>:DATA? 1599
SBUS<sb>:SPI:FRAMe<fr>:STARt? 1600
SBUS<sb>:SPI:FRAMe<fr>:STATus? 1600
SBUS<sb>:SPI:FRAMe<fr>:STOP? 1601
SBUS<sb>:SPI:FRAMe<fr>:WCOunt? 1601
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo? 1601
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi? 1601
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO? 1602
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI? 1602
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STARt? 1602
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP? 1603

SBUS<sb>:SPI:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:BITRate?

Returns the bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:DATA?

Returns the data words of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameData> Comma-separated sequence of integer values (N, L1, R1,…, LN, RN). N is the number of word pairs in the frame, and {L1,R1}…{LN,RN} are the value pairs. The values Lx and Rx are associated with the MOSI and the MISO channel, respectively. If a channel is disabled, an empty value is returned.

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | VOID | INComplete | LENGth

`OK`: the frame is valid.
`VOID`: the frame is empty.
`INComplete`: INComplete word. The word is cut off at the left or right side of the acquisition.
`LENGth`: The frame that was found has an unexpected length: there are either too few or too many bits in this frame.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WCOunt?

Returns the number of words in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWordCount> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo?

Returns the formatted value of the specified word on the MISO line.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:
<FormattedMISOVal>

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi?

Returns the formatted value of the specified word on the MOSI line.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:
<FormattedMOSIVal>

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO?

Returns the data value of the specified word on the MISO line.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:
<MISOValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI?

Returns the data value of the specified word on the MOSI line.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:
<MOSIValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STARt?

Returns the start time of the specified data word.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:

<FrameWordStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP?

Returns the end time of the specified data word.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:

<FrameWordStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.3 QUAD-SPI (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1604
- Filter....1613
- Format....1619
- Software trigger....1624
- Decode results....1630

18.18.3.1 Configuration

SBUS<sb>:QSPI:CSEL:HYSTeresis ... 1604
SBUS<sb>:QSPI:CSEL:POLarity ... 1605
SBUS<sb>:QSPI:CSEL:SOURce ... 1605
SBUS<sb>:QSPI:CSEL:THReshold ... 1605
SBUS<sb>:QSPI:INSTruction ... 1605
SBUS<sb>:QSPI:IOONe:HYSTeresis ... 1606
SBUS<sb>:QSPI:IOONe:POLarity ... 1606
SBUS<sb>:QSPI:IOONe:POSition ... 1606
SBUS<sb>:QSPI:IOONe:SCALe ... 1606
SBUS<sb>:QSPI:IOONe:SOURce ... 1607
SBUS<sb>:QSPI:IOONe:THReshold ... 1607
SBUS<sb>:QSPI:IOTHree:HYSTeresis ... 1607
SBUS<sb>:QSPI:IOTHree:POLarity ... 1608
SBUS<sb>:QSPI:IOTHree:POSition ... 1608
SBUS<sb>:QSPI:IOTHree:SCALe ... 1608
SBUS<sb>:QSPI:IOTHree:SOURce ... 1608
SBUS<sb>:QSPI:IOTHree:THReshold ... 1609
SBUS<sb>:QSPI:IOTWo:HYSTeresis ... 1609
SBUS<sb>:QSPI:IOTWo:POLarity ... 1609
SBUS<sb>:QSPI:IOTWo:POSition ... 1609
SBUS<sb>:QSPI:IOTWo:SCALe ... 1610
SBUS<sb>:QSPI:IOTWo:SOURce ... 1610
SBUS<sb>:QSPI:IOTWo:THReshold ... 1610
SBUS<sb>:QSPI:IOZero:HYSTeresis ... 1610
SBUS<sb>:QSPI:IOZero:POLarity ... 1611
SBUS<sb>:QSPI:IOZero:POSition ... 1611
SBUS<sb>:QSPI:IOZero:SCALe ... 1611
SBUS<sb>:QSPI:IOZero:SOURce ... 1612
SBUS<sb>:QSPI:IOZero:THReshold ... 1612
SBUS<sb>:QSPI:SCLK:HYSTeresis ... 1612
SBUS<sb>:QSPI:SCLK:POLarity ... 1612
SBUS<sb>:QSPI:SCLK:SOURce ... 1613
SBUS<sb>:QSPI:SCLK:THReshold ... 1613

SBUS<sb>:QSPI:CSEL:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the CS channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 583

SBUS<sb>:QSPI:CSEL:POLarity <CSPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSPolarity> ACTLow | ACTHigh
*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 581

SBUS<sb>:QSPI:CSEL:SOURce <CSSource>

Sets the input channel of the CS line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 581

SBUS<sb>:QSPI:CSEL:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 583

SBUS<sb>:QSPI:INSTruction <Instruction>

Selects the instruction mode that defines how many lanes are used to transmit data.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Instruction> SINGle | DUAL | QUAD
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Instruction" on page 582

SBUS<sb>:QSPI:IOONe:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO1 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 583

SBUS<sb>:QSPI:IOONe:POLarity <IO1Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO1Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 581

SBUS<sb>:QSPI:IOONe:POSition <QUADSPI IO1 position>

Sets the vertical position of the IO1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO1 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOONe:SCALe <QUADSPI IO1 scale>

Set the vertical scale of the IO1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO1 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOONe:SOURce <IO1Source>

Sets the input channel of the IO 1 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO1Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 581

SBUS<sb>:QSPI:IOONe:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 583

SBUS<sb>:QSPI:IOTHree:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 583

SBUS<sb>:QSPI:IOTHree:POLarity <IO3Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO3Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 581

SBUS<sb>:QSPI:IOTHree:POSition <QUADSPI IO3 position>

Sets the vertical position of the IO3 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO3 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTHree:SCALe <QUADSPI IO3 scale>

Set the vertical scale of the IO3 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO3 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTHree:SOURce <IO3Source>

Sets the input channel of the IO 3 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO3Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 581

SBUS<sb>:QSPI:IOTHree:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 583

SBUS<sb>:QSPI:IOTWo:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO2 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 583

SBUS<sb>:QSPI:IOTWo:POLarity <IO2Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO2Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 581

SBUS<sb>:QSPI:IOTWo:POSition <QUADSPI IO2 position>

Sets the vertical position of the IO2 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO2 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTWo:SCALe <QUADSPI IO2 scale>

Set the vertical scale of the IO2 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO2 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTWo:SOURce <IO2Source>

Sets the input channel of the IO 2 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO2Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 581

SBUS<sb>:QSPI:IOTWo:THReshold <Threshold>

Sets a value for the hysteresis for the IO2 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 583

SBUS<sb>:QSPI:IOZero:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 583

SBUS<sb>:QSPI:IOZero:POLarity <IO0Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO0Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 581

SBUS<sb>:QSPI:IOZero:POSition <QUADSPI IO0 position>

Sets the vertical position of the IO0 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO0 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOZero:SCALe <QUADSPI IO0 scale>

Set the vertical scale of the IO0 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO0 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOZero:SOURce <IO0Source>

Sets the input channel of the IO 0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO0Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 581

SBUS<sb>:QSPI:IOZero:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 583

SBUS<sb>:QSPI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the SCLK channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 583

SBUS<sb>:QSPI:SCLK:POLarity <SCLKPolarity>

Sets the polarity for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLKPolarity> FALLing | RISing
*RST: RISing

Usage: Asynchronous command

Manual operation: See "SCLK SDR Polarity" on page 581

SBUS<sb>:QSPI:SCLK:SOURce <SCLKSource>

Sets the input channel of the SCLK clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLKSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 581

SBUS<sb>:QSPI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 583

18.18.3.2 Filter

There are two commands for each parameter, that you can use for defining the QUAD SPI settings.

For example, to set the *Frame type =Data > Field =Addr >01100* value you can use one of the following commands:

- `SBUS:QSPI:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:QSPI:FILTer:DMIN "Data", "Addr", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:QSPI:FILTer:CHKall 1614
SBUS<sb>:QSPI:FILTer:CLR 1614
SBUS<sb>:QSPI:FILTer:INVert 1614
SBUS<sb>:QSPI:FILTer:RST 1615
SBUS<sb>:QSPI:FILTer:BIT 1615

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT....1615
SBUS<sb>:QSPI:FILTer:DMAX....1615
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1615
SBUS<sb>:QSPI:FILTer:DMIN....1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1616
SBUS<sb>:QSPI:FILTer:DOPerator....1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1616
SBUS<sb>:QSPI:FILTer:IMAX....1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1616
SBUS<sb>:QSPI:FILTer:IMIN....1617
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1617
SBUS<sb>:QSPI:FILTer:IOPerator....1617
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1617
SBUS<sb>:QSPI:FILTer:ERENable....1618
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle....1618
SBUS<sb>:QSPI:FILTer:FIENable....1618
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1618
SBUS<sb>:QSPI:FILTer:FRENable....1618
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABle....1618

SBUS<sb>:QSPI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 584

SBUS<sb>:QSPI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 584

SBUS<sb>:QSPI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 584

SBUS<sb>:QSPI:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 584

SBUS<sb>:QSPI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:QSPI:FILTer:BIT? <Bit>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 585

SBUS<sb>:QSPI:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:DMAX? <Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 585

SBUS<sb>:QSPI:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:DMIN? <Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 585

SBUS<sb>:QSPI:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:QSPI:FILTer:DOPerator? <Operator>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 585

SBUS<sb>:QSPI:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:IMAX? <Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 585

SBUS<sb>:QSPI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:IMIN? <Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 585

SBUS<sb>:QSPI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:QSPI:FILTer:IOPerator? <Operator>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 585

SBUS<sb>:QSPI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:QSPI:FILTer:ERENable? <Enabler>
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 586

SBUS<sb>:QSPI:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:QSPI:FILTer:FIENable? <Enabler>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 585

SBUS<sb>:QSPI:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:QSPI:FILTer:FRENable? <Enabler>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

18.18.3.3 Format

SBUS<sb>:QSPI:OPCode:APPend ... 1619
SBUS<sb>:QSPI:OPCode:DALL ... 1619
SBUS<sb>:QSPI:OPCode:DELete ... 1619
SBUS<sb>:QSPI:OPCode:RESet ... 1620
SBUS<sb>:QSPI:LDOPcode ... 1620
SBUS<sb>:QSPI:OPCode:SIZE? ... 1620
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADBYtes ... 1620
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADLanes ... 1621
SBUS<sb>:QSPI:OPCode:ITEM<n>:ALT ... 1621
SBUS<sb>:QSPI:OPCode:ITEM<n>:CODE ... 1621
SBUS<sb>:QSPI:OPCode:ITEM<n>:DATA ... 1622
SBUS<sb>:QSPI:OPCode:ITEM<n>:DDR ... 1622
SBUS<sb>:QSPI:OPCode:ITEM<n>:DMCYcles ... 1622
SBUS<sb>:QSPI:OPCode:ITEM<n>:DTLanes ... 1623
SBUS<sb>:QSPI:OPCode:ITEM<n>:NAME ... 1623
SBUS<sb>:QSPI:SVOP ... 1623

SBUS<sb>:QSPI:OPCode:APPend

Adds a new item to the opcode list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add" on page 586

SBUS<sb>:QSPI:OPCode:DALL

Deletes all currently defined opcodes from the list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Delete all" on page 587

SBUS<sb>:QSPI:OPCode:DELete <Index>

Deletes the opcode with the selected index.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<Index>

Usage: Setting only
Asynchronous command

Manual operation: See "Delete" on page 586

SBUS<sb>:QSPI:OPCode:RESet

Resets the opcode fields to the predefined values.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Preset" on page 587

SBUS<sb>:QSPI:LDOPcode <FileName>

Loads an opcode file from the selected file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open, Save as" on page 587

SBUS<sb>:QSPI:OPCode:SIZE?

Sets the size of the opcode, hence the number of opcodes currently defined on the table in the "Format" tab of QUAD-SPI.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:OPCode:ITEM<n>:ADBYtes <AddressBytes>

Sets the address byte. It specifies the location in the flash memory where the operation (e.g., read, write) is performed.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<AddressBytes> Range: 0 to 4
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Address Bytes" on page 589

SBUS<sb>:QSPI:OPCode:ITEM<n>:ADLanes <AddressLanes>

Selects how many lines or lanes are used to send the address bytes to the flash memory.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<AddressLanes> SINGle | DUAL | QUAD
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Address Lanes" on page 589

SBUS<sb>:QSPI:OPCode:ITEM<n>:ALT <Alt>

Enable, if an alternative field is available.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<Alt> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Alternative Field" on page 589

SBUS<sb>:QSPI:OPCode:ITEM<n>:CODE <Opcode>

Sets the opcode value.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<Opcode> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Opcode" on page 588

SBUS<sb>:QSPI:OPCode:ITEM<n>:DATA <Data>

Enable, if data is being transferred in the opcode operation.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<Data> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Data" on page 589

SBUS<sb>:QSPI:OPCode:ITEM<n>:DDR <DDR>

If enabled, the data is transferred on both the rising and falling edges of the clock signal. This setting effectively doubles the data transfer rate compared to a single data rate (SDR), which transfers data only on one clock edge.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<DDR> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "DDR" on page 588

SBUS<sb>:QSPI:OPCode:ITEM<n>:DMCYcles <DummyCycles>

Sets the number of dummy cycles. Dummy cycles are clock cycles inserted after the address or other command sequences but before data transfer begins. These cycles allow the flash memory device additional time to perform internal operations or latch onto the correct data to ensure accurate read or write operations.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<DummyCycles> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Dummy Cycles" on page 589

SBUS<sb>:QSPI:OPCode:ITEM<n>:DTLanes <DataLanes>

Selects how many lanes are used for the data transfer.

The data lanes refer to the physical connections through which data is transmitted between the main (typically a microcontroller) and the sub (typically a flash memory device). QUADSPI can utilize multiple data lines to increase the speed and efficiency of data transfer.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<DataLanes> SINGle | DUAL | QUAD
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Data Lanes" on page 589

SBUS<sb>:QSPI:OPCode:ITEM<n>:NAME <Name>

Sets the name for the Opcode.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<Name>

Usage: Asynchronous command

Manual operation: See "Name" on page 588

SBUS<sb>:QSPI:SVOP <FileName>

Saves the opcode file.

Suffix:

<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open, Save as" on page 587

18.18.3.4 Software trigger

There are two commands for each parameter, that you can use for defining the QUAD SPI settings.

For example, to set the *Frame type =Data > Field =Addr >01100* value you can use one of the following commands:

- `TRIGger:SBSW:QSPI:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:QSPI:DMIN "Data", "Addr", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:QSPI:CHKall....1624
TRIGger:SBSW:QSPI:CLR....1625
TRIGger:SBSW:QSPI:INVert....1625
TRIGger:SBSW:QSPI:RST....1625
TRIGger:SBSW:QSPI:FRENable....1625
TRIGger:SBSW:QSPI:FRAMe<fr>:ENABle....1625
TRIGger:SBSW:QSPI:BIT....1626
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:BIT....1626
TRIGger:SBSW:QSPI:DMAX....1626
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMAX....1626
TRIGger:SBSW:QSPI:DMIN....1626
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMIN....1626
TRIGger:SBSW:QSPI:DOPerator....1627
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator....1627
TRIGger:SBSW:QSPI:FIENable....1627
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:ENABle....1627
TRIGger:SBSW:QSPI:IMAX....1627
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMAX....1627
TRIGger:SBSW:QSPI:IMIN....1628
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMIN....1628
TRIGger:SBSW:QSPI:IOPerator....1628
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator....1628
TRIGger:SBSW:QSPI:ERENable....1629
TRIGger:SBSW:QSPI:ERRor<m>:ENABle....1629
SBUS<sb>:QSPI:SWTindex?....1629
SBUS<sb>:QSPI:SWTTime?....1629

TRIGger:SBSW:QSPI:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 590

TRIGger:SBSW:QSPI:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 590

TRIGger:SBSW:QSPI:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 590

TRIGger:SBSW:QSPI:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 590

TRIGger:SBSW:QSPI:FRENable <Frame>,<Enabler>
TRIGger:SBSW:QSPI:FRENable? <Enabler>
TRIGger:SBSW:QSPI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 591

TRIGger:SBSW:QSPI:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:QSPI:BIT? <Bit>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 591

TRIGger:SBSW:QSPI:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:QSPI:DMAX? <Data>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 591

TRIGger:SBSW:QSPI:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:QSPI:DMIN? <Data>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 591

TRIGger:SBSW:QSPI:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:QSPI:DOPerator? <Operator>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 591

TRIGger:SBSW:QSPI:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:QSPI:FIENable? <Enabler>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 591

TRIGger:SBSW:QSPI:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:QSPI:IMAX? <Data>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 591

TRIGger:SBSW:QSPI:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:QSPI:IMIN? <Data>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 591

TRIGger:SBSW:QSPI:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:QSPI:IOPerator? <Operator>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 591

TRIGger:SBSW:QSPI:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:QSPI:ERENable? <Enabler>
TRIGger:SBSW:QSPI:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 593

SBUS<sb>:QSPI:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.3.5 Decode results

SBUS<sb>:QSPI:FCOunt? 1630
SBUS<sb>:QSPI:FRAMe<fr>:ADDR? 1630
SBUS<sb>:QSPI:FRAMe<fr>:ALT? 1631
SBUS<sb>:QSPI:FRAMe<fr>:BITRate? 1631
SBUS<sb>:QSPI:FRAMe<fr>:DATA? 1631
SBUS<sb>:QSPI:FRAMe<fr>:FLDCount? 1631
SBUS<sb>:QSPI:FRAMe<fr>:FDATa? 1632
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:VALue? 1632
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:FVALue? 1632
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:LABel? 1633
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:STATe? 1633
SBUS<sb>:QSPI:FRAMe<fr>:ILBL? 1634
SBUS<sb>:QSPI:FRAMe<fr>:IVALue? 1634
SBUS<sb>:QSPI:FRAMe<fr>:TYPE? 1634
SBUS<sb>:QSPI:FRAMe<fr>:STARt? 1634
SBUS<sb>:QSPI:FRAMe<fr>:STATus? 1635
SBUS<sb>:QSPI:FRAMe<fr>:STOP? 1635

SBUS<sb>:QSPI:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:ADDR?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAddress> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:ALT?

Retruns the value of the alternate byte for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAlt> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:BITRate?

Returns the bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:DATA?

Returns the data of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLDCount?

Returns the field count for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FDATa?

Returns the foramtted data value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | LENGth | OPCode | INComplete

OK
The field is valid.

LENGth
The field does not have the expected length.

OPCode
The opcode value is not found in your frame description list. See Section 14.3.4, "QUAD-SPI format configuration", on page 586.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:ILBL?

Returns the label of the instruction.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameLabel>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:IVALue?

Returns the instruction mode value for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmInstruction> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:TYPE?

Returns the type of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | LENGth | OPCode | INComplete

`OK`: the frame is valid.
`OPCode`: operation code.
`INComplete`: INComplete word. The word does not have the expected word length.
`LENGth`: The frame is not contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.4 OCTO-SPI (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1636
- Filter....1643
- Format....1648
- Software trigger....1653
- Decode results....1659

18.18.4.1 Configuration

SBUS<sb>:OSPI:CSEL:HYSTeresis....1637
SBUS<sb>:OSPI:CSEL:POLarity....1637
SBUS<sb>:OSPI:CSEL:SOURce....1638
SBUS<sb>:OSPI:CSEL:THReshold....1638
SBUS<sb>:OSPI:MODE....1638
SBUS<sb>:OSPI:CK:HYSTeresis....1638
SBUS<sb>:OSPI:CK:SOURce....1639
SBUS<sb>:OSPI:CK:THReshold....1639
SBUS<sb>:OSPI:IOZero:HYSTeresis....1639
SBUS<sb>:OSPI:IOONe:HYSTeresis....1639
SBUS<sb>:OSPI:IOTWo:HYSTeresis....1639
SBUS<sb>:OSPI:IOTHree:HYSTeresis....1639
SBUS<sb>:OSPI:IOFR:HYSTeresis....1639
SBUS<sb>:OSPI:IOFV:HYSTeresis....1639
SBUS<sb>:OSPI:IOSX:HYSTeresis....1639
SBUS<sb>:OSPI:IOSV:HYSTeresis....1639
SBUS<sb>:OSPI:IOZero:POLarity....1640
SBUS<sb>:OSPI:IOONe:POLarity....1640
SBUS<sb>:OSPI:IOTWo:POLarity....1640
SBUS<sb>:OSPI:IOTHree:POLarity....1640
SBUS<sb>:OSPI:IOFR:POLarity....1640
SBUS<sb>:OSPI:IOFV:POLarity....1640
SBUS<sb>:OSPI:IOSX:POLarity....1640
SBUS<sb>:OSPI:IOSV:POLarity....1640
SBUS<sb>:OSPI:IOZero:POSition....1640
SBUS<sb>:OSPI:IOONe:POSition....1640
SBUS<sb>:OSPI:IOTWo:POSition....1640
SBUS<sb>:OSPI:IOTHree:POSition....1640
SBUS<sb>:OSPI:IOFR:POSition....1640
SBUS<sb>:OSPI:IOFV:POSition....1640
SBUS<sb>:OSPI:IOSX:POSition....1640
SBUS<sb>:OSPI:IOSV:POSition....1640
SBUS<sb>:OSPI:IOZero:SCALe....1640
SBUS<sb>:OSPI:IOONe:SCALe....1640
SBUS<sb>:OSPI:IOTWo:SCALe....1640
SBUS<sb>:OSPI:IOTHree:SCALe....1641
SBUS<sb>:OSPI:IOFR:SCALe....1641
SBUS<sb>:OSPI:IOFV:SCALe....1641
SBUS<sb>:OSPI:IOSX:SCALe....1641

SBUS<sb>:OSPI:IOSV:SCALe....1641
SBUS<sb>:OSPI:IOZero:SOURce....1641
SBUS<sb>:OSPI:IOONe:SOURce....1641
SBUS<sb>:OSPI:IOTWo:SOURce....1641
SBUS<sb>:OSPI:IOTHree:SOURce....1641
SBUS<sb>:OSPI:IOFR:SOURce....1641
SBUS<sb>:OSPI:IOFV:SOURce....1641
SBUS<sb>:OSPI:IOSX:SOURce....1641
SBUS<sb>:OSPI:IOSV:SOURce....1641
SBUS<sb>:OSPI:IOZero:THReshold....1641
SBUS<sb>:OSPI:IOONe:THReshold....1641
SBUS<sb>:OSPI:IOTWo:THReshold....1641
SBUS<sb>:OSPI:IOTHree:THReshold....1641
SBUS<sb>:OSPI:IOFR:THReshold....1641
SBUS<sb>:OSPI:IOFV:THReshold....1641
SBUS<sb>:OSPI:IOSX:THReshold....1641
SBUS<sb>:OSPI:IOSV:THReshold....1641
SBUS<sb>:OSPI:DS:HYSTeresis....1642
SBUS<sb>:OSPI:DS:SOURce....1642
SBUS<sb>:OSPI:DS:THReshold....1642

SBUS<sb>:OSPI:CSEL:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the CS channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS hysteresis" on page 600

SBUS<sb>:OSPI:CSEL:POLarity <CSPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSPolarity> ACTLow | ACTHigh
*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 598

SBUS<sb>:OSPI:CSEL:SOURce <CSSource>

Sets the input channel of the CS line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, CK, IO n" on page 598

SBUS<sb>:OSPI:CSEL:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS threshold" on page 599

SBUS<sb>:OSPI:MODE <InstructionMd>

Selects the instruction mode that defines how many lanes are used to transmit data.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<InstructionMd> WR1S | WR2S | WR4S | WR8S | WR1D | WR2D | WR4D | WR8D

WR1S | WR2S | WR4S | WR8S
Number of lanes in single data rate mode

WR1D | WR2D | WR4D | WR8D
Number of lanes in dual data rate mode

*RST: WR1S

Usage: Asynchronous command

Manual operation: See "Instruction" on page 598

SBUS<sb>:OSPI:CK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS hysteresis" on page 600

SBUS<sb>:OSPI:CK:SOURce <CKSource>

Sets the input channel of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CKSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, CK, IO n" on page 598

SBUS<sb>:OSPI:CK:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS threshold" on page 599

SBUS<sb>:OSPI:IOZero:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOONe:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOTWo:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOTHree:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOFR:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOFV:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOSX:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOSV:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO<n> line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS hysteresis" on page 600

SBUS<sb>:OSPI:IOZero:POLarity <IO0Polarity>
SBUS<sb>:OSPI:IOONe:POLarity <IO1Polarity>
SBUS<sb>:OSPI:IOTWo:POLarity <IO2Polarity>
SBUS<sb>:OSPI:IOTHree:POLarity <IO3Polarity>
SBUS<sb>:OSPI:IOFR:POLarity <IO4Polarity>
SBUS<sb>:OSPI:IOFV:POLarity <IO5Polarity>
SBUS<sb>:OSPI:IOSX:POLarity <IO6Polarity>
SBUS<sb>:OSPI:IOSV:POLarity <IO7Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO7Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 598

SBUS<sb>:OSPI:IOZero:POSition <OCTOSPI IO0 position>
SBUS<sb>:OSPI:IOONe:POSition <OCTOSPI IO1 position>
SBUS<sb>:OSPI:IOTWo:POSition <OCTOSPI IO2 position>
SBUS<sb>:OSPI:IOTHree:POSition <OCTOSPI IO3 position>
SBUS<sb>:OSPI:IOFR:POSition <OCTOSPI IO4 position>
SBUS<sb>:OSPI:IOFV:POSition <OCTOSPI IO5 position>
SBUS<sb>:OSPI:IOSX:POSition <OCTOSPI IO6 position>
SBUS<sb>:OSPI:IOSV:POSition <OCTOSPI IO7 position>

Sets the vertical position of the IO<n> signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<OCTOSPI IO7 position>

Usage: Asynchronous command

SBUS<sb>:OSPI:IOZero:SCALe <OCTOSPI IO0 scale>
SBUS<sb>:OSPI:IOONe:SCALe <OCTOSPI IO1 scale>
SBUS<sb>:OSPI:IOTWo:SCALe <OCTOSPI IO2 scale>

SBUS<sb>:OSPI:IOTHree:SCALe <OCTOSPI IO3 scale>
SBUS<sb>:OSPI:IOFR:SCALe <OCTOSPI IO4 scale>
SBUS<sb>:OSPI:IOFV:SCALe <OCTOSPI IO5 scale>
SBUS<sb>:OSPI:IOSX:SCALe <OCTOSPI IO6 scale>
SBUS<sb>:OSPI:IOSV:SCALe <OCTOSPI IO7 scale>

Set the vertical scale of the IO<n> signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<OCTOSPI IO7 scale>

Usage: Asynchronous command

SBUS<sb>:OSPI:IOZero:SOURce <IO0Source>
SBUS<sb>:OSPI:IOONe:SOURce <IO1Source>
SBUS<sb>:OSPI:IOTWo:SOURce <IO2Source>
SBUS<sb>:OSPI:IOTHree:SOURce <IO3Source>
SBUS<sb>:OSPI:IOFR:SOURce <IO4Source>
SBUS<sb>:OSPI:IOFV:SOURce <IO5Source>
SBUS<sb>:OSPI:IOSX:SOURce <IO6Source>
SBUS<sb>:OSPI:IOSV:SOURce <IO7Source>

Sets the input channel of the IO<n> line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO7Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, CK, IO n" on page 598

SBUS<sb>:OSPI:IOZero:THReshold <Threshold>
SBUS<sb>:OSPI:IOONe:THReshold <Threshold>
SBUS<sb>:OSPI:IOTWo:THReshold <Threshold>
SBUS<sb>:OSPI:IOTHree:THReshold <Threshold>
SBUS<sb>:OSPI:IOFR:THReshold <Threshold>
SBUS<sb>:OSPI:IOFV:THReshold <Threshold>
SBUS<sb>:OSPI:IOSX:THReshold <Threshold>
SBUS<sb>:OSPI:IOSV:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS threshold" on page 599

SBUS<sb>:OSPI:DS:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the data strobe line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS hysteresis" on page 600

SBUS<sb>:OSPI:DS:SOURce <DSSource>

Sets the input channel of the data strobe line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, CK, IO n" on page 598

SBUS<sb>:OSPI:DS:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS threshold" on page 599

18.18.4.2 Filter

There are two commands for each parameter, that you can use for defining the OCTO-SPI settings.

For example, to set the *Frame type =Data > Field =Addr >01100* value you can use one of the following commands:

- `SBUS:OSPI:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:OSPI:FILTer:DMIN "Data", "Addr", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:OSPI:FILTer:CHKall....1643
SBUS<sb>:OSPI:FILTer:CLR....1644
SBUS<sb>:OSPI:FILTer:INVert....1644
SBUS<sb>:OSPI:FILTer:RST....1644
SBUS<sb>:OSPI:FILTer:BIT....1644
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT....1644
SBUS<sb>:OSPI:FILTer:DMAX....1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1645
SBUS<sb>:OSPI:FILTer:DMIN....1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1645
SBUS<sb>:OSPI:FILTer:DOPerator....1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1645
SBUS<sb>:OSPI:FILTer:IMAX....1646
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1646
SBUS<sb>:OSPI:FILTer:IMIN....1646
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1646
SBUS<sb>:OSPI:FILTer:IOPerator....1647
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1647
SBUS<sb>:OSPI:FILTer:ERENable....1647
SBUS<sb>:OSPI:FILTer:ERRor<n>:ENABle....1647
SBUS<sb>:OSPI:FILTer:FIENable....1647
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1647
SBUS<sb>:OSPI:FILTer:FRENable....1648
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:ENABle....1648

SBUS<sb>:OSPI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 601

SBUS<sb>:OSPI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 601

SBUS<sb>:OSPI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 601

SBUS<sb>:OSPI:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 601

SBUS<sb>:OSPI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:OSPI:FILTer:BIT? <Bit>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 602

SBUS<sb>:OSPI:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:OSPI:FILTer:DMAX? <Data>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 602

SBUS<sb>:OSPI:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:OSPI:FILTer:DMIN? <Data>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 602

SBUS<sb>:OSPI:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:OSPI:FILTer:DOPerator? <Operator>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 602

SBUS<sb>:OSPI:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:OSPI:FILTer:IMAX? <Data>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 602

SBUS<sb>:OSPI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:OSPI:FILTer:IMIN? <Data>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 602

SBUS<sb>:OSPI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:OSPI:FILTer:IOPerator? <Operator>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 602

SBUS<sb>:OSPI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:OSPI:FILTer:ERENable? <Enabler>
SBUS<sb>:OSPI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 603

SBUS<sb>:OSPI:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:OSPI:FILTer:FIENable? <Enabler>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 602

SBUS<sb>:OSPI:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:OSPI:FILTer:FRENable? <Enabler>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

18.18.4.3 Format

SBUS<sb>:OSPI:OPCode:APPend ... 1648
SBUS<sb>:OSPI:OPCode:DALL ... 1649
SBUS<sb>:OSPI:OPCode:DELete ... 1649
SBUS<sb>:OSPI:OPCode:RESet ... 1649
SBUS<sb>:OSPI:LDOPcode ... 1649
SBUS<sb>:OSPI:SVOP ... 1650
SBUS<sb>:OSPI:OPCode:SIZE? ... 1650
SBUS<sb>:OSPI:OPCode:ITEM<n>:CODE ... 1650
SBUS<sb>:OSPI:OPCode:ITEM<n>:NAME ... 1650
SBUS<sb>:OSPI:OPCode:ITEM<n>:CMMode ... 1651
SBUS<sb>:OSPI:OPCode:ITEM<n>:CMEXtension ... 1651
SBUS<sb>:OSPI:OPCode:ITEM<n>:ADBYtes ... 1651
SBUS<sb>:OSPI:OPCode:ITEM<n>:ADMode ... 1652
SBUS<sb>:OSPI:OPCode:ITEM<n>:LACYcles ... 1652
SBUS<sb>:OSPI:OPCode:ITEM<n>:DTTYpe ... 1653
SBUS<sb>:OSPI:OPCode:ITEM<n>:DTMode ... 1653

SBUS<sb>:OSPI:OPCode:APPend

Adds a new item to the opcode list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add" on page 603

SBUS<sb>:OSPI:OPCode:DALL

Deletes all currently defined opcodes from the list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Delete all" on page 604

SBUS<sb>:OSPI:OPCode:DELete <Index>

Deletes the opcode with the selected index.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<Index>

Usage: Setting only
Asynchronous command

Manual operation: See "Delete" on page 604

SBUS<sb>:OSPI:OPCode:RESet

Resets the opcode fields to the predefined values.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Preset" on page 604

SBUS<sb>:OSPI:LDOPcode <FileName>

Loads an opcode file from the selected file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open, Save as" on page 604

SBUS<sb>:OSPI:SVOP <FileName>

Saves the opcode file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open, Save as" on page 604

SBUS<sb>:OSPI:OPCode:SIZE?

Sets the size of the opcode, hence the number of opcodes currently defined on the table in the "Format" tab of "OCTO-SPI".

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:OPCode:ITEM<n>:CODE <Opcode>

Sets the opcode value.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<Opcode> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Command" on page 605

SBUS<sb>:OSPI:OPCode:ITEM<n>:NAME <Name>

Sets the name for the Opcode.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Name" on page 605

SBUS<sb>:OSPI:OPCode:ITEM<n>:CMMode <CmdExtensionMd>

Enable to send an extra extension byte immediately after the command opcode.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<CmdExtensionMd> WR1S | WR2S | WR4S | WR8S | WR1D | WR2D | WR4D | WR8D

WR1S | WR2S | WR4S | WR8S
Number of lanes in single data rate mode

WR1D | WR2D | WR4D | WR8D
Number of lanes in dual data rate mode

*RST: WR8D

Usage: Asynchronous command

Manual operation: See "Command extension" on page 605

SBUS<sb>:OSPI:OPCode:ITEM<n>:CMEXtension <CmdExtension>

Selects how many lines are used for sending the command extension byte.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<CmdExtension> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Cmd. ext.mode" on page 605

SBUS<sb>:OSPI:OPCode:ITEM<n>:ADBYtes <AddressBytes>

Sets the address byte. It specifies the location in the flash memory where the operation (e.g., read, write) is performed.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<AddressBytes> Range: 0 to 5
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Address Bytes" on page 606

SBUS<sb>:OSPI:OPCode:ITEM<n>:ADMode <AddressMode>

Selects how many lines are used to send the address bytes to the flash memory.

Suffix:

<sb> 1..4

<n> *

Parameters:

<AddressMode> WR1S | WR2S | WR4S | WR8S | WR1D | WR2D | WR4D | WR8D

WR1S | WR2S | WR4S | WR8S
Number of lanes in single data rate mode

WR1D | WR2D | WR4D | WR8D
Number of lanes in dual data rate mode

*RST: WR8D

Usage: Asynchronous command

Manual operation: See "Address mode" on page 606

SBUS<sb>:OSPI:OPCode:ITEM<n>:LACYcles <LatencyCycles>

Sets the number of latancy cycles. Latency cycles are clock cycles inserted after the address or other command sequences but before data transfer begins.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<LatencyCycles> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Latency Cycles" on page 606

SBUS<sb>:OSPI:OPCode:ITEM<n>:DTTYpe <DataType>

Determines the direction of the data flow for the payload after the command and address are sent.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<DataType> NONE | WRITe | READ

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Data type" on page 606

SBUS<sb>:OSPI:OPCode:ITEM<n>:DTMode <DataMode>

Selects how many lines are used for the data transfer.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<DataMode> WR1S | WR2S | WR4S | WR8S | WR1D | WR2D | WR4D | WR8D

WR1S | WR2S | WR4S | WR8S
Number of lanes in single data rate mode

WR1D | WR2D | WR4D | WR8D
Number of lanes in dual data rate mode

*RST: WR8D

Usage: Asynchronous command

Manual operation: See "Data mode" on page 606

18.18.4.4 Software trigger

There are two commands for each parameter, that you can use for defining the OCTO SPI settings.

For example, to set the *Frame type =Data > Field =Addr >01100* value you can use one of the following commands:

- `TRIGger:SBSW:OSPI:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:OSPI:DMIN "Data", "Addr", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:OSPI:CHKall....1654
TRIGger:SBSW:OSPI:CLR....1654
TRIGger:SBSW:OSPI:INVert....1654
TRIGger:SBSW:OSPI:RST....1655
TRIGger:SBSW:OSPI:FRENable....1655
TRIGger:SBSW:OSPI:FRAMe<fr>:ENABle....1655
TRIGger:SBSW:OSPI:BIT....1655
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:BIT....1655
TRIGger:SBSW:OSPI:DMAX....1656
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMAX....1656
TRIGger:SBSW:OSPI:DMIN....1656
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMIN....1656
TRIGger:SBSW:OSPI:DOPerator....1656
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DOPerator....1656
TRIGger:SBSW:OSPI:FIENable....1657
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:ENABle....1657
TRIGger:SBSW:OSPI:IMAX....1657
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMAX....1657
TRIGger:SBSW:OSPI:IMIN....1658
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMIN....1658
TRIGger:SBSW:OSPI:IOPerator....1658
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IOPerator....1658
TRIGger:SBSW:OSPI:ERENable....1658
TRIGger:SBSW:OSPI:ERRor<m>:ENABle....1658
SBUS<sb>:OSPI:SWTindex?....1659
SBUS<sb>:OSPI:SWTTime?....1659

TRIGger:SBSW:OSPI:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 607

TRIGger:SBSW:OSPI:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 607

TRIGger:SBSW:OSPI:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 607

TRIGger:SBSW:OSPI:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 607

TRIGger:SBSW:OSPI:FRENable <Frame>,<Enabler>
TRIGger:SBSW:OSPI:FRENable? <Enabler>
TRIGger:SBSW:OSPI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 608

TRIGger:SBSW:OSPI:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:OSPI:BIT? <Bit>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 608

TRIGger:SBSW:OSPI:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:OSPI:DMAX? <Data>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 608

TRIGger:SBSW:OSPI:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:OSPI:DMIN? <Data>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 608

TRIGger:SBSW:OSPI:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:OSPI:DOPerator? <Operator>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 608

TRIGger:SBSW:OSPI:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:OSPI:FIENable? <Enabler>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 608

TRIGger:SBSW:OSPI:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:OSPI:IMAX? <Data>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 608

TRIGger:SBSW:OSPI:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:OSPI:IMIN? <Data>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 608

TRIGger:SBSW:OSPI:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:OSPI:IOPerator? <Operator>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 608

TRIGger:SBSW:OSPI:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:OSPI:ERENable? <Enabler>
TRIGger:SBSW:OSPI:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 609

SBUS<sb>:OSPI:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.4.5 Decode results

SBUS<sb>:OSPI:FCOunt? 1660
SBUS<sb>:OSPI:FRAMe<fr>:ADDR? 1660
SBUS<sb>:OSPI:FRAMe<fr>:ADFormatted? 1660
SBUS<sb>:OSPI:FRAMe<fr>:BITRate? 1660
SBUS<sb>:OSPI:FRAMe<fr>:DATA? 1661
SBUS<sb>:OSPI:FRAMe<fr>:FLDCount? 1661
SBUS<sb>:OSPI:FRAMe<fr>:FDATa? 1661
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:VALue? 1662
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:FVALue? 1662
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:LABel? 1662
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:STATe? 1663
SBUS<sb>:OSPI:FRAMe<fr>:CMD? 1663
SBUS<sb>:OSPI:FRAMe<fr>:CMDFormatted? 1663
SBUS<sb>:OSPI:FRAMe<fr>:CEXTension? 1664
SBUS<sb>:OSPI:FRAMe<fr>:CXFormatted? 1664
SBUS<sb>:OSPI:FRAMe<fr>:DCOunt? 1664

SBUS<sb>:OSPI:FRAMe<fr>:TYPE?....1665
SBUS<sb>:OSPI:FRAMe<fr>:STARt?....1665
SBUS<sb>:OSPI:FRAMe<fr>:STATus?....1665
SBUS<sb>:OSPI:FRAMe<fr>:STOP?....1666

SBUS<sb>:OSPI:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:ADDR?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:ADFormatted?

Returns the formatted address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmFormattedAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:BITRate?

Returns the bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:DATA?

Returns the data of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLDCount?

Returns the field count for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FDATa?

Returns the foramtted data value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | LENGth | OPCode | INComplete

OK
The field is valid.

LENGth
The field does not have the expected length.

OPCode
The opcode value is not found in your frame description list. See Section 14.4.4, "OCTO-SPI format configuration", on page 603.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:CMD?

Returns the opcode of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameCommand> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:CMDFormatted?

Returns the formatted opcode of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmFormattedCmd>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:CEXTension?

Returns the extension byte of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmCmdExt> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:CXFormatted?

Returns the formatted extension byte of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmFormattedCmdExt>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:DCOunt?

Returns the number of data payload frames.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameDataCount> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:TYPE?

Returns the type of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | OPCode | INComplete
`OK`: the frame is valid.
`OPCode`: operation code.

`INComplete`: INComplete word. The word does not have the expected word length.
`LENGth`: The frame is not contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.5 I²C (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1666
- Filter....1669
- Format....1674
- Hardware trigger....1684
- Software trigger....1688
- Decode results....1694

18.18.5.1 Configuration

SBUS<sb>:I2C:SCL:HYSTeresis....1667
SBUS<sb>:I2C:SCL:SOURce....1667
SBUS<sb>:I2C:SCL:THReshold....1667
SBUS<sb>:I2C:SDA:HYSTeresis....1667
SBUS<sb>:I2C:SDA:SOURce....1668
SBUS<sb>:I2C:SDA:THReshold....1668
SBUS<sb>:I2C:POSition....1668
SBUS<sb>:I2C:SCALe....1668

SBUS<sb>:I2C:SCL:HYSTeresis <Hysteresis>

Sets a hysteresis value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 616

SBUS<sb>:I2C:SCL:SOURce SCLSource

Selects the waveform source of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
SCLSource C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCL source" on page 615

SBUS<sb>:I2C:SCL:THReshold <Threshold>

Sets a user-defined threshold value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 616

SBUS<sb>:I2C:SDA:HYSTeresis <Hysteresis>

Sets a hysteresis value for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 616

SBUS<sb>:I2C:SDA:SOURce SDASource

Sets the source channel to which the data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
SDASource C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SDA source" on page 615

SBUS<sb>:I2C:SDA:THReshold <Threshold>

Sets a user-defined threshold value for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 616

SBUS<sb>:I2C:POSition <Position>

Sets the vertical position of the I^2C signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:I2C:SCALe <Scale>

Set the vertical scale of the I^2C signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.5.2 Filter

There are two commands for each parameter, that you can use for defining the I2C settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `SBUS:I2C:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:I2C:FILTer:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:I2C:FILTer:CHKall ... 1669
SBUS<sb>:I2C:FILTer:CLR ... 1670
SBUS<sb>:I2C:FILTer:INVert ... 1670
SBUS<sb>:I2C:FILTer:RST ... 1670
SBUS<sb>:I2C:FILTer:FRENable ... 1670
SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle ... 1670
SBUS<sb>:I2C:FILTer:DMAX ... 1671
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1671
SBUS<sb>:I2C:FILTer:DMIN ... 1671
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1671
SBUS<sb>:I2C:FILTer:DOPerator ... 1671
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1671
SBUS<sb>:I2C:FILTer:ERENable ... 1672
SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle ... 1672
SBUS<sb>:I2C:FILTer:IMAX ... 1672
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1672
SBUS<sb>:I2C:FILTer:IMIN ... 1673
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1673
SBUS<sb>:I2C:FILTer:IOPerator ... 1673
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1673
SBUS<sb>:I2C:FILTer:BIT ... 1673
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1673
SBUS<sb>:I2C:FILTer:FIENable ... 1674
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1674

SBUS<sb>:I2C:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 618

SBUS<sb>:I2C:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 618

SBUS<sb>:I2C:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 618

SBUS<sb>:I2C:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 618

SBUS<sb>:I2C:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:I2C:FILTer:FRENable? <Enabler>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 618

SBUS<sb>:I2C:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:DMAX? <Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:I2C:FILTer:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 618

SBUS<sb>:I2C:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:DMIN? <Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 618

SBUS<sb>:I2C:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:I2C:FILTer:DOPerator? <Operator>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 618

SBUS<sb>:I2C:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:I2C:FILTer:ERENable? <Enabler>
SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 620

SBUS<sb>:I2C:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:IMAX? <Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:I2C:FILTer:IOPerator`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 618

SBUS<sb>:I2C:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:IMIN? <Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 618

SBUS<sb>:I2C:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:I2C:FILTer:IOPerator? <Operator>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 618

SBUS<sb>:I2C:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:I2C:FILTer:BIT? <Bit>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 618

SBUS<sb>:I2C:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:I2C:FILTer:FIENable? <Enabler>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 618

18.18.5.3 Format

This section describes the commands to specify and query frame formats for the "I2C" protocol.

SBUS<sb>:I2C:FORMat:SELect....1675
SBUS<sb>:I2C:FORMat:ADDFrame....1675
SBUS<sb>:I2C:FORMat:LOAD....1675
SBUS<sb>:I2C:FORMat:SAVE....1676
SBUS<sb>:I2C:FORMat:CLR....1676
SBUS<sb>:I2C:FORMat:FCOunt?....1676
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ADDField....1676
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLDCount?....1677
SBUS<sb>:I2C:FORMat:FRAMe<fr>:NAME....1677
SBUS<sb>:I2C:FORMat:FRAMe<fr>:COLor....1677
SBUS<sb>:I2C:FORMat:FRAMe<fr>:TYPE....1677
SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENCheck....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENValue....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Field....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Field....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Field....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Value....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Value....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Value....1679

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:NAME....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:COLor....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1680
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1680
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1680
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1681
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1681
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1682
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1682
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1683
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1683
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARA....1684
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARB....1684

SBUS<sb>:I2C:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Asynchronous command

Manual operation: See "Show format" on page 620

SBUS<sb>:I2C:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 620

SBUS<sb>:I2C:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 621

SBUS<sb>:I2C:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 621

SBUS<sb>:I2C:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 621

SBUS<sb>:I2C:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 621

SBUS<sb>:I2C:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 623

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 622

SBUS<sb>:I2C:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 622

SBUS<sb>:I2C:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 622

SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 622

SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 622

SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 622

SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 622

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 623

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 623

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 623

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 624

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 624

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 624

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 624

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 625

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 625

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 625

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 625

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 625

18.18.5.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:I2C:TYPE 1684
TRIGger:SBHW:I2C:ACCess 1685
TRIGger:SBHW:I2C:ACONdition 1685
TRIGger:SBHW:I2C:ADDRess 1686
TRIGger:SBHW:I2C:ADDTo 1686
TRIGger:SBHW:I2C:ADNack 1686
TRIGger:SBHW:I2C:AMODe 1686
TRIGger:SBHW:I2C:DCONdition 1687
TRIGger:SBHW:I2C:DMIN 1687
TRIGger:SBHW:I2C:DPOSition 1687
TRIGger:SBHW:I2C:DRNack 1687
TRIGger:SBHW:I2C:DWNack 1688

TRIGger:SBHW:I2C:TYPE <Type>

Selects the trigger type for I²C analysis.

Parameters:
<Type> STARt | REPStart | STOP | NACK | ADDRess | DATA | ADAT

STARt
Start condition

REPStart
Repeated start - the start condition occurs without previous stop condition.

STOP
Stop condition, end of frame

NACK
Missing acknowledge bit. To localize specific missing acknowledge bits, use:
`TRIGger:SBHW:I2C:ADNack`
`TRIGger:SBHW:I2C:DWNack`
`TRIGger:SBHW:I2C:DRNack`

ADDRess
Triggers on one specific address

DATA
Triggers on a specific data

ADAT
Triggers on a combination of address and data condition.

*RST: STARt

Usage: Asynchronous command

Manual operation: See "Type" on page 626

TRIGger:SBHW:I2C:ACCess <RWBitAddress>

Toggles the trigger condition between read and write access of the primary. Select "Either" if the transfer direction is not relevant for the trigger condition.

Parameters:
<RWBitAddress> READ | WRITe | EITHer
*RST: EITHer

Usage: Asynchronous command

Manual operation: See "R/W bit" on page 628

TRIGger:SBHW:I2C:ACONdition <AddrOptor>

Sets the operator to set a specific address or an address range. The address values are set with `TRIGger:SBHW:I2C:ADDRess` and `TRIGger:SBHW:I2C:ADDTo`.

Parameters:
<AddrOptor> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

TRIGger:SBHW:I2C:ADDRess <Address>

Triggers on the specified address, or sets the start value of an address range depending on the condition set with `TRIGger:SBHW:I2C:ACONdition`.

Parameters:
<Address>

Usage: Asynchronous command

Manual operation: See "Address" on page 628

TRIGger:SBHW:I2C:ADDTo <AddressTo>

Sets the end value of an address range if the condition is set to an address range with `TRIGger:SBHW:I2C:ACONdition`.

Parameters:
<AddressTo>

Usage: Asynchronous command

Manual operation: See "Address" on page 628

TRIGger:SBHW:I2C:ADNack <AddressNack>

Triggers if the address acknowledge bit is missing - no target recognizes the address.

Parameters:
<AddressNack> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 628

TRIGger:SBHW:I2C:AMODe <AddressType>

Sets the address length to be triggered on: 7 bit or 10 bit.

Parameters:
<AddressType> BIT7 | BIT7RW | BIT7_RW | BIT10
Note that `BIT7RW` is the same address type as `BIT7_RW`.

BIT7 | BIT10
Enter only the seven or ten address bits in the address pattern.

BIT7RW | BIT7_RW
Enter seven address bits and also the read/write bit.

*RST: BIT7

Usage: Asynchronous command

Manual operation: See "Address type" on page 628

TRIGger:SBHW:I2C:DCONdition <DataOperator>

Sets the operator to set a specific data value or a data range.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data" on page 629

TRIGger:SBHW:I2C:DMIN <Data>

Specifies the data bit pattern, or sets the start value of a data pattern range. Enter the bytes in MSB first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

Parameters:
<Data>

Usage: Asynchronous command

Manual operation: See "Data" on page 629

TRIGger:SBHW:I2C:DPOSition <DataPosition>

Sets the number of data bytes to be skipped after the address.

Parameters:
<DataPosition> Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Position" on page 629

TRIGger:SBHW:I2C:DRNack <DataReadNack>

Triggers on the end of the read process when the controller reads data from the target. This NACK is sent according to the protocol definition, it is not an error.

Parameters:
<DataReadNack> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 628

TRIGger:SBHW:I2C:DWNack <DataWriteNack>

Triggers if a date acknowledge bit is missing - the addressed target does not accept the data.

Parameters:

<DataWriteNack> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 628

18.18.5.5 Software trigger

There are two commands for each parameter, that you can use for defining the I2C settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `TRIGger:SBSW:I2C:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `STRIGger:SBSW:I2C:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:I2C:CHKall....1689
TRIGger:SBSW:I2C:CLR....1689
TRIGger:SBSW:I2C:INVert....1689
TRIGger:SBSW:I2C:RST....1689
TRIGger:SBSW:I2C:FRENable....1689
TRIGger:SBSW:I2C:FRAMe<fr>:ENABle....1689
TRIGger:SBSW:I2C:BIT....1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:BIT....1690
TRIGger:SBSW:I2C:DMAX....1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMAX....1690
TRIGger:SBSW:I2C:DMIN....1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMIN....1690
TRIGger:SBSW:I2C:DOPerator....1691
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator....1691
TRIGger:SBSW:I2C:FIENable....1691
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:ENABle....1691
TRIGger:SBSW:I2C:IMAX....1692
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMAX....1692
TRIGger:SBSW:I2C:IMIN....1692
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMIN....1692
TRIGger:SBSW:I2C:IOPerator....1692
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator....1692
TRIGger:SBSW:I2C:ERENable....1693

TRIGger:SBSW:I2C:ERRor<m>:ENABle 1693
SBUS<sb>:I2C:SWTindex? 1693
SBUS<sb>:I2C:SWTTime? 1693

TRIGger:SBSW:I2C:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 630

TRIGger:SBSW:I2C:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 630

TRIGger:SBSW:I2C:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 630

TRIGger:SBSW:I2C:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 630

TRIGger:SBSW:I2C:FRENable <Frame>,<Enabler>
TRIGger:SBSW:I2C:FRENable? <Enabler>
TRIGger:SBSW:I2C:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 631

TRIGger:SBSW:I2C:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:I2C:BIT? <Bit>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 631

TRIGger:SBSW:I2C:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:I2C:DMAX? <Data>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 631

TRIGger:SBSW:I2C:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:I2C:DMIN? <Data>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 631

TRIGger:SBSW:I2C:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:I2C:DOPerator? <Operator>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 631

TRIGger:SBSW:I2C:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:I2C:FIENable? <Enabler>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 631

TRIGger:SBSW:I2C:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:I2C:IMAX? <Data>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 631

TRIGger:SBSW:I2C:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:I2C:IMIN? <Data>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 631

TRIGger:SBSW:I2C:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:I2C:IOPerator? <Operator>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 631

TRIGger:SBSW:I2C:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:I2C:ERENable? <Enabler>
TRIGger:SBSW:I2C:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 632

SBUS<sb>:I2C:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.5.6 Decode results

SBUS<sb>:I2C:FCOunt? 1694
SBUS<sb>:I2C:FRAMe<fr>:AACCess? 1694
SBUS<sb>:I2C:FRAMe<fr>:ACCess? 1695
SBUS<sb>:I2C:FRAMe<fr>:ACOMplete? 1695
SBUS<sb>:I2C:FRAMe<fr>:ADBStart? 1695
SBUS<sb>:I2C:FRAMe<fr>:ADDRess? 1696
SBUS<sb>:I2C:FRAMe<fr>:ADEVice? 1696
SBUS<sb>:I2C:FRAMe<fr>:AMODe? 1696
SBUS<sb>:I2C:FRAMe<fr>:ASTart? 1697
SBUS<sb>:I2C:FRAMe<fr>:BITRate? 1697
SBUS<sb>:I2C:FRAMe<fr>:FLDCount? 1697
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:FVALue? 1698
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:LABel? 1698
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STARt? 1698
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STATe? 1699
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:VALue? 1699
SBUS<sb>:I2C:FRAMe<fr>:DATA? 1700
SBUS<sb>:I2C:FRAMe<fr>:RWBStart? 1700
SBUS<sb>:I2C:FRAMe<fr>:STARt? 1700
SBUS<sb>:I2C:FRAMe<fr>:STATus? 1701
SBUS<sb>:I2C:FRAMe<fr>:STOP? 1701
SBUS<sb>:I2C:FRAMe<fr>:SYMBol? 1702

SBUS<sb>:I2C:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:AACCess?

Returns the address acknowledge bit value for the indicated frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressAckBit> ACK | NACK | EITHer
*RST: EITHer

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ACCess?

Returns the value of the R/W bit of the indicated frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<RWBit> UNDefined | READ | WRITe | EITHer
*RST: UNDefined

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ACOMplete?

Returns if the address is completely contained in the acquisition.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddrComplete> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADBStart?

Returns the start time of the address acknowledge bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<AddrAckBtStrt> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<AddressValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADEVice?

Returns the pure device address of the indicated frame *without* the R/W bit.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<DeviceAddress> Range: 0 to 1023
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:AMODe?

Returns the address length.

See also `TRIGger:SBHW:I2C:AMODe` on page 1686.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressType> BIT7 | BIT7RW | BIT7_RW | BIT10
*RST: BIT7

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ASTart?

Returns the start time of the address for the indicated frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STARt?

Returns the start time of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Start> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | ADDifferent | NOSTop | UNKNown | INComplete

OK
The field has no error, it is valid.

ADDifferent
10-bit read address different. For a read access on a 10-bit address, the first address byte is sent twice, first as write, the second as read. The first 7 bits of the byte must be identical. If they are not identical, the ADDiffernt error is indicated.

NOSTop
The stop bit is missing.

UNKNown
Unknown field type detected.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:DATA?

Returns the data words of the specified frame as comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example:
```
BUS:I2C:FRAMe4:DATA?
<-- 3,74,164,18
```

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:RWBStart?

Returns the start time of the R/W bit

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<RWBitStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | ADDifferent | NOSTop | UNKNown | INComplete

OK
The frame is valid.

ADDifferent
10-bit read address different. For a read access on a 10-bit address, the first address byte is sent twice, first as write, the second as read. The first 7 bits of the byte must be identical. If they are not identical, the ADDiffernt error is indicated.

NOSTop
The stop bit is missing.

UNKNown
Unknown frame type detected.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Translation> String with the symbolic name of the frame

Usage: Query only
Asynchronous command

18.18.6 I3C (option R&S MXO5-K550)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1702
- Filter....1705
- Format....1711
- Software trigger....1720
- Decode results....1726

18.18.6.1 Configuration

SBUS<sb>:I3C:SCL:HYSTeresis....1702
SBUS<sb>:I3C:SCL:SOURce....1703
SBUS<sb>:I3C:SCL:THReshold....1703
SBUS<sb>:I3C:SDA:HYSTeresis....1703
SBUS<sb>:I3C:SDA:SOURce....1703
SBUS<sb>:I3C:SDA:THReshold....1704
SBUS<sb>:I3C:MINGap:SELect....1704
SBUS<sb>:I3C:MINGap:WIDTh....1704
SBUS<sb>:I3C:POSition....1705
SBUS<sb>:I3C:SCALe....1705

SBUS<sb>:I3C:SCL:HYSTeresis <SCLHysteresis>

Sets a hysteresis value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLHysteresis>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 639

SBUS<sb>:I3C:SCL:SOURce SCLSource

Selects the waveform source of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
SCLSource C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCL source" on page 638

SBUS<sb>:I3C:SCL:THReshold <SCLThreshold>

Sets a user-defined threshold value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLThreshold>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 639

SBUS<sb>:I3C:SDA:HYSTeresis <SDAHysteresis>

Sets a hysteresis value for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAHysteresis>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 639

SBUS<sb>:I3C:SDA:SOURce SDASource

Sets the source channel to which the data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

SDASource — C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SDA source" on page 638

SBUS<sb>:I3C:SDA:THReshold <SDAThreshold>

Sets a user-defined threshold value for the data line.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<SDAThreshold>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 639

SBUS<sb>:I3C:MINGap:SELect <MingapSelect>

Specifies whether a minimum gap before the 1st decoded frame is required.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<MingapSelect> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Require min gap" on page 639

SBUS<sb>:I3C:MINGap:WIDTh <MingapWidth>

Specifies the minimum duration of the gap.

Available, if `SBUS<sb>:I3C:MINGap:SELect` is set to `ON`.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<MingapWidth>

Range: 1E-11 to 1
Increment: 1E-11
*RST: 1E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "Min gap width" on page 639

SBUS<sb>:I3C:POSition <Position>

Sets the vertical position of the I3C signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:I3C:SCALe <Scale>

Sets the vertical scale of the I3C signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.6.2 Filter

There are two commands for each parameter, that you can use for defining the I3C settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `SBUS:I3C:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:I3C:FILTer:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:I3C:FILTer:CHKall ... 1706
SBUS<sb>:I3C:FILTer:CLR ... 1706
SBUS<sb>:I3C:FILTer:INVert ... 1706
SBUS<sb>:I3C:FILTer:RST ... 1706
SBUS<sb>:I3C:FILTer:FRENable ... 1707
SBUS<sb>:I3C:FILTer:FRAMe<fr>:ENABle ... 1707
SBUS<sb>:I3C:FILTer:DMAX ... 1707
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1707
SBUS<sb>:I3C:FILTer:DMIN ... 1707
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1707
SBUS<sb>:I3C:FILTer:DOPerator ... 1708
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1708
SBUS<sb>:I3C:FILTer:ERENable ... 1708

SBUS<sb>:I3C:FILTer:ERRor<n>:ENABle....1708
SBUS<sb>:I3C:FILTer:IMAX....1709
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1709
SBUS<sb>:I3C:FILTer:IMIN....1709
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1709
SBUS<sb>:I3C:FILTer:IOPerator....1709
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1709
SBUS<sb>:I3C:FILTer:BIT....1710
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:BIT....1710
SBUS<sb>:I3C:FILTer:FIENable....1710
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1710

SBUS<sb>:I3C:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 640

SBUS<sb>:I3C:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 640

SBUS<sb>:I3C:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 640

SBUS<sb>:I3C:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 640

SBUS<sb>:I3C:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:I3C:FILTer:FRENable? <Enabler>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 641

SBUS<sb>:I3C:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:I3C:FILTer:DMAX? <Data>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 641

SBUS<sb>:I3C:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:I3C:FILTer:DMIN? <Data>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 641

SBUS<sb>:I3C:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:I3C:FILTer:DOPerator? <Operator>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 641

SBUS<sb>:I3C:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:I3C:FILTer:ERENable? <Enabler>
SBUS<sb>:I3C:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 642

SBUS<sb>:I3C:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:I3C:FILTer:IMAX? <Data>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:I3C:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 641

SBUS<sb>:I3C:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:I3C:FILTer:IMIN? <Data>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 641

SBUS<sb>:I3C:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:I3C:FILTer:IOPerator? <Operator>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 641

SBUS<sb>:I3C:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:I3C:FILTer:BIT? <Bit>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 641

SBUS<sb>:I3C:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:I3C:FILTer:FIENable? <Enabler>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 641

18.18.6.3 Format

This section describes the commands to specify and query frame formats for the "I3C" protocol.

SBUS<sb>:I3C:FORMat:SELect ... 1711
SBUS<sb>:I3C:FORMat:ADDFrame ... 1712
SBUS<sb>:I3C:FORMat:LOAD ... 1712
SBUS<sb>:I3C:FORMat:SAVE ... 1712
SBUS<sb>:I3C:FORMat:CLR ... 1712
SBUS<sb>:I3C:FORMat:FCOunt? ... 1713
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ADDField ... 1713
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLDCount? ... 1713
SBUS<sb>:I3C:FORMat:FRAMe<fr>:NAME ... 1713
SBUS<sb>:I3C:FORMat:FRAMe<fr>:COLor ... 1714
SBUS<sb>:I3C:FORMat:FRAMe<fr>:TYPE ... 1714
SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENCheck ... 1714
SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENValue ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Field ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Field ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Field ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Value ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Value ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Value ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1716
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1716
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1716
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1717
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1717
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1717
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1718
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1718
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1719
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1719
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1720
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1720
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1720

SBUS<sb>:I3C:FORMat:SELect <Select>

Enables the format configuration

Suffix:

<sb> 1 to 4, index of the serial bus

Usage: Asynchronous command

Manual operation: See "Show format" on page 643

SBUS<sb>:I3C:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 643

SBUS<sb>:I3C:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 644

SBUS<sb>:I3C:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 644

SBUS<sb>:I3C:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 643

SBUS<sb>:I3C:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 643

SBUS<sb>:I3C:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 645

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 644

SBUS<sb>:I3C:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 644

SBUS<sb>:I3C:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 644

SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 644

SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 644

SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 645

SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 645

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 646

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 646

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 646

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 646

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 646

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first
*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 646

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 647

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 647

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 647

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 647

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 648

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 648

18.18.6.4 Software trigger

There are two commands for each parameter, that you can use for defining the I3C settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `TRIGger:SBSW:I3C:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `STRIGger:SBSW:I3C:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:I3C:CHKall....1721
TRIGger:SBSW:I3C:CLR....1721
TRIGger:SBSW:I3C:INVert....1722
TRIGger:SBSW:I3C:RST....1722
TRIGger:SBSW:I3C:FRENable....1722
TRIGger:SBSW:I3C:FRAMe<fr>:ENABle....1722
TRIGger:SBSW:I3C:BIT....1722
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:BIT....1722
TRIGger:SBSW:I3C:DMAX....1723
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMAX....1723
TRIGger:SBSW:I3C:DMIN....1723
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMIN....1723
TRIGger:SBSW:I3C:DOPerator....1723
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator....1723
TRIGger:SBSW:I3C:FIENable....1724
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:ENABle....1724
TRIGger:SBSW:I3C:IMAX....1724
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMAX....1724
TRIGger:SBSW:I3C:IMIN....1725
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMIN....1725
TRIGger:SBSW:I3C:IOPerator....1725
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator....1725
TRIGger:SBSW:I3C:ERENable....1725
TRIGger:SBSW:I3C:ERRor<m>:ENABle....1725
SBUS<sb>:I3C:SWTindex?....1726
SBUS<sb>:I3C:SWTTime?....1726

TRIGger:SBSW:I3C:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 649

TRIGger:SBSW:I3C:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 649

TRIGger:SBSW:I3C:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 649

TRIGger:SBSW:I3C:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 649

TRIGger:SBSW:I3C:FRENable <Frame>,<Enabler>
TRIGger:SBSW:I3C:FRENable? <Enabler>
TRIGger:SBSW:I3C:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 649

TRIGger:SBSW:I3C:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:I3C:BIT? <Bit>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 649

TRIGger:SBSW:I3C:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:I3C:DMAX? <Data>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 649

TRIGger:SBSW:I3C:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:I3C:DMIN? <Data>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 649

TRIGger:SBSW:I3C:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:I3C:DOPerator? <Operator>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 649

TRIGger:SBSW:I3C:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:I3C:FIENable? <Enabler>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 649

TRIGger:SBSW:I3C:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:I3C:IMAX? <Data>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 649

TRIGger:SBSW:I3C:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:I3C:IMIN? <Data>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 649

TRIGger:SBSW:I3C:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:I3C:IOPerator? <Operator>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 649

TRIGger:SBSW:I3C:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:I3C:ERENable? <Enabler>
TRIGger:SBSW:I3C:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 651

SBUS<sb>:I3C:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.6.5 Decode results

SBUS<sb>:I3C:FCOunt? 1727
SBUS<sb>:I3C:FRAMe<fr>:ADDRess? 1727
SBUS<sb>:I3C:FRAMe<fr>:ASTart? 1727
SBUS<sb>:I3C:FRAMe<fr>:FLDCount? 1728
SBUS<sb>:I3C:FRAMe<fr>:BITRate? 1728
SBUS<sb>:I3C:FRAMe<fr>:DATA? 1728
SBUS<sb>:I3C:FRAMe<fr>:RWBStart? 1729
SBUS<sb>:I3C:FRAMe<fr>:STARt? 1729
SBUS<sb>:I3C:FRAMe<fr>:STATus? 1729
SBUS<sb>:I3C:FRAMe<fr>:STOP? 1730
SBUS<sb>:I3C:FRAMe<fr>:SYMBol? 1730
SBUS<sb>:I3C:FRAMe<fr>:ACK? 1731
SBUS<sb>:I3C:FRAMe<fr>:ACKStart? 1731
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:FVALue? 1731
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:LABel? 1732
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:STATe? 1732

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:VALue? 1733
SBUS<sb>:I3C:FRAMe<fr>:COMMand? 1733
SBUS<sb>:I3C:FRAMe<fr>:CRC? 1733
SBUS<sb>:I3C:FRAMe<fr>:FADDress? 1733
SBUS<sb>:I3C:FRAMe<fr>:FCOMmand? 1734
SBUS<sb>:I3C:FRAMe<fr>:FCRC? 1734
SBUS<sb>:I3C:FRAMe<fr>:RWBit? 1734
SBUS<sb>:I3C:FRAMe<fr>:TYPE? 1735

SBUS<sb>:I3C:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus
Selects the serial bus.

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:ASTart?

Returns the start time of the address for the indicated frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:DATA?

Returns the data words of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example:
```
BUS:I3C:FRAMe4:DATA?
<-- 3,74,164,18
```

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:RWBStart?

Returns the start time of the R/W bit

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<RWBitStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | ACK | PAR | CRC | LENGth | UNKNown | INComplete

OK
The frame is valid.

ACK
Wrong acknowledgment (ACK) delimiter occurred.

PAR
Wrong parity detected.

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of frame.

UNKNown
Unknown frame type detected.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Translation> String with the symbolic name of the frame

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:ACK?

Returns the value of the acknowledge bit for the selected frame. Because this ACK bit is transmitted right after the address field, it acknowledges receiving the address.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AckBitValue> ACK | NACK | EITHer
*RST: EITHer

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:ACKStart?

Returns the start time of the acknowledge bit for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AckBitStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | ACK | PAR | CRC | LENGth | UNKNown | INComplete

OK
The field has no error, it is valid.

ACK
Wrong acknowledgment (ACK) delimiter occurred.

PAR
Wrong parity detected.

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of the field.

UNKNown
Unknown field type detected.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:COMMand?

Returns the selected frame's command response, which is an integer.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Response> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:CRC?

Returns the cyclic redundancy check (CRC) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRCValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FADDress?

Returns the formatted address for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedAddrVal>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FCOMmand?

Returns the formatted command from the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCmd>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FCRC?

Returns the formatted CRC value for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRCVal>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:RWBit?

Returns the value of the R/W bit of the selected frame. The value "0" denotes "Write", the value "1" denotes "Read".

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<RWBitValue> UNDefined | READ | WRITe | EITHer
*RST: UNDefined

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> UNKNown | PROB | READ | WRIT | BRDC | DRCT | HDDR | HTSX

*RST: UNKNown

Usage: Query only
Asynchronous command

18.18.7 D-PHY (option R&S MXO5-K580)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1735
- Filter....1741
- Format....1747
- Software trigger....1757
- Decode results....1763

18.18.7.1 Configuration

SBUS<sb>:DPHY:MODE....1736
SBUS<sb>:DPHY:SCRambled....1736
SBUS<sb>:DPHY:DISTribute....1737
SBUS<sb>:DPHY:CLK:SOURce....1737
SBUS<sb>:DPHY:CLK:THReshold....1737
SBUS<sb>:DPHY:CLK:HYSTeresis....1737
SBUS<sb>:DPHY:POSition....1738
SBUS<sb>:DPHY:SCALe....1738
SBUS<sb>:DPHY:DNZero:SOURce....1738
SBUS<sb>:DPHY:DPZero:SOURce....1738
SBUS<sb>:DPHY:DNZero:THReshold....1738
SBUS<sb>:DPHY:DPZero:THReshold....1738
SBUS<sb>:DPHY:DNZero:HYSTeresis....1739
SBUS<sb>:DPHY:DPZero:HYSTeresis....1739
SBUS<sb>:DPHY:DPZero:POSition....1739

SBUS<sb>:DPHY:DPZero:SCALe ... 1739
SBUS<sb>:DPHY:DNZero:LPTHreshold ... 1739
SBUS<sb>:DPHY:DPZero:LPTHreshold ... 1739
SBUS<sb>:DPHY:DNZero:LPHYsteresis ... 1740
SBUS<sb>:DPHY:DPZero:LPHYsteresis ... 1740
SBUS<sb>:DPHY:DPONe:SOURce ... 1740
SBUS<sb>:DPHY:DPTWo:SOURce ... 1740
SBUS<sb>:DPHY:DPTHree:SOURce ... 1740
SBUS<sb>:DPHY:DPONe:THReshold ... 1740
SBUS<sb>:DPHY:DPTWo:THReshold ... 1740
SBUS<sb>:DPHY:DPTHree:THReshold ... 1740
SBUS<sb>:DPHY:DPONe:HYSTeresis ... 1741
SBUS<sb>:DPHY:DPTWo:HYSTeresis ... 1741
SBUS<sb>:DPHY:DPTHree:HYSTeresis ... 1741
SBUS<sb>:DPHY:DPONe:POSition ... 1741
SBUS<sb>:DPHY:DPTWo:POSition ... 1741
SBUS<sb>:DPHY:DPTHree:POSition ... 1741
SBUS<sb>:DPHY:DPONe:SCALe ... 1741
SBUS<sb>:DPHY:DPONe:SCALe ... 1741
SBUS<sb>:DPHY:DPONe:SCALe ... 1741
SBUS<sb>:DPHY:DPTWo:SCALe ... 1741
SBUS<sb>:DPHY:DPTHree:SCALe ... 1741

SBUS<sb>:DPHY:MODE <Mode>

Selects which MIPI-based protocol is used.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> DPHY | CSI | DSI
*RST: DPHY

Usage: Asynchronous command

Manual operation: See "Protocol" on page 656

SBUS<sb>:DPHY:SCRambled <Mode>

Enables the data scrambling.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Scrambled" on page 657

SBUS<sb>:DPHY:DISTribute <Mode>

Enables lane distribution, where individual contributions to the long or short packets from multiple data lanes are shown separately on the GUI.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> OFF | ON
*RST: OFF

Usage: Asynchronous command

SBUS<sb>:DPHY:CLK:SOURce <CLKSource>

Selects the source for the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CLKSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CLK source" on page 657

SBUS<sb>:DPHY:CLK:THReshold <Threshold>

Sets the threshold for the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CLK threshold, CLK hysteresis" on page 658

SBUS<sb>:DPHY:CLK:HYSTeresis <Hysteresis>

Sets the hysteresis for the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CLK threshold, CLK hysteresis" on page 658

SBUS<sb>:DPHY:POSition <Position>

Sets the vertical position of the D-PHY signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:DPHY:SCALe <Scale>

Sets the vertical scale of the D-PHY signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

SBUS<sb>:DPHY:DNZero:SOURce <DN0Source>
SBUS<sb>:DPHY:DPZero:SOURce <DP0Source>

Selects the source for the low-power data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DP0Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Dp0, Dn0 source" on page 657

SBUS<sb>:DPHY:DNZero:THReshold <Threshold>
SBUS<sb>:DPHY:DPZero:THReshold <Threshold>

Sets the threshold for the low-power data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Dp0, Dn0 threshold, Dp0, Dn0 hysteresis" on page 658

SBUS<sb>:DPHY:DNZero:HYSTeresis <Hysteresis>
SBUS<sb>:DPHY:DPZero:HYSTeresis <Hysteresis>

Sets the hysteresis for the low-power data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Dp0, Dn0 threshold, Dp0, Dn0 hysteresis" on page 658

SBUS<sb>:DPHY:DPZero:POSition <DPHY DP0 position>

Sets the vertical position of the DP0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPHY DP0 position>

Usage: Asynchronous command

SBUS<sb>:DPHY:DPZero:SCALe <DPHY DP0 scale>

Sets the vertical scale of the DP0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPHY DP0 scale>

Usage: Asynchronous command

SBUS<sb>:DPHY:DNZero:LPTHreshold <Threshold>
SBUS<sb>:DPHY:DPZero:LPTHreshold <Threshold>

Sets the threshold for the low-power states of DP0 and DN0.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "LP Dp0, LP Dn0 threshold, LP Dp0, LP Dn0 hysteresis" on page 658

SBUS<sb>:DPHY:DNZero:LPHYsteresis <Hysteresis>
SBUS<sb>:DPHY:DPZero:LPHYsteresis <Hysteresis>

Sets the hysteresis for the low-power states of DP0 and DN0.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "LP Dp0, LP Dn0 threshold, LP Dp0, LP Dn0 hysteresis" on page 658

SBUS<sb>:DPHY:DPONe:SOURce <DP1Source>
SBUS<sb>:DPHY:DPTWo:SOURce <DP2Source>
SBUS<sb>:DPHY:DPTHree:SOURce <DP3Source>

Selects the source for the high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DP3Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "DP<n> source" on page 657

SBUS<sb>:DPHY:DPONe:THReshold <Threshold>
SBUS<sb>:DPHY:DPTWo:THReshold <Threshold>
SBUS<sb>:DPHY:DPTHree:THReshold <Threshold>

Sets the threshold for the for the digitization of high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "DP<n> threshold, DP<n> hysteresis" on page 659

SBUS<sb>:DPHY:DPONe:HYSTeresis <Hysteresis>
SBUS<sb>:DPHY:DPTWo:HYSTeresis <Hysteresis>
SBUS<sb>:DPHY:DPTHree:HYSTeresis <Hysteresis>

Sets the hysteresis for the for the digitization of high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "DP<n> threshold, DP<n> hysteresis" on page 659

SBUS<sb>:DPHY:DPONe:POSition <DPHY DP1 position>
SBUS<sb>:DPHY:DPTWo:POSition <DPHY DP2 position>
SBUS<sb>:DPHY:DPTHree:POSition <DPHY DP3 position>

Sets the vertical position of the high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPHY DP3 position>

Usage: Asynchronous command

SBUS<sb>:DPHY:DPONe:SCALe <DPHY DP1 scale>
SBUS<sb>:DPHY:DPONe:SCALe <DPHY DP1 scale>
SBUS<sb>:DPHY:DPONe:SCALe <DPHY DP1 scale>
SBUS<sb>:DPHY:DPTWo:SCALe <DPHY DP2 scale>
SBUS<sb>:DPHY:DPTHree:SCALe <DPHY DP3 scale>

Sets the vertical scale of the high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

<sb> 1..4

Parameters:
<DPHY DP3 scale>

Usage: Asynchronous command

18.18.7.2 Filter

There are two commands for each parameter, that you can use for defining the D-PHY settings.

For example, to set the *Frame type =DPHY* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:DPHY:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:DPHY:FILTer:DMIN "DPHY-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:DPHY:FILTer:CHKall....1742
SBUS<sb>:DPHY:FILTer:CLR....1742
SBUS<sb>:DPHY:FILTer:INVert....1743
SBUS<sb>:DPHY:FILTer:RST....1743
SBUS<sb>:DPHY:FILTer:BIT....1743
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:BIT....1743
SBUS<sb>:DPHY:FILTer:ERENable....1744
SBUS<sb>:DPHY:FILTer:ERRor<n>:ENABle....1744
SBUS<sb>:DPHY:FILTer:DMAX....1744
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1744
SBUS<sb>:DPHY:FILTer:DMIN....1744
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1744
SBUS<sb>:DPHY:FILTer:DOPerator....1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1745
SBUS<sb>:DPHY:FILTer:FIENable....1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1745
SBUS<sb>:DPHY:FILTer:FRENable....1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:ENABle....1745
SBUS<sb>:DPHY:FILTer:IMAX....1746
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1746
SBUS<sb>:DPHY:FILTer:IMIN....1746
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1746
SBUS<sb>:DPHY:FILTer:IOPerator....1747
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1747

SBUS<sb>:DPHY:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 660

SBUS<sb>:DPHY:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 660

SBUS<sb>:DPHY:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 660

SBUS<sb>:DPHY:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 660

SBUS<sb>:DPHY:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:DPHY:FILTer:BIT? <Bit>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 661

SBUS<sb>:DPHY:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:DPHY:FILTer:ERENable? <Enabler>
SBUS<sb>:DPHY:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 662

SBUS<sb>:DPHY:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:DPHY:FILTer:DMAX? <Data>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:DPHY:FILTer:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 661

SBUS<sb>:DPHY:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:DPHY:FILTer:DMIN? <Data>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 661

SBUS<sb>:DPHY:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:DPHY:FILTer:DOPerator? <Operator>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 661

SBUS<sb>:DPHY:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:DPHY:FILTer:FIENable? <Enabler>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 661

SBUS<sb>:DPHY:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:DPHY:FILTer:FRENable? <Enabler>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on D-PHY frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 661

SBUS<sb>:DPHY:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:DPHY:FILTer:IMAX? <Data>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:DPHY:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 661

SBUS<sb>:DPHY:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:DPHY:FILTer:IMIN? <Data>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 661

SBUS<sb>:DPHY:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:DPHY:FILTer:IOPerator? <Operator>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 661

18.18.7.3 Format

This section describes the commands to specify and query frame formats for the "D-PHY" protocol.

SBUS<sb>:DPHY:FORMat:SELect ... 1748
SBUS<sb>:DPHY:FORMat:ADDFrame ... 1748
SBUS<sb>:DPHY:FORMat:LOAD ... 1748
SBUS<sb>:DPHY:FORMat:SAVE ... 1748
SBUS<sb>:DPHY:FORMat:CLR ... 1749
SBUS<sb>:DPHY:FORMat:FCOunt? ... 1749
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ADDField ... 1749
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLDCount? ... 1749
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:NAME ... 1750
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:COLor ... 1750
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:TYPE ... 1750
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENCheck ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENValue ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Field ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Field ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Field ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Value ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Value ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Value ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1753
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1753
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1753
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1754
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1754
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1755

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1755
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1756
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1756
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARA....1757
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARB....1757

SBUS<sb>:DPHY:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 663

SBUS<sb>:DPHY:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 663

SBUS<sb>:DPHY:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 664

SBUS<sb>:DPHY:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 664

SBUS<sb>:DPHY:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 664

SBUS<sb>:DPHY:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 664

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 666

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 665

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 665

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 665

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 665

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 665

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 665

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 665

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 666

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 666

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 666

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 667

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 667

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 667

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 667

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 668

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 668

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 668

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 668

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 668

18.18.7.4 Software trigger

There are two commands for each parameter that you can use for defining the "D-PHY" settings.

For example, to set the *Frame type =DPHY-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:DPHY:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.
- `TRIGger:SBSW:DPHY:DMIN "DPHY-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:DPHY:CHKall....1758
TRIGger:SBSW:DPHY:CLR....1758
TRIGger:SBSW:DPHY:INVert....1758
TRIGger:SBSW:EBTB:INVert....1758
TRIGger:SBSW:DPHY:RST....1759
TRIGger:SBSW:DPHY:FRENable....1759
TRIGger:SBSW:DPHY:FRAMe<fr>:ENABle....1759
TRIGger:SBSW:DPHY:BIT....1759
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:BIT....1759
TRIGger:SBSW:DPHY:DMAX....1759
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMAX....1759
TRIGger:SBSW:DPHY:DMIN....1760
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMIN....1760
TRIGger:SBSW:DPHY:DOPerator....1760
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator....1760

TRIGger:SBSW:DPHY:FIENable 1761
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:ENABle 1761
TRIGger:SBSW:DPHY:IMAX 1761
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMAX 1761
TRIGger:SBSW:DPHY:IMIN 1761
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMIN 1761
TRIGger:SBSW:DPHY:IOPerator 1762
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator 1762
TRIGger:SBSW:DPHY:ERENable 1762
TRIGger:SBSW:DPHY:ERRor<m>:ENABle 1762
SBUS<sb>:DPHY:SWTindex? 1762
SBUS<sb>:DPHY:SWTTime? 1763

TRIGger:SBSW:DPHY:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 670

TRIGger:SBSW:DPHY:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 670

TRIGger:SBSW:DPHY:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 670

TRIGger:SBSW:EBTB:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 753

TRIGger:SBSW:DPHY:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 670

TRIGger:SBSW:DPHY:FRENable <Frame>,<Enabler>
TRIGger:SBSW:DPHY:FRENable? <Enabler>
TRIGger:SBSW:DPHY:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 670

TRIGger:SBSW:DPHY:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:DPHY:BIT? <Bit>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 670

TRIGger:SBSW:DPHY:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:DPHY:DMAX? <Data>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 670

TRIGger:SBSW:DPHY:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:DPHY:DMIN? <Data>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 670

TRIGger:SBSW:DPHY:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:DPHY:DOPerator? <Operator>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 670

TRIGger:SBSW:DPHY:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:DPHY:FIENable? <Enabler>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 670

TRIGger:SBSW:DPHY:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:DPHY:IMAX? <Data>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 670

TRIGger:SBSW:DPHY:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:DPHY:IMIN? <Data>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 670

TRIGger:SBSW:DPHY:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:DPHY:IOPerator? <Operator>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 670

TRIGger:SBSW:DPHY:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:DPHY:ERENable? <Enabler>
TRIGger:SBSW:DPHY:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:

<m> index of the error

Parameters:

<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 672

SBUS<sb>:DPHY:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

<sb> 1..4

Return values:

<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.7.5 Decode results

This section describes the commands to query the results of the decoding of the "D-PHY" protocol.

For manual operation, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

SBUS<sb>:DPHY:FCOunt? 1764
SBUS<sb>:DPHY:FRAMe<fr>:FLDCount? 1764
SBUS<sb>:DPHY:FRAMe<fr>:BITRate? 1764
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:STATe? 1764
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:LABel? 1765
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:VALue? 1766
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:FVALue? 1766
SBUS<sb>:DPHY:FRAMe<fr>:STATus? 1766
SBUS<sb>:DPHY:FRAMe<fr>:STARt? 1767
SBUS<sb>:DPHY:FRAMe<fr>:STOP? 1767
SBUS<sb>:DPHY:FRAMe<fr>:TYPE? 1768
SBUS<sb>:DPHY:FRAMe<fr>:CRC? 1768
SBUS<sb>:DPHY:FRAMe<fr>:DATA? 1769
SBUS<sb>:DPHY:FRAMe<fr>:DT? 1769
SBUS<sb>:DPHY:FRAMe<fr>:FDT? 1769
SBUS<sb>:DPHY:FRAMe<fr>:ECC? 1770
SBUS<sb>:DPHY:FRAMe<fr>:VCID? 1770

SBUS<sb>:DPHY:FRAMe<fr>:FVCid?....1770
SBUS<sb>:DPHY:FRAMe<fr>:WC?....1770
SBUS<sb>:DPHY:FRAMe<fr>:FWC?....1771

SBUS<sb>:DPHY:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:BITRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | ECCWarning | ECC | FORMat | CRC | LENGth | INComplete

OK
The field has no error, it is valid.

ECCWarning
ECC warning, indicating a correctable transmission error that can be fixed by the receiver.

ECC
ECC error, indicating an uncorrectable transmission error.

FORMat
Format error due to a mismatch between frame length and frame ID. Only available for long and short packets.

CRC
The CRC of the frame is not as expected, indicating an error.

LENGth
The length of the field is not as expected, indicating an error.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Frame state> OK | ECCWarning | ECC | FORMat | CRC | LENGth | INComplete

OK
The field has no error, it is valid.

ECCWarning
ECC warning, indicating a correctable transmission error that can be fixed by the receiver.

ECC
ECC error, indicating an uncorrectable transmission error.

FORMat
Format error due to a mismatch between frame length and frame ID. Only available for long and short packets.

CRC
The CRC of the frame is not as expected, indicating an error.

LENGth
The length of the field is not as expected, indicating an error.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Frame start> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Frame stop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Frame type> HSData | HSSC | HSAC | HS_LP | HS_SP | LPHSreq | LPESc | LPTA | ALPCtrl | UNKNown

HSData
HS payload data

HSSC
HS scew calibration

HSAC
HS alternate calibration

HS_LP
HS long packet

HS_SP
HS short packet

LPHSreq
LP HS request

ILPESc
In-LP escape mode

LPTA
LP turnaround

ALPCtrl
ALP control burst

UNKNown
Unknown frame type

*RST: UNKNown

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:CRC?

Returns the CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Checksum> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:DATA?

Returns the data for the selected frame in comma-separated values, corresponds to the "Data" column in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:DT?

Returns the data type for the specified framet.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Data type> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FDT?

Returns the formatted data for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Formatted data type>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:ECC?

Returns the error correction code (ECC) of the specified frame

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Error correction code> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:VCID?

Returns the virtual channel ID for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Virtual channel ID> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FVCid?

Returns the formatted virtual channel ID for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Virtual channel ID>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:WC?

Returns the word count for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Word count> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FWC?

Returns the formatted word count for the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Formatted word count>

Usage: Query only
Asynchronous command

18.18.8 UART / RS-232 (option R&S MXO5- K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1771
- Filter....1777
- Format....1782
- Hardware trigger....1792
- Software trigger....1794
- Decode results....1800

18.18.8.1 Configuration

SBUS<sb>:UART:BITRate....1772
SBUS<sb>:UART:BORDer....1772
SBUS<sb>:UART:PACKets....1772
SBUS<sb>:UART:PARity....1773
SBUS<sb>:UART:POLarity....1773
SBUS<sb>:UART:RX:HYSTeresis....1773
SBUS<sb>:UART:RX:SOURce....1774
SBUS<sb>:UART:RX:THReshold....1774
SBUS<sb>:UART:SBIT....1774
SBUS<sb>:UART:SSIZe....1775

SBUS<sb>:UART:TOUT 1775
SBUS<sb>:UART:TX:HYSTeresis 1775
SBUS<sb>:UART:TX:SOURce 1775
SBUS<sb>:UART:TX:THReshold 1776
SBUS<sb>:UART:RX:POSition 1776
SBUS<sb>:UART:RX:SCALe 1776
SBUS<sb>:UART:TX:POSition 1776
SBUS<sb>:UART:TX:SCALe 1777

SBUS<sb>:UART:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Bitrate> Range: 300 to 20000000
Increment: 1
*RST: 9600
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate" on page 678

SBUS<sb>:UART:BORDer <BitOrder>

Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitOrder> LSBF | MSBF
*RST: LSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 678

SBUS<sb>:UART:PACKets <FrmSeparation>

Defines the method of packet separation. A packet is a number of subsequent words in a date stream.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FrmSeparation> NONE | TOUT

NONE
Packets are not considered.

TOUT
Defines a timeout between the packets. To set the timeout, use `SBUS<sb>:UART:TOUT`.

*RST: TOUT

Usage: Asynchronous command

Manual operation: See "Packets" on page 678

SBUS<sb>:UART:PARity <Parity>

Defines the optional parity bit that is used for error detection.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Parity> NONE | ODD | EVEN | MARK | SPC | DC

MARK
The parity bit is always a logic 1.

SPC
SPaCe: The parity bit is always a logic 0.

DC
Do not care: the parity is ignored.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Parity" on page 678

SBUS<sb>:UART:POLarity <Polarity>

Defines the logic levels of the bus. The idle state corresponds to a logic 1. The start bit corresponds to a logic 0. "Idle high" (high=1) is used, for example, for control signals, while "Idle low" (low=1) is defined for data lines (RS-232).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> IDLLow | IDLHigh

*RST: IDLHigh

Usage: Asynchronous command

Manual operation: See "Polarity" on page 678

SBUS<sb>:UART:RX:HYSTeresis <Rx hysteresis>

Sets the hysteresis for the Tx line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Rx hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 679

SBUS<sb>:UART:RX:SOURce <RxSource>

Selects the input channel for the receiver signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<RxSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source: Tx, Rx" on page 677

SBUS<sb>:UART:RX:THReshold <Rx threshold>

Sets a user-defined threshold value for the Rx line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Rx threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 679

SBUS<sb>:UART:SBIT <StopBits>

Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<StopBits> B1 | B15 | B2
*RST: B1

Usage: Asynchronous command

Manual operation: See "Stop bits" on page 678

SBUS<sb>:UART:SSIZe <DataBits>

Sets the number of data bits of a word in a range from 5 bits to 8 bits. If no parity bit is used, then 9 data bits are possible.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataBits> Range: 5 to 9
Increment: 1
*RST: 8

Usage: Asynchronous command

Manual operation: See "Data bits" on page 678

SBUS<sb>:UART:TOUT <Timeout>

Sets the timeout between packets in a UART data stream. A new packet starts with the first start bit after the timeout.

The command is relevant if `SBUS<sb>:UART:PACKets` is set to `TOUT`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Timeout> Range: 1E-06 to 1
Increment: 1
*RST: 0.000625
Default unit: s

Usage: Asynchronous command

Manual operation: See "Packets" on page 678

SBUS<sb>:UART:TX:HYSTeresis <Tx hysteresis>

Sets the hysteresis for the TX line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Tx hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 679

SBUS<sb>:UART:TX:SOURce <TxSource>

Selects the input channel for the transmitter signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TxSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source: Tx, Rx" on page 677

SBUS<sb>:UART:TX:THReshold <Tx threshold>

Sets a user-defined threshold value for the Tx line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Tx threshold> User-defined clock threshold

Usage: Asynchronous command

Manual operation: See "Threshold" on page 679

SBUS<sb>:UART:RX:POSition <Rx position>

Sets the vertical position of the RX UART signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Rx position>

Usage: Asynchronous command

SBUS<sb>:UART:RX:SCALe <Rx scale>

Set the vertical scale of the RX UART signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Rx scale>

Usage: Asynchronous command

SBUS<sb>:UART:TX:POSition <Tx position>

Sets the vertical position of the TX UART signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Tx position>

Usage: Asynchronous command

SBUS<sb>:UART:TX:SCALe <Tx scale>

Set the vertical scale of the TX UART signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Tx scale>

Usage: Asynchronous command

18.18.8.2 Filter

There are two commands for each parameter, that you can use for defining the UART settings.

For example, to set the *Frame type =Tx > Field =Data >01100* value you can use one of the following commands:

- `SBUS:UART:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:UART:FILTer:DMIN "Tx", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:UART:FILTer:CHKall ... 1778
SBUS<sb>:UART:FILTer:CLR ... 1778
SBUS<sb>:UART:FILTer:INVert ... 1778
SBUS<sb>:UART:FILTer:RST ... 1778
SBUS<sb>:UART:FILTer:IMIN ... 1779
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1779
SBUS<sb>:UART:FILTer:IMAX ... 1779
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1779
SBUS<sb>:UART:FILTer:IOPerator ... 1779
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1779
SBUS<sb>:UART:FILTer:ERENable ... 1780
SBUS<sb>:UART:FILTer:ERRor<n>:ENABle ... 1780
SBUS<sb>:UART:FILTer:DOPerator ... 1780
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1780
SBUS<sb>:UART:FILTer:DMIN ... 1780
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1780
SBUS<sb>:UART:FILTer:DMAX ... 1781
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1781
SBUS<sb>:UART:FILTer:BIT ... 1781

SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT 1781
SBUS<sb>:UART:FILTer:FRENable 1782
SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle 1782
SBUS<sb>:UART:FILTer:FIENable 1782
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1782

SBUS<sb>:UART:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 680

SBUS<sb>:UART:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 680

SBUS<sb>:UART:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 680

SBUS<sb>:UART:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 680

SBUS<sb>:UART:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:IMIN? <Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 681

SBUS<sb>:UART:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:IMAX? <Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 681

SBUS<sb>:UART:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:UART:FILTer:IOPerator? <Operator>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 681

SBUS<sb>:UART:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:UART:FILTer:ERENable? <Enabler>
SBUS<sb>:UART:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 682

SBUS<sb>:UART:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:UART:FILTer:DOPerator? <Operator>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 681

SBUS<sb>:UART:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:DMIN? <Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1..4
Selects the serial bus.

<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 681

SBUS<sb>:UART:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:DMAX? <Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 681

SBUS<sb>:UART:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:UART:FILTer:BIT? <Bit>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 681

SBUS<sb>:UART:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:UART:FILTer:FRENable? <Enabler>
SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 681

SBUS<sb>:UART:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:UART:FILTer:FIENable? <Enabler>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 681

18.18.8.3 Format

This section describes the commands to specify and query frame formats for the "UART" protocol.

SBUS<sb>:UART:FORMat:SELect 1783
SBUS<sb>:UART:FORMat:ADDFrame 1783
SBUS<sb>:UART:FORMat:LOAD 1784
SBUS<sb>:UART:FORMat:SAVE 1784
SBUS<sb>:UART:FORMat:CLR 1784
SBUS<sb>:UART:FORMat:FCOunt? 1784
SBUS<sb>:UART:FORMat:FRAMe<fr>:ADDField 1785

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLDCount? 1785
SBUS<sb>:UART:FORMat:FRAMe<fr>:NAME 1785
SBUS<sb>:UART:FORMat:FRAMe<fr>:COLor 1785
SBUS<sb>:UART:FORMat:FRAMe<fr>:TYPE 1786
SBUS<sb>:UART:FORMat:FRAMe<fr>:LENCheck 1786
SBUS<sb>:UART:FORMat:FRAMe<fr>:LENValue 1786
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Field 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Field 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Field 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Value 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Value 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Value 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:NAME 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:COLor 1788
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 1788
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1788
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:REPetition 1789
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITorder 1789
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1790
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1790
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1790
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1791
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1791
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARA 1792
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARB 1792

SBUS<sb>:UART:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 682

SBUS<sb>:UART:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 683

SBUS<sb>:UART:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 683

SBUS<sb>:UART:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 684

SBUS<sb>:UART:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 683

SBUS<sb>:UART:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 683

SBUS<sb>:UART:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 685

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:UART:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 684

SBUS<sb>:UART:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 684

SBUS<sb>:UART:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 684

SBUS<sb>:UART:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 684

SBUS<sb>:UART:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:UART:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 684

SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 684

SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 685

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 685

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 686

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 686

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 686

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 686

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 686

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 686

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 687

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 687

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 687

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 687

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat = FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 688

18.18.8.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:UART:DATA....1792
TRIGger:SBHW:UART:DPOSition....1792
TRIGger:SBHW:UART:FCONdition....1793
TRIGger:SBHW:UART:OPERator....1793
TRIGger:SBHW:UART:SOURce....1793
TRIGger:SBHW:UART:TYPE....1793

TRIGger:SBHW:UART:DATA <DataPattern>

Specifies the data pattern to be found on the specified trigger source. Enter the words in MSB first bit order.

Parameters:
<DataPattern>

Usage: Asynchronous command

Manual operation: See "Value" on page 689

TRIGger:SBHW:UART:DPOSition <DataPosition>

Sets the number of words before the first word of interest. These offset words are ignored.

Parameters:

<DataPosition> Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Position" on page 689

TRIGger:SBHW:UART:FCONdition <DataOperator>

Selects the operator for the "Data" pattern.

Parameters:

<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data" on page 689

TRIGger:SBHW:UART:OPERator <DataOperator>

Sets the operator for the data pattern in the selected field of the selected frame.

Parameters:

<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
*RST: EQUal

Usage: Asynchronous command

TRIGger:SBHW:UART:SOURce <Source>

Selects the transmitter or receiver line as trigger source.

Parameters:

<Source> TX | RX
*RST: TX

Usage: Asynchronous command

Manual operation: See "Trigger source" on page 688

TRIGger:SBHW:UART:TYPE <Type>

Selects the trigger type condition.

Parameters:

<Type> STBT | PCKS | DATA | PRER | BRKC | STPerror
STBT: Start bit
PCKS: Packet start
DATA: Serial pattern

PRER: Parity error
BRKC: Break condition
STPerror: Stop error

*RST: STBT

Usage: Asynchronous command

Manual operation: See "Type" on page 688

18.18.8.5 Software trigger

There are two commands for each parameter, that you can use for defining the UART settings.

For example, to set the *Frame type =Tx > Field =Data >01100* value you can use one of the following commands:

- `TRIGger:SBSW:UART:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:UART:DMIN "Tx", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:UART:CHKall ... 1795
TRIGger:SBSW:UART:CLR ... 1795
TRIGger:SBSW:UART:INVert ... 1795
TRIGger:SBSW:UART:RST ... 1795
TRIGger:SBSW:UART:FRENable ... 1795
TRIGger:SBSW:UART:FRAMe<fr>:ENABle ... 1795
TRIGger:SBSW:UART:BIT ... 1796
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:BIT ... 1796
TRIGger:SBSW:UART:DMAX ... 1796
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMAX ... 1796
TRIGger:SBSW:UART:DMIN ... 1796
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMIN ... 1796
TRIGger:SBSW:UART:DOPerator ... 1797
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator ... 1797
TRIGger:SBSW:UART:FIENable ... 1797
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle ... 1797
TRIGger:SBSW:UART:IMAX ... 1797
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMAX ... 1797
TRIGger:SBSW:UART:IMIN ... 1798
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMIN ... 1798
TRIGger:SBSW:UART:IOPerator ... 1798
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator ... 1798
TRIGger:SBSW:UART:ERENable ... 1799
TRIGger:SBSW:UART:ERRor<m>:ENABle ... 1799
SBUS<sb>:UART:SWTindex? ... 1799
SBUS<sb>:UART:SWTTime? ... 1799

TRIGger:SBSW:UART:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 690

TRIGger:SBSW:UART:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 690

TRIGger:SBSW:UART:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 690

TRIGger:SBSW:UART:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 690

TRIGger:SBSW:UART:FRENable <Frame>,<Enabler>
TRIGger:SBSW:UART:FRENable? <Enabler>
TRIGger:SBSW:UART:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 691

TRIGger:SBSW:UART:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:UART:BIT? <Bit>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 691

TRIGger:SBSW:UART:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:UART:DMAX? <Data>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 691

TRIGger:SBSW:UART:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:UART:DMIN? <Data>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 691

TRIGger:SBSW:UART:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:UART:DOPerator? <Operator>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 691

TRIGger:SBSW:UART:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:UART:FIENable? <Enabler>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Frame type" on page 691

TRIGger:SBSW:UART:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:UART:IMAX? <Data>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 691

TRIGger:SBSW:UART:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:UART:IMIN? <Data>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 691

TRIGger:SBSW:UART:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:UART:IOPerator? <Operator>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 691

TRIGger:SBSW:UART:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:UART:ERENable? <Enabler>
TRIGger:SBSW:UART:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 692

SBUS<sb>:UART:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.8.6 Decode results

SBUS<sb>:UART:WCOunt? 1800
SBUS<sb>:UART:WORD<w>:FLDCount? 1800
SBUS<sb>:UART:WORD<w>:BITRate? 1800
SBUS<sb>:UART:WORD<w>:FLD<fl>:STATe? 1801
SBUS<sb>:UART:WORD<w>:RXValue? 1801
SBUS<sb>:UART:WORD<w>:TXValue? 1801
SBUS<sb>:UART:WORD<w>:SOURce? 1802
SBUS<sb>:UART:WORD<w>:STARt? 1802
SBUS<sb>:UART:WORD<w>:STOP? 1802
SBUS<sb>:UART:WORD<w>:STATe? 1803
SBUS<sb>:UART:WORD<w>:FLD<fl>:LABel? 1803
SBUS<sb>:UART:WORD<w>:FLD<fl>:VALue? 1803
SBUS<sb>:UART:WORD<w>:FLD<fl>:FVALue? 1804

SBUS<sb>:UART:WCOunt?

Returns the number of words in the acquisition.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of words.

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLDCount?

Returns the number of fields available in the seleced word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:

<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:

<State> OK | BREak | STERror | SPERror | PRERror | INComplete
OK: the frame is valid.
`BREak`: stop bit error with 0x00 word
`STERror`: start error, incorrect start bit
`SPERror`: stop error, incorrect stop bit
`PRERror`: parity error, incorrect parity bit.
`INComplete`: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:RXValue?

Returns the value of the specified word on the Rx line.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:

<RxValue> Range: 0 to 511
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:TXValue?

Returns the value of the specified word on the TX line.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<TxValue> Range: 0 to 511
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:SOURce?

Returns the line on which the specified word was transferred.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<WordSource> TX | RX
*RST: TX

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:STARt?

Returns the start time of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<WordStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:STOP?

Returns the stop time of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<WordStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:STATe?

Returns the status of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<WordState> OK | BREak | STERror | SPERror | PRERror | INComplete

OK: the frame is valid.
`BREak`: stop bit error with 0x00 word
`STERror`: start error, incorrect start bit
`SPERror`: stop error, incorrect stop bit
`PRERror`: parity error, incorrect parity bit.
`INComplete`: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLD<fl>:LABel?

Returns the label of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLD<fl>:VALue?

Returns the value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

18.18.9 NRZ Clocked (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1804
- Filter....1810
- Format....1815
- Software trigger....1823
- Decode results....1829

18.18.9.1 Configuration

SBUS<sb>:NRZC:CLK:SOURce....1805
SBUS<sb>:NRZC:CLK:POLarity....1805
SBUS<sb>:NRZC:DATA:SOURce....1806
SBUS<sb>:NRZC:DATA:POLarity....1806

SBUS<sb>:NRZC:ENABle:SOURce 1806
SBUS<sb>:NRZC:ENABle:POLarity 1807
SBUS<sb>:NRZC:MINGap:SELect 1807
SBUS<sb>:NRZC:MINGap:WIDTh 1807
SBUS<sb>:NRZC:CLK:THReshold 1808
SBUS<sb>:NRZC:CLK:HYSTeresis 1808
SBUS<sb>:NRZC:DATA:THReshold 1808
SBUS<sb>:NRZC:DATA:HYSTeresis 1808
SBUS<sb>:NRZC:ENABle:THReshold 1809
SBUS<sb>:NRZC:ENABle:HYSTeresis 1809
SBUS<sb>:NRZC:POSition 1809
SBUS<sb>:NRZC:SCALe 1809

SBUS<sb>:NRZC:CLK:SOURce Source

Selects the source for the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Clock source" on page 698

SBUS<sb>:NRZC:CLK:POLarity <CLKPolarity>

Sets the polarity for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CLKPolarity> RISE | FALL | BOTH

RISE
Data is sampled at the rising edges of the clock signal.

FALL
Data is sampled at the falling edges of the clock signal.

BOTH
Data is sampled at the rising and falling edges of the clock signal.

*RST: RISE

Usage: Asynchronous command

Manual operation: See "Clock polarity" on page 698

SBUS<sb>:NRZC:DATA:SOURce Source

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data source" on page 698

SBUS<sb>:NRZC:DATA:POLarity <DATAPolarity>

Sets the polarity for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATAPolarity> ACTLow | ACTHigh

ACTLow
The transmitted signal for the data line is active high (high = 1).

ACTHigh
The transmitted signal for the data line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Data polarity" on page 698

SBUS<sb>:NRZC:ENABle:SOURce Source

Selects the channel for the enable signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Enable source" on page 699

SBUS<sb>:NRZC:ENABle:POLarity <ENABPolarity>

Sets the polarity for the enable line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABPolarity> ACTLow | ACTHigh

ACTLow
The transmitted signal for the enable line is active high (high = 1).

ACTHigh
The transmitted signal for the enable line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Enable source" on page 699

SBUS<sb>:NRZC:MINGap:SELect <MingapSelect>

Enables checking the minimum idle time between two frames during decoding.

To set the idle time, use the command `SBUS<sb>:NRZC:MINGap:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapSelect> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 699

SBUS<sb>:NRZC:MINGap:WIDTh <MingapWidth>

Sets the minimum duration of the idle time. Any inactivity greater than this time is interpreted as a gap and leads to a resynchronization to the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapWidth> Range: 1E-09 to 1
Increment: 1E-09
*RST: 1E-05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 699

SBUS<sb>:NRZC:CLK:THReshold <CLKThreshold>

Sets the threshold value for the digitization of the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CLKThreshold>

Usage: Asynchronous command

Manual operation: See "Clock threshold, Clock hysteresis" on page 700

SBUS<sb>:NRZC:CLK:HYSTeresis <CLKHysteresis>

Sets a value for the hysteresis of the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CLKHysteresis>

Usage: Asynchronous command

Manual operation: See "Clock threshold, Clock hysteresis" on page 700

SBUS<sb>:NRZC:DATA:THReshold <SDAThreshold>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAThreshold>

Usage: Asynchronous command

Manual operation: See "Data threshold, Data hysteresis" on page 700

SBUS<sb>:NRZC:DATA:HYSTeresis <SDAHysteresis>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAHysteresis>

Usage: Asynchronous command

Manual operation: See "Data threshold, Data hysteresis" on page 700

SBUS<sb>:NRZC:ENABle:THReshold <ENABThreshold>

Sets the threshold for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABThreshold>

Usage: Asynchronous command

Manual operation: See "Enable threshold, Enable hysteresis" on page 700

SBUS<sb>:NRZC:ENABle:HYSTeresis <ENABHysteresis>

Sets the hysteresis for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABHysteresis>

Usage: Asynchronous command

Manual operation: See "Enable threshold, Enable hysteresis" on page 700

SBUS<sb>:NRZC:POSition <Position>

Sets the vertical position of the NRZ clocked signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:NRZC:SCALe <Scale>

Sets the vertical scale of the NRZ clocked signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.9.2 Filter

There are two commands for each parameter, that you can use for defining the NRZ clocked settings.

For example, to set the *Frame type =NRZC-Frame > Field =Data >Data* value you can use one of the following commands:

- `SBUS:NRZC:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:NRZC:FILTer:DMIN "NRZC-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:NRZC:FILTer:CHKall....1810
SBUS<sb>:NRZC:FILTer:CLR....1811
SBUS<sb>:NRZC:FILTer:INVert....1811
SBUS<sb>:NRZC:FILTer:RST....1811
SBUS<sb>:NRZC:FILTer:BIT....1811
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:BIT....1811
SBUS<sb>:NRZC:FILTer:ERENable....1812
SBUS<sb>:NRZC:FILTer:ERRor<n>:ENABle....1812
SBUS<sb>:NRZC:FILTer:DMAX....1812
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1812
SBUS<sb>:NRZC:FILTer:DMIN....1812
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1812
SBUS<sb>:NRZC:FILTer:DOPerator....1813
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1813
SBUS<sb>:NRZC:FILTer:FIENable....1813
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1813
SBUS<sb>:NRZC:FILTer:FRENable....1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:ENABle....1814
SBUS<sb>:NRZC:FILTer:IMAX....1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1814
SBUS<sb>:NRZC:FILTer:IMIN....1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1814
SBUS<sb>:NRZC:FILTer:IOPerator....1815
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1815

SBUS<sb>:NRZC:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 702

SBUS<sb>:NRZC:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 702

SBUS<sb>:NRZC:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 702

SBUS<sb>:NRZC:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 702

SBUS<sb>:NRZC:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:NRZC:FILTer:BIT? <Bit>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZC:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:NRZC:FILTer:ERENable? <Enabler>
SBUS<sb>:NRZC:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 705

SBUS<sb>:NRZC:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:NRZC:FILTer:DMAX? <Data>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZC:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:NRZC:FILTer:DMIN? <Data>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZC:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:NRZC:FILTer:DOPerator? <Operator>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZC:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:NRZC:FILTer:FIENable? <Enabler>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZC:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:NRZC:FILTer:FRENable? <Enabler>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on NRZ clocked frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 702

SBUS<sb>:NRZC:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:NRZC:FILTer:IMAX? <Data>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZC:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:NRZC:FILTer:IMIN? <Data>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZC:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:NRZC:FILTer:IOPerator? <Operator>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

18.18.9.3 Format

This section describes the commands to specify and query frame formats for the "NRZ Clocked" protocol.

For manual operation, refer to Section 14.9.4, "NRZ format configuration", on page 705.

SBUS<sb>:NRZC:FORMat:ADDFrame ... 1816
SBUS<sb>:NRZC:FORMat:LOAD ... 1816
SBUS<sb>:NRZC:FORMat:SAVE ... 1816
SBUS<sb>:NRZC:FORMat:CLR ... 1816
SBUS<sb>:NRZC:FORMat:FCOunt? ... 1817
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:ADDField ... 1817
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLDCount? ... 1817
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:NAME ... 1818
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:COLor ... 1818
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1818
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1818
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1819
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CONDition ... 1819
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1820
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1820
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CLMN ... 1821

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1821
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1822
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1822
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1823
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARA 1823
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARB 1823

SBUS<sb>:NRZC:FORMat:ADDFrame

Appendes a new frame description to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add Frame" on page 705

SBUS<sb>:NRZC:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame descriptions.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 706

SBUS<sb>:NRZC:FORMat:SAVE <FileName>

Saves the current list of frame descriptions to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 707

SBUS<sb>:NRZC:FORMat:CLR

Erases from the volatile memory all field and frame format descriptions that you have created for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit List" on page 706

SBUS<sb>:NRZC:FORMat:FCOunt?

Returns the number of frame format descriptions available for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 706

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame description.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add Field" on page 707

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 708

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 707

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame Color" on page 707

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 708

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field Color" on page 708

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 710

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CONDition <Condition>

Specifies a user-defined condition operator for the selected field of the selected frame. The various condition operators can identify, for example, a mandatory CRC checksum value or a frame ID.

Set the numeric format of the condition by the command `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Condition> The implemented conditions are the "equal" and "array" operators.

Usage: Asynchronous command

Manual operation: See "Condition" on page 708

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 711

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 710

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CLMN <Column>

Specifies, in which result column of the decode table to display the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed.

COL1
The result is displayed in column 1.

COL2
The result is displayed in column 2.

COL3
The result is displayed in column 3.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Result column" on page 710

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 711

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 711

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 711

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 712

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 712

18.18.9.4 Software trigger

There are two commands for each parameter that you can use for defining the "NRZ Clocked" settings.

For example, to set the *Frame type =NRZC-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:NRZC:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.

- `TRIGger:SBSW:NRZC:DMIN "NRZC-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:NRZC:CHKall....1824
TRIGger:SBSW:NRZC:CLR....1824
TRIGger:SBSW:NRZC:INVert....1825
TRIGger:SBSW:NRZC:RST....1825
TRIGger:SBSW:NRZC:FRENable....1825
TRIGger:SBSW:NRZC:FRAMe<fr>:ENABle....1825
TRIGger:SBSW:NRZC:BIT....1825
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:BIT....1825
TRIGger:SBSW:NRZC:DMAX....1826
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMAX....1826
TRIGger:SBSW:NRZC:DMIN....1826
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMIN....1826
TRIGger:SBSW:NRZC:DOPerator....1826
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator....1826
TRIGger:SBSW:NRZC:FIENable....1827
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:ENABle....1827
TRIGger:SBSW:NRZC:IMAX....1827
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMAX....1827
TRIGger:SBSW:NRZC:IMIN....1828
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMIN....1828
TRIGger:SBSW:NRZC:IOPerator....1828
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator....1828
TRIGger:SBSW:NRZC:ERENable....1828
TRIGger:SBSW:NRZC:ERRor<m>:ENABle....1828
SBUS<sb>:NRZC:SWTindex?....1829
SBUS<sb>:NRZC:SWTTime?....1829

TRIGger:SBSW:NRZC:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 713

TRIGger:SBSW:NRZC:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 713

TRIGger:SBSW:NRZC:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 713

TRIGger:SBSW:NRZC:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 713

TRIGger:SBSW:NRZC:FRENable <Frame>,<Enabler>
TRIGger:SBSW:NRZC:FRENable? <Enabler>
TRIGger:SBSW:NRZC:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 714

TRIGger:SBSW:NRZC:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:NRZC:BIT? <Bit>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZC:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZC:DMAX? <Data>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZC:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZC:DMIN? <Data>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZC:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:NRZC:DOPerator? <Operator>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZC:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:NRZC:FIENable? <Enabler>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZC:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZC:IMAX? <Data>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZC:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZC:IMIN? <Data>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZC:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:NRZC:IOPerator? <Operator>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZC:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:NRZC:ERENable? <Enabler>
TRIGger:SBSW:NRZC:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 716

SBUS<sb>:NRZC:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.9.5 Decode results

This section describes the commands to query the results of the decoding of the "NRZ Clocked" protocol.

For manual operation, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

SBUS<sb>:NRZC:FCOunt? 1830
SBUS<sb>:NRZC:FRAMe<fr>:FLDCount? 1830
SBUS<sb>:NRZC:FRAMe<fr>:WBRate? 1830
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:STATe? 1830
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:LABel? 1831
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:VALue? 1831
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:FVALue? 1832
SBUS<sb>:NRZC:FRAMe<fr>:STATus? 1832
SBUS<sb>:NRZC:FRAMe<fr>:STARt? 1832
SBUS<sb>:NRZC:FRAMe<fr>:STOP? 1833
SBUS<sb>:NRZC:FRAMe<fr>:TYPE? 1833

SBUS<sb>:NRZC:FRAMe<fr>:CONE?....1833
SBUS<sb>:NRZC:FRAMe<fr>:CTWO?....1834
SBUS<sb>:NRZC:FRAMe<fr>:CTHRee?....1834

SBUS<sb>:NRZC:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:WBRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWBR> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | LENGth | CRC | PARity | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Name>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | CRC | PARity | INComplete

OK
The frame is valid.

LENGth
Length of the frame is not as expected, indicating an error.

CRC
The checksum of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameType> The frame type is undefined, because it is custom specific.

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:CONE?

Returns the content of the 1st result column of the specified decoded frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Result1>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:CTWO?

Returns the content of the 2nd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result2>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:CTHRee?

Returns the content of the 3rd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result3>

Usage: Query only
Asynchronous command

18.18.10 NRZ Unclocked (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1834
- Filter....1839
- Format....1844
- Software trigger....1853
- Decode results....1858

18.18.10.1 Configuration

SBUS<sb>:NRZU:DATA:SOURce....1835
SBUS<sb>:NRZU:DATA:POLarity....1835
SBUS<sb>:NRZU:ENABle:SOURce....1835
SBUS<sb>:NRZU:ENABle:POLarity....1836

SBUS<sb>:NRZU:MINGap:SELect ... 1836
SBUS<sb>:NRZU:MINGap:WIDTh ... 1836
SBUS<sb>:NRZU:BITRate:SELect ... 1837
SBUS<sb>:NRZU:BITRate:WIDTh ... 1837
SBUS<sb>:NRZU:DATA:THReshold ... 1837
SBUS<sb>:NRZU:DATA:HYSTeresis ... 1838
SBUS<sb>:NRZU:ENABle:THReshold ... 1838
SBUS<sb>:NRZU:ENABle:HYSTeresis ... 1838
SBUS<sb>:NRZU:POSition ... 1838
SBUS<sb>:NRZU:SCALe ... 1839

SBUS<sb>:NRZU:DATA:SOURce Source

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data source" on page 698

SBUS<sb>:NRZU:DATA:POLarity <DATAPolarity>

Sets the polarity for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATAPolarity> ACTLow | ACTHigh

ACTLow
The transmitted signal for the data line is active high (high = 1).

ACTHigh
The transmitted signal for the data line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Data polarity" on page 698

SBUS<sb>:NRZU:ENABle:SOURce Source

Selects the channel for the enable signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

Source — C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Enable source" on page 699

SBUS<sb>:NRZU:ENABle:POLarity <ENABPolarity>

Sets the polarity for the enable line.

Suffix:

<sb> — 1 to 4, index of the serial bus

Parameters:

<ENABPolarity> — ACTLow | ACTHigh

ACTLow
The transmitted signal for the enable line is active high (high = 1).

ACTHigh
The transmitted signal for the enable line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Enable source" on page 699

SBUS<sb>:NRZU:MINGap:SELect <MingapSelect>

Enables checking the minimum idle time between two frames during decoding.

To set the idle time, use the command `SBUS<sb>:NRZU:MINGap:WIDTh`.

Suffix:

<sb> — 1 to 4, index of the serial bus

Parameters:

<MingapSelect> — OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 699

SBUS<sb>:NRZU:MINGap:WIDTh <MingapWidth>

Sets the minimum duration of the idle time. Any inactivity greater than this time is interpreted as a gap and leads to a resynchronization to the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapWidth> Range: 1E-09 to 1
Increment: 1E-09
*RST: 1E-05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 699

SBUS<sb>:NRZU:BITRate:SELect <BitrateSelect>

Enables setting the bit rate, which is required to trigger and decode unclocked NRZ signals.

You can set the bit rate with `SBUS<sb>:NRZU:BITRate:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitrateSelect> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check bit rate" on page 699

SBUS<sb>:NRZU:BITRate:WIDTh <BitrateWidth>

Specifies the bit rate, if enabled with `SBUS<sb>:NRZU:BITRate:SELect`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitrateWidth> Range: 300 to 2000000000
Increment: 100000
*RST: 10000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Check bit rate" on page 699

SBUS<sb>:NRZU:DATA:THReshold <SDAThreshold>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAThreshold>

Usage: Asynchronous command

Manual operation: See "Data threshold, Data hysteresis" on page 700

SBUS<sb>:NRZU:DATA:HYSTeresis <SDAHysteresis>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAHysteresis>

Usage: Asynchronous command

Manual operation: See "Data threshold, Data hysteresis" on page 700

SBUS<sb>:NRZU:ENABle:THReshold <ENABThreshold>

Sets the threshold for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABThreshold>

Usage: Asynchronous command

SBUS<sb>:NRZU:ENABle:HYSTeresis <ENABHysteresis>

Sets the hysteresis for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABHysteresis>

Usage: Asynchronous command

SBUS<sb>:NRZU:POSition <Position>

Sets the vertical position of the NRZ unclocked signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:NRZU:SCALe <Scale>

Sets the vertical scale of the NRZ unclocked signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.10.2 Filter

There are two commands for each parameter, that you can use for defining the NRZ unclocked settings.

For example, to set the *Frame type =NRZU-Frame > Field =Data >Data* value you can use one of the following commands:

- `SBUS:NRZU:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:NRZU:FILTer:DMIN "NRZC-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:NRZU:FILTer:CHKall....1840
SBUS<sb>:NRZU:FILTer:CLR....1840
SBUS<sb>:NRZU:FILTer:INVert....1840
SBUS<sb>:NRZU:FILTer:RST....1840
SBUS<sb>:NRZU:FILTer:BIT....1840
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:BIT....1840
SBUS<sb>:NRZU:FILTer:ERENable....1841
SBUS<sb>:NRZU:FILTer:ERRor<n>:ENABle....1841
SBUS<sb>:NRZU:FILTer:DMAX....1841
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1841
SBUS<sb>:NRZU:FILTer:DMIN....1842
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1842
SBUS<sb>:NRZU:FILTer:DOPerator....1842
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1842
SBUS<sb>:NRZU:FILTer:FIENable....1842
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1842
SBUS<sb>:NRZU:FILTer:FRENable....1843
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:ENABle....1843
SBUS<sb>:NRZU:FILTer:IMAX....1843
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1843
SBUS<sb>:NRZU:FILTer:IMIN....1844
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1844
SBUS<sb>:NRZU:FILTer:IOPerator....1844
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1844

SBUS<sb>:NRZU:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 702

SBUS<sb>:NRZU:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 702

SBUS<sb>:NRZU:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 702

SBUS<sb>:NRZU:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 702

SBUS<sb>:NRZU:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:NRZU:FILTer:BIT? <Bit>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZU:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:NRZU:FILTer:ERENable? <Enabler>
SBUS<sb>:NRZU:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus
<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 705

SBUS<sb>:NRZU:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:NRZU:FILTer:DMAX? <Data>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZU:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:NRZU:FILTer:DMIN? <Data>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZU:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:NRZU:FILTer:DOPerator? <Operator>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZU:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:NRZU:FILTer:FIENable? <Enabler>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZU:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:NRZU:FILTer:FRENable? <Enabler>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on NRZ unclocked frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 702

SBUS<sb>:NRZU:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:NRZU:FILTer:IMAX? <Data>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZU:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:NRZU:FILTer:IMIN? <Data>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

SBUS<sb>:NRZU:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:NRZU:FILTer:IOPerator? <Operator>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 703

18.18.10.3 Format

This section describes the commands to specify and query frame formats for the "NRZ Unclocked" protocol.

For manual operation, refer to Section 14.9.4, "NRZ format configuration", on page 705.

SBUS<sb>:NRZU:FORMat:ADDFrame 1845
SBUS<sb>:NRZU:FORMat:LOAD 1845
SBUS<sb>:NRZU:FORMat:SAVE 1845
SBUS<sb>:NRZU:FORMat:CLR 1846
SBUS<sb>:NRZU:FORMat:FCOunt? 1846

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:ADDField....1846
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLDCount?....1846
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:NAME....1847
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:COLor....1847
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:NAME....1847
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:COLor....1848
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1848
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CONDition....1848
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1849
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1850
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CLMN....1850
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1851
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1851
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1851
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1852
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARA....1852
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARB....1852

SBUS<sb>:NRZU:FORMat:ADDFrame

Appendes a new frame description to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add Frame" on page 705

SBUS<sb>:NRZU:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame descriptions.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 706

SBUS<sb>:NRZU:FORMat:SAVE <FileName>

Saves the current list of frame descriptions to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 707

SBUS<sb>:NRZU:FORMat:CLR

Erases from the volatile memory all field and frame format descriptions that you have created for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit List" on page 706

SBUS<sb>:NRZU:FORMat:FCOunt?

Returns the number of frame format descriptions available for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 706

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame description.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add Field" on page 707

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 708

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 707

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame Color" on page 707

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 708

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field Color" on page 708

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 710

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CONDition <Condition>

Specifies a user-defined condition operator for the selected field of the selected frame. The various condition operators can identify, for example, a mandatory CRC checksum value or a frame ID.

Set the numeric format of the condition by the command `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Condition> The implemented conditions are the "equal" and "array" operators.

Usage: Asynchronous command

Manual operation: See "Condition" on page 708

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 711

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 710

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CLMN <Column>

Specifies, in which result column of the decode table to display the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed.

COL1
The result is displayed in column 1.

COL2
The result is displayed in column 2.

COL3
The result is displayed in column 3.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Result column" on page 710

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 711

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 711

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 711

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 712

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 712

18.18.10.4 Software trigger

There are two commands for each parameter that you can use for defining the "NRZ Unclocked" settings.

For example, to set the *Frame type =NRZU-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:NRZU:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.
- `TRIGger:SBSW:NRZU:DMIN "NRZC-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:NRZU:CHKall....1853
TRIGger:SBSW:NRZU:CLR....1854
TRIGger:SBSW:NRZU:INVert....1854
TRIGger:SBSW:NRZU:RST....1854
TRIGger:SBSW:NRZU:FRENable....1854
TRIGger:SBSW:NRZU:FRAMe<fr>:ENABle....1854
TRIGger:SBSW:NRZU:BIT....1854
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:BIT....1854
TRIGger:SBSW:NRZU:DMAX....1855
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMAX....1855
TRIGger:SBSW:NRZU:DMIN....1855
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMIN....1855
TRIGger:SBSW:NRZU:DOPerator....1856
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator....1856
TRIGger:SBSW:NRZU:FIENable....1856
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:ENABle....1856
TRIGger:SBSW:NRZU:IMAX....1856
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMAX....1856
TRIGger:SBSW:NRZU:IMIN....1857
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMIN....1857
TRIGger:SBSW:NRZU:IOPerator....1857
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator....1857
TRIGger:SBSW:NRZU:ERENable....1857
TRIGger:SBSW:NRZU:ERRor<m>:ENABle....1857
SBUS<sb>:NRZU:SWTindex?....1858
SBUS<sb>:NRZU:SWTTime?....1858

TRIGger:SBSW:NRZU:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 713

TRIGger:SBSW:NRZU:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 713

TRIGger:SBSW:NRZU:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 713

TRIGger:SBSW:NRZU:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 713

TRIGger:SBSW:NRZU:FRENable <Frame>,<Enabler>
TRIGger:SBSW:NRZU:FRENable? <Enabler>
TRIGger:SBSW:NRZU:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 714

TRIGger:SBSW:NRZU:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:NRZU:BIT? <Bit>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZU:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZU:DMAX? <Data>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZU:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZU:DMIN? <Data>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZU:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:NRZU:DOPerator? <Operator>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZU:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:NRZU:FIENable? <Enabler>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZU:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZU:IMAX? <Data>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZU:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZU:IMIN? <Data>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZU:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:NRZU:IOPerator? <Operator>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 714

TRIGger:SBSW:NRZU:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:NRZU:ERENable? <Enabler>
TRIGger:SBSW:NRZU:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 716

SBUS<sb>:NRZU:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.10.5 Decode results

This section describes the commands to query the results of the decoding of the "NRZ Unclocked" protocol.

For manual operation, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

SBUS<sb>:NRZU:FCOunt? 1859
SBUS<sb>:NRZU:FRAMe<fr>:FLDCount? 1859
SBUS<sb>:NRZU:FRAMe<fr>:WBRate? 1859
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:STATe? 1860
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:LABel? 1860
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:VALue? 1861
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:FVALue? 1861
SBUS<sb>:NRZU:FRAMe<fr>:STATus? 1861
SBUS<sb>:NRZU:FRAMe<fr>:STARt? 1862
SBUS<sb>:NRZU:FRAMe<fr>:STOP? 1862
SBUS<sb>:NRZU:FRAMe<fr>:TYPE? 1862
SBUS<sb>:NRZU:FRAMe<fr>:CONE? 1863
SBUS<sb>:NRZU:FRAMe<fr>:CTWO? 1863
SBUS<sb>:NRZU:FRAMe<fr>:CTHRee? 1863

SBUS<sb>:NRZU:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:WBRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWBR> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | LENGth | CRC | PARity | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Name>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | CRC | PARity | INComplete

OK
The frame is valid.

LENGth
Length of the frame is not as expected, indicating an error.

CRC
The checksum of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error.

INComplete
The frame is incomplete.
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> The frame type is undefined, because it is custom specific.

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:CONE?

Returns the content of the 1st result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result1>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:CTWO?

Returns the content of the 2nd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result2>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:CTHRee?

Returns the content of the 3rd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result3>

Usage: Query only
Asynchronous command

18.18.11 Manchester (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.

- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1864
- Filter....1869
- Format....1874
- Software trigger....1883
- Decode results....1888

18.18.11.1 Configuration

SBUS<sb>:MANCh:DATA:SOURce....1864
SBUS<sb>:MANCh:DATA:POLarity....1864
SBUS<sb>:MANCh:DATA:PHASe....1865
SBUS<sb>:MANCh:ENABle:SOURce....1865
SBUS<sb>:MANCh:ENABle:POLarity....1865
SBUS<sb>:MANCh:MINGap:SELect....1866
SBUS<sb>:MANCh:MINGap:WIDTh....1866
SBUS<sb>:MANCh:BITRate:SELect....1867
SBUS<sb>:MANCh:BITRate:WIDTh....1867
SBUS<sb>:MANCh:DATA:THUPper....1867
SBUS<sb>:MANCh:DATA:THLower....1867
SBUS<sb>:MANCh:DATA:HYSTeresis....1868
SBUS<sb>:MANCh:ENABle:THReshold....1868
SBUS<sb>:MANCh:ENABle:HYSTeresis....1868
SBUS<sb>:MANCh:POSition....1868
SBUS<sb>:MANCh:SCALe....1869

SBUS<sb>:MANCh:DATA:SOURce <DATASource>

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATASource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data source" on page 723

SBUS<sb>:MANCh:DATA:POLarity <DataPolarity>

Sets the polarity for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataPolarity> MANC | MANT

MANC
Selects the "Manchester" data representation convention as per G. E. Thomas: High-to-low transition for logical 1.

MANT
Selects the "Manchester II" (Manchester Two) data representation convention as per IEEE 802.3: Low-to-high transition for logical 1.

*RST: MANC

Usage: Asynchronous command

Manual operation: See "Data polarity" on page 723

SBUS<sb>:MANCh:DATA:PHASe <DataPhase>

Sets the phase for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataPhase> FEDGe | SEDGe

FEDGe
Selects capturing data bits on the clock's first (rising) edge.

SEDGe
Selects capturing data bits on the clock's second (falling) edge.

*RST: SEDGe

Usage: Asynchronous command

Manual operation: See "Data phase" on page 723

SBUS<sb>:MANCh:ENABle:SOURce <DATASource>

Selects the channel for the enable signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATASource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Enable source" on page 723

SBUS<sb>:MANCh:ENABle:POLarity <EnablePolarity>

Sets the polarity for the enable line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<EnablePolarity> ACTLow | ACTHigh

ACTLow
The transmitted signal for the enable line is active high (high = 1).

ACTHigh
The transmitted signal for the enable line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Enable source" on page 723

SBUS<sb>:MANCh:MINGap:SELect <MingapSelect>

Enables checking the minimum idle time between two frames during decoding.

To set the idle time, use the command `SBUS<sb>:MANCh:MINGap:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapSelect> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 724

SBUS<sb>:MANCh:MINGap:WIDTh <MingapWidth>

Sets the minimum duration of the idle time. Any inactivity greater than this time is interpreted as a gap and leads to a resynchronization to the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapWidth> Range: 1E-09 to 1
Increment: 1E-09
*RST: 1E-05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 724

SBUS<sb>:MANCh:BITRate:SELect <BitrateSelect>

Enables setting the bit rate.

To set the bit rate, use the command `SBUS<sb>:MANCh:BITRate:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitrateSelect> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check bit rate" on page 724

SBUS<sb>:MANCh:BITRate:WIDTh <BitrateWidth>

Sets the bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitrateWidth> Range: 300 to 2000000000
Increment: 100000
*RST: 10000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Check bit rate" on page 724

SBUS<sb>:MANCh:DATA:THUPper <DatThresUpp>

Sets the upper threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DatThresUpp>

Usage: Asynchronous command

Manual operation: See "Upper threshold, Lower threshold, Hysteresis" on page 724

SBUS<sb>:MANCh:DATA:THLower <DatThresLow>

Sets the lower threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DatThresLow>

Usage: Asynchronous command

Manual operation: See "Upper threshold, Lower threshold, Hysteresis" on page 724

SBUS<sb>:MANCh:DATA:HYSTeresis <DataHysteresis>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataHysteresis>

Usage: Asynchronous command

Manual operation: See "Upper threshold, Lower threshold, Hysteresis" on page 724

SBUS<sb>:MANCh:ENABle:THReshold <EnabThres>

Sets the threshold for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<EnabThres>

Usage: Asynchronous command

Manual operation: See "Enable threshold, Enable hysteresis" on page 725

SBUS<sb>:MANCh:ENABle:HYSTeresis <EnabHyst>

Sets the hysteresis for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<EnabHyst>

Usage: Asynchronous command

Manual operation: See "Enable threshold, Enable hysteresis" on page 725

SBUS<sb>:MANCh:POSition <Position>

Sets the vertical position of the Manchester signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:MANCh:SCALe <Scale>

Sets the vertical scale of the Manchester signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.11.2 Filter

There are two commands for each parameter, that you can use for defining the Manchester settings.

For example, to set the *Frame type =Manchester-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:MANCh:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:MANCh:FILTer:DMIN "Manchester-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:MANCh:FILTer:CHKall ... 1870
SBUS<sb>:MANCh:FILTer:CLR ... 1870
SBUS<sb>:MANCh:FILTer:INVert ... 1870
SBUS<sb>:MANCh:FILTer:RST ... 1870
SBUS<sb>:MANCh:FILTer:BIT ... 1871
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1871
SBUS<sb>:MANCh:FILTer:ERENable ... 1871
SBUS<sb>:MANCh:FILTer:ERRor<n>:ENABle ... 1871
SBUS<sb>:MANCh:FILTer:DMAX ... 1871
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1871
SBUS<sb>:MANCh:FILTer:DMIN ... 1872
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1872
SBUS<sb>:MANCh:FILTer:DOPerator ... 1872
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1872
SBUS<sb>:MANCh:FILTer:FIENable ... 1872
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1872
SBUS<sb>:MANCh:FILTer:FRENable ... 1873
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:ENABle ... 1873
SBUS<sb>:MANCh:FILTer:IMAX ... 1873
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1873
SBUS<sb>:MANCh:FILTer:IMIN ... 1874

SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1874
SBUS<sb>:MANCh:FILTer:IOPerator 1874
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1874

SBUS<sb>:MANCh:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 726

SBUS<sb>:MANCh:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 726

SBUS<sb>:MANCh:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 726

SBUS<sb>:MANCh:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 726

SBUS<sb>:MANCh:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:MANCh:FILTer:BIT? <Bit>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 727

SBUS<sb>:MANCh:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:MANCh:FILTer:ERENable? <Enabler>
SBUS<sb>:MANCh:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 728

SBUS<sb>:MANCh:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:MANCh:FILTer:DMAX? <Data>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 727

SBUS<sb>:MANCh:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:MANCh:FILTer:DMIN? <Data>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 727

SBUS<sb>:MANCh:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:MANCh:FILTer:DOPerator? <Operator>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 727

SBUS<sb>:MANCh:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:MANCh:FILTer:FIENable? <Enabler>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 727

SBUS<sb>:MANCh:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:MANCh:FILTer:FRENable? <Enabler>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on Manchester frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 727

SBUS<sb>:MANCh:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:MANCh:FILTer:IMAX? <Data>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 727

SBUS<sb>:MANCh:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:MANCh:FILTer:IMIN? <Data>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 727

SBUS<sb>:MANCh:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:MANCh:FILTer:IOPerator? <Operator>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 727

18.18.11.3 Format

This section describes the commands to specify and query frame formats for the "Manchester" protocol.

For manual operation, refer to Section 14.10.4, "Manchester format configuration", on page 729.

SBUS<sb>:MANCh:FORMat:ADDFrame....1875
SBUS<sb>:MANCh:FORMat:LOAD....1875
SBUS<sb>:MANCh:FORMat:SAVE....1875

SBUS<sb>:MANCh:FORMat:CLR 1876
SBUS<sb>:MANCh:FORMat:FCOunt? 1876
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:ADDField 1876
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLDCount? 1876
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:NAME 1877
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:COLor 1877
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:NAME 1877
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:COLor 1878
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1878
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CONDition 1878
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1879
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITorder 1880
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CLMN 1880
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1881
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1881
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1881
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1882
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARA 1882
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARB 1882

SBUS<sb>:MANCh:FORMat:ADDFrame

Appendes a new frame description to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add Frame" on page 729

SBUS<sb>:MANCh:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame descriptions.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 729

SBUS<sb>:MANCh:FORMat:SAVE <FileName>

Saves the current list of frame descriptions to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 730

SBUS<sb>:MANCh:FORMat:CLR

Erases from the volatile memory all field and frame format descriptions that you have created for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit List" on page 729

SBUS<sb>:MANCh:FORMat:FCOunt?

Returns the number of frame format descriptions available for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 729

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame description.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add Field" on page 730

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 731

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 730

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame Color" on page 730

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 731

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field Color" on page 731

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 732

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CONDition <Condition>

Specifies a user-defined condition operator for the selected field of the selected frame. The various condition operators can identify, for example, a mandatory CRC checksum value or a frame ID.

Set the numeric format of the condition by the command `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Condition> The implemented conditions are the "equal" and "array" operators.

Usage: Asynchronous command

Manual operation: See "Condition" on page 731

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 733

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 733

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CLMN <Column>

Specifies, in which result column of the decode table to display the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed.

COL1
The result is displayed in column 1.

COL2
The result is displayed in column 2.

COL3
The result is displayed in column 3.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Result column" on page 733

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 734

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 734

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 734

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 734

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 734

18.18.11.4 Software trigger

There are two commands for each parameter that you can use for defining the "Manchester" settings.

For example, to set the *Frame type =Manchester-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:MANCh:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.
- `TRIGger:SBSW:MANCh:DMIN "Manchester-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:MANCh:CHKall ... 1883
TRIGger:SBSW:MANCh:CLR ... 1884
TRIGger:SBSW:MANCh:INVert ... 1884
TRIGger:SBSW:MANCh:RST ... 1884
TRIGger:SBSW:MANCh:FRENable ... 1884
TRIGger:SBSW:MANCh:FRAMe<fr>:ENABle ... 1884
TRIGger:SBSW:MANCh:BIT ... 1884
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:BIT ... 1884
TRIGger:SBSW:MANCh:DMAX ... 1885
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMAX ... 1885
TRIGger:SBSW:MANCh:DMIN ... 1885
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMIN ... 1885
TRIGger:SBSW:MANCh:DOPerator ... 1886
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator ... 1886
TRIGger:SBSW:MANCh:FIENable ... 1886
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:ENABle ... 1886
TRIGger:SBSW:MANCh:IMAX ... 1886
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMAX ... 1886
TRIGger:SBSW:MANCh:IMIN ... 1887
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMIN ... 1887
TRIGger:SBSW:MANCh:IOPerator ... 1887
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator ... 1887
TRIGger:SBSW:MANCh:ERENable ... 1887
TRIGger:SBSW:MANCh:ERRor<m>:ENABle ... 1887
SBUS<sb>:MANCh:SWTindex? ... 1888
SBUS<sb>:MANCh:SWTTime? ... 1888

TRIGger:SBSW:MANCh:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 735

TRIGger:SBSW:MANCh:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 735

TRIGger:SBSW:MANCh:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 735

TRIGger:SBSW:MANCh:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 735

TRIGger:SBSW:MANCh:FRENable <Frame>,<Enabler>
TRIGger:SBSW:MANCh:FRENable? <Enabler>
TRIGger:SBSW:MANCh:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 736

TRIGger:SBSW:MANCh:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:MANCh:BIT? <Bit>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 736

TRIGger:SBSW:MANCh:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:MANCh:DMAX? <Data>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 736

TRIGger:SBSW:MANCh:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:MANCh:DMIN? <Data>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 736

TRIGger:SBSW:MANCh:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:MANCh:DOPerator? <Operator>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 736

TRIGger:SBSW:MANCh:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:MANCh:FIENable? <Enabler>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 736

TRIGger:SBSW:MANCh:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:MANCh:IMAX? <Data>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 736

TRIGger:SBSW:MANCh:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:MANCh:IMIN? <Data>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 736

TRIGger:SBSW:MANCh:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:MANCh:IOPerator? <Operator>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 736

TRIGger:SBSW:MANCh:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:MANCh:ERENable? <Enabler>
TRIGger:SBSW:MANCh:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 737

SBUS<sb>:MANCh:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.11.5 Decode results

This section describes the commands to query the results of the decoding of the "Manchester" protocol.

SBUS<sb>:MANCh:FCOunt? 1889
SBUS<sb>:MANCh:FRAMe<fr>:FLDCount? 1889
SBUS<sb>:MANCh:FRAMe<fr>:WBRate? 1889

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:STATe?....1890
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:LABel?....1890
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:VALue?....1890
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:FVALue?....1891
SBUS<sb>:MANCh:FRAMe<fr>:STATus?....1891
SBUS<sb>:MANCh:FRAMe<fr>:STARt?....1892
SBUS<sb>:MANCh:FRAMe<fr>:STOP?....1892
SBUS<sb>:MANCh:FRAMe<fr>:TYPE?....1892
SBUS<sb>:MANCh:FRAMe<fr>:CONE?....1893
SBUS<sb>:MANCh:FRAMe<fr>:CTWO?....1893
SBUS<sb>:MANCh:FRAMe<fr>:CTHRee?....1893

SBUS<sb>:MANCh:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:WBRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWBR> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | LENGth | CRC | PARity | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Name>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | CRC | PARity | INComplete

OK
The frame is valid.

LENGth
Length of the frame is not as expected, indicating an error.

CRC
The checksum of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> The frame type is undefined, because it is custom specific.

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:CONE?

Returns the content of the 1st result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result1>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:CTWO?

Returns the content of the 2nd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result2>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:CTHRee?

Returns the content of the 3rd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result3>

Usage: Query only
Asynchronous command

18.18.12 8b/10b (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1894
- Filter....1895
- Format....1901
- Software trigger....1908
- Decode results....1914

18.18.12.1 Configuration

SBUS<sb>:EBTB:DATA:SOURce....1894
SBUS<sb>:EBTB:DATA:THReshold....1894
SBUS<sb>:EBTB:DATA:HYSTeresis....1894
SBUS<sb>:EBTB:POSition....1895
SBUS<sb>:EBTB:SCALe....1895

SBUS<sb>:EBTB:DATA:SOURce <Source>

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 741

SBUS<sb>:EBTB:DATA:THReshold <SrcThres>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SrcThres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 742

SBUS<sb>:EBTB:DATA:HYSTeresis <SrcHyst>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SrcHyst>

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 742

SBUS<sb>:EBTB:POSition <Position>

Sets the vertical position of the 8b/10b signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:EBTB:SCALe <Scale>

Sets the vertical scale of the 8b/10b signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.12.2 Filter

There are two commands for each parameter, that you can use for defining the 8b/10b settings.

For example, to set the *Frame type =EBTB* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:EBTB:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:EBTB:FILTer:DMIN "EBTB-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:EBTB:FILTer:CHKall 1896
SBUS<sb>:EBTB:FILTer:CLR 1896
SBUS<sb>:EBTB:FILTer:INVert 1896
SBUS<sb>:EBTB:FILTer:RST 1897
SBUS<sb>:EBTB:FILTer:BIT 1897
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:BIT 1897
SBUS<sb>:EBTB:FILTer:ERENable 1897
SBUS<sb>:EBTB:FILTer:ERRor<n>:ENABle 1897
SBUS<sb>:EBTB:FILTer:DMAX 1898

SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1898
SBUS<sb>:EBTB:FILTer:DMIN....1898
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1898
SBUS<sb>:EBTB:FILTer:DOPerator....1898
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1898
SBUS<sb>:EBTB:FILTer:FIENable....1899
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1899
SBUS<sb>:EBTB:FILTer:FRENable....1899
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:ENABle....1899
SBUS<sb>:EBTB:FILTer:IMAX....1899
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1899
SBUS<sb>:EBTB:FILTer:IMIN....1900
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1900
SBUS<sb>:EBTB:FILTer:IOPerator....1900
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1900

SBUS<sb>:EBTB:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 744

SBUS<sb>:EBTB:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 744

SBUS<sb>:EBTB:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 744

SBUS<sb>:EBTB:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 744

SBUS<sb>:EBTB:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:EBTB:FILTer:BIT? <Bit>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 745

SBUS<sb>:EBTB:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:EBTB:FILTer:ERENable? <Enabler>
SBUS<sb>:EBTB:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 746

SBUS<sb>:EBTB:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:EBTB:FILTer:DMAX? <Data>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:EBTB:FILTer:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 745

SBUS<sb>:EBTB:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:EBTB:FILTer:DMIN? <Data>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 745

SBUS<sb>:EBTB:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:EBTB:FILTer:DOPerator? <Operator>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 745

SBUS<sb>:EBTB:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:EBTB:FILTer:FIENable? <Enabler>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 745

SBUS<sb>:EBTB:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:EBTB:FILTer:FRENable? <Enabler>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on 8b/10b frames. Only the frames that match the selected filter conditions are displayed.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 744

SBUS<sb>:EBTB:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:EBTB:FILTer:IMAX? <Data>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:EBTB:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 745

SBUS<sb>:EBTB:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:EBTB:FILTer:IMIN? <Data>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 745

SBUS<sb>:EBTB:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:EBTB:FILTer:IOPerator? <Operator>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 745

18.18.12.3 Format

This section describes the commands to specify and query frame formats for the "8b/10b" protocol.

SBUS<sb>:EBTB:FORMat:ADDFrame....1901
SBUS<sb>:EBTB:FORMat:LOAD....1901
SBUS<sb>:EBTB:FORMat:SAVE....1902
SBUS<sb>:EBTB:FORMat:CLR....1902
SBUS<sb>:EBTB:FORMat:FCOunt?....1902
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:ADDField....1902
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLDCount?....1903
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:NAME....1903
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:COLor....1903
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:NAME....1904
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:COLor....1904
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1904
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CONDition....1905
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1905
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CLMN....1906
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1906
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1907
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1907
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1908
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARA....1908
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARB....1908

SBUS<sb>:EBTB:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 746

SBUS<sb>:EBTB:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 747

SBUS<sb>:EBTB:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 747

SBUS<sb>:EBTB:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 747

SBUS<sb>:EBTB:FORMat:FCOunt?

Returns the number of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 747

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 748

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 748

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 747

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 747

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 748

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 748

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 750

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CONDition <Condition>

Specifies a user-defined condition operator for the selected field of the selected frame. The various condition operators can identify, for example, a mandatory CRC checksum value or a frame ID.

Set the numeric format of the condition by the command `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> 1 to 4, index of the serial bus

<fl> Index of the field

Parameters:
<Condition> The implemented conditions are the "equal" and "array" operators.

Usage: Asynchronous command

Manual operation: See "Condition" on page 749

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 751

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CLMN <Column>

Specifies, in which result column of the decode table to display the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed.

COL1
The result is displayed in column 1.

COL2
The result is displayed in column 2.

COL3
The result is displayed in column 3.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Result column" on page 750

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 751

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 751

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 751

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat = FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 752

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat = FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 752

18.18.12.4 Software trigger

There are two commands for each parameter that you can use for defining the "8b/10b" settings.

For example, to set the *Frame type =EBTB-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:EBTB:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.

- `TRIGger:SBSW:EBTB:DMIN "EBTB-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:EBTB:CHKall 1909
TRIGger:SBSW:EBTB:CLR 1909
TRIGger:SBSW:EBTB:INVert 1910
TRIGger:SBSW:EBTB:RST 1910
TRIGger:SBSW:EBTB:FRENable 1910
TRIGger:SBSW:EBTB:FRAMe<fr>:ENABle 1910
TRIGger:SBSW:EBTB:BIT 1910
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:BIT 1910
TRIGger:SBSW:EBTB:DMAX 1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMAX 1911
TRIGger:SBSW:EBTB:DMIN 1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMIN 1911
TRIGger:SBSW:EBTB:DOPerator 1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DOPerator 1911
TRIGger:SBSW:EBTB:FIENable 1912
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:ENABle 1912
TRIGger:SBSW:EBTB:IMAX 1912
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMAX 1912
TRIGger:SBSW:EBTB:IMIN 1912
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMIN 1912
TRIGger:SBSW:EBTB:IOPerator 1913
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IOPerator 1913
TRIGger:SBSW:EBTB:ERENable 1913
TRIGger:SBSW:EBTB:ERRor<m>:ENABle 1913
SBUS<sb>:EBTB:SWTindex? 1913
SBUS<sb>:EBTB:SWTTime? 1914

TRIGger:SBSW:EBTB:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 753

TRIGger:SBSW:EBTB:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 753

TRIGger:SBSW:EBTB:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 753

TRIGger:SBSW:EBTB:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 753

TRIGger:SBSW:EBTB:FRENable <Frame>,<Enabler>
TRIGger:SBSW:EBTB:FRENable? <Enabler>
TRIGger:SBSW:EBTB:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 754

TRIGger:SBSW:EBTB:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:EBTB:BIT? <Bit>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 754

TRIGger:SBSW:EBTB:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:EBTB:DMAX? <Data>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:EBTB:FILTer:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 754

TRIGger:SBSW:EBTB:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:EBTB:DMIN? <Data>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 754

TRIGger:SBSW:EBTB:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:EBTB:DOPerator? <Operator>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 754

TRIGger:SBSW:EBTB:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:EBTB:FIENable? <Enabler>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 754

TRIGger:SBSW:EBTB:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:EBTB:IMAX? <Data>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:EBTB:FILTer:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 754

TRIGger:SBSW:EBTB:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:EBTB:IMIN? <Data>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 754

TRIGger:SBSW:EBTB:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:EBTB:IOPerator? <Operator>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 754

TRIGger:SBSW:EBTB:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:EBTB:ERENable? <Enabler>
TRIGger:SBSW:EBTB:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 755

SBUS<sb>:EBTB:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

<sb> 1..4

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.12.5 Decode results

This section describes the commands to query the results of the decoding of the "8b/10b" protocol.

For manual operation, see Section 14.1.9.3, "Decoding protocol signals", on page 558.

SBUS<sb>:EBTB:FCOunt? 1915
SBUS<sb>:EBTB:FRAMe<fr>:FLDCount? 1915
SBUS<sb>:EBTB:FRAMe<fr>:BITRate? 1915
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:STATe? 1915
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:LABel? 1916
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:VALue? 1916
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:FVALue? 1917
SBUS<sb>:EBTB:FRAMe<fr>:STATus? 1917
SBUS<sb>:EBTB:FRAMe<fr>:STARt? 1918
SBUS<sb>:EBTB:FRAMe<fr>:STOP? 1918
SBUS<sb>:EBTB:FRAMe<fr>:TYPE? 1918
SBUS<sb>:EBTB:FRAMe<fr>:CONE? 1919
SBUS<sb>:EBTB:FRAMe<fr>:CTWO? 1919
SBUS<sb>:EBTB:FRAMe<fr>:CTHRee? 1919

SBUS<sb>:EBTB:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:BITRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | LENGth | CRC | PARity | SYMBol | DISParity | AMBiguous | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

SYMBol
Encountered an invalid 10-bit sequence, indicating an error.

DISParity
The symbol's disparity is incompatible with the running disparity, indicating an error.

AMBiguous
The frame is ambiguous.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Name>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | CRC | PARity | SYMBol | DISParity | AMBiguous | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

SYMBol
Encountered an invalid 10-bit sequence, indicating an error.

DISParity
The symbol's disparity is incompatible with the running disparity, indicating an error.

AMBiguous
The frame is ambiguous.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> The frame type is undefined, because it is custom specific.

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:CONE?

Returns the content of the 1st result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result1>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:CTWO?

Returns the content of the 2nd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result2>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:CTHRee?

Returns the content of the 3rd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result3>

Usage: Query only
Asynchronous command

18.18.13 CAN (option R&S MXO5-K520)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1920
- Filter....1925
- Format....1930
- Hardware trigger....1940
- Software trigger....1950
- Decode results....1955

18.18.13.1 Configuration

SBUS<sb>:CAN:TYPE....1920
SBUS<sb>:CAN:BITRate....1920
SBUS<sb>:CAN:SAMPlepoint....1921
SBUS<sb>:CAN:SOURce....1921
SBUS<sb>:CAN:FDATa:DBITrate....1922
SBUS<sb>:CAN:FDATa:SAMPlepoint....1922
SBUS<sb>:CAN:SIC:HYSTeresis....1922
SBUS<sb>:CAN:SIC:THReshold....1922
SBUS<sb>:CAN:FAST:THReshold....1923
SBUS<sb>:CAN:FAST:HYSTeresis....1923
SBUS<sb>:CAN:XDATa:DBITrate....1923
SBUS<sb>:CAN:XDATa:SAMPlepoint....1924
SBUS<sb>:CAN:TRCVmode....1924
SBUS<sb>:CAN:POSition....1924
SBUS<sb>:CAN:SCALe....1924

SBUS<sb>:CAN:TYPE <SignalType>

Selects the CAN-High or CAN-Low line. Both lines are required for differential signal transmission used by CAN.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SignalType> CANL | CANH
*RST: CANL

Usage: Asynchronous command

Manual operation: See "Type" on page 760

SBUS<sb>:CAN:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Bitrate>
Range: 10000 to 5000000
Increment: 100
*RST: 100000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Nominal bit rate" on page 760

SBUS<sb>:CAN:SAMPlepoint <SamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SamplePoint>
Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Usage: Asynchronous command

Manual operation: See "Sample point" on page 760

SBUS<sb>:CAN:SOURce Source

Sets the source channel to which the line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source
With digital channels in SIC mode:
C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)
Without digital channels in FAST mode:
C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data" on page 759

SBUS<sb>:CAN:FDATa:DBITrate <FDBitrate>

Sets the bit rate of the data phase.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FDBitrate>
Range: 10000 to 15000000
Increment: 100
*RST: 1000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "FD bit rate" on page 760

SBUS<sb>:CAN:FDATa:SAMPlepoint <FDSamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FDSamplePoint>
Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Usage: Asynchronous command

Manual operation: See "FD sample point" on page 760

SBUS<sb>:CAN:SIC:HYSTeresis <Hysteresis>

Sets a hysteresis value for the SIC transceiver mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 761

SBUS<sb>:CAN:SIC:THReshold <SIC Threshold>

Sets a threshold value for the SIC transceiver mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SIC Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 761

SBUS<sb>:CAN:FAST:THReshold <SIC Threshold>

Sets a threshold value for the fast transceiver mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SIC Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 761

SBUS<sb>:CAN:FAST:HYSTeresis <Hysteresis>

Sets a hysteresis value for the fast transceiver mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 761

SBUS<sb>:CAN:XDATa:DBITrate <XLBitrate>

Sets the bit rate of the data phase for the CAN XL frame.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<XLBitrate>
Range: 10000 to 30000000
Increment: 100
*RST: 10000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "XL bit rate" on page 760

SBUS<sb>:CAN:XDATa:SAMPlepoint <XLSamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN XL frame.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<XLSamplePoint> Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Usage: Asynchronous command

Manual operation: See "XL sample point" on page 761

SBUS<sb>:CAN:TRCVmode <TransceiverMd>

Selects the transceiver mode for the CAN decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TransceiverMd> SIC | FAST
*RST: SIC

Usage: Asynchronous command

Manual operation: See "Transceiver mode" on page 760

SBUS<sb>:CAN:POSition <CAN position>

Sets the vertical position of the CAN signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CAN position>

Usage: Asynchronous command

SBUS<sb>:CAN:SCALe <CAN scale>

Set the vertical scale of the indicated CAN signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CAN scale>

Usage: Asynchronous command

18.18.13.2 Filter

There are two commands for each parameter, that you can use for defining the CAN settings.

For example, to set the *Frame type =CBFF* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:CAN:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:CAN:FILTer:DMIN "CBFF", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:CAN:FILTer:CHKall....1925
SBUS<sb>:CAN:FILTer:CLR....1926
SBUS<sb>:CAN:FILTer:INVert....1926
SBUS<sb>:CAN:FILTer:RST....1926
SBUS<sb>:CAN:FILTer:BIT....1926
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT....1926
SBUS<sb>:CAN:FILTer:DMAX....1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1927
SBUS<sb>:CAN:FILTer:DMIN....1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1927
SBUS<sb>:CAN:FILTer:DOPerator....1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1927
SBUS<sb>:CAN:FILTer:ERENable....1928
SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle....1928
SBUS<sb>:CAN:FILTer:FIENable....1928
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1928
SBUS<sb>:CAN:FILTer:FRENable....1928
SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle....1928
SBUS<sb>:CAN:FILTer:IMAX....1929
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1929
SBUS<sb>:CAN:FILTer:IMIN....1929
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1929
SBUS<sb>:CAN:FILTer:IOPerator....1930
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1930

SBUS<sb>:CAN:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 763

SBUS<sb>:CAN:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 763

SBUS<sb>:CAN:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 763

SBUS<sb>:CAN:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 763

SBUS<sb>:CAN:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:CAN:FILTer:BIT? <Bit>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 764

SBUS<sb>:CAN:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:DMAX? <Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 764

SBUS<sb>:CAN:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:DMIN? <Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 764

SBUS<sb>:CAN:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:CAN:FILTer:DOPerator? <Operator>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 764

SBUS<sb>:CAN:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:CAN:FILTer:ERENable? <Enabler>
SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 765

SBUS<sb>:CAN:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:CAN:FILTer:FIENable? <Enabler>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 764

SBUS<sb>:CAN:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:CAN:FILTer:FRENable? <Enabler>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on CAN frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 763

SBUS<sb>:CAN:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:IMAX? <Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 764

SBUS<sb>:CAN:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:IMIN? <Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 764

SBUS<sb>:CAN:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:CAN:FILTer:IOPerator? <Operator>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 764

18.18.13.3 Format

This section describes the commands to specify and query frame formats for the "CAN" protocol.

SBUS<sb>:CAN:FORMat:SELect ... 1931
SBUS<sb>:CAN:FORMat:ADDFrame ... 1931
SBUS<sb>:CAN:FORMat:LOAD ... 1931
SBUS<sb>:CAN:FORMat:SAVE ... 1931
SBUS<sb>:CAN:FORMat:CLR ... 1932
SBUS<sb>:CAN:FORMat:FCOunt? ... 1932
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ADDField ... 1932
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLDCount? ... 1932
SBUS<sb>:CAN:FORMat:FRAMe<fr>:NAME ... 1933
SBUS<sb>:CAN:FORMat:FRAMe<fr>:COLor ... 1933
SBUS<sb>:CAN:FORMat:FRAMe<fr>:TYPE ... 1933
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENValue ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Field ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Field ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Field ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Value ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Value ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Value ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1936
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1936
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1936
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1937
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1937
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1938

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1938
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1939
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1939
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARA....1940
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARB....1940

SBUS<sb>:CAN:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 765

SBUS<sb>:CAN:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 765

SBUS<sb>:CAN:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 766

SBUS<sb>:CAN:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 766

SBUS<sb>:CAN:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 766

SBUS<sb>:CAN:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 766

SBUS<sb>:CAN:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 768

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 767

SBUS<sb>:CAN:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 767

SBUS<sb>:CAN:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 767

SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<sb> 1..4

<fr> *

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 767

SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 767

SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 767

SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 767

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 768

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 768

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 768

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 769

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 769

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 769

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 769

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 770

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 770

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 770

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 770

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 770

18.18.13.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:CAN:ACKerror 1941
TRIGger:SBHW:CAN:BITSterror 1941
TRIGger:SBHW:CAN:BORDer 1941
TRIGger:SBHW:CAN:CRCerror 1942
TRIGger:SBHW:CAN:DCONdition 1942
TRIGger:SBHW:CAN:DLC 1942
TRIGger:SBHW:CAN:DLCCondition 1942
TRIGger:SBHW:CAN:DMIN 1943
TRIGger:SBHW:CAN:FDATa:BRS 1943
TRIGger:SBHW:CAN:FDATa:DPOSition 1943
TRIGger:SBHW:CAN:FDATa:ESI 1943
TRIGger:SBHW:CAN:FDATa:SCERror 1944
TRIGger:SBHW:CAN:FORMerror 1944
TRIGger:SBHW:CAN:FTYPe 1944
TRIGger:SBHW:CAN:ICONdition 1945
TRIGger:SBHW:CAN:IMAX 1945
TRIGger:SBHW:CAN:IMIN 1945
TRIGger:SBHW:CAN:ITYPe 1946
TRIGger:SBHW:CAN:TYPE 1946
TRIGger:SBHW:CAN:XDATa:AF:CONDition 1947
TRIGger:SBHW:CAN:XDATa:AF:MAX 1947
TRIGger:SBHW:CAN:XDATa:AF:MIN 1947

TRIGger:SBHW:CAN:XDATa:SDT:CONDition 1948
TRIGger:SBHW:CAN:XDATa:SDT:MAX 1948
TRIGger:SBHW:CAN:XDATa:SDT:MIN 1948
TRIGger:SBHW:CAN:XDATa:SEC 1949
TRIGger:SBHW:CAN:XDATa:VCID:CONDition 1949
TRIGger:SBHW:CAN:XDATa:VCID:MAX 1949
TRIGger:SBHW:CAN:XDATa:VCID:MIN 1949

TRIGger:SBHW:CAN:ACKerror <AckError>

Triggers when the transmitter does not receive an acknowledgment - a dominant bit during the ACK Slot.

Available, if `TRIGger:SBHW:CAN:TYPE` is set to `ERRC`.

Parameters:

<AckError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 777

TRIGger:SBHW:CAN:BITSterror <BitStuffError>

Triggers if a stuff error occurs - when the 6th consecutive equal bit level in the mentioned fields is detected.

Available, if `TRIGger:SBHW:CAN:TYPE` is set to `ERRC`.

Parameters:

<BitStuffError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 777

TRIGger:SBHW:CAN:BORDer <Endianness>

Sets the byte order (endianness) of the data transfer. Only for CAN protocol.

Parameters:

<Endianness> BENDian | LENDian

BENDian
Big endian, data is analyzed and evaluated in the order of reception.

LENDian
Little endian, the instrument reads the complete data, reverses the byte order of the data, and compares it with the specified data word.

*RST: BENDian

Usage: Asynchronous command

TRIGger:SBHW:CAN:CRCerror <ChecksumError>

Triggers on CRC errors. A CRC error occurs when the CRC calculated by the receiver differs from the received value in the CRC sequence.

Available, if `TRIGger:SBHW:CAN:TYPE` is set to `ERRC`.

Parameters:

<ChecksumError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 777

TRIGger:SBHW:CAN:DCONdition <DataOperator>

Sets the operator to set a specific data pattern or a data pattern range.

Parameters:

<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one data pattern to be set with `TRIGger:SBHW:CAN:DMIN`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data pattern" on page 776

TRIGger:SBHW:CAN:DLC <DLC>

Sets the data length code, the number of data bytes to be found. For complete definition, set also the operator with `TRIGger:SBHW:CAN:DLCCondition`.

Parameters:

<DLC> Range: CAN: 1 to 8, CAN FD: 1 to 15 (64 bytes)
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "DLC" on page 775

TRIGger:SBHW:CAN:DLCCondition <DLCOperator>

Operator to set the data length code.

The number of data bytes to be found is set with `TRIGger:SBHW:CAN:DLC`.

Parameters:

<DLCOperator> EQUal | GETHan

For little endian transfer direction, EQUal must be set.

*RST: GETHan

Usage: Asynchronous command

Manual operation: See "DLC" on page 775

TRIGger:SBHW:CAN:DMIN <DataPattern>

Sets a data pattern, or sets the start value of a data pattern range.

Parameters:

<DataPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Data pattern" on page 776

TRIGger:SBHW:CAN:FDATa:BRS <BRS_Bit>

Sets the bit rate switch bit.

Parameters:

<BRS_Bit> ONE | ZERO | DC

ONE: the bit rate switches from the bit rate of the arbitration phase to the faster data rate.

*RST: ONE

Usage: Asynchronous command

Manual operation: See "BRS, ESI" on page 776

TRIGger:SBHW:CAN:FDATa:DPOSition <DataPosition>

Defines the number of the first data byte at which the data pattern may start.

Parameters:

<DataPosition> Range: 1 to 2048
Increment: 1
*RST: 1

Usage: Asynchronous command

TRIGger:SBHW:CAN:FDATa:ESI <ESI_Bit>

Sets the error state indicator bit.

Parameters:

<ESI_Bit> ONE | ZERO | DC

DC: do not care, bit is nor relevant.

*RST: DC

Usage: Asynchronous command

Manual operation: See "BRS, ESI" on page 776

TRIGger:SBHW:CAN:FDATa:SCERror <StuffCntErr>

Triggers on stuff count errors. A stuff bit error occurs if more than five consecutive bits of the same level occur on the bus.

Available, if TRIGger:SBHW:CAN:TYPE is set to ERRor.

Parameters:

<StuffCntErr> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 777

TRIGger:SBHW:CAN:FORMerror <FormError>

Triggers when a fixed-form bit field contains one or more illegal bits.

Available, if TRIGger:SBHW:CAN:TYPE is set to ERRC.

Parameters:

<FormError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 777

TRIGger:SBHW:CAN:FTYPe <FrameType>

Sets the CAN frame type.

Parameters:

<FrameType> CBFF | CBFR | CEFF | CEFR | FBFF | FEFF | XLFF | ERRor | OVERload

CBFF: classical base frame format data
CBFR: classical base frame format remote
CEFF: classical extended frame format data
CEFR: classical extended frame format remote
FBFF: FD base frame format
FEFF: FD extended frame format
XLFF: XL frame format

ERR: error
OVLD: overload

*RST: CBFF

Usage: Asynchronous command

Manual operation: See "Frame type" on page 773

TRIGger:SBHW:CAN:ICONdition <IdOperator>

Sets the operator to set a specific identifier or an identifier range.

Parameters:

<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one identifier pattern to be set with `TRIGger:SBHW:CAN:IMIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:CAN:IMIN` and `TRIGger:SBHW:CAN:IMAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Identifier" on page 775

TRIGger:SBHW:CAN:IMAX <IdPattern>

Sets the end value of an identifier range if `TRIGger:SBHW:CAN:ICONdition` is set to `INRange` or `OORange`.

Parameters:

<IdPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Identifier" on page 775

TRIGger:SBHW:CAN:IMIN <IdPattern>

Specifies a message identifier pattern, or sets the start value of an identifier range.

Parameters:

<IdPattern>

Usage: Asynchronous command

Manual operation: See "Identifier" on page 775

TRIGger:SBHW:CAN:ITYPe <IdentifierType>

Selects the format of data and remote frames.

Remote frames are not available in the CAN FD protocol.

Parameters:

<IdentifierType> B11 | B29

B11
11-bit identifier (standard format). The instrument triggers on the sample point of the IDE bit.

B29
29-bit identifier (extended format). The instrument triggers on the sample point of the RTR bit.

*RST: B11

Usage: Asynchronous command

Manual operation: See "ID type" on page 776

TRIGger:SBHW:CAN:TYPE <Type>

Selects the trigger type for CAN analysis.

Parameters:

<Type> STOF | EDOF | FTYP | ID | IDDT | ERRC

STOF
STart of Frame: triggers on the first edge of the dominant SOF bit (synchronization bit).

FTYP
Frame type: triggers on a specified frame type and on the identifier format.

ID
Identifier: Sets the trigger to one specific identifier or an identifier range.
To set the identifier, use `TRIGger:SBHW:CAN:ICONdition`, `TRIGger:SBHW:CAN:IMAX`, and `TRIGger:SBHW:CAN:IMIN`.

IDDT
Identifier and data: Combination of identifier and data conditions. To set the identifier condition, use `TRIGger:SBHW:CAN:ICONdition`, `TRIGger:SBHW:CAN:IMIN`, and `TRIGger:SBHW:CAN:IMAX`.
To set the data condition, use `TRIGger:SBHW:CAN:DCONdition` and `TRIGger:SBHW:CAN:DMIN`.

ERRC
Error condition: Define the error types with:
`TRIGger:SBHW:CAN:ACKerror`
`TRIGger:SBHW:CAN:BITSterror`
`TRIGger:SBHW:CAN:CRCerror`
`TRIGger:SBHW:CAN:FORMerror`
`TRIGger:SBHW:CAN:FDATa:SCERror`
*RST: STOF

Usage: Asynchronous command

Manual operation: See "Type" on page 771

TRIGger:SBHW:CAN:XDATa:AF:CONDition <AfOperator>

Sets the comparison condition for the acceptance field to a specific value or a range.

Parameters:
<AfOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one pattern to be set with `TRIGger:SBHW:CAN:XDATa:AF:MIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:CAN:XDATa:AF:MIN` and `TRIGger:SBHW:CAN:XDATa:AF:MAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "AF" on page 777

TRIGger:SBHW:CAN:XDATa:AF:MAX <AfPatternTo>

Sets the end value of an acceptance field if `TRIGger:SBHW:CAN:XDATa:AF:CONDition` is set to `INRange` or `OORange`.

Parameters:
<AfPatternTo> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "AF" on page 777

TRIGger:SBHW:CAN:XDATa:AF:MIN <AfPattern>

Specifies an acceptance field pattern, or sets the start value of a range.

Parameters:
<AfPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "AF" on page 777

TRIGger:SBHW:CAN:XDATa:SDT:CONDition <SdtOperator>

Sets the comparison condition for the service data unit type to a specific value or a range.

Parameters:
<SdtOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one pattern to be set with `TRIGger:SBHW:CAN:XDATa:SDT:MIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:CAN:XDATa:SDT:MIN` and `TRIGger:SBHW:CAN:XDATa:SDT:MAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "SDT" on page 776

TRIGger:SBHW:CAN:XDATa:SDT:MAX <SdtPatternTo>

Sets the end value of a service data unit type range if `TRIGger:SBHW:CAN:XDATa:SDT:CONDition` is set to `INRange` or `OORange`.

Parameters:
<SdtPatternTo> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "SDT" on page 776

TRIGger:SBHW:CAN:XDATa:SDT:MIN <SdtPattern>

Specifies a service data unit type pattern, or sets the start value of a range.

Parameters:
<SdtPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "SDT" on page 776

TRIGger:SBHW:CAN:XDATa:SEC <SEC_Bit>

Sets a value for the simple extended content (SEC) field. It indicates, if the CAN XL data frame uses the CADsec protocol.

Parameters:

<SEC_Bit> ONE | ZERO | DC

*RST: DC

Usage: Asynchronous command

Manual operation: See "SEC" on page 777

TRIGger:SBHW:CAN:XDATa:VCID:CONDition <VcidOperator>

Sets the comparison condition for the VCID to a specific value or a range.

Parameters:

<VcidOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one pattern to be set with `TRIGger:SBHW:CAN:XDATa:VCID:MIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:CAN:XDATa:VCID:MIN` and `TRIGger:SBHW:CAN:XDATa:VCID:MAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "VCID" on page 777

TRIGger:SBHW:CAN:XDATa:VCID:MAX <VcidPatternTo>

Sets the end value of a VCID range if `TRIGger:SBHW:CAN:XDATa:VCID:CONDition` is set to `INRange` or `OORange`.

Parameters:

<VcidPatternTo> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "VCID" on page 777

TRIGger:SBHW:CAN:XDATa:VCID:MIN <VcidPattern>

Specifies a VCID pattern, or sets the start value of a range.

Parameters:

<VcidPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "VCID" on page 777

18.18.13.5 Software trigger

There are two commands for each parameter, that you can use for defining the CAN settings.

For example, to set the *Frame type =CBFF > Field =Data >Data* value you can use one of the following commands:

- `TRIGger:SBSW:CAN:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:CAN:DMIN "CBFF", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:CAN:CHKall....1950
TRIGger:SBSW:CAN:CLR....1951
TRIGger:SBSW:CAN:INVert....1951
TRIGger:SBSW:CAN:RST....1951
TRIGger:SBSW:CAN:FRENable....1951
TRIGger:SBSW:CAN:FRAMe<fr>:ENABle....1951
TRIGger:SBSW:CAN:BIT....1951
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:BIT....1951
TRIGger:SBSW:CAN:DMAX....1952
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMAX....1952
TRIGger:SBSW:CAN:DMIN....1952
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMIN....1952
TRIGger:SBSW:CAN:DOPerator....1953
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator....1953
TRIGger:SBSW:CAN:FIENable....1953
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:ENABle....1953
TRIGger:SBSW:CAN:IMAX....1953
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMAX....1953
TRIGger:SBSW:CAN:IMIN....1954
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMIN....1954
TRIGger:SBSW:CAN:IOPerator....1954
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator....1954
TRIGger:SBSW:CAN:ERENable....1954
TRIGger:SBSW:CAN:ERRor<m>:ENABle....1954
SBUS<sb>:CAN:SWTindex?....1955
SBUS<sb>:CAN:SWTTime?....1955

TRIGger:SBSW:CAN:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 780

TRIGger:SBSW:CAN:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 780

TRIGger:SBSW:CAN:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 780

TRIGger:SBSW:CAN:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 780

TRIGger:SBSW:CAN:FRENable <Frame>,<Enabler>
TRIGger:SBSW:CAN:FRENable? <Enabler>
TRIGger:SBSW:CAN:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 780

TRIGger:SBSW:CAN:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:CAN:BIT? <Bit>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 780

TRIGger:SBSW:CAN:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:CAN:DMAX? <Data>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 780

TRIGger:SBSW:CAN:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:CAN:DMIN? <Data>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 780

TRIGger:SBSW:CAN:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:CAN:DOPerator? <Operator>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 780

TRIGger:SBSW:CAN:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:CAN:FIENable? <Enabler>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 780

TRIGger:SBSW:CAN:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:CAN:IMAX? <Data>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 780

TRIGger:SBSW:CAN:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:CAN:IMIN? <Data>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 780

TRIGger:SBSW:CAN:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:CAN:IOPerator? <Operator>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 780

TRIGger:SBSW:CAN:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:CAN:ERENable? <Enabler>
TRIGger:SBSW:CAN:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 782

SBUS<sb>:CAN:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.13.6 Decode results

SBUS<sb>:CAN:FCOunt? 1956
SBUS<sb>:CAN:FRAMe<fr>:FLDCount? 1956
SBUS<sb>:CAN:FRAMe<fr>:ACKState? 1957
SBUS<sb>:CAN:FRAMe<fr>:ACKValue? 1957
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:STATe? 1957
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:LABel? 1958

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:VALue? 1958
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:FVALue? 1959
SBUS<sb>:CAN:FRAMe<fr>:CSSTate? 1959
SBUS<sb>:CAN:FRAMe<fr>:CSValue? 1959
SBUS<sb>:CAN:FRAMe<fr>:DATA? 1960
SBUS<sb>:CAN:FRAMe<fr>:DLCState? 1960
SBUS<sb>:CAN:FRAMe<fr>:DLCValue? 1960
SBUS<sb>:CAN:FRAMe<fr>:IDSTate? 1961
SBUS<sb>:CAN:FRAMe<fr>:IDTYpe? 1961
SBUS<sb>:CAN:FRAMe<fr>:IDValue? 1961
SBUS<sb>:CAN:FRAMe<fr>:NDBYtes? 1962
SBUS<sb>:CAN:FRAMe<fr>:STARt? 1962
SBUS<sb>:CAN:FRAMe<fr>:STATus? 1962
SBUS<sb>:CAN:FRAMe<fr>:STOP? 1963
SBUS<sb>:CAN:FRAMe<fr>:SYMBol? 1963
SBUS<sb>:CAN:FRAMe<fr>:TYPE? 1964
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:AF? 1964
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:PCRC? 1964
SBUS<sb>:CAN:FRAMe<fr>:SBC? 1965
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SDT? 1965
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SEC? 1965
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:VCID? 1966
SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:ESI? 1966
SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:BRS? 1967
SBUS<sb>:CAN:FRAMe<fr>:DBITrate? 1967
SBUS<sb>:CAN:FRAMe<fr>:NBITrate? 1967
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:FCRC? 1968

SBUS<sb>:CAN:FCOunt?

Returns the number of decoded frames for the CAN protocol analysis.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of frames.

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:ACKState?

Return the states of the acknowledgment field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAckState> OK | ERRor | UNDF

UNDF: Undefined

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:ACKValue?

Returns the value of the acknowledge slot for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAckValue> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> *
Selects the field number.

Return values:
<State> OK | EOFD | ACKD | NOACk | CRCD | CRC | SERRror | FORM | BTST | UNKNown | INComplete

OK
The field has no error, it is valid.

EOFD
Wrong end of field

ACKD
Acknowledgment delimiter error

NOACk
Field acknowledgment is missing

CRCD
Checksum delimiter error

CRC
Checksum error, cyclic redundancy check failed

SERRror
Stuff count error (CAN-FD ISO only)

FORM
Fixed-bit form error

BTST
Bit stuffing error

UNKNown
State unknown

INComplete
Field not completely contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> *
Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:CSSTate?

Return the states of the checksum field (CRC).

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ChecksumState> OK | ERRor | UNDF
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:CSValue?

Returns the CRC sequence value of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<ChecksumValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:DATA?

Returns the data of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Count> Comma-separated list of values. The first value is the number of bytes, followed by the values of the data bytes.

<Values>

Example:
```
BUS1:CAN:FRAMe2:DATA?
--> 3,208,231,32
```
Returns the data of the 2nd frame: the number of data bytes is 3 (see 1st value).

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:DLCState?

Return the states of the state of data length code.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameDLCState> OK | ERRor | UNDF
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:DLCValue?

Returns the data length code of the selected frame - the number of data bytes in the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameDLCValue> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:IDSTate?

Return the states of the identifier state.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdtfSt> OK | ERRor | UNDF
UNDF: Undefined
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:IDTYpe?

Returns the identifier type of the selected frame, the identifier format of data and remote frames.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdentifierType> B11 | B29
B11: standard format, 11 bit
B29: extended format, 29 bit
*RST: B11

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdtfVal> Range: 0 to 536870911
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:NDBYtes?

Returns the number of data bytes.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<NDBytes> Range: 0 to 2048
Increment: 1
*RST: 1

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:STARt?

Return the start time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | EOFD | ACKD | NOACk | CRCD | CRC | SERRror | FORM | BTST | UNKNown | INComplete

`OK`: the frame is valid.
`EOFD`: Wrong end of frame.
`ACKD`: Wrong ACK delimiter occurred.
`NOACK`: Acknowledge is missing.
`CRCD`: Wrong CRC delimiter occurred.
`CRC`: Cyclic redundancy check failed.
`SERRror`: Stuff count error (CAN FD ISO only).
`FORM`: Fixed-bit form error.
`BTST`: Bit stuffing error occurred.
`INSufficient`: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:STOP?

Return the stop time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:SYMBol?

Returns the symbol of the specified frame if the label list is enabled.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Label> String with symbol of the identifier

Example: `BUS:CAN:FRAMe:SYMBol?`
Response: `Temperature`

Usage: Query only

SBUS<sb>:CAN:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> CBFF | CBFR | CEFF | CEFR | FBFF | FEFF | XLFF | ERRor | OVERload | UNDefined

`CBFF`: classical base frame format data
`CBFRemote`: classical base frame format remote
`CEFF`: classical extended frame format data
`CEFRemote`: classical extended frame format remote
`FBFF`: FD base frame format
`FEFF`: FD extended frame format
`XLFF`: XL frame format
`ERR`: error
`OVLD`: overload

*RST: CBFF

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:AF?

Returns the value of the acceptance field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<AF> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:PCRC?

Returns the value of the preamble cyclic redundant check (PCRC) for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<PCRC> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:SBC?

Returns the value of the stuff bit count (SBC) field for the selected CAN XL frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SBC> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SDT?

Returns the value of the service data unit field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<SDT> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SEC?

Returns the value of the simple extended content (SEC) field for the selected CAN XL frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:

<SEC> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:VCID?

Returns the value of the VCID field for the selected CAN XL frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:

<VCID> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:ESI?

Returns the value of the error state indicator (ESI) field for the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:

<ESI> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:BRS?

Returns the value of the bit rate switch (BRS) field for the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:

<BRS> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:DBITrate?

Returns the data bit rate of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<DataBitRate> Increment: 100
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:NBITrate?

Returns the nominal bit rate of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<NominalBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:FCRC?

Returns the value of the frame CRC for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<FCRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.18.14 LIN (option R&S MXO5-K520)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1968
- Filter....1971
- Format....1976
- Hardware trigger....1986
- Software trigger....1989
- Decode results....1995

18.18.14.1 Configuration

SBUS<sb>:LIN:BITRate....1968
SBUS<sb>:LIN:DATA:HYSTeresis....1969
SBUS<sb>:LIN:DATA:SOURce....1969
SBUS<sb>:LIN:DATA:THReshold....1969
SBUS<sb>:LIN:POLarity....1970
SBUS<sb>:LIN:STANdard....1970
SBUS<sb>:LIN:POSition....1970
SBUS<sb>:LIN:SCALe....1970

SBUS<sb>:LIN:BITRate <Bitrate>

Sets the number of transmitted bits per second. The maximum bit rate for LIN is 20 kbit/s.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

<Bitrate>

Range: 1000 to 20000000
Increment: 1
*RST: 9600
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate" on page 788

SBUS<sb>:LIN:DATA:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the data channel.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 789

SBUS<sb>:LIN:DATA:SOURce <DataSource>

Sets the waveform of the data line.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<DataSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data" on page 788

SBUS<sb>:LIN:DATA:THReshold <Threshold>

Sets a user-defined threshold value for the data channel.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 789

SBUS<sb>:LIN:POLarity <Polarity>

Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logic 1.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> IDLLow | IDLHigh
*RST: IDLHigh

Usage: Asynchronous command

Manual operation: See "Polarity" on page 788

SBUS<sb>:LIN:STANdard <Standard>

Selects the version of the LIN standard.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Standard> V1X | V2X | J2602 | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "LIN standard" on page 788

SBUS<sb>:LIN:POSition <LIN position>

Sets the vertical position of the LIN signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<LIN position>

Usage: Asynchronous command

SBUS<sb>:LIN:SCALe <LIN scale>

Set the vertical scale of the indicated LIN signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<LIN scale>

Usage: Asynchronous command

18.18.14.2 Filter

There are two commands for each parameter, that you can use for defining the LIN settings.

For example, to set the *Frame type =Data > Field =Id >00* value you can use one of the following commands:

- `SBUS:LIN:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:LIN:FILTer:DMIN "Data", "Id", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:LIN:FILTer:CHKall ... 1971
SBUS<sb>:LIN:FILTer:CLR ... 1972
SBUS<sb>:LIN:FILTer:INVert ... 1972
SBUS<sb>:LIN:FILTer:RST ... 1972
SBUS<sb>:LIN:FILTer:BIT ... 1972
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1972
SBUS<sb>:LIN:FILTer:DMAX ... 1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1973
SBUS<sb>:LIN:FILTer:DMIN ... 1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1973
SBUS<sb>:LIN:FILTer:DOPerator ... 1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1973
SBUS<sb>:LIN:FILTer:ERENable ... 1974
SBUS<sb>:LIN:FILTer:ERRor<n>:ENABle ... 1974
SBUS<sb>:LIN:FILTer:FIENable ... 1974
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1974
SBUS<sb>:LIN:FILTer:FRENable ... 1974
SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle ... 1974
SBUS<sb>:LIN:FILTer:IMAX ... 1975
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1975
SBUS<sb>:LIN:FILTer:IMIN ... 1975
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1975
SBUS<sb>:LIN:FILTer:IOPerator ... 1976
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1976

SBUS<sb>:LIN:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 790

SBUS<sb>:LIN:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 790

SBUS<sb>:LIN:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 790

SBUS<sb>:LIN:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 790

SBUS<sb>:LIN:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:LIN:FILTer:BIT? <Bit>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 791

SBUS<sb>:LIN:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:LIN:FILTer:DMAX? <Data>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 791

SBUS<sb>:LIN:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:LIN:FILTer:DMIN? <Data>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 791

SBUS<sb>:LIN:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:LIN:FILTer:DOPerator? <Operator>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 791

SBUS<sb>:LIN:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:LIN:FILTer:ERENable? <Enabler>
SBUS<sb>:LIN:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 792

SBUS<sb>:LIN:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:LIN:FILTer:FIENable? <Enabler>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 791

SBUS<sb>:LIN:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:LIN:FILTer:FRENable? <Enabler>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on LIN frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 791

SBUS<sb>:LIN:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:LIN:FILTer:IMAX? <Data>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 791

SBUS<sb>:LIN:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:LIN:FILTer:IMIN? <Data>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 791

SBUS<sb>:LIN:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:LIN:FILTer:IOPerator? <Operator>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 791

18.18.14.3 Format

This section describes the commands to specify and query frame formats for the "LIN" protocol.

SBUS<sb>:LIN:FORMat:SELect....1977
SBUS<sb>:LIN:FORMat:ADDFrame....1977
SBUS<sb>:LIN:FORMat:LOAD....1977
SBUS<sb>:LIN:FORMat:SAVE....1977
SBUS<sb>:LIN:FORMat:CLR....1978
SBUS<sb>:LIN:FORMat:FCOunt?....1978
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ADDField....1978
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLDCount?....1978
SBUS<sb>:LIN:FORMat:FRAMe<fr>:NAME....1979
SBUS<sb>:LIN:FORMat:FRAMe<fr>:COLor....1979
SBUS<sb>:LIN:FORMat:FRAMe<fr>:TYPE....1979
SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENCheck....1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENValue....1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Field....1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Field....1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Field....1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Value....1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Value....1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Value....1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:NAME....1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:COLor....1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1982
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1982
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1982
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1983
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1983
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1984

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1984
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1985
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1985
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARA....1986
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARB....1986

SBUS<sb>:LIN:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 792

SBUS<sb>:LIN:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 793

SBUS<sb>:LIN:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 793

SBUS<sb>:LIN:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 794

SBUS<sb>:LIN:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 793

SBUS<sb>:LIN:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 793

SBUS<sb>:LIN:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 795

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 794

SBUS<sb>:LIN:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 794

SBUS<sb>:LIN:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 794

SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 794

SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 794

SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 794

SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 794

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 795

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 795

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 796

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 796

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 796

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 796

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 796

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 797

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 797

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 797

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 797

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 797

18.18.14.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:LIN:TYPE....1986
TRIGger:SBHW:LIN:SYERror....1987
TRIGger:SBHW:LIN:IPERror....1987
TRIGger:SBHW:LIN:IMIN....1987
TRIGger:SBHW:LIN:IMAX....1988
TRIGger:SBHW:LIN:ICONdition....1988
TRIGger:SBHW:LIN:DPOSition....1988
TRIGger:SBHW:LIN:DMIN....1989
TRIGger:SBHW:LIN:DCONdition....1989
TRIGger:SBHW:LIN:CHKSerror....1989

TRIGger:SBHW:LIN:TYPE <Type>

Selects the trigger type for LIN analysis.

Parameters:
<Type> STARtframe | ID | IDDT | WKFR | ERRC

STARtframe
Start of the frame. Triggers on the stop bit of the sync field.

ID
Sets the trigger to one specific identifier or an identifier range.

IDDT
Combination of identifier and data conditions.

WKFR
Wake-up frame.

ERRC
Error condition. Define the error types with:
`TRIGger:SBHW:LIN:CHKSerror`
`TRIGger:SBHW:LIN:IPERror`
`TRIGger:SBHW:LIN:SYERror`

*RST: STARtframe

Usage: Asynchronous command

Manual operation: See "Type" on page 798

TRIGger:SBHW:LIN:SYERror <SyncError>

Triggers if a synchronization error occurs.

Available, if `TRIGger:SBHW:LIN:TYPE` is set to `ERRC`.

Parameters:
<SyncError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 800

TRIGger:SBHW:LIN:IPERror <IdParityError>

Triggers if an error occurs in the identifier parity bits. The parity bits are the bits 6 and 7 of the identifier.

Available, if `TRIGger:SBHW:LIN:TYPE` is set to `ERRC`.

Parameters:
<IdParityError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 800

TRIGger:SBHW:LIN:IMIN <IdPattern>

Specifies a secondary identifier pattern, or sets the start value of an identifier range.

Parameters:
<IdPattern>

Usage: Asynchronous command

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 799

TRIGger:SBHW:LIN:IMAX <IdPattern>

Sets the end value of an identifier range if `TRIGger:SBHW:LIN:ICONdition` is set to `INRange` or `OORange`.

Parameters:
<IdPattern>

Usage: Asynchronous command

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 799

TRIGger:SBHW:LIN:ICONdition <IdOperator>

Sets the operator to set a specific identifier or an identifier range.

Parameters:
<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one identifier pattern to be set with `TRIGger:SBHW:LIN:IMIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:LIN:IMIN` and `TRIGger:SBHW:LIN:IMAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 799

TRIGger:SBHW:LIN:DPOSition <DataPosition>

Sets the number of data events that are ignored, before trigger condition check of the data starts.

Parameters:
<DataPosition>
Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data setup: Condition, Pattern, Position" on page 799

TRIGger:SBHW:LIN:DMIN <DataPattern>

Specifies a data pattern, or sets the start value of a data pattern range.

Parameters:
<DataPattern>

Usage: Asynchronous command

Manual operation: See "Data setup: Condition, Pattern, Position" on page 799

TRIGger:SBHW:LIN:DCONdition <DataOperator>

Sets the operator to set a specific data pattern or a data pattern range.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data setup: Condition, Pattern, Position" on page 799

TRIGger:SBHW:LIN:CHKSerror <ChecksumError>

Triggers on checksum errors.

Available, if `TRIGger:SBHW:LIN:TYPE` is set to `ERRC`.

Parameters:
<ChecksumError> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 800

18.18.14.5 Software trigger

There are two commands for each parameter, that you can use for defining the LIN settings.

For example, to set the *Frame type =Data > Field =Id >00* value you can use one of the following commands:

- `TRIGger:SBSW:LIN:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:LIN:DMIN "Data", "Id", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:LIN:CHKall....1990
TRIGger:SBSW:LIN:CLR....1990
TRIGger:SBSW:LIN:INVert....1990

TRIGger:SBSW:LIN:RST 1991
TRIGger:SBSW:LIN:FRENable 1991
TRIGger:SBSW:LIN:FRAMe<fr>:ENABle 1991
TRIGger:SBSW:LIN:BIT 1991
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:BIT 1991
TRIGger:SBSW:LIN:DMAX 1991
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMAX 1991
TRIGger:SBSW:LIN:DMIN 1992
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMIN 1992
TRIGger:SBSW:LIN:DOPerator 1992
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator 1992
TRIGger:SBSW:LIN:FIENable 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:ENABle 1993
TRIGger:SBSW:LIN:IMAX 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMAX 1993
TRIGger:SBSW:LIN:IMIN 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMIN 1993
TRIGger:SBSW:LIN:IOPerator 1994
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator 1994
TRIGger:SBSW:LIN:ERENable 1994
TRIGger:SBSW:LIN:ERRor<m>:ENABle 1994
SBUS<sb>:LIN:SWTindex? 1994
SBUS<sb>:LIN:SWTTime? 1995

TRIGger:SBSW:LIN:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 801

TRIGger:SBSW:LIN:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 801

TRIGger:SBSW:LIN:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 801

TRIGger:SBSW:LIN:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 801

TRIGger:SBSW:LIN:FRENable <Frame>,<Enabler>
TRIGger:SBSW:LIN:FRENable? <Enabler>
TRIGger:SBSW:LIN:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 801

TRIGger:SBSW:LIN:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:LIN:BIT? <Bit>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 802

TRIGger:SBSW:LIN:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:LIN:DMAX? <Data>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 802

TRIGger:SBSW:LIN:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:LIN:DMIN? <Data>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 802

TRIGger:SBSW:LIN:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:LIN:DOPerator? <Operator>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 802

TRIGger:SBSW:LIN:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:LIN:FIENable? <Enabler>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 802

TRIGger:SBSW:LIN:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:LIN:IMAX? <Data>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 802

TRIGger:SBSW:LIN:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:LIN:IMIN? <Data>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 802

TRIGger:SBSW:LIN:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:LIN:IOPerator? <Operator>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 802

TRIGger:SBSW:LIN:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:LIN:ERENable? <Enabler>
TRIGger:SBSW:LIN:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:

<m> Index of the error

Parameters:

<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 803

SBUS<sb>:LIN:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.14.6 Decode results

The following section describes the commands used for querying the results of the LIN decoding.

SBUS<sb>:LIN:FCOunt? 1995
SBUS<sb>:LIN:FRAMe<fr>:FLDCount? 1996
SBUS<sb>:LIN:FRAMe<fr>:BITRate? 1996
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:STATe? 1996
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:VALue? 1997
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:FVALue? 1997
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:LABel? 1998
SBUS<sb>:LIN:FRAMe<fr>:CSValue? 1998
SBUS<sb>:LIN:FRAMe<fr>:DATA? 1998
SBUS<sb>:LIN:FRAMe<fr>:IDPValue? 1999
SBUS<sb>:LIN:FRAMe<fr>:IDValue? 1999
SBUS<sb>:LIN:FRAMe<fr>:STARt? 1999
SBUS<sb>:LIN:FRAMe<fr>:STATus? 2000
SBUS<sb>:LIN:FRAMe<fr>:STOP? 2000
SBUS<sb>:LIN:FRAMe<fr>:SYMBol? 2000
SBUS<sb>:LIN:FRAMe<fr>:PIDentifier? 2001

SBUS<sb>:LIN:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count> Total number of fields.

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | WAKeup | CHCKsum | PRERror | STERror | SYERror | LNERror | UNK | INComplete

OK
The field has no error, it is valid.

WAKeup
Wakeup bit missing

CHCKsum
Checksum error

PRERror
Parity error, incorrect parity bit

STERror
Start error, incorrect start bit

SYERror
Synchronization error, incorrect synchronization bit

LNERror
Length error

UNKNown
State unknown

INComplete
Field not completely contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:CSValue?

Returns the checksum value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ChecksumValue> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:DATA?

Returns the data bytes of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example:
```
BUS:LIN:FRAMe4:DATA?
<-- 4,118,39,71,123
```

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:IDPValue?

Returns the value of the identifier parity bits of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<IdtfParVal>
Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<IdtfVal>
Range: 0 to 63
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart>
Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | WAKeup | CHCKsum | PRERror | STERror | SYERror | LNERror | UNK | INComplete

`WAKeup`: wake-up frame.
`CHCKsum`: checksum error
`PRERror`: parity error in identifier
`STERror`: stop error
`SYERror`: synchronization error
`LNERror`: unexpected length
`UNK`: unknown error

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Symbol>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:PIDentifier?

Returns the protected identifier of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Protected identifer> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.18.15 SENT (option R&S MXO5-K520)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2001
- Filter....2007
- Format....2012
- Software trigger....2022
- Decode results....2028

18.18.15.1 Configuration

SBUS<sb>:SENT:CLKPeriod....2002
SBUS<sb>:SENT:CLKTolerance....2002
SBUS<sb>:SENT:CRCMethod....2002
SBUS<sb>:SENT:CRCVersion....2003
SBUS<sb>:SENT:DATA:HYSTeresis....2003
SBUS<sb>:SENT:DATA:SOURce....2003
SBUS<sb>:SENT:DATA:THReshold....2003
SBUS<sb>:SENT:DNIBbles....2004
SBUS<sb>:SENT:MODE....2004
SBUS<sb>:SENT:POSition....2004
SBUS<sb>:SENT:PPFLength....2005
SBUS<sb>:SENT:PPULse....2005
SBUS<sb>:SENT:RDSL....2005
SBUS<sb>:SENT:SCALe....2006

SBUS<sb>:SENT:SFORmat....2006
SBUS<sb>:SENT:SWTindex?....2006
SBUS<sb>:SENT:SWTTime?....2007

SBUS<sb>:SENT:CLKPeriod <ClockPeriod>

Sets the transmitter-specific nominal clock period (clock tick).

The clock period and signal length determine the speed of transmission.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ClockPeriod>
Range: 1E-06 to 0.0001
Increment: 1E-06
*RST: 6E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "Clock period" on page 811

SBUS<sb>:SENT:CLKTolerance <ClockTolerance>

Specifies a tolerated deviation of the clock.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ClockTolerance>
Range: 1 to 25
Increment: 1
*RST: 20
Default unit: %

Usage: Asynchronous command

Manual operation: See "Clock tolerance" on page 811

SBUS<sb>:SENT:CRCMethod <CRCCalculation>

Selects the method for CRC calculation.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CRCCalculation> SAEJ | TLE
SAEJ: SAE_J2716
TLE: TLE_4998X
*RST: SAEJ

Usage: Asynchronous command

Manual operation: See "CRC calculation" on page 812

SBUS<sb>:SENT:CRCVersion <CRCVersion>

Selects the version the CRC check is based on.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CRCVersion> LEGA | V2010

`LEGA`: Legacy
`V2010`: v2010/v2016

*RST: V2010

Usage: Asynchronous command

Manual operation: See "CRC version" on page 812

SBUS<sb>:SENT:DATA:HYSTeresis <SDATA Hyst>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDATA Hyst>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 812

SBUS<sb>:SENT:DATA:SOURce <DataSource>

Sets the source of the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data" on page 811

SBUS<sb>:SENT:DATA:THReshold <SDATA Thres>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDATA Thres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 812

SBUS<sb>:SENT:DNIBbles <DataNibbles>

Sets the number of data units in a single transmission sequence.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataNibbles> Range: 1 to 6
Increment: 1
*RST: 6

Usage: Asynchronous command

Manual operation: See "Data nibbles" on page 811

SBUS<sb>:SENT:MODE <Mode>

Selects the operating mode of the SENT protocol.

If `Legacy` is selected, the SPC mode is not supported.

If `SPC` mode is selected, the SENT protocol allows for the calibration of a sensor's output by sending a single calibrated value.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> LEGacy | SPC
*RST: LEGacy

Usage: Asynchronous command

Manual operation: See "Mode" on page 811

SBUS<sb>:SENT:POSition <SENT position>

Sets the vertical position of the SENT signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SENT position>

Usage: Asynchronous command

SBUS<sb>:SENT:PPFLength <FrameLength>

Specifies the fixed frame length in terms of ticks, which requires setting the pause pulse (`SBUS<sb>:SENT:PPULse`) to `PPFL`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FrameLength>
Range: 104 to 922
Increment: 1
*RST: 256

Usage: Asynchronous command

Manual operation: See "Frame length" on page 812

SBUS<sb>:SENT:PPULse <PausePulse>

Determines whether a pause pulse is transmitted after the checksum nibble.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<PausePulse> NPP | PP | PPFL

NPP
No pause pulse is transmitted.

PP
Enables transmitting a pause pulse.

PPFL
A pause pulse is transmitted to achieve a fixed frame length, which is specified by `SBUS<sb>:SENT:PPFLength`.

*RST: NPP

Usage: Asynchronous command

Manual operation: See "Pause pulse" on page 812

SBUS<sb>:SENT:RDSL <RessDispSel>

Selects the results to be displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<RessDispSel> TRSQ | SMSG | ALL
`TRSQ`: transmission sequence
`SMSG`: serial messages
*RST: ALL

Usage: Asynchronous command

SBUS<sb>:SENT:SCALe <SENT scale>

Set the vertical scale of the indicated SENT signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SENT scale>

Usage: Asynchronous command

SBUS<sb>:SENT:SFORmat <SerialMessages>

Selects if serial messages are enabled or disabled.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SerialMessages> ENABled | DISabled
*RST: DISabled

Usage: Asynchronous command

Manual operation: See "Serial message" on page 811

SBUS<sb>:SENT:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.15.2 Filter

There are two commands for each parameter, that you can use for defining the SENT settings.

For example, to set the *Frame type =TransmissionSequence > Field =Data >01100* value you can use one of the following commands:

- `SBUS:SENT:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:SENT:FILTer:DMIN "TransmissionSequence", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:SENT:FILTer:CHKall ... 2008
SBUS<sb>:SENT:FILTer:CLR ... 2008
SBUS<sb>:SENT:FILTer:INVert ... 2008
SBUS<sb>:SENT:FILTer:RST ... 2008
SBUS<sb>:SENT:FILTer:FRENable ... 2009
SBUS<sb>:SENT:FILTer:FRAMe<fr>:ENABle ... 2009
SBUS<sb>:SENT:FILTer:BIT ... 2009
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 2009
SBUS<sb>:SENT:FILTer:DMAX ... 2009
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 2009
SBUS<sb>:SENT:FILTer:DMIN ... 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 2010
SBUS<sb>:SENT:FILTer:DOPerator ... 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 2010
SBUS<sb>:SENT:FILTer:FIENable ... 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 2010
SBUS<sb>:SENT:FILTer:IMAX ... 2011
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 2011
SBUS<sb>:SENT:FILTer:IMIN ... 2011
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 2011
SBUS<sb>:SENT:FILTer:IOPerator ... 2012

SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2012
SBUS<sb>:SENT:FILTer:ERENable 2012
SBUS<sb>:SENT:FILTer:ERRor<n>:ENABle 2012

SBUS<sb>:SENT:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 814

SBUS<sb>:SENT:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 814

SBUS<sb>:SENT:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 814

SBUS<sb>:SENT:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 814

SBUS<sb>:SENT:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:SENT:FILTer:FRENable? <Enabler>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on SENT frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 815

SBUS<sb>:SENT:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SENT:FILTer:BIT? <Bit>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 815

SBUS<sb>:SENT:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:SENT:FILTer:DMAX? <Data>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 815

SBUS<sb>:SENT:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:SENT:FILTer:DMIN? <Data>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 815

SBUS<sb>:SENT:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SENT:FILTer:DOPerator? <Operator>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 815

SBUS<sb>:SENT:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:SENT:FILTer:FIENable? <Enabler>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> 1 to 4, index of the serial bus

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 815

SBUS<sb>:SENT:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:SENT:FILTer:IMAX? <Data>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 815

SBUS<sb>:SENT:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:SENT:FILTer:IMIN? <Data>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 815

SBUS<sb>:SENT:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SENT:FILTer:IOPerator? <Operator>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 815

SBUS<sb>:SENT:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:SENT:FILTer:ERENable? <Enabler>
SBUS<sb>:SENT:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 816

18.18.15.3 Format

This section describes the commands to specify and query frame formats for the "D-PHY" protocol.

SBUS<sb>:SENT:FORMat:SELect....2013
SBUS<sb>:SENT:FORMat:ADDFrame....2013
SBUS<sb>:SENT:FORMat:LOAD....2014
SBUS<sb>:SENT:FORMat:SAVE....2014
SBUS<sb>:SENT:FORMat:CLR....2014
SBUS<sb>:SENT:FORMat:FCOunt?....2014

SBUS<sb>:SENT:FORMat:FRAMe<fr>:ADDField....2015
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLDCount?....2015
SBUS<sb>:SENT:FORMat:FRAMe<fr>:NAME....2015
SBUS<sb>:SENT:FORMat:FRAMe<fr>:COLor....2015
SBUS<sb>:SENT:FORMat:FRAMe<fr>:TYPE....2016
SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENCheck....2016
SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENValue....2016
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Field....2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Field....2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Field....2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Value....2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Value....2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Value....2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:NAME....2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:COLor....2018
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2018
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2018
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2019
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2019
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2020
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2020
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2021
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2021
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2021
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARA....2022
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARB....2022

SBUS<sb>:SENT:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 817

SBUS<sb>:SENT:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 817

SBUS<sb>:SENT:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 818

SBUS<sb>:SENT:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 818

SBUS<sb>:SENT:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 818

SBUS<sb>:SENT:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 818

SBUS<sb>:SENT:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 819

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 818

SBUS<sb>:SENT:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 818

SBUS<sb>:SENT:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 818

SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 818

SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 818

SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 819

SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 819

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 820

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 820

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 820

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 820

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 820

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 820

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 821

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 821

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 821

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 821

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 822

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 822

18.18.15.4 Software trigger

There are two commands for each parameter, that you can use for defining the SENT settings.

For example, to set the *Frame type =TransmissionSequence > Field =Data >01100* value you can use one of the following commands:

- `TRIGger:SBSW:SENT:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:SENT:DMIN "TransmissionSequence", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:SENT:CHKall 2023
TRIGger:SBSW:SENT:CLR 2023
TRIGger:SBSW:SENT:INVert 2023

TRIGger:SBSW:SENT:RST....2024
TRIGger:SBSW:SENT:FRAMe<fr>:ENABle....2024
TRIGger:SBSW:SENT:FRENable....2024
TRIGger:SBSW:SENT:BIT....2024
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:BIT....2024
TRIGger:SBSW:SENT:FIENable....2024
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:ENABle....2024
TRIGger:SBSW:SENT:DMAX....2025
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMAX....2025
TRIGger:SBSW:SENT:DMIN....2025
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMIN....2025
TRIGger:SBSW:SENT:DOPerator....2025
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator....2025
TRIGger:SBSW:SENT:IMAX....2026
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMAX....2026
TRIGger:SBSW:SENT:IMIN....2026
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMIN....2026
TRIGger:SBSW:SENT:IOPerator....2027
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator....2027
TRIGger:SBSW:SENT:ERENable....2027
TRIGger:SBSW:SENT:ERRor<m>:ENABle....2027
SBUS<sb>:SENT:SWTindex?....2027
SBUS<sb>:SENT:SWTTime?....2028

TRIGger:SBSW:SENT:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 823

TRIGger:SBSW:SENT:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 823

TRIGger:SBSW:SENT:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 823

TRIGger:SBSW:SENT:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 823

TRIGger:SBSW:SENT:FRAMe<fr>:ENABle <Enable>
TRIGger:SBSW:SENT:FRENable <Frame>,<Enabler>
TRIGger:SBSW:SENT:FRENable? <Enabler>

rcset

Setting parameters:
<Frame>

Parameters for setting and query:
<Enabler> OFF | ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 823

TRIGger:SBSW:SENT:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:SENT:BIT? <Bit>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 824

TRIGger:SBSW:SENT:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:SENT:FIENable? <Enabler>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 824

TRIGger:SBSW:SENT:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SENT:DMAX? <Data>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 824

TRIGger:SBSW:SENT:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SENT:DMIN? <Data>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 824

TRIGger:SBSW:SENT:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SENT:DOPerator? <Operator>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 824

TRIGger:SBSW:SENT:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SENT:IMAX? <Data>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 824

TRIGger:SBSW:SENT:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SENT:IMIN? <Data>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 824

TRIGger:SBSW:SENT:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SENT:IOPerator? <Operator>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 824

TRIGger:SBSW:SENT:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:SENT:ERENable? <Enabler>
TRIGger:SBSW:SENT:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 825

SBUS<sb>:SENT:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.15.5 Decode results

SBUS<sb>:SENT:FCOunt? 2028
SBUS<sb>:SENT:FRAMe<fr>:BITRate? 2029
SBUS<sb>:SENT:FRAMe<fr>:CSValue? 2029
SBUS<sb>:SENT:FRAMe<fr>:DATA? 2029
SBUS<sb>:SENT:FRAMe<fr>:FDValues? 2030
SBUS<sb>:SENT:FRAMe<fr>:FSCom? 2030
SBUS<sb>:SENT:FRAMe<fr>:FSDTa? 2030
SBUS<sb>:SENT:FRAMe<fr>:IDTYpe? 2030
SBUS<sb>:SENT:FRAMe<fr>:IDValue? 2031
SBUS<sb>:SENT:FRAMe<fr>:MTPDuration? 2031
SBUS<sb>:SENT:FRAMe<fr>:FLDCount? 2031
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:STATe? 2032
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:VALue? 2032
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:FVALue? 2032
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:LABel? 2033
SBUS<sb>:SENT:FRAMe<fr>:PAPTicks? 2033
SBUS<sb>:SENT:FRAMe<fr>:SCOM? 2033
SBUS<sb>:SENT:FRAMe<fr>:SDATa? 2034
SBUS<sb>:SENT:FRAMe<fr>:SENSor? 2034
SBUS<sb>:SENT:FRAMe<fr>:STARt? 2034
SBUS<sb>:SENT:FRAMe<fr>:STATus? 2035
SBUS<sb>:SENT:FRAMe<fr>:STOP? 2035
SBUS<sb>:SENT:FRAMe<fr>:SYMBol? 2036
SBUS<sb>:SENT:FRAMe<fr>:SYNCduration? 2036
SBUS<sb>:SENT:FRAMe<fr>:TYPE? 2036

SBUS<sb>:SENT:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:BITRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:CSValue?

Returns the CRC sequence value of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ChecksumValue> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:DATA?

Returns the data of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<data> Comma-separated sequence of integer values (N, D1, D2,…, DN). N is the number of nibbles in the frame, and D1…DN are the values of the nibbles.

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FDValues?

Returns the formatted data values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedDatVals>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FSCom?

Retruns the formatted status communication.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedStatusComm>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FSDTa?

Returns the formatted symbolic data values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedSymbDat>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:IDTYpe?

Returns the identifier type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdentifierType> B4 | B8

B4: standard format, 4 bit
B8: extended format, 8 bit

*RST: B4

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdtfVal> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:MTPDuration?

Returns the duration of the main trigger pulse (MTP), which is an additional pulse added to the frame when running in "Short PWM Code" (SPC) mode. Withpulse width modulationn (PWM), you can connect multiple sensors to the bus. The duration of the MTP defines, which sensor starts the transmission.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<MTPDuration> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | SYNC | PULSe | CRC | LENGth | FORM | PAUSe | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:PAPTicks?

Returns the number of the pulse pause clock ticks.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PausePlsTicks> Range: 12 to 768
Increment: 1
*RST: 12

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SCOM?

Returns the value of the status/communication pulse.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmStatusComm> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SDATa?

Returns the symbolic data of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SymbolicData>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SENSor?

Returns the sensor resposne time.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SensRespTime> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | SYNC | PULSe | CRC | LENGth | FORM | PAUSe | INComplete

OK: the frame is valid.
SYNC: Synchronization error occurred.
PULse: Pulse error occurred.
CRC: Cyclic redundancy check failed.
LENGth: Irregular frame length error occurred.
FORM: Format error occurred.
INComplete: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SymbolicName>

Example: `BUS:SENT:FRAMe:SYMBol?`
Response: `Air Temperature`

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SYNCduration?

Returns the time of the synchronization pulse.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameSyncTime> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:TYPE?

Returns the type of SENT message.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> TRSQ | SMSG | ESSM | ELSM | PAUSe | UNKNown

`TRSQ`: transmission sequence
`SMSG`: short serial message
`ESSM`: enhanced 12 bit message
`ELSM`: enhanced 16 bit message

*RST: TRSQ

Usage: Query only
Asynchronous command

18.18.16 ARINC 429 (option R&S MXO5-K530)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2037
- Filter....2041
- Format....2045
- Software trigger....2055
- Decode results....2060

18.18.16.1 Configuration

SBUS<sb>:ARINc:BRMode....2037
SBUS<sb>:ARINc:BRValue....2037
SBUS<sb>:ARINc:POLarity....2038
SBUS<sb>:ARINc:SOURce....2038
SBUS<sb>:ARINc:THReshold:HIGH....2038
SBUS<sb>:ARINc:THReshold:HYSTeresis....2039
SBUS<sb>:ARINc:THReshold:LOW....2039
SBUS<sb>:ARINc:MAXGap:BITS....2039
SBUS<sb>:ARINc:MAXGap:SELect....2039
SBUS<sb>:ARINc:MINGap:BITS....2040
SBUS<sb>:ARINc:MINGap:SELect....2040
SBUS<sb>:ARINc:POSition....2040
SBUS<sb>:ARINc:SCALe....2041

SBUS<sb>:ARINc:BRMode <BitRateMode>

Sets the bit rate mode to high or low speed. You can set an exact bitrate value with `SBUS<sb>:ARINc:BRValue`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitRateMode> HIGH | LOW
*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Bit rate mode, Bit rate" on page 830

SBUS<sb>:ARINc:BRValue <BitRateValue>

Sets the number of transmitted bits per second.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

<BitRateValue> Range: 10000 to 110000
Increment: 100
*RST: 100000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate mode, Bit rate" on page 830

SBUS<sb>:ARINc:POLarity <Polarity>

Selects the wire on which the bus signal is measured : A Leg or B Leg. The setting affects the digitization of the signal.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<Polarity> ALEG | BLEG
*RST: ALEG

Usage: Asynchronous command

Manual operation: See "Polarity" on page 830

SBUS<sb>:ARINc:SOURce Source

Sets the channel for the signal source.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 830

SBUS<sb>:ARINc:THReshold:HIGH <Upper threshold>

Sets the upper threshold level of the signal.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<Upper threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 831

SBUS<sb>:ARINc:THReshold:HYSTeresis <Hysteresis>

Sets a hysteresis value.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 831

SBUS<sb>:ARINc:THReshold:LOW <Lower threshold>

Sets the lower threshold level of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Lower threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 831

SBUS<sb>:ARINc:MAXGap:BITS <MaxGapBits>

Sets the value for the maximum gap between two words.

See also: `SBUS<sb>:ARINc:MAXGap:SELect` on page 2039.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MaxGapBits>
Range: 0 to 1000
Increment: 1
*RST: 100
Default unit: bit

Usage: Asynchronous command

Manual operation: See "Min gap time,Max gap time" on page 830

SBUS<sb>:ARINc:MAXGap:SELect <MaxGapSelect>

Enables the detection of the maximum gap time during decoding.

You can specify the maximum gap time with `SBUS<sb>:ARINc:MAXGap:BITS`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MaxGapSelect> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Min gap time,Max gap time" on page 830

SBUS<sb>:ARINc:MINGap:BITS <MinGapBits>

Sets a value for the minimum timing gap between two words.

See also: `SBUS<sb>:ARINc:MINGap:SELect`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MinGapBits> Range: 0 to 100
Increment: 1
*RST: 4
Default unit: bit

Usage: Asynchronous command

Manual operation: See "Min gap time,Max gap time" on page 830

SBUS<sb>:ARINc:MINGap:SELect <MinGapSelect>

Enables the detection of the minimum idle time between two words during decoding.

To specify the minimum gap, use `SBUS<sb>:ARINc:MINGap:BITS`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MinGapSelect> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Min gap time,Max gap time" on page 830

SBUS<sb>:ARINc:POSition <Position>

Sets the vertical position of the ARINC signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:ARINc:SCALe <Scale>

Set the vertical scale of the indicated ARINC signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.16.2 Filter

There are two commands for each parameter, that you can use for defining the ARINC 429 settings.

For example, to set the *Frame type =ARINC429-Word* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:ARINC:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:ARINC:FILTer:DMIN "ARINC429-Word", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:ARINc:FILTer:CHKall 2041
SBUS<sb>:ARINc:FILTer:CLR 2042
SBUS<sb>:ARINc:FILTer:INVert 2042
SBUS<sb>:ARINc:FILTer:RST 2042
SBUS<sb>:ARINc:FILTer:BIT 2042
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT 2042
SBUS<sb>:ARINc:FILTer:ERENable 2043
SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABle 2043
SBUS<sb>:ARINc:FILTer:DMAX 2043
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2043
SBUS<sb>:ARINc:FILTer:DMIN 2044
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2044
SBUS<sb>:ARINc:FILTer:DOPerator 2044
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2044
SBUS<sb>:ARINc:FILTer:FIENable 2044
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2044
SBUS<sb>:ARINc:FILTer:FRENable 2045
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle 2045

SBUS<sb>:ARINc:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 833

SBUS<sb>:ARINc:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 833

SBUS<sb>:ARINc:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 833

SBUS<sb>:ARINc:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 833

SBUS<sb>:ARINc:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:ARINc:FILTer:BIT? <Bit>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 833

SBUS<sb>:ARINc:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:ARINc:FILTer:ERENable? <Enabler>
SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 834

SBUS<sb>:ARINc:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:ARINc:FILTer:DMAX? <Data>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 833

SBUS<sb>:ARINc:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:ARINc:FILTer:DMIN? <Data>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 833

SBUS<sb>:ARINc:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:ARINc:FILTer:DOPerator? <Operator>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 833

SBUS<sb>:ARINc:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:ARINc:FILTer:FIENable? <Enabler>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 833

SBUS<sb>:ARINc:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:ARINc:FILTer:FRENable? <Enabler>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on ARINC 429 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 833

18.18.16.3 Format

This section describes the commands to specify and query frame formats for the "ARINC 429" protocol.

SBUS<sb>:ARINc:FORMat:SELect ... 2046
SBUS<sb>:ARINc:FORMat:ADDFrame ... 2046
SBUS<sb>:ARINc:FORMat:LOAD ... 2046
SBUS<sb>:ARINc:FORMat:SAVE ... 2047
SBUS<sb>:ARINc:FORMat:CLR ... 2047
SBUS<sb>:ARINc:FORMat:FCOunt? ... 2047
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ADDField ... 2047
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLDCount? ... 2048
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:NAME ... 2048
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:COLor ... 2048
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:TYPE ... 2048
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENCheck ... 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENValue ... 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Field ... 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Field ... 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Field ... 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Value ... 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Value ... 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Value ... 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2050

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:COLor 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 2051
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITCount 2051
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:REPetition 2051
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITorder 2052
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat 2052
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 2053
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 2053
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 2054
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:UNIT 2054
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARA 2055
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARB 2055

SBUS<sb>:ARINc:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 835

SBUS<sb>:ARINc:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 835

SBUS<sb>:ARINc:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 836

SBUS<sb>:ARINc:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 836

SBUS<sb>:ARINc:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 836

SBUS<sb>:ARINc:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 836

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 838

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 837

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 837

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 837

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 837

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 837

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 837

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 837

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 838

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 838

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 838

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 839

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 839

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 839

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 839

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 840

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 840

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 840

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 840

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 840

18.18.16.4 Software trigger

There are two commands for each parameter, that you can use for defining the ARINC 429 settings.

For example, to set the *Frame type =ARINC429-Word* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:ARINc:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:ARINc:DMIN "ARINC429-Word", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:ARINc:CHKall 2056
TRIGger:SBSW:ARINc:CLR 2056
TRIGger:SBSW:ARINc:INVert 2056
TRIGger:SBSW:ARINc:RST 2056
TRIGger:SBSW:ARINc:FRENable 2056
TRIGger:SBSW:ARINc:FRAMe<fr>:ENABle 2056
TRIGger:SBSW:ARINc:BIT 2057
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:BIT 2057
TRIGger:SBSW:ARINc:DMAX 2057
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMAX 2057
TRIGger:SBSW:ARINc:DMIN 2057
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMIN 2057
TRIGger:SBSW:ARINc:DOPerator 2058
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator 2058
TRIGger:SBSW:ARINc:FIENable 2058

TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:ENABle....2058
TRIGger:SBSW:ARINc:ERENable....2059
TRIGger:SBSW:ARINc:ERRor<m>:ENABle....2059
SBUS<sb>:ARINc:SWTindex?....2059
SBUS<sb>:ARINc:SWTTime?....2059

TRIGger:SBSW:ARINc:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 842

TRIGger:SBSW:ARINc:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 842

TRIGger:SBSW:ARINc:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 842

TRIGger:SBSW:ARINc:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 842

TRIGger:SBSW:ARINc:FRENable <Frame>,<Enabler>
TRIGger:SBSW:ARINc:FRENable? <Enabler>
TRIGger:SBSW:ARINc:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 842

TRIGger:SBSW:ARINc:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:ARINc:BIT? <Bit>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 842

TRIGger:SBSW:ARINc:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:ARINc:DMAX? <Data>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 842

TRIGger:SBSW:ARINc:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:ARINc:DMIN? <Data>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 842

TRIGger:SBSW:ARINc:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:ARINc:DOPerator? <Operator>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 842

TRIGger:SBSW:ARINc:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:ARINc:FIENable? <Enabler>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 842

TRIGger:SBSW:ARINc:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:ARINc:ERENable? <Enabler>
TRIGger:SBSW:ARINc:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 843

SBUS<sb>:ARINc:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.16.5 Decode results

This section describes the commands to query the results of the decoding.

SBUS<sb>:ARINc:WCOunt? 2060
SBUS<sb>:ARINc:WORD<w>:FLDCount? 2060
SBUS<sb>:ARINc:WORD<w>:BITRate? 2060
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:STATe? 2061
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:LABel? 2061
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:VALue? 2062
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:FVALue? 2062
SBUS<sb>:ARINc:WORD<w>:DATA? 2062
SBUS<sb>:ARINc:WORD<w>:LABel? 2063
SBUS<sb>:ARINc:WORD<w>:PATTern? 2063
SBUS<sb>:ARINc:WORD<w>:SDI? 2063
SBUS<sb>:ARINc:WORD<w>:SSM? 2064
SBUS<sb>:ARINc:WORD<w>:STARt? 2064
SBUS<sb>:ARINc:WORD<w>:STATe? 2064
SBUS<sb>:ARINc:WORD<w>:STOP? 2065
SBUS<sb>:ARINc:WORD<w>:SYMBol? 2065

SBUS<sb>:ARINc:WCOunt?

Returns the number of decoded words.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLDCount?

Returns the number of fields available in the seleced word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:BITRate?

Returns the bit rate of the word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:
<State> OK | CODE | GAP | PAR | INC | UNKN
CODE: coding error occured.
GAP: timing gap error occured.
PAR: parity error occured.
INComplete: the sequence is not completely contained in the acquisition
UNKNown: unknown frame type
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLD<fl>:LABel?

Returns the label of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLD<fl>:VALue?

Returns the value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:DATA?

Returns the data of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameData> Range: 0 to 524287
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:LABel?

Returns the label of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameLabel> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:PATTern?

Returns all 32 bits of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrmDatPatt> List of comma separated values.

Example:
```
SBUS1:ARINc:WORD1:PATTern?
#H04,#H10,#H04
```

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:SDI?

Returns the source/destination identifier (SDI) bits of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<SDI> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:SSM?

Returns the sign/status matrix (SSM) bits of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<SSM> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:STARt?

Returns the start time of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:STATe?

Returns the overall state of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameState> OK | CODE | GAP | PAR | INC | UNKN

CODE: coding error occured.
GAP: timing gap error occured.
PAR: parity error occured.
INComplete: the sequence is not completely contained in the acquisition

UNKNown: unknown frame type

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:STOP?

Returns the end time of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:SYMBol?

Returns the label name of the word ID.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<Translation>

Usage: Query only
Asynchronous command

18.18.17 MIL-1553 (option R&S MXO5-K530)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2066
- Filter....2068
- Format....2073
- Software trigger....2083
- Decode results....2089

18.18.17.1 Configuration

SBUS<sb>:MILStd:POLarity....2066
SBUS<sb>:MILStd:SOURce....2066
SBUS<sb>:MILStd:THReshold:HIGH....2066
SBUS<sb>:MILStd:THReshold:HYSTeresis....2067
SBUS<sb>:MILStd:THReshold:LOW....2067
SBUS<sb>:MILStd:POSition....2067
SBUS<sb>:MILStd:SCALe....2067

SBUS<sb>:MILStd:POLarity <Polarity>

Sets the wire on which the bus signal is measured : normal or inverted. The setting affects the digitization of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> NORMal | INVerted
*RST: NORMal

Usage: Asynchronous command

Manual operation: See "Polarity" on page 865

SBUS<sb>:MILStd:SOURce Source

Sets the channel for the signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 865

SBUS<sb>:MILStd:THReshold:HIGH <Threshold high>

Sets the lower threshold level of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold high>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 866

SBUS<sb>:MILStd:THReshold:HYSTeresis <Hysteresis>

Sets a hysteresis value.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 866

SBUS<sb>:MILStd:THReshold:LOW <Threshold low>

Sets the lower threshold level of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold low>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 866

SBUS<sb>:MILStd:POSition <Position>

Sets the vertical position of the MIL-1553 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:MILStd:SCALe <Scale>

Set the vertical scale of the indicated MIL-1553 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.17.2 Filter

There are two commands for each parameter that you can use for defining the MIL-1553 settings.

For example, to set the *Frame type =Command > Field =Info >01100* value you can use one of the following commands:

- `SBUS:MIL:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:MIL:FILTer:DMIN "Command", "Info", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:MILStd:FILTer:CHKall 2068
SBUS<sb>:MILStd:FILTer:CLR 2069
SBUS<sb>:MILStd:FILTer:INVert 2069
SBUS<sb>:MILStd:FILTer:RST 2069
SBUS<sb>:MILStd:FILTer:BIT 2069
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:BIT 2069
SBUS<sb>:MILStd:FILTer:ERENable 2070
SBUS<sb>:MILStd:FILTer:ERRor<n>:ENABle 2070
SBUS<sb>:MILStd:FILTer:DMAX 2070
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2070
SBUS<sb>:MILStd:FILTer:DMIN 2070
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2070
SBUS<sb>:MILStd:FILTer:DOPerator 2071
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2071
SBUS<sb>:MILStd:FILTer:IMAX 2071
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2071
SBUS<sb>:MILStd:FILTer:IMIN 2072
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2072
SBUS<sb>:MILStd:FILTer:IOPerator 2072
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2072
SBUS<sb>:MILStd:FILTer:FRENable 2072
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:ENABle 2072
SBUS<sb>:MILStd:FILTer:FIENable 2073
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2073

SBUS<sb>:MILStd:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 867

SBUS<sb>:MILStd:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 867

SBUS<sb>:MILStd:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 867

SBUS<sb>:MILStd:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 867

SBUS<sb>:MILStd:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:MILStd:FILTer:BIT? <Bit>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 868

SBUS<sb>:MILStd:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:MILStd:FILTer:ERENable? <Enabler>
SBUS<sb>:MILStd:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 869

SBUS<sb>:MILStd:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:MILStd:FILTer:DMAX? <Data>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 868

SBUS<sb>:MILStd:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:MILStd:FILTer:DMIN? <Data>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 868

SBUS<sb>:MILStd:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:MILStd:FILTer:DOPerator? <Operator>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 868

SBUS<sb>:MILStd:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:MILStd:FILTer:IMAX? <Data>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 868

SBUS<sb>:MILStd:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:MILStd:FILTer:IMIN? <Data>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 868

SBUS<sb>:MILStd:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:MILStd:FILTer:IOPerator? <Operator>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 868

SBUS<sb>:MILStd:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:MILStd:FILTer:FRENable? <Enabler>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on MIL-1553 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 868

SBUS<sb>:MILStd:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:MILStd:FILTer:FIENable? <Enabler>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 868

18.18.17.3 Format

This section describes the commands to specify and query frame formats for the "MIL-153" protocol.

SBUS<sb>:MILStd:FORMat:SELect....2074
SBUS<sb>:MILStd:FORMat:ADDFrame....2074
SBUS<sb>:MILStd:FORMat:LOAD....2074
SBUS<sb>:MILStd:FORMat:SAVE....2075
SBUS<sb>:MILStd:FORMat:CLR....2075
SBUS<sb>:MILStd:FORMat:FCOunt?....2075
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ADDField....2075
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLDCount?....2076
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:NAME....2076
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:COLor....2076
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:TYPE....2077
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENCheck....2077
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENValue....2077
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Field....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Field....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Field....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Value....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Value....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Value....2078

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:NAME....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:COLor....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2079
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2079
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2080
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2080
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2080
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2081
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2082
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2082
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2082
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARA....2083
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARB....2083

SBUS<sb>:MILStd:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 870

SBUS<sb>:MILStd:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 870

SBUS<sb>:MILStd:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 871

SBUS<sb>:MILStd:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 871

SBUS<sb>:MILStd:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 871

SBUS<sb>:MILStd:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 871

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 872

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 871

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 871

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 871

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 871

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 871

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 872

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 872

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 873

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 873

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 873

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 873

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 873

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 873

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 874

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 874

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 874

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 874

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 875

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 875

18.18.17.4 Software trigger

There are two commands for each parameter that you can use for defining the MIL-1553 settings.

For example, to set the *Frame type =Command > Field =Info >01100* value you can use one of the following commands:

- `TRIGger:SBSW:MIL:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:MIL:DMIN "Command", "Info", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:MILStd:CHKall 2084
TRIGger:SBSW:MILStd:CLR 2084
TRIGger:SBSW:MILStd:INVert 2084
TRIGger:SBSW:MILStd:RST 2084
TRIGger:SBSW:MILStd:FRENable 2085
TRIGger:SBSW:MILStd:FRAMe<fr>:ENABle 2085
TRIGger:SBSW:MILStd:BIT 2085
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:BIT 2085

TRIGger:SBSW:MILStd:DMAX....2085
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMAX....2085
TRIGger:SBSW:MILStd:DMIN....2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMIN....2086
TRIGger:SBSW:MILStd:DOPerator....2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator....2086
TRIGger:SBSW:MILStd:FIENable....2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:ENABle....2086
TRIGger:SBSW:MILStd:IMAX....2087
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMAX....2087
TRIGger:SBSW:MILStd:IMIN....2087
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMIN....2087
TRIGger:SBSW:MILStd:IOPerator....2088
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator....2088
TRIGger:SBSW:MILStd:ERENable....2088
TRIGger:SBSW:MILStd:ERRor<m>:ENABle....2088
SBUS<sb>:MILStd:SWTindex?....2088
SBUS<sb>:MILStd:SWTTime?....2089

TRIGger:SBSW:MILStd:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 876

TRIGger:SBSW:MILStd:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 876

TRIGger:SBSW:MILStd:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 876

TRIGger:SBSW:MILStd:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 876

TRIGger:SBSW:MILStd:FRENable <Frame>,<Enabler>
TRIGger:SBSW:MILStd:FRENable? <Enabler>
TRIGger:SBSW:MILStd:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 876

TRIGger:SBSW:MILStd:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:MILStd:BIT? <Bit>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 877

TRIGger:SBSW:MILStd:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:MILStd:DMAX? <Data>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 877

TRIGger:SBSW:MILStd:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:MILStd:DMIN? <Data>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 877

TRIGger:SBSW:MILStd:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:MILStd:DOPerator? <Operator>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 877

TRIGger:SBSW:MILStd:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:MILStd:FIENable? <Enabler>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 877

TRIGger:SBSW:MILStd:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:MILStd:IMAX? <Data>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 877

TRIGger:SBSW:MILStd:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:MILStd:IMIN? <Data>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> *

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 877

TRIGger:SBSW:MILStd:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:MILStd:IOPerator? <Operator>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 877

TRIGger:SBSW:MILStd:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:MILStd:ERENable? <Enabler>
TRIGger:SBSW:MILStd:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 878

SBUS<sb>:MILStd:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.17.5 Decode results

SBUS<sb>:MILStd:WCOunt? 2089
SBUS<sb>:MILStd:WORD<w>:FLDCount? 2089
SBUS<sb>:MILStd:WORD<w>:BITRate? 2090
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:STATe? 2090
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:LABel? 2091
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:VALue? 2091
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:FVALue? 2091
SBUS<sb>:MILStd:WORD<w>:DATA? 2092
SBUS<sb>:MILStd:WORD<w>:INFO? 2092
SBUS<sb>:MILStd:WORD<w>:RTADdress? 2092
SBUS<sb>:MILStd:WORD<w>:STARt? 2093
SBUS<sb>:MILStd:WORD<w>:STATus? 2093
SBUS<sb>:MILStd:WORD<w>:STOP? 2093
SBUS<sb>:MILStd:WORD<w>:SYMBol? 2094
SBUS<sb>:MILStd:WORD<w>:TYPE? 2094

SBUS<sb>:MILStd:WCOunt?

Returns the number of decoded words.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of words.

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLDCount?

Returns the number of fields available in the seleced word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:BITRate?

Returns the bit rate of the word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:
<State> OK | SYNC | MANC | PAR | GAP | RT | INComplete | UNKNown
`OK`: the word is valid.
`SYNC`: synchronization error occured.
`MANC`: manchester coding error occured.
`PAR`: parity error occured.
`GAP`: timing gap error occured.
`RT`: remote terminal error occured.
`INComplete`: the sequence is not completely contained in the acquisition
`UNKNown`: unknown frame type
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLD<fl>:LABel?

Returns the label of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLD<fl>:VALue?

Returns the value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:DATA?

Return the data pattern of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrmDatPatt> List of comma separated values.

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:INFO?

Returns the info value for the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameInfo> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:RTADdress?

Returns the RT address for the selected word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameRta> Range: 0 to 31
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:STARt?

Return the start time of the selected word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:STATus?

Returns the overall state of the selected word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameState> OK | SYNC | MANC | PAR | GAP | RT | INComplete | UNKNown

`OK`: the word is valid.
`SYNC`: synchronization error occured.
`MANC`: manchester coding error occured.
`PAR`: parity error occured.
`GAP`: timing gap error occured.
`RT`: remote terminal error occured.
`INComplete`: the sequence is not completely contained in the acquisition
`UNKNown`: unknown frame type

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:STOP?

Returns the stop time of the selected word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:SYMBol?

Returns the symbolic label of the specified word if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<SymbolicName>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:TYPE?

Returns the type of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameType> UNKNown | DATA | CMD | STAT | CMST | IM

`CMD`: command word
`CMST`: command/status word
`IM`: inter message. Shows if there are gap errors or response timeout.

*RST: DATA

Usage: Query only
Asynchronous command

18.18.18 SpaceWire (option R&S MXO5-K530)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2095
- Filter....2097
- Format....2102
- Software trigger....2111
- Decode results....2116

18.18.18.1 Configuration

SBUS<sb>:SWIRe:DATA:SOURce....2095
SBUS<sb>:SWIRe:STRBe:SOURce....2095
SBUS<sb>:SWIRe:DATA:THReshold....2096
SBUS<sb>:SWIRe:DATA:HYSTeresis....2096
SBUS<sb>:SWIRe:STRBe:THReshold....2096
SBUS<sb>:SWIRe:STRBe:HYSTeresis....2096
SBUS<sb>:SWIRe:MINGap....2097
SBUS<sb>:SWIRe:MGAP....2097
SBUS<sb>:SWIRe:POSition....2097
SBUS<sb>:SWIRe:SCALe....2097

SBUS<sb>:SWIRe:DATA:SOURce Source

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data Source" on page 847

SBUS<sb>:SWIRe:STRBe:SOURce <StrobeSource>

Selects the source for the strobe signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<StrobeSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Strobe Source" on page 847

SBUS<sb>:SWIRe:DATA:THReshold <DataThreshold>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataThreshold>

Usage: Asynchronous command

Manual operation: See "Thresholds" on page 848

SBUS<sb>:SWIRe:DATA:HYSTeresis <DataHysteresis>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataHysteresis>

Usage: Asynchronous command

Manual operation: See "Thresholds" on page 848

SBUS<sb>:SWIRe:STRBe:THReshold <StrobeThres>

Sets the threshold value for the digitization of the strobe signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<StrobeThres>

Usage: Asynchronous command

Manual operation: See "Thresholds" on page 848

SBUS<sb>:SWIRe:STRBe:HYSTeresis <StrobeHyst>

Sets a value for the hysteresis of the strobe signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<StrobeHyst>

Usage: Asynchronous command

Manual operation: See "Thresholds" on page 848

SBUS<sb>:SWIRe:MINGap <MinGapTime>
SBUS<sb>:SWIRe:MGAP <MinGapTime>

Sets the minimum duration of a gap. Any inactivity greater than this time is interpreted as a gap and leads to a resynchronization to the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MinGapTime>
Range: 1E-09 to 1
Increment: 1E-09
*RST: 2E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Min Gap" on page 848

SBUS<sb>:SWIRe:POSition <Position>

Sets the vertical position of the SpaceWire signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:SWIRe:SCALe <Scale>

Sets the vertical scale of the SpaceWire signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.18.2 Filter

There are two commands for each parameter, that you can use for defining the SpaceWire settings.

For example, to set the *Frame type =SpaceWire-Frame > Field =Data >Data* value you can use one of the following commands:

- `SBUS:SWIRe:FILTer:FRAMe1:FLD1:DMIN 01100`

Defines the parameter by using the index <m> for the frame number and <n> for the field number.

- `SBUS:SWIRe:FILTer:DMIN "SpaceWire-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:SWIRe:FILTer:CHKall 2098
SBUS<sb>:SWIRe:FILTer:CLR 2098
SBUS<sb>:SWIRe:FILTer:INVert 2098
SBUS<sb>:SWIRe:FILTer:RST 2099
SBUS<sb>:SWIRe:FILTer:BIT 2099
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:BIT 2099
SBUS<sb>:SWIRe:FILTer:ERENable 2099
SBUS<sb>:SWIRe:FILTer:ERRor<n>:ENABle 2099
SBUS<sb>:SWIRe:FILTer:DMAX 2100
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2100
SBUS<sb>:SWIRe:FILTer:DMIN 2100
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2100
SBUS<sb>:SWIRe:FILTer:DOPerator 2100
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2100
SBUS<sb>:SWIRe:FILTer:FIENable 2101
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2101
SBUS<sb>:SWIRe:FILTer:FRENable 2101
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:ENABle 2101

SBUS<sb>:SWIRe:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 850

SBUS<sb>:SWIRe:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 850

SBUS<sb>:SWIRe:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 850

SBUS<sb>:SWIRe:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 850

SBUS<sb>:SWIRe:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SWIRe:FILTer:BIT? <Bit>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 851

SBUS<sb>:SWIRe:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:SWIRe:FILTer:ERENable? <Enabler>
SBUS<sb>:SWIRe:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 852

SBUS<sb>:SWIRe:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:SWIRe:FILTer:DMAX? <Data>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 851

SBUS<sb>:SWIRe:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:SWIRe:FILTer:DMIN? <Data>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 851

SBUS<sb>:SWIRe:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SWIRe:FILTer:DOPerator? <Operator>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 851

SBUS<sb>:SWIRe:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:SWIRe:FILTer:FIENable? <Enabler>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 851

SBUS<sb>:SWIRe:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:SWIRe:FILTer:FRENable? <Enabler>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on SpaceWire frames. Only the frames that match the selected filter conditions are displayed.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 850

18.18.18.3 Format

This section describes the commands to specify and query frame formats for the "SpaceWire" protocol.

SBUS<sb>:SWIRe:FORMat:SELect....2102
SBUS<sb>:SWIRe:FORMat:ADDFrame....2103
SBUS<sb>:SWIRe:FORMat:LOAD....2103
SBUS<sb>:SWIRe:FORMat:SAVE....2103
SBUS<sb>:SWIRe:FORMat:CLR....2103
SBUS<sb>:SWIRe:FORMat:FCOunt?....2104
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ADDField....2104
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLDCount?....2104
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:NAME....2104
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:COLor....2105
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:TYPE....2105
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENCheck....2105
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENValue....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Field....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Field....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Field....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Value....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:NAME....2107
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:COLor....2107
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2107
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2108
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2108
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2108
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2109
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2109
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2110
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2110
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2111
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARA....2111
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARB....2111

SBUS<sb>:SWIRe:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 852

SBUS<sb>:SWIRe:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 852

SBUS<sb>:SWIRe:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 853

SBUS<sb>:SWIRe:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 853

SBUS<sb>:SWIRe:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 853

SBUS<sb>:SWIRe:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 853

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 855

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 854

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 854

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 854

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 854

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENCheckSBUS<sb>:USBone:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 854

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 854

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 855

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 855

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 855

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 856

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 856

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 856

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 856

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 857

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 857

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 857

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 857

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 857

18.18.18.4 Software trigger

There are two commands for each parameter, that you can use for defining the SpaceWire settings.

For example, to set the *Frame type =SpaceWire-Frame > Field =Data >Data* value you can use one of the following commands:

- `TRIGger:SBSW:SWIRe:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.
- `TRIGger:SBSW:SWIRe:DMIN "SpaceWire-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:SWIRe:CHKall....2112
TRIGger:SBSW:SWIRe:CLR....2112
TRIGger:SBSW:SWIRe:INVert....2112
TRIGger:SBSW:SWIRe:RST....2113
TRIGger:SBSW:SWIRe:FRENable....2113
TRIGger:SBSW:SWIRe:FRAMe<fr>:ENABle....2113
TRIGger:SBSW:SWIRe:BIT....2113
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:BIT....2113
TRIGger:SBSW:SWIRe:DMAX....2114
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMAX....2114
TRIGger:SBSW:SWIRe:DMIN....2114
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMIN....2114
TRIGger:SBSW:SWIRe:DOPerator....2114
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator....2114
TRIGger:SBSW:SWIRe:FIENable....2115
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:ENABle....2115
TRIGger:SBSW:SWIRe:ERENable....2115
TRIGger:SBSW:SWIRe:ERRor<m>:ENABle....2115
SBUS<sb>:SWIRe:SWTindex?....2115
SBUS<sb>:SWIRe:SWTTime?....2116

TRIGger:SBSW:SWIRe:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 859

TRIGger:SBSW:SWIRe:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 859

TRIGger:SBSW:SWIRe:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 859

TRIGger:SBSW:SWIRe:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 859

TRIGger:SBSW:SWIRe:FRENable <Frame>,<Enabler>
TRIGger:SBSW:SWIRe:FRENable? <Enabler>
TRIGger:SBSW:SWIRe:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 859

TRIGger:SBSW:SWIRe:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:SWIRe:BIT? <Bit>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 859

TRIGger:SBSW:SWIRe:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SWIRe:DMAX? <Data>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 859

TRIGger:SBSW:SWIRe:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SWIRe:DMIN? <Data>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 859

TRIGger:SBSW:SWIRe:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SWIRe:DOPerator? <Operator>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 859

TRIGger:SBSW:SWIRe:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:SWIRe:FIENable? <Enabler>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 859

TRIGger:SBSW:SWIRe:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:SWIRe:ERENable? <Enabler>
TRIGger:SBSW:SWIRe:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:

<m> index of the error

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 860

SBUS<sb>:SWIRe:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.18.5 Decode results

This section describes the commands to query the results of the decoding.

SBUS<sb>:SWIRe:FCOunt? 2116
SBUS<sb>:SWIRe:FRAMe<fr>:BITRate? 2117
SBUS<sb>:SWIRe:FRAMe<fr>:DATA? 2117
SBUS<sb>:SWIRe:FRAMe<fr>:CODParity? 2117
SBUS<sb>:SWIRe:FRAMe<fr>:DATParity? 2118
SBUS<sb>:SWIRe:FRAMe<fr>:ESCParity? 2119
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:STATus? 2119
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:TYPE? 2120
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:VALue? 2120
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:FVALue? 2120
SBUS<sb>:SWIRe:FRAMe<fr>:STATe? 2121
SBUS<sb>:SWIRe:FRAMe<fr>:STARt? 2121
SBUS<sb>:SWIRe:FRAMe<fr>:STOP? 2122
SBUS<sb>:SWIRe:FRAMe<fr>:TYPE? 2122

SBUS<sb>:SWIRe:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:BITRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:DATA?

Returns the data of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:CODParity?

If the frame has the `FCT`, `EOP`, `EEP` or `Code` field, the command returns the parity state of this field, which can take values of `OK` or `PARity`. For a description of these fields, see Section 14.16.1, "SpaceWire basics", on page 846.

If the frame has none of these fields, the command can return the states `LENGth`, `AMBiguous` or `INComplete` of the frame, as described below.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityCode> OK | PARity | LENGth | AMBiguous | INComplete

OK
The parity check for the field covered by this parity bit passes.

PARity
The parity of the field is not correct.

LENGth
Regardless of the field, the length of the frame is not as expected, indicating an error.

AMBiguous
Regardless of the field, the frame is ambiguous.

INComplete
Regardless of the field, the frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:DATParity?

If the frame has the `Data` field, the command returns the parity state of this field, which can take values of `OK` or `PARity`. The `Data` field only appears in `Data` and `Time` frames, see Figure 14-43 and Figure 14-45.

If the frame has no `Data` field, the command can return the states `LENGth`, `AMBiguous` or `INComplete` of the frame, as described below.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityData> OK | PARity | LENGth | AMBiguous | INComplete

OK
The parity check for the `Data` field passes.

PARity
The parity of the `Data` field is not correct.

LENGth
Regardless of the `Data` field, the length of the frame is not as expected, indicating an error

AMBiguous
Regardless of the `Data` field, the frame is ambiguous.

INComplete
Regardless of the `Data` field, the frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:ESCParity?

If the frame has the ESC field, the command returns the parity state of this field, which can take values of OK or PARity. See Figure 14-44.

If the frame has no ESC field, the command can return the states LENGth, AMBiguous or INComplete of the frame, as described below.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<ParityEscape> OK | PARity | LENGth | AMBiguous | INComplete

OK
The parity check for the ESC field passes.

PARity
The parity of the ESC field is not correct.

LENGth
Regardless of the ESC field, the length of the frame is not as expected, indicating an error.

AMBiguous
Regardless of the ESC field, the frame is ambiguous.

INComplete
Regardless of the ESC field, the frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:STATus?

Returns the overall state of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | PARity | LENGth | AMBiguous | INComplete

OK
The parity check for the selected field passes.

PARity
Parity is not as expected, indicating an error.

LENGth
The length of the field is not as expected, indicating an error.

AMBiguous
The frame is ambiguous.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:TYPE?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:STATe?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | PARity | LENGth | AMBiguous | INComplete

OK
The frame is valid.

PARity
Parity is not as expected, indicating an error

LENGth
Length of the frame is not as expected, indicating an error

AMBiguous
The frame is ambiguous.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameType> DATA | TCOD | FCT | NULL | EOP | EEP | BADX

DATA
Data frame

TCOD
Time-code frame

FCT
Flow control token

NULL
Null symbol

EOP
End of packet

EEP
Error end of packet

BADX
Illegal escape code

*RST: DATA

Usage: Query only
Asynchronous command

18.18.19 SPMI (option R&S MXO5-K550)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2123
- Filter....2127
- Format....2132
- Software trigger....2142
- Decode results....2148

18.18.19.1 Configuration

SBUS<sb>:SPMI:GSIDenable....2123
SBUS<sb>:SPMI:GIDValue....2123
SBUS<sb>:SPMI:GTCHenable....2124
SBUS<sb>:SPMI:GTWDith....2124
SBUS<sb>:SPMI:SCLK:HYSTeresis....2124
SBUS<sb>:SPMI:SCLK:SOURce....2125
SBUS<sb>:SPMI:SCLK:THReshold....2125
SBUS<sb>:SPMI:SDATa:HYSTeresis....2125
SBUS<sb>:SPMI:SDATa:SOURce....2125
SBUS<sb>:SPMI:SDATa:THReshold....2126
SBUS<sb>:SPMI:POSition....2126
SBUS<sb>:SPMI:SCALe....2126

SBUS<sb>:SPMI:GSIDenable <UseGSID>

Enables the use of the group sub ID (GSID). You can set the GSID with `SBUS<sb>:SPMI:GIDValue`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<UseGSID> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use GSID, GSID (hex)" on page 881

SBUS<sb>:SPMI:GIDValue <GSID>

Sets a value for the group sub index. Available, if `SBUS<sb>:SPMI:GSIDenable` is set to `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

<GSID> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Use GSID, GSID (hex)" on page 881

SBUS<sb>:SPMI:GTCHenable <UseGlitchFilter>

Enables the glitch filter. A glitch filter can help to filter out short-duration voltage spikes/ glitches that can occur on the communication line.

You can set the glitch filter width with `SBUS<sb>:SPMI:GTWDith`.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<UseGlitchFilter> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Glitch filter, Glitch width" on page 882

SBUS<sb>:SPMI:GTWDith <GlitchFilterWdt>

Sets the glitch width. Any signal transitions with a duration smaller than this value will be considered a glitch and filtered out.

This is available, if `SBUS<sb>:SPMI:GTCHenable` is set to `ON`.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<GlitchFilterWdt> Range: 1E-15 to 1000000000
Increment: 1E-10
*RST: 1E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Glitch filter, Glitch width" on page 882

SBUS<sb>:SPMI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the clock line.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 882

SBUS<sb>:SPMI:SCLK:SOURce <ClockSource>

Sets the source of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ClockSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK" on page 881

SBUS<sb>:SPMI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 882

SBUS<sb>:SPMI:SDATa:HYSTeresis <SDATA Hyst>

Sets a value for the hysteresis for the source data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDATA Hyst>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 882

SBUS<sb>:SPMI:SDATa:SOURce <DataSource>

Sets the source of the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SDATA" on page 881

SBUS<sb>:SPMI:SDATa:THReshold <SDATA Thres>

Sets a user-defined threshold value for the source data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDATA Thres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 882

SBUS<sb>:SPMI:POSition <SPMI position>

Sets the vertical position of the SPMI signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPMI position>

Usage: Asynchronous command

SBUS<sb>:SPMI:SCALe <SPMI scale>

Sets the vertical position of the SPMI signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPMI scale>

Usage: Asynchronous command

18.18.19.2 Filter

There are two commands for each parameter, that you can use for defining the SPMI settings.

For example, to set the *Frame type =Register 0 Write > Field =Data >00* value you can use one of the following commands:

- `SBUS:SPMI:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:SPMI:FILTer:DMIN "Register 0 Write", "Data", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:SPMI:FILTer:CHKall....2127
SBUS<sb>:SPMI:FILTer:CLR....2128
SBUS<sb>:SPMI:FILTer:INVert....2128
SBUS<sb>:SPMI:FILTer:RST....2128
SBUS<sb>:SPMI:FILTer:BIT....2128
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT....2128
SBUS<sb>:SPMI:FILTer:DMAX....2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2129
SBUS<sb>:SPMI:FILTer:DMIN....2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2129
SBUS<sb>:SPMI:FILTer:DOPerator....2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2129
SBUS<sb>:SPMI:FILTer:ERENable....2130
SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle....2130
SBUS<sb>:SPMI:FILTer:IOPerator....2130
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2130
SBUS<sb>:SPMI:FILTer:IMIN....2131
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2131
SBUS<sb>:SPMI:FILTer:IMAX....2131
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2131
SBUS<sb>:SPMI:FILTer:FRENable....2131
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle....2131
SBUS<sb>:SPMI:FILTer:FIENable....2132
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2132

SBUS<sb>:SPMI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 884

SBUS<sb>:SPMI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 884

SBUS<sb>:SPMI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 884

SBUS<sb>:SPMI:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 884

SBUS<sb>:SPMI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SPMI:FILTer:BIT? <Bit>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

SBUS<sb>:SPMI:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:SPMI:FILTer:DMAX? <Data>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

SBUS<sb>:SPMI:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:SPMI:FILTer:DMIN? <Data>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

SBUS<sb>:SPMI:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SPMI:FILTer:DOPerator? <Operator>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

SBUS<sb>:SPMI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:SPMI:FILTer:ERENable? <Enabler>
SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 886

SBUS<sb>:SPMI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SPMI:FILTer:IOPerator? <Operator>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe

*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

SBUS<sb>:SPMI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:SPMI:FILTer:IMIN? <Data>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

SBUS<sb>:SPMI:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:SPMI:FILTer:IMAX? <Data>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

SBUS<sb>:SPMI:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:SPMI:FILTer:FRENable? <Enabler>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on SPMI frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 885

SBUS<sb>:SPMI:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:SPMI:FILTer:FIENable? <Enabler>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

18.18.19.3 Format

This section describes the commands to specify and query frame formats for the "SPMI" protocol.

SBUS<sb>:SPMI:FORMat:SELect....2133
SBUS<sb>:SPMI:FORMat:ADDFrame....2133
SBUS<sb>:SPMI:FORMat:LOAD....2133
SBUS<sb>:SPMI:FORMat:SAVE....2134
SBUS<sb>:SPMI:FORMat:CLR....2134
SBUS<sb>:SPMI:FORMat:FCOunt?....2134
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ADDField....2134
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLDCount?....2135
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:NAME....2135
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:COLor....2135
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:TYPE....2136
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENCheck....2136
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENValue....2136
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Field....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Field....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Field....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Value....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Value....2137

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Value....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:NAME....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:COLor....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2138
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2138
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2139
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2139
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2139
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2140
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2141
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2141
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2141
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARA....2142
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARB....2142

SBUS<sb>:SPMI:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 886

SBUS<sb>:SPMI:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 886

SBUS<sb>:SPMI:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 887

SBUS<sb>:SPMI:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 887

SBUS<sb>:SPMI:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 887

SBUS<sb>:SPMI:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 887

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 889

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 888

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 888

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 888

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 888

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 888

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 888

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 888

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 889

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 889

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 889

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 890

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 890

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 890

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 890

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 891

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 891

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 891

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 891

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 891

18.18.19.4 Software trigger

There are two commands for each parameter, that you can use for defining the SPMI settings.

For example, to set the *Frame type =Register 0 Write > Field =Data >00* value you can use one of the following commands:

- `TRIGger:SBSW:SPMI:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:SPMI:DMIN "Register 0 Write", "Data", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:SPMI:CHKall....2143
TRIGger:SBSW:SPMI:CLR....2143
TRIGger:SBSW:SPMI:INVert....2143
TRIGger:SBSW:SPMI:RST....2143
TRIGger:SBSW:SPMI:FRENable....2144
TRIGger:SBSW:SPMI:FRAMe<fr>:ENABle....2144
TRIGger:SBSW:SPMI:BIT....2144
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:BIT....2144

TRIGger:SBSW:SPMI:DMAX 2144
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMAX 2144
TRIGger:SBSW:SPMI:DMIN 2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMIN 2145
TRIGger:SBSW:SPMI:DOPerator 2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator 2145
TRIGger:SBSW:SPMI:FIENable 2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:ENABle 2145
TRIGger:SBSW:SPMI:IMAX 2146
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMAX 2146
TRIGger:SBSW:SPMI:IMIN 2146
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMIN 2146
TRIGger:SBSW:SPMI:IOPerator 2147
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator 2147
TRIGger:SBSW:SPMI:ERENable 2147
TRIGger:SBSW:SPMI:ERRor<m>:ENABle 2147
SBUS<sb>:SPMI:SWTindex? 2147
SBUS<sb>:SPMI:SWTTime? 2148

TRIGger:SBSW:SPMI:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 897

TRIGger:SBSW:SPMI:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 897

TRIGger:SBSW:SPMI:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 897

TRIGger:SBSW:SPMI:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 897

TRIGger:SBSW:SPMI:FRENable <Frame>,<Enabler>
TRIGger:SBSW:SPMI:FRENable? <Enabler>
TRIGger:SBSW:SPMI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 898

TRIGger:SBSW:SPMI:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:SPMI:BIT? <Bit>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 898

TRIGger:SBSW:SPMI:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SPMI:DMAX? <Data>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 898

TRIGger:SBSW:SPMI:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SPMI:DMIN? <Data>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 898

TRIGger:SBSW:SPMI:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SPMI:DOPerator? <Operator>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 898

TRIGger:SBSW:SPMI:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:SPMI:FIENable? <Enabler>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 898

TRIGger:SBSW:SPMI:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SPMI:IMAX? <Data>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 898

TRIGger:SBSW:SPMI:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SPMI:IMIN? <Data>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 898

TRIGger:SBSW:SPMI:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SPMI:IOPerator? <Operator>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 898

TRIGger:SBSW:SPMI:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:SPMI:ERENable? <Enabler>
TRIGger:SBSW:SPMI:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 899

SBUS<sb>:SPMI:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.19.5 Decode results

SBUS<sb>:SPMI:FCOunt? 2148
SBUS<sb>:SPMI:FRAMe<fr>:ADDRess? 2149
SBUS<sb>:SPMI:FRAMe<fr>:BC? 2149
SBUS<sb>:SPMI:FRAMe<fr>:DATA? 2149
SBUS<sb>:SPMI:FRAMe<fr>:FLDCount? 2149
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:FVALue? 2150
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:LABel? 2150
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:STATe? 2150
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:VALue? 2151
SBUS<sb>:SPMI:FRAMe<fr>:RBRate? 2151
SBUS<sb>:SPMI:FRAMe<fr>:SA? 2151
SBUS<sb>:SPMI:FRAMe<fr>:STARt? 2152
SBUS<sb>:SPMI:FRAMe<fr>:STATus? 2152
SBUS<sb>:SPMI:FRAMe<fr>:STOP? 2152
SBUS<sb>:SPMI:FRAMe<fr>:TYPE? 2153
SBUS<sb>:SPMI:FRAMe<fr>:WBRate? 2153
SBUS<sb>:SPMI:FRAMe<fr>:SYMBol? 2154

SBUS<sb>:SPMI:FCOunt?

Returns the number of decoded frames in the acquisition.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:ADDRess?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameADDR> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:BC?

Returns the BC of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameBC> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:DATA?

Returns the data value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData>

Usage: Query only

SBUS<sb>:SPMI:FRAMe<fr>:FLDCount?

Returns the field count of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified byte.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | NOReponse | ACKerror | BPERror | PARerror | LENerror | ARBerror | SSCerror | CMDerror | CODerror | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:RBRate?

Returns the read bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameRBR> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:SPMI:FRAMe<fr>:SA?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameSA> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | NOReponse | ACKerror | BPERror | PARerror | LENerror | ARBerror | SSCerror | CMDerror | CODerror | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:TYPE?

Returns the frame type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameType> RZWR | RWR | RRD | ERWR | ERRD | ERWL | ERRL | MAWR | MARD | BMRD | BSRD | TBOW | REST | SLEP | SHUT | WAK | AUTH | INV | UNKN | ARB

`RZWR`: register 0 write
`RWR`: register write
`RRD`: register read
`ERWR`: extended register write
`ERRD`: extended register read
`ERWL`: extended register write long
`ERRL`: extended register read long
`MAWR`: main write
`MARD`: main read
`BMRD`: device descriptor block main read
`BSRD`: device descriptor block sub read
`TBOW`: transfer bus ownership
`REST`: reset
`SLEP`: sleep
`SHUT`: shutdown
`WAK`: wakeup
`AUTH`: authenticate
`INV`: invalid
`UNKN`: unknown
`ARB`: arbitration frame

*RST: RZWR

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:WBRate?

Returns the write bit rate of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameWBR> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:SPMI:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SymbolicName> String with symbolic name of the address
String with the symbolic name of the frame

Usage: Query only
Asynchronous command

18.18.20 RFFE (option R&S MXO5-K550)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

18.18.20.1 Configuration

SBUS<sb>:RFFE:CLOCk:HYSTeresis....2154
SBUS<sb>:RFFE:CLOCk:SOURce....2155
SBUS<sb>:RFFE:CLOCk:THReshold....2155
SBUS<sb>:RFFE:DATA:HYSTeresis....2155
SBUS<sb>:RFFE:DATA:SOURce....2155
SBUS<sb>:RFFE:DATA:THReshold....2156
SBUS<sb>:RFFE:GFILter....2156
SBUS<sb>:RFFE:GFWidth....2156
SBUS<sb>:RFFE:POSition....2157
SBUS<sb>:RFFE:RDMD....2157
SBUS<sb>:RFFE:SCALe....2157

SBUS<sb>:RFFE:CLOCk:HYSTeresis <Hysteresis>

Sets a hysteresis for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 906

SBUS<sb>:RFFE:CLOCk:SOURce <SourceClock>

Sets the source of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SourceClock> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK" on page 906

SBUS<sb>:RFFE:CLOCk:THReshold <Threshold>

Sets a threshold value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 906

SBUS<sb>:RFFE:DATA:HYSTeresis <DATA Hyst>

Sets a hysteresis for the data.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATA Hyst>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 906

SBUS<sb>:RFFE:DATA:SOURce <SourceData>

Sets the source of the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

<SourceData> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SDATA" on page 905

SBUS<sb>:RFFE:DATA:THReshold <DATA Threshold>

Sets a threshold value for the data line.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<DATA Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 906

SBUS<sb>:RFFE:GFILter <GlitchFilter>

Enables the glitch filter on the SCLK and SDATA lines to improve decode accuracy.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<GlitchFilter> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use glitch filter, Glitch filter width" on page 906

SBUS<sb>:RFFE:GFWidth <GlitchFilterWdt>

Sets the maximum glitch width to be ignored.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<GlitchFilterWdt> Range: 1E-11 to 1E-08
Increment: 1E-11
*RST: 1E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Use glitch filter, Glitch filter width" on page 906

SBUS<sb>:RFFE:POSition <RFFE position>

Sets the vertical position of the RFFE signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<RFFE position>

Usage: Asynchronous command

SBUS<sb>:RFFE:RDMD <ReadMode>

Selects, if the standard or synchronous read mode is used.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ReadMode> STRD | SREAD

`STRD`: standard
`SREAD`: synchronous read

*RST: STRD

Usage: Asynchronous command

Manual operation: See "Read mode" on page 906

SBUS<sb>:RFFE:SCALe <RFFE scale>

Set the vertical scale of the indicated RFFE signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<RFFE scale>

Usage: Asynchronous command

18.18.20.2 Filter

There are two commands for each parameter, that you can use for defining the RFFE settings.

For example, to set the *Frame type =Register 0 Write* > *Field =Data* >*01100* value you can use one of the following commands:

- `SBUS:RFFE:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:RFFE:FILTer:DMIN "Register 0 Write", "Data", 01100`

Defines the parameter by using the frame and field name.

SBUS<sb>:RFFE:FILTer:CHKall....2158
SBUS<sb>:RFFE:FILTer:CLR....2158
SBUS<sb>:RFFE:FILTer:INVert....2159
SBUS<sb>:RFFE:FILTer:RST....2159
SBUS<sb>:RFFE:FILTer:FRENable....2159
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:ENABle....2159
SBUS<sb>:RFFE:FILTer:BIT....2159
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:BIT....2159
SBUS<sb>:RFFE:FILTer:DMAX....2160
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2160
SBUS<sb>:RFFE:FILTer:DMIN....2160
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2160
SBUS<sb>:RFFE:FILTer:DOPerator....2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2161
SBUS<sb>:RFFE:FILTer:FIENable....2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2161
SBUS<sb>:RFFE:FILTer:IMAX....2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2161
SBUS<sb>:RFFE:FILTer:IMIN....2162
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2162
SBUS<sb>:RFFE:FILTer:IOPerator....2162
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2162
SBUS<sb>:RFFE:FILTer:ERENable....2163
SBUS<sb>:RFFE:FILTer:ERRor<n>:ENABle....2163

SBUS<sb>:RFFE:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 907

SBUS<sb>:RFFE:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 907

SBUS<sb>:RFFE:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 907

SBUS<sb>:RFFE:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 907

SBUS<sb>:RFFE:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:RFFE:FILTer:FRENable? <Enabler>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on RFFE frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

SBUS<sb>:RFFE:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:RFFE:FILTer:BIT? <Bit>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 908

SBUS<sb>:RFFE:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:RFFE:FILTer:DMAX? <Data>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 908

SBUS<sb>:RFFE:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:RFFE:FILTer:DMIN? <Data>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 908

SBUS<sb>:RFFE:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:RFFE:FILTer:DOPerator? <Operator>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 908

SBUS<sb>:RFFE:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:RFFE:FILTer:FIENable? <Enabler>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 908

SBUS<sb>:RFFE:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:RFFE:FILTer:IMAX? <Data>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 908

SBUS<sb>:RFFE:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:RFFE:FILTer:IMIN? <Data>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 908

SBUS<sb>:RFFE:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:RFFE:FILTer:IOPerator? <Operator>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 908

SBUS<sb>:RFFE:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:RFFE:FILTer:ERENable? <Enabler>
SBUS<sb>:RFFE:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 910

18.18.20.3 Format

This section describes the commands to specify and query frame formats for the "RFFE" protocol.

SBUS<sb>:RFFE:FORMat:SELect ... 2164
SBUS<sb>:RFFE:FORMat:ADDFrame ... 2164
SBUS<sb>:RFFE:FORMat:LOAD ... 2164
SBUS<sb>:RFFE:FORMat:SAVE ... 2164
SBUS<sb>:RFFE:FORMat:CLR ... 2165
SBUS<sb>:RFFE:FORMat:FCOunt? ... 2165
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ADDField ... 2165
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLDCount? ... 2165
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:NAME ... 2166
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:COLor ... 2166
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:TYPE ... 2166
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENCheck ... 2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENValue ... 2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Field ... 2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Field ... 2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Field ... 2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Value ... 2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Value ... 2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Value ... 2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2169
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2169
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2169
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2170
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2170
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2171
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2171

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 2172
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:UNIT 2172
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARA 2173
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARB 2173

SBUS<sb>:RFFE:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 911

SBUS<sb>:RFFE:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 911

SBUS<sb>:RFFE:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 912

SBUS<sb>:RFFE:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 912

SBUS<sb>:RFFE:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 912

SBUS<sb>:RFFE:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 912

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 914

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 913

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 913

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 913

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 913

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 913

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 913

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 913

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 914

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 914

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 914

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 915

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 915

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 915

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 915

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 916

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 916

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 916

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 916

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat = FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 916

18.18.20.4 Software trigger

There are two commands for each parameter, that you can use for defining the RFFE settings.

For example, to set the *Frame type =Register 0 Write > Field =Data >01100* value you can use one of the following commands:

- `TRIGger:SBSW:RFFE:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:RFFE:DMIN "Register 0 Write", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:RFFE:CHKall....2174
TRIGger:SBSW:RFFE:CLR....2174
TRIGger:SBSW:RFFE:INVert....2174
TRIGger:SBSW:RFFE:RST....2174
TRIGger:SBSW:RFFE:FRENable....2175
TRIGger:SBSW:RFFE:FRAMe<fr>:ENABle....2175
TRIGger:SBSW:RFFE:BIT....2175
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:BIT....2175
TRIGger:SBSW:RFFE:DMAX....2175
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMAX....2175
TRIGger:SBSW:RFFE:DMIN....2176
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMIN....2176
TRIGger:SBSW:RFFE:DOPerator....2176
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator....2176
TRIGger:SBSW:RFFE:FIENable....2176

TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:ENABle....2176
TRIGger:SBSW:RFFE:IMAX....2177
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMAX....2177
TRIGger:SBSW:RFFE:IMIN....2177
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMIN....2177
TRIGger:SBSW:RFFE:IOPerator....2178
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator....2178
TRIGger:SBSW:RFFE:ERENable....2178
TRIGger:SBSW:RFFE:ERRor<m>:ENABle....2178
SBUS<sb>:RFFE:SWTindex?....2178
SBUS<sb>:RFFE:SWTTime?....2179

TRIGger:SBSW:RFFE:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 918

TRIGger:SBSW:RFFE:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 918

TRIGger:SBSW:RFFE:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 918

TRIGger:SBSW:RFFE:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 918

TRIGger:SBSW:RFFE:FRENable <Frame>,<Enabler>
TRIGger:SBSW:RFFE:FRENable? <Enabler>
TRIGger:SBSW:RFFE:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 918

TRIGger:SBSW:RFFE:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:RFFE:BIT? <Bit>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 918

TRIGger:SBSW:RFFE:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:RFFE:DMAX? <Data>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 918

TRIGger:SBSW:RFFE:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:RFFE:DMIN? <Data>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 918

TRIGger:SBSW:RFFE:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:RFFE:DOPerator? <Operator>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 918

TRIGger:SBSW:RFFE:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:RFFE:FIENable? <Enabler>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 918

TRIGger:SBSW:RFFE:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:RFFE:IMAX? <Data>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 918

TRIGger:SBSW:RFFE:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:RFFE:IMIN? <Data>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 918

TRIGger:SBSW:RFFE:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:RFFE:IOPerator? <Operator>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 918

TRIGger:SBSW:RFFE:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:RFFE:ERENable? <Enabler>
TRIGger:SBSW:RFFE:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 920

SBUS<sb>:RFFE:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.20.5 Decode results

SBUS<sb>:RFFE:FRAMe<fr>:PADone? 2179
SBUS<sb>:RFFE:FRAMe<fr>:PADZero? 2180
SBUS<sb>:RFFE:FRAMe<fr>:PCTRl? 2180
SBUS<sb>:RFFE:FCOunt? 2180
SBUS<sb>:RFFE:FRAMe<fr>:ADDRess? 2181
SBUS<sb>:RFFE:FRAMe<fr>:BCOunt? 2181
SBUS<sb>:RFFE:FRAMe<fr>:DATA? 2181
SBUS<sb>:RFFE:FRAMe<fr>:FLDCount? 2181
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:FVALue? 2182
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:NAME? 2182
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:STATe? 2182
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:VALue? 2183
SBUS<sb>:RFFE:FRAMe<fr>:RBTRate? 2183
SBUS<sb>:RFFE:FRAMe<fr>:SADD? 2183
SBUS<sb>:RFFE:FRAMe<fr>:STARt? 2184
SBUS<sb>:RFFE:FRAMe<fr>:STATe? 2184
SBUS<sb>:RFFE:FRAMe<fr>:STOP? 2184
SBUS<sb>:RFFE:FRAMe<fr>:TYPE? 2185
SBUS<sb>:RFFE:FRAMe<fr>:WBTRate? 2186
SBUS<sb>:RFFE:FRAMe<fr>:SYMBol? 2186

SBUS<sb>:RFFE:FRAMe<fr>:PADone?

Returns the parity address one of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityAddr1> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:PADZero?

Returns the parity address zero of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityAddr0> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:PCTRl?

Returns the parity control of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityCtrl> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FCOunt?

Returns the number of decoded frames in the current acquisition.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:ADDRess?

Returns the register address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Address> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:BCOunt?

Returns the byte count of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BC> Range: 0 to 256
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:DATA?

Returns the data value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Data>

Usage: Query only

SBUS<sb>:RFFE:FRAMe<fr>:FLDCount?

Returns the field count of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:NAME?

Returns the name (label) of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:RBTRate?

Returns the read bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ReadBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:RFFE:FRAMe<fr>:SADD?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SA> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Start> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:STATe?

Returns the overall state of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<State> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Stop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:TYPE?

Returns the type of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Type> RZWR | RWR | ERWR | ERWL | MWR | MSKW | MCTW | RRD | ERRD | ERRL | MRD | MCTR | MOHO | IRSUM | UNDEF | UNKN | ERRor

RZWR
Register 0 write

RWR
Register write

RRD
Register read

ERWR
Extended register write

ERRD
Extended register read

ERWL
Extended register write long

ERRL
Extended register read long

MRD
Main device read

MWR
Main device write

MOHO
Main device Ownership Handove

IRSUM
Interrupt summary and notification

MSKW
Masked write

MCTR
Main device context transfer read

MCTW
Main device context transfer write

UNDEF
Undefined frame type

UNKN
Unknown frame type

ERRor
The bits defining the command sequence are not valid, no supported command sequence

*RST: RZWR

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:WBTRate?

Returns the write bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:RFFE:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified sequence if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SymbolicName> String with symbolic name of the frame

Usage: Query only
Asynchronous command

18.18.21 10BASE-T1S (option R&S MXO5-K560)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2187
- Filter....2188
- Format....2194
- Hardware trigger....2204
- Software trigger....2204
- Decode results....2210

18.18.21.1 Configuration

SBUS<sb>:TNOS:POSition....2187
SBUS<sb>:TNOS:SCALe....2187
SBUS<sb>:TNOS:SOURce....2187
SBUS<sb>:TNOS:THReshold:LOWer....2187
SBUS<sb>:TNOS:THReshold:HYSTeresis....2188
SBUS<sb>:TNOS:THReshold:UPPer....2188

SBUS<sb>:TNOS:POSition <TENBTO position>

Sets the vertical position of the 10BASE-T1S signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TENBTO position>

Usage: Asynchronous command

SBUS<sb>:TNOS:SCALe <TENBTO scale>

Set the vertical scale of the indicated 10BASE-T1S signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TENBTO scale>

Usage: Asynchronous command

SBUS<sb>:TNOS:SOURce <Source>

Selects the source channel for the 10BASE-T1S protocol. Only analog channels can be used.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 925

SBUS<sb>:TNOS:THReshold:LOWer <Lower Thres>

Sets a lower threshold.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Lower Thres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 926

SBUS<sb>:TNOS:THReshold:HYSTeresis <Hysteresis>

Sets a value for the hysteresis.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 926

SBUS<sb>:TNOS:THReshold:UPPer <Upper Thres>

Sets an upper threshold.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Upper Thres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 926

18.18.21.2 Filter

There are two commands for each parameter, that you can use for defining the 10BASE-T1S settings.

For example, to set the *Frame type =MAC* > *Field =Data >00* value you can use one of the following commands:

- `SBUS:TNOS:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:TNOS:FILTer:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:TNOS:FILTer:CHKall....2189
SBUS<sb>:TNOS:FILTer:CLR....2189
SBUS<sb>:TNOS:FILTer:RST....2189

SBUS<sb>:TNOS:FILTer:INVert....2190
SBUS<sb>:TNOS:FILTer:BIT....2190
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT....2190
SBUS<sb>:TNOS:FILTer:DMAX....2190
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2190
SBUS<sb>:TNOS:FILTer:DMIN....2191
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2191
SBUS<sb>:TNOS:FILTer:DOPerator....2191
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2191
SBUS<sb>:TNOS:FILTer:ERENable....2191
SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABle....2191
SBUS<sb>:TNOS:FILTer:FIENable....2192
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2192
SBUS<sb>:TNOS:FILTer:IMAX....2192
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2192
SBUS<sb>:TNOS:FILTer:IMIN....2193
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2193
SBUS<sb>:TNOS:FILTer:IOPerator....2193
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2193
SBUS<sb>:TNOS:FILTer:FRENable....2193
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABle....2193

SBUS<sb>:TNOS:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 928

SBUS<sb>:TNOS:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 928

SBUS<sb>:TNOS:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 928

SBUS<sb>:TNOS:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 928

SBUS<sb>:TNOS:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:TNOS:FILTer:BIT? <Bit>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 928

SBUS<sb>:TNOS:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:TNOS:FILTer:DMAX? <Data>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 928

SBUS<sb>:TNOS:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:TNOS:FILTer:DMIN? <Data>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 928

SBUS<sb>:TNOS:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:TNOS:FILTer:DOPerator? <Operator>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 928

SBUS<sb>:TNOS:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:TNOS:FILTer:ERENable? <Enabler>
SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABle <Enable>

rcset

Suffix:
<sb> 1..4
<n> *

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 930

SBUS<sb>:TNOS:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:TNOS:FILTer:FIENable? <Enabler>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 928

SBUS<sb>:TNOS:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:TNOS:FILTer:IMAX? <Data>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 928

SBUS<sb>:TNOS:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:TNOS:FILTer:IMIN? <Data>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 928

SBUS<sb>:TNOS:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:TNOS:FILTer:IOPerator? <Operator>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 928

SBUS<sb>:TNOS:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:TNOS:FILTer:FRENable? <Enabler>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on 10Base-T1S frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 928

18.18.21.3 Format

This section describes the commands to specify and query frame formats for the "10BASE-T1S" protocol.

SBUS<sb>:TNOS:FORMat:SELect....2194
SBUS<sb>:TNOS:FORMat:ADDFrame....2195
SBUS<sb>:TNOS:FORMat:LOAD....2195
SBUS<sb>:TNOS:FORMat:SAVE....2195
SBUS<sb>:TNOS:FORMat:CLR....2196
SBUS<sb>:TNOS:FORMat:FCOunt?....2196
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ADDField....2196
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLDCount?....2196
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:NAME....2197
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:COLor....2197
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:TYPE....2197
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENCheck....2197
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENValue....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Field....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Field....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Field....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Value....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Value....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Value....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:NAME....2199
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:COLor....2199
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2199
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2200
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2200
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2201
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2201
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2202
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2202
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2203
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2203
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARA....2203
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARB....2203

SBUS<sb>:TNOS:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 930

SBUS<sb>:TNOS:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 930

SBUS<sb>:TNOS:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 931

SBUS<sb>:TNOS:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 931

SBUS<sb>:TNOS:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 931

SBUS<sb>:TNOS:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 931

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 933

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 932

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 932

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 932

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 932

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 932

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 932

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 932

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 933

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 933

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 933

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 934

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 934

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 934

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 934

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 935

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 935

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 935

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 935

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:

<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 935

18.18.21.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:TNOS:TYPE....2204
TRIGger:SBHW:TNOS:SAMPlepoint....2204

TRIGger:SBHW:TNOS:TYPE <Type>

Selects the trigger type condition.

Parameters:

<Type> MAC | COMMit | BEACon | UNKNown

MAC: MAC frame
COMMit: Commit sequence
BEACon: Beacon transmission
UNKNown: Unknown symbol or event

*RST: MAC

Usage: Asynchronous command

Manual operation: See "Type" on page 936

TRIGger:SBHW:TNOS:SAMPlepoint <SamplePoint>

Sets the position of the sample point in percent of the nominal bit time.

Parameters:

<SamplePoint> Range: 55 to 95
Increment: 5
*RST: 80
Default unit: %

Usage: Asynchronous command

Manual operation: See "Sample point" on page 936

18.18.21.5 Software trigger

There are two commands for each parameter, that you can use for defining the 10BASE-T1S settings.

For example, to set the *Frame type =MAC > Field =Data >00* value you can use one of the following commands:

- `TRIGger:SBSW:TNOS:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:TNOS:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:TNOS:CHKall....2205
TRIGger:SBSW:TNOS:CLR....2205
TRIGger:SBSW:TNOS:INVert....2206
TRIGger:SBSW:TNOS:RST....2206
TRIGger:SBSW:TNOS:FRENable....2206
TRIGger:SBSW:TNOS:FRAMe<fr>:ENABle....2206
TRIGger:SBSW:TNOS:BIT....2206
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:BIT....2206
TRIGger:SBSW:TNOS:DMAX....2207
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMAX....2207
TRIGger:SBSW:TNOS:DMIN....2207
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMIN....2207
TRIGger:SBSW:TNOS:DOPerator....2207
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator....2207
TRIGger:SBSW:TNOS:FIENable....2208
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:ENABle....2208
TRIGger:SBSW:TNOS:IMAX....2208
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMAX....2208
TRIGger:SBSW:TNOS:IMIN....2209
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMIN....2209
TRIGger:SBSW:TNOS:IOPerator....2209
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator....2209
TRIGger:SBSW:TNOS:ERENable....2209
TRIGger:SBSW:TNOS:ERRor<m>:ENABle....2209
SBUS<sb>:TNOS:SWTindex?....2210
SBUS<sb>:TNOS:SWTTime?....2210

TRIGger:SBSW:TNOS:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 937

TRIGger:SBSW:TNOS:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 937

TRIGger:SBSW:TNOS:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 937

TRIGger:SBSW:TNOS:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 937

TRIGger:SBSW:TNOS:FRENable <Frame>,<Enabler>
TRIGger:SBSW:TNOS:FRENable? <Enabler>
TRIGger:SBSW:TNOS:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 938

TRIGger:SBSW:TNOS:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:TNOS:BIT? <Bit>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 938

TRIGger:SBSW:TNOS:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:TNOS:DMAX? <Data>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator` on page 2207.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 938

TRIGger:SBSW:TNOS:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:TNOS:DMIN? <Data>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 938

TRIGger:SBSW:TNOS:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:TNOS:DOPerator? <Operator>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 938

TRIGger:SBSW:TNOS:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:TNOS:FIENable? <Enabler>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 938

TRIGger:SBSW:TNOS:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:TNOS:IMAX? <Data>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 938

TRIGger:SBSW:TNOS:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:TNOS:IMIN? <Data>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 938

TRIGger:SBSW:TNOS:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:TNOS:IOPerator? <Operator>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 938

TRIGger:SBSW:TNOS:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:TNOS:ERENable? <Enabler>
TRIGger:SBSW:TNOS:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 939

SBUS<sb>:TNOS:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.21.6 Decode results

SBUS<sb>:TNOS:FCOunt?....2211
SBUS<sb>:TNOS:FRAMe<fr>:FLDCount?....2211
SBUS<sb>:TNOS:FRAMe<fr>:BITRate?....2211
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:FVALue?....2212
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:LABel?....2212
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:STATe?....2212
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:VALue?....2213
SBUS<sb>:TNOS:FRAMe<fr>:CRC?....2213
SBUS<sb>:TNOS:FRAMe<fr>:DATA?....2214
SBUS<sb>:TNOS:FRAMe<fr>:DTADdress?....2214
SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol?....2214
SBUS<sb>:TNOS:FRAMe<fr>:FCRC?....2214
SBUS<sb>:TNOS:FRAMe<fr>:FDATa?....2215
SBUS<sb>:TNOS:FRAMe<fr>:FDTaddress?....2215
SBUS<sb>:TNOS:FRAMe<fr>:FSRaddress?....2215
SBUS<sb>:TNOS:FRAMe<fr>:FTPLenth?....2216

SBUS<sb>:TNOS:FRAMe<fr>:SRADdress?....2216
SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol?....2216
SBUS<sb>:TNOS:FRAMe<fr>:STARt?....2216
SBUS<sb>:TNOS:FRAMe<fr>:STATus?....2217
SBUS<sb>:TNOS:FRAMe<fr>:STOP?....2218
SBUS<sb>:TNOS:FRAMe<fr>:TPLenth?....2218
SBUS<sb>:TNOS:FRAMe<fr>:TYPE?....2218

SBUS<sb>:TNOS:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count> Total number of fields.

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | EPRMble | ESFD | EESD | ECRC | ECOM | ELEN | INComplete

OK
The field has no error, it is valid.

EPRMble
Preamble error, the hex value of the preamble field is different from 0x55555555555555 (56 alternating 0's and 1's).

ESFD
SFD error, the hex value of the SFD field is different from 0xD5

EESD
ESD error, the value of the ESD field does not correspond to the symbol pair "ESD, ESDOK"

ECRC
CRC error, the value of the FCS field does not match the calculated CRC.

ECOM
Commit error, indicates that the transmit opportunity does not end successfully, and the commit sequence contains error or invalid symbols.

ELEN
Length error, the number of bits in the specified field is higher or lower than expected.

INComplete
The frame is incomplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:CRC?

Returns the CRC for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DATA?

Returns the data for the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DTADdress?

Returns the destination address for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestAddress> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol?

Returns the destination symbol for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FCRC?

Returns the formatted CRC for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRC>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FDATa?

Returns the formatted data for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedData>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FDTaddress?

Returns the formatted destination address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedDestAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FSRaddress?

Returns the formatted SRC address for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedSrcAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FTPLenth?

Returns the formatted type length for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedTypLenth>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:SRADdress?

Returns the source address for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SourceAddress> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol?

Returns the frame of the source symbol.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SrcSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STATus?

Returns the state of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | EPRMble | ESFD | EESD | ECRC | ECOM | ELEN | INComplete

OK
The frame has no error, it is valid.

EPRMble
Preamble error, the hex value of the preamble field is different from 0x55555555555555 (56 alternating 0's and 1's).

ESFD
SFD error, the hex value of the SFD field is different from 0xD5

EESD
ESD error, the value of the ESD field does not correspond to the symbol pair "ESD, ESDOK"

ECRC
CRC error, the value of the FCS field does not match the calculated CRC.

ECOM
Commit error, indicates that the transmit opportunity does not end successfully, and the commit sequence contains error or invalid symbols.

ELEN
Length error, the number of bits in the specified frame is higher or lower than expected.

INComplete
The frame is incomplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:TPLenth?

Returns the type length for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<TypeLenth> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:TYPE?

Returns the type of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> MAC | COMMit | BEACon | UNKNown
*RST: MAC

Usage: Query only
Asynchronous command

18.18.22 100BASE-T1 (option R&S MXO5-K560)

- Configuration....2219
- Filter....2220
- Format....2225
- Software trigger....2235
- Decode results....2241

18.18.22.1 Configuration

SBUS<sb>:HBTO:MODE....2219
SBUS<sb>:HBTO:POLarity....2219
SBUS<sb>:HBTO:POSition....2219
SBUS<sb>:HBTO:SCALe....2220
SBUS<sb>:HBTO:SOURce....2220

SBUS<sb>:HBTO:MODE <Mode>

Selects the operation mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> MAIN | SUB | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Operation mode" on page 943

SBUS<sb>:HBTO:POLarity <Polarity>

Selects the polarity of the data signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> NORMal | INVerted
*RST: NORMal

Usage: Asynchronous command

Manual operation: See "Polarity" on page 943

SBUS<sb>:HBTO:POSition <HBTO position>

Sets the vertical position of the 100BASE-T1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<HBTO position>

Usage: Asynchronous command

SBUS<sb>:HBTO:SCALe <HBTO scale>

Set the vertical scale of the indicated 100BASE-T1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<HBTO scale>

Usage: Asynchronous command

SBUS<sb>:HBTO:SOURce Source

Selects the source channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 943

18.18.22.2 Filter

There are two commands for each parameter, that you can use for defining the 100BASE-T1 settings.

For example, to set the *Frame type =MAC* > *Field =Data >00* value you can use one of the following commands:

- `SBUS:HBTO:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:HBTO:FILTer:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:HBTO:FILTer:CHKall....2221
SBUS<sb>:HBTO:FILTer:CLR....2221
SBUS<sb>:HBTO:FILTer:INVert....2221
SBUS<sb>:HBTO:FILTer:RST....2222
SBUS<sb>:HBTO:FILTer:BIT....2222
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT....2222
SBUS<sb>:HBTO:FILTer:DMAX....2222

SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2222
SBUS<sb>:HBTO:FILTer:DMIN 2223
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2223
SBUS<sb>:HBTO:FILTer:DOPerator 2223
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2223
SBUS<sb>:HBTO:FILTer:ERENable 2223
SBUS<sb>:HBTO:FILTer:ERRor<n>:ENABle 2223
SBUS<sb>:HBTO:FILTer:FIENable 2224
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2224
SBUS<sb>:HBTO:FILTer:FRENable 2224
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:ENABle 2224
SBUS<sb>:HBTO:FILTer:IMAX 2224
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2224
SBUS<sb>:HBTO:FILTer:IMIN 2225
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2225
SBUS<sb>:HBTO:FILTer:IOPerator 2225
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2225

SBUS<sb>:HBTO:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 945

SBUS<sb>:HBTO:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 945

SBUS<sb>:HBTO:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 945

SBUS<sb>:HBTO:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 945

SBUS<sb>:HBTO:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:HBTO:FILTer:BIT? <Bit>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:HBTO:FILTer:DMAX? <Data>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:HBTO:FILTer:DMIN? <Data>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:HBTO:FILTer:DOPerator? <Operator>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:HBTO:FILTer:ERENable? <Enabler>
SBUS<sb>:HBTO:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:HBTO:FILTer:FIENable? <Enabler>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:HBTO:FILTer:FRENable? <Enabler>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on 100BASE-T1 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:HBTO:FILTer:IMAX? <Data>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:HBTO:FILTer:IMIN? <Data>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:HBTO:FILTer:IOPerator? <Operator>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

18.18.22.3 Format

This section describes the commands to specify and query frame formats for the "100BASE-T1" protocol.

SBUS<sb>:HBTO:FORMat:SELect 2226
SBUS<sb>:HBTO:FORMat:ADDFrame 2226
SBUS<sb>:HBTO:FORMat:LOAD 2227
SBUS<sb>:HBTO:FORMat:SAVE 2227

SBUS<sb>:HBTO:FORMat:CLR 2227
SBUS<sb>:HBTO:FORMat:FCOunt? 2227
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ADDField 2228
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLDCount? 2228
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:NAME 2228
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:COLor 2229
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:TYPE 2229
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck 2229
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENValue 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Field 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Field 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Field 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Value 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Value 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Value 2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME 2231
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor 2231
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 2231
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount 2232
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition 2232
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder 2232
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat 2233
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 2233
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 2234
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 2234
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT 2235
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA 2235
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB 2235

SBUS<sb>:HBTO:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 947

SBUS<sb>:HBTO:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 947

SBUS<sb>:HBTO:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 948

SBUS<sb>:HBTO:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 948

SBUS<sb>:HBTO:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 947

SBUS<sb>:HBTO:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 947

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 949

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 948

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 948

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 948

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 948

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 948

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 949

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 949

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 950

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 950

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 950

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 950

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 950

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 950

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 951

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 951

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 951

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 951

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 952

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 952

18.18.22.4 Software trigger

There are two commands for each parameter, that you can use for defining the 100BASE-T1 settings.

For example, to set the *Frame type =MAC > Field =Data >00* value you can use one of the following commands:

- `TRIGger:SBSW:HBTO:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:HBTO:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:HBTO:CHKall....2236
TRIGger:SBSW:HBTO:CLR....2236
TRIGger:SBSW:HBTO:INVert....2237
TRIGger:SBSW:HBTO:RST....2237
TRIGger:SBSW:HBTO:FRENable....2237
TRIGger:SBSW:HBTO:FRAMe<fr>:ENABle....2237
TRIGger:SBSW:HBTO:BIT....2237
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:BIT....2237
TRIGger:SBSW:HBTO:DMAX....2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMAX....2238
TRIGger:SBSW:HBTO:DMIN....2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMIN....2238
TRIGger:SBSW:HBTO:DOPerator....2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator....2238
TRIGger:SBSW:HBTO:FIENable....2239
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:ENABle....2239
TRIGger:SBSW:HBTO:IMAX....2239
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMAX....2239
TRIGger:SBSW:HBTO:IMIN....2240
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMIN....2240
TRIGger:SBSW:HBTO:IOPerator....2240
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator....2240
TRIGger:SBSW:HBTO:ERENable....2240
TRIGger:SBSW:HBTO:ERRor<m>:ENABle....2240
SBUS<sb>:HBTO:SWTindex?....2241
SBUS<sb>:HBTO:SWTTime?....2241

TRIGger:SBSW:HBTO:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 953

TRIGger:SBSW:HBTO:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 953

TRIGger:SBSW:HBTO:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 953

TRIGger:SBSW:HBTO:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 953

TRIGger:SBSW:HBTO:FRENable <Frame>,<Enabler>
TRIGger:SBSW:HBTO:FRENable? <Enabler>
TRIGger:SBSW:HBTO:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 953

TRIGger:SBSW:HBTO:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:HBTO:BIT? <Bit>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 954

TRIGger:SBSW:HBTO:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:HBTO:DMAX? <Data>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 954

TRIGger:SBSW:HBTO:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:HBTO:DMIN? <Data>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 954

TRIGger:SBSW:HBTO:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:HBTO:DOPerator? <Operator>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 954

TRIGger:SBSW:HBTO:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:HBTO:FIENable? <Enabler>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 954

TRIGger:SBSW:HBTO:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:HBTO:IMAX? <Data>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 954

TRIGger:SBSW:HBTO:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:HBTO:IMIN? <Data>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 954

TRIGger:SBSW:HBTO:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:HBTO:IOPerator? <Operator>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 954

TRIGger:SBSW:HBTO:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:HBTO:ERENable? <Enabler>
TRIGger:SBSW:HBTO:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 955

SBUS<sb>:HBTO:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.22.5 Decode results

SBUS<sb>:HBTO:FCOunt? 2242
SBUS<sb>:HBTO:FRAMe<fr>:FLDCount? 2242
SBUS<sb>:HBTO:FRAMe<fr>:BITRate? 2242
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:FVALue? 2243
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:LABel? 2243
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:STATe? 2243
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:VALue? 2244
SBUS<sb>:HBTO:FRAMe<fr>:CRC? 2244
SBUS<sb>:HBTO:FRAMe<fr>:DATA? 2245
SBUS<sb>:HBTO:FRAMe<fr>:DTADdress? 2245
SBUS<sb>:HBTO:FRAMe<fr>:DTSYmbol? 2245
SBUS<sb>:HBTO:FRAMe<fr>:FCRC? 2245
SBUS<sb>:HBTO:FRAMe<fr>:FDATa? 2246
SBUS<sb>:HBTO:FRAMe<fr>:FDTaddress? 2246
SBUS<sb>:HBTO:FRAMe<fr>:FSRaddress? 2246
SBUS<sb>:HBTO:FRAMe<fr>:FTPLenth? 2247

SBUS<sb>:HBTO:FRAMe<fr>:SRADdress? 2247
SBUS<sb>:HBTO:FRAMe<fr>:SRSYmbol? 2247
SBUS<sb>:HBTO:FRAMe<fr>:STARt? 2247
SBUS<sb>:HBTO:FRAMe<fr>:STATus? 2248
SBUS<sb>:HBTO:FRAMe<fr>:STOP? 2248
SBUS<sb>:HBTO:FRAMe<fr>:TPLenth? 2249
SBUS<sb>:HBTO:FRAMe<fr>:TYPE? 2249

SBUS<sb>:HBTO:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count> Total number of fields.

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | EPRMble | ESFD | ELENgth | ECRC | UNCorrelated | INComplete

OK
The field is valid.

EPRMble
Preamble error

ESFD
Start frame delimiter (SFD) error

ELENgth
Erroneous field due to incorrect length

ECRC
Cyclic redundancy check (CRC) error, the value of the frame check sequence (FCS) field does not match the calculated checksum.

UNCorrelated
Uncorrelated field error

INComplete
Field not completely contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:CRC?

Returns the CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:DATA?

Returns the data for the selected frame in comma-separated values, corresponds to the "Data" column in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:DTADdress?

Returns the destination address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:DTSYmbol?

Returns the destination symbols of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FCRC?

Returns the formatted CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRC>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FDATa?

Returns the formatted data for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedData>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FDTaddress?

Returns the formatted destination address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedDestAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FSRaddress?

Returns the formatted source address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedSrcAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FTPLenth?

Returns the value of type /length field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedTypLenth>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:SRADdress?

Returns the source address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SourceAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:SRSYmbol?

Returns the source symbols of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SrcSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | EPRMble | ESFD | ELENgth | ECRC | UNCorrelated | INComplete

OK
Valid frame.

EPRMble
Erroneous frame due to preamble error.

ESFD
Erroneous frame due to SFD error.

ELENgth
Erroneous frame due to length / type error.

ECRC
Erroneous frame due to CRC error.

UNCorrelated
Uncorrelated frame

INComplete
Frame is inclompete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:STOP?

Returns the end time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:TPLenth?

Returns the value of the type / length field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<TypeLenth> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:TYPE?

Returns the type of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameType> IDLE | MAC | FILLer | UNKNown

IDLE
IDLE frame. This frame is used for clock synchronization.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

FILLer
Filler frame. The frame is used to maintain transmission activity.

UNKNown
No meaningful frame can be determined.

*RST: MAC

Usage: Query only
Asynchronous command

18.18.23 1000BASE-T1 (option R&S MXO5-K560)

- Configuration....2250
- Filter....2252
- Format....2257
- Software trigger....2268
- Decode results....2274

18.18.23.1 Configuration

SBUS<sb>:TBTO:MODE....2250
SBUS<sb>:TBTO:POLarity....2250
SBUS<sb>:TBTO:POSition....2250
SBUS<sb>:TBTO:SCALe....2251
SBUS<sb>:TBTO:SRCPlus....2251
SBUS<sb>:TBTO:SRCMinus....2251

SBUS<sb>:TBTO:MODE <Mode>

Selects the operation mode for 1000BASE-T1.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> MAIN | SUB | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Operation mode" on page 961

SBUS<sb>:TBTO:POLarity <Polarity>

Selects the polarity of the data signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> NORMal | INVerted
*RST: NORMal

Usage: Asynchronous command

Manual operation: See "Polarity" on page 960

SBUS<sb>:TBTO:POSition <TBTO position>

Sets the vertical position of the 1000BASE-T1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TBTO position>

Usage: Asynchronous command

SBUS<sb>:TBTO:SCALe <TBTO scale>

Set the vertical scale of the indicated 1000BASE-T1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TBTO scale>

Usage: Asynchronous command

SBUS<sb>:TBTO:SRCPlus <PLUSSource>

Selects the D+ data source channel for 1000BASE-T1.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<PLUSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source plus" on page 960

SBUS<sb>:TBTO:SRCMinus <MINUSSource>

Selects the D- data source channel for 1000BASE-T1.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MINUSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source minus" on page 960

18.18.23.2 Filter

There are two commands for each parameter, that you can use for defining the 1000BASE-T1 settings.

For example, to set the *Frame type =MAC > Field =Data >00* value you can use one of the following commands:

- `SBUS:TBTO:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:TBTO:FILTer:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:TBTO:FILTer:CHKall....2252
SBUS<sb>:TBTO:FILTer:CLR....2253
SBUS<sb>:TBTO:FILTer:INVert....2253
SBUS<sb>:TBTO:FILTer:RST....2253
SBUS<sb>:TBTO:FILTer:BIT....2253
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT....2253
SBUS<sb>:TBTO:FILTer:DMAX....2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2254
SBUS<sb>:TBTO:FILTer:DMIN....2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2254
SBUS<sb>:TBTO:FILTer:DOPerator....2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2254
SBUS<sb>:TBTO:FILTer:ERENable....2255
SBUS<sb>:TBTO:FILTer:ERRor<n>:ENABle....2255
SBUS<sb>:TBTO:FILTer:FIENable....2255
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2255
SBUS<sb>:TBTO:FILTer:FRENable....2256
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:ENABle....2256
SBUS<sb>:TBTO:FILTer:IMAX....2256
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2256
SBUS<sb>:TBTO:FILTer:IMIN....2256
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2256
SBUS<sb>:TBTO:FILTer:IOPerator....2257
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2257

SBUS<sb>:TBTO:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 962

SBUS<sb>:TBTO:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 962

SBUS<sb>:TBTO:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 962

SBUS<sb>:TBTO:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 962

SBUS<sb>:TBTO:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:TBTO:FILTer:BIT? <Bit>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 963

SBUS<sb>:TBTO:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:TBTO:FILTer:DMAX? <Data>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 963

SBUS<sb>:TBTO:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:TBTO:FILTer:DMIN? <Data>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 963

SBUS<sb>:TBTO:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:TBTO:FILTer:DOPerator? <Operator>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 963

SBUS<sb>:TBTO:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:TBTO:FILTer:ERENable? <Enabler>
SBUS<sb>:TBTO:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 964

SBUS<sb>:TBTO:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:TBTO:FILTer:FIENable? <Enabler>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 963

SBUS<sb>:TBTO:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:TBTO:FILTer:FRENable? <Enabler>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on 1000BASE-T1 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

SBUS<sb>:TBTO:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:TBTO:FILTer:IMAX? <Data>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 963

SBUS<sb>:TBTO:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:TBTO:FILTer:IMIN? <Data>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 963

SBUS<sb>:TBTO:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:TBTO:FILTer:IOPerator? <Operator>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 963

18.18.23.3 Format

This section describes the commands to specify and query frame formats for the "1000B-T1" protocol.

SBUS<sb>:TBTO:FORMat:SELect ... 2258
SBUS<sb>:TBTO:FORMat:ADDFrame ... 2258
SBUS<sb>:TBTO:FORMat:LOAD ... 2258
SBUS<sb>:TBTO:FORMat:SAVE ... 2259
SBUS<sb>:TBTO:FORMat:CLR ... 2259
SBUS<sb>:TBTO:FORMat:FCOunt? ... 2259
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ADDField ... 2259
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLDCount? ... 2260
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:NAME ... 2260
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor ... 2260
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:TYPE ... 2261
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck ... 2261
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENValue ... 2261
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENCheck ... 2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENValue ... 2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Field ... 2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Field ... 2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Field ... 2262

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Value....2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Value....2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Value....2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME....2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor....2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2264
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2264
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2264
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2265
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2265
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2266
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2266
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2267
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2267
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA....2267
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB....2267

SBUS<sb>:TBTO:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 964

SBUS<sb>:TBTO:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 964

SBUS<sb>:TBTO:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 965

SBUS<sb>:TBTO:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 965

SBUS<sb>:TBTO:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 965

SBUS<sb>:TBTO:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 965

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 967

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 966

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 966

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 966

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 948

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 948

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 966

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 966

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 966

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 966

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 967

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 967

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 968

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 968

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 968

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 968

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 969

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 969

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 969

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 969

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)

- Parameter B: Offset

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range: -1E+20 to 1E+20 Increment: 1E-12 *RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 969

18.18.23.4 Software trigger

There are two commands for each parameter, that you can use for defining the 1000BASE-T1 settings.

For example, to set the *Frame type =MAC > Field =Data >00* value you can use one of the following commands:

- `TRIGger:SBSW:TBTO:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:TBTO:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:TBTO:CHKall....2269
TRIGger:SBSW:TBTO:CLR....2269
TRIGger:SBSW:TBTO:INVert....2269
TRIGger:SBSW:TBTO:RST....2269
TRIGger:SBSW:TBTO:FRENable....2269
TRIGger:SBSW:TBTO:FRAMe<fr>:ENABle....2269
TRIGger:SBSW:TBTO:BIT....2270
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:BIT....2270
TRIGger:SBSW:TBTO:DMAX....2270
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMAX....2270
TRIGger:SBSW:TBTO:DMIN....2270
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMIN....2270
TRIGger:SBSW:TBTO:DOPerator....2271
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator....2271
TRIGger:SBSW:TBTO:FIENable....2271
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:ENABle....2271
TRIGger:SBSW:TBTO:IMAX....2272
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMAX....2272
TRIGger:SBSW:TBTO:IMIN....2272
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMIN....2272

TRIGger:SBSW:TBTO:IOPerator....2272
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator....2272
TRIGger:SBSW:TBTO:ERENable....2273
TRIGger:SBSW:TBTO:ERRor<m>:ENABle....2273
SBUS<sb>:TBTO:SWTindex?....2273
SBUS<sb>:TBTO:SWTTime?....2273

TRIGger:SBSW:TBTO:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 971

TRIGger:SBSW:TBTO:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 971

TRIGger:SBSW:TBTO:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 971

TRIGger:SBSW:TBTO:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 971

TRIGger:SBSW:TBTO:FRENable <Frame>,<Enabler>
TRIGger:SBSW:TBTO:FRENable? <Enabler>
TRIGger:SBSW:TBTO:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 971

TRIGger:SBSW:TBTO:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:TBTO:BIT? <Bit>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 971

TRIGger:SBSW:TBTO:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:TBTO:DMAX? <Data>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 971

TRIGger:SBSW:TBTO:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:TBTO:DMIN? <Data>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 971

TRIGger:SBSW:TBTO:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:TBTO:DOPerator? <Operator>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 971

TRIGger:SBSW:TBTO:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:TBTO:FIENable? <Enabler>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 971

TRIGger:SBSW:TBTO:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:TBTO:IMAX? <Data>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 971

TRIGger:SBSW:TBTO:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:TBTO:IMIN? <Data>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 971

TRIGger:SBSW:TBTO:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:TBTO:IOPerator? <Operator>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 971

TRIGger:SBSW:TBTO:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:TBTO:ERENable? <Enabler>
TRIGger:SBSW:TBTO:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 973

SBUS<sb>:TBTO:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.23.5 Decode results

SBUS<sb>:TBTO:FCOunt? 2274
SBUS<sb>:TBTO:FRAMe<fr>:FLDCount? 2274
SBUS<sb>:TBTO:FRAMe<fr>:BITRate? 2275
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:FVALue? 2275
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:LABel? 2275
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:STATe? 2276
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:VALue? 2276
SBUS<sb>:TBTO:FRAMe<fr>:CRC? 2277
SBUS<sb>:TBTO:FRAMe<fr>:DATA? 2277
SBUS<sb>:TBTO:FRAMe<fr>:DTADdress? 2277
SBUS<sb>:TBTO:FRAMe<fr>:DTSYmbol? 2278
SBUS<sb>:TBTO:FRAMe<fr>:FCRC? 2278
SBUS<sb>:TBTO:FRAMe<fr>:FDATa? 2278
SBUS<sb>:TBTO:FRAMe<fr>:FDTaddress? 2278
SBUS<sb>:TBTO:FRAMe<fr>:FSRaddress? 2279
SBUS<sb>:TBTO:FRAMe<fr>:FTPLenth? 2279
SBUS<sb>:TBTO:FRAMe<fr>:SRADdress? 2279
SBUS<sb>:TBTO:FRAMe<fr>:SRSYmbol? 2279
SBUS<sb>:TBTO:FRAMe<fr>:STARt? 2280
SBUS<sb>:TBTO:FRAMe<fr>:STATus? 2280
SBUS<sb>:TBTO:FRAMe<fr>:STOP? 2281
SBUS<sb>:TBTO:FRAMe<fr>:TPLenth? 2281
SBUS<sb>:TBTO:FRAMe<fr>:TYPE? 2281

SBUS<sb>:TBTO:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count> Total number of fields.

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | ERRFEC | ERRZERO | ERROOR | ERRCRC | INComplete

OK
Valid frame.

ERRFEC
Reed-Solomon forward error correction.

ERRZERO
Zero ternary symbol pair error.

ERROOR
Values are out of range error.

ERRCRC
Erroneous frame due to CRC error.

INComplete
Frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:CRC?

Returns the CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:DATA?

Returns the data for the selected frame in comma separated values. Corresponds to the Data column in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example: Query: `SBUS:TBTO:FRAMe1:DATA?`
Return string, if there are 10 bytes:
`10,45,87,123,0,54,67,1,0,9,0`

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:DTADdress?

Returns the destination address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:DTSYmbol?

Returns the destination symbols of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FCRC?

Returns the formatted CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRC>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FDATa?

Returns the formatted data for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedData>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FDTaddress?

Returns the formatted destination address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedDestAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FSRaddress?

Returns the formatted source address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedSrcAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FTPLenth?

Returns the value of type /length field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedTypLenth>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:SRADdress?

Returns the source address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SourceAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:SRSYmbol?

Returns the source symbols of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SrcSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | ERRFEC | ERRZERO | ERROOR | ERRCRC | INComplete

OK
Valid frame.

ERRFEC
Reed-Solomon forward error correction.

ERRZERO
Zero ternary symbol pair error.

ERROOR
Values are out of range error.

ERRCRC
Erroneous frame due to CRC error.

INComplete
Frame is inclompete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:STOP?

Returns the end time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:TPLenth?

Returns the value of the type / length field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<TypeLenth> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:TYPE?

Returns the type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> IDLE | MAC | OAM | RSFEC | BH | CTLADDR | CTLCODE | ZEROTSYM | UNKNown

IDLE
IDLE frame, used for clock synchronization

MAC
MAC frame, contains information that defines how to go about transmitting and receiving frames

OAM
Operations, administration, and maintenance frame

RSFEC
Reed Solomon forward error correction check frame

BH
Block header frame

CTLADDR
Control address frame

CTLCODE
Control code frame

ZEROTSYM
Zero terrnary symbol frame

UNKNown
No meaningful frame can be determined.

*RST: MAC

Usage: Query only
Asynchronous command

18.18.24 USB 1.1 (option R&S MXO5-K570)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2282
- Filter....2285
- Format....2290
- Software trigger....2300
- Decode results....2306

18.18.24.1 Configuration

SBUS<sb>:USBone:DPLus:SOURce....2283
SBUS<sb>:USBone:DMINus:SOURce....2283
SBUS<sb>:USBone:MODE....2283
SBUS<sb>:USBone:DPLus:THReshold....2283
SBUS<sb>:USBone:DPLus:HYSTeresis....2284
SBUS<sb>:USBone:DMINus:THReshold....2284
SBUS<sb>:USBone:DMINus:HYSTeresis....2284
SBUS<sb>:USBone:POSition....2284
SBUS<sb>:USBone:SCALe....2285

SBUS<sb>:USBone:DPLus:SOURce <DPlusSource>

Sets the source channel to which the D+ data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPlusSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "D+ source, D- source" on page 982

SBUS<sb>:USBone:DMINus:SOURce <DMinusSource>

Sets the source channel to which the D- data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DMinusSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "D+ source, D- source" on page 982

SBUS<sb>:USBone:MODE <Mode>

Selects the low speed or full speed variant of the USB 1.1 protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> USBLow | USBFull
*RST: USBLow

Usage: Asynchronous command

Manual operation: See "Speed variant" on page 982

SBUS<sb>:USBone:DPLus:THReshold <DPlusThreshold>

Sets a threshold value for the D+ line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPlusThreshold>

Usage: Asynchronous command

Manual operation: See "D+ threshold" on page 984

SBUS<sb>:USBone:DPLus:HYSTeresis <DPlusHyst>

Sets a hysteresis value for the D+ line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPlusHyst>

Usage: Asynchronous command

Manual operation: See "D+ hysteresis" on page 984

SBUS<sb>:USBone:DMINus:THReshold <DMinusThres>

Sets a threshold value for the D- line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DMinusThres>

Usage: Asynchronous command

Manual operation: See "D- threshold" on page 984

SBUS<sb>:USBone:DMINus:HYSTeresis <DMinusHyst>

Sets a hysteresis value for the D- line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DMinusHyst>

Usage: Asynchronous command

Manual operation: See "D- hysteresis" on page 984

SBUS<sb>:USBone:POSition <Position>

Sets the vertical position of the USB 1.1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position> Range: 1 to 100

Usage: Asynchronous command

SBUS<sb>:USBone:SCALe <Scale>

Sets the vertical scale of the USB 1.1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale> Range: 1 to 5

Usage: Asynchronous command

18.18.24.2 Filter

There are two commands for each parameter, that you can use for defining the USB 1.1 settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `SBUS:USBone:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:USBone:FILTer:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:USBone:FILTer:CHKall ... 2286
SBUS<sb>:USBone:FILTer:CLR ... 2286
SBUS<sb>:USBone:FILTer:INVert ... 2286
SBUS<sb>:USBone:FILTer:RST ... 2286
SBUS<sb>:USBone:FILTer:FRENable ... 2287
SBUS<sb>:USBone:FILTer:FRAMe<fr>:ENABle ... 2287
SBUS<sb>:USBone:FILTer:DMAX ... 2287
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 2287
SBUS<sb>:USBone:FILTer:DMIN ... 2287
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 2287
SBUS<sb>:USBone:FILTer:DOPerator ... 2288
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 2288
SBUS<sb>:USBone:FILTer:ERENable ... 2288
SBUS<sb>:USBone:FILTer:ERRor<n>:ENABle ... 2288
SBUS<sb>:USBone:FILTer:IMAX ... 2288
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 2288
SBUS<sb>:USBone:FILTer:IMIN ... 2289
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 2289
SBUS<sb>:USBone:FILTer:IOPerator ... 2289
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 2289
SBUS<sb>:USBone:FILTer:BIT ... 2290

SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:BIT 2290
SBUS<sb>:USBone:FILTer:FIENable 2290
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2290

SBUS<sb>:USBone:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 986

SBUS<sb>:USBone:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 986

SBUS<sb>:USBone:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 986

SBUS<sb>:USBone:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 986

SBUS<sb>:USBone:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:USBone:FILTer:FRENable? <Enabler>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 986

SBUS<sb>:USBone:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:USBone:FILTer:DMAX? <Data>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 987

SBUS<sb>:USBone:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:USBone:FILTer:DMIN? <Data>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 987

SBUS<sb>:USBone:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:USBone:FILTer:DOPerator? <Operator>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 987

SBUS<sb>:USBone:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:USBone:FILTer:ERENable? <Enabler>
SBUS<sb>:USBone:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 988

SBUS<sb>:USBone:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:USBone:FILTer:IMAX? <Data>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:USBone:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 987

SBUS<sb>:USBone:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:USBone:FILTer:IMIN? <Data>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 987

SBUS<sb>:USBone:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:USBone:FILTer:IOPerator? <Operator>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 987

SBUS<sb>:USBone:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:USBone:FILTer:BIT? <Bit>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 987

SBUS<sb>:USBone:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:USBone:FILTer:FIENable? <Enabler>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 987

18.18.24.3 Format

This section describes the commands to specify and query frame formats for the "USB1.1" protocol.

SBUS<sb>:USBone:FORMat:SELect 2291
SBUS<sb>:USBone:FORMat:ADDFrame 2291
SBUS<sb>:USBone:FORMat:LOAD 2292
SBUS<sb>:USBone:FORMat:SAVE 2292
SBUS<sb>:USBone:FORMat:CLR 2292
SBUS<sb>:USBone:FORMat:FCOunt? 2292
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ADDField 2293
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLDCount? 2293

SBUS<sb>:USBone:FORMat:FRAMe<fr>:NAME ... 2293
SBUS<sb>:USBone:FORMat:FRAMe<fr>:COLor ... 2293
SBUS<sb>:USBone:FORMat:FRAMe<fr>:TYPE ... 2294
SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENCheck ... 2294
SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENValue ... 2294
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Field ... 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Field ... 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Field ... 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Value ... 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Value ... 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Value ... 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2296
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2296
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2296
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2297
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2297
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2298
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2298
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2299
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2299
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 2299
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2300
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2300

SBUS<sb>:USBone:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 988

SBUS<sb>:USBone:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 988

SBUS<sb>:USBone:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 989

SBUS<sb>:USBone:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 989

SBUS<sb>:USBone:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 989

SBUS<sb>:USBone:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 989

SBUS<sb>:USBone:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 991

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 990

SBUS<sb>:USBone:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 990

SBUS<sb>:USBone:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 990

SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<ChkDatlgth> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 990

SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 990

SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 990

SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 990

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 991

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 991

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 991

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 992

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 992

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 992

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 992

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 993

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 993

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 993

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 993

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 993

18.18.24.4 Software trigger

There are two commands for each parameter, that you can use for defining the USB 1.1 settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `TRIGger:SBSW:USBone:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `STRIGger:SBSW:USBone:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:USBone:CHKall....2301
TRIGger:SBSW:USBone:CLR....2301
TRIGger:SBSW:USBone:INVert....2301

TRIGger:SBSW:USBone:RST 2302
TRIGger:SBSW:USBone:FRENable 2302
TRIGger:SBSW:USBone:FRAMe<fr>:ENABle 2302
TRIGger:SBSW:USBone:BIT 2302
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:BIT 2302
TRIGger:SBSW:USBone:DMAX 2302
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMAX 2302
TRIGger:SBSW:USBone:DMIN 2303
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMIN 2303
TRIGger:SBSW:USBone:DOPerator 2303
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator 2303
TRIGger:SBSW:USBone:FIENable 2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:ENABle 2304
TRIGger:SBSW:USBone:IMAX 2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMAX 2304
TRIGger:SBSW:USBone:IMIN 2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMIN 2304
TRIGger:SBSW:USBone:IOPerator 2305
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator 2305
TRIGger:SBSW:USBone:ERENable 2305
TRIGger:SBSW:USBone:ERRor<m>:ENABle 2305
SBUS<sb>:USBone:SWTindex? 2305
SBUS<sb>:USBone:SWTTime? 2306

TRIGger:SBSW:USBone:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 995

TRIGger:SBSW:USBone:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 995

TRIGger:SBSW:USBone:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 995

TRIGger:SBSW:USBone:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 995

TRIGger:SBSW:USBone:FRENable <Frame>,<Enabler>
TRIGger:SBSW:USBone:FRENable? <Enabler>
TRIGger:SBSW:USBone:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 995

TRIGger:SBSW:USBone:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:USBone:BIT? <Bit>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 996

TRIGger:SBSW:USBone:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:USBone:DMAX? <Data>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 996

TRIGger:SBSW:USBone:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:USBone:DMIN? <Data>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 996

TRIGger:SBSW:USBone:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:USBone:DOPerator? <Operator>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 996

TRIGger:SBSW:USBone:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:USBone:FIENable? <Enabler>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 996

TRIGger:SBSW:USBone:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:USBone:IMAX? <Data>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 996

TRIGger:SBSW:USBone:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:USBone:IMIN? <Data>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 996

TRIGger:SBSW:USBone:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:USBone:IOPerator? <Operator>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 996

TRIGger:SBSW:USBone:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:USBone:ERENable? <Enabler>
TRIGger:SBSW:USBone:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:

<m> Index of the error

Parameters:

<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 997

SBUS<sb>:USBone:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.24.5 Decode results

SBUS<sb>:USBone:FCOunt? 2307
SBUS<sb>:USBone:FRAMe<fr>:ADDRess? 2307
SBUS<sb>:USBone:FRAMe<fr>:FLDCount? 2307
SBUS<sb>:USBone:FRAMe<fr>:BITRate? 2307
SBUS<sb>:USBone:FRAMe<fr>:DATA? 2308
SBUS<sb>:USBone:FRAMe<fr>:STARt? 2308
SBUS<sb>:USBone:FRAMe<fr>:STATus? 2308
SBUS<sb>:USBone:FRAMe<fr>:STOP? 2309
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:FVALue? 2309
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:LABel? 2310
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:STATe? 2310
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:VALue? 2311
SBUS<sb>:USBone:FRAMe<fr>:CRC? 2311
SBUS<sb>:USBone:FRAMe<fr>:FADDress? 2311
SBUS<sb>:USBone:FRAMe<fr>:FCRC? 2312
SBUS<sb>:USBone:FRAMe<fr>:ENDPoint? 2312
SBUS<sb>:USBone:FRAMe<fr>:FRNumber? 2312
SBUS<sb>:USBone:FRAMe<fr>:PID? 2313
SBUS<sb>:USBone:FRAMe<fr>:PIDName? 2313
SBUS<sb>:USBone:FRAMe<fr>:TYPE? 2313

SBUS<sb>:USBone:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus
Selects the serial bus.

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:BITRate?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:DATA?

Returns a comma-separated list of values, where the first value is the number of data bytes in the frame, and the remaining values are this number of data bytes.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example:
```
SBUS:USB:FRAMe2:DATA?
13,7,7,8,9,16,17,18,19,20,21,21,22,255
```
The first value, here 13, is the number of data bytes to follow.

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | PID | CRC | LENGth | BTST | INComplete

OK
The frame is valid.

PID
A packet identifier error signifies that the integrity check has failed, see Packet structure > "PID" in Section 14.23.1, "USB protocol basics", on page 976. The 8-bit PID is invalid, if its 4 least significant bits (LSB) are not the complement of its 4 most significant bits (MSB).

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of frame.

BTST
Bit stuffing error occurred.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field for the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | PID | CRC | LENGth | BTST | INComplete

OK
The field has no error, it is valid.

PID
A packet identifier error signifies that the integrity check has failed, see Packet structure > "PID" in Section 14.23.1, "USB protocol basics", on page 976. The 8-bit PID is invalid, if its 4 least significant bits (LSB) are not the complement of its 4 most significant bits (MSB).

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of the field.

BTST
Bit stuffing error occurred.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:CRC?

Returns the cyclic redundancy check (CRC) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRCValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FADDress?

Returns the formatted address for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedAddrVal>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FCRC?

Returns the formatted CRC value for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRCVal>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:ENDPoint?

Returns the endpoint for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Endpoint> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FRNumber?

Returns the frame number for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameNumber> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:PID?

Returns the packet identifier for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Command> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:PIDName?

Returns the name of the packet identifier for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCmd>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> UNKNown | DATA | TOKen | SOF | HSHK | PERR

Unknown, data, token, start of frame, handshake, PRE/ERR frame (with PID=0x3C meaning either preamble or error)

*RST: UNKNown

Usage: Query only
Asynchronous command

18.18.25 USB 2.0 (option R&S MXO5-K570)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2314
- Filter....2315
- Format....2321
- Software trigger....2332
- Decode results....2337

18.18.25.1 Configuration

SBUS<sb>:USBHspeed:SOURce....2314
SBUS<sb>:USBHspeed:THReshold:UPPer....2314
SBUS<sb>:USBHspeed:THReshold:LOWer....2314
SBUS<sb>:USBHspeed:THReshold:HYSTeresis....2315
SBUS<sb>:USBHspeed:POSition....2315
SBUS<sb>:USBHspeed:SCALe....2315

SBUS<sb>:USBHspeed:SOURce <Source>

Selects the differential signal source to which the data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Differential source" on page 1000

SBUS<sb>:USBHspeed:THReshold:UPPer <Upper Thres>

Sets the upper threshold value for the differential signal on the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Upper Thres>

Usage: Asynchronous command

Manual operation: See "Upper threshold" on page 1001

SBUS<sb>:USBHspeed:THReshold:LOWer <Lower Thres>

Sets the lower threshold value for the differential signal on the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Lower Thres>

Usage: Asynchronous command

Manual operation: See "Lower threshold" on page 1002

SBUS<sb>:USBHspeed:THReshold:HYSTeresis <Hysteresis>

Sets a hysteresis value for the differential signal on the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 1002

SBUS<sb>:USBHspeed:POSition <Position>

Sets the vertical position of the USB 2.0 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position> Range: 1 to 100

Usage: Asynchronous command

SBUS<sb>:USBHspeed:SCALe <Scale>

Sets the vertical scale of the USB 2.0 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale> Range: 1 to 5

Usage: Asynchronous command

18.18.25.2 Filter

There are two commands for each parameter, that you can use for defining the USB 2.0 settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `SBUS:USBHspeed:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:USBHspeed:FILTer:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:USBHspeed:FILTer:CHKall....2316
SBUS<sb>:USBHspeed:FILTer:CLR....2316
SBUS<sb>:USBHspeed:FILTer:INVert....2317
SBUS<sb>:USBHspeed:FILTer:RST....2317
SBUS<sb>:USBHspeed:FILTer:FRENable....2317
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:ENABle....2317
SBUS<sb>:USBHspeed:FILTer:DMAX....2317
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2317
SBUS<sb>:USBHspeed:FILTer:DMIN....2318
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2318
SBUS<sb>:USBHspeed:FILTer:DOPerator....2318
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2318
SBUS<sb>:USBHspeed:FILTer:ERENable....2319
SBUS<sb>:USBHspeed:FILTer:ERRor<n>:ENABle....2319
SBUS<sb>:USBHspeed:FILTer:IMAX....2319
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2319
SBUS<sb>:USBHspeed:FILTer:IMIN....2319
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2319
SBUS<sb>:USBHspeed:FILTer:IOPerator....2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2320
SBUS<sb>:USBHspeed:FILTer:BIT....2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:BIT....2320
SBUS<sb>:USBHspeed:FILTer:FIENable....2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2320

SBUS<sb>:USBHspeed:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 1003

SBUS<sb>:USBHspeed:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 1003

SBUS<sb>:USBHspeed:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 1003

SBUS<sb>:USBHspeed:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 1003

SBUS<sb>:USBHspeed:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:USBHspeed:FILTer:FRENable? <Enabler>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 1004

SBUS<sb>:USBHspeed:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:USBHspeed:FILTer:DMAX? <Data>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 1004

SBUS<sb>:USBHspeed:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:USBHspeed:FILTer:DMIN? <Data>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 1004

SBUS<sb>:USBHspeed:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:USBHspeed:FILTer:DOPerator? <Operator>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 1004

SBUS<sb>:USBHspeed:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:USBHspeed:FILTer:ERENable? <Enabler>
SBUS<sb>:USBHspeed:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 1005

SBUS<sb>:USBHspeed:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:USBHspeed:FILTer:IMAX? <Data>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 1004

SBUS<sb>:USBHspeed:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:USBHspeed:FILTer:IMIN? <Data>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 1004

SBUS<sb>:USBHspeed:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:USBHspeed:FILTer:IOPerator? <Operator>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 1004

SBUS<sb>:USBHspeed:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:USBHspeed:FILTer:BIT? <Bit>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 1004

SBUS<sb>:USBHspeed:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:USBHspeed:FILTer:FIENable? <Enabler>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<CondEnabler>	OFF | ON *RST: OFF
Usage:	Asynchronous command
Manual operation:	See "Edit" on page 1004

18.18.25.3 Format

This section describes the commands to specify and query frame formats for the "USB2.0" protocol.

SBUS<sb>:USBHspeed:FORMat:SELect....2322
SBUS<sb>:USBHspeed:FORMat:ADDFrame....2322
SBUS<sb>:USBHspeed:FORMat:LOAD....2322
SBUS<sb>:USBHspeed:FORMat:SAVE....2322
SBUS<sb>:USBHspeed:FORMat:CLR....2323
SBUS<sb>:USBHspeed:FORMat:FCOunt?....2323
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ADDField....2323
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLDCount?....2323
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:NAME....2324
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:COLor....2324
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:TYPE....2324
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck....2325
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENValue....2325
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENCheck....2325
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENValue....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Field....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Field....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Field....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Value....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Value....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Value....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:NAME....2327
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:COLor....2327
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2327
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2328
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2328
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2328
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2329
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2329
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2330
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2330
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2331

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARA....2331
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARB....2331

SBUS<sb>:USBHspeed:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 1006

SBUS<sb>:USBHspeed:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 1006

SBUS<sb>:USBHspeed:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 1007

SBUS<sb>:USBHspeed:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 1007

SBUS<sb>:USBHspeed:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 1007

SBUS<sb>:USBHspeed:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 1007

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 1008

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 1007

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 1007

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 1007

SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<sb> 1..4

<fr> *

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 767

SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength> Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 767

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENCheck <ChkDatlgth>

Enables checking of the data length for the selected frame format. If enabled, only frames with the specified data length match the format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ChkDatlgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check data length" on page 1007

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENValue <DataLength>

Specifies the data length for the selected frame format. This setting is effective only if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENCheck` = `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<DataLength>
Range: 0 to 256
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data length" on page 1007

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 1008

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 1008

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 1009

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 1009

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 1009

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 1009

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 1009

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first
*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 1010

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 1010

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 1010

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 1010

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 1011

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 1011

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 1011

18.18.25.4 Software trigger

There are two commands for each parameter, that you can use for defining the USB 2.0 settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `TRIGger:SBSW:USBHspeed:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `STRIGger:SBSW:USBHspeed:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:USBHspeed:CHKall....2332
TRIGger:SBSW:USBHspeed:CLR....2333
TRIGger:SBSW:USBHspeed:INVert....2333
TRIGger:SBSW:USBHspeed:RST....2333
TRIGger:SBSW:USBHspeed:FRENable....2333
TRIGger:SBSW:USBHspeed:FRAMe<fr>:ENABle....2333
TRIGger:SBSW:USBHspeed:BIT....2333
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:BIT....2333
TRIGger:SBSW:USBHspeed:DMAX....2334
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMAX....2334
TRIGger:SBSW:USBHspeed:DMIN....2334
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMIN....2334
TRIGger:SBSW:USBHspeed:DOPerator....2335
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator....2335
TRIGger:SBSW:USBHspeed:FIENable....2335
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:ENABle....2335
TRIGger:SBSW:USBHspeed:IMAX....2335
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMAX....2335
TRIGger:SBSW:USBHspeed:IMIN....2336
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMIN....2336
TRIGger:SBSW:USBHspeed:IOPerator....2336
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IOPerator....2336
TRIGger:SBSW:USBHspeed:ERENable....2336
TRIGger:SBSW:USBHspeed:ERRor<m>:ENABle....2336
SBUS<sb>:USBHspeed:SWTindex?....2337
SBUS<sb>:USBHspeed:SWTTime?....2337

TRIGger:SBSW:USBHspeed:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 1013

TRIGger:SBSW:USBHspeed:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 1013

TRIGger:SBSW:USBHspeed:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 1013

TRIGger:SBSW:USBHspeed:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 1013

TRIGger:SBSW:USBHspeed:FRENable <Frame>,<Enabler>
TRIGger:SBSW:USBHspeed:FRENable? <Enabler>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 1013

TRIGger:SBSW:USBHspeed:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:USBHspeed:BIT? <Bit>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 1014

TRIGger:SBSW:USBHspeed:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:USBHspeed:DMAX? <Data>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 1014

TRIGger:SBSW:USBHspeed:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:USBHspeed:DMIN? <Data>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 1014

TRIGger:SBSW:USBHspeed:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:USBHspeed:DOPerator? <Operator>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 1014

TRIGger:SBSW:USBHspeed:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:USBHspeed:FIENable? <Enabler>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 1014

TRIGger:SBSW:USBHspeed:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:USBHspeed:IMAX? <Data>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 1014

TRIGger:SBSW:USBHspeed:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:USBHspeed:IMIN? <Data>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 1014

TRIGger:SBSW:USBHspeed:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:USBHspeed:IOPerator? <Operator>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 1014

TRIGger:SBSW:USBHspeed:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:USBHspeed:ERENable? <Enabler>
TRIGger:SBSW:USBHspeed:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 1015

SBUS<sb>:USBHspeed:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.25.5 Decode results

SBUS<sb>:USBHspeed:FCOunt? 2338
SBUS<sb>:USBHspeed:FRAMe<fr>:ADDRess? 2338
SBUS<sb>:USBHspeed:FRAMe<fr>:FLDCount? 2339
SBUS<sb>:USBHspeed:FRAMe<fr>:BITRate? 2339
SBUS<sb>:USBHspeed:FRAMe<fr>:DATA? 2339
SBUS<sb>:USBHspeed:FRAMe<fr>:STARt? 2340

SBUS<sb>:USBHspeed:FRAMe<fr>:STATus? 2340
SBUS<sb>:USBHspeed:FRAMe<fr>:STOP? 2341
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:FVALue? 2341
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:LABel? 2341
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:STATe? 2341
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:VALue? 2342
SBUS<sb>:USBHspeed:FRAMe<fr>:CRC? 2343
SBUS<sb>:USBHspeed:FRAMe<fr>:FADDress? 2343
SBUS<sb>:USBHspeed:FRAMe<fr>:FCRC? 2343
SBUS<sb>:USBHspeed:FRAMe<fr>:ENDPoint? 2343
SBUS<sb>:USBHspeed:FRAMe<fr>:FRNumber? 2344
SBUS<sb>:USBHspeed:FRAMe<fr>:PID? 2344
SBUS<sb>:USBHspeed:FRAMe<fr>:PIDName? 2344
SBUS<sb>:USBHspeed:FRAMe<fr>:TYPE? 2345
SBUS<sb>:USBHspeed:FRAMe<fr>:SPET? 2345
SBUS<sb>:USBHspeed:FRAMe<fr>:SPEU? 2346
SBUS<sb>:USBHspeed:FRAMe<fr>:SPPort? 2346
SBUS<sb>:USBHspeed:FRAMe<fr>:SPS? 2346
SBUS<sb>:USBHspeed:FRAMe<fr>:SPSC? 2347

SBUS<sb>:USBHspeed:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus
Selects the serial bus.

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:BITRate?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Frame calculated bit rate>
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:DATA?

Returns a comma-separated list of values, where the first value is the number of data bytes in the frame, and the remaining values are this number of data bytes.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example:
```
SBUS:USBH:FRAMe3:DATA?
5,24,156,75,62,230
```
The first value, here 5, is the number of data bytes to follow.

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | PID | CRC | LENGth | BTST | INComplete

OK
The frame is valid.

PID
A packet identifier error signifies that the integrity check has failed, see Packet structure > "PID" in Section 14.23.1, "USB protocol basics", on page 976. The 8-bit PID is invalid, if its 4 least significant bits (LSB) are not the complement of its 4 most significant bits (MSB).

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of frame.

BTST
Bit stuffing error occurred.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | PID | CRC | LENGth | BTST | INComplete

OK
The field has no error, it is valid.

PID
A packet identifier error signifies that the integrity check has failed, see Packet structure > "PID" in Section 14.23.1, "USB protocol basics", on page 976. The 8-bit PID is invalid, if its 4 least significant bits (LSB) are not the complement of its 4 most significant bits (MSB).

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of the field.

BTST
Bit stuffing error occurred.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:CRC?

Returns the cyclic redundancy check (CRC) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRCValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FADDress?

Returns the formatted address for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedAddrVal>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FCRC?

Returns the formatted CRC value for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRCVal>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:ENDPoint?

Returns the endpoint for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Endpoint> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FRNumber?

Returns the frame number for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameNumber> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:PID?

Returns the packet identifier for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Command> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:PIDName?

Returns the name of the packet identifier for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCmd>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> UNKNown | DATA | TOKen | SOF | HSHK | PERR | SPLit | PING | RSVD

Unknown, data, token, start of frame, handshake, PRE/ERR frame (with PID=0x3C meaning either preamble or error), split frame, ping response, reserved

*RST: UNKNown

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPET?

Returns the content of the "SPLIT packet transaction Endpoint Type" field of the selected frame. This 2-bit field tells the USB hub, which split-transaction-state machine to use:

- 00 Control
- 01 Isochronous
- 10 Bulk
- 11 Interrupt

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Split ET> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPEU?

Returns the content of the "SPLIT packet transaction E/U" field (end or unused) of the selected frame. This single-bit field, combined with the S field (see SBUS<sb>:USBHspeed:FRAMe<fr>:SPS?), describes the type of "payload continuation encoding" used for start-split packets. For complete-split packets, it is unused.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Split E/U> Range: 0 to 65535
Increment: 1
*RST: 0

Example:

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPPort?

Returns the content of the "SPLIT packet transaction Port" field of the selected frame. This field is a 7-bit word that contains the port number of the target hub, for which this split transaction is destined.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Split Port> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPS?

Returns the content of the "SPLIT packet transaction S" field of the selected frame. This single-bit field indicates the speed for the interrupt or control transaction announced by this SPLIT packet: 0 = Full speed, 1 = Low speed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Split S> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPSC?

Returns the content of the "SPLIT packet transaction Start / Complete" field of the selected frame. This single-bit field indicates the SPLIT token: 0 = start-split transaction, 1 = complete-split transaction.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Split SC> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.19 Logic analysis on digital channels

This section describes the remote commands of MSO option R&S MXO5-B1.

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

18.19.1 Digital channels

Except for `DIGital<m>:PROBe<ch>[:ENABle]`, all other `DIGital:` commands affect only the settings of the first MSO bus (Logic1). The settings of all other logic groups (Logic 2, 3,4) remain unchanged.

DIGital<m>:PROBe<ch>[:ENABle]?....2348
DIGital<m>:HYSTeresis....2348
DIGital<m>:LABel....2349
DIGital<m>:SIZE....2349
DIGital<m>:SKEW....2349
DIGital<m>:STATe....2349
DIGital<m>:TECHnology....2350
DIGital<m>:THCoupling....2350
DIGital<m>:THReshold....2350

DIGital<m>:PROBe<ch>[:ENABle]?

Enables one digital probe.

Suffix:

<m> 0 to 15, index of the logic channel
Digital channels 0 to 7 belong to probe 1, and channels 8 to 15 belong to probe 2.

<ch> 1..2
Index of the logic probe (pod)

Return values:

<ProbeConnected> OFF | ON

Usage: Query only
Asynchronous command

DIGital<m>:HYSTeresis <Hysteresis>

Sets the hysteresis for the indicated digital channel.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the hysteresis for all buses with `PBUS<pb>:HYSTeresis<n>`.

Suffix:

<m> 0 to 15, index of the logic channel

Parameters:

<Hysteresis> MAXimum | ROBust | NORMal

MAXimum
Maximum value that is possible and useful for the signal and its settings, to be used for noisy signals.

ROBust
Different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system, to be used for very noisy signals.

NORMal
Small value suitable for the signal and its settings, to be used for clean signals.

Usage: Asynchronous command

DIGital<m>:LABel <Label>

Sets a name for the indicated digital channel. The name is displayed in the diagram.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the label for all buses with `PBUS<pb>:BIT<n>:LABel`

Suffix:
<m> 0 to 15, index of the logic channel

Parameters:
<Label> String containing the channel name

Usage: Asynchronous command

DIGital<m>:SIZE <Size>

Sets the vertical size for the channel group to which the indicated digital channel belongs.

Suffix:
<m> 0..15
Number of the digital channel.
Channel groups: 0..3; 4..7; 8..11; 12..15

Parameters:
<Size> Number of vertical divisions per logic channel
Range: 0.2 to 10

Usage: Asynchronous command

DIGital<m>:SKEW <Skew>

Sets an individual delay for each digital channel to time-align it with other digital channels. The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the skew for all buses with `PBUS<pb>:BIT<n>:SKEW`.

Suffix:
<m> 0 to 15, index of the logic channel

Parameters:
<Skew>

Usage: Asynchronous command

DIGital<m>:STATe <State>

Enables or disables the indicated digital channel, displays it, and enables the Logic 1 if the bus was disabled.

If another active bus already uses the selected digital channel, the instrument disables the other bus to avoid conflicts.

For Logic 1, the `DIGital<m>:STATe` command has the same effect as `PBUS<pb>:BIT<n>[:STATe]`. To enable digital channels for buses 2, 3 and 4, use the `PBUS<pb>:BIT<n>[:STATe]` command.

Suffix:
<m> 0 to 15, index of the logic channel

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Active logic channel" on page 1020

DIGital<m>:TECHnology <Technology>

Selects the threshold voltage for various types of integrated circuits and applies it to all digital channels.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the technology value for all buses with `PBUS<pb>:TECHnology`.

Suffix:
<m> 0..15
The suffix is irrelevant.

Parameters:
<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual
See `PBUS<pb>:TECHnology`.

Usage: Asynchronous command

DIGital<m>:THCoupling <State>

Sets the threshold and the hysteresis for all digital channels of Logic1 to the same value.

Suffix:
<m> Irrelevant, omit the suffix.

Parameters:
<State> OFF | ON

Usage: Asynchronous command

DIGital<m>:THReshold <Value>

Sets the logical threshold for the channel group to which the indicated digital channel belongs.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the threshold for all buses with `PBUS<pb>:TECHnology` or `PBUS<pb>:THReshold<n>`

See also: `DIGital<m>:THCoupling` on page 2350

Suffix:
<m> 0..15
Number of the digital channel.
Channel groups: 0..3; 4..7; 8..11; 12..15

Parameters:
<Value>

Usage: Asynchronous command

18.19.2 Logic configuration

The following commands configure the four logic groups (parallel buses).

PBUS<pb>:BIT<n>:LABel....2351
PBUS<pb>:BIT<n>:SKEW....2352
PBUS<pb>:BIT<n>[:STATe]....2352
PBUS<pb>:CLEar....2353
PBUS<pb>:CLOCk....2353
PBUS<pb>:CLON....2353
PBUS<pb>:CLSLope....2353
PBUS<pb>:DECTable:SHOW....2354
PBUS<pb>:DECTable:COUNt?....2354
PBUS<pb>:DECTable:DATA?....2354
PBUS<pb>:DIGSignals:POSition....2355
PBUS<pb>:DIGSignals:SCALe....2355
PBUS<pb>:DISPlay:SHBU....2355
PBUS<pb>:DISPlay:SHDI....2355
PBUS<pb>:HYSTeresis<n>....2356
PBUS<pb>:POSition....2356
PBUS<pb>:SCALe....2357
PBUS<pb>:SKEW....2357
PBUS<pb>:STATe....2357
PBUS<pb>:TECHnology....2358
PBUS<pb>:THCoupling....2358
PBUS<pb>:THReshold<n>....2358

PBUS<pb>:BIT<n>:LABel <Label>

Sets a name for the indicated digital channel. The name is displayed in the diagram.

Suffix:
<pb> 1 to 4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:

<Label> String containing the channel name

Usage: Asynchronous command

PBUS<pb>:BIT<n>:SKEW <Skew>

Sets an individual delay for each digital channel to time-align it with other digital channels.

The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables. The skew between the probe boxes of the digital channels and the probe connectors of the analog channels is automatically aligned by the instrument.

Suffix:

<pb> 1 to 4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:

<Skew>
Range: -2E-07 to 2E-07
Increment: 2E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "D0-D15" on page 1024

PBUS<pb>:BIT<n>[:STATe] <Assigned>

Enables the selected logic group. The corresponding signal icon appears on the signal bar.

If another active bus already uses the selected digital channel, the instrument disables the other bus to avoid conflicts.

Suffix:

<pb> 1 to 4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:

<Assigned> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Active logic channel" on page 1020

PBUS<pb>:CLEar

Removes all assigned digital channels from the bus.

Suffix:
<pb> 1 to 4, index of the logic group

Usage: Setting only
Asynchronous command

PBUS<pb>:CLOCk <ClockSource>

Selects the digital channel used as clock.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<ClockSource> D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15
Clock channel
*RST: D0

Usage: Asynchronous command

Manual operation: See "Clock source" on page 1022

PBUS<pb>:CLON <Clocked>

Defines if the bus is a clocked bus - one of the digital channels serves as the clock of the bus.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<Clocked> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Bus clocked" on page 1022

PBUS<pb>:CLSLope <ClockSlope>

Selects the slope of the clock signal at which all digital channels of the bus are analyzed.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<ClockSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock slope" on page 1022

PBUS<pb>:DECTable:SHOW <DecodeTable>

If enabled, a result table is shown with decoded values and corresponding points in time of the bus signal. Each clock edge corresponds to one row in the table.

The decode table is only available for clocked buses to check the data words.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<DecodeTable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show decode table" on page 1022

PBUS<pb>:DECTable:COUNt?

Returns the number of rows in the decode table. Each clock edge corresponds to one row in the table. The decode table is only available for clocked buses.

Suffix:
<pb> 1 to 4, index of the logic group

Return values:
<Count> Number of rows

Usage: Query only
Asynchronous command

Manual operation: See "Show decode table" on page 1022

PBUS<pb>:DECTable:DATA?

Returns a list of decoded values and corresponding points in time from the decode table. Each data pair corresponds to one clock edge, which is one row in the table. The decode table is only available for clocked buses.

Suffix:
<pb> 1 to 4, index of the logic group

Return values:
<Data> Comma-separated list of values

Usage: Query only
Asynchronous command

Manual operation: See "Show decode table" on page 1022

PBUS<pb>:DIGSignals:POSition <DigChanPosition>

Sets the vertical position of all active digital channels.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<DigChanPosition> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Asynchronous command

PBUS<pb>:DIGSignals:SCALe <RelativeHeight>

Sets the size of the display that is used by each active digital signal.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<RelativeHeight> Range: 2 to 100
Increment: 0.5
*RST: 6.25
Default unit: %

Usage: Asynchronous command

PBUS<pb>:DISPlay:SHBU <ShowBus>

If enabled, the resulting bus signal and bus values are displayed in the diagram.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<ShowBus> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show bus" on page 1021

PBUS<pb>:DISPlay:SHDI <ShwDigSigns>

If enabled, the selected digital channels are shown in the diagram. Each channel is displayed as a logic signal.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:

<ShwDigSigns> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show dig. signals" on page 1019

PBUS<pb>:HYSTeresis<n> <Hysteresis>

Defines the size of the hysteresis for the respective channels.

Suffix:

<pb> 1 to 4, index of the logic group

<n> 1..4
Selects the channel group:
1 = digital channels 0..3
2 = digital channels 4..7
3 = digital channels 8..11
4 = digital channels 12..15

Parameters:

<Hysteresis> MAXimum | ROBust | NORMal

MAXIMUM = MAXimum
Maximum value that is possible and useful for the signal and its settings (corresponds to "Medium" in the GUI).

ROBUST = ROBust
Different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system (corresponds to "Large" in the GUI).

NORMAL = NORMal
The instrument sets a value suitable for the signal and its settings (corresponds to "Small" in the GUI).

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 1021

PBUS<pb>:POSition <YPosition>

Sets the position of the indicated logic group waveform.

Suffix:

<pb> 1 to 4, index of the logic group

Parameters:

<YPosition> Range: 0 to 100
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

PBUS<pb>:SCALe <RelativeHeight>

Sets the size of the display that is used by the indicated logic group waveform.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<RelativeHeight> Range: 3 to 100
Increment: 0.5
*RST: 10
Default unit: %

Usage: Asynchronous command

PBUS<pb>:SKEW <SkewOffset>

Sets a general delay for all digital channels.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<SkewOffset> Range: -2E-07 to 2E-07
Increment: 2E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Skew" on page 1024

PBUS<pb>:STATe <State>

Enables the selected logic group. The corresponding signal icon appears on the signal bar.

Dependencies: At least one digital channel must be enabled for the selected bus, otherwise the command does not work.

The bus is enabled automatically if the first digital channel is enabled with `PBUS<pb>:BIT<n>[:STATe]`.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 1019

PBUS<pb>:TECHnology <Technology>

Selects the threshold voltage for various types of integrated circuits and applies it to all digital channels.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual

V15: TTL
V25: CMOS 5.0 V
V165: CMOS 3.3 V
V125: CMOS 2.5 V
V09: CMOS 1.85 V
VM13: ECL, -1.3 V
V38: PECL
V20: LVPECL
V0: Ground
MANual: Set a user-defined threshold value with `DIGital<m>:THReshold` on page 2350.

*RST: V165

Usage: Asynchronous command

Manual operation: See "Technology, Threshold" on page 1020

PBUS<pb>:THCoupling <LevelCoupling>

Sets the threshold and the hysteresis for all digital channels and all buses to the same value.

For Logic 1, the command `DIGital<m>:THCoupling` has the same effect.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<LevelCoupling> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Level coupling" on page 1020

PBUS<pb>:THReshold<n> <Threshold>

Sets the logical threshold for the indicated channel group.

Alternatively you can use the following commands:

- To select from a list of predefined technologies: `PBUS<pb>:TECHnology`
- For logic 1: `DIGital<m>:THReshold`

See also DIGital<m>:THCoupling on page 2350.

Suffix:
<pb> 1 to 4, index of the logic group

<n> 1..4
Selects the channel group:
1 = digital channels 0..3;
2 = digital channels 4..7
3 = digital channels 8..11
4 = digital channels 12..15

Parameters:
<Threshold> Range: -8 to 8
Increment: 0.025
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Technology, Threshold" on page 1020

18.19.3 Digital resolution

ACQuire:DRESolution?

Returns the current digital resolution of the digital channels.

Return values:
<DigRes> Range: 1E-15 to 100
Increment: 1E-11
*RST: 0.0005
Default unit: s

Usage: Query only
Asynchronous command

ACQuire:POINts:DVALue?

Returns the current digital record length used by each digital channel.

Return values:
<DigReclgth> Range: 1000 to 200000000
Increment: 2
*RST: 1000
Default unit: pts

Usage: Query only
Asynchronous command

18.19.4 Export of digital data

To transfer the waveform data to a remote computer, use:

- DIGital<m>:DATA:HEADer? on page 1304
- DIGital<m>:DATA[:VALues]? on page 1305
- PBUS<pb>:DATA:FORMat on page 1305
- PBUS<pb>:DATA:HEADer? on page 1305
- PBUS<pb>:DATA[:VALues]? on page 1306

For fast export of several waveforms at once, use EXPort:WAVeform:DATA[:VALues]? on page 1307.

For export of waveform data to file, see Section 18.13.4, "Waveform data: export to file", on page 1285.

18.20 Waveform generator (option R&S MXO5-B6)

This section describes the remote commands of the waveform generator.

The instrument preset does not affect the generator settings. Each generator has its own preset: WGENerator<wg>:PRESet.

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands *OPC, *OPC? or *WAI can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

18.20.1 Waveform generator setup

18.20.1.1 General settings

WGENerator<wg>:FREQuency 2361
WGENerator<wg>:FUNCtion:PULSe[:WIDTh] 2361
WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] 2361
WGENerator<wg>:FUNCtion[:SELect] 2362
WGENerator<wg>:FUNCtion[:SQUare]:DCYCle 2362
WGENerator<wg>:OUTPut[:LOAD] 2362
WGENerator<wg>:PERiod 2363
WGENerator<wg>:PRESet 2363

WGENerator<wg>:MODulation:AM:CAMPlitude....2363
WGENerator<wg>:SOURce....2364
WGENerator<wg>:VOLTage:DCLevel....2364
WGENerator<wg>:VOLTage:INVersion....2365
WGENerator<wg>:VOLTage:OFFSet....2365
WGENerator<wg>:VOLTage[:VPP]....2365
WGENerator<wg>[:ENABle]....2365

WGENerator<wg>:FREQuency <Frequency>

Sets the frequency of the waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Frequency>
Range: 0.001 to 100E+6 or lower, depending on the function type.
Increment: 0.001
*RST: 10E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1028

WGENerator<wg>:FUNCtion:PULSe[:WIDTh] <PulseWidth>

Sets the pulse width, the pulse duration of the generated pulse waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<PulseWidth>
Range: 1.65E-08 to 90000
Increment: 1
*RST: 5E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Pulse width" on page 1030

WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] <RampSymmetry>

Sets the symmetry of a ramp waveform, the percentage of time the waveform is rising. By changing the symmetry of the ramp, you can create, for example, triangular waveforms.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:

<RampSymmetry>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Symmetry" on page 1030

WGENerator<wg>:FUNCtion[:SELect] <FunctionType>

Selects the type of waveform to be generated.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<FunctionType> SINusoid | SQUare | RAMP | DC | PULSe | SINC | CARDiac | GAUSs | LORNtz | HAVer | EXPRise | EXPFall | ARBitrary

`SINC`: cardinal sine
HAVer: haversine (great-circle distance between two points on a sphere)

*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "Function type" on page 1027

WGENerator<wg>:FUNCtion[:SQUare]:DCYCle <SquareDutyCycle>

Sets the duty cycle for the pulse function.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<SquareDutyCycle>
Range: 0.01 to 99.99
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 1030

WGENerator<wg>:OUTPut[:LOAD] <Load>

Select the user load, the load of the DUT at its connection.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Load> FIFTy | HIZ

`FIFTy`: 50Ω
`HIZ`: High-Z (high input impedance)

*RST: HIZ

Usage: Asynchronous command

Manual operation: See "User load" on page 1029

WGENerator<wg>:PERiod <Period>

Sets the period of the pulse waveform, if `WGENerator<wg>:FUNCtion[:SELect]` is set to `PULSe`.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Period> Range: 1E-08 to 1000
Increment: 1
*RST: 1E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "Period" on page 1031

WGENerator<wg>:PRESet

Presets the generator to a default setup. The default includes the following settings:

- "Function type" = "Sine"
- "Frequency" = "1 MHz"
- "Amplitude" = "1 Vpp"

Suffix:

<wg> 1 | 2, index of the waveform generator

Usage: Setting only
Asynchronous command

Manual operation: See "Default setup" on page 1030

WGENerator<wg>:MODulation:AM:CAMPlitude <CarrierAmplitude>

Sets the mean peak-to-peak voltage of the modulated signal if AM modulation is active.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<CarrierAmplitude> Range: 0.01 to 12
Increment: 0.01
*RST: 0.4
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Carrier amplitude" on page 1029

WGENerator<wg>:SOURce <OperationMode>

Selects the operation mode of the waveform generator-

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<OperationMode> FUNCgen | MODulation | SWEep | ARBGenerator

FUNCgen
Enables the function generator and disables modulation, sweep, and arbitrary waveforms

MODulation
Enables the modulation, disables sweep and selects the sine function.

SWEep
Enables the sweep, disables modulation, and selects the sine function.

ARBGenerator
Selects the arbitrary function and disables modulation and sweep.

*RST: FUNCgen

Usage: Asynchronous command

WGENerator<wg>:VOLTage:DCLevel <DCLevel>

Sets the level for the DC signal, if `WGENerator<wg>:FUNCtion[:SELect]` is set to `DC`.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<DCLevel> Range: -5 to 5
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DC level" on page 1030

WGENerator<wg>:VOLTage:INVersion <Inversion>

Inverts the waveform at the offset level.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Inversion> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Inversion" on page 1027

WGENerator<wg>:VOLTage:OFFSet <Offset>

Sets the vertical offset of the generated waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Offset> Range: -5.995 to 5.995
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 1029

WGENerator<wg>:VOLTage[:VPP] <Amplitude>

Sets the amplitude of the waveform. If AM modulation is active, this value defines the peak amplitude of the modulated signal.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Amplitude> Range: 0.01 to 12
Increment: 0.01
*RST: 0.4
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Amplitude, Peak amplitude" on page 1029

WGENerator<wg>[:ENABle] <State>

Enables the function generator.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<State> OFF | ON
*RST: No effect

Usage: Asynchronous command

Manual operation: See "State" on page 1027

18.20.1.2 Modulation settings

WGENerator<wg>:MODulation[:STATe] 2366
WGENerator<wg>:MODulation:AM:DCYCle 2367
WGENerator<wg>:MODulation:AM:DEPTh 2367
WGENerator<wg>:MODulation:AM:FREQuency 2367
WGENerator<wg>:MODulation:AM:SYMMetry 2368
WGENerator<wg>:MODulation:AM[:FUNCtion] 2368
WGENerator<wg>:MODulation:CARRier:FREQuency 2368
WGENerator<wg>:MODulation:CARRier:PERiod 2368
WGENerator<wg>:MODulation:FM:DCYCle 2369
WGENerator<wg>:MODulation:FM:DEViation 2369
WGENerator<wg>:MODulation:FM:FREQuency 2369
WGENerator<wg>:MODulation:FM:SYMMetry 2370
WGENerator<wg>:MODulation:FM[:FUNCtion] 2370
WGENerator<wg>:MODulation:FSK:FONE 2370
WGENerator<wg>:MODulation:FSK:FTWO 2370
WGENerator<wg>:MODulation:FSK[:RATE] 2371
WGENerator<wg>:MODulation:NDCLevel 2371
WGENerator<wg>:MODulation:NLPCent 2371
WGENerator<wg>:MODulation:PWM:DCYCle 2372
WGENerator<wg>:MODulation:PWM:DEPTh 2372
WGENerator<wg>:MODulation:PWM:FREQuency 2372
WGENerator<wg>:MODulation:PWM:SYMMetry 2373
WGENerator<wg>:MODulation:PWM[:FUNCtion] 2373
WGENerator<wg>:MODulation:TYPE 2373

WGENerator<wg>:MODulation[:STATe] <Modulation>

Enables or disables modulation.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Modulation> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Modulation state" on page 1031

WGENerator<wg>:MODulation:AM:DCYCle <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<SquareDutyCycle>
Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 1032

WGENerator<wg>:MODulation:AM:DEPTh <Depth>

Sets the modulation depth, the percentage of the amplitude range that is used for AM modulation.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Depth>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Depth" on page 1032

WGENerator<wg>:MODulation:AM:FREQuency <Frequency>

Sets the frequency of the modulation waveform for AM frequency modulation.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Frequency>
Range: 0.001 to 1000000
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1032

WGENerator<wg>:MODulation:AM:SYMMetry <RampSymmetry>

Sets the symmetry for the AM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<RampSymmetry> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Symmetry" on page 1032

WGENerator<wg>:MODulation:AM[:FUNCtion] <SignalType>

Selects the type of the modulating signal for AM modulation.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "Signal type" on page 1032

WGENerator<wg>:MODulation:CARRier:FREQuency <FreqCarrierAlias>

Sets the frequency of the carrier signal for a modulation waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<FreqCarrierAlias> Range: 0.001 to 100000000
Increment: 0.001
*RST: 1000000
Default unit: Hz

Usage: Asynchronous command

WGENerator<wg>:MODulation:CARRier:PERiod <PeriodCarrierAlias>

Sets the period of the carrier signal for a modulation waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:

<PeriodCarrierAlias>
Range: 1E-08 to 1000
Increment: 1
*RST: 1E-06
Default unit: s

Usage: Asynchronous command

WGENerator<wg>:MODulation:FM:DCYCle <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<SquareDutyCycle>
Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 1032

WGENerator<wg>:MODulation:FM:DEViation <Deviation>

Sets the frequency deviation, the maximum difference between the FM modulated signal and the carrier signal.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Deviation>
Range: 0.001 to 10000000
Increment: 1
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Deviation" on page 1032

WGENerator<wg>:MODulation:FM:FREQuency <Frequency>

Sets the frequency of the modulating waveform for FM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Frequency>
Range: 0.001 to 1000000
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1032

WGENerator<wg>:MODulation:FM:SYMMetry <RampSymmetry>

Sets the symmetry for the FM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<RampSymmetry>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Symmetry" on page 1032

WGENerator<wg>:MODulation:FM[:FUNCtion] <SignalType>

Selects the type of the modulating signal for FM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "Signal type" on page 1032

WGENerator<wg>:MODulation:FSK:FONE <Frequency1>
WGENerator<wg>:MODulation:FSK:FTWO <Frequency2>

Sets the frequency of the first /second signal in FSK modulated signal.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Frequency2>
Range: 0.001 to 100E+6
Increment: 1
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency 1/Frequency 2" on page 1033

WGENerator<wg>:MODulation:FSK[:RATE] <Rate>

Sets the frequency at which the signal switches between `WGENerator<wg>:MODulation:FSK:FONE` and `WGENerator<wg>:MODulation:FSK:FTWO`.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Rate>
Range: 0.001 to 1000000
Increment: 1
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "FSK rate" on page 1033

WGENerator<wg>:MODulation:NDCLevel <LevelDC>

Sets the DC noise level, if `WGENerator<wg>:FUNCtion[:SELect]` is set to `DC`.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<LevelDC>
Range: 0 to 10
Increment: 0.01
*RST: 0
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Noise level for DC" on page 1030

WGENerator<wg>:MODulation:NLPCent <LevelPct>

Sets the level of the noise in percentage of the set "Amplitude" output of the signal.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<LevelPct>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Noise level in %" on page 1029

WGENerator<wg>:MODulation:PWM:DCYCle <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<SquareDutyCycle>
Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 1032

WGENerator<wg>:MODulation:PWM:DEPTh <Depth>

Sets the modulation depth, the percentage of the amplitude range that is used for PWM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Depth>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Modulation depth" on page 1033

WGENerator<wg>:MODulation:PWM:FREQuency <Frequency>

Sets the frequency of the modulating waveform for PWM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Frequency>
Range: 0.001 to 1000000
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1032

WGENerator<wg>:MODulation:PWM:SYMMetry <RampSymmetry>

Sets the symmetry for the PWM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<RampSymmetry>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Symmetry" on page 1032

WGENerator<wg>:MODulation:PWM[:FUNCtion] <SignalType>

Selects the type of the modulating signal for PWM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "Signal type" on page 1032

WGENerator<wg>:MODulation:TYPE <ModulationType>

Selects the modulation type, which defines how the carrier signal is modified.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<ModulationType> NONE | AM | FM | PWM | ASK | FSK
*RST: AM

Usage: Asynchronous command

Manual operation: See "Modulation type" on page 1031

18.20.1.3 ARB settings

WGENerator<wg>:ARBGen:NAME....2374
WGENerator<wg>:ARBGen:OPEN....2374
WGENerator<wg>:ARBGen:RUNMode....2374
WGENerator<wg>:ARBGen:RUNSingle....2375
WGENerator<wg>:ARBGen:SAMPles?....2375
WGENerator<wg>:ARBGen:SRATe....2375
WGENerator<wg>:ARBGen[:SOURce]....2376

WGENerator<wg>:ARBGen:NAME <Folder>

Sets the file path and the file for an arbitrary waveform, if `WGENerator<wg>:ARBGen[:SOURce]` is set to `ARBitrary`.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Folder>

Usage: Asynchronous command

Manual operation: See "Open" on page 1037

WGENerator<wg>:ARBGen:OPEN

Loads the arbitrary waveform, which is selected with the `WGENerator<wg>:ARBGen:NAME` command.

Suffix:
<wg> 1 | 2, index of the waveform generator

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 1037

WGENerator<wg>:ARBGen:RUNMode <RunMode>

Sets the duration for which the signal of the arbitrary generator will be output after the trigger event.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<RunMode> SINGle | REPetitive
*RST: REPetitive

Usage: Asynchronous command

Manual operation: See "Run mode" on page 1036

WGENerator<wg>:ARBGen:RUNSingle

Executes a single period of the arbitrary signal generator, if `WGENerator<wg>:ARBGen:RUNMode` is set to `SINGle`.

Suffix:
<wg> 1 | 2, index of the waveform generator

Usage: Event
Asynchronous command

Manual operation: See "Run single" on page 1036

WGENerator<wg>:ARBGen:SAMPles?

Returns the number of samples in the loaded waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Return values:
<NumSamples> Range: 0 to 128E+6
Increment: 10
*RST: 0
Default unit: pts

Usage: Query only
Asynchronous command

Manual operation: See "Number of samples" on page 1037

WGENerator<wg>:ARBGen:SRATe <SampleRate>

Sets the sample rate for the arbitrary waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<SampleRate> Range: 1 to 312500000
Increment: 10
*RST: 1000000
Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "Sample rate" on page 1037

WGENerator<wg>:ARBGen[:SOURce] <WaveformSource>

Selects the source of the arbitrary waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<WaveformSource> ARBitrary
*RST: ARBitrary

Usage: Asynchronous command

Manual operation: See "Arb wfm source" on page 1037

18.20.1.4 Sweep settings

WGENerator<wg>:SWEep[:STATe] 2376
WGENerator<wg>:SWEep:TYPE 2376
WGENerator<wg>:SWEep:FSTart 2377
WGENerator<wg>:SWEep:TIME 2377
WGENerator<wg>:SWEep:FEND 2377

WGENerator<wg>:SWEep[:STATe] <Sweep>

Enables or disables the sweeping.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Sweep> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Sweep state" on page 1034

WGENerator<wg>:SWEep:TYPE <Type>

Sets the type of the sweep, a linear or logarithmic change of the frequency.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Type> LIN | LOG
*RST: LIN

Usage: Asynchronous command

Manual operation: See "Sweep type" on page 1034

WGENerator<wg>:SWEep:FSTart <StartFrequency>

Sets the start frequency of the sweep signal.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<StartFrequency>
Range: 0.001 to 100E+6
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Start frequency" on page 1034

WGENerator<wg>:SWEep:TIME <Time>

Sets the duration of the sweep.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Time>
Range: 0.001 to 500
Increment: 1
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "Sweep time" on page 1034

WGENerator<wg>:SWEep:FEND <StopFrequency>

Sets the stop frequency of the sweep signal.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<StopFrequency>
Range: 0.001 to 100E+6
Increment: 0.001
*RST: 1000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Stop frequency" on page 1034

18.20.2 Synchronize settings

WGENerator<wg>:COUPling:ALL....2378
WGENerator<wg>:COUPling:STATe....2378
WGENerator<wg>:COUPling:AMPLitude....2378
WGENerator<wg>:COUPling:PHASeshift....2379
WGENerator<wg>:COUPling[:FREQuency]....2379
GENerator:SYNC[:COMBination]....2379

WGENerator<wg>:COUPling:ALL <CoupleAll>

Enables the coupling of the generators, with the selected set of parameters: enabling, amplitude and frequency.

Suffix:
<wg> 1..2
Specifies the primary generator.

Parameters:
<CoupleAll> OFF | ON
*RST: OFF

Usage: Asynchronous command

WGENerator<wg>:COUPling:STATe <CoupleEnable>

Enables the coupling of the generators with the selected set of parameters: amplitude and frequency.

Suffix:
<wg> 1..2
Specifies the prime generator.

Parameters:
<CoupleEnable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Generator enable" on page 1038

WGENerator<wg>:COUPling:AMPLitude <CplAmplitude>

Enables the coupling of all amplitude parameters of the generators.

Suffix:
<wg> 1..2
Specifies the prime generator.

Parameters:
<CplAmplitude> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Frequency parameters" on page 1038

WGENerator<wg>:COUPling:PHASeshift <PhaseShift>

Sets the phase shift between the waveform of Gen1 and Gen2 when the frequency parameters of the two waveforms are coupled.

Suffix:
<wg> 1..2
Specifies the prime generator.

Parameters:
<PhaseShift> Range: -180 to 180
Increment: 1
*RST: 0
Default unit: °

Usage: Asynchronous command

Manual operation: See "Phase Gen1 - Gen2" on page 1038

WGENerator<wg>:COUPling[:FREQuency] <CplFreq>

Enables the coupling of all frequency parameters of the generators.

Suffix:
<wg> 1..2
Specifies the prime generator.

Parameters:
<CplFreq> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Amplitude parameters" on page 1039

GENerator:SYNC[:COMBination] <Combination>

Selects which signals generated from the waveform generator are synchronized.

Parameters:
<Combination> NONE | GEN12
*RST: NONE

Usage: Asynchronous command

Manual operation: See "Synchron start" on page 1038

18.21 ScopeSync

The DEVice<m> index corresponds to the number of the oscilloscope in the scope list of the "Add scope" dialog and the waveform notification, but the numbers are different. For example:

- DEVice1 is oscilloscope O2 with channel waveforms O2C1, O2C2 ...
- DEVice2 is oscilloscope O3 with channel waveforms O3C1, O3C2 ...
- DEVice6 is oscilloscope O7 with channel waveforms O7C1, O7C2 ...

SYNChronize:DEVice<m>:COMMunicate:NET[:HOSTname] 2380
SYNChronize:DEVice<m>:CONNect 2380
SYNChronize:DEVice<m>:NAME 2381
SYNChronize:DEVice<m>:SKEW:AUTO 2381
SYNChronize:DEVice<m>:SKEW[:VALue] 2381
SYNChronize:DEVice<m>[:ENABle] 2382
SYNChronize:DISConnect 2382
SYNChronize:DISPlay 2382
SYNChronize:LOAD:ABORt 2382
SYNChronize:DEVice<m>:LOADall 2382
SYNChronize:LOAD:ALL 2383
SYNChronize:LOAD:SESSion 2383
SYNChronize:LOAD[:WAVeform] 2383
SYNChronize:LOCKcontrols 2383
SYNChronize:RECLensync 2384
SYNChronize:SRATesync 2384
SYNChronize:TIMebasesync 2384
SYNChronize:VERTicalsync 2384

SYNChronize:DEVice<m>:COMMunicate:NET[:HOSTname] <Hostname>

Sets the IP address or the host name for the specified oscilloscope.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<Hostname> String with the IP address or host name

Example: `SYNChronize:DEVice:COMMunicate:NET:HOSTname "169.254.168.172"`

Usage: Asynchronous command

Manual operation: See "Resource" on page 1055

SYNChronize:DEVice<m>:CONNect <State>

Activates the connection between the two oscilloscopes, or between the R&S ScopeStudio software and the oscilloscope.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Connect" on page 1055

SYNChronize:DEVice<m>:NAME <Name>

Defines a name for the specified oscilloscope.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<Name> String with the name of the connected oscilloscope.

Usage: Asynchronous command

Manual operation: See "Scope name" on page 1054

SYNChronize:DEVice<m>:SKEW:AUTO

Determines the delay between the specified scope and scope 1 automatically, and sets the skew.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Usage: Setting only
Asynchronous command

Manual operation: See "Auto remote skew" on page 1057

SYNChronize:DEVice<m>:SKEW[:VALue] <Skew>

Returns the skew value that was measured by `SYNChronize:DEVice<m>:SKEW:AUTO`. If you know the skew, or measure it manually, you can also set the value.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<Skew> Range: -0.02 to 0.02
Increment: 1E-13
*RST: 8E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Remote skew" on page 1056

SYNChronize:DEVice<m>[:ENABle] <State>

Adds or removes an oscilloscope to the scope list.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "+ Add" on page 1054

SYNChronize:DISConnect

Terminates the active connection.

Usage: Event
Asynchronous command

Manual operation: See "Disconnect" on page 1055

SYNChronize:DISPlay <RemDevDispUpd>

Enables the continuous display update on all connected secondary oscilloscopes when acquisition is controlled on the leading oscilloscope.

Parameters:
<RemDevDispUpd> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Display update" on page 1058

SYNChronize:LOAD:ABORt

Terminates the getting of signals.

Usage: Setting only
Asynchronous command

Manual operation: See "Get signals" on page 1057

SYNChronize:DEVice<m>:LOADall <Register>

Selects the specified oscillodcope for `SYNChronize:LOAD:ALL`.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<Register> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Get all signals" on page 1060

SYNChronize:LOAD:ALL

Retrieves the active analog waveforms of the latest acquisition from the selected oscilloscopes. The software connects, retrieves the signals and disconnects the selected scopes one by one. When finished, it restores the connection that was active before starting "Get all signals", or disconnects all if no connection was active.

All selected scopes require a correct cabling and correct connection settings.

Instruments are selected with `SYNChronize:DEVice<m>:LOADall` on page 2382.

Usage: Setting only
Asynchronous command

Manual operation: See "Get all signals" on page 1060

SYNChronize:LOAD:SESSion

Retrieves all active analog and digital waveforms of the latest acquisition and the associated saveset from the connected oscilloscope.

Usage: Setting only
Asynchronous command

SYNChronize:LOAD[:WAVeform]

Retrieves the active analog waveforms of the latest acquisition from the connected oscilloscope. Digital channels and reference waveforms are not transferred.

Usage: Setting only
Asynchronous command

Manual operation: See "Get signals" on page 1057

SYNChronize:LOCKcontrols <RemDevLockControls>

Locks the touchscreen and the front panel keys on all connected oscilloscope.

Parameters:
<RemDevLockControls> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Lock controls" on page 1058

SYNChronize:RECLensync <SyncReclgth>

Enables all secondary scopes to use the record length of the leading scope.

Parameters:
<SyncReclgth> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Record length" on page 1059

SYNChronize:SRATesync <SyncSampleRate>

Enables all secondary scopes to use the sample rate of the leading scope.

Parameters:
<SyncSampleRate> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Sample rate" on page 1059

SYNChronize:TIMebasesync <SyncTimebase>

Synchronizes the settings of time scale, position and refrence point. If enabled, all secondary scopes use the settings of the leading scope.

Parameters:
<SyncTimebase> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Timebase" on page 1058

SYNChronize:VERTicalsync <SyncVerticals>

Enables all secondary scopes to use the vertical settings of the leading scope.

Parameters:
<SyncVerticals> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Verticals" on page 1059

18.22 Status reporting

This section describes the remote commands that are used to read the status registers.

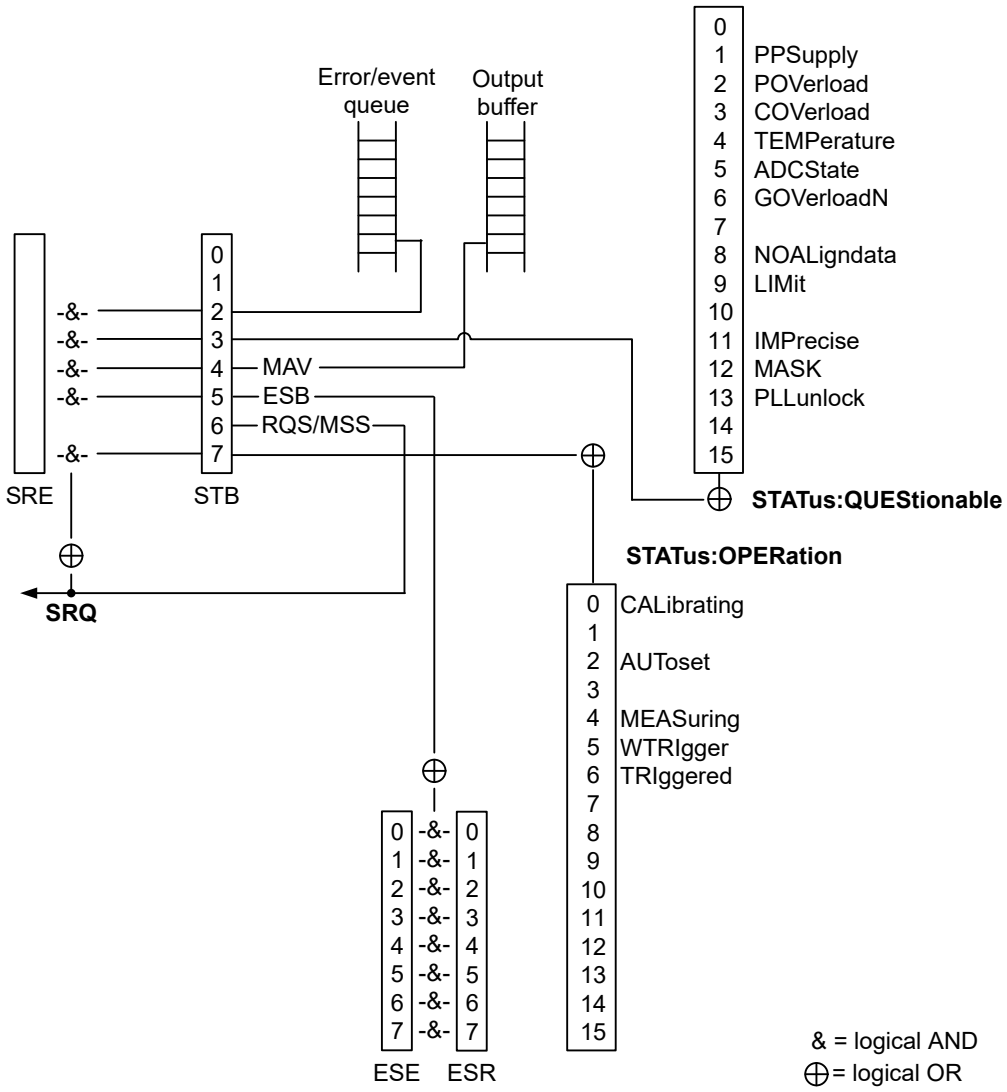


Figure 18-1: Overview of the status registers

For detailed information on the structure, hierarchy, and contents of the status registers, see Section 17.6, "Remote control - status reporting system", on page 1070.

- General commands....2386
- STATus:OPERation register....2386
- STATus:QUEStionable registers....2388
- Reading out the CONDition part....2390
- Reading out the EVENt part....2390
- Controlling the ENABle part....2391
- Controlling the negative transition part....2392

- Controlling the positive transition part....2392
- Other status commands....2393
- Programming tips and examples....2394

18.22.1 General commands

STATus:PRESet

Resets the status registers.

All `PTRansition` bits are set to 1, i.e. all transitions from 0 to 1 are detected.

All `NTRansition` bits are set to 0, i.e. a transition from 1 to 0 in a `CONDition` bit is not detected.

All `EVENt` bits are set to 0.

The `ENABle` bits of `STATus:OPERation` and `STATus:QUEStionable` are set to 0, i.e. all events in these registers are not passed on.

Usage: Setting only
SCPI confirmed

18.22.2 STATus:OPERation register

`STATus:OPERation` commands provide information on the activity of the instrument.

See also: Section 17.6.3.3, "STATus:OPERation register", on page 1075.

STATus:OPERation:CONDition?....2386
STATus:OPERation:ENABle....2387
STATus:OPERation[:EVENt]?....2387
STATus:OPERation:NTRansition....2387
STATus:OPERation:PTRansition....2388

STATus:OPERation:CONDition?

Returns the bit of the action the instrument is currently executing. The contents of the STATus:OPERation register is retained.

The bit assignment is described in Section 17.6.3.3, "STATus:OPERation register", on page 1075.

Usage: Query only
SCPI confirmed
Asynchronous command

STATus:OPERation:ENABle <Enable>

Controls the ENABle part of the STATus:OPERation register. The ENABle defines which events in the EVENt part of the status register are forwarded to the OPERation summary bit (bit 7) of the status byte. The status byte can be used to create a service request.

Parameters:

<Enable> Range: 1 to 65535
Increment: 1

Example: `STATus:OPERation:ENABle 5`
The ALIGnment event (bit 0) and AUToset event (bit 2) are forwarded to the OPERation summary bit of the status byte.

STATus:OPERation[:EVENt]?

The `CONDition` command returns information on actions the instrument is currently executing. The contents of the register is retained.

The `EVENt` command returns information on actions the instrument has executed since the last reading. Reading the `EVENt` register deletes its contents.

Bits:

- 0 = ALIGnment
- 2 = AUToset
- 4= MEASuring
- 5= WTRIgger (wait for trigger)
- 6= TRIggered

Example: For an example, see Example "Querying with STATus:OPERation:CONDition" on page 2395.

Usage: Query only
SCPI confirmed
Asynchronous command

STATus:OPERation:NTRansition <SumBit>

The command sets the bits of the NTRansition part of the STATus:OPERation register. A bit set in the NTRansition register causes a bit transition from 1 to 0 in the CONDition register to produce an entry in the EVENt register.

Reading the information does not clear the register.

Parameters:

<SumBit> Range: 0 to 65535
Increment: 1

Usage: SCPI confirmed
Asynchronous command

STATus:OPERation:PTRansition <SumBit>

The command sets the bits of the PTRansition part of the STATus:OPERation register. A bit set in the PTRansition register causes a bit transition from 0 to 1 in the CONDition register to produce an entry in the EVENt register.

Reading the information does not clear the register.

Parameters:

<SumBit> Range: 0 to 65535
Increment: 1

Usage: SCPI confirmed
Asynchronous command

18.22.3 STATus:QUEStionable registers

The commands of the `STATus:QUEStionable` subsystem control the status reporting structures of the `STATus:QUEStionable` registers.

See also: Section 17.6.3.4, "STATus:QUEStionable register", on page 1076.

The query of the `[:EVENt]` and `[:ENABLe]` commands, return a list of the affected sources:

Table 18-3: Source values for STATus:QUEStionable:...:[:EVENt] and STATus:QUEStionable:...:[:ENABLe]

Bits	Source values	Description
For all bits	NONE	
	ALL	All available sources are activated
PPSupply	PRobe<m>	Active probe
POVerload	PRobe<m>	Active probe
COVerload	CHAN<m>	Analog channels
	WARNCHAN<m>	Warning overload channels
	EXTTRIGGERIN	External analog signal connected to the external trigger input
	TRIGGEROUT	Trigger out signal
TEMPerature	WINSTRUMENT	Temperature warning: indicates that the device is getting hot and should be cooled.
	EINSTRUMENT	Temperature error: the device is too hot and will automatically shut down in a few seconds.
	WGENERATOR1	Temperature warning on waveform generator 1
	WGENERATOR2	Temperature warning on waveform generator 2
ADCState	CPCHAN<m>	Positive clipping for analog channels
	CNCHAN<m>	Negative clipping for analog channels

Bits	Source values	Description
	CPPRobe<m>	Positive clipping for probes
	CNPRobe<m>	Negative clipping for probes
GOVerload	WGENerator<m>	Available generators
LIMit	MEAS<mg>CHEC<c>	Enabled measurements and enabled limit checks
IMPRecise	MEAS<mg>	Enabled measurements
MASK	MASK<m>	Enabled masks
PLLunlock	PLL100	

Some of the status commands can be used interchangeably:

Table 18-4: Overview: STATus:QUEStionable and respective CHANnel, MEASurement and WGENerator commands

STATus:QUEStionable register	MEASurement
STATus:QUEStionable:COVerload Bit: CHANnel<ch>	CHANnel<ch>:OVERload:STATus
STATus:QUEStionable:COVerload Bit: WCHannel<ch>	CHANnel<ch>:WARNoverload:STATus
STATus:QUEStionable:COVerload Bit: EXTTRIGGERIN	TRIGger:ANEDge:OVERload:STATus
STATus:QUEStionable:COVerload Bit: TRIGGEROUT	TRIGger:ACTions:OUT:OVERload:STATus
STATus:QUEStionable:ADCState Bit: CPCHannel<ch>	CHANnel<ch>:ADCState:STATus:PCLipping
STATus:QUEStionable:ADCState Bit: CNCHannel<ch>	CHANnel<ch>:ADCState:STATus:NCLipping
STATus:QUEStionable:PPSupply Bit: CNCHannel<ch>	CHANnel<ch>PPSupply:STATus
STATus:QUEStionable:LIMit Bit: MEAS<mg>CHEC<c>	MEASurement<mg>:LIMits:CHECk<n>:STATus
STATus:QUEStionable:IMPRecise Bit: MEAS<mg>	MEASurement<mg>:IMPRecise:STATus
STATus:QUEStionable:GOVerload Bit: WGENerator<wg>	WGENerator<wg>:GOVerload
STATus:QUEStionable: TEMPerature Bit: WGENerator<wg>	WGENerator<wg>:TEMPerature

18.22.4 Reading out the CONDition part

See also: Section 18.22.3, "STATus:QUEStionable registers", on page 2388.

CHANnel<ch>:OVERload:STATus:CONDition?
CHANnel<ch>:ADCState:STATus:NCLipping:CONDition?
CHANnel<ch>:ADCState:STATus:PCLipping:CONDition?
CHANnel<ch>:WARNoverload:STATus:CONDition?
CHANnel<ch>:PPSupply:STATus:CONDition?
MEASurement<mg>:IMPRecise:STATus:CONDition?
MEASurement<mg>:LIMits:CHECk<n>:STATus:CONDition?
STATus:QUEStionable:MASK:CONDition?
TRIGger:ACTions:OUT:OVERload:STATus:CONDition?
TRIGger:ANEDge:OVERload:STATus:CONDition?
WGENerator<wg>:GOVerload:STATus:CONDition?
WGENerator<wg>:TEMPerature:STATus:CONDition?
STATus:QUEStionable:ADCState:CONDition?
STATus:QUEStionable:COVerload:CONDition?
STATus:QUEStionable:GOVerload:CONDition?
STATus:QUEStionable:IMPRecise:CONDition?
STATus:QUEStionable:LIMit:CONDition?
STATus:QUEStionable:PLL:CONDition?
STATus:QUEStionable:PPSupply:CONDition?
STATus:QUEStionable:TEMPerature:CONDition?

Returns the contents of the `CONDition` part of the status register to check for questionable instrument or measurement states. This part contains information on the action currently being performed in the instrument.

Reading the `CONDition` registers does not delete the contents since it indicates the current hardware status.

Return values:
<Value> bit dependent, comma-separated values

Usage: Query only

18.22.5 Reading out the EVENt part

CHANnel<ch>:ADCState:STATus:NCLipping[:EVENt]?
CHANnel<ch>:ADCState:STATus:PCLipping[:EVENt]?
CHANnel<ch>:OVERload:STATus[:EVENt] <Value>
CHANnel<ch>:WARNoverload:STATus[:EVENt]?
CHANnel<ch>:PPSupply:STATus[:EVENt] <Value>
MEASurement<mg>:IMPRecise:STATus[:EVENt]?
MEASurement<mg>:LIMits:CHECk<n>:STATus[:EVENt]?
STATus:QUEStionable:MASK[:EVENt]?
TRIGger:ACTions:OUT:OVERload:STATus[:EVENt] <Value>
TRIGger:ANEDge:OVERload:STATus[:EVENt] <Value>
WGENerator<wg>:GOVerload:STATus[:EVENt] <Value>

WGENerator<wg>:TEMPerature:STATus[:EVENt] <Value>
STATus:QUEStionable:ADCState[:EVENt]?
STATus:QUEStionable:COVerload[:EVENt]?
STATus:QUEStionable:GOVerload[:EVENt]?
STATus:QUEStionable:IMPRecise[:EVENt]?
STATus:QUEStionable:LIMit[:EVENt]?
STATus:QUEStionable:PLL[:EVENt]?
STATus:QUEStionable:PPSupply[:EVENt]?
STATus:QUEStionable:TEMPerature[:EVENt]?

Returns the contents of the `EVENt` part of the status register to check if an event has occurred since the last reading.

Reading an `EVENt` register deletes its contents.

Return values:

<Value> bit dependent, comma-separated values

See Source values for STATus:QUEStionable:...:[:EVENt] and STATus:QUEStionable:...:[:ENABLe] for a list of the return values.

Usage: Query only

18.22.6 Controlling the ENABle part

See also: Section 18.22.3, "STATus:QUEStionable registers", on page 2388.

CHANnel<ch>:OVERload:STATus:ENABle <Value>
CHANnel<ch>:ADCState:STATus:NCLipping:ENABle <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:ENABle <Value>
CHANnel<ch>:WARNoverload:STATus:ENABle <Value>
CHANnel<ch>:PPSupply:STATus:ENABle <Value>
MEASurement<mg>:IMPRecise:STATus:ENABle <Value>
MEASurement<mg>:LIMits:CHECk<n>:STATus:ENABle <Value>
STATus:QUEStionable:MASK:ENABle <Value>
TRIGger:ACTions:OUT:OVERload:STATus:ENABle <Value>
TRIGger:ANEDge:OVERload:STATus:ENABle <Value>
WGENerator<wg>:GOVerload:STATus:ENABle <Value>
WGENerator<wg>:TEMPerature:STATus:ENABle <Value>
STATus:QUEStionable:ADCState:ENABle <Value>
STATus:QUEStionable:COVerload:ENABle <Value>
STATus:QUEStionable:GOVerload:ENABle <Value>
STATus:QUEStionable:IMPRecise:ENABle <Value>
STATus:QUEStionable:LIMit:ENABle <Value>
STATus:QUEStionable:PLL:ENABle <Value>
STATus:QUEStionable:PPSupply:ENABle <Value>
STATus:QUEStionable:TEMPerature:ENABle <Value>

Sets the `ENABle` part that allows true conditions in the EVENt part to be reported for the summary bit in the status byte.

These events can be used for a service request. If a bit in the ENABle part is 1, and the corresponding EVENt bit is true, a positive transition occurs in the summary bit. This transition is reported to the next higher level.

See Source values for STATus:QUEStionable:...:[:EVENt] and STATus:QUEStionable:...:[:ENABLe] for a list of the return values.

Parameters:
<Value> bit dependent, comma-separated values

18.22.7 Controlling the negative transition part

See also: Section 18.22.3, "STATus:QUEStionable registers", on page 2388.

CHANnel<ch>:ADCState:STATus:NCLipping:NTRansition <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:NTRansition <Value>
CHANnel<ch>:OVERload:STATus:NTRansition <Value>
CHANnel<ch>:PPSupply:STATus:NTRansition <Value>
CHANnel<ch>:WARNoverload:STATus:NTRansition <Value>
MEASurement<mg>:IMPRecise:STATus:NTRansition <Value>
MEASurement<mg>:LIMits:CHECk<n>:STATus:NTRansition <Value>
STATus:QUEStionable:MASK:NTRansition <Value>
TRIGger:ACTions:OUT:OVERload:STATus:NTRansition <Value>
TRIGger:ACTions:OUT:OVERload:STATus:PTRansition <Value>
TRIGger:ANEDge:OVERload:STATus:NTRansition <Value>
WGENerator<wg>:GOVerload:STATus:NTRansition <Value>
WGENerator<wg>:TEMPerature:STATus:NTRansition <Value>
STATus:QUEStionable:ADCState:NTRansition <Value>
STATus:QUEStionable:COVerload:NTRansition <Value>
STATus:QUEStionable:GOVerload:NTRansition <Value>
STATus:QUEStionable:IMPRecise:NTRansition <Value>
STATus:QUEStionable:LIMit:NTRansition <Value>
STATus:QUEStionable:PLL:NTRansition <Value>
STATus:QUEStionable:PPSupply:NTRansition <Value>
STATus:QUEStionable:TEMPerature:NTRansition <Value>

Sets the negative transition filter.

If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the corresponding bit of the EVENt part of the register.

Parameters:
<Value> Source dependent, comma-separated values

18.22.8 Controlling the positive transition part

See also: Section 18.22.3, "STATus:QUEStionable registers", on page 2388.

CHANnel<ch>:ADCState:STATus:NCLipping:PTRansition <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:PTRansition <Value>

CHANnel<ch>:OVERload:STATus:PTRansition <Value>
CHANnel<ch>:PPSupply:STATus:PTRansition <Value>
CHANnel<ch>:WARNoverload:STATus:PTRansition <Value>
MEASurement<mg>:IMPRecise:STATus:PTRansition <Value>
MEASurement<mg>:LIMits:CHECk<n>:STATus:PTRansition <Value>
STATus:QUEStionable:MASK:PTRansition <Value>
TRIGger:ACTions:OUT:OVERload:STATus:PTRansition <Value>
TRIGger:ANEDge:OVERload:STATus:PTRansition <Value>
WGENerator<wg>:GOVerload:STATus:PTRansition <Value>
WGENerator<wg>:TEMPerature:STATus:PTRansition <Value>
STATus:QUEStionable:ADCState:PTRansition <Value>
STATus:QUEStionable:COVerload:PTRansition <Value>
STATus:QUEStionable:GOVerload:PTRansition <Value>
STATus:QUEStionable:IMPRecise:PTRansition <Value>
STATus:QUEStionable:LIMit:PTRansition <Value>
STATus:QUEStionable:PLL:PTRansition <Value>
STATus:QUEStionable:PPSupply:PTRansition <Value>
STATus:QUEStionable:TEMPerature:PTRansition <Value>

Sets the positive transition filter.

If a bit is set, a transition from 0 to 1 in the condition part causes an entry to be made in the corresponding bit of the `EVENt` part of the register.

Parameters:
<Value> Source dependent, comma-separated values

18.22.9 Other status commands

STATus:QUEStionable:PLL:RCONdition <Value>

Reset condition, allows to continue after an PLL unlock of the external reference.

Setting parameters:
<Value> PLL100

Usage: Setting only

18.22.10 Programming tips and examples

Example: Observing the limits violation of a measurement

The following example describes how to use the status register commands to observe if a violation of a measurement limit has occurred.

```
*SRE 8
// Enables the STATus:QUEStionable bit in the service-request (SRE)

STATus:QUEStionable:ENABle 512
// Enables the LIMIt bit of the STATus:QUEStionable register

MEASurement1:ENABle ON
MEASurement2:ENABle ON
MEASurement3:ENABle ON
// Enables measurement 1,2,3


STATus:QUEStionable:LIMit:ENABle ALL
// Enables the limit check for all active measurements

STATus:QUEStionable:LIMit:ENABle?
MEAS1,MEAS2,MEAS3
//Queries which measurement were active at the time the
//STATus:QUEStionable:LIMit:ENABle was send

*SRQ?
// A service request was sent

*STB?
72
// STATus:QUEStionable is set:
// #72= 64 + 8 = 2^6 + 2^3
// 64 : bit 6 is awlays on when a SRQ is sent
// 8: bit 3 for STATus:QUEStionable

STATus:QUEStionable:EVENt?
512
// 512= 2^9,

STATus:QUEStionable:LIMit:EVENt?
MEAS1,MEAS2
// Measurements 1 and 2 have exceeded the limit
// The event register is cleared after the query


STATus:QUEStionable:LIMit:EVENt?
NONE
// The event bit has been set to 0 after the first query
```

```
STATus:QUEStionable:LIMit:CONDition?
MEAS1,MEAS2
// Measurements 1 and 2 are still exceeding the limit


STATus:QUEStionable:EVENt?
0

// Waiting for an event
*SRQ?

// Measurement 3 exceeds the limit

STATus:QUEStionable:LIMit:CONDition?
MEAS1,MEAS2,MEAS3
// Measurements 1,2 and 3 are currently exceeding the limit


STATus:QUEStionable:LIMit:EVENt?
MEAS3
// Measurement 3 has newly  exceeded the limit
// The event register is cleared after the query
```

Example: Querying with STATus:OPERation:CONDition

The following example shows how the result of `STATus:OPERation:CONDition?` changes during a single acquisition.

```
SINGLe
// Measurement starts

STATus:OPERation:CONDition?
16
//Measuring

STATus:OPERation:CONDition?
48
//Pre trigger waiting time is over (16 Measuring + 32 WaitForTrigger)

STATus:OPERation:CONDition?
112
//Trigger is deactivated (16 Measuring + 32 WaitForTrigger + 64 Triggered)

STATus:OPERation:CONDition?
96
// Measurement has finished (32 WaitForTrigger + 64 Triggered)
```

Query OPC status in the event status register

If you activate a time-consuming operation and wait for completion with `*OPC?`, a time-out could occur before the operation is finished and you do not receive the returned

“1”. In addition, the test program is blocked while waiting with `*OPC?`. It is not possible to process other (not interdependent) commands in the meantime or to communicate with other instruments.

Thus, for time-consuming operations, you can avoid blocking the communication by sending the operation complete command `*OPC`:

```
*CLS
*OPC
```

Afterwards you can poll the operation complete status in the event status register with `*ESR?`.

This query returns the content of the event status register and afterwards clears the content. See also Section 17.6.3.2, "Event status register (ESR) and event status enable register (ESE)", on page 1074.

18.23 Deprecated commands

The following commands are provided for compatibility to previous oscilloscope versions only. For new remote control programs, use the specified alternative commands.

18.23.1 Base instrument

Legacy command	Replaced by	Comment
SYNChronize:DEVice<m>:LOCKcontrols	`SYNChronize:LOCKcontrols` on page 2383	Replaced since FW 2.11
SYNChronize:DEVice<m>:DISPlay	`SYNChronize:DISPlay` on page 2382	Replaced since FW 2.11
SYNChronize:DEVice<m>:TIMebasesync	`SYNChronize:TIMebasesync` on page 2384	Replaced since FW 2.11
SYNChronize:DEVice<m>:CHANnels		obsolete since FW 2.10
SAVeset:CONFig:PREView		not supported
PROBe<ch>:SETup:OFFSet:TOPMeter	`PROBe<ch>:SETup:ADVanced:PMToffset` on page 1164	Replaced since FW 2.10
PROBe<ch>:SETup:ZAXV	`PROBe<ch>:SETup:EPATtenuator` on page 1160	Replaced since FW 2.10

Table 18-5: Status reporting

Legacy command	Replaced by	Comment
MEASurement<mg>:MARGin:STATus:CONDition? MEASurement<mg>:MARGin:STATus:ENABle MEASurement<mg>:MARGin:STATus:NTRansition MEASurement<mg>:MARGin:STATus:PTRansition MEASurement<mg>:MARGin:STATus[:EVENt]	Use `MEASurement<mg>:LIMit:STATus:` commands	Obsolete since FW 2.9
STATus:QUEStionable:MARGin:CONDition? STATus:QUEStionable:MARGin:ENABle STATus:QUEStionable:MARGin:NTRansition STATus:QUEStionable:MARGin:PTRansition STATus:QUEStionable:MARGin[:EVENt]?	Use `STATus:QUEStionable:LIMit:` commands	Obsolete since FW 2.9

18.23.2 Applications

Table 18-6: Signal configuration

Legacy command	Replaced by	Comment
TREFerence<m>:REFLevel	`TREFerence<m>:CLK:REFLevel` on page 1240	Replaced since FW 2.8
MDEFaults:SETTings<m>:ENABle	---	Obsolete since FW 2.10

Table 18-7: Waveform generator

Legacy command	Replaced by	Comment
WGENerator<wg>:MODulation:NLABsolute	-	Obsolete since FW 2.8
WGENerator<wg>:VOLTage:HIGH	-	Obsolete since FW 2.9
WGENerator<wg>:VOLTage:LOW	-	Obsolete since FW 2.9

Table 18-8: Power analysis

Legacy command	Replaced by	Comment
POWer<m>:HARMonics:MEASurement:REALpower[:ACTual]	`POWer<m>:HARMonics:MEASurement:POWer:ACTive[:ACTual]?` on page 1440	Replaced since FW 2.8
POWer<m>:QUALity:DISPlay:POWer:REALpower	`POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]?` on page 1429	Replaced since FW 2.8

Legacy command	Replaced by	Comment
POWer<m>:QUALity:RESult:POWer:REAL-power:AVERage POWer<m>:QUALity:RESult:POWer:REAL-power:EVTCount POWer<m>:QUALity:RESult:POWer:REAL-power:NPEak POWer<m>:QUALity:RESult:POWer:REAL-power:PPEak POWer<m>:QUALity:RESult:POWer:REAL-power:RMS POWer<m>:QUALity:RESult:POWer:REAL-power:STDDev POWer<m>:QUALity:RESult:POWer:REAL-power:WFMCount POWer<m>:QUALity:RESult:POWer:REAL-power[:ACTual]	POWer<m>:QUALity:RESult:POWer:ACTive:AVERage? on page 1429 POWer<m>:QUALity:RESult:POWer:ACTive:EVTCount? on page 1429 POWer<m>:QUALity:RESult:POWer:ACTive:NPEak? on page 1429 POWer<m>:QUALity:RESult:POWer:ACTive:PPEak? on page 1430 POWer<m>:QUALity:RESult:POWer:ACTive:RMS? on page 1430 POWer<m>:QUALity:RESult:POWer:ACTive:STDDev? on page 1430 POWer<m>:QUALity:RESult:POWer:ACTive:WFMCount? on page 1430 POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]? on page 1429	Replaced since FW 2.8
POWer<m>:HARMonics:DISPlay:FREQuency:STARt[:VALue] POWer<m>:HARMonics:DISPlay:FREQuency:STOP[:VALue]	POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] on page 1437 POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] on page 1437	Replaced since FW 2.9

18.23.3 Serial protocols

18.23.3.1 General

Legacy command	Replaced by	Comment
SBUS<sb>:SETReflevels	-	No longer needed since FW 2.7

18.23.3.2 SPI

Table 18-9: SPI trigger

Legacy command	Replaced by	Comment
TRIGger:SPI:DMINpattern TRIGger:SPI:DPOSition TRIGger:SPI:FCONdition TRIGger:SPI:PALignment TRIGger:SPI:TYPE	TRIGger:SBHW:SPI:DMINpattern TRIGger:SBHW:SPI:DPOSition TRIGger:SBHW:SPI:FCONdition TRIGger:SBHW:SPI:PALignment TRIGger:SBHW:SPI:TYPE	Replaced since FW 2.3

Table 18-10: SPI decode results

Legacy command	Replaced by	Comment
SBUS<sb>:SPI:FRAMe<fr>:COUNt?	SBUS<sb>:SPI:FCOunt?	Replaced since FW 2.6

18.23.3.3 QUAD-SPI

Table 18-11: QUAD-SPI decode results

Legacy command	Replaced by	Comment
SBUS<sb>:QSPI:FRAMe<fr>:DCOunt SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:DVALue	SBUS<sb>:QSPI:FRAMe<fr>:FLDCount? SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.4 I2C

Table 18-12: I2C configuration

Legacy command	Replaced by	Comment
SBUS<sb>:I2C:NewList SBUS<sb>:I2C:SYMBols	-	No longer needed since FW 2.11

Table 18-13: I2C trigger

Legacy command	Replaced by	Comment
TRIGger:I2C:ACCess TRIGger:I2C:ACONdition TRIGger:I2C:ADDRess TRIGger:I2C:ADDTo TRIGger:I2C:ADNack TRIGger:I2C:AMODe TRIGger:I2C:DCONdition TRIGger:I2C:DMIN TRIGger:I2C:DPOSition TRIGger:I2C:DRNack TRIGger:I2C:DWNack TRIGger:I2C:TYPE	TRIGger:SBHW:I2C:ACCess TRIGger:SBHW:I2C:ACONdition TRIGger:SBHW:I2C:ADDRess TRIGger:SBHW:I2C:ADDTo TRIGger:SBHW:I2C:ADNack TRIGger:SBHW:I2C:AMODe TRIGger:SBHW:I2C:DCONdition TRIGger:SBHW:I2C:DMIN TRIGger:SBHW:I2C:DPOSition TRIGger:SBHW:I2C:DRNack TRIGger:SBHW:I2C:DWNack TRIGger:SBHW:I2C:TYPE	Replaced since FW 2.3

Table 18-14: I2C decode results

Legacy command	Replaced by	Comment
SBUS<sb>:I2C:FRAMe<fr>:COUNt SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACCess SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACKStart SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:COMPlete	-	No longer needed since FW 2.6
SBUS<sb>:I2C:FRAMe<fr>:BCOunt SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:STARt SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:VALue	SBUS<sb>:I2C:FRAMe<fr>:FLDCount? SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STARt? SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.5 I3C

Table 18-15: I3C configuration

Legacy command	Replaced by	Comment
SBUS<sb>:I3C:NewList SBUS<sb>:I3C:SYMBols	-	No longer needed since FW 2.11

Table 18-16: I3C decode results

Legacy command	Replaced by	Comment
SBUS<sb>:I3C:FRAMe<fr>:AACCess? SBUS<sb>:I3C:FRAMe<fr>:Access? SBUS<sb>:I3C:FRAMe<fr>:ACOMplete? SBUS<sb>:I3C:FRAMe<fr>:ADBStart? SBUS<sb>:I3C:FRAMe<fr>:ADEVice? SBUS<sb>:I3C:FRAMe<fr>:AMODe? SBUS<sb>:I3C:FRAMe<fr>:BYTE<o>:Access? SBUS<sb>:I3C:FRAMe<fr>:BYTE<o>:ACKStart? SBUS<sb>:I3C:FRAMe<fr>:BYTE<o>:COMPlete? SBUS<sb>:I3C:FRAMe<fr>:BYTE<o>:STARt?	-	No longer needed since FW 2.6
SBUS<sb>:I3C:FRAMe<fr>:BCOunt SBUS<sb>:I3C:FRAMe<fr>:COunt	SBUS<sb>:I3C:FRAMe<fr>:FLDCount?	Replaced since FW 2.6

18.23.3.6 UART

Table 18-17: UART configuration

Legacy command	Replaced by	Comment
SBUS<sb>:UART:EWORd	-	No longer needed since FW 2.7

Table 18-18: UART trigger

Legacy command	Replaced by	Comment
TRIGger:UART:DATA TRIGger:UART:DPOSition TRIGger:UART:FCONdition TRIGger:UART:OPERator TRIGger:UART:SOURce TRIGger:UART:TYPE	TRIGger:SBHW:UART:DATA TRIGger:SBHW:UART:DPOSition TRIGger:SBHW:UART:FCONdition TRIGger:SBHW:UART:OPERator TRIGger:SBHW:UART:SOURce TRIGger:SBHW:UART:TYPE	Replaced since FW 2.3

Table 18-19: UART decode results

Legacy command	Replaced by	Comment
SBUS<sb>:UART:WORD<w>:COUNt?	SBUS<sb>:UART:WCOunt?	Replaced since FW 2.6

18.23.3.7 CAN

Table 18-20: CAN configuration

Legacy command	Replaced by	Comment
SBUS<sb>:CAN:NewList SBUS<sb>:CAN:SYMBols	-	No longer needed since FW 2.11

Table 18-21: CAN trigger

Legacy command	Replaced by	Comment
TRIGger:CAN:ACKerror TRIGger:CAN:BITSterror TRIGger:CAN:BORDer TRIGger:CAN:CRCerror TRIGger:CAN:DCONdition TRIGger:CAN:DLC TRIGger:CAN:DLCCondition TRIGger:CAN:DMIN	TRIGger:SBHW:CAN:ACKerror TRIGger:SBHW:CAN:BITSterror TRIGger:SBHW:CAN:BORDer TRIGger:SBHW:CAN:CRCerror TRIGger:SBHW:CAN:DCONdition TRIGger:SBHW:CAN:DLC TRIGger:SBHW:CAN:DLCCondition TRIGger:SBHW:CAN:DMIN	Replaced since FW 2.3
TRIGger:CAN:FORMerror TRIGger:CAN:FTYPe TRIGger:CAN:ICONdition TRIGger:CAN:IMAX TRIGger:CAN:IMIN TRIGger:CAN:ITYPe TRIGger:CAN:TYPE	TRIGger:SBHW:CAN:FORMerror TRIGger:SBHW:CAN:FTYPe TRIGger:SBHW:CAN:ICONdition TRIGger:SBHW:CAN:IMAX TRIGger:SBHW:CAN:IMIN TRIGger:SBHW:CAN:ITYPe TRIGger:SBHW:CAN:TYPE	Replaced since FW 2.3

Legacy command	Replaced by	Comment
TRIGger:CAN:FDATa:BRS TRIGger:CAN:FDATa:DPOSition TRIGger:CAN:FDATa:ESI TRIGger:CAN:FDATa:SCERror	TRIGger:SBHW:CAN:FDATa:BRS TRIGger:SBHW:CAN:FDATa:DPOSition TRIGger:SBHW:CAN:FDATa:ESI TRIGger:SBHW:CAN:FDATa:SCERror	Replaced since FW 2.3
TRIGger:CAN:XDATa:AF:CONDition TRIGger:CAN:XDATa:AF:MAX TRIGger:CAN:XDATa:AF:MIN TRIGger:CAN:XDATa:SDT:CONDition TRIGger:CAN:XDATa:SDT:MAX TRIGger:CAN:XDATa:SDT:MIN TRIGger:CAN:XDATa:SEC TRIGger:CAN:XDATa:VCID:CONDition TRIGger:CAN:XDATa:VCID:MAX TRIGger:CAN:XDATa:VCID:MIN	TRIGger:SBHW:CAN:XDATa:AF:CONDition TRIGger:SBHW:CAN:XDATa:AF:MAX TRIGger:SBHW:CAN:XDATa:AF:MIN TRIGger:SBHW:CAN:XDATa:SDT:CONDition TRIGger:SBHW:CAN:XDATa:SDT:MAX TRIGger:SBHW:CAN:XDATa:SDT:MIN TRIGger:SBHW:CAN:XDATa:SEC TRIGger:SBHW:CAN:XDATa:VCID:CONDition TRIGger:SBHW:CAN:XDATa:VCID:MAX TRIGger:SBHW:CAN:XDATa:VCID:MIN	Replaced since FW 2.3

Table 18-22: CAN decode results

Legacy command	Replaced by	Comment
SBUS<sb>:CAN:FRAMe<fr>:BSEPosition?	-	No longer needed since FW 2.1
SBUS<sb>:CAN:FRAMe<fr>:SDATa? SBUS<sb>:CAN:FRAMe<fr>:SDEXport?	-	No longer needed since FW 2.6
SBUS<sb>:CAN:FRAMe<fr>:BCOunt? SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:FVALue? SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:LABel? SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:STATe? SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:VALue? SBUS<sb>:CAN:FRAMe<fr>:COUNt?	SBUS<sb>:CAN:FRAMe<fr>:FLDCount? SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:FVALue? SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:VALue? SBUS<sb>:CAN:FCOunt?	Replaced since FW 2.6
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SBC?	SBUS<sb>:CAN:FRAMe<fr>:SBC?	Replaced since FW 2.7
SBUS<sb>:CAN:FRAMe<fr>:FERCause? SBUS<sb>:CAN:FRAMe<fr>:STUFf?	-	No longer needed since FW 2.9

18.23.3.8 LIN

Table 18-23: LIN configuration

Legacy command	Replaced by	Comment
SBUS<sb>:LIN:NewList SBUS<sb>:LIN:SYMBols	-	No longer needed since FW 2.11

Table 18-24: LIN trigger

Legacy command	Replaced by	Comment
TRIGger:LIN:CHKSerror	TRIGger:SBHW:LIN:CHKSerror	Replaced since FW 2.3
TRIGger:LIN:DCONdition	TRIGger:SBHW:LIN:DCONdition	
TRIGger:LIN:DMIN	TRIGger:SBHW:LIN:DMIN	
TRIGger:LIN:DPOSition	TRIGger:SBHW:LIN:DPOSition	
TRIGger:LIN:ICONdition	TRIGger:SBHW:LIN:ICONdition	
TRIGger:LIN:IMAX	TRIGger:SBHW:LIN:IMAX	
TRIGger:LIN:IMIN	TRIGger:SBHW:LIN:IMIN	
TRIGger:LIN:IPERror	TRIGger:SBHW:LIN:IPERror	
TRIGger:LIN:SYERror	TRIGger:SBHW:LIN:SYERror	
TRIGger:LIN:TYPE	TRIGger:SBHW:LIN:TYPE	

Table 18-25: LIN decode results

Legacy command	Replaced by	Comment
SBUS<sb>:LIN:FRAMe<fr>:IDSTate?	-	No longer needed since FW 2.6
SBUS<sb>:LIN:FRAMe<fr>:BCOunt?	SBUS<sb>:LIN:FRAMe<fr>:FLDCount?	Replaced since FW 2.6
SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:COUNt?	SBUS<sb>:LIN:FRAMe<fr>:FLDCount?	
SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:FVALue?	SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:FVALue?	
SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:LABel?	SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:LABel?	
SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:STATe?	SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:STATe?	
SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:VALue?	SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:VALue?	
SBUS<sb>:LIN:FRAMe<fr>:COUNt?	SBUS<sb>:LIN:FCOunt?	

18.23.3.9 SENT

Table 18-26: SENT configuration

Legacy command	Replaced by	Comment
SBUS<sb>:SENT:NewList SBUS<sb>:SENT:SYMBols	-	No longer needed since FW 2.11

Table 18-27: SENT decode results

Legacy command	Replaced by	Comment
SBUS<sb>:SENT:FRAMe<fr>:COUNt SBUS<sb>:SENT:FRAMe<fr>:FCSValue? SBUS<sb>:SENT:FRAMe<fr>:FIDValue? SBUS<sb>:SENT:FRAMe<fr>:FPDValue? SBUS<sb>:SENT:FRAMe<fr>:FSYNc? SBUS<sb>:SENT:FRAMe<fr>:PDValue?	-	No longer needed since FW 2.6
SBUS<sb>:SENT:FRAMe<fr>:NIBB<o>:STATe SBUS<sb>:SENT:FRAMe<fr>:NIBB<o>:VALue	SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.10 ARINC 429

Table 18-28: ARINC configuration

Legacy command	Replaced by	Comment
SBUS<sb>:ARINc:NewList SBUS<sb>:ARINc:SYMBols	-	No longer needed since FW 2.11

Table 18-29: ARINC 429 trigger

Legacy command	Replaced by	Comment
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:IMAX TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:IMIN TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:IOPerator TRIGger:SBSW:ARINc:IMAX TRIGger:SBSW:ARINc:IMIN TRIGger:SBSW:ARINc:IOPerator		Not supported

Table 18-30: ARINC 429 decode results

Legacy command	Replaced by	Comment
SBUS<sb>:ARINc:WORD<w>:COUNt?	SBUS<sb>:ARINc:WCOunt?	Replaced since FW 2.6

18.23.3.11 SpaceWire

Table 18-31: SpaceWire configuration

Legacy command	Replaced by	Comment
SBUS<sb>:SWIRe:FILTer:IMAX SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:IMAX SBUS<sb>:SWIRe:FILTer:IMIN SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:IMIN SBUS<sb>:SWIRe:FILTer:IOPerator SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:IOPerator	-	No longer needed since FW 2.7

18.23.3.12 MIL-1553

Table 18-32: MIL-1553 configuration

Legacy command	Replaced by	Comment
SBUS<sb>:MILStd:NewList SBUS<sb>:MILStd:SYMBols	-	No longer needed since FW 2.11

Table 18-33: MIL-1553 decode results

Legacy command	Replaced by	Comment
SBUS<sb>:MILStd:WORD<w>:COUNt	-	No longer needed since FW 2.6

18.23.3.13 SPMI

Table 18-34: SPMI configuration

Legacy command	Replaced by	Comment
SBUS<sb>:SPMI:NewList SBUS<sb>:SPMI:SYMBols	-	No longer needed since FW 2.11

Table 18-35: SPMI decode results

Legacy command	Replaced by	Comment
SBUS<sb>:SPMI:FRAMe<fr>:FDCount?	SBUS<sb>:SPMI:FRAMe<fr>:FLDCount?	Replaced since FW 2.6

18.23.3.14 RFFE

Table 18-36: RFFE configuration

Legacy command	Replaced by	Comment
SBUS<sb>:RFFE:CLOCk:POLarity SBUS<sb>:RFFE:DATA:POLarity	-	No longer needed since FW 2.6
SBUS<sb>:RFFE:NewList SBUS<sb>:RFFE:SYMBols	-	No longer needed since FW 2.11

Table 18-37: RFFE decode results

Legacy command	Replaced by	Comment
SBUS<sb>:RFFE:SEQuence<se>:ADDRess SBUS<sb>:RFFE:SEQuence<se>:BCOunt SBUS<sb>:RFFE:SEQuence<se>:BYTE<o>:FVALue SBUS<sb>:RFFE:SEQuence<se>:BYTE<o>:NAME SBUS<sb>:RFFE:SEQuence<se>:BYTE<o>:STATe SBUS<sb>:RFFE:SEQuence<se>:BYTE<o>:VALue SBUS<sb>:RFFE:SEQuence<se>:DATA SBUS<sb>:RFFE:SEQuence<se>:RBTRate SBUS<sb>:RFFE:SEQuence<se>:SADD SBUS<sb>:RFFE:SEQuence<se>:STARt SBUS<sb>:RFFE:SEQuence<se>:STATe SBUS<sb>:RFFE:SEQuence<se>:STOP SBUS<sb>:RFFE:SEQuence<se>:TYPE SBUS<sb>:RFFE:SEQuence<se>:WBTRate SBUS<sb>:RFFE:SEQuence<se>:WCOunt	-	No longer needed since FW 2.6
SBUS<sb>:RFFE:FRAMe<fr>:BC? SBUS<sb>:RFFE:FRAMe<fr>:FDCount? SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:RFFE:FRAMe<fr>:RBRate? SBUS<sb>:RFFE:FRAMe<fr>:SA? SBUS<sb>:RFFE:FRAMe<fr>:STATus? SBUS<sb>:RFFE:FRAMe<fr>:WBRate? SBUS<sb>:RFFE:SEQuence<se>:SYMBol SBUS<sb>:RFFE:FRAMe<fr>:PADZero SBUS<sb>:RFFE:FRAMe<fr>:PADone SBUS<sb>:RFFE:FRAMe<fr>:PCTRl	SBUS<sb>:RFFE:FRAMe<fr>:BCOunt? SBUS<sb>:RFFE:FRAMe<fr>:FLDCount? SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:NAME? SBUS<sb>:RFFE:FRAMe<fr>:RBTRate? SBUS<sb>:RFFE:FRAMe<fr>:SADD? SBUS<sb>:RFFE:FRAMe<fr>:STATe? SBUS<sb>:RFFE:FRAMe<fr>:WBTRate? SBUS<sb>:RFFE:FRAMe<fr>:SYMBol? SBUS<sb>:RFFE:FRAMe<fr>:PADZero? SBUS<sb>:RFFE:FRAMe<fr>:PADone? SBUS<sb>:RFFE:FRAMe<fr>:PCTRl?	Replaced since FW 2.6

18.23.3.15 Manchester

Table 18-38: Manchester decode results

Legacy command	Replaced by	Comment
SBUS<sb>:MANCh:FRAMe<fr>:RES1? SBUS<sb>:MANCh:FRAMe<fr>:RES2? SBUS<sb>:MANCh:FRAMe<fr>:RES3?	SBUS<sb>:MANCh:FRAMe<fr>:CONE? SBUS<sb>:MANCh:FRAMe<fr>:CTWO? SBUS<sb>:MANCh:FRAMe<fr>:CTHRee?	Replaced since FW 2.9

18.23.3.16 NRZ clocked

Table 18-39: NRZ clocked decode results

Legacy command	Replaced by	Comment
SBUS<sb>:NRZC:FRAMe<fr>:RES1? SBUS<sb>:NRZC:FRAMe<fr>:RES2? SBUS<sb>:NRZC:FRAMe<fr>:RES3?	SBUS<sb>:NRZC:FRAMe<fr>:CONE? SBUS<sb>:NRZC:FRAMe<fr>:CTWO? SBUS<sb>:NRZC:FRAMe<fr>:CTHRee?	Replaced since FW 2.9

18.23.3.17 NRZ unclocked

Table 18-40: NRZ unclocked decode results

Legacy command	Replaced by	Comment
SBUS<sb>:NRZU:FRAMe<fr>:RES1? SBUS<sb>:NRZU:FRAMe<fr>:RES2? SBUS<sb>:NRZU:FRAMe<fr>:RES3?	SBUS<sb>:NRZU:FRAMe<fr>:CONE? SBUS<sb>:NRZU:FRAMe<fr>:CTWO? SBUS<sb>:NRZU:FRAMe<fr>:CTHRee?	Replaced since FW 2.9

18.23.3.18 10BASE-T1S

Table 18-41: 10BASE-T1S configuration

Legacy command	Replaced by	Comment
SBUS<sb>:TNOS:HYSTeresis	-	No longer needed since FW 2.6
SBUS<sb>:TNOS:NewList SBUS<sb>:TNOS:SYMBols	-	No longer needed since FW 2.11

Table 18-42: 10BASE-T1S decode results

Legacy command	Replaced by	Comment
SBUS<sb>:TNOS:FRAMe<fr>:COUNt SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:COUNt	-	No longer needed since FW 2.6
SBUS<sb>:TNOS:FRAMe<fr>:BCOunt SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:FVALue SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:LABel SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:STATe SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:VALue	SBUS<sb>:TNOS:FRAMe<fr>:FLDCount? SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:FVALue? SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.19 100BASE-T1

Table 18-43: 100BASE-T1 configuration

Legacy command	Replaced by	Comment
SBUS<sb>:HBTO:NewList SBUS<sb>:HBTO:SYMBols	-	No longer needed since FW 2.11

Table 18-44: 100BASE-T1 decode results

Legacy command	Replaced by	Comment
SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:COUNt SBUS<sb>:HBTO:FRAMe<fr>:COUNt	-	No longer needed since FW 2.6
SBUS<sb>:HBTO:FRAMe<fr>:BCOunt? SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:FVALue SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:LABel SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:STATe SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:VALue	SBUS<sb>:CAN:FRAMe<fr>:FLDCount? SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:FVALue? SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.20 1000BASE-T1

Table 18-45: 1000BASE-T1 configuration

Legacy command	Replaced by	Comment
SBUS<sb>:TBTO:FRAMe<fr>:COUNt	SBUS<sb>:TBTO:FCOunt?	Replaced since FW 2.8
SBUS<sb>:TBTO:SYMRate SBUS<sb>:TBTO:WNDSize	-	Obsolete since FW 2.8
SBUS<sb>:TBTO:NewList SBUS<sb>:TBTO:SYMBols	-	No longer needed since FW 2.11

19 Maintenance and support

The instrument does not need periodic maintenance. Only the cleaning of the instrument is essential.

We advise to check the nominal data from time to time.

To protect the front panel and to transport the instrument to another workplace safely and easily, various accessories are provided. Refer to the specifications document for available covers and cases and their order numbers.

19.1 Cleaning

How to clean the product is described in "Cleaning the product" on page 30.

Do not use any liquids for cleaning. Cleaning agents, solvents, acids and bases can damage the front panel labeling, plastic parts and display.

19.2 Changing fuses

If the product does not start, it is possible that a blown fuse is the cause.

The product is protected by 2 fuses of Size 5x20 mm, 250V~, T5H (slow-blow), IEC 60127-2 (order no. 0099.6735.00).

1. **WARNING!** The fuse is part of the AC power supply. Handling the fuse while the power is on can lead to electric shock.

   Before changing the fuse:

   a) Set the switch on the power supply to position [0].
   b) Disconnect the product from the power source.

2. The fuse slot is on the rear panel between the mains switch and AC power supply connector.
   Pull out the fuse holder.
3. Check the condition of the fuse.
4. Replace the blown fuse. Only use a fuse of the specified type.
5. Insert the fuse holder into its slot until it latches.

19.3 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 19-1: QR code to the Rohde & Schwarz support page

19.4 Information for technical support

If you encounter problems that you cannot solve yourself, contact your Rohde & Schwarz support center, see Contacting customer support.

The support center finds solutions more quickly and efficiently, if you provide them with information on the instrument and an error description. To create, collect and save the required information, you can create a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

1. Open the "Settings" > "Maintenance" dialog.
2. Select the "Service" tab.
3. Tap "Create report".
   If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder `/home/storage/userData`.
4. Create a support ticket that describes the problem, and attach the report file.

See also: Section 5.7.5, "Service", on page 120.

19.5 Data security

If you have to send the instrument to the service, or if the instrument is used in a secured environment, consider the document "Instrument Security Procedures" that is delivered on the MXO 5 webpage.

19.6 Reporting cybersecurity issues

Contact us immediately if you discover a cybersecurity issue in a Rohde & Schwarz product. We keep reports confidential and never reveal your identity without consent.

1. Prepare a report with the following information, if available:
   - Affected product with product name, serial number and software version
   - Detailed description of the issue including the steps to reproduce it
   - Contact information, including reporter name, organization and preferred communication channel
2. Contact our customer support or send an email to:
   productsecurity@rohde-schwarz.com

   Our product security team will analyze your report and coordinate any necessary vulnerability disclosure. We will give you an estimated resolution timeframe and keep you informed of progress.

19.7 Transporting

Lifting and carrying

See: "Lifting and carrying the instrument" on page 26

Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection. You can also contact your local Rohde & Schwarz service center for advice.

Securing

When moving the MXO 5 in a vehicle or using transporting equipment, make sure that the MXO 5 is properly secured. Only use items intended for securing objects.

Transport altitude

Unless otherwise specified in the specifications document, the maximum transport altitude without pressure compensation is 4500 m above sea level.

19.8 Storage

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the specifications document.

19.9 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

Disposing of electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.



Figure 19-2: Labeling in line with EU directive WEEE

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

List of commands

*CAL?....1090
*CLS....1090
*IDN?....1091
*OPC....1091
*OPT?....1091
*RCL....1091
*RST....1092
*SAV....1092
*SRE....1092
*STB?....1092
*TRG....1092
*TST?....1093
*WAI....1093
ACQuire:AVAilable?....1138
ACQuire:AVERage?....1139
ACQuire:COUNt....1139
ACQuire:CURRent?....1139
ACQuire:DRESolution?....2359
ACQuire:HISTory:CURRent....1260
ACQuire:HISTory:ISODate?....1261
ACQuire:HISTory:PLAY....1261
ACQuire:HISTory:REPLay....1261
ACQuire:HISTory:STARt....1261
ACQuire:HISTory:STOP....1262
ACQuire:HISTory:TPACq....1262
ACQuire:HISTory:TSABsolute?....1262
ACQuire:HISTory:TSDate?....1262
ACQuire:HISTory:TSRelative?....1263
ACQuire:HISTory:TSRReference?....1263
ACQuire:HISTory[:STATe]....1263
ACQuire:INTerpolate....1140
ACQuire:POINts:ARATe?....1140
ACQuire:POINts:DVALue?....2359
ACQuire:POINts:MAXimum....1140
ACQuire:POINts:MODE....1141
ACQuire:POINts[:VALue]....1140
ACQuire:POMemory?....1141
ACQuire:RESolution?....1141
ACQuire:RLReal?....1142
ACQuire:ROLLmode:OSCapture....1137
ACQuire:ROLLmode:POINts?....1137
ACQuire:SEGMented:MAX....1177
ACQuire:SEGMented:STATe....1177
ACQuire:SRATe:MINimum....1142
ACQuire:SRATe:MODE....1143
ACQuire:SRATe[:VALue]....1142
ACQuire:SRReal?....1143

ACQuire:TYPE 1143
AUToscale 1135
CALCulate:MATH<m>:DATA:HEADer? 1302
CALCulate:MATH<m>:DATA:STYPe? 1302
CALCulate:MATH<m>:DATA[:VALues]? 1302
CALCulate:MATH<m>:ENVSelection 1259
CALCulate:MATH<m>:LABel 1258
CALCulate:MATH<m>:SLABel 1258
CALCulate:MATH<m>:STATe 1256
CALCulate:MATH<m>:UNIT 1259
CALCulate:MATH<m>:VERTical:OFFSet 1259
CALCulate:MATH<m>:VERTical:SCALe:MODE 1260
CALCulate:MATH<m>:VERTical:SCALe[:VALue] 1258
CALCulate:MATH<m>[:EXPRession][:DEFine] 1256
CALCulate:SPECtrum<sp>:COUPling:FROM 1361
CALCulate:SPECtrum<sp>:COUPling:MODE 1361
CALCulate:SPECtrum<sp>:COUPling[:ENABle] 1361
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:ADJusted? 1362
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO 1362
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio 1363
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue] 1363
CALCulate:SPECtrum<sp>:FREQuency:CENTer 1363
CALCulate:SPECtrum<sp>:FREQuency:SCALe 1364
CALCulate:SPECtrum<sp>:FREQuency:SPAN 1364
CALCulate:SPECtrum<sp>:FREQuency:STARt 1364
CALCulate:SPECtrum<sp>:FREQuency:STOP 1365
CALCulate:SPECtrum<sp>:FREQuency:WINDow:TYPE 1365
CALCulate:SPECtrum<sp>:GATE:POSition 1370
CALCulate:SPECtrum<sp>:GATE:STARt 1370
CALCulate:SPECtrum<sp>:GATE:STOP 1371
CALCulate:SPECtrum<sp>:GATE:WIDTh 1371
CALCulate:SPECtrum<sp>:MAGNitude:LEVel 1366
CALCulate:SPECtrum<sp>:MAGNitude:RANGe 1366
CALCulate:SPECtrum<sp>:MAGNitude:SCALe 1366
CALCulate:SPECtrum<sp>:OVERlap:ENABle 1376
CALCulate:SPECtrum<sp>:OVERlap:FACTor:ADJusted? 1376
CALCulate:SPECtrum<sp>:OVERlap:FACTor:VALue 1376
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:ADJusted? 1377
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle 1377
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue 1377
CALCulate:SPECtrum<sp>:OVERlap:FWIDth? 1378
CALCulate:SPECtrum<sp>:PEXCursion 1368
CALCulate:SPECtrum<sp>:PLISt:COUNt? 1372
CALCulate:SPECtrum<sp>:PLISt:LABel:BORDer 1125
CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe] 1374
CALCulate:SPECtrum<sp>:PLISt:LABel:INVert 1375
CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount 1374
CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount 1375
CALCulate:SPECtrum<sp>:PLISt:LABel[:STATe] 1375
CALCulate:SPECtrum<sp>:PLISt:MAXCount 1372

CALCulate:SPECtrum<sp>:PLISt:MODE....1372
CALCulate:SPECtrum<sp>:PLISt:RESult[:VALue]?....1373
CALCulate:SPECtrum<sp>:PLISt:SORT:COLumn....1374
CALCulate:SPECtrum<sp>:PLISt:SORT:ORDer....1374
CALCulate:SPECtrum<sp>:PLISt:SOURce....1373
CALCulate:SPECtrum<sp>:PLISt:SPOW....1373
CALCulate:SPECtrum<sp>:PLISt[:STATe]....1372
CALCulate:SPECtrum<sp>:PRESet....1367
CALCulate:SPECtrum<sp>:SOURce....1367
CALCulate:SPECtrum<sp>:STATe....1368
CALCulate:SPECtrum<sp>:THReshold....1368
CALCulate:SPECtrum<sp>:WAVeform:AVERage:COUNt....1369
CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA:HEADer?....1303
CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA[:VALues]?....1303
CALCulate:SPECtrum<sp>:WAVeform:AVERage:ENABle....1369
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA:HEADer?....1303
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA[:VALues]?....1303
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:ENABle....1369
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA:HEADer?....1303
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA[:VALues]?....1303
CALCulate:SPECtrum<sp>:WAVeform:MINimum:ENABle....1369
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:FRAMe<fr>[:VALues]?....1304
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:HEADer?....1303
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA[:VALues]?....1303
CALCulate:SPECtrum<sp>:WAVeform:NORMal[:ENABle]....1370
CALibration:DATE?....1133
CALibration:RESult?....1133
CALibration:TIME?....1133
CALibration[:ALL]....1132
CHANnel<ch>:ADCState:STATus:NCLipping:CONDition?....2390
CHANnel<ch>:ADCState:STATus:NCLipping:ENABle....2391
CHANnel<ch>:ADCState:STATus:NCLipping:NTRansition....2392
CHANnel<ch>:ADCState:STATus:NCLipping:PTRansition....2392
CHANnel<ch>:ADCState:STATus:NCLipping[:EVENt]?....2390
CHANnel<ch>:ADCState:STATus:PCLipping:CONDition?....2390
CHANnel<ch>:ADCState:STATus:PCLipping:ENABle....2391
CHANnel<ch>:ADCState:STATus:PCLipping:NTRansition....2392
CHANnel<ch>:ADCState:STATus:PCLipping:PTRansition....2392
CHANnel<ch>:ADCState:STATus:PCLipping[:EVENt]?....2390
CHANnel<ch>:BANDwidth....1148
CHANnel<ch>:COUPling....1146
CHANnel<ch>:DATA:HEADer?....1299
CHANnel<ch>:DATA[:VALues]?....1299
CHANnel<ch>:EATScale....1148
CHANnel<ch>:EATTenuation....1149
CHANnel<ch>:IMPedance....1149
CHANnel<ch>:INVert....1147
CHANnel<ch>:OFFSet....1145
CHANnel<ch>:OVERload:STATus:CONDition?....2390
CHANnel<ch>:OVERload:STATus:ENABle....2391

CHANnel<ch>:OVERload:STATus:NTRansition....2392
CHANnel<ch>:OVERload:STATus:PTRansition....2393
CHANnel<ch>:OVERload:STATus[:EVENt]....2390
CHANnel<ch>:POSition....1146
CHANnel<ch>:PPSupply:STATus:CONDition?....2390
CHANnel<ch>:PPSupply:STATus:ENABle....2391
CHANnel<ch>:PPSupply:STATus:NTRansition....2392
CHANnel<ch>:PPSupply:STATus:PTRansition....2393
CHANnel<ch>:PPSupply:STATus[:EVENt]....2390
CHANnel<ch>:RANGe....1145
CHANnel<ch>:SCALe....1144
CHANnel<ch>:SKEW:TIME....1147
CHANnel<ch>:SLABel....1147
CHANnel<ch>:STATe....1144
CHANnel<ch>:UDUNit....1150
CHANnel<ch>:WARNoverload:STATus:CONDition?....2390
CHANnel<ch>:WARNoverload:STATus:ENABle....2391
CHANnel<ch>:WARNoverload:STATus:NTRansition....2392
CHANnel<ch>:WARNoverload:STATus:PTRansition....2393
CHANnel<ch>:WARNoverload:STATus[:EVENt]?....2390
COUPling<m>:ADD....1151
COUPling<m>:OFFSet....1151
COUPling<m>:POSition....1151
COUPling<m>:REMove....1151
COUPling<m>:SCALing....1152
COUPling<m>:STATe....1152
CURSor<cu>:AOFF....1348
CURSor<cu>:COUNt?....1348
CURSor<cu>:DISPlay:VALues....1354
CURSor<cu>:FFT:SETCenter....1358
CURSor<cu>:FFT:TOCenter....1358
CURSor<cu>:FUNCtion....1348
CURSor<cu>:HORizontal<n>:LABel....1354
CURSor<cu>:LABel....1353
CURSor<cu>:MAXimum:LEFT....1359
CURSor<cu>:MAXimum:NEXT....1359
CURSor<cu>:MAXimum:RIGHt....1359
CURSor<cu>:MAXimum[:PEAK]....1358
CURSor<cu>:PEXCursion....1359
CURSor<cu>:SIAD....1355
CURSor<cu>:SMODe....1349
CURSor<cu>:SOURce....1349
CURSor<cu>:SSCReen....1353
CURSor<cu>:SSOurce....1351
CURSor<cu>:STATe....1348
CURSor<cu>:STYLe....1360
CURSor<cu>:TRACking[:STATe]....1353
CURSor<cu>:USSource....1350
CURSor<cu>:VERTical<n>:LABel....1354
CURSor<cu>:X1ENvelope....1356

CURSor<cu>:X1Position ... 1351
CURSor<cu>:X2ENvelope ... 1356
CURSor<cu>:X2Position ... 1351
CURSor<cu>:XCOupling ... 1355
CURSor<cu>:XDELta:INVerse? ... 1357
CURSor<cu>:XDELta[:VALue]? ... 1356
CURSor<cu>:Y1Position ... 1351
CURSor<cu>:Y2Position ... 1352
CURSor<cu>:YCOupling ... 1355
CURSor<cu>:YDELta:SLOPe? ... 1357
CURSor<cu>:YDELta[:VALue]? ... 1357
DIGital<m>:DATA:HEADer? ... 1304
DIGital<m>:DATA[:VALues]? ... 1305
DIGital<m>:HYSTeresis ... 2348
DIGital<m>:LABel ... 2349
DIGital<m>:PROBe<ch>[:ENABle]? ... 2348
DIGital<m>:SIZE ... 2349
DIGital<m>:SKEW ... 2349
DIGital<m>:STATe ... 2349
DIGital<m>:TECHnology ... 2350
DIGital<m>:THCoupling ... 2350
DIGital<m>:THReshold ... 2350
DISPlay:ANNotation:ARRow<m>:CLEar ... 1114
DISPlay:ANNotation:ARRow<m>:COLor ... 1114
DISPlay:ANNotation:ARRow<m>:DIRection ... 1114
DISPlay:ANNotation:ARRow<m>:HEIGht ... 1115
DISPlay:ANNotation:ARRow<m>:HORizontal:POSition ... 1115
DISPlay:ANNotation:ARRow<m>:REMove ... 1115
DISPlay:ANNotation:ARRow<m>:VERTical:POSition ... 1116
DISPlay:ANNotation:ARRow<m>:WIDTh ... 1116
DISPlay:ANNotation:ARRow<m>[:VALue] ... 1116
DISPlay:ANNotation:CLEar ... 1110
DISPlay:ANNotation:COLor<m>:CATalog? ... 1110
DISPlay:ANNotation:PLINe<m>:CLEar ... 1119
DISPlay:ANNotation:PLINe<m>:COLor ... 1119
DISPlay:ANNotation:PLINe<m>:EXTend ... 1119
DISPlay:ANNotation:PLINe<m>:REMove ... 1120
DISPlay:ANNotation:PLINe<m>[:VALue] ... 1120
DISPlay:ANNotation:RECTangle<m>:CLEar ... 1111
DISPlay:ANNotation:RECTangle<m>:COLor ... 1111
DISPlay:ANNotation:RECTangle<m>:HEIGht ... 1112
DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition ... 1112
DISPlay:ANNotation:RECTangle<m>:REMove ... 1112
DISPlay:ANNotation:RECTangle<m>:VERTical:POSition ... 1113
DISPlay:ANNotation:RECTangle<m>:WIDTh ... 1113
DISPlay:ANNotation:RECTangle<m>[:VALue] ... 1113
DISPlay:ANNotation:TEXT<m>:CLEar ... 1117
DISPlay:ANNotation:TEXT<m>:COLor ... 1117
DISPlay:ANNotation:TEXT<m>:FONTsize ... 1117
DISPlay:ANNotation:TEXT<m>:HORizontal:POSition ... 1118

DISPlay:ANNotation:TEXT<m>:REMove....1118
DISPlay:ANNotation:TEXT<m>:VERTical:POSition....1118
DISPlay:ANNotation:TEXT<m>[:VALue]....1118
DISPlay:ANNotation:TRANsparency....1111
DISPlay:BACKlight:DIMMing....1128
DISPlay:BACKlight[:BRIGtness]....1128
DISPlay:CLR....1129
DISPlay:COLor:SIGNal:ASSign....1121
DISPlay:COLor:SIGNal:CATalog?....1121
DISPlay:COLor:SIGNal:COLor....1121
DISPlay:COLor:SIGNal:USE....1122
DISPlay:DIAGram:CROSshair....1122
DISPlay:DIAGram:FINegrid....1122
DISPlay:DIAGram:GRID....1123
DISPlay:DIAGram:LABels....1123
DISPlay:DIAGram:STYLe....1128
DISPlay:DIAGram:XFIXed....1123
DISPlay:DIAGram:XPDivlabel....1123
DISPlay:DIAGram:YFIXed....1124
DISPlay:DIALog:FONTsize....1124
DISPlay:DIALog:TRANsparency....1124
DISPlay:INTensity....1127
DISPlay:MEASurements:LEVels....1125
DISPlay:PERSistence:INFinite....1126
DISPlay:PERSistence:RESet....1126
DISPlay:PERSistence:TIME....1127
DISPlay:PERSistence[:STATe]....1127
DISPlay:RESult:FONTsize....1124
DISPlay:SIGNal:LABel....1147
DISPlay:TOOLbar:COUNt?....1107
DISPlay:TOOLbar:DESelect....1108
DISPlay:TOOLbar:RESTore....1108
EXPort:HISTogram<m>:DATA:HEADer?....1306
EXPort:HISTogram<m>:DATA[:VALues]?....1307
EXPort:HISTogram<m>:NAME....1290
EXPort:HISTogram<m>:NORMalize....1290
EXPort:HISTogram<m>:SAVE....1290
EXPort:HMEasurement<m>:DATA:HEADer?....1306
EXPort:HMEasurement<m>:DATA[:VALues]?....1307
EXPort:HMEasurement<m>:NAME....1290
EXPort:HMEasurement<m>:NORMalize....1290
EXPort:HMEasurement<m>:SAVE....1290
EXPort:RESult:AUTonaming:NAME....1293
EXPort:RESult:AUTonaming:PATH....1293
EXPort:RESult:AUTonaming:TYPE....1293
EXPort:RESult:NAME....1293
EXPort:RESult:SAVE....1294
EXPort:RESult:SELect:CURSor....1294
EXPort:RESult:SELect:FRA:MARGin....1415
EXPort:RESult:SELect:FRA:MARKer....1416

EXPort:RESult:SELect:FRA:RESult ... 1416
EXPort:RESult:SELect:MEASurement ... 1294
EXPort:RESult:SELect:P3PHase<m> ... 1485
EXPort:RESult:SELect:PLISt ... 1294
EXPort:RESult:SELect:POWer<m> ... 1420
EXPort:WAVeform:ABORt ... 1285
EXPort:WAVeform:AUTonaming:NAME ... 1285
EXPort:WAVeform:AUTonaming:PATH ... 1286
EXPort:WAVeform:AUTonaming:TYPE ... 1286
EXPort:WAVeform:CURSorset ... 1286
EXPort:WAVeform:DATA[:VALues]? ... 1307
EXPort:WAVeform:GATE ... 1286
EXPort:WAVeform:NAME ... 1287
EXPort:WAVeform:SAVE ... 1287
EXPort:WAVeform:SCOPe ... 1287
EXPort:WAVeform:SOURce ... 1288
EXPort:WAVeform:STARt ... 1289
EXPort:WAVeform:STOP ... 1289
EYE<e>:DISPlay:PERSistence:INFinite ... 1555
EYE<e>:DISPlay:PERSistence:RESet ... 1555
EYE<e>:DISPlay:PERSistence:STATe ... 1555
EYE<e>:DISPlay:PERSistence:TIME ... 1556
EYE<e>:FILTer:BPATtern:MODE ... 1561
EYE<e>:FILTer:BPATtern:NPRBits ... 1562
EYE<e>:FILTer:BPATtern:SEQuence ... 1562
EYE<e>:FILTer:RFLSet ... 1562
EYE<e>:FILTer:STATe ... 1562
EYE<e>:HORizontal:ABSolute:POSition ... 1558
EYE<e>:HORizontal:ABSolute:RANGe ... 1558
EYE<e>:HORizontal:UINTerval:POSition ... 1559
EYE<e>:HORizontal:UINTerval:RANGe ... 1559
EYE<e>:HORizontal:UNIT ... 1559
EYE<e>:MSLices ... 1556
EYE<e>:QUALify:GATE ... 1556
EYE<e>:SAMTime ... 1557
EYE<e>:SOURce ... 1557
EYE<e>:STATe ... 1557
EYE<e>:TREFerence ... 1558
EYE<e>:VERTical:COUPle ... 1560
EYE<e>:VERTical:OFFSet ... 1560
EYE<e>:VERTical:POSition ... 1560
EYE<e>:VERTical:SCALe ... 1561
FORMat:BORDer ... 1094
FORMat:BPATtern ... 1095
FORMat[:DATA] ... 1093
FRANalysis:AMPLitude:DATA? ... 1416
FRANalysis:AMPLitude:ENABle ... 1403
FRANalysis:AMPLitude:MODE ... 1400
FRANalysis:AMPLitude:OFFSet ... 1403
FRANalysis:AMPLitude:PROFile:APOint ... 1401

FRANalysis:AMPLitude:PROFile:COUNt ... 1401
FRANalysis:AMPLitude:PROFile:MODE ... 1402
FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude ... 1402
FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency ... 1402
FRANalysis:AMPLitude:PROFile:POINt<m>:REMove ... 1402
FRANalysis:AMPLitude:PROFile:SORT ... 1403
FRANalysis:AMPLitude:SCALe ... 1404
FRANalysis:AUToscale:RESult[:ENABle] ... 1393
FRANalysis:AUToscale[:ENABle] ... 1393
FRANalysis:CALibration:CALibration ... 1406
FRANalysis:CALibration:RESult? ... 1406
FRANalysis:CALibration:STATe ... 1407
FRANalysis:ENABle ... 1393
FRANalysis:FREQuency:DATA? ... 1416
FRANalysis:FREQuency:MODE ... 1394
FRANalysis:FREQuency:STARt ... 1394
FRANalysis:FREQuency:STOP ... 1394
FRANalysis:GAIN:DATA? ... 1417
FRANalysis:GAIN:ENABle ... 1404
FRANalysis:GAIN:OFFSet ... 1404
FRANalysis:GAIN:SCALe ... 1404
FRANalysis:GENerator:AMPLitude ... 1400
FRANalysis:GENerator:LOAD ... 1401
FRANalysis:GENerator[:CHANnel] ... 1400
FRANalysis:HDEFinition[:ENABle] ... 1394
FRANalysis:IMPedance:DATA? ... 1417
FRANalysis:IMPedance:ENABle ... 1404
FRANalysis:IMPedance:SCALe ... 1405
FRANalysis:IMPedance:STARt ... 1405
FRANalysis:IMPedance:STOP ... 1405
FRANalysis:IMPedance[:MODE] ... 1395
FRANalysis:INPut[:SOURce] ... 1395
FRANalysis:MARGin:GAIN:FREQuency? ... 1407
FRANalysis:MARGin:GAIN:VALue? ... 1407
FRANalysis:MARGin:PHASe:FREQuency? ... 1408
FRANalysis:MARGin:PHASe:VALue? ... 1408
FRANalysis:MARGin:STATe ... 1408
FRANalysis:MARKer<m>:DIFFerence:FREQuency? ... 1409
FRANalysis:MARKer<m>:DIFFerence:GAIN? ... 1410
FRANalysis:MARKer<m>:DIFFerence:IMPedance? ... 1409
FRANalysis:MARKer<m>:DIFFerence:PHASe? ... 1410
FRANalysis:MARKer<m>:DIFFerence:REFerence<rc>? ... 1415
FRANalysis:MARKer<m>:FREQuency ... 1408
FRANalysis:MARKer<m>:GAIN? ... 1409
FRANalysis:MARKer<m>:IMPedance? ... 1408
FRANalysis:MARKer<m>:INDex? ... 1410
FRANalysis:MARKer<m>:PHASe? ... 1409
FRANalysis:MARKer<m>:REFerence<rc>? ... 1415
FRANalysis:MARKer<m>:SSCReen ... 1410
FRANalysis:MARKer<m>:STATe ... 1411

FRANalysis:MEASurement:DELay:MODE ... 1395
FRANalysis:MEASurement:DELay:PERiod[:NUMBer] ... 1396
FRANalysis:MEASurement:DELay:STATe ... 1395
FRANalysis:MEASurement:DELay[:TIME] ... 1396
FRANalysis:MEASurement:POINt[:DISPlay] ... 1396
FRANalysis:MEASurement:RBW:AUTO ... 1397
FRANalysis:MEASurement:RBW:VALue ... 1397
FRANalysis:MEASurement:RBW[:MODE] ... 1397
FRANalysis:MODE ... 1398
FRANalysis:OUTPut[:SOURce] ... 1398
FRANalysis:PHASe:DATA? ... 1417
FRANalysis:PHASe:ENABle ... 1405
FRANalysis:PHASe:MAXimum ... 1398
FRANalysis:PHASe:OFFSet ... 1406
FRANalysis:PHASe:SCALe ... 1406
FRANalysis:POINts:LOGarithmic ... 1398
FRANalysis:POINts:MODE ... 1399
FRANalysis:POINts:TOTal ... 1399
FRANalysis:REFCurve<rc>:CLEar ... 1411
FRANalysis:REFCurve<rc>:DATA? ... 1412
FRANalysis:REFCurve<rc>:ENABle ... 1412
FRANalysis:REFCurve<rc>:NAME ... 1412
FRANalysis:REFCurve<rc>:OFFSet ... 1412
FRANalysis:REFCurve<rc>:OPEN ... 1413
FRANalysis:REFCurve<rc>:SAVE ... 1413
FRANalysis:REFCurve<rc>:SCALe ... 1413
FRANalysis:REFCurve<rc>:SOURce ... 1414
FRANalysis:REFCurve<rc>:TOORiginal ... 1414
FRANalysis:REFCurve<rc>:UPDate ... 1414
FRANalysis:REFCurve<rc>:VMODe ... 1414
FRANalysis:REPeat ... 1399
FRANalysis:RESet ... 1399
FRANalysis:RESult:STATe ... 1411
FRANalysis:STATe ... 1400
GATE<g>:ABSolute:STARt ... 1234
GATE<g>:ABSolute:STOP ... 1234
GATE<g>:CURSor ... 1233
GATE<g>:ENABle ... 1232
GATE<g>:GCOupling ... 1232
GATE<g>:MODE ... 1234
GATE<g>:RELative:STARt ... 1235
GATE<g>:RELative:STOP ... 1235
GATE<g>:SHOW ... 1235
GATE<g>:SPECtrum ... 1233
GATE<g>:ZDIagram ... 1234
GENerator:RCL ... 1284
GENerator:SAV ... 1285
GENerator:SYNC[:COMBination] ... 2379
GUI:CSTYle ... 1107
GUI:SGRid:SLOCator ... 1107

GUI:SGRid:STABs ... 1107
HCOPy:DATA? ... 1298
HCOPy:DESTination<m> ... 1295
HCOPy:DEVice<m>:INVerse ... 1296
HCOPy:DEVice<m>:LANGuage ... 1295
HCOPy:IMMediate<m> ... 1296
HCOPy:IMMediate<m>:NEXT ... 1296
HCOPy:ISBA ... 1297
HCOPy:SSD ... 1297
HCOPy:WBKG ... 1297
HDEFinition:BWIDth ... 1177
HDEFinition:RESolution? ... 1178
HDEFinition:STATe ... 1178
HISTogram<m>:ADD ... 1272
HISTogram<m>:COUNt? ... 1272
HISTogram<m>:ENABle ... 1272
HISTogram<m>:MODE ... 1273
HISTogram<m>:REMove ... 1273
HISTogram<m>:RESet ... 1273
HISTogram<m>:SIZE ... 1273
HISTogram<m>:SOURce ... 1274
HISTogram<m>:WINDow:ENABle ... 1275
HISTogram<m>:WINDow:HORizontal:ABSolute:POSition ... 1275
HISTogram<m>:WINDow:HORizontal:ABSolute:SPAN ... 1275
HISTogram<m>:WINDow:HORizontal:ABSolute:STARt ... 1275
HISTogram<m>:WINDow:HORizontal:ABSolute:STOP ... 1275
HISTogram<m>:WINDow:HORizontal:MODE ... 1275
HISTogram<m>:WINDow:HORizontal:RELative:POSition ... 1276
HISTogram<m>:WINDow:HORizontal:RELative:SPAN ... 1276
HISTogram<m>:WINDow:HORizontal:RELative:STARt ... 1276
HISTogram<m>:WINDow:HORizontal:RELative:STOP ... 1276
HISTogram<m>:WINDow:VERTical:ABSolute:POSition ... 1276
HISTogram<m>:WINDow:VERTical:ABSolute:SPAN ... 1276
HISTogram<m>:WINDow:VERTical:ABSolute:STARt ... 1276
HISTogram<m>:WINDow:VERTical:ABSolute:STOP ... 1276
HISTogram<m>:WINDow:VERTical:MODE ... 1275
HISTogram<m>:WINDow:VERTical:RELative:POSition ... 1276
HISTogram<m>:WINDow:VERTical:RELative:SPAN ... 1276
HISTogram<m>:WINDow:VERTical:RELative:STARt ... 1276
HISTogram<m>:WINDow:VERTical:RELative:STOP ... 1276
LAYout<ly>:ACTive ... 1102
LAYout<ly>:COUNt? ... 1101
LAYout<ly>:DIAGram<da>:COUNt? ... 1102
LAYout<ly>:DIAGram<da>:LABel ... 1103
LAYout<ly>:DIAGram<da>:SOURce ... 1103
LAYout<ly>:DIAGram<da>[:ENABle] ... 1103
LAYout<ly>:LABel ... 1102
LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:ID ... 1104
LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:TYPE ... 1105
LAYout<ly>:NODE<no>:COUNt? ... 1104

LAYout<ly>:NODE<no>:RATio ... 1105
LAYout<ly>:NODE<no>:STYPe ... 1105
LAYout<ly>:NODE<no>[:ENABle] ... 1104
LAYout<ly>:RESult<n>:HORizontal:RATio ... 1106
LAYout<ly>:RESult<n>:VERTical:RATio ... 1106
LAYout<ly>:RPOSition ... 1106
LAYout<ly>:SACTive ... 1102
LAYout<ly>:ZOOM<zo>:COUNt? ... 1247
LAYout<ly>:ZOOM<zo>:DIAGram? ... 1247
LAYout<ly>:ZOOM<zo>:DISPlay ... 1247
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition ... 1248
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN ... 1248
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt ... 1249
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP ... 1249
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh ... 1249
LAYout<ly>:ZOOM<zo>:HORizontal:MODE ... 1250
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition ... 1250
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN ... 1250
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STARt ... 1251
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP ... 1251
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh ... 1252
LAYout<ly>:ZOOM<zo>:SOURce ... 1252
LAYout<ly>:ZOOM<zo>:SSCReen ... 1255
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition ... 1252
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe ... 1253
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN ... 1253
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt ... 1253
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP ... 1253
LAYout<ly>:ZOOM<zo>:VERTical:MODE ... 1254
LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition ... 1254
LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN ... 1255
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt ... 1254
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP ... 1255
LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTh ... 1255
LAYout<ly>:ZOOM<zo>[:ENABle] ... 1246
LAYout<ly>[:ENABle] ... 1101
MDEFaults:SETTings<m>:EYE:ALGorithm ... 1321
MDEFaults:SETTings<m>:EYE:COUNt? ... 1322
MDEFaults:SETTings<m>:EYE:ENABle ... 1322
MDEFaults:SETTings<m>:EYE:RELative:STARt ... 1322
MDEFaults:SETTings<m>:EYE:RELative:STOP ... 1323
MDEFaults:SETTings<m>:EYE:THReshold ... 1323
MEASurement<mg>:ACTive ... 1309
MEASurement<mg>:AMPTime:CSLope ... 1314
MEASurement<mg>:AMPTime:DELay<n>:DIRection ... 1315
MEASurement<mg>:AMPTime:DELay<n>:SLOPe ... 1316
MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe ... 1315
MEASurement<mg>:AMPTime:ESLope ... 1314
MEASurement<mg>:AMPTime:PHASe:UNIT ... 1316
MEASurement<mg>:AMPTime:PSLope ... 1315

MEASurement<mg>:AMPTime:PTCount ... 1314
MEASurement<mg>:CLEar ... 1312
MEASurement<mg>:COUNt? ... 1309
MEASurement<mg>:DISPlay:DIGits ... 1125
MEASurement<mg>:DISPlay:REFLevel<rl>:LEVels ... 1312
MEASurement<mg>:DISPlay:RESults ... 1312
MEASurement<mg>:ENVSelect ... 1313
MEASurement<mg>:EYE:ABSolute:STARt ... 1324
MEASurement<mg>:EYE:ABSolute:STOP ... 1324
MEASurement<mg>:EYE:ALGorithm ... 1324
MEASurement<mg>:EYE:DEFSettings ... 1325
MEASurement<mg>:EYE:LEVel ... 1325
MEASurement<mg>:EYE:MODE ... 1326
MEASurement<mg>:EYE:RELative:STARt ... 1326
MEASurement<mg>:EYE:RELative:STOP ... 1327
MEASurement<mg>:EYE:USELevel ... 1327
MEASurement<mg>:FSRC ... 1310
MEASurement<mg>:GATE ... 1311
MEASurement<mg>:HISTogram:PROBability:LIMit ... 1317
MEASurement<mg>:HISTogram:PROBability:TYPE ... 1317
MEASurement<mg>:IMPRecise:STATus:CONDition? ... 2390
MEASurement<mg>:IMPRecise:STATus:ENABle ... 2391
MEASurement<mg>:IMPRecise:STATus:NTRansition ... 2392
MEASurement<mg>:IMPRecise:STATus:PTRansition ... 2393
MEASurement<mg>:IMPRecise:STATus[:EVENt]? ... 2390
MEASurement<mg>:JITTer:NCYCles ... 1318
MEASurement<mg>:JITTer:POLarity ... 1319
MEASurement<mg>:JITTer:REFLevel<rl> ... 1319
MEASurement<mg>:JITTer:RELPolarity ... 1320
MEASurement<mg>:JITTer:SLOPe ... 1320
MEASurement<mg>:JITTer:TREF ... 1321
MEASurement<mg>:JITTer:UNIT ... 1321
MEASurement<mg>:LABel ... 1313
MEASurement<mg>:LIMits:CHECk<n>:CONDition ... 1340
MEASurement<mg>:LIMits:CHECk<n>:CVALue ... 1340
MEASurement<mg>:LIMits:CHECk<n>:LOWer ... 1341
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:BEEP ... 1344
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:SCReenshot ... 1345
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:SRESults ... 1345
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:STOP ... 1345
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:TRIGgerout ... 1346
MEASurement<mg>:LIMits:CHECk<n>:ONViolation:WFMS ... 1346
MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:FRATe? ... 1342
MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:FWAVeforms? ... 1343
MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:PWAVeforms? ... 1343
MEASurement<mg>:LIMits:CHECk<n>:RESult:COUNt:WAVeforms? ... 1343
MEASurement<mg>:LIMits:CHECk<n>:RESult:CRESult? ... 1342
MEASurement<mg>:LIMits:CHECk<n>:RESult[:RESult]? ... 1342
MEASurement<mg>:LIMits:CHECk<n>:STATus:CONDition? ... 2390
MEASurement<mg>:LIMits:CHECk<n>:STATus:ENABle ... 2391

MEASurement<mg>:LIMits:CHECk<n>:STATus:NTRansition ... 2392
MEASurement<mg>:LIMits:CHECk<n>:STATus:PTRansition ... 2393
MEASurement<mg>:LIMits:CHECk<n>:STATus[:EVENt]? ... 2390
MEASurement<mg>:LIMits:CHECk<n>:UPPer ... 1341
MEASurement<mg>:LIMits:CHECk<n>[:ENABle] ... 1339
MEASurement<mg>:LIMits:CRESult? ... 1344
MEASurement<mg>:LIMits:RESet ... 1341
MEASurement<mg>:LIMits:RESult? ... 1344
MEASurement<mg>:LIMits[:STATe] ... 1339
MEASurement<mg>:MAIN ... 1311
MEASurement<mg>:MNOMeas ... 1334
MEASurement<mg>:MULTiple ... 1333
MEASurement<mg>:PROTocol:F2Name ... 1328
MEASurement<mg>:PROTocol:FD2Name ... 1329
MEASurement<mg>:PROTocol:FD2Value ... 1329
MEASurement<mg>:PROTocol:FDName ... 1328
MEASurement<mg>:PROTocol:FDValue ... 1328
MEASurement<mg>:PROTocol:FNAMe ... 1328
MEASurement<mg>:REFLevel<rl>:REFerence ... 1316
MEASurement<mg>:REFLevel<rl>:RESult:LOWer? ... 1231
MEASurement<mg>:REFLevel<rl>:RESult:MIDDle? ... 1231
MEASurement<mg>:REFLevel<rl>:RESult:SIGHigh? ... 1232
MEASurement<mg>:REFLevel<rl>:RESult:SIGLow? ... 1232
MEASurement<mg>:REFLevel<rl>:RESult:UPPer? ... 1231
MEASurement<mg>:RESult:AVG? ... 1330
MEASurement<mg>:RESult:EVENts:COUNt? ... 1330
MEASurement<mg>:RESult:EVENts:STARt? ... 1331
MEASurement<mg>:RESult:EVENts:STOP? ... 1331
MEASurement<mg>:RESult:EVENts:VALue? ... 1331
MEASurement<mg>:RESult:EVTCount? ... 1330
MEASurement<mg>:RESult:LINes? ... 1332
MEASurement<mg>:RESult:NPEak? ... 1330
MEASurement<mg>:RESult:PPEak? ... 1330
MEASurement<mg>:RESult:RMS? ... 1330
MEASurement<mg>:RESult:RSTDdev? ... 1330
MEASurement<mg>:RESult:STARt? ... 1332
MEASurement<mg>:RESult:STDDev? ... 1330
MEASurement<mg>:RESult:STOP? ... 1332
MEASurement<mg>:RESult:WFMCount? ... 1330
MEASurement<mg>:RESult[:ACTual]? ... 1330
MEASurement<mg>:SOURce ... 1309
MEASurement<mg>:SSRC ... 1310
MEASurement<mg>:STATistics:ARESet ... 1333
MEASurement<mg>:STATistics:HISTogram:AUToscale ... 1337
MEASurement<mg>:STATistics:HISTogram:HBINs ... 1338
MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet ... 1338
MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe ... 1338
MEASurement<mg>:STATistics:HISTogram:RESet ... 1339
MEASurement<mg>:STATistics:HISTogram[:ENABle] ... 1337
MEASurement<mg>:STATistics:RESet ... 1312

MEASurement<mg>:STATistics[:ENABle] 1333
MEASurement<mg>:TRACk:AUTO 1334
MEASurement<mg>:TRACk:CONTiunous 1335
MEASurement<mg>:TRACk:DATA:HEADer? 1336
MEASurement<mg>:TRACk:DATA[:VALues]? 1336
MEASurement<mg>:TRACk:OFFSet 1335
MEASurement<mg>:TRACk:SCALe 1335
MEASurement<mg>:TRACk[:STATe] 1334
MEASurement<mg>[:ENABle] 1309
METer:BANDwidth 1550
METer:DVMeter<m>:ACRMs:ENABle 1551
METer:DVMeter<m>:ACRMs:RESult? 1551
METer:DVMeter<m>:DC:ENABle 1552
METer:DVMeter<m>:DC:RESult? 1552
METer:DVMeter<m>:DCRMs:ENABle 1552
METer:DVMeter<m>:DCRMs:RESult? 1553
METer:DVMeter<m>:ENABle? 1551
METer:MTIMe 1553
MMEMory:ATTRibute 1282
MMEMory:AUSave:ENABle 1129
MMEMory:AUSave:INTerval 1130
MMEMory:AUTonaming:DEFaultpath 1130
MMEMory:AUTonaming:INDex 1129
MMEMory:AUTonaming:PREFix 1129
MMEMory:AUTonaming:RESall 1130
MMEMory:AUTonaming:RESPath 1131
MMEMory:AUTonaming:TEXT 1131
MMEMory:AUTonaming:TIME 1129
MMEMory:AUTonaming:USERtext 1130
MMEMory:CATalog:LENGth? 1280
MMEMory:CATalog? 1280
MMEMory:CDIRectory 1279
MMEMory:COPY 1281
MMEMory:DATA 1282
MMEMory:DCATalog:LENGth? 1279
MMEMory:DCATalog? 1278
MMEMory:DELete 1281
MMEMory:DRIVes? 1278
MMEMory:GENerator:RCL 1284
MMEMory:GENerator:SAV 1284
MMEMory:LOAD:STATe 1283
MMEMory:MDIRectory 1279
MMEMory:MOVE 1281
MMEMory:NAME 1295
MMEMory:NDRive<m>:CONNect 1099
MMEMory:NDRive<m>:DCONnect 1099
MMEMory:NDRive<m>:LPATh 1099
MMEMory:NDRive<m>:NPATh 1099
MMEMory:NDRive<m>:PWORd 1100
MMEMory:NDRive<m>:UNAMe 1100

MMEMory:RCL ... 1283
MMEMory:RDIRectory ... 1280
MMEMory:SAV ... 1283
MMEMory:STORe:STATe ... 1283
MTESt<m>:ADD ... 1379
MTESt<m>:AUTomask:UPDate ... 1386
MTESt<m>:AUTomask:VALues:BOTTom? ... 1388
MTESt<m>:AUTomask:VALues:TOP? ... 1388
MTESt<m>:AUTomask:XTOLerance:DIVisions ... 1386
MTESt<m>:AUTomask:XTOLerance:PHYSical ... 1386
MTESt<m>:AUTomask:XTUNit ... 1387
MTESt<m>:AUTomask:YTOLerance:DIVisions ... 1387
MTESt<m>:AUTomask:YTOLerance:PHYSical ... 1387
MTESt<m>:AUTomask:YTUNit ... 1387
MTESt<m>:COUNt? ... 1379
MTESt<m>:DIAGram ... 1380
MTESt<m>:IMEXport:NAME ... 1380
MTESt<m>:IMEXport:OPEN ... 1380
MTESt<m>:IMEXport:SAVE ... 1380
MTESt<m>:ONViolation:BEEP ... 1388
MTESt<m>:ONViolation:SCReenshot ... 1389
MTESt<m>:ONViolation:SRESults ... 1389
MTESt<m>:ONViolation:STOP ... 1389
MTESt<m>:ONViolation:TRIGgerout ... 1390
MTESt<m>:ONViolation:WFMSave ... 1390
MTESt<m>:REMove ... 1381
MTESt<m>:RESult:COUNt:FWAVeforms? ... 1391
MTESt<m>:RESult:COUNt:PWAVeforms? ... 1391
MTESt<m>:RESult:COUNt:WAVeforms? ... 1391
MTESt<m>:RESult:FRATe? ... 1391
MTESt<m>:RESult[:RESult]? ... 1392
MTESt<m>:SEGMent<n>:ADD ... 1382
MTESt<m>:SEGMent<n>:COUNt? ... 1382
MTESt<m>:SEGMent<n>:POINt<o>:ADD ... 1383
MTESt<m>:SEGMent<n>:POINt<o>:COUNt? ... 1383
MTESt<m>:SEGMent<n>:POINt<o>:REMove ... 1383
MTESt<m>:SEGMent<n>:POINt<o>:VALid? ... 1384
MTESt<m>:SEGMent<n>:POINt<o>:X ... 1384
MTESt<m>:SEGMent<n>:POINt<o>:Y ... 1384
MTESt<m>:SEGMent<n>:REMove ... 1385
MTESt<m>:SEGMent<n>:VALid? ... 1385
MTESt<m>:SOURce ... 1381
MTESt<m>:STATe ... 1381
MTESt<m>:VISible ... 1381
P3PHase<m>:EFFiciency:DISPlay:WAVeform:INPut:TOTal:POWer[:ENABle] ... 1537
P3PHase<m>:EFFiciency:DISPlay:WAVeform:OUTPut:TOTal:POWer[:ENABle] ... 1537
P3PHase<m>:EFFiciency:GATE ... 1535
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet ... 1537
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE ... 1538
P3PHase<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue] ... 1539

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel....1542
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel....1542
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe....1543
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W1V1a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W2V2a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3V3a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:FILTer....1535
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:SOURce....1534
P3PHase<m>:EFFiciency:INPut<n>:SOURce:LINes:W2V2a....1532
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W1V1a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W2V2a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3V3a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3VN3a....1533
P3PHase<m>:EFFiciency:INPut<n>:SOURce:WIRing....1531
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA:HEADer?....1548
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:OFFSet....1537
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:EFFiciency:INPut<n>:TYPE....1531
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet....1537
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel....1542
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel....1543
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe....1543
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W1V1a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W2V2a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3V3a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:FILTer....1535
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:SOURce....1534
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:LINes:W2V2a....1532
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W1V1a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W2V2a....1533

P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3V3a....1533
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3VN3a....1534
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:WIRing....1531
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA:HEADer?....1548
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:OFFSet....1537
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:EFFiciency:OUTPut<n>:TYPE....1531
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:AVERage?....1509
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:EVTCount?....1509
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:NPEak?....1510
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:PPEak?....1510
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:RMS?....1510
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:STDDev?....1511
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:WFMCount?....1511
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer[:ACTual]?....1509
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:AVERage?....1509
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:EVTCount?....1509
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:NPEak?....1510
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:PPEak?....1510
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:RMS?....1510
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:STDDev?....1511
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:WFMCount?....1511
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer[:ACTual]?....1509
P3PHase<m>:EFFiciency:STATistic:ENABle....1507
P3PHase<m>:EFFiciency:STATistic:RESet....1508
P3PHase<m>:EFFiciency:STATistic:WFMCount?....1508
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:AVERage?....1509
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:EVTCount?....1509
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:NPEak?....1510
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:PPEak?....1510
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:RMS?....1510
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:STDDev?....1511
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:WFMCount?....1511
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult[:ACTual]?....1509
P3PHase<m>:HARMonics:AVAilable<n>....1505
P3PHase<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE....1503
P3PHase<m>:HARMonics:DISPlay:BARGraph[:ENABle]....1503
P3PHase<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue]....1504
P3PHase<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue]....1504
P3PHase<m>:HARMonics:DISPlay:HARMonics[:DISPlay]....1503
P3PHase<m>:HARMonics:DISPlay:POWer<n>:WAVeform[:ENABle]....1536
P3PHase<m>:HARMonics:DISPlay:TOTal:POWer:WAVeform[:ENABle]....1537
P3PHase<m>:HARMonics:FREQuency:EN....1501
P3PHase<m>:HARMonics:FREQuency:MIL....1501
P3PHase<m>:HARMonics:MEASurement:CSOurce:FREQuency<n>[:ACTual]?....1505
P3PHase<m>:HARMonics:MEASurement:POWer<n>:ACTive[:ACTual]?....1505
P3PHase<m>:HARMonics:MEASurement:THDFundament<n>[:ACTual]?....1505
P3PHase<m>:HARMonics:MEASurement:THDRms<n>[:ACTual]?....1506

P3PHase<m>:HARMonics:PFACtor:MODE ... 1501
P3PHase<m>:HARMonics:PFACtor:USER ... 1502
P3PHase<m>:HARMonics:POWer<n>:DATA:HEADer? ... 1547
P3PHase<m>:HARMonics:POWer<n>:DATA[:VALues]? ... 1548
P3PHase<m>:HARMonics:POWer<n>:VERTical:OFFSet ... 1537
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe:MODE ... 1538
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe[:VALue] ... 1539
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis ... 1541
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel ... 1542
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel ... 1542
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel ... 1543
P3PHase<m>:HARMonics:REFLevel<rl>:LMODe ... 1543
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis ... 1543
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer ... 1544
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle ... 1544
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE ... 1545
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer ... 1546
P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:PERCent[:ACTual]? ... 1506
P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:RMS[:ACTual]? ... 1507
P3PHase<m>:HARMonics:RESult<n>:VIOLation<o>? ... 1506
P3PHase<m>:HARMonics:RESult<n>[:FREQuency]? ... 1506
P3PHase<m>:HARMonics:REVision ... 1500
P3PHase<m>:HARMonics:RPOWer:MODE ... 1502
P3PHase<m>:HARMonics:RPOWer:USER ... 1502
P3PHase<m>:HARMonics:SOURce:CURRent:W2V2a ... 1533
P3PHase<m>:HARMonics:SOURce:CURRent:W3V3a ... 1533
P3PHase<m>:HARMonics:SOURce:CURRent:W3VN3a ... 1533
P3PHase<m>:HARMonics:SOURce:CYCLe:FILTer ... 1535
P3PHase<m>:HARMonics:SOURce:CYCLe[:SOURce] ... 1534
P3PHase<m>:HARMonics:SOURce:INOut ... 1532
P3PHase<m>:HARMonics:SOURce:LINes:W2V2a ... 1532
P3PHase<m>:HARMonics:SOURce:VOLTage:W2V2a ... 1534
P3PHase<m>:HARMonics:SOURce:VOLTage:W3V3a ... 1534
P3PHase<m>:HARMonics:SOURce:VOLTage:W3VN3a ... 1534
P3PHase<m>:HARMonics:SOURce:WIRing ... 1531
P3PHase<m>:HARMonics:STANdard ... 1500
P3PHase<m>:HARMonics:TOTal:POWer:DATA:HEADer? ... 1548
P3PHase<m>:HARMonics:TOTal:POWer:DATA[:VALues]? ... 1550
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet ... 1538
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe:MODE ... 1538
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe[:VALue] ... 1539
P3PHase<m>:MDRive:DISPlay:EFFiciency:TRACk[:ENABle] ... 1519
P3PHase<m>:MDRive:DISPlay:INPut:ELECtrical:POWer<n>:WAVeform[:ENABle] ... 1536
P3PHase<m>:MDRive:DISPlay:INPut:ELECtrical:TOTal:POWer:WAVeform[:ENABle] ... 1537
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:ANGLe:TRACk[:ENABle] ... 1519
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:POWer:TRACk[:ENABle] ... 1519
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:SPEed:TRACk[:ENABle] ... 1519
P3PHase<m>:MDRive:DISPlay:INPut:MECHanical:TORQue:TRACk[:ENABle] ... 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:ELECtrical:POWer<n>:WAVeform[:ENABle] ... 1536
P3PHase<m>:MDRive:DISPlay:OUTPut:ELECtrical:TOTal:POWer:WAVeform[:ENABle] ... 1537

P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:ANGLe:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:POWer:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:SPEed:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:DISPlay:OUTPut:MECHanical:TORQue:TRACk[:ENABle] 1519
P3PHase<m>:MDRive:EFFiciency:TRACk:AUTO 1519
P3PHase<m>:MDRive:EFFiciency:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:EFFiciency:TRACk:DATA[:VALues]? 1549
P3PHase<m>:MDRive:EFFiciency:TRACk:OFFSet 1520
P3PHase<m>:MDRive:EFFiciency:TRACk:SCALe 1520
P3PHase<m>:MDRive:GATE 1535
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W1V1a 1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W2V2a 1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W3V3a 1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CURRent:W3VN3a 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CYCLe:FILTer 1534
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:CYCLe:SOURce 1534
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:LINes:W2V2a 1532
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W1V1a 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W2V2a 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W3V3a 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:VOLTage:W3VN3a 1533
P3PHase<m>:MDRive:INPut:ELECtrical:SOURce:WIRing 1531
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:DATA:HEADer? 1548
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:DATA[:VALues]? 1550
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:OFFSet 1537
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:SCALe:MODE 1538
P3PHase<m>:MDRive:INPut:ELECtrical:TOTal:POWer:VERTical:SCALe[:VALue] 1539
P3PHase<m>:MDRive:INPut:ELECtrical:TYPE 1531
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:AUTO 1519
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:DATA[:VALues]? 1549
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:OFFSet 1520
P3PHase<m>:MDRive:INPut:MECHanical:ANGLe:TRACk:SCALe 1520
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:AUTO 1519
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:DATA[:VALues]? 1549
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:OFFSet 1520
P3PHase<m>:MDRive:INPut:MECHanical:POWer:TRACk:SCALe 1520
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:GEARratio 1518
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:POLE 1517
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:PPRotation 1517
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:SOURce 1516
P3PHase<m>:MDRive:INPut:MECHanical:SENSor:TYPE 1516
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:AUTO 1519
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:DATA:HEADer? 1547
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:DATA[:VALues]? 1549
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:OFFSet 1520
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:TRACk:SCALe 1520
P3PHase<m>:MDRive:INPut:MECHanical:SPEed:UNIT 1517
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:FREQuency:HIGH 1515

P3PHase<m>:MDRive:INPut:MECHanical:TORQue:FREQuency:LOW....1515
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:HIGH....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:LOW....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:MVVolt....1515
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:SOURce....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:SUPPly:VOLTage....1516
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:AUTO....1519
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:DATA:HEADer?....1547
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:OFFSet....1520
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TRACk:SCALe....1521
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:TYPE....1513
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:VOLTage:HIGH....1514
P3PHase<m>:MDRive:INPut:MECHanical:TORQue:VOLTage:LOW....1514
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:LLEVel....1541
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:MDRive:INPut:REFLevel<rl>:ABSolute:ULEVel....1542
P3PHase<m>:MDRive:INPut:REFLevel<rl>:LMODe....1543
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:MDRive:INPut:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:MDRive:MODE....1512
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W1V1a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W2V2a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W3V3a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CYCLe:FILTer....1534
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:CYCLe:SOURce....1534
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:LINes:W2V2a....1532
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W1V1a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W2V2a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W3V3a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:VOLTage:W3VN3a....1533
P3PHase<m>:MDRive:OUTPut:ELECtrical:SOURce:WIRing....1531
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:DATA:HEADer?....1548
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:OFFSet....1537
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:MDRive:OUTPut:ELECtrical:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:MDRive:OUTPut:ELECtrical:TYPE....1531
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:AUTO....1519
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:DATA:HEADer?....1547
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:OFFSet....1520
P3PHase<m>:MDRive:OUTPut:MECHanical:ANGLe:TRACk:SCALe....1520
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:AUTO....1519
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:DATA:HEADer?....1547

P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:OFFSet....1520
P3PHase<m>:MDRive:OUTPut:MECHanical:POWer:TRACk:SCALe....1520
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:GEAR....1518
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:POLE....1517
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:PPRotation....1517
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:SOURce....1516
P3PHase<m>:MDRive:OUTPut:MECHanical:SENSor:TYPE....1516
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:AUTO....1519
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:DATA:HEADer?....1547
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:OFFSet....1520
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:TRACk:SCALe....1520
P3PHase<m>:MDRive:OUTPut:MECHanical:SPEed:UNIT....1517
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:FREQuency:HIGH....1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:FREQuency:LOW....1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:HIGH....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:LOW....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:MVVolt....1515
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:SOURce....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:SUPPly:VOLTage....1516
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:AUTO....1519
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:DATA:HEADer?....1547
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:DATA[:VALues]?....1549
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:OFFSet....1520
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TRACk:SCALe....1521
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:TYPE....1513
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:VOLTage:HIGH....1514
P3PHase<m>:MDRive:OUTPut:MECHanical:TORQue:VOLTage:LOW....1514
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:HYSTeresis....1541
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:LLEVel....1541
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:MLEVel....1542
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:ABSolute:ULEVel....1542
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:LMODe....1543
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:HYSTeresis....1543
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:LOWer....1544
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:MIDDle....1544
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:MODE....1545
P3PHase<m>:MDRive:OUTPut:REFLevel<rl>:RELative:UPPer....1546
P3PHase<m>:MDRive:RESult:EFFiciency:AVERage?....1523
P3PHase<m>:MDRive:RESult:EFFiciency:EVTCount?....1523
P3PHase<m>:MDRive:RESult:EFFiciency:NPEak?....1523
P3PHase<m>:MDRive:RESult:EFFiciency:PPEak?....1523
P3PHase<m>:MDRive:RESult:EFFiciency:RMS?....1523
P3PHase<m>:MDRive:RESult:EFFiciency:STDDev?....1523
P3PHase<m>:MDRive:RESult:EFFiciency:WFMCount?....1523
P3PHase<m>:MDRive:RESult:EFFiciency[:ACTual]?....1523
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:AVERage?....1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:EVTCount?....1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:NPEak?....1524

P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:PPEak? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:RMS? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:STDDev? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer:WFMCount? 1524
P3PHase<m>:MDRive:RESult:INPut:ELECtrical:TOTal:POWer[:ACTual]? 1524
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:AVERage? 1524
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:EVTCount? 1524
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:NPEak? 1524
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:PPEak? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:RMS? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:STDDev? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration:WFMCount? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ACCeleration[:ACTual]? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:AVERage? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:EVTCount? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:NPEak? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:PPEak? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:RMS? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:STDDev? 1525
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe:WFMCount? 1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:ANGLe[:ACTual]? 1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:AVERage? 1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:EVTCount? 1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:NPEak? 1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:PPEak? 1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:RMS? 1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:STDDev? 1526
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer:WFMCount? 1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:POWer[:ACTual]? 1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:AVERage? 1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:EVTCount? 1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:NPEak? 1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:PPEak? 1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:RMS? 1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:STDDev? 1527
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed:WFMCount? 1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:SPEed[:ACTual]? 1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:AVERage? 1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:EVTCount? 1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:NPEak? 1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:PPEak? 1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:RMS? 1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:STDDev? 1528
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue:WFMCount? 1529
P3PHase<m>:MDRive:RESult:INPut:MECHanical:TORQue[:ACTual]? 1529
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:AVERage? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:EVTCount? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:NPEak? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:PPEak? 1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:RMS? 1524

P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:STDDev?....1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer:WFMCount?....1524
P3PHase<m>:MDRive:RESult:OUTPut:ELECtrical:TOTal:POWer[:ACTual]?....1524
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:AVERage?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:EVTCount?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:NPEak?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:PPEak?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:RMS?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:STDDev?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration:WFMCount?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ACCeleration[:ACTual]?....1525
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:AVERage?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:EVTCount?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:NPEak?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:PPEak?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:RMS?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:STDDev?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe:WFMCount?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:ANGLe[:ACTual]?....1526
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:AVERage?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:EVTCount?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:NPEak?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:PPEak?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:RMS?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:STDDev?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer:WFMCount?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:POWer[:ACTual]?....1527
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:AVERage?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:EVTCount?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:NPEak?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:PPEak?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:RMS?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:STDDev?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed:WFMCount?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:SPEed[:ACTual]?....1528
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:AVERage?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:EVTCount?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:NPEak?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:PPEak?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:RMS?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:STDDev?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue:WFMCount?....1529
P3PHase<m>:MDRive:RESult:OUTPut:MECHanical:TORQue[:ACTual]?....1529
P3PHase<m>:MDRive:STATistic:ENABle....1512
P3PHase<m>:MDRive:STATistic:RESet....1512
P3PHase<m>:MDRive:STATistic:WFMCount?....1512
P3PHase<m>:QUALity:DISPlay:CURRent:CREStfactor<n>[:ENABle]....1488
P3PHase<m>:QUALity:DISPlay:CURRent:PEAK<n>[:ENABle]....1488
P3PHase<m>:QUALity:DISPlay:CURRent:RMS<n>[:ENABle]....1488
P3PHase<m>:QUALity:DISPlay:POWer<n>:ACTive[:ENABle]....1488

P3PHase<m>:QUALity:DISPlay:POWer<n>:APParent[:ENABle] 1489
P3PHase<m>:QUALity:DISPlay:POWer<n>:PFACtor[:ENABle] 1489
P3PHase<m>:QUALity:DISPlay:POWer<n>:PHASe[:ENABle] 1489
P3PHase<m>:QUALity:DISPlay:POWer<n>:REACtive[:ENABle] 1490
P3PHase<m>:QUALity:DISPlay:POWer<n>:WAVeform[:ENABle] 1536
P3PHase<m>:QUALity:DISPlay:TOTal:POWer:WAVeform[:ENABle] 1537
P3PHase<m>:QUALity:DISPlay:VOLTage:CREStfactor<n>[:ENABle] 1490
P3PHase<m>:QUALity:DISPlay:VOLTage:FREQuency<n>[:ENABle] 1490
P3PHase<m>:QUALity:DISPlay:VOLTage:PEAK<n>[:ENABle] 1491
P3PHase<m>:QUALity:DISPlay:VOLTage:RMS<n>[:ENABle] 1491
P3PHase<m>:QUALity:FREQuency:USER 1486
P3PHase<m>:QUALity:FREQuency[:VALue] 1485
P3PHase<m>:QUALity:GATE 1535
P3PHase<m>:QUALity:PHASor:CURRent:MAXimum 1487
P3PHase<m>:QUALity:PHASor:CURRent:OFFSet 1486
P3PHase<m>:QUALity:PHASor:FSCReen 1487
P3PHase<m>:QUALity:PHASor:RESult:VOLTage<n>:ANGLe[:ACTual]? 1499
P3PHase<m>:QUALity:PHASor:VOLTage:MAXimum 1487
P3PHase<m>:QUALity:PHASor:VOLTage:OFFSet 1486
P3PHase<m>:QUALity:PHASor[:ENABle] 1486
P3PHase<m>:QUALity:POWer<n>:DATA:HEADer? 1547
P3PHase<m>:QUALity:POWer<n>:DATA[:VALues]? 1548
P3PHase<m>:QUALity:POWer<n>:VERTical:OFFSet 1537
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe:MODE 1538
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe[:VALue] 1539
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis 1541
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel 1542
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel 1542
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel 1543
P3PHase<m>:QUALity:REFLevel<rl>:LMODe 1543
P3PHase<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis 1543
P3PHase<m>:QUALity:REFLevel<rl>:RELative:LOWer 1544
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MIDDle 1544
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MODE 1545
P3PHase<m>:QUALity:REFLevel<rl>:RELative:UPPer 1546
P3PHase<m>:QUALity:RESult:CSOurce:FREQuency<n>[:ACTual]? 1492
P3PHase<m>:QUALity:RESult:CURRent:CREStfactor<n>[:ACTual]? 1492
P3PHase<m>:QUALity:RESult:CURRent:PEAK<n>[:ACTual]? 1493
P3PHase<m>:QUALity:RESult:CURRent:RMS<n>[:ACTual]? 1493
P3PHase<m>:QUALity:RESult:POWer:ACTive<n>[:ACTual]? 1494
P3PHase<m>:QUALity:RESult:POWer:APParent<n>[:ACTual]? 1495
P3PHase<m>:QUALity:RESult:POWer:PFACtor<n>[:ACTual]? 1495
P3PHase<m>:QUALity:RESult:POWer:PHASe<n>[:ACTual]? 1496
P3PHase<m>:QUALity:RESult:POWer:REACtive<n>[:ACTual]? 1497
P3PHase<m>:QUALity:RESult:TOTal:CURRent:CREStfactor<n>[:ACTual]? 1492
P3PHase<m>:QUALity:RESult:TOTal:CURRent:PEAK<n>[:ACTual]? 1493
P3PHase<m>:QUALity:RESult:TOTal:CURRent:RMS<n>[:ACTual]? 1494
P3PHase<m>:QUALity:RESult:TOTal:POWer:ACTive<n>[:ACTual]? 1494
P3PHase<m>:QUALity:RESult:TOTal:POWer:APParent<n>[:ACTual]? 1495
P3PHase<m>:QUALity:RESult:TOTal:POWer:PFACtor<n>[:ACTual]? 1496

P3PHase<m>:QUALity:RESult:TOTal:POWer:PHASe<n>[:ACTual]?....1496
P3PHase<m>:QUALity:RESult:TOTal:POWer:REACtive<n>[:ACTual]?....1497
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:CREStfactor<n>[:ACTual]?....1498
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:PEAK<n>[:ACTual]?....1498
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:RMS<n>[:ACTual]?....1499
P3PHase<m>:QUALity:RESult:VOLTage:CREStfactor<n>[:ACTual]?....1497
P3PHase<m>:QUALity:RESult:VOLTage:PEAK<n>[:ACTual]?....1498
P3PHase<m>:QUALity:RESult:VOLTage:RMS<n>[:ACTual]?....1499
P3PHase<m>:QUALity:SOURce:CURRent:W2V2a....1533
P3PHase<m>:QUALity:SOURce:CURRent:W3V3a....1533
P3PHase<m>:QUALity:SOURce:CURRent:W3VN3a....1533
P3PHase<m>:QUALity:SOURce:CYCLe:FILTer....1535
P3PHase<m>:QUALity:SOURce:CYCLe[:SOURce]....1534
P3PHase<m>:QUALity:SOURce:INOut....1532
P3PHase<m>:QUALity:SOURce:LINes:W2V2a....1532
P3PHase<m>:QUALity:SOURce:VOLTage:W2V2a....1534
P3PHase<m>:QUALity:SOURce:VOLTage:W3V3a....1534
P3PHase<m>:QUALity:SOURce:VOLTage:W3VN3a....1534
P3PHase<m>:QUALity:SOURce:WIRing....1531
P3PHase<m>:QUALity:TOTal:POWer:DATA:HEADer?....1548
P3PHase<m>:QUALity:TOTal:POWer:DATA[:VALues]?....1550
P3PHase<m>:QUALity:TOTal:POWer:VERTical:OFFSet....1538
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe:MODE....1538
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe[:VALue]....1539
P3PHase<m>:TYPE....1484
P3PHase<m>[:ENABle]....1484
PBUS<pb>:BIT<n>:LABel....2351
PBUS<pb>:BIT<n>:SKEW....2352
PBUS<pb>:BIT<n>[:STATe]....2352
PBUS<pb>:CLEar....2353
PBUS<pb>:CLOCk....2353
PBUS<pb>:CLON....2353
PBUS<pb>:CLSLope....2353
PBUS<pb>:DATA:FORMat....1305
PBUS<pb>:DATA:HEADer?....1305
PBUS<pb>:DATA[:VALues]?....1306
PBUS<pb>:DECTable:COUNt?....2354
PBUS<pb>:DECTable:DATA?....2354
PBUS<pb>:DECTable:SHOW....2354
PBUS<pb>:DIGSignals:POSition....2355
PBUS<pb>:DIGSignals:SCALe....2355
PBUS<pb>:DISPlay:SHBU....2355
PBUS<pb>:DISPlay:SHDI....2355
PBUS<pb>:HYSTeresis<n>....2356
PBUS<pb>:POSition....2356
PBUS<pb>:SCALe....2357
PBUS<pb>:SKEW....2357
PBUS<pb>:STATe....2357
PBUS<pb>:TECHnology....2358
PBUS<pb>:THCoupling....2358

PBUS<pb>:THReshold<n>....2358
POWer<m>:ASKew[:EXECute]....1420
POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:EFFiciency[:ENABle]....1460
POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:POWer[:ENABle]....1460
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:EFFiciency[:ENABle]....1460
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:OPOWer[:ENABle]....1460
POWer<m>:EFFiciency:DISPlay:WAVeform:INPut<n>:POWer[:ENABle]....1474
POWer<m>:EFFiciency:DISPlay:WAVeform:OUTPut<n>:POWer[:ENABle]....1474
POWer<m>:EFFiciency:DISPlay:WAVeform:TOTal<n>:OPOWer[:ENABle]....1474
POWer<m>:EFFiciency:GATE....1459
POWer<m>:EFFiciency:INPut<n>:CURRent[:SOURce]....1457
POWer<m>:EFFiciency:INPut<n>:POWer:DATA:HEADer?....1482
POWer<m>:EFFiciency:INPut<n>:POWer:DATA[:VALues]?....1483
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet....1475
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE....1475
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue]....1476
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1477
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel....1478
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel....1478
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel....1479
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe....1479
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis....1479
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer....1480
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle....1480
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE....1481
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer....1482
POWer<m>:EFFiciency:INPut<n>:VOLTage[:SOURce]....1457
POWer<m>:EFFiciency:INPut<n>[:TYPE]....1458
POWer<m>:EFFiciency:ONUMber?....1458
POWer<m>:EFFiciency:OUTPut<n>:CURRent[:SOURce]....1458
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA:HEADer?....1482
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA[:VALues]?....1483
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet....1475
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE....1475
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue]....1476
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1477
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel....1478
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel....1478
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel....1479
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe....1479
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis....1479
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer....1480
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle....1480
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE....1481
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer....1482
POWer<m>:EFFiciency:OUTPut<n>:VOLTage[:SOURce]....1459
POWer<m>:EFFiciency:OUTPut<n>[:TYPE]....1459
POWer<m>:EFFiciency:RESult:INPut:POWer:AVERage?....1461
POWer<m>:EFFiciency:RESult:INPut:POWer:EVTCount?....1462
POWer<m>:EFFiciency:RESult:INPut:POWer:NPEak?....1462

POWer<m>:EFFiciency:RESult:INPut:POWer:PPEak? 1462
POWer<m>:EFFiciency:RESult:INPut:POWer:RMS? 1463
POWer<m>:EFFiciency:RESult:INPut:POWer:STDDev? 1463
POWer<m>:EFFiciency:RESult:INPut:POWer:WFMCount? 1463
POWer<m>:EFFiciency:RESult:INPut:POWer[:ACTual]? 1461
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:AVERage? 1461
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:EVTCount? 1462
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:NPEak? 1462
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:PPEak? 1462
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:RMS? 1463
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:STDDev? 1463
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:WFMCount? 1463
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency[:ACTual]? 1461
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:AVERage? 1461
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:EVTCount? 1462
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:NPEak? 1462
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:PPEak? 1462
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:RMS? 1463
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:STDDev? 1463
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:WFMCount? 1463
POWer<m>:EFFiciency:RESult:TOTal:OPOWer[:ACTual]? 1461
POWer<m>:EFFiciency:STATistics:RESet 1420
POWer<m>:EFFiciency:STATistics:WFMCount? 1421
POWer<m>:EFFiciency:STATistics[:ENABle] 1420
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA:HEADer? 1482
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA[:VALues]? 1483
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:OFFSet 1475
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe:MODE 1475
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe[:VALue] 1476
POWer<m>:HARMonics:AVAilable? 1439
POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE 1437
POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] 1437
POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] 1437
POWer<m>:HARMonics:DISPlay:HARMonics[:DISPlay] 1436
POWer<m>:HARMonics:DISPlay:POWer:WAVeform:ENABle 1474
POWer<m>:HARMonics:FREQuency:EN 1435
POWer<m>:HARMonics:FREQuency:MIL 1436
POWer<m>:HARMonics:FREQuency:RTCA 1436
POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]? 1439
POWer<m>:HARMonics:MEASurement:POWer:ACTive[:ACTual]? 1440
POWer<m>:HARMonics:MEASurement:THDFundament[:ACTual]? 1440
POWer<m>:HARMonics:MEASurement:THDRms[:ACTual]? 1440
POWer<m>:HARMonics:PFACtor:USER 1438
POWer<m>:HARMonics:PFACtor[:MODE] 1439
POWer<m>:HARMonics:POWer:DATA:HEADer? 1483
POWer<m>:HARMonics:POWer:DATA[:VALues]? 1483
POWer<m>:HARMonics:POWer:VERTical:OFFSet 1475
POWer<m>:HARMonics:POWer:VERTical:SCALe:MODE 1475
POWer<m>:HARMonics:POWer:VERTical:SCALe[:VALue] 1476
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis 1477

POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel....1478
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel....1478
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel....1479
POWer<m>:HARMonics:REFLevel<rl>:LMODe....1479
POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis....1480
POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer....1480
POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDle....1481
POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE....1481
POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer....1482
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MAXimum?....1441
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MINimum?....1441
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent[:ACTual]?....1441
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MAXimum?....1442
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MINimum?....1442
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS[:ACTual]?....1442
POWer<m>:HARMonics:RESult<n>:VIOLation?....1440
POWer<m>:HARMonics:RESult<n>[:FREQuency]?....1441
POWer<m>:HARMonics:REVision....1435
POWer<m>:HARMonics:RPOWer:USER....1438
POWer<m>:HARMonics:RPOWer[:MODE]....1437
POWer<m>:HARMonics:SOURce:CURRent....1434
POWer<m>:HARMonics:SOURce[:VOLTage]....1434
POWer<m>:HARMonics:STANdard....1435
POWer<m>:ONOFf:INPut:AC:ABSolute[:VALue]....1453
POWer<m>:ONOFf:INPut:DC:ABSolute[:VALue]....1454
POWer<m>:ONOFf:INPut:TYPE....1454
POWer<m>:ONOFf:INPut[:SOURce]....1454
POWer<m>:ONOFf:ONUMber....1454
POWer<m>:ONOFf:OUTPut<n>:DC:ABSolute[:VALue]....1455
POWer<m>:ONOFf:OUTPut<n>:DISPlay:RESult[:ENABle]....1455
POWer<m>:ONOFf:OUTPut<n>:DISPlay:RLINe[:ENABle]....1456
POWer<m>:ONOFf:OUTPut<n>[:SOURce]....1455
POWer<m>:ONOFf:RESult<n>:TIME[:ACTual]?....1456
POWer<m>:ONOFf[:TYPE]....1456
POWer<m>:QUALity:DISPlay:CURRent:CREStfactor....1423
POWer<m>:QUALity:DISPlay:CURRent:PEAK....1423
POWer<m>:QUALity:DISPlay:CURRent:RMS....1424
POWer<m>:QUALity:DISPlay:POWer:ACTive....1424
POWer<m>:QUALity:DISPlay:POWer:APParent....1424
POWer<m>:QUALity:DISPlay:POWer:PFACtor....1424
POWer<m>:QUALity:DISPlay:POWer:PHASe....1425
POWer<m>:QUALity:DISPlay:POWer:REACtive....1425
POWer<m>:QUALity:DISPlay:POWer:WAVeform:ENABle....1474
POWer<m>:QUALity:DISPlay:VOLTage:CREStfactor....1425
POWer<m>:QUALity:DISPlay:VOLTage:FREQuency....1425
POWer<m>:QUALity:DISPlay:VOLTage:PEAK....1426
POWer<m>:QUALity:DISPlay:VOLTage:RMS....1426
POWer<m>:QUALity:FREQuency:USER....1422
POWer<m>:QUALity:FREQuency[:VALue]....1422
POWer<m>:QUALity:GATE....1423

POWer<m>:QUALity:POWer:DATA:HEADer? 1483
POWer<m>:QUALity:POWer:DATA[:VALues]? 1483
POWer<m>:QUALity:POWer:VERTical:OFFSet 1475
POWer<m>:QUALity:POWer:VERTical:SCALe:MODE 1475
POWer<m>:QUALity:POWer:VERTical:SCALe[:VALue] 1476
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis 1477
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel 1478
POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel 1478
POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel 1479
POWer<m>:QUALity:REFLevel<rl>:LMODe 1479
POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis 1480
POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer 1480
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle 1481
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE 1481
POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer 1482
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:AVERage? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:EVTCount? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:NPEak? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:PPEak? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:RMS? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:STDDev? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:WFMCount? 1428
POWer<m>:QUALity:RESult:CURRent:CRESTfactor[:ACTual]? 1428
POWer<m>:QUALity:RESult:CURRent:PEAK:AVERage? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:EVTCount? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:NPEak? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:PPEak? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:RMS? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:STDDev? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK:WFMCount? 1429
POWer<m>:QUALity:RESult:CURRent:PEAK[:ACTual]? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:AVERage? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:EVTCount? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:NPEak? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:PPEak? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:RMS? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:STDDev? 1429
POWer<m>:QUALity:RESult:CURRent:RMS:WFMCount? 1429
POWer<m>:QUALity:RESult:CURRent:RMS[:ACTual]? 1429
POWer<m>:QUALity:RESult:POWer:ACTive:AVERage? 1429
POWer<m>:QUALity:RESult:POWer:ACTive:EVTCount? 1429
POWer<m>:QUALity:RESult:POWer:ACTive:NPEak? 1429
POWer<m>:QUALity:RESult:POWer:ACTive:PPEak? 1430
POWer<m>:QUALity:RESult:POWer:ACTive:RMS? 1430
POWer<m>:QUALity:RESult:POWer:ACTive:STDDev? 1430
POWer<m>:QUALity:RESult:POWer:ACTive:WFMCount? 1430
POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]? 1429
POWer<m>:QUALity:RESult:POWer:APParent:AVERage? 1430
POWer<m>:QUALity:RESult:POWer:APParent:EVTCount? 1430
POWer<m>:QUALity:RESult:POWer:APParent:NPEak? 1430

POWer<m>:QUALity:RESult:POWer:APParent:PPEak? 1430
POWer<m>:QUALity:RESult:POWer:APParent:RMS? 1430
POWer<m>:QUALity:RESult:POWer:APParent:STDDev? 1430
POWer<m>:QUALity:RESult:POWer:APParent:WFMCount? 1430
POWer<m>:QUALity:RESult:POWer:APParent[:ACTual]? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:AVERage? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:EVTCount? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:NPEak? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:PPEak? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:RMS? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:STDDev? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor:WFMCount? 1430
POWer<m>:QUALity:RESult:POWer:PFACtor[:ACTual]? 1430
POWer<m>:QUALity:RESult:POWer:PHASe:AVERage? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:EVTCount? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:NPEak? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:PPEak? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:RMS? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:STDDev? 1431
POWer<m>:QUALity:RESult:POWer:PHASe:WFMCount? 1431
POWer<m>:QUALity:RESult:POWer:PHASe[:ACTual]? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:AVERage? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:EVTCount? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:NPEak? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:PPEak? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:RMS? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:STDDev? 1431
POWer<m>:QUALity:RESult:POWer:REACtive:WFMCount? 1431
POWer<m>:QUALity:RESult:POWer:REACtive[:ACTual]? 1431
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:AVERage? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:EVTCount? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:NPEak? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:PPEak? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:RMS? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:STDDev? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:WFMCount? 1432
POWer<m>:QUALity:RESult:VOLTage:CREStfactor[:ACTual]? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:AVERage? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:EVTCount? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:NPEak? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:PPEak? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:RMS? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:STDDev? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency:WFMCount? 1432
POWer<m>:QUALity:RESult:VOLTage:FREQuency[:ACTual]? 1432
POWer<m>:QUALity:RESult:VOLTage:PEAK:AVERage? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:EVTCount? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:NPEak? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:PPEak? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:RMS? 1433

POWer<m>:QUALity:RESult:VOLTage:PEAK:STDDev? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK:WFMCount? 1433
POWer<m>:QUALity:RESult:VOLTage:PEAK[:ACTual]? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:AVERage? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:EVTCount? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:NPEak? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:PPEak? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:RMS? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:STDDev? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS:WFMCount? 1433
POWer<m>:QUALity:RESult:VOLTage:RMS[:ACTual]? 1433
POWer<m>:QUALity:SOURce:CURRent 1421
POWer<m>:QUALity:SOURce:CYCLe 1422
POWer<m>:QUALity:SOURce[:VOLTage] 1422
POWer<m>:QUALity:STATistics:RESet 1420
POWer<m>:QUALity:STATistics:WFMCount? 1421
POWer<m>:QUALity:STATistics[:ENABle] 1420
POWer<m>:SOA:LIMit:APPLy 1465
POWer<m>:SOA:LIMit:IMAX 1466
POWer<m>:SOA:LIMit:PMAX 1466
POWer<m>:SOA:LIMit:VMAX 1466
POWer<m>:SOA:MTESt<n>:IMEXport:NAME 1464
POWer<m>:SOA:MTESt<n>:IMEXport:OPEN 1464
POWer<m>:SOA:MTESt<n>:IMEXport:SAVE 1464
POWer<m>:SOA:MTESt<n>:ONViolation:BEEP 1470
POWer<m>:SOA:MTESt<n>:ONViolation:SCReenshot 1470
POWer<m>:SOA:MTESt<n>:ONViolation:STOP 1471
POWer<m>:SOA:MTESt<n>:ONViolation:TRIGgerout 1471
POWer<m>:SOA:MTESt<n>:ONViolation:WFMSave 1472
POWer<m>:SOA:MTESt<n>:SEGMent<o>:ADD 1467
POWer<m>:SOA:MTESt<n>:SEGMent<o>:COUNt? 1467
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD 1467
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:COUNt? 1468
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:REMove 1468
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:VALid? 1468
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X 1469
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y 1469
POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove 1470
POWer<m>:SOA:RESult<n>:COUNt:FWAVeforms? 1472
POWer<m>:SOA:RESult<n>:COUNt:PWAVeforms? 1472
POWer<m>:SOA:RESult<n>:COUNt:WAVeforms? 1473
POWer<m>:SOA:RESult<n>:FRATe? 1473
POWer<m>:SOA:RESult<n>[:RESult]? 1473
POWer<m>:SOA:SOURce:CURRent 1465
POWer<m>:SOA:SOURce:VOLTage 1465
POWer<m>:SWITching:DISPlay:CONDuction:COLor 1446
POWer<m>:SWITching:DISPlay:CONDuction[:ENABle] 1446
POWer<m>:SWITching:DISPlay:LABel[:ENABle] 1447
POWer<m>:SWITching:DISPlay:NCONduction:COLor 1446
POWer<m>:SWITching:DISPlay:NCONduction[:ENABle] 1446

POWer<m>:SWITching:DISPlay:POWer:WAVeform[:ENABle] 1474
POWer<m>:SWITching:DISPlay:TOFF:COLor 1446
POWer<m>:SWITching:DISPlay:TOFF[:ENABle] 1446
POWer<m>:SWITching:DISPlay:TON:COLor 1446
POWer<m>:SWITching:DISPlay:TON[:ENABle] 1446
POWer<m>:SWITching:DISPlay:TOTal[:ENABle] 1447
POWer<m>:SWITching:DISPlay:TYPE 1444
POWer<m>:SWITching:POWer:DATA:HEADer? 1483
POWer<m>:SWITching:POWer:DATA[:VALues]? 1483
POWer<m>:SWITching:POWer:VERTical:OFFSet 1475
POWer<m>:SWITching:POWer:VERTical:SCALe:MODE 1475
POWer<m>:SWITching:POWer:VERTical:SCALe[:VALue] 1476
POWer<m>:SWITching:REGion:CONDuction:STOP 1445
POWer<m>:SWITching:REGion:CONDuction[:STARt] 1444
POWer<m>:SWITching:REGion:NCONduction:STOP 1445
POWer<m>:SWITching:REGion:NCONduction[:STARt] 1445
POWer<m>:SWITching:REGion:TOFF:STOP 1445
POWer<m>:SWITching:REGion:TOFF[:STARt] 1445
POWer<m>:SWITching:REGion:TON:STOP 1444
POWer<m>:SWITching:REGion:TON[:STARt] 1444
POWer<m>:SWITching:REGion:TOTal:STOP 1445
POWer<m>:SWITching:REGion:TOTal[:STARt] 1444
POWer<m>:SWITching:RESult:CONDuction:ENERgy:AVERage? 1449
POWer<m>:SWITching:RESult:CONDuction:ENERgy:EVTCount? 1450
POWer<m>:SWITching:RESult:CONDuction:ENERgy:NPEak? 1450
POWer<m>:SWITching:RESult:CONDuction:ENERgy:PPEak? 1451
POWer<m>:SWITching:RESult:CONDuction:ENERgy:RMS? 1451
POWer<m>:SWITching:RESult:CONDuction:ENERgy:STDDev? 1452
POWer<m>:SWITching:RESult:CONDuction:ENERgy:WFMCount? 1452
POWer<m>:SWITching:RESult:CONDuction:ENERgy[:ACTual]? 1449
POWer<m>:SWITching:RESult:CONDuction:POWer:AVERage? 1449
POWer<m>:SWITching:RESult:CONDuction:POWer:EVTCount? 1450
POWer<m>:SWITching:RESult:CONDuction:POWer:NPEak? 1450
POWer<m>:SWITching:RESult:CONDuction:POWer:PPEak? 1451
POWer<m>:SWITching:RESult:CONDuction:POWer:RMS? 1451
POWer<m>:SWITching:RESult:CONDuction:POWer:STDDev? 1452
POWer<m>:SWITching:RESult:CONDuction:POWer:WFMCount? 1452
POWer<m>:SWITching:RESult:CONDuction:POWer[:ACTual]? 1449
POWer<m>:SWITching:RESult:NCONduction:ENERgy:AVERage? 1449
POWer<m>:SWITching:RESult:NCONduction:ENERgy:EVTCount? 1450
POWer<m>:SWITching:RESult:NCONduction:ENERgy:NPEak? 1450
POWer<m>:SWITching:RESult:NCONduction:ENERgy:PPEak? 1451
POWer<m>:SWITching:RESult:NCONduction:ENERgy:RMS? 1451
POWer<m>:SWITching:RESult:NCONduction:ENERgy:STDDev? 1452
POWer<m>:SWITching:RESult:NCONduction:ENERgy:WFMCount? 1452
POWer<m>:SWITching:RESult:NCONduction:ENERgy[:ACTual]? 1449
POWer<m>:SWITching:RESult:NCONduction:POWer:AVERage? 1450
POWer<m>:SWITching:RESult:NCONduction:POWer:EVTCount? 1450
POWer<m>:SWITching:RESult:NCONduction:POWer:NPEak? 1450
POWer<m>:SWITching:RESult:NCONduction:POWer:PPEak? 1451

POWer<m>:SWITching:RESult:NCONduction:POWer:RMS? 1451
POWer<m>:SWITching:RESult:NCONduction:POWer:STDDev? 1452
POWer<m>:SWITching:RESult:NCONduction:POWer:WFMCount? 1452
POWer<m>:SWITching:RESult:NCONduction:POWer[:ACTual]? 1449
POWer<m>:SWITching:RESult:TOFF:ENERgy:AVERage? 1450
POWer<m>:SWITching:RESult:TOFF:ENERgy:EVTCount? 1450
POWer<m>:SWITching:RESult:TOFF:ENERgy:NPEak? 1450
POWer<m>:SWITching:RESult:TOFF:ENERgy:PPEak? 1451
POWer<m>:SWITching:RESult:TOFF:ENERgy:RMS? 1451
POWer<m>:SWITching:RESult:TOFF:ENERgy:STDDev? 1452
POWer<m>:SWITching:RESult:TOFF:ENERgy:WFMCount? 1452
POWer<m>:SWITching:RESult:TOFF:ENERgy[:ACTual]? 1449
POWer<m>:SWITching:RESult:TOFF:POWer:AVERage? 1450
POWer<m>:SWITching:RESult:TOFF:POWer:EVTCount? 1450
POWer<m>:SWITching:RESult:TOFF:POWer:NPEak? 1450
POWer<m>:SWITching:RESult:TOFF:POWer:PPEak? 1451
POWer<m>:SWITching:RESult:TOFF:POWer:RMS? 1451
POWer<m>:SWITching:RESult:TOFF:POWer:STDDev? 1452
POWer<m>:SWITching:RESult:TOFF:POWer:WFMCount? 1452
POWer<m>:SWITching:RESult:TOFF:POWer[:ACTual]? 1449
POWer<m>:SWITching:RESult:TON:ENERgy:AVERage? 1450
POWer<m>:SWITching:RESult:TON:ENERgy:EVTCount? 1450
POWer<m>:SWITching:RESult:TON:ENERgy:NPEak? 1451
POWer<m>:SWITching:RESult:TON:ENERgy:PPEak? 1451
POWer<m>:SWITching:RESult:TON:ENERgy:RMS? 1451
POWer<m>:SWITching:RESult:TON:ENERgy:STDDev? 1452
POWer<m>:SWITching:RESult:TON:ENERgy:WFMCount? 1452
POWer<m>:SWITching:RESult:TON:ENERgy[:ACTual]? 1449
POWer<m>:SWITching:RESult:TON:POWer:AVERage? 1450
POWer<m>:SWITching:RESult:TON:POWer:EVTCount? 1450
POWer<m>:SWITching:RESult:TON:POWer:NPEak? 1451
POWer<m>:SWITching:RESult:TON:POWer:PPEak? 1451
POWer<m>:SWITching:RESult:TON:POWer:RMS? 1451
POWer<m>:SWITching:RESult:TON:POWer:STDDev? 1452
POWer<m>:SWITching:RESult:TON:POWer:WFMCount? 1452
POWer<m>:SWITching:RESult:TON:POWer[:ACTual]? 1449
POWer<m>:SWITching:RESult:TOTal:ENERgy:AVERage? 1450
POWer<m>:SWITching:RESult:TOTal:ENERgy:EVTCount? 1450
POWer<m>:SWITching:RESult:TOTal:ENERgy:NPEak? 1451
POWer<m>:SWITching:RESult:TOTal:ENERgy:PPEak? 1451
POWer<m>:SWITching:RESult:TOTal:ENERgy:RMS? 1452
POWer<m>:SWITching:RESult:TOTal:ENERgy:STDDev? 1452
POWer<m>:SWITching:RESult:TOTal:ENERgy:WFMCount? 1453
POWer<m>:SWITching:RESult:TOTal:ENERgy[:ACTual]? 1449
POWer<m>:SWITching:RESult:TOTal:POWer:AVERage? 1450
POWer<m>:SWITching:RESult:TOTal:POWer:EVTCount? 1450
POWer<m>:SWITching:RESult:TOTal:POWer:NPEak? 1451
POWer<m>:SWITching:RESult:TOTal:POWer:PPEak? 1451
POWer<m>:SWITching:RESult:TOTal:POWer:RMS? 1452
POWer<m>:SWITching:RESult:TOTal:POWer:STDDev? 1452

POWer<m>:SWITching:RESult:TOTal:POWer:WFMCount? 1453
POWer<m>:SWITching:RESult:TOTal:POWer[:ACTual]? 1449
POWer<m>:SWITching:SOURce:CURRent 1443
POWer<m>:SWITching:SOURce[:VOLTage] 1443
POWer<m>:SWITching:STATistics:ENABle 1420
POWer<m>:SWITching:STATistics:RESet 1420
POWer<m>:SWITching:STATistics:WFMCount? 1421
POWer<m>:TYPE 1419
POWer<m>[:ENABle] 1419
PROBe<ch>:ID:PARTnumber? 1173
PROBe<ch>:ID:PRDate? 1173
PROBe<ch>:ID:SRNumber? 1174
PROBe<ch>:ID:SWVersion? 1174
PROBe<ch>:PMETer:RESults:COMMon? 1161
PROBe<ch>:PMETer:RESults:DIFFerential? 1161
PROBe<ch>:PMETer:RESults:NEGative? 1162
PROBe<ch>:PMETer:RESults:POSitive? 1162
PROBe<ch>:PMETer:RESults:SINGle? 1161
PROBe<ch>:PMETer:STATe 1160
PROBe<ch>:SETup:ACCoupling 1159
PROBe<ch>:SETup:ADAPter 1172
PROBe<ch>:SETup:ADVanced:AUDioverload 1163
PROBe<ch>:SETup:ADVanced:FILTer 1163
PROBe<ch>:SETup:ADVanced:PMToffset 1164
PROBe<ch>:SETup:ADVanced:PMToffset 1170
PROBe<ch>:SETup:ADVanced:RANGe 1163
PROBe<ch>:SETup:ADVanced:RDEFaults 1171
PROBe<ch>:SETup:ADVanced:UNIT 1150
PROBe<ch>:SETup:ALIGnment:GAIN:EXECute 1170
PROBe<ch>:SETup:ALIGnment:WRITe 1171
PROBe<ch>:SETup:ALIGnment:ZERO:EXECute 1171
PROBe<ch>:SETup:ATTenuation:DEFProbe 1154
PROBe<ch>:SETup:ATTenuation:MANual 1153
PROBe<ch>:SETup:ATTenuation:MODE 1153
PROBe<ch>:SETup:ATTenuation:TDEFprobe 1172
PROBe<ch>:SETup:ATTenuation:UNIT 1155
PROBe<ch>:SETup:ATTenuation[:AUTO]? 1153
PROBe<ch>:SETup:BANDwidth? 1155
PROBe<ch>:SETup:CAPacitance? 1174
PROBe<ch>:SETup:CMOFfset 1159
PROBe<ch>:SETup:CMOFfset 1165
PROBe<ch>:SETup:DCRange:MAX? 1174
PROBe<ch>:SETup:DCRange:MIN? 1175
PROBe<ch>:SETup:DEGauss 1168
PROBe<ch>:SETup:DISPlaydiff 1160
PROBe<ch>:SETup:DMOFfset 1165
PROBe<ch>:SETup:EPATtenuator 1160
PROBe<ch>:SETup:GAIN:AUTO? 1168
PROBe<ch>:SETup:GAIN:MANual 1168
PROBe<ch>:SETup:IMPedance? 1175

PROBe<ch>:SETup:LASer:STATe? 1170
PROBe<ch>:SETup:MODE 1158
PROBe<ch>:SETup:NAME? 1156
PROBe<ch>:SETup:NOFFset 1166
PROBe<ch>:SETup:OFFSet:AZERo 1156
PROBe<ch>:SETup:OFFSet:STPRobe 1169
PROBe<ch>:SETup:OFFSet:TOMean 1156
PROBe<ch>:SETup:OFFSet:USEautozero 1156
PROBe<ch>:SETup:OFFSet:ZADJust 1169
PROBe<ch>:SETup:POFFset 1166
PROBe<ch>:SETup:PRMode 1164
PROBe<ch>:SETup:STATe? 1157
PROBe<ch>:SETup:TERM:ADJust 1166
PROBe<ch>:SETup:TERM:MEASure? 1167
PROBe<ch>:SETup:TERM:MODE 1167
PROBe<ch>:SETup:TERM:STATe 1167
PROBe<ch>:SETup:TIPModel:INFO? 1172
PROBe<ch>:SETup:TIPModel:NAME? 1171
PROBe<ch>:SETup:TYPE? 1157
REFCurve<rc>:ABORt 1264
REFCurve<rc>:AXIS[:XMODe] 1267
REFCurve<rc>:CLEar 1264
REFCurve<rc>:DATA:HEADer? 1300
REFCurve<rc>:DATA:STYPe? 1301
REFCurve<rc>:DATA[:VALues]? 1301
REFCurve<rc>:HMODe 1268
REFCurve<rc>:NAME 1264
REFCurve<rc>:OFFSet 1265
REFCurve<rc>:OPEN 1265
REFCurve<rc>:POSition 1268
REFCurve<rc>:RESCale:HORizontal:FACTor 1269
REFCurve<rc>:RESCale:HORizontal:OFFSet 1269
REFCurve<rc>:RESCale:HORizontal:STATe 1269
REFCurve<rc>:RESCale:VERTical:FACTor 1270
REFCurve<rc>:RESCale:VERTical:OFFSet 1270
REFCurve<rc>:RESCale:VERTical:STATe 1270
REFCurve<rc>:RESTore 1265
REFCurve<rc>:SAVE 1266
REFCurve<rc>:SCALe 1268
REFCurve<rc>:SOURce 1266
REFCurve<rc>:STATe 1266
REFCurve<rc>:TOORiginal 1271
REFCurve<rc>:UPDate 1267
REFCurve<rc>:VMODe 1271
REFLevel<rl>:ABSolute:HYSTeresis 1228
REFLevel<rl>:ABSolute:LLEVel 1228
REFLevel<rl>:ABSolute:MLEVel 1229
REFLevel<rl>:ABSolute:ULEVel 1229
REFLevel<rl>:AUTO:MODE 1227
REFLevel<rl>:ENABle 1227

REFLevel<rl>:LMODe....1227
REFLevel<rl>:RELative:HYSTeresis....1229
REFLevel<rl>:RELative:LOWer....1230
REFLevel<rl>:RELative:MIDDle....1230
REFLevel<rl>:RELative:MODE....1230
REFLevel<rl>:RELative:UPPer....1231
RUN....1134
RUNCont....1134
RUNSingle....1134
SAVeset:CONFig:UPReferences....1284
SBUS<sb>:ARINc:BRMode....2037
SBUS<sb>:ARINc:BRValue....2037
SBUS<sb>:ARINc:FILTer:BIT....2042
SBUS<sb>:ARINc:FILTer:CHKall....2041
SBUS<sb>:ARINc:FILTer:CLR....2042
SBUS<sb>:ARINc:FILTer:DMAX....2043
SBUS<sb>:ARINc:FILTer:DMIN....2044
SBUS<sb>:ARINc:FILTer:DOPerator....2044
SBUS<sb>:ARINc:FILTer:ERENable....2043
SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABle....2043
SBUS<sb>:ARINc:FILTer:FIENable....2044
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle....2045
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT....2042
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2043
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2044
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2044
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2044
SBUS<sb>:ARINc:FILTer:FRENable....2045
SBUS<sb>:ARINc:FILTer:INVert....2042
SBUS<sb>:ARINc:FILTer:RST....2042
SBUS<sb>:ARINc:FORMat:ADDFrame....2046
SBUS<sb>:ARINc:FORMat:CLR....2047
SBUS<sb>:ARINc:FORMat:FCOunt?....2047
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ADDField....2047
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:COLor....2048
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2053
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2051
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2052
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:COLor....2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2054
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2053
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2052
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2051
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:NAME....2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARA....2055
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARB....2055
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2051
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2054
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLDCount?....2048
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Field....2049

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Value 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Field 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Value 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Field 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Value 2050
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENCheck 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:LENValue 2049
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:NAME 2048
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:TYPE 2048
SBUS<sb>:ARINc:FORMat:LOAD 2046
SBUS<sb>:ARINc:FORMat:SAVE 2047
SBUS<sb>:ARINc:FORMat:SELect 2046
SBUS<sb>:ARINc:MAXGap:BITS 2039
SBUS<sb>:ARINc:MAXGap:SELect 2039
SBUS<sb>:ARINc:MINGap:BITS 2040
SBUS<sb>:ARINc:MINGap:SELect 2040
SBUS<sb>:ARINc:POLarity 2038
SBUS<sb>:ARINc:POSition 2040
SBUS<sb>:ARINc:SCALe 2041
SBUS<sb>:ARINc:SOURce 2038
SBUS<sb>:ARINc:SWTindex? 2059
SBUS<sb>:ARINc:SWTTime? 2059
SBUS<sb>:ARINc:THReshold:HIGH 2038
SBUS<sb>:ARINc:THReshold:HYSTeresis 2039
SBUS<sb>:ARINc:THReshold:LOW 2039
SBUS<sb>:ARINc:WCOunt? 2060
SBUS<sb>:ARINc:WORD<w>:BITRate? 2060
SBUS<sb>:ARINc:WORD<w>:DATA? 2062
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:FVALue? 2062
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:LABel? 2061
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:STATe? 2061
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:VALue? 2062
SBUS<sb>:ARINc:WORD<w>:FLDCount? 2060
SBUS<sb>:ARINc:WORD<w>:LABel? 2063
SBUS<sb>:ARINc:WORD<w>:PATTern? 2063
SBUS<sb>:ARINc:WORD<w>:SDI? 2063
SBUS<sb>:ARINc:WORD<w>:SSM? 2064
SBUS<sb>:ARINc:WORD<w>:STARt? 2064
SBUS<sb>:ARINc:WORD<w>:STATe? 2064
SBUS<sb>:ARINc:WORD<w>:STOP? 2065
SBUS<sb>:ARINc:WORD<w>:SYMBol? 2065
SBUS<sb>:CAN:BITRate 1920
SBUS<sb>:CAN:FAST:HYSTeresis 1923
SBUS<sb>:CAN:FAST:THReshold 1923
SBUS<sb>:CAN:FCOunt? 1956
SBUS<sb>:CAN:FDATa:DBITrate 1922
SBUS<sb>:CAN:FDATa:SAMPlepoint 1922
SBUS<sb>:CAN:FILTer:BIT 1926
SBUS<sb>:CAN:FILTer:CHKall 1925
SBUS<sb>:CAN:FILTer:CLR 1926

SBUS<sb>:CAN:FILTer:DMAX ... 1927
SBUS<sb>:CAN:FILTer:DMIN ... 1927
SBUS<sb>:CAN:FILTer:DOPerator ... 1927
SBUS<sb>:CAN:FILTer:ERENable ... 1928
SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle ... 1928
SBUS<sb>:CAN:FILTer:FIENable ... 1928
SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle ... 1928
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1926
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1927
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1928
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1929
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1929
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1930
SBUS<sb>:CAN:FILTer:FRENable ... 1928
SBUS<sb>:CAN:FILTer:IMAX ... 1929
SBUS<sb>:CAN:FILTer:IMIN ... 1929
SBUS<sb>:CAN:FILTer:INVert ... 1926
SBUS<sb>:CAN:FILTer:IOPerator ... 1930
SBUS<sb>:CAN:FILTer:RST ... 1926
SBUS<sb>:CAN:FORMat:ADDFrame ... 1931
SBUS<sb>:CAN:FORMat:CLR ... 1932
SBUS<sb>:CAN:FORMat:FCOunt? ... 1932
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ADDField ... 1932
SBUS<sb>:CAN:FORMat:FRAMe<fr>:COLor ... 1933
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1938
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1936
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1937
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1939
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1938
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1937
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1936
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1940
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1940
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1936
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1939
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLDCount? ... 1932
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Field ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Value ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Field ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Value ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Field ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Value ... 1935
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENCheck ... 2325
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENValue ... 1934
SBUS<sb>:CAN:FORMat:FRAMe<fr>:LENValue ... 2325

SBUS<sb>:CAN:FORMat:FRAMe<fr>:NAME ... 1933
SBUS<sb>:CAN:FORMat:FRAMe<fr>:TYPE ... 1933
SBUS<sb>:CAN:FORMat:LOAD ... 1931
SBUS<sb>:CAN:FORMat:SAVE ... 1931
SBUS<sb>:CAN:FORMat:SELect ... 1931
SBUS<sb>:CAN:FRAMe<fr>:ACKState? ... 1957
SBUS<sb>:CAN:FRAMe<fr>:ACKValue? ... 1957
SBUS<sb>:CAN:FRAMe<fr>:CSSTate? ... 1959
SBUS<sb>:CAN:FRAMe<fr>:CSValue? ... 1959
SBUS<sb>:CAN:FRAMe<fr>:DATA? ... 1960
SBUS<sb>:CAN:FRAMe<fr>:DBITrate? ... 1967
SBUS<sb>:CAN:FRAMe<fr>:DLCState? ... 1960
SBUS<sb>:CAN:FRAMe<fr>:DLCValue? ... 1960
SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:BRS? ... 1967
SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:ESI? ... 1966
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:FVALue? ... 1959
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:LABel? ... 1958
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:STATe? ... 1957
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:VALue? ... 1958
SBUS<sb>:CAN:FRAMe<fr>:FLDCount? ... 1956
SBUS<sb>:CAN:FRAMe<fr>:IDSTate? ... 1961
SBUS<sb>:CAN:FRAMe<fr>:IDTYpe? ... 1961
SBUS<sb>:CAN:FRAMe<fr>:IDValue? ... 1961
SBUS<sb>:CAN:FRAMe<fr>:NBITrate? ... 1967
SBUS<sb>:CAN:FRAMe<fr>:NDBYtes? ... 1962
SBUS<sb>:CAN:FRAMe<fr>:SBC? ... 1965
SBUS<sb>:CAN:FRAMe<fr>:STARt? ... 1962
SBUS<sb>:CAN:FRAMe<fr>:STATus? ... 1962
SBUS<sb>:CAN:FRAMe<fr>:STOP? ... 1963
SBUS<sb>:CAN:FRAMe<fr>:SYMBol? ... 1963
SBUS<sb>:CAN:FRAMe<fr>:TYPE? ... 1964
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:AF? ... 1964
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:FCRC? ... 1968
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:PCRC? ... 1964
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SDT? ... 1965
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SEC? ... 1965
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:VCID? ... 1966
SBUS<sb>:CAN:POSition ... 1924
SBUS<sb>:CAN:SAMPlepoint ... 1921
SBUS<sb>:CAN:SCALe ... 1924
SBUS<sb>:CAN:SIC:HYSTeresis ... 1922
SBUS<sb>:CAN:SIC:THReshold ... 1922
SBUS<sb>:CAN:SOURce ... 1921
SBUS<sb>:CAN:SWTindex? ... 1955
SBUS<sb>:CAN:SWTTime? ... 1955
SBUS<sb>:CAN:TRCVmode ... 1924
SBUS<sb>:CAN:TYPE ... 1920
SBUS<sb>:CAN:XDATa:DBITrate ... 1923
SBUS<sb>:CAN:XDATa:SAMPlepoint ... 1924
SBUS<sb>:DPHY:CLK:HYSTeresis ... 1737

SBUS<sb>:DPHY:CLK:SOURce ... 1737
SBUS<sb>:DPHY:CLK:THReshold ... 1737
SBUS<sb>:DPHY:DISTribute ... 1737
SBUS<sb>:DPHY:DNZero:HYSTeresis ... 1739
SBUS<sb>:DPHY:DNZero:LPHYsteresis ... 1740
SBUS<sb>:DPHY:DNZero:LPTHreshold ... 1739
SBUS<sb>:DPHY:DNZero:SOURce ... 1738
SBUS<sb>:DPHY:DNZero:THReshold ... 1738
SBUS<sb>:DPHY:DPONe:HYSTeresis ... 1741
SBUS<sb>:DPHY:DPONe:POSition ... 1741
SBUS<sb>:DPHY:DPONe:SCALe ... 1741
SBUS<sb>:DPHY:DPONe:SCALe ... 1741
SBUS<sb>:DPHY:DPONe:SCALe ... 1741
SBUS<sb>:DPHY:DPONe:SOURce ... 1740
SBUS<sb>:DPHY:DPONe:THReshold ... 1740
SBUS<sb>:DPHY:DPTHree:HYSTeresis ... 1741
SBUS<sb>:DPHY:DPTHree:POSition ... 1741
SBUS<sb>:DPHY:DPTHree:SCALe ... 1741
SBUS<sb>:DPHY:DPTHree:SOURce ... 1740
SBUS<sb>:DPHY:DPTHree:THReshold ... 1740
SBUS<sb>:DPHY:DPTWo:HYSTeresis ... 1741
SBUS<sb>:DPHY:DPTWo:POSition ... 1741
SBUS<sb>:DPHY:DPTWo:SCALe ... 1741
SBUS<sb>:DPHY:DPTWo:SOURce ... 1740
SBUS<sb>:DPHY:DPTWo:THReshold ... 1740
SBUS<sb>:DPHY:DPZero:HYSTeresis ... 1739
SBUS<sb>:DPHY:DPZero:LPHYsteresis ... 1740
SBUS<sb>:DPHY:DPZero:LPTHreshold ... 1739
SBUS<sb>:DPHY:DPZero:POSition ... 1739
SBUS<sb>:DPHY:DPZero:SCALe ... 1739
SBUS<sb>:DPHY:DPZero:SOURce ... 1738
SBUS<sb>:DPHY:DPZero:THReshold ... 1738
SBUS<sb>:DPHY:FCOunt? ... 1764
SBUS<sb>:DPHY:FILTer:BIT ... 1743
SBUS<sb>:DPHY:FILTer:CHKall ... 1742
SBUS<sb>:DPHY:FILTer:CLR ... 1742
SBUS<sb>:DPHY:FILTer:DMAX ... 1744
SBUS<sb>:DPHY:FILTer:DMIN ... 1744
SBUS<sb>:DPHY:FILTer:DOPerator ... 1745
SBUS<sb>:DPHY:FILTer:ERENable ... 1744
SBUS<sb>:DPHY:FILTer:ERRor<n>:ENABle ... 1744
SBUS<sb>:DPHY:FILTer:FIENable ... 1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:ENABle ... 1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1743
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1744
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1744
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1745
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1746
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1746

SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1747
SBUS<sb>:DPHY:FILTer:FRENable ... 1745
SBUS<sb>:DPHY:FILTer:IMAX ... 1746
SBUS<sb>:DPHY:FILTer:IMIN ... 1746
SBUS<sb>:DPHY:FILTer:INVert ... 1743
SBUS<sb>:DPHY:FILTer:IOPerator ... 1747
SBUS<sb>:DPHY:FILTer:RST ... 1743
SBUS<sb>:DPHY:FORMat:ADDFrame ... 1748
SBUS<sb>:DPHY:FORMat:CLR ... 1749
SBUS<sb>:DPHY:FORMat:FCOunt? ... 1749
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ADDField ... 1749
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:COLor ... 1750
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1755
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1753
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1754
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1756
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1755
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1754
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1753
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1757
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1757
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1753
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1756
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLDCount? ... 1749
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Field ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Value ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Field ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Value ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Field ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Value ... 1752
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENCheck ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:LENValue ... 1751
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:NAME ... 1750
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:TYPE ... 1750
SBUS<sb>:DPHY:FORMat:LOAD ... 1748
SBUS<sb>:DPHY:FORMat:SAVE ... 1748
SBUS<sb>:DPHY:FORMat:SELect ... 1748
SBUS<sb>:DPHY:FRAMe<fr>:BITRate? ... 1764
SBUS<sb>:DPHY:FRAMe<fr>:CRC? ... 1768
SBUS<sb>:DPHY:FRAMe<fr>:DATA? ... 1769
SBUS<sb>:DPHY:FRAMe<fr>:DT? ... 1769
SBUS<sb>:DPHY:FRAMe<fr>:ECC? ... 1770
SBUS<sb>:DPHY:FRAMe<fr>:FDT? ... 1769
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:FVALue? ... 1766
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:LABel? ... 1765
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:STATe? ... 1764
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:VALue? ... 1766
SBUS<sb>:DPHY:FRAMe<fr>:FLDCount? ... 1764

SBUS<sb>:DPHY:FRAMe<fr>:FVCid? 1770
SBUS<sb>:DPHY:FRAMe<fr>:FWC? 1771
SBUS<sb>:DPHY:FRAMe<fr>:STARt? 1767
SBUS<sb>:DPHY:FRAMe<fr>:STATus? 1766
SBUS<sb>:DPHY:FRAMe<fr>:STOP? 1767
SBUS<sb>:DPHY:FRAMe<fr>:TYPE? 1768
SBUS<sb>:DPHY:FRAMe<fr>:VCID? 1770
SBUS<sb>:DPHY:FRAMe<fr>:WC? 1770
SBUS<sb>:DPHY:MODE 1736
SBUS<sb>:DPHY:POSition 1738
SBUS<sb>:DPHY:SCALe 1738
SBUS<sb>:DPHY:SCRambled 1736
SBUS<sb>:DPHY:SWTindex? 1762
SBUS<sb>:DPHY:SWTTime? 1763
SBUS<sb>:EBTB:DATA:HYSTeresis 1894
SBUS<sb>:EBTB:DATA:SOURce 1894
SBUS<sb>:EBTB:DATA:THReshold 1894
SBUS<sb>:EBTB:FCOunt? 1915
SBUS<sb>:EBTB:FILTer:BIT 1897
SBUS<sb>:EBTB:FILTer:CHKall 1896
SBUS<sb>:EBTB:FILTer:CLR 1896
SBUS<sb>:EBTB:FILTer:DMAX 1898
SBUS<sb>:EBTB:FILTer:DMIN 1898
SBUS<sb>:EBTB:FILTer:DOPerator 1898
SBUS<sb>:EBTB:FILTer:ERENable 1897
SBUS<sb>:EBTB:FILTer:ERRor<n>:ENABle 1897
SBUS<sb>:EBTB:FILTer:FIENable 1899
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:ENABle 1899
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:BIT 1897
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1898
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1898
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1898
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1899
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1899
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1900
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1900
SBUS<sb>:EBTB:FILTer:FRENable 1899
SBUS<sb>:EBTB:FILTer:IMAX 1899
SBUS<sb>:EBTB:FILTer:IMIN 1900
SBUS<sb>:EBTB:FILTer:INVert 1896
SBUS<sb>:EBTB:FILTer:IOPerator 1900
SBUS<sb>:EBTB:FILTer:RST 1897
SBUS<sb>:EBTB:FORMat:ADDFrame 1901
SBUS<sb>:EBTB:FORMat:CLR 1902
SBUS<sb>:EBTB:FORMat:FCOunt? 1902
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:ADDField 1902
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:COLor 1903
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1906
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1904
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CLMN 1906

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1904
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CONDition ... 1905
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1907
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1907
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1905
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1904
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1908
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1908
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1908
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLDCount? ... 1903
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:NAME ... 1903
SBUS<sb>:EBTB:FORMat:LOAD ... 1901
SBUS<sb>:EBTB:FORMat:SAVE ... 1902
SBUS<sb>:EBTB:FRAMe<fr>:BITRate? ... 1915
SBUS<sb>:EBTB:FRAMe<fr>:CONE? ... 1919
SBUS<sb>:EBTB:FRAMe<fr>:CTHRee? ... 1919
SBUS<sb>:EBTB:FRAMe<fr>:CTWO? ... 1919
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:FVALue? ... 1917
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:LABel? ... 1916
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:STATe? ... 1915
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:VALue? ... 1916
SBUS<sb>:EBTB:FRAMe<fr>:FLDCount? ... 1915
SBUS<sb>:EBTB:FRAMe<fr>:STARt? ... 1918
SBUS<sb>:EBTB:FRAMe<fr>:STATus? ... 1917
SBUS<sb>:EBTB:FRAMe<fr>:STOP? ... 1918
SBUS<sb>:EBTB:FRAMe<fr>:TYPE? ... 1918
SBUS<sb>:EBTB:POSition ... 1895
SBUS<sb>:EBTB:SCALe ... 1895
SBUS<sb>:EBTB:SWTindex? ... 1913
SBUS<sb>:EBTB:SWTTime? ... 1914
SBUS<sb>:EXPResult:DETail ... 1567
SBUS<sb>:EXPResult:EXTension ... 1568
SBUS<sb>:EXPResult:PATH ... 1568
SBUS<sb>:EXPResult:SAVE ... 1567
SBUS<sb>:EXPResult:TIME ... 1567
SBUS<sb>:FORMat ... 1565
SBUS<sb>:HBTO:FCOunt? ... 2242
SBUS<sb>:HBTO:FILTer:BIT ... 2222
SBUS<sb>:HBTO:FILTer:CHKall ... 2221
SBUS<sb>:HBTO:FILTer:CLR ... 2221
SBUS<sb>:HBTO:FILTer:DMAX ... 2222
SBUS<sb>:HBTO:FILTer:DMIN ... 2223
SBUS<sb>:HBTO:FILTer:DOPerator ... 2223
SBUS<sb>:HBTO:FILTer:ERENable ... 2223
SBUS<sb>:HBTO:FILTer:ERRor<n>:ENABle ... 2223
SBUS<sb>:HBTO:FILTer:FIENable ... 2224
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:ENABle ... 2224
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 2222
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 2222
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 2223

SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2223
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2224
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2224
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2225
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2225
SBUS<sb>:HBTO:FILTer:FRENable....2224
SBUS<sb>:HBTO:FILTer:IMAX....2224
SBUS<sb>:HBTO:FILTer:IMIN....2225
SBUS<sb>:HBTO:FILTer:INVert....2221
SBUS<sb>:HBTO:FILTer:IOPerator....2225
SBUS<sb>:HBTO:FILTer:RST....2222
SBUS<sb>:HBTO:FORMat:ADDFrame....2226
SBUS<sb>:HBTO:FORMat:CLR....2227
SBUS<sb>:HBTO:FORMat:FCOunt?....2227
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ADDField....2228
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:COLor....2229
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2233
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2232
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2232
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor....2231
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2234
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2234
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2233
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2231
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME....2231
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA....2235
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB....2235
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2232
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2235
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLDCount?....2228
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Field....2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Value....2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Field....2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Value....2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Field....2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Value....2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck....2229
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENCheck....2261
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENValue....2230
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:LENValue....2261
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:NAME....2228
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:TYPE....2229
SBUS<sb>:HBTO:FORMat:LOAD....2227
SBUS<sb>:HBTO:FORMat:SAVE....2227
SBUS<sb>:HBTO:FORMat:SELect....2226
SBUS<sb>:HBTO:FRAMe<fr>:BITRate?....2242
SBUS<sb>:HBTO:FRAMe<fr>:CRC?....2244
SBUS<sb>:HBTO:FRAMe<fr>:DATA?....2245
SBUS<sb>:HBTO:FRAMe<fr>:DTADdress?....2245
SBUS<sb>:HBTO:FRAMe<fr>:DTSYmbol?....2245

SBUS<sb>:HBTO:FRAMe<fr>:FCRC?....2245
SBUS<sb>:HBTO:FRAMe<fr>:FDATa?....2246
SBUS<sb>:HBTO:FRAMe<fr>:FDTaddress?....2246
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:FVALue?....2243
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:LABel?....2243
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:STATe?....2243
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:VALue?....2244
SBUS<sb>:HBTO:FRAMe<fr>:FLDCount?....2242
SBUS<sb>:HBTO:FRAMe<fr>:FSRaddress?....2246
SBUS<sb>:HBTO:FRAMe<fr>:FTPLenth?....2247
SBUS<sb>:HBTO:FRAMe<fr>:SRADdress?....2247
SBUS<sb>:HBTO:FRAMe<fr>:SRSYmbol?....2247
SBUS<sb>:HBTO:FRAMe<fr>:STARt?....2247
SBUS<sb>:HBTO:FRAMe<fr>:STATus?....2248
SBUS<sb>:HBTO:FRAMe<fr>:STOP?....2248
SBUS<sb>:HBTO:FRAMe<fr>:TPLenth?....2249
SBUS<sb>:HBTO:FRAMe<fr>:TYPE?....2249
SBUS<sb>:HBTO:MODE....2219
SBUS<sb>:HBTO:POLarity....2219
SBUS<sb>:HBTO:POSition....2219
SBUS<sb>:HBTO:SCALe....2220
SBUS<sb>:HBTO:SOURce....2220
SBUS<sb>:HBTO:SWTindex?....2241
SBUS<sb>:HBTO:SWTTime?....2241
SBUS<sb>:I2C:FCOunt?....1694
SBUS<sb>:I2C:FILTer:BIT....1673
SBUS<sb>:I2C:FILTer:CHKall....1669
SBUS<sb>:I2C:FILTer:CLR....1670
SBUS<sb>:I2C:FILTer:DMAX....1671
SBUS<sb>:I2C:FILTer:DMIN....1671
SBUS<sb>:I2C:FILTer:DOPerator....1671
SBUS<sb>:I2C:FILTer:ERENable....1672
SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle....1672
SBUS<sb>:I2C:FILTer:FIENable....1674
SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle....1670
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT....1673
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1671
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1671
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1671
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1674
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1672
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1673
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1673
SBUS<sb>:I2C:FILTer:FRENable....1670
SBUS<sb>:I2C:FILTer:IMAX....1672
SBUS<sb>:I2C:FILTer:IMIN....1673
SBUS<sb>:I2C:FILTer:INVert....1670
SBUS<sb>:I2C:FILTer:IOPerator....1673
SBUS<sb>:I2C:FILTer:RST....1670
SBUS<sb>:I2C:FORMat:ADDFrame....1675

SBUS<sb>:I2C:FORMat:CLR....1676
SBUS<sb>:I2C:FORMat:FCOunt?....1676
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ADDField....1676
SBUS<sb>:I2C:FORMat:FRAMe<fr>:COLor....1677
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1682
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1680
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1681
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:COLor....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1683
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1682
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1681
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1680
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:NAME....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARA....1684
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARB....1684
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1680
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1683
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLDCount?....1677
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Field....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Value....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Field....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Value....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Field....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Value....1679
SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENCheck....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:LENValue....1678
SBUS<sb>:I2C:FORMat:FRAMe<fr>:NAME....1677
SBUS<sb>:I2C:FORMat:FRAMe<fr>:TYPE....1677
SBUS<sb>:I2C:FORMat:LOAD....1675
SBUS<sb>:I2C:FORMat:SAVE....1676
SBUS<sb>:I2C:FORMat:SELect....1675
SBUS<sb>:I2C:FRAMe<fr>:AACCess?....1694
SBUS<sb>:I2C:FRAMe<fr>:ACCess?....1695
SBUS<sb>:I2C:FRAMe<fr>:ACOMplete?....1695
SBUS<sb>:I2C:FRAMe<fr>:ADBStart?....1695
SBUS<sb>:I2C:FRAMe<fr>:ADDRess?....1696
SBUS<sb>:I2C:FRAMe<fr>:ADEVice?....1696
SBUS<sb>:I2C:FRAMe<fr>:AMODe?....1696
SBUS<sb>:I2C:FRAMe<fr>:ASTart?....1697
SBUS<sb>:I2C:FRAMe<fr>:BITRate?....1697
SBUS<sb>:I2C:FRAMe<fr>:DATA?....1700
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:FVALue?....1698
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:LABel?....1698
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STARt?....1698
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STATe?....1699
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:VALue?....1699
SBUS<sb>:I2C:FRAMe<fr>:FLDCount?....1697
SBUS<sb>:I2C:FRAMe<fr>:RWBStart?....1700
SBUS<sb>:I2C:FRAMe<fr>:STARt?....1700
SBUS<sb>:I2C:FRAMe<fr>:STATus?....1701

SBUS<sb>:I2C:FRAMe<fr>:STOP? 1701
SBUS<sb>:I2C:FRAMe<fr>:SYMBol? 1702
SBUS<sb>:I2C:POSition 1668
SBUS<sb>:I2C:SCALe 1668
SBUS<sb>:I2C:SCL:HYSTeresis 1667
SBUS<sb>:I2C:SCL:SOURce 1667
SBUS<sb>:I2C:SCL:THReshold 1667
SBUS<sb>:I2C:SDA:HYSTeresis 1667
SBUS<sb>:I2C:SDA:SOURce 1668
SBUS<sb>:I2C:SDA:THReshold 1668
SBUS<sb>:I2C:SWTindex? 1693
SBUS<sb>:I2C:SWTTime? 1693
SBUS<sb>:I3C:FCOunt? 1727
SBUS<sb>:I3C:FILTer:BIT 1710
SBUS<sb>:I3C:FILTer:CHKall 1706
SBUS<sb>:I3C:FILTer:CLR 1706
SBUS<sb>:I3C:FILTer:DMAX 1707
SBUS<sb>:I3C:FILTer:DMIN 1707
SBUS<sb>:I3C:FILTer:DOPerator 1708
SBUS<sb>:I3C:FILTer:ERENable 1708
SBUS<sb>:I3C:FILTer:ERRor<n>:ENABle 1708
SBUS<sb>:I3C:FILTer:FIENable 1710
SBUS<sb>:I3C:FILTer:FRAMe<fr>:ENABle 1707
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:BIT 1710
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1707
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1707
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1708
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1710
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1709
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1709
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1709
SBUS<sb>:I3C:FILTer:FRENable 1707
SBUS<sb>:I3C:FILTer:IMAX 1709
SBUS<sb>:I3C:FILTer:IMIN 1709
SBUS<sb>:I3C:FILTer:INVert 1706
SBUS<sb>:I3C:FILTer:IOPerator 1709
SBUS<sb>:I3C:FILTer:RST 1706
SBUS<sb>:I3C:FORMat:ADDFrame 1712
SBUS<sb>:I3C:FORMat:CLR 1712
SBUS<sb>:I3C:FORMat:FCOunt? 1713
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ADDField 1713
SBUS<sb>:I3C:FORMat:FRAMe<fr>:COLor 1714
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1718
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1717
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITorder 1717
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:COLor 1716
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1719
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1719
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1718
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 1716

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1716
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1720
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1720
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1717
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1720
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLDCount? ... 1713
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Field ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Value ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Field ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Value ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Field ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Value ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENCheck ... 1714
SBUS<sb>:I3C:FORMat:FRAMe<fr>:LENValue ... 1715
SBUS<sb>:I3C:FORMat:FRAMe<fr>:NAME ... 1713
SBUS<sb>:I3C:FORMat:FRAMe<fr>:TYPE ... 1714
SBUS<sb>:I3C:FORMat:LOAD ... 1712
SBUS<sb>:I3C:FORMat:SAVE ... 1712
SBUS<sb>:I3C:FORMat:SELect ... 1711
SBUS<sb>:I3C:FRAMe<fr>:ACK? ... 1731
SBUS<sb>:I3C:FRAMe<fr>:ACKStart? ... 1731
SBUS<sb>:I3C:FRAMe<fr>:ADDRess? ... 1727
SBUS<sb>:I3C:FRAMe<fr>:ASTart? ... 1727
SBUS<sb>:I3C:FRAMe<fr>:BITRate? ... 1728
SBUS<sb>:I3C:FRAMe<fr>:COMMand? ... 1733
SBUS<sb>:I3C:FRAMe<fr>:CRC? ... 1733
SBUS<sb>:I3C:FRAMe<fr>:DATA? ... 1728
SBUS<sb>:I3C:FRAMe<fr>:FADDress? ... 1733
SBUS<sb>:I3C:FRAMe<fr>:FCOMmand? ... 1734
SBUS<sb>:I3C:FRAMe<fr>:FCRC? ... 1734
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:FVALue? ... 1731
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:LABel? ... 1732
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:STATe? ... 1732
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:VALue? ... 1733
SBUS<sb>:I3C:FRAMe<fr>:FLDCount? ... 1728
SBUS<sb>:I3C:FRAMe<fr>:RWBit? ... 1734
SBUS<sb>:I3C:FRAMe<fr>:RWBStart? ... 1729
SBUS<sb>:I3C:FRAMe<fr>:STARt? ... 1729
SBUS<sb>:I3C:FRAMe<fr>:STATus? ... 1729
SBUS<sb>:I3C:FRAMe<fr>:STOP? ... 1730
SBUS<sb>:I3C:FRAMe<fr>:SYMBol? ... 1730
SBUS<sb>:I3C:FRAMe<fr>:TYPE? ... 1735
SBUS<sb>:I3C:MINGap:SELect ... 1704
SBUS<sb>:I3C:MINGap:WIDTh ... 1704
SBUS<sb>:I3C:POSition ... 1705
SBUS<sb>:I3C:SCALe ... 1705
SBUS<sb>:I3C:SCL:HYSTeresis ... 1702
SBUS<sb>:I3C:SCL:SOURce ... 1703
SBUS<sb>:I3C:SCL:THReshold ... 1703
SBUS<sb>:I3C:SDA:HYSTeresis ... 1703

SBUS<sb>:I3C:SDA:SOURce....1703
SBUS<sb>:I3C:SDA:THReshold....1704
SBUS<sb>:I3C:SWTindex?....1726
SBUS<sb>:I3C:SWTTime?....1726
SBUS<sb>:LIN:BITRate....1968
SBUS<sb>:LIN:DATA:HYSTeresis....1969
SBUS<sb>:LIN:DATA:SOURce....1969
SBUS<sb>:LIN:DATA:THReshold....1969
SBUS<sb>:LIN:FCOunt?....1995
SBUS<sb>:LIN:FILTer:BIT....1972
SBUS<sb>:LIN:FILTer:CHKall....1971
SBUS<sb>:LIN:FILTer:CLR....1972
SBUS<sb>:LIN:FILTer:DMAX....1973
SBUS<sb>:LIN:FILTer:DMIN....1973
SBUS<sb>:LIN:FILTer:DOPerator....1973
SBUS<sb>:LIN:FILTer:ERENable....1974
SBUS<sb>:LIN:FILTer:ERRor<n>:ENABle....1974
SBUS<sb>:LIN:FILTer:FIENable....1974
SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle....1974
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT....1972
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1973
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1974
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1975
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1975
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1976
SBUS<sb>:LIN:FILTer:FRENable....1974
SBUS<sb>:LIN:FILTer:IMAX....1975
SBUS<sb>:LIN:FILTer:IMIN....1975
SBUS<sb>:LIN:FILTer:INVert....1972
SBUS<sb>:LIN:FILTer:IOPerator....1976
SBUS<sb>:LIN:FILTer:RST....1972
SBUS<sb>:LIN:FORMat:ADDFrame....1977
SBUS<sb>:LIN:FORMat:CLR....1978
SBUS<sb>:LIN:FORMat:FCOunt?....1978
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ADDField....1978
SBUS<sb>:LIN:FORMat:FRAMe<fr>:COLor....1979
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1984
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1982
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1983
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:COLor....1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1985
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1984
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1983
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1982
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:NAME....1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARA....1986
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARB....1986
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1982

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1985
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLDCount? ... 1978
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Field ... 1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Value ... 1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Field ... 1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Value ... 1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Field ... 1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Value ... 1981
SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENCheck ... 1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:LENValue ... 1980
SBUS<sb>:LIN:FORMat:FRAMe<fr>:NAME ... 1979
SBUS<sb>:LIN:FORMat:FRAMe<fr>:TYPE ... 1979
SBUS<sb>:LIN:FORMat:LOAD ... 1977
SBUS<sb>:LIN:FORMat:SAVE ... 1977
SBUS<sb>:LIN:FORMat:SELect ... 1977
SBUS<sb>:LIN:FRAMe<fr>:BITRate? ... 1996
SBUS<sb>:LIN:FRAMe<fr>:CSValue? ... 1998
SBUS<sb>:LIN:FRAMe<fr>:DATA? ... 1998
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:FVALue? ... 1997
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:LABel? ... 1998
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:STATe? ... 1996
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:VALue? ... 1997
SBUS<sb>:LIN:FRAMe<fr>:FLDCount? ... 1996
SBUS<sb>:LIN:FRAMe<fr>:IDPValue? ... 1999
SBUS<sb>:LIN:FRAMe<fr>:IDValue? ... 1999
SBUS<sb>:LIN:FRAMe<fr>:PIDentifier? ... 2001
SBUS<sb>:LIN:FRAMe<fr>:STARt? ... 1999
SBUS<sb>:LIN:FRAMe<fr>:STATus? ... 2000
SBUS<sb>:LIN:FRAMe<fr>:STOP? ... 2000
SBUS<sb>:LIN:FRAMe<fr>:SYMBol? ... 2000
SBUS<sb>:LIN:POLarity ... 1970
SBUS<sb>:LIN:POSition ... 1970
SBUS<sb>:LIN:SCALe ... 1970
SBUS<sb>:LIN:STANdard ... 1970
SBUS<sb>:LIN:SWTindex? ... 1994
SBUS<sb>:LIN:SWTTime? ... 1995
SBUS<sb>:MANCh:BITRate:SELect ... 1867
SBUS<sb>:MANCh:BITRate:WIDTh ... 1867
SBUS<sb>:MANCh:DATA:HYSTeresis ... 1868
SBUS<sb>:MANCh:DATA:PHASe ... 1865
SBUS<sb>:MANCh:DATA:POLarity ... 1864
SBUS<sb>:MANCh:DATA:SOURce ... 1864
SBUS<sb>:MANCh:DATA:THLower ... 1867
SBUS<sb>:MANCh:DATA:THUPper ... 1867
SBUS<sb>:MANCh:ENABle:HYSTeresis ... 1868
SBUS<sb>:MANCh:ENABle:POLarity ... 1865
SBUS<sb>:MANCh:ENABle:SOURce ... 1865
SBUS<sb>:MANCh:ENABle:THReshold ... 1868
SBUS<sb>:MANCh:FCOunt? ... 1889
SBUS<sb>:MANCh:FILTer:BIT ... 1871

SBUS<sb>:MANCh:FILTer:CHKall ... 1870
SBUS<sb>:MANCh:FILTer:CLR ... 1870
SBUS<sb>:MANCh:FILTer:DMAX ... 1871
SBUS<sb>:MANCh:FILTer:DMIN ... 1872
SBUS<sb>:MANCh:FILTer:DOPerator ... 1872
SBUS<sb>:MANCh:FILTer:ERENable ... 1871
SBUS<sb>:MANCh:FILTer:ERRor<n>:ENABle ... 1871
SBUS<sb>:MANCh:FILTer:FIENable ... 1872
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:ENABle ... 1873
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1871
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1871
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1872
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1872
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1872
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1873
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1874
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1874
SBUS<sb>:MANCh:FILTer:FRENable ... 1873
SBUS<sb>:MANCh:FILTer:IMAX ... 1873
SBUS<sb>:MANCh:FILTer:IMIN ... 1874
SBUS<sb>:MANCh:FILTer:INVert ... 1870
SBUS<sb>:MANCh:FILTer:IOPerator ... 1874
SBUS<sb>:MANCh:FILTer:RST ... 1870
SBUS<sb>:MANCh:FORMat:ADDFrame ... 1875
SBUS<sb>:MANCh:FORMat:CLR ... 1876
SBUS<sb>:MANCh:FORMat:FCOunt? ... 1876
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:ADDField ... 1876
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:COLor ... 1877
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1881
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1878
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1880
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CLMN ... 1880
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1878
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CONDition ... 1878
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1881
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1881
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1879
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1877
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1882
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1882
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1882
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLDCount? ... 1876
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:NAME ... 1877
SBUS<sb>:MANCh:FORMat:LOAD ... 1875
SBUS<sb>:MANCh:FORMat:SAVE ... 1875
SBUS<sb>:MANCh:FRAMe<fr>:CONE? ... 1893
SBUS<sb>:MANCh:FRAMe<fr>:CTHRee? ... 1893
SBUS<sb>:MANCh:FRAMe<fr>:CTWO? ... 1893
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:FVALue? ... 1891
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:LABel? ... 1890

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:STATe? 1890
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:VALue? 1890
SBUS<sb>:MANCh:FRAMe<fr>:FLDCount? 1889
SBUS<sb>:MANCh:FRAMe<fr>:STARt? 1892
SBUS<sb>:MANCh:FRAMe<fr>:STATus? 1891
SBUS<sb>:MANCh:FRAMe<fr>:STOP? 1892
SBUS<sb>:MANCh:FRAMe<fr>:TYPE? 1892
SBUS<sb>:MANCh:FRAMe<fr>:WBRate? 1889
SBUS<sb>:MANCh:MINGap:SELect 1866
SBUS<sb>:MANCh:MINGap:WIDTh 1866
SBUS<sb>:MANCh:POSition 1868
SBUS<sb>:MANCh:SCALe 1869
SBUS<sb>:MANCh:SWTindex? 1888
SBUS<sb>:MANCh:SWTTime? 1888
SBUS<sb>:MILStd:FILTer:BIT 2069
SBUS<sb>:MILStd:FILTer:CHKall 2068
SBUS<sb>:MILStd:FILTer:CLR 2069
SBUS<sb>:MILStd:FILTer:DMAX 2070
SBUS<sb>:MILStd:FILTer:DMIN 2070
SBUS<sb>:MILStd:FILTer:DOPerator 2071
SBUS<sb>:MILStd:FILTer:ERENable 2070
SBUS<sb>:MILStd:FILTer:ERRor<n>:ENABle 2070
SBUS<sb>:MILStd:FILTer:FIENable 2073
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:ENABle 2072
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:BIT 2069
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2070
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2070
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2071
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2073
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2071
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2072
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2072
SBUS<sb>:MILStd:FILTer:FRENable 2072
SBUS<sb>:MILStd:FILTer:IMAX 2071
SBUS<sb>:MILStd:FILTer:IMIN 2072
SBUS<sb>:MILStd:FILTer:INVert 2069
SBUS<sb>:MILStd:FILTer:IOPerator 2072
SBUS<sb>:MILStd:FILTer:RST 2069
SBUS<sb>:MILStd:FORMat:ADDFrame 2074
SBUS<sb>:MILStd:FORMat:CLR 2075
SBUS<sb>:MILStd:FORMat:FCOunt? 2075
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ADDField 2075
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:COLor 2076
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 2081
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITCount 2079
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITorder 2080
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:COLor 2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 2082
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 2082
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat 2080

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2079
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:NAME....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARA....2083
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARB....2083
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2080
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2082
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLDCount?....2076
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Field....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Value....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Field....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Value....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Field....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Value....2078
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENCheck....2077
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:LENValue....2077
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:NAME....2076
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:TYPE....2077
SBUS<sb>:MILStd:FORMat:LOAD....2074
SBUS<sb>:MILStd:FORMat:SAVE....2075
SBUS<sb>:MILStd:FORMat:SELect....2074
SBUS<sb>:MILStd:POLarity....2066
SBUS<sb>:MILStd:POSition....2067
SBUS<sb>:MILStd:SCALe....2067
SBUS<sb>:MILStd:SOURce....2066
SBUS<sb>:MILStd:SWTindex?....2088
SBUS<sb>:MILStd:SWTTime?....2089
SBUS<sb>:MILStd:THReshold:HIGH....2066
SBUS<sb>:MILStd:THReshold:HYSTeresis....2067
SBUS<sb>:MILStd:THReshold:LOW....2067
SBUS<sb>:MILStd:WCOunt?....2089
SBUS<sb>:MILStd:WORD<w>:BITRate?....2090
SBUS<sb>:MILStd:WORD<w>:DATA?....2092
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:FVALue?....2091
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:LABel?....2091
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:STATe?....2090
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:VALue?....2091
SBUS<sb>:MILStd:WORD<w>:FLDCount?....2089
SBUS<sb>:MILStd:WORD<w>:INFO?....2092
SBUS<sb>:MILStd:WORD<w>:RTADdress?....2092
SBUS<sb>:MILStd:WORD<w>:STARt?....2093
SBUS<sb>:MILStd:WORD<w>:STATus?....2093
SBUS<sb>:MILStd:WORD<w>:STOP?....2093
SBUS<sb>:MILStd:WORD<w>:SYMBol?....2094
SBUS<sb>:MILStd:WORD<w>:TYPE?....2094
SBUS<sb>:NRZC:CLK:HYSTeresis....1808
SBUS<sb>:NRZC:CLK:POLarity....1805
SBUS<sb>:NRZC:CLK:SOURce....1805
SBUS<sb>:NRZC:CLK:THReshold....1808
SBUS<sb>:NRZC:DATA:HYSTeresis....1808
SBUS<sb>:NRZC:DATA:POLarity....1806

SBUS<sb>:NRZC:DATA:SOURce....1806
SBUS<sb>:NRZC:DATA:THReshold....1808
SBUS<sb>:NRZC:ENABle:HYSTeresis....1809
SBUS<sb>:NRZC:ENABle:POLarity....1807
SBUS<sb>:NRZC:ENABle:SOURce....1806
SBUS<sb>:NRZC:ENABle:THReshold....1809
SBUS<sb>:NRZC:FCOunt?....1830
SBUS<sb>:NRZC:FILTer:BIT....1811
SBUS<sb>:NRZC:FILTer:CHKall....1810
SBUS<sb>:NRZC:FILTer:CLR....1811
SBUS<sb>:NRZC:FILTer:DMAX....1812
SBUS<sb>:NRZC:FILTer:DMIN....1812
SBUS<sb>:NRZC:FILTer:DOPerator....1813
SBUS<sb>:NRZC:FILTer:ERENable....1812
SBUS<sb>:NRZC:FILTer:ERRor<n>:ENABle....1812
SBUS<sb>:NRZC:FILTer:FIENable....1813
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:ENABle....1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:BIT....1811
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1812
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1812
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1813
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1813
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1814
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1815
SBUS<sb>:NRZC:FILTer:FRENable....1814
SBUS<sb>:NRZC:FILTer:IMAX....1814
SBUS<sb>:NRZC:FILTer:IMIN....1814
SBUS<sb>:NRZC:FILTer:INVert....1811
SBUS<sb>:NRZC:FILTer:IOPerator....1815
SBUS<sb>:NRZC:FILTer:RST....1811
SBUS<sb>:NRZC:FORMat:ADDFrame....1816
SBUS<sb>:NRZC:FORMat:CLR....1816
SBUS<sb>:NRZC:FORMat:FCOunt?....1817
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:ADDField....1817
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:COLor....1818
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1821
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1819
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1820
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CLMN....1821
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:COLor....1818
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CONDition....1819
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1822
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1822
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1820
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:NAME....1818
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARA....1823
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARB....1823
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1823
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLDCount?....1817

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:NAME....1818
SBUS<sb>:NRZC:FORMat:LOAD....1816
SBUS<sb>:NRZC:FORMat:SAVE....1816
SBUS<sb>:NRZC:FRAMe<fr>:CONE?....1833
SBUS<sb>:NRZC:FRAMe<fr>:CTHRee?....1834
SBUS<sb>:NRZC:FRAMe<fr>:CTWO?....1834
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:FVALue?....1832
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:LABel?....1831
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:STATe?....1830
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:VALue?....1831
SBUS<sb>:NRZC:FRAMe<fr>:FLDCount?....1830
SBUS<sb>:NRZC:FRAMe<fr>:STARt?....1832
SBUS<sb>:NRZC:FRAMe<fr>:STATus?....1832
SBUS<sb>:NRZC:FRAMe<fr>:STOP?....1833
SBUS<sb>:NRZC:FRAMe<fr>:TYPE?....1833
SBUS<sb>:NRZC:FRAMe<fr>:WBRate?....1830
SBUS<sb>:NRZC:MINGap:SELect....1807
SBUS<sb>:NRZC:MINGap:WIDTh....1807
SBUS<sb>:NRZC:POSition....1809
SBUS<sb>:NRZC:SCALe....1809
SBUS<sb>:NRZC:SWTindex?....1829
SBUS<sb>:NRZC:SWTTime?....1829
SBUS<sb>:NRZU:BITRate:SELect....1837
SBUS<sb>:NRZU:BITRate:WIDTh....1837
SBUS<sb>:NRZU:DATA:HYSTeresis....1838
SBUS<sb>:NRZU:DATA:POLarity....1835
SBUS<sb>:NRZU:DATA:SOURce....1835
SBUS<sb>:NRZU:DATA:THReshold....1837
SBUS<sb>:NRZU:ENABle:HYSTeresis....1838
SBUS<sb>:NRZU:ENABle:POLarity....1836
SBUS<sb>:NRZU:ENABle:SOURce....1835
SBUS<sb>:NRZU:ENABle:THReshold....1838
SBUS<sb>:NRZU:FCOunt?....1859
SBUS<sb>:NRZU:FILTer:BIT....1840
SBUS<sb>:NRZU:FILTer:CHKall....1840
SBUS<sb>:NRZU:FILTer:CLR....1840
SBUS<sb>:NRZU:FILTer:DMAX....1841
SBUS<sb>:NRZU:FILTer:DMIN....1842
SBUS<sb>:NRZU:FILTer:DOPerator....1842
SBUS<sb>:NRZU:FILTer:ERENable....1841
SBUS<sb>:NRZU:FILTer:ERRor<n>:ENABle....1841
SBUS<sb>:NRZU:FILTer:FIENable....1842
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:ENABle....1843
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:BIT....1840
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1841
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1842
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1842
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1842
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1843
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1844

SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1844
SBUS<sb>:NRZU:FILTer:FRENable ... 1843
SBUS<sb>:NRZU:FILTer:IMAX ... 1843
SBUS<sb>:NRZU:FILTer:IMIN ... 1844
SBUS<sb>:NRZU:FILTer:INVert ... 1840
SBUS<sb>:NRZU:FILTer:IOPerator ... 1844
SBUS<sb>:NRZU:FILTer:RST ... 1840
SBUS<sb>:NRZU:FORMat:ADDFrame ... 1845
SBUS<sb>:NRZU:FORMat:CLR ... 1846
SBUS<sb>:NRZU:FORMat:FCOunt? ... 1846
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:ADDField ... 1846
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:COLor ... 1847
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1851
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1848
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1850
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CLMN ... 1850
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1848
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CONDition ... 1848
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1851
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1851
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1849
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1847
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1852
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1852
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1852
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLDCount? ... 1846
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:NAME ... 1847
SBUS<sb>:NRZU:FORMat:LOAD ... 1845
SBUS<sb>:NRZU:FORMat:SAVE ... 1845
SBUS<sb>:NRZU:FRAMe<fr>:CONE? ... 1863
SBUS<sb>:NRZU:FRAMe<fr>:CTHRee? ... 1863
SBUS<sb>:NRZU:FRAMe<fr>:CTWO? ... 1863
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:FVALue? ... 1861
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:LABel? ... 1860
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:STATe? ... 1860
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:VALue? ... 1861
SBUS<sb>:NRZU:FRAMe<fr>:FLDCount? ... 1859
SBUS<sb>:NRZU:FRAMe<fr>:STARt? ... 1862
SBUS<sb>:NRZU:FRAMe<fr>:STATus? ... 1861
SBUS<sb>:NRZU:FRAMe<fr>:STOP? ... 1862
SBUS<sb>:NRZU:FRAMe<fr>:TYPE? ... 1862
SBUS<sb>:NRZU:FRAMe<fr>:WBRate? ... 1859
SBUS<sb>:NRZU:MINGap:SELect ... 1836
SBUS<sb>:NRZU:MINGap:WIDTh ... 1836
SBUS<sb>:NRZU:POSition ... 1838
SBUS<sb>:NRZU:SCALe ... 1839
SBUS<sb>:NRZU:SWTindex? ... 1858
SBUS<sb>:NRZU:SWTTime? ... 1858
SBUS<sb>:OSPI:CK:HYSTeresis ... 1638
SBUS<sb>:OSPI:CK:SOURce ... 1639

SBUS<sb>:OSPI:CK:THReshold....1639
SBUS<sb>:OSPI:CSEL:HYSTeresis....1637
SBUS<sb>:OSPI:CSEL:POLarity....1637
SBUS<sb>:OSPI:CSEL:SOURce....1638
SBUS<sb>:OSPI:CSEL:THReshold....1638
SBUS<sb>:OSPI:DS:HYSTeresis....1642
SBUS<sb>:OSPI:DS:SOURce....1642
SBUS<sb>:OSPI:DS:THReshold....1642
SBUS<sb>:OSPI:FCOunt?....1660
SBUS<sb>:OSPI:FILTer:BIT....1644
SBUS<sb>:OSPI:FILTer:CHKall....1643
SBUS<sb>:OSPI:FILTer:CLR....1644
SBUS<sb>:OSPI:FILTer:DMAX....1645
SBUS<sb>:OSPI:FILTer:DMIN....1645
SBUS<sb>:OSPI:FILTer:DOPerator....1645
SBUS<sb>:OSPI:FILTer:ERENable....1647
SBUS<sb>:OSPI:FILTer:ERRor<n>:ENABle....1647
SBUS<sb>:OSPI:FILTer:FIENable....1647
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:ENABle....1648
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT....1644
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1645
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1647
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1646
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1646
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1647
SBUS<sb>:OSPI:FILTer:FRENable....1648
SBUS<sb>:OSPI:FILTer:IMAX....1646
SBUS<sb>:OSPI:FILTer:IMIN....1646
SBUS<sb>:OSPI:FILTer:INVert....1644
SBUS<sb>:OSPI:FILTer:IOPerator....1647
SBUS<sb>:OSPI:FILTer:RST....1644
SBUS<sb>:OSPI:FRAMe<fr>:ADDR?....1660
SBUS<sb>:OSPI:FRAMe<fr>:ADFormatted?....1660
SBUS<sb>:OSPI:FRAMe<fr>:BITRate?....1660
SBUS<sb>:OSPI:FRAMe<fr>:CEXTension?....1664
SBUS<sb>:OSPI:FRAMe<fr>:CMD?....1663
SBUS<sb>:OSPI:FRAMe<fr>:CMDFormatted?....1663
SBUS<sb>:OSPI:FRAMe<fr>:CXFormatted?....1664
SBUS<sb>:OSPI:FRAMe<fr>:DATA?....1661
SBUS<sb>:OSPI:FRAMe<fr>:DCOunt?....1664
SBUS<sb>:OSPI:FRAMe<fr>:FDATa?....1661
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:FVALue?....1662
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:LABel?....1662
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:STATe?....1663
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:VALue?....1662
SBUS<sb>:OSPI:FRAMe<fr>:FLDCount?....1661
SBUS<sb>:OSPI:FRAMe<fr>:STARt?....1665
SBUS<sb>:OSPI:FRAMe<fr>:STATus?....1665

SBUS<sb>:OSPI:FRAMe<fr>:STOP? 1666
SBUS<sb>:OSPI:FRAMe<fr>:TYPE? 1665
SBUS<sb>:OSPI:IOFR:HYSTeresis 1639
SBUS<sb>:OSPI:IOFR:POLarity 1640
SBUS<sb>:OSPI:IOFR:POSition 1640
SBUS<sb>:OSPI:IOFR:SCALe 1641
SBUS<sb>:OSPI:IOFR:SOURce 1641
SBUS<sb>:OSPI:IOFR:THReshold 1641
SBUS<sb>:OSPI:IOFV:HYSTeresis 1639
SBUS<sb>:OSPI:IOFV:POLarity 1640
SBUS<sb>:OSPI:IOFV:POSition 1640
SBUS<sb>:OSPI:IOFV:SCALe 1641
SBUS<sb>:OSPI:IOFV:SOURce 1641
SBUS<sb>:OSPI:IOFV:THReshold 1641
SBUS<sb>:OSPI:IOONe:HYSTeresis 1639
SBUS<sb>:OSPI:IOONe:POLarity 1640
SBUS<sb>:OSPI:IOONe:POSition 1640
SBUS<sb>:OSPI:IOONe:SCALe 1640
SBUS<sb>:OSPI:IOONe:SOURce 1641
SBUS<sb>:OSPI:IOONe:THReshold 1641
SBUS<sb>:OSPI:IOSV:HYSTeresis 1639
SBUS<sb>:OSPI:IOSV:POLarity 1640
SBUS<sb>:OSPI:IOSV:POSition 1640
SBUS<sb>:OSPI:IOSV:SCALe 1641
SBUS<sb>:OSPI:IOSV:SOURce 1641
SBUS<sb>:OSPI:IOSV:THReshold 1641
SBUS<sb>:OSPI:IOSX:HYSTeresis 1639
SBUS<sb>:OSPI:IOSX:POLarity 1640
SBUS<sb>:OSPI:IOSX:POSition 1640
SBUS<sb>:OSPI:IOSX:SCALe 1641
SBUS<sb>:OSPI:IOSX:SOURce 1641
SBUS<sb>:OSPI:IOSX:THReshold 1641
SBUS<sb>:OSPI:IOTHree:HYSTeresis 1639
SBUS<sb>:OSPI:IOTHree:POLarity 1640
SBUS<sb>:OSPI:IOTHree:POSition 1640
SBUS<sb>:OSPI:IOTHree:SCALe 1641
SBUS<sb>:OSPI:IOTHree:SOURce 1641
SBUS<sb>:OSPI:IOTHree:THReshold 1641
SBUS<sb>:OSPI:IOTWo:HYSTeresis 1639
SBUS<sb>:OSPI:IOTWo:POLarity 1640
SBUS<sb>:OSPI:IOTWo:POSition 1640
SBUS<sb>:OSPI:IOTWo:SCALe 1640
SBUS<sb>:OSPI:IOTWo:SOURce 1641
SBUS<sb>:OSPI:IOTWo:THReshold 1641
SBUS<sb>:OSPI:IOZero:HYSTeresis 1639
SBUS<sb>:OSPI:IOZero:POLarity 1640
SBUS<sb>:OSPI:IOZero:POSition 1640
SBUS<sb>:OSPI:IOZero:SCALe 1640
SBUS<sb>:OSPI:IOZero:SOURce 1641
SBUS<sb>:OSPI:IOZero:THReshold 1641

SBUS<sb>:OSPI:LDOPcode....1649
SBUS<sb>:OSPI:MODE....1638
SBUS<sb>:OSPI:OPCode:APPend....1648
SBUS<sb>:OSPI:OPCode:DALL....1649
SBUS<sb>:OSPI:OPCode:DELete....1649
SBUS<sb>:OSPI:OPCode:ITEM<n>:ADBYtes....1651
SBUS<sb>:OSPI:OPCode:ITEM<n>:ADMode....1652
SBUS<sb>:OSPI:OPCode:ITEM<n>:CMEXtension....1651
SBUS<sb>:OSPI:OPCode:ITEM<n>:CMMode....1651
SBUS<sb>:OSPI:OPCode:ITEM<n>:CODE....1650
SBUS<sb>:OSPI:OPCode:ITEM<n>:DTMode....1653
SBUS<sb>:OSPI:OPCode:ITEM<n>:DTTYpe....1653
SBUS<sb>:OSPI:OPCode:ITEM<n>:LACYcles....1652
SBUS<sb>:OSPI:OPCode:ITEM<n>:NAME....1650
SBUS<sb>:OSPI:OPCode:RESet....1649
SBUS<sb>:OSPI:OPCode:SIZE?....1650
SBUS<sb>:OSPI:SVOP....1650
SBUS<sb>:OSPI:SWTindex?....1659
SBUS<sb>:OSPI:SWTTime?....1659
SBUS<sb>:QSPI:CSEL:HYSTeresis....1604
SBUS<sb>:QSPI:CSEL:POLarity....1605
SBUS<sb>:QSPI:CSEL:SOURce....1605
SBUS<sb>:QSPI:CSEL:THReshold....1605
SBUS<sb>:QSPI:FCOunt?....1630
SBUS<sb>:QSPI:FILTer:BIT....1615
SBUS<sb>:QSPI:FILTer:CHKall....1614
SBUS<sb>:QSPI:FILTer:CLR....1614
SBUS<sb>:QSPI:FILTer:DMAX....1615
SBUS<sb>:QSPI:FILTer:DMIN....1616
SBUS<sb>:QSPI:FILTer:DOPerator....1616
SBUS<sb>:QSPI:FILTer:ERENable....1618
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle....1618
SBUS<sb>:QSPI:FILTer:FIENable....1618
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABle....1618
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT....1615
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1615
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1618
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1616
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1617
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1617
SBUS<sb>:QSPI:FILTer:FRENable....1618
SBUS<sb>:QSPI:FILTer:IMAX....1616
SBUS<sb>:QSPI:FILTer:IMIN....1617
SBUS<sb>:QSPI:FILTer:INVert....1614
SBUS<sb>:QSPI:FILTer:IOPerator....1617
SBUS<sb>:QSPI:FILTer:RST....1615
SBUS<sb>:QSPI:FRAMe<fr>:ADDR?....1630
SBUS<sb>:QSPI:FRAMe<fr>:ALT?....1631

SBUS<sb>:QSPI:FRAMe<fr>:BITRate? 1631
SBUS<sb>:QSPI:FRAMe<fr>:DATA? 1631
SBUS<sb>:QSPI:FRAMe<fr>:FDATa? 1632
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:FVALue? 1632
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:LABel? 1633
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:STATe? 1633
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:VALue? 1632
SBUS<sb>:QSPI:FRAMe<fr>:FLDCount? 1631
SBUS<sb>:QSPI:FRAMe<fr>:ILBL? 1634
SBUS<sb>:QSPI:FRAMe<fr>:IVALue? 1634
SBUS<sb>:QSPI:FRAMe<fr>:STARt? 1634
SBUS<sb>:QSPI:FRAMe<fr>:STATus? 1635
SBUS<sb>:QSPI:FRAMe<fr>:STOP? 1635
SBUS<sb>:QSPI:FRAMe<fr>:TYPE? 1634
SBUS<sb>:QSPI:INSTruction 1605
SBUS<sb>:QSPI:IOONe:HYSTeresis 1606
SBUS<sb>:QSPI:IOONe:POLarity 1606
SBUS<sb>:QSPI:IOONe:POSition 1606
SBUS<sb>:QSPI:IOONe:SCALe 1606
SBUS<sb>:QSPI:IOONe:SOURce 1607
SBUS<sb>:QSPI:IOONe:THReshold 1607
SBUS<sb>:QSPI:IOTHree:HYSTeresis 1607
SBUS<sb>:QSPI:IOTHree:POLarity 1608
SBUS<sb>:QSPI:IOTHree:POSition 1608
SBUS<sb>:QSPI:IOTHree:SCALe 1608
SBUS<sb>:QSPI:IOTHree:SOURce 1608
SBUS<sb>:QSPI:IOTHree:THReshold 1609
SBUS<sb>:QSPI:IOTWo:HYSTeresis 1609
SBUS<sb>:QSPI:IOTWo:POLarity 1609
SBUS<sb>:QSPI:IOTWo:POSition 1609
SBUS<sb>:QSPI:IOTWo:SCALe 1610
SBUS<sb>:QSPI:IOTWo:SOURce 1610
SBUS<sb>:QSPI:IOTWo:THReshold 1610
SBUS<sb>:QSPI:IOZero:HYSTeresis 1610
SBUS<sb>:QSPI:IOZero:POLarity 1611
SBUS<sb>:QSPI:IOZero:POSition 1611
SBUS<sb>:QSPI:IOZero:SCALe 1611
SBUS<sb>:QSPI:IOZero:SOURce 1612
SBUS<sb>:QSPI:IOZero:THReshold 1612
SBUS<sb>:QSPI:LDOPcode 1620
SBUS<sb>:QSPI:OPCode:APPend 1619
SBUS<sb>:QSPI:OPCode:DALL 1619
SBUS<sb>:QSPI:OPCode:DELete 1619
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADBYtes 1620
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADLanes 1621
SBUS<sb>:QSPI:OPCode:ITEM<n>:ALT 1621
SBUS<sb>:QSPI:OPCode:ITEM<n>:CODE 1621
SBUS<sb>:QSPI:OPCode:ITEM<n>:DATA 1622
SBUS<sb>:QSPI:OPCode:ITEM<n>:DDR 1622
SBUS<sb>:QSPI:OPCode:ITEM<n>:DMCYcles 1622

SBUS<sb>:QSPI:OPCode:ITEM<n>:DTLanes ... 1623
SBUS<sb>:QSPI:OPCode:ITEM<n>:NAME ... 1623
SBUS<sb>:QSPI:OPCode:RESet ... 1620
SBUS<sb>:QSPI:OPCode:SIZE? ... 1620
SBUS<sb>:QSPI:SCLK:HYSTeresis ... 1612
SBUS<sb>:QSPI:SCLK:POLarity ... 1612
SBUS<sb>:QSPI:SCLK:SOURce ... 1613
SBUS<sb>:QSPI:SCLK:THReshold ... 1613
SBUS<sb>:QSPI:SVOP ... 1623
SBUS<sb>:QSPI:SWTindex? ... 1629
SBUS<sb>:QSPI:SWTTime? ... 1629
SBUS<sb>:RESult ... 1565
SBUS<sb>:RFFE:CLOCk:HYSTeresis ... 2154
SBUS<sb>:RFFE:CLOCk:SOURce ... 2155
SBUS<sb>:RFFE:CLOCk:THReshold ... 2155
SBUS<sb>:RFFE:DATA:HYSTeresis ... 2155
SBUS<sb>:RFFE:DATA:SOURce ... 2155
SBUS<sb>:RFFE:DATA:THReshold ... 2156
SBUS<sb>:RFFE:FCOunt? ... 2180
SBUS<sb>:RFFE:FILTer:BIT ... 2159
SBUS<sb>:RFFE:FILTer:CHKall ... 2158
SBUS<sb>:RFFE:FILTer:CLR ... 2158
SBUS<sb>:RFFE:FILTer:DMAX ... 2160
SBUS<sb>:RFFE:FILTer:DMIN ... 2160
SBUS<sb>:RFFE:FILTer:DOPerator ... 2161
SBUS<sb>:RFFE:FILTer:ERENable ... 2163
SBUS<sb>:RFFE:FILTer:ERRor<n>:ENABle ... 2163
SBUS<sb>:RFFE:FILTer:FIENable ... 2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:ENABle ... 2159
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 2159
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 2160
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 2160
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 2161
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 2162
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 2162
SBUS<sb>:RFFE:FILTer:FRENable ... 2159
SBUS<sb>:RFFE:FILTer:IMAX ... 2161
SBUS<sb>:RFFE:FILTer:IMIN ... 2162
SBUS<sb>:RFFE:FILTer:INVert ... 2159
SBUS<sb>:RFFE:FILTer:IOPerator ... 2162
SBUS<sb>:RFFE:FILTer:RST ... 2159
SBUS<sb>:RFFE:FORMat:ADDFrame ... 2164
SBUS<sb>:RFFE:FORMat:CLR ... 2165
SBUS<sb>:RFFE:FORMat:FCOunt? ... 2165
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ADDField ... 2165
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:COLor ... 2166
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2171
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2169

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2170
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:COLor....2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2172
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2171
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2170
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2169
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:NAME....2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARA....2173
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARB....2173
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2169
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2172
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLDCount?....2165
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Field....2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Value....2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Field....2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Value....2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Field....2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Value....2168
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENCheck....2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:LENValue....2167
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:NAME....2166
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:TYPE....2166
SBUS<sb>:RFFE:FORMat:LOAD....2164
SBUS<sb>:RFFE:FORMat:SAVE....2164
SBUS<sb>:RFFE:FORMat:SELect....2164
SBUS<sb>:RFFE:FRAMe<fr>:ADDRess?....2181
SBUS<sb>:RFFE:FRAMe<fr>:BCOunt?....2181
SBUS<sb>:RFFE:FRAMe<fr>:DATA?....2181
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:FVALue?....2182
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:NAME?....2182
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:STATe?....2182
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:VALue?....2183
SBUS<sb>:RFFE:FRAMe<fr>:FLDCount?....2181
SBUS<sb>:RFFE:FRAMe<fr>:PADone?....2179
SBUS<sb>:RFFE:FRAMe<fr>:PADZero?....2180
SBUS<sb>:RFFE:FRAMe<fr>:PCTRl?....2180
SBUS<sb>:RFFE:FRAMe<fr>:RBTRate?....2183
SBUS<sb>:RFFE:FRAMe<fr>:SADD?....2183
SBUS<sb>:RFFE:FRAMe<fr>:STARt?....2184
SBUS<sb>:RFFE:FRAMe<fr>:STATe?....2184
SBUS<sb>:RFFE:FRAMe<fr>:STOP?....2184
SBUS<sb>:RFFE:FRAMe<fr>:SYMBol?....2186
SBUS<sb>:RFFE:FRAMe<fr>:TYPE?....2185
SBUS<sb>:RFFE:FRAMe<fr>:WBTRate?....2186
SBUS<sb>:RFFE:GFILter....2156
SBUS<sb>:RFFE:GFWidth....2156
SBUS<sb>:RFFE:POSition....2157
SBUS<sb>:RFFE:RDMD....2157
SBUS<sb>:RFFE:SCALe....2157
SBUS<sb>:RFFE:SWTindex?....2178

SBUS<sb>:RFFE:SWTTime? 2179
SBUS<sb>:RMSBus 1566
SBUS<sb>:SENT:CLKPeriod 2002
SBUS<sb>:SENT:CLKTolerance 2002
SBUS<sb>:SENT:CRCMethod 2002
SBUS<sb>:SENT:CRCVersion 2003
SBUS<sb>:SENT:DATA:HYSTeresis 2003
SBUS<sb>:SENT:DATA:SOURce 2003
SBUS<sb>:SENT:DATA:THReshold 2003
SBUS<sb>:SENT:DNIBbles 2004
SBUS<sb>:SENT:FCOunt? 2028
SBUS<sb>:SENT:FILTer:BIT 2009
SBUS<sb>:SENT:FILTer:CHKall 2008
SBUS<sb>:SENT:FILTer:CLR 2008
SBUS<sb>:SENT:FILTer:DMAX 2009
SBUS<sb>:SENT:FILTer:DMIN 2010
SBUS<sb>:SENT:FILTer:DOPerator 2010
SBUS<sb>:SENT:FILTer:ERENable 2012
SBUS<sb>:SENT:FILTer:ERRor<n>:ENABle 2012
SBUS<sb>:SENT:FILTer:FIENable 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:ENABle 2009
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:BIT 2009
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2009
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2010
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2011
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2011
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2012
SBUS<sb>:SENT:FILTer:FRENable 2009
SBUS<sb>:SENT:FILTer:IMAX 2011
SBUS<sb>:SENT:FILTer:IMIN 2011
SBUS<sb>:SENT:FILTer:INVert 2008
SBUS<sb>:SENT:FILTer:IOPerator 2012
SBUS<sb>:SENT:FILTer:RST 2008
SBUS<sb>:SENT:FORMat:ADDFrame 2013
SBUS<sb>:SENT:FORMat:CLR 2014
SBUS<sb>:SENT:FORMat:FCOunt? 2014
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ADDField 2015
SBUS<sb>:SENT:FORMat:FRAMe<fr>:COLor 2015
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 2020
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITCount 2018
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITorder 2019
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:COLor 2018
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 2021
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 2021
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat 2020
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 2018
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:NAME 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARA 2022

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARB 2022
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:REPetition 2019
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:UNIT 2021
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLDCount? 2015
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Field 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Value 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Field 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Value 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Field 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Value 2017
SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENCheck 2016
SBUS<sb>:SENT:FORMat:FRAMe<fr>:LENValue 2016
SBUS<sb>:SENT:FORMat:FRAMe<fr>:NAME 2015
SBUS<sb>:SENT:FORMat:FRAMe<fr>:TYPE 2016
SBUS<sb>:SENT:FORMat:LOAD 2014
SBUS<sb>:SENT:FORMat:SAVE 2014
SBUS<sb>:SENT:FORMat:SELect 2013
SBUS<sb>:SENT:FRAMe<fr>:BITRate? 2029
SBUS<sb>:SENT:FRAMe<fr>:CSValue? 2029
SBUS<sb>:SENT:FRAMe<fr>:DATA? 2029
SBUS<sb>:SENT:FRAMe<fr>:FDValues? 2030
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:FVALue? 2032
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:LABel? 2033
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:STATe? 2032
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:VALue? 2032
SBUS<sb>:SENT:FRAMe<fr>:FLDCount? 2031
SBUS<sb>:SENT:FRAMe<fr>:FSCom? 2030
SBUS<sb>:SENT:FRAMe<fr>:FSDTa? 2030
SBUS<sb>:SENT:FRAMe<fr>:IDTYpe? 2030
SBUS<sb>:SENT:FRAMe<fr>:IDValue? 2031
SBUS<sb>:SENT:FRAMe<fr>:MTPDuration? 2031
SBUS<sb>:SENT:FRAMe<fr>:PAPTicks? 2033
SBUS<sb>:SENT:FRAMe<fr>:SCOM? 2033
SBUS<sb>:SENT:FRAMe<fr>:SDATa? 2034
SBUS<sb>:SENT:FRAMe<fr>:SENSor? 2034
SBUS<sb>:SENT:FRAMe<fr>:STARt? 2034
SBUS<sb>:SENT:FRAMe<fr>:STATus? 2035
SBUS<sb>:SENT:FRAMe<fr>:STOP? 2035
SBUS<sb>:SENT:FRAMe<fr>:SYMBol? 2036
SBUS<sb>:SENT:FRAMe<fr>:SYNCduration? 2036
SBUS<sb>:SENT:FRAMe<fr>:TYPE? 2036
SBUS<sb>:SENT:MODE 2004
SBUS<sb>:SENT:POSition 2004
SBUS<sb>:SENT:PPFLength 2005
SBUS<sb>:SENT:PPULse 2005
SBUS<sb>:SENT:RDSL 2005
SBUS<sb>:SENT:SCALe 2006
SBUS<sb>:SENT:SFORmat 2006
SBUS<sb>:SENT:SWTindex? 2006
SBUS<sb>:SENT:SWTindex? 2027

SBUS<sb>:SENT:SWTTime?....2007
SBUS<sb>:SENT:SWTTime?....2028
SBUS<sb>:SPI:BORDer....1569
SBUS<sb>:SPI:CSELect:HYSTeresis....1570
SBUS<sb>:SPI:CSELect:POLarity....1570
SBUS<sb>:SPI:CSELect:SOURce....1570
SBUS<sb>:SPI:CSELect:THReshold....1571
SBUS<sb>:SPI:FCOunt?....1599
SBUS<sb>:SPI:FILTer:BIT....1577
SBUS<sb>:SPI:FILTer:CHKall....1576
SBUS<sb>:SPI:FILTer:CLR....1577
SBUS<sb>:SPI:FILTer:DMAX....1578
SBUS<sb>:SPI:FILTer:DMIN....1578
SBUS<sb>:SPI:FILTer:DOPerator....1578
SBUS<sb>:SPI:FILTer:ERENable....1579
SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle....1579
SBUS<sb>:SPI:FILTer:FIENable....1579
SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle....1579
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT....1577
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1578
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1578
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1578
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1579
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1580
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1580
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1581
SBUS<sb>:SPI:FILTer:FRENable....1579
SBUS<sb>:SPI:FILTer:IMAX....1580
SBUS<sb>:SPI:FILTer:IMIN....1580
SBUS<sb>:SPI:FILTer:INVert....1577
SBUS<sb>:SPI:FILTer:IOPerator....1581
SBUS<sb>:SPI:FILTer:RST....1577
SBUS<sb>:SPI:FORMat:ADDFrame....1582
SBUS<sb>:SPI:FORMat:CLR....1583
SBUS<sb>:SPI:FORMat:FCOunt?....1583
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ADDField....1583
SBUS<sb>:SPI:FORMat:FRAMe<fr>:COLor....1584
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1589
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1587
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1588
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:COLor....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1590
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1589
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1588
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1587
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:NAME....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARA....1591
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARB....1591
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1587
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1590

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLDCount?....1583
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Field....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Value....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Field....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Value....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Field....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Value....1586
SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENCheck....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:LENValue....1585
SBUS<sb>:SPI:FORMat:FRAMe<fr>:NAME....1584
SBUS<sb>:SPI:FORMat:FRAMe<fr>:TYPE....1584
SBUS<sb>:SPI:FORMat:LOAD....1582
SBUS<sb>:SPI:FORMat:SAVE....1582
SBUS<sb>:SPI:FORMat:SELect....1582
SBUS<sb>:SPI:FRAMe<fr>:BITRate?....1599
SBUS<sb>:SPI:FRAMe<fr>:DATA?....1599
SBUS<sb>:SPI:FRAMe<fr>:STARt?....1600
SBUS<sb>:SPI:FRAMe<fr>:STATus?....1600
SBUS<sb>:SPI:FRAMe<fr>:STOP?....1601
SBUS<sb>:SPI:FRAMe<fr>:WCOunt?....1601
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo?....1601
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi?....1601
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO?....1602
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI?....1602
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STARt?....1602
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP?....1603
SBUS<sb>:SPI:FRCondition....1569
SBUS<sb>:SPI:MISO:HYSTeresis....1571
SBUS<sb>:SPI:MISO:POLarity....1571
SBUS<sb>:SPI:MISO:POSition....1575
SBUS<sb>:SPI:MISO:SCALe....1575
SBUS<sb>:SPI:MISO:SOURce....1571
SBUS<sb>:SPI:MISO:THReshold....1572
SBUS<sb>:SPI:MOSI:HYSTeresis....1572
SBUS<sb>:SPI:MOSI:POLarity....1572
SBUS<sb>:SPI:MOSI:POSition....1575
SBUS<sb>:SPI:MOSI:SCALe....1575
SBUS<sb>:SPI:MOSI:SOURce....1573
SBUS<sb>:SPI:MOSI:THReshold....1573
SBUS<sb>:SPI:SCLK:HYSTeresis....1573
SBUS<sb>:SPI:SCLK:SOURce....1573
SBUS<sb>:SPI:SCLK:THReshold....1574
SBUS<sb>:SPI:SWTindex?....1598
SBUS<sb>:SPI:SWTTime?....1598
SBUS<sb>:SPI:TIMeout....1574
SBUS<sb>:SPI:WSIZe....1574
SBUS<sb>:SPMI:FCOunt?....2148
SBUS<sb>:SPMI:FILTer:BIT....2128
SBUS<sb>:SPMI:FILTer:CHKall....2127
SBUS<sb>:SPMI:FILTer:CLR....2128

SBUS<sb>:SPMI:FILTer:DMAX....2129
SBUS<sb>:SPMI:FILTer:DMIN....2129
SBUS<sb>:SPMI:FILTer:DOPerator....2129
SBUS<sb>:SPMI:FILTer:ERENable....2130
SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle....2130
SBUS<sb>:SPMI:FILTer:FIENable....2132
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle....2131
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT....2128
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2129
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2132
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2131
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2131
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2130
SBUS<sb>:SPMI:FILTer:FRENable....2131
SBUS<sb>:SPMI:FILTer:IMAX....2131
SBUS<sb>:SPMI:FILTer:IMIN....2131
SBUS<sb>:SPMI:FILTer:INVert....2128
SBUS<sb>:SPMI:FILTer:IOPerator....2130
SBUS<sb>:SPMI:FILTer:RST....2128
SBUS<sb>:SPMI:FORMat:ADDFrame....2133
SBUS<sb>:SPMI:FORMat:CLR....2134
SBUS<sb>:SPMI:FORMat:FCOunt?....2134
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ADDField....2134
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:COLor....2135
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2140
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2138
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2139
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:COLor....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2141
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2141
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2139
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2138
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:NAME....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARA....2142
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARB....2142
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2139
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2141
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLDCount?....2135
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Field....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Value....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Field....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Value....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Field....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Value....2137
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENCheck....2136
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:LENValue....2136
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:NAME....2135
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:TYPE....2136

SBUS<sb>:SPMI:FORMat:LOAD....2133
SBUS<sb>:SPMI:FORMat:SAVE....2134
SBUS<sb>:SPMI:FORMat:SELect....2133
SBUS<sb>:SPMI:FRAMe<fr>:ADDRess?....2149
SBUS<sb>:SPMI:FRAMe<fr>:BC?....2149
SBUS<sb>:SPMI:FRAMe<fr>:DATA?....2149
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:FVALue?....2150
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:LABel?....2150
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:STATe?....2150
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:VALue?....2151
SBUS<sb>:SPMI:FRAMe<fr>:FLDCount?....2149
SBUS<sb>:SPMI:FRAMe<fr>:RBRate?....2151
SBUS<sb>:SPMI:FRAMe<fr>:SA?....2151
SBUS<sb>:SPMI:FRAMe<fr>:STARt?....2152
SBUS<sb>:SPMI:FRAMe<fr>:STATus?....2152
SBUS<sb>:SPMI:FRAMe<fr>:STOP?....2152
SBUS<sb>:SPMI:FRAMe<fr>:SYMBol?....2154
SBUS<sb>:SPMI:FRAMe<fr>:TYPE?....2153
SBUS<sb>:SPMI:FRAMe<fr>:WBRate?....2153
SBUS<sb>:SPMI:GIDValue....2123
SBUS<sb>:SPMI:GSIDenable....2123
SBUS<sb>:SPMI:GTCHenable....2124
SBUS<sb>:SPMI:GTWDith....2124
SBUS<sb>:SPMI:POSition....2126
SBUS<sb>:SPMI:SCALe....2126
SBUS<sb>:SPMI:SCLK:HYSTeresis....2124
SBUS<sb>:SPMI:SCLK:SOURce....2125
SBUS<sb>:SPMI:SCLK:THReshold....2125
SBUS<sb>:SPMI:SDATa:HYSTeresis....2125
SBUS<sb>:SPMI:SDATa:SOURce....2125
SBUS<sb>:SPMI:SDATa:THReshold....2126
SBUS<sb>:SPMI:SWTindex?....2147
SBUS<sb>:SPMI:SWTTime?....2148
SBUS<sb>:SWIRe:DATA:HYSTeresis....2096
SBUS<sb>:SWIRe:DATA:SOURce....2095
SBUS<sb>:SWIRe:DATA:THReshold....2096
SBUS<sb>:SWIRe:FCOunt?....2116
SBUS<sb>:SWIRe:FILTer:BIT....2099
SBUS<sb>:SWIRe:FILTer:CHKall....2098
SBUS<sb>:SWIRe:FILTer:CLR....2098
SBUS<sb>:SWIRe:FILTer:DMAX....2100
SBUS<sb>:SWIRe:FILTer:DMIN....2100
SBUS<sb>:SWIRe:FILTer:DOPerator....2100
SBUS<sb>:SWIRe:FILTer:ERENable....2099
SBUS<sb>:SWIRe:FILTer:ERRor<n>:ENABle....2099
SBUS<sb>:SWIRe:FILTer:FIENable....2101
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:ENABle....2101
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:BIT....2099
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2100
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2100

SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2100
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2101
SBUS<sb>:SWIRe:FILTer:FRENable....2101
SBUS<sb>:SWIRe:FILTer:INVert....2098
SBUS<sb>:SWIRe:FILTer:RST....2099
SBUS<sb>:SWIRe:FORMat:ADDFrame....2103
SBUS<sb>:SWIRe:FORMat:CLR....2103
SBUS<sb>:SWIRe:FORMat:FCOunt?....2104
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ADDField....2104
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:COLor....2105
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2109
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2108
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2108
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:COLor....2107
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2110
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2110
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2109
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2107
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:NAME....2107
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARA....2111
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARB....2111
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2108
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2111
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLDCount?....2104
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Field....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Value....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Field....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Field....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENCheck....2105
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:LENValue....2106
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:NAME....2104
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:TYPE....2105
SBUS<sb>:SWIRe:FORMat:LOAD....2103
SBUS<sb>:SWIRe:FORMat:SAVE....2103
SBUS<sb>:SWIRe:FORMat:SELect....2102
SBUS<sb>:SWIRe:FRAMe<fr>:BITRate?....2117
SBUS<sb>:SWIRe:FRAMe<fr>:CODParity?....2117
SBUS<sb>:SWIRe:FRAMe<fr>:DATA?....2117
SBUS<sb>:SWIRe:FRAMe<fr>:DATParity?....2118
SBUS<sb>:SWIRe:FRAMe<fr>:ESCParity?....2119
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:FVALue?....2120
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:STATus?....2119
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:TYPE?....2120
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:VALue?....2120
SBUS<sb>:SWIRe:FRAMe<fr>:STARt?....2121
SBUS<sb>:SWIRe:FRAMe<fr>:STATe?....2121
SBUS<sb>:SWIRe:FRAMe<fr>:STOP?....2122
SBUS<sb>:SWIRe:FRAMe<fr>:TYPE?....2122

SBUS<sb>:SWIRe:MGAP ... 2097
SBUS<sb>:SWIRe:MINGap ... 2097
SBUS<sb>:SWIRe:POSition ... 2097
SBUS<sb>:SWIRe:SCALe ... 2097
SBUS<sb>:SWIRe:STRBe:HYSTeresis ... 2096
SBUS<sb>:SWIRe:STRBe:SOURce ... 2095
SBUS<sb>:SWIRe:STRBe:THReshold ... 2096
SBUS<sb>:SWIRe:SWTindex? ... 2115
SBUS<sb>:SWIRe:SWTTime? ... 2116
SBUS<sb>:TBTO:FCOunt? ... 2274
SBUS<sb>:TBTO:FILTer:BIT ... 2253
SBUS<sb>:TBTO:FILTer:CHKall ... 2252
SBUS<sb>:TBTO:FILTer:CLR ... 2253
SBUS<sb>:TBTO:FILTer:DMAX ... 2254
SBUS<sb>:TBTO:FILTer:DMIN ... 2254
SBUS<sb>:TBTO:FILTer:DOPerator ... 2254
SBUS<sb>:TBTO:FILTer:ERENable ... 2255
SBUS<sb>:TBTO:FILTer:ERRor<n>:ENABle ... 2255
SBUS<sb>:TBTO:FILTer:FIENable ... 2255
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:ENABle ... 2256
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 2253
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 2254
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 2255
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 2256
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 2256
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 2257
SBUS<sb>:TBTO:FILTer:FRENable ... 2256
SBUS<sb>:TBTO:FILTer:IMAX ... 2256
SBUS<sb>:TBTO:FILTer:IMIN ... 2256
SBUS<sb>:TBTO:FILTer:INVert ... 2253
SBUS<sb>:TBTO:FILTer:IOPerator ... 2257
SBUS<sb>:TBTO:FILTer:RST ... 2253
SBUS<sb>:TBTO:FORMat:ADDFrame ... 2258
SBUS<sb>:TBTO:FORMat:CLR ... 2259
SBUS<sb>:TBTO:FORMat:FCOunt? ... 2259
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ADDField ... 2259
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor ... 2260
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2266
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2264
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2265
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2267
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2266
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2265
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2264
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2267
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2267

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2264
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2267
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLDCount?....2260
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Field....2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Value....2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Field....2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Value....2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Field....2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Value....2263
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENCheck....2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:LENValue....2262
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:NAME....2260
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:TYPE....2261
SBUS<sb>:TBTO:FORMat:LOAD....2258
SBUS<sb>:TBTO:FORMat:SAVE....2259
SBUS<sb>:TBTO:FORMat:SELect....2258
SBUS<sb>:TBTO:FRAMe<fr>:BITRate?....2275
SBUS<sb>:TBTO:FRAMe<fr>:CRC?....2277
SBUS<sb>:TBTO:FRAMe<fr>:DATA?....2277
SBUS<sb>:TBTO:FRAMe<fr>:DTADdress?....2277
SBUS<sb>:TBTO:FRAMe<fr>:DTSYmbol?....2278
SBUS<sb>:TBTO:FRAMe<fr>:FCRC?....2278
SBUS<sb>:TBTO:FRAMe<fr>:FDATa?....2278
SBUS<sb>:TBTO:FRAMe<fr>:FDTaddress?....2278
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:FVALue?....2275
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:LABel?....2275
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:STATe?....2276
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:VALue?....2276
SBUS<sb>:TBTO:FRAMe<fr>:FLDCount?....2274
SBUS<sb>:TBTO:FRAMe<fr>:FSRaddress?....2279
SBUS<sb>:TBTO:FRAMe<fr>:FTPLenth?....2279
SBUS<sb>:TBTO:FRAMe<fr>:SRADdress?....2279
SBUS<sb>:TBTO:FRAMe<fr>:SRSYmbol?....2279
SBUS<sb>:TBTO:FRAMe<fr>:STARt?....2280
SBUS<sb>:TBTO:FRAMe<fr>:STATus?....2280
SBUS<sb>:TBTO:FRAMe<fr>:STOP?....2281
SBUS<sb>:TBTO:FRAMe<fr>:TPLenth?....2281
SBUS<sb>:TBTO:FRAMe<fr>:TYPE?....2281
SBUS<sb>:TBTO:MODE....2250
SBUS<sb>:TBTO:POLarity....2250
SBUS<sb>:TBTO:POSition....2250
SBUS<sb>:TBTO:SCALe....2251
SBUS<sb>:TBTO:SRCMinus....2251
SBUS<sb>:TBTO:SRCPlus....2251
SBUS<sb>:TBTO:SWTindex?....2273
SBUS<sb>:TBTO:SWTTime?....2273
SBUS<sb>:THReshold....1566
SBUS<sb>:TNOS:FCOunt?....2211
SBUS<sb>:TNOS:FILTer:BIT....2190
SBUS<sb>:TNOS:FILTer:CHKall....2189

SBUS<sb>:TNOS:FILTer:CLR....2189
SBUS<sb>:TNOS:FILTer:DMAX....2190
SBUS<sb>:TNOS:FILTer:DMIN....2191
SBUS<sb>:TNOS:FILTer:DOPerator....2191
SBUS<sb>:TNOS:FILTer:ERENable....2191
SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABle....2191
SBUS<sb>:TNOS:FILTer:FIENable....2192
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABle....2193
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT....2190
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2190
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2191
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2191
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2192
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2192
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2193
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2193
SBUS<sb>:TNOS:FILTer:FRENable....2193
SBUS<sb>:TNOS:FILTer:IMAX....2192
SBUS<sb>:TNOS:FILTer:IMIN....2193
SBUS<sb>:TNOS:FILTer:INVert....2190
SBUS<sb>:TNOS:FILTer:IOPerator....2193
SBUS<sb>:TNOS:FILTer:RST....2189
SBUS<sb>:TNOS:FORMat:ADDFrame....2195
SBUS<sb>:TNOS:FORMat:CLR....2196
SBUS<sb>:TNOS:FORMat:FCOunt?....2196
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ADDField....2196
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:COLor....2197
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2202
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2200
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2201
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:COLor....2199
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2203
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2202
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2201
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2199
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:NAME....2199
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARA....2203
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARB....2203
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2200
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2203
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLDCount?....2196
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Field....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Value....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Field....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Value....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Field....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Value....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENCheck....2197
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:LENValue....2198
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:NAME....2197

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:TYPE....2197
SBUS<sb>:TNOS:FORMat:LOAD....2195
SBUS<sb>:TNOS:FORMat:SAVE....2195
SBUS<sb>:TNOS:FORMat:SELect....2194
SBUS<sb>:TNOS:FRAMe<fr>:BITRate?....2211
SBUS<sb>:TNOS:FRAMe<fr>:CRC?....2213
SBUS<sb>:TNOS:FRAMe<fr>:DATA?....2214
SBUS<sb>:TNOS:FRAMe<fr>:DTADdress?....2214
SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol?....2214
SBUS<sb>:TNOS:FRAMe<fr>:FCRC?....2214
SBUS<sb>:TNOS:FRAMe<fr>:FDATa?....2215
SBUS<sb>:TNOS:FRAMe<fr>:FDTaddress?....2215
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:FVALue?....2212
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:LABel?....2212
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:STATe?....2212
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:VALue?....2213
SBUS<sb>:TNOS:FRAMe<fr>:FLDCount?....2211
SBUS<sb>:TNOS:FRAMe<fr>:FSRaddress?....2215
SBUS<sb>:TNOS:FRAMe<fr>:FTPLenth?....2216
SBUS<sb>:TNOS:FRAMe<fr>:SRADdress?....2216
SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol?....2216
SBUS<sb>:TNOS:FRAMe<fr>:STARt?....2216
SBUS<sb>:TNOS:FRAMe<fr>:STATus?....2217
SBUS<sb>:TNOS:FRAMe<fr>:STOP?....2218
SBUS<sb>:TNOS:FRAMe<fr>:TPLenth?....2218
SBUS<sb>:TNOS:FRAMe<fr>:TYPE?....2218
SBUS<sb>:TNOS:POSition....2187
SBUS<sb>:TNOS:SCALe....2187
SBUS<sb>:TNOS:SOURce....2187
SBUS<sb>:TNOS:SWTindex?....2210
SBUS<sb>:TNOS:SWTTime?....2210
SBUS<sb>:TNOS:THReshold:HYSTeresis....2188
SBUS<sb>:TNOS:THReshold:LOWer....2187
SBUS<sb>:TNOS:THReshold:UPPer....2188
SBUS<sb>:TYPE....1564
SBUS<sb>:UART:BITRate....1772
SBUS<sb>:UART:BORDer....1772
SBUS<sb>:UART:FILTer:BIT....1781
SBUS<sb>:UART:FILTer:CHKall....1778
SBUS<sb>:UART:FILTer:CLR....1778
SBUS<sb>:UART:FILTer:DMAX....1781
SBUS<sb>:UART:FILTer:DMIN....1780
SBUS<sb>:UART:FILTer:DOPerator....1780
SBUS<sb>:UART:FILTer:ERENable....1780
SBUS<sb>:UART:FILTer:ERRor<n>:ENABle....1780
SBUS<sb>:UART:FILTer:FIENable....1782
SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle....1782
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT....1781
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1781
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1780

SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1780
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1782
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1779
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1779
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1779
SBUS<sb>:UART:FILTer:FRENable ... 1782
SBUS<sb>:UART:FILTer:IMAX ... 1779
SBUS<sb>:UART:FILTer:IMIN ... 1779
SBUS<sb>:UART:FILTer:INVert ... 1778
SBUS<sb>:UART:FILTer:IOPerator ... 1779
SBUS<sb>:UART:FILTer:RST ... 1778
SBUS<sb>:UART:FORMat:ADDFrame ... 1783
SBUS<sb>:UART:FORMat:CLR ... 1784
SBUS<sb>:UART:FORMat:FCOunt? ... 1784
SBUS<sb>:UART:FORMat:FRAMe<fr>:ADDField ... 1785
SBUS<sb>:UART:FORMat:FRAMe<fr>:COLor ... 1785
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1790
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1788
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1789
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1788
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1791
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1790
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1790
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1788
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1792
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1792
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1789
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1791
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLDCount? ... 1785
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Field ... 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Value ... 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Field ... 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Value ... 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Field ... 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Value ... 1787
SBUS<sb>:UART:FORMat:FRAMe<fr>:LENCheck ... 1786
SBUS<sb>:UART:FORMat:FRAMe<fr>:LENValue ... 1786
SBUS<sb>:UART:FORMat:FRAMe<fr>:NAME ... 1785
SBUS<sb>:UART:FORMat:FRAMe<fr>:TYPE ... 1786
SBUS<sb>:UART:FORMat:LOAD ... 1784
SBUS<sb>:UART:FORMat:SAVE ... 1784
SBUS<sb>:UART:FORMat:SELect ... 1783
SBUS<sb>:UART:PACKets ... 1772
SBUS<sb>:UART:PARity ... 1773
SBUS<sb>:UART:POLarity ... 1773
SBUS<sb>:UART:RX:HYSTeresis ... 1773
SBUS<sb>:UART:RX:POSition ... 1776
SBUS<sb>:UART:RX:SCALe ... 1776
SBUS<sb>:UART:RX:SOURce ... 1774

SBUS<sb>:UART:RX:THReshold....1774
SBUS<sb>:UART:SBIT....1774
SBUS<sb>:UART:SSIZe....1775
SBUS<sb>:UART:SWTindex?....1799
SBUS<sb>:UART:SWTTime?....1799
SBUS<sb>:UART:TOUT....1775
SBUS<sb>:UART:TX:HYSTeresis....1775
SBUS<sb>:UART:TX:POSition....1776
SBUS<sb>:UART:TX:SCALe....1777
SBUS<sb>:UART:TX:SOURce....1775
SBUS<sb>:UART:TX:THReshold....1776
SBUS<sb>:UART:WCOunt?....1800
SBUS<sb>:UART:WORD<w>:BITRate?....1800
SBUS<sb>:UART:WORD<w>:FLD<fl>:FVALue?....1804
SBUS<sb>:UART:WORD<w>:FLD<fl>:LABel?....1803
SBUS<sb>:UART:WORD<w>:FLD<fl>:STATe?....1801
SBUS<sb>:UART:WORD<w>:FLD<fl>:VALue?....1803
SBUS<sb>:UART:WORD<w>:FLDCount?....1800
SBUS<sb>:UART:WORD<w>:RXValue?....1801
SBUS<sb>:UART:WORD<w>:SOURce?....1802
SBUS<sb>:UART:WORD<w>:STARt?....1802
SBUS<sb>:UART:WORD<w>:STATe?....1803
SBUS<sb>:UART:WORD<w>:STOP?....1802
SBUS<sb>:UART:WORD<w>:TXValue?....1801
SBUS<sb>:USBHspeed:FCOunt?....2338
SBUS<sb>:USBHspeed:FILTer:BIT....2320
SBUS<sb>:USBHspeed:FILTer:CHKall....2316
SBUS<sb>:USBHspeed:FILTer:CLR....2316
SBUS<sb>:USBHspeed:FILTer:DMAX....2317
SBUS<sb>:USBHspeed:FILTer:DMIN....2318
SBUS<sb>:USBHspeed:FILTer:DOPerator....2318
SBUS<sb>:USBHspeed:FILTer:ERENable....2319
SBUS<sb>:USBHspeed:FILTer:ERRor<n>:ENABle....2319
SBUS<sb>:USBHspeed:FILTer:FIENable....2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:ENABle....2317
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:BIT....2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2317
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2318
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2318
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2320
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2319
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2319
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2320
SBUS<sb>:USBHspeed:FILTer:FRENable....2317
SBUS<sb>:USBHspeed:FILTer:IMAX....2319
SBUS<sb>:USBHspeed:FILTer:IMIN....2319
SBUS<sb>:USBHspeed:FILTer:INVert....2317
SBUS<sb>:USBHspeed:FILTer:IOPerator....2320
SBUS<sb>:USBHspeed:FILTer:RST....2317
SBUS<sb>:USBHspeed:FORMat:ADDFrame....2322

SBUS<sb>:USBHspeed:FORMat:CLR....2323
SBUS<sb>:USBHspeed:FORMat:FCOunt?....2323
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ADDField....2323
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:COLor....2324
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2329
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2328
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2328
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:COLor....2327
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2330
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2330
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2329
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2327
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:NAME....2327
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARA....2331
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARB....2331
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2328
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2331
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLDCount?....2323
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Field....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Value....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Field....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Value....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Field....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Value....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENCheck....2325
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:LENValue....2326
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:NAME....2324
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:TYPE....2324
SBUS<sb>:USBHspeed:FORMat:LOAD....2322
SBUS<sb>:USBHspeed:FORMat:SAVE....2322
SBUS<sb>:USBHspeed:FORMat:SELect....2322
SBUS<sb>:USBHspeed:FRAMe<fr>:ADDRess?....2338
SBUS<sb>:USBHspeed:FRAMe<fr>:BITRate?....2339
SBUS<sb>:USBHspeed:FRAMe<fr>:CRC?....2343
SBUS<sb>:USBHspeed:FRAMe<fr>:DATA?....2339
SBUS<sb>:USBHspeed:FRAMe<fr>:ENDPoint?....2343
SBUS<sb>:USBHspeed:FRAMe<fr>:FADDress?....2343
SBUS<sb>:USBHspeed:FRAMe<fr>:FCRC?....2343
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:FVALue?....2341
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:LABel?....2341
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:STATe?....2341
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:VALue?....2342
SBUS<sb>:USBHspeed:FRAMe<fr>:FLDCount?....2339
SBUS<sb>:USBHspeed:FRAMe<fr>:FRNumber?....2344
SBUS<sb>:USBHspeed:FRAMe<fr>:PID?....2344
SBUS<sb>:USBHspeed:FRAMe<fr>:PIDName?....2344
SBUS<sb>:USBHspeed:FRAMe<fr>:SPET?....2345
SBUS<sb>:USBHspeed:FRAMe<fr>:SPEU?....2346
SBUS<sb>:USBHspeed:FRAMe<fr>:SPPort?....2346
SBUS<sb>:USBHspeed:FRAMe<fr>:SPS?....2346

SBUS<sb>:USBHspeed:FRAMe<fr>:SPSC? 2347
SBUS<sb>:USBHspeed:FRAMe<fr>:STARt? 2340
SBUS<sb>:USBHspeed:FRAMe<fr>:STATus? 2340
SBUS<sb>:USBHspeed:FRAMe<fr>:STOP? 2341
SBUS<sb>:USBHspeed:FRAMe<fr>:TYPE? 2345
SBUS<sb>:USBHspeed:POSition 2315
SBUS<sb>:USBHspeed:SCALe 2315
SBUS<sb>:USBHspeed:SOURce 2314
SBUS<sb>:USBHspeed:SWTindex? 2337
SBUS<sb>:USBHspeed:SWTTime? 2337
SBUS<sb>:USBHspeed:THReshold:HYSTeresis 2315
SBUS<sb>:USBHspeed:THReshold:LOWer 2314
SBUS<sb>:USBHspeed:THReshold:UPPer 2314
SBUS<sb>:USBone:DMINus:HYSTeresis 2284
SBUS<sb>:USBone:DMINus:SOURce 2283
SBUS<sb>:USBone:DMINus:THReshold 2284
SBUS<sb>:USBone:DPLus:HYSTeresis 2284
SBUS<sb>:USBone:DPLus:SOURce 2283
SBUS<sb>:USBone:DPLus:THReshold 2283
SBUS<sb>:USBone:FCOunt? 2307
SBUS<sb>:USBone:FILTer:BIT 2290
SBUS<sb>:USBone:FILTer:CHKall 2286
SBUS<sb>:USBone:FILTer:CLR 2286
SBUS<sb>:USBone:FILTer:DMAX 2287
SBUS<sb>:USBone:FILTer:DMIN 2287
SBUS<sb>:USBone:FILTer:DOPerator 2288
SBUS<sb>:USBone:FILTer:ERENable 2288
SBUS<sb>:USBone:FILTer:ERRor<n>:ENABle 2288
SBUS<sb>:USBone:FILTer:FIENable 2290
SBUS<sb>:USBone:FILTer:FRAMe<fr>:ENABle 2287
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:BIT 2290
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2287
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2287
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2288
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2290
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2288
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2289
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2289
SBUS<sb>:USBone:FILTer:FRENable 2287
SBUS<sb>:USBone:FILTer:IMAX 2288
SBUS<sb>:USBone:FILTer:IMIN 2289
SBUS<sb>:USBone:FILTer:INVert 2286
SBUS<sb>:USBone:FILTer:IOPerator 2289
SBUS<sb>:USBone:FILTer:RST 2286
SBUS<sb>:USBone:FORMat:ADDFrame 2291
SBUS<sb>:USBone:FORMat:CLR 2292
SBUS<sb>:USBone:FORMat:FCOunt? 2292
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ADDField 2293
SBUS<sb>:USBone:FORMat:FRAMe<fr>:COLor 2293
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 2298

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2296
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2297
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:COLor....2296
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2299
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2299
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2298
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2296
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:NAME....2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARA....2300
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARB....2300
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2297
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2299
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLDCount?....2293
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Field....2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Value....2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Field....2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Value....2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Field....2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Value....2295
SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENCheck....2294
SBUS<sb>:USBone:FORMat:FRAMe<fr>:LENValue....2294
SBUS<sb>:USBone:FORMat:FRAMe<fr>:NAME....2293
SBUS<sb>:USBone:FORMat:FRAMe<fr>:TYPE....2294
SBUS<sb>:USBone:FORMat:LOAD....2292
SBUS<sb>:USBone:FORMat:SAVE....2292
SBUS<sb>:USBone:FORMat:SELect....2291
SBUS<sb>:USBone:FRAMe<fr>:ADDRess?....2307
SBUS<sb>:USBone:FRAMe<fr>:BITRate?....2307
SBUS<sb>:USBone:FRAMe<fr>:CRC?....2311
SBUS<sb>:USBone:FRAMe<fr>:DATA?....2308
SBUS<sb>:USBone:FRAMe<fr>:ENDPoint?....2312
SBUS<sb>:USBone:FRAMe<fr>:FADDress?....2311
SBUS<sb>:USBone:FRAMe<fr>:FCRC?....2312
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:FVALue?....2309
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:LABel?....2310
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:STATe?....2310
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:VALue?....2311
SBUS<sb>:USBone:FRAMe<fr>:FLDCount?....2307
SBUS<sb>:USBone:FRAMe<fr>:FRNumber?....2312
SBUS<sb>:USBone:FRAMe<fr>:PID?....2313
SBUS<sb>:USBone:FRAMe<fr>:PIDName?....2313
SBUS<sb>:USBone:FRAMe<fr>:STARt?....2308
SBUS<sb>:USBone:FRAMe<fr>:STATus?....2308
SBUS<sb>:USBone:FRAMe<fr>:STOP?....2309
SBUS<sb>:USBone:FRAMe<fr>:TYPE?....2313
SBUS<sb>:USBone:MODE....2283
SBUS<sb>:USBone:POSition....2284
SBUS<sb>:USBone:SCALe....2285
SBUS<sb>:USBone:SWTindex?....2305
SBUS<sb>:USBone:SWTTime?....2306

SBUS<sb>:ZCOupling....1566
SBUS<sb>[:STATe]....1564
SENSe[:ROSCillator]:OUTPut:FREQuency?....1179
SENSe[:ROSCillator]:OUTPut[:ENABle]....1179
SENSe[:ROSCillator]:SOURce....1179
SERVice:REPort....1133
SESSion:LOAD[:EXECute]....1291
SESSion:SAVE:ABORt....1291
SESSion:SAVE:CHANnel....1291
SESSion:SAVE:REFerence....1292
SESSion:SAVE[:EXECute]....1292
SESSion:USERpref....1292
SIGNalconfig:SETup:ADD....1223
SIGNalconfig:SETup:COUNt?....1226
SIGNalconfig:SETup:LIST?....1226
SIGNalconfig:SETup:PAMorder....1225
SIGNalconfig:SETup:REMove....1224
SIGNalconfig:SETup:SERStandard....1225
SIGNalconfig:SETup:SOURce....1224
SIGNalconfig:SETup:SREStimation....1226
SIGNalconfig:SETup:SYMBolrate....1225
SIGNalconfig:SETup:TECHnology....1224
SINGle....1134
STATus:OPERation:CONDition?....2386
STATus:OPERation:ENABle....2387
STATus:OPERation:NTRansition....2387
STATus:OPERation:PTRansition....2388
STATus:OPERation[:EVENt]?....2387
STATus:PRESet....2386
STATus:QUEStionable:ADCState:CONDition?....2390
STATus:QUEStionable:ADCState:ENABle....2391
STATus:QUEStionable:ADCState:NTRansition....2392
STATus:QUEStionable:ADCState:PTRansition....2393
STATus:QUEStionable:ADCState[:EVENt]?....2391
STATus:QUEStionable:COVerload:CONDition?....2390
STATus:QUEStionable:COVerload:ENABle....2391
STATus:QUEStionable:COVerload:NTRansition....2392
STATus:QUEStionable:COVerload:PTRansition....2393
STATus:QUEStionable:COVerload[:EVENt]?....2391
STATus:QUEStionable:GOVerload:CONDition?....2390
STATus:QUEStionable:GOVerload:ENABle....2391
STATus:QUEStionable:GOVerload:NTRansition....2392
STATus:QUEStionable:GOVerload:PTRansition....2393
STATus:QUEStionable:GOVerload[:EVENt]?....2391
STATus:QUEStionable:IMPRecise:CONDition?....2390
STATus:QUEStionable:IMPRecise:ENABle....2391
STATus:QUEStionable:IMPRecise:NTRansition....2392
STATus:QUEStionable:IMPRecise:PTRansition....2393
STATus:QUEStionable:IMPRecise[:EVENt]?....2391
STATus:QUEStionable:LIMit:CONDition?....2390

STATus:QUEStionable:LIMit:ENABle ... 2391
STATus:QUEStionable:LIMit:NTRansition ... 2392
STATus:QUEStionable:LIMit:PTRansition ... 2393
STATus:QUEStionable:LIMit[:EVENt]? ... 2391
STATus:QUEStionable:MASK:CONDition? ... 2390
STATus:QUEStionable:MASK:ENABle ... 2391
STATus:QUEStionable:MASK:NTRansition ... 2392
STATus:QUEStionable:MASK:PTRansition ... 2393
STATus:QUEStionable:MASK[:EVENt]? ... 2390
STATus:QUEStionable:PLL:CONDition? ... 2390
STATus:QUEStionable:PLL:ENABle ... 2391
STATus:QUEStionable:PLL:NTRansition ... 2392
STATus:QUEStionable:PLL:PTRansition ... 2393
STATus:QUEStionable:PLL:RCONdition ... 2393
STATus:QUEStionable:PLL[:EVENt]? ... 2391
STATus:QUEStionable:PPSupply:CONDition? ... 2390
STATus:QUEStionable:PPSupply:ENABle ... 2391
STATus:QUEStionable:PPSupply:NTRansition ... 2392
STATus:QUEStionable:PPSupply:PTRansition ... 2393
STATus:QUEStionable:PPSupply[:EVENt]? ... 2391
STATus:QUEStionable:TEMPerature:CONDition? ... 2390
STATus:QUEStionable:TEMPerature:ENABle ... 2391
STATus:QUEStionable:TEMPerature:NTRansition ... 2392
STATus:QUEStionable:TEMPerature:PTRansition ... 2393
STATus:QUEStionable:TEMPerature[:EVENt]? ... 2391
STOP ... 1134
SYNChronize:DEVice<m>:COMMunicate:NET[:HOSTname] ... 2380
SYNChronize:DEVice<m>:CONNect ... 2380
SYNChronize:DEVice<m>:LOADall ... 2382
SYNChronize:DEVice<m>:NAME ... 2381
SYNChronize:DEVice<m>:SKEW:AUTO ... 2381
SYNChronize:DEVice<m>:SKEW[:VALue] ... 2381
SYNChronize:DEVice<m>[:ENABle] ... 2382
SYNChronize:DISConnect ... 2382
SYNChronize:DISPlay ... 2382
SYNChronize:LOAD:ABORt ... 2382
SYNChronize:LOAD:ALL ... 2383
SYNChronize:LOAD:SESSion ... 2383
SYNChronize:LOAD[:WAVeform] ... 2383
SYNChronize:LOCKcontrols ... 2383
SYNChronize:RECLensync ... 2384
SYNChronize:SRATesync ... 2384
SYNChronize:TIMebasesync ... 2384
SYNChronize:VERTicalsync ... 2384
SYSTem:APUP ... 1134
SYSTem:COMMunicate:NET[:HOSTname] ... 1096
SYSTem:DATE ... 1097
SYSTem:DISPlay:MESSage:STATe ... 1095
SYSTem:DISPlay:MESSage[:TEXT] ... 1096
SYSTem:DISPlay:UPDate ... 1095

SYSTem:EXIT....1097
SYSTem:FW:FILepath....1097
SYSTem:FW:STARt....1098
SYSTem:PRESet....1097
SYSTem:SHUTdown....1098
SYSTem:TIME....1098
TIMebase:DIVisions?....1136
TIMebase:HORizontal:POSition....1136
TIMebase:RANGe....1135
TIMebase:REFerence....1136
TIMebase:ROLL:ENABle....1137
TIMebase:ROLL:MTIMe....1137
TIMebase:ROLL:STATe?....1138
TIMebase:SCALe....1135
TREFerence<m>:CDR:SOFTware:ALGorithm....1240
TREFerence<m>:CDR:SOFTware:BWIDth....1241
TREFerence<m>:CDR:SOFTware:CFRequency:CRSYnc....1241
TREFerence<m>:CDR:SOFTware:PLL:DAMPing....1241
TREFerence<m>:CDR:SOFTware:PLL:ORDer....1242
TREFerence<m>:CDR:SOFTware:PLL:SYNC....1242
TREFerence<m>:CDR:SOFTware:RELBwidth....1243
TREFerence<m>:CDR:SOFTware:SELResults....1243
TREFerence<m>:CDR:SOFTware:SREStimate....1242
TREFerence<m>:CLK:FACTor....1239
TREFerence<m>:CLK:FREQuency....1239
TREFerence<m>:CLK:OFFSet....1240
TREFerence<m>:CLK:REFLevel....1240
TREFerence<m>:DISPlay....1236
TREFerence<m>:EDGE....1236
TREFerence<m>:ENABle....1236
TREFerence<m>:GATE....1237
TREFerence<m>:PROTocol:CHKall....1244
TREFerence<m>:PROTocol:CLR....1245
TREFerence<m>:PROTocol:FIENable....1244
TREFerence<m>:PROTocol:INVert....1245
TREFerence<m>:PROTocol:RST....1245
TREFerence<m>:PROTocol:SBUS....1244
TREFerence<m>:RFLSet....1237
TREFerence<m>:SOURce....1237
TREFerence<m>:STATe?....1238
TREFerence<m>:SYMRate....1238
TREFerence<m>:TYPE....1238
TRFS:COUNt?....1239
TRIGger:ACTions:BEEP....1213
TRIGger:ACTions:OUT:DELay....1214
TRIGger:ACTions:OUT:OVERload:STATus:CONDition?....2390
TRIGger:ACTions:OUT:OVERload:STATus:ENABle....2391
TRIGger:ACTions:OUT:OVERload:STATus:NTRansition....2392
TRIGger:ACTions:OUT:OVERload:STATus:PTRansition....2392
TRIGger:ACTions:OUT:OVERload:STATus:PTRansition....2393

TRIGger:ACTions:OUT:OVERload:STATus[:EVENt]....2390
TRIGger:ACTions:OUT:PLENgth....1214
TRIGger:ACTions:OUT:POLarity....1215
TRIGger:ACTions:OUT:SOURce....1214
TRIGger:ACTions:OUT:STATe....1214
TRIGger:ACTions:SCReenshot....1215
TRIGger:ACTions:SRESults....1215
TRIGger:ACTions:STOP....1216
TRIGger:ACTions:WFMSave....1216
TRIGger:ANEDge:COUPling....1186
TRIGger:ANEDge:CUToff:HIGHpass....1186
TRIGger:ANEDge:CUToff:LOWPass....1187
TRIGger:ANEDge:FILTer....1186
TRIGger:ANEDge:LEVel....1185
TRIGger:ANEDge:NREJect....1187
TRIGger:ANEDge:OVERload:STATus:CONDition?....2390
TRIGger:ANEDge:OVERload:STATus:ENABle....2391
TRIGger:ANEDge:OVERload:STATus:NTRansition....2392
TRIGger:ANEDge:OVERload:STATus:PTRansition....2393
TRIGger:ANEDge:OVERload:STATus[:EVENt]....2390
TRIGger:EVENt<ev>:EDGE:SLOPe....1185
TRIGger:EVENt<ev>:GLITch:POLarity....1187
TRIGger:EVENt<ev>:GLITch:RANGe....1188
TRIGger:EVENt<ev>:GLITch:WIDTh....1188
TRIGger:EVENt<ev>:INTerval:DELTa....1197
TRIGger:EVENt<ev>:INTerval:RANGe....1197
TRIGger:EVENt<ev>:INTerval:SLOPe....1198
TRIGger:EVENt<ev>:INTerval:WIDTh....1198
TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer....1190
TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer....1190
TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer....1198
TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer....1198
TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer....1193
TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer....1193
TRIGger:EVENt<ev>:LEVel<n>[:VALue]....1181
TRIGger:EVENt<ev>:LSET:RUNT:LOWer....1190
TRIGger:EVENt<ev>:LSET:RUNT:UPPer....1190
TRIGger:EVENt<ev>:LSET:SLEW:LOWer....1199
TRIGger:EVENt<ev>:LSET:SLEW:UPPer....1199
TRIGger:EVENt<ev>:LSET:WINDow:LOWer....1193
TRIGger:EVENt<ev>:LSET:WINDow:UPPer....1193
TRIGger:EVENt<ev>:LSET[:VALue]....1181
TRIGger:EVENt<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX....1205
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX....1205
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic....1206
TRIGger:EVENt<ev>:PATTern:QUALify:LOGic....1205
TRIGger:EVENt<ev>:PATTern:QUALify:SOURces....1206
TRIGger:EVENt<ev>:RUNT:DELTa....1191
TRIGger:EVENt<ev>:RUNT:POLarity....1191
TRIGger:EVENt<ev>:RUNT:RANGe....1192

TRIGger:EVENt<ev>:RUNT:WIDTh....1192
TRIGger:EVENt<ev>:SETHold:CSOurce:EDGE....1201
TRIGger:EVENt<ev>:SETHold:CSOurce:LEVel....1201
TRIGger:EVENt<ev>:SETHold:CSOurce[:VALue]....1202
TRIGger:EVENt<ev>:SETHold:HTIMe....1202
TRIGger:EVENt<ev>:SETHold:STIMe....1202
TRIGger:EVENt<ev>:SLEW:DELTa....1199
TRIGger:EVENt<ev>:SLEW:RANGe....1200
TRIGger:EVENt<ev>:SLEW:RATE....1200
TRIGger:EVENt<ev>:SLEW:SLOPe....1201
TRIGger:EVENt<ev>:SOURce....1182
TRIGger:EVENt<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX....1203
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX....1204
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic....1204
TRIGger:EVENt<ev>:STATe:QUALify:LOGic....1203
TRIGger:EVENt<ev>:STATe:SLOPe....1204
TRIGger:EVENt<ev>:TIMeout:RANGe....1196
TRIGger:EVENt<ev>:TIMeout:TIME....1196
TRIGger:EVENt<ev>:TYPE....1181
TRIGger:EVENt<ev>:WIDTh:DELTa....1188
TRIGger:EVENt<ev>:WIDTh:POLarity....1189
TRIGger:EVENt<ev>:WIDTh:RANGe....1189
TRIGger:EVENt<ev>:WIDTh:WIDTh....1189
TRIGger:EVENt<ev>:WINDow:DELTa....1194
TRIGger:EVENt<ev>:WINDow:RANGe....1194
TRIGger:EVENt<ev>:WINDow:TIME....1195
TRIGger:EVENt<ev>:WINDow:WIDTh....1195
TRIGger:FILTermode....1212
TRIGger:FINDlevel....1182
TRIGger:FORCe....1207
TRIGger:HOLDoff:AUTotime?....1208
TRIGger:HOLDoff:EVENts....1209
TRIGger:HOLDoff:MAX....1209
TRIGger:HOLDoff:MIN....1209
TRIGger:HOLDoff:MODE....1207
TRIGger:HOLDoff:SCALing....1208
TRIGger:HOLDoff:TIME....1209
TRIGger:LFReject....1213
TRIGger:MEVents:AEVents....1183
TRIGger:MEVents:MODE....1180
TRIGger:MEVents:SEQuence<se>:COUNt....1183
TRIGger:MEVents:SEQuence<se>:DELay....1184
TRIGger:MEVents:SEQuence<se>:RESet:EVENt....1184
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME....1184
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout[:ENABle]....1185
TRIGger:MODE....1206
TRIGger:NOISe<m>:ABSolute....1210
TRIGger:NOISe<m>:EFFective?....1210
TRIGger:NOISe<m>:MODE....1211
TRIGger:NOISe<m>:PERDivision....1211

TRIGger:NOISe<m>:RELative....1211
TRIGger:NOISe<m>[:STATe]....1212
TRIGger:RFReject....1213
TRIGger:SBHW:CAN:ACKerror....1941
TRIGger:SBHW:CAN:BITSterror....1941
TRIGger:SBHW:CAN:BORDer....1941
TRIGger:SBHW:CAN:CRCerror....1942
TRIGger:SBHW:CAN:DCONdition....1942
TRIGger:SBHW:CAN:DLC....1942
TRIGger:SBHW:CAN:DLCCondition....1942
TRIGger:SBHW:CAN:DMIN....1943
TRIGger:SBHW:CAN:FDATa:BRS....1943
TRIGger:SBHW:CAN:FDATa:DPOSition....1943
TRIGger:SBHW:CAN:FDATa:ESI....1943
TRIGger:SBHW:CAN:FDATa:SCERror....1944
TRIGger:SBHW:CAN:FORMerror....1944
TRIGger:SBHW:CAN:FTYPe....1944
TRIGger:SBHW:CAN:ICONdition....1945
TRIGger:SBHW:CAN:IMAX....1945
TRIGger:SBHW:CAN:IMIN....1945
TRIGger:SBHW:CAN:ITYPe....1946
TRIGger:SBHW:CAN:TYPE....1946
TRIGger:SBHW:CAN:XDATa:AF:CONDition....1947
TRIGger:SBHW:CAN:XDATa:AF:MAX....1947
TRIGger:SBHW:CAN:XDATa:AF:MIN....1947
TRIGger:SBHW:CAN:XDATa:SDT:CONDition....1948
TRIGger:SBHW:CAN:XDATa:SDT:MAX....1948
TRIGger:SBHW:CAN:XDATa:SDT:MIN....1948
TRIGger:SBHW:CAN:XDATa:SEC....1949
TRIGger:SBHW:CAN:XDATa:VCID:CONDition....1949
TRIGger:SBHW:CAN:XDATa:VCID:MAX....1949
TRIGger:SBHW:CAN:XDATa:VCID:MIN....1949
TRIGger:SBHW:I2C:ACCess....1685
TRIGger:SBHW:I2C:ACONdition....1685
TRIGger:SBHW:I2C:ADDRess....1686
TRIGger:SBHW:I2C:ADDTo....1686
TRIGger:SBHW:I2C:ADNack....1686
TRIGger:SBHW:I2C:AMODe....1686
TRIGger:SBHW:I2C:DCONdition....1687
TRIGger:SBHW:I2C:DMIN....1687
TRIGger:SBHW:I2C:DPOSition....1687
TRIGger:SBHW:I2C:DRNack....1687
TRIGger:SBHW:I2C:DWNack....1688
TRIGger:SBHW:I2C:TYPE....1684
TRIGger:SBHW:LIN:CHKSerror....1989
TRIGger:SBHW:LIN:DCONdition....1989
TRIGger:SBHW:LIN:DMIN....1989
TRIGger:SBHW:LIN:DPOSition....1988
TRIGger:SBHW:LIN:ICONdition....1988
TRIGger:SBHW:LIN:IMAX....1988

TRIGger:SBHW:LIN:IMIN ... 1987
TRIGger:SBHW:LIN:IPERror ... 1987
TRIGger:SBHW:LIN:SYERror ... 1987
TRIGger:SBHW:LIN:TYPE ... 1986
TRIGger:SBHW:SPI:DMINpattern ... 1593
TRIGger:SBHW:SPI:DPOSition ... 1592
TRIGger:SBHW:SPI:FCONdition ... 1592
TRIGger:SBHW:SPI:PALignment ... 1592
TRIGger:SBHW:SPI:TYPE ... 1591
TRIGger:SBHW:TNOS:SAMPlepoint ... 2204
TRIGger:SBHW:TNOS:TYPE ... 2204
TRIGger:SBHW:UART:DATA ... 1792
TRIGger:SBHW:UART:DPOSition ... 1792
TRIGger:SBHW:UART:FCONdition ... 1793
TRIGger:SBHW:UART:OPERator ... 1793
TRIGger:SBHW:UART:SOURce ... 1793
TRIGger:SBHW:UART:TYPE ... 1793
TRIGger:SBSW:ARINc:BIT ... 2057
TRIGger:SBSW:ARINc:CHKall ... 2056
TRIGger:SBSW:ARINc:CLR ... 2056
TRIGger:SBSW:ARINc:DMAX ... 2057
TRIGger:SBSW:ARINc:DMIN ... 2057
TRIGger:SBSW:ARINc:DOPerator ... 2058
TRIGger:SBSW:ARINc:ERENable ... 2059
TRIGger:SBSW:ARINc:ERRor<m>:ENABle ... 2059
TRIGger:SBSW:ARINc:FIENable ... 2058
TRIGger:SBSW:ARINc:FRAMe<fr>:ENABle ... 2056
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:BIT ... 2057
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMAX ... 2057
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMIN ... 2057
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator ... 2058
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:ENABle ... 2058
TRIGger:SBSW:ARINc:FRENable ... 2056
TRIGger:SBSW:ARINc:INVert ... 2056
TRIGger:SBSW:ARINc:RST ... 2056
TRIGger:SBSW:CAN:BIT ... 1951
TRIGger:SBSW:CAN:CHKall ... 1950
TRIGger:SBSW:CAN:CLR ... 1951
TRIGger:SBSW:CAN:DMAX ... 1952
TRIGger:SBSW:CAN:DMIN ... 1952
TRIGger:SBSW:CAN:DOPerator ... 1953
TRIGger:SBSW:CAN:ERENable ... 1954
TRIGger:SBSW:CAN:ERRor<m>:ENABle ... 1954
TRIGger:SBSW:CAN:FIENable ... 1953
TRIGger:SBSW:CAN:FRAMe<fr>:ENABle ... 1951
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:BIT ... 1951
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMAX ... 1952
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMIN ... 1952
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator ... 1953
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:ENABle ... 1953

TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMAX....1953
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMIN....1954
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator....1954
TRIGger:SBSW:CAN:FRENable....1951
TRIGger:SBSW:CAN:IMAX....1953
TRIGger:SBSW:CAN:IMIN....1954
TRIGger:SBSW:CAN:INVert....1951
TRIGger:SBSW:CAN:IOPerator....1954
TRIGger:SBSW:CAN:RST....1951
TRIGger:SBSW:DPHY:BIT....1759
TRIGger:SBSW:DPHY:CHKall....1758
TRIGger:SBSW:DPHY:CLR....1758
TRIGger:SBSW:DPHY:DMAX....1759
TRIGger:SBSW:DPHY:DMIN....1760
TRIGger:SBSW:DPHY:DOPerator....1760
TRIGger:SBSW:DPHY:ERENable....1762
TRIGger:SBSW:DPHY:ERRor<m>:ENABle....1762
TRIGger:SBSW:DPHY:FIENable....1761
TRIGger:SBSW:DPHY:FRAMe<fr>:ENABle....1759
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:BIT....1759
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMAX....1759
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMIN....1760
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator....1760
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:ENABle....1761
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMAX....1761
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMIN....1761
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator....1762
TRIGger:SBSW:DPHY:FRENable....1759
TRIGger:SBSW:DPHY:IMAX....1761
TRIGger:SBSW:DPHY:IMIN....1761
TRIGger:SBSW:DPHY:INVert....1758
TRIGger:SBSW:DPHY:IOPerator....1762
TRIGger:SBSW:DPHY:RST....1759
TRIGger:SBSW:EBTB:BIT....1910
TRIGger:SBSW:EBTB:CHKall....1909
TRIGger:SBSW:EBTB:CLR....1909
TRIGger:SBSW:EBTB:DMAX....1911
TRIGger:SBSW:EBTB:DMIN....1911
TRIGger:SBSW:EBTB:DOPerator....1911
TRIGger:SBSW:EBTB:ERENable....1913
TRIGger:SBSW:EBTB:ERRor<m>:ENABle....1913
TRIGger:SBSW:EBTB:FIENable....1912
TRIGger:SBSW:EBTB:FRAMe<fr>:ENABle....1910
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:BIT....1910
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMAX....1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMIN....1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DOPerator....1911
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:ENABle....1912
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMAX....1912
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMIN....1912

TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IOPerator ... 1913
TRIGger:SBSW:EBTB:FRENable ... 1910
TRIGger:SBSW:EBTB:IMAX ... 1912
TRIGger:SBSW:EBTB:IMIN ... 1912
TRIGger:SBSW:EBTB:INVert ... 1758
TRIGger:SBSW:EBTB:INVert ... 1910
TRIGger:SBSW:EBTB:IOPerator ... 1913
TRIGger:SBSW:EBTB:RST ... 1910
TRIGger:SBSW:HBTO:BIT ... 2237
TRIGger:SBSW:HBTO:CHKall ... 2236
TRIGger:SBSW:HBTO:CLR ... 2236
TRIGger:SBSW:HBTO:DMAX ... 2238
TRIGger:SBSW:HBTO:DMIN ... 2238
TRIGger:SBSW:HBTO:DOPerator ... 2238
TRIGger:SBSW:HBTO:ERENable ... 2240
TRIGger:SBSW:HBTO:ERRor<m>:ENABle ... 2240
TRIGger:SBSW:HBTO:FIENable ... 2239
TRIGger:SBSW:HBTO:FRAMe<fr>:ENABle ... 2237
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:BIT ... 2237
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMAX ... 2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMIN ... 2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator ... 2238
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:ENABle ... 2239
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMAX ... 2239
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMIN ... 2240
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator ... 2240
TRIGger:SBSW:HBTO:FRENable ... 2237
TRIGger:SBSW:HBTO:IMAX ... 2239
TRIGger:SBSW:HBTO:IMIN ... 2240
TRIGger:SBSW:HBTO:INVert ... 2237
TRIGger:SBSW:HBTO:IOPerator ... 2240
TRIGger:SBSW:HBTO:RST ... 2237
TRIGger:SBSW:I2C:BIT ... 1690
TRIGger:SBSW:I2C:CHKall ... 1689
TRIGger:SBSW:I2C:CLR ... 1689
TRIGger:SBSW:I2C:DMAX ... 1690
TRIGger:SBSW:I2C:DMIN ... 1690
TRIGger:SBSW:I2C:DOPerator ... 1691
TRIGger:SBSW:I2C:ERENable ... 1693
TRIGger:SBSW:I2C:ERRor<m>:ENABle ... 1693
TRIGger:SBSW:I2C:FIENable ... 1691
TRIGger:SBSW:I2C:FRAMe<fr>:ENABle ... 1689
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:BIT ... 1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMAX ... 1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMIN ... 1690
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator ... 1691
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:ENABle ... 1691
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMAX ... 1692
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMIN ... 1692
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator ... 1692

TRIGger:SBSW:I2C:FRENable ... 1689
TRIGger:SBSW:I2C:IMAX ... 1692
TRIGger:SBSW:I2C:IMIN ... 1692
TRIGger:SBSW:I2C:INVert ... 1689
TRIGger:SBSW:I2C:IOPerator ... 1692
TRIGger:SBSW:I2C:RST ... 1689
TRIGger:SBSW:I3C:BIT ... 1722
TRIGger:SBSW:I3C:CHKall ... 1721
TRIGger:SBSW:I3C:CLR ... 1721
TRIGger:SBSW:I3C:DMAX ... 1723
TRIGger:SBSW:I3C:DMIN ... 1723
TRIGger:SBSW:I3C:DOPerator ... 1723
TRIGger:SBSW:I3C:ERENable ... 1725
TRIGger:SBSW:I3C:ERRor<m>:ENABle ... 1725
TRIGger:SBSW:I3C:FIENable ... 1724
TRIGger:SBSW:I3C:FRAMe<fr>:ENABle ... 1722
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:BIT ... 1722
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMAX ... 1723
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMIN ... 1723
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator ... 1723
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:ENABle ... 1724
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMAX ... 1724
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMIN ... 1725
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator ... 1725
TRIGger:SBSW:I3C:FRENable ... 1722
TRIGger:SBSW:I3C:IMAX ... 1724
TRIGger:SBSW:I3C:IMIN ... 1725
TRIGger:SBSW:I3C:INVert ... 1722
TRIGger:SBSW:I3C:IOPerator ... 1725
TRIGger:SBSW:I3C:RST ... 1722
TRIGger:SBSW:LIN:BIT ... 1991
TRIGger:SBSW:LIN:CHKall ... 1990
TRIGger:SBSW:LIN:CLR ... 1990
TRIGger:SBSW:LIN:DMAX ... 1991
TRIGger:SBSW:LIN:DMIN ... 1992
TRIGger:SBSW:LIN:DOPerator ... 1992
TRIGger:SBSW:LIN:ERENable ... 1994
TRIGger:SBSW:LIN:ERRor<m>:ENABle ... 1994
TRIGger:SBSW:LIN:FIENable ... 1993
TRIGger:SBSW:LIN:FRAMe<fr>:ENABle ... 1991
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:BIT ... 1991
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMAX ... 1991
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMIN ... 1992
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator ... 1992
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:ENABle ... 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMAX ... 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMIN ... 1993
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator ... 1994
TRIGger:SBSW:LIN:FRENable ... 1991
TRIGger:SBSW:LIN:IMAX ... 1993

TRIGger:SBSW:LIN:IMIN ... 1993
TRIGger:SBSW:LIN:INVert ... 1990
TRIGger:SBSW:LIN:IOPerator ... 1994
TRIGger:SBSW:LIN:RST ... 1991
TRIGger:SBSW:MANCh:BIT ... 1884
TRIGger:SBSW:MANCh:CHKall ... 1883
TRIGger:SBSW:MANCh:CLR ... 1884
TRIGger:SBSW:MANCh:DMAX ... 1885
TRIGger:SBSW:MANCh:DMIN ... 1885
TRIGger:SBSW:MANCh:DOPerator ... 1886
TRIGger:SBSW:MANCh:ERENable ... 1887
TRIGger:SBSW:MANCh:ERRor<m>:ENABle ... 1887
TRIGger:SBSW:MANCh:FIENable ... 1886
TRIGger:SBSW:MANCh:FRAMe<fr>:ENABle ... 1884
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:BIT ... 1884
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMAX ... 1885
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMIN ... 1885
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator ... 1886
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:ENABle ... 1886
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMAX ... 1886
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMIN ... 1887
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator ... 1887
TRIGger:SBSW:MANCh:FRENable ... 1884
TRIGger:SBSW:MANCh:IMAX ... 1886
TRIGger:SBSW:MANCh:IMIN ... 1887
TRIGger:SBSW:MANCh:INVert ... 1884
TRIGger:SBSW:MANCh:IOPerator ... 1887
TRIGger:SBSW:MANCh:RST ... 1884
TRIGger:SBSW:MILStd:BIT ... 2085
TRIGger:SBSW:MILStd:CHKall ... 2084
TRIGger:SBSW:MILStd:CLR ... 2084
TRIGger:SBSW:MILStd:DMAX ... 2085
TRIGger:SBSW:MILStd:DMIN ... 2086
TRIGger:SBSW:MILStd:DOPerator ... 2086
TRIGger:SBSW:MILStd:ERENable ... 2088
TRIGger:SBSW:MILStd:ERRor<m>:ENABle ... 2088
TRIGger:SBSW:MILStd:FIENable ... 2086
TRIGger:SBSW:MILStd:FRAMe<fr>:ENABle ... 2085
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:BIT ... 2085
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMAX ... 2085
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMIN ... 2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator ... 2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:ENABle ... 2086
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMAX ... 2087
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMIN ... 2087
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator ... 2088
TRIGger:SBSW:MILStd:FRENable ... 2085
TRIGger:SBSW:MILStd:IMAX ... 2087
TRIGger:SBSW:MILStd:IMIN ... 2087
TRIGger:SBSW:MILStd:INVert ... 2084

TRIGger:SBSW:MILStd:IOPerator....2088
TRIGger:SBSW:MILStd:RST....2084
TRIGger:SBSW:NRZC:BIT....1825
TRIGger:SBSW:NRZC:CHKall....1824
TRIGger:SBSW:NRZC:CLR....1824
TRIGger:SBSW:NRZC:DMAX....1826
TRIGger:SBSW:NRZC:DMIN....1826
TRIGger:SBSW:NRZC:DOPerator....1826
TRIGger:SBSW:NRZC:ERENable....1828
TRIGger:SBSW:NRZC:ERRor<m>:ENABle....1828
TRIGger:SBSW:NRZC:FIENable....1827
TRIGger:SBSW:NRZC:FRAMe<fr>:ENABle....1825
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:BIT....1825
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMAX....1826
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMIN....1826
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator....1826
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:ENABle....1827
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMAX....1827
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMIN....1828
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator....1828
TRIGger:SBSW:NRZC:FRENable....1825
TRIGger:SBSW:NRZC:IMAX....1827
TRIGger:SBSW:NRZC:IMIN....1828
TRIGger:SBSW:NRZC:INVert....1825
TRIGger:SBSW:NRZC:IOPerator....1828
TRIGger:SBSW:NRZC:RST....1825
TRIGger:SBSW:NRZU:BIT....1854
TRIGger:SBSW:NRZU:CHKall....1853
TRIGger:SBSW:NRZU:CLR....1854
TRIGger:SBSW:NRZU:DMAX....1855
TRIGger:SBSW:NRZU:DMIN....1855
TRIGger:SBSW:NRZU:DOPerator....1856
TRIGger:SBSW:NRZU:ERENable....1857
TRIGger:SBSW:NRZU:ERRor<m>:ENABle....1857
TRIGger:SBSW:NRZU:FIENable....1856
TRIGger:SBSW:NRZU:FRAMe<fr>:ENABle....1854
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:BIT....1854
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMAX....1855
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMIN....1855
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator....1856
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:ENABle....1856
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMAX....1856
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMIN....1857
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator....1857
TRIGger:SBSW:NRZU:FRENable....1854
TRIGger:SBSW:NRZU:IMAX....1856
TRIGger:SBSW:NRZU:IMIN....1857
TRIGger:SBSW:NRZU:INVert....1854
TRIGger:SBSW:NRZU:IOPerator....1857
TRIGger:SBSW:NRZU:RST....1854

TRIGger:SBSW:OSPI:BIT 1655
TRIGger:SBSW:OSPI:CHKall 1654
TRIGger:SBSW:OSPI:CLR 1654
TRIGger:SBSW:OSPI:DMAX 1656
TRIGger:SBSW:OSPI:DMIN 1656
TRIGger:SBSW:OSPI:DOPerator 1656
TRIGger:SBSW:OSPI:ERENable 1658
TRIGger:SBSW:OSPI:ERRor<m>:ENABle 1658
TRIGger:SBSW:OSPI:FIENable 1657
TRIGger:SBSW:OSPI:FRAMe<fr>:ENABle 1655
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:BIT 1655
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMAX 1656
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMIN 1656
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DOPerator 1656
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:ENABle 1657
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMAX 1657
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMIN 1658
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IOPerator 1658
TRIGger:SBSW:OSPI:FRENable 1655
TRIGger:SBSW:OSPI:IMAX 1657
TRIGger:SBSW:OSPI:IMIN 1658
TRIGger:SBSW:OSPI:INVert 1654
TRIGger:SBSW:OSPI:IOPerator 1658
TRIGger:SBSW:OSPI:RST 1655
TRIGger:SBSW:QSPI:BIT 1626
TRIGger:SBSW:QSPI:CHKall 1624
TRIGger:SBSW:QSPI:CLR 1625
TRIGger:SBSW:QSPI:DMAX 1626
TRIGger:SBSW:QSPI:DMIN 1626
TRIGger:SBSW:QSPI:DOPerator 1627
TRIGger:SBSW:QSPI:ERENable 1629
TRIGger:SBSW:QSPI:ERRor<m>:ENABle 1629
TRIGger:SBSW:QSPI:FIENable 1627
TRIGger:SBSW:QSPI:FRAMe<fr>:ENABle 1625
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:BIT 1626
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMAX 1626
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMIN 1626
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator 1627
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:ENABle 1627
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMAX 1627
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMIN 1628
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator 1628
TRIGger:SBSW:QSPI:FRENable 1625
TRIGger:SBSW:QSPI:IMAX 1627
TRIGger:SBSW:QSPI:IMIN 1628
TRIGger:SBSW:QSPI:INVert 1625
TRIGger:SBSW:QSPI:IOPerator 1628
TRIGger:SBSW:QSPI:RST 1625
TRIGger:SBSW:RFFE:BIT 2175
TRIGger:SBSW:RFFE:CHKall 2174

TRIGger:SBSW:RFFE:CLR....2174
TRIGger:SBSW:RFFE:DMAX....2175
TRIGger:SBSW:RFFE:DMIN....2176
TRIGger:SBSW:RFFE:DOPerator....2176
TRIGger:SBSW:RFFE:ERENable....2178
TRIGger:SBSW:RFFE:ERRor<m>:ENABle....2178
TRIGger:SBSW:RFFE:FIENable....2176
TRIGger:SBSW:RFFE:FRAMe<fr>:ENABle....2175
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:BIT....2175
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMAX....2175
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMIN....2176
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator....2176
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:ENABle....2176
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMAX....2177
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMIN....2177
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator....2178
TRIGger:SBSW:RFFE:FRENable....2175
TRIGger:SBSW:RFFE:IMAX....2177
TRIGger:SBSW:RFFE:IMIN....2177
TRIGger:SBSW:RFFE:INVert....2174
TRIGger:SBSW:RFFE:IOPerator....2178
TRIGger:SBSW:RFFE:RST....2174
TRIGger:SBSW:SENT:BIT....2024
TRIGger:SBSW:SENT:CHKall....2023
TRIGger:SBSW:SENT:CLR....2023
TRIGger:SBSW:SENT:DMAX....2025
TRIGger:SBSW:SENT:DMIN....2025
TRIGger:SBSW:SENT:DOPerator....2025
TRIGger:SBSW:SENT:ERENable....2027
TRIGger:SBSW:SENT:ERRor<m>:ENABle....2027
TRIGger:SBSW:SENT:FIENable....2024
TRIGger:SBSW:SENT:FRAMe<fr>:ENABle....2024
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:BIT....2024
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMAX....2025
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMIN....2025
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator....2025
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:ENABle....2024
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMAX....2026
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMIN....2026
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator....2027
TRIGger:SBSW:SENT:FRENable....2024
TRIGger:SBSW:SENT:IMAX....2026
TRIGger:SBSW:SENT:IMIN....2026
TRIGger:SBSW:SENT:INVert....2023
TRIGger:SBSW:SENT:IOPerator....2027
TRIGger:SBSW:SENT:RST....2024
TRIGger:SBSW:SPI:BIT....1595
TRIGger:SBSW:SPI:CHKall....1594
TRIGger:SBSW:SPI:CLR....1594
TRIGger:SBSW:SPI:DMAX....1595

TRIGger:SBSW:SPI:DMIN....1595
TRIGger:SBSW:SPI:DOPerator....1596
TRIGger:SBSW:SPI:ERENable....1598
TRIGger:SBSW:SPI:ERRor<m>:ENABle....1598
TRIGger:SBSW:SPI:FIENable....1596
TRIGger:SBSW:SPI:FRAMe<fr>:ENABle....1594
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:BIT....1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMAX....1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMIN....1595
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator....1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:ENABle....1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMAX....1596
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMIN....1597
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator....1597
TRIGger:SBSW:SPI:FRENable....1594
TRIGger:SBSW:SPI:IMAX....1596
TRIGger:SBSW:SPI:IMIN....1597
TRIGger:SBSW:SPI:INVert....1594
TRIGger:SBSW:SPI:IOPerator....1597
TRIGger:SBSW:SPI:RST....1594
TRIGger:SBSW:SPMI:BIT....2144
TRIGger:SBSW:SPMI:CHKall....2143
TRIGger:SBSW:SPMI:CLR....2143
TRIGger:SBSW:SPMI:DMAX....2144
TRIGger:SBSW:SPMI:DMIN....2145
TRIGger:SBSW:SPMI:DOPerator....2145
TRIGger:SBSW:SPMI:ERENable....2147
TRIGger:SBSW:SPMI:ERRor<m>:ENABle....2147
TRIGger:SBSW:SPMI:FIENable....2145
TRIGger:SBSW:SPMI:FRAMe<fr>:ENABle....2144
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:BIT....2144
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMAX....2144
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMIN....2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator....2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:ENABle....2145
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMAX....2146
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMIN....2146
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator....2147
TRIGger:SBSW:SPMI:FRENable....2144
TRIGger:SBSW:SPMI:IMAX....2146
TRIGger:SBSW:SPMI:IMIN....2146
TRIGger:SBSW:SPMI:INVert....2143
TRIGger:SBSW:SPMI:IOPerator....2147
TRIGger:SBSW:SPMI:RST....2143
TRIGger:SBSW:SWIRe:BIT....2113
TRIGger:SBSW:SWIRe:CHKall....2112
TRIGger:SBSW:SWIRe:CLR....2112
TRIGger:SBSW:SWIRe:DMAX....2114
TRIGger:SBSW:SWIRe:DMIN....2114
TRIGger:SBSW:SWIRe:DOPerator....2114

TRIGger:SBSW:SWIRe:ERENable....2115
TRIGger:SBSW:SWIRe:ERRor<m>:ENABle....2115
TRIGger:SBSW:SWIRe:FIENable....2115
TRIGger:SBSW:SWIRe:FRAMe<fr>:ENABle....2113
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:BIT....2113
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMAX....2114
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMIN....2114
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator....2114
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:ENABle....2115
TRIGger:SBSW:SWIRe:FRENable....2113
TRIGger:SBSW:SWIRe:INVert....2112
TRIGger:SBSW:SWIRe:RST....2113
TRIGger:SBSW:TBTO:BIT....2270
TRIGger:SBSW:TBTO:CHKall....2269
TRIGger:SBSW:TBTO:CLR....2269
TRIGger:SBSW:TBTO:DMAX....2270
TRIGger:SBSW:TBTO:DMIN....2270
TRIGger:SBSW:TBTO:DOPerator....2271
TRIGger:SBSW:TBTO:ERENable....2273
TRIGger:SBSW:TBTO:ERRor<m>:ENABle....2273
TRIGger:SBSW:TBTO:FIENable....2271
TRIGger:SBSW:TBTO:FRAMe<fr>:ENABle....2269
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:BIT....2270
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMAX....2270
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMIN....2270
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator....2271
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:ENABle....2271
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMAX....2272
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMIN....2272
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator....2272
TRIGger:SBSW:TBTO:FRENable....2269
TRIGger:SBSW:TBTO:IMAX....2272
TRIGger:SBSW:TBTO:IMIN....2272
TRIGger:SBSW:TBTO:INVert....2269
TRIGger:SBSW:TBTO:IOPerator....2272
TRIGger:SBSW:TBTO:RST....2269
TRIGger:SBSW:TNOS:BIT....2206
TRIGger:SBSW:TNOS:CHKall....2205
TRIGger:SBSW:TNOS:CLR....2205
TRIGger:SBSW:TNOS:DMAX....2207
TRIGger:SBSW:TNOS:DMIN....2207
TRIGger:SBSW:TNOS:DOPerator....2207
TRIGger:SBSW:TNOS:ERENable....2209
TRIGger:SBSW:TNOS:ERRor<m>:ENABle....2209
TRIGger:SBSW:TNOS:FIENable....2208
TRIGger:SBSW:TNOS:FRAMe<fr>:ENABle....2206
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:BIT....2206
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMAX....2207
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMIN....2207
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator....2207

TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:ENABle....2208
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMAX....2208
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMIN....2209
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator....2209
TRIGger:SBSW:TNOS:FRENable....2206
TRIGger:SBSW:TNOS:IMAX....2208
TRIGger:SBSW:TNOS:IMIN....2209
TRIGger:SBSW:TNOS:INVert....2206
TRIGger:SBSW:TNOS:IOPerator....2209
TRIGger:SBSW:TNOS:RST....2206
TRIGger:SBSW:UART:BIT....1796
TRIGger:SBSW:UART:CHKall....1795
TRIGger:SBSW:UART:CLR....1795
TRIGger:SBSW:UART:DMAX....1796
TRIGger:SBSW:UART:DMIN....1796
TRIGger:SBSW:UART:DOPerator....1797
TRIGger:SBSW:UART:ERENable....1799
TRIGger:SBSW:UART:ERRor<m>:ENABle....1799
TRIGger:SBSW:UART:FIENable....1797
TRIGger:SBSW:UART:FRAMe<fr>:ENABle....1795
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:BIT....1796
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMAX....1796
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMIN....1796
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator....1797
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle....1797
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMAX....1797
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMIN....1798
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator....1798
TRIGger:SBSW:UART:FRENable....1795
TRIGger:SBSW:UART:IMAX....1797
TRIGger:SBSW:UART:IMIN....1798
TRIGger:SBSW:UART:INVert....1795
TRIGger:SBSW:UART:IOPerator....1798
TRIGger:SBSW:UART:RST....1795
TRIGger:SBSW:USBHspeed:BIT....2333
TRIGger:SBSW:USBHspeed:CHKall....2332
TRIGger:SBSW:USBHspeed:CLR....2333
TRIGger:SBSW:USBHspeed:DMAX....2334
TRIGger:SBSW:USBHspeed:DMIN....2334
TRIGger:SBSW:USBHspeed:DOPerator....2335
TRIGger:SBSW:USBHspeed:ERENable....2336
TRIGger:SBSW:USBHspeed:ERRor<m>:ENABle....2336
TRIGger:SBSW:USBHspeed:FIENable....2335
TRIGger:SBSW:USBHspeed:FRAMe<fr>:ENABle....2333
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:BIT....2333
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMAX....2334
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMIN....2334
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator....2335
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:ENABle....2335
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMAX....2335

TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMIN....2336
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IOPerator....2336
TRIGger:SBSW:USBHspeed:FRENable....2333
TRIGger:SBSW:USBHspeed:IMAX....2335
TRIGger:SBSW:USBHspeed:IMIN....2336
TRIGger:SBSW:USBHspeed:INVert....2333
TRIGger:SBSW:USBHspeed:IOPerator....2336
TRIGger:SBSW:USBHspeed:RST....2333
TRIGger:SBSW:USBone:BIT....2302
TRIGger:SBSW:USBone:CHKall....2301
TRIGger:SBSW:USBone:CLR....2301
TRIGger:SBSW:USBone:DMAX....2302
TRIGger:SBSW:USBone:DMIN....2303
TRIGger:SBSW:USBone:DOPerator....2303
TRIGger:SBSW:USBone:ERENable....2305
TRIGger:SBSW:USBone:ERRor<m>:ENABle....2305
TRIGger:SBSW:USBone:FIENable....2304
TRIGger:SBSW:USBone:FRAMe<fr>:ENABle....2302
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:BIT....2302
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMAX....2302
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMIN....2303
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator....2303
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:ENABle....2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMAX....2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMIN....2304
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator....2305
TRIGger:SBSW:USBone:FRENable....2302
TRIGger:SBSW:USBone:IMAX....2304
TRIGger:SBSW:USBone:IMIN....2304
TRIGger:SBSW:USBone:INVert....2301
TRIGger:SBSW:USBone:IOPerator....2305
TRIGger:SBSW:USBone:RST....2302
TRIGger:ZONE:EXPRession[:DEFine]....1217
TRIGger:ZONE:HISTory....1222
TRPRobe:SETup:ATTenuation:UNIT?....1176
TRPRobe:SETup:ATTenuation[:AUTO]?....1176
TRPRobe:SETup:NAME?....1176
TRPRobe:SETup:STATe?....1176
TRPRobe:SETup:TYPE?....1176
USERdefined:PRESet:NAME....1131
USERdefined:PRESet:OPEN....1131
USERdefined:PRESet:SAVE....1132
USERdefined:PRESet[:ENABle]....1132
WGENerator<wg>:ARBGen:NAME....2374
WGENerator<wg>:ARBGen:OPEN....2374
WGENerator<wg>:ARBGen:RUNMode....2374
WGENerator<wg>:ARBGen:RUNSingle....2375
WGENerator<wg>:ARBGen:SAMPles?....2375
WGENerator<wg>:ARBGen:SRATe....2375
WGENerator<wg>:ARBGen[:SOURce]....2376

WGENerator<wg>:COUPling:ALL....2378
WGENerator<wg>:COUPling:AMPLitude....2378
WGENerator<wg>:COUPling:PHASeshift....2379
WGENerator<wg>:COUPling:STATe....2378
WGENerator<wg>:COUPling[:FREQuency]....2379
WGENerator<wg>:FREQuency....2361
WGENerator<wg>:FUNCtion:PULSe[:WIDTh]....2361
WGENerator<wg>:FUNCtion:RAMP[:SYMMetry]....2361
WGENerator<wg>:FUNCtion[:SELect]....2362
WGENerator<wg>:FUNCtion[:SQUare]:DCYCle....2362
WGENerator<wg>:GOVerload:STATus:CONDition?....2390
WGENerator<wg>:GOVerload:STATus:ENABle....2391
WGENerator<wg>:GOVerload:STATus:NTRansition....2392
WGENerator<wg>:GOVerload:STATus:PTRansition....2393
WGENerator<wg>:GOVerload:STATus[:EVENt]....2390
WGENerator<wg>:MODulation:AM:CAMPlitude....2363
WGENerator<wg>:MODulation:AM:DCYCle....2367
WGENerator<wg>:MODulation:AM:DEPTh....2367
WGENerator<wg>:MODulation:AM:FREQuency....2367
WGENerator<wg>:MODulation:AM:SYMMetry....2368
WGENerator<wg>:MODulation:AM[:FUNCtion]....2368
WGENerator<wg>:MODulation:CARRier:FREQuency....2368
WGENerator<wg>:MODulation:CARRier:PERiod....2368
WGENerator<wg>:MODulation:FM:DCYCle....2369
WGENerator<wg>:MODulation:FM:DEViation....2369
WGENerator<wg>:MODulation:FM:FREQuency....2369
WGENerator<wg>:MODulation:FM:SYMMetry....2370
WGENerator<wg>:MODulation:FM[:FUNCtion]....2370
WGENerator<wg>:MODulation:FSK:FONE....2370
WGENerator<wg>:MODulation:FSK:FTWO....2370
WGENerator<wg>:MODulation:FSK[:RATE]....2371
WGENerator<wg>:MODulation:NDCLevel....2371
WGENerator<wg>:MODulation:NLPCent....2371
WGENerator<wg>:MODulation:PWM:DCYCle....2372
WGENerator<wg>:MODulation:PWM:DEPTh....2372
WGENerator<wg>:MODulation:PWM:FREQuency....2372
WGENerator<wg>:MODulation:PWM:SYMMetry....2373
WGENerator<wg>:MODulation:PWM[:FUNCtion]....2373
WGENerator<wg>:MODulation:TYPE....2373
WGENerator<wg>:MODulation[:STATe]....2366
WGENerator<wg>:OUTPut[:LOAD]....2362
WGENerator<wg>:PERiod....2363
WGENerator<wg>:PRESet....2363
WGENerator<wg>:SOURce....2364
WGENerator<wg>:SWEep:FEND....2377
WGENerator<wg>:SWEep:FSTart....2377
WGENerator<wg>:SWEep:TIME....2377
WGENerator<wg>:SWEep:TYPE....2376
WGENerator<wg>:SWEep[:STATe]....2376
WGENerator<wg>:TEMPerature:STATus:CONDition?....2390

WGENerator<wg>:TEMPerature:STATus:ENABle 2391
WGENerator<wg>:TEMPerature:STATus:NTRansition 2392
WGENerator<wg>:TEMPerature:STATus:PTRansition 2393
WGENerator<wg>:TEMPerature:STATus[:EVENt] 2391
WGENerator<wg>:VOLTage:DCLevel 2364
WGENerator<wg>:VOLTage:INVersion 2365
WGENerator<wg>:VOLTage:OFFSet 2365
WGENerator<wg>:VOLTage[:VPP] 2365
WGENerator<wg>[:ENABle] 2365
XY<m>:SWAP 1553
XY<m>:XSOurce 1554
XY<m>:YSOurce 1554
XY<m>[:STATe] 1554
ZONE<m>:ACOMbination 1217
ZONE<m>:ADD 1217
ZONE<m>:AREA<n>:ADD 1217
ZONE<m>:AREA<n>:COUNt? 1218
ZONE<m>:AREA<n>:INTersect 1218
ZONE<m>:AREA<n>:LABel 1218
ZONE<m>:AREA<n>:POINt<o>:ADD 1219
ZONE<m>:AREA<n>:POINt<o>:COUNt? 1219
ZONE<m>:AREA<n>:POINt<o>:REMove 1220
ZONE<m>:AREA<n>:POINt<o>:VALid? 1221
ZONE<m>:AREA<n>:POINt<o>:X 1220
ZONE<m>:AREA<n>:POINt<o>:Y 1220
ZONE<m>:AREA<n>:REMove 1221
ZONE<m>:AREA<n>:STATe 1221
ZONE<m>:AREA<n>:VALid? 1219
ZONE<m>:COUNt? 1221
ZONE<m>:DIAGram 1222
ZONE<m>:REMove 1222
ZONE<m>:SOURce 1222
ZONE<m>[:VISible] 1223