R&S®RTP
High-Performance Oscilloscope
User Manual

dataTec
Mess- und Prüftechnik. Die Experten.

Ihr Ansprechpartner / Your Partner:

dataTec AG
E-Mail: info@datatec.eu
datatec.eu



1803648402
Version 10

ROHDE&SCHWARZ
Make ideas real

This document describes the following R&S®RTP models with firmware version 5.60:

- R&S®RTP044B (1803.7000K04)
- R&S®RTP064B (1803.7000K06)
- R&S®RTP084B (1803.7000K08)
- R&S®RTP134B (1803.7000K13)
- R&S®RTP164B (1803.7000K16)

Mess- und Prüftechnik. Die Experten.

Ihr Ansprechpartner /
Your Partner:

dataTec AG
E-Mail: info@datatec.eu
datatec.eu

© 2026 Rohde & Schwarz
Muehldorfstr. 15, 81671 Muenchen, Germany
Phone: +49 89 41 29 - 0
Email: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com
Subject to change – data without tolerance limits is not binding.
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.
The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
MATLAB® is a registered trademark of The MathWorks, Inc.
TEKTRONIX, TEK, and TEKPROBE are registered trademarks of Tektronix, Inc.
All other trademarks are the properties of their respective owners.

1803.6484.02 | Version 10 | R&S®RTP

Throughout this document, R&S® is indicated as R&S.

Contents

1 Safety and regulatory information....11
1.1 Safety instructions....11
1.2 Labels on the product....17
1.3 Warning messages in the documentation....17
1.4 CE declaration of conformity....18
1.5 Where to find key documents on Rohde & Schwarz....18
1.6 Korea certification class A....18
2 Preface....19
2.1 Key features....19
2.2 Documentation overview....19
2.3 Options described in this document....22
2.4 Conventions used in the documentation....24
3 Getting started....25
3.1 Preparing for use....25
3.2 Instrument tour....32
3.3 Operating the instrument....44
4 Instrument setup....72
4.1 System settings....72
4.2 Option settings....76
4.3 Appearance settings....79
4.4 Display settings....94
4.5 Frontpanel settings....98
4.6 Preset setup....102
4.7 Maintenance settings....104
4.8 Save / recall....108
5 Acquisition and waveform setup....113
5.1 Basics....113
5.2 Horizontal....123
5.3 Horizontal accuracy....126
5.4 Acquire settings....128

5.5 Vertical setup....140
5.6 Probes....147
5.7 R&S RT-ZVC probe....180
5.8 Differential signals....190
5.9 Setting up the waveform....194

6 Triggers....199
6.1 Basics of triggering....199
6.2 Setting up the trigger....200
6.3 Trigger types....202
6.4 Mode / Holdoff....231
6.5 Conditioning....234
6.6 Actions on trigger....236
6.7 Qualification....238
6.8 Sequence....240
6.9 Zone trigger....243
6.10 High speed serial pattern trigger (option R&S RTP-K140/K141)....247
6.11 External trigger input....261

7 Waveform analysis....266
7.1 Zoom....266
7.2 Reference waveforms....276
7.3 Mathematics....284
7.4 Waveform histograms....307
7.5 History....311
7.6 XY-diagram....317

8 Measurements....321
8.1 Cursor measurements....321
8.2 Automatic measurements....332
8.3 Quick measurements....409

9 Spectrum analysis....412
9.1 FFT analysis....412
9.2 Spectrum analysis (option R&S RTP-K37)....432

10 Mask testing....436

10.1 About mask testing....436
10.2 Mask test settings....438
10.3 Mask testing on eye diagrams....450
10.4 Working with masks....455

11 Search functions....463
11.1 Overview: search definition and results....463
11.2 Search setup....464
11.3 Search gate....479
11.4 Search display presentation....482

12 Data and file management....487
12.1 Accessing, retrieving and handling data....487
12.2 Save and recall user settings....488
12.3 Save and recall waveform data and results....497
12.4 Screenshots....522
12.5 Reports....527
12.6 File selection dialog....529
12.7 Video raster analysis (option R&S RTP-K129)....530

13 Signal configuration....535
13.1 Signal configuration setup....535
13.2 Signal flow overview....539
13.3 Signal and reference levels for NRZ signals....539
13.4 Signal configuration for PAM-N signals (R&S RTP-K135)....550

14 Protocol analysis....555
14.1 Basics of protocol analysis....555
14.2 I²C (option R&S RTP-K1)....565
14.3 I3C (option R&S RTP-K45)....580
14.4 SPI bus (option R&S RTP-K1)....595
14.5 UART/RS-232/RS-422/RS-485 (option R&S RTP-K2)....606
14.6 CAN and CAN FD (option R&S RTP-K3/K9)....615
14.7 CAN-XL (option R&S RTP-K77)....641
14.8 LIN (option R&S RTP-K3)....653
14.9 MIL-1553 (option R&S RTP-K6)....667

14.10 ARINC 429 (option R&S RTP-K7)....684
14.11 Ethernet 10BASE-T and 100BASE-TX (option R&S RTP-K8)....697
14.12 10BASE-T1S (automotive Ethernet, option R&S RTP-K56)....712
14.13 Ethernet 100BASE-T1 (option R&S RTP-K57)....726
14.14 Ethernet 1000BASE-T1 (option R&S RTP-K58)....744
14.15 RFFE (option R&S RTP-K40)....762
14.16 D-PHY (option R&S RTP-K42)....783
14.17 M-PHY and USB SSIC (option R&S RTP-K44 and K64)....800
14.18 Custom: Manchester / NRZ (option R&S RTP-K50)....830
14.19 8b/10b (option R&S RTP-K52)....863
14.20 MDIO (option R&S RTP-K55)....876
14.21 USB (option R&S RTP-K60)....889
14.22 USB 3.1 (option R&S RTP-K61/K62)....916
14.23 USBPD (option R&S RTP-K63)....938
14.24 SpaceWire (option R&S RTP-K65)....952
14.25 PCIe (option R&S RTP-K72/K73)....963
14.26 DDR (option R&S RTP-K91/K93/K94/K95)....998

15 Mixed signal option (MSO, R&S RTP-B1)....1013
15.1 Digital channels and parallel buses....1013
15.2 Display....1022
15.3 Trigger....1024
15.4 Measurements on digital channels....1037
15.5 Data export....1038
15.6 Mathematics....1039
15.7 Search....1039

16 Waveform generator (option R&S RTP-B6)....1041
16.1 Setup of the waveform generator....1041
16.2 Setup of the pattern generator....1060
16.3 Output....1063
16.4 Coupling settings....1066
16.5 Sync settings....1068
16.6 Configuring the waveform generator....1068

17 Pulse source and TDR/TDT analysis (options R&S RTP-B7/K130) 1072
17.1 Pulse source (option R&S RTP-B7) 1072
17.2 TDR/TDT analysis (option R&S RTP-K130) 1074
18 I/Q software interface (option R&S RTP-K11) 1089
18.1 I/Q mode 1089
18.2 I/Q sampling setup 1089
18.3 I/Q data output 1096
18.4 Deembedding in I/Q mode 1097
19 Jitter analysis and clock data recovery 1098
19.1 Jitter measurements (option R&S RTP-K12) 1099
19.2 Advanced jitter and noise (option R&S RTP-K133/K134) 1110
19.3 Clock data recovery 1150
20 Advanced eye diagram analysis (option R&S RTP-K136/K137) .. 1157
20.1 Calculation and display of advanced eye diagrams 1157
20.2 Eye diagram setup 1158
20.3 Measurements and zoom on eye diagrams 1181
20.4 Mask Testing on Eye Diagrams 1182
21 Deembedding (option R&S RTP-K121/-K122) 1183
21.1 Configuring the measurement setup for deembedding 1183
21.2 Deembedding settings 1184
21.3 Responses 1200
21.4 Proven probe, proven cable 1203
22 Embedding and equalization (option R&S RTP-K126) 1208
22.1 Equalization basics 1208
22.2 Signal lanes settings 1210
22.3 Transmitter feed forward equalization (TxFFE) 1216
22.4 Embedding 1221
22.5 Equalization settings 1227
23 External frontend control (option R&S RTP-K553) 1247
23.1 External frontend basics 1247
23.2 Test setups 1248

23.3 Settings for external frontend control....1252
23.4 Using external frontends to get I/Q data....1261
23.5 Using external frontends with deembedding....1262
23.6 Troubleshooting external frontend control....1264
24 Compliance tests and measurement functions....1268
24.1 USB compliance test....1268
24.2 Ethernet compliance tests (options R&S RTP-K22/K23/K25/K86)....1270
24.3 D-PHY compliance tests (option R&S RTP-K26)....1273
24.4 eMMC compliance tests (option R&S RTP-K92)....1274
24.5 PCIe compliance tests (option R&S RTP-K81)....1274
24.6 DDR3 compliance tests (option R&S RTP-K91)....1275
24.7 DDR4 compliance tests (option R&S RTP-K93)....1276
24.8 C-PHY compliance tests (option R&S RTP-K28)....1277
24.9 DisplayPort compliance tests (option R&S RTP-K114/K115)....1277
24.10 HDMI compliance tests (option R&S RTP-K110)....1279
24.11 Load pull tests (option R&S RTP-K98)....1280
25 Network operation and remote control....1283
25.1 Operating system....1283
25.2 Setting up a network (LAN) connection....1288
25.3 Web interface....1293
25.4 Remote Desktop connection....1299
25.5 Remote control....1301
26 Remote control commands....1319
26.1 Conventions used in remote command description....1326
26.2 Finding the appropriate command....1326
26.3 Programming examples....1327
26.4 Frequently used parameters and suffixes....1343
26.5 Common commands....1352
26.6 General remote settings....1357
26.7 Instrument setup....1361
26.8 Acquisition and setup....1394
26.9 Trigger....1468

26.10 Waveform analysis....1542
26.11 Cursor measurements....1584
26.12 Automatic measurements....1596
26.13 Spectrum analysis....1689
26.14 Mask testing....1707
26.15 Search....1732
26.16 Data management....1773
26.17 Signal configuration....1808
26.18 Protocols....1832
26.19 Mixed signal option (MSO, R&S RTP-B1)....2621
26.20 Waveform generator (option R&S RTP-B6)....2648
26.21 Pulse source and TDR/TDT analysis (options R&S RTP-B7/K130)....2672
26.22 I/Q software interface (option R&S RTP-K11)....2681
26.23 Jitter analysis and clock data recovery....2688
26.24 Eye diagram analysis....2745
26.25 Deembedding (option R&S RTP-K121/-K122)....2769
26.26 Embedding and equalization (option R&S RTP-K126)....2784
26.27 External frontend control (option R&S RTP-K553)....2823
26.28 Maintenance....2844
26.29 Status reporting....2846
26.30 Remote trace....2852
26.31 Deprecated commands....2856

27 Maintenance and support....2863
27.1 Cleaning....2863
27.2 Power cables for R&S RTP....2863
27.3 Contacting customer support....2864
27.4 Information for technical support....2864
27.5 Data security....2865
27.6 Transporting....2865
27.7 Storage....2865

27.8 Disposal 2866

List of commands 2867

Index 2954

1 Safety and regulatory information

The product documentation helps you to use the product safely and efficiently.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In Section 1.1, "Safety instructions", on page 11. The same information is provided in many languages in printed format. The printed "Safety Instructions" for "Oscilloscopes and Accessories" are delivered with the instrument and the probes.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

Intended use

The R&S RTP product is designed for measurements on circuits that are only indirectly connected to the mains or not connected at all. It is not rated for any measurement category.

The product is intended for the development, production and verification of electronic components and devices in industrial, administrative, and laboratory environments. Use the product only for its designated purpose. Observe the operating conditions and performance limits stated in the specifications document.

Target audience

The target audience of this document includes developers and technicians, administrators and maintenance personnel using oscilloscopes and probes. The required skills and experience of the users depend on the test setup and application of the product.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the specifications document, manuals and the printed "Safety Instructions" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer support.

Using the product requires skilled persons or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the specifications document. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer support at https://www.rohde-schwarz.com/support.

In these safety instructions, the term "product" covers instruments (oscilloscopes), probes and their accessories.

Lifting and carrying the instrument

Check the specifications document for the maximum weight of the instrument. A single person can only carry a maximum of 18 kg safely depending on age, gender and physical condition. If your instrument is heavier than 18 kg, do not move or carry it by yourself.

Use the instrument handles to move or carry the instrument. Do not use the mounted accessories instead of the handles. Accessories are not designed to carry the weight of the instrument.

To move the instrument safely, you can use lifting or transporting equipment such as lift trucks and forklifts. Follow the instructions provided by the equipment manufacturer.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing.

If Rohde & Schwarz provides accessories designed for outdoor use of your product, e.g. a protective cover, you can use the product outdoors.

You can operate the product up to an altitude of 2000 m above sea level. If a higher altitude is permissible, the value is provided in the specifications document. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the specifications document.

Setting up the product

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

Connecting the product

Before connecting the interfaces or measuring inputs of the product to other products or electrical circuits, make sure that the other products or electrical circuits provide special protection against electric shock. This protection principle is referred to as SELV (safety extra-low voltage) and is based on a low voltage level and increased insulation. Exceptions are indicated by a measurement category on the product and given in the specifications document.

Connecting to power and grounding

The mains power supply input of the instrument complies with overvoltage category II. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such as electric shock, fire, personal injury or even death.

Take the following measures for your safety:

- Do not use an isolating transformer to connect the instrument to the mains power supply.
- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- If a product has an exchangeable fuse, its type and characteristics are indicated next to the fuse holder. Before changing the fuse, switch off the product and disconnect it from the power source. How to change the fuse is described in the product documentation.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.
- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- If you connect the product to an external power supply, use the one delivered with the product or recommended in the product documentation. The external power supply must conform to the country-specific regulations.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.
- Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.

Performing measurements

Take the following measures for your safety:

- To ascertain a voltage-free state, use an appropriate voltage tester. Any measurement setup including an oscilloscope is not suitable for this purpose.
- The maximum input voltage on channel inputs and the external trigger input must not exceed the value specified in the specifications document.
- Observe all voltage and current ratings of the instrument, the probes, and the accessories. Exceeding the allowed voltages can lead to an electric shock.
  Limits and ratings are marked on the products and listed in the specifications documents.
  Consider that the rated voltage depends on the frequency. The voltage limitation curves or values are provided in the specifications document.
- Never cause any short circuits when measuring sources with high output currents.
- Use only probes and accessories that comply with the measurement category (CAT) of your measurement task. If the product is rated for any measurement category, the permitted category is indicated on the product and in the specifications document. If you use other than Rohde & Schwarz accessories, make sure that they are suitable for the instrument and the measurement task.
- Set the correct attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.
- When working with high voltages and current probes, observe the additional operating conditions specified in these safety instructions.
- The probe pins are extremely pointed and can easily penetrate clothes and the skin. Handle the probe pins with great care. To exchange a probe pin, use tweezers or pliers to avoid injuries. When transporting the accessories, always use the box supplied with the probe.
- Prevent the probe from receiving mechanical shock. Avoid putting excessive strain on the probe cable or exposing it to sharp bends. Touching a broken cable during measurements can cause injuries.
- Set up all probe connections to the instrument before applying power.

Working with hazardous voltages

Voltages higher than 30 V RMS, or 42 V peak, or 60 V DC are regarded as hazardous contact voltages. Direct contact with them can cause serious injuries.

Make sure that only electrically skilled persons use the products for measurements on hazardous contact voltages. These working conditions require special education and experience to perceive risks and to avoid hazards which electricity can create.

When working with hazardous contact voltages, use protective measures to preclude direct contact with the measurement setup:

- Do not touch exposed connections and components when power is applied.
- Switch off the test circuit while connecting and disconnecting probe leads.
- Use only insulated voltage probes, test leads and adapters.
- Make sure that the input leads fulfill the safety requirements for your measurement.

The delivered input leads might have a jacket wear indicator that indicates a worn jacket by different jacket color. In this case, do not use the input lead. Replace it with a new one.

- When connecting to the DUT, keep your fingers behind finger guard. Remove jewelry, watches, and other metallic objects. Only use 4 mm safety banana plugs.

Using optical isolated probe systems

Optical isolated probes are classified as class 1 laser product. Class 1 lasers are safe under all conditions of normal use. The product fully contains the beam of a higher-class laser. Take the following measures for your safety:

- To avoid exposure to the laser beam, never remove any covers from the probe head or probe receiver, and never disassemble the product.
- Check the product before using to ensure that it is undamaged. If you have dropped the product or exposed it to excessive mechanical stress, always check the product. Do not use the product if any component is damaged.
- Send the product to service regularly.

Optical isolated probes measure differential voltages. The test circuit can have a different potential. The common mode voltage between the potentials of the DUT and the oscilloscope can be much higher than the differential voltage and is not measured by the probe. To avoid the risk of electrical shock, use protective measures:

- Always de-energize the test circuit before installing or removing the tip module.
- Never exceed the differential voltage rating.
- When measuring on a test circuit with high common mode voltage, use a tripod to hold the probe head.
- Keep the probe head and the tip cable away from circuits with different potential to prevent arc flash caused by a different potential.

Working with current probes


When working with current probes, you can measure high-frequency currents or currents that contain high-frequency components.

- Switch off the test circuit while connecting the probe.
- Do not attach the clamp to bare unisolated conductors. To avoid injury from a short circuit, measure at a location on an insulated wire where the insulation is sufficient for the circuit voltage.
- Connect the probe only to the secondary side of a breaker. With this measure, you can avoid injury if a short circuit occurs.
- The following effects can cause burns and fire or damage to the measurement site:
  - Eddy current loss can cause heating of the sensor head.
  - Dielectric heating can cause heating of cord insulation and other materials.
- When measuring current that includes a high-frequency component, consider the derating characteristics of the probe. Do not measure any current that exceeds the rated current.
- Using the probes with high frequencies or strong magnetic fields may cause the device to become abnormally hot, resulting in fire, equipment damage, or burns.

Measurement categories

IEC 61010-2-030 defines measurement categories that rate instruments on their ability to resist short transient overvoltages that occur in addition to the working voltage. Use the measurement setup only in electrical environments for which they are rated.

- 0 - Instruments without rated measurement category
  For measurements performed on circuits not directly connected to mains, for example, electronics, circuits powered by batteries, and specially protected secondary circuits. This measurement category is also known as CAT I.
- CAT II:
  For measurements performed on circuits directly connected to the low-voltage installation by a standard socket outlet, for example, household appliances and portable tools.
- CAT III:
  For measurements performed in the building installation, such as junction boxes, circuit breakers, distribution boards, and equipment with permanent connection to the fixed installation.
- CAT IV:
  For measurements performed at the source of the low-voltage installation, such as electricity meters and primary overcurrent protection devices.

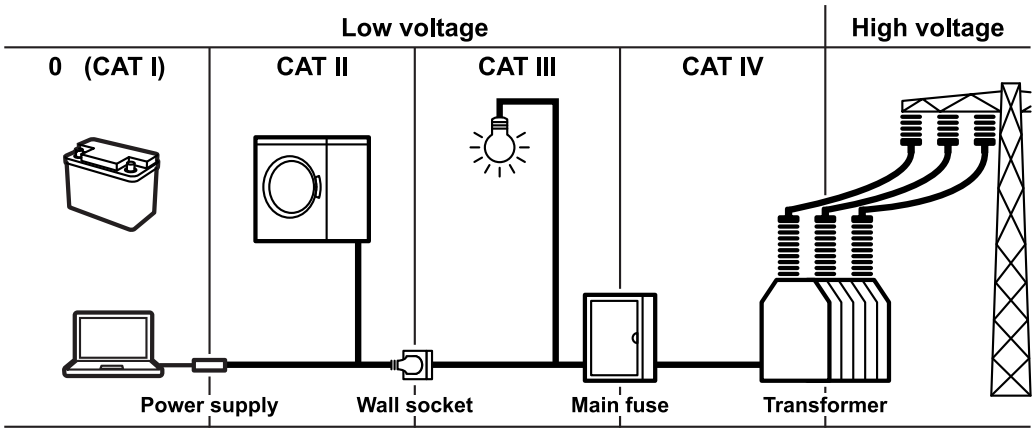

Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

Meaning of safety labels

Safety labels on the product and its accessories warn against potential hazards.

	Potential hazard Read the product documentation to avoid personal injury or product damage.

	Heavy product Be careful when lifting, moving or carrying the product. Carrying the product requires a sufficient number of persons or transport equipment.

	Electrical hazard Indicates live parts. Risk of electric shock, fire, personal injury or even death.

	Protective conductor terminal Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.

1.2 Labels on the product

Labels on the casing inform about:

- Personal safety, see "Meaning of safety labels" on page 16
- Product and environment safety, see Table 1-1
- Identification of the product

Table 1-1: Labels regarding product and environment safety

	Chassis grounding terminal
	Take care when handling electrostatic sensitive devices.
	Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its life. For more information, see "Disposing of electrical and electronic equipment" on page 2866.

1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

1.4 CE declaration of conformity

The CE declaration of conformity of the instrument is delivered with the product. Keep the document for further reference.

The current version of this CE declaration of conformity is available at:

www.rohde-schwarz.com/company-documents/rtp/

1.5 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at www.rohde-schwarz.com/key-documents, e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations

1.6 Korea certification class A



이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

2 Preface

2.1 Key features

The R&S RTP high-performance oscilloscopes combine superior signal integrity with fastest acquisition rate. It combines multiple instrument capabilities for time-correlated debugging in one box. Outstanding key features are:

Real-time signal integrity

- Superior frontend performance
- Real-time de-embedding and advanced triggering
- Hardware accelerated processing for faster results
- Comprehensive analysis tools, for example, powerful protocol analysis, jitter analysis functions, automatic compliance tests, spectrograms, and precise and wideband RF analysis

Multi-instrument capability

- Time-correlated analysis of different signal types
- Integrated arbitrary waveform and pattern generator that can be used, for example, for protocol-based programming
- Easy-to-use serial protocol analysis for various protocols used in embedded design, mobile communications and more
- General-purpose mixed signal option
- Multi-channel power consumption analysis with up to 8 additional voltage and 8 additional current measurement channels and very high dynamic range
- 16 GHz pulse source

Compact and configurable

- Most compact high-end instrument platform
- Highest configuration flexibility
- Advanced user interface

For a detailed specification, refer to the specifications document.

2.2 Documentation overview

This section provides an overview of the R&S RTP user documentation.

2.2.1 Manuals and instrument help

You find the manuals on the product page at:

www.rohde-schwarz.com/manual/rtp

Getting started manual

Introduces the R&S RTP and describes how to set up and start working with the instrument, and describes basic operations. A printed English version is included in the delivery. Editions in other languages are available on the product website.

Instrument help

The help offers quick, context-sensitive access to the complete information for the firmware basic functionality and applications.

User manual (instrument)

The user manual describes all instrument functions in detail. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance and instrument interfaces. The user manual includes the contents of the getting started manual.

The *online version* of the user manual provides the complete contents for immediate display on the internet.

Manuals for compliance test options

For compliance test options, extra test procedure manuals are available. Test fixtures are described in printed manuals, which are delivered with the fixture.

- The following test procedure manuals are available:
  - USB 2.0/3.2 Compliance test procedures
  - Ethernet compliance tests procedures
  - MIPI D-PHY compliance tests procedures
  - MIPI C-PHY compliance tests procedures
  - eMMC compliance tests procedures
  - PCIe compliance tests procedures
  - DDR3 compliance tests procedures
  - DDR4 compliance tests procedures
  - DDR5 compliance tests procedures
  - HDMI compliance tests procedures
  - DisplayPort compliance tests procedures
  - Load Pull compliance tests procedures
  - ScopeSuite Automation
- The following test fixture manuals are available:
  - R&S RT-ZF1 USB 2.0 compliance test fixture set
  - R&S RT-ZF2 Ethernet compliance test fixture set
  - R&S RT-ZF3 Frequency converter board (100BASE-T1)
  - R&S RT-ZF4 10BASE-Te test fixture
  - R&S RT-ZF5 Ethernet probing fixture
  - R&S RT-ZF6 Frequency converter board (1000BASE-T1)

- R&S RT-ZF7 Automotive Ethernet T&D fixture
- R&S RT-ZF7A and R&S RT-ZF7P SMA Adaptors
- R&S RT-ZF8 Automotive Ethernet compliance test fixture

Safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

Instrument security procedures manual

Deals with security issues when working with the R&S RTP in secure areas. It is available for download on the internet.

Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance. The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS, https://gloris.rohde-schwarz.com).

2.2.2 Specifications and product brochure

The specifications document, also known as the data sheet, contains the technical specifications of the R&S RTP. It also lists the firmware applications and their order numbers, and optional accessories. The product brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/rtp.

2.2.3 Release notes, open source acknowledgment

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation. The open source acknowledgment document provides verbatim license texts of the used open source software. It can also be read directly on the instrument.

See www.rohde-schwarz.com/firmware/rtp.

2.2.4 Calibration certificate

The document is available on https://gloris.rohde-schwarz.com/calcert. You need the device ID of your instrument, which you can find on a label on the rear panel.

2.2.5 Application notes, application cards, videos

Various documents and videos deal with special applications or background information on particular topics.

- Application notes
- Media center
- Application videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: https://www.youtube.com/@Rohde-Schwarz

2.3 Options described in this document

In addition to the base unit, the following options are described in this documentation:

Type	Designation	Order No.
R&S RTP-B1	MSO	1333.2424.02
R&S RTP-B6	Waveform and pattern generator	1333.2418.02
R&S RTP-B7	Pulse source	1333.2030.02
R&S RTP-K1	I²C and SPI serial triggering and decoding	1337.8604.02
R&S RTP-K2	UART/RS-232/RS-422/RS-485 serial triggering and decoding	1337.8610.02
R&S RTP-K3	CAN and LIN serial triggering and decoding	1337.8627.02
R&S RTP-K6	MIL-STD-1553 serial triggering and decoding	1800.6654.02
R&S RTP-K7	ARINC 429 serial triggering and decoding	1800.6660.02
R&S RTP-K8	Ethernet serial triggering and decoding	1337.8633.02
R&S RTP-K9	CAN FD serial triggering and decoding	1337.8640.02
R&S RTP-K11	I/Q software interface	1800.6683.02
R&S RTP-K12	Jitter analysis	1337.8656.02
R&S RTP-K19	Zone trigger	1337.8879.02
R&S RTP-K37	Spectrum analysis	1338.1110.02
R&S RTP-K35	Bus analysis for I2C, SPI, RS232/UART, CAN, CAN FD, LIN, SENT, RFFE, 10BASE-T, 100BASE-TX and 100BASE-T1. Requires a corresponding protocol decoding option.	1800.6648.02
R&S RTP-K39	User-defined math (Python scripting interface)	1803.6761.02
R&S RTP-K40	MIPI RFFE serial triggering and decoding	1337.8733.02
R&S RTP-K42	MIPI D-PHY serial triggering and decoding	1337.8740.02
R&S RTP-K44	MIPI M-PHY serial triggering and decoding	1337.8756.02
R&S RTP-K45	I3C serial triggering and decoding	1803.7080.02
R&S RTP-K50	Custom Manchester and NRZ serial triggering and decoding	1337.8762.02
R&S RTP-K52	8b10b serial triggering and decoding	1337.8779.02

Type	Designation	Order No.
R&S RTP-K55	MDIO serial triggering and decoding	1337.8785.02
R&S RTP-K56	Automotive Ethernet (10BASE-T1S) serial triggering and decoding	1803.7097.02
R&S RTP-K57	100BASE-T1 serial triggering and decoding	1800.6548.02
R&S RTP-K58	1000BASE-T1 serial triggering and decoding	1800.6702.02
R&S RTP-K60	USB 1.0/1.1/2.0/HSIC serial triggering and decoding	1337.8791.02
R&S RTP-K61	USB 3.1 Gen 1 serial triggering and decoding	1337.8804.02
R&S RTP-K62	USB 3.1 Gen 2serial triggering and decoding	1337.9100.02
R&S RTP-K63	USB-PD serial triggering and decoding	1337.8810.02
R&S RTP-K64	USB SSIC serial triggering and decoding	1337.9117.02
R&S RTP-K65	SpaceWire serial triggering and decoding	1800.6677.02
R&S RTP-K72	PCI Express 1.x/2.x serial triggering and decoding	1337.8827.02
R&S RTP-K73	PCI Express 3 serial triggering and decoding	1800.6960.02
R&S RTP-K77	CAN XL serial triggering and decoding	1803.7100.02
R&S RTP-K91	DDR3/DDR3L/LPDDR3 debug & compliance test. Decode and debug are described in this user manual. The compliance test is described in a separate manual.	1337.8840.02
R&S RTP-K93	DDR4/LPDDR4 debug & compliance test. Decode and debug are described in this user manual. The compliance test is described in a separate manual.	1801.3671.02
R&S RTP-K121	Deembedding base option	1326.3064.02
R&S RTP-K122	Real-time deembedding extension	1326.3070.02
R&S RTP-K126	Embedding and equalization	1800.6025.02
R&S RTP-K129	Video raster analysis	1803.7068.02
R&S RTP-K130	TDR/TDT analysis (requires pulse source option R&S RTP-B7)	1326.3093.02
R&S RTP-K133	Advanced jitter analysis	1800.6860.02
R&S RTP-K134	Advanced noise analysis	1800.6977.02
R&S RTP-K135	PAM-N analysis	1803.6861.02
R&S RTP-K136	Advanced eye analysis (8 Gb/s)	1803.6561.02
R&S RTP-K137	Advanced eye analysis (16 Gb/s)	1800.6983.02
R&S RTP-K140	High-speed serial pattern trigger (8 Gb/s)	1326.4554.02
R&S RTP-K141	High-speed serial pattern trigger (16 Gb/s)	1326.4560.02
R&S RTP-K155	EMC/ESD test	1803.7074.02

Type	Designation	Order No.
R&S RTP-K553	External frontend control	1803.6890.02
R&S RTP-K980	HUMS (Health & Utilization Monitoring Service)	1803.7116.02

2.4 Conventions used in the documentation

2.4.1 Typographical conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
[Keys]	Key and knob names are enclosed by square brackets.
`Filenames, commands, program code`	Filenames, commands, coding samples and screen output are distinguished by their font.
Input	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

2.4.2 Conventions for procedure descriptions

When operating the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

3 Getting started

Note: the following chapters are identical to those in the R&S RTP Getting Started manual for R&S RTP instruments.

- Preparing for use.....25
- Instrument tour.....32
- Operating the instrument.....44

3.1 Preparing for use

Here, you can find basic information about setting up the instrument for the first time or when changing the operating site.

3.1.1 Lifting and carrying

See: "Lifting and carrying the instrument" on page 12.

3.1.2 Unpacking and checking

1. Unpack the product carefully.
2. Retain the original packing material. Use it when transporting or shipping the product later.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

   If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

3.1.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the specifications document.

For safety information, see "Choosing the operating site" on page 12.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the specifications document.

- Class B equipment is suitable for use in:
  - Residential environments

  - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments.
  If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

3.1.4 Setting up the product

When setting up the instrument, follow the safety instructions:

- "Setting up the product" on page 12
- "Intended use" on page 11

3.1.4.1 Placing the product on a bench top

For standalone operation, place the instrument on a horizontal bench with even, flat surface. The instrument can be used in horizontal position, standing on its feet, or with the support feet on the bottom extended.


To place the product on a bench top

1. Place the product on a stable, flat and level surface. Ensure that the surface can support the weight of the product. For information on the weight, see the specifications document.
2. **CAUTION!** Foldable feet can collapse. For safety information, see "Setting up the product" on page 12.

   Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath.
3. **WARNING!** A stack of products can fall over and cause injury. Never stack more than two products. Otherwise, mount them in a rack.

   Stack as follows:

   - All products must have the same dimensions (width and length).
   - Do not exceed a total load of 25 kg placed on the product at the bottom of the stack.
   - Fold in all foldable feet completely.

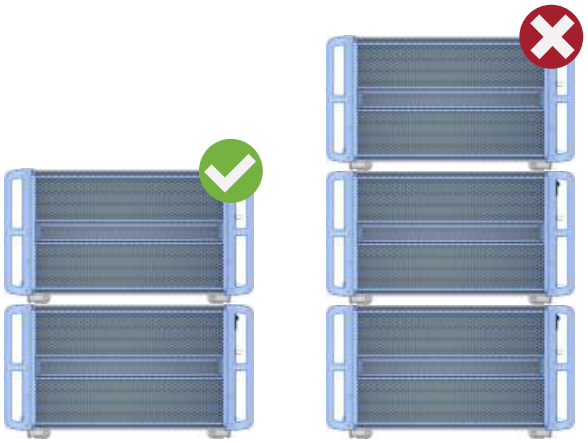

Left = Stacked correctly
Right = Stacked incorrectly, too many products

4. **NOTICE!** Overheating can damage the product.
   Prevent overheating as follows:
   - Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.
   - Do not place the product next to heat-generating equipment such as radiators or other products.

3.1.4.2 Mounting the product in a rack

To prepare the rack

1. Observe the requirements and instructions in "Setting up the product" on page 12.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product.
   Design and implement an efficient ventilation concept for the rack.

To mount the oscilloscope in a rack

1. Use a rackmount kit to prepare the instrument for rack mounting.
   a) Order the rackmount kit designed for your oscilloscope. For the order number, see specifications document.
   b) Mount the rackmount kit. Follow the assembly instructions provided with the rackmount kit.
2. **WARNING!** The product is heavy. For safety information, see "Lifting and carrying the instrument" on page 12.
   Use lifting equipment to lift the product to shelf height.
3. Grip the product by the handles. Slide the product onto the shelf until the rack brackets fit closely to the rack.

4. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the product at the rack.

To unmount the product from a rack

1. Loosen the screws at the rack brackets.
2. **WARNING!** The product is heavy. For safety information, see "Lifting and carrying the instrument" on page 12.

   Bring the lifting equipment to shelf height.
3. Remove the product from the rack.
4. If placing the product on a bench top again, unmount the rackmount kit from the product. Follow the instructions provided with the rackmount kit.

3.1.5 Considerations for test setup

Observe safety instructions, see "Performing measurements" on page 14.

Cable selection and electromagnetic interference (EMI)

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, for example, double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.

Signal input and output levels

Information on signal levels is provided in the specifications document. Keep the signal levels within the specified ranges to avoid damage to the product and connected devices.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

► **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

a) Use a wrist strap and cord to connect yourself to ground.
b) Use a conductive floor mat and heel strap combination.

During operation, if the firmware observes a serious unexpected disturbance (e.g. due to ESD), it resets some hardware components and initiates a new alignment to ensure proper instrument functioning. Then it restores the user settings to the state before the disturbance.

3.1.6 Connecting to power

For safety information, see "Connecting to power and grounding" on page 13.

The R&S RTP can be used with different AC power voltages and adapts itself automatically to it.

The instrument has a C20 connector. A list of appropriate power cables is given in the user manual. Refer to the specifications document for the requirements of voltage and frequency.

The nominal ranges are the following. They are also indicated on a label near the power connector on the instrument and in the specifications document.

- 100 V to 240 V AC at 50 Hz to 60 Hz, and 100 V to 130 V at 400 Hz, with maximal 10% voltage fluctuation on line
- max. 13 A to 4.7 A

1. Plug the AC power cable into the AC power connector on the rear panel of the product. Only use the AC power cable that is delivered with the product.
2. Plug the AC power cable into a power outlet with ground contact.

3.1.7 Switching on or off

The instrument is switched on or off with the power switch and the [Power] key. The [Power] key is located in the bottom left corner of the front panel. The power switch is located at the rear panel of the instrument.

Table 3-1: Overview of power states

Status	LED	Power switch
Off	(unlighted)	[0] (off)
Standby	orange	[I] (on)
Ready	green	[I] (on)

To switch on the product

The product is off but connected to power.

1. Set the switch on the power supply to position [I].

   The power key on the front panel lights up.
2. Press the [Power] key on the front panel.

   The instrument performs a system check, boots the operating system, and then starts the R&S RTP firmware.
   The [Power] key turns green and the illuminated keys on the front panel light up.
   If the previous session was terminated regularly, the oscilloscope uses the last settings.

Before you start measurements, be sure to comply with the warm-up phase specified in the specifications document.

To shut down the product

The product is in the ready state.

► Press the [Power] key.

All current settings are saved, and the software shuts down. The [Power] key turns orange. The standby power supplies only the power switch circuits.

Remote command for firmware shutdown: `SYSTem:EXIT` on page 1361.

To disconnect from power

The product is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.

   Set the switch on the power supply to position [0].

   The LED of the [Power] key is switched off.

2. Disconnect the product from the power source.

3.1.8 Connecting external devices

The following interfaces for external devices are provided:

- USB connectors at the front and rear panel of the instrument
- Monitor connectors HDMI and DisplayPort at the rear panel of the instrument

3.1.8.1 Connecting USB devices

You can connect USB flash drives to save screenshots and measurement results, and keyboard and/or mouse to simplify the operation and the entry of data. You can connect or disconnect all USB devices during operation of the instrument. The number of USB connectors can be increased by using USB hubs.

USB devices are plug&play, the operating system automatically uses the suitable device driver. If the operating system does not find a suitable driver, it prompts you to specify a directory that contains the driver software. If the driver software is on a storage media, connect the appropriate drive to the instrument before proceeding. If the instrument is integrated in a network, you can also install driver data stored in a network directory.

When a USB device is disconnected from the R&S RTP, Windows immediately detects the change in hardware configuration and deactivates the corresponding driver.

The properties of external USB devices are configured in the operating system, not in the instrument's firmware. We recommended using mouse and keyboard to access and modify the settings of the Windows operating system.

To access Windows, press the Windows key on the external keyboard, or select "Menu" > "Minimize Application" on the R&S RTP menu.

Connecting a keyboard or mouse

1. Connect the keyboard or mouse.

   The device is detected automatically. The default input language of the keyboard is English – US.

2. To configure the keyboard properties, press the Windows key on the external keyboard.
3. Tap the "Find" icon (magnifier) on the Windows taskbar.
4. To configure the keyboard:

   a) Type *keybord*.
   b) Select "Edit language and keyboard options".

5. To configure the mouse:

   a) Type *mouse*.
   b) Select "Mouse settings".

3.1.8.2 Connecting external monitors

You can connect one or two external monitors or projectors to the R&S RTP. The following connectors are available:

- "HDMI" on page 36
- "DisplayPort" on page 36

1. Ensure that the monitors and the R&S RTP are connected to a ground contact. Otherwise the instrument can be damaged.
2. Check the input type of the monitors. Make sure to select the correct cable. If the connectors do not match, use an appropriate adapter.
3. You can configure the displays directly in the instrument's setup. Open "Menu" > "Settings" > "Display".
4. Select the "Monitors" tab.
5. Select how to display the screen. Select "Extend" to arrange dialogs and result boxes on different displays.
6. To move the main firmware window to an external monitor, press F11 on the keyboard.

   Now the firmware shows a soft frontpanel together with the usual display in a window. You can move this window to an external monitor.

7. To access Windows display settings, tap "Additional settings".
8. To adjust the touch functionality, tap "Tablet PC settings".

The touchscreen of the R&S RTP has a screen resolution of 1920x1080 pixel. Many external monitors have a higher screen resolution. If the screen resolution of the monitor is set higher than the instrument's resolution, the firmware window uses a 1920x1080 area of the monitor display. For full screen display, adjust the monitor's screen resolution using "Additional settings".

3.2 Instrument tour

This chapter describes the front and rear panels of the instrument including all function keys and connectors.

3.2.1 Front panel

This section provides an overview of the R&S RTP front panel and explains the various connectors and the option slots at the front.

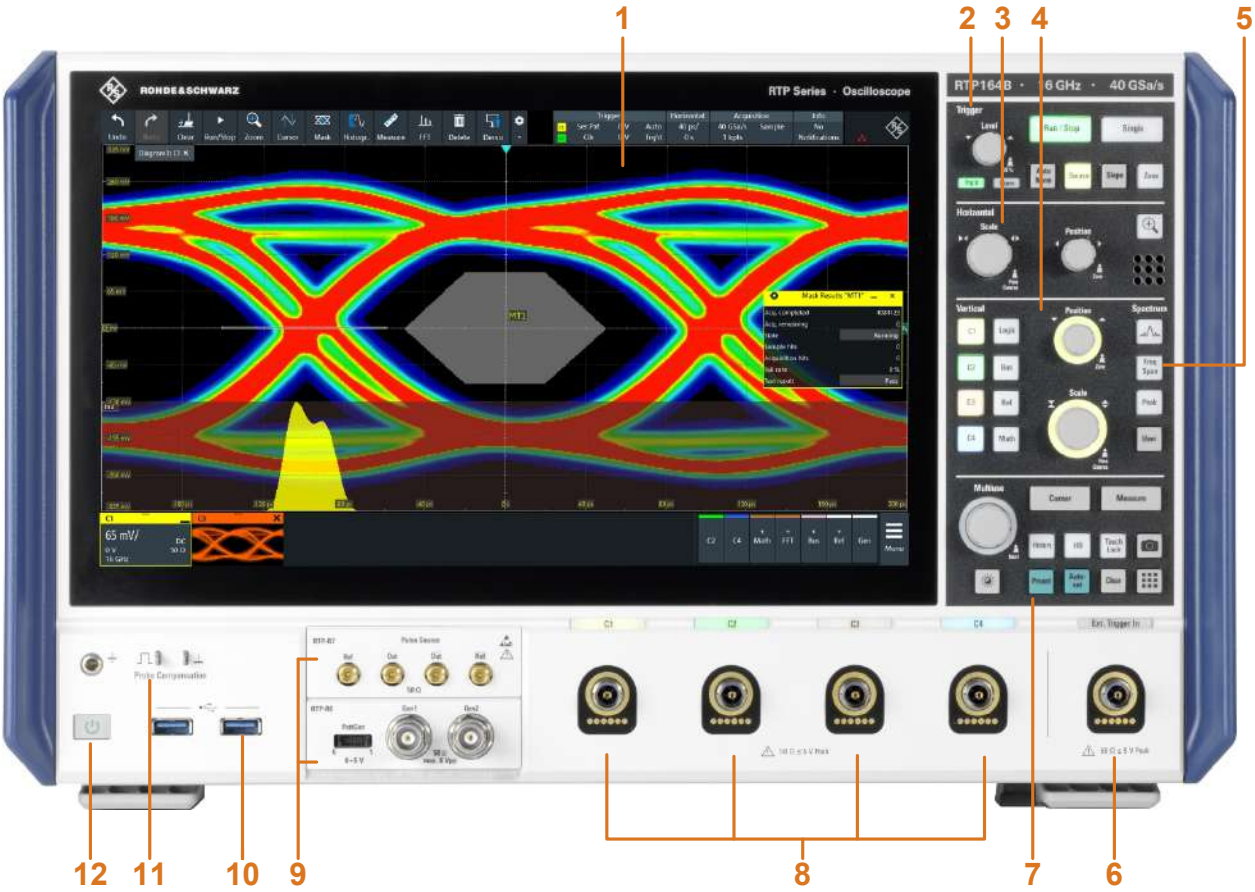


Figure 3-1: Front panel of R&S RTP

1 = Touchscreen
2 = Trigger controls
3 = Horizontal controls
4 = Vertical controls
5 = Spectrum keys
6 = External trigger input
7 = Analysis keys
8 = Input channels
9 = Two option slots for R&S RTP-B1 (MSO) or R&S RTP-B1E (for R&S RT-ZVC) , R&S RTP-B6 (waveform generator), R&S RTP-B7 (pulse source)
10 = USB connectors
11 = Connectors for probe compensation and grounding
12 = [Power] key

The keys and controls are described in Section 3.2.3, "Keys and controls", on page 37.

3.2.1.1 Connectors



Channel inputs and external trigger input
The R&S RTP has four channel inputs to connect the input signals, and an external trigger input to control the measurement by an external signal.

The input connectors are provided with a special Rohde & Schwarz active probe interface, and they are BNC compatible. Thus, the instrument can automatically detect active probes that have the Rohde & Schwarz probe interface.

The maximum input voltage on channel inputs and the external trigger input is 5 V peak. The input impedance of the inputs is 50 Ω.

USB
Two USB type A connectors that comply with standard USB 3.1 gen 1. They are used to connect devices like keyboard, mouse and USB flash drive.

Note: Electromagnetic interference (EMI) can affect the measurement results. To avoid any impact, do not use USB connecting cables exceeding 1 m.

Probe Comp.
Probe compensation terminal to support adjustment of passive probes to the oscilloscope channel.

⏚ Protective earth conductor, 4 mm banana jack to connect ground of DUT and test fixtures, and wrist strap.

⎍ Square wave signal for probe compensation, 1 kHz and 1 V_{pp}.

⊥ Ground connector for probes.

3.2.1.2 Option slots

Three options R&S RTP-B1/B6/B7 can be installed in one R&S RTP - two at the front panel, and one at the rear panel. Each option can be installed only once, and the slot assignment depends on the available options. To ensure correct installation and calibration, installation is done only at Rohde & Schwarz service centers.

See also: "Option slot" on page 37.

Mixed signal option R&S RTP-B1 / digital extension port R&S RTP-B1E
The mixed signal option R&S RTP-B1 provides logic analizer functionality and 16 digital channels. It also can connect the R&S RT-ZVC multi-channel power probe. The connectors are used to connect two logical probes with 8 digital channels each (D0 to D7 and D8 to D15), or two flat interface cables of R&S RT-ZVC.

The digital extension port R&S RTP-B1E provides the connectors for the R&S RT-ZVC multi-channel power probe without MSO. The connectors are used to connect two flat interface cables of R&S RT-ZVC.

One of the options can be installed in one of option slots at the front panel, or in the option slot at the rear panel.

The maximum input voltage is 40 V peak at 100 kΩ input impedance. The maximum input frequency for a signal with the minimum input voltage swing of 500 mV (V_{pp}) is 400 MHz. For detailed specifications, refer to the specifications document.

Waveform generator option R&S RTP-B6
The waveform generator generates various function and arbitrary waveforms, sweeps, and parallel patterns. For detailed specifications, refer to the specifications document.

The option can be installed in one of option slots at the front panel.

The module provides the following connectors:

[Gen1, Gen2] BNC connectors

[PattGen] Connector for the pattern generator

Pulse source option R&S RTP-B7
The pulse source outputs a symmetrical differential pulse signal. For detailed specifications, refer to the specifications document.

The option can be installed in one of option slots at the front panel.

The module has four connectors.
- Out, $\overline{\text{Out}}$: 2.92 mm connectors (K type) for pulse signal output
- Ref, $\overline{\text{Ref}}$: 2.92 mm connectors (K type) for reference signal output

3.2.2 Rear panel

This section explains the rear panel of the R&S RTP, including the various connectors and the option slot.

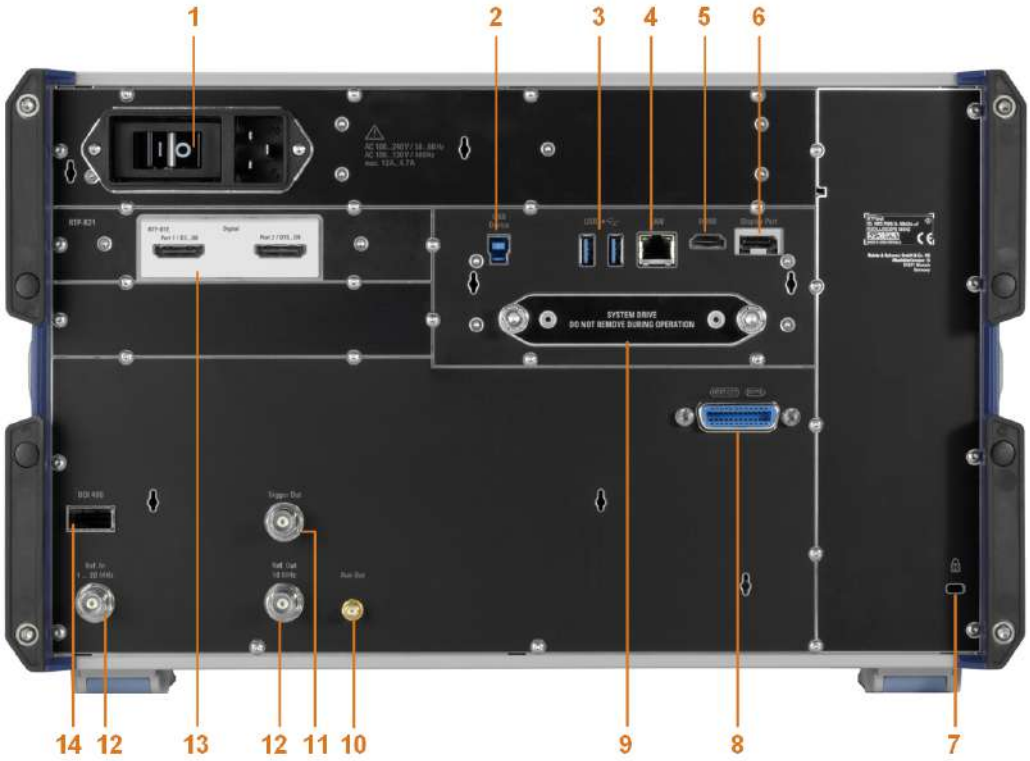


Figure 3-2: Rear panel of R&S RTP

1 = AC power supply connector and main power switch
2 = USB device connector, type B
3 = USB connectors, type A
4 = LAN connector
5 = HDMI connector for external monitor
6 = DisplayPort connector
7 = Kensington lock slot to secure the instrument against theft
8 = GPIB connector
9 = Exchangeable solid state disk (SSD, option R&S RTP-B19)
10 = SMA connector, for future use
11 = External trigger output
12 = Ref In, Ref Out: reference input and output of the OCXO reference signal
13 = Option slot
14 = Digital data interface (DDI, optional)

AC power supply connector and mains power switch

Connection to the AC power line. The R&S RTP can be used with different AC power voltages and adapts itself automatically to it. The nominal voltage and frequency ranges are displayed on the rear panel and quoted in the specifications document.

If grounding is *not* ensured by the mains system, ground the oscilloscope using the protective earth conductor on the front panel and an appropriate cable.

The AC mains power switch also interrupts the power supply of the OCXO.

When you power up the instrument, be sure to comply with the warm-up phase specified in the specifications document before you start measurements.

See also: Section 3.1.6, "Connecting to power", on page 29.

USB Device
USB 3.0 interface of type B (device USB), to be used for remote control of the instrument.

USB
Two USB type A connectors that comply with standard USB 3.0. They are used to connect devices like keyboard, mouse and flash drive to store and reload instrument settings and measurement data.

Note: Electromagnetic interference (EMI) can affect the measurement results. To avoid any impact, do not use USB connecting cables exceeding 1 m.

LAN
8-pin RJ-45 connector used to connect the instrument to a Local Area Network (LAN). It supports up to 1000 Mbit/s (10/100/1000BASE-T Ethernet).

HDMI
HDMI Version 2.0 connector for an external monitor or projector. The monitor shows the complete content of the instrument's screen.

See also: Section 3.1.8.2, "Connecting external monitors", on page 31.

DisplayPort
DisplayPort connector for an external monitor or projector. It supports DisplayPort version 1.1a.

GBIP
Connector with GBIP interface. For detailed specifications, refer to the specifications document.

Trigger Out
The BNC connector for external trigger output is used to provide the internal trigger signal of the oscilloscope to trigger other instruments for synchronized measurements.

When a trigger occurs, the R&S RTP creates a pulse of 5 V with a source impedance of 50 Ω and delivers it to the external trigger output. The instrument can also send the pulse on mask test violation or violation of measurement limits and margins.

If the connector is terminated with 50 Ω, the signal level is 2.5 V (50 mA). With 1 MΩ termination, the level is 5 V. A short-circuit of the connector to ground creates current of 100 mA.

To enable the trigger out signal, select the "Trigger out" action for the trigger or test. You can adjust polarity and length of the pulse. The default is a positive pulse of 100 ns. The delay is 800 ns.

Ref In, Ref Out
BNC connectors for input of a reference signal, and for output of the OCXO reference signal.

The input frequency ranges from 1 MHz to 20 MHz in 1 MHz steps. The input impedance is 50 Ω.

The output frequency of the OCXO is 10 MHz, the impedance is 50 Ω. For detailed specifications, refer to the specifications document.

DDI 40G
Optional digital data interface for input and output of digital data.

Option slot
Slot to install one of the options R&S RTP-B1 (MSO) or R&S RTP-B1E (for R&S RT-ZVC) if both slots at the front panel are used for other options. To install the option, the R&S RTP-B21 slot adapter is required. The options and their connectors are briefly described in Section 3.2.1, "Front panel", on page 32.

3.2.3 Keys and controls

For an overview of the front panel keys, see Figure 3-1.


3.2.3.1 Power key

The [Power] key is located on the lower left corner of the front panel. It starts up and shuts down the instrument's software.

The light of the key shows the instrument state, see Section 3.1.7, "Switching on or off", on page 29.

3.2.3.2 Trigger controls

The keys and knob in the Trigger functional block adjust the trigger and start or stop acquisition.

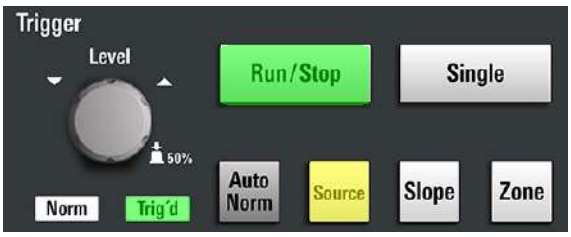

[Level]
The rotary knob sets the trigger level for all trigger types. Turn clockwise to move up the trigger level. Press the knob to set the trigger level to 50% of the signal amplitude.

Remote command:
`TRIGger<t>:LEVel<n>[:VALue]` on page 1471

[Run / Stop]
Starts and stops the continuous acquisition.

The [Run / Stop] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

Remote command:
RUN on page 1395
STOP on page 1395

[Single]
Starts a defined number of acquisitions.

The [Single] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

To set the number of acquisitions, select "Menu" > "Acquire" > "Setup" tab, and set "N-single count".

Remote command:
SINGle on page 1395

[Auto Norm]
Toggles the trigger mode between "Auto" and "Normal". The current setting is shown on the trigger label.

Auto	The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled.
Norm	The instrument acquires a waveform only if a trigger occurs. The "Norm" LED lights up in green.

Remote command:
TRIGger<t>:MODE on page 1534

[Source]
Opens a dialog box where you can select the trigger source. Press the key again to switch the source. The key lights up in the color of the selected trigger source.

Remote command:
TRIGger<t>:SOURce[:SELect] on page 1469

[Slope]
Toggles the trigger slope or trigger polarity, dependent on the trigger type. The current setting is shown on the trigger label.

[Zone]
Opens the overlay menu to configure the zone trigger. A zone trigger combines the trigger condition with the intersection or non-intersection of one or more zones or masks.

Remote command:
TRIGger<t>:ZONE:EXPRession[:DEFine] on page 1538

3.2.3.3 Horizontal controls

The rotary knobs in the Horizontal functional block adjust the horizontal parameters. These settings are effective for all channel waveforms. In addition, a [Zoom] is available.



[Scale]
The rotary knob adjusts the time scale for all signals. The time scale is also known as timebase.

Turn clockwise to stretch the waveforms. Doing so, the scale value *time/div* decreases.

Press the knob to toggle between coarse and fine scale adjustment.

[Position]
The rotary knob changes the horizontal position of the waveform or the position of the reference point on the screen. To set the value to zero, press the knob. The current value is shown in the input box in the upper right corner of the screen.

You can select if the knob changes the position or the reference point in "Menu" > "Settings" > "Frontpanel" > "Knobs".

"Horizontal position" defines the time distance of the reference point from the zero point of the diagram. Turn clockwise to move the waveform to the right.


"Reference point" defines the position of the reference point on the screen. Turn clockwise to move it to the right. The reference point marks the rescaling center of the time scale. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point.

Remote command:
`TIMebase:HORizontal:POSition` on page 1397
`TIMebase:REFerence` on page 1397

[Zoom]
Displays a zoom diagram for the active diagram. The key is illuminated if at least one zoom is active. If you press the key while the zoom function is on, the "Zoom" dialog box opens, where you can configure several zoom areas for detailed signal observation.

3.2.3.4 Vertical controls

The keys and knobs in the Vertical functional block select a signal and adjust the vertical scale and position of the selected signal.

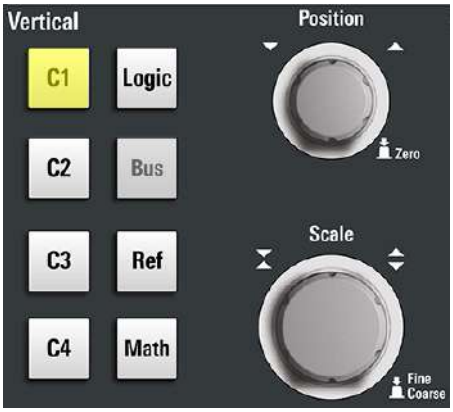

[C<n>]
Turns on and selects a channel. If the channel is active, the key lights up in the corresponding channel color.

The effect of the keypress depends on state of the channel:
- If channel is off: turns on the channel and selects it.
- If the channel is on and in focus (selected): opens the corresponding channel dialog.
- If the channel is on, but not in focus (not selected): selects the channel waveform.
- If the channel is selected, and the dialog is open: turns off the channel, and closes the dialog.

The vertical rotary knobs are focused on the selected waveform. They are illuminated in the color of the selected waveform.

Remote command:
`CHANnel<ch>:STATe` on page 1412

[Logic]
Opens the "Logic" dialog to configure and enable the logic buses L1 to L4. A logic bus (or parallel bus) has up to 16 logic (digital) channels. The key lights up if at least one logic bus is enabled.

[Bus]
Opens and closes the "Protocol" tab in the "Apps" dialog, where you can select the required serial protocol and proceed to the protocol setup. The key lights up if the decoding of a serial bus is active.

[Ref]
Opens the "Reference" dialog box, where you can configure and display reference waveforms. Press the key repeatedly to switch the reference waveform.

If a reference waveform is selected, the vertical rotary knobs are illuminated in white or light gray (default colors), depending on the selected waveform.

[Math]
Opens the "Math" dialog, where you can configure the calculation of mathematical waveforms using various mathematic operations on other waveforms. Press the key repeatedly to toggle the subtabs of the math waveforms. After the last subtab, the key closes the dialog.

If a math waveform is selected, the vertical rotary knobs are illuminated in brown (default color), the brightness of the color depends on the selected waveform.

[Position]
The vertical [Position] knob changes the vertical offset or the position of the selected waveform. The horizontal axis and the selected waveform are moved vertically. You can select whether the knob changes the offset or the position in the "Menu" > "Settings" > "Frontpanel" > "Knobs" dialog.

- Position indicates the vertical location in divisions.
- Offset moves the vertical center of the selected channel to the offset value.

If the selected waveform is a math or reference waveform, serial bus, or logic channel, the knob changes its vertical position.

The knob lights up in the color of the selected waveform. Turn clockwise to move up the waveform. To set the value to zero, press the knob.

The current value is shown in the input box in the upper right corner of the screen.

Remote command:
`CHANnel<ch>:POSition` on page 1411
`CHANnel<ch>:OFFSet` on page 1410

[Scale]
Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The knob lights up in the color of the selected waveform. Turn clockwise to stretch the waveform. Doing so, the scale value V/div decreases. Press the knob to toggle between coarse and fine scale adjustment. For analog waveforms, the scale value is shown in the signal icon.

To get the maximum resolution of the waveform amplitude, make sure that the waveforms cover most of the diagram's height.

Remote command:
`CHANnel<ch>:SCALe` on page 1412

3.2.3.5 Spectrum and User keys



[Spectrum]
Opens and closes the "Math" dialog with FFT settings. The key lights up if an FFT is active.

[Freq Span]
Opens the FFT setup to configure the frequency, span, and other FFT parameters.


[Peak]
Opens the "Peak List" dialog, where you can enable the peak list generation and configure the display of the peak list

[User]
Opens the "Frontpanel" settings dialog, where you can configure the function of the camera key.

3.2.3.6 Analysis keys

The keys in the Analysis functional block provide direct access to measurement and analyzing functions.

The rotary knob provides an alternative way to navigate in dialog boxes and to enter numeric data.

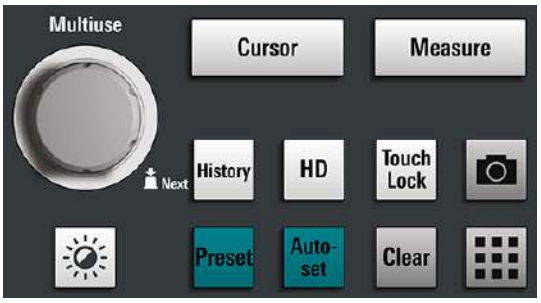

[Multiuse]
The multiuse knob has various functions. It lights up when a function is active on the knob.

- In numeric entry fields: turn to increase or decrease the value.
- To set cursor positions, histogram areas, and mask points in input boxes: press to toggle the parameter, turn clockwise to increase the value or turn counterclockwise to decrease it.
- To move zoom area or gate in diagrams: Turn to move the element that has the focus, and press to toggle the focus.
- In tables: press to activate the edit mode, turn clockwise to increase the value or turn counterclockwise to decrease it, and press to enter the value and move to the next cell.
- To change the intensity: Press the [Intensity] key and turn the knob.

[Intensity]
Adjusts the intensity of the waveforms on the screen, or the background transparency of dialog boxes, or the transparency of result boxes.

Press the [Intensity] key and turn the [Multiuse] knob. Press the [Intensity] key again to toggle between the three settings. The controlled parameter and its value are shown in the input box in the upper right corner of the screen.

[Cursor]
Starts a cursor measurement: displays vertical and horizontal cursor lines in the active diagram, and the results of the cursor measurement.

If you press the key while a cursor measurement is enabled, the "Cursors" dialog opens. The next press closes the dialog.

Cursors are markers which are placed at points of interest on a waveform. The instrument measures the cursor positions and delta values between parallel cursors.

[Measure]
Opens and closes the "Measurements" dialog and the subtab of the last used measurement. In the dialog, you can configure and start automatic measurements.

[History]
Activates the history and opens the history player. The second press opens the player configuration. The history shows stored acquisitions that were acquired before the current one.

The key is illuminated as long as the history is active.

[HD]
Activates the high definition mode and opens the HD settings dialog.

[Touch Lock]
Locks the touchscreen to prevent unintended use. When the touchscreen is off, the key is illuminated. Press again to unlock the touchscreen.

Camera
Performs the action that is assigned to the key in "Menu" > "Settings" > "Frontpanel" > "Hardkeys". By default, the key saves a screenshot of the waveform display.

See also: Section 4.5.1, "Hardkeys: function assignment", on page 98

[Preset]
Resets the instrument to a predefined state and starts the continuous acquisition. All measurements, mask tests, zoom, and most individual settings are deleted, and all channels except for channel 1 are disabled.

You can define preset configurations and save them to a file. The [Preset] key can be configured to set either factory defaults or a user-defined preset configuration.

[Autoset]
The instrument analyzes the enabled channel signals, and adjusts appropriate horizontal, vertical, and trigger settings to display stable waveforms.

[Clear]
Deletes all measurement results including long-term measurement and statistics, all waveforms, and the history.

Apps
Opens the "Apps" dialog, where you can start an application, serial protocol or another analysis function.

3.3 Operating the instrument

There are three ways to operate the R&S RTP.

Manual operation

Use the touchscreen, keys and rotary knobs, or an optional mouse and/or keyboard. The principles of manual operation are explained in this section.

Remote control

Create programs to automatize repeating settings, tests, and measurements. The instrument is connected to a computer that runs the program.

This way of operation is described in: Section 26, "Remote control commands", on page 1319

Remote operation

The remote desktop connection of Windows can be used for instrument control and file transfer. Even on computers with non-Windows operating systems, a remote desktop connection is possible using RDP applications.

For details, refer to the user manual, chapter "Remote Desktop Connection".

Remote monitoring and control of the instrument from a connected computer is also possible with a standard web browser and a LAN connection.

For details, refer to the user manual, chapter "Web Control".

Alternatively, you can use Virtual Network Computing (VNC), which requires installation of the VNC server on the R&S RTP. Installation and configuration are described in the application note "Remote Monitoring and Control of the R&S RTP with a Web Browser", available on the Rohde & Schwarz internet site.

3.3.1 Means of manual interaction

The R&S RTP provides the following means of manual interaction, which you can use alternatively or complementary:

- Touchscreen:
  Using the touchscreen allows for direct interaction with the instrument. Use your finger to place waveforms on the screen, mark areas for zoom, set parameters in dialogs, enter data, and much more. The control elements and actions on the screen are based on common concepts, and you easily become familiar with the user interface.

  Tapping the screen works like clicking mouse buttons:

  – Tap = click: Selects a waveform or parameter, or provokes an action.
  – Double-tap = double-click: Has the same effect as touch and hold, it opens the on-screen keyboard or keypad, or a specific editor if available.

  Use gestures to scale the waveform:

  – Spread or pinch two fingers horizontally to change the time scale.
  – Spread or pinch two fingers vertically to change the vertical scale of the active waveform.
- Function keys and rotary knobs:
  The front panel provides frequently used functions and controls to operate the instrument. Use knobs to set levels and scales, and keys to initiate actions and to open dialogs.
- Optional mouse and/or keyboard
  These devices work in the normal manner.

3.3.2 Touchscreen display

3.3.2.1 Information on the display

The touchscreen of the instrument shows the waveforms and measurement results, and also information and everything that you need to control the instrument. All waveform-related display elements are shown in Figure 3-3. An overview of control elements - like dialog box, toolbar - is given in Section 3.3.2.2, "Control elements on the touchscreen", on page 49.



Figure 3-3: Display information

1 = Diagram
2 = Grid
3 = Trigger position
4 = Reference point (distance from trigger position to reference point = horizontal position)
5 = Trigger, horizontal and acquisition label
6 = Notifications
7 = Zoom area
8 = Zoom diagram
9 = Trigger level
10 = Signal bar with inactive waveforms (10a), minimized live waveform (10b) and signal icon with vertical settings (10c)
11 = Histogram area
12 = Histogram

Diagram

A diagram shows one or more waveforms: channel, reference, and math waveforms together with histograms, masks etc. Zoom details, XY-waveforms, spectra and other special waveforms are shown in separate diagrams.

By default, the diagram name contains the diagram number and the short names of the waveforms shown inside. To change the diagram name, touch and hold the tab name. The on-screen keyboard opens to enter the new name. Names must be unique.

To arrange the diagrams on the screen, the Rohde & Schwarz SmartGrid function helps you to find the target place simply and quickly. For details, see Section 3.3.5, "Rohde & Schwarz SmartGrid", on page 54. You can also adjust the diagram size by dragging the diagram border.

Grid
The grid shows the vertical and horizontal divisions. The division lines are labeled with the correspondent values. The grid labels have the color of the waveform to which they belong. If several waveforms are shown in one diagram, the grid has the color of the selected waveform.

Trigger position and trigger level
The blue markers show the horizontal position of the trigger and the vertical trigger level. You can touch and move the trigger markers in the diagram to set the positions. The trigger point is the zero point of the diagram.

The trigger position can be moved outside the diagram. A red trigger position marker indicates that the trigger position is not visible.

Trigger, Horizontal, Acquisition
The "Trigger", "Horizontal" and "Acquisition" labels show the main timebase and trigger settings. If you tap a label, the relevant dialog box opens.

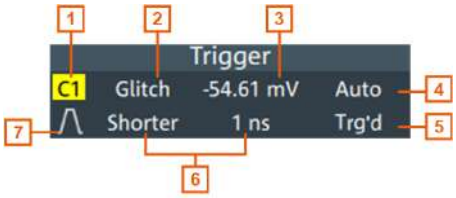


Figure 3-4: Trigger label on the toolbar

1 = Trigger source
2 = Trigger type
3 = Trigger level
4 = Trigger mode
5 = Trigger state
6 = Trigger slope




Figure 3-5: Horizontal label on the toolbar

1 = Time scale
2 = Horizontal position



Figure 3-6: Acquisition label on the toolbar

1 = Sample rate
2 = Record length
3 = Decimation
4 = Number of acquired waveforms

Reference point
The reference point marks the rescaling center. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point.

You can define the position of the reference point ("Menu" > "Horizontal" > "Reference point"), and also its time distance from the trigger point of the diagram (Position knob).

Notification
The "Notification" button on the toolbar points to the status messages of the instrument. To open the message box, tap the button. See also: Section 3.3.10, "Instrument information and notifications", on page 68.

Zoom diagram and zoom area
Zoomed waveforms are shown in separate zoom diagrams, in addition to the waveform diagrams. On the original waveform diagram, a rectangle indicates the zoomed section of the waveform - this is the zoom area. You can modify the zoom area by dragging the rectangle as a whole, and by dragging its edges. To toggle between these modes, tap the zoom area. You can also set exact positions.

The frames of the zoom area and of the associated zoom diagram have the same color, different zooms are marked with different colors. So it is easy to assign zoom area and zoom diagram.

As for waveform diagrams, you can change the name of the zoom diagram. A zoom in a zoom and coupled zooms are also possible.

For details, see Section 7.1, "Zoom", on page 266.

Signal bar
The signal bar is the control center for all waveforms. All enabled waveforms are shown on the left side of the signal bar. On the right side of the signal bar, you see the signal activators of inactive waveforms. Tap a signal activator to enable the waveform.

Each waveform is represented by a signal icon. If the waveform is shown in a diagram, the signal icon displays its main vertical and acquisition settings. If you tap a signal icon, the dialog with vertical settings for this waveform opens. If you tap the "Minimize" icon on the signal icon, the waveform switches from the diagram area to the signal icon: the icon shows the real-time signal preview. See Section 3.3.4, "Working with waveforms", on page 52 for a detailed description.

In Figure 3-3, the signal icons C1 and C2 show the main settings, and the waveforms are displayed in diagrams. Other waveforms are minimized and shown as signal preview.

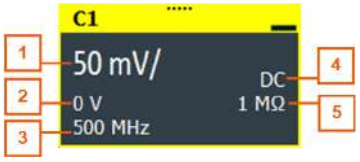


Figure 3-7: Signal label

1 = Vertical scale
2 = Offset
3 = Bandwidth
4 = Coupling
5 = Termination

If the signal bar contains many signal icons, and not all icons are visible, touch one of the icons and scroll left or right until the required icon appears.

You can also switch off the signal bar: "Menu" > "Settings" > "Appearance" > "Diagram" > "Show signal bar".

Histogram and histogram area
A histogram shows the frequency of occurrence of voltage or time values in a bar chart directly in the diagram. The rectangular histogram area indicates the part of the waveform that is considered in the histogram. The vertical histogram counts the voltage values, and the horizontal histogram counts time values. You can switch between vertical and horizontal mode, and modify the histogram area by dragging the rectangle as a whole, by dragging its edges, or by setting exact positions.

3.3.2.2 Control elements on the touchscreen

The touchscreen provides everything you need to control the instrument, to analyze waveforms, and to get measurement results. Figure 3-8 shows the control elements at a glance.



Figure 3-8: Control elements on the touchscreen

1 = Toolbar
2 = Tab in a dialog box
3 = Dialog box
4 = Result table (docked)
5 = Signal bar
6 = Menu
Not shown = Input box

Toolbar (1)
The icons on the toolbar provide quick and easy access to the most important functionality. For a detailed description, refer to Section 3.3.6, "Toolbar", on page 56.

If you adjust the settings of an analyzing function, e.g., cursor measurement, the overlay menu is shown instead of the icons. The overlay menu provides the most important settings of the current action. If you need more settings, "Advanced Setup" opens the corresponding dialog box.

Dialog box (2, 3)
The tabs of the dialog boxes contain all task-oriented settings and operations, and black buttons for calling related tabs. The usage of dialog boxes is described in Section 3.3.8, "Using dialogs", on page 65.

Result table (4)
If you perform cursor or automatic measurements, mask testing, or a search, the result table shows the results of the action. The position of the result table is adjustable. It can be docked (default for measurements), floating, minimized to a result icon on the signal bar, or displayed in a separate diagram on the screen.

See also: Section 3.3.7, "Displaying results", on page 63.

Signal bar (5)
The signal bar summarizes all waveforms as described in "Signal bar" on page 48.

Menu (6)
The menu provides access to the complete functionality of the R&S RTP.

Input box
The input box appears if you adjust a value using one of the rotary knobs, or if you drag an element on the screen, for example, a cursor line. The input box shows the current value of the modified parameter. You can enter the exact numerical value, change the step size, and - if available - autoset the value directly in the input box. The box title shows the name of the currently adjusted parameter.



See also: Section 3.3.9, "Entering data", on page 66.

3.3.3 Applications

All available applications for special tasks are provided in the "Apps" dialog.

► To open the "Apps" dialog:

- Open "Menu" > "Apps".
- Press the app key on the frontpanel.



3.3.4 Working with waveforms

The R&S RTP can create and display many waveform types. The most importand are:

- Channel waveforms:
  Up to three waveforms per input channel can be shown. For a four-channel instrument, 12 channel waveforms are available.
- Reference waveforms:
  Four waveforms can be used as reference for comparison and analysis.
- Math waveforms:
  Eight mathematic waveforms can be created with mathematic operations performed on channel, reference, and other math waveforms.
- Zoom waveforms:
  Show the details of waveforms.
- XY-waveforms:
  Four XY-waveforms can be created. Each XY-waveform is built from the voltage values of two source waveforms.
- Digital waveforms:
  The Mixed Signal Option R&S RTP-B1 provides 16 digital channels grouped in two logic probes (pods) with 8 channels each.

Waveform handling

The R&S RTP can show and analyze many waveforms. To handle this multitude while keeping track of it, the R&S RTP provides intelligent support:

- The color system helps to distinguish the waveforms. The color of the vertical rotary knobs indicates the signal that is focused (selected). The color of each waveform can be changed, the color of its signal icon and of the illuminated keys is adjusted to the new color. Alternatively, a color table can be assigned to a waveform.
  Settings: "Menu" > "Settings" > "Appearance" > "Colors" tab.
- Waveforms can be minimized to signal icons showing a real-time signal preview. Thus, more space in the diagram area is available without switching off waveforms.
- Diagrams are displayed on tabs – you can arrange them side by side or one above the other. To change the diagram name, double-tap the tab name.
- The Rohde & Schwarz SmartGrid function helps to arrange the diagrams.

Waveform states

Depending on its place on the screen and the effect of settings, a waveform has one of the following states:

- Off
- Active: The waveform is shown in a diagram.
- Selected:
  One of the active waveforms that has the focus. In each diagram, one of the assigned waveforms is selected – it appears "on top" in the diagram, and the grid labels have the color of the selected waveform. Some of the toolbar functions, like cursor and histogram measurements, are performed on the selected waveform. All waveform-specific settings are applied to the selected waveform of the selected diagram.
  The vertical [Position] and the [Scale] knobs are illuminated in the color of the selected waveform.
  In Figure 3-3, C1 is the selected waveform: The frame of the diagram and the signal icon are highlighted.
- Minimized:
  The waveform is shown as real-time signal preview in its signal icon.

To switch a waveform on

A channel waveform is activated as soon as you connect the probe. You can switch it on and off according to your needs.

► Choose one of the following ways:

  - Press the channel key.
  - Tap the signal activator on the right side of the signal bar.
  - In the "Vertical" dialog box, select the channel and tap "Channel" > "On".

  The waveform is now active, selected, and is shown in the diagram.

Remote command: `CHANnel<ch>:STATe` on page 1412

To select a waveform

► Choose one of the following ways:

- Tap the waveform in the waveform diagram.
- To select a channel, reference, or math waveform, press the corresponding key.
- Tap the signal icon.

Note: Zoom waveforms in zoom diagrams cannot be selected.

To minimize a waveform

► Choose on of the following ways:

- Tap the "Minimize" icon in the upper right corner of the waveform's signal label in the signal bar.
- Drag the waveform from the diagram to the signal bar.

The waveform disappears from the diagram and the signal preview is shown in the signal icon.

Remote command: `LAYout:SIGNal:UNASsign` on page 1372

► To set the waveform back to its previous diagram immediately, use "Undo".

To arrange a waveform using the SmartGrid

See Section 3.3.5, "Rohde & Schwarz SmartGrid", on page 54.

To switch off a waveform

► Do one of the following:

- To switch off a signal preview, tap the "Close" icon in the upper right corner of the minimized signal view.
- Disable "Channel" in the "Vertical" > "Setup" tab.
- Tap the "Delete" icon (Recycle bin) in the toolbar, and then the waveform.
  If several waveforms overlap or lie close together, the upper (selected) waveform is switched off.

Remote command: `CHANnel<ch>:STATe` on page 1412

3.3.5 Rohde & Schwarz SmartGrid

The Rohde & Schwarz SmartGrid helps to create and arrange the diagrams on the screen with drag&drop. The diagram layout depends on the position where you drop the signal icon, in relation to an existing diagram.

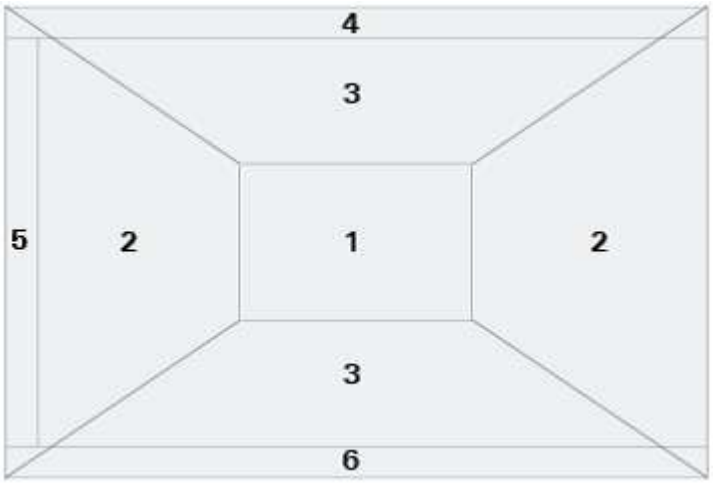


Figure 3-9: SmartGrid positions


1 = In the existing diagram, overlay of signal
2 = New diagram on the left or right
3 = New diagram above or below
4 = New diagram on top of the existing diagram
5 = XY-diagram
6 = YX-diagram

The diagram configuration is deleted when you use [Preset] and `*RST`.

To arrange a waveform using the SmartGrid

You can arrange waveforms in one of the existing diagrams, or in a new diagram.

1. Drag the signal icon to the diagram area, and move it around.
   The Rohde & Schwarz SmartGrid appears and a blue area shows where the waveform will be placed.
2. Drop the waveform in the target area.
   The waveform appears in an existing or in a new diagram, and it is selected for further actions.

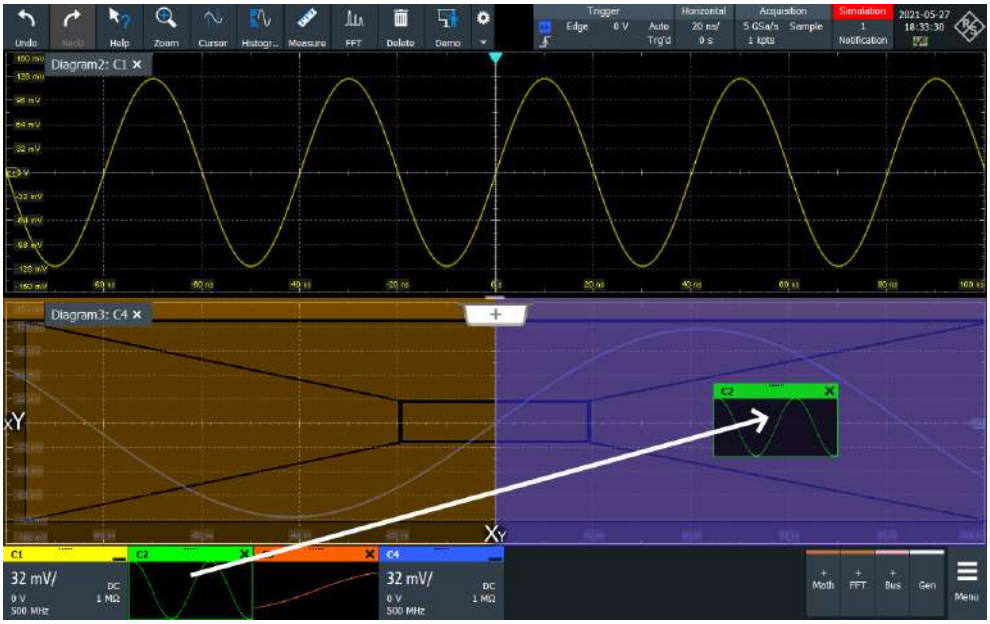

3. To change the size of a diagram, tap the handle between two diagram frames and drag it to the required position.
4. To rename a diagram, double-tap its name in the tab and enter a name.

Remote commands: see Section 26.7.2.4, "Smartgrid", on page 1368.

3.3.6 Toolbar

The toolbar provides direct access to important control and measurement functions.



By default, the toolbar shows the most frequently used functions. You can configure the content of the toolbar, see Section 3.3.6.2, "Configuring the toolbar", on page 57.

3.3.6.1 Using the toolbar

Using the toolbar is easy and straightforward.

Some of the toolbar functions are one-click actions. These actions are performed immediately when you tap the icon.

Other toolbar functions are analyzing functions. These functions are interactive actions.

To use analyzing functions (interactive actions)

1. If several waveforms are shown in the diagram, select the waveform that you want to analyze.

See: "To select a waveform" on page 54

2. Tap the icon of the function in the toolbar.
   If there are many functions on the toolbar, and not all icons are visible, scroll the toolbar using the arrow on the right end of the toolbar.
3. Check and adjust the settings in the overlay menu.



4. To define the analyzed area, do one of the following:
   - Tap the required diagram.
   - Drag a rectangle on the diagram.

3.3.6.2 Configuring the toolbar

You can configure the content of the toolbar so that only the required functions are displayed. The toolbar configuration is part of the user preferences. It is retained when you switch off and on the instrument, and you can save it in the user preferences and user-defined preset.

1. To open the toolbar configuration, tap the icon in the toolbar:

2. Select the required toolbar functions:
   - Disable the functions that you do not need.
   - Enable the functions that you want to add to the toolbar.
3. Close the dialog.

A detailed description of the toolbar functions is given in Section 3.3.6.3, "Toolbar functions", on page 58.

3.3.6.3 Toolbar functions

This section describes all toolbar functions in detail.



One-click actions	Interactive actions
Undo	Zoom
Redo	Search
Help	Cursor
Recall	Mask Test
Save	Histogram
Image	Measure
Report	Quick meas
Clear	FFT
Autoset and Preset	Annotate
Run / Stop and Single	Save Reference
Find Level	Save Waveform
Force Trigger	Zone trigger
Demo	Spectrogram (option R&S RTP-K37)

One-click actions	Interactive actions
Advanced Eye (option R&S RTP-K136/K137)	Delete
Signal Config	
Ext. FE (option R&S RTP-K553)	



You can configure the content of the toolbar, see Section 3.3.6.2, "Configuring the toolbar", on page 57.

The following list describes at first the default toolbar functions and then the additional functions.



Undo
Undoes the last setting actions step by step. Some actions cannot be revoked: locking the touchscreen with [Touch Lock], and saving data. The undo stack is deleted during the following actions: Reloading settings from file, reference waveform actions (save, load and preset with active reference waveform), and some actions that require an internal realignment to ensure correct measurements.



Redo
Recovers the undo steps in reverse order.



Help
Enables the tooltip display. A short description appears when you tap a parameter in a dialog. To open the corresponding help topic, tap the "Show Help" button in the lower right corner of the tooltip. See also: Section 3.3.11, "Getting help", on page 69.



Recall
Opens a window to select and load instrument settings that were previously stored in a saveset. A graphical preview helps you to find the required settings.



Save
Saves the current instrument settings in a saveset.

You can reload the saveset using the "Recall" toolbar icon, or using "Menu" > "Save/Recall" > "Recall" tab > "Saveset with preview".

The filename is created according to the autonaming pattern, defined in "Menu" > "Settings" > "Save/Recall" > "Autonaming" tab.



Image
Saves a screenshot of the current display using the settings defined in "Menu" >"Save/Recall" > "Save" tab > "Screenshot".



Report
Creates a report of the current measurement settings and results using the settings defined in "Menu" > "Save/Recall" > "Save" tab > "Report".



Clear
Deletes all measurement results including long term measurement and statistics, all waveforms, and the history.

Remote command:
`DISPlay:CLR` on page 1390



Autoset and Preset
Performs an autoset, or a preset to a default state. The icons have the same functionality as the corresponding keys on the front panel. They are useful when you operate the instrument remotely.



Run / Stop and Single
Starts and stops the continuous acquisition, or starts a defined number of acquisition cycles. The icons have the same functionality as the corresponding keys on the front panel. They are useful when you control the instrument remotely.



Find Level
Analyses the signal and sets the trigger level to the middle of the signal peaks.



Force Trigger
Starts an immediate single acquisition. If the acquisition is running in normal mode and no valid trigger occurs, use "Force Trigger" to confirm that a signal is available. Then you can use the displayed waveform to determine how to trigger on it.



Demo
Opens the "Demo" dialog, where you can find examples of operating the R&S RTP.



Ext. FE (option R&S RTP-K553)
Opens the "External Frontend" dialog.

See Section 23.3, "Settings for external frontend control", on page 1252.



Advanced Eye (option R&S RTP-K136/K137)
Opens the "Eye analysis" dialog to set set up the advanced eye analysis.

See Section 20.2, "Eye diagram setup", on page 1158.



Signal Config
Opens the "Signal Configuration" dialog to set up a signal according to the used serial standard, or a user-defined signal up to PAM-8.

See Section 13, "Signal configuration", on page 535.



Zoom
Creates a zoom. Tapping the icon opens the overlay menu, where you select one of the four zoom types: standard zoom, hardware zoom, coupled zoom, fingertip zoom.



Standard zoom ← Zoom
Displays a magnified section of the diagram in an additional zoom diagram. It is a display zoom, instrument settings are not changed.

Touch and hold the zoom area to open the "Zoom" dialog box.

Remote command:
LAYout:ZOOM:ADD on page 1543



Hardware zoom ← Zoom
Changes the instrument settings - horizontal and vertical scales as well as trigger level and offset - to display a part of the diagram in greater detail.



Coupled zoom ← Zoom
Creates a coupled zoom area and its related zoom diagram. If you change the size of one zoom area, the size of all coupled zoom areas is changed as well.

Remote command:
LAYout:ZOOM:ADDCoupled on page 1543



Fingertip zoom ← Zoom
Magnifies the waveforms around your fingertip.

Tap the icon and put your finger on the waveform. The touched part of the waveform is displayed in a magnifier. Drag your finger on the screen to move the magnifier. You can change the zoom factor using the [Multiuse] knob.



Search
Performs a search according to the settings in the "Search Setup" dialog box. Tap the icon and then tap the diagram with the waveform to be searched, or drag a rectangle to define a search gate. The search is performed on the selected waveform.



Cursor
Performs a cursor measurement. Tapping the icon opens the overlay menu, where you select the cursor type and source.

Tap the diagram where you want to set the cursors, or draw a rectangle in the diagram to position the cursor lines. The resulting cursor lines measure the selected waveform, and the results are shown.



Mask Test
Starts the on-screen mask definition and the testing against the defined mask.

Tap the icon and then tap the points that build the mask. To finish the shape definition, tap "Finish segment" in the overlay menu. To create a rectangular mask, draw a rectangle on the screen. You can add more segments to the test, and add another test. You can also move the mask segments on the screen.

To configure the mask test settings, tap the icon in the "Mask" result box.



Histogram
Creates a histogram. Tapping the icon opens the overlay menu, where you select the histogram type and source.

Drag a rectangle on the diagram to define the histogram area. The histogram for the selected waveform appears.

To change settings, touch and hold the histogram area, and the histogram overlay menu opens.



Measure
Performs automatic measurements. Tapping the icon opens the overlay menu, where you select the category, the measurement types and measured waveform. Tap the diagram with the waveform to be measured. To define a measurement gate, draw a rectangle on the screen.

You can run up to 8 automatic measurement groups in parallel. The "Measure" icon starts the measurement groups one after the other. A measurement group consists of minimum one measurement, and can consist of many measurements of the same category.

To modify the measurement, double-tap one of the result values.



Quick meas
Performs a set of measurements on the selected waveform or on the selected gate. You can configure up to 8 measurements to be included in quick measurement.

Tap the icon and then tap the waveform to be measured or draw a rectangle to define the gate.



FFT
Transforms a waveform to the frequency spectrum by fast Fourier transform (FFT). The FFT trace is shown in a new diagram.

Tap the icon and adjust the settings in the overlay menu. Select the source of the spectrum in the overlay menu. The FFT diagram is created from the selected waveform.

To adjust FFT settings, double-tap the FFT diagram.



Annotate
Defines a waveform label that names or explains the waveform. Tap the icon and then tap the waveform to be labeled. Enter the label text using the on-screen keyboard. The text is shown in the same color as the waveform. If you tap the display background, the label is assigned to the focused waveform. You can drag the label to another position.



Save Reference
Copies the selected source waveform with all its settings to the reference waveform. If the acquisition is running, the reference waveform is a snapshot. You can configure up to four reference waveforms.

Tap the icon, and select the required reference waveform (R1 to R4) in the overlay menu. Tap the waveform to be copied.



Save Waveform
Exports the waveform data to file using the settings defined in "Menu" > "Save/Recall" > "Save" tab > "Waveform" > "Setup" tab.

The filename is created according to the autonaming pattern.

Tap the icon and then tap the waveform to be exported. If you tap the display background, the focused waveform is exported, or a multichannel export is performed if configured.



Zone trigger
Defines a zone trigger, which combines the trigger condition with the intersection or non-intersection of one or more zones or masks.

Tap the icon and then tap the corner points of the zone on the screen. Tap "Finish zone". You can add more zones to the trigger condition.



Spectrogram (option R&S RTP-K37)
Starts an FFT and the spectrogram. The FFT trace and the spectrogram are shown in separate diagrams.

Tap the icon. Select the source in the sidebar, or tap diagram with the waveform to be transformed. The diagrams are created from the selected waveform.



Delete
Removes waveforms, measurements, zoom, histograms, mask segments and other elements from the display.

Tap the icon and then tap the element to be deleted, or the waveform to be switched off.

3.3.7 Displaying results

The results of measurements, mask tests, searches, protocol decoding and others are displayed immediately. There are several places to display the results:

- In a table that is docked below the diagram (only for measurement and decode results)
- In a floating result box in front of the diagrams, which you can move on the display
- In a minimized view (result icon) on the signal bar
- In a separate tab that can be arranged similar to a diagram

The default position and the font size can be adjusted.

To define the default position of measurement results

For results of automatic, cursor and protocol measurements and for decode results, the docked table below the diagram is the initial default position.

To change the default position of the results:

► Open the "Menu" > "Settings" > "Appearance" dialog.

- Automatic measurements: select "Measurement" tab > "Result position".
- Cursor measurements: select "Cursor" tab > "Result position".
- Protocols: select "Protocol" tab > "Result position".

Mask test and search results are always shown in a floating result box, which you can drag to a convenient position using the SmartGrid.


To arrange the results on the display

1. If the results are listed in a docked table, touch and hold a result line and drag it.

The results are now shown in a floating result box.

Note: Once you undock the measurement results, you cannot move the result box back to the docked position.

2. Touch and hold the title of the result box and drag the box on the screen. The SmartGrid indicates where the result box will be placed.
   - If you drop the box on one of the buttons, the results are shown in a separate tab besides, above, or below the diagram.
   - If you drop the box on the signal bar, a result icon is created.
   - If you drop the box somewhere else, the floating result box is placed there.

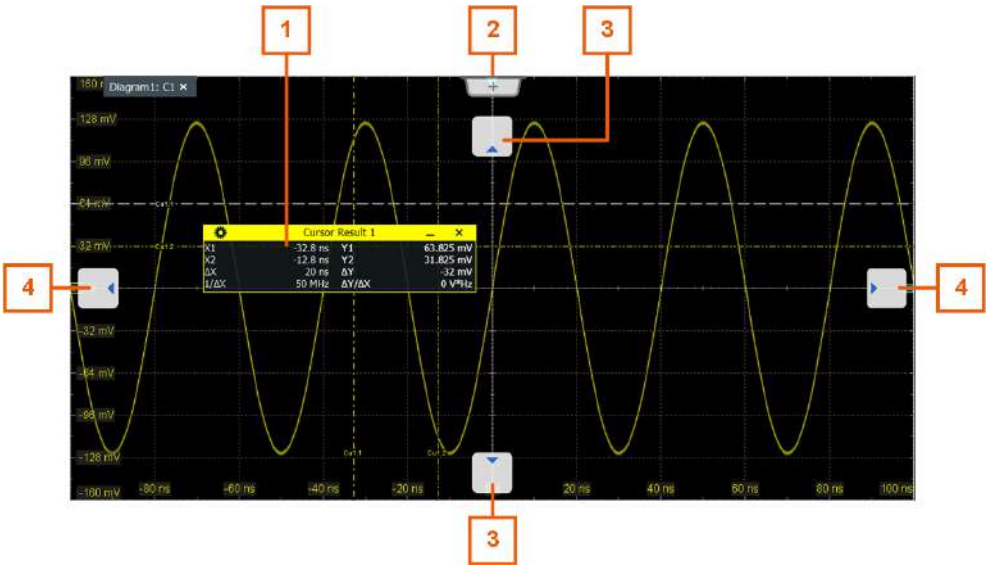

1 = Floating result box
2 = New tab
3 = Table in a tab above or below
4 = Table in a tab on the left or right

To open the corresponding settings

1. Double-tap one of the result values.
   If a result box is shown, you can also tap the ⚙ icon.

   The overlay menu appears and provides the most important settings.

2. In the overlay menu, tap "Advanced Setup".

   The corresponding dialog opens.

To adjust the font size of results

1. Open the "Menu" > "Settings" > "Appearance" dialog.
2. Select the "Dialogs" tab.
3. Set the "Result dialog" > "Font size".

3.3.8 Using dialogs

Dialogs provide groups of related settings and allow to make selections and enter data in an organized way.

To open a dialog

► Perform one of the following actions:

- Open the "Menu", and select the menu entry.
- Press the function key on the front panel.
- If the signal bar is open, tap "Advanced Setup".
- To open the "Vertical" dialog of a waveform, tap the signal icon.
- Tap the "Horizontal", "Acquistion" or "Trigger" label to open the corresponding dialog.

For direct access to important control and measurement functions, use the toolbar, see Section 3.3.6, "Toolbar", on page 56.

Each dialog has four icons in the upper right corner:

	Go back: opens the previously opened dialog box.
	Go forward: opens the next dialog box.
	Minimizes the dialog box to a small box that only contains the last selected function.
	Closes the dialog box.


To minimize a dialog

If you want to change only one setting during analysis, and you need to change it often, you can display a small box that only contains the required setting.

1. Open the dialog.
2. Tap the setting that you need to modify.
3. Tap the "Minimize" icon in the upper right corner of the dialog box.

   The dialog box turns into a small box that contains only the setting, that was last selected.

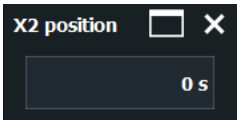

4. To restore the complete dialog box, tap the "Maximize" icon in the small box.



3.3.9 Entering data

To set parameter values and enter other data, you use the various knobs and the on-screen keypad or keyboard.

Using scale, position and level knobs

The instrument has dedicated rotary knobs to set vertical and horizontal positions and scales, and the trigger level. When you turn a knob, the input box opens in the upper right corner of the screen, showing the parameter name and current value.

1. Turn the knob to change the value.
2. Press the knob:
   - [Scale]: toggles the increment.
   - [Position]: sets to zero.
   - [Level]: sets the trigger level to 50% of the signal.
3. The input box also has settings:
   - Tap the "Steps" icon to toggle the increment.
   - Tap the "Reset" icon to set the parameter to the autoset value (if available).



To enter values with the on-screen keypad

To enter numeric values and units in dialogs, the touchscreen provides an on-screen keypad. For text input, the on-screen keyboard with English key layout is used.


1. Double-tap the entry field.
   The on-screen keypad opens.



2. Enter the numeric value using one of the following methods:
   - To use the default value, tap "Reset" (if available).
   - To use the minimum or maximum value, tap "Min" or "Max", respectively.
   - To increase the displayed value in fixed steps, tap "Inc".
     To decrease the value in fixed steps, tap "Dec".
     To toggle between small steps and large steps, tap the "Steps" icon.
   - To get the value that was used before the keypad opened, tap "Cur".
   - To enter a user-defined value, tap the numbers and complete the entry by tapping the unit button.
     – The arrow buttons move the cursor left or right.
     – "Bksp" deletes the last character before the cursor.
     – "±" changes the sign of the value.

To enter data with the on-screen keyboard

1. Double-tap the entry field to open the on-screen keyboard.
   If available, you can also tap the keyboard icon on the right of the entry field.

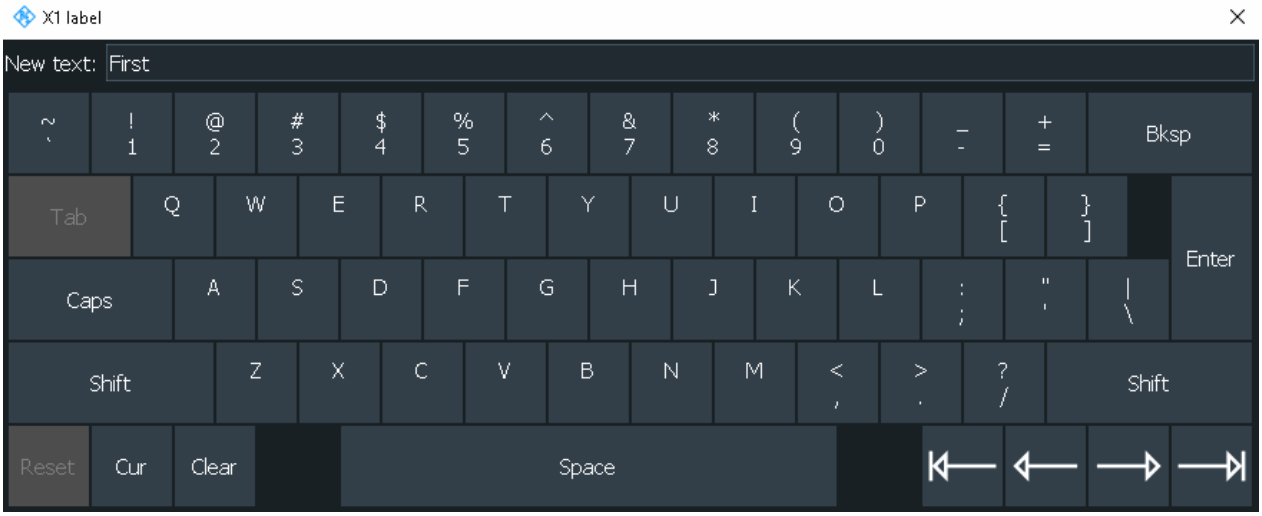


2. Enter the text as you would do on a normal keyboard.
   - To enter a series of capital characters, tap "Caps".
     To enter one capital character, tap "Shift".
   - To get the value that was used before the keyboard opened, tap "Cur".
   - The arrow buttons move the cursor left or right.
   - "Bksp" deletes the last character before the cursor.
3. Tap "Enter" to complete the entry.

3.3.10 Instrument information and notifications

In the upper right corner of the screen, you see the Rohde & Schwarz logo, date and time, the symbolic information on LAN connection and the notifications status.


► To see the instrument information, tap the Rohde & Schwarz logo.

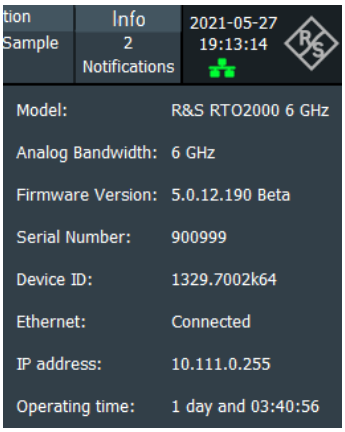

Notifications are status messages, information on mismatching settings and similar information. They are displayed for a few seconds and saved.

The color of the dot before the text indicates the severity: gray for information, orange for warnings, and red for errors.

► To read the notifications, tap "Notification".
You can also delete the list of notifications.

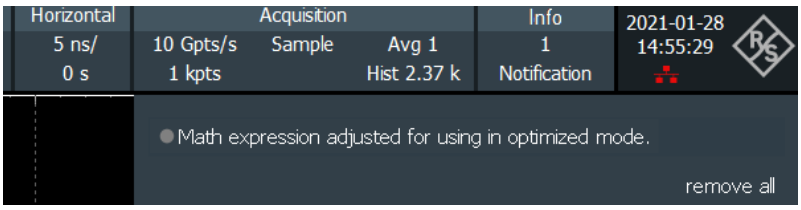

1. To hide the date and time, open "Menu" > "Settings" > "Appearance" > "Diagram" tab.
2. Disable "Show date / time".

3.3.11 Getting help

If you need information on the instrument's functionality, you can use the following sources:

- Tooltips give a short description of the parameter.
- The context help provides functional description on a setting, and the corresponding remote command.
- The general help opens the help window with a table of contents, where you can browse and search for information.
- Videos explain various analyzing and measurement tasks.
They are available in the R&S®RTP - Media Center.

3.3.11.1 Displaying help

To display tooltips and context help

1. Enable the "Help" icon on the toolbar.



2. Tap the parameter for which you need information.

   The tooltip opens.

3. To open the corresponding help topic, tap the "Show Help" button in the lower right corner of the tooltip.

   The "Help" window opens and displays the comprehensive description and the corresponding remote command. You can browse the help for further information.

Note: The "Help" icon disables automatically when you tap a parameter. To show another tooltip, tap the "Help" icon again.

To open general help

1. Open the "Menu".
2. Tap the "Help" icon.

   The help window opens with the "Contents" page, where you can select the topics.

3.3.11.2 Using the Help window

The Help window contains several tabs:

- "View" - shows the selected help topic
- "Contents" - contains a table of help contents
- "Index" - contains index entries to search for help topics
- "Search" - provides text search



The Help toolbar provides some buttons:

- To browse the topics in the order of the table of contents: up arrow = previous topic, down arrow = next topic
- To browse the topics visited before: left arrow = back, right arrow = forward
- To increase or decrease the font: magnifier with + or - sign, respectively



To navigate the Help, use the touchscreen.

To search for a topic in the index

The index is sorted alphabetically. You can browse the list, or search for entries in the list.

1. Switch to the "Index" tab.
2. Select the "Keyboard" icon besides the entry field.
3. Enter the first characters of the keyword you are interested in.

   The entries containing these characters are displayed.
4. Double-tap the suitable index entry.

   The "View" tab with the corresponding help topic is displayed.

To search topics for a text string

1. Switch to the "Search" tab.
2. Select the "Keyboard" icon besides the entry field.

3. Enter the string you want to find.
   If you enter several strings with blanks between, topics containing all words are found (same as AND operator).

   For advanced search, consider the following:
   - To find a defined string of several words, enclose it in quotation marks. For example, a search for *"trigger qualification"* finds all topics with exactly *"trigger qualification"*. A search for *trigger qualification* finds all topics that contain the words *trigger* and *qualification*.
   - Use "Match whole word" and "Match case" to refine the search.
   - Use operators AND, OR, and NOT.


To close the Help window

► Select the "Close" icon in the upper right corner of the help window.

4 Instrument setup

Access: "Settings" menu > "Settings" dialog.

In the "Settings" dialog, you can adapt various instrument settings to your requirements, such as language, display appearance, and assign functions to some keys.

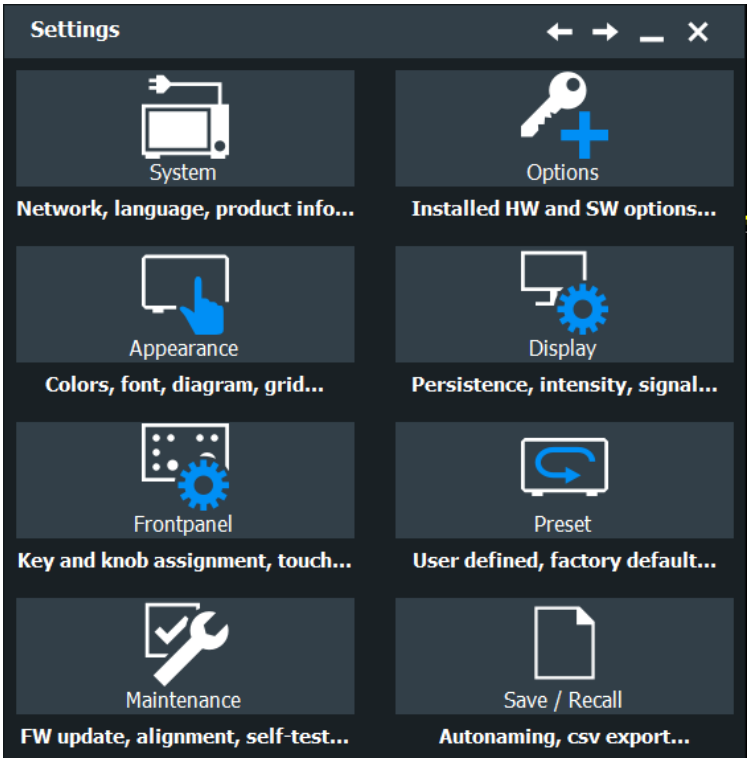

The following settings and procedures are described in the current chapter:


- System settings....72
- Option settings....76
- Appearance settings....79
- Display settings....94
- Frontpanel settings....98
- Preset setup....102
- Maintenance settings....104
- Save / recall....108

4.1 System settings

In the "Settings" > "System" dialog box, you find all instrument, firmware and network related information. Here you can also set the language that is used in the dialogs.

4.1.1 About settings

Access: "Menu" > "Settings" > "System" > "About"

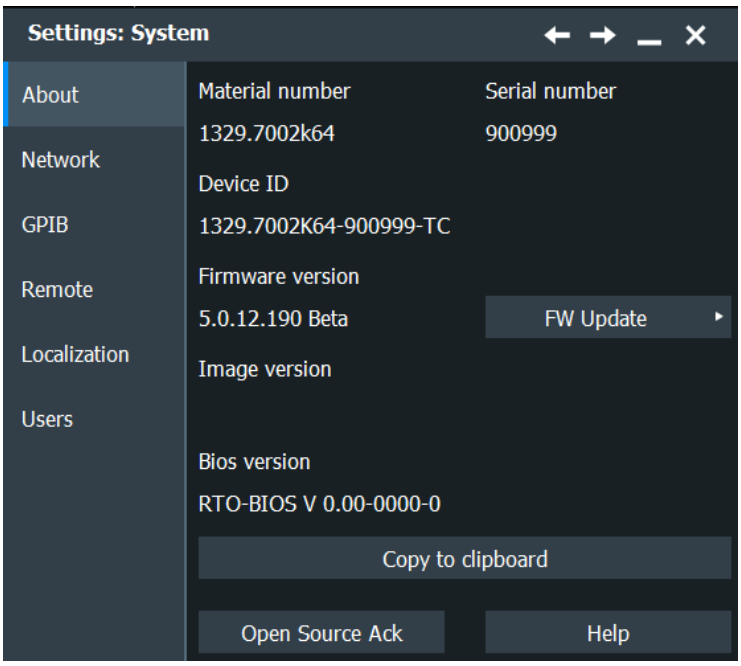

FW Update
Opens the Firmware update dialog box.


Copy to clipboard
Copies the instrument information, which you see in the dialog box, to the clipboard.

Open Source Ack
Opens the open source acknowledgment document, which provides verbatim license texts of the used open source software.

Help
Opens the help window with a table of contents, where you can browse and search for information.

4.1.2 Network settings

Access: "Menu" > "Settings" > "System" > "Network"

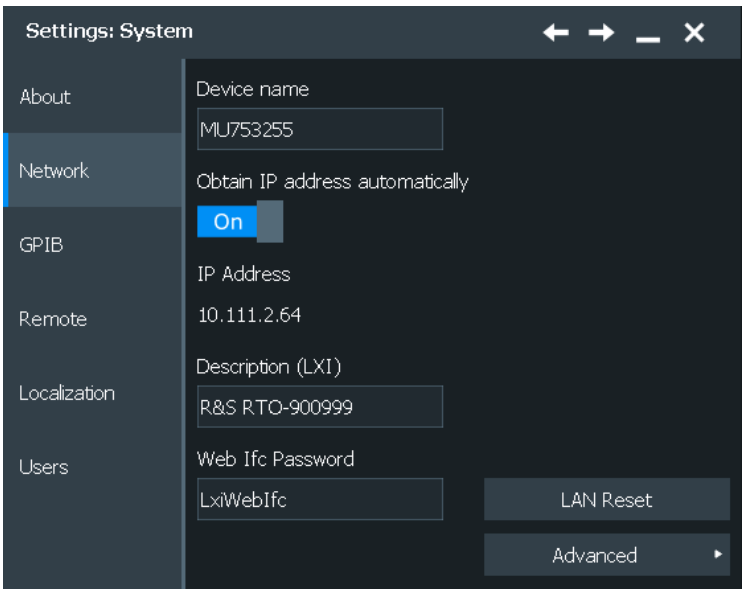

Device name
Indicates the currently defined computer name, the defined IP address and DHCP address enabling. These values are required to configure the instrument for work in a network.

NOTICE! Risk of network problems. All parameters can be edited here; however, beware that changing the device name has major effects in a network. For details, see Section 25.2, "Setting up a network (LAN) connection", on page 1288.

Remote command:
`DIAGnostic:SERVice:COMPutername` on page 1363

Obtain IP address automatically
If enabled, the IP address of the oscilloscope is obatained automatically.

IP Address
Indicates the currently defined computer name, the defined IP address and DHCP address enabling. These values are required to configure the instrument for work in a network.

Description (LXI)
Instrument description of the R&S RTP.

Web Ifc Password
Password for LAN configuration. The default password is *LxiWebIfc*.

LAN Reset
Resets the LAN configuration to its default settings using the network configuration reset mechanism (LCI) for the instrument. The following parameters are reset:

Parameter	Value
TCP/IP mode	DHCP + auto IP address
Dynamic DNS	Enabled
ICMP ping	Enabled
Password for LAN configuration	LxiWebIfc

The LAN settings are configured using the instrument's web browser.

Advanced
Opens the standard Windows "Network Connections" dialog box to configure a network connection. Only users with administrator rights can fulfill this task.

4.1.3 GPIB settings


For a description of the GPIB settings, see: Section 25.5.2.2, "Remote settings", on page 1305.

4.1.4 Remote settings

For a description of the remote settings, see: Section 25.5.2.2, "Remote settings", on page 1305.

4.1.5 Localization settings

Access: "Menu" > "Settings" > "System" > "Localization"

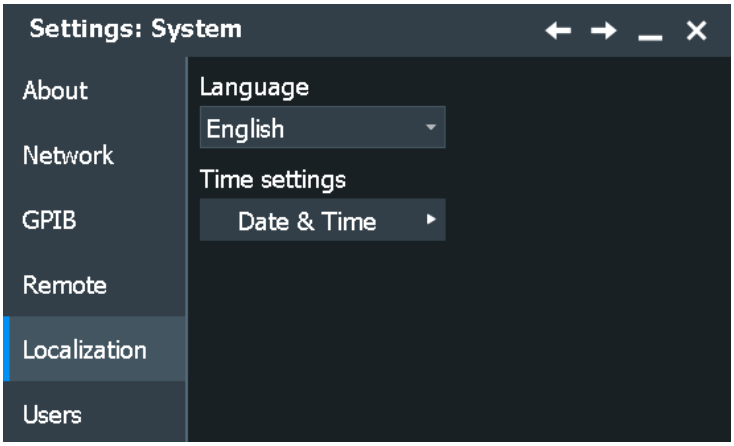

Language
Selects the language in which the dialog boxes, result boxes and other screen information is displayed.


Time settings
Opens the standard Windows "Date and Time Properties" dialog box to set the correct date and time. Only users with administrator rights can fulfill this task.

Note: Usually date and time are set correctly. To adjust your regional time, select the correct time zone rather than changing the time.

Remote command:
`SYSTem:DATE` on page 1362
`SYSTem:TIME?` on page 1362

4.1.6 Users settings

Access: "Menu" > "Settings" > "System" > "Users"

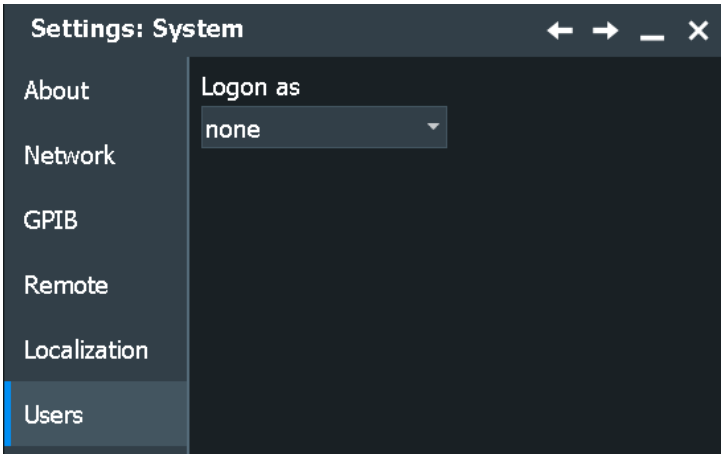

Log on as
Sets the user that is automatically logged on during the startup process of the instrument. The change of this setting takes effect at the next instrument startup.

See Section 25.1.1, "Logon", on page 1284 for restrictions of the standard user and how to change the auto-logon.

"User autologon"	Auto-logon as standard user with limited access. Enter the "User name": *NormalUser* and the "Password" of the standard user.
"Admin autologon"	Auto-logon with unrestricted access to the instrument and network. The setting is only available for administrators. Enter the "User name": *Instrumen* and the administrator's "Password" to enable the auto-logon.
"None"	No auto-logon, user name and password are requested at instrument startup.

4.2 Option settings

Additional options for the R&S RTP are enabled using a license key. To obtain the license key, consult your sales representative.

The license type defines the duration of applicability and the portability of a license. The following license types are provided: evaluation, permanent, portable, quantified, timed with duration of 1, 3, 6 or 12 months. A license can also be in the states deactivated and expired.


Unregistered licenses

Unregistered licenses are not assigned to a particular instrument. The instrument accepts only registered licenses. If your license is delivered unregistered, use the online tool R&S License Manager to register the license for your instrument. The registration of a permanent license is irreversible, so ensure that you register it for the correct instrument. For registration, you need the device ID of the instrument on which the option will be installed.

The R&S License Manager also allows you to move a portable license to another instrument.

4.2.1 Software options settings


Access: "Menu" > "Settings" > "Options" > "Software"

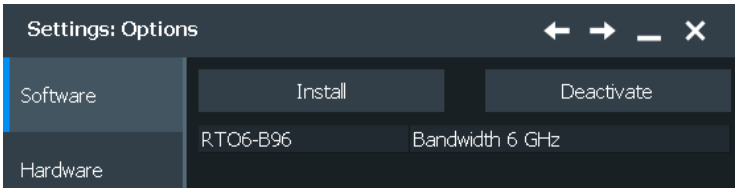

In this dialog, you can access settings for installing and deactivating options.

4.2.1.1 Install options

Access: "Menu" > "Settings" > "Options" > "Software" > "Install"

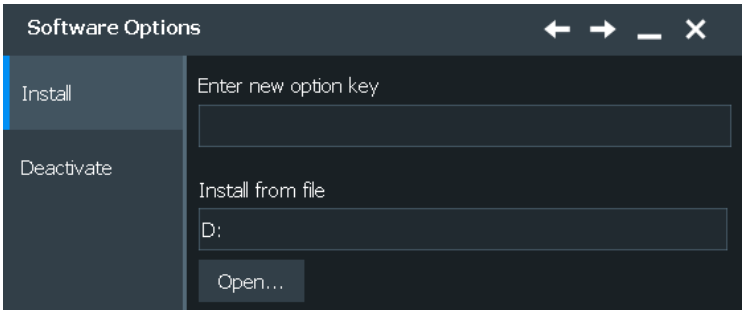

In the "Install" tab, you can install new options or deactivate existing options using license keys.

Enter new option key

Enter the license key here to activate the option. For license keys delivered as a file, use Install from file. Only users with administrator rights can activate options.

Install from file
If you got a license file, install the license here.


Tap "Open" to open the file selection dialog, or enter the complete path and filename. For details, see Section 12.6, "File selection dialog", on page 529. Only users with administrator rights can activate options.

When you move a portable license, use this function to import the deactivation key that is generated by the "R&S License Manager". See also Section 4.2.1.3, "Using a license server", on page 78.

4.2.1.2 Deactivate options

Access: "Menu" > "Settings" > "Options" > "Software" > "Deactivate"

In the "Deactivate" tab, you can export the deactivation response.

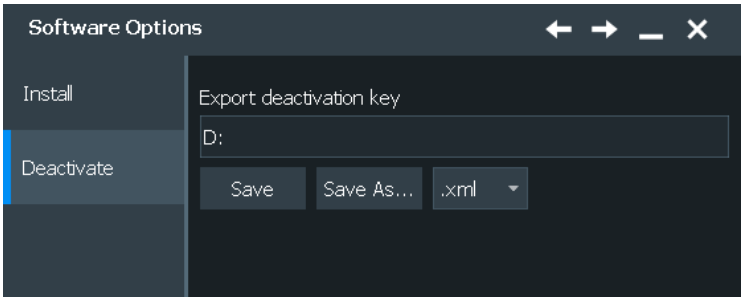

Export deactivation key
When you move a portable license, or deactivate an option, you have to note the response key, or to save the response to a file. The "R&S License Manager" needs the response key.

4.2.1.3 Using a license server

Software licenses can also be provided by the R&S®License Server. In this case, all available licenses are stored on a specified server. When you need a particular application, you can obtain a license from the server. When you no longer need the license, you return it to the server and it becomes available to other users again. These licenses are also referred to as *floating licenses*, as opposed to permanent licenses.

The R&S®License Server must be set up as described in the R&S®License Server - Managing Floating Licenses - User Manual.

You can find the manual in the Windows menu of your instrument: "Start > All Programs > R&S License Server > Open License Server Manual".

To open the License Server

► In the Windows notification area, select , and then "Open Manager".

a) Optional: If the status icon (, or) in the Windows notification area is not shown yet, click "Start > All Programs > R&S License Server > License Server Manager"".
The icon is now available in the Windows notification area.
b) Optional: If the status is (stopped), select the icon, and then select "Start License Server". Then, select > again.

The license server opens in the default web browser. The program adds all available Rohde & Schwarz products (smart cards or devices) to a list and automatically shows the first product that is detected. By default, the "Licenses" list opens with an initial filtering for showing only active licenses.

4.2.2 HW options settings

This tab informs about the availability of hardware options.


4.3 Appearance settings

In the "Settings" > "Appearance" dialog box, you define the look and feel of the display element, e.g. waveform colors, result position, or grid behavior.

4.3.1 Color settings

Access: "Settings" > "Appearance" > "Colors"

By default, various colors are assigned to the different waveform types for better visibility and distinguishability. You can change the color assignment and assign another color or a color table to waveforms.

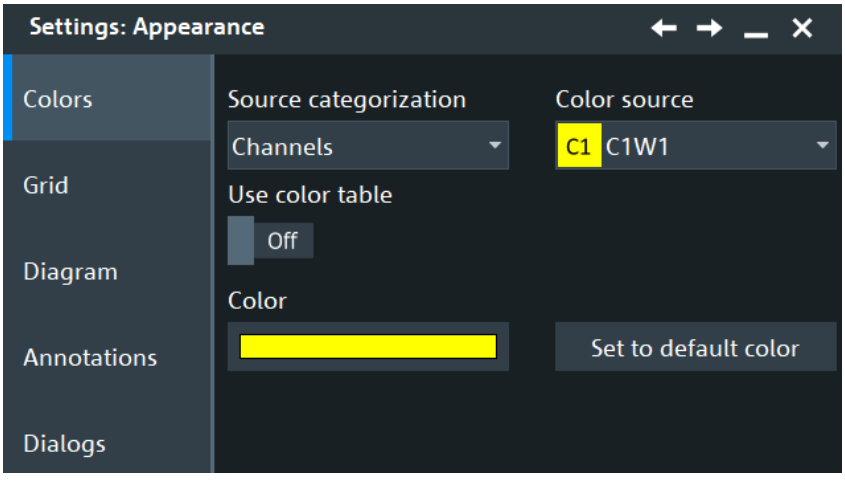

Source categorization
Selects the category of the waveform, e.g. "Channels", "Math", "Reference".

You can then select one of the waveforms of the selected category with "Color source".

Color source
Selects the waveform to which the color table and the labels are assigned.

A spectrogram (option R&S RTP-K37) always has the same color as the math (spectrum) waveform from which it is created.

Use color table
If enabled, the selected waveform is displayed according to its assigned color table.

If this option is disabled, the selected color is displayed, and the intensity of the specific signal color varies according to the cumulative occurrence of the values.

Remote command:
`DISPlay:COLor:SIGNal<m>:USE` on page 1364

Color
Shows the current color of the selected waveform. To change the color, tap the button and select a color. The color of the waveform, its signal icon, channel icon, and of the illuminated keys is adjusted to the new color.

Remote command:
`DISPlay:COLor:SIGNal<m>:COLor` on page 1363

Assigned color table
Adjust the waveform colors to suit your preferences. For each of the following waveform types you can assign a suitable color table:
- Analog and digital channels
- Reference waveforms
- Results of a mathematical function, also for FFT and derived spectrogram.
- Measurements and tracks
- XY-traces
- Serial buses if a protocol option is activated
- Parallel buses if MSO option is installed

See also: Section 4.3.2, "Color tables", on page 80

Remote command:
`DISPlay:COLor:SIGNal<m>:ASSign` on page 1363

Set to default color
Resets the color of the selected waveform to the factory default.

Remote command:
`DISPlay:COLor:SIGNal<m>:PRESet` on page 1364

4.3.2 Color tables


Access: "Settings" > "Appearance" > "Color" > "Edit Color Table"

Color tables define the color of the waveform pixels depending on the cumulative occurrence of the associated values. By default, the intensity of the specific waveform

color varies according to the cumulative occurrence of the values. The more often a value occurs, the darker the color of the data point is displayed.

The following color tables are provided:

- "False colors": color changes gradually in a wide color spectrum.
- "M-Hot"
- "M-Hsv"
- "M-Jet"
- "Spectrum": colors display the wave lengths of the light. Low cumulative occurrence is displayed blue like high wave length.
- "Single Event": single events and very seldom events appear yellow, a higher cumulative occurrence is shown with blue color. This view helps to identify specific events.
- "Temperature": color changes gradually from blue (low temperature) to red (high temperature) with increasing cumulative occurrence.

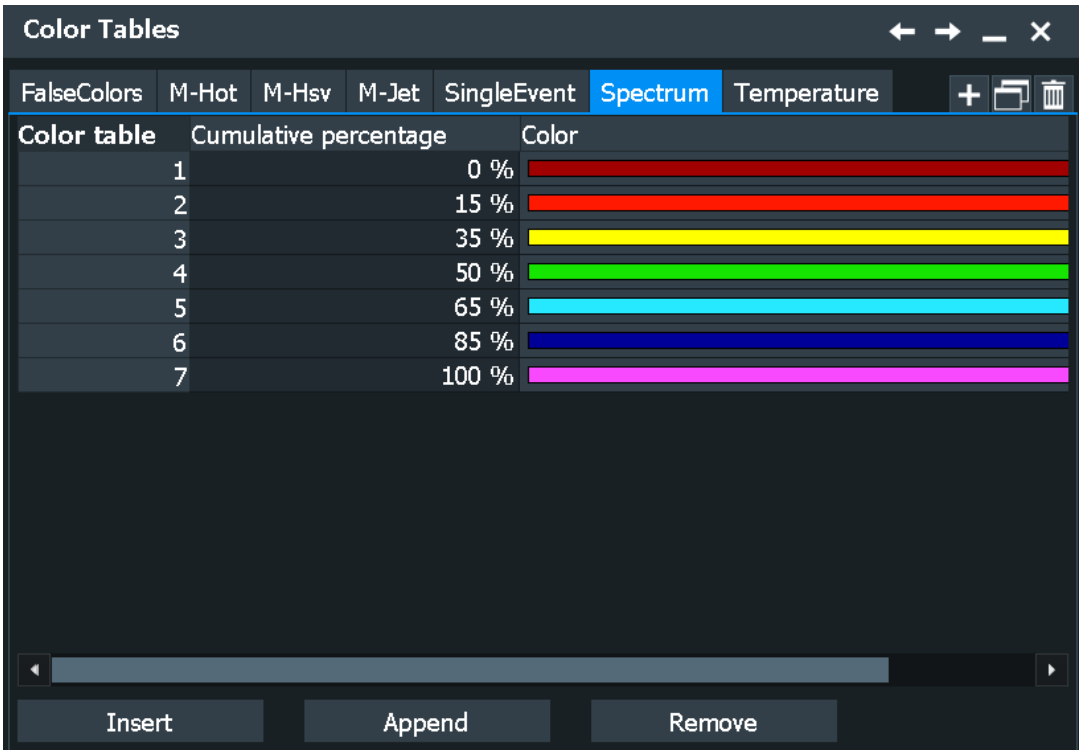

The editing table allows you to edit existing color tables or add new ones that can then be assigned to the waveforms.

See also:

- "Assigned color table" on page 80

Remote commands

The following remote commands are used to configure color tables:

`DISPlay:COLor:PALette:COUNt?` on page 1365

DISPlay:COLor:PALette:ADD on page 1365

DISPlay:COLor:PALette:REMove on page 1365

DISPlay:COLor:PALette:POINt:INSert on page 1365

DISPlay:COLor:PALette:POINt:ADD on page 1365

DISPlay:COLor:PALette:POINt[:VALue] on page 1366


DISPlay:COLor:PALette:POINt:COUNt? on page 1366

DISPlay:COLor:PALette:POINt:REMove on page 1365

DISPlay:COLor:PALette:COUNt? on page 1365

4.3.3 Grid appearance settings

Access: "Settings" > "Appearance" > "Grid"

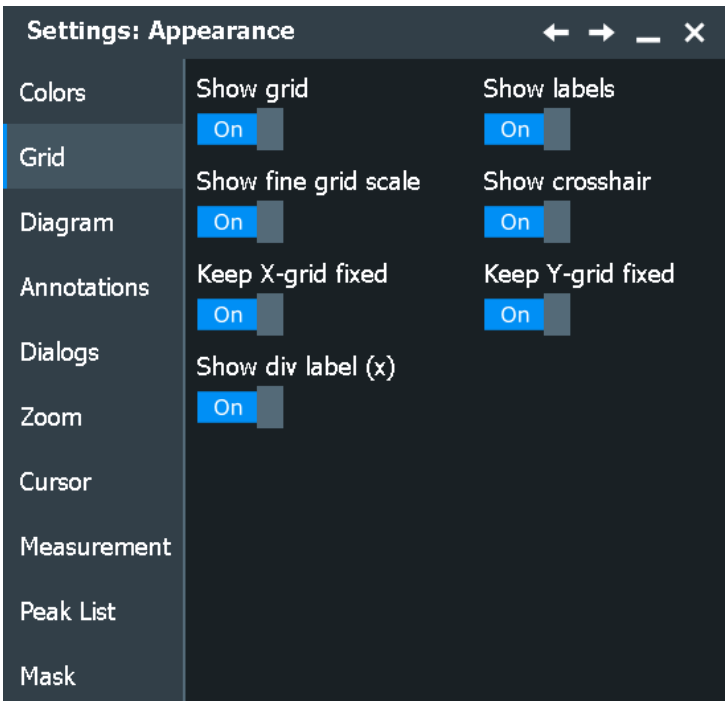


Show grid
If selected, a grid is displayed in the diagram area. A grid helps you associate a specific data point to its exact value on the x- or y-axis.

Remote command:
DISPlay:DIAGram:GRID on page 1367

Show labels
If selected, labels mark values on the x- and y-axes in specified intervals in the diagram.

Remote command:
DISPlay:DIAGram:LABels on page 1367

Show fine grid scale
If selected, the crosshair is displayed as a ruler with scale markers. If disabled, the crosshair is shown as dashed lines.

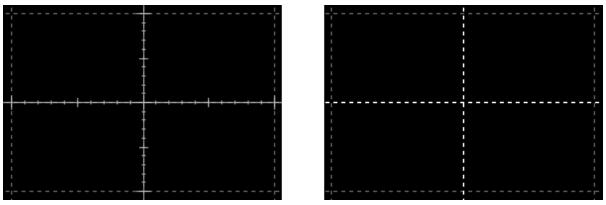

Remote command:
DISPlay:DIAGram:FINegrid on page 1367

Show crosshair
If selected, a crosshair is displayed in the diagram area. A crosshair allows you to select a specific data point by its co-ordinates.

Remote command:
DISPlay:DIAGram:CROSshair on page 1367

Keep X-grid fixed
If enabled, the vertical grid lines remain in their position when the horizontal position is changed. Only the values at the grid lines are adapted.

Remote command:
DISPlay:DIAGram:XFIXed on page 1368


Keep Y-grid fixed
If enabled, the horizontal grid lines remain in their position when the position of the curve is changed. Only the values at the grid lines are adapted. Fixed horizontal grid lines correspond to the behavior of traditional oscilloscopes.

Remote command:
DISPlay:DIAGram:YFIXed on page 1367

Show div label (x)
If selected, the time scale value is shown at the diagram bottom instead of the horizontal grid labels. For example, 10 ns/div is shown instead of the values 0, 10, 20, 30... ns.

4.3.4 Diagram appearance settings

Access: "Settings" > "Appearance" > "Diagram" tab

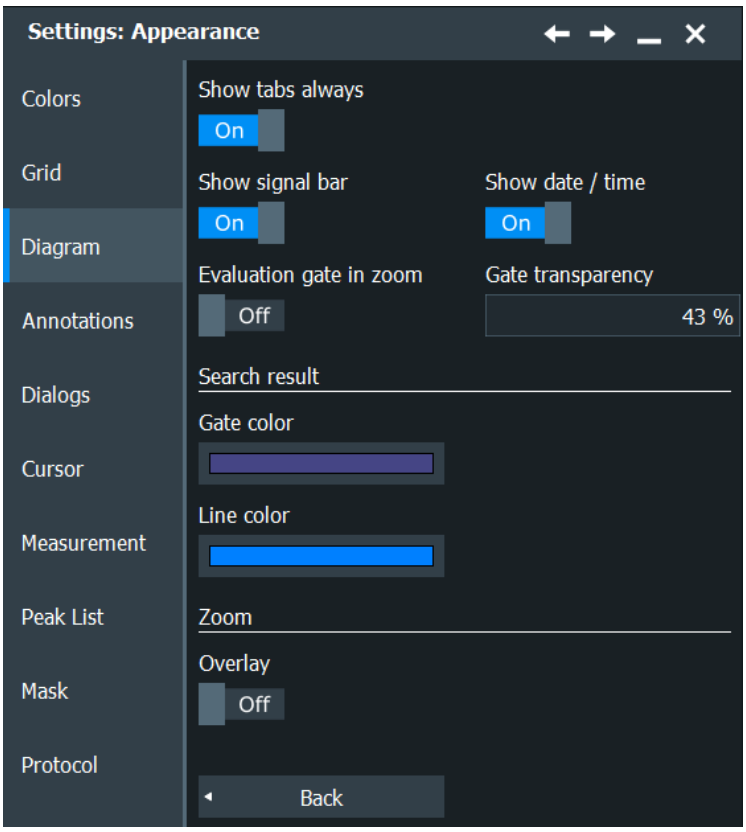

Show tabs always
If selected, the tab titles of all diagrams are displayed: "Diagram1", "Diagram2" ...

If cleared, the tab titles are not shown except for titles in a tabbed diagram. In tabbed diagrams, the tab titles are required to change the tabs.

Remote command:
`DISPlay:DIAGram:TITLe` on page 1372

Show signal bar
If enabled, the signal bar is displayed on the right of the diagram area.

The signal bar contains signal icons that display either real-time views of minimized waveforms, or the main settings of displayed waveforms. On the top of the bar, the timebase label and trigger label provide general information for all displayed channels.

Remote command:
`DISPlay:SIGBar[:STATe]` on page 1373

Show date / time
If enabled, the date and time are shown near to the Rohde & Schwarz logo at the upper right corner of the screen.

Evaluation gate in zoom
If enabled, the available histogram areas, masks, and measurement gates are shown in the zoom diagrams. If the evaluation gate is within the zoom area, the display helps to move or modify the evaluation gates in the zoom window.

Make sure that the option is disabled if the zoom area and the evaluation gate are of nearly the same size to avoid conflicts in operation.

Gate transparency
Sets the transparency of the area that is defined as measurement or search gate. The setting only takes effect if "Show gate" is enabled.

Remote command:
`DISPlay:GATE:TRANsparency` on page 1373

Search result gate symbol color
Sets the color of the search zoom area. The search zoom area is displayed if "Show search zoom windows" is enabled.

See also: Section 11.4.2, "Display zoom settings", on page 484.

Search result line color
Sets the color of the search result markers. The markers are displayed if "Show search zoom windows" is enabled.

Zoom overlay
Shows all zooms of a diagram in one zoom window. The zoomed areas are overlaid for better comparison of the zoomed waveforms.

The setting affects all zoom diagrams.

See also: Section 7.1, "Zoom", on page 266

Remote command:
`LAYout:ZOOM:ONEDiagram` on page 1373

4.3.5 Annotations appearance settings


Access: "Settings" > "Appearance" > "Annotations" tab

Using labels, you can annotate the waveforms to name or explain each waveform. The text is shown in the same color as the assigned waveform. Each label has its individual position.

You can enter exact positions in the dialog box, or drag the labels on the screen to the required position. The position can be a fixed one (relative to the screen), or a flexible position (absolute, assigned to the axes).



To add labels quickly, you can add the "Label" icon to the toolbar and use it.

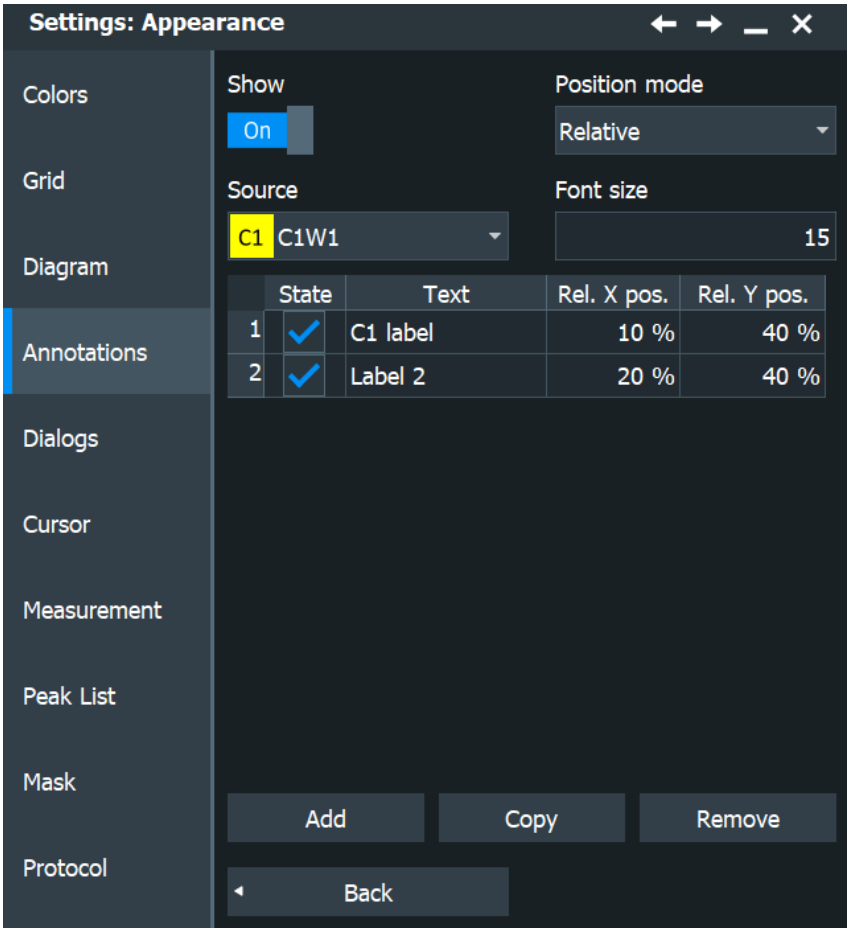

Show / Source
Selects the souce of the label and enables the display.

Remote command:
`DISPlay:SIGNal:LABel:SHOW` on page 1378

Position mode
Defines the label position either relative to the diagram or with absolute values according to the units of the waveform. Relative positions are fixed, whereas absolute positions move with the waveform display when the scales, the vertical position or offset, or the reference point are changed.

The position mode applies to all labels of the selected waveform. For different waveforms, different position modes can be selected.

"Relative" Sets a fixed position in percent of the screen counting from the upper left corner.

"Absolute" Sets the position in time and voltage values, or in other units depending on the waveform character.

Remote command:
`DISPlay:SIGNal:LABel:POSMode` on page 1374

Font size
Defines the size of the labels in the diagram.

Remote command:
DISPlay:SIGNal:LABel:FONTsize on page 1374

Labels
For each waveform, the "Labels" table shows the defined labels with their visibility state, label texts and positions. The labels belog to the selected waveform.


Enter the label text and the horizontal and vertical positions for each label. Enable "State" to show the label on the screen. The individual state of the labels takes effect if "Show" is active.

"Add"	Adds a line at the end of the list.
"Copy"	Copies the selected line in a new line.
"Remove"	Deletes the selected line. Only single lines can be removed. You can also delete a label by using the toolbar: Tap the "Delete" icon and then the label.

Remote command:
DISPlay:SIGNal:LABel:ADD on page 1375
DISPlay:SIGNal:LABel:STATe on page 1379
DISPlay:SIGNal:LABel:IDSList? on page 1377
DISPlay:SIGNal:LABel:REMove on page 1377
DISPlay:SIGNal:LABel:TEXT on page 1380
DISPlay:SIGNal:LABel:HORizontal:ABSolute:POSition on page 1380
DISPlay:SIGNal:LABel:VERTical:ABSolute:POSition on page 1380
DISPlay:SIGNal:LABel:HORizontal:RELative:POSition on page 1381
DISPlay:SIGNal:LABel:VERTical:RELative:POSition on page 1381

4.3.6 Dialogs appearance settings

Access: "Settings" > "Appearance" > "Dialogs" tab

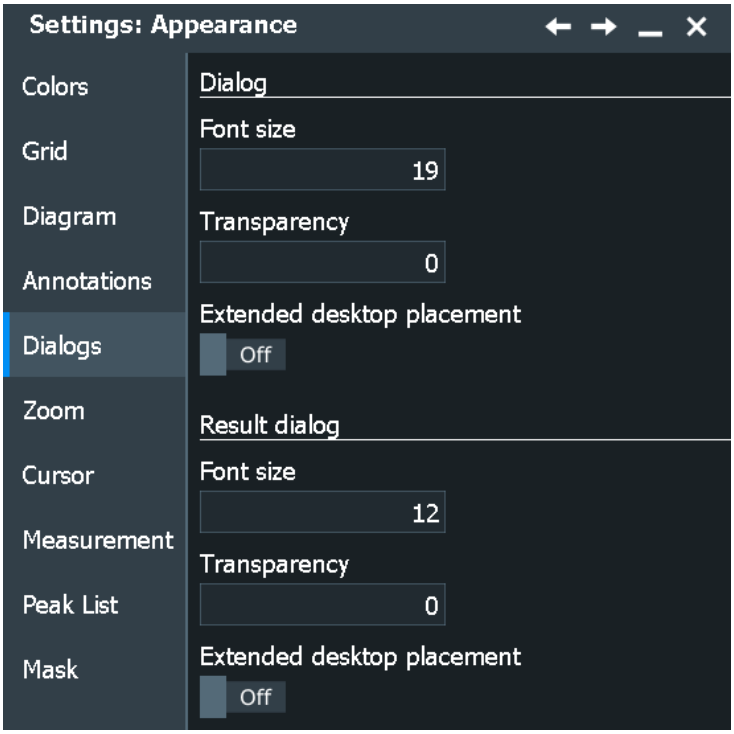

Dialog
With these settings, you can change the appearance of the dialogs.

Font size ← Dialog
Defines the font size of the text in dialog boxes.

Dialog transparency ← Dialog
Defines the transparency of the dialog box background. For high transparency values, you can see the waveform display in the background, and possibly check the effect of the changed setting. For lower transparency values, readability in the dialog box improves.

Result dialog
With these settings, you can change the appearance of the result dialogs.

Font size ← Result dialog
Defines the font size of the text in result boxes. The size of the result box is adapted to the font size.


Transparency ← Result dialog
Defines the transparency of the measurement result boxes in the same way as Dialog transparency.

Extended desktop placement
If an external monitor is connected to the instrument, you can enable these settings to display dialog boxes and/or result boxes on the external monitor. Thus, the boxes do not cover the waveforms on the instrument display.

Remote command:
DISPlay:EXTended:PORDialogs on page 1381
DISPlay:EXTended:POSDialogs on page 1382

4.3.7 Cursor appearance settings

Access: "Settings" > "Appearance" > "Cursor" tab

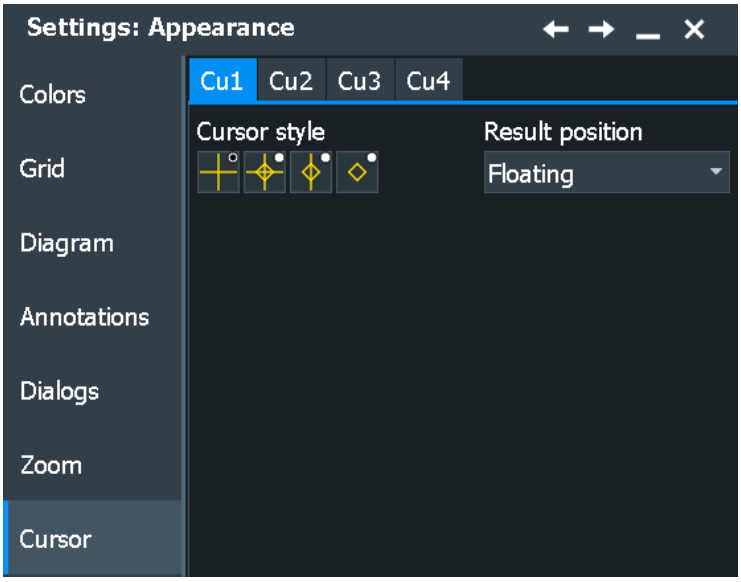

Cursor style
Defines how the cursor is displayed in the diagram.

"Lines"	The cursors are displayed as lines.
"Line & Rhombus"	The cursors are displayed as lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.
"Vertical line and rhombus"	The cursors are displayed as vertical lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.
"Rhombus"	The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

Remote command:
CURSor<cu>:STYLe on page 1382


Result position
Defines the position of the cursor measurement results.

"Floating"	Floating result box in front of the diagrams.
"Preview"	Result icon on the signal bar.
"Docked"	Fixed tab below the diagrams.

Remote command:
DISPlay:RESultboxes:CUPosition on page 1382

4.3.8 Measurement appearance settings

Access: "Settings" > "Appearance" > "Measurement" tab

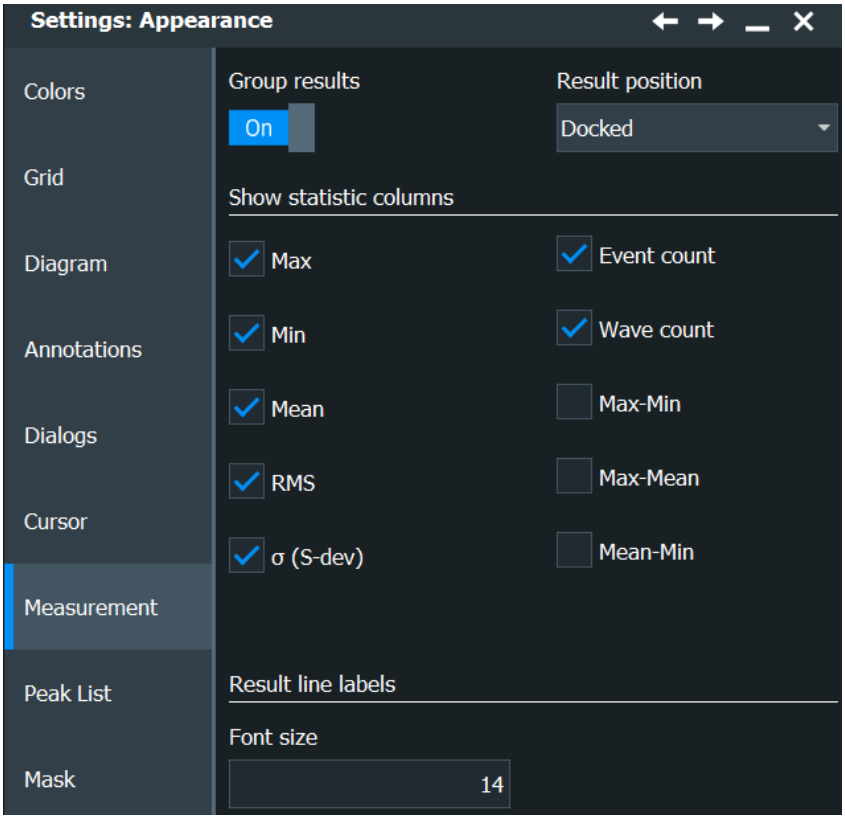

Group results
If enabled, all results are shown in one result box (default).

If disabled, the results of each measurement group are shown in a separate result box. The default position is ignored.

The setting affects all measurements except for the peak list.

Remote command:
`MEASurement<mg>:DISPlay:GROuping` on page 1383

Result position
Defines the default position of the result table, when a new measurement is started:
- "Docked": fixed tab below the diagrams
- "Preview": result icon on the signal bar
- "Floating": floating result box in front of the diagrams

The setting affects only grouped results.

Remote command:
`DISPlay:RESultboxes:MEPosition` on page 1384

Show statistic columns
Select the statistical values that you want to see in the results table.

Font size
Sets the font size in the result tables.


Remote command:
`MEASurement<mg>:DISPlay:RESults:LFONtsize` on page 1383

4.3.9 Peak list appearance settings

Access: "Settings" > "Appearance" > "Peak List" tab

For peak lists measurements only. You can enable the "Peak list" for "Spectrum" measurements, see Section 8.2.5, "Spectrum measurements", on page 370.

In this dialog, you can configure the look of the labels for peaks in the spectrum diagram.

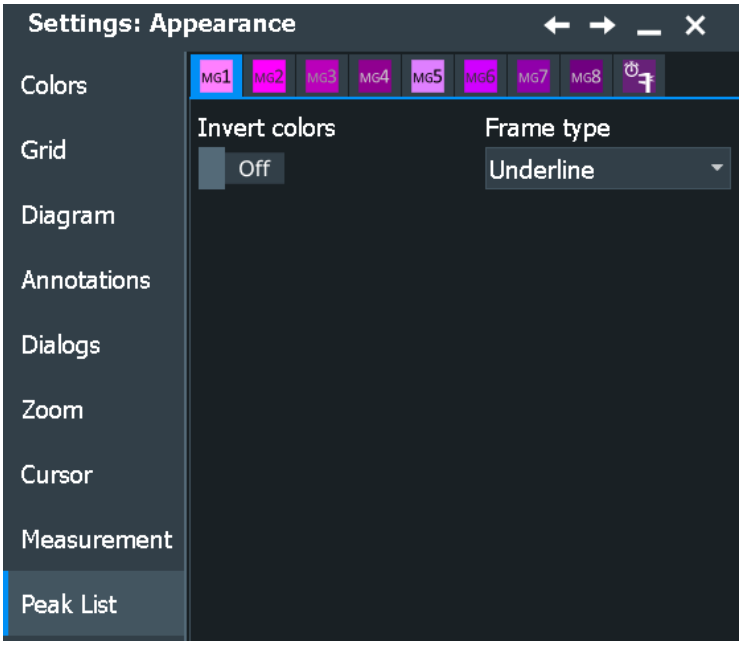

Frame type
Defines the layout of the labels (full border, underline, or none).

Remote command:
`MEASurement<mg>:RESult:LABorder` on page 1384


Invert
Displays black font on white background using the "Full border" frame type.

Remote command:
`MEASurement<mg>:RESult:INVerse` on page 1385

4.3.10 Mask appearance settings

Access: "Settings" > "Appearance" > "Mask"

In this dialog, you can define the settings for mask and hit display. See also Section 10, "Mask testing", on page 436.

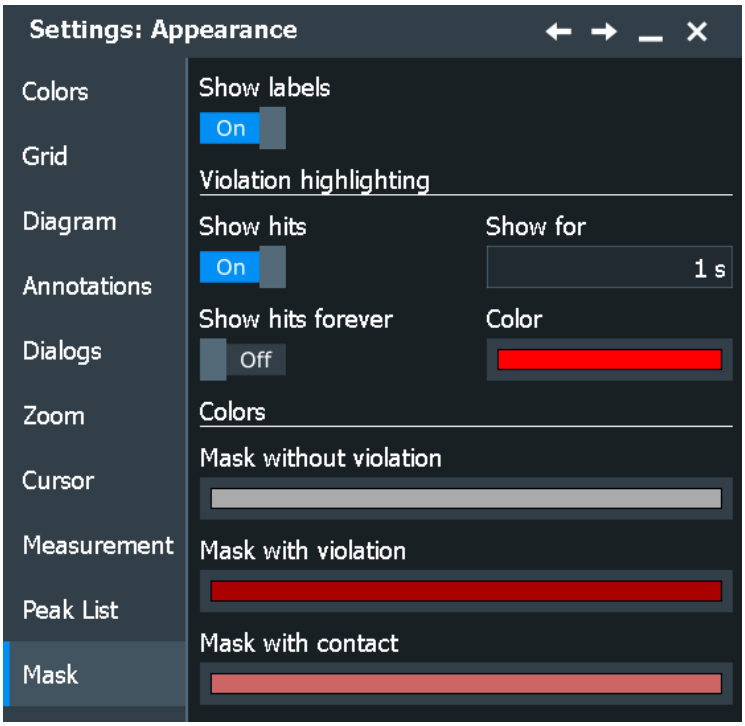

Show labels
Switches the display of the mask test name on or off.

To change the name of the mask test, open the "Mask Test" dialog > "Define Mask" tab. Double-tap the mask test subtab and enter the new mask test name.

Remote command:
`MTESt:LABel` on page 1385
`MTESt:REName` on page 1386

Show hits
If selected, the mask hits are highlighted on the screen. You can define the color and the time of the hit display.

These settings are not applied to trigger zones, which are based on masks.

Remote command:
`MTESt:HIGHlight:STATe` on page 1386

Show for
Sets the time for which the mask hits are shown.

Remote command:
`MTESt:HIGHlight:TIME` on page 1386

Show hits forever
If selected, the mask hits are shown for an unlimited period of time.

Remote command:
MTESt:HIGHlight:INFinite on page 1386

Color
Sets the color of samples that violated the mask.

Remote command:
MTESt:COLor:MATCh on page 1387

Mask without violation
Sets the color of masks segments that were not hit.

Remote command:
MTESt:COLor:UNMatch on page 1387

Mask with violation
Sets the color of mask segments the signal has entered into.

Remote command:
MTESt:COLor:INTerior on page 1388

Mask with contact
Sets the color of masks segments that were touched at the border. In this case, the resolution is not sufficient to detect if the mask was hit or not. Zoom into the concerned area to see the actual result.

Remote command:
MTESt:COLor:BORDer on page 1387

4.3.11 Protocol appearance settings

Access: "Settings" > "Appearance" > "Protocol"

In this dialog, you can define the position of the result table for the protocol analysis.

See also Section 14, "Protocol analysis", on page 555.

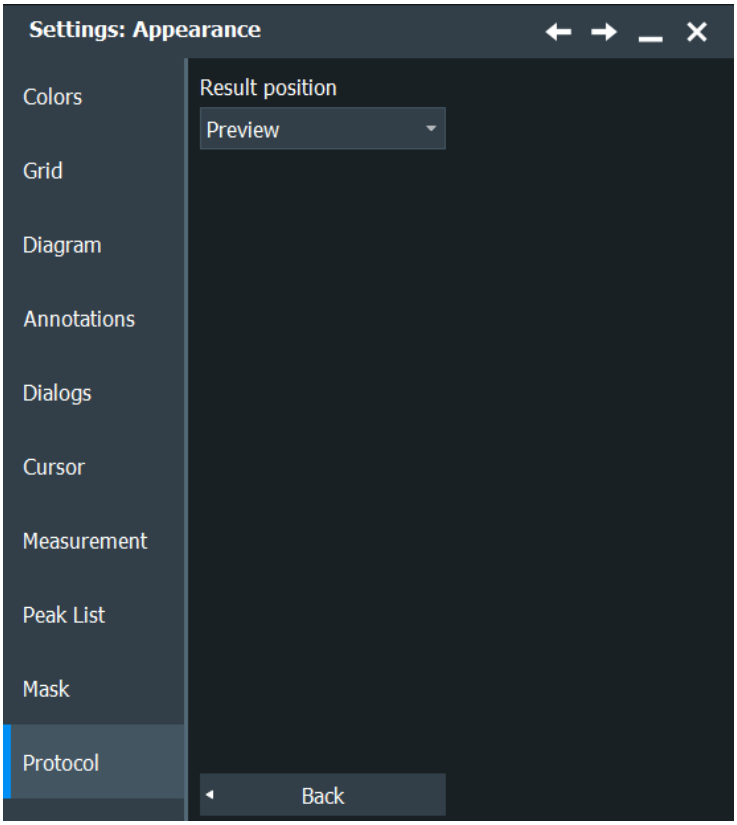


Table position
Defines the position of the decode table on the screen.

"Floating" Floating result box in front of the diagrams.

"Preview"" Result icon on the sidebar.

"Docked" Fixed tab below the diagrams.

Remote command:
`DISPlay:RESultboxes:DEPosition` on page 1836


4.4 Display settings

In the "Settings" > "Display" dialog box, you can define the display settings like brightness and signal intensity. Yo can also set up an external monitor.

4.4.1 Persistence settings

Access: "Menu" > "Settings" > "Display" > "Persistence"

The settings in this dialog do not apply to eye diagrams.

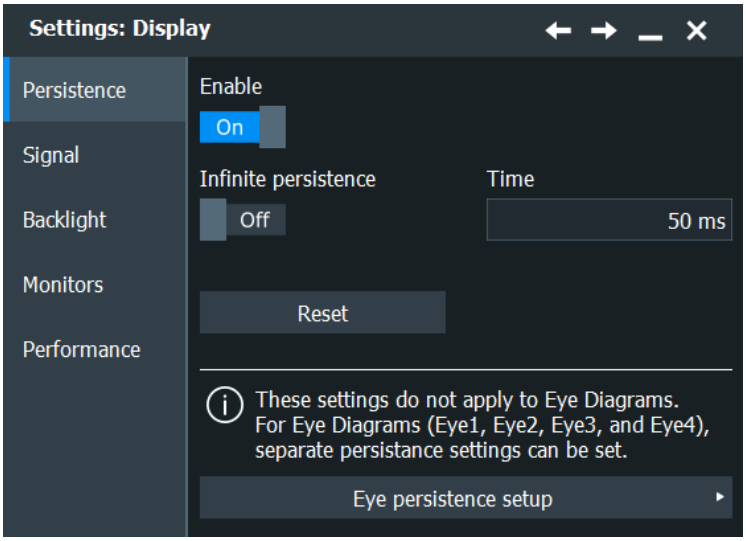

Enable
If enabled, each new data point in the diagram area remains on the screen for the duration that is defined using Time, or as long as Infinite persistence is selected.

If disabled, the waveform points are displayed only for the current acquisition.

Remote command:
`DISPlay:PERSistence[:STATe]` on page 1388

Infinite persistence
If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled. Use infinite persistence to display rare events in the signal.

Remote command:
`DISPlay:PERSistence:INFinite` on page 1389

Time
Sets a time factor that controls how long the waveforms points fade away from the display. Thus, the R&S RTP emulates the persistence of analog phosphor screens.

Remote command:
`DISPlay:PERSistence:TIME` on page 1389


Reset
Resets the display, removing persistent all waveform points.

Remote command:
`DISPlay:PERSistence:RESet` on page 1389

Eye persistence setup
Opens the dialog for defining the persistence settings for the eye diagram settings, see Section 20.2.3, "Display settings", on page 1166.

4.4.2 Signal settings

Access: "Menu" > "Settings" > "Display" > "Signal"

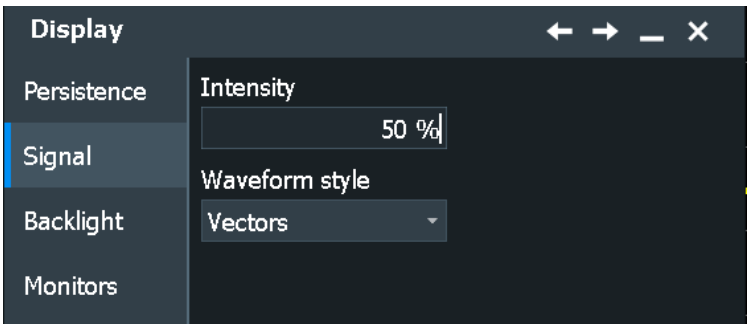

Intensity
This value determines the strength of the waveform line in the diagram. Enter a percentage between 0 (not visible) and 100% (strong). The default value is 50%.

You can also use the [Intensity] knob on the left side of the screen to adjust the waveform intensity directly.

Note: Use of color tables. The exact mapping of the cumulative value occurrences according to the assigned color table is guaranteed only if the intensity is set to 50%. All other intensity values falsify the mapping but can improve the visibility of the signal.

Remote command:
`DISPlay:INTensity` on page 1389

Waveform style
Select the style in which the waveform is displayed:

"Vectors" The individual waveform points are connected by a line. Define the strength of the line using the [Intensity] knob.

"Dots" Only the individual waveform points are displayed. Waveform sample points are the ADC sample points and additional interpolated points if "Interpolated time" is used for resolution enhancement. To see the dots of one waveform, perform one acquisition with [Single] and N=1 ("Average count" = 1). During continuous acquisition, or a [Single] acquisition with N > 1, the dots of multiple subsequent waveforms are displayed on the screen, and the waveform looks like a line. Consider also the "Interpolation" on page 130.

Remote command:
`DISPlay:DIAGram:STYLe` on page 1390

4.4.3 Backlight settings


Access: "Menu" > "Settings" > "Display" > "Backlight"



Brightness
Changes the background luminosity of the touchscreen.

4.4.4 Monitors settings

Access: "Menu" > "Settings" > "Display" > "Monitors"

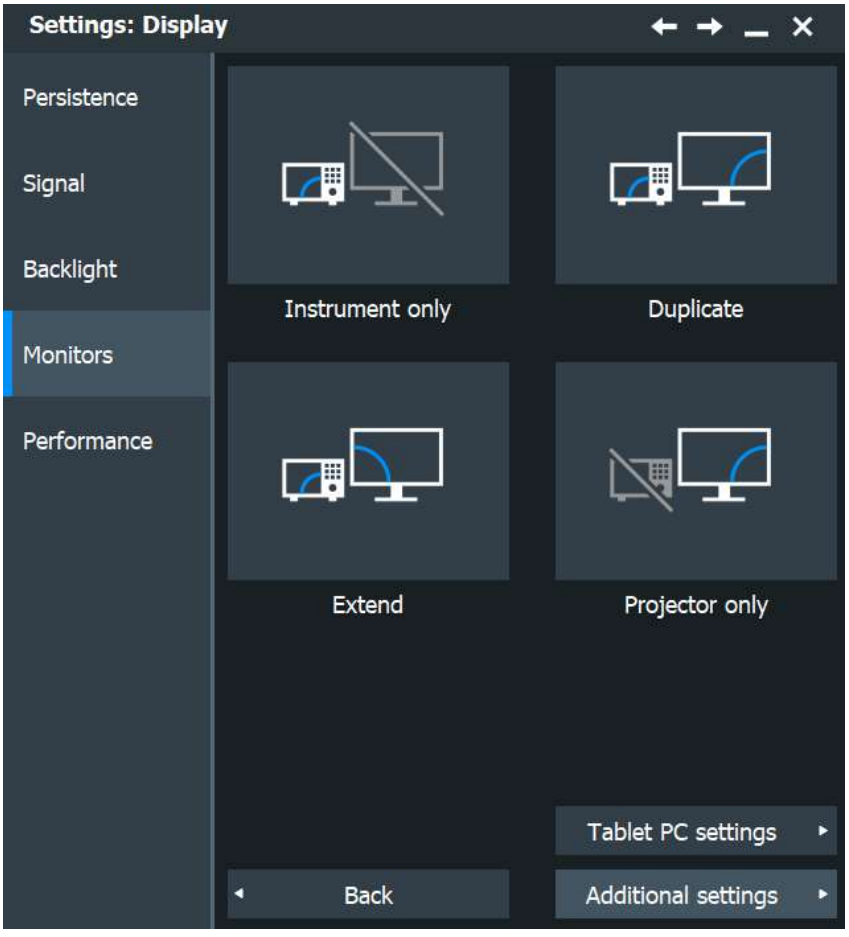


In the "Monitors" tab you can extend or duplicate the instrument display to a second monitor or projector (external display). The following options are available:

- "Instrument only": the instrument display is on, the external display is off.

- "Duplicate": the external display shows the same content as the instrument display.
- "Extend": the instrument display and the external display show different content.
- "Projector only": the instrument's user interface is only shown on the external display, the instrument display is off.
- "Tablet PC settings": opens the Windows setup for touch display to adjust the touch functionality when an additional monitor is in use.
- "Additional settings": opens the Windows configuration for display settings.

4.4.5 Performance settings

Access: "Menu" > "Settings" > "Display" > "Performance"

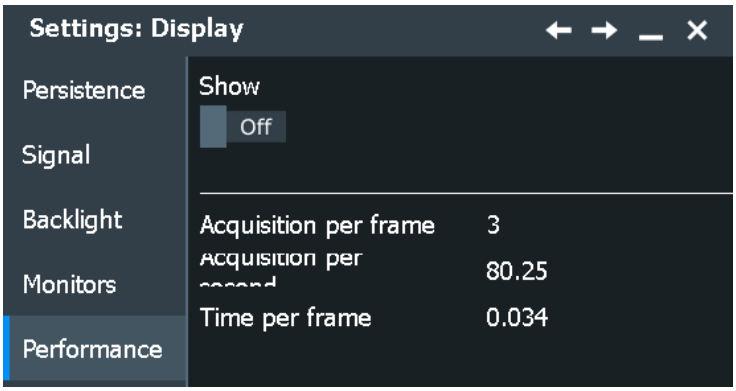

Show
Displays the "Performance" results box.

The "Performance" result box shows information on the current acquisition performance values of the R&S RTP.


The instrument groups acquired waveforms together in a frame, and displays the frame content. The maximum number of frames displayed per second is about 30. The current number of frames per second is indicated as reciprocal "Time per frame". If the time scale decreases, and thus the number of acquisitions per second also decreases, the number of acquisitions per frame can drop to 1.

4.5 Frontpanel settings

In the "Frontpanel" dialog box, you can assign functions to keys and knobs, adjust the Multiuse knob and adjust the brightness of the keys.

4.5.1 Hardkeys: function assignment

Access: "Settings" > "Frontpanel" > "Hardkeys"

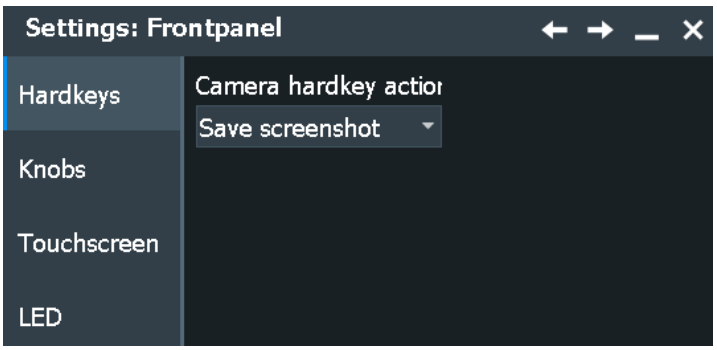


Camera hardkey action
The Camera key on the left side of the display is a shortcut key that initiates an associated action.

You can assign one of the following actions:
- Save a screenshot
- Open screenshot setup
- Save a report
- Open report setup

Configure the settings for the selected action.
- Screenshots: "Save/Recall" key > "Save" tab > "Screenhot", see Section 12.4.1, "Screenshot settings", on page 523.
- Report: "Save/Recall" key > "Save" tab > "Report", see Section 12.5.1, "Report settings", on page 527.

4.5.2 Knobs

Access: "Settings" > "Frontpanel" > "Knobs"

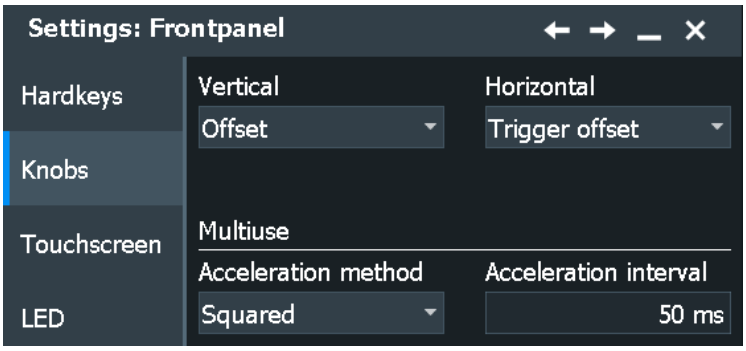

Vertical 99
Horizontal 100
Acceleration method 100
Acceleration interval 100

Vertical
Selects the action that you want to perform with the vertical [Position] knob. It can change the offset or the waveform position of the selected waveform.

See also: "[Position]" on page 41.

Horizontal
Selects the action that you want to perform with the horizontal [Position] knob. It can change the horizontal position of the trigger point (trigger offset), or the reference point.

See also: "[Position]" on page 39.

Acceleration method
Selects a method to accelerate the movement of the element on the screen compared to the actual movement of the [Multiuse] knob.

Acceleration is useful if you need to move from one end of the screen to the other, for example. Without acceleration, you have to turn the knob quite a while to reach the other end. But acceleration can make precise selection difficult, because a small movement of the knob causes a relatively large movement on the screen.


"None"	No acceleration method used.
"Squared"	Moderate acceleration method used.
"Exponential"	Strong acceleration method used.

Acceleration interval
Defines the delay time during which the movement of the [Multiuse] knob is analyzed before acceleration is applied. For short intervals, acceleration sets in quickly, but is not as effective. For long intervals, acceleration is more effective. However, it takes longer until the instrument reacts on the knob's input.

Furthermore, when you turn the knob slowly during fine-tuning, subsequent movements that occur during the same interval are accelerated, making precise selection difficult.

4.5.3 Touchscreen

Access: "Settings" > "Frontpanel" > "Touchscreen".

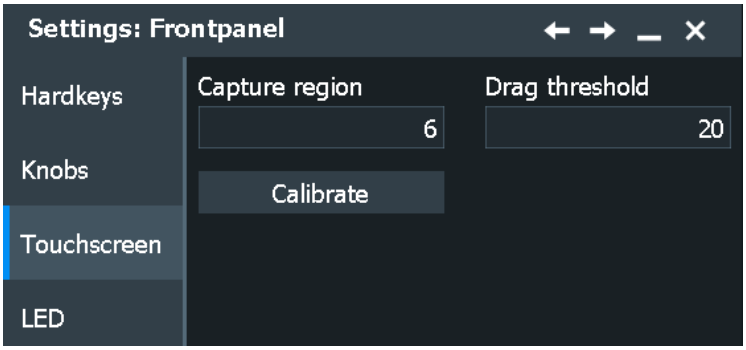

Capture region
Defines the number of pixels around each element (e.g. button, icon, data point) that create a capture region. If you tap your finger or click the mouse pointer within this capture region, this element is considered to be selected. If you tap or click outside this area, a different or no element is selected.


The larger the region, the easier is it to select an element. However, when selecting data points, for example, a large frame does not allow you to select precisely.

Drag threshold
Defines the maximum number of pixels around an element (e.g. data point) within which your pointing device must stay to "click" the element. When you tap or click a specific element and move your finger or the mouse outside this range, it is considered to be a "dragging" or "moving" operation.

Calibration
Opens the touchscreen calibration application. Only users with administrator rights can fulfill this task.

4.5.4 LED

Access: "Settings" > "Frontpanel" > "LED".

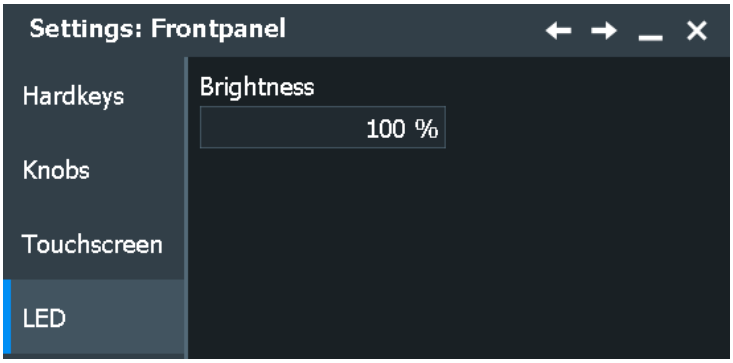

Brightness
Defines the luminosity of illuminated front panel keys and knobs.

4.5.5 Aligning the touchscreen

When the device is delivered, the touchscreen is initially calibrated. However, to ensure that the touchscreen responds to the finger contact correctly, a touchscreen alignment is required. Only users with administrator rights can fulfill this task.

Alignment of the touchscreen is useful:

- At first use
- If the position of the instrument has been changed, and you cannot look straight on the screen
- If another person operates the instrument
- If you notice, that touching a specific point on the screen does not achieve the correct response

1. In the "Menu" > "Settings" menu, select "Frontpanel".

2. Select the "Touchscreen" tab.
3. Tap "Calibrate".


   A blinking cross appears in the lower left corner of the screen.
4. Touch and hold the cross until "OK" is shown.
5. Repeat this action for the crosses in the other corners.
6. Tap the Rohde & Schwarz logo to display the instrument's user interface.

4.6 Preset setup

A user-defined preset contains the complete instrument setup including display settings. You can save the current configuration to a preset file, and load a previously saved preset file. You can then specify that these settings are to be applied with the [Preset] key.

4.6.1 User-defined preset

Access: "Menu" > "Settings" > "Preset" > "Settings" tab

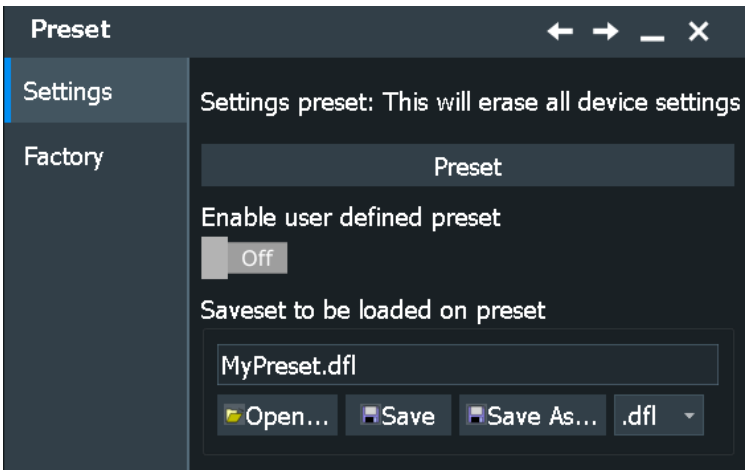

Preset
Performs a user-defined preset of the instrument.

Enable user defined preset
If enabled, the settings from the selected preset file are restored when the [Preset] key is pressed.

If disabled, [Preset] sets the instrument to the factory defaults.

The setting is available if the indicated user-defined saveset file exists, see Saveset to be loaded on preset.

Remote command:
`USRDefined:RST[:ENABle]` on page 1391

Saveset to be loaded on preset
Enter the filename to load or to save a user-defined preset. The file format is `.dfl` and cannot be changed.

"Open" Loads the indicated file. The settings from this file are applied when "Enable user defined preset" is enabled and you press the [Preset] key.


"Save" Saves the settings to the file with the indicated name.

"Save As" Opens the file selection dialog box and saves the settings to the selected file.

Remote command:
`USRDefined:RST:NAME` on page 1390
`USRDefined:RST:SAVE` on page 1391
`USRDefined:RST:OPEN` on page 1391

4.6.2 Factory preset

Access: "Menu" > "Settings" > "Preset" > "Factory"

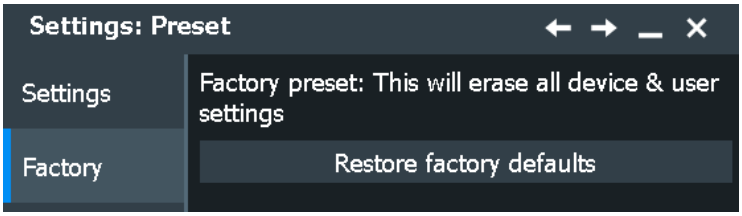

Restore factory defaults
Resets the instrument to the factory default settings, to the initial state. Factory settings comprise all instrument settings, including display, intensity and transparency settings. After loading factory defaults, perform a self-alignment to synchronize the signal data.

Remote command:
Section 26.7.1, "System", on page 1361

4.6.3 Restoring settings

When you have changed many settings and are not sure which settings are causing which effect in the measurement, you can restore the default settings and start anew. The following methods are available:

- Saving instrument settings to a user-defined preset and restoring the instrument settings to user-defined default values
- Restoring all settings on the R&S RTP to the factory-defined values
- Restoring settings from a file (see "To load settings from a saveset file" on page 496)

For details on save/recall instrument settings and associated remote commands, see Section 12.2.1, "Savesets", on page 490.

To save a user-defined preset

1. Open the "Menu" > "Settings" > "Preset" tab.
2. Enter a name for the preset file. Select the file format.
3. Tap Save.

   Note: If you want to store the file in another directory than the default one, select "Save As". See also: Section 12.6, "File selection dialog", on page 529

To restore the instrument settings to user-defined default values

1. Open the "Menu" > "Settings" > "Preset" tab.
2. Tap "Open" and select the preset file that contains the required settings.

   The instrument settings are restored to values that are stored in the file.
3. To use these settings as preset values, select "Enable user-defined preset".
4. Press the [Preset] key.

To restore all settings to the factory defaults

1. Open the "Menu" > "Settings" > "Preset" > "Factory" tab.
2. Tap the "Restore factory defaults" button.

   All settings on the R&S RTP are reset to their factory-defined values. As long as no user-defined preset file is loaded and "Enable user defined preset" is disabled, the [Preset] key also resets the instrument settings to factory defaults.

4.7 Maintenance settings

In the "Settings" > "Maintenance" dialog box, you define the the look and feel of the display element, e.g. waveform colors, result position, or grid behavior.

4.7.1 Firmware update

Access: "Menu" > "Settings" >"Maintenance" > "FW Update"

Your instrument is delivered with the latest firmware version. Firmware updates are provided on the internet at:

www.rohde-schwarz.com/firmware/rtp.


The "Release Notes" describe the improvements and modifications of all firmware versions. They also explain how to update the firmware. They are available along with the firmware on the same web page.

4.7.2 Alignment

When data from several input channels is displayed at the same time, it may be necessary to align the data vertically or horizontally to synchronize the time bases or amplitudes and positions. This is the case, for example, when strong temperature changes occur (> 5°).

4.7.2.1 Control

Access: "Menu" > "Settings" >"Maintenance" > "Alignment"

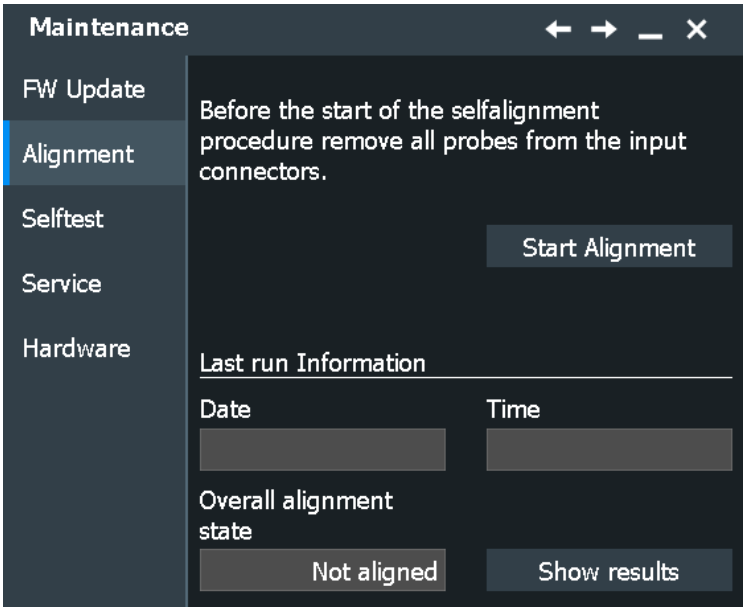

Start Alignment
Starts the self-alignment procedure for all channels.

Remote command:
`*CAL?` on page 1352


Date / Time / Overall alignment state
Show the date, time and the summary result of the self-alignment process: not aligned, passed or failed. Detailed results are provided on the "Results" tab.

Remote command:
`CALibration:DATE?` on page 1392
`CALibration:TIME?` on page 1392
`CALibration:RESult?` on page 1392

4.7.2.2 Results

For each channel, the results of the individual alignment steps are shown for all technical channel component. In case you require support, you may be asked to provide this information.

Access: "Settings" >"Maintenance" > "Alignment" > "Show results"

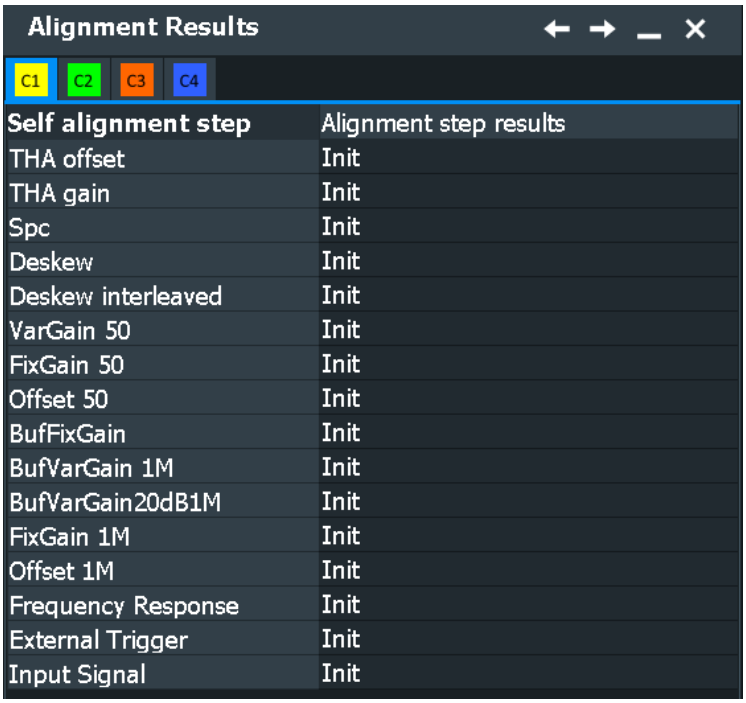

4.7.2.3 Performing a self-alignment

The self-alignment aligns the data from several input channels vertically and horizontally to synchronize the timebases, amplitudes and positions. The self-alignment process includes a basic hardware check.

Recommendation on performing the self-alignment:

- When putting the instrument into operation for the first time
- After a firmware update
- Once a week
- When major temperature changes occur (> 5°)


1. Warm up the instrument before you start the self-alignment. The minimum warm-up time is indicated in the specifications document.
2. Remove the probes from the input connectors.
3. In the "Menu" > "Settings" menu, select "Maintenance".
4. In the "Alignment" tab, tap "Start Alignment".

   The alignment process can take several minutes. A message box informs you about the running process, wait until this message box closes.
   The overall pass/fail result is shown in the "Overall alignment state" field. The results of the individual alignment steps for each input channel are indicated in the "Results" tab. This information is required if problems arise.

4.7.3 Self-test

The instrument's self-test checks the hardware for correct operation. Perform the self-test if you suspect problems in hardware operation.

Access: "Settings" >"Maintenance" > "Selftest"

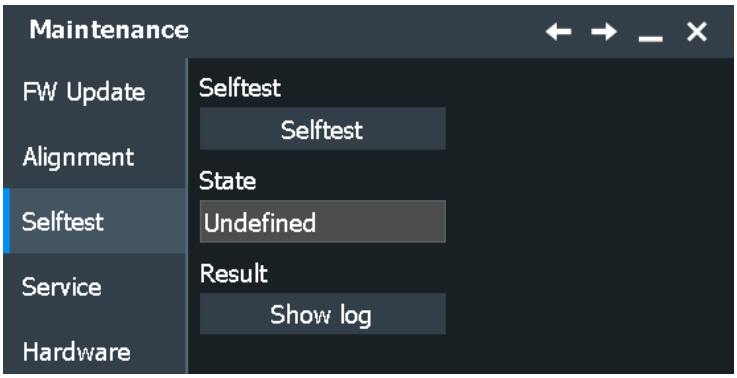

The test can take several minutes. The summary result is shown in the "State" field, which can be helpful in case you need support.

Selftest
Starts the self-test.

Remote command:
`*TST?` on page 1356

State
Shows the summary result of the self-test: Pass or Fail.

Remote command:
`DIAGnostic:SERVice:STST:STATe?` on page 1392

Result
Opens a log file with detailed information on the self-test steps and operation of hardware components, which can be helpful in case you need support.

4.7.4 Maintenance information

Access: "Settings" >"Maintenance" > "Hardware" tab > "Advanced"

The "Maintenance" dialog box provides information on your R&S RTP configuration, which can be helpful in case you need support.

System Info
This tab provides general information on the hardware configuration, and indicates where system information can be found on the instrument. Here you can also show the content of the device footprint file.

Remote command:
DIAGnostic:SERVice:PARTnumber on page 1393
DIAGnostic:SERVice:SERialnumber? on page 1393
SYSTem:DFPRint on page 1393

Mainboard
This tab provides information on the mainboard configuration in your instrument.

Frontend
This tab provides information on the frontend configuration in your instrument.

Frontpanel
This tab provides information on the front panel module installed in your instrument.

MSO
This tab is only relevant if the MSO option R&S RTP-B1 is installed. The tab provides information on the MSO hardware module that is installed in your instrument.

AWG
This tab is only relevant if the waveform generator option R&S RTP-B6 is installed. The tab provides information on the generator hardware module that is installed in your instrument.

PSC
This tab is only relevant if the pulse source option R&S RTP-B7 is installed. The tab provides information on the pulse source hardware module that is installed in your instrument.

Service
This tab allows the service personnel to enter a password that activates further service functions.


Remote command:
- DIAGnostic:SERVice:PWD on page 2846

4.8 Save / recall

4.8.1 Autonaming

Access:"Menu" > "Settings" key > "Maintenance" > "Autonaming" tab.

4.8.1.1 Autonaming settings

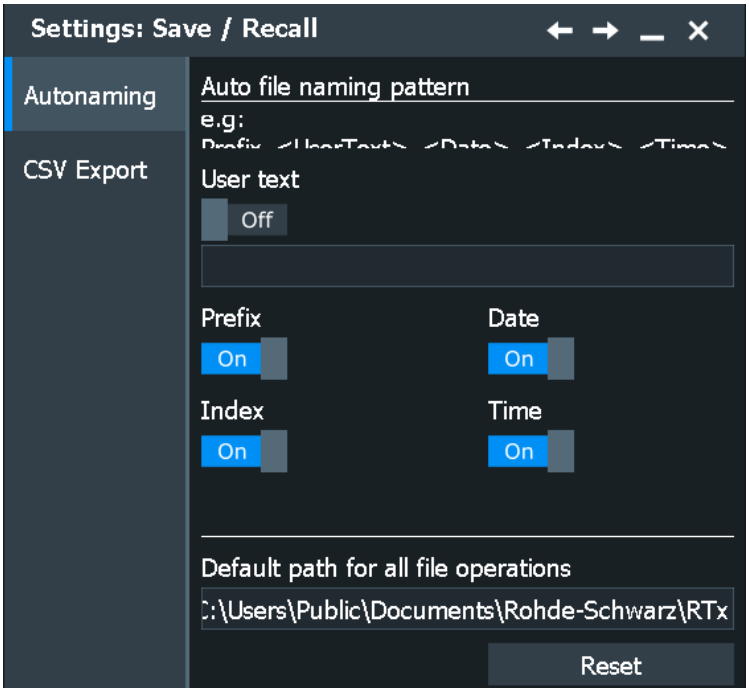

In this tab, you can define the pattern for automatic file name generation. This name is used as the default file name. The default path is the storage location for all saved files and their subdirectories.

Prefix
If enabled, inserts the default prefix in the file name. The prefix indicates the type of data that is saved, for example, Histogram, RefCurve, Settings.

Remote command:
`MMEMory:AUTonaming:PREFix` on page 1802

User text (enable)
If enabled, inserts the specified user text after the prefix.

Remote command:
`MMEMory:AUTonaming:USERtext` on page 1802

Text input
User-defined text to be inserted after the prefix.

Remote command:
`MMEMory:AUTonaming:TEXT` on page 1803

Date
If enabled, inserts the current date.

Remote command:
`MMEMory:AUTonaming:DATE` on page 1802

Index
If enabled, inserts an index.

Remote command:
MMEMory:AUTonaming:INDex on page 1803

Time
If enabled, inserts the current time.

Remote command:
MMEMory:AUTonaming:TIME on page 1803

Default path for all file operations
Defines the default path displayed in the file selection dialog box for loading and storing operations. If a USB flash drive is connected, the path is set automatically to the drive letter of the USB flash drive.

To switch the directory quickly, double-tap the input field. Use the symbols on the left of the file explorer box to change the directory.

Remote command:
MMEMory:AUTonaming:DEFaultpath on page 1803

Reset
Resets the default file path to the factory default.

Remote command:
MMEMory:AUTonaming:RESPath on page 1803
MMEMory:AUTonaming:RESall on page 1804

4.8.1.2 Defining default file paths and names

When a save or load operation is performed, a default file name and path is provided. You can configure which path is used and how the file name is generated. In the file selection dialog box, you can change the folder and name as desired.

To define the default file path

1. Tap "Menu" > "Settings".
2. Select the "Save /Recall" tab.
3. Select the "Autonaming" tab.
4. Double-tap the "Default path for all file operations" field.

   The directory selection dialog box is opened.
5. Select the folder in which the data is stored by default. Use the symbols on the left of the file explorer box to switch to often used directories.
6. To restore the factory-set default path, tap "Reset" next to the path field.

To define the automatic file name pattern

The automatic file name pattern can consist of the following elements:

<Prefix>_<UserText>_<Date>_<Index>_<Time>

The prefix depends on the data type to be stored and cannot be changed by the user. The other elements can be enabled or disabled as required.


1. Tap "Menu" > "Settings".
2. Select the "Save /Recall" tab.
3. Select the "Autonaming" tab.
4. To insert a user-defined text after the prefix, enter the text in the edit field. and enable "User text".
5. If you want to exclude the prefix, current date, time or an index (serial number), disable the corresponding option.

   The specified elements are used to generate the default file name for the next storage operation.

4.8.2 CSV export

Access: "Menu" > "Settings" key > "Save /Recall" > "CSV Export" tab.

In this dialog, you can define the format of your CSV file.

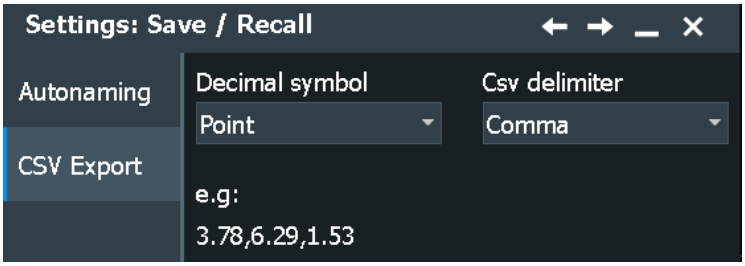

Decimal symbol
Selects if point or comma is used as a decimal symbol in the exported CSV file.

Remote command:
`EXPort:RESult:DECSymbol` on page 1804

Csv delimiter
Selects the list separator symbol from a list. Available are semicolon, comma, space, tab and colon.


Remote command:
`EXPort:RESult:DELimiter` on page 1804

4.8.3 External application

The R&S RTP can start an external application on the instrument or in the network (if connected) when an event occurs.

The following events can start an application:

- Trigger event
- Mask violation
- Successful completion of mask test
- Limit or margin violation of measurements
- Successful completion of limit and margin tests

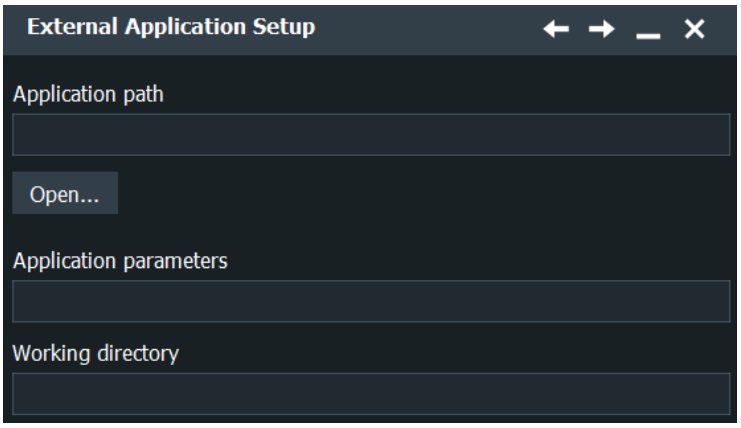

Set the path of the application executable, optional parameters, and the working directory as in a Windows shortcut definition. The setup is valid for all events.

Remote commands:

- `EXECutable:NAME` on page 1804
- `EXECutable:PARameter` on page 1805
- `EXECutable:WDIRectory` on page 1805

5 Acquisition and waveform setup

This chapter describes the horizontal and vertical settings as well as the acquisition and probe setup.

5.1 Basics

This chapter provides background information on the essential settings in the vertical and horizontal systems, on acquisition setup and probing.

5.1.1 Vertical system

The controls and parameters of the vertical system are used to scale and position the waveform vertically.

5.1.1.1 Input coupling

The input coupling influences the signal path between input connector and the following internal signal stage. The coupling can be set to DC or ground.

- DC coupling shows all parts of an input signal. DC coupling is the default for 50 Ω input impedance to connect, for example, active probes.
- Ground coupling disconnects the input signal from the vertical system to see the ground level (zero volts) on the screen. Ground coupling is useful for reference purposes.
- Using the R&S RT-Z1M probe adapter, you can connect probes requiring 1 MΩ load impedance, for example, standard passive probes.

5.1.1.2 Vertical scale and position

Vertical scale and vertical position directly affect the resolution of the waveform amplitude. The vertical scale corresponds to the ADC input range. To get the full resolution of the ADC, set up the waveforms to cover most of the height of the diagram.

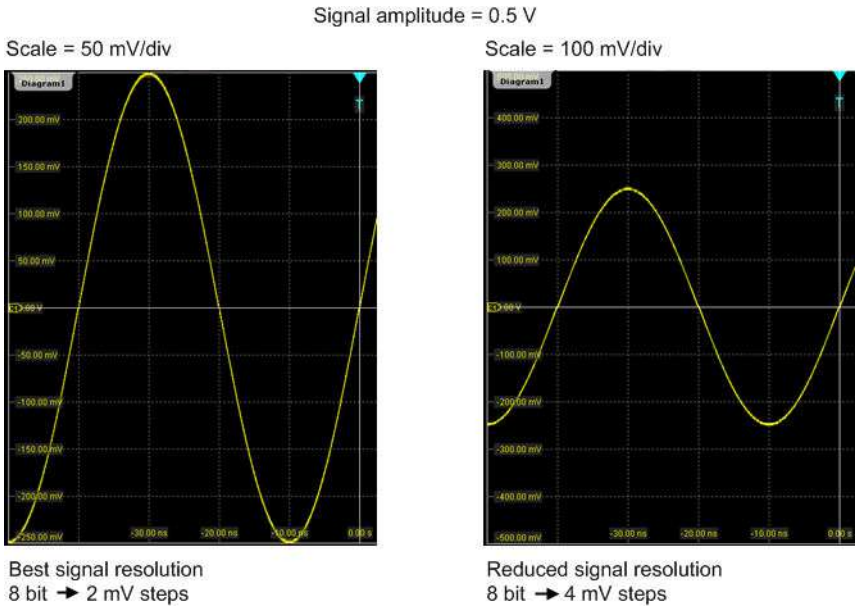


Figure 5-1: Input range and resolution of the ADC

With R&S RTP, you can work with multiple diagrams, and each diagram obtains the full vertical resolution, no matter where the diagram is placed. Therefore, use a separate diagram for each waveform instead of the traditional setup that arranges the waveforms side by side in one diagram.

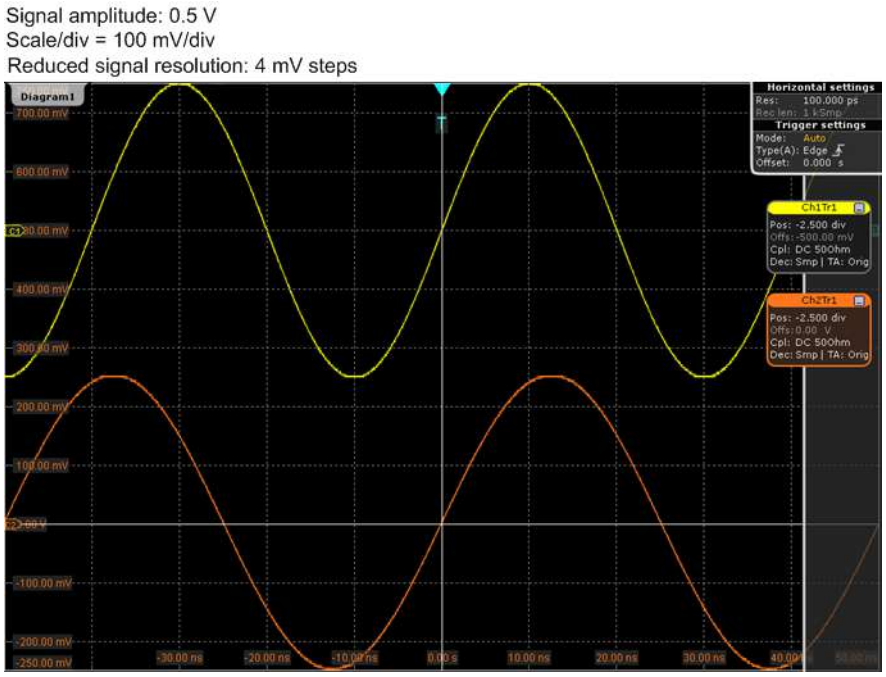


Figure 5-2: Traditional setup of multiple waveforms in one diagram: reduced resolution

Signal amplitude: 0.5 V
Scale = 50 mV/div
Best signal resolution: 2 mV steps

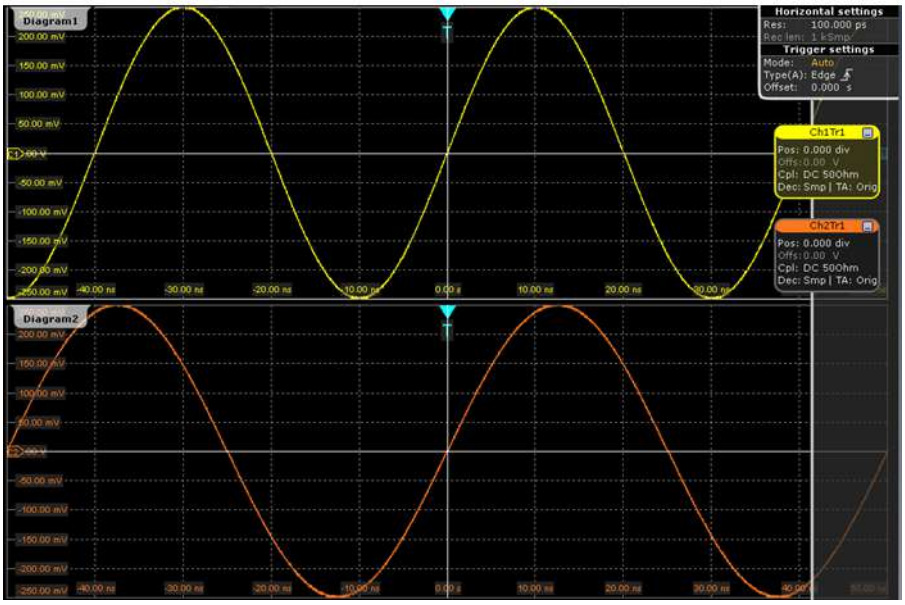


Figure 5-3: R&S RTP setup of multiple waveforms in separate diagrams: best resolution

5.1.1.3 Bandwidth

For analog applications, the highest signal frequency determines the required oscilloscope bandwidth. The oscilloscope bandwidth should be slightly higher than the maximum frequency included in the analog test signal to measure the amplitude with very little measurement error.

Most test signals are more complex than a simple sine wave and include several spectral components. A digital signal, for example, is built up of several odd harmonics. As a rule, for digital signals the oscilloscope bandwidth should be 5 times higher than the clock frequency to be measured.

The oscilloscope is not a stand-alone system. You need a probe to measure the signal of interest, and the probe has a limited bandwidth, too. The combination of oscilloscope and probe creates a *system bandwidth*. To reduce the effect of the probe on the system bandwidth, the probe bandwidth must exceed the bandwidth of the oscilloscope, the recommended factor is 1.5 x oscilloscope bandwidth. See also: Section 5.1.4.1, "Voltage probes", on page 120

Maximum bandwidth of R&S RTP134B and R&S RTP164B


The maximum instrument bandwidth of 13/16 GHz is achieved when the instrument is running in interleaving mode. Interleaving is active if only two channels are used: either channel 1 or channel 2, and either channel 3 or 4. The maximum bandwidth is available on the two interleaved channels. If more channels are used, interleaving is disabled, and the maximum bandwidth is 8 GHz.

5.1.2 Sampling and acquisition

The vertical system of a digital oscilloscope conditions the test signal in a way that the following A/D converter (ADC) can transform the measured voltage into digital data.

5.1.2.1 Sampling and processing

The A/D converter samples the continuous signal under test at specific points in time and delivers digital values called **ADC samples**. The rate at which the converter is working is the **ADC sample rate**, a constant value specified in GHz: $f_{ADC} = 1 / T_I$

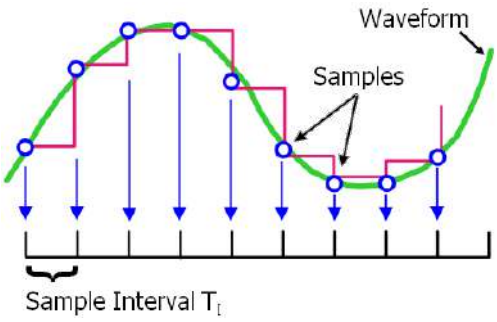

The digital ADC samples are processed according to the acquisition settings. The result is a waveform record that contains **waveform samples** and is stored in the **waveform memory**. The waveform samples are displayed on the screen and build up the waveform.

The number of waveform samples in one waveform record is called **record length**. The rate of recording waveform samples - the number of waveform samples per second - is the **sample rate**. The higher the sample rate, the better the resolution is and the more details of the waveform are visible.

Minimum sample rate and aliasing

A sufficient resolution is essential for correct reconstruction of the waveform. If the signal is undersampled, aliasing occurs - a false waveform is displayed. To avoid aliasing and accurately reconstruct a signal, Nyquist theorem postulates that the sample rate must be at least twice as fast as the highest frequency component of the signal. However, the theorem assumes ideal conditions, so the Nyquist sample rate is usually not sufficient.

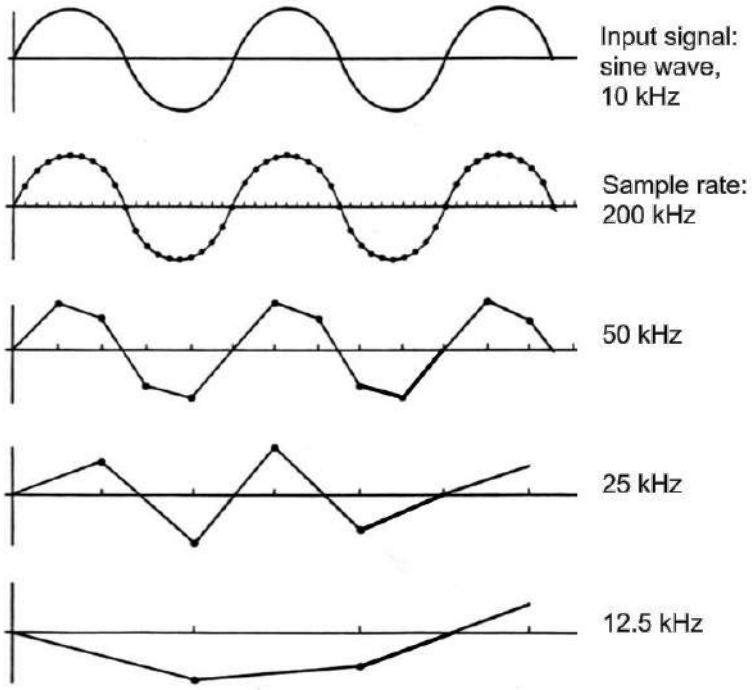


Figure 5-4: Waveforms acquired with different sample rates

To avoid aliasing, the sample rate must be set to a value 3 to 5 times the fastest frequency component of the signal. A higher sample rate increases signal fidelity, increases the chance to capture glitches and other signal anomalies, and improves the zoom-in capabilities.

5.1.2.2 Acquisition settings

The sample rate can be the same as the constant ADC sample rate, or higher, or lower. To get a higher sample rate, interpolation as method of **resolution enhancement** is used. To reduce the sample rate, **decimation** methods help: sample, peak detect, high resolution and RMS.

As digital waveform data is stored in the memory, and the memory can save many waveform records, further **waveform arithmetic** processing is possible: average and envelope waveforms are resulting waveforms, created from a composite of sample points taken from multiple acquisitions.

You can display up to three waveforms from one input signal and apply different decimation and arithmetic to each waveform.

5.1.2.3 Acquisition control

You can run the R&S RTP in two ways:

- Run / Stop: the instrument acquires data until you stop it manually.
- Single: the instrument samples and processes a specified number of acquisitions.

The determining point of an acquisition is the trigger. The instrument acquires continuously and keeps the sample points to fill the pre-trigger part of the waveform record. When the trigger occurs, the instrument continues acquisition until the post-trigger part of the waveform record is filled. Then it stops acquiring and waits for the next trigger. When a trigger is recognized, the instrument does not accept another trigger until the acquisition is complete.

The trigger modes define how the instrument triggers:

- Normal: The instrument acquires a waveform only if a real trigger occurs, that is, if all trigger conditions are fulfilled.
- Auto: The instrument triggers repeatedly after a fixed time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. If the real trigger is faster than the auto trigger, both modes are virtually the same.


In practice, both trigger modes are useful: The auto mode lets you see the signal with little adjustment, while the normal mode selects the interesting part of the waveform. If you want to acquire a specified number of waveforms, make sure to select the normal trigger mode. Thus you get only the required number of interesting acquisitions.

See also: Section 6, "Triggers", on page 199.


5.1.3 Horizontal system

5.1.3.1 Parameters of the horizontal system

The control parameters of the horizontal system are tightly connected. Thus, changing one parameter affects the other parameters as well.

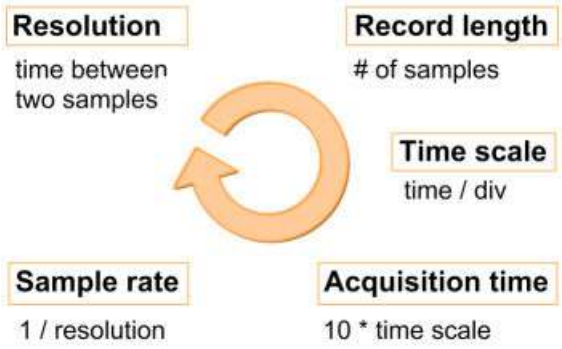

The mathematical dependencies can be summarized as follows:

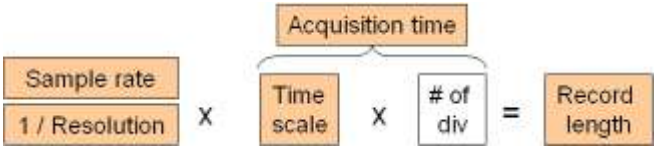

The number of divisions is 10, which is the only constant parameter.

When you set up horizontal parameters, you can choose whether the record length or the resolution remains constant.

- With constant resolution, increasing the time scale also increases the record length, and vice versa. You can limit the record length to a maximum value.
- With constant record length, increasing the time scale coarsens the resolution, that is, the time between two waveform samples gets longer.


For both settings, the "Auto adjustment" ensures a sufficient resolution to prevent undersampling.

5.1.3.2 Horizontal position

As described before in Section 5.1.2.3, "Acquisition control", on page 117, the trigger is the determining point of the waveform record.

In many scenarios, you want to analyze the waveform some time before or after the trigger. To adjust the horizontal acquisition window to the waveform section of interest, you can use the following parameters:

- The **horizontal position** defines the time distance from the trigger point (the zero point of the diagram) to the reference point. Changing the horizontal position, you can move the trigger point, even outside the screen.
- The **reference point** is the rescaling center of the time scale on the screen. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point.

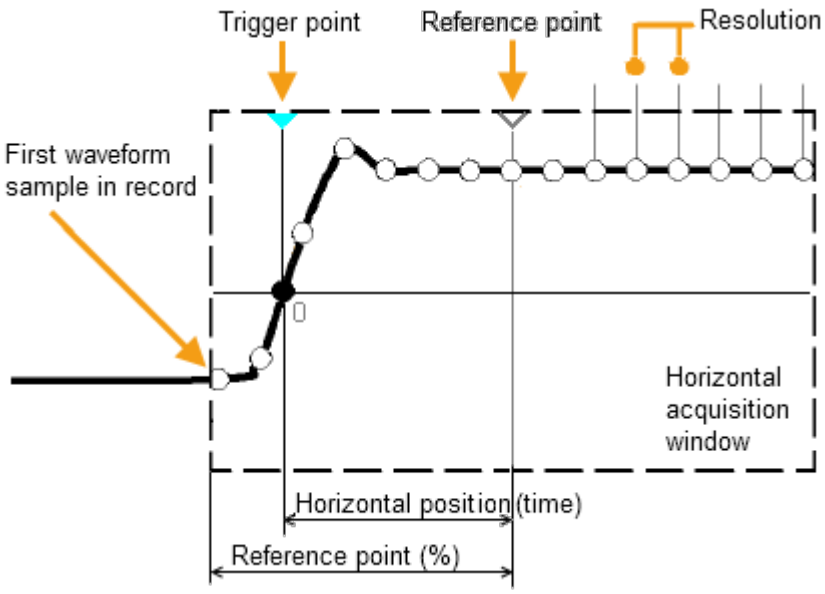

5.1.4 Probes

A probe connects the signal source (DUT) to the oscilloscope, and delivers the signal to be measured. It is the essential first link in the measurement chain.

An ideal probe fulfills the following requirements:

- Safe and reliable contacts
- Infinite bandwidth
- The probe should not load the signal source and thus impact the circuit operation.
- The connection should not introduce or suppress signal components (hum, noise, filter) and thus degrade or distort the transferred signal.

In reality, the probe can never be an ideal one, it always affects the signal transmission and the signal source, and thus the measured signal. It depends on the frequency to be measured and on the signal source to determine the acceptable loading, and to determine which kind of probe delivers good results.

The solution depends on the quantity to be measured regarding:

- Signal type: voltage, current, power, pressure, optical, etc.
- Signal amplitude: The oscilloscope itself can only display voltages in a limited range. Most probes can adjust the dynamic range to amplitudes from a few mV to 10 V. Smaller or much larger signals require specialized equipment.
- Signal frequency: High frequencies require advanced equipment to get correct results.
- Source characteristic: The source impedance is the decisive factor when choosing the suitable connection.

5.1.4.1 Voltage probes

The following table provides an overview on common voltage probes and their usage.

Table 5-1: Voltage probes overview

Probe type	Attenuation	Typical bandwidth range	Oscilloscope input	Usage
Passive, high impedance	1:1	10 MHz	1 MΩ	Low-speed signals, low-level signals
Passive, high impedance	10:1	500 MHz	1 MΩ	General purpose
Passive, low impedance	10:1	up to 10 GHz	50 Ω	High frequency
Active, single-ended	10:1	up to 10 GHz	50 Ω	High speed
Active, differential	10:1		50 Ω	Floating

For a list of recommended probes, refer to the R&S RTP product brochure.

Besides the possible input voltage range, two factors are important when selecting a voltage probe: Bandwidth and impedance over frequency.

- **Bandwidth:**
  The combination of probe and oscilloscope builds up a system. The resulting system bandwidth is approximately determined with:

$$\frac{1}{BW_{system}} = \sqrt{\left(\frac{1}{BW_{probe}}\right)^2 + \left(\frac{1}{BW_{scope}}\right)^2}$$

To measure the signal with low measurement error, the system bandwidth should be higher than the highest frequency component of the signal. The probe bandwidth must be even higher than the system bandwidth.

- **Impedance:**
  A minimum impedance is required to keep the circuit loading low. Over frequency, the impedance decreases, in particular with passive probes. The probe impedance should be approximately 10 times the impedance of the circuit test point at the highest signal frequency.

Active voltage probes - general

Active probes require operating power from the instrument and have a proprietary interface to the instrument. Their main qualities are:

- Low loading on signal source
- The probe is automatically recognized by the instrument, no adjustment is required.
- Adjustable DC offset at probe tip allows for high resolution on small AC signals which are superimposed on DC levels.
- Connections should be as short as possible to keep the usable bandwidth high.
- Observe the operating voltage range.
- The probe impedance depends on the signal frequency.

RT-ZS single-ended active probes and RT-ZD differential active probes provide special features for easier use and precise measurements. These special features are not available on RT-ZSxxE probes.

- The micro button on the probe head remotely controls important functions on the instrument, like running and stopping the acquisition, autoset, AutoZero and setting the offset to mean value.
- The R&S ProbeMeter measures DC voltages between the probe tip and the ground connection with very high precision. The result is displayed on the instrument's screen. So you can check DC voltages with different levels without having to adjust the measurement range of the oscilloscope. The R&S ProbeMeter also measures the zero error of the probe to optimize measurement results at small signal levels.

When you connect an R&S RT-ZSxx active probe to a channel input of the R&S RTP, the oscilloscope recognizes the probe. It reads the identification and calibration data from the probe box and shows the result in the "Setup" and "Probe Attributes" tabs. This data together with the deskew time for a given channel is stored and processed by the R&S RTP. If you connect the probe the next time to the same channel, the information is fetched and used.


Differential active probes

Differential active probes are designed to measure signals that are referenced against each other, and voltages that are not references to ground, for example twisted-pair

signal lines. The R&S RT-ZD probes are differential probes with high input impedance, they can be used to measure voltages between any two test points.

Compared with two-channel measurement setup with single-ended probes, the measurement with differential probes is symmetric due to the same amplification and cable length on both paths. It is also immune to interference and noise and occupies only one input channel.

A differential probe has three sockets: the positive signal socket (+), the negative signal socket (-), and the ground socket.

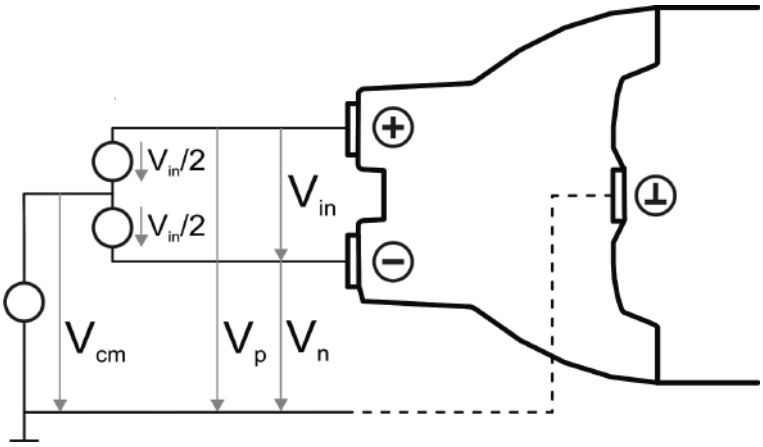

Multiple input voltages can be defined for a differential probe:

- Differential mode input voltage (V_{in}, V_{dm})
  Voltage between the positive and negative signal sockets
- Positive single-ended input voltage (V_p)
  Voltage between the positive signal socket and the ground socket
- Negative single-ended input voltage (V_n)
  Voltage between the negative signal socket and the ground socket
- Common mode input voltage (V_{cm})
  Mean voltage of positive and negative signal sockets referred to the ground socket, respectively

Two of these voltages are independent values, the other two can be calculated:

$$V_{in} = V_p - V_n$$

$$V_{cm} = \frac{V_p + V_n}{2}$$

R&S RT-ZD probes detect only differential input voltages and provide it to the oscilloscope. Common mode signals are suppressed by the probe. This characteristic is described by the common mode rejection ratio (CMRR):

$$CMRR = \frac{DifferentialGain}{CommonModeGain}$$

In addition, the R&S ProbeMeter of R&S RT-ZD differential probes can measure differential and common mode DC voltages. The measurement result is displayed on


the oscilloscope's screen. The common mode measurement of the R&S ProbeMeter allows you to check the input voltage relative to ground. Thus, the CM measurement is a convenient way to detect breaches of the operating voltage window, and the reason of unwanted clippings.

5.2 Horizontal

The "Horizontal" dialog provides the time base configuration for channel and spectrum waveforms.

5.2.1 Setup settings

Access: "Menu" > "Horizontal" > "Setup" tab.

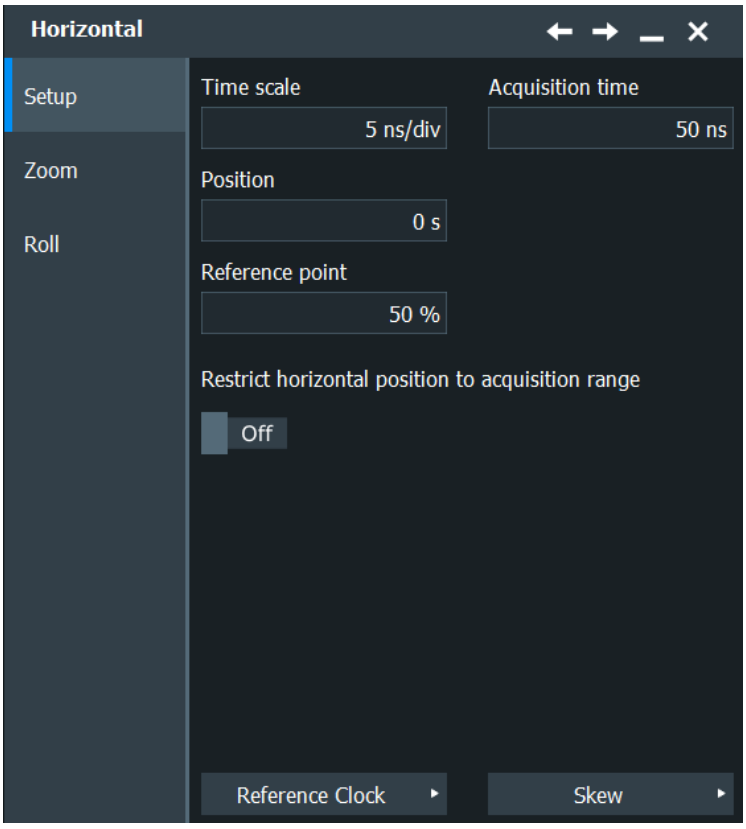

Time scale
Sets the horizontal scale for all channel and math waveforms in seconds per division. Increase the scale to see a longer time interval of the waveform. Decrease the scale to see it in more detail. The scale has a point that remains fixed on the screen when the scale value is changing - the reference point.

Remote command:
`TIMebase:SCALe` on page 1396

Acquisition time
Shows the time of one acquisition, that is the time across the 10 divisions of the diagram:

Acquisition time = Time scale * 10 divisions

Changing the acquisition time changes the time scale too.

Remote command:
`TIMebase:RANGe` on page 1396

Position
Defines the time distance between the reference point and the trigger point (the zero point of the diagram). If you want to see a section of the waveform some time before or after the trigger, enter this time as horizontal position. The requested waveform section is shown around the reference point. Use positive values to see waveform sections after the trigger - the waveform and the diagram origin move to the left.

See also "Reference point" on page 124.

Remote command:
`TIMebase:HORizontal:POSition` on page 1397

Reference point
Sets the position of the reference point in % of the screen. The reference point marks the rescaling center of the time scale. It is indicated by a grey triangle outline at the top of the diagram. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point.

Remote command:
`TIMebase:REFerence` on page 1397

Restrict horizontal position to acquisition range
If enabled, the horizontal position cannot be set outside the visible waveform diagram.

Remote command:
`TRIGger<t>:OFFSet:LIMited` on page 1398

Refence Clock
Opens a dialog for configuring the "Refence Clock" settings, see Section 5.3.2, "Reference clock (OCXO)", on page 128.


Skew
Opens a dialog for configuring the "Skew" settings, see Section 5.3.1, "Skew", on page 126.

5.2.2 Zoom settings

The zoom settings are described in Section 7.1, "Zoom", on page 266.

5.2.3 Roll settings

Access: "Menu" > "Horizontal" > "Roll" tab.

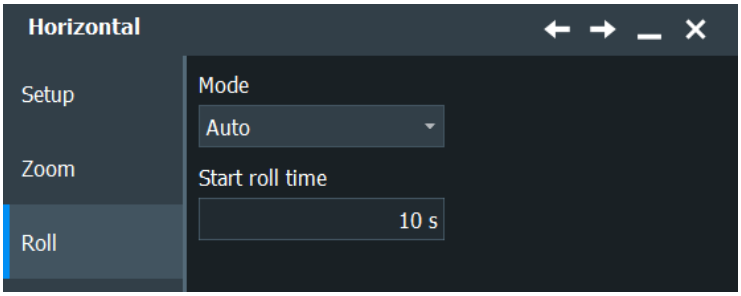

In this dialog, you can define the roll mode.

Roll mode
Selects, if the roll mode is set automatically by the instrument or if it is turned off.

In roll mode, the instrument shows the waveforms immediately, without waiting for the complete acquisition of the waveform record. If the time base is slow - at long time scale values - the roll mode saves waiting for the waveform display. The instrument displays newly acquired waveform points at the right edge of the display and moves the waveform to the left.

The roll mode has following restrictions:
- Roll mode disables persistence
- History is not available
- Event actions are not possible

The instrument activates the roll mode automatically if the following conditions are fulfilled:

- Acquisition time exceeds the defined "Minimum acquisition time"
- Waveform arithmetic is disabled ("Off")
- Only one waveform per channel is active
- All channel waveforms are set to the same decimation mode, and only to one of these values: "Sample", "Peak detect", or "High res"
- All mask tests are disabled
- Fast segmentation is disabled
- Event actions are disabled
- FFT is disabled
- All serial buses are disabled
- All digital channels are disabled (MSO option R&S RTP-B1)
- No CDR jitter data is acquired
- No zone trigger is active

The roll mode depends also on sample rate and record length. In roll mode, the sample rate limit is 2 MSa/s. At 50 s, the resulting record length limit is 100 MSa.

If the acquisition time is >50 s, the record length limit is effective, and the maximum sample rate depends on the acquisition time:

Sample rate ≤ 100 MSa / Acquisition time.

If the acquisition time is <50 s, the maximum sample rate in roll mode depends on the number of active channels:

Sample rate = 2 MSa/s / Number of active wfms.

The corresponding maximum record length is:

*Record length ≤ 2 MSa/s * Acquisition time / Number of active wfms.*

Thus, the roll mode switches off, or it does not activate automatically if:

- The record length exceeds the limit at acquisition times >50 s.
- The sample rate exceeds the limit.
- Too many waveforms are active.

Remote command:
`TIMebase:ROLL:ENABle` on page 1397
`TIMebase:ROLL:STATe?` on page 1398

Start roll time
The instrument can activate the roll mode automatically if the Acquisition time exceeds the value given here.

Remote command:
`TIMebase:ROLL:MTIMe` on page 1398

5.3 Horizontal accuracy


Access: "Menu" > "Horizontal" > "Setup" tab > "Skew".

The "Horizontal Accuracy" dialog box contains standard and optional settings to improve measurement and analysis accuracy and to reduce jitter effects.

5.3.1 Skew

Access: "Menu" > "Horizontal" > "Setup" tab > "Skew" > "Skew" tab.

Skew compensates signal propagation differences between channels caused by the different length of cables, probes, and other sources. Correct skew values are important for accurate triggering and timing relations between channels.

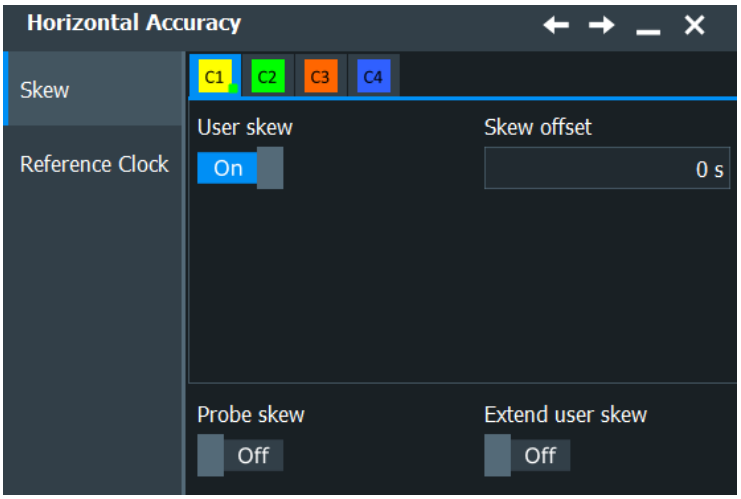

Make sure that the correct channel tab is selected.

User skew
If enabled, the "Skew offset" value is used for compensation.

Remote command:
`CHANnel<ch>:SKEW:MANual` on page 1464

Skew offset
Sets a delay value, which is known from the circuit specifics but cannot be compensated by the instrument automatically. It affects only the selected input channel.

The offset range and possible values depend on Extend user skew.

Remote command:
`CHANnel<ch>:SKEW:TIME` on page 1465

Probe skew
Measures the skew of all connected active probes and includes it in the total skew offset. The setting affects all active channels.

If an active probe is detected, the following information is shown:

"Active probe"	Shows the type of the probe that is connected to the selected channel.
"Probe group delay"	Shows the result of the probe skew measurement on the selected channel.
"Total skew offset"	If Extend user skew is disabled, the sum of the measured "Probe group delay" and the "Skew offset" is shown. If "Use skew offset" is disabled, the skew offset is ignored. If Extend user skew is enabled, only the probe skew is shown, and the skew offset is always ignored.

Remote command:
`PROBe<ch>:SKEState` on page 1465

Extend user skew
Allows you to set higher value in "Skew offset" to compensate for the delay of the measurement setup. Without extension, the deskew range is ±100 ns, and delays shorter than the sample interval can be compensated.

With extension, the maximum delay is ±1 s, and the instrument can compensate complete samples. Compensation takes effect after the trigger. The maximum number of acquisitions in the memory is reduced.

Use the extended skew range to compare signals: One signal goes directly from the generator to the scope, and the other signal goes from the generator through the DUT to the scope. The delay of the DUT is higher than ±100 ns.

Remote command:
`CHANnel<ch>:SKEW:EXTended` on page 1465

5.3.2 Reference clock (OCXO)

Access: "Menu" > "Horizontal" > "Setup" tab > "Skew" > "Reference clock" tab.

The oven-controlled crystal oscillator (OCXO) produces a 10 MHz internal reference signal with precise and stable frequency. With OCXO, you can also use an external reference signal. The input and output connectors for the external reference signal are on the rear panel.

Oven hot
Indicates when the oven has reached its nominal temperature and is operating with the specified accuracy. Otherwise, "Oven cold" indicates that the operating temperature is not yet reached.

Use external reference
Enables the use of the external reference signal instead of the internal OCXO reference.

If an external input reference is used, no signal is output at Ref Out. Without external reference, the 10 MHz frequency of the OCXO is output at Ref Out.

Remote command:
`SENSe[:ROSCillator]:SOURce` on page 1467

External reference
Sets the frequency of an external reference input signal that is connected to the external reference input on the rear panel of R&S RTP. A frequency range from 1 MHz to 20 MHz is supported.

Remote command:
`SENSe[:ROSCillator]:EXTernal:FREQuency` on page 1467

5.4 Acquire settings


The "Acquire" dialog provides the acquisition configuration for channel and spectrum waveforms.

5.4.1 Setup settings

The "Setup" tab in the "Acquire" dialog provides the settings for the time axis.

For background information, see Section 5.1.3, "Horizontal system", on page 118.

Access: "Menu" > "Acquire" > "Setup" tab.

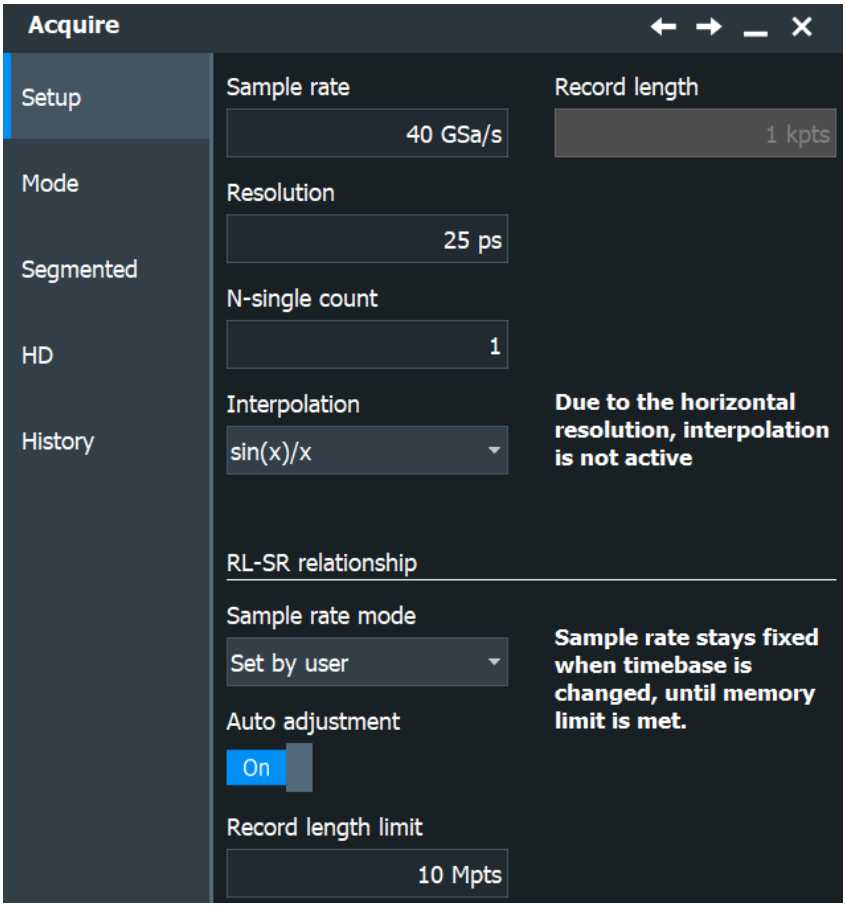

Sample rate
Sets the number of captured waveform points per second. It considers the samples of the ADC, and the reduction of waveform points by decimation.

If interpolation is not active, the sample rate is the reciprocal value of the resolution, and thus also depends on the acquisition time and the record length.

If interpolation is active, the sample rate is limited to the ADC sample rate.

See also:
- Section 5.1.2, "Sampling and acquisition", on page 116
- Section 5.1.3, "Horizontal system", on page 118

Remote command:
`ACQuire:SRReal` on page 1404

Record length
Indicates the number of waveform samples that build the waveform across the acquisition time.

Remote command:
`ACQuire:POINts[:VALue]` on page 1403

Resolution
Sets the time between two waveform samples. A fine resolution with low values produces a more precise waveform record.

Remote command:
`ACQuire:RESolution` on page 1403

Average count (N-single count)
Access:
- "Menu" > "Acquire" > "Setup" tab > "N-single count"
- "Menu" > "Acquire" > "Mode" tab > "Average count"
- "Menu" > "Acquire" > "Segmented" tab > disable "Acquire maximum" > "Required"
- [Math] > "Arithmetic" tab > "Mode" is not "Off" > "Average count"

The acquisition and average count has several effects:
- It sets the number of waveforms acquired with [Single]
- It defines the number of waveforms used to calculate the average waveform. Thus, the instrument acquires sufficient waveforms to calculate the correct average if "Average" is enabled for waveform arithmetic. The higher the value is, the better the noise is reduced.
- It sets the number of acquisitions to be acquired in a fast segmentation acquisition series. Thus, you can acquire exactly one fast segmentation acquisition series with [Single].
  If fast segmentation is enabled and configured to acquire the maximum number of acquisitions, the acquisition count is set to that maximum number and cannot be changed.
  See also "Number of acquisitions" on page 135.
- It is the "Finished" criteria for the state of a mask test.

Remote command:
`ACQuire:COUNt` on page 1400

Interpolation
Selects the interpolation method. If the defined "Sample rate" is higher than the ADC sample rate, interpolation adds points between the captured samples of the waveform by various mathematic methods.

"Linear"	Two adjacent ADC sample points are connected by a straight line, the interpolated points are located on the line. You see a polygonal waveform similar to the real signal, and also the ADC sample points as vertexes.
"sin (x)/x"	Two adjacent ADC sample points are connected by a sin(x)/x curve, and also the adjoining sample points are considered by this curve. The interpolated points are located on the resulting curve. This interpolation method is precise and shows the best signal curve.
"Sample/Hold"	The ADC sample points are displayed like a histogram. For each sample interval, the voltage is taken from the sample point and considered as constant, and the intervals are connected with vertical lines. Thus, you see the discrete values of the ADC - the measured samples.

Remote command:
`ACQuire:INTerpolate` on page 1401

Sample rate mode
You can choose to keep constant either the sample rate or the record length when you adjust the time scale or acquisition time.

See also: Section 5.1.3, "Horizontal system", on page 118

"Set by user"	With constant sample rate and resolution, increasing the time scale also increases the record length, and vice versa. You can limit the record length to a maximum value.
"Fixed record length"	With constant record length, increasing the time scale reduces the sample rate and coarsens the resolution, that is, the time between two waveform samples gets longer.

Remote command:
`ACQuire:POINts:AUTO` on page 1401

Auto adjustment
Prevents undersampling and ensures a sufficient resolution to acquire the correct waveform if the time scale is changed. The setting takes effect if the changed parameter - resolution or record length - reaches a limit. The instrument automatically keeps this parameter constant at its limit, and changes the other parameter regardless of the "Resolution / Record length" setting.

See also: Record length limit

Remote command:
`ACQuire:POINts:AADJust` on page 1402


Record length limit
Sets a limit for the record length to prevent very large records. This value is only available if "Auto adjustment" is on and a constant resolution is selected. If you increase the time scale, the resolution remains constant, and the record length increases until the limit is reached. Further increase of the time scale changes the resolution and keeps the record length limit.

See also:
- Record length
- Auto adjustment

Remote command:
`ACQuire:POINts:MAXimum` on page 1402

5.4.2 Mode settings

Access: "Menu" > "Acquire" > "Mode" tab.

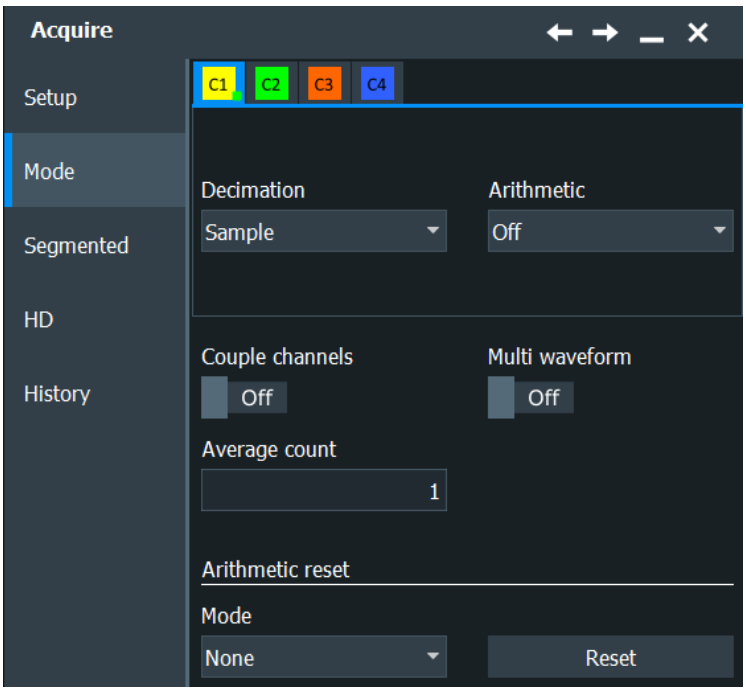

Decimation
Selects the decimation mode. Decimation reduces the data stream of the ADC to a stream of waveform points with lower sample rate and a less precise time resolution. The R&S RTP uses decimation, if the waveform "Sample rate" is less than the ADC sample rate. In this case, interpolation is not possible.

The decimation mode is waveform-specific, you can select another mode for each waveform.

There are different methods to define the recorded waveform point out of n sample points:

"Sample"	One of n samples in a sample interval of the ADC is recorded as waveform point, the other samples are discarded. The time between the two adjacent waveform points is exactly the resolution. Very short glitches might remain undiscovered by this method.
"Peak detect"	The minimum and the maximum of n samples in a sample interval are recorded as waveform points, the other samples are discarded.
"High res"	The average of n sample points is recorded as one waveform sample. Averaging reduces the noise, the result is a more precise waveform with higher vertical resolution. In "High res" mode, decoding of serial protocols does not work.
"RMS"	The waveform point is the root mean square of n sample values. Thus, the RMS value reflects the instantaneous power. This arithmetic mode is used to average a measured power waveform. Linear averaging of power signals causes an error dependent on the noise of the signal to be averaged.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:TYPE` on page 1405

Arithmetic
Waveform arithmetic builds the resulting waveform from several consecutive acquisitions of the signal. The arithmetic works with interpolated and decimated waveforms.

This setting is waveform-specific.

The methods are:

"Off" The data of only one acquisition is recorded according to the decimation settings. In effect, no waveform arithmetic is processed.

"Envelope" Detects the minimum and maximum values in a sample interval over several acquisitions. Each acquisition is done in the "Peak detect" decimation mode, and the most extreme values for all acquisitions build the envelope. The resulting diagram shows two envelope waveforms: the minimums (floor) and maximums (roof).
The envelope is built until the restart criterion is reached, see "Arithmetic Reset > Mode" on page 134.

Note: If you change from "Envelope" to "Off", make sure to set also the "Decimation" to the required value.

"Average" The average is calculated from the data of the current acquisition and several acquisitions before. The method reduces random noise and other heterodyne signals. It requires a stable, triggered and periodic signal for correct function.
The number of acquisitions for average calculation is defined with "Average count"
The "Auto reset mode" defines the restart condition.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:ARIThmetics` on page 1405

Couple channels
Sets the acquisition mode and the waveform arithmetic of all channels to the last set value.

If the acquisition settings are coupled, "Multi waveform" is not available, only one waveform per channel can be used.

Remote command:
`ACQuire:CDTA` on page 1400

Multi waveform
For each channel, up to three waveforms can be shown and analyzed. The decimation mode and the waveform arithmetic are specific for each waveform. So you can analyze several aspects of the signal: For example, waveform1 shows the peaks, and waveform2 shows the average of the signal.

Remote command:
`ACQuire:MUWaveform` on page 1401

Average count (N-single count)
Access:
- "Menu" > "Acquire" > "Setup" tab > "N-single count"
- "Menu" > "Acquire" > "Mode" tab > "Average count"
- "Menu" > "Acquire" > "Segmented" tab > disable "Acquire maximum" > "Required"

- [Math] > "Arithmetic" tab > "Mode" is not "Off" > "Average count"

The acquisition and average count has several effects:

- It sets the number of waveforms acquired with [Single]
- It defines the number of waveforms used to calculate the average waveform. Thus, the instrument acquires sufficient waveforms to calculate the correct average if "Average" is enabled for waveform arithmetic. The higher the value is, the better the noise is reduced.
- It sets the number of acquisitions to be acquired in a fast segmentation acquisition series. Thus, you can acquire exactly one fast segmentation acquisition series with [Single].
  If fast segmentation is enabled and configured to acquire the maximum number of acquisitions, the acquisition count is set to that maximum number and cannot be changed.
  See also "Number of acquisitions" on page 135.
- It is the "Finished" criteria for the state of a mask test.

Remote command:
`ACQuire:COUNt` on page 1400

Arithmetic Reset > Mode
Defines when the envelope and average evaluation restarts.

"None"	No restart, the number of acquisitions considered by the waveform arithmetics is not limited.
"Time"	Restarts the envelope and average calculation after the time defined in "Time".
"Waveforms"	Restarts the envelope and average calculation after a number of acquired waveforms defined in "Count".


Remote command:
`ACQuire:ARESet:MODE` on page 1399
`ACQuire:ARESet:TIME` on page 1399
`ACQuire:ARESet:COUNt` on page 1400

Reset
Forces the immediate restart of the envelope and average calculation for all waveforms.

Remote command:
`ACQuire:ARESet:IMMediate` on page 1399

5.4.3 Segmented settings

Access: "Menu" > "Acquire" > "Segmented" tab.

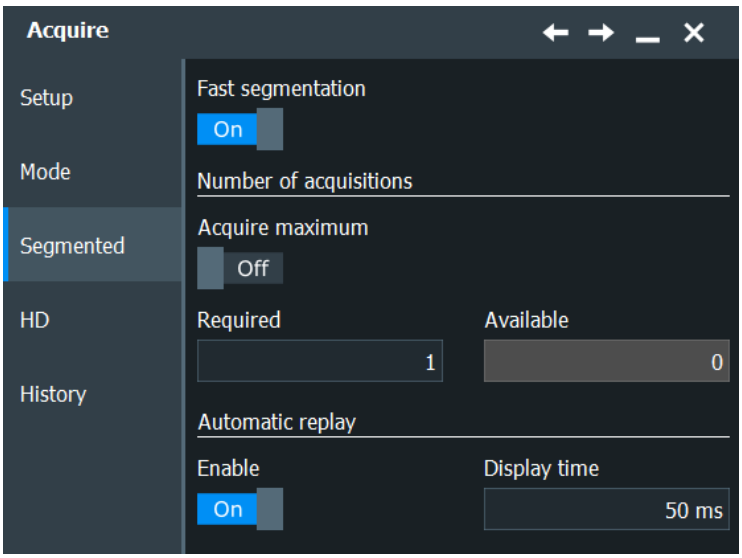

Fast segmentation
Switches the fast segmentation mode on and off.

Remote command:
`ACQuire:SEGMented:STATe` on page 1406

Number of acquisitions
You can define the number of acquisitions to be stored in a fast segmentation acquisition series:

- Acquire the maximum number of acquisitions that can be stored in the sample memory.
  To acquire the maximum number, enable "Acquire maximum". The maximum number of acquisitions is shown in the "Required" field.
- Acquire a given number of acquisitions.
  Enter the number in the "Required" field.

The acquisition count (Average count (N-single count)) is always set to the required number of acquisitions. Thus you can acquire exactly one fast segmentation acquisition series with [Single]. The [Run / Stop] key works in the same way as [Single], it stops acquisition when the series is completed.

You can stop the running acquisition before the series is completed.

The number of acquired waveforms is shown in "Available" and can be displayed with "Show history".

Remote command:
`ACQuire:SEGMented:MAX` on page 1406

Enable automatic replay
If enabled, the instrument starts processing and displaying the data when the acquisition series is captured completely. Depending on the number of acquisitions, it can take some time until the acquisition series is displayed. If the setting is disabled, the instrument only captures the data and stores it in the sample memory.

Remote command:
ACQuire:SEGMented:AUToreplay on page 1407

Display time
Defines the display speed of the fast segmentation acquisition series. Display starts after the series has been captured completely.

5.4.4 High definition mode

The high definition mode offers up to 16 bits of vertical resolution. Higher vertical resolution reduces quantization noise and acquires waveforms of higher accuracy with finer details of the signal to be seen.

The number of vertical resolution bits defines the number of vertical levels that the acquisition samples are mapped to (quantization). 16 bits of resolution represent 65536 voltage quantization levels, while 8 bits of resolution represent only 256 voltage levels. The waveform values are recorded with 16 bit word length, except for peak detect decimation.

The higher vertical resolution is achieved by applying a digital lowpass filter (DSP filter) to the output of the ADC, which reduces the bandwidth of the signal. Increasing the bandwidth reduces the resulting digital resolution. The high definition is also applied to the digital trigger, thus the R&S RTP can trigger with the same high resolution with which they can display signals.

High definition can be used, for example, to measure slow pulses with high accuracy, or to analyze AM signals with very low modulation index, as used in radar.

Restriction: When high definition mode is active, differential signals are not available.

See also:

- Section 5.1.1, "Vertical system", on page 113
- Section 5.1.2, "Sampling and acquisition", on page 116

5.4.4.1 High definition settings

Access: "Menu" > "Apps" > "HD"

High definition is a special acquisition mode of the oscilloscope. This mode has only one setting - the filter bandwidth.

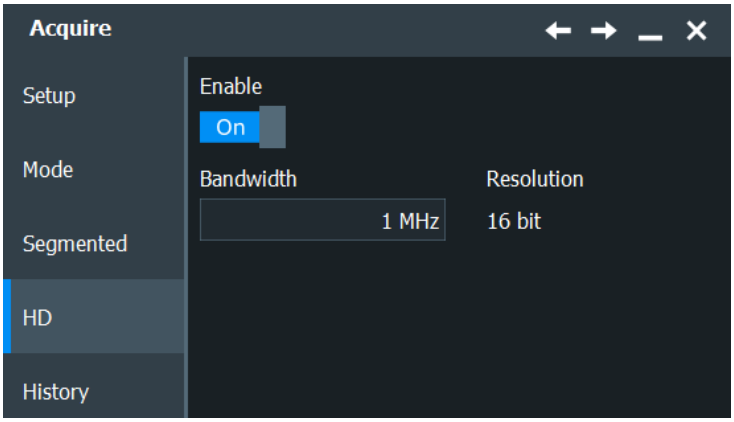


Figure 5-5: Setting the instrument into high definition mode

Enable
Enables the higher digital resolution, up to 16 bit.

Remote command:
`HDEFinition:STATe` on page 1466

Bandwidth
Sets the filter bandwidth for the high definition mode. The lower the filter bandwidth, the higher the resulting resolution.

Bandwidth	Resolution
≤ 200 MHz	16 bit
300 MHz, 500 MHz	12 bit
1 GHz	11 bit
2 GHz	10 bit

The maximum filter bandwidth is 2GHz.

Remote command:
`HDEFinition:BWIDth` on page 1466

Resolution
Shows the resulting vertical resolution in high definition mode. The resolution depends on the selected Bandwidth.


Remote command:
`HDEFinition:RESolution?` on page 1466

5.4.4.2 Effects of the high definition mode

The high definition mode has several effects:

Acquisition

The active high definition mode is indicated in the "Acquisition" label, and the actual resolution is shown.



The high definition mode works with half the real-time sample rate. For FFT, the instrument halves this sample rate again.


The waveform values are recorded with 16-bit word length, except for peak detect decimation (2 values with 8 bit).

Vertical system

The current bandwidth is shown in the channel label.

In the "Vertical" > "Bandwidth" dialog (C<x>), the "Bandwidth" setting is not available because the bandwidth is set by the high definition filter.


The minimum vertical scale is 1 mV/div instead of 2 mV/div in normal mode.

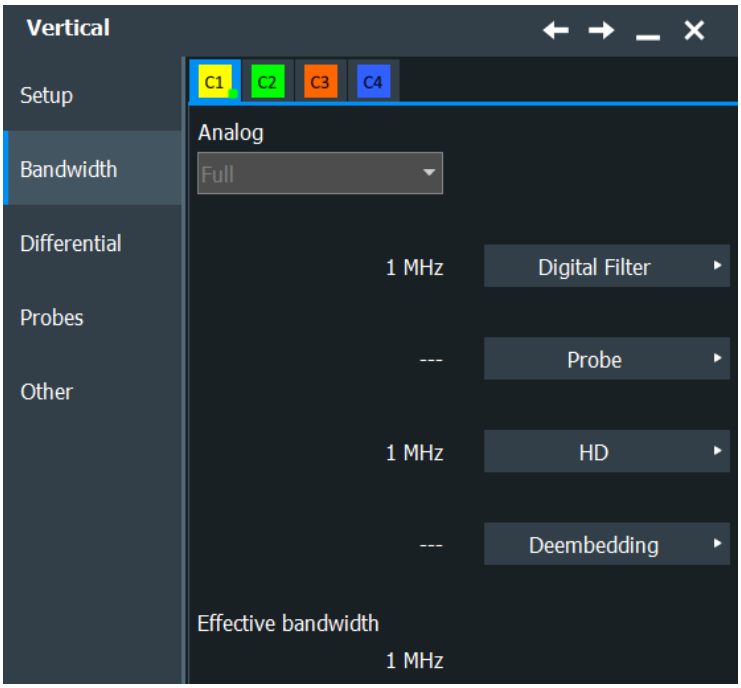

Digital filter

The digital filter settings are set automatically.

You can change the high definition "Bandwidth" in the "Acquire" > "HD" dialog.

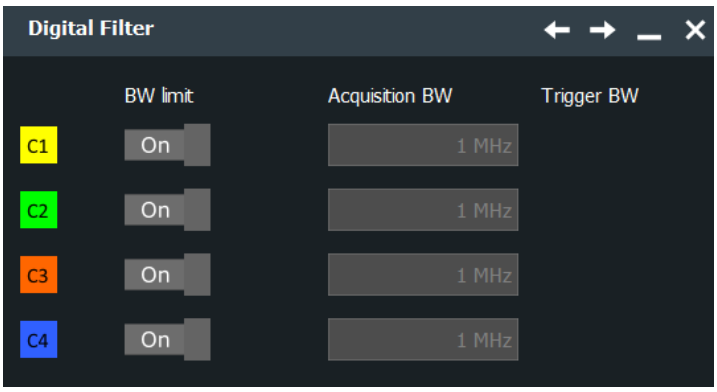


History

Due to the 16-bit word length, the history depth is reduced, less waveforms are saved than in normal mode.

Export

In high definition mode, waveform data in raw format is exported to file with 16-bit word length, except for peak detect decimation (2 values with 8 bit). In addition, you can define the byte order of the data words.

You can define additional export settings in the "Menu" key >"Save/Recall" key > "Save" tab > "Waveform" > "Setup" tab.

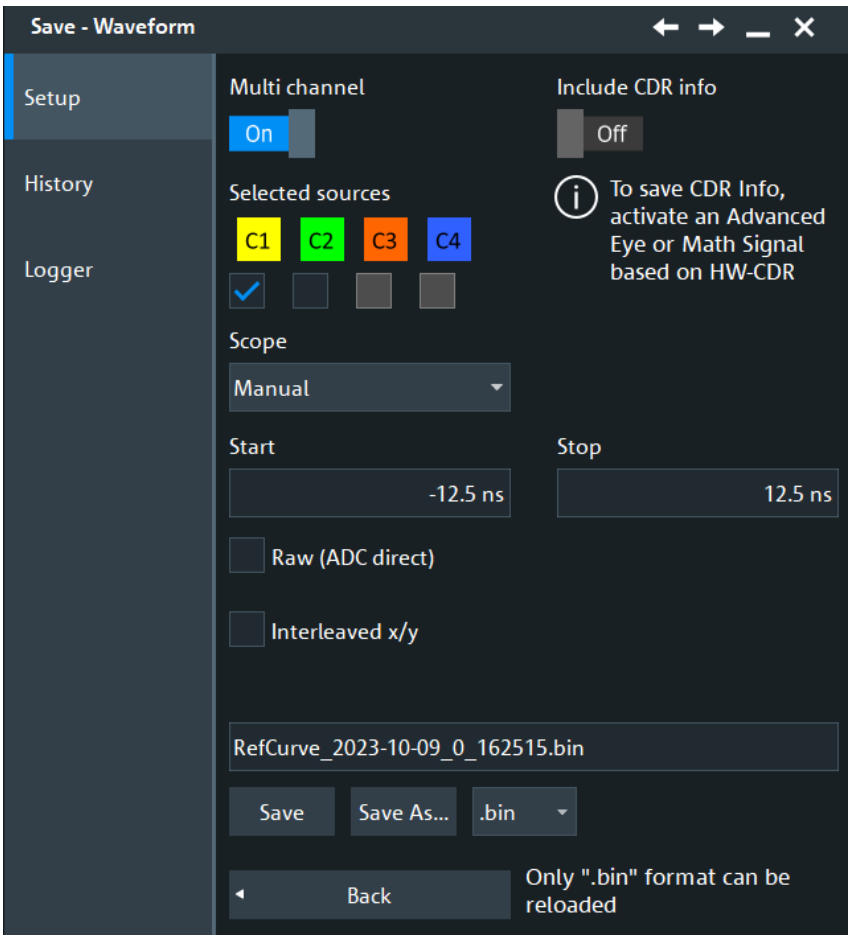

See:

- "Raw (ADC direct)" on page 508
- "Interleaved x/y" on page 509
- "Byte order" on page 1306

If you use remote control commands to transfer data to a controlling computer, set the data format to `INT,16` to transfer the complete data words (see `FORMat[:DATA]` on page 1357).

5.4.5 History settings

The history settings are described in Section 7.5.2, "History setup", on page 313.

5.5 Vertical setup

The "Vertical" dialog box contains all channel-dependent settings and information.


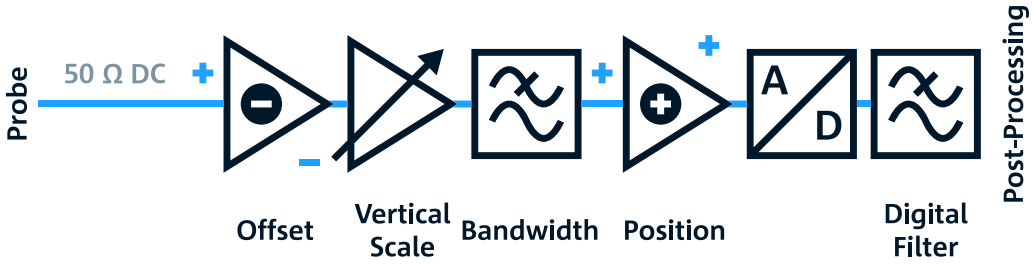


Figure 5-6: Signal path in the vertical system of R&S RTP

5.5.1 Setup settings

Access: "Menu" > "Vertical" > "Setup"

The "Setup" tab provides all basic vertical settings. The channels are listed in horizontal subtabs. Make sure to select the correct channel tab before you enter the settings.

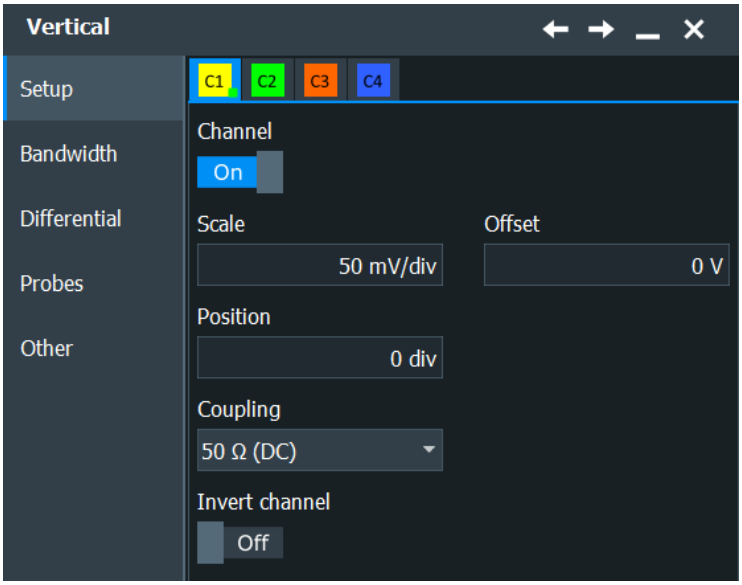

Channel On/Off 141
Scale 142
Offset 142
Position 142
Coupling 142
Invert channel 143

Channel On/Off
Switches the channel signal on or off. The signal icon appears on the signal bar. The waveform of the last acquisition is displayed in the diagram.


Remote command:
`CHANnel<ch>:STATe` on page 1412

Scale
Defines the vertical scale in Volts per division. Increasing the scale compresses the display of the signal.

Remote command:
`CHANnel<ch>:SCALe` on page 1412

Offset
The offset voltage is subtracted to correct a signal with DC offset. The vertical center of the selected channel is shifted by the offset value and the signal is repositioned within the diagram area. Negative offset values move up the waveform, positive values move it down.

The offset of a signal is determined and set by the autoset procedure. The current value is shown in the waveform label, and it is marked by a small triangle in the grid.

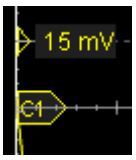

If a Rohde & Schwarz differential probe is connected, the offset is the differential offset.

If a Rohde & Schwarz modular probe is connected, the offset of the selected probe mode is used. For example, in CM mode, the offset is the common mode offset.

By default, the horizontal grid axis remains in the center when the offset is changed. To shift the axis together with the waveform, disable Keep Y-grid fixed in ""Settings" > Appearance > Grid".

Remote command:
`CHANnel<ch>:OFFSet` on page 1410

Position
Moves the selected signal up or down in the diagram. The visual effect is the same as for Offset but the waveform is adjusted later in the signal flow. While the offset sets a voltage, position is a graphical setting given in divisions.

By default, the horizontal grid axis remains in the center when the offset is changed. To shift the axis together with the waveform, disable Keep Y-grid fixed in ""Settings" > Appearance > Grid".

Remote command:
`CHANnel<ch>:POSition` on page 1411



Coupling
Shows the termination of the channel input signal: 50 Ω (DC). Both DC and AC components of the signal are passed.

A 1 MΩ adapter is available for signals that require 1 MΩ DC or 1 MΩ AC coupling. See Section 5.6.11, "Probe adapter R&S RT-Z1M", on page 177.

In addition to coupling, the signal can be filtered for high frequency rejection, see Section 5.5.5, "Digital filter setup", on page 146.

Remote command:
`CHANnel<ch>:COUPling` on page 1408

Invert channel
Turns the inversion of the signal amplitude on or off. To invert means to reflect the voltage values of all signal components against the ground level. If the inverted channel is the trigger source, the instrument triggers on the inverted signal.


You can use inversion, for example, to switch the polarity of a differential signal without changing the probe connections.

Remote command:
`CHANnel<ch>:INVert` on page 1409

5.5.2 Bandwidth settings

Access: "Menu" > "Vertical" > "Bandwidth"

The "Bandwidth" tab provides all settings that affect the bandwidth of the measurement system. The channels are listed in horizontal subtabs. Make sure to select the correct channel tab before you enter the settings.

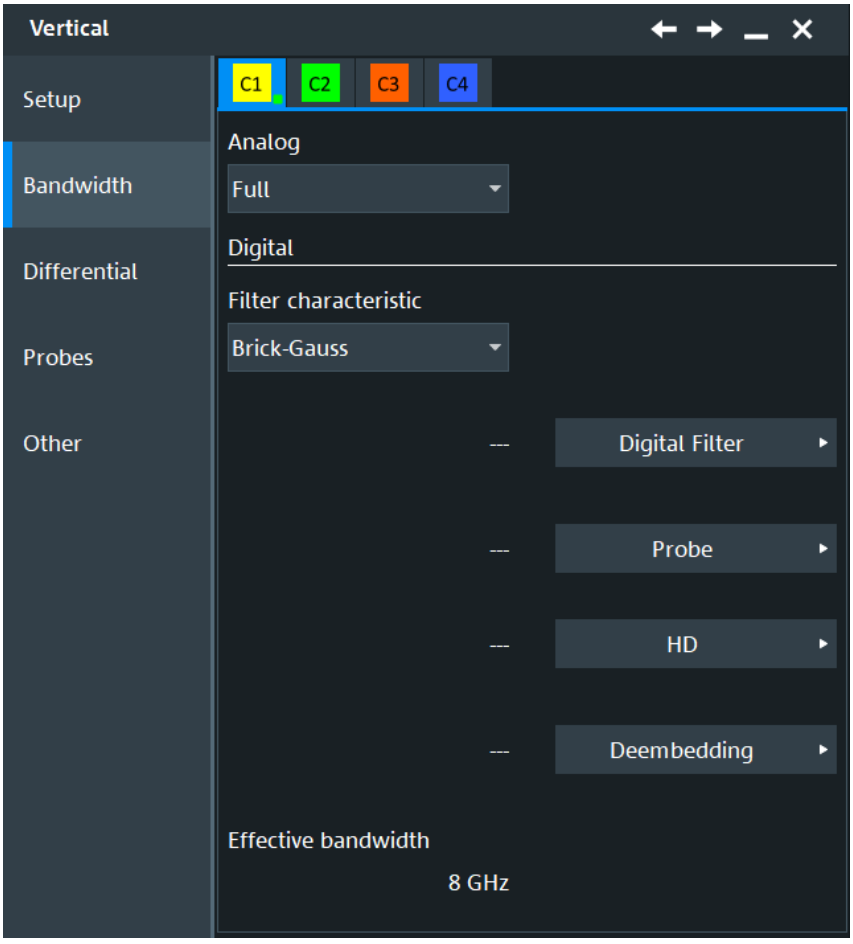

Analog
Selects the bandwidth limit.

The specified bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3dB attenuation. The probe has also a limited bandwidth and thus affects the resulting system bandwidth.

At full bandwidth, all frequencies in the specified range are acquired and displayed.

See also: Section 5.1.1.3, "Bandwidth", on page 115

Remote command:
`CHANnel<ch>:BANDwidth` on page 1407

Filter characteristic
Selects the filter that is used to reduce the bandwidth.

"Brick-Gauss" The Brick-Gauss filter is a rectangular (brick-like) filter in the frequency domain, often used to approximate a Gaussian response. Brick-Gauss filters are used for specific frequency isolation and image processing.

"Bessel" Bessel-Thomson filter, which has maximally flat group delay. It preserves the waveform shape of signals.
Bessel filters are preferred in applications requiring high fidelity and timing accuracy.
Enter the required filter bandwidth in "Frequency @ 3dB".

Remote command:
`CHANnel<ch>:FILDesign[:TYPE]` on page 1408


Effective bandwidth
Displays the effective bandwidth.

5.5.3 Probes settings

See Section 5.6, "Probes", on page 147.

5.5.4 Other settings

Access: "Menu" > "Vertical" > "Other"

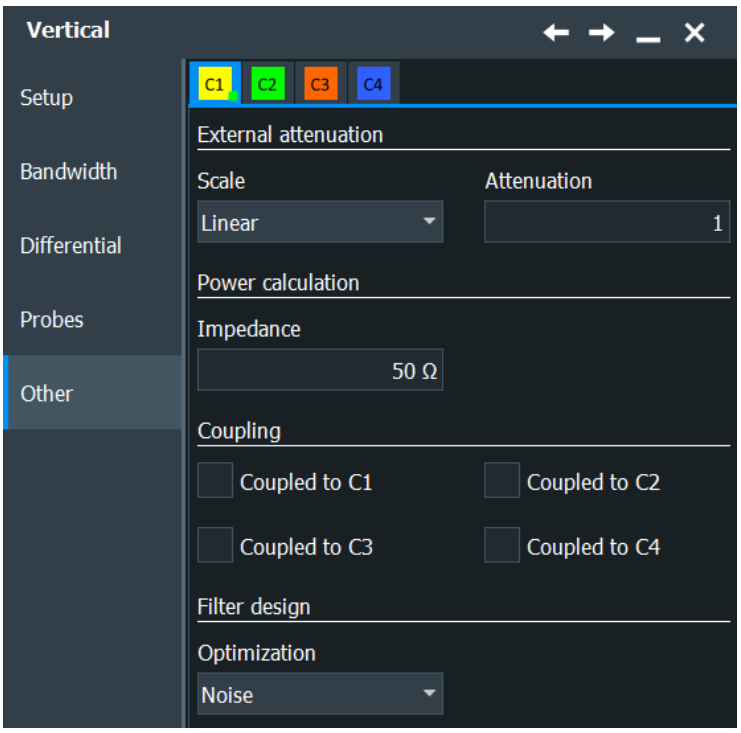

External attenuation: Scale, Attenuation
Consider a voltage divider that is part of the DUT before the measuring point. The external attenuation is included in the measurement, and the instrument shows the results that would be measured before the divider. External attenuation can be used with all probes.

"Scale" Select linear or logarithmic attenuation scale.

"Attenuation" Enter the attenuation of the voltage divider according to the selected scale. The conversion from linear to logarithmic values depends on the "Vertical unit" of the probe:
For voltage-based unit (V and A):
*attenuation (dB) = 20 * log_{10}(attenuation factor)*
For power-based unit (W):
*attenuation (dB) = 10 * log_{10}(attenuation factor)*

Remote command:
`CHANnel<ch>:EATScale` on page 1418
`CHANnel<ch>:EATTenuation` on page 1418

Impedance
Sets the impedance of the channel for power calculations and measurements.

Remote command:
`CHANnel<ch>:IMPedance` on page 1409

Coupled to C1 / C2 / C3 / C4
Channel coupling sets the vertical settings of the coupled channels to the values of the active channel. If you want to have the same vertical settings for two or more channels, you can set them at once by coupling these channels.

Channel coupling affects all vertical settings that are adjusted in the "Settings" tab: vertical scale, position, offset, coupling, and ground.

Remote command:
CHANnel<ch>:CPLing on page 1408

5.5.5 Digital filter setup

Access: "Menu" > "Vertical" > "Bandwidth" tab > "Digital Filter"

After processing by the A/D converter, the channel and trigger signals are digitized signals. These digitized signals can be filtered to reject high frequency - also known as Digital Signal Processing (DSP). You can filter the acquisition channels.

One filter is applied to one channel.

In high definition mode, digital filter settings are enabled automatically. You can change the high definition bandwidth in the "Acquire" > "HD" tab. The value is assigned to all channels and shown in the "Digital Filter" dialog.



BW limit
Enables the digital filter for the correspondig input channel.

Remote command:
CHANnel<ch>:DIGFilter:STATe on page 1463

Acquisition BW
Sets the limit frequency of the lowpass filter for each input channel individually.

Remote command:
CHANnel<ch>:DIGFilter:CUToff on page 1463

Trigger BW
Shows the BW limit for the trigger signal, i.e. for the channel that is the trigger source. The trigger BW is set automatically.

Remote command:
TRIGger<t>:RFReject? on page 1464

5.6 Probes

With R&S RTP digital oscilloscopes, you can use various probe types. Mostly these probes are passive and active voltage probes. The "Probes" dialog provides all probe-relevant information.

The instrument can detect many probes and read out the probe-specific parameters, for example, bandwidth and attenuation.

In the "Probes" tab, you find all settings that are relevant for the connected probe.

Access: "Menu" > "Vertical" > "Probes"

The functionality on the "Probes" tab changes according to the type of the attached probe. Probes with Rohde & Schwarz probe interface (probe box), and also many other passive voltage probes, are recognized by the instrument. The R&S RTP reads out the main characteristics of the probe and displays them. Other probes cannot be detected, but their characteristics are known to the instrument. These known probes are called "Predefined probes". Probes that are not recognized automatically and not predefined are unknown probes, they require manual setting of measurement unit and attenuation.



Before you adjust the settings, select the correct channel tab.


Additional information is given in the "Probe Attributes" and "Calibration Results" tabs. For background information, see Section 5.1.4, "Probes", on page 119.

This chapter has the following sections:

- Shared probe settings....147
- Settings for the R&S probe interface (voltage probes)....149
- Setup for passive probes....152
- Setup for active voltage probes....154
- Setup for modular probes....159
- Setup for predefined probes....164
- Setup for current probes....168
- Setup for optical isolated probe systems....171
- Setup for unknown probes....174
- Probes info....175
- Probe adapter R&S RT-Z1M....177

5.6.1 Shared probe settings

Some of the settings in the "Probes" tab are available for all probes.

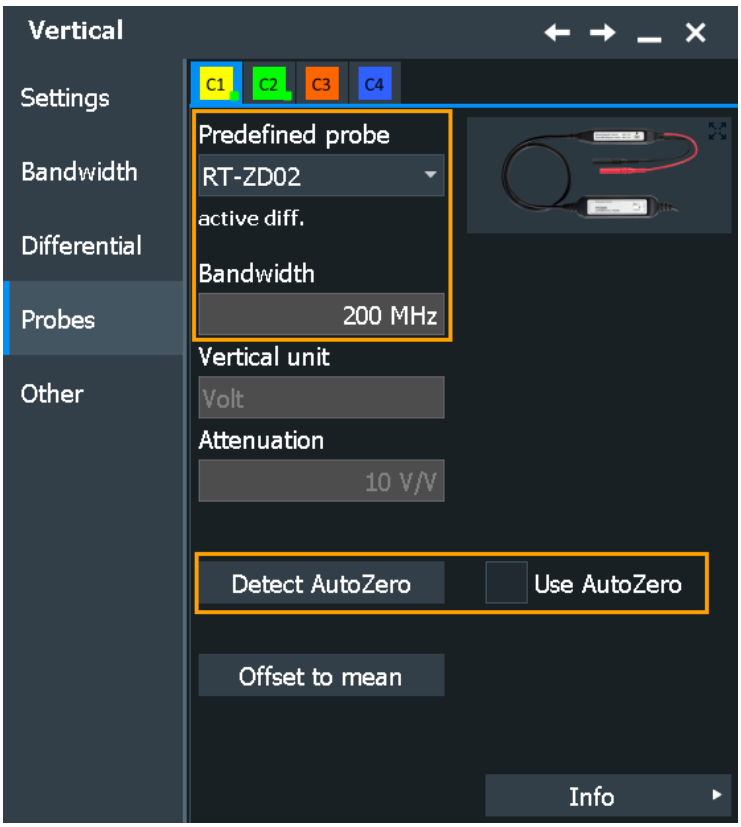

An external attenuation can be set on the "Other" tab, see "External attenuation: Scale, Attenuation" on page 145.

The shared probe settings are:

Type, Name, Bandwidth 148
Detect AutoZero, Use AutoZero 148

Type, Name, Bandwidth
The fields show the characteristics of a recognized or predefined probe for information. The bandwidth is the effective bandwidth.

If the instrument cannot recognize the probe, and the probe is not known, the "Type" is "None", and the other fields are empty.

Remote command:
`PROBe<ch>:SETup:TYPE?` on page 1416
`PROBe<ch>:SETup:NAME?` on page 1416
`PROBe<ch>:SETup:BANDwidth?` on page 1416

Detect AutoZero, Use AutoZero
Differences in DUT and oscilloscope ground levels can cause larger zero errors, which affect the waveform. If the DUT is ground-referenced, the AutoZero function corrects the zero error of the probe to optimize measurement results at small signal levels. The validation limit depends on the probe attenuation because probes with high attenuation often have to compensate high offsets. AutoZero detects offset values even when the signal is out of the current measurement range.

To correct the zero error of voltage probes, short the signal pin and the ground pin together and connect them to the ground of the DUT. Then tap "Detect AutoZero". While the alignment is running, the instrument switches to DC coupling to display the waveform correctly.


To include the measured offset in measurement results, enable "Use AutoZero".

If a current probe is connected, the function demagnetizes the probe's sensor head and sets the waveform to zero position. See "Detect AutoZero" on page 171.

Remote command:
`PROBe<ch>:SETup:OFFSet:AZERo` on page 1417
`PROBe<ch>:SETup:OFFSet:USEautozero` on page 1418

5.6.2 Settings for the R&S probe interface (voltage probes)

Active voltage probes with Rohde & Schwarz probe interface provide special features: the micro button and the ProbeMeter. Furthermore, the R&S RTP can read out the attenuation of the probe.

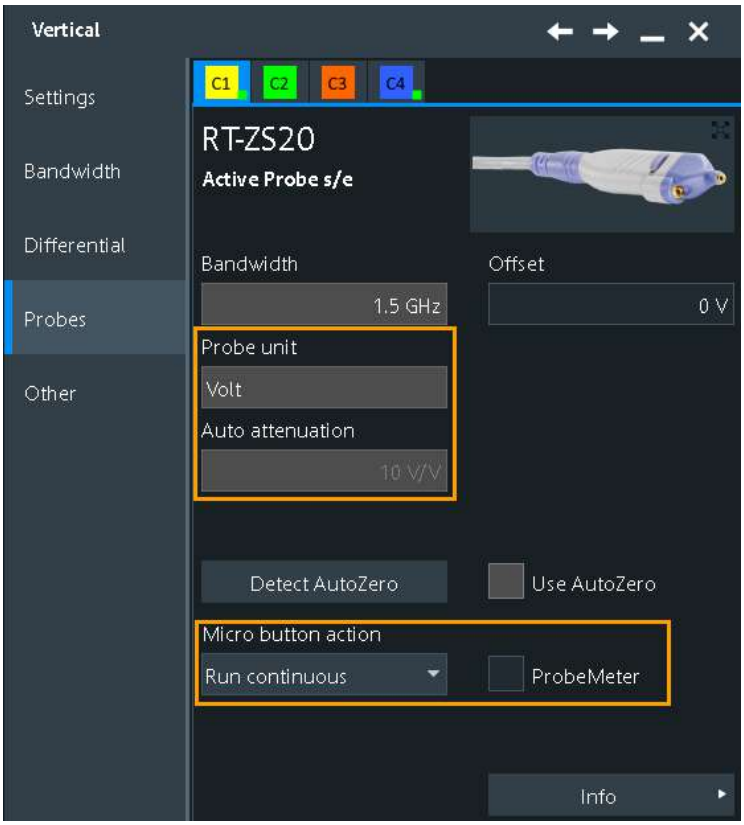


The settings for active voltage probes with Rohde & Schwarz probe interface are:

Probe unit, Auto attenuation....150
Micro button action....150
ProbeMeter....151
ProbeMeter results....151

Probe unit, Auto attenuation
If the probe is recognized by the R&S RTP, the instrument reads the attenuation unit and value from the probe an displays them.

Remote command:
`PROBe<ch>:SETup:ATTenuation[:AUTO]?` on page 1417

Micro button action
Active voltage probes with Rohde & Schwarz probe interface have a configurable micro button on the probe head. Pressing this button, you start an action on the instrument directly from the probe. The button is disabled during internal automatic processes, for example, during self-alignment, autoset, and find level.

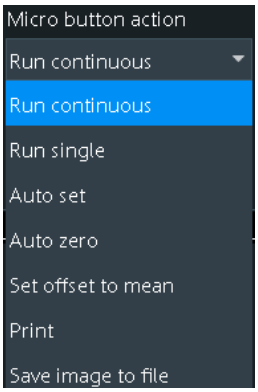

Select the action that you want to start from the probe:

"Run Continuous"
: Default assignment. Starts or stops the acquisition (same as Run / Stop key).

"Run single"
: Starts a defined number of acquisitions (same as [Single] key).

"Auto set"
: Starts the autoset procedure (same as Autoset key).

"AutoZero"
: Starts an auto zero measurement, see "Detect AutoZero, Use AutoZero" on page 148.

"Set offset to mean"
: Performs an automatic compensation for a DC component of the input signal using the result of a background mean measurement. See: "Offset to mean" on page 168.

"Save image to file"
: Saves the current display as image according to the image settings. See also Section 12.4, "Screenshots", on page 522.

"No action"
: Select this option to prevent unwanted actions due to unintended usage of the micro button.

"Find trigger level"
: Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

"Create report"
: Creates and saves a report using the report settings. See also Section 12.5.1, "Report settings", on page 527.

"Probe mode" Only available if a R&S RT-ZM modular probe is connected. Sets the measurement mode of the modular probe. See also "Probe mode" on page 161.

"Probe Setup" Opens the "Probes Setup" dialog box.

Remote command:
`PROBe<ch>:SETup:MODE` on page 1419

ProbeMeter
Activates the integrated R&S ProbeMeter.

For active single-ended, differential and modular probes, the measured voltages are displayed in the "ProbeMeter" result box on the screen.


For optical isolated probes, you can set the measured value to be used as offset.

Remote command:
`PROBe<ch>:PMETer:VISibility` on page 1421
`TRPRobe:PMETer:VISibility` on page 1421 (trigger input)


ProbeMeter results
The integrated R&S ProbeMeter of active voltage probes with Rohde & Schwarz probe interface is a voltmeter. It measures DC voltages between the probe tip and ground connection or between the probe sockets with very high precision. The R&S ProbeMeter enables ground-referenced measurements of voltages. The measurement is performed continuously and in parallel to the measurements of the oscilloscope.

The measured voltages are displayed in the "ProbeMeter" result box on the screen.


- **ProbeMeter measurement results of single-ended active R&S probes**
  Measures the voltage between the probe tip and the ground.

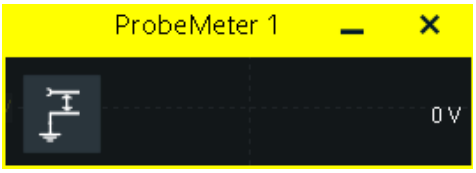

- **ProbeMeter measurement results of differential and modular R&S probes**
  You can select the voltage to be measured by the differential active probe:
  – "Differential / Common Mode":
    Differential voltage is the voltage between the positive and negative signal sockets.
    Common mode voltage is the mean voltage between the signal sockets and the ground socket. It measures the voltage level relative to ground, for example, to check the operating voltage window.

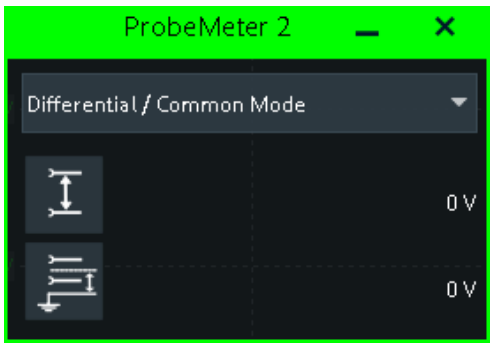

– "Single Ended Pos/Neg": Measures the voltage between the positive/negative signal socket and the ground.

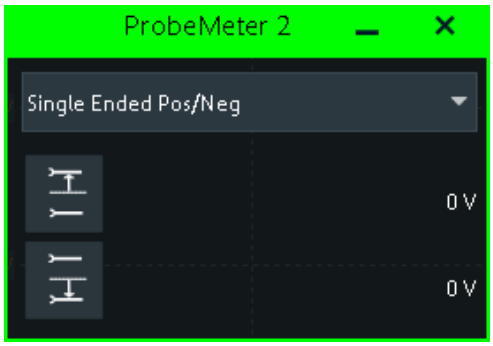

The ProbeMeter always measures the common mode and differential voltages. Single-ended voltages are calculated values:
$V_p = V_{cm} + 0.5 * V_{in}$ and $V_n = V_{cm} - 0.5 * V_{in}$

Remote command:
Channel probes:
`PROBe<ch>:SETup:DISPlaydiff` on page 1420
`PROBe<ch>:PMETer:RESults:SINGle?` on page 1421
`PROBe<ch>:PMETer:RESults:POSitive?` on page 1423
`PROBe<ch>:PMETer:RESults:NEGative?` on page 1422
`PROBe<ch>:PMETer:RESults:DIFFerential?` on page 1422
`PROBe<ch>:PMETer:RESults:COMMon?` on page 1422
Probe on trigger input:
`TRPRobe:SETup:DISPlaydiff` on page 1420
`TRPRobe:PMETer:RESults:SINGle?` on page 1421
`TRPRobe:PMETer:RESults:POSitive?` on page 1423
`TRPRobe:PMETer:RESults:NEGative?` on page 1422
`TRPRobe:PMETer:RESults:DIFFerential?` on page 1422
`TRPRobe:PMETer:RESults:COMMon?` on page 1422

5.6.3 Setup for passive probes

Passive probes are the most widely used probes for oscilloscope measurements. Passive probes require compensation.

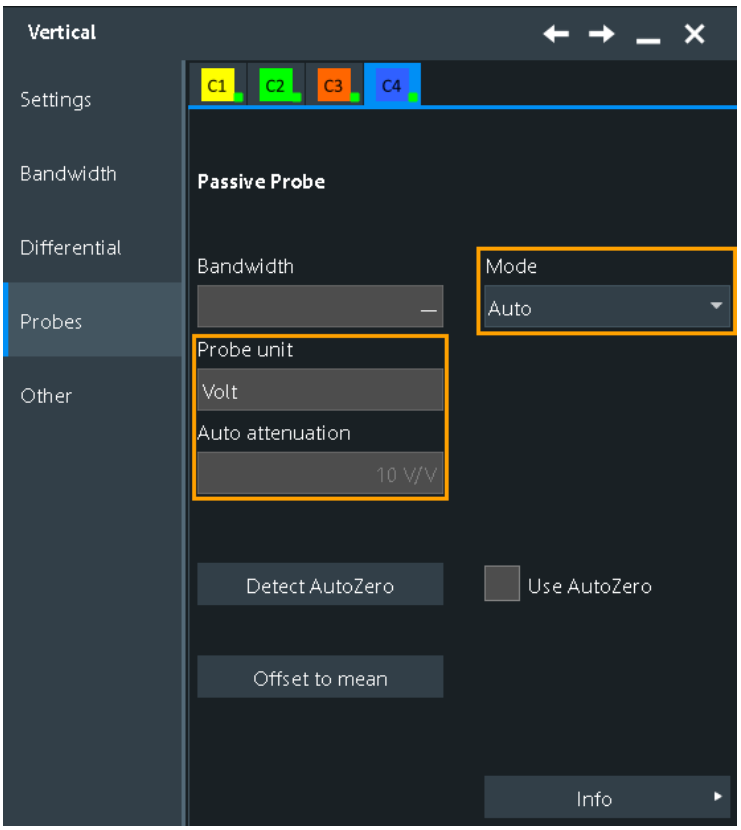


Figure 5-7: Probe setup for passive probe

The following shared probe settings are available:

- "Type, Name, Bandwidth" on page 148
- "Detect AutoZero, Use AutoZero" on page 148

If a passive probe is connected, the probe attenuation is read out and shown in the "Setup" tab:

- "Probe unit, Auto attenuation" on page 150

If you need to change the unit or attenuation, change the "Mode" to "Manual" and enter the correct values.

Mode..... 153
Vertical unit, Attenuation, Gain..... 154

Mode
Defines how the attenuation of a passive probe is set.

"Auto"	The instrument uses the values that are read out from the probe.
"Manual"	You can define the attenuation unit and value. See: "Vertical unit, Attenuation, Gain" on page 154

Remote command:
`PROBe<ch>:SETup:ATTenuation:MODE` on page 1424

Vertical unit, Attenuation, Gain
If a predefined probe is connected and selected, the attenuation or gain values are shown.

For unknown probes and passive probes in manual mode, you can set user-defined values for unit, gain and attenuation.

If AC coupling is set, the attenuation of passive probes has no effect, and voltage is applied to the instrument with factor 1:1. Observe the voltage limits, otherwise you can damage the instrument.

Remote command:
`PROBe<ch>:SETup:ATTenuation:UNIT` on page 1424
`PROBe<ch>:SETup:ATTenuation:MANual` on page 1424
`PROBe<ch>:SETup:GAIN:MANual` on page 1425

5.6.4 Setup for active voltage probes

Active voltage probes with Rohde & Schwarz probe interface have an integrated data memory that contains identification data and individual probe correction parameters. The R&S RTP can detect these probes and read out the data. Furthermore, these probes have a micro button and a ProbeMeter.

Active voltage probes that are offered by Rohde & Schwarz but not equipped with a Rohde & Schwarz probe interface are known to the R&S RTP as predefined probes, see Section 5.6.6, "Setup for predefined probes", on page 164.

The following shared probe settings are available:

- "Type, Name, Bandwidth" on page 148
- "Detect AutoZero, Use AutoZero" on page 148

Special features of the Rohde & Schwarz probe interface are described in these sections:

- "Probe unit, Auto attenuation" on page 150
- "Micro button action" on page 150
- "ProbeMeter results" on page 151

The specific settings of Rohde & Schwarz active probes are described in the following chapters:

- R&S RT-ZS single-ended probes 155
- R&S RT-ZD differential probes 156
- R&S RT-ZPR power rail probes 157
- R&S RT-ZHD high-voltage differential probes 158

5.6.4.1 R&S RT-ZS single-ended probes

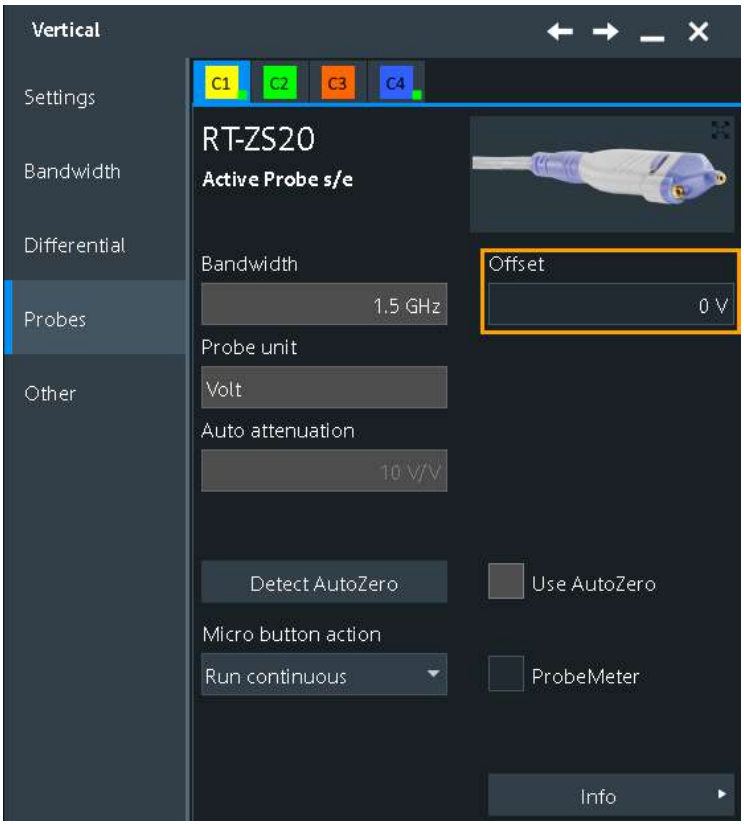


Figure 5-8: Probe setup for active single-ended probe R&S RT-ZS20

The only setting for R&S RT-ZS probes is the channel offset. See "Offset" on page 142.

5.6.4.2 R&S RT-ZD differential probes

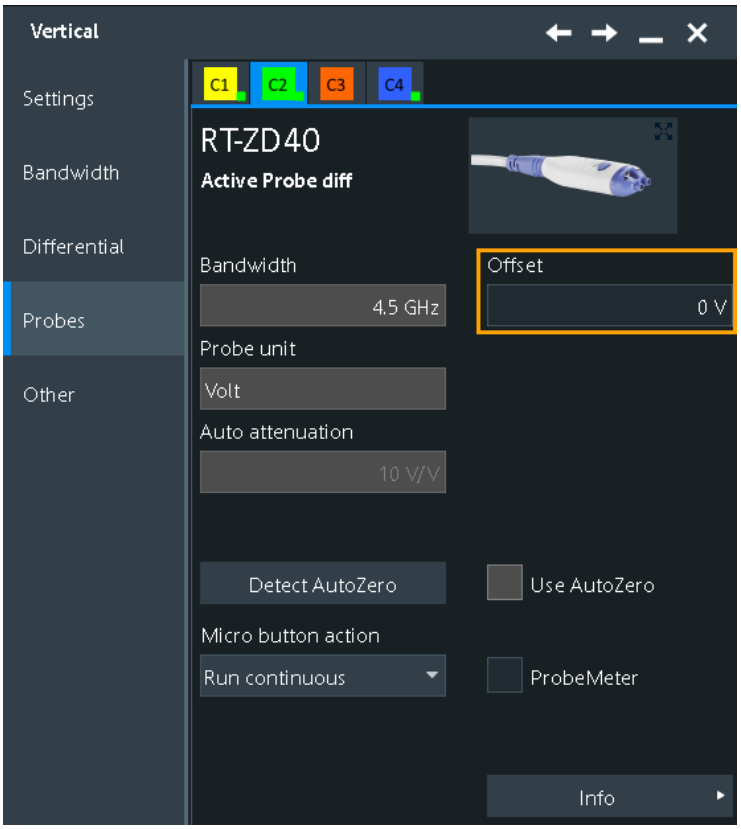


Figure 5-9: Probe setup for active differential probe R&S RT-ZD40

The offset is the differential offset. See "Offset" on page 142.

Specific settings for R&S RT-ZD probes are the following:

CM offset
Sets the common-mode offset to compensate for a common DC voltage applied to both input sockets (referenced to the ground socket). Offset compensation is particularly helpful for measurements on differential signals with high common mode levels, for example, current measurements using a shunt resistor. You can measure the common mode input voltage using the R&S ProbeMeter.

The setting is available for Rohde & Schwarz differential probes, and for modular probes in DM or CM mode (see "DM Offset, CM Offset, P Offset, N Offset" on page 161).

Remote command:
`PROBe<ch>:SETup:CMOFfset` on page 1425

Probe attenuator RT-ZA15
If you use the external attenuator R&S RT-ZA15 together with one of the differential active probes R&S RT-ZD10/20/30, enable RT-ZA15 to include the external attenuation in the measurements.

Remote command:
PROBe<ch>:SETup:ZAXV on page 1426

5.6.4.3 R&S RT-ZPR power rail probes

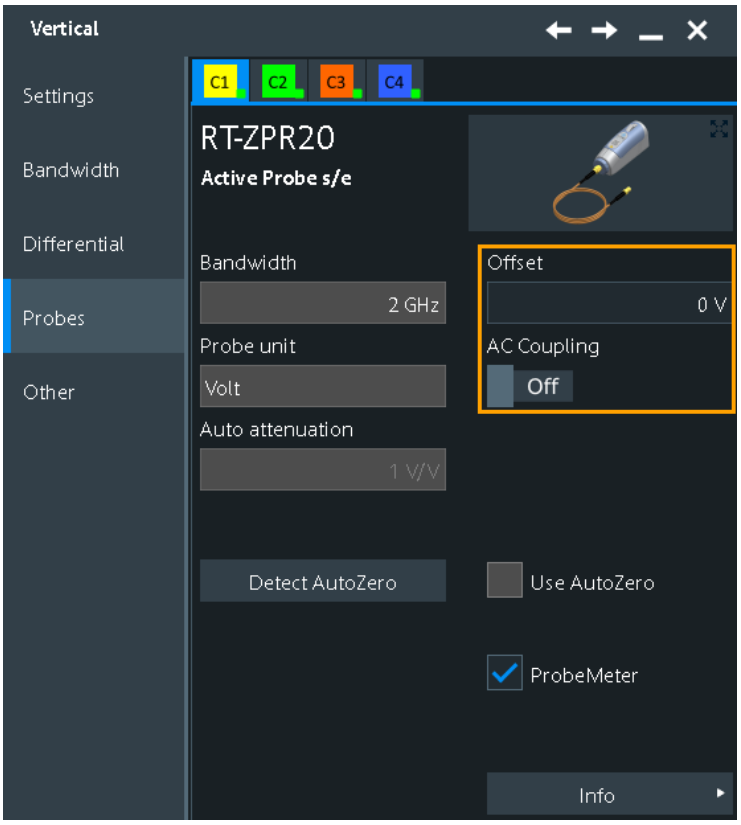


Figure 5-10: Probe setup for power rail probe R&S RT-ZPR

The offset is the channel offset. See "Offset" on page 142.

If the ProbeMeter is active, an additional function is provided in the "ProbeMeter" result box:

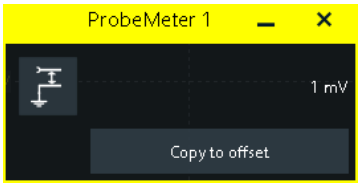


Figure 5-11: ProbeMeter result box for

Specific settings for R&S RT-ZPR probes are the following:

AC Coupling
Enables AC coupling in the R&S RT-ZPR power rail probes, which removes DC and very low-frequency components. The R&S RT-ZPR probe requires 50 Ω input termination, for which the channel AC coupling is not available. The probe setting allows AC coupling also at 50 Ω inputs.

Remote command:
`PROBe<ch>:SETup:ACCoupling` on page 1426

Copy to offset
Sets the measured R&S ProbeMeter value as offset. Thus, the value is considered in measurements.

Remote command:
`PROBe<ch>:SETup:ADVanced:PMToffset` on page 1426

5.6.4.4 R&S RT-ZHD high-voltage differential probes

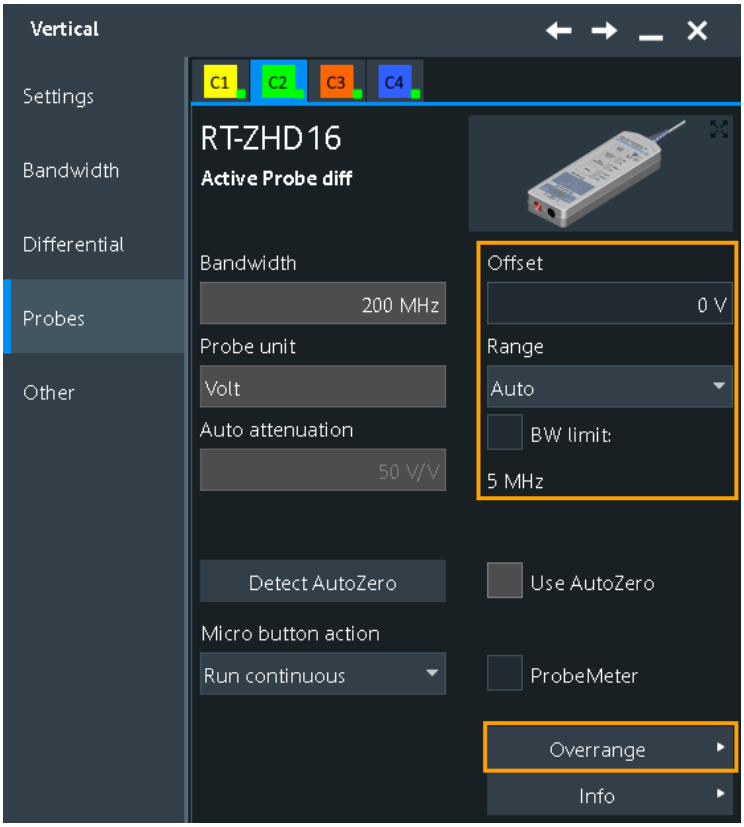


Figure 5-12: Probe setup for R&S RT-ZHD probes

The offset is the differential offset. See "Offset" on page 142.

Specific settings for R&S RT-ZHD probes are the following:

Range
Sets the voltage range of a R&S RT-ZHD probe. You can set the range on the probe control box or at the oscilloscope.

"Auto" The voltage range is set only at the oscilloscope with "Vertical scale".

"Low" Sets the lower voltage range of the connected probe. The selected value is shown in "Auto Attenuation".

"High" Sets the higher voltage range of the connected probe. The selected value is shown in "Auto Attenuation".

Remote command:
`PROBe<ch>:SETup:ADVanced:RANGe` on page 1427

BW limit
Activates the lowpass filter in the probe control box and displays the used limit. You can also set the filter directly on the probe control box.

Remote command:
`PROBe<ch>:SETup:ADVanced:FILTer` on page 1427

Buzzer
Activates the acoustic overrange warning in the probe control box. You can also activate the sound directly on the probe control box.

Remote command:
`PROBe<ch>:SETup:ADVanced:AUDioverload` on page 1427

Negative, Positive, Differential Overrange
The color turns red if the voltage exceeds the probe range. The indicators are also available on the probe control box.

5.6.5 Setup for modular probes

The probes of the R&S RT-ZM family are modular probes. They have a probe head and a probe amplifier connected by a cable, and various probe tip modules and tip cables for different applications. R&S RT-ZM probes are equipped with Rohde & Schwarz probe interface, and provide special features: R&S ProbeMeter, micro button, and a wide offset compensation range.

If you connect the R&S RT-ZM probe to the external trigger input, you can adjust only the trigger level and the probe mode. The instrument sets the trigger level to the probe offset value (DM, CM, P or N, depending on the probe mode).


The following shared probe settings are available:

- "Type, Name, Bandwidth" on page 148
- "Detect AutoZero, Use AutoZero" on page 148

Special features of the Rohde & Schwarz probe interface are described in these sections:

- "Probe unit, Auto attenuation" on page 150
- "Micro button action" on page 150

- "ProbeMeter results" on page 151

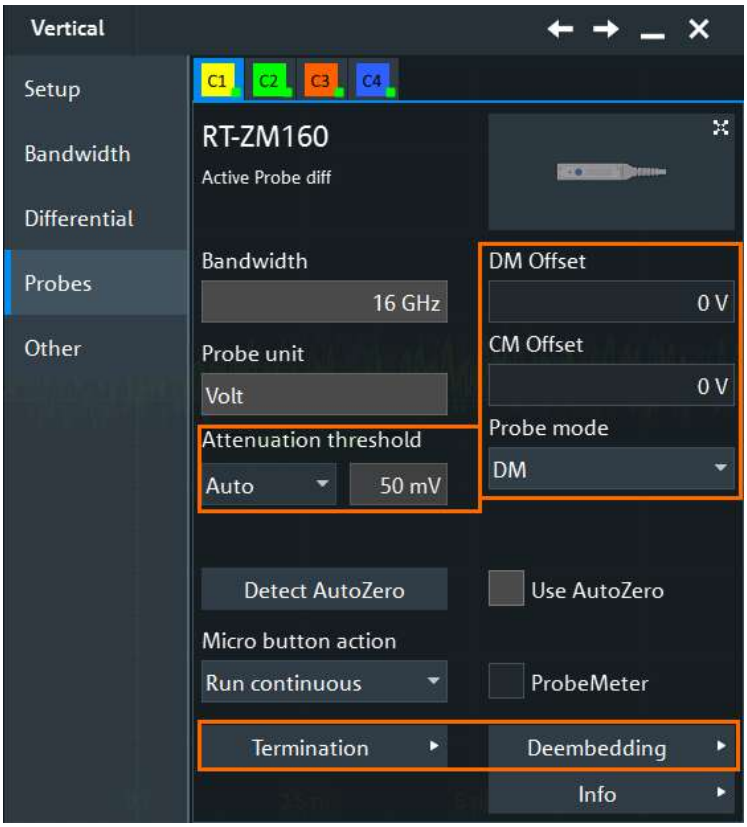

- Setup parameters of modular probes.....160
- Deembedding for modular probes.....162
- Termination voltage with R&S RT-ZMA40 SMA module.....163

5.6.5.1 Setup parameters of modular probes

The basic setup parameters of all modular probes are the measurement mode and the offset settings.

Access: "Menu" > "Vertical" > "Probes"

Make sure also to adjust the deembedding settings under "Probe Deembedding" (see Section 5.6.5.2, "Deembedding for modular probes", on page 162).

Attenuation threshold
The threshold for switching the probe attenuation can be set automatically by the instrument ("Auto"), or you can set it to a required value ("Manual"). If the vertical scale of the signal is below the threshold, the probe works with attenuation 2:1. Above the threshold, the attenuation is 10:1. In automatic mode, it switches at 49 mV/div.

Remote command:
`PROBe<ch>:SETup:ATTenuation:THReshold:MODE` on page 1428
`PROBe<ch>:SETup:ATTenuation:THReshold:VALue` on page 1428

Probe mode
Sets the measurement mode of modular probes.

The modular probes of the R&S RT-ZM family have a multimode function. You can switch between single-ended, differential and common mode measurements without reconnecting or resoldering the probe. You can set the probe mode in the dialog box, and you can assign the probe mode setting to the micro button.

If you use the R&S RT-ZMA30 browser module, only DM measurements are possible because this module has no ground connector.

The measurement modes are:

"DM" Differential-mode input voltage (V_{dm}), the voltage between the positive and negative input terminal.

$$V_{dm} = V_p - V_n$$

"CM" Common mode input voltage (V_{cm}), the mean voltage between the positive and negative input terminal vs. ground.

$$V_{cm} = \frac{V_p + V_n}{2}$$

"P" Positive single-ended input voltage (V_p). The voltage between the positive input terminal and the ground.

"N" Negative single-ended input voltage (V_N). The voltage between the negative input terminal and the ground.

Remote command:
`PROBe<ch>:SETup:PRMode` on page 1429

DM Offset, CM Offset, P Offset, N Offset
Compensate offset voltages. Available offsets depend on the selected probe mode.

The offset of the selected probe mode is used as channel offset and considered automatically for correction. For example, in CM mode, the common mode offset is used as channel offset. See also: "Offset" on page 142.

"DM Offset" Compensates a DC voltage applied between the positive (V_p) and the negative (V_n) input terminal at the probe tip.

"CM Offset" Compensates a DC voltage applied to both input terminals referenced to ground. See also: "CM offset" on page 156.

"P Offset" Compensates a DC voltage applied to the positive input terminal (V_p) referenced to ground.


"N Offset" Compensates a DC voltage applied to the negative input terminal (V_n) referenced to ground.

Remote command:
`PROBe<ch>:SETup:DMOFfset` on page 1429
`PROBe<ch>:SETup:CMOFfset` on page 1425
`PROBe<ch>:SETup:NOFFset` on page 1430
`PROBe<ch>:SETup:POFFset` on page 1431

5.6.5.2 Deembedding for modular probes

Deembedding removes the parasitic effects of the measurement setup from the measured signal. These effects are typically increased when the signal frequency increases. Thus, deembedding is useful or even necessary when measuring signals of 4 GHz frequency or higher.

Access: "Menu" > "Vertical" > "Probes" > "Deembedding"

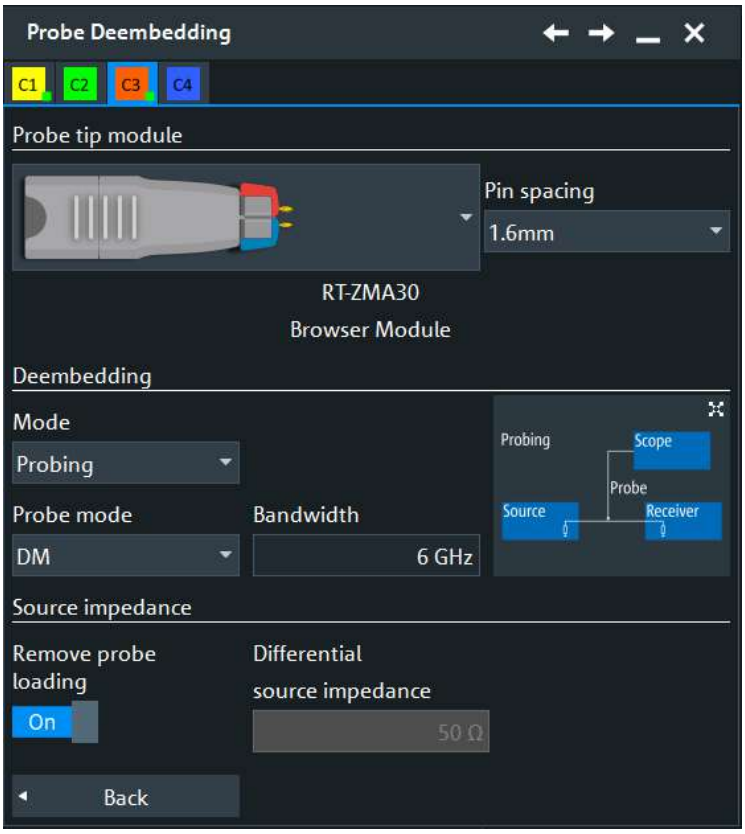

Probe tip module, Pin spacing, Open
Selects the tip module that is used for measurement.

If R&S RT-ZMA40 is selected, choose the used submodule: semi-rigid cables or none.

For the browser module R&S RT-ZMA30, measure the space between the pins, and select the appropriate value.

For "Custom" tip modules, load the deembedding file with "Open".

Remote command:
`PROBe<ch>:DEEMbedding:TIPModule[:SELect]` on page 1433
`PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule` on page 1434
`PROBe<ch>:DEEMbedding:TIPModule:CSPFile` on page 1433

Probing, Terminating
Sets the probing mode.

Select "Probing" if you use a high-impedance probe and measure on an existing line in parallel to the load.

Select "Terminating" if the measuring equipment is the load of the line.

Remote command:
PROBe<ch>:DEEMbedding:MODE on page 1435
DEEMbedding<de>:COMPonent<n>:MODE on page 2776

Effective bandwidth
Sets the maximum bandwidth for probe deembedding until which the signal is corrected. This maximum value is the minimum bandwidth value of the probe bandwidth, tip module bandwidth, and oscilloscope bandwidth. It cannot be higher than the highest frequency in a used S-parameter file.

Consider that most tip modules support the full bandwidth of the probe, but some tip modules have limited bandwidth.

If the deembedding option R&S RTP-K121 is active, the instrument uses the effective bandwidth that is set in the "Deembedding" > "Setup" dialog box.

Remote command:
PROBe<ch>:DEEMbedding:BANDwidth on page 1434

Probe mode
See "Probe mode" on page 161.

Remove probe load
If "Probing" is selected, you can remove the loading of the probe.

If the probe loading is removed, you see the signal that would be at the measurement point if the probe's input impedance is ideal (infinite impedance).

Without removing the loading, you see the real signal at the measurement point, including the probe loading.

Remote command:
PROBe<ch>:DEEMbedding:REMProbeload on page 1435
DEEMbedding<de>:COMPonent<n>:LOAD:REMProbeload on page 2777

Source impedance
Shows the source impedance of the DUT. If an R&S RT-ZM probe is connected, the value depends on the selected probe mode: common mode, differential, or single-ended measurement.

Remote command:
DEEMbedding<de>:COMPonent<n>:LOAD:IMPedance? on page 2777
PROBe<ch>:DEEMbedding:LOAD:IMPedance on page 1436


5.6.5.3 Termination voltage with R&S RT-ZMA40 SMA module

Termination voltage is relevant if you use the R&S RT-ZMA40 SMA module. The SMA module applies a termination voltage (±4 V) to the DUT to enable measurements against a common mode DC voltage instead of ground. This measurement is required for many digital signal standards.

The termination voltage can be controlled by the oscilloscope. Therefore, connect the V_T terminal of the R&S RT-ZM probe amplifier to the V_T terminal of the R&S RT-ZMA40

SMA module using the red DC lead (see R&S RT-ZM User Manual). The required termination voltage is measured and adjusted automatically, but can also be set manually.

Access: "Menu" > "Vertical" > "Probes" > "Termination"

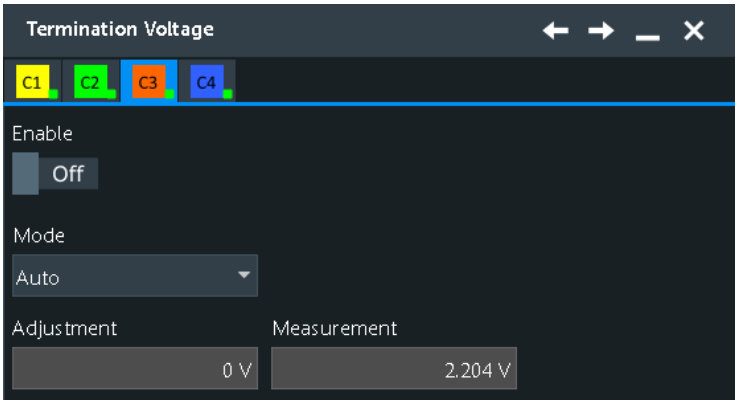

Enable
Activates control of the termination voltage.

Remote command:
`PROBe<ch>:SETup:TERM:STATe` on page 1431

Mode
In "Auto" mode, the instrument uses the measured common mode voltage for termination.

In "Manual" mode, you can enter the voltage to be used for termination. Use the manual mode if you know the common mode voltage of the DUT.

Remote command:
`PROBe<ch>:SETup:TERM:MODE` on page 1431

Adjustment
Sets the voltage to be used for termination to DC voltage.

Remote command:
`PROBe<ch>:SETup:TERM:ADJust` on page 1432

Measurement
Shows the measured common mode voltage.

Remote command:
`PROBe<ch>:SETup:TERM:MEASure?` on page 1432

5.6.6 Setup for predefined probes

Probes that cannot be detected, but their characteristics are known to the R&S RTP are called "Predefined probes".

The following shared probe settings are available:

- "Type, Name, Bandwidth" on page 148

- "Detect AutoZero, Use AutoZero" on page 148

The probe attenuation of the selected probe is also shown in the "Probes" tab:

- "Probe unit, Auto attenuation" on page 150

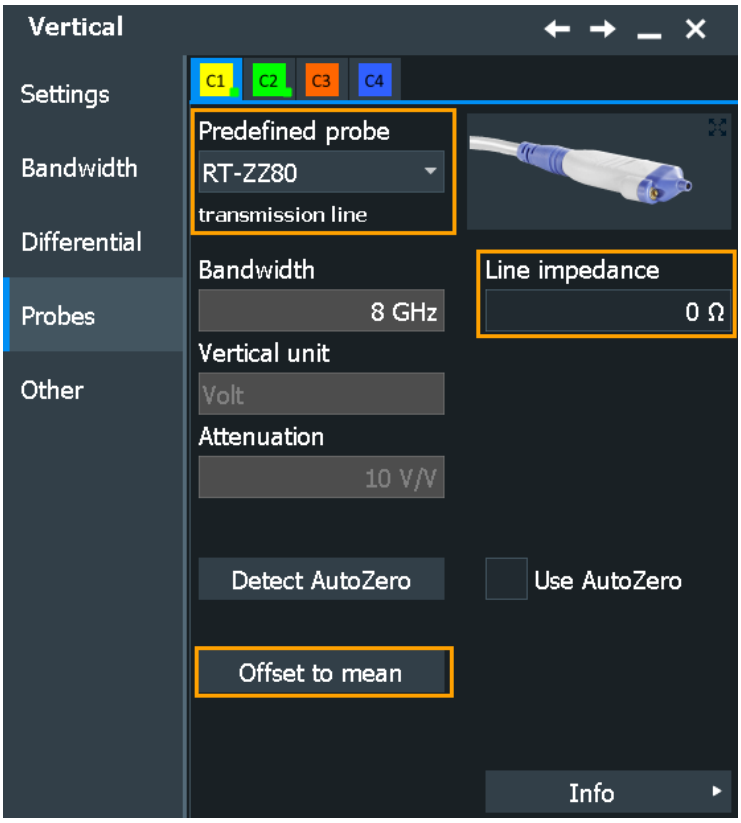


Figure 5-13: Probe setup for transmission line probe R&S RT-ZZ80

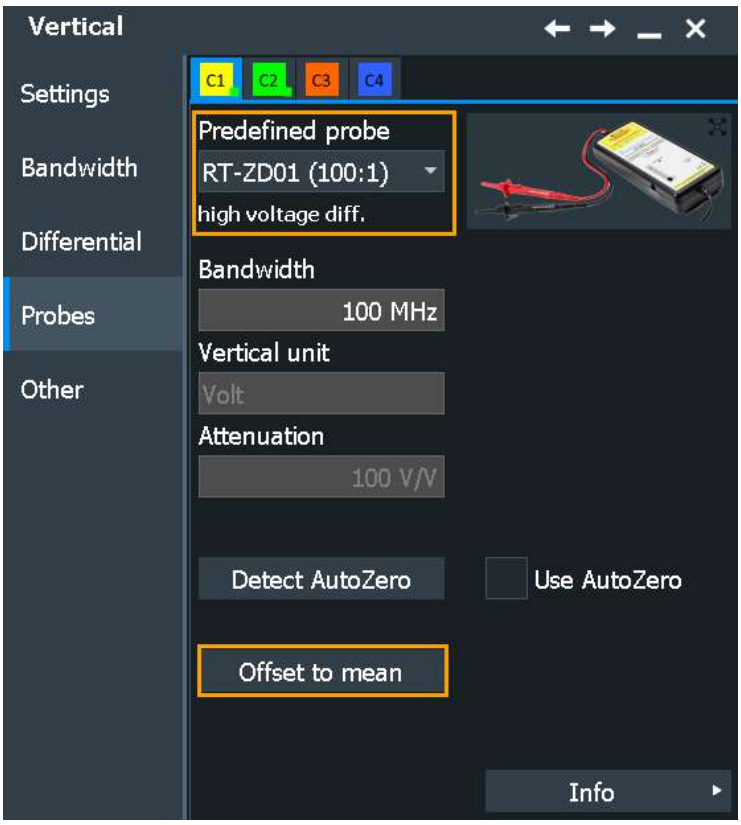


Figure 5-14: Probe setup for R&S RT-ZD01

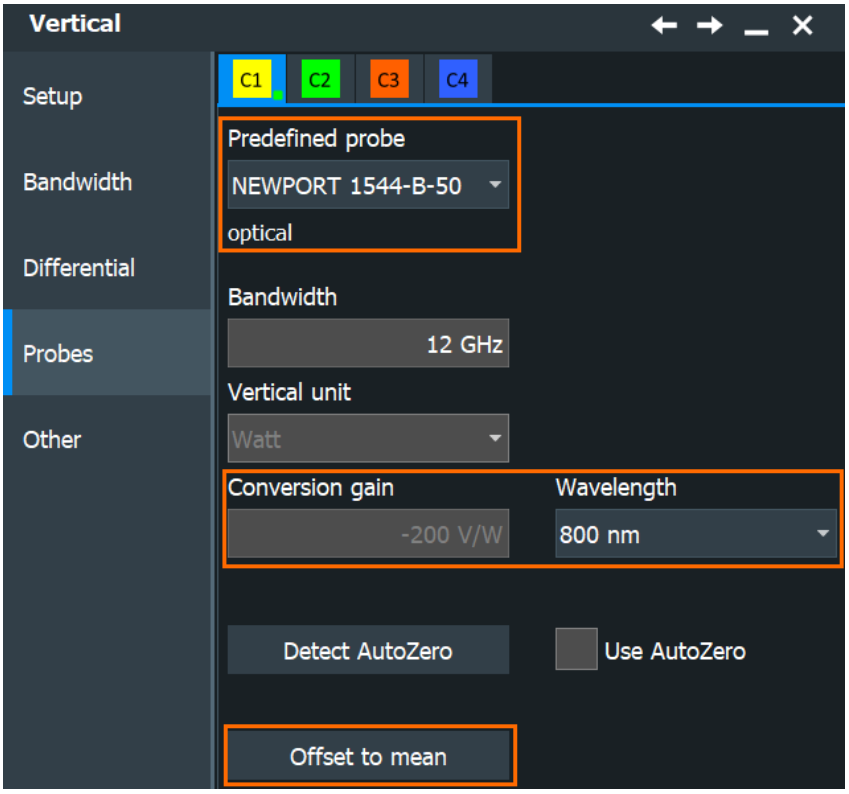


Figure 5-15: Probe setup for Newport optic receiver

Specific settings for predefined probes are the following:

Predefined probe....167
Offset to mean....168
Line impedance....168
Conversion gain....168
Wavelength....168

Predefined probe
List of probes that are known to the instrument. The instrument lists only probes that match the instrument coupling and, if connected, also the used adapter.

Select the used probe on the list. The corresponding "Vertical unit" and the "Attenuation" or "Gain" are shown.

All other unrecognized probes that are not listed, are unknown probes. For these probes, set "Predefined probe" to "None". See Section 5.6.9, "Setup for unknown probes", on page 174.

Remote command:
`PROBe<ch>:SETup:ATTenuation:DEFProbe` on page 1436

Offset to mean
Performs an automatic compensation for a DC component of the input signal using the result of a background mean measurement. The result is shown in "Offset". The function is probe-independent and supports quick and convenient measurements of input signals with different DC offsets. It detects offset values even when the signal is out of the current measurement range. It also sets the zero level to the determined DC offset in the middle of the screen and thus prevents clipping of the waveform.

Remote command:
`PROBe<ch>:SETup:OFFSet:TOMean` on page 1437

Line impedance
If the transmission line probe R&S RT-ZZ80 is selected, enter the impedance of the measured line.

The actual attenuation of the transmission line probe depends on the impedance of the line Z_0:

Attenuation = 10 + Z_0 / 100

The instrument uses the actual attenuation to determine the measurement values.

Conversion gain
Shows the conversion gain of the optic receiver for the selected "Wavelength" on page 168. For a "Custom" wavelength, set the conversion gain. The conversion gain indicates how much output voltage is produced for a given optical input power and is relevant for optic receivers and probes.

Remote command:
`PROBe<ch>:SETup:OPTical:CONGain` on page 1437

Wavelength
Sets the wavelength of the optical signal. If "Custom" is selected, also set the "Conversion gain" on page 168. The setting is relevant for optic receivers and probes.

Remote command:
`PROBe<ch>:SETup:OPTical:WAVLength` on page 1438

5.6.7 Setup for current probes

The setup and adjustment of current probes depends on the output connector of the probe: BNC or Rohde & Schwarz probe box.

The following shared probe settings are available:

- "Type, Name, Bandwidth" on page 148
- "Detect AutoZero, Use AutoZero" on page 148

Current probes R&S RT-ZCxx

The current probes **R&S RT-ZCxx** have BNC connectors. They are known to the R&S RTP as predefined probes, see Section 5.6.6, "Setup for predefined probes", on page 164. Demagnetizing and zero adjustment is done on the probe, see the pro-

be's User Manual for details. Make sure to demagnetize and adjust the probe before taking measurements.

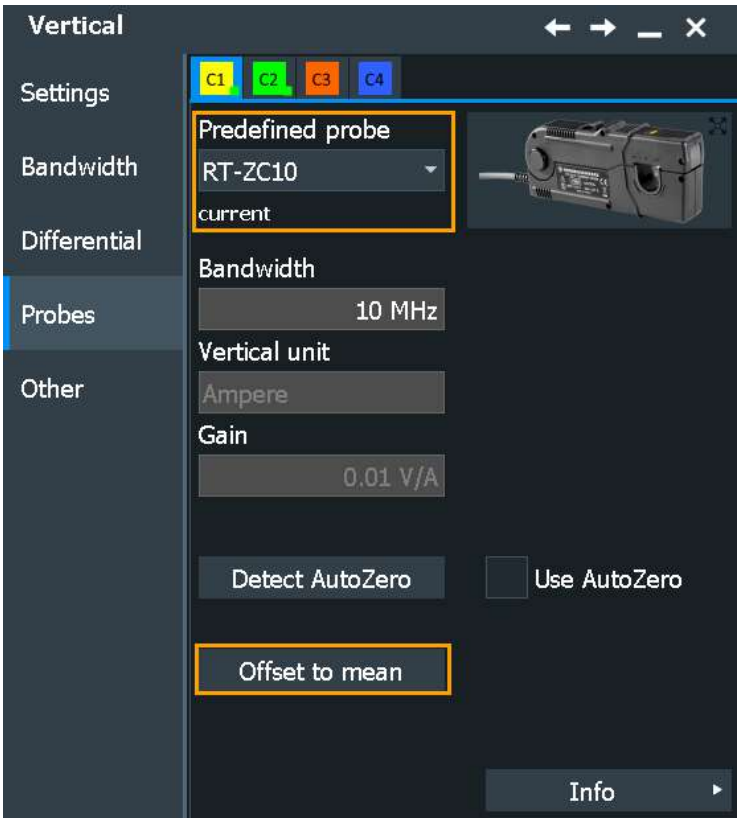


Figure 5-16: Probe setup for current probes R&S RT-ZC10

Current probes R&S RT-ZCxxB

Current probes **R&S RT-ZCxxB** have a Rohde & Schwarz probe interface; they are powered and remotely controlled by the oscilloscope.

When the probe is connected, demagnetization is performed automatically.

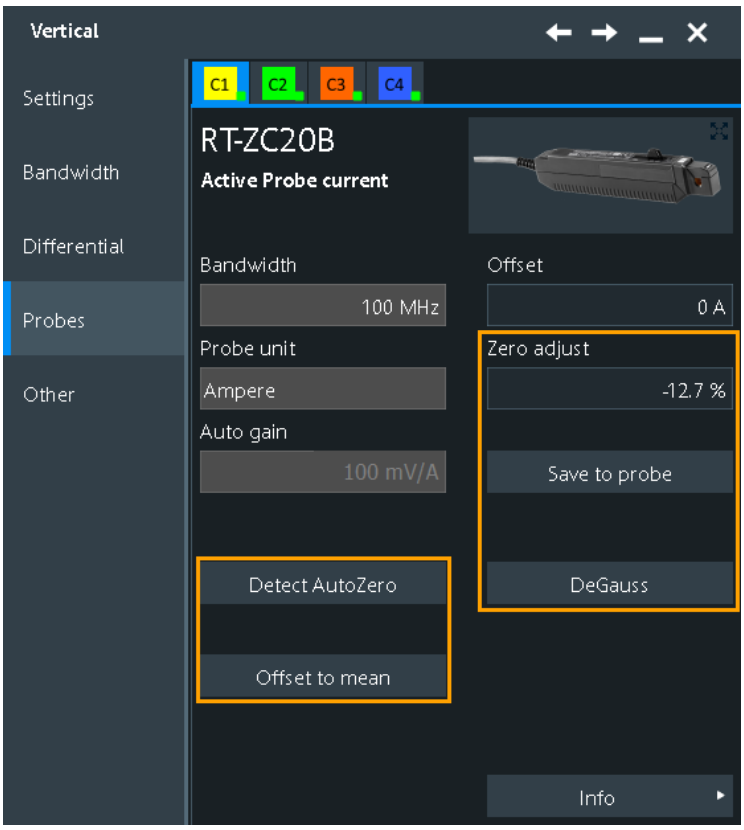


Figure 5-17: Probe setup for current probes R&S RT-ZC20B

For all current probes, attenuation or gain is shown in the "Setup" tab, and you can set the offset to mean:

- "Probe unit, Auto attenuation" on page 150
- "Offset to mean" on page 168

Current probes R&S RT-ZCxxB are adjusted by the following functions:

DeGauss 170
Detect AutoZero 171
Zero adjust 171
Save to probe 171

DeGauss

Demagnetizes the core if it has been magnetized by switching the power on and off, or by an excessive input. Always carry out demagnetizing before measurement.

The demagnetizing process takes about one second. During demagnetizing, a demagnetizing waveform is displayed.

Demagnetizing is done automatically when R&S RT-ZCxxB is connected to the oscilloscope, or when "Detect AutoZero" is performed.

Remote command:

`PROBe<ch>:SETup:DEGauss` on page 1438

Detect AutoZero
If a current probe is connected, the function demagnetizes the probe's sensor head and sets the waveform to zero position to correct the error offset. Thus, it compensates for the remanence and offset caused by temperature drift.

For R&S RT-ZCxxB probes, the determined "Zero adjust" value is displayed and can be saved in the probe head.

See also "Detect AutoZero, Use AutoZero" on page 148.

Remote command:
`PROBe<ch>:SETup:OFFSet:AZERo` on page 1417

Zero adjust
Zero adjust corrects the effect of an offset caused by temperature drift, and compensates for the remanence. The setting is only available if DC coupling is set.

To set the waveform to zero level by the instrument, use "Detect AutoZero". The detected value is displayed.

Alternatively, you can adjust the value manually until the waveform is set to zero level. Make sure to demagnetize the probe before zero adjustment.

The value is given in percent of the maximum range, which is internally defined. The actual setup range depends on the temperature drift, the measured current and other variables, and it can change over time. If you measure high currents, the probe core magnetizes, which impairs the measurement results. Therefore, repeat "Detect AutoZero" before the measurement.

Remote command:
`PROBe<ch>:SETup:OFFSet:ZADJust` on page 1439

Save to probe
Saves the "Zero adjust" value in the probe box. If you connect the probe to another channel or to another R&S RTx oscilloscope, the value is read out again, and you can use the probe without further adjustment.

Remote command:
`PROBe<ch>:SETup:OFFSet:STPRobe` on page 1439


5.6.8 Setup for optical isolated probe systems

The R&S RT-ZISO is an optical isolated probe system. It consists of the probe head with exchangeable tip module, probe receiver, and scope connector cable. The probe head is permanently connected to the probe receiver by an optical cable, which is an optical isolated cable with multifiber system. To connect the probe receiver to the R&S RTP, the scope connector cable is used. This cable provides the required supply voltage and transmits the measurement data and control signals simultaneously.

The power consumption of the probes is monitored by the power monitor. See Section 5.6.10.3, "Power monitor", on page 176 for details.

5.6.8.1 Setup parameters of optical isolated probes

Access: "Menu" > "Vertical" > "Probes" > select channel with connected R&S RT-ZISO probe.

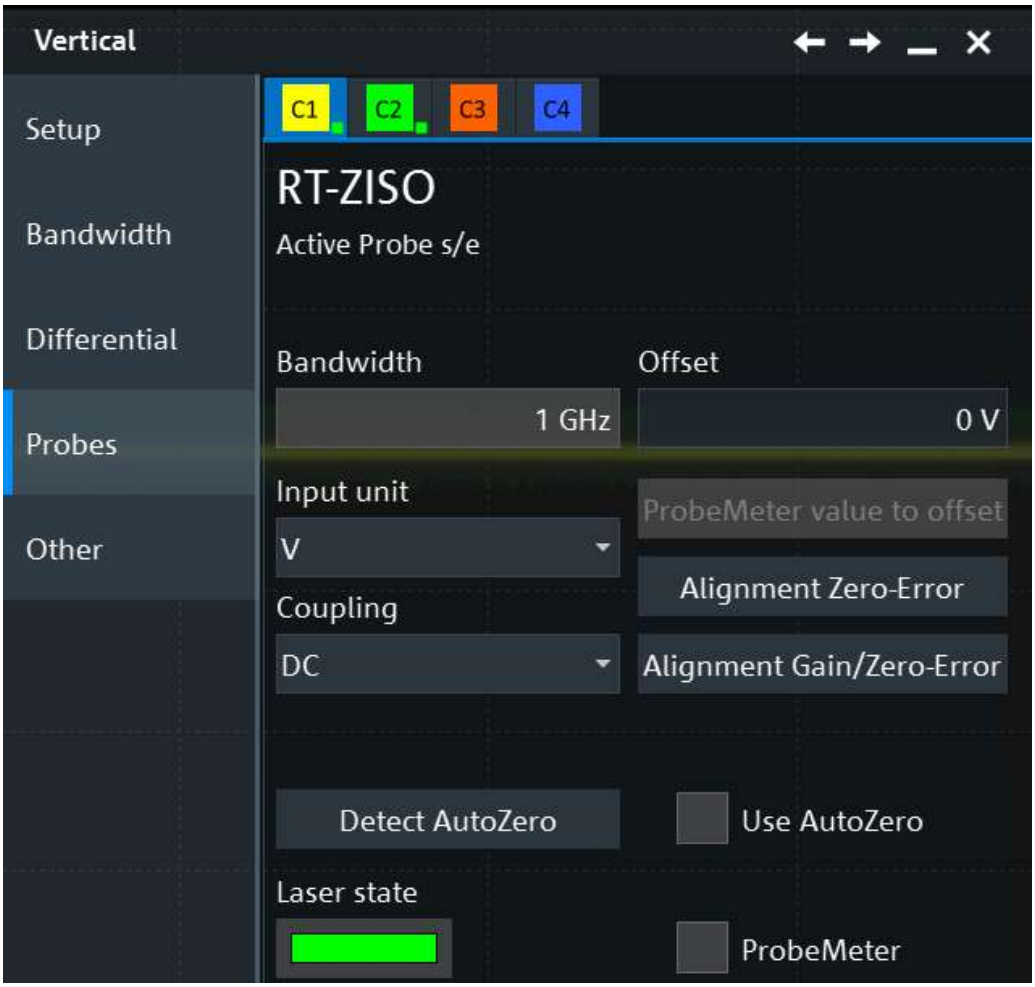

The following shared probe settings are available:

- "Type, Name, Bandwidth" on page 148
- "Detect AutoZero, Use AutoZero" on page 148

The dialog also shows the vertical offset. See "Offset" on page 142 for details.

Set the vertical scale in the "Setup" tab. The probe adjusts its attenuation automatically.

Input unit
Sets the unit of the R&S RT-ZISO signal.

Remote command:
`PROBe<ch>:SETup:UNIT` on page 1440

Coupling
Selects the coupling of the probe input. The termination of the channel input is always 50 Ω.

The coupling determines the part of the signal that is used for waveform analysis and triggering.

"DC"	Both DC and AC components of the signal are passed.
"AC"	DC and very low-frequency components of the signal are removed.

ProbeMeter value to offset
Sets the measured R&S ProbeMeter value as offset. Thus, the value is considered in measurements.

The function is available if ProbeMeter is active.

Remote command:
`PROBe<ch>:SETup:ADVanced:PMToffset` on page 1426

Alignment Zero-Error
Performs a self-alignment and corrects the zero point error of the R&S RT-ZISO probe.

Tip modules are not affected by the alignment. Attaching or removing the tip module does not change the process or result.

The alignment can take about a minute, the progress is shown in the dialog. Wait until the process has been finished. After successful alignment, the correction data is automatically written to the non-volatile flash of the probe.

Remote command:
`PROBe<ch>:SETup:ALIGnment:ZERO:EXECute` on page 1440
`PROBe<ch>:SETup:ALIGnment:STATe?` on page 1441

Alignment Gain/Zero-Error
Corrects the zero point error and the gain error of the R&S RT-ZISO probe.

Tip modules are not affected by the alignment. Attaching or removing the tip module does not change the process or result.

The alignment can take about a minute, the progress is shown in the dialog. Wait until the process has been finished. After successful alignment, the correction data is automatically written to the non-volatile flash of the probe.

Remote command:
`PROBe<ch>:SETup:ALIGnment:GAIN:EXECute` on page 1440
`PROBe<ch>:SETup:ALIGnment:STATe?` on page 1441

Laser state
The color indicates the current status of the laser:

- Green: the laser is working.
- Yellow: the laser needs service, but is still working.
- Red: defective laser, send it to your Rohde & Schwarz service center.

Remote command:
`PROBe<ch>:SETup:LASTate?` on page 1439

Restore default values
Resets the probe settings to default values.

Remote command:
`PROBe<ch>:SETup:RDEFaults` on page 1441

TIP Info
Opens the "ZISO tip" dialog. See Section 5.6.8.2, "TIP Info dialog", on page 174.

Info
Opens the "Probes Info" dialog. See Section 5.6.10, "Probes info", on page 175.

5.6.8.2 TIP Info dialog

Access: "Menu" > "Vertical" > "Probes" > select channel with connected R&S RT-ZISO probe > "TIP Info"

The dialog shows the characteristics of the tip modules that are connected to the probes.

ZISO Tip

Tip Attributes	C1 Channel 1	C2 Channel 2	C3 Channel 3	C4 Channel 4
Name	ZISO-Z301			
Type	BROWSER			
Part number	1803.4500.02			
Serial number	100611			
Production date	2023-11-06			
Production time	10:00:00			
Input impedance	10 MΩ	0 Ω	0 Ω	0 Ω
Input capacity	12 pF	0 F	0 F	0 F
Input min [V]	-300 V	0 V	0 V	0 V
Input max [V]	300 V	0 V	0 V	0 V
Offset min [V]	-300 V	0 V	0 V	0 V
Offset max [V]	300 V	0 V	0 V	0 V
Unit	---	0 V	0 V	0 V
Bandwidth	500 MHz	0 Hz	0 Hz	0 Hz
Attenuation	10	0	0	0

5.6.9 Setup for unknown probes

If the R&S RTP cannot detect the probe, and the probe is not a predefined one, you can set the probe parameters manually.

The following shared probe settings are available:

- "Type, Name, Bandwidth" on page 148
- "Detect AutoZero, Use AutoZero" on page 148

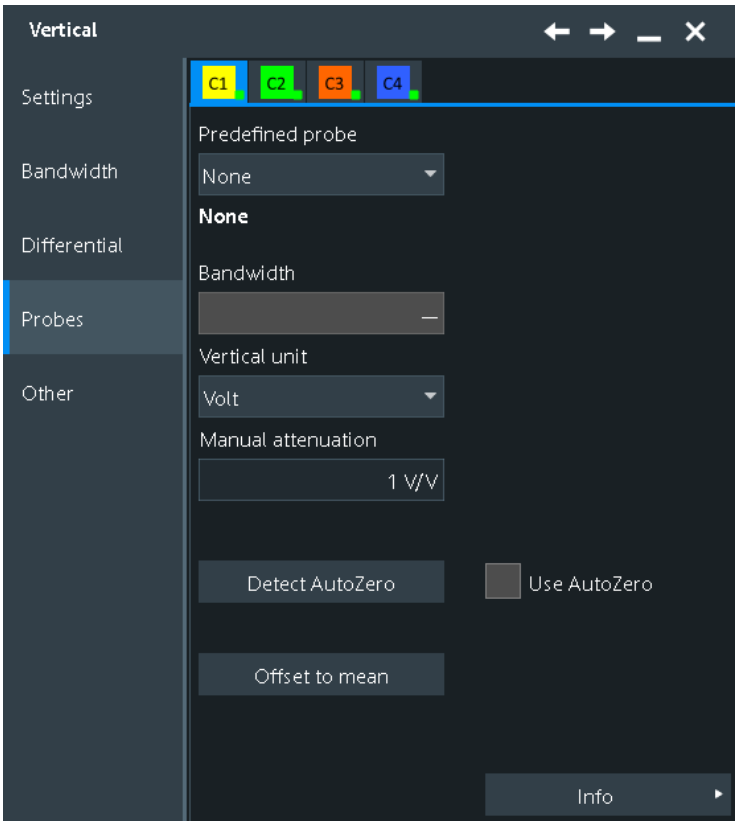


Figure 5-18: Probe setup for an unknown probe


Set the unit and the attenuation or gain of the probe: "Vertical unit, Attenuation, Gain" on page 154.

5.6.10 Probes info

5.6.10.1 Probe attributes

To check the attributes of the connected probes, select "Info" in the "Vertical" > "Probes" tab.

For a specification of the probe parameters, refer to the data sheet.

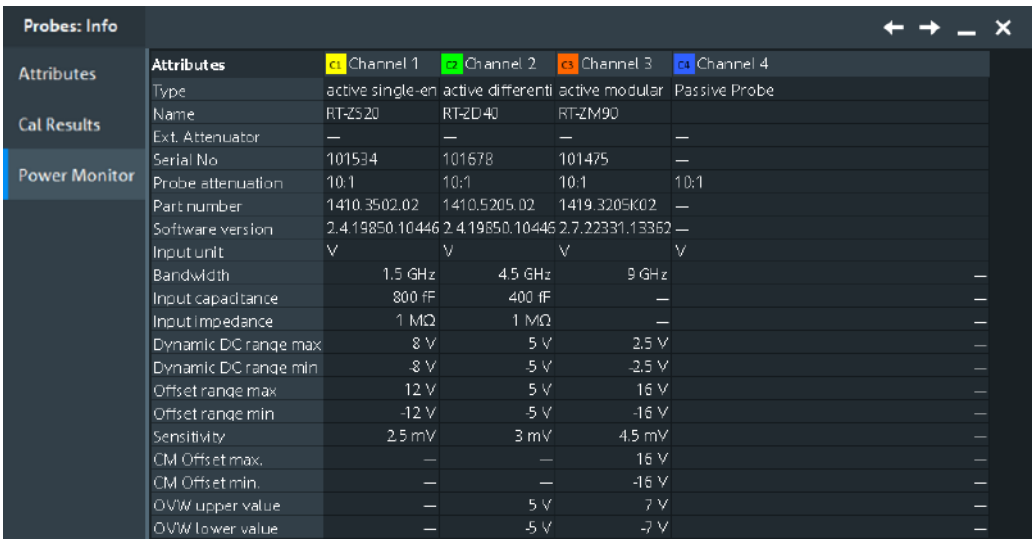


Remote commands:

- `PROBe<ch>:ID:SWVersion?` on page 1442
- `PROBe<ch>:ID:PRDate?` on page 1442
- `PROBe<ch>:ID:PARTnumber?` on page 1442
- `PROBe<ch>:ID:SRNumber?` on page 1443
- `PROBe<ch>:SETup:CAPacitance?` on page 1443
- `PROBe<ch>:SETup:IMPedance?` on page 1443

5.6.10.2 Calibration results


To check the attributes of the connected probes, select "Info" > "Cal Results" in the "Probes" tab.

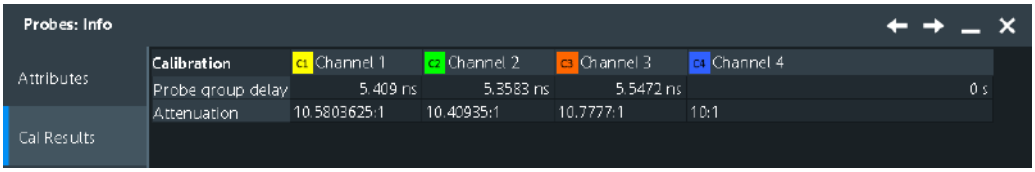

5.6.10.3 Power monitor

The power monitor informs about the connected probes and their power consumption.

If you use several R&S RT-ZISO probes, the power of the instrument can be insuffcient to power all probes. The power monitor notifies you of insufficient power. To solve the problem, you can remove redundant probes, or use the external power supplies to power the R&S RT-ZISO probes.

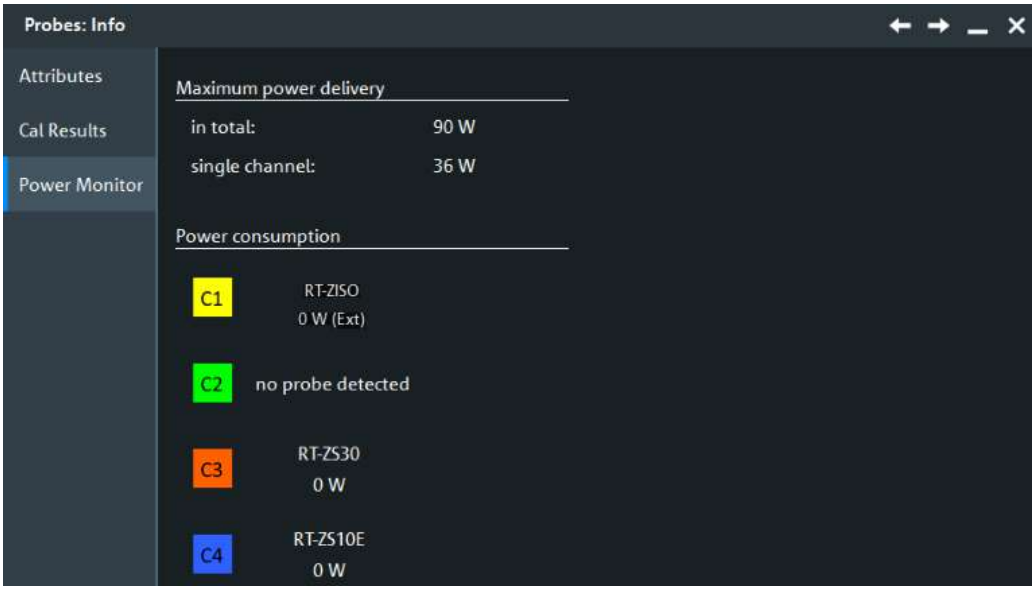

5.6.11 Probe adapter R&S RT-Z1M

Using the R&S RT-Z1M probe adapter, you can connect probes requiring 1 MΩ load impedance to the R&S RTP, which has inputs with 50 Ω impedance. The Rohde & Schwarz probe interface at the adapter input allows you to connect various probes, e.g. passive probes, current probes, and active probes with Rohde & Schwarz probe interface.

1. Connect the R&S RT-Z1M adapter to the channel input.

   The instrument identifies the adapter.

2. Connect the probe to the adapter.

   The oscilloscope reads the probe-specific parameters through the adapter.

3. Set up the probe as usual, depending on the type of the connected probe.
4. Set the correct coupling in "Vertical" > "Setup".
5. In the "Vertical" > "Probes" > "Adapter Setup", start the self-alignment of the adapter.


If the adapter is connected, additional settings are available in several dialog boxes:

- Channel settings with connected adapter 177
- Probe settings with connected adapter 178
- R&S RT-Z1M setup 179

5.6.11.1 Channel settings with connected adapter

Access: [C<n>] > "Setup"

In the "Setup" tab, you can set the coupling to 1 MΩ.

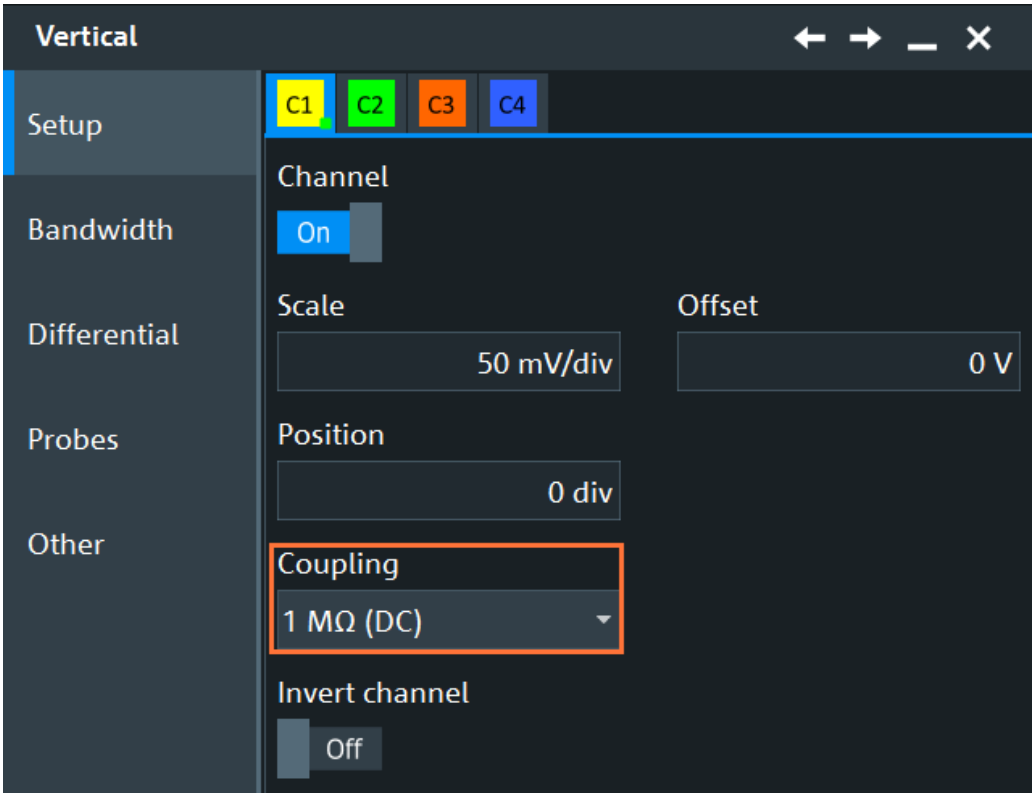

Coupling
Selects the coupling, which determines what part of the signal is used for waveform analysis and triggering. The 1 MΩ values are only available if the R&S RT-Z1M adapter is connected to the selected channel.

In addition to coupling, the signal can be filtered for high frequency rejection, see Section 5.5.5, "Digital filter setup", on page 146.

"1 MΩ (DC)" Connection with 1 MΩ termination, passes both DC and AC components of the signal.

"1 MΩ (AC)" Connection with 1 MΩ termination through DC capacitor, removes DC and very low-frequency components.

If AC coupling is set, the attenuation of passive probes has no effect, and voltage is applied to the instrument with factor 1:1. Observe the voltage limits, otherwise you can damage the instrument.

Remote command:
`CHANnel<ch>:COUPling` on page 1408

5.6.11.2 Probe settings with connected adapter

Access: "Menu" > "Vertical" > "Probes"

In the "Probes" tab, you can switch on the R&S ProbeMeter of the adapter, and navigate to the adapter settings.

The R&S ProbeMeter of the adapter takes effect if the connected probe does not have an own R&S ProbeMeter. Probes with an own R&S ProbeMeter use their own one.


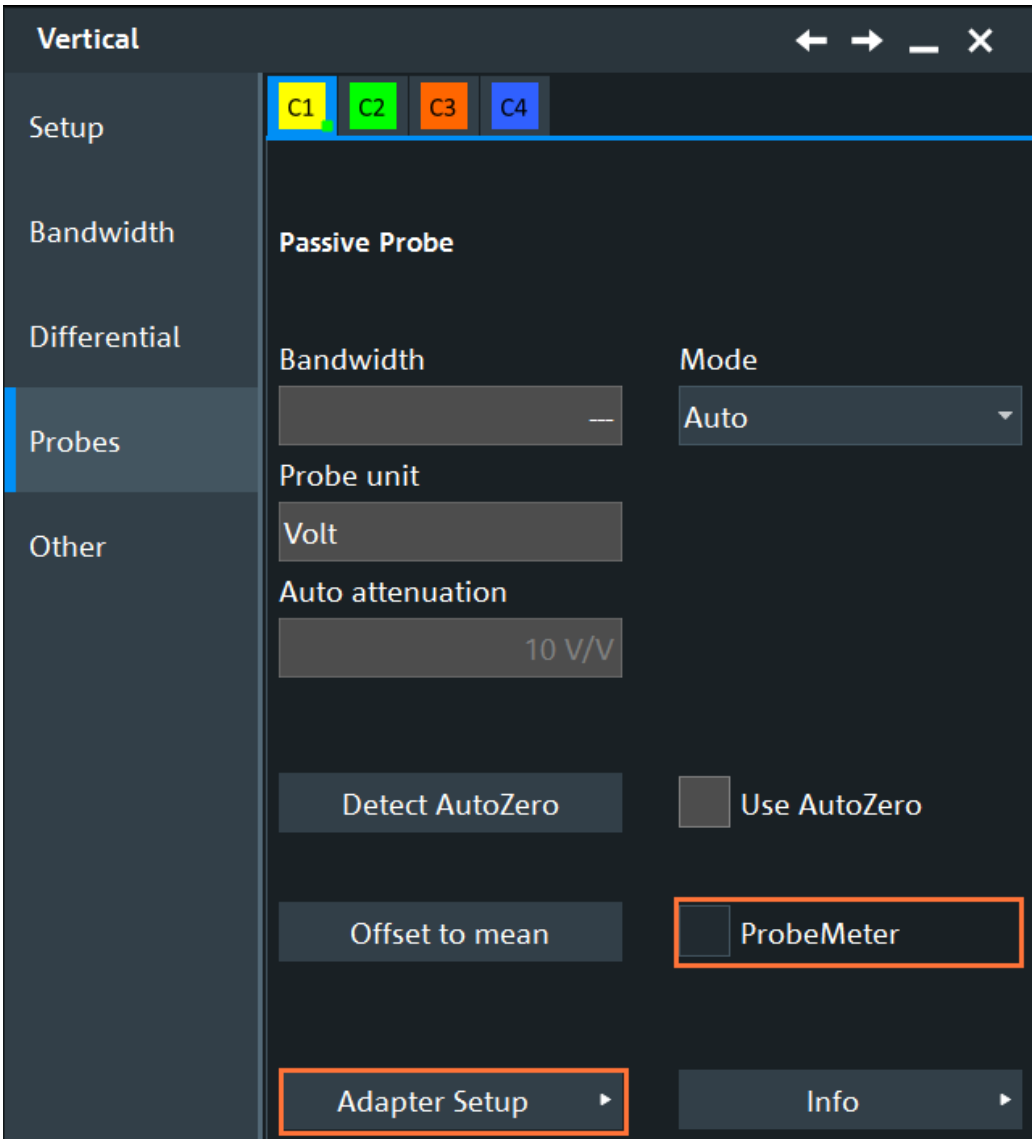


Figure 5-19: Probe settings of passive probe connected via R&S RT-Z1M adapter, R&S ProbeMeter of the adapter is available

5.6.11.3 R&S RT-Z1M setup

Access: "Menu" > "Vertical" > "Probes" > "Adapter Setup"

In the "RT-Z1M" dialog, you can change the bandwidth limit, and start the self-alignment. You also can see information on the adapter: name, serial number, part number, software version, production date and time.

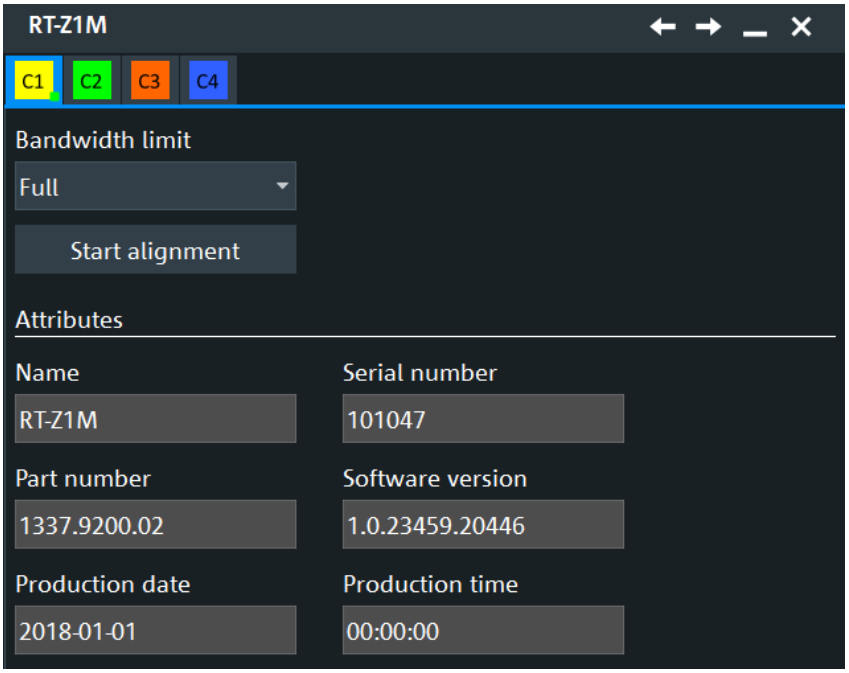

Bandwidth limit
Selects the bandwidth limit of the adapter. The specified bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3dB attenuation.

"Full"	At full bandwidth, all frequencies in the specified range are acquired and displayed. Full bandwidth is used for most applications.
200 MHz, 20 MHz, ...	Frequencies above the selected limit are removed to reduce noise at different levels.

Remote command:
`PROBe<ch>:CONVerter:BANDwidth` on page 1444

Start alignment
Self-alignment compensates measurement errors caused by a difference of termination impedance, or an ambient temperature different from the one at which the factory alignment was done. When the adapter is detached from the oscilloscope, the values of the self-alignment are discarded, and the original factory-alignment is reloaded. Thus, repeat the selfalignment when you reattach the probe.

Remote command:
`PROBe<ch>:CONVerter:SELFalign` on page 1444

5.7 R&S RT-ZVC probe

With the R&S RTP and option R&S RTP-B1E, you can use the R&S RT-ZVC multichannel power probe. It has an integrated 2- or 4-channel amperemeter and 2- or 4-channel voltmeter. The probe provides parallel measurements of analog or digital, voltage/current signals with excellent 18-bit resolution.

For more information on the R&S RT-ZVC probe, see also its user manual.

Source Channels

You can simultaneously connect a R&S RT-ZVC and a R&S RT-ZL04 to the R&S RTP, but no parallel operation on screen is possible.

You can acquire and measure the R&S RT-ZVC or R&S RT-ZL04 together with the analog input channels. They are running on the same horizontal scale.

If an amperemeter or voltmeter channel is activated, it can be displayed on the screen and used as a source for:

- Cursor measurements
- Automatic measurements, and also histogram, limit checks, longterm, track, quick measurements
- Mask testing
- Basic and advanced maths
- Reference waveform
- Trigger type "Edge"
- Search: all search events
- XY diagrams
- Data export

All features of the base unit, the R&S RTP-K37 option and R&S RTP-K19 option are supported.

Data export

You can save the data of the amperemeter and voltmeter channels to an XML, CSV, or BIN file. One channel per file can be saved. Files in BIN format can be reloaded to the R&S RTP as reference waveforms.

See also:

- Section 12.3.7, "Saving and loading waveform data", on page 520
- Section 12.3.1, "Waveform export files", on page 498

Remote commands for export to file:


- `EXPort:WAVeform:SOURce` on page 1783
- `EXPort:WAVeform:NAME` on page 1785
- `EXPort:WAVeform:SAVE` on page 1786

5.7.1 R&S RT-ZVC overview

5.7.1.1 Setup

Access: [Apps]> "Analysis" > "Multi-channel probe" > "Setup" tab

Make sure that the tab of the correct probe is selected on the left side.

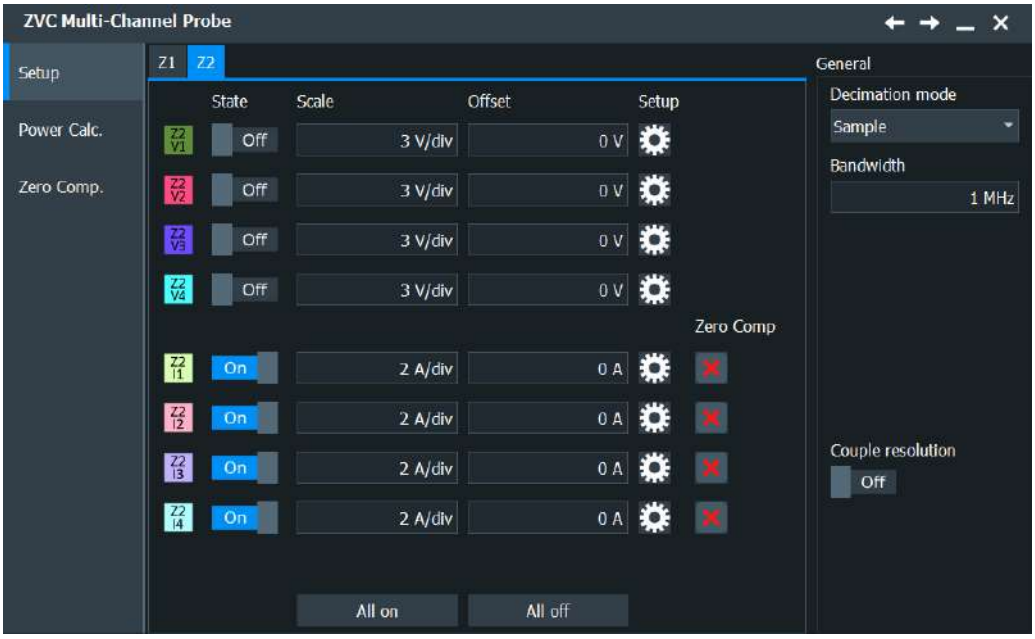

State
Enables the corresponding channel of the probe. The number of available channels depend on the characteristics of your multi-channel power probe.

Remote command:
`ZVC:Z<m>:V<n>[:STATe]` on page 1455
`ZVC:Z<m>:I<n>[:STATe]` on page 1452

Scale
Defines the vertical scale for the channel in Volts per division. Increasing the scale compresses the display of the signal. Within a given operation range, modifying the scale is equivalent to scaling a display range.

For the voltmeter channels, the Scale, the Offset and the "Position" specify the operating range of the voltmeter.

Remote command:
`ZVC:Z<m>:V<n>:SCALe` on page 1454
`ZVC:Z<m>:I<n>:SCALe` on page 1449

Offset
The vertical center of the selected channel is shifted by the offset value and the signal is repositioned within the diagram area. Negative offset values move up the waveform, positive values move it down.

Within a given operation range, modifying the offset is equivalent to moving vertically the display range. The offset can only be modified such that the display range reaches at most the limits of the operation range.

For the voltmeter channels, the Scale, the Offset and the "Position" specify the operating range of the voltmeter.

Remote command:
ZVC:Z<m>:V<n>:OFFSet on page 1453
ZVC:Z<m>:I<n>:OFFSet on page 1447

Setup
Opens the voltage or current settings for the selected channel. See Section 5.7.2, "ZVC voltage settings", on page 185 and Section 5.7.3, "ZVC current settings", on page 187.

Zero Comp
Shows the status of the zero compensation of each current channel. The green checkmark indicates that the zero offset is compensated automatically. To adjust the settings, tap the icon. For details, see Section 5.7.1.3, "Zero compensation", on page 185.

Remote command:
ZVC:Z<m>:I<n>:ZERComp:STATe? on page 1457

All on
Enables all available channels.

All off
Disables all available channels.

Decimation mode
Selects the decimation mode for all R&S RT-ZVC probes. Decimation reduces the data stream of the ADC to a stream of waveform points with lower sample rate and a less precise time resolution.

"Sample"	One of n samples in a sample interval of the ADC is recorded as waveform point, the other samples are discarded. The time between the two adjacent waveform points is exactly the resolution. Very short glitches might remain undiscovered by this method.
"Peak detect"	The minimum and the maximum of n samples in a sample interval are recorded as waveform points, the other samples are discarded.
"High res"	The average of n sample points is recorded as one waveform sample. Averaging reduces the noise, the result is a more precise waveform with higher vertical resolution. The high measurement resolution is suitable for high accuracy measurements of instantaneous values.

Remote command:
ZVC:TYPE on page 1446

Bandwidth
Sets the bandwidth limit of all R&S RT-ZVC probes. The bandwidth specifies the maximum frequency at which a purely sinusoidal signal is still transferred at 89 % (1 dB) of its amplitude.

The bandwidth of some current channels is restricted to 300 KHz due to their vertical settings.

Remote command:
ZVC:BANDwidth on page 1446

Couple resolution
Sets the resolution of all R&S RT-ZVC channels.


"On" The resolution of the analog channels is applied to R&S RT-ZVC channels. The signal is automatically interpolated or decimated to get the analog resolution.

"Off" The resolution of R&S RT-ZVC channels is set in a way so that the record length of the waveforms is minimum 1000 samples.

Remote command:
ZVC:RESCoupled on page 1448

5.7.1.2 Power calculation

Access: [Apps]> "Analysis" > "Multi-channel probe" > "Power Cal." tab

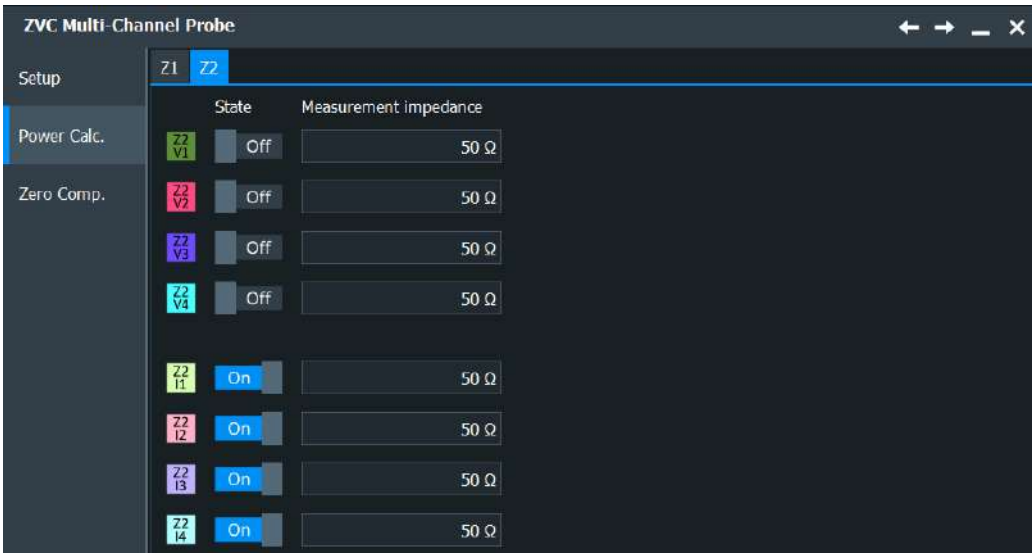

State
Enables the corresponding channel of the probe. The number of available channels depend on the characteristics of your multi-channel power probe.

Remote command:
ZVC:Z<m>:V<n>[:STATe] on page 1455
ZVC:Z<m>:I<n>[:STATe] on page 1452

Measurement Impedance
Sets the impedance of the probe channel for power calculations and measurements.

Remote command:
ZVC:Z<m>:V<n>:IMPedance on page 1453
ZVC:Z<m>:I<n>:IMPedance on page 1447

5.7.1.3 Zero compensation

Access: [Apps]> "Analysis" > "Multi-channel probe"> "ZeroComp" tab

Zero compensation is used to avoid negative currents in measurement results, and to improve the measurement accuracy. The determined compensation is valid as long as the temperature is constant and the probe settings are unchanged.

1. Disconnect the DUT from the power supply.
2. Adjust the current settings, in particular, the shunt settings. See Section 5.7.3, "ZVC current settings", on page 187.
3. Connect one probe tip of the R&S RT-ZVC probe to the high voltage pin of the DUT. Disconnect the other probe tip from the DUT.
4. Open the "ZeroComp" settings: [Apps]> "Analysis" > "Multi-channel probe"> "ZeroComp" tab
5. Tap "ZeroComp" to determine the zero offset.
6. Enable "Use" to compensate for the zero offset.



ZeroComp
Measures the zero offset, the mean value on a currentless DUT. If temperature changes, or if you change the shunt or other probe settings, repeat the measurement.

Remote command:
`ZVC:Z<m>:I<n>:ZERComp:DETect` on page 1456

Use
If enabled, the measured "ZeroComp" offset value is compensated automatically.


Remote command:
`ZVC:Z<m>:I<n>:ZERComp:USE` on page 1456

5.7.2 ZVC voltage settings

Access: [Apps]> "Analysis" > "Multi-channel probe"> "Setup" tab > "Setup" icon of voltage channel

See also:

- Scale
- Offset

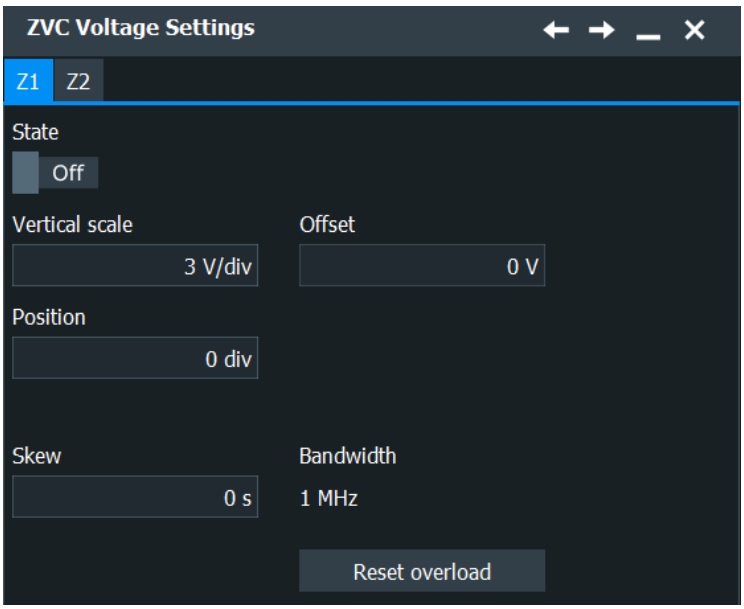

Channel
Selects the voltmeter channel to be configured.

State
Enables the corresponding voltage channel of the probe. The number of available channels depend on the characteristics of your multi-channel power probe.

Remote command:
`ZVC:Z<m>:V<n>[:STATe]` on page 1455

Position
Moves the selected signal up or down in the diagram. The visual effect is the same as for Offset. While the offset sets a voltage, position is a graphical setting given in divisions. Within a given operation range, modifying the position is equivalent to moving vertically the display range. The position can only be modified such that the display range reaches at most the limits of the operation range.

For the voltmeter channels, the Scale, the Offset and the "Position" specify the operating range of the voltmeter.

Remote command:
`ZVC:Z<m>:V<n>:POSition` on page 1454

Bandwidth
Displays the bandwidth of the current channel. You can set the probe bandwidth in the "Setup" dialog.

Remote command:
`ZVC:Z<m>:V<n>:BANDwidth?` on page 1452

Skew
Sets the skew, a delay value, that is known from the circuit specifics but cannot be compensated by the instrument automatically.

Remote command:
ZVC:Z<m>:V<n>:SKEW on page 1455

Reset Overload
Resets the overload indication at the probe.


Remote command:
ZVC:Z<m>:V<n>:OVERload:RSTO on page 1453

5.7.3 ZVC current settings

Access: [Apps]> "Analysis" > "Multi-channel probe"> "Setup" tab > "Setup" icon of current channel

See also:

- Scale
- Offset

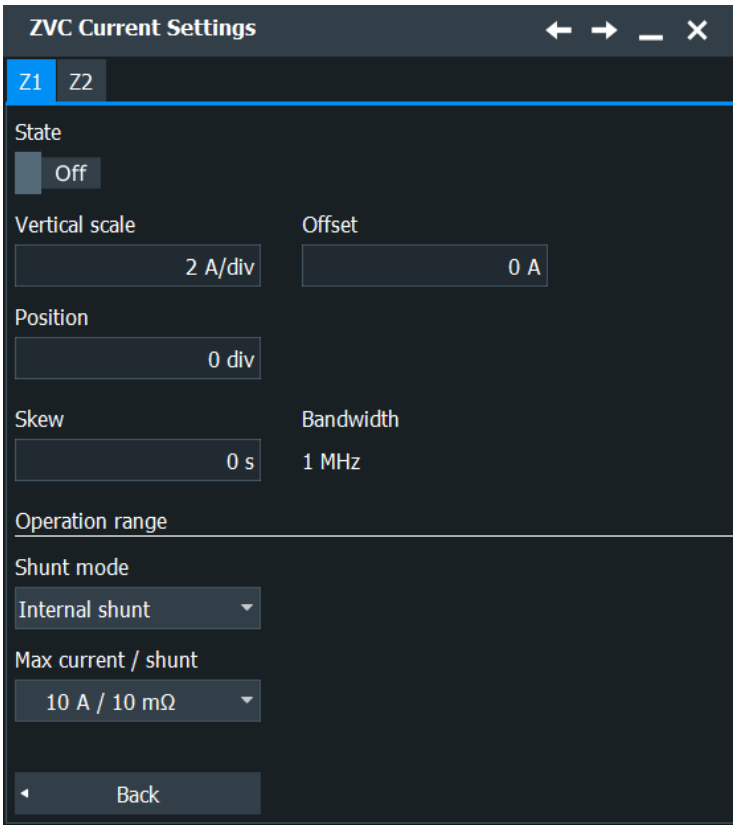

Channel
Selects the amperemeter channel to be configured.

State
Enables the corresponding current channel of the probe. The number of available channels depend on the characteristics of your multi-channel power probe.

Remote command:
ZVC:Z<m>:I<n>[:STATe] on page 1452

Bandwidth
Displays the bandwidth of the current channel. You can set the probe bandwidth in the "Setup" dialog.

Remote command:
ZVC:Z<m>:I<n>:BANDwidth? on page 1446

Position
Moves the selected signal up or down in the diagram. The visual effect is the same as for Offset. While the offset sets a current, position is a graphical setting given in divisions. Within a given operation range, modifying the position is equivalent to moving vertically the display range. The position can only be modified such that the display range reaches at most the limits of the operation range.

Remote command:
ZVC:Z<m>:I<n>:POSition on page 1449

Skew
Sets the skew, a delay value, that is known from the circuit specifics but cannot be compensated by the instrument automatically.

Remote command:
ZVC:Z<m>:I<n>:SKEW on page 1451


Shunt mode
Selects the internal or external shunt mode.

Regarding the shunt selection, i.e. the burden voltage level, there is a trade-off between the burden of the circuit under test and the SNR at the frontend input. The burden voltage is the DUT circuit loading caused by leads, connectors and the amperemeter circuit.

From the DUT perspective, the burden voltage has to be kept low not to distort the device operation. In contrast, from the probe's view the voltage has to be as large as possible to obtain a good SNR. For that reason, the external shunt can be applied to get the best compromise of both for a specific measurement range.

Remote command:
ZVC:Z<m>:I<n>:SHUNt:MODE on page 1450

Internal Shunt Mode
If Shunt mode is set to "Internal shunt", include the settings for the internal shunt mode.

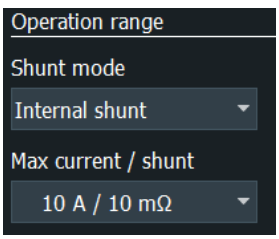


Max current / shunt ← Internal Shunt Mode
Selects the maximum current and the internal shunt value.

With the maximum current and the internal shunt selection, the operating range of the amperemeter is specified. At the same time, the burden voltage at the amperemeter input can be estimated. For values of the total round-trip resistance that can be seen at the test lead ends, consider the specifications.

For using internal shunts, the circuit under test needs to be interrupted so that the current can flow through the probe.

Remote command:
`ZVC:Z<m>:I<n>:SHUNt:MAXCurrent` on page 1450

External shunt mode
If Shunt mode is set to "External shunt", include the settings for the external shunt mode.

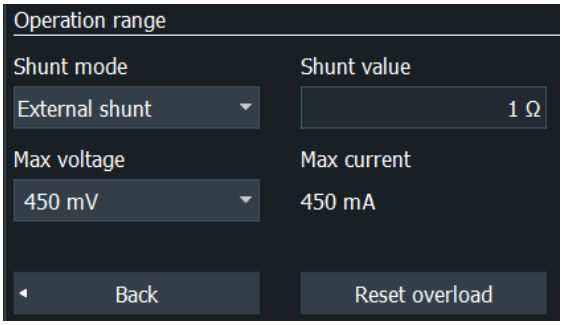

Max voltage ← External shunt mode
Selects the maximum voltage at the external shunt.

Remote command:
`ZVC:Z<m>:I<n>:SHUNt:MAXVoltage` on page 1451

Shunt value ← External shunt mode
Sets the shunt value of the external shunt resistor.

Remote command:
`ZVC:Z<m>:I<n>:SHUNt:EVALue` on page 1450

Max current ← External shunt mode
Displays the maximum current.

Remote command:
`ZVC:Z<m>:I<n>:SHUNt:MXCValue?` on page 1451

Reset Overload ← External shunt mode
Resets the overload indication at the probe.

Remote command:
`ZVC:Z<m>:I<n>:OVERload:RSTO` on page 1448

5.8 Differential signals

With R&S RTP, you can easily analyze differential signals using single-ended probes, or even cables. The instrument processes the input of single-ended probes on analog channels and creates the differential and common mode waveforms. Similar to Rohde & Schwarz modular probes, you can display the waveforms of differential voltage, common mode voltage, positive single-ended voltage and negative single-ended voltage. Triggering on differential signals is also possible.

Deembedding is possible if the option R&S RTP-K121 is installed. With option R&S RTP-K122, real-time deembedding is also available.

Deembedding is applied to the two single-ended captured signals, resulting in deembedded differential waveform, common mode waveform, positive single-ended waveform and negative single-ended waveform. Deembedding also considers cross-couplings.

Restriction: Differential signals are not available when high definition mode is active.

5.8.1 Settings of differential signals

Access: "Menu" > "Vertical" > "Differential"

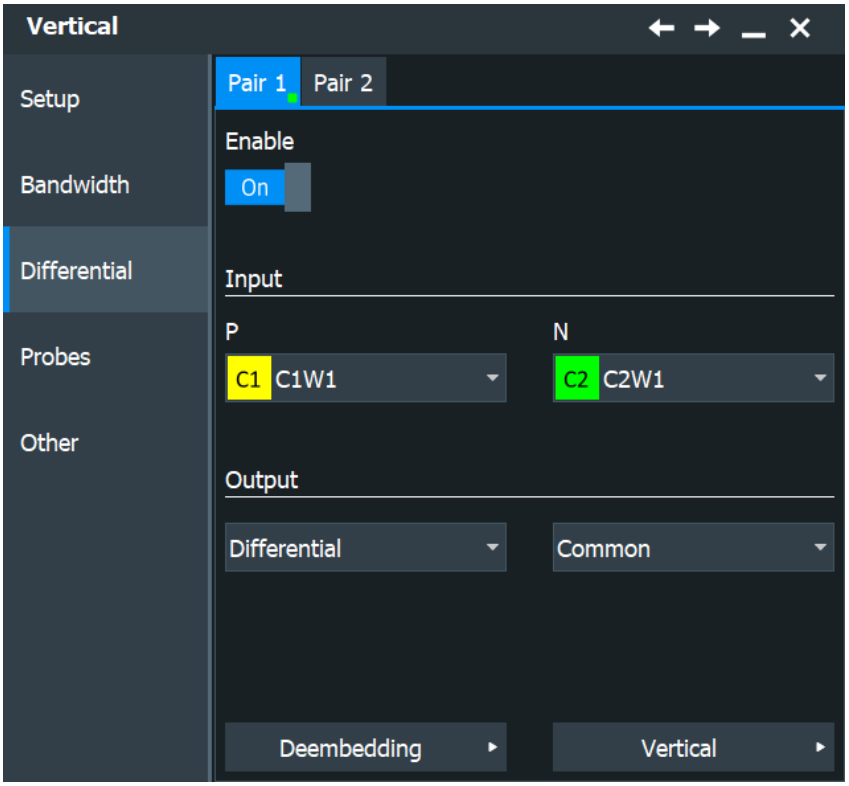


Figure 5-20: Setup of differential signals without deembedding

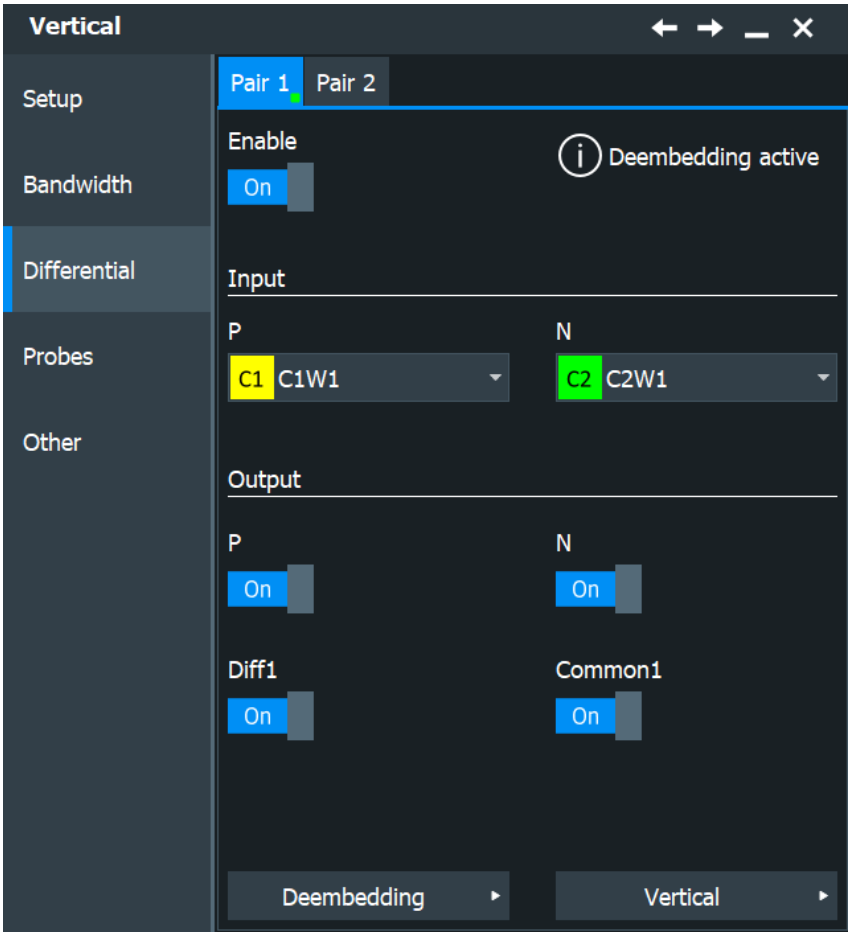


Figure 5-21: Setup of deembedded differential signals

Enable
Activates the differential signal.

Remote command:
`DIFFerential<m>:STATe` on page 1460

P, N
Select the analog input channel of the positive and negative signal.

Remote command:
`DIFFerential<m>:PSIGnal[:SELect]` on page 1460
`DIFFerential<m>:NSIGnal[:SELect]` on page 1460

Output: P, N, Diff, Common
Select the waveforms that are displayed as result of differential processing.

The number of output waveforms per differential signal depends on the deembedding:
- No deembedding: 2 output waveforms.
- Deembedding by software: up to 4 output waveforms. All output waveforms can be displayed at the same time.

- Real-time deembedding: 1 output waveform. It can either be the deembedded differential, common-mode, positive single-ended or negative single-ended waveform.

In the diagram, you see the output waveforms, and the signal icons of the input channels are grayed out. The input channels are only visible if "P" or "N" are selected as output.

"P", "N" Displays the waveform of the positive or negative input signal. Without deembedding, the input channel is shown directly, no additional waveform is created. If differential deembedding is active, you always see the deembedded waveforms, but never the captured input signal.


"Differential" Displays the differential signal as a new waveform.

"Common" Displays the common mode signal as a new waveform.

Remote command:
`DIFFerential<m>:AOUTput` on page 1460
`DIFFerential<m>:BOUTput` on page 1460
If deembedding by software is active, use the following commands:
`DIFFerential<m>:COMMon:STATe` on page 1461
`DIFFerential<m>:DIFFerential:STATe` on page 1461
`DIFFerential<m>:NSIGnal:STATe` on page 1461
`DIFFerential<m>:PSIGnal:STATe` on page 1461

5.8.2 Vertical setup of differential signals

Access: "Menu" > "Vertical" > "Differential" > "Vertical Setup"

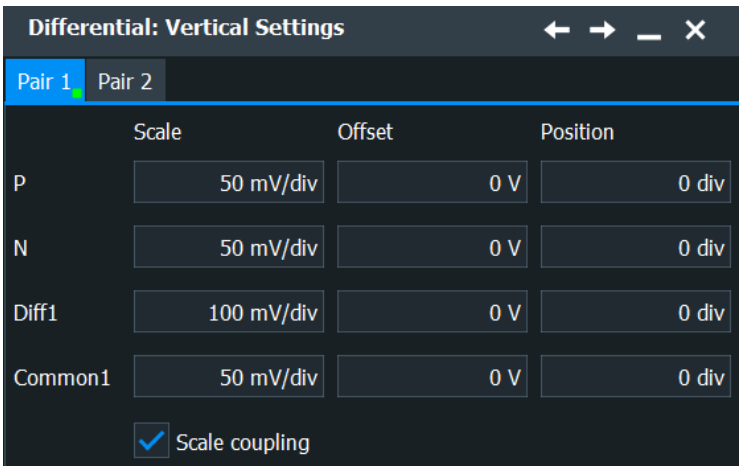

Scale
Sets the vertical scale of differential and common mode waveforms.

Vertical settings of P and N output are the vertical settings of the input channels.

Remote command:
`DIFFerential<m>:COMMon:SCALe` on page 1461
`DIFFerential<m>:DIFFerential:SCALe` on page 1461

Scale coupling
If enabled, the vertical scales of P, N, differential and common mode waveforms are coupled. The scales are related as follows:

$VertScale_P = VertScale_N = VertScale_{CM} = VertScale_{Diff}/2$

You can disable the scale coupling and set an individual scale for each waveform.

Remote command:
`DIFFerential<m>:COUPling` on page 1462

Offset
Sets the offset of differential and common mode waveforms.

Vertical settings of P and N output are the vertical settings of the input channels.

Remote command:
`DIFFerential<m>:COMMon:OFFSet` on page 1462
`DIFFerential<m>:DIFFerential:OFFSet` on page 1462

Position
Sets the vertical position of differential and common mode waveforms.

Vertical settings of P and N output are the vertical settings of the input channels.

Remote command:
`DIFFerential<m>:COMMon:POSition` on page 1462
`DIFFerential<m>:DIFFerential:POSition` on page 1462

5.8.3 Deembedding of differential signals

To remove the parasitic effects of the measurement setup from the measured signal, you can use deembedding for differential signals. Deembedding requires the option R&S RTP-K121, and real-time deembedding requires the option R&S RTP-K122 in addition.

The deembedding of differential signals is represented by one or more 4-port input components. You can activate deskewing, and set a skew time.

See also: Section 21, "Deembedding (option R&S RTP-K121/-K122)", on page 1183.

1. On the "Vertical" menu, select "Differential Signals".
2. Select the input channels of the positive and negative signal.
3. Enable the differential signal.
4. Select "Deembedding".
5. Select the channel subtab of the positive input.
6. On the "Setup" tab, enable deembedding for the channel.
7. Optionally, you can enable real-time deembedding if available.
8. On the "Input" component, select "Configure".

9. If necessary, activate "Use skew offset". Use the deskewing if the P and N waveforms are not correctly aligned.

When you disable a deembedded differential signal in "Vertical" > "Differential Signals", deembedding is also disabled. When you enable the differential signal again, repeat the deembedding and output settings.

5.8.4 Analysis of differential signals

Before analyzing the output waveforms of differential signals, make sure that the P and N signals are correctly aligned. Without deembedding, use "Horizontal" > "Skew" to deskew the input waveforms if necessary. For deembedded waveforms, the skew setting is in the deembedding configuration.

For all output waveforms of differential signals (differential, common mode, P, N), the usual analysis methods are available:

- Trigger on differential, common mode, P, and N waveforms.
  Without deembedding, and with software deembedding, all possible output waveforms are available as trigger source, even if they are not selected and not displayed. Therefore, the differential signal must be enabled ("Enable" = on).
  With real-time deembedding, you can trigger only on the selected output waveform. Real-time deembedding and triggering is fast. You trigger on the corrected waveform, and you see this corrected waveform.
- Zoom
- Cursor measurements
- Automatic measurements
- Histogram
- Mathematics. In formulas, use DIFF1, DIFF2, COMMON1, COMMON2.
- FFT, spectrogram
- Mask test
- Export of waveform data. You can export the differential and common waveforms if they are selected as output and displayed. Raw data is not available.
  Without deembedding, P and N waveforms can be exported if they are selected as output and displayed (source = input channel). With software deembedding, only differential and common waveforms are available for export.

Search on differential signals and their input channels is not supported.

5.9 Setting up the waveform

This chapter contains the fundamental procedures for setting up the acquisition and adjusting the channel waveforms.


5.9.1 Adjusting passive probes

When using a passive probe, you have to compensate it when you connect it to the instrument the first time. Compensation matches the probe cable capacitance to the oscilloscope input capacitance to assure good amplitude accuracy from DC to upper bandwidth limit frequencies. A poorly compensated probe reduces the performance of the probe-oscilloscope system and introduces measurement errors resulting in distorted waveforms and inaccurate results.

Two connector pins are located on the front panel. The ⊥ pin is on ground level. The ⎍ pin supplies a square wave signal with 1 kHz for low frequency probe compensation.

1. Connect the BNC connector of the probe to one of the channel inputs.
2. Connect the probe's ground connector to the ground compensation pin, and the probe tip to the signal pin.
3. Press [Autoset].

   A square wave appears on the display.
4. Adjust the compensation trimmer of the probe to optimum square wave response. For details, refer to the documentation of your probe.

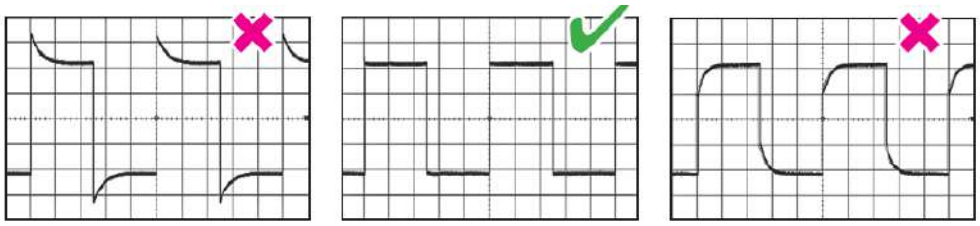

5.9.2 Setting up the signal input with autoset

Autoset is the solution for the major part of routine test-setup. It is also a good start if you need to use more complex trigger settings. Autoset finds appropriate horizontal and vertical scales, vertical offset, and trigger conditions to present a stable waveform.

1. Connect the probe to the input connector [C<n>].

   The instrument recognizes the probe and turns on the channel.
2. Press the [Autoset] key.

5.9.3 Adjusting the signal input manually

1. Connect the probe to the input connector [C<n>].

   The instrument recognizes the probe and turns on the channel.

2. Open "Menu" > "Horizontal" > "Setup" tab.
3. Set the "Time scale".
4. If you want to analyze the signal some time before or after the trigger, use the "Position" and "Reference point" to adjust the visible section of the waveform.
5. Press the channel button corresponding to the input channel. It is illuminated with the color of the channel waveform.
6. Open the "Menu" > "Vertical" > "Setup" tab.
7. Select the "Coupling".
8. Adjust the vertical "Scale", and the vertical "Position".
9. Proceed with the acquisition setup, see Section 5.9.4, "Setting the acquisition", on page 196.

5.9.4 Setting the acquisition

Prerequisites:

- Probes are connected.
- Vertical and horizontal settings are adjusted.

The settings are described in Section 5.4.2, "Mode settings", on page 131.

1. Open "Menu" > "Acquire" > "Mode" tab.
2. To configure the waveform-specific acquisition settings, enable "Multi waveform". Activate the waveforms "W1"/"W2"/"W3" you need.
   You can set up and display up to three waveforms per channel.
3. Select the "Decimation" - for example, Peak detect or High res.
4. Select the "Arithmetic" - for example, Average or Envelope.
   The instrument precludes incompatible combinations, like "Peak detect" with "Average".
5. If "Arithmetic"="Average" is selected for a waveform, enter the "Average count", that is the number of waveforms used for average calculation.
6. Set the aritmetic reset condition for the average and envelope calculation:
   a) If "Arithmetic Reset > Mode"="Time" is selected, enter the "Time".
   b) If "Arithmetic Reset > Mode"="Waveforms" is selected, enter the "Count".

5.9.5 Starting and stopping acquisition

You can control the acquisition in two ways:

- Running continuous acquisition until you stop it.
- Running one acquisition or a given number of acquisitions.

If "Envelope" or "Average" is selected in the "Acquisition" tab, one acquisition means a cycle containing as many acquired waveforms as required to satisfy the reset conditions.

Prerequisites:

- Probes are connected.
- Vertical and horizontal settings are adjusted.
- Triggering is set.
- Channels to be acquired are turned on.

To start and stop continuous acquisition

1. Check if the trigger mode is set to "Norm". The trigger mode is shown in the trigger label in the upper right corner of the screen.
   If not, press the trigger [Auto Norm] key on the front panel to toggle the setting.
2. Press the [Run / Stop] key to start acquisition.
   The acquisition starts if a trigger occurs.
3. To stop , press the [Run / Stop] key again.
   The acquisition stops immediately.

To acquire a limited number of acquisitions

1. Check if the trigger mode is set to "Norm". The trigger mode is shown in the trigger label in the upper right corner of the screen.
   If not, press the trigger [Auto Norm] key on the front panel to toggle the setting.
2. Open "Menu" > "Acquire" > "Mode" tab.
3. Enter the number of acquisitions in the "Average count" field.
4. Press the [Single] key on the front panel.
   You can stop the running acquisition before it is finished by pressing the key again.

5.9.6 Using the roll mode

The roll mode can be used if the acquisition process is slow - that is if the time scale is large. In roll mode, the instrument shows the waveform immediately and saves waiting for the waveform display. The roll mode can be activated by the instrument if several conditions are fulfilled.

To set the roll mode manually

1. Make sure that all requirements for the roll mode are fulfilled: see Section 5.2, "Horizontal", on page 123.
2. Open "Menu" > "Horizontal" > "Roll" tab.
3. Set "Mode" to "Auto".

4. Set the "Start roll time", the acquisition time at which the instrument starts the roll mode.

5.9.7 Using fast segmentation

Fast Segmentation reduces the dead time between two waveform acquisition cycles.

The settings are described in Section 5.4.3, "Segmented settings", on page 134.

1. Open "Menu" > "Acquire" > "Segmented" tab.
2. Tap "Fast segmentation" to activate the fast segmentation mode.
3. If you want to sample the maximum number of acquisitions in a series, enable "Acquire maximum".
   If you want to capture a defined number of acquisitions, disable "Acquire maximum" and enter the "Required" number of acquisitions.
4. Set the "Display time".

6 Triggers

6.1 Basics of triggering

Triggering means to capture the interesting part of the relevant waveforms. Choosing the right trigger type and configuring all trigger settings correctly allows you to detect various incidents in analog, digital, and protocol signals.

Trigger

A trigger occurs if the complete set of trigger conditions is fulfilled. The trigger is the determining point in the waveform record. The instrument acquires continuously and keeps the sample points to fill the pre-trigger part of the waveform record. When the trigger occurs, the instrument continues acquisition until the post-trigger part of the waveform record is filled. Then it stops acquiring and waits for the next trigger. When a trigger is recognized, the instrument does not accept another trigger until the acquisition is complete, and the holdoff time has expired.

Trigger setup

A simple trigger setup includes:

- Source of the trigger signal, its coupling and filtering
- Trigger type selection and setup
- Horizontal position of the trigger: see: Section 5.1.3.2, "Horizontal position", on page 119
- Trigger mode

The R&S RTP provides various trigger types for troubleshooting and signal analysis, for example, edge trigger, glitch trigger, interval trigger, pattern trigger, and much more.

For complex tasks like verifying and debugging designs, advanced trigger settings are available:

- Hysteresis: rejection of noise to avoid unwanted trigger events caused by noise.
- Holdoff to define exactly which trigger event causes the trigger.
- Qualification to consider the states of digital signals on other input channels and their logical combination.
- Trigger sequences to combine two trigger type conditions.

Action on trigger

A trigger can initiate one or more actions, for example, saving a screenshot or saving waveform data. All available actions can be initiated at the same time.


Trigger sequence

A complex trigger sequence joins two or more separate trigger conditions with an optional delay time and an optional reset time or reset condition. Similar setups are also known as multi-step trigger or A/B trigger.

Trigger information

Information on the most important trigger settings is shown in the trigger label on top of the signal bar. If you double-tap the trigger label, the "Trigger" dialog box opens. The label shows:

- Trigger mode
- Trigger source
- Trigger type, edge/polarity and level for single events
- Sequence type if selected



6.2 Setting up the trigger

This chapter provides step-by-step procedures for the important stages of trigger setup.

6.2.1 Configuring a simple trigger

Prerequisites:

- Horizontal and vertical settings are set appropriately to the signals.
- The acquisition is running, the [Run / Stop] key lights green.

For details on settings, see Section 6.3, "Trigger types", on page 202.

Proceed as follows:

1. Open the "Menu">"Trigger" dialog.

   The "Trigger" dialog box opens with the "Setup" tab.
2. Tap the "Source" button and select the trigger source.
3. Tap the "Type" button and select the trigger type.
4. Under "Trigger type dependent settings", configure the settings for the selected trigger type.
   See: Section 6.3, "Trigger types", on page 202
5. To set the trigger level automatically, tap "Find level".
6. Set the normal trigger mode. Do one of the following:
   - Press the [Auto Norm] key on the front panel until "Normal" is shown in the trigger label.
   - In the "Mode / Holdoff" tab, set the "Trigger mode" to "Normal".

6.2.2 Positioning the trigger

By positioning the trigger on the time axis, you define which part of the waveform is displayed: mainly the pre-trigger part, or the post-trigger part, or the part around the trigger point.

For details on position settings, see Section 5.4, "Acquire settings", on page 128.

1. Open the "Menu"> "Horizontal" dialog.
2. Set the "Reference point" and the "Position".
   If you want to set the trigger position outside the waveform display, make sure that "Restrict horizontal position to acquisition range" is disabled.

6.2.3 Using holdoff

For details on holdoff settings, see Section 6.4, "Mode / Holdoff", on page 231.

1. Open the "Menu">"Trigger" dialog.
2. Select the "Mode / Holdoff" tab.
3. Select the "Holdoff mode".
4. Enter the "Holdoff settings" belonging to the selected mode.

6.2.4 Setting up an A → B → R trigger sequence

The complete configuration of a complex "A → B → R" trigger sequence consists of:

- A-trigger condition
- B-trigger condition in the same way as for the A-trigger, and optional delay time between the two triggers
- Optional reset by timeout and/or R-trigger

For details on sequence settings, see Section 6.8, "Sequence", on page 240.

1. Open the "Menu" > "Trigger" dialog.
2. Set "Trigger on" = "Sequence".
3. Select the type of "Sequence": "A → B → R".
4. Tap "Setup A trigger".

   A dialog opens where you can configure the first event.
   See: Section 6.2.1, "Configuring a simple trigger", on page 200.
5. Tap "Setup B trigger" and configure the B-trigger condition.

   A dialog opens where you can configure the second event.

6. Optionally, set the "After 1st event wait" that the instrument waits after an A-trigger until it recognizes B-triggers.
7. Set the "2nd event count". The last B-trigger causes the trigger.
8. You can also define a reset condition. If no B-trigger occurs and the reset condition is fulfilled, the sequence restarts with the A-trigger.
   a) To specify a reset by timeout, enable "Reset on timeout", and enter the "Rest timeout".
   b) To specify a reset trigger type condition, enable "Reset event" and configure the reset trigger type.
   The trigger types and settings depend on the A and B trigger settings. The instrument provides only possible, reasonable combinations.

6.2.5 Qualifying the trigger

Qualification considers the states of digital signals on other input channels and their logical combination as an additional trigger condition. For example, an edge trigger is configured for channel 1, and the instrument triggers only if the signal on channel 2 is high.

For details on qualification settings and restrictions, see Section 6.7, "Qualification", on page 238.

1. On the "Menu", select "Trigger" > "Qualify" tab.
2. Set one or more channels with the input signal to be used as qualifying signals to "On".
   The channel that is the trigger source is not available for qualification.
3. Check and set the threshold levels for all used channels, that is, the thresholds for digitization of analog signals.
4. Set the signal state for each channel: high or low.
5. If more than one channel is selected, set the logical combination of the channel states.
6. If not yet enabled, tap "Qualify" to enable the qualification.

6.3 Trigger types

The setup of the trigger type is the most important part of the trigger definition. It determines the method to identify specific signal phenomena. Almost all trigger types are available for all conditions in a trigger sequence, that is, you can combine different types in the sequence. The instrument checks the trigger settings for compatibility and feasibility, and disables settings that do not fit the previous settings in the sequence.

The settings in the tab are:


- Basic trigger settings....203
- Edge....205
- Glitch....206
- Width....207
- Runt....208
- Window....210
- Timeout....212
- Interval....213
- Slew rate....214
- Setup & Hold....216
- State....218
- Pattern....219
- Serial pattern....222
- TV/Video trigger....222
- Line trigger....226
- Hardware CDR trigger....226
- Triggering on serial buses....231
- Triggering on parallel buses and digital channels....231

6.3.1 Basic trigger settings

Access: "Menu" > "Trigger" > "Setup" tab

The basic trigger settings are the trigger source and the trigger type, including the trigger level. These settings are specific for each condition in a trigger sequence. To set the trigger level automatically, use "Find level".

Depending on the trigger type, additional settings are available. They are explained in the type-specific section.

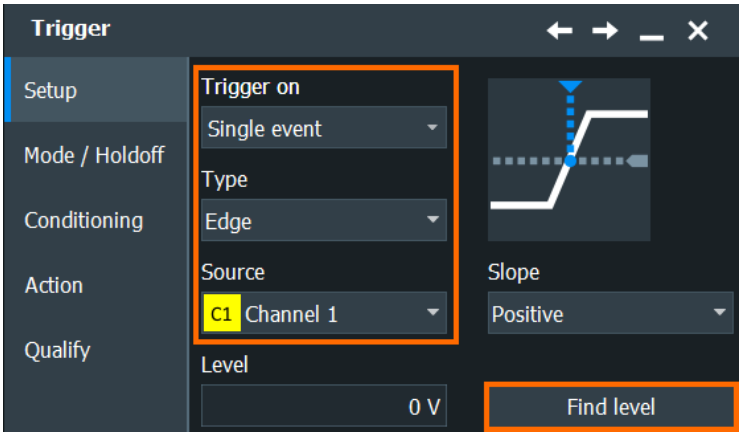

Trigger on
Selects if you want to trigger on a single event, or on a series of events.

Remote command:
`TRIGger<t>:EVENt[:EVENt]` on page 1530

Source
Selects the source of the trigger signal for the current trigger condition. The trigger source works even if it is not displayed in a diagram.

The trigger source can be:
- Channel 1...4: An analog input channel
- Extern: External analog signal connected to the external trigger input
  The external trigger source is supported for the "Single event" sequence. It is not available if a longer trigger sequence is selected, or if qualification is enabled.
- Line: The instrument generates the trigger from the AC power input and synchronizes the signal to the AC power frequency. Use this source if you want to analyze signals related to the power line frequency, such as lighting equipment and power supply devices.
- Serial bus, D0...D15, Logic, Parallel bus 1...4:
  If options with trigger functionality are installed, the variety of trigger sources is enhanced with specific trigger sources.

Available sources depend on the trigger sequence setting. If "Single event" is selected, all inputs (analog input channels, serial and parallel buses, digital channels) can be used as trigger source. If any other trigger sequence is selected, only channel inputs Ch1...4 can be set as the trigger source, and all other input sources are disabled.

See also: Section 6.8, "Sequence", on page 240

Remote command:
`TRIGger<t>:SOURce[:SELect]` on page 1469

Type
Selects the trigger type specific for each condition in a trigger sequence. The current trigger type is shown on the button.

The following trigger types are available:
- Edge, see page 205
- Glitch, see page 206
- Width, see page 207
- Runt, see page 208
- Window, see page 210
- Timeout, see page 212
- Interval, see page 213
- Slew rate, see page 214
- Setup & Hold, see page 216
- State, see page 218
- Pattern, see page 219
- High speed serial pattern trigger (option R&S RTP-K140/K141), see page 247
- Line trigger, see page 226

Restrictions:
- If the external trigger input is used as trigger source, the analog edge trigger is the only available trigger type.
- For the R-trigger (reset), the trigger types and settings are restricted dependent on the A and B trigger settings. The instrument provides only possible, reasonable combinations.

Remote command:
`TRIGger<t>:TYPE` on page 1470

Find level
Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*. The function is not available for an external trigger source and the TV trigger.

Remote command:
`TRIGger<t>:FINDlevel` on page 1471


6.3.2 Edge

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Edge"

The edge trigger is the most common trigger type. It is well known from analog oscilloscopes; and you can use it for analog and digital signals.

The trigger condition is fulfilled when the signal from the trigger source passes the specified threshold voltage in the specified direction (slope).

If the trigger source is a channel signal, the edge trigger uses the digitized trigger signal. This signal can be qualified and filtered with the DSP filter. If the trigger source is the external trigger input, the coupling and filter for this signal is set directly in the trigger setup.

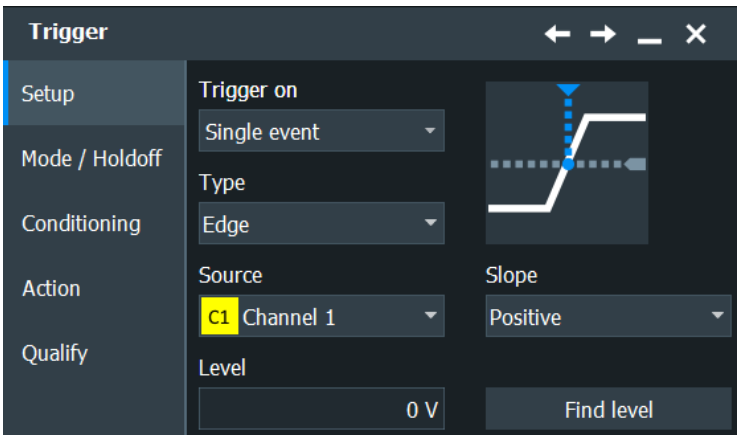

Slope
Sets the edge type for the trigger condition.

"Positive"	Selects the rising edge, which is a positive voltage change.
"Negative"	Selects the falling edge, which is a negative voltage change.
"Both"	Selects the rising as well as the falling edge. This option is not available if the trigger source is the external trigger input.

Remote command:
`TRIGger<t>:EDGE:SLOPe` on page 1472
`TRIGger<t>:ANEDge:SLOPe` on page 1541
`TRIGger<t>:SLEW:SLOPe` on page 1483


Level
Sets the voltage level for the trigger condition. You can also drag the trigger level marker on the display (TA or TB on the right edge of the display).

Remote command:
TRIGger<t>:LEVel<n>[:VALue] on page 1471

6.3.3 Glitch

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Glitch"

The glitch trigger detects pulses shorter or longer than a specified time. It identifies deviation from the nominal data rate and helps to analyze the causes of even rare glitches and their effects on other signals.

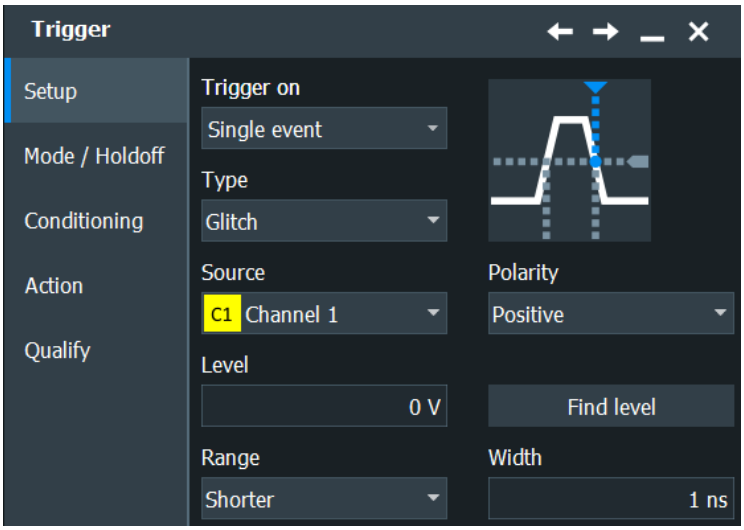

Polarity
Indicates the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Selects positive-going pulses.

"Negative" Selects negative-going pulses.

"Either" Selects both positive-going and negative-going pulses.

Remote command:
TRIGger<t>:GLITch:POLarity on page 1472
TRIGger<t>:RUNT:POLarity on page 1476

Range
Selects which glitches are identified: shorter or longer than the specified "Width".

Remote command:
TRIGger<t>:GLITch:RANGe on page 1473

Width
Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value. The minimum width is 100 ps.

You need to know the expected pulse widths of the circuit to set the glitch width correctly.

Remote command:
TRIGger<t>:GLITch:WIDTh on page 1473

Trigger level
Sets the voltage level for the trigger condition. You can also drag the trigger level marker on the display (TA or TB on the right edge of the display). The range of the trigger level is limited in a way so that always a hysteresis for stable trigger conditions is available.

Remote command:
TRIGger<t>:LEVel<n>[:VALue] on page 1471


6.3.4 Width

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Width"

The width trigger compares the pulse width (duration of a pulse) with a given time limit. It detects pulses with an exact pulse width, pulses shorter or longer than a given time, and pulses inside or outside the allowable time range. The pulse width is measured at the trigger level.

Using the width trigger, you can define the pulse width more precisely than with the glitch trigger. However, using the range settings "Shorter" and "Longer", you can also trigger on glitches.

The width trigger can only analyze **either** positive **or** negative polarity, but searching for a width is also possible for both polarities at the same time ("Either").

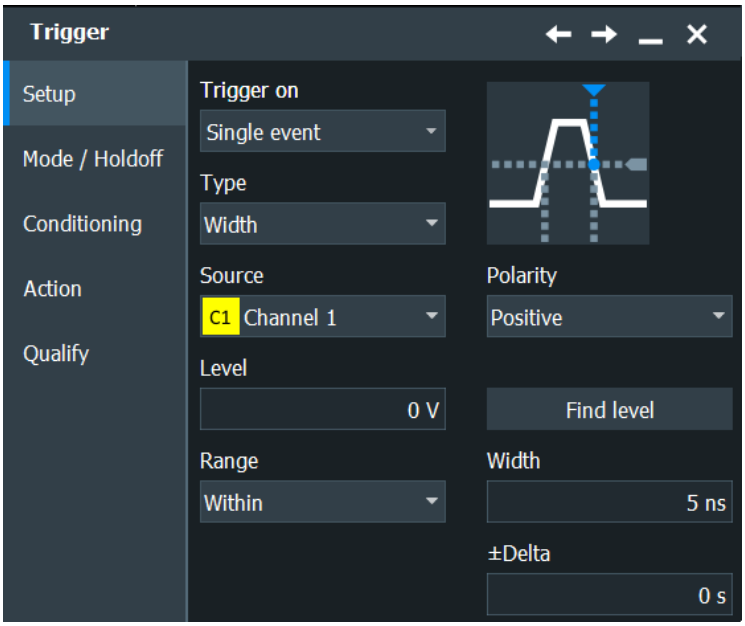

Polarity
Indicates the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Triggers on positive-going pulses.

"Negative" Triggers on negative-going pulses.

Remote command:
TRIGger<t>:WIDTh:POLarity on page 1474

Range
Selects how the range of a pulse width is defined:

"Within" Triggers on pulses inside a given range. The range of the pulse width is defined by "±Delta" related to "Width".

"Outside" Triggers on pulses outside a given range. The range definition is the same as for "Within" range.

"Shorter" Triggers on pulses shorter than the given "Width".

"Longer" Triggers on pulses longer than the given "Width".

Remote command:
TRIGger<t>:WIDTh:RANGe on page 1474

Width
For the ranges "Within" and "Outside", the width defines the center of a range that is defined by the limits ±Delta.

For the ranges "Shorter" and "Longer", the width defines the maximum and minimum pulse width, respectively.

Remote command:
TRIGger<t>:WIDTh:WIDTh on page 1475

±Delta
Defines a range around the given width value.

The combination "Range = Within" and "±Delta" = 0 triggers on pulses with a pulse width that equals "Width".

The combination "Range = Outside" and "±Delta" = 0 means to trigger on pulse widths ≠ "Width".

Trigger level
Sets the voltage level for the trigger condition. You can also drag the trigger level marker on the display (TA or TB on the right edge of the display). The range of the trigger level is limited in a way so that always a hysteresis for stable trigger conditions is available.


Remote command:
TRIGger<t>:LEVel<n>[:VALue] on page 1471

6.3.5 Runt

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Runt"

A runt is a pulse lower than normal in amplitude. The amplitude crosses the first threshold twice in succession without crossing the second one. In addition to the threshold amplitudes, you can define a time limit for the runt in the same way as for width triggers. For example, this trigger can detect logic, digital, and analog signals

remaining below a specified threshold amplitude because I/O ports are in an undefined state.

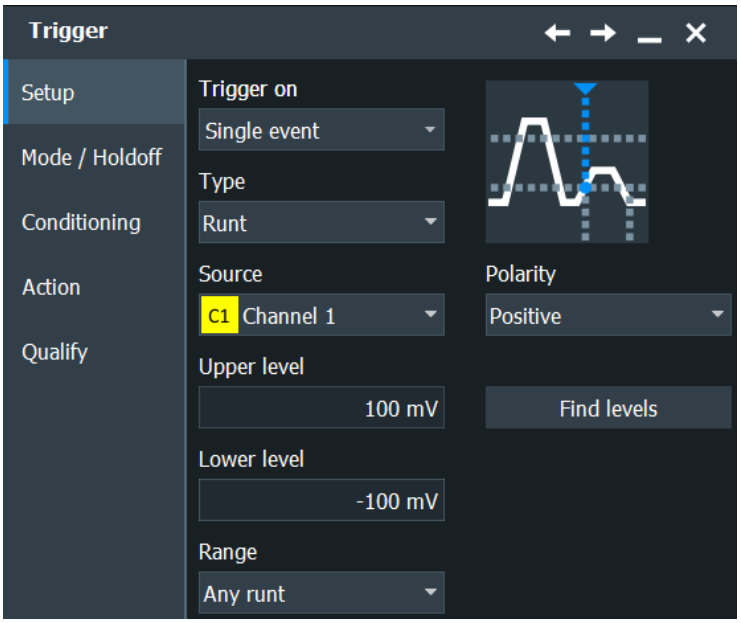

Polarity
Indicates the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Selects positive-going pulses.

"Negative" Selects negative-going pulses.

"Either" Selects both positive-going and negative-going pulses.

Remote command:
`TRIGger<t>:GLITch:POLarity` on page 1472
`TRIGger<t>:RUNT:POLarity` on page 1476

Upper level
Sets the upper voltage threshold.

Remote command:
`TRIGger<t>:LEVel<n>:RUNT:UPPer` on page 1476

Lower level
Sets the lower voltage threshold.

Remote command:
`TRIGger<t>:LEVel<n>:RUNT:LOWer` on page 1476

Range
Selects how the time limit of the runt pulse is defined:

"Any runt" Triggers on all runts fulfilling the level condition, without time limitation.

"Longer" Triggers on runts longer than the given "Runt width".

"Shorter" Triggers on runts shorter than the given "Runt width".

"Within" Triggers if the runt length is inside a given time range. The range is defined by "Runt width" and "±Delta".

"Outside" Triggers if the runt length is outside a given time range. The range definition is the same as for "Within" range.

Remote command:
`TRIGger<t>:RUNT:RANGe` on page 1476

Runt width
For the ranges "Shorter" and "Longer", the runt width defines the maximum and minimum pulse width, respectively.

For the ranges "Within" and "Outside", the runt width defines the center of a range that is defined by "±Delta".

Remote command:
`TRIGger<t>:RUNT:WIDTh` on page 1477

±Delta
Defines a range around the given runt width.


Remote command:
`TRIGger<t>:RUNT:DELTa` on page 1477

6.3.6 Window

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Window"

The window trigger checks the signal run in relation to a "window". The window is formed by the upper and lower voltage levels. The trigger condition is fulfilled if the waveform enters or leaves the window, or if the waveform stays inside or outside for a time longer or shorter than specified.

With the window trigger, you can display longer transient effects.

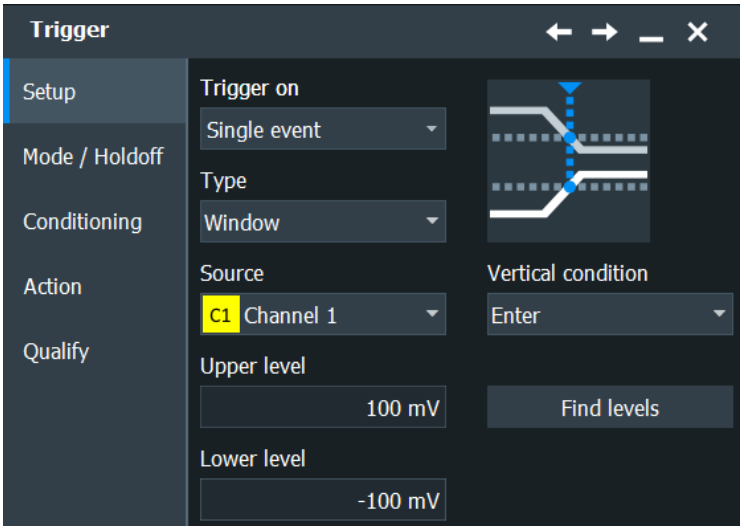

Vertical condition
Selects how the signal run is compared with the window:

"Enter" Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.

"Exit" Triggers when the signal leaves the window.

"Stay within" Triggers if the signal stays between the upper and lower level for a specified time. The time is defined in various ways by the Time condition.

"Stay outside" Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is also defined by the "Time condition".

Remote command:
`TRIGger<t>:WINDow:RANGe` on page 1478

Upper level
Sets the upper voltage limit for the window.

Remote command:
`TRIGger<t>:LEVel<n>:WINDow:UPPer` on page 1478

Lower level
Sets the lower voltage limit for the window.

Remote command:
`TRIGger<t>:LEVel<n>:WINDow:LOWer` on page 1478

Time condition
Selects how the time limit of the window is defined. Time conditioning is available for the vertical conditions "Stay within" and "Stay outside".

"Within" Triggers if the signal stays inside or outside the vertical window limits at least for the time *Width - Delta* and for *Width + Delta* at the most.

"Outside" "Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than *Width - Delta* or longer than *Width + Delta*.

"Shorter" Triggers if the signal crosses vertical limits before the specified "Width" time is reached.

"Longer" Triggers if the signal crosses vertical limits after the specified "Width" time is reached.

Remote command:
`TRIGger<t>:WINDow:TIME` on page 1479

Width
For the ranges "Within" and "Outside", the width defines the center of a time range that is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", it defines the maximum and minimum time lapse, respectively.

Remote command:
TRIGger<t>:WINDow:WIDTh on page 1480


±Delta
Defines a range around the "Width" value.

Remote command:
TRIGger<t>:WINDow:DELTa on page 1480

6.3.7 Timeout

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Timeout"

The timeout trigger checks if the signal stays above or below the threshold voltage for a specified time lapse. In other words, the trigger occurs if the trigger source does not have the expected transition within the specified time.

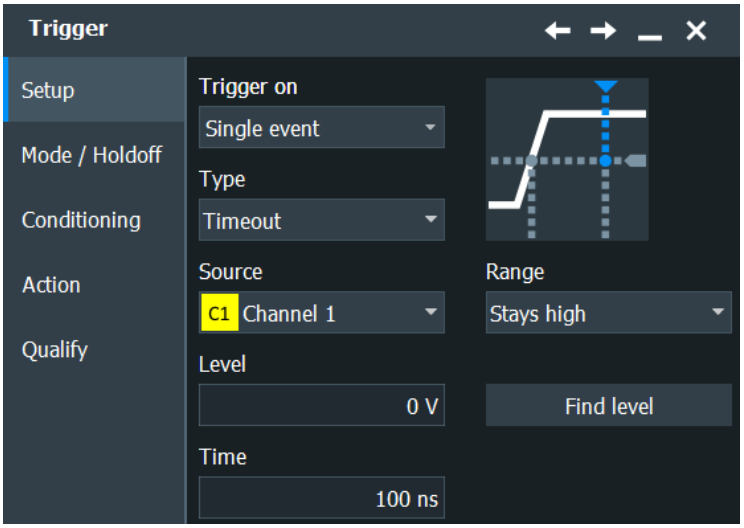

Trigger level
Sets the voltage level for the trigger condition. You can also drag the trigger level marker on the display (TA or TB on the right edge of the display). The range of the trigger level is limited in a way so that always a hysteresis for stable trigger conditions is available.

Remote command:
TRIGger<t>:LEVel<n>[:VALue] on page 1471

Range
Selects the relation of the signal level to the trigger level:

"Stays high" The signal level stays above the trigger level.

"Stays low" The signal level stays below the trigger level.

"High or low" The signal level stays above or below the trigger level.

Remote command:
TRIGger<t>:TIMeout:RANGe on page 1481

Time
Defines the time limit for the timeout at which the instrument triggers.


Remote command:
`TRIGger<t>:TIMeout:TIME` on page 1481

6.3.8 Interval

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Interval"

The interval trigger analyzes the time between two pulses.

The interval trigger can analyze either rising or falling edges, but searching for an interval is also possible for both edges at the same time ("Either").

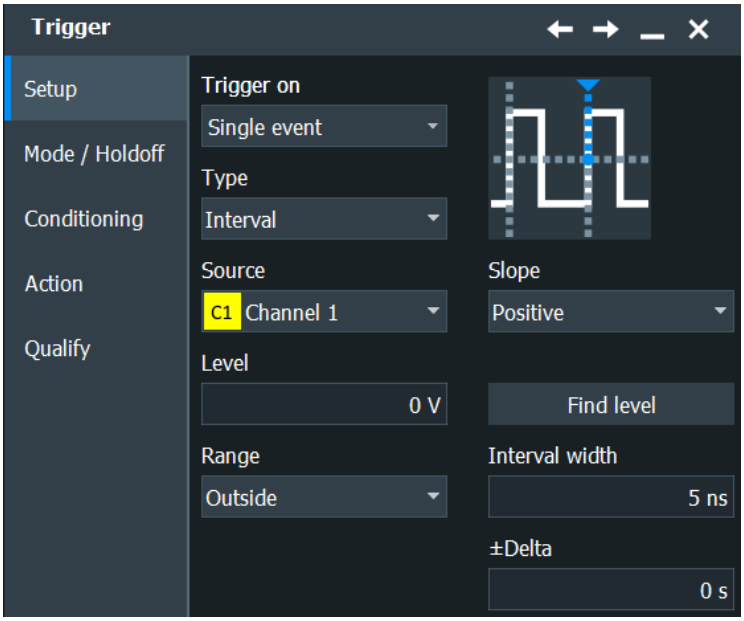

Slope
Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Remote command:
`TRIGger<t>:INTerval:SLOPe` on page 1482

Trigger level
Sets the voltage level for the trigger condition. You can also drag the trigger level marker on the display (TA or TB on the right edge of the display). The range of the trigger level is limited in a way so that always a hysteresis for stable trigger conditions is available.

Remote command:
`TRIGger<t>:LEVel<n>[:VALue]` on page 1471

Range
Selects how the range of an interval is defined:

"Within" Triggers on pulse intervals inside a given range. The range is defined by "Interv. width" and "±Delta".

"Outside" Triggers on intervals outside a given range. The range definition is the same as for "Within" range.

"Shorter" Triggers on intervals shorter than the given "Interv. width".

"Longer" Triggers on intervals longer than the given "Interv. width".

Remote command:
`TRIGger<t>:INTerval:RANGe` on page 1482

Interv. width
Defines the time between two pulses.

Remote command:
`TRIGger<t>:INTerval:WIDTh` on page 1482

±Delta
Defines a range around the "Interval width" value.


Remote command:
`TRIGger<t>:INTerval:DELTa` on page 1483

6.3.9 Slew rate

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Slew rate"

The slew rate trigger is also known as transition trigger. It triggers if the transition time from the lower to higher voltage level (or vice versa) is shorter or longer as defined, or outside or inside a specified time range.

The slew rate trigger finds slew rates faster than expected or permissible to avoid overshooting and other interfering effects. It also detects slow edges violating the timing in pulse series.

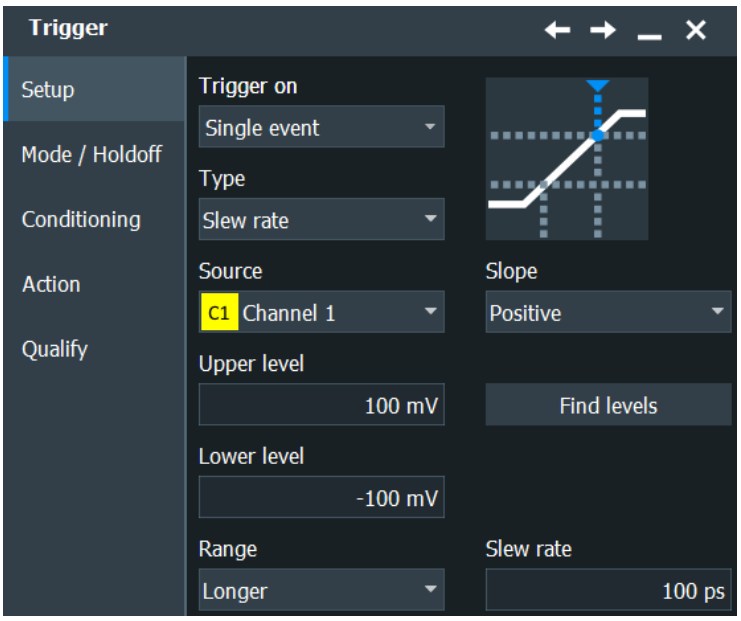

Slope
Sets the edge type for the trigger condition.

"Positive" Selects the rising edge, which is a positive voltage change.

"Negative" Selects the falling edge, which is a negative voltage change.

"Both" Selects the rising as well as the falling edge. This option is not available if the trigger source is the external trigger input.

Remote command:
`TRIGger<t>:EDGE:SLOPe` on page 1472
`TRIGger<t>:ANEDge:SLOPe` on page 1541
`TRIGger<t>:SLEW:SLOPe` on page 1483

Upper level
Sets the upper voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:
`TRIGger<t>:LEVel<n>:SLEW:UPPer` on page 1484

Lower level
Sets the lower voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:
`TRIGger<t>:LEVel<n>:SLEW:LOWer` on page 1484

Range
Selects how the time limit for the slew rate is defined. The time measurement starts when the signal crosses the first trigger level - the upper or lower level depending on the selected slope. The measurement stops when the signal crosses the second level.

"Within" Triggers on slew rates inside a given time range. The range is defined by "Slew rate" and "±Delta".

"Outside" Triggers on slew rates outside a given time range. The range definition is the same as for "Within" range.

"Shorter" Triggers on slew rates shorter than the given "Slew rate" limit.

"Longer" Triggers on slew rates longer than the given "Slew rate" limit.

Remote command:
TRIGger<t>:SLEW:RANGe on page 1484

Slew rate
For the ranges "Within" and "Outside", the slew rate defines the center of a range that is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", the slew rate defines the maximum and minimum slew rate limits, respectively.

Remote command:
TRIGger<t>:SLEW:RATE on page 1485

±Delta
Defines a time range around the given slew rate.

Remote command:
TRIGger<t>:SLEW:DELTa on page 1485


6.3.10 Setup & Hold

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Setup & Hold"

With the Setup & Hold trigger you can analyze the relative timing between two signals: a data signal and the synchronous clock signal. Many systems require that the data signal must be steady for some time before and after the clock edge, for example, the data transmission on parallel interfaces. With this trigger type, you can also test the time correlation of sideband and in-band signals.

In firmware versions < 5.00, the Setup & Hold was called Data2Clock trigger.

The trigger occurs if the data signal crosses the data level during the setup and hold time. The reference point for the time measurement is defined by clock level and clock edge.

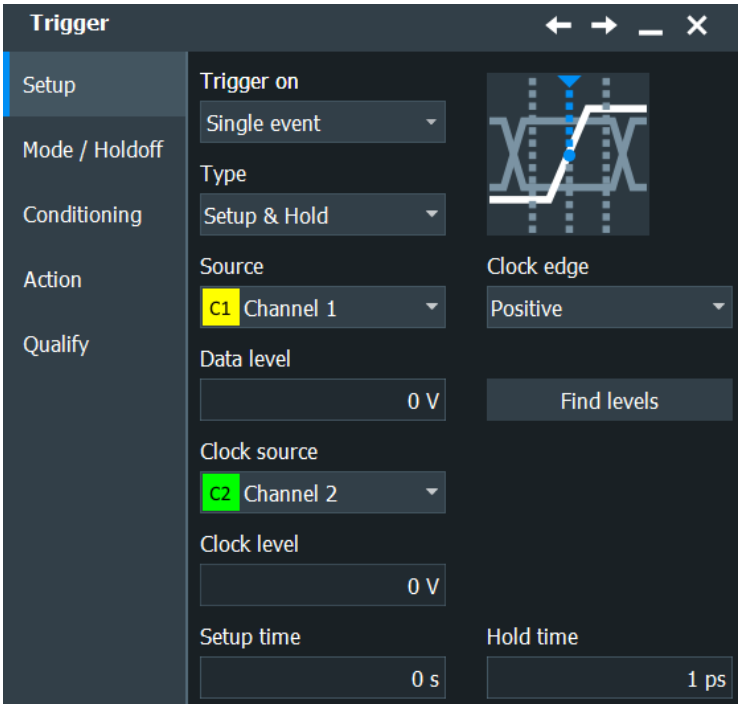

Clock source
Selects the input channel of the clock signal.

Remote command:
`TRIGger<t>:SETHold:CSOurce[:VALue]` on page 1486

Clock edge
Sets the edge of the clock signal to define the time reference point for the setup and hold time:

"Positive" Rising edge, a positive voltage change.

"Negative" Falling edge, a negative voltage change.

"Both" Both the rising and the falling edge.

Remote command:
`TRIGger<t>:SETHold:CSOurce:EDGE` on page 1486

Clock level
Sets the voltage level for the clock signal. Both "Clock level" and "Clock edge" define the starting point for calculation of the setup and hold time.

Remote command:
`TRIGger<t>:SETHold:CSOurce:LEVel` on page 1486

Data level
Sets the voltage level for the data signal. At this level, the setup time and hold time are measured.

Remote command:
`TRIGger<t>:LEVel<n>[:VALue]` on page 1471

Use data level for clock level
Sets the trigger levels and hysteresis values for all channels to the values of the currently selected trigger source. The function affects only the levels defined for the selected condition. The hysteresis of the external trigger input is an independent value, and it is not affected by level coupling.

In trigger sequences, another coupling of trigger levels is possible: "Couple sequence thresholds" on page 243.

Remote command:
`TRIGger<t>:SCOupling` on page 1488

Setup time
Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

The setup time can be negative. In this case, the hold time is always positive. If you set a negative setup time, the hold time is adjusted by the instrument.

Remote command:
`TRIGger<t>:SETHold:STIMe` on page 1487


Hold time
Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.

The hold time can be negative. In this case, the setup time is always positive. If you set a negative hold time, the setup time is adjusted by the instrument.

Remote command:
`TRIGger<t>:SETHold:HTIMe` on page 1487

6.3.11 State

The state trigger is a qualified edge trigger. It combines the edge trigger settings with trigger qualification.

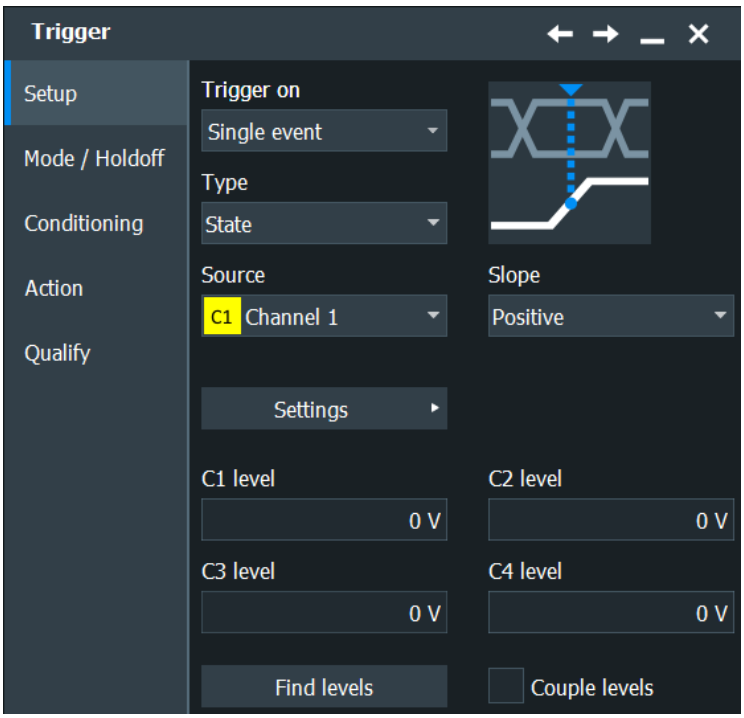

The individual settings are:


- "Slope" on page 205
- "Pattern" on page 220
- "Trigger Levels" on page 221
- "Find level" on page 205
- "Use data level for clock level" on page 218

6.3.12 Pattern


Access: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern"

The pattern trigger is a logic trigger. It provides a logical combination of the input channels and supports you in verifying the operation of digital logic. In addition to the pattern and the trigger levels, you can define a timing condition.

The setup of the pattern trigger is similar to trigger qualification. The complete settings for the pattern trigger are provided in the "Qualify" tab.

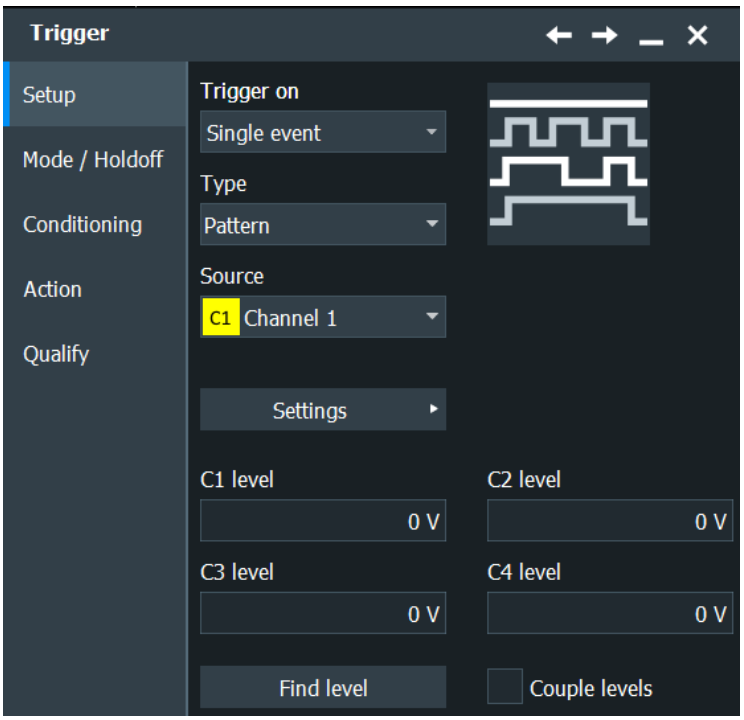

Pattern
The pattern contains the channel selection, and the logical operations structure of hardware-based Boolean logic.

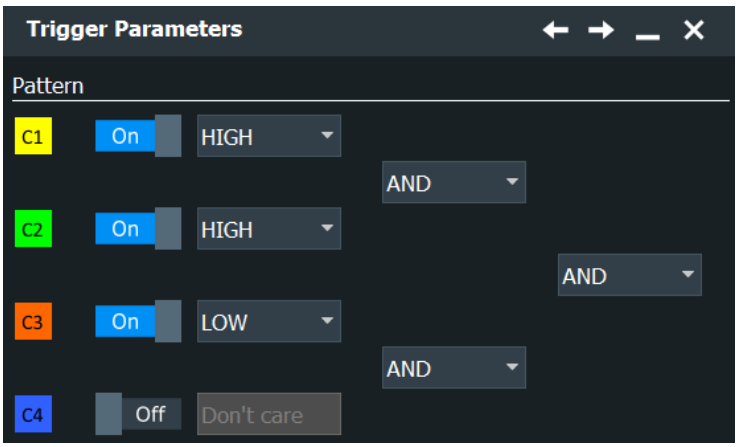

Channel "On", "Off"	Select the channels to be considered. For qualification, you can select all channel signals except for the trigger source. In pattern trigger setup, the trigger source channel is selected by default, and you can select all other channel signals.
Channel operators	Defines the logical operation on the digital signal resulting from the comparison with the trigger level. ● "HIGH": leaves the input value unchanged ● "LOW": inverts the input value

Logic operators — Defines the logic combination of two sources. The sources are channel 1/2 and channel 3/4 on the first step, and in the second step the logical combination resulting from the first step.

- "AND": logical AND, conjunctive combination
- "NAND": logical NOT AND
- "OR": logical OR, disjunctive combination
- "NOR": logical NOT OR

Remote command:
Select channels:
`TRIGger<t>:QUALify<n>:A[:ENABle]` on page 1521
`TRIGger<t>:QUALify<n>:B[:ENABle]` on page 1521
`TRIGger<t>:QUALify<n>:C[:ENABle]` on page 1521
`TRIGger<t>:QUALify<n>:D[:ENABle]` on page 1521
Channel operators:
`TRIGger<t>:QUALify<n>:A:LOGic` on page 1522
`TRIGger<t>:QUALify<n>:B:LOGic` on page 1522
`TRIGger<t>:QUALify<n>:C:LOGic` on page 1522
`TRIGger<t>:QUALify<n>:D:LOGic` on page 1522
Logic operators:
`TRIGger<t>:QUALify<n>:AB:LOGic` on page 1522
`TRIGger<t>:QUALify<n>:CD:LOGic` on page 1522
`TRIGger<t>:QUALify<n>:ABCD:LOGic` on page 1522

Trigger Levels
Define the trigger level for each input channel. For state and pattern trigger, the trigger level is a decision threshold: If the signal value is higher than the trigger level, the signal state is high (1 or true for the Boolean logic). Otherwise, the signal state is considered low (0 or false) if the signal value is below the trigger level.

These trigger levels are also used in qualification setup.

You can set the trigger levels for all channels to the same value, see "Use data level for clock level" on page 218.

Additional settings: Timing
"Timing" adds time limitation to the pattern condition.

You find this setting in the "Qualify" tab, "Set timing".

"Off" — No time limitation. The trigger occurs if the pattern condition is fulfilled.

"Timeout" — Defines how long the result of the pattern condition must be true or false.

"Width" — Defines a time range for keeping up the true result of the pattern condition. The range is defined in the same way as for width and interval triggers, see "Range" on page 208.

Remote command:
`TRIGger<t>:PATTern:MODE` on page 1489
`TRIGger<t>:PATTern:TIMeout:MODE` on page 1489
`TRIGger<t>:PATTern:TIMeout[:TIME]` on page 1490

TRIGger<t>:PATTern:WIDTh:DELTa on page 1491
TRIGger<t>:PATTern:WIDTh:RANGe on page 1490
TRIGger<t>:PATTern:WIDTh[:WIDTh] on page 1491

6.3.13 Serial pattern

Serial pattern is available, if option R&S RTP-K140/K141 is installed.

See Section 6.10, "High speed serial pattern trigger (option R&S RTP-K140/K141)", on page 247.

6.3.14 TV/Video trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = TV"

The TV or video trigger is used to analyze analog baseband video signals. You can trigger on baseband video signals from standard definition and high definition standards, and also on user-defined signals.

The instrument triggers on the line start - the horizontal sync pulse. You can trigger on all lines, or specify a line number. You can also trigger on the field or frame start.

Also, a delay can be set: Set the "Holdoff events" in the "Mode / Holdoff" tab to the number of fields to be skipped.

For details on holdoff settings, see Section 6.4, "Mode / Holdoff", on page 231.

Make sure that the trigger level crosses the synchronizing pulses of the video signal, see "Trigger level" on page 224.



Most video signals have an output impedance of 75 Ω. The channel inputs of the R&S RTP have an input impedance of 50 Ω. Make sure to provide the adequate matching to ensure amplitude fidelity. Using the R&S RT-Z1M adapter and a simple 75 Ω feed-through termination is suitable for most applications.

Once the trigger is set correctly, you can use the cursor and automatic measurements.

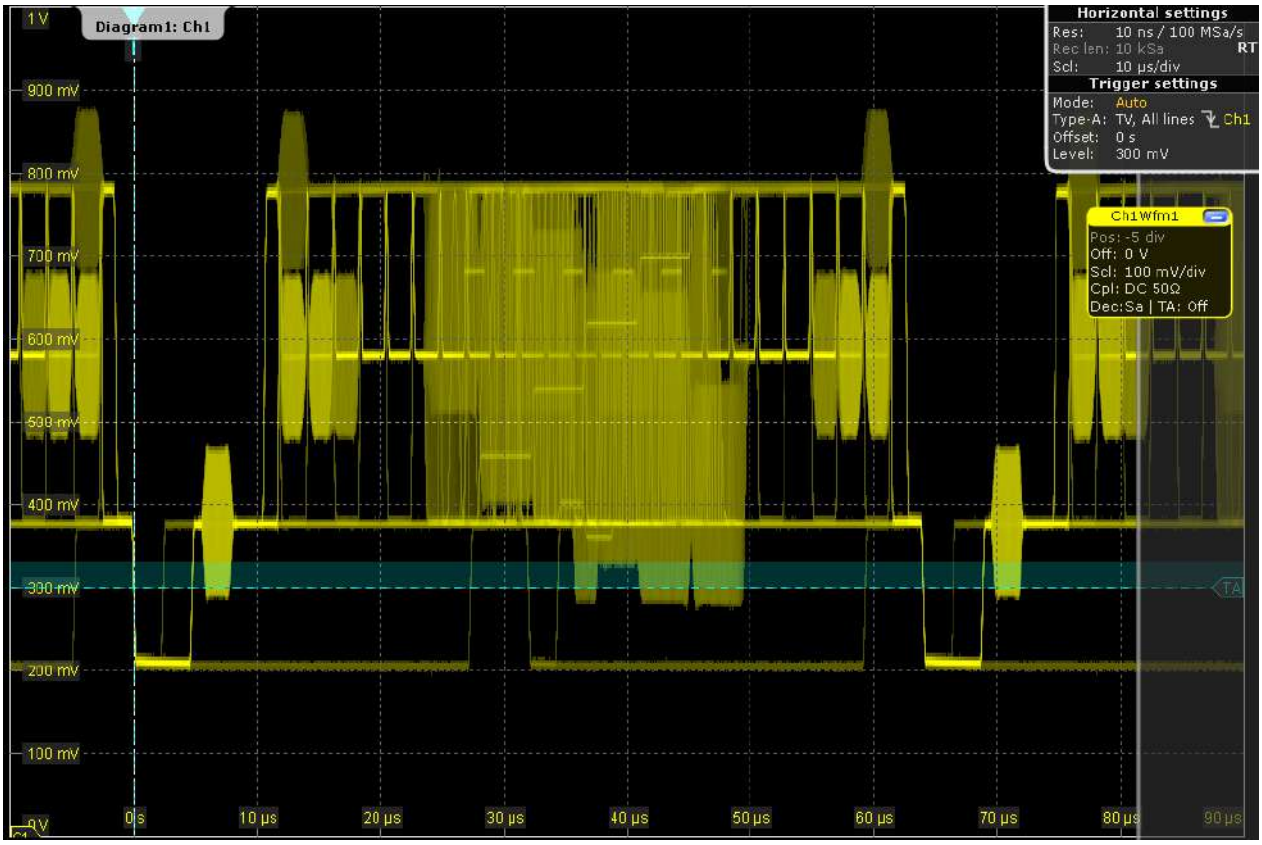


Figure 6-1: Trigger on all lines of a PAL signal with positive signal polarity, trigger level = 300 mV

Standard
Selects the TV standard or "Custom" for user-defined signals.

HDTV standards are indicated by the number of active lines, the scanning system (p for progressive scanning, i for interlaced scanning) and the frame rate. For interlaced scanning, the field rate is used instead of the frame rate. 1080p/24sF is an HDTV standard using progressive segmented frame scanning.

"Custom" can be used for signals of other video systems, for example, medical displays, video monitors, and security cameras. To trigger on these signals, you have to define the pulse type and length of the sync pulse, the scanning system and the line period.

Remote command:
`TRIGger<t>:TV:STANdard` on page 1515

Mode
Selects the lines or fields on which the instrument triggers. Available modes depend on the scanning system of the selected standard.

"All fields"	Triggers on the first video line of the frame (progressive scanning) or field (interlaced scanning), for example, to find amplitude differences between the fields.
"Odd fields / Even fields"	Triggers on the first video line of the odd or even field. These modes are available for interlaced scanning (PAL, PAL-M, SECAM, NTSC, 1080i) and progressive segmented frame scanning (1080p/24sF). They can be used, for example, to analyze the components of a video signal.
"All lines"	Triggers on the line start of all video lines, for example, to find maximum video levels.
"Line number"	Triggers on a specified line. Enter the line number in "Line #".

Remote command:
`TRIGger<t>:TV:MODE` on page 1515


Line #
Sets the number of the line to be triggered on if "Mode" is set to "Line number". Usually the lines of the frame are counted, beginning from the frame start.

For NTSC signals, the lines are counted per field, not per frame. Therefore, you have to set the "Field" (odd or even), and the line number in the field.

Remote command:
`TRIGger<t>:TV:LINE` on page 1516
`TRIGger<t>:TV:LFIeld` on page 1517

Trigger level
Sets the trigger level as the threshold for the sync pulse. Make sure that the trigger level crosses the synchronizing pulses of the video signal.

The hysteresis is set according to the settings in the "Noise Reject" tab.

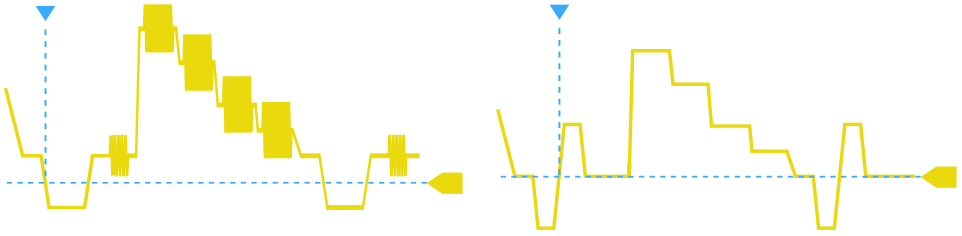

Remote command:
`TRIGger<t>:LEVel<n>[:VALue]` on page 1471

Signal polarity
Sets the polarity of the signal. Note that the sync pulse has the opposite polarity, for example, a positive signal has a negative sync pulse.

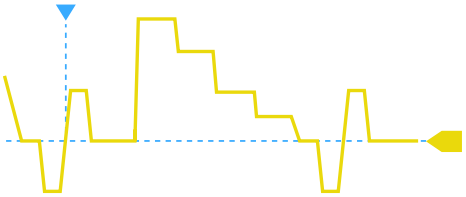


Figure 6-2: Signal with positive polarity and tri-level sync pulse

Remote command:
`TRIGger<t>:TV:POLarity` on page 1516

Pulse type
Sets the type of the sync pulse, either bi-level sync pulse (used in SDTV signals), or tri-level sync pulse (used in HDTV signals).


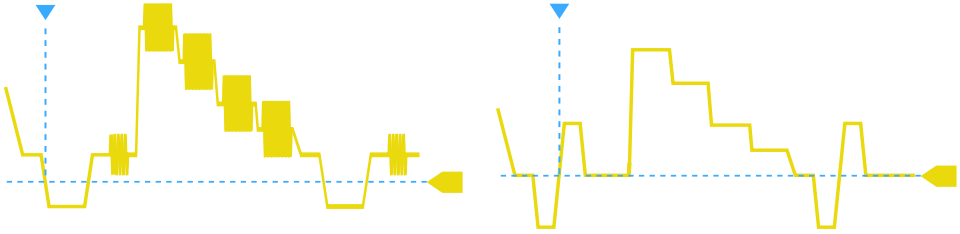


Figure 6-3: Bi-level (left) and tri-level (right) sync pulses

This setting is available for user-defined video signals if "Standard" is set to "Custom".

Remote command:
`TRIGger<t>:TV:CUSTom:STYPe` on page 1518


Line period
Sets the duration of a single video line, the time between two successive sync pulses.

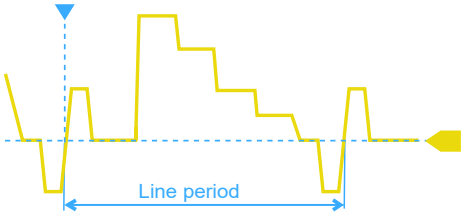

This setting is available for user-defined video signals if "Standard" is set to "Custom".

Remote command:
`TRIGger<t>:TV:CUSTom:LDURation` on page 1518

Pulse width
Sets the width of the sync pulse.

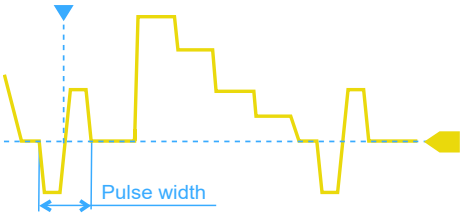

This setting is available for user-defined video signals if "Standard" is set to "Custom".

Remote command:
`TRIGger<t>:TV:CUSTom:SDURation` on page 1519

Scan
Sets the scanning system.

This setting is available for user-defined video signals if "Standard" is set to "Custom".

"Interlaced" Interlace scanning uses two fields to create a frame. One field contains all the odd lines (odd, first, or upper field), the other contains all the even lines of the image (even, second, or lower field). First the lines of the odd field are processed, then the lines of the even field.

"Progressive" Progressive scanning is a method to capture, transmit and display all lines of a frame in sequence.

"Segmented" Progressive segmented frame uses progressive scanning to capture the frame, and interlaced scanning for transmission and display.

Remote command:
`TRIGger<t>:TV:CUSTom:SCANmode` on page 1518

6.3.15 Line trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Source = Line"

The line trigger triggers on the AC power input and synchronizes the signal to the AC power frequency. It is not a trigger type but rather a special trigger source. Use the line source if you want to analyze signals related to the power line frequency, such as lighting equipment and power supply devices.

Slope
Selects the rising or falling edges of the AC power input for the trigger condition.


Remote command:
`TRIGger<t>:POWerline:SLOPe` on page 1519


6.3.16 Hardware CDR trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = CDR" > "Hardware CDR".

The clock data recovery (CDR) trigger triggers on the edges of a clock edge stream that is recovered from a data signal (source) using the hardware CDR.

Hardware CDR is a continuous process, the recovered clock is always synchronized. HW CDR is the best way to analyze the jitter and eyes of continuous signals, and of buses that use Spread Spectrum Clocking. The complete data can be used, there is no synchronization time needed as with SW CDR, and no data must be discarded. Even short acquisitions are usable with HW CDR. For burst signals, HW CDR can be used for decoding, but it is inapplicable for eye and jitter measurement.

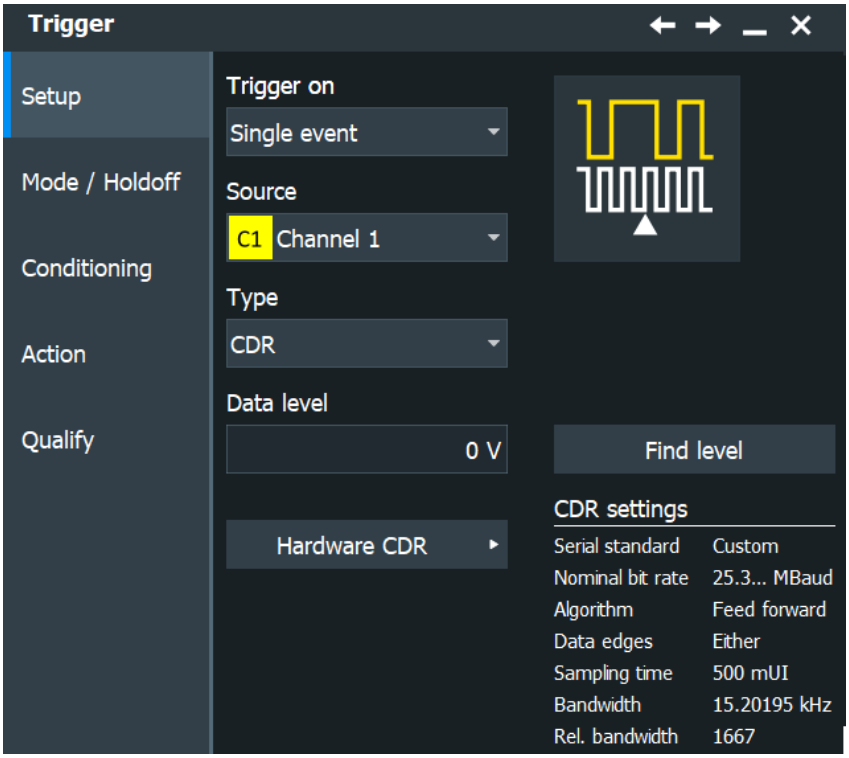

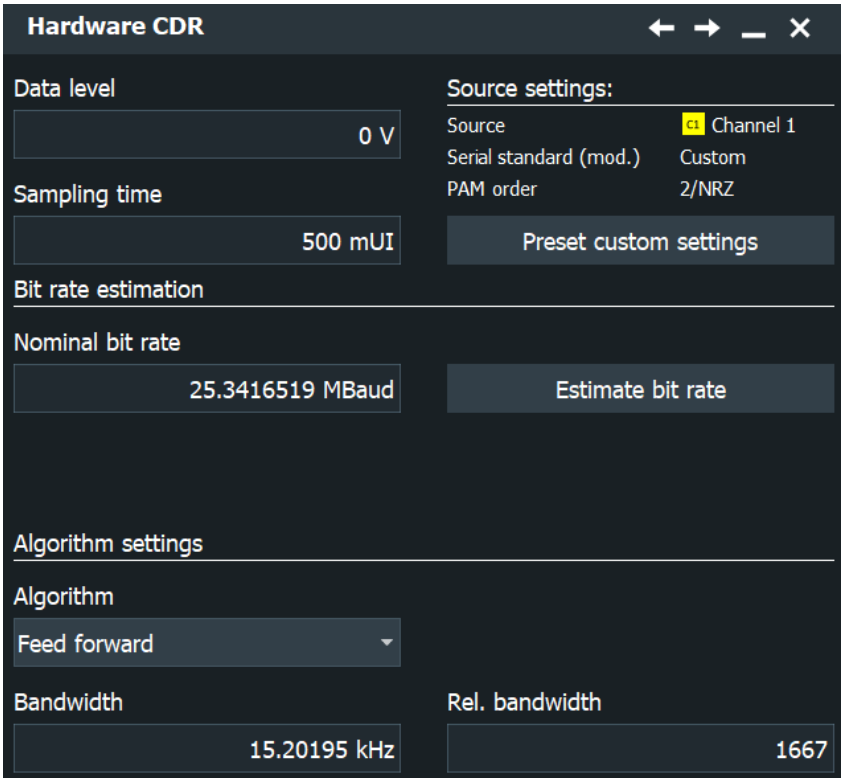
Hardware CDR
Data level
0 V
Sampling time
500 mUI
Source settings:
Source
C1 Channel 1
Serial standard (mod.)
Custom
PAM order
2/NRZ
Preset custom settings
Bit rate estimation
Nominal bit rate
25.3416519 MBaud
Estimate bit rate
Algorithm settings
Algorithm
Feed forward
Bandwidth
15.20195 kHz
Rel. bandwidth
1667

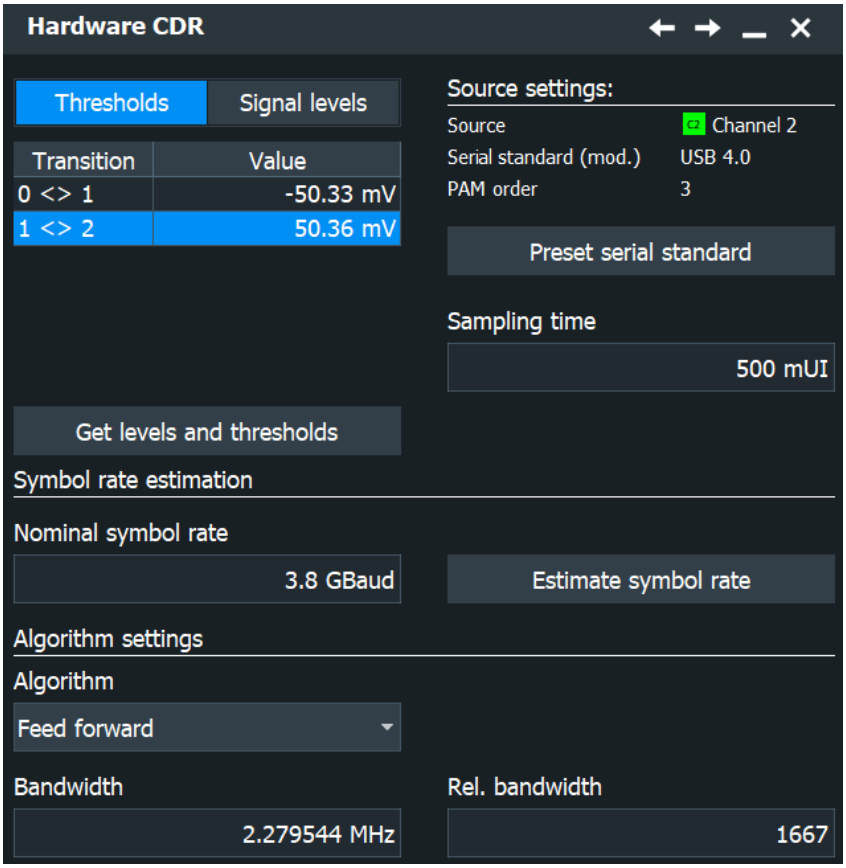


Figure 6-4: Hardware CDR for PAM-N signals (option R&S RTP-K135)

Source
Displays the channel signal that is used for clock recovery.

The source cannot be changed if the CDR trigger is selected in the trigger setup. In this case, the instrument triggers on the recovered clock; trigger source and CDR source are the same.

Remote command:
`TRIGger<t>:CDR:EYE:SOURce?` on page 1513

Data level
Sets the edge detection threshold for hardware CDR. The threshold is linked to the trigger level of the CDR source.

Only available for NRZ signals, see Technology, Serial standard.

Sampling time
Sets the normalized offset of the clock edge within a CDR period.

Remote command:
`TRIGger<t>:CDR:EYE:SAMTime` on page 1513

Serial standard
Displays the currently selected source settings.

You can set this up additionally to the "Serial standard" and the "PAM order" in the "Menu" > "Apps" > "Analysis" > "Signal Configuration" dialog.

Preset serial standard
Sets the settings of the hardware CDR to the serial standard that is selected for the source.

You can set the standard in the "Menu" > "Apps" > "Analysis" > "Signal Configuration" dialog, see Section 13, "Signal configuration", on page 535.

Remote command:
`CDR:HARDware:PRSStandard` on page 1511

Thresholds, Signal levels
For PAM signals of order >2, you can set the thresholds or signals levels to be used for clock recovery on each level transition.

Select "Thresholds" or "Signal levels".

You can set the values manually, or use "Get levels and thresholds" to retrieve calculated values.

Remote command:
`TRIGger<t>:CDR:EYE:SIGNallevel<n>` on page 1514
`TRIGger<t>:CDR:EYE:THReshold<n>` on page 1514

Bit rate estimation, Symbol rate estimation
Bit rate estimation analyzes the source signal based on the given "Nominal bit rate" and corrects the value. If the source is a PAM signal, the symbol rate is used.

"Nominal bit rate"	Sets the frequency of the feed forward CDR. It corresponds to the data rate of the data stream from which the clock is to be recovered.
"Nominal symbol rate"	Sets the symbol rate of the PAM signal.
"Estimate bit rate", "Estimate symbol rate"	Estimates the bit rate or symbol rate once, for the current acquisition.

Remote command:
`TRIGger<t>:CDR:EYE:SREStimate[:RUN]` on page 1512

Algorithm
Sets the software algorithm that is used for the hardware clock data recovery.

"Constant frequency"
CDR uses the "Nominal bit rate" to generate the clock signal. The method assumes that the frequency of the signal is constant during the complete acquisition.

"Feed forward"
The feed-forward algorithm is a mathematical optimization method used for clock data recovery. To set up the algorithm, set the bandwidth and the relative bandwidth.

Remote command:
TRIGger<t>:CDR:EYE:ALGorithm on page 1512

Algorithm settings
Define the bandwidth settings for "Algorithm" = "Feed forward".

"Bandwidth" Sets the bandwidth for the feed-forward algorithm. It defines the part of the spectrum that the feed forward can follow during synchronization. The bandwidth is usually defined by the serial standard.

"Rel. bandwidth" Sets the relative bandwidth, which is the ratio of the nominal bit rate to the PLL bandwidth (NBR/BW).

Remote command:
TRIGger<t>:CDR:EYE:BWIDth on page 1512
TRIGger<t>:CDR:EYE:RELBwidth on page 1513

6.3.17 Triggering on serial buses

Protocol analysis including configuration, triggering, and decoding is described in Section 14, "Protocol analysis", on page 555.

For information on triggering on serial buses, see the "Trigger" section of the relevant protocol.

6.3.18 Triggering on parallel buses and digital channels


Triggering on digital signals requires the mixed signal option. The option is described in Section 15, "Mixed signal option (MSO, R&S RTP-B1)", on page 1013.

For information on triggering, see Section 15.3.1, "Trigger settings for digital signals and parallel buses", on page 1025.

6.4 Mode / Holdoff

Access: "Trigger" menu > "Mode / Holdoff" tab

Holdoff conditions define a waiting time after the current trigger until the next trigger can be recognized.

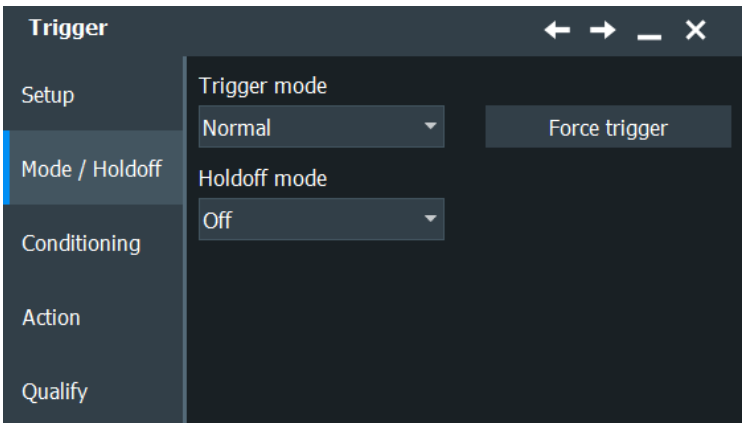

[Run / Stop]/[Single]
Front panel keys to start and stop a continuous acquisition or a defined number of acquisition cycles, respectively. The number of acquisitions is set with "Average count".

Remote command:
`RUN` on page 1395
`SINGle` on page 1395
`STOP` on page 1395

Trigger mode
Sets the trigger mode which determines the behavior of the instrument if no trigger occurs. The current setting is shown on the trigger label on top of the signal bar.

To toggle quickly between "Auto" and "Normal" mode, use the [Auto Norm] key on the front panel (in "Trigger" section).

"Auto" The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. This mode helps to see the waveform even before the trigger conditions are set correctly. The waveform on the screen is not synchronized, and successive waveforms are not triggered at the same point of the waveform. The time interval depends on the timebase settings.

"Normal" The instrument acquires a waveform only if a trigger occurs, that is, if all trigger conditions are fulfilled. If no trigger occurs, no waveform is acquired and the last acquired waveform is displayed. If no waveform was captured before, none is displayed.
When no trigger has been found for longer than one second, a message box appears that shows the time elapsed since the last trigger.

"Free run" The instrument starts acquisition immediately and triggers after a short time interval independent of the timebase settings and faster than in "Auto" mode. Real triggers are ignored. Use this mode if the "Auto" mode is too slow.

Remote command:
`TRIGger<t>:MODE` on page 1534

Force Trigger
If the acquisition is running in normal mode and no valid trigger occurs, forcing the trigger provokes an immediate single acquisition. Thus you can confirm that a signal is available and use the waveform display to determine how to trigger on it.

If you need this function frequently, you can add the "Force Trigger" icon to the toolbar.

Remote command:
`TRIGger<t>:FORCe` on page 1534

Holdoff mode
Selects the method to define the holdoff condition.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.

Holdoff settings are not available at the following conditions:
- The trigger source is an external trigger input.
- The trigger source is a serial bus.
- The trigger type is serial pattern or CDR.

Example:

You want to analyze the first pulse in a burst of several pulses. At first, you select a sufficiently slow timebase to display the entire burst. Then, you set the holdoff time a little longer than the length of the burst. Now, each trigger corresponds to the first pulse in successive bursts, and you can change the timebase to display the waveform in more detail.

The following methods are available:

"Time"	Defines the holdoff directly as a time period. The next trigger occurs only after the "Holdoff time" has passed.
"Events"	Defines the holdoff as a number of trigger events. The next trigger only occurs when this number of events is reached. The number of triggers to be skipped is defined in "Holdoff events".
"Random"	Defines the holdoff as a random time limited by "Minimum time" and "Maximum time". For each acquisition period, the instrument selects a new random holdoff time from the specified range. Random holdoff prevents synchronization to discover effects invisible with synchronized triggering, for example, the features of a pulse train.
"Auto"	The holdoff time is calculated automatically based on the current horizontal scale. "Auto time scaling" defines the factor that the horizontal scale is multiplied with. "Auto time" shows the resulting holdoff time: *Auto time = Auto time scaling * Horizontal scale*.
"Off"	No holdoff


For the TV trigger, only the "Events" mode is useful.

Remote command:
TRIGger<t>:HOLDoff:MODE on page 1523
TRIGger<t>:HOLDoff:TIME on page 1524
TRIGger<t>:HOLDoff:EVENts on page 1525
TRIGger<t>:HOLDoff:MAX on page 1526
TRIGger<t>:HOLDoff:MIN on page 1525
TRIGger<t>:HOLDoff:AUTotime? on page 1526
TRIGger<t>:HOLDoff:SCALing on page 1527

6.5 Conditioning

The rejection of noise by setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

You can select the hysteresis mode and value for each channel separately, or couple the trigger levels and set the same hysteresis for channels. The hysteresis of the external trigger input is an independent value, and it is not affected by level coupling.

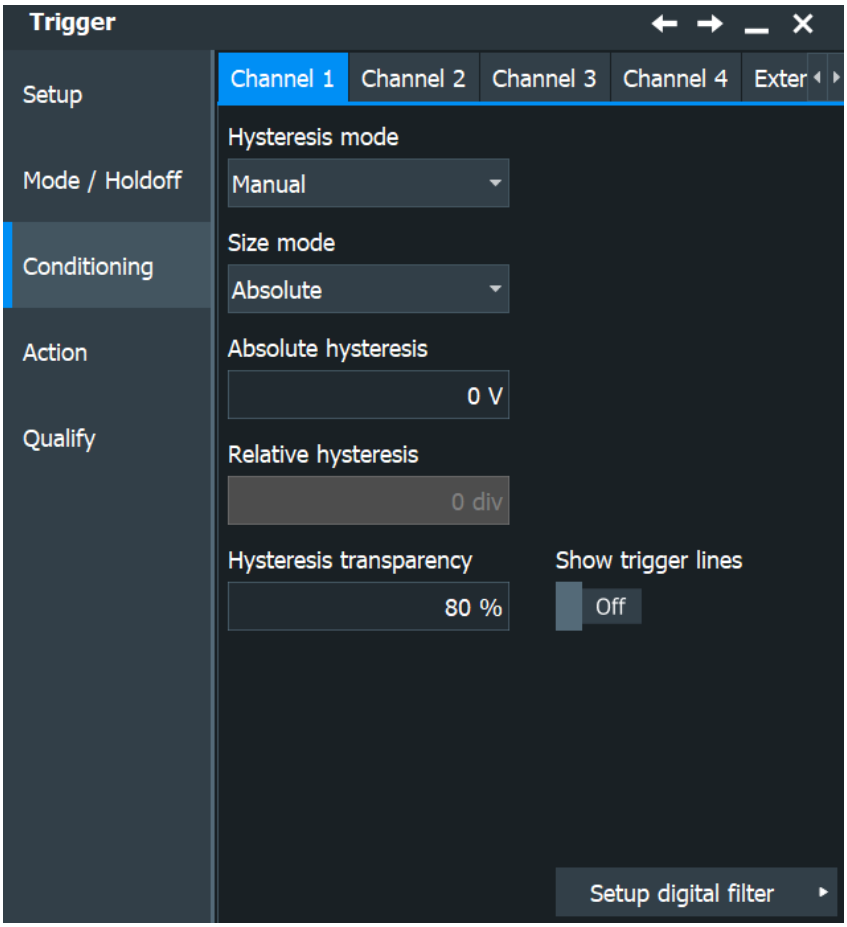

Hysteresis mode
Selects how the hysteresis is set.

"Auto" Automatic hysteresis is the recommended mode. The hysteresis is set by the instrument to reject the internal noise of the instrument.

"Manual" The hysteresis is defined directly in absolute or relative values.

Remote command:
`TRIGger<t>:LEVel<n>:NOISe[:STATe]` on page 1527

Size mode
Selects whether the hysteresis is defined in absolute or relative values. The setting is available only in manual hysteresis mode.

Remote command:
`TRIGger<t>:LEVel<n>:NOISe:MODE` on page 1528

Absolute hysteresis
Defines a range in absolute values around the trigger level. If the signal jitters inside this range and crosses the trigger level, no trigger event occurs.

Remote command:
`TRIGger<t>:LEVel<n>:NOISe:ABSolute` on page 1528

Relative hysteresis
Defines a range in divisions around the trigger level. If the signal oscillates inside this range and crosses the trigger level, no trigger event occurs.

Remote command:
`TRIGger<t>:LEVel<n>:NOISe:PERDivision` on page 1529
`TRIGger<t>:LEVel<n>:NOISe:RELative` on page 1529

Hysteresis
Displays the automatic hysteresis value for "Hysteresis mode" = "Auto".

Show trigger lines
Displays the trigger levels and the hysteresis in the diagrams until you disable this option.

Remote command:
`DISPlay:TRIGger:LINes` on page 1472

Hysteresis transparency
Defines the transparency of the hysteresis area above or below the trigger level.

Only visible if Show trigger lines is enabled.

Noise reject (Extern)
Enables the noise reject for the external trigger signal. Hysteresis settings are not available for this trigger source.


Remote command:
`TRIGger<t>:ANEDge:NREJect` on page 1530

6.6 Actions on trigger

Access: "Menu" > "Trigger" > "Action" tab

The action settings define what happens when a trigger occurs. All available actions can be initiated at the same time.

The R&S RTP can provide an external trigger signal to synchronize the measurements of other instruments. The trigger out signal is also adjusted and enabled in the "Action" tab.

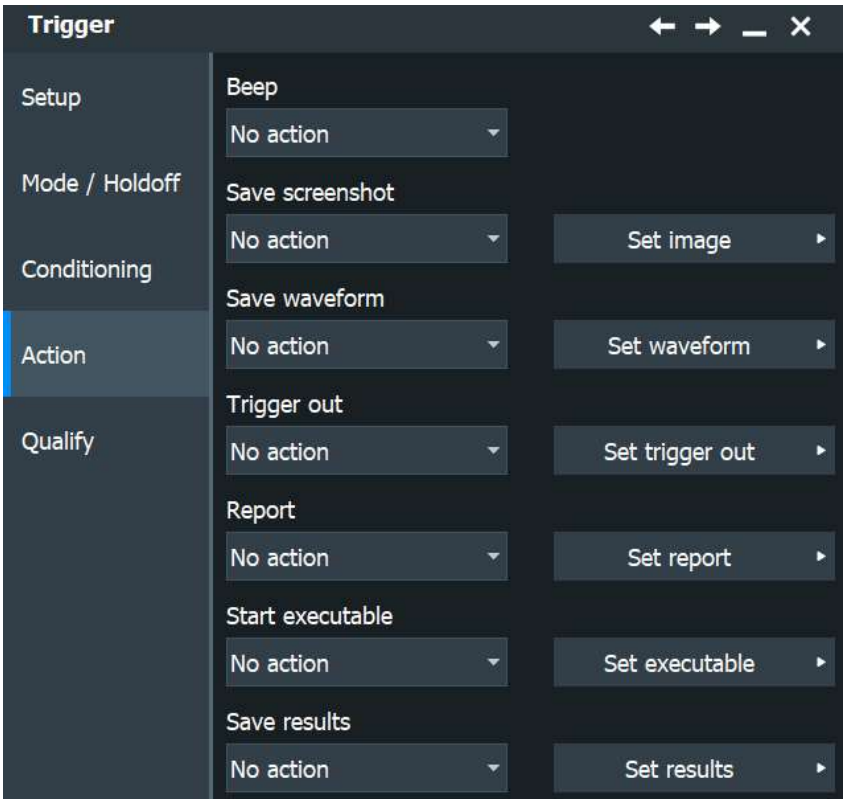

Actions on trigger
The trigger can initiate several actions, each time a trigger occurs. To activate an action, set it to "On trigger". The following actions are available:

"Beep"	Generates a beep sound.
"Save screen-shot"	Saves a screenshot according to settings in "Menu" > "Save/Recall" > "Save" tab > "Screenshot".
"Save Wave-form"	Saves the waveform data to a file according to settings in "Menu" > "Save/Recall" > "Save" tab > "Waveforms".
"Trigger out"	Selects, if a pulse is provided to the [Trigger Out] connector on the rear panel. Adjust the pulse with "Set trigger out", see "Trigger out signal setup" on page 237.
"Report"	Creates and saves a report using the settings defined in "Menu" key > "Save/Recall" key > "Save" tab > "Report".


"Start executable" Starts an external application. Tap "Set executable" to set the application path and parameters.
See: Section 4.8.3, "External application", on page 111.

"Save results" Starts the export of selected results to file. Tap "Select results" to choose the results for export from a list of available results. The R&S RTP can export cursor results, measurement results, mask test results, search results, decode results of serial protocols, advanced jitter/noise results.
See Section 12.3.4, "Results", on page 514 for measurement selection and settings.

Remote command:
`TRIGger<t>:EVENt:BEEP` on page 1536
`TRIGger<t>:EVENt:PRINt` on page 1536
`TRIGger<t>:EVENt:WFMSave` on page 1537
`TRIGger<t>:EVENt:RUNexec` on page 1536
`TRIGger<t>:EVENt:TRIGgerout` on page 1537
`TRIGger<t>:EVENt:RESSave` on page 1537

Trigger out signal setup
Defines the pulse that is provided to the [Trigger Out] connector on the rear panel.

A trigger out pulse can be provided either when a trigger occurs, or when a mask test violation occurs, or when a limit check violation in a measurement occurs.

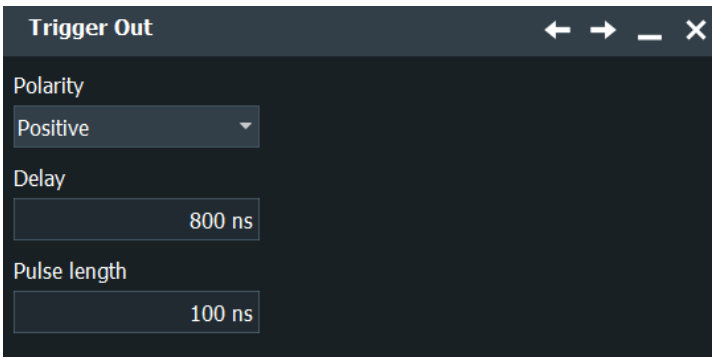

"Polarity" Sets the polarity of the trigger out pulse, which is the direction of the first pulse edge.


"Delay" Only available if "Trigger out" is set to "On trigger". The setting defines the delay of the first pulse edge to the trigger point. The minimum delay is 800 ns.

"Pulse length" Sets the length of the trigger out pulse.

Remote command:
`TRIGger<t>:OUT:POLarity` on page 1534
`TRIGger<t>:OUT:PLENgth` on page 1535
`TRIGger<t>:OUT:DELay` on page 1535

6.7 Qualification

Access: "Menu" > "Trigger" > "Qualify" tab

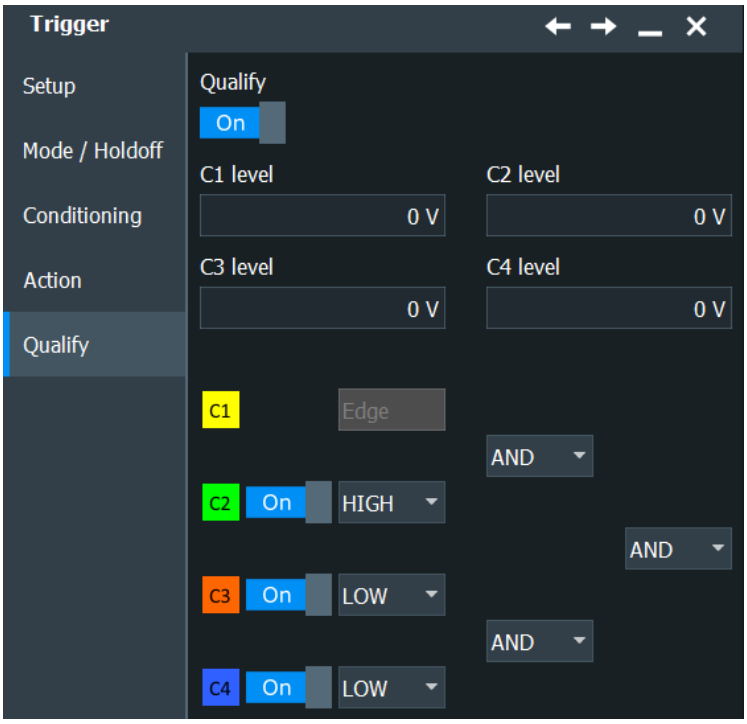

By qualifying a trigger event, you can logically combine the trigger signal with the state of other analog channel signals.

The instrument triggers if both of the following apply:

- The basic conditions of the trigger event definition are fulfilled.
- The logical conditions of the trigger qualification are true.

Qualification is only available for the A-event.

Qualification is not supported if:

- The trigger source is "Extern".
- One of the following trigger types is selected: slew rate, Setup & Hold, serial pattern, TV, and NFC.

► To enable the qualification settings, select Qualify.

Example: Trigger on write access of a specific device of a bus system

In circuits using SPI, several secondary devices use the same lines for reading and writing data, and each secondary device has its own select line. To trigger on write access of specific secondary device, the write line is the trigger source and the select line of the secondary device is set as qualifying condition.

Qualify
Enables the settings for trigger qualification that are defined in the "Qualification" tab. Qualification adds additional trigger conditions considering the logic states of other digital channel signals.


The checkmark is only active if at least one qualification channel is selected.

Qualification is available for many trigger types: Edge, glitch, width, runt, window, timeout, and interval.

Qualification is not possible for the R-event.

See also: Section 6.7, "Qualification", on page 238.

Pattern
The pattern contains the channel selection, and the logical operations structure of hardware-based Boolean logic.

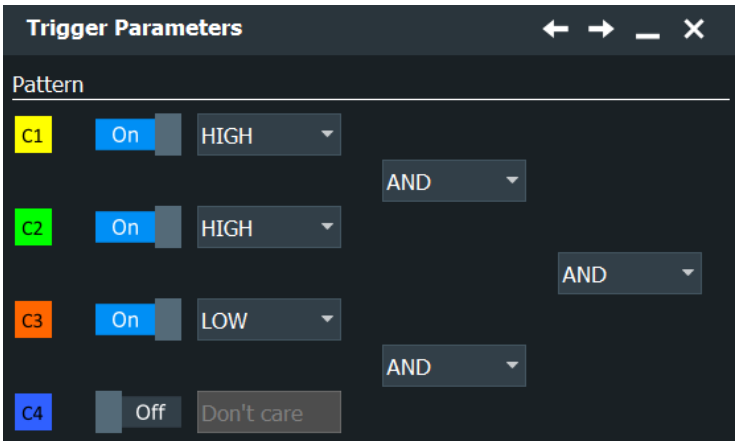

Channel "On", "Off"
Select the channels to be considered. For qualification, you can select all channel signals except for the trigger source. In pattern trigger setup, the trigger source channel is selected by default, and you can select all other channel signals.

Channel operators
Defines the logical operation on the digital signal resulting from the comparison with the trigger level.

- "HIGH": leaves the input value unchanged
- "LOW": inverts the input value

Logic operators
Defines the logic combination of two sources. The sources are channel 1/2 and channel 3/4 on the first step, and in the second step the logical combination resulting from the first step.

- "AND": logical AND, conjunctive combination
- "NAND": logical NOT AND
- "OR": logical OR, disjunctive combination
- "NOR": logical NOT OR

Remote command:
Select channels:
`TRIGger<t>:QUALify<n>:A[:ENABle]` on page 1521
`TRIGger<t>:QUALify<n>:B[:ENABle]` on page 1521
`TRIGger<t>:QUALify<n>:C[:ENABle]` on page 1521

TRIGger<t>:QUALify<n>:D[:ENABle] on page 1521
Channel operators:
TRIGger<t>:QUALify<n>:A:LOGic on page 1522
TRIGger<t>:QUALify<n>:B:LOGic on page 1522
TRIGger<t>:QUALify<n>:C:LOGic on page 1522
TRIGger<t>:QUALify<n>:D:LOGic on page 1522
Logic operators:
TRIGger<t>:QUALify<n>:AB:LOGic on page 1522
TRIGger<t>:QUALify<n>:CD:LOGic on page 1522
TRIGger<t>:QUALify<n>:ABCD:LOGic on page 1522

Trigger Levels
Define the trigger level for each input channel. For state and pattern trigger, the trigger level is a decision threshold: If the signal value is higher than the trigger level, the signal state is high (1 or true for the Boolean logic). Otherwise, the signal state is considered low (0 or false) if the signal value is below the trigger level.

These trigger levels are also used in qualification setup.

You can set the trigger levels for all channels to the same value, see "Use data level for clock level" on page 218.

Use data level for clock level
Sets the trigger levels and hysteresis values for all channels to the values of the currently selected trigger source. The function affects only the levels defined for the selected condition. The hysteresis of the external trigger input is an independent value, and it is not affected by level coupling.

In trigger sequences, another coupling of trigger levels is possible: "Couple sequence thresholds" on page 243.

Remote command:
TRIGger<t>:SCOupling on page 1488

6.8 Sequence

A trigger sequence consists of at least one trigger condition and additional conditions defining when the trigger occurs.

The trigger sequence "A → B → R", for example, consists of two subsequent conditions: A-trigger and B-trigger with optional B-trigger delay and count. In addition, a reset condition R can be configured: timeout or R-trigger condition. A-, B-, and R-triggers are configured in the same way.

The instrument checks all trigger settings for compatibility and disables settings that do not fit the previous settings in the sequence.

After the A-trigger conditions have been met, and an optional delay has passed, the B-trigger with independent conditions is enabled. The instrument waits until one or a specified number of B-trigger conditions occur. If the reset condition is not fulfilled, the latest B-trigger causes the trigger event, and then the sequence starts again. The

B-trigger can only cause the trigger event if it occurs after the A-trigger and after the delay time.

If you expect, for example, an irregular B-trigger, you can configure a reset condition to restart the sequence. The reset condition can be a simple timeout, and/or a reset event that is defined in the same way as the A- and B-trigger conditions.


All trigger sequences require that input channels CH1...4 are set as trigger sources for all conditions. All other input sources are disabled. Trigger sequences are not available if one the following trigger types is set as A-trigger:

- Setup & Hold
- TV
- NFC
- CDR

For the zone trigger, more trigger sequences are available, see Section 6.9, "Zone trigger", on page 243. Zone trigger requires option R&S RTP-K19.


6.8.1 Sequence setup

Access: "Menu">"Trigger" > "Setup" tab > "Trigger on" = "Sequence"

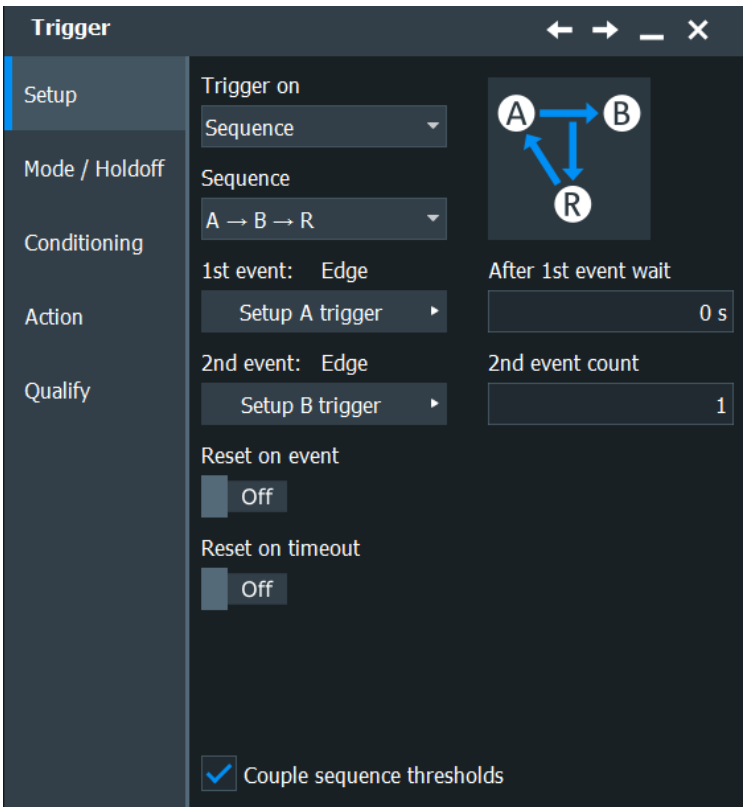

The B-trigger is the second condition of the trigger sequence. You can configure a delay between the A- and B-trigger, and define a number of fulfilled B-trigger conditions

to be ignored. The B-trigger condition is configured in the same way as the A-trigger. The instrument disables settings that do not fit the previous settings in the sequence.

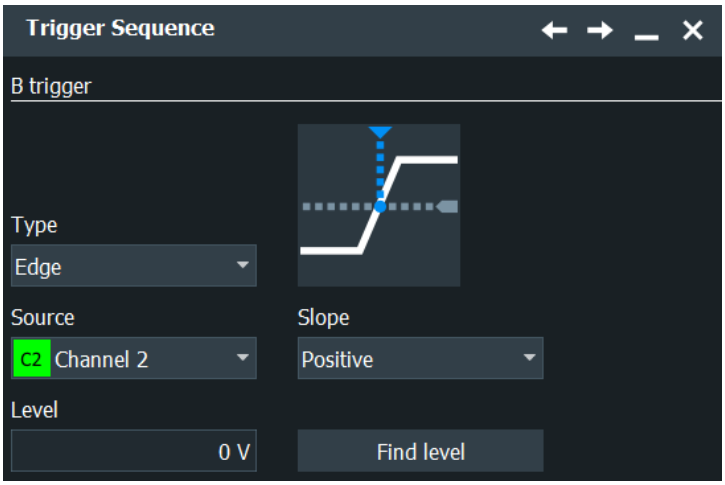

The reset condition R can be a timeout or a trigger condition, or a combination of both.

Sequence
Selects the type of the sequence.

"A → B → R"	Triggers if all conditions of A- and B-events, as well as additional delay and reset timeout or R-event (reset) conditions are fulfilled.
"A → Zone"	Triggers if the conditions of the A-event and the zone trigger are fulfilled. A holdoff condition also can be set.
"A → B → R → Zone"	Triggers if all conditions of A- and B-events, reset timeout or R-event (reset) conditions are fulfilled for the defined zone.
"A OR B"	Triggers if the conditions of A-event or the conditions of the B-event are fulfilled.
"A OR B → Zone"	Triggers if the conditions of A-event or the conditions of the B-event are fulfilled for the defined zone. A holdoff condition also can be set.

Remote command:
`TRIGger<t>:SEQuence:TYPE` on page 1531

After 1st event wait
Sets the time that the instrument waits after an A-trigger until it recognizes B-triggers.

Remote command:
`TRIGger<t>:SEQuence:DELay` on page 1532

2nd event count
Sets the number of B-trigger conditions to be fulfilled after an A-trigger. The last B-trigger causes the trigger event.

The waiting time for B-triggers can be restricted with a reset condition: timeout or reset event.

Only available in "A → B → R" sequences.

Remote command:
TRIGger<t>:SEQuence:COUNt on page 1532

Reset on event/Reset event
If enabled, the trigger sequence is restarted by the R-trigger condition if the specified number of B-triggers does not occur before the trigger conditions are fulfilled.

The R-trigger condition is configured in the same way as the A-trigger. The instrument disables settings that do not fit the previous settings in the sequence.

Remote command:
TRIGger<t>:SEQuence:RESet:EVENt on page 1532

Reset on timeout/Reset timeout
If timeout is enabled, the instrument waits for the "Timeout" time for the specified number of B-triggers. If no trigger occurs during that time, the sequence is restarted with the A-trigger.

Remote command:
TRIGger<t>:SEQuence:RESet:TIMeout[:ENABle] on page 1533
TRIGger<t>:SEQuence:RESet:TIMeout:TIME on page 1533

Couple sequence thresholds
Sets the trigger levels to the values of the latest configured trigger condition. Each channel has its own trigger level.

Example:

You have configured the A-trigger at last, and the trigger level for C1 is 70 mV. Enabling the coupling sets the trigger levels for C1 in the B- and R trigger also to 70 mV. If the B-trigger and/or R-trigger use another source as the A-trigger, the level remains unchanged.

Remote command:
TRIGger<t>:ECOupling on page 1531

6.9 Zone trigger

The zone trigger function requires option R&S RTP-K19.

The zone trigger triggers on the intersection or non-intersection of the signal and one or more zones or masks. The zone can be applied to any active input signal, math waveform including FFT, and XY-waveform.

You can use the zone trigger, for example, to solve the following tasks:

- Trigger if a peak in the spectrum occurs: define a zone in the FFT diagram to filter amplitude peaks. In the same way, you can filter harmonics.
- Separate rising and falling edges: define a zone around the base or top of the data signal.
- Separate read/write cycles: define a zone in the eye diagram.

- Identify a tube violation of signals with an infrequent non-monotonic edge.
- Filter events in the history, after acquisition has finished

To document the trigger events, use the actions on trigger. For example, create a report when the instrument triggers, or save the waveform.

Zone trigger is not available for serial protocol triggers.

Trigger sequence with zone trigger

You can combine the zone trigger with common trigger conditions and use one of the following trigger sequences:

- "A → Zone"
- "A → B → R → Zone"
- "(A OR B) → ZoneTrigger"

In a sequence, the zone trigger acts like a filter on previous acquisitions. Previous conditions and then the zone condition must be fulfilled. For example, in an "A → Zone" sequence, the trigger marker is set to the A event, and a corresponding trigger-out signal is sent when the zone condition is fulfilled.

6.9.1 About trigger zones

A zone is a mask without result box. You can adjust the shape of the zone in the same way as mask segments, graphically by dragging the corner points, or numerically in the "Masks" > "Mask Definition" dialog box. You can also use existing masks in the zone trigger. The zone trigger and usual mask tests run in parallel.

If you switch off a mask test that is used by the zone trigger, the mask is removed from the zone trigger expression automatically.

All zones and masks that are included in the zone trigger expression are indicated with yellow color.

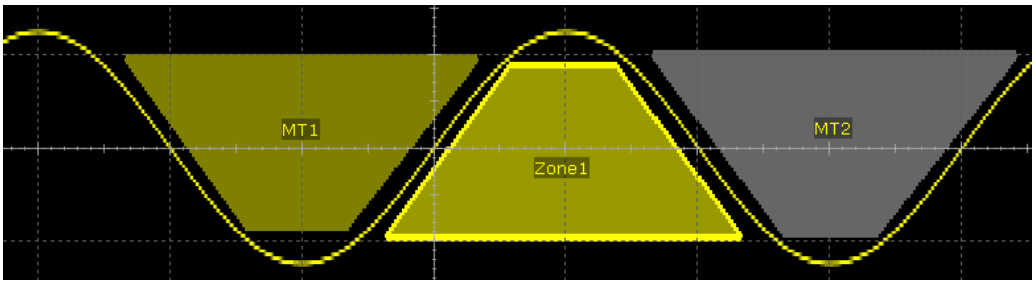


Figure 6-5: Indication of trigger zones

MT1 = Mask is included in zone trigger. Trigger if signal hits the mask (must intersect).
MT2 = Mask is not included in zone trigger.
Zone1 = Zone is included in zone trigger. Trigger if signal does not hit the zone (must not intersect).

If average or envelope acquisition is enabled, only triggered waveforms are used for envelope and average calculation on channel and math waveforms.

6.9.2 Creating trigger zones

You can define the trigger zones on the display, or use existing mask definitions as trigger zones.

Define trigger zones



1. Tap the "Zone trigger" icon on the toolbar.




2. In the signal bar, select if the signal must violate the zone to cause a trigger (must intersect), or vice versa (must not intersect).
3. Tap the corner points of the zone on the screen.
4. If all points are set, tap "Finish zone" in the signal bar.

   "Zone1" is shown in the expression field.





5. If you want to define another zone, select the logic combination of the zones AND (both zones) or OR (either zone).
6. To create the second zone, repeat steps 3 and 4.
7. To define more zones, repeat steps 5 and 6.

Use existing masks for zone trigger

Prerequisites: At least one mask is created and visible on the display.



1. Tap the "Zone trigger" icon on the toolbar.




2. In the signal bar, select if the signal must violate the zone to cause a trigger ("Must Intersect"), or vice versa ("Must Not Intersect").
3. Tap the mask on the display.
4. Tap "Use selected mask" in the signal bar.

   "MT1" is shown in the expression field.





5. If you want to add another mask test or zone, select the logic combination of the zones AND (both zones) or OR (either zone).
6. To add another mask, tap the mask on the display.
   Tap "Use selected mask" in the signal bar.
7. To add another zone, tap the corner points of the zone on the screen.
   If all points are set, tap "Finish zone" in the signal bar.

If a zone trigger is already defined, you can also add a new mask to the zone trigger when creating the mask.

Intersect
Defines if the signal must intersect the zone to allow the instrument to trigger, or if it must not intersect the zone.

Combine
Sets the logic combination of two zones.


Use selected mask
Includes the selected zone or mask in the zone expression.

Clear Expr
Deletes the zone trigger expression. The zones are not deleted, they remain as usual masks, and the result boxes of the mask test appear.

Delete all
Deletes the zone trigger expression and the zones.

6.9.3 Advanced setup and analysis with zone trigger

Access: overlay menu for zone trigger > "Advanced Setup", or "Trigger" menu > "Setup" > select sequence with zone trigger > "Setup Z trigger" dialog

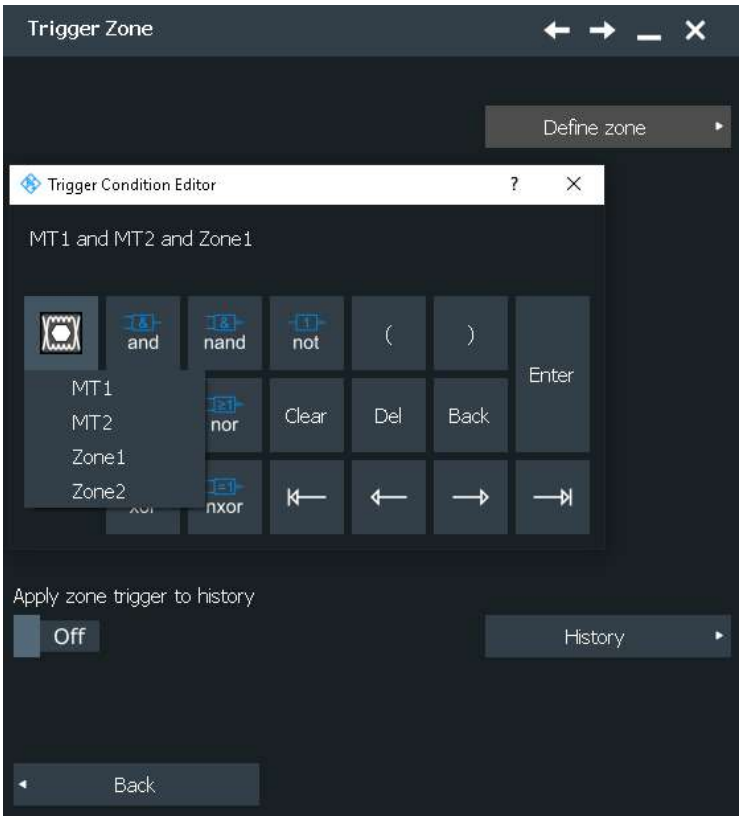

Logical trigger condition
If all required mask tests and zones are defined, you can type the logical expression directly, or use the trigger condition editor. All logical combinations are available in the editor. To express the "Must Not Intersect" condition, use the logic NOT.

Remote command:
`TRIGger<t>:ZONE:EXPRession[:DEFine]` on page 1538

Apply zone trigger to history
Applies the zone trigger condition to the acquisitions in the history memory.

The history saves all acquisitions that fulfill the trigger condition that is set during acquisition (zone trigger condition, or another trigger condition). If "Apply zone trigger to history" is disabled, the history "Play" reads and displays all saved acquisitions from the memory.

If the setting is enabled, the zone trigger is applied to the history replay. "Play" displays only acquisitions that fulfill the zone trigger condition.

Using "Apply zone trigger to history", you can:
- Acquire waveforms with high speed and filter them afterwards in the history.
- Change the zone trigger condition after acquisition.

Remote command:
`SWTRigger:HISTory` on page 1538

6.10 High speed serial pattern trigger (option R&S RTP-K140/K141)

Option R&S RTP-K140/K141 provides additional real-time trigger capabilities on high speed communication protocols that use NRZ (non-return-to-zero) line encoding and bit transmission rates starting at 21 kbit/s and up to 16 Gbit/s.

The option provides:

- Support transmission rates starting at 21 kbit/s and up to 8 Gbit/s (R&S RTP-K140) / 16 Gbit/s (R&S RTP-K141)
- Triggering on single/dual bit patterns and complex words.
- Triggering on PRBS errors.
- Trigger on protocols that use the line codes 8b/10b and 128b/132b.
- Trigger on descrambled 8b/10b communications
- Real-time hardware-based clock data recovery (CDR) up to 16 Gbit/s.

6.10.1 About the serial pattern trigger

A trigger occurs if the complete set of trigger conditions is fulfilled. In the serial pattern trigger dialog, you can set the basic settings and pattern type specific settings.

Basic trigger settings

In the basic settings, you define if the clock is recovered from the signal (enabled CDR), or if a dedicated clock signal is provided on another channel (disabled CDR).

Digital high-speed serial data streams typically use an embedded clock. No additional accompanying clock signal such as for parallel buses (e.g. DDR memory interface DDR3/ DDR4) is required.

With enabled CDR, the timing information is embedded in the data. The signal is extracted, resulting in a clock signal that can be further processed by the trigger system. The internally generated CDR clock signal is used to sample the original data signal and decode the sequence of transmitted bits.

The following example displays the trigger position for a single bit pattern using the hardware CDR setup:

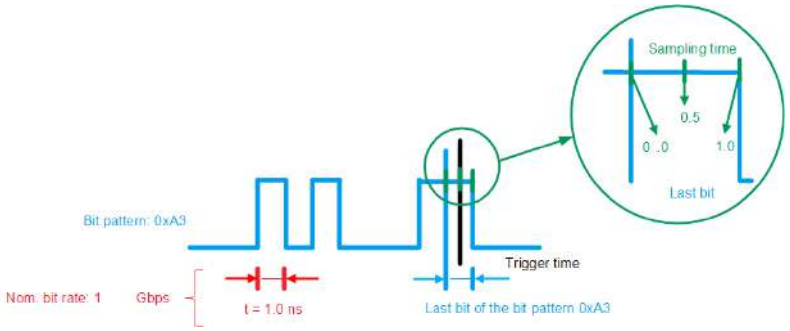


Figure 6-6: Example for a triggering parameters of a recovered clock signal

You can define the "Nom. bit rate" of your signal, or use the predefined value of one of the supported "Serial standard" and "Sampling time".

Maximum nominal bit rate

The available maximum nominal bit rate depends on the configuration settings of your instrument. The following maximum nominal bit rate can be achieved:

Instruments bandwidth	Number of active channels	Maximum acquisition mode	Maximum nominal bit rate	
			R&S RTP-K140	R&S RTP-K141
up to 8 GHz	1 channel	40 GSa/s	8 Gbit/s	8 Gbit/s
	2 channels: CH1 and CH3 or CH1 and CH4 or CH2 and CH3 or CH2 and CH4	Serial number > 103000: 40 GSa/s Serial number < 103000: 20 GSa/s		
	2 channels: CH1 and CH2 or CH3 and CH4	20 GSa/s		
	3 or 4 channels	20 GSa/s		
13 GHz, 16 GHz	1 channel	40 GSa/s	8 Gbit/s	16 Gbit/s
	2 channels: CH1 and CH3 or CH1 and CH4 or CH2 and CH3 or CH2 and CH4	40 GSa/s		


Instruments bandwidth	Number of active channels	Maximum acquisition mode	Maximum nominal bit rate	
			R&S RTP-K140	R&S RTP-K141
	2 channels: CH1 and CH2 or CH3 and CH4	20 GSa/s		8 Gbit/s
	3 or 4 channels	20 GSa/s		

Pattern settings

The pattern settings depend on the selected "Pattern type", see Section 6.10.2, "High speed serial pattern settings", on page 249.

6.10.2 High speed serial pattern settings

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Serial Pattern"

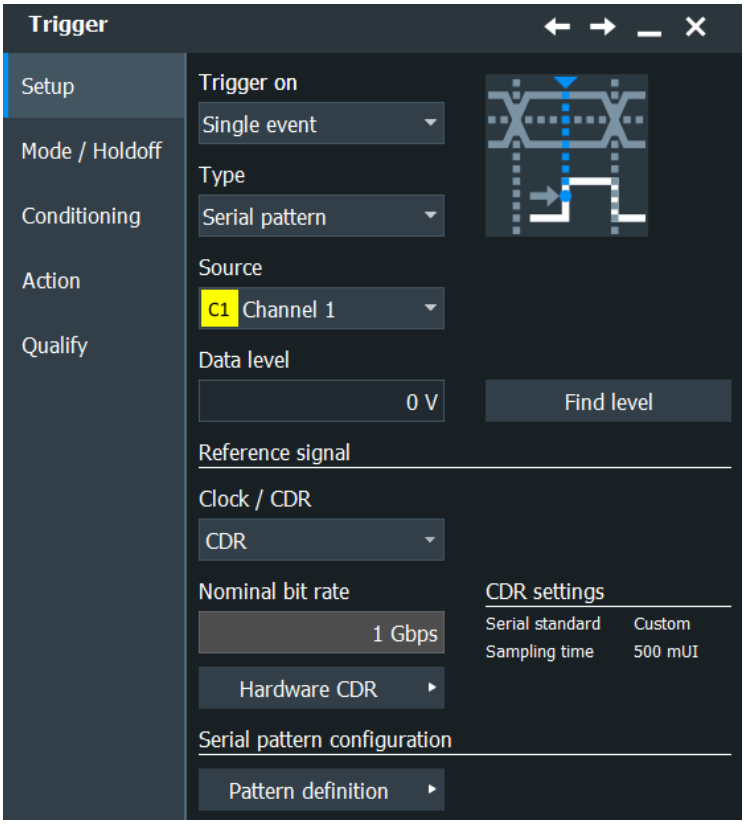

The available settings depend on the selected "Pattern mode" in the "Pattern definition" dialog.

6.10.2.1 General settings for serial pattern trigger

In the basic serial pattern settings, you can define the clock signal in relation to which you want to trigger. You can use the recovered clock signal for the serial pattern trigger ("CDR") instead of an explicit clock signal.


Clock / CDR
Selects the type of waveform that is used to obtain the reference signal: .

"CDR" Uses software clock data recovery.

"Clock" Uses an explicit clock signal, which is connected to another channel than the data signal.

Remote command:
`TRIGger<t>:SPATtern:REFSource` on page 1495

Explicit clock
Opens a dialog to define the explicit clock, for "Clock / CDR" = "Clock".

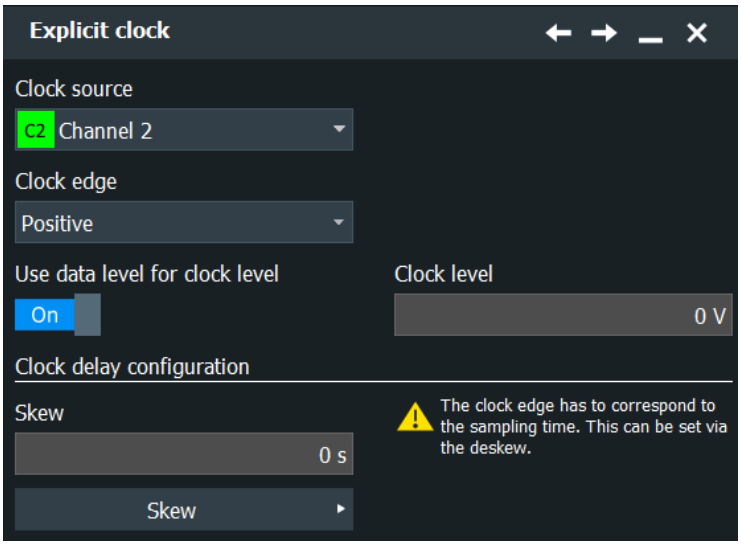

Clock source ← Explicit clock
Selects the input channel of the clock signal.

Remote command:
`TRIGger<t>:SETHold:CSOurce[:VALue]` on page 1486

Clock edge ← Explicit clock
Together with the clock level, the clock edge sets the point in time when the state of the data signal is checked:

"Positive" Rising edge, a positive voltage change.

"Negative" Falling edge, a negative voltage change.

"Both" Both the rising and the falling edge.

Remote command:
`TRIGger<t>:SPATtern:CSOurce:EDGE` on page 1494

Use data level for clock level ← Explicit clock
Sets the trigger levels and hysteresis values for all channels to the values of the currently selected trigger source. The function affects only the levels defined for the selected condition. The hysteresis of the external trigger input is an independent value, and it is not affected by level coupling.

In trigger sequences, another coupling of trigger levels is possible: "Couple sequence thresholds" on page 243.

Remote command:
`TRIGger<t>:SCOupling` on page 1488


Clock level ← Explicit clock
Sets the voltage level for the clock signal.

Remote command:
`TRIGger<t>:SPATtern:CSOurce:LEVel` on page 1495

Skew
Sets a delay value, which is known from the circuit specifics but cannot be compensated by the instrument automatically. It affects only the selected input channel.

You can define additional skew parameters in the "Skew" dialog, see Section 5.3.1, "Skew", on page 126.

Hardware CDR
Opens a dialog to define the explicit clock, for "Clock / CDR" = "CDR".

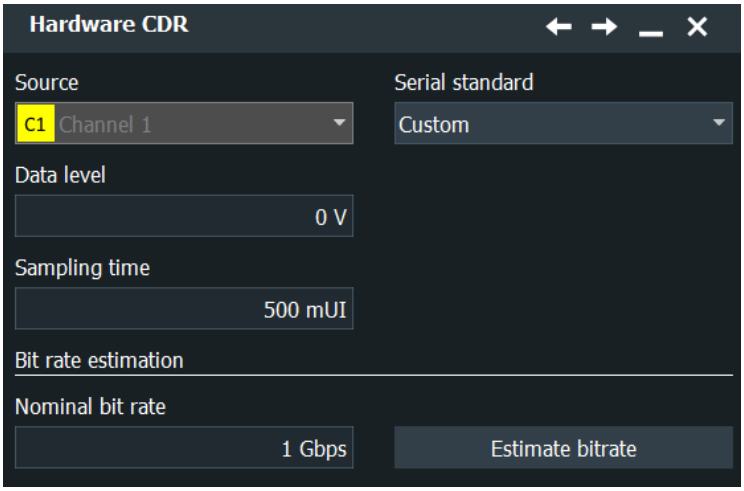

Source ← Hardware CDR
Shows the channel signal that is used for clock recovery. The instrument triggers on the recovered clock, trigger source and CDR source are the same.

Serial standard ← Hardware CDR
Displays the currently selected serial standard.

You can set this up in the "Menu" > "Apps" > "Analysis" > "Signal Configuration" dialog.

Data level ← Hardware CDR
Sets the voltage level for the data signal.

If the signal value is higher than the data level, the state is 1. Below the level, the signal state is 0.

Remote command:
`TRIGger<t>:LEVel<n>[:VALue]` on page 1471

Sampling time ← Hardware CDR
Defines the position of the last bit of the bit pattern to be triggered on, relative to the trigger time. The unit interval offset is a number between 0 and 1:

- Value 0: start/"left edge" of the last bit
- Value 0.5: middle of the last bit
- Value 1: end/"right edge" of the last bit

Remote command:
`CDR:HARDware:SAMTime` on page 1496

Nominal bit rate ← Hardware CDR
Sets the frequency of the feed forward CDR. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Remote command:
`CDR:HARDware:BITRate` on page 1496

Estimate bit rate ← Hardware CDR
Estimates the bite rate once, for the current acquisition.

Remote command:
`CDR:HARDware:BREStimate` on page 1495

Pattern definition
Opens a dialog to define the pattern.

Pattern mode ← Pattern definition
Selects the pattern type for the serial pattern trigger.

The following pattern types are available:


- Single/dual bit pattern
- Complex word pattern
- PRBS error
- 8b/10b
- 128b/132b and 128b/130b


Remote command:
`TRIGger<t>:SERPattern:PTMDe` on page 1493

6.10.2.2 Single/dual bit pattern

For the "Single Bit Pattern", you can define a single bit pattern of up to 160 bits.

The "Dual bit pattern" is a logical OR operation of two defined bit patterns that you can trigger on.

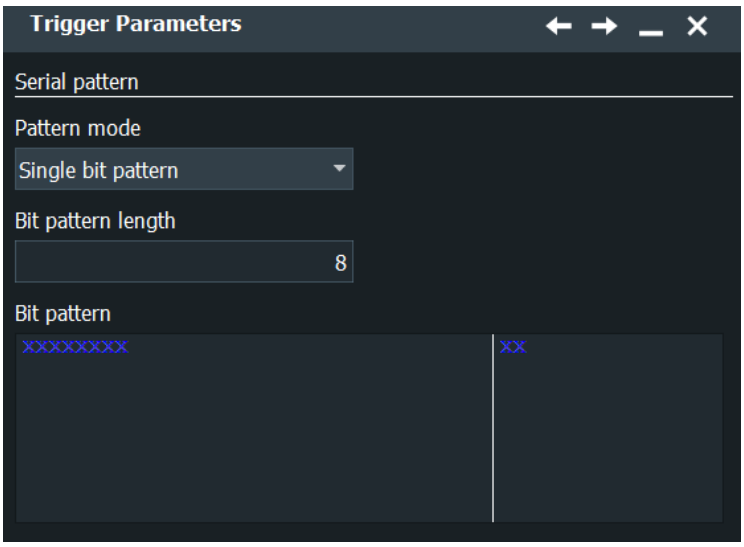

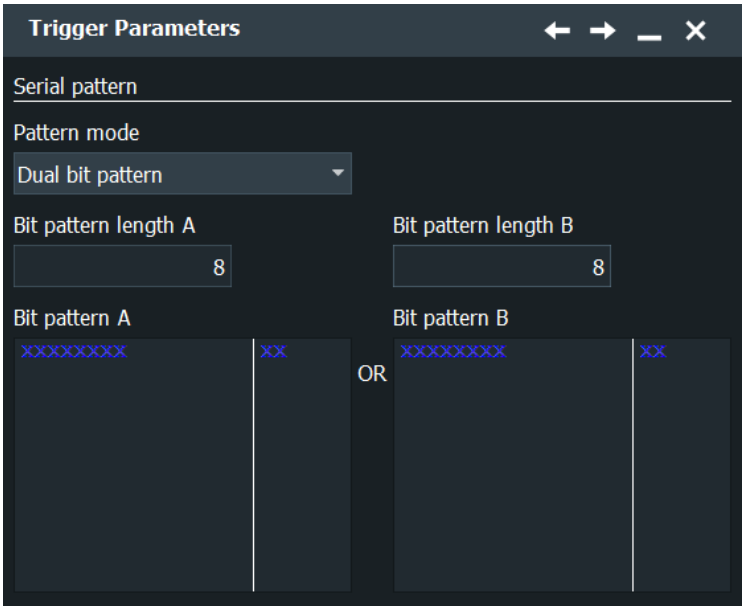

Bit pattern length, Bit pattern length A, Bit pattern length B
Sets the length of the bit pattern. You can select a value of up to 160 bits.

Remote command:
`TRIGger<t>:SERPattern:BITPattern:PTALength` on page 1497
`TRIGger<t>:SERPattern:BITPattern:PTBLength` on page 1498

Bit pattern, Bit pattern A, Bit pattern B
Defines the bit pattern in binary or hex format to.

The bit pattern editor helps you to enter the pattern, see Section 14.1.7, "Bit pattern editor", on page 564.

Remote command:
`TRIGger<t>:SERPattern:BITPattern:APATtern` on page 1497
`TRIGger<t>:SERPattern:BITPattern:BPATtern` on page 1497

6.10.2.3 Complex word pattern

Within the pattern type "Complex word pattern", a total of four different pattern conditions can be triggered on within a data stream. First, aligning to a frame id in the form of a bit pattern (or timeout) has to be done.

Example:

Figure 6-7 shows a sample configuration of a complex word pattern.

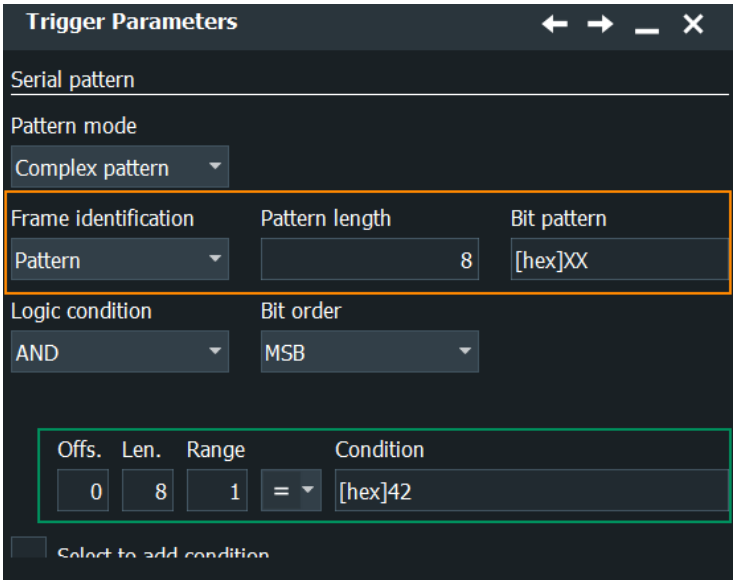


Figure 6-7: Example for complex word serial trigger pattern settings

The number of bits to search for a pattern condition is the multiplication of the parameters "Pattern length" and "Search range". The starting point for the search of the pattern condition is the "Bit offset", which is the number of arbitrary bits between the first bit after the frame id and the first bit of the first pattern condition to be triggered on.

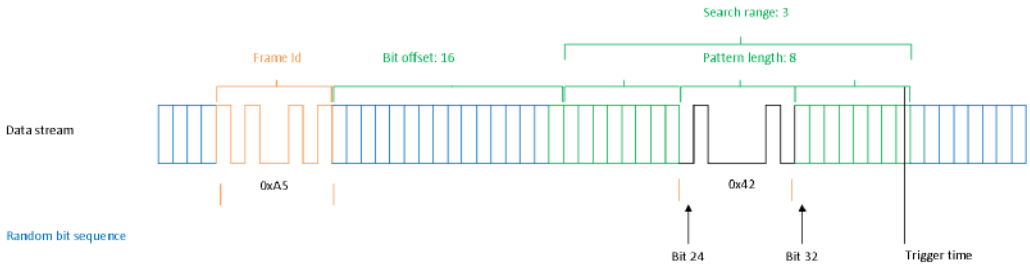


Figure 6-8: Example data stream of a complex word serial pattern trigger

The pattern conditions are searched word by word. Hence, there are only three possible start bits – bit 16, bit 24 and bit 32 – in the data stream for which the trigger condition (equal 0x42) is fulfilled. The trigger condition is not satisfied if the bit pattern appears from bit 20 to bit 27.

Frame Id
Defines the condition for alignment before triggering on a word pattern.

Type ← Frame Id
Selects if the alignment is done on a pattern value or on a defined timeout.

Remote command:
TRIGger<t>:SERPattern:COMPlex:SOFState on page 1499

Length ← Frame Id
Sets the length of the pattern for the trigger alignment condition.

Remote command:
TRIGger<t>:SERPattern:COMPlex:SOFLength on page 1500

Bit Pattern ← Frame Id
Sets the bit pattern value for the trigger alignment condition.

Remote command:
TRIGger<t>:SERPattern:COMPlex:SOFPattern on page 1500

Timeout ← Frame Id
Sets the timeout, a duration that defines an idle mark.

Remote command:
TRIGger<t>:SERPattern:COMPlex:SOFTimeout on page 1499

Idle range
Selects if the timeout should be within the range or out of range.

Remote command:
TRIGger<t>:SERPattern:COMPlex:IDLRange on page 1499

Logic
Selects the logic for the condition, if more than one pattern conditions are defined.

"OR" At least one of the defined pattern conditions have to be met.

"AND" All the defined pattern conditions must be met.

Remote command:
TRIGger<t>:SERPattern:COMPlex:CLOGic on page 1498

Bit order
Select most significant bit (MSB) or least significant bit (LSB) to define the data bit order.

Remote command:
TRIGger<t>:SERPattern:COMPlex:BORDer on page 1498

Bit offset
Sets the number of arbitrary bits between the first bit after the frame id and the first bit of the first pattern condition to be triggered on.

Remote command:
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:BOFFset on page 1500

Pattern length
Sets the word pattern length in bits. The maximum bit length of all selected pattern conditions is 160 bits, with arbitrary bits (e.g., due to bit offsets) not counted.

Remote command:
`TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PATLength` on page 1501

Search range
Sets the search range of the respective pattern condition to be triggered.

Remote command:
`TRIGger<t>:SERPattern:COMPlex:PATTern<n>:SRNGe` on page 1502

Pattern condition
Selects the operator for the pattern condition: "Equal", "Not equal", or a range definition.

Remote command:
`TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PCONdition` on page 1502

Pattern
Defines the bit pattern in binary or hex format.

The bit pattern editor helps you to enter the pattern, see Section 14.1.7, "Bit pattern editor", on page 564.


Remote command:
`TRIGger<t>:SERPattern:COMPlex:PATTern<n>:FRPTtern` on page 1501
`TRIGger<t>:SERPattern:COMPlex:PATTern<n>:TOPTtern` on page 1502

Select to add condition
If enabled, you can define a new pattern condition. You can define up to 4 conditions.

Remote command:
`TRIGger<t>:SERPattern:COMPlex:PATTern<n>:ENABle` on page 1501

6.10.2.4 PRBS error

PRBS sequences are generated by linear feedback shift registers (LFSR) implementing a sequence generating polynomial. LFSR register with K bits generates a PRBS-K sequence of maximum length 2^K-1 bits. Every group of K consecutive bits appears only once within the sequence and can therefore be used as an alignment mark for synchronization.

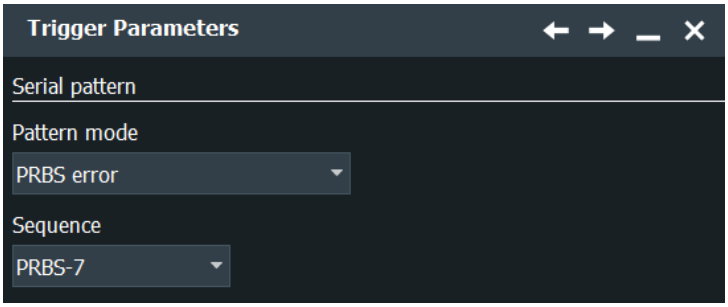

PRBS Sequence
Selects a predefined pseudo random binary sequence. Available are the following sequences:

- PRBS-7
- PRBS-9
- PRBS-11
- PRBS-15
- PRBS-16
- PRBS-17
- PRBS-20
- PRBS-23
- PRBS-29
- PRBS-31

Remote command:
`TRIGger<t>:SERPattern:PRBS:PSEQuence` on page 1503

PRBS Bit error rate
Sets the bit error rate for the PRBS sequence.


Remote command:
`TRIGger<t>:SERPattern:PRBS:ERATe` on page 1503

Nominal bit rate
Sets the nominal bit rate for the PRBS sequence. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Remote command:
`TRIGger<t>:SERPattern:PRBS:NBRTe` on page 1503

6.10.2.5 8b/10b

You can define 8b/10b pattern that is used in technologies like PCIe Gen1/2 and USB3.1 Gen 1.

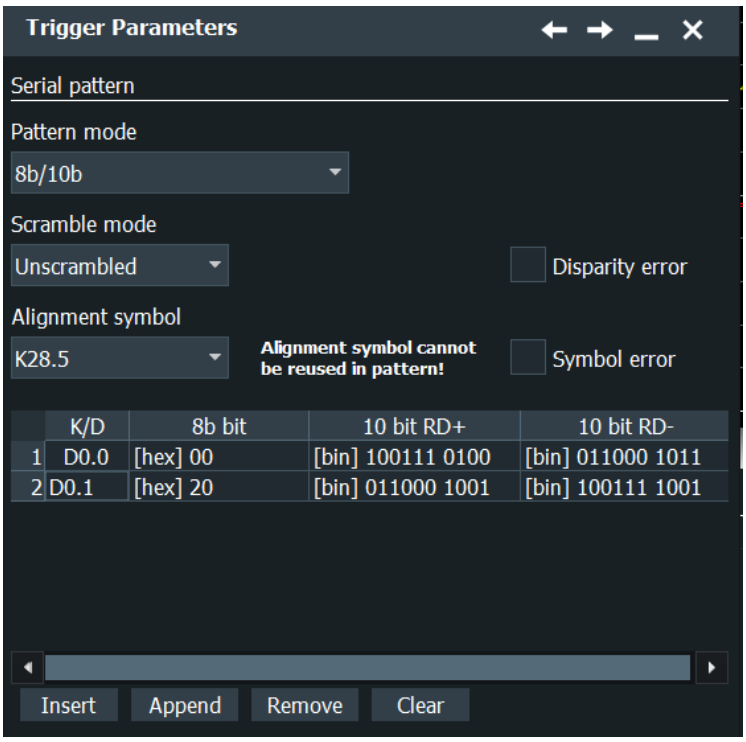

Alignment
Selects one of the comma control symbols (K28.1, K28.5, K28.7) used for synchronization.

Remote command:
`TRIGger<t>:SERPattern:EBTB:ALIGnment` on page 1504

Scramble
Selects if the data is scrambled or unscrambled.

Remote command:
`TRIGger<t>:SERPattern:EBTB:SCRMble` on page 1507

8b/10b table
In this table, you can define up to 16 symbols.

"K/D symbol" Selects the data characters (Dx.y) or the control characters (Kx.y)
"8b bit" Sets the 8b bit value.
"10b bit RD+" Displays the value for the positive running disparity.
"10b bit RD-" Displays the value for the negative running disparity.
"Insert" Inserts an entry before the currently selected row.
"Append" Inserts an entry at the end of the table.
"Remove" Removes an entry.
"Clear" Clears all entries.

Remote command:
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:KDSYmbol on page 1507
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:EBIT on page 1507
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:DMINus? on page 1506
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:DPLus? on page 1506
TRIGger<t>:SERPattern:EBTB:APPend on page 1504
TRIGger<t>:SERPattern:EBTB:COUNt? on page 1505
TRIGger<t>:SERPattern:EBTB:CLEar on page 1505

Disparity error
Enables triggering on violation of the disparity condition.


Remote command:
TRIGger<t>:SERPattern:EBTB:ERRor<n>:DISParity on page 1505

Symbol error
Enables triggering on symbol errors. A symbol error occurs when the decoded symbol cannot be found in the table of 8B/10B data symbol codes.

Remote command:
TRIGger<t>:SERPattern:EBTB:ERRor<n>:SYMBol on page 1505

6.10.2.6 128b/132b and 128b/130b

The 128b/132b code is, for example, used for high speed transmission rates of 10 Gbit/s USB 3.1 Gen2.

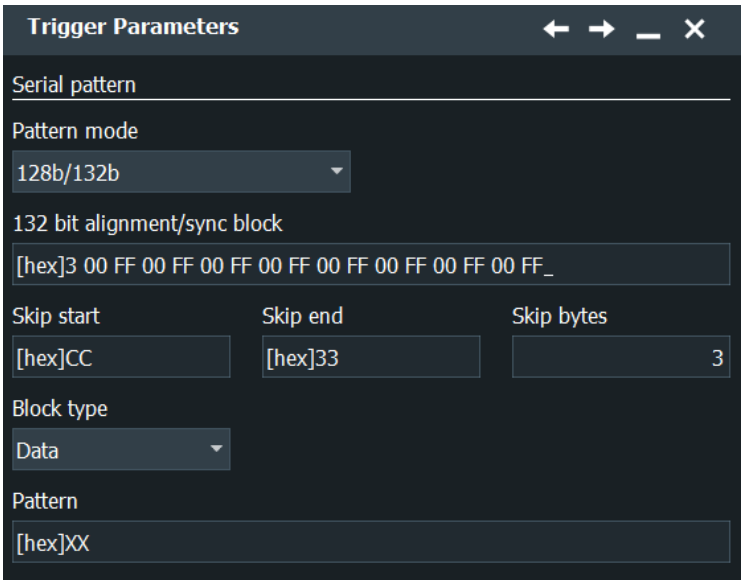

Alignment / Sync
Sets the alignment pattern.

Remote command:
TRIGger<t>:SERPattern:I32B:APATtern on page 1508
TRIGger<t>:SERPattern:I30B:APATtern on page 1510

Skip start
Sets the skip start value. It is used to compensate for different bit rates between two communicating ports.

Remote command:
`TRIGger<t>:SERPattern:I32B:SSTR` on page 1509
`TRIGger<t>:SERPattern:I30B:SSTR` on page 1511

Skip end
Sets the skip end symbol. It marks the boundary between skip symbols and the rest of the skip-ordered sets.

Remote command:
`TRIGger<t>:SERPattern:I32B:SSTP` on page 1509
`TRIGger<t>:SERPattern:I30B:SSTP` on page 1510

Skip bytes
Sets the skip bytes symbols send after a skip end symbol to describe the LSFR state.

Remote command:
`TRIGger<t>:SERPattern:I32B:SKAFter` on page 1508
`TRIGger<t>:SERPattern:I30B:SKAFter` on page 1510

Block type
Selects the type of pattern, control block or the data block.

Remote command:
`TRIGger<t>:SERPattern:I32B:SYMType` on page 1509
`TRIGger<t>:SERPattern:I30B:SYMType` on page 1511

Pattern
Defines the control block or data block pattern in binary or hex format.

The bit pattern editor helps you to enter the pattern, see Section 14.1.7, "Bit pattern editor", on page 564.

Remote command:
`TRIGger<t>:SERPattern:I32B:PATTern` on page 1508
`TRIGger<t>:SERPattern:I30B:PATTern` on page 1510

6.10.3 Configuring the serial pattern trigger

For details on the high speed serial pattern trigger settings, see Section 6.10.2, "High speed serial pattern settings", on page 249.

Setting up basic serial pattern settings

1. Select "Menu" > "Trigger" > "Setup".
2. Select the channel for the "Source".
3. Select "Type" > "Serial pattern".
4. Set the clock signal:

a) Select the "Clock / CDR" respective to your reference clock signal.
b) For "Clock / CDR" = "Clock" define the hardware clock in the "Hardware CDR" dialog.
c) For "Clock / CDR" = "CDR" define the explicit clock in the "Explicit clock" dialog.

5. Open the "Pattern definition" dialog.
6. Select the "Pattern type".
7. Set the pattern type specific settings:
   - For dual bit serial pattern trigger, see "Setting up a dual bit serial pattern trigger" on page 261.
   - For 8B/10B serial pattern trigger, see "Setting up a 8B/10B serial pattern trigger" on page 261.

Setting up a dual bit serial pattern trigger

1. Set the basic serial pattern settings. See "Setting up basic serial pattern settings" on page 260.
2. Open the "Pattern definition" dialog.
3. Select "Pattern type" > "Dual bit pattern".
4. Set the "Bit pattern length A/B".
5. Set the "Bit pattern A/B".

Setting up a 8B/10B serial pattern trigger

1. Select "Menu" > "Trigger" > "Setup".
2. Select "Type" > "Serial pattern".
3. Set the "Clock / CDR" to "CDR".
4. Open the "Pattern definition" dialog.
5. Select "Pattern type" > "8b/10b".
6. Set the "Alignment".
7. Press "Append" to add a new K/D symbol.
8. Set the value of the "K/D symbol".

6.11 External trigger input

Except for using analog or digital input channels as trigger source, you can also use external signals as trigger source. The external signal is connected to the external trigger input, which is equipped with the Rohde & Schwarz probe interface. Thus, you

can use all Rohde & Schwarz probes to connect the external trigger signal. The only trigger type to trigger on external signals is the edge trigger.

1. Connect the external trigger signal to the external trigger input.
2. Set up the trigger:
   a) Select the "Trigger" > "Setup" tab.
   b) Select the source: "Extern"
   c) Adjust the trigger settings.
   See Section 6.11.1, "External trigger setup", on page 262.
3. Set up the probe: In the "Trigger" > "Setup" tab, tap "Setup external probe".
   See: Section 6.11.2, "Probe setup for external trigger input", on page 264.

If the trigger source is a channel input, the trigger system uses the digitized signal. The trigger system of the instrument is a separate system, thus the signal processing by enhancement, decimation and arithmetic has no impact on the trigger signal. Most of the R&S RTP trigger types use the digitized trigger signal.


If the trigger source is the external trigger input, the trigger comparator uses the analog input signal. For the external trigger signal, only the edge trigger of the A-trigger is available. Trigger sequence is not supported.

Qualification of the external trigger signal is not available.

6.11.1 External trigger setup

Access: "Menu" > "Trigger" > "Setup" tab > "Source = Extern"

External trigger signals, which are connected to the external trigger input, can be triggered with an edge trigger. The "Find level" function is not available for external trigger signals.

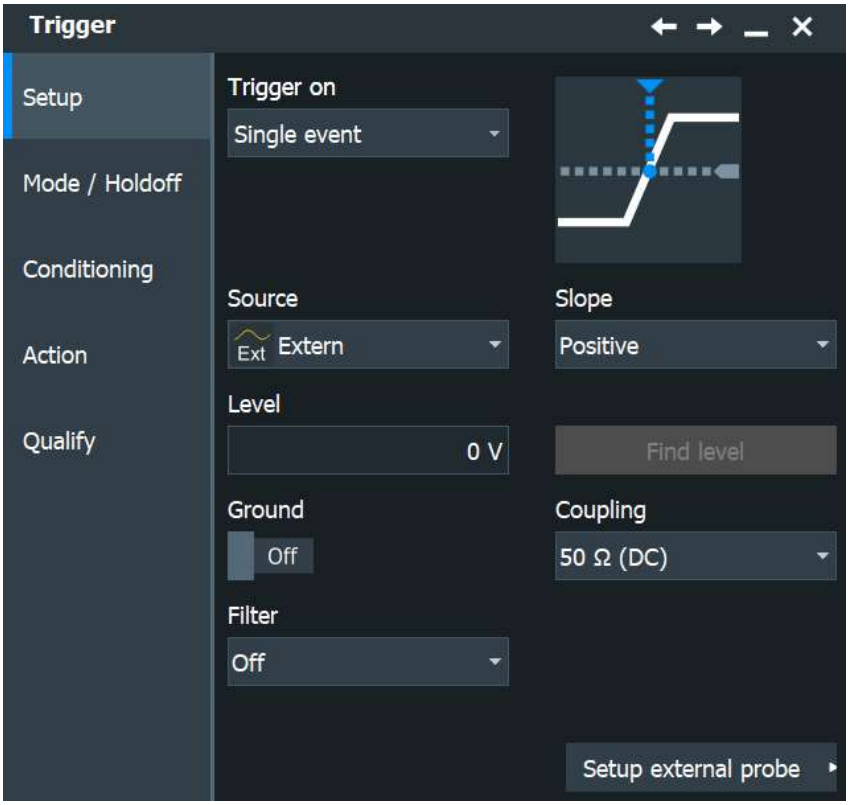

Ground
If the selected trigger source is the external trigger input, you can connect the trigger input to the ground.

Remote command:
`TRIGger<t>:ANEDge:GND` on page 1540

Coupling
The external trigger input is a direct connection with 50 Ω termination, which passes both DC and AC components of the trigger signal.

Remote command:
`TRIGger<t>:ANEDge:COUPling` on page 1538

Filter
If the selected trigger source is "Extern" (external trigger input), you can directly select a filter to reject high or low frequencies.

For all other trigger sources, you can add a digital filter using the "Digital Filter" setup.

"Off"	The trigger signal is not filtered.
"LF reject"	Frequencies below 50 kHz are rejected, higher frequencies pass the filter.
"RF reject"	Frequencies higher than 50 kHz are rejected, lower frequencies pass the filter.

Remote command:
`TRIGger<t>:ANEDge:FILTer` on page 1539

Slope
Sets the edge type for the trigger condition.

"Positive"	Selects the rising edge, which is a positive voltage change.
"Negative"	Selects the falling edge, which is a negative voltage change.
"Both"	Selects the rising as well as the falling edge. This option is not available if the trigger source is the external trigger input.

Remote command:
`TRIGger<t>:EDGE:SLOPe` on page 1472
`TRIGger<t>:ANEDge:SLOPe` on page 1541
`TRIGger<t>:SLEW:SLOPe` on page 1483

Trigger level
Sets the voltage level for the trigger condition. You can also drag the trigger level marker on the display (TA or TB on the right edge of the display). The range of the trigger level is limited in a way so that always a hysteresis for stable trigger conditions is available.


Remote command:
`TRIGger<t>:LEVel<n>[:VALue]` on page 1471

6.11.2 Probe setup for external trigger input

Access: "Trigger" > "Setup" > "Source" = "Extern" > "Setup external probe"

The "External Trigger Probe" tab provides all settings that are relevant for the probe that is connected to the external trigger input. The functionality on the tab changes according to the type of the attached probe. They are the same as for probe setup of input channels: see Section 5.6, "Probes", on page 147.

If the external trigger input is overloaded, a message informs you.

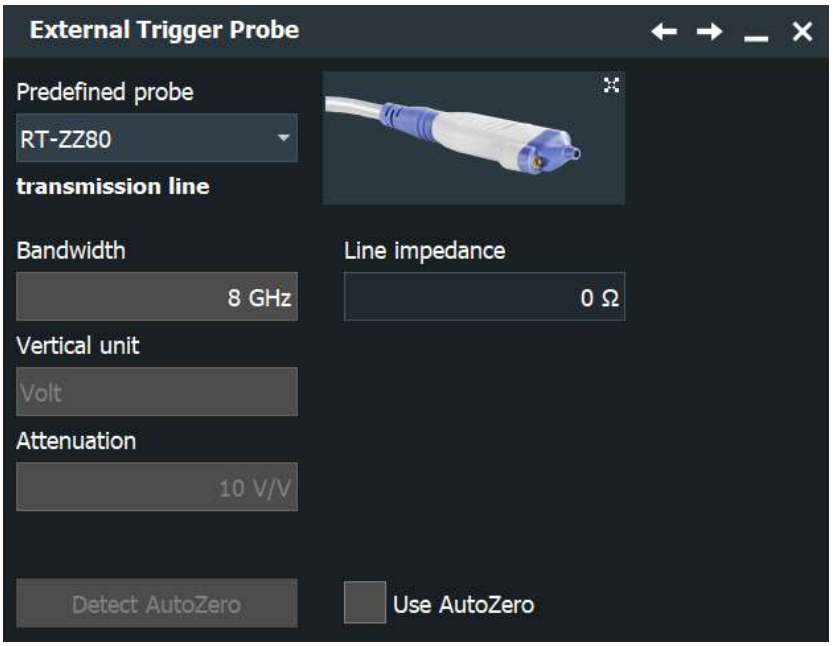

Remote commands:

- TRIGger<t>:EXTern:OVERload on page 1541
- TRPRobe:ID:PARTnumber? on page 1442
- TRPRobe:SETup:STATe? on page 1415
- TRPRobe:SETup:TYPE? on page 1416
- TRPRobe:SETup:ATTenuation:DEFProbe on page 1436
- TRPRobe:SETup:ATTenuation:MANual on page 1424
- TRPRobe:SETup:ATTenuation:MODE on page 1424
- TRPRobe:SETup:ATTenuation:UNIT on page 1424
- TRPRobe:SETup:ATTenuation[:AUTO]? on page 1417
- TRPRobe:SETup:NAME? on page 1416
- TRPRobe:SETup:BANDwidth? on page 1416
- TRPRobe:SETup:CMOFfset on page 1425
- TRPRobe:SETup:GAIN:MANual on page 1425
- TRPRobe:SETup:ZAXV on page 1426

R&S ProbeMeter: remote commands:

- TRPRobe:SETup:DISPlaydiff on page 1420
- TRPRobe:PMETer:VISibility on page 1421
- TRPRobe:PMETer:RESults:COMMon? on page 1422
- TRPRobe:PMETer:RESults:DIFFerential? on page 1422
- TRPRobe:PMETer:RESults:NEGative? on page 1422
- TRPRobe:PMETer:RESults:POSitive? on page 1423
- TRPRobe:PMETer:RESults:SINGle? on page 1421

Probe attributes: remote commands

- TRPRobe:ID:PRDate? on page 1442
- TRPRobe:ID:SRNumber? on page 1443
- TRPRobe:ID:SWVersion? on page 1442
- TRPRobe:SETup:CAPacitance? on page 1443
- TRPRobe:SETup:IMPedance? on page 1443

7 Waveform analysis

This section describes general methods to check and analyze waveforms. These methods are:

- Zoom....266
- Reference waveforms....276
- Mathematics....284
- Waveform histograms....307
- History....311
- XY-diagram....317

7.1 Zoom

The zoom functions allow you to magnify a specific section of the diagram in order to view more details. You can define several zoom areas for the same diagram and even couple them, or you use the hardware zoom.

7.1.1 Methods of zooming

The R&S RTP provides various ways of zooming: You define the section of a diagram that you want to magnify, and the zoomed view is shown in a separate zoom diagram. Additionally, you can magnify the diagram directly: The hardware zoom changes the horizontal and vertical scales of the diagram so that you see the selected section.

There are different ways to initiate and configure the zoom function:

- **Fingertip zoom**: magnifies the waveforms around your fingertip. When you drag your finger, the magnifier moves, too. You can convert the fingertip zoom into a standard zoom diagram.
- **Graphical method**: you draw, move and adjust the zoom area on the touchscreen – a very quick and simple method for standard zoom and hardware zoom.
- **Numeric method**: you enter x- and y-values in a dialog box or adjust them using navigation controls. These are precise ways which can be used to optimize a graphically defined zoom.
  With the numeric method there are two ways of defining the zoom area:
  – Specifying **start and stop values** for the x- and y-axes; the acquired data within those values is zoomed.

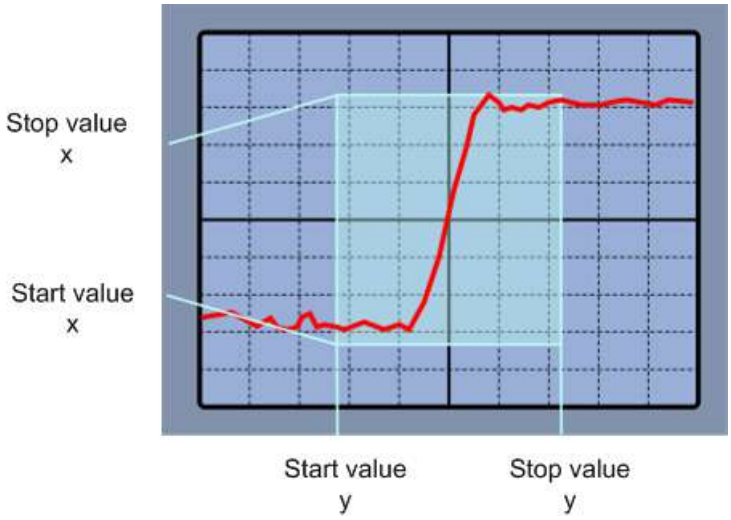


Figure 7-1: Numeric zoom using start and stop values

– Specifying the x- and y-**position** of the centerpoint of the area plus a **range** for the x- and y-axes; the area defined by that centerpoint and the ranges is zoomed.

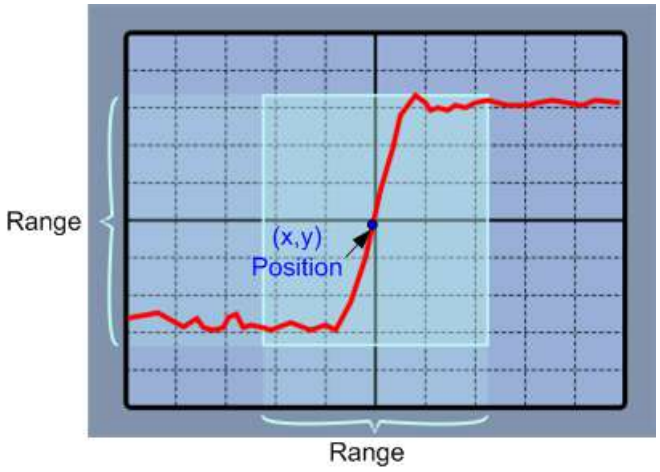


Figure 7-2: Numeric zoom using position and range

- **Coupled zoom** creates a copy of the selected zoom area. Coupled zoom areas always have the same size (size coupling). They can be positioned separately or together (position coupling).

Zoom areas can be used for gating, for example, to define a measurement gate. You can set the gate exactly to the limits of the zoom.

Evaluation gates - available histogram areas, masks, and measurement gates - can be displayed in zoom diagrams to simplify the graphical gate adjustment on the touchscreen.

See: Section 7.1.3, "Zooming for details", on page 272.

7.1.2 Zoom settings

The zoom area, i.e. the section to be enlarged, can be defined using two different methods:

- Using the zoom functions on the toolbar and draw the zoom area on the touch-screen
- Specifying numeric values:
  - start and stop values for the x- and y-axes
  - x and y position of one point in the diagram plus a range for the x- and y-axes

  See also: Section 7.1.1, "Methods of zooming", on page 266.

- Zoom functions on the toolbar.....268
- Zoom settings.....268

7.1.2.1 Zoom functions on the toolbar

The zoom icon on the toolbar shows the last selected zoom type. A short tap on the icon activates the selected zoom. If you touch the icon and drag your finger down, a menu opens where you can select another zoom type.



Standard zoom
Displays a magnified section of the diagram in an additional zoom diagram. It is a display zoom, instrument settings are not changed.

Touch and hold the zoom area to open the "Zoom" dialog box.

Remote command:
`LAYout:ZOOM:ADD` on page 1543



Hardware zoom
Changes the instrument settings - horizontal and vertical scales as well as trigger level and offset - to display a part of the diagram in greater detail.



Coupled zoom
Creates a coupled zoom area and its related zoom diagram. If you change the size of one zoom area, the size of all coupled zoom areas is changed as well.

Remote command:
`LAYout:ZOOM:ADDCoupled` on page 1543




Fingertip zoom
Magnifies the waveforms around your fingertip.

Tap the icon and put your finger on the waveform. The touched part of the waveform is displayed in a magnifier. Drag your finger on the screen to move the magnifier. You can change the zoom factor using the [Multiuse] knob.

7.1.2.2 Zoom settings

Access: "Menu" > "Horizontal" > "Zoom" tab.

The "Zoom" tab allows you to specify start and stop values for the x- and y-axes. The acquired data within these ranges is zoomed.

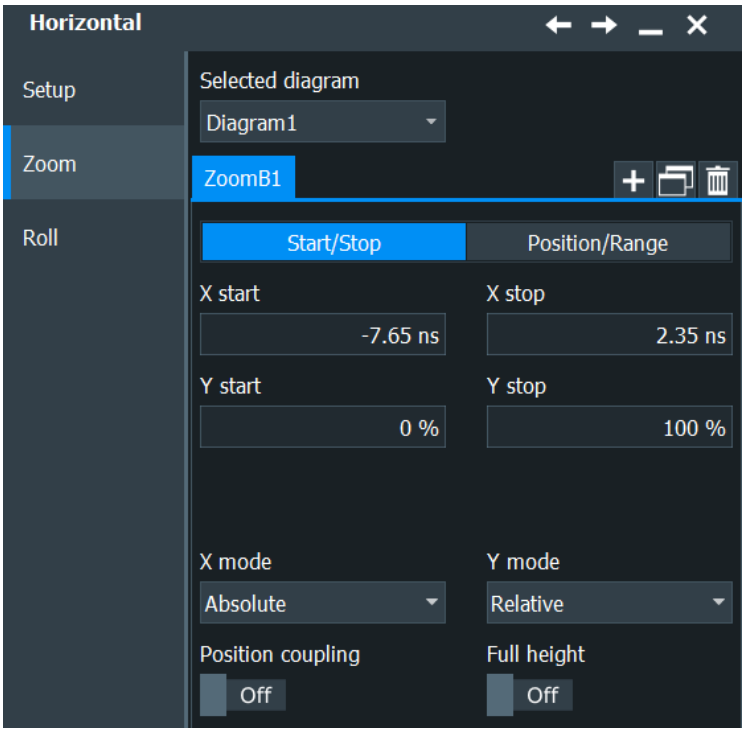


Additionally, you can enable a "Zoom Overlay" in the "Menu" > "Settings" > "Appearance" > "Diagram", see Section 4.3.4, "Diagram appearance settings", on page 83.

Selected diagram
Indicates which of the waveform diagrams is selected for zooming.

Mode
Selects how the window for the zoom diagram is defined. You can select between defining "Start/Stop" values or "Position/Range".

Start/Stop
The "Start/Stop" tab allows you to specify start and stop values for the x- and y-axes. The acquired data within these ranges is zoomed.

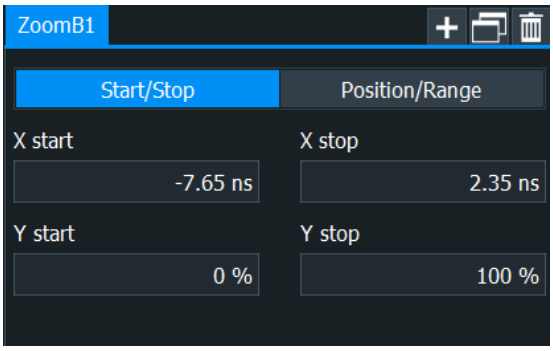

X start ← Start/Stop
Defines the lower limit of the zoom area on the x-axis.

Remote command:
LAYout:ZOOM:HORZ:ABSolute:STARt on page 1545
LAYout:ZOOM:HORZ:RELative:STARt on page 1547

X stop ← Start/Stop
Defines the upper limit of the zoom area on the x-axis.

Remote command:
LAYout:ZOOM:HORZ:ABSolute:STOP on page 1546
LAYout:ZOOM:HORZ:RELative:STOP on page 1547


Y start ← Start/Stop
Defines the lower limit of the zoom area on the y-axis.

Remote command:
LAYout:ZOOM:VERTical:RELative:STARt on page 1550
LAYout:ZOOM:VERTical:ABSolute:STARt on page 1549

Y stop ← Start/Stop
Defines the upper limit of the zoom area on the y-axis.

Remote command:
LAYout:ZOOM:VERTical:RELative:STOP on page 1551
LAYout:ZOOM:VERTical:ABSolute:STOP on page 1549

Position/Range
In the "Position/Range" tab, you specify the x and y position of center point of the zoom area plus a range for the x- and y-axes; the area defined by that point and the ranges is zoomed.

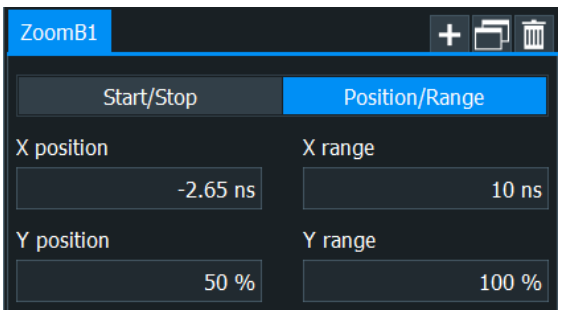

X position ← Position/Range
Defines the x-value of the centerpoint of the zoom area.

Remote command:
LAYout:ZOOM:HORZ:ABSolute:POSition on page 1545
LAYout:ZOOM:HORZ:RELative:POSition on page 1546
SEARch:RESDiagram:HORZ:ABSolute:POSition on page 1768
SEARch:RESDiagram:HORZ:RELative:POSition on page 1769

X range ← Position/Range
Defines the width of the zoom area.

Remote command:
LAYout:ZOOM:HORZ:ABSolute:SPAN on page 1545
LAYout:ZOOM:HORZ:RELative:SPAN on page 1547
SEARch:RESDiagram:HORZ:ABSolute:SPAN on page 1768
SEARch:RESDiagram:HORZ:RELative:SPAN on page 1769

Y position ← Position/Range
Defines the y-value of the centerpoint of the zoom area.

Remote command:
LAYout:ZOOM:VERTical:ABSolute:POSition on page 1548
LAYout:ZOOM:VERTical:RELative:POSition on page 1550
SEARch:RESDiagram:VERT:ABSolute:POSition on page 1770
SEARch:RESDiagram:VERT:RELative:POSition on page 1770

Y range ← Position/Range
Defines the height of the zoom area.

Remote command:
LAYout:ZOOM:VERTical:RELative:SPAN on page 1550
LAYout:ZOOM:VERTical:ABSolute:SPAN on page 1549
SEARch:RESDiagram:VERT:ABSolute:SPAN on page 1770
SEARch:RESDiagram:VERT:RELative:SPAN on page 1771

X mode
Defines whether absolute or relative values are used to specify the x-axis values.

Remote command:
LAYout:ZOOM:HORZ:MODE on page 1544
SEARch:RESDiagram:HORZ:MODE on page 1768

Y mode
Defines whether absolute or relative values are used to specify the y-axis values.

Remote command:
LAYout:ZOOM:VERTical:MODE on page 1548
SEARch:RESDiagram:VERT:MODE on page 1770

Position coupling
Enables or disables the position coupling of coupled zooms. If position coupling is enabled and you move one zoom area, the other coupled zoom areas are moved, too, and keep their distance.

Remote command:
LAYout:ZOOM:POSCoupling on page 1544

Full height
Uses the full diagram height for the zoom area. Only horizontal zoom settings can be changed.

7.1.3 Zooming for details

The usage of the various zoom methods is described in the following procedures:

- To define the zoom area graphically on the touchscreen
- To define the zoom area numerically using start/stop values
- To define the zoom area numerically using position and range values
- To define multiple zoom areas
- To define coupled zoom areas


To define the zoom area graphically on the touchscreen

For graphical zooming, you use your finger on the screen.

1. On the toolbar, tap the "Standard Zoom" icon.



2. Touch the position that you want to define as one corner of the zoom area. Then drag your finger to the opposite corner of the zoom area.
While you drag your finger on the touchscreen, a dotted rectangle indicates the current zoom area. When the rectangle covers the required zoom area, remove your finger.

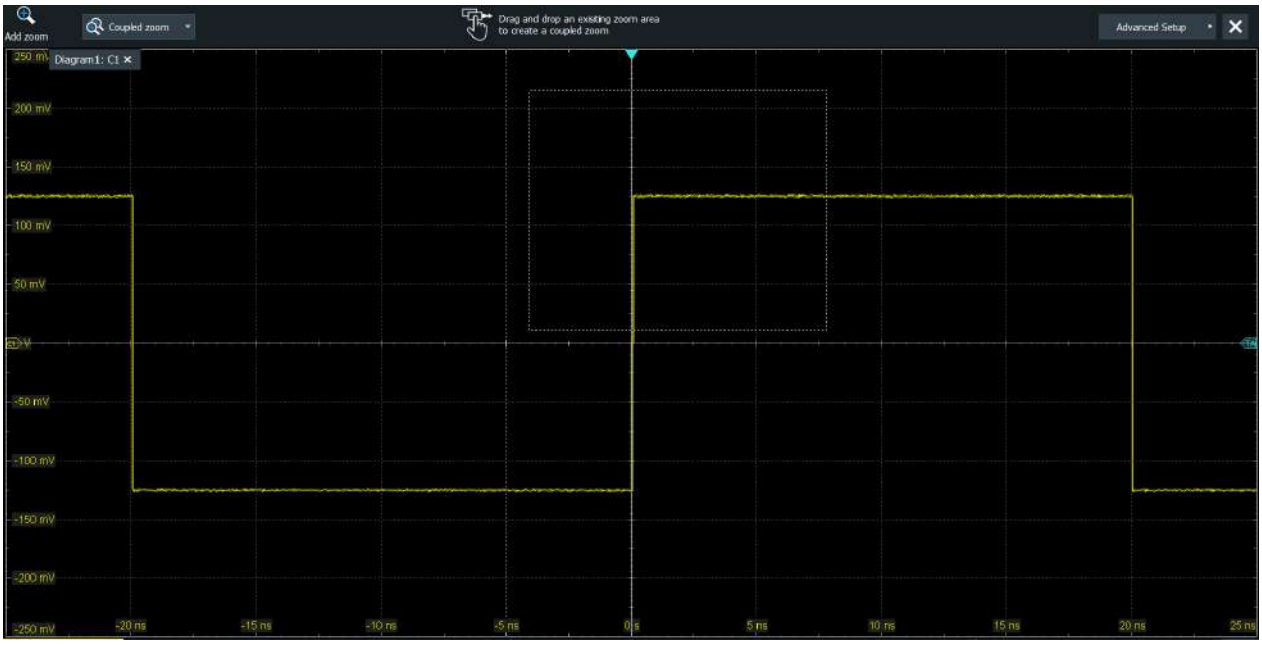

The indicated area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle.

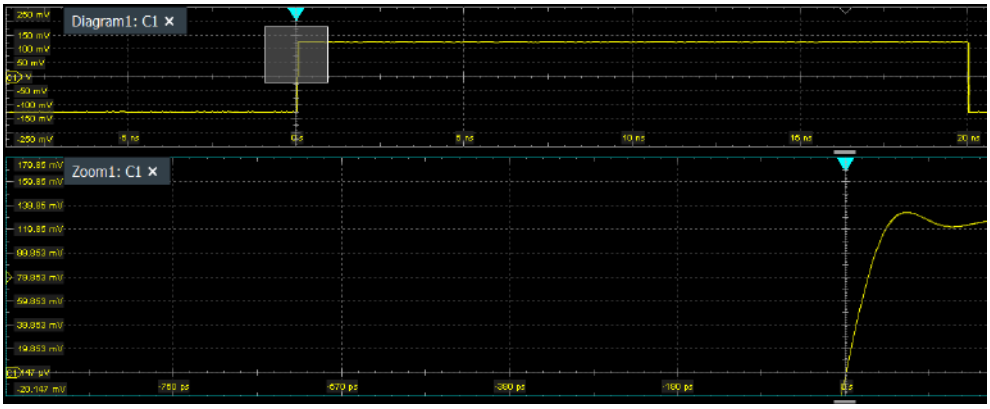


Figure 7-3: Zoom diagram and overview diagram

3. If the position of the zoom area is not correct, drag the rectangle in the overview to the correct position.
4. If the size of the zoom area is not yet ideal, tap the rectangle in the overview diagram.
   Now, 4 red lines indicate the edges of the zoom area. A dashed red line indicates the selected edge, which you can adjust.
5. Touch the edge that you want to move, and drag it to the required position.

To optimize the zoom definition of an active zoom diagram, double-tap the zoom diagram. The "Zoom" dialog box for numeric definition is opened.

To create a new zoom using the Zoom dialog box

1. There are two ways to create a new zoom:
   - If you want to create a new, unconfigured zoom, tap the "Add" icon.
     
   - If you want to create zoom based on an existing one, tap the "Copy" icon.
     
2. Enter a name for the zoom using the on-screen keyboard.

To define the zoom area numerically using start/stop values

1. On the "Menu" menu, tap "Horizontal".
2. In the "Zoom" tab, select "Start/Stop".
3. Select "X mode" to define "Absolute" or "Relative" x-axis values. Relative values cause the zoom area to adapt to the input values dynamically.
4. Define the "X start" and "X stop" values that define the lower and upper borders of the zoom area on the x-axis (see Figure 7-1).

5. Select the "Y mode" to define "Absolute" or "Relative" y-axis values.
6. Define the "Y start" and "Y stop" values that define the lower and upper borders (respectively) of the zoom area on the y-axis.

   When you close the dialog box, the specified area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle (see Figure 7-3).

To define the zoom area numerically using position and range values

1. On the "Menu" menu, tap "Horizontal".
2. In the "Zoom" tab, select "Position/Range".
3. Select "X mode" to define "Absolute" or "Relative" x-axis values. Relative values cause the zoom area to adapt to the input values dynamically.
4. Under "X position", define the x-value of the center point of the zoom area (see Figure 7-2).
5. Under "X range", define the width of the zoom area.
6. Select the "Y mode" to define "Absolute" or "Relative" y-axis values.
7. Under "Y position", define the y-value of the center point of the zoom area.
8. Under "Y range", define the height of the zoom area.

   When you close the dialog box, the specified area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle.

To define multiple zoom areas

You can define more than one zoom area for the same diagram, for example to compare several peaks in a measurement. These zoom areas can be displayed in separate zoom diagrams, or together in one zoom diagram.

To define multiple zoom areas graphically, simply repeat the steps described in To define the zoom area graphically on the touchscreen - for each area. Numerically, proceed as follows:

1. On the "Menu" menu, tap "Horizontal".
2. Select the "Zoom" tab.
3. Select the required tab according to the method you want to use to define the zoom area.
4. To copy the current zoom area definition, tap the "Copy" icon.
   Alternatively, tap the "Add" icon to add a new zoom area.
5. Enter a name for the new zoom diagram using the displayed on-screen keyboard.
6. Define the zoom area as described for the first zoom.

An additional zoom diagram is displayed for the new zoom area, and another rectangle in the original diagram indicates the new zoom area. Each rectangle in the overview has the same color as the corresponding zoom diagram frame.

7. Alternatively, you can overlay the zoom areas: The zooms are shown in the same zoom diagram, as if the zoom areas are overlaid:
In the "Settings" > "Appearance" dialog > "Diagram " tab , enable "Zoom > Overlay".

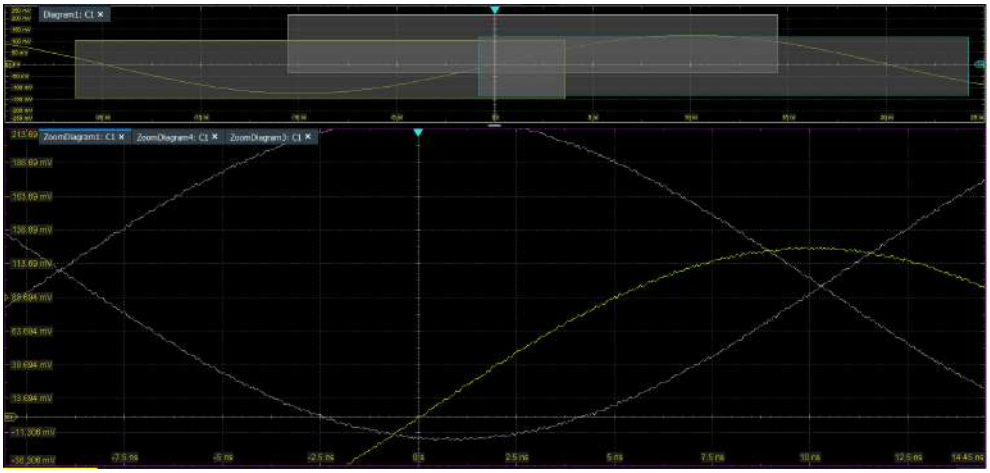


Figure 7-4: Multiple zoom diagrams. Left: separate zoom diagrams. Right: overlaid zoom

To define coupled zoom areas

You can define multiple zoom areas for one diagram that are coupled. If you change the size of one zoom area, the size of all coupled zoom areas is changed as well. Furthermore, you can couple also the position in order to move all coupled zooms at once. Coupling is useful, for example, if you want to compare recurring peaks in a signal.

1. On the toolbar, tap the "Coupled Zoom" icon.



2. In the diagram overview, tap an existing zoom area.
The selected zoom area is duplicated.
3. Drag the duplicate zoom area to the required position.
4. To create further coupled zooms, repeat the steps above.
Now, if you change the zoom area size of any of the coupled zoom areas in the "Zoom" dialog box, the settings are changed for all coupled zoom areas.
5. In the "Zoom" dialog box, select the diagram that contains the coupled zooms.
6. Select a zoom tab.
7. Enable "Position coupling".

If you move one of the coupled zoom areas in the diagram, all other coupled zooms are moved as well, and their distance is kept unchanged.

To use the hardware zoom

In contrast to the normal zoom, the hardware zoom changes the instrument settings - horizontal and vertical scales, and also the trigger level and offset. Thus, the selected area is displayed in the diagram instead of the original waveform. No additional zoom diagram is opened.

1. On the toolbar, tap the "Hardware Zoom" icon.



2. Drag your finger on the touch screen to mark the zoom area.
   A dotted rectangle indicates the current zoom area. When the rectangle covers the required zoom area, remove your finger. The diagram changes and shows the magnified area.

   Tip: To return to the previous display, use the "Undo" icon.

   Note: You can combine hardware zoom and normal zoom - first use the hardware zoom, then the zoom into the display. The reverse approach is also possible: Create a zoom diagram, and then apply the hardware zoom to the waveform diagram. Both the waveform and the zoom diagrams are changed.

7.2 Reference waveforms

You can configure up to four reference waveforms to display stored waveforms. Any active signal or mathematical waveform can be stored as a reference waveform. It can then be loaded again later to restore the waveform on the screen.

7.2.1 Working with reference waveforms

Reference waveforms can be displayed in addition to the signal waveforms, saved to file, and loaded back for further analysis. Reference waveforms can be loaded only from BIN files.

Note: Saving and loading reference waveforms, and preset with active reference waveform delete the undo stack. After these actions, undo is not possible.

To update a reference waveform using the toolbar icon


If you often need to update a reference waveform, you can use the "Save Reference" toolbar icon.

1. Add the "Save Reference" icon to the toolbar, see Section 3.3.6.2, "Configuring the toolbar", on page 57 .



2. Tap the icon.

   The overlay menu opens.



3. Set "Update" to the reference waveform to be used.
4. Tap the waveform to be used as reference waveform.

To display a reference waveform

1. In the "Menu" > "Apps" > "Analysis" tab, select "Reference Curve".
   Alternatively, press the [Ref] key.
2. Select the tab for the reference waveform you want to display ("R1"-"R4").
3. Load a stored reference waveform as described in "To load a reference waveform" on page 278, or select a source to be displayed as a reference:
   a) In the "Setup" tab, select "Signal".
   b) Select the "Source" from the selection list. The source can be any active signal, math, or other reference waveform.
   c) Tap the "Update" button to update the current reference waveform with the source data.
4. Tap the "Show" button.

   The reference waveform is displayed on the screen.
5. A reference waveform can have its own scaling settings or it can be scaled according to the source settings. By default, the scaling of the reference waveform is coupled to the source settings. Additionally, it can be stretched or compressed in vertical and horizontal direction.
   If necessary, change the settings on the "Vertical" and "Rescale" tabs of the "Reference Waveform" dialog boxes.
   To restore the original settings, tap the "Restore settings" in the "Vertical" tab.
   For a description of the scaling settings, see Section 7.2.2.4, "Rescale", on page 282

To save a reference waveform

1. In the "Save/Recall" dialog, select "Save > Waveform".

   Tip: You can also save a waveform as a reference waveform in the "File" dialog box, see Section 12.3.7, "Saving and loading waveform data", on page 520. Here, you can also save multiple waveforms in one file.
2. Select the tab for the reference waveform you want to store ("Ref1"-"Ref4").
3. Display and configure the reference waveform as described in "To display a reference waveform" on page 277.

4. Select the file format.

   Note: Reference waveforms can be loaded only from BIN files. XML and CSV formats are meant for further processing in other applications.

5. To save the waveform to the currently selected file, tap "Save". By default, the prefix for reference waveform files is "RefCurve".
   To save the waveform to another file, select "Save As".
   Enter a file name and select the directory. The file type is already defined according to the selection in the previous step. In order to load the reference waveform on the instrument again later, use the file type BIN.

   The source settings of the reference waveform and the current scaling settings are stored to the specified file.

To load a reference waveform

Note: Reference waveforms can be loaded only from BIN files.

1. Press the [Ref] key.
2. Select the tab for the reference waveform you want to load ("Ref1" - "Ref4").
3. In the "Setup" tab, select "File".
4. To load the waveform from the specified file, tap "Open".
   To load the waveform from a different file, tap "Open". Select the file from the file selection dialog box. Only BIN files are displayed in the file list.

   The selected waveform is loaded as the specified reference waveform.
   If multiple waveforms are saved in the file, you are asked to assign each waveform to a reference waveform. All waveforms are loaded together.

To view a reference waveform

► You can view a reference waveform, using the "Saveset with preview" function.
For details, see: Section 12.2.4, "Saveset with preview function", on page 494.

7.2.2 Settings for reference waveforms


To compare waveforms and analyze differences between waveforms, you can use up to four reference waveforms R1 to R4. Each reference waveform has its own memory on the instrument. You can also save an unlimited number of reference waveforms and load them for further use.

The display of a reference waveform is independent from the display of the source waveform; you can move, stretch and compress the curve vertically and horizontally.

7.2.2.1 Reference waveform setup

Access: [Ref] key > "Setup" tab

In the "Setup" tab, you select the reference waveform and its source. The source can be an active waveform - trace of an input channel, math waveform or another reference waveform - or a stored waveform.

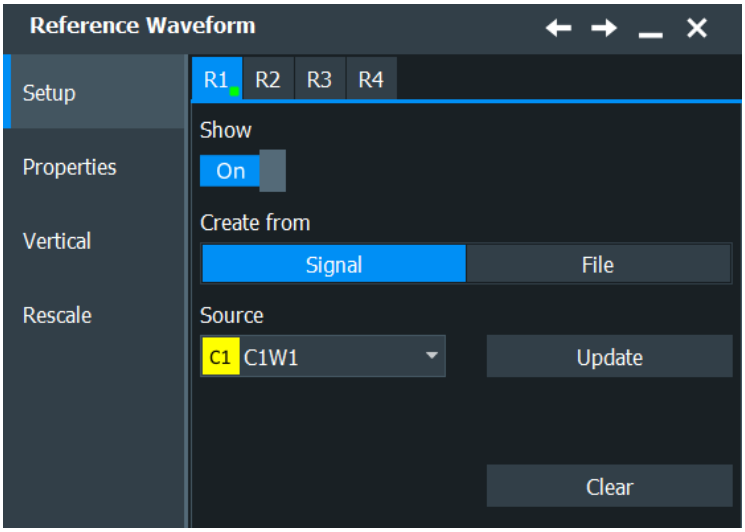

R1/2/3/4 279
Show 279
Signal 279
Source 279
Update 280
File 280
Clear 280

R1/2/3/4
Each tab contains the settings for one of the four available reference waveforms.

Show
Displays the reference waveform in the diagram.

Remote command:
`REFCurve<rc>:STATe` on page 1552

Signal
Selects a signal as the reference waveform.

Source
Selects the source signal from the active waveforms of input channels, math signals and other reference waveforms.

If the selected source is defined as average or envelope waveform, make sure that all required acquisitions ("Average count") are done before you create the reference waveform. Otherwise, the resulting reference waveform is not correct.

Remote command:
`REFCurve<rc>:SOURce` on page 1552

Update
Copies the selected source waveform with all its settings to the memory of the reference waveform. If the acquisition is running, the reference waveform is a snapshot.

Remote command:
`REFCurve<rc>:UPDate` on page 1553

File
Opens a file selection dialog box and loads the selected reference waveform file.

Double-tap the filename to open the file selection dialog box, see also Section 12.6, "File selection dialog", on page 529.

Note: Note that reference waveforms can be loaded from BIN files only. XML and CSV formats are meant for further processing in other applications.

Remote command:
`REFCurve<rc>:OPEN` on page 1553
`REFCurve<rc>:SAVE` on page 1553
`REFCurve<rc>:DELete` on page 1554


Clear
The selected reference waveform disappears, its memory is deleted.

Remote command:
`REFCurve<rc>:CLEar` on page 1554

7.2.2.2 Properties

Access: [Ref] key > "Properties" tab

A reference waveform can be scaled, stretched and positioned in the diagram. The "Original Attributes" tab shows the original settings of the reference waveform, which are stored together with the waveform data.

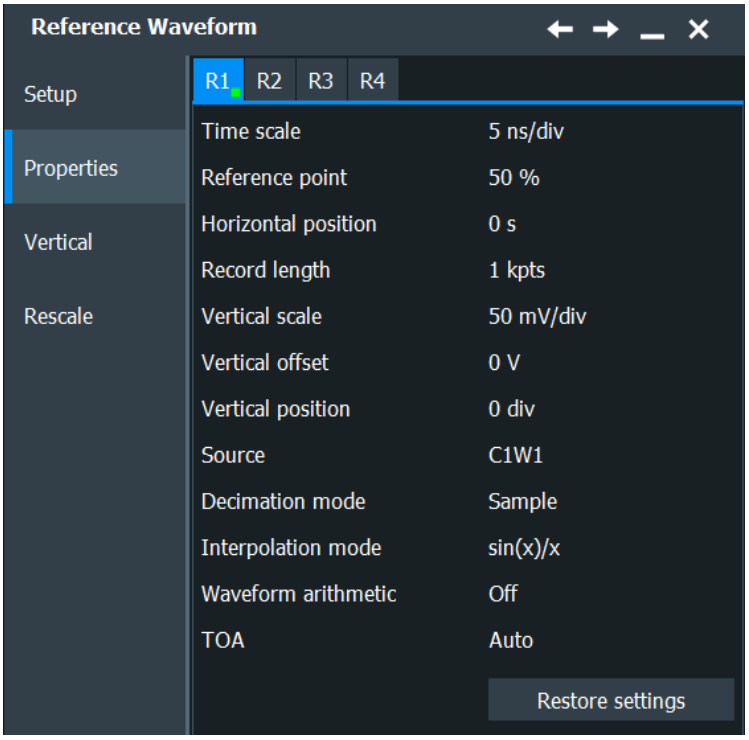


Restore Settings
Resets the time scale and the reference point to the original values of the reference waveform.

Remote command:
`REFCurve<rc>:RESTore` on page 1555

7.2.2.3 Vertical

Access: [Ref] key > "Vertical" tab

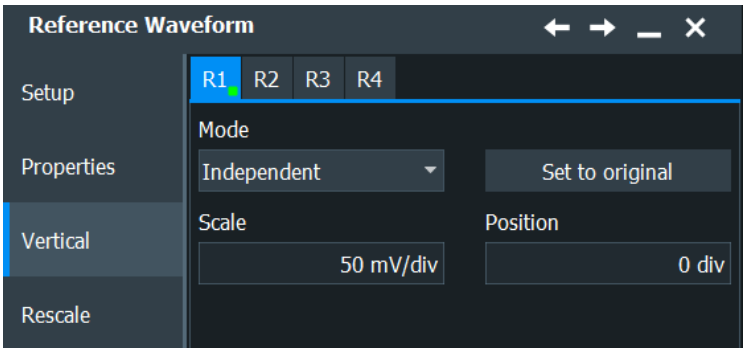

Mode
Selects the type of vertical settings:

"Coupled to source" Vertical position and scale of the source are used.

"Independent" Scaling and position can be set specific to the reference waveform.

Remote command:
REFCurve<rc>:VMODe on page 1555

Set to original
Restores the original vertical settings of the reference waveform (vertical scale, position, and offset), if vertical scaling is set to "Independent".

Remote command:
REFCurve<rc>:TOORignal on page 1556

Scale
Sets the vertical scale for the reference waveform, if vertical scaling is set to "Independent". You can also use the vertical [Scale] knob to adjust this value.


Remote command:
REFCurve<rc>:SCALe on page 1555

Position
Moves the reference waveform up or down in the diagram, if vertical scaling is set to "Independent". If "Position" is assigned to the vertical [Position] knob, you can also use this knob to adjust the "Vertical position"

Remote command:
REFCurve<rc>:POSition on page 1556

7.2.2.4 Rescale

Access: [Ref] key > "Rescale" tab

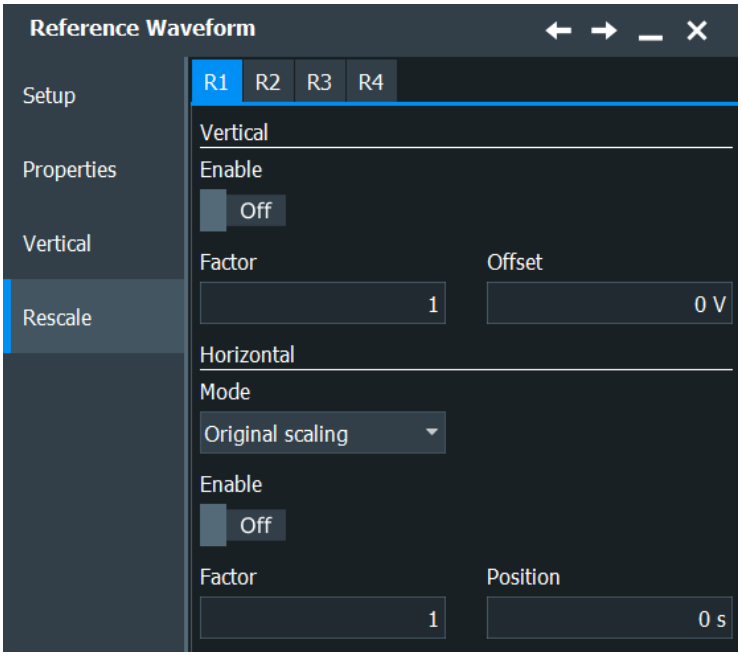

Vertical Rescaling
Stretching and offset change the display of the waveform independent of the vertical scale and position.

Enable ← Vertical Rescaling
If enabled, the vertical offset and factor are applied to the reference waveform.

Remote command:
`REFCurve<rc>:RESCale:VERTical:STATe` on page 1557

Factor ← Vertical Rescaling
A factor greater than 1 stretches the waveform vertically, a factor lower than 1 compresses the curve.

Remote command:
`REFCurve<rc>:RESCale:VERTical:FACTor` on page 1557

Offset ← Vertical Rescaling
Moves the reference waveform vertically. Enter a value with the unit of the waveform. Like vertical offset of a channel waveform, the offset of a reference waveform is subtracted from the measured value. Negative values shift the waveform up, positive values shift it down.

Note: As for all waveforms, a vertical offset of a reference waveform can be set using the vertical [Position] knob. This offset is independent from the reference scaling offset, which is described here. If both offsets are set, their values are added up.

Remote command:
`REFCurve<rc>:RESCale:VERTical:OFFSet` on page 1557

Mode ← Vertical Rescaling
Selects the type of horizontal settings:

"Adjust to X Axis"	The current horizontal settings of the diagram are used.
"Original Scaling"	Horizontal scaling and reference point of the source waveform are used.

Remote command:
`REFCurve<rc>:HMODe` on page 1558

Horizontal Rescaling ← Vertical Rescaling
Stretching and offset change the display of the waveform independent of the horizontal settings of the source waveform and of the horizontal diagram settings.

Enable ← Horizontal Rescaling ← Vertical Rescaling
If enabled, the horizontal offset and factor are applied to the reference waveform.

Remote command:
`REFCurve<rc>:RESCale:HORizontal:STATe` on page 1558

Factor ← Horizontal Rescaling ← Vertical Rescaling
A factor greater than 1 stretches the waveform horizontally, a factor lower than 1 compresses the curve.

Remote command:
REFCurve<rc>:RESCale:HORizontal:FACTor on page 1558

Position ← Horizontal Rescaling ← Vertical Rescaling
Moves the waveform horizontally. Enter a value with a time unit suitable for the time scale of the diagram. Positive values shift the waveform to the right, negative values shift it to the left.

Remote command:
REFCurve<rc>:RESCale:HORizontal:POSition on page 1559

7.3 Mathematics

Math waveforms are calculated waveforms. You can define up to eight math waveforms and display them on the screen, and use it as source for further analysis.

Math waveforms are defined by mathematical expressions (formulas). You can enter mathematical expressions using different methods:

- "Operator" tab: you define a simple math function in a graphical editor by selecting the source waveforms and the operator.
- "Equation" tab: you define sophisticated math functions in a formula editor, as required to your needs.

The result of an FFT analysis is a specific math waveform. For information on FFT and spectrograms, see Section 9, "Spectrum analysis", on page 412.

The vertical scale of a math waveform is adapted automatically to the measurement results to ensure optimal display. Furthermore, you can scale each math waveform manually in vertical direction like a channel waveform.

As for channel waveforms, you can also change the arithmetic mode for the waveform to display the envelope or an average over several calculations.

You can store a math waveform as a reference waveform and restore it later, see "To save a reference waveform" on page 277.

- Displaying math waveforms....284
- Math setup - general settings....285
- Operator editor....287
- Equation....289
- Filters....298
- Script (option R&S RTP-K39)....301
- Math scale settings....304
- Math arithmetic....305

7.3.1 Displaying math waveforms

Math waveforms can be displayed in addition to the channel and other waveforms. They also can be used for analysis, e.g. measurements, even if the math waveform is not active.


1. Tap the "+ Math" signal activator in the signal bar.
   Alternatively, press the [Math] key.
2. Define the math expression for calculation in one of the following ways:
   - Section 7.3.3.2, "Defining a formula in the Operator editor", on page 288
   - Section 7.3.4, "Equation", on page 289
   - Section 9.1.2, "Configuring spectrum waveforms", on page 416
3. In the "Math" > "Setup" dialog, activate "Display".

   The math waveform is displayed on the screen.
4. To change the vertical scaling of the math waveform, tap the "Scale" tab.
5. Set "Vertical scale mode" to "Manual".
6. Enter the "Vertical scale" factor (per division). If necessary, add a "Vertical offset". By default the instrument performs an automatic scaling.

   Tip: You can also use the vertical [Scale] rotary knob for scaling. In this case, the scale mode is set to "Manual" temporarily.
7. If you need the envelope or average of the math waveform over several calculations, change the arithmetic mode for the waveform as for channel waveforms.
   See also: "Arithmetic" on page 133.
8. Close the "Math" dialog.

7.3.2 Math setup - general settings

You can define up to eight different math waveforms. Each waveform is defined in a separate tab in the "Math" dialog box ("M1" to "M8").

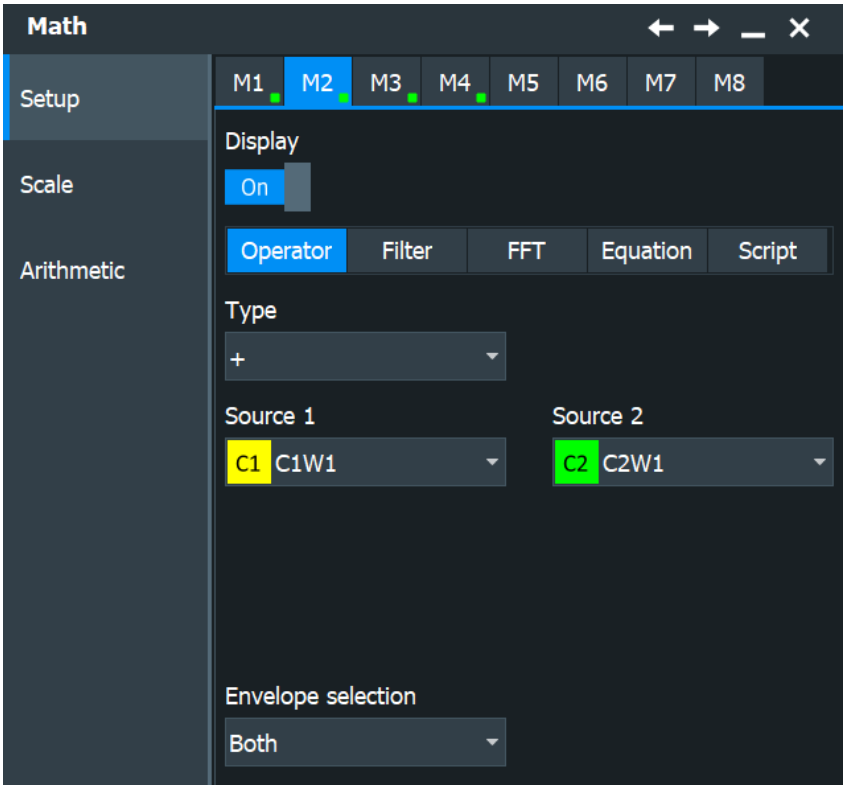

The settings for input of mathematical formulas are described in separate chapters:

- Section 7.3.3.1, "Settings in the Operator editor", on page 287
- Section 7.3.5, "Filters", on page 298
- Section 9.1.3, "FFT configuration settings", on page 420
- Section 7.3.4, "Equation", on page 289

Display 286
Envelope selection 286

Display
If activated, the defined math waveform is displayed in the diagrams.

For spectrum, the math waveform is displayed automatically if the selected source has already been captured.

Remote command:
`CALCulate:MATH<m>:STATe` on page 1565


Envelope selection
Selects the upper or lower part of the waveform for mathematic calculation, or a combination of both.

The setting is relevant for waveforms with waveform arithmetic mode "Envelope" or with "Peak detect" decimation. All mathematic operations - except for derivation - can be applied to envelope waveforms and waveforms with "Peak detect" decimation.

Remote command:
`CALCulate:MATH<m>:ENVSelection` on page 1565

7.3.3 Operator editor

In the Operator editor, you can define the most common mathematical formulas without knowing their correct syntax.

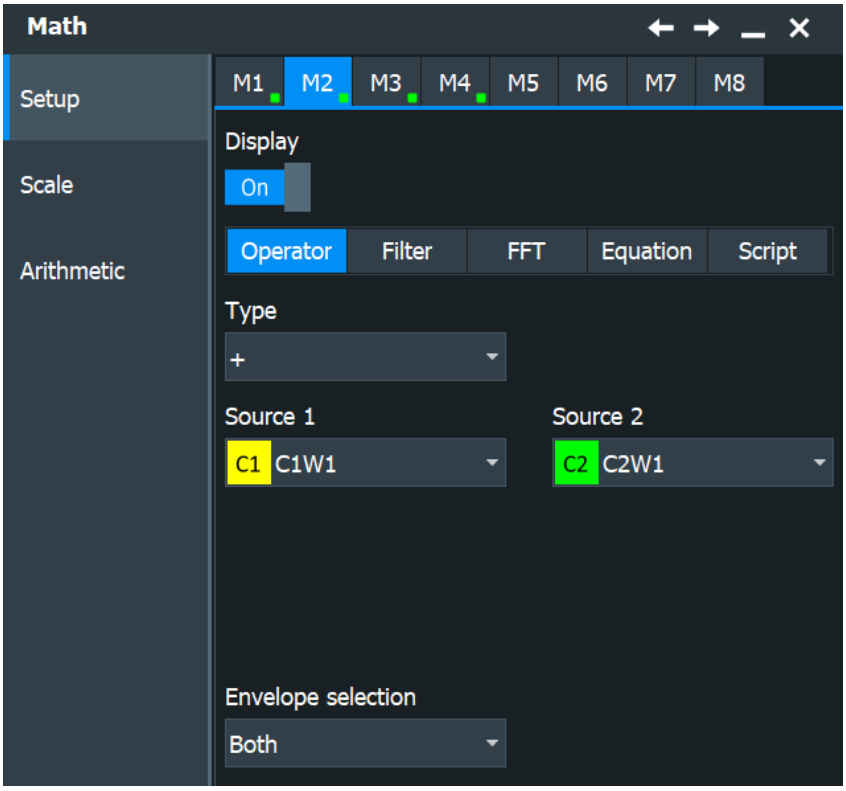

Remote command:

- `CALCulate:MATH<m>[:EXPRession][:DEFine]` on page 1564

7.3.3.1 Settings in the Operator editor

Source 1 / 2 287
Type 287
Noise reject 288
a / b 288

Source 1 / 2
Defines the signal source to be evaluated by the math function. Waveform 1 of channel signals can be selected.

Note: If you require other signal sources not listed here, use the formula editor provided in the Equation tab. Any waveform of any input channel can be used as a source. See: Section 7.3.4, "Equation", on page 289.

Type
Defines the type of operation to be performed on the selected signal sources. The following functions are available:

Note: If you require other operators not listed here, use the formula editor provided in the "Equation" tab. See: Section 7.3.4, "Equation", on page 289.

"+"	Adds up the sources
"-"	Subtracts source 2 from source 1.
"x"	Multiplies source 1 by source 2.
"|x|"	Determines the absolute value of the source.
"dx/dt"	Differentiates the source value with respect to the time value. Not possible on envelope waveforms and waveforms with "Peak detect" decimation.
"log(x)"	Calculates the logarithm of the source value based on 10.
"ln(x)"	Calculates the natural logarithm of the source value (based on e).
"ld(x)"	Calculates the binary logarithm of the source value (binary logarithm, based on 2).
"Rescale"	Rescales the source values by a factor "a" and an offset "b": *ax+b*. See also: "a / b" on page 288.

Noise reject
Only available for "Type" = "dx/dt".

Sets the number of neighboring samples that are skipped for differentiation.

To suppress noise effects during differentiation, it can be useful not to consider two directly neighboring points to calculate *dx* (x_n-x_{n-1}). Instead, some samples in-between are skipped and a point a few samples further is used (e.g. x_n-x_{n-3}).

a / b
Defines the values for the "Rescale" function (ax+b).

"a"	Multiplication factor
"b"	Offset of the signal source on the y-axis.

7.3.3.2 Defining a formula in the Operator editor

1. Open the "Menu" > "Math" dialog.
   Alternatively, press the [Math] key.
2. In the "Setup" tab, select the "Operator" tab.
3. Tap the "Source 1" and "Source 2" icons and select the signal sources to which the math function is applied. For details on available signal sources, see "Source 1 / 2" on page 287.
4. Tap the "Type" icon and select the mathematical function.
   For details on available operators, see "Type" on page 287.
5. If the operator requires additional parameters, enter them in the input fields.

7.3.4 Equation


In the Equation tab, you can enter complex formulas to define a math waveform. The formula editor helps to enter formulas easily with correct syntax, using a large selection of operators and signal sources.

All formulas in the formula editor are linear regardless whether a [dB] is set or not.

► Double-tap the Equation tab to display the formula editor.

7.3.4.1 Formula editor

Using the formula editor you can define math functions freely, using a large selection of operators and signal sources. For a procedure on using the editor, see Section 7.3.4.11, "Defining a formula in the formula editor", on page 297.

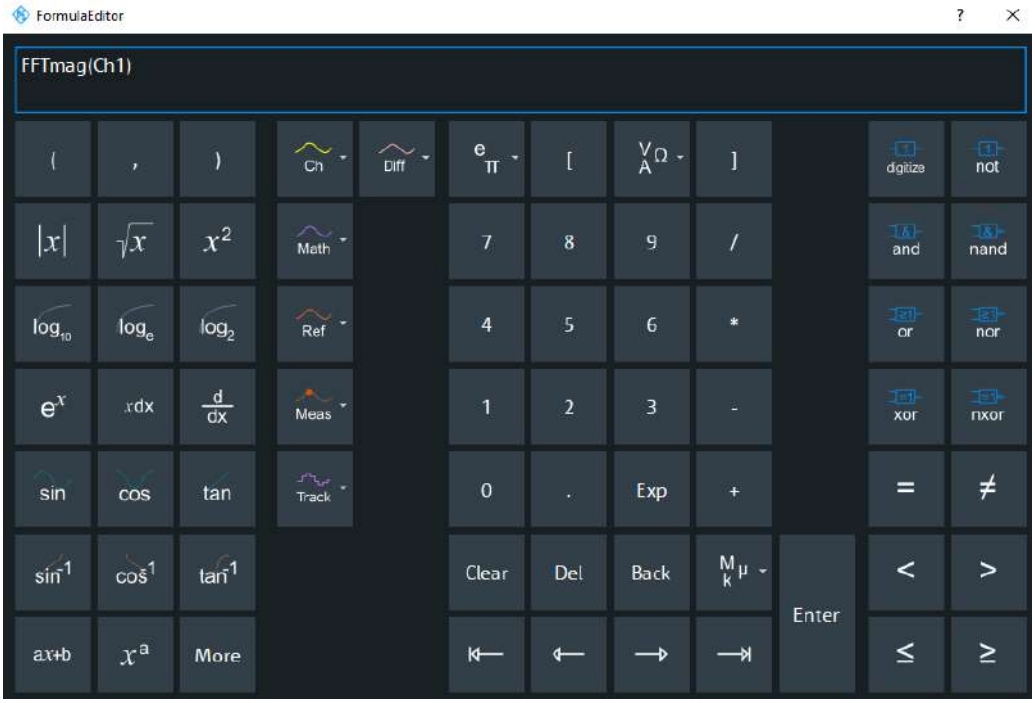

Remote command:

- `CALCulate:MATH<m>[:EXPRession][:DEFine]` on page 1564

Buttons of the formula editor and their usage

Table 7-1: Basics

Icon	Description	Usage/Comment, *FormulaEditor expression*
(	Left bracket	Enclose operands
,	Comma	Separates operands

Icon	Description	Usage/Comment, *FormulaEditor expression*
)	Right bracket	Enclose operands
e / π	Math. constants	e: Euler number: 2.7182... Pi: 3.1415...
[	Left square bracket	Enclose unit
V / A / Ω	Units	[<unit>]
]	Right square bracket	Enclose unit
x^a	Exponentiation with base x	x: base a: exponent *x^a*
/	Division	
*	Multiplication	
-	Subtraction	
+	Addition	
0...9	Numeric characters	
.	Decimal point	
Exp	Exponentiation with base 10	*e*
Enter	Expression complete	Insert expression in "Setup" dialog and close the formula editor
Clear	Clear expression in editor	Restart editing
Del	Delete	Remove the selected part of the expression
Back	Backspace	Remove the last symbol, operator or operand to the left of the cursor
M / k / µ	SI-prefix for unit	<SI-prefix>[<unit>]

Table 7-2: Signal sources

Icon	Description	Usage/Comment, *FormulaEditor expression*
Ch	Signal waveform	*Ch<1...4>Wfm<1...3>*
Math	Math waveform	*Math<1...8>*
Ref	Reference waveform	*Ref<1...4>*
Meas	Measurement waveform	*Meas<1...8>*
Track	Track waveform	*Track<1...8>*
Diff	Differential and common mode waveforms Waveforms of differential deembedding	*Diff<1...2>* *Common<1...2>*

Table 7-3: Cursor keys

Icon	Description	Usage/Comment, *FormulaEditor expression*
|←	Move cursor to beginning	
←	Move the cursor one step to the left	
→	Move cursor 1 step to the right	
→|	Move cursor to end	

7.3.4.2 Math functions: algebra

Table 7-4: Algebra

Icon	Description	Usage/Comment, *FormulaEditor expression*
|x|	Absolute x value	*abs(x)*
√x	Square root of x	*sqrt(x)*
x^2	x*x	*pow(x)*
$\log_{10}$	Decimal logarithm (base 10)	*log(x)*
$\log_e$	Natural logarithm (base e)	*ln(x)*
$\log_2$	Binary logarithm (base 2)	*ld(x)*
e^x	Exponentiation with base e	*exp(x)*
∫xdx	Integral of x	*integral(x)*
d/dx	Derivation of x	*derivation(x,y)* With x = waveform and y = number of skipped samples (noise reject)
ax+b	Scaling of x	*rescale(x,a,b)*

7.3.4.3 Math functions: trigonometry

Table 7-5: Trigonometry (More keys)

Icon	Description	Usage/Comment, *FormulaEditor expression*
sinh	Hyperbolic sine	*sinh(x)*
cosh	Hyperbolic cosine	*cosh(x)*
tanh	Hyperbolic tangent	*tanh(x)*

7.3.4.4 Math functions: bit operations

Table 7-6: Bit operations

Icon	Description	Usage/Comment, *FormulaEditor expression*
digitize	Convert to 0 or 1	*digitize(x)* The function uses the middle reference level and the hysteresis, which are set in "Menu" > "Measure" > "Advanced" tab > "Reference Level".
not	Negation	*not(x)*
and		*and*
nand	Negation of and	*nand*
or		*or*
nor	Negation of or	*nor*
xor	Exclusive or	*xor*
nxor	Negation of exclusive or	*nxor*

7.3.4.5 Math functions: comparison

Table 7-7: Comparison

Icon	Description	Usage/Comment, *FormulaEditor expression*
=	Equal	=
≠	Not equal	<>
<	Smaller	<
>	Greater	>
≤	Smaller or equal	<=
≥	Greater or equal	>=
More	Display additional keys	

7.3.4.6 Math functions: FFT


Table 7-8: FFT (More keys)

Icon	Description	Usage/Comment, *FormulaEditor expression*
|FFT|	Magnitude of FFT value	*fftmag(x)*
FFT (φ)	FFT phase value	*fftphi(x)*
FFT -dφ*df	FFT group delay	*fftgroupdelay(x)*
FFT (re)	Real part of FFT value	*fftre(x)*
FFT (im)	imag part of FFT value	*fftim(x)*


7.3.4.7 Math functions: correlation

The cross-correlation is widely used in signal processing to measure the similarity of two signals at a certain time lag. The autocorrelation is the cross-correlation of the signal with itself.

Table 7-9: Correlation (More keys)

Icon	Description	Usage/Comment, *FormulaEditor expression*
	Cross-correlation function of two waveforms Measures the similarity of two waveforms as a function of a time-lag applied to one of them. The function limits the maximum record length to 4 Mpoint. Two modes of normalization are supported: biased and unbiased. The length of the correlation buffer is $N_1 + N_2 - 1$ samples. The length of the first input signal is N_1 samples and the length of the second signal is N_2 samples.	*correlation(x1, x2, biased)* *correlation(x1, x2, unbiased)* with x1 = waveform 1 and x2 = waveform 2 *correlation(x1, x2)* performs an unbiased correlation
	Auto correlation Used to find repeating patterns, for example, a periodic signal obscured by noise. The length of the auto correlation buffer is $2N - 1$ samples, if the length of the input signal is N samples. Two modes of normalization are supported: biased and unbiased.	*autocorrelation(x, biased)* *autocorrelation(x, unbiased)* with x = channel waveform *autocorrelation(x)* performs an unbiased autocorrelation
	Biased / unbiased normalization for correlation and auto correlation	see above

Mathematic background for correlation

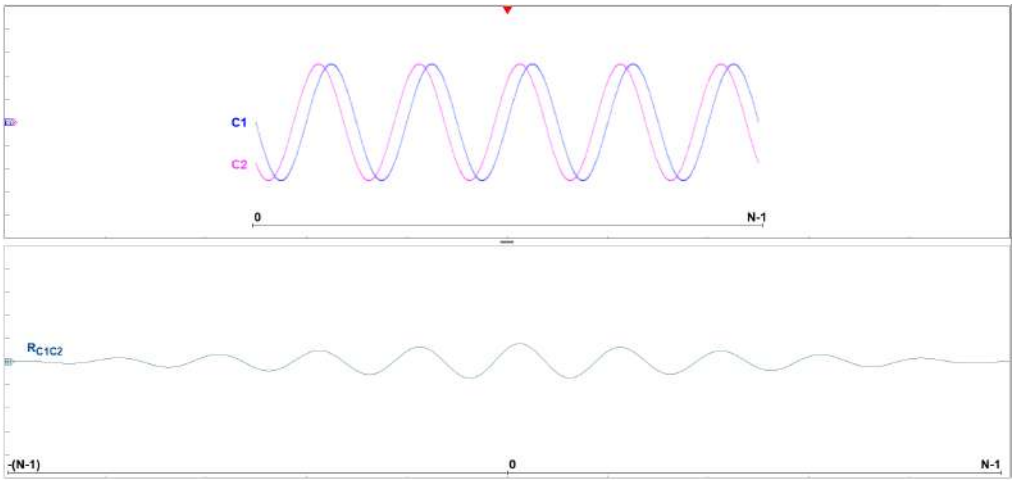

The cross-correlation without normalization R_{x1x2} is defined for two discrete signals x1 and x2 with the same length N as:

$$R_{x_1x_2}(m) = \begin{cases} \sum_{n=0}^{N-m-1} x_1(n+m)\, x_2{}^*(n) * & m \geq 0 \quad more\ precisely\ m \in [0; N-1] \\ R^*_{x_2x_1}(-m) & m < 0 \quad more\ precisely\ m \in [-(N-1); -1] \end{cases}$$

It has a length of 2N – 1. The peak value of the cross-correlation without normalization depends on the length N of the signals. To cope with this dependency, normalization is performed.

- Biased correlation:
  The biased correlation provides a correlation normalized by the *length of the signal*.
  $$R_{x_1x_2,biased}(m) = \frac{1}{N} R_{x_1x_2}(m)$$
- Unbiased correlation:
  The unbiased correlation provides a correlation normalized by the *number of samples used at each point m*. It has the advantage that its amplitude is more significant around the zero lag, however it is less significant close to the endpoints as only few samples are used.
  $$R_{x_1x_2,unbiased}(m) = \frac{1}{N - |m|} R_{x_1x_2}(m)$$

Realization in the R&S RTP

The R&S RTP supports two normalization modes: biased and unbiased. It uses only the real part of the signals.


The cross-correlation without normalization R_{r1r2} is defined for two discrete real signals r1 and r2 with the same length N and same definition domain as:

$$R_{r_1r_2}(m) = \begin{cases} \sum_{n=0}^{N-m-1} r_1(n+m)\, r_2(n) & m \geq 0 \quad more\ precisely\ m \in [0; N-1] \\ R_{r_1r_2}(-m) & m < 0 \quad more\ precisely\ m \in [-(N-1); -1] \end{cases}$$

- Biased correlation:
  $$R_{r_1r_2,biased}(m) = \frac{1}{N} R_{r_1r_2}(m)$$
- Unbiased correlation:
  $$R_{r_1r_2,unbiased}(m) = \frac{1}{N - |m|} R_{r_1r_2}(m)$$

The autocorrelation has the same definitions with r2= r1.

Graphical explanation of the computation:

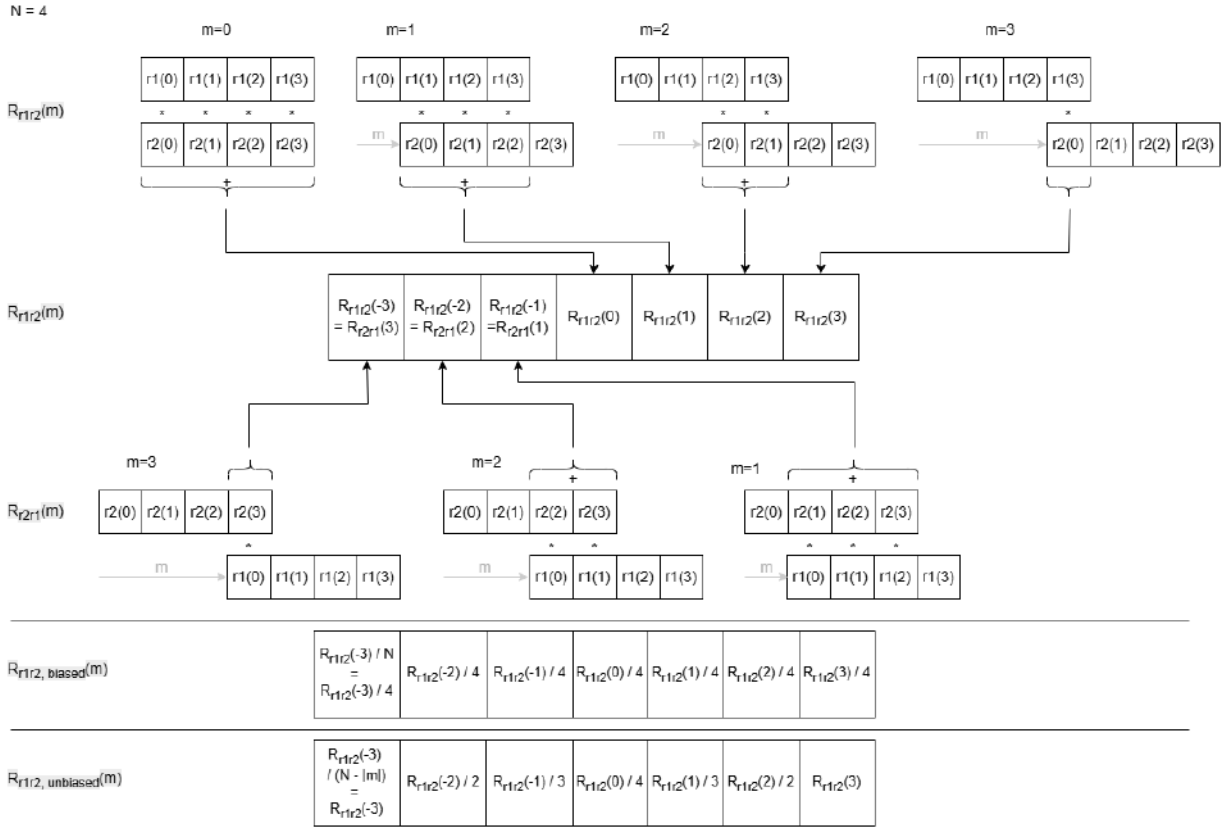

7.3.4.8 Math functions: filter and power

Table 7-10: Filter and power (More keys)

Icon	Description	Usage, comment, *FormulaEditor expression*
	Electric power	Electric power is calculated from voltage, based on measurement impedance (see Impedance) *elecpower(x)* = U^2/R
	Finite impulse response (FIR) filter	*FIR(tpye,source,limit,shape)* or *FIR(userdef,source,path)* See Section 7.3.5.2, "FIR filter in the formula editor", on page 300
	Type of FIR filter	*highpass* or *lowpass*, see FIR filter

Icon	Description	Usage, comment, *FormulaEditor expression*
	Characteristics of FIR filter	*gaussian* or *rectangle*, see FIR filter
	Moving average	Calculates a mean value of several adjacent sample points. The result is a smoothed waveform. The moving average uses the full data and can be used for non-periodic signals. It works like a lowpass filter and increases the vertical resolution at the expense of bandwidth reduction. *MovingAverage(x,y)* with: x = source (channels only), y = number of samples to be averaged Example: *MovingAverage(Ch1Wfm1,1000)* Averages 1000 subsequent samples of the channel 1 waveform

7.3.4.9 Math functions: CDR

The clock data recovery function requires at least one of the options R&S RTP-K12, or R&S RTP-K133, or R&S RTP-K134.

Table 7-11: Clock data recovery (More keys)

Icon	Description	Usage/Comment, *FormulaEditor expression*
	CDR: displays the generated clock signal as math waveform	Software 1: *CDR(sw1,<x>)* Software 2: *CDR(sw2,<x>)* where <x> is the signal from which the clock is recovered Reference n: *CDR(R<n>)* where <n> = 1 to 4 is a loaded reference file that contains CDR information Example: *CDR(sw1,CH2Wfm1)* See also: Section 19.3.2, "Displaying the recovered clock signal", on page 1156

7.3.4.10 Transfer functions of a step-like signal

The R&S RTP provides two functions to calculate the transfer function of a system out of its step response. These functions are not supported by the formula editor, but you can enter them directly in the "Advanced" tab in the "Math Setup" dialog box. To enter the formula, you need a keyboard (on-screen keyboard or a connected usual one).

Math expression	Description
Step2FreqRespNormMag(x,points) Where: ● x is the waveform (channel, math, reference) ● points are the number of points in the resulting math waveform (min. 1000 points)	Normalized magnitude of transfer function in frequency domain Example: *Step2FreqRespNormMag(Ch1,2000)*
Step2FreqRespNormPhi(x,points,time offset) Where: ● x is the waveform (channel, math, reference) ● points are the number of points in the resulting math waveform (min. 1000 points) ● Time offset in s	Normalized phase of transfer function in frequency domain Example: *Step2FreqRespNormPhi(Ch1,2000,2e-9)*

The calculation of transfer functions has several steps:

- Calculate the frequency domain representation of a step-like signal. A detailed description is given in: A. M. Nicolson, „Forming the fast Fourier Transform of a step response in Time-Domain Metrology,“ in Electronic letters, Bd. 9, Nr. 14, p. 317, 1973.
- Calculate the derivative to convert the result to the transfer function.
- Normalize the result at DC to a magnitude of 1 V and subtract the specified time offset from phase.

The step-like signal to be analyzed is a time domain waveform, and the result is a math waveform in the frequency domain.

To get useful results, check and adjust the following settings:

1. Place the analyzed step of the signal in the left half of the time domain diagram. Use the "Reference point" or the horizontal "Position" of the trigger to move the signal.
   See also: Section 5.4, "Acquire settings", on page 128.
2. Adjust the record lengths of the source signal and the math signal. The "Record length" of the step-like source signal must be shorter than the number of points in the resulting math function, which is set in the formula. See also: "Record length" on page 129.
3. If the resulting math waveform is noisy, increase the "Average count" for the source signal until the waveform is clear.
   See also: Section 5.4.2, "Mode settings", on page 131.

7.3.4.11 Defining a formula in the formula editor

1. Open the "Menu" > "Math" dialog.
2. Select the Equation tab.
3. Double-tap the editing area.

   The "Formula Editor" is displayed.

4. Enter the math formula including all required signal sources and operators by selecting the corresponding keys in the editor. For details on the available keys, see Section 7.3.4.1, "Formula editor", on page 289.
5. To insert a physical unit in the formula, proceed as follows:
   a) If necessary, insert a decimal prefix using the "M/k/µ" key.
   b) Insert an opening square bracket using the "[" key.
   c) Insert the physical unit using the "V/A/Ω" key.
   d) Insert a closing square bracket using the "]" key.

   The resulting expression could be, for example: `m[V]`
6. To perform a rescaling function, proceed as follows:
   a) Select the rescaling function using the "ax+b" key.
   b) Behind the left bracket, insert the signal source using one of the following keys:
      - "Ch" for a channel
      - "Math" for a math function
      - "Ref" for a reference waveform
      - "Meas" for a measurement
   c) Insert a comma using the "," key.
   d) Insert the "a" value, i.e. the scaling factor, using the number keys.
   e) Insert a comma using the "," key.
   f) Insert the "b" value, i.e. the scaling offset, using the number keys.
   g) Insert the closing bracket using the ")" key.

   The resulting expression could be, for example: `rescale(Ch1Wfm1,3,4)`

7.3.5 Filters


The R&S RTP provides several ways to filter the input signal:

- Lowpass filter by selecting a bandwidth limit in the acquisition path (vertical channel settings)
  Available with probe adapter R&S RT-Z1M, see Section 5.6.11.1, "Channel settings with connected adapter", on page 177
- Digital lowpass filter
  See Section 5.5.5, "Digital filter setup", on page 146
- FIR filter to create a filtered math waveform (lowpass, highpass, bandpass)
  You can set up a FIR-filtered math waveform in the basic math editor, or in the advanced editor. Both ways are described below in this section.

7.3.5.1 FIR filter in the math setup

Access: "Math" > "Setup" tab > "Filter" tab.

The finite impulse response filter is a filter to create filtered waveforms with lowpass, highpass, or bandpass. The filter requires additional settings.

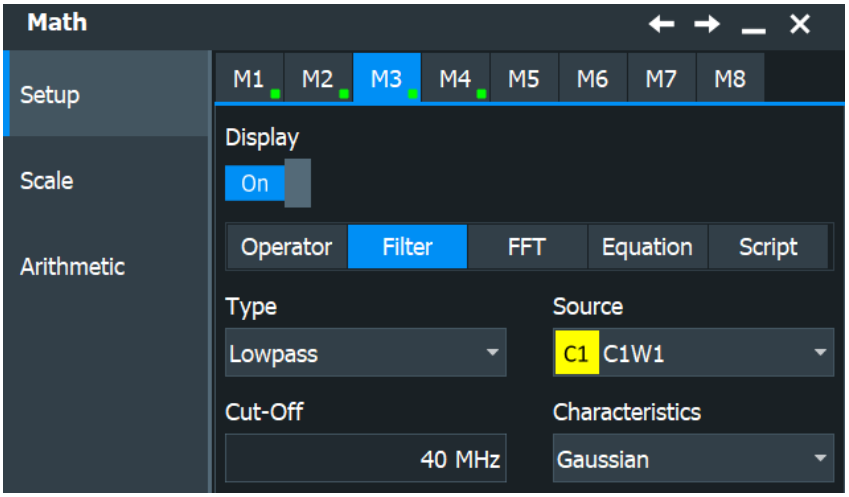

- "Type": defines whether the FIR filter is a highpass, lowpass, or bandpass/bandstop (= "User defined") filter.
- "Cut-Off": sets the limit frequency for the highpass or lowpass FIR filter.
- "Characteristics": defines if the filter has a Gaussian or a rectangular shape.
- "Select filter file": relevant for user-defined bandpass/bandstop filter. Opens a file dialog to select the file with the filter coefficients.

Cutoff frequency for lowpass FIR filter

The cutoff frequency depends on the horizontal resolution and the filter characteristics. The frequency for the lowpass filter can only be set in this range:

f_g_3dB = (0.001 ... 0.2) f_a_in* for Gaussian FIR filter

f_g_3dB = (0,001 ... 0.4) f_a_in* for rectangular FIR filter

Where: *f_g_3dB* = cutoff frequency to be set for the lowpass filter, and *f_a_in* = reciprocal of the resolution, or sample rate.

Cutoff frequency for highpass FIR filter

To check the limit frequency for the highpass filter, convert it to an equivalent lowpass frequency:

f_LP = f_a_in/2 - f_HP

Where f_HP is the requested highpass limit frequency and f_LP the equivalent lowpass frequency that has to comply with the limits given above.


User-defined bandpass and bandstop FIR filter: CSV file

To define a bandpass or bandstop, you need a CSV file that contains the filter coefficients. The maximum number of filter coefficients is 2 048 000 taps. The coefficients can be written comma-separated in one row, or vertically in one column. No other parameters are allowed in the file.

To create the CSV file, we recommend using the MATLAB Filter Design & Analysis tool. In the tool, enter the filter type, filter order and filter frequencies. Alternatively, you can create the filter and the CSV file with Python.

Make sure to set the sample frequency in MATLAB or Python and the sample rate at the oscilloscope to the same value. If the values differ, the filter is shifted in frequency.

In R&S RTP, in the "Math" > "Setup" > "Filter", select the filter "Type" = "User defined", and load the CSV file.

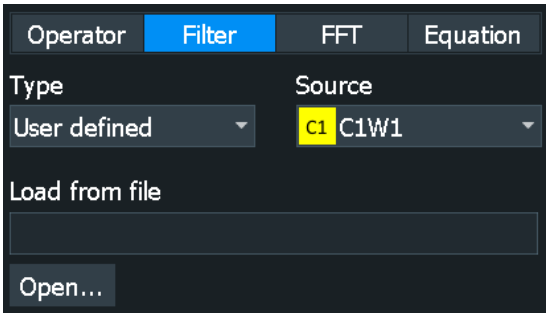

7.3.5.2 FIR filter in the formula editor

You can type the FIR filter formula directly in the "Equation" tab, or open the formula editor and use the buttons to create the formula.

Highpass and lowpass FIR filter

The general syntax for highpass and lowpass filters is:

FIR(tpye,source,limit,shape)

- Type is *lowpass* or *highpass*
- Source is the input channel of the signal.
- Limit is the cutoff frequency. Consider the range of possible values, see "Cutoff frequency for lowpass FIR filter" on page 299.
- Shape is *gaussian* or *rectangle* for the lowpass and highpass filter.

► For example, to set a rectangle lowpass filter on channel 1 with 10 MHz cutoff frequency, enter:
FIR(lowpass,Ch1,1e+07,rectangle)

► For example, to set a Gaussian highpass filter on channel 2 with 3 GHz cutoff frequency, enter:
FIR(highpass,Ch2,3e+09,gaussian)

Bandpass and bandstop FIR filter

The syntax for the bandpass filter is:

FIR(userdef,source,path)

- Source is the input channel of the signal.

- Path is a string containing the path and filename of the filter file. The file contains the comma-separated filter coefficients.

► For example, to set a bandpass on channel 1 with filter coefficients saved in the `bandpass.csv` file, enter:
FIR(userdef,Ch1,"C:\Users\Public\Documents\Rohde-Schwarz\RTx\bandpass.csv")

7.3.6 Script (option R&S RTP-K39)


The user-defined math option R&S RTP-K39 provides a Python interface to apply Python scripts to the waveform processing. The script replaces the math function and calculates the math waveform, which can be displayed. The scripts are executed whenever a trigger occurs.

Scripts can provide solutions that exceed the scope of the math functionality, for example, display the Allen variance of a chirped radar signal to verify the clock stability.

For script-created math waveforms, scaling in the "Scale" tab is not available. The scaling is defined in the script.

7.3.6.1 Script settings

Access: "Math" > "Setup" tab > "Script" tab.

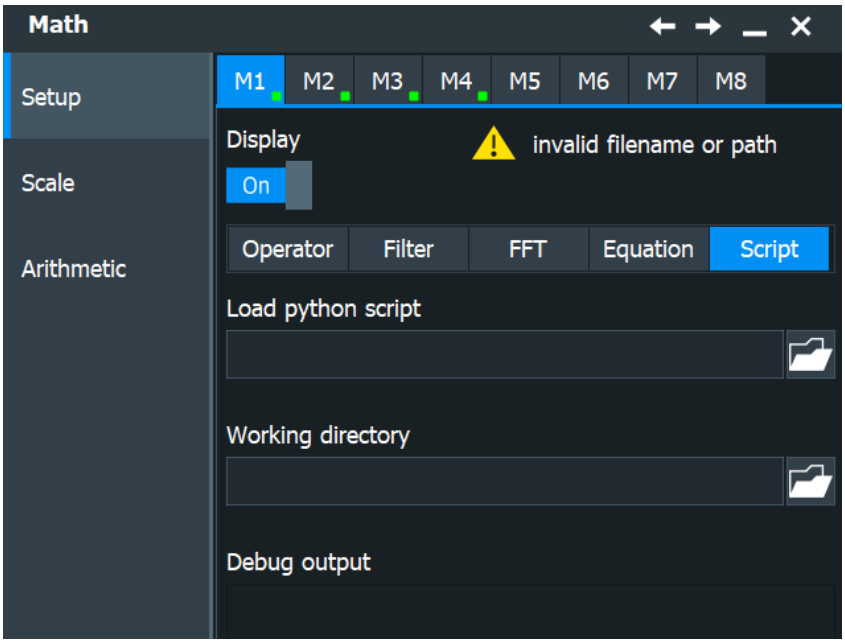

Load Python script
Opens a file explorer, where you select the script file to be executed. The script is loaded. To reload the script, e.g. after changing it, select the Operator tab, and then again the "Script" tab.

Working directory
Opens a file explorer, where you select a folder to save result and temporary data.

Debug output
Shows information on errors and problems in the script. The debug output is also the console output of the script, e.g. print commands are displayed here.

7.3.6.2 Python scripts

To create Python scripts that can run on R&S RTP, consider the following rules and requirements.

Basics

Each script requires as a minimum the import of ctypes, array, and numpy:

```
import ctypes as ct
import array
import numpy as np
```

The class name must be the same as the filename. Special characters are forbidden. Example: if the filename is `addC1C2.py`, the class is declared as `class addC1C2:`.

Each script requires the `__init__, setup, execute, teardown`, and `requirements` functions:

```
def __init__(self):
    print('__init__ called')

def setup(self):
    print('setup called')

def execute(self):
    # executed at trigger event

def teardown(self):
    print('teardown called')
    # reset of variables, called when output math waveform is deactivated

def requirements(self):
    # input and output variables
```

Requirements

In the requirements part, the variables for the execute part are defined, and also the settings of the output math waveform. The output settings are mandatory, even if they are not needed, e.g. if the resulting waveform is saved to file.

```
def requirements(self):
         return {
             "input" : {
                     "sources" : {SignalSource.C2, SignalSource.C1},
```

```
    },
"output" : {
        "domain" : "time",
        "unit" : "V",
        "verticalScale" : 0.08,
        "verticalOffset" : 0.01,
    }
}
```

Execute

The execute part is called every time when a trigger occurs. The main functions in math scripts are:

```
getInput(SignalSource.Cx) # e.g. SignalSource.C1
getOutput()
getHorizontalSetting() # e.g. xStart, xStop, Resolution
getSystemSettings() # e.g. IP, DeviceID, FW Version
```

The waveforms must be declared as numpy arrays, e.g.

```
ch1 = np.array(view.cast('f'), copy=False)
```

To write the script results to a file, use the following:

```
np.savetxt('C1_waveform.csv', ch1, delimiter=',')
```

Script handling

The script is executed when a trigger occurs AND the last script execution has finished.

Bugs in the script can cause long calculation times or infinite loops. To prevent a blocking of the oscilloscope, the script is closed after a time limit of 10 s.

When you have changed a loaded script, you must reload the script. Select the Operator tab, and then again the "Script" tab.

Example:

The script adds C1 and C2 and displays the result as math waveform M1.

```
import ctypes as ct
import array
import numpy as np

class addC1C2:

    def __init__(self):
         print('__init__ called')

    def setup(self):
        print('setup called')


    def execute(self):
        (type, view) = getInput(SignalSource.C1)
        ch1 = np.array(view.cast('f'), copy=False)
        (type, view) = getInput(SignalSource.C2)
        ch2 = np.array(view.cast('f'), copy=False)
        (type, view) = getOutput()
        M1[:] = ch1 + ch2

    def teardown(self):
        print('teardown called')

    def requirements(self):
        return {
            "input" : {
                    "sources" : {SignalSource.C2, SignalSource.C1},
                },
            "output" : {
                    "domain" : "time",
                    "unit" : "V",
                    "verticalScale" : 0.08,
                    "verticalOffset" : 0.01,
                }
            }
```

7.3.7 Math scale settings

Access: [Math] > "Scale" tab.

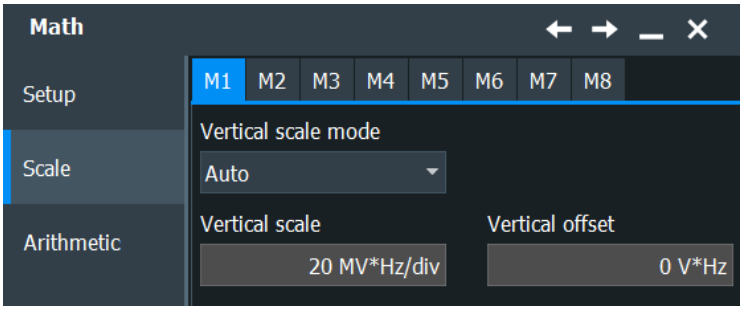

In this tab, you can find functions to set the vertical parameters of the math waveform.

For FFT scale settings, see Section 9.1.4, "FFT scale settings", on page 429.

Vertical scale mode (Manual/Auto)
By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Note: When you change the scaling values manually using the "Scale" rotary knob, the scale mode is set to "Manual" temporarily. When you edit the math function, scaling is automatically set back to "Auto" mode. "Manual" mode is only maintained during math function changes if you select it yourself.

"Manual" Enter the required values for "Vertical scale" and "Vertical offset". For FFT, set "Vertical range" and "Vertical maximum".

"Auto" "Vertical scale" and "Vertical offset" are read-only. For FFT, only the "Vertical maximum" is read-only.

Vertical scale
Defines the scale of the y-axis in the math function diagram. The value is defined as "<unit> per division", e.g. *50m V/div*. In this case, the horizontal grid lines are displayed in intervals of 50 mV.

If the "Vertical scale mode (Manual/Auto)" on page 305 is set to "Auto", this setting is read-only.

Remote command:
`CALCulate:MATH<m>:VERTical:SCALe` on page 1567


Vertical offset
Sets a voltage offset to adjust the vertical position of the math function on the screen. Negative values move the waveform, positive values move it down.

If the "Vertical scale mode (Manual/Auto)" on page 305 is set to "Auto", this setting is read-only.

Remote command:
`CALCulate:MATH<m>:VERTical:OFFSet` on page 1566

7.3.8 Math arithmetic

Access: [Math] > "Arithmetic" tab.

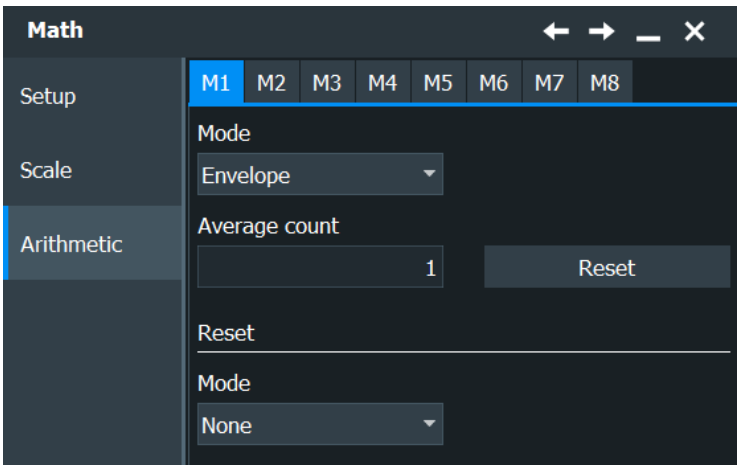

In this tab you can specify the waveform arithmetic for the math waveforms.

Mode
Waveform arithmetic builds the resulting waveform from several consecutive acquisitions and subsequent math calculations of the signal. For details, see "Arithmetic" on page 133.

"Original"	The original results are displayed.
"Envelope"	The envelope curve of all acquired and calculated results is displayed.
"Average"	The average of all acquired and calculated results is displayed.
"RMS"	The root mean square of the math data is displayed. The result is the average power spectrum. If you measure the channel power on this RMS spectrum, you get the same result as for the average channel power measurement on waveforms.
"MinHold"	Determines the minimum result for each input value from the data of the current acquisition and some acquisitions before.
"MaxHold"	Determines the maximum result for each input value from the data of the current acquisition and some acquisitions before.

Remote command:
`CALCulate:MATH<m>:ARIThmetics` on page 1566

Average count (N-single count)
Access:
- "Menu" > "Acquire" > "Setup" tab > "N-single count"
- "Menu" > "Acquire" > "Mode" tab > "Average count"
- "Menu" > "Acquire" > "Segmented" tab > disable "Acquire maximum" > "Required"
- [Math] > "Arithmetic" tab > "Mode" is not "Off" > "Average count"

The acquisition and average count has several effects:
- It sets the number of waveforms acquired with [Single]
- It defines the number of waveforms used to calculate the average waveform. Thus, the instrument acquires sufficient waveforms to calculate the correct average if "Average" is enabled for waveform arithmetic. The higher the value is, the better the noise is reduced.

- It sets the number of acquisitions to be acquired in a fast segmentation acquisition series. Thus, you can acquire exactly one fast segmentation acquisition series with [Single].
  If fast segmentation is enabled and configured to acquire the maximum number of acquisitions, the acquisition count is set to that maximum number and cannot be changed.
  See also "Number of acquisitions" on page 135.
- It is the "Finished" criteria for the state of a mask test.

Remote command:
`ACQuire:COUNt` on page 1400

Reset
Forces the immediate restart of the envelope and average calculation for all waveforms.

Remote command:
`ACQuire:ARESet:IMMediate` on page 1399

Arithmetic Reset > Mode
Defines when the envelope and average evaluation restarts.

"None"	No restart, the number of acquisitions considered by the waveform arithmetics is not limited.
"Time"	Restarts the envelope and average calculation after the time defined in "Time".
"Waveforms"	Restarts the envelope and average calculation after a number of acquired waveforms defined in "Count".

Remote command:
`ACQuire:ARESet:MODE` on page 1399
`ACQuire:ARESet:TIME` on page 1399
`ACQuire:ARESet:COUNt` on page 1400

7.4 Waveform histograms

7.4.1 Histogram characteristics


Histograms are used to plot density of data, i.e. to display graphically how often which signal values occur. The histogram can be based on the input signal levels (amplitudes) or the timebase in a time domain measurement, or on frequencies or frequency levels in a spectrum measurement. They are a prerequisite for histogram measurements.

Depending on which data the histogram is based on, a vertical or horizontal histogram can be selected. A vertical, or amplitude, histogram displays horizontal bars across amplitude values. A horizontal or time/frequency histogram displays vertical bars over time/frequencies.

You can define up to 8 histograms in a diagram, one of them is displayed. They can be created quickly using toolbar icons, or in the "Meas" menu > "Histogram" dialog box. To switch the histogram display, tap the required histogram area, or select it in the "Histogram" dialog box. For histogram measurements, the measured histogram is selected independently in the measurement setup.

In a histogram, the maximum count of a waveform value is assigned to the full height (histogram peak). All other count values are displayed relative to the maximum.

The following characteristic values can be determined for histograms (illustrated for a vertical histogram):

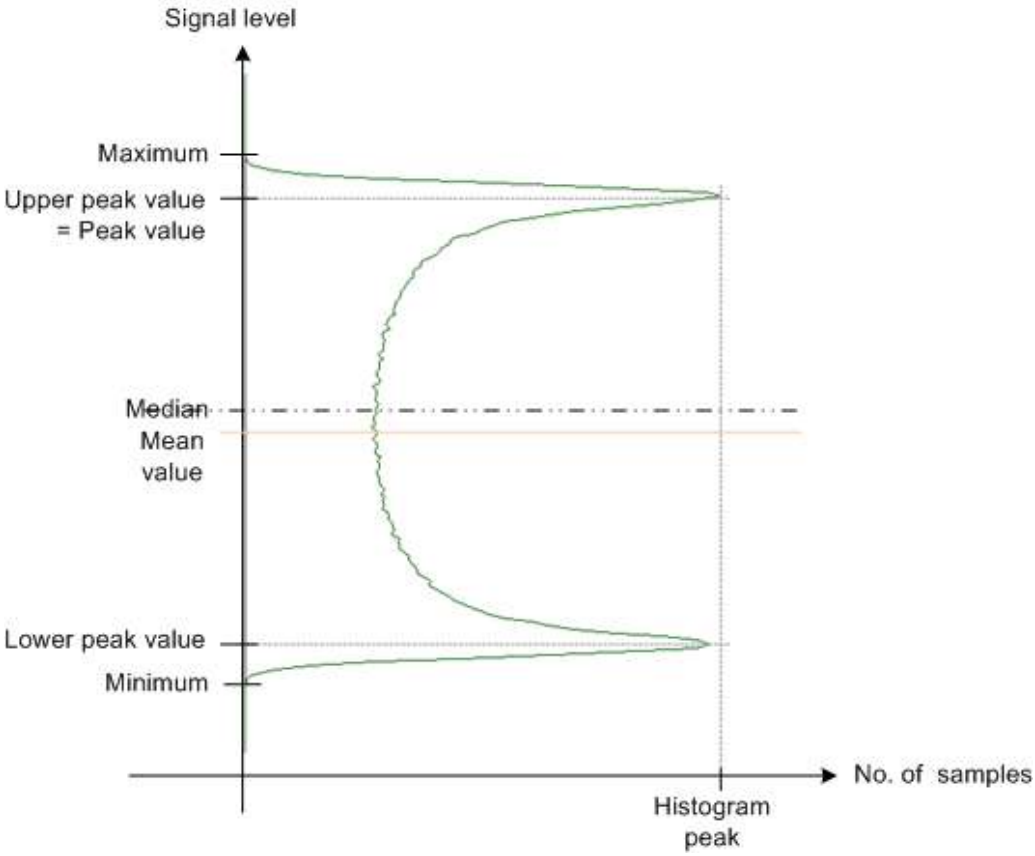


7.4.2 Creating histograms

Histograms can be used to evaluate the sample value occurrences directly. They are a prerequisite for histogram measurements.

To create a histogram quickly with toolbar icons

1. Select the waveform for which you need a histogram.
2. Tap the histogram icon on the toolbar.
3. Select the histogram type on the overlay menu: "Mode" = vertical for an amplitude histogram, or horizontal for a time-based histogram.



4. Tap the diagram with the waveform to be measured, or draw a rectangle on the screen to define the area for histogram calculation.
   Alternatively, tap "Source" and select the waveform.

   The histogram range is indicated in the diagram and a histogram with the selected waveform as a source is defined and displayed.

5. To adjust the histogram range:

   a) Double-tap the histogram.
   b) Tap "Advanced Settings" on the overlay menu.
   c) Adjust the start and stop values.

To create and configure a histogram in the dialog box

1. Select "Menu" > "Apps" > "Analysis" tab > "Histogram".

   The "Histogram" dialog box is displayed.



2. To create a histogram, tap the "Add" icon in the upper right corner of the dialog box.



3. To copy an existing histogram and configure a new one based on those settings, tap the "Copy" icon.

4. To change the name of a histogram, double-tap the tab label. Enter a name for the histogram using the on-screen keyboard.

5. Select a "Source" for the histogram. The source can be any input signal, math or reference waveform.

6. Define the histogram "Mode": vertical for an amplitude, horizontal for a time-based histogram.


7. Define the range of the waveform for which the histogram is to be generated. Enter the start value and the stop value in x and in y direction, either as absolute or relative values.

8. Enable the histogram.

7.4.3 Histogram setup

"Menu" > "Apps" > "Analysis" tab > "Histogram"

In this dialog box, you configure histograms on which you can perform further measurements.

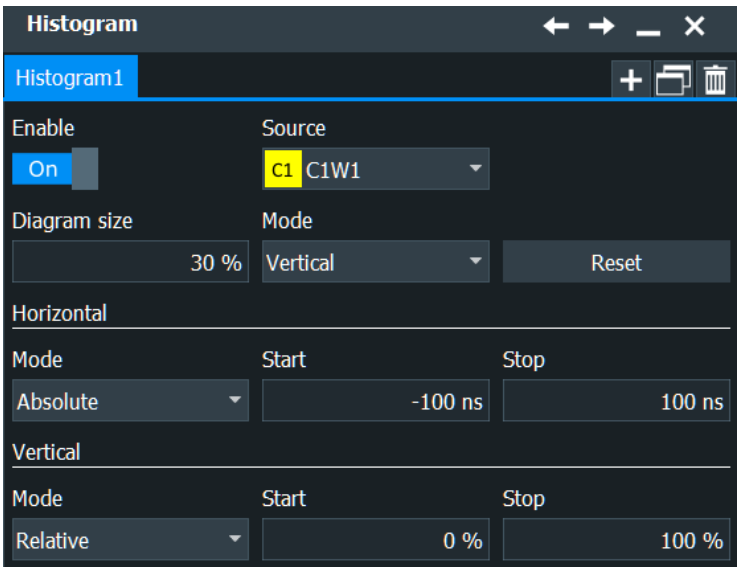

Enable
Enables or disables the histogram evaluation and display. The histogram settings are kept until the histogram is deleted.

Remote command:
`LAYout:HISTogram:ENABle` on page 1570

Source
Defines the source of the histogram. Any analog channel waveform, math or reference waveform can be selected. Also measurements can serve as histogram source. In this case, the density distribution of the results of the main measurement is displayed.

Remote command:
`LAYout:HISTogram:SOURce` on page 1573

Diagram size
Defines the size of the histogram in percent of the diagram.

Mode
Defines the type of histogram.

"Vertical" Amplitude histogram (horizontal bars across amplitude)

"Horizontal" Time histogram (vertical bars over time). For spectrum waveforms, horizontal histograms over spectrum are not available.

Remote command:
`LAYout:HISTogram:MODE` on page 1572

Reset
Resets the values to begin a new histogram.

Remote command:
`LAYout:HISTogram:RESet` on page 1573

Mode (Horizontal / Vertical)
Defines whether the value range limits are entered as absolute or relative values.

Remote command:
LAYout:HISTogram:HORZ:MODE on page 1571
LAYout:HISTogram:VERTical:MODE on page 1575

Start, Stop (Horizontal)
Defines the horizontal value range of the histogram.

If advanced eye is enabled, the unit of the horizontal "Start", "Stop" (Horizontal) depends on the selected Time units. The unit can be absolute time or unit interval.

Remote command:
LAYout:HISTogram:HORZ:ABSolute:STARt on page 1571
LAYout:HISTogram:HORZ:ABSolute:STOP on page 1571
LAYout:HISTogram:HORZ:RELative:STARt on page 1572
LAYout:HISTogram:HORZ:RELative:STOP on page 1572

Start, Stop (Vertical)
Defines the vertical value range of the histogram.

Remote command:
LAYout:HISTogram:VERTical:ABSolute:STARt on page 1574
LAYout:HISTogram:VERTical:ABSolute:STOP on page 1575
LAYout:HISTogram:VERTical:RELative:STARt on page 1575
LAYout:HISTogram:VERTical:RELative:STOP on page 1576

7.5 History

The history accesses the data of previous acquisitions and provides them for further analysis.

7.5.1 About history

If a continuous acquisition runs, the captured data is stored in the sample memory and the current acquisition is processed and shown on the display. After the acquisition was stopped, the history accesses the captured samples that were stored, displays these samples as history waveforms, and makes them available for further analysis. It considers all channels that were enabled during the running acquisition. When a new acquisition is started with [Run / Stop] or [Single], the memory is cleared and written anew.

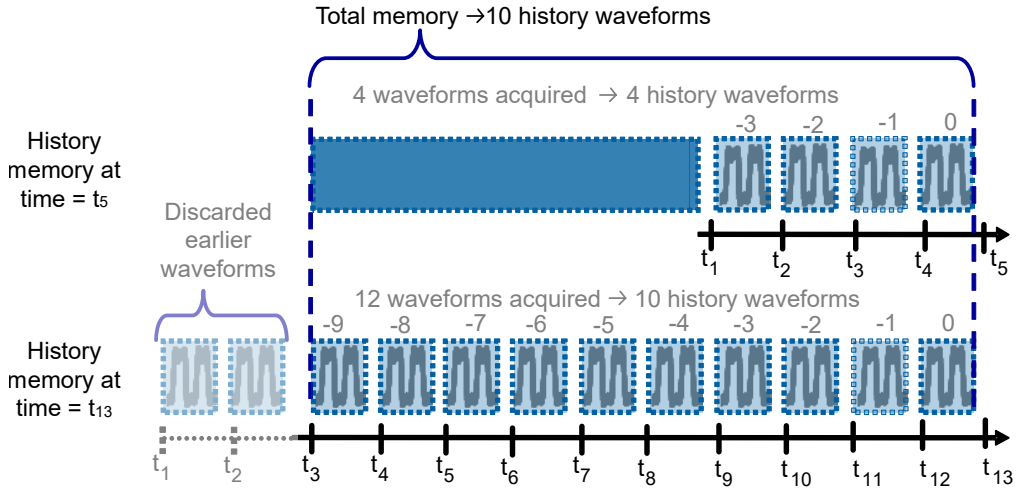


Figure 7-5: History memory. In this example, the memory can store 10 waveforms.

You can work with history waveforms in the same way as with the waveform of the latest acquisition: use zoom, cursor measurements, and automatic measurements, create math waveforms, perform mask testing and so on. Saving the history data is also possible, either completely or a part of the data.

The number of stored history waveforms depends on the memory size, the number of enabled channels, and the record length. The shorter the record length, the less the number of channels, and the larger the memory, the more history waveforms are saved.


Memory extension

The memory can be enhanced with options R&S RTP-B101/102/105/110/120. For details, refer to the specifications document.

Quick-access History dialog box

When you press the [History] key on the front panel or tap "Display" menu > "Show history", the history mode is enabled and the quick-access "History" dialog box is displayed. A running acquistion stops immediately.

The small quick-access "History" dialog box can remain visible on the screen during history replay, so that the history can be replayed at any time by a simple tap on the "Play" button. Closing the quick-access "History" dialog box, or starting a new acquisition disables the history mode.

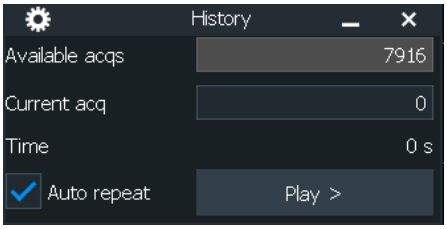


Export of history waveforms

7.5.2 History setup

The "History" dialog contains the complete functionality on history viewing and information.

The most important information and functions are also provided in the quick-access history dialog box.

Access: "Menu" > "Acquire" > "History" tab.

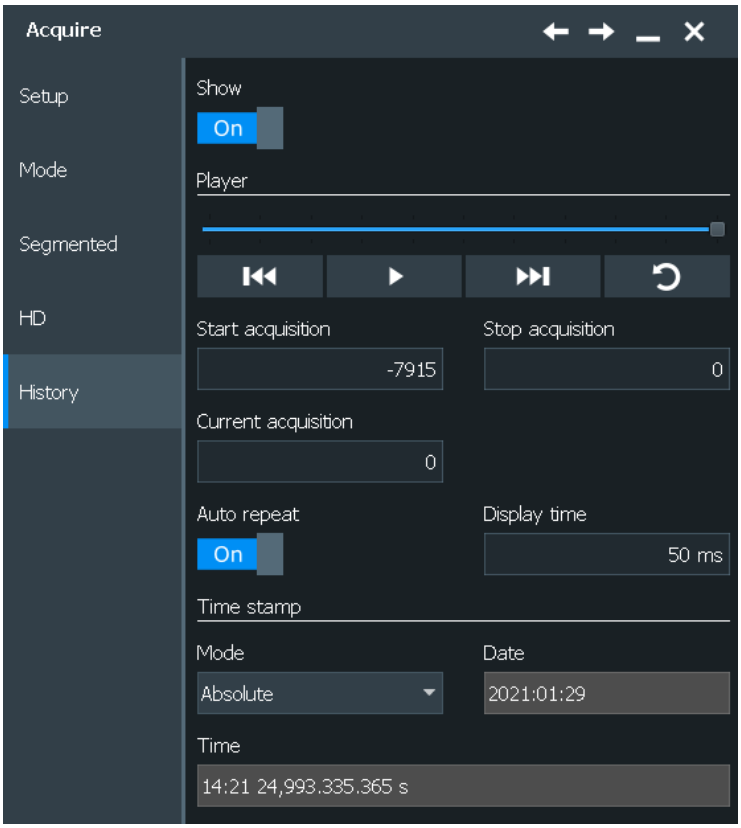

Show history / Export history
Enables the history mode and allows you to save history waveforms to file.

The history display is enabled automatically when you press the [History] button. It is disabled when you close the quick-access "History" dialog box.

For details on data export, see Section 12.3.2.2, "Waveform history settings", on page 509.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory[:STATe]` on page 1576

Player
The player can be used to control the playback of the history waveforms.


Sets the oldest acquisition in the sample memory as "Start acquisition" and "Current acquisition".


Starts and stops the replay of the history waveforms from "Start acquisition" to "Stop acquisition".


Sets the newest acquisition in the sample memory as "Stop acquisition" and "Current acquisition". The newest acquisition always has the index "0".


Resets the "Stop acquisition" to 0 and the "Start acquisition" to the number of saved acqusitions. Thus, the history viewer shows all acquisitions.

Start acquisition
Sets the index of the first (oldest) acquisition to be displayed or exported. The index is always negative.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory:STARt` on page 1577

Stop acquisition
Sets the index of the last (newest) acquisition to be displayed or exported. The newest acquisition of the complete acquisition series always has the index "0".

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory:STOP` on page 1578

Current acquisition
Accesses a particular acquisition in the memory to display it, or to save it. The newest acquisition always has the index "0". Older acquisition have a negative index.

If a history replay is running, the field shows the number of the currently shown acquisition.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory:CURRent` on page 1577

Auto repeat
If selected, the replay of the history waveform sequence repeats automatically. Otherwise, the replay stops at the "Stop acquisition".

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory:REPLay` on page 1579

Display time
Sets the display time for one acquisition. The shorter the time, the faster the replay is.

The setting takes effect for history replay and the display of a Fast Segmentation series, see Section 5.4.3, "Segmented settings", on page 134.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory:TPACq` on page 1578

Time stamp
The time stamp shows the time of the currently displayed history acquisition. Thus, the time relation between acquisitions is always available.

The time stamp "Mode" can be absolute or relative:
- In "Absolute" mode, the instrument shows the date and the daytime of the current acquisition.
- In "Relative" mode, the time difference to the newest acquisition (index = 0) is shown.

The time stamp can be included in waveform data export, see"Time stamps" on page 510.

During history replay, the time value is displayed and updated if the replay speed ("Display time") is slow enough, that is 40 ms or slower.

The quick-access history dialog box always shows the relative time. In the "History Viewer" tab, you can select the time mode.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory:TSDate?` on page 1579
`CHANnel<ch>[:WAVeform<wf>]:HISTory:TSABsolute?` on page 1580
`CHANnel<ch>[:WAVeform<wf>]:HISTory:TSRelative?` on page 1580
`CHANnel<ch>[:WAVeform<wf>]:HISTory:TSRReference?` on page 1580

7.5.3 Using history

You can access the history waveforms in two ways:
- Display a particular acquisition.
- Replay all or a part of the saved waveforms to track the signal run.

Furthermore, you can export history data to a file.

- "To open the history and get information" on page 315
- "To display a particular acquisition" on page 316
- "To replay history waveforms" on page 316
- "To exit the history" on page 316
- "To save the history data" on page 317

To open the history and get information

1. Press the [History] key on the front panel.

   A running acquisition is stopped, the history mode is enabled and the quick-access "History" dialog box is displayed. The [History] key lights up as long as the history mode is active.

2. Open the full configuration dialog box:
   - Tap the⚙ icon.
   - Open "Menu" > "Acquire" dialog > "History" tab.

To display a particular acquisition

1. In the quick-access "History" dialog box, enter the number of the required acquisition in the "Current acq" field. The newest acquisition always has the index "0", older acquisitions have a negative index.
2. Tap "Play" to start.

Alternatively, you can configure and start the history display from the "History" configuration dialog box:

1. Open the "History" configuration tab.
2. If the history mode is off (the [History] key is not illuminated), select "Show".

   The quick-access dialog box is displayed.
3. Drag the slider to the required acquisition. The current number is shown in the "Current acquisition" field.
   Alternatively, enter the number of the required acquisition in the "Current acquisition" field.
4. Tap "Play" to start.

To replay history waveforms

If you want to see the complete acquisition series without any setup, simply tap "Play" in the quick-access "History" dialog box. For specific analysis of history data, use the history "Viewer" setup.

1. Open the "History" configuration dialog tab.
2. If the history mode is off (the [History] key is not illuminated), enable "Show".

   The quick-access dialog box is displayed.
3. Define the part of the history you want to see by doing one of the following:
   - Tap ↻ to see the complete history.
   - Enter the "Start acquisition" of the oldest acquisition to display and the "Stop acquisition" of the newest acquisition to display. All waveforms between the two indexes are displayed.
     To enter the oldest or newest acquisition for either index, tap the appropriate button. The newest acquisition always has the index "0". The "Start acquisition" is always negative.
4. Tap ▸ to start.

To exit the history

► Choose one of the following ways:
- Close the quick-access "History" dialog box.
- In the "History" configuration tab, disable "Show".
- Start the acquisition.

To save the history data

You can save the complete history, or some subsequent waveforms from the history, or a single history waveform. You can also decide to save the complete waveforms, or a part of each waveform.

1. Open the "Menu" > "Save/Recall" dialog.
2. Select the "Save/Recall" tab.
3. In the "Save " tab, press "Waveform".
4. In the "Setup" tab, tap the source icon to select the waveform you want to save.
5. If you want to save only a part of each waveform, set the "Scope".
   For settings, see "Scope" on page 507.
6. Select the "History" tab.
7. Enable "Export history".
8. If you want to write the timestamps into the data file, enable "Time stamps".
9. To save one waveform out of the history memory:
   a) Make sure that "Multiple acquisitions in one file" is disabled.
   b) Enter the number of the required acquisition in "Acquistion index".
   The newest acquisition in the memory always has the index "0". Older acquisitions have a negative index.
   c) Tap "Save" or "Save As" to save the waveform data to the specified file.
10. To save several subsequent history waveforms:
    a) Enable "Multiple acquisitions in one file".
    b) Define the range of the waveforms to be saved with "Start acquisition" and "Stop acquisition".
    c) Tap "Start export" to play the history and to save the history data to the specified file.

Se also Section 12.3.2.2, "Waveform history settings", on page 509.

7.6 XY-diagram

XY-diagrams combine the voltage levels of two waveforms in one diagram. They use the voltage level of a second waveform as the x-axis, rather than a time base. This allows you to perform phase shift measurements, for example. You can display up to four different XY-diagrams.


XY-diagrams can be used to display the IQ representation of a signal.

7.6.1 Settings for XY-diagrams


Access: [Apps]>"Analysis" tab > "XY-Diagram"


You can display up to four different XY-diagrams that use the voltage level of a waveform as the x-axis, rather than a time base.

Make sure to select the tab of the required XY-diagram.

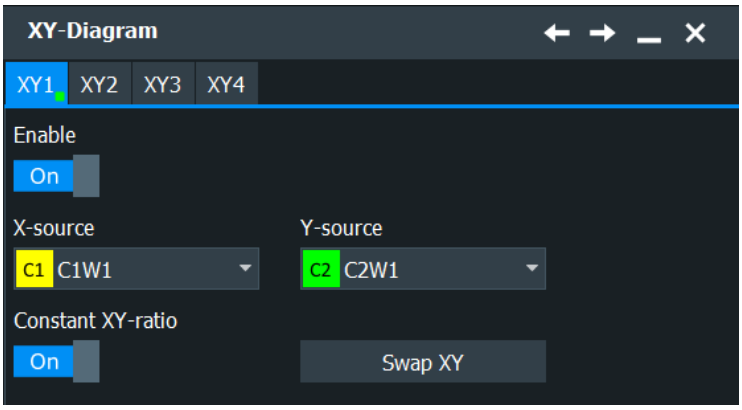

Enable
If activated, the XY-waveform is active and shown in a diagram, or it is minimized in a signal icon.

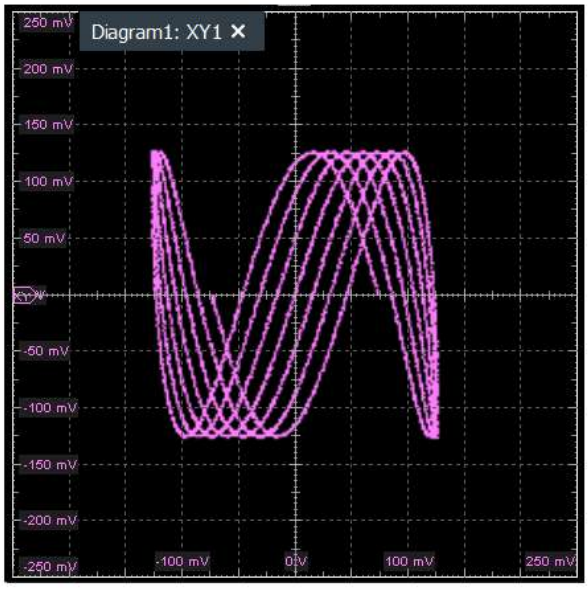

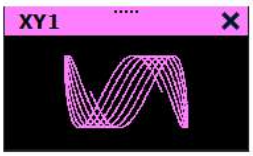

Remote command:
`WAVeform<wf>:XYCurve:STATe` on page 1581

X-source
Defines the signal source that supplies the x-values of the XY-diagram. Select one of the following:

- One of the waveforms of any channel
- A reference waveform

- The results of a mathematical function

Remote command:
WAVeform<wf>:XYCurve:XSOurce on page 1583

Y-source
Defines the source to be used as the y-axis of the XY-diagram. Select one of the following:

- One of the waveforms of any channel
- A reference waveform
- The results of a mathematical function

Remote command:
WAVeform<wf>:XYCurve:YSOurce on page 1583

Constant XY-ratio
If enabled, the x- and y-axes maintain a constant ratio in the diagram.

Remote command:
WAVeform<wf>:XYCurve:RATio on page 1581

Swap XY
Replaces the source of the x-axis with the source of the y-axis and vice versa.

Remote command:
WAVeform<wf>:XYCurve:SWAP on page 1582


7.6.2 Displaying an XY-diagram

You can create the diagram from active waveforms with drag&drop, or use the dialog box for setup.

To display an XY-diagram with drag&drop

Prerequisites: The source waveform for the y-axis is active in a diagram, the source waveform for the x-axis is either active or minimized.

1. Drag the x-axis waveform to the lower middle of the diagram with the y-axis waveform.
2. Drop the icon when it overlaps with the Xy shown in the middle of the diagram.

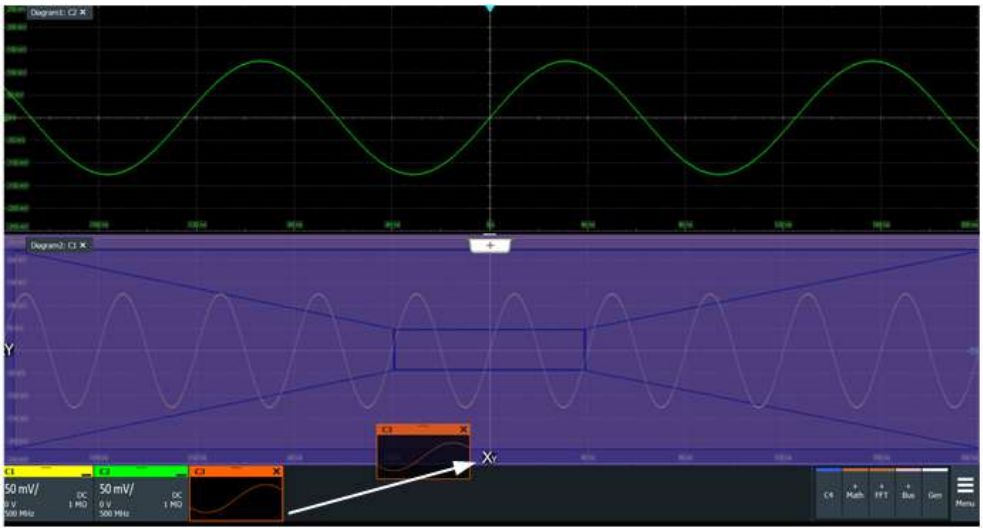

The diagram is converted into an XY-diagram.

To set up an XY-diagram

1. Press the [Apps] key.
2. In the >"Analysis" tab, tap the "XY-Diagram".
3. Enable the "XY-diagram".
4. In the "X-source" field, define the signal source that supplies the x-values of the XY-diagram. Select one of the following:
   - One of the waveforms of any channel
   - A reference waveform
   - The results of a mathematical function
5. In the "Y-source" field, define the signal source that supplies the y values of the XY-diagram.
6. To switch the x- and y-values quickly, tap the "Swap XY" button.
7. To maintain a constant ratio while the x- and y-axes are adapted to the acquired data dynamically, activate the "Constant XY-ratio" option.

If the XY-diagram is active or minimized, touch and hold the signal icon to open the "XY-diagram" tab.

8 Measurements

Using the R&S RTP you can perform and display different measurements simultaneously, based on the active signal or math waveforms. The color of the results in the result table corresponds with the source waveform color.

The following measurement methods are available:

- Cursor measurements: measurements can be configured for up to 4 cursor sets to determine specific results at the manually defined cursor positions of an active waveform; the results are displayed in a result box.
- Automatic measurements: up to eight measurements can be configured and performed simultaneously on different sources; the results of each measurement are displayed in a result box.
- Quick measurements: performs a set of automatic measurements on the selected waveform at the push of a button. You can configure the set of measurements.

8.1 Cursor measurements

- Cursors and results of cursor measurements 321
- Using cursors 322
- Settings for cursor measurements 325

8.1.1 Cursors and results of cursor measurements

Cursor measurements determine the results at the current cursor positions. The cursors can be positioned manually, or can be configured to follow the waveform. You can measure on one waveform, or on two different waveforms (sources).

Up to 4 cursor sets can be configured and displayed. Each cursor set consists of a pair of horizontal or vertical cursors, or both. Cursor lines can be coupled so that the initially defined distance is always maintained.

The cursors are displayed in the diagrams of the source waveform only, or in all diagrams. For each measurement, labels can be defined for the cursors. By default, the cursors are labeled as C1.1, C1.2, C2.1, C2.2, C3.1, C3.2, C4.1, C4.2.

How to set up cursor measurements is described in Section 8.1.2, "Using cursors", on page 322. The Section 8.1.3, "Settings for cursor measurements", on page 325 provides a detailed description of all settings.

Cursors can also define a gate to limit the measurement to the section of the waveform between the cursor lines. See Section 8.2.10.2, "Gate settings for measurements", on page 391.

The result display of cursor measurements is configurable. Results can be shown in a docked table, or in floating result boxes for each measurement. Similar to waveform diagrams, you can also minimize the result box to a result icon on the signal bar.

For details on using the result box, see Section 3.3.7, "Displaying results", on page 63 and "Result position" on page 89.

8.1.1.1 Cursor measurements on time-based waveforms

The cursor for measurement on time-based waveforms returns the following results. The results are displayed automatically when a cursor measurement is enabled.



Figure 8-1: Measurement results of a cursor measurement in time domain

Label	Description
X1, X2	Time at the position of the vertical cursors.
Y1, Y2	Vertical values of the waveform at the position of the horizontal cursors in V or A.
ΔX	Difference between the vertical cursor (time) values
ΔY	Difference between the horizontal cursor values
1/ΔX	Inverse time difference
ΔY/ΔX	Slope of the waveform between the cursors (if measured on one source)

8.1.1.2 Cursor measurements on spectrum waveforms

If the measurement source is a spectrum waveform, the results have a different meaning. Measurement on 2 spectrum waveforms is not possible.

The result box for measurement on spectrum waveforms shows the following information.

Label	Description
X1, X2	Frequency at the position of the vertical cursors
Y1, Y2	Vertical values of the waveform at the position of the horizontal cursors in dB.
Bw	Difference between the vertical cursor (frequency) values
ΔY	Difference between the horizontal cursor values

To set the cursor lines to the peaks, various functions are available in the "Peak Search" tab, see Section 8.1.3.3, "Peak Search tab", on page 330.

8.1.2 Using cursors

You can start cursor measurements by using the "Cursor" icon on the toolbar, or using the [Cursor] key. For detailed configuration, use the "Cursor" dialog box.

- Starting a simple cursor measurement 323
- Configuring a cursor measurement 323
- Configuring the cursor display 325
- Saving measurement results to file 325

8.1.2.1 Starting a simple cursor measurement

To display cursors using the toolbar

1. Tap the "Cursor" icon on the toolbar.



2. Tap the waveform that you want to measure. Alternatively, you can draw a rectangle in the diagram to position the cursor lines.

   The cursor lines appear and the cursor results are displayed in a table or result box.

To display cursors using the [Cursor] key

1. Select the waveform that you want to measure.
2. Press the [Cursor] key.

   The cursor lines and the measurement results are displayed.

To disable one cursor measurement

1. Tap the "Delete" icon on the toolbar.
2. Tap a cursor line.

   The cursor set and its measurement results are deleted.

To disable all cursor measurements

1. Tap the "Delete" icon on the toolbar.
2. Tap the results table.

   All cursor sets and measurement results are deleted.

8.1.2.2 Configuring a cursor measurement

To modify the position of the cursor lines, you can drag the lines on the screen. In addition, various settings are possible to refine the measurement.

The complete configuration of cursor measurements is provided in the "Cursors" dialog.

1. To open the "Cursors" dialog, use one of these ways:
   - Open the "Menu", and select "Cursor".

- Press the [Cursor] key.
- Use the overlay menu:
  - Double-tap a measurement result in the results table.
  - Adjust source, type, and positions of the cursor lines in the overlay menu.
  - Tap "Advanced Setup" to open the "Cursors" dialog.
- If the results are shown in a floating result box, tap the ⚙ icon in the result box.

2. Select the "Setup" tab.
3. Select the subtab for the cursor set that you want to use.
4. Select the source - the measured waveform. You can select any input channel, or various other active waveforms. Available sources are shown in the source list.
5. If necessary, enable and select a 2nd waveform.
6. Select the cursor type: horizontal, vertical, or both.
7. Define the position of the cursors:
   a) To define exact positions of the cursor lines, enter the X-position for each vertical cursor and the Y-position for each horizontal cursor. If it is not possible to set horizontal cursors, disable "Track waveform".
   b) To position the horizontal cursors automatically, select "Track waveform".
   In this case, cursor 1 indicates the current maximum, cursor 2 indicates the current minimum. If both horizontal and vertical cursors are displayed, the horizontal cursors are placed at the crossing points of the vertical cursors with the waveform. Adjust the vertical cursors manually, and the horizontal cursors follow.
   c) If the waveform arithmetics are set to "Envelope", and "Track waveform" is active, select which horizontal cursor is positioned to the maximum and which to the minimum envelope values.
   d) To keep the distance between the vertical cursors when one cursor is moved, select "Coupling (2 follows 1)".
8. Optionally, select "Show in all diagrams" in the "Advanced" tab. This setting enables the cursor display in all diagrams that are in the same domain as the selected source (time or spectrum).
9. To set the cursors for a spectrum measurement to peak values, select the "Peak Search" tab.
   Tap one of the buttons to place the cursors on the selected peak value. For details, see Section 8.1.3.3, "Peak Search tab", on page 330.
10. Tap the "Cursor On/Off" button in the "Setup" tab to activate the cursor measurement.

    The cursors lines and the results are displayed. For details on cursor measurement results, see Section 8.1.1, "Cursors and results of cursor measurements", on page 321.

8.1.2.3 Configuring the cursor display

By default, the cursors are displayed as lines in the diagrams and labeled according to the syntax: Cu<cursor set number>.<1|2>

For example, the cursors for the cursor set 2 are labeled 2.1 and 2.2. The horizontal and the vertical cursors lines have the same labels.

You can change the default cursor display and labels.

To set the cursor style

1. Open the "Menu" and select "Settings".
2. Select "Appearance".
3. Select the "Cursor" tab.
4. Select the cursor style. See also: "Cursor style" on page 89.

To add labels to cursor lines

1. Open the "Cursors" dialog box, for example, with "Menu" > "Cursor".
2. Select the subtab for the cursor set you want to configure.
3. Select the "Advanced" tab.
4. For each vertical and horizontal cursor, enter a label.
5. Select "Show labels".

8.1.2.4 Saving measurement results to file

1. Open the "Menu" and select "Save/Recall".
2. Select the "Save" tab.
3. Select "Results".
4. Select the results that you want to export.
5. Save the file.

8.1.3 Settings for cursor measurements

Cursor measurements are configured in the "Cursors" dialog box.

8.1.3.1 Setup tab

The "Setup" tab contains the settings for cursor measurements.

The cursor style and position of the measurement results is defined in the "Settings" > "Appeareance" > "Cursor" dialog box.

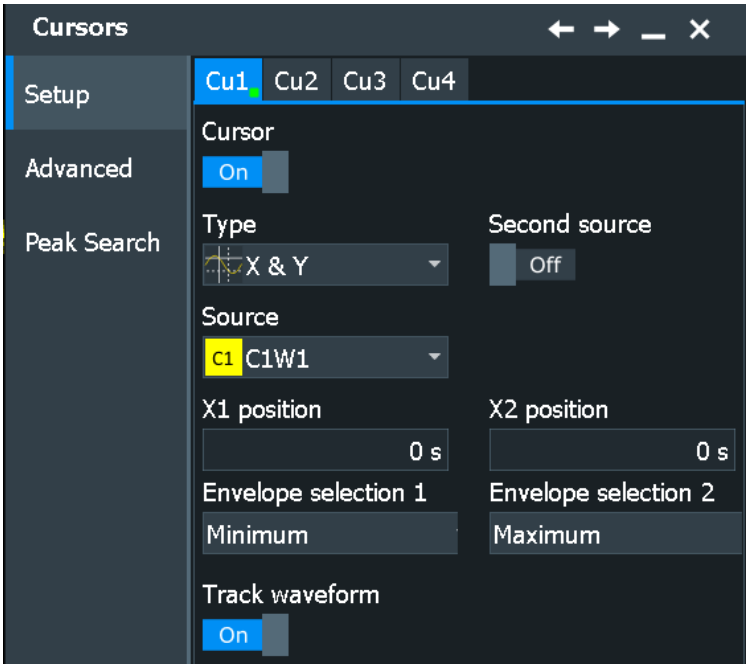


Figure 8-2: Setup for cursor on 1 source, with waveform tracking

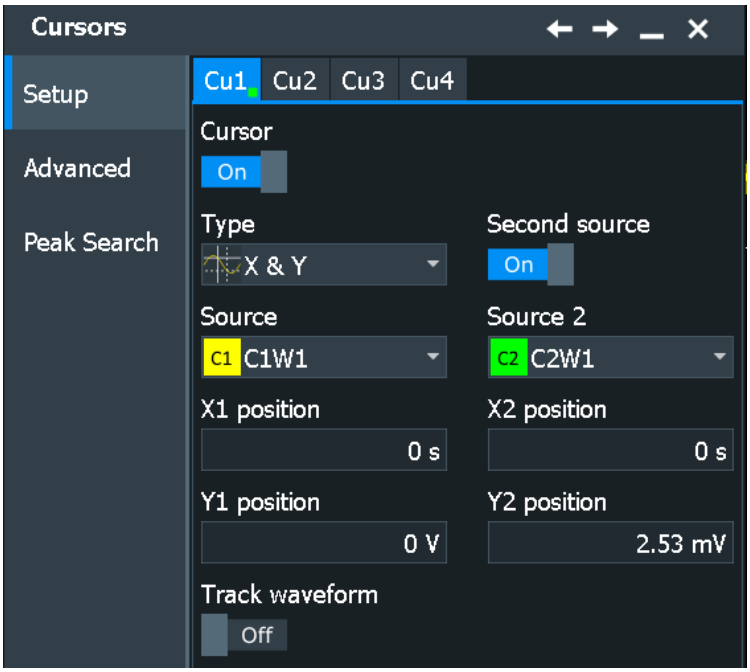


Figure 8-3: Setup for cursor on 2 sources

Cu1, Cu2, Cu3, Cu4
The settings for each cursor measurement (or cursor set) are configured on separate tabs. For each cursor set, a horizontal pair of cursors, a vertical pair of cursors, or both can be displayed.

Cursor On/Off
Enables the selected cursor measurement.

Remote command:
CURSor<cu>:STATe on page 1584

Type
Defines the cursor type to be used for the measurement.

- Horizontal cursors (Y-cursors)
  Horizontal cursors are positioned automatically along the waveform and can be adjusted manually
- Vertical cursors (X-cursors)
  Both vertical cursor lines are set automatically to the trigger position, and you can reposition them manually.
- Both vertical and horizontal cursors (X&Y-cursors)
  Horizontal cursors are positioned automatically along the waveform and vertical cursors are set to the trigger position. You can reposition all cursor lines manually.

Remote command:
CURSor<cu>:FUNCtion on page 1585

Source
Defines the source of the cursor measurement. Any of the input signal, math, reference or XY waveforms can be selected.

Remote command:
CURSor<cu>:SOURce on page 1585

Second source, Source 2
Enables and selects a second source for the cursor measurements. If enabled, the second cursor lines Cx.2 measure on the second source. Using a second source, you can measure differences between two channels with cursors.

Remote command:
CURSor<cu>:USSource on page 1587
CURSor<cu>:SSOurce on page 1586

X1 position, X2 position
Defines the position of the vertical cursors.

Remote command:
CURSor<cu>:X1Position on page 1588
CURSor<cu>:X2Position on page 1588

Y1 position, Y2 position
Defines the position of the horizontal cursor lines. The setting corresponds to the V1 and V2 values in the "Cursor Results" box.

If "Track waveform" is enabled, the user setting is disabled and the measurement results are displayed in the "Cursor Results" box.

Remote command:
CURSor<cu>:Y1Position on page 1589
CURSor<cu>:Y2Position on page 1590

Envelope selection 1|2
Envelope selection is effective under the following conditions:

- The waveform arithmetic of the cursor source waveform is set to envelope waveform (see "Arithmetic" on page 133)
- "Track waveform" is enabled.
- Both horizontal and vertical cursors are enabled ("Type" = *Both*).

The setting defines which horizontal cursor is positioned to the maximum and which to the minimum envelope values.

"Minimum" The horizontal cursor is set to the crossing point of the vertical cursor with the minimum waveform envelope.

"Maximum" The horizontal cursor is set to the crossing point of the vertical cursor with the maximum waveform envelope.

Remote command:
`CURSor<cu>:X1ENvelope` on page 1590
`CURSor<cu>:X2ENvelope` on page 1591

Track waveform
The horizontal cursors track the waveform. The first cursor line indicates the current vertical minimum, and the second cursor line indicates the maximum. If the waveform changes, e.g. during a running measurement, the cursors move along with it. If both horizontal and vertical cursors are displayed, the horizontal cursors are positioned to the crossing points of the vertical cursors with the waveform. The measurement results are displayed in the "Cursor Results" box.

Tracking disables the Y-coupling (coupling of horizontal cursor lines) and the Y user position settings.


Remote command:
`CURSor<cu>:TRACking[:STATe]` on page 1588

8.1.3.2 Advanced settings

Access: [Cursor] key > "Advanced" tab

The settings in the "Advanced" cursor tab configure the behavior and display of cursor lines, and labels for the lines.

The cursor style and position of the measurement results is defined in the "Settings" > "Appeareance" > "Cursor" dialog box. See Section 4.3.7, "Cursor appearance settings", on page 89.

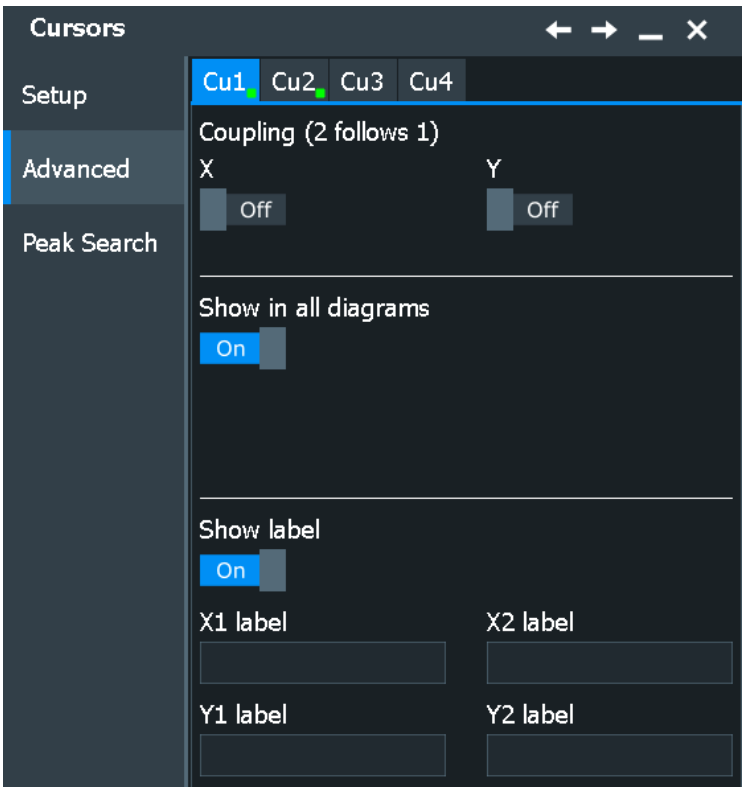

Cu1, Cu2, Cu3, Cu4
The settings for each cursor measurement (or cursor set) are configured on separate tabs. For each cursor set, a horizontal pair of cursors, a vertical pair of cursors, or both can be displayed.

Coupling (2 follows 1)
Couple the horizontal and vertical cursor lines so that the distance between the two lines remains the same if one cursor is moved.

Remote command:
`CURSor<cu>:YCOupling` on page 1590
`CURSor<cu>:XCOupling` on page 1589

Show in all diagrams
Shows the cursor lines of the selected cursor set in all active diagrams of the same (time/spectrum) domain.

Remote command:
`CURSor<cu>:SIAD` on page 1592

Show label
Shows the cursor labels in the diagram.

Remote command:
`CURSor<cu>:LABel[:LABel]` on page 1591

X1 label, X2 label
Defines a label to be displayed with the vertical cursors.

By default, the cursors are labeled as Cu1.X1, Cu1.X2, Cu2.X1, Cu2.X2, Cu3.X1, Cu3.X2, Cu4.X1, Cu4.X2.

Remote command:
`CURSor<cu>:LABel:X<n>` on page 1592


Y1 label, Y2 label
Defines a label to be displayed with the horizontal cursors. By default, these cursors are labeled as Cu1.Y1, Cu1.Y2, Cu2.Y1, Cu2.Y2, Cu3.Y1, Cu3.Y2, Cu4.Y1, Cu4.Y2.

Remote command:
`CURSor<cu>:LABel:Y<n>` on page 1592

8.1.3.3 Peak Search tab

Access: [Cursor] key > "Peak Search" tab

The settings on this tab are only available in spectrum mode, i.e. the source of the cursor measurement is an FFT math waveform. In this case, the cursors can indicate the results of a peak search on the waveform. You can define which peaks the instrument determines by defining the noise reject settings.

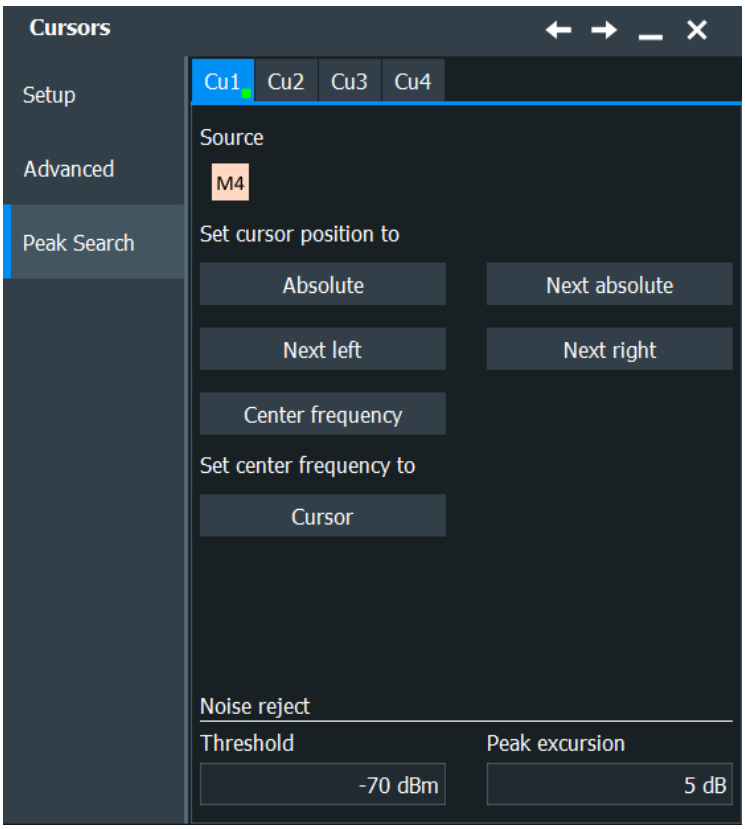

Cu1, Cu2, Cu3, Cu4
The settings for each cursor measurement (or cursor set) are configured on separate tabs. For each cursor set, a horizontal pair of cursors, a vertical pair of cursors, or both can be displayed.

Source
Defines the source of the cursor measurement. Any of the input signal, math, reference or XY waveforms can be selected.

Remote command:
`CURSor<cu>:SOURce` on page 1585

Absolute
Both cursors are set to the absolute peak value.

Remote command:
`CURSor<cu>:MAXimum[:PEAK]` on page 1595

Next absolute
Cursor 2 is set to the next smaller absolute peak from the current position.

Remote command:
`CURSor<cu>:MAXimum:NEXT` on page 1595

Next left
Cursor 2 is set to the next peak to the left of the current position.

Remote command:
`CURSor<cu>:MAXimum:LEFT` on page 1595

Next right
Cursor 2 is set to the next peak to the right of the current position.

Remote command:
`CURSor<cu>:MAXimum:RIGHt` on page 1595

Center frequency
Sets the vertical cursor line Cu1 to the center frequency.

Remote command:
`CURSor<cu>:FFT:TOCenter` on page 1595

Set center frequency to Cursor
Sets the center frequency to the frequency value that is measured at cursor line Cu1.

Remote command:
`CURSor<cu>:FFT:SETCenter` on page 1594

Threshold
Defines an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.


This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Remote command:
CURSor<cu>:THReshold on page 1762
MEASurement<mg>:SPECtrum:ATHReshold on page 1649

Peak excursion
Defines a relative threshold, the minimum level value by which the waveform must rise or fall to be considered as a peak. To avoid identifying noise peaks, enter a peak excursion value that is higher than the noise levels.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

The following figure shows a cursor measurement on a spectrum waveform:

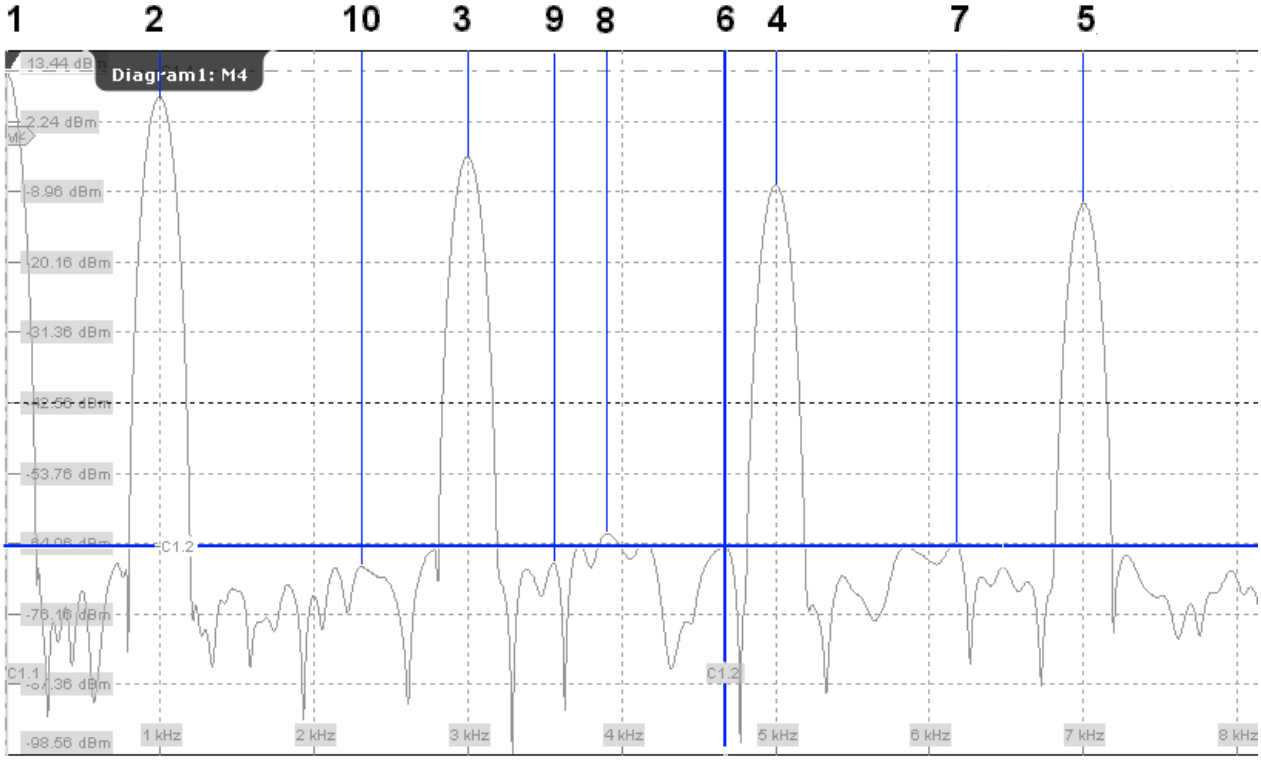

If "Peak excursion" is 30 dB, the peaks 1 to 5 are found. If "Peak excursion" is 20 dB, also the peaks 6 to 10 are found. The cursor position is on peak 6.

Remote command:
CURSor<cu>:PEXCursion on page 1761
MEASurement<mg>:SPECtrum:PEXCursion on page 1649

8.2 Automatic measurements

The R&S RTP can perform many measurements in parallel. The measurements are combined in up to 8 measurement groups. In addition, you can run the quick measurement.

The basic measurement settings are source, category, and the selection of the measurement. You can refine the setup to get more specific results:

- **Gating**
  A gate limits the measurement to a user-defined part of the waveform. See Section 8.2.10, "Measurement gates", on page 390.
- **Statistics and long term measurements**
  To evaluate time-dependent behavior of measurement results, you can use statistics, long term measurements, and tracks. You can also decide, how many measurement results per acquisition contribute to the calculation. See: Section 8.2.12, "Result analysis: Plot tab", on page 398.
- **Limit checks and actions on test result**
  Limit and margin checks evaluate if the measurement result exceeds a specified value. You can define actions that are performed on limit or margin violation. See: Section 8.2.13, "Limit and margin checks: Advanced tab", on page 404.

Measurement categories

The various measurement are grouped in several categories. The category defines which sources can be analyzed.

Time domain:

- Amp/Time: amplitude and time measurements
- Eye: eye diagram measurements
- Histogram: measurements on histograms
- Optical measurements for testing the power of optical signals
- Jitter measurements (available if one of the jitter options is installed)
- EMC/ESD measurements for EMC/ESD test setups with option R&S RTP-K155
- Protocol: advanced analysis with option R&S RTP-K35

Frequency domain

- Spectrum: measurements on spectrum waveforms
- Histogram: measurements on histograms

Details on automatic measurements are described in the following chapters:

- Measurement setup in general....334
- Amplitude/time measurements....339
- Eye diagram measurements....360
- Optical measurements....368
- Spectrum measurements....370
- Histogram measurements....375
- Jitter measurements....379
- EMC/ESD measurements (option R&S RTP-K155)....379
- Protocol measurements (option R&S RTP-K35)....384
- Measurement gates....390
- Measurement results....393
- Result analysis: Plot tab....398
- Limit and margin checks: Advanced tab....404

8.2.1 Measurement setup in general

Up to 8 measurement groups can be defined. Each measurement group is configured in its own subtab. For each measurement group, the category and the source are defined in the "Setup" tab, and you can also enable statistic evaluation. Available sources and measurements depend on the selected category, for example, histogram measurements need a defined histogram as source. For each measurement group, you select all required measurements. If further settings are available for a measurement, a settings icon is shown beside the measurement's name.

8.2.1.1 Starting an automatic measurement

There are three methods to start an automatic measurement, each with slightly different effects:

- Using the "Measure" icon on the toolbar:
  See: "To start a measurement using the toolbar icon" on page 334.
- Pressing the [Measure] key on the front panel.
  See: "To start a measurement with the [Measure] key" on page 334.
- Select "Measure" on the menu.
  See: Section 8.2.1.2, "Configuring measurements", on page 335.

To start a measurement using the toolbar icon

1. Tap the "Measurement" icon on the toolbar.

2. On the overlay menu, select the category and the measurements.



3. Define the measurement range in one of these ways:
   - To measure the complete waveform, select "Source". Then select the waveform to be measured.
   - To define a gate that limits the measurement:
     – Select the waveform to be measured (waveform in focus).
     – Select "Draw".
     – Draw a rectangle in the diagram with the selected waveform.

   The "Meas Results" are displayed.

To start a measurement with the [Measure] key


1. Press the [Measure] key.

   The "Measurements" dialog opens.

2. Configure the measurement in the dialog.

8.2.1.2 Configuring measurements

1. To open the "Measurements" dialog, choose one of these ways:
   - Press the [Measure] key. The "Measurements" dialog opens.
   - Double-tap the result table of the measurement.
     The overlay menu opens. Here you can change the measurement types and enable statistics. To open the dialog, tap "Advanced Setup".
2. In the "Measurement" dialog, the subtab for the measurement group that you want to configure.
3. Select the measurement "Category", for example, "Amp/Time".
4. Tap "Source". Then select the waveform to be measured.
   Spectrum measurements require an FFT math waveform as the measurement source. Histogram measurements require a histogram as source.
5. Tap "Add / Remove" and select all measurements that you want to include in the measurement group. Tap "Clear" to deselect all settings.

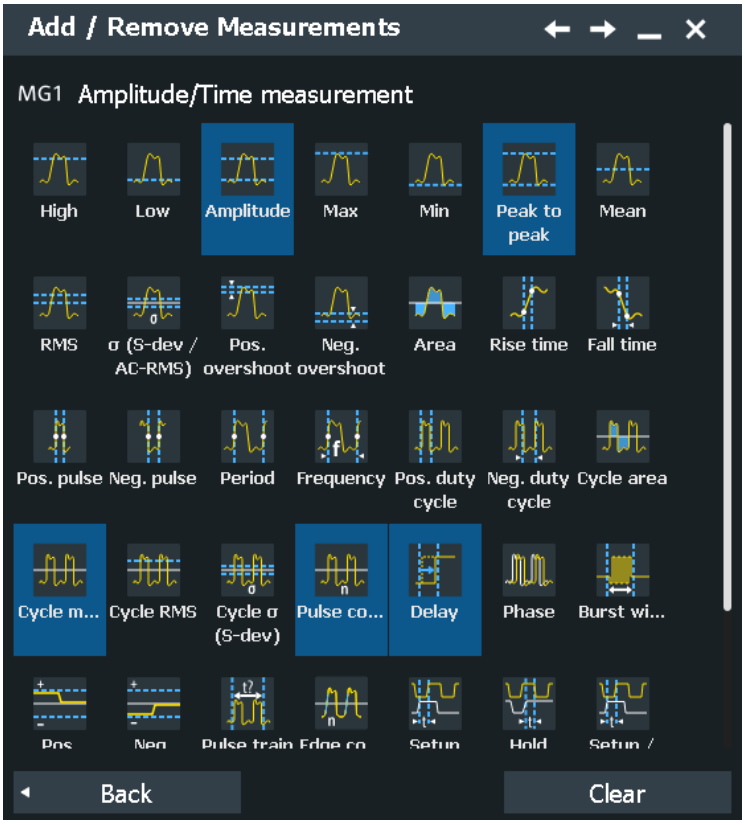

6. Tap "Back" to close the selection box.
   All selected measurements are displayed in the list of active measurements.
7. A "Settings" icon indicates whether further settings are required. Tap the measurement. A dialog opens, and you can adjust the measurement.

The category-dependent measurement settings are explained in the following sections:

- Section 8.2.2.2, "Settings for amplitude/time measurements", on page 345
- Section 8.2.3.2, "Settings for eye diagram measurements", on page 363
- Section 8.2.4.2, "Settings for optical measurements", on page 369
- Section 8.2.5.2, "Settings for spectrum measurements", on page 372
- Section 8.2.6.2, "Settings for histogram measurements", on page 378
- Section 8.2.8.2, "Setup for EMC/ESD measurements", on page 380
- Section 8.2.9.2, "Settings for protocol measurements", on page 386
- For jitter measurements, the settings depned on the installed option, see Section 19, "Jitter analysis and clock data recovery", on page 1098.

8. Optionally, define a gate to restrict the measurement to a part of the waveform. See Section 8.2.10.1, "Using measurement gates", on page 390.

   If you enabled the measurement with the toolbar icon and drew a rectangle on the diagram, the gate is already defined and enabled.

9. To compile and display statistics for the measurement, enable "Statistics". See Section 8.2.11.2, "Statistics", on page 395.

10. Optionally, perform a limit or margin check as described in Section 8.2.13.1, "Performing limit checks", on page 405.


11. "Enable" the measurement group.

    The measurement results are displayed by default below the waveform diagram.

8.2.1.3 General measurement settings

Automatic measurements are configured in the "Measurements" dialog.

Access: [Measure] > "Setup" tab

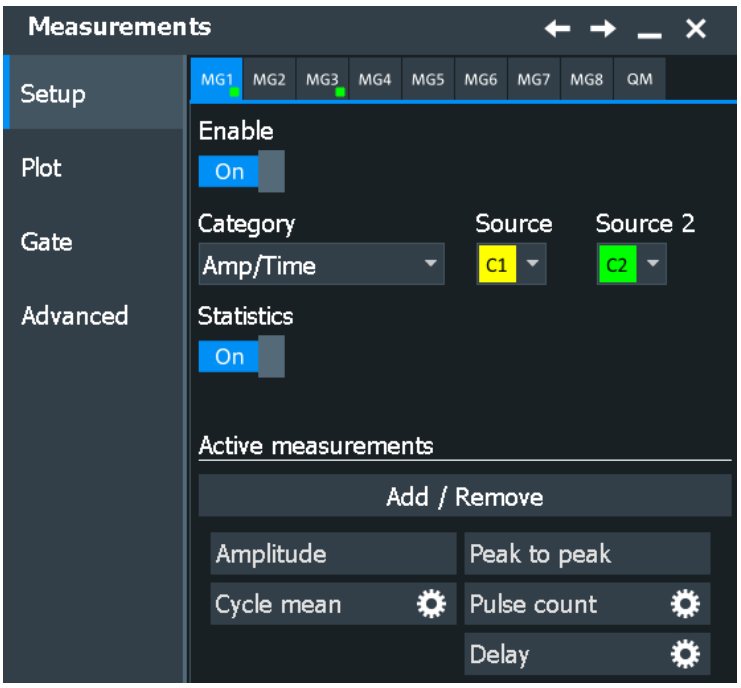

This section describes the settings that relate to all measurements.

The category-dependent measurement settings are explained in the following sections:

- Section 8.2.2.2, "Settings for amplitude/time measurements", on page 345
- Section 8.2.3.2, "Settings for eye diagram measurements", on page 363
- Section 8.2.4.2, "Settings for optical measurements", on page 369
- Section 8.2.5.2, "Settings for spectrum measurements", on page 372
- Section 8.2.6.2, "Settings for histogram measurements", on page 378
- Section 8.2.8.2, "Setup for EMC/ESD measurements", on page 380
- Section 8.2.9.2, "Settings for protocol measurements", on page 386
- For jitter measurements, the settings depned on the installed option, see Section 19, "Jitter analysis and clock data recovery", on page 1098.

MG 1/2/3/4/5/6/7/8/Quick Meas
Subtabs for each measurement group, and for the quick measurement. The subtabs contain the configuration settings. A green dot on the tab indicates that the measurement group is active.

Enable
Starts the measurements of the selected measurement group.

Remote command:
`MEASurement<mg>[:ENABle]` on page 1597

Category
Measurement category. The following categories are available:

Time domain:

- Amp/Time: amplitude and time measurements

- Eye: eye diagram measurements
- Histogram: measurements on histograms
- Optical measurements for testing the power of optical signals
- Jitter measurements (available if one of the jitter options is installed)
- EMC/ESD measurements for EMC/ESD test setups with option R&S RTP-K155
- Protocol: advanced analysis with option R&S RTP-K35

Frequency domain
- Spectrum: measurements on spectrum waveforms
- Histogram: measurements on histograms

Remote command:
`MEASurement<mg>:CATegory` on page 1599

Source, Source 2
Define the source of the measurement group. The 2nd source is required for amplitude/time measurements that are performed on two waveforms (e.g. delay, phase). Availability of sources depends on the selected category and installed options.

Remote command:
`MEASurement<mg>:SOURce` on page 1597

Active measurements
The "Active Measurements" list shows the measurements that are selected for the current category.

At least one measurement must be selected. If further settings are available for a measurement, a settings icon is shown beside the measurement's name.

To change the selection, tap "Add / Remove Measurements".

In the "Add / Remove Measurements" dialog, select the measurements that you need. Tap "Clear" to disable all selected measurements. Tap "OK" to confirm the selection.

Remote command:
`MEASurement<mg>:MAIN` on page 1600
`MEASurement<mg>:ADDitional` on page 1602

Envelope
This setting is only available for measurements on envelope waveforms, see "Arithmetic" on page 133.

"Both"	The upper and the lower envelope are used in measurements. For time measurements, the averages of min and max values are used, that is, the measurement is performed on the average waveform built from the upper and lower envelope.
"Maximum"	Measurements are performed on the upper envelope.
"Minimum"	Measurements are performed on the lower envelope.

Remote command:
`MEASurement<mg>:ENVSelect` on page 1606


Statistics
Enables the calculation and display of statistical results.

Remote command:
MEASurement<mg>:STATistics[:ENABle] on page 1677

8.2.2 Amplitude/time measurements

8.2.2.1 Overview of amplitude/time measurements

Access: [Measure] > "Setup" tab > "Amp/Time" category

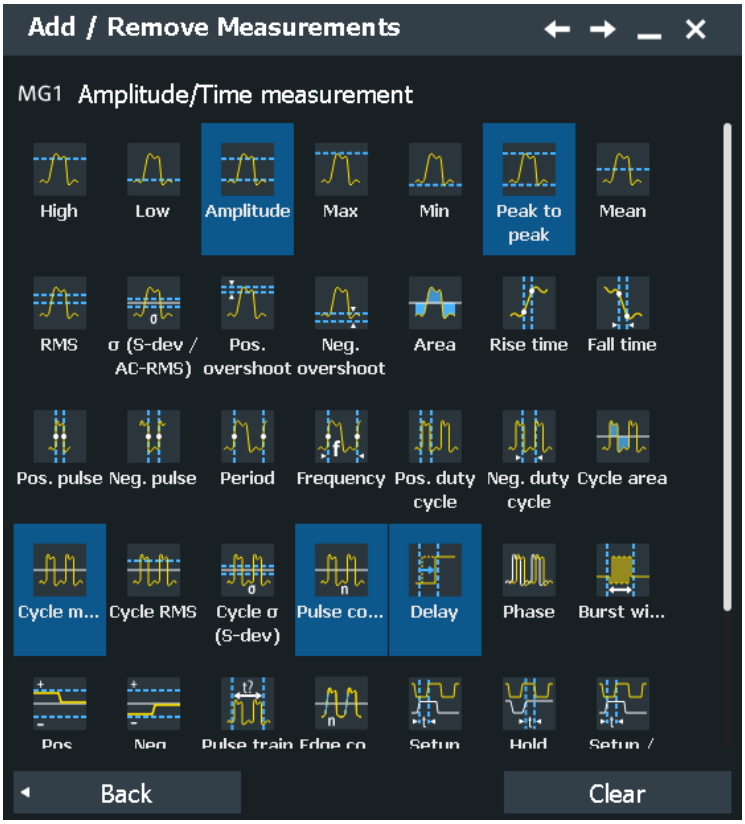

The R&S RTP provides various voltage, time, area and counting measurements in the category "Amp/Time". Some measurements require reference levels to be set according to the measurement purpose.

For signals with "PAM order" > 2, only some of the measurements are available, see Section 8.2.2.3, "Amplitude/time measurements on PAM-N signals", on page 353.

Reference levels are explained in Section 13.3, "Signal and reference levels for NRZ signals", on page 539.

To select the active measurements in remote control, use:

- MEASurement<mg>:MAIN on page 1600
- MEASurement<mg>:ADDitional on page 1602

In the following sections, the amplitude and time measurements are explained, grouped in subcategories:




- Amplitude measurements 340
- Time measurements 342
- Area measurements 344
- Counting 344
- Arithmetic 344

Amplitude measurements

Access: [Measure] > "Setup" tab > "Amp/Time" category

Table 8-1: Amplitude measurements

	Meas. type	Symbol	Description/Result
	High	High	High signal level
	Low	Low	Low signal level
	Amplitude	Amp	Amplitude of the signal: the difference of high and low signal levels $X_{Ampl} = X_{High} - X_{Low}$
	Max	Max	Absolute maximum value of the waveform
	Min	Min	Absolute minimum value of the waveform
	Peak to peak	PTP	Peak-to-peak value of the waveform: the difference of maximum and minimum values $X_{Ampl} = X_{Max} - X_{Min}$
	Mean	Mean	Arithmetic average of the waveform voltage values $X_{Mean} = \frac{1}{N_{Eval}} \sum_{i=1}^{N_{Eval}} x(i)$
	RMS	RMS	RMS (root mean square, quadratic mean) of the waveform voltage values $X_{RMS} = \sqrt{\frac{1}{N_{Eval}} \sum_{i=1}^{N_{Eval}} x^2(i)}$
	σ (S-dev)	σ	Standard deviation of the waveform samples $\sigma_X = \sqrt{\frac{1}{N_{Eval}-1} \sum_{i=1}^{N_{Eval}} (x(i) - X_{Mean})^2}$
	Pos. overshoot	P.OS	Positive overshoot of a square wave, calculated from measurement values High, Max, and Amplitude $+Ovr = \frac{V_{top} - V_{P+}}{V_{Amp}} \cdot 100\%$

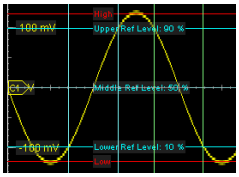	Meas. type	Symbol	Description/Result
	Neg. overshoot	N.OS	Negative overshoot of a square wave, calculated from measurement values Min, Low, and Amplitude $-Ovr = \frac{V_{base} - V_{P-}}{V_{Amp}} \cdot 100\%$
	Cycle mean	CMean	The mean value of one cycle
	Cycle RMS	CRMS	The RMS (root mean square) value of one cycle
	Cycle σ (S-dev)	Cycσ	The standard deviation of one cycle
	Trig. ProbeMeter		The DC voltage from the connected probe. Only available if an active Rohde & Schwarz probe with R&S ProbeMeter is connected.
	Slew rate rising	SRRise	Steepness of the rising edge: voltage difference between the lower and higher reference level, divided by the rise time. Results in V/s = V*Hz (blue vertical lines in the picture below).
	Slew rate falling	SRFall	Steepness of the falling edge: voltage difference between the higher and lower reference level, divided by the fall time. Results in V/s = V*Hz (green vertical lines in the picture below). 
	Signal level	SignalLevel	The value of the signal level
	Voltage crossing	Voltage crossing	The point where the waveform crosses a predefined voltage level.
	N-Period	N-Period	The time passed for N consecutive crossings
	Cycle min	Cycle min	Minimum value of one cycle
	Cycle max	Cycle max	Maximum value of one cycle


Time measurements

Access: [Measure] > "Setup" tab > "Amp/Time" category

Reference levels are explained in Section 13.3, "Signal and reference levels for NRZ signals", on page 539.

Table 8-2: Time measurements

	Meas. type	Symbol	Description/Result
	Rise time	RTime	Rise time of the first rising edge, the time it takes the signal to rise from the lower reference level to the upper reference level. In manual reference level mode, the high and low reference levels are used. Measurement of all events in the acquisition is possible.
	Fall time	FTime	Fall time of the first falling edge, the time it takes the signal to fall from the upper reference level to the lower reference level. In manual reference level mode, the high and low reference levels are used. Measurement of all events in the acquisition is possible.
	Pos. pulse	PPuls	Duration of the first positive pulse: time between a rising edge and the following falling edge measured on the middle reference level. The measurement requires at least one complete period of a triggered signal. Measurement of all events in the acquisition is possible.
	Neg. pulse	NPuls	Duration of the first negative pulse: time between a falling edge and the following rising edge measured on the middle reference level. The measurement requires at least one complete period of a triggered signal. Measurement of all events in the acquisition is possible.
	Period	Period	Time between two consecutive waveform edges of the same direction, measured on the middle reference level. The measurement requires at least one complete period of a triggered signal. Measurement of all events in the acquisition is possible.
	Frequency	Freq	Frequency of the signal, reciprocal value of the period. *Freq* = 1 / *Period*
	Pos. duty cycle	PDCyc	Positive duty cycle: Width of a positive pulse in relation to the period in %. The measurement requires at least one complete period of a triggered signal. Multiple measurements are possible. $PDCyc = \frac{T_{PosPulse}}{T_{Period}} \times 100\%$
	Neg. duty cycle	NDCyc	Negative duty cycle: Width of a negative pulse in relation to the period in %. The measurement requires at least one complete period of a triggered signal. Multiple measurements are possible. $PDCyc = \frac{T_{NegPulse}}{T_{Period}} \times 100\%$

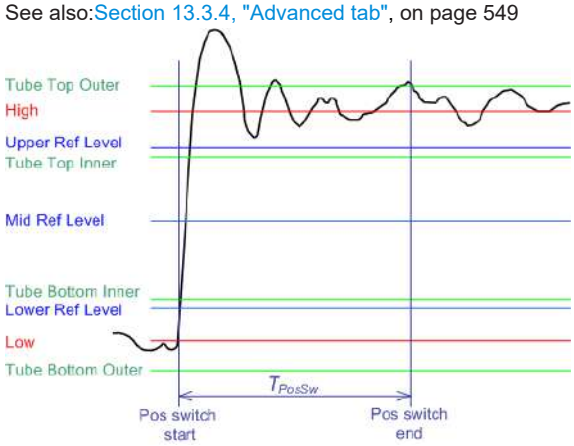	Meas. type	Symbol	Description/Result
	Delay		Time difference between any two edges of two measurement sources at any reference level. The measurement result is negative if the edge of the second source comes before the edge of the first source. See: "Settings for delay and phase measurements (analog sources)" on page 348
	Phase		Phase difference between the two waveforms. *Phase = Delay / Period * 360*
	Burst width	BWid	Duration of one burst, measured from the first edge to the last
	Pos. switching	PSwit	Settling time at rising edges: Time between crossing the lower reference level and the last return of the signal into the top tolerance tube. See also:Section 13.3.4, "Advanced tab", on page 549 
	Neg. switching	NSwit	Settling time at falling edges: Time between crossing the upper reference level and the last return of the signal into the bottom tolerance tube. See also "Pos. switching" above.
	Pulse train	PulTr	Duration of N positive pulses, measured from the edge of the first pulse to the opposite edge of the N-th pulse. Define N for the measurement.
	Setup Hold Setup/Hold time	Setup Hold SHT	Setup and Hold time measurement with positive and/or negative clock edge. See: "Setup/Hold measurement settings" on page 349

	Meas. type	Symbol	Description/Result
	Setup/Hold ratio	SHR	Setup/Hold ratio measurement with positive and/or negative clock edge. *SHR = Setup / (Setup + Hold)* See: "Setup/Hold measurement settings" on page 349
	Delay to trigger	DTO	Time between the trigger event and a following signal slope. High accuracy even if the trigger event is outside the acquisition data. See: ● "Delay to trigger measurement settings" on page 351

Area measurements

Access: [Measure] > "Setup" tab > "Amp/Time" category

Area measurements are voltage over time measurements.

Table 8-3: Area measurements

	Meas. type	Symbol	Description/Result
	Area	Area	Area between the waveform and a reference level ("Area level", X_{Ref}). $Area = \frac{T_{Eval}}{N_{Eval}} \times \sum_{k=1}^{N_{Eval}} (x(k) - X_{ref})$ T_{Eval}: Evaluation time, time of a full waveform or limited by a gate
	Cycle area	CArea	Area between the waveform and a reference level ("Area level") measured for one period, see also "Area" measurement. The measurement requires at least one complete period of a trigged signal. Multiple measurements are possible.

Counting

Access: [Measure] > "Setup" tab > "Amp/Time" category

Table 8-4: Counting measurements

	Meas. type	Symbol	Description/Result
	Pulse count	PCount	The number of positive or negative pulses of the waveform, or of both positive and negative pulses. The mean value of the signal is determined. If the signal passes the mean value, an edge is counted. A positive pulse is counted if a rising edge and a following falling edge are detected. A negative pulse is counted if a falling edge and a following rising edge are detected.
	Edge count	EdCo	The number of positive or negative edges, or of both positive and negative edges. The instrument determines the mean value of the signal and counts an edge every time the signal passes the mean value.

Arithmetic

Access: [Measure] > "Setup" tab > "Amp/Time" category


Table 8-5: Arithmetic measurements

	Meas. type	Symbol	Description/Result
	Arithmetic		Allows you to perform basic arithmetic operations between selected measurement values and/or constant.

8.2.2.2 Settings for amplitude/time measurements

Access: [Measure] > "Setup" tab > "Amp/Time" category

Amplitude and time measurements are available for sources in the time domain. For some amplitude/time measurements, such as delay, setup/hold and delay to trigger, further settings are required to get a measurement result.

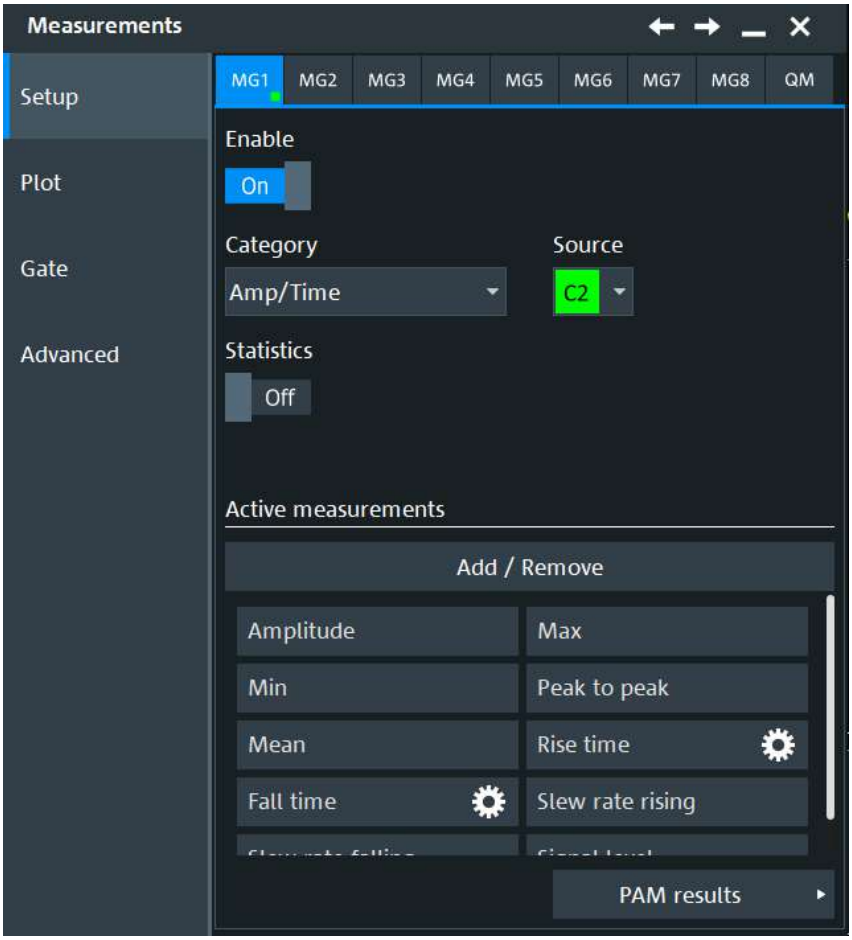

If further settings are available for a measurement, a settings icon is shown beside the measurement's name in the "Active measurements" list. Tap the icon to configure the measurement.

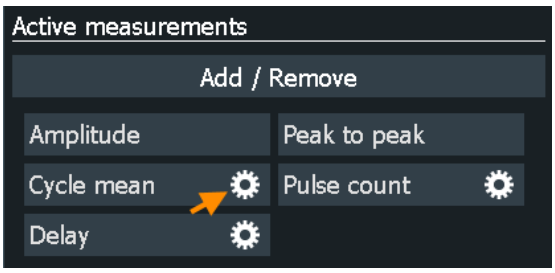


Figure 8-4: Selected active measurements, some have further settings

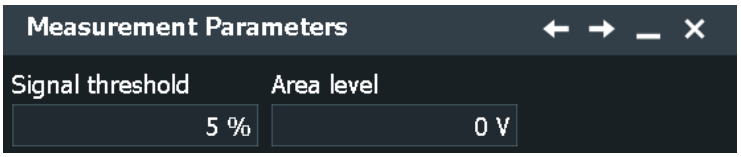


Figure 8-5: Settings for cycle area measurement

This section explains all settings for amplitude/time measurements. For a description of available measurement, see Section 8.2.2.1, "Overview of amplitude/time measurements", on page 339.

PAM results 346
Signal threshold 346
Area level 347
Pulses slope 347
Measured slope 347
Measured slope (N-Period) 347
Settings for delay and phase measurements (analog sources) 348
Settings for delay and phase measurements (digital sources) 349
Setup/Hold measurement settings 349
Clock ref level, Ref level 350
Data ref level / Ref level 350
Pulse count 350
Edges slope 350
Delay to trigger measurement settings 351
Settings for Pos./ Neg. pulse measurements 351
Settings for Voltage crossing 352
Settings for N-Period 353

PAM results
These settings are only available for signals with a "PAM order" > 2. For more information, see Section 8.2.2.3, "Amplitude/time measurements on PAM-N signals", on page 353.

Signal threshold
The measured signal value must reach a certain voltage or bit to be included in the measurement algorithm. This minimum value is defined in percent of the signal amplitude (difference of high and low signal levels). Values below this value are considered to be noise and they are ignored. The setting is relevant for area, time, and counting measurements.

Remote command:
MEASurement<mg>:DETThreshold on page 1607

Area level
The reference level used to integrate the waveform. The setting is only relevant for area measurements.

Remote command:
MEASurement<mg>:AMPTime:ALEVel on page 1607

Pulses slope
Sets the first slope of the pulses to be counted.

The setting is available only for the "Pulse count" measurement.

"Positive" Positive pulses are counted.

"Negative" Negative pulses are counted.

"Either" Both positive and negative pulses are counted.

Remote command:
MEASurement<mg>:AMPTime:PSLope on page 1608

Measured slope
Selects the slope direction for frequency and period measurements, except for N-Period measurements.

"Positive / Negative" Measures the time between rising or falling edges, respectively.

"Either" In multiple measurements, the time is measured both between rising edges and between falling edges.
In single measurements. The first edge is taken for the measurement.

"First edge" Time is measured either between rising edges or between falling edges. The first edge is taken for the measurement. In single measurements, it works the same way as "Either".
Only available for analog measurement sources.

Remote command:
MEASurement<mg>:AMPTime:PFSLope on page 1608

Measured slope (N-Period)
Selects the slope direction for N-Period measurements.


"Positive / Negative" Measures the time between rising or falling edges, respectively.

"First edge" Time is measured either between rising edges or between falling edges. The first edge is taken for the measurement. In single measurements, it works the same way as "Either".
Only available for analog measurement sources.

Remote command:
MEASurement<mg>:AMPTime:NPFSlope on page 1609


Settings for delay and phase measurements (analog sources)
The specific settings for delay measurement allow you to measure the time between any two slopes at any reference level. Therefore, the reference levels and the slopes must be defined for each source individually. The measurement result is negative if the edge of the second source comes before the edge of the first source.

"Level selection source 1/2": For each measurement source, select the reference level on which the time is measured.

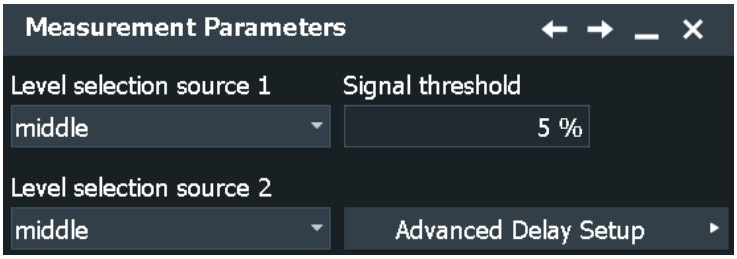

"Advanced Delay Setup":

With the settings shown in the picture, the time between the second and the fifth rising edge is measured.

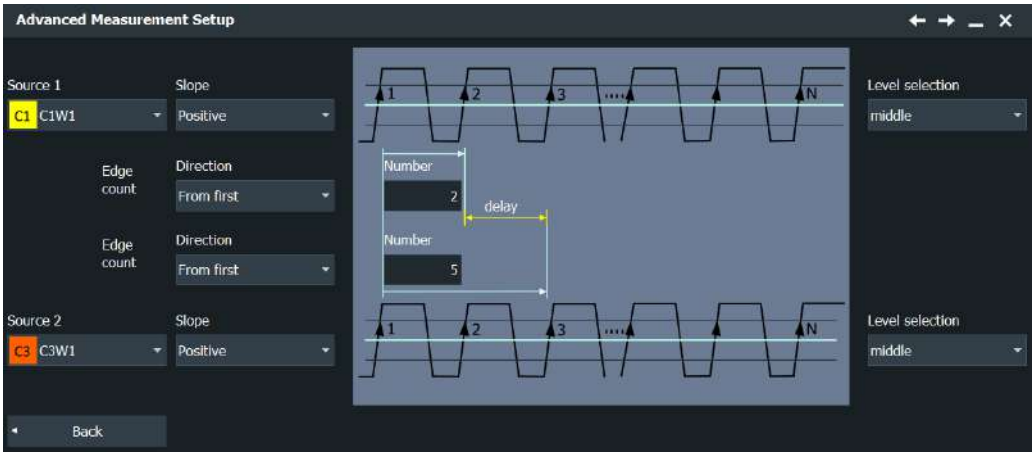

"Level selection" — Selects the reference level on which the time is measured.

"Slope" — Sets the edge of each source between which the delay is measured: positive, negative, or either of them.

"Direction" — Selects the direction for counting slopes for each source: from the beginning of the waveform, or from the end.

"Number" — Sets the number of the edge that is relevant for delay measurement.

Remote command:
`MEASurement<mg>:AMPTime:DELay<n>:LSELect` on page 1610
`MEASurement<mg>:AMPTime:DELay<n>:SLOPe` on page 1610
`MEASurement<mg>:AMPTime:DELay<n>:DIRection` on page 1609
`MEASurement<mg>:AMPTime:DELay<n>:ECOunt` on page 1609


Settings for delay and phase measurements (digital sources)
Delay measurement on digital channels is reduced to measure the time between two subsequent rising or two subsequent falling edges.

The edge direction is set with Edges slope.


Setup/Hold measurement settings
Setup/Hold measurements analyze the relative timing between two signals: a data signal and the synchronous clock signal. Setup time is the time that the data signal is steady before the clock edge - the time between a data transition and the next specified clock edge. Hold time is the time that the data signal is steady after the clock edge - the time between a data transition and the previous specified clock edge.

"Setup/Hold time" measures and displays the setup and hold durations. "Setup/Hold ratio" measurements return the ratio of the setup time to the sum of hold and setup time: $T_{Setup} / (T_{Setup} + T_{Hold})$.

The clock edge can be defined, the polarity of the data signal does not matter.

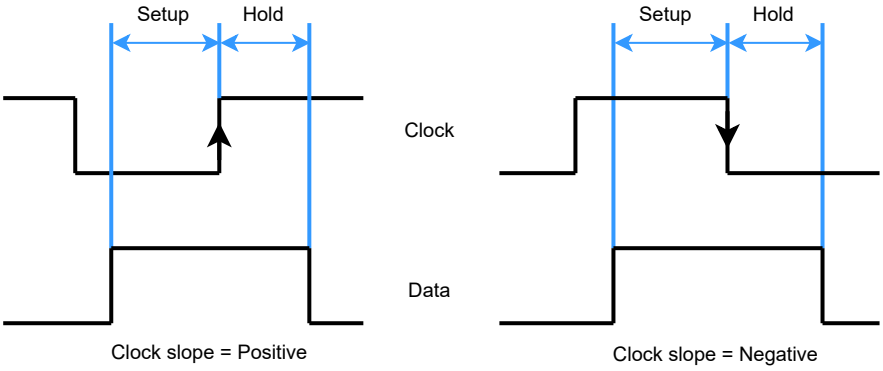

If at least one of the setup/hold measurements is selected, more settings appear to specify the measurement.

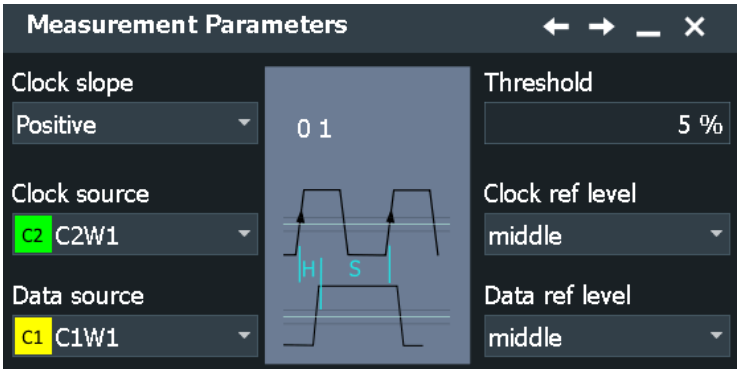

"Clock slope" Sets the edge of the clock from which the setup and hold times are measured: positive, negative, or either of them. If "Either" is selected, the clock edges next to the data edge are considered regardless of the clock slope.

"Clock source" The "Clock source" is identical to the "2nd Source" of the measurement. It defines the waveform used as the clock in the setup/hold measurement.

"Data source" The "Data source" is identical to the "Source" of the measurement. It sets the channel of the data signal.

"Clock ref level" See "Clock ref level, Ref level" on page 350.

"Data ref level" See "Data ref level / Ref level" on page 350.

"Threshold" See "Signal threshold" on page 346.

Remote command:
Clock slope: `MEASurement<mg>:AMPTime:CSLope` on page 1611

Clock ref level, Ref level
Selects the reference level of the clock on which the time is measured. The intersection of slope and reference level defines the time point for measurements.

The setting is used for setup and hold measurements, and for jitter measurements (option R&S RTP-K12).

Remote command:
`MEASurement<mg>:AMPTime:CLCK<n>:LSELect` on page 1612

Data ref level / Ref level
The setting defines the "Data ref level" for setup and hold measurements, and for time-interval error measurements (option R&S RTP-K12). It selects the reference level of the data signal on which the time is measured. The intersection of slope and reference level defines the time point for measurements.

For clock jitter measurements (option R&S RTP-K12), it sets the "Reference level" for the time measurement.

Remote command:
`MEASurement<mg>:AMPTime:DATA<n>:LSELect` on page 1612

Pulse count
Sets the number N of positive pulses for the "Pulse train" measurement. This measurement measures the duration of N positive pulses from the edge of the first pulse to the opposite edge of the N-th pulse.

Remote command:
`MEASurement<mg>:AMPTime:PTCount` on page 1611

Edges slope
Sets the edge direction to be considered. The setting is relevant for edge count measurement and delay measurement on digital channels.


"Positive" Positive edges are considered.

"Negative" Negative edges are considered.


"Either" Both positive and negative edges are counted (edge count). Delay is measured either between rising edges or between falling edges. The first edge is taken for the measurement.

Remote command:
MEASurement<mg>:AMPTime:ESLope on page 1611

Delay to trigger measurement settings
Delay to trigger measures the time between the trigger point and the following slope of a waveform. The delay between the trigger and the slope can be high compared to the accuracy of the acquisition, and the trigger point can even be outside of the current acquisition.

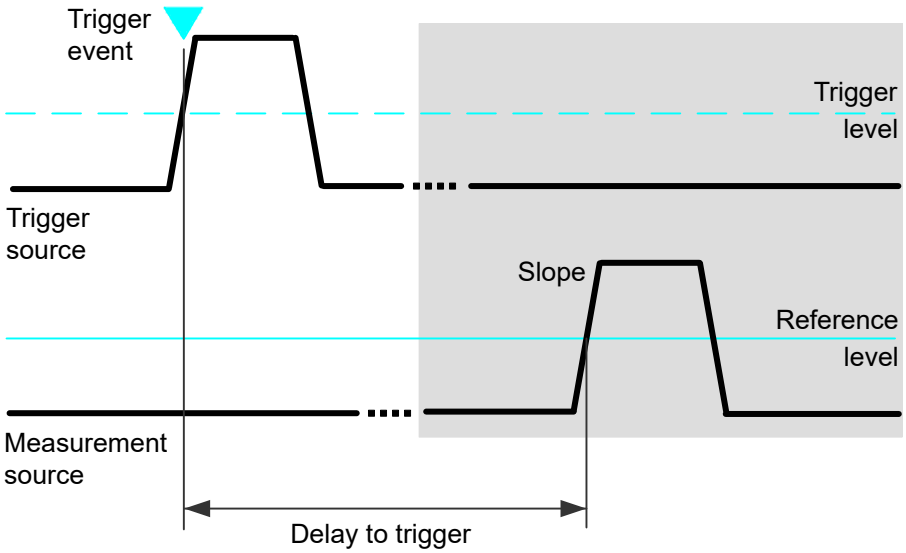

To configure the trigger conditions, use the trigger setup. To set up the slope, additional settings appear in the measurements "Setup" dialog box.

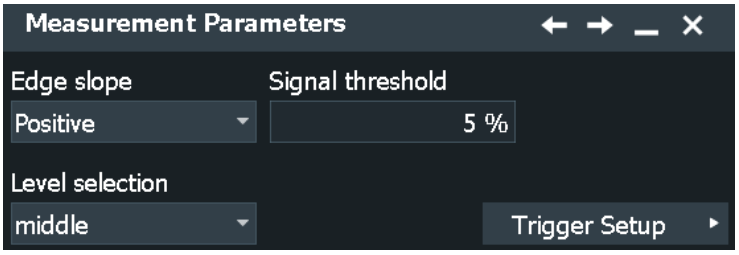

"Edge slope" Sets the edge direction to be used for delay measurement: positive, negative, or either edge.

"Level selection" Selects the reference level of the measurement source on which the delay is measured: upper, middle, or lower level.

"Signal threshold"
See "Signal threshold" on page 346.

Remote command:
MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe on page 1613
MEASurement<mg>:AMPTime:DTOTrigger<n>:LSELect on page 1613

Settings for Pos./ Neg. pulse measurements
Defines the settings for the positive and negative pulse measurements.

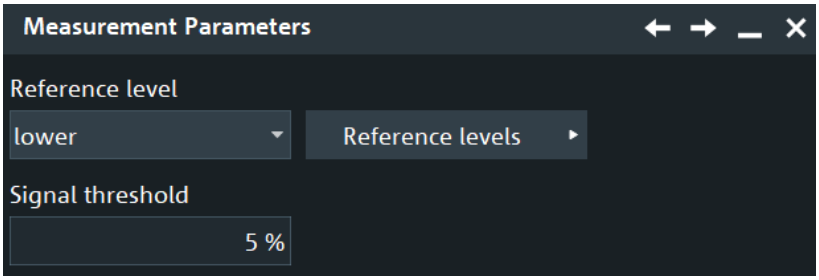


Figure 8-6: Settings for reference level: upper, middle, lower

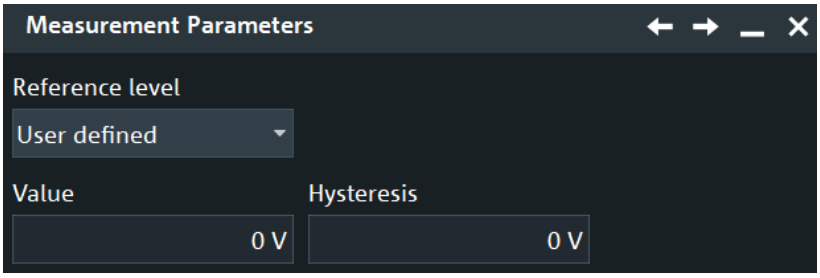


Figure 8-7: Settings for reference level: User-defined

"Reference level" Selects the reference level of the measurement source on which the pulse is measured: upper, middle, lower level or user-defined level.


"Signal threshold" Sets a signal value that must be exceeded for the signal value to be included in the measurement.

"Value" Sets the reference level for the measurement for the user-defined reference level.

"Hysteresis" Sets a hysteresis value for the measurement.

Remote command:
`MEASurement<mg>:AMPTime:PRLevel` on page 1616
`MEASurement<mg>:AMPTime:PRLMode` on page 1616
`MEASurement<mg>:AMPTime:PLHYsteresis` on page 1617

Settings for Voltage crossing
Defines the settings for voltage crossing.

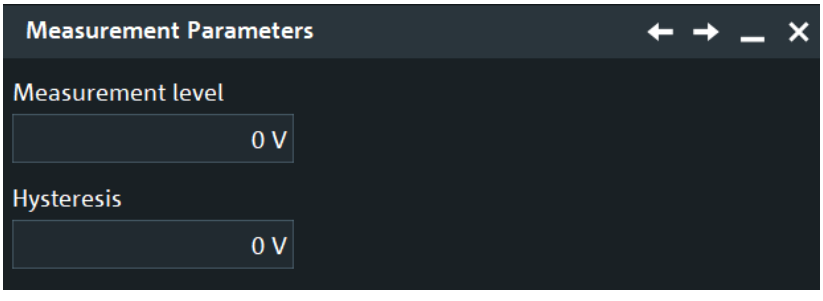


"Measurement level" Sets the measurement reference level for the voltage crossing calculation.

"Hysteresis" Sets the minimum level difference between the two sources before the next crossing can be detected.

Remote command:
`MEASurement<mg>:AMPTime:VCMLevel` on page 1617
`MEASurement<mg>:AMPTime:VCHYsteresis` on page 1615

Settings for N-Period
Defines the settings for the N-period measurements.

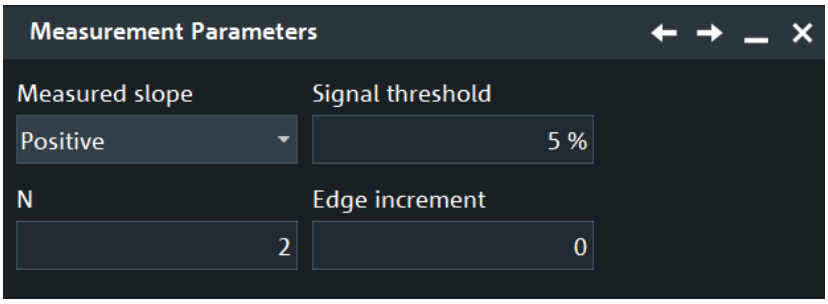

"Measured slope" Sets the slope to be used as the beginning/ end of the measurement. The following values are available:

- "First edge": the measured slope is the polarity of the first edge of the signal.
- "Positive": the measured slope is the rising edge of the signal.
- "Negative": the measured slope is the falling edge of the signal.
- "Either": the rising and falling edges of the signal are measured

"Signal threshold" Sets a signal value in percent that must be exceeded for the signal value to be included in the measurement.

"N" Selects the N-period number, the number of consecutive periods of the waveform.

"Edge increment" Sets the number of edges to be skipped per measurement event.


Remote command:
`MEASurement<mg>:AMPTime:EINCrement` on page 1616
`MEASurement<mg>:AMPTime:NPERiod` on page 1615

8.2.2.3 Amplitude/time measurements on PAM-N signals

Requires option R&S RTP-K135.


In this dialog you can access the amplitude and time measurements that can be performed on signals with a "PAM order" > 2. For configured measurements on higher order PAM-N signals, also limit and margin checks are available (Section 8.2.13, "Limit and margin checks: Advanced tab", on page 404).

Access: [Measure] > "Setup" tab > "Amp/Time" category.

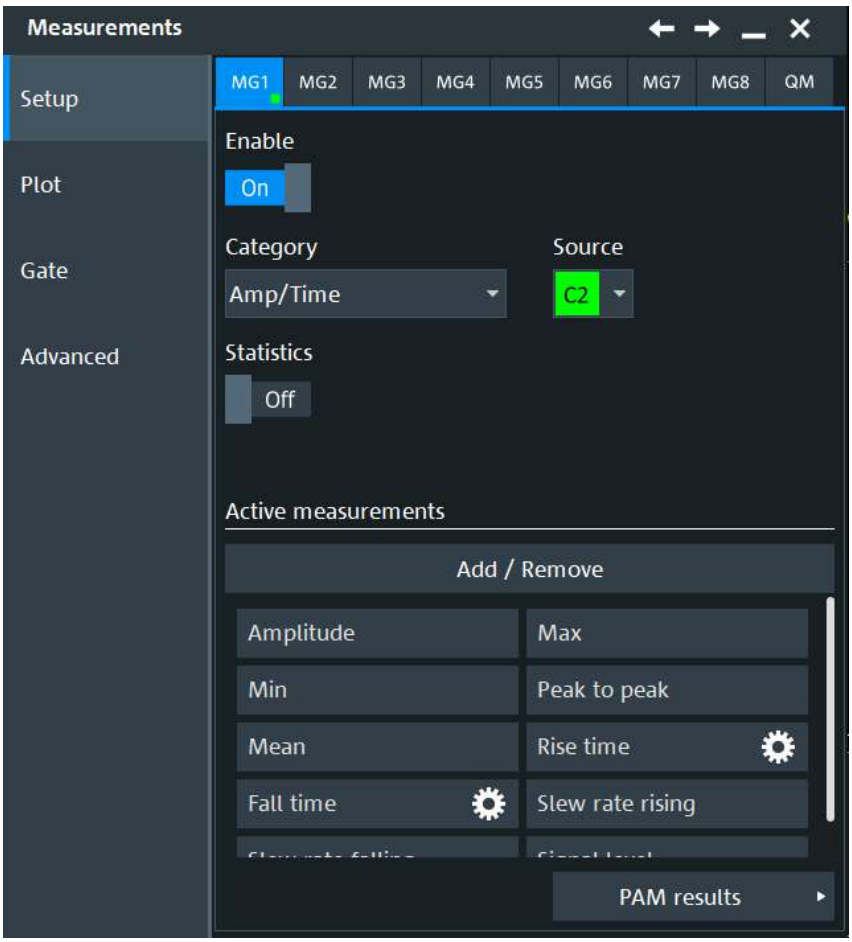

The following measurements are available for PAM-N signals:

- "Amplitude"
- "Max"
- "Min"
- "Peak to peak"
- "Mean"
- "Rise time"
- "Fall time"
- "Slew rate rising"
- "Slew rate falling"
- "Signal level"

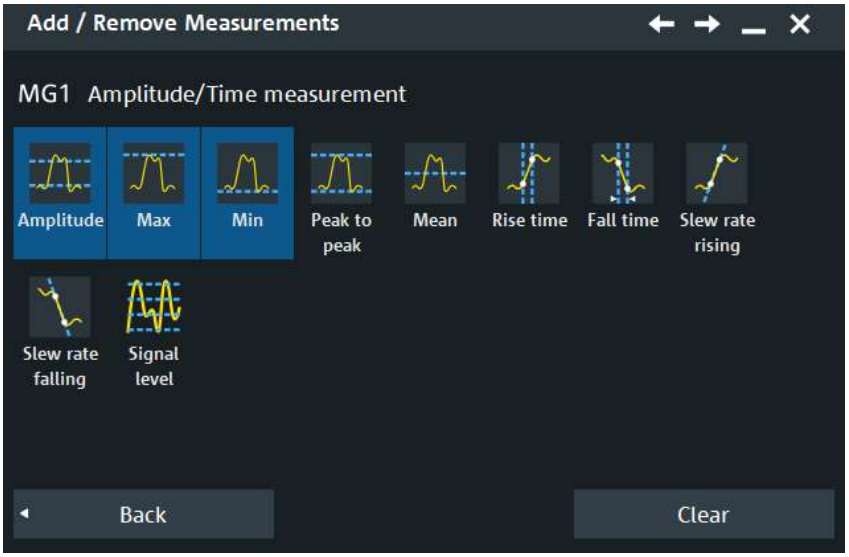

For more information about the measurements, see Section 8.2.2.1, "Overview of amplitude/time measurements", on page 339.

Settings for amplitude/time measurements on higher order PAM-N signals

Access: [Measure] > "Setup" tab > "Amp/Time" category > "PAM results".

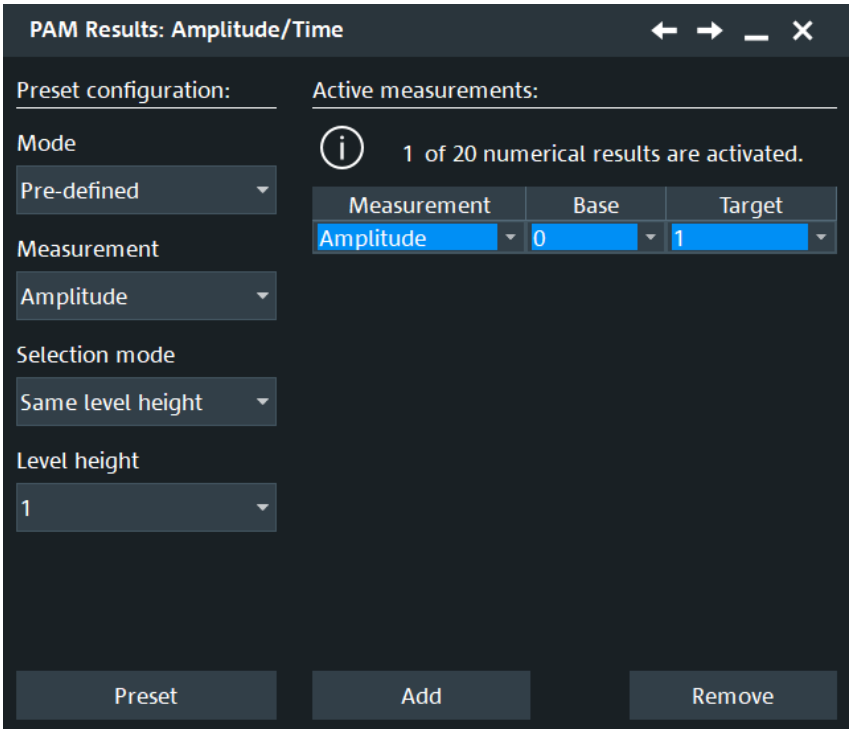


Figure 8-8: Predefined mode

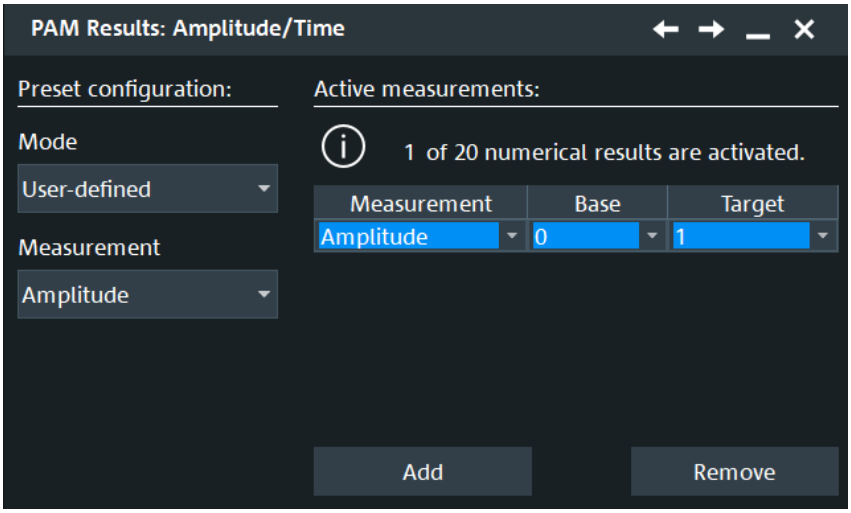


Figure 8-9: User-defined mode

Preset configuration
For easier configuration, you can use some of the predefined user configurations. For more specific user cases, you can also define your own settings.

Mode ← Preset configuration
Selects if you want to add "Pre-defined" user configurations to the active measurements, or define your own "User-defined" settings.

Remote command:
`MEASurement<mg>:PAMResults:PRESetconfig:MODE` on page 1619

Measurement ← Preset configuration
Selects a measurement from the list of active amplitude/ time measurements.

Remote command:
`MEASurement<mg>:PAMResults:PRESetconfig:MEASurement` on page 1619

Selection mode ← Preset configuration
Selects how the level difference between the "Base" and "Target" level of the PAM-N signal is defined.

"Same level height"	All active components have the same level difference, "Level height", between the "Base" and "Target" level.
"Explicit level"	You can define an "Explicit level" that is of interest.

Remote command:
`MEASurement<mg>:PAMResults:PRESetconfig:SELMode` on page 1620
`MEASurement<mg>:PAMResults:PRESetconfig:EXPLicit` on page 1619

Preset ← Preset configuration
Available only for "Mode" = "Pre-defined".

Adds a predefined preset configuration for the selected component to the "Active measurement" table.

Remote command:
MEASurement<mg>:PAMResults:PRESetconfig:PRESet on page 1620

Active measurements
In this table you can select the components for the measurement and their settings.

Measurement ← Active measurements
Selects a measurement from the list of active measurements.

Remote command:
MEASurement<mg>:PAMResults:RESultconfig<n>:MEASurement on page 1621

Base ← Active measurements
Selects the base level. The base level is the lowest amplitude level used in the modulation. It sets the reference point for the least amount of energy a pulse can carry in the system.

Remote command:
MEASurement<mg>:PAMResults:RESultconfig<n>:BASE on page 1621

Target ← Active measurements
Selects the target level, the higher level a pulse can reach. The different target levels represent the different symbols/data values that are being transmitted.

Remote command:
MEASurement<mg>:PAMResults:RESultconfig<n>:TARGet on page 1621

Add
Adds a new line to the active measurement list. You can add up to 20 numerical results.

Remote command:
MEASurement<mg>:PAMResults:ADD on page 1618

Remove
Removes the last added line of the currently selected measurement.

Remote command:
MEASurement<mg>:PAMResults:REMove on page 1620

8.2.2.4 Arithmetic for amplitude/time and spectrum measurements

Access: [Measure] > "Setup" tab > "Amp/Time" or "Spectrum" category > add measurement "Arithmetic" > "Arithmetic".

In this dialog, you can set up basic arithmetic operations between selected measurement values and/or constant.

You can select only measurement groups and measurements that are already enabled.

Type
Selects the type of arithmetic measurement:

"Measurement" Performs an arithmetic operation between two measurement results. You can select from the measurements enabled for "Amp/Time" or "Spectrum".

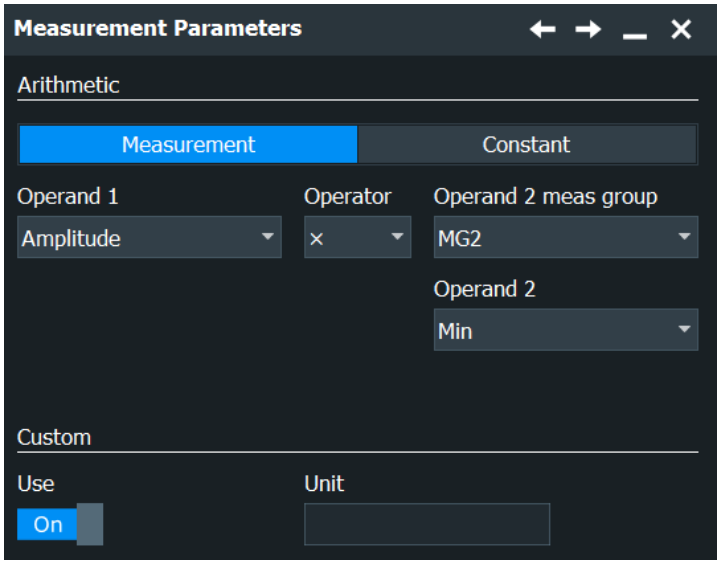


Figure 8-10: Arithmetic with two measurement results

"Constant" Performs an operation between a measurement result and a user defined fixed Constant.

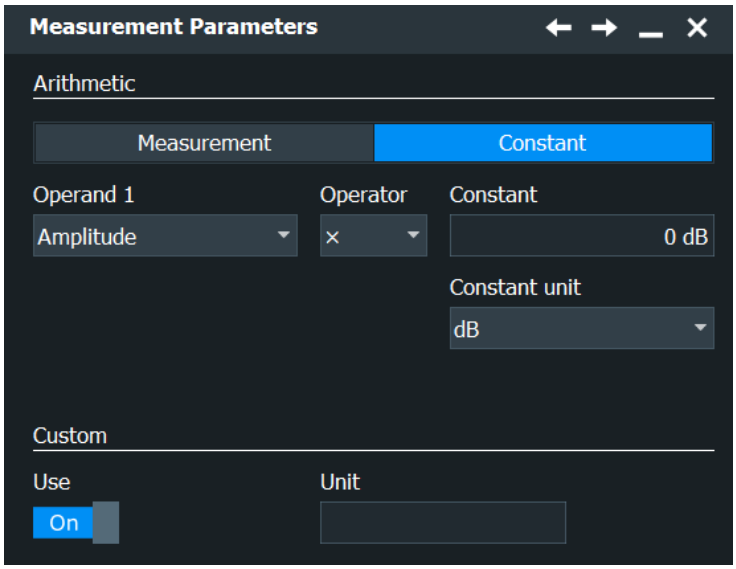


Figure 8-11: Arithmetic with a measurement result and a constant

Remote command:
`MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:TYPE` on page 1626

Operand 1
Selects the first operand for the arithmetics. You can select one of the measurements, that is enabled for the current measurement group.

Remote command:
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:AMPTime
on page 1629
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:AMPTime
on page 1624
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:SPECtrum
on page 1625
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:SPECtrum
on page 1630

Operand 2 meas group / Operand 2
Selects the measurement group and the measurement result for the second operand. You can select one of the measurements, that is enabled for the selected measurement group.

Remote command:
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:GROup on page 1625
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:GROup on page 1629

Operator
Selects the operation type to be performed on the selected operands. You can choose between +, -, * and /.

"+" Adds up the operands.
"-" Subtracts "Operand 2"/"Constant" from "Operand 1".
"*" Multiplies the operands.
"/" Divides "Operand 1" by "Operand 2"/"Constant".

Remote command:
MEASurement<mg>:AMPTime:ARIThmetic:OPERator on page 1624
MEASurement<mg>:SPECtrum:ARIThmetic:OPERator on page 1628

Custom
Enable "Use" to apply the user-defined value for the "Unit".

Remote command:
MEASurement<mg>:AMPTime:ARIThmetic:CUNState on page 1623
MEASurement<mg>:SPECtrum:ARIThmetic:CUNState on page 1627

Constant
Sets a constant numeric value for the arithmetic operation, for the "Constant" measurement type.

Remote command:
MEASurement<mg>:AMPTime:ARIThmetic:CONStant on page 1622
MEASurement<mg>:SPECtrum:ARIThmetic:CONStant on page 1626

Constant unit
Selects the unit for the Arithmetic for amplitude/time and spectrum measurements.

Remote command:
`MEASurement<mg>:AMPTime:ARIThmetic:COUNit` on page 1622
`MEASurement<mg>:SPECtrum:ARIThmetic:COUNit` on page 1627

8.2.2.5 Measuring the delay to trigger

Delay to trigger measures the time between the trigger point and the following slope of a waveform. If the delay is unknown, it can be measured in two stages - first a coarse and then a precise measurement.

See also: "Delay to trigger measurement settings" on page 351.

1. Set the horizontal scale and horizontal position so that the trigger point and the slope both are visible on the screen.
2. Select the delay to trigger measurement:
   a) In the "Setup" dialog, set the "Category" to "Amp/Time".
   b) Press "Add/ Remove Measurements" button.
   c) In the dialog, enable "Delay to trigger".
   d) Tap "Back".
3. Configure the "Delay to trigger" measurement:
   a) In the "Active Measurements" list, tap the "Delay to trigger" measurement.
   b) Select the source, that is the waveform with the delayed slope.
   c) Select the slope and the reference level.
   d) Check the trigger settings.
4. Enable the measurement. Note the result.
5. Turn the horizontal [Position] knob and enter the measured delay as horizontal position.

   Thus, the slope is moved to the center of the screen.
6. Adjust the time scale ("Menu" > "Horizontal" > "Setup" tab) and the sample rate and resolution ("Menu" > "Acquire" > "Setup" tab) to the required resolution.

   The trigger is outside the display and is not part of the current acquisition.
7. Repeat the "Delay to trigger" measurement.

   Now the delay is measured with high accuracy. You can analyze the variance of delay values using statistical evaluation and histogram functions.

8.2.3 Eye diagram measurements

The eye diagram is a tool for evaluation of signal quality and shows the combined effects of channel noise and intersymbol interference. It is a significant means of

visualizing jitter and allows you to analyze the reasons for it. By creating histograms of the eye diagram, important jitter parameters can be determined.

The eye diagrams are a superposition of repetitively sampled waveforms, which have a length of about 1 bit.

There are two ways to generate eye diagrams on the R&S RTP:

- Standard eye diagrams, which are a superposition of repetitively sampled digital data.
- To use advanced eye diagrams, option R&S RTP-K136/K137 or R&S RTP-K91/K93 is required.

The waveform display style must be set to vectors: "Menu" > "Settings" > "Display" > "Signal" > "Waveform style" = "Vectors".

The following characteristic values can be determined:

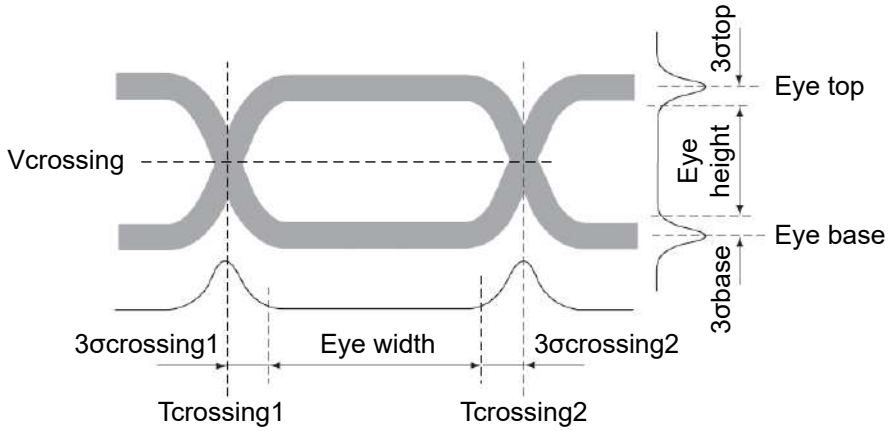


Figure 8-12: Basic eye diagram characteristics

Eye top = Mean of the upper vertical histogram
σtop = Standard deviation of the upper vertical histogram
Eye base = Mean of the lower vertical histogram
σbase = Standard deviation of the lower vertical histogram
Tcrossing = First and second mean of the horizontal histogram
σcrossing = Standard deviation of the horizontal histogram

8.2.3.1 Overview of eye diagram measurements

Various eye measurements are available.

To select the active measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1600
- `MEASurement<mg>:ADDitional` on page 1602

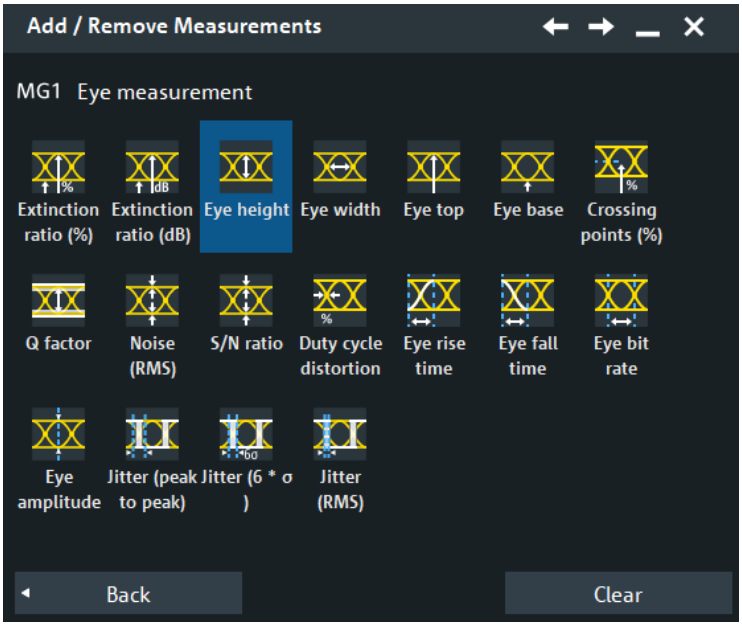


Table 8-6: Eye measurements

	Meas. type	Description/Result
	Extinction ratio (%)	The extinction ratio is an indication of efficiency. It describes the ratio of the power used to transmit a logic level 1, to the energy used to transmit a logic level 0. The R&S RTP provides extinction ratio measurements as a percentage, and in decibels: ER (%) = Eye base / Eye top *100 Prerequisite: Eye base > 0 and Eye top > 0 because the extinction ratio is defined only for positive values.
	Extinction ratio (dB)	ER (dB) = 10*log (Eye top / Eye base)
	Eye height	The vertical eye opening indicates the sensitivity of the transmission to noise. (Eye top – 3 * σtop) – (Eye base + 3 * σbase)
	Eye width	The horizontal eye opening indicates the time range during which the sampling of the logical state is possible. (Tcrossing2 – 3 * σcrossing2) – (Tcrossing 1 – 3 * σcrossing1)
	Eye top	Mean of the upper vertical histogram
	Eye base	Mean of the lower vertical histogram
	Q factor	Q factor = (Eye top – Eye base) / (σtop + σbase)

	Meas. type	Description/Result
	Noise (RMS)	Quadratic mean of the noise of eye top and eye base Noise (RMS) = (σtop + σbase)/2
	S/N ratio	Signal-to-noise ratio SNR = 10 * log (Eye amplitude / Noise RMS)
	Duty cycle distortion	Duty cycle distortion = 20 * log (Eye amplitude / Noise RMS)
	Eye rise time	Duration for signal to rise from 10% to 90% of the high signal level
	Eye fall time	Duration for signal to fall from 90% to 10% of the high signal level
	Eye bit rate	Frequency between two crossings
	Eye amplitude	Eye top - Eye base
	Jitter (peak to peak)	Average of the jitter for both crossing points. Jitter = (σcrossing1 + σcrossing2) / 2
	Jitter (6*σ)	Jitter (6*σ) = Jitter * 6
	Jitter (RMS)	Quadratic mean of the jitter at both crossing points
	Crossing points (%)	Percentage of points crossing the eye


The following eye measurements are possible on PAM-N signals of higher order: eye height, eye width, eye top, eye base, eye amplitude.

Limit and margin checks are also available for eye measurements, see Section 8.2.13, "Limit and margin checks: Advanced tab", on page 404. If the measurement supports PAM-N signals with PAM order > 2, limit and margin checks are also available for these measurements.

8.2.3.2 Settings for eye diagram measurements


Access: [Measure] > "Setup" tab > "Eye" category

Eye diagram measurements are only available for sources in the time domain.

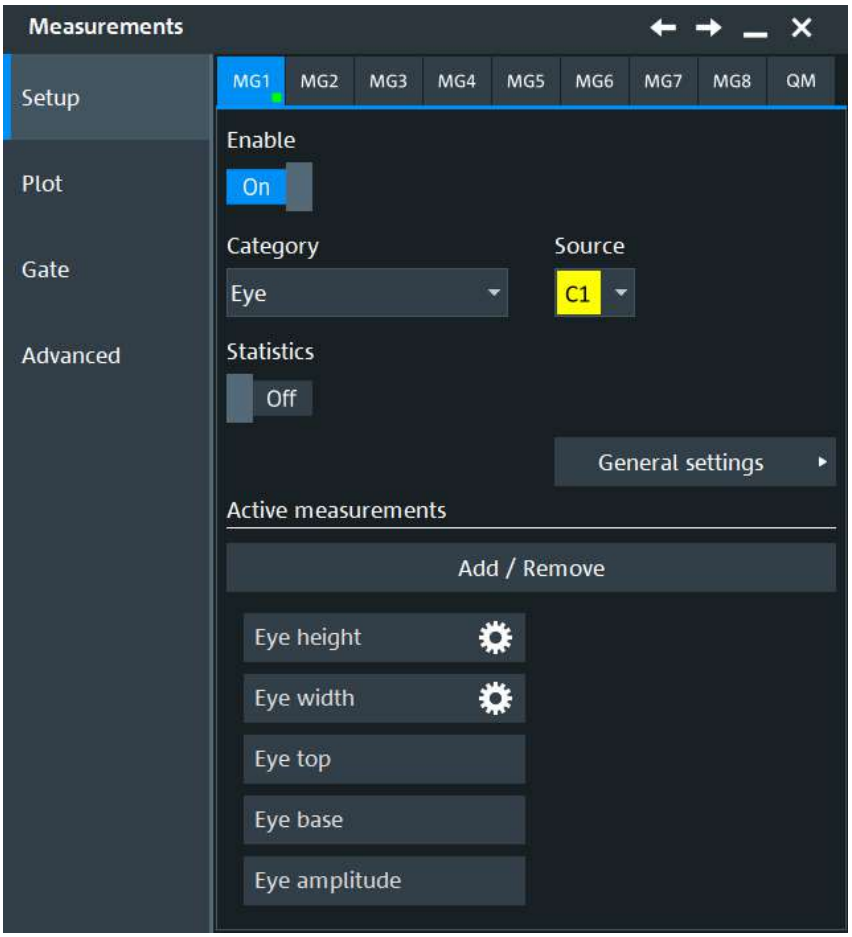

General

The settings in this dialog are relevant for the following eye measurements: "Extinction ratio (%)", "Extinction ratio (dB)", "Q factor", "Eye height", "Noise (RMS)", "S/N ratio", "Eye amplitude".

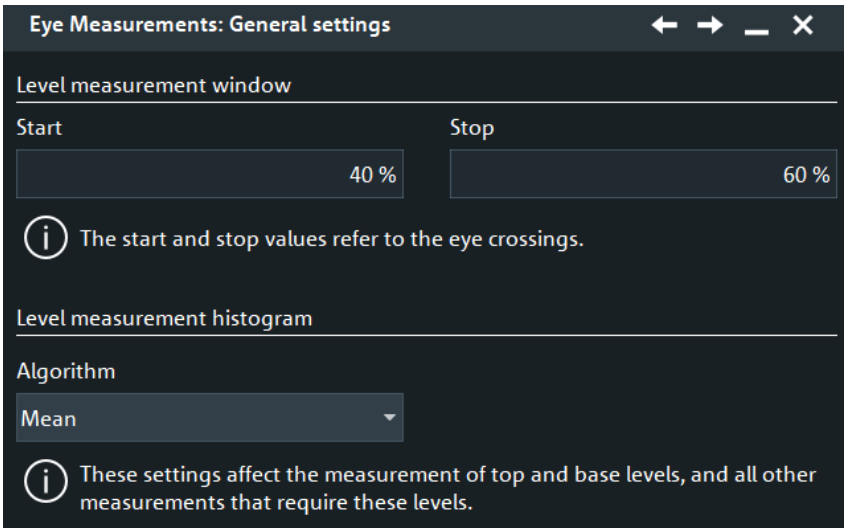

"Start" Defines the global start for the eye measurements.

"Stop" Defines the global stop for the eye measurements.


"Algorithm" Defines how to compute the top/base level and the corresponding sigma values.

- "Mean": the mean value of the histogram. The Sigma value is the standard deviation of the histogram.
- "Peak": the maximal peak of the histogram. Only values corresponding to this peak are used to compute sigma.
- "Inner peak": the inner peak of the histogram. Only values corresponding to this peak are used to compute sigma.
- "Outer peak": the outer peak of the histogram. Only values corresponding to this peak are used to compute sigma.

"Threshold" Sets the threshold used to separate peaks: two peaks are separated if they are split by a valley of height *Threshold * Maximal_histogram_value*.

Remote command:
`MEASurement<mg>:EYEJitter:GENSettings:RELative:STARt` on page 1634
`MEASurement<mg>:EYEJitter:GENSettings:RELative:STOP` on page 1635
`MEASurement<mg>:EYEJitter:GENSettings:MLEHistogram:ALGorithm` on page 1634
`MEASurement<mg>:EYEJitter:GENSettings:MLEHistogram:THReshold` on page 1634

Eye height

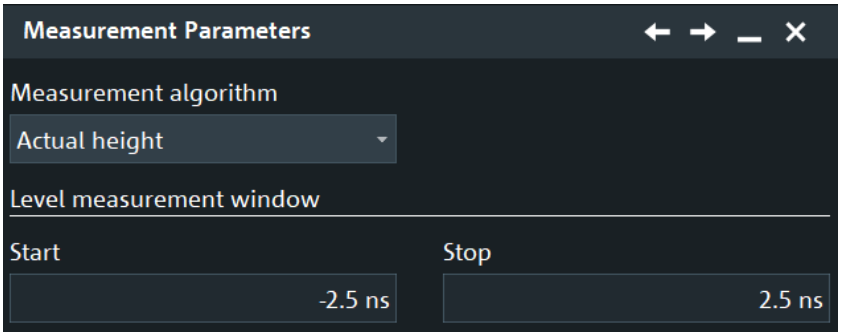

In this dialog, you can define the settings for the eye height measurements.

"Measurement algorithm" Selects the algorithm for the measurement of the height.
The "Actual height" is the vertical distance between the top and the bottom of the eye opening at the sampling point. It represents the range of levels over which the signal can reliably distinguish between logical 1 and logical 0. The default window is 40% - 60% of the eye period.
The "Maximum height" is the theoretical maximum vertical distance between the highest possible 1 level and the lowest possible 0 level. The default measurement window is 40% - 60% of the eye period.
If "Extrapolate using three sigma" is selected, the eye height is measured with the settings defined in the General dialog.
Eye height=(Eye top-3σtop)-(Eye base+3σbase)


"Mode" For "2/NRZ" signals, you can additionally select a "Relative" or "Absolute" mode for the values of the measurement window.

"Start" Defines the start time of the range for the eye measurement height.

"Stop" Defines the stop time of the range for the eye measurement height.

Remote command:
MEASurement<mg>:EYEJitter:EYEHeight:ALGorithm on page 1639
MEASurement<mg>:EYEJitter:EYEHeight:MODE on page 1641
MEASurement<mg>:EYEJitter:EYEHeight:RELative:STARt on page 1640
MEASurement<mg>:EYEJitter:EYEHeight:RELative:STOP on page 1640
MEASurement<mg>:EYEJitter:EYEHeight:ABSolute:STARt on page 1640
MEASurement<mg>:EYEJitter:EYEHeight:ABSolute:STOP on page 1641

Eye width
In this dialog, you can define the settings for the eye width measurements.

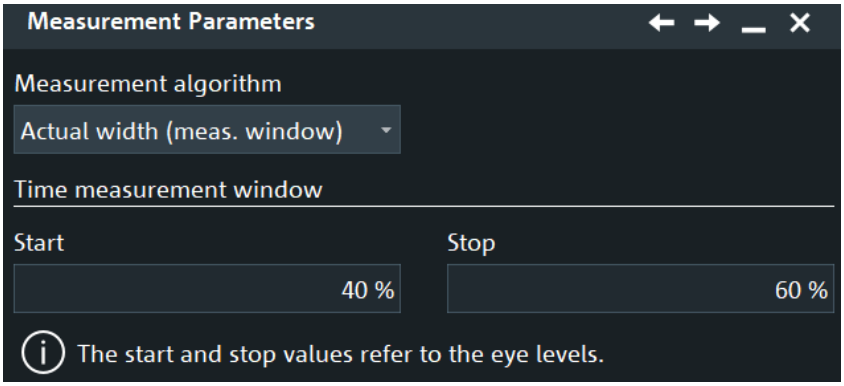

"Measurement algorithm" Selects the algorithm for the measurement of the height. The following algorithms are available:

- "Actual width (crossing level)": eye width is measured at crossing level.
- The "Maximum width" of an eye diagram is the maximum horizontal distance between the points where the ideal eye opening would cross the decision threshold level, assuming perfect signal timing, no jitter and no distortions.
- "Actual width (meas. window)": the horizontal distance between the points where the eye opening crosses the threshold level.
- "Extrapolate using three sigma": the eye width is measured at the crossing level:
  Eye width=(Tcrossing2-3σcrossing2)-(Tcrossing1+3σcrossing1)

"Use measurement level" If enabled, you can define a user-defined "Start" and "Stop" for the eye width measurement.

"Start" Defines the start time of the range for the eye measurement width.


"Stop" Defines the stop time of the range for the eye measurement width.

Remote command:
MEASurement<mg>:EYEJitter:EYEWidth:ALGorithm on page 1636
MEASurement<mg>:EYEJitter:EYEWidth:MEASwindow on page 1637

MEASurement<mg>:EYEJitter:EYEWidth:RELative:STARt on page 1637
MEASurement<mg>:EYEJitter:EYEWidth:RELative:STOP on page 1638
MEASurement<mg>:EYEJitter:EYEWidth:ABSolute:STARt on page 1638
MEASurement<mg>:EYEJitter:EYEWidth:ABSolute:STOP on page 1638
MEASurement<mg>:EYEJitter:EYEWidth:MODE on page 1639

Eye rise time,Eye fall time
In this dialog, you can define the settings for the "Eye rise time" and "Eye fall time" measurements.

Only values inside the specified horizontal range are considered for the measurements. The range is marked with green lines if the result lines are shown.

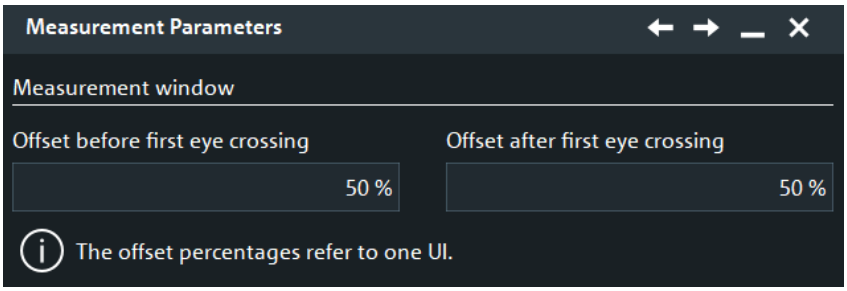


"Offset before first eye crossing" Sets the local start level of the range for eye rise/fall time measurements.

"Offset after first eye crossing" Sets the local stop level of the range for eye rise/fall time measurements.

Remote command:
MEASurement<mg>:EYEJitter:RTFTime:RELative:STARt on page 1643
MEASurement<mg>:EYEJitter:RTFTime:RELative:STOP on page 1642


Duty cycle disortion
In this dialog, you can define the settings for the duty cycle distortion measurements.

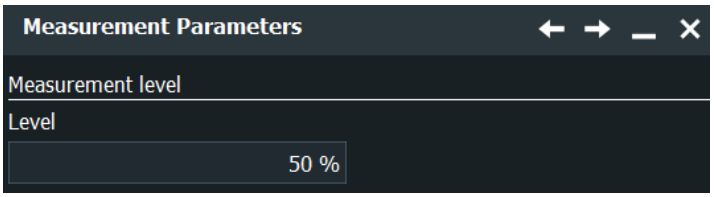

"Level" Defines the level for the eye measurement jitter.

Remote command:
MEASurement<mg>:EYEJitter:DCDistortion:RELative:LEVel on page 1636

Jitter
The settings in this dialog are available for "Jitter (peak to peak)", "Jitter (RMS)", "Jitter".

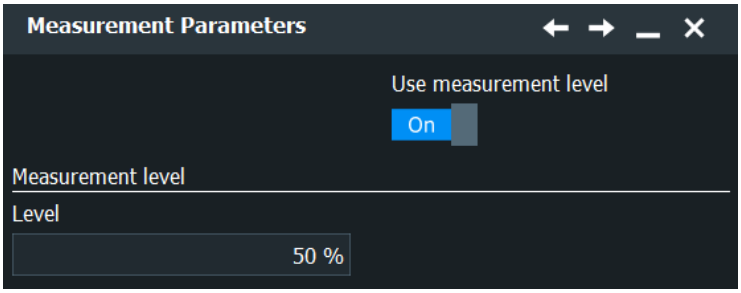

"Use measurement level" If enabled, you can define a user-defined "Level" for the eye measurement jitter.

"Level" Defines the level for the eye measurement jitter.

Remote command:
`MEASurement<mg>:EYEJitter:JITTer:MEASlevel` on page 1642
`MEASurement<mg>:EYEJitter:JITTer:RELative:LEVel` on page 1642

8.2.4 Optical measurements

With R&S RTP, you can measure optical signals. Optical measurements require an optical power signal provided by an optical probe.

For accurate measurements, a dark calibration of the optical probe is required.

8.2.4.1 Overview of optical measurements

There are various optical measurements available.

To select the active measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1600
- `MEASurement<mg>:ADDitional` on page 1602

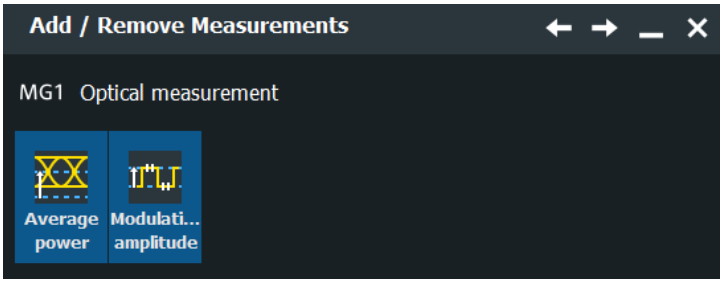


Table 8-7: Optical measurements

	Meas. type	Description/Result
	Average power	Measure for the true average component of an optical signal. $X_{Average} = \frac{1}{N_{Eval}} * \sum_{i=1}^{N_{Eval}} x(i)$
	Optical modulation amplitude (OMA)	Measure of the difference between the optical power of a non-return-to-zero (NRZ) one pulse and the optical power of an NRZ zero pulse. OMA requires an NRZ pattern. The one pulse and zero pulse levels are measured in the level measurement window defined with Start and Stop. OMA is based on norm IEC 61280-2-2.

8.2.4.2 Settings for optical measurements

Access: [Measure] > "Setup" tab > "Optical" category

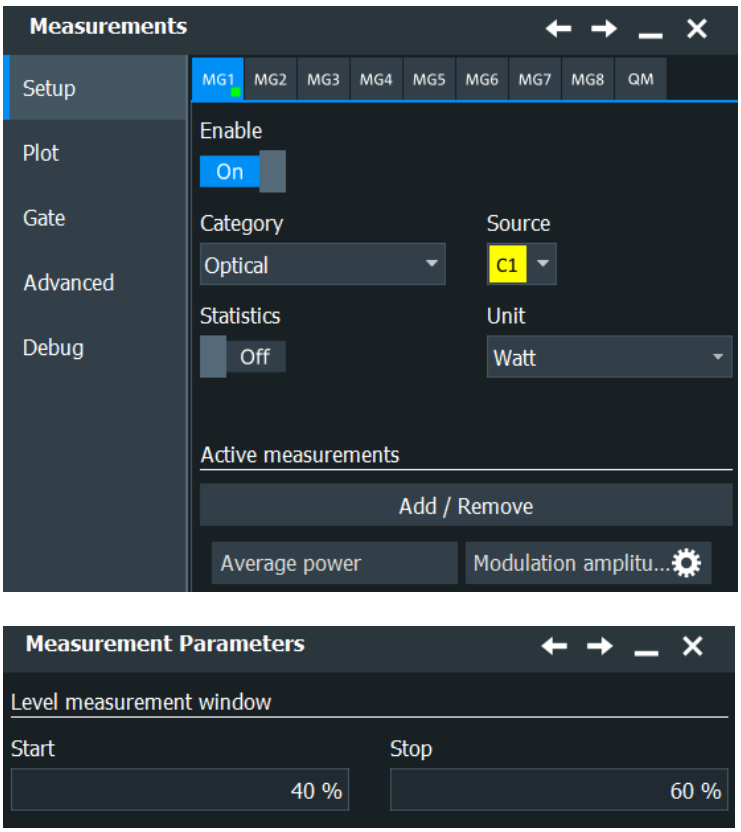


Figure 8-13: Modulation amplitude settings

Unit
Selects the unit of the optical measurement.

Remote command:
`MEASurement<mg>:OPTical:UNIT` on page 1644

Start
Sets the start value of the range for the optical modulation amplitude.

Remote command:
`MEASurement<mg>:OPTical:OMAMplitude:RELative:STARt` on page 1644

Stop
Sets the end value of the range for the optical modulation amplitude.

Remote command:
`MEASurement<mg>:OPTical:OMAMplitude:RELative:STOP` on page 1644

8.2.5 Spectrum measurements

Spectrum analysis determines the frequencies of a given input signal over time.

8.2.5.1 Overview of spectrum measurements

Various measurements can then be performed based on the signal spectrum.

To select the active measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1600
- `MEASurement<mg>:ADDitional` on page 1602

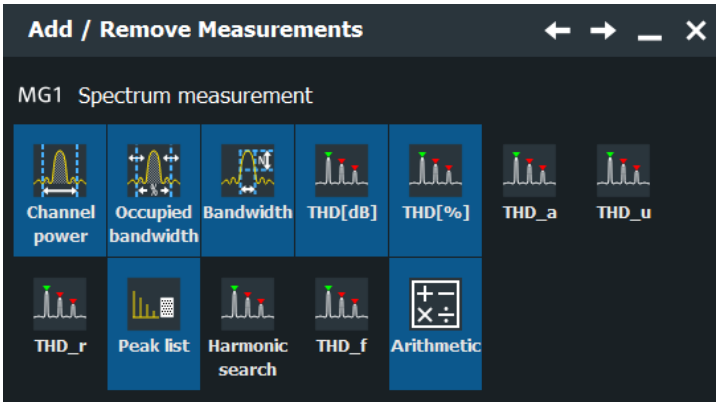


Table 8-8: Spectrum measurements

	Meas. type	Description, result
	Channel power	Power integrated over the sample values defined by a center frequency and a bandwidth; based on a defined impedance. The result is given in dBm. To get best results, enable "Measure all events in each acquisition" on page 406 in the "Advanced" tab. Set the "Limit" to the maximum value. In particular, these settings are important when measuring pulsed signals.
	Occupied bandwidth	From the defined center frequency, symmetric sample value pairs to the left and right are integrated until a user-defined percentage of the total power is reached. The occupied bandwidth is the difference between the frequencies at which the requested power was reached.

	Meas. type	Description, result
	Bandwidth	n dB down bandwidth; the samples to the left and right of the peak value are analyzed until the n dB threshold is exceeded. The frequencies at which the threshold is exceeded define the limits of the requested bandwidth.
	THD[dB], THD[%] Total harmonic distortion	Power sum of the harmonic waves divided by the power of the fundamental wave: $THD = \frac{\sum_{n=2}^{\infty} P_n}{P_1}$
	THD_f, THD_a, THD_u, THD_r Total harmonic distortion	These measurements require option R&S RTP-K37 Spectrum analysis. THD_f is the root mean square of the sum of all amplitudes of the harmonic waves in relation to the amplitude at the fundamental frequency (first harmonic): $THD_F = \frac{\sqrt{\sum_{i=2}^{n} U_i^2}}{U_1}$ THD_a corresponds to THD[dB]: $THD_a = \frac{\sum_{i=2}^{n} U_i^2}{U_1^2}$ THD_u: $THD_u = \frac{\sqrt{U^2 - U_1^2}}{U_1}$ Distortion factor: $THD_R = \frac{\sqrt{U^2 - U_1^2}}{U}$ Where: • U_i: effective value of the harmonic with index i • U_1: effective value of the first harmonic • U: effective value of the signal
	Peak list	Table with measured peaks. For each peak, the frequency and the power value are listed in a table row. The number of determined peaks can be defined. You can sort the results by frequency or power value, and the peak labels are adjusted accordingly.
	Harmonic search	Table with measured harmonics. For each harmonic, the frequency and the value are listed in a table row.
	Arithmetic	Allows you to perform basic aritmetic operations between selected measurement values and/or constant. For details see: Section 8.2.2.4, "Arithmetic for amplitude/time and spectrum measurements", on page 357

For remote command parameters and suffix types, see Table 26-5.

8.2.5.2 Settings for spectrum measurements

Access: [Measure] > "Setup" tab > "Spectrum" category

Spectrum measurements require a source in the frequency domain, i.e. a math waveform with an FFT operation.

For spectrum measurements, make sure that the start frequency and other FFT parameters are set correctly, and the fundamentals are not covered by the DC component of the signal. Consider also a gated measurement if the instrument cannot return any result.

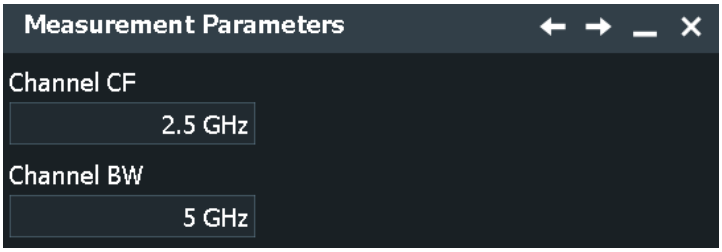


Figure 8-14: Parameters of channel power measurement

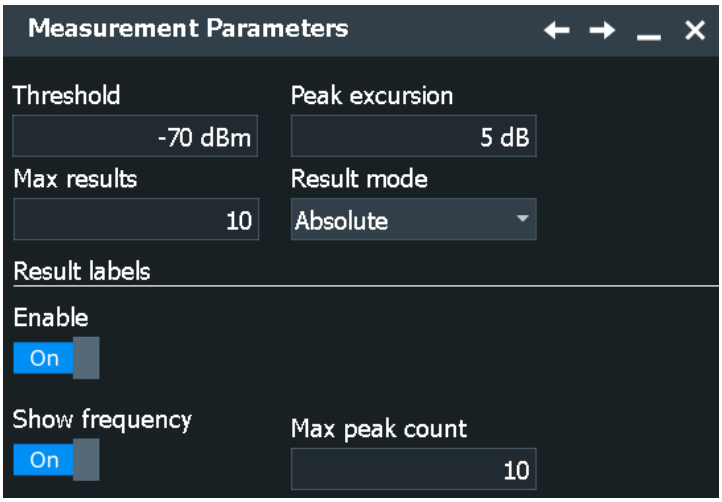


Figure 8-15: Parameters of peak list measurement

Enable
Enables the peak list measurement for the spectogram.

N db down
The threshold until which the samples to the left and right of the peak value are analyzed to determine the "Bandwidth".

Remote command:
MEASurement<mg>:SPECtrum:NDBDown on page 1648

Channel BW
Bandwidth over which the channel power is calculated.

Remote command:
MEASurement<mg>:SPECtrum:CPOWer:BANDwidth on page 1647

Channel CF
Center frequency from which the channel power is calculated over the specified bandwidth.

Remote command:
MEASurement<mg>:SPECtrum:CPOWer:CFRequency on page 1648

Occup. BW
Percentage of the total power used to determine the occupied bandwidth.

Remote command:
MEASurement<mg>:SPECtrum:OBANdwidth on page 1648

Threshold
Defines an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.


This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Remote command:
CURSor<cu>:THReshold on page 1762
MEASurement<mg>:SPECtrum:ATHReshold on page 1649

Peak excursion
Defines a relative threshold, the minimum level value by which the waveform must rise or fall to be considered as a peak. To avoid identifying noise peaks, enter a peak excursion value that is higher than the noise levels.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

The following figure shows a cursor measurement on a spectrum waveform:

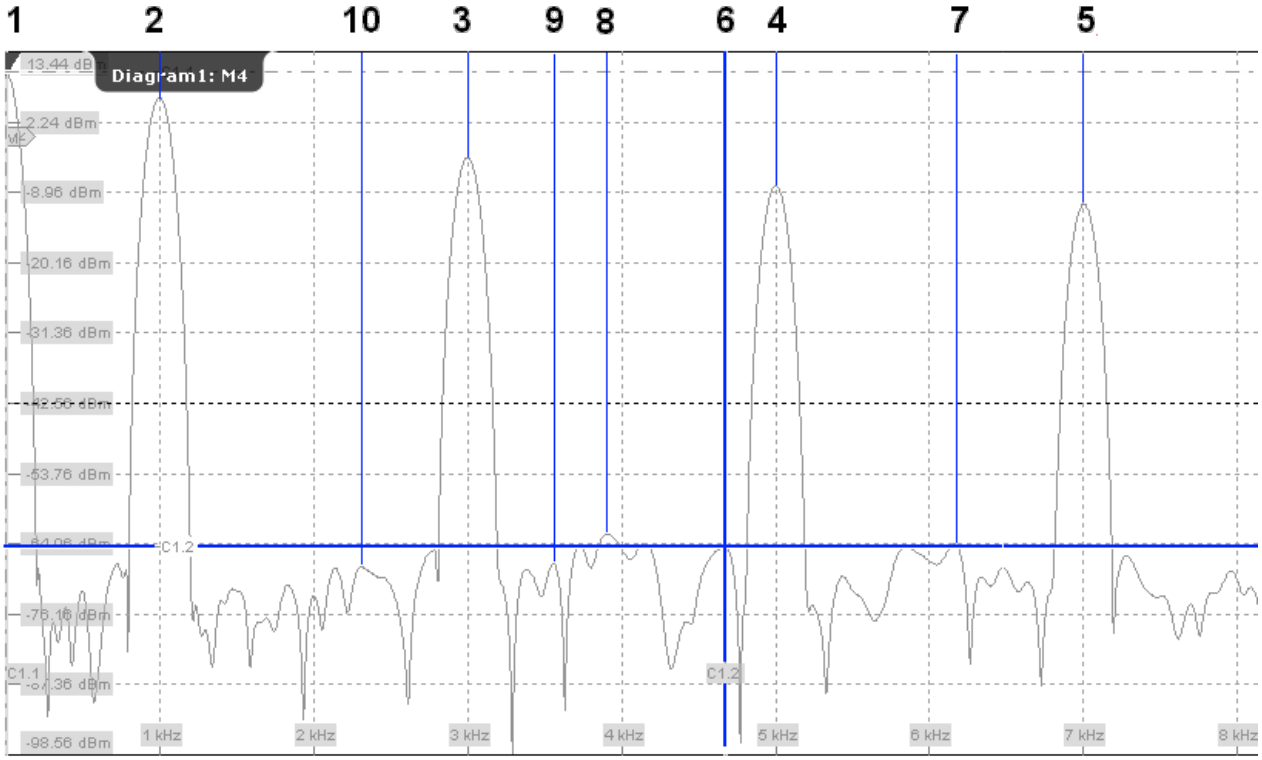

If "Peak excursion" is 30 dB, the peaks 1 to 5 are found. If "Peak excursion" is 20 dB, also the peaks 6 to 10 are found. The cursor position is on peak 6.

Remote command:
`CURSor<cu>:PEXCursion` on page 1761
`MEASurement<mg>:SPECtrum:PEXCursion` on page 1649

Max results
Sets the maximum number of measurement results that are listed in the result table. Available for peak list and harmonic search measurements.

Remote command:
`MEASurement<mg>:SPECtrum:RESult<n>:COUNt` on page 1649

Result mode
Selects the the way the measurement results are displayed. Available for peak list and harmonic search measurements.

"Absolute" The harmonics/peaks are shown in absolute value, dBm.

"Relative" The level of the carrier is shown in absolute value dBm. The values the harmonics/peaks are shown relatively to the carrier in dBc.

Remote command:
`MEASurement<mg>:SPECtrum:RESult<n>:MODE` on page 1650

Result labels
For peak lists only: Use labels to describe the detected peaks in the spectrum diagram.

You can configure what is displayed in the labels. To change the label design, use "Menu" > "Settings" > "Appearance" > "Peak List", see Section 4.3.9, "Peak list appearance settings", on page 91.

"Enable" Displays a description for each detected peak in the spectrum diagram.

"Show frequency" Includes the frequency of the detected peak in the diagram labels.

"Max. peak count" Defines the maximum number of peaks that are labeled in the diagram. The result table lists all peaks.

Remote command:
`MEASurement<mg>:RESult:SHLabels` on page 1651
`MEASurement<mg>:RESult:LABorder` on page 1384
`MEASurement<mg>:RESult:INVerse` on page 1385
`MEASurement<mg>:RESult:MAXCount` on page 1650
`MEASurement<mg>:RESult:SHFRequency` on page 1651

8.2.6 Histogram measurements

8.2.6.1 Overview of histogram measurements

There are various measurements available to analyze histograms that were created on waveforms.

Note that graphical changes on the display, e.g. changing the diagram size or the size of the result table, reset the histogram measurements in run mode and also in stop mode.

To select the active measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1600
- `MEASurement<mg>:ADDitional` on page 1602

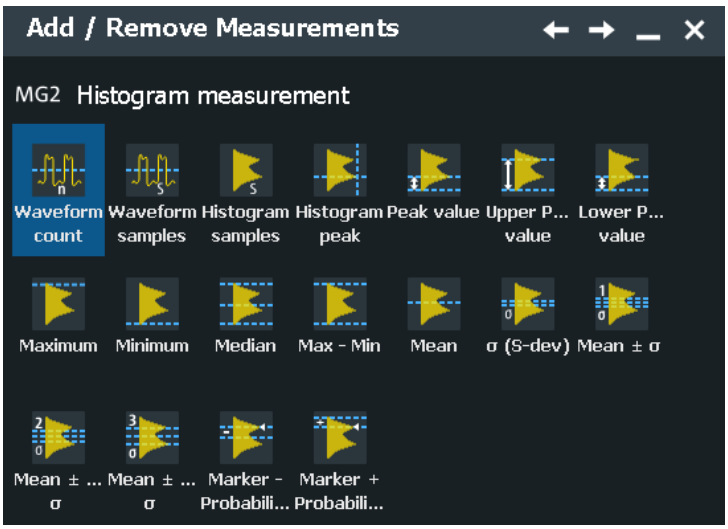



Table 8-9: Histogram measurements

	Meas. type	Description/Result
	Waveform count	The number of acquisitions (waveforms) the histogram is based on
	Waveform samples	The number of samples from the most recent acquisition included in the current histogram
	Histogram samples	The number of samples from all acquisitions included in the current histogram
	Histogram peak	The maximum count value in the histogram
	Peak value	The signal value at the histogram peak
	Upper peak value	The signal value at the maximum count value in the upper half of the histogram
	Lower peak value	The signal value at the maximum count value in the lower half of the histogram
	Maximum	The highest signal value with a probability > 0
	Minimum	The lowest signal value with a probability > 0
	Median	The signal value for which half the samples lie above, the other half below in the histogram The sample count of one signal value after the other are accumulated until half the total number of samples in the histogram is reached. The signal value for which 50% of the samples are accumulated is the median.
	Max - Min	The range of signal values with a probability > 0
	Mean	The weighted arithmetic average of the histogram
	σ (S-dev)	Standard deviation of the sample numbers

	Meas. type	Description/Result
	Mean ±σ	The range between (mean value + standard deviation) and (mean value - standard deviation)
	Mean ±2*σ	The range between (mean value + 3 * standard deviation) and (mean value - 2 * standard deviation)
	Mean ±3*σ	The range between (mean value + 3 * standard deviation) and (mean value - 2 * standard deviation)
	Marker + Probability %	The marker value (according to the selected probability domain marker type) plus the defined limit. Note that the value is restricted to the histogram range.
	Marker - Probability %	The marker value (according to the selected probability domain marker type) minus the defined limit. Note that the value is restricted to the histogram range.

Rough jitter evaluation using a histogram

You can use a horizontal histogram to perform a rough jitter measurement. Define a histogram for a narrow amplitude range close to the trigger time. The "Max-Min" value indicates the peak jitter, while the "StdDev" value indicates the RMS jitter.

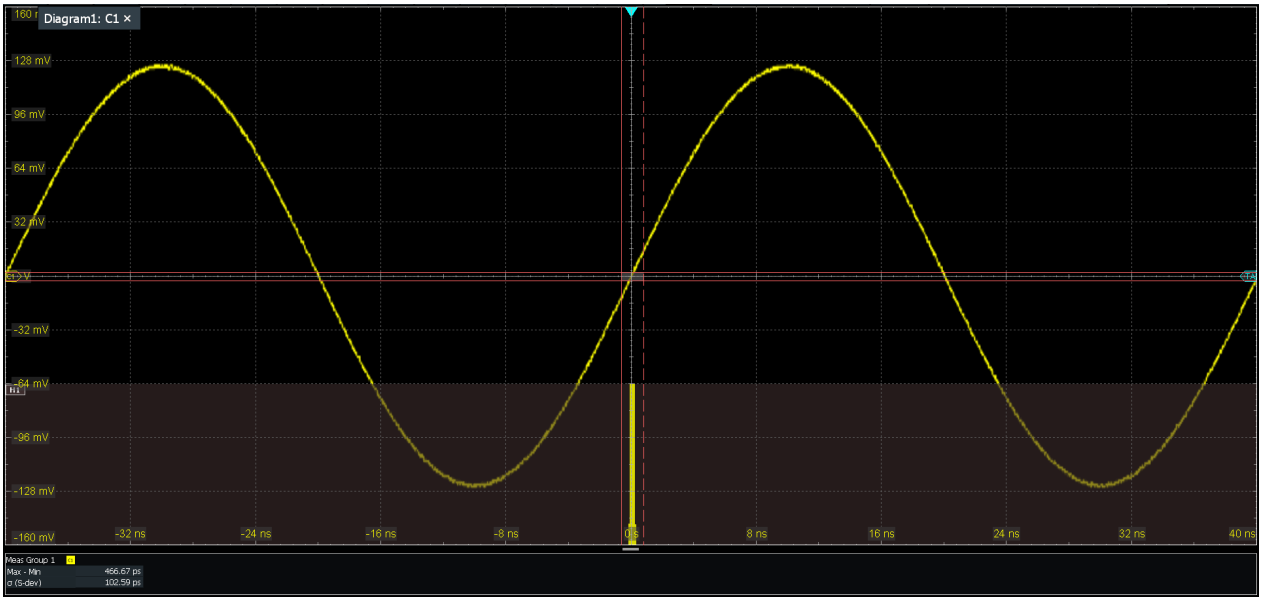


In addition to histograms on channel, math and reference waveforms, histograms can be created based on statistic measurement results. These histograms are enabled in the "Plot" tab, see Section 8.2.12, "Result analysis: Plot tab", on page 398.

8.2.6.2 Settings for histogram measurements

Access: [Measure] > "Setup" tab > "Histogram" category

You can perform measurements on histograms. Before, you have to define a histogram, see Section 7.4.2, "Creating histograms", on page 308.

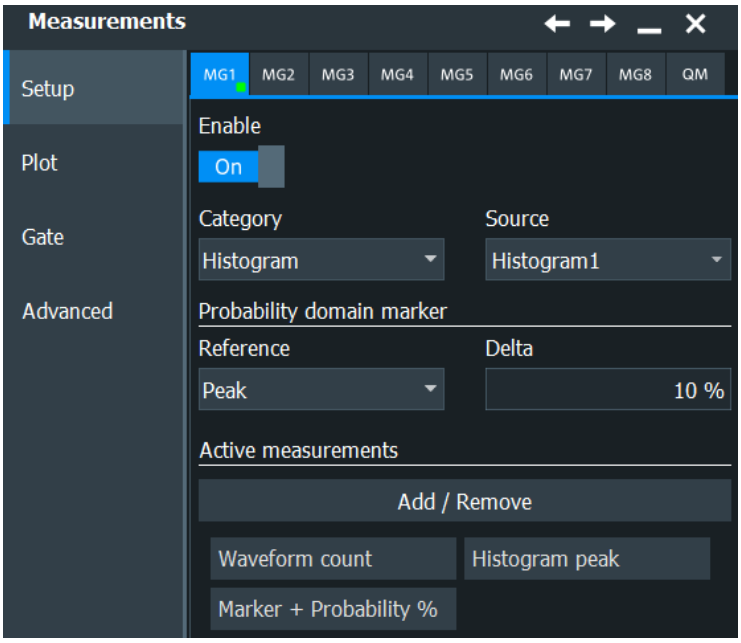

For most measurements on histograms, only common settings are required. The measurement types "Marker + Probability %" and "Marker -Probability %" require additional settings.

Source
Selects the histogram on which the measurement is based. Before, you have to define a histogram, see Section 7.4.2, "Creating histograms", on page 308.

Remote command:
`MEASurement<mg>:HISTogram:SELect` on page 1655

Probability domain marker, Reference
Defines the marker reference in the probability domain.

"Peak"	The y-value with the maximum sample value in the histogram
"Upper Peak"	The y-value at the maximum sample value in the upper half of the histogram
"Lower Peak"	The y-value at the maximum sample value in the lower half of the histogram
"Maximum"	The highest y-value with a probability > 0
"Minimum"	The lowest y-value with a probability > 0
"Median"	The y-value for which half the samples lie above, the other half below in the histogram.
"Mean"	The weighted arithmetic average of the histogram

Remote command:
MEASurement<mg>:HISTogram:PROBability:TYPE on page 1655

Probability domain marker, Delta
Defines a range around the marker.

Remote command:
MEASurement<mg>:HISTogram:PROBability:LIMit on page 1656

8.2.7 Jitter measurements

Jitter measurements are availabe if one of the following options is installed:

- R&S RTP-K12
- R&S RTP-K133
- R&S RTP-K134

See Section 19.1, "Jitter measurements (option R&S RTP-K12)", on page 1099.

8.2.8 EMC/ESD measurements (option R&S RTP-K155)

The measurements described in this section are intended for electromagnetic compatibility tests (EMC: immunity and interference) of a device when being disturbed by electrostatic discharge events (ESD).

In the R&S RTP, these measurements support standard functions like statistics, histogram, long term, gating, limit check and result lines. But they do not support track and multiple measurements.

8.2.8.1 Overview of EMC/ESD measurements

The following EMC/ESD measurements are available:

Table 8-10: EMC/ESD measurements

	Meas. type	Description, result
	"Rise Time"	See "Time measurements" on page 342 By default, the starting point of the rise time is the reference point at 10% of the peak level, and the endpoint is at 90%. However, you can specify any percentages between 0% and 100% in the "Measure" > "Ref. levels" dialog. Note that the slope or transition of the waveform can be positive or negative.
	"First Peak"	Level of the first positive or negative peak of an event, for example an ESD pulse.

	Meas. type	Description, result
	"Second Peak"	Level of the maximum (or minimum) in a specified time range after the reference point, which is at 10% of the peak level, by default. You can change the percentage in the "Measure" > "Ref. levels" dialog. The default time range is from start at 10 ns to stop at 40 ns, see Figure 8-19. The software considers the maximum (or minimum) level in this time range to be the second peak.
	"I30"	Level of the current at 30 ns after the reference point, which is at 10% of the peak, by default. You can change the percentage in the "Measure" > "Ref. levels" dialog.
	"I60"	Level of the current at 60 ns after the reference point, which is at 10% of the peak, by default. You can change the percentage in the "Measure" > "Ref. levels" dialog.
	"Lvl@Delay"	Level of the current at a specified delay after the reference point, which is at 10% of the peak, by default. You can change the percentage in the "Measure" > "Ref. levels" dialog. The default value of the delay is 30 ns. You can specify the delay in the range between 0 ns and 1 µs, see Figure 8-20.
	"Time to Value"	Duration from the first rising edge to the time of a specified middle level on the falling edge. ● To determine the first rising edge, the software interpolates between the levels at the reference point (at 10%) and the rise time's endpoint (at 90%). It prolongs the interpolated line and reads the time value at the 0% level. Instead of 10% and 90%, you can specify any percentages between 0% and 100% in the "Measure" > "Ref. levels" dialog. ● The middle level is 50% of the peak current, by default. However, you can specify any level percentages between 0% and 100%, see Figure 8-21.

For remote control commands, see Section 26.12.9, "EMC/ESD measurements (option R&S RTP-K155)", on page 1658.

8.2.8.2 Setup for EMC/ESD measurements

Access: [Measure] > "Setup" tab > "EMC/ESD" category

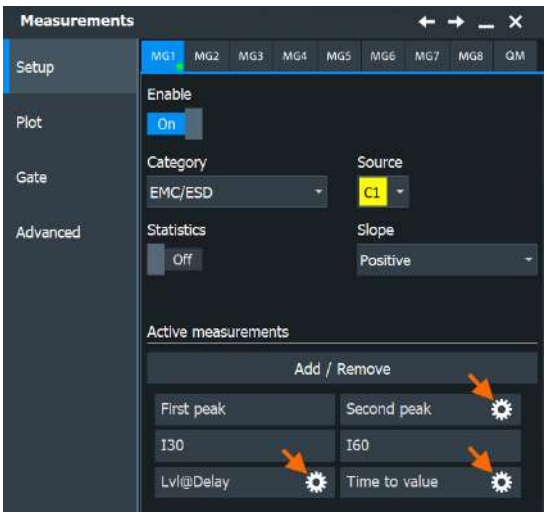


Figure 8-16: Setup dialog for the category EMC/ESD

In the upper part of the dialog, enable the measurement for the selected channel, select the category "EMC/ESD" and define the source. EMC and ESD measurements are compatible with the following sources: analog channels, differential signals, reference waveforms and mathematical waveforms. Optionally enable statistics, see Section 8.2.11.2, "Statistics", on page 395.

For the "Slope" setting, see "Slope" on page 383.

To select the measurement types that you want to use (see Table 8-10), click the "Add / Remove" button in the lower part of the dialog. It opens the following dialog:



Figure 8-17: Available EMC/ESD Measurements

After enabling your selection, click "Back" to return to the "Setup" dialog. The list below the "Add / Remove" button (see Figure 8-16) shows the selected measurement types.

Limit check for EMC measurements

The selected measurement types are added also to the "Limit Check" dialog:

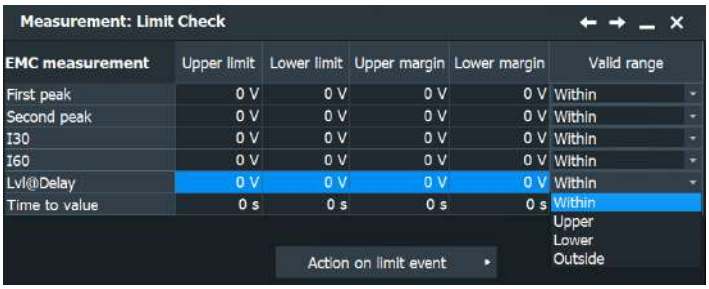


Figure 8-18: Setup dialog of the limit check

The "Limit Check" dialog is available via the [Measure] > "Advanced" tab, see lower left in Figure 8-16. For a description of this tab, refer to Section 8.2.8.3, "Advanced EMC/ESD measurements", on page 383.

Mesurement Parameters

The measurement types that have a settings button ("gear wheel", see arrows in Figure 8-16) provide a subdialog for measurement parameters:

- "Second Peak" has a subdialog for the Start and Stop parameters:

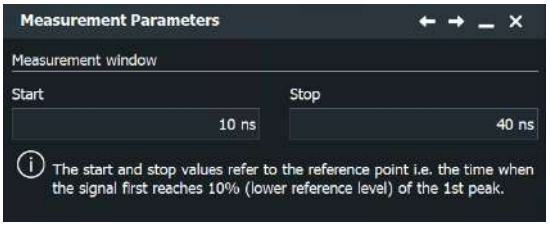


Figure 8-19: Start and stop parameters for Second Peak measurements

- "Lvl@Delay" has a subdialog for the Delay parameter:

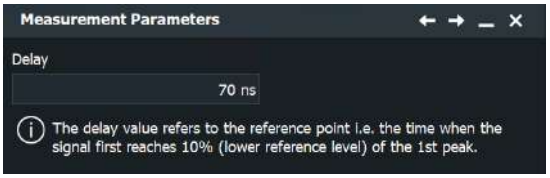


Figure 8-20: Delay parameter for Lvl@Delay measurements

- "Time to Value" has a subdialog for the Level parameter:



Figure 8-21: Level parameter for Time to Value measurements

Slope....383
Start....383
Stop....383
Delay....383
Level....383

Slope
The "Slope" setting specifies whether to measure on the signal's rising or falling slope:

- For measuring on rising (positive) signal slopes, for example with maximum peaks, select "Positive".
- For measuring on falling (negative) slopes, for example with minimum peaks, select "Negative".

Remote command:
`MEASurement<mg>:EMC:SLOPe` on page 1659

Start
Specifies the start time value for the "Second Peak" measurement, see Figure 8-19.

This time value is a delay after the reference point, at which the level reached 10% of the first peak.

Remote command:
`MEASurement<mg>:EMC:SPEak:WINDow:STARt` on page 1659

Stop
Specifies the stop time value for the "Second Peak" measurement, see Figure 8-19.

This time value is a delay after the reference point, at which the level reached 10% of the first peak.

Remote command:
`MEASurement<mg>:EMC:SPEak:WINDow:STOP` on page 1659

Delay
Specifies the time delay value for the "Lvl@Delay" measurement, see Figure 8-20.

This time value is a delay after the reference point, at which the level reached 10% of the first peak.


Remote command:
`MEASurement<mg>:EMC:LVADelay:DELay` on page 1660

Level
Specifies the level value for the "Time to value" measurement, see Figure 8-21.

Remote command:
`MEASurement<mg>:EMC:TTValue:LEVel` on page 1660

8.2.8.3 Advanced EMC/ESD measurements

Access: [Measure] > "Advanced" tab

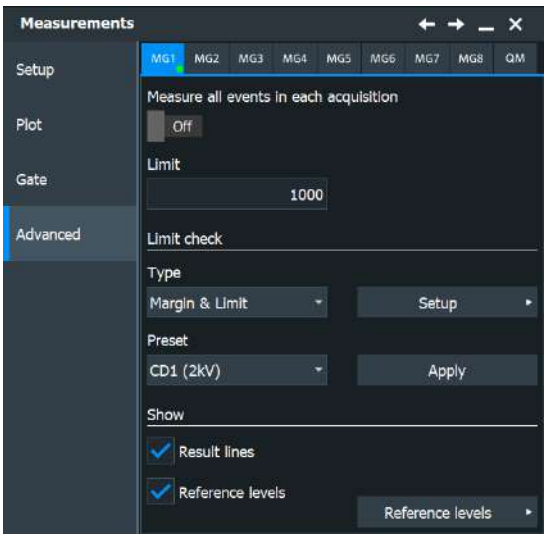

This section describes the "Preset" settings and the "Apply" feature available in the "Limit check" section of the "Advanced" measurements tab.

For the "Type" setting and "Setup" (Figure 8-18), available also under "Limit check", refer to Section 8.2.13, "Limit and margin checks: Advanced tab", on page 404.

Preset
Not available, if "Type" is set to "Off". Selects standardized test levels for contact discharge from "CD1" to "CD4" or for air discharge from "AD1" to "AD4". For details, refer to the remote command.

Remote command:
`MEASurement<mg>:EMC:LIMit:SELection` on page 1661

Apply
Not available, if "Type" is set to "Off". Applies the "Preset" test levels to define the limits.

Remote command:
`MEASurement<mg>:EMC:LIMit:APPLy` on page 1661

8.2.9 Protocol measurements (option R&S RTP-K35)

Option R&S RTP-K35 provides specific measurements on automotive and Ethernet protocols.

8.2.9.1 Overview of protocol measurements

If option R&S RTP-K35 is installed, enhanced measurements on the supported serial buses are possible. With it, you can measure various dependencies between the frames.

Additional to option R&S RTP-K35 you need one of the following serial protocol options:

- I2C (R&S RTP-K1)
- SPI (R&S RTP-K1)
- UART/RS232 (R&S RTP-K2)
- CAN / CAN-FD (R&S RTP-K3/R&S RTP-K9)
- LIN (R&S RTP-K3)
- RFFE (R&S RTP-K40)
- Ethernet (100BASE-Tx) (R&S RTP-K8)
- 100BASE-T1 (R&S RTP-K57)

To select the active measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1600
- `MEASurement<mg>:ADDitional` on page 1602

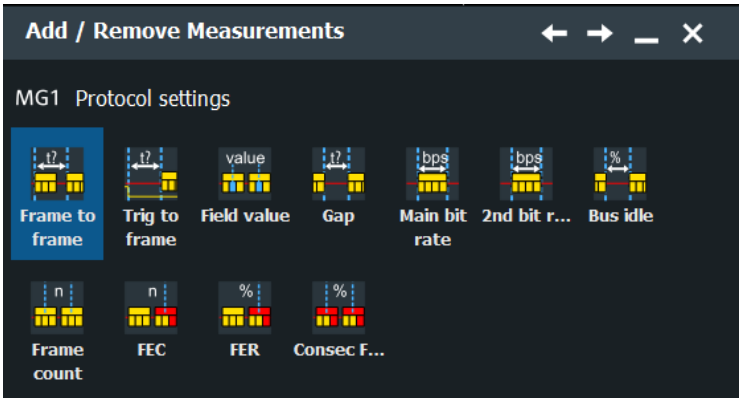



Table 8-11: Protocol measurements

Meas. type	Description / result
Field value	Value of a field over time
Frame to frame	The distance between two frames
Trigger to frame	The distance between a defined frame and the next trigger signal
Gap	Measures a gap, period at which the bus is idle. The distance of a gap can only be measured between two identified frames.
Main bit rate	Bit rate as defined by the standard
2nd bit rate	Additional bit rate, protocol dependent For example: "Data rate" for the CAN-FD protocol.
Bus idle	Calculates the bus idle time
Frame count	Number of all frames within the acquisition window
Frame error count	Sum of all frames with errors within the acquisition window
Frame error rate	Sum of all frames with errors divided by all frames within the acquisition window
Consecutive frame error rate	Measures the rate at which at least two consecutive frames have an error

8.2.9.2 Settings for protocol measurements


Access: [Measure] > "Setup" tab > "Protocol" category

Protocol measurements require that a supported protocol is enabled first.

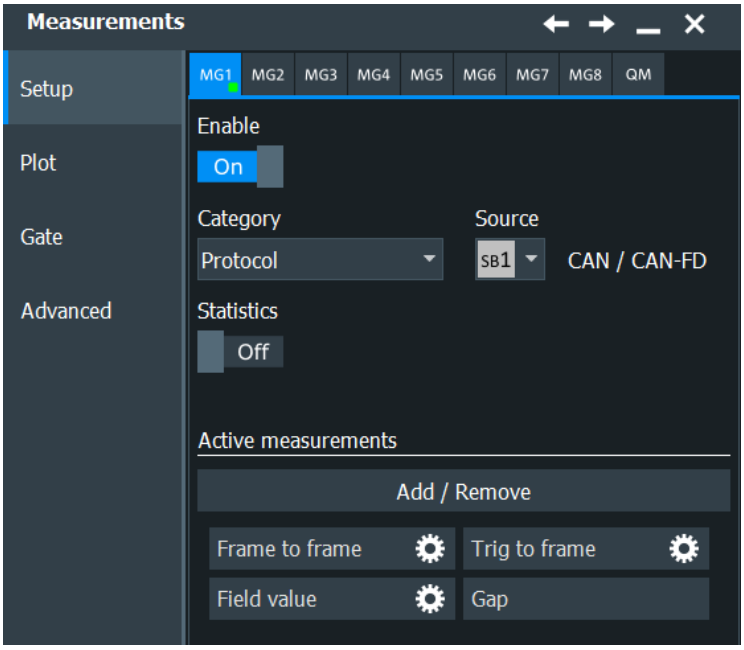

If further settings are available for a measurement, a settings icon is shown beside the measurement's name in the "Active Measurements" list. Tap the icon to configure the measurement.

Frame to frame
Opens a dialog to set up the parameters for the frame to frame measurement. You can define a start frame ("From") and an end frame ("To") for the measurement.

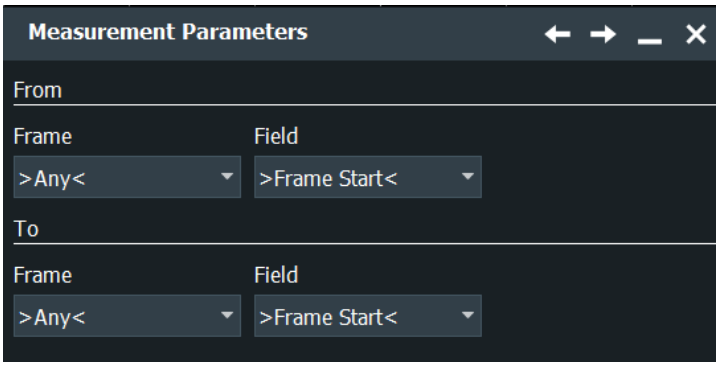

The types of available frames and fields are depending on the enabled protocol.

Table 8-12: Available protocol frames

Protocol	Frame	Field
I2C	W R	Address
		2. Addr
		ACK
		R/W
		Data
SPI	MISO MOSI	Word
CAN/CAN FD	Remote Data	ID FDF BRS ESI DLC SCV P SC Data CRC ACK
	Overload	-
LIN	WAKE	-
	Data	ID Data
RFFE	Register 0 Write Register Write Register Read Extended Register Write Extended Register Read Extended Register Write Long Extended Register Read Long Interrupt Summary and Identification Masked Write Master Ownership Handover Master Write Master Read Master Context Transfer Write Master Context Transfer Read	SA MID BC Addr Mask Data

Protocol	Frame	Field
Ethernet	MAC Sleep EOS	Preamble SFD Dest Src Len/Type Data FCS
	Idle	Triplet
100BASE-T1	MAC Fill	Preamble SFD Dest Src Len/Type Data FCS
	Idle	Triplet

Also, if a label list is loaded and enabled for the protocol, the symbolic label names can be selected from the "Frame"/"Field" value list.

"Frame" Selects the type of start frame (from) / end frame (to).


"Field" Selects the type of start field (from) / end field (to).

"Value" Sets a value for the selected field.

Remote command:
`MEASurement<mg>:PROTocol:F2FRame:FRMFrom` on page 1663
`MEASurement<mg>:PROTocol:F2FRame:FRMTo` on page 1663
`MEASurement<mg>:PROTocol:F2FRame:FLDFrom` on page 1663
`MEASurement<mg>:PROTocol:F2FRame:FLDTo` on page 1663
`MEASurement<mg>:PROTocol:F2FRame:VALFrom` on page 1664
`MEASurement<mg>:PROTocol:F2FRame:VALTo` on page 1664

Trigger to frame
Opens a dialog to set up the parameters for the trigger to frame measurement.

The types of available frames are depending on the enabled protocol, see Table 8-12.

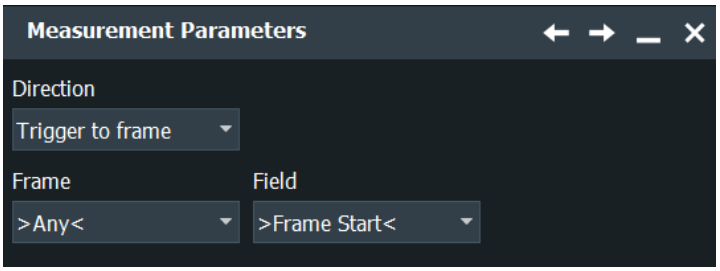

"Direction" Selects the direction for the measurement, from the trigger to the next frame (start),

"Frame" Selects the type of frame.

"Field" Selects the type of field.


"Value" Sets a value for the selected field.

Remote command:
MEASurement<mg>:PROTocol:T2FRame:DIRection on page 1667
MEASurement<mg>:PROTocol:T2FRame:FLD on page 1667
MEASurement<mg>:PROTocol:T2FRame:FRM on page 1667
MEASurement<mg>:PROTocol:T2FRame:VALue on page 1668

Field value
Opens a dialog to set up the parameters for the field value measurement. You can first identify a frame with specific field value and then track a selected field of this frame.

The types of available frames and fields depend on the enabled protocol, see Table 8-12.

If a label list is loaded and enabled for the protocol, sometimes there are defined calculations and formatting for the displayed field value. In this case, the measurement displays the value according to the definition in the label list.

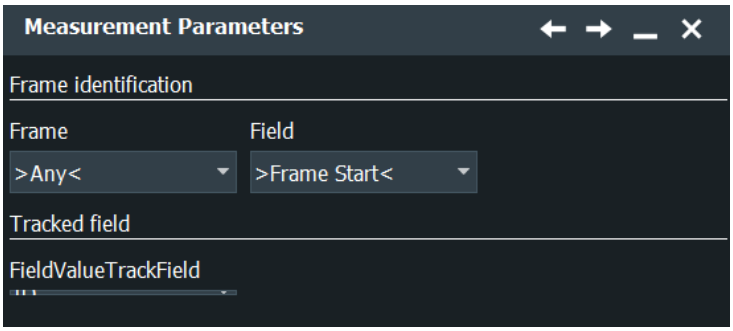

"Frame" Selects the type of frame.

"Field" Selects the type of field.

"Value" Sets a value for the selected field.


"Field to be tracked" Selects the type of field which value is tracked over time.

Remote command:
MEASurement<mg>:PROTocol:FLDValue:FLD on page 1664
MEASurement<mg>:PROTocol:FLDValue:FRM on page 1664
MEASurement<mg>:PROTocol:FLDValue:TRCK on page 1665
MEASurement<mg>:PROTocol:FLDValue:VAL on page 1665

Main bit rate / 2nd bit rate
Opens a dialog to set up the parameters for the main bit rate/ 2nd bit rate measurement. You can identify a frame and a specific field value.

The types of available frames and fields depend on the enabled protocol, see Table 8-12.

If a label list is loaded and enabled for the protocol, sometimes there are defined calculations and formatting for the displayed field value. In this case, the measurement displays the value according to the definition in the label list.

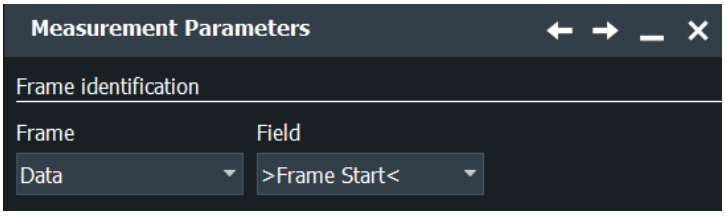

"Frame" Selects the type of frame.

"Field" Selects the type of field.

"Value" Sets a value for the selected field.

Remote command:

MEASurement<mg>:PROTocol:MBITrate:FLD on page 1665
MEASurement<mg>:PROTocol:MBITrate:FRM on page 1666
MEASurement<mg>:PROTocol:MBITrate:VAL on page 1666
MEASurement<mg>:PROTocol:SBITrate:FLD on page 1666
MEASurement<mg>:PROTocol:SBITrate:FRM on page 1666
MEASurement<mg>:PROTocol:SBITrate:VAL on page 1667

8.2.10 Measurement gates

Gate areas limit the measurement to a user-defined range of the waveform. The gate settings are defined on the "Gate" tab.

Each measurement group can use its own gate. Make sure to select the correct measurement group.

Gating is not available if the source of the selected measurement is a digital channel.

8.2.10.1 Using measurement gates

If you have enabled the measurement with the toolbar icon and drew a rectangle on the diagram, the gate is automatically defined and enabled. If you want to create a gate for a running measurement, or if you want to modify the gate area, configuration is done in the "Measurements" dialog.

1. In the "Measurements" dialog, select the "Gate" tab.
2. Select the subtab for the measurement group you want to configure.
3. To define the gate, use one of the following methods:
   - Define the start value and the stop value of the gate area by entering either absolute or relative values.
   - If a zoom area has already been defined for the waveform, couple the gate area to the zoom area by enabling "Zoom". Select the zoom to be used for the gate.


- If a cursor measurement has already been defined for the waveform, couple the gate area to the cursor lines by enabling "Cursor". Select the cursor to be used for the gate.

4. If you want to use the same gate for all measurement groups, enable "Apply to all meas".
5. Enable "Use gate".

   The selected part of the waveform is measured. The gate is shown in the diagram.

8.2.10.2 Gate settings for measurements

Access: [Measure] > "Gate" tab

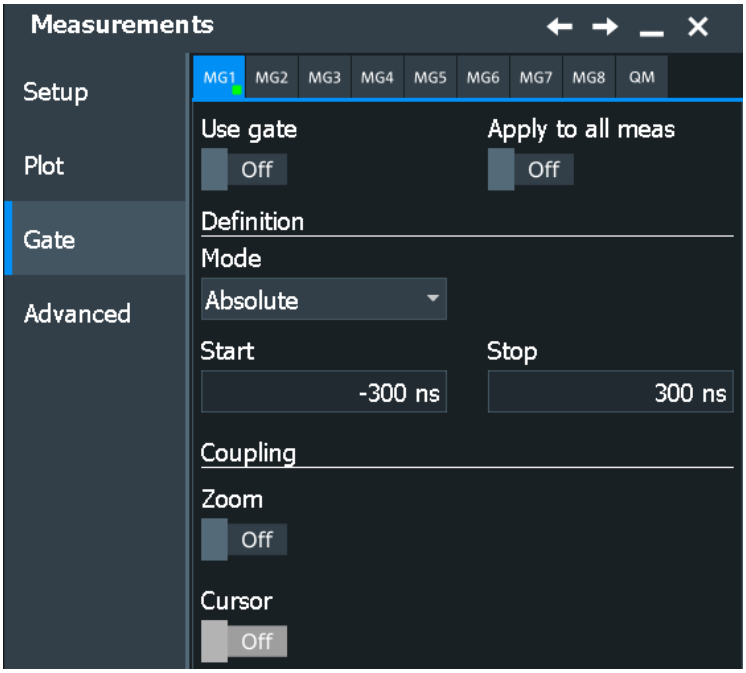

MG 1/2/3/4/5/6/7/8/Quick Meas
Subtabs for each measurement group, and for the quick measurement. The subtabs contain the configuration settings. A green dot on the tab indicates that the measurement group is active.

Use gate
Enables the gate settings for the selected measurement and displays the gate.

Gating is not available if the source of the selected measurement is a digital channel.

Remote command:
`MEASurement<mg>:GATE[:STATe]` on page 1668
`MEASurement<mg>:GATE:SHOW` on page 1669

Apply to all meas
If you enable the gate coupling, the gate settings of the selected measurement are copied to all other measurements. Thus, all measurements use the same gate. If zoom or cursor coupling is active in a measurement, the zoom size and cursor positions are adjusted.

Remote command:
MEASurement<mg>:GATE:GCOupling on page 1671

Mode
Defines whether the gate settings are configured using absolute or relative values.

"Absolute" The gate is defined by absolute start and stop values.

"Relative" The gate's start and stop values are defined by a percentage of the value range.

Remote command:
MEASurement<mg>:GATE:MODE on page 1669

(Relative) Start
Defines the starting value for the gate.

Remote command:
CALCulate:MATH<m>:FFT:GATE:ABSolute:STARt on page 1697
CALCulate:MATH<m>:FFT:GATE:RELative:STARt on page 1698
MEASurement<mg>:GATE:ABSolute:STARt on page 1669
MEASurement<mg>:GATE:RELative:STARt on page 1670
SEARch:GATE:ABSolute:STARt on page 1763
SEARch:GATE:RELative:STARt on page 1764

(Relative) Stop
Defines the end value for the gate.

Remote command:
CALCulate:MATH<m>:FFT:GATE:ABSolute:STOP on page 1697
CALCulate:MATH<m>:FFT:GATE:RELative:STOP on page 1698
MEASurement<mg>:GATE:ABSolute:STOP on page 1669
MEASurement<mg>:GATE:RELative:STOP on page 1670
SEARch:GATE:ABSolute:STOP on page 1763
SEARch:GATE:RELative:STOP on page 1764

Zoom
Zoom coupling is available if a zoom is defined. As long as "Zoom coupling" is enabled, the gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well.

If several zoom diagrams are defined, select the zoom diagram to be used for gating. The "Start" and "Stop" values of the gate are adjusted accordingly.

Zoom coupling can be set for measurement gates, FFT gates, and search gates. The zoom must be defined on the diagram that contains the signal source of the measurement, FFT, or search.

Remote command:
MEASurement<mg>:GATE:ZCOupling on page 1671
MEASurement<mg>:GATE:ZDIagram on page 1671
CALCulate:MATH<m>:FFT:GATE:ZCOupling on page 1699
SEARch:GATE:ZCOupling on page 1764
SEARch:GATE:ZDIagram on page 1765

Cursor
If enabled, the gate area is defined by the cursor lines of an active cursor measurement.

If several cursor measurements are enabled, select the cursor set to be used for gating. The "Start" and "Stop" values of the gate are adjusted to the values of the cursor line positions. The measurement is limited to the part of the waveform between the cursor lines.

Remote command:
MEASurement<mg>:GATE:CCOupling on page 1670
MEASurement<mg>:GATE:CURSor on page 1670

8.2.11 Measurement results

By default, the results of automatic measurements are displayed below the waveform diagram when an automatic measurement is enabled. You can drag the table on the diagram to get a floating result box. See Section 4.3.8, "Measurement appearance settings", on page 90 for settings to display results.

Meas Group 1 C1		Meas Group 2 C2	
High	122.53 mV	Rise time	11.847 ns
Low	-124.51 mV	Fall time	---
Amplitude	247.04 mV	Pos. pulse	20.05 ns
Frequency	25 MHz	Neg. pulse	20 ns
Cycle RMS	87.999 mV		

If you want to save space in the display, drag the results to the signal bar. The most important results are displayed and updated in a results icon.

Which results are displayed depends on the selected measurements and is described in detail in the approprate sections.

The following additional results are available:

- **Statistics**
  You can enable statistical evaluation of the measurement results, and select the statistical results that you want to see. Statistic information is provided in the result box. Stopping and restarting the acquisition does not reset statistics but only stops and continues them.
  See Section 8.2.11.2, "Statistics", on page 395
- **Measurement histograms**

The results of measurements can be displayed in a histogram which shows the density distribution of the measurement results in a graphic and thus illustrates the statistics of the measurements.
See Section 8.2.12.2, "Histograms on measurement results", on page 399

- **Long-term measurements**
  Long-term measurements show the behavior of measurement results over a longer time or for many samples. You can define the number of long-term points and export the long-term data, including statistical results. The measurement histogram is a vertical histogram shown in the long-term diagram.
  Long-term measurements are performed on the measurement that is selected for analysis on the "Plot" tab.
  See: Section 8.2.12.1, "Long-term measurements", on page 398
- **Intermediate results**
  You can display auxiliary result lines and reference levels in the source diagram, see Section 8.2.11.4, "Display settings for results", on page 397.

Remote commands:

- `MEASurement<mg>:ARES?` on page 1672
- `MEASurement<mg>:ARNames` on page 1673
- `MEASurement<mg>:RESult[:ACTual]?` on page 1673
- `MEASurement<mg>:RESult:COUNt?` on page 1675

8.2.11.1 Measurement status

The overall status of measurement results is indicated by various icons. In general, a question mark before the result value indicates that the measurement result might not be correct due to insufficient amplitude level. Check your amplitude and reference level settings. The icon colors indicate the state of the limit and margin checks.

Icon	Description
No icon, no result value ("---")	The instrument cannot measure the required value, for example, if the acquisition does not contain at least one complete period for frequency and cycle measurements. Check and adjust the waveform settings to get results.
	The measurement result might not be correct due to insufficient amplitude level. Check your amplitude and reference level settings. Limit and margin checks are disabled.
	Limit and margin checks passed, measurement results are reliable.
	The measurement result might not be correct due to insufficient amplitude level. Check your amplitude and reference level settings. Limit and margin checks passed.
	The measurement result might not be correct due to insufficient amplitude level. Check your amplitude and reference level settings. Margin checks failed.

Icon	Description
	Margin checks failed.
	The measurement result might not be correct due to insufficient amplitude level. Check your amplitude and reference level settings. Limit checks failed.
	Limit checks failed.

8.2.11.2 Statistics

Statistics can be compiled for each measurement group separately, and also for long-term measurements. If enabled, statistical results are shown in the result box.

By default, all events in each acquisition are measured and incuded in the statitics: the measurement result is not only determined once within one acquisition, but repeatedly, if available. More results provide a larger basis for statistical evaluation.

To obtain precise results, additional measurement settings can be useful:

- Reference/signal levels: configuring user-defined levels can compensate for irregular data, see Section 13.3, "Signal and reference levels for NRZ signals", on page 539.
- Gate areas: restricting the waveform range for measurement can eliminate irregular data, see Section 8.2.10, "Measurement gates", on page 390.
- Defining a "Signal threshold" for time, area and counting measurements can eliminate noise from the evaluation, see "Signal threshold" on page 346.
- Spectrum measurements: you can eliminate noise from the evaluation, see Threshold and "Peak excursion" on page 332

► To enable statistics, use one of the following ways.
Make sure to select the subtab of the measurement group for which you want to compile statistics.

- On the measurement overlay menu, enable "Statistics".
- In the "Measurements" dialog, "Setup" tab, enable "Statistics".

If statistics are enabled, the following results are calculated. You can select which results are shown in the result table, see Section 8.2.11.4, "Display settings for results", on page 397.

Label	Description
+Peak	Positive peak value (maximum)
-Peak	Negative peak value (minimum)
µ (Avg)	Average

Label	Description
RMS	Root mean square
σ (S-dev)	Standard deviation
Event count	Number of measured events (e.g. rising edges, pulses etc.)
Wave count	Number of waveforms (acquisitions) the measurement is based on

Remote commands:

- `MEASurement<mg>:RESult[:ACTual]?` on page 1673
- `MEASurement<mg>:RESult:AVG?` on page 1673
- `MEASurement<mg>:RESult:COUNt?` on page 1675
- `MEASurement<mg>:RESult:EVTCount?` on page 1673
- `MEASurement<mg>:RESult:NPEak?` on page 1673
- `MEASurement<mg>:RESult:PPEak?` on page 1673
- `MEASurement<mg>:RESult:RMS?` on page 1674
- `MEASurement<mg>:RESult:STDDev?` on page 1674
- `MEASurement<mg>:RESult:WFMCount?` on page 1674
- `MEASurement<mg>:RESult:STARt?` on page 1674
- `MEASurement<mg>:RESult:STOP?` on page 1674
- `MEASurement<mg>:ARNames` on page 1673
- `MEASurement<mg>:ARES?` on page 1672

The peak and average values and the standard deviation of the long-term points are also shown in the graph of the long-term measurement.

Stopping and starting the acquisition does not reset statistics but only stops and continues them.

The instrument only resets statistical evaluation if you change measurement setup:

- Select measurement
- Create or modify gate
- Enable/disable long-term measurement and histogram
- Enable continuous autoscale with enabled histogram
- Switch on/off channels
- Enable/disable cursors
- Delete measurement results, see Section 8.2.11.3, "Clearing the measurement results", on page 397.

After a reset, new statistics are compiled beginning with the next acquired waveform.

If limit and margin check is enabled, the icons in the result table indicate if statistical results exceed a limit or margin. These violations do not initiate an action.

8.2.11.3 Clearing the measurement results

There several ways to delete all results, or the measurement results only.


- To delete all measurement results, waveforms and history, use "Clear" on the toolbar. See "Clear" on page 60.
- To restart measurement statistics and all active measurement analysis, select "Reset all" on the "Plot" tab.
  The results are cleared and written anew.
- If you work with ungrouped floating result boxes, you can activate the "Result control panel" and select "Reset". This reset has the same effect as "Reset all" on the "Plot" tab.

8.2.11.4 Display settings for results

The measurement results can be displayed in a table below the waveform diagrams, in a floating result box, or in a minimized result icon on the signal bar.

The display settings for measurements are provided in two dialogs:

- General display setting for measurements are provided in "Settings" > "Appearance" > "Measurements": see Section 4.3.8, "Measurement appearance settings", on page 90.
- Specific display settings for each measurement group are provided in the "Measure" > "Advanced" tab and described in this section.

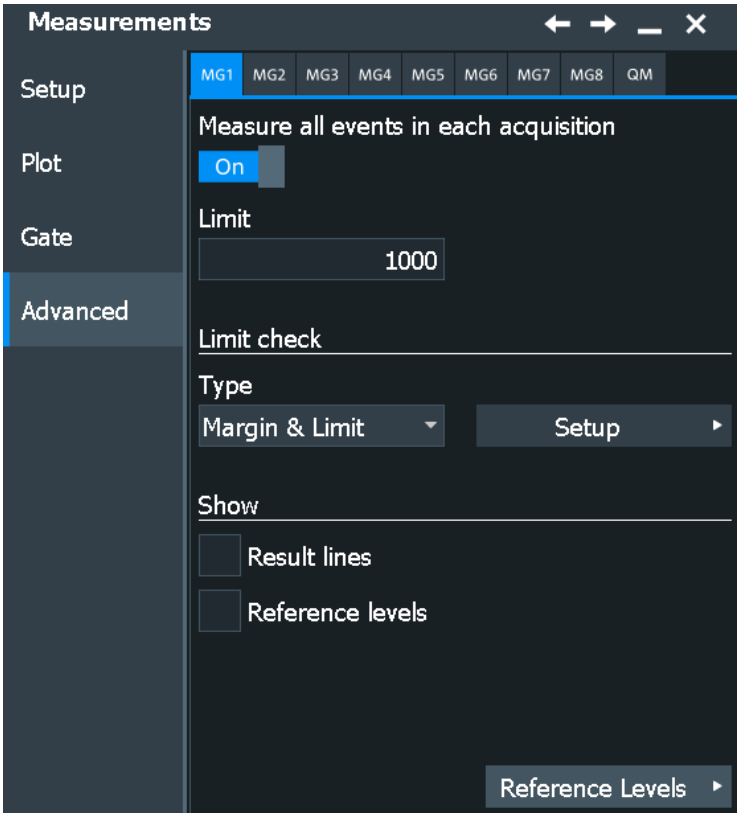

Result lines
Result lines mark the samples in the waveform that are used to obtain the measurement result. For example, maximum, minimum, high and low values, and mean are merked by horizontal lines; start and end are marked by vertical lines.

Remote command:
`MEASurement<mg>:DISPlay:RESults` on page 1676

Reference levels
Displays the reference levels used for the measurement in the diagram.

Remote command:
`MEASurement<mg>:DISPlay:LEVels` on page 1675

Result control panel
Extends the result box of the selected measurement group with the source settings and the statistics enabling. Thus you can check and change the measurement sources directly in the results box, and also enable statistics there. The setting is only available if the result boxes are not grouped ("Group result dialogs" = Off).

8.2.12 Result analysis: Plot tab

The behavior of measurement results over time can be evaluated in different ways:

- Section 8.2.11.2, "Statistics", on page 395
- Section 8.2.12.1, "Long-term measurements", on page 398
- Section 8.2.12.2, "Histograms on measurement results", on page 399
- Section 8.2.12.3, "Track", on page 399

8.2.12.1 Long-term measurements

Long-term measurements show the behavior of measurement results over a longer time or for many samples. Therefore the measurement results of a specified time period are summarized into one long-term point. For each point, the value measured at the end of the time period is written to the long-term waveform. In addition, statistical results for each time period are calculated, saved, and reset. This reset avoids constantly rising maximum or constantly falling minimum values until the end of the measurement.

You can define the number of long-term points and export the long-term data, including statistical results. The measurement histogram is a vertical histogram shown in the long-term diagram.

Long-term measurements are done on the selected "Measurement for plot".

See also: "Enable (Long term)" on page 401.

Performing long-term measurements

1. On the menu, select "Measure".

2. Select the subtab for the measurement group you want to configure.
3. Select the "Plot" tab.
4. Under "Long term", tap "Enable".
5. Since the waveform can change in the process of time, open the long-term settings.
6. Enable "Continuous auto scale" to adapt the scaling automatically.
7. Select the "Horizontal scaling" mode to define when the points of a long-term measurement are created.
8. Set "Time / point" (or "Wfms / point" or "Measurements / point"), which defines the period from which one long-term point is created.
   See "Horizontal scaling" on page 403 for setting details.

   For each long-term measurement point, the current measurement value is added to the long-term waveform.
9. Define the "Number of points" to be shown in the long-term diagram.
10. If you need the statistical data of the long-term points:
    a) Tap "Setup" to return to the measurement settings.
    b) Enable statistics.
    c) Let the measurement run and export the data when finished.

8.2.12.2 Histograms on measurement results

Histograms are available not only for channel, math and reference waveforms, but also for measurement results. These histograms cannot be configured, and they are shown in a separate diagram. The source is a measurement, and all events in all acquisitions are measured and included in the histogram. If the histogram is based on a long-term measurement, it is shown in the long-term diagram.

The histogram is built from the results of the selected "Measurement for plot".

See also: "Enable (Histogram)" on page 401.

8.2.12.3 Track

The track is a waveform that shows measurement values in time-correlation to the measured signal. It is the graphical interpretation of all measurement values of a single acquisition.

The track is available for most amplitude/time measurements (except for High, Low, Amplitude, Max, Min, Peak to peak, Mean, RMS, S-dev, Pos. and Neg. overshoot, and Area), and for jitter measurements.

Enabling the track enables also the Continuous auto scale and Measure all events in each acquisition.

To analyze the track, you can use cursor measurements and zoom.

Creating a track waveform


1. Configure the measurement group.
2. Activate the measurement group.
3. Select the "Plot" tab.
4. Select the "Measurement for plot".
5. Enable the track.

See also: "Enable (Track)" on page 402.

8.2.12.4 Settings for result analysis

The settings in the "Plot" tab activate and configure long-term measurements, statistical calculations, tracks, and the histogram of measurement results over a longer period of time.

For scaling settings of the long-term diagram, see Section 8.2.12.5, "Setup for long-term measurements", on page 403.

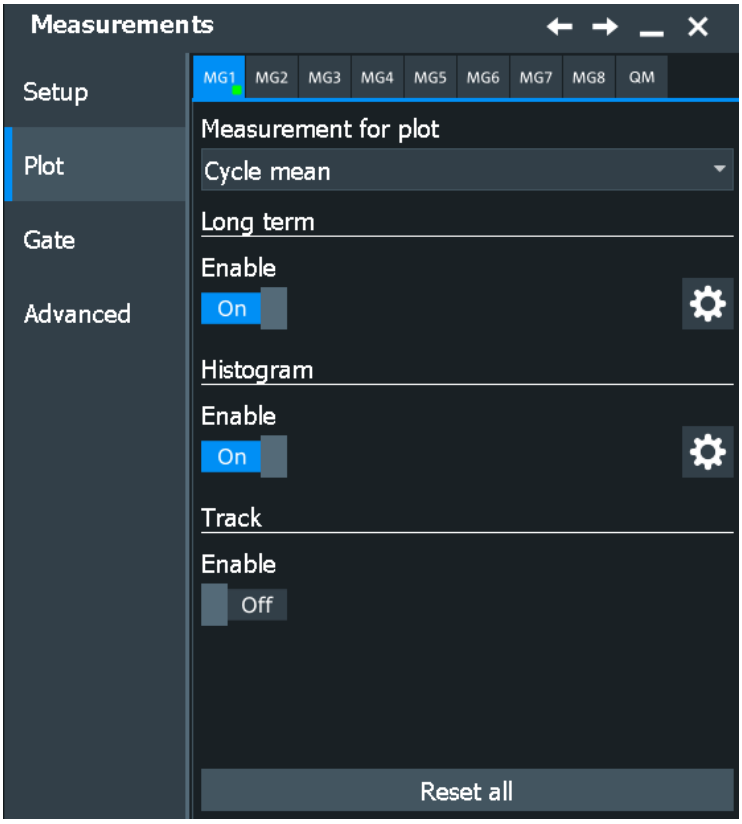


Measurement for plot
Selects the measurement that is used as source for mathematic calculations, long-term measurements, and histograms. These evaluations are performed on one measurement only, not on all measurements of the group. Statistics are calculated for all measurements.

The selected measurement cannot be disabled in the "Add / Remove Measurement" dialog box.

Remote command:
`MEASurement<mg>:MAIN` on page 1600
`MEASurement<mg>:PAMPlitude` on page 1603
`MEASurement<mg>:PEYE` on page 1603

Enable (Long term)
Enables long-term measurement of the main measurement.

Long-term measurements are performed on the "Measurement for plot".

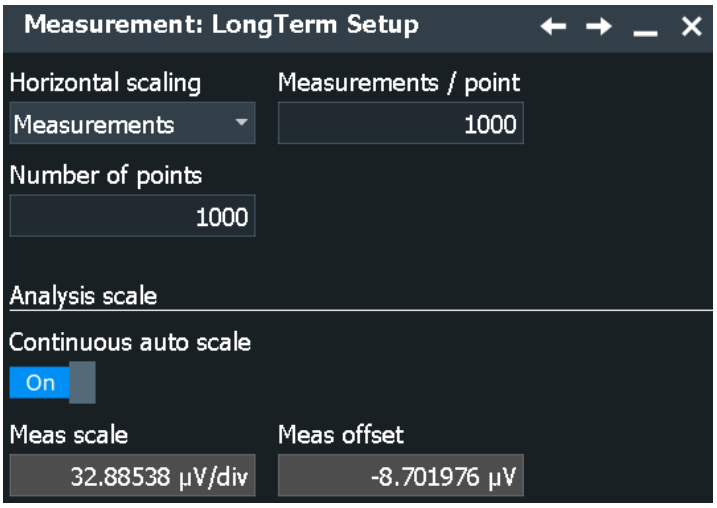


For details on the settings, see:
- Section 8.2.12.5, "Setup for long-term measurements", on page 403
- "Analysis scale" on page 403

Remote command:
`MEASurement<mg>:LTMeas[:STATe]` on page 1683

Enable (Histogram)
Displays a histogram of measurement results - the cumulative occurrence distribution of measurement results in a graphic. Enabling the histogram enables also the statistics and "Measure all events in each acquisition".

Histograms are created on the "Measurement for plot".

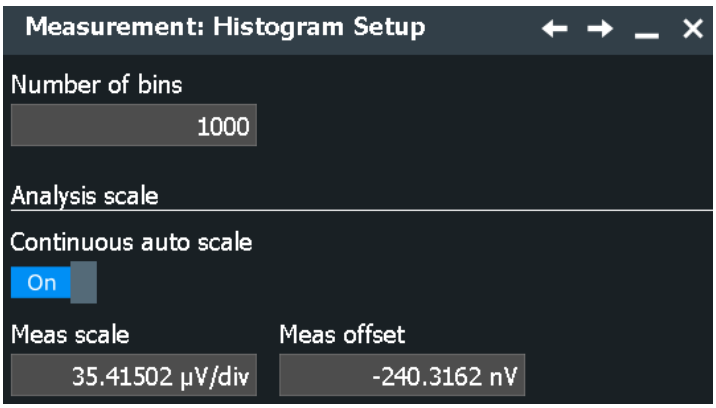

For details on the settings, see:
- "Number of bins" on page 402
- "Analysis scale" on page 403

Remote command:
`MEASurement<mg>:STATistics:HISTogram` on page 1679

Number of bins
Sets the number of bins - the number of vertical bars that build the histogram.

If "Continuous auto scale" is enabled, the instrument determines the number of bins based on the timebase, the current measurements, and other settings. To set the number of bins manually, disable "Continuous auto scale".

Remote command:
`MEASurement<mg>:STATistics:HBINs` on page 1679

Enable (Track)
Enables the track of measurement results over time and displays the track waveform. It is the graphical interpretation of all measurement values of a single acquisition.

The track is available for most amplitude/time measurements (except for High, Low, Amplitude, Max, Min, Peak to peak, Mean, RMS, S-dev, Pos. and Neg. overshoot, and Area), and for jitter measurements.

Enabling the track enables also the Continuous auto scale and Measure all events in each acquisition.

Before you can enable the track, activate the appropriate measurement.

If option R&S RTP-K12 basic jitter analysis is installed, you can use tracks to display the jitter measurement results as a time-correlated waveform, see Section 19.1.4, "Track of jitter measurement results", on page 1109.

Remote command:
`MEASurement<mg>:TRACk[:STATe]` on page 1684

Reset all
Immediately resets the histogram, the long-term measurement and the statistics.

Stopping and starting the acquisition does not reset these analyses but only stops and continues them.

To delete all results, waveforms and history, select the "Clear" icon in the toolbar.

Remote command:
MEASurement<mg>:STATistics:RESet on page 1681

Analysis scale
The measurement scale of long-term measurement diagrams, measurement histograms, and tracks can be set automatically by the instrument, or manually.

Use automatic scaling if the measurement is running and you cannot see the expected results.

"Continuous auto scale"
Performs an automatic scaling whenever the long-term waveform, the histogram or the track does not fit in the diagram during the measurement period.

"Meas scale" Defines the vertical scaling per division.

"Meas offset" Defines a vertical offset for the long-term measurement, measurement histogram or track.

Remote command:
MEASurement<mg>:VERTical:CONT on page 1681
MEASurement<mg>:VERTical:AUTO on page 1682
MEASurement<mg>:VERTical:SCALe on page 1682
MEASurement<mg>:VERTical:OFFSet on page 1682

8.2.12.5 Setup for long-term measurements

In this dialog, you define the horizontal scale of long-term measurement diagrams. The length of the long-term measurement is defined by the number of points.

Horizontal scaling
Defines when the points of a long-term measurement are created.

If statistics are enabled, each long-term measurement point shows the statistical mean and standard deviation of the results measured during the defined period.

If statistics are disabled, the first measurement result of each period is taken as a long-term measurement point.

"Time" Sets one long-term measurement point for the time defined in "Time/point".

"Waveforms" Sets one long-term measurement point for several acquired waveforms. The number is defined in "Waveforms/point".

"Measurements" Sets one long-term measurement point for several measurement results. The number is defined in "Measurements/point".

Remote command:
MEASurement<mg>:STATistics:MODE on page 1679

Number of points
Defines the total number of points to be displayed in the long-term measurement diagram.

Remote command:
MEASurement<mg>:LTMeas:COUNt on page 1683

Time / point
Defines the time to create one point of the long-term measurement. The "Time / point" value is a lower time limit. The actual time between two points depends on the acquisition and postprocessing time.

The long-term measurement is not a data logger with equidistant points as the time between two points varies.

This setting is only available if "Horizontal scaling" is set to "Time".

Remote command:
MEASurement<mg>:STATistics:RTIMe on page 1681

Measurement time
Defines the total duration of the long-term measurement: *Time/point * Number of points*.

This setting is only available if "Horizontal scaling" is set to "Time".

Remote command:
MEASurement<mg>:LTMeas:TIME on page 1683

Waveforms / point
Defines the number of measured waveforms from which one point of the long-term measurement is created.

This setting is only available if "Horizontal scaling" is set to "Waveforms".

Remote command:
MEASurement<mg>:STATistics:RCOunt on page 1680

Measurements / point
Defines the number of measurement results from which one point of the long-term measurement is created.

This setting is only available if "Horizontal scaling" is set to "Measurements".

Remote command:
MEASurement<mg>:STATistics:RMEascount on page 1680

8.2.13 Limit and margin checks: Advanced tab

Limit and margin checks evaluate whether the measurement result exceeds a specified value. Violations are indicated by icons in the result box. Furthermore, you can define actions that are performed on limit or margin violation, like saving the waveform or measurement results.

The following results are considered in limit and margin checks:

- All selected measurements.
- All measured events in an acquisition: all results can initiate an action. However, the icons in the result box indicate only violations of the first result.

- Statistical results. Limit and margin violations of statistical results are indicated by icons in the result box. These violations do not initiate an action.

See also: Section 8.2.11.1, "Measurement status", on page 394

8.2.13.1 Performing limit checks


1. On the menu, select "Measure".
2. Select the "Advanced" tab.
3. Select the subtab of the measurement group that you want to configure.
4. Under "Type", select "Limit only" to distinguish only between valid and non-valid values.
   Select "Margin&Limit" to check two values, where the margin is still valid, while the limit is not.
5. Tap "Setup". Define the valid value range for each active measurement.
   The margins must always be within the valid value range.
   See also "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406
6. Define what happens when the defined limits and margins are exceeded: "Action on limit event".

   For each action, define when the instrument starts it:
   - If the limits or margins are exceeded
   - If the measurement is completed without limit violations
   - Not at all

   As a result of the limit check, the specified actions are performed and an icon indicates the status in the result box.

8.2.13.2 Advanced settings

Access: [Measure] > "Advanced" tab

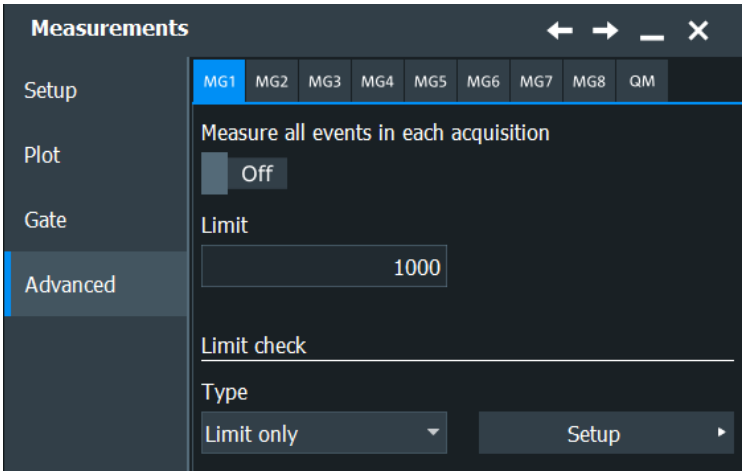

Measure all events in each acquisition
Normally, only one measurement is performed for each acquired waveform to get best performance. If "Measure all events in each acquisition" is enabled, more than one result is taken from one acquired waveform and the results are included evaluation. For example, the rise time is measured on all pulses in the waveform, not only on the first.

The result box shows only the first result of the waveform, the following results are used only for evaluation.

All event results are also considered in limit and margin checks and can initiate an action. However, the icons in the result box only indicate violations of the first result.

Measuring all events is enabled automatically when calculating statistics and histograms. It can also be useful when generating tracks; however, it reduces the performance of the instrument.

The number of results considered can be restricted: "Limit" sets the maximum number of measurement results per acquisition.

Remote command:
`MEASurement<mg>:MULTiple` on page 1678
`MEASurement<mg>:MNOMeas` on page 1678

Limit check: Type
Selects and enables the limit or margin check.

"Off"	No limit check is performed.
"Limit only"	Limits are checked for violation.
"Margin & Limit"	Margins and limits are checked for violation.

Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range
The table lists all active measurement types. Set the limits and margins for each measurement, and also specify the valid range.

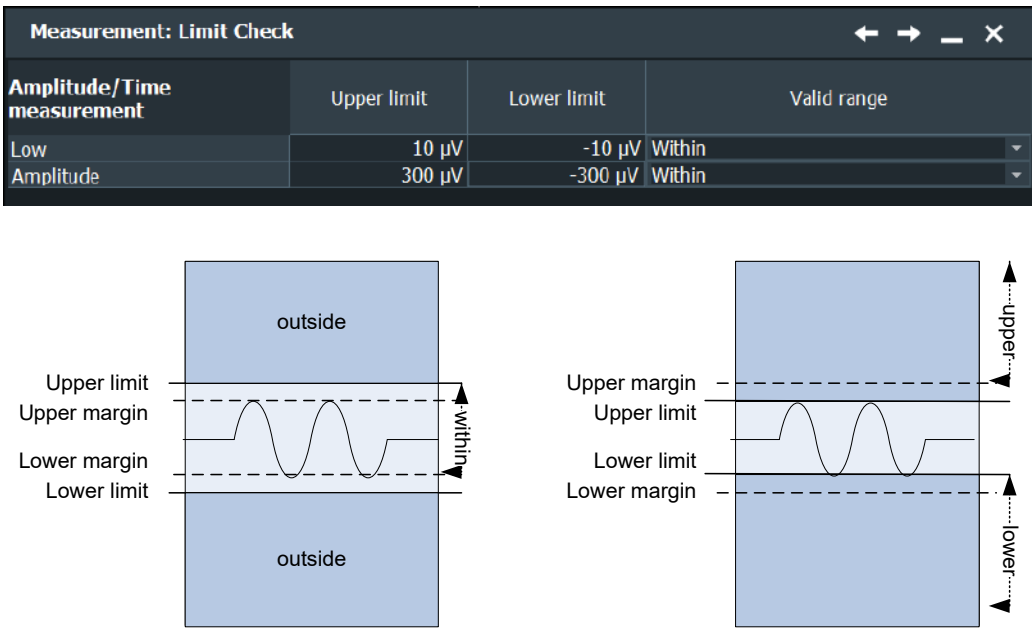



Figure 8-22: Limit and margin definition

Limits are stricter than the margins for the value check. Thus, the margins must be within the valid range. If necessary, the limit and margin values are adapted according to the selected valid range.

Remote command:
MEASurement<mg>:AMPTime:LCHeck<n>:LOWer:LIMit on page 1614
MEASurement<mg>:AMPTime:LCHeck<n>:LOWer:MARGin on page 1614
MEASurement<mg>:AMPTime:LCHeck<n>:UPPer:LIMit on page 1614
MEASurement<mg>:AMPTime:LCHeck<n>:UPPer:MARGin on page 1614
MEASurement<mg>:AMPTime:LCHeck<n>:VALid on page 1613
To check the limits and margins of jitter measurements, use the AMPTime remote commands.
MEASurement<mg>:EYEJitter:LCHeck<n>:LOWer:LIMit on page 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:LOWer:MARGin on page 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:UPPer:LIMit on page 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:UPPer:MARGin on page 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:VALid on page 1632
MEASurement<mg>:HISTogram:LCHeck<n>:LOWer:LIMit on page 1657
MEASurement<mg>:HISTogram:LCHeck<n>:LOWer:MARGin on page 1657
MEASurement<mg>:HISTogram:LCHeck<n>:UPPer:LIMit on page 1657
MEASurement<mg>:HISTogram:LCHeck<n>:UPPer:MARGin on page 1657
MEASurement<mg>:HISTogram:LCHeck<n>:VALid on page 1656
MEASurement<mg>:SPECtrum:LCHeck<n>:LOWer:LIMit on page 1652
MEASurement<mg>:SPECtrum:LCHeck<n>:LOWer:MARGin on page 1653
MEASurement<mg>:SPECtrum:LCHeck<n>:UPPer:LIMit on page 1652
MEASurement<mg>:SPECtrum:LCHeck<n>:UPPer:MARGin on page 1653
MEASurement<mg>:SPECtrum:LCHeck<n>:VALid on page 1652

8.2.13.3 Actions on limit check results

To define what happens when the limits and margins are exceeded, tap "Action on limit event" below the limit and margin ranges.

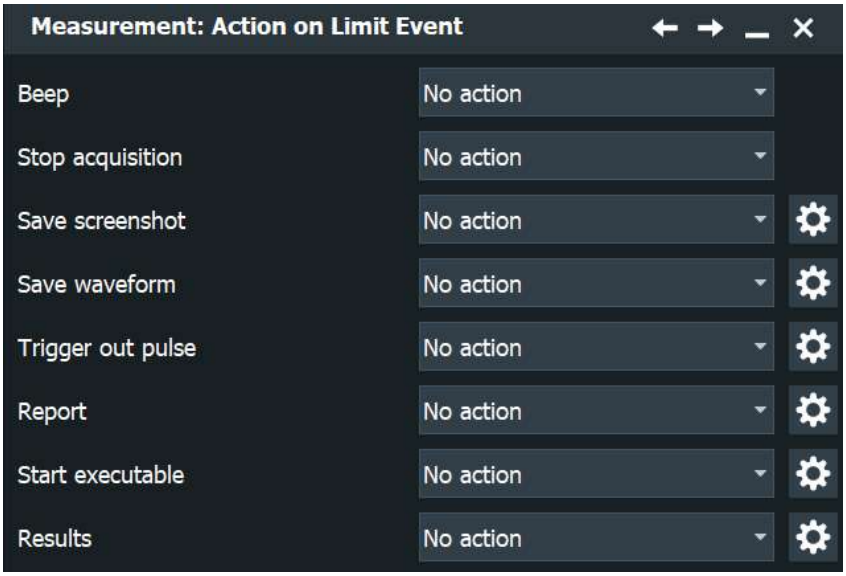

Actions are initiated by all measurements and all results measured on one acquisition.

Note that the violation actions do not distinguish between a margin violation and a limit violation. However, different icons are displayed in the result box.

For each action, you can define the event on which the action is initiated:

- On violation
  The action is initiated when the limits or margins are exceeded during the measurement.
- On successful completion
  The action is initiated when a defined number of acquisitions has been captured, and the limits or margins were not exceeded.

Independent of these actions, an icon is displayed in the result box, see Section 8.2.11, "Measurement results", on page 393.

Beep
Generates a beep sound.

Remote command:
`MEASurement<mg>:ONViolation:BEEP` on page 1686

Stop acquisition
Stops data acquisition on violation.

Remote command:
`MEASurement<mg>:ONViolation:ACQStop` on page 1686

Save screenshot
Saves a screenshot according to settings in "Menu" > "Save/Recall" > "Save" tab > "Screenshot".

Remote command:
MEASurement<mg>:ONViolation:PRINt on page 1686

Save waveform
Saves the waveform data to the file.

Remote command:
MEASurement<mg>:ONViolation:WFMSave on page 1687

Trigger out pulse
Creates a pulse on the Trigger Out connector on limit violation.

When "Trigger Out Pulse" is used, the trigger control option "Enable trigger out" is disabled. Thus, the trigger-out pulse is created only on limit violation but not when a trigger occurs. The pulse is provided always with the minimum delay of 800 ns, the "Delay" cannot be set.

See also: "Trigger out signal setup" on page 237.

Remote command:
MEASurement<mg>:ONViolation:TRIGgerout on page 1688

Report
Creates and saves a report using the settings defined in "File" menu > "Report Setup".

Remote command:
MEASurement<mg>:ONViolation:REPort on page 1687

Start executable
Starts an external application. Tap "Config Executable" to set the application path and parameters.

Remote command:
MEASurement<mg>:ONViolation:RUNexec on page 1688

Results
Starts the export of selected results to file. Tap "Select results" to choose the results for export from a list of available results. The R&S RTP can export cursor results, measurement results, mask test results, search results, decode results of serial protocols, advanced jitter/noise results.

See Section 12.3.4, "Results", on page 514 for measurement selection and settings.

Remote command:
MEASurement<mg>:ONViolation:RESSave on page 1688

8.3 Quick measurements

Quick measurement performs a set of up to eight amplitude/time measurements on one source, simply by tapping the "Quick measurement" toolbar icon. The results are

displayed in a results box. You can configure the measurement to be included in quick measurement. The current configuration can be saved to repeat the measurement quickly.

8.3.1 Starting the quick measurement


If the "Quick meas" icon is not visible on the toolbar, add it to the toolbar: see Section 3.3.6.2, "Configuring the toolbar", on page 57.

1. Tap the waveform that you want to measure.
2. Tap the "Quick measurement" icon on the toolbar.



3. Tap the diagram.

   The result box shows the results of the default quick measurement.

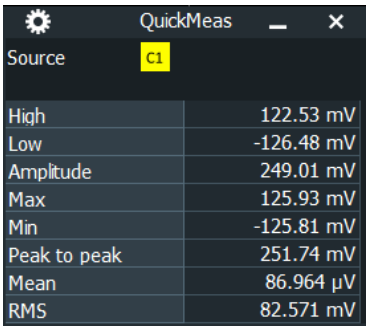

8.3.2 Configuring the quick measurement

The default configuration of the quick measurement includes already 8 amplitude measurements. If these measurements do not fit the measurement task, you can modify the selection.

1. Open "Menu" > "Measure" > "Setup".
2. Select the "QM" subtab.



3. Tap "Add/Remove Measurements".
4. Disable all measurements that you do not need.
5. Select the measurements that you want to add to the quick measurement.
6. Tap "OK".

7. A "Settings" icon indicates whether further settings are required. Tap the measurement. A dialog box opens, where you can adjust the measurement.
8. Tap "Set as QuickMeas" to save the setup.

   The saved iQuickMeas setup is used when you start a new quick measurement.
9. "Enable" the measurement.

Set as QuickMeas
Saves the current QuickMeas setup. The saved QuickMeas configuration is used when you start a new quick measurement. It remains until you save another QuickMeas setup, or until you reset the instrument to "Factory defaults". The "Set as QuickMeas" is not available if the current configuration already has been saved.

9 Spectrum analysis


The R&S RTP provides two ways of spectrum analysis:

- Basic FFT calculation, which is included in the firmware
- Spectrum analysis option R&S RTP-K37, which provides a wide range of analysis possibilities, for example, spectrogram, cursor and automatic measurements.

9.1 FFT analysis

9.1.1 Fundamentals of FFT analysis

During FFT analysis, a signal in the time domain is converted to a spectrum of frequencies. As a result, either the magnitude or the phase of the determined frequencies can be displayed. FFT analysis can be restricted to an extract of the original timebase, and the results display can be restricted to a specified frequency range.

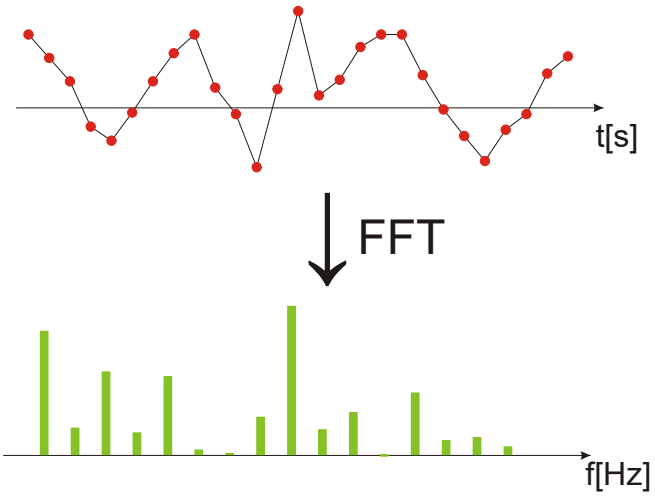


Frames (segments)

To convert the time domain signal to a frequency spectrum, a fast Fourier transform (FFT) unit is used. FFT converts a vector of input values into a discrete spectrum of frequencies.

Conventional oscilloscopes calculate one FFT per capture. The R&S RTP can calculate multiple FFTs per capture by dividing one capture into several *segments*, or *frames*. Thus, the R&S RTP can visualize how the frequency content of a signal changes over time, which helps to detect intermittent or sporadic signal details. Furthermore, the R&S RTP allows consecutive frames to overlap. Framing is especially useful in conjunction with window functions since it enables a gap-free frequency analysis of the signal.

The overlapping factor can be set freely. The higher the overlap factor, the more frames are used. This leads to more individual results and improves detection of transient signal effects. However, it also extends the duration of the calculation. The size of the frame depends on the number of input signal values (record length), the overlap factor, and the FFT size (number of samples used for FFT calculation).

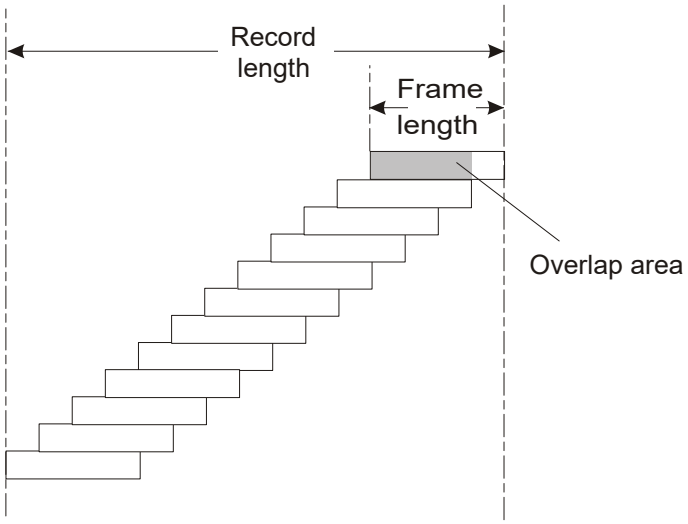

Window functions

Each frame is multiplied with a specific window function after sampling in the time domain. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

There are several window functions that can be used in FFT analysis. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

For details, see "Window type" on page 423.


Combining FFT results

After the window function has been applied to the FFT results for each segment, the results for all segments of the data acquisition are combined to obtain the final waveform. Various arithmetic functions are available for FFT segments, such as averaging, enveloping, or minimum and maximum calculation.

Gating functions

You can restrict the timebase of the input signal for which FFT analysis is to be performed. There are various methods to do so:

- Define absolute start and stop times for the timebase extract.
- Define relative start and stop values that define a percentage of the original timebase.
- Couple the timebase extract for FFT to an active zoom area.

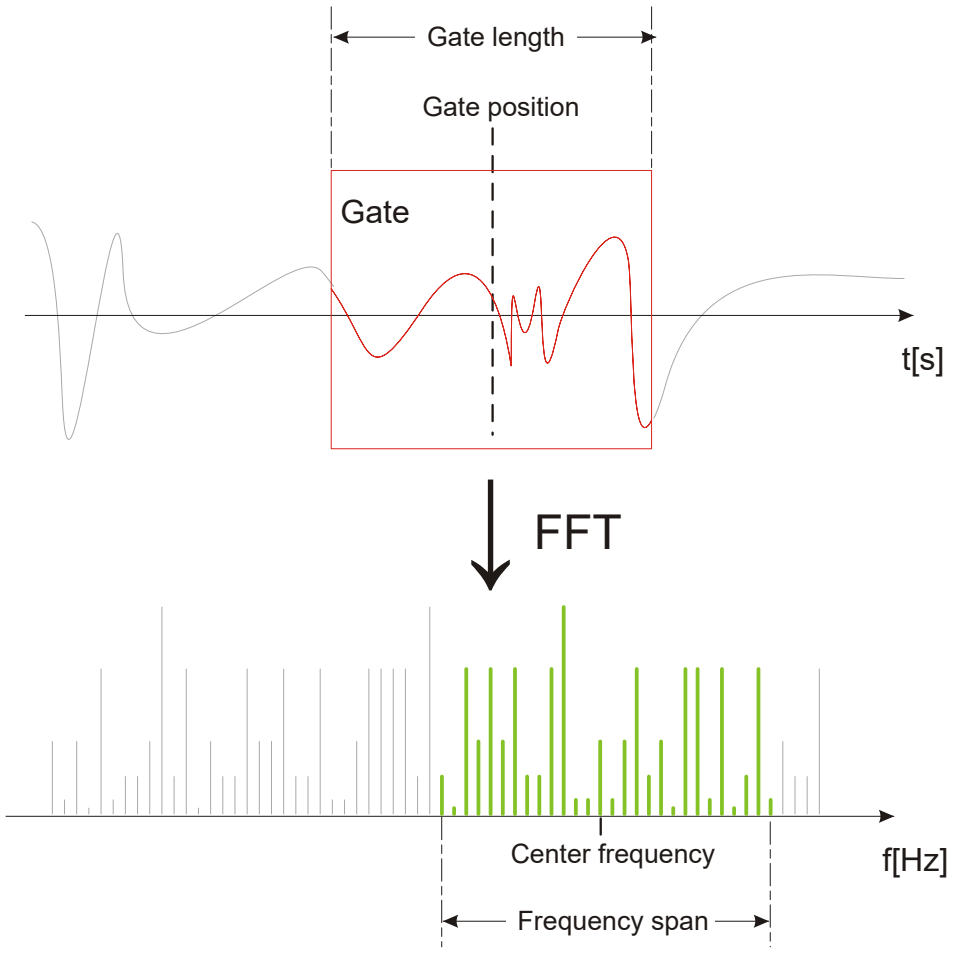

Restricting the result range

You can restrict the results of the FFT analysis to a specified frequency range. The frequency range can be defined in two ways:

- Define a center frequency and frequency span.
- Define start and stop frequencies.

Using the cursor functions on spectrum waveforms, you can easily determine the results for the current center frequency by moving the cursor to that frequency ("C1 to Center"). If you detect a point of interest in the spectrum diagram, you can place the cursor on it and then move the center frequency to the position of the cursor automatically ("Center to C1").

See Section 8.1, "Cursor measurements", on page 321.

Magnitude vs. phase display

The result of an FFT analysis is a spectrum of frequencies. Either the magnitudes or the phases of those frequencies are displayed, depending on the used FFT function. In "Basic" mode, and for the "Advanced" mode FFT functions |FFT|, FFT (re) and FFT

(im), the magnitude is displayed. For the "Advanced" mode FFT (φ) function, the phase is displayed.

For magnitude display, you can select the scale and range of magnitudes to be displayed. For linear scaling, the vertical value range of the input signal is used. For logarithmic scaling, the logarithmic power of the frequency is displayed. In this case, the input signal must be given in either Volt or Watt. The resulting value range is defined by a maximum value and a range size. Logarithmic scaling can also be set in relation to a given reference value.

For phase display, you can select the unit and suppress phases beneath a threshold value, which are most likely caused by noise. The value range [-π, + π] or [-180°, +180°] is used. Phase shifts due to a limitation of the value range can be eliminated using the "Unwrap" function.

DC peak display

An FFT creates the spectrum of frequencies also in negative frequencies:

$$F(\omega) = (\mathcal{F}f)(\omega) = \frac{1}{\sqrt{2\pi}} \int_{-\infty}^{\infty} f(t) e^{-i\omega t}\, dt$$

The resulting FFT signal of negative frequencies is symmetrical to the signal at positive frequencies, with the symmetry center at *f = 0 Hz*. Usually, the FFT displays only the positive frequencies, and multiplies the signal value by 2. The signal value at 0 Hz is not doubled, it exists only once. This exact algorithm can result in a remarkable difference between the signal bin at 0 Hz and the next frequency bin. To reduce this difference, the R&S RTP changes the signal value at 0 Hz (DC peak value).

Dependencies between FFT parameters

FFT analysis in the R&S RTP is highly configurable. Several parameters, including the resolution bandwidth, frequency span and center frequency, can be defined according to your requirements. Note, however, that several parameters are correlated and not all can be configured independently of the others.

The **resolution bandwidth** defines the minimum frequency separation at which the individual components of a spectrum can be distinguished. Small values result in high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase measurement speed.

The minimum achievable RBW depends on the integration time, which is equivalent to the number of samples available for FFT calculation. If a higher spectral resolution is required, the number of samples must be increased by using a higher sample rate or longer record length. To simplify the operation some parameters are coupled and automatically calculated, such as record length and RBW.

The **frequency span** and **center frequency** define the start and stop frequency of the spectral diagram. By default, a suitable frequency range according to the resolution bandwidth is selected, in respect to performance and precision. Span and RBW settings are coupled, so that the parameters can be adjusted automatically as necessary.

With a **Span/RBW ratio** of 100 and a screen resolution of 1000 pixels, each frequency in the spectrum is displayed by 10 pixels. A span/RBW ratio of 1000 provides the

highest resolution. For full flexibility, the span/RBW coupling can also be disabled. Note that a higher span/RBW ratio (i.e. low RBW values and large frequency spans) results in large amounts of data and extend the duration of the calculation.

Advanced FFT functions

In "Advanced" math definition mode, other FFT results than the basic frequency magnitude can be displayed.

- **FFT (φ)**: phase display
- **FFT (im)**: imaginary part of FFT value (magnitude)
- **FFT (re)**: real part of FFT value (magnitude)
- **FFT -dφ*df** (group delay): the negative derivative of the phase with respect to frequency; useful to measure phase distortion

9.1.2 Configuring spectrum waveforms

During FFT analysis, a signal in the time domain is converted to a spectrum of frequencies. A basic spectrum waveform can be displayed quickly. By defining additional FFT parameters, the waveform can be configured in more detail.

As a result, either the magnitude or the phase of the determined frequencies can be displayed, or more complex FFT functions. Analysis can be restricted to an extract of the original time base, and the results display can be restricted to a specified frequency range.

To display a basic spectrum waveform using the toolbar

1. Add the "FFT" icon to the toolbar, see Section 3.3.6.2, "Configuring the toolbar", on page 57 .



2. Tap the "FFT" icon on the toolbar.

   The FFT overlay menu opens.



3. Tap the waveform for which the FFT is performed.

   The first available math waveform is configured to use the selected waveform as a source and the "Mag(FFT(x))" operator, and is enabled. The spectrum waveform is displayed in a new diagram.

To display a basic spectrum waveform using the [Spectrum] key

1. Press the [Spectrum] key.

   The "FFT" tab of the "Math" dialog opens.

2. Set the "Source" to the input signal.

3. Enable "Display".
4. If necessary, edit the spectrum waveform parameters as described in the following procedures.

To display advanced spectrum waveforms

Using the "Formula Editor", you can display other FFT results than the basic frequency magnitude, and use more FFT sources.

1. Open the "Menu" > "Math" dialog.
2. Select the Equation tab.
3. Double-tap the editing area.


   The "Formula Editor" is displayed.
4. Delete the contents of the edit field.
5. Tap the "More" key to display further functions in the editor.
6. Tap the required FFT function key.
7. Select the source channel.
8. Close the parenthesis.
9. Tap "Enter"
10. Select the "Scale" tab to adjust the vertical and horizontal scale of the spectrum.
11. On the "Setup" tab, select "FFT setup" to configure the spectrum. See "To configure the spectrum of FFT analysis" on page 417.

To configure the spectrum of FFT analysis

By default, a suitable frequency range for the expected horizontal values according to the resolution bandwidth is selected, in respect to performance and precision. Span and RBW settings are coupled. If a more precise evaluation is required, for example for postprocessing in a different application, disable the coupling and change the frequency ranges and resolution bandwidth values as required.

1. Open [Spectrum] > "FFT setup".

   The "FFT" dialog opens.

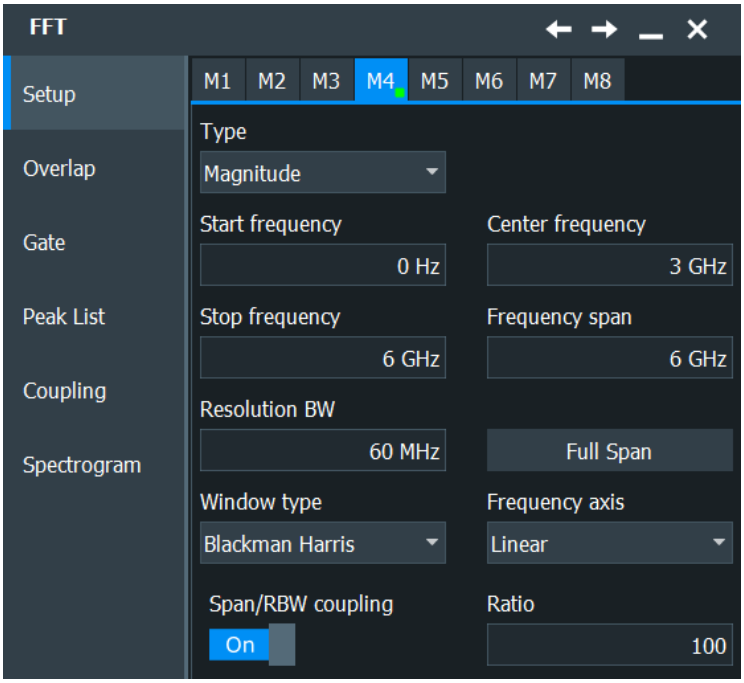

2. In the "Setup" tab, tap the "Frequency axis" button to select the type of scaling you want to use: linear or logarithmic.
3. Disable the "Span/RBW coupling".
4. Specify the frequency range you want to display using one of the following methods:
   - Enter a "Center frequency" and a "Frequency span" that define the spectrum.
   - Enter a "Start frequency" and "Stop frequency" that define the spectrum.
   - Tap the "Full Span" button to display the complete spectrum resulting from the FFT analysis.
5. Define the resolution bandwidth for the FFT result.
   The resolution bandwidth defines how precise the results are, i.e. how close together the individual frequencies can be. Small values result in high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase performance.

   You can define the RBW manually, or couple it to other FFT settings. Do one of the following:
   - To couple the RBW to the span, enable the "Span/RBW coupling" option and define the "Ratio". The smaller the ratio, the higher the RBW becomes to display the same frequency span.
   - Enter the "Resolution BW" manually. The "Span/RBW coupling" option is automatically disabled.
   - To couple the RBW to the specified record length, in the " Gate" tab of the "Advanced FFT" dialog box, select the "Record length controlled" option. This option is only available if no gate is being used ("Use Gate" disabled).

6. Select the most suitable "Window type" for your source data. Window functions are multiplied with the input values and thus can improve the FFT display. For details, see "Window type" on page 423.
7. Optionally, select an arithmetic mode for the FFT segments. This mode defines how the individual segment results are combined to a final spectrum waveform. In the "Overlap" tab of the "Advanced FFT" dialog box, tap "Segment arithmetic" and select the required mode from the list.
8. If you use an arithmetic mode, increase the "Overlap factor" for neighboring segments to increase the accuracy of the results.

To restrict the input values (gating)

By default, the FFT is calculated for the entire record length as defined for the data acquisition. However, you can restrict the time range for which the FFT is calculated, resulting in a restricted spectrum. Alternatively, the record length can be determined automatically according to the selected RBW.

1. Open [Spectrum] > "FFT setup" > "Gate" tab.
2. Determine how the input length is configured by selecting one of the following options:
   - To ensure that the FFT is calculated for the full defined record length, select the "Record length controlled" option. This option is only available if no gate is being used ("Use Gate" disabled). The RBW is adapted so that the record length can be acquired in the specified acquisition time. However, the RBW is restricted, so that data acquisition may fail if the record length is too long for the specified acquisition time.
   - To couple the used record length to the required RBW, select the "RBW controlled" option. This option is only available if no gate is being used ("Use Gate" disabled).
     The required acquisition time for the defined RBW value is indicated.
   - To restrict the basis of the FFT calculation to a certain time base, configure a time gate, that is: an extract of the time base in the original diagram. To do so, enable the "Use Gate" option, then do one of the following:
     – Select the "Absolute" mode and enter the "Start" and "Stop" times that define the gate area.
     – Select the "Relative" mode and enter the percentages of the total time base that define the "Relative Start" and "Relative Stop" times.
     – If a zoom area has already been defined in the original diagram and you want to use the same time base for FFT analysis, select "Zoom coupling".

   The spectrum waveform displays the spectrum for the specified time span.

To configure magnitude results

1. Open [Spectrum] > "FFT setup" > "Setup" tab.
2. Set "Type" = "Magnitude".

3. In the "Scale" tab of the "Math" dialog, select the "Unit".
4. Select the "Vertical scale mode" to configure the value range manually or use the automatic settings.
5. For "Vertical scale mode" > "Manual", define the size of the "Vertical range" and the "Vertical maximum" to be displayed.
   For "Vertical scale mode" > "Auto", define the size of the "Vertical range" to be displayed.
   For logarithmic scaling ("Unit = dB"), also define the "Reference level" to be used.

To configure phase results

1. Open [Spectrum] > "FFT setup" > "Setup" tab.
2. Set "Type" = "Phase".
3. In the "Scale" tab of the "Math" dialog, select the "Unit".
4. To eliminate phase shifts due to a limitation of the value range, enable the "Unwrap" function.
5. To suppress small phase values due to noise, enable the "Suppression" function and enter a "Threshold" value.

To couple spectrum displays

The settings for one or more spectrums can be coupled. Thus, if any FFT setting for any of the coupled spectrums are changed, they are changed for all coupled spectrums.

1. Open [Spectrum] > "FFT setup" > "Overlap" tab.
2. Select the spectrums that you need to couple. You cannot select the spectrum for the currently selected math waveform. Its settings are applied to the selected spectrums.
3. If necessary, define an FFT function to be used for the coupled math waveforms so that a spectrum is displayed. See Section 7.3.1, "Displaying math waveforms", on page 284.

9.1.3 FFT configuration settings

- FFT setup....420
- FFT overlap....424
- FFT gating....426
- Peak list....428
- FFT coupling....428


9.1.3.1 FFT setup

Access: [Spectrum] > "FFT setup" > "Setup" tab

In this tab, you define the settings for the FFT window. The display can be restricted to the results for a certain time base extract and to a specified frequency range.

Additional settings are available if the Spectrum analysis option (R&S RTP-K37) is installed.

See Section 9.2.4, "Spectrogram configuration settings", on page 434.

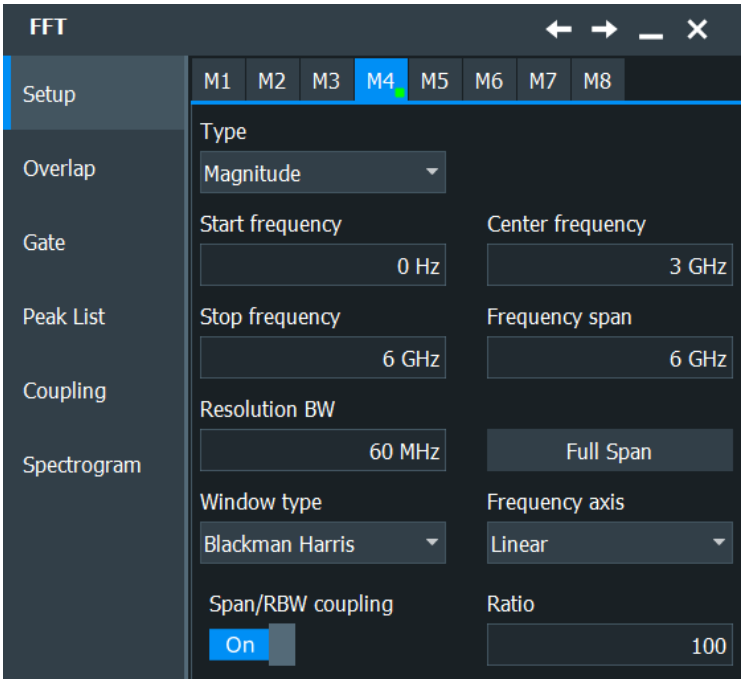

Type 421
Display 421
Frequency axis 422
Center frequency 422
Frequency span 422
Full span 422
Start frequency 422
Stop frequency 422
Span/RBW Coupling 423
Span/RBW Ratio 423
Resolution BW 423
Window type 423
Use color table 424

Type
Selects between the magnitude and phase spectrum type.

Remote command:
`CALCulate:MATH<m>:FFT:TYPE` on page 1692

Display
If activated, the defined math waveform is displayed in the diagrams.

For spectrum, the math waveform is displayed automatically if the selected source has already been captured.

Remote command:
CALCulate:MATH<m>:STATe on page 1565


Frequency axis
Defines the scaling method for the frequency (x-) axis of the spectrogram.

"Logarithmic" Logarithmic scaling

"Linear Unit" Linear scaling


Remote command:
CALCulate:MATH<m>:FFT:LOGScale on page 1690

Center frequency
Defines the position of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The width of the range is defined using the "Frequency span" setting.

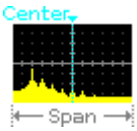

Remote command:
CALCulate:MATH<m>:FFT:CFRequency on page 1691

Frequency span
The span is specified in Hertz and defines the width of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The position of the span is defined using the "Center frequency" setting.

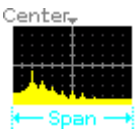

Remote command:
CALCulate:MATH<m>:FFT:SPAN on page 1692

Full span
Displays the full frequency span.

Remote command:
CALCulate:MATH<m>:FFT:FULLspan on page 1691

Start frequency
Defines the start frequency of the displayed frequency span.

Remote command:
CALCulate:MATH<m>:FFT:STARt on page 1690

Stop frequency
Defines the stop frequency of the displayed frequency span.

Remote command:
CALCulate:MATH<m>:FFT:STOP on page 1691

Span/RBW Coupling
Couples the frequency span to the "Resolution BW" setting.

Remote command:
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:AUTO on page 1693

Span/RBW Ratio
Defines the coupling ratio for Span/RBW. This setting is only available if CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:AUTO is ON.

Remote command:
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:RATio on page 1693

Resolution BW
Defines the resolution bandwidth. Note that the resolution bandwidth is correlated with the span, record length and acquisition time. If a constant record length is to be used, the RBW may be adapted if the required number of samples cannot be acquired. If span and RBW values are coupled, changing the span will also change the RBW.

For details see Section 9.1.1, "Fundamentals of FFT analysis", on page 412.

Remote command:
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution][:VALue] on page 1693
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:ADJusted? on page 1692

Window type
Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the R&S RTP to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully, to find the optimum solution for the measurement task.

Window type	Frequency resolution	Magnitude resolution	Measurement recommendation
Rectangular	Best	Worst	Separation of two tones with almost equal amplitudes and a small frequency distance
Hamming Hann	Good	Poor	Frequency response measurements, sine waves, periodic signals and narrow-band noise
Blackman Harris (default)	Worst	Best	Mainly for signals with single frequencies to detect harmonics Accurate single-tone measurements
Gaussian	Good	Good	Weak signals and short duration
Flattop2	Poor	Best	Accurate single-tone measurements
Kaiser Bessel	Poor	Good	Separation of two tones with differing amplitudes and a small frequency distance

Remote command:
CALCulate:MATH<m>:FFT:WINDow:TYPE on page 1694

Use color table
If enabled, the spectrum waveform (and a spectrogram, if available) is displayed according to the assigned color table. For information on the available color tables, see Section 4.3.2, "Color tables", on page 80.


If this option is disabled, the preset color of the selected channel source is displayed, and the intensity of the specific signal color varies according to the cumulative occurrence of the values. For spectrum diagrams, this setting corresponds to the common waveform display. The spectrogram, on the other hand, is then displayed in gray tones, which is not useful.

Remote command:
CALCulate:MATH<m>:FFT:USEColtab on page 1705

9.1.3.2 FFT overlap

Access: [Spectrum] > "FFT setup" > "Overlap" tab

In this tab, you define the settings for the magnitude and phase of the frequencies.

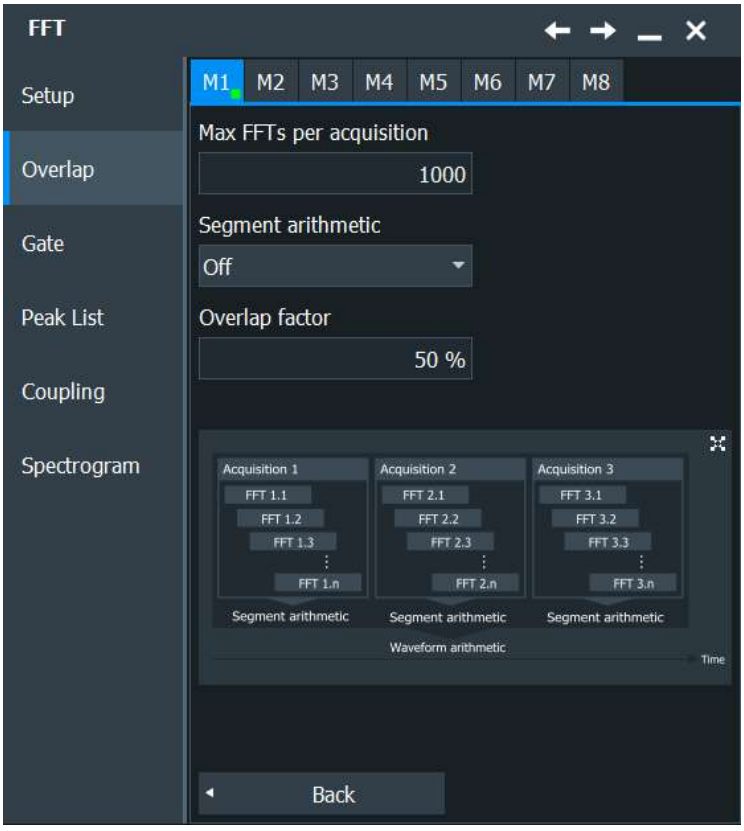

Max FFTs per acquisition 425
Segment arithmetic 425
Overlap Factor 425

Max FFTs per acquisition
Restricts the maximum number of FFTs to be calculated for each data acquisition. Due to the other parameter settings, the required number of FFTs may become very high, thus slowing performance. By restricting the number of FFTs, you can avoid performance loss without changing the other parameters.

However, if the maximum number of FFTs is lower than the required number to cover the entire waveform, the waveform may only be analyzed partially. In this case, the "Frame coverage" indicates the percentage of the waveform that was analyzed, i.e. which part of the data was included in the FFT calculation.

Remote command:
`CALCulate:MATH<m>:FFT:FRAMe:MAXCount` on page 1695
`CALCulate:MATH<m>:FFT:FRAMe:COVerage?` on page 1695

Segment arithmetic
FFT analysis can only be performed on a maximum number of values at once. If more values must be calculated, the input signal is divided into segments, each of which is calculated separately. The segments need not be disjunct, that is: they may overlap, so that some values have several FFT results. In this case, the arithmetic mode defines how the final result is calculated from the individual results.

The following methods are available:

"Off" The data of only one segment is considered. In effect, no arithmetics are processed.

"Envelope" Detects the minimum and maximum values for FFT calculation over all segments. The resulting diagram shows two envelope waveforms: the minimums (floor) and maximums (roof). These envelopes indicate the range of all FFT values that occurred.

"Average" The average is calculated over all segments.

"RMS" The root mean square is calculated over all segments. The result is the average power spectrum. If you measure the channel power on this RMS spectrum, you get the same result as for the average channel power measurement on segments.

"MinHold" Determines the minimum result for each input value from the data of the current acquisition and the acquisitions before.

"MaxHold" Determines the maximum result for each input value from the data of the current acquisition and the acquisitions before.

Remote command:
`CALCulate:MATH<m>:FFT:FRAMe:ARIThmetics` on page 1695

Overlap Factor
Defines the minimum factor by which two neighboring segments overlap. If the required number of segments to cover the input values allows for more overlap, the factor is increased.


The higher the overlap factor, the more segments are used. This leads to more individual results and improves detection of transient signal effects. However, it also extends the duration of the calculation.

Remote command:
CALCulate:MATH<m>:FFT:FRAMe:OFACtor on page 1696

9.1.3.3 FFT gating

Access: [Spectrum] > "FFT setup" > "Gate" tab

FFT gating allows you to restrict FFT analysis to a certain time base of the input signal.

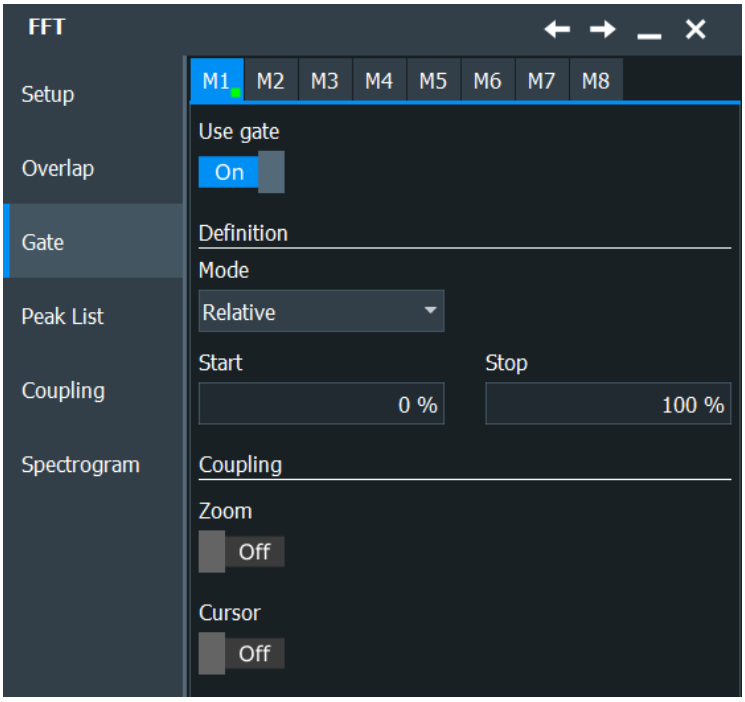

If no gate is used, you can define the record length as dependent on the RBW, or the RBW as dependent on the record length (which is defined by the acquisition time).

Use Gate....426
Gate Definition....427
└ Zoom....427
└ Gate description....427
└ (Relative) Start....427
└ (Relative) Stop....427
Record Length/RBW Coupling....428
Required acquisition time....428

Use Gate
Enables FFT gating and shows the gate.

If enabled, the "Gate Definition" settings are used.

If disabled, the relation between the record length and the RBW can be defined manually in the "Setup" tab instead.

When a gate is used, the RBW is adapted, if necessary. The smaller the gate, the higher the RBW.

For details, see Section 9.1.1, "Fundamentals of FFT analysis", on page 412.

Gate Definition
Defines the gate settings for FFT gating.

Zoom ← Gate Definition
Zoom coupling is available if a zoom is defined. As long as "Zoom coupling" is enabled, the gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well.

If several zoom diagrams are defined, select the zoom diagram to be used for gating. The "Start" and "Stop" values of the gate are adjusted accordingly.

Zoom coupling can be set for measurement gates, FFT gates, and search gates. The zoom must be defined on the diagram that contains the signal source of the measurement, FFT, or search.

Remote command:
`MEASurement<mg>:GATE:ZCOupling` on page 1671
`MEASurement<mg>:GATE:ZDIagram` on page 1671
`CALCulate:MATH<m>:FFT:GATE:ZCOupling` on page 1699
`SEARch:GATE:ZCOupling` on page 1764
`SEARch:GATE:ZDIagram` on page 1765

Gate description ← Gate Definition
Defines whether the gate settings are configured using absolute or relative values.

"Absolute" The gate is defined by absolute start and stop values.

"Relative" The gate's start and stop values are defined by a percentage of the value range.

Remote command:
`CALCulate:MATH<m>:FFT:GATE:MODE` on page 1698

(Relative) Start ← Gate Definition
Defines the starting value for the gate.

Remote command:
`CALCulate:MATH<m>:FFT:GATE:ABSolute:STARt` on page 1697
`CALCulate:MATH<m>:FFT:GATE:RELative:STARt` on page 1698
`MEASurement<mg>:GATE:ABSolute:STARt` on page 1669
`MEASurement<mg>:GATE:RELative:STARt` on page 1670
`SEARch:GATE:ABSolute:STARt` on page 1763
`SEARch:GATE:RELative:STARt` on page 1764

(Relative) Stop ← Gate Definition
Defines the end value for the gate.

Remote command:
`CALCulate:MATH<m>:FFT:GATE:ABSolute:STOP` on page 1697
`CALCulate:MATH<m>:FFT:GATE:RELative:STOP` on page 1698
`MEASurement<mg>:GATE:ABSolute:STOP` on page 1669
`MEASurement<mg>:GATE:RELative:STOP` on page 1670

SEARch:GATE:ABSolute:STOP on page 1763
SEARch:GATE:RELative:STOP on page 1764

Record Length/RBW Coupling
The record length and resolution bandwidth are coupled during FFT analysis. If you change one value, the other must be adapted accordingly. You can keep either value constant, thus preventing automatic adaptation when the other parameter is changed. However, this may cause the FFT analysis to fail.

This setting is only available if gating is not enabled (otherwise the gate determines the RBW automatically).

For details, see Section 9.1.1, "Fundamentals of FFT analysis", on page 412.

"Record length controlled"	The record length remains constant. If not enough samples are available for the selected RBW, the RBW is decreased.
"RBW controlled"	The RBW is not adapted, i.e. remains as defined. The required acquisition time for this RBW is indicated. If necessary and possible, the record length is extended to acquire the required number of samples.

Remote command:
CALCulate:MATH<m>:FFT:GATE:COUPling on page 1696

Required acquisition time
The required acquisition time is calculated for the defined RBW value if "RBW constant" is selected, and is displayed for information only. If the required acquisition time is not available (e.g. because acquisition has already been stopped), an error message is displayed in the FFT setup tab indicating that not enough samples are available for the defined RBW.

Remote command:
TIMebase:RACTime? on page 1697


9.1.3.4 Peak list

For a description of the "Peak List" settings, see Section 8.2.5, "Spectrum measurements", on page 370.

9.1.3.5 FFT coupling

Access: [Spectrum] > "FFT setup" > "Coupling" tab

Up to four spectrum displays can be shown simultaneously, one for each math waveform. The settings for one or more spectrums can be coupled. Thus, if any FFT setting for any of the coupled spectrums are changed, they are changed for all coupled spectrums.

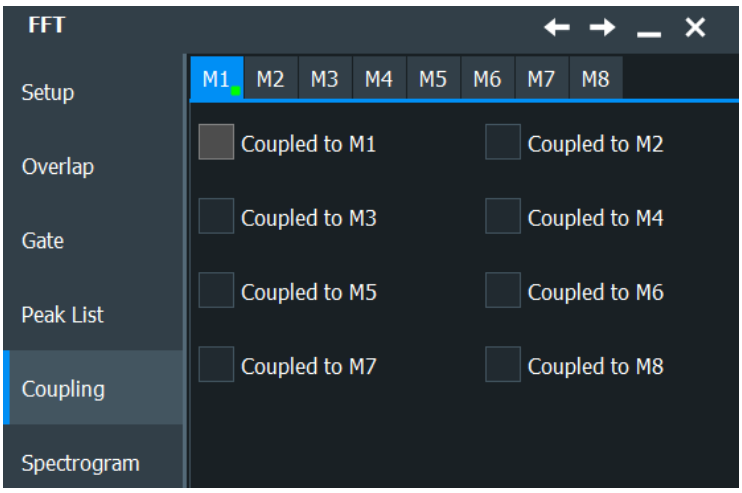

Coupled to M1...M8
Copies the current FFT settings of the selected math waveform (M1...M8) to the other selected math waveforms, and couples those waveforms. Thus, if any FFT setting for any of the coupled spectrums are changed, they are changed for all coupled spectrums.

Two different sets of spectrums can be coupled at the same time, for instance "M1" can be coupled to "M2", while "M3" is coupled to "M4".

Note that the formula of the coupled math waveforms is not changed. If necessary, you must select an FFT function for the math waveform manually before the FFT settings of the coupled waveform are applied. See Section 7.3.1, "Displaying math waveforms", on page 284.

Remote command:
`CALCulate:MATH<m>:FFT:COUPled:WITH<n>` on page 1703

9.1.4 FFT scale settings

In this section, you can find functions to set the vertical parameters of the FFT math waveform.

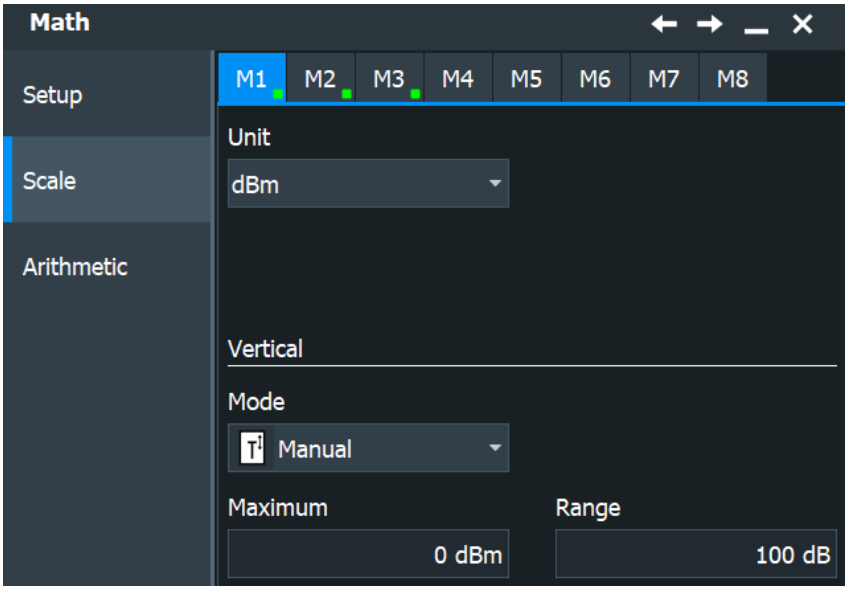


Figure 9-1: Scale settings of magnitude spectrum

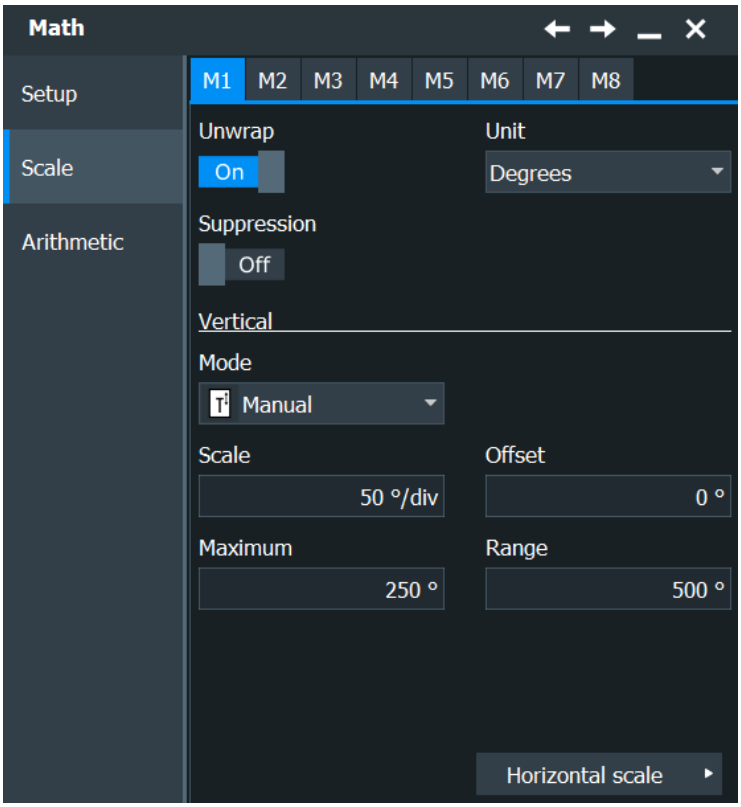


Figure 9-2: Scale settings of phase spectrum

See also:

- Vertical scale mode (Manual/Auto)
- Vertical offset

- Vertical scale

Unit
Defines the scaling unit for magnitude display. Available units depend on the unit of the selected source waveform.

"Linear" displays the RMS value of the voltage.

Remote command:
CALCulate:MATH<m>:FFT:MAGNitude:SCALe on page 1700

Reference level
Defines the reference level if "dB" is the selected unit.

Remote command:
CALCulate:MATH<m>:FFT:MAGNitude:LEVel on page 1700

Vertical maximum
Defines the maximum value on y-axis for spectrum displays. Only available for "Manual" scale mode.

Remote command:
CALCulate:MATH<m>:VERTical:MAXimum on page 1568

Vertical range
Defines the range of FFT values to be displayed.

Remote command:
CALCulate:MATH<m>:VERTical:RANGe on page 1567

Unwrap
If enabled, phase shifts due to a limitation of the value range are eliminated.

Remote command:
CALCulate:MATH<m>:FFT:PHASe:UNWRap on page 1703

Unit
Defines the scaling unit for phase display.

- Radians
- Degrees

Remote command:
CALCulate:MATH<m>:FFT:PHASe:SCALe on page 1702

Suppression
Enables noise suppression. Phase calculation is restricted to frequencies with a minimum magnitude, the threshold value.

Remote command:
CALCulate:MATH<m>:FFT:PHASe:SUPPression on page 1702

Threshold
Defines the minimum frequency magnitude for which phases are calculated. This setting is only available if "Suppression" is enabled.


Remote command:
CALCulate:MATH<m>:FFT:PHASe:THReshold on page 1702

9.2 Spectrum analysis (option R&S RTP-K37)

This chapter describes the Spectrum analysis option R&S RTP-K37.

9.2.1 Spectrogram display

The Spectrum analysis option provides a new diagram for spectrum waveforms: a spectrogram. When you enable a spectrogram, three windows are displayed: the power vs. time diagram at the top, the spectrogram in the middle (labeled "SG") and the power vs. frequency (=spectrum) diagram at the bottom.

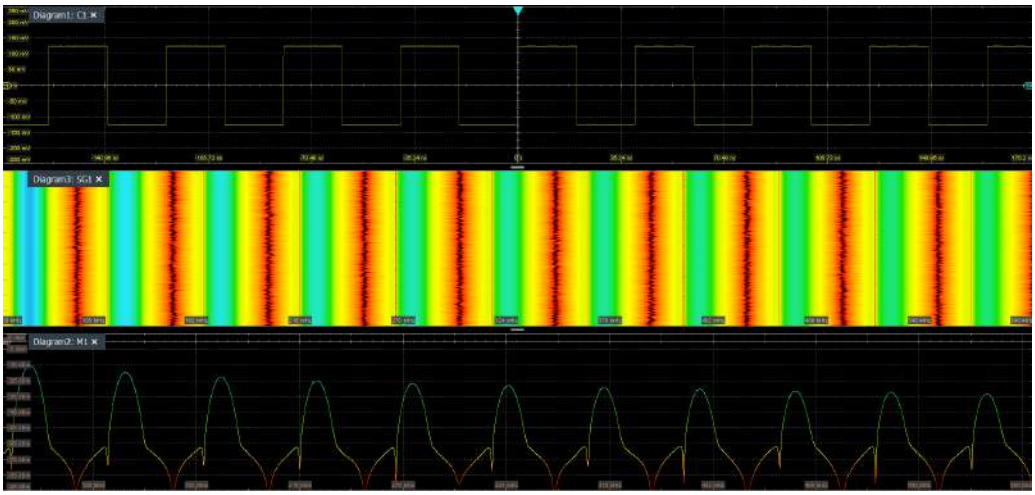

A spectrogram shows how the spectral density of a signal varies over time. The x-axis shows the frequency, the y-axis shows the time. A third dimension, the power level, is indicated by different colors. Thus you can see how the strength of the signal varies over time for different frequencies.

The spectrogram is updated with each data acquisition, from top to bottom, so that the most recent trace is at the bottom. Up to two time lines can be shown at a specified position so that you can analyze the spectrum at a specific point in time.

The spectrum diagram indicates the power vs. frequency values for a single data acquisition. If a time line is enabled, the spectrum shows the results at the selected time. Otherwise, the spectrum shows the results of the most recent data acquisition.

9.2.2 Spectrum analysis functions

In addition to spectrograms, the Spectrum analysis option also provides some new automatic measurements based on spectrum waveforms.

- A peak list measurement detects all peaks above a user-definable threshold and optionally indicates the peaks in the spectrum diagram.

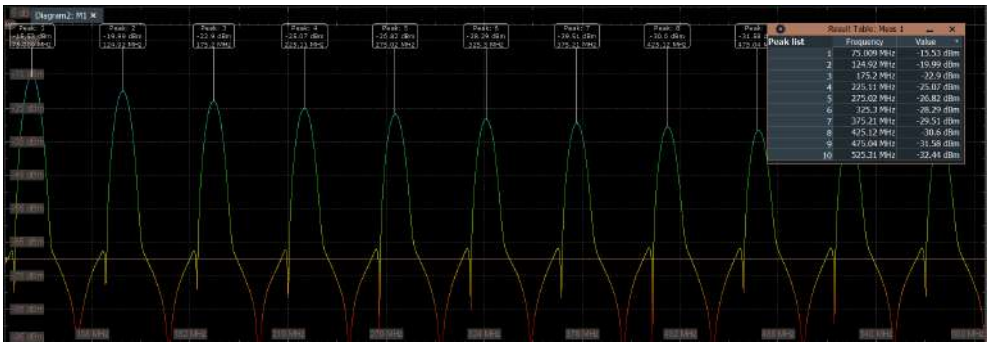


Figure 9-3: Peak list with labels for spectrum waveform

For a description of the measurement settings, see Section 8.2.5.2, "Settings for spectrum measurements", on page 372.

- The THD measurements are an extension to the basic THD measurement. See Section 8.2.5, "Spectrum measurements", on page 370 for details.
- Cursor measurements on spectrum waveforms provide easy center definition and peak search functions, see Section 8.1.1.2, "Cursor measurements on spectrum waveforms", on page 322.

9.2.3 Configuring spectrograms

Spectrograms are only available if the Spectrum analysis option R&S RTP-K37 is activated.



1. Tap the "Spectrogram" icon on the toolbar.

   The "Spectrogram" overlay menu opens.



2. Select the source of the spectrogram.

   A spectrogram diagram is displayed. A new signal icon for the spectrogram is displayed on the signal bar ("SGx").
   If the selected source is a channel waveform, an FFT is started, on which the spectrogram is created.
   Additional settings for time lines become available in the dialog box.

3. Optionally, to display a time line and thus mark a specific waveform in the spectrogram, select "Enable" for one of the two time lines.

A small arrow icon labeled "T1" / "T2" indicates the position of the time line in the spectrogram.
The spectrum diagram displays the results for the selected waveforms. A new signal icon is displayed on the signal bar for each time line ("SGxTL1|2").

4. To view the spectrum for each time line in a separate diagram, drag the signal icon for one time line to the diagram area and drop it.

   A new window is displayed for the selected time line, and the original diagram displays the other time line.


5. To view a different waveform from the spectrogram, move the time lines in the spectrogram.

9.2.4 Spectrogram configuration settings

Access: [Spectrum] > "FFT setup" > "Spectogram" tab

Spectrograms are only available if the option R&S RTP-K37 is activated. Furthermore, a math (FFT) waveform must be configured and enabled.

See Section 9.1.2, "Configuring spectrum waveforms", on page 416.

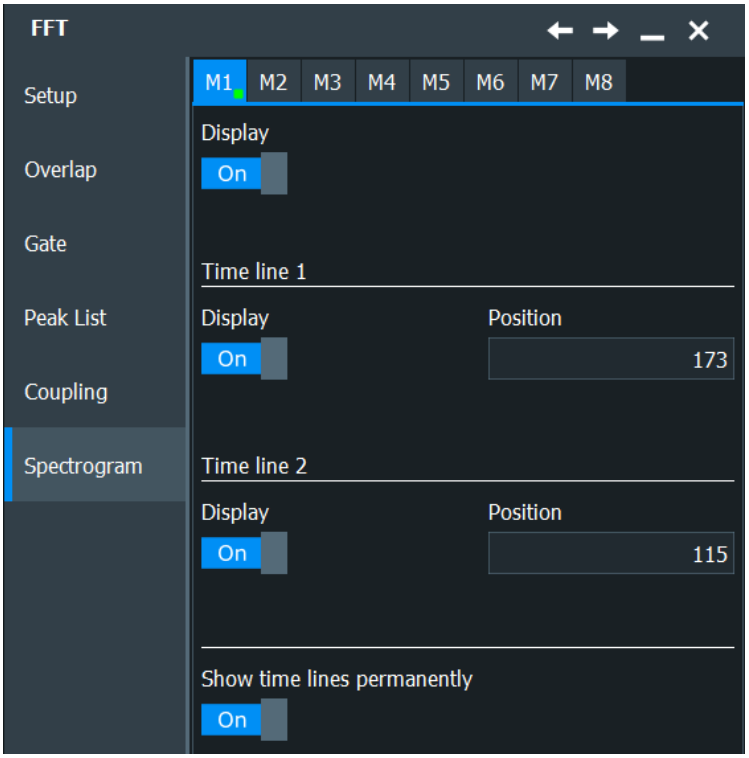

Display 435
Time line 1/2 435
Show lines permanently 435

Display
Enables the spectrogram display.

If enabled, a new signal icon for the spectrogram is displayed on the signal bar ("SGx").

Remote command:
CALCulate:MATH<m>:FFT:SPECtrogram:STATe on page 1706

Time line 1/2
A time line marks a single spectrum in the spectrogram, that is: the power vs frequency results for the data acquired at a specific time. After enabling a time line, the results for that time are displayed in the spectrum diagram. A small arrow icon labeled "T1" / "T2" indicates the position of the time line in the spectrogram. A new signal icon is displayed on the signal bar for each time line ("SGxTL1|2").

You can enable and display two time lines at the same time. This allows you to compare the results at different times.

The position of the time line is defined by the index of the data acquisition in the history. How many acquisitions are available depends on the history settings.

See "Player" on page 313.

Remote command:
CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:STATe on page 1707
CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:POSition on page 1706

Show lines permanently
Displays the spectrogram time lines in the diagrams until you disable this option.

If disabled, only the small arrow icons are permanently visible. The line is only displayed temporarily when you touch the arrow.

10 Mask testing

10.1 About mask testing

Masks are used to determine whether the signal remains within specified limits, e.g. to uncover signal anomalies or test compliance and stability of digital signals. The limits are specified as "mask", which is laid over the input signal in the display. Thus you can easily detect where the signal violates the mask.

Mask testing with R&S RTP has only a minor impact on the acquisition rate, thus mask violations are detected fast and reliably.

With R&S RTP, you can define own masks easily. Specific actions can be executed when mask violations occur. For error analysis, you can stop the acquisition on a failed test and use the history view to look at the previous waveforms.

Mask test

A mask test consists of:

- Mask definition.
- Waveform to be tested.
- Fail criteria for the test.
- Actions to be taken on violation or successful completion.

Mask definition

A mask can be created in several ways:

- The individual mask points are defined, either on the touchscreen or as numerical values. This mask type is called *user mask*.
  For details, see Section 10.2.2.1, "Mask definition: user mask", on page 440.
- The mask is derived from an existing waveform. This mask type is called *waveform mask*.
  For details, see Section 10.2.2.2, "Mask definition: waveform mask", on page 443.


Fail criteria for testing

The fail criterion for a mask test is set by two parameters: "Fail condition" and "Violation tolerance". Fail condition defines if sample hits or the number of acquisitions with sample hits are considered. Violation tolerance sets the number of tolerable sample hits or acquisition hits. A test has failed if the number of sample hits or acquisition hits exceeds the limit of violation tolerance hits.

See also: Section 10.2.3, "Define Test", on page 447.

10.1.1 Results of a mask test

The result box of a mask test shows the following test results:

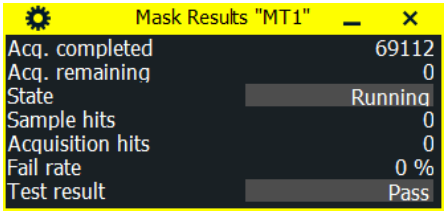

Acq. completed
Number of tested acquisitions.

Remote command:
`MTESt:RESult:COUNt:WAVeforms?` on page 1725

Acq. remaining
Remaining acquisitions until "Average count / Nx Single count" is reached.

The value is useful if you test a specified number of acquisitions with action "Stop acquisition" on violation. Also if the acquisition has been stopped manually before the required number of acquisitions has been acquired.

Remote command:
`MTESt:RESult:COUNt:REMaining?` on page 1725

State
Shows if the test has been completed. The state is set to "Finished" when "Nx Single count" acquisitions are tested and the number of "Acq. remaining" is 0. As long as the number of tested acquisitions is less the "Nx Single count" number, the state is "Running".

If you run the acquisition with [Run / Stop], or the number of played history acquisitions exceeds "Nx Single count", the mask testing is performed according to fail criteria settings independently of the test state. The testing is not stopped when the state is set to "Finished".

Remote command:
`MTESt:RESult:STATe?` on page 1724

Sample hits
Number of samples that hit the mask.

Remote command:
`MTESt:RESult:COUNt:FAILures?` on page 1725

Acquisition hits
Number of acquisitions that contained at least one sample hit.

Remote command:
`MTESt:RESult:COUNt:FWAVeforms?` on page 1725

Fail rate
Ratio of acquisition hits to the number of tested acquisitions.

Remote command:
`MTESt:RESult:FRATe?` on page 1726

Test result
A test has failed if the number of sample hits or acquisition hits exceeds the limit of "Violation tolerance" hits.


Remote command:
`MTESt:RESult[:RESult]?` on page 1724

10.2 Mask test settings

10.2.1 Define mask

Access: [Apps] > "Analysis" tab > "Mask" > "Define Mask"

The "Define Mask" tab provides all settings for the mask test itself: the waveform to be tested,and saving/loading the mask definition.

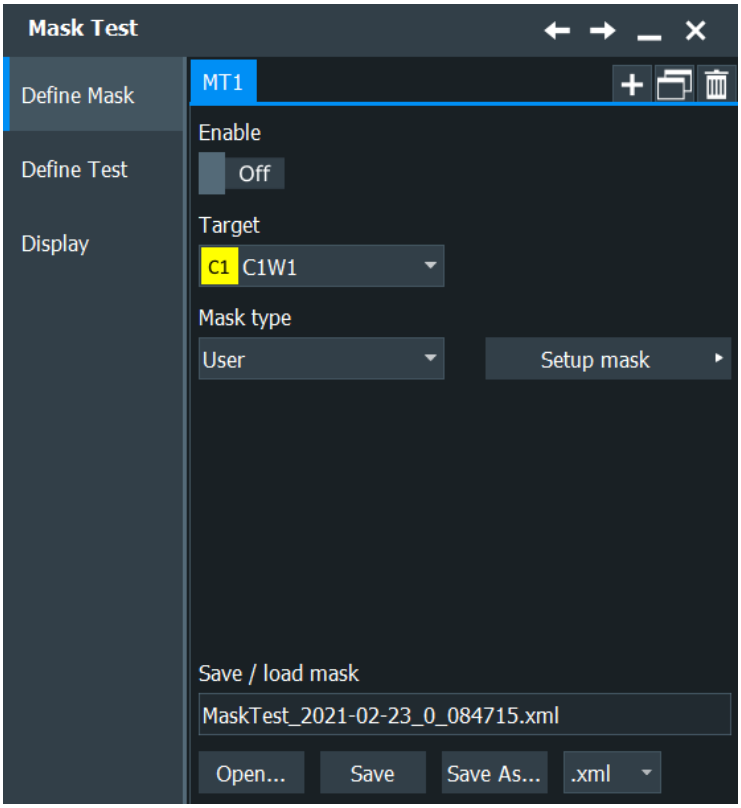

The content of the "Test Definition" tab depends on the selected definition type. If "Waveform" is selected, the main mask settings can be set directly on the "Test Definition" tab. For a description of these settings, see Section 10.2.2.2, "Mask definition: waveform mask", on page 443.

Make sure that the correct "Mask Test" tab is selected on the left side before you enter the settings.

Remote commands:

MTESt:ADD on page 1708

MTESt:REMove on page 1708

Enable
Activates and deactivates the mask test. If the acquisition is running, the test starts immediately. Otherwise, the test starts when acquisition is started.

The testing is stopped when acquisition is stopped, or if a stop action is configured with "Stop acq." on page 448.

Closing the result box also disables the mask test.

Remote command:
MTESt[:STATe] on page 1708

Target
Selects the waveform to be tested against the mask. All channel waveforms can be tested.

Remote command:
MTESt:SOURce on page 1709

Mask Type
Sets the method of mask definition.

"User"	The mask is created manually by tapping the mask points on the touch screen and/or by entering the numerical x- and y-values of the mask points.
"Waveform"	The mask is created from an existing waveform. The waveform builds the upper and lower limit line of the mask, and the limits are moved and stretched. The result is a tolerance tube around the waveform that is used as mask.
"Eye"	Requires jitter option R&S RTP-K12. The mask is created by selecting the shape and setting its dimensions according to the test standard.

Remote command:
MTESt:CTYPe on page 1710

Setup mask
Opens a dialog for defining the mask. See Section 10.2.2, "Mask definition", on page 440.

Save / load mask
Provides all functions to store and recall a mask test. The mask definition, defined actions and fail conditions are stored in an R&S RTP-specific .xml file.

"Open" Opens a dialog box where you can select the file name.
See also: Section 12.6, "File selection dialog", on page 529.

"Save, Save As" Stores the specified file.

Remote command:
MTESt:FILE:NAME on page 1711
MTESt:FILE:SAVE on page 1711
MTESt:FILE:OPEN on page 1711
MTESt:FILE:DELete on page 1712


10.2.2 Mask definition

With mask definition, you define the shape of the mask - the form and position of its limit lines. The content of the "Mask Definition" tab depends on the selected Mask Type: "User" or "Waveform".

Below, you find the specific settings:


10.2.2.1 Mask definition: user mask

Access: [Apps] > "Analysis" tab > "Define Mask" > "Mask Type" = "User" > "Setup mask"

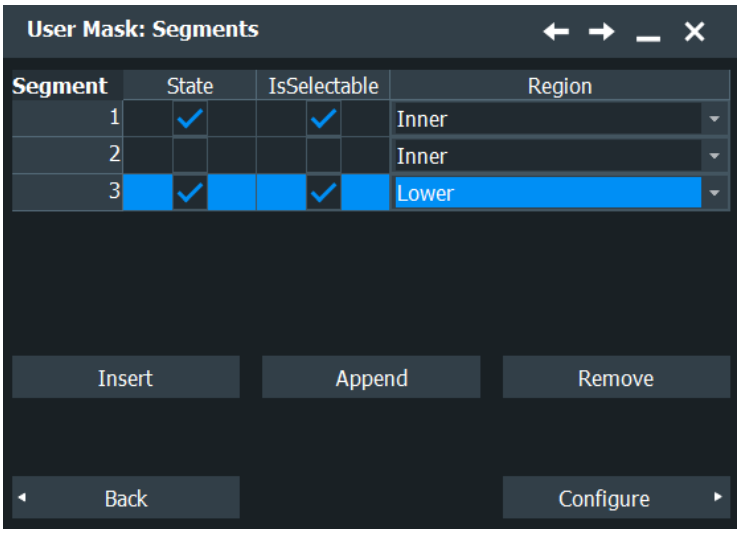

A user mask is defined by entering the time and voltage values for all corner points of the mask segments. A user mask has at least one segment. Complex masks can have up to 16 segments.

An inner segment is an area defined by three or more points. Upper and lower segments limit the signal on top and bottom of the screen. They are defined by a line, the region above or below the line is set automatically as mask segment.

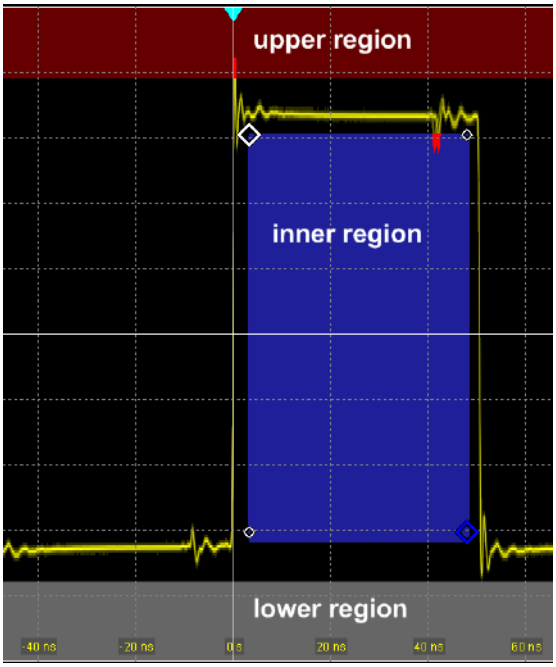

Alternatively, you can set the corner points on the touch screen and adjust the values in the "Mask Definition" tab.

To save the mask, select the "Define Mask" tab and save the mask test.

Make sure that the correct "Mask Test" tab is selected on the left side before you enter the settings.

Mask segments
Defines the number and state of mask segments for the selected mask test. Here you can:

- Insert a new segment before the selected segment.
- Append a new segment at the end of the list.
- Remove the selected mask segment from the list.
- Select the region that builds the mask.
  - Inner region: the segment points form a closed geometrical shape, which is the mask segment.
  - Upper region: the segment points are connected to a line, the display area above this line is the mask segment.
  - Lower region: the segment points are connected to a line, the display area below this line is the mask segment.
- Enable and disable the mask segments individually. Disabled segments are not considered by running tests.

Remote command:
`MTESt:SEGMent:STATe` on page 1713
`MTESt:SEGMent:ADD` on page 1713
`MTESt:SEGMent:REMove` on page 1714
`MTESt:SEGMent:INSert` on page 1713

MTESt:SEGMent:REGion on page 1714
MTESt:SEGMent:COUNt? on page 1713

Configure
Opens a dialog to define the selected segment.



Definition of segment
The number of the selected segment is shown above the table. In the definition table, the individual points of the selected mask segment are listed with exact horizontal and vertical numerical coordinates. Here you can:

- Insert a new point before the selected point.
- Append a new point at the end of the list.
- Remove the selected point from the list.
- Change the x- and y-values of each point. To scale or move the complete segment, use offset and factor values, see Rescale.

Remote command:
MTESt:SEGMent:POINt:ADD on page 1715
MTESt:SEGMent:POINt:REMove on page 1715
MTESt:SEGMent:POINt:INSert on page 1715
MTESt:SEGMent:POINt:X on page 1716
MTESt:SEGMent:POINt:Y on page 1716
MTESt:SEGMent:POINt:COUNt? on page 1716

Rescale
You can rescale and move mask segments by numerical input of factors and offsets.

The values change the selected mask segment and take effect on "Apply".

Offset X ← Rescale
Moves the mask segment horizontally. The specified offset is added to the x-values of all points of the selected mask segment.

To take effect, tap "Apply".

Remote command:
`MTESt:SEGMent:RESCale:XOFFset` on page 1717

Factor X ← Rescale
Stretches or compresses the selected mask segment in horizontal direction. The x-values of all points of the selected mask segment are multiplied with this factor. Factors >1 stretch the mask segment, while factors between 0 and 1 compress it. Negative values are possible and change the algebraic sign.

To take effect, tap "Apply".

Remote command:
`MTESt:SEGMent:RESCale:XFACtor` on page 1717

Offset Y ← Rescale
Moves the mask segment vertically. The specified offset is added to the y-values of all points of the selected mask segment.

To take effect, tap "Apply".

Remote command:
`MTESt:SEGMent:RESCale:YOFFset` on page 1718

Factor Y ← Rescale
Stretches or compresses the selected mask segment in vertical direction. The y-values of all points of the selected mask segment are multiplied with this factor. Factors >1 stretch the mask segment, while factors between 0 and 1 compress it. Negative values are possible and change the algebraic sign.

To take effect, tap "Apply".


Remote command:
`MTESt:SEGMent:RESCale:YFACtor` on page 1717

Apply ← Rescale
Multiplies and adds the given x- and y-factors and offsets to the coordinates of all points of the selected mask segment.

Remote command:
`MTESt:SEGMent:RESCale:RECalculate` on page 1717

10.2.2.2 Mask definition: waveform mask

Access: [Apps] > "Analysis" tab > "Define Mask" > "Mask Type" = "Waveform" > "Setup mask"

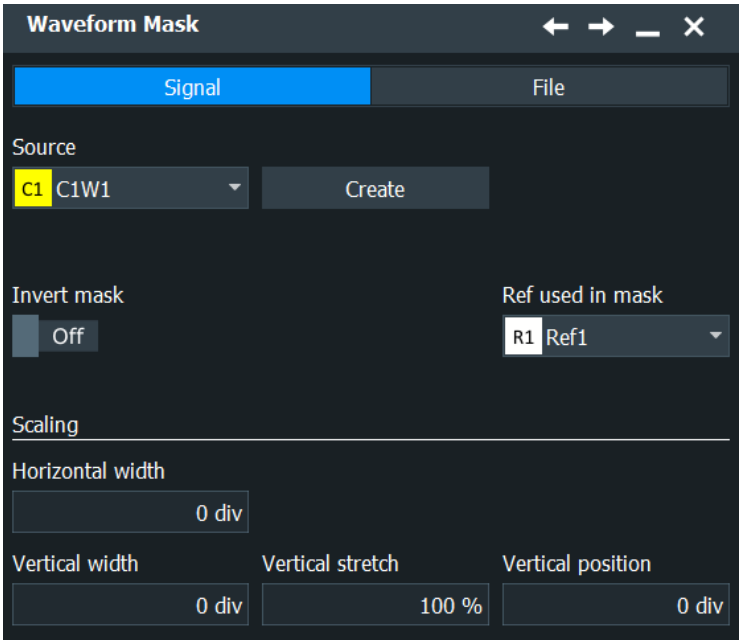

A waveform mask is created from an existing waveform. The waveform builds the upper and lower limit line of the mask, and the limits are moved and stretched. The result is a tolerance tube around the waveform that is used as mask.

During mask testing using a waveform mask, the record length is limited to 1 MSample.

The source for a waveform mask is a reference waveform. The reference waveform can be defined before mask definition, or loaded from a file, or it is created from the waveform to be tested.

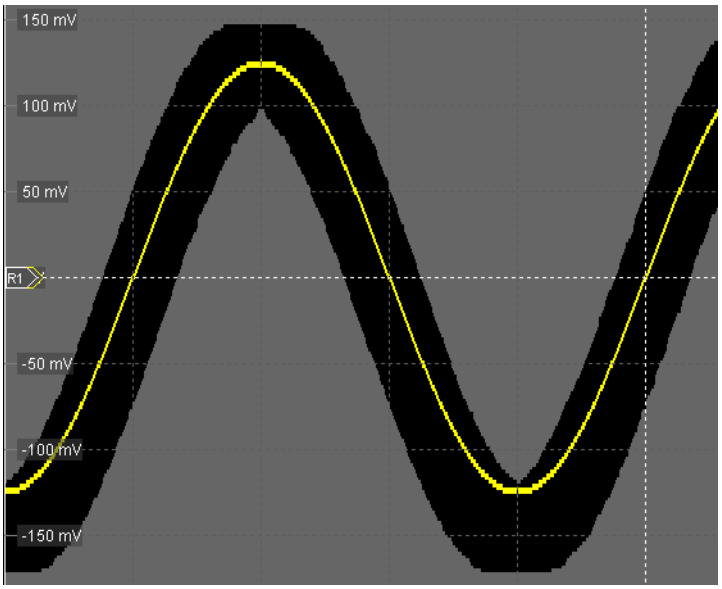


Figure 10-1: Waveform mask

Signal
The reference waveform is created from the selected "Source".

Sets the reference waveform from which the mask is created.

Create ← Signal
Creates the upper and lower mask limit from the "Source" and "Ref used in mark". If the reference waveform was not defined before, it is created automatically from the mask test "Source" waveform.

File
Loads the waveform from the selected file to the "Reference" and creates the mask immediately.

Invert mask
If enabled, the area inside the mask is highlighted, which the signal must not exit. If disabled, the area outside the mask limits is highlighted.

Horizontal width
Sets the width of the mask in horizontal direction. The specified number of divisions is added to the positive x-values and subtracted from the negative x-values of the mask limits in relation to the source waveform of the mask. The overall mask width is twice the specified horizontal width.

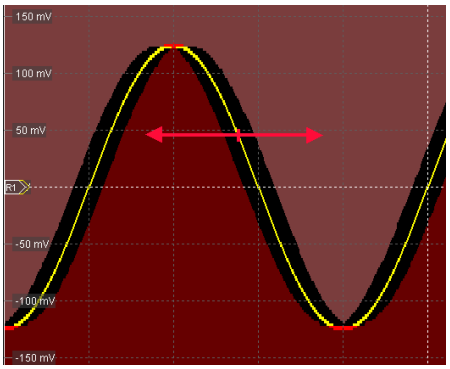


Figure 10-2: Waveform mask with horizontal width = 0.2 div

Remote command:
`MTESt:WFMRescale:XWIDth` on page 1719

Vertical width
Sets the width of the waveform mask in vertical direction. The specified number of divisions is added to the y-values of the upper mask limit and subtracted from the y-values of the lower mask limit. Thus, the upper half of the mask is pulled upwards, the lower half is pulled down, and the overall height of the mask is twice the vertical width.

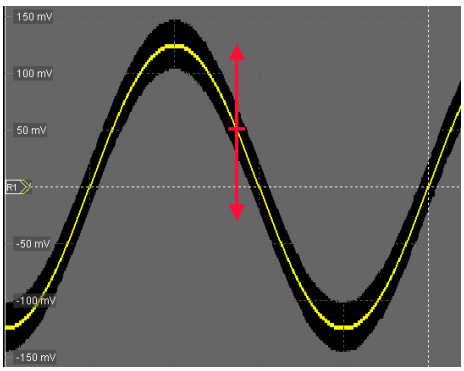


Figure 10-3: Waveform mask with vertical width = 0.5 div

Remote command:
MTESt:WFMRescale:YWIDth on page 1720

Vertical stretch
Sets the vertical scaling to stretch the mask in y-direction. The scaling axis is the horizontal line through the lowest value of the lower mask limit. Values > 100% stretch the mask, and values < 100% compress it.

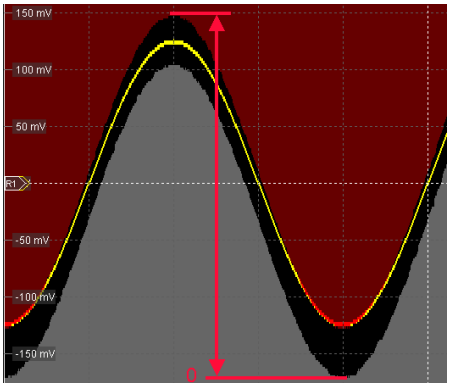


Figure 10-4: Waveform mask with vertical width = 0.5 div, vertical position = -0.5 div, vertical stretch = 110%

Remote command:
MTESt:WFMRescale:YSTRetch on page 1720

Vertical position
Moves the mask vertically within the display.


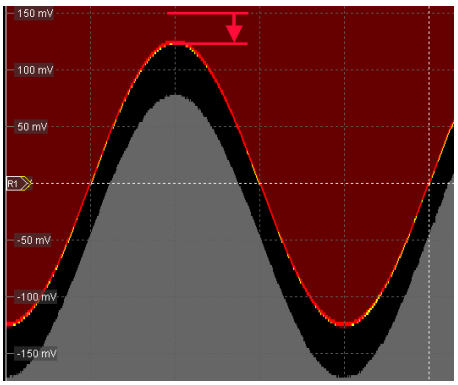


Figure 10-5: Waveform mask with vertical width = 0.5 div and vertical position = -0.5 div

Remote command:
`MTESt:WFMRescale:YPOSition` on page 1720

10.2.3 Define Test

Access: [Apps] > "Analysis" tab > "Mask" > "Define Test"

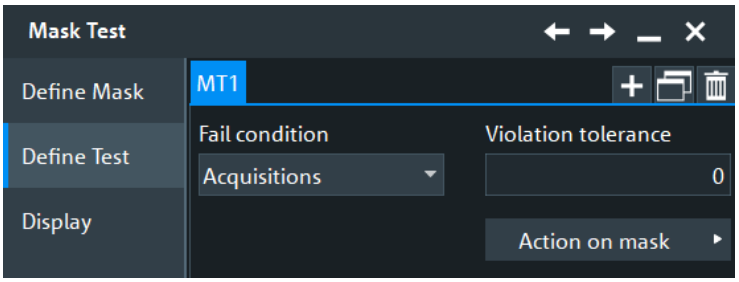

There are two usual test practices:

- Testing a defined number of waveforms against the mask and initiate an action when the acquisition cycle has been completed without failure:
  - Set the number of acquisitions to be tested: "Average count (N-single count)"
  - Start [Single]
- Testing a continuous acquisition or a defined number of waveforms against the mask and initiate an action when the fail criteria is fulfilled.

Make sure that the correct mask test tab is selected before you enter the settings.

Fail condition, Violation tolerance
The fail criteria for a mask test is set by two parameters: "Fail condition" and "Violation tolerance".

"Fail condition" defines the kind of hits to be considered for test evaluation:

- "Samples": Considers the number of samples that hit the mask.

- "Acquisitions": Considers the number of acquisitions that contain at least one sample hit. How many samples hit the mask in that acquisition is not relevant.

"Violation tolerance" sets the number of tolerable sample hits or acquisition hits.


A test has failed if the number of sample hits or acquisition hits exceeds the limit of violation tolerance hits.

Remote command:
`MTESt:CONDition` on page 1710
`MTESt:TOLerance` on page 1710

Action on mask
The settings in this dialog define what happens when the mask test has failed or when it has passed successfully.

Most actions can be initiated either on failure or on success:

- On violation
  The action is initiated when the fail criteria is fulfilled.
- On successful completion
  The action is initiated when the [Single] acquisition has finished and the fail criteria is not fulfilled - the fail condition and violation tolerance limit have not been reached.

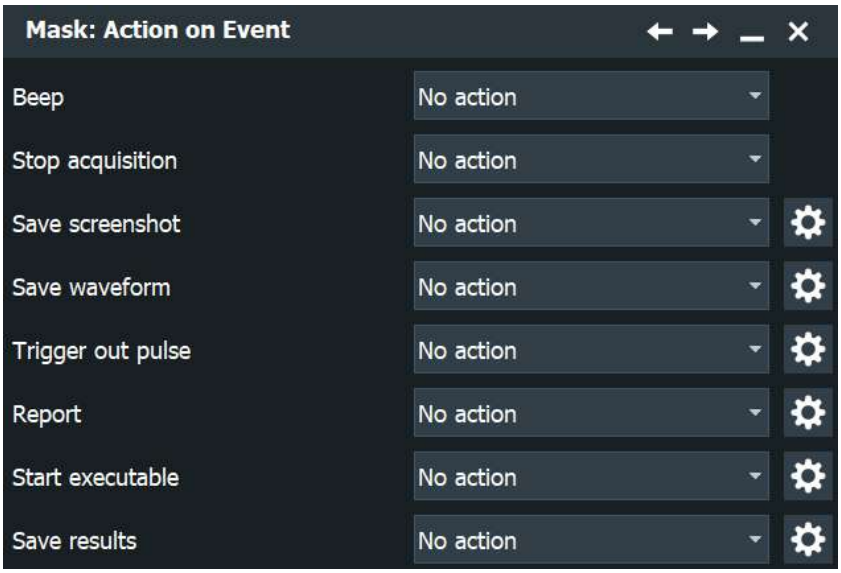

Beep ← Action on mask
Generates a beep sound.

Remote command:
`MTESt:ONViolation:BEEP` on page 1721

Stop acq. ← Action on mask
Stops the waveform acquisition on mask violation.

Remote command:
`MTESt:ONViolation:STOP` on page 1721

Save screenshot ← Action on mask
Saves a screenshot including the mask test results according to settings in "Menu" > "Save/Recall" > "Save" tab > "Screenshot".

Remote command:
`MTESt:ONViolation:PRINt` on page 1722

Save waveform ← Action on mask
Saves the waveform data to a file according to settings in "Menu" > "Save/Recall" > "Save" tab > "Waveforms".

Remote command:
`MTESt:ONViolation:SAVewaveform` on page 1722

Trigger out pulse ← Action on mask
Sends a pulse to the [Trigger Out] connector on the rear panel.

You can adjust the pulse by tapping the settings icon, see "Trigger out signal setup" on page 237.

Remote command:
`MTESt:ONViolation:TRIGgerout` on page 1723

Report ← Action on mask
Creates and saves a report using the settings.

Remote command:
`MTESt:ONViolation:REPort` on page 1722

Start Executable ← Action on mask
Starts an external application. Tap "Config Executable" to set the application path and parameters.

Remote command:
`MTESt:ONViolation:RUNexec` on page 1723


Save results
Starts the export of selected results to file. Tap "Select results" to choose the results for export from a list of available results. The R&S RTP can export cursor results, measurement results, mask test results, search results, decode results of serial protocols, advanced jitter/noise results.

See Section 12.3.4, "Results", on page 514 for measurement selection and settings.

Remote command:
`MTESt:ONViolation:RESSave` on page 1723

10.2.4 Mask display

Access: [Apps] > "Analysis" tab > "Mask" > "Display".

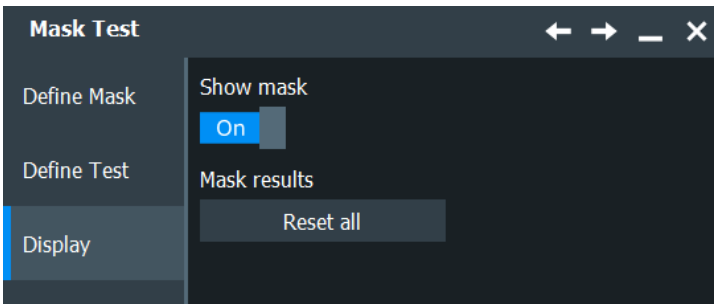

In this dialog, you can reset the mask results and display the mask.

Show mask
Switches the display of all mask segments on or off.

Remote command:
`MTESt:SHOW` on page 1709

Mask results > Reset all
Clears all totals and results in all "Mask Test" result boxes.

Remote command:
`MTESt:RST` on page 1709

10.2.5 Mask appearance

You can define additional mask appearance settings in the "Settings" > "Appearance" > "Mask" dialog.

See Section 4.3.10, "Mask appearance settings", on page 91

10.3 Mask testing on eye diagrams

To perform mask testing on eye diagrams, the option R&S RTP-K12 adds a special mask definition type to the common mask definitions: the definition type "Eye".

Using the "Eye" mask type, you can easily define eye masks of various shapes. You can also use "User" masks to define free mask shapes.

10.3.1 Results of mask tests on advanced eye diagrams

If option R&S RTP-K136/K137 is installed, you can perform mask tests on advanced eye diagrams Eye1 to Eye4. The R&S RTP tests each waveform slice that contributes to the eye against the mask. The test results are listed in the mask test result box. Some results differ from the usual mask test results.

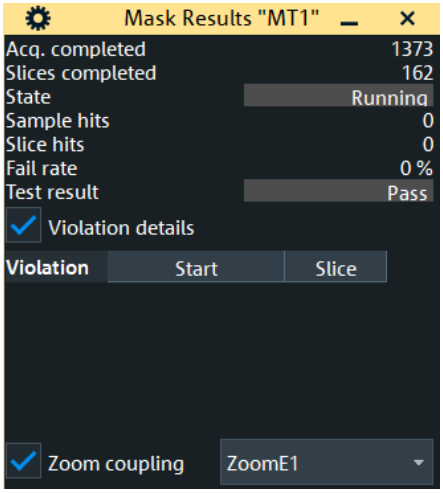


Figure 10-6: Mask test results of eye testing

Slices completed = Number of slices that contributed to the eye diagram
Sample hits = Number of samples that hit the mask
Slice hits = Number of violated slices
Violation details = Shows the table with violations of the last acquisition
Zoom coupling = Shows the selected violation in an existing zoom diagram

All other results are the same as in normal mask tests, see Section 10.1.1, "Results of a mask test", on page 436.

Remote commands are described in Section 26.24.7, "Results of mask tests on eye diagrams", on page 2767.

To analyze mask violation details

Prerequisites: The advanced eye diagram is defined, and the eye mask is configured.

1. Press [Run / Stop] to run the acquisition and the mask test on the advanced eye diagram.
2. Stop the mask test. You can also use the event action "Stop acq." = "On violation".
3. Create a zoom on the data waveform.
4. In the mask test result box, enable "Violation details".

   All violated segments are listed under "Violation".
5. In the mask test result box, enable "Zoom coupling". The function is available if at least one zoom diagram is active.
6. If you have several zooms, select the zoom that you want to couple.
7. In the "Violation details" table, tap a line.

   The zoom area is moved to the violated slice, and you can see the signal details in the zoom diagram.

10.3.2 Test definition for eye mask tests

Access: [Apps] > "Analysis" tab > "Define Mask" tab


1. Select the "Source": the channel waveform that is analyzed for jitter.
2. Select the "Mask Type" = "Eye".
3. In the "Define Test" tab, adjust the "Fail condition" and "Violation tolerance".
4. Define the eye mask. See Section 10.3.3, "Eye mask definition", on page 452.

The general mask test settings are described in Section 10.2, "Mask test settings", on page 438.

10.3.3 Eye mask definition

Access: [Apps] > "Analysis" tab > "Define Mask" > "Mask Type" = "Eye" > "Setup mask"

The "Eye Mask" dialog provides all settings to define masks of different shapes. It is available if option R&S RTP-K12 is activated on the instrument.

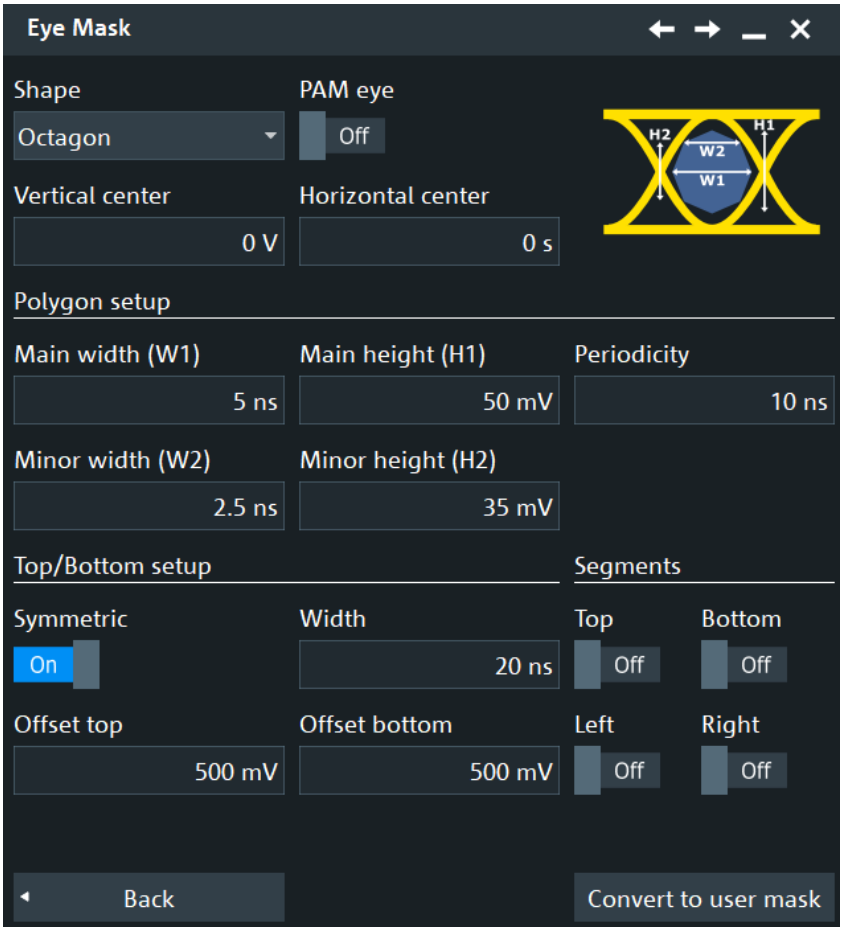

Shape
Defines the outline of the eye mask: square, diamond, hexagon, octagon or ellipse.

Remote command:
MTESt:EYEMask:TYPE on page 1727

PAM eye
Enable if a PAM-N signal is used for the mask.

Remote command:
MTESt:EYEMask:PAMNeye on page 1731

Vertical data to ref. level
Sets the vertical delta to the reference level for a PAM-N signal eye.

Remote command:
MTESt:EYEMask:REFDelta on page 1731

Horizontal center/Vertical center
Set the horizontal (time) and vertical (voltage) values of the eye shape enter and thus define the position of the eye shape on the display.

Remote command:
MTESt:EYEMask:HPOSition on page 1730
MTESt:EYEMask:VPOSition on page 1730

Main width (W1), Minor width (W2)
Main width defines the width of all eye mask shapes. Minor width defines the secondary width for hexagon and octagon mask shapes.

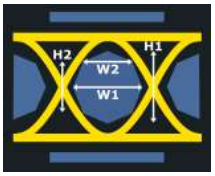


Figure 10-7: Main and minor widths and heights of an octagon eye mask

Remote command:
MTESt:EYEMask:WIDTh<m>[:VALue] on page 1728

Main height (H1), Minor height (H2)
Main height defines the height of all eye mask shapes. Minor height defines the secondary height for octagon mask shapes.

If an octagon shape is selected, and both values are the same, the eye masks looks like a hexagon rather than an octagon.

Remote command:
MTESt:EYEMask:HEIGht<m>[:VALue] on page 1727

Periodicity
Sets the time distance between the shape centers.

Remote command:
MTESt:EYEMask:HPERiod on page 1728

Top/Bottom setup
Defines the settings for the top and bottom segments of the mask. You have to enable "Top" / "Bottom" for this settings to be relevant.

Symmetric ← Top/Bottom setup
Sets bottom and top offsets to the same value so that the outer regions are symmetric to the eye shape.

Remote command:
MTESt:EYEMask:TBSYmmetric on page 1729

Width ← Top/Bottom setup
Sets the time width of the outer regions, symmetric to the eye shape center.

Remote command:
MTESt:EYEMask:TBWidth on page 1730

Offset top, Offset bottom ← Top/Bottom setup
Sets the voltage distance from the eye shape center that limits the upper and lower regions.

Remote command:
MTESt:EYEMask:BOFFset on page 1729
MTESt:EYEMask:TOFFset on page 1729

Segments
Enable the different regions of the mask: "Top", "Bottom", "Left", "Right".

The icons copy the eye shape to the left and to the right.

Remote command:
MTESt:EYEMask:MSKBottom on page 1729
MTESt:EYEMask:MSKTop on page 1729
MTESt:EYEMask:MSKLeft on page 1728
MTESt:EYEMask:MSKRight on page 1728

Convert to user mask
Converts the test and mask definitions of the current mask test to a new mask test of type "User".

The new test is opened in a separate mask test tab, in the "Define Mask" tab.

This is useful, for example, if want to run variants of a mask test in parallel.

Remote command:
MTESt:CEMask on page 1727

10.4 Working with masks

This chapter explains step-by-step how mask tests are setup and preformed. For the explanation of the individual settings, see Section 10.2, "Mask test settings", on page 438.

- Setting up user masks....455
- Setting up a mask test....460
- Configuring the mask and hit display....460
- Running a mask test....461
- Saving and loading masks....461
- Mask testing on history acquisitions....462

10.4.1 Setting up user masks

10.4.1.1 Creating user masks

There are two ways to create a new mask:

- Graphical way by tapping the mask points on the touchscreen,
- Numerical entry of the x- and y-values of the mask points.

You can combine both methods. For example, at first you enter the mask quickly on the touchscreen, and then modify the point coordinates with precise values.

To create a mask graphically on the touch screen

1. Tap the "Masks" icon on the toolbar.

   The "Masks" overlay menu opens.

2. Tap the corner points of the mask segment on the touch screen.

   Tip: To create an exact rectangle, draw the diagonal of the rectangle on the screen.

3. Tap "Finish segment".

   Now you can enter another segment to the current mask test or add a new mask test.

4. To finish the mask definition, close the overlay menu.
   If the acquisition is running, the mask test starts automatically and immediately.

To create a mask numerically in the dialog box

The settings mentioned here are described in detail in Section 10.2.1, "Define mask", on page 438.

1. Open [Apps] > "Analysis" tab > "Mask" > "Define Mask" tab.
2. Create a mask test:
   a) Tap the "+"-icon in the upper right corner.
   b) Enter a name for the new mask test.

   A new, empty tab for the mask test appears.
3. Set "Mask type"= "User".
4. Tap "Setup mask".
5. In the "User Mask: Segments" area, tap "Insert" to create a new mask segment.
6. Set the corner points of the mask segment:
   a) Select the "Segment".
   b) Tap "Configure". The "User Mask: Points" dialog opens.
   c) In the "Definition of segment" area, tap "Insert".
      Point 1 appears.
   d) Tap the X-cell and enter the X-value of the point.
   e) Tap the Y-cell and enter the Y-value of the point.
   f) To insert the next point:
      - Tap "Insert" to add a point before the selected point.
      - Tap "Append" to add a point at the end of the list.
   g) Set the X- and Y-values for this point.
   h) Repeat the last two steps until you define all points.
7. In the "Define Mask" tab, tap "Enable".
8. Adjust the horizontal and vertical units if necessary.

10.4.1.2 Modifying user masks

To change an existing mask definition, you can also use the graphical method on the touch screen, or the numerical way, or combine both.

With the graphical method, you can:

- Move, add, and delete segments
- Move and delete points

Adding points to an existing segment graphically is not possible.

With the numerical method, in the "Define Mask" tab, you have all modification possibilities. You can delete and add points and segments, change the coordinates, and also stretch a segment, or move it by adding an offset.

To add a mask segment on the touch screen

1. Tap a mask segment of the mask test that you want to complement.

2. Tap the "Masks" icon on the toolbar.



3. Tap the corner points of the new mask segment on the touch screen.
4. To finish the segment and mask definition, double-tap the last point.

To delete a mask segment on the touch screen

1. On the toolbar, tap the "Delete" icon.



2. Tap the mask segment you want to delete.

To delete a point on the touch screen

1. Tap the mask segment from which you want to delete a point.

   The selected segment is now in definition mode, shown with blue color.
2. On the toolbar, tap the "Delete" icon.



   The "Delete" overlay menu opens.
3. Tap the point you want to delete.

To move a segment on the touch screen

1. Drag&drop the segment to the new position.
2. Tap outside the mask to deselect the mask segment.

To move a point on the touch screen

1. Tap the mask segment that you want to change.
2. Drag&drop the point to the new position.
3. Tap outside the mask to deselect the mask segment.


To change the mask definition numerically

The settings mentioned here are described in detail in Section 10.2.2, "Mask definition", on page 440.

1. Open [Apps] > "Analysis" tab > "Mask" > "Define Mask".
2. At the top, select the mask test for which you want to change the mask definition.
3. To add or delete a mask segment, tap "Setup mask".


Tap the segment's row in the "User Mask: Segments" table and tap the required button below:

- "Insert": to add a new segment before the selected segment.
- "Append": to add a new segment at the end of the list.
- "Remove": to delete the selected mask segment from the list.

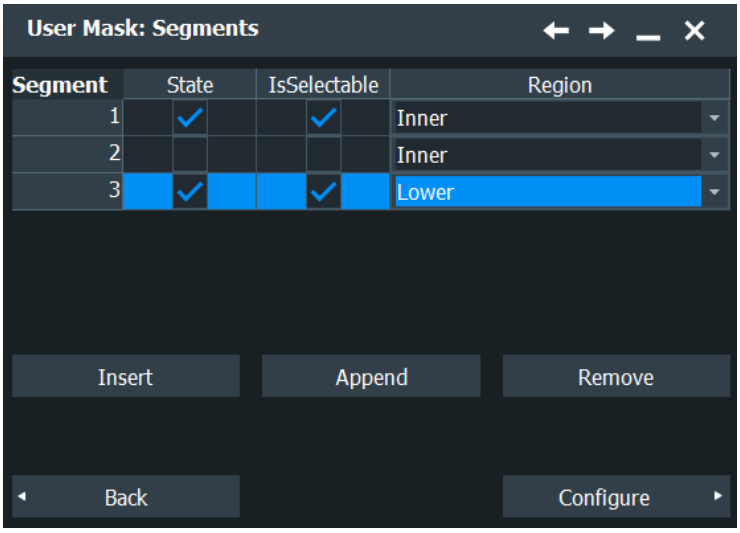

4. To add, delete, or move a point of a segment:
   a) Select the segment in the "User Mask: Segments" table.
   b) Tap "Configure".
   c) Select the point in the "Definition of segment" table.
   d) To add or delete the selected point, use the buttons below the table.
      - "Insert": to add a new point before the selected point.
      - "Append": to add a new point at the end of the list.
      - "Remove": to delete the selected point from the list.

e) To move the selected point, change the X- and Y-values.

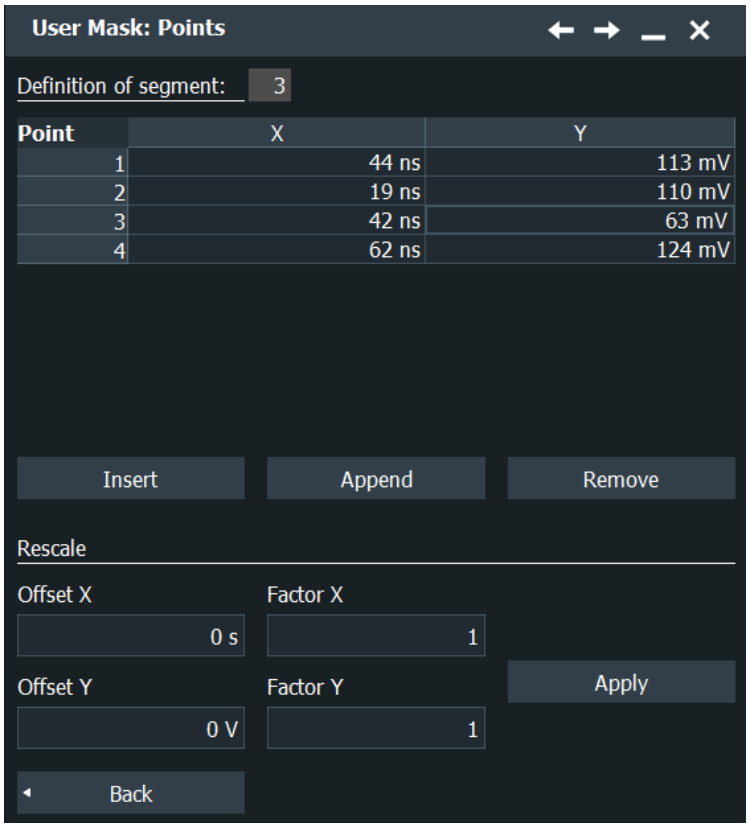

To rescale and move a mask segment

The settings mentioned here are described in detail in Section 10.2.2, "Mask definition", on page 440.

1. Open [Apps] > "Analysis" tab > "Mask" > "Define Mask".
2. At the top, select the mask test for which you want to change the mask definition.
3. Tap "Setup mask" and select the required segment in the "User Mask: Segments" table.
4. Tap "Configure".
5. To stretch or compress the selected mask segment, enter the "Factor X" for horizontal scaling and the "Factor Y" for vertical scaling. The x-values and y-values of all points are multiplied with the corresponding factor. Factors >1 stretch the mask segment, while factors between 0 and 1 compress it. Negative values are possible and change the algebraic sign.
6. To move the selected mask segment, enter the "Offset X" for horizontal direction and the "Offset Y" for vertical direction. The specified offset is added to the corresponding values of all points.
7. Tap "Apply" to perform the scaling and/or move.

10.4.2 Setting up a mask test

In addition to the mask definition, the mask test contains further settings:

- The waveform to be tested
- The criteria for a failed test
- The actions to be taken if a test has failed or has been completed successfully

1. Open [Apps] > "Analysis" tab > "Mask" > "Define Mask" tab.
2. Select the "Target" to be tested.
3. Select the "Define Test" tab.
4. Set the conditions for a failed test:
   a) " Fail condition": select if sample hits or the number of acquisitions with sample hits are considered.
   b) "Violation tolerance": number of tolerable sample hits or acquisition hits.

   A test has failed if the number of sample hits or acquisition hits exceeds the limit of violation tolerance hits.
5. Tap "Action on mask".
6. For each action, select when the action will be executed:
   - "On violation" if the mask test has failed
   - "On successful completion"

10.4.3 Configuring the mask and hit display

The display of masks and mask violation is the same for all mask tests .

The settings mentioned here are described in detail in Section 10.2.3, "Define Test", on page 447.

1. Open [Apps] > "Analysis" tab > "Mask".
2. Select the "Display" tab.
3. Select "Show mask" to display the masks of all enabled mask tests on the screen.
4. Open "Menu" > "Settings" >"Appearance" dialog.
5. Select the "Mask" tab.
6. Define how the sample hits are displayed:
   a) Select "Show hits" to display the sample hits.
   b) Set the "Show for" time or "Show hits forever".
   c) Set the "Color" of the sample hits.
7. Define the color of the masks segments depending on the violation state:
   - Mask without violation
   - Mask with violation

- Mask with contact: this color shows that the edge of the mask segment was touched. In this case, the resolution is not sufficient to detect if the mask was really hit or not. Zoom into the concerned area to see the correct result.

10.4.4 Running a mask test

Before you can start a mask test, make sure that the mask setup is complete:

- The mask is defined, see Section 10.4.1.1, "Creating user masks", on page 455 and Section 10.4.1.2, "Modifying user masks", on page 456.
- The mask test is defined, see Section 10.4.2, "Setting up a mask test", on page 460
- The mask display is configured, see Section 10.4.3, "Configuring the mask and hit display", on page 460.

You can perform continuous testing or test a specified number of acquisitions.

1. Open [Apps] > "Analysis" tab > "Mask" > "Define Mask" tab.
2. Select "Enable".

   If the acquisition is running, the test starts immediately.
3. If the acquisition is not running, press [Run / Stop].

   The test starts and runs until you stop the acquisition or the stop action is executed if defined.

10.4.5 Saving and loading masks

Mask test definitions remain on the instrument until they are changed or deleted, or [Preset] is performed. If you want to keep a mask test, you can save and reload them.

To save a mask

1. Open [Apps] > "Analysis" tab > "Mask" > "Define Mask" tab.
2. To save the mask file in the current directory, change the file name if needed, and tap "Save".
   You can use the automatic file name generation, see Section 4.8.1, "Autonaming", on page 108.
3. To select the directory and enter the file name, tap "Save As".

To load a mask

1. Tap "Open".
2. Select the file from the file selection dialog box.

10.4.6 Mask testing on history acquisitions

In the same way as for running acquisitions, you can set up and perform the mask testing also on history waveforms.

The requirements for mask testing on history waveforms are also the same:

- The mask is defined, see Section 10.4.1.1, "Creating user masks", on page 455 and Section 10.4.1.2, "Modifying user masks", on page 456.
- The mask test is defined, see Section 10.4.2, "Setting up a mask test", on page 460
- The mask display is configured, see Section 10.4.3, "Configuring the mask and hit display", on page 460.

1. Perform and finish the acquisition.
2. Press [History].
3. In the quick-access "History" dialog box, tap "Play".

   The mask testing is performed on the complete history memory, starting with the oldest acquisition. The state of the mask test is set to "Finished" when "Nx Single count" acquisitions are tested.

For details on history, see Section 7.5.1, "About history", on page 311.

11 Search functions

Search functions allow you to detect and analyze specific events in the acquired data quickly and simply. You can search in various waveforms for several events at once. The search area can be limited by a gate.

The events that can be searched for are basically the same events you can trigger on. Thus, the search parameters are defined in the same way as the trigger conditions. The results are displayed in a result box and optionally shown in a zoom window.

11.1 Overview: search definition and results

11.1.1 Search definition

You can define up to 8 different searches and let them run simultaneously. For each search, you define the criteria, the parameters of each criterion, the gate, and the result display.

The instrument keeps the settings until the next preset. If you save a user-defined preset, the search settings are included in the preset.

Each search is configured in a separate tab and contains:

- *Search control*
  If you enable a search and run an acquisition, the search is performed continuously on the acquired data until acquisition is stopped.
  If acquisition is stopped and you enable a search, the data of the last acquisition is searched.
  Enabling the search zoom window disables the search, stops a running acquisition, and displays the search results of the last acquisition in the zoom window.
- *Source*
  Waveform that is searched for one or more events. You can search in analog and digital signals, math or reference waveforms, and tracks. Furthermore, search in decoded data of serial buses is possible.
  Search on differential signals and their input channels is not supported.
- *Search criteria and parameters*
  Various search criteria are available, depending on the source. Most parameters known from trigger event definition can also be configured as search conditions. Unlike triggering, you can configure several event types to be searched for simultaneously.
  If the source is an FFT spectrum, you can perform a frequency marker search by using the cursor measurement and defining the peak excursion. See Section 8.1.3.3, "Peak Search tab", on page 330.
- *Search gate*
  Searches can be performed on the entire waveform, or only on a defined area (gate). The gate can be coupled to an existing zoom.

Gating is not available for searches on digital signals and serial buses.

- *Result presentation*
  For each search, you define how the search results are displayed: in a result table and/or in a search zoom window.

Remote commands:

- `SEARch:ADD` on page 1733
- `SEARch:REMove` on page 1733


11.1.2 Search results

The results are displayed in a "Search Results" box and optionally in a zoom window.

Search results box

The results of each search are tabulated in a "Search Results" box.

If you search for several event types in parallel, the results are presented in several tabs - one for each search event and one for the combined results. Each tab contains a table with the position and, if available, further parameters for each result. The tables row can be sorted, and you can define a maximum number of table entries in the "Result Presentation" dialog box. As with all result boxes, you can minimize it, display it like a diagram, and define the default position.

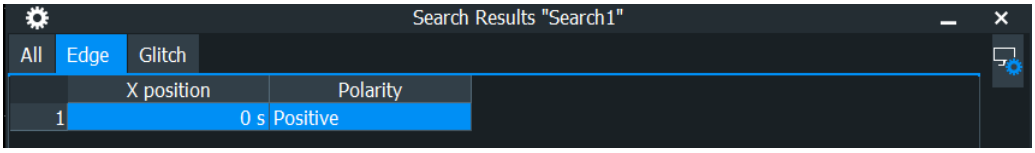

If "Auto clear" is enabled in the "Display" dialog box, the instrument displays the search results of the last acquisition. If "Auto clear" is disabled, the first result of each acquisition is listed until the maximum number of entries in the table is reached.


Remote commands for result query:

- `SEARch:RESult[:ALL]?` on page 1773

11.2 Search setup

Access: "Menu" > "Apps" > "Analysis" tab > "Search"

The search setup includes the source selection, the selection of search events (criteria), event-specific search conditions, and search control.

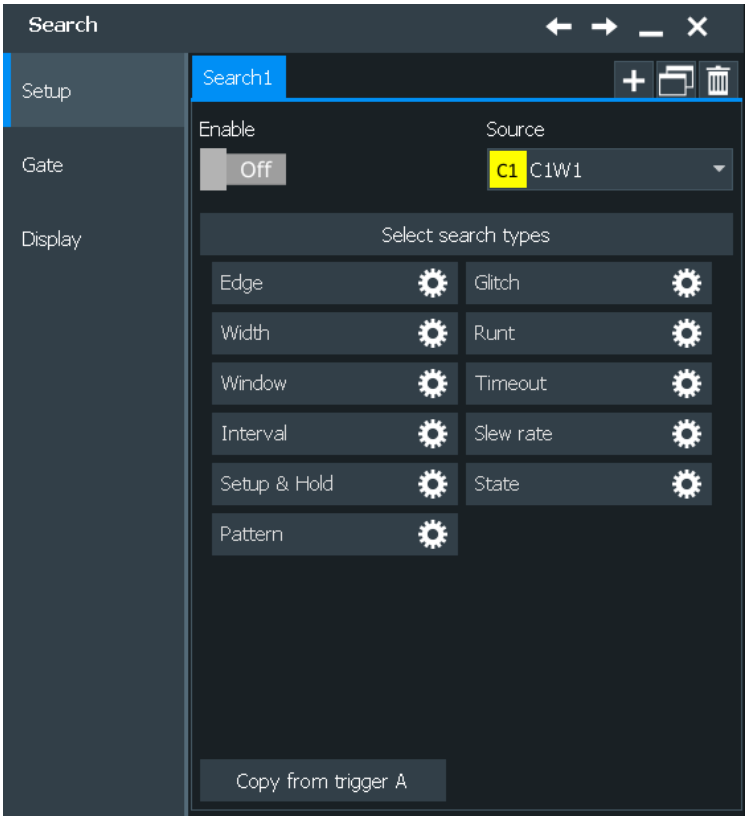

11.2.1 Search criteria

Access: "Menu" > "Apps" > "Analysis" tab > "Search" > "Setup" tab

Enable
If you enable a search and run an acquisition, the search is performed continuously on the acquired data until acquisition is stopped.

If acquisition is stopped and you enable a search, the data of the last acquisition is searched.

Remote command:
`SEARch:ONLine` on page 1734
`SEARch:ALL` on page 1734

Source
Defines the waveform to be searched. The source can be any analog and digital input signal, math or reference waveform, or track. While the instrument triggers only on real input signals, it can search also calculated and restored waveforms.

If the source is an FFT spectrum, you can perform a frequency marker search by using the cursor measurement and defining the peak excursion. See Section 8.1.3.3, "Peak Search tab", on page 330.

For some serial protocol options, search on a serial bus is available. For details, see the relevant chapters of the "Protocol Analysis" chapter.

Depending on the selected source, different search criteria are available.

Remote command:
SEARch:SOURce on page 1733

Edge, Glitch, Width, Runt, Window, Timeout, Interval, Slew rate, Setup & Hold, State, Pattern
Search criteria for analog and digital input signals, math and reference waveforms, and tracks. For searching on digital channels, only "Edge", "Width", "Timeout" and "Setup & Hold" criteria are available.

Tap the icon to include or exclude the search criteria in the next search. You can enable several event types for simultaneous search.

Remote command:
SEARch:TRIGger:EDGE[:STATe] on page 1735
SEARch:TRIGger:GLITch[:STATe] on page 1735
SEARch:TRIGger:WIDTh[:STATe] on page 1736
SEARch:TRIGger:RUNT[:STATe] on page 1736
SEARch:TRIGger:WINDow[:STATe] on page 1736
SEARch:TRIGger:TIMeout[:STATe] on page 1736
SEARch:TRIGger:INTerval[:STATe] on page 1735
SEARch:TRIGger:SLEWrate[:STATe] on page 1736
SEARch:TRIGger:SETHold[:STATe] on page 1736
SEARch:TRIGger:STATe[:STATe] on page 1736
SEARch:TRIGger:PATTern[:STATe] on page 1735

Copy from trigger A'
Copies the trigger type-specific settings from the A-trigger configuration to the search settings. The source itself is not copied.

Remote command:
SEARch:TRIGger:EDGE:ACOPy on page 1737
SEARch:TRIGger:GLITch:ACOPy on page 1737
SEARch:TRIGger:WINDow:ACOPy on page 1737
SEARch:TRIGger:WIDTh:ACOPy on page 1737
SEARch:TRIGger:RUNT:ACOPy on page 1737
SEARch:TRIGger:WINDow:ACOPy on page 1737
SEARch:TRIGger:TIMeout:ACOPy on page 1737
SEARch:TRIGger:INTerval:ACOPy on page 1737
SEARch:TRIGger:SLEWrate:ACOPy on page 1737
SEARch:TRIGger:SETHold:ACOPy on page 1737
SEARch:TRIGger:STATe:ACOPy on page 1737
SEARch:TRIGger:PATTern:ACOPy on page 1737

11.2.2 Search parameters

Most parameters available for trigger event definition can also be configured as search conditions. Each event type is defined in a separate subtab.


If the source is a spectrum, the instrument performs a frequency marker search.

For serial protocol options, search on a serial bus is available. These searches have protocol-specific search criteria. For details, see the relevant chapters of the "Protocol Analysis" chapter.

- Edge....467
- Glitch....468
- Width....468
- Runt....469
- Window....470
- Timeout....471
- Interval....472
- Slew rate....473
- Setup & Hold....474
- State....476
- Pattern....476

11.2.2.1 Edge

The edge search works the same way as the edge trigger.

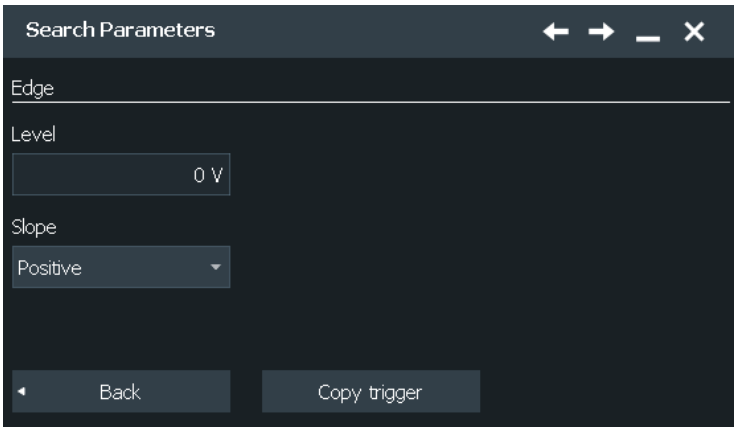

Slope
Sets the edge type: rising edge ("Positive"), falling edge ("Negative"), or both.

Remote command:
`SEARch:TRIGger:EDGE:SLOPe` on page 1737


Level
Sets the voltage level for trigger search. The value is used for all search event types that require one trigger level. The search trigger level is search-specific, you can define different levels in different searches for the same event.

Remote command:
`SEARch:TRIGger:LEVel[:VALue]` on page 1736

11.2.2.2 Glitch

The glitch search works the same way as the glitch trigger. To apply the trigger settings to search, tap Copy from trigger A'.

The glitch search is not available if the search source is a digital channel.

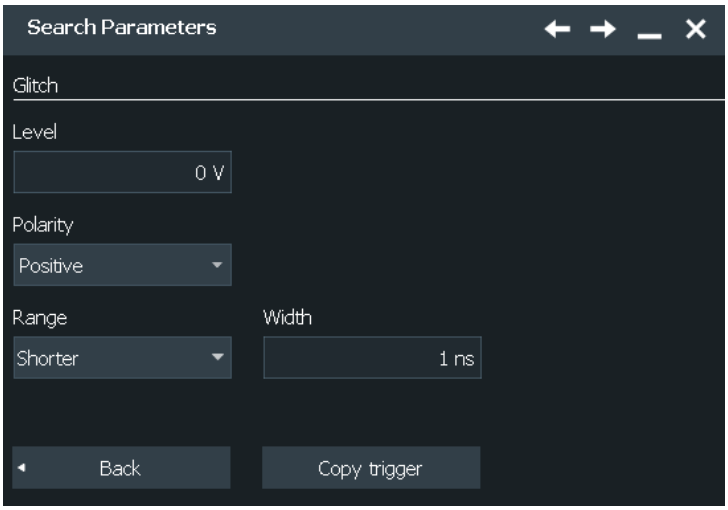

Polarity, Range, Width
See trigger settings:
- "Range" on page 206
- "Width" on page 206
- "Polarity" on page 206


Remote command:
`SEARch:TRIGger:GLITch:POLarity` on page 1738
`SEARch:TRIGger:GLITch:RANGe` on page 1738
`SEARch:TRIGger:GLITch:WIDTh` on page 1738

Level
Sets the voltage level for trigger search. The value is used for all search event types that require one trigger level. The search trigger level is search-specific, you can define different levels in different searches for the same event.

Remote command:
`SEARch:TRIGger:LEVel[:VALue]` on page 1736

11.2.2.3 Width

The width search works the same way as the width trigger. To apply the trigger settings to search, tap Copy from trigger A'.

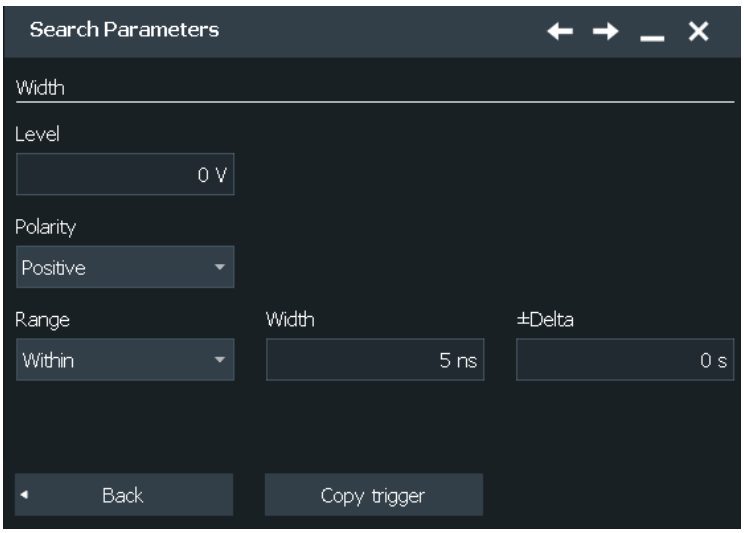

Polarity, Range, Width, ±Delta
See trigger settings:

- "Polarity" on page 207
  While the width trigger can only analyze positive *or* negative polarity, searching for a width is also possible for both polarities at the same time ("Either").
- "Range" on page 208
- "Width" on page 208
- "±Delta" on page 208

Remote command:
`SEARch:TRIGger:WIDTh:POLarity` on page 1747
`SEARch:TRIGger:WIDTh:RANGe` on page 1747
`SEARch:TRIGger:WIDTh:WIDTh` on page 1748
`SEARch:TRIGger:WIDTh:DELTa` on page 1747


Level
Sets the voltage level for trigger search. The value is used for all search event types that require one trigger level. The search trigger level is search-specific, you can define different levels in different searches for the same event.

Remote command:
`SEARch:TRIGger:LEVel[:VALue]` on page 1736

11.2.2.4 Runt

The runt search settings are the same as the runt trigger settings. To apply the trigger settings to search, tap Copy from trigger A'.

The runt search is not available, if the search source is a digital channel.

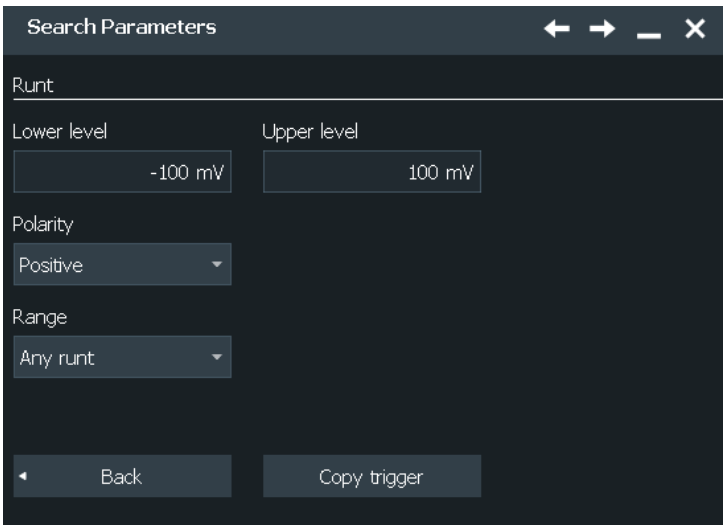

Polarity, Range, Runt width, ±Delta
Time limit for the runt, see trigger settings:

- "Polarity" on page 206
- "Range" on page 209
- "Runt width" on page 210
- "±Delta" on page 210

Remote command:
`SEARch:TRIGger:RUNT:POLarity` on page 1741
`SEARch:TRIGger:RUNT:RANGe` on page 1741
`SEARch:TRIGger:RUNT:WIDTh` on page 1742
`SEARch:TRIGger:RUNT:DELTa` on page 1741


Upper level, Lower level
Set the upper and lower voltage thresholds. The amplitude of a runt crosses the first threshold twice in succession without crossing the second one.

Remote command:
`SEARch:TRIGger:LEVel:RUNT:UPPer` on page 1742
`SEARch:TRIGger:LEVel:RUNT:LOWer` on page 1742

11.2.2.5 Window

The window search settings are the same as the window trigger settings. This search type is not available if the search source is a digital channel. To apply the trigger settings to search, tap Copy from trigger A'.

The window search is not available if the search source is a digital channel.

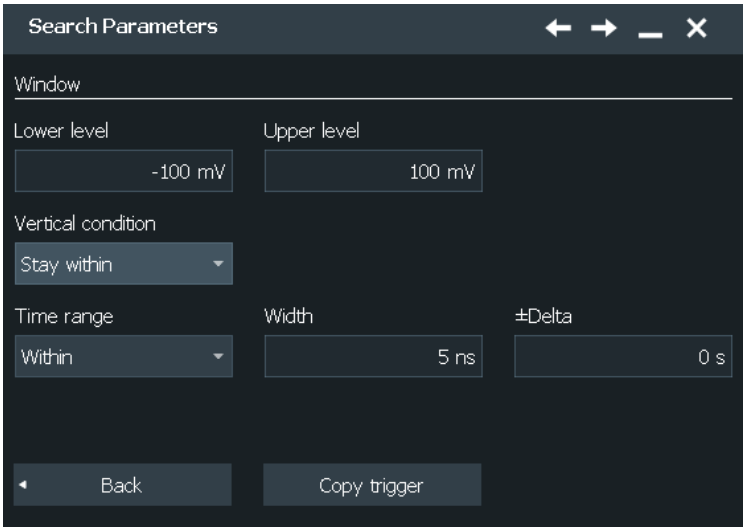

Vertical condition
Defines the run of the signal relative to the window, see "Vertical condition" on page 211.

Remote command:
SEARch:TRIGger:WINDow:RANGe on page 1749

Time condition, Width, ±Delta
Set the time limit for the vertical condition, see:
- "Time condition" on page 211
- "Width" on page 211
- "±Delta" on page 212


Remote command:
SEARch:TRIGger:WINDow:TIMerange on page 1750
SEARch:TRIGger:WINDow:WIDTh on page 1750
SEARch:TRIGger:WINDow:DELTa on page 1749

Upper level, Lower level
Set the upper and lower voltage thresholds. The amplitude of a runt crosses the first threshold twice in succession without crossing the second one.

Remote command:
SEARch:TRIGger:LEVel:WINDow:UPPer on page 1751
SEARch:TRIGger:LEVel:WINDow:LOWer on page 1751

11.2.2.6 Timeout

The timeout search settings are the same as the timeout trigger settings. To apply the trigger settings to search, tap Copy from trigger A'.

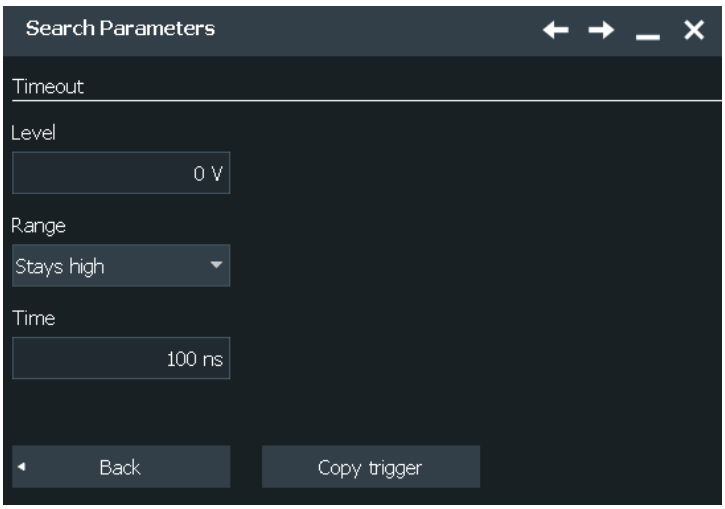

Range, Time
Set the timeout condition, see:
- "Range" on page 212
- "Time" on page 213

Remote command:
`SEARch:TRIGger:TIMeout:RANGe` on page 1746
`SEARch:TRIGger:TIMeout:TIME` on page 1746


Level
Sets the voltage level for trigger search. The value is used for all search event types that require one trigger level. The search trigger level is search-specific, you can define different levels in different searches for the same event.

Remote command:
`SEARch:TRIGger:LEVel[:VALue]` on page 1736

11.2.2.7 Interval

The interval search settings are the same as the interval trigger settings. To apply the trigger settings to search, tap Copy from trigger A'.

The interval search is not available if the search source is a digital channel.

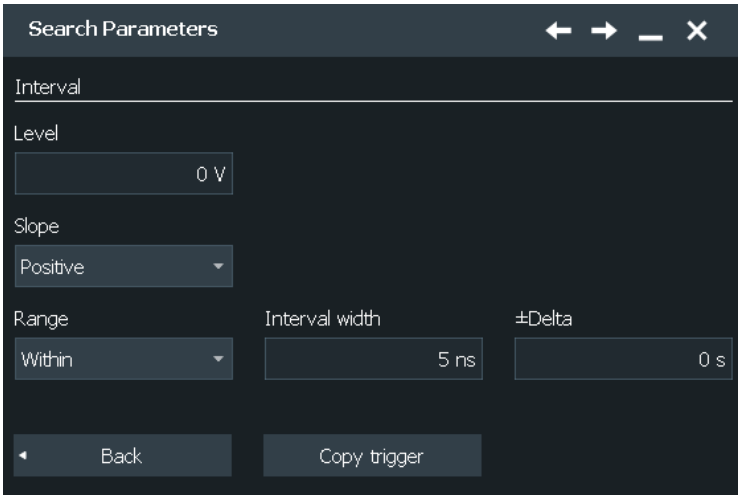

Slope, Range, Interv. width, ±Delta
Set the interval condition, see:

- "Slope" on page 213
  While the interval trigger can only analyze rising or falling edges, searching for a width is possible for both edges at the same time ("Either").
- "Range" on page 213
- "Interv. width" on page 214
- "±Delta" on page 214

Remote command:
`SEARch:TRIGger:INTerval:SLOPe` on page 1739
`SEARch:TRIGger:INTerval:RANGe` on page 1740
`SEARch:TRIGger:INTerval:WIDTh` on page 1740
`SEARch:TRIGger:INTerval:DELTa` on page 1739

Level
Sets the voltage level for trigger search. The value is used for all search event types that require one trigger level. The search trigger level is search-specific, you can define different levels in different searches for the same event.

Remote command:
`SEARch:TRIGger:LEVel[:VALue]` on page 1736

11.2.2.8 Slew rate

The slew rate search settings are the same as the slew rate trigger settings. To apply the trigger settings to search, tap Copy from trigger A'.

The slew rate search is not available if the search source is a digital channel.



Polarity, Range, Slew rate, ±Delta

- "Slope" on page 205
- "Range" on page 215
- "Slew rate" on page 216
- "±Delta" on page 216

Remote command:

`SEARch:TRIGger:SLEWrate:SLOPe` on page 1744
`SEARch:TRIGger:SLEWrate:RANGe` on page 1744
`SEARch:TRIGger:SLEWrate:TIME` on page 1744
`SEARch:TRIGger:SLEWrate:DELTa` on page 1743

Upper level, Lower level


Set the upper and lower voltage thresholds. When the signal crosses a level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:

`SEARch:TRIGger:LEVel:TRANsition:UPPer` on page 1745
`SEARch:TRIGger:LEVel:TRANsition:LOWer` on page 1745

11.2.2.9 Setup & Hold

The Setup & Hold search settings are the same as the Setup & Hold trigger settings. To apply the trigger settings to search, tap Copy from trigger A'.

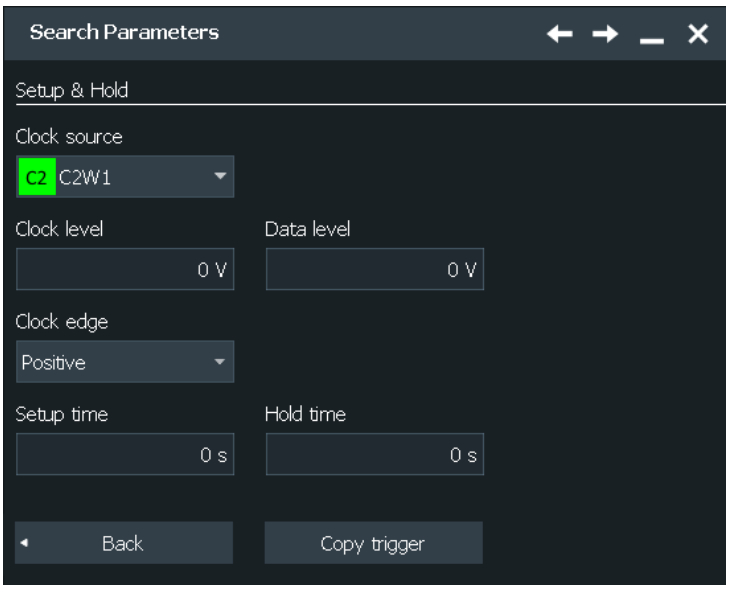

Clock source, Clock edge, Clock level
Set the clock settings. Both "Clock level" and "Clock edge" define the starting point for calculation of the setup and hold time.

Remote command:
`SEARch:TRIGger:SETHold:CSOurce` on page 1752
`SEARch:TRIGger:SETHold:CEDGe` on page 1752
`SEARch:TRIGger:SETHold:CLEVel` on page 1752

Data level
Sets the voltage level for the data signal. At this level, the setup and hold time are measured.

Remote command:
`SEARch:TRIGger:LEVel[:VALue]` on page 1736

Level
Sets the voltage level for trigger search. The value is used for all search event types that require one trigger level. The search trigger level is search-specific, you can define different levels in different searches for the same event.

Remote command:
`SEARch:TRIGger:LEVel[:VALue]` on page 1736


Setup time, Hold time
Sets the minimum time **before** (Setup) and **after** (Hold) the clock edge while the data signal must stay steady above or below the data level.

See also: "Setup time" on page 218 and "Hold time" on page 218.

Remote command:
`SEARch:TRIGger:SETHold:STIMe` on page 1753
`SEARch:TRIGger:SETHold:HTIMe` on page 1753

11.2.2.10 State

The state search is a qualified edge search. The state search is only available for analog channel sources (Ch1 to Ch4).

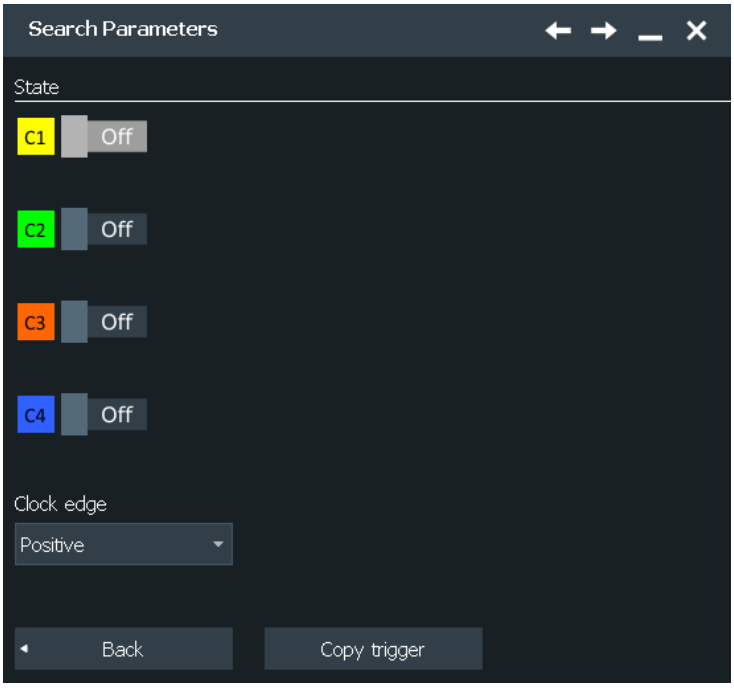

Clock source, Clock edge
Define the clock settings. The clock signal is the waveform to be searched.

Remote command:
`SEARch:TRIGger:STATe:CSOurce` on page 1759
`SEARch:TRIGger:STATe:CEDGe` on page 1759
`SEARch:TRIGger:STATe:CLEVel` on page 1759


State pattern
State settings are the same as for the state trigger.

See also "Pattern" on page 220.

Remote command:
`SEARch:TRIGger:STATe:A[:ENABle]` on page 1760
`SEARch:TRIGger:STATe:A:LOGic` on page 1760
`SEARch:TRIGger:STATe:AB:LOGic` on page 1761
`SEARch:TRIGger:STATe:ABCD:LOGic` on page 1761

11.2.2.11 Pattern

The pattern search combines a logical combination of the input channels with a timing condition. The pattern search is only available for analog channel sources (Ch1 to Ch4).

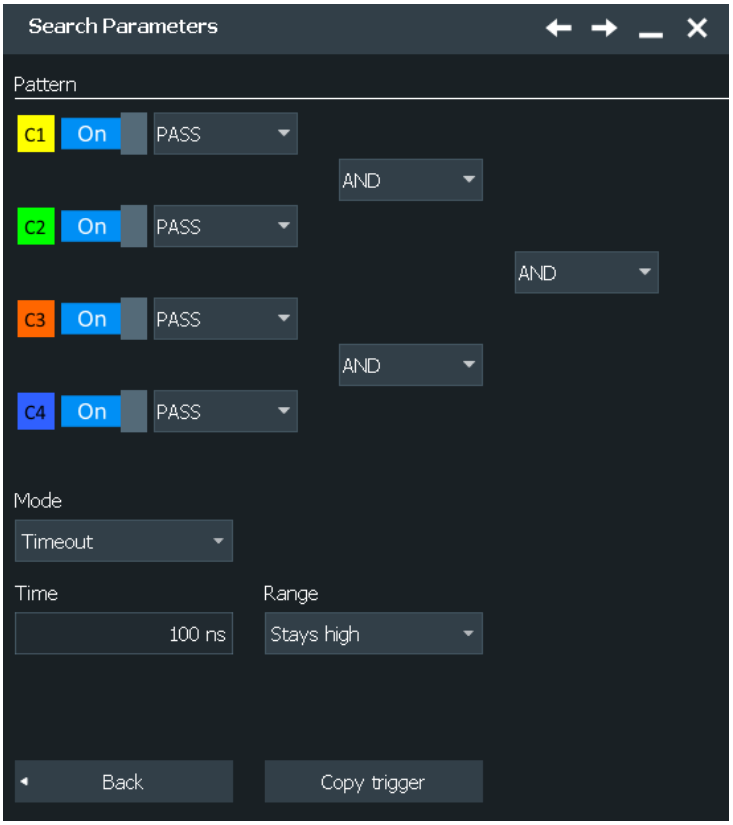

Pattern
Pattern search settings are the same as for the pattern trigger.

See also "Pattern" on page 220.

Remote command:
SEARch:TRIGger:PATTern:A[:ENABle] on page 1754
SEARch:TRIGger:PATTern:A:LOGic on page 1754
SEARch:TRIGger:PATTern:AB:LOGic on page 1755
SEARch:TRIGger:PATTern:ABCD:LOGic on page 1755

Timing condition: Mode, Range, Time, Width, ±Delta
Additional time limitation to the pattern, see "Additional settings: Timing" on page 221.

Remote command:
SEARch:TRIGger:PATTern:MODE on page 1756
SEARch:TRIGger:PATTern:TIMeout:MODE on page 1756
SEARch:TRIGger:PATTern:TIMeout[:TIME] on page 1757
SEARch:TRIGger:PATTern:WIDTh:RANGe on page 1757
SEARch:TRIGger:PATTern:WIDTh[:WIDTh] on page 1757
SEARch:TRIGger:PATTern:WIDTh:DELTa on page 1758

11.2.3 Frequency marker search

When you start a search on a spectrum, a frequency marker search is performed to detect peaks in a spectrum. You can define which peaks the instrument finds by defining the noise reject settings.

Threshold
See "Threshold" on page 331.

Peak excursion
See "Peak excursion" on page 332.

11.2.4 Configuring the search setup

There are several ways to create a search:

- Creating a simple default search using the toolbar icon. This method is not available for search on serial buses.
- Setting up a search using the dialog box.

To perform a simple search

1. If more than one waveform is in the diagram, select the waveform to be searched for by tapping it in the diagram.
2. Select the "Search" icon on the toolbar.

   The overlay menu opens.

3. Tap the diagram with the waveform to be searched, or drag a rectangle on the diagram to define the search area.
4. Alternatively, use the settings provided in the overlay menu.

   The default edge search is configured as "Search<x>" and performed. The "Search Results" box is displayed.

To create a user-defined search

1. Open the search dialog: "Menu" > "Apps" > "Analysis" tab > "Search".
2. There are two ways to create a search:
   - If you want to create a new, unconfigured search, tap the "Add" icon.

   - If you want to create a new search based on an existing one, tap the "Copy" icon.



3. Enter a name for the search using the on-screen keyboard.

To configure a user-defined search

1. Open the search dialog: "Menu" > "Apps" > "Analysis" tab > "Search".
2. Select the "Setup" tab and the search that you want to configure.
3. Select the "Source" on which you want to perform the search.
4. Select the events that you want to include in the search.
5. Define the settings of the first search event.
   To use the same conditions as defined in the trigger configuration of the A-event, tap "Copy from trigger A'". The selected trigger settings are applied to the search settings.
6. Repeat the previous steps to define further events for the same search.
7. To perform the search only on a part of the waveform, configure the gate in the "Gate" tab as described in Section 11.3.2, "Defining the search gate", on page 481.

11.3 Search gate


The gate defines the search area within the source waveform. You can use absolute or relative values to define the gate, or couple it to a previously defined zoom area.

11.3.1 Gate settings

Access: "Menu" > "Apps" > "Analysis" tab > "Search" > "Gate" tab

The gate settings are identical for gating measurements, FFT analysis, and search.

Gating is not available if the search source is a digital channel.

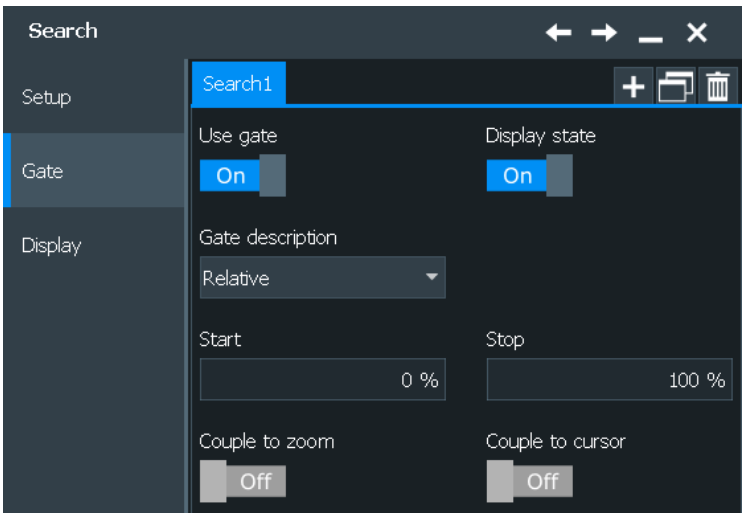

Use gate
Enables the gate settings and shows the gate. Search is only performed on the defined gate area of the source waveform.

Remote command:
`SEARch:GATE[:STATe]` on page 1762

Display state
Displays the gate area in the source diagram.

Remote command:
`SEARch:GATE:SHOW` on page 1763

Gate description
Defines whether the gate settings are configured using absolute or relative values.

"Absolute" The gate is defined by absolute start and stop values.

"Relative" The gate's start and stop values are defined by a percentage of the value range.

Remote command:
`SEARch:GATE:MODE` on page 1762

(Relative) Start
Defines the starting value for the gate.

Remote command:
`CALCulate:MATH<m>:FFT:GATE:ABSolute:STARt` on page 1697
`CALCulate:MATH<m>:FFT:GATE:RELative:STARt` on page 1698
`MEASurement<mg>:GATE:ABSolute:STARt` on page 1669
`MEASurement<mg>:GATE:RELative:STARt` on page 1670
`SEARch:GATE:ABSolute:STARt` on page 1763
`SEARch:GATE:RELative:STARt` on page 1764

(Relative) Stop
Defines the end value for the gate.

Remote command:
CALCulate:MATH<m>:FFT:GATE:ABSolute:STOP on page 1697
CALCulate:MATH<m>:FFT:GATE:RELative:STOP on page 1698
MEASurement<mg>:GATE:ABSolute:STOP on page 1669
MEASurement<mg>:GATE:RELative:STOP on page 1670
SEARch:GATE:ABSolute:STOP on page 1763
SEARch:GATE:RELative:STOP on page 1764

Zoom
Zoom coupling is available if a zoom is defined. As long as "Zoom coupling" is enabled, the gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well.

If several zoom diagrams are defined, select the zoom diagram to be used for gating. The "Start" and "Stop" values of the gate are adjusted accordingly.

Zoom coupling can be set for measurement gates, FFT gates, and search gates. The zoom must be defined on the diagram that contains the signal source of the measurement, FFT, or search.

Remote command:
MEASurement<mg>:GATE:ZCOupling on page 1671
MEASurement<mg>:GATE:ZDIagram on page 1671
CALCulate:MATH<m>:FFT:GATE:ZCOupling on page 1699
SEARch:GATE:ZCOupling on page 1764
SEARch:GATE:ZDIagram on page 1765

Couple to cursor
If enabled, the gate area is defined by the cursor lines of an active cursor measurement.

If several cursor measurements are enabled, select the cursor set to be used for gating. The "Start" and "Stop" values of the gate are adjusted to the values of the cursor line positions. The search is limited to the part of the waveform between the cursor lines.

11.3.2 Defining the search gate

If you create a search using the "Search" toolbar icon, you can directly define the gate by dragging a rectangle on the diagram. Otherwise, you define the gate in the "Gate" tab of the "Search" dialog box.

1. Open the "Menu" > "Apps" > "Analysis" tab > "Search" > "Gate" tab.
2. Select the search for which you want to define the gate.
3. Use one of the following methods:
   a) Set the absolute or relative "Gate description" . Enter the start and stop values of the gate area.

b) If a zoom area has already been defined for the waveform, couple the gate area to the zoom area by selecting the "Couple to zoom" option. If several zoom diagrams are defined, select the zoom diagram you want to use for gating.


4. Tap "Use gate" to enable the gate.
5. Optionally, tap "Display state" to display the gate area in the diagram.

11.4 Search display presentation

Search results are displayed in a table in the "Search Results" box. In addition, a zoom window for a selected search result can be displayed so that you can analyze the result in more detail.

11.4.1 Search display settings

Access: "Menu" > "Apps" > "Analysis" tab > "Search" > "Display"

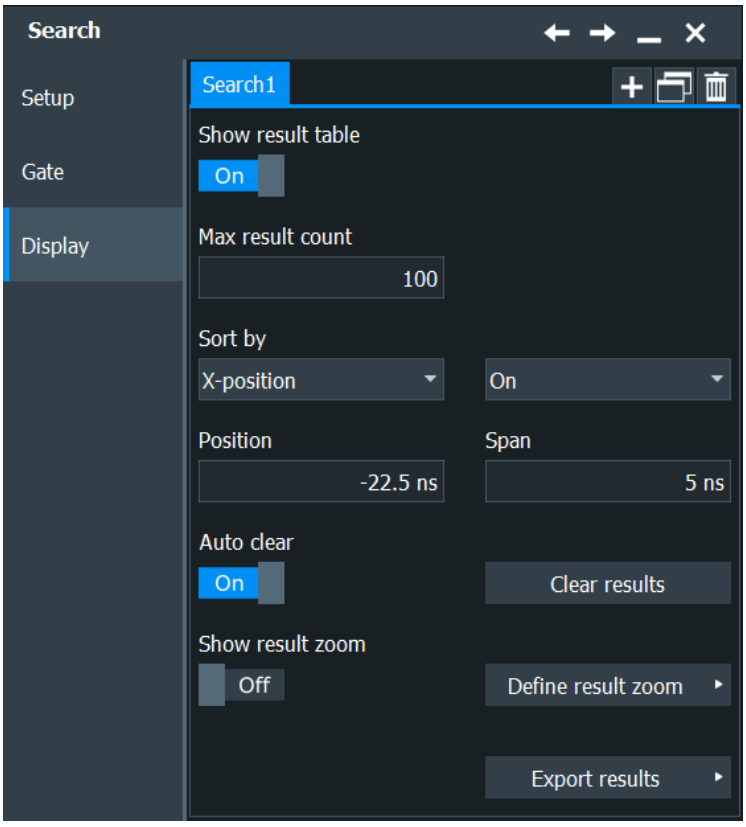

The following settings configure the layout of the result table in the "Search Results" box and the size and position of the search zoom window. The result tables can be sorted by x-position or value. You can define a maximum number of table entries.

Show result table
Displays or hides the search result table.

Remote command:
SEARch:RESult:SHOW on page 1772

Max result count
Defines the maximum number of entries in the search result table.

Remote command:
SEARch:RESult:LIMit on page 1771

Sort by
Sorts the search results by x-value position or value of the result.

Remote command:
SEARch:RESult:SORT[:MODE] on page 1772

Sort ascending
By default, the results are listed in descending order, i.e. the largest value at the top. To change the sorting direction, enable "Sort ascending".

Remote command:
SEARch:RESult:SORT:ASCending on page 1772

Clear results
Clears the search results once and starts a new search.

Remote command:
SEARch:CLEar on page 1733

Auto clear
If "Auto clear" is enabled, the instrument displays the search results of the last acquisition.

If "Auto clear" is disabled, the first result of each acquisition is listed until the maximum number of entries in the table is reached.

Show result zoom
If enabled, a zoom window is displayed for the currently selected search result. The zoom area is indicated in the diagram that displays the source waveform of the search.

Remote command:
SEARch:RESDiagram:SHOW on page 1769

Define result zoom
Opens a dialog to define the reult zoom display settings.


See Section 11.4.2, "Display zoom settings", on page 484.

Export results
Opens a dialog to define the export reults.

See Section 12.3.4, "Results", on page 514.

11.4.2 Display zoom settings

You can display a zoom window for the currently selected search result. The zoom area is indicated in the diagram that displays the source waveform of the search.

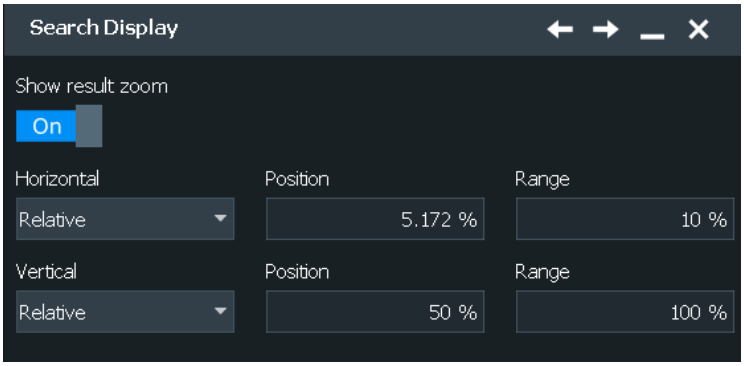

Show result zoom
If enabled, a zoom window is displayed for the currently selected search result. The zoom area is indicated in the diagram that displays the source waveform of the search.

Remote command:
`SEARch:RESDiagram:SHOW` on page 1769

Y mode
Defines whether absolute or relative values are used to specify the y-axis values.

Remote command:
`LAYout:ZOOM:VERTical:MODE` on page 1548
`SEARch:RESDiagram:VERT:MODE` on page 1770

Y position
Defines the y-value of the centerpoint of the zoom area.

Remote command:
`LAYout:ZOOM:VERTical:ABSolute:POSition` on page 1548
`LAYout:ZOOM:VERTical:RELative:POSition` on page 1550
`SEARch:RESDiagram:VERT:ABSolute:POSition` on page 1770
`SEARch:RESDiagram:VERT:RELative:POSition` on page 1770

Y range
Defines the height of the zoom area.

Remote command:
`LAYout:ZOOM:VERTical:RELative:SPAN` on page 1550
`LAYout:ZOOM:VERTical:ABSolute:SPAN` on page 1549
`SEARch:RESDiagram:VERT:ABSolute:SPAN` on page 1770
`SEARch:RESDiagram:VERT:RELative:SPAN` on page 1771

X mode
Defines whether absolute or relative values are used to specify the x-axis values.

Remote command:
LAYout:ZOOM:HORZ:MODE on page 1544
SEARch:RESDiagram:HORZ:MODE on page 1768

X position
Defines the x-value of the centerpoint of the zoom area.

Remote command:
LAYout:ZOOM:HORZ:ABSolute:POSition on page 1545
LAYout:ZOOM:HORZ:RELative:POSition on page 1546
SEARch:RESDiagram:HORZ:ABSolute:POSition on page 1768
SEARch:RESDiagram:HORZ:RELative:POSition on page 1769

X range
Defines the width of the zoom area.

Remote command:
LAYout:ZOOM:HORZ:ABSolute:SPAN on page 1545
LAYout:ZOOM:HORZ:RELative:SPAN on page 1547
SEARch:RESDiagram:HORZ:ABSolute:SPAN on page 1768
SEARch:RESDiagram:HORZ:RELative:SPAN on page 1769

11.4.3 Configuring the search results presentation

Initially, the "Search Results" box is displayed in front of the other diagrams or as result icon on the signal bar. This depends on the default setting in the "Diagram Layout" tab. Alternatively, you can display it in its own area on the screen, like any other diagram.

For details, see Section 3.3.7, "Displaying results", on page 63.

To configure the result tables

1. Open the search dialog: "Menu" > "Apps" > "Analysis" tab > "Search".
2. Select the tab for the search you want to configure.
3. Select the "Display" tab.
4. Select "Show result table" to display the "Search Results" box.
5. Select the sort mode of the result table.
6. By default, the results are listed in descending order, i.e. the largest value at the top. To change the sorting direction, enable "Sort ascending".
7. Define a maximum number of results to be displayed in the result table in the "Max. result count" field.

To display search zoom windows

1. In the "Search > Display" tab, enable "Show result zoom".

   This stops a running search and a running acquisition.

The zoom area is indicated in the diagram that displays the source waveform of the search. The zoom window is displayed for the first result that was found.

2. If you need to adjust the search zoom area, you can drag the area or their edges on the screen. You can also enter the limits of the search zoom window in the "Search > Display > Define result zoom".
   Be aware, that the zoom window size is valid for all results of a search definition. If you change the settings drastically for one result, they may not be correct for the next search result you switch to.

   See also:
   - Section 7.1.3, "Zooming for details", on page 272

12 Data and file management

This chapter describes how to manage instrument settings, and measurement results like waveform data, numeric results and screenshots.

The "Save/Recall" dialog provides functions for saving and restoring data on the instrument. A naming pattern is available and can be adjusted to simplify a clear data storage.

The effect of the [Camera] key can be configured to save screenshots or reports.

- Accessing, retrieving and handling data 487
- Save and recall user settings 488
- Save and recall waveform data and results 497
- Screenshots 522
- Reports 527
- File selection dialog 529
- Video raster analysis (option R&S RTP-K129) 530

12.1 Accessing, retrieving and handling data

Depending on the origin and content, this description distinguishes between the following data types:

- Operational data
- Non-operational data

Operational data (data for intended use)

The R&S RTP uses and creates this data because of its intended use and according to the settings and configuration you have made. Thus, this data makes up most of the data that the R&S RTP creates, such as user files that contain user-defined configurations or data, like instrument settings or measurement data.

You can access, retrieve and delete user files, see:

- Section 12.2, "Save and recall user settings", on page 488
- Section 12.3, "Save and recall waveform data and results", on page 497
- Section 12.5, "Reports", on page 527

Non-operational data (usage data)

The R&S RTP creates this data during and through its use. Such data is collected e.g. for troubleshooting, to help our customer support center find solutions quickly.

The R&S RTP does not generate this data continuously and in real-time; this data is saved on the product. You can store the data on a remote server, for example via a network connection.

The R&S RTP generates the following data:

- Software and firmware update data

- Diagnostic and troubleshooting data
- Environmental conditions

Only when you create a service report, this data is stored in a ZIP file, see Section 27.4, "Information for technical support", on page 2864. The ZIP file contains files in TXT, XML, and CSV format, as well as binary database formats for the diagnostic and troubleshooting data. The file size varies depending on instrument usage and whether the service report includes waveform files, typically ranging from approximately 2 GB (without waveforms) to 8 GB (with waveforms).

The following data is generated only if you have purchased and activated the Health and Utilization Monitoring Service (HUMS):

- Hardware component metadata.
  To access and retrieve this data, see also Section 25.3.2.4, "Health & Utilization (option R&S RTPK980)", on page 1298 and the R&S Health and Utilization Monitoring Service user manual, available on the Rohde & Schwarz internet.

The Windows operating system generates the following data during its use:

- User and authentication data
- Security and access control
- Network and communication data

These data are managed by Windows. You can access the data via the operating system, using the standard R&S RTP user account "Instrument", see also "Log on as" on page 76.

For additional information on the different memory types of your product and on how to protect sensitive data, see Section 27.5, "Data security", on page 2865.

12.2 Save and recall user settings

To repeat measurements at different times or perform similar measurements with different test data, it is useful to save the used instrument settings and load them again later. Furthermore, it can be helpful to refer to the instrument settings of a particular measurement when analyzing the results. Therefore, you can easily save the instrument settings of a measurement. In addition to the measurement-related settings, user-specific display settings and active reference waveforms can also be saved and loaded.

Access: "Menu" key > "Save/Recall" key > "Save" tab > "User settings"

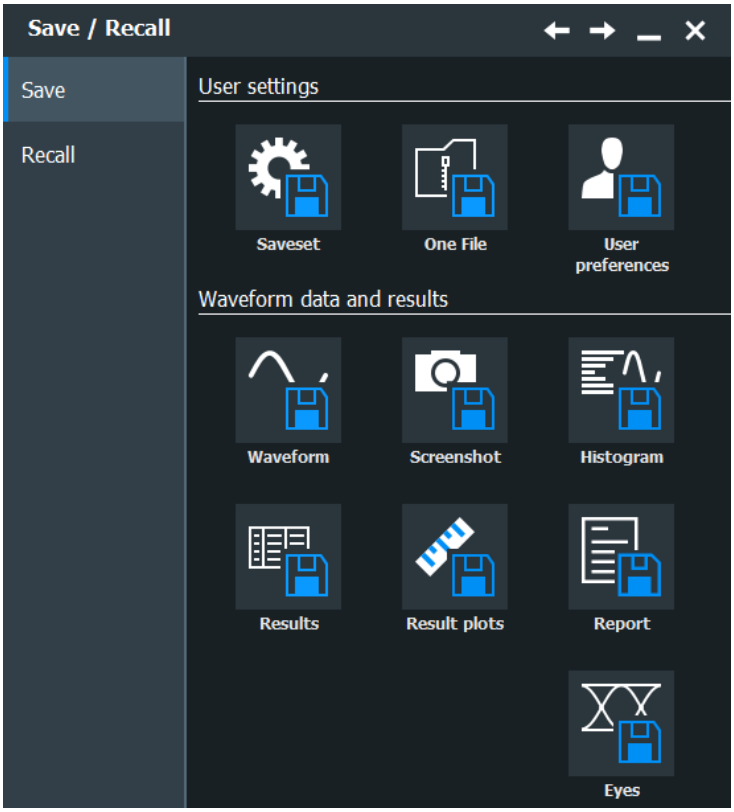


Figure 12-1: Save tab

Access to load instrument settings: "Menu" key > "Save/Recall" key > "Recall" tab > "User settings"

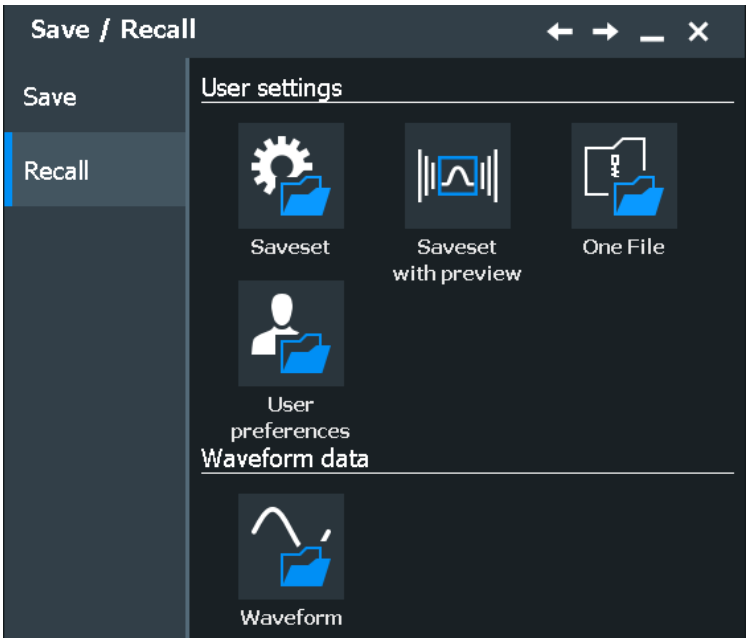


Figure 12-2: Recall tab

The R&S RTP provides the following types of saving and restoring settings:

- **Savesets** contain the complete instrument and measurement configuration except for user-specific display settings.
- **One File** contains the saveset and active reference waveform files in a ZIP file.
- **User preferences** contain the user specific display settings.
- **User-defined presets** contain the complete instrument setup including display settings, except for transparency and intensity. These settings can be restored by pressing the [Preset] key. See Section 4.6, "Preset setup", on page 102.

- Savesets 490
- One File 491
- User preferences 493
- Saveset with preview function 494
- Saving and loading settings 495

12.2.1 Savesets

Savesets contain the complete instrument and measurement configuration including a screenshot of the current display, but except for user-specific display settings stored as user preferences. You can save an unlimited number of setting files.

The waveform and pattern generator and the pulse source states are saved as "Off".


To load a saveset quickly, you can use the "Load saveset" function on the toolbar. A graphical preview helps you to find the required settings file.



If you need to store the instrument settings often, you can add the "Save settings" icon to the toolbar and use the icon to store the saveset file.

12.2.1.1 Save saveset settings

Access: "Menu" key > "Save/Recall" key > "Save" tab > "Savesets"

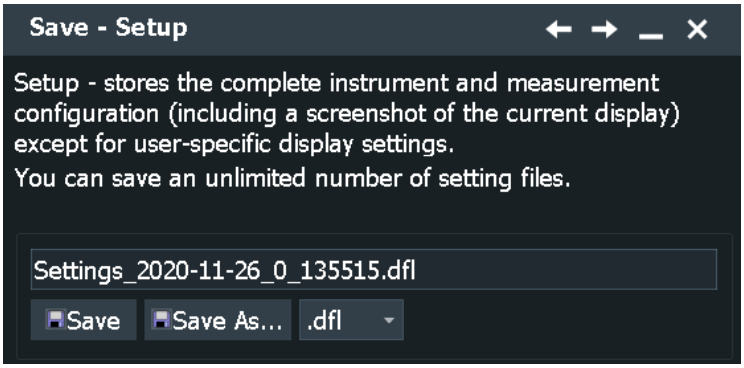

Save to file
Enter the filename to save the setting data to, and select the file format with the format button on the right. Double-tap the filename to open the file selection dialog box. See also: Section 12.6, "File selection dialog", on page 529.

By default, saveset filenames have the prefix "Settings_".

"Save" Saves the data to the selected file.


"Save As..." Opens the file selection dialog box and saves the data to the selected file.

".dfl/.xml" Selects the file format.

Remote command:
`MMEMory:SAV` on page 1780

12.2.1.2 Load saveset settings

Access: "Menu" key > "Save/Recall" key > "Recall" tab > "Savesets"

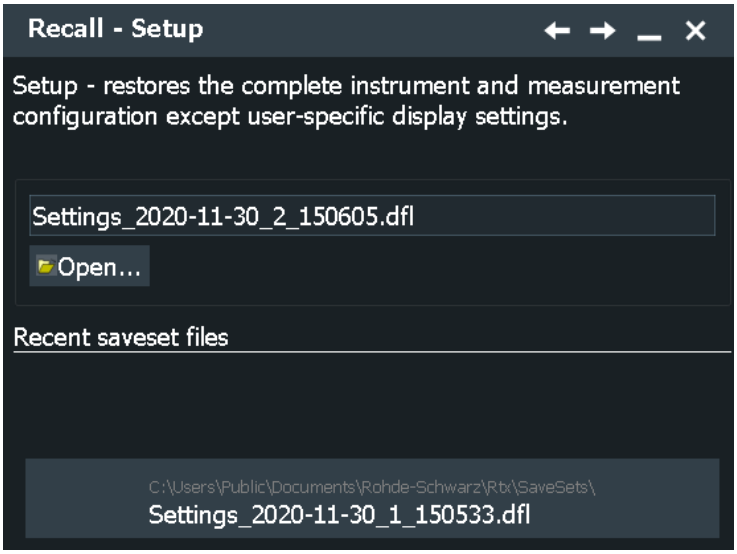

Load from file
Enter the filename to load the setting data from, and select the file format with the format button on the right. Double-tap the filename to open the file selection dialog box. See also: Section 12.6, "File selection dialog", on page 529.

By default, saveset filenames have the prefix "Settings_".

"Open" Opens a file selection dialog box and loads the selected file.

Remote command:
`MMEMory:RCL` on page 1780

12.2.2 One File


The One File function stores the savesets file and the data of active reference waveforms together in a ZIP file. If you want to keep channel waveform data together with

the instrument settings, make sure to create a reference waveform from the channel waveform before you save the One File.

The waveform generator/pattern generator and the pulse source state is saved as "Off".

12.2.2.1 Save One File settings

Access: "Menu" key > "Save/Recall" key > "Save" tab > "One File"

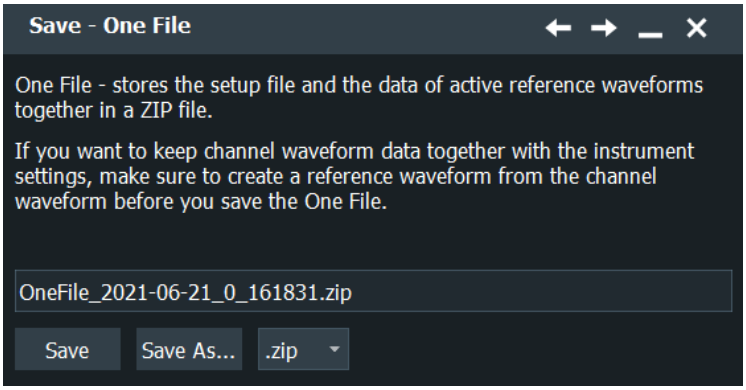

Save to file
Enter the file name to save the One File data to, and select the file format with the format button on the right. Double-tap the file name to open the file selection dialog box. See also: Section 12.6, "File selection dialog", on page 529.

By default, one file names have the prefix "OneFile_".

"Save" Saves the data to the selected file.


"Save As..." Opens the file selection dialog box and saves the data to the selected file.

".zip" Shows the file format.

Remote command:
`SAVeset:ONEFile:NAME` on page 1782
`SAVeset:ONEFile:SAVE` on page 1782

12.2.2.2 Load One File settings

Access: "Menu" key > "Save/Recall" key > "Recall" tab > "One File"

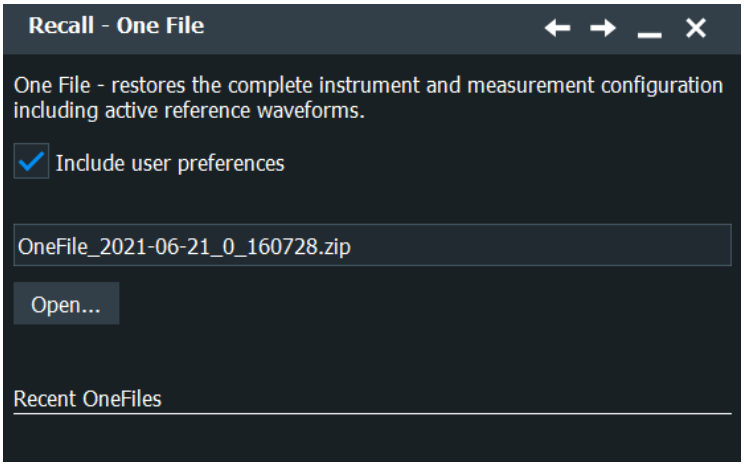

Load from file
Select "Open" to open the file selection dialog box, and to select the required file. See also: Section 12.6, "File selection dialog", on page 529.

By default, one file names have the prefix "OneFile_".

Remote command:
`SAVeset:ONEFile:NAME` on page 1782
`SAVeset:ONEFile:OPEN` on page 1782

Include user preferences
If enabled, the user preferences settings are also restored together with the saveset and reference waveform. User preferences settings include the user-specific display settings like diagram layout, toolbar, intensity and transparency settings.


Remote command:
`SAVeset:ONEFile:USERpref` on page 1782

12.2.3 User preferences

User preferences contain user-specific display settings like diagram layout, toolbar, intensity and transparency settings.

12.2.3.1 Save user preferences settings

Access: "Menu" key > "Save/Recall" key > "Save" tab > "User Preferences"

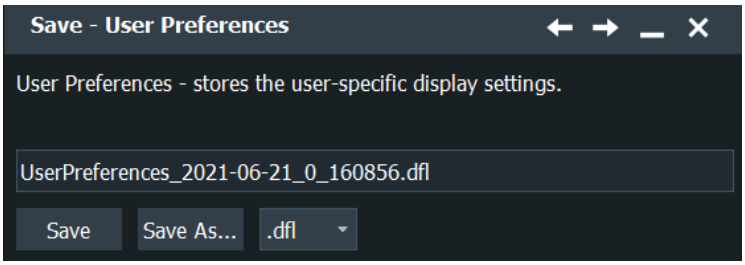

Save to file
The file name to save the data to.

By default, user preference file names have the prefix "UserPreferences_".


"Save" Saves the data to the selected file.

"Save As..." Opens the file selection dialog box and saves the data to the selected file.

".zip" Shows the file format.

12.2.3.2 Load user preference settings

Access: "Menu" key > "Save/Recall" key > "Recall" tab > "User Preferences"

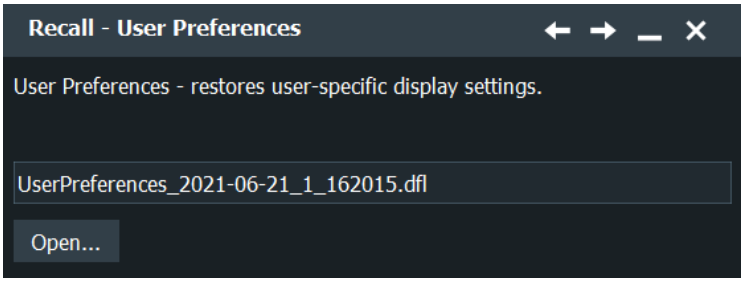

Load from file
Enter the file name to load the setting data from, and select the file format with the format button on the right. Double-tap the file name to open the file selection dialog box. See also: Section 12.6, "File selection dialog", on page 529.

By default, user preference file names have the prefix "UserPreferences_".

"Open" Opens a file selection dialog box and loads the selected file.


Remote command:
`MMEMory:RCL` on page 1780

12.2.4 Saveset with preview function

Access: "Menu" > "Save/Recall" > "Recall" tab > "Saveset with preview"

The graphical preview helps you to find the required settings file or a reference waveform.

The "Saveset with preview" function is also available on the toolbar, see Section 3.3.6.3, "Toolbar functions", on page 58.

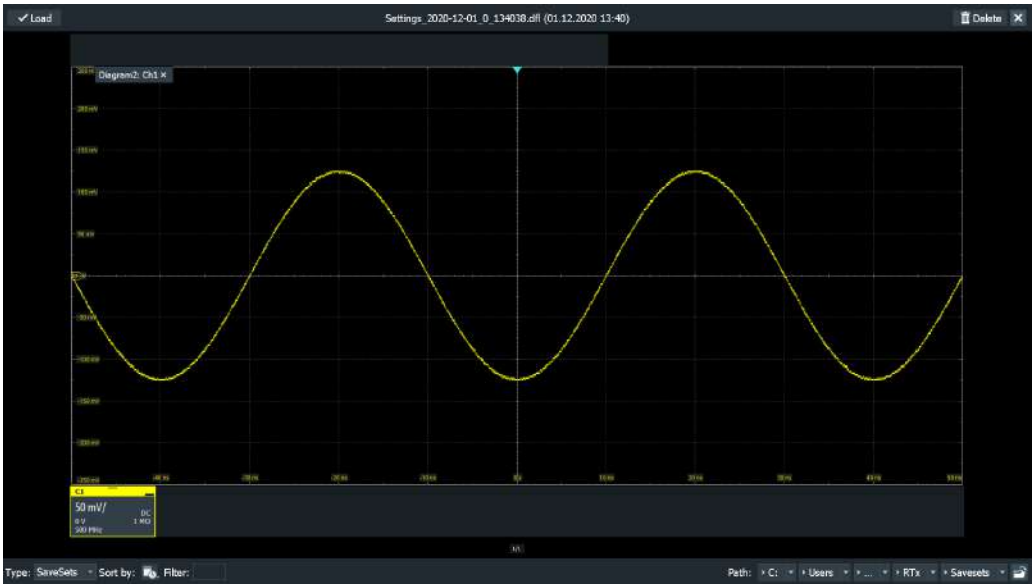

1. On the toolbar, tap the "Saveset with preview " icon.

   A window opens and shows the screenshot of the first measurement configuration that is stored in the default directory.

2. Select if you want to display a "SaveSets" file or a reference waveform ("Ref Wfm").

3. Find the required file using one of the following methods:
   - Tap the "Next" icon on the right or the "Previous" icon on the left to scroll the savesets of the directory.
     The file name is shown on the top, and the screenshot helps to identify the settings.
   - If the saveset was stored in another directory, use the path buttons at the bottom, or tap "Open" to open the required directory.
   - Tap "Sort by" to sort the files according to the "Last modified" date or the "Filename".
   - Specify a "Filter" name to show only the files containing the filter string.

4. Tap "Load" in the upper left corner to recall the settings of the selected file.

12.2.5 Saving and loading settings

Settings can be stored in a file with user-defined name and location, or in a quick saveset. The settings in a saveset can be saved and retrieved quickly at the touch of a button, so savesets are ideal for frequently used measurements.

For details on save/recall instrument settings and associated remote commands, see Section 12.2.1, "Savesets", on page 490.

To save settings to a saveset file

Alternatively, you can add the " Save settings" icon to the toolbar and use the icon to store the saveset file to the folder and file specified in the "Settings" tab.

See also Section 3.3.6.2, "Configuring the toolbar", on page 57.

1. Tap "Menu" and select "Save/Recall".
2. In the "Save" tab, press the "Saveset" button .
3. Tap "Save" to save the settings to the specified file.
   Tap "Save As" to save the settings to a different file. Select the file and directory from the file selection dialog box.

   The current settings are saved to the selected file.

To load settings from a saveset file

Alternatively, you can use the "Recall" function on the toolbar.

1. Tap "Menu" and select "Save/Recall".
2. Select the "Recall" tab.
3. Press the "Saveset" button.
4. Tap "Load" to load the settings from the specified file.
   Tap "Open" to navigate to a different file. Select the file from the file selection dialog box and tap "Select".

   The saved settings are loaded to the R&S RTP.

To save a One File

1. If you want to save reference waveforms in the One File, create and display the reference waveforms.
2. Tap "Menu" and select "Save/Recall".
3. In the "Save" tab, tap the "One File".
4. Tap "Save" to save the settings to the specified file.
   Tap "Save As" to save the settings to a different file. Select the file and directory from the file selection dialog box.

   The current settings and the active reference waveforms are saved to the selected file.

To load a One File

1. Tap "Menu" and select "Save/Recall".
2. Press the "One File" button.
3. Tap "Load" to load the settings from the specified file.


Tap "Open" to navigate to a different file. Select the file from the file selection dialog box and tap "Select".

The saved settings and reference waveforms are loaded to the R&S RTP.

12.3 Save and recall waveform data and results

Access: "Menu" key > "Save/Recall" > "Save" tab

You can export various data to file: waveform data, histograms, and measurement results.

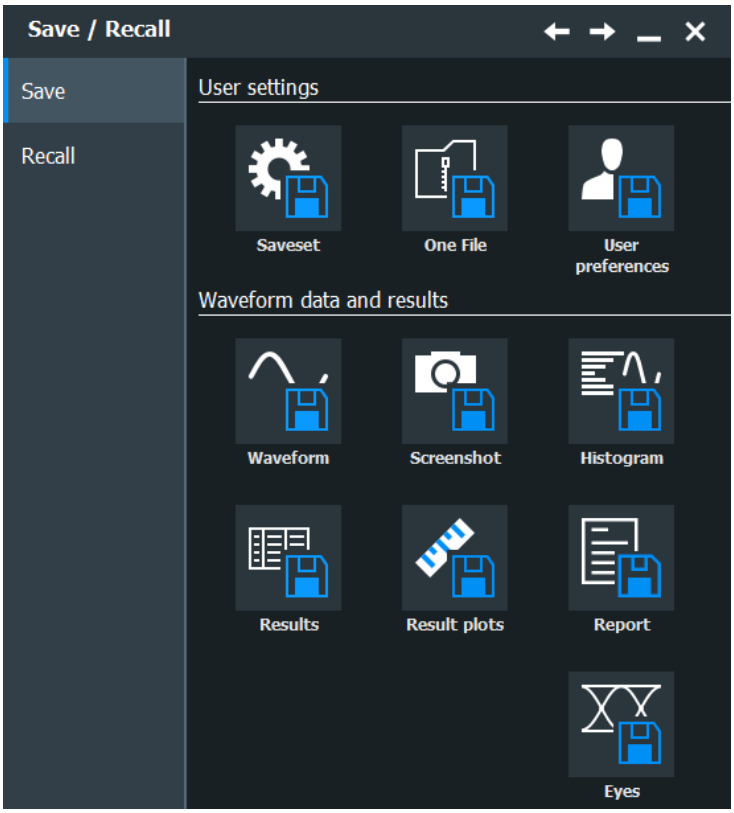

For information on data export in I/Q mode (requires option), see Section 18.3, "I/Q data output", on page 1096.

- Waveform export files 498
- Waveform settings 505
- Histogram 512
- Results 514
- Result plots analysis 515
- Eyes 518
- Saving and loading waveform data 520

12.3.1 Waveform export files

Waveforms can be stored in XML, CSV, or BIN format.

Reloading waveforms: Restrictions

To reload waveform data as a reference waveform, it must be stored in BIN format.

If multiple acquisitions of one waveform are exported (Data logging or Multiple waveforms), only the first acquisition can be reloaded.

If raw data was exported, after reload the waveform position is not the same as for the exported waveform.

If the signal is a spectrum, reloading is only possible for waveforms with "Magnitude unit" = Linear. Waveforms with logarithmic unit cannot be reloaded.

Data of all waveforms is saved in the following files:

- Header file: contains the header data, for example, time scale, vertical scale, vertical and horizontal positions, interpolation mode and much more. Header data is required to restore the waveform from data, or to analyze the data values of the data file.
- Waveform file: indicated by `*Wfm.*` in the filename. Contains the waveform data.

12.3.1.1 Header files

The header files of XML and BIN waveform files are written in XML format. The header files of CSV waveform files are written in CSV format. You can open the header files and use their information for data analysis.

CSV header files only contain the property names and values, one property per row.

```
Resolution:1e-010:
RecordLength:1000:
```

XML header files contain more information than CSV header files. The additional information is required to reload the stored waveforms with their correct settings.

```
<Prop Avail="0" ValueKey="" Name="Resolution" Value="1e-010" UserValue="0"
Step="1e-011" Default="0" Min="0" Max="1e+026" StepDefault="1e-011"
StepFactor="10" Resolution="0" UnitId="55" UnitName="s" UnitPowerProduct=""
BitGroupSize="0" Format="0"></Prop>

<Prop Avail="0" ValueKey="" Name="RecordLength" Value="1000" UserValue="1000"
Step="1" Default="1000" Min="0" Max="4294967295" StepDefault="1" StepFactor="10"
Resolution="1" UnitId="93" UnitName="Sa" UnitPowerProduct="" BitGroupSize="0"
Format="0"></Prop>
```

Header files contain the following properties:

Table 12-1: Header file properties

Value	Description
General	
FirmwareVersion	Firmware version that is installed on the R&S RTP (last entry in the header file)
Source	Name of the exported waveform
Resolution	Time between two samples *Resolution = 1 / Sample Rate*
SignalResolution	Time between two samples in this waveform. The value can differ from Resolution if the source is, for example, a spectrum, a bus signal, a correlation or a measurement. The value is determined automatically considering the waveform parameters and their dependencies. If the signal is a spectrum, the value indicates the frequency range of FFT bins.
EnhancementMode	Method to increase the sample rate if the required sample rate is higher than the ADC sample rate.
InterpolationMode	Interpolation method. The value is relevant when the enhancement mode is interpolated time.
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate
DecimationFactor	Factor to the number of data samples to achieve the required sample rate *Decimation factor = ADC sample rate / Sample rate*
TraceArithmetics	Off, Envelope, or Average
InterleavedTraceCount	Number of y-values saved at each sampling time. The value is usually 1. The value is 2, if min and max values are saved for each sample, for example, for envelope waveforms.
SignalFormat	Format of the data values: ● FLOAT: floating point numbers, general export format ● INT (8 Bit): Integer 8 bit, used for "Raw (ADC sample)" data export. ● INT (16 Bit): Integer 16 bit, used for "Raw (ADC sample)" data export in high definition mode.
Timestamp	Absolute time of the waveform recording
ByteOrder	Endianness, only relevant for raw data export in high definition mode (SignalFormat = INT (16 Bit)). ● LSB first: little endian, least significant byte first ● MSB first: big endian, most significant byte first
NumericFormat	Number format of bus values and digital channel data (bit pattern format)
Record length	
RecordLength	Number of samples in a waveform record of one acquisition
HWRecordLength	Equivalent to the RecordLength
SignalRecordLength	Number of required samples in the waveform. The value can differ from RecordLength and HWRecordLength if the source is, for example, a spectrum, a bus signal, a correlation or a measurement. The value is determined automatically considering the waveform parameters and their dependencies. If the signal is a spectrum, the value indicates the number of FFT bins.

Value	Description
SignalHardwareRecordLength	Number of samples actually available in this waveform, including the number of required samples in the waveform and the additional samples needed for further computation
LeadingSettlingSamples	Relevant only for BIN files. In XML and CSV files, the value is 0. Number of additional samples before the beginning of waveform samples. These additional samples are needed for further computation, for example, for filters.
Horizontal system	
TimeScale	Horizontal scale in seconds per division
HorizontalDivisionCount	Number of horizontal divisions
RescaleCenterTime	Horizontal position, the time distance between the reference point and the zero point of the diagram
RescaleCenterPoint	Position of the reference point in % of the screen
ReferencePoint	Position of the zero point in % of the screen
TriggerOffset	Time distance from the trigger point to the zero point of the diagram
XStart	Horizontal start value of the waveform (time or frequency) *)
XStop	Horizontal stop value of the waveform (time or frequency)
HardwareXStart	Actual horizontal start value of data, including the settling time for further computation *)
HardwareXStop	Actual horizontal stop value of data, including the settling time for further computation
	*) If the waveform is a spectrum, the XStart and HardwareXStart values may be slightly smaller than the specified start frequency, or even get negative. The spectrum is centered on the center frequency, and the frequency range covered by one spectral bin is given by the SignalResolution. Hence, the spectral bin in the center of the spectrum always covers the range [CenterFrequency; CenterFrequency + SignalResolution]. As a result, the range covered by the first spectral bin in the spectrum may reach further than the specified start frequency. It is ensured that the specified start frequency is included in the frequency range.
Vertical system If multiple channels are exported, the values of channel1 are delivered, no matter if channel 1 is exported or not.	
VerticalScale	Vertical scale of the waveform in Volts per division, or other unit / division
VerticalDivisionCount	Number of vertical divisions
VerticalPosition	Vertical position of the waveform in divisions
VerticalOffset	Vertical offset of the waveform in Volts, or other unit
NofQuantisationLevels	Theoretical number of quantization levels in the signal. This value depends on the waveform format (8 bit, 16 bit, …). In case of a math waveform, it depends on the quantization levels of the operands and on the operator type.
BaseYStart	Vertical start value of the waveform

Value	Description
BaseYStop	Vertical stop value of the waveform
Multi channel export The header files contain strings like this: `MultiChannelVerticalOffset:4:1.63:1.96:0:0:1e-005:0:-1e+026:1e+026:1e-005:10:0:V:`. Only the first 5 values and the unit at the end of the string are relevant for data analysis. All other values are for internal use and not explained here. Examples are in csv format.	
MultiChannelExport	Indication whether multiple channels are exported simultaneously: On | Off
MultiChannelExportState	Number of channels and export status of the individual channels, for example, 4:On:Off:On:On...: channels 1, 3 and 4 are exported.
MultiChannelVerticalOffset	Number of channels and vertical offset of the individual channels, for example, 4:0:0:0.02:0...: channel 3 has an offset of 20 mV.
MultiChannelVerticalPosition	Number of channels and vertical position of the individual channels, for example, 4:0:0:0:2...: the position of channel 4 is 2 divisions.
MultiChannelVerticalScale	Number of channels and vertical scale of the individual channels, for example, 4:0.05:0:0.03:0.04...: scale of channel is 50 mV/div, channel 3 has 30 mV/div and channel 4 has 40 mV/div.
MultiChannelBaseYStart	Number of channels and minimum value of the vertical range for each individual channel, for example, 4:-0.25:0:-0.13:-0.28...
MultiChannelBaseYStop	Number of channels and maximum value of the vertical range for each individual channel, for example, 4:0.25:0:0.17:0.12...: The range of channel 1 is -250 mV to 250 mV. The range of channel 3 is -130 mV to 170 mV. The range of channel 4 is -280 mV to 120 mV.
History	
TimestampState	State of the timestamps export. If on, the timestamps of each history waveform are written to the waveform data file.
Math waveform	
BaseUnit	Base unit of a mathematic waveform, for example, linear unit
ViewUnit	User-selected unit of a mathematic waveform, for example, logarithmic unit for a spectrum. The value is only valid if the exported waveform is a math waveform.
ViewUnitRelative	Indication of a relative unit. It is true if the math waveform has the ViewUnit "dB", for example. The value is only valid if the exported waveform is a math waveform.
ViewReferenceLevel	Reference level for a relative unit. The value is only valid if the exported waveform is a math waveform, and the unit is relative.
FFT	
CenterFreq	Center frequency of the spectrum
FreqSpan	Frequency span of the spectrum
FrequencyStart	Start frequency of the spectrum
FrequencyStop	Stop frequency of the spectrum

Value	Description
WindowType	Window used for the spectrum computation
ResolutionBW	Resolution bandwidth of the spectrum
AdjustedResolutionBW	Actual resolution bandwidth of a spectrum waveform. The value is only valid if the exported waveform is a spectrum.
GateRBWCoupling	Indication whether the record length or the resolution bandwidth is a constant for the spectrum computation
Parameters for power calculation	
Impedance	Impedance used for power calculation
NoiseBandwidth	Noise bandwidth of a spectrum waveform, required for power calculation. The value is only valid if the exported waveform is a spectrum.
Parameters for internal use	
SourceType	Source qualifier
TraceType	Waveform qualifier
ValueType	
TOADone	
BaseUnitRelative	Base unit indication
UseInterSampleTriggerOffset	
ISO_TRG SC_POST SC_TRG	

If "Include CDR info" is enabled, additional properties are appended to the header.

Value	Description
AnalogSource	Analog source used for clock recovery
Algorithm	Software algorithm that is used for the hardware clock data recovery: constant frequency or feed forward
Bitrate	Bitrate
UnitIntervalOffset	Unit interval offset, number between 0 and 1
PLLBandwidth	The bandwidth of the feed forward algorithm
PLLRelativeBandwidth	The relative bandwidth, that is the ratio of the nominal bit rate to the PLL bandwidth

Value	Description
SignalFormat	Format of the data values: • FLOAT: floating point numbers, general export format • INT (8 Bit): Integer 8 bit, used for "Raw (ADC sample)" data export. • INT (16 Bit): Integer 16 bit, used for "Raw (ADC sample)" data export in high definition mode.
RecordLength	Number of samples in a waveform record of one acquisition

12.3.1.2 Waveform data files

The waveform data files - indicated by `*Wfm.*` in the filename - contain the actual waveform data. Usually only Y-values - mostly voltage values - are written subsequently. If the signal is a spectrum, the data of the last frame is written.

If the waveform consists of minimum and maximum values, two Y-values per sample are written, and the property `InterleavedTraceCount` in the header file is >1. This applies to envelope waveforms, for example.

The option "Interleaved X/Y" allows you to include horizontal values into the file.

If multi-channel export is enabled, the Y-values of the selected channels are written in interleaved order.

- One channel, single acquisition export
  - Normal waveform:
    Y_0; Y_1; Y_2; Y_3; ...
  - Envelope waveform:
    $Ymin_0$; $Ymax_0$; $Ymin_1$; $Ymax_1$; $Ymin_2$; $Ymax_2$; $Ymin_3$; $Ymax_3$; ...
  - Normal waveform, interleaved x/y data:
    X_0; Y_0; X_1; Y_1; X_2; Y_2; X_3; Y_3; ...
  - Envelope waveform, interleaved x/y data:
    X_0;$Ymin_0$; $Ymax_0$; X_1; $Ymin_1$; $Ymax_1$; X_2; $Ymin_2$; $Ymax_2$; X_3; $Ymin_3$; $Ymax_3$; ...
- Multi-channel, single acquisition export
  In the example, two channels are exported.
  - Normal waveforms:
    $YCh1_0$; $YCh2_0$; $YCh1_1$; $YCh2_1$; $YCh1_2$; $YCh2_2$; $YCh1_3$; $YCh2_3$; ...
  - Envelope waveforms, channel 1 and channel 2 are envelopes:
    $YCh1min_0$; $YCh1max_0$; $YCh2min_0$; $YCh2max_0$; $Ymin_1$; $Ymax_1$; $YCh2min_1$; $YCh2max_1$; $Ymin_2$; $Ymax_2$; $YCh2min_2$; $YCh2max_2$; $Ymin_3$; $Ymax_3$; $YCh2min_3$; $YCh2max_3$; ...
  - Normal waveforms, interleaved x/y data:
    X_0; $YCh1_0$; $YCh2_0$; X_1; $YCh1_1$; $YCh2_1$; X_2; $YCh1_2$; $YCh2_2$; X_3; $YCh1_3$; $YCh2_3$; ...
  - Envelope waveform and normal waveform, interleaved x/y data:
    X_0;$YCh1min_0$; $YCh1max_0$; $YCh2_0$; X_1; $YCh1min_1$; $YCh1max_1$; $YCh2_1$; X_2; $YCh1min_2$; $YCh1max_2$; $YCh2_2$; X_3; $YCh1min_3$; $YCh1max_3$; $YCh2_3$; ...

In XML and CSV waveform value files, the data of each sample is grouped. The example shows the values of two samples for two waveforms and interleaved x/y data. The first waveform is an envelope, the second one is a normal waveform.

In CSV files, the data values for a given sampling time are written in one row.

```
-1.96e-008    -0.0079051387     -0.0059288535     -0.1027668
-1.95e-008    -0.0098814229     -0.0079051387     -0.10474309
```

In XML format, an empty line marks the beginning of the next sample.

```
<Data>-1.96e-008</Data>
<Data>-0.0079051387 </Data>
<Data>-0.0059288535 </Data>
<Data>-0.1027668 </Data>

<Data>-1.95e-008</Data>
<Data>-0.0098814229 </Data>
<Data>-0.0079051387 </Data>
<Data>-0.1027668 </Data>
```

If multiple acquisitions (Data logging / Multiple waveforms) are exported, the first acquisition is written in the same way as with single acquisition export. The following acquisitions are appended in the same way. If the signal is a spectrum, the last frame of each acquisition is saved.

If the history is exported in one file with timestamps, the timestamp as double float precedes the data of each acquisition. The acquisition data ist written in the same way as with single acquisition, according to the selected settings.

```
<timestamp as double float of first acquisition>
<value 1>
<value 2>
<value ...>
<timestamp as double float of second acquisition>
<value 1>
<value 2>
<value ...>
```

In BIN files, the instrument writes some leading and trailing settling samples before and after the waveform data. They ensure that the analysis of the reloaded reference waveform returns the same results as analysis of the original waveform. The number of leading settling samples is provided in the header file.

12.3.1.3 Number of samples in the waveform data file

In this section, a sample is defined as one or more values acquired at a given sampling time. The number of samples for one channel and acquisition is given in the header file by the property `SignalHardwareRecordLength`.

If the waveform has more than one Y-value per sample (e.g. envelope), the property `InterleavedTraceCount` is > 1, and the number of values in the file for this waveform is:

*No of values per waveform = InterleavedTraceCount * SignalHardwareRecordLength*

If multiple acquisitions are exported, the total number of values in the file is:

*No of values = InterleavedTraceCount * SignalHardwareRecordLength * No of exported acquisitions*

If "Interleaved x/y"is enabled, one horizontal value is added per sample. The total number of values in the file is:

*No of values = (1+ InterleavedTraceCount) * SignalHardwareRecordLength * No of exported acquisitions*

In BIN files, the value `SignalHardwareRecordLength` includes the number of required samples in the waveform and additional samples at the beginning (leading samples) and the end of the file (trailing samples). The number of additional samples is:

No of additional samples = SignalHardwareRecordLength - SignalRecordLength

The number of leading additional samples is given in the header file: `LeadingSettlingSamples`.

The number of trailing additional samples is:

No of trailing additional samples = No of additional samples - LeadingSettlingSamples = SignalHardwareRecordLength - SignalRecordLength - LeadingSettlingSamples

MSO option R&S RTP-B1:

If the data of digital channels is stored in BIN format, 1 bit is written for each sample. 8 data samples are written in 1 byte (data word). Thus, the file size is

File size = Number of samples / 8

For example, 100 MSa are written into a 12.5 MByte BIN file. After reading the file, you have to extract the samples from the data words.


12.3.2 Waveform settings

In the "Save - Waveform" dialog, the storage settings for waveform data are defined.

See also: Section 12.3.7, "Saving and loading waveform data", on page 520.

12.3.2.1 Waveform setup settings

Access: "Menu" key >"Save/Recall" key > "Save" tab > "Waveform" > "Setup" tab.

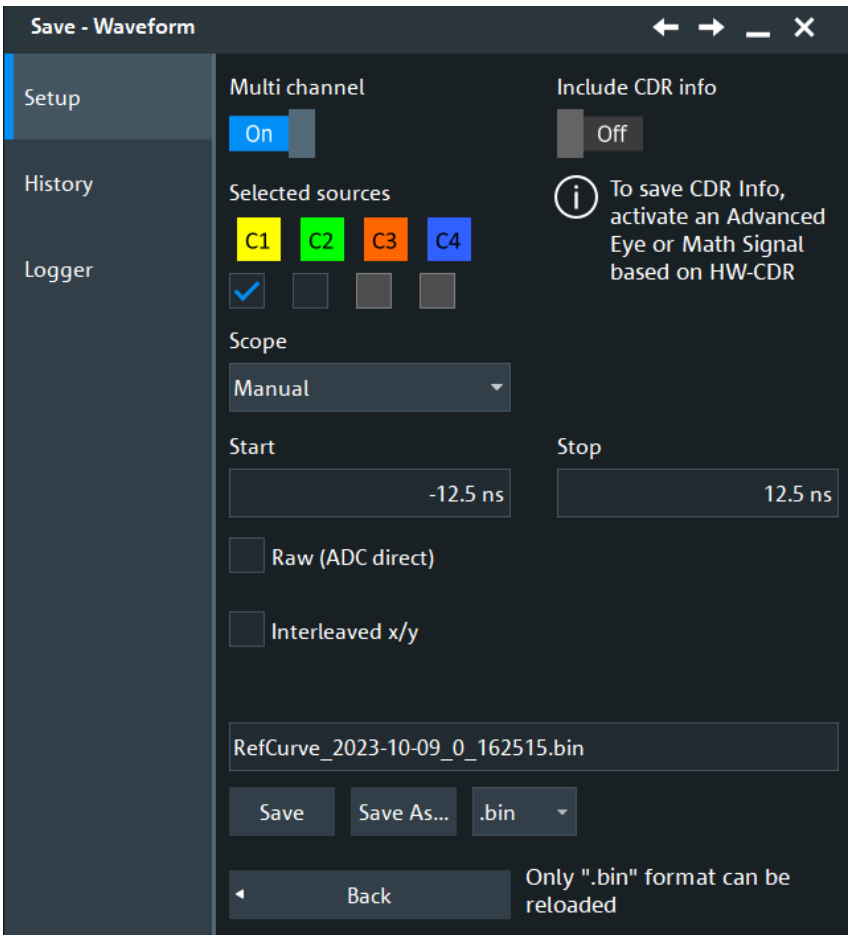

Multi channel
Enables or disables the export of multiple input channels. If enabled, you can export the data of selected input channels (Selected sources) into one file.

If disabled, you can export one "Source" on page 507 waveform.

You can reload exported multiple channels if they are stored in BIN format. The import asks you to assign each stored waveform to a reference waveform.

Remote command:
`EXPort:WAVeform:MULTichannel` on page 1784

Include CDR info
Available, if all the following conditions are fulfilled:

- Type = "CDR"
- State = "On"
- Clock / CDR / Protocol = "CDR"

Includes the CDR information in a waveform file. If this function is enabled, an additional `RefCurve.CDR.*.bin/*.csv/*.xml` file is created. This file is available in `*.bin`, `*.csv` and `*.xml` format.

The file contains the CDR trigger timestamps corresponding to the waveform data.

The created file can be used as a reference source for math equations and for the advanced eye.

Remote command:
EXPort:WAVeform:ICDR on page 1791

Source
Selects the waveform to be exported if "Multichannel export" is disabled.

Active waveforms of input channels, math signals, reference waveforms and advanced jitter analysis are available for export.

If the MSO option R&S RTP-B1 is installed, you can save also digital channels and parallel buses.

If the selected source is defined as average or envelope waveform, make sure that all required acquisitions ("Average count") are done before you save the waveform. Otherwise, the exported waveform data are not correct.

Remote command:
EXPort:WAVeform:SOURce on page 1783

Selected sources
Select the channels to be included in data export if "Multi channel" is enabled. Waveform1 of up to four input channels can be saved into one file.

If at least one of the selected sources is defined as average or envelope waveform, make sure that all required acquisitions ("Average count") are done before you save the waveforms. Otherwise, the exported waveform data are not correct.

Remote command:
CHANnel<ch>:EXPortstate on page 1785

Scope
Defines the part of the waveform record that has to be stored.

"Full waveform"	Saves the complete waveform record.
"Zoom"	Saves the data included in the zoom area if at least one zoom is defined for the source waveform. The start and stop values of the area are shown. If several zooms are defined, select the "Zoom" to be used for export.
"Cursor"	Saves the data between the cursor lines if at least one cursor measurement is defined for the source waveform. The start and stop values of the area between the cursor lines are shown. If several cursor sets are defined, select the "Cursor set" to be used for export.
"Gate"	Saves the data included in the measurement gate if a gated measurement is defined for the source waveform. Select the "Measurement" for which the required gate is defined. The start and stop values of the gate are shown.
"Manual"	Saves the data between user-defined "Start" and "Stop" values.

Remote command:
EXPort:WAVeform:SCOPe on page 1786
EXPort:WAVeform:STARt on page 1786

EXPort:WAVeform:STOP on page 1787
EXPort:WAVeform:ZOOM on page 1787
EXPort:WAVeform:CURSorset on page 1787
EXPort:WAVeform:MEAS on page 1788

Raw (ADC direct)
Enables the export of analog channel data in the raw sample format of the ADC. The data format is integer 8 bit (signed 8-bit binary format). This format reduces the file size (1 Byte/sample instead of 4 Bytes/sample in binary files) but decreases the precision of the values.

If the high definition mode is active, the data format is integer 16 bit, except for peak detect decimation (8 bit). See "Export" on page 139.

Only y-values are exported, the "Interleaved x/y" option is not available.

Currently, the setting is not available for the export of digital channel data and data of R&S RT-ZVC channels.

Data conversion:

To convert INT8 or INT16 data to physical quantities, e.g. voltages, use the following formulas:

*ConversionFactor = VerticalScale * VerticalDivisionCount / NofQuantisationLevels*

*PhysicalQuantity = (Value_ADC * ConversionFactor) + VerticalOffset - (VerticalScale * VerticalPosition)*

The raw values are written in the `*.Wfm.*` file, all other values can be found in the corresponding header file.

Table 12-2: Example of raw data conversion

	INT8	INT16, HD mode
VerticalScale	110 mV/div	50 mV/div
VerticalPosition	1 div	0
VerticalOffset	50 mV	0
NofQuantisationLevels	253	253 * 256
VerticalDivisionCount	10	10
Value_ADC	13	-61
ConversionFactor	0.11 * 10 / 253 = 0.004347826086957	0.05 * 10 / (253 * 256) = 0.0000771986
Voltage	(13 * 0.004347826086957) + 0.05 - (1 * 0.11) = -0.003478260869559 V = 3.478260869559 mV	(-61 * 0.0000771986) + 0 = -4.7091146 mV

When reloading an exported raw BIN waveform, the waveform position after reload is not the same as for the exported waveform.

Remote command:
EXPort:WAVeform:RAW on page 1790

Interleaved x/y
Includes horizontal values in the export data (time or frequency values, depending on the waveform). X and Y-values are written alternately to the file. If disabled, only Y-values - mostly voltage values - are written.

Interleaved x/y data cannot be exported as raw values, the "Raw (ADC direct)" option is not available.

Remote command:
`EXPort:WAVeform:INCXvalues` on page 1789

Save to file
Enter the filename to save the waveform to. Double-tap the filename to open the on-screen keyboard.

By default, the filename has the prefix "RefCurves_". You can define a pattern for automatic naming in the "Autonaming" dialog, see Section 4.8.1, "Autonaming", on page 108.

"Save" Saves the waveform in the selected file.


"Save As..." Opens the file selection dialog and saves the waveform to the selected file. See also Section 12.6, "File selection dialog", on page 529

".bin/.xml/.csv" Selects the file format. Note that reference waveforms can be loaded from `.bin` files only.
See also: Section 12.3.1, "Waveform export files", on page 498.

Remote command:
`EXPort:WAVeform:NAME` on page 1785
`EXPort:WAVeform:SAVE` on page 1786

12.3.2.2 Waveform history settings

Access: "Menu" key >"Save/Recall" key > "Save" tab > "Waveform" > "History" tab.

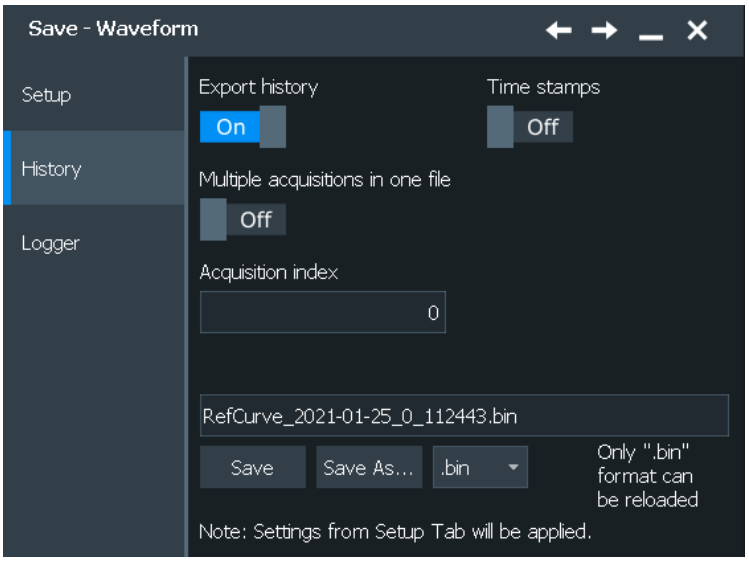

In this dialog you can configure the export of the history waveform data to file. Select the channels and scope in the "Setup" tab.

Export history
Enables the history mode and the export of history waveforms to file.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory[:STATe]` on page 1576

Time stamps
If enabled, the relative timestamps of all history waveforms are written into the waveform data file at the beginning of each waveform record.

The following format is used:

```
<timestamp as double float of first acquisition>
<value 1>
<value 2>
<...>
<timestamp as double float of second acquisition>
<value 1>
<value 2>
<...>
```

You can also select the format of the time stamp in the "Acquire" > "History" dialog.

Remote command:
`EXPort:WAVeform:TIMestamps` on page 1789

Multiple acquisitions in one file
If enabled, allows you to save several or all history waveforms. Define the part of the history to be exported using "Start acquisition" and "Stop acquisition".

If multiple acquisitions of one waveform are exported into a BIN file, the first acquisition can be reloaded as reference waveform.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory:STARt` on page 1577
`CHANnel<ch>[:WAVeform<wf>]:HISTory:STOP` on page 1578

Start export
Starts the history replay and simultaneous saving.

Remote command:
`CHANnel<ch>[:WAVeform<wf>]:HISTory:PLAY` on page 1579

Save to file
Enter the filename to save the waveform to. Double-tap the filename to open the on-screen keyboard.

By default, the filename has the prefix "RefCurves_". You can define a pattern for automatic naming in the "Autonaming" dialog, see Section 4.8.1, "Autonaming", on page 108.

"Save" Saves the waveform in the selected file.


"Save As..." Opens the file selection dialog and saves the waveform to the selected file. See also Section 12.6, "File selection dialog", on page 529

".bin/.xml/.csv" Selects the file format. Note that reference waveforms can be loaded from `.bin` files only.
See also: Section 12.3.1, "Waveform export files", on page 498.

Remote command:
`EXPort:WAVeform:NAME` on page 1785
`EXPort:WAVeform:SAVE` on page 1786

12.3.2.3 Waveform logger settings

Access: "Menu" key >"Save/Recall" key > "Save" tab > "Waveform" > "Logger" tab.

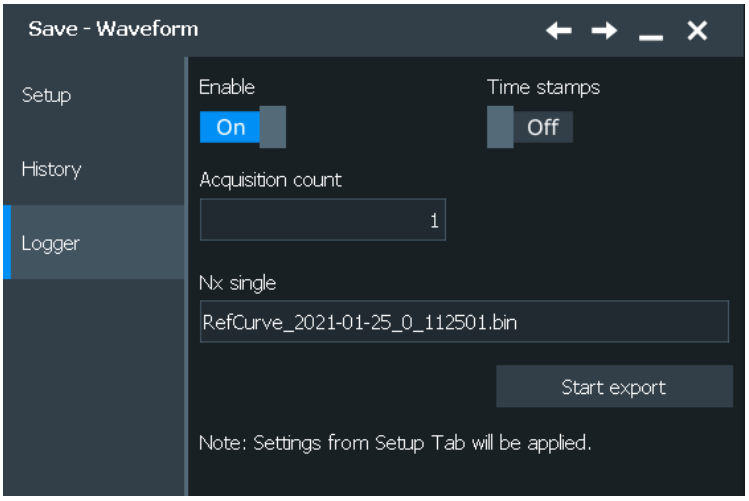

In this dialog, you can configure the export of the data of a running Nx Single acquisition. Select the channels and scope in the "Setup" tab.

Enable
Enables the export of all waveforms of an Nx Single acquisition into one file.

The waveform records are written in historical order one after the other, either the complete records or the sections as defined in Scope. Set the number of acquisitions to be acquired and stored with "Acquisition count". The maximum amount of data that can be written is shown in "Max. file size".

Enabling "Data logging" stops a running acquisition. To start the logging, tap "Start Export" on page 511 or press [Single].

Pressing "Run cont" disables data logging.


Remote command:
`EXPort:WAVeform:DLOGging` on page 1788

Start Export
Starts an Nx Single acquisition series and simultaneously saves the waveform data to a file.

Remote command:
RUNSingle on page 1395 (Nx Single acquisition)

12.3.3 Histogram

Access: "Menu" key >"Save/Recall" key > "Save" tab > "Histogram"

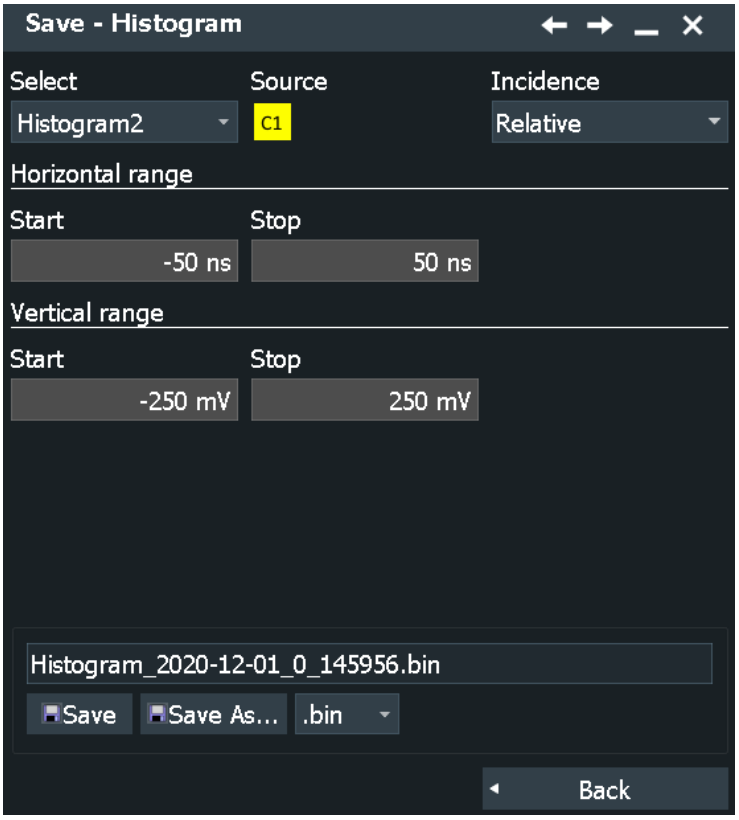

The waveform histogram export saves data in two files. The *.Wfm.* file contains 256 or 512 absolute or relative histogram values. The other file is the header file.

Contents of the header file:

- Source waveform of the histogram
- Histogram mode: vertical or horizontal
- Incidence of exported values: absolute or relative
- Histogram range: XStart, XStop, YStart, YStop
- Name of the exported histogram

Data conversion:

Using the header data, you can calculate the waveform value to which a histogram value belongs:

*YValue = (YStop - YStart) / HistogramValuesCount * HistogramValueNumber + YStart*

YStart	-0.25 V
YStop	0.25 V
HistogramValuesCount	256 (total number of written rows in a CSV file)
HistogramValueNumber	68 (number of the row in a CSV file)
Y-Value	(0.25 - (-0.25)) / 256 * 68 - 0.25 = -0.11719 V

The histograms settings are defined in the "Histogram" dialog box ("Menu" > "Apps" > "Analysis" tab > "Histogram").

See also: Section 7.4.3, "Histogram setup", on page 309.

Select
Selects the histogram to be exported. All active waveform histograms are shown in the list.

Measurement histograms can also be exported, see Section 12.3.5, "Result plots analysis", on page 515.

Remote command:
`EXPort:HISTogram:SELect` on page 1791

Source
Displays the source of the selected histogram.

Incidence
Sets the mode of exported histogram data: relative or absolute count of values. If relative values are exported, the sum of all values is 1, and the count of each value is set in relation to the sum.

Remote command:
`EXPort:HISTogram:INCidence` on page 1791

Horizontal range, Vertical range
Displays the "Start" and "Stop" limits of the histogram area.

Save to file
Enter the filename to save the waveform histogram to. Double-tap the filename to open the file selection dialog box.

By default, the filename has the prefix "Histogram_". You can define a pattern for automatic naming in the "Autonaming" tab. The default directory is:

`C:\Users\Public\Documents\Rohde-Schwarz\RTP\Histograms`

"Save"	Saves the histogram data in the selected file.
"Save As..."	Opens the file selection dialog box and saves the histogram data to the selected file. See also Section 12.6, "File selection dialog", on page 529
".bin/.xml/.csv"	Selects the file format.


Remote command:
EXPort:HISTogram:NAME on page 1792
EXPort:HISTogram:SAVE on page 1792
EXPort:HISTogram:DATA? on page 1792

12.3.4 Results

In this dialog, you can select the result boxes to be saved, and define the storage settings.

Access: "Menu" key >"Save/Recall" key > "Save" tab > "Results"

Furthermore, you can export the decode result tables of serial protocol analysis.

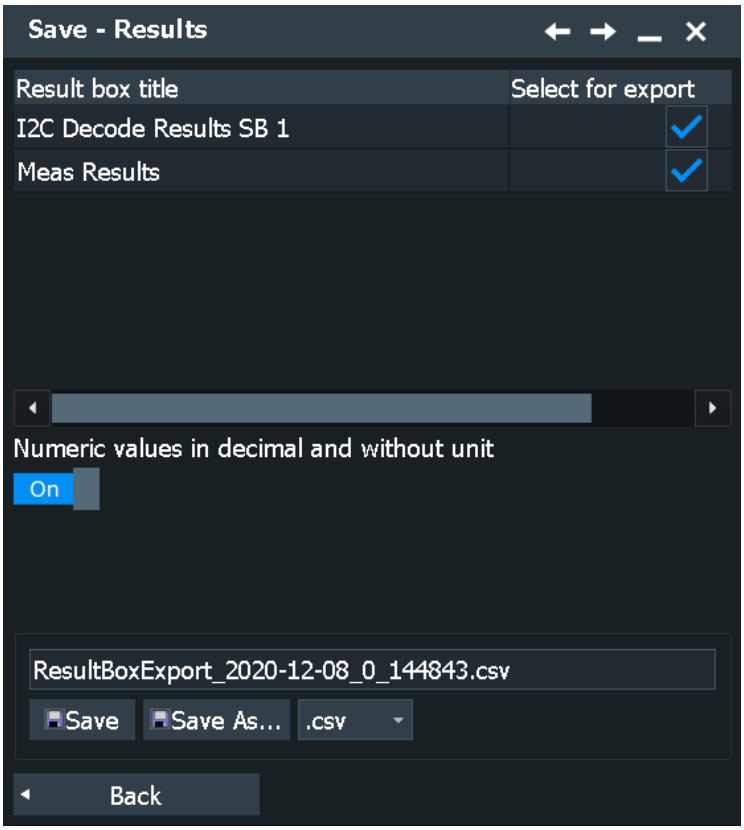

Result selection
The table lists all result boxes and decode tables that are currently open, including minimized boxes and docked boxes. Select the results that you want to save to file. All results are written into one file.

Note: If the result box is minimized, only the columns shown on the result icon are saved (2 columns). Statistical results are not shown on the minimized results icon, and they are not saved.

Numeric values in decimal and without unit
By default, numeric result values are written with their unit to the file. If the option is enabled, the values are saved with more decimal places.

Export results
Enter the filename to save the results to. Double-tap the filename to open the file selection dialog box.

By default, the filename has the prefix "ResultBoxExport_".

You can define a pattern for automatic naming in the "Menu" > "Settings" > "Save/Recall" > "Autonaming".

"Save" Saves the selected results to the indicated file.

"Save As..." Opens the file selection dialog box and saves the selected results to the selected file. See also Section 12.6, "File selection dialog", on page 529

".csv/.html" Selects the file format.

- CSV: the values are saved in a file
  You can select the value delimiter and the list separator symbol in the "CSV Export" dialog, see Section 4.8.2, "CSV export", on page 111.
  Tip for using MS Excel: It is recommended that you use the semicolon as csv decimal symbol. When you open the file with MS Excel, use "File > Open" and follow the wizard to set the separators correctly, or set the separator settings with "Tools > Options > International".
- HTML: Results are saved as web page for display in a browser.

12.3.5 Result plots analysis

Access: "Menu" key >"Save/Recall" key > "Save" tab > "Result Plots"

You can export the data of long-term measurements, the measurement histogram and track data to file.

The measurement export saves results in two files. The `*.Wfm.*` file contains data values, and the other file is the header file.

The header file contains:

- Source waveform of the measurement
- Measurement scale
- Export type = histogram, long term or track
- Exported measurement
- Histogram range: XStart, XStop, YStart, YStop
  The range is only relevant for export type = histogram. The measurement axis is the X-axis, which can be a horizontal or vertical axis depending on the histogram mode.

Long-term measurements: The `*.Wfm.*` file contains one value or value set for each long-term measurement point. The maximum number of points is defined in the "Horizontal scaling" dialog box.

- If statistics are disabled, the current result of the main measurement is written - one double value per long-term point.
- If statistics are enabled, seven values for each long-term point are saved:
  - Upper peak
  - Lower peak
  - RMS
  - Standard deviation
  - Average
  - Event count per point: number of measurement results that creates one long-term point
  - Waveform count per point: number of waveforms included in one long-term point.

Measurement histogram: The `*.Wfm.*` file contains 1000 absolute or relative histogram values.


Data conversion of measurement histogram data:

Using the header data, you can calculate the measurement value to which a histogram value belongs:

*MeasValue = (XStop - XStart) / 1000 * HistogramValueNumber + XStart*

Example: The 273rd histogram value is 0.491749. That means, the relative frequency of the measurement value 0.1246 V is 0.491749.

XStart	0.07 V
XStop	0.27 V
HistogramValueNumber	273 (number of the row in a CSV file)
MeasValue	(0.27 - 0.07) / 1000 * 273 + 0.07 = 0.1246 V

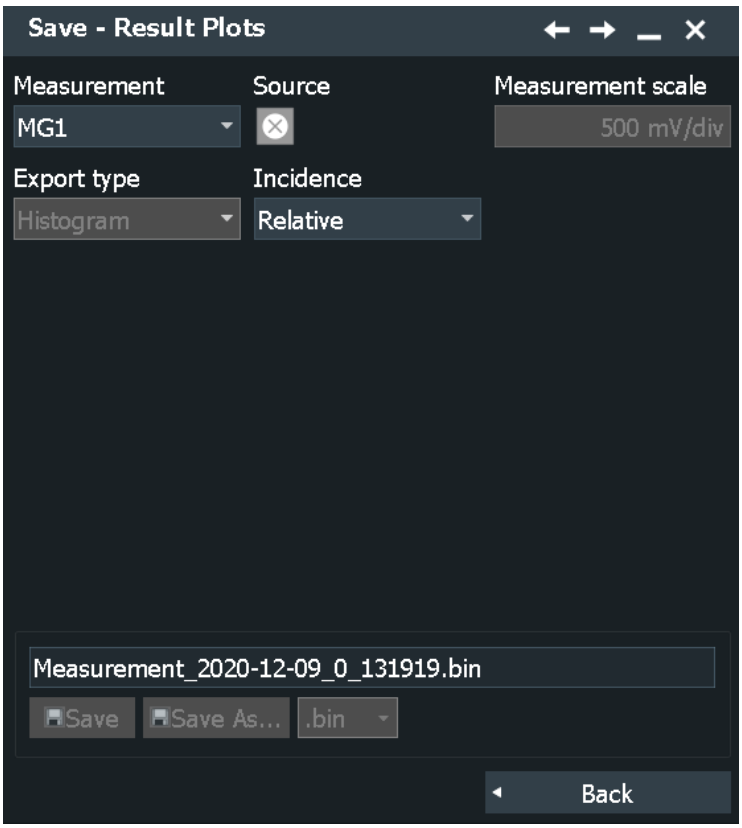

Measurement
Selects the measurement to be exported.

Remote command:
`EXPort:MEASurement:SELect` on page 1794

Source, Measurement scale
Displays the measurement settings source and scale.

Export type
You can export the result data of the long-term measurement, the measurement histogram or the track.

To export the data, the required type must be enabled in the ""Menu" > "Measure" > Plot" tab: "Long term > Enable", "Histogram > Enable" or "Track > Enable".

Remote command:
`EXPort:MEASurement:TYPE` on page 1794

Incidence
Sets the mode of exported histogram data: relative or absolute count of values. If relative values are exported, the sum of all values is 1, and the count of each value is set in relation to the sum.

Remote command:
`EXPort:HISTogram:INCidence` on page 1791

Save to file
Enter the filename to save the measurement data to. Double-tap the filename to open the file selection dialog box.

By default, the filename has the prefix "Measurement_".

You can define a pattern for automatic naming in the "Autonaming" tab, see Section 4.8.1, "Autonaming", on page 108.

The default directory is:


`C:\Users\Public\Documents\Rohde-Schwarz\RTP\Measurements`

"Save"	Saves the measurement data in the selected file.
"Save As..."	Opens the file selection dialog box and saves the measurement data to the selected file. See also Section 12.6, "File selection dialog", on page 529.
".bin/.xml/.csv"	Selects the file format.

Remote command:
`EXPort:HISTogram:NAME` on page 1792
`EXPort:MEASurement:SAVE` on page 1795
`EXPort:MEASurement:DATA?` on page 1795

12.3.6 Eyes

Access: "Menu" key >"Save/Recall" key > "Save" tab > "Eyes".

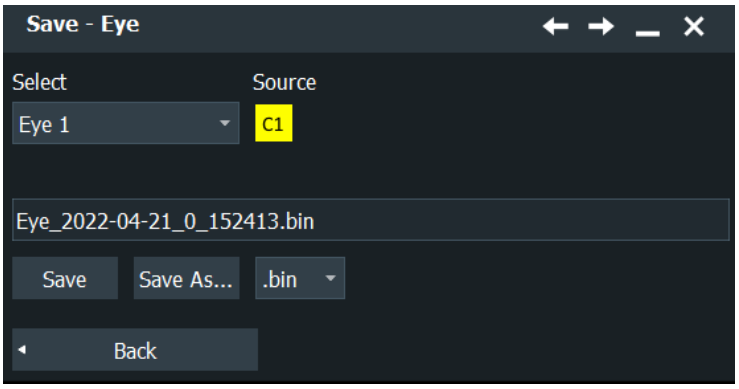

In this dialog, you can select an eye diagram that you want to export.

Eye export saves the accumulated values at each pixel of an eye diagram.

The export supports *.csv and *bin files. Each export generates a header file and a data file.

Content and format of the CSV files

The header file contains the following values:

- Name of the exported eye (e.g. Eye 1)
- Corresponding source (e.g. C1W1)
- Timestamp

- Image height
- Image width
- Pixel format
- XStart
- XStop
- YStart
- YStop

The data file contains the comma-separated list of the pixel values. The number of lines and columns corresponds to the number of lines and rows of the eye diagram image.

Content and format of the BIN files

The header file contains the following values:

- Name of the exported eye (e.g. Eye 1)
- Corresponding source (e.g. C1W1)
- Timestamp
- Image height
- Image width
- Pixel format
- XStart
- XStop
- YStart
- YStop

The data file contains the following information in the given order.

- Number of bytes per value - uint32
- Number of samples – uint32
- Column wise sorted pixel values – ‘number of samples’ * ‘number of bytes per value’

Select/ Source
Selects the eye measurement to be exported and displays its source.

Remote command:
`EXPort:EYE:SELect` on page 1793
`EXPort:EYE:SOURce?` on page 1793

Save to file
Enter the filename to save the eye data to. Double-tap the filename to open the file selection dialog box.

By default, the filename has the prefix "Eye_".

You can define a pattern for automatic naming in the "Autonaming" tab, see Section 4.8.1, "Autonaming", on page 108.

The default directory is:

`C:\Users\Public\Documents\Rohde-Schwarz\RTP\Eyes`

"Save" Saves the measurement data in the selected file.

"Save As..." Opens the file selection dialog box and saves the measurement data to the selected file. See also Section 12.6, "File selection dialog", on page 529

".bin/.csv" Selects the file format.

Remote command:
`EXPort:EYE:NAME` on page 1793
`EXPort:EYE:SAVE` on page 1793
`EXPort:EYE:DATA?` on page 1793

12.3.7 Saving and loading waveform data

You can save the data of a channel, math or reference waveform to an `.xml`, `.csv`, or `.bin` file. The data export of several channels into one file is also possible. Files in `.bin` format can be reloaded to the R&S RTP as reference waveforms.

Instead of a complete waveform, you can also save a part of it, limited by a previously defined zoom, cursor lines, measurement gate or user-defined time values.



To save waveform data quickly, you can add the "Save Waveform" icon to the toolbar and use it for saving. The icon does not work for saving actions that are started with "Start export" (data logging and multiple history waveforms).

It is also possible to save history data to file. Furthermore, you can save a "live record" of a running Nx Single acquisition to one data file.

For details on waveform save/recall settings, see Section 12.3.2, "Waveform settings", on page 505.

The following procedures are described:

- "To save a waveform or a part of a waveform to a file" on page 520
- "To save a waveform using the toolbar icon" on page 521
- "To export waveform data of a running acquisition" on page 521
- "To save the history data" on page 317
- "To load a reference waveform" on page 278
  "To save a reference waveform" on page 277

To save a waveform or a part of a waveform to a file

1. Open "Menu" and select "Save/Recall" > "Save".
2. Tap the "Waveform" button.

   The "Save - Waveform" dialog opens.
3. Select the waveforms to be saved:
   - To save one waveform, tap the "Source" icon. Select the waveform.
   - To save data of several channels, enable "Multi channel" and select the channels.

4. In the "Scope" list, select the part of the waveform record to be saved. Zoom, cursor and gate segments require the same setup for the selected waveform before saving. For "Manual", enter the "Start" and "Stop" time of the section.
5. Check the filename under "Save to file" and change it if needed. Usually, autonaming is used.
6. Check the file format and the "Export format" settings and change them if needed.
7. Tap "Save" to save the waveform data to the specified file.
   Tap "Save As" to save the waveform data to a different file or file type. Select the file from the file selection dialog box.

To save a waveform using the toolbar icon

1. Add the "Save Waveform" icon to the toolbar, see Section 3.3.6.2, "Configuring the toolbar", on page 57.
2. Set the scope, export format, and other parameters in "Menu" > "Save/Recall" > "Waveforms".
3. If necessary, adjust the autonaming pattern and the storage path in "Menu" > "Settings" > "Save/Recall" > "Autonaming".
4. To save the waveform data:
   a) Tap the "Save Waveform" icon on the toolbar. The "Save Waveform" overlay menu opens.



   b) Tap the waveform that you want to save.
   If you tap the diagram background, the data of the focused waveform is saved.

To export waveform data of a running acquisition

1. Select the waveform that you want to save and the scope as described in "To save a waveform or a part of a waveform to a file" on page 520, step 1 to 5.
2. If you want to save only a section of each waveform, set the "Scope".
3. Open the "Logger" tab.
4. Tap "Enable".
5. Enter the number of acquisitions to be acquired and saved in "Acquisition count".
6. Check the filename under "Nx single" and change it, if needed. Usually, autonaming is used.
7. Tap "Start export" to start the acquisition and to save the acquired waveform data to the specified file.

To load waveform data as a reference waveform

To reload waveform data from a previous measurement, the waveform must have been stored as a reference waveform in a BIN file before.

The procedure is described in Section 7.2.1, "Working with reference waveforms", on page 276.

12.4 Screenshots

To store the graphical results of the measurement, you can save a screenshot of the graphic area. To document current settings, the open dialog box can be included in the screenshot.



The "Image" toolbar icon saves the current display to a file according to the settings in "Menu" > "Save/Recall" > "Save" tab > "Screenshot". See also "Image" on page 59.



You can configure the [Camera] key to save screenshots by a single keypress. See also Section 4.5.1, "Hardkeys: function assignment", on page 98.

If a USB flash drive is connected, the default path of the user data directory is set to the USB flash drive. Thus, you save data to USB flash drive automatically, and you can change the directory in the file explorer at any time.

Screenshots on a computer using the Web interface

If the R&S RTP is connected to a LAN, you can create and save screenshots of the instrument's display on a computer. See Section 25.3.2.3, "Device screenshot", on page 1297.

Meta information in screenshots

The meta data of the screenshot also contains instrument information. In PNG and JPEG files, meta information is saved as EXIF information and can be read, for example, using the ExifTool.

Example:

Reading meta information using the ExifTool.

Command: `# exif C:\Screenshot_2020-07-14_0_110551.png`

Result:

```
ExifTool Version Number         : 10.20
File Name                       : Screenshot_2016-07-14_0_110551.png
Directory                       : C:/
File Size                       : 37 kB
File Modification Date/Time     : 2020:07:14 11:05:51+02:00
File Access Date/Time           : 2020:07:14 11:05:51+02:00
File Creation Date/Time         : 2020:07:14 11:05:51+02:00
...
Instrument Firmware Version     : 3.30.0.46
Instrument Material Number      : 1329.7002k44
Instrument Serial Number        : 123456
Image Size                      : 1280x800
Megapixels                      : 1.0
```

12.4.1 Screenshot settings

Access: "Menu" > "Save/Recall" > "Save" tab > "Screenshot"

In the "Screenshot" dialog box, you configure the image to be saved or included in a report. You select the storage location for screenshot files. The image is created when you open the dialog box, and can be updated at any time.

You can also edit the image before saving, and include an open dialog box or the sidebar in the image.

You can save the image in the "Screenshot" dialog box. To save screenshots quickly, use the "Image" toolbar icon, or configure and use the [Camera] key.



Preview 524
Update 524
View / Annotate 524
White background 524
Inverse color 525
Show setup dialog 525
Show only grid 525
Screenshot of tabs 525
Save to file 525

Preview
Shows a preview of the screenshot. The image is created when the dialog box opens.

Update
Updates the preview of the screenshot with the current display view, e.g. after changes to the settings have been made, or an additional channel has been activated.

View / Annotate
Opens the screenshot in the Paint application. Edit the image as necessary. You can store the file using "Save as". Alternatively, save the file and close the Paint application to return to the "Screenshot" dialog, then save the edited image. The changes are not shown in the preview.

White background
Inverts the background color. So you can picture waveforms with normal waveform colors on white background.

If both "White background" and Inverse color are enabled, the instrument inverts the background twice, and it appears black.

"White background"	"Inverse color"	Background	Waveform and results
On	Off	White	Screen colors
Off	On	White	Inverted colors
On	On	Black	Inverted colors
Off	Off	Black	Screen colors

Remote command:
HCOPy:WBKG on page 1798

Inverse color
Inverts the colors of the output, i.e. a dark waveform is shown on a white background.

See also: "White background" on page 524.

Remote command:
HCOPy:DEVice<m>:INVerse on page 1797

Show setup dialog
If you want to save dialog boxes in screenshots, enable "Show setup dialog". The currently open dialog box is included in the screenshot.

Remote command:
HCOPy:SSD on page 1798

Show only grid
If enabled, the screenshot shows only the grid. The signal bar is not included.

Remote command:
HCOPy:ISBA on page 1799

Screenshot of tabs
Saves screenshots of all tabs in the diagrams. The instrument creates one screenshot for each tab.

Remote command:
HCOPy:STABs on page 1800

Save to file
Defines the filename to which screenshot is saved. By default, the filename has the prefix "Screenshot_". Double-tap the filename filed to change the name.

If a USB flash drive is connected, the default path of the user data directory is set to the USB flash drive. Thus, you save data to USB flash drive automatically, and you can change the directory in the file explorer at any time.

"Save" Saves the current screenshot to the specified file.

"Save As..." Opens the file selection dialog box. Here you can adjust the target directory and the file name and save the current screenshot to the file. The symbols of important target folders are listed on the left of the file explorer.

"Delete" Opens the file selection dialog box and deletes the selected file.

Remote command:
HCOPy:DEVice<m>:LANGuage on page 1797
HCOPy:DESTination<m> on page 1796
MMEMory:NAME on page 1797
HCOPy:IMMediate<m> on page 1799
HCOPy:IMMediate<m>:NEXT on page 1800
MMEMory:DELete on page 1778

12.4.2 Configuring and saving screenshots

You can edit the image, invert all colors, and set the background color. A preview of the current image is shown for reference.

1. Open the "Menu" > "Save/Recall" > "Save" tab > "Screenshot".
2. To enhance the images for later print on white paper, enable "White background" or "Inverse color". If you print this image later on a monochrome printer, you get a grayscaled picture. The contrast of the resulting gray lines depends on waveform colors and the used printer.
3. Select the file format: png, jpg, or another one.
4. To change the directory, tap "Save As" and configure the path.

   The symbols of often used target folders are listed on the left of the file explorer. By default, screenshots are saved in the `C:\Users\Public\Public Documents\Rohde-Schwarz\RTx\ScreenShots` directory.
5. Tap "Save".

   The file is saved and the dialog box closes.
6. Check if the screenshot is saved to the desired directory.
7. To save further screenshots, use one of the following ways:
   - Configure the [Camera] key. Press the key to save a screenshot.
     See also Section 4.5.1, "Hardkeys: function assignment", on page 98.
   - Add the "Image" icon to the toolbar. Tap the icon to save an image.
     See also Section 3.3.6.2, "Configuring the toolbar", on page 57.
   - Tap "Save" in the "Screenshot" dialog box to save the image to the specified file.
   - To save the image with a dedicated filename or to another directory, tap "Save As" in the "Screenshot" dialog box. Select the path, enter a filename, and tap "Save".

12.5 Reports


Reports document the current measurement and test results. The report contains general information, current vertical and horizontal settings, trigger settings, active channels and all current results except for zoom and search results. A screenshot is also included.

You can create the report manually, or automatically on defined events:

- Press the [Camera] key.
- Tap the "Create report" toolbar icon.
  Before, add the icon to the toolbar, see also Section 3.3.6.2, "Configuring the toolbar", on page 57.
- Action on micro button, available on active Rohde & Schwarz probes
- Action on trigger
- Event action at mask testing
- Event action at limit checks

12.5.1 Report settings

Access: "Menu" menu > "Save/Recall" menu > "Save" tab > "Report"

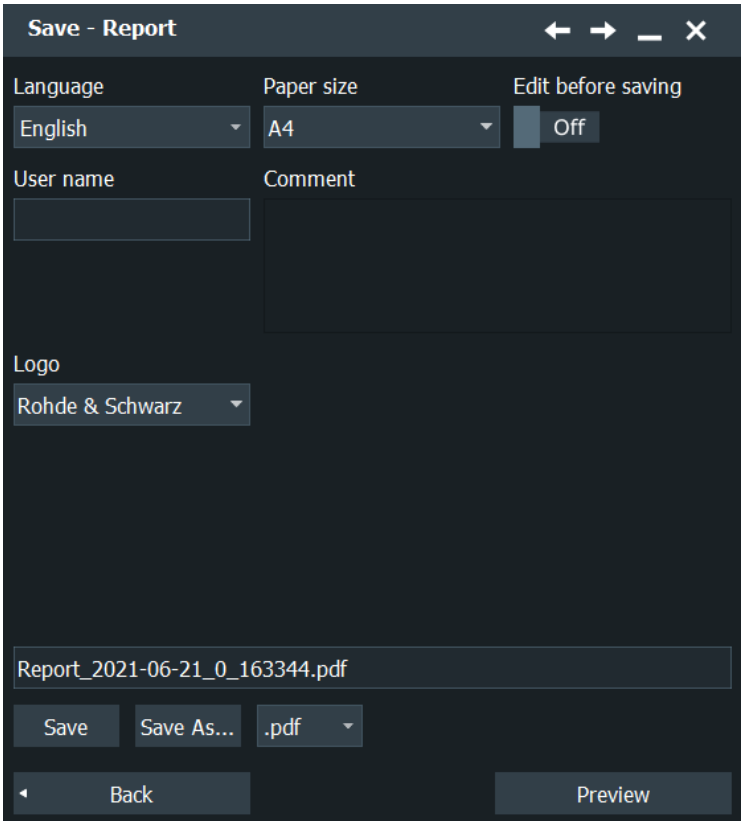

Language
Selects the language to be used in the report. Available languages are listed in the specifications document.

Remote command:
REPort:LANGuage on page 1800

Paper size
Selects the paper size: A4 or US Letter.

Remote command:
REPort:PAPersize on page 1801

Edit before saving
Enables you to edit the report info when you save reports using the [Camera] key. When you press the key, a dialog box opens where you can change the user name and the comment.

User name / Comment
Enter information that appears in the general information section at the beginning of the report.

Remote command:
REPort:USER on page 1801
REPort:COMMent on page 1802

Logo
By default, the Rohde & Schwarz logo is shown in the header of the report pages. You can switch the logo off, or select your logo to be shown. A preview of the selected log file is shown.

Remote command:
REPort:LOGType on page 1801
REPort:LOGO on page 1801

Save to file
Select the file format and define the filename of the report file. By default, the filename has the prefix "Report_".

Double-tap the filename to open the file selection dialog box.


"pdf/doc/html"	Selects the report format.
"Save"	Saves the current report to the specified file.
"Save As..."	Opens the file selection dialog box and saves the report to the selected file.

Remote command:
REPort:FILE:NAME on page 1802
REPort:FILE:SAVE on page 1802

Preview
Opens the current report in PDF format.

12.6 File selection dialog

The file selection dialog provides a file explorer from which you can select a file to load or to save data to. You can also manage your files in this dialog.

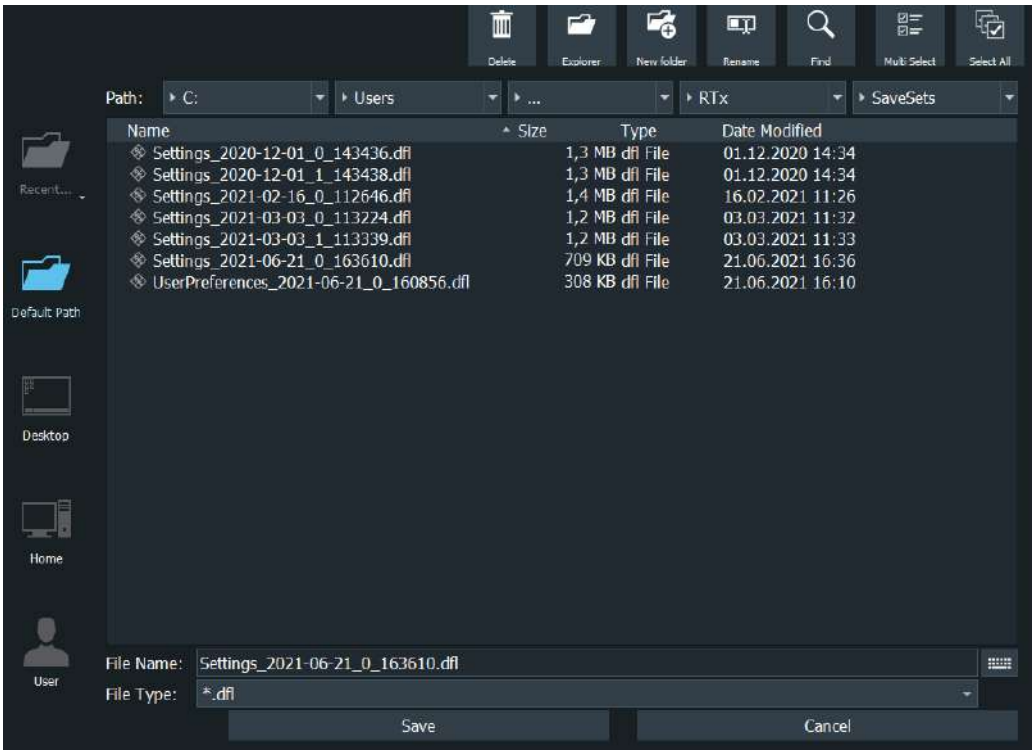

Path
Tap the path elements to change the current folder. The default folder is defined in Default path for all file operations.

You can save the data in a local folder on the instrument, to an external storage device (usually a USB flash drive), or to a folder on a connected network drive. The path list provides all available drives and folders.

On the left, shortcut icons provide access to often used folders.

Toolbar
The toolbar on the top provides various functions for file management.

File Name
The file name to be loaded or stored to. Double-tap the file name, or tap the keyboard icon to enter the file name using the online keyboard.

The default file name for new files is defined in the "Autonaming" tab, see Section 4.8.1, "Autonaming", on page 108.

File Type
The file extension of the file to be loaded or stored to.

Save, Select
Selects the specified file for the open or save operation and closes the dialog box.

Cancel
Closes the dialog box without selecting a file.


12.7 Video raster analysis (option R&S RTP-K129)

Video raster analysis can reconstruct image data from video signals. The option enables wide-bandwidth video signal acquisition and analysis up to the instrument's maximum bandwidth.

You can adjust the signal in the time domain to measure the signal frequencies, and apply them in the video raster application. The waveform is sliced in lines with the desired horizontal frequency and horizontal offset time to create the image. The rastered part of the signal is indicated by a gate on the signal waveform.

12.7.1 Settings for video raster

Access: "Menu" > "Apps" > "R&S Apps" tab > "Video raster" > "Setup" and "Save" tabs; or Toolbar > "Raster"

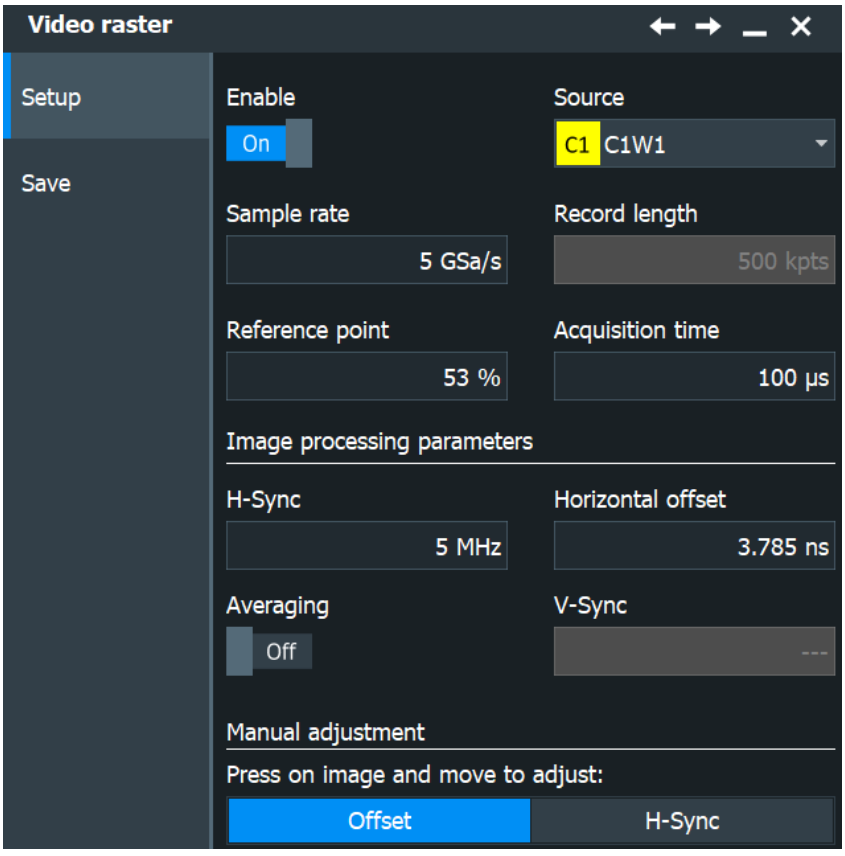

All raster settings are also available on the overlay menu.

Enable
Activates the raster processing.

Remote command:
`RASTer:STATe` on page 1807

Source
Selects the waveform to be processed to a raster image. One of the active analog channels, math or reference waveforms can be used as source.

Remote command:
`RASTer:SOURce` on page 1807

Sample rate, Record length, Reference point, Acquisition time
Horizontal and acquisition settings of the instrument. For details, see:

- "Sample rate" on page 129
- "Record length" on page 129
- "Reference point" on page 124
- "Acquisition time" on page 124

H-Sync
Sets the horizontal frequency of the video signal. It is the line frequency, the repetition rate of horizontal lines.

To determine this frequency, you can analyze the spectrum of the input signal. The second peak marks the required horizontal frequency.

Remote command:
`RASTer:HSYNc` on page 1806

Horizontal offset
Sets the time between the acquisition start and the image start.

Remote command:
`RASTer:OFFSet` on page 1807

Averaging
Improves the image quality by averaging multiple acquisitions. A stable and precise trigger condition is required to get exact results.

Remote command:
`RASTer:AVERaging` on page 1805

V-Sync
Sets the vertical frequency, also known as refresh rate. The value defines the height of the raster image.

Remote command:
`RASTer:VSYNc` on page 1808

Lines
Sets the number of horizontal lines in the raster image. The value defines the height of the raster image.

Lines = H-Sync / V-Sync

If you change the number of lines, the V-Sync value is adjusted, and vice versa. If you change H-Sync, the number of lines is also adjusted.

Remote command:
`RASTer:LINes` on page 1807

Manual adjustment: Offset or H-Sync
You can change the values of "H-Sync" or "Horizontal offset" by moving the image on the screen. To do so, select the value that you want to adjust. Then drag the image.

Save image to file
To save the image, select the "Save" tab.

Enter the filename of the image. Double-tap the filename to open the on-screen keyboard.

By default, the filename has the prefix "VideoRaster_". You can define a pattern for automatic naming in the "Autonaming" dialog, see Section 4.8.1, "Autonaming", on page 108.

"Save"	Saves the image in the selected file.
"Save As..."	Opens the file selection dialog and saves the image to the selected file. See also Section 12.6, "File selection dialog", on page 529.
".png/.jpg"	Selects the image format.

Remote command:
`RASTer:EXPort:PATH` on page 1805
`RASTer:EXPort:SAVE` on page 1806

12.7.2 Setting up the raster image

For a description of the settings, see Section 12.7.1, "Settings for video raster", on page 530.


To prepare the image analysis

1. Connect the video signal to a channel at the oscilloscope.
   We recommend using an R&S FSWT test receiver to capture the signal. Transfer the signal from the video output of the R&S FSWT to the channel input of the R&S RTP.
2. Adjust the acquisition and horizontal settings, in particular the horizontal scale, to get one image of the signal on the display.
3. Analyze the spectrum of the signal. The first peak indicates the vertical frequency, and the second peak indicates the horizontal frequency.


To reproduce the raster image

1. If you need the function repeatedly, include the "Video Raster" tool in your toolbar. See Section 3.3.6.2, "Configuring the toolbar", on page 57.
2. Select the "Raster" icon on the toolbar.
3. In the overlay menu, enter the horizontal frequency "H-Sync".
4. Enter the horizontal offset, the start time of the image in the signal.
5. Select "Source" and the source waveform. Alternatively, select "Draw" and tap the source waveform in the diagram.

   The initial raster image is created in a separate diagram and the overlay menu is closed.
6. Tap the signal icon of the raster image.
7. In the overlay menu, adjust the settings until you get a good image.
   You can change the values of "H-Sync" and "Horizontal offset" by moving the image. To do so, select the value to be changed in the overlay menu, and drag the image. If the horizontal frequency is not precisely set, you get a distorted image. The horizontal offset and the horizontal frequency define the part of the signal that is rastered to an image.

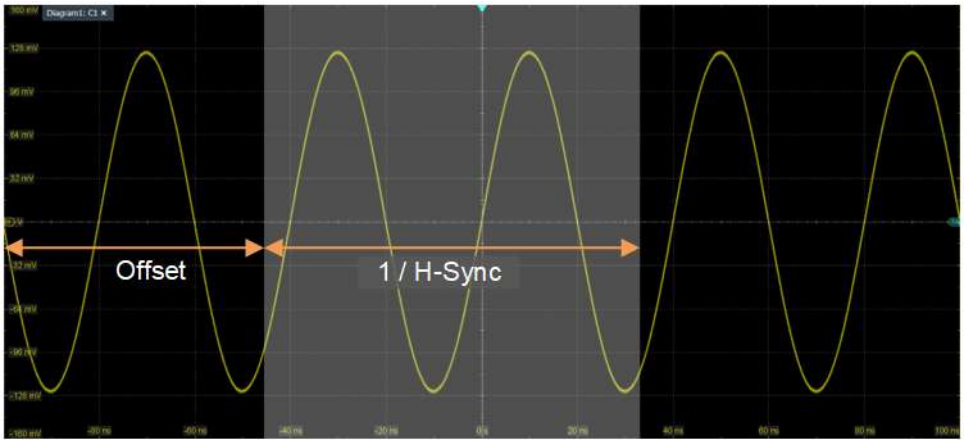   You can also start and stop acquisitions in the overlay menu.
   If you need to change horizontal and acquisition settings of the instrument, select "Advanced Setup".
8. When the setup is correct, save the image.
   "Save Image" in the overlay menu saves the image immediately. To change path and filename, select "Advanced Setup" > "Save" tab.



Edit raster
H-Sync
49.702421 kHz
Horizontal offset
33.106194719 ms
Averaging
Off
V-Sync
Run / Stop
Run Single
Save Image
Manual adjustment
Offset
H-Sync
Press on image and move to adjust the H-Sync
Advanced Setup
Diagram2: Ras1
The Quick Brown Fox
E
Diagram1: C3
C3W1
120 mV/
67.2 mV
DC 50 Ω
4 GHz
Ras1
49.702421 kHz
33.106194719 ms
C1
C2
C4
Logic
Math
FFT
Bus
Ref
Gen
Menu

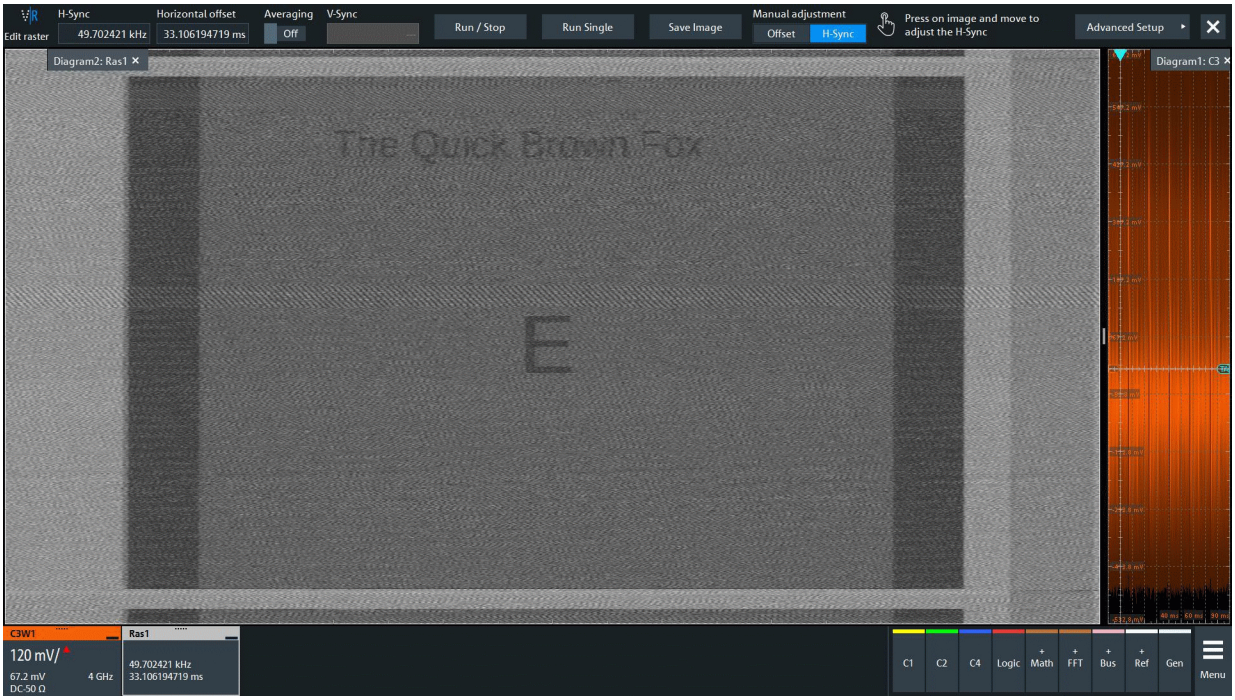13 Signal configuration

In the signal configuration dialog, you can set up a signal according to the used serial standard. Also you can set up a user-defined signal up to PAM-8 and define signal and reference levels.

13.1 Signal configuration setup

Access: "Menu" >"Apps" > "Signal Configuration" > "Setup" tab.

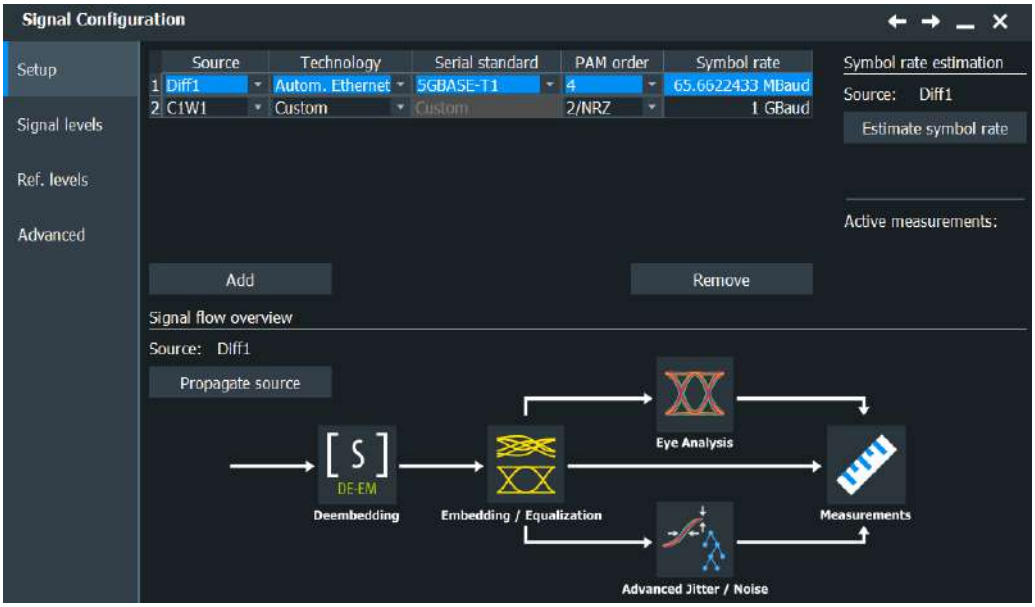

Source
Selects a source for the signal that you want to configure. Available sources are analog channels, math waveforms, reference waveforms, and differential and common waveforms of differential signals. You can define up to 20 sources.

Remote command:
`SIGNalconfig:SETup:SOURce` on page 1811

Technology, Serial standard
Selects the technology and the serial standard for the respective lane.

For some serial standards, the bit rate is known to the instrument. If you select the standard, the symbol rate for the analysis is set automatically.

The serial standards are available only if the instrument is able to support its maximum symbol rate.

Table 13-1: Requirements for maximum symbol rate

Instruments bandwidth	Number of active channels	Maximum acquisition mode	Maximum nominal symbol rate	
			R&S RTP-K136	R&S RTP-K137
Up to 8 GHz	1 channel	40 GSa/s	8 Gbit/s	8 Gbit/s
	2 channels: CH1 and CH3 or CH1 and CH4 or CH2 and CH3 or CH2 and CH4	Serial number > 103000: 40 GSa/s Serial number < 103000: 20 GSa/s		
	2 channels: CH1 and CH2 or CH3 and CH4	20 GSa/s		
	3 or 4 channels	20 GSa/s		
13 GHz, 16 GHz	1 channel	40 GSa/s	8 Gbit/s	16 Gbit/s
	2 channels: CH1 and CH3 or CH1 and CH4 or CH2 and CH3 or CH2 and CH4	40 GSa/s		
	2 channels: CH1 and CH2 or CH3 and CH4	20 GSa/s		8 Gbit/s
	3 or 4 channels	20 GSa/s		

Table 13-2: Technology and serial standard properties

Technology	Serial standard	PAM order	Symbol rate	SCPI abbreviation
ASA	Downstream SG1	2/NRZ	2 GBd	ADSG1
	Downstream SG2	2/NRZ	4 GBd	ADSG2
	Downstream SG3	2/NRZ	8 GBd	ADSG3
	Downstream SG4	4	6 GBd	ADSG4
	Downstream SG5	4	8 GBd	ADSG5
	Upstream SG1	2/NRZ	2 GBd	AUSG1
	Upstream SG2	2/NRZ	2 GBd	AUSG2
Automotive Ethernet	10BASE-T1S	2/NRZ	10 MBd	TBTS
	100BASE-T1	3	66.67 MBd	HBTO
	1000BASE-T1	3	750 MBd	TBTO
	2.5BASE-T1	4	1.4602 GBd	TPFGBTO
	5GBASE-T1	4	2.8125 GBd	FGBTO
	10GBASE-T1	4	5.6255 GBd	TGBTO

Technology	Serial standard	PAM order	Symbol rate	SCPI abbreviation
DisplayPort	Displayport 1.1 Displayport 1.2 Displayport 1.3 Displayport 1.4	2/NRZ	1.296 GBd 4.32 GBd 8.1 GBd 8.1 GBd	DISPPORT11 DISPPORT12 DISPPORT13 DISPPORT14
Ethernet	100BASE-TX 1000BASE-T	3 5	125 MBd 125 MBd	HBT TBT
Fibre Channel	Fibre Channel 1x Fibre Channel 2x Fibre Channel 4x Fibre Channel 8x Fibre Channel 16x	2/NRZ	1 GBd 2 GBd 4 GBd 8 GBd 14.025 GBd	FIBCHAN1 FIBCHAN2 FIBCHAN4 FIBCHAN8 FIBCHAN16
GMSL	GMSL1 GMSL2 (3 Gbit/s) GMSL2 (6 Gbit/s) GMSL3 (6 Gbit/s) GMSL3 (12 Gbit/s)	2/NRZ 2/NRZ 2/NRZ 4 4	3 GBd 3 GBd 6 GBd 3 GBd 6 GBd	GMSL1 GMSL23G GMSL26G GMSL36G GMSL312G
HDMI	HDMI 1.2 HDMI 1.4 HDMI 2.0	2/NRZ	1.32 GBd 3.4 GBd 4.8 GBd	HDMI12 HDMI14 HDMI20
MII	USXGMII XFI	2/NRZ	322.27 MBd 10.3125 GBd	USXGMII XFI
PCIe	PCIe Gen 1 PCIe Gen 2 PCIe Gen 3 PCIe Gen 4	2/NRZ	2.5 GBd 5 GBd 8 GBd 16 GBd	PCIGEN1 PCIGEN2 PCIGEN3 PCIGEN4
SAS	SAS Gen 1 SAS Gen 2 SAS Gen 3	2/NRZ	3 GBd 6 GBd 12 GBd	SASGEN1 SASGEN2 SASGEN3
SATA	SATA Gen 1 (1/500) SATA Gen 1 (1/1667) SATA Gen 1 SATA Gen 2 (1/500) SATA Gen 2 (1/1667) SATA Gen 2	2/NRZ	1.5 GBd 1.5 GBd 1.5 GBd 3 GBd 3 GBd 3 GBd	SATAGEN1500 SATAGEN11667 SATAGEN1 SATAGEN2500 SATAGEN21667 SATAGEN2
SpaceFibre	SpaceFibre 1x SpaceFibre 2x SpaceFibre 4x		6.25 GBd 12.5 GBd 25 GBd	SFIB1 SFIB2 SFIB4
Thunderbolt	Thunderbolt 10G	2/NRZ	10.3125 GBd	TB10G

Technology	Serial standard	PAM order	Symbol rate	SCPI abbreviation
USB	USB 2.0 USB 3.2 Gen 1 USB 3.2 Gen 2 USB 4.0	2/NRZ 2/NRZ 2/NRZ 4	480 MBd 5 GBd 10 GBd 25.6 GBd	USB20 USB32GEN1 USB32GEN2 USB40
XAUI	XAUI	2/NRZ	3.75 GBd	XAUI

Remote command:
SIGNalconfig:SETup:SETTing<m>:SERStandard on page 1810

PAM order
Available for option R&S RTP-K135.

Selects the PAM order. You can select a value up to 8. For some serial standards there is a pre defined value for the PAM order, see Technology and serial standard properties.

Remote command:
SIGNalconfig:SETup:SETTing<m>:PAMorder on page 1809

Symbol rate
Sets or displays the symbol rate. Most standards have a predefined symbol rate, see Technology and serial standard properties.

Remote command:
SIGNalconfig:SETup:SETTing<m>:SYMBolrate on page 1810

AddWaveFormAnalyzer.SignalConfigurationProperties.SignalConfiguration
Adds a new signal to be configured. You can define up to 20 sources.

Remote command:
SIGNalconfig:SETup:ADD on page 1808
SIGNalconfig:SETup:COUNt? on page 1809

Remove
Removes the last signal from the table.


Remote command:
SIGNalconfig:SETup:REMove on page 1809

Estimate symbol rate
Starts a software algorithm for the automatic determination of the symbol rate for the selected "Source".

Remote command:
SIGNalconfig:SETup:SOURce on page 1811
SIGNalconfig:SETup:SREStimation on page 1811

13.2 Signal flow overview

The signal flow overview informs on further analysis that can be done on your signal. The buttons open the corresponding dialogs.

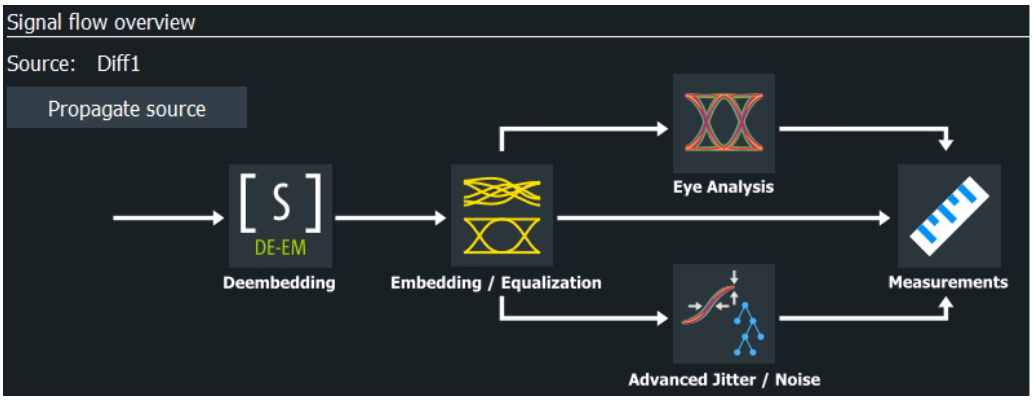

Depending on your available options, you can perform:

- Deembedding (option R&S RTP-K121), see Section 21, "Deembedding (option R&S RTP-K121/-K122)", on page 1183.
- Embedding / Equalization (option R&S RTP-K126), see Section 22, "Embedding and equalization (option R&S RTP-K126)", on page 1208.
- Eye Analysis (option R&S RTP-K136/K137), see Section 20, "Advanced eye diagram analysis (option R&S RTP-K136/K137)", on page 1157.
- Advanced Jitter / Noise (option R&S RTP-K133 or R&S RTP-K134), see Section 19.2, "Advanced jitter and noise (option R&S RTP-K133/K134)", on page 1110.
- Measurements, see Section 8.2, "Automatic measurements", on page 332.

Propagate source
The source of the selected lane is propagated to all inactive application measurements (e.g. inactive eye diagrams) that are shown in the flow overview. Measurements, deembedding and active application measurements are not affected by propagation.

Remote command:
`SIGNalconfig:SETup:PROPagate` on page 1809

13.3 Signal and reference levels for NRZ signals


Some measurement require reference levels to obtain the measurement points, e.g. time measurements or pulse count. Reference levels are referred to the signals, for each waveform you can define specific reference levels. Thus, for all measurements on a waveform the same reference levels are used.

Usually, reference levels are determined automatically. The instrument determines the high and low signal levels based on amplitude and histogram measurements of the acquisition. The reference levels are set relatively to the determined signal levels.

However, for irregular data and in special measurement setups it may be useful to configure the levels manually:

- Data signals can contain intervals where no data is transmitted, so that a high and low state cannot be determined for each acquisition. In this case, you can define the high and low signal levels manually to evaluate other measurement results.
- If the signal levels vary strongly or have large overshoots, the rise and fall levels may be difficult to determine.
- If fixed levels are defined for the DUT, you can configure the reference levels in the R&S RTP correspondingly and analyze the resulting measurement data.

In manual configuration, the reference levels can be set relatively to defined signal levels or as absolute values. You can also set the reference levels directly.

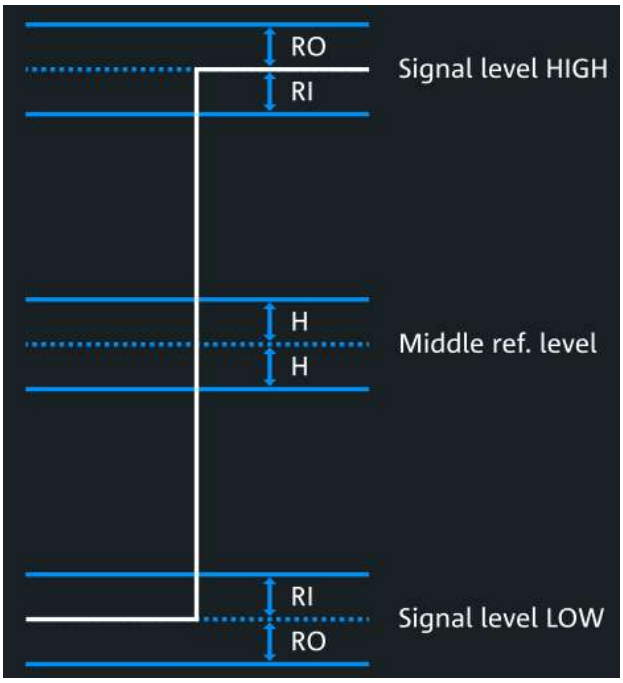

In addition to reference and signal levels, you can define a hysteresis for the middle reference level and tubes for signal levels. Hysteresis is useful for measurements that determine zero-crossings. Period, frequency, and pulse measurements are based on hysteresis - the instrument returns results if the amplitude of the signal exceeds the hysteresis. Thus, measurement during the transient oscillation is also possible. Tubes define evaluation ranges for measurements that require detection of the high level or low level. If the signal value remains within the defined tubes, it is considered to be high or low.

Reference levels and result lines can be displayed in the diagram, see "To display reference levels and result lines" on page 542.

13.3.1 Configuring reference levels

To determine reference and signal levels automatically

By default, the histogram of the measurement data is evaluated to determine the required levels automatically. However, you can define several parameters to adapt the evaluation to your data.

1. Open "Menu" >"Apps" > "Signal Configuration" > "Setup" tab.
2. Define the "Source", the waveform for which the reference is defined. The source can be any signal input, math or reference waveform.
3. In the "Signal levels" tab, select "Level detection mode" = "Auto" .
4. Define the "Auto level mode", the method which is used to determine the signal levels. For details, see "Auto level mode" on page 544.
5. By default, the lower reference level is defined at 10% of the signal amplitude, the middle reference level at 50% and the upper reference level at 90%.
   In the "Ref. levels" tab, you can select other "Relative levels" to be used for evaluation.
   If default percentages do not fit, select "User defined" and enter the percentages for the upper, middle, and lower reference levels.
   The signal levels are determined by the instrument.
6. To determine the reference levels using average values from several histograms, enable the "Histogram averaging" option and define an "Average Count" to define how many histograms are averaged.
   Averaging is not available if "Absolute peak" are selected as the "Signal level".

To determine reference levels manually

You can configure the reference levels manually as fixed absolute or relative values.

1. Open "Menu" >"Apps" > "Signal Configuration" > "Setup" tab.
2. Define the "Source", the waveform for which the reference levels are defined. The source can be any signal input, math or reference waveform.
3. In the "Signal levels" tab, select "Level detection mode" = "Manual" .
4. Open the "Ref. levels" tab.
5. Under "Level mode", select whether you want to define the levels using absolute or relative values.
6. Under "User level", select whether you want to configure the high and low signal levels ("Signal") or the lower, middle and upper reference levels ("Reference").
7. To define high and low signal levels if "Signal" is selected:

a) If "Level mode" is relative, select one of the predefined "Relative levels". If default percentages do not fit, select "User defined" and enter the percentages for the upper, middle, and lower reference levels.
The upper and lower reference levels are computed from the signal level values and the percentage values.
b) If "Level mode" is absolute, set the absolute "Top distance" and "Bottom distance" values, the differences between signal and reference levels.
The upper and lower reference levels are computed from the signal level values and the distances.
c) Open the "Signal levels" tab.
d) Enter the absolute high and low signal levels.

8. To define lower, middle and upper reference levels if "User level" = "Referene" is selected:
   a) Enter the absolute upper and lower reference levels.
   b) If "Level mode" is relative, select one of the predefined "Relative levels". If default percentages do not fit, select "User defined" and enter the percentages for the upper, middle, and lower reference levels.
   The high and low signal levels are computed from the reference level values and the percentage values.
   c) If "Level mode" is absolute, set the absolute "Top distance" and "Bottom distance" values, the differences between signal and reference levels.
   The high and low signal levels are computed from the reference level values and the distances.

To define hysteresis and tubes

1. To define a hysteresis for the middle reference level:
   a) In the "Signal configuration" dialog, select the "Advanced" tab.
   b) In the "Hysteresis (H)" field, enter a percentage of the selected signal level.

   A rise or fall from the middle reference value that does not exceed the hysteresis is rejected and not considered a zero-crossing.

2. To define a tube for the high and low signal levels:
   a) Set the "Level definition" to "Relative".
   b) In the "Relative outer (RO)" field, define a percentage of the signal level by which the absolute signal level may be larger than high signal level or lower than the low signal level.
   c) In the "Relative inner (RI)" field, define a percentage of the signal level by which the absolute signal level may be higher than the low signal level or lower than the high signal level.

To display reference levels and result lines

1. Open "Menu" > "Measure" > "Advanced" tab.
2. Select the tab for the measurement you want to configure.

3. Enable "Result lines" or "Reference levels" option, or both.

   The reference levels and intermediate results are displayed in the waveform diagram.

13.3.2 Signal level settings

Access: "Menu" > "Apps" > "Analysis" tab > "Signal Configuration" > "Signal level" tab.

Automatic level detection mode

In automatic level detection mode, the reference levels are always relative values. You can select one of the predefined sets, or define individual percentage values.

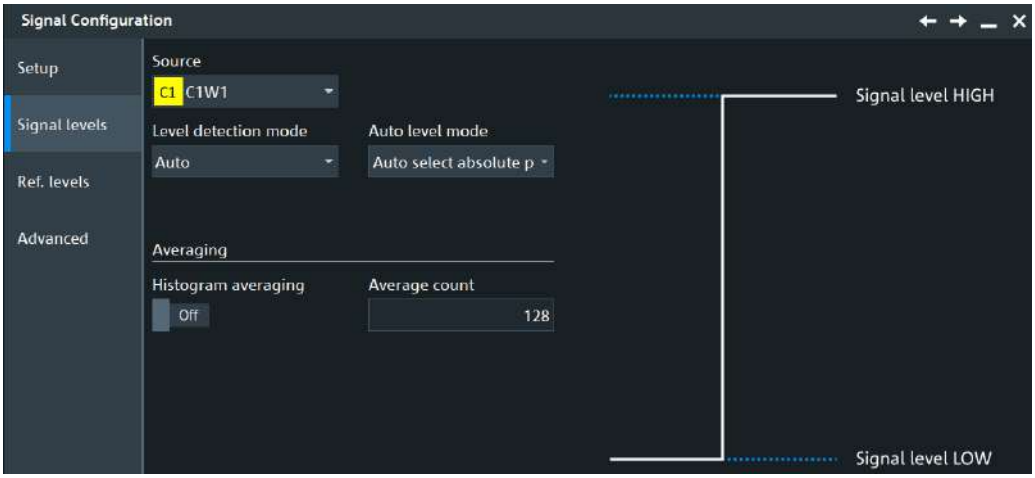


Figure 13-1: Automatic signal level definition

Manual reference level mode

In manual reference level mode, relative and absolute level definitions are possible.

In manual reference level mode with relative level definition, you define the absolute values of high and low signal levels or reference levels, and the reference levels as percentages of the signal amplitude.



Figure 13-2: Manual signal level definition

Source
Defines the source for which the reference levels are defined. The source can be any signal input, math or reference waveform.

Remote command:
Source is defined by suffix <rl> in "REFLevel" subsystem, see Section 26.17.2, "Signal and reference levels for NRZ signals", on page 1811.

Level detection mode
Defines whether the reference level is configured manually or automatically.

Remote command:
`REFLevel<rl>:LDETection` on page 1812

Auto level mode
Defines the computation method for high and low signal levels. The instrument analyzes the signal, performs amplitude and histogram measurements, and defines the signal levels using the selected method.

The selected method is used to compute the signal levels for determination of reference levels in automatic reference level mode. It is also used for high, low, and amplitude measurements in automatic and manual reference level modes.

See also: Section 8.2.6, "Histogram measurements", on page 375

"Auto select absolute probability"	The most suitable signal levels for the selected measurement are used.
"Peak probability"	The signal levels with the highest probability values are used. These are the upper peak value and the lower peak value of the histogram measurement.
"Mean probability"	The signal levels with mean probabilities are used.
"Absolute peak"	The absolute peak signal levels are used. These are the maximum and minimum signal values of the amplitude measurement.

"Upper absolute peak - Lower mean probability"	The high signal level is the upper absolute peak (the maximum signal level), and the low signal level is the level with the mean probability in the lower half of the histogram.
"Upper mean probability - Lower absolute peak"	The high signal level is the level with mean probability in the upper half of the histogram, and the low signal level is the lower absolute peak (the minimum signal level).
"Upper absolute peak - Lower manual"	The high signal level is the maximum result value of the amplitude measurement. The low signal level is manually set using "Low".
"Upper manual - Lower absolute peak"	The high signal level is set manually using "High". The low signal level is the minimum result value of the amplitude measurement.

Remote command:
`REFLevel<rl>:AUTO:MODE` on page 1814

High
Sets the high signal level.

The high signal level is set in manual reference level mode, for absolute level definition and user signal level selection.

Remote command:
`REFLevel<rl>:ABSolute:HIGH` on page 1816

Low
Sets the low signal level.

The low signal level is set in manual reference level mode, for absolute level definition and user signal level selection.

Remote command:
`REFLevel<rl>:ABSolute:LOW` on page 1816

Histogram averaging
Enables averaging over several histograms to determine the reference levels.

This function is only available in automatic level mode.

Remote command:
`REFLevel<rl>:AUTO[:STATe]` on page 1815

Average Count
Defines the number of histograms to calculate the average from.

This function is only available in automatic level mode.

Remote command:
`REFLevel<rl>:AUTO:COUNt` on page 1815

13.3.3 Reference level settings

Access: "Menu" > "Apps" > "Analysis" tab > "Signal Configuration" > "Ref.levels" tab.

The following setups are available, according to the selected "Level detection mode":

Automatic reference level mode

In automatic reference level mode, the reference levels are always relative values. You can select one of the predefined sets, or define individual percentage values.

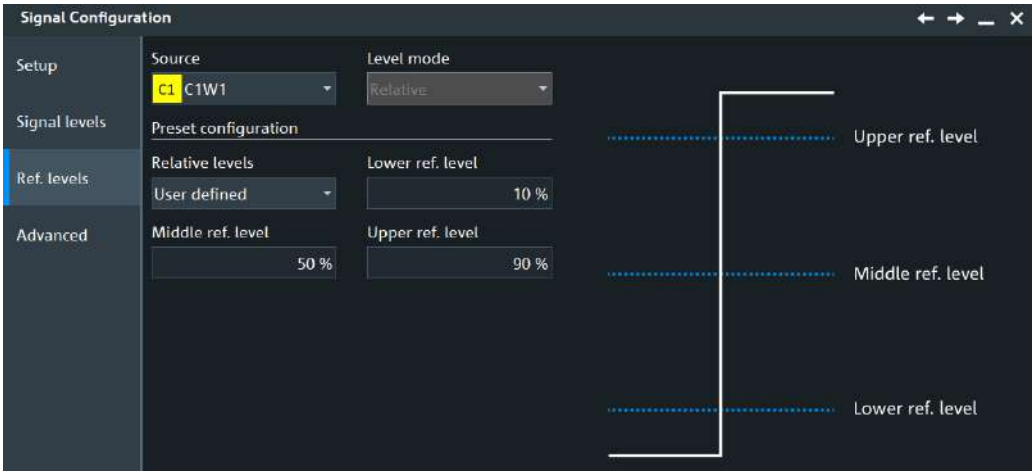


Figure 13-3: Automatic reference level definition

Manual reference level mode

In manual reference level mode, relative and absolute level definitions are possible.

In manual reference level mode with relative level definition, you define the absolute values of high and low signal levels or reference levels, and the reference levels as percentages of the signal amplitude.

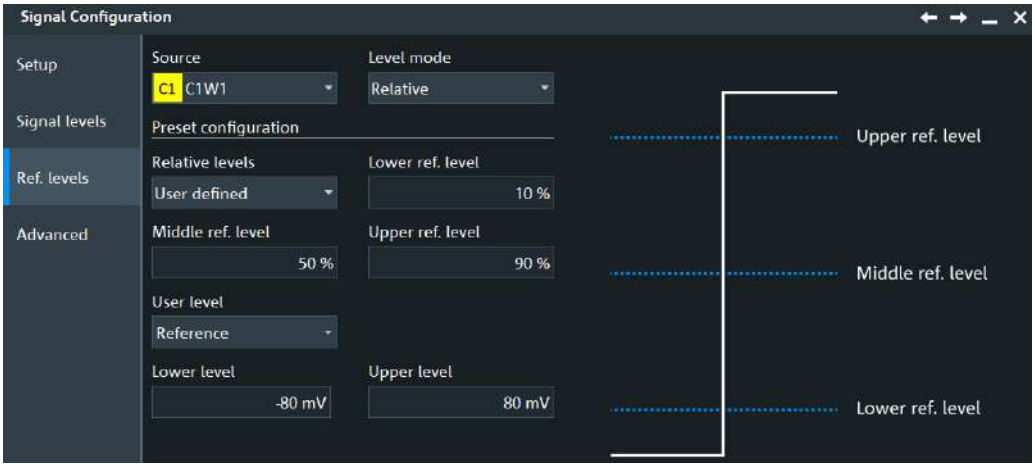


Figure 13-4: Automatic level detection mode, relative reference level definition

In manual reference level mode with absolute level definition, you define the absolute values of high and low signal levels or reference levels, and the distances between reference and signal levels.



Figure 13-5: Automatic level detection mode, absolute reference level definition

Source
Defines the source for which the reference levels are defined. The source can be any signal input, math or reference waveform.

Remote command:
Source is defined by suffix <rl> in "REFLevel" subsystem, see Section 26.17.2, "Signal and reference levels for NRZ signals", on page 1811.

Level mode
For manual "Level detection mode" , the setting defines whether the reference is configured using absolute or relative values.

Remote command:
`REFLevel<rl>:LMODe` on page 1812

Relative levels
Sets the lower, middle and upper reference levels, defined as percentages of the signal amplitude.

Available relative levels:

- 5/50/95
- 10/50/90
- 20/50/80
- User defined: Enter "Upper ref level", "Middle ref level", and "Lower ref level".

For example, for "5/50/95" the levels are set to the following values:

- Lower reference level = 5% of the signal amplitude
- Middle reference level = 50% of the signal amplitude
- Upper reference level = 95% of the signal amplitude

Remote command:
`REFLevel<rl>:RELative:MODE` on page 1812

Upper ref level, Middle ref level, Lower ref level
Define the reference levels in percent, if "Relative levels" is set to "User-defined".

Remote command:
REFLevel<rl>:RELative:UPPer on page 1819
REFLevel<rl>:RELative:MIDDle on page 1820
REFLevel<rl>:RELative:LOWer on page 1820

User level
In manual reference level mode, the setting defines whether the user-defined signal levels or user-defined reference levels are used for the measurements.

"Signal" You can define the high and low signal levels.

"Reference" You can define the reference levels.

Remote command:
REFLevel<rl>:USRLevel on page 1813

Upper level
The upper reference level required, for example, to determine a rise - for manual reference level mode, absolute level definition and user reference level.

Remote command:
REFLevel<rl>:ABSolute:ULEVel on page 1818

Lower level
The lower reference level required, for example, to determine a fall - for manual reference level mode, absolute level definition and user reference level.

Remote command:
REFLevel<rl>:ABSolute:LLEVel on page 1819

Bottom distance
The distance between the lower reference level and the low signal value - for manual reference level mode and absolute level definition.

Remote command:
REFLevel<rl>:ABSolute:BDIStance on page 1817

Top distance
The distance between the high signal level and the upper reference level - for manual reference level mode and absolute level definition.

Remote command:
REFLevel<rl>:ABSolute:TDIStance on page 1817

Middle
For user signal level selection, the level is the middle level between high and low signal level. The value is adjusted automatically if you change the high or low signal levels. Vice versa, if you change the middle level, the high and low signal levels are adjusted.


For user reference level selection, the level is the middle level between upper and lower reference level. The value is adjusted automatically if you change the upper or lower reference levels. Vice versa, if you change the middle level, the upper and lower reference levels are adjusted.

Remote command:
REFLevel<rl>:ABSolute:MLEVel on page 1818

13.3.4 Advanced tab

Access: "Menu" > "Apps" > "Analysis" tab > "Signal Configuration" > "Advanced" tab.

This tab allows you to define evaluation tubes for measurements that require high-level or low-level detection. If the signal value remains within the defined tubes, it is considered to be high or low.

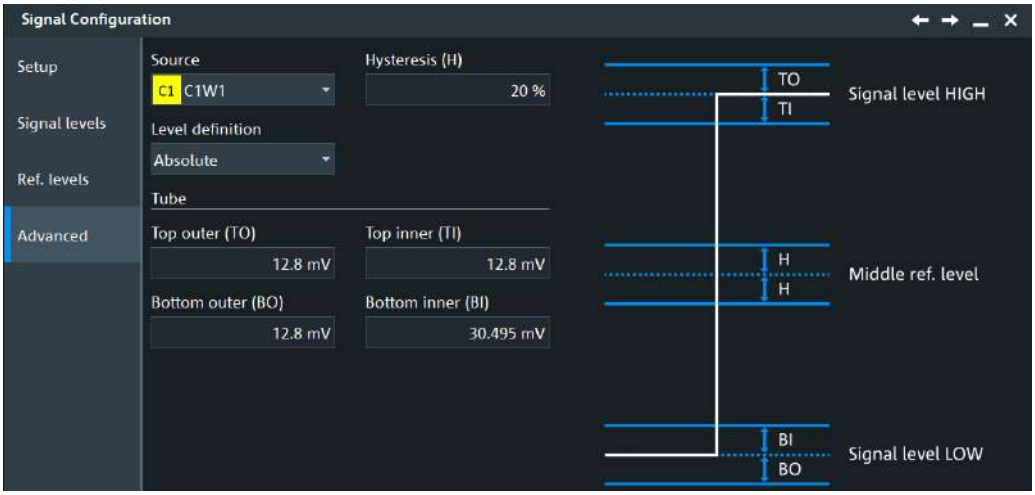

See also: Source and Level mode.

Hysteresis
Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Remote command:
`REFLevel<rl>:RELative:HYSTeresis` on page 1821

Top outer
Defines an area above the high signal level which is still considered to be high level.

Remote command:
`REFLevel<rl>:ABSolute:TOTube` on page 1822
`MEASurement<mg>:REFLevel:RESult:TOUTer?` on page 1825

Top inner
Defines an area beneath the high signal level which is still considered to be high level.

Remote command:
`REFLevel<rl>:ABSolute:TITube` on page 1822
`MEASurement<mg>:REFLevel:RESult:TINNer?` on page 1825

Bottom inner
Defines an area above the low signal level which is still considered to be low level.

Remote command:
`REFLevel<rl>:ABSolute:BITube` on page 1823
`MEASurement<mg>:REFLevel:RESult:BINNer?` on page 1824

Bottom outer
Defines an area beneath the low signal level which is still considered to be low level.

Remote command:
`REFLevel<rl>:ABSolute:BOTube` on page 1823
`MEASurement<mg>:REFLevel:RESult:BOUTer?` on page 1824

Relative outer
Defines a percentage of the signal level by which the absolute signal level may be larger than the high signal level or lower than the low signal level to be considered high or low, respectively.

Remote command:
`REFLevel<rl>:RELative:OTUBe` on page 1821

Relative inner
Defines a percentage of the signal level by which the absolute signal level may be higher than the low signal level or lower than the high signal level to be considered low or high, respectively.

Remote command:
`REFLevel<rl>:RELative:ITUBe` on page 1822

13.4 Signal configuration for PAM-N signals (R&S RTP-K135)

Requires option R&S RTP-K135.

The following sections describe the signal and reference level definition of signals with PAM order > 2.

Pulse Amplitude Modulation (PAM) enables higher data rates on interfaces such as Ethernet, Fibre Channels or PCI express. It is a way to pack more bits into the same amount of time on a serial channel. The traditional mechanism for serial communication is the binary Non-return-to-zero (NRZ) using two voltage levels to transmit bit information.

PAM-4, for example, uses four voltage levels and can thus transmit the double amount of data with the same baud rate and the same bandwidth of a signal channel.

With the R&S RTP, the option R&S RTP-K135 extends the following base measurements and applications:

- Amplitude/time measurements
- Basic Jitter option R&S RTP-K12
- Advanced Jitter & Noise option R&S RTP-K133/R&S RTP-K134
- Advanced Eye option K136/K137

13.4.1 Signal levels

Access: "Menu" >"Apps" > "Signal Configuration" > "Signal levels" tab.

In this dialog, you can configure several signal levels depending on the PAM order of your signal. The signal levels refer to the discrete amplitudes that the PAM signal can take based on the digital data being transmitted.

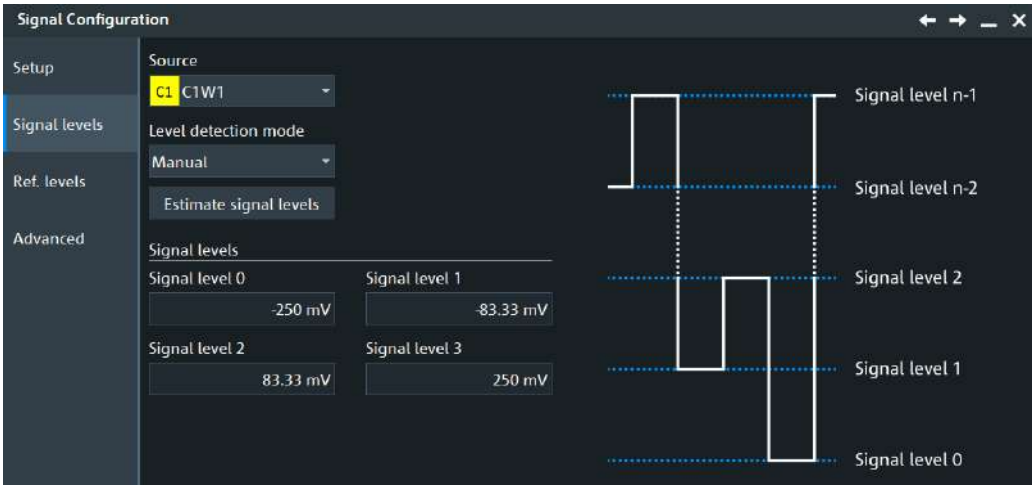


Figure 13-6: Signal levels settings for PAM order = 4 signals

Source
Defines the source for which the reference levels are defined. The source can be any signal input, math or reference waveform.

Remote command:
Source is defined by suffix <rl> in "REFLevel" subsystem, see Section 26.17.2, "Signal and reference levels for NRZ signals", on page 1811.

Level detection algorithm
Selects the algorithm that defines how the signal levels are detected.

Remote command:
`REFLevel<rl>:PAMSignal:LVLalgorithm` on page 1832

Estimate signal levels
Starts a software algorithm for the automatic determination of the signal level. The values are displayed in "Signal level n".

Remote command:
`REFLevel<rl>:PAMSignal:ESTimate` on page 1831

Signal levels
Sets the signal levels for the discrete amplitudes that the PAM signal can take based on the digital data being transmitted. The number of signal levels available depends on the PAM order of the signal.

For example, in a 4-order PAM, there are four signal levels:"Signal level 0", "Signal level 1", "Signal level 2", "Signal level 3", "Signal level 4".

Remote command:
REFLevel<rl>:PAMSignal:LEVel<n> on page 1831

13.4.2 Reference levels

Access: "Menu" >"Apps" > "Signal Configuration" > "Reference levels" tab.

In this dialog you can set reference levels of the signal. For each waveform, you can define specific reference levels. Thus, for all measurements on a waveform the same reference levels are used.

The reference levels can be set relatively to defined signal levels or as absolute values. You can also set the reference levels directly.

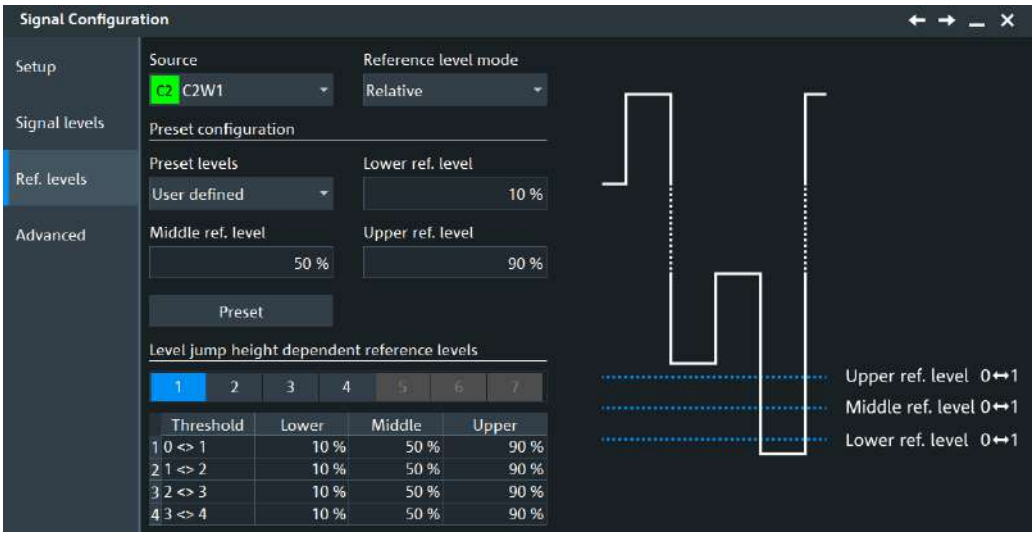


Figure 13-7: Reference levels settings for PAM order = 4 signals

Source
Defines the source for which the reference levels are defined. The source can be any signal input, math or reference waveform.

Remote command:
Source is defined by suffix <rl> in "REFLevel" subsystem, see Section 26.17.2, "Signal and reference levels for NRZ signals", on page 1811.

Referenc level mode
Selects if the reference levels are defined in absolute or relative values.

Remote command:
REFLevel<rl>:PAMReference:LVLDef on page 1826

Preset levels
Sets the lower, middle and upper reference levels, defined as percentages of the signal amplitude.

Available relative levels:

- 5/50/95
- 10/50/90
- 20/50/80
- User-defined: Enter "Upper ref level", "Middle ref level", and "Lower ref level".

For example, for "5/50/95" the levels are set to the following values:

- Lower reference level = 5% of the signal amplitude
- Middle reference level = 50% of the signal amplitude
- Upper reference level = 95% of the signal amplitude

Remote command:
`REFLevel<rl>:PAMReference:RELLevel` on page 1830

Upper ref level, Middle ref level, Lower ref level
Define the reference levels in percent, if "Preset levels" is set to "User-defined".

Remote command:
`REFLevel<rl>:PAMReference:UPPer` on page 1830
`REFLevel<rl>:PAMReference:MIDDle` on page 1829
`REFLevel<rl>:PAMReference:LOWer` on page 1826

Preset
Presets the levels in the "Level jump height dependent reference levels" according to the value of the selected "Preset levels".

Remote command:
`REFLevel<rl>:PAMReference:PRESet` on page 1830


Level jump height dependent reference levels
Sets the reference level of the signal for each transition ("Threshold").

At the upper tab, you can select the height of the level jump.

Remote command:
`REFLevel<rl>:PAMSignal:LEVel<n>` on page 1831
`REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSLower` on page 1827
`REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSMiddle` on page 1827
`REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSupper` on page 1827
`REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELLower` on page 1828
`REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELMiddle` on page 1828
`REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELupper` on page 1829

13.4.3 Advanced tab

Access: "Menu" >"Apps" > "Signal Configuration" > "Reference levels" tab.

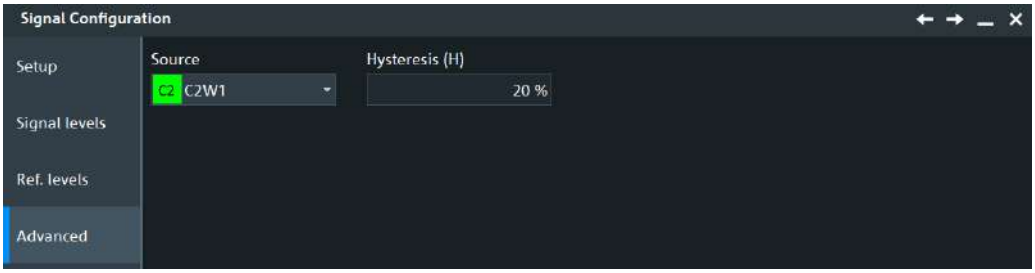

Source
Defines the source for which the reference levels are defined. The source can be any signal input, math or reference waveform.

Remote command:
Source is defined by suffix <rl> in "REFLevel" subsystem, see Section 26.17.2, "Signal and reference levels for NRZ signals", on page 1811.

Hysteresis
Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Remote command:
`REFLevel<rl>:RELative:HYSTeresis` on page 1821

14 Protocol analysis

Using the serial protocol options for the R&S RTP, you can analyze various serial protocols.

- Basics of protocol analysis....555
- I²C (option R&S RTP-K1)....565
- I3C (option R&S RTP-K45)....580
- SPI bus (option R&S RTP-K1)....595
- UART/RS-232/RS-422/RS-485 (option R&S RTP-K2)....606
- CAN and CAN FD (option R&S RTP-K3/K9)....615
- CAN-XL (option R&S RTP-K77)....641
- LIN (option R&S RTP-K3)....653
- MIL-1553 (option R&S RTP-K6)....667
- ARINC 429 (option R&S RTP-K7)....684
- Ethernet 10BASE-T and 100BASE-TX (option R&S RTP-K8)....697
- 10BASE-T1S (automotive Ethernet, option R&S RTP-K56)....712
- Ethernet 100BASE-T1 (option R&S RTP-K57)....726
- Ethernet 1000BASE-T1 (option R&S RTP-K58)....744
- RFFE (option R&S RTP-K40)....762
- D-PHY (option R&S RTP-K42)....783
- M-PHY and USB SSIC (option R&S RTP-K44 and K64)....800
- Custom: Manchester / NRZ (option R&S RTP-K50)....830
- 8b/10b (option R&S RTP-K52)....863
- MDIO (option R&S RTP-K55)....876
- USB (option R&S RTP-K60)....889
- USB 3.1 (option R&S RTP-K61/K62)....916
- USBPD (option R&S RTP-K63)....938
- SpaceWire (option R&S RTP-K65)....952
- PCIe (option R&S RTP-K72/K73)....963
- DDR (option R&S RTP-K91/K93/K94/K95)....998

14.1 Basics of protocol analysis

Before you can analyze a serial signal, the bus has to be configured according to the protocol and specifics of the signal. The configuration contains:

- Assignment of the data and clock lines to the input channels
- Logical thresholds
- Protocol-specific settings

Serial data can be analyzed in several ways:

- Triggering: You can trigger on various events that are typical for the selected protocol type, for example, on start and stop of messages, or on specified data patterns in the message.
  Triggering on a trigger event sequence is not supported, and holdoff settings are not available.

- Protocol decoding: The digitized signal data is displayed on the screen together with the decoded content of the messages in readable form, and the decode results are listed in a table.
- Search on decoded signal data: For most serial protocols, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, because several event types can be combined. Thus, you get the results for the complete acquisition cycle.

Restrictions:

- Protocol analysis does not work if the "Decimation" is set to "High res".
- All serial protocols are disabled in roll mode.


14.1.1 Setup - general settings

For all protocols, configuration starts with the selection of the serial bus and the protocol.

Table 14-1: Configuration settings are protocol-specific. They are described in the related chapters:

ARINC 429	Section 14.10.2, "ARINC 429 configuration", on page 685
CAN, CAN FD	Section 14.6.2, "CAN and CAN FD configuration", on page 615
Custom: Manchester / NRZ	Section 14.18.2, "Custom: Manchester / NRZ configuration", on page 832
Ethernet 10BASE-T and 100BASE-TX	Section 14.11.2, "Ethernet configuration", on page 697
Ethernet 100BASE-T1	Section 14.13.2, "100BASE-T1 configuration", on page 727
Ethernet 1000BASE-T1	Section 14.14.2, "1000BASE-T1 configuration", on page 744
I²C	Section 14.2.2, "I²C configuration", on page 567
LIN	Section 14.8.2, "LIN configuration", on page 655
MDIO	Section 14.20.2, "MDIO configuration", on page 878
MIL-1553	Section 14.9.2, "MIL-STD-1553 configuration", on page 670
MIPI D-PHY	Section 14.16.2, "D-PHY configuration", on page 783
MIPI M-PHY	Section 14.17, "M-PHY and USB SSIC (option R&S RTP-K44 and K64)", on page 800
MIPI RFFE	Section 14.15.2, "RFFE configuration", on page 764
SpaceWire	Section 14.24.2, "SpaceWire configuration", on page 953
SPI	Section 14.4.2, "SPI configuration", on page 596
UART	Section 14.5.2.1, "UART configuration settings", on page 606
USB	Section 14.21.2, "USB 2.0 configuration", on page 895
USB 3.1	Section 14.22.2, "USB 3.1 configuration", on page 925
USB PD	Section 14.23.2, "USBPD configuration", on page 940
USB SSIC	Section 14.17.2, "M-PHY configuration", on page 802

8b/10b	Section 14.19.2, "8b/10b configuration", on page 864
DDR3/DDR4	Section 14.26.1, "DDR configuration", on page 999

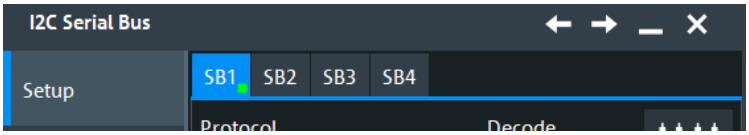

Make sure that the tab of the correct serial bus is selected.

Protocol
Defines the protocol type of the selected serial bus.

Remote command:
`BUS<b>:TYPE` on page 1833

Decode
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`BUS<b>[:STATe]` on page 1833

14.1.2 Autoset for protocols

If you want to perform a quick protocol measurement, you can use the "Autoset" function. It allows you to find the correct instrument settings for the desired protocol. It displays at least one decoded frame after the execution.

Performing a protocol autoset

1. Press [Bus] on the front panel.
2. Select the bus you want to configure.
3. Select the "Setup" tab.
4. Tap the "Protocol" you want to configure.
5. Assign the sources for the input channels.
6. Press the "Autoset" button.

"Autoset" performs the following steps:

- Executes "Autoset" for the horizontal and vertical scale.
- Adjusts the horizontal scale to display at least one frame or packet .
- Executes "Find thresholds" to determine the thresholds.
- If necessary, performs bit rate estimation.
- Sets default protocol trigger (frame start) .

- Turns on the protocol decoder.

Remote command:


`BUS<b>:FAUToset` on page 1834

There are some limitations for the autoset:

- It is not available, if the digital MSO channels are selected as a source for the waveform.
- Signals with longer idle phases might not find horizontal adjustment.
- On duplex signals, different forward/reverse amplitudes can fail to determine thresholds.

14.1.3 Display

For all protocols, you can select to display the decoded signal as a table and to show the binary signal on the screen.

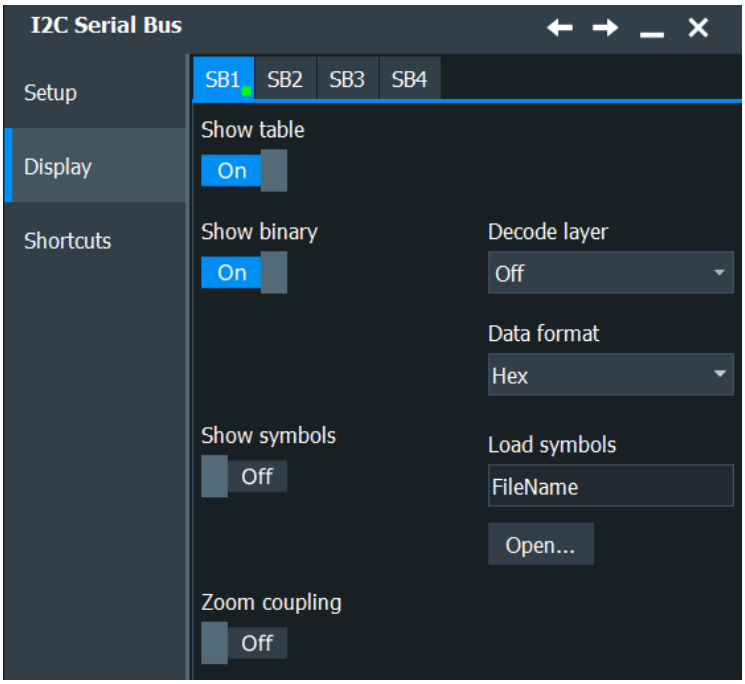

For some protocols, the result table provides a button to show the details of the selected frame.

Label Lists

For all protocols using ID or address identification, it is possible to create label lists containing addresses or IDs, a symbolic name for each node (symbolic label), and some protocol-specific information.

You can load label lists, and activate its usage for decoding. As a result, an additional "Label" column appears in the "Decode results" table, containing the symbolic label.

The frame captions of the decoded signal show the symbolic label instead of the ID or address values. Hence it is easy to identify the messages of the different bus nodes.

You can also use the label list to trigger on an identifier or address. Instead of entering the value, you select the name, which is defined in the label list.

Show table
Opens a table with decoded data of the serial signal. The function requires the option for the analyzed protocol.

Decode results are protocol-specific. They are described in the "Decode Results" chapter of each protocol.

Remote command:
`BUS<b>:RESult` on page 1834

Show binary
For each configured line, the binary signal is also displayed.

Data format
Sets the data format for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:
`BUS<b>:FORMat` on page 1835

Show symbols
Activates the symbols list to be used for decoding. The "Label" appear in the "Decode results" table and in the frame captions of the decoded signal.

Remote command:
`BUS<b>:SYMBols` on page 1835

Load symbols
Selects and loads a label list file. Available file formats are PTT, CSV, DBC (CAN only), and XML (FIBEX files, FlexRay only).

Label lists are protocol-specific. Their contents are described in the corresponding protocol chapters.

Remote command:
`BUS<b>:NEWList` on page 1835

Zoom coupling
If enabled, the decode zoom and result table are synchronized. If you select a row in the result table, this result is shown in the decode zoom.

With "Zoom window", you can also select the zoom used for coupling.

For an introduction to zoom settings and setup, see:
- Section 7.1.2, "Zoom settings", on page 268
- Section 7.1.3, "Zooming for details", on page 272

Remote command:
`BUS<b>:ZCOupling` on page 1836

14.1.4 Content and format of the PTT file

Label lists are stored as PTT (protocol translation table) files. The PTT file format is an extension of the CSV format (comma-separated values). You can edit it with standard editors, for example, with MS Excel or a text editor.

The PTT file has three types of lines:

- Comment lines begin with a hash character #. A hash character at any other position in the line is treated like a standard character.
- Command lines begin with a commercial at character @. An @ character at any other position in the line is treated like a standard character.
- Standard lines are the lines that not qualify as comment or command lines. They build the core of the label list.

Command lines

Command lines define the version of the PTT file and the protocol name:

- @FILE_VERSION: must appear exactly once in the file
- @PROTOCOL_NAME: must appear at least once in the file. Thus, one file can contain several label lists for different protocols.

```
# --- Start of PTT file
@FILE_VERSION  = 1.0
@PROTOCOL_NAME = i2c
[... Label list for I2C]
@PROTOCOL_NAME = can
[... Label list for CAN]
# --- End of PTT file
```

Standard lines

Standard lines define the contents of the label list. The rules for standard lines follow the csv convention, they are:

- Values are separated by commas
- Space characters following a delimiter are ignored
- Values with a special character (comma, newline, or double quote) must be enclosed in double quotes
- Text in double quotes must be escaped by double quote characters

The format of the numeric value is indicated by a suffix. The following formats are supported:

Format	Suffix	Example
Decimal	<empty> d	`106, DeviceName` `106d, DeviceName`
Hexadecimal	h	`6Ah, DeviceName` or prefix: `0x6A, DeviceName`

Format	Suffix	Example
Octal	o	`152o, DeviceName`
Binary	b	`01101010b, DeviceName`

The maximum supported word size for (unsigned) integers is 64 bits.


```
# --- Start of PTT file
@FILE_VERSION  = 1.0
@PROTOCOL_NAME = i2c
#    Following two lines are equal:
7,01h,Temperature
7,01h, Temperature
#    A comma must be enclosed in double quotes:
7,01h,"Temperature, Pressure, and Volume"
#    A double quote must also be enclosed in double quotes:
7,7Fh,"Highspeed ""Master"" 01"
#    Following lines yield the same result:
7d,0x11,Pressure
7h,11h,Pressure
0x7,17d,Pressure
7,17,Pressure
```

14.1.5 Shortcuts

The "Shortcuts" tab gives quick access to other dialogs with protocol relevant settings. The availability depends on the functions supported by the protocol.

If you access a dialog from the "Shortcuts" tab, some settings are already predefined.

- "Trigger" dialog: you can trigger on various events that are typical for the selected protocol type, for example, on start and stop of messages, or on specified data patterns in the message.
- "Search" dialog: here you can configure protocol-specific search settings.
- In the "Measurements" dialog, you can perform additional measurements for some protocols. See Section 8.2.9, "Protocol measurements (option R&S RTP-K35)", on page 384.
- "Export results": in the "Save Results" dialog, you can select the decode results you want to export, the file format, and the delimiter.
  For details, see Section 12.3.4, "Results", on page 514.
- "Export full results": in this dialog, you can select the decode results you want to export and the protocol-specific details to be included.

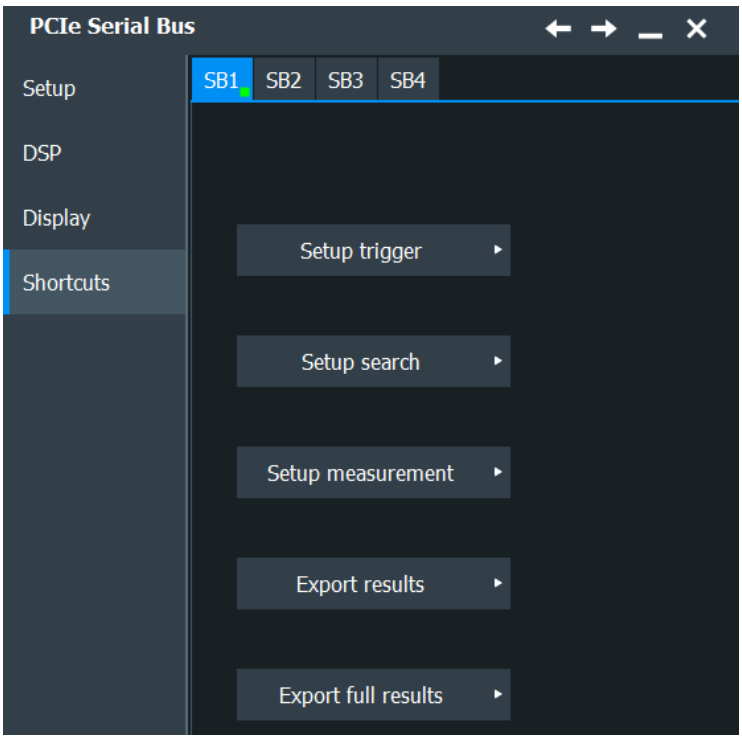


14.1.6 Export protocol results

In the "Export Protocol Results" dialog, you can export the results and all details of the selected protocol.

This is availble for the following protocols:

- ARINC 429
- CAN, CAN FD
- USB 3.1
- Ethernet 10BASE-T and 100BASE-TX
- Ethernet 100BASE-T1
- Ethernet 1000BASE-T1
- LIN
- MIL-1553
- MIPI D-PHY
- SPI
- UART
- DDR

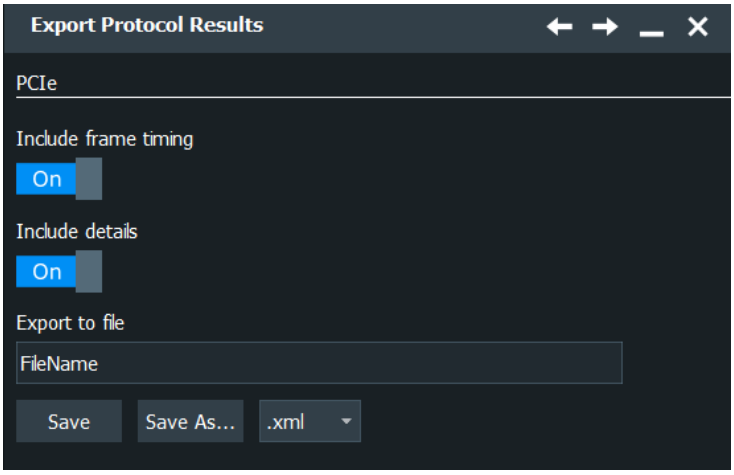

Include frame timing
Includes the frame timing.

Remote command:
BUS<b>:EXPResult:TIME on page 1837

Include details
Includes the detailed results for all frames.

Remote command:
BUS<b>:EXPResult:DETail on page 1836

Export to file
Enter the filename to save the results to. Double-tap the filename to open the file selection dialog box.

"Save" Saves the selected results to the indicated file.

"Save As..." Opens the file selection dialog box and saves the selected results to the selected file. See also Section 12.6, "File selection dialog", on page 529


File format Selects the file format.

- ".csv": the values are saved in a file.
  You can select the value delimiter and the list separator symbol in the "CSV Export" dialog, see Section 4.8.2, "CSV export", on page 111.
  Tip for using MS Excel: It is recommended that you use the semicolon as csv decimal symbol. When you open the file with MS Excel, use "File > Open" and follow the wizard to set the separators correctly, or set the separator settings with "Tools > Options > International".
- ".html": the results are saved as web page for display in a browser.
- ".xml": the results are saved in an xml compatible file format.
- ".py": the values are saved in a python compatible file format.

Remote command:
BUS<b>:EXPResult:SAVE on page 1837

14.1.7 Bit pattern editor

If you want to enter a specified address or data pattern, the bit pattern editor helps you to enter the pattern in various formats - decimal, hexadecimal, octal, binary and ASCII.

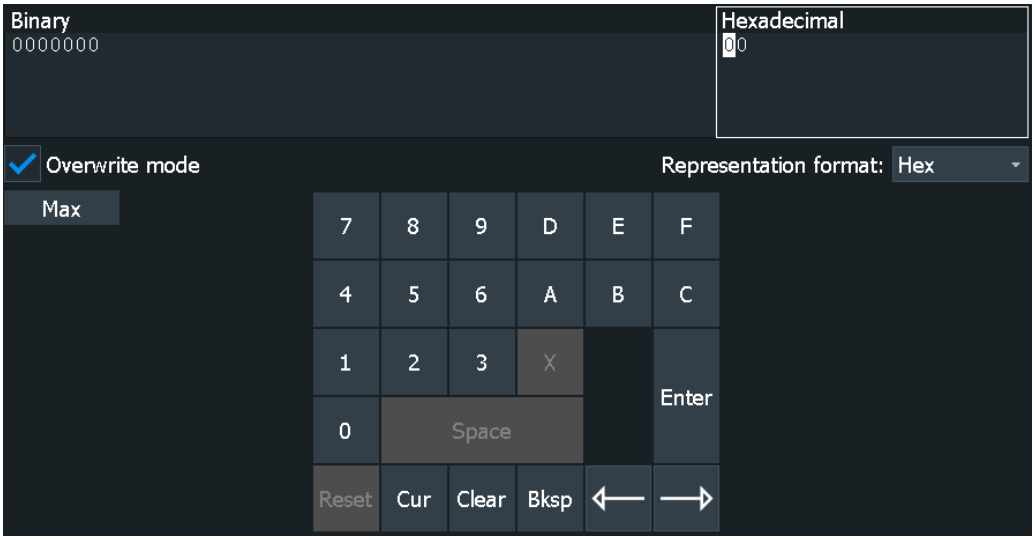

The editor displays the pattern in two columns. The left column always shows binary data. For the right column, you can select the format, the default depends on the data specifics. You can edit data in the left or right column. The keypad adapts itself to the column format, only keys appropriate to the format are enabled.

The data is grouped and converted in bit groups. The size of a bit group depends on the address or data specifics and is set by the instrument. Groups are automatically separated by blanks. The maximum size of a bit group is 64 bit, the most common group size is 1 byte.

"Overwrite mode": If disabled, the data behind the new digit is shifted to the right. Bit groups are rearranged automatically.

Format-specific information:

- Unsigned: Decimal data format without sign. It is available for I²C, SPI, UART, CAN, LIN and FlexRay protocols. If you enter a decimal number that is too large for the defined bit group, the number is truncated and a message appears. X (do not care) in the decimal column sets all binary digits of the bit group to X.
- Signed: Signed decimal format, available for audio protocols. The first bit represents the sign. You can use the 2's complement or 1's complement format.
- Binary: 0, 1 and X (do not care) is allowed.
- Hex: most common format in the right column.
- Octal: Each digit represents 3 bit.
- ASCII: In the ASCII column, "X" is the character X. The binary X (do not care) is not allowed. If an X is included in the binary value in the left column, the ASCII column displays "§" to indicate that the value is not defined.

Where applicable, frequently used values are provided in a "Predefined values" list below the pattern table, for example, reserved end words of data packets in the UART protocol.

14.2 I²C (option R&S RTP-K1)

The Inter-Integrated Circuit is a simple, low-bandwidth, low-speed protocol used for communication between on-board devices.

- About the I²C protocol 565
- I²C configuration 567
- I²C trigger 570
- I²C decode results 576
- Search on decoded I²C data 577

14.2.1 About the I²C protocol

This section provides an overview of protocol characteristics, data format, address types and trigger possibilities. For detailed information, read the "I2C-bus specification and user manual" available on the NXP manuals webpage at http://www.nxp.com/.

I²C characteristics

The main characteristics of I²C are:

- Two-wire design: serial clock (SCL) and serial data (SDA) lines
- Controller/ target communication: the controller generates the clock and addresses the targets. Targets receive the address and the clock. Both controller and targets can transmit and receive data.
- Addressing scheme: each target device is addressable by a unique address. Multiple target devices can be linked together and can be addressed by the same controller.
- Read/write bit: specifies if the controller reads (=1) or writes (=0) the data.
- Acknowledge: takes place after every byte. The receiver of the address or data sends the acknowledge bit to the transmitter.

The R&S RTP supports all operating speed modes: high-speed, fast mode plus, fast mode, and standard mode.

Data transfer

The format of a simple I²C message (frame) with 7-bit addressing consists of the following parts:

- Start condition: a falling slope on SDA while SCL is high
- 7-bit address of the target device that is either written to or read from
- R/W bit: specifies if the data is written to or read from the target

- ACKnowledge bits: is issued by the receiver of the previous byte if the transfer was successful
  Exception: At read access, the controller terminates the data transmission with a NACK bit after the last byte.
- Data: several data bytes with an ACK bit after every byte
- Stop condition: a rising slope on SDA while SCL is high

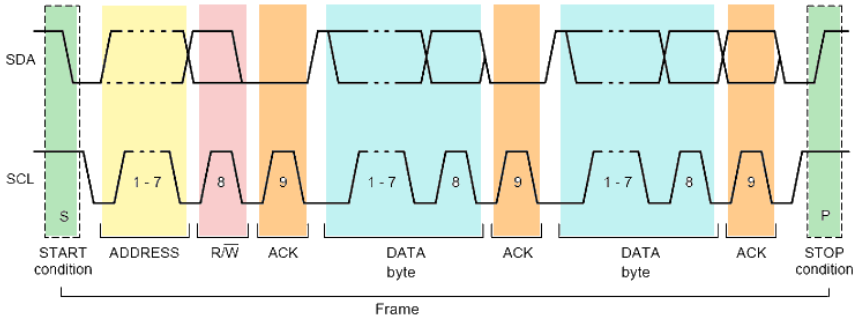


Figure 14-1: I2C write access with a 7-bit address

Address types: 7-bit and 10-bit

Target addresses can be 7 bits or 10 bits long. A 7-bit address requires 1 byte, 7 bits for the address followed by the R/W bit.

A 10-bit address for write access requires 2 bytes: the first byte starts with the reserved sequence 11110, followed by the two MSB of the address and the write bit. The second byte contains the remaining 8 LSB of the address. The target acknowledges each address byte.



Figure 14-2: 10-bit address, write access

A 10-bit address for read access requires 3 bytes. The first 2 bytes are identical to the write access address. The third byte repeats the address bits of the first byte and sets the read bit.




Figure 14-3: 10-bit address, read access

Trigger

The R&S RTP can trigger on various parts of I²C messages. You must connect the data and clock lines to the input channels; triggering on math and reference waveforms is not possible.

You can trigger on:


- Start or stop condition
- Repeated start condition
- Transfer direction (read or write)
- Bytes with missing acknowledge bit
- Specific target address or address range
- Specific data pattern in the message

14.2.2 I²C configuration

14.2.2.1 I²C configuration settings

Access: [Bus] > "I2C" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

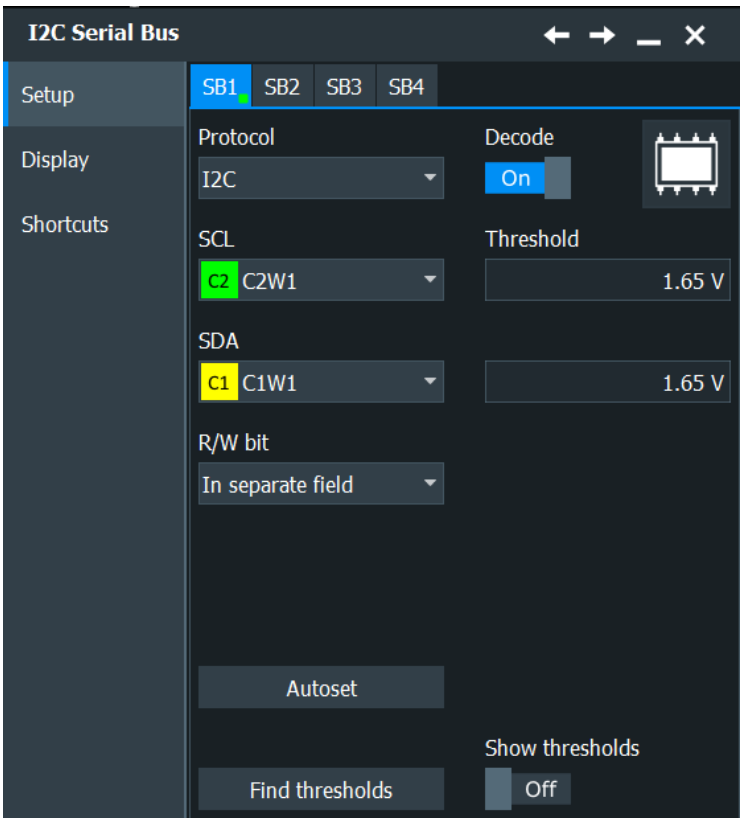

See also: Section 14.1.1, "Setup - general settings", on page 556

SDA, SCL
Set the waveforms of the data line (SDA) and clock line (SCL).

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Do not combine a reference waveform with channel or math waveform because the time correlation of these waveforms might differ.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
`BUS<b>:I2C:SDA:SOURce` on page 1840
`BUS<b>:I2C:SCL:SOURce` on page 1840

R/W bit
Defines if the R/W bit is considered separately or as part of the address. The setting affects the Adress Type of the trigger conditions.

Remote command:
`BUS<b>:I2C:RWBit` on page 1842

Threshold
Sets the threshold value for digitization of signals for each line. If the signal value on the line is higher than the threshold, the signal state is high (1 or true for the Boolean logic). Otherwise, the signal state is considered low (0 or false) if the signal value is below the threshold.

There are several ways to set the threshold:

- "Threshold"
  Enter the value directly in the field.
- "Autoset"
  Starts software algorithms for determining the signal threshold levels and bitrate.
- "Find thresholds"
  Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Note: If the sources are digital channels, the same threshold values are used for the parallel and the serial buses. You can set the thresholds either in the parallel bus configuration or in the serial bus configuration.

Remote command:
`BUS<b>:I2C:SCL:THReshold` on page 1841
`BUS<b>:I2C:SDA:THReshold` on page 1841
`BUS<b>:I2C:TECHnology` on page 1841
`BUS<b>:SETReflevels` on page 1834
`BUS<b>:FAUToset` on page 1834

Show thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
`BUS<b>:THReshold` on page 1835

14.2.2.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

I2C Specific Label Settings

Label lists are protocol-specific. Label lists for I²C are available in CSV and PTT format.

An I²C label file contains three values for each address:

- Address type, 7-bit or 10-bit long
- Address value
- Symbolic label: name of the address, specifying its function in the bus network.

Example: I²C PTT file

```
# ------------------------------------------------------------------------
@FILE_VERSION  = 1.00
@PROTOCOL_NAME = i2c
```

```
# ------------------------------------------------------------------------
# Labels for I2C protocol
#   Column order: Identifier type, Identifier value, Label
# ------------------------------------------------------------------------
7,0x1E,Voltage
7,38h,Pressure
7,2Ah,Temperature
7,16h,Speed
7,118,Acceleration
7,07h,HighSpeed_Master_0x3
7,51h,EEPROM
10,3A2h,DeviceSetup
10,1A3h,GatewayStatus
10,06Eh,LeftSensor
# ------------------------------------------------------------------------
```

14.2.2.3 Configuring I²C protocol

The configuration of the I²C is simple - assign the two lines to input channels, and set the thresholds.


For details on configuration settings, see Section 14.2.2, "I²C configuration", on page 567.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. Select the "Setup" tab.
4. Tap the "Protocol" button and select the protocol: "I2C".
5. Tap the "SDA" button, and select the waveform of the data line.
6. Tap the "SCL" button, and select the waveform of the clock line.
7. Set the logical thresholds.
8. Enable "Decode".

14.2.3 I²C trigger

14.2.3.1 I²C trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

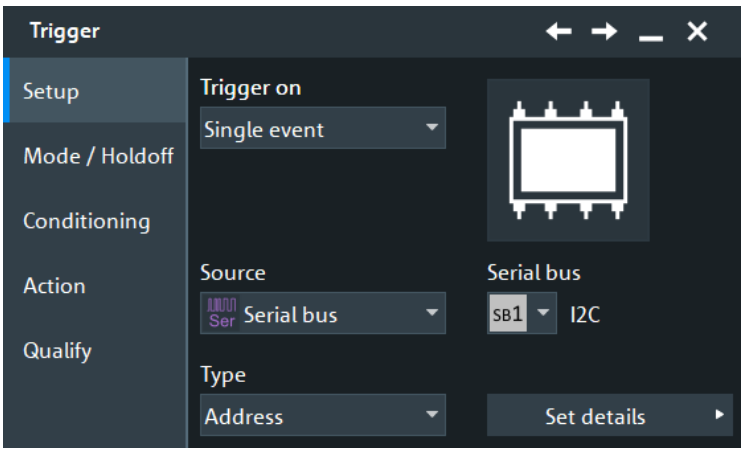

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Serial bus
Selects the serial bus to be triggered on. Make sure to select the correct bus before you enter the settings.

To trigger on a serial bus, the signals sources must be channel signals. If the data or clock source is a math or reference waveform, you cannot trigger on that bus.

Remote command:
`TRIGger<t>:SOURce:SBSelect` on page 1839

Trigger type
Selects the trigger type for I²C analysis.

Some trigger types have additional settings that can be defined. In this case, the "Define trigger details" button appears next to the "Type" function. Open it for a detailed definition of the trigger conditions.

Remote command:
`TRIGger<t>:I2C:TYPE` on page 1843

Start ← Trigger type
Sets the trigger to the start of the message. The start condition is a falling edge on SDA while SCL is high. The trigger instant is the falling edge of the SDA line.


You can change the SDA and SCL lines here if necessary.

Repeated start ← Trigger type
Sets the trigger to a repeated start - when the start condition occurs without previous stop condition. Repeated start conditions occur when a primary exchanges multiple messages with a secondary without releasing the bus.

Stop ← Trigger type
Sets the trigger to the end of the message. The stop condition is a rising slope on SDA while SCL is high.


No Ack (Missing Ack) ← Trigger type
Missing acknowledge bit: the instrument triggers if the data line remains HIGH during the clock pulse following a transmitted byte.

You can also localize specific missing acknowledge bits by setting the No Ack conditions.

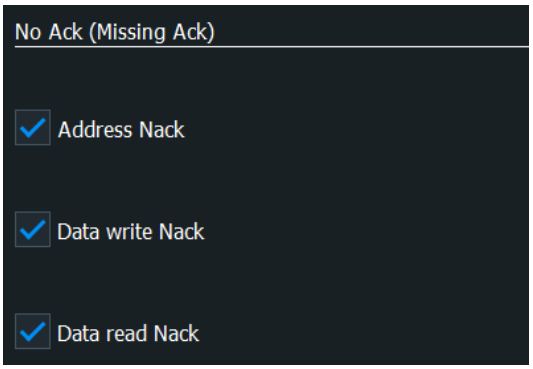

Address ← Trigger type
Sets the trigger to one specific address condition or a combination of address conditions. The trigger time is the falling clock edge of the acknowledge bit after the address. You can specify:

- Adress Type
- "Address" on page 574
- R/W bit

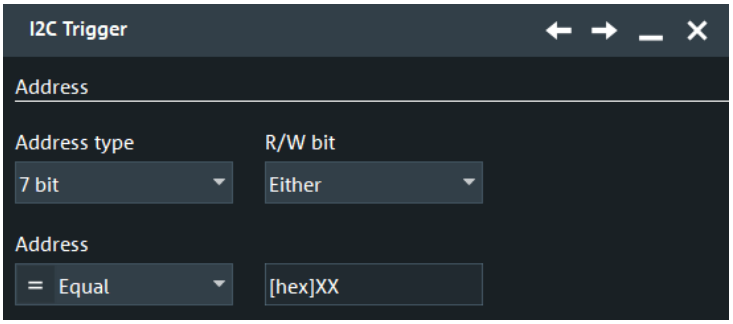


Address OR ← Trigger type
Triggers on one to four address conditions. Each enabled condition requires an exact address. You can specify:

For each condition to be used, select "Monitor"

- "OR x" on page 575


- Adress Type
- "Address" on page 574
- R/W bit

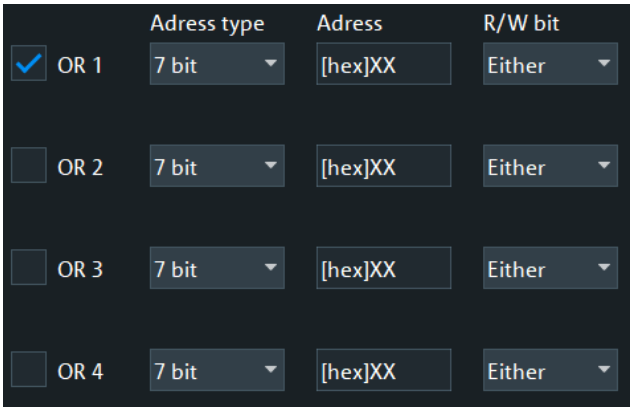

Address and data ← Trigger type
Sets the trigger to a combination of address and data condition. You can specify:

- Adress Type
- R/W bit
- "Address" on page 574
- "Position" on page 575
- "Data" on page 575

The address conditions are the same as for the "Address" trigger type and "Data" on page 575.

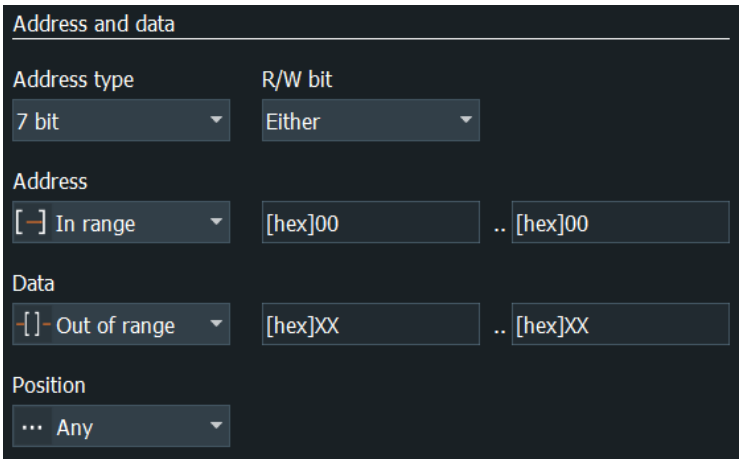

No Ack conditions
Selects which missing acknowledge bits is detected if the trigger type is set to "Missing Ack".

"Address Nack"
No secondary recognizes the address.

"Data write Nack"
The addressed secondary does not accept the data.

"Data read Nack"
Marks the end of the read process when the primary reads data from the secondary. This Nack is sent according to the protocol definition, it is not an error.

Remote command:
`TRIGger<t>:I2C:ADNack` on page 1844
`TRIGger<t>:I2C:DWNack` on page 1844
`TRIGger<t>:I2C:DRNack` on page 1844

Adress Type
Sets the address length to be triggered on: 7 bit, 7+1 bit, or 10 bit. Available settings depend on the R/W bit setting of the bus configuration.

For "7 bit" and "10 bit", enter the address bits in the Address field, and use the "R/W bit" on page 574 field to select the transfer direction.

For "7+1 bit", enter the seven address bits and also the R/W bit in the "Address" field.

If the trigger type is "Address + data", you can set the address type "Any" to trigger on data only, regardless of the address.

Remote command:
`TRIGger<t>:I2C:AMODe` on page 1845
`TRIGger<t>:I2C:ADOR<n>:ADRType` on page 1847

Address
The trigger address setup consists of a comparison condition and one or two address patterns.

Defines the bit pattern of the secondary device address. The length of the entry is adjusted to the selected address type.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Min" Specifies the value or sets the start value of a range.

"Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:I2C:ADDRess` on page 1846
`TRIGger<t>:I2C:ADDTo` on page 1846
`TRIGger<t>:I2C:ADOR<n>[:VALue]` on page 1847

R/W bit
Toggles the trigger condition between read and write access of the primary. Select "Either" if the transfer direction is not relevant for the trigger condition.

Remote command:
`TRIGger<t>:I2C:ACCess` on page 1843
`TRIGger<t>:I2C:ADOR<n>:RWBit` on page 1847

OR x
Enables each selected condition, for "Trigger Type" = "Address OR".

Remote command:
`TRIGger<t>:I2C:ADOR<n>:ENABle` on page 1846

Position
Sets the number of data bytes to be skipped after the address. You can define an exact position, or a position range. The index 0 is associated with the first data byte.

"Condition" Sets the comparison condition to a specific value or a range.

"Index min" Specifies the value or sets the start value of a range.

" Index max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:I2C:DPOPerator` on page 1848
`TRIGger<t>:I2C:DPOSition` on page 1848
`TRIGger<t>:I2C:DPTO` on page 1848

Data
Specifies the trigger conditions for the data bit pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Value min " Specifies the value or sets the start value of a range.
Enter the bytes in msb first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

"Value max " Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:I2C:DCONdition` on page 1849
`TRIGger<t>:I2C:DMIN` on page 1849
`TRIGger<t>:I2C:DMAX` on page 1849

14.2.3.2 Triggering on I²C signals

Prerequisites: An I²C bus is configured, see Section 14.2.2.3, "Configuring I²C protocol", on page 570.

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to I²C.
5. Select the "Trigger type".

6. For more complex trigger types, enter the address and/or data conditions: address, acknowledge bits, R/W bit, and data pattern.
   For details, see Section 14.2.3, "I²C trigger", on page 570

14.2.4 I²C decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".
2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show binary".
3. If required, enable "Zoom coupling"

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.



Table 14-2: Content of the Decode results table

Column	Description
State	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Frame start	Time of frame start
Address type	Address length, 7 bit or 10 bit

Column	Description
Address value (hex)	Hexadecimal value of the address
Label	Symbolic label name defined in the label list
R/W bit	Value of the R/W bit
Bit rate	Value of the bit rate

Table 14-3: Content of the Details frame table

Column	Description
Formatted	Value of all data bytes of the frame
Ack bit start	Start time of the acknowledge bit
Ack bit	Value of the address acknowledge bit

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.3.3, "Decode results", on page 1850.

14.2.5 Search on decoded I²C data


Using the search functionality, you can find various events in the decoded data, the same events which you also can trigger on. Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search "Source" to the serial bus that is configured for the protocol to be analyzed.


See also Section 11, "Search functions", on page 463.

14.2.5.1 I²C search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

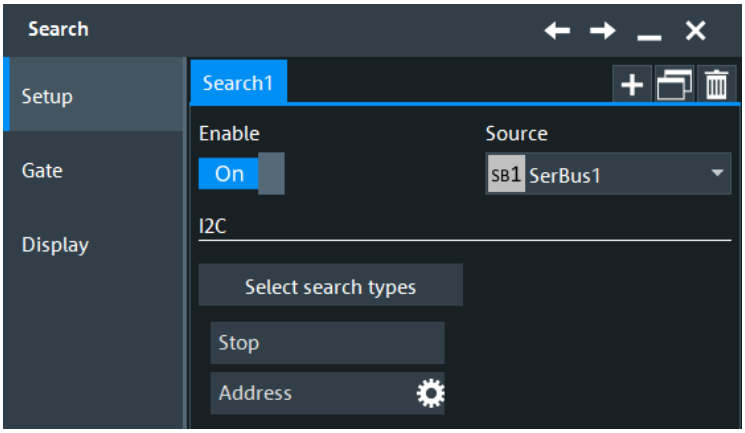

Select search types
Enable the events to be searched for. Unlike triggering, where you can trigger only on one defined event, you can search for various different events in one search.

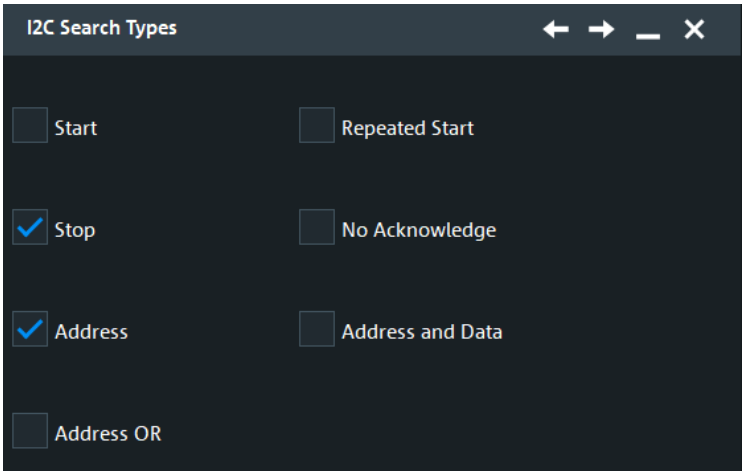

"Start"	Searches for the start of the message. The start condition is a falling edge on SDA while SCL is high. The event is the falling edge of the SDA line. You can change the SDA and SCL lines here if necessary.
"Repeated start"	Searches for a start condition without previous stop condition. Repeated start conditions occur when a master exchanges multiple messages with a slave without releasing the bus.
"Stop"	Searches for the end of the message. The stop condition is a rising slope on SDA while SCL is high.
"No ACK (Missing ACK)"	Searches for a missing acknowledge bit: an event is found if the data line remains HIGH during the clock pulse following a transmitted byte.
"Address"	Searches for one specific address condition or a combination of address conditions. The event is the falling edge of the acknowledge bit after the address.
"Address OR"	Searches for one to four address conditions.

"Address and data" Searches for a combination of address and data conditions.

Remote command:
SEARch:TRIGger:I2C:SCONdition on page 1859
SEARch:TRIGger:I2C:RCONdition on page 1859
SEARch:TRIGger:I2C:STCNdition on page 1859
SEARch:TRIGger:I2C:NACKnowledge on page 1860
SEARch:TRIGger:I2C:SADDress on page 1860
SEARch:TRIGger:I2C:ADOR on page 1860
SEARch:TRIGger:I2C:ADData on page 1861

Address setup: Condition, Type, Addr. min, Addr. max, R/W bit
The address setup consists of the condition, type, R/W bit and one or two address patterns.

The address setup settings are the same as in the I2C trigger setup, see "Address" on page 574.

Remote command:
SEARch:TRIGger:I2C:ACONdition on page 1861
SEARch:TRIGger:I2C:ADDRess on page 1862
SEARch:TRIGger:I2C:ADDTo on page 1862
SEARch:TRIGger:I2C:AMODe on page 1862
SEARch:TRIGger:I2C:ACCess on page 1863

Data setup: Condition, Position, Index min, Index max, Value min, Value max
The data setup consists of the condition, position, and one or two index/value patterns.

The data setup settings are the same as in the I2C trigger setup, see "Data" on page 575.

Remote command:
SEARch:TRIGger:I2C:DPOPerator on page 1865
SEARch:TRIGger:I2C:DPOSition on page 1865
SEARch:TRIGger:I2C:DPTO on page 1866
SEARch:TRIGger:I2C:DCONdition on page 1866
SEARch:TRIGger:I2C:DMIN on page 1866
SEARch:TRIGger:I2C:DMAX on page 1867

Address OR setup: , OR x Address type, Address, R/W bit
The address OR setup consists of the monitor, address type, address and an R/W bit.

The address OR setup settings are the same as in the I2C trigger setup, see Section 14.2.3.1, "I²C trigger settings", on page 570.

Remote command:
SEARch:TRIGger:I2C:ADDO<m>:ENABle on page 1863
SEARch:TRIGger:I2C:ADDO<m>:ADRType on page 1864
SEARch:TRIGger:I2C:ADDO<m>[:VALue] on page 1864
SEARch:TRIGger:I2C:ADDO<m>:RWBit on page 1864

No ACK setup: Addr/W/R NACK
The no ACK setup consists of the Addr/W/R NACK.

The no ACK setup settings are the same as in the I2C trigger setup, see "No Ack conditions" on page 573.

Remote command:
`SEARch:TRIGger:I2C:DRNack` on page 1867
`SEARch:TRIGger:I2C:DWNack` on page 1868
`SEARch:TRIGger:I2C:NACKnowledge` on page 1860

14.2.5.2 I²C search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

The remote commands for the search reults are described in Section 26.18.3.5, "I²C search results", on page 1868.

14.3 I3C (option R&S RTP-K45)

The Improved Inter-Integrated Circuit (I3C) is a low-speed MIPI protocol used for communication between chips and signaling patterns by a 2-wire serial data bus.

Requirements

For performing I3C decode measurements, you need the following:

- R&S RTP with 2 available channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15)
    (requires option R&S RTP-B1)
- Option R&S RTP-K55

- About the I3C protocol 581
- I3C configuration 582
- I3C trigger 586
- I3C decode results 589
- Search on decoded I3C data 591

14.3.1 About the I3C protocol

This section provides an overview of protocol characteristics, data format, address types and trigger possibilities. For detailed information, read the "MIPI I3C and I3C Basic" specifications, available at www.mipi.org/groups/I3C.

I3C characteristics

The Improved Inter-Integrated Circuit (I3C) protocol is a high-speed, low-power, and low-latency interface standard. Typical applications are mobile devices, IoT devices and automotive systems, for example. It incorporates the capabilities of I²C and SPI, while offering several advantages over these protocols.

The main characteristics of I3C are:

- Significantly lower energy consumption and higher data rate than I²C, but backward compatible with it.
- 2-wire operation with a serial clock line (SCL) and a serial data line (SDA) simplifies data exchange at low pin count and reduced signal paths.
- Supports multiple devices on the same bus, enabling a multi-drop topology.
- Optional messaging modes (HDR-DDR or HDR ternary) with high data rate up to 33.33 Mbit/s.
- In-band interrupt support without requiring a separate interrupt line.
- Hot-join support for dynamic device attachment and detachment.
- Synchronous timing support and asynchronous time stamping.
- Broadcast transactions allow sending commands or data to all devices on the bus simultaneously.

The R&S RTP supports all operating speed modes: legacy I²C modes (see I²C characteristics), SDR standard mode, DDR mode and ternary mode.

Data transfer

An I3C transaction consists of the following phases:

- **Start condition**: The controlling device sends a start condition to initiate the transaction.
- **Device addressing**: The controlling device sends the address of the responding device to select the target device.
- **Command**: The controlling device sends a command to the responding device, specifying the operation to be performed (e.g., read or write).
- **Data transfer**: The responding device responds with the requested data or sends data to the controlling device.
- **Stop condition**: The controlling device sends a stop condition to terminate the transaction.

The address format is the same as in I²C: 7 bits of address, 1 bit of RnW, and 1 bit of ACK/NACK. See Section 14.2.1, "About the I²C protocol", on page 565.

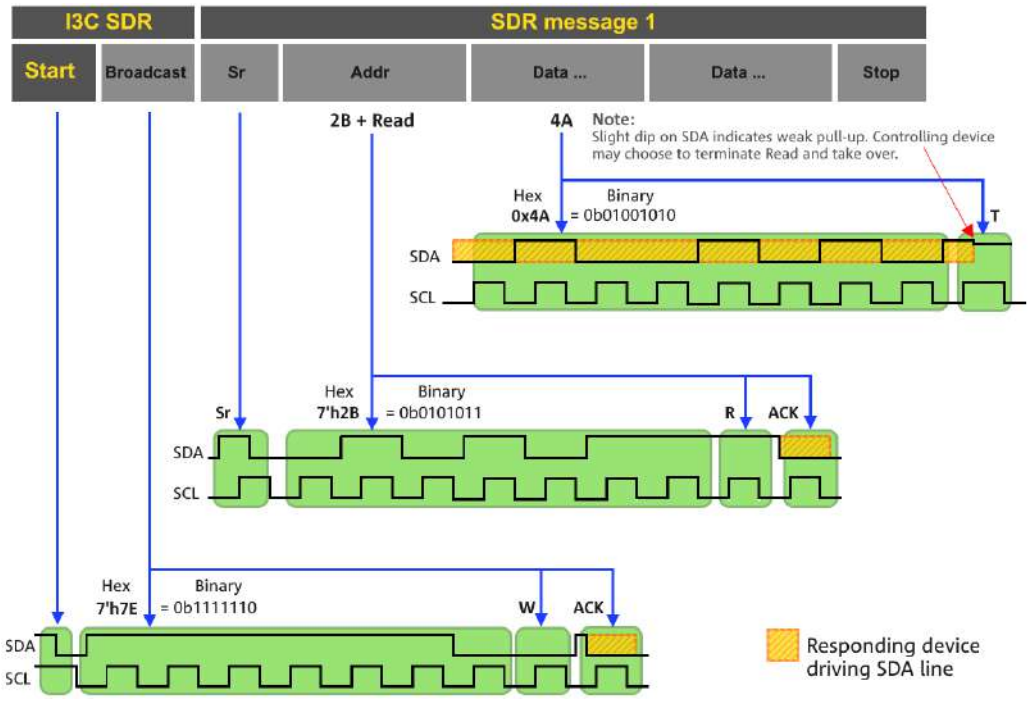


Figure 14-4: Example of using I3C coding SDR

Trigger

The R&S RTP can trigger on various parts of I3C messages. You must connect the data and clock lines to the input channels. Triggering on math and reference waveforms is not possible.

You can trigger on:


- Start or stop condition
- Repeated start condition
- Transfer direction (read or write)
- Bytes with missing acknowledge bit
- Specific target address or address range
- Specific data pattern in the message

14.3.2 I3C configuration

14.3.2.1 I3C configuration settings

Access: [Bus] > "I3C" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

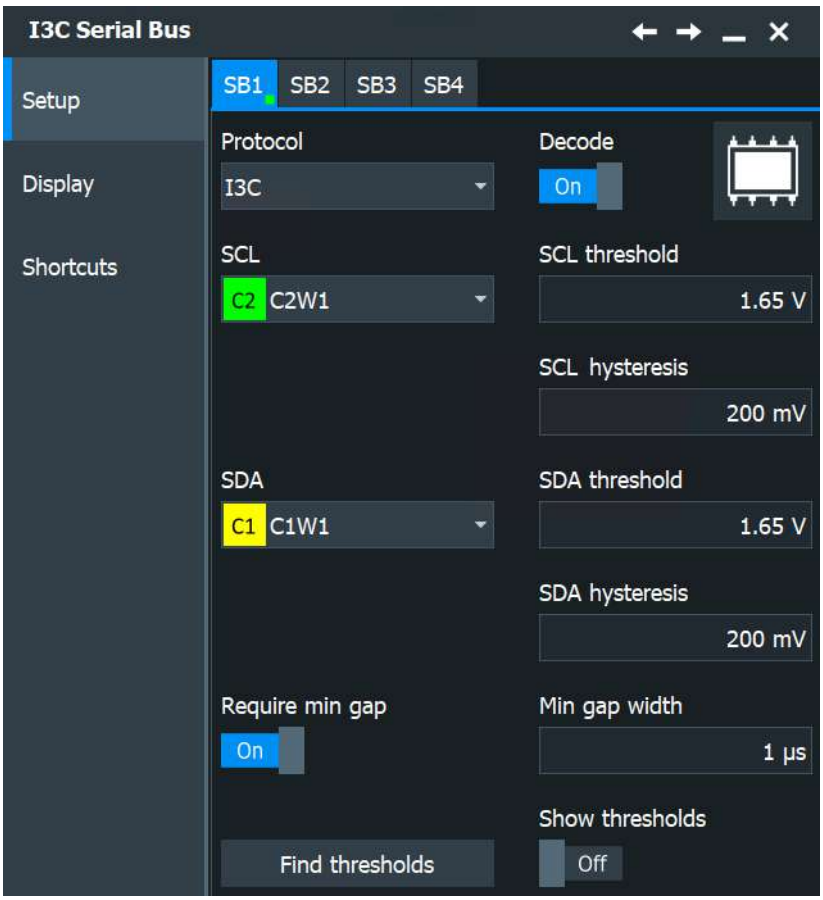

See also: Section 14.1.1, "Setup - general settings", on page 556. For example, for "Decode" refer to "Decode" on page 557.

SDA, SCL
Selects the source channel to which the data line (SDA) and clock line (SCL) are connected.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Do not combine a reference waveform with channel or math waveform because the time correlation of these waveforms might differ.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
`BUS<b>:I3C:SDA:SOURce` on page 1876
`BUS<b>:I3C:SCL:SOURce` on page 1875

SCL/SDA threshold / SCL/SDA hysteresis
Sets the threshold and hysteresis values for digitization of signals for the SDA and SCL channels, respectively.

If the signal value on the line is higher than the threshold, the signal state is high (1 or true for the Boolean logic). Otherwise, the signal state is considered low (0 or false) if the signal value is below the threshold.

There are two ways to set the threshold:

- "Threshold"
  Enter the value directly in the field.
- "Find thresholds"
  Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Additional to the threshold, you can also set a hysteresis for each channel.

Note: If the sources are digital channels, the same threshold values are used for the parallel and the serial buses. You can set the thresholds either in the parallel bus configuration or in the serial bus configuration.

Remote command:
`BUS<b>:I3C:SCL:THReshold` on page 1875
`BUS<b>:I3C:SDA:THReshold` on page 1876
`BUS<b>:I3C:SCL:HYSTeresis` on page 1876
`BUS<b>:I3C:SDA:HYSTeresis` on page 1876

Require min gap
If enabled, the application requires a minimum gap on the left-hand side of the screen before the 1st decoded frame. Enabling this feature can prevent errors due to truncation of an HDR-type frame.

Remote command:
`BUS<b>:I3C:MINGap:SELect` on page 1877

Min gap width
Available only, if Require min gap is enabled. Specifies the minimum gap width in units of time.

Remote command:
`BUS<b>:I3C:MINGap:WIDTh` on page 1877

Show thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
`BUS<b>:THReshold` on page 1835

14.3.2.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

I3C label list

Label lists (or "symbol lists") are protocol-specific. For the I3C protocol, you can upload label lists containing IDs and a symbolic name for each node. You can load label list files in `CSV` format, which is supported by I3C.

For each address, an I3C label file contains two or three values (see "Address type" on page 585):

- Address type: 7-bit (optional)
- Address value
- Symbolic label: name of the address, specifying its function in the bus network.

Example: I3C CSV file

```
# ----------------------------------------------------------------------------
@FILE_VERSION  = 1.00
@PROTOCOL_NAME = i3c
# ----------------------------------------------------------------------------
# Labels for I3C protocol
#   Column order: Identifier type, Identifier value, Label
# ----------------------------------------------------------------------------
0x1E,Voltage
38h,Pressure
2Ah,Temperature
7,16h,Speed
7,18h,Acceleration
7,07h,HighSpeed_Master_0x3
7,51h,EEPROM
7,2Bh,DeviceSetup
7,62h,GatewayStatus
7,4Eh,LeftSensor
# ----------------------------------------------------------------------------
```

Address type

You can omit the address type, because I3C addresses are always 7-bit. Hence, the firmware also supports lines with only two items: address value and symbolic label. For example, instead of "`7,0x1E,Voltage`", also "`0x1E,Voltage`" is valid. Supporting 3-item lines can make I3C compatible with I2C files. However, I3C ignores 3-item lines that start with "`10,`".

14.3.2.3 Configuring I3C protocol

The configuration of the I3C is simple - assign the two lines to input channels, and set the thresholds.

For details on configuration settings, see Section 14.3.2, "I3C configuration", on page 582.


1. Press the [Protocol] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. Select the "Setup" tab.
4. Under "Protocol", select the "I3C" protocol.

5. Under "SCL", select the waveform of the clock line.
6. Under "SDA", select the waveform of the data line.
7. Set the logical thresholds and hystereses.
8. Enable "Decode".

14.3.3 I3C trigger

14.3.3.1 I3C trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

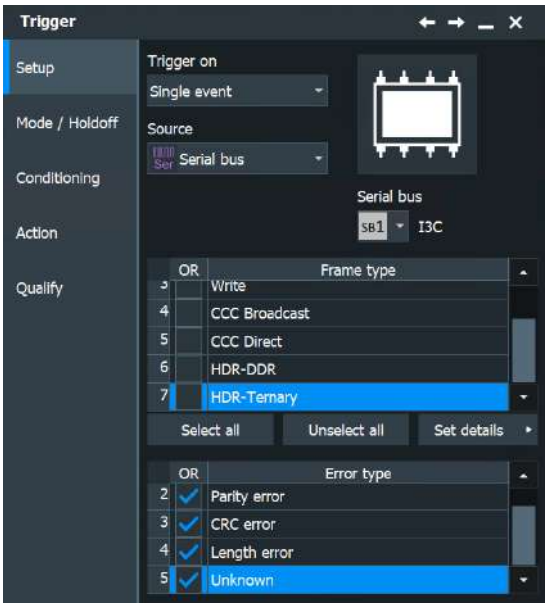

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Serial bus
Selects the serial bus to be triggered on. Make sure to select the correct bus before you enter the settings.

To trigger on a serial bus, the signals sources must be channel signals. If the data or clock source is a math or reference waveform, you cannot trigger on that bus.

Remote command:
`TRIGger<t>:SOURce:SBSelect` on page 1839

Select all, Unselect all
Helps you select the frames you want to trigger on.

"Select all" Enables the trigger for all available frame types.

"Unselect all" Disables the trigger for all available frame types.

Remote command:
`TRIGger<t>:I3C:CHKall` on page 1878
`TRIGger<t>:I3C:CLR` on page 1878


Frame type
Selects and enables the frame types that you want to trigger on. You can trigger on all enabled frame types simultaneously.

The following frames are available: "I3C Probe", "Read", "Write", "CCC Broadcast", "CCC Direct", "HDR-DDR" and "HDR-Ternary".

For each selected frame type, you can also specify conditions for the value of the fields. See Set details.

Remote command:
`TRIGger<t>:I3C:FRENable` on page 1878
`TRIGger<t>:I3C:FRAMe<fr>:ENABle` on page 1878

Set details
To define detailed trigger conditions for a selected frame type, use the "Set details" dialog.

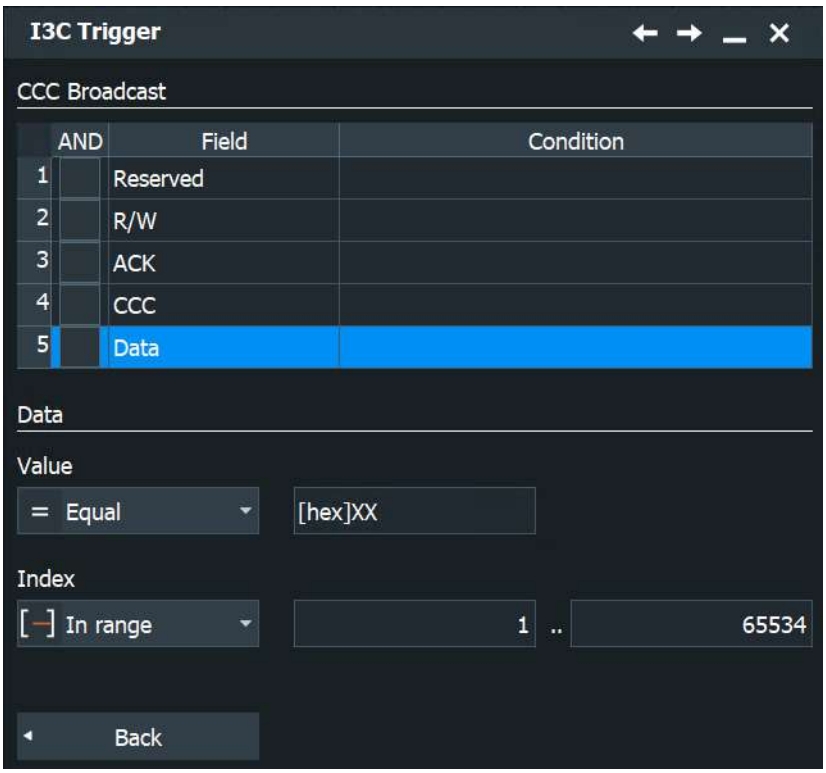

This dialog provides setting options that depend on the selected frame type. You can define trigger conditions for each field of the frame.

"Field" Selects and enables the frame's field type that you want to trigger on. The available fields are "ACK", "Address", "CCC", "Command", "CRC", "Data", "P", "R/W" and "Reserved".

Remote command:
`TRIGger<t>:I3C:FIENable` on page 1880
`TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:ENABle` on page 1880

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger<t>:I3C:BIT` on page 1879
`TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:BIT` on page 1879

"Value" The value setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger<t>:I3C:DMAX` on page 1879
`TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DMAX` on page 1879
`TRIGger<t>:I3C:DMIN` on page 1879
`TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DMIN` on page 1879
`TRIGger<t>:I3C:DOPerator` on page 1880
`TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DOPerator` on page 1880

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger<t>:I3C:IMAX on page 1880
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IMAX on page 1880
TRIGger<t>:I3C:IMIN on page 1881
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IMIN on page 1881
TRIGger<t>:I3C:IOPerator on page 1881
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IOPerator on page 1881

Error type
Enables triggering on the selected error type.

Selects and enables the error types that you want to trigger on. You can trigger on all enabled error types simultaneously.

The following error types are available: "ACK error", "Parity error", "CRC error", "Length error" and "Unknown".

Remote command:
TRIGger<t>:I3C:ERENable on page 1881
TRIGger<t>:I3C:ERRor<n>:ENABle on page 1881

14.3.3.2 Triggering on I3C signals

Prerequisites: An I3C bus is configured, see Section 14.3.2.3, "Configuring I3C protocol", on page 585.

1. Press the [Protocol] key.
2. Select the "Shortcuts" tab.
3. Press "Setup trigger".
4. Under "Source", select the "Serial bus" as your trigger source.
5. Select the serial bus that is set to I3C.
6. Enable all "Frame type" and "Error type" options that you want to trigger on.
7. For more complex frame trigger settings, specify conditions in the "Set details" dialog. See "Set details" on page 587.

14.3.4 I3C decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".
2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show symbols".

3. If required, enable "Zoom coupling"

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

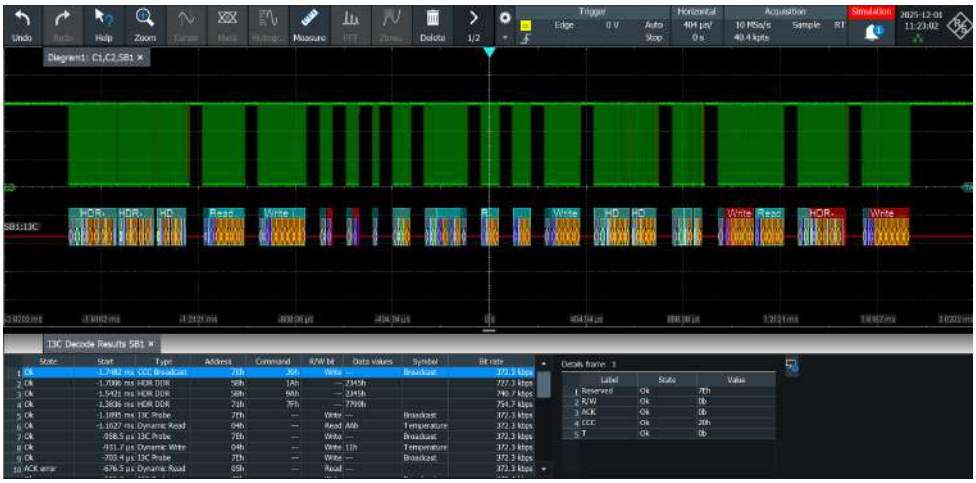


Table 14-4: Content of the Decode results table

Column	Description
State	Overall state of the frame. "Incomplete" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of frame start
Type	Frame type
Address	Value of the address field of the frame, if available
Command	Value of the command field of the frame, if available
R/W bit	Value of the read/write bit
Data values	The actual data payload values. Select the data format in the "Display" tab.

Column	Description
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Bit rate	Calculated bit rate for this frame

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-5: Content of the Details frame table

Item	Description
Label	Label (name) of each word of the data field
State	State of each word of the data field, for example "OK" or "Incomplete"
Value	Value of each word of the data field

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.4.3, "Decode results", on page 1882.

14.3.5 Search on decoded I3C data


Using the search functionality, you can find various events in the decoded data, the same events which you also can trigger on. Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search "Source" to the serial bus that is configured for the protocol to be analyzed.

See also Section 11, "Search functions", on page 463.

14.3.5.1 I3C search setup

Access: [Protocol] > "Shortcuts" tab > "Setup search"

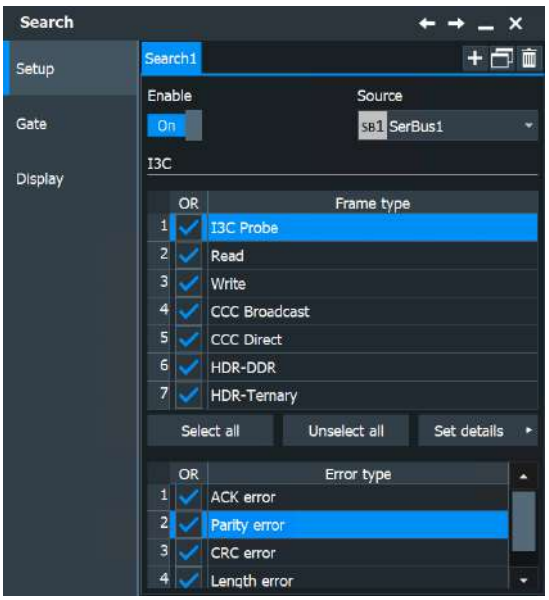

Select all, Unselect all
Helps you select the frames you want to search.

"Select all" Enables the search for all available frame types.

"Unselect all" Disables the search for all available frame types.

Remote command:
`SEARch:TRIGger:I3C:CHKall` on page 1890
`SEARch:TRIGger:I3C:CLR` on page 1890


Frame type
Selects and enables the frame types that you want to search. You can search for all enabled frame types simultaneously.

The following frames are available: "I3C Probe", "Read", "Write", "CCC Broadcast", "CCC Direct", "HDR-DDR" and "HDR-Ternary".

For each selected frame type, you can also specify conditions for the value of the fields. See Set details.

Remote command:
`SEARch:TRIGger:I3C:FRENable` on page 1891
`SEARch:TRIGger:I3C:FRAMe<fr>:ENABle` on page 1891

Set details
To define detailed search conditions for a selected frame type, use the "Set details" dialog.

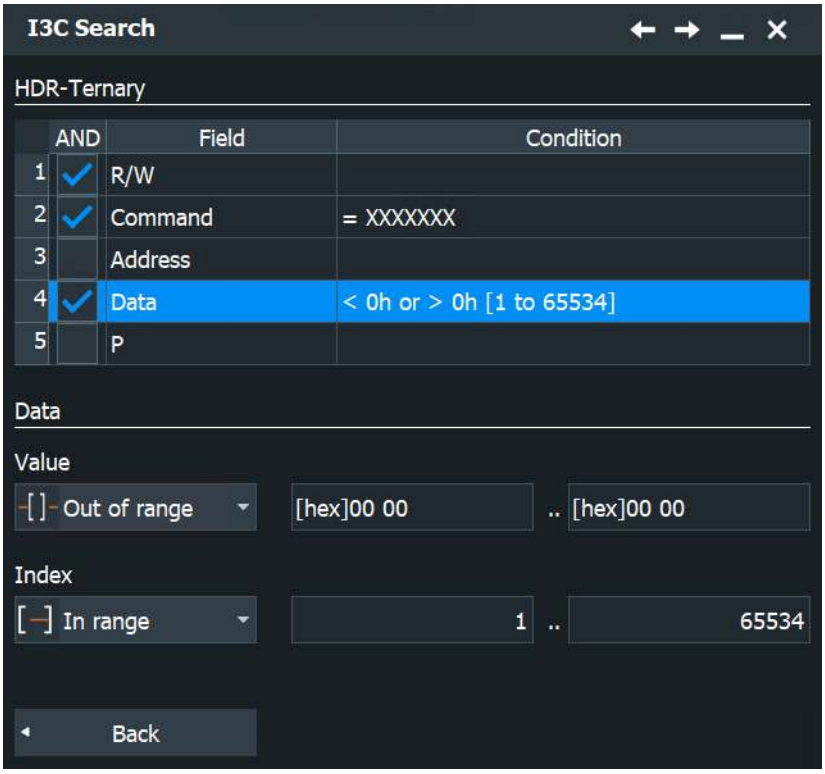

This dialog provides setting options that depend on the selected frame type. You can define search conditions for each field of the frame.

"Field" Selects and enables the frame's field type that you want to search. The available fields are "ACK", "Address", "CCC", "Command", "CRC", "Data", "P", "R/W" and "Reserved".

Remote command:
`SEARch:TRIGger:I3C:FIENable` on page 1894
`SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:ENABle` on page 1894

"Condition" Displays the value condition for the selected field.

Remote command:
`SEARch:TRIGger:I3C:BIT` on page 1894
`SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:BIT` on page 1894

"Value" The value setup consists of a comparison condition and one or two data patterns.

Remote command:
SEARch:TRIGger:I3C:DMAX on page 1891
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMAX on page 1891
SEARch:TRIGger:I3C:DMIN on page 1891
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMIN on page 1891
SEARch:TRIGger:I3C:DOPerator on page 1892
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DOPerator on page 1892

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SEARch:TRIGger:I3C:IMAX on page 1893
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMAX on page 1893
SEARch:TRIGger:I3C:IMIN on page 1893
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMIN on page 1893
SEARch:TRIGger:I3C:IOPerator on page 1893
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IOPerator on page 1893

Error type
Selects and enables the error types that you want to search. You can search for all enabled error types simultaneously.

The following error types are available: "ACK error", "Parity error", "CRC error", "Length error" and "Unknown".

Remote command:
SEARch:TRIGger:I3C:ERENable on page 1892
SEARch:TRIGger:I3C:ERRor<m>:ENABle on page 1892

14.3.5.2 I3C search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

The remote commands for the search reults are described in Section 26.18.4.5, "I3C search results", on page 1894.

14.4 SPI bus (option R&S RTP-K1)

- About the SPI protocol 595
- SPI configuration 596
- SPI trigger 600
- SPI decode results 603
- Search on decoded SPI data 604

14.4.1 About the SPI protocol

A 4-channel instrument is required for full support of the SPI protocol, or the MSO option R&S RTP-B1.

The Serial Peripheral Interface SPI is used for communication with slow peripheral devices, in particular, for transmission of data streams.

The main characteristics of SPI are:

- Main-subnode communication
- No device addressing. The sub is accessed by a chip select, or sub select line.
- No acknowledgment mechanism to confirm receipt of data
- Duplex capability

Most SPI buses have four lines, two data and two control lines:

- Clock line to all subs (SCLK)
- Sub select or Chip select line (SS or CS)
- Main data output, sub data input (MOSI or SDI)
- Main data input, sub data output (MISO or SDO)

When the main generates a clock and selects a sub device, data can be transferred in either or both directions simultaneously.

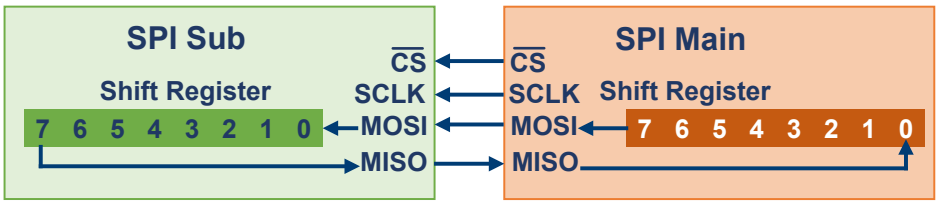


Figure 14-5: Simple configuration of SPI bus

The data bits of a message are grouped by the following criteria:

- A word contains several successive bits. The word length is defined in the protocol configuration.
- A frame contains several successive words, at least one word.

Supported frame types


- MISO: Main data output, sub data input
- MOSI: Main data input, sub data output
- MISOMOSI: Combined view of both SPI data directions

14.4.2 SPI configuration

14.4.2.1 SPI configuration settings

Access: [Bus] > "SPI" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

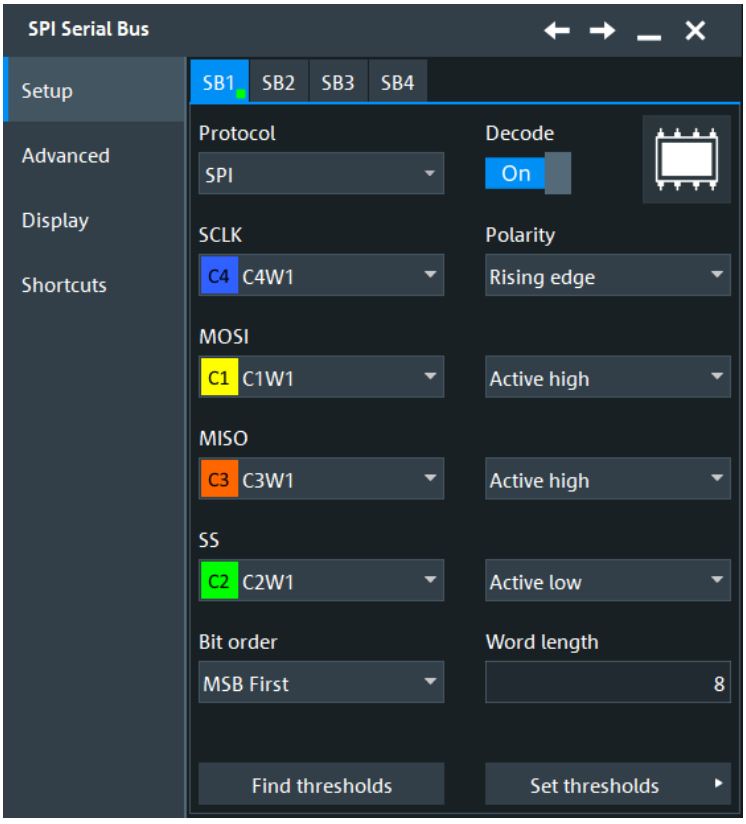

See also: Section 14.1.1, "Setup - general settings", on page 556

SCLK
Defines the settings for the clock line.

SCLK source ← SCLK
Sets the input channel of the clock line. Waveform 1 of channel signals, math waveforms, and reference waveforms can be used for decoding.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
`BUS<b>:SPI:SCLK:SOURce` on page 1904

Polarity ← SCLK
Two settings define the clock mode: the clock polarity and the clock phase. Together, they determine the edges of the clock signal on which the data are driven and sampled. A master/slave pair must use the same parameter pair values to communicate.

The clock polarity is "Idle low" (idle = 0) or "Idle high" (idle = 1).

The clock phase defines the slope. It selects if data is stored with the rising or falling slope of the clock. The slope marks the begin of a new bit.

SS, MISO, MOSI
Configures the Slave Select, MISO and MOSI lines.

Source ← SS, MISO, MOSI
Sets the input channel of the selected line.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Do not combine a reference waveform with channel or math waveform because the time correlation of these waveforms might differ.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.


For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
`BUS<b>:SPI:SSELect:SOURce` on page 1905
`BUS<b>:SPI:MISO:SOURce` on page 1905
`BUS<b>:SPI:MOSI:SOURce` on page 1906

Polarity ← SS, MISO, MOSI
Selects whether transmitted data or the slave select signal is high active (high = 1) or low active (low = 1).

Remote command:
`BUS<b>:SPI:SSELect:POLarity` on page 1905
`BUS<b>:SPI:MISO:POLarity` on page 1906
`BUS<b>:SPI:MOSI:POLarity` on page 1907

Set Thresholds
Opens a dialog, where you can set the tresholds for digitization of signals for each line. If the signal value on the line is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low if the signal value is below the threshold. The interpretation of HIGH and LOW is defined by the Polarity.

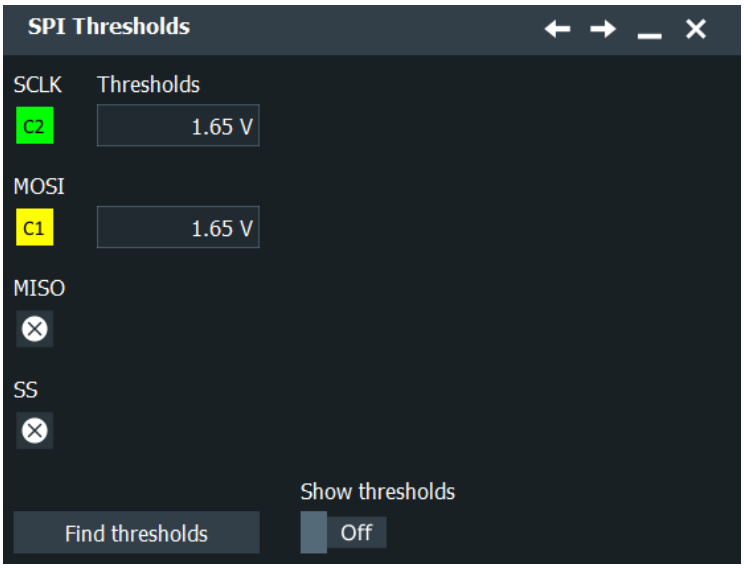

There are several ways to set the threshold:
- "Threshold"
  Enter the value directly in the field.
- "Autoset"
  Starts software algorithms for determining the signal threshold levels and bitrate.
- "Find thresholds"
  Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Note: If the sources are digital channels, the same threshold values are used for the parallel and the serial buses. You can set the thresholds either in the parallel bus configuration or in the serial bus configuration.

Remote command:
`BUS<b>:SPI:SCLK:THReshold` on page 1907
`BUS<b>:SPI:MISO:THReshold` on page 1907
`BUS<b>:SPI:MOSI:THReshold` on page 1907
`BUS<b>:SPI:SSELect:THReshold` on page 1907
`BUS<b>:SETReflevels` on page 1834
`BUS<b>:FAUToset` on page 1834

Bit order
Defines if the data of the messages starts with msb (most significant bit) or lsb (least significant bit). The display of the decoded signal considers this setting, results are displayed in the specified order.


Remote command:
`BUS<b>:SPI:BORDer` on page 1904

Word length
Sets the number of bits in a word. The maximum length is 32 bit.

Remote command:
BUS<b>:SPI:WSIZe on page 1904

14.4.2.2 Advanced settings

Access: [Bus] > "Advanced" tab.

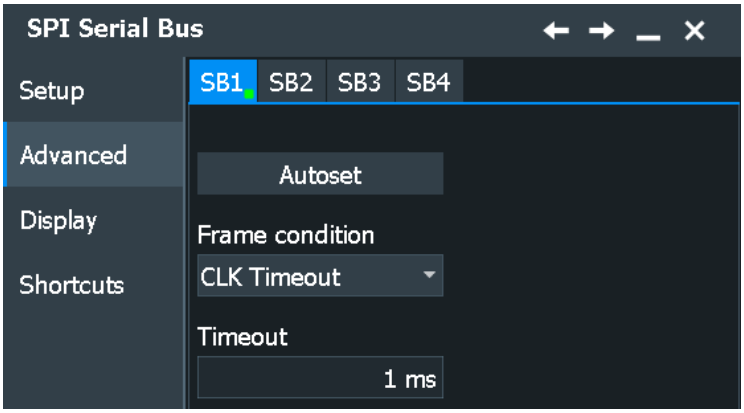

Autoset
Starts software algorithms for determining the signal threshold levels and bitrate.

Remote command:
BUS<b>:FAUToset on page 1834

Frame condition
Defines the start of a frame. A frame contains a number of successive words, at least one word.

"SS" Start and end of the frame is defined by the active state of the slave select signal.

"CLK timeout" Defines a timeout on the clock line SCLK as limiter between two frames. The timeout condition is used for SPI connections without an SS line. Enter the minimum clock idle time in the field.

Remote command:
BUS<b>:SPI:FRCondition on page 1907

Timeout
Sets the minimum clock idle time if a timeout on the clock line SCLK is used as limiter between two frames.

See also: "Frame condition" on page 599.

Remote command:
BUS<b>:SPI:TIMeout on page 1908

14.4.2.3 Configuring SPI signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see Section 14.4.2, "SPI configuration", on page 596.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. Tap the "Protocol" button and select the protocol: "SPI".
4. Tap the "SCLK Source" button, and select the waveform of the clock line.
5. Set the polarity (clock mode) for SCLK.
6. For each of the available SS, MISO and MOSI lines, assign the waveform. Define the polarity (active state) of the line.
7. Set the logical thresholds.
8. Set the "Bit order", "Word length", and "Frame condition" according to your signal.
9. Enable "Decode".

14.4.3 SPI trigger

14.4.3.1 SPI trigger

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

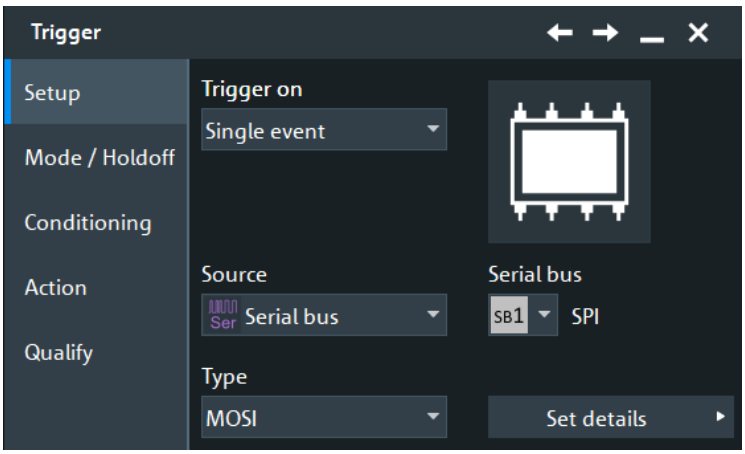

Make sure that:


- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Trigger type
Selects the trigger type for SPI analysis.

"Frame start (SS)"	Trigger on the start of the frame when the slave select signal SS changes to the active state. This trigger type is available if Frame condition is set to "SS".
"Frame start (Timeout)"	Triggers on the start of the frame when the clock idle time exceeds the "Timeout" time. This trigger type is available if Frame condition is set to "CLK timeout".
"MOSI"	Sets the trigger to a specified data pattern expected on the MOSI line. See: "MOSI and MISO data conditions" on page 601.
"MISO"	Sets the trigger to a specified data pattern expected on the MISO line. See: "MOSI and MISO data conditions" on page 601.
"MOSI/MISO"	Sets the trigger to specified data patterns expected on the MOSI and MISO lines on the same time.

Remote command:
`TRIGger<t>:SPI:TYPE` on page 1908

MOSI and MISO data conditions
The trigger on MOSI and MISO patterns is defined in the same way:

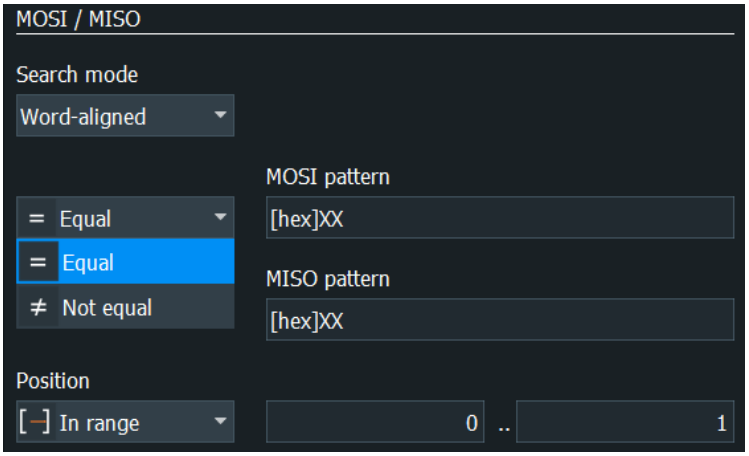

Condition ← MOSI and MISO data conditions
Selects the operator for the "Data" pattern: "Equal" or "Not equal".

Remote command:
`TRIGger<t>:SPI:FCONdition` on page 1911

MOSI pattern, MISO pattern ← MOSI and MISO data conditions
Specify the data patterns to be found on the MOSI and/or MISO line.

If the trigger type is "MOSI" or "MISO" (one pattern is defined), the maximum pattern length is 256 bit. If the trigger type is "MOSI/MISO", two patterns must be found at the same time. Thus, both patterns must have the same length, and the maximum pattern length of each pattern is 128 bit.

Enter the words in msb first bit order. The starting point of the pattern is defined by Index min, Index max and Search mode.

The bit pattern editor helps you to enter the pattern, see Section 14.1.7, "Bit pattern editor", on page 564.

Remote command:
`TRIGger<t>:SPI:MOSipattern` on page 1911
`TRIGger<t>:SPI:MISopattern` on page 1911

Position ← MOSI and MISO data conditions
Operator for the data position. You can define an exact position, a position range, or let the position undefined ("Any").

Remote command:
`TRIGger<t>:SPI:DPOPerator` on page 1910

Index min, Index max ← MOSI and MISO data conditions
The effect of data positioning depends on the Search mode. It sets the number of bits or words before the first word of interest. These offset bits/words are skipped. If the position operator defines a range, the first and the last bit/word of interest are defined. The index 0 is associated with the first data bit or word.

Remote command:
`TRIGger<t>:SPI:DPOSition` on page 1910
`TRIGger<t>:SPI:DPTO` on page 1910

Search mode ← MOSI and MISO data conditions
Defines how the specified data pattern is searched:

"Word-aligned" The pattern is matched only at word boundaries.

"Bit-aligned" Bit-by-bit: the pattern can start at any position in the message.

Remote command:
`TRIGger<t>:SPI:PALignment` on page 1909

14.4.3.2 Triggering on SPI

Prerequisites: A bus is configured for the SPI signal to be analyzed.

1. Press the [Bus] key and selet the "Shortcuts" tab.

2. Press "Setup trigger".
3. Select the serial bus that is set to SPI.
4. Select the "Trigger type".
5. For more complex trigger types, enter the data pattern conditions
   For details, see Section 14.4.3, "SPI trigger", on page 600

14.4.4 SPI decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".


For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The "Decode results" table contains information about all decoded frames.

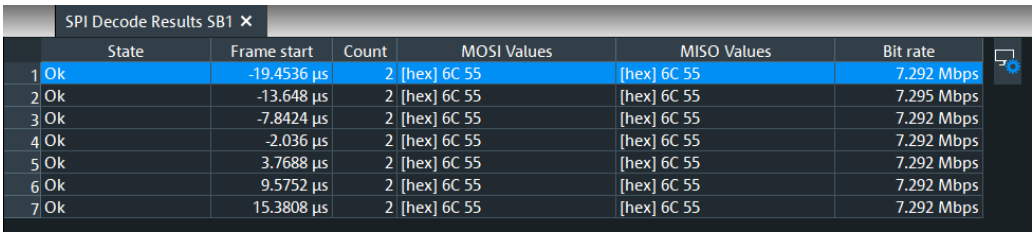

	State	Frame start	Count	MOSI Values	MISO Values	Bit rate
1	Ok	-19.4536 µs	2	[hex] 6C 55	[hex] 6C 55	7.292 Mbps
2	Ok	-13.648 µs	2	[hex] 6C 55	[hex] 6C 55	7.295 Mbps
3	Ok	-7.8424 µs	2	[hex] 6C 55	[hex] 6C 55	7.292 Mbps
4	Ok	-2.036 µs	2	[hex] 6C 55	[hex] 6C 55	7.292 Mbps
5	Ok	3.7688 µs	2	[hex] 6C 55	[hex] 6C 55	7.292 Mbps
6	Ok	9.5752 µs	2	[hex] 6C 55	[hex] 6C 55	7.292 Mbps
7	Ok	15.3808 µs	2	[hex] 6C 55	[hex] 6C 55	7.292 Mbps

Table 14-6: Content of the "Decode results" table

Column	Description
State	Overall state of the frame
Frame start	Times of frame start and frame end
Count	Number of words in the frame
MOSI values	Value of the MOSI data words. The data format is selected below the table.
MISO values	Value of the MISO data words. The data format is selected below the table.
Bit rate	Value of the bit rate

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands to retrieve decode results are described in Section 26.18.5.3, "SPI decode results", on page 1912.

14.4.5 Search on decoded SPI data


Using the search functionality, you can find various events in the decoded data, the same events which you also can trigger on. Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search "Source" to the serial bus that is configured for the protocol to be analyzed.

See also Section 11, "Search functions", on page 463.

14.4.5.1 SPI search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

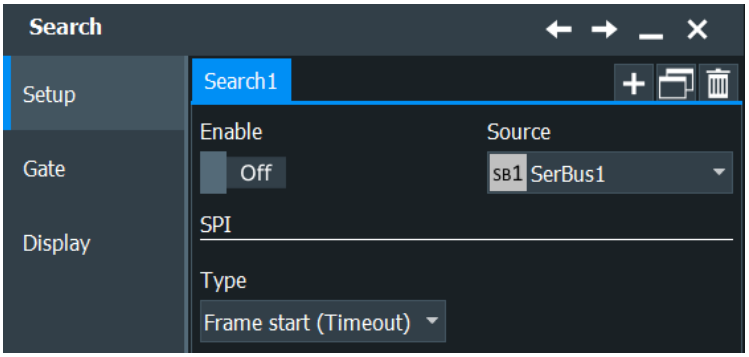

Type
Sets the event to be searched for.


"Frame start (SS)"	Searches for the start of the frame when slave select signal SS changes to the active state. This type is available if the slave select line is configured in the bus setup, and the frame condition is "SS".
"Frame start (Timeout)"	Searches for the start of the frame when the clock idle time exceeds the timeout. This trigger type is available if frame condition is set to "CLK timeout".
"MOSI"	Searches for a specified data pattern expected on the MOSI line.
"MISO"	Searches for a specified data pattern expected on the MISO line.

"MOSI / MISO" Searches for specified data patterns expected on the MOSI and MISO lines.

Remote command:
SEARch:TRIGger:SPI:TYPE on page 1917

MOSI and MISO data search
The MOSI and MISO setup consists of the condition, position, MOSI pattern, MISO pattern, search mode (word-aligned, bit-aligned) and one or two index patterns.

The MOSI and MISO setup settings are the same as in the SPI trigger setup. For details, see "MOSI and MISO data conditions" on page 601.

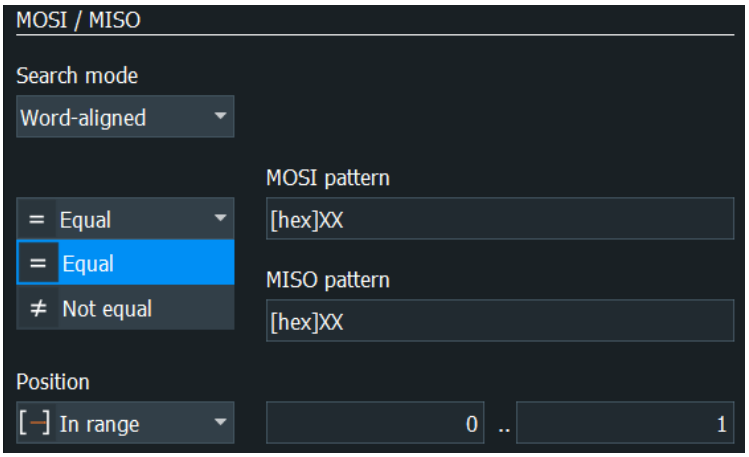

Remote command:
SEARch:TRIGger:SPI:FCONdition on page 1918
SEARch:TRIGger:SPI:MISopattern on page 1918
SEARch:TRIGger:SPI:MOSipattern on page 1918
SEARch:TRIGger:SPI:DPOPerator on page 1919
SEARch:TRIGger:SPI:DPOSition on page 1919
SEARch:TRIGger:SPI:DPTO on page 1919
SEARch:TRIGger:SPI:PALignment on page 1920

14.4.5.2 SPI search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands are listed in Section 26.18.5.5, "SPI search results", on page 1920.

14.5 UART/RS-232/RS-422/RS-485 (option R&S RTP-K2)

14.5.1 About the UART / RS-232 interface

The Universal Asynchronous Receiver/Transmitter UART converts a word of data into serial data, and vice versa. It is the base of many serial protocols such as RS-232.

The UART uses only one line, or two lines for transmitter and receiver.

Data transfer

The data is transmitted in words, also referred to as symbols or characters. Each word consists of a start bit, several data bits, an optional parity bit, and one or more stop bits. Several words can form a package, or frame. The end of a package is marked with a reserved word or by a pause between two words.




Figure 14-6: Bit order in a UART word (symbol)

- The start bit is a logic 0.
- The stop bits and the idle state are always logic 1.

The UART protocol has no clock for synchronization. The receiver synchronizes by the start and stop bits, and the bit rate that must be known to the receiver.

Trigger

The R&S RTP can trigger on specified parts of UART serial signals:


- Start bit
- Packet start
- Parity errors, and breaks
- Stop errors
- A serial pattern at any or a specified position

14.5.2 UART configuration

14.5.2.1 UART configuration settings

Access: [Bus] > "UART/RS232" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

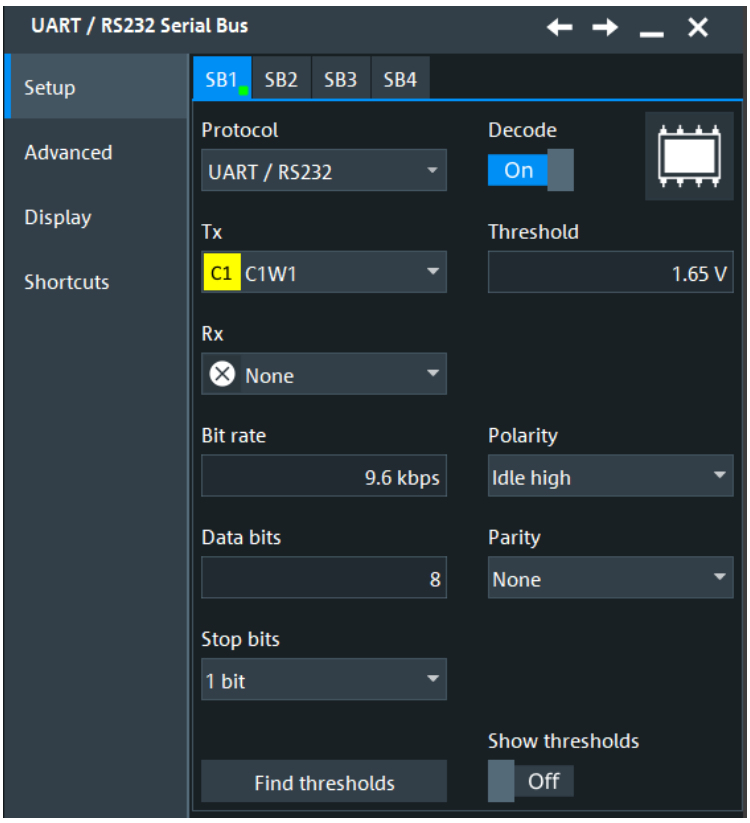

See also: Section 14.1.1, "Setup - general settings", on page 556

Source: Tx, Rx
Select the input channels for the transmitter and receiver signals.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Do not combine a reference waveform with channel or math waveform because the time correlation of these waveforms might differ.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
`BUS<b>:UART:TX:SOURce` on page 1925
`BUS<b>:UART:RX:SOURce` on page 1924

Threshold
Sets the threshold value for digitization of signals for each line. If the signal value on the line is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low if the signal value is below the threshold. The interpretation of HIGH and LOW is defined by the Polarity.

Note: If the sources are digital channels, the same threshold values are used for the parallel and the serial buses. You can set the thresholds either in the parallel bus configuration or in the serial bus configuration.

"Threshold" Enter the value directly in the field.

"Find thresholds" Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
`BUS<b>:UART:RX:THReshold` on page 1925
`BUS<b>:UART:TX:THReshold` on page 1925
`BUS<b>:UART:TECHnology` on page 1926
`BUS<b>:SETReflevels` on page 1834
`BUS<b>:FAUToset` on page 1834

Polarity
Defines the logic levels of the bus. The idle state corresponds to a logic 1. the start bit to a logic 0. "Idle high" (high=1) is used, for example, for control signals, while "Idle low" (low=1) is defined for data lines (RS-232).

Remote command:
`BUS<b>:UART:POLarity` on page 1927

Bit rate
Sets the number of transmitted bits per second. To select a bit rate from list of predefined values, tap the icon beside the "Bit rate" field. To enter a specific value, open the keypad. The list of predefined values is also available in the keypad.

Remote command:
`BUS<b>:UART:BITRate` on page 1926
`BUS<b>:UART:BAUDrate` on page 1926

Data bits
Sets the number of data bits of a word in a range from 5 bits to 8 bits. If no parity bit is used, then 9 data bits are possible.

Remote command:
`BUS<b>:UART:SSIZe` on page 1928

Stop bits
Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

Remote command:
`BUS<b>:UART:SBIT` on page 1928

Parity
Defines the optional parity bit that is used for error detection.

"None" No parity bit is used.

"Odd" The parity bit is set to "1" if the number of data bits set to "1" is even.

"Even" The parity bit is set to "1" if the number of data bits set to "1" is odd.

"Mark" The parity bit is always a logic 1.


"Space" The parity bit is always a logic 0.

"Don't care" The parity is ignored.

Remote command:
`BUS<b>:UART:PARity` on page 1927

14.5.2.2 Advanced settings

Access: [Bus] > "Advanced" tab.

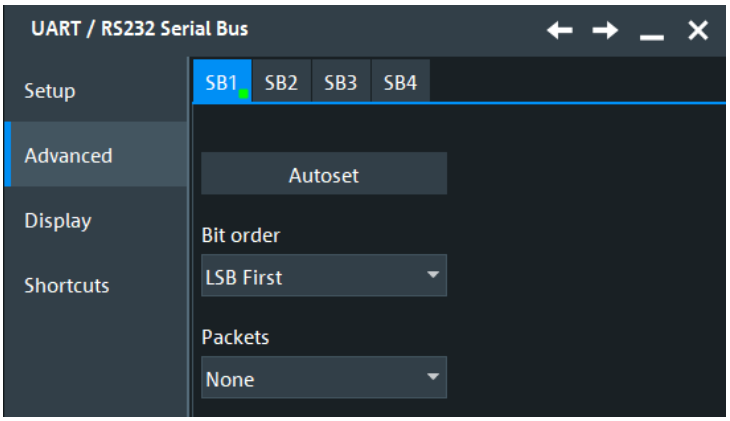

Autoset
Starts software algorithms for determining the signal threshold levels and bitrate.


Remote command:
`BUS<b>:FAUToset` on page 1834

Bit order
Defines if a word starts with msb (most significant bit) or lsb (least significant bit). The display of the decoded signal considers this setting, results are displayed in the specified order.


Packets
Allows you to define packets of several words in the data stream.

"None" Packets are not considered.

"End word" Defines a pattern as end condition of a packet, for example, a reserved word like CR or LF. The bit pattern editor provides frequently used values in the "Predefined values" list below the pattern table. A new packet starts with the first start bit after the defined end pattern.

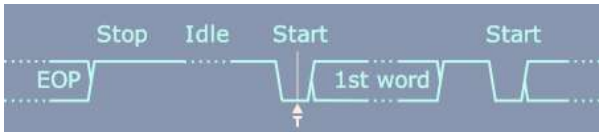

"Timeout" Defines a timeout between a stop bit and the next start bit. Enter the minimum time that marks the end of a packet.
A new packet starts with the first start bit after the timeout.

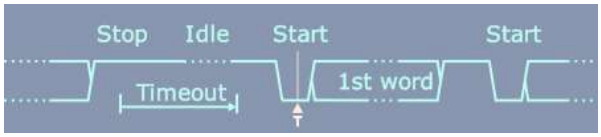

Remote command:
`BUS<b>:UART:PACKets` on page 1928
`BUS<b>:UART:TOUT` on page 1929
`BUS<b>:UART:EWORd` on page 1929

14.5.2.3 Configuring UART protocol


For details on configuration settings, see Section 14.5.2.1, "UART configuration settings", on page 606.

1. Press the [Bus] key on the front panel.
2. At the left-hand side, select the vertical tab of the bus you want to set up.
3. Select the "Setup" tab.
4. Tap the "Protocol" button and select the protocol: "UART".
5. Tap the "TX" button, and select the waveform of the transmitter line.
6. Tap the "Rx" button, and select the waveform of the receiver line.
7. Set the logical thresholds.
8. Set the "Bit rate" and "Stop bits".
9. Set the "Data bits" and "Parity".
10. Set the "Bit order", "Polarity" and "Packets".
11. Enable "Decode".

14.5.3 UART trigger

14.5.3.1 UART trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

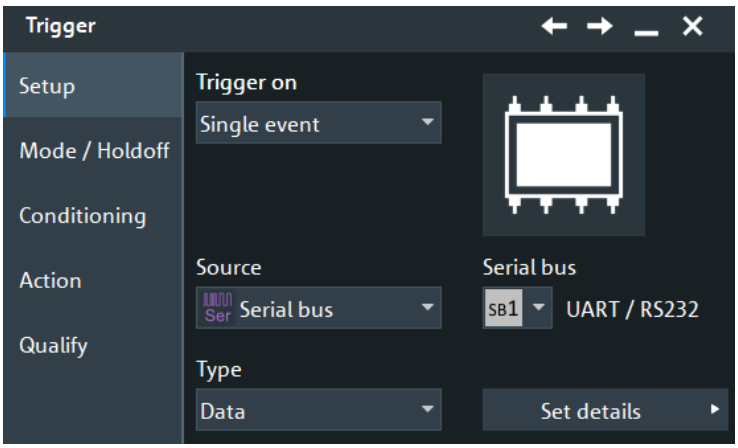


Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Type
Selects the trigger type for UART analysis.

"Start bit"	Triggers on a start bit. The start bit is the first low bit after a stop bit.
"Packet start"	Triggers on the begin of a data packet. This trigger type is available, if Packets is enabled.

"Data" Trigger on a serial pattern at a defined position in the data packet. The pattern can include several subsequent symbols (data frames).

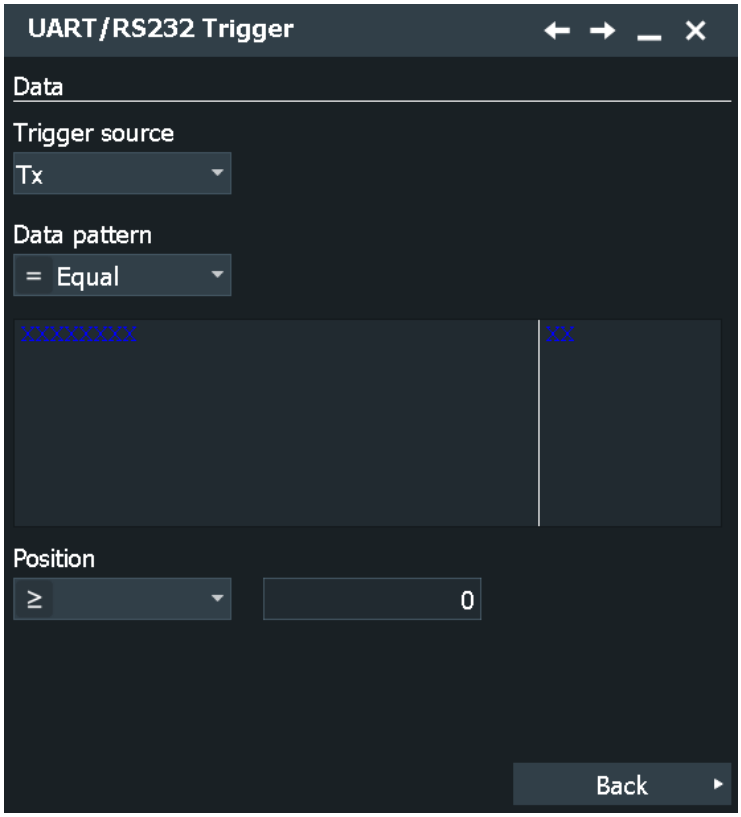

See "Data conditions" on page 612.

"Parity error" Triggers on a parity error indicating a transmission error. This trigger type is only available if a parity is configured for the UART bus.

"Break condition" Triggers if a start bit is not followed by a stop bit, the data line remains at logic 0 for longer than a UART word.

"Stop error" Triggers if the stop bit is a logic 0.

Remote command:
`TRIGger<t>:UART:TYPE` on page 1930

Trigger source
Selects the transmitter or receiver line as trigger source.

Remote command:
`TRIGger<t>:UART:SOURce` on page 1931

Data conditions
Specify the data conditions if the trigger type is set to "Data".

Condition ← Data conditions
Selects the operator for the "Data" pattern: "Equal" or "Not equal".

Remote command:
`TRIGger<t>:UART:FCONdition` on page 1932

Pattern ← Data conditions
Specifies the data pattern to be found on the specified trigger source, in binary or hex format. Enter the words in msb first bit order. The starting point of the pattern is defined by Position and Index min, Index max.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

Remote command:
`TRIGger<t>:UART:DATA` on page 1932

Position ← Data conditions
Operator for the data position. You can define an exact position, or a position range.

The setting is available if Packets is enabled in the protocol configuration.

Remote command:
`TRIGger<t>:UART:DPOPerator` on page 1931

Index min, Index max ← Data conditions
Sets the number of words before the first word of interest. These offset words are ignored. If the Position defines a range, the first and the last words of interest are defined.

The setting is available if packet detection is enabled in the protocol configuration.

Remote command:
`TRIGger<t>:UART:DPOSition` on page 1931
`TRIGger<t>:UART:DPTO` on page 1932

14.5.3.2 Triggering on UART signals

Prerequisites: An UART bus is configured, see Section 14.5.3.1, "UART trigger settings", on page 610.

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to UART.
5. Select the "Trigger type" and "Trigger source".
6. For more complex trigger types, enter the data conditions: pattern, position, index. For details, see Section 14.2.3, "I²C trigger", on page 570

14.5.4 UART decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".

2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show binary".
3. If required, enable "Zoom coupling"


For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The "Decode results" box shows the detailed decoded data for each word.

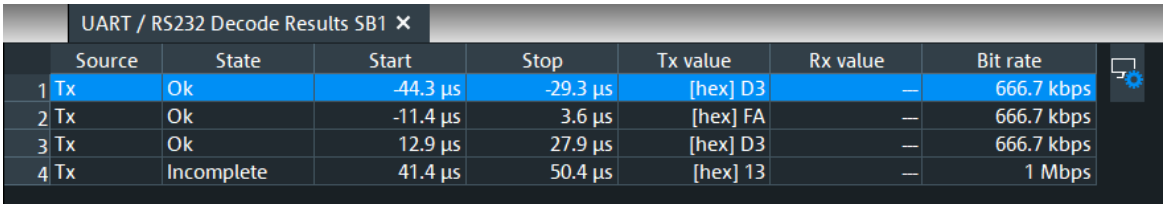

The decoding process considers the "Bit order" configuration setting of the signal and displays the binary result MSB first.

Table 14-7: Content of the Decode results table

Column	Description
Number of Frames	
Source	Line, Tx or Rx
State	Decoding state of the word. "Insuffcient waveform length" indicates that the word is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of the word start (start bit)
Stop	Time of the word stop (stop bit)
Tx value	Value of the Tx word. The data format is selected in the "Display" tab.
Rx value	Value of the Rx word. The data format is selected in the "Display" tab.
Bit rate	Value of the bit rate .

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands to retrieve decode results are described in Section 26.18.6.3, "Decode results", on page 1932.

14.6 CAN and CAN FD (option R&S RTP-K3/K9)

CAN is the Controller Area Network, a bus system designed by Bosch for use within automotive network architecture, for example, for brake, power train and engine management. Today, it is also used in many other systems, for example, in industrial machines, aerospace, subsea, and merchant marine.

More than 20 years after the invention of CAN, communication needs have increased, and CAN has reached its bandwidth limits in some application fields. Therefore, Bosch specified an improved CAN protocol with flexible data rate - CAN FD. It introduces a higher bit rate in the data phase up to 15 Mbit/s and an extended data field from up to 64 bytes.

The R&S RTP provides decoding, triggering and searching CAN and CAN FD signals with the following options:

- CAN: option R&S RTP-K3
- CAN FD: option R&S RTP-K9, which requires the CAN option R&S RTP-K3

14.6.1 The CAN protocol

CAN frame format and in CAN FD frame format can coexist within the same network. CAN FD shares the physical layer, with the CAN protocol as defined in the BOSCH CAN Specification 2.0. The frame format is different. There are two new control bits in the CAN FD frame, the first enabling the new frame format with different data length coding and the second optionally switching to a faster bit rate after the arbitration is decided. New CRC polynomials are introduced to secure the longer CAN FD frames.

14.6.2 CAN and CAN FD configuration

14.6.2.1 CAN and CAN FD configuration settings

Access: [Bus] > "CAN" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

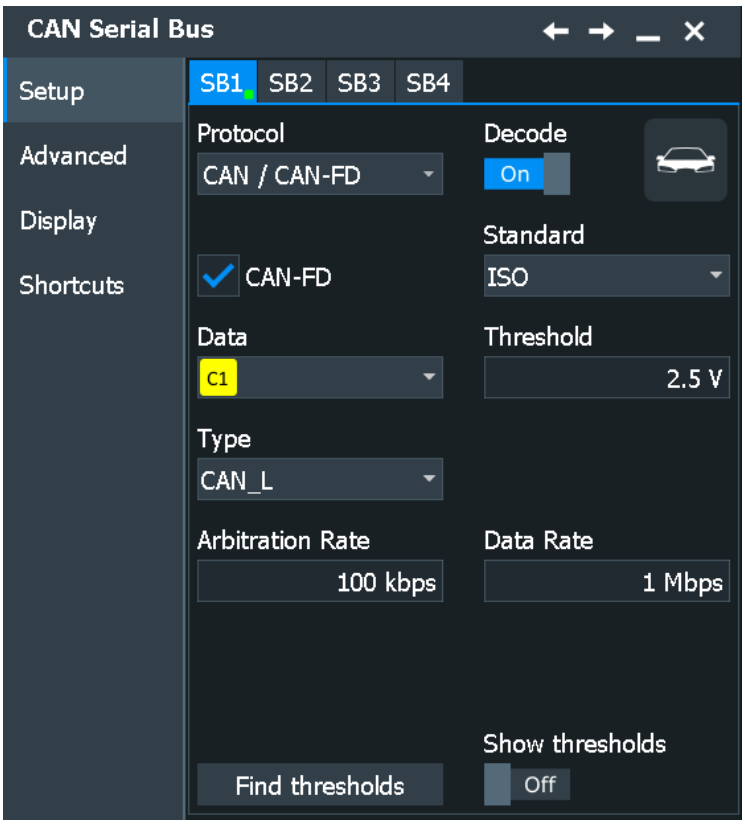


Figure 14-7: Configuration for CAN FD

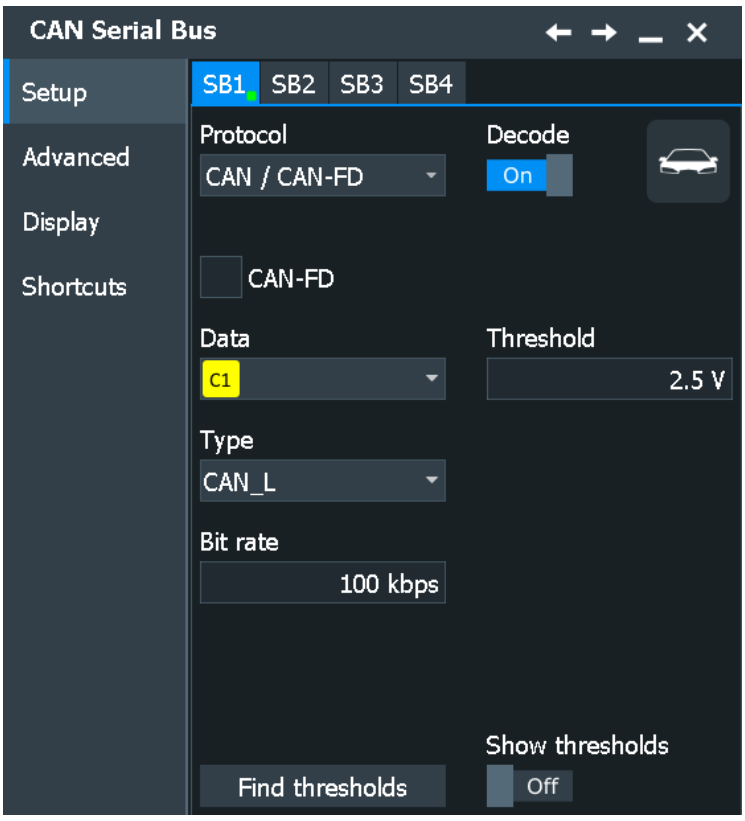


Figure 14-8: Configuration for CAN

See also: Section 14.1.1, "Setup - general settings", on page 556

Protocol
Defines the protocol type of the selected serial bus.

Remote command:
`BUS<b>:TYPE` on page 1833

Decode
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`BUS<b>[:STATe]` on page 1833

Data
Sets the source of the selected data line.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

A math waveform can be used, for example, if you probe on CAN-High and CAN-Low using two single-ended probes, and the difference between high and low is calculated and displayed using a math waveform.

Remote command:
BUS<b>:CAN:DATA:SOURce on page 1935

Type
Selects the CAN-High or CAN-Low line. CAN uses both lines for differential signal transmission.

If you measure with a differential probe, connect the probe to both CAN-H and CAN-L lines, and select the data "Type" = *CAN-H*.

If you use a single-ended probe, connect the probe to either CAN_L or CAN_H, and select the data type accordingly.

Remote command:
BUS<b>:CAN:TYPE on page 1936

CAN-FD
Enables the CAN FD protocol configuration and displays additional CAN FD parameters. The setting is available in CAN FD option R&S RTP-K9.

Remote command:
BUS<b>:CAN:FDATa:ENABle on page 1938
BUS<b>:CAN:FDATa:FRAMe<fr>:STANdard? on page 1952

Standard
Only available for CAN FD buses.

"Non-ISO" Signals are decoded according to the the Bosch CAN FD protocol.

"ISO" Signals are decoded according to the the ISO CAN FD protocol. This protocol has an additional stuff count field before the CRC sequence.

Remote command:
BUS<b>:CAN:FDATa:PSTandard on page 1936

Threshold
Sets the threshold value for digitization of the signal. If the signal value on the line is higher than the threshold, the signal state is high (1 or true for the boolean logic). Otherwise, the signal state is considered low (0 or false).

There are several ways to set the threshold:

- "Threshold"
  Enter the value directly in the field.
- "Autoset"
  Starts software algorithms for determining the signal threshold levels and bitrate.
- "Find thresholds"
  Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Note: If the sources are digital channels, the same threshold values are used for the parallel and the serial buses. You can set the thresholds either in the parallel bus configuration or in the serial bus configuration.

Remote command:
BUS<b>:CAN:DATA:THReshold on page 1937
BUS<b>:CAN:TECHnology on page 1937
BUS<b>:SETReflevels on page 1834
BUS<b>:FAUToset on page 1834

Bit rate (CAN) / Arbitration rate (CAN FD)
For CAN buses, the "Bit rate" sets the number of transmitted bits per second.

For CAN FD buses, this parameter is called "Arbitration rate" and sets the bit rate of the arbitration phase.

The maximum value of this rate is 1 Mbit/s. The bit rate is uniform and fixed for a given CAN or CAN FD bus.

To select a bit rate from the list of predefined values, tap the button beside the field. To enter a specific value, open the keypad. The list of predefined values is also available in the keypad.

Remote command:
BUS<b>:CAN:BITRate on page 1937


Data rate
Sets the bit rate of the data phase. The data rate can be equal or higher than the arbitration rate; and it is uniform and fixed for a given CAN FD bus. The setting is available in CAN FD option R&S RTP-K9.

To select a data rate from the list of predefined values, tap the button beside the field. To enter a specific value, open the keypad. The list of predefined values is also available in the keypad.

Remote command:
BUS<b>:CAN:FDATa:DBITrate on page 1938

14.6.2.2 Advanced settings


Access: [Bus] > "Advanced" tab.

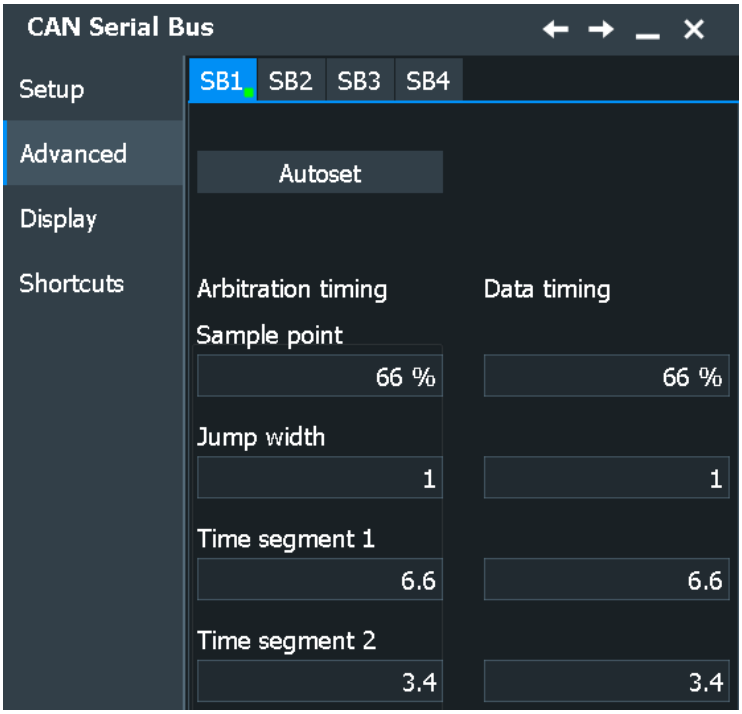

The CAN bus interface uses an asynchronous transmission scheme. The standard specifies a set of rules to resynchronize the local clock of a CAN node to the message.

The sample point divides the nominal bit period into two distinct time segments. The length of the time segments is defined in time quanta according to network and node conditions during CAN development.

For CAN FD signals, you can define the sysnchronization settings separately for the arbitration phase and data phase.

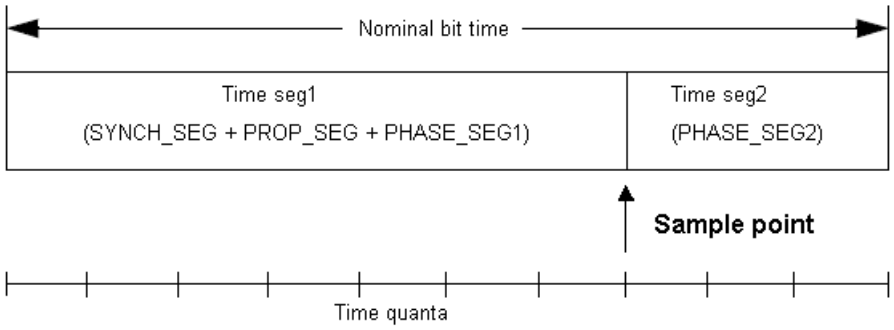

To specify the bit timing, enter either "Time segment1" and "Time segment 2", or directly the "Sample point". Additionally, set the "Jump width".

Autoset
Starts software algorithms for determining the signal threshold levels and bitrate.

Remote command:
`BUS<b>:FAUToset` on page 1834

Time segment1, Time segment2
Set the number of time quanta before the sample point (Time segment 1) and after the sample point (Time segment 2).

The "Sample point" percentage value is adjusted accordingly.

Time segments 1 comprises the segments Synch_seg, Prop_seg, and Phase_seg1 which are specified in the CAN standard. Time seg2 matches Phase_seg2 from the standard.

The maximum sum of Time segment 1 and Time segment 2 is 24.

Remote command:
`BUS<b>:CAN:T1Segment` on page 1939
`BUS<b>:CAN:T2Segment` on page 1939
`BUS<b>:CAN:FDATa:T1Segment` on page 1939
`BUS<b>:CAN:FDATa:T2Segment` on page 1939

Sample point
Sets the position of the sample point within the bit in percent ot the nominal bit time.

The time quanta values "Time segment1, Time segment2" are adjusted accordingly.

Remote command:
`BUS<b>:CAN:SAMPlepoint` on page 1938
`BUS<b>:CAN:FDATa:SAMPlepoint` on page 1938

Jump width
Time segment1 may be lengthened or time segment2 may be shortened due to resynchronization. Resynchronization corrects the phase error of an edge caused by the drift of the oscillators. The jump width defines the maximum number of time quanta for phase correction. The maximum value of the jump width is 4, or *Time seg1 - Time seg2* if this difference is lower than 4.

Remote command:
`BUS<b>:CAN:JWIDth` on page 1940
`BUS<b>:CAN:FDATa:JWIDth` on page 1940

14.6.2.3 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

DBC Files for CAN / CAN FD

Industry-standard DBC files contain more information than PTT and CSV files and translate the abstract decode results to human language. For each frame, the frame ID and the symbolic name of the ID are given; the frames are also called messages in CAN. The data of a CAN message can consist of several "signals". The DBC file provides the label, unit, start bit, length and other indicators for each signal. For state-encoded signals, the meaning of the states is given.

In the demo example, the message "EngineData" has the decimal ID 2,166,573,756 and consists of 8 data bytes. These 8 bytes are defined as 6 signals. The first one,

"PetrolLevel", starts at bit #24, has a length of 8 bit, and the unit is liter. The signal "IdleRunning" is state-encoded. It has only one bit. The binary value 0 means "Running", and the binary value 1 means "Idle".

Example: CAN DBC file section

```
BO_ 2166573756 EngineData: 8 Engine
 SG_ PetrolLevel : 24|8@1+ (1,0) [0|255] "l" ...
 SG_ EngPower : 48|16@1+ (0.01,0) [0|350] "kW" ...
 SG_ EngForce : 32|10@1+ (1,0) [0|1000] "N" ...
 SG_ IdleRunning : 23|1@1+ (1,0) [0|1] "" ...
 SG_ EngTemp : 16|7@1+ (2,-50) [-50|150] "degC" ....
 SG_ EngSpeed : 0|13@1+ (1,0) [0|8000] "rpm" ...
....
 VAL_ 2166573756 IdleRunning 0 "Running" 1 "Idle" ;
```

PTT and CSV Files for CAN / CAN FD

Label list files are protocol-specific. A PTT label file for CAN protocols contains three values for each identifier:

- Identifier type, 11-bit or 29-bit long
- Identifier value
- Label, the symbolic name of the identifier, specifying its function in the bus network.

Example: CAN PTT file

```
# ------------------------------------------------------------------------------
@FILE_VERSION  = 1.00
@PROTOCOL_NAME = can
# ------------------------------------------------------------------------------
# Labels for CAN protocol
#   Column order: Identifier type, Identifier value, Label
# ------------------------------------------------------------------------------
11,064h,Diag_Response
11,1E5h,EngineData
11,0A2h,Ignition_Info
11,1BCh,TP_Console
11,333h,ABSdata
11,313h,Door_Left
11,314h,Door_Right
29,01A54321h,Throttle
29,13A00FA2h,LightState
29,0630ABCDh,Engine_Status
29,03B1C002h,Airbag_Status
29,01234ABCh,NM_Gateway
# ------------------------------------------------------------------------------
```

Remote command:


- `BUS<b>:CAN:FRAMe<fr>:SYMBol?` on page 1954

14.6.3 CAN / CAN FD trigger

The R&S RTP can trigger on various events in a CAN or CAN FD frame. Trigger conditions include start of frame, frame ID, data pattern, or error conditions.

14.6.3.1 Trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

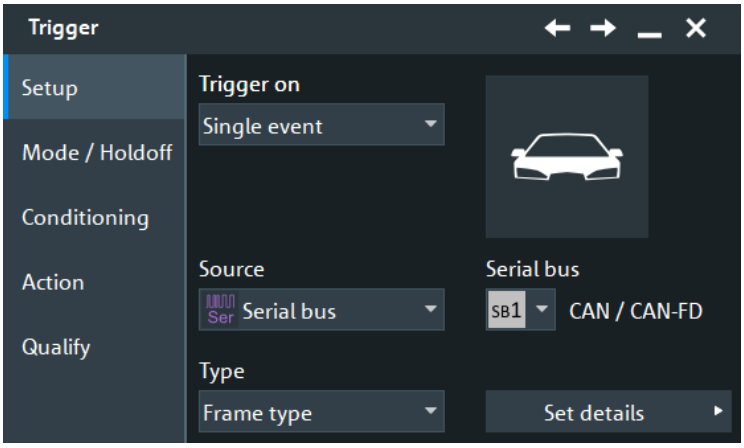

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Serial bus
Selects the serial bus to be triggered on. Make sure to select the correct bus before you enter the settings.

To trigger on a serial bus, the signals sources must be channel signals. If the data or clock source is a math or reference waveform, you cannot trigger on that bus.

Remote command:
`TRIGger<t>:SOURce:SBSelect` on page 1839


Protocol
Defines the protocol type of the selected serial bus.

Remote command:
`BUS<b>:TYPE` on page 1833

Trigger type
Selects the trigger type for CAN analysis.

"Start of frame" Triggers on the first edge of the dominant SOF bit (synchronization bit).


"Frame type"

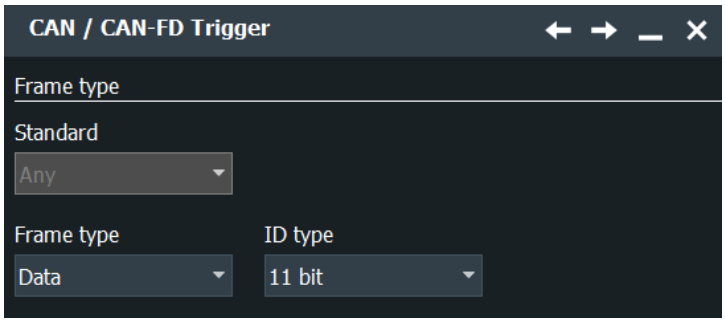

Triggers on a specified frame type (data, remote, error, or overload). For data and remote frames, also the identifier format is considered.


For details, see:
- "Frame type" on page 626
- "ID type" on page 626

"Identifier"

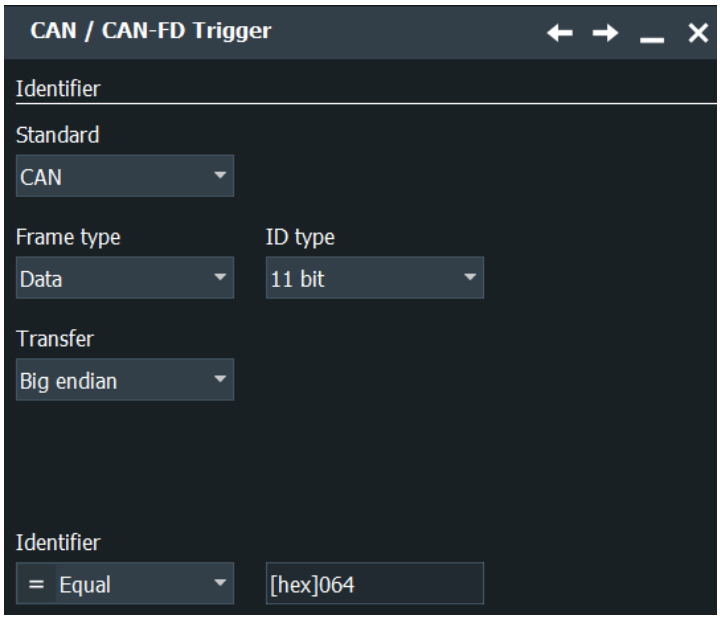

Sets the trigger to a specific message identifier or an identifier range.
See "Identifier setup: Condition, Identifier min, Identifier max" on page 627.


"Identifier + Data"

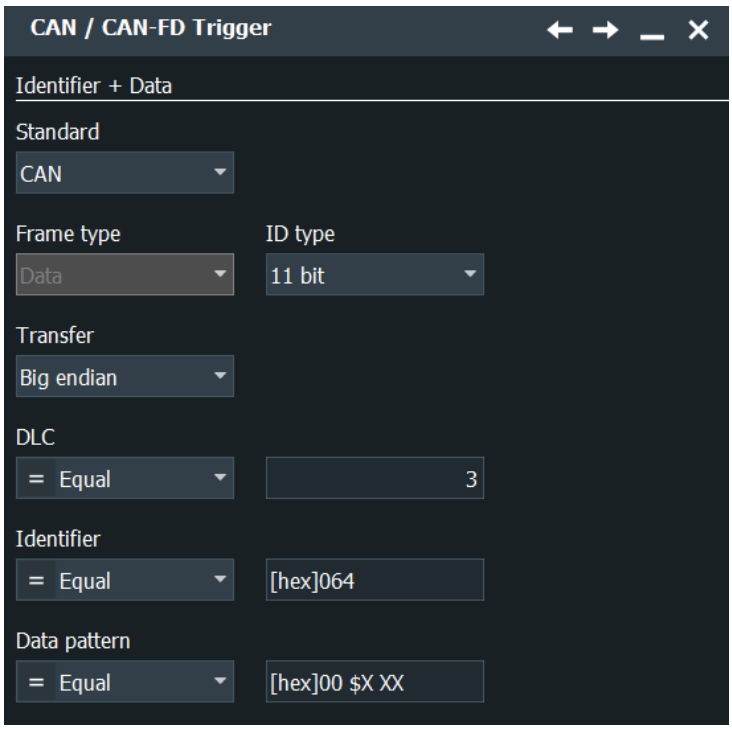

Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.
The identifier conditions are the same as for the "Identifier" trigger type, see "Identifier setup: Condition, Identifier min, Identifier max" on page 627. Data conditions are set with "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628.

"Error condition"

Identifies various errors in the frame, see "Error conditions" on page 629.

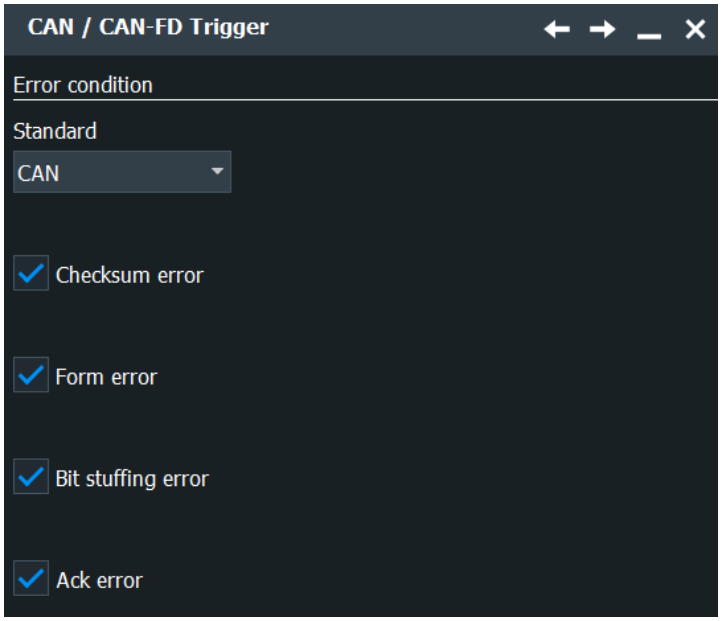

"Symbolic" The "Symbolic" trigger type is available if a DBC label list file is loaded and applied. It allows you to trigger on a specific data message, or a signal and its value that appears inside the message, see Section 14.6.6.1, "Symbolic trigger", on page 637.

Remote command:
TRIGger<t>:CAN:TYPE on page 1941

Standard
Selects the CAN standard: "CAN", "CAN FD", or "Any". Use "Any" to trigger on either CAN or CAN-FD frame. In this case, the trigger configuration provides all possible settings, for CAN as well as for CAN FD. The setting is available in CAN FD option R&S RTP-K9.

Remote command:
TRIGger<t>:CAN:FDATa:STANdard on page 1942

Frame type
CAN has four frame types which can be used as trigger condition.

For data and remote frames, the identifier format has to be set with ID type.

"Data" The data frame is the only frame for actual data transmission.

"Remote" Remote frames are only available in the CAN protocol.
The remote frame initiates the transmission of data by another node.
The frame format is the same as of data frames but without the data field.

"Error" When a node recognizes an error, it cancels transmission by sending an error frame.
The instrument triggers seven bit periods after the end of the error flag that is marked by a dominant-recessive edge.
The ID type is irrelevant for error frames.

"Overload" When a node needs a delay between data and/or remote frames, it sends and overload frame.
The instrument triggers seven bit periods after the end of the overload flag that is marked by a dominant-recessive edge.
The ID type is irrelevant for overload frames.

Remote command:
TRIGger<t>:CAN:FTYPe on page 1942

ID type
Selects the length of the identifier:

"11 bit" Identifier length of the CAN base frame format. The instrument triggers on the sample point of the IDE bit (identifier extension flag).

"29 bit" Identifier length of the CAN extended frame format. The instrument triggers on the sample point of the RTR bit.

"Any" The ID type and ID pattern are not relevant for the trigger condition. If the trigger type is "Identifier", the instrument triggers on any identifier in the specified frame type.
If the trigger type is "Identifier + Data", set the "ID type" to "Any" if you want to trigger only on data.

Remote command:
`TRIGger<t>:CAN:ITYPe` on page 1943

Identifier setup: Condition, Identifier min, Identifier max
The identifier setup consists mainly of the condition and one or two identifier patterns. Additionally, ID type and frame type may qualify the identifier.

The trigger point depends on the ID type.

"Frame type" Data frames and remote frames contain an identifier. Select the frame type to be triggered on, or select "Any" if the frame type is not relevant.
In CAN FD, only "Data" frames are available.

"ID type" See: "ID type" on page 626.

"Condition" Defines the operator to set a specific identifier ("Equal" or "Not equal") or an identifier range.

"Identifier min" In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.
The length of the bit patterns is restricted to the selected "ID type".

"Identifier max" The second identifier pattern is required to specify a range with conditions "In range" and "Out of range".

"FD bits" See: "FD bits" on page 627.

Remote command:
`TRIGger<t>:CAN:ICONdition` on page 1943
`TRIGger<t>:CAN:IMIN` on page 1944
`TRIGger<t>:CAN:IMAX` on page 1944

FD bits
For standard settings "CAN FD" and "Any", you can trigger on CAN FD-specific bits.

"FDF" The bit determines whether a frame is CAN or CAN-FD. It corresponds to the EDL bit (extended data length), which only exists in CAN FD format. If you do not know if the signal is CAN or CAN FD, you can use this bit to identify the format: FDF = 1 is CAN FD, and FDF = 0 is CAN. Set "X" if the format is not relevant.

"BRS" is the bit rate switch bit. Value 1 means that the bit rate switches from the "Arbitration rate" to the faster "Data rate".

"ESI" is the error state indicator. Set "X" if the bit is not relevant.

Remote command:
`TRIGger<t>:CAN:FDATa:FDF` on page 1945
`TRIGger<t>:CAN:FDATa:BRS` on page 1945
`TRIGger<t>:CAN:FDATa:ESI` on page 1945

Data setup: DLC, NDB, Transfer, Condition, Data min, Data max
The data setup consists of the transfer direction, the number of bytes, the condition, and one or two data patterns.

To trigger only on data, set the "ID type" of the identifier setup to "Any".

"Transfer" CAN only:

Sets the byte order (endianness) of the data transfer. With "Big endian", the data is analyzed and evaluated in the order of reception. With "Little endian", the instrument reads the complete data, reverses the byte order of the data, and compares it with the specified data word.

"DLC, NDB" "DLC" sets the Data Length Code, which defines the number of data bytes to be found.
"NDB" shows the number of data bytes that is set by the DLC. DLC and NDB are different in CAN FD for DLCs > 8.
CAN:

For Big Endian transfer direction, you can trigger on a number of bytes less than the data length of the frame, that means, on the first bytes that are transmitted. For Little Endian transfer direction, the exact number of data bytes in the frame must be set.
Example: The data word to be sent is *12 34 56*, and it is sent little endian by the LIN node. With Data length ≥ 2 and Transfer = Big endian, you trigger on the data of the first two bytes, that is *56 34*. With Data length = 3 and Transfer = Little endian, you trigger on the required data word *12 34 56*.
CAN FD:
The data field can have up to 64 bytes, the DLC is defined in the standard. For example, DLC = 9 defines that the data field has 12 bytes, and DLC = 15 sets a 64 byte data field.

"Condition" Sets the operator to set a specific data pattern ("Equal" or "Not equal") or a data range.

"Data min" Defines the data pattern. The pattern length is adjusted to the DLC setting (and vice versa). Enter the pattern MSB first and with big endian byte order.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:CAN:BORDer` on page 1947
`TRIGger<t>:CAN:DCONdition` on page 1945
`TRIGger<t>:CAN:DMIN` on page 1946
`TRIGger<t>:CAN:DMAX` on page 1946
`TRIGger<t>:CAN:DLCCondition` on page 1947
`TRIGger<t>:CAN:DLC` on page 1947
`TRIGger<t>:CAN:NDBYtes?` on page 1948

Data position
The data position sets the location in the data field where the instrument looks for the specified data pattern. The position can be defined if the data field of the frame is longer than 8 bytes - if DLC ≥9. The setting is available in CAN FD option R&S RTP-K9.

"Position"	Sets the operator to define an exact position ("Equal") or a data range. Use "Any", if the data position is not relevant for the trigger condition.
"Data index (min)"	Defines the number of the first data byte at which the data pattern may start.
"Data index (max)"	Sets the number of the last byte at which the required data pattern may start if the "Position" operator is "In range".

Remote command:
`TRIGger<t>:CAN:FDATa:DPOPerator` on page 1948
`TRIGger<t>:CAN:FDATa:DPOSition` on page 1949
`TRIGger<t>:CAN:FDATa:DPTO` on page 1949

Error conditions
If a CAN detects an error, it transmits an error flag at the next bit. The R&S RTP detects errors in the message and triggers on these errors even if no CAN node sends an error flag.

- CRC error
  CAN uses the Cyclic Redundancy Check, which is a complex checksum calculation method. The transmitter calculates the CRC and sends the result in the CRC sequence. The receiver calculates the CRC in the same way. A CRC error occurs when the calculated result differs from the received value in the CRC sequence.
- Bit stuffing error
  The frame segments Start Of Frame, Arbitration Field, Control Field, Data Field and CRC Sequence are coded by the bit stuffing method. The transmitter automatically inserts a complementary bit into the bit stream when it detects five consecutive bits of identical value in the bit stream to be transmitted. A stuff error occurs when the 6th consecutive equal bit level in the mentioned fields is detected.
- Form error
  A form error occurs when a fixed-form bit field contains one or more illegal bits.
- Ack error
  An acknowledgement error occurs when the transmitter does not receive an acknowledgment - a dominant bit during the Ack Slot.
- Stuff count error
  A stuff count error occurs if th received stuff count value does not match the value calculated from the own stuff bit count. Only relevant for CAN FD signals in ISO standard.

Remote command:
`TRIGger<t>:CAN:CRCerror` on page 1950
`TRIGger<t>:CAN:BITSterror` on page 1950
`TRIGger<t>:CAN:FORMerror` on page 1950
`TRIGger<t>:CAN:ACKerror` on page 1949
`TRIGger<t>:CAN:FDATa:SCERror` on page 1950

14.6.3.2 Triggering on CAN FD data

The "Identifier + Data" trigger type supports triggering on data bytes of specific value at specific location in the data field of a frame. The "Data Pattern" field provides 8 data bytes to define the data pattern. For data fields longer than 8 byte, you can define the position where the specified pattern starts.

The following examples demonstrate how the data pattern and data position are defined.

To set up the trigger

1. Set the basic trigger events:
   a) Select the source: "Serial bus".
   b) Select the serial bus.
   c) Select the protocol: "CAN/CAN FD".
   d) Select the trigger type: "Identifier + Data".
   e) Select the standard:"CAN FD" or "Any".
2. In this example, the identifier does not matter. Set the "ID type = Any".
3. Define the data setup as described in the examples.

Example: Triggering on the second data byte

The CAN FD frame has 2 or more data bytes, where the value of the second data byte should be E7.

- Set "DLC ≥ 2".
- Set the data pattern: "= XX E7".

Example: Triggering on the seventh or later data byte

The CAN FD frame has 12 or more data bytes, where the value of the seventh or later data byte should be 17.

- Set "DLC ≥ 9".
- Set the data pattern: "= XX XX XX XX XX XX 17 XX".

Example: Triggering on a data byte at a given position

The CAN FD frame has 12 or more data bytes. the trigger is set at the 8th data byte starting at the 4th data byte or later, with data byte value = 17.

- Set "DLC ≥ 9".
- Set the data pattern: "= XX XX XX XX XX XX XX 17".
- Set the position of the data pattern: "In range", "4" to "12".

The instrument skips the first 3 data bytes and starts comparing the data pattern with the 4th data byte. So, the byte with value 17 can be found between the 11th and the 19th data byte.

14.6.4 CAN and CAN FD decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".

2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

The binary results of data bytes are displayed MSB first.

For CAN protocol, the endianness setting ("Transfer") is a trigger setting and not considered for decoding.

You can also load and apply industry-standard DBC files. The symbolic names from the file are applied to the display of the decoded data, see Section 14.6.6.2, "Symbolic decode waveform", on page 638.

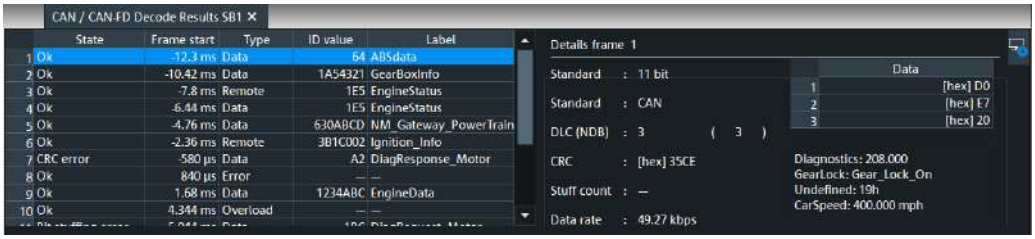


Table 14-8: Content of the Decode results table

Column	Description
State	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Frame start	Time of frame start
Type	Frame type: Data, Remote, Error, or Overload
ID value (hex)	Identifier value, hexadecimal value

Table 14-9: Content of the Details frame table

Column	Description
Standard	Frame format, CAN or CAN FD.
Label	Symbolic label name defined in the label list
DLC	Data length code, coded number of data bytes

Column	Description
NDB	Actual number of data bytes
Data	Value of the data frame. The data format is selected below the table. Remote frames do not transmit data, therefore "- - -" is displayed.
CRC (hex)	Value of the Cyclic Redundance Check (checksum), hexadecimal value
Data rate	Reason of a form error if a form error occurred

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.7.3, "Decode results", on page 1951.

14.6.5 Search on decoded CAN or CAN FD data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.


For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

14.6.5.1 Search settings

Access: [Bus] > "Shortcuts" tab > "Setup search"

Search Criteria
Sets one criterion or an AND-combination of criteria to be searched for. If more than one criterion is selected, all criteria must be fulfilled by a frame for it to be shown in the search results.

If a DBC label list file is applied, an additional criterion "Symbolic" is provided, see Section 14.6.6.3, "Symbolic search", on page 639.

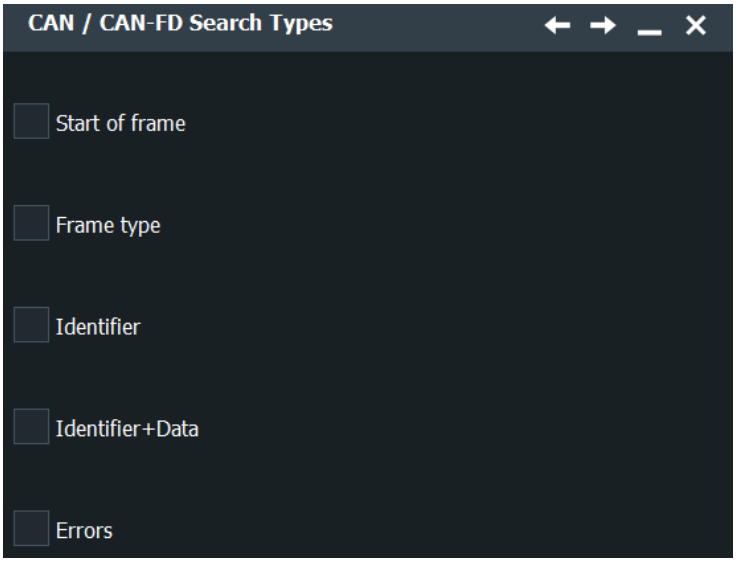

"Start of frame" Searches for the first edge of the dominant SOF bit (synchronization bit).

"Frame type" Searches for a specified frame type (data, remote, error, or overload). For data and remote frames, also the identifier format is considered.

For details, see:
- "Frame type" on page 634
- "ID type" on page 634

"Identifier" Searches for a specific message identifier or an identifier range. See "Identifier setup: Condition, Identifier min, Identifier max" on page 634.

"Identifier + Data" Searches for a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.
The identifier conditions are the same as for the "Identifier" search criteria, see "Identifier setup: Condition, Identifier min, Identifier max" on page 634. Data conditions are set with "Data setup: DLC, NDB, Condition, Data min, Data max" on page 635.

"Error condition" Identifies various errors in the frame, see "Error conditions" on page 629.

"Symbolic" The "Symbolic" search criteria is available if a DBC label list file is loaded and applied. It allows you to search for specific data messages, or a signal and its value that appears inside the message. Symbolic search is an alternative to the other search criteria, you can either search for symbolic values or for an AND-combination of the other 5 criteria.
For details, see Section 14.6.6.3, "Symbolic search", on page 639.

Remote command:
SEARch:TRIGger:CAN[:SSOFrame] on page 1960
SEARch:TRIGger:CAN:SFTYpe on page 1960
SEARch:TRIGger:CAN:SFIDentifier on page 1961
SEARch:TRIGger:CAN:SIDData on page 1961
SEARch:TRIGger:CAN:SERRor on page 1961
SEARch:TRIGger:CAN:SSYMbolic on page 1979

Standard
Selects the CAN standard: "CAN", "CAN FD", or "Any". Use "Any" to search for both CAN and CAN-FD frames. In this case, the search configuration provides all possible settings, for CAN as well as for CAN FD. The setting is available in CAN FD option R&S RTP-K9.

Remote command:
SEARch:TRIGger:CAN:FDATa:STANdard on page 1962

Frame type
Selects the frame type.

Remote frames are only available in the CAN protocol.

The frame types are the same as in the CAN trigger setup, see "Frame type" on page 626.

Remote command:
SEARch:TRIGger:CAN:FTYPe on page 1962

ID type
Selects the length of the identifier.

"11 bit"	Identifier length of the CAN base frame format. The instrument triggers on the sample point of the IDE bit.
"29 bit"	Identifier length of the CAN extended frame format. The instrument triggers on the sample point of the RTR bit.
"Any"	The ID type is not relevant. If the trigger type is "Identifier + Data", set the "ID type" to "Any" if you want to search only for data.

Remote command:
SEARch:TRIGger:CAN:ITYPe on page 1963

Identifier setup: Condition, Identifier min, Identifier max
The identifier setup consists mainly of the condition and one or two identifier patterns. Additionally, ID type and frame type may qualify the identifier.

The identifier setup settings are the same as in the CAN trigger setup, see "Identifier setup: Condition, Identifier min, Identifier max" on page 627.

FD bits: see "FD bits" on page 635.

Remote command:
SEARch:TRIGger:CAN:ICONdition on page 1963
SEARch:TRIGger:CAN:IMIN on page 1964
SEARch:TRIGger:CAN:IMAX on page 1963

FD bits
For standard settings "CAN FD" and "Any", you can search for CAN FD-specific bits. The setting is available in CAN FD option R&S RTP-K9.

For details, see "FD bits" on page 627.

Remote command:
`SEARch:TRIGger:CAN:FDATa[:FDF]` on page 1969
`SEARch:TRIGger:CAN:FDATa:BRS` on page 1969
`SEARch:TRIGger:CAN:FDATa:ESI` on page 1969

Data setup: DLC, NDB, Condition, Data min, Data max
The data setup consists of the number of bytes, the condition, and one or two data patterns.

The data setup settings are the same as in the CAN trigger setup, see "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628.

The data condition setting is also used for symbolic signal search, see Section 14.6.6.3, "Symbolic search", on page 639.

Remote command:
`SEARch:TRIGger:CAN:DCONdition` on page 1964
`SEARch:TRIGger:CAN:DMIN` on page 1964
`SEARch:TRIGger:CAN:DMAX` on page 1965
`SEARch:TRIGger:CAN:DLCCondition` on page 1965
`SEARch:TRIGger:CAN:DLC` on page 1965
`SEARch:RESult:CAN:FRAMe<fr>:NDBYtes?` on page 1966

Data position
The data position sets the location in the data field where the instrument looks for the specified data pattern. The position can be defined if the data field of the frame is longer than 8 bytes - if DLC ≥9. The setting is available in CAN FD option R&S RTP-K9.

For details, see "Data position" on page 629.

Remote command:
`SEARch:TRIGger:CAN:FDATa:DPOPerator` on page 1966
`SEARch:TRIGger:CAN:FDATa:DPOSition` on page 1967
`SEARch:TRIGger:CAN:FDATa:DPTO` on page 1967

Error Condition
Selects the error type to be searched for. You can select one or more error types as search condition.

The error types are the same as in the CAN trigger setup, see "Error conditions" on page 629.

Remote command:
`SEARch:TRIGger:CAN:CRCerror` on page 1968
`SEARch:TRIGger:CAN:BITSterror` on page 1967
`SEARch:TRIGger:CAN:FORMerror` on page 1968
`SEARch:TRIGger:CAN:ACKerror` on page 1967
`SEARch:TRIGger:CAN:FDATa:SCERror` on page 1968

14.6.5.2 Search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands are listed in Section 26.18.7.5, "Search results", on page 1970.

14.6.5.3 Searching CAN FD data

The "Identifier + Data" search supports the search for data bytes of specific value at a specific location in the data field of a frame. The "Data Pattern" field provides 8 data bytes to define the pattern. For data fields longer than 8 byte, you can define the position where the specified pattern starts.

The following example demonstrates how the data pattern and data position is defined.

To set up the search

1. Set the "Source", the signal to be searched: "SerBus". Select the bus that is configured for CAN FD.
2. Set the search criteria:
   a) Select the standard: "CAN FD".
   b) Select the search type: "Identifier + Data".
3. In this example, the identifier does not matter. Set the "ID type = Any".
4. Define the data setup as described in the example.

Example: Searching for a specific byte anywhere in the frame

The CAN FD frame has 8 or more data bytes, containing at least one data byte with value = CB anywhere in the data field.

- Set "DLC ≥ 8".
- Set the data pattern: "= CB".

14.6.6 Symbolic trigger, decode and search

The R&S RTP can read and apply industry-standard DBC files to the decoded signal and provides settings for symbolic triggering and symbolic search.


For a description of DBC files, see Section 14.6.2.3, "Display settings", on page 621.

14.6.6.1 Symbolic trigger

The "Symbolic" trigger type is available if a DBC label list file is loaded and applied. It allows you to trigger on a specific data message, or a signal and its value that appears inside the message.

Access:

1. Press [Bus].
2. In the "Setup" tab, set "Protocol = CAN / CAN-FD".
3. In the "Shortcuts" tab, select "Setup trigger".
4. In the trigger dialog, set the "Type" = "Symbolic".

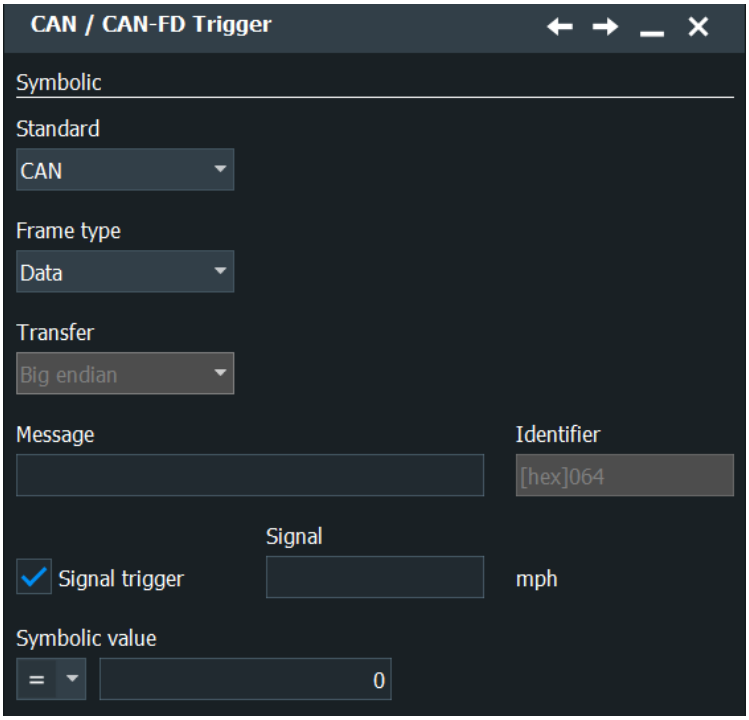

The "Frame type" is automatically set to "Data", and the "Identifier" is shown for information.

Specific settings for the symbolic trigger are:

Message....637
Signal trigger....638
Signal....638
Condition....638
Value, Value min....638
Value max....638

Message
Sets the message to be triggered or searched for.

The setting is used by symbolic trigger and symbolic search. Thus, you always trigger on and search for the same message if symbolic trigger and symbolic search is used at the same time.

Remote command:
TRIGger<t>:CAN:SYMBolic:MSGValue on page 1976

Signal trigger
Enables the trigger on a specific signal value that is part of the selected message.

Remote command:
TRIGger<t>:CAN:SYMBolic:TSIGnals on page 1977

Signal
Sets the signal name to be triggered or searched for.

The setting is used by symbolic trigger and symbolic search. Thus, you always trigger on and search for the same signal if symbolic trigger and symbolic search is used at the same time.

Remote command:
TRIGger<t>:CAN:SYMBolic:SIGValue on page 1977

Condition
Sets the operator to set a specific data pattern or symbolic value ("Equal" or "Not equal") or a data range.

Remote command:
TRIGger<t>:CAN:DCONdition on page 1945

Value, Value min
Defines the data pattern or selects a symbolic data value.

Remote command:
TRIGger<t>:CAN:SYMBolic:DMIN on page 1977
TRIGger<t>:CAN:SYMBolic:SGEValue on page 1978

Value max
The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:CAN:SYMBolic:DMAX on page 1977

14.6.6.2 Symbolic decode waveform

If a DBC file is applied, the symbolic names from the file are applied to the display of the decoded data. The result table lists the signal values and units in the "Symbolic Data" column, and the comb display shows the signal names in addition to the signal values and units.

Remote command:

- BUS<b>:CAN:FRAMe<fr>:SDATa? on page 1978


- BUS<b>:CAN:FRAMe<fr>:SDEXport? on page 1958

14.6.6.3 Symbolic search

Access:

1. Press [Bus].
2. In the "Setup" tab, set "Protocol = CAN/ CAN-FD".
3. In the "Shortcuts" tab, select "Setup search".
4. In the search dialog, set the "Type" = "Symbolic".

If a DBC file is applied, the symbolic search for messages and signal, which are defined in the DBC file, is available. Symbolic search is an alternative to the other search criteria, you can either search for symbolic values or for an AND-combination of the other 5 criteria.

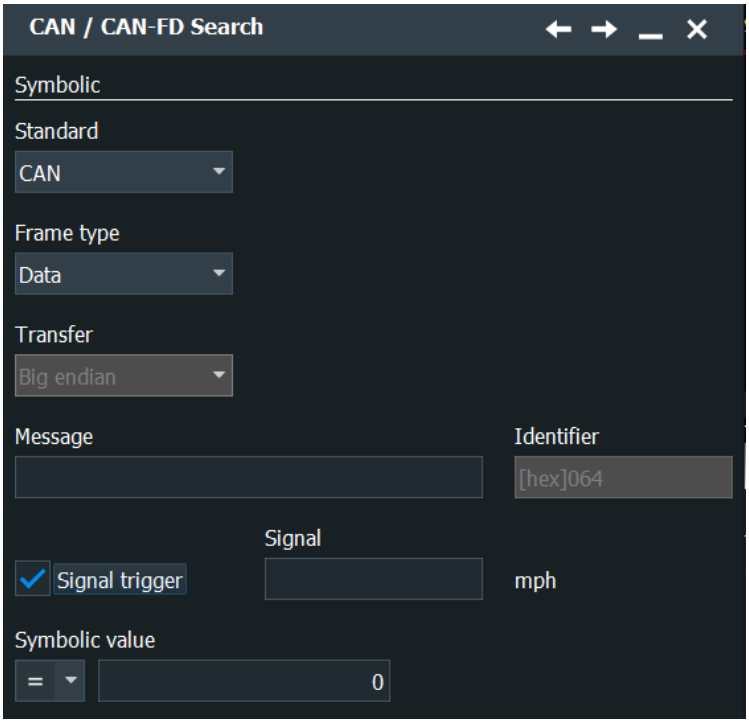

If symbolic search is active, the "Frame type" is automatically set to "Data", and the "Identifier" is shown for information.

Symbolic
Enables the symbolic search and disables all other search criteria.

Remote command:
SEARch:TRIGger:CAN:SSYMbolic on page 1979

Message
Sets the message to be triggered or searched for.

The setting is used by symbolic trigger and symbolic search. Thus, you always trigger on and search for the same message if symbolic trigger and symbolic search is used at the same time.

Remote command:
`SEARch:TRIGger:CAN:SYMBolic:MSGValue` on page 1979

Search signals
Enables the search for a specific signal value that is part of the selected message.

Remote command:
`SEARch:TRIGger:CAN:SYMBolic:SSIGnals` on page 1980

Signal
Sets the signal name to be triggered or searched for.

The setting is used by symbolic trigger and symbolic search. Thus, you always trigger on and search for the same signal if symbolic trigger and symbolic search is used at the same time.

Remote command:
`SEARch:TRIGger:CAN:SYMBolic:SIGValue` on page 1980

Condition
Sets the operator to set a specific data pattern or symbolic value ("Equal" or "Not equal") or a data range.

This condition is also used to search for data, see "Data setup: DLC, NDB, Condition, Data min, Data max" on page 635.

Remote command:
`SEARch:TRIGger:CAN:DCONdition` on page 1964

Value, Value (min)
Defines the data pattern or selects a symbolic data value.

Remote command:
`SEARch:TRIGger:CAN:SYMBolic:DMIN` on page 1980
`SEARch:TRIGger:CAN:SYMBolic:SGEValue` on page 1981

Value (max)
The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:CAN:SYMBolic:DMAX` on page 1981

14.6.6.4 Symbolic search results

If a DBC file is applied, you can search for symbolic messages and signals as described in Section 14.6.6.3, "Symbolic search", on page 639. As ususal, the search results

are shown in a table. You can enable the search zoom window to view the frame with the selected result in more detail.

The figure shows the result of a search for an "EngineData" message and the signal "IdleRunning = Running" inside the message. The result marker (blue line) is set to the start of the frame that fulfills the search condition. The search zoom window Search1 is active. It has been moved to the right until the "IdleRunning" bit with value 0 is visible in the zoom.

Remote command:

- `SEARch:RESult:CAN:FRAMe<fr>:SDATa?` on page 1979

14.7 CAN-XL (option R&S RTP-K77)


CAN-XL is the latest version of the CAN protocol family. It extends the payload length to 2048 bytes and allows higher speeds currently up to 20 Mbit/s. For earlier versions of the protocol family, refer to Section 14.6, "CAN and CAN FD (option R&S RTP-K3/K9)", on page 615.

14.7.1 CAN-XL configuration

14.7.1.1 CAN-XL configuration settings

Access: [Bus] > "CAN-XL" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

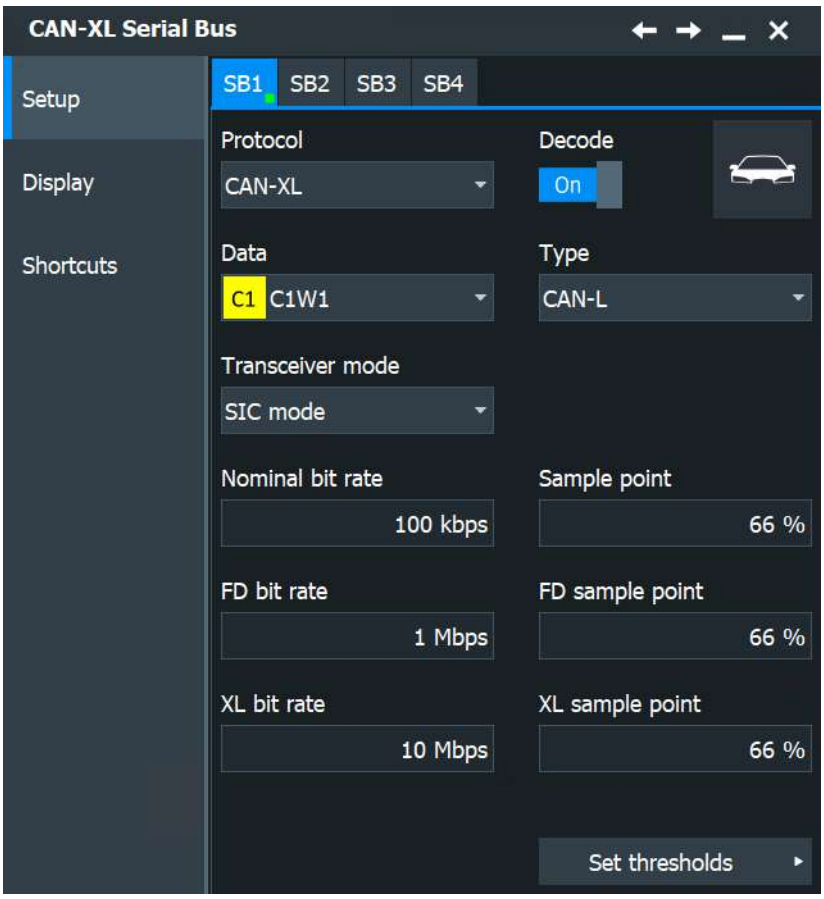

See also: Section 14.1.1, "Setup - general settings", on page 556. For example, for "Decode" refer to "Decode" on page 557.

Data
Sets the source of the selected data line.

For CAN source selection, see also "Data" on page 617.

Remote command:
`BUS<b>:CANXl:SOURce` on page 1982

Type
Selects the CAN-High or CAN-Low line.

For CAN type selection, see also "Type" on page 618.

Remote command:
`BUS<b>:CANXl:TYPE` on page 1982

Transceiver mode
Selects the SIC or FAST transceiver mode.

Remote command:
`BUS<b>:CANXl:TRCVmode` on page 1983

Nominal bit rate
Specifies the basic CAN bit rate, hence the number of transmitted bits per second.

Remote command:
BUS<b>:CANXl:BITRate on page 1983

Sample point
Specifies the sample point for basic CAN.

Remote command:
BUS<b>:CANXl:SAMPlepoint on page 1983

FD bit rate
Specifies the bit rate, also called "arbitration rate", for CAN-FD.

Remote command:
BUS<b>:CANXl:FDATa:DBITrate on page 1983

FD sample point
Specifies the sample point for CAN-FD.

Remote command:
BUS<b>:CANXl:FDATa:SAMPlepoint on page 1984


XL bit rate
Specifies the bit rate for CAN-XL.

Remote command:
BUS<b>:CANXl:XDATa:DBITrate on page 1984

XL sample point
Specifies the sample point for CAN-XL.

Remote command:
BUS<b>:CANXl:XDATa:SAMPlepoint on page 1984

Set thresholds
Opens a dialog for specifying the thresholds and hystereses for digitization of the SIC and FAST mode signals.

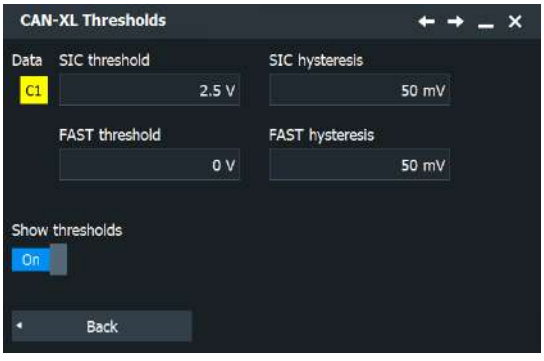

See also Threshold for CAN.

SIC threshold ← Set thresholds
Specifyies the threshold for the SIC mode.

Remote command:
BUS<b>:CANXl:SIC:THReshold on page 1985

SIC hysteresis ← Set thresholds
Specifyies the hysteresis for the SIC mode.

Remote command:
BUS<b>:CANXl:SIC:HYSTeresis on page 1985

FAST threshold ← Set thresholds
Specifyies the threshold for the FAST mode.

Remote command:
BUS<b>:CANXl:FAST:THReshold on page 1985

FAST hysteresis ← Set thresholds
Specifyies the hysteresis for the FAST mode.

Remote command:
BUS<b>:CANXl:FAST:HYSTeresis on page 1986

Show thresholds ← Set thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
BUS<b>:THReshold on page 1835

14.7.1.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

For CAN display settings, see Section 14.6.2.3, "Display settings", on page 621.

Remote command:


- BUS<b>:CANXl:FRAMe<fr>:SYMBol? on page 1998

14.7.2 CAN-XL trigger

The R&S RTP can trigger on various events in a CAN-XL frame. Trigger conditions include start of frame, frame ID, data pattern, or error conditions.

14.7.2.1 Trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

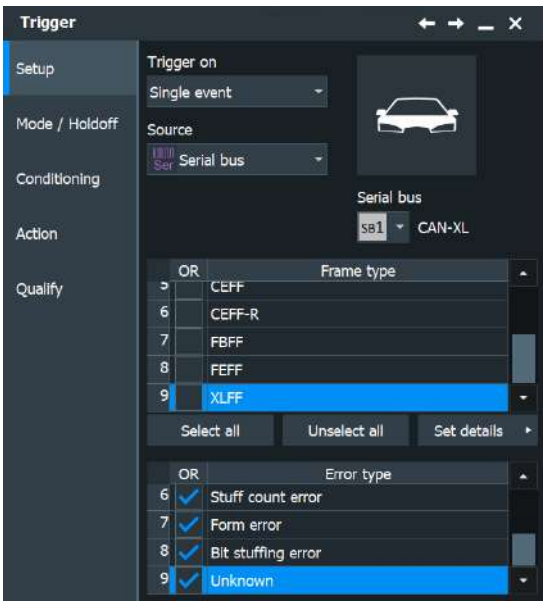

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Serial bus
Selects the serial bus to be triggered on. Make sure to select the correct bus before you enter the settings.

To trigger on a serial bus, the signals sources must be channel signals. If the data or clock source is a math or reference waveform, you cannot trigger on that bus.

Remote command:
`TRIGger<t>:SOURce:SBSelect` on page 1839

Select all, Unselect all
Helps you select the frames you want to trigger on.

"Select all" Enables the trigger for all available frame types.

"Unselect all" Disables the trigger for all available frame types.

Remote command:
`TRIGger<t>:CANXl:CHKall` on page 1987
`TRIGger<t>:CANXl:CLR` on page 1987


Frame type
Selects and enables the frame types that you want to trigger on. You can trigger on all enabled frame types simultaneously.

The following frames are available: "Error", "Overload", "CBFF", "CBFF-R", "CEFF", "CEFF-R", "FBFF", "FEFF" and "XLFF".

For each selected frame type, you can also specify conditions for the value of the fields. See Set details.

Remote command:
`TRIGger<t>:CANXl:FRENable` on page 1987
`TRIGger<t>:CANXl:FRAMe<fr>:ENABle` on page 1987

Set details
To define detailed trigger conditions for a selected frame type, use the "Set details" dialog.

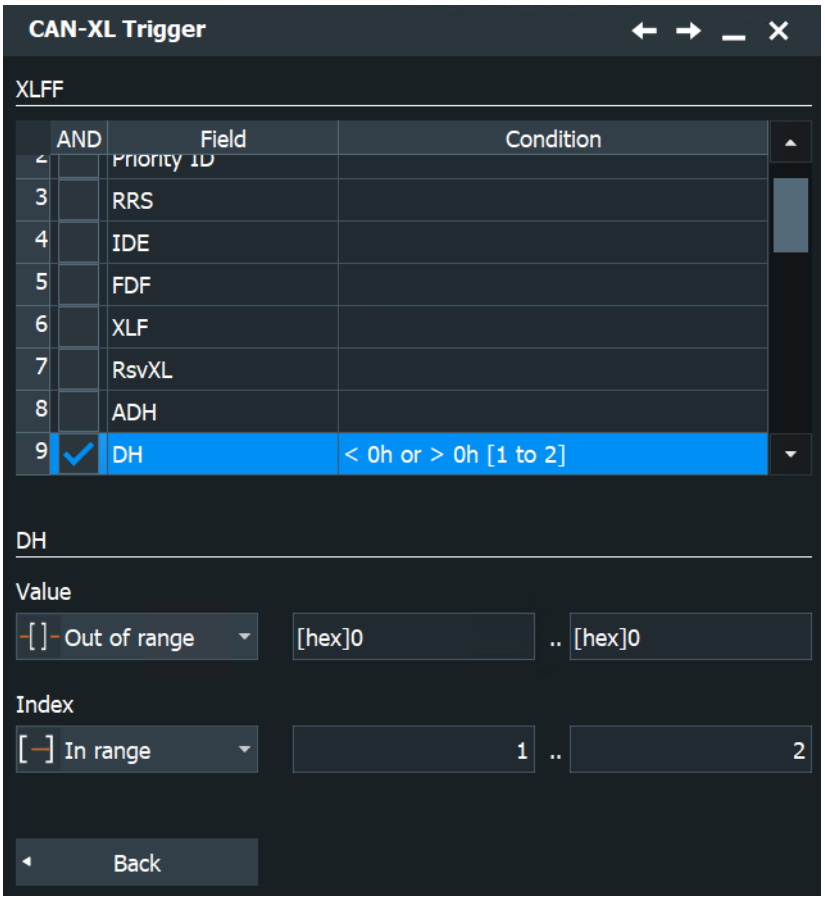

This dialog provides setting options that depend on the selected frame type. You can define trigger conditions for each field of the frame.

"Field" Selects and enables the frame's field type that you want to trigger on. The available fields are "ACK", "ACK-D", "ADH", "AF", "AH1", "AH2", "AL1", "BRS", "CRC", "CRC-D", "DAH", "Data", "DH", "DL1", "DLC", "EOF", "ESI", "EXT-ID", "FCP", "FCRC", "FDF", "ID", "IDE", "PCRC", "Priority ID", "r0", "r1", "res", "RRS", "RsvXL", "RTR", "SBC", "SDT", "SEC", "SOF", "SRR", "VCID" and "XLF".

Remote command:
`TRIGger<t>:CANXl:FIENable` on page 1987
`TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:ENABle` on page 1987

"Condition" Displays the value condition for the selected field.

"Value" The value setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger<t>:CANXl:BIT` on page 1988
`TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:BIT` on page 1988
`TRIGger<t>:CANXl:DMAX` on page 1988
`TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:DMAX` on page 1988
`TRIGger<t>:CANXl:DMIN` on page 1988
`TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:DMIN` on page 1988
`TRIGger<t>:CANXl:DOPerator` on page 1989
`TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:DOPerator` on page 1989

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger<t>:CANXl:IMAX` on page 1989
`TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:IMAX` on page 1989
`TRIGger<t>:CANXl:IMIN` on page 1989
`TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:IMIN` on page 1989
`TRIGger<t>:CANXl:IOPerator` on page 1990
`TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:IOPerator` on page 1990

Error type
Enables triggering on the selected error type.

Selects and enables the error types that you want to trigger on. You can trigger on all enabled error types simultaneously.

The following error types are available: "EOF error", "ACK delimiter error", "No ACK", "CRC delimiter error", "CRC error", "Stuff count error", "Form error", "Bit stuffing error" and "Unknown".

Remote command:
`TRIGger<t>:CANXl:ERENable` on page 1990
`TRIGger<t>:CANXl:ERRor<n>:ENABle` on page 1990

14.7.2.2 Triggering on CAN-XL data

To set up the trigger

1. Set the source: "Serial bus".
   Doing so, select the serial bus that is configured for CAN-XL.
2. Enable the desired frame types, for example "XLFF".
3. For each enabled frame type, select "Set details".
4. Enable the desired field types, for example "DH".
5. Specify field content that you want to trigger on.
   If you want to trigger on all arbitrary values of a selected field, leave the "X" placeholders in the condition field.

14.7.3 CAN-XL decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

The binary results of data bytes are displayed MSB first.

For CAN-XL protocol, the endianness setting ("Transfer") is a trigger setting and not considered for decoding.

Table 14-10: Content of the Decode results table

Column	Description
State	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of frame start
Type	Frame type (see "Frame type" on page 650(
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Identifier	Hexadecimal ID value

Column	Description
DLC	Data length code, coded number of data bytes
Value	The actual data payload values. Select the data format in the "Display" tab.
Nominal bit rate	Nominal bit rate for this frame
Data bit rate	Calculated bit rate for this frame

Table 14-11: Content of the Details frame table

Item	Description
Label	Label (name) of each word of the data field
State	State of each word of the data field, for example "OK" or "Incomplete"
Value	Value of each word of the data field

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.8.3, "Decode results", on page 1990.

14.7.4 Search on decoded CAN-XL data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.


Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

14.7.4.1 Search settings

Access: [Bus] > "Shortcuts" tab > "Setup search"

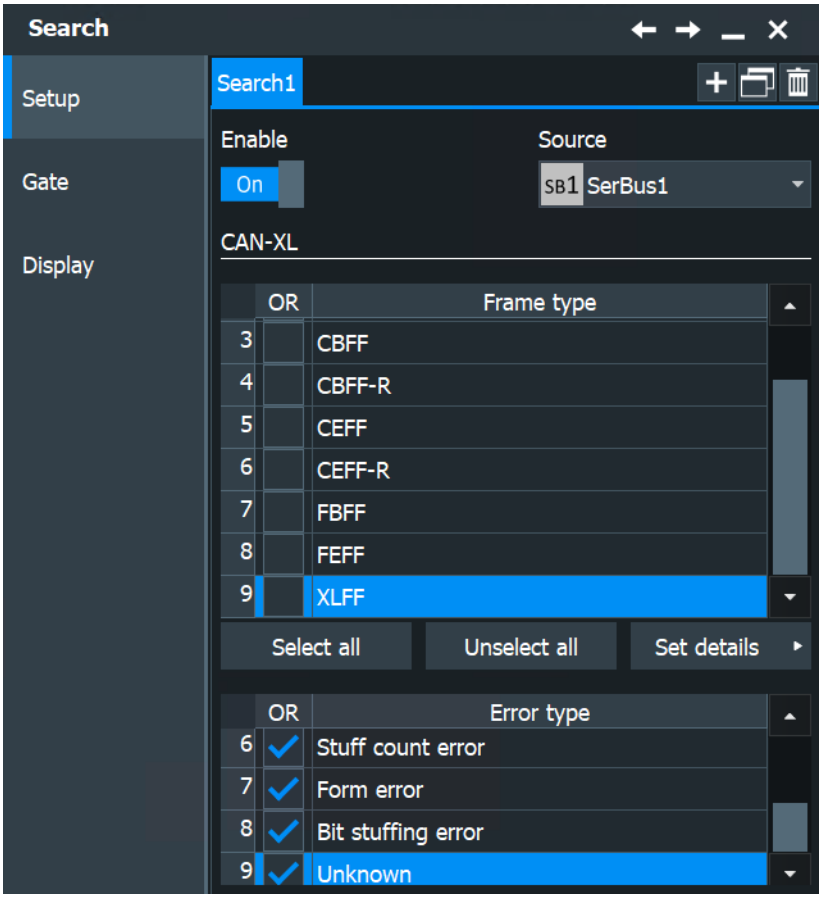

Select all, Unselect all
Helps you select the frames you want to search.

"Select all" Enables the search for all available frame types.

"Unselect all" Disables the search for all available frame types.

Remote command:
`SEARch:TRIGger:CANXl:CHKall` on page 2002
`SEARch:TRIGger:CANXl:CLR` on page 2003

Frame type
Selects and enables the frame types that you want to search. You can search for all enabled frame types simultaneously.


The following frames are available: "Error", "Overload", "CBFF", "CBFF-R", "CEFF", "CEFF-R", "FBFF", "FEFF" and "XLFF".

For each selected frame type, you can also specify conditions for the value of the fields. See Set details.

Remote command:
`SEARch:TRIGger:CANXl:FRENable` on page 2003
`SEARch:TRIGger:CANXl:FRAMe<fr>:ENABle` on page 2003

Set details

To define detailed search conditions for a selected frame type, use the "Set details" dialog.

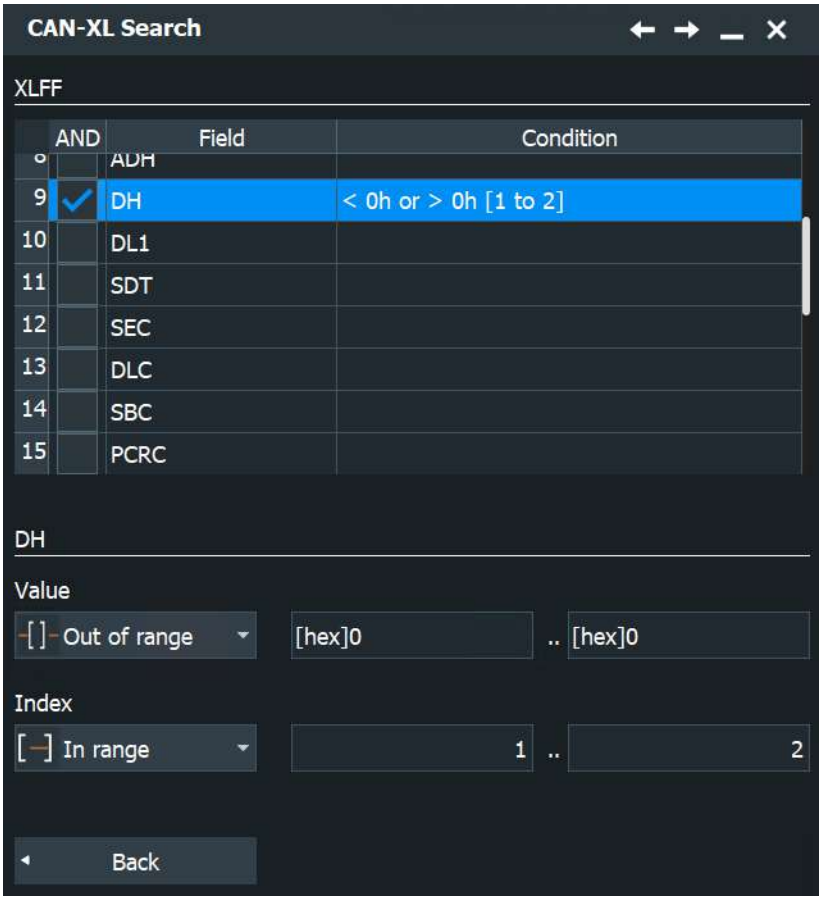

This dialog provides setting options that depend on the selected frame type. You can define search conditions for each field of the frame.

"Field" Selects and enables the frame's field type that you want to search. The available fields are "ACK", "ACK-D", "ADH", "AF", "AH1", "AH2", "AL1", "BRS", "CRC", "CRC-D", "DAH", "Data", "DH", "DL1", "DLC", "EOF", "ESI", "EXT-ID", "FCP", "FCRC", "FDF", "ID", "IDE", "PCRC", "Priority ID", "r0", "r1", "res", "RRS", "RsvXL", "RTR", "SBC", "SDT", "SEC", "SOF", "SRR", "VCID" and "XLF".

Remote command:
`SEARch:TRIGger:CANXl:FIENable` on page 2003
`SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:ENABle` on page 2003

"Condition" Displays the value condition for the selected field.

"Value" The value setup consists of a comparison condition and one or two data patterns.

Remote command:
SEARch:TRIGger:CANXl:BIT on page 2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:BIT on page 2004
SEARch:TRIGger:CANXl:DMAX on page 2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DMAX on page 2004
SEARch:TRIGger:CANXl:DMIN on page 2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DMIN on page 2004
SEARch:TRIGger:CANXl:DOPerator on page 2005
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DOPerator on page 2005

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SEARch:TRIGger:CANXl:IMAX on page 2005
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IMAX on page 2005
SEARch:TRIGger:CANXl:IMIN on page 2006
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IMIN on page 2006
SEARch:TRIGger:CANXl:IOPerator on page 2006
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IOPerator on page 2006

Error type
Selects and enables the error types that you want to search. You can search for all enabled error types simultaneously.

The following error types are available: "ACK error", "Parity error", "CRC error", "Length error" and "Unknown".

Remote command:
SEARch:TRIGger:CANXl:ERENable on page 2006
SEARch:TRIGger:CANXl:ERRor<m>:ENABle on page 2006

14.7.4.2 Search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464

- Section 11.4.2, "Display zoom settings", on page 484

Remote commands are listed in Section 26.18.7.5, "Search results", on page 1970.

14.7.4.3 Searching CAN-XL data

To set up the search

1. To enable the search, set "Enable" to "On".
2. Set the source: "Serial bus".
   Doing so, select the serial bus that is configured for CAN-XL.
3. Enable the desired frame types, for example "XLFF".
4. For each enabled frame type, select "Set details".
5. Enable the desired field types, for example "DH".
6. For each enabled field type, specify field content that you want to search for.
   If you want to search for all arbitrary values of an enabled field, leave the "X" placeholders in the condition field.

14.8 LIN (option R&S RTP-K3)

The Local Interconnect Network (LIN) is a simple, low-cost bus system used within automotive network architectures. LIN is usually a subnetwork of a CAN bus. The primary purpose of LIN is the integration of uncritical sensors and actuators with low-bandwidth requirements. Common applications in a motor vehicle are the control of doors, windows, wing mirrors, and wipers.

14.8.1 About the LIN protocol

This section provides an overview of protocol characteristics, frame format, identifiers and trigger possibilities. For detailed information, order the LIN specification on http://www.lin-subbus.org/ (free of charge).

LIN characteristics

The main characteristics of LIN are:

- Single-wire serial communications protocol, based on the UART byte-word interface
- Single primary, multiple secondaries - usually up to 12 nodes
- Primary-controlled communication: primary coordinates communication with the LIN schedule and sends the identifier to the secondaries
- Synchronization mechanism for clock recovery by secondary nodes without crystal or ceramic resonator

The R&S RTP supports several versions of the LIN standard, for example, v1.3, v2.0, v2.1 and the American SAE J2602.

Data transfer

Basic communication concept of LIN:

- Communication in an active LIN network is always initiated by the primary.
- The primary sends a message header including the synchronization break, the synchronization byte, and the message identifier.
- The identified node sends the message response: one to eight data bytes and one checksum byte.
- Header and response form the message frame.

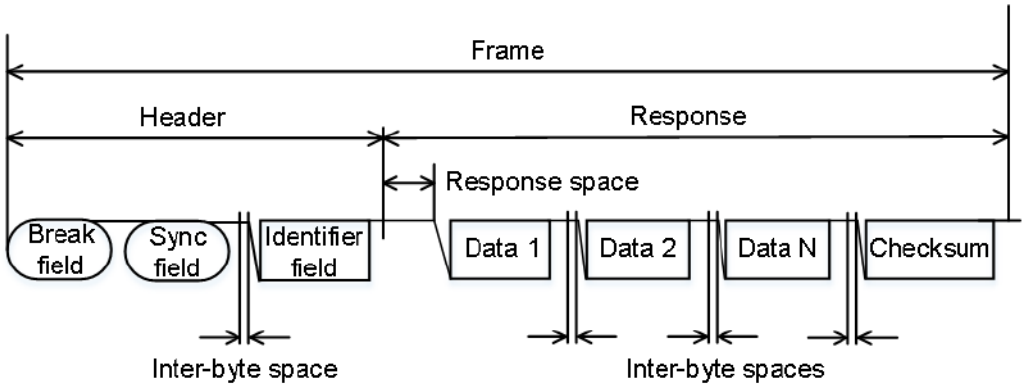


Figure 14-9: LIN frame with header and response

The data is transmitted in bytes using the UART byte-word interface without the parity bit. Each byte consists of a start bit, 8 bits and a stop bit.

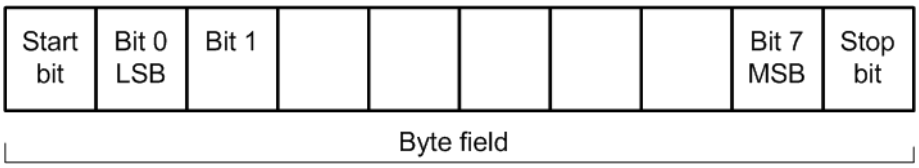


Figure 14-10: Structure of a byte field

Data bytes are transmitted with LSB first.

The identifier byte consists of 6 bits for the frame identifier and two parity bits. This combination is known as protected identifier.

Trigger

The R&S RTP can trigger on various parts of LIN frames. The data line must be connected to an input channel, triggering on math and reference waveforms is not possible.

You can trigger on:

- Frame start (synchronization field)


- Specific identifier or identifier range
- Data pattern in the message
- Wake-up signal
- Errors

14.8.2 LIN configuration

14.8.2.1 LIN configuration settings

Access: [Bus] > "LIN" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

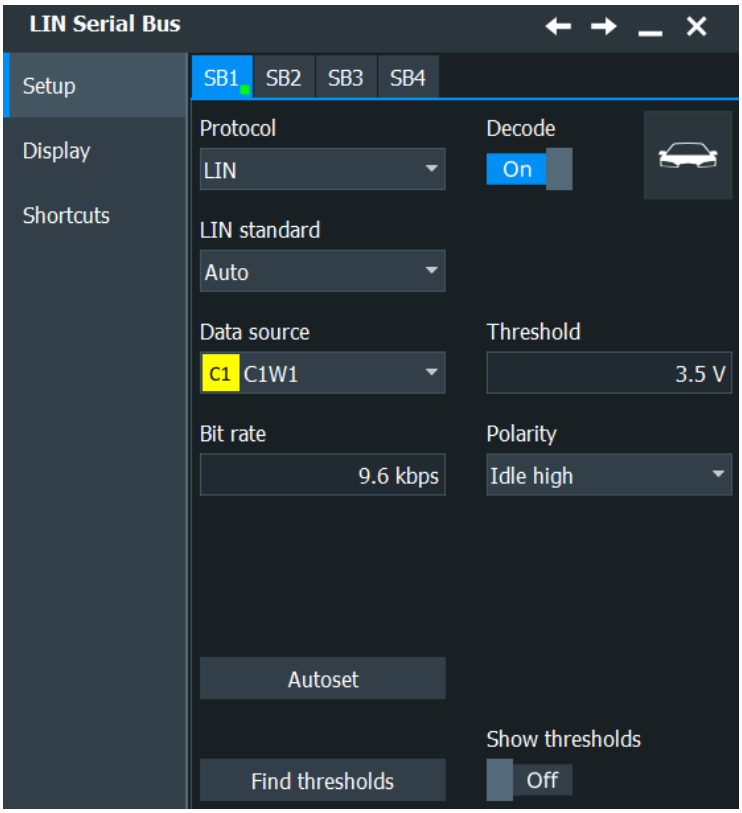

See also: Section 14.1.1, "Setup - general settings", on page 556

LIN standard
Selects the version of the LIN standard that is used in the DUT. The setting mainly defines the checksum version used during decoding.

The most common version is LIN 2.x. For mixed networks, or if the standard is unknown, set the LIN standard to "Auto".

Remote command:
BUS<b>:LIN:STANdard on page 2019

Data
Sets the source waveform of the data line.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
BUS<b>:LIN:DATA:SOURce on page 2017

Threshold
Sets the threshold value for digitization of the signal. If the signal value on the line is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low if the signal value is below the threshold. The interpretation of HIGH and LOW is defined by the Polarity.

There are several ways to set the threshold:
- "Threshold"
  Enter the value directly in the field.
- "Autoset"
  Starts software algorithms for determining the signal threshold levels and bitrate.
- "Find thresholds"
  Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Note: If the sources are digital channels, the same threshold values are used for the parallel and the serial buses. You can set the thresholds either in the parallel bus configuration or in the serial bus configuration.

Remote command:
BUS<b>:LIN:DATA:THReshold on page 2017
BUS<b>:LIN:TECHnology on page 2018
BUS<b>:SETReflevels on page 1834
BUS<b>:FAUToset on page 1834

Bit rate
Sets the number of transmitted bits per second. The maximum bit rate for LIN is 20 kbit/s.

To select a bit rate from list of predefined values, tap the icon beside the "Bit rate" field. To enter a specific value, open the keypad. The list of predefined values is also available in the keypad.

If the "LIN standard" is "J2602", the bit rate is 10.417 kbit/s and cannot be changed.

Remote command:
BUS<b>:LIN:BITRate on page 2018

Polarity
Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logic 1.

Remote command:
`BUS<b>:LIN:POLarity` on page 2019

Show thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
`BUS<b>:THReshold` on page 1835

14.8.2.2 LIN display

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

LIN Specific Label Settings

Label lists are protocol-specific. Label lists for LIN are available in CSV and PTT format.

You can also apply an existing LIN description file.

A LIN label file contains two values for each identifier:

- Identifier value
- Symbolic name for the identifier

Example of a LIN PTT file

```
# ------------------------------------------------------------------------------
@FILE_VERSION = 1.0
@PROTOCOL_NAME = lin
# ------------------------------------------------------------------------------
# Labels for LIN protocol
#   Column order: Identifier, Label
# ------------------------------------------------------------------------------
# Labels for standard addresses
0x3F,Temperature
1Ch,Left brake
20h,Right brake
# Following ID is provided as integer
33,Mirror
0x37,Indoor lights
# Labels for reserved addresses
0x3C,Master_Request_Frame
0x3D,Slave_Response_Frame
# ------------------------------------------------------------------------------
```

The LIN description file (ldf) contains information about the assignment of the LIN frames to the nodes. The format and syntax are defined in the LIN specification.

A LIN ldf file contains the following sections:

- Header
- Node section
- Signal section
- Frame section
- Schedule table
- Signal encoding section
- Encoding to signal mapping

Example of a LIN LDF file

```
LIN_description_file;
LIN_protocol_version = "2.0";
LIN_language_version = "2.0";
LIN_speed = 19.2 kbps;

Nodes {
    Master: Master1, 10 ms, 0.1 ms;
    Slaves: Slave_Motor, Slave_Sensor;
}

Signals {
  Sensor1:1,0x0,Slave_Sensor, Master1;
  Temperature1:12,0,Slave_Sensor, Master1;
}

Frames {
  Sensor_Frame: {Error,30;
                 Temperature, 20;
                 Status, 0;}
  Master_Frame: {Error,15;
                 Speed, 10;}
}

Schedule_tables {
  Sensor_Frame delay 10.000 ms;
        Master_Frame delay 15.000 ms;
}

Signal_encoding_types {
  Speed {logical_value, 0, "Motor_off";
         logical_value, 1, "Speed1";
         logical_value, 2, "Speed2";
         logical_value, 3, "Speed3";
    }
}

Signal_representation {
  Speed1_encoding:Speed1
```

```
  Temperature1_encoding:Temperature1
}
```

Remote commands:

- BUS<b>:LIN:FRAMe<fr>:SDATa? on page 2029
- BUS<b>:LIN:FRAMe<fr>:SDEXport? on page 2029

14.8.2.3 Configuring LIN signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.


For details on configuration settings, see Section 14.8.2.1, "LIN configuration settings", on page 655.

1. Press the [Bus] key on the front panel.
2. At the left hand-side, select the vertical tab of the bus you want to set up.
3. Select the tab of the bus you want to set up, for example "SB1".
4. Tap the "Protocol" button and select the protocol: "LIN".
5. Set the "Data source".
6. Set the logical thresholds.
7. Set the "LIN standard", "Bit rate" and "Polarity" according to your signal.
8. Enable "Decode".

14.8.3 LIN trigger

14.8.3.1 LIN trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

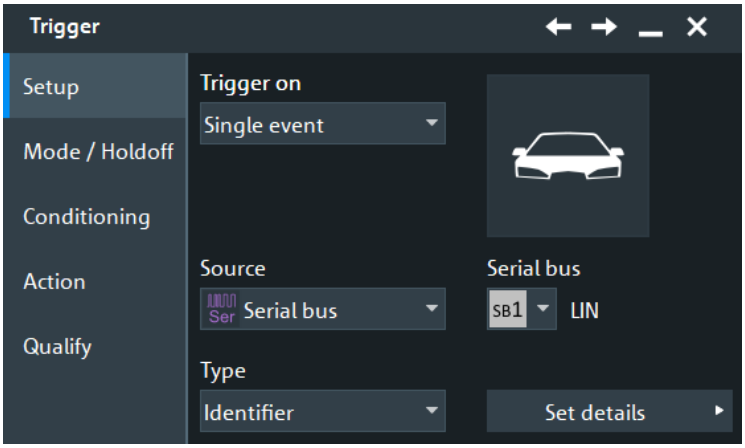


Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.


Trigger type
Selects the trigger type for LIN analysis.

"Start of frame (Sync)" Triggers on the stop bit of the sync field.


"Identifier" Sets the trigger to one specific identifier or an identifier range. Enter only the 6-bit identifier without parity bits, not the protected identifier. Description of trigger type specific settings: "Identifier setup: Condition, Frame ID min, Frame ID max" on page 661.

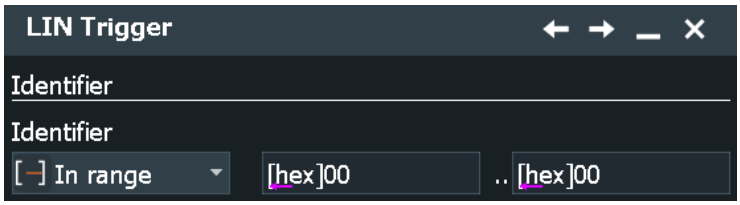

"Identifier OR" Sets the trigger to a combination of up to four identifiers. Description of trigger type specific settings: "Identifier OR setup: Monitor, Frame ID" on page 662

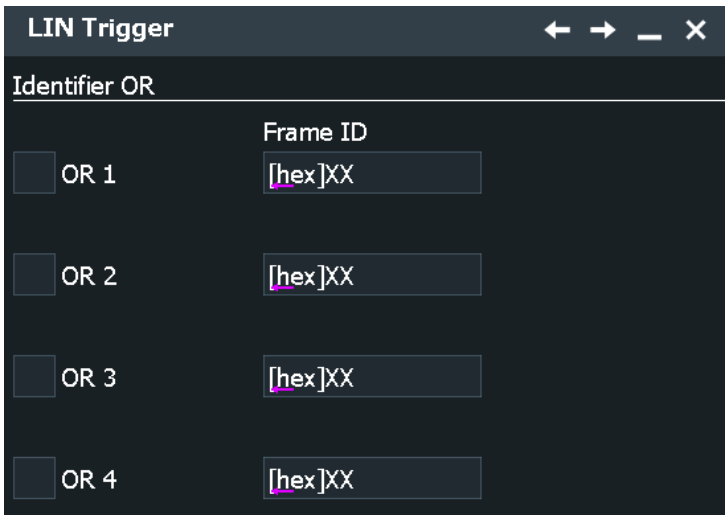

"Identifier + Data" Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

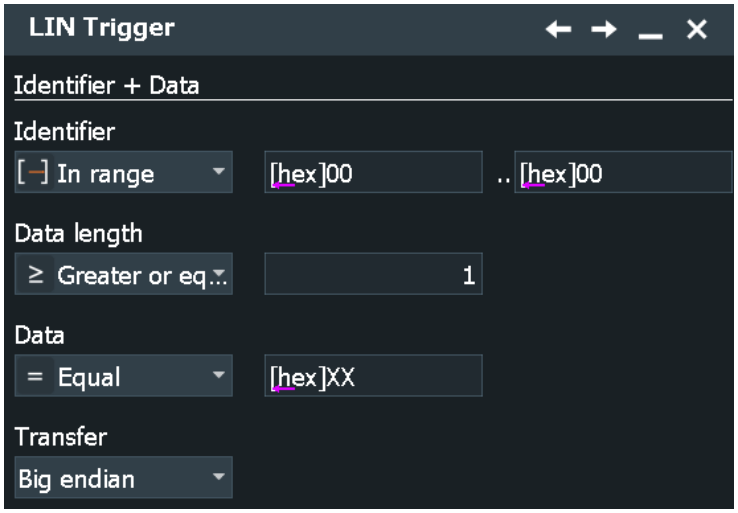

The identifier conditions are the same as for the "Identifier" trigger type, see Identifier setup: Condition, Frame ID min, Frame ID max. Data conditions are set with Data setup: Data length, Transfer, Condition, Data min, Data max.

"Wakeup frame" Triggers after a wakeup frame.

"Error condition" Identifies various errors in the frame, see "Error conditions" on page 663.

Remote command:
`TRIGger<t>:LIN:TYPE` on page 2020

Identifier setup: Condition, Frame ID min, Frame ID max
The identifier setup consists of the condition and one or two identifier pattern.

"Condition" Defines the operator to set a specific identifier ("Equal" or "Not equal") or an identifier range.

"Frame ID min / Frame ID" Defines the bit pattern of the identifier. Enter only the 6-bit identifier without parity bits, not the protected identifier.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Frame ID max" The second identifier pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:LIN:ICONdition` on page 2021
`TRIGger<t>:LIN:IMIN` on page 2021
`TRIGger<t>:LIN:IMAX` on page 2021

Identifier OR setup: Monitor, Frame ID
Sets the trigger to a combination of up to four identifiers. Enter the patterns in the "Frame ID" fields. In binary and hex format, characters 1, 0, and X (do not care) are allowed. For each identifier pattern to be triggered on, enable "Monitor".

Remote command:
`TRIGger<t>:LIN:IDOR<n>:ENABle` on page 2024
`TRIGger<t>:LIN:IDOR<n>[:VALue]` on page 2025

Data setup: Data length, Transfer, Condition, Data min, Data max
The data setup consists of the transfer direction, the number of bytes, the condition, and one or two data patterns.

"Transfer" Sets the byte order (endianness) of the data transfer. With "Big endian", the data is analyzed and evaluated in the order of reception. With "Little endian", the instrument reads the complete data, reverses the byte order of the data, and compares it with the specified data word.
According to the standard, LIN data is transmitted in little endian transfer order. The "Little endian" setting allows you to enter the required data word directly into "Data min", and the instrument triggers correctly.

"Data length" Sets the length of the bit pattern to be found, in bytes.

For Big Endian transfer direction, you can trigger on a number of bytes less than the data length of the frame, that means, on the first bytes that are transmitted. For Little Endian transfer direction, the exact number of data bytes in the frame must be set.
Example: The data word to be sent is *12 34 56*, and it is sent little endian by the LIN node. With Data length ≥ 2 and Transfer = Big endian, you trigger on the data of the first two bytes, that is *56 34*. With Data length = 3 and Transfer = Little endian, you trigger on the required data word *12 34 56*.

"Condition" Sets the operator to define a specific data pattern ("Equal" or "Not equal") or an data range.

"Data min" Defines the data pattern. The pattern length is adjusted to the data length setting (and vice versa), maximum is 8 bytes.
Enter the pattern MSB first and with big endian byte order, and set the correct "Transfer" direction. The data is compared byte by byte.
In binary format, use the following characters: 1; 0; or X (do not care).
The use of X is restricted to the operators "Equal" and "Not equal".

"Data max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:LIN:BORDer` on page 2023
`TRIGger<t>:LIN:DLECondition` on page 2023
`TRIGger<t>:LIN:DLENgth` on page 2024
`TRIGger<t>:LIN:DCONdition` on page 2022
`TRIGger<t>:LIN:DMIN` on page 2022
`TRIGger<t>:LIN:DMAX` on page 2022

Error conditions
Triggers if one or more of the following errors occur:

- Checksum error
  The checksum verifies the correct data transmission. It is the last byte of the frame response. The checksum includes not only the data but also the protected identifier (PID). To identify checksum errors caused by data, additional settings are required: Enter the bit pattern of the identifier ("Frame ID"), the number of data bytes ("Data length"), and select the used "LIN standard".
  See also: LIN standard.
- Identifier parity error
  Parity bits are the bits 6 and 7 of the identifier. They verify the correct transmission of the identifier.
- Sync error
  Synchronization error

Remote command:
`TRIGger<t>:LIN:CHKSerror` on page 2026
`TRIGger<t>:LIN:ERRPattern` on page 2026
`TRIGger<t>:LIN:CRCDatalen` on page 2027
`TRIGger<t>:LIN:STANdard` on page 2027
`TRIGger<t>:LIN:IPERror` on page 2025
`TRIGger<t>:LIN:SYERror` on page 2025

14.8.3.2 Triggering on LIN signals

Prerequisites: An LIN bus is configured, see Section 14.2.2.3, "Configuring I²C protocol", on page 570.

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to LIN.
5. Select the "Trigger type".
6. For more complex trigger types, enter the address and/or data conditions: address, identifier, frame ID.
   For details, see Section 14.8.3.1, "LIN trigger settings", on page 659.

14.8.4 LIN decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

The endianness setting ("Transfer") is a trigger setting and not considered for decoding. The binary results of data bytes are displayed MSB first.

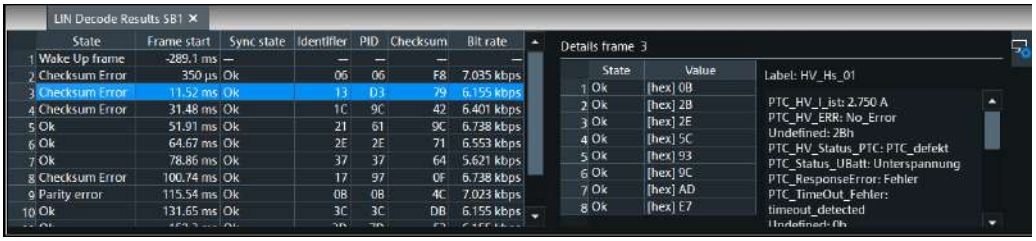


Table 14-12: Content of the Decode results table

Column	Description
State	Overall state of the frame.
Frame start	Time of frame start
Sync state	Result of synchronization
Identifier	Identifier value
Label	Symbolic label name defined in the label list
PID	Protected identifier
Values	Value of the data bytes. The data format is selected below the table.
Checksum	Checksum value
Bit rate	Value of the bit rate

Table 14-13: Content of the Details frame table

Column	Description
State	State of the field
Value	Value of the field
Label	Symbolic label name defined in the label list

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.9.3, "Decode results", on page 2027.

14.8.5 Search on decoded LIN data


Using the search functionality, you can find various events in the decoded data, the same events which you also can trigger on. Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search "Source" to the serial bus that is configured for the protocol to be analyzed.

See also Section 11, "Search functions", on page 463.

14.8.5.1 LIN search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

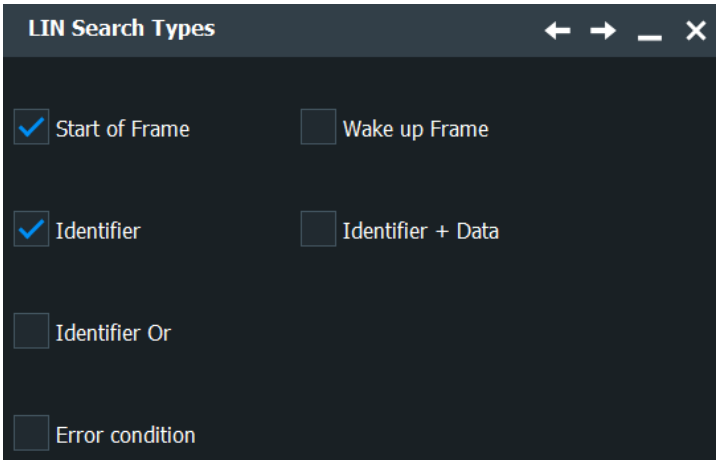

Search types
Sets the type to be searched for.

"Start of frame (Sync)" — Searches for the stop bit of the sync field.

"Identifier" — Searches for one specific identifier or an identifier range.
See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 666

"Identifier OR" — Searches for a combination of up to four identifiers.
See "Identifier OR setup: Monitor, Frame ID" on page 666

"Identifier + Data"	Searches for a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern. The identifier conditions are the same as for the "Identifier" trigger type, see "Identifier setup: Condition, Frame ID min, Frame ID max" on page 661. Data conditions are set with "Data setup: Data length, Transfer, Condition, Data min, Data max" on page 662.
"Wakeup frame"	Searches for wakeup frames.
"Error condition"	Identifies various errors in the frame, see "Error conditions" on page 663.

Remote command:
`SEARch:TRIGger:LIN:SSOFrame` on page 2035
`SEARch:TRIGger:LIN:SFIDentifier` on page 2035
`SEARch:TRIGger:LIN:IDENtifieror` on page 2035
`SEARch:TRIGger:LIN:SIDData` on page 2036
`SEARch:TRIGger:LIN:WUFRame` on page 2036
`SEARch:TRIGger:LIN:SERRor` on page 2036

Identifier setup: Condition, Frame ID min, Frame ID max
The identifier setup consists of the condition and one or two frame ID patterns.

The identifier setup settings are the same as in the LIN trigger setup, see "Identifier setup: Condition, Frame ID min, Frame ID max" on page 661.

Remote command:
`SEARch:TRIGger:LIN:ICONdition` on page 2037
`SEARch:TRIGger:LIN:IMIN` on page 2037
`SEARch:TRIGger:LIN:IMAX` on page 2037

Data setup: Condition, Data min, Data max, Data length, Transfer
The data setup consists of the transfer direction, the data length, the condition, and one or two data patterns.

The data setup settings are the same as in the LIN trigger setup, see "Data setup: Data length, Transfer, Condition, Data min, Data max" on page 662.

Remote command:
`SEARch:TRIGger:LIN:DCONdition` on page 2038
`SEARch:TRIGger:LIN:DMIN` on page 2039
`SEARch:TRIGger:LIN:DMAX` on page 2039
`SEARch:TRIGger:LIN:DLECondition` on page 2040
`SEARch:TRIGger:LIN:DLENgth` on page 2040
`SEARch:TRIGger:LIN:BORDer` on page 2039

Identifier OR setup: Monitor, Frame ID
The identifier OR setup consists of the monitor and frame ID.

The identifier OR setup settings are the same as in the LIN trigger setup, see "Identifier OR setup: Monitor, Frame ID" on page 662

Remote command:
SEARch:TRIGger:LIN:IDOR<m>:ENABle on page 2038
SEARch:TRIGger:LIN:IDOR<m>[:VALue] on page 2038

Error Condition
Selects the error type to be searched for. You can select one or more error types as search condition.

The error types are the same as in the LIN trigger setup, see "Error conditions" on page 663.

Remote command:
SEARch:TRIGger:LIN:IPERror on page 2041
SEARch:TRIGger:LIN:SYERror on page 2041
SEARch:TRIGger:LIN:CHKSerror on page 2041
SEARch:TRIGger:LIN:ERRPattern on page 2042
SEARch:TRIGger:LIN:CRCDatalen on page 2042
SEARch:TRIGger:LIN:STANdard on page 2042

14.8.5.2 LIN search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands are listed in Section 26.18.9.5, "LIN search results", on page 2043.

14.9 MIL-1553 (option R&S RTP-K6)

The MIL-STD-1553 specification defines the characteristics of a serial data bus originally designed for use in the military avionics. Nowadays it is also used in spacecraft on-board data handling.

14.9.1 About the MIL-1553 protocol

The MIL-1553 bus is a 2-wire bus that uses differential signals.

A MIL-1553 system consists of the following components:

- Bus Controller (BC): initiates and coordinates the data flow in the system.
- Remote Terminal (RT): interfaces various subsystems with the data bus. A system consists of up to 31 RTs and each RT can have 31 subaddresses.
  The subaddresses 0 and 31 refer to a mode code command.

- Bus Monitor (BM) (optional): listens to all messages and can record selected data for real-time or off-line analysis.

The information is transmitted over the bus in defined series of words using Manchester code, where each bit is transmitted as high-low for a logical 1 or a low-high for a logical 0. There are three types of words: command, data and status.

Command Word

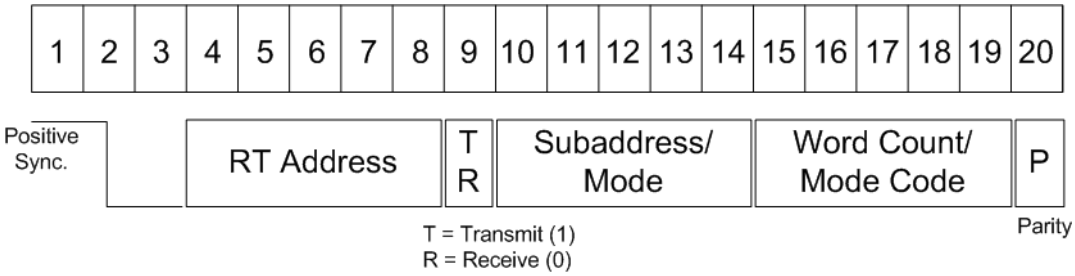


Figure 14-11: Structure of a command word

The format of a command word consists of the following parts (see Figure 14-11):

- Sync: an invalid Manchester waveform.
- Remote Terminal (RT) Address: the unique address of the corresponding RT.
- Transmit/Receive (T/R): indicates the action required from the RT.
- Subaddress/Mode Code: indicates the RT subaddress. The subaddresses 0 and 31 signalize the transmission of a mode code.
- Data Word Count /Mode Code: indicates the number of words that are sent/ received by the RT. A maximum of 32 words is allowed. This field may be used for the transmission of the mode code value.
- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

Data Word

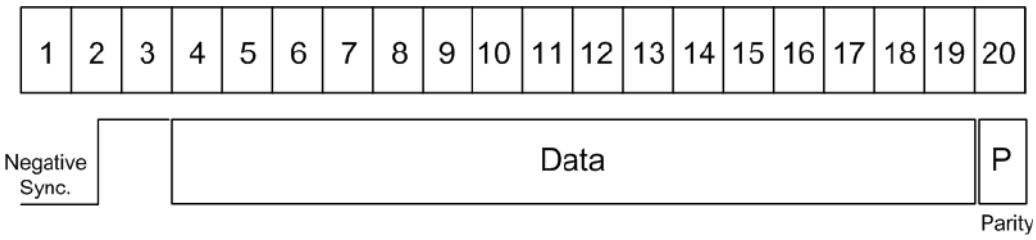


Figure 14-12: Structure of a data word

The format of a data word consists of the following parts (see Figure 14-12):

- Sync: an invalid Manchester waveform.
- Data: the transferred information (16 bit).
- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

Status Word

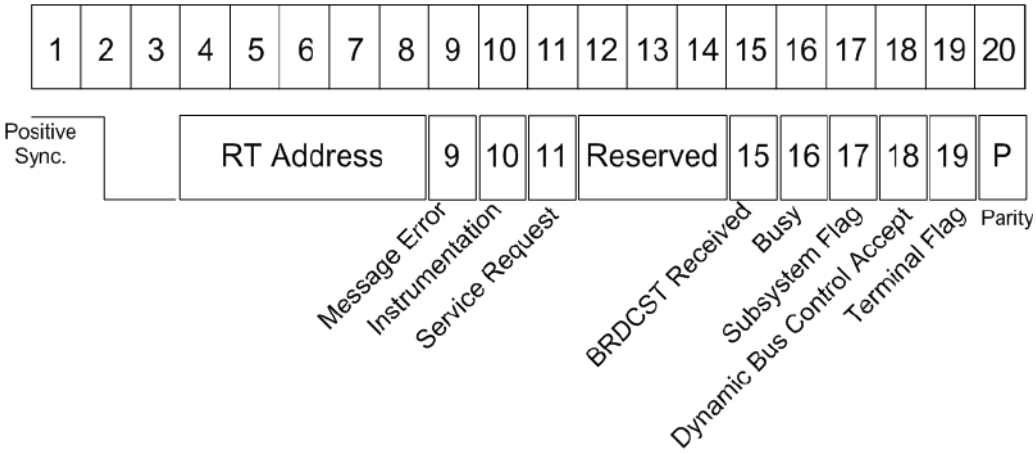


Figure 14-13: Structure of a status word

The format of a status word consists of the following parts (see Figure 14-13):

- Sync: an invalid Manchester waveform.
- Remote Terminal (RT) Address: the unique address of the corresponding RT.
- Message error: indicates an error in the command/data word transmission from the BC. A logic 1 indicates presence of a message error and a logic 0 indicates its absence.
- Instrumentation: helps to distinguish between a status word and a command word. The logic state of this bit shall be 0.
- Service Request: indicates that the RT requires service. A logic 1 indicates a presence of a service request and logic 0 indicates its absence.
- Reserved: bits reserved for future uses.
- Broadcast Command: a logic 1 indicates that the preceding valid command word was a broadcast command and a logic 0 that it was not.
- Busy: a busy state indicates that the RT or the subsystem is not able to transfer data. A logic 1 indicates a presence of a busy condition and logic 0 indicates its absence.
- Subsystem Flag: flags a subsystem fault. A logic 1 indicates a presence of a flag and logic 0 indicates its absence.
- Dynamic Bus Control Acceptance: a logic 1 indicates acceptance of a dynamic bus control and a logic 0 a rejection.
- Terminal Flag: flags an RT fault condition. A logic 1 indicates a presence of a flag and logic 0 indicates its absence.
- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

For comfortable analysis, you can load an editable label list, to interpret transferred numeric values as meaningful text labels.


14.9.2 MIL-STD-1553 configuration

14.9.2.1 MIL-STD-1553 configuration settings

Access: [Bus] > "Decode" tab > "Protocol" = *MIL-STD-1553*

Access: [Bus] > "MIL-1553" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

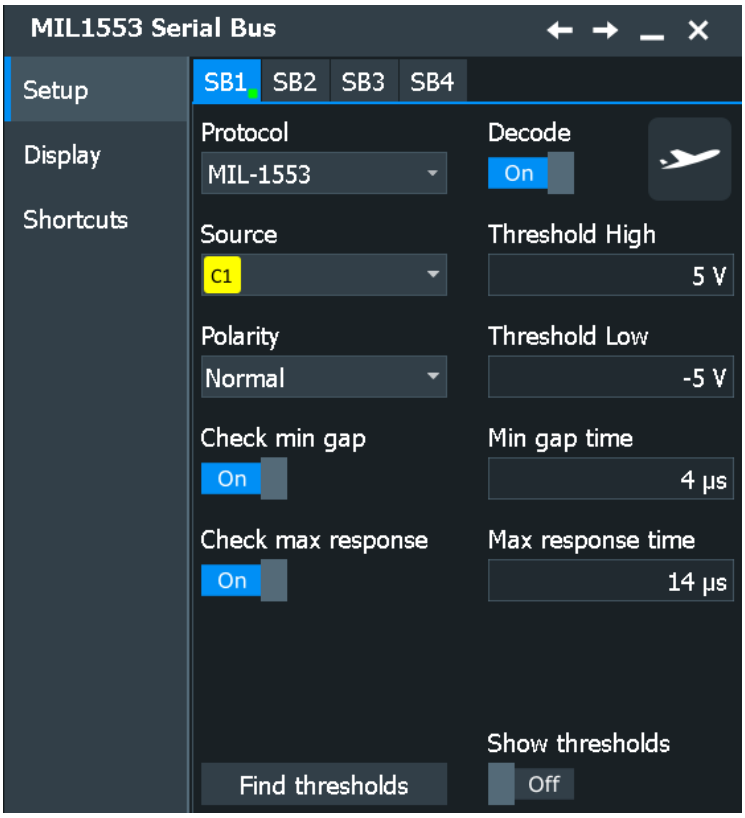

See also: Section 14.1.1, "Setup - general settings", on page 556

Source
Sets the source of the selected data line. Waveform 1 of channel signals, math waveforms, and reference waveforms can be used.

For triggering on a serial bus, a channel signal is required.

Remote command:
`BUS<b>:MILStd:SOURce` on page 2049

Polarity
Selects the wire on which the bus signal is measured : "Normal" or "Inverted". The setting affects the digitization of the signal.

Remote command:
BUS<b>:MILStd:POLarity on page 2050

Thresholds
Threshold values are used for digitization of the signal.

Sets the threshold value for digitization of signals for each line. If the signal value on the line is higher than the threshold, the signal state is high (1 or true for the Boolean logic). Otherwise, the signal state is considered low (0 or false) if the signal value is below the threshold.

"Threshold high" and "Threshold low"	Upper and lower threshold levels. You can enter the values directly in the fields.
"Find thresholds"	Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
BUS<b>:MILStd:THReshold:HIGH on page 2051
BUS<b>:MILStd:THReshold:LOW on page 2051
BUS<b>:MILStd:PRESet on page 2050
BUS<b>:SETReflevels on page 1834

Check min gap
Checks and sets a value for the intermessage gap between the last bit of a message and the following command word sync. The time is measured between the mid bit zero crossings. According to the standard, the minimum idle time is 4 µs.

The minimum gap time is relevant for protocol configuration and error trigger.

If "Check min gap" is enabled, the instrument detects the specified gap during decoding. If the trigger type "Error condition" is selected in addition, the instrument triggers when the gap is shorter then specified.

Remote command:
BUS<b>:MILStd:MINGap:BITS on page 2050
BUS<b>:MILStd:MINGap:SELect on page 2050
TRIGger<t>:MILStd:MINGap:BITS on page 2061
TRIGger<t>:MILStd:MINGap:SELect on page 2062

Check max response
Checks and sets a value for the maximum response time between the last bit of a word and the following status word sync. The time is measured between the mid bit zero crossings. According to the standard, the RT shall respond to a valid command word within the time period of 4 to 12 µs.

The max response time is relevant for protocol configuration and error trigger.

If "Check max response" is enabled, the instrument detects the specified gap during decoding. If the trigger type "Error condition" is selected in addition, the instrument triggers when the response time is longer than specified.

Remote command:
BUS<b>:MILStd:MAXResponse:BITS on page 2049
BUS<b>:MILStd:MAXResponse:SELect on page 2049
TRIGger<t>:MILStd:MAXResponse:BITS on page 2061
TRIGger<t>:MILStd:MAXResponse:SELect on page 2061

Show thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
BUS<b>:THReshold on page 1835

14.9.2.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

MIL Specific Label Settings

Label lists are protocol-specific. A MIL-1553 label file contains four values for each identifier:

- "RTA": hexadecimal remote terminal address value
- "Sub Addr": hexadecimal sub address value
- "Sub Address Label Name": the label name corresponding to the value of the subaddress.
- "Symbolic label": symbolic name of addressed device, specifying the device function, and the label of the sub address.

Example: MIL PTT file

```
# ------------------------------------------------------------
# Labels for MIL.1553 protocol
# Column order: RT address, RT label, Subaddress, Subaddress Label
# ------------------------------------------------------------------------
@PROTOCOL_NAME = mil1553
0Ah,Engine,01h,Thrust
03h,Main panel,07h,Altimeter
03h,Main panel,01h,Speed
0Eh,Only RTA
```

14.9.2.3 Configuring MIL-STD-1553

For configuration assign the line to the input channel, set the threshold and the timing conditions.

For details on configuration settings, see Section 14.9.2.1, "MIL-STD-1553 configuration settings", on page 670.

1. Press the [Bus] key on the front panel.

2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "MIL-STD-1553".
4. Tap the "Polarity" button, and select the waveform of the data line.
5. Set the logical thresholds.
6. If necessary, tap the "Check min gap" button to select it and set the minimum gap time.
7. If necessary, tap the "Check max response" button to select it and set the maximum response time.


14.9.3 MIL-STD-1553 trigger

14.9.3.1 Trigger settings MIL-STD-1553

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

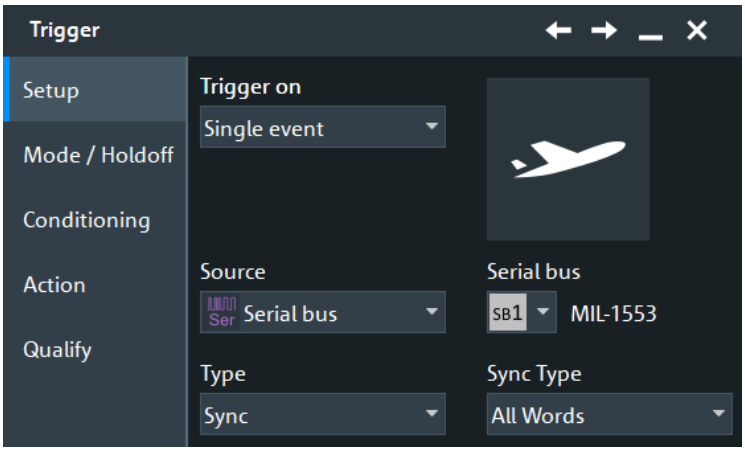


Trigger Type
Selects the trigger type for MIL-STD-1553 analysis.

"Sync" Triggers on a sync impulse.

"Word" Triggers on the selected word type.

"Data Word" Triggers on a specified data word or data word range.

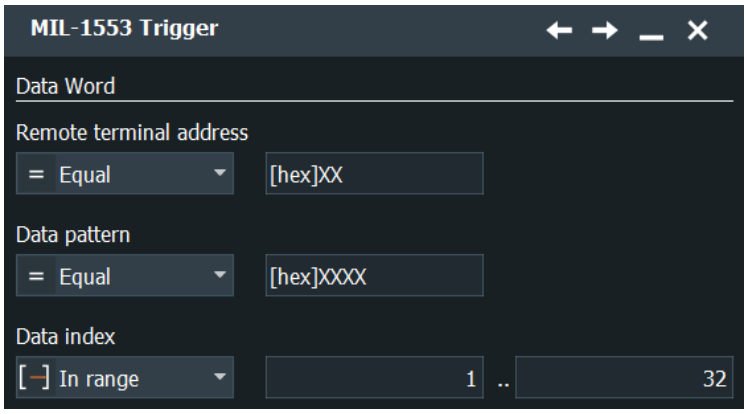


"Command/ Status Word"

Triggers on a specified command word or on a status word.




"Command Word"


Triggers on a specified command word.

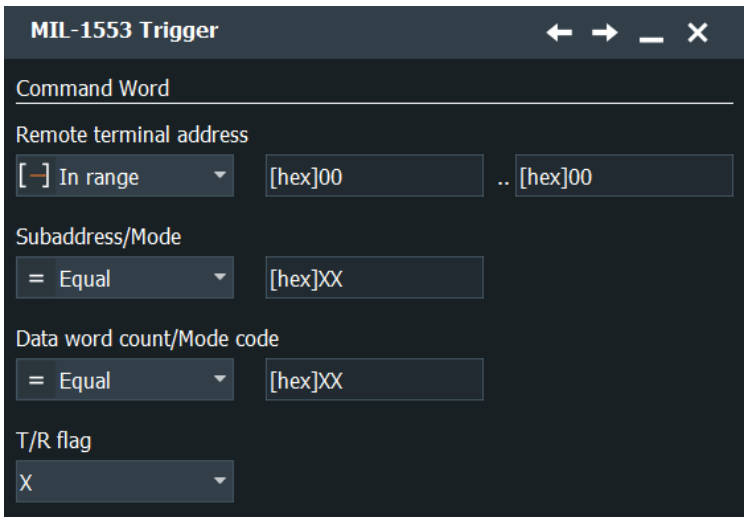

"Status Word" Triggers on a specified status word.

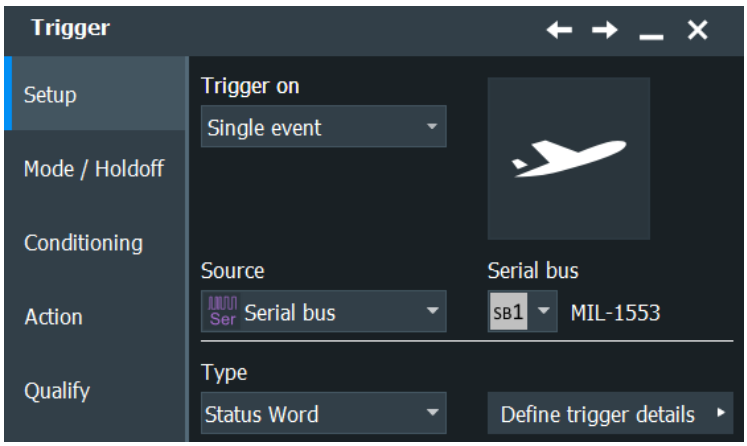

"Error Condition" Triggers on any combination of protocol errors.

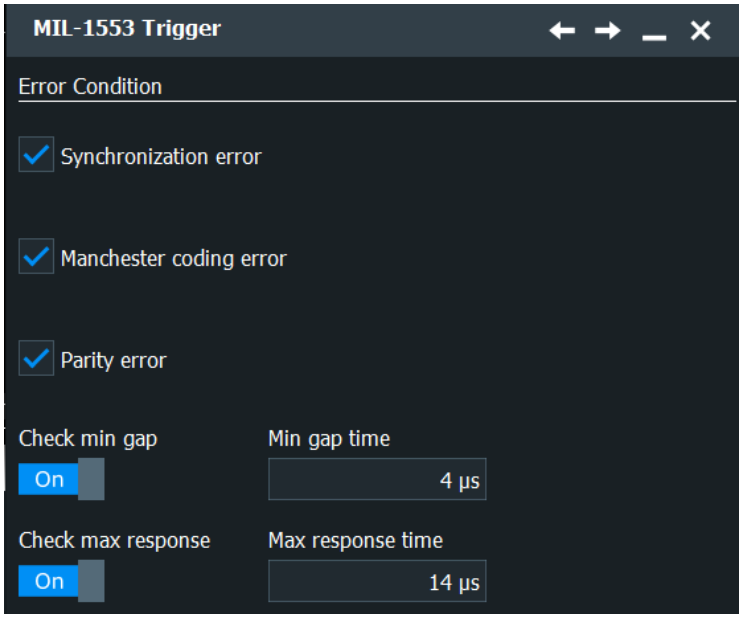

Remote command:
TRIGger<t>:MILStd:TYPE on page 2052

Sync Type / Word Type
Triggers on a sync impulse or word type. You can select to trigger on "Command/Status", on "All" or on "Data" sync pulses / word types.

Remote command:
TRIGger<t>:MILStd:TPSPecifier on page 2064

Remote Terminal Address
The RTA setup consists of the condition and one or two RTA patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"RTA Min/ RTA" Specifies the value or sets the start value of a range.

"RTA Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:MILStd:CDST:RCONdition` on page 2053
`TRIGger<t>:MILStd:CDST:RMAX` on page 2054
`TRIGger<t>:MILStd:CDST:RMIN` on page 2054
`TRIGger<t>:MILStd:CMD:RCONdition` on page 2053
`TRIGger<t>:MILStd:CMD:RMAX` on page 2054
`TRIGger<t>:MILStd:CMD:RMIN` on page 2054
`TRIGger<t>:MILStd:DATA:RCONdition` on page 2053
`TRIGger<t>:MILStd:DATA:RMAX` on page 2054
`TRIGger<t>:MILStd:DATA:RMIN` on page 2054

Data Pattern
Sets the data to be triggered on. The trigger data setup consists of a comparison condition and one or two data patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/ Data" Specifies the value or sets the start value of a range.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:MILStd:DATA:DCONdition` on page 2058
`TRIGger<t>:MILStd:DATA:DMAX` on page 2058
`TRIGger<t>:MILStd:DATA:DMIN` on page 2058

Data Index
The MIL-MIL-STD-1553 standard defines the length of a message to a series of up to 32 words. Data index sets the range within this series of the data words that is considered for the analysis. The data index setup consists of the condition and one or two data index values.

"Condition" Sets the comparison condition to a specific value or a range.

"Index Min/Index" Specifies the value or sets the start value of a range.

"Index Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:MILStd:DATA:ICONdition on page 2059
TRIGger<t>:MILStd:DATA:IMAX on page 2059
TRIGger<t>:MILStd:DATA:IMIN on page 2059

11-Bit Information
The 11-Bit information sets bits 9 to 19 if there is a command or status word. The 11-Bit information consists of the condition and one or two 11-Bit information patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Info Min/Info" Specifies the value or sets the start value of a range.

"Info Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:MILStd:CDST:ICONdition on page 2057
TRIGger<t>:MILStd:CDST:IMAX on page 2057
TRIGger<t>:MILStd:CDST:IMIN on page 2057

Subaddress/ Mode
The subaddress/mode setup consists of the condition and one or two subaddress/mode patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Subaddress Min / Subaddress/Mode"
Specifies the value or sets the start value of a range.

"Subaddress Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:MILStd:CMD:SCONdition on page 2055
TRIGger<t>:MILStd:CMD:SMAX on page 2056
TRIGger<t>:MILStd:CMD:SMIN on page 2056

Data Word Count/Mode Code
The data word count/ mode code setup consists of the condition and one or two patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Word Count Min/ Count Code"
Specifies the value or sets the start value of a range.

"Word Count Max"
Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:MILStd:CMD:CCONdition on page 2054
TRIGger<t>:MILStd:CMD:CMAX on page 2055
TRIGger<t>:MILStd:CMD:CMIN on page 2055

T/R (Transmit/receive)
Toggles the data direction of the selected command: 1 (transmit), 0 (receive), or X (either).

Remote command:
TRIGger<t>:MILStd:CMD:TR on page 2056

Status Flags
Specifies the values of the status flags. You can use the following characters: 1; 0; or X (do not care).

For details, see "Status Word" on page 669.

Remote command:
TRIGger<t>:MILStd:STATus:BCReceived on page 2062
TRIGger<t>:MILStd:STATus:BUSY on page 2062
TRIGger<t>:MILStd:STATus:DBCaccept on page 2062
TRIGger<t>:MILStd:STATus:INSTrument on page 2063
TRIGger<t>:MILStd:STATus:MERRor on page 2063
TRIGger<t>:MILStd:STATus:SREQuest on page 2063
TRIGger<t>:MILStd:STATus:SUBSystem on page 2063
TRIGger<t>:MILStd:STATus:TERMinal on page 2064

Error Condition
Specify the error conditions to be triggered on.

Synchronization Error ← Error Condition
Triggers if a sync impulse does not fulfill the technical requirements or when the transmission is not valid.

Remote command:
TRIGger<t>:MILStd:ERRor:SYNC on page 2060

Manchester Coding Error ← Error Condition
Triggers if there is an error in the Manchester coding of the signal.

Remote command:
TRIGger<t>:MILStd:ERRor:MANChester on page 2060

Parity Error ← Error Condition
Checks the parity of every word and triggers if the parity is even.

Remote command:
TRIGger<t>:MILStd:ERRor:PARity on page 2060

Check min gap ← Error Condition
Checks and sets a value for the intermessage gap between the last bit of a message and the following command word sync. The time is measured between the mid bit zero crossings. According to the standard, the minimum idle time is 4 µs.

The minimum gap time is relevant for protocol configuration and error trigger.

If "Check min gap" is enabled, the instrument detects the specified gap during decoding. If the trigger type "Error condition" is selected in addition, the instrument triggers when the gap is shorter then specified.

Remote command:
`BUS<b>:MILStd:MINGap:BITS` on page 2050
`BUS<b>:MILStd:MINGap:SELect` on page 2050
`TRIGger<t>:MILStd:MINGap:BITS` on page 2061
`TRIGger<t>:MILStd:MINGap:SELect` on page 2062

Check max response ← Error Condition
Checks and sets a value for the maximum response time between the last bit of a word and the following status word sync. The time is measured between the mid bit zero crossings. According to the standard, the RT shall respond to a valid command word within the time period of 4 to 12 µs.

The max response time is relevant for protocol configuration and error trigger.

If "Check max response" is enabled, the instrument detects the specified gap during decoding. If the trigger type "Error condition" is selected in addition, the instrument triggers when the response time is longer than specified.

Remote command:
`BUS<b>:MILStd:MAXResponse:BITS` on page 2049
`BUS<b>:MILStd:MAXResponse:SELect` on page 2049
`TRIGger<t>:MILStd:MAXResponse:BITS` on page 2061
`TRIGger<t>:MILStd:MAXResponse:SELect` on page 2061

14.9.3.2 Triggering on MIL-STD-1553

Prerequisites: A bus is configured for the MIL-STD-1553 signal to be analyzed.

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to MIL-STD-1553.
5. Select the "Trigger type".
6. For more complex trigger types, enter the data pattern conditions.
   For details, see Section 14.9.3.1, "Trigger settings MIL-STD-1553", on page 673.

14.9.4 MIL-STD-1553 decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

Table 14-14: Content of the decode result table

Column	Description
State	Overall state of the word
Start	Time of word start in relation to the trigger point
Stop	Time of word stop in relation to the trigger point
Type	Word type
RTA	Remote terminal address
Info	The hexadecimal value of the 9th to 1th bit of a command/status word
Label	Symbolic label name defined in the label list
Data	The values of the data bytes

Remote commands

Remote commands to retrieve decode results are described in Section 26.18.10.3, "Decode results", on page 2064.

14.9.5 Search on decoded MIL data


Using the search functionality, you can find various events in the decoded data, the same events which you also can trigger on. Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search "Source" to the serial bus that is configured for the protocol to be analyzed.

See also Section 11, "Search functions", on page 463.

14.9.5.1 MIL search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

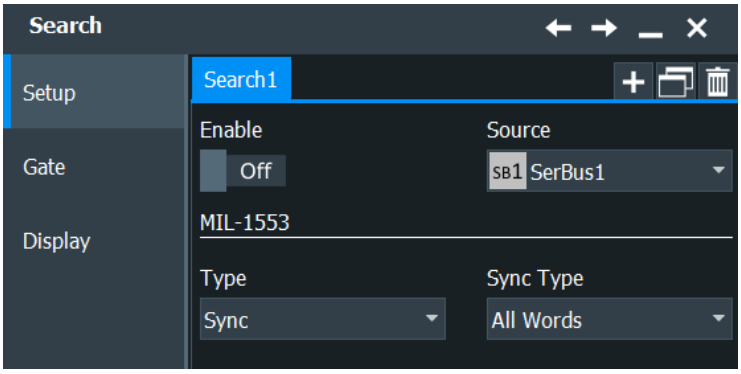

Type
The search criterion is defined by "Type". All trigger types are also available for search.

Additional search parameters are provided under "Detailed Search Parameter Setup".

"Sync" Searches for a sync impulse.

"Word" Searches for the selected word type.

"Data Word" Searches for the specified data word. Additional search parameters: remote terminal address, data pattern and data index.

"Command / Status Word" Searches for command or status words. Additional search parameters: remote terminal address, and 11-bit information.

"Command Word" Searches for a command word. Additional search parameters: remote terminal address, subaddress / mode, and data word count / mode code.

"Status Word" Searches for a status word. Additional search parameters: remote terminal address, and status flags.

"Error condition" Identifies various errors in the frame, see "Error Condition" on page 678.

Remote command:
`SEARch:TRIGger:MILStd:TYPE` on page 2069

Sync Type / Word Type
Searches for a sync impulse/ word type. You can search for "Command/Status", "All" or "Data" sync pulses/ word types.

Remote command:
`SEARch:TRIGger:MILStd:TPSPecifier` on page 2074

Remote terminal address setup: Condition, RTA
The remote terminal address setup consists of the condition and one or two RTA patterns.

The RTA setup settings are the same as in the MIL trigger setup, see "Remote Terminal Address" on page 675.

Remote command:
SEARch:TRIGger:MILStd:CDST:RCONdition on page 2069
SEARch:TRIGger:MILStd:CMD:RCONdition on page 2069
SEARch:TRIGger:MILStd:DATA:RCONdition on page 2069
SEARch:TRIGger:MILStd:CDST:RMIN on page 2070
SEARch:TRIGger:MILStd:CMD:RMIN on page 2070
SEARch:TRIGger:MILStd:DATA:RMIN on page 2070
SEARch:TRIGger:MILStd:CDST:RMAX on page 2070
SEARch:TRIGger:MILStd:CMD:RMAX on page 2070
SEARch:TRIGger:MILStd:DATA:RMAX on page 2070

Data pattern setup: Condition, Data min, Data max
The data pattern setup consists of the condition and one or two data patterns.

The data pattern setup settings are the same as in the MIL trigger setup, see "Data Pattern" on page 676.

Remote command:
SEARch:TRIGger:MILStd:DATA:DCONdition on page 2071
SEARch:TRIGger:MILStd:DATA:DMIN on page 2071
SEARch:TRIGger:MILStd:DATA:DMAX on page 2072

Data index setup: Condition, Index min, Index max
The data index setup consists of the condition and one or two index patterns.

The data index setup settings are the same as in the MIL trigger setup, see "Data Index" on page 676.

Remote command:
SEARch:TRIGger:MILStd:DATA:ICONdition on page 2072
SEARch:TRIGger:MILStd:DATA:IMIN on page 2072
SEARch:TRIGger:MILStd:DATA:IMAX on page 2073

11-Bit information setup: Condition, Info min, Info max
The 11-bit information setup consists of the condition and one or two 11-bit information patterns.

The 11-bit information setup settings are the same as in the MIL trigger setup, see "11-Bit Information" on page 677.

Remote command:
SEARch:TRIGger:MILStd:CDST:ICONdition on page 2071
SEARch:TRIGger:MILStd:CDST:IMIN on page 2071
SEARch:TRIGger:MILStd:CDST:IMAX on page 2072

Subaddress / Mode setup: Condition, Subaddress min, Subaddress max
The subaddress/mode setup consists of the condition and one or two subaddress/mode patterns.

The subaddress/mode setup settings are the same as in the MIL trigger setup, see "Subaddress/ Mode" on page 677.

Remote command:
`SEARch:TRIGger:MILStd:CMD:SCONdition` on page 2071
`SEARch:TRIGger:MILStd:CMD:SMIN` on page 2071
`SEARch:TRIGger:MILStd:CMD:SMAX` on page 2072

Data word count / Mode code setup: Condition, Word count min, Word count max
The data word count/mode code setup consists of the condition and one or two patterns.

The subaddress/mode setup settings are the same as in the MIL trigger setup, see "Data Word Count/Mode Code" on page 677.

Remote command:
`SEARch:TRIGger:MILStd:CMD:CCONdition` on page 2071
`SEARch:TRIGger:MILStd:CMD:CMIN` on page 2071
`SEARch:TRIGger:MILStd:CMD:CMAX` on page 2072

T/R (Transmit/receive)
Specifies the data direction of the selected command.

For details, see "T/R (Transmit/receive)" on page 678.

Remote command:
`SEARch:TRIGger:MILStd:CMD:TR` on page 2073

Status flags setup
Specifies the values (X, 0, 1) of the status flags.

The status flags setup settings are the same as in the MIL trigger setup, see "Status Flags" on page 678.

Remote command:
`SEARch:TRIGger:MILStd:STATus:BCReceived` on page 2074
`SEARch:TRIGger:MILStd:STATus:BUSY` on page 2074
`SEARch:TRIGger:MILStd:STATus:DBCaccept` on page 2074
`SEARch:TRIGger:MILStd:STATus:INSTrument` on page 2074
`SEARch:TRIGger:MILStd:STATus:MERRor` on page 2074
`SEARch:TRIGger:MILStd:STATus:SREQuest` on page 2074
`SEARch:TRIGger:MILStd:STATus:SUBSystem` on page 2074
`SEARch:TRIGger:MILStd:STATus:TERMinal` on page 2074

Error Condition
Selects the error type to be searched for. You can select one or more error types as search condition.

The error types are the same as in the MIL trigger setup, see "Error Condition" on page 678

Remote command:
SEARch:TRIGger:MILStd:ERRor:MANChester on page 2073
SEARch:TRIGger:MILStd:ERRor:PARity on page 2073
SEARch:TRIGger:MILStd:ERRor:SYNC on page 2073
SEARch:TRIGger:MILStd:ERRor:TIMing on page 2073

14.9.5.2 MIL search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

The serach results are the same as Section 14.9.4, "MIL-STD-1553 decode results", on page 680

Remote commands:

- SEARch:RESult:MILStd:WCOunt? on page 2075
- SEARch:RESult:MILStd:WORD<w>:INFO? on page 2077
- SEARch:RESult:MILStd:WORD<w>:RTADdress? on page 2077
- SEARch:RESult:MILStd:WORD<w>:STARt? on page 2076
- SEARch:RESult:MILStd:WORD<w>:STATus? on page 2076
- SEARch:RESult:MILStd:WORD<w>:STOP? on page 2076
- SEARch:RESult:MILStd:WORD<w>:SYMBol? on page 2076
- SEARch:RESult:MILStd:WORD<w>:TYPE? on page 2075

14.10 ARINC 429 (option R&S RTP-K7)

The ARINC 429 is a specification that defines the characteristics of an avionic data bus used on commercial and transport aircraft.

14.10.1 About the ARINC 429

In an ARINC 429 system, a single transmitter/source is connected to 1 to 20 receivers/sinks on one twisted wire pair. The bus uses differential signals. The ARINC 429 standard uses a simplex communication - data may be transmitted in only one direction. The information is transmitted over the bus in defined series of words.

Word Format

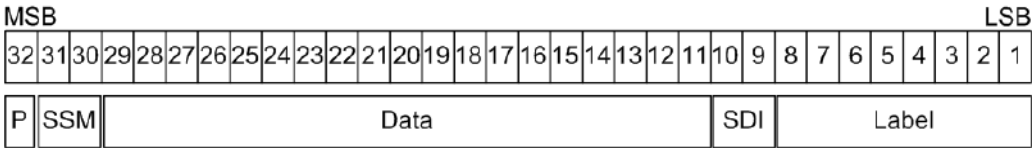


Figure 14-14: Structure of an ARINC 429 word

An ARINC 429 word is 32-bits and consists of the following parts (see Figure 14-14):

- Parity: the most significant bit (MSB). Checks if there are bit errors during the transmission. The total number of logic 1 bits for the word shall be odd.
- Sign/Status Matrix (SSM): the value of these bits depends on the data type. It may be used to report the status of hardware equipment.
- Data:
  - Binary (BNR): stores the data as a binary number.
  - Binary Coded Decimal (BCD): uses 4 data field bits to represent a decimal digit.
  - Discrete data: a combination of BNR and/ or BCD or individual bits that express specific equipment conditions.
  - Maintenance data and acknowledgment
  - Williamsburg / Buckhorn protocol: a bit-oriented protocol that is used for file transfer.
- Source/Destination Identifier (SDI): indicates the intended receiver or the transmitting subsystem.
- Label: gives information about the word's data type.


For comfortable analysis, you can load an editable label list, to interpret transferred numeric values as meaningful text labels.

14.10.2 ARINC 429 configuration

14.10.2.1 ARINC 429 configuration settings

Access: [Bus] > "ARINC 429" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

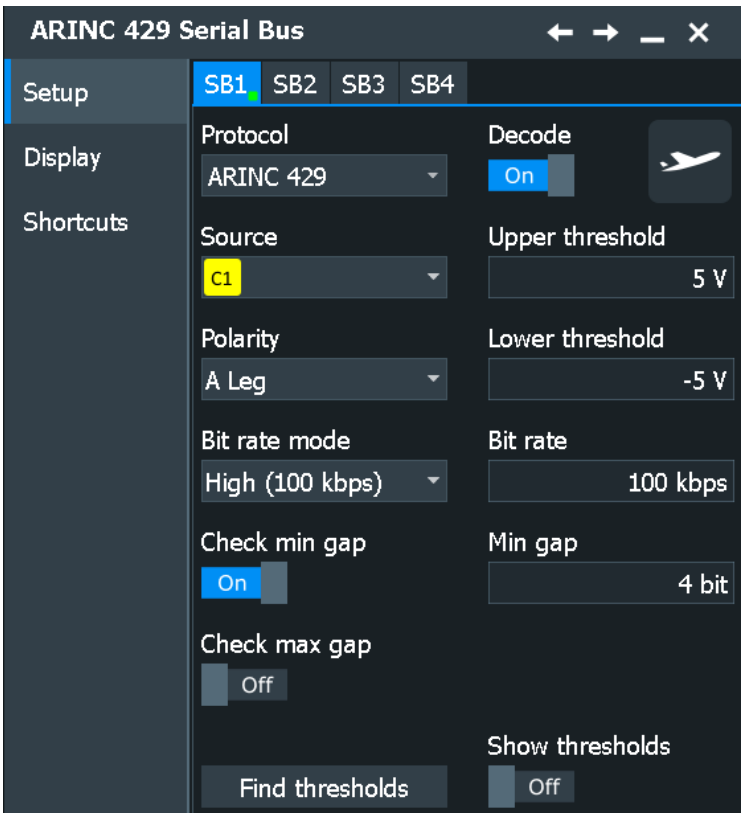

See also: Section 14.1.1, "Setup - general settings", on page 556

Data
Sets the source of the selected data line. Usually, the source is one of the analog channels. Reference and math waveforms are only available if the trigger source is one of the input channels but not the serial bus.

For triggering on a serial bus, a channel signal is required.

Remote command:
`BUS<b>:ARINc:SOURce` on page 2078

Polarity
Selects the wire on which the bus signal is measured : "A Leg" or "B Leg". The setting affects the digitization of the signal.

Remote command:
`BUS<b>:ARINc:POLarity` on page 2080

Thresholds
Sets the threshold value for digitization of the data signal. If the signal value on the line is higher than the threshold, the signal state is high (1 or true for the Boolean logic). Otherwise, the signal state is considered low (0 or false) if the signal value is below the threshold.

There are several ways to set the thresholds:

- "Upper threshold" and "Lower threshold"
  Upper and lower threshold levels. You can enter the values directly in the fields.

- "Find thresholds"

Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
BUS<b>:ARINc:THReshold:HIGH on page 2081
BUS<b>:ARINc:THReshold:LOW on page 2081
BUS<b>:ARINc:PRESet on page 2080
BUS<b>:SETReflevels on page 1834

Bit Rate
Selects the number of transmitted bits per second. The value can be set to high speed (100 kbps) or low speed (12.0- 14.5 kbps).

Remote command:
BUS<b>:ARINc:BRValue on page 2078
BUS<b>:ARINc:BRMode on page 2079

Timing: Min gap, Max gap
Defines the idle time between two words, which is needed for word synchronization. The beginning of the first bit after the gap marks the start of a new word.

You can define a minimum idle time "Min gap", and/or a maximum time "Max gap". The standard defines a minimum of 4-bit times to separate two subsequent words.

Timing settings are relevant for protocol configuration and error trigger.

If "Min gap" and/or "Max gap" are enabled, the instrument detects the specified gaps during decoding. If the trigger type "Error condition" is selected in addition, the instrument triggers when the gap is shorter or longer than the specified gaps, respectively.

Remote command:
BUS<b>:ARINc:MAXGap:BITS on page 2079
BUS<b>:ARINc:MAXGap:SELect on page 2079
BUS<b>:ARINc:MINGap:BITS on page 2080
BUS<b>:ARINc:MINGap:SELect on page 2079
TRIGger<t>:ARINc:MINGap:BITS on page 2085
TRIGger<t>:ARINc:MINGap:SELect on page 2084
TRIGger<t>:ARINc:MAXGap:BITS on page 2085
TRIGger<t>:ARINc:MAXGap:SELect on page 2085

Show thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
BUS<b>:THReshold on page 1835

14.10.2.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

ARINC 429 Specific Label Settings

Label lists are protocol-specific. An ARINC 429 label file contains two values for each identifier:

- "Arinc Label": the ARINC 429 label value, that identifies the data type and the parameters associated with it. The usual data format is octal.
- "Symbolic label": symbolic name of the label, specifying its function.

Example: ARINC 429 PTT file

```
# ------------------------------------------------------------------------
@FILE_VERSION = 1.0
@PROTOCOL_NAME = arinc429
# ------------------------------------------------------------------------
# Labels for ARINC 429 protocol
#   Column order: Arinc Label, Symbolic Label
# ------------------------------------------------------------------------
# ----Definition----
001o, Distance to Go
002o, Time to Go
010o, Present Position - Latitude
011o, Present Position - Longitude
014o, Magnetic Heading
015o, Wind Speed
075o, Gross Weight
125o, Universal Time Coordinated
# ------------------------------------------------------------------------
s
```

14.10.2.3 Configuring ARINC 429 signals

For configuration assign the line to the input channel, set the threshold and the timing conditions.

For details on configuration settings, see Section 14.10.2.1, "ARINC 429 configuration settings", on page 685.


1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "ARINC 429".
4. Tap the "Polarity" button, and select the waveform of the data line.
5. Set the logical thresholds.
6. Tap the "Bit Rate" button and set it for high or low speed.
7. If necessary, tap the "Min Gap" button to select it and set the minimum gap time.
8. If necessary, tap the "Max Response" button to select it and set the maximum response time.

9. Enable "Decode".

14.10.3 ARINC 429 trigger

14.10.3.1 ARINC 429 trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

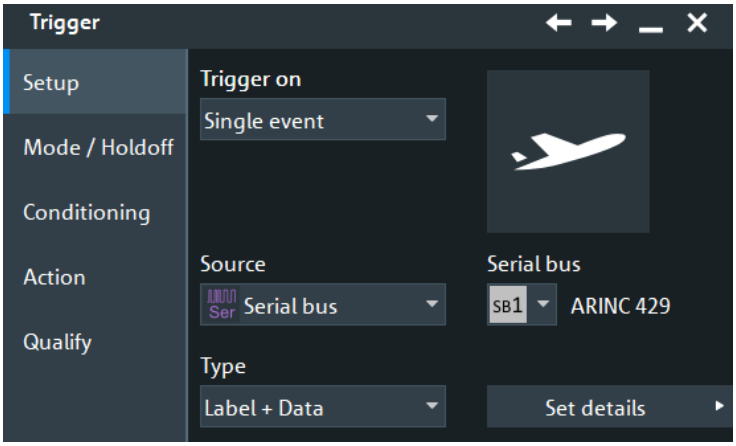

Make sure that:


- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Trigger Type
Selects the trigger type for ARINC 429 analysis.


"Word Start" Sets the trigger to the start of the word.

"Word Stop" Sets the trigger to the stop of the word.

"Label + Data" Sets the trigger on a defined word format. You can define the label, the data and the SDI / SSM bits separately, see "Label + Data" on page 690.

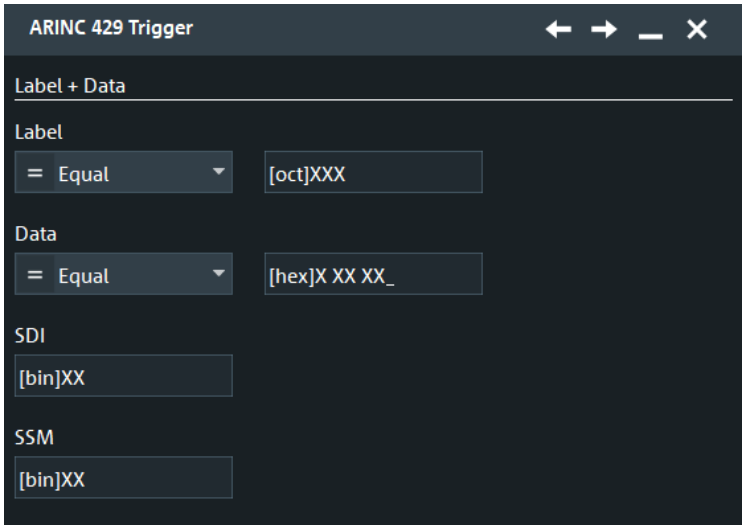

"Error Condition"
Identifies various errors in the word, see "Error Conditions" on page 691.

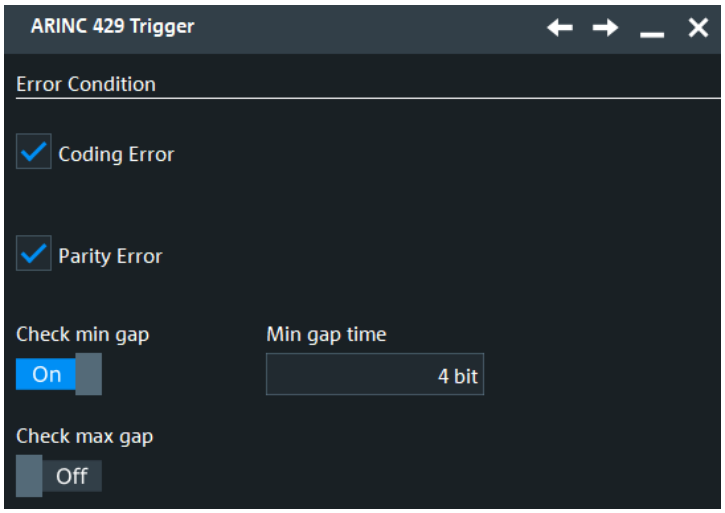

Remote command:
`TRIGger<t>:ARINc:TYPE` on page 2082

Label + Data
Sets the trigger on a defined word format. You can define the label, the data and the SDI / SSM bits separately.

Label setup: Condition, Label Min, Label Max ← Label + Data
The label setup consists of the condition and one or two label patterns.

"Condition" Defines the operator to set a specific label ("Equal" or "Not equal") or a label range.

"Label Min" Defines the bit pattern of the label.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Label Max" The second label pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:ARINc:LABel:CONDition` on page 2083
`TRIGger<t>:ARINc:LABel:MIN` on page 2084
`TRIGger<t>:ARINc:LABel:MAX` on page 2084

Data setup: Condition, Data Min, Data Max ← Label + Data
The data setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data ("Equal" or "Not equal") or a data range.

"Data Min" Defines the bit pattern of the data.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:ARINc:DATA:CONDition` on page 2082
`TRIGger<t>:ARINc:DATA:MIN` on page 2082
`TRIGger<t>:ARINc:DATA:MAX` on page 2083

SDI / SSM ← Label + Data
Sets the values for the source/destination identifier (SDI) and the sign/status matrix (SSM) bits.

Remote command:
`TRIGger<t>:ARINc:SDI` on page 2085
`TRIGger<t>:ARINc:SSM` on page 2086

Error Conditions
Specifies the error conditions to be triggered on.

Coding error ← Error Conditions
Triggers on a coding error.

Remote command:
`TRIGger<t>:ARINc:ERRor:CODing` on page 2083

Parity Error ← Error Conditions
Checks the parity and triggers if the parity is even.

Remote command:
`TRIGger<t>:ARINc:ERRor:PARity` on page 2083

Timing: Min gap, Max gap ← Error Conditions
Defines the idle time between two words, which is needed for word synchronization. The beginning of the first bit after the gap marks the start of a new word.

You can define a minimum idle time "Min gap", and/or a maximum time "Max gap". The standard defines a minimum of 4-bit times to separate two subsequent words.

Timing settings are relevant for protocol configuration and error trigger.

If "Min gap" and/or "Max gap" are enabled, the instrument detects the specified gaps during decoding. If the trigger type "Error condition" is selected in addition, the instrument triggers when the gap is shorter or longer than the specified gaps, respectively.

Remote command:
`BUS<b>:ARINc:MAXGap:BITS` on page 2079
`BUS<b>:ARINc:MAXGap:SELect` on page 2079
`BUS<b>:ARINc:MINGap:BITS` on page 2080
`BUS<b>:ARINc:MINGap:SELect` on page 2079
`TRIGger<t>:ARINc:MINGap:BITS` on page 2085
`TRIGger<t>:ARINc:MINGap:SELect` on page 2084
`TRIGger<t>:ARINc:MAXGap:BITS` on page 2085
`TRIGger<t>:ARINc:MAXGap:SELect` on page 2085

14.10.3.2 Triggering on ARINC 429

Prerequisites: A bus is configured for the ARINC 429 signal to be analyzed.

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to ARINC 429.
5. Select the "Trigger type".
6. For more complex trigger types, enter the data pattern conditions.
   For details, see Section 14.10.3.1, "ARINC 429 trigger settings", on page 689.

14.10.4 ARINC 429 label list

Label lists are protocol-specific. An ARINC 429 label file contains two values for each identifier:

- "Arinc Label": the ARINC 429 label value, that identifies the data type and the parameters associated with it. The usual data format is octal.
- "Symbolic label": symbolic name of the label, specifying its function.

Example: ARINC 429 PTT file

```
# ------------------------------------------------------------------------
@FILE_VERSION = 1.0
@PROTOCOL_NAME = arinc429
```

```
# ------------------------------------------------------------------------
# Labels for ARINC 429 protocol
#   Column order: Arinc Label, Symbolic Label
# ------------------------------------------------------------------------
# ----Definition----
001o, Distance to Go
002o, Time to Go
010o, Present Position - Latitude
011o, Present Position - Longitude
014o, Magnetic Heading
015o, Wind Speed
075o, Gross Weight
125o, Universal Time Coordinated
# ------------------------------------------------------------------------
s
```

See also: Section 14.1.4, "Content and format of the PTT file", on page 560.

Remote command:

- `BUS<b>:ARINc:WORD<w>:SYMBol?` on page 2090

14.10.5 ARINC 429 decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The "Decode results" table contains information about all decoded frames.

ARINC 429 Decode Results SB1

	State	Start	Stop	Label [oct]	SDI [bin]	Data [hex]	SSM [bin]	Label name	Data (32 bit)
1	Ok	-1.69 ms	-1.37 ms	101	10	2AAAA	11	Bus	[hex] EAAA AA82
2	Coding Error	-1.32 ms	-1.22 ms	000	00	00	00		[hex] 0000 0000
3	Ok	-950 µs	-630 µs	101	01	54455	11	Bus	[hex] 7511 5582
4	Ok	-580 µs	-260 µs	101	01	C955	11	Bus	[hex] 6325 5582
5	Ok	-210 µs	110 µs	101	10	22222	10	Bus	[hex] 4888 8A82
6	Ok	160 µs	480 µs	102	00	24243	00	Left Wing	[hex] 8909 0C42
7	Ok	530 µs	850 µs	103	10	26263	10	Right Wing	[hex] 4989 8EC2
8	Parity Error	900 µs	1.22 ms	104	00	24683	10		[hex] 491A 0C22

Table 14-15: Content of the Decode results table

Column	Description
State	Overall state of the frame.
Start	Time of word start in relation to the trigger point
Stop	Time of word stop in relation to the trigger point
Label	The value of the label bytes
SDI	The state of the SDI bits
DATA	All 32 bits of the word.
SSM	The state of the SSM bits
Label Name	The label name
Data (32 bit)	The value of the data bytes
Bit rate	The value of the bit rate

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.11.3, "Decode results", on page 2086.

14.10.6 Search on decoded ARINC 429 data


Using the search functionality, you can find various events in the decoded data, the same events which you also can trigger on. Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search "Source" to the serial bus that is configured for the protocol to be analyzed.

See also Section 11, "Search functions", on page 463.

14.10.6.1 ARINC 429 search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

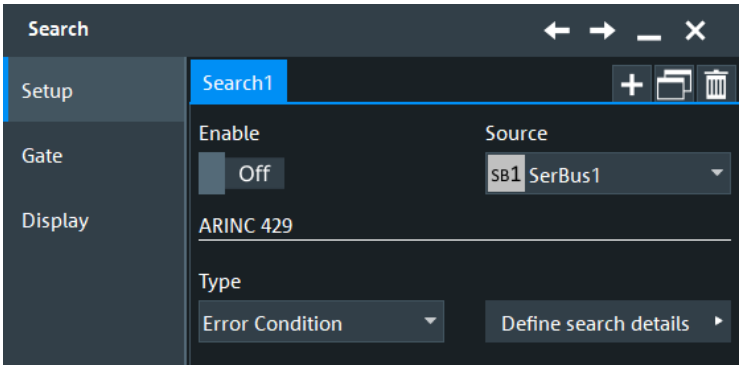

Type
The search criterion is defined by "Type". All trigger types are also available for search.

Additional search parameters are provided under "Detailed Search Parameter Setup".

"Word Start" Searches for the start word.

"Word Stop" Searches for the stop word.

"Label + Data" Searches for a defined word format. You can search for the label, the data, the SDI, and SSM bits separately.
For details, see "Label + Data" on page 690.

"Error condition"
Identifies various errors in the frame, see "Error Conditions" on page 691.

Remote command:
`SEARch:TRIGger:ARINc:TYPE` on page 2090

Label setup: Condition, Label min, Label max
The label setup consists of the condition and one or two label patterns.

The label setup settings are the same as in the ARINC trigger setup, see "Label setup: Condition, Label Min, Label Max" on page 690.

Remote command:
`SEARch:TRIGger:ARINc:LABel:CONDition` on page 2091
`SEARch:TRIGger:ARINc:LABel:MIN` on page 2091
`SEARch:TRIGger:ARINc:LABel:MAX` on page 2091

Data setup: Condition, Data min, Data max
The data setup consists of the condition and one or two data patterns.

The data setup settings are the same as in the ARINC trigger setup, see "Data setup: Condition, Data Min, Data Max" on page 691.

Remote command:
`SEARch:TRIGger:ARINc:DATA:CONDition` on page 2091
`SEARch:TRIGger:ARINc:DATA:MIN` on page 2091
`SEARch:TRIGger:ARINc:DATA:MAX` on page 2091

SDI / SSM setup: SDI, SSM
The SDI / SSM setup consists of the SDI and SSM.

The SDI / SSM setup settings are the same as in the ARINC trigger setup, see "SDI / SSM" on page 691.

Remote command:
SEARch:TRIGger:ARINc:SDI on page 2092
SEARch:TRIGger:ARINc:SSM on page 2092

Error Condition
Selects the error type to be searched for. You can select one or more error types as search condition.

The error types are the same as in the ARINC trigger setup, see "Error Conditions" on page 691

Remote command:
SEARch:TRIGger:ARINc:ERRor:CODing on page 2092
SEARch:TRIGger:ARINc:ERRor:PARity on page 2092
SEARch:TRIGger:ARINc:ERRor:TIMing on page 2093

14.10.6.2 ARINC search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- SEARch:RESult:ARINc:WCOunt? on page 2095
- SEARch:RESult:ARINc:WORD<w>:DATA? on page 2094
- SEARch:RESult:ARINc:WORD<w>:LABel? on page 2093
- SEARch:RESult:ARINc:WORD<w>:PATTern? on page 2094
- SEARch:RESult:ARINc:WORD<w>:SDI? on page 2095
- SEARch:RESult:ARINc:WORD<w>:SSM? on page 2094
- SEARch:RESult:ARINc:WORD<w>:STARt? on page 2096
- SEARch:RESult:ARINc:WORD<w>:STATe? on page 2096
- SEARch:RESult:ARINc:WORD<w>:STOP? on page 2095
- SEARch:RESult:ARINc:WORD<w>:SYMBol? on page 2095

14.11 Ethernet 10BASE-T and 100BASE-TX (option R&S RTP-K8)

Twisted-pair Ethernet technologies are based on the family of standards IEEE 802.3, issued by the Institute of Electrical and Electronics Engineers (IEEE).

R&S RTP-K8 is a firmware option that enables the R&S RTP to analyze Ethernet protocol variants 10BASE-T and 100BASE-TX, by decoding the signal and searching within the decoded events. It is possible to trigger on 10BASE-T signals and 100BASE-TX signals. The option is compatible with the standards IEEE 802.3i of 1990 (10BASE-T) and IEEE 802.3u of 1995 (100BASE-TX).

- The Ethernet protocol 697
- Ethernet configuration 697
- Ethernet trigger 703
- Ethernet decode results 707
- Search on decoded Ethernet data 708

14.11.1 The Ethernet protocol

The two Ethernet protocol variants that R&S RTP-K8 can process have the following features:

- 10BASE-T uses Manchester coding (or phase encoding, PE). In terms of a logical Boolean operation, the Manchester value of each bit is the exclusive disjunction (XOR) of the original data value and the clock value. A "0" is expressed by a high-to-low transition, a "1" by a low-to-high transition. These transitions, which occur at the middle of each bit period, make the signal self-clocked.
- 100BASE-TX uses a 4B5B multi-level transmit (MLT-3) encoding. The protocol sequentially cycles through a sequence of the voltage levels -1 V, 0 V, +1 V, and 0 V. To transmit a "1" bit, MLT-3 moves to the next state; to transmit a "0" bit, it stays in the same state. 4B5B block coding is used to map groups of four bits onto groups of five bits. Also, the signal is scrambled.


All Ethernet-over-twisted-pair technologies use wires with four twisted pairs of cables (and 8P8C connectors), but 10BASE-T and 100BASE-TX only require two pairs of wires.

14.11.2 Ethernet configuration

14.11.2.1 Ethernet configuration settings

Access: [Bus] > "Ethernet" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

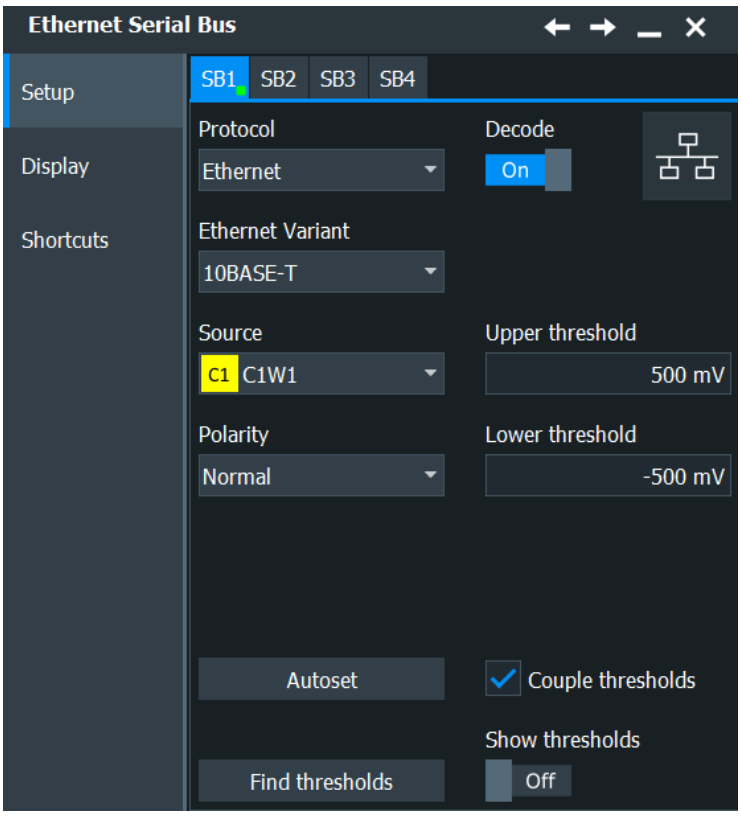

See also: Section 14.1.1, "Setup - general settings", on page 556

Protocol
Defines the protocol type of the selected serial bus.

Remote command:
`BUS<b>:TYPE` on page 1833

Decode
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`BUS<b>[:STATe]` on page 1833

Ethernet Variant
Defines the Ethernet protocol variant and transmission speed.

"10BASE-T"
Selects the Ethernet protocol variant 10BASE-T (standard data rate 10 Mbit/s).

"100BASE-TX"
Selects the Ethernet protocol variant 100BASE-TX, which provides 100 Mbit/s use data rate. Due to 4b/5b encoding, the raw data rate on the line is 125 Mbit/s. This value is used by R&S RTP-K8 as the bit rate default for 100BASE-TX.

Remote command:
BUS<b>:ETHernet:VARiant on page 2097

Source
Defines the source settings for the data signal.

Permitted source selections are the analog, mathematical, and reference channels.

When the serial bus trigger has been selected, the only permitted source selections are the analog channels "C1" – "C4", which are required for triggering.

Remote command:
BUS<b>:ETHernet:SOURce on page 2097

Polarity
Defines the polarity ("Normal" or "Inverted") of the data signal. This setting is only available in 10BASE-T.

Remote command:
BUS<b>:ETHernet:POLarity on page 2097

Thresholds
Sets the threshold value for the digitization of each signal line. If the signal value on the line is higher than the upper threshold, the signal state is high. Otherwise, if the signal value is below the lower threshold, the signal state is considered low.

"Thresholds"	Enter the values directly: upper threshold in the upper field, lower threshold in the lower field.
"Autoset"	Starts software algorithms for determining the signal threshold levels and bitrate.
"Find thresholds"	Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.
"Couple thresholds"	Couples threshold settings between upper and lower threshold.

Remote command:
BUS<b>:ETHernet:THReshold:HIGH on page 2098
BUS<b>:ETHernet:THReshold:LOW on page 2098
BUS<b>:ETHernet:PRESet on page 2098
BUS<b>:SETReflevels on page 1834
BUS<b>:FAUToset on page 1834

Show thresholds
If enabled, the threshold levels are displayed in the diagram.


Remote command:
BUS<b>:THReshold on page 1835

14.11.2.2 Ethernet display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

To enhance the decode possibilities of the Ethernet protocol, you can use an additional setting in the "Display" tab: "Decode layer".

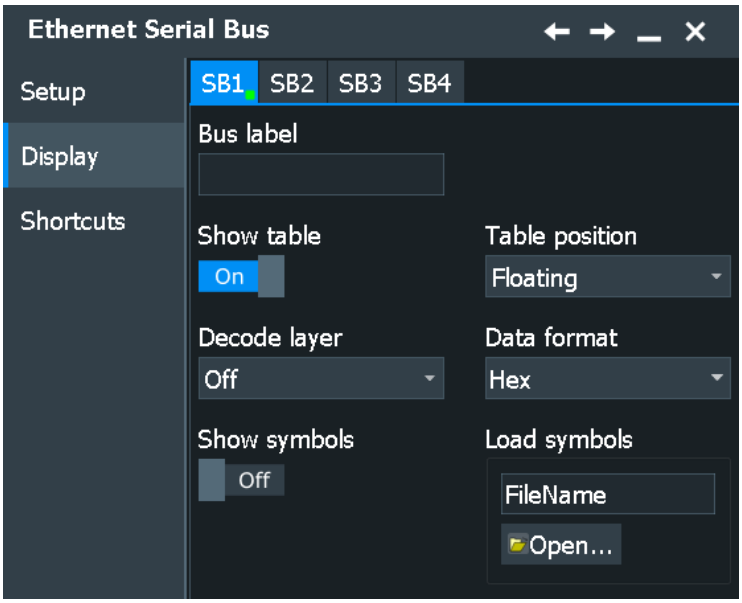

Ethernet Specific Label Settings

Label lists are protocol-specific. An Ethernet label file contains two values for each identifier:

- "Ethernet Header Display": the Ethernet header display value (e.g. `FF:FF:FF:FF:FF:FF/48`)
- "Symbolic label": user-defined symbolic name of the header, specifying its function (e.g. `BroadCast`).

For example, an ethernet label list can be a vendor-specific MAC address list:

```
# ----------------------------------------------------------------------------
@FILE_VERSION  = 1.00
@PROTOCOL_NAME = ethernet
# ----------------------------------------------------------------------------
# Labels for Ethernet protocol
#   Column order: Ethernet Header Display, Label
#-----------------------------------------------------------------------------
# Supported MAC Address Format
# xx:xx:xx  standard 24 bit manufactory header
# xx:xx:xx:xx:xx:xx/yy  support other length headers
# yy should be the header length in decimal
# yy should be between 24 - 48
# ----------------------------------------------------------------------------
00:00:0C, Cisco
00:01:13, Olympus
00:01:14, KandaTsu
```

```
00:04:07, TopconPo
00:0B:64, KiebackP
00:1B:C5:06:C0:00/36, LuxconSy
00:1B:C5:06:D0:00/36, TesElect
00:1B:C5:06:E0:00/36, TwoDimen
00:1B:C5:06:F0:00/36, LlcEmzio
00:1F:BE, Shenzhen
00:21:8F, Avantgar
00:21:90, GoliathS
00:21:91, D-Link
00:21:92, BaodingG
00:50:C2:5F:60:00/36, Cambridg
00:50:C2:5F:70:00/36, Metrolog
00:50:C2:5F:80:00/36, GrupoEpe
18:42:2F, AlcatelL
18:44:62, RiavaNet
18:46:17, SamsungE
18:8E:D5, TpVision
18:E7:F4, Apple
40:D8:55:1C:80:00/36, SensataT
40:D8:55:1C:90:00/36, Andy-L
40:D8:55:1C:A0:00/36, RigelEng
40:D8:55:1C:B0:00/36, MgSRL
40:D8:55:1C:D0:00/36, YxlonInt
40:D8:55:1C:E0:00/36, PeterHub
40:D8:55:1C:F0:00/36, OmnikNew
40:D8:55:1D:00:00/36, WebeasyB
FC:F8:B7, TronteqE
FC:FA:F7, Shanghai
FC:FB:FB, Cisco
FC:FE:77, HitachiR
FF:FF:FF:FF:FF:FF/48, BroadCast
```

In the figure below, you can see a decoded broadcast symbol. The symbol name is displayed in the "Destination symbol" column of the "Decode restuls" table.

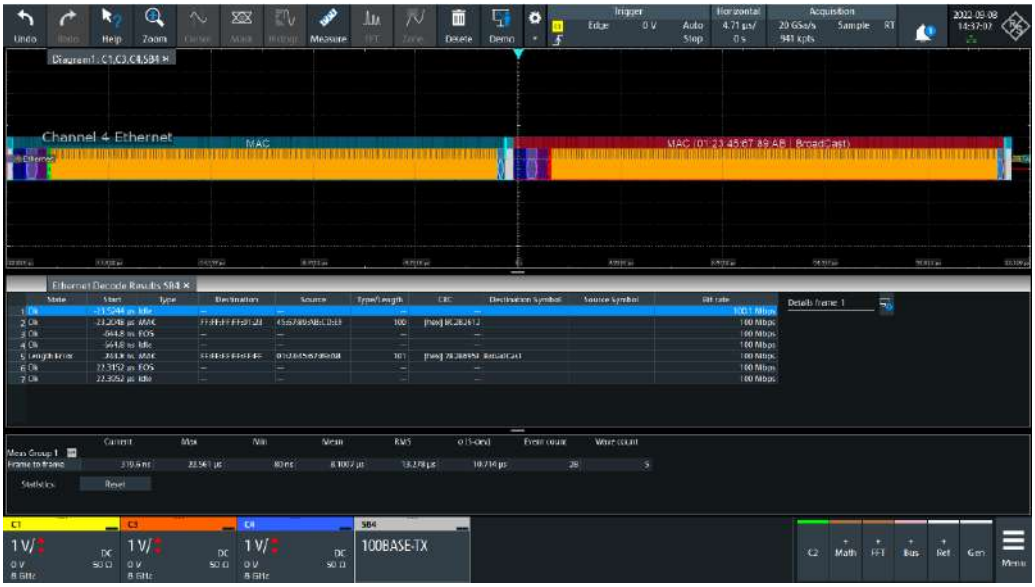


Figure 14-15: Decoded Ethernet results with applied label

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

Available are:
- "Edges": Shows where the decoder identified transitions through the threshold.
- "Binary": Shows the bits as identified by the decoder.
- "Descramble": Shows the bits after the signal has been descrambled.
- "5b Symbol": Shows the symbol values after the 4b/5b decoder.

14.11.2.3 Configuring Ethernet signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.11.2.1, "Ethernet configuration settings", on page 697.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus that you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "Ethernet".
4. Tap "Ethernet Variant", and select the variant ("10BASE-T" or "100BASE-TX") you want to set up.

   Note: Note that no triggering on the serial bus is available.
   To trigger the signal, use the edge trigger on the source channel.


5. For the variant "10BASE-T", select the polarity ("Normal" or "Inverted") of the data signal.
6. Set the logical thresholds.
7. Enable "Decode".

14.11.3 Ethernet trigger

If you need information on how to get started with triggering on Ethernet 10BASE-T signals, see Section 14.11.3.2, "Triggering on Ethernet signals", on page 706. Otherwise proceed with the Ethernet trigger settings.

14.11.3.1 Ethernet trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

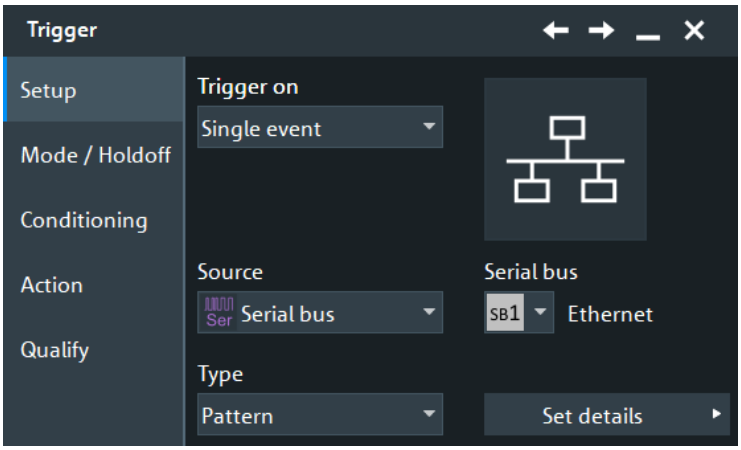

Make sure that:


- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Type
Selects the trigger type for the Ethernet analysis.


"Frame Start" Available only for "Variant > 10BASE-T".
Sets the trigger to the start frame delimiter (SFD). The start of frame (SOF) condition is the occurrence of the preamble; the trigger instant is after the SFD.

"Pattern" Available only for "Variant > 10BASE-T".
Sets the trigger to any bit pattern (data) that can be freely specified, starting from the beginning of the frame. The trigger instant is after the last bit of the specified data pattern.

"Adv frame " Triggers on an advanced frame.

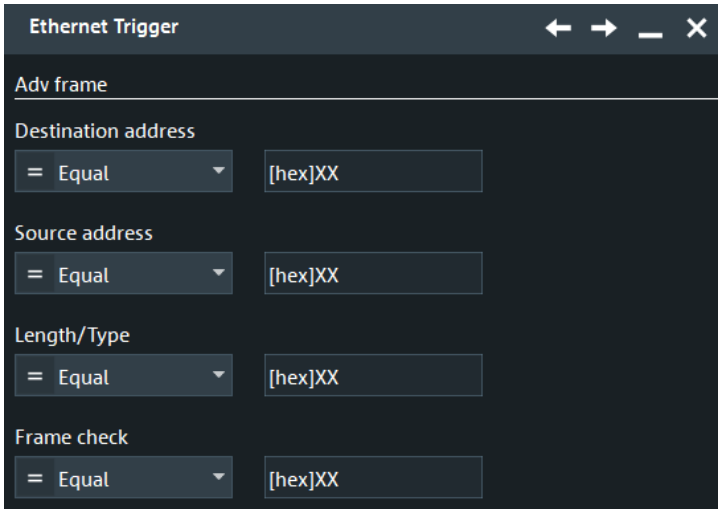

"Adv error" Triggers on any selected errors.

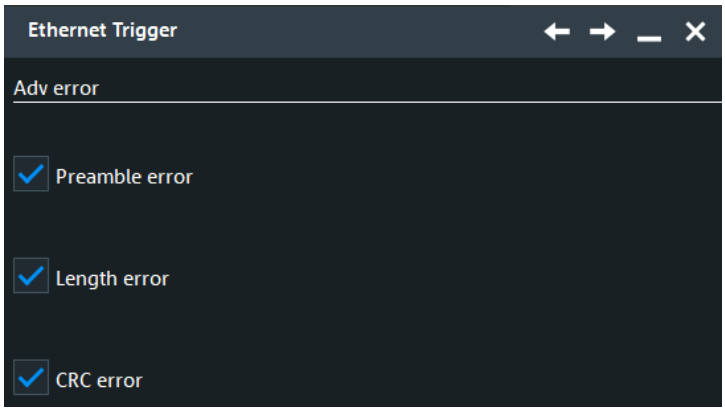

Remote command:
`TRIGger<t>:ETHernet:TYPE` on page 2099

Ethernet Variant
Defines the Ethernet protocol variant and transmission speed.

"10BASE-T"
Selects the Ethernet protocol variant 10BASE-T (standard data rate 10 Mbit/s).

"100BASE-TX"
Selects the Ethernet protocol variant 100BASE-TX, which provides 100 Mbit/s use data rate. Due to 4b/5b encoding, the raw data rate on the line is 125 Mbit/s. This value is used by R&S RTP-K8 as the bit rate default for 100BASE-TX.

Remote command:
BUS<b>:ETHernet:VARiant on page 2097

Data Pattern
Specifies the data pattern that is to be triggered on.

Remote command:
TRIGger<t>:ETHernet:PATTern on page 2100

Bit index
Defines the position of the first bit of the data pattern.

"Bit index operator" Sets the operator ("Equal", "Greater or equal", or "In range").

"Bit index" Sets the bit index (data position), or the start value of a bit index range.

"Bit index to" Sets end value of a bit index range (data position range). Available only, if the "Bit index operator" is set to "In range".

Destination Address
Defines the destination address.

"Condition" Sets the comparison condition to a specific value or a range.

"Destinataion Address (Min)" Specifies the value or sets the start value of a range.

"Destinataion Adress (Max)" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:ETHernet:FRAMe:DCONdition on page 2102
TRIGger<t>:ETHernet:FRAMe:DMAX on page 2102
TRIGger<t>:ETHernet:FRAMe:DMIN on page 2103

Source Address
Defines the source address, the physical address of the device that sends the frame.

"Condition" Sets the comparison condition to a specific value or a range.

" Source Address (Min)" Specifies the value or sets the start value of a range.

"Source Adress (Max)" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:ETHernet:FRAMe:SCONdition on page 2103
TRIGger<t>:ETHernet:FRAMe:SMAX on page 2103
TRIGger<t>:ETHernet:FRAMe:SMIN on page 2103

Length/ Type
Defines the length/type field value.

"Condition" Sets the operator to trigger on a specific address pattern ("Equal" or "Not equal") or an address range.

"Length/Type (Min)" Defines the length/type pattern for all operators that require one pattern.

"Length/Typ (Max)" Defines the length/type pattern that is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:ETHernet:FRAMe:TCONdition on page 2104
TRIGger<t>:ETHernet:FRAMe:TMAX on page 2104
TRIGger<t>:ETHernet:FRAMe:TMIN on page 2104

Frame check
Defines the frame check sequence value.

"Condition" Sets the comparison condition to a specific value or a range.

"Frame check (Min)" Specifies the value or sets the start value of a range.

"Frame check (Max)" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:ETHernet:FRAMe:CCONdition on page 2101
TRIGger<t>:ETHernet:FRAMe:CMAX on page 2101
TRIGger<t>:ETHernet:FRAMe:CMIN on page 2102

Error
Triggers on enabled errors.

"Preamble error" Triggers on a frame with invalid preamble.

"Length error" Triggers on an incorrect length of the sequence - when additional or missing bits are detected and the sequence of bits is not as expected.

"CRC error" Triggers on a frame that has a mismatch of the cyclic redundancy check (CRC) value between the transmitting and receiving device.

Remote command:
TRIGger<t>:ETHernet:ERRor:CRC on page 2100
TRIGger<t>:ETHernet:ERRor:LENGth on page 2100
TRIGger<t>:ETHernet:ERRor:PREamble on page 2101

14.11.3.2 Triggering on Ethernet signals

Prerequisite: A bus is configured for the Ethernet signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to Ethernet.

5. Tap "Type" and select the trigger type for Ethernet protocol analysis.
   Available trigger types are "Frame Start", "Pattern", "Adv frame" and "Adv error".
6. Depending on the selected Ethernet variant, you have to set up more setup conditions.

For information on how to proceed with the configuration settings, see Section 14.11.3.1, "Ethernet trigger settings", on page 703.

14.11.4 Ethernet decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

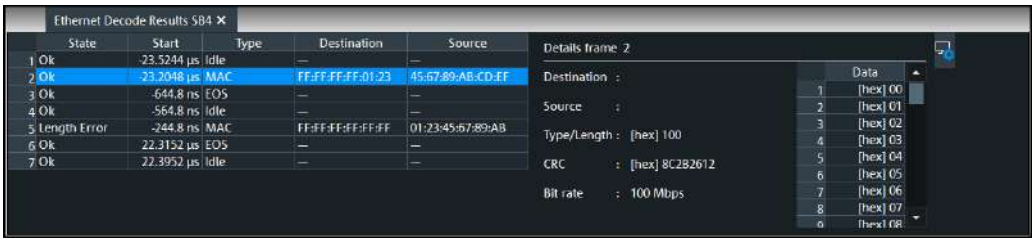


Table 14-16: Content of the Decode results table

Column	Description
State	Overall state of the frame: either OK or the relevant error condition (preamble, length)
Start	Start time of the frame
Type	Frame type
Destination	Destination address of the frame

Column	Description
Source	Source address of the frame
Type/Length	The subprotocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the subprotocol) or the word length.
Data	Values of the data bytes in a frame. The table shows a truncated version; to see all the bytes in a separate data table, activate "Show details". The data format is always hexadecimal.
CRC	FrameCheck (Cyclic Redundancy Code, CRC)
Destination Symbol	Translation (or symbolic label) of the destination address, if the label list is enabled.
Source Symbol	Translation (or symbolic label) of the source address, if the label list is enabled.
Number of Words	Number of words in the frame
Bit rate	Value of the bit rate

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.12.3, "Decode results", on page 2105.

14.11.5 Search on decoded Ethernet data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.


To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

If you need information on how to get started with searching Ethernet data, see Section 14.11.5.3, "Searching Ethernet data", on page 711. Otherwise proceed with the Ethernet search setup.

14.11.5.1 Ethernet search setup


Access: [Bus] > "Shortcuts" tab > "Setup search"

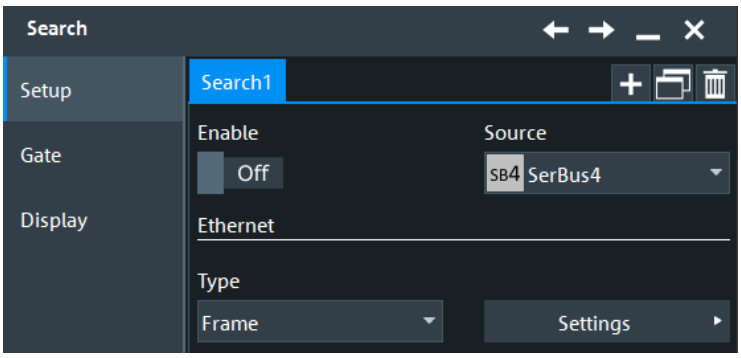

Type
Define the event types to be searched. Available event types are "Frame" and "Error".

Remote command:
SEARch:TRIGger:ETHernet:TYPE on page 2110

Frame
Searches for the following frame conditions: "Destination address", "Source address", "Length/Type", or "Frame check".

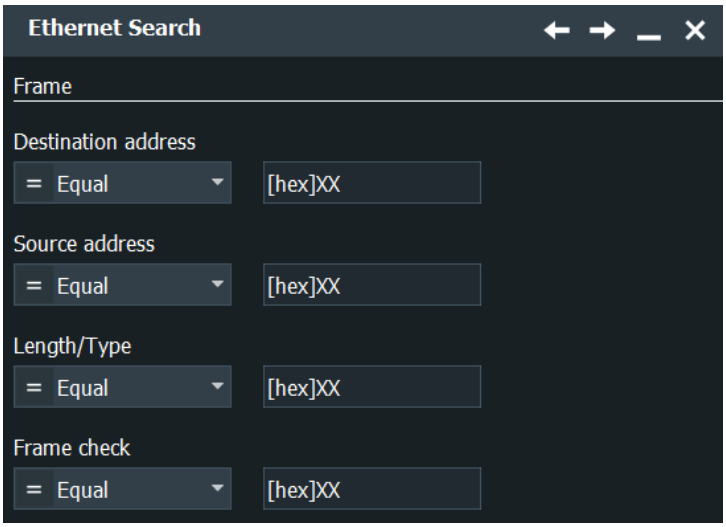

Destination address ← Frame
To search for a destination address, an address pattern or optionally an address range have to be specified.

Remote command:
SEARch:TRIGger:ETHernet:FRAMe:DCONdition on page 2111
SEARch:TRIGger:ETHernet:FRAMe:DMIN on page 2111
SEARch:TRIGger:ETHernet:FRAMe:DMAX on page 2112

Source address ← Frame
To search for a source address, an address pattern or optionally an address range have to be specified.

Remote command:
SEARch:TRIGger:ETHernet:FRAMe:SCONdition on page 2112
SEARch:TRIGger:ETHernet:FRAMe:SMIN on page 2112
SEARch:TRIGger:ETHernet:FRAMe:SMAX on page 2113


Length/Type ← Frame
To search for a frame length or frame type, a type/length pattern or optionally a range of type/length patterns have to be specified.

Remote command:
SEARch:TRIGger:ETHernet:FRAMe:TCONdition on page 2113
SEARch:TRIGger:ETHernet:FRAMe:TMIN on page 2113
SEARch:TRIGger:ETHernet:FRAMe:TMAX on page 2114

Frame check ← Frame
To search for a specific pattern, this pattern or optionally a range of patterns have to be specified.

Remote command:
SEARch:TRIGger:ETHernet:FRAMe:CCONdition on page 2114
SEARch:TRIGger:ETHernet:FRAMe:CMIN on page 2115
SEARch:TRIGger:ETHernet:FRAMe:CMAX on page 2115

Error Condition
Searches for the following error conditions: "Preamble Error" or "Length Error".

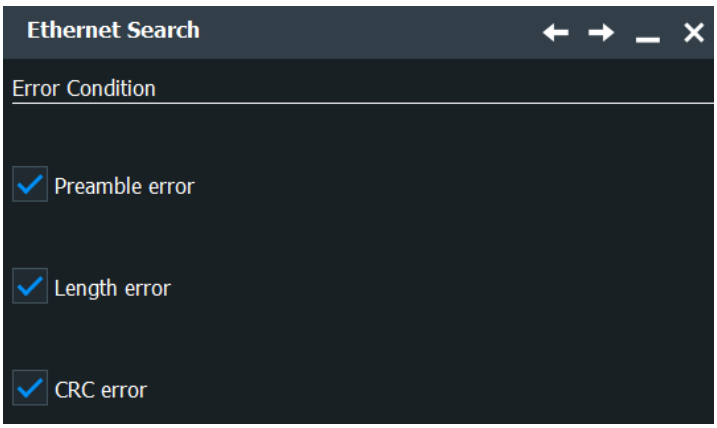

Preamble Error ← Error Condition
Searches for any preamble errors.

Remote command:
SEARch:TRIGger:ETHernet:ERRor:PREamble on page 2115

Length Error ← Error Condition
Searches for any length errors.

Remote command:
SEARch:TRIGger:ETHernet:ERRor:LENGth on page 2115

14.11.5.2 Ethernet search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- SEARch:RESult:ETHernet:WCOunt? on page 2116
- SEARch:RESult:ETHernet:WORD<w>:TYPE? on page 2118
- SEARch:RESult:ETHernet:WORD<w>:FTYPe? on page 2118
- SEARch:RESult:ETHernet:WORD<w>:STATe? on page 2116
- SEARch:RESult:ETHernet:WORD<w>:STARt? on page 2117
- SEARch:RESult:ETHernet:WORD<w>:STOP? on page 2117
- SEARch:RESult:ETHernet:WORD<w>:DESTaddress? on page 2118
- SEARch:RESult:ETHernet:WORD<w>:SRCaddress? on page 2118
- SEARch:RESult:ETHernet:WORD<w>:DATA? on page 2119
- SEARch:RESult:ETHernet:WORD<w>:CRC? on page 2119
- SEARch:RESult:ETHernet:WORD<w>:DSYMbol? on page 2119
- SEARch:RESult:ETHernet:WORD<w>:SSYMbol? on page 2120
- SEARch:RESult:ETHernet:WORD<w>:BYTE<n>:VALue? on page 2120

14.11.5.3 Searching Ethernet data

Prerequisite: A serial bus is configured for the Ethernet signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to Ethernet (e.g. "SerBus1", unless already selected).

   The search dialog for Ethernet protocol analysis is opened.

5. Specify search criteria according to Section 14.11.5.1, "Ethernet search setup", on page 709.
6. To acquire a waveform, press [Single].

   The R&S RTP performs an Ethernet decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.12 10BASE-T1S (automotive Ethernet, option R&S RTP-K56)

10BASE-T1S technology provides a 10 Mbit/s, multidrop transmission over a single pair physical layer. It is defined in the IEEE standard 802.3cg-2019 specification.

Requirements

For performing 10BASE-T1S decode measurements, you need the following:

- R&S RTP. One of the analog input channels is used for analysis.
- A 10BASE-T1S signal
- Option R&S RTP-K56

10BASE-T1S does not support logical channels for decoding, because these channels use ternary signals with 3 states (-1, 0 ,1). And decoding three states requires two thresholds, which are not supported in the digital system.

- 10BASE-T1S basics....712
- 10BASE-T1S configuration....713
- 10BASE-T1S trigger....716
- 10BASE-T1S label list....720
- 10BASE-T1S decode results....721
- Search on decoded 10BASE-T1S data....722

14.12.1 10BASE-T1S basics

This option provides in-demand monitor and decode functions for 10BASE-T1S, where S stands for short reach. This standard, officially IEEE 802.3cg, attracted attention even before the specification was published in 2020. It was specified with automotive requirements in mind, as an alternative to CAN, CAN-FD or LIN. Target application is short-range data transmission with data rates up to 10 Mbit/s.

10BASE-T1S supports half-duplex and full-duplex communication, providing a point-to-point direct connection between two nodes. It is also suited for using a multidrop topology with up to eight nodes, connected on a single 25 m bus segment. Typical application examples are automotive interior lighting, parking radar, active suspension, motor management, and audio connections. It also supports networks of incompatible devices and different physical hardware.

Advantages over previously established 10 Mbit/s protocols include:

- Connecting all sensors over the same unshielded twisted pair cable, which saves interfaces, connectors, and cables, hence reducing weight, cost, and complexity.
- The simplified architecture, entirely Ethernet-based, eliminates any need for gateways between the networks. The unified design is also simpler to test and maintain.
- Maximized data rate: With Physical Layer Collision Avoidance (PLCA), only the node that currently has the right to transmit can send data. Nodes with no data to transmit will be given a reduced slot to send data, increasing the available bandwidth.

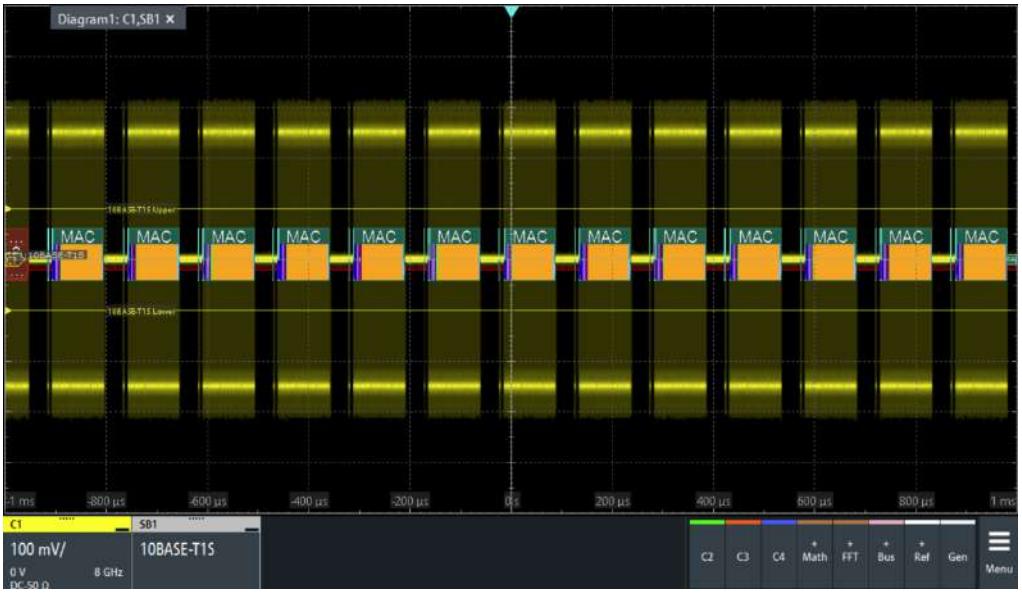



Figure 14-16: Example of a decoded 10BASE-T1S signal

14.12.2 10BASE-T1S configuration

14.12.2.1 10BASE-T1S configuration settings

Access: [Bus] > "10BASE-T1S" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

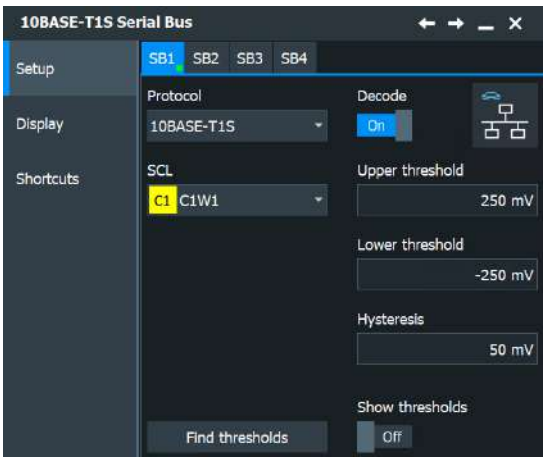

See also: Section 14.1.1, "Setup - general settings", on page 556

SCL
Selects the source channel for the 10BASE-T1S protocol. Only analog channels can be used.

Remote command:
`BUS<b>:TNOS:SOURce` on page 2121

Upper threshold
Sets the upper threshold for the data channel. Enter the value directly in the field.

Remote command:
`BUS<b>:TNOS:THReshold:UPPer` on page 2121

Lower thresholds
Sets the lower threshold for the data channel. Enter the value directly in the field.

Remote command:
`BUS<b>:TNOS:THReshold:LOWer` on page 2121


Hysteresis
Sets the hysteresis for the data channel.

Remote command:
`BUS<b>:TNOS:THReshold:HYSTeresis` on page 2122

14.12.2.2 10BASE-T1S display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

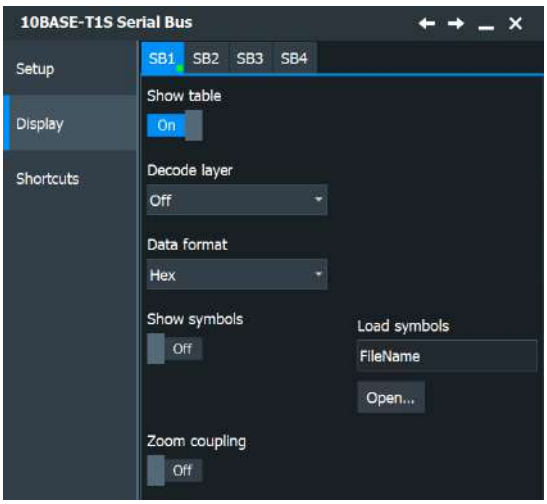

To enhance the decode possibilities of the 10BASE-T1S protocol, you can use additional settings in the "Display" tab:

Decode layer 715
Load symbols 715

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display:

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of the raw, encoded bits.
"Symbols"	Enables the display of the raw, encoded symbols.
"Descrambled bits"	Enables the display of the fully decoded and descrambled binary data, representing the original information being transmitted over the 10BASE-T1S link.

Load symbols
See Section 14.12.4, "10BASE-T1S label list", on page 720.

14.12.2.3 Configuring 10BASE-T1S signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.12.2.1, "10BASE-T1S configuration settings", on page 713.

Serial bus setup

1. Press the [Bus] key on the front panel.

2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "10BASE-T1S".
4. Select the source for the data signal.
5. Select the upper and lower thresholds and the hysteresis.
6. Enable "Decode".


14.12.3 10BASE-T1S trigger

14.12.3.1 10BASE-T1S trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

In this section, all trigger settings are described. Their availability on the instrument depends on the selected trigger type. The user interface of the instrument displays only appropriate settings and guides you through the trigger setup.

For a list of supported trigger conditions, refer to the specifications document.

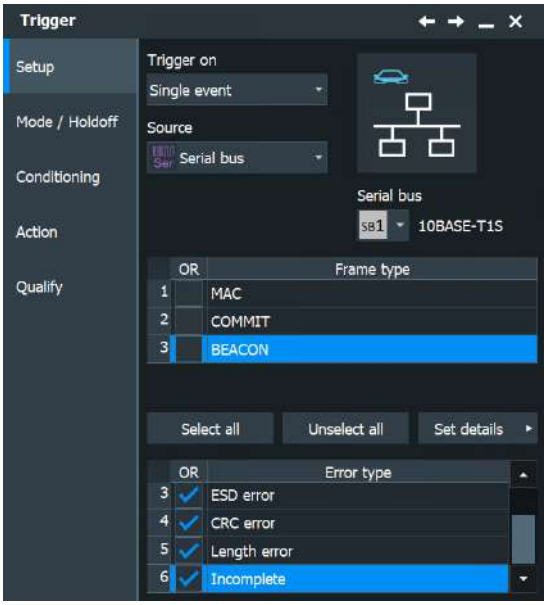

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Serial bus
Selects the serial bus to be triggered on. Make sure to select the correct bus before you enter the settings.

To trigger on a serial bus, the signals sources must be channel signals. If the data or clock source is a math or reference waveform, you cannot trigger on that bus.

Remote command:
`TRIGger<t>:SOURce:SBSelect` on page 1839

Select all, Unselect all
Helps you select the frame types you want to trigger on.

"Select all" Enables the trigger for all available frame types.

"Unselect all" Disables the trigger for all available frame types.

Remote command:
`TRIGger<t>:TNOS:CHKall` on page 2123
`TRIGger<t>:TNOS:CLR` on page 2123


Frame type
Selects and enables the frame types that you want to trigger on. You can trigger on all enabled frame types simultaneously.

The following frame types are available: "MAC", "COMMIT" and "BEACON".

For each selected frame type, you can also specify conditions for the value of the fields. See Set details.

Remote command:
`TRIGger<t>:TNOS:FRENable` on page 2123
`TRIGger<t>:TNOS:FRAMe<fr>:ENABle` on page 2123

Set details
To define detailed trigger conditions for a selected frame type, use the "Set details" dialog.

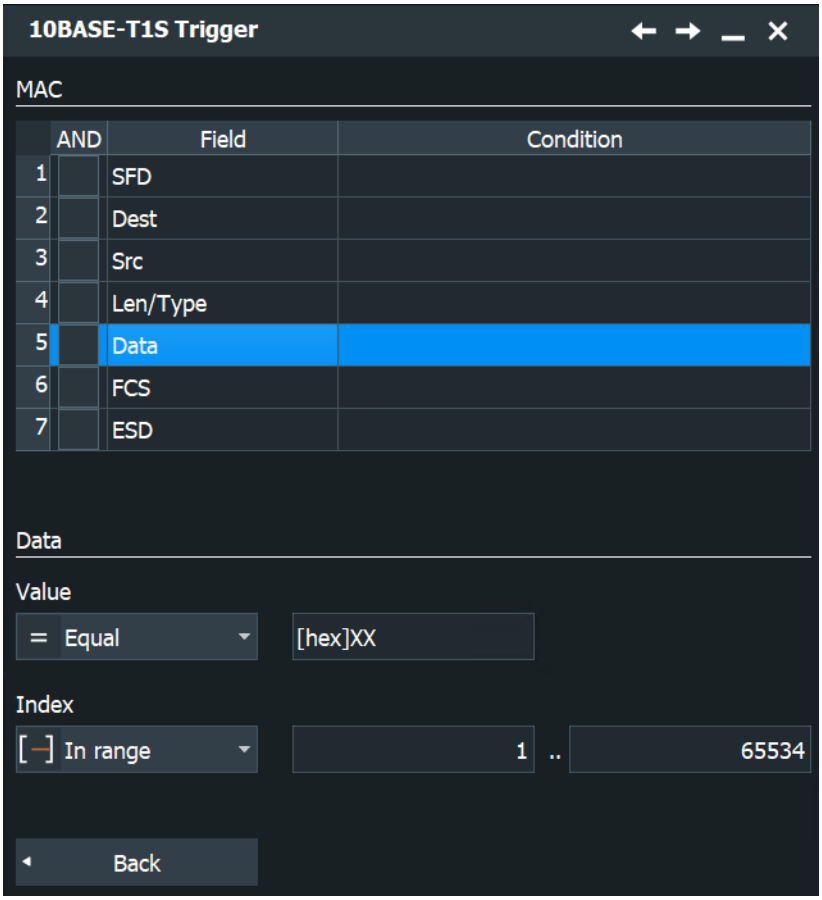

This dialog provides setting options that depend on the selected frame type. You can define trigger conditions for each field of the frame.

"Field" Selects and enables the frame's field type that you want to trigger on. The available fields are "SFD", "Dest", "Src", "Len/Type", "Data", "FCS" and "ESD".
Note that the "Commit" and "Beacon" frames also have a field, each, but with a fixed value. Therefore, this dialog does not provide an option for setting field values for the "Commit" and "Beacon" frames.

Remote command:
`TRIGger<t>:TNOS:FIENable` on page 2125
`TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:ENABle` on page 2125

"Condition" Displays the value condition for the selected field.

"Value" The value setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger<t>:TNOS:BIT on page 2123
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:BIT on page 2123
TRIGger<t>:TNOS:DMAX on page 2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DMAX on page 2124
TRIGger<t>:TNOS:DMIN on page 2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DMIN on page 2124
TRIGger<t>:TNOS:DOPerator on page 2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DOPerator on page 2124

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger<t>:TNOS:IMAX on page 2125
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IMAX on page 2125
TRIGger<t>:TNOS:IMIN on page 2125
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IMIN on page 2125
TRIGger<t>:TNOS:IOPerator on page 2126
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IOPerator on page 2126

Error type
Selects and enables the error types that you want to trigger on. You can trigger on all enabled error types simultaneously.

The following error types are available: "Preamble error", "SFD error", "ESD error", "CRC error", "Length error" and "Incomplete".

Remote command:
TRIGger<t>:TNOS:ERENable on page 2126
TRIGger<t>:TNOS:ERRor<n>:ENABle on page 2126

14.12.3.2 Triggering on 10BASE-T1S

Prerequisite: A bus is configured for the 10BASE-T1S signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to 10BASE-T1S.
5. Select the frame and error types to be used for triggering.

6. Configure the details settings, which are available for some frame types. See "Set details" on page 717.

14.12.4 10BASE-T1S label list

Symbol lists (or "label lists") are protocol-specific. In the "Display" dialog, you can load a symbol list in "PTT" or "CSV" format.

A 10BASE-T1S symbol file contains two values for each Ethernet header:

- Ethernet Header display
- Symbolic label: name of the address, specifying its function in the bus network.

Example: 10BASE-T1S symbol list file

```
############################################################
# Supported MAC Address Format
# xx:xx:xx  standard 24 bit manufactory header
# xx:xx:xx:xx:xx:xx/yy  support other length headers
# yy should be the header length in decimal
# yy should be between 24 - 48
############################################################
@PROTOCOL_NAME = ethernet
00:00:0C     Cisco
0:01:13     Olympus
0:01:14     KandaTsu
0:04:07     TopconPo
00:0B:64     KiebackP
00:1B:C5:06:C0:00/36     LuxconSy
00:1B:C5:06:D0:00/36     TesElect
00:1B:C5:06:E0:00/36     TwoDimen
00:1B:C5:06:F0:00/36     LlcEmzio
00:1F:BE     Shenzhen
00:21:8F     Avantgar
0.015625     GoliathS
0.015636574     D-Link
0.015648148     BaodingG
00:50:C2:5F:60:00/36     Cambridg
00:50:C2:5F:70:00/36     Metrolog
00:50:C2:5F:80:00/36     GrupoEpe
18:42:2F     AlcatelL
0.781273148     RiavaNet
18:46:17     SamsungE
18:8E:D5     TpVision
18:E7:F4     Apple
40:D8:55:1C:80:00/36     SensataT
40:D8:55:1C:90:00/36     Andy-L
40:D8:55:1C:A0:00/36     RigelEng
40:D8:55:1C:B0:00/36     MgSRL
40:D8:55:1C:D0:00/36     YxlonInt
```

```
40:D8:55:1C:E0:00/36     PeterHub
40:D8:55:1C:F0:00/36     OmnikNew
40:D8:55:1D:00:00/36     WebeasyB
FC:F8:B7      TronteqE
FC:FA:F7      Shanghai
FC:FE:77      HitachiR
FF:FF:FF:FF:FF:FF/48     BroadCast
```

14.12.5 10BASE-T1S decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

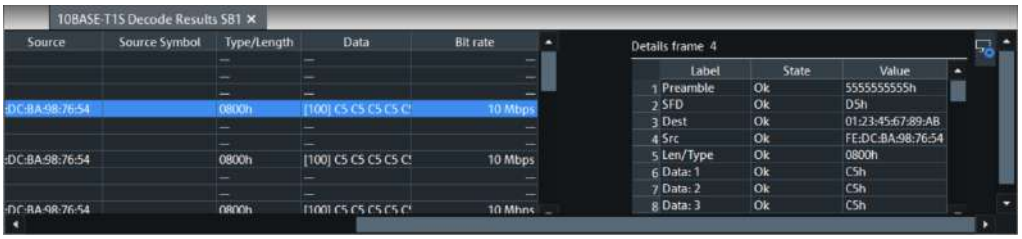


Table 14-17: Content of the Decode results table

Column	Description
Frame	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame

Column	Description
Source	Source address of the frame
Type/Length	The sub-protocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the sub-protocol) or the word length.
CRC	Frame check (Cyclic Redundancy Code, CRC)
Destination symbol	Symbol defined for the respective destination
Source symbol	Symbol defined for the respective source
Bit rate	Value of the bit rate

Table 14-18: Content of the Details frame table

Column	Description
Name	State of the field
Type	Field type
Value	Hexadecimal value of the field

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.13.3, "Decode results", on page 2126.

14.12.6 Search on decoded 10BASE-T1S data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.


Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

14.12.6.1 10BASE-T1S search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

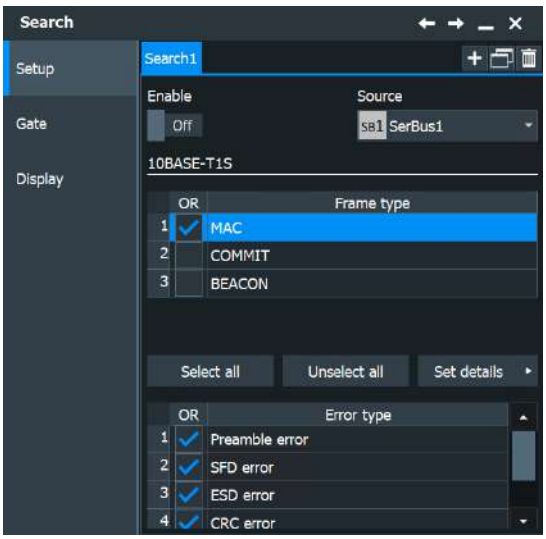

Select all, Unselect all
Helps you select the frame types you want to search on.

"Select all" Enables the search for all available frame types.

"Unselect all" Disables the search for all available frame types.

Remote command:
`SEARch:TRIGger:TNOS:CHKall` on page 2135
`SEARch:TRIGger:TNOS:CLR` on page 2135

Frame type
Selects and enables the frame types that you want to search on. You can search on all enabled frame types simultaneously.

Available frame types are "MAC", "COMMIT" and "BEACON".

For each selected frame type, you can also specify conditions for the value of the fields. See Set details.

Remote command:
`SEARch:TRIGger:TNOS:FRENable` on page 2135
`SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:ENABle` on page 2138

Set details
Opens a dialog to define the details of the selected frame.



"Field" Enables the field type that you want to search for in the selected frame.
The available fields are "SFD", "Dest", "Src", "Len/Type", "Data", "FCS" and "ESD".
Note that the "Commit" and "Beacon" frames also have a field, each, but with a fixed value. Therefore, this dialog does not provide an option for setting field values for the "Commit" and "Beacon" frames.

Remote command:
`SEARch:TRIGger:TNOS:FIENable` on page 2138
`SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:ENABle` on page 2138

"Condition" Displays the value condition for the selected field.

"Value" The value setup consists of a comparison condition and one or two data patterns.

Remote command:
`SEARch:TRIGger:TNOS:BIT` on page 2138
`SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:BIT` on page 2138
`SEARch:TRIGger:TNOS:DMAX` on page 2135
`SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMAX` on page 2135
`SEARch:TRIGger:TNOS:DMIN` on page 2136
`SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMIN` on page 2136
`SEARch:TRIGger:TNOS:DOPerator` on page 2136
`SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DOPerator` on page 2136

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SEARch:TRIGger:TNOS:IMAX on page 2137
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMAX on page 2137
SEARch:TRIGger:TNOS:IMIN on page 2137
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMIN on page 2137
SEARch:TRIGger:TNOS:IOPerator on page 2137
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IOPerator on page 2137

Error type
Selects and enables the error types that you want to search on. You can search on all enabled error types simultaneously.

The following error types are available: "Preamble error", "SFD error", "ESD error", "CRC error", "Length error" and "Incomplete".

Remote command:
SEARch:TRIGger:TNOS:ERENable on page 2139
SEARch:TRIGger:TNOS:ERRor<m>:ENABle on page 2139

14.12.6.2 10BASE-T1S search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands are described in Section 26.18.13.5, "10BASE-T1S search results", on page 2139.

14.12.6.3 Searching 10BASE-T1S data

Prerequisite: A serial bus is configured for the 10BASE-T1S signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Tap "Setup search".
3. Tap the "Source" button and select the "Serial bus" trigger source.

4. Select the serial bus that is set to 10BASE-T1S.
5. Select the frame and error types to be used for triggering.
6. Configure the details settings, which are available for some frame types. See "Set details" on page 723.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.13 Ethernet 100BASE-T1 (option R&S RTP-K57)

100BASE-T1 is an Ethernet based protocol specialized for the needs of the automotive industry, such as in the automotive networking applications, enabling advanced safety, comfort and infotainment features within the automobile.

Its specifications, with reference to IEEE Standard 802.3-2012, were developed by the OPEN (One-Pair Ether-Net) alliance under BroadR-Reach®.

BroadR-Reach is a Broadcom® point-to-point Ethernet physical layer (PHY) technology. Therefore, 100BASE-T1 is also known as BroadR-Reach Physical Layer (BR-PHY) or Open Alliance BroadR-Reach PHY (OABR PHY). For more details on the specifications, refer to http://www.opensig.org/about/specifications/.

This option is compatible with the MII (IEEE 802.3 Clause 22) and IEEE 802.3 MAC operating at 100Mbps.

- 100BASE-T1 basics....726
- 100BASE-T1 configuration....727
- 100BASE-T1 trigger....731
- 100BASE-T1 decode results....737
- Search on decoded 100BASE-T1 data....739

14.13.1 100BASE-T1 basics

The BR-PHY has the following objectives:

- Provides a PHY that supports full duplex operating at 100 Mbps over a pair of unshielded twisted pair (UTP) cable or better cable
- Provides compatibility with the Media Independent Interface (MII) IEEE 802.3 Clause 22 and IEEE 802.3 Media Access Controller (MAC) operating at 100 Mbps
- Achieves bit error rate (BER) of less than $1e^{-10}$

To achieve the above objectives, 100BASE-T1 uses 1000BASE-T PHYs with parts of IEEE 802.3 100BASE-TX in operation at 100 MBps and develops a new solution for the PHY sublayers, i.e. Physical Coding Sublayer (PCS) and Physical Medium Attachment (PMA) sublayer as follows:

- Adopts full duplex communication of 1000BASE-T and therefore echo cancellation on a single twisted-pair channel. This feature reduces cabling while preserving the Ethernet MAC compatibility

- Adopts Pulse Amplitude Modulation (PAM-3) encoding scheme with the following encoding techniques:
  - Data encoding is carried out via a 4b3b encoder that converts the MII data (4B - four bits) with 25 MHz clock to three bits (3B) wide of data that is transmitted during one 33.3 MHz clock period
  - Symbol encoding is carried out via a one-dimensional (1D) PAM-3 encoder that converts the 3-bit groups into pairs of ternary symbols. These symbols are transmitted using three voltage levels (-1 V, 0 V and +1 V). One symbol is transmitted in each symbol period
  - Data scrambling is carried out via a sidestream scramble to randomize the sequence of transmitted symbols and avoid the presence of spectral lines in the signal spectrum

  PAM-3 has a higher spectral efficiency that limits the signaling bandwidth to 33.3 MHz instead of 65 MHz to 80 MHz in 1000BASE-T and 100BASE-TX such that communication occurs in the best part of a twisted-pair channel. This in turn improves return loss, reduces crosstalk and EMI, allows for a more aggressive Electromagnetic Compatibility (EMC) filtering and lower cost (often lower quality) cabling

In terms of the trigger and decoder development, multiple aspects of this protocol are new, specifically:


- Sidestream descrambler: Descrambles the randomized sequence of received ternary symbols
- 1D PAM-3 decoder: Decodes the received ternary symbols into groups of three bits according to a conversion chart
- 4b/3b line decoder: Decodes the groups of three bits (result of ternary pair) back to groups of four bits of the data stream

14.13.2 100BASE-T1 configuration

14.13.2.1 100BASE-T1 configuration settings

Access: [Bus] > "100BASE-T1" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

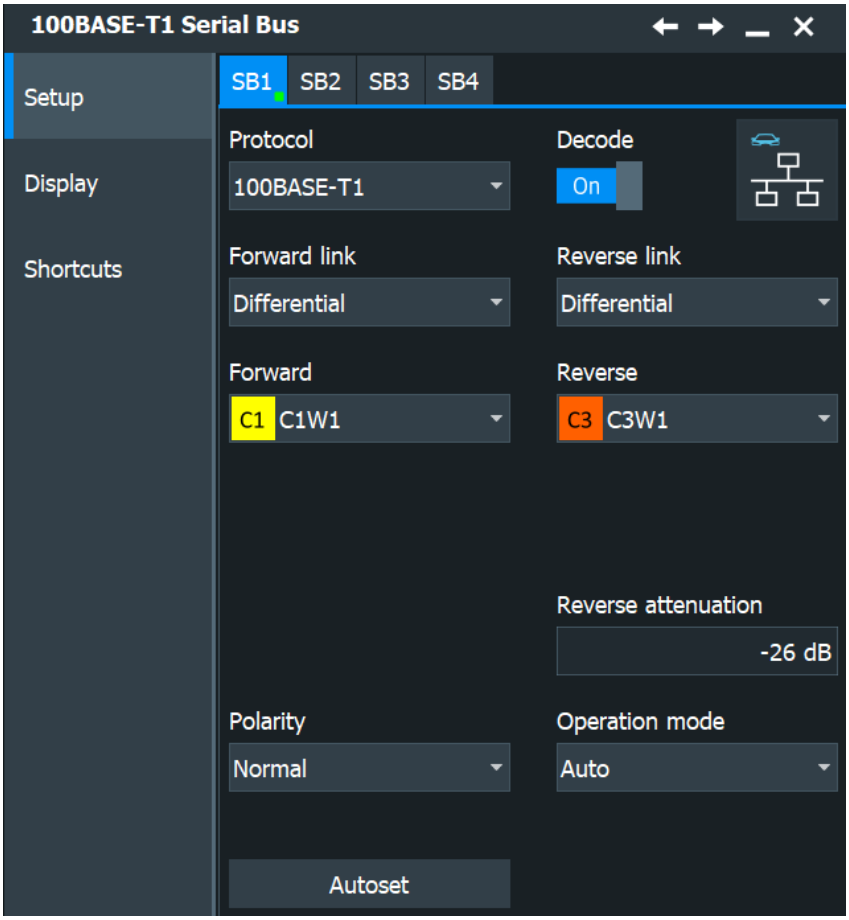

See also: Section 14.1.1, "Setup - general settings", on page 556

Forward
Defines the forward signal settings.

You can choose between a differential and single-ended signal and set the forward source channel for the waveform. Only analog channels are available for selection.

Remote command:
BUS<b>:HBTO:FTYP on page 2147
BUS<b>:HBTO:FDIF on page 2147
BUS<b>:HBTO:FDAP on page 2147
BUS<b>:HBTO:FDAM on page 2146

Reverse
Defines the reversed signal settings. The reverse direction is optional and can be disabled.

You can choose between a differential and single-ended signal and set the reverse source channel for the waveform. Only analog channels are available for selection.

Remote command:
BUS<b>:HBTO:RTYP on page 2148
BUS<b>:HBTO:RDIF on page 2148

BUS<b>:HBTO:RDAP on page 2148
BUS<b>:HBTO:RDAM on page 2148

Reverse attenuation
Sets the attenuation factor. It is used to de-amplify the reverse signal before subtracting it from the forward signal.

The effective signal amplitude passed to the decoder is:

$$Amp = (Fwd_+ - Fwd_-) - 10^{\frac{Attn}{20}}(Rev_+ - Rev_-)$$

Remote command:
BUS<b>:HBTO:ATTN on page 2146

Polarity
Selects the polarity of the data signal. You can select between "Normal" and "Inverted".

For "Normal" polarity, active high is defined as +1 V and active low is defined as -1 V.
For "Inverted" polarity, active high is defined as -1 V and active low is defined as +1 V.

Remote command:
BUS<b>:HBTO:POLarity on page 2149

Operation mode
Selects the desired direction of the full-duplex signal for analysis. If set to "Auto", the decoder automatically detects the "Master" or "Slave" mode.

Remote command:
BUS<b>:HBTO:MODE on page 2149

Autoset
Starts software algorithms for determining the signal threshold levels and bitrate.


Remote command:
BUS<b>:FAUToset on page 1834

14.13.2.2 100BASE-T1 display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

To enhance the decode possibilities of the 100BASE-T1 protocol, you can use an additional setting in the "Display" tab: "Decode layer".

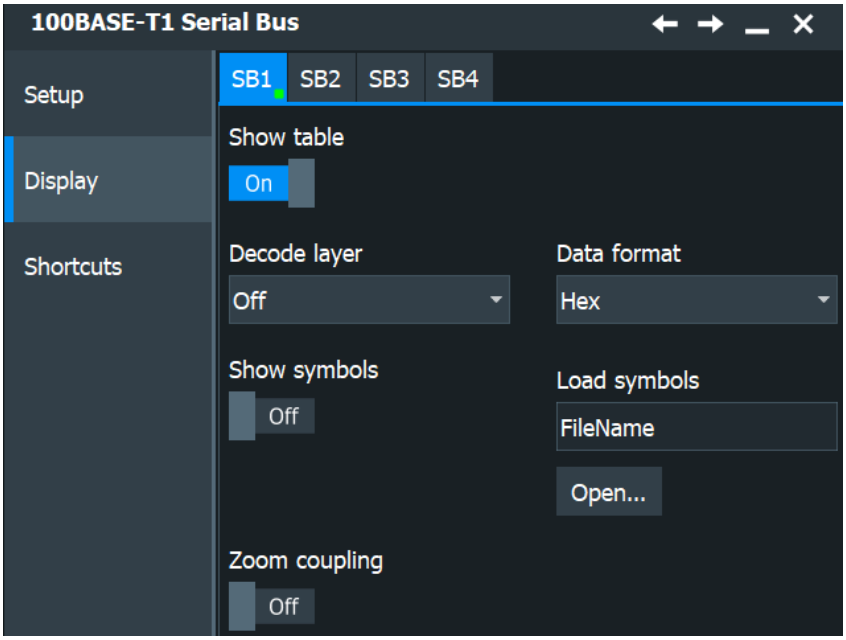

100BASE-T1 specific symbol settings

Label lists are protocol-specific. Label lists for 100BASE-T1 are available in CSV and PTT format.

A 100BASE-T1 label file contains two values for each ethernet header:

- Ethernet Header Display
- Symbolic label: name of the address, specifiing its function in the bus network.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off" No decode layer is displayed.

"Ternary symbols"
Decoded ternary symbols.

"Scrambled bits"
Scrambled ternary bits.

"Descrambled bits"
Descrambled ternary bits.

"Reversed Bits"
Reserved bits

14.13.2.3 Configuring 100BASE-T1 signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.13.2.1, "100BASE-T1 configuration settings", on page 727.

Serial bus setup


1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "100BASE-T1".
4. Select the type and source for the reversed and forward signal.
5. Select the polarity ("Normal" or "Inverted") of the signal.
6. Enable "Decode".

14.13.3 100BASE-T1 trigger

14.13.3.1 100BASE-T1 trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

In this section, all trigger settings are described. Their availability on the instrument depends on the selected trigger type. The user interface of the instrument displays only appropriate settings and guides you through the trigger setup.
For a list of supported trigger conditions, refer to the specifications document.

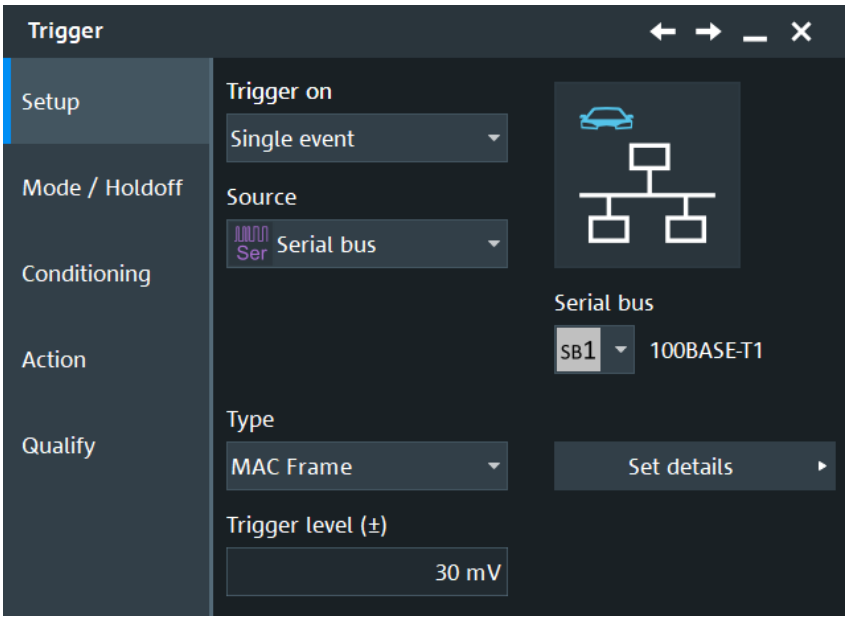

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Type
Selects the trigger type for 100BASE-T1 analysis.


Remote command:
`TRIGger<t>:HBTO:TYPE` on page 2150

Frame Start ← Type
Triggers on the start of frame.

MAC Frame ← Type
Triggers on a Media Access Control (MAC) frame. You can specify:


- Destination address
- Source address
- Length/Type
- Frame check
- Data
- Index

The frame contains addresses of the devices and MAC control information that define how to go about transmitting and receiving frames.

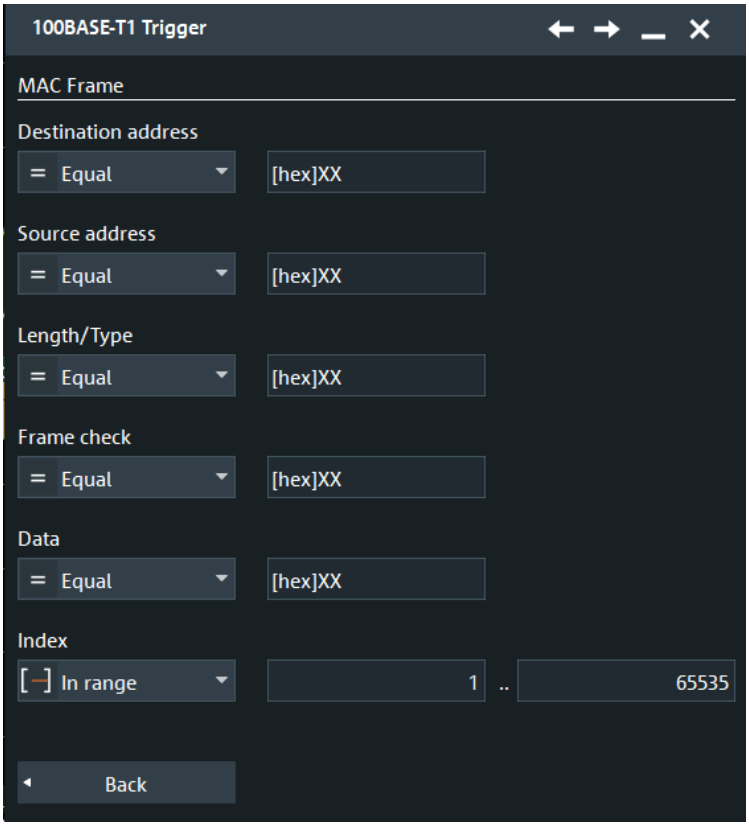

IDLE ← Type
Triggers on an idle frame. The frame is used for clock synchronization.

Error ← Type
Triggers on the specified error frame.

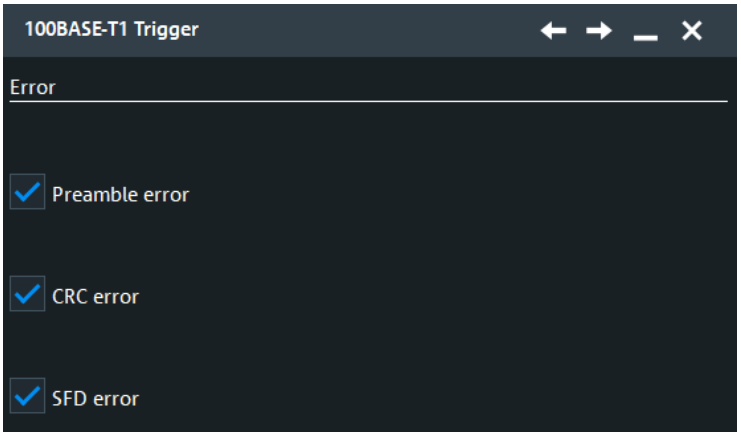

Trigger level
Sets a trigger level.

Remote command:
`TRIGger<t>:HBTO:TRGLevel` on page 2157

Destination address
Sets the specified destination address to be triggered on. The destination address setup consists of the condition and one or two data patterns.

The destination address corresponds to the address of the interface in the device that receives the frame. If the destination address does not match the interface's own Ethernet address, then the interface is free to ignore the rest of the frame.

"Condition" Defines the operator to set a specific destination address, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the destination address pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:HBTO:DADDress:CONDition` on page 2150
`TRIGger<t>:HBTO:DADDress:MIN` on page 2151
`TRIGger<t>:HBTO:DADDress:MAX` on page 2151

Source address
Sets the specified source address to be triggered on. The source address setup consists of the condition and one or two data patterns.

The source address is the physical address of the device that sends the frame.

"Condition" Defines the operator to set a specific source address, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the source address pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:HBTO:SADDress:CONDition` on page 2151
`TRIGger<t>:HBTO:SADDress:MIN` on page 2152
`TRIGger<t>:HBTO:SADDress:MAX` on page 2152

Length/Type
Sets the specified Length/Type to be triggered on. The Length/Type setup consists of the condition and one or two data patterns.

The value in this field indicates the manner in which the field is being used, either as a length or type field. As a length field, the value in the field indicates the number of logical link control (LLC) data octets that follow in the data field of the frame. As a type field, the value in the field is used to indicate the type of protocol data being carried in the data field of the frame.

"Condition" Defines the operator to set a specific Length/Type, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the Length/Type pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:HBTO:LENGth:CONDition` on page 2152
`TRIGger<t>:HBTO:LENGth:MIN` on page 2153
`TRIGger<t>:HBTO:LENGth:MAX` on page 2153

Frame check
Sets the specified frame check to be triggered on. The frame check setup consists of the condition and one or two data patterns.

This field contains a value that is used to check the integrity of the various bits in the frame fields (excluding the preamble / SFD).

"Condition" Defines the operator to set a specific frame check, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the frame check pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:HBTO:CRC:CONDition` on page 2153
`TRIGger<t>:HBTO:CRC:MIN` on page 2154
`TRIGger<t>:HBTO:CRC:MAX` on page 2154

Data
Sets the specified data to be triggered on. The data setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the data pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:HBTO:DATA:DCONdition` on page 2154
`TRIGger<t>:HBTO:DATA:DMIN` on page 2155
`TRIGger<t>:HBTO:DATA:DMAX` on page 2155

Index
Sets the specified value or range within this series of data that is considered for the analysis. The index setup consists of the condition and one or two index values.

"Condition" Defines the operator to set a specific index, e.g. "Equal" or a range.

"Index Min/Index"
Defines the bit pattern of the index pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Index Max" The second index pattern is required to specify a range with conditions "In range".

Remote command:
`TRIGger<t>:HBTO:DATA:ICONdition` on page 2155
`TRIGger<t>:HBTO:DATA:IMIN` on page 2156
`TRIGger<t>:HBTO:DATA:IMAX` on page 2156

Errors
Sets the type of error events to be triggered on.

Preamble Error ← Errors
Triggers on a frame with invalid preamble.

Remote command:
`TRIGger<t>:HBTO:ERRor:PREamble` on page 2156

CRC Error ← Errors
Triggers on a frame that has a mismatch of the Cyclic Redundancy Check (CRC) value between the transmitting and receiving device.

Remote command:
`TRIGger<t>:HBTO:ERRor:CRC` on page 2157

SFD Error ← Errors
Triggers on a frame with invalid Start Frame Delimiter (SFD).

Remote command:
`TRIGger<t>:HBTO:ERRor:SFD` on page 2157

14.13.3.2 Triggering on 100BASE-T1

Prerequisite: A bus is configured for the 100BASE-T1 signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to 100BASE-T1.
5. Tap "Type" and select the trigger type to be used for 100BASE-T1 protocol analysis.
6. To refine the trigger settings, configure additional settings, which are available for some trigger types.

For details, see Section 14.13.3, "100BASE-T1 trigger", on page 731.

14.13.4 100BASE-T1 decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

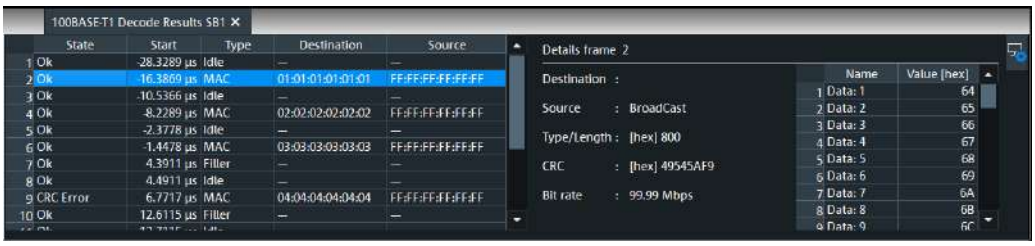


Table 14-19: Content of the Decode results table

Column	Description
Frame	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame
Source	Source address of the frame

Table 14-20: Content of the Details frame table

Column	Description
Destination symbol	Symbol defined for the respective destination
Source symbol	Symbol defined for the respective source
Type/Length	The sub-protocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the sub-protocol) or the word length.
CRC	Frame Check (Cyclic Redundancy Code, CRC)
Bit rate	Value of the bit rate
Name	State of the field
Value	Hexadecimal value of the field

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.14.3, "Decode results", on page 2157.

14.13.5 Search on decoded 100BASE-T1 data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.


Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

14.13.5.1 100BASE-T1 search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

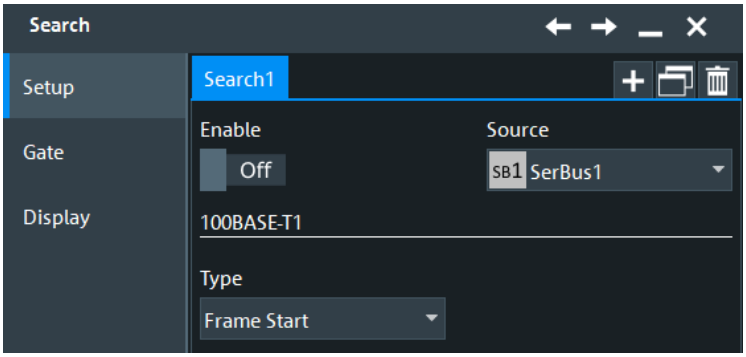

Enable
Enables the search for 100BASE-T1.

Type
Selects the search type for 100BASE-T1 analysis.

Remote command:
`SEARch:TRIGger:HBTO:TYPE` on page 2164

Frame Start ← Type
Searches for the start of frame.

MAC Frame ← Type
Searches for a Media Access Control (MAC) frame that matches the specified Destination address, Source address, Length/Type, Frame check, Data or Index condition.

The frame contains addresses of the devices and MAC control information that define how to go about transmitting and receiving frames.

FILLER ← Type
Searches for a Filler frame. The frame is used to maintain transmission activity.

IDLE ← Type
Searches for an idle frame. The frame is used for clock synchronization.

Error ← Type
Searches for the specified error frame.

Destination address
Sets the specified destination address to be searched for. The destination address setup consists of the condition and one or two data patterns.

The destination address corresponds to the address of the interface in the device that receives the frame. If the destination address does not match the interface's own Ethernet address, then the interface is free to ignore the rest of the frame.

"Condition" Defines the operator to set a specific destination address, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the destination address pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:HBTO:DADDress:CONDition` on page 2164
`SEARch:TRIGger:HBTO:DADDress:MIN` on page 2165
`SEARch:TRIGger:HBTO:DADDress:MAX` on page 2165

Source address
Sets the specified source address to be searched for. The source address setup consists of the condition and one or two data patterns.

The source address is the physical address of the device that sends the frame.

"Condition" Defines the operator to set a specific source address, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the source address pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:HBTO:SADDress:CONDition` on page 2165
`SEARch:TRIGger:HBTO:SADDress:MIN` on page 2166
`SEARch:TRIGger:HBTO:SADDress:MAX` on page 2166

Length/Type
Sets the specified Length/Type to be searched for. The Length/Type setup consists of the condition and one or two data patterns.

The value in this field indicates the manner in which the field is being used, either as a length or type field. As a length field, the value in the field indicates the number of logical link control (LLC) data octets that follow in the data field of the frame. As a type field, the value in the field is used to indicate the type of protocol data being carried in the data field of the frame.

"Condition" Defines the operator to set a specific Length/Type, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the Length/Type pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:HBTO:LENGth:CONDition` on page 2167
`SEARch:TRIGger:HBTO:LENGth:MIN` on page 2167
`SEARch:TRIGger:HBTO:LENGth:MAX` on page 2167

Frame check
Sets the specified frame check to be searched for. The frame check setup consists of the condition and one or two data patterns.

This field contains a value that is used to check the integrity of the various bits in the frame fields (excluding the preamble / SFD).

"Condition" Defines the operator to set a specific frame check, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the frame check pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:HBTO:CRC:CONDition` on page 2168
`SEARch:TRIGger:HBTO:CRC:MIN` on page 2168
`SEARch:TRIGger:HBTO:CRC:MAX` on page 2168

Data
Sets the specified data to be searched for. The data setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the data pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:HBTO:DATA:DCONdition` on page 2169
`SEARch:TRIGger:HBTO:DATA:DMIN` on page 2169
`SEARch:TRIGger:HBTO:DATA:DMAX` on page 2169

Index
Sets the specified value or range within this series of data that is considered for the search. The index setup consists of the condition and one or two index values.

"Condition" Defines the operator to set a specific index, e.g. "Equal" or a range.

"Index Min/Index"
Defines the bit pattern of the index pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Index Max" The second index pattern is required to specify a range with conditions "In range".

Remote command:
`SEARch:TRIGger:HBTO:DATA:ICONdition` on page 2170
`SEARch:TRIGger:HBTO:DATA:IMIN` on page 2170
`SEARch:TRIGger:HBTO:DATA:IMAX` on page 2171

Errors
Sets the type of error events to be searched for.

Preamble Error ← Errors
Searches for a frame with invalid preamble.

Remote command:
`SEARch:TRIGger:HBTO:ERRor:PREamble` on page 2171

CRC Error ← Errors
Searches for a frame that has a mismatch of the Cyclic Redundancy Check (CRC) value between the transmitting and receiving device.

Remote command:
`SEARch:TRIGger:HBTO:ERRor:CRC` on page 2171

SFD Error ← Errors
Searches for a frame with invalid Start Frame Delimiter (SFD).

Remote command:
SEARch:TRIGger:HBTO:ERRor:SFD on page 2171

14.13.5.2 100BASE-T1 search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands are described in Section 26.18.14.5, "Search results", on page 2172.

14.13.5.3 Searching 100BASE-T1 data

Prerequisite: A serial bus is configured for the 100BASE-T1 signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to 100BASE-T1 (e.g. "SB1", unless already selected).

   The search dialog for 100BASE-T1 protocol analysis opens.
5. Specify search criteria according to Section 14.13.5, "Search on decoded 100BASE-T1 data", on page 739.
6. To acquire a waveform, press [Single].

   The R&S RTP performs an 100BASE-T1 decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog.

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.14 Ethernet 1000BASE-T1 (option R&S RTP-K58)

1000BASE-T1 is a single pair Ethernet based protocol specialized for the needs of the automotive industry, such as in the automotive networking applications, enabling advanced safety, comfort and infotainment features within the automobile. Its specifications is reference to IEEE P802.3bp.

- 1000BASE-T1 basics....744
- 1000BASE-T1 configuration....744
- 1000BASE-T1 trigger....748
- 1000BASE-T1 decode results....754
- Search on decoded 1000BASE-T1 data....755

14.14.1 1000BASE-T1 basics

The 1000BASE-T1 has the following objectives:

- Provides a PHY that supports full duplex operating at 1000 Mbps over a pair of unshielded sheathed twisted-pair cable or better cable.
- Achieves bit error rate (BER) of less than $1e^{-10}$.
- Support for up to at least 15 meters of cable length in the automotive link segment.

To achieve the above objectives, 1000BASE-T1 uses Physical Coding Sublayer (PCS) and Physical Medium Attachment (PMA) sublayer as follows:


- Adopts full duplex communication of 1000BASE-T1 and therefore echo cancellation on a single twisted-pair channel. This feature reduces cabling while preserving the Ethernet MAC compatibility
- Adopts Pulse Amplitude Modulation (PAM-3) encoding scheme with the following encoding techniques:
  - PAM-3 is transmitted at 750 MB data rate.
  - It uses 15-bit scrambler to improve the EMC performance.
  - Data is encoded in 80B/81B blocks.
  - 396 bits of Reed-Solomon forward error correction (FEC) parity is added to each group of 45 80B/81B blocks.
  - 9-bit OAM symbol is added, then 396 bits Reed-Solomon. Together, they shape a PHY frame of 4050 bits, or 450 forward error correction (FEC) symbols of 9 bits. FEC allows for correction of up to 22 FEC symbols per PHY frame.

14.14.2 1000BASE-T1 configuration

14.14.2.1 1000BASE-T1 configuration settings

Access: [Bus] > "1000BASE-T1" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

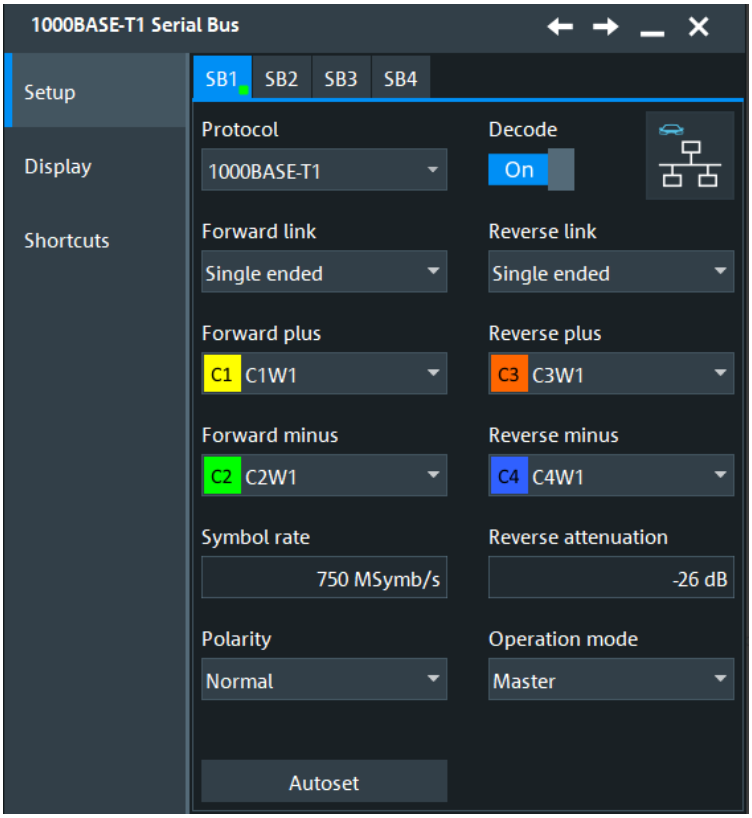

See also: Section 14.1.1, "Setup - general settings", on page 556

Forward
Defines the forward signal settings.

You can choose between a differential and single-ended signal and set the source channel for the waveform. Only analog channels are available for selection.

Remote command:
`BUS<b>:TBTO:FTYP` on page 2178
`BUS<b>:TBTO:FDIF` on page 2178
`BUS<b>:TBTO:FDAP` on page 2178
`BUS<b>:TBTO:FDAM` on page 2178

Reverse
Defines the reversed signal settings. The reverse direction is optional and can be disabled.

You can choose between a differential and single-ended signal and set the source channel for the waveform. Only analog channels are available for selection.

Remote command:
`BUS<b>:TBTO:RTYP` on page 2179
`BUS<b>:TBTO:RDIF` on page 2179

BUS<b>:TBTO:RDAP on page 2179
BUS<b>:TBTO:RDAM on page 2179

Reverse attenuation
Sets the attenuation factor. It is used to de-amplify the reverse signal before subtracting it from the forward signal.

The effective signal amplitude passed to the decoder is:

$$Amp = (Fwd_+ - Fwd_-) - 10^{\frac{Attn}{20}}(Rev_+ - Rev_-)$$

Remote command:
BUS<b>:TBTO:ATTN on page 2177

Polarity
Selects the polarity of the data signal. You can select between "Normal" and "Inverted".

For "Normal" polarity, active high is defined as +1 V and active low is defined as -1 V.
For "Inverted" polarity, active high is defined as -1 V and active low is defined as +1 V.

Remote command:
BUS<b>:TBTO:POLarity on page 2180

Operation mode
Selects the desired direction of the full-duplex signal for analysis. If set to "Auto", the decoder automatically detects the "Master" or "Slave" mode.

Remote command:
BUS<b>:TBTO:MODE on page 2180

Autoset
Starts software algorithms for determining the signal threshold levels and bitrate.


Remote command:
BUS<b>:FAUToset on page 1834

14.14.2.2 1000BASE-T1 display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

To enhance the decode possibilities of the 1000BASE-T1 protocol, you can use an additional setting in the "Display" tab: "Decode layer".

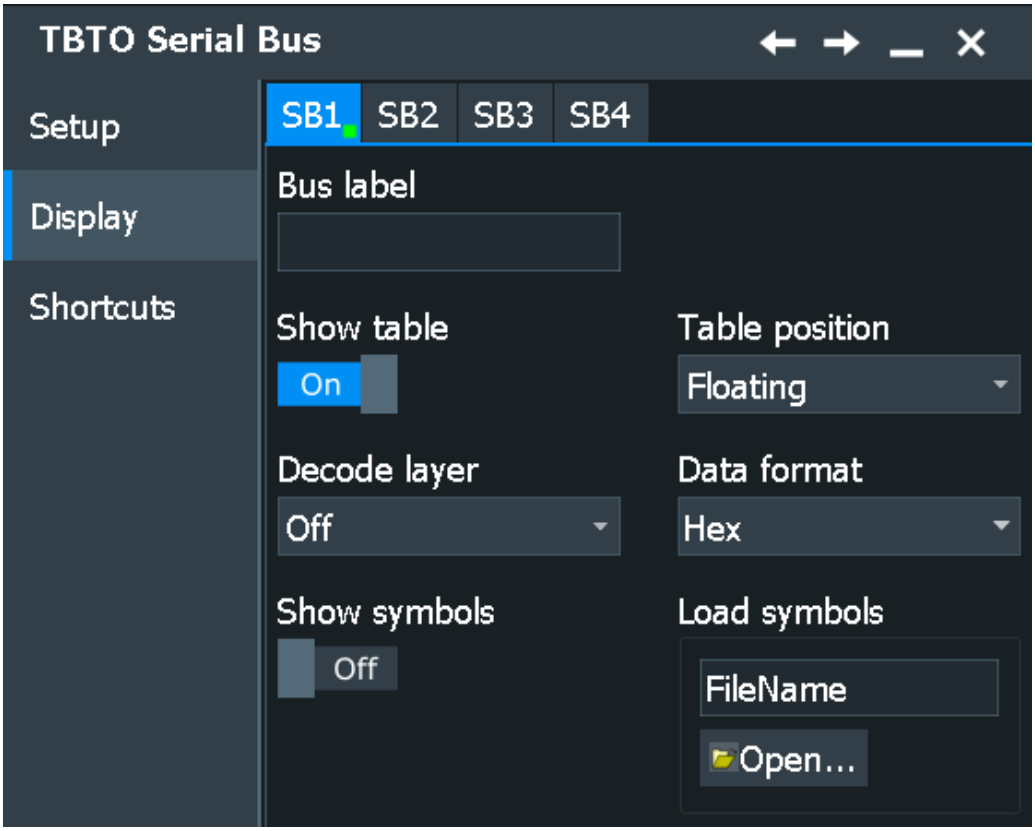

1000BASE-T1 Specific Label Settings

Label lists are protocol-specific. Label lists for 1000BASE-T1 are available in CSV and PTT format.

A 1000BASE-T1 label file contains two values for each ethernet header:

- Ethernet header display
- Symbolic label: name of the address, specifiing its function in the bus network.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	No decode layer is displayed.
"Ternary symbols"	Decoded ternary symbols.
"Scrambled bits"	Scrambled ternary bits.
"Descrambled bits"	Descrambled ternary bits.
"Corrected RS-FEC symbols"	Displays RS-FEC symbols that have been corrected.

14.14.2.3 Configuring 1000BASE-T1 signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.


Serial bus setup

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "1000BASE-T1".
4. Select the type and source for the reversed and forward signal.
5. Select the "Polarity" ("Normal" or "Inverted") of the signal.
6. Enable "Decode".

14.14.3 1000BASE-T1 trigger

14.14.3.1 1000BASE-T1 trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

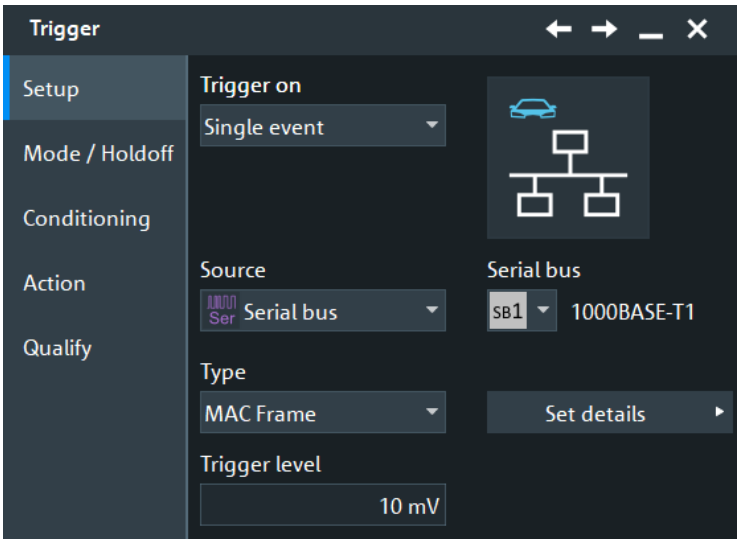

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Type
Selects the trigger type for 1000BASE-T1 analysis.


Remote command:
`TRIGger<t>:TBTO:TYPE` on page 2188

Frame Start ← Type
Triggers on the start of frame.

MAC Frame ← Type
Triggers on a media access control (MAC) frame. You can specify:

- Destination address
- Source address
- Length/Type
- Frame check
- Data
- Index

The frame contains addresses of the devices and MAC control information that define how to go about transmitting and receiving frames.

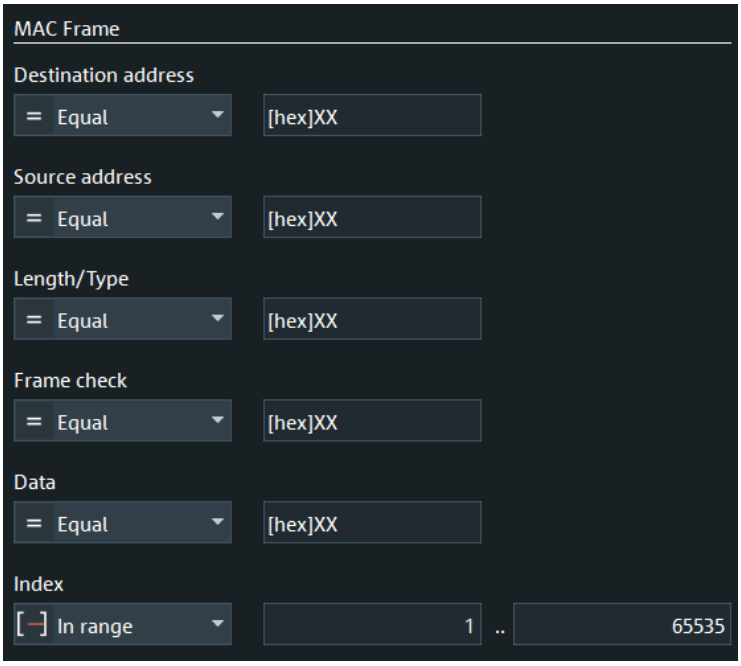

IDLE ← Type
Triggers on an idle frame. The frame is used for clock synchronization.

Error ← Type
Triggers on the specified error frame.

Trigger level
Sets the trigger level.

Remote command:
`TRIGger<t>:TBTO:TRGLevel` on page 2187

Destination address
Sets the specified destination address to be triggered on. The destination address setup consists of the condition and one or two data patterns.

The destination address corresponds to the address of the interface in the device that receives the frame. If the destination address does not match the interface's own Ethernet address, then the interface is free to ignore the rest of the frame.

"Condition" Defines the operator to set a specific destination address, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the destination address pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:TBTO:DADDress:CONDition on page 2189
TRIGger<t>:TBTO:DADDress:MIN on page 2190
TRIGger<t>:TBTO:DADDress:MAX on page 2190

Source address
Sets the specified source address to be triggered on. The source address setup consists of the condition and one or two data patterns.

The source address is the physical address of the device that sends the frame.

"Condition" Defines the operator to set a specific source address, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the source address pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:TBTO:SADDress:CONDition on page 2195
TRIGger<t>:TBTO:SADDress:MIN on page 2195
TRIGger<t>:TBTO:SADDress:MAX on page 2195

Length/Type
Sets the specified length/type to be triggered on. The length/type setup consists of the condition and one or two data patterns.

The value in this field indicates the manner in which the field is being used, either as a length or type field. As a length field, the value in the field indicates the number of logical link control (LLC) data octets that follow in the data field of the frame. As a type field, the value in the field is used to indicate the type of protocol data being carried in the data field of the frame.

"Condition" Defines the operator to set a specific Length/Type, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the Length/Type pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:TBTO:LENGth:CONDition on page 2193
TRIGger<t>:TBTO:LENGth:MIN on page 2194
TRIGger<t>:TBTO:LENGth:MAX on page 2194

Frame check
Sets the specified frame check to be triggered on. The frame check setup consists of the condition and one or two data patterns.

This field contains a value that is used to check the integrity of the various bits in the frame fields (excluding the preamble / SFD).

"Condition" Defines the operator to set a specific frame check, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the frame check pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:TBTO:CRC:CONDition` on page 2188
`TRIGger<t>:TBTO:CRC:MIN` on page 2189
`TRIGger<t>:TBTO:CRC:MAX` on page 2189

Data
Sets the specified data to be triggered on. The data setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the data pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:TBTO:DATA:DCONdition` on page 2190
`TRIGger<t>:TBTO:DATA:DMIN` on page 2191
`TRIGger<t>:TBTO:DATA:DMAX` on page 2191

Index
Sets the specified value or range within this series of data that is considered for the analysis. The index setup consists of the condition and one or two index values.

"Condition" Defines the operator to set a specific index, e.g. "Equal" or a range.


"Index Min/Index"
Defines the bit pattern of the index pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Index Max" The second index pattern is required to specify a range with conditions "In range".

Remote command:
TRIGger<t>:TBTO:DATA:ICONdition on page 2191
TRIGger<t>:TBTO:DATA:IMIN on page 2192
TRIGger<t>:TBTO:DATA:IMAX on page 2192

Errors
Sets the type of error events to be triggered on.

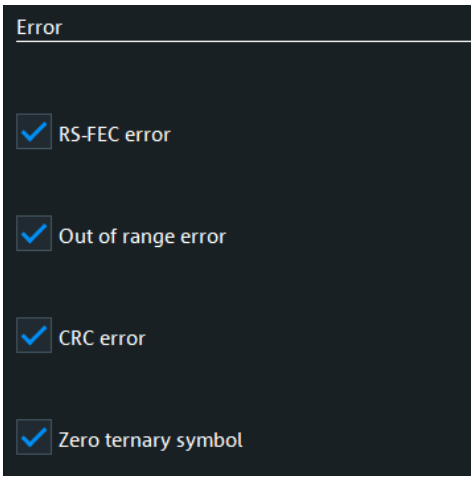

RS-FEC error ← Errors
Triggers, if more than 22 RS-FEC errors are detected.

Remote command:
TRIGger<t>:TBTO:ERRor:FEC on page 2193

CRC error ← Errors
Triggers on a frame that has a mismatch of the cyclic redundancy check (CRC) value between the transmitting and receiving device.

Remote command:
TRIGger<t>:TBTO:ERRor:CRC on page 2192

Out of range error ← Errors
Triggers if values are out of range. This can be, for example a preamble error, or invalid symbols in control blocks.

Remote command:
TRIGger<t>:TBTO:ERRor:OOR on page 2193

Zero terrnary symbol ← Errors
Triggers, if a zero ternary symbol pair (0-0) is detected.

Remote command:
TRIGger<t>:TBTO:ERRor:ZERO on page 2193

14.14.3.2 Triggering on 1000BASE-T1

Prerequisite: A bus is configured for the 1000BASE-T1 signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to 1000BASE-T1.
5. Tap "Type" and select the trigger type to be used for 1000BASE-T1 protocol analysis.
6. To refine the trigger settings, configure additional settings, which are available for some trigger types.

For details, see Section 14.14.3, "1000BASE-T1 trigger", on page 748.

14.14.4 1000BASE-T1 decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".
2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show binary".
3. If required, enable "Zoom coupling"


For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The example shows decoded signals in 1000BASE-T1.

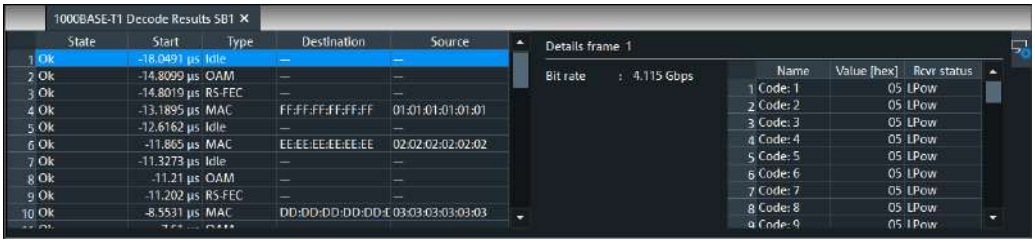

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

Table 14-21: Content of the Decode results table

Column	Description
Frame	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame
Source	Source address of the frame

Table 14-22: Content of the Details frame table

Column	Description
Bit rate	Value of the bit rate
Name	State of the field
Value [hex]	Hexadecimal value of the field
Rcvr status	Receiver status

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.15, "Ethernet 1000BASE-T1 (option R&S RTP-K58)", on page 2177.

14.14.5 Search on decoded 1000BASE-T1 data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.


To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

14.14.5.1 1000BASE-T1 search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

Search criteria
Use the "Search criteria" dialog to define the event types to be searched.

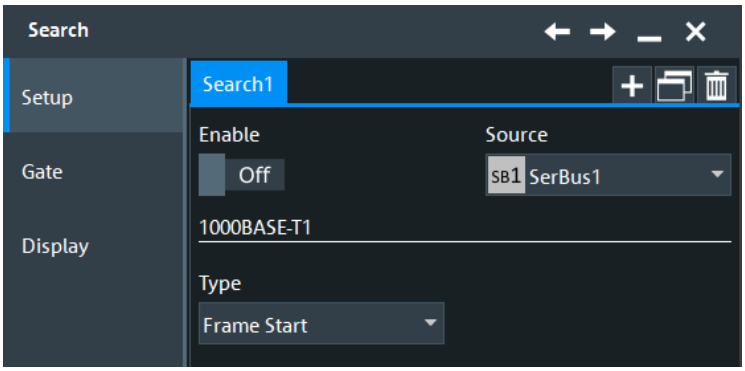


Type
Selects the search type for 1000BASE-T1 analysis.

Remote command:
`SEARch:TRIGger:TBTO:TYPE` on page 2204

Frame Start ← Type
Searches for the start of frame.

MAC Frame ← Type
Searches for a Media Access Control (MAC) frame that matches the specified Destination address, Source address, Length/Type, Frame check, Data or Index condition.

The frame contains addresses of the devices and MAC control information that define how to go about transmitting and receiving frames.

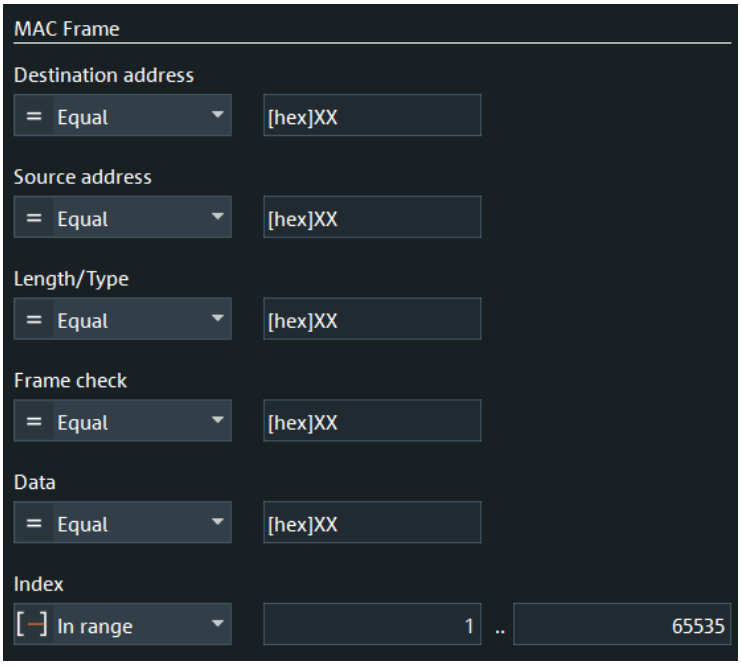

IDLE ← Type
Searches for an idle frame. The frame is used for clock synchronization.

Error ← Type
Searches for the specified error frame.

Destination address
Sets the specified destination address to be searched for. The destination address setup consists of the condition and one or two data patterns.

The destination address corresponds to the address of the interface in the device that receives the frame. If the destination address does not match the interface's own Ethernet address, then the interface is free to ignore the rest of the frame.

"Condition" Defines the operator to set a specific destination address, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the destination address pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:TBTO:DADDress:CONDition` on page 2197
`SEARch:TRIGger:TBTO:DADDress:MIN` on page 2198
`SEARch:TRIGger:TBTO:DADDress:MAX` on page 2198

Source address
Sets the specified source address to be searched for. The source address setup consists of the condition and one or two data patterns.

The source address is the physical address of the device that sends the frame.

"Condition" Defines the operator to set a specific source address, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the source address pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:TBTO:SADDress:CONDition` on page 2203
`SEARch:TRIGger:TBTO:SADDress:MIN` on page 2203
`SEARch:TRIGger:TBTO:SADDress:MAX` on page 2203

Length/Type
Sets the specified Length/Type to be searched for. The Length/Type setup consists of the condition and one or two data patterns.

The value in this field indicates the manner in which the field is being used, either as a length or type field. As a length field, the value in the field indicates the number of logical link control (LLC) data octets that follow in the data field of the frame. As a type field, the value in the field is used to indicate the type of protocol data being carried in the data field of the frame.

"Condition" Defines the operator to set a specific Length/Type, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the Length/Type pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:TBTO:LENGth:CONDition` on page 2202
`SEARch:TRIGger:TBTO:LENGth:MIN` on page 2202
`SEARch:TRIGger:TBTO:LENGth:MAX` on page 2202

Frame check
Sets the specified frame check to be searched for. The frame check setup consists of the condition and one or two data patterns.

This field contains a value that is used to check the integrity of the various bits in the frame fields (excluding the preamble / SFD).

"Condition" Defines the operator to set a specific frame check, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the frame check pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:TBTO:CRC:CONDition` on page 2196
`SEARch:TRIGger:TBTO:CRC:MIN` on page 2197
`SEARch:TRIGger:TBTO:CRC:MAX` on page 2197

Data
Sets the specified data to be searched for. The data setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the data pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:TBTO:DATA:DCONdition` on page 2198
`SEARch:TRIGger:TBTO:DATA:DMIN` on page 2199
`SEARch:TRIGger:TBTO:DATA:DMAX` on page 2199

Index
Sets the specified value or range within this series of data that is considered for the search. The index setup consists of the condition and one or two index values.

"Condition" Defines the operator to set a specific index, e.g. "Equal" or a range.


"Index Min/Index"
Defines the bit pattern of the index pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Index Max" The second index pattern is required to specify a range with conditions "In range".

Remote command:
SEARch:TRIGger:TBTO:DATA:ICONdition on page 2199
SEARch:TRIGger:TBTO:DATA:IMIN on page 2200
SEARch:TRIGger:TBTO:DATA:IMAX on page 2200

Errors
Sets the type of error events to be searched for.

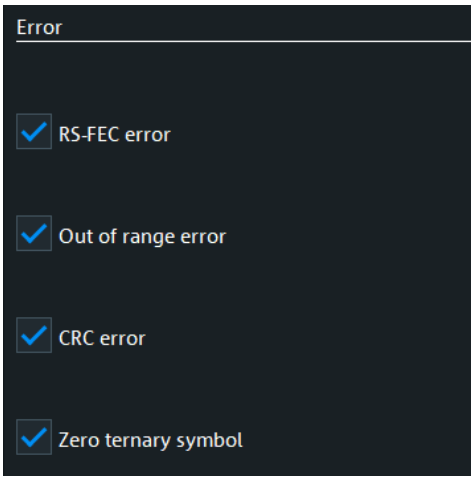

RS-FEC error ← Errors
Searches for RS-FEC errors.

Remote command:
SEARch:TRIGger:TBTO:ERRor:FEC on page 2201

CRC error ← Errors
Searches for a frame that has a mismatch of the Cyclic Redundancy Check (CRC) value between the transmitting and receiving device.

Remote command:
SEARch:TRIGger:TBTO:ERRor:CRC on page 2200

Out of range error ← Errors
Searches for values that are out of range. This can be, for example a preamble error, or invalid symbols in control blocks.

Remote command:
SEARch:TRIGger:TBTO:ERRor:OOR on page 2201

Zero terrnary symbol ← Errors
Searches for zero ternary symbol pairs (0-0).

Remote command:
SEARch:TRIGger:TBTO:ERRor:ZERO on page 2201

14.14.5.2 1000BASE-T1 search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- `SEARch:RESult:TBTO:FCOunt?` on page 2205
- `SEARch:RESult:TBTO:FRAMe<fr>:TYPE?` on page 2209
- `SEARch:RESult:TBTO:FRAMe<fr>:STATe?` on page 2208
- `SEARch:RESult:TBTO:FRAMe<fr>:STARt?` on page 2208
- `SEARch:RESult:TBTO:FRAMe<fr>:STOP?` on page 2208
- `SEARch:RESult:TBTO:FRAMe<fr>:DESTaddress?` on page 2205
- `SEARch:RESult:TBTO:FRAMe<fr>:SRCaddress?` on page 2207
- `SEARch:RESult:TBTO:FRAMe<fr>:DATA?` on page 2205
- `SEARch:RESult:TBTO:FRAMe<fr>:CRC?` on page 2205
- `SEARch:RESult:TBTO:FRAMe<fr>:NUMWords?` on page 2207
- `SEARch:RESult:TBTO:FRAMe<fr>:FTYPe?` on page 2206
- `SEARch:RESult:TBTO:FRAMe<fr>:DSYMbol?` on page 2206
- `SEARch:RESult:TBTO:FRAMe<fr>:SSYMbol?` on page 2207
- `SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:TYPE?` on page 2209
- `SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:VALue?` on page 2209
- `SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:VSTR?` on page 2210

14.14.5.3 Searching 1000BASE-T1 data

Prerequisite: A serial bus is configured for the 1000BASE-T1 signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to 1000BASE-T1 (e.g. "SB1", unless already selected).

   The search dialog for 1000BASE-T1 protocol analysis opens.

5. Specify search criteria according to Section 14.14.5, "Search on decoded 1000BASE-T1 data", on page 755.
6. To acquire a waveform, press [Single].

   The R&S RTP performs an 1000BASE-T1 decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog.

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.15 RFFE (option R&S RTP-K40)

Radio Frequency Front-End (RFFE) control interface is a serial interface specified by the Mobile Industry Processor Interface (MIPI) alliance. The RFFE interface is designed to control RF front-end components in mobile terminals.

14.15.1 The RFFE protocol

The RFFE interface is specified in the "MIPI® Alliance Specification for RF Front-End Control Interface". The RFFE interface is used by the radio frequency front-end interface chips in most LTE-Advanced platforms and in smart phones in general. RFFE is a replacement for existing standards like SPI and I²C that do no meet performance requirements.

Bus structure

RFFE is a two-wire, serial interface that connects up to 4 main devices (Radio Frequency IC, RFIC) to up to 15 sub devices (front-end modules, FEM) on a single RFFE bus. A sub device has read-write capability, or it is write only. Only one of the main devices is the active main device (bus owner main device, BOM), which can initiate command sequences on the bus.

The interface has two lines: one clock signal (SCLK) controlled by the main device, and a serial bidirectional data signal (SDATA). Furthermore, a VIO supply/reference voltage from a common source is applied to all components on the bus.

Command sequences

Protocol messages are called command sequences in RFFE. The standard defines various command sequences to accomplish read and write access to sub devices and to non-active main devices. Command sequences are initiated by the BOM main device on the SDATA line.

In general, a command sequence consists of:

- Sequence start condition (SSC)
  Two bits: 1 followed by 0 on SDATA while SCLK is at logic level zero.
- Command frame
  Consist of a 4-bit sub device address field (SA), followed by 8 command payload bits and a single parity bit.
- Address and/or data frames, depending on the command sequence
  A frame consists of 8 data bits or 8 register address bits, followed by a single parity bit. The number of address and data frames varies depending on the command sequence type.
- Bus park cycle (BP)
  A BP cycle is sent at the end of a command sequence, and when the device transfers control of SDATA to another device.

Between the end of a command sequence and the beginning of a new command sequence, the bus is in idle condition at least for 10 ns.

The bits are sent MSB first.

SSC	Command frame		Address and data frames		BP
	SA	Command payload	[Address frames]	[Data frames]	
	4 bits	8 bits + P	8 bits + P	8 bits + P	

Figure 14-17: General structure of a RFFE Write command sequence

SSC	Command frame		Address and data frames			BP
	SA	Command payload	[Address frames]	BP	[Data frames]	
	4 bits	8 bits + P	8 bits + P		8 bits + P	

Figure 14-18: General structure of a RFFE Read command sequence

Trigger

The R&S RTP uses a hardware-based trigger to trigger on various parts of sub device messages, to trigger at maximum bus speed and on frame gaps. The data and clock lines must be connected to the input channels. Triggering on math and reference waveforms is not possible.

You can trigger on:

- Start of command sequence (SSC). In addition, you can specify a sub device address.
- End of command sequence). In addition, you can specify a sub device address.
- Various errors, for example, parity and bus park error
- Read and write command sequences between the BOM and the sub devices.

Within a command sequence, you can trigger on specific parts of the message:

– Sub deviceaddress
– Byte count
– Register address
– Data word

Search


Using the search functionality, you can find various events in the acquired and decoded data. You can find the same events which you also can trigger on. In addition, you can find command sequences of main device-to main device communication and "interrupt summary and identification" command sequences.

14.15.2 RFFE configuration

14.15.2.1 RFFE configuration settings

Access: [Bus] > "RFFE" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

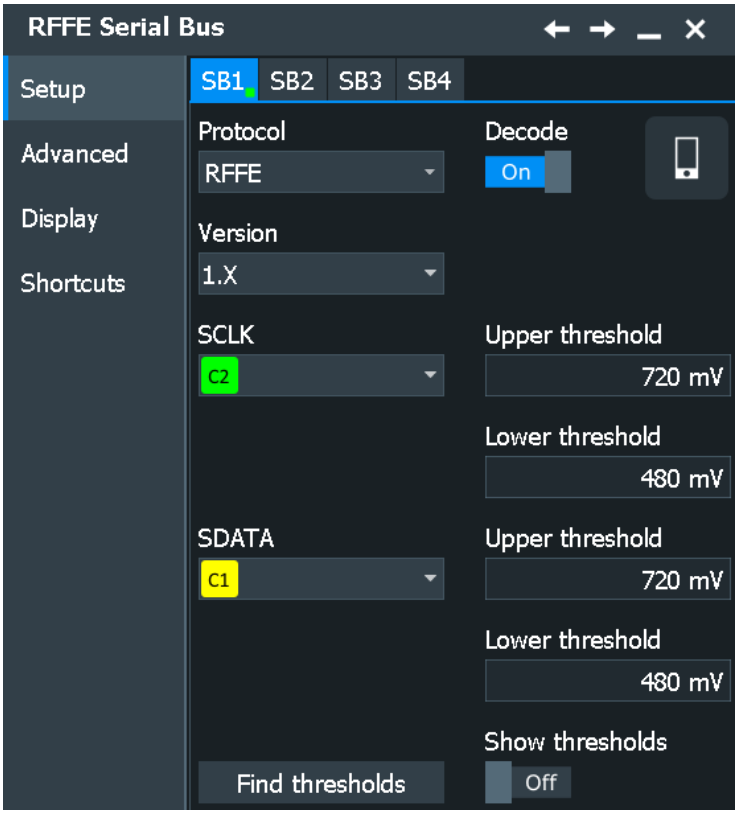

See also: Section 14.1.1, "Setup - general settings", on page 556

Version
Selects the RFFE version. Supported are 1.x, 2.0, 2.1 and 3.0/3.1.

Remote command:
BUS<b>:RFFE:VERSion on page 2214

Read mode
Selects, if the standard or synchronous read ("sRead") mode is used. Available for "Version" = 2.0/2.1.

Remote command:
BUS<b>:RFFE:RDMD on page 2214

SCLK Source
Sets the source of the clock line.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
BUS<b>:RFFE:CLOCk:SOURce on page 2211

SDATA Source
Sets the source of the data line.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
BUS<b>:RFFE:DATA:SOURce on page 2211

Thresholds
Set the threshold values for digitization of signals for each line: the positive going threshold (V_{TP}, upper value), the negative going threshold (V_{TN}, lower value), and the hysteresis. The hysteresis is the difference of V_{TP} and V_{TN}.

If the signal value on the line is higher than the positive going threshold, the signal state is high. Otherwise, the signal state is considered low if the signal value is below the negative going threshold.

There are several ways to set the thresholds

"Threshold" Enter the value directly in the field.

"Find thresholds" Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.


Remote command:
BUS<b>:RFFE:CLOCk:THReshold:HIGH on page 2212
BUS<b>:RFFE:CLOCk:THReshold:LOW on page 2213
BUS<b>:RFFE:DATA:THReshold:HIGH on page 2212
BUS<b>:RFFE:DATA:THReshold:LOW on page 2212
BUS<b>:SETReflevels on page 1834
BUS<b>:FAUToset on page 1834

Show thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
BUS<b>:THReshold on page 1835

14.15.2.2 Advanced settings

Access: [Bus] > "Advanced" tab.

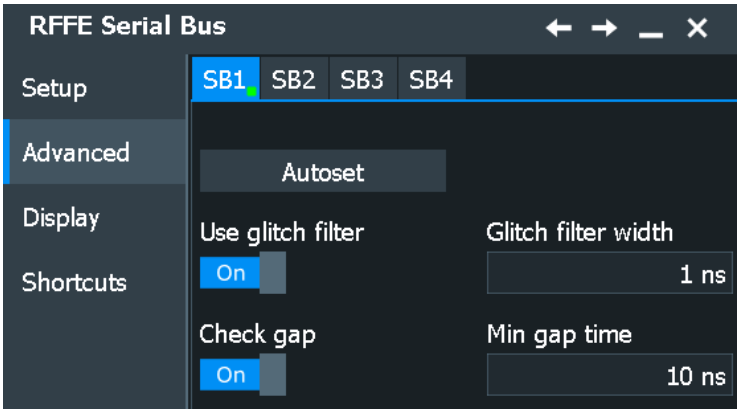

Autoset
Starts software algorithms for determining the signal threshold levels and bitrate.

Remote command:
BUS<b>:FAUToset on page 1834

Glitch filter
Enables the glitch filter on the SCLK and SDATA lines to improve decode accuracy.

The "Glitch filter width" field sets the maximum glitch width to be ignored.

Remote command:
BUS<b>:RFFE:GFILter on page 2213
BUS<b>:RFFE:GFWidth on page 2213

Timing
The gap defines the idle time between the Bus Park Cycle (BP) and Sequence Start Condition (SSC).

You can define a "Min gap time". The standard defines a minimum of 10 ns to separate two subsequent command sequences.

Remote command:
`BUS<b>:RFFE:MINGap:SELect` on page 2213
`BUS<b>:RFFE:MINGap:TIME` on page 2214

14.15.2.3 Configuring RFFE signals


For details on configuration settings, see Section 14.15.2.1, "RFFE configuration settings", on page 764.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "RFFE".
4. Select the RFFE "Version".
5. Select the "Read mode".
6. Tap "SCLK", and select the waveform of the clock line.
7. Tap "SDATA", and select the waveform of the data line.
8. Set the logical thresholds.
9. If the signal has glitches which can distort the decoding, enable the glitch filter. Set the glitch width.
10. Enable "Decode".

14.15.3 RFFE trigger

14.15.3.1 RFFE trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

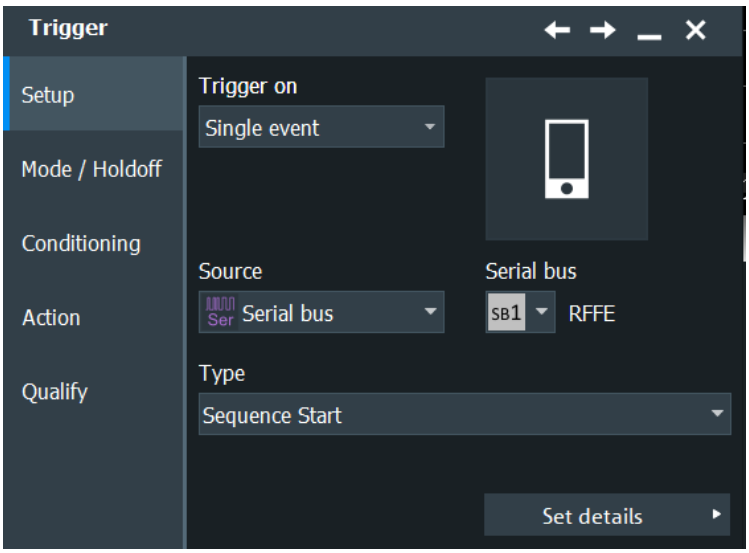

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Type
Selects the trigger type for RFFE analysis.

The instrument triggers always at the end of the met trigger criteria.

Remote command:
`TRIGger<t>:RFFE:TYPE` on page 2215

Sequence Start ← Type
Triggers on the beginning of a command sequence, after the sub device address. The SSC is a 1 followed by 0 on SDATA line while SCLK is at logic level zero.

Optionally, you can specify a sub device address pattern or a sub device address range to trigger only on command sequences that are sent to these sub devices.

See: "Sub device addr. /MID" on page 773.

Sequence Stop ← Type
Triggers on the end of a command sequence, on the bus park cycle.

Optionally, you can specify a sub device address pattern or a sub device address range to trigger only on command sequences that are sent to these sub devices.

See: "Sub device addr. /MID" on page 773.

Register 0 Write ← Type
Triggers on "Register 0 Write" command sequences. This sequence sends 7 data bits in the command payload.

You can refine the trigger condition:
- Set a sub device address condition to trigger only on command sequences that are sent to the specified sub devices.
  See: "Sub device addr. /MID" on page 773.
- Set a data pattern condition to trigger on data patterns expected in the message.
  See: "Data" on page 774.

Register Write ← Type
Triggers on "Register Write" command sequences. This sequence sends the register address in the command payload, and sends one data frame.

You can refine the trigger condition:
- Set a sub device address condition to trigger only on command sequences that are sent to the specified sub devices.
  See: "Sub device addr. /MID" on page 773.
- Set a register address condition to trigger only on command sequences that write data to the specified register.
  See: "Address" on page 773.
- Set a data pattern condition to trigger on data patterns expected in the message.
  See: "Data" on page 774.

Register Read ← Type
Triggers on "Register Read" command sequences. This sequence sends the register address in the command payload, and reads back one data frame.

You can refine the trigger condition using the same settings as for the "Register Write" command sequence, see "Register Write" on page 769.

Extended Register Write ← Type
Triggers on "Extended Register Write" command sequences. This sequence sends the byte count of data frames in the command payload, followed by one address frame with the address of the first extended register, and up to 16 data frames.

You can refine the trigger condition:
- Set a sub device address condition to trigger only on command sequences that are sent to the specified sub devices.
  See: "Sub device addr. /MID" on page 773
- Set a byte count condition to trigger only on command sequences that send the specified number of data frames.
  See: "Byte count" on page 773
- Set a register address condition to trigger only on command sequences that write data to the specified register.
  See: "Address" on page 773
- Set a data pattern condition to trigger on data patterns expected in the message.
  See: "Data" on page 774 and "Index" on page 774

Extended Register Read ← Type
Triggers on "Extended Register Read" command sequences. This sequence sends the byte count of data frames in the command payload, followed by one address frame with the address of the first extended register, and reads back up to 16 data frames.

You can refine the trigger condition using the same settings as for the "Extended Register Write" command sequence, see "Extended Register Write" on page 769.

Extended Register Write Long ← Type
Triggers on "Extended Register Write" command sequences. This sequence sends the byte count of data frames in the command payload, followed by 2 address frames with the address of the first extended register, and up to 8 data frames.

You can refine the trigger condition using the same settings as for the "Extended Register Write" command sequence, see "Extended Register Write" on page 769.

Extended Register Read Long ← Type
Triggers on "Extended Register Write" command sequences. This sequence sends the byte count of data frames in the command payload, followed by 2 address frames with the address of the first extended register, and reads back up to 8 data frames.

You can refine the trigger condition using the same settings as for the "Extended Register Write" command sequence, see "Extended Register Write" on page 769.

Interrupt Summary and Notification ← Type
Available only for "Version"= "2.0"/"2.1".

Triggers on "Interrupt Summary and Notification" command sequence.

You can refine the trigger condition:
- Set a sub device address condition to trigger only on command sequences that are sent to the specified MIDs.
  See: "Sub device addr. /MID" on page 773
- Set a bit count condition to trigger only on command sequences that send the specified number of data frames.
  See: "Byte count" on page 773
- Set a data pattern condition to trigger on data patterns expected in the message.
  See: "Data" on page 774

Masked Write ← Type
Available only for "Version"= "2.1".

Triggers on "Masked Write" command sequences. This sequence sends the register address in the command payload, and sends one mask and one data frame.

You can refine the trigger condition:
- Set a sub device address condition to trigger only on command sequences that are sent to the specified MIDs.
  See: "Sub device addr. /MID" on page 773.
- Set a register address condition to trigger only on command sequences that write data to the specified register.
  See: "Address" on page 773.
- Set a mask pattern condition to trigger on a mask expected in the message.
  See: "Mask" on page 774.
- Set a data pattern condition to trigger on data patterns expected in the message.

See: "Data" on page 774.

Main Ownership Handover ← Type
Available only for "Version"= "2.0"/"2.1".

Triggers on "Main Ownership Handover" command sequences.

Optionally, you can specify an MID pattern or an MID range to trigger only on command sequences that are sent to these sub devices.

Main Device Write ← Type
Available only for "Version"= "2.0"/"2.1".

Triggers on "Main Device Write" command sequences. This sequence sends the register address in the command payload, and sends two data frames.

You can refine the trigger condition:
- Set a MID condition to trigger only on command sequences that are sent to the specified MIDs.
  See: "Sub device addr. /MID" on page 773.
- Set a register address condition to trigger only on command sequences that write data to the specified register.
  See: "Address" on page 773.
- Set a data pattern condition to trigger on data patterns expected in the message.
  See: "Data" on page 774.

Main Device Read ← Type
Available only for "Version"= "2.0"/"2.1".

Triggers on "Main Device Read" command sequences. This sequence sends the register address in the command payload, and reads two data frames.

You can refine the trigger condition:
- Set a MID condition to trigger only on command sequences that are sent to the specified MIDs.
  See: "Sub device addr. /MID" on page 773.
- Set a register address condition to trigger only on command sequences that write data to the specified register.
  See: "Address" on page 773.
- Set a data pattern condition to trigger on data patterns expected in the message.
  See: "Data" on page 774.

Main Device Context Transfer Write ← Type
Available only for "Version"= "2.1".

Triggers on "Main Device Context Transfer Write" command sequences.

You can refine the trigger condition:
- Set an MID condition to trigger only on command sequences that are sent to the specified MIDs.
  See: "Sub device addr. /MID" on page 773
- Set a byte count condition to trigger only on command sequences that send the specified number of data frames.
  See: "Byte count" on page 773

- Set a register address condition to trigger only on command sequences that write data to the specified register.
  See: "Address" on page 773
- Set a data pattern condition to trigger on data patterns expected in the message.
  See: "Data" on page 774 and "Index" on page 774

Main Device Context Transfer Read ← Type
Available only for "Version"= "2.1"/ "3.0/3.1".

Triggers on "Main Device Context Transfer Read" command sequences.

You can refine the trigger condition:
- Set an MID condition to trigger only on command sequences that are sent to the specified MIDs.
  See: "Sub device addr. /MID" on page 773
- Set a byte count condition to trigger only on command sequences that send the specified number of data frames.
  See: "Byte count" on page 773
- Set a register address condition to trigger only on command sequences that write data to the specified register.
  See: "Address" on page 773
- Set a data pattern condition to trigger on data patterns expected in the message.
  See: "Data" on page 774 and "Index" on page 774

Error conditions ← Type
Triggers if at least one of the selected errors occurs in a frame. The instrument triggers on the first detected error.

"SSC error" Triggers when no valid SSC sequence has been found after the idle time. The instrument triggers at the invalid sequence.

"Length error" Triggers on an incorrect length of the command sequence - when additional or missing bits are detected and the sequence of bits is not as expected.

"No response" Triggers on any No Response Frame. All 9 bits of a No Response Frame, including the parity bit, are zero.

"Bus park error"
Triggers on an incorrect bus park cycle - when the instrument expects a low bit in bus park but detects high bit.

"Parity error" Triggers on incorrect parity bits.

"Unknown sequence"
Triggers when the instrument cannot detect any supported command sequence.

"Gap error" Triggers when timing gap error occurs.

"Version error" Triggers on any version errors.

Remote command:
`TRIGger<t>:RFFE:ERRor:SSC` on page 2225
`TRIGger<t>:RFFE:ERRor:LENGth` on page 2224
`TRIGger<t>:RFFE:ERRor:BP` on page 2224
`TRIGger<t>:RFFE:ERRor:PARity` on page 2225

TRIGger<t>:RFFE:ERRor:NOResponse on page 2224
TRIGger<t>:RFFE:ERRor:USEQuence on page 2225

Sub device addr. /MID
Defines the address of the sub device / main ID. The sub device address setup consists of the condition and one or two address patterns.

"Condition" Sets the operator to trigger on a specific address pattern ("Equal" or "Not equal") or an address range.

"Sub device address (Min)" Defines the sub device address pattern for all operators that require one pattern.

"Sub device address (Max)" Defines the second address pattern that is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:RFFE:SADDress:CONDition on page 2222
TRIGger<t>:RFFE:SADDress:MIN on page 2222
TRIGger<t>:RFFE:SADDress:MAX on page 2223

Address
Defines the register address. The register address setup consists of the condition and one or two address patterns.

"Condition" Sets the operator to trigger on a specific address pattern ("Equal" or "Not equal") or an address range.

"Address (Min)" Defines the register address pattern for all operators that require one pattern.

"Adress (Max)" Defines the second address pattern that is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:RFFE:ADDRess:CONDition on page 2218
TRIGger<t>:RFFE:ADDRess:MIN on page 2218
TRIGger<t>:RFFE:ADDRess:MAX on page 2219

Byte count
Sets the number of data frames to be read or written in the command sequence.
The setting is available for all "Extended Register" command sequences, which can transfer more than one data frame.

"Condition" Sets the operator to trigger on a specific byte count ("Equal" or "Not equal") or a byte count range.

"Byte/Bit count (Min)" Defines the byte count for all operators that require one count setting.

"Byte/Bit count (Max)" Defines the second byte count value that is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:RFFE:BCOunt:CONDition on page 2219
TRIGger<t>:RFFE:BCOunt:MIN on page 2219
TRIGger<t>:RFFE:BCOunt:MAX on page 2220

Data
Defines the data trigger condition. The data setup consists of the condition and one or two data patterns.

To define on which data frames of the sequence you want to trigger, use the Index settings.

"Condition" Sets the operator to trigger on a specific data pattern ("Equal" or "Not equal") or a data range.

"Data (Min)" Defines the data pattern for all operators that require one pattern.

"Data (Max)" Defines the second data pattern that is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:RFFE:DATA:DCON` on page 2220
`TRIGger<t>:RFFE:DATA:DMIN` on page 2220
`TRIGger<t>:RFFE:DATA:DMAX` on page 2221

Index
Defines which data frames are relevant for the trigger. The setting is available for all "Extended Register" command sequences, which can transfer more than one data frame.

The index allows you to check for a certain bit pattern at a certain position in the byte sequence. Furthermore, you can trigger on the occurrence of a certain bit pattern within a data range.

To trigger on any data byte that fulfills the data pattern settings, set the index to XX.

"Condition" Sets the operator to trigger on a specific data frame ("Equal") or a data frame range.

"Data (Min)" Defines the frame index of the data pattern for all operators that require one index.

"Data (Max)" Defines the frame index of the last data pattern that is required to specify a range with condition "In range". The instrument adjusts this value, if you enter a data pattern that is longer than the index range.

Remote command:
`TRIGger<t>:RFFE:DATA:ICONdition` on page 2221
`TRIGger<t>:RFFE:DATA:IMIN` on page 2221
`TRIGger<t>:RFFE:DATA:IMAX` on page 2222

Mask
Defines the mask trigger condition. The mask setup consists of the condition and one or two data patterns.The setting is available for "Masked Write" command sequences.

"Condition" Sets the operator to trigger on a specific mask frame ("Equal") or a mask frame range.

"Mask (Min)" Defines the mask pattern for all operators that require one pattern.

"Mask (Max)" Defines the second mask pattern that is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:RFFE:MASK:CONDition on page 2223
TRIGger<t>:RFFE:MASK:MIN on page 2224
TRIGger<t>:RFFE:MASK:MAX on page 2223

14.15.3.2 Triggering on RFFE signals

Prerequisites: An RFFE bus is configured, see Section 14.15.2, "RFFE configuration", on page 764, and "Decode" is enabled.

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Tap "Serial bus" and select the serial bus that is set to RFFE.
5. Select the "Trigger type".
6. To refine the trigger settings, configure additional settings, which are available for many trigger types.
   For details, see Section 14.15.3.1, "RFFE trigger settings", on page 767.

14.15.4 RFFE label list

Label lists are protocol-specific. A label list file for RFFE contains sub device addresses and/or register addresses and their symbolic names:

- "SA": sub device address (SID in the labal list file)
- Address: register address.
- "Symbolic label": symbolic name as combination of the sub device name (SID text) and the address name (Address text), specifying the device function

Example: RFFE label list file

```
# Labels for RFFE protocol
#   Column order: SID, SID text, Address, Address text
# ------------------------------------------------------------------------------
@PROTOCOL_NAME = rffe
0x01,LM8335
0x01,LM8335,0x00,CMTL_REG
0x01,LM8335,0x01,GPO_PULL_DIR
0x01,LM8335,0x02,GPO_PULL_ENABLE
0x01,LM8335,0x03,GPO_OUT_HIGH_CFG
0x01,LM8335,0x04,GPO_OUT_MASK
0x01,LM8335,0x05,GPO_OUT_DATA
0x01,LM8335,0x1C,PM_TRIG
0x01,LM8335,0x1D,PROD_ID
0x01,LM8335,0x1E,MAN_ID
0x01,LM8335,0x1F,USID_REG
0x05,LM3279
0x05,LM3279,0x00,VSET_CTRL
0x05,LM3279,0x01,STATE_CTRL
0x05,LM3279,0x02,GPO_CTRL
0x05,LM3279,0x1C,PM_TRIG
0x05,LM3279,0x1D,PROD_ID
0x05,LM3279,0x1E,MAN_ID
0x05,LM3279,0x1F,USID_REG
0x0A,Test
```

See also: Section 14.1.4, "Content and format of the PTT file", on page 560.

Remote command:

- `BUS<b>:RFFE:SEQuence<se>:SYMBol?` on page 2229

14.15.5 RFFE decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

Table 14-23: Content of the Decode results table

Column	Description
State	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of command sequence start (SSC)
Type	Type of the command sequence

Table 14-24: Content of the Details frame table

Column	Description
Label	Symbolic name of the address if a label list is applied.
SA /MID	Address of the SA/ MID
Address	Register address (hex value)
BC	Byte count (decimal value)
Write bit rate	Value of the write bit rate
Parity control	Checks if there an error in the parity
Parity address 0/1	Checks if there an error in the parity address
Read bit rate	Value of the read bit rate
Name	Type of the command sequence
State	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Value	Values of the data bytes.

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands to retrieve decode results are described in Section 26.18.16.3, "Decode results", on page 2226.

14.15.6 Search on decoded RFFE data


Using the search functionality, you can find various events in the decoded data, the same events which you also can trigger on. Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search "Source" to the serial bus that is configured for the protocol to be analyzed.

See also Section 11, "Search functions", on page 463.

14.15.6.1 RFFE search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

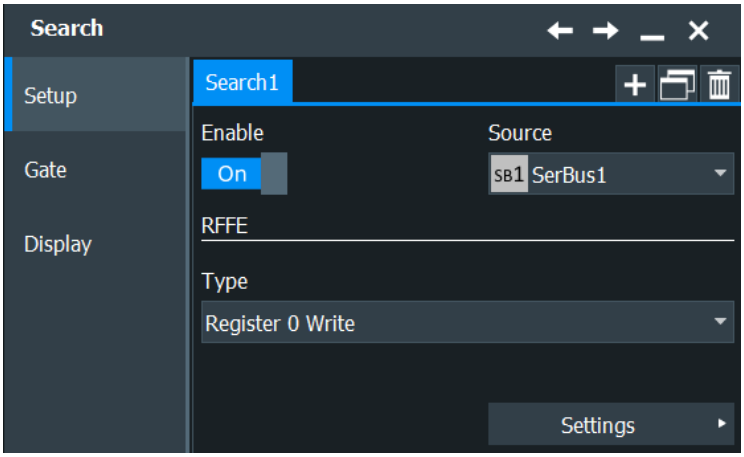

Type
The search criterion is defined by "Type". All trigger types are also available for search.

Additional search parameters are provided under "Detailed Search Parameter Setup".

For details, see also "Type" on page 768.

"Sequence Start"
Searches for SSC.
Additional search parameter: "Sub device addr." on page 780

"Sequence Stop"
Searches for bus park at the end of a command sequence.
Additional search parameter: "Sub device addr." on page 780

"Register 0 Write"
Searches for Register 0 Write command sequences. Additional search parameters:

- Sub device address, see "Sub device addr." on page 780.
- Data pattern, see "Data" on page 781

"Register Write"
Searches for Register Write command sequences. Additional search parameters:
- Sub device address, see "Sub device addr." on page 780
- Register address, see "Address" on page 780
- Data pattern, see "Data" on page 781

"Register Read"
Searches for Register Read command sequences.
This search uses the same additional parameters as the Register Write search.

"Extended Register Write"
Searches for Extended Register Write command sequences. Additional search parameters:
- Sub device address, see "Sub device addr." on page 780
- Byte count, see "Byte count" on page 780
- Register address, see "Address" on page 780
- Data pattern, see "Data" on page 781 and "Index" on page 781

"Extended Register Read"
Searches for Extended Register Read command sequences.
This search uses the same additional parameters as the Extended Register Write search.

"Extended Register Write Long"
Searches for Extended Register Write Long command sequences.
This search uses the same additional parameters as the Extended Register Write search.

"Extended Register Read Long"
Searches for Extended Register Read Long command sequences.
This search uses the same additional parameters as the Extended Register Write search.

"Main device Read"
Searches for Main device Read command sequences. Additional search parameters:
- Address of the non-BOM main device, see "Sub device addr." on page 780.
- Register address, see "Address" on page 780.
- Data pattern that is returned by the non-BOM main device, see "Data" on page 781.

"Main device Write"
Searches for Main device Write command sequences. Additional search parameters:
- Address of the non-BOM main device, see "Sub device addr." on page 780
- Register address, see "Address" on page 780
- Data pattern to be written into the non-BOM, see "Data" on page 781.

"Main device Ownership Handover"
Searches for Main device Ownership Handover command sequences. Additional search parameters:
- Address of the BOM-to-be, see "Sub device addr." on page 780
- Data pattern of the confirmation sequence of the new BOM, see "Data" on page 781.

"Interrupt Summary and Notification"
Searches for interrupts. Additional search parameters:
- Sub device address, see "Sub device addr." on page 780
- Byte count, see "Byte count" on page 780
- Data of the interrupt identification sequence, see

"Error Condition"
Searches for the selected errors, see "Error conditions" on page 781.

Remote command:
`SEARch:TRIGger:RFFE:TYPE` on page 2233

Sub device addr.
Searches for a sub device address or a sub device address range.

In command sequences transferred between main devices, this is the non-BOM address.

The sub device address settings are the same as in the RFFE trigger setup, see "Sub device addr. /MID" on page 773.

Remote command:
`SEARch:TRIGger:RFFE:SADDress:CONDition` on page 2235
`SEARch:TRIGger:RFFE:SADDress:MIN` on page 2237
`SEARch:TRIGger:RFFE:SADDress:MAX` on page 2237

Byte count
Searches for a byte count or a byte count range.

The byte count settings are the same as in the RFFE trigger setup, see "Byte count" on page 773

Remote command:
`SEARch:TRIGger:RFFE:BCOunt:CONDition` on page 2236
`SEARch:TRIGger:RFFE:BCOunt:MIN` on page 2237
`SEARch:TRIGger:RFFE:BCOunt:MAX` on page 2237

Address
Searches for a register address or an address range.

The register address settings are the same as in the RFFE trigger setup, see "Address" on page 773.

Remote command:
`SEARch:TRIGger:RFFE:ADDRess:CONDition` on page 2235
`SEARch:TRIGger:RFFE:ADDRess:MIN` on page 2237
`SEARch:TRIGger:RFFE:ADDRess:MAX` on page 2237

Data
Searches for a data pattern or a data word range. The setting is available for all "Extended Register" command sequences, which can transfer more than one data frame.

The data settings are the same as in the RFFE trigger setup, see "Data" on page 774.

Remote command:
`SEARch:TRIGger:RFFE:DATA:DCON` on page 2236
`SEARch:TRIGger:RFFE:DATA:DMIN` on page 2237
`SEARch:TRIGger:RFFE:DATA:DMAX` on page 2237

Index
Defines which data frames are relevant for the search. The setting is available for all Extended Register command sequences, which can transfer more than one data frame. To search for any data byte that fulfills the data pattern settings, set the index to XX.

Remote command:
`SEARch:TRIGger:RFFE:DATA:ICONdition` on page 2236
`SEARch:TRIGger:RFFE:DATA:IMIN` on page 2237
`SEARch:TRIGger:RFFE:DATA:IMAX` on page 2237

Data
Defines the pattern of the interrupt identification sequence, which consists of interrupt slots 15 to 0. The setting is only available for "Interrupt Summary and Notification" command sequence.

Remote command:
`SEARch:TRIGger:RFFE:INTerrupt` on page 2238

Error conditions
Defines which error conditions are relevant for the search.

Remote command:
`SEARch:TRIGger:RFFE:ERRor:BP` on page 2238
`SEARch:TRIGger:RFFE:ERRor:LENGth` on page 2238
`SEARch:TRIGger:RFFE:ERRor:NOResponse` on page 2238
`SEARch:TRIGger:RFFE:ERRor:PARity` on page 2239
`SEARch:TRIGger:RFFE:ERRor:SSC` on page 2239
`SEARch:TRIGger:RFFE:ERRor:USEQuence` on page 2239

14.15.6.2 RFFE search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- SEARch:RESult:RFFE:FCOunt? on page 2241
- SEARch:RESult:RFFE:SEQuence<se>:TYPE? on page 2243
- SEARch:RESult:RFFE:SEQuence<se>:STATe? on page 2241
- SEARch:RESult:RFFE:SEQuence<se>:STARt? on page 2242
- SEARch:RESult:RFFE:SEQuence<se>:STOP? on page 2242
- SEARch:RESult:RFFE:SEQuence<se>:SADD? on page 2241
- SEARch:RESult:RFFE:SEQuence<se>:ADDRess? on page 2240
- SEARch:RESult:RFFE:SEQuence<se>:BCOunt? on page 2240
- SEARch:RESult:RFFE:SEQuence<se>:DATA? on page 2241
- SEARch:RESult:RFFE:SEQuence<se>:SYMBol? on page 2242
- SEARch:RESult:RFFE:SEQuence<se>:BYTE<n>:STATe? on page 2243
- SEARch:RESult:RFFE:SEQuence<se>:BYTE<n>:VALue? on page 2243

14.15.6.3 Searching RFFE data

Prerequisites: An RFFE bus is configured, see Section 14.15.2, "RFFE configuration", on page 764, and "Decode" is enabled.

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap the "Source" button and select the serial bus that is set to RFFE.

   "Protocol" shows the RFFE icon.
5. Tap "Type" and select the search type.
   All trigger types are also available for search.
6. To refine the search settings, configure additional settings, which are available for many search types.
   For details, see Section 14.15.6.1, "RFFE search setup", on page 778.
7. Under "Control", "Enable" the search.

   The "Search Results" box opens.
8. Close the "Search" dialog box.
9. Press [Run / Stop] to start acquisition.
10. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

    The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.16 D-PHY (option R&S RTP-K42)

The D-PHY is a specification developed by the Mobile Industry Processor Interface (MIPI) alliance as a standard for the communication of high-speed components, like cameras and displays, within mobile devices.

- D-PHY basics....783
- D-PHY configuration....783
- D-PHY trigger....788
- D-PHY decode results....794
- Search on decoded D-PHY data....795

14.16.1 D-PHY basics

A D-PHY interface consists of one clock lane and up to four data lanes. The D-PHY data lanes have two operational modes:

- A high speed mode (HS): differential signal with a data rate of 80 Mbps to 1.5GHz.This mode is used for the transmission of large volumes of information.
- A low power mode (LP): single-ended signal with a data rate < 10 Mbps. This mode is used for conserving power .


D-PHY provides a framework for other protocols such as the Display Serial Interface (DSI) and Camera Serial Interface (CSI-2).

14.16.2 D-PHY configuration

14.16.2.1 D-PHY configuration settings

Access: [Bus] > "Setup" tab > "Protocol = D-PHY"

Make sure that the tab of the correct serial bus is selected.

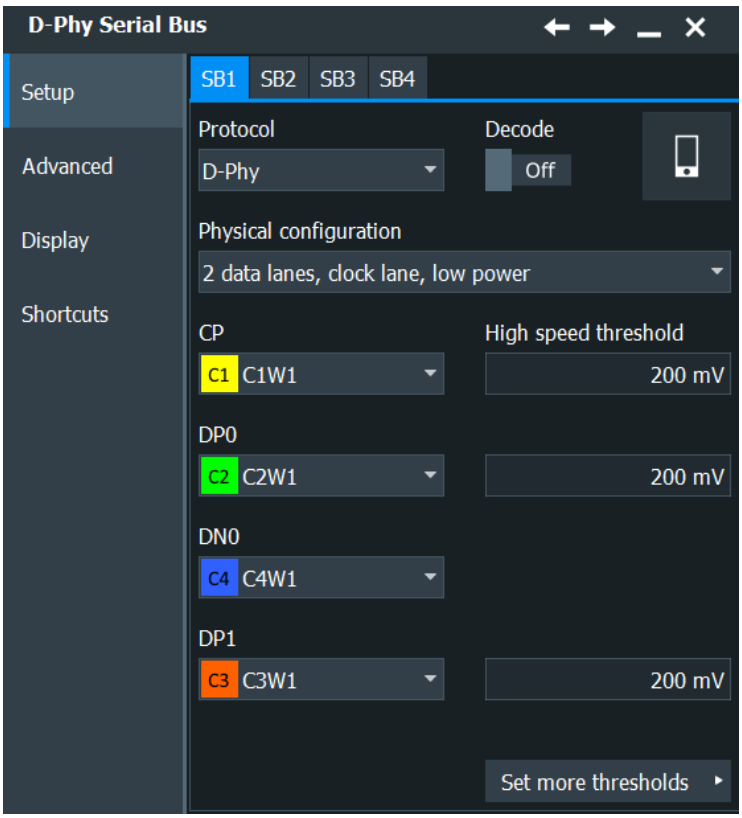

See also: Section 14.1.1, "Setup - general settings", on page 556

Physical configuration
Selects the number of data lanes and if the clock lane and low power are available.

Remote command:
`BUS<b>:DPHY:CONFig` on page 2244

CP
Sets the source of the clock lane.

Remote command:
`BUS<b>:DPHY:CP:SOURce` on page 2245

DP0/DN0
Selects the source of the low-power data lanes.

The "DP0" lane has to be present all the time, hence "Source DP0">"None" is not allowed.

Remote command:
`BUS<b>:DPHY:DPZero:SOURce` on page 2248
`BUS<b>:DPHY:DNZero:SOURce` on page 2248


DP1/DP2/DP3
Selects the source of the high-speed data lanes.

Remote command:
BUS<b>:DPHY:DPONe:SOURce on page 2248
BUS<b>:DPHY:DPTWo:SOURce on page 2248
BUS<b>:DPHY:DPTHree:SOURce on page 2248

High speed threshold
Sets the threshold value for the digitization of high-speed data line.

Remote command:
BUS<b>:DPHY:DPZero:HSPeed:THReshold on page 2249
BUS<b>:DPHY:DPONe:HSPeed:THReshold on page 2249
BUS<b>:DPHY:DPTWo:HSPeed:THReshold on page 2249
BUS<b>:DPHY:DPTHree:HSPeed:THReshold on page 2249

Set more thresholds
Opens a dialog to set the threshold values.

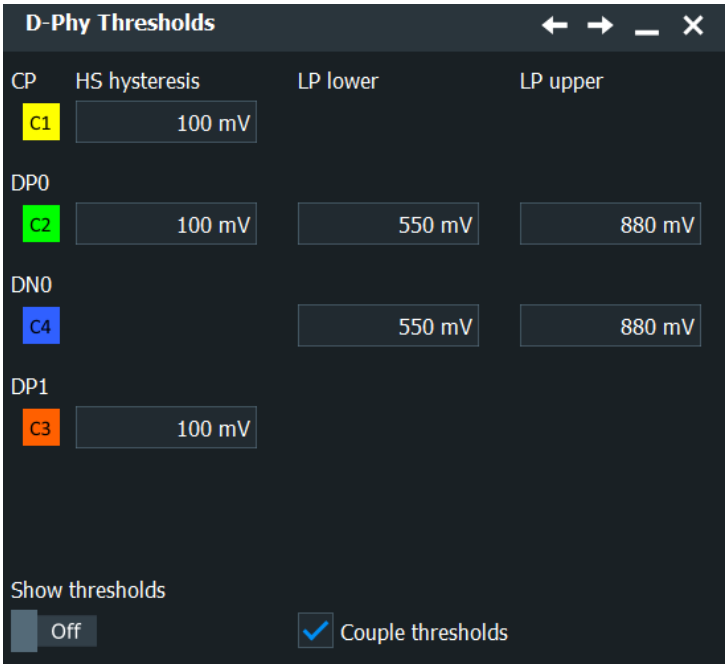

HS Hysteresis ← Set more thresholds
Sets a value for the hysteresis of the respective high-speed lane.

Remote command:
BUS<b>:DPHY:CP:HSPeed:HYSTeresis on page 2249
BUS<b>:DPHY:DPZero:HSPeed:HYSTeresis on page 2249
BUS<b>:DPHY:DPONe:HSPeed:HYSTeresis on page 2249
BUS<b>:DPHY:DPTWo:HSPeed:HYSTeresis on page 2249
BUS<b>:DPHY:DPTHree:HSPeed:HYSTeresis on page 2249

LP lower ← Set more thresholds
Sets the lower threshold value for the low-power lane.

Remote command:
BUS<b>:DPHY:DNZero:LPOWer:THLower on page 2247
BUS<b>:DPHY:DPZero:LPOWer:THLower on page 2247

LP upper ← Set more thresholds
Sets the upper threshold value for the low-power lane.


Remote command:
BUS<b>:DPHY:DNZero:LPOWer:THUPper on page 2247
BUS<b>:DPHY:DPZero:LPOWer:THUPper on page 2247

Couple thresholds ← Set more thresholds
Enables coupling, i.e. the same threshold and hysteresis value is used for all lanes.

Remote command:
BUS<b>:DPHY:THCoupling on page 2246

14.16.2.2 D-PHY advanced settings

Access: [Bus] > "Setup" tab > "Protocol = D-PHY" > "Advanced" tab

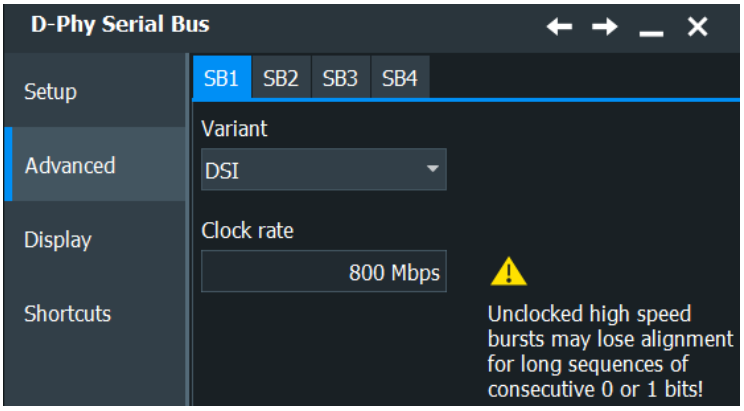

Variant
Selects the protocol running on the interface. You can select between the Display Serial Interface (DSI) and Camera Serial Interface (CSI-2).

Remote command:
BUS<b>:DPHY:VARiant on page 2247


Clock rate
Sets a data rate for unclocked D-PHY configurations.

Remote command:
BUS<b>:DPHY:DRATe on page 2246
BUS<b>:DPHY:DSPData on page 2246

14.16.2.3 Display settings

Access: [Bus] > "Setup" tab > "Protocol = D-PHY" > "Display" tab

To enhance the decode possibilities of the D-PHY protocol, you can use an additional setting in the "Display" tab: "Decode layer".

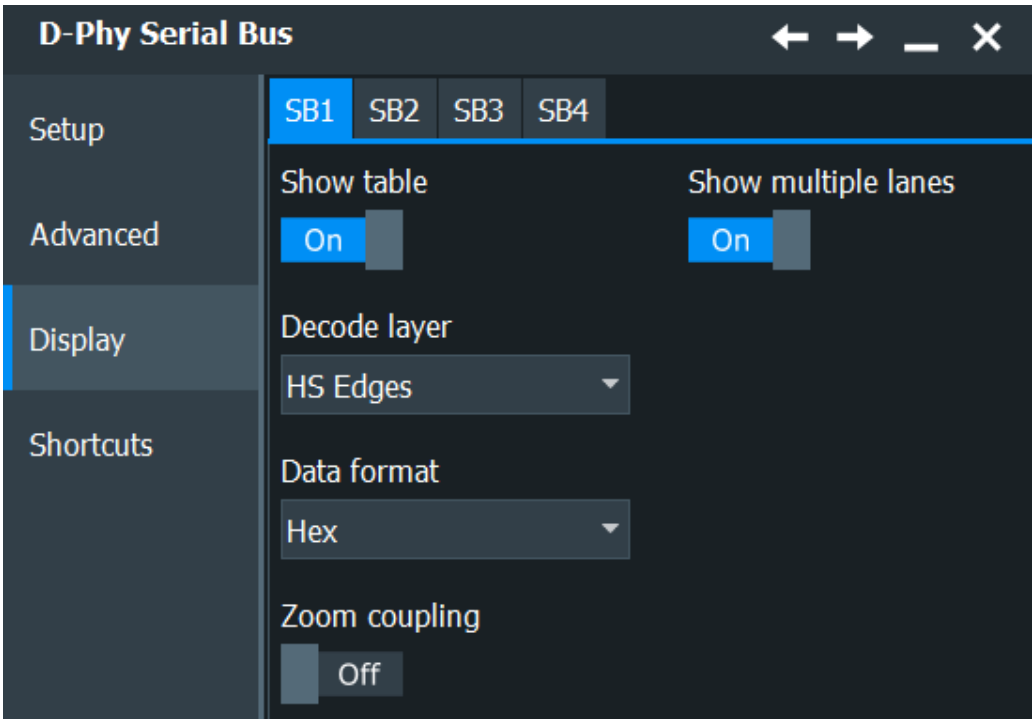

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"HS Edges" The high-speed edges of each lane, showing the transitions in high-speed mode.

"HS Binary" All high-speed bits of each lane, whether they are part of a burst or not.

"HS Burst Bits" The filtered high-speed bits of each lane, including only bits that are part of a burst.

"HS Burst Words"
8 bits per word in a high-speed burst of each lane.

"HS Merged Bytes" The words from the previous layer after they have been merged into one honeycomb.

"HS Merged Words"
The bytes that are combined/split into words.

"LP Edges" The combined edge display of DP0 and DN0.

"LP States" The low-power states LP00, LP01, LP10, LP11 of DP0 and DN0.

Show multiple lanes
Enables the display of the results in multiple lanes.

Remote command:
`BUS<b>:DPHY:SMLanes` on page 2249

14.16.2.4 Configuring the D-PHY signals

For configuration, assign the lines to the input channels and define the logical thresholds and the hysteresis.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus that you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "D-PHY".
4. Enter the physical configuration of the setup, the number of lanes and the clock.
5. Select the source for each lane.
6. Enter the "High speed threshold" for each data lane.
7. Select "Set more thresholds".
8. Enter the "HS Hysteresis" for each high speed data lane.
9. Enter the low-power thresholds.
10. Select "Back".
11. Enable "Decode".

14.16.3 D-PHY trigger


14.16.3.1 D-PHY trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"



In this section, all trigger settings are described. Their availability on the instrument depends on the selected USB protocol type and trigger type. The user interface of the instrument displays only appropriate settings and guides you through the trigger setup.

For a list of supported trigger conditions, refer to the specifications document.

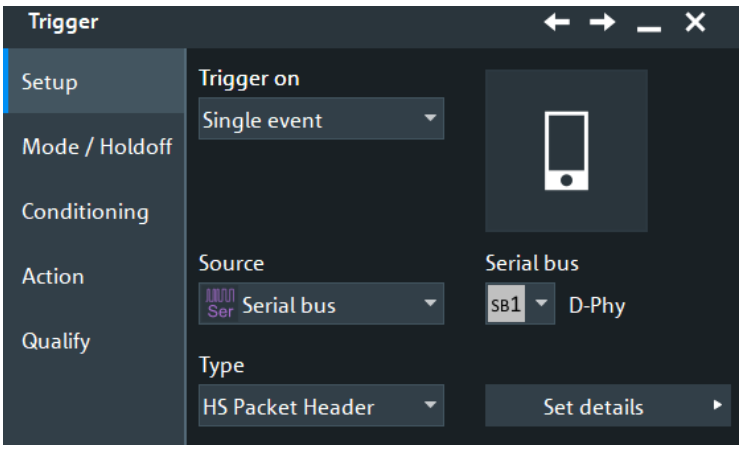

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Serial bus
Selects the serial bus to be triggered on. Make sure to select the correct bus before you enter the settings.

To trigger on a serial bus, the signals sources must be channel signals. If the data or clock source is a math or reference waveform, you cannot trigger on that bus.

Remote command:
`TRIGger<t>:SOURce:SBSelect` on page 1839

Protocol
Defines the protocol type of the selected serial bus.

Remote command:
`BUS<b>:TYPE` on page 1833

Type
Selects the trigger type for the D-PHY analysis.

Remote command:
`TRIGger<t>:DPHY:TYPE` on page 2250


HS Start of Packet ← Type
Sets the trigger to the transmission start of a high-speed packet.




HS End of Packet ← Type
Sets the trigger to the transmission end of a high-speed packet.



HS Packet Header ← Type
Sets the trigger to a packet header of a high-speed package. The header consists of a data identifier (containing the Virtual Channel and the Data Type) and a Word Count. You can specify the values each part of the packet header.

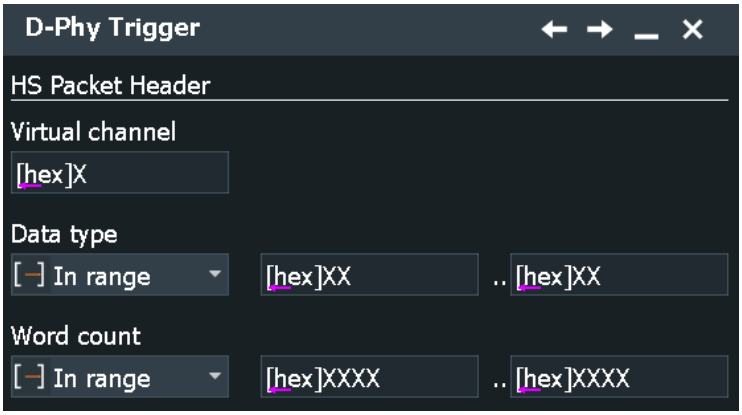

HS Data ← Type
Sets the trigger to a specified high-speed data.

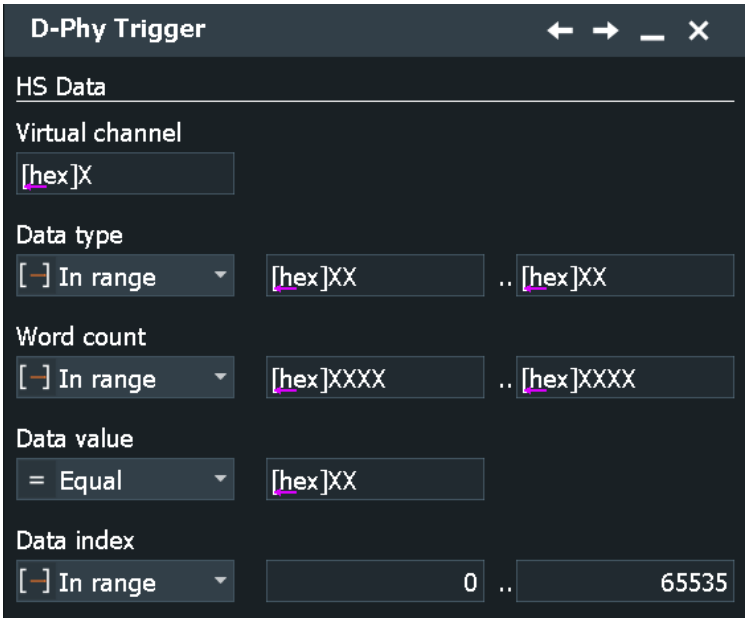

LP Escape Mode ← Type
Sets the trigger to an escape mode event.



LP Lane Turnaround ← Type
Sets the trigger to a low-power turnaround, a reversion of the transmission direction.



LP HS Request ← Type
Sets the trigger to a high-speed request.



Virtual Channel
Triggers on a specific virtual channel, an independent data stream for up to four peripherals.

Remote command:
TRIGger<t>:DPHY:HSVC on page 2257

Data Type
Sets the specified data type to be triggered on. The data type setup consists of the condition and one or two data patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/ Data" Specifies the value or sets the start value of a range.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:DPHY:DTYPe:CONDition on page 2253
TRIGger<t>:DPHY:DTYPe:MAX on page 2253
TRIGger<t>:DPHY:DTYPe:MIN on page 2254

Word Count
Sets the specified specific word count to be triggered on. The word count setup consists of the condition and one or two data patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/ Data" Specifies the value or sets the start value of a range.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:DPHY:WCOunt:CONDition on page 2257
TRIGger<t>:DPHY:WCOunt:MAX on page 2258
TRIGger<t>:DPHY:WCOunt:MIN on page 2258

Data Value
Set the specified data value to be triggered on. The data value setup consists of the condition and one or two data value patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/ Data" Specifies the value or sets the start value of a range.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
For "Type">"HS Data":
`TRIGger<t>:DPHY:DATA:CONDition` on page 2251
`TRIGger<t>:DPHY:DATA:MAX` on page 2251
`TRIGger<t>:DPHY:DATA:MIN` on page 2252
For "Type">"LP Escape Mode":
`TRIGger<t>:DPHY:ESDTa:CONDition` on page 2255
`TRIGger<t>:DPHY:ESDTa:MAX` on page 2255
`TRIGger<t>:DPHY:ESDTa:MIN` on page 2256

Data Index
Data index sets the range within this series of the data value that is considered for the analysis. The data index setup consists of the condition and one or two data index values.

"Condition" Sets the comparison condition to a specific value or a range.

"Index Min/Index" Specifies the value or sets the start value of a range.

"Index Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
For "Type">"HS Data":
`TRIGger<t>:DPHY:DIDX:CONDition` on page 2252
`TRIGger<t>:DPHY:DIDX:MAX` on page 2252
`TRIGger<t>:DPHY:DIDX:MIN` on page 2253
For "Type">"LP Escape Mode":
`TRIGger<t>:DPHY:ESINdex:CONDition` on page 2256
`TRIGger<t>:DPHY:ESINdex:MAX` on page 2256
`TRIGger<t>:DPHY:ESINdex:MIN` on page 2257

Escape mode
The escape mode setup consists of the condition and one or two data patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/ Data" Specifies the value or sets the start value of a range.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:DPHY:ESCMode:CONDition on page 2254
TRIGger<t>:DPHY:ESCMode:MAX on page 2254
TRIGger<t>:DPHY:ESCMode:MIN on page 2255

14.16.3.2 Triggering on D-PHY

Prerequisite: A bus is configured for the D-PHY signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Tap "Serial bus" and select the serial bus that is set to D-PHY.
5. Select the "Trigger Type" to be used for D-PHY protocol analysis.
6. To refine the trigger settings, configure additional settings, which are available for some trigger types.
   For details, see Section 14.16.3.1, "D-PHY trigger settings", on page 788.

14.16.4 D-PHY decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".
2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show binary".
3. If required, enable "Zoom coupling"

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

If a frame is marked red, some kind of error occurred. To analyze the error, see the indication of the corresponding frame in the result table.

ECC checks are supported. ECC can correct a certain number of bit errors in the header. If the errors can be fixed, the status is an ECC warning. If there are too many errors, an ECC error is shown.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

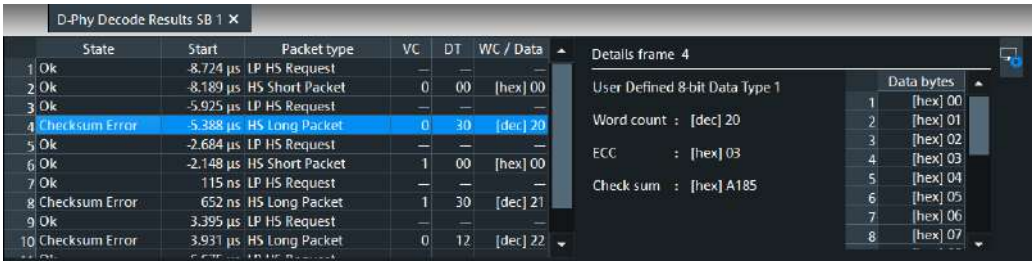


Table 14-25: Content of the Decode results table

Column	Description
State	Overall state of the frame
Start	Time of frame start in relation to the trigger point
Packet Type	Packet type
VC	Number of virtual channels
DT	Data type
WC/ Data	Word count or data value
Number of Packets	Number of packets in the frame

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.17.3, "D-PHY decode results", on page 2258.

14.16.5 Search on decoded D-PHY data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.


Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

14.16.5.1 D-PHY search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

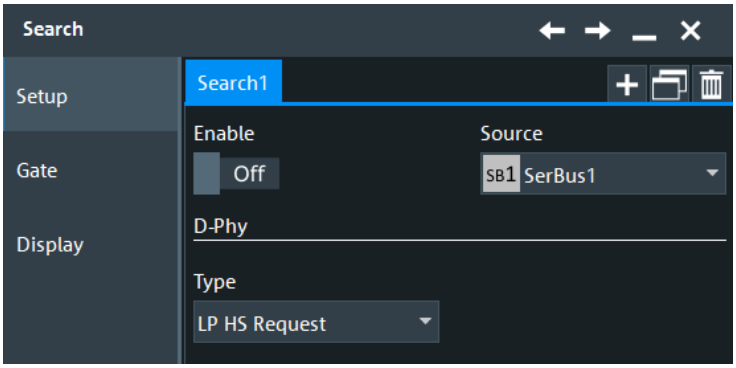

Type
Searches for the selected D-PHY type.

Remote command:
`SEARch:TRIGger:DPHY:TYPE` on page 2264

HS Start of Packet ← Type
Searches for a transmission start of a high-speed packet.

HS End of Packet ← Type
Searches for a transmission end of a high-speed packet.

HS Packet Header ← Type
Searches for a packet header of a high-speed package. The header consists of a data identifier (containing the Virtual Channel and the Data Type) and a Word Count/ Data. You can specify the values each part of the packet header.

HS Data ← Type
Searches for a specified high-speed data.

LP Escape Mode ← Type
Searches for an escape mode event.

LP Lane Turnaround ← Type
Searches for a low-power turnaround, a reversion of the transmission direction.

LP HS Request ← Type
Searches for a high-speed request.

Virtual Channel
Searches for a specific virtual channel, an independent data stream for up to four peripherals.

Remote command:
SEARch:TRIGger:DPHY:HSVC on page 2271

Data Type
Searches for a specific data type. The data type setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data type ("Equal" or "Not equal") or a data type range.

"Data Min/Data"
Defines the bit pattern of the data pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:DPHY:DTYPe:CONDition on page 2267
SEARch:TRIGger:DPHY:DTYPe:MAX on page 2268
SEARch:TRIGger:DPHY:DTYPe:MIN on page 2268

Word Count/ Data
Searches for a specific word count /data. The word count setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific word count ("Equal" or "Not equal") or a word count range.

"Data Min/Data"
Defines the bit pattern of the word pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second word pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:DPHY:WCOunt:CONDition on page 2272
SEARch:TRIGger:DPHY:WCOunt:MAX on page 2272
SEARch:TRIGger:DPHY:WCOunt:MIN on page 2272

Data Value
Searches for a specific data value. The data value setup consists of the condition and one or two data value patterns.

"Condition" Defines the operator to set a specific data value ("Equal" or "Not equal") or a data value range.

"Data Min/Data"
Defines the bit pattern of the data value pattern.
In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data value pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
For "Type">"HS Data":
`SEARch:TRIGger:DPHY:DATA:CONDition` on page 2265
`SEARch:TRIGger:DPHY:DATA:MAX` on page 2265
`SEARch:TRIGger:DPHY:DATA:MIN` on page 2266
For "Type">"LP Escape Mode":
`SEARch:TRIGger:DPHY:ESDTa:CONDition` on page 2269
`SEARch:TRIGger:DPHY:ESDTa:MAX` on page 2270
`SEARch:TRIGger:DPHY:ESDTa:MIN` on page 2270

Data Index
Data index sets the range within this series of the data value to be searched for. The data index setup consists of the condition and one or two data index values.

"Condition" Defines the operator to set a specific data ("Equal") or a data range.

"Index Min/Index"
Defines the minimum index.

"Index Max" The second index pattern is required to specify a range with conditions "In range".

Remote command:
For "Type">"HS Data":
`SEARch:TRIGger:DPHY:DIDX:CONDition` on page 2266
`SEARch:TRIGger:DPHY:DIDX:MAX` on page 2266
`SEARch:TRIGger:DPHY:DIDX:MIN` on page 2267
For "Type">"LP Escape Mode":
`SEARch:TRIGger:DPHY:ESINdex:CONDition` on page 2270
`SEARch:TRIGger:DPHY:ESINdex:MAX` on page 2271
`SEARch:TRIGger:DPHY:ESINdex:MIN` on page 2271

Escape mode
Searches for an escape mode event. The escape mode setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific word count ("Equal" or "Not equal") or a word count range.

"Data Min/Data"
Defines the bit pattern of the data pattern.
In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:DPHY:ESCMode:CONDition on page 2268
SEARch:TRIGger:DPHY:ESCMode:MAX on page 2269
SEARch:TRIGger:DPHY:ESCMode:MIN on page 2269

14.16.5.2 D-PHY search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- SEARch:RESult:DPHY:FCOunt? on page 2273
- SEARch:RESult:DPHY:FRAMe<fr>:CS? on page 2273
- SEARch:RESult:DPHY:FRAMe<fr>:DATA? on page 2274
- SEARch:RESult:DPHY:FRAMe<fr>:DTName? on page 2274
- SEARch:RESult:DPHY:FRAMe<fr>:DTYPe? on page 2274
- SEARch:RESult:DPHY:FRAMe<fr>:ECC? on page 2274
- SEARch:RESult:DPHY:FRAMe<fr>:PACKet<pa>:IDX? on page 2275
- SEARch:RESult:DPHY:FRAMe<fr>:PACKet<pa>:VALue? on page 2275
- SEARch:RESult:DPHY:FRAMe<fr>:STARt? on page 2275
- SEARch:RESult:DPHY:FRAMe<fr>:STATe? on page 2276
- SEARch:RESult:DPHY:FRAMe<fr>:STOP? on page 2276
- SEARch:RESult:DPHY:FRAMe<fr>:TYPE? on page 2277
- SEARch:RESult:DPHY:FRAMe<fr>:VCHannel? on page 2277

14.16.5.3 Searching D-PHY

Prerequisite: A serial bus is configured for the D-PHY signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.

4. Tap "Source" and select the serial bus that is set to D-PHY (e.g. "SB1", unless already selected).
5. Specify search criteria according to Section 14.16.5.1, "D-PHY search setup", on page 796.
6. To acquire a waveform, press [Single].

   The R&S RTP performs a D-PHY decode according to the thresholds and protocol settings of the associated serial bus source.
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.17 M-PHY and USB SSIC (option R&S RTP-K44 and K64)

The M-PHY® is a serial communication protocol. Its specifications were developed by the Mobile Industry Processor Interface (MIPI) alliance as standards for the communication of high-speed components, like smartphones and tablets, within mobile devices. For more details on the specifications, refer to http://mipi.org/specifications/physical-layer#M-PHY Specification.

This protocol is the foundation for several upper layer protocols, such as UniPro℠ (Unified Protocol), which manage complex data transfer functions. Each of these protocols is optimized for its particular purpose, such as data storage, data transfer, display, camera, memory sharing and radio interface.

When implemented together with the MIPI UniPro, defined as UniPort-M, they deliver high speed, low power, scalable and flexible data transport solutions.

The super speed inter-chip (SSIC) was developed by the USB standards committee based on USB3.1 G1 (SuperSpeed). It is developed to support the chip to chip communication of USB3 components. The lower communication layers are using M-PHY as the encoder platform and use a multilane distribution similar to UniPro. The higher communication layers (above 8b/10b) are almost identical to USB3.1 G1.

- M-PHY basic 801
- M-PHY configuration 802
- M-PHY trigger 805
- M-PHY decode results 820
- Search on decoded M-PHY data 821

14.17.1 M-PHY basic

This chapter provides an overview of the characteristics of the M-PHY and UniPro protocols.

14.17.1.1 Data transfer

M-PHY words are always 10 bits long (both data and control words). For UniPro, they have variable lengths that depend on the frame type. For example, control words have 8 bits, data words have 16 bits and reserved words have 3 bits.

To achieve power efficiency and high-performance transmissions, multiple power-saving states and recovery times are utilized. Scalability and flexibility are achieved through the various transmission speed ranges and rates.

Different modes of operations:

- Disable mode: lowest power mode entered into once the power supply is turned on
- Hibernate (Hibern8): ultra low-power state, which can be used without configuration loss
- High-speed mode (HS): supports three gears with predefined data rates. This mode is used during high-speed transmission for transporting large volume of data. This mode utilizes the power-saving Stall state to reduce power consumption while offering a fast state transition in the range of nanoseconds
- Low-power mode (PWM): supports seven gears with predefined frequency ranges. This mode is used during low-speed transmission for power conservation. This mode utilizes the power-saving Sleep state with a state transition time typically in the range of microseconds

The R&S RTP supports all operating speed modes: high-speed and low-power mode. The gear settings of these modes are auto detected by the instrument.

14.17.1.2 Data analysis

The M-PHY and UniPro decoding process involves several stages, similar to D-PHY.

The stages are as the following:

- Stage 1: involves two substages:
  - Stage 1a: converts the three stage cross points into bit and attempts a HS-Sync. This stage involves the Hibern8-Detection/Filter, NRZ Unclocked Decoder and Burst Detection.
  - Stage 1b is only involved if Stage 1a burst detection fails, assuming using PWM. Input is from the bits from stage 1a. This stage involves the PWM Decoder, Line CFG Decoder and Burst Detection.
- Stage 2: performs the 8b/10b decoding of bits from stage 1 into Bytes and identifies the 8b/10b control words. This stage involves the 8b/10b Decoder and Shift-decoder to Bytes.
- Stage 3: starts decoding the Bytes from stage 2. This stage involves the Descrambler and 17-bit Shift Decoder.


- Stage 4: merges the data lanes and finalizes the decoding to the UniPro data frames. This stage involves the Lane Merger, PDU Sync Detector, Shift Decode and Dynamic Data unit Decoder.

14.17.2 M-PHY configuration

14.17.2.1 M-PHY configuration settings

Access: [Bus] > "M-PHY" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

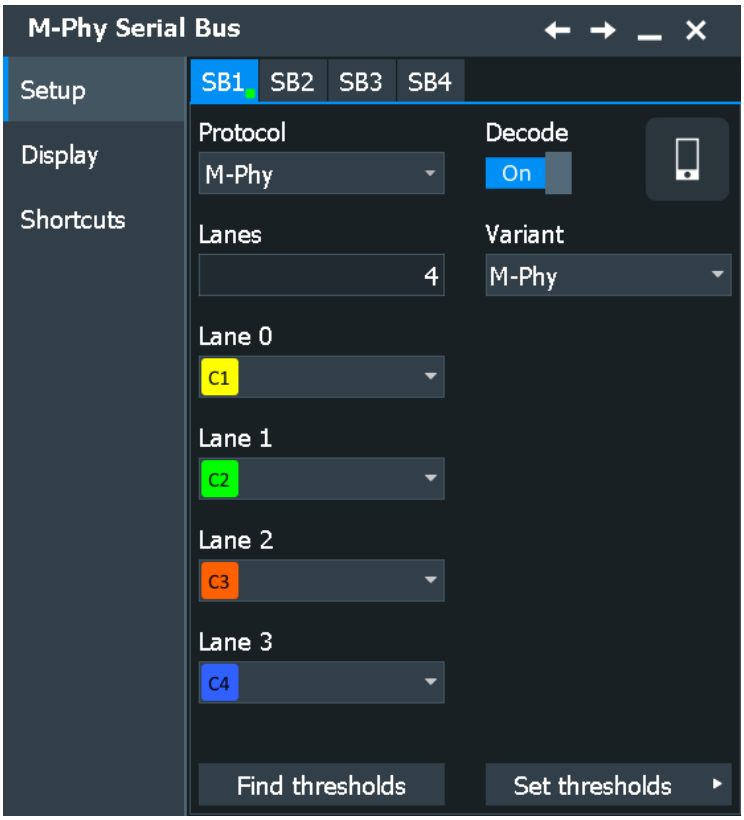

See also: Section 14.1.1, "Setup - general settings", on page 556

Variant
Selects the protocol running on the interface. You can select between the M-PHY, UniPro and SSIC.

Remote command:
`BUS<b>:MPHY:VARiant` on page 2278


Lanes
Sets the number of logical lanes that are mapped to the physical lines. You can select up to four lanes.

Remote command:
BUS<b>:MPHY:DLANes on page 2278

Lane 0 / Lane 1 / Lane 2 / Lane 3: Channel
Select the signal sources for the logical lanes.

Remote command:
BUS<b>:MPHY:DZERo:SOURce on page 2279
BUS<b>:MPHY:DONE:SOURce on page 2279
BUS<b>:MPHY:DTWO:SOURce on page 2279
BUS<b>:MPHY:DTHRee:SOURce on page 2279

Threshold setup
Opens a dialog, where you can set the tresholds for digitization of signals for each lane.

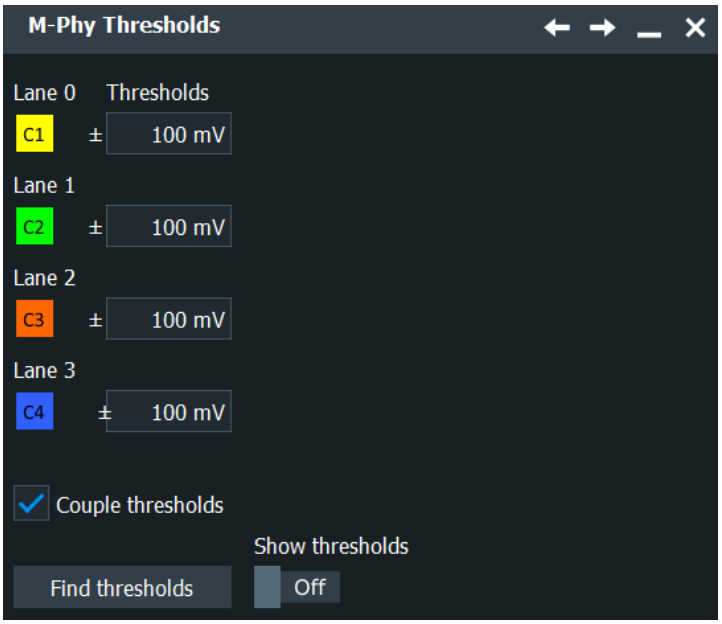

"Thresholds" Enter individual values for each line directly in the fields.

"Couple thresholds" Enables the same threshold value for all lanes.

"Find thresholds" Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

"Show thresholds" If enabled, the threshold levels are displayed in the diagram.

Remote command:
BUS<b>:MPHY:DZERo:THReshold on page 2279
BUS<b>:MPHY:DONE:THReshold on page 2279
BUS<b>:MPHY:DTWO:THReshold on page 2279

BUS<b>:MPHY:DTHRee:THReshold on page 2279
BUS<b>:MPHY:THCoupling on page 2280

Scrambled Mode
Available, if "Variant" = "SSIC".

Selects, if the SSIC data is scrambled or descrambled. Set this parameter according to your signal parameters, to ensure a proper decoding.

Remote command:
BUS<b>:MPHY:SCRMode on page 2280

14.17.2.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

To enhance the decode possibilities of the M-PHY or UniPro protocol, you can use an additional setting in the "Display" tab: "Decode layer".

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Final" Final decoded frames of each lane.

"Edges" All edges of each lane in stage 1 decoding.

"Bits" All bits of each lane in stage 1 decoding.

"8b/10b Symbols"
8b/10b symbols in stage 2 decoding.

"LCC bits" LCC bits in stage 3 decoding.

"Filter/descrambler"
UniPro filter/descrambler in stage 3 decoding.

"Lane merge"
UniPro lane merge in stage 4 decoding.

"Bytes" UniPro bytes in stage 2 decoding.

Show multiple lanes
Enables the display of the results in multiple lanes.

Remote command:
BUS<b>:MPHY:SMLanes on page 2281

14.17.2.3 Configuring the M-PHY signals

Access: [Bus] > "Setup" tab > "Protocol" = *M-PHY*


Assign the lanes to the channels and define the thresholds:

1. Press [Bus] on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: M-PHY.
4. Tap "Variant" and select the protocol.
5. Enter the number of "Lanes".
6. Select the source "Channel" for each lane.
7. Enter the "Thresholds" for each lane.
8. Enable "Decode".

14.17.3 M-PHY trigger

14.17.3.1 M-PHY trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

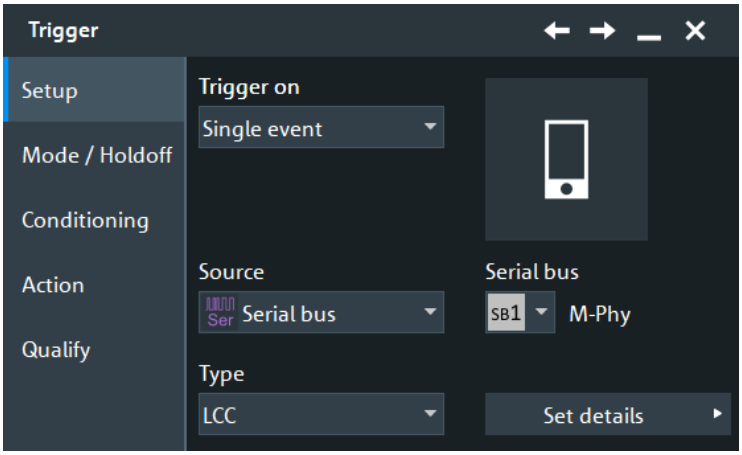

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Type
Selects the trigger type for the analysis of the selected protocol.

Remote command:
`TRIGger<t>:MPHY:TYPE` on page 2282

Start of frame ← Type
Triggers on the start of an M-PHY or a UniPro frame.


Burst ← Type
Triggers on an M-PHY burst frame.

Adapt ← Type
Triggers on an M-PHY Adapt frame. This control frame is used for clock/bit synchronization.

LCC ← Type
Triggers on an M-PHY Line Control Command (LCC) frame that matches the specified:


- LCC Type
- WORD

This control frame is used for configuring the line to a different state or mode depending on the LCC type.

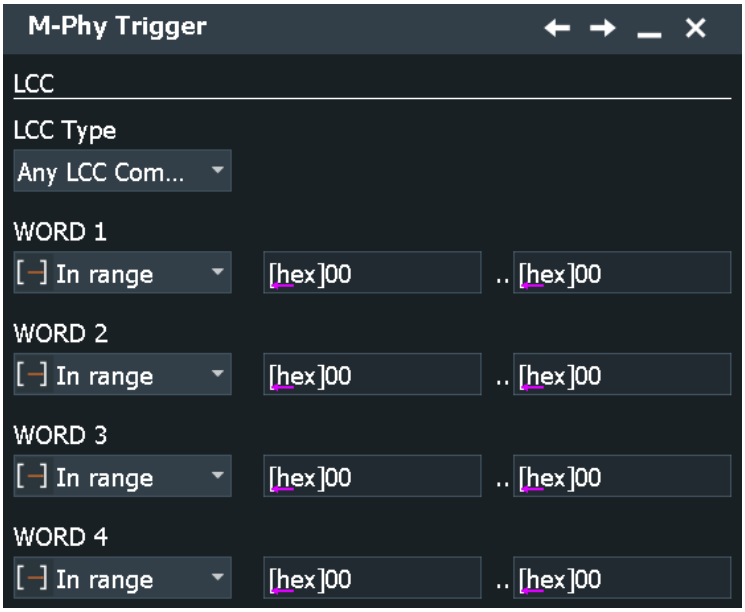


DL PDU SOF ← Type
Triggers on a UniPro Downlink Protocol Data Unit (DL PDU) Start Of Frame (SOF) that matches the specified:

- Prepare length
- TC
- Data
- Index

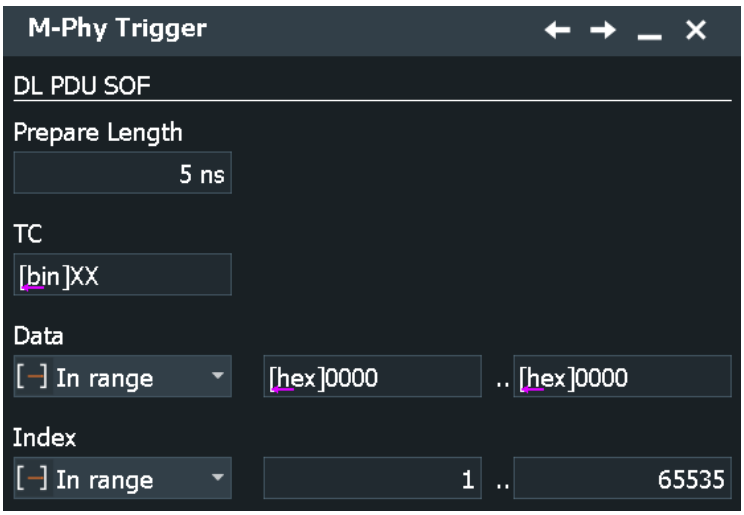


DL PDU COF ← Type
Triggers on a UniPro DL PDU Continuation Of Pre-empted Frame (COF) that matches the specified:

- Prepare length
- TC
- Data
- Index

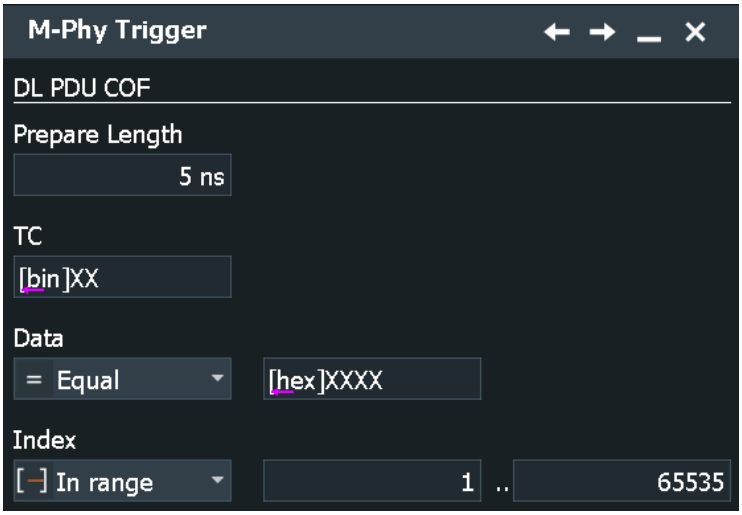


DL PDU EOF ← Type
Triggers on a UniPro DL PDU End Of Frame (EOF) frame that matches the specified conditions:

- Prepare length
- FSN
- CRC

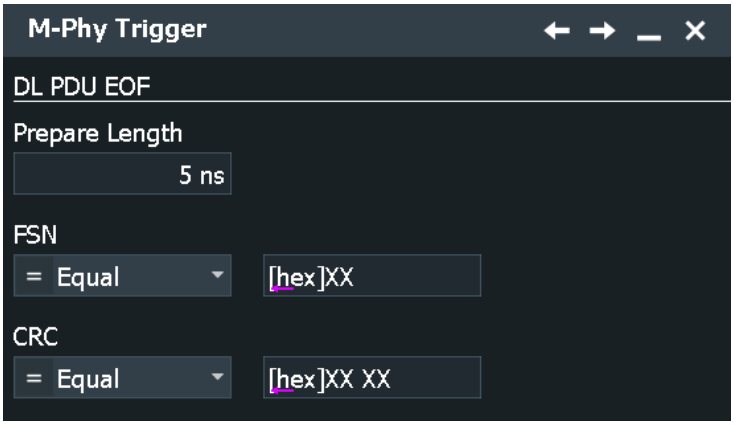


DL PDU NAC ← Type
Triggers on a UniPro DL PDU Negative Acknowledgment Control (NAC) frame that matches the specified conditions:

- Prepare length
- RReq
- CRC

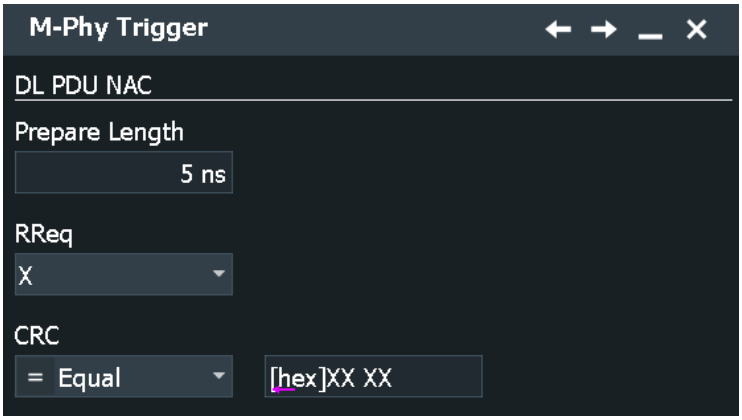

DL PDU AFC ← Type
Triggers on a UniPro DL PDU Acknowledgement and L2 Flow Control (AFC) frame that matches the specified conditions:


- Prepare length
- TC
- CReq
- FSN
- Credit
- CRC

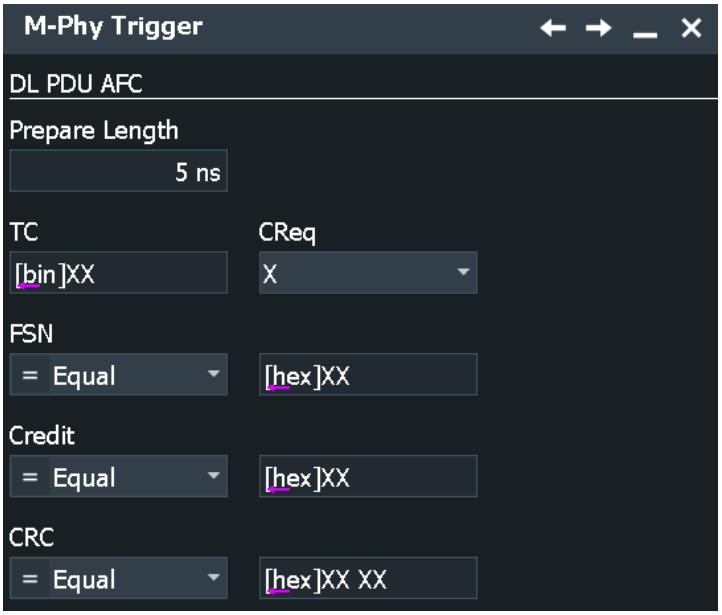

PACP ← Type
Triggers on a UniPro PHY Adapter Control Protocol (PACP) frame that matches the specified condition:

- Prepare length
- PACP Begin
- PACP Function ID
- Data
- Index
- CRC

This control frame is used mainly for power mode change and L1.5 link management. It is also used in scrambling request.

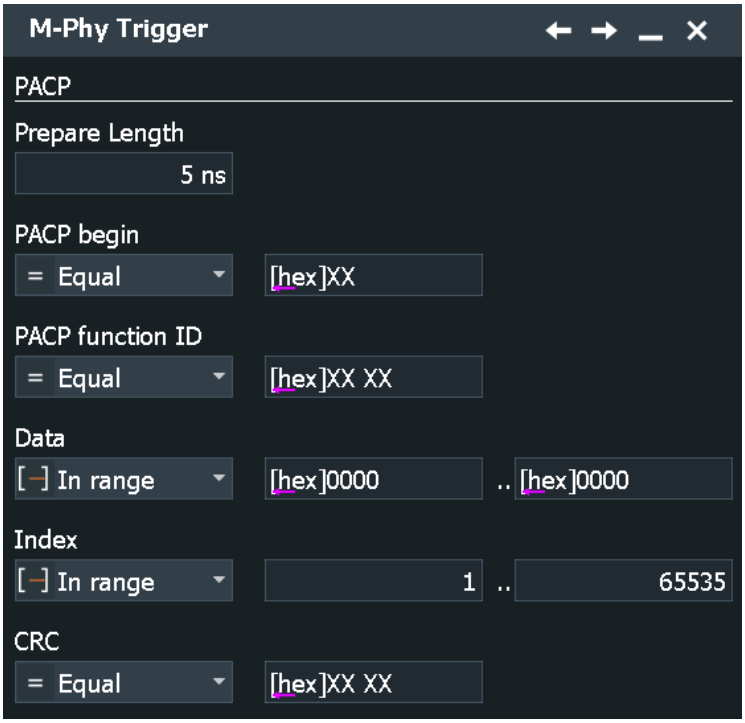


Trigger Upr0 ← Type
Triggers on a UniPro Trigger Upper0 frame. This control frame is used for link startup sequence.

Trigger Upr1 ← Type
Triggers on a UniPro Trigger Upper1 frame. This control frame is used for link startup sequence.

Trigger Upr2 ← Type
Triggers on a UniPro Trigger Upper2 frame. This control frame is used for link startup sequence.

Errors ← Type
Triggers on the specified M-PHY or UniPro error frame.

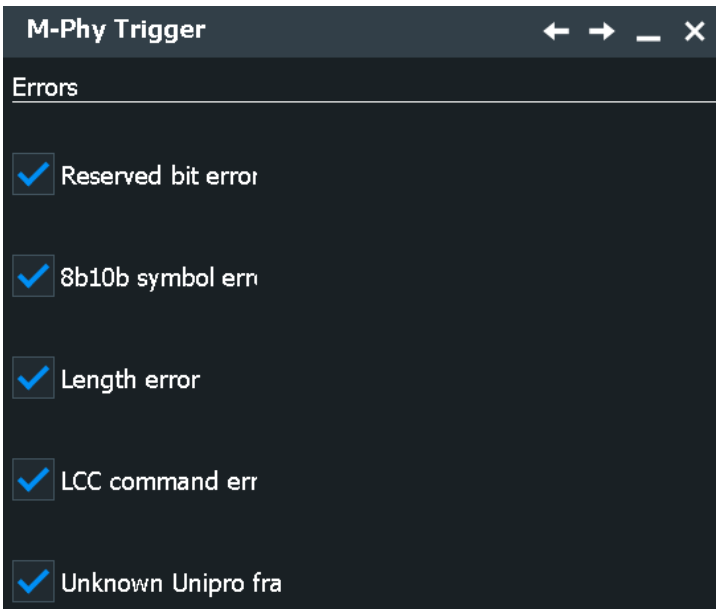

Prepare length
Sets the prepare length.

LCC Type
Selects the type of LCC command to be triggered on.

"Any LCC Command"
All the available LCC commands

"HIBERN8-SLEEP"
Switches the power-saving state to ultra-low power without configuration loss. This state saves up to 90% power and is used with PWM burst.

"HIBERN8-STALL"
Switches the power-saving state to ultra-low power without configuration loss. This state saves up to 75% power and is used with HS burst.

"READ-CAPABILITY"
Recovers data about the Optical Media Converter (OMC) capabilities

"READ-MFG-INFO"
Retrieves manufacturing ID and vendor-specific information

"READ-VEND-INFO"
Retrieves the additional four delimited bytes containing vendor-specific information

"WRITE-ATTRIBUTE"
Sets the configuration parameters required for lane operation

"PWM-G0/PWM-G1/PWM-G2/PWM-G3/PWM-G4/PWM-G5/PWM-G6/PWM-G7"
Switches the transmission mode to the selected low-power gear

"HS-G1A/HS-G2A/HS-G3A/HS-G4A/HS-G1B/HS-G2B/HS-G3B/HS-G4B"
Switches the transmission mode to the selected high-speed gear

"Reserved"
Reserved bit command. These bits are reserved for future use.

Remote command:
TRIGger<t>:MPHY:LCCType on page 2283

WORD 1/WORD 2/WORD 3/WORD 4
Sets the specified words to be triggered on. The setup for a word consists of the condition and one or two word patterns.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/Data"
Specifies the value or sets the start value of a range.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
For " WORD 1":
TRIGger<t>:MPHY:LWONe:CONDition on page 2284
TRIGger<t>:MPHY:LWONe:MIN on page 2284
TRIGger<t>:MPHY:LWONe:MAX on page 2285
For " WORD 2":
TRIGger<t>:MPHY:LWTWo:CONDition on page 2285
TRIGger<t>:MPHY:LWTWo:MIN on page 2285
TRIGger<t>:MPHY:LWTWo:MAX on page 2286
For " WORD 3":
TRIGger<t>:MPHY:LWTHree:CONDition on page 2286
TRIGger<t>:MPHY:LWTHree:MIN on page 2286
TRIGger<t>:MPHY:LWTHree:MAX on page 2287
For " WORD 4":
TRIGger<t>:MPHY:LWFour:CONDition on page 2287
TRIGger<t>:MPHY:LWFour:MIN on page 2287
TRIGger<t>:MPHY:LWFour:MAX on page 2288

TC
Sets the specified Traffic Class (TC) to be triggered on.

TC is used for classifying the traffic flow based on protocol and port number, e.g. TC0 and TC1 are two priority classes with guaranteed link reliability defined and used in L2.

"Data" Defines the bit pattern of the TC pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

Remote command:
TRIGger<t>:MPHY:TC on page 2288

Data
Sets the data to be triggered on. The trigger data setup consists of a comparison condition and one or two data patterns.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/Data"
Specifies the value or sets the start value of a range.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:MPHY:DATA:DCON` on page 2288
`TRIGger<t>:MPHY:DATA:DMIN` on page 2289
`TRIGger<t>:MPHY:DATA:DMAX` on page 2289

Index
The trigger index setup consists of a comparison condition and one or two address patterns.

"Condition" Sets the comparison condition to a specific value or a range.

"Index Min/Index"
Specifies the value or sets the start value of a range.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Index Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:MPHY:DATA:ICONdition` on page 2289
`TRIGger<t>:MPHY:DATA:IMIN` on page 2290
`TRIGger<t>:MPHY:DATA:IMAX` on page 2290

FSN
Sets the specified Frame Sequence Number (FSN) to be triggered on. The FSN setup consists of the condition and one or two FSN patterns.

"Condition" Defines the operator to set a specific FSN, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the FSN pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second FSN pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
TRIGger<t>:MPHY:FSNumber:CONDition on page 2290
TRIGger<t>:MPHY:FSNumber:MIN on page 2291
TRIGger<t>:MPHY:FSNumber:MAX on page 2291

CRC
Sets the specified Cyclic Redundancy Check (CRC) to be triggered on. The CRC setup consists of the condition and one or two CRC patterns.

CRC is an error detecting code to detect accidental changes to raw data.

"Condition" Defines the operator to set a specific CRC, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the CRC pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:MPHY:CRC:CONDition on page 2291
TRIGger<t>:MPHY:CRC:MIN on page 2292
TRIGger<t>:MPHY:CRC:MAX on page 2292

Req
Sets the specified Reset Link Request (RReq) or Credit Transmit Request (CReq) to be triggered on.

RReq is used for requesting the remote end to reinitialize its Transmit (TX) Physical Layer (PHY) while CReq is used for requesting flow control information for the corresponding TC from the remote end.

"Data" Defines the bit pattern of the RReq pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

Remote command:
TRIGger<t>:MPHY:RREQ on page 2292
TRIGger<t>:MPHY:CREQ on page 2292

Credit
Sets the specified credit to be triggered on. The credit setup consists of the condition and one or two credit patterns.

Credit represents the total number of credits available since boot time.

"Condition" Defines the operator to set a specific credit, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the credit pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second credit pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:MPHY:CREDit:CONDition` on page 2293
`TRIGger<t>:MPHY:CREDit:MIN` on page 2293
`TRIGger<t>:MPHY:CREDit:MAX` on page 2294

PACP Begin
Sets the specified PACP Begin to be triggered on. The PACP Begin setup consists of the condition and one or two PACP Begin patterns.

"Condition" Defines the operator to set a specific PACP Begin, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the data value pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second PACP Begin pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:MPHY:PBEGin:CONDition` on page 2294
`TRIGger<t>:MPHY:PBEGin:MIN` on page 2294
`TRIGger<t>:MPHY:PBEGin:MAX` on page 2295

PACP Function ID
Sets the specified PACP Function ID to be triggered on. The PACP Function ID setup consists of the condition and one or two PACP Function ID patterns.

"Condition" Defines the operator to set a specific PACP Function ID, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the PACP Function ID pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second PACP Function ID pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`TRIGger<t>:MPHY:PFID:CONDition` on page 2295
`TRIGger<t>:MPHY:PFID:MIN` on page 2295
`TRIGger<t>:MPHY:PFID:MAX` on page 2296

Errors
Sets the type of error events to be triggered on.

Reserved Bit Error ← Errors
Triggers on reserved bit error.

This error means that the waveform violates the reserved field according to the specification. For example, a DL_PDU_AFC frame requires that the two bits before and three bits after the FSN field to be reserved and set as 0. If the waveform carries 1 in these positions instead, it is marked as this error.

Remote command:
`TRIGger<t>:MPHY:ERRor:REServed` on page 2297

LCC Command Error ← Errors
Triggers on LCC command error.

This error is marked when the Command field in the LCC packet is not a known command defined in the specification.

Remote command:
`TRIGger<t>:MPHY:ERRor:LCMD` on page 2296

8b10b Symbol Error ← Errors
Triggers on 8b10b symbol error.

For example, some of the 10-bit combinations that do not map to 8-bit according to the specification are invalid 10-bit and therefore marked as this error.

Remote command:
`TRIGger<t>:MPHY:ERRor:SYMBol` on page 2297

Unknown Unipro Frame ← Errors
Triggers on unidentified UniPro frame error. This error is marked when the end mark on UniPro packets is undetected.

Remote command:
`TRIGger<t>:MPHY:ERRor:UNKNown` on page 2297

Length Error ← Errors
Triggers on frames that violate the length according to the specification.

Remote command:
`TRIGger<t>:MPHY:ERRor:LENGth` on page 2296

14.17.3.2 Triggering on M-PHY

Prerequisite: A bus is configured for the M-PHY signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and select the "Trigger" tab.
2. Press the "Select" button. The "Source" button is shown.
3. Tap the "Source" button and select the "Serial bus" trigger source.

4. Tap "Serial bus" and select the serial bus that is set to M-PHY, e.g.:




   The "Protocol" selection is then automatically set to "M-PHY".

5. Select the "Type" to use in the M-PHY protocol analysis.

6. To refine the trigger settings, configure additional settings, which are available for some trigger types.
   For details, see Section 14.17.3.1, "M-PHY trigger settings", on page 805.

14.17.3.3 SSIC trigger settings

The setting is available for SSIC option R&S RTP-K64.

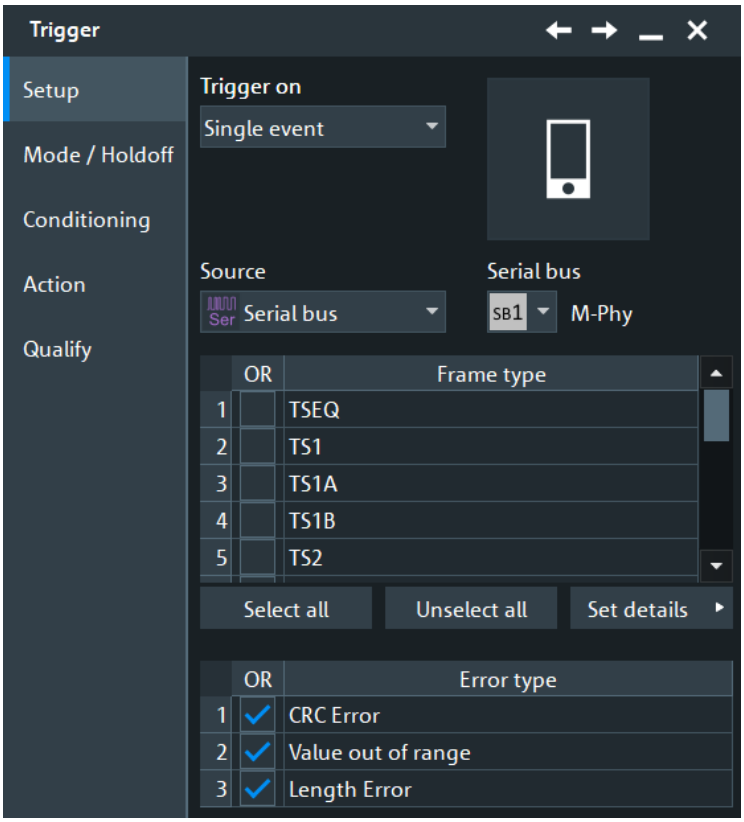


Frame type
Selects the frame type for the M-PHY SSIC.

The SSIC trigger frames and fields are the same as for USB3.1, see "Frame types" on page 919.

Error types, Enable
The table lists the error types you can trigger on. Select the required errors in the "OR" column.

Remote command:
TRIGger<t>:MPHY:SSIC:ERENable on page 2328
TRIGger<t>:MPHY:SSIC:ERRor<n>:ENABle on page 2328

Set details
Opens a dialog to define frame specific settings.

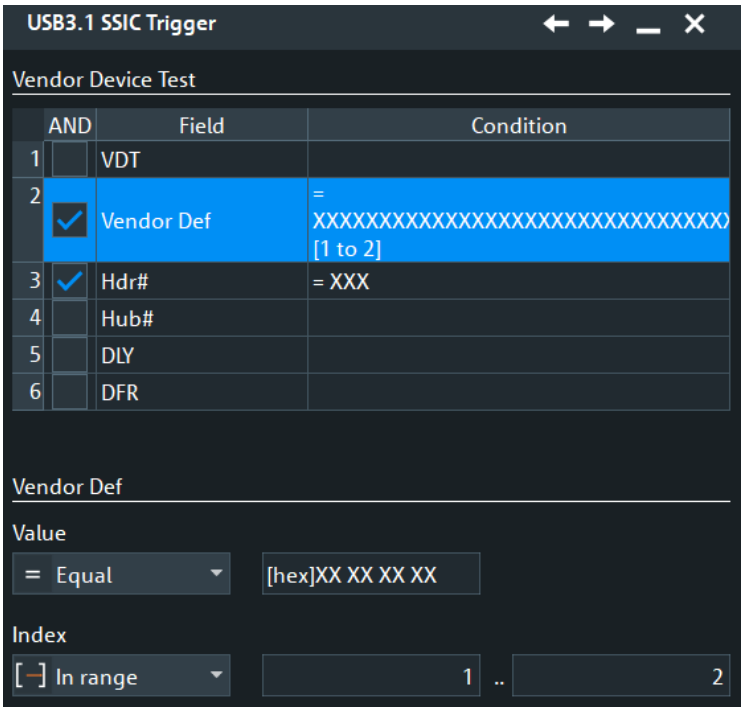

AND / Field name / Condition ← Set details
This table lists the field numbers and names in the selected frame together with a summary of the user settings of checking conditions for each field and a checkbox to enable the checking.

Select a field in the table to specify the checking conditions for this field in the "Set details" dialog.

The SSIC trigger frames and fields are the same as for USB3.1, see "Frame types" on page 919.

Remote command:
TRIGger<t>:MPHY:SSIC:FRENable on page 2328
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle on page 2329

Data
Defines for the selected field, how a data check is executed.

"Condition" Defining specific data or a data range requires to set the operator to one of the following conditions: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies data or sets the start value of a data range.

"Max" Sets the end value of a data range, if "Condition" is set to "In range" or "Out of range".

Remote command:
TRIGger<t>:MPHY:SSIC:DOPerator on page 2330
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator on page 2330
TRIGger<t>:MPHY:SSIC:DMIN on page 2330
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN on page 2330
TRIGger<t>:MPHY:SSIC:DMAX on page 2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX on page 2329

BitState
Defines the bit state to be checked for the selected field. Permitted bit states are "1", "0" or "X" (do not care).

Remote command:
TRIGger<t>:MPHY:SSIC:BIT on page 2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:BIT on page 2329

Index
Defines for the selected field, how an index check is executed.

"Condition"	Defining a specific index or an index range requires to set the operator to one of the following conditions: equal, in range.
"Min"	Specifies the index or sets the start value of an index range.
"Max"	Sets the end value of an index range, if "Condition" is set to "In range".

Remote command:
TRIGger<t>:MPHY:SSIC:IOPerator on page 2332
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator on page 2332
TRIGger<t>:MPHY:SSIC:IMIN on page 2331
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN on page 2331
TRIGger<t>:MPHY:SSIC:IMAX on page 2331
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX on page 2331

14.17.3.4 Triggering on SSIC

Prerequisite: A bus is configured for the "M-PHY" > "Variant" = "SSIC" signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Tap "Serial bus" and select the serial bus that is set to SSIC.
5. If you trigger on errors, select the error types you want to find.
6. Select the frame type to be used for SSIC protocol analysis.
7. For some frame types, you can define the frame fields.

For details, see Section 14.17.3.3, "SSIC trigger settings", on page 817.

14.17.4 M-PHY decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

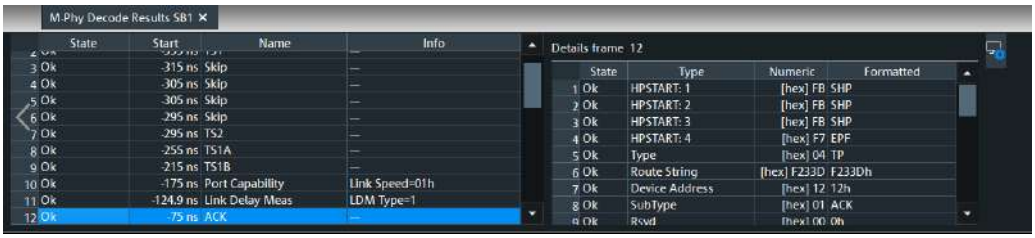


Table 14-26: Content of the Decode results table

Column	Description
Frame	Frame count
State	Overall state of the frame indicating, for example, if the frame is valid or invalid
Start	Time of frame start in relation to the trigger point
Info	Label on top of the frame

Table 14-27: Content of the Details frame table

Column	Description
State	State of the field
Type	Frame identifier specifying the data or control frame name

Column	Description
Numeric	Hexadecimal value of the field
Formatted	Formatted content of the field

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.18.3, "Decode results M-PHY", on page 2297.

14.17.5 Search on decoded M-PHY data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.


Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

14.17.5.1 M-PHY search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

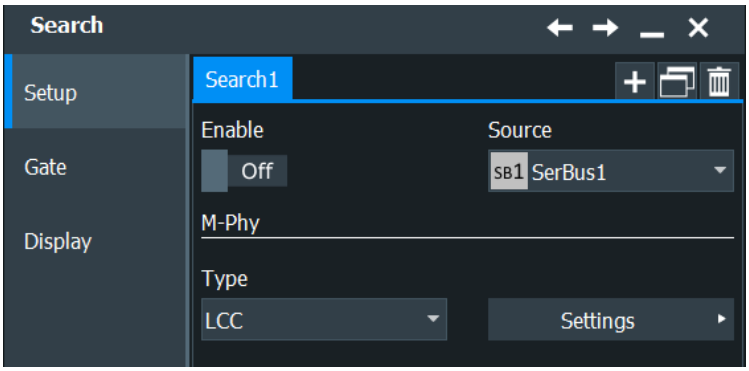

Type
Selects the search type for the selected protocol.

Remote command:
SEARch:TRIGger:MPHY:TYPE on page 2306

Start of frame ← Type
Searches for the start of an M-PHY or a UniPro frame.

Burst ← Type
Searches for an M-PHY burst.

Adapt ← Type
Searches for an M-PHY Adapt frame. This control frame is used for clock/bit synchronization.

LCC ← Type
Searches for an M-PHY Line Control Command (LCC) frame that matches the specified LCC Type or any WORD condition.

This control frame is used for configuring the line to a different state or mode depending on the LCC type.

DL PDU SOF ← Type
Searches for a UniPro Downlink Protocol Data Unit (DL PDU) Start Of Frame (SOF) that matches the specified TC, Data or Index condition.

DL PDU COF ← Type
Searches for a UniPro DL PDU Continuation Of Pre-empted Frame (COF) that matches the specified TC, Data or Index condition.

DL PDU EOF ← Type
Searches for a UniPro DL PDU End Of Frame (EOF) that matches the specified FSN or CRC condition.

DL PDU NAC ← Type
Searches for a UniPro DL PDU Negative Acknowledgment Control (NAC) frame that matches the specified RReq or CRC condition.

DL PDU AFC ← Type
Searches for a UniPro DL PDU Acknowledgement and L2 Flow Control (AFC) frame that matches the specified TC, CReq, FSN, Credit or CRC condition.

PACP ← Type
Searches for a UniPro PHY Adapter Control Protocol (PACP) frame that matches the specified PACP Begin, PACP Function ID, Data, Index or CRC condition.

This control frame is used mainly for power mode change and L1.5 link management. It is also used in scrambling request.

Trigger Upper0 ← Type
Searches for a Trigger Upper0 frame. This control frame is used for link startup sequence.

Trigger Upper1 ← Type
Searches for a Trigger Upper1 frame. This control frame is used for link startup sequence.

Trigger Upper2 ← Type
Searches for a Trigger Upper2 frame. This control frame is used for link startup sequence.

Errors ← Type
Searches for the specified error frame.

LCC Type
Selects the type of LCC command to be searched for.

"Any LCC Command"
All the available LCC commands

"HIBERN8-SLEEP"
Switches the power-saving state to ultra-low power without configuration loss. This state saves up to 90% power and is used with PWM burst.

"HIBERN8-STALL"
Switches the power-saving state to ultra-low power without configuration loss. This state saves up to 75% power and is used with HS burst.

"READ-CAPABILITY"
Recovers data about the Optical Media Converter (OMC) capabilities

"READ-MFG-INFO"
Retrieves manufacturing ID and vendor-specific information

"READ-VEND-INFO"
Retrieves the additional four delimited bytes containing vendor-specific information

"WRITE-ATTRIBUTE"
Sets the configuration parameters required for lane operation

"PWM-G0/PWM-G1/PWM-G2/PWM-G3/PWM-G4/PWM-G5/PWM-G6/PWM-G7"
Switches the transmission mode to the selected low-power gear

"HS-G1A/HS-G2A/HS-G3A/HS-G4A/HS-G1B/HS-G2B/HS-G3B/HS-G4B"
Switches the transmission mode to the selected high-speed gear

"Reserved"
Reserved bit command. These bits are reserved for future use.

Remote command:
`SEARch:TRIGger:MPHY:LCCType` on page 2306

WORD 1/WORD 2/WORD 3/WORD 4
Sets the specified words to be searched for. The setup for a word consists of the condition and one or two word patterns.

"Condition" Defines the operator to set a specific word, e.g. "Equal" or " Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the word pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second word pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
For " WORD 1":
`SEARch:TRIGger:MPHY:LWONe:CONDition` on page 2307
`SEARch:TRIGger:MPHY:LWONe:MIN` on page 2308
`SEARch:TRIGger:MPHY:LWONe:MAX` on page 2308
For " WORD 2":
`SEARch:TRIGger:MPHY:LWTWo:CONDition` on page 2308
`SEARch:TRIGger:MPHY:LWTWo:MIN` on page 2309
`SEARch:TRIGger:MPHY:LWTWo:MAX` on page 2309
For " WORD 3":
`SEARch:TRIGger:MPHY:LWTHree:CONDition` on page 2310
`SEARch:TRIGger:MPHY:LWTHree:MIN` on page 2310
`SEARch:TRIGger:MPHY:LWTHree:MAX` on page 2310
For " WORD 4":
`SEARch:TRIGger:MPHY:LWFour:CONDition` on page 2311
`SEARch:TRIGger:MPHY:LWFour:MIN` on page 2311
`SEARch:TRIGger:MPHY:LWFour:MAX` on page 2311

TC
Sets the specified Traffic Class (TC) to be searched for.

TC is used for classifying the traffic flow based on protocol and port number, e.g. TC0 and TC1 are two priority classes with guaranteed link reliability defined and used in L2.

"Data" Defines the bit pattern of the TC pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

Remote command:
`SEARch:TRIGger:MPHY:TC` on page 2312

Data
Sets the specified data to be searched for. The data setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data, e.g. "Equal" or "Not Equal") or a range.

"Data Min/Data"
Defines the bit pattern of the data pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:MPHY:DATA:DCONdition on page 2312
SEARch:TRIGger:MPHY:DATA:DMIN on page 2312
SEARch:TRIGger:MPHY:DATA:DMAX on page 2313

Index
Index sets the range within this series of data that is considered for the search. The index setup consists of the condition and one or two data index values.

"Condition" Defines the operator to set a specific index, e.g. "Equal" or a range.

"Index Min/Index"
Defines the bit pattern of the index pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Index Max" The second index pattern is required to specify a range with conditions "In range".

Remote command:
SEARch:TRIGger:MPHY:DATA:ICONdition on page 2313
SEARch:TRIGger:MPHY:DATA:IMIN on page 2314
SEARch:TRIGger:MPHY:DATA:IMAX on page 2314

FSN
Sets the specified Frame Sequence Number (FSN) to be searched for. The FSN setup consists of the condition and one or two FSN patterns.

"Condition" Defines the operator to set a specific FSN, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the FSN pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second FSN pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:MPHY:FSNumber:CONDition on page 2314
SEARch:TRIGger:MPHY:FSNumber:MIN on page 2315
SEARch:TRIGger:MPHY:FSNumber:MAX on page 2315

CRC
Sets the specified Cyclic Redundancy Check (CRC) to be searched for. The CRC setup consists of the condition and one or two CRC patterns.

CRC is an error detecting code to detect accidental changes to raw data.

"Condition" Defines the operator to set a specific CRC, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the CRC pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second CRC pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
`SEARch:TRIGger:MPHY:CRC:CONDition` on page 2315
`SEARch:TRIGger:MPHY:CRC:MIN` on page 2316
`SEARch:TRIGger:MPHY:CRC:MAX` on page 2316

Req
Sets the specified Reset Link Request (RReq) or Credit Transmit Request (CReq) to be searched for.

RReq is used for requesting the remote end to reinitialize its Transmit (TX) Physical Layer (PHY) while CReq is used for requesting flow control information for the corresponding `TC` from the remote end.

"Data" Defines the bit pattern of the RReq pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

Remote command:
For "RReq":
`SEARch:TRIGger:MPHY:RREQ` on page 2317
For "CReq"
`SEARch:TRIGger:MPHY:CREQ` on page 2316

Credit
Sets the specified credit to be searched for. The credit setup consists of the condition and one or two credit patterns.

Credit represents the total number of credits available since boot time.

"Condition" Defines the operator to set a specific credit, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the credit pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second credit pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:MPHY:CREDit:CONDition on page 2317
SEARch:TRIGger:MPHY:CREDit:MIN on page 2318
SEARch:TRIGger:MPHY:CREDit:MAX on page 2318

PACP Begin
Sets the specified PACP Begin to be searched for. The PACP Begin setup consists of the condition and one or two PACP Begin patterns.

"Condition" Defines the operator to set a specific PACP Begin, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the data value pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second PACP Begin pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:MPHY:PBEGin:CONDition on page 2318
SEARch:TRIGger:MPHY:PBEGin:MIN on page 2319
SEARch:TRIGger:MPHY:PBEGin:MAX on page 2319

PACP Function ID
Sets the specified PACP Function ID to be searched for. The PACP Function ID setup consists of the condition and one or two PACP Function ID patterns.

"Condition" Defines the operator to set a specific PACP Function ID, e.g. "Equal" or "Not Equal" or a range.

"Data Min/Data"
Defines the bit pattern of the PACP Function ID pattern.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second PACP Function ID pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:MPHY:PFID:CONDition on page 2319
SEARch:TRIGger:MPHY:PFID:MIN on page 2320
SEARch:TRIGger:MPHY:PFID:MAX on page 2320

Errors
Sets the type of error events to be searched for.

Reserved Bit Error ← Errors
Searches for reserved bit error.

This error means that the waveform violates the reserved field according to the specification. For example, a DL_PDU_AFC frame requires that the two bits before and three bits after the FSN field to be reserved and set as 0. If the waveform carries 1 in these positions instead, it is marked as this error.

Remote command:
`SEARch:TRIGger:MPHY:ERRor:REServed` on page 2320

LCC Command Error ← Errors
Searches for LCC command error.

This error is marked when the Command field in the LCC packet is not a known command defined in the specification.

Remote command:
`SEARch:TRIGger:MPHY:ERRor:LCMD` on page 2321

8b10b Symbol Error ← Errors
Searches for 8b10b symbol error.

For example, some of the 10-bit combinations that do not map to 8-bit according to the specification are invalid 10-bit and therefore marked as this error.

Remote command:
`SEARch:TRIGger:MPHY:ERRor:SYMBol` on page 2321

Unknown Unipro Frame ← Errors
Searches for unidentified UniPro frame error. This error is marked when the end mark on Unipro packets is undetected.

Remote command:
`SEARch:TRIGger:MPHY:ERRor:UNKNown` on page 2321

Length Error ← Errors
Searches for frames that violate the length according to the specification.

Remote command:
`SEARch:TRIGger:MPHY:ERRor:LENGth` on page 2321

14.17.5.2 M-PHY search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- `SEARch:RESult:MPHY:FCOunt?` on page 2322
- `SEARch:RESult:MPHY:FRAMe<fr>:CCOunt?` on page 2322

- SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:DATA? on page 2323
- SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:TYPE? on page 2323
- SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STARt? on page 2323
- SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STOP? on page 2324
- SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STATe? on page 2324
- SEARch:RESult:MPHY:FRAMe<fr>:DATA? on page 2324
- SEARch:RESult:MPHY:FRAMe<fr>:FTYPe? on page 2325
- SEARch:RESult:MPHY:FRAMe<fr>:STARt? on page 2326
- SEARch:RESult:MPHY:FRAMe<fr>:STATe? on page 2325
- SEARch:RESult:MPHY:FRAMe<fr>:STOP? on page 2327

14.17.5.3 Searching M-PHY

Prerequisite: A serial bus is configured for the M-PHY signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Specify the search criteria according to Section 14.17.5.1, "M-PHY search setup", on page 821.
5. To acquire a waveform, press [Single].

   The R&S RTP performs an M-PHY decode according to the thresholds and protocol settings of the associated serial bus source.
6. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.17.5.4 SSIC search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

Search criteria
Use the "Search criteria" dialog to define the search type. If you search for frame content, define the frame type in which data is to be searched.

You can define individual search parameters for the fields of the selected frame in the table below the "Search criteria". To specify these parameters, select a field in the table and define the data and/or index operators and values, or the bit state.

For a description of how to set the search conditions, see Section 14.17.3.3, "SSIC trigger settings", on page 817.

Remote command:
SEARch:TRIGger:MPHY:SSIC:ERRor<m>:ENABle on page 2333
SEARch:TRIGger:MPHY:SSIC:FIENable on page 2334
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:ENABle on page 2333
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:BIT on page 2335
SEARch:TRIGger:MPHY:SSIC:BIT on page 2335
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX on page 2335
SEARch:TRIGger:MPHY:SSIC:DMAX on page 2335
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN on page 2336
SEARch:TRIGger:MPHY:SSIC:DMIN on page 2336
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator on page 2336
SEARch:TRIGger:MPHY:SSIC:DOPerator on page 2336
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle on page 2334
SEARch:TRIGger:MPHY:SSIC:FRENable on page 2333
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX on page 2337
SEARch:TRIGger:MPHY:SSIC:IMAX on page 2337
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN on page 2338
SEARch:TRIGger:MPHY:SSIC:IMIN on page 2338
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator on page 2338
SEARch:TRIGger:MPHY:SSIC:IOPerator on page 2338

14.18 Custom: Manchester / NRZ (option R&S RTP-K50)

R&S RTP-K50 is a firmware option that enables the R&S RTP to analyze customizable serial bus signals encoded by the following coding standards:

- Manchester
- Manchester II
- NRZ Clocked
- NRZ Unclocked

For analysis, signals encoded in any of these protocols can be triggered and decoded.

Due to the free format description, no search within the decoded events is available.

This chapter describes:

- Custom: Manchester / NRZ protocols 831
- Custom: Manchester / NRZ configuration 832
- Custom: Manchester / NRZ trigger 852
- Custom filter 857
- Custom: Manchester / NRZ decode results 860
- Search on decoded custom Manchester / NRZ data 861

14.18.1 Custom: Manchester / NRZ protocols

"Manchester" coding is a self-clocked coding scheme also known as phase-shift keying (or phase encoding, PE). It is used in protocols such as ProfiBus (IEC 61158), DALI (Digital Addressable Lighting Interface, IEC 60929 and IEC 62386), MVB (Multifunction Vehicle Bus, part of IEC 61375 for Train Communication Networks, TCN), and Ethernet 10BASE-T (10 Mbit/s, IEEE 802.3i). In terms of a logical Boolean operation, the Manchester value of each bit (as per G. E. Thomas) is the exclusive disjunction (XOR) of the original data value and the clock value. A "0" is expressed by a high-to-low transition, a "1" by a low-to-high transition. These transitions, which occur at the middle of each bit period, make the signal self-clocked.

"Manchester II" coding (as per IEEE 802.3) is represented by inverted Manchester values: a "0" is expressed by a low-to-high transition, a "1" by a high-to-low transition.

NRZ stands for "non-return-to-zero" coding: Typically a "1" is represented by a positive voltage and a "0" is represented by a negative voltage, with no "zero" voltage state. NRZ code requires only half the bandwidth of Manchester code, and it can either be clocked or unclocked. NRZ unclocked signals require a user-defined bit rate and gap time setting for triggering and decoding.

14.18.1.1 Special features of Manchester coding

In practical protocols, Manchester coding appears in many variations, often employing deliberate coding violations to encode special waveform features, such as unambiguous synchronization and termination patterns. To adapt to these specific Manchester implementations and handle ambiguous signals, the option R&S RTP-K50 for Custom Serial Bus uses a combination of automatic algorithms and user configurable parameters.

Quaternary Symbols

The software supports not just traditional binary symbols "0" and "1", but also arbitrary violation waveforms that use two additional symbols, yielding a total of four valid "quaternary bit" values. The two additional violation symbols are "H" (high) and "L" (low). Values of "H" correspond to a waveform lacking a transition in the center of the bit, with a physical high voltage state. Similarly, "L" violations also lack a center transition, but have a physical low voltage state. Most Manchester synchronization and termination conventions, even those containing violations, may be expressed as sequences of these four symbols. R&S RTP-K50 uses the quaternary notation to support Manchester patterns in the honeycomb display and to describe synchronization and termination patterns in the frame description table.

Idle Conditions

The state of the signal line in between messages is the idle condition. Manchester appears in practical standards with varying idle conditions: it can idle at the high, low, or middle voltage state. High and low idle states correspond to "biphase" Manchester, while the middle voltage (often ground) adds a third state to become "ternary" Manchester. Using ternary Manchester, option R&S RTP-K50 can usually establish the gaps between messages automatically. Using binary Manchester, the software has

no way to automatically discriminate an idling bus from monotonic sequences of "H" or "L" violations. For these biphase situations, R&S RTP-K50 offers a "Gap Time" detection feature, which allows to distinguish long intervals of non-transitions between bus idling and sequences of violations. Other differences between biphase and ternary Manchester are managed automatically by the software, with no user input required.

Edge Conventions

Most Manchester encodings establish the beginning of the first bit by a first transition, hence an "overhead" edge. The center of the bit is then marked by a second transition, which is a "sampling" edge. Some Manchester implementations, however, sample the first bit on the first edge. The option R&S RTP-K50 attempts to automatically detect this situation. Unfortunately, it is possible to trick the algorithm with waveforms that contain many (legitimate) violations. In these situations, the user can force a "First Edge" or "Second Edge" convention for handling edges. Edge sampling according to the "First Edge" convention is more likely to appear in biphase Manchester, but the software also supports this setting for ternary Manchester situations.

Bit Rate

Typically, a single bit rate is clearly specified in Manchester protocols; however, some implementations use a variable bit rate. By default, R&S RTP-K50 automatically determines the bit rate with no user input required. However, there are fundamental ambiguities possible in Manchester, if the bitrate is unknown. In particular, sequences like "0000", "1111", "0101", "1010", and many situations involving "H" and "L" violations, cannot be decoded without a known bit rate. The situation becomes even less defined with eventual Manchester coding violations. In these situations, a fixed "Bit Rate" setting has to be provided by the user to bypass the software's estimation algorithm.

14.18.2 Custom: Manchester / NRZ configuration

If you need information on how to get started with configuring the custom serial bus setup, see Section 14.18.2.7, "Configuring custom Manchester / NRZ signals", on page 851. Otherwise proceed with the configuration settings.

14.18.2.1 Custom: Manchester / NRZ configuration settings

Access: [Bus] > "Custom" > "Setup" tab



Make sure that the tab of the correct serial bus is selected.

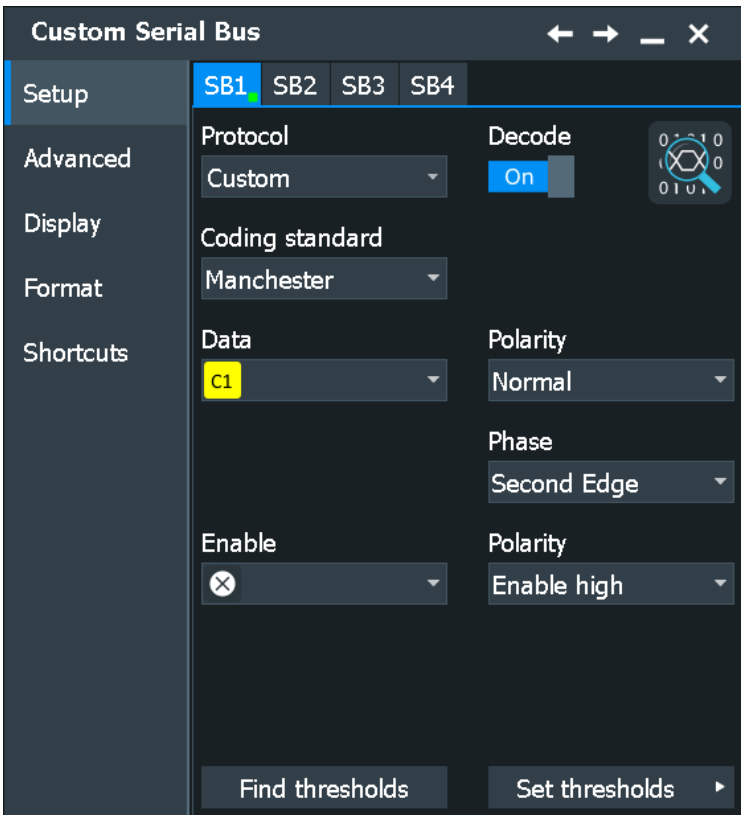


Figure 14-19: Coding standard selection in the serial bus protocol configuration dialog

See also: Section 14.1.1, "Setup - general settings", on page 556

Coding Standard
To define the coding of the custom serial bus to be analyzed, select one of the following standards:

"Manchester" Selects the coding standard Manchester.
Optional "Timing settings" are "Bit Rate" (default: disabled, 10 Mbit/s) and "Gap time" (default: disabled, 10 µs).

"Manchester II" Selects the coding standard Manchester II, which is the inverted signal of the coding standard Manchester.
Optional "Timing settings" are "Bit Rate" (default: disabled, 10 Mbit/s) and "Gap time" (default: disabled, 10 µs).

"NRZ Clocked" Selects the coding standard NRZ Clocked.

"NRZ Unclocked" Selects the coding standard NRZ unclocked.

Remote command:
`BUS<b>:CMSB:CODing` on page 2340

Data Source
Defines the input source for the custom serial bus data signal.

The data source for Manchester and NRZ coding standards is selected separately, independent of each other. The data source is set to default upon switching the coding standard.

Permitted source selections are:

- For "Manchester"/ "Manchester II":
  - Decoding: the analog, mathematical, and reference channels
  - Triggering: the analog channels
- For "NRZ Clocked":
  - Decoding: the analog, mathematical, reference and digital channels
    Digital channels can be only used if MSO option R&S RTP-B1 is installed.
    Digital and analog channels cannot be used at the same time.
  - Triggering: the analog and digital channels
- For "NRZ Unclocked":
  - Decoding: the analog, mathematical, reference and digital channels
    Digital channels can be only used if MSO option R&S RTP-B1 is installed.
    Digital and analog channels cannot be used at the same time.
  - Triggering: the analog channels

Remote command:
`BUS<b>:CMSB:MANChester:DATA` on page 2341
`BUS<b>:CMSB:NRZ:DATA` on page 2344

Clock Source
Defines the source for the custom serial bus clock signal (only available for the coding standard "NRZ Clocked").

Permitted source selections are the analog, mathematical, reference and digital channels.

Digital channels can be only used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on the serial bus, when the NRZ clocked coding standard is selected, analog or digital channel sources are required.

Remote command:
`BUS<b>:CMSB:NRZ:CLCK` on page 2343

Data Polarity (Manchester)
Defines the polarity of the custom serial bus data signal in Manchester coding standards. The available settings are "Normal" or "Inverted".

Remote command:
`BUS<b>:CMSB:MANChester:POLarity` on page 2341

Data Polarity (NRZ)
Defines the polarity of the custom serial bus data signal in NRZ coding standards. The available settings are:

"Active high" The value "1" is represented by a voltage above the threshold.

"Active low" The value "1" is represented by a voltage below the threshold.

Remote command:
`BUS<b>:CMSB:NRZ:POLarity` on page 2346

Data Idle Polarity (NRZ Unclocked)
Defines the idle polarity of the custom serial bus data signal (only available for the coding standard "NRZ Unclocked"). The available settings are:

"Idle low" The base value of the clock is "0"; after an idle period, the data signal starts with a low-to-high transition.

"Idle high" The base value of the clock is "1"; after an idle period, the data signal starts with a high-to-low transition.

Remote command:
`BUS<b>:CMSB:NRZ:IDLPolarity` on page 2344

Clock Polarity (NRZ Clocked)
Defines the polarity of the custom serial bus clock signal (only available for the coding standard "NRZ Clocked"). The available settings are:

"Idle low" The base value of the clock is "0".

"Idle high" The base value of the clock is "1".

Remote command:
`BUS<b>:CMSB:NRZ:CPOLarity` on page 2345

Clock Phase (Manchester)
Defines the phase of the custom serial bus clock signal for the Manchester coding standards. The available settings are:

"Auto Detect" Lets the decoder automatically select the method ("First Edge" or "Second Edge") for detecting the clock phase.

"First Edge"
- At "Idle" = "low": data are captured on the clock's rising edge (low-to-high transition) and propagated on a falling edge.
- At "Idle" = "high": data are captured on the clock's falling edge (high-to-low transition) and propagated on a rising edge.

"Second Edge"
- At "Idle" = "low": data are captured on the clock's falling edge (high-to-low transition) and propagated on a rising edge.
- At "Idle" = "high": data are captured on the clock's rising edge (low-to-high transition) and propagated on a falling edge.

Note: The requirement to specify "First Edge" or "Second Edge" (or let the decoder decide) has the following background: In Manchester coding, an edge is always a transition from high to low (0) or from low to high (1). However, if the signal comes from the idle state, this implies that right before the first valid edge, there is always an overhead transition from idle to high or from idle to low. Some standards may regard this as a valid transition. To avoid a potentially ambiguous situation, a decision has to be made if the first edge is indeed only some overhead transition - or a transition that needs to be sampled. For more details on edge conditions, see Section 14.18.1.1, "Special features of Manchester coding", on page 831.

Remote command:
`BUS<b>:CMSB:MANChester:CPHase` on page 2343

Clock Phase (NRZ Clocked)
Defines the phase of the custom serial bus clock signal for the coding standard "NRZ Clocked", depending on "Clock Polarity". The available settings are:

"First Edge"
- At "Idle" = "low": data are captured on the clock's rising edge (low-to-high transition) and propagated on a falling edge
- At "Idle" = "high": data are captured on the clock's falling edge (high-to-low transition) and propagated on a rising edge

"Second Edge"
- At "Idle" = "low": data are captured on the clock's falling edge (high-to-low transition) and propagated on a rising edge
- At "Idle" = "high": data are captured on the clock's rising edge (low-to-high transition) and propagated on a falling edge

Remote command:
BUS<b>:CMSB:NRZ:CPHase on page 2345

Enable Source (NRZ)
Defines the input source for the custom serial bus enable signal.

If an input is chosen, signals are only decoded when this channel is in the enabled state. This allows you to mark a time when the signal on the selected source is active and when not.

Permitted source selections are the analog, mathematical, and reference channels.

When the serial bus trigger has been selected, the only permitted source selections are the analog channels "C1" – "C4", which are required for triggering.


Math and Reference channels can only be selected, if no serial bus trigger is selected.

Remote command:
BUS<b>:CMSB:NRZ:ENBLe on page 2346

Enable Polarity (NRZ)
Selects whether the transmitted enable signal is active when the voltage is below the Set Thresholds ("Enable low") or higher than it ("Enable high").

Remote command:
BUS<b>:CMSB:NRZ:ENAPolarity on page 2346

Set Thresholds
Sets the threshold value for the digitization of each signal line and the hysteresis. If the signal voltage on the line is higher than the upper threshold, the signal state is high. Otherwise, if the signal voltage is below the lower threshold, the signal state is considered low.

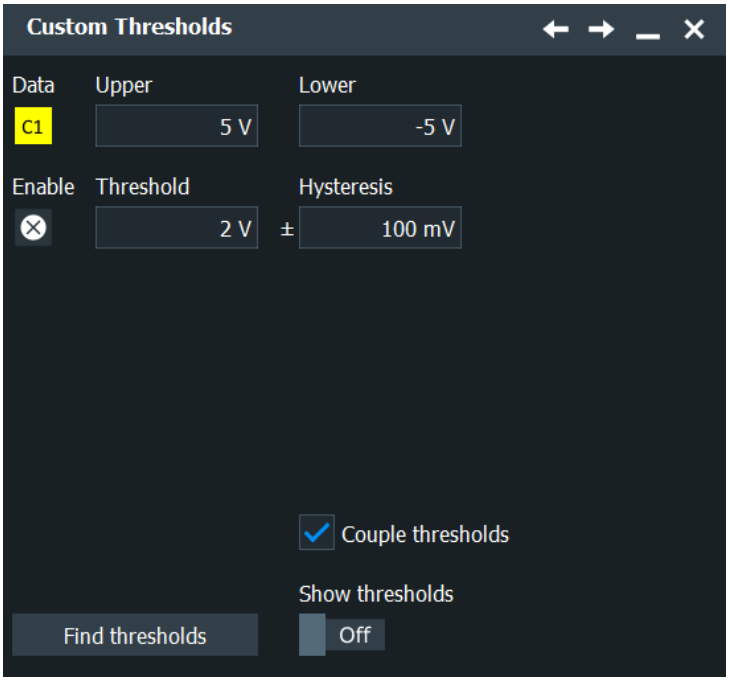

- Manchester coding standards use 3-state signals with an upper and a lower voltage threshold in the range of -25 V to +25 V. A low-to-high transition requires the signal to exceed the upper threshold; a high-to-low transition requires the signal to fall below the lower threshold.
  You can set a hysteresis only for the enable signal.
- NRZ coding standards use a single voltage threshold for the data line. The value is in the range of -25 V to +25 V. It is entered into the middle of three available threshold input fields, or into the upper available threshold input field for NRZ Unclocked.
  You can set the hysteresis for all signal lines.
- In the NRZ Clocked coding standard, there is an additional clock voltage threshold available. This value in the range of -25 V to +25 V is entered into the upper threshold input field.
  You can set the hysteresis for the clock line.

There are four ways to set the threshold:

"Threshold" Directly sets the threshold values.

- For Manchester: upper threshold in the upper field, lower threshold in the lower field.
- For NRZ Clocked: clock threshold in the upper field, data threshold in the middle field and enable threshold in the lower field. Hysteresis values are in the right column.
- For NRZ Unclocked: data threshold in the upper field and enable threshold in the lower field. Hysteresis values are in the right column.

Remote command:
BUS<b>:CMSB:MANChester:THReshold:HIGH on page 2341
BUS<b>:CMSB:MANChester:THReshold:LOW on page 2342
BUS<b>:CMSB:NRZ:THReshold:CLCK on page 2347
BUS<b>:CMSB:NRZ:THReshold:DATA on page 2347
BUS<b>:CMSB:NRZ:THReshold:ENBLe on page 2348
BUS<b>:CMSB:NRZ:HYSTeresis:CLCK on page 2347
BUS<b>:CMSB:NRZ:HYSTeresis:DATA on page 2347
BUS<b>:CMSB:NRZ:HYSTeresis:ENBLe on page 2348

"Find thresholds" Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
BUS<b>:SETReflevels on page 1834


"Couple thresholds"

- For Manchester and Manchester II coding, the upper and lower thresholds are coupled to voltage values with the same magnitude but opposite sign (positive for the upper threshold and negative for the lower threshold). However, if the upper threshold is set to a negative voltage or the lower threshold is set to a positive voltage, coupling is disabled, and the other voltage (the one that was not actively set) is automatically adjusted, to avoid an upper threshold below the lower one, or a lower threshold above the upper one.
- For NRZ Clocked coding, the clock and data threshold values are coupled to the same voltage.

Remote command:
BUS<b>:CMSB:MANChester:THReshold:COUPling on page 2342
BUS<b>:CMSB:NRZ:THReshold:COUPling on page 2349

14.18.2.2 Advanced

Access: [Bus] > "Advanced" tab.

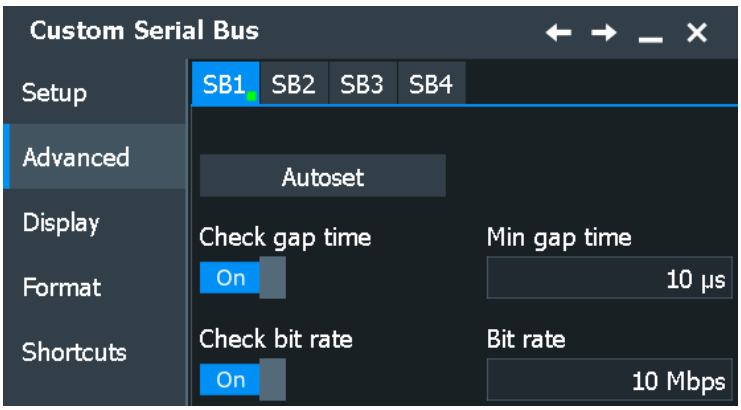

Autoset
Starts software algorithms for determining the signal threshold levels and bitrate.

Remote command:
`BUS<b>:FAUToset` on page 1834

Check bit rate
Enables the bit rate setting. In most cases, bit rate is recovered from the signal automatically. You can check the value by enabling this setting.

This setting is not available for "NRZ Clocked".

Remote command:
`BUS<b>:CMSB:BITRate:ENABle` on page 2349

Bit Rate
Defines the transmission speed setting for the data signal. The bit rate is recovered from the signal automatically. However, the parameter can be used as a correction if the signal doesn't have single bit transitions, e.g. a compliance pattern that looks like "110011001100".

A bit rate definition is not available for "NRZ Clocked".

For more information on the bit rate, see Section 14.18.1.1, "Special features of Manchester coding", on page 831.

Remote command:
`BUS<b>:CMSB:BITRate:VALue` on page 2350

Check gap time
Enables the gap time settings (always enabled for the coding standard "NRZ Unclocked", and also for triggering on signals in any coding standard).

Remote command:
`BUS<b>:CMSB:GAPTime:ENABle` on page 2350


Min gap time
Specifies a minimum gap time (idle time or timeout) between two frames. A gap time definition is optional for the coding standards "Manchester", "Manchester II" and "NRZ Clocked", but obligatory for "NRZ Unclocked" (and also for triggering on signals in any coding standard). Default gap time is 10 µs, permitted gap times range from 1 ns to 1 s.


For more details on gap time and idle conditions, see Section 14.18.1.1, "Special features of Manchester coding", on page 831.

Remote command:
`BUS<b>:CMSB:GAPTime:VALue` on page 2350

14.18.2.3 Frame format configuration

This dialog enables you to describe the generic format and logical structure of typical protocols by creating customized frame descriptions of various structures and lengths.

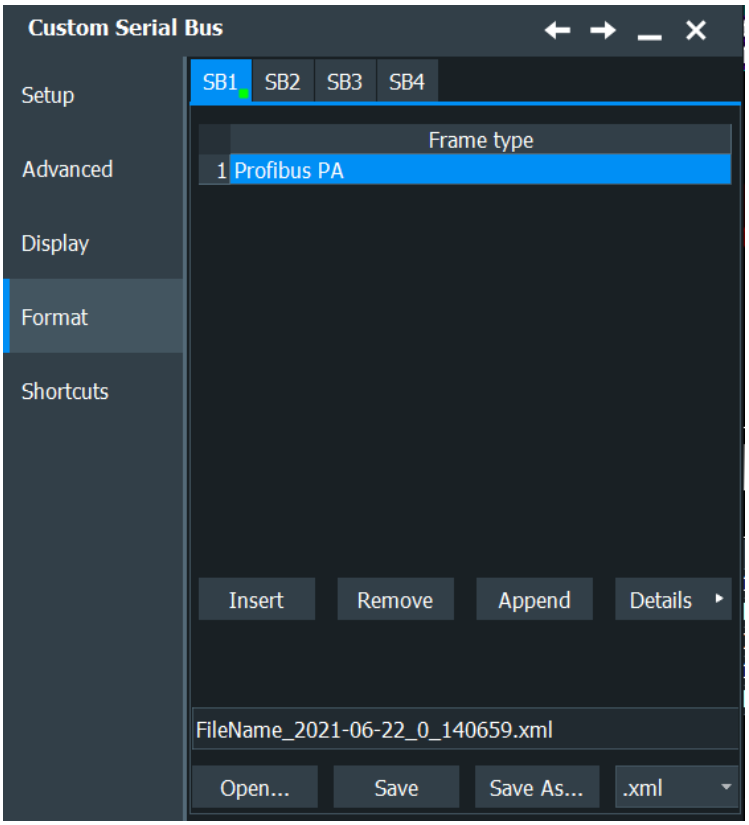

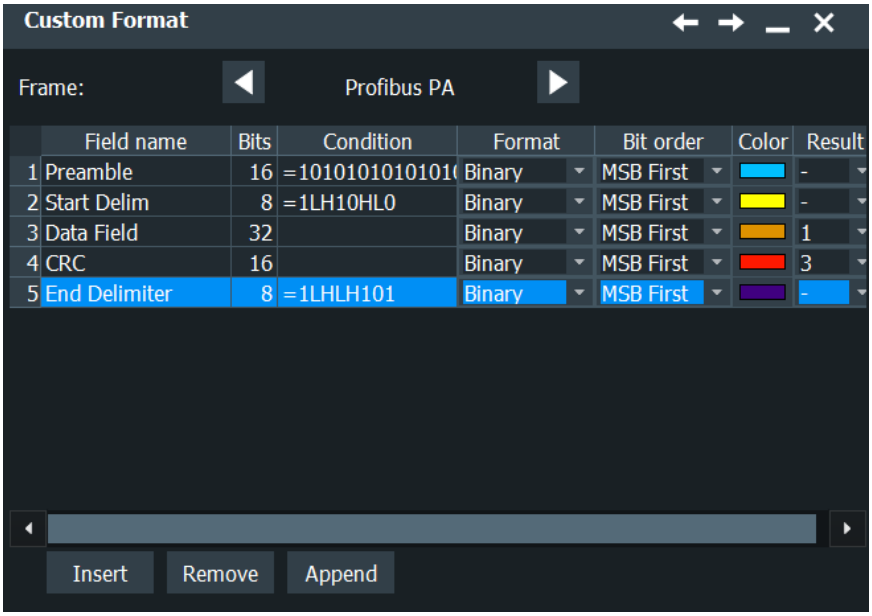

Frames

A frame format description (or *frame description*, for short) is represented by one "page" in this dialog. It can be created by clicking on "Add". If one or several frame descriptions already exist, the new frame description is then created at the end of the frame format description list (or *frame list*, for short). Describing a frame format requires assigning it a name as well as creating Frame format configuration and specifying cell descriptions. The number of frame descriptions is limited to 100. The frame description that is on display can be deleted from the frame list by clicking "Remove".

The "Frame type" string is intended for the user to label the frame description (typically according to the specifications of the applicable protocol standard). For example, MDIO (Management Data Input/Output) specifies the frames "READ", "WRITE", "ADDRESS".

The frame format dialog also provides the features "Open", "Save", "Save As...", and "Explore...", to store created sets of frame descriptions into files (in ".xml" format), or load existing files of this kind.

The frame identification is executed top down, in the order in which the frame formats are described in the frame list. This provides a hierarchy of criteria for identifying frames.

In case it is required to change the order of previously created frame descriptions, it is recommended to save the set of frame descriptions, and then edit the XML file with any suitable editor. This also allows - with due care - additional editing features, if required.

If no user-defined frame description should be suitable to identify an incoming frame, per default such a "missed" frame is reproduced as "Undescribed Bits" in the honeycomb display. These bits are not shown in the results table.

Note: There may be frame descriptions that positively identifies each kind of frame, e.g. if no **equal** operator is defined for any of the fields. This "catches" every frame, even if there are other frame descriptions to follow in the frame list. Therefore, if a "catch all" frame description is used, it should be placed at the end of the frame list, or

it overwrites any subsequent frame description. However, instead of using a "catch all" frame description, the built-in "undescribed bits" display as mentioned above may be the better approach to create frame descriptions.

It is in the responsibility of the user to define unambiguous settings for each frame type. For a description of these conditions in XML file format and the required XML grammar and syntax, see Section 14.18.2.5, "XML syntax", on page 848.

Remote command:
BUS<b>:CMSB:FRAMe<fr>:TYPE on page 2351
BUS<b>:CMSB:ADDFrame on page 2350
BUS<b>:CMSB:CLR on page 2351
BUS<b>:CMSB:FCOunt? on page 2351

Field name
A field description (which is represented by one row in one frame description) can be created at any position of a frame description by clicking on "Insert". This brings up a new field description in the active frame description, on top of the selected position. The "Append" button adds a cell description at the end of a frame description, below the lowest existing cell description. The number of Field descriptions is not limited. The "Remove" button deletes a selected field description from the active frame description.

The field result can be selected to be displayed in a specified result column of the decode table (see "Result" on page 847).

Note: The cell descriptions must be sequential and complete. No gaps are allowed, since the "Bis" are used to calculate the start position of the next cell.

A frame type is identified when all user-defined cell conditions are met, which can be regarded as related by the Boolean AND operator.

This can also locate a synchronization pattern, specified by the equal operator in the field. For example, if you define a "Preamble" cell with the condition *=FFFFFFFF*, the decoder scans the data for this pattern, and then synchronize to it.

The field in a frame are described by:

- Field Name
- "Bits" on page 843
- "Condition" on page 843
- "Format" on page 846
- "Color" on page 847
- "Result" on page 847

Remote command:
BUS<b>:CMSB:FRAMe<fr>:CCOunt? on page 2352
BUS<b>:CMSB:FRAMe<fr>:APPend on page 2351

Field Name
The strings in the column title describe cell names. They do not have to be unique; cell names are just for user support.

Remote command:
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:NAME on page 2352

Bits
This crucial information defines the length of the cell and - based on the previous cells - also the cell end position and the next cell start position within a frame.

If, for a given bit count, the Condition value is longer, it is truncated. If the condition value is shorter, it is padded with 0. Both truncation and padding occur at the left side of the condition value.

Examples:
- if "Condition" is "=111000" and the "Bit order" is "MSB", then
  - if "Bits" is 4, the truncated condition is "=1000"
  - if "Bits" is 8, the padded condition is "=00111000"
- if "Condition" is "=111000" and the bit order is "LSB" (accordingly, the condition in "MSB" format would be "=000111"), then
  - if "Bit s" is 4, the truncated condition is "=1000" for LSB and "=0001" for MSB
  - if "Bits" is 8, the padded condition is "=00111000" for LSB and "=00011100" for MSB

Remote command:
`BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:BITCount` on page 2352

Condition
This text field is used to apply various conditions and functionalities for a cell. Among others, it can be used to identify mandatory values (such as CRC checksum or ID) that help to identify a frame. The numeric format and bit order of the condition value has to match up with what is defined in the fields "Format" and "Bit order".

The following conditions are implemented:

"= (equal)"

The **equal** operator (represented by the "=" sign) defines a pattern for the field to match. Valid condition entries are characters that match the cell's defined "Format", "Bit order", and "Bits". In binary format, for example, valid characters are "1", "0", "H" (high), and "L" (low).

Three cases have to be distinguished (cases A, B1, and B2), depending on the presence of a Variable Length Array: [] in the same frame description:

- **Case A**: If there is **no** "Variable Length Array" field, then each field marked with the equal operator acts as a key to identify a frame type. Only if all these fields match up with the expected value, the frame type is identified.
- **Cases B1 and B2**: If there **is** a "Variable Length Array" cell, then the equal operator has two different functionalities, depending on the position of the equal-operator cell within the frame description:
  - **B1**: If the cell is located *anywhere before* the "Variable Length Array" cell, the condition acts as a key to identify a frame type (as in case A).
  - **B2**: If the cell is located *immediately after* the "Variable Length Array" cell, the condition acts as an array delimiter.
    (Note: If the cell, which is marked with the equal operator, is located after the "Variable Length Array" cell, but *not* immediately after it, the decode result is unpredictable.)

Typically, Manchester protocols use code violations for synchronization. The states "H" and "L", supported by the equal operator in binary Format, mark that a transition is expected at this bit, but only a high or low signal is found.
Examples for the MVB protocol:
Master - Delimiter: "=*1LH0LH000*"
Slave - Delimiter: "=*0000LH0LH*"
For more details on the violation symbols "H" and "L", see Section 14.18.1.1, "Special features of Manchester coding", on page 831.
Also, the length of the pattern must correspond to the bit field length (or the results are unpredictable).

"[ ] (array)" The **array** operator (represented by the "[" and "]" bracket signs) defines the number of permissible repetitions of the cell.

Example: Fixed-Length Array: [n]

The length parameter "n" is a decimal number > 0, which determines that the cell is repeated n times within the frame. If, for example, the Bits is 8, then the array operator identifies n cells of 8-bit length, and present them in the results table and honeycomb display with the specified name and color.

A fixed-length array is treated the same as other cells, except the real length of such an array is n · bit count.

Example: Variable Length Array: []

This array operator with empty "[" and "]" bracket signs does not determine a fixed size array. The cell could be repeated any number of times, including 0 times. As a result, the cell and the frame are of unspecified length (a situation that covers typical use cases).

The length of the frame is then determined by the end of frame condition, which can be an operator or a gap.

For processing reasons, only one (1) variable length array is supported in a frame, and a delimiter must follow immediately in the next cell after it. This is required to enable the software to correctly terminate the array. Otherwise the bits could not be assigned correctly, and it would not be possible to determine where a repletion starts and where it ends. With an end of frame condition, the software can calculate the length of one single array within a frame. But if there were more arrays, it would be impossible to know which array was how long.

The variable length array can also be the last cell of a frame. In this case, no delimiter is required. If decoded successfully, the detailed view in the results table shows the elements of the array. If the cell name of the array is "Data", then the detail view of result table displays the elements with an array index as "Data: 1", "Data: 2" ... etc.

If the variable length array cell is selected, it is shown as array [n], where n is the actual size detected in the waveform.

As an exception to the rule, it is permissible to assign the variable length array to consecutive fields. In this case, the fields are treated as a structure which is repeated. For example, if two consecutive fields are defined as A[] and B[], the decoder creates a sequence of ABABAB until the end condition has been detected.

Note: It is possible to combine check functions in a dynamic array. In the example above, if B[] is extended by odd(1), with "1" being the index of A[], then B checks the parity for each index of A.

"crc5usb(n-m)"	The **crc 5-bit** operator performs a check for a 5\-bit CRC function using the polynomial as defined by the USB standard. n and m define the index range for the CRC check. For example, if the CRC shall check fields 1 to 4, the function shall be written "crc5usb(1-5)". If the range of the CRC check includes an array, all elements in the array is included in the CRC check. If the check fails, the CRC field is marked as "CRC error" in the result details and displayed in the color red in the honeycomb display. The frame that contains the field is marked in the same way, except if another higher priority error is found within this frame.
"odd(n-m), even(n-m)"	The "**parity**" operators perform checks on odd or even parity in the given index range n to m. Odd parity is fulfilled if the count of "1" bits in the range including the parity bit is odd. Even parity is fulfilled if the count of "1" bits in the range including the parity bit is even. If the parity check fails, the parity field is marked as "CRC error" in the result details and displayed in red color in the honeycomb display. The frame that contains the field is marked in the same way, except if another higher priority error is found within this frame.
"{Block}"	The **block** operator is represented by the "{" and "}" bracket signs. Consecutive fields marked with "{Block}" and using the same name are displayed in the honeycomb display as a consecutive packet of name "Block" with the first field's color. This feature is a visual effect in the honeycomb only.

Remote command:
`BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CONDition` on page 2353

Format
Selects from the following numeric data formats for the Condition value:
- Decimal
- Hexadecimal
- Octal
- Binary

The following rules apply:
- If the condition value contains at least one "H", "h", "L", "l", "X", "x", and the remaining characters only contain "1" and/or "0", the numeric format is automatically interpreted as binary, regardless of its definition.
- The wild-card characters "x" and "X" are only supported in binary format.
  Examples: If the numeric format is set to be "HEX", then:
  – "=1HL111000" is valid (read as binary)
  – "=0x10101" is valid (read as binary, the "x" is interpreted here as a wild card)
  – "=1010" is valid (read as HEX, with a total of 16 bits)
  – "=0x5A" is valid (read as HEX "5A", since "0x" is a valid HEX prefix; nevertheless, it is recommended to enter "5A" instead)
  – "=5X12" is invalid
  – "=1H33" is invalid

Remote command:
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:FORMat on page 2353

Bit Order
This defines, in which order the bits of a cell's Condition value are evaluated: either the most significant bit (MSB) or the least significant bit (LSB) first. Since the bit order is considered for the interpretation of the condition, you should specify MSB or LSB correctly.

Remote command:
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:BITorder on page 2353

Color
Opens a dialog to select the color representation of different cells in the honeycomb display. Assigning user-selected colors helps to interpret the decode results more easily.

In the "Adjust Colors" dialog, you can either select one of the predefined colors or define a new one.

Remote command:
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CRGB on page 2354

Result
This determines which cells shall be displayed in which result columns of the decode table. No index means that the result is not displayed. The decode table supports three result columns, which have to be unique for each frame type. For different frame types, though, the user can define different result columns, to display unrelated information.

Note: To see more than the three selected results, bring up a full list of the states and values of all cells by activating "Show details" in the decode table dialog.


Remote command:
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CLMN on page 2355

Open or Save XML File
For efficient working and for convenient exchange of frame descriptions, they can both be loaded ("Open") or saved ("Save" / "Save As...") in XML file format. "Explore..." opens the SaveXML folder, which is the "Default Path" for saving frame descriptions.

Remote command:
BUS<b>:CMSB:LOAD on page 2355
BUS<b>:CMSB:SAVE on page 2356

14.18.2.4 Shortcuts

The "Shortcuts" tab gives quick access to other dialogs with protocol relevant settings.

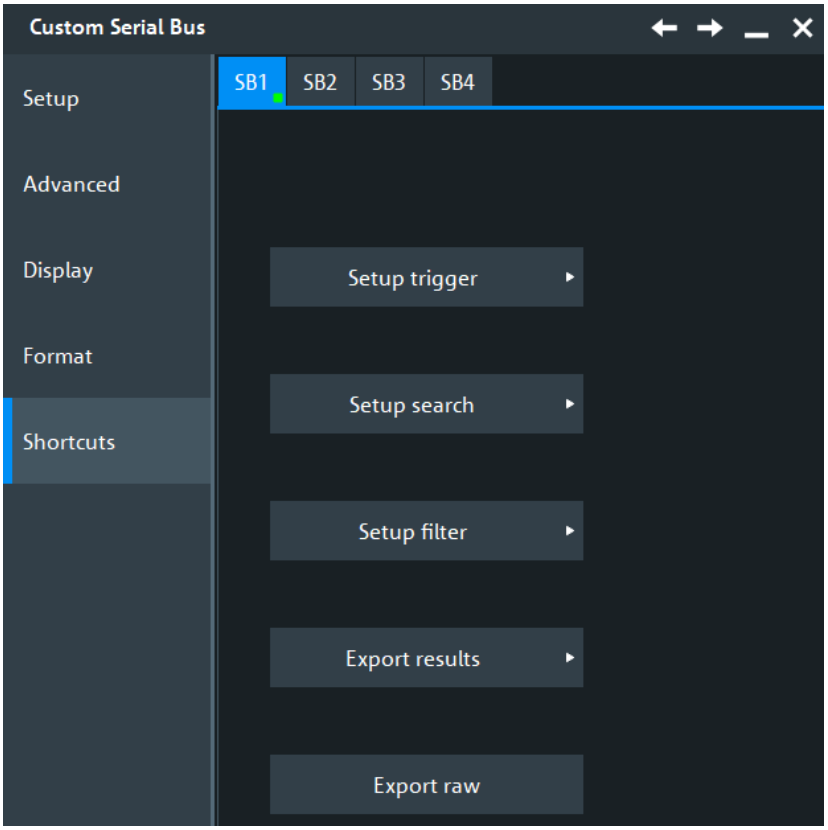

Export Raw
Decodes the data and exports the raw data to an excel file. The file is saved under:

`c:\\Users\\Public\\Documents\\Rohde-Schwarz\\RTx\\ResultBoxExports\\CustomSBRawBits.csv`

14.18.2.5 XML syntax

This chapter explains the required grammar and syntax of `XML` files, which contain custom frames and can be loaded or saved. Below is a typical example of such an `XML` file:

```
<?xml version="1.0" encoding="utf-8"?>
<FrameDescription xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" Version="1" xsi:noNamespaceSchemaLocation=".\Schema\FrameDescription.xsd">
  <Frame Type="00">
    <Format Name="Start Delim" BitCount="16" Condition="=1010101010HL" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="ffff00" Column="-"/>
    <Format Name="OP-00" BitCount="8" Condition="=00000000" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="0080ff" Column="1"/>
    <Format Name="data" BitCount="8" Condition="[]" NumericFormat="Hex" BitOrder="MSB First" ColorRGB="10a500" Column="2"/>
    <Format Name="End Delim" BitCount="8" Condition="=1HLHL101" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="ffff00" Column="-"/>
  </Frame>
  <Frame Type="01">
    <Format Name="Start Delim" BitCount="16" Condition="=1010101010HL" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="ffff00" Column="-"/>
    <Format Name="OP-01" BitCount="8" Condition="=00000001" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="0080ff" Column="1"/>
    <Format Name="data" BitCount="8" Condition="[]" NumericFormat="Hex" BitOrder="MSB First" ColorRGB="10a500" Column="2"/>
    <Format Name="CRC" BitCount="16" Condition="" NumericFormat="Hex" BitOrder="MSB First" ColorRGB="ff808080" Column="2"/>
    <Format Name="End Delim" BitCount="8" Condition="=1HLHL101" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="ffff00"" Column="-"/>
  </Frame>   <Frame Type="ff">
    <Format Name="Start Delim" BitCount="16" Condition="=1010101010HL" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="ffff00" Column="-"/>
    <Format Name="OP-ff" BitCount="8" Condition="=11111111" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="0080ff" Column="1"/>
    <Format Name="data" BitCount="8" Condition="[]" NumericFormat="Hex" BitOrder="MSB First" ColorRGB="ffb233af" Column="2"/>
    <Format Name="CRC" BitCount="16" Condition="" NumericFormat="Hex" BitOrder="MSB First" ColorRGB="ff808080" Column="2"/>
    <Format Name="End Delim" BitCount="8" Condition="=1HLHL101" NumericFormat="Binary" BitOrder="MSB First" ColorRGB="ffff00" Column="-"/>
  </Frame>
</FrameDescription>
```

Figure 14-20: Example of XML file syntax with three custom frame format descriptions

The first out of three XML frames in Figure 14-20 is interpreted by the software in the following way:

A suitable XML file as shown in Figure 14-20 is composed as follows:

Header:

```
<?xml version="1.0" encoding="utf-8"?>
```

Root Element:

```
<FrameDescription xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
 Version="1" xsi:noNamespaceSchemaLocation=".\Schema\FrameDescription.xsd">
```

The root element contains the "Frame Description" attributes, including a link for the file`FrameDescription.xsd`. This schema file, which is installed in the system, enables the software to validate an XML file before opening it.

Frame:

A frame description must include between *0* and *n* tags of the following kind:

```
<Frame> </Frame>
```

Frame Type:

Each "<Frame>" tag requires a "Type" attribute in string format:

```
<Frame Type = "string">
```

Tells the software the name of each frame.

Format:

Each frame must include between *1* and *n* tags of the following kind:

```
<Format> </Format>
```

Together with the attributes, this is written in short form, as in Figure 14-20:

```
<Format attribute... attribute... attribute... />
```

The format describes the fields in each frame. It can have the following attributes:


- "Field Name", in string format.
- "Bit count" specifies the length of bits, in numerical format.
- "Condition" (optional) identifies the bit pattern to match, in string format.
- "Format" allows the following choices:
  - "Decimal"
  - "Hex"
  - "Octal"
  - "Binary"
- "Bit order" allows two alternatives:
  - "MSB First" (most significant bit first)
  - "LSB First" (least significant bit first)
- "Color" allows you to set a user defined ARGB hexadecimal color value.
- The "Result Column" has four options:
  - "-" (none, which is the default)
  - "1"
  - "2"
  - "3"

14.18.2.6 Custom: Manchester / NRZ display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

To enhance the decode possibilities of the custom serial protocol, you can use an additional setting in the "Display" tab: "Decode layer".

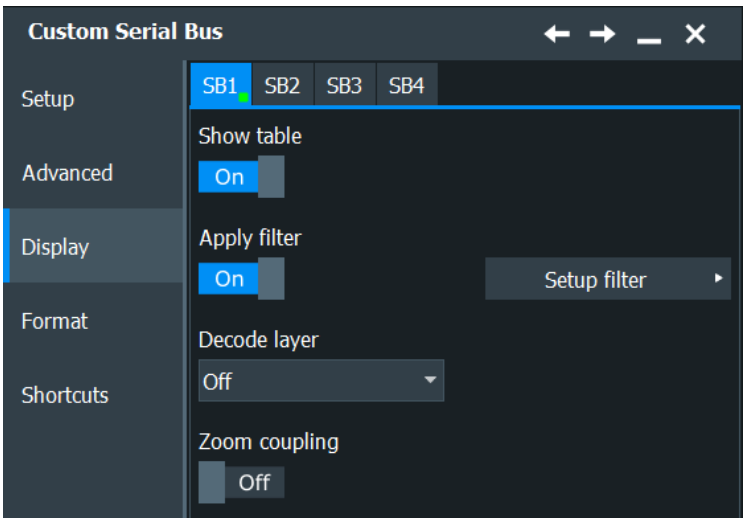

Apply Filter
Enables filtering on a custom serial bus. For details see: Section 14.18.4, "Custom filter", on page 857.

Remote command:
BUS<b>:CMSB:FILTer:ENABle on page 2363

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Final" ...

"Edges" ...

"Binary" ...

"Synchronization" ...

14.18.2.7 Configuring custom Manchester / NRZ signals

For configuration, assign the lines to the input channels, define the active states and the logical thresholds, and specify frame format descriptions.

Serial bus setup

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select the protocol: "Custom".
4. Switch to the "Trigger" tab, tap "Source" and select "Serial bus".

   This prevents using digital waveforms (Math and Reference) as channel signals.

   Note: For triggering on a custom serial bus, analog input channels are required.
5. Switch back to the "Decode" tab.
6. Tap "Coding Standard" and select the coding ("Manchester", "Manchester II", "NRZ Clocked", or "NRZ Unclocked") you want to set up.
7. Select the polarity and phase of the data signal (and potentially of the clock signal).
8. Set the logical thresholds. See "Set Thresholds" on page 836.
9. Enable "Decode".
10. Switch to the "Format" tab and open or create frame format descriptions.

For details on configuration settings, see Section 14.18.2.1, "Custom: Manchester / NRZ configuration settings", on page 832.

14.18.3 Custom: Manchester / NRZ trigger

If you need information on how to get started with triggering on Custom serial bus signals, see Section 14.18.3.2, "Triggering on custom Manchester / NRZ serial bus", on page 857. Otherwise proceed with the Custom serial bus trigger settings.


14.18.3.1 Custom: Manchester / NRZ trigger settings

Access: [Bus] > "Trigger" tab > "Source = Serial Bus" > select "Protocol = Custom"

In this section, all trigger settings are described. Their availability on the instrument depends on the selected coding standard and trigger type. The user interface of the instrument displays only appropriate settings and guides you through the trigger setup.

You can adjust the "Gap time" and "Bit rate" also in the "Trigger" tab if necessary.

For a list of supported trigger conditions, refer to the specifications document.

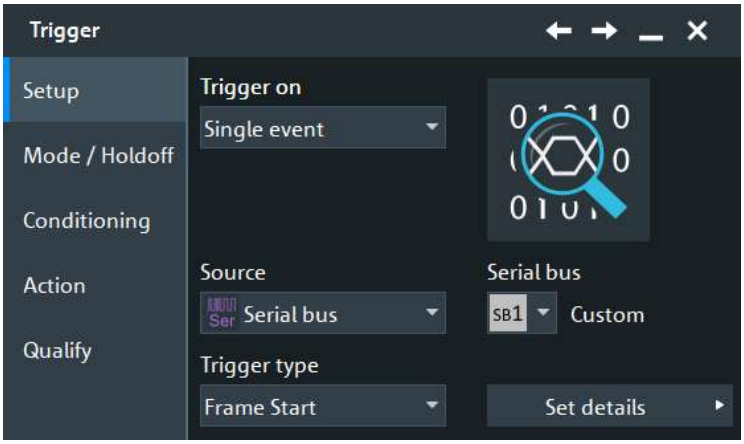

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.


Type
Defines the trigger type for custom serial bus analysis. The available trigger types are "Frame Start", "Pattern" and "Advanced".

Remote command:
`TRIGger<t>:CMSB:TYPE` on page 2357

Frame Start ← Type
For Manchester and NRZ Clocked coding standards, the frame start trigger is set to the end of the gap time. The start of frame (SOF) condition is the first bit after the gap (timeout).

For the NRZ Unclocked coding standard, the trigger requires that the signal contains a start bit. The frame start trigger follows the gap time and is set to the end of the start bit.

Pattern ← Type
Specifies the pattern match conditions for a payload data check. The trigger is set to the first occurrence of a matching data bit pattern (which can be freely specified), starting after the minimum gap time, and after the detected start of the data frame. The trigger instant is after the last bit of the specified data pattern.

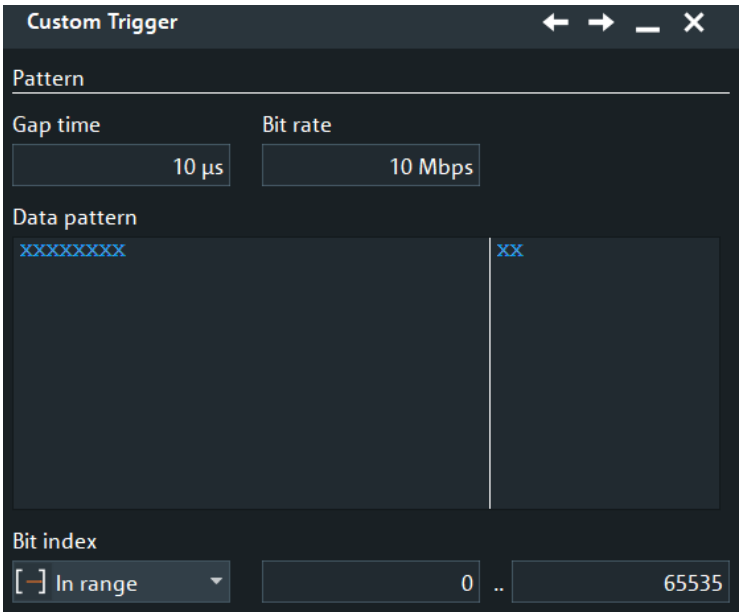

"Data Pattern" Specifies the data pattern that is to be found and triggered. The pattern can be entered in binary or hexadecimal format, maximum pattern length is 256 binary characters or 64 hexadecimal characters.

"Bit index operator" Sets the operator ("Equal", "Greater or equal", or "In range") to set a specific bit index (data position).

"Bit index" Sets the bit index (data position), or the start value of a bit index range. Default bit index value is 0, permitted values range from 0 to 65535.

"Bit index to" Sets the end value of a bit index range (data position range). Available only, if the "Bit index operator" is set to "In range". Default bit index end value is 65535, permitted values range from 0 to 65535.

"Word Length" Sets the number of bits in an NRZ Unclocked word (hence, the size of the data frame). Default word length is 8 bits, permitted lengths range from 0 bits to 31 bits.

Note: The NRZ Unclocked coding standard requires a signal that contains both a start bit and a stop bit:

- The start bit should be opposite in polarity to the idle state of the signal, and it is the first transition detected following the gap time.
- The stop bit should be the same polarity of the idle state, and it is the last bit in a data frame.

The end of the stop bit and the detection of the next frame's start bit constitutes the maximum gap time.

In order for the trigger to operate correctly, **you have to specify** the correct word length in the trigger menu. The trigger then counts the number of bits it decodes, and when the count matches the word length, the next bit is treated as the stop bit.

"Gap Time" Sets the minimum gap time for synchronization. The trigger is set to a position after the gap time, when the other trigger conditions are met. Default gap time is 10 µs, permitted gap times range from 1 ns to 1 s.


"Bit Rate" Sets the transmission speed for the data signal. Default bit rate is 10 Mbps, permitted bit rates range from 300 bps to 50 Mbps.

Remote command:
`TRIGger<t>:CMSB:PATTern` on page 2357
`TRIGger<t>:CMSB:ICONdition` on page 2357
`TRIGger<t>:CMSB:IMIN` on page 2358
`TRIGger<t>:CMSB:IMAX` on page 2358
`BUS<b>:CMSB:GAPTime:VALue` on page 2350
`TRIGger<t>:CMSB:NRZ:WRDLength` on page 2358

Advanced
Trigger on various frame types, fields in the frames, and data patterns.

Which settings are available, depends on what you have defined in the "Format" tab.

You can further refine the trigger criteria, selecting which frames you want to select for the triggering and what conditions their field values must fulfill.

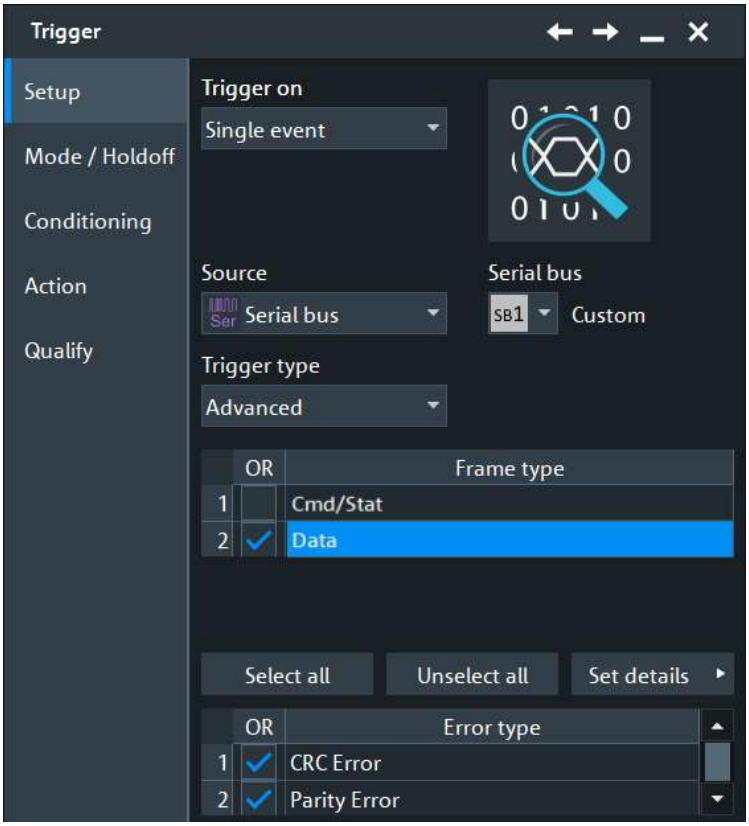

Error types: Item name, Enable ← Advanced
The table lists the error types you can trigger on. Select the required errors in the "Enable" column. Available are "CRC" error and "Parity" error.

Remote command:
`TRIGger<t>:CMSB:ADVanced:ERENable` on page 2361
`TRIGger<t>:CMSB:ADVanced:ERRor<n>:ENABle` on page 2361

Frame type ← Advanced
Selects the frame type for the custom bus trigger analysis.

You can define individual checking parameters for the fields listed in the "Trigger type dependent settings".

To specify these parameters, select a field from this list and define the data and/or index operators and values, or the bit state.

The trigger instant is the last criterion that is fulfilled.

Remote command:
`TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:ENABle` on page 2359

Field name / Condition / Enable ← Advanced
This table lists the field numbers and names in the selected frame together with a summary of the user settings of checking conditions for each field and a checkbox to enable the checking.

Select a field in the table to specify the checking conditions for this field in the "Data", "BitState" and/or "Index" dialog (whichever applies). The condition is only applied, and the "Condition" is only shown in the table, if "Enable" is checked.

Remote command:
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:ENABle on page 2359
TRIGger<t>:CMSB:ADVanced:FIENable on page 2359

BitState ← Advanced
Defines the bit state to be checked for the selected field. Permitted bit states are "1", "0" or "X" (do not care).

Remote command:
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:BIT on page 2359
TRIGger<t>:CMSB:ADVanced:BIT on page 2359

Data ← Advanced
Defines for the selected field, how a data check is executed.

"Condition" Defining specific data or a data range requires to set the operator to one of the following conditions: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies data or sets the start value of a data range.

"Max" Sets the end value of a data range, if "Condition" is set to "In range" or "Out of range".

Remote command:
TRIGger<t>:CMSB:ADVanced:DMAX on page 2360
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DMAX on page 2360
TRIGger<t>:CMSB:ADVanced:DMIN on page 2360
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DMIN on page 2360
TRIGger<t>:CMSB:ADVanced:DOPerator on page 2361
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DOPerator on page 2361

Index ← Advanced
Defines for the selected field, how an index check is executed.

"Condition" Defining a specific index or an index range requires to set the operator to one of the following conditions: equal, in range.

"Min" Specifies the index or sets the start value of an index range.

"Max" Sets the end value of an index range, if "Condition" is set to "In range".

Remote command:
TRIGger<t>:CMSB:ADVanced:IMAX on page 2361
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IMAX on page 2361
TRIGger<t>:CMSB:ADVanced:IMIN on page 2362
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IMIN on page 2362
TRIGger<t>:CMSB:ADVanced:IOPerator on page 2362
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IOPerator on page 2362

14.18.3.2 Triggering on custom Manchester / NRZ serial bus

Prerequisite: A bus is configured for the custom serial bus signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and select the "Trigger" tab.
2. Press the "Select" button. The "Source" button is shown.
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to Custom.
5. Tap "Type" and select the trigger type to be used for custom serial bus protocol analysis.
6. Depending on the selected custom serial bus coding standard, more setup conditions have to be specified.

For information on how to proceed with the configuration settings, see Section 14.18.3.1, "Custom: Manchester / NRZ trigger settings", on page 852.


14.18.4 Custom filter


With the filter function you can display only selected events in the acquired data. Only one single filter can be enabled on the protocol at a time.

14.18.4.1 Custom filter settings

Access:

1. Press [Bus].
2. Set "Protocol = Custom".
3. In the "Display" tab, enable "Apply filter".
4. Open "Setup filter".

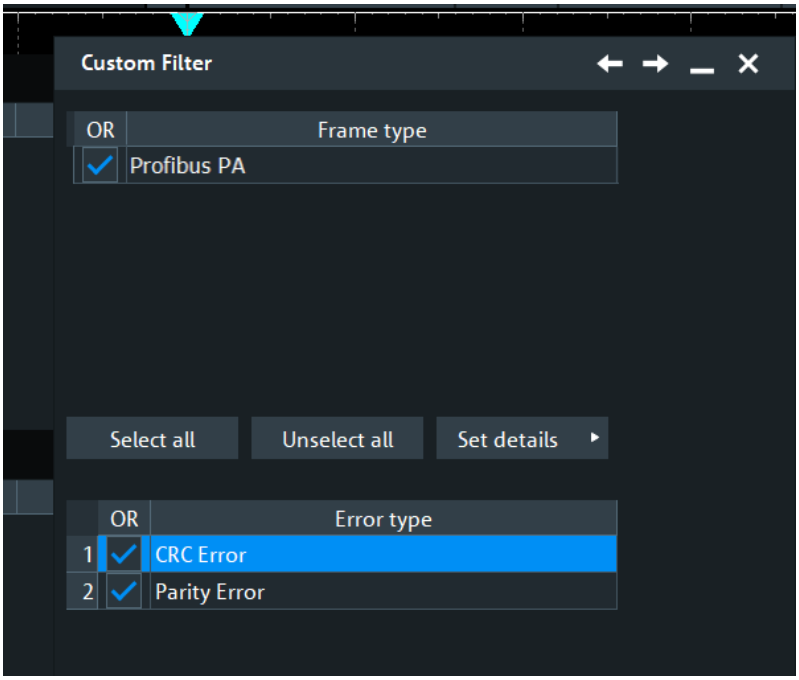

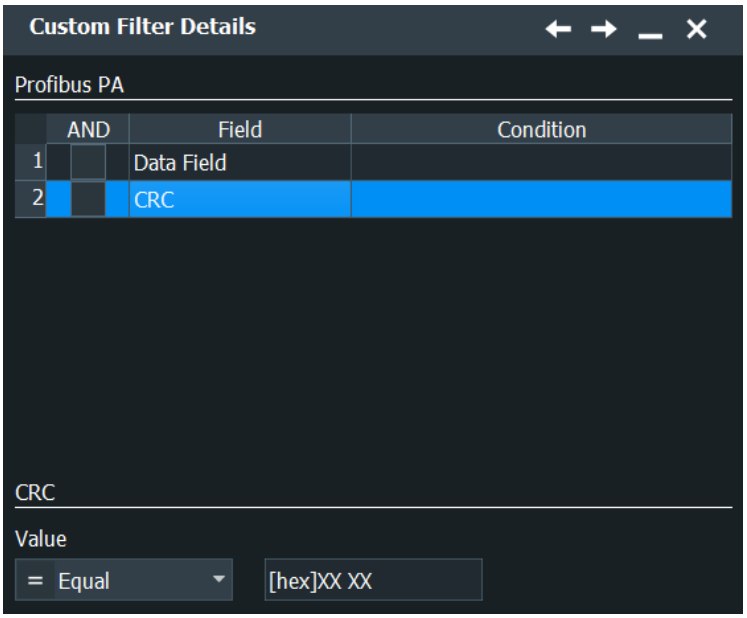

Frame type
Selects the frame type for the custom bus filtering.

You can define individual checking parameters for the fields listed in the "Trigger type dependent settings".

To specify these parameters, select a field from this list and define the data and/or index operators and values, or the bit state.

Remote command:
`BUS<b>:CMSB:FILTer:FRAMe<fr>:ENABle` on page 2366

Error types: Item name, Enable
The table lists the error types you can filter on. Select the required errors in the "Enable" column. Available are "CRC" error and "Parity" error.

Remote command:
BUS<b>:CMSB:FILTer:ERRor<n>:ENABle on page 2364

Field name / Condition / Enable
This table lists the field numbers and names in the selected frame together with a summary of the user settings of checking conditions for each field and a checkbox to enable the checking.

Select a field in the table to specify the checking conditions for this field in the "Data", "BitState" and/or "Index" dialog (whichever applies). The condition is only applied, and the "Condition" is only shown in the table, if "Enable" is checked.

Remote command:
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2364

Bit State
Defines the bit state to be checked for the selected field. Permitted bit states are "1", "0" or "X" (do not care).

Remote command:
BUS<b>:CMSB:FILTer:BIT on page 2364
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2364

Data
Defines for the selected field, how a data check is executed.

"Condition" Defining specific data or a data range requires to set the operator to one of the following conditions: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies data or sets the start value of a data range.

"Max" Sets the end value of a data range, if "Condition" is set to "In range" or "Out of range".

Remote command:
BUS<b>:CMSB:FILTer:DMAX on page 2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2365
BUS<b>:CMSB:FILTer:DMIN on page 2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2365
BUS<b>:CMSB:FILTer:DOPerator on page 2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2365

Index
Defines for the selected field, how an index check is executed.

This function is avalible only for array fields.

"Condition" Defining a specific index or an index range requires to set the operator to one of the following conditions: equal, in range.

"Min" Specifies the index or sets the start value of an index range.

"Max" Sets the end value of an index range, if "Condition" is set to "In range".

Remote command:
BUS<b>:CMSB:FILTer:IMAX on page 2366
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2366
BUS<b>:CMSB:FILTer:IMIN on page 2366
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2366
BUS<b>:CMSB:FILTer:IOPerator on page 2367
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2367

14.18.5 Custom: Manchester / NRZ decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".
2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show binary".
3. If required, enable "Zoom coupling"

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

In contrast to other protocols, the instrument captures and decodes customizable serial bus signals according to the individual frame configuration.

Decode Results Table

The "Decode results" table contains information about all decoded frames.

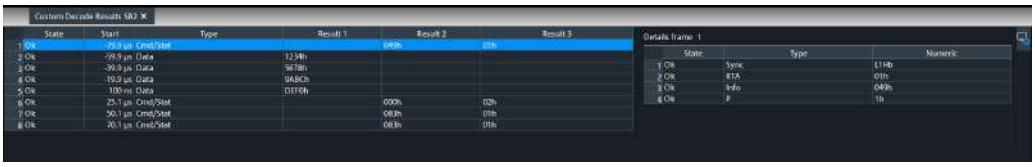


Table 14-28: Content of the "Decode results" table

Column	Description
State	Overall state of the frame: either OK or the relevant error condition (e.g. preamble, length)
Start	Start time of the frame

Column	Description
Type	Frame type as specified in the "Frame type" field of the "Frame Format" description dialog
Result 1	1st field content as specified in the "Result" of the "Frame Format" description dialog
Result 2	2nd field content
Result 3	3rd field content

Table 14-29: Content of the "Decode results details" table

Column	Description
State	Overall state of the cell: either OK or the relevant error condition (e.g. length error)
Type	The type of frame, as specified with the "Frame type"
Numeric	Data content of the cell (e.g. 0x1, 1000LL00L)

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.19.4, "Decode results", on page 2367.

14.18.6 Search on decoded custom Manchester / NRZ data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

If you need information on how to get started with searching custom serial bus data, see Section 14.18.6.3, "Searching custom serial bus data", on page 863. Otherwise proceed with the custom serial bus search setup.

14.18.6.1 Custom Manchester / NRZ search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

Search criteria
Use the "Search criteria" dialog to define the event types to be searched. Available event types are "Frame" and "Error".

Individual search parameters, which do not depend on the coding standard and trigger settings of the custom serial bus, can be specified in the tabs below the "Search criteria" dialog.

Frame
Searches for four different frame conditions.

Remote command:
SEARch:TRIGger:USBPd:ERENable on page 2517
SEARch:TRIGger:CMSB:ERRor<m>:ENABle on page 2374
SEARch:TRIGger:CMSB:FIENable on page 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:ENABle on page 2375
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:ENABle on page 2518
SEARch:TRIGger:CMSB:FRENable on page 2374
SEARch:TRIGger:CMSB:FRAMe<fr>:ENABle on page 2374
SEARch:TRIGger:CMSB:BIT on page 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:BIT on page 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:BIT on page 2375
SEARch:TRIGger:CMSB:DMAX on page 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMAX on page 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMAX on page 2376
SEARch:TRIGger:CMSB:DMIN on page 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMIN on page 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMIN on page 2376
SEARch:TRIGger:CMSB:DOPerator on page 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DOPerator on page 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DOPerator on page 2377
SEARch:TRIGger:CMSB:IMAX on page 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMAX on page 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMAX on page 2377
SEARch:TRIGger:CMSB:IMIN on page 2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMIN on page 2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMIN on page 2378
SEARch:TRIGger:CMSB:IOPerator on page 2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IOPerator on page 2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IOPerator on page 2378

Error Condition
Searches for two error conditions: "CRC Error" or "Parity Error".

Remote command:
SEARch:TRIGger:CMSB:ERRor<m>:ENABle on page 2374

14.18.6.2 Custom serial bus search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands are listed in Section 26.18.19.6, "Search results", on page 2379

14.18.6.3 Searching custom serial bus data

Prerequisite: A serial bus is configured for the custom serial bus signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Specify search criteria according to Section 14.18.6.1, "Custom Manchester / NRZ search setup", on page 861.
5. To acquire a waveform, press [Single].

   The R&S RTP performs a custom serial bus decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
6. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.19 8b/10b (option R&S RTP-K52)

The 8b/10b coding scheme is used for high-speed serial data transmission, used by different standards, like fibre channel, PCIe, DVI and USB 3.0. Also the MIPI UniPro M-PHY interface in smartphones and display interfaces such as HDMI use 8b/10b encoding, as do base stations based on the Common Public Radio Interface (CPRI).

The R&S RTP can decode differential and single-ended 8b/10b signals. Furthermore, you can search the decoded data to isolate data contents and error states such as disparity violations.

You can also trigger on defined data contents and on error states.

- The 8b/10b code 864
- 8b/10b configuration 864
- 8b/10b trigger 869
- 8b/10b decode results 872
- Search on decoded 8b/10b data 873

14.19.1 The 8b/10b code

The 8b10b is a code where an 8-bit parallel data input is mapped into a 10-bit output. This code achieves a DC-balance and bounded disparity and simultaneously allows a reasonable clock recovery.

In the coding scheme, the original 8 bits are split into two blocks, three most significant bits and five least significant bits, see Figure 14-21. After that the 3-bit block is encoded into 4 bits and the 5-bit block into 6 bits. The 4-bit and the 6-bit blocks are then combined into a 10-bit.

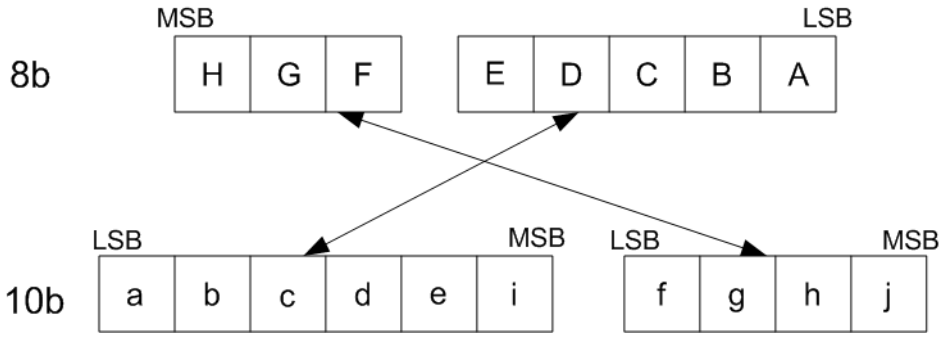


Figure 14-21: Coding scheme of the 8b/10b

The additional two bits I and j that join the stream are variable and ensure the running disparity.


There are two types of characters used in the 8b/10b coding, special characters Kx.y and data characters Dx.y. x denotes the decimal value of EDCBA and is within the range from 0 to 31. y denotes the decimal value of HGF and is within the range 0 to 7.

14.19.2 8b/10b configuration

14.19.2.1 8b/10b configuration settings

Access: [Bus] > "8b/10b" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

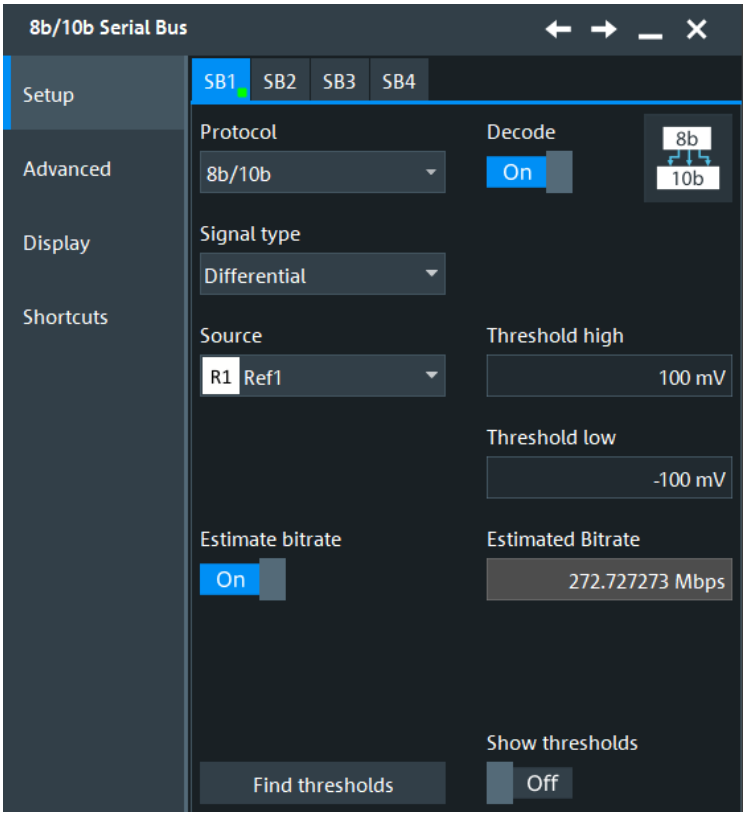

See also: Section 14.1.1, "Setup - general settings", on page 556

Signal type
Selects the signal type that is used for the decoding. You can choose between a differential and single-ended signal.

Remote command:
`BUS<b>:EBTB:TYPE` on page 2390

Source
Selects the source of the provided differential signal , if "Signal type" > "Differential".

Remote command:
`BUS<b>:EBTB:DIFFerential:SOURce` on page 2386

Source D+
Selects the source of the provided single ended signal, if "Signal type" > "Single ended".

Remote command:
`BUS<b>:EBTB:DPLus:SOURce` on page 2388

Source D-
Selects the source of the provided single ended signal , if "Signal type" > "Single ended".

Remote command:
BUS<b>:EBTB:DMINus:SOURce on page 2388

Threshold High
Sets the threshold high of the signal, if "Signal type" > "Differential".

Remote command:
BUS<b>:EBTB:DIFFerential:THRHigh on page 2387

Threshold Low
Sets the threshold low of the signal, if "Signal type" > "Differential".

Remote command:
BUS<b>:EBTB:DIFFerential:THRLow on page 2387

Threshold D+
Sets the high threshold (D+) of the signal, if "Signal type" > "Single ended".

Remote command:
BUS<b>:EBTB:DPLus:THReshold on page 2389

Threshold D-
Sets the high threshold (D-) of the signal, if "Signal type" > "Single ended".

Remote command:
BUS<b>:EBTB:DMINus:THReshold on page 2388

Find thresholds
Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
BUS<b>:SETReflevels on page 1834

Bitrate
Sets the number of transmitted bits per second.

Remote command:
BUS<b>:EBTB:BITRate on page 2386

Estimate Bitrate
Starts a software algorithm for the automatic determination of the bitrate. The value is displayed in the "Estimated Bitrate".


Remote command:
BUS<b>:EBTB:BITDetermi on page 2390
BUS<b>:EBTB:EBTRate? on page 2386

Show thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
BUS<b>:THReshold on page 1835

14.19.2.2 Advanced settings

Access: [Bus] > "Advanced" tab.

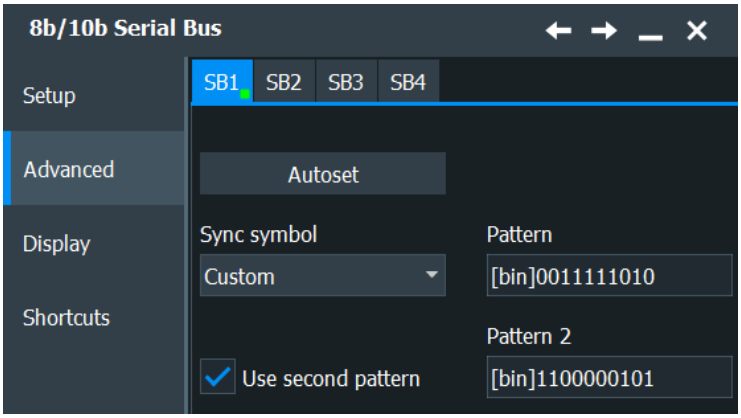

Autoset
Starts software algorithms for determining the signal threshold levels and bitrate.

Remote command:
BUS<b>:FAUToset on page 1834

Sync symbol
Selects the sync symbol, a control symbol used for low-level control functions. You can select one of the comma control symbols (K28.1, K28.5, K28.7) used for synchronization or you can enter a pattern.

Remote command:
BUS<b>:EBTB:SYNC on page 2390

Pattern
Selects a pattern that serves as a sync symbol.

Remote command:
BUS<b>:EBTB:FCSY on page 2389


Pattern 2
Enables a second pattern that serves as a sync symbol and sets its value.

Remote command:
BUS<b>:EBTB:SCSY on page 2389
BUS<b>:EBTB:USCS on page 2390

14.19.2.3 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

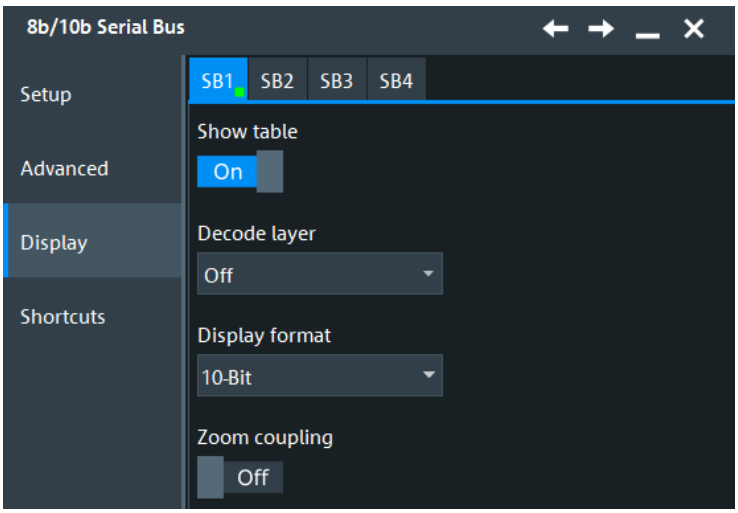

Display Format
Selects the display format for the results of the display table.

Remote command:
`BUS<b>:EBTB:DISF` on page 2387

14.19.2.4 Configuring 8b/10b

For configuration, you assign the line to the input channel, set the threshold, the bitrate, and the sync symbol.

For details on configuration settings, see Section 14.19.2.1, "8b/10b configuration settings", on page 864.


1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, set "Protocol"="8b/10b".
4. Tap the "Signal type" button, and select the used signal type for the measurement.
5. Select the source for the signal type.
6. Tap "Autoset".
7. Check the threshold and bitrate settings. Adjust the values if necessary.
8. Select the "Sync symbol" to be used for decoding.
9. Enable "Decode".

14.19.3 8b/10b trigger

If you need information on how to get started with triggering on 8b/10b signals, see Section 14.19.3.2, "Triggering on 8b/10b data", on page 872. Otherwise proceed with the 8b/10b trigger settings.

14.19.3.1 8b/10b trigger setup

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

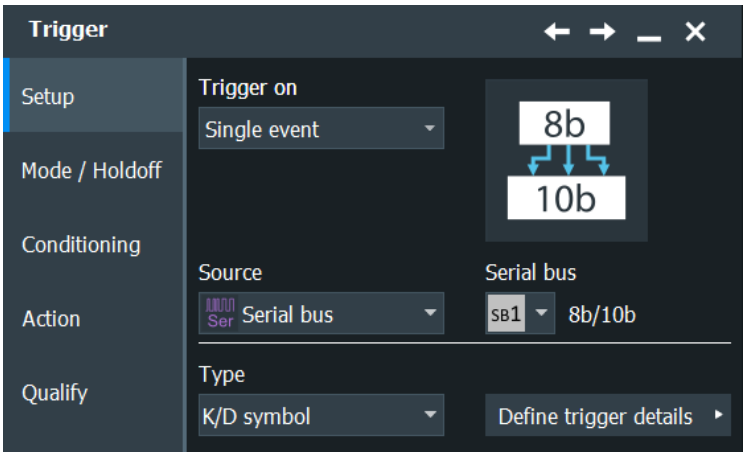


Type 8b/10b
Selects the type of condition to be triggered on. Available are:

- "K/D symbol"
- "8 bit pattern"
- "10 bit pattern"
- "Expression"
- "Error Condition"

Press "Define trigger details" to open a dialog for defining trigger type dependent settings.

Remote command:
`TRIGger<t>:EBTB:STYPe` on page 2393

K/D symbol
Selects the data character (Dx.y) or control character to be triggered on.

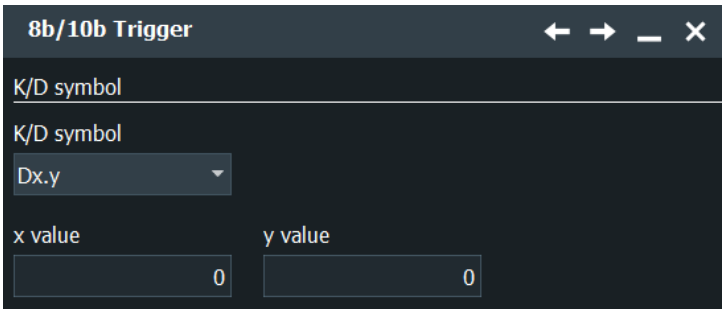

K/D Codes Symbol ← K/D symbol
Selects the control character.

Remote command:
TRIGger<t>:EBTB:SYMType on page 2393


x value ← K/D symbol
Sets the x value of the data character Dx.y to be triggered on, if "K/D symbol" > "Dx.y".

Remote command:
TRIGger<t>:EBTB:DX on page 2392

y value ← K/D symbol
Sets the y value of the data character Dx.y to be triggered on, if "K/D symbol" > "Dx.y".

Remote command:
TRIGger<t>:EBTB:DY on page 2392

8 bit pattern
Sets the 8-bit pattern to be triggered on, if "Trigger Type" > "8 bit pattern".

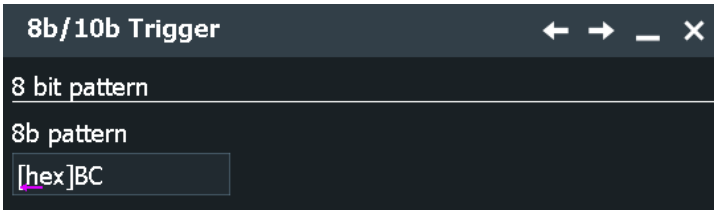


Remote command:
TRIGger<t>:EBTB:EBPA on page 2392

10 bit pattern
Sets the 10-bit pattern to be triggered on, if "Trigger Type" > "10 bit pattern".




Remote command:
TRIGger<t>:EBTB:TBPA on page 2393

Expression
Defines the expression to be triggered on, if "Trigger Type" > "Expression".

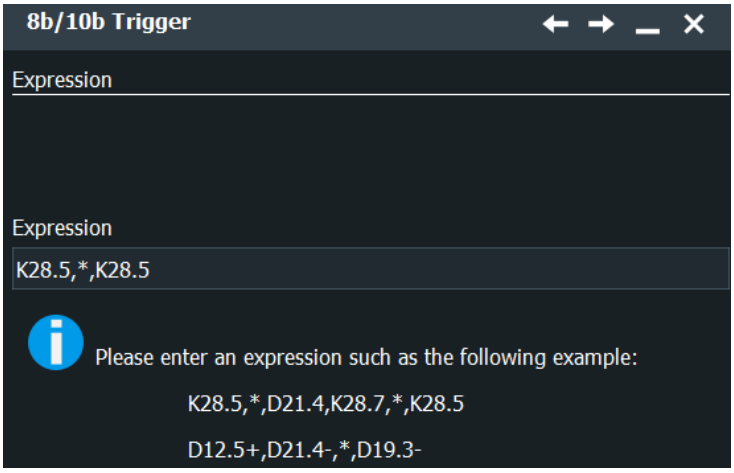

Remote command:
TRIGger<t>:EBTB:SYME on page 2393

Error Condition
Triggers on the selected error conditions.

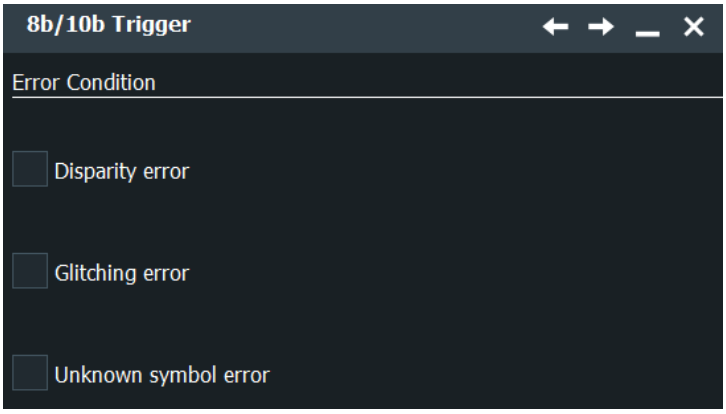

Disparity error ← Error Condition
Triggers on disparity errors.

Remote command:
TRIGger<t>:EBTB:DISParityerr on page 2391

Glitching error ← Error Condition
Triggers on glitch errors.

Remote command:
TRIGger<t>:EBTB:GLITcherror on page 2392

Unknown symbol error ← Error Condition
Triggers on a symbol that is not defined by the 8b/10b.

Remote command:
TRIGger<t>:EBTB:UNK on page 2394

14.19.3.2 Triggering on 8b/10b data

Prerequisite: A bus is configured for the 8b/10b signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Tap "Serial bus" and select the serial bus that is set to 8b/10b.
5. Tap "Type" and select the trigger type to be used for 8b/10b protocol analysis.
6. Depending on the selected trigger type, more setup conditions have to be specified.

For information on how to proceed with the configuration settings, see Section 14.19.3.1, "8b/10b trigger setup", on page 869.

14.19.4 8b/10b decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

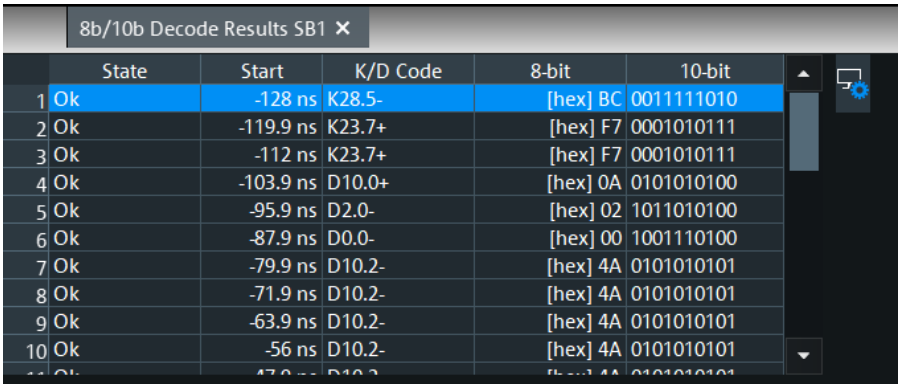


Table 14-30: Content of the decode result table

Column	Description
Symbol	Shows the index number of the symbol
State	Overall state of the symbol
Start	Time of the symbol start in relation to the trigger point
K/D Code	The K/D code
8-bit	The 8-bit value
10-bit	10-bit output value

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands are described in Section 26.18.20.3, "Decode results", on page 2394.

14.19.5 Search on decoded 8b/10b data


Using the search functionality, you can find various events in the decoded data, the same events which you also can trigger on. Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search "Source" to the serial bus that is configured for the protocol to be analyzed.

See also Section 11, "Search functions", on page 463.

14.19.5.1 8b/10b search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

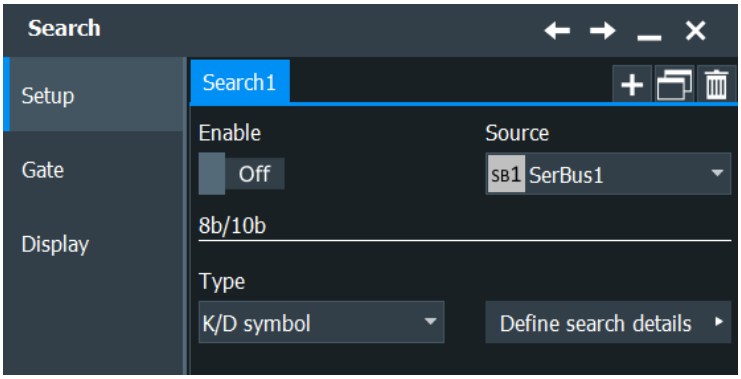

Type
Selects the type of condition to be searched for. Available are:

- "K/D symbol"
- "8 bit pattern"
- "10 bit pattern"
- "Expression"
- "Error Condition"

Press "Define search details" to open a dialog for defining search type dependent settings.

Remote command:
`TRIGger<t>:EBTB:STYPe` on page 2393

K/D symbol
Selects the data character (Dx.y) or control character to be searched for.

K/D Codes Symbol ← K/D symbol
Selects the data character (Dx.y) or control character to bea searched for. You can specify the value of the data character to be searched for with "Dx Value" and "Dy Value".

Remote command:
`SEARch:TRIGger:EBTB:SYMType` on page 2399

y value ← K/D symbol
Sets the y value of the data character Dx.y to be searched for, if "K/D symbol" > "Dx.y".

Remote command:
`SEARch:TRIGger:EBTB:DY` on page 2397

x value ← K/D symbol
Sets the x value of the data character Dx.y to be searched for, if "K/D symbol" > "Dx.y".

Remote command:
`SEARch:TRIGger:EBTB:DX` on page 2397

Error Condition
Searches for the selected error conditions.

Disparity error
Searches for disparity errors.

Remote command:
SEARch:TRIGger:EBTB:DISParityerr on page 2397

Glitching error
Searches for glitching errors.

Remote command:
SEARch:TRIGger:EBTB:GLITcherror on page 2398

Unknown symbol error
Searches for a symbol that is not defined by the the 8b/10b.

Remote command:
SEARch:TRIGger:EBTB:UNK on page 2399

8b Pattern
Sets the 8-bit pattern to be searched for, if "Type" > "8-bit".

Remote command:
SEARch:TRIGger:EBTB:EBPA on page 2398

10b Pattern
Sets the 10-bit pattern to be searched for, if "Type" > "10-bit".

Remote command:
SEARch:TRIGger:EBTB:TBPA on page 2399

Expression
Defines the expression to be searched for, if "Type" > "Expression".

Remote command:
SEARch:TRIGger:EBTB:SYME on page 2399

14.19.5.2 8b/10b search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote Commands:

- SEARch:RESult:EBTB:SCOunt? on page 2400
- SEARch:RESult:EBTB:SYMBol<m>:DATA? on page 2400
- SEARch:RESult:EBTB:SYMBol<m>:STARt? on page 2400
- SEARch:RESult:EBTB:SYMBol<m>:STATus? on page 2401

- SEARch:RESult:EBTB:SYMBol<m>:STOP? on page 2401

14.19.5.3 Searching 8b/10b data

Prerequisite: A serial bus is configured for the 8b/10b signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to 8b/10b (e.g. "SB1", unless already selected).

   The search dialog for 8b/10b protocol analysis is opened.
   There are no additional search criteria to be specified.
5. Tap "Source" and select the serial bus that is set to 8b/10b (e.g. "SB1", unless already selected).
6. Specify search criteria according to Section 14.19.5.1, "8b/10b search setup", on page 873.
7. To acquire a waveform, press [Single].

   The R&S RTP performs a 8b/10b decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
8. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.20 MDIO (option R&S RTP-K55)

The R&S RTP-K55 option enables the R&S RTP to analyse Management Data Input/Output (MDIO) protocols. The option is compatible with the Ethernet standard IEEE 802.3 (http://standards.ieee.org/findstds/standard/802.3-2012.html) and supports simplified triggering and decoding for both variants of MDIO: Clause 22 with basic addressing, and Clause 45 with advanced addressing that meets the requirements of 10 Gigabit Ethernet devices.

- The MDIO protocol....877
- MDIO configuration....878
- MDIO trigger....882
- MDIO decode results....885
- Search on decoded MDIO data....887

14.20.1 The MDIO protocol

MDIO is used for bidirectional transfer of control and status information between the physical layer entity (PHY) and the station management entities (STA).

A major application of MDIO is fault detection by interrogating registers of physical devices. Hence, MDIO serial bus visualization helps debugging new products by giving developers a quick insight into the native data on the bus without using a special decoder.

On physical level, MDIO is a clocked non-return-to-zero (NRZ) code similar to SPI. According to the Ethernet standard, the protocol defines two threshold levels, 2 V and 0.8 V, which establish a hysteresis.

On logical level, MDIO is a fairly simple protocol with a fixed word length of 64 bits. The structure of MDIO frames is shown in the following tables:

Table 14-31: MDIO frame structure according to Clause 22

	Management Frame Fields							
Frame	PRE	ST	OP	PHYAD	REGAD	TA	DATA	IDLE
WRITE	1...1	01	01	AAAAA	RRRRR	10	DDDDDDDDDDDDDDDD	Z
READ	1...1	01	10	AAAAA	RRRRR	Z0	DDDDDDDDDDDDDDDD	Z

Table 14-32: MDIO frame structure according to Clause 45

	Management Frame Fields							
Frame	PRE	ST	OP	PRTAD	DEVAD	TA	ADDRESS / DATA	IDLE
ADDRESS	1...1	00	00	PPPPP	EEEEE	10	AAAAAAAAAAAAAAAA	Z
WRITE	1...1	00	01	PPPPP	EEEEE	10	DDDDDDDDDDDDDDDD	Z
READ	1...1	00	11	PPPPP	EEEEE	Z0	DDDDDDDDDDDDDDDD	Z
POST-READ increment address	1...1	00	10	PPPPP	EEEEE	Z0	DDDDDDDDDDDDDDDD	Z

The following abbreviations are used in the tables:

- PRE = preamble, consisting of 32 logic "one" bits ("1...1")
- PRE = preamble, consisting of 32 logic "one" bits ("1...1")
- ST = start of frame code (2 bits), "01" for Clause 22, "00" for Clause 45, "0X" for any, no other options permitted
- OP = operation code or "OpCode" (2 bits). This is a frame type code specifying the type of transaction.

- PHYAD = address of a physical layer entity (in Clause 22)
- PRTAD = address of a port (in Clause 45)
- REGAD = register address within a PHY (in Clause 22)
- DEVAD = device address within a port (in Clause 45)
- TA = turnaround time, a 2-bit time spacing between REGAD/DEVAD and DATA. The turnaround provides the slave some time to answer upon a read command. TA is hard-wired even in write commands, although it is not required there.
- ADDRESS / DATA = address or payload data, 16 bits
- IDLE = A single value (high-impedance state) indicating to the Physical Medium Attachment (PMA) that there is no data to convey

Instead of a specific hardware trigger, the option R&S RTP-K55 uses a predefined generic serial bus pattern trigger. It simply triggers on a bit pattern in the data stream. This is fast, but limited in the complexity of the conditions.

The MDIO trigger settings allow you to define the MDIO fields individually. The firmware concatenates the settings to a single search pattern that is then used by the serial bus pattern.

While this design is simple, it does not allow triggering on a data range or even inequality. This explains the much simpler structure compared to other protocols.

14.20.2 MDIO configuration

14.20.2.1 MDIO configuration settings

Access: [Bus] > "MDIO" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

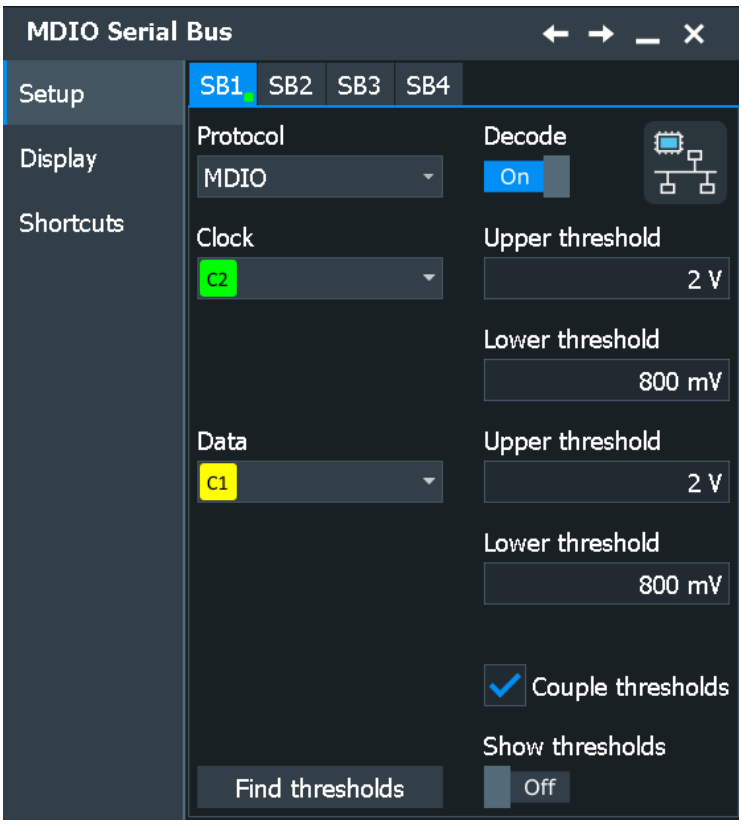


Figure 14-22: Serial bus MDIO protocol configuration dialog

See also: Section 14.1.1, "Setup - general settings", on page 556

Source

MDIO requires two source channels, one for clock and one for data.

"Clock" Defines the source settings for the clock line (management data clock, MDC). Typically, select any of the analog channels "C1" – "C4" or digital channels "D0" – "D15", depending on the test application. "Math" or "Ref" waveforms are also permitted.

"Data" Defines the source settings for the data signal. Typically, select any of the analog channels "C1" – "C4" or digital channels "D0" – "D15", depending on your application, but not the same as for "Clock". "Math" or "Ref" waveforms are also permitted.

Remote command:

`BUS<b>:MDIO:CLOCk:SOURce` on page 2402

`BUS<b>:MDIO:DATA:SOURce` on page 2402

Thresholds

MDIO defines two thresholds for each source line:

- Vih(min) is being used for the rising edge evaluation. This "h" (high) threshold is the minimum value for the signal to be identified as "1". If the signal value comes from a low state (hence, rising edge), the state remains to be considered as low ("0"), until it has risen above Vih(min).

- Vil(max) is being used for the falling edge evaluation. This "I" (low) threshold is the maximum level for the signal to be identified as "0". If the signal value comes from a high state (hence, falling edge), the state remains to be considered as high ("1"), until it has fallen below Vil(max).

There are four ways to set the thresholds for the digitization of the signal lines:

- "Threshold"
  Enter the values directly in the fields.
- "Preset thresholds"
  Allows to select the default threshold settings according to the Ethernet standard: 2.0 V and 0.8 V.
- "Auto thresholds"
  Executes a measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.
- "Couple thresholds"
  Overwrites the data thresholds with the clock thresholds.


Remote command:

`BUS<b>:MDIO:CLOCk:THReshold:HIGH` on page 2403
`BUS<b>:MDIO:CLOCk:THReshold:LOW` on page 2403
`BUS<b>:MDIO:DATA:THReshold:HIGH` on page 2403
`BUS<b>:MDIO:DATA:THReshold:LOW` on page 2404
`BUS<b>:MDIO:PRESet` on page 2404
`BUS<b>:SETReflevels` on page 1834
`BUS<b>:MDIO:COUPling` on page 2404

14.20.2.2 MDIO display settings

Access: [Bus] > "Setup" tab > "Protocol = MDIO" > "Display" tab

To enhance the decode possibilities of the MDIO protocol, you can use an additional setting in the "Display" tab: "Decode layer".

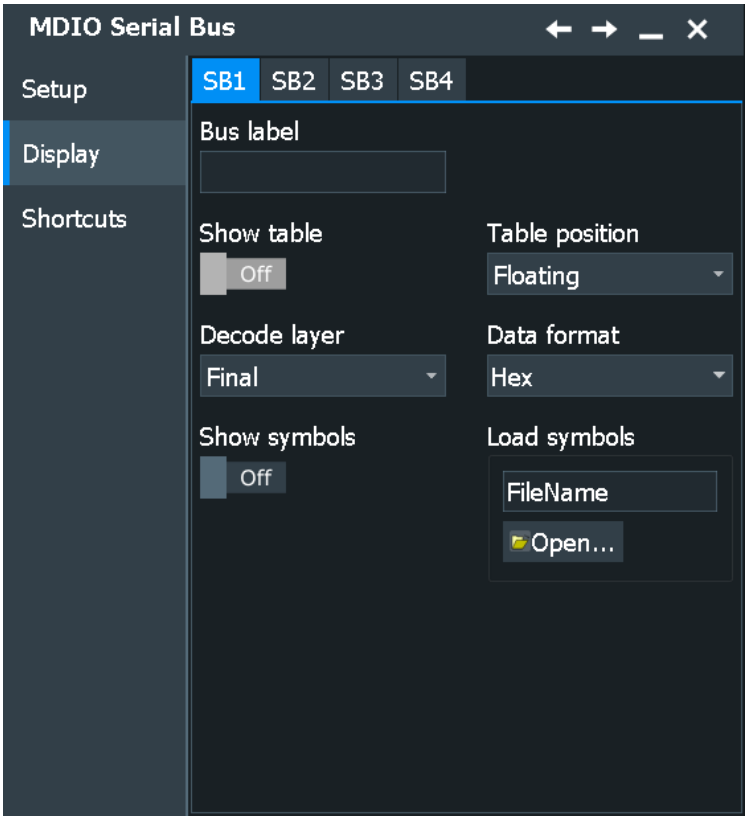

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

MDIO Specific Label Settings

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

Available are:

- "Final"
- "Edges"
- "Binary"

14.20.2.3 Configuring MDIO signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.20.2.1, "MDIO configuration settings", on page 878.


1. Press the [Bus] key on the front panel.

2. Select the tab of the bus you want to set up, for example "SB1".
3. Select the "Setup" tab.
4. In the "Setup" tab, set the "Protocol" > "MDIO".
5. Select the waveform for the "Clock" and "Data" lines.
6. Set the logical thresholds.
7. Enable "Decode".

14.20.3 MDIO trigger

14.20.3.1 MDIO trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

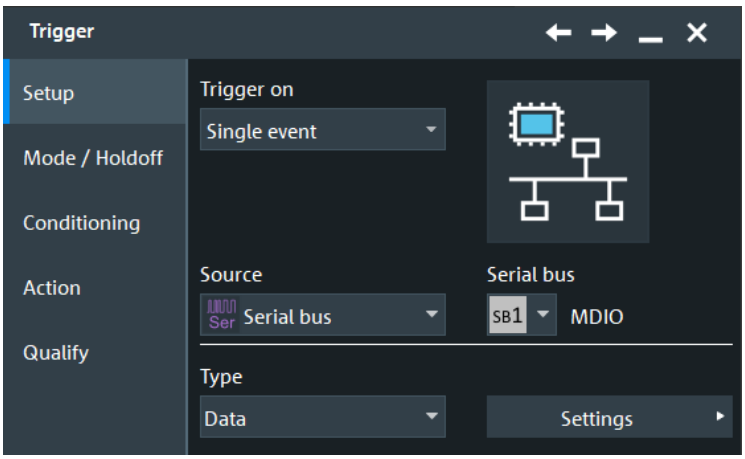

In this section, all trigger settings are described. The user interface of the instrument displays only appropriate settings and guides you through the trigger setup.
For a list of supported trigger conditions, refer to the specifications document.

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Serial bus
Selects the serial bus to be triggered on. Make sure to select the correct bus before you enter the settings.

To trigger on a serial bus, the signals sources must be channel signals. If the data or clock source is a math or reference waveform, you cannot trigger on that bus.


Remote command:
`TRIGger<t>:SOURce:SBSelect` on page 1839

Protocol
Defines the protocol type of the selected serial bus.

Remote command:
`BUS<b>:TYPE` on page 1833


MDIO Trigger Type
Selects the trigger type for MDIO analysis.

"Frame Start" Sets the trigger to the start of frame (SOF) field. The start of frame condition and the trigger instant is the end of the preamble.
Trigger pattern: preamble (32 bits "1")

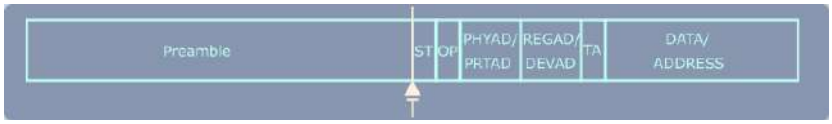

There are no additional parameters to be specified.

"Frame Stop" Sets the trigger to the end of frame (EOF) field. The trigger instant is after the last data bit.
Trigger pattern: preamble (32 bits "1") + 32 bits "X"

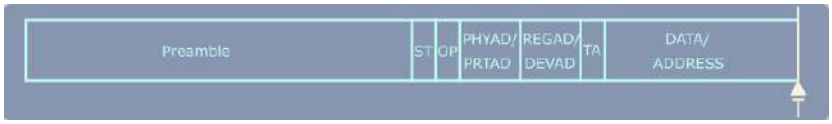


There are no additional parameters to be specified.

"Data" Sets the trigger to the data field. For more information on the data condition, see MDIO in the Ethernet standard. The trigger instant is at the end of the frame after the last data bit, as indicated in the GUI.

Note: All data triggers are always at the end of the frame, even if the specified pattern to trigger for is at a different position within the data word.

Trigger pattern: preamble (32 bits "1") + "ST" (2 bits, Start of Frame Code) + "OP" (2 bits, operation code or frame type code) + "PHYAD/PRTAD" (5 bits, Physical Layer Entity Address / Port Address) + "REGAD/DEVAD" (5 bits, Register Address / Device Address) + "TA" (2 "X" bits, turnaround time) + "DATA/ADDRESS" (16 bits)
For the parameters to be specified, see "ST" on page 884, "OP" on page 884, "PHYAD/PRTAD" on page 884, "REGAD/DEVAD" on page 885, and "DATA/ADDRESS" on page 885.

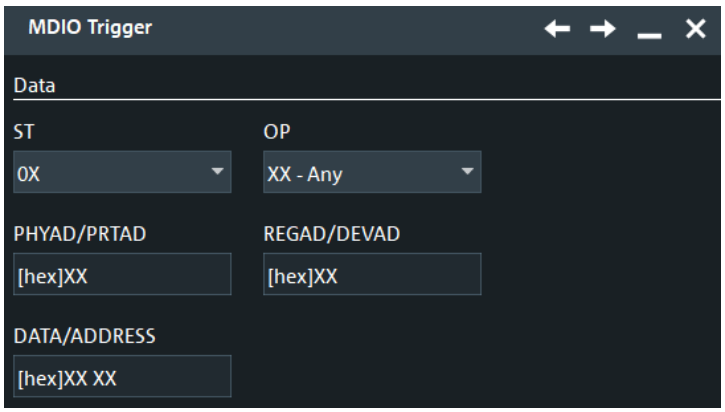

Remote command:
`TRIGger<t>:MDIO:TYPE` on page 2405

ST ← MDIO Trigger Type
Selects the start of frame code of the frame pattern; available only in trigger type "Data". Permissible frame patterns are: Clause 22, Clause 45, or Any

Remote command:
`TRIGger<t>:MDIO:ST` on page 2406

OP ← MDIO Trigger Type
Selects the type of frame code (or OP code, OpCode, operation code); available only in trigger type "Data". Available frame types are: Address, Write, Read, Post Read, or Any

Remote command:
`TRIGger<t>:MDIO:FRAMetype` on page 2406

PHYAD/PRTAD ← MDIO Trigger Type
Sets the physical address or port address (5 bits) of the frame pattern; available only in trigger type "Data".

Remote command:
`TRIGger<t>:MDIO:PHYS` on page 2407

REGAD/DEVAD ← MDIO Trigger Type
Sets the register address or device address (5 bits) of the frame pattern; available only in trigger type "Data".

Remote command:
`TRIGger<t>:MDIO:REGI` on page 2407

DATA/ADDRESS ← MDIO Trigger Type
Defines the payload data pattern or address pattern (16 bits); available only in trigger type "Data".

Remote command:
`TRIGger<t>:MDIO:DATA` on page 2407

14.20.3.2 Triggering on MDIO

Prerequisite: A serial bus is configured for the MDIO signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Tap "Serial bus" and select the serial bus that is set to MDIO.
5. Tap "Trigger Type MDIO" and select the trigger type to be used for MDIO protocol analysis.
6. If the trigger type "Data" is selected, the frame pattern has to be specified.

For information on how to proceed with the configuration settings, see Section 14.20.3.1, "MDIO trigger settings", on page 882.

14.20.4 MDIO decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The "Decode results" table contains information about all decoded frames.

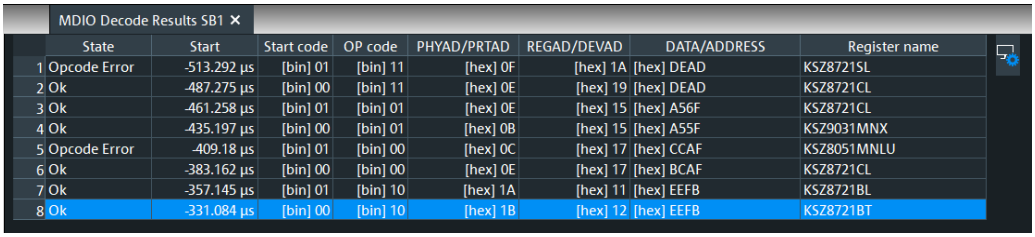


Table 14-33: Content of the Decode results table

Column	Description
Frame	Number of the acquired frame
State	State of frame, available messages are: ● OK ● OPcode error ● Length error ● Incomplete frame ● Unsynchronized bits
Start	Start time of the frame
Stop	Stop time of the frame
Start code	Start of frame code, 2 bits ● "01" (Clause 22) ● "00" (Clause 45)
OP code	Operation code (= Frame type), 2 bits ● "00" = Address frame (in Clause 45, only) ● "01" = Write frame (in Clause 22 or Clause 45) ● "10" = Read frame (in Clause 22) or Post Read frame (in Clause 45) ● "11" = Read frame (in Clause 45)
PHYAD/PRTAD	Address field, shown as 2 hex characters (corresponding to 5 binary bits) ● PHY address (in Clause 22) ● Port address (in Clause 45)
REGAD/DEVAD	Address field, shown as 2 hex characters (corresponding to 5 binary bits) ● Register address (in Clause 22) ● Device address (in Clause 45)
DATA/ADDRESS	Payload data field (in Clause 22 or Clause 45), or Address field (in Clause 45, only), shown as 4 hex characters or 16 binary bits
Register Name	Displays a translation of the PHYAD/PRTAD address label in textual form

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands to retrieve decode results are described in Section 26.18.21.3, "Decode results", on page 2407.

14.20.5 Search on decoded MDIO data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.


For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

If you need information on how to get started with searching MDIO data, see Section 14.20.5.3, "Searching MDIO data", on page 889. Otherwise proceed with the MDIO search setup.

14.20.5.1 MDIO search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

Search types
Selects the event types to be searched.

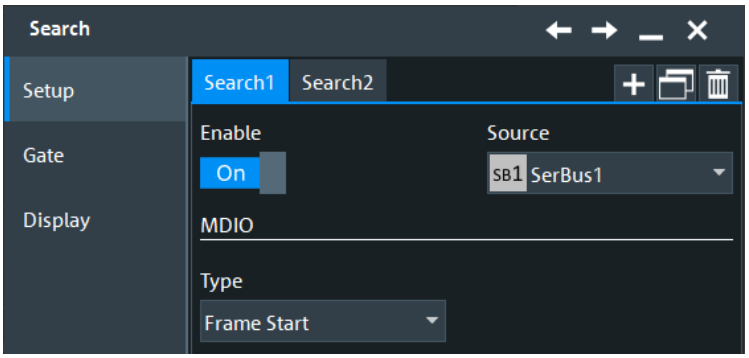

Available event types are "Frame Start", "Frame Stop", and "Data".

Only if search criteria type "Data" is selected, individual search parameters can be specified in the tabs below the "Search criteria" dialog. For these parameters, see "ST" on page 888, "OP" on page 888, "PHYAD/PRTAD" on page 888, "REGAD/DEVAD" on page 888, and "DATA/ADDRESS" on page 888.

Remote command:
`SEARch:TRIGger:MDIO:TYPE` on page 2413

ST
Selects the start of frame code of the frame pattern; available only in search criteria type "Data". Permissible frame patterns are: Clause 22, Clause 45, or Any

Remote command:
`SEARch:TRIGger:MDIO:ST` on page 2413

OP
Selects the Type of Frame code (or OP code, OpCode, operation code); available only in search criteria type "Data". Available frame types are: Address, Write, Read, Post Read, or Any

Remote command:
`SEARch:TRIGger:MDIO:FRAMetype` on page 2412

PHYAD/PRTAD
Sets the physical address or port address (5 bits) of the frame pattern; available only in search criteria type "Data".

Remote command:
`SEARch:TRIGger:MDIO:PHYS` on page 2412

REGAD/DEVAD
Sets the register address or device address (5 bits) of the frame pattern; available only in search criteria type "Data".

Remote command:
`SEARch:TRIGger:MDIO:REGI` on page 2413

DATA/ADDRESS
Defines the payload data pattern or address pattern (16 bits); available only in search criteria type "Data".

Remote command:
`SEARch:TRIGger:MDIO:DATA` on page 2411

14.20.5.2 MDIO search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- `SEARch:RESult:MDIO:WCOunt?` on page 2417
- `SEARch:RESult:MDIO:WORD<w>:STATe?` on page 2416
- `SEARch:RESult:MDIO:WORD<w>:STARt?` on page 2415

- SEARch:RESult:MDIO:WORD<w>:STOP? on page 2416
- SEARch:RESult:MDIO:WORD<w>:ST? on page 2415
- SEARch:RESult:MDIO:WORD<w>:TYPE? on page 2417
- SEARch:RESult:MDIO:WORD<w>:PHYS? on page 2414
- SEARch:RESult:MDIO:WORD<w>:REGI? on page 2415
- SEARch:RESult:MDIO:WORD<w>:DATA? on page 2414
- SEARch:RESult:MDIO:WORD<w>:SYMBol? on page 2417

14.20.5.3 Searching MDIO data

Prerequisite: A serial bus is configured for the MDIO signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to MDIO (e.g. "SB1", unless already selected).

   The search dialog for MDIO protocol analysis is opened.
   There are no additional search criteria to be specified.
5. To acquire a waveform, press [Single].

   The R&S RTP performs an MDIO decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
6. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog.

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.21 USB (option R&S RTP-K60)

R&S RTP-K60 is a firmware option that enables the R&S RTP to analyze Universal Serial Bus (USB) protocols, by triggering and decoding them. The option is compatible with the standards USB 1.0, USB 1.1, USB 2.0 and USB HSIC (High-Speed Inter-Chip). R&S RTP-K60 supports the data rates "Low Speed" (1.5 Mbit/s), "Full Speed" (12 Mbit/s) and "High Speed" (480 Mbit/s, available in USB 2.0 and HSIC).

- USB protocol basics....890
- USB 2.0 configuration....895
- USB 2.0 trigger....899
- USB 2.0 decode results....908
- Search on decoded USB 2.0 data....909

14.21.1 USB protocol basics

The USB protocol was developed, starting in 1996, by the nonprofit organization USB Implementers Forum, Inc. (USB-IF), formed by Compaq, Hewlett-Packard, Intel, Lucent Technologies, Microsoft, NEC, and Philips. The purpose was to provide a common "plug-and-play" solution to replace a multitude of interfaces for the communication between computers and devices. It allows even unskilled users to connect many devices to a PC easily. USB was originally used for devices that feature low signaling rates (up to 1.5 Mbit/s), especially human interface devices like mouse, joystick or keyboard. With the release of USB 2.0 in April 2000, devices such as printers, cameras and mass storage media were enabled to exchange data at faster rates (up to 480 Mbit/s). Also, the high-speed protocol HSIC (High Speed Inter Chip) is used for the communication between on-board devices.

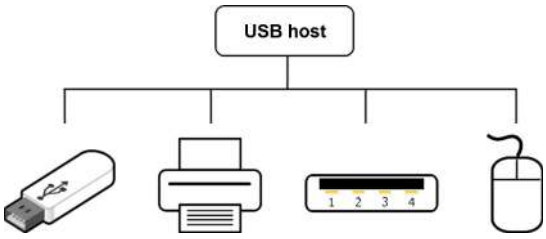


Figure 14-23: USB Topology: mass storage device, printer, USB hub, and mouse (human interface device) connected to a USB host

More information, including the USB specification, is available online within the web domain http://usb.org.

This section provides an overview of protocol characteristics, data transfer, packet structure, address and endpoint formats of USB and trigger possibilities.

USB characteristics

The main characteristics of USB are:

- Four-wire design: USB requires a shielded cable containing four wires. Two of them, called D+ and D-, form a twisted pair (for low speed, they can be non-twisted). These data lines transmit differential data signals and single-ended signal states, both referenced to a third wire: the GND or ground. The fourth wire is called VBUS (voltage bus). It carries a nominal 5 V supply, which can be used to power a device.
- Host-to-device communication: in USBs "speak-when-spoken-to" protocol, communication is always initiated by the host. Consequently, there is no direct communication between USB devices, apart from a few exceptions.

- The addressing scheme can distinguish a maximum of 127 connected devices, because a packet's address field length is limited to 7 bits. USB devices have up to 16 OUT endpoints (from host to device) and up to 16 IN endpoints (from device to host).
- USB transactions consist of two or three packets: token, data, and typically handshake
- Packet type: a packet identifier (PID) is sent as a first byte within the packet and specifies the different packet types.
- NRZI (Non Return to Zero Inverted): a zero (0) is encoded as a transition of the physical level, whereas a one (1) has no transition, thus it is represented by a steady level.




Figure 14-24: Example of an NRZI sequence

- Bit stuffing: a zero (0) is inserted after every 6 consecutive ones (111111). This insertion ensures sufficient transitions to keep the phase-locked loop (PLL) synchronized and locked onto the data stream.
- Little Endian scheme: both multiple bits and multiple bytes are transmitted with the least significant bit/byte (LSB) sent first, while the most significant bit/byte (MSB) is sent last.
- HSIC (high-speed inter-chip): an industry standard for USB chip-to-chip interconnection with a 2-signal (strobe, data) source synchronous serial interface, using 240 MHz DDR signaling to provide only high-speed (480 Mbit/s) data rate.

Table 14-34: Simplified symbolic representation from the USB standard

Bus State	Protocol	Levels
Differential **"1"**		D+ High, D- Low
Differential **"0"**		D+ Low, D- High
Data **"J"** State	Low speed	D+ Low, D- High (differential **"0"**)
	Full speed	D+ High, D- Low (differential **"1"**)
Data **"K"** State	Low speed	D+ High, D- Low (differential **"1"**)
	Full speed	D+ Low, D- High (differential **"0"**)

In the example in Table 14-34, "High" speed can be assumed to be like "Full" speed. For a complete overview of bus states and for an electrical definition of "High" and "Low" speed, refer to section 7 of the USB specification.

Data transfer

In contrast to a conventional bus, USB is more like a network protocol, using target addresses and endpoints. However, USB features a primary on the bus, called the host. It transmits packets of data to all devices or hubs connected to the host (or connected to a device or hub, which is in turn connected to the host). All connected

devices receive each data packet, but disregard it unless it carries the correct address. In reply, only the addressed device (one at a time) can send data upstream to the host.

The USB architecture supports four different kinds of data transfer: control, bulk, interrupt or isochronous transfer. For example, a "bulk OUT" transfer (from host to device) can look like this:

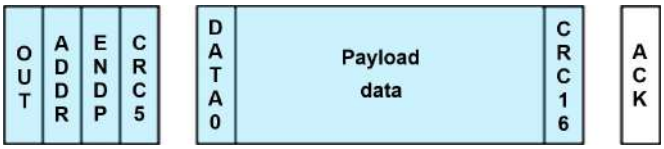


Figure 14-25: Example of a bulk OUT transfer. Blue: host speaks, white: device speaks

Packet structure

All packets must start with a **SYNC** field, also called **SOP** (start of packet), which indicates data transmission. It consists of "KJ" pairs, followed by one "KK". At low speed and full speed (USB 1.x), it is 8 bits long, encoded as "KJKJKJKK". At high speed (USB 2.0 and HSIC), it is up to 32 bits long, encoded as "KJKJKJKJKJKJ...KK".

The SYNC field is used to synchronize the clock of the receiver with the clock of the transmitter. The final 2 bits ("KK") indicate where the PID field starts.

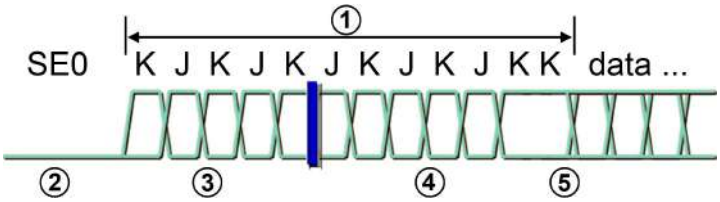


Figure 14-26: Start of a high-speed packet: after an SE0, the packet starts with a SYNC field (or SOP), followed by the data packet

SE0 = Single-ended zero, both D+ and D- wire are on low level
1 = High-speed SYNC field (or SOP), length up to 32 bits
2 = Receiver-squelched differential envelope, below 100 mV
3 = Differential envelope exceeds 150 mV, reception enabled with 4 symbol times
4 = Clock recovery must lock in time to detect the end of SYNC
5 = End of SYNC detected, receiver begins data recovery

After the SYNC (or SOP), USB data packets consist of (in this order):

- **PID** (packet identifier): specifies the type of packet. Examples are:
  - Token packets (IN, OUT, SETUP) are always the first packet in a USB transaction, containing the address of the device and its endpoint.
  - Token SOF packets (start of frame) are there to schedule a data transfer.
  - Handshake packets provide the status of the transaction.
  - Data packets are dedicated for the data transfer payload.
  - Various special packets provide special characteristics: for instance, SPLIT packets are used to communicate with low or full speed devices on a high-speed link.

The PID's length is 8 bit, beginning (LSB) with the fields PID0, PID1, PID2 and PID3. Those 4 bits are repeated in PID4, PID5, PID6 and PID7, but in complementary form (for integrity checking). The PID is the only part of a packet not to be covered by the CRC (see below). Packets with invalid or non-supported PID fields are rejected. For valid PIDs, see Table 14-35.

- **ADDR** (address): contains the USB address of the target device. The length of this field is 7 bits, resulting in addresses 0 through 127 (with 0 reserved as the default address after reset).
- **ENDP** (endpoint): number of the endpoint. The length of this field is 4 bits, resulting in a maximum of 16 different endpoints.
- **Frame number**: this field with a length of 11 bits specifies the current frame number 0 to 2047. It is only sent in SOF packets.
- **Data field** (or "payload data"): the length of this field is not fixed, it can contain between 0 bytes and 1024 bytes.
- **CRC** (cyclic redundancy check): Finally, the CRC field ensures that the received data is correct. If an error is detected in the CRC calculation, the packet is rejected. Packets (in this case IN, OUT, SOF, SETUP, PING, SPLIT) are followed by a CRC5 (which is 5 bits long) over ADDR and ENDP (or the frame number field in the SOF packet). Data packets (DATA0, DATA1, MDATA, DATA2) are followed by a CRC16 (which is 16 bits long) over the data field. No CRC is used for handshake packets.
- **EOP** (end of package): the devices determine the length of the data field with the EOP signal, which indicates the end of a packet. In low and full speed, it consists of two SE0 bits, followed by a J state. For high speed, the current state is inverted and kept for 7-bit times, leading to a bit-stuff error that is used as an EOP indicator. This state corresponds to the bit sequence 01111111 ahead of NRZI. For the SOF token, the bit sequence 01111111111111111111111111111111111111111111 is transmitted (five NRZI bytes), which is used to recognize disconnects (since high-speed devices normally do not apply voltage to D+/D-). If no device is present, a higher voltage is measured. After that, the idle state (SE0) is occupied.

Table 14-35: Valid PIDs for different packet types

Packet type	Name	PID value	Meaning
Token	OUT	0xE1	Starts data transfer towards a device
	IN	0x69	Starts data transfer towards the host
	SOF	0xA5	Indicates start of frame
	SETUP	0x2D	Starts a setup transfer and sends information on this start to the device
Data	DATA0	0xC3	Data packet with data-toggle bit 0
	DATA1	0x4B	Data packet with data-toggle bit 1
	DATA2	0x87	Data packet for high speed IN isochronous transfers that require high bandwidth
	MDATA	0x0F	Data packet for high-speed OUT isochronous transfers that require high bandwidth
Handshake	ACK	0xD2	Acknowledgment of a packet received without error

Packet type	Name	PID value	Meaning
	NAK	0x5A	Data not accepted, typically equivalent with some type of EAGAIN, meaning that the data needs to be resent later
	STALL	0x1E	A severe error has occurred, the target endpoint cannot be addressed until it is explicitly cleared again
	NYET	0x96	Only used in high-speed transfers, meaning ACK, but in the next interval no data can be received. Therefore the host must apply a PING first.
Special	PRE	0x3C	Starts a low speed transfer via a full speed bus
	ERR	0x3C	Indicates an error in an SPLIT transaction (using the same PID as PRE, however, these indications cannot be mistaken for each other)
	SPLIT	0x78	Starts an SPLIT transaction (thus: a low speed or full speed transfer via a high-speed bus)
	PING	0xB4	Used for monitoring high-speed data flow

- Token packets (IN, OUT, SETUP) and PING packets have the following format:

SYNC	PID	ADDR	ENDP	CRC5	EOP

- Start of frame packets (SOF) have the following format:

SYNC	PID	Frame number	CRC5	EOP

- Data packets have the following format:

SYNC	PID	Data	CRC16	EOP

- Handshake packets have the following format:

SYNC	PID	EOP

- SPLIT packets have the following format:

SYNC	PID	ADDR	SC	PORT	S	E	ET	CRC5	EOP

Trigger possibilities

Signals on the input channels can be triggered. The following trigger types are available:

- ANY Packet - Packet Sync: Triggering on the first rising slope after transmission of the packet Sync. Various lengths according to standard (in USB 2.0: 32 bit)
- Any token, OUT, IN, SOF, SETUP, AND-ing with user-defined PID check, address, endpoint, CRC5: For OUT, IN, SETUP, the endpoint and CRC5 follow from the bit order, therefore such patterns can be recognized.

- Data Selection: DATA0, DATA1, DATA2, MDATA, (for USB 1.x only: AND-ing with user-defined PID check, payload and CRC values)
- Handshake Packet Setup: Triggering on handshake packet, trigger with specific settings: ACK, NAK, NYET, STALL or ERR handshake packet
- Protocol Error: Triggering on PID/check error, CRC5 error, CRC16 (for USB 1.x only), frame length error (for USB 1.x only)
- Bus Event: Triggering on reset, resume, or suspend.

14.21.2 USB 2.0 configuration

If you need information on how to get started with configuring the USB 2.0 setup, see Section 14.21.2.2, "Configuring USB signals", on page 899. Otherwise proceed with the configuration settings.

14.21.2.1 USB 2.0 configuration settings

Access: [Bus] > "USB 2.0" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

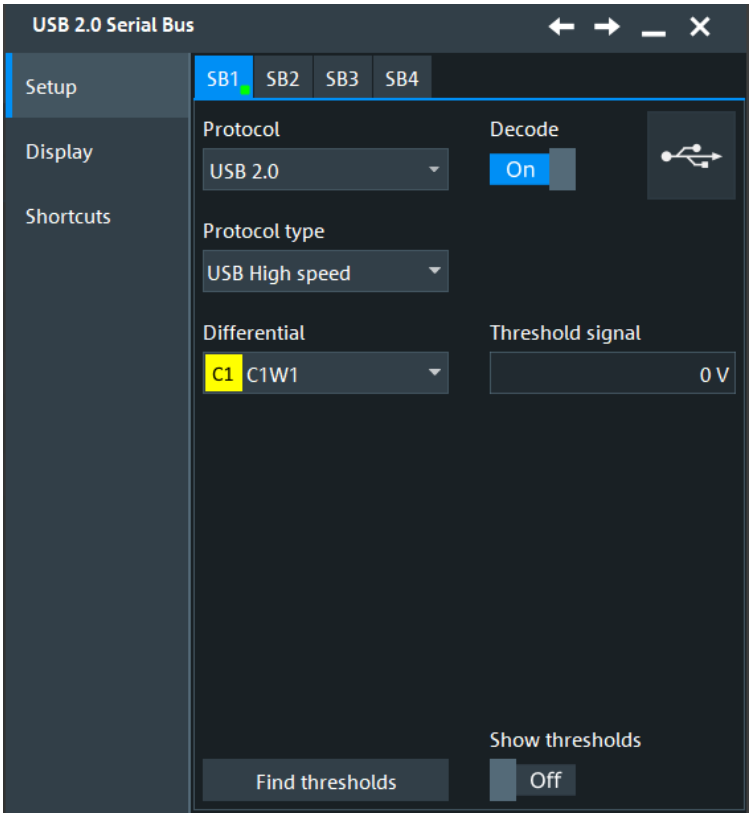


Figure 14-27: Serial bus protocol configuration dialog

See also: Section 14.1.1, "Setup - general settings", on page 556

Protocol type
Defines the USB protocol technology and transmission speed.

"USB Low speed"
Selects USB 2.0 low speed protocol (1.5 Mbit/s).

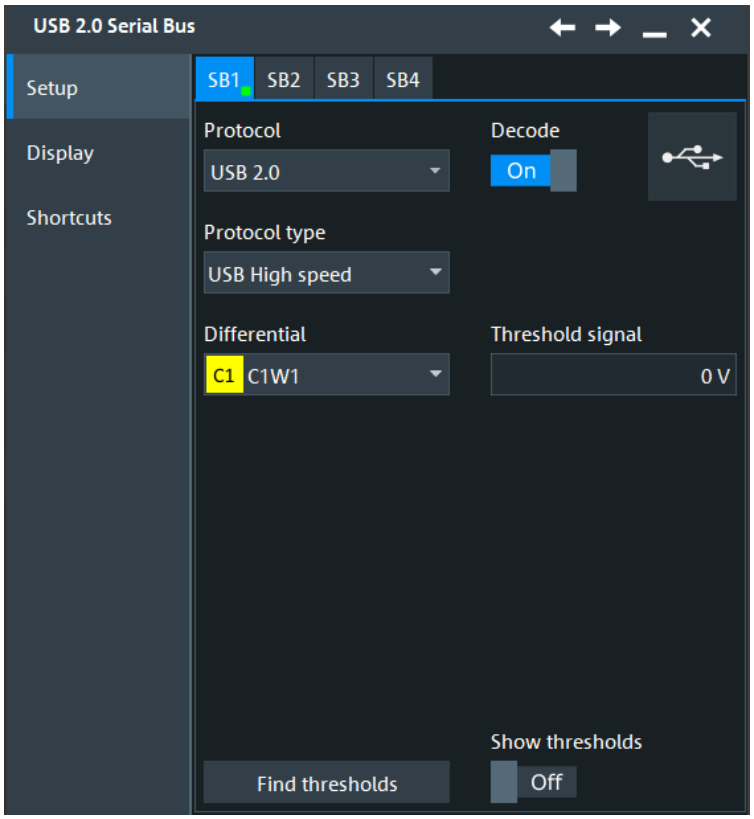


Figure 14-28: USB low speed protocol configuration

"USB Full speed"

Selects USB 2.0 full speed protocol (12 Mbit/s).

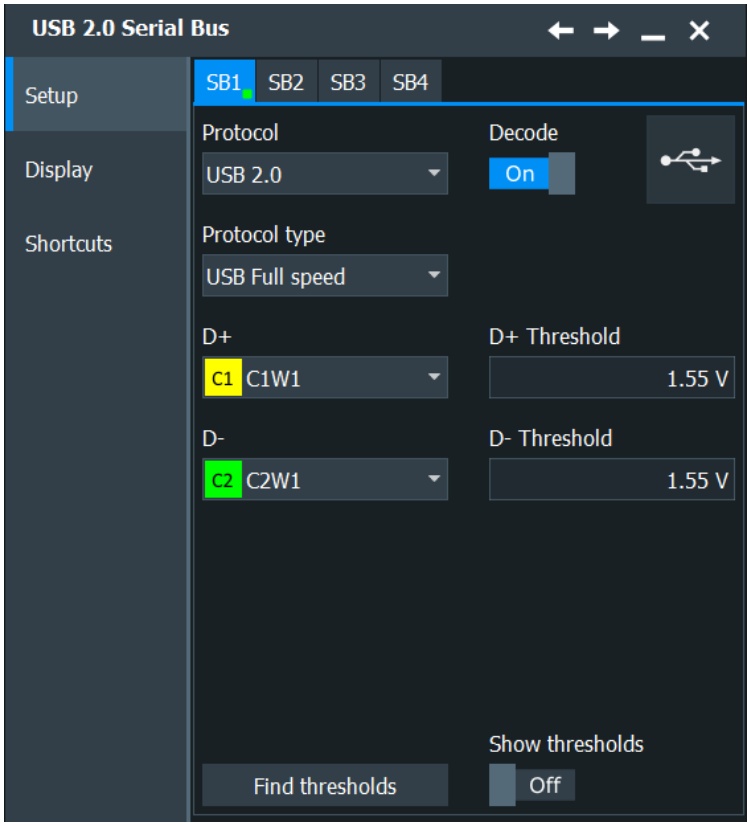


Figure 14-29: USB full speed protocol configuration

"USB High speed"

Selects USB high-speed protocol (480 Mbit/s). As the signal is differential, there is only one source and one threshold to be defined.

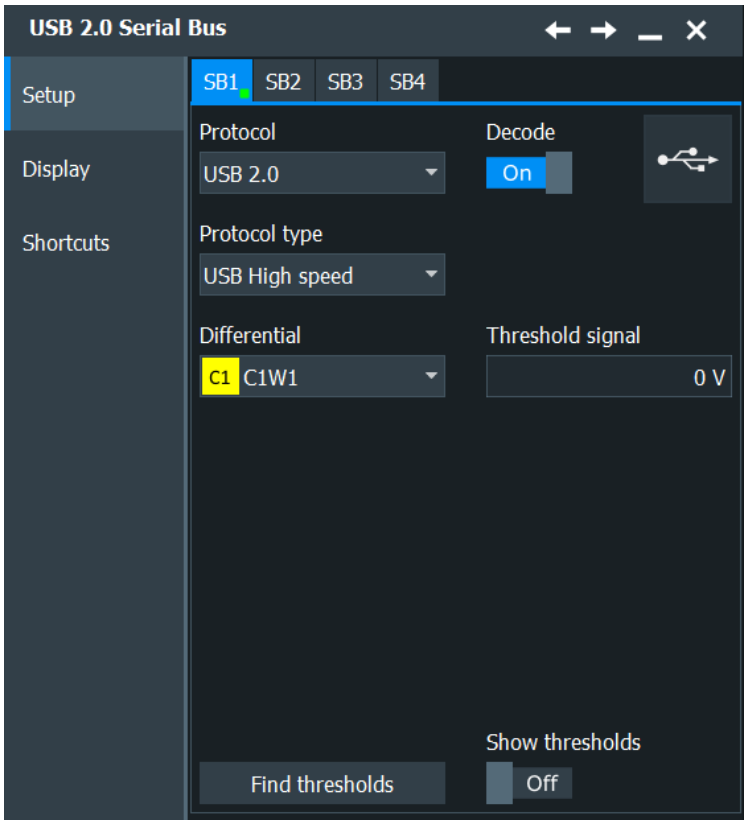


Figure 14-30: USB high-speed protocol configuration

Remote command:
BUS<b>:USB:TECHnology on page 2418

D+, D-

Define the source settings for the D+ and the D- data signals for USB low speed and USB full speed protocols.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Remote command:
BUS<b>:USB:DPLus:SOURce on page 2419
BUS<b>:USB:DMINus:SOURce on page 2419

Differential

Defines the source settings for the differential data signal (in USB high-speed protocol, only). You can select analog channels "C1" to "C4", and also active math and reference waveforms as source. If you want to trigger on the serial bus, analog channel sources are required.

Remote command:
BUS<b>:USB:DIFFerential:SOURce on page 2419

Thresholds
Sets the threshold value for the digitization of each signal line. If the signal value on the line is higher than the threshold, the signal state is high. Otherwise, if the signal value is below the threshold, the signal state is considered low.

"Threshold" Enter the value directly in the field.

"Find thresholds" Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
BUS<b>:USB:DPLus:THReshold on page 2419
BUS<b>:USB:DMINus:THReshold on page 2420
BUS<b>:USB:DIFFerential:THReshold on page 2420
BUS<b>:SETReflevels on page 1834

14.21.2.2 Configuring USB signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.21.2.1, "USB 2.0 configuration settings", on page 895.

Serial Bus Setup

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, select "Protocol" = "USB 2.0".
4. Tap "Protocol type" and select the protocol type that you want to set up.
5. Depending on the protocol type, select the waveform for each of the available "D+", "D-", "Differential", "Data", and "Strobe" lines.
6. Set the logical thresholds: Either to the middle reference levels with "Find thresholds", or enter a user-defined value directly in the "Threshold" fields.
7. Enable "Decode".

14.21.3 USB 2.0 trigger

If you need information on how to get started with triggering on USB 2.0 signals, see Section 14.21.3.2, "Triggering on USB 2.0", on page 907. Otherwise proceed with the USB 2.0 trigger settings.

14.21.3.1 USB 2.0 trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

In this section, all trigger settings are described. Their availability on the instrument depends on the selected USB 2.0 protocol type and trigger type. The user interface of the instrument displays only appropriate settings and guides you through the trigger setup.

For a list of supported trigger conditions, refer to the specifications document.

Trigger on protocol types USB high speed and USB HSIC is currently not supported.

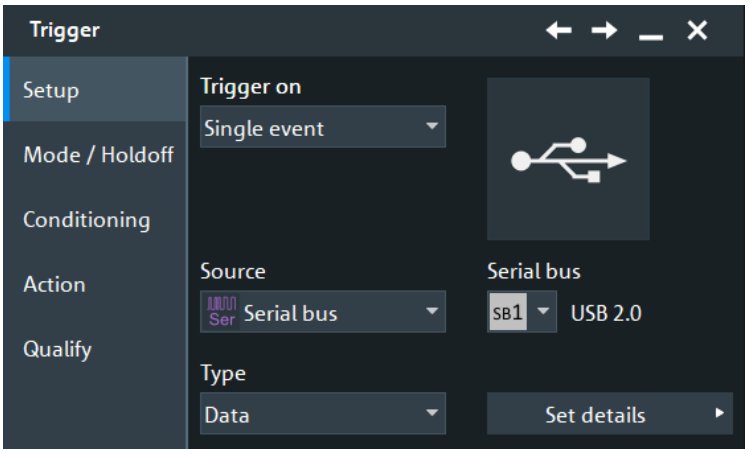


Figure 14-31: USB trigger event settings dialog

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Trigger type USB
Selects the trigger type for USB 2.0 analysis. The available trigger types depend on the USB 2.0 protocol type that is selected in the configuration setup, see "Protocol type" on page 896.

Remote command:
`TRIGger<t>:USB:TYPE` on page 2421

Start of packet ← Trigger type USB
Sets the trigger to the SOP (start of packet) field. The start of packet condition is the end of the SYNC field. The trigger instant is the end of the SOP field.

End of packet ← Trigger type USB
Sets the trigger to the EOP (end of packet) field. The trigger instant is the beginning of the EOP field.

Reset ← Trigger type USB
Sets the trigger to the Reset field. For more information on the reset condition, see the USB standard. The trigger instant is the end of the 10 ms period after the SE0 field.

Suspend ← Trigger type USB
Sets the trigger to the Suspend field. For more information on the suspend condition, see the USB standard. The trigger instant will be declared after the defined 3 ms timeout.

Resume ← Trigger type USB
Sets the trigger to the Resume field. For more information on the resume condition, see the USB standard. The trigger instant will be declared after the defined 20 ms timeout.

Token ← Trigger type USB
Sets the trigger to one out of four different token trigger types: OUT, IN, SOF, or SETUP.

See "Token" on page 902

Data ← Trigger type USB
Sets the trigger to one out of four different data trigger types: DATA0, DATA1, DATA2, or MDATA.

See "Data" on page 902

Handshake ← Trigger type USB
Sets the trigger to one out of four different handshake trigger types: ACK, NAK, STALL, or NYET.

See "Handshake" on page 903

Special PID ← Trigger type USB
Sets the trigger to one out of four different Special PID trigger types: PREamble, ERR, SPLIT, or PING.

See "Special PID" on page 903

Error condition ← Trigger type USB
Sets the trigger to one out of eight different error condition trigger types: Any error, PID error, CRC5 error, CRC16 error, Bitstuff error, Unexpected PID error, SE1 error, or Glitch error.

See "Error condition" on page 904

Token
Sets the trigger to one out of four different token types:
- "OUT"
- "IN"
- "SOF"
- "SETUP"

If no additional conditions are set, the trigger instant is after the PID.

If the PID error check is selected:
- If an error is found in the PID's complementary form, the trigger is set immediately after the 8th bit of the PID
- If no PID error is found, no trigger is set, even if other selected conditions are met.

Otherwise, the trigger instant is defined by the first occurrence of any of the specified additional conditions.

Remote command:
`TRIGger<t>:USB:TOKen` on page 2432

OUT, IN or SETUP ← Token
For the trigger token types "OUT", "IN" or "SETUP", the following conditions can be set:

You can refine the trigger condition:
- See "PID error" on page 905
- See "End Point" on page 905
- See "Address" on page 905

SOF ← Token
For the trigger token type "SOF", the following conditions can be set:


You can refine the trigger condition:
- See "PID error" on page 905
- See "Frame number" on page 906

Data
Sets the trigger to one out of four different data types:
- "DATA0"
- "DATA1"
- "DATA2"
- "MDATA"

If no additional conditions are set, the trigger instant is after the PID.

If the PID error check is selected:
- If an error is found in the PID's complementary form, the trigger is set immediately after the 8th bit of the PID
- If no PID error is found, no trigger is set, even if other selected conditions are met.

Otherwise, the trigger instant is defined by the first occurrence of any of the specified additional conditions.

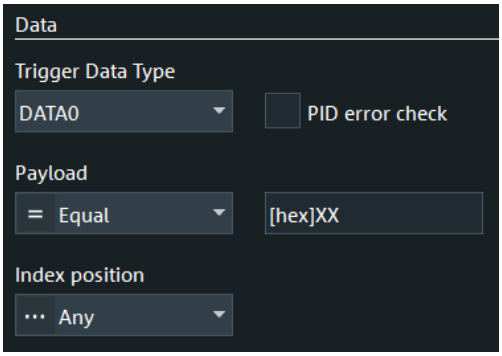


You can refine the trigger condition:
- See "PID error" on page 905
- See "Payload" on page 905

Remote command:
`TRIGger<t>:USB:DATA` on page 2424

Handshake
Sets the trigger to one out of four different handshake types:
- "ACK"
- "NAK"
- "STALL"
- "NYET"

If no handshake condition is set, the trigger instant is after the PID.

If the PID error check is selected:
- If an error is found in the PID's complementary form, the trigger is set immediately after the 8th bit of the PID.
- If no PID error is found, no trigger is set.

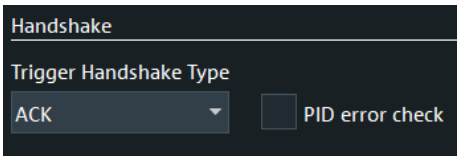

See "PID error" on page 905

Remote command:
`TRIGger<t>:USB:HAND` on page 2428

Special PID
Sets the trigger to one out of four different "Special PID" types:
- "PREamble"
- "ERR"
- "SPLIT"
- "PING"

If no additional conditions are set, the trigger instant is after the PID.

If the PID error check is selected:
- if an error is found in the PID's complementary form, the trigger is set immediately after the 8th bit of the PID

- if no PID error is found, no trigger is set, even if other selected conditions are met.

Otherwise, the trigger instant is defined by the first occurrence of any of the specified additional conditions.

Remote command:
`TRIGger<t>:USB:SPEC` on page 2431

PREamble or ERR ← Special PID
For the Trigger Special Types "PREamble" and "ERR", the following condition can be set:

See "PID error" on page 905

SPLIT ← Special PID
For the Trigger Special Type "SPLIT", the following conditions can be set:

You can refine the trigger condition:
- See "Address" on page 905
- See "SC" on page 906
- See "Port" on page 906
- See "SEU" on page 907
- See "ET" on page 907
- See "PID error" on page 905

PING ← Special PID
For the Trigger Special Type "PING", the following conditions can be set:

You can refine the trigger condition:
- See "Address" on page 905
- See "End Point" on page 905
- See "PID error" on page 905

Error condition
Sets the trigger in case of one of the following eight different error condition types.

The trigger instant is the first occurrence of the specified error.

"Any error"	Triggers on any of the errors listed below.
"PID error"	Triggers on any packet identifier error.
"CRC5 error"	Triggers on any CRC5 error event
"CRC16 error"	Triggers on any CRC16 error event
"Bitstuff error"	Triggers in the event of an erroneous or missing bit stuffing sequence (see USB standard).
"Unexpected PID error"	Triggers on any illegal PID. This is a PID that is not allowed in USB low speed and USB full speed protocols, especially PID's announcing packets such as SPLIT, DATA2, MDATA, or other noncompliant packets.
"SE1 error"	Triggers on the illegal bus state Single Ended 1 (SE1 = both lines high).
"Glitch error"	Triggers on an error in the bit period (see USB standard for the definition of glitch).

Remote command:
TRIGger<t>:USB:ERRC on page 2426

PID error
Defines, whether a packet ID error check is executed or not.

Remote command:
TRIGger<t>:USB:WPID on page 2434

End Point
Defines, whether an endpoint check that meets specific conditions is executed or not.

"Condition" Defining a specific endpoint or an endpoint range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies an endpoint, or sets the start value of an endpoint range.

"Max" Sets the end value of an endpoint range if "Condition" (TRIGger<t>:USB:ECONdition) is set to INRange or OORange.

Remote command:
TRIGger<t>:USB:WEND on page 2433
TRIGger<t>:USB:ECONdition on page 2425
TRIGger<t>:USB:EMIN on page 2426
TRIGger<t>:USB:EMAX on page 2426

Address
Defines, whether an address check that meets specific conditions is executed or not.

"Condition" Defining a specific address or an address range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies an address, or sets the start value of an address range.

"Max" Sets the end value of an address range if "Condition" (TRIGger<t>:USB:ACONdition) is set to INRange or OORange.

Remote command:
TRIGger<t>:USB:WADD on page 2433
TRIGger<t>:USB:ACONdition on page 2422
TRIGger<t>:USB:AMAX on page 2423
TRIGger<t>:USB:AMIN on page 2423

Payload
Defines, whether a payload check that meets specific conditions is executed or not.

"Condition" Sets the operator "any" or "equal" that allows to trigger for payload data at any position or at a specified position.

"Position" Available only if "Condition" (TRIGger<t>:USB:DPOPerator) is set to *equal*. Specifies the position in which a special data pattern is to be triggered within the payload data packet.

"Data Condition" Sets the operator ("equal" or "unequal", TRIGger<t>:USB:DCONdition) to set a specific payload data pattern.

"Payload pattern" Specifies the payload data pattern that is to be triggered.

Remote command:
TRIGger<t>:USB:WPAY on page 2434
TRIGger<t>:USB:DPOPerator on page 2424
TRIGger<t>:USB:DPOSition on page 2425
TRIGger<t>:USB:DCONdition on page 2424
TRIGger<t>:USB:PATT on page 2428

Frame number
Defines, whether a frame number check that meets specific conditions is executed or not.

"Condition" Defining a specific frame number or a frame number range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies a frame number, or sets the start value of a frame number range.

"Max" Sets the end value of a frame number range if "Condition" (TRIGger<t>:USB:FCONdition) is set to INRange or OORange.

Remote command:
TRIGger<t>:USB:WFRN on page 2434
TRIGger<t>:USB:FCONdition on page 2427
TRIGger<t>:USB:FMIN on page 2427
TRIGger<t>:USB:FMAX on page 2428

SC
Defines, whether a Start / Complete SPLIT transaction check is executed or not.

Remote command:
TRIGger<t>:USB:WSTC on page 2435
TRIGger<t>:USB:STCO on page 2431

Port
Defines, whether a port check that meets specific conditions is executed or not.

"Condition" Defining a specific port number or a port number range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies a port number, or sets the start value of a port number range.

"Max" Sets the end value of a port number range if "Condition" (TRIGger<t>:USB:PCONdition) is set to INRange or OORange.

Remote command:
TRIGger<t>:USB:WPOR on page 2435
TRIGger<t>:USB:PCONdition on page 2429

TRIGger<t>:USB:PMIN on page 2429
TRIGger<t>:USB:PMAX on page 2429

SEU
Defines, whether an SEU check that meets specific conditions is executed or not.
S and E represent the Start and End of a start-split transaction, U represents the reserved/Unused bit of a complete-split transaction. Permissible binary SEU values are 00, 01, 10, and 11.

"Condition" Defining a specific SEU value or an SEU value range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies an SEU value, or sets the start value of an SEU value range.

"Max" Sets the end value of an SEU value range if "Condition" (TRIGger<t>:USB:SCONdition) is set to INRange or OORange.

Remote command:
TRIGger<t>:USB:WSEU on page 2435
TRIGger<t>:USB:SCONdition on page 2430
TRIGger<t>:USB:SMIN on page 2430
TRIGger<t>:USB:SMAX on page 2430

ET
Defines, whether an Endpoint Type (ET) check that meets specific conditions is executed or not.

"Condition" Defining a specific endpoint type or an ET range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies an ET, or sets the start value of an ET range.

"Max" Sets the end value of an ET range if "Condition" (TRIGger<t>:USB:TCONdition) is set to INRange or OORange.

Remote command:
TRIGger<t>:USB:WETCheck on page 2434
TRIGger<t>:USB:TCONdition on page 2431
TRIGger<t>:USB:TMIN on page 2432
TRIGger<t>:USB:TMAX on page 2432

14.21.3.2 Triggering on USB 2.0

Prerequisite: A bus is configured for the USB 2.0 signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".

3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to USB 2.0.
5. Tap "Trigger Type USB" and select the trigger type to be used for USB protocol analysis.
   Available trigger types depend on the USB 2.0 protocol type that is activated in "Protocol type" on page 896.
6. Depending on the selected USB 2.0 protocol type and trigger type, more setup conditions have to be specified.

For information on how to proceed with the configuration settings, see Section 14.21.3.1, "USB 2.0 trigger settings", on page 900.

14.21.4 USB 2.0 decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".
2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show binary".
3. If required, enable "Zoom coupling"

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.


The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

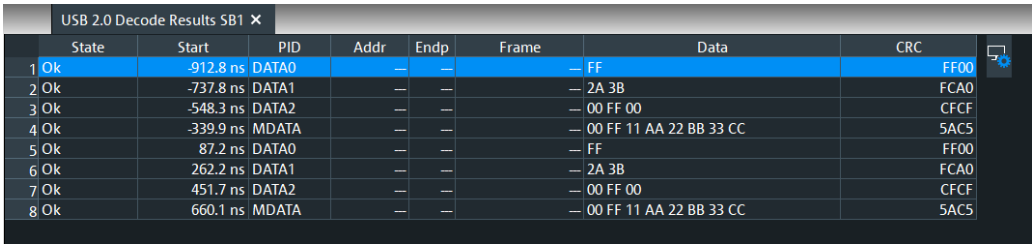
USB 2.0 Decode Results SB1

	State	Start	PID	Addr	Endp	Frame	Data	CRC
1	Ok	-912.8 ns	DATA0	—	—	—	FF	FF00
2	Ok	-737.8 ns	DATA1	—	—	—	2A 3B	FCA0
3	Ok	-548.3 ns	DATA2	—	—	—	00 FF 00	CFCF
4	Ok	-339.9 ns	MDATA	—	—	—	00 FF 11 AA 22 BB 33 CC	5AC5
5	Ok	87.2 ns	DATA0	—	—	—	FF	FF00
6	Ok	262.2 ns	DATA1	—	—	—	2A 3B	FCA0
7	Ok	451.7 ns	DATA2	—	—	—	00 FF 00	CFCF
8	Ok	660.1 ns	MDATA	—	—	—	00 FF 11 AA 22 BB 33 CC	5AC5

Table 14-36: Content of the Decode results table

Column	Description
State	Overall state of the packet: either OK or the relevant error condition (CRC, glitching, ...)
Start	Start time of the packet.
PID	PID type (OUT, IN, DATA0, ...)
Addr	Address of the recipient
Endp	Endpoint of the recipient
Frame	Frame number (in SOF packet)
Data	Values of the payload data bytes. The data format is selected below the table.
CRC	Either CRC5 or CRC16 (data packet PID)

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands to retrieve decode results are described in Section 26.18.22.3, "Decode results", on page 2435.

14.21.5 Search on decoded USB 2.0 data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.


To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.


If you need information on how to get started with searching USB 2.0 data, see Section 14.21.5.3, "Searching USB data", on page 915. Otherwise proceed with the USB 2.0 search setup.

14.21.5.1 USB 2.0 search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

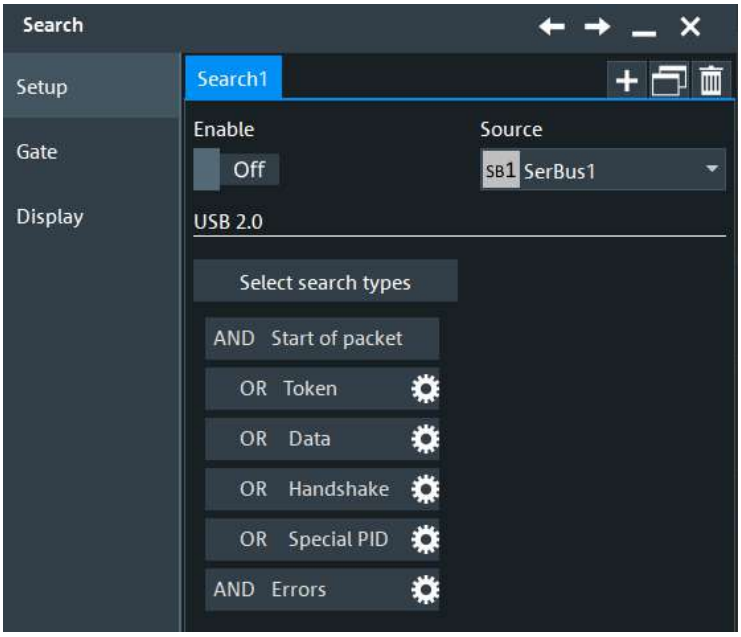

Search types
Use the "Search Types" dialog to define the event types to be searched for.

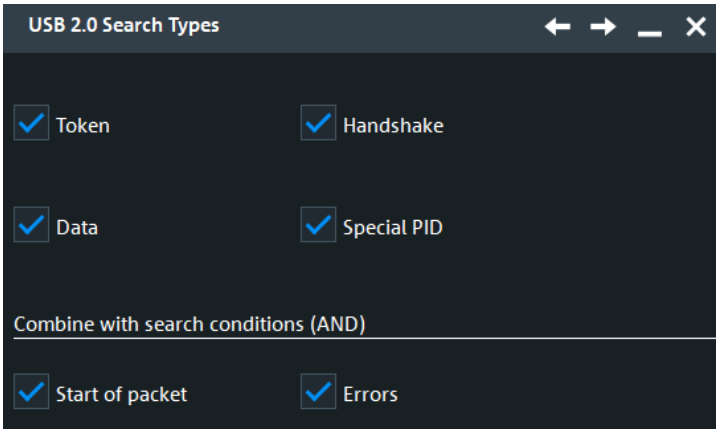

Individual search parameters (which do not depend on the USB protocol type and trigger settings), can be specified in the tabs below the "Search criteria" dialog.

Remote command:
`SEARch:TRIGger:USB:SSOP` on page 2451
`SEARch:TRIGger:USB:STOKen` on page 2453
`SEARch:TRIGger:USB:SDATa` on page 2451
`SEARch:TRIGger:USB:SHANdshake` on page 2451
`SEARch:TRIGger:USB:SSPE` on page 2452
`SEARch:TRIGger:USB:SERRor` on page 2451

SOP
Searches for any start of packet. There are no additional parameters to be defined.

Token
Searches for four different token types: "OUT", "IN", "SOF", or "SETUP", and "Any" token.

For "Any" token, there are no additional parameters to be defined.

For "OUT", "IN", or "SETUP" tokens, additional search parameters are "Address check" and "End Point check".

You can refine the search condition:
- See "Address check" on page 912
- See "End Point check" on page 912

For "SOF" tokens, the additional search parameter is "Frame number check".

You can refine the search condition:
- See "Frame number check" on page 913

Remote command:
`SEARch:TRIGger:USB:TOKen` on page 2454

Data
Searches for data packets of the following types: DATA0, DATA1, DATA2, or MDATA, and "Any" data packet.

To search for payload in any data packet type, a data pattern and optionally a packet position have to be specified.

You can refine the search condition:
- See "Payload check" on page 913

Remote command:
`SEARch:TRIGger:USB:DATA` on page 2444

Handshake
Searches for four different handshake packet types: "ACK", "NAK", "STALL", or "NYET", and "Any" handshake packet. There are no additional parameters to be defined.

Remote command:
`SEARch:TRIGger:USB:HAND` on page 2448

Special PID
Searches for four different special packet identifier types: "PREamble", "ERR", "SPLIT", or "PING", and "Any" special PID.

For "Any", "PREamble", or "ERR", there are no additional parameters to be defined.

For "SPLIT", additional search parameters are "Address check", "SC check", "Port check", "SEU check", and "ET check".

You can refine the search condition:
- See "Address check" on page 912
- See "SC check" on page 914
- See "Port check" on page 914
- See "SEU check" on page 914
- See "ET check" on page 914

For "PING", additional search parameters are "Address check" and "End Point check".

You can refine the search condition:
- See "Address check" on page 912
- See "End Point check" on page 912

Remote command:
SEARch:TRIGger:USB:SPEC on page 2452

Error condition
Searches for the following error conditions:

"PID Error" Searches for packet identifier errors.

Remote command:
SEARch:TRIGger:USB:PIDerror on page 2449

"CRC5 Error" Searches for any CRC5 error event.

Remote command:
SEARch:TRIGger:USB:CRC5error on page 2444

"CRC16 Error" Searches for any CRC16 error event.

Remote command:
SEARch:TRIGger:USB:CRC16error on page 2443

"Bitstuff Error" Searches for bitstuff errors, thus an erroneous or missing bit stuffing sequence (see USB standard).

Remote command:
SEARch:TRIGger:USB:BITSterror on page 2443

"Glitch Error" Searches for glitch errors (errors in the bit period, see USB standard for the definition of glitch).

Remote command:
SEARch:TRIGger:USB:GLITcherror on page 2448

Address check
Enables the search for an address that meets specific conditions.

"Condition" Defining a specific address or an address range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies an address, or sets the start value of an address range.

"Max" Sets the end value of an address range if "Condition" (SEARch:TRIGger:USB:ACONdition) is set to INRange or OORange.

Remote command:
SEARch:TRIGger:USB:WADD on page 2455
SEARch:TRIGger:USB:ACONdition on page 2442
SEARch:TRIGger:USB:AMIN on page 2443
SEARch:TRIGger:USB:AMAX on page 2443

End Point check
Enables the search for an endpoint that meets specific conditions.

"Condition" Defining a specific endpoint or an endpoint range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies an endpoint, or sets the start value of an endpoint range.

"Max" Sets the end value of an endpoint range if "Condition" (`SEARch:TRIGger:USB:ECONdition`) is set to `INRange` or `OORange`.

Remote command:
`SEARch:TRIGger:USB:WEND` on page 2455
`SEARch:TRIGger:USB:ECONdition` on page 2446
`SEARch:TRIGger:USB:EMIN` on page 2446
`SEARch:TRIGger:USB:EMAX` on page 2446

Frame number check
Enables the search for a frame number that meets specific conditions.

"Condition" Defining a specific frame number or a frame number range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies a frame number, or sets the start value of a frame number range.

"Max" Sets the end value of a frame number range if "Condition" (`SEARch:TRIGger:USB:FCONdition`) is set to `INRange` or `OORange`.

Remote command:
`SEARch:TRIGger:USB:WFRN` on page 2456
`SEARch:TRIGger:USB:FCONdition` on page 2447
`SEARch:TRIGger:USB:FMIN` on page 2447
`SEARch:TRIGger:USB:FMAX` on page 2447

Payload check
Enables the search for a payload data pattern that meets specific conditions.

"Condition" Sets the operator "any" or "equal" that allows to search for payload data at any position or at a specified position.

"Position" Available only if "Condition" (`SEARch:TRIGger:USB:DPOPerator`) is set to *equal*. Specifies the position in which a special data pattern is to be searched within the payload data packet.

"Data Condition" Sets the operator ("equal" or "unequal", `SEARch:TRIGger:USB:DCONdition`) to set a specific payload data pattern.

"Payload pattern" Specifies the payload data pattern that is to be searched.

Remote command:
`SEARch:TRIGger:USB:WPAY` on page 2456
`SEARch:TRIGger:USB:DPOPerator` on page 2445
`SEARch:TRIGger:USB:DPOSition` on page 2445
`SEARch:TRIGger:USB:DCONdition` on page 2445
`SEARch:TRIGger:USB:PATT` on page 2448

SC check
Searches for the selected Start (0) or Complete (1) SPLIT transaction endpoint, or X (do not care).

Remote command:
SEARch:TRIGger:USB:WSTC on page 2457
SEARch:TRIGger:USB:STCO on page 2453

Port check
Enables the search for a port that meets specific conditions.

"Condition" Defining a specific port number or a port number range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies a port number, or sets the start value of a port number range.

"Max" Sets the end value of a port number range if "Condition" (SEARch:TRIGger:USB:PCONdition) is set to INRange or OORange.

Remote command:
SEARch:TRIGger:USB:WPOR on page 2456
SEARch:TRIGger:USB:PCONdition on page 2448
SEARch:TRIGger:USB:PMIN on page 2449
SEARch:TRIGger:USB:PMAX on page 2449

SEU check
Enables the search for an SEU that meets specific conditions. (For SEU, see "SEU" on page 907.)

"Condition" Defining a specific SEU value or an SEU value range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies an SEU value, or sets the start value of an SEU value range.

"Max" Sets the end value of an SEU value range if "Condition" (SEARch:TRIGger:USB:SCONdition) is set to INRange or OORange.

Remote command:
SEARch:TRIGger:USB:WSEU on page 2457
SEARch:TRIGger:USB:SCONdition on page 2450
SEARch:TRIGger:USB:SMIN on page 2450
SEARch:TRIGger:USB:SMAX on page 2450

ET check
Enables the search for an Endpoint Type (ET) that meets specific conditions.

"Condition" Defining a specific endpoint type or an ET range requires to set the operator to one of the following: equal, not equal, less than, less than or equal, greater than, greater than or equal, in range, out of range.

"Min" Specifies an ET, or sets the start value of an ET range.

"Max" Sets the end value of an ET range if "Condition" (`SEARch:TRIGger:USB:TCONdition`) is set to `INRange` or `OORange`.

Remote command:
`SEARch:TRIGger:USB:WETCheck` on page 2455
`SEARch:TRIGger:USB:TCONdition` on page 2453
`SEARch:TRIGger:USB:TMIN` on page 2454
`SEARch:TRIGger:USB:TMAX` on page 2454

14.21.5.2 USB 2.0 search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- `SEARch:RESult:USB:PCOunt?` on page 2462
- `SEARch:RESult:USB:PACKet<pa>:STATus?` on page 2461
- `SEARch:RESult:USB:PACKet<pa>:STARt?` on page 2461
- `SEARch:RESult:USB:PACKet<pa>:STOP?` on page 2461
- `SEARch:RESult:USB:PACKet<pa>:ADDRess?` on page 2458
- `SEARch:RESult:USB:PACKet<pa>:DATA?` on page 2458
- `SEARch:RESult:USB:PACKet<pa>:CRC?` on page 2458
- `SEARch:RESult:USB:PACKet<pa>:ENDPoint?` on page 2458
- `SEARch:RESult:USB:PACKet<pa>:ET?` on page 2459
- `SEARch:RESult:USB:PACKet<pa>:FRAMe?` on page 2459
- `SEARch:RESult:USB:PACKet<pa>:PID?` on page 2459
- `SEARch:RESult:USB:PACKet<pa>:PORT?` on page 2460
- `SEARch:RESult:USB:PACKet<pa>:SC?` on page 2460
- `SEARch:RESult:USB:PACKet<pa>:SEU?` on page 2460

14.21.5.3 Searching USB data

Prerequisite: A serial bus is configured for the USB signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".

3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to USB 2.0 (e.g. "SerBus1", unless already selected).
5. Specify search criteria according to Section 14.21.5.1, "USB 2.0 search setup", on page 909.
6. To acquire a waveform, press [Single].

   The R&S RTP performs a USB 2.0 decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog.

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.22 USB 3.1 (option R&S RTP-K61/K62)

Option R&S RTP-K61 analyzes Universal Serial Bus (USB) signals encoded by the USB 3.1 Gen1 coding standard. To use the full functionality of the option, you need an instrument that covers the frequency range up to 5 GHz, because the USB 3.1 Gen 1 protocol is defined for data rates up to 5 GHz.

Option R&S RTP-K62 analyzes USB signals encoded by the USB 3.1 Gen2 coding standard.

For analysis, USB 3.1 encoded signals can be triggered, decoded and searched.

This chapter describes:

- The USB 3.1 protocol....916
- USB 3.1 configuration....925
- USB 3.1 trigger....930
- USB 3.1 decode results....934
- Search on decoded USB 3.1 data....935

14.22.1 The USB 3.1 protocol

The USB 3.1 protocol standard was published on July 26th, 2013, strongly enhancing the performance of the USB 2.0 protocol. Compared to USB 2.0, USB 3.1 defines a new physical layout, better power distribution and higher data rates.

The USB 3.1 standard features two speed levels (generations):

- **USB 3.1 Gen 1** for 5 Gbps (also labeled "SuperSpeed" or "SS"), encompassing and superseding USB 3.0 (published on November 12th, 2008)

- **USB 3.1 Gen 2** for 10 Gbps (also labeled "SuperSpeedPlus" or "SSP")

While USB 3.1 Gen 2 is not yet very common, you can use a fast oscilloscope (minimum 5 GHz) with option **R&S RTP-K61** to analyze signals encoded according to the **USB 3.1 Gen 1** protocol.

NOTICE

Oscilloscope must range up to 5 GHz, at least

As the USB 3.1 Gen 1 protocol is defined for data rates up to 5 GHz, option R&S RTP-K61 requires a fast oscilloscope that covers this frequency range.

USB 3.1 supersedes the USB 3.0 standard but uses, for example, the USB 3.0 Standard-A connector design with 9 pins. Hence, USB 3.1 cables and connectors contain 5 additional wires and pins compared to USB 2.0.



Figure 14-32: USB 3.1 cable cross-section and Standard-A plug - backward compatible with USB 2.0

A = Shield (braid) / connector shell
B = USB 2.0 unshielded twisted pair
C = USB 3.0 / USB 3.1 shielded twisted pair
D = USB 3.0 / USB 3.1 shielded twisted pair
1 = Voltage bus V_{CC} power supply pin, +5 V
2 = Differential data signal D-
3 = Differential data signal D+
4 = Ground pin for power return
5 = SuperSpeed receiver differential pair Rx-
6 = SuperSpeed receiver differential pair Rx+
7 = Ground drain for signal return
8 = SuperSpeed transmitter differential pair Tx-
9 = SuperSpeed transmitter differential pair Tx+
* = Connector images courtesy of Wikipedia authors smial and Unconventional2

Table 14-37: Backward compatibility of USB 3.1 connectors

Connector type	USB 3.1	Compatibility	USB 2.0
Standard-A	plug	... is backward compatible with ...	receptacle
	receptacle	... is backward compatible with ...	plug
Standard-B	plug	... is **not** compatible with ...	receptacle
	receptacle	... is backward compatible with ...	plug

Connector type	USB 3.1	Compatibility	USB 2.0
Micro-USB	plug	... is **not** compatible with ...	receptacle
	receptacle	... is backward compatible with ...	plug

To achieve the data throughput of USB 3.1, all involved components (host, cable, device and optional hub) must comply with USB 3.1 specifications. If any component only complies, for example, with USB 2.0 Hi-Speed specifications, the setup works, but limited to Hi-Speed USB data rates.

USB 3.1 also specifies a new connector format, called Type-C, with a reversible plug. This small and durable connector is, however, not mechanically compatible with USB 2.0 connectors.

USB 3.1 Type-C connector

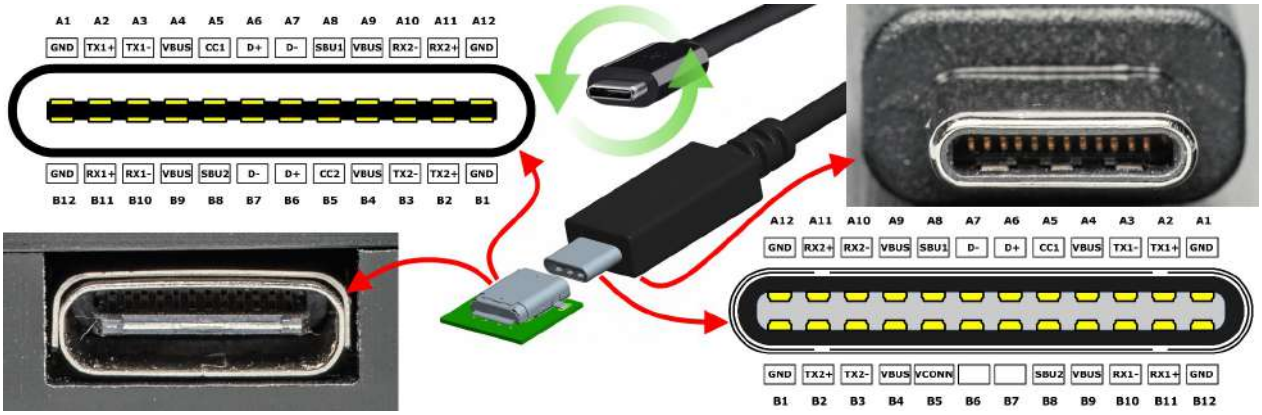


Figure 14-33: USB 3.1 Type-C receptacle and reversible plug

A1 to A12 = Twelve USB Type-C pins
B1 to B12 = The same USB Type-C pins as A1 to A 12, but in reverse order
* = Images courtesy of Heise Medien, Acon, phoneArena and Wikipedia author Chindi.ap

Specific protocol features

Key features of USB 3.1 Gen 1 that are addressed by option R&S RTP-K61 include:

- Since 5 Gbps is too fast for serial pattern triggering, the option uses a search-based software trigger
- The protocol uses a non-return-to-zero (NRZ) unclocked signal with **8b/10b encoding** (while USB 3.1 Gen 2 uses 128b/132b encoding)
- The signal is scrambled with a 32-bit minimum correlation sequence
- COMMA (K28.5), which occurs only during the reset phase, is the only unique bit sequence
  - COMMA is used for reset of the scrambling sequence, which has 32-bit minimum correlation
  - COMMA and packet framing are used for bit alignment
- The protocol uses a set of different frame types that are all covered by individual trigger and search dialogues of option R&S RTP-K61

Frame types

All frame types are listed below. The frame types are sorted in an almost alphabetical order, as in the oscilloscope's graphical user interface (GUI).

Each item in this list contains:

- the SCPI name of the frame
  (hence the name of the frame according to the related `remote control command (SCPI)`)
- the GUI name of the frame, which is sometimes identical with the SCPI name
  (the GUI names are highlighted in **bold** font and linked to one of Table 14-38 / Table 14-39 / Table 14-40)
- a brief description of the frame type

List of frame types

- ACK - **ACK** = Handshake packet indicating a positive acknowledgment.
- BCNT - **BCNT** = BERT count, with BERT = Bit Error Rate Test. BCNT is a K28.3 sequence followed by the error count symbol EC. See also BERC.
- BDAT - **BDAT** = BERT data, ordered set of a BERT command. This data sequence (output of the scrambler) is used for BER testing and is equivalent to the logical idle sequence, consisting of scrambled 0.
- BERC - **BERC** = BERT error count, ordered set of a BERT command that does not increment the error count register. BERC is not looped back to the receiver but replaced with BCNT.
- BRST - **BRST** = BERT reset, ordered set of a BERT command. Any time a BRST is received, the error count register EC is set to 0 and the linear feedback shift register (LFSR) for scrambling is set to 0FFFFh. Any number of consecutive BRST ordered sets may be received.
- BIAM - **Bus Interval Adjustment** = The bus interval is the period that establishes the integral boundary of service intervals. It is equivalent to the Microframe interval (THSFRAM) defined in the USB 2.0 specification.
- CP0 - compliance data pattern. Runs in scrambled mode.
- CP1/CP2 - compliance data pattern. Run in unscrambled mode.
- CP3/CP5or6 - compliance data pattern. Run in both scrambled and unscrambled mode.
- DPH - **DPH** = Data Packet Header, containing a type field, the data packet's address, route string, length, and other information about the packet, including a 2-byte checksum (CRC-16).
- DPH n-def - = non-deferred Data Packet Header, containing a type field, the data packet's address, route string, length field replica, and other information about the packet, including a 2-byte checksum (CRC-16). Valid only for USB 3.1 Gen 2.
- DPP - **Data Packet Payload** = The packet's payload data and a 32-bit CRC.
- DPPA - **Data Packet Payload Abort** = Frame ordered set used to abort a data packet payload.
- ERDY - **ERDY** = The Endpoint Ready notification is a handshake packet indicating a positive acknowledgment.

- FWAKe - **Function Wake** = The function wake device notification is sent from a device (that is enabled for remote wakeup) to the host, if it wants to exit from "device suspend" or "function suspend".
- HRR - **Host Role Request** = This notification type is reserved for being issued by a SuperSpeed On-the-Go (SS-OTG) device, if its Role Swap Protocol (RSP) capability has been enabled.
- IDLE - **IDLE** = Logical Idle is a period of one or more symbol periods when no information (packets or link commands) is transferred on the link. The Idle Symbol (IS) is transmitted by a port at any time in the active (U0) state meeting the logical idle definition.
- ITP - **ITP** = Isochronous Timestamp Packet, sent periodically by a host to inform devices on the USB of the current bus time. ITPs are multicast on all active links.
- LTM - **Latency Tolerance** = Latency Tolerance Messaging is an optional normative USB power management feature that utilizes reported BELT (Best Effort Latency Tolerance) values to enable more power efficient platform operation.
- LC - **Link Command** = An eight-symbol sequence used for link-level flow control, retries, power management and device removal.
- LDM - **Link Delay Measurement** = A protocol for determining propagation delays through the USB topology with a high degree of accuracy (sometimes called "Precision Time Measurement").
- NRDY - **NRDY** = The Not Ready response is a handshake packet indicating a negative acknowledgment.
- PING - **PING** = This transaction packet can only be sent by the host, to transition all links, which are in the path to a device, back to the active (U0) state prior to initiating an isochronous transfer.
- PNGR - **PING_RESPONSE** = This transaction packet is sent by a device in response for each PING received from the host.
- PCAP - **Port Capability** = This link management packet describes each port's link capabilities and is sent by both link partners after the successful completion of training and link initialization.
- PCNF - **Port Configuration** = All Enhanced SuperSpeed ports that support downstream port capability can send this link management packet (LMP), which is similar to Port Capability. If a port, which was to be configured in the upstream facing mode, does not receive this LMP within a defined time after link initialization, then the upstream port shall transition to "eSS.Disabled" and a peripheral device shall try to connect at the other speeds this device supports.
- PCNR - **Port Configuration Response** = This link management packet is sent by the upstream port in response to a Port Configuration and indicates its acceptance or rejection.
- SDS - **Start of Data Stream** marks the start of an SDS ordered set. Valid only for USB 3.1 Gen 2.
- SKIP - **SKIP** = SKP compensates for different bit rates between two communicating ports. SKPs may be dynamically inserted or removed from the data stream. SKPEND marks the boundary between SKP symbols and the remainder of the SKP ordered set. (For SuperSpeedPlus operation, unscrambled.)

- STALL - **STALL** = This transaction packet can only be sent by an endpoint on the device. It is used to inform the host that the endpoint is halted or that a control transfer is invalid.
- STATUS - **STATUS** = This transaction packet can only be sent by the host to a control endpoint. It is used to inform a control endpoint that the host has initiated the Status stage of a control transfer.
- SLF - **Set Link Function** = This link management packet is used to configure functionality that can be changed without leaving the active (U0) state.
- SSPD - **Sublink Speed** = Speed of a sublink, which is the collection of receive or transmit lanes between a downstream facing port (DFP) and an upstream facing port (UFP).
- TS1/TS1A/TS1B - **TS1** = Training sequences are ordered sets for initializing bit and symbol alignment and receiver equalization. Examples are TS1, TS2 and TSEQ.
- TS2 - **TS2** = See TS1
- TSEQ - **TSEQ** = See TS1
- U2IT - **U2 Inactivity Timeout** = This link management packet is used to define the timeout from U1 to U2.
- VDT - **Vendor Device Test** = Use of this link management packet is intended for vendor-specific device testing and shall not be used during normal operation of the link.

Other types

- ERRor - **Error** = This is not a frame type, but it is included as an artificial entry in the search and navigate dialog to allow selecting and activating the error search. If the host error bit is set to "1", this state indicates that the host was unable to accept the data. The reason can be a CRC error, length error, value out of range, packet incomplete or unknown error.
- UDEF - **Unknown** = Undefined data cannot be identified as any specific USB 3.1 frame, because the measured signal does not match with the specifications of any defined frame. Therefore, in this case the field is represented by a "?". You cannot search for "Unknown" or trigger on it, but these types are returned, if an unexpected (sub)type has been found. If some rough type identification is possible, the unknown data may fit one of the following descriptions of unknown types.
- UDVN - **Unknown Device Notification** = A Device Notification transaction packet can only be sent by a device, to inform the host of an asynchronous change in a device or interface state (e.g., to identify the function within a device that caused the device to perform a remote wake operation).
- UHP - **Unknown Header Packet** = An undefined header packet that starts with HPSTART, but then the type is invalid.
- ULMP - **Unknown LMP** = A Link Management Packet is a type of header packet primarily used to manage links by communicating information between links partners. LMPs only travel between pairs of directly connected ports.
- UTP - **Unknown TP** = A Transaction Packet is a type of header packet used to communicate information between a device and the host. TPs traverse all the links, directly connecting the host to a device. They have no payload data, instead they are used, e.g., to control the flow of data packets or configure devices and hubs.

The frames listed above consist of individual sets of fields. Some frames only contain one field, others are much longer: up to 29 fields (in case of the "ACK" frame).

We try to represent the structure of these frames. However, one single table that contains all frames and all fields would be very large: 30 by 40 cells. We have therefore split up the full table into the following four smaller tables:

- Table 14-38 contains the **short** frames that end with the "Link Control Word". (This table uses abbreviation, see below.)
- Table 14-39 contains the **long** frames that end with the "Link Control Word". (This table uses abbreviation, see below.)
- Table 14-40 contains the frames that do not end with the "Link Control Word". These frames have no additional fields other than those in the table.
- Table 14-41 contains the types that are no specified USB 3.1 frames.

The frames in both Table 14-38 and Table 14-39 are abbreviated. For the full set of fields, you must add to each frame the 2 fields "HPSTART" and "Type" in the beginning of the frame. Also add a "CRC" field and the 6 fields of the "Link Control Word" at the end of each frame. In Table 14-41, only the "Link Control Word" is abbreviated.

The 2-byte **"Link Control Word"** is used for both link level and end-to-end flow control. The fields in the Link Control Word are detailled in Table 14-39.

Table 14-38: Short frames that start with fields HPSTART and Type and end with CRC and the Link Control Word

Frame	Field3	Field4	Field5	Field6	Field7	Field8	Fld.9	Field10	Fld.11
Bus Interval Adjustment	Rsvd	Device Address	SubType	NotType	Rsvd	BusIntAdj	Rsvd		
Function Wake	Rsvd	Device Address	SubType	NotType	Interface	Rsvd	Rsvd		
Host Role Request	Rsvd	Device Address	SubType	NotType	RSP	Rsvd	Rsvd		
ITP	Counter	Delta	Adj Ctrl	Corr	Rsvd	Rsvd			
Latency Tolerance	Rsvd	Device Address	SubType	NotType	BELT	Rsvd	Rsvd		
Link Delay Measurement	SubType	LDM Type	LDMS	Rsvd	Response Delay	Rsvd	Rsvd		
NRDY	Rsvd	Device Address	SubType	Rsvd	D	EPTNum	Rsvd	StreamId	Rsvd
PING	Route String	Device Address	SubType	Rsvd	D	EPTNum	Rsvd	Rsvd	
PING_RESPONSE	Rsvd	Device Address	SubType	Rsvd	D	EPTNum	Rsvd	Rsvd	
Port Configuration	SubType	Link Speed	Rsvd	Rsvd	Rsvd				
Port Configuration Response	SubType	Response Code	Rsvd	Rsvd	Rsvd				
STALL	Rsvd	Device Address	SubType	Rsvd	D	EPTNum	Rsvd	Rsvd	
Set Link Function	SubType	SLF	Rsvd	Rsvd	Rsvd				

Frame	Field3	Field4	Field5	Field6	Field7	Field8	Fld.9	Field10	Fld.11
U2 Inactivity Time-out	SubType	U2 IT	Rsvd	Rsvd	Rsvd				
Vendor Device Test	SubType	VDT	Rsvd	Vendor Def	... for fields no. 1, 2 and n+x see Table 14-39				

Table 14-39: Long frames that start with fields HPSTART and Type and end with CRC and the Link Control Word

Frame	**Fld.3**	**Field4**	**Fld.5**	**Field6**	**Fld.7**	**Fld.8**	**Field9**	**F.10**	**Fld.11**	**Fld.12**	**Fld.13**	**F.14**	**F.15**	**Fld.16**	**F.17**	**F.18**	**F.19**	**F.20**	**F.21**	**F.22**
ACK	Route String	Device Address	Sub-Type	Rsvd	rty	D	EPT-Num	TT	HE	NumP	SeqNum	Rsvd	TPF	StreamId	Rsvd	SSI	WPA	DBI	PP	NBI
DPH	Route String	Device Address	Seq-Num	Rsvd	EOB	D	EPT-Num	TT	S	Length	StreamId	Rsvd	SSI	WPA	DBI	PP	NBI			
ERDY	Rsvd	Device Address	Sub-Type	Rsvd	D	EPT-Num	Rsvd	Num P	Rsvd	StreamId	Rsvd									
Port Capa-bility	Sub-Type	Link Speed	Rsvd	Num HP Buf	Rsvd	Dir	OTG	Rsvd	Tie-breaker	Rsvd	Rsvd									
STA-TUS	Route String	Device Address	Sub-Type	Rsvd	D	EPT-Num	Rsvd	Rsvd	PP	Rsvd										
Sublink Speed	Rsvd	Device Address	Sub-Type	Not-Type	Rsvd	TPF	Rsvd	LSE	ST	Rsvd	Lanes	LP	LSM							
Ahead of **Field 3**, add these two fields (**Field1** + **Field2**):							**Field1**		**Field2**		**Field3**	...								
							HPSTART		Type		see above	...								
After the **last field (n)**, add CRC + the **"Link Control Word"**:							**Field n+1**		**Field n+2**		**Field n+3**	**Field n+4**			**Field n+5**		**Field n+6**		**Field n+7**	
							CRC		**Hdr#**		**Rsvd**	**Hub#**			**DLY**		**DFR**		**CRC**	

Table 14-40: Frames without additional fields other than in this table

Frame	Field1	Field2	Field3	Field4	Field5	Field6	F.7	Fld.8	Field9
BCNT	BERC	EC							
BDAT	BDAT								
BERC	BERC								
BRST	COM	BRST							
Data Packet Payload	HPSTART	Data	CRC	DPPEND					
Data Packet Payload Abort	HPSTART	Data	CRC	DPPABORT					
IDLE	Idle								
Link Command	LCSTART	SubType	CRC	SubType	CRC				
SKIP	SKP								
TS1	COM	Rsvd	Train	Rsvd	Loop	Scramble	LL	Rsvd	TS1ID
TS2	COM	Rsvd	Train	Rsvd	Loop	Scramble	LL	Rsvd	TS2ID
TSEQ	COM	Symbol							

And finally the remaining types that are no specified USB 3.1 frames:

Table 14-41: Other types

Type	Field1	Field2	Field3	Field4	Field5	Field6	Field7	Field8	Field9
Error	CRC Error	Length Error	Unknown	Value out of range	Packet Incomplete				
Unknown	?								
Unknown Device Notification	HPSTART	Type	Rsvd	Device Address	SubType	NotType	?	CRC	**LCW**
Unknown Header Packet	HPSTART	Type	?	?	CRC	**LCW**			
Unknown LMP	HPSTART	Type	SubType	?	?	CRC	**LCW**		
Unknown TP	HPSTART	Type	Rsvd	Device Address	SubType	?	?	CRC	**LCW**
LCW = Link Control Word, see Table 14-39, occupies the last 6 fields.									

More information on the USB 3.1 protocol, including all specifications down to the field contents, is available in the "Universal Serial Bus 3.1 Specification" documentation. Refer to the online resources at www.usb.org.

14.22.2 USB 3.1 configuration

If you need information on how to get started with configuring the USB setup, see Section 14.22.2.3, "Configuring USB 3.1 signals", on page 929. Otherwise proceed with the configuration settings.

14.22.2.1 USB 3.1 configuration settings

Access: [Bus] > "USB 3.1" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

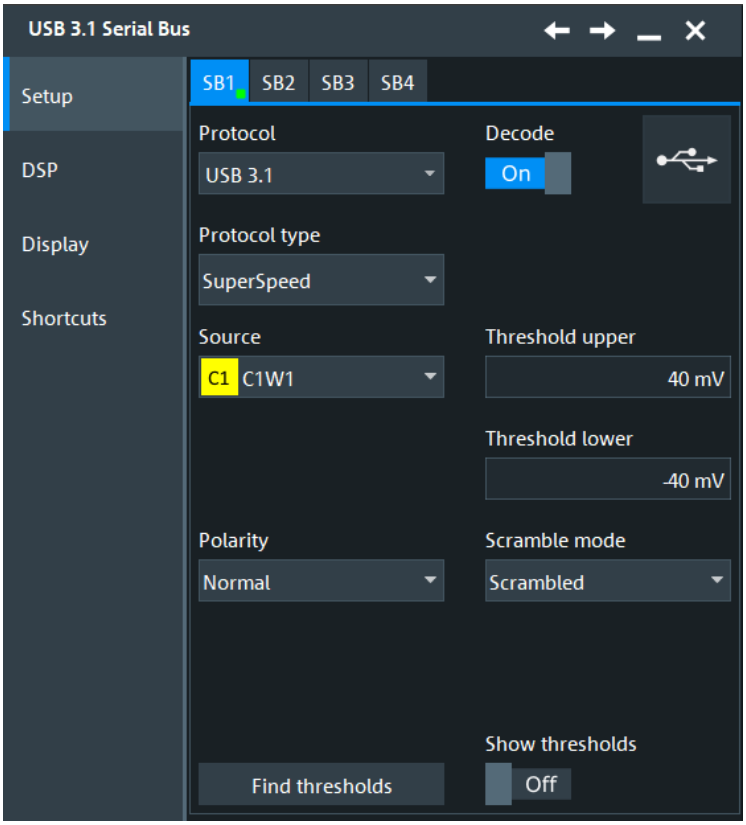


Figure 14-34: Serial bus protocol configuration dialog

See also: Section 14.1.1, "Setup - general settings", on page 556

Protocol type
Selects the USB 3.1 protocol type.

"SuperSpeed"
USB 3.1 Gen 1 with 5 Gbit/s data rate.

"SuperSpeedPlus"
USB 3.1 Gen 2 with 10 Gbit/s data rate.

Remote command:
`BUS<b>:USBThree:TYPE` on page 2464

Source
Defines the source for the data signal. You can select analog channels "C1" to "C4", and also active math and reference waveforms as source. If you want to trigger on the serial bus, analog channel sources are required.

Remote command:
`BUS<b>:USBThree:SOURce` on page 2462

Polarity
Defines the signal polarity settings. Permitted selections are "Normal" and "Inverted".

Remote command:
`BUS<b>:USBThree:POLarity` on page 2463

Thresholds
Sets the threshold values for digitization of the analog signals.

The USB 3.1 standard uses 2-state signals with an upper and a lower voltage level. Permitted thresholds values are in the range of -2 V to +2 V, the default is -40 mV to +40 mV.

If the signal value on the line is higher than the upper threshold, the signal state is considered high. Otherwise, if the signal value is below the lower threshold, the signal state is considered low. The two threshold levels allow configuring a hysteresis setting.

There are two ways to set the thresholds:

"Threshold"	Enter the upper and lower values directly into the fields.
"Find thresholds"	Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
`BUS<b>:USBThree:THRHigh` on page 2463
`BUS<b>:USBThree:THRLow` on page 2463
`BUS<b>:SETReflevels` on page 1834

Scramble Mode
Selects if the data pattern is scrambled or unscrambled. Scrambling as specified in the standard minimizes EMI emissions, the unscrambled mode can simplify testing and debugging.

Remote command:
`BUS<b>:USBThree:SCRMode` on page 2464


Show thresholds
If enabled, the threshold levels are displayed in the diagram.

Remote command:
`BUS<b>:THReshold` on page 1835

14.22.2.2 USB 3.1 DSP settings

Access: [Bus] > "Setup" tab > "Protocol = USB 3.1" > "DSP" tab

At this tab, you can enable and define the equalization techniques used for the equalization at the reciever side of the signal.

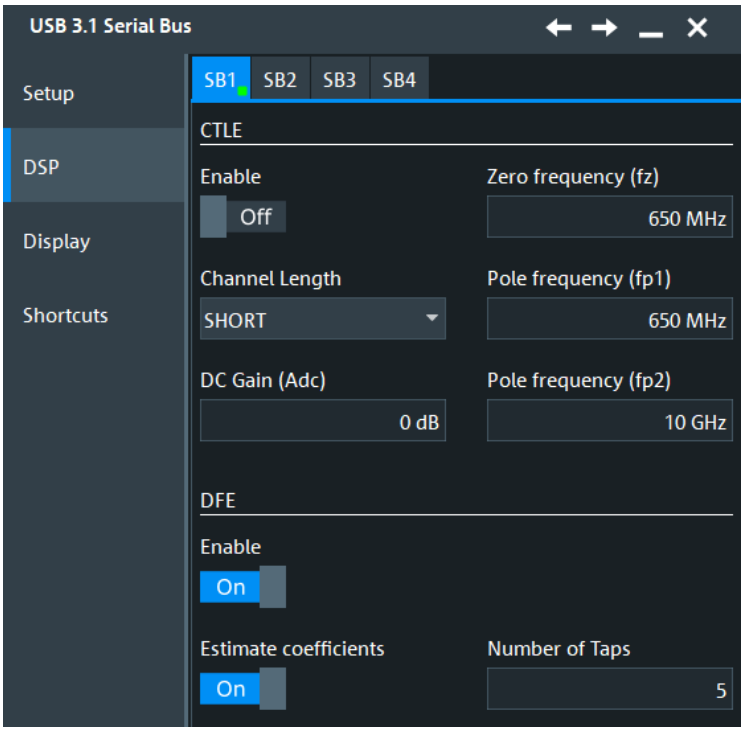

CTLE
Continuous time linear equalization (CTLE) is an equalization that can be used for improving the signal performance. It boosts the high frequency noise and the signal. Thus it helps reduce the inter-symbol interference (ISI) on the reciever side.

Enable ← CTLE
Enables the CTLE equalization.

Remote command:
`BUS<b>:CTLE:ENBLe` on page 2465

Zero frequency (fz) ← CTLE
Sets the zero frequency for the transfer function of the CTLE algorithm.

Remote command:
`BUS<b>:CTLE:Z1FReq` on page 2466

Pole frequency (fp1)/(fp2) ← CTLE
Sets the pole 1/2 frequency for the transfer function of the CTLE algorithm.

Remote command:
`BUS<b>:CTLE:P1FReq` on page 2465
`BUS<b>:CTLE:P2FReq` on page 2465

DC Gain (A_{DC}) ← CTLE
Sets the adjustable DC gain. This value can be chosen according to the channel loss characteristics. For low-loss channels, you can set a value close to 0 dB.

Remote command:
BUS<b>:CTLE:DCGain on page 2465

Channel Length ← CTLE
Selects the USB Super Speed channel length.

DFE
Defines the settings of the decision feedback equalization (DFE). DFE correction is needed when the channel is distosrted.

Enable ← DFE
Enables the use of the decision feedback equalization.

Remote command:
BUS<b>:USBThree:DFE:ENBLe on page 2466

Estimate coefficients ← DFE
Enables the use of estimate coefficients.

Remote command:
BUS<b>:USBThree:DFE:ESTCoeff on page 2467

Coefficient ← DFE
Sets the value of the coefficient.

Remote command:
BUS<b>:USBThree:DFE:COEFficient on page 2466

Number of Taps ← DFE
Sets a number of taps for the decision feedback filter.

Remote command:
BUS<b>:USBThree:DFE:TCONt on page 2467

14.22.2.3 Configuring USB 3.1 signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, set "Protocol"="USB3.1".
4. Select the "Protocol type".
5. Switch back to the "Setup" tab.
6. Set the logical thresholds: Either enter user-defined values directly in the "Threshold" fields, or set the thresholds to the middle reference levels with "Auto thresholds".
7. Enable "Decode".

For details on configuration settings, see Section 14.22.2.1, "USB 3.1 configuration settings", on page 926.

14.22.3 USB 3.1 trigger


If you need information on how to get started with triggering on USB 3.1 signals, see Section 14.22.3.2, "Triggering on USB 3.1", on page 933. Otherwise proceed with the USB 3.1 trigger settings.

If the high-speed serial pattern trigger (option R&S RTP-K140/K141) is installed, USB 3.1 Gen 1 uses it for achieving faster triggering.

14.22.3.1 USB 3.1 trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

In this section, all trigger settings for USB 3.1 are described. The user interface of the instrument guides you through the trigger setup.

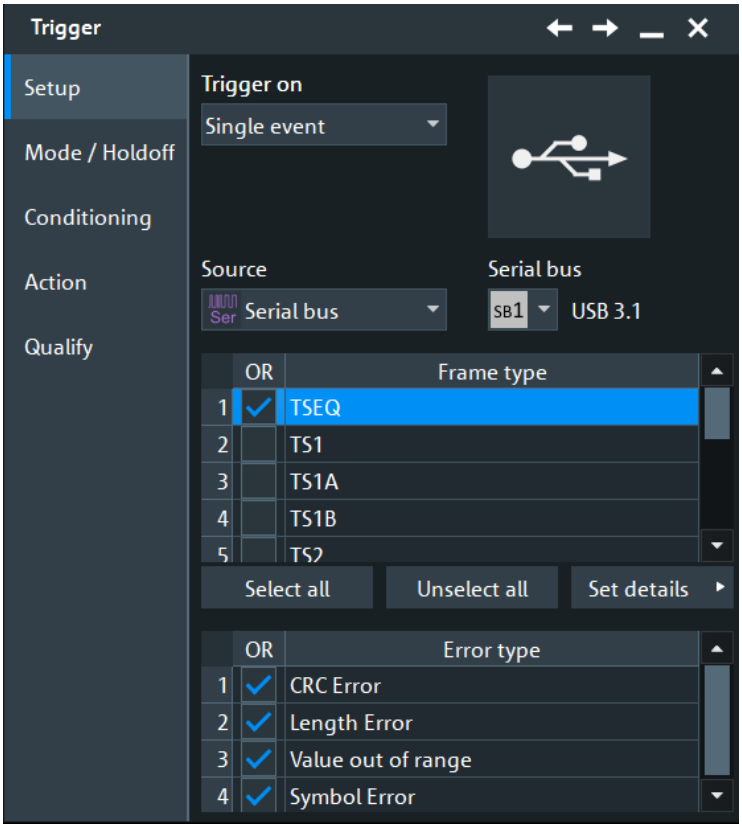

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Protocol type
Selects the protocol type for the USB 3.1 analysis.

Frame type
Selects the frame type for USB 3.1 analysis. For the available frame types, see "Frame types" on page 919.

You can define individual checking parameters for the fields listed in the "Set details" dialog.

The trigger instant is the last criterion that is fulfilled.


Remote command:
`TRIGger<t>:USBThree:FRENable` on page 2481
`TRIGger<t>:USBThree:FRAMe<fr>:ENABle` on page 2481

Error types: Item name, Enable
The table lists the error types you can trigger on: "CRC Error", "Length Error", "Value out of range", "Symbol Error". Enable any error that you want to trigger on in the "OR" column.

Remote command:
`TRIGger<t>:USBThree:ERENable` on page 2481
`TRIGger<t>:USBThree:ERRor<n>:ENABle` on page 2481

Set details
Select the frame type first, and then open the "Set details" dialog.

In this dialog to define the individual parameters for the fields of the selected frame.

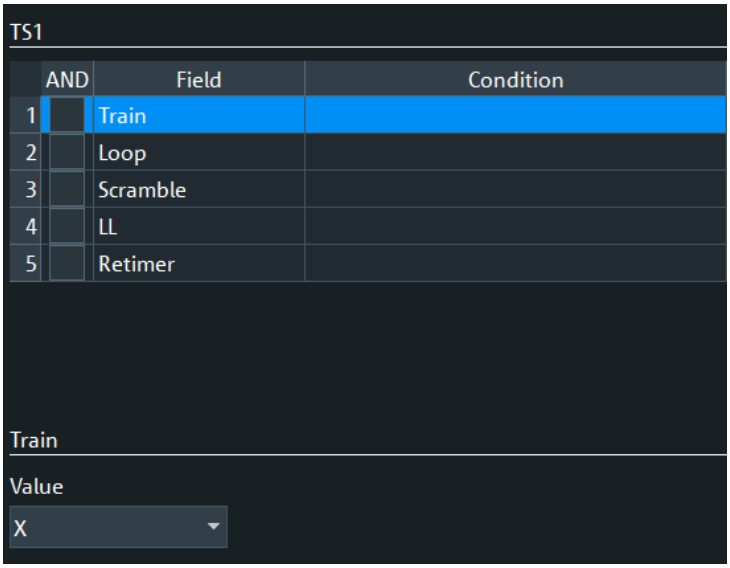

Field name / Condition Summary / Enable ← Set details
This table lists the field numbers and names in the selected frame together with a summary of the user settings of checking conditions for each field and a checkbox to enable the checking.

It also shows the user settings of checking conditions for each field and a checkbox to enable the checking.

Select a field in the table to specify the checking conditions for this field in the "Set details" dialog.

For an overview of frames and fields, see Frame types.

Remote command:
`TRIGger<t>:USBThree:FIENable` on page 2482
`TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:ENABle` on page 2482
`TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:ENABle` on page 2482

Data
Defines for the selected field, how a data check is executed.

"Condition" Sets the comparison condition to a specific value or a range.

"Min" Specifies the value or sets the start value of a range.

"Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:USBThree:DOPerator` on page 2484
`TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DOPerator` on page 2484
`TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DOPerator` on page 2484
`TRIGger<t>:USBThree:DMIN` on page 2483
`TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DMIN` on page 2483
`TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMIN` on page 2483
`TRIGger<t>:USBThree:DMAX` on page 2483

TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DMAX on page 2483
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMAX on page 2483

Data BitState
Defines the data bit state to be checked for the selected field. Permitted bit states are "1", "0" or "X" (do not care).

Remote command:
TRIGger<t>:USBThree:BIT on page 2482
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:BIT on page 2482
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:BIT on page 2482

Index
The trigger index setup consists of a comparison condition and one or two address patterns.

"Condition"	Sets the comparison condition to a specific value or a range.
"Min"	Specifies the value or sets the start value of a range.
"Max"	Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:USBThree:IOPerator on page 2485
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IOPerator on page 2485
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IOPerator on page 2485
TRIGger<t>:USBThree:IMIN on page 2485
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IMIN on page 2485
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMIN on page 2485
TRIGger<t>:USBThree:IMAX on page 2484
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IMAX on page 2484
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMAX on page 2484

14.22.3.2 Triggering on USB 3.1

Prerequisite: A bus is configured for the USB 3.1 signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the "Protocol Type".
5. If you trigger on errors, enable the error types you want to find.
6. Select the frame types you want to trigger on.
7. For some frame types, you can define the frame fields.

For information on the configuration settings, see Section 14.22.3.1, "USB 3.1 trigger settings", on page 930.

14.22.4 USB 3.1 decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.



Table 14-42: Content of the Decode results table

Column	Description
Frame	Frame number
State	Overall state of the frame, for example "OK" or "Incomplete"
Start	Start time of the frame
Frame Type	Type of the frame
Info	Specific frame information, for example result of the Link Speed Measurement = 5.0 Gb/s, or content of the Data Packet Payload

Enable "Details" in the decode table to display a more detailed analysis of the selected frame.

Table 14-43: Content of the Details frame table

Column	Description
State	Overall state of the field
Start	Start time of the field
Stop	Stop time of the field
Type	Type (name) of field
Numeric value	The numeric value of the field
Formatted	Formatted content of the field, for example HPSTART "F7" = end packet framing (EPF)

Remote commands

Remote control commands for retrieving decode results are described in Section 26.18.23, "USB 3.1 (option R&S RTP-K61/K62)", on page 2462.

Remote command:

- `BUS<b>:USBThree:RESult:FCOunt?` on page 2486
- `BUS<b>:USBThree:RESult:FRAMe<fr>:INFO?` on page 2486
- `BUS<b>:USBThree:RESult:FRAMe<fr>:TYPE?` on page 2486
- `BUS<b>:USBThree:RESult:FRAMe<fr>:STATe?` on page 2487
- `BUS<b>:USBThree:RESult:FRAMe<fr>:STARt?` on page 2487
- `BUS<b>:USBThree:RESult:FRAMe<fr>:STOP?` on page 2488
- `BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:TYPE?` on page 2488
- `BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STATus?` on page 2488
- `BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STARt?` on page 2489
- `BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STOP?` on page 2489
- `BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:VAL?` on page 2489
- `BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:FVAL?` on page 2490

14.22.5 Search on decoded USB 3.1 data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.


For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

If you need information on how to get started with searching USB 3.1 data, see Section 14.22.5.3, "Searching USB 3.1 data", on page 938. Otherwise proceed with the USB 3.1 search setup.

14.22.5.1 USB 3.1 search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

Search criteria
Use the "Search criteria" dialog to define the search type. If you search for frame content, define the frame type in which data is to be searched.

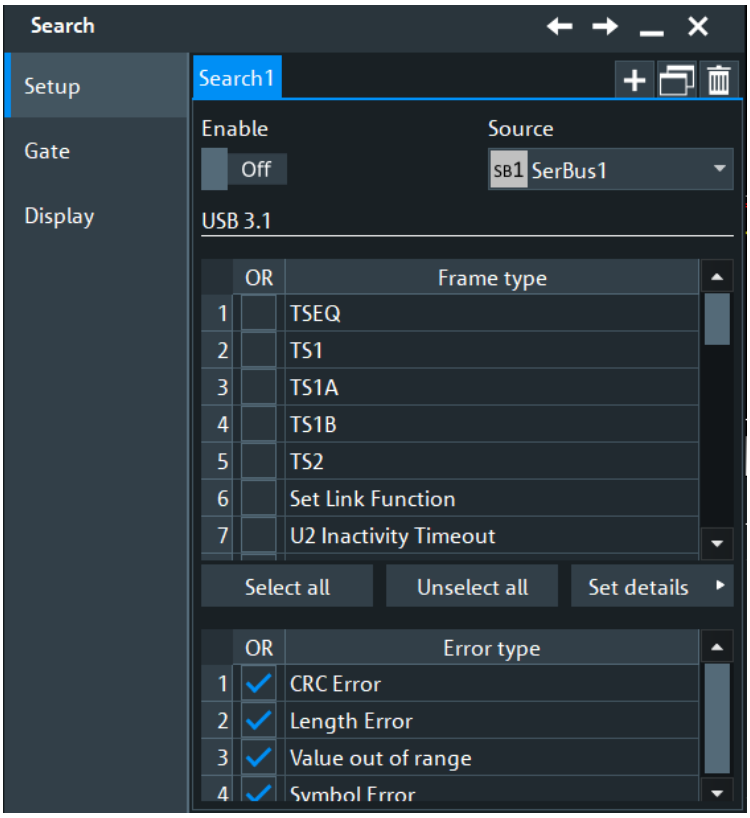

You can define individual search parameters for the fields of the selected frame in the table below the "Search criteria". To specify these parameters, select a field in the table and define the data and/or index operators and values, or the bit state.

For a description of how to set the search conditions, see Section 14.22.3.1, "USB 3.1 trigger settings", on page 930.

Remote command:
`SEARch:TRIGger:USBThree:ERENable` on page 2491
`SEARch:TRIGger:USBThree:ERRor<m>:ENABle` on page 2491
`SEARch:TRIGger:USBThree:FRENable` on page 2492
`SEARch:TRIGger:USBThree:FRAMe<fr>:ENABle` on page 2492
`SEARch:TRIGger:USBThree:FIENable` on page 2492
`SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:ENABle` on page 2492

SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:ENABle on page 2492
SEARch:TRIGger:USBThree:DOPerator on page 2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DOPerator on page 2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DOPerator on page 2494
SEARch:TRIGger:USBThree:DMIN on page 2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMIN on page 2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMIN on page 2494
SEARch:TRIGger:USBThree:DMAX on page 2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMAX on page 2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMAX on page 2493
SEARch:TRIGger:USBThree:BIT on page 2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT on page 2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:BIT on page 2493
SEARch:TRIGger:USBThree:IOPerator on page 2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IOPerator on page 2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IOPerator on page 2496
SEARch:TRIGger:USBThree:IMIN on page 2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMIN on page 2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN on page 2496
SEARch:TRIGger:USBThree:IMAX on page 2495
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMAX on page 2495
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMAX on page 2495

14.22.5.2 USB 3.1 search results

To get search results, "Enable" the search in the "Control" section of the "Search Setup" dialog. You can minimize, shift or close the search dialog to better see the "Search Results" table.

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- SEARch:RESult:USBThree:FCOunt? on page 2498
- SEARch:RESult:USBThree:FRAMe<fr>:TYPE? on page 2497
- SEARch:RESult:USBThree:FRAMe<fr>:INFO? on page 2498
- SEARch:RESult:USBThree:FRAMe<fr>:STATe? on page 2498
- SEARch:RESult:USBThree:FRAMe<fr>:STARt? on page 2498
- SEARch:RESult:USBThree:FRAMe<fr>:STOP? on page 2499
- SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:TYPE? on page 2499

- SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STATus? on page 2499
- SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STARt? on page 2500
- SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STOP? on page 2500
- SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:VAL? on page 2501
- SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:FVAL? on page 2501

14.22.5.3 Searching USB 3.1 data

Prerequisite: A serial bus is configured for the USB 3.1 signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to USB 3.1 (e.g. "SB1", unless already selected).

   The search dialog for USB3 protocol analysis is opened.
5. Specify search criteria according to Section 14.22.5.1, "USB 3.1 search setup", on page 936.
6. To acquire a waveform, press [Single].

   The R&S RTP performs a USB 3.1 decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.23 USBPD (option R&S RTP-K63)

R&S RTP-K63 is a firmware option that enables the R&S RTP to analyze Universal Serial Bus Power Delivery (USBPD) signals.

For analysis, USBPD encoded signals can be triggered, decoded and searched.

This chapter describes:

- The USB power delivery protocol....939
- USBPD configuration....940
- USBPD trigger....943
- USBPD decode results....947
- Search on decoded USBPD data....949

14.23.1 The USB power delivery protocol

The requirements on the USB have changed in the last years with the need of providing power through the USB port additionally to the data transfer. The USBPD specification aims to define standard for optimizing the power usage through the USB for the needs of the users.

USBPD characteristics

Main characteristics of USBPD are:

- Power direction is not fixed
- Negotiation of required power amount between devices
- Alternate modes can be defined through vendor defined messages, which allows for USB connector pins to be used for purposes other than USB

Message types

In the USBPD protocol, a power delivery connection can be made between a port that supplies power (source) and a port that consumes power (sink). They communicate with each other through messages. The USBPD specification defines three message types:

- Control messages: 16-bit messages used to control the messages between the port partners or transfer messages with no extra data. A control message consists of a message header and a CRC.
- Data messages: 48 bit to 240 bit messages used to transfer information between port partners. A data message consists of a message header and several data objects. The information that a data object carries is defined by the message type of the message header, see Table 14-44.
- Extended messages: can have a different length up to the defined maximum length of an extended message. It is used to transfer information between port partners. The information that the extended message carries is defined by the message type of the message header, see Table 14-44.

Frame packet types

All frame types are listed below. The frames listed above consist of individual sets of fields. Some frames only contain one field, others are much longer.

The frame types are sorted according to the message type.

Table 14-44: Frame packet types

SCPI	Description	Message type
ALRT	Alert message	Data
BATT	Battery status	Data
BIST	Built in self-test	Data
RQST	Request	Data
SINK	Sink capabilities message	Data
SRC	Source capabilities message	Data
VEND	Vendor defined message	Data
CTRL	Control	Control
DATA	Data	Data
LOWP	Low power	Low power
TEST	Test frame	Test
RESet	Reset frame	Reset
XBAC	Battery capabilities	Extended
XFRS	Firmware update response	Extended
XFRQ	Firmware update request	Extended
XGBC	Get battery cap	Extended
XGMI	Get manufacturer info	Extended
XGBS	Get battery status	Extended
XMFI	Manufacturer info	Extended
XMSG	Message	Extended
XSRC	Sources capabilities message	Extended
XSRS	Security response	Extended
XSRQ	Security request	Extended
XSTA	Status	Extended


More information on the USBPD protocol, including all specifications down to the field contents, is available in the "Universal Serial Bus Power Delivery Specification" documentation. Refer to the online resources at www.usb.org.

14.23.2 USBPD configuration

14.23.2.1 USBPD configuration settings

Access: [Bus] > "USBPD" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

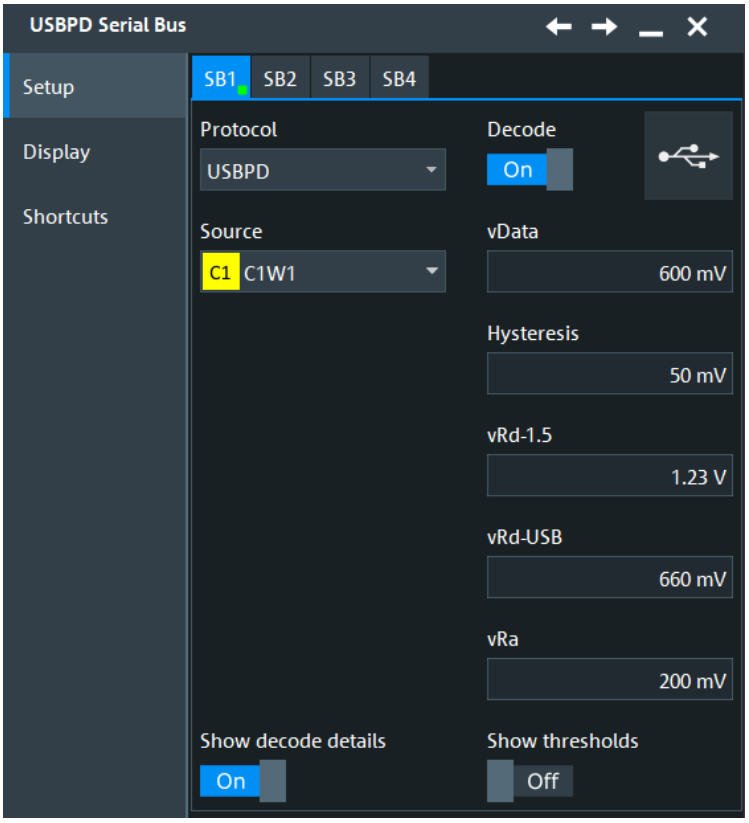

See also: Section 14.1.1, "Setup - general settings", on page 556

Data
Defines the source settings for the data signal. You can select analog channels "C1" to "C4", and also active math and reference waveforms as source. If you want to trigger on the serial bus, analog channel sources are required.

Remote command:
`BUS<b>:USBPd:SOURce` on page 2502

vData
Sets the threshold value of the data.

Remote command:
`BUS<b>:USBPd:THReshold` on page 2503

Hysteresis
Sets a value for the hysteresis of the data.

Remote command:
`BUS<b>:USBPd:HYSTeresis` on page 2502

Current advertisment thresholds
The signal level provides information about the current advertisement between the bursts. These thresholds determine the levels at which the current advertisement modes are defined.

"vRd-1.5" Sets the threshold at USB Type-C current of 1.5 A.

"vRd-USB" Sets the threshold at default USB Type-C current.

"vRa" Sets the threshold for the low current.

Remote command:
`BUS<b>:USBPd:THRBottom` on page 2503
`BUS<b>:USBPd:THRMid` on page 2503
`BUS<b>:USBPd:THRTop` on page 2504

Show decode detail
If enabled, the data words are broken down into subframes. If not enabled the data words are displayed as 32-bit data words.

If the "Show decode detail" is enabled, you cannot do a search and trigger on USBPD frames.

Remote command:
`BUS<b>:USBPd:DETail` on page 2502

Show thresholds
If enabled, the threshold levels are displayed in the diagram.


Remote command:
`BUS<b>:THReshold` on page 1835

14.23.2.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

To enhance the decode possibilities of the USBPD protocol, you can use an additional setting in the "Display" tab: "Decode layer".

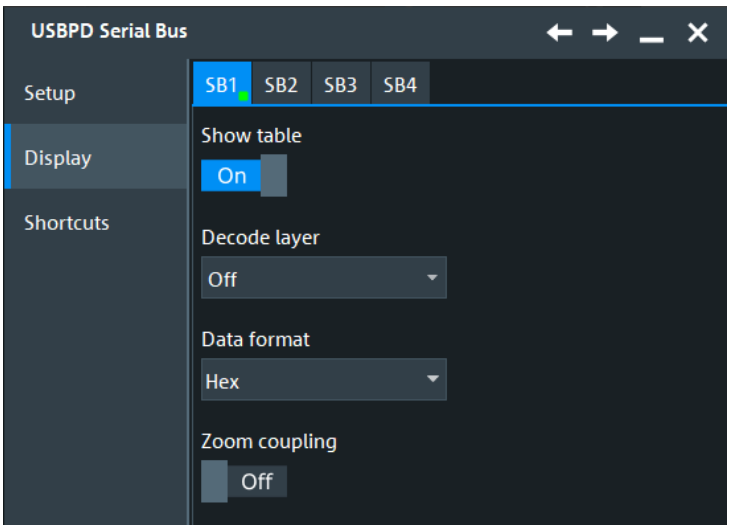

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

Available are:
- "Edges"
- "Bits"
- "4b5b Symbols"

14.23.2.3 Configuring the USBPD signals

For configuration, assign the lines to the input channels and define the logical thresholds and the hysteresis.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, set "Protocol"="USBPD".
4. Select the data source.
5. Enter the "Thresholds".
6. Enable "Decode".


14.23.3 USBPD trigger

If you need information on how to get started with triggering on USBPD signals, see Section 14.23.3.2, "Triggering on USBPD", on page 947. Otherwise proceed with the USBPD trigger settings.

14.23.3.1 USBPD trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

In this section, all trigger settings for USBPD are described. The user interface of the instrument guides you through the trigger setup.

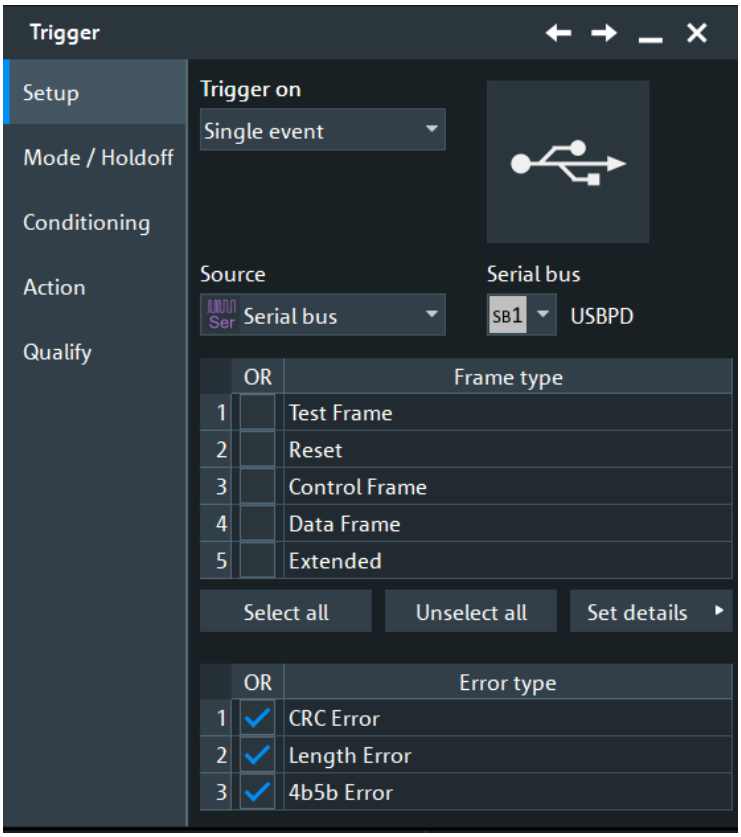

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Frame Type
Selects the frame type for the USBPD analysis. For the available packet types, see "Frame packet types" on page 939.

You can define individual checking parameters for the fields listed of the frame.


To specify these parameters, select a field from this list and open "Set details". You can define the data and/or index operators and values, or the bit state.

The trigger instant is the last criterion that is fulfilled.

Remote command:
TRIGger<t>:USBPd:FRENable on page 2506
TRIGger<t>:USBPd:FRAMe<fr>:ENABle on page 2506

Set details
Select the frame type first, and then open the "Set details" dialog.

In this dialog to define the individual parameters for the fields of the selected frame.

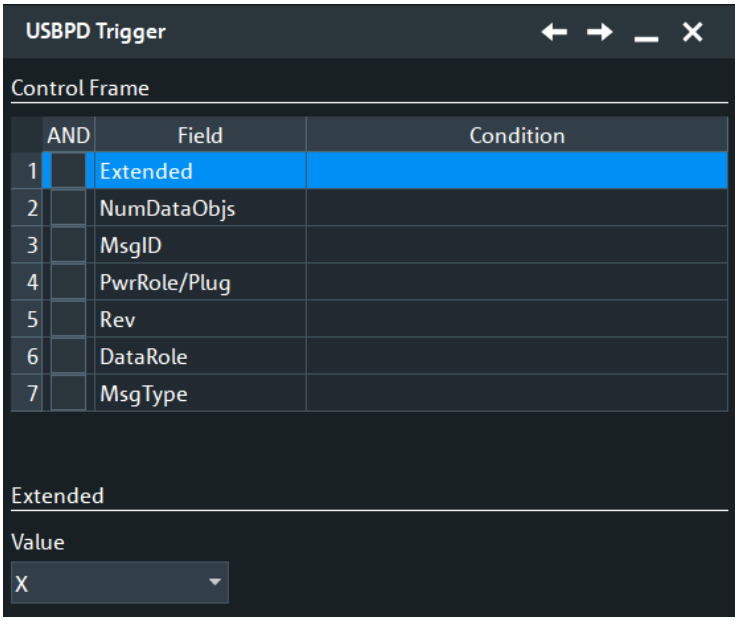

Enable/ Field name/ Condition ← Set details
This table lists the field numbers and names in the selected frame together with a summary of the user settings of checking conditions for each field and a checkbox to enable the checking.

Select a field in the table to specify the checking conditions for this field in the "Data", "BitState" and/or "Index" dialog (whichever applies). The condition is only applied, and the "Condition Summary" is only shown in the table, if "Enable" is checked.

For an overview of frames and fields, see "Frame packet types" on page 939.

Remote command:
TRIGger<t>:USBPd:FIENable on page 2507
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:ENABle on page 2507
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:ENABle on page 2507

Error > Enable /Item
The table lists the error types you can trigger on: "CRC Error", "Length Error", "4b5b Error". Enable any error that you want to trigger on in the "OR" column.

Remote command:
TRIGger<t>:USBPd:ERENable on page 2506
TRIGger<t>:USBPd:ERRor<n>:ENABle on page 2506

Data
Sets the data to be triggered on. The trigger data setup consists of a comparison condition and one or two data patterns.

"Condition" Sets the comparison condition to a specific value or a range.

"Min" Specifies the value or sets the start value of a range.

"Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger<t>:USBPd:DOPerator on page 2509
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DOPerator on page 2509
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DOPerator on page 2509
TRIGger<t>:USBPd:DMAX on page 2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DMAX on page 2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMAX on page 2508
TRIGger<t>:USBPd:DMIN on page 2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DMIN on page 2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMIN on page 2508

Data BitState
Defines the bit state to be checked for the selected field. Permitted bit states are "1", "0" or "X" (do not care).

Remote command:
TRIGger<t>:USBPd:BIT on page 2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:BIT on page 2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:BIT on page 2508

Index
Defines for the selected field, how an index check is executed.

"Condition" Defining a specific index or an index range requires to set the operator to one of the following conditions: equal, in range.

"Min" Specifies the index or sets the start value of an index range.

"Max" Sets the the end value of an index range, if "Condition" is set to `INRange`.

Remote command:
TRIGger<t>:USBPd:IOPerator on page 2510
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IOPerator on page 2510
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IOPerator on page 2510
TRIGger<t>:USBPd:IMAX on page 2509
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IMAX on page 2509
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMAX on page 2509
TRIGger<t>:USBPd:IMIN on page 2510
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IMIN on page 2510
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMIN on page 2510

14.23.3.2 Triggering on USBPD

Prerequisite: A bus is configured for the USBPD signal to be analyzed.

In order to be able to trigger on an USBPD data, the "Show decode detail" field in the "Configuration" tab of the protocol setup should be disabled.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Tap "Serial bus" and select the serial bus that is set to USBPD.
5. If you trigger on errors, enable the error types you want to find.
6. Select the frame types you want to trigger on.
7. For some frame types, you can define the frame fields.
   For information on how to proceed with the configuration settings, see Section 14.23.3.1, "USBPD trigger settings", on page 944.

14.23.4 USBPD decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".
2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show binary".
3. If required, enable "Zoom coupling"

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

The example in Figure 14-35 shows a simulated USBPD message. Among the long line of decoded frames, the zoom has selected a "Control" frame.



Figure 14-35: USBPD protocol: decoded signal

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

Table 14-45: Content of the Decode results table

Column	Description
State	Overall state of the frame
Start	Time of frame start
Frame Type	Type of the frame
Info	Information about the frame

Table 14-46: Content of the Details frame table

Column	Description
State	Overall state of the field
Start	Start time of the field
Type	Type (name) of field
Numeric value	The numeric value of the field
Formatted	Formatted content of the field

Remote commands

Remote commands are described in Section 26.18.24.3, "Decode results", on page 2511.

14.23.5 Search on decoded USBPD data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.


For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

If you need information on how to get started with searching USBPD data, see Section 14.23.5.3, "Searching USBPD data", on page 951. Otherwise proceed with the USBPD search setup.

14.23.5.1 USBPD search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

Search
In the "Search" dialog to define the frame type in which data is to be searched.

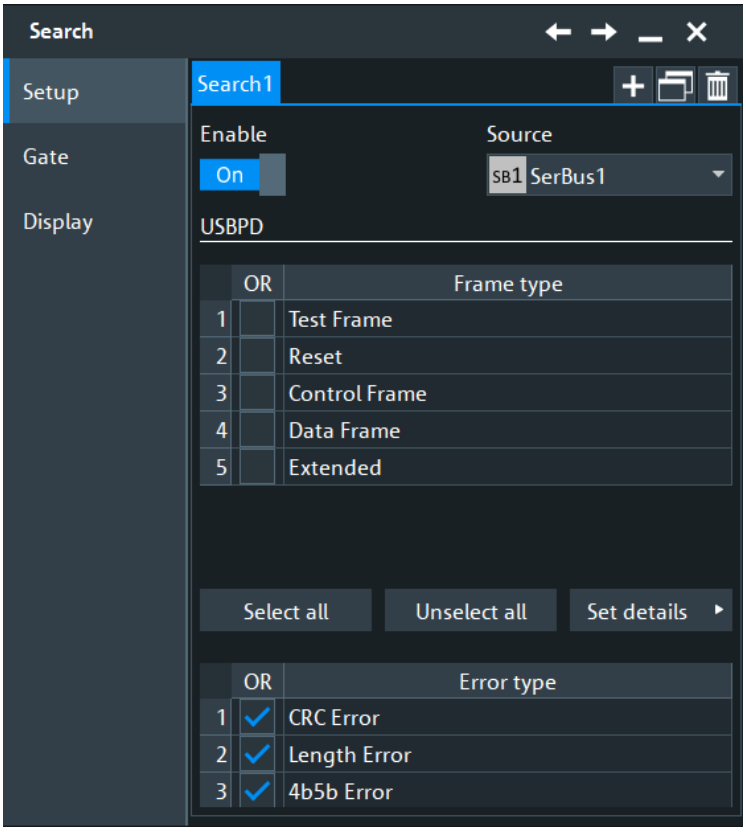

You can define individual search parameters for individual fields in the "Set details" dialog. To specify these parameters, select a field in this table and define the data and/or index operators and values, or the bit state.

For a description of how to set the search conditions, see Section 14.23.3.1, "USBPD trigger settings", on page 944.

Remote command:
SEARch:TRIGger:USBPd:ERENable on page 2517
SEARch:TRIGger:USBPd:ERRor<m>:ENABle on page 2517
SEARch:TRIGger:USBPd:BIT on page 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:BIT on page 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:BIT on page 2518
SEARch:TRIGger:USBPd:DMAX on page 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMAX on page 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMAX on page 2519
SEARch:TRIGger:USBPd:DMIN on page 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMIN on page 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMIN on page 2519
SEARch:TRIGger:USBPd:DOPerator on page 2520
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DOPerator on page 2520
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DOPerator on page 2520
SEARch:TRIGger:USBPd:IMAX on page 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMAX on page 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMAX on page 2521
SEARch:TRIGger:USBPd:IMIN on page 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMIN on page 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMIN on page 2521
SEARch:TRIGger:USBPd:IOPerator on page 2522
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IOPerator on page 2522
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IOPerator on page 2522

14.23.5.2 USBPD search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog to better see the "Search Results" table.

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- SEARch:RESult:USBPd:FCOunt? on page 2523
- SEARch:RESult:USBPd:FRAMe<fr>:DATA? on page 2523

- SEARch:RESult:USBPd:FRAMe<fr>:TYPE? on page 2527
- SEARch:RESult:USBPd:FRAMe<fr>:INFO? on page 2525
- SEARch:RESult:USBPd:FRAMe<fr>:STATe? on page 2526
- SEARch:RESult:USBPd:FRAMe<fr>:STARt? on page 2526
- SEARch:RESult:USBPd:FRAMe<fr>:STOP? on page 2527
- SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:TYPE? on page 2525
- SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STATus? on page 2523
- SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STARt? on page 2524
- SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STOP? on page 2524
- SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:VAL? on page 2525
- SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:FVAL? on page 2523

14.23.5.3 Searching USBPD data

Prerequisite: A serial bus is configured for the USBPD signal to be decoded and analyzed.

To be able to search for a USBPD data, the "Show decode detail" field in the "Configuration" tab of the protocol setup should be disabled. If "Show decode detail" is enabled, the "Enable" search button is disabled.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to USBPD (e.g. "SerBus1", unless already selected).

   The search dialog for USBPD protocol analysis is opened.
5. Specify search criteria according to Section 14.23.5.1, "USBPD search setup", on page 949.
6. To acquire a waveform, press [Single].

   The R&S RTP performs a USBPD decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.24 SpaceWire (option R&S RTP-K65)

The SpaceWire is a communication network standard used for spacecrafts. It is based on the IEEE 1355 standard of comunications and coordinated by the European Space Agency (ESA).

- SpaceWire basics 952
- SpaceWire configuration 953
- SpaceWire trigger 956
- SpaceWire decode results 959
- Search on decoded SpaceWire data 960

14.24.1 SpaceWire basics

The SpaceWire links are a Point-to-point (P2P) connection between a node and another node or a router. The link is full-duplex bidirectional serial data link.

The SpaceWire has two types of characters:

- Data characters containing a parity bit, a data control flag and eight bits of data.

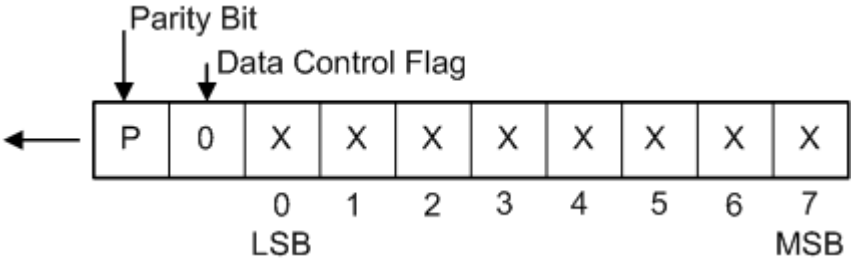


Figure 14-36: SpaceWire data characters

- Control characters containing a parity-bit, a data-control flag and the 2-bit control code. The data control flag is set to 1 and indicates that this is a control character.

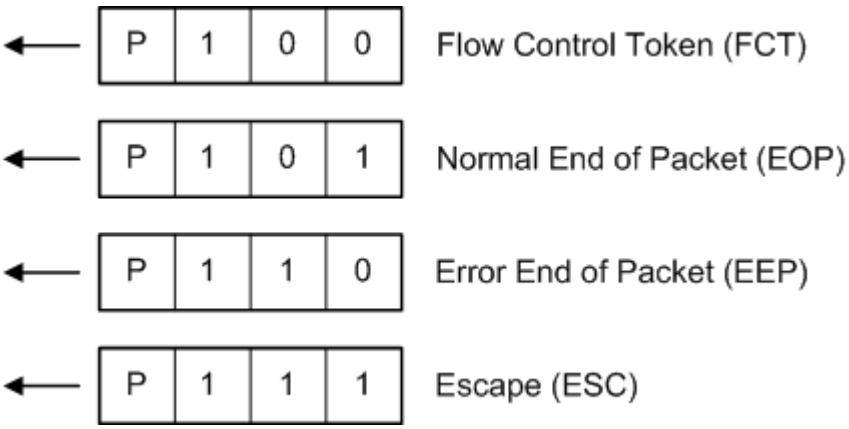


Figure 14-37: SpaceWire control characters

Also there are two control codes:

- NULL code consisting of an Escape (ESC) and a Flow Control Token (FCT)

- Time Code consisting of an ESC followed by a single data character

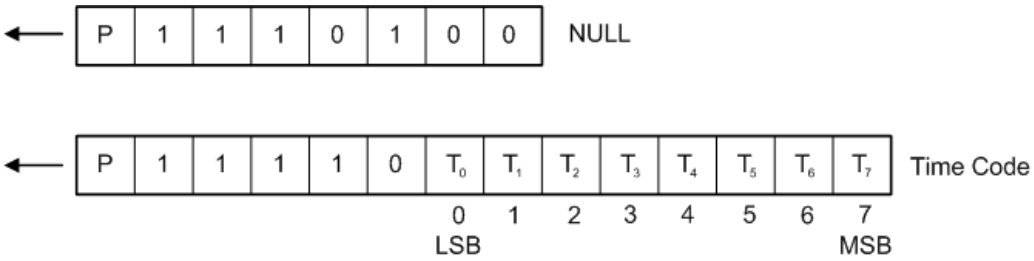



Figure 14-38: SpaceWire control codes

14.24.2 SpaceWire configuration

14.24.2.1 SpaceWire configuration settings

Access: [Bus] > "SpaceWire" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

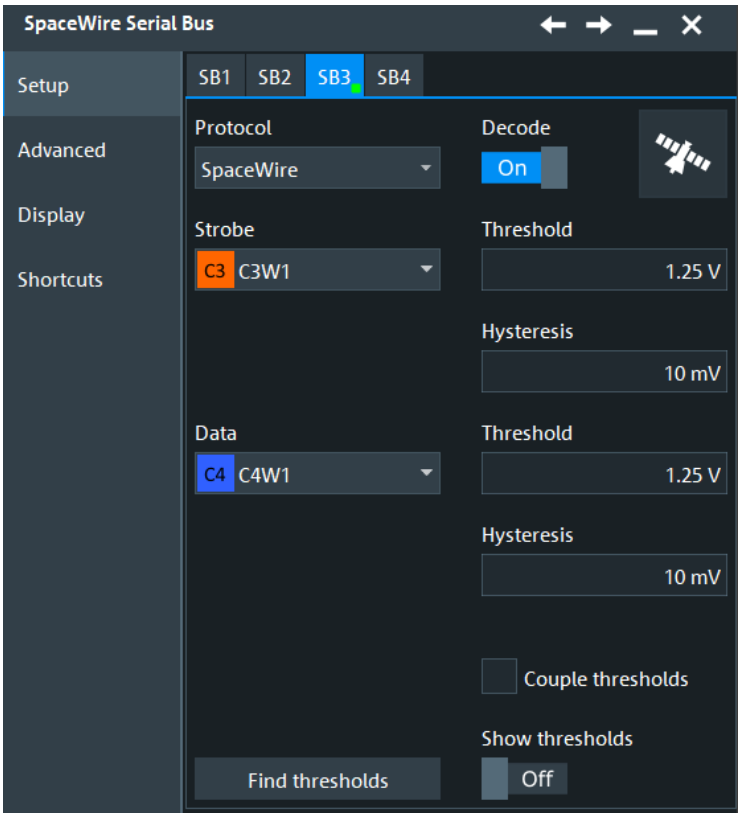

See also: Section 14.1.1, "Setup - general settings", on page 556

Strobe
Selects the source for the strobe signal.

Remote command:
BUS<b>:SWIRe:STRBe:SOURce on page 2530

Data
Selects the source for the data signal.

Remote command:
BUS<b>:SWIRe:DATA:SOURce on page 2528

Threshold setup
Sets the threshold value for the strobe/data signal.

"Threshold" Enter individual values for each line directly in the fields.

"Couple thresholds" Enables coupling, i.e. the same threshold and hysteresis value is used for the strobe and data signal.


Remote command:
BUS<b>:SWIRe:COUPling on page 2530
BUS<b>:SWIRe:STRBe:THReshold on page 2530
BUS<b>:SWIRe:DATA:THReshold on page 2529
BUS<b>:SWIRe:PRESet on page 2531
BUS<b>:SETReflevels on page 1834

Hysteresis
Sets a value for the hysteresis of the strobe/data signal.

Remote command:
BUS<b>:SWIRe:STRBe:HYSTeresis on page 2529
BUS<b>:SWIRe:DATA:HYSTeresis on page 2528

14.24.2.2 Advanced settings

Access: [Bus] > "Advanced" tab.

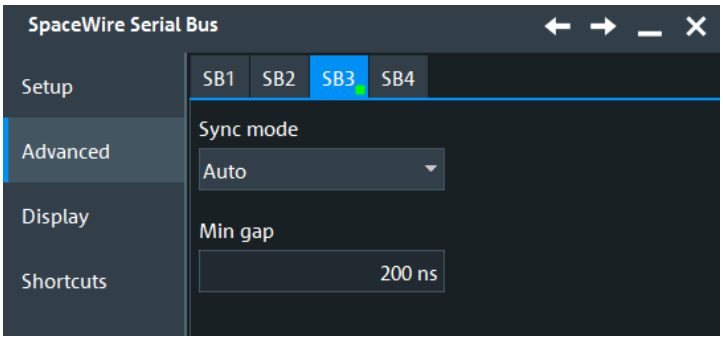

Bit Position
Sets the bit position, the align position for the manual synchronization mode. This can be useful when parity errors exist in the signal, and parity check is the main indicator for the decoder to do packet alignment.

Remote command:
BUS<b>:SWIRe:BPOSition on page 2528

Min Gap
SpaceWire can have idle phases where strobe and data signals are not being sent. These "gaps" are identified to resume decoding after this idle time.

"Min Gap" sets the minimum duration of a gap. Any inactivity greater than this time is interpreted as a gap and lead to a resynchronization to the signal.

Remote command:
BUS<b>:SWIRe:MINGap on page 2529
BUS<b>:SWIRe:MGAP on page 2529


Sync Settings
Sets the mode for the synchronization of the signal. In the auto mode, the decoder automatically does the packet align. In the manual mode, you can set the align point manually with the "Bit Position" setting.

Remote command:
BUS<b>:SWIRe:SYSLect on page 2530

14.24.2.3 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

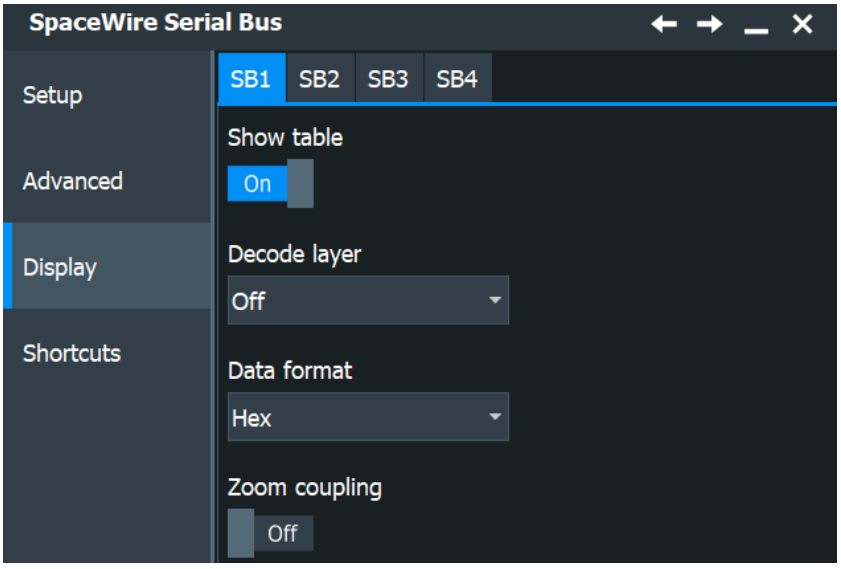

Decode Layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

Available are:

- "Off"
- "Edges"
- "Binary"

14.24.2.4 Configuring the SpaceWire signals

For configuration, assign the lines to the input channels and define the logical thresholds and the hysteresis.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus that you want to set up, for example "SB1".
3. In the "Setup" tab, set "Protocol"="SpaceWire".
4. Select the source and polarity for the strobe and data signals.
5. Enter the "Threshold" and the "Hysteresis" for the strobe and data signals.
6. Set the "Sync Settings" and the "Bit Position" if necessary.
7. Enable "Decode".


14.24.3 SpaceWire trigger

14.24.3.1 SpaceWire trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

Make sure that:


- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

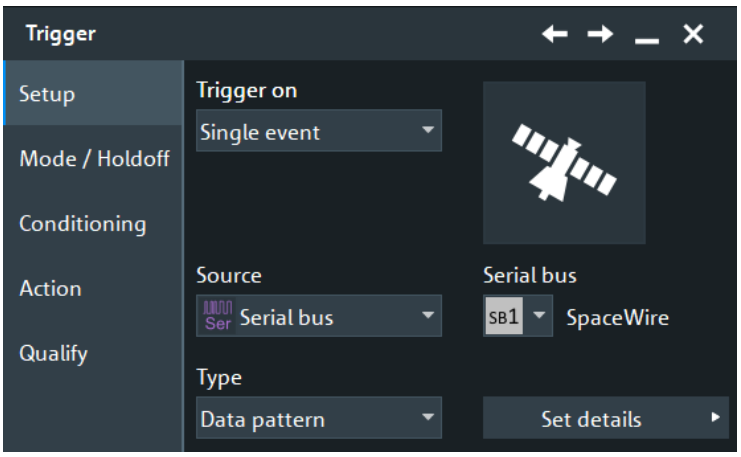

Type
Selects the trigger type for the SpaceWire analysis.


"Control frame" Sets the trigger to the selected control type frame.

"Data pattern" Sets the trigger to a defined data pattern or pattern range.

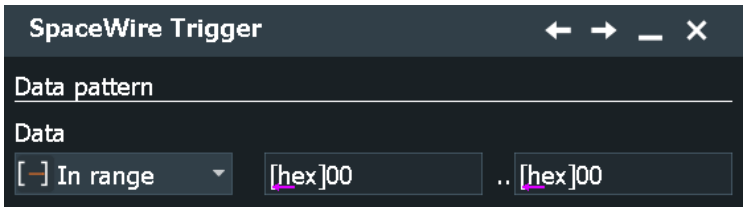

"NULL frame" Sets the trigger to a null frame, a frame without usable data.

"Time code" Sets the trigger to a time-code control code. You can define the data pattern of the time code to be triggered on.

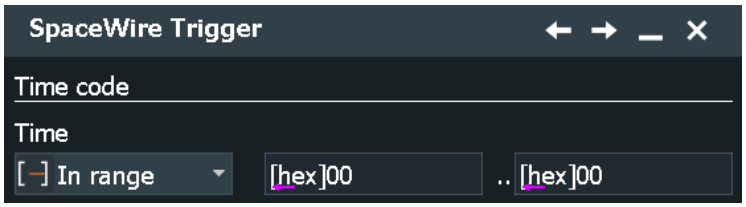

"Errors" Triggers on an enabled error type.

Remote command:
`TRIGger<t>:SWIRe:TYPE` on page 2534

Trigger control type
Triggers on a specific control type character.

- Any control type character
- Flow Control Token character
- End of Packet character (normal end)
- Error End of Packet character
- Illegal escape code character

Remote command:
`TRIGger<t>:SWIRe:CTYPe` on page 2532

Data (Time code)
Sets the specified data type for the time code to be triggered on. The trigger data setup consists of a comparison condition and one or two data patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/ Data" Specifies the value or sets the start value of a range.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:SWIRe:TIME:CONDition` on page 2533
`TRIGger<t>:SWIRe:TIME:MAX` on page 2534
`TRIGger<t>:SWIRe:TIME:MIN` on page 2534

Data (Data pattern)
Sets the specified data type for the data pattern to be triggered on. The data type setup consists of the condition and one or two data patterns.

In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Condition" Sets the comparison condition to a specific value or a range.

"Data Min/ Data" Specifies the value or sets the start value of a range.

"Data Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger<t>:SWIRe:DATA:CONDition` on page 2532
`TRIGger<t>:SWIRe:DATA:MAX` on page 2532
`TRIGger<t>:SWIRe:DATA:MIN` on page 2533

Parity error
Checks the parity of every frame and triggers if the parity is even.

Remote command:
`TRIGger<t>:SWIRe:ERRor:PARity` on page 2533

Length error
Triggers on a length error, which occurs when a frame is missing bits.

Remote command:
`TRIGger<t>:SWIRe:ERRor:LENGth` on page 2533

14.24.3.2 Triggering on SpaceWire

Prerequisite: A bus is configured for the SpaceWire signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Select the serial bus that is set to SpaceWire.
5. Select the "Trigger Type" to be used for SpaceWire protocol analysis.
6. To refine the trigger settings, configure additional settings, which are available for some trigger types.
   For details, see Section 14.24.3.1, "SpaceWire trigger settings", on page 956.

14.24.4 SpaceWire decode results

When the configuration of the serial bus is complete, the signal can be decoded:

1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode results table

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

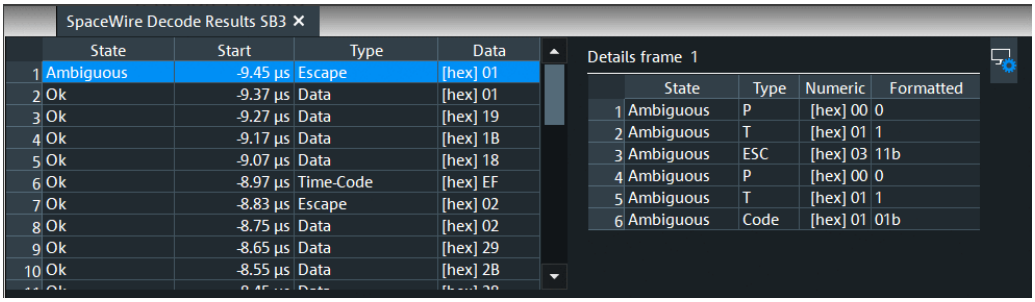


Table 14-47: Content of the Decode results table

Column	Description
State	Overall state of the frame
Start	Time of frame start in relation to the trigger point
Stop	Time of frame stop in relation to the trigger point
Type	Frame type
Data	Data value

Table 14-48: Content of the Details frame table

Column	Description
State	State of the field
Type	Field type
Numeric	Hexadecimal value of the field
Formatted	Formatted content of the field

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.



Remote commands

Remote commands to retrieve decode results are described in Section 26.18.25.3, "Decode results", on page 2535.

14.24.5 Search on decoded SpaceWire data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.


Before you can start the search, you have to configure the bus correctly and acquire decoded data.

To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

14.24.5.1 SpaceWire search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

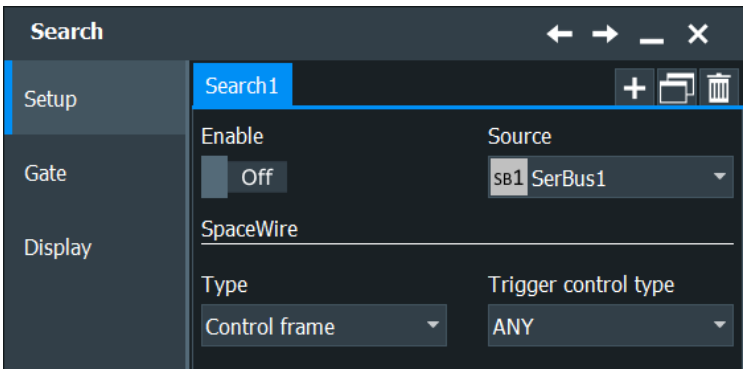

Type
Sets the search type for the SpaceWire analysis.

"Control frame" Searches for the selected control type frame.

"Data Pattern" Searches for a defined data pattern or pattern range.

"NULL frame" Searches for a null frame, a frame without usable data.

"Time Code" Searches for a time-code control code. You can define the data pattern of the time code to be searched for.

"ERRORs" Searches for an enabled error type.

Remote command:
`SEARch:TRIGger:SWIRe:TYPE` on page 2543

Trigger Control Type
Searches for a specific control type character.

- Any control type character
- Flow Control Token character
- End of Packet character (normal end)
- Error End of Packet character
- Illegal escape code character

Remote command:
`SEARch:TRIGger:SWIRe:CTYPe` on page 2540

Data (Time Code)
Sets the specified data type for the time code to be searched for. The data type setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data type ("Equal" or "Not equal") or a data type range.

"Data Min/ Data" Defines the bit pattern of the data pattern.
In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:SWIRe:TIME:CONDition on page 2542
SEARch:TRIGger:SWIRe:TIME:MAX on page 2543
SEARch:TRIGger:SWIRe:TIME:MIN on page 2543

Data (Data Pattern)
Sets the specified data type for the data pattern to be searched for. The data type setup consists of the condition and one or two data patterns.

"Condition" Defines the operator to set a specific data type ("Equal" or "Not equal") or a data type range.

"Data Min/ Data" Defines the bit pattern of the data pattern.
In binary format, use the following characters: 1; 0; or X (do not care). To enter the pattern in other formats use the bit pattern editor, see Section 14.1.7, "Bit pattern editor", on page 564.

"Data Max" The second data pattern is required to specify a range with conditions "In range" and "Out of range".

Remote command:
SEARch:TRIGger:SWIRe:DATA:CONDition on page 2541
SEARch:TRIGger:SWIRe:DATA:MAX on page 2541
SEARch:TRIGger:SWIRe:DATA:MIN on page 2541

Parity Error
Checks the parity of every frame and searches for even parity.

Remote command:
SEARch:TRIGger:SWIRe:ERRor:PARity on page 2542

Length error
Searches for an length error.

Remote command:
SEARch:TRIGger:SWIRe:ERRor:LENGth on page 2542

14.24.5.2 SpaceWire search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

Remote commands:

- SEARch:RESult:SWIRe:FCOunt? on page 2544
- SEARch:RESult:SWIRe:FRAMe<fr>:DATA? on page 2544
- SEARch:RESult:SWIRe:FRAMe<fr>:STARt? on page 2544

- SEARch:RESult:SWIRe:FRAMe<fr>:STATe? on page 2545
- SEARch:RESult:SWIRe:FRAMe<fr>:STOP? on page 2545
- SEARch:RESult:SWIRe:FRAMe<fr>:TYPE? on page 2545

14.24.5.3 Searching SpaceWire

Prerequisite: A serial bus is configured for the SpaceWire signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Tap "Setup search".
3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source", and select the serial bus that is set to SpaceWire (e.g. "SB1", unless already selected).
5. Specify search criteria according to Section 14.24.5.1, "SpaceWire search setup", on page 960.
6. To acquire a waveform, press [Single].

   The R&S RTP performs a SpaceWire decode according to the thresholds and protocol settings of the associated serial bus source.
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.25 PCIe (option R&S RTP-K72/K73)

R&S RTP-K72 is a firmware option that enables the R&S RTP to analyze Peripheral Component Interconnect Express (PCIe) signals encoded by the PCIe standard, generation 1 and 2.

With option R&S RTP-K73, you can also analyze PCIe standard, generation 3 signals.

For analysis, PCIe encoded signals can be triggered, decoded and searched.

- The PCIe protocol 964
- PCIe configuration 966
- PCIe digital signal processing (DSP) settings 970

- PCIe trigger....974
- PCIe Gen 1/2 decode results....985
- PCIe Gen 1/2 search....986

14.25.1 The PCIe protocol

The PCIe is a high-speed serial computer expansion bus standard.

The communication between two PCIe devices is performed through logical connections called links. Each link consists of several lanes. The lanes contain one differential signaling pair for receiving data and the other for transmitting it.

PCIe logical layers

The PCIe has three logical layers:

- Transaction layer: assembles and disassembles transaction layer packets (TLPs). TLP transfer information like read and write and some event types.
- Data link layer: used for link management and data integrity. Error detection and correction are also done in this layer. The data link layer produces data link layer packets (DLLP).
- Physical layer: includes the circuitry for the interface operation.

PCIe Packet Types

The communication between the layers is done through packets. All packet types that can be decoded by the R&S RTP are listed below.

SCPI name	Description	Type
MRD32 / MRD64	Memory Read Request for 32 bit/ 64-bit addresssing packet format	TLP
MRDLK32 / MRDLK64	Memory Read Request-Locked for 32 bit/ 64-bit addresssing packet format	TLP
MWR32 / MWR64	Memory Write Request for 32 bit/ 64-bit addresssing packet format	TLP
IORD	I/O Read Request	TLP
IOWR	I/O Write Request	TLP
CFGRD0 / CFGRD1	Configuration Read Type 0/1	TLP
CFGWR0 / CFGWR1	Configuration Write Type 0/1	TLP
TCfgRd / TCfgWr	Deprecated TLP Type	TLP
MSG	Message Request	TLP
MSGD	Message Request with data payload	TLP
CPL	Completion without Data	TLP
CPLD	Completion with Data	TLP

SCPI name	Description	Type
CPLLK	Completion for Locked Memory Read without Data	TLP
CPLDLK	Completion for Locked Memory Read	TLP
FA32 / FA64	Fetch and Add AtomicOp Request for 32 bit/ 64-bit addresssing packet format	TLP
SWP32 / SWP64	Unconditional Swap AtomicOp Request for 32 bit/ 64-bit addresssing packet format	TLP
CAS32 / CAS64	Compare and Swap AtomicOp Request for 32 bit/ 64-bit addresssing packet format	TLP
LPRFX	Local TLP Prefix	TLP
EPRFX	End-End TLP Prefix	TLP
EDB		TLP
ACK	Acknowledgement	DLLP
NAK	Negative acknowledgment	DLLP
PMEL1 / PMEL23	Power management Enter L1/ L23	DLLP
PMASRL1	Power management Active State Request L1	DLLP
PMRA	Power management request acknowledgment	DLLP
VENDS	Vendor Specific	DLLP
IFC1P / IFC2P	Initialization flow control 1/2 posted requests	DLLP
IFC1NP / IFC2NP	Initialization flow control 1/2 non posted requests	DLLP
IFC1CPL / IFC2CPL	Initialization flow control 1/2 completions	DLLP
UPDFCP	Update flow control 1/2 posted requests	DLLP
UPDFCNP	Update flow control non posted requests	DLLP
UPDFCCPL	Update flow control completions	DLLP
SKPOS	SKP ordered set	Ordered Set
TS1OS / TS2OS	Training sequence 1/2 ordered set	Ordered Set
FTSOS	Fast training sequence ordered set	Ordered Set
EIOS	Electrical idle ordered set	Ordered Set
EIEOS	Electrical idle exit ordered set	Ordered Set
COMPL	Compliance pattern	Ordered Set
MCOMPL	Modified Compliance pattern	Ordered Set
DCOMPL	Delay Compliance	Ordered Set


SCPI name	Description	Type
SDS	Start of data sequence OS	Ordered Set
MRIFC1 / MRIFC2	Multi-root initialization flow control 1/2	Multi-root DLLP
MRUPDFC	Multi-root update flow control	Multi-root DLLP
MRINIT	Multi-root initialization	Multi-root DLLP
MRRESET	Multi-root reset	Multi-root DLLP
IDL	Logical idle	Framing token
EDB	End bad	Framing token
EDS	End of data stream	Framing token
SDAT Sync data	Sync data	
SCTR Sync control	Syn Control	
PMUX	Protocol multiplexing	

14.25.2 PCIe configuration

14.25.2.1 PCIe configuration settings

Access: [Bus] > "PCIe" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

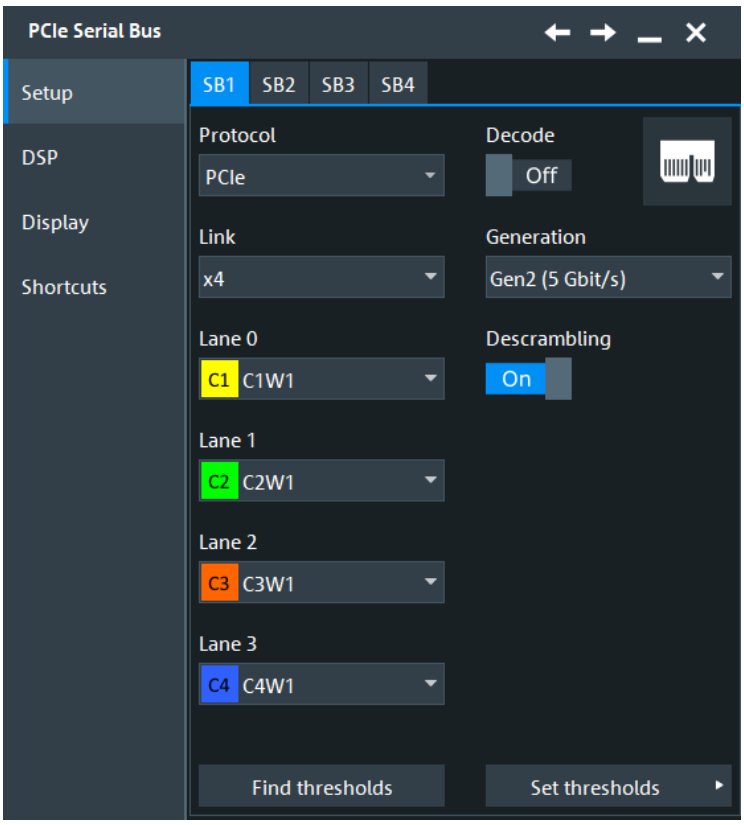

See also: Section 14.1.1, "Setup - general settings", on page 556

Generation
Selects the generation of the PCIe technology.

"PCIe Gen1 (2.5 Gbit/s) "	Selects the PCIe generation 1.0, standard introduced in 2003. It has a transfer rate of 2.5 Gbit/s.
"PCIe Gen2 (5 Gbit/s) "	Selects the PCIe generation 2.0, standard introduced in 2007. It has a transfer rate of 5 Gbit/s.
"PCIe Gen3 (8 Gbit/s) "	Selects the PCIe generation 3.0, standard introduced in 2010. It has a transfer rate of 8 Gbit/s.

Remote command:
`BUS<b>:PCIE:GEN` on page 2547

Link
Selects the link width, the number of lanes that are used for the transmission of the data.

Remote command:
`BUS<b>:PCIE:LNKW` on page 2548

Descrambling
Enables descrambling of the data.


Remote command:
`BUS<b>:PCIE:DSCRambling` on page 2547

Lane 0/1/2/3
Select the signal sources for the logical lanes.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Remote command:
`BUS<b>:PCIE:LZER:SOURce` on page 2548
`BUS<b>:PCIE:LONE:SOURce` on page 2548
`BUS<b>:PCIE:LTWO:SOURce` on page 2548
`BUS<b>:PCIE:LTHRee:SOURce` on page 2548

Thresholds
Sets the threshold value for digitization of signals for each line.

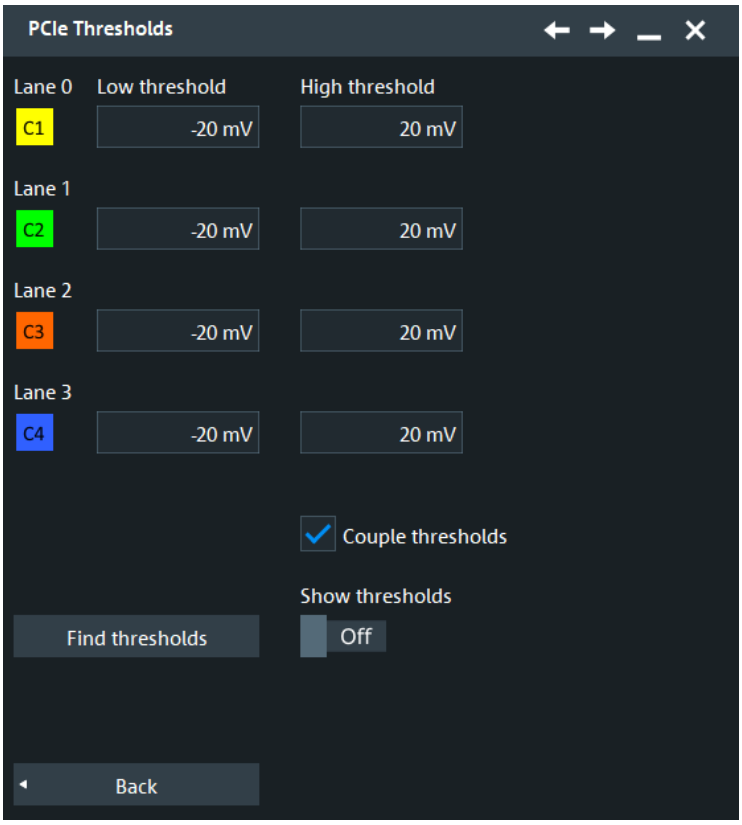

Couple thresholds ← Thresholds
Enables the same threshold value for all lanes.

Find thresholds ← Thresholds
Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
`BUS<b>:SETReflevels` on page 1834

Low threshold ← Thresholds
Sets the lower threshold value for the respective lane.

Remote command:
`BUS<b>:PCIE:LONE:THRLow` on page 2549
`BUS<b>:PCIE:LTHRee:THRLow` on page 2549
`BUS<b>:PCIE:LTWO:THRLow` on page 2549
`BUS<b>:PCIE:LZER:THRLow` on page 2549


High threshold ← Thresholds
Sets the high threshold value for the respective lane.

Remote command:
`BUS<b>:PCIE:LONE:THRHigh` on page 2548
`BUS<b>:PCIE:LTHRee:THRHigh` on page 2548
`BUS<b>:PCIE:LTWO:THRHigh` on page 2548
`BUS<b>:PCIE:LZER:THRHigh` on page 2548

14.25.2.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

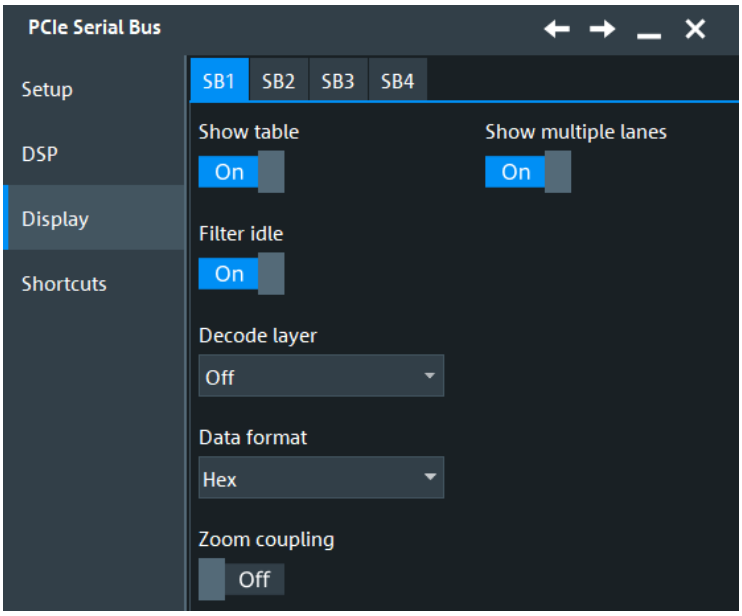

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

Available are:
- "Off"
- "Edges"

- "Binary"

Filter Idle
Enables the filtering of idle packets.

Remote command:
`BUS<b>:PCIE:FIDLe` on page 2547

Show multiple lanes
Displays the result in multiple lanes.

Remote command:
`BUS<b>:PCIE:SMLanes` on page 2549

14.25.2.3 Configuring PCIe Gen 1/2

For configuration, you assign the line to the input channel, set the threshold, the bitrate, and the sync symbol.

For details on configuration settings, see Section 14.25.2.1, "PCIe configuration settings", on page 966.


1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up.
3. In the "Setup" tab, select the protocol: "PCIe".
4. Tap the "Generation" button and select the PCIe protocol.
5. Tap the "Link" button and chose the link width.
6. Select the source for of the signal for each lane.
7. Check the threshold settings for each lane. Adjust the values if necessary.

14.25.3 PCIe digital signal processing (DSP) settings

14.25.3.1 PCIe Gen 1/2 CDR configuration settings

The process of clock data recovery (CDR) generates a reference clock from a high-speed serial data stream that is sent without a dedicated clock signal. The generated clock signal matches the frequency and is aligned to the phase of the data stream. The recovered clock can be used to sample the data stream and to obtain the sequence of transmitted bits.

Access: [Bus] > "Setup" tab > "Protocol = PCIe" = "Generation = Gen1/Gen2" > "DSP" tab

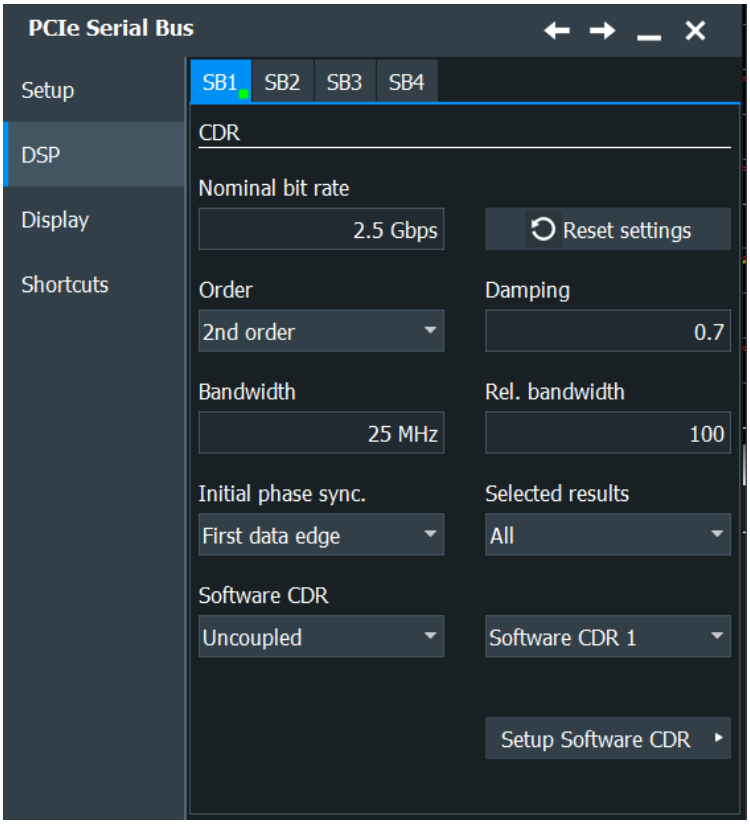

Nominal bit rate
Sets the quiescent frequency of the PLL. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Remote command:
`BUS<b>:CDR:BITRate` on page 2549

PLL settings
Phase-locked loop parameters are listed below.

Note: Nomial bit rate, bandwidth and relative bandwidth are interacting settings. Modifying one parameter also changes one of the dependent parameters.

"Order" Sets the order of the PLL: first or second order. PLL of higher order can compensate for more complex jitter behavior.

"Bandwidth" Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization. The PLL bandwidth is usually defined by the transmission standard.

"Rel. bandwidth" Sets the relative bandwidth, which is the ratio of the nominal bit rate to the PLL bandwidth.

"Damping" Sets the damping factor, which is only relevant for second order PLL.

Remote command:
`BUS<b>:CDR:PLL:ORDer` on page 2550
`BUS<b>:CDR:PLL:BWIDth` on page 2550

BUS<b>:CDR:PLL:RELBwidth on page 2550
BUS<b>:CDR:PLL:DAMPing on page 2550

Initial phase sync.
Defines the phase reference for the first clock edge.

"First sample" The first clock edge matches the first sample of the waveform at the left border of the display.

"First data edge" The first clock edge matches the first edge of the data signal.

Remote command:
BUS<b>:CDR:SYNC on page 2551

Selected results
The PLL requires some time to synchronize to the phase of the data stream. You can select when the CDR algorithm returns clock edges:

"After initial sync." The clock edges of the synchronization time are discarded; results are gathered after initial synchronization of the CDR. Thus, meaningful TIE measurement results can be obtained.

"All" All clock edges are used.


Remote command:
BUS<b>:CDR:RESults on page 2551

Software CDRs
Couples the protocol CDR to the selected software CDR. For more information about it see, Section 19.3, "Clock data recovery", on page 1150.

14.25.3.2 PCIe Gen 3 settings

Access: [Bus] > "Setup" tab > "Protocol = PCIe" = "Generation = Gen3" > "DSP" tab

At this tab, you can enable and define the equalization techniques used for the equalization at the reciever side of the signal.

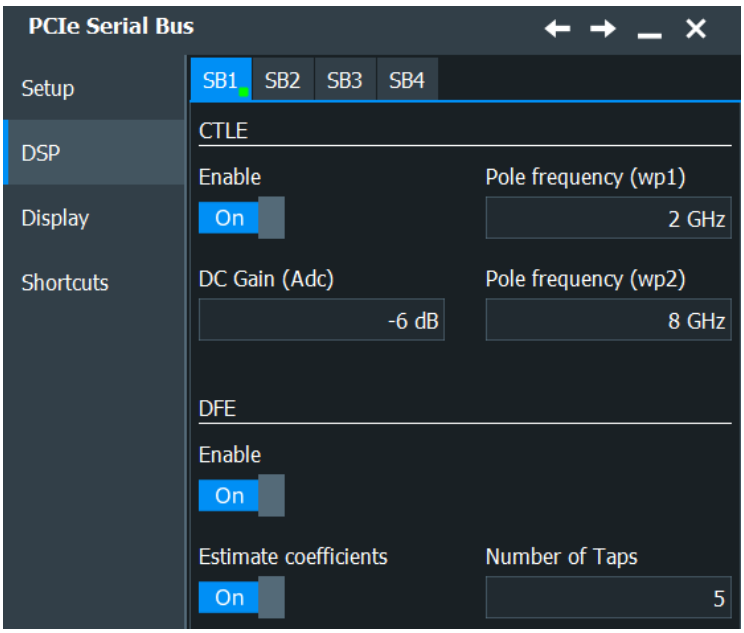

CTLE
Continuous time linear equalization (CTLE) is an equalization that can be used for improving the signal performance. It boosts the high frequency noise and the signal. Thus it helps reduce the inter-symbol interference (ISI) on the reciever side.

The transfer function for behavioral CTLE is defined as follows:

$$H(s) = \omega_{P2}\frac{s + \omega_{P1} * A_{DC}}{(s + \omega_{P1}) * (s + \omega_{P2})}$$

Figure 14-39: Transfer function for behavioral CTLE

$\omega_{P1}=2\pi f_{P1}$ = Pole one frequency
$\omega_{P2}=2\pi f_{P2}$ = Pole two frequency

The PCI Express® Base Specification Revision 3.0, defines 1st order CTLE with fixed low frequency (LF) and high frequency (HF) poles for behavioral Rx equalization.

Enable ← CTLE
Enables the CTLE equalization.

Remote command:
`BUS<b>:CTLE:ENBLe` on page 2465

Pole frequency (fp1)/(fp2) ← CTLE
Sets the pole 1/2 frequency for the transfer function of the CTLE algorithm.

Remote command:
`BUS<b>:CTLE:P1FReq` on page 2465
`BUS<b>:CTLE:P2FReq` on page 2465

DC Gain (A_{DC}) ← CTLE
Sets the adjustable DC gain. This value can be chosen according to the channel loss characteristics. For low-loss channels, you can set a value close to 0 dB.

Remote command:
`BUS<b>:CTLE:DCGain` on page 2465

DFE
Defines the settings of the decision feedback equalization (DFE). DFE correction is needed when the channel is distorted.

Enable ← DFE
Enables the use of the decision feedback equalization.

Remote command:
`BUS<b>:PCIE:DFE:ENBLe` on page 2554

Estimate coefficients ← DFE
Enables the use of estimate coefficients. The coefficients will

Remote command:
`BUS<b>:PCIE:DFE:AUTO` on page 2553

Coefficient ← DFE
Sets the value of the coefficient.

Remote command:
`BUS<b>:PCIE:DFE:COEFficient` on page 2553


Number of Taps ← DFE
Sets a number of taps for the decision feedback filter.

Remote command:
`BUS<b>:PCIE:DFE:TCONt` on page 2554

14.25.4 PCIe trigger

14.25.4.1 PCIe trigger settings

Access: [Bus] > "Shortcuts" tab > "Setup trigger"

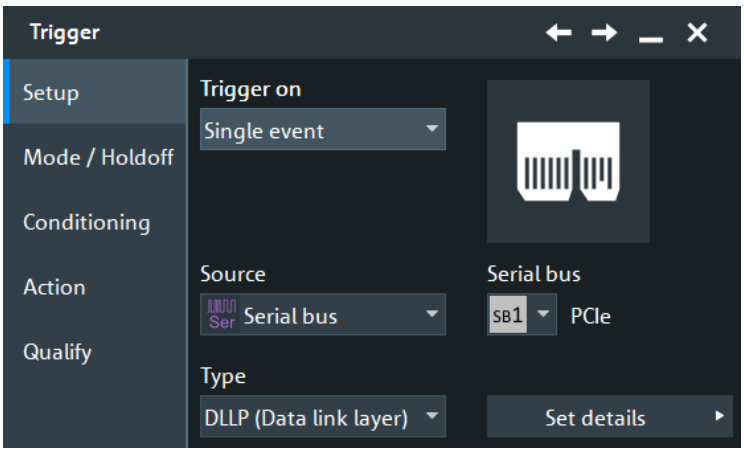

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Trigger level
Defines the trigger level for PCIe 3.

Remote command:
`TRIGger<t>:PCIE:TRGLevel` on page 2555

Trigger type PCI express
Selects the trigger type for the PCI express analysis.

"TLP (Transaction layer)" Sets the trigger on a defined type of the transaction layer packet.

"DLLP (Data link layer)" Sets the trigger on a defined type of the data link layer packet.


"Ordered Sets" Sets the trigger on a defined ordered set.

"Error Condition" Sets the trigger on a selection of error conditions.

Remote command:
`TRIGger<t>:PCIE:TYPE` on page 2568

TLP (Transaction layer)
Specifies the trigger conditions for the transaction layer type trigger.

TLP ← TLP (Transaction layer)
Triggers on a transaction type.

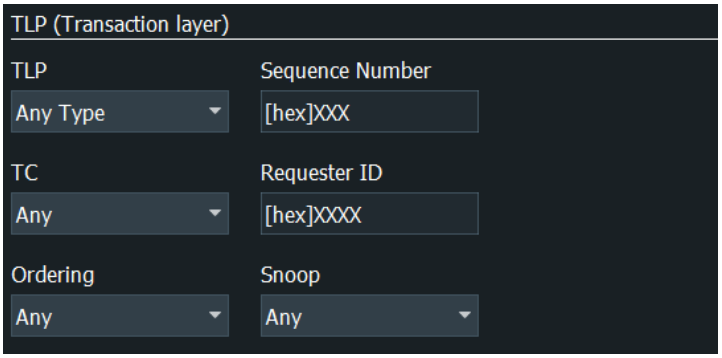

"Any type" Triggers on any transaction type.

"Mem" Triggers on memory transaction type used for data transfers to memory-mapped locations.

"IO" Triggers on I/O transaction type used for data transfers to I/O-mapped locations.

"Cfg" Triggers on configuration transaction type used to set up the device functions.

"Msg" Triggers on message transaction type used for transmitting diverse messages.

"Cpl" Triggers on completion without data.

"FetchAdd" Triggers on fetch and add atomic op request.

"Swap" Triggers on unconditional swap atomic op request.

"CAS" Triggers on compare and swap atomic op request transaction type.

Remote command:
`TRIGger<t>:PCIE:TLP:TYPE` on page 2567

Sequence Number ← TLP (Transaction layer)
Triggers on a sequence number, which indicates if any TLPs have been lost.

Remote command:
`TRIGger<t>:PCIE:TLP:SNUM` on page 2567

TC ← TLP (Transaction layer)
Triggers on a traffic class which is mapped on a specific virtual channel. The TC label is transmitted unmodified through the fabric.

Remote command:
`TRIGger<t>:PCIE:TLP:TCHN` on page 2567

Ordering ← TLP (Transaction layer)
Triggers on an ordering. The ordering can be relaxed or strong.

Remote command:
`TRIGger<t>:PCIE:TLP:ORDE` on page 2566

Snoop ← TLP (Transaction layer)
Triggers on a snoop state.

Remote command:
TRIGger<t>:PCIE:TLP:SNOO on page 2566

Requester ID ← TLP (Transaction layer)
Triggers on a requester ID, consisting of the requester's bus number, device number, and function number.

Remote command:
TRIGger<t>:PCIE:TLP:REID on page 2566

Device ID ← TLP (Transaction layer)
Triggers on a device ID, a field that can be assigned a value by the vendor for classifying root complex register blocks (RCRB). The Device ID is only valid for Configuration transaction. It is composed of 8-bit us number, 5-bit device number and a 3-bit function number.

Remote command:
TRIGger<t>:PCIE:TLP:DEID on page 2565

Read/Write ← TLP (Transaction layer)
Triggers on a read and/ or write state.

Remote command:
TRIGger<t>:PCIE:TLP:MERW on page 2565

Address Type ← TLP (Transaction layer)
Triggers on an address type. The address type can be 32 bit or 64 bit.

Remote command:
TRIGger<t>:PCIE:TLP:ADRT on page 2564

Type ← TLP (Transaction layer)
Triggers on a configuration type.

Remote command:
TRIGger<t>:PCIE:TLP:CFGT on page 2564

Routing ← TLP (Transaction layer)
Triggers on a selected message routing type.

Remote command:
TRIGger<t>:PCIE:TLP:MSGR on page 2566

Message Code ← TLP (Transaction layer)
Triggers on a specific message code.

Remote command:
TRIGger<t>:PCIE:TLP:MSGC on page 2565

Status ← TLP (Transaction layer)
Triggers on a completion status.

Remote command:
TRIGger<t>:PCIE:TLP:CPLS on page 2565

Completer ID ← TLP (Transaction layer)
Triggers on a completer ID, consisting of the completer's bus number, device number, and function number.


Remote command:
`TRIGger<t>:PCIE:TLP:CPID` on page 2564

DLLP Type
Sets the trigger to the type of DLLP. You can refine the settings for the different types according to their specifications.

Remote command:
`TRIGger<t>:PCIE:DLLP:TYPE` on page 2560

DLLP Any Type conditions
Sets the trigger to any type of DLLP.


DLLP MRDLLP conditions
Specifies the conditions for the multi-root trigger.

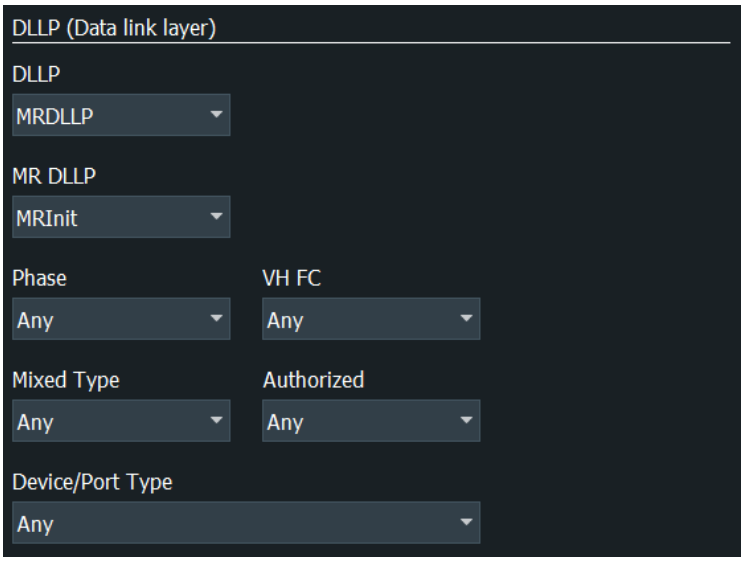

MR DLLP ← DLLP MRDLLP conditions
Triggers on a multi-root type for the data link layer.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:TYPE` on page 2558

MRInit ← DLLP MRDLLP conditions
Specifies the conditions for the multi-root initialization protocol trigger.

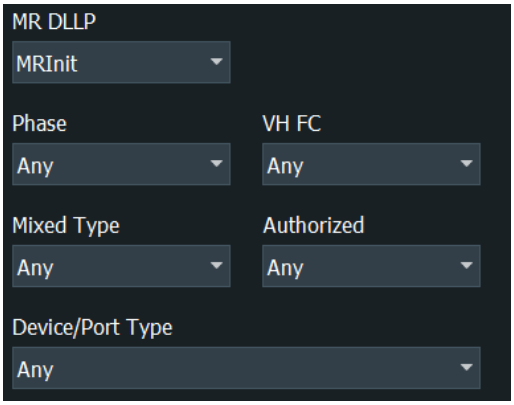

Phase ← MRInit ← DLLP MRDLLP conditions
Triggers on a phase state.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:PHAS` on page 2557

VH FC ← MRInit ← DLLP MRDLLP conditions
Triggers on a virtual hierarchies flow control presence.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:VHFC` on page 2558

Mixed Type ← MRInit ← DLLP MRDLLP conditions
Triggers on a mixed type presence.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:MIXT` on page 2557


Authorized ← MRInit ← DLLP MRDLLP conditions
Triggers on an authorized state presence.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:AUTH` on page 2556

Device/Port Type ← MRInit ← DLLP MRDLLP conditions
Triggers on an device/port type.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:DVPT` on page 2557

MRInitFC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Specifies the conditions for the multi-root initialization flow control protocol trigger.

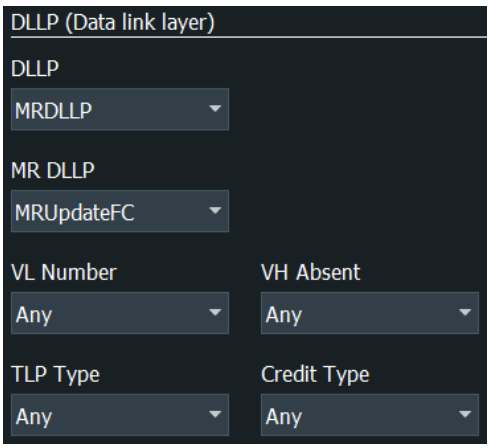

VL Number ← MRInitFC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Triggers on a virtual link (VL) number.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:VLNR` on page 2559

VH Absent ← MRInitFC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Triggers on absent virtual hierarchies (VH).

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:HABS` on page 2557

TLP Type ← MRInitFC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Triggers on a transaction layer type for a multi-root data link layer trigger type.

"Any" Any transaction layer type.

"P" Posted credit.

"N" Non posted credit.


"Cpl" Completion credit.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:TLPT` on page 2558

Credit Type ← MRInitFC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Triggers on any, data or header credit type.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:CRET` on page 2556

MRReset ← DLLP MRDLLP conditions
Specifies the conditions for the multi-root reset protocol trigger.

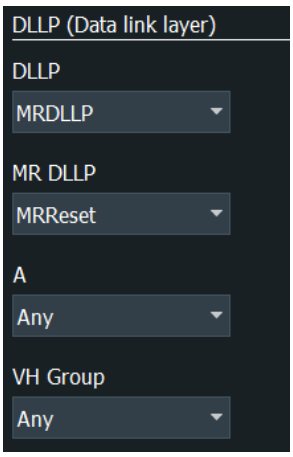

A ← MRReset ← DLLP MRDLLP conditions
Triggers on the value of the A bit (Ack/Request).

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:RESA` on page 2558

VH Group ← MRReset ← DLLP MRDLLP conditions
Triggers on the selected virtual hierarchies group.

Remote command:
`TRIGger<t>:PCIE:DLLP:MULT:VHGR` on page 2559

DLLP ACK/NAK conditions
Triggers on an acknowledgement (ACK)/ negative acknowledgment (NAK).

Sequence ← DLLP ACK/NAK conditions
Triggers on the sequence field indicating what TLPs are affected by the ACK/NAK.

Remote command:
`TRIGger<t>:PCIE:DLLP:SEQ` on page 2560

DLLP Init FC1/InitFC2/UpdateFC conditions
Triggers on flow control initialization/update conditions.

Credit Type ← DLLP Init FC1/InitFC2/UpdateFC conditions
Triggers on a credit type value.

"Any" Triggers on any credit type.

"P" Triggers on posted requests.

"NP" Triggers on non posted requests.

"CPL" Triggers on completions.

Remote command:
`TRIGger<t>:PCIE:DLLP:FCTL:CRET` on page 2556

VC ID ← DLLP Init FC1/InitFC2/UpdateFC conditions
Triggers on a virtual channel ID value.


Remote command:
TRIGger<t>:PCIE:DLLP:FCTL:VCID on page 2556

DLLP PM conditions
Triggers on a specified power management conditions.

PM Type ← DLLP PM conditions
Triggers on a power management type.

Remote command:
TRIGger<t>:PCIE:DLLP:POWM on page 2559

DLLP Vendor conditions
Triggers on a specified vendor conditions.

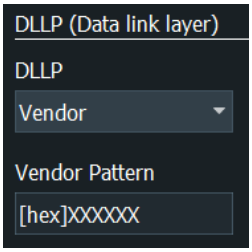

Vendor Pattern ← DLLP Vendor conditions
Triggers on a vendor pattern.


Remote command:
TRIGger<t>:PCIE:DLLP:VPAT on page 2560

Ordered set condition
Triggers on an ordered set.

"SKP OS"	Triggers on an SKP ordered sets.
"Training Seq 1/2"	Triggers on a training sequence ordered set.
"Fast Training Seq"	Triggers on a fast training sequence ordered set.
"Electrical Idle OS"	Triggers on an electrical idle ordered set that must be send by the transmitter before it can enter the electrical idle.
"Electrical Idle Exit OS"	Triggers on an electrical idle exit ordered set.
"Compliance Pattern"	Triggers on a compliance pattern ordered set.

Remote command:
TRIGger<t>:PCIE:OSET:TYPE on page 2563

Error Condition PCIe Gen 1/2
Triggers on enabled error condition.

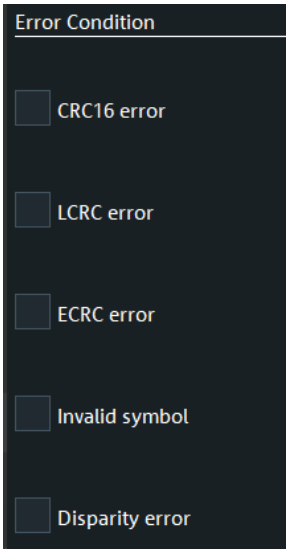

"CRC16 error" Triggers on 16-bit cyclic redundancy check (CRC) errors.

"LCRC error" Triggers on link cyclic redundancy check (LCRC) errors.


"ECRC error" Triggers on end-to-end cyclic redundancy checksum (ECRC) errors.

"Invalid symbol" Triggers on invalid symbol errors.

"Disparity error" Triggers on disparity errors.

Remote command:
`TRIGger<t>:PCIE:ERRC:CRC` on page 2560
`TRIGger<t>:PCIE:ERRC:DISP` on page 2561
`TRIGger<t>:PCIE:ERRC:ECRC` on page 2561
`TRIGger<t>:PCIE:ERRC:INVP` on page 2561
`TRIGger<t>:PCIE:ERRC:LCRC` on page 2561

Error Condition PCIe Gen 3
Triggers on enabled error condition.

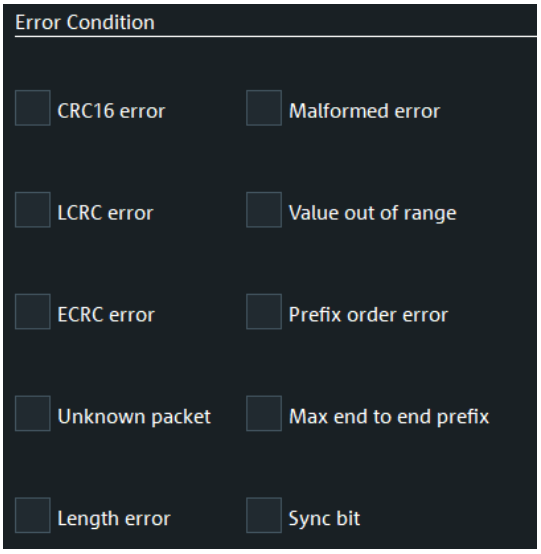

"CRC16 error" Triggers on 16-bit cyclic redundancy check (CRC) errors.

"LCRC error" Triggers on link cyclic redundancy check (LCRC) errors.

"ECRC error" Triggers on end-to-end cyclic redundancy checksum (ECRC) errors.

"Unknown packet" Triggers on an unknown packet.

"Length error" Triggers on a length error , for frames that do not have the specified length or data.

"Malformed error" Triggers on a malformed TLP: a TLP that violates specific TLP formation rules that are defined in the specification.

"Value out of range" Triggers, if a value of a field is out of the range defined by the PCIe standard.

"Prefix order error" Triggers on a wrong prefix order.

"Max end to end prefix" Triggers on an end-end prefix error. The maximum number of permitted end-end TLP prefixes is 4.

"Sync bit" Triggers on a sync bit.

Remote command:
`TRIGger<t>:PCIE:ERRC:LENGth` on page 2562
`TRIGger<t>:PCIE:ERRC:MALFormed` on page 2562
`TRIGger<t>:PCIE:ERRC:MXPFix` on page 2562
`TRIGger<t>:PCIE:ERRC:PFORder` on page 2562
`TRIGger<t>:PCIE:ERRC:SYCBit` on page 2563
`TRIGger<t>:PCIE:ERRC:UKNP` on page 2563
`TRIGger<t>:PCIE:ERRC:VOORange` on page 2563

14.25.4.2 Triggering on PCIe Gen 1/2

Prerequisite: A bus is configured for the PCIe Gen 1/2 signal to be analyzed.

For the basic trigger settings, proceed in the following way:

1. Press the [Bus] key and select the "Shortcuts" tab.
2. Press "Setup trigger".
3. Tap the "Source" button and select the "Serial bus" trigger source.
4. Tap "Serial bus" and select the serial bus that is set to PCIe Gen 1/2.
5. Tap "Trigger Type PCI express" and select the trigger type to be used for PCIe Gen 1/2 protocol analysis.
6. Depending on the selected trigger type, more setup conditions can be specified.

For information on how to proceed with the configuration settings, see Section 14.25.4.1, "PCIe trigger settings", on page 974.

14.25.5 PCIe Gen 1/2 decode results

When the configuration of the serial bus is complete, the signal can be decoded:


1. In the "Serial Bus" dialog > "Setup" tab, enable "Decode".
2. In the "Serial Bus" dialog > "Display" tab, select additional result display settings: "Show table" and "Show binary".
3. If required, enable "Zoom coupling"

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode results table

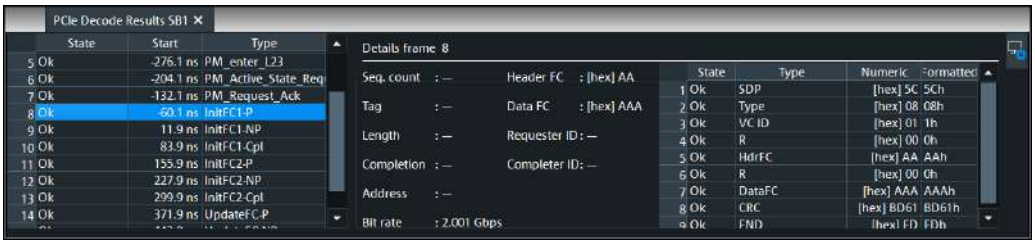

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

Table 14-49: Content of the Decode results table

Column	Description
State	Overall state of the packet
Start	Start time of the packet
Type	Type of packet

Table 14-50: Content of the Details frame table

Column	Description
Sequence count	Sequence count
Tag	Tag of the packet
Length	Length of packet
Completion	Completion status field value
Address	Value of the address
Bit rate	The bit rate of the packet
Header FC	Credit value of the header
Data FC	Credit value of the payload data
Requester ID	Requester ID
Completer ID	Completer ID
State	State of the field
Type	Field type
Numeric	Hexadecimal value of the field
Formatted	Formatted content of the field

Tools

Press "Display settings" in the "Decode Results" table to access the "Display" tab.




Remote commands

Remote commands to retrieve decode results are described in Section 26.18.26.5, "Decode results", on page 2568.

14.25.6 PCIe Gen 1/2 search

14.25.6.1 PCIe Gen 1/2 search settings

Access: [Bus] > "Shortcuts" tab > "Setup search"

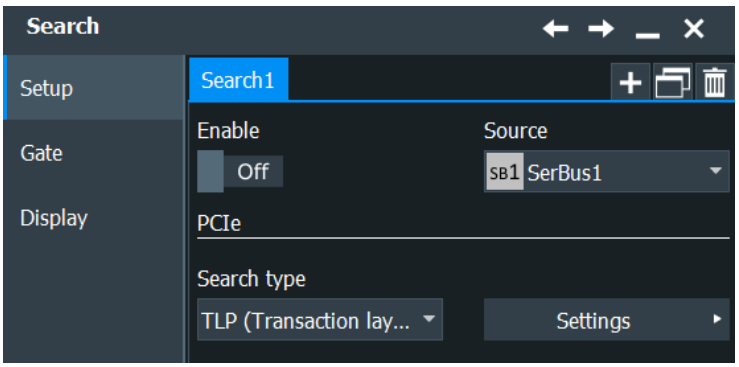

Make sure that:

- In the [Bus] > "Setup" tab:
  - The correct "Protocol" is selected.
  - The data sources of the serial bus are channel signals.
- In the "Trigger" > "Setup" tab:
  - The "Trigger on" = "Single event"
  - The trigger "Source" = "Serial bus".
  - The correct "Serial bus" is selected.

Serial bus
Selects the serial bus to be triggered on. Make sure to select the correct bus before you enter the settings.

To trigger on a serial bus, the signals sources must be channel signals. If the data or clock source is a math or reference waveform, you cannot trigger on that bus.

Remote command:
`TRIGger<t>:SOURce:SBSelect` on page 1839

Protocol
Defines the protocol type of the selected serial bus.

Remote command:
`BUS<b>:TYPE` on page 1833


Searches for PCI express
Selects the search type for the PCI express analysis.

"TLP (Transaction layer)"	Sets the search on a defined type of the transaction layer packet.
"DLLP (Data link layer)"	Sets the search on a defined type of the data link layer packet.
"Ordered Sets"	Sets the search on a defined ordered set.
"Error Condition"	Sets the search on a selection of error conditions.

Remote command:
`SEARch:TRIGger:PCIE:TYPE` on page 2592

TLP (Transaction layer)
Specifies the search conditions for the transaction layer type search.

TLP ← TLP (Transaction layer)
Searches for a transaction type.

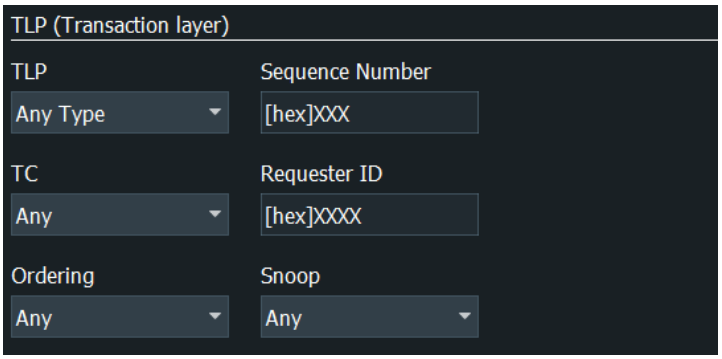

"Any type"	Searches for any transaction type.
"Mem"	Searches for memory transaction type used for data transfers to memory-mapped locations.
"IO"	Searches for I/O transaction type used for data transfers to I/O-mapped locations.
"Cfg"	Searches for configuration transaction type used to setup the device functions.
"Msg"	Searches for message transaction type used for transmitting diverse messages.
"Cpl"	Searches for completion without data.
"FetchAdd"	Searches for fetch and add atomic op request.
"Swap"	Searches for unconditional swap atomic op request.
"CAS"	Searches for compare and swap atomic op request transaction type.

Remote command:
`SEARch:TRIGger:PCIE:TLP:TYPE` on page 2591

Sequence Number ← TLP (Transaction layer)
Searches for a sequence number, which indicates if any TLPs have been lost.

Remote command:
`SEARch:TRIGger:PCIE:TLP:SNUM` on page 2591

TC ← TLP (Transaction layer)
Searches for a traffic class which is mapped on a specific virtual channel. The TC label is transmitted unmodified through the fabric.

Remote command:
`SEARch:TRIGger:PCIE:TLP:TCHN` on page 2591

Ordering ← TLP (Transaction layer)
Searches for an ordering. The ordering can be relaxed or strong.

Remote command:
SEARch:TRIGger:PCIE:TLP:ORDE on page 2590

Snoop ← TLP (Transaction layer)
Searches for a snoop state.

Remote command:
SEARch:TRIGger:PCIE:TLP:SNOO on page 2591

Requester ID ← TLP (Transaction layer)
Searches for a requester ID, consisting of the requester's bus number, device number, and function number.

Remote command:
SEARch:TRIGger:PCIE:TLP:REID on page 2590

Device ID ← TLP (Transaction layer)
Searches for a device ID, a field that can be assigned a value by the vendor for classifying root complex register blocks (RCRB). The Device ID is only valid for Configuration transaction. It is composed of 8-bit Bus number, 5-bit Device number and a 3-bit Function number.

Remote command:
SEARch:TRIGger:PCIE:TLP:DEID on page 2589

Read/Write ← TLP (Transaction layer)
Searches for a read and/ or write state.

Remote command:
SEARch:TRIGger:PCIE:TLP:MERW on page 2589

Address Type ← TLP (Transaction layer)
Searches for an address type. The address type can be 32 bit or 64 bit.

Remote command:
SEARch:TRIGger:PCIE:TLP:ADRT on page 2587

Type ← TLP (Transaction layer)
Searches for a configuration type.

Remote command:
SEARch:TRIGger:PCIE:TLP:CFGT on page 2588

Routing ← TLP (Transaction layer)
Searches for a selected message routing type.

Remote command:
SEARch:TRIGger:PCIE:TLP:MSGR on page 2590

Message Code ← TLP (Transaction layer)
Searches for a specific message code.

Remote command:
SEARch:TRIGger:PCIE:TLP:MSGC on page 2589

Status ← TLP (Transaction layer)
Searches for a completion status.

Remote command:
SEARch:TRIGger:PCIE:TLP:CPLS on page 2589

Completer ID ← TLP (Transaction layer)
Searches for a completer ID, consisting of the completer's bus number, device number, and function number.


Remote command:
SEARch:TRIGger:PCIE:TLP:CPID on page 2588

DLLP Type
Sets the trigger to the type of DLLP. You can refine the settings for the different types according to their specifications.

Remote command:
SEARch:TRIGger:PCIE:DLLP:TYPE on page 2582

DLLP Any Type conditions
Sets the trigger to any type of DLLP.


DLLP MRDLLP conditions
Specifies the conditions for the multi-root trigger.

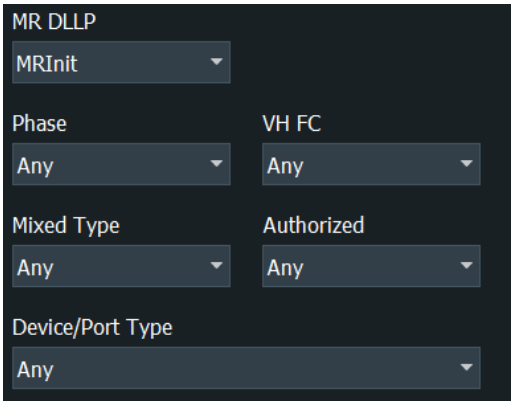

MR DLLP ← DLLP MRDLLP conditions
Searches for a multi-root type for the data link layer.

Remote command:
SEARch:TRIGger:PCIE:DLLP:MULT:TYPE on page 2580

MRInit ← DLLP MRDLLP conditions
Specifies the conditions for the multi-root initialization protocol search.

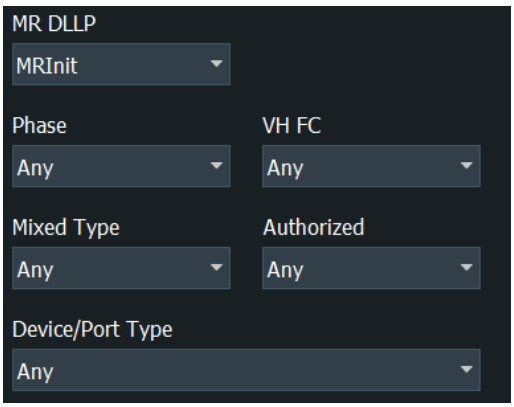

Phase ← MRInit ← DLLP MRDLLP conditions
Searches for a phase state.

Remote command:
SEARch:TRIGger:PCIE:DLLP:MULT:PHAS on page 2579

VH FC ← MRInit ← DLLP MRDLLP conditions
Searches for a virtual hierarchies flow control presence.

Remote command:
SEARch:TRIGger:PCIE:DLLP:MULT:VHFC on page 2580

Mixed Type ← MRInit ← DLLP MRDLLP conditions
Searches for a mixed type presence.

Remote command:
SEARch:TRIGger:PCIE:DLLP:MULT:MIXT on page 2579


Authorized ← MRInit ← DLLP MRDLLP conditions
Searches for an authorized state presence.

Remote command:
SEARch:TRIGger:PCIE:DLLP:MULT:AUTH on page 2578

Device/Port Type ← MRInit ← DLLP MRDLLP conditions
Searches for an device/port type.

Remote command:
SEARch:TRIGger:PCIE:DLLP:MULT:DVPT on page 2578

MRInitInit FC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Specifies the conditions for the multi-root initialization flow control protocol search.

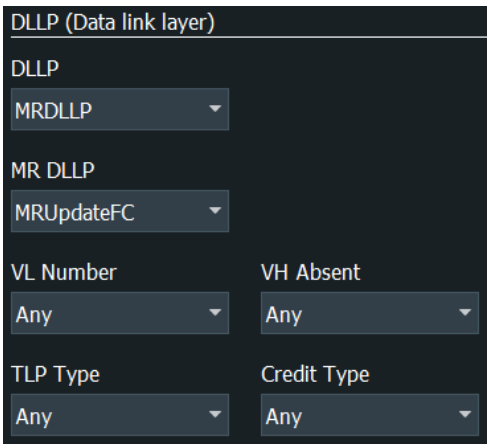

VL Number ← MRInitInit FC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Searches for a virtual link (VL) number.

Remote command:
`SEARch:TRIGger:PCIE:DLLP:MULT:VLNR` on page 2581

VH Absent ← MRInitInit FC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Searches for absent virtual hierarchies (VH).

Remote command:
`SEARch:TRIGger:PCIE:DLLP:MULT:HABS` on page 2579

TLP Type ← MRInitInit FC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Searches for a transaction layer type for a multi-root data link layer trigger type.

"Any" Any transaction layer type.

"P" Posted credit.

"N" Non posted credit.


"Cpl" Completion credit.

Remote command:
`SEARch:TRIGger:PCIE:DLLP:MULT:TLPT` on page 2580

Credit Type ← MRInitInit FC1/InitFC2/UpdateFC ← DLLP MRDLLP conditions
Searches for any, data or header credit type.

Remote command:
`SEARch:TRIGger:PCIE:DLLP:FCTL:CRET` on page 2577

MRReset ← DLLP MRDLLP conditions
Specifies the conditions for the multi-root reset protocol search.

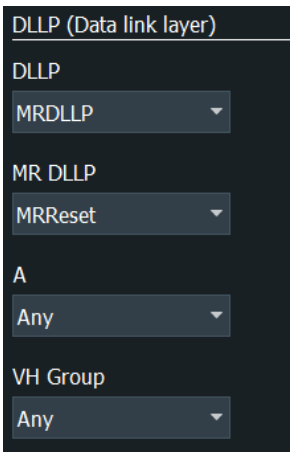

A ← MRReset ← DLLP MRDLLP conditions
Searches for the value of the A bit (Ack/ Request).

Remote command:
`SEARch:TRIGger:PCIE:DLLP:MULT:RESA` on page 2579

VH Group ← MRReset ← DLLP MRDLLP conditions
Searches for the selected virtual hierarchies group.

Remote command:
`SEARch:TRIGger:PCIE:DLLP:MULT:VHGR` on page 2581

DLLP ACK/NAK conditions
Searches for an acknowledgement (ACK)/ negative acknowledgment (NAK).

Sequence ← DLLP ACK/NAK conditions
Searches for the sequence field indicating what TLPs are affected by the ACK/NAK.

Remote command:
`SEARch:TRIGger:PCIE:DLLP:SEQ` on page 2582

DLLP Init FC1/InitFC2/UpdateFC conditions
Searches for flow control initialization/update conditions.

Credit Type ← DLLP Init FC1/InitFC2/UpdateFC conditions
Searches for a credit type value.

"Any" Searches for any credit type.
"P" Searches for posted requests.
"NP" Searches for non posted requests.
"CPL" Searches for completions.

Remote command:
`SEARch:TRIGger:PCIE:DLLP:FCTL:CRET` on page 2577

VC ID ← DLLP Init FC1/InitFC2/UpdateFC conditions
Searches for a virtual channel ID value.

Remote command:
SEARch:TRIGger:PCIE:DLLP:FCTL:VCID on page 2578

DLLP PM conditions
Searches for a specified power management conditions.

PM Type ← DLLP PM conditions
Searches for a power management type.

Remote command:
SEARch:TRIGger:PCIE:DLLP:POWM on page 2581

DLLP Vendor conditions
Searches for a specified vendor conditions.

Vendor Pattern ← DLLP Vendor conditions
Searches for a vendor pattern.


Remote command:
SEARch:TRIGger:PCIE:DLLP:VPAT on page 2582

Ordered set condition
Searches for the enabled ordered sets.

"SKP OS"	Searches for an SKP ordered sets.
"Training Seq 1/2"	Searches for a training sequence ordered set.
"Fast Training Seq"	Searches for a fast training sequence ordered set.
"Electrical Idle OS"	Searches for an electrical idle ordered set that must be send by the transmitter before it can enter the electrical idle.
"Electrical Idle Exit OS"	Searches for an electrical idle exit ordered set.
"Start of data sequence OS"	Available for PCIe "Generation" = " Gen 3 (8 Gbit/s)" Searches for a start of data sequence order set.
"Compliance Pattern"	Searches for a compliance pattern ordered set.

Remote command:
SEARch:TRIGger:PCIE:OSET:COMP on page 2586
SEARch:TRIGger:PCIE:OSET:EIDE on page 2586
SEARch:TRIGger:PCIE:OSET:EIDL on page 2586
SEARch:TRIGger:PCIE:OSET:FTS on page 2586
SEARch:TRIGger:PCIE:OSET:SKIP on page 2587
SEARch:TRIGger:PCIE:OSET:TSONe on page 2587
SEARch:TRIGger:PCIE:OSET:TSTWo on page 2587
SEARch:TRIGger:PCIE:OSET:SDS on page 2585

Error Condition
Searches for enabled error conditions.

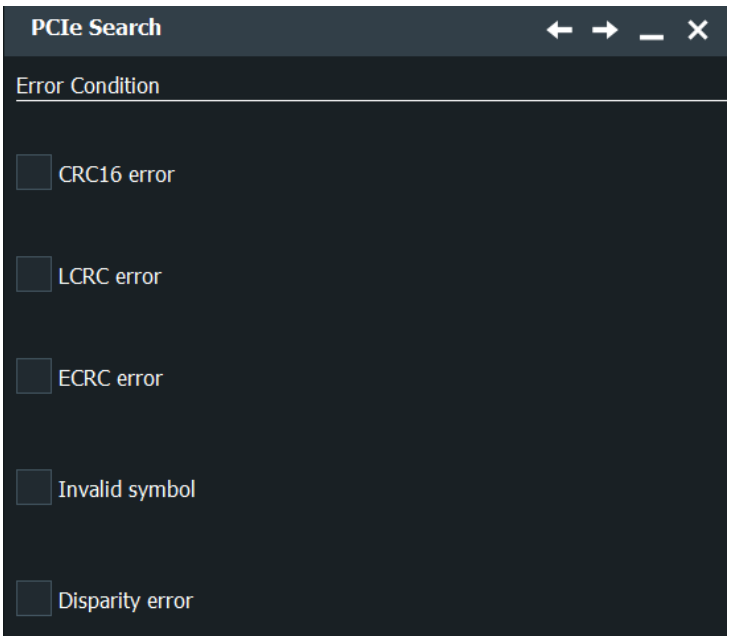

"CRC16 error" Searches for 16-bit cyclic redundancy check (CRC) errors.

"LCRC error" Searches for link cyclic redundancy check (LCRC) errors.


"ECRC error" Searches for end-to-end cyclic redundancy checksum (ECRC) errors.

"Invalid symbol" Searches for invalid symbol errors.

"Disparity error" Searches for disparity errors.

Remote command:
`SEARch:TRIGger:PCIE:ERRC:CRC` on page 2582
`SEARch:TRIGger:PCIE:ERRC:DISP` on page 2583
`SEARch:TRIGger:PCIE:ERRC:ECRC` on page 2583
`SEARch:TRIGger:PCIE:ERRC:INVP` on page 2583
`SEARch:TRIGger:PCIE:ERRC:LCRC` on page 2583

Error Condition PCIe Gen 3
Searches for enabled error condition.

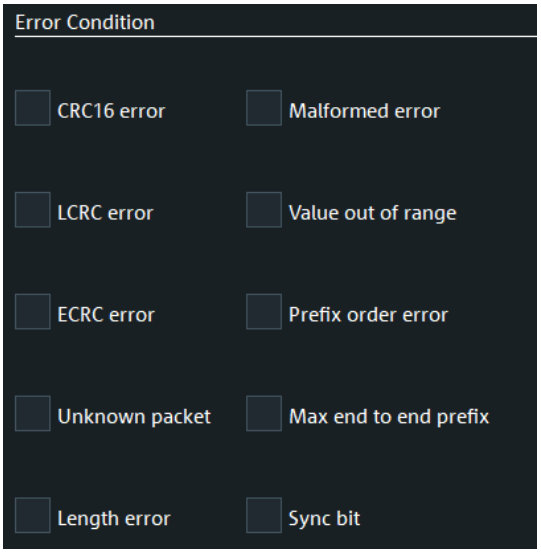

"CRC16 error" Searches for 16-bit cyclic redundancy check (CRC) errors.

"LCRC error" Searches for link cyclic redundancy check (LCRC) errors.

"ECRC error" Searches for end-to-end cyclic redundancy checksum (ECRC) errors.

"Unknown packet" Searches for an unknown packet.

"Length error" Searches for a length

"Malformed error" Searches for a malformed TLP: a TLP that violates specific TLP formation rules that are defined in the specification.

"Value out of range" Triggers, if a value is out of range.

"Prefix order error" Searches for a wrong prefix order.

"Max end to end prefix" Searches for an end-end prefix error. The maximum number of permitted end-end TLP prefixes is 4.

"Sync bit" Searches for a sync bit.

Remote command:
`SEARch:TRIGger:PCIE:ERRC:LENGth` on page 2584
`SEARch:TRIGger:PCIE:ERRC:MALFormed` on page 2584
`SEARch:TRIGger:PCIE:ERRC:MXPFix` on page 2584
`SEARch:TRIGger:PCIE:ERRC:PFORder` on page 2584
`SEARch:TRIGger:PCIE:ERRC:SYCBit` on page 2585
`SEARch:TRIGger:PCIE:ERRC:UKNP` on page 2585
`SEARch:TRIGger:PCIE:ERRC:VOORange` on page 2585

14.25.6.2 PCIe Gen 1/2 search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

The results of the search are the same as for decoding, see Section 14.26.3, "DDR decode results", on page 1011.

Remote Commands:

- `SEARch:RESult:PCIE:PCOunt?` on page 2598
- `SEARch:RESult:PCIE:PACKet<pa>:ADDR?` on page 2593
- `SEARch:RESult:PCIE:PACKet<pa>:CPID?` on page 2593
- `SEARch:RESult:PCIE:PACKet<pa>:CPS?` on page 2593
- `SEARch:RESult:PCIE:PACKet<pa>:DATA?` on page 2593
- `SEARch:RESult:PCIE:PACKet<pa>:DFC?` on page 2594
- `SEARch:RESult:PCIE:PACKet<pa>:FCOunt?` on page 2594
- `SEARch:RESult:PCIE:PACKet<pa>:HFC?` on page 2595
- `SEARch:RESult:PCIE:PACKet<pa>:LEN?` on page 2596
- `SEARch:RESult:PCIE:PACKet<pa>:RQID?` on page 2596
- `SEARch:RESult:PCIE:PACKet<pa>:SEQN?` on page 2596
- `SEARch:RESult:PCIE:PACKet<pa>:STARt?` on page 2596
- `SEARch:RESult:PCIE:PACKet<pa>:STATe?` on page 2597
- `SEARch:RESult:PCIE:PACKet<pa>:STOP?` on page 2597
- `SEARch:RESult:PCIE:PACKet<pa>:TAG?` on page 2597
- `SEARch:RESult:PCIE:PACKet<pa>:TYPE?` on page 2598
- `SEARch:RESult:PCIE:PACKet<pa>:FCOunt?` on page 2594
- `SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:FVAL?` on page 2594
- `SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:STATus?` on page 2594
- `SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:TYPE?` on page 2595
- `SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:VAL?` on page 2595

14.25.6.3 Searching for PCIe Gen 1/2

Prerequisite: A serial bus is configured for the PCIe signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and selet the "Shortcuts" tab.
2. Tap "Setup search".

3. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
4. Tap "Source" and select the serial bus that is set to PCIe (e.g. "SB1").
5. Specify the search criteria according to Section 14.25.6.1, "PCIe Gen 1/2 search settings", on page 986.
6. To acquire a waveform, press [Single].

   The R&S RTP performs an PCIe decode according to the thresholds and protocol settings of the associated serial bus source.
7. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.26 DDR (option R&S RTP-K91/K93/K94/K95)

Double Data Rate Type 3 (DDR3), Double Data Rate 4 (DDR4) and Low-Power Double Data Rate (LPDDR) are types of Synchronous Dynamic Random Access Memory (SDRAM).

The following options are required for DDR signal analysis:

- R&S RTP-K91 for DDR3
- R&S RTP-K93 for DDR4
- R&S RTP-K94 for DDR5
- R&S RTP-K95 for LPDDR5

- Decode the signal.
  See: Section 14.26.1, "DDR configuration", on page 999
- Create and analyze an eye diagram. This helps to separate the read and write cycle.
  See Section 20, "Advanced eye diagram analysis (option R&S RTP-K136/K137)", on page 1157.
- Together with the R&S ScopeSuite software you can perform a compliance test on the signal.
  For details refer to:
  - "DDR3 Compliance Tests, Test Procedures Manual"
  - "DDR4 Compliance Tests, Test Procedures Manual"
  - "DDR5 Compliance Tests, Test Procedures Manual"

14.26.1 DDR configuration

14.26.1.1 DDR configuration settings

Access: [Bus] > "DDR" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

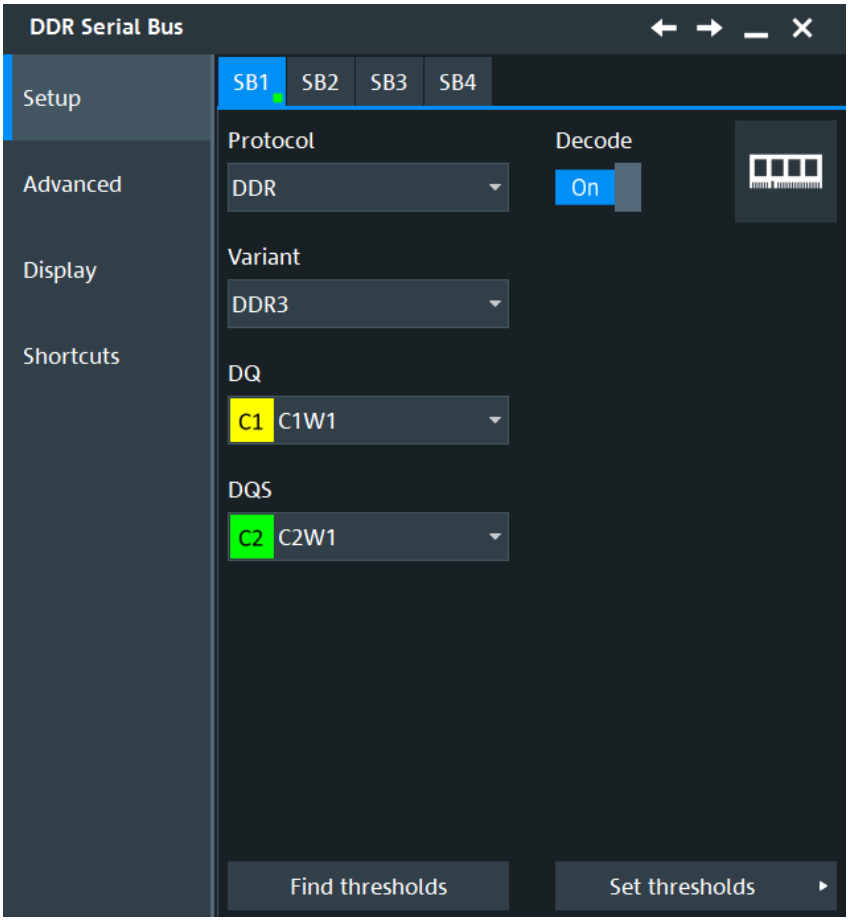


Figure 14-40: Settings for DDR3

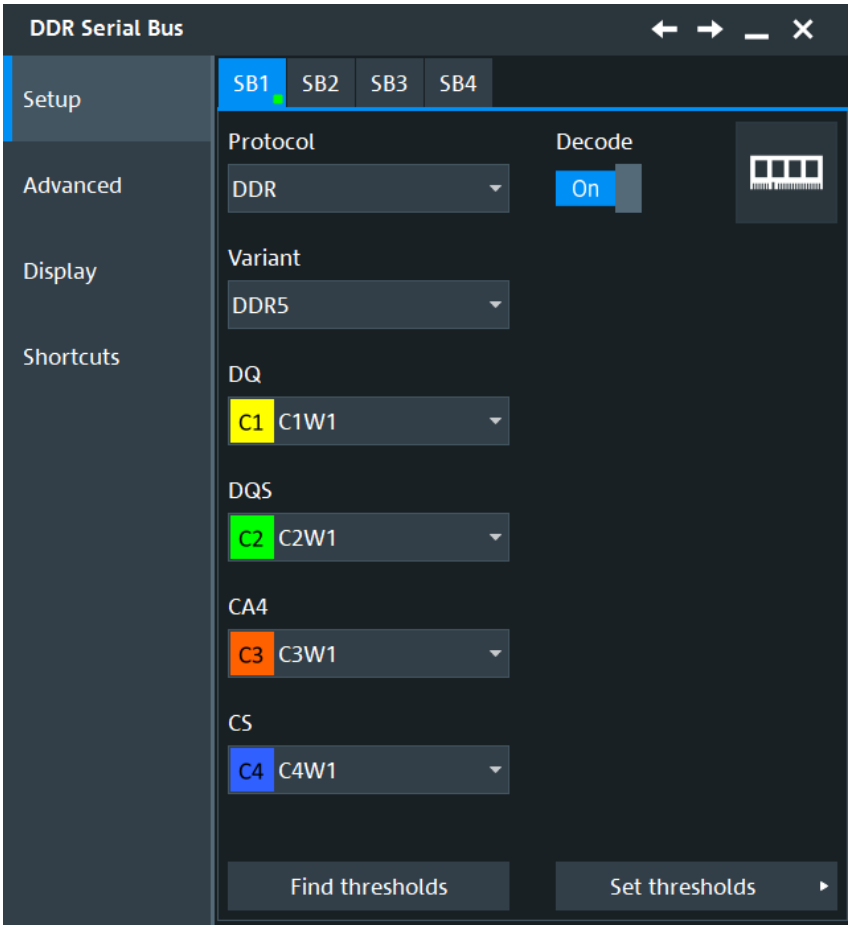


Figure 14-41: Settings for DDR5

See also: Section 14.1.1, "Setup - general settings", on page 556

Variant
Selects the DDR standard.

"DDR3" Requires option R&S RTP-K91.

"DDR4" Requires option R&S RTP-K93.

"DDR5" Requires option R&S RTP-K94.

"LPDDR5" Requires option R&S RTP-K95.

Remote command:
`BUS<b>:DDR:STANdard` on page 2599

DQ
Sets the channel for the data output signal.

You can select analog channels "C1" to "C4", and also active math and reference waveforms as source.

Remote command:
`BUS<b>:DDR:DATA:SOURce` on page 2600

DQS
Sets the channel for the data strobe signal.

You can select analog channels "C1" to "C4", and also active math and reference waveforms as source.

Not available for "Variant" = "LPDDR5".

Remote command:
`BUS<b>:DDR:STRBe:SOURce` on page 2600

CA4
Only available for "Variant" = "DDR5".

Sets the channel for the four-cylcle command/address (CA4) singal.

Remote command:
`BUS<b>:DDR:CA4:SOURce` on page 2606

CS
Only available for "Variant" = "DDR5".

Sets the channel for the chip select CS singal.

Remote command:
`BUS<b>:DDR:CA4:SOURce` on page 2606

WCK
Only available for "Variant" = "LPDDR5".

Sets the channel for the write clock signal.


Remote command:
`BUS<b>:DDR:WCK:SOURce` on page 2602

RDQS
Only available for "Variant" = "LPDDR5".

Sets the channel for the read strobe signal.

Remote command:
`BUS<b>:DDR:RDQS:SOURce` on page 2601

Set threshods
Opens a dialog to configure the threshold and hysteresis

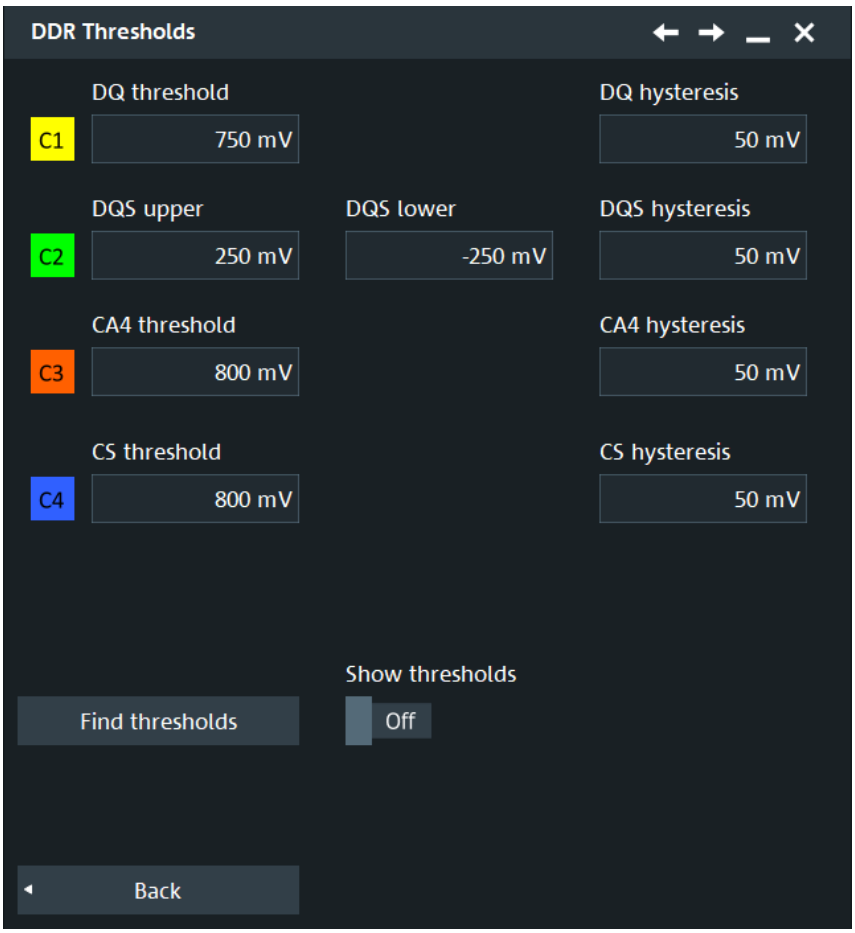

DQ threshold, DQS threshold ← Set thresholds
Sets the threshold value for the digitization of the DQ/DQS lane.

There are two ways to set the thresholds:

- "Threshold"
  Enter individual values for each line directly in the fields.
- "Find thresholds"
  Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Remote command:
`BUS<b>:DDR:DATA:THReshold` on page 2600
`BUS<b>:DDR:STRBe:THReshold` on page 2601
`BUS<b>:DDR:RDQS:THReshold` on page 2602
`BUS<b>:DDR:WCK:THReshold` on page 2603
`BUS<b>:SETReflevels` on page 1834

Hysteresis ← Set thresholds
Sets a value for the hysteresis of the respective lane.

Remote command:
`BUS<b>:DDR:DATA:HYSTeresis` on page 2599
`BUS<b>:DDR:STRBe:HYSTeresis` on page 2600

BUS<b>:DDR:RDQS:HYSTeresis on page 2601
BUS<b>:DDR:WCK:HYSTeresis on page 2602

DQS upper/lower threshold ← Set threshods
Only available for "Variant" = "DDR5".

Sets the upper and lower threshold value for the digitization of the DQS strobe lane.

Remote command:
BUS<b>:DDR:STRBe:THLower on page 2604
BUS<b>:DDR:STRBe:THUPper on page 2604

CA4 threshold, CS threshold ← Set threshods
Only available for "Variant" = "DDR5".

Set the thresholds for the CA4 and CS lines.

Remote command:
BUS<b>:DDR:CA4:THReshold on page 2605
BUS<b>:DDR:CS:THReshold on page 2605

CA4 hysteresis, CS hysteresis ← Set threshods
Only available for "Variant" = "DDR5".

Set the hysteresis of the CA4 and CS lines.

Remote command:
BUS<b>:DDR:CA4:HYSTeresis on page 2605
BUS<b>:DDR:CS:HYSTeresis on page 2604

WCK threshold, RDQS threshold ← Set threshods
Only available for "Variant" = "LPDDR5".

Set the thresholds for the write clock and and read strobe lines.

WCK hysteresis, RDQS hysteresis ← Set threshods
Only available for "Variant" = "LPDDR5".

Set the hysteresis of the write clock and and read strobe lines..

Show thresholds ← Set threshods
If enabled, the threshold levels are displayed in the diagram.


Remote command:
BUS<b>:THReshold on page 1835

14.26.1.2 Display settings

Access: [Bus] > "Display" tab.

For common display settings, see Section 14.1.3, "Display", on page 558.

To enhance the decode possibilities of the DDR protocol, you can use an additional setting in the "Display" tab: "Decode layer".

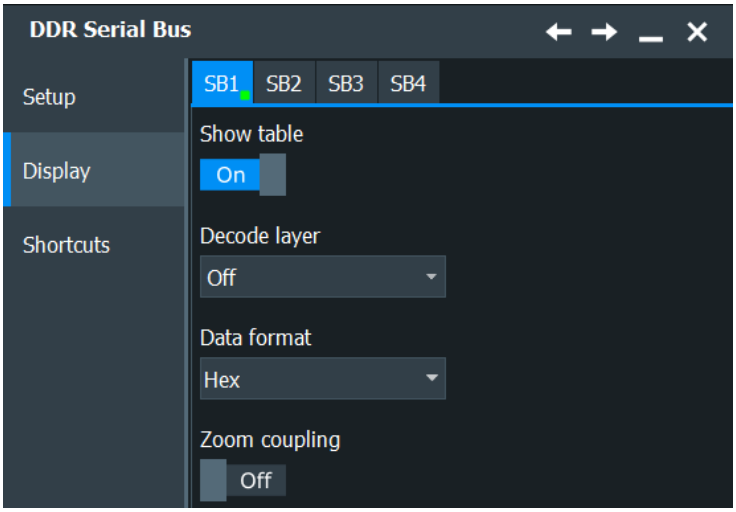


Decode layer
Selects the decode layer.

Decoding is performed in several layers, and the end results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Edges"	All edges of each lane in stage 1 decoding.
"Bits"	All bits of each lane in stage 1 decoding.
"Word"	All words of each lane in stage 1 decoding.

14.26.1.3 Advanced settings

Access: [Bus] > "DDR" > "Advanced" tab

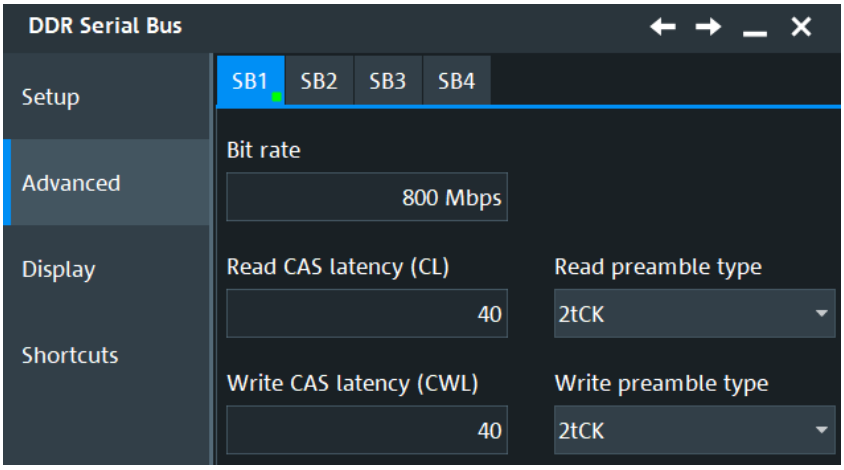

Bit rate (for eye diagram)
Declares the nominal bit rate of the data signal for the DDR eye diagram analysis.

See also, Range UI, Position UI.

Remote command:
BUS<b>:DDR:BITRate on page 2603

Read CAS latency (CL)
Sets the CAS read latency (CL). It refers to the number of clock cycles that elapse between the time a read command is issued to the memory and the time the requested data is available on the output pins.

Only available for "Variant" = "DDR5".

Remote command:
BUS<b>:DDR:CASRead on page 2607

Write CAS latency (CWL)
Sets the CAS write latency (CWL), the delay between the time a write command is issued to the memory and the time the data is actually written to the memory cells. It is measured in clock cycles.

Lower CWL values generally lead to better write performance, which can be beneficial for applications that require frequent writing to memory, such as databases or certain computational tasks.

Only available for "Variant" = "DDR5".

Remote command:
BUS<b>:DDR:CASWrite on page 2607

Read preamble type
Selects the read preamble type in terms of clock cycles. You can select between 2tcK, 3tcK and 4 tcK.

For example a 2tck read preamble is a preamble signal that is 2 clock cycles long, used to indicate the start of a read operation.

Only available for "Variant" = "DDR5".

Remote command:
BUS<b>:DDR:RPReamble on page 2606

Write preamble type
Selects the write preamble type tht is used to indicate the start of a write operation. You can select between 2tcK, 3tcK and 4 tcK.

For example a 2tck write preamble is a preamble signal that is 2 clock cycles long, used to indicate the start of a write operation.


Only available for "Variant" = "DDR5".

Remote command:
BUS<b>:DDR:WPReamble on page 2606


DQ min gap
Only available for "Variant" = "LPDDR5".

Defines the minimum size of a gap that can appear in between adjacent frames. In other words, if the DQ line stays idle for longer than this time, a gap will appear and the frame will be split at that location. If the DQ idle time is less, no gap is created.

For example, the DQ line stays idle for 5.2 ns. If "DQ min gap" = 5 ns (idle time is longer than the given value), a gap is created:

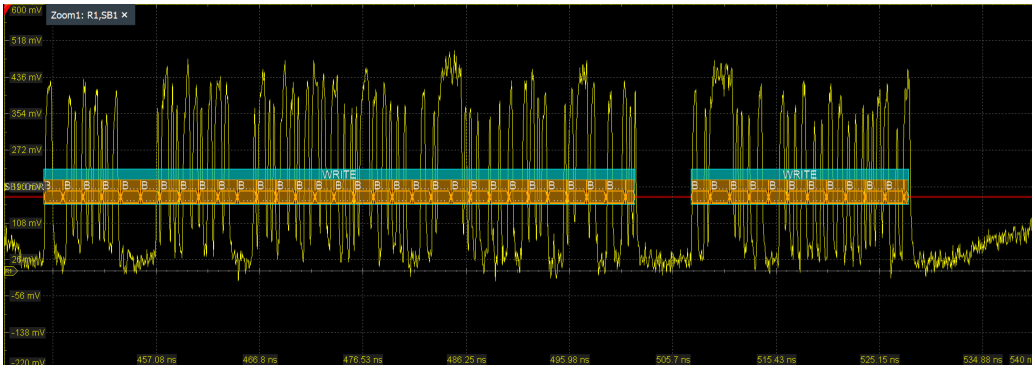

If "DQ min gap" = 6 ns (idle time is shorter than the given value), no gap is created:

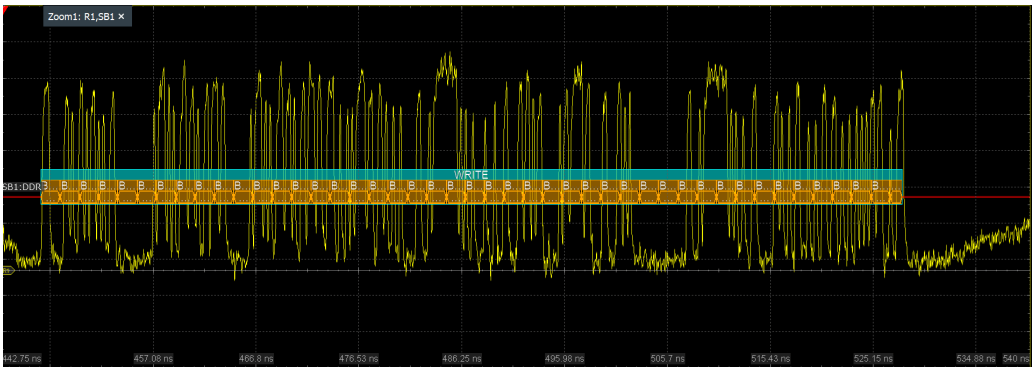

Remote command:
`BUS<b>:DDR:MINGap` on page 2603

14.26.1.4 Configuring the DDR signals

For configuration, assign the lanes to the input channels and define the logical thresholds and the hysteresis.

1. Press the [Bus] key on the front panel.
2. Select the tab of the bus you want to set up, for example "SB1".
3. In the "Setup" tab, set "Protocol"="DDR".
4. Select the DDR "Variant" you want to configure.
5. Optionally, you can enter a "Bus label" on the "Display" tab.
6. Set the channels for the "DS" and "DQS".
7. Set the "Threshold" and "Hysteresis" values.
8. Enable "Decode".

14.26.2 Search on decoded DDR data

Using the search functionality, you can find various events in the decoded data. You can find the same events that you can trigger on, and even many more, since several event types can also be combined.

Before you can start the search, you have to configure the bus correctly and acquire decoded data.


To search on decoded data, set the search source to "SerBus" for the configured protocol.

For general information on how to handle the search functionality, see Section 11, "Search functions", on page 463.

If you need information on how to get started with searching for DDR data, see Section 14.26.2.3, "Searching for DDR data", on page 1010. Otherwise proceed with the DDR search setup.

14.26.2.1 DDR search setup

Access: [Bus] > "Shortcuts" tab > "Setup search"

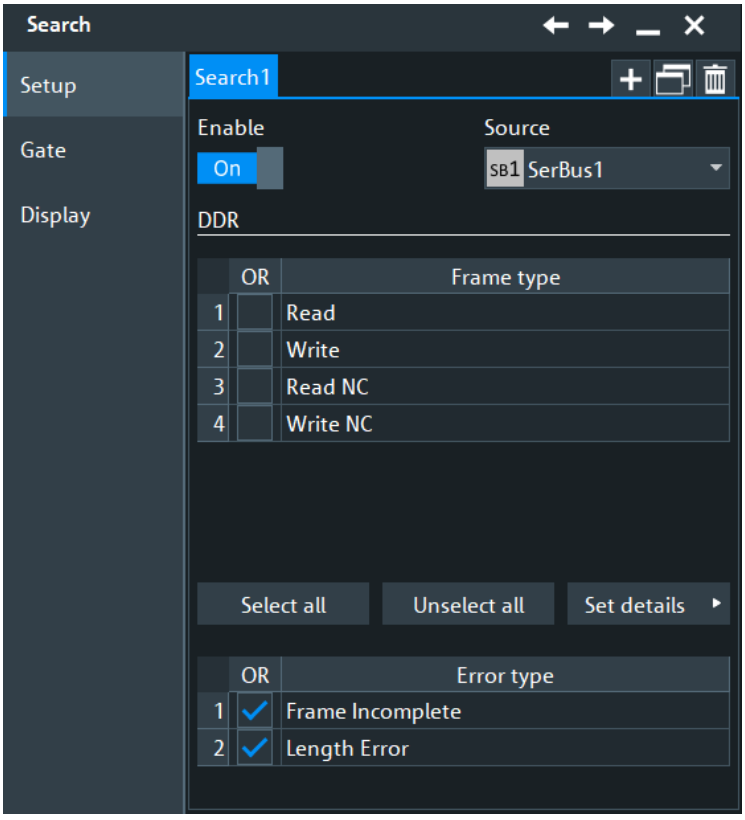

In this dialog, you can define the search criteria for DDR protocols.


Error type
You can search for "Frame Incomplete" and "Length error".

Remote command:
SEARch:TRIGger:DDR:ERRor<m>:ENABle on page 2612
SEARch:TRIGger:DDR:ERENable on page 2612

Frame type
You can select one or more frames to be searched for. Available are "Read", "Write", "Read NC" and "Write NC". You can also define the data and/or index operators and values for the field, see Set details.

Remote command:
SEARch:TRIGger:DDR:FRENable on page 2613
SEARch:TRIGger:DDR:FRAMe<fr>:ENABle on page 2615

Set details
In this dialog, you can define the individual search parameters for the fields of the selected frame. Select the frame type first, and then open the "Set details" dialog.

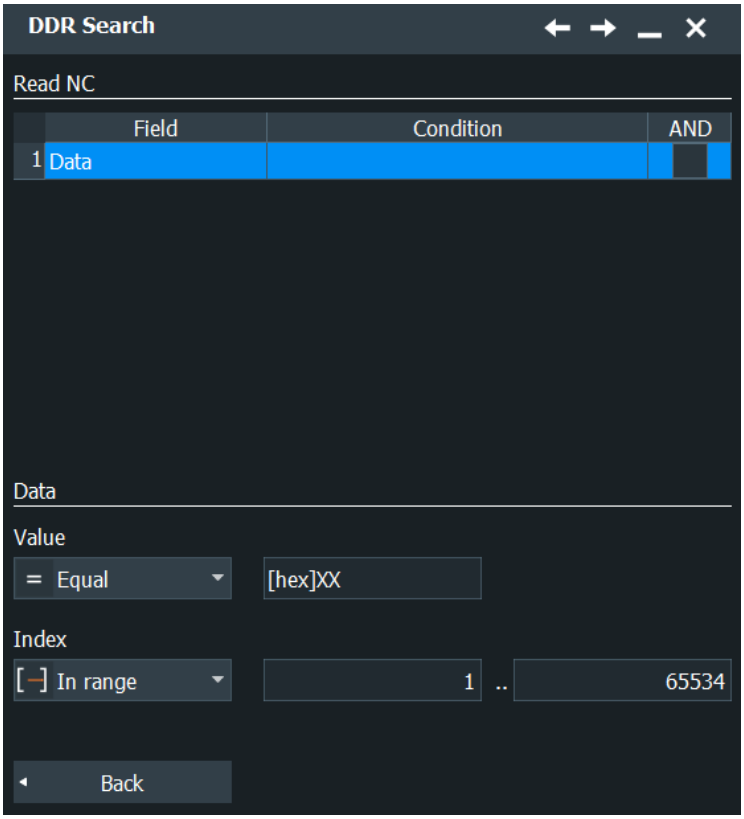

Remote command:
SEARch:TRIGger:DDR:FIENable on page 2613
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:ENABle on page 2613

Field selection table ← Set details
Select the required field or fields in the table. Then set the value and index condition to be searched for.

Value ← Set details
Sets the data value of the field to be searched for. The search data setup consists of a comparison condition and one or two data patterns.

"Condition" Sets the comparison condition to a specific value or a range.

"Min" Specifies the value or sets the start value of a range.

"Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`SEARch:TRIGger:DDR:DMAX` on page 2613
`SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMAX` on page 2613
`SEARch:TRIGger:DDR:DMIN` on page 2614
`SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMIN` on page 2614
`SEARch:TRIGger:DDR:DOPerator` on page 2614
`SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DOPerator` on page 2614

Index ← Set details
The search index setup consists of a comparison condition and one or two address patterns.

"Condition" Sets the comparison condition to a specific value or a range.

"Min" Specifies the value or sets the start value of a range.

"Max" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`SEARch:TRIGger:DDR:IMAX` on page 2615
`SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMAX` on page 2615
`SEARch:TRIGger:DDR:IMIN` on page 2615
`SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMIN` on page 2615
`SEARch:TRIGger:DDR:IOPerator` on page 2616
`SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IOPerator` on page 2616

Gate
See Section 11.3, "Search gate", on page 479 for details.

Display
See Section 11.4, "Search display presentation", on page 482 for details.

14.26.2.2 DDR search results

To get search results, "Enable" the search. You can minimize, shift or close the search dialog.

The search results are listed in the search result table and marked in the waveform by blue lines.

For an introduction to search results, see:

- Section 11.1.2, "Search results", on page 464
- Section 11.4.2, "Display zoom settings", on page 484

The results of the search are the same as for decoding, see Section 14.26.3, "DDR decode results", on page 1011.

Remote commands:

- `SEARch:RESult:DDR:FCOunt?` on page 2617
- `SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:FVAL?` on page 2617
- `SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STARt?` on page 2617
- `SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STATus?` on page 2618
- `SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STOP?` on page 2618
- `SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:VAL?` on page 2618
- `SEARch:RESult:DDR:FRAMe<fr>:NWRDs?` on page 2619
- `SEARch:RESult:DDR:FRAMe<fr>:STARt?` on page 2619
- `SEARch:RESult:DDR:FRAMe<fr>:STATe?` on page 2620
- `SEARch:RESult:DDR:FRAMe<fr>:STOP?` on page 2620
- `SEARch:RESult:DDR:FRAMe<fr>:TYPE?` on page 2620

14.26.2.3 Searching for DDR data

Prerequisite: A serial bus is configured for the DDR signal to be decoded and analyzed.

The search for events is set up in the following way:

1. Press the [Bus] key and select the "Shortcuts" tab.
2. If the dialog box does not contain a search entry, tap the "Add" icon to create one, as described in "To create a user-defined search" on page 478.
3. Tap "Source" and select the serial bus that is set to DDR (e.g. "SB1", unless already selected).

   The search dialog for DDR protocol analysis is opened.
4. Specify search criteria according to Section 14.26.2.1, "DDR search setup", on page 1007.
5. To acquire a waveform, press [Single].

   The R&S RTP performs a DDR decode according to the thresholds and protocol settings of the associated serial bus source (here in our example SB1).
6. To start searching the acquired waveform for specific events, tap "Enable" in the search setup dialog:

   The R&S RTP displays the "Search Results" box that lists the detected events.

For information on how to configure the search results presentation and how to navigate the search results, see also "To display search zoom windows" on page 485.

14.26.3 DDR decode results

When the configuration of the serial bus is complete, the signal can be decoded:


1. In the "Protocol" dialog > "Setup" tab, enable "Decode".
2. In the "Protocol" dialog > "Display" tab, select additional result display settings: "Show decode table" and "Show binary signals".

For a description of the display settings, see also Section 14.1.3, "Display", on page 558.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

Decode Results Table

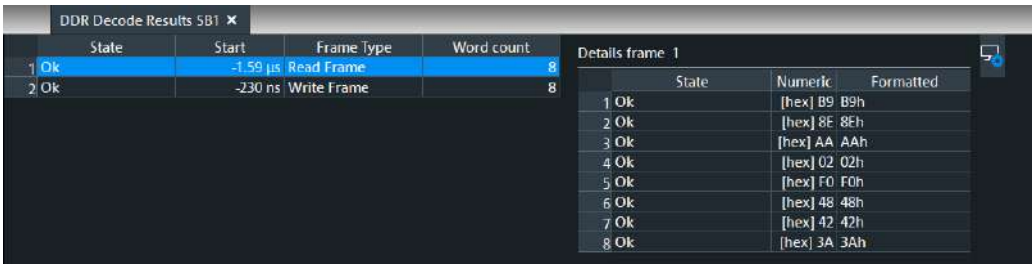

The results are shown in two tables:

- "Decode results": contains information about all decoded frames
- "Details frame": contains more detailed information about the selected frame in the "Decode results" table.

Table 14-51: Content of the Decode result table

Column	Description
Frame	Frame count
State	Overall state of the frame indicating, for example, if the frame is valid or invalid
Start	Time of frame start in relation to the trigger point
Frame Type	Frame identifier specifying the data or control frame name
Word count	Total number of words in the frame

Table 14-52: Content of the Details frame table

Column	Description
State	State of the field
Numeric	Hexadecimal value of the field
Formatted	Formatted content of the field

Remote commands

Remote commands are described in Section 26.18.27.3, "Decode results", on page 2607.

15 Mixed signal option (MSO, R&S RTP-B1)

The Mixed Signal Option R&S RTP-B1 adds logic analyzer functions to the classical oscilloscope functions. Using the MSO option, you can analyze and debug embedded systems with mixed-signal designs that use analog signals and correlated digital signals simultaneously.

The Mixed Signal Option provides 16 digital channels grouped in two logic probes (pods) with 8 channels each. The instrument ensures that analog and digital waveforms are time-aligned and synchronized so that critical timing interactions between analog and digital signals can be displayed and tested. The automatic alignment compensates the skew between the probe connectors of the analog channels and the probe boxes of the digital channels.

Logic probes provided by Rohde & Schwarz are recognized by the instrument. The information on each recognized probe is shown under "Menu" "Settings" > "Maintenance" > "Hardware" > "Advanced" > "Logic Probes".

15.1 Digital channels and parallel buses

Each digital channel can be displayed on the screen and used as trigger source. Digital channels can be grouped and displayed as a parallel bus. Up to four parallel buses can be configured; and two bus types are supported: clocked bus and unclocked bus. The clocked bus is available only on parallel bus 1 and 2. Each digital channel can be assigned to one *active* parallel bus only, the instrument disables conflicting buses automatically.

You can display each bus and use it as trigger source, as well. For each active parallel bus, the corresponding signal icon appears on the signal bar and indicates the assigned digital channels. Individual digital channels do not have a signal icon.

If one or more parallel buses are active, the roll mode is not available.

15.1.1 Parallel buses - configuration

Access: "Menu" > "Logic" > "Setup" tab


Digital channels can be displayed individually, and they can be grouped and displayed as a parallel bus. You can configure and enable up to 4 parallel buses. Each digital channel can be assigned to one *active* parallel bus only, the instrument disables conflicting buses automatically.

For clocked buses, you can display the decoded data in a result box.

If you have configured several parallel buses and you want to modify the settings, make sure that the tab of the correct bus is selected, and disable the bus before you change the settings.

15.1.1.1 Setup

Access: "Menu" > "Logic" > "Setup" tab

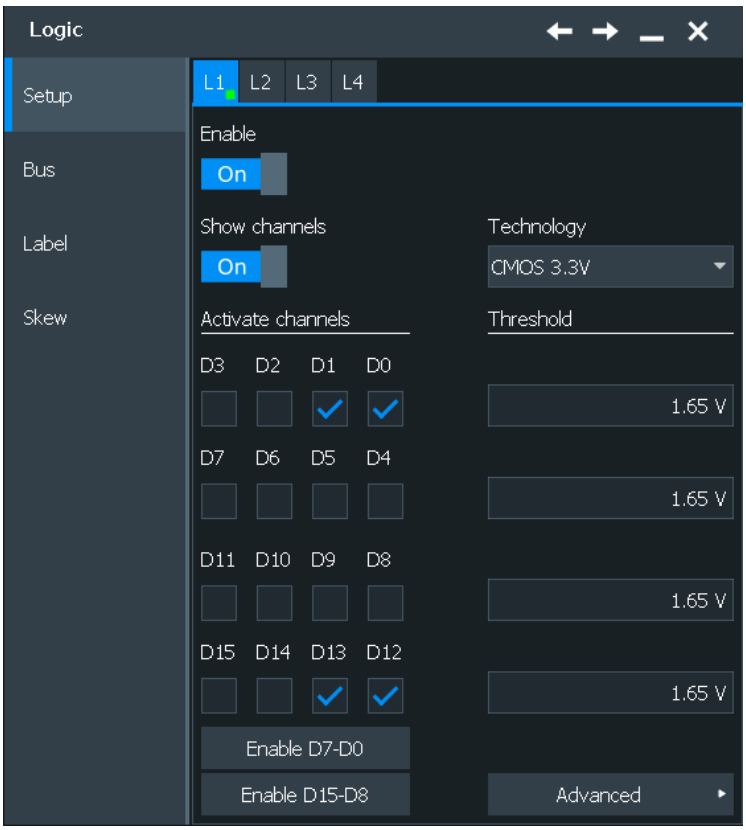

Enable bus
Enables the selected parallel bus. The corresponding signal icon appears on the signal bar.

If another *active* bus already uses the same digital channel, the instrument disables the other bus and shows a message.


Remote command:
`BUS<b>:PARallel:STATe` on page 2625

Show channels
If enabled, the selected digital channels are shown in the diagram. Each channel is displayed as a logic signal.

Remote command:
`BUS<b>:PARallel:DISPlay:SHDI` on page 2629

Technology, Threshold
Sets the logical threshold. For each sample, the instrument compares the input voltage with the threshold value. If the input voltage is above the threshold, the signal state "1" is stored. Otherwise, the signal state "0" is stored if the input voltage is below the threshold.

To avoid the change of signal states due to noise, a hysteresis is considered.

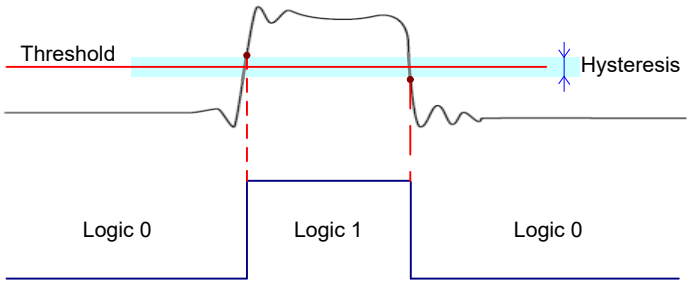

By default, same threshold and hysteresis value are used for all digital channels and all parallel buses: "Couple thresholds" is enabled.

You can also set different thresholds for the individual channel groups. As long as the buses are disabled, you can set different thresholds for each bus. Active buses use the same threshold and hysteresis values, the settings of the last activated bus take effect.


The range of threshold levels and the minimum voltage swing is given in the specifications document.

"Threshold" Enter the value directly in the field.

"Technology" Selects the threshold voltage for various types of integrated circuits from a list and applies it to all digital channels. The value is set to "Manual" if a user-defined threshold was entered directly.

Remote command:
`BUS<b>:PARallel:TECHnology` on page 2626 (all buses)
`DIGital<m>:TECHnology` on page 2623 (bus1)
`BUS<b>:PARallel:THReshold<n>` on page 2626 (all buses)
`DIGital<m>:THReshold` on page 2624 (bus1)

Advanced
Opens a dialog for advanced threshold and hysteresis settings. You can define them additional to the "Threshold" and "Technology".

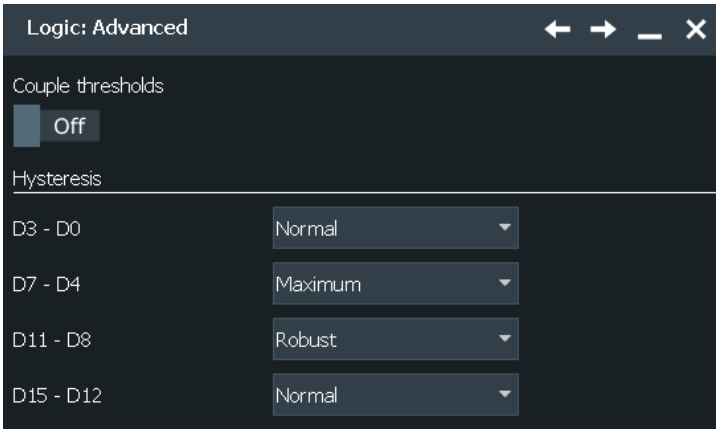

Couple thresholds ← Advanced
Sets the threshold and the hysteresis for all digital channels and all buses to the same value.

Remote command:
BUS<b>:PARallel:THCoupling on page 2627 (all buses)
DIGital<m>:THCoupling on page 2624 (bus1)

Hysteresis ← Advanced
Defines the size of the hysteresis for the respective channels.

"Normal" The instrument sets a small value suitable for the signal and its settings. Use this setting for clean signals.

"Maximum" The instrument sets the maximum value that is possible and useful for the signal and its settings. Use this setting for noisy signals.

"Robust" Sets different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system. Use this setting for very noisy signals.


Remote command:
BUS<b>:PARallel:HYSTeresis<n> on page 2627 (all buses)
DIGital<m>:HYSTeresis on page 2622 (bus1)

Activate channels
Selects the state of the respective bus channel.

Enable/Disable D7-D0, D15-D18
The buttons select or deselect all digital channels of a pod at once.

15.1.1.2 Bus

Access: "Menu" > "Logic" > "Bus" tab

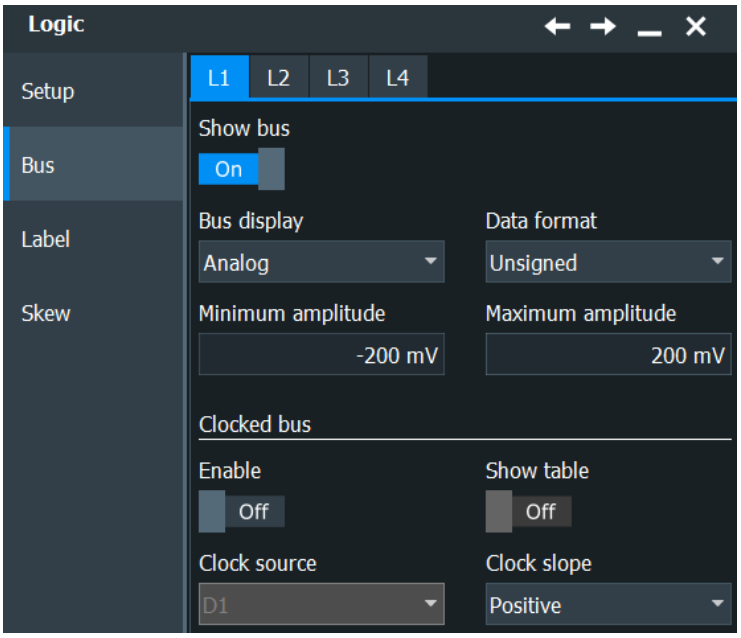

Show bus
If enabled, the resulting bus signal and bus values are displayed in the diagram. Select the presentation type for the bus signal with "Bus display" on page 1017.

Remote command:
BUS<b>:PARallel:DISPlay:SHBU on page 2630

Bus display
Defines how the parallel bus is displayed.

"Comb" Displays the decoded bus signal with bus values. When at least one digital channel changes its value, the bus value changes too.

"Analog" Displays the bus values as signal amplitudes, similar to an analog waveform. Thus, a quasi-analog waveform is created.

Remote command:
BUS<b>:PARallel:DISPlay:BTYP on page 2630

Data format
Sets the data format of bus values, which are displayed in the decode table and on the bus display.

With comb display, available formats are Hex, ASCII, octal, binary, signed and unsigned. With analog bus display, you can select signed or unsigned data format.

Signed and unsigned are integer data types with a maximum 16-bit length. Unsigned is used for positive integers. Signed is used for positive and negative integers.

If the target file format is BIN, you can save only signed and unsigned binary data. The data format "Signed" writes signed data; all other formats are saved as unsigned binary data.

Remote command:
BUS<b>:PARallel:DATA:FORMat on page 2629

Minimum amplitude
For analog bus display, set the minimum amplitude that is assigned to the lowest bus value.

Maximum amplitude
For analog bus display, set the maximum amplitude that is assigned to the highest bus value.

Clocked bus
If a bus is a clocked bus, one of the digital channels serves as clock of the bus.

For an unclocked bus, the logical state of the bus is determined for each sample. For a clocked bus, the logical state is determined only at the specified clock edges.

The settings are only available for "Bus1" and "Bus2".

Enable ← Clocked bus
Enable this option for a clocked bus.

Remote command:
BUS<b>:PARallel:CLON on page 2630

Show table ← Clocked bus
The decode table is only available for clocked buses to check the data words.

If enabled, a results box opens with decoded values of the bus signal and its time. Each clock edge corresponds to one row in the table.

Remote command:
`BUS<b>:PARallel:DECTable:SHOW` on page 2631
`BUS<b>:PARallel:DECTable:COUNt?` on page 2632
`BUS<b>:PARallel:DECTable:DATA?` on page 2632

Clock source ← Clocked bus
Selects the digital channel used as clock.


Remote command:
`BUS<b>:PARallel:CLOCk` on page 2631

Clock slope ← Clocked bus
Selects the slope of the clock signal at which all digital channels of the bus are analyzed.

Remote command:
`BUS<b>:PARallel:CLSLope` on page 2631

15.1.1.3 Label settings


Access: "Menu" > "Logic" > "Label" tab

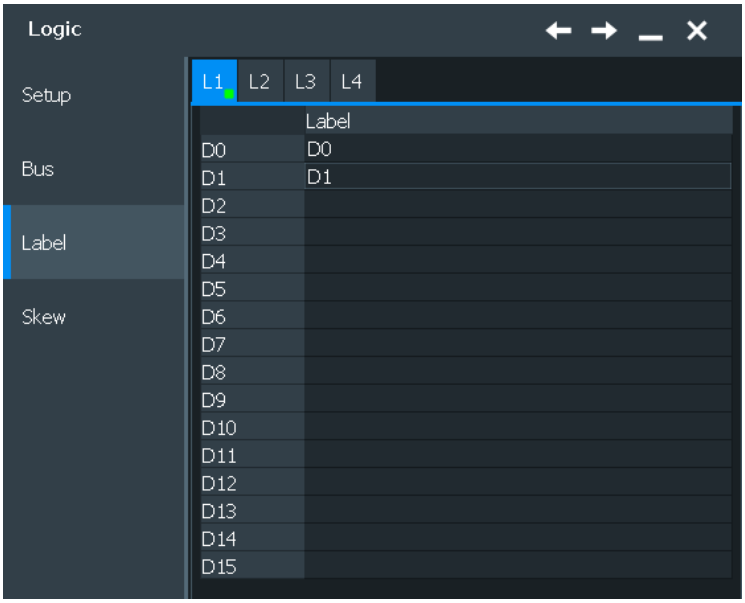

In this tab, you can enter a name for each digital channel. The name is displayed in the diagram.

15.1.1.4 Skew settings

Access: "Menu" > "Logic" > "Skew" tab

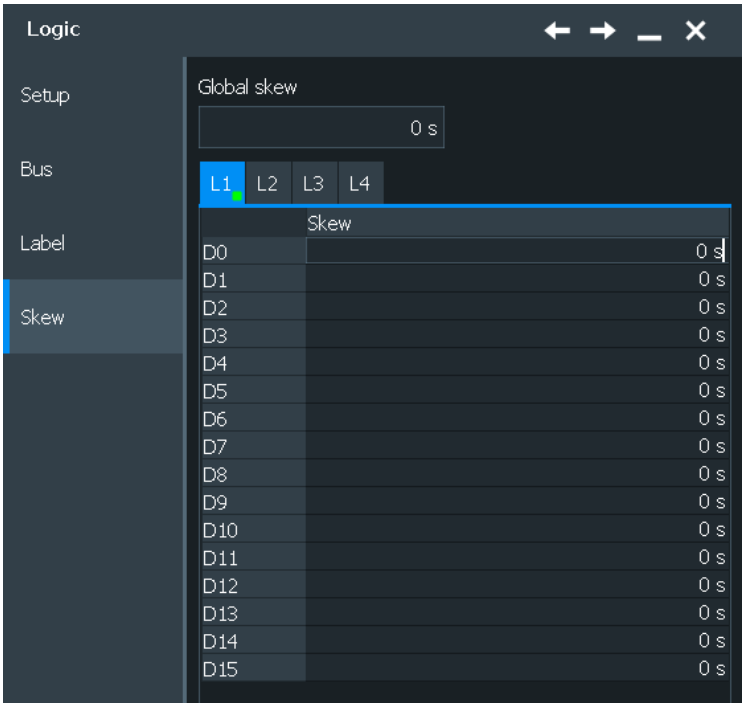

Global skew
Sets a general delay for all digital channels. The resulting skew of a digital channel is the sum of the general "Global skew" and the individual "Skew".

Remote command:
`BUS<b>:PARallel:DESoffset` on page 2628


Skew
Sets an individual delay for each digital channel to time-align it with other digital channels. The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables. The skew between the probe boxes of the digital channels and the probe connectors of the analog channels is automatically aligned by the instrument.

Remote command:
`BUS<b>:PARallel:BIT<n>:DESKew` on page 2628 (all buses)
`DIGital<m>:DESKew` on page 2621 (Bus1)

15.1.2 Digital resolution

Access: "Menu" > "Acquire"

If an MSO option is installed and at least one digital channel is active, additional information appears on the "Setup" tab of the "Acquire" dialog box.

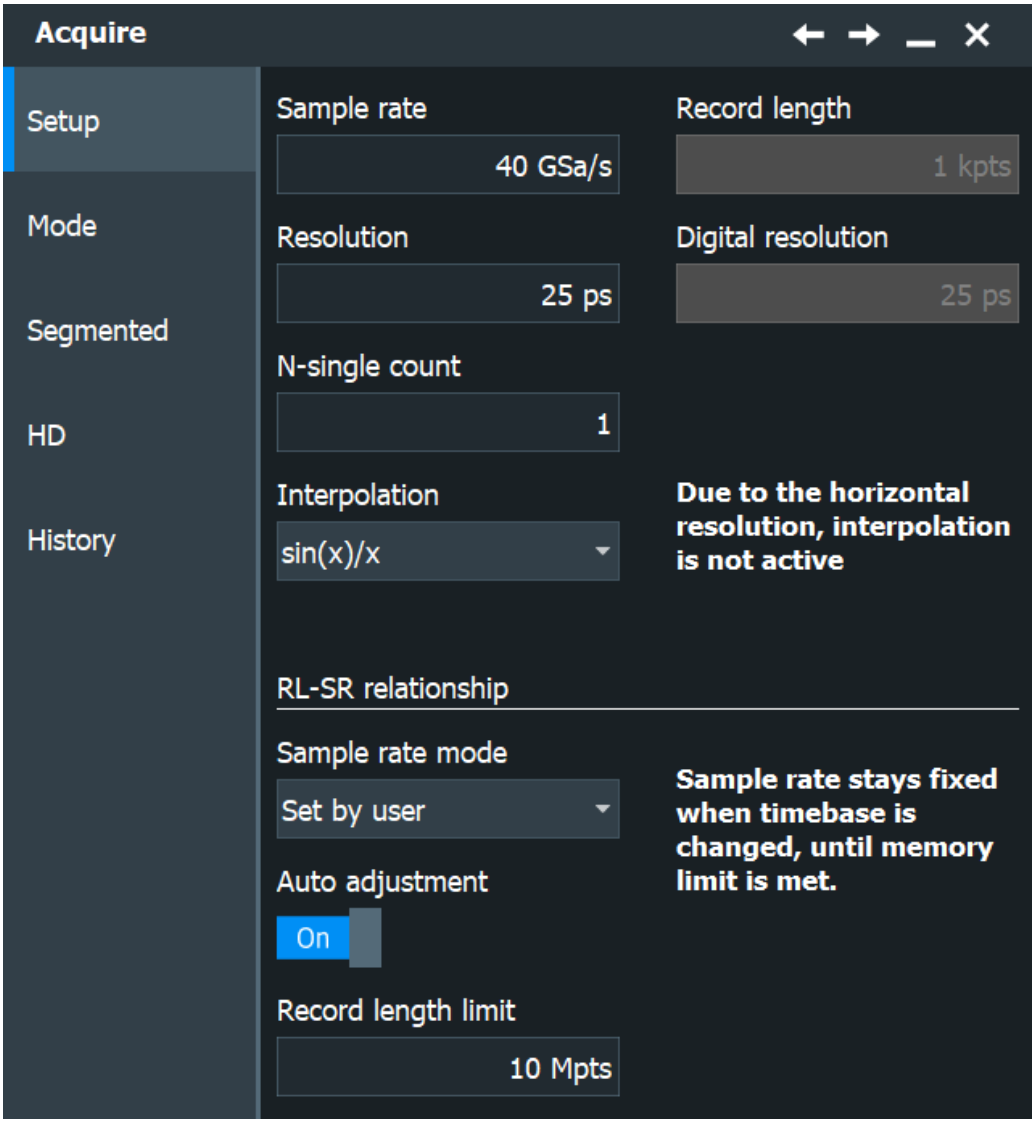

Dig. resolution
Shows the current digital resolution of the digital channels. The maximum digital record length is always 200 MSa per digital channel. This number is independent of the installed memory.

Remote command:
`ACQuire:DRESolution?` on page 2632

15.1.3 Using digital probes

NOTICE

Ensuring accurate measurement results

The mixed-signal-option (MSO, R&S RTP-B1) with connected probe leads is considered as a test probe, according to EN 61326-2-1, clause 5.2.4.101. Therefore, the measurements are sensitive to electromagnetic interference. Consider additional shielding methods to avoid interference.

Consider the following guidelines for good probing practices:

- The ground lead from each digital channel group (D15–D8 and D7–D0) should be attached to the ground of the DUT if any channel within the group is being used for data capture. The ground lead improves signal fidelity to the oscilloscope, ensuring accurate measurements.
- For high-speed timing measurements (rise time < 3 ns), each digital channel probe should use its own ground.

1. Connect the digital probe cable to any of the MSO connectors on the rear panel of the instrument as shown on the Documentation Card delivered with the digital probe.
2. Connect the ground lead on each set of channels (each pod) with a probe grabber.
3. Connect a grabber to one of the probes leads.
4. Connect the grabber to a node in the circuit that you want to test.
5. For high-speed signals, connect a ground lead to the probe lead. Connect the ground lead to ground in the device under test.
6. Repeat these steps until you have connected all points of interest.

15.1.4 Configuring digital channels and parallel buses

The configuration of a parallel bus includes the selection and setup of the digital channels, the configuration of the bus display, and, if necessary, the clock configuration.

For a detailed description of the settings, see Section 15.1.1, "Parallel buses - configuration", on page 1013.

1. Open "Menu" > "Logic" > "Setup".
2. Enable the digital channels to be displayed and included in the bus.
   To enable or disable all channels of a pod at once, tap "Enable D7-D0" or "Enable D15-D8".

   Enabling one or more channels also enables the display of the signals - "Show channels", and enables the parallel bus. If another active bus already uses the same digital channel, the instrument disables this bus and shows a message.

The digital signals are shown in the diagram, and the signal icon of the parallel bus appears on the signal bar. Using this bus icon, you can minimize, arrange, and switch off the bus together with its channels in the same way as you do with any waveform.

3. Set the logical thresholds as described in Section 15.1.5, "Setting the logical thresholds", on page 1022.
4. If the bus has a clock signal, open the "Bus" tab.
   Enable "Clocked bus" and select the "Clock source" and "Clock slope".
5. If necessary, enter a "Label" for each digital channel in the "Label" tab.
6. If necessary, enter a "Skew" value to time-align the channel in the "Skew" tab.

   Now the configuration of the parallel bus is completed.

15.1.5 Setting the logical thresholds

For a detailed description of the settings, see Section 15.1.1.1, "Setup", on page 1014.
Threshold settings are the same for all *active* parallel buses.

1. Open "Menu" > "Logic" > "Setup".
2. To set the thresholds, use one of the following ways:
   a) Use the same value for all digital channels and all parallel buses:
      - In the "Logic: Advanced" dialog, enable "Coupe thresholds".
      - Open the "Setup" tab. To set the threshold, either select a predefined "Technology" value or enter a user-defined value.

   b) Set different thresholds for the individual channel groups:
      - In the "Logic: Advanced" dialog, disable "Coupe thresholds".
      - Set different thresholds for each bus. Active buses use the same threshold and hysteresis values.
3. In the "Logic: Advanced" dialog, set the "Hysteresis" for each threshold to avoid the change of signal states due to noise.

15.2 Display

You can adjust the display of the parallel bus signals and the individual digital channels to optimize the analysis of bus data:

- Show the digital channels which are assigned to the bus, drag them to the optimal position, and scale them
- Show the decoded bus signal in different ways:
  – comb display with numeric bus values
  – analog display with bus values as amplitudes (quasi-analog waveform)


You can also drag the bus waveforms on the display and scale them.

- Show the result box of the decoded clocked bus signal

Each parallel bus is shown in a separate diagram, and the diagrams can be minimized and arranged as usual.

The signal icon indicates the activities on the digital channels even if they are not displayed in the diagram, of if the acquisition has been stopped:

- Blue: channel is low
- Green: channel is high
- Gray: channel state is changing

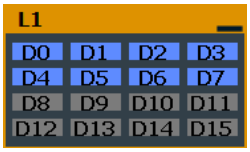

The display update rate of the oscilloscope is adapted to the visual perception of human eyes, and it is slower than the acquisition rate. All analog and digital waveforms that are acquired during one display update cycle are overlapped and displayed at once. Thus you can see the cumulative occurrence of binary states and edge transitions on the screen at once. Bus signals are not overlapped.

The trigger point is always visible on the display, it cannot be moved outside ("Restrict horizontal position to acquisition range" is enabled automatically).

If digital channels are active, the trigger point is always visible on the display, it cannot be moved outside.

To access and analyze one or more specific acquisitions, you can use the History Viewer in the common way.

Furthermore, you can zoom in digital signals and bus signal in the same way as in analog waveforms.


See also:

- Section 7.1, "Zoom", on page 266

15.2.1 Parallel bus - decode table

Decoding is available for clocked parallel buses.

The decode table shows the decoded data words of the bus signal and the corresponding time. Each clock edge corresponds to one row in the table. Below the table, you can select the data format of the bus values.

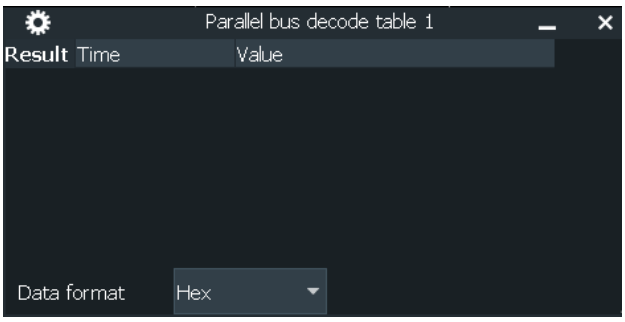

The results can be saved to a `.csv` or `.html` file, see Section 12.3.4, "Results", on page 514.

15.2.2 Adjusting the display of digital channels and parallel buses

The display of digital channels and parallel buses is flexible, you can adjust it to your needs by combining the following settings:

1. Enable "Show bus" if you want to display the bus signal in the diagram. Under "Bus representation", select if you want to display the decoded bus signal with bus values ("Comb"), or show the bus values as amplitudes, similar to an analog waveform ("Analog").
2. Check the signal icon of the bus to monitor the activities on the digital channels even if they are not displayed in the diagram:
   - Blue: channel is low
   - Green: channel is high
   - Gray: channel state is changing
3. In the diagram, you can change the display order of the digital channels by dragging the individual channels to the required position.
4. To adjust the line height and vertical position of all digital channels at once, tap one of the digital channels and turn the vertical [Scale] and [Position] rotary knobs. In the same way, you can move and scale the bus signal.
5. If the bus signal is displayed as quasi-analog waveform, you can double-tap the waveform to open the "Parallel buses" dialog box.
6. To switch off the display of the digital channels, disable "Show signals".

15.3 Trigger

For digital trigger sources are all trigger types useful that require only one trigger level as trigger condition. This level is the logical threshold. Possible trigger sources are the individual digital channels, parallel bus signals, or any logical combination of digital channels. The following trigger types are available:

Table 15-1: Trigger types and digital trigger sources

Trigger type	Trigger source is		
	Digital channel	Logic combination of digital channels	Parallel bus
Edge	X	X	
Width	X	X	
Timeout	X	X	
Setup & Hold	X		X
State		X	X
Pattern (with holdoff)		X	X
Serial Pattern	X	X	

In firmware versions < 5.00, the Setup & Hold was called Data2Clock trigger.

For details, see: Section 15.3.1, "Trigger settings for digital signals and parallel buses", on page 1025.

Also, you can define trigger holdoff conditions. See Section 6.4, "Mode / Holdoff", on page 231.

15.3.1 Trigger settings for digital signals and parallel buses

Depending on the selected source, the instrument provides the appropriate trigger types and the corresponding trigger settings.

The settings in the "Setup" tab are:

- Basic trigger settings....1025
- Edge....1026
- Width....1027
- Timeout....1029
- Setup & Hold....1030
- State....1032
- Pattern....1033
- Serial pattern....1035

15.3.1.1 Basic trigger settings

The basic trigger settings for MSO are the trigger source and the trigger type. They are selected in the upper part of the "Trigger" dialog box.

Make sure that the trigger sequence is set to "A only".

Also, you can define trigger holdoff conditions. See Section 6.4, "Mode / Holdoff", on page 231.

Source
If the Mixed Signal Option is installed, the variety of trigger sources is enhanced with specific digital trigger sources. As a trigger source you can select:

- One of the digital channels "D0" ... "D15"



- A logic combination of digital channels: "Logic"



- One of the parallel buses "Par. bus1" ... "Par. bus4"



Remote command:
`TRIGger<t>:SOURce[:SELect]` on page 1469

Type
Depending on the selected source, the instrument provides the appropriate trigger types and the corresponding trigger settings. For mixed signal analysis, the following trigger types are available:

- Edge, see page 1026
- Width, see page 1027
- Timeout, see page 1029
- Setup & Hold, see page 1030
- State, see page 1032
- Pattern, see page 1033
- Serial pattern, see page 1035

Remote command:
`TRIGger<t>:PARallel:TYPE` on page 2635

15.3.1.2 Edge

Using the edge trigger, you can also trigger on a single digital channel (a logic bit), and a logical combination of digital channels.

Depending on the selected trigger source, different trigger settings are available. The trigger level is already set - in MSO the logical threshold is used as trigger level.

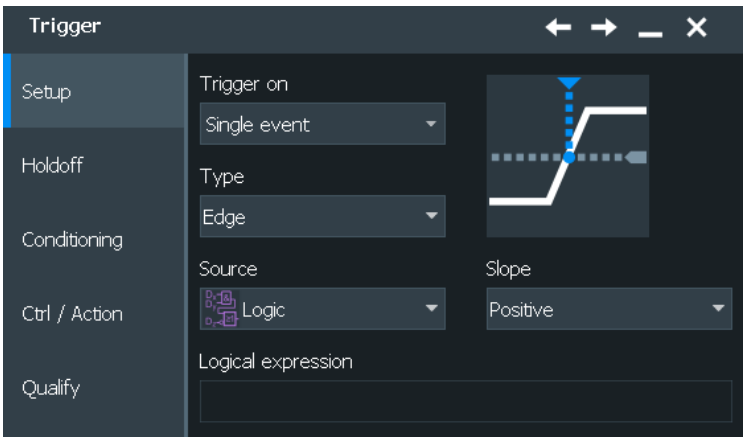


Figure 15-1: Edge trigger settings for trigger source = logical combination of digital channels (Logic)

Slope
Defines the edge - the state transition - of the signal.

"Positive" Means a 0 to 1 transition of the state.

"Negative" Means a 1 to 0 transition of the state.

"Either" Triggers on any activity on the selected trigger source.

Remote command:
`TRIGger<t>:PARallel:EDGE:SLOPe` on page 2636

Logical expression
Defines a logical combination of several digital channels as trigger condition if "Logic" is set for "Source".

If the "Slope" is positive, the trigger occurs when the logical expression becomes true. If the "Slope" is negative, the trigger occurs when the logical expression becomes false.

Remote command:
`TRIGger<t>:PARallel:EDGE:EXPRession[:DEFine]` on page 2635

15.3.1.3 Width

The width trigger detects positive and/or negative pulses of a pulse width (duration) inside or outside of a defined time limit. It can trigger on a single digital channel or a logical combination of digital channels.

The instrument triggers at the end of the detected pulse.

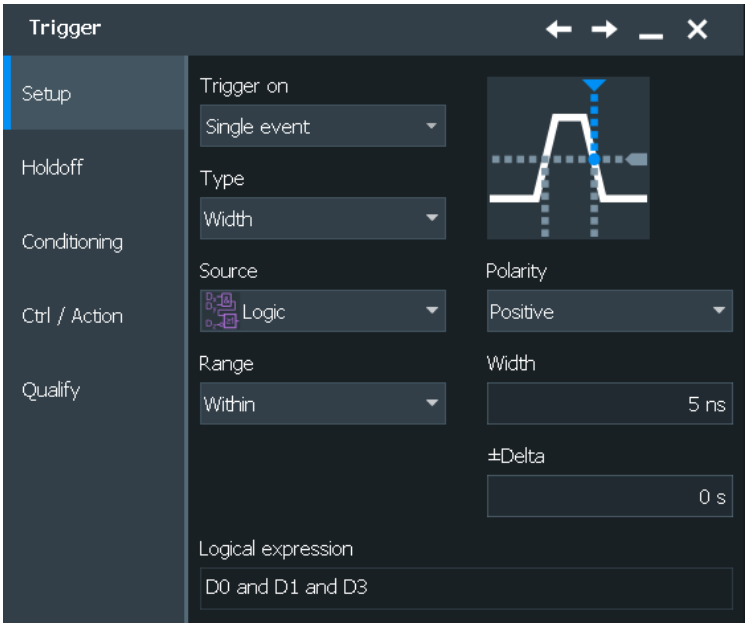


Figure 15-2: Width trigger settings for trigger source = logical combination of digital channels

Polarity
Sets the polarity of a pulse to "Positive", "Negative", or "Both".

When triggering on a positive pulse, the trigger event occurs on the high to low transition of the pulse if the timing condition is true. When triggering on a negative pulse, the trigger event occurs on the low to high transition of the pulse if the timing condition is true.

Remote command:
`TRIGger<t>:PARallel:WIDTh:POLarity` on page 2636

Logical expression
Defines a logical combination of several digital channels as trigger condition if "Logic" is set for "Source". As long as the digital signals match the logical expression (true), the pulse is positive. Otherwise, the pulse is negative.

Remote command:
`TRIGger<t>:PARallel:WIDTh:EXPRession[:DEFine]` on page 2635

Range
Selects how the range of a pulse width is defined:

"Within" Triggers on pulses inside a given time range. The time limit is defined by *Width ± Delta*.

"Outside" Triggers on pulses shorter or longer than a given time range. The time limit definition is the same as for "Within" range.

"Shorter" Triggers on pulses shorter than the given "Width".

"Longer" Triggers on pulses longer than the given "Width".

Remote command:
`TRIGger<t>:PARallel:WIDTh:RANGe` on page 2637

Width
For the ranges "Shorter" and "Longer", the width defines the maximum and minimum pulse width, respectively.

For the ranges "Within" and "Outside", the width defines the center of a range which is defined by the limits "±Delta".

Remote command:
`TRIGger<t>:PARallel:WIDTh:WIDTh` on page 2637

±Delta
Defines a range around the given width value.

The combination "Range" = Within and "±Delta" = 0 triggers on pulses with a pulse width that equals "Width".

The combination "Range" = Outside and "±Delta" = 0 means to trigger on pulse widths ≠ "Width".

Remote command:
`TRIGger<t>:PARallel:WIDTh:DELTa` on page 2638

15.3.1.4 Timeout

The timeout trigger event checks if the trigger source signal stays above or below the threshold voltage for a specified time lapse. In other words, the event occurs if the state condition remains unchanged for the specified time.

You can use the timeout trigger on a single digital channel, or a logical combination of digital channels.

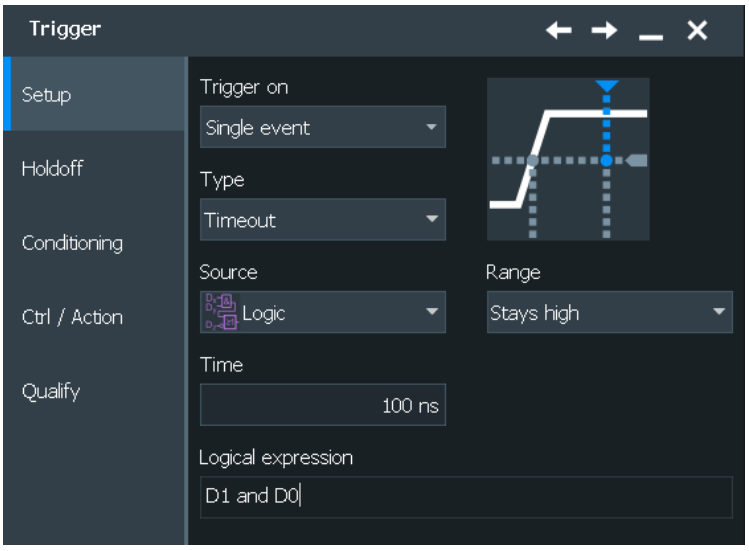


Figure 15-3: Timeout trigger settings for trigger source = logical combination of digital channels

Range
Sets the state condition:

"Stays high" The level of a digital channel stays above the threshold, or the logical expression for "Logic" trigger source is true.

"Stays low" The level of a digital channel stays below the threshold, or the logical expression for "Logic" trigger source is false.

"High or low" The signal state remains unchanged.

Remote command:
`TRIGger<t>:PARallel:TIMeout:RANGe` on page 2638

Time
Defines the time limit for the timeout at which the instrument triggers.

Remote command:
`TRIGger<t>:PARallel:TIMeout:TIME` on page 2639

Logical expression
Defines a logic combination of several digital channels as trigger condition if "Logic" is set for "Source". The "Qualification Editor" supports the entry of the expression.

Remote command:
`TRIGger<t>:PARallel:TIMeout:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:STATe:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:PATTern:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:SPATtern:EXPRession[:DEFine]` on page 2635

15.3.1.5 Setup & Hold

The Setup & Hold trigger event occurs when the state of the trigger source signal changes inside a given time before the clock edge (setup time) or after the clock edge (hold time). The trigger event occurs at the clock edge for which the setup and/or hold time was violated.

In firmware versions < 5.00, the Setup & Hold was called Data2Clock trigger.

With Setup & Hold trigger, you can trigger on a single digital channel, or a parallel bus to check several digital channels simultaneously. The clock signal is connected to one of the digital channels.

If you configure this trigger type for a parallel bus, the bus configuration is adjusted by the instrument if necessary. The bus is defined as clocked bus, and the clock source of the trigger is set as clock source of the bus.

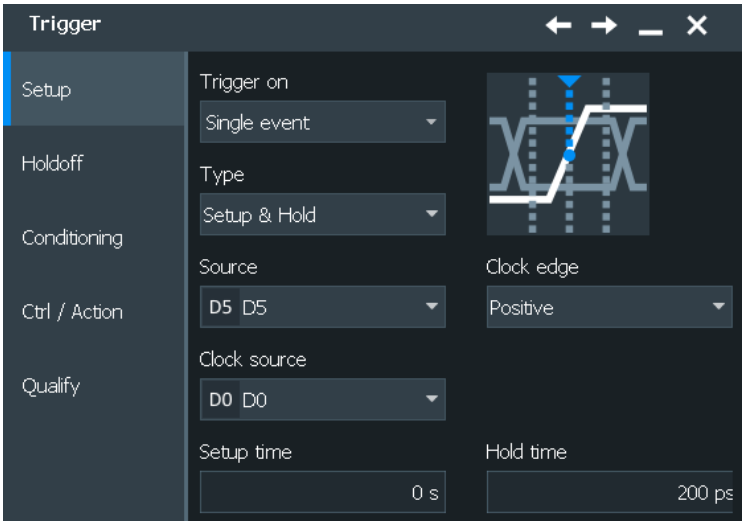


Figure 15-4: Setup & Hold trigger settings

Clock source
Selects the digital channel of the clock signal.

Remote command:
`TRIGger<t>:PARallel:SETHold:CSOurce[:VALue]` on page 2635
`TRIGger<t>:PARallel:STATe:CSOurce:VALue` on page 2635
`TRIGger<t>:PARallel:SPATtern:CSOurce[:VALue]` on page 2635

Clock edge
Sets the edge of the clock signal. The crossing of the clock edge and the logical threshold defines the time reference point for the setup and hold time measurement.

Remote command:
`TRIGger<t>:PARallel:SETHold:CSOurce:EDGE` on page 2639

Setup time
Sets the minimum time *before* the clock edge while data is stable and not change its state.

The setup time can be negative. In this case, the setup interval starts after the clock edge, and the hold time starts after the setup time has expired. Thus, the hold time is always positive. If you change the negative setup time, the hold time is adjusted by the instrument.

Remote command:
`TRIGger<t>:PARallel:SETHold:STIMe` on page 2640

Hold time
Sets the minimum time *after* the clock edge while data is stable and not change its state.

The hold time can be negative. In this case, the hold time ends before the clock edge, and the setup interval ends when the hold interval starts. Thus, the setup time is always positive. If you change the negative hold time, the setup time is adjusted by the instrument.

Remote command:
TRIGger<t>:PARallel:SETHold:HTIMe on page 2639

15.3.1.6 State

The state trigger detects the logical state of several logically combined digital channels at a given clock edge. The trigger source is a logical combination of digital channels or a parallel bus. The trigger occurs at the clock edge at which the state condition is true.



Figure 15-5: State trigger settings for trigger source = parallel bus

Clock source
Selects the digital channel of the clock signal.

Remote command:
TRIGger<t>:PARallel:SETHold:CSOurce[:VALue] on page 2635
TRIGger<t>:PARallel:STATe:CSOurce:VALue on page 2635
TRIGger<t>:PARallel:SPATtern:CSOurce[:VALue] on page 2635

Clock edge
Sets the edge of the clock signal. The crossing of the clock edge and the logical threshold defines the time at which the logical states and the bus value are analyzed.

Remote command:
TRIGger<t>:PARallel:STATe:CSOurce:EDGE on page 2640

Channel states
Available for "Trigger Source"= "Par. Bus1/2/3/4"

For each digital channel that is used in the bus, set the required state: 1, 0, or X (don't care).

Remote command:
TRIGger<t>:PARallel:STATe:BIT<n> on page 2641

Logical expression
Defines a logic combination of several digital channels as trigger condition if "Logic" is set for "Source". The "Qualification Editor" supports the entry of the expression.

Remote command:
TRIGger<t>:PARallel:TIMeout:EXPRession[:DEFine] on page 2635
TRIGger<t>:PARallel:STATe:EXPRession[:DEFine] on page 2635
TRIGger<t>:PARallel:PATTern:EXPRession[:DEFine] on page 2635
TRIGger<t>:PARallel:SPATtern:EXPRession[:DEFine] on page 2635

15.3.1.7 Pattern

The pattern trigger identifies a logical state of several logically combined digital channels (pattern) and a time limitation (holdoff). The pattern definition is defined by the logical expression, if "Logic" is used for trigger source. For a parallel bus trigger source, the pattern is defined by setting the state of each digital channel.

The timing starts when the pattern comes true. The decision level is the logical threshold.

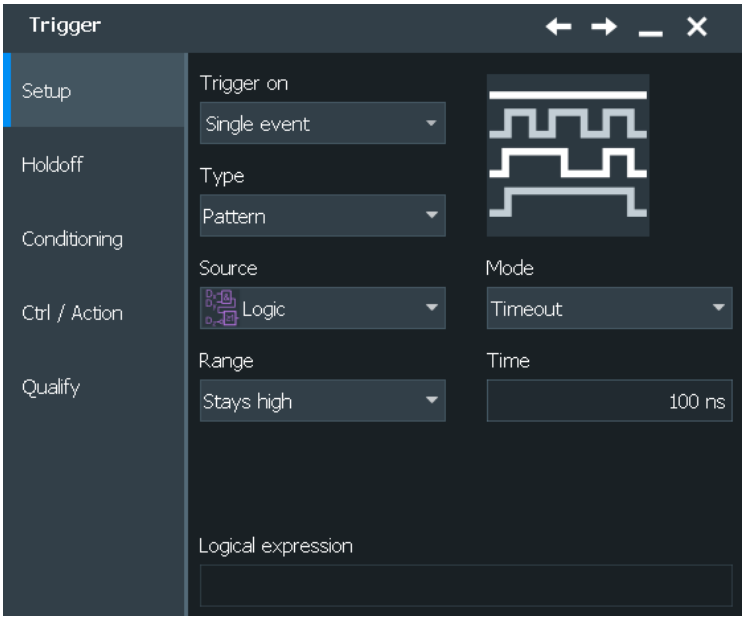


Figure 15-6: Pattern trigger settings for trigger source = parallel bus and timeout

Channel states
Available for "Trigger Source"= "Par. Bus1/2/3/4"

For each digital channel that is used in the bus, set the required state: 1, 0, or X (do not care).

Remote command:
TRIGger<t>:PARallel:PATTern:BIT<n> on page 2641

Logical expression
Defines a logic combination of several digital channels as trigger condition if "Logic" is set for "Source". The "Qualification Editor" supports the entry of the expression.

Remote command:
`TRIGger<t>:PARallel:TIMeout:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:STATe:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:PATTern:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:SPATtern:EXPRession[:DEFine]` on page 2635

Mode: Off, Timeout, Width
Sets the mode of the timing condition.

"Off" No timing condition, only the logical pattern condition is relevant.

"Timeout" Defines a minimum time qualification to avoid triggering on unstable or transitional conditions. Even in best-designed systems, there are slight delays between the signal when digital signals change states. This means that there are always transitional state conditions when signals are switching.
See "Timeout settings" on page 1034 for a description of the settings.
The trigger event occurs when the pattern stays unchanged for the specified time.

"Width" Sets a pulse width as timing condition, see "Width settings" on page 1035. The pulse starts when the pattern comes true, and the trigger event occurs when the pattern comes false during the specified time limit.
Using this mode, you can, for example, trigger exclusively on unstable conditions - if the pattern is present for less than a specified time.

Remote command:
`TRIGger<t>:PARallel:PATTern:MODE` on page 2641

Timeout settings
The timeout settings "Range" and "Time" appear if the timing mode is set to "Timeout".

Range ← Timeout settings
Sets the state condition:

"Stays high" The pattern stays true for the specified time.

"Stays low" The pattern stays false for the specified time.

"High or low" The pattern remains unchanged for the specified time.

Remote command:
`TRIGger<t>:PARallel:PATTern:TIMeout:MODE` on page 2642

Time ← Timeout settings
Defines the time limit for the timeout at which the instrument triggers.

Remote command:
`TRIGger<t>:PARallel:PATTern:TIMeout[:TIME]` on page 2643

Width settings
The width settings "Range", "Width" and "±Delta" appear if the timing mode is set to "Width".

Range ← Width settings
Selects how the range of a pulse width is defined:

"Within" Triggers when the pattern comes false inside a given time range. The time limit is defined by *Width ± Delta*.

"Outside" Triggers when the pattern comes false before or after the given time range. The time limit definition is the same as for "Within" range.

"Shorter" Triggers when the pattern comes false before the given "Width" has expired.

"Longer" Triggers when the pattern comes false after the given "Width" has expired.

Remote command:
`TRIGger<t>:PARallel:PATTern:WIDTh:RANGe` on page 2643

Width ← Width settings
For the ranges "Shorter" and "Longer", the width defines the maximum and minimum time limit, respectively.

For the ranges "Within" and "Outside", the width defines the center of a range which is defined by the limits "±Delta".

Remote command:
`TRIGger<t>:PARallel:PATTern:WIDTh[:WIDTh]` on page 2644

±Delta ← Width settings
Defines a range around the given width value.

The combination "Range" = Within and "±Delta" = 0 triggers on pulses with a pulse width that equals "Width".

The combination "Range" = Outside and "±Delta" = 0 means to trigger on pulse widths ≠ "Width".

Remote command:
`TRIGger<t>:PARallel:PATTern:WIDTh:DELTa` on page 2644

15.3.1.8 Serial pattern

The serial pattern trigger identifies a serial bit string trigger on a single digital channel, or for a logical combination of digital channels. The trigger requires a clocked bus; the bits are read at the specified clock edge. The trigger event occurs at the last clock edge of the serial bit string.

This trigger type allows you to trigger on specific address or data transmissions in serial input and output signals.

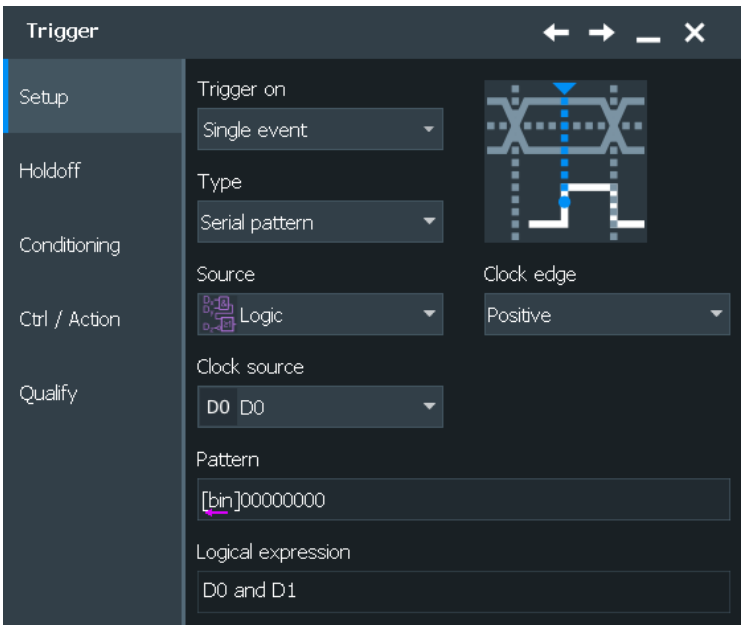


Figure 15-7: Serial pattern trigger settings for trigger source = logical combination of digital channels

Clock edge
Sets the edge of the clock signal. The bit value is determined at the crossing of the clock edge and the logical threshold.

Remote command:
`TRIGger<t>:PARallel:SPATtern:CSOurce:EDGE` on page 2644

Clock source
Selects the digital channel of the clock signal.

Remote command:
`TRIGger<t>:PARallel:SETHold:CSOurce[:VALue]` on page 2635
`TRIGger<t>:PARallel:STATe:CSOurce:VALue` on page 2635
`TRIGger<t>:PARallel:SPATtern:CSOurce[:VALue]` on page 2635

Logical expression
Defines a logic combination of several digital channels as trigger condition if "Logic" is set for "Source". The "Qualification Editor" supports the entry of the expression.

Remote command:
`TRIGger<t>:PARallel:TIMeout:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:STATe:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:PATTern:EXPRession[:DEFine]` on page 2635
`TRIGger<t>:PARallel:SPATtern:EXPRession[:DEFine]` on page 2635

Pattern
Defines the serial bit string on which to trigger. Touch and hold the "Pattern" field to open the "Bit Pattern Editor" where you can enter the pattern in various formats. The pattern has to be defined exactly, X (do not care) is not supported in binary format.

See also: Section 14.1.7, "Bit pattern editor", on page 564

Remote command:
TRIGger<t>:PARallel:SPATtern:PATTern on page 2645

15.3.2 Triggering on digital signals and parallel buses

For a detailed description of the settings, see Section 15.3.1, "Trigger settings for digital signals and parallel buses", on page 1025.

1. Open "Menu">"Trigger" > "Setup" tab
2. Select the trigger "Source":
   - One of the digital channels "D0" ... "D15"


   - A logic combination of digital channels: "Logic"

   - One of the parallel buses "Par. bus1" ... "Par. bus4"

3. Select the trigger "Type".
4. Under "Trigger type dependent settings", configure the trigger.
5. For trigger source "Logic", enter the logical expression of the digital channel combination. Tap and hold the "Logical expression" field until the "Qualification Editor" opens. It provides all logic operators that can be used in the expression.



15.4 Measurements on digital channels

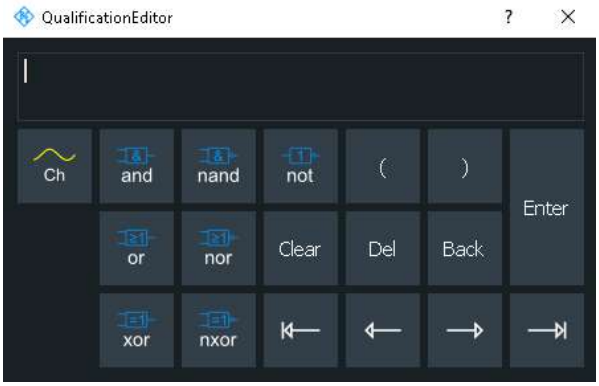For measurements on digital channels, the number of measurement categories and types is reduced to applicable measurement.

These are:

- Period
- Frequency
- Positive and negative pulse
- Pulse count
- Delay
- Phase
- Positive and negative duty cycle
- Burst width
- Edge count

Except for delay measurement, the measurements have the same settings and results for analog and digital sources.

Delay measurement on digital channels is reduced to measure the time between two subsequent rising or two subsequent falling edges.

See also Section 8.2, "Automatic measurements", on page 332.

15.5 Data export

The data of digital channels and parallel buses can be saved to file in the same way as analog waveform data. One digital channel or bus per file can be saved.

The data format of the stored values is defined with Menu > "Logic" > "Bus" tab > "Data format".

If the data is written to XML or CSV files, the selected format is used. If the target file format is BIN, you can save signed and unsigned binary data. The data format "Signed" writes signed data; all other formats are saved as unsigned binary data.

The export of raw data is not available.

Export of a digital channel

If the data of digital channels is stored in BIN format, 1 bit is written for each sample. 8 data samples are written in 1 byte (data word). Thus, the file size is

File size = Number of samples / 8

For example, 100 MSa are written into a 12.5 MByte BIN file. After reading the file, you have to extract the samples from the data words.

If saved to BIN file, the digital channel can be imported as reference waveform.

Export of a parallel bus

A parallel bus can be exported to file if "Enable bus" and "Show bus" are both activated, and the bus representation is "Comb".

All data formats can be saved to XML, CSV, and BIN files. If you save binary format to XML or CSV, you can see the values of each line for each sample.

In BIN files, 4 Bytes are written for each sample.

See also:

- Section 12.3.7, "Saving and loading waveform data", on page 520
- Section 12.3.1, "Waveform export files", on page 498

Remote commands for export to file:

- `EXPort:WAVeform:SOURce` on page 1783
- `EXPort:WAVeform:NAME` on page 1785
- `EXPort:WAVeform:SAVE` on page 1786

Remote commands for remote data transfer:


- `BUS<b>:PARallel:DATA:FORMat` on page 2629
- `BUS<b>:PARallel:DATA:HEADer?` on page 2647
- `BUS<b>:PARallel:DATA[:VALues]?` on page 2647
- `DIGital<m>:DATA:HEADer?` on page 2645
- `DIGital<m>:DATA[:VALues]?` on page 2646

15.6 Mathematics

A parallel bus that is displayed as quasi-analog waveform can be analyzed with FFT. To configure the FFT, use the "Advanced" mode and the formula editor.

15.7 Search

Access: "Menu" > "Apps" > "Analysis" tab > "Search".

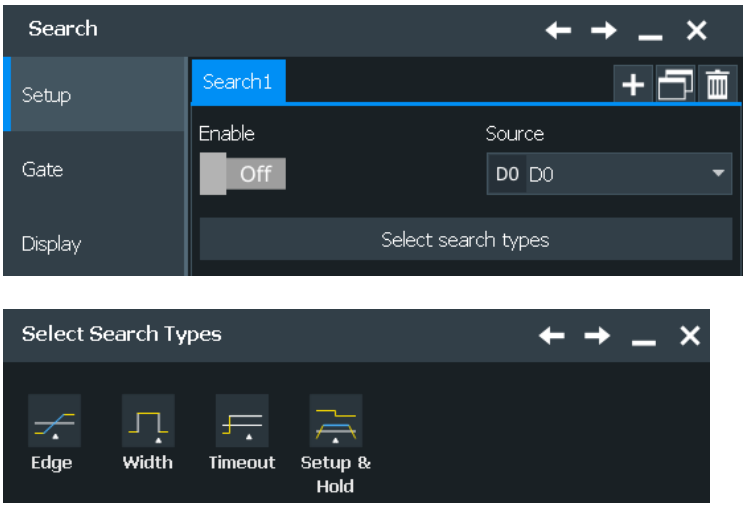

It is also possible to search on digital channels for specified events. Search conditions use the same parameters as the trigger event definition, see Section 15.3.1, "Trigger settings for digital signals and parallel buses", on page 1025.

You can search for edge, width, timeout, and Setup & Hold conditions.

16 Waveform generator (option R&S RTP-B6)

The R&S RTP includes an integrated waveform generator which can generate input signals and patterns during testing. You can setup and output two waveform generators and a pattern generator.

With each of the waveform generators, one can output simple functions, modulated sine waveform, arbitrary waveforms and sweep waveforms. It is possible to couple and synchronize the settings of the waveform generators.

The instrument preset does not affect the generator settings. Each generator has its own preset.


Always use double-shielded cables to prevent electromagentic interference (EMI) from impairing measurement results.

16.1 Setup of the waveform generator

Access: "Menu" > "Apps" > "Generators" > "Gen1" > "Setup" tab.

The "Setup" tab is divided into several sections:

- General settings like enabling and presetting the waveform generator
- Signal settings, depending on the selected Operation mode refer to one of the following:
  - Section 16.1.2, "Function generator", on page 1043
  - Section 16.1.3, "Modulation", on page 1048
  - Section 16.1.4, "Sweep", on page 1054
  - Section 16.1.5, "Arbitrary", on page 1055

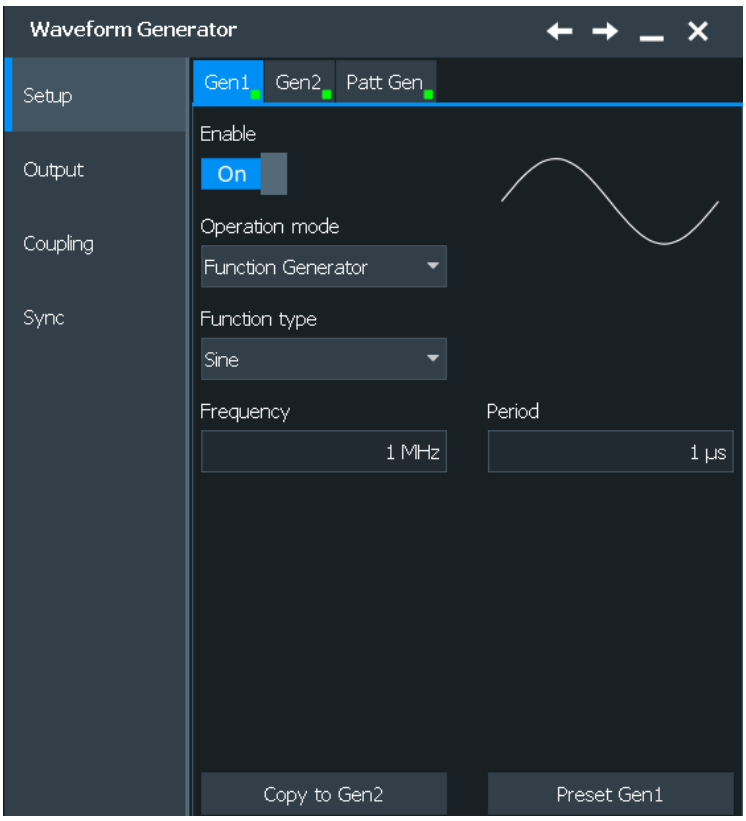

Make sure that the tab of the correct waveform generator is selected on the left side.

The settings of the waveform generators are not affected by an instrument preset. Press "Preset Gen1/2" to preset the settings of the corresponding waveform generator.

16.1.1 General settings

The general waveform generator settings are for enabling and presetting the generator and selecting the "Operation Mode".

Enable
Enables the waveform generator/ pattern generator and outputs the signal to the connectors.

Remote command:
`WGENerator<wg>[:ENABle]` on page 2648
`PGENerator:ENABle` on page 2663

Operation mode
Selects the operation mode for the waveform generator. The "Signal" settings depend on the selected mode.

For the settings of the different operation modes, refer to:

- Section 16.1.2, "Function generator", on page 1043
- Section 16.1.3, "Modulation", on page 1048
- Section 16.1.4, "Sweep", on page 1054
- Section 16.1.5, "Arbitrary", on page 1055

Remote command:
`WGENerator<wg>:SOURce` on page 2648

Copy settings from Gen1/Gen2
Copies all settings from Gen1/Gen2 and applies them to Gen2/Gen1.

Remote command:
`WGENerator<wg>:ACOPy` on page 2648

Preset Gen1/Gen2/Patt Gen
Sets the parameters of the generator to their default values. The settings of the generators are not affected by an instrument preset.They are also not stored in the user-defined preset.

Remote command:
`WGENerator<wg>:PRESet` on page 2649
`PGENerator:PRESet` on page 2664


Message
Displays relevant messages concerning the coupling and sync settings.

16.1.2 Function generator


The R&S RTP function generator can generate input signals during testing. These signals can be used, for example, when testing circuits.

Function type
Selects the type of waveform to be generated for the function generator.


"Sine" Generates a sine wave. You can set its Frequency and Period.

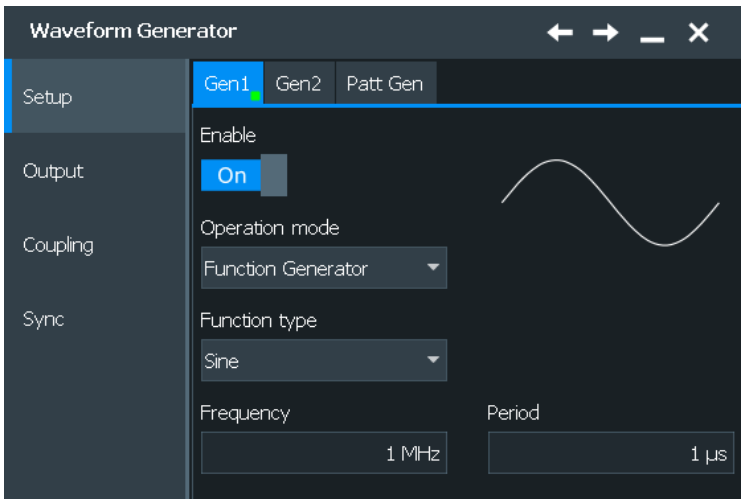


"Square" Generates a square wave. You can set its Frequency, Period and Duty cycle.

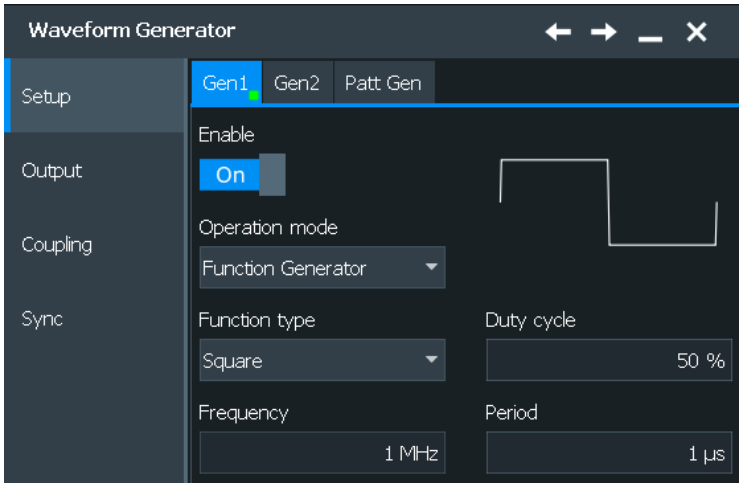


"Ramp" Generates a ramp signal. You can set its Frequency, Period and Symmetry.

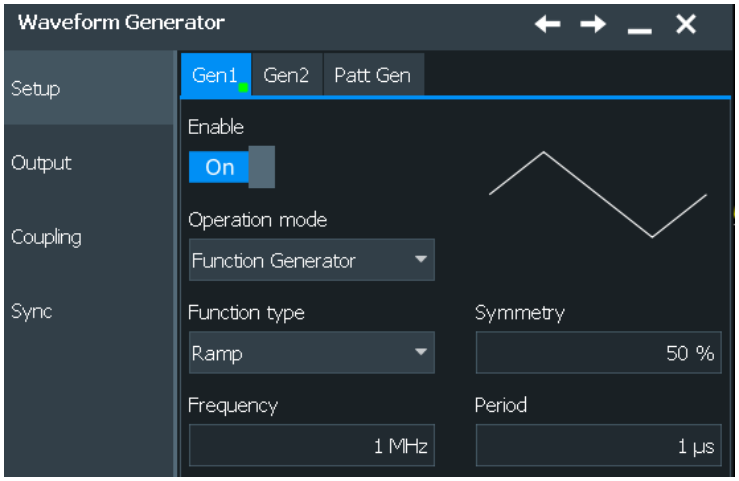


"DC" Generates a direct current (DC) signal. You can set the "Absolute level" on page 1065.

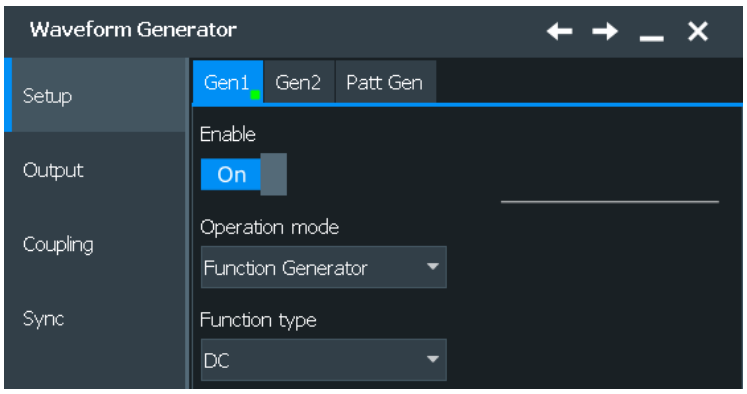


"Pulse" Generates a pulse signal. You can set the Frequency, Period and Pulse width.

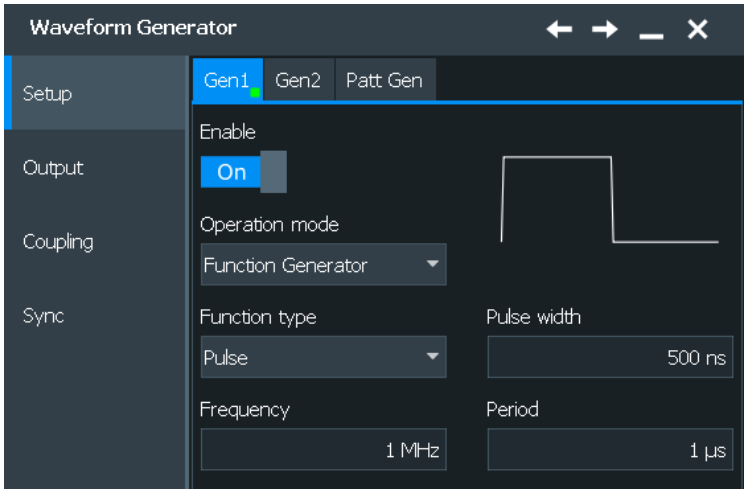


"Cardinal sine" Generates a cardinal sine wave. You can set the Frequency and Period.

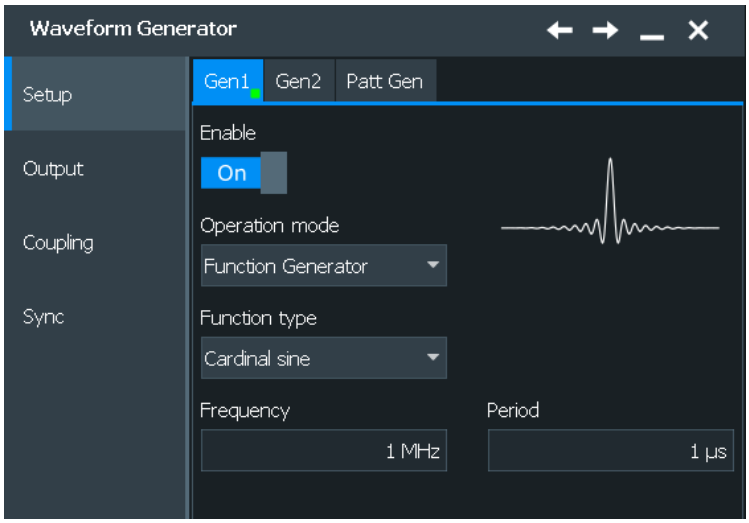


"Cardiac" Generates a cardiac signal. You can set the Frequency and Period.

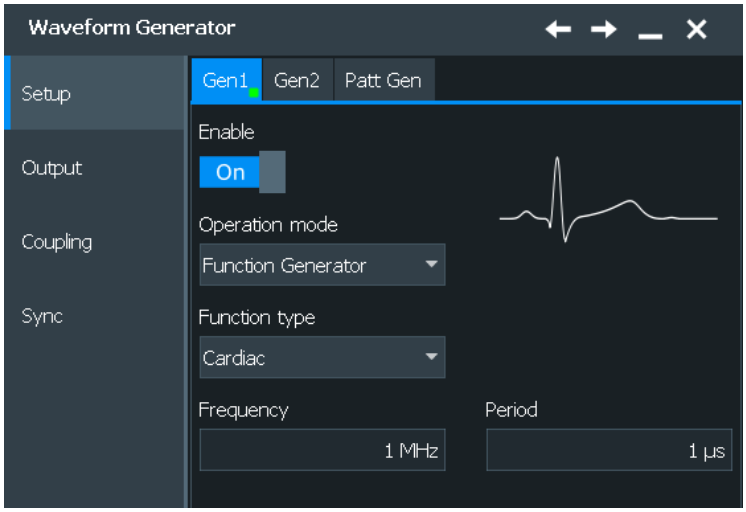


"Gauss" Generates a gauss signal . You can set the Frequency and Period.

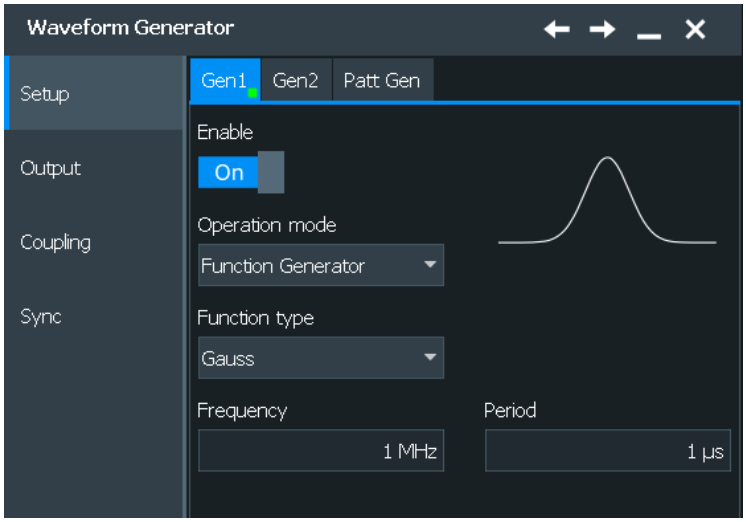


"Lorentz" Generates a Lorentz signal . You can set the Frequency and Period.

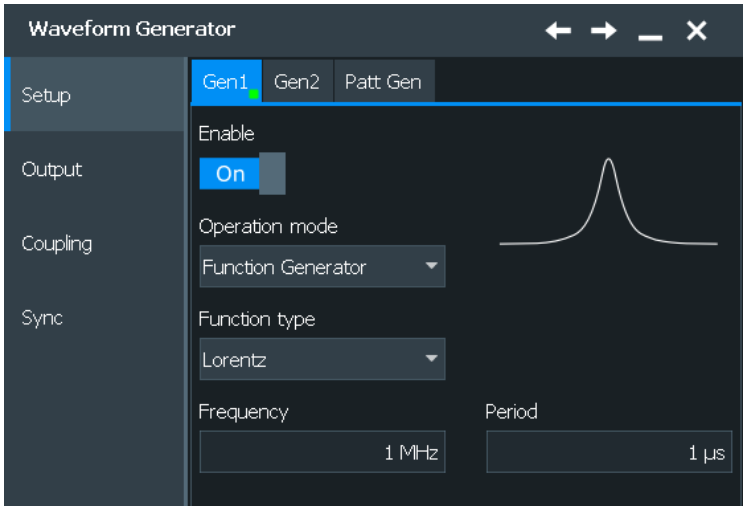

"Exp. rise" Generates an exponential rise signal. You can set the Frequency and Period.

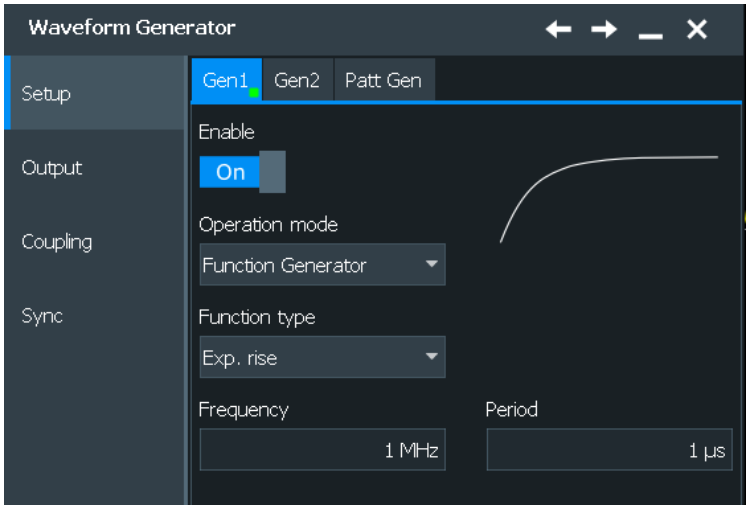

"Exp. fall" Generates an exponential fall signal. You can set the Frequency and Period.

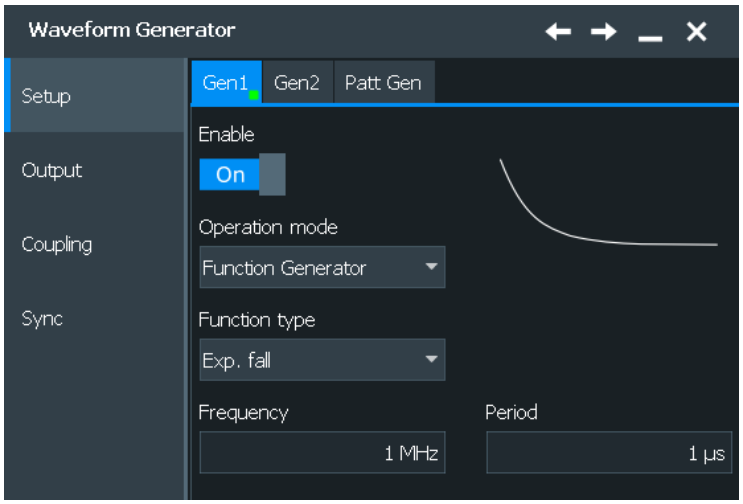

Remote command:
`WGENerator<wg>:FUNCtion[:SELect]` on page 2650

Frequency
Sets the frequency of the waveform. The available frequency range depends on the selected "Function Type", see Frequency range of the function generator waveforms.

Table 16-1: Frequency range of the function generator waveforms

"Function type"	Min frequency	Max frequency
"Sine"	0.001 Hz	100 MHz
"Square"	0.001 Hz	30 MHz
"Ramp"	0.001 Hz	1 MHz
"DC"	-	-

"Function type"	Min frequency	Max frequency
"Pulse"	0.001 Hz	30 MHz
"Cardinal sine"	0.001 Hz	5 MHz
"Cardiac"	0.001 Hz	1 MHz
"Gauss"	0.001 Hz	25 MHz
"Lorentz"	0.001 Hz	10 MHz
"Exp.rise"	0.001 Hz	1 MHz
"Exp. fall"	0.001 Hz	1 MHz

The values of the "Frequency" and "Period" depend on each other, as:

Period = 1/ Frequency

Remote command:
`WGENerator<wg>:FREQuency` on page 2650

Period
Sets the period of the waveform. The available period range depends on the selected "Function Type".

Remote command:
`WGENerator<wg>:PERiod` on page 2650

Duty cycle
Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage of the period, the signal state is high.

Remote command:
`WGENerator<wg>:FUNCtion[:SQUare]:DCYCle` on page 2651

Symmetry
Sets the symmetry of a ramp waveform, the percentage of time the waveform is rising. By changing the symmetry of the ramp, you can create, for example, triangular waveforms.


Remote command:
`WGENerator<wg>:FUNCtion:RAMP[:SYMMetry]` on page 2651

Pulse width
Sets the pulse width, the pulse duration of the generated pulse waveform.

Remote command:
`WGENerator<wg>:FUNCtion:PULSe[:WIDTh]` on page 2651

16.1.3 Modulation

Modulation is when properties of an original periodic waveform, the carrier signal, are varied according to a second modulating signal. The type of modulation used determines which properties are changed.

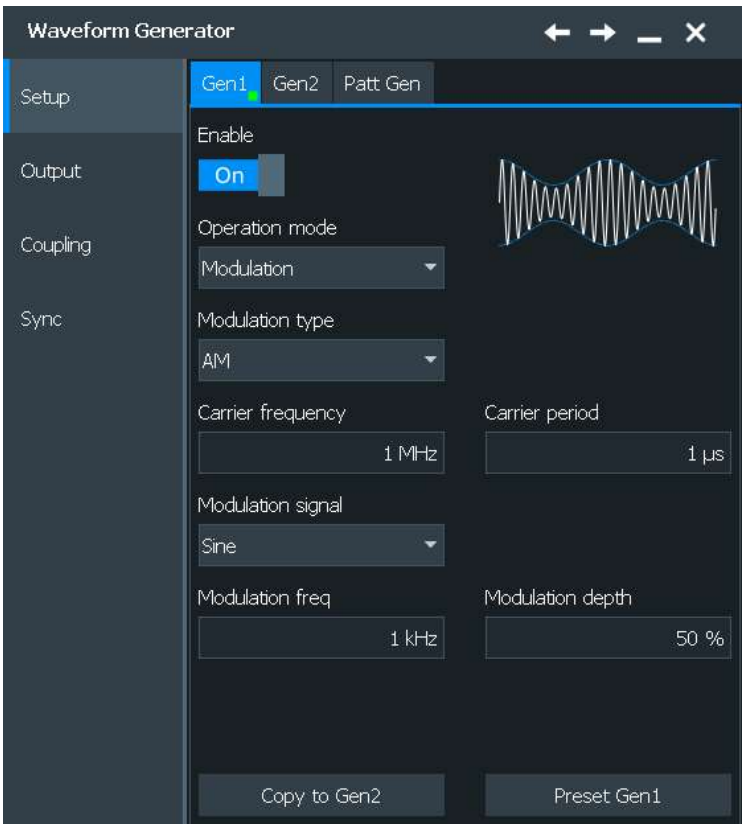

16.1.3.1 General settings

Consists of settings for selecting the modulation type.

Modulation type
Selects the modulation type, which defines how the carrier signal is modified.

"AM" Amplitude modulation.
See: Section 16.1.3.2, "AM modulation", on page 1050.

"FM" Frequency modulation.
See: Section 16.1.3.4, "FM modulation", on page 1052.

"PWM" Pulse width modulation
See: Section 16.1.3.3, "PWM modulation", on page 1051

"FSK" Frequency shift keying (FSK) modulation.
See:Section 16.1.3.5, "FSK modulation", on page 1054.

Remote command:
`WGENerator<wg>:MODulation:TYPE` on page 2652

Carrier frequency
Sets the frequency of the carrier signal.


Remote command:
`WGENerator<wg>:MODulation:CARRier:FREQuency` on page 2654

Carrier period
Sets the period of the carrier signal.

Remote command:
WGENerator<wg>:MODulation:CARRier:PERiod on page 2654

16.1.3.2 AM modulation

For amplitude modulation (AM), the amplitude of the carrier signal is varied according to the modulation signal.

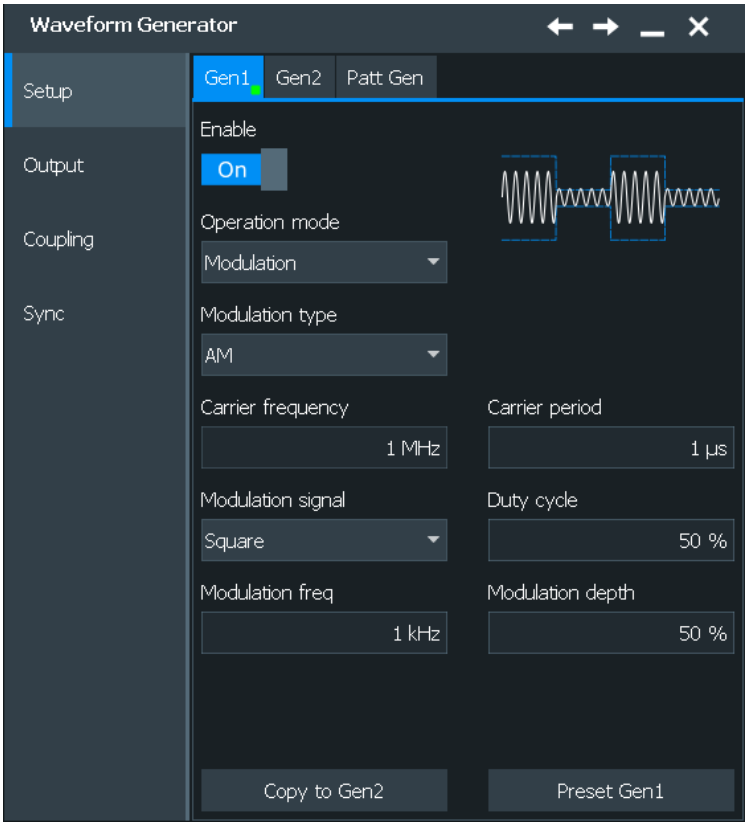

Modulation signal
Selects the type of the modulation signal for the AM modulation types.

Remote command:
WGENerator<wg>:MODulation:AM[:FUNCtion] on page 2654

Modulation freq
Sets the frequency of the modulation waveform.

Remote command:
WGENerator<wg>:MODulation:AM:FREQuency on page 2653

Modulation depth
Sets the modulation depth, the percentage of the amplitude range that is used for the modulation.

Remote command:
WGENerator<wg>:MODulation:AM:DEPTh on page 2653

Symmetry
Sets the symmetry for the ramp modulation waveform, the percentage of time that the waveform is rising.


Remote command:
WGENerator<wg>:MODulation:AM:SYMMetry on page 2653

Duty cycle
Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Remote command:
WGENerator<wg>:MODulation:AM:DCYCle on page 2652

16.1.3.3 PWM modulation

For pulse width modulation (PWM), the time for which the signal is in a high state is varied according to the modulation signal.

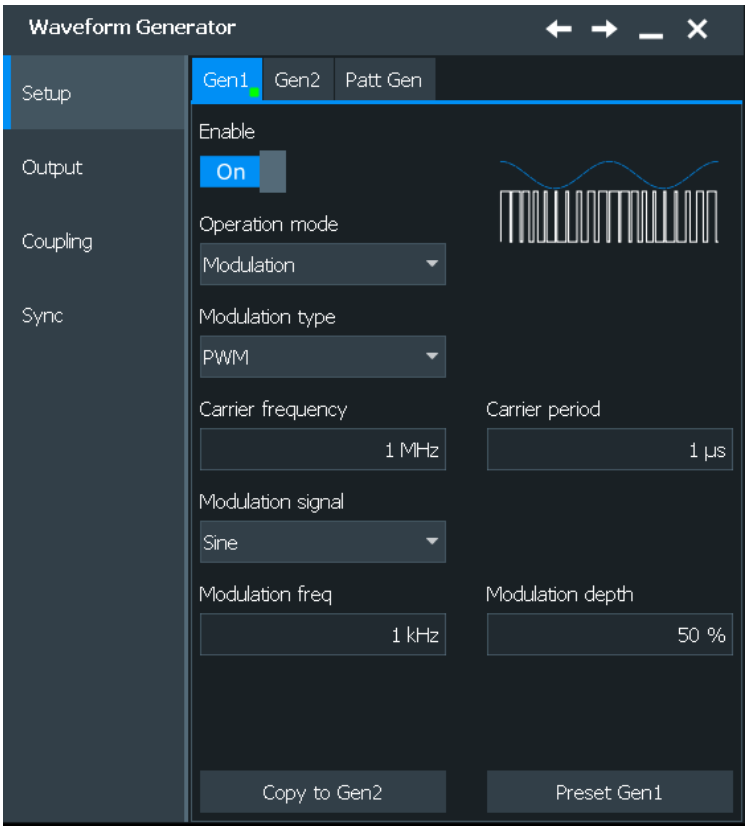

Modulation signal
Selects the type of the modulation signal for the PWM modulation types.

Remote command:
WGENerator<wg>:MODulation:PWM[:FUNCtion] on page 2658

Modulation freq
Sets the frequency of the modulation waveform.

Remote command:
WGENerator<wg>:MODulation:PWM:FREQuency on page 2657

Modulation depth
Sets the modulation depth, the percentage of the pulse width range that is used for the modulation.

Remote command:
WGENerator<wg>:MODulation:PWM:DEPTh on page 2657

Symmetry
Sets the symmetry for the ramp modulation waveform, the percentage of time that the waveform is rising.


Remote command:
WGENerator<wg>:MODulation:PWM:SYMMetry on page 2658

Duty cycle
Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Remote command:
WGENerator<wg>:MODulation:PWM:DCYCle on page 2657

16.1.3.4 FM modulation

For frequency modulation (FM), the frequency of the carrier signal is varied according to the modulation signal.

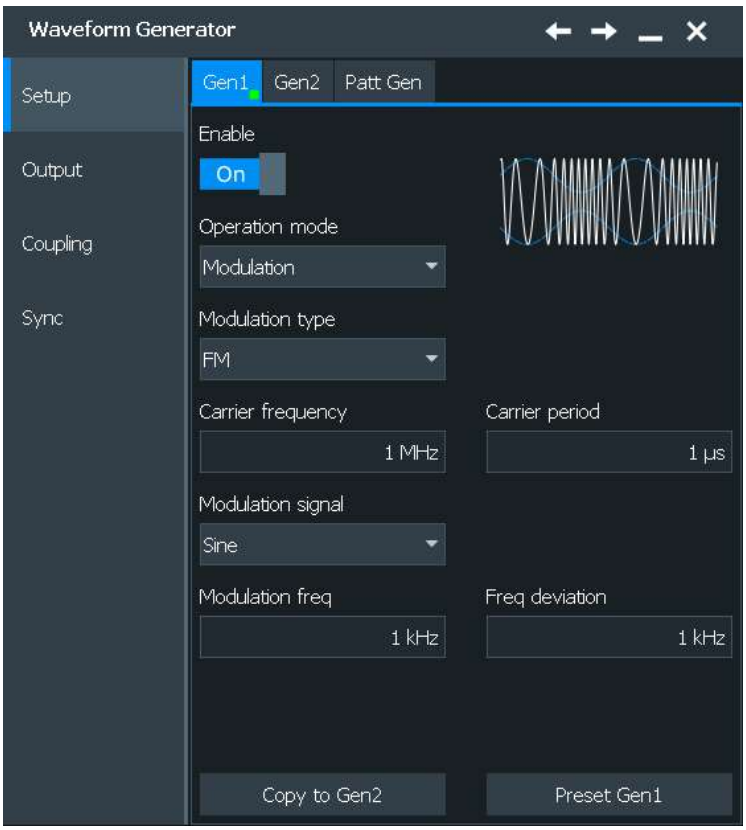

Modulation signal
Selects the type of the modulation signal for the FM modulation types.

Remote command:
`WGENerator<wg>:MODulation:FM[:FUNCtion]` on page 2656

Modulation freq
Sets the frequency of the modulation waveform.

Remote command:
`WGENerator<wg>:MODulation:FM:FREQuency` on page 2655

Symmetry
Sets the symmetry for the ramp modulation waveform, the percentage of time that the waveform is rising.

Remote command:
`WGENerator<wg>:MODulation:FM:SYMMetry` on page 2655

Freq deviation
Sets the frequency deviation, the maximum difference between and FM modulated signal and the carrier signal.


Remote command:
`WGENerator<wg>:MODulation:FM:DEViation` on page 2655

Duty cycle
Sets the duty cycle for a square waveform. The duty cycle expresses the percentage of the period during which the waveform is active, i.e. the signal state is high.

Remote command:
`WGENerator<wg>:MODulation:FM:DCYCle` on page 2654

16.1.3.5 FSK modulation

For frequency shift keying (FSK) modulation, the signal switches between Frequency 1 and Frequency 2 at a Hop rate.

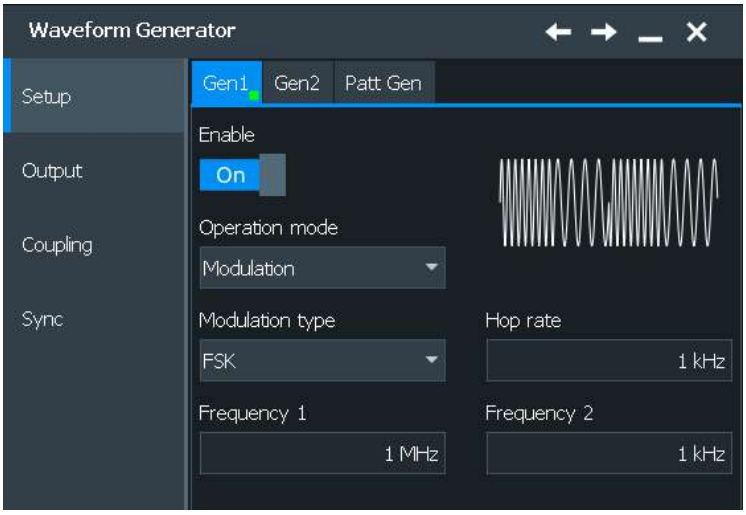

Frequency 1
Sets the frequency of the first signal in FSK modulated signal.

Remote command:
`WGENerator<wg>:MODulation:FSK:FONE` on page 2656

Frequency 2
Sets the frequency of the second signal in FSK modulated signal.


Remote command:
`WGENerator<wg>:MODulation:FSK:FTWO` on page 2656

Hop rate
Sets the hop rate, the frequency at which signal switches between Frequency 1 and Frequency 2.

Remote command:
`WGENerator<wg>:MODulation:FSK[:RATE]` on page 2657

16.1.4 Sweep

In the sweep mode, the R&S RTP generates a signal whose frequency gradually changes from the Start frequency to the Stop freuqency for a certain Sweep time.

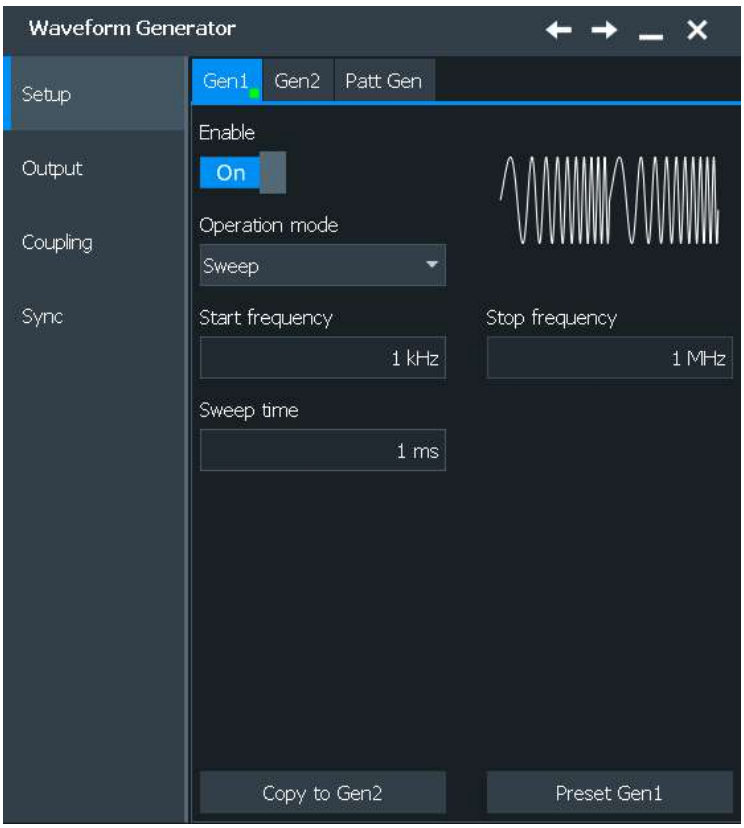

Start frequency
Sets the start frequency of the sweep signal.

Remote command:
`WGENerator<wg>:SWEep:FSTart` on page 2658

Stop freuqency
Sets the stop frequency of the sweep signal.

Remote command:
`WGENerator<wg>:SWEep[:FEND]` on page 2659

Sweep time
Sets the duration of the sweep.

Remote command:
`WGENerator<wg>:SWEep:TIME` on page 2659

16.1.5 Arbitrary

The arbitrary waveform generator allows you to output a user-defined waveform for testing your devices. You can output a waveform from a file or from the current R&S RTP reference curve format. Files in `*.csv` and `*.bin` formats are supported. This files must follow a defined structure. You can load `*.csv` files in an R&S Wave

Gen format (see "Content and format of the Rohde & Schwarz arbitrary waveform CSV files" on page 1056), Tektronix AFG format or Keysight WaveGen format.

Content and format of the Rohde & Schwarz arbitrary waveform CSV files

The waveform generator format can contain the following values:

- Rate
- Time value
- Voltage value

If all the values are defined, the file format is as follows:

```
Rate 5000000            //Sample rate of the arbitrary waveform.
0.000000E+000,-5.995    //Time value 1, Voltage value 1
1.237011E-005,-6.0      //Time value 2, Voltage value 2
.......
```

In this case, the rate is reflected in the "Sample Rate" field of the user interface. The total number of Time/Voltage values is reflected in the "Samples" of the user interface. Anything written after `//` is ignored as a comment.

You can define only some of the values. According to what you define, the file format looks different and is handled differently:

- With specified *Rate*:
  Time values are ignored. You can specify just rate and voltage values as below:

```
Rate 5000000               //Sample rate of the arbitrary waveform
-5.995                     //Voltage value 1
-6.0                       //Voltage value 2
.......
```

- Without specified *Rate* and without specified *Time* values:
  The last user-defined sample rate is used to calculate the waveform. You can change the "Sample rate" in the user interface. The voltage values are then played with this sample rate.

```
-5.995                //Voltage value 1
-6.0                   //Voltage value 2
.......
```

- Without specified *Rate* and with specified *Time*:
  The timing information of the first 2 time values is used to calculate the sample rate.

Example:

Consider the following file:

```
0.000000E+000,-5.995    //Time value 1, Voltage value 1
1.237011E-005,-6.0      //Time value 2, Voltage value 2
```

The sample rate is:

Sample rate = 1/ Time between first two samples =1 / 1.237011E-005 = 80.840KSampe/sec


Content and format of the Rohde & Schwarz arbitrary generator BIN files

The file stream should contain the following information in the given order:

- Sample rate [double format]
- Number of samples [unsigned integer format]
- Samples [double format] * number of samples

16.1.5.1 General settings

Access: "Menu" > "Apps" > "Generators" > "Gen1" > "Setup" tab > "Operation mode" = "Arbitrary"

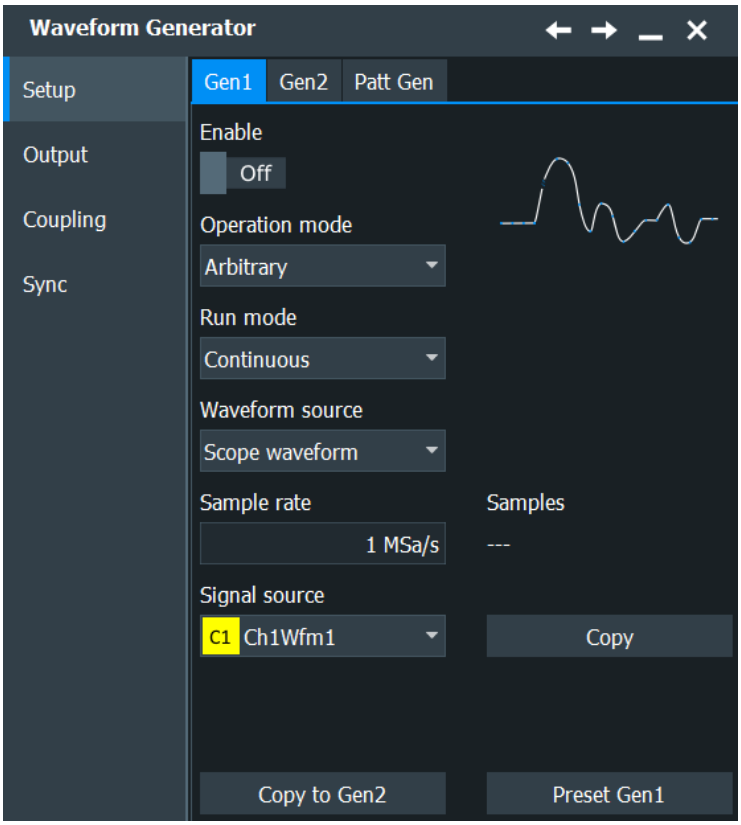

Waveform source
Selects the arbitrary waveform source. You can load an existing file or load the current oscilloscope waveform.

Remote command:
`WGENerator<wg>:ARBGen[:SOURce]` on page 2662

Run mode
Selects the duration for which the signal of the arbitrary generator will be output after the trigger event. You can choose between a "Continuous" and "Single period" duration.

Remote command:
WGENerator<wg>:ARBGen:RUNMode on page 2661

Sample rate
Sets the sample rate for the arbitrary waveform.

Remote command:
WGENerator<wg>:ARBGen:SRATe on page 2662


Samples
Displays the number of samples in the loaded waveform.

Remote command:
WGENerator<wg>:ARBGen:SAMPles? on page 2662

Run single
Generates a single period of the arbitrary waveform if "Run mode" is set to "Single period".

Remote command:
WGENerator<wg>:ARBGen:RUNSingle on page 2663

16.1.5.2 Saved waveform

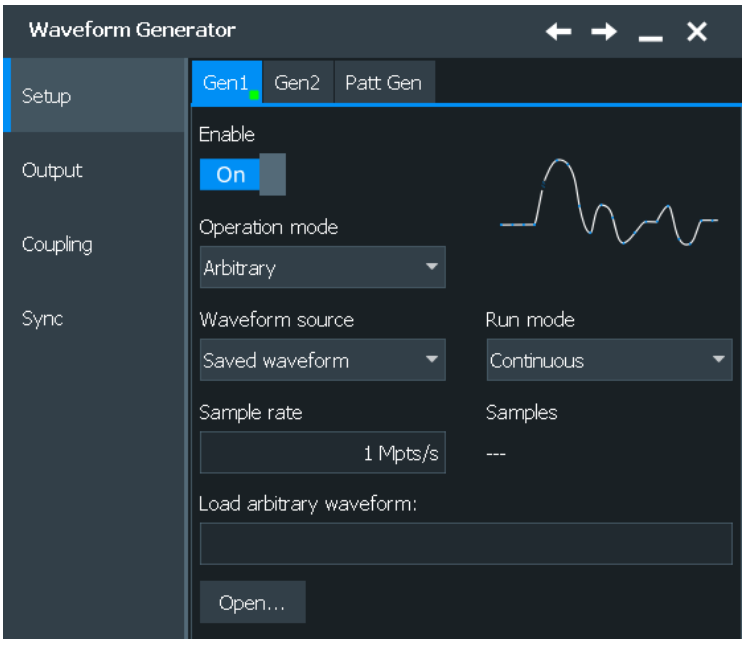


For a saved waveform, the following settings are available:

Load arbitrary waveform
Opens a file selection dialog box and loads the selected file. Supported are `.bin` and `.csv` extension files.

Remote command:
WGENerator<wg>:ARBGen:NAME on page 2661
WGENerator<wg>:ARBGen:OPEN on page 2661


Select waveform
When a multichannel file is loaded into the arbitrary waveform generator, a dialog appears to select which waveform from the file is loaded.

Select the waveform and press "Load" to load it into the arbitrary waveform generator.

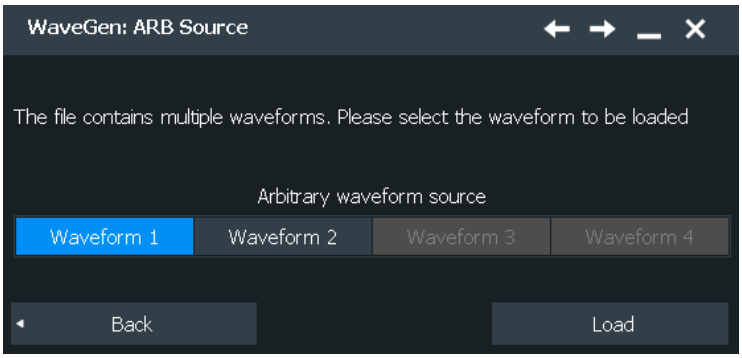

Remote command:
WGENerator<wg>:ARBGen:MULTichannel:NAME on page 2660
WGENerator<wg>:ARBGen:MULTichannel:IMPort on page 2660
WGENerator<wg>:ARBGen:MULTichannel:OPEN on page 2660

16.1.5.3 Scope waveform

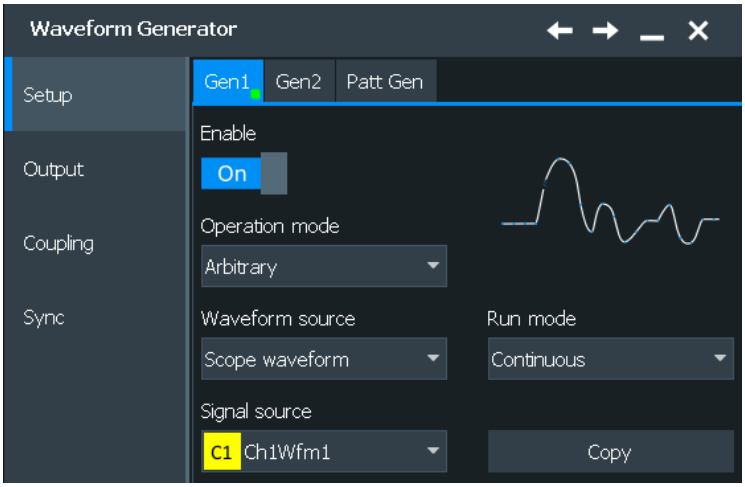

For a scope waveform, the following settings are available:

Signal source
Selects the oscilloscope source, from which the arbitrary signal is loaded.


Remote command:
WGENerator<wg>:ARBGen:SELect on page 2662

Load
Loads the waveform from the selected "Signal source".

Remote command:
`WGENerator<wg>:ARBGen:COPY` on page 2660

16.2 Setup of the pattern generator

The pattern generator outputs parallel patterns.

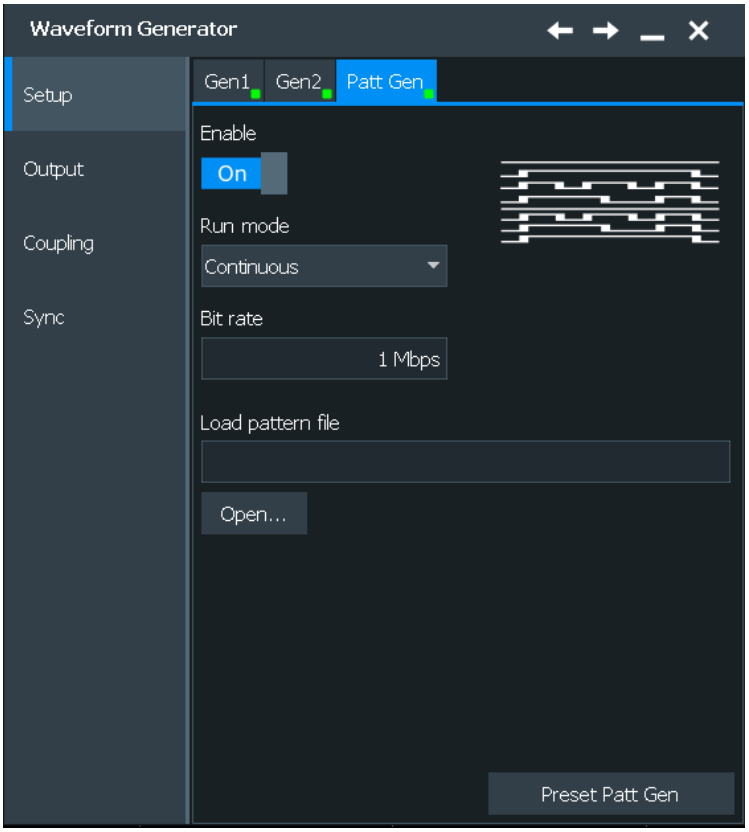

NOTICE

Using pattern generator accessories

The pattern generator with connected Patt Gen Cable and Patt Gen Board (1329.7054.02) is considered as a test probe, EN 61326-2-1, clause 5.2.4.101, note 1. Therefore normal operation may display increased emissions above the limits as specified in EN 55011 and/or reduced interference resistance as required in EN 61326-1, table 1, basic requirements.

If the cable and the board are connected, other surrounding electronic devices may be disturbed. Furthermore, signals at the analog generator outputs Gen1 and Gen2 may be distorted by surrounding devices.

The settings of the pattern generator are not affected by an instrument preset. Press "Preset Patt Gen" to preset the settings of the pattern generator.

16.2.1 Content and format of the pattern generator files

The pattern generator supports `.bin` or `.csv` file formats.

Content and format of the R&S*.csv files

The file's header have the following structure:

- Bit rate [double]: the number of transmitted bits per second. The value is reflected in the user interface.
- High level [double]: the value is reflected in the user interface.
- Mask [string of 8 characters made up of "X"/"1"/"0"] : defines how the output of the pattern generator looks like. The following values are defined:
  - *1'* means that the pin output is always at high level
  - *0'* means that the pin output is always at low level (close to 0V)
  - *X* means that the pin output varies according to the given pattern
- Data sample format [HEX, BIN, OCT, DEC]: indicates how the samples are going to be interpreted. Each sample is represented as 8bit value (corresponding to the 8bit pattern generator) considering the selected format.

Example: Sample format HEX

```
Format= HEX        // Defines the format of the pattern values [HEX, DEC, BIN, OCT]
0F -> Data Sample 1
21 -> Data Sample 2
........
```

The samples are mapped on the 8 pins of the pattern generator as follows:

```
=> Pattern Samples are:
D7   D6   D5   D4  D3   D2  D1   D0
0    0    0    0   1    1   1    1
0    0    1    0   0    0   0    1
```

Example: .csv pattern generator file

```
R&S Pattern Generator File
Rate= 1000000       // Bit Rate [double]
HLevel= 1.5         // High Voltage Level [double]
Mask= X111000X      // Masks the Pins to be used in the Pattern Generator
                    // [0 => always LOW, 1 => always HIGH, X/x => used in the Pattern]
Format= DEC         // Defines the format of the pattern values [HEX, DEC, BIN, OCT]0
1
2
3
....
200
```

Content and format of the R&S pattern generator *.bin files

For the content of the fields, refer to "Content and format of the R&S*.csv files" on page 1061.

The file stream should contain the following information in the given order:

- Bit rate [double]
- High level [double]
- Mask [string of 8 characters made up of "X"/"1"/"0"]
- Number of samples [UINT32]
- Data samples [UINT8] * number of samples

16.2.2 Pattern generator settings

Enable
Enables the waveform generator/ pattern generator and outputs the signal to the connectors.

Remote command:
`WGENerator<wg>[:ENABle]` on page 2648
`PGENerator:ENABle` on page 2663

Run mode
Selects the duration for which the signal of the generator will be output after the trigger event. You can choose between a "Continuous" and "Single period" duration.

Remote command:
`PGENerator:RUNMode` on page 2664

Bit rate
Sets the number of transmitted bits per second for the pattern generator.

Remote command:
`PGENerator:BITRate` on page 2663

Run single
Generates a single period of the pattern waveform if "Run mode" is set to "Single period".

Remote command:
`PGENerator:RUNSingle` on page 2665

Load pattern file
Opens a dialog for selecting an existing pattern file. It is possible to load `.bin` or `.csv` files, see Section 16.2.1, "Content and format of the pattern generator files", on page 1061.


Remote command:
PGENerator:FILE:OPEN on page 2664
PGENerator:FILE[:NAME] on page 2664

Preset Gen1/Gen2/Patt Gen
Sets the parameters of the generator to their default values. The settings of the generators are not affected by an instrument preset.They are also not stored in the user-defined preset.

Remote command:
WGENerator<wg>:PRESet on page 2649
PGENerator:PRESet on page 2664

16.3 Output

Access: "Menu" > "Apps" > "Generators" > "Gen1" > "Setup" tab.

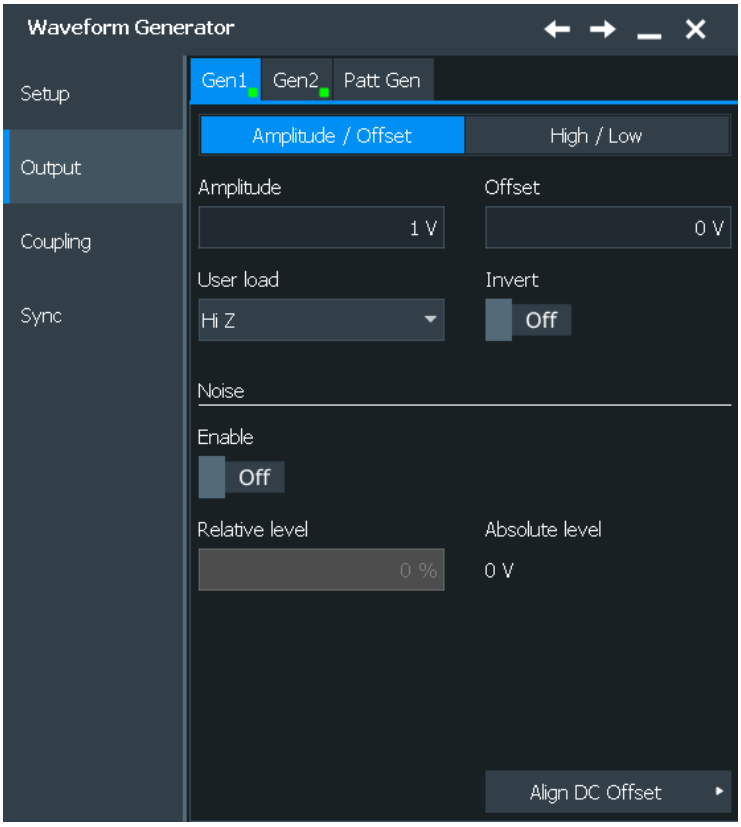

In this tab you can define the generator output and add noise to the waveform.

16.3.1 Output

Amplitude/Offset - High/Low
Selects how the output is defined: with a defined "Amplitude"/ "Offset" or with "High"/"Low" values.

Amplitude
Sets the amplitude, peak to peak voltage, of the output waveform. It is defined as the voltage difference between the maximum ("High") and the minimum ("Low") voltage levels.

The "Amplitude" value is set for the currently selected "User Load". If the "User Load" is changed, the value of "Amplitude" is adapted to this new setting.

Remote command:
`WGENerator<wg>:VOLTage[:VPP]` on page 2665

Offset
Sets a voltage offset.

Remote command:
`WGENerator<wg>:VOLTage:OFFSet` on page 2667

High
Sets the high signal level of the output waveform.

Remote command:
`WGENerator<wg>:VOLTage:HIGH` on page 2666

Low
Sets the low signal level of the output waveform.

Remote command:
`WGENerator<wg>:VOLTage:LOW` on page 2666

Invert
Inverts the waveform at the offset level.

Remote command:
`WGENerator<wg>:VOLTage:INVersion` on page 2666

User Load
Select the user load, the load of the DUT at its connection. You can select either a "50Ω" or a "HiZ" (high input impedance) load.

Remote command:
`WGENerator<wg>:OUTPut[:LOAD]` on page 2665

DC Level
Sets the voltage DC level for the generated DC signal, for "Operation mode" >"Function Gen." and "Function type"> "DC".

Remote command:
`WGENerator<wg>:VOLTage:DCLevel` on page 2666

16.3.2 Noise

Enable
Enables the adding of noise to the waveform.

Remote command:
`WGENerator<wg>:MODulation:NOISe` on page 2668

Relative level
Sets the level of the noise in percentage of the set "Amplitude" output of the signal.

Remote command:
`WGENerator<wg>:MODulation:NLPCent` on page 2668

Absolute level
Displays the level of the noise in volts.

Remote command:
`WGENerator<wg>:MODulation:NLABsolute?` on page 2667


Absolute level
For "Function type">"DC" only.

Sets the level for the DC signal.

Remote command:
`WGENerator<wg>:MODulation:NDCLevel` on page 2667

16.3.3 DC offset alignment

Access: [Gen] > "Output" > "Align DC Offset"

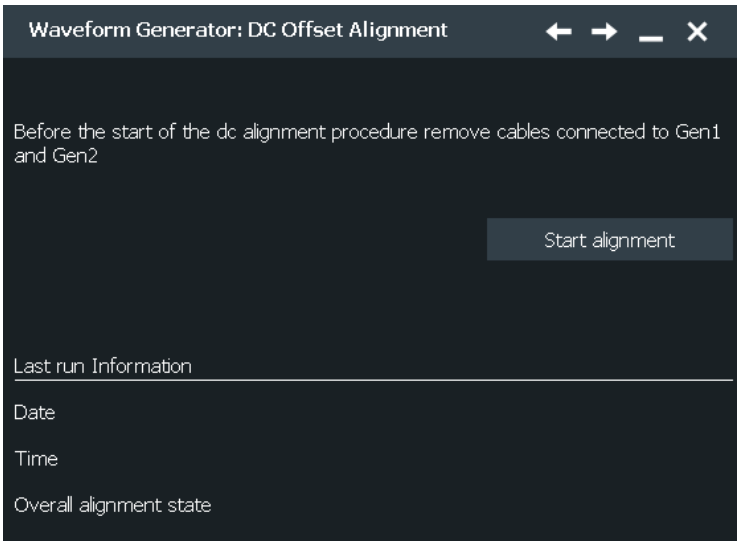

Start Alignement
Starts the alignment of the DC offset.

Remote command:
GENerator:ALIGnment:DC[:STARt] on page 2669

Date
Displays the date of the last performed DC offset alignment.

Remote command:
GENerator:ALIGnment:DC:RESult:DATE? on page 2669

Time
Displays the time of the last performed DC offset alignment.

Remote command:
GENerator:ALIGnment:DC:RESult:TIME? on page 2669


Overall alignment state
Displays the result of the DC offset alignment.

Remote command:
GENerator:ALIGnment:DC:RESult[:STATe]? on page 2669

16.4 Coupling settings

Access: "Wave Gen" menu > "Coupling & Sync" tab.

In the R&S RTP, you can couple certain settings of the available waveform generators. If one of the available coupling options is enabled for one of the generators, then you cannot change the coupled parameters at the "Setup" tab of the other generator. The values for all coupled parameters are automatically taken from the currently selected generator.

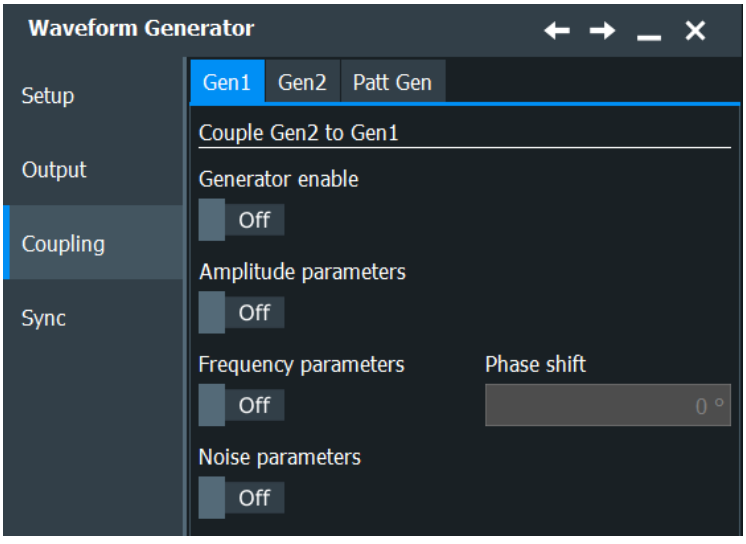

Generator enable
Enables the coupling of the generators, with the selected set of parameters: amplitude, frequency and noise.

Remote command:
WGENerator<wg>:COUPling:STATe on page 2670

Amplitude parameters
Couples all amplitude parameters of "Gen1" to "Gen2" or "Gen2" to "Gen1" including the load. The values are taken from the currently selected generator.

- For all "Operation Mode": the output settings except of "Load" and "Inversion", "Amplitude", "High", "Offset" and "Low".
- For "Operation Mode" > "Function Gen.": "DC Level"
- For "Operation Mode" > "Modulation": "Modulation depth"

Remote command:
WGENerator<wg>:COUPling[:FREQuency] on page 2670

Frequency parameters
Couples all frequency parameters of "Gen1" to "Gen2" or "Gen2" to "Gen1". The values are taken from the currently selected generator.

- For "Operation Mode" > "Function Gen.": "Frequency" and "Period"
- For "Operation Mode" > "Modulation": "Carrier frequency", "Carrier period", "Modulation freq", "Freq deviation", "Frequency 1", "Frequency 2" and "Hop rate"
- For "Operation Mode" > "Sweep": "Start frequency", "Stop frequency" and "Sweep time".
- For "Operation Mode" > "Arbitrary": "Arb wfm source" and "Signal source".

You can still change the other settings of the generators independently.

Remote command:
WGENerator<wg>:COUPling:AMPLitude on page 2670

Phase shift
Sets the phase shift between the waveform of "Gen1" and "Gen2" when the frequency parameters of the two waveforms are coupled.

Remote command:
WGENerator<wg>:COUPling:PHASeshift on page 2670

Noise parameters
Couples all noise parameters of "Gen1" to "Gen2" or "Gen2" to "Gen1". The values are taken from the currently selected generator.

Remote command:
WGENerator<wg>:COUPling:NOISe on page 2671

Arbitrary waveform
Available for General settings = "Arbitrary".

Couples the arbitrary waveform "Gen1" to "Gen2" or "Gen2" to "Gen1". The values are taken from the currently selected generator.

Remote command:
WGENerator<wg>:COUPling:NOISe on page 2671

16.5 Sync settings

Access: [Gen] > "Sync"



Sync start
Selects, which signals generated from the waveform generator are synchronized.

Selecting one of the sync options indicates that the first samples of those signals are generated at the same time, irrespective of if the generators are on or off. Selecting one of the coupling options automatically syncs the signals generated by the two waveform generators.

Remote command:
`GENerator:SYNC[:COMBination]` on page 2671

16.6 Configuring the waveform generator

This chapter explains step-by-step how to configure the waveform generator.

- Configuring a function waveform.....1068
- Configuring a modulation waveform.....1069
- Configuring a sweep waveform.....1070
- Configuring an arbitrary waveform.....1070
- Configuring a pattern generator waveform.....1071

16.6.1 Configuring a function waveform

1. Open "Menu" > "Apps" > "Generators" > "Gen1".
2. Select the "Setup" tab.
3. Under "Operation mode", enable the "Function Gen." button.
4. Select the "Function type" that you want to generate, e.g. "Sine".
5. Depending on the selected "Function type", configure the settings of the waveform like "Frequency" and "Period".

6. If necessary, change the "Output" settings or add "Noise" to the waveform.
7. Press the "Enable" button, to output the waveform at the output connector of the waveform generator.

16.6.2 Configuring a modulation waveform

Generating an AM modulated waveform

1. Open "Menu" > "Apps" > "Generators" > "Gen1".
2. Select the "Setup" tab.
3. Under "Operation mode", enable the "Modulation" button.
4. Tap "Modulation type" and select "AM".
5. Set the "Carrier frequency" and the "Carrier period".
6. Tap "Modulation signal" and select the required waveform.
7. Depending on the selected "Modulation signal", configure the settings of the waveform like "Modulation freq" and "Modulation depth".
8. If necessary, change the "Output" settings or add "Noise" to the waveform.
9. Press the "Enable" button, to output the waveform at the output connector of the waveform generator.

Generating an PWM modulated waveform

1. Open "Menu" > "Apps" > "Generators" > "Gen1".
2. Select the "Setup" tab.
3. Under "Operation mode", enable the "Modulation" button.
4. Tap "Modulation type" and select "PWM".
5. Set the "Carrier frequency" and the "Carrier period".
6. Tap "Modulation signal" and select the required waveform.
7. Depending on the selected "Modulation signal", configure the settings of the waveform like "Modulation freq" and "Modulation depth".
8. If necessary, change the "Output" settings or add "Noise" to the waveform.
9. Press the "Enable" button, to output the waveform at the output connector of the waveform generator.

Generating an FM modulated waveform

1. Open "Menu" > "Apps" > "Generators" > "Gen1".
2. Select the "Setup" tab.

3. Under "Operation mode", enable the "Modulation" button.
4. Tap "Modulation type" and select "FM".
5. Set the "Carrier frequency" and the "Carrier period".
6. Tap "Modulation signal" and select the required waveform.
7. Depending on the selected "Modulation signal", configure the settings of the waveform like "Modulation freq" and "Freq deviation".
8. If necessary, change the "Output" settings or add "Noise" to the waveform.
9. Press the "Enable" button, to output the waveform at the output connector of the waveform generator.

Generating an FSK modulated waveform

1. Open "Menu" > "Apps" > "Generators" > "Gen1".
2. Select the "Setup" tab.
3. Under "Operation mode", enable the "Modulation" button.
4. Tap "Modulation type" and select "FSK".
5. Set the "Frequency 1", "Frequency 2" and the "Hop rate".
6. If necessary, change the "Output" settings or add "Noise" to the waveform.
7. Press the "Enable" button, to output the waveform at the output connector of the waveform generator.

16.6.3 Configuring a sweep waveform

1. Open "Menu" > "Apps" > "Generators" > "Gen1".
2. Select the "Setup" tab.
3. Under "Operation mode", enable the "Sweep" button.
4. Set the "Start frequency", the "Stop frequency" and the "Sweep time".
5. If necessary, change the "Output" settings or add "Noise" to the waveform.
6. Press the "Enable" button, to output the waveform at the output connector of the waveform generator.

16.6.4 Configuring an arbitrary waveform

Generating an arbitrary waveform from a saved file

1. Open "Menu" > "Apps" > "Generators" > "Gen1".

2. Select the "Setup" tab.
3. Under "Operation mode", enable the "Arbitrary" button.
4. Set the "Arb wfm source" to "Saved waveform".
5. Select the "Run mode".
6. Press "Open" and set the path to your saved arbitrary waveform.
7. Set the "Sample rate".
8. If necessary, change the "Output" settings or add "Noise" to the waveform.
9. Press the "Enable" button, to output the waveform at the output connector of the waveform generator.

Generating an arbitrary waveform from the scope waveform

1. Open "Menu" > "Apps" > "Generators" > "Gen1".
2. Select the "Setup" tab.
3. Under "Operation mode", enable the "Arbitrary" button.
4. Set the "Arb wfm source" to "Scope waveform".
5. Select the "Run mode".
6. Press the "Signal source" button and select the channel source for the waveform.
7. Set the "Sample rate".
8. If necessary, change the "Output" settings or add "Noise" to the waveform.
9. Press the "Enable" button, to output the waveform at the output connector of the waveform generator.

16.6.5 Configuring a pattern generator waveform

1. Open "Menu" > "Apps" > "Generators" > "Gen1".
2. Select the "Setup" tab.
3. Select the "Patt Gen" tab.
4. Select the "Run mode".
5. Press "Open" and set the path to your saved pattern file.
6. Set the "Bit rate" and "High level".
7. Press "Open" and set the path to your saved arbitrary waveform.
8. Press the "Enable" button, to output the pattern at the output connector of the pattern generator.

17 Pulse source and TDR/TDT analysis (options R&S RTP-B7/K130)

17.1 Pulse source (option R&S RTP-B7)

The pulse source option R&S RTP-B7 provides a symmetrical differential pulse signal with steep rise time and configurable parameters. The hardware module of the option features four 2.92 mm connectors (K type), two for signal output (Out, $\overline{\text{Out}}$), and two for reference signal output (Ref, $\overline{\text{Ref}}$).

Typical applications of the pulse source are:

- Stimulus for devices under test, for example, as a precise clock
- Accurate source for deskewing cables and probes for differential measurements
- Analysis of time-transmission characteristics of a differential signal path
- TDR/TDT analysis with option R&S RTP-K130

The module is installed at the front panel of the instrument. To ensure correct installation and calibration, send the instrument to a Rohde & Schwarz service center.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

► **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

a) Use a wrist strap and cord to connect yourself to ground.
b) Use a conductive floor mat and heel strap combination.

Usage of cables

Beside the pulse source module, the option includes several accessories: SMA cables, 50 Ω terminations, adapters, and more. The accessory case provides also space for optional accessories. All included accessories are listed in the specifications document.

NOTICE

When fastening the cable, observe the maximum torque of 0.9 Nm. Therefore, using a 0.9 Nm torque wrench is recommended (optional accessory 1328.8534.35).

To ensure accurate and reliable measurements, connect only cables with a maximum length of 3 m.


Always use double-shielded cables to prevent electromagentic interference (EMI) from impairing measurement results.

Always use cables to connect the DUT or test fixture to the pulse source outputs. Never connect the DUT or test fixture directly to the outputs.

17.1.1 Settings for the pulse source

Access: [Apps] > "Generators" > "PSC"

Terminate all unused outputs of the pulse source with 50 Ω terminating resistors.

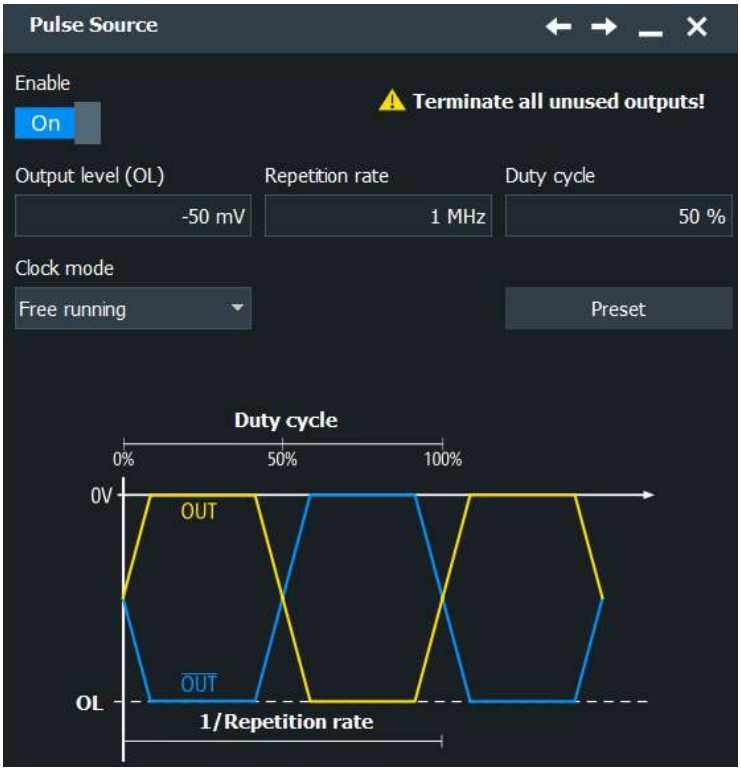

Enable
Switches all four pulse source outputs on and off.

Remote command:
`PSRC[:STATe]` on page 2672

Output level
Sets the low level of the output pulse. The high level is 0 V and cannot be changed.

Remote command:
`PSRC:OUTPutlow` on page 2672

Repetition rate
Sets the pulse frequency, the repetition rate of the pulse. Available values depend on the selected clock mode.

Remote command:
`PSRC:REPRate` on page 2673

Duty cycle
Sets the duty cycle of the pulse in %, which is the ratio of the positive pulse width to the period of the signal.

For repetition rates > 5 MHz, the value is fixed at 50 %.

Remote command:
`PSRC:DUTYcycle` on page 2673

Clock mode
Sets the dependency of the pulse clock on the instrument's reference clock. The appropriate clock mode depends on the measurement application.

"Free running" The clock of the pulse source is independent. Deviations of the system do not affect the pulse clock, and deterministic conditions are avoided.
If the waveform aquisition is set to "Average", the "free running" clock mode can improve the measurement result. Internal spurious signals of the instrument are reduced by averaging, because they are not coherent to the pulse source signal.
See also: "Arithmetic" on page 133.

"Locked" The pulse source is locked to the reference clock of the instrument.

Remote command:
`PSRC:CLOCkmode` on page 2673

Preset
Resets the pulse source to the default state. Pulse source settings are not are not affected by an instrument preset. They are also not stored in the user-defined preset.

Remote command:
`PSRC:RST` on page 2674

17.2 TDR/TDT analysis (option R&S RTP-K130)

The option R&S RTP-K130 provides analysis of time domain reflectometry (TDR) and time domain transmission (TDT) to verify high-speed digital designs. Using the results of the TDR/TDT calibration, the instrument removes the effects of the cables (deembedding), and measures the DUT.

Typical use cases are:

- Locate faults in a circuit
- Measure impedance
- Measure step response of a DUT

You can use the TDR/TDT option for single-ended and differential measurements.

17.2.1 About TDR/TDT measurements

Using TDR/TDT measurements, you can analyze the reflections and transmission characteristics of a DUT. With TDR, it is possible to determine the type, magnitude and location of a fault. TDT delivers information on stability, losses and bandwidth of the DUT.

The signal source is the pulse source, and the oscilloscope measures the reflected and transmitted signals.

Requirements

TDR/TDT analysis requires the pulse source option R&S RTP-B7.

Cabling requirements:

- Use only high-quality double-shielded RF cables. Two suitable cables are delivered with the pulse source option R&S RTP-B7.
- Use low loss cables with frequency range that fits the oscilloscope bandwidth.
- Consider the recommended cable length: 0.5 m < length < 3 m.
- For differential TDR/TDT, use a matched pair cable, e.g. R&S RT-ZA17.

Calibration standards

During calibration, you measure the connecting cables of the measurement setup against standards. Calibration standards assumed to be ideal.

- Short with RF quality: a standard short is delivered with the pulse source option R&S RTP-B7. You can use other shorts with electrical length 0 ns … 2 ns. Default value is the R&S RTP-B7 short.
  For differential TDR, the short does not require ground connection, the calibration is fully differential.
- Open (DC)
- Match (DC): a standard 50 Ω match is delivered with the pulse source option R&S RTP-B7.
  You can use another match with 50 Ω±10% for single-ended measurements, or 100 Ω±10% for differential measurements.
- Through (RF): the length is assumed to be zero.

Calibration results

After successful calibration, the frequency response of the short and through measurements are displayed. Steep dips in the graph indicate high attenuation within your desired bandwidth, which impairs the performance. To improve the measurement,

reduce the bandwidth of the system. To check the impact of the frequency response calibration on the time domain waveform, you can disable the usage ("Use frequency response calibration"). Without frequency response correction, only the rescaling to the TDR/TDT measurements is performed.

The calibration results are used for correction of subsequent measurements and can be saved in a file for later usage.

Correction

Calibration results are used for correction of the signal in two ways:

- DC scaling using results of open, short and match calibration.
- RF correction and deembedding of transmission loss based on short calibration.

The R&S RTP corrects for the transmission loss of the system, but not for multiple reflections between DUT and oscilloscope.

17.2.2 Using TDR/TDT

17.2.2.1 Calibrating the setup

Before you can start TDR/TDT measurements, calibrate the used cables.

You can:

- Calibrate the setup using the calibration wizard of the R&S RTP.
- Load a file with results of a previous calibration of the same setup.
- Use default calibration and correction values.

To calibrate the cables

The calibration procedure is described for single-ended TDR and TDT analysis. If you need only TDR or only TDT, the procedure is the same but with fewer calibration steps and fewer measurements.

1. Open [Apps]> "Analysis" > "TDR / TDT"
2. To start a new calibration, select "Start wizard".

   If a calibration was loaded or done before, the calibration steps are skipped, and the measurement dialog box is shown.
3. Select the analysis type: "TDR", "TDT", or "TDR / TDT" (both TDR and TDT measurements).
4. Select the connection: "single-ended" or "differential".
5. Select "Calibrate setup".
6. Connect the cables, and select the input channels:
   a) Connect the first cable to the "Ref" connector of the pulse source and to a channel input. This cable is for TDR measurements.

b) Select the connected channel in the dialog box.
c) Connect the second cable to the "Out" connector. Do not connect the DUT.
d) Connect a third cable to a channel input. This cable is for TDT measurements.
e) Select the connected channel in the dialog box.
f) Terminate all unused connectors of the pulse source.
g) Set up the input channels, in particular, the trigger level and vertical settings. These settings must remain unchanged during and after calibration.
h) Select "Next".

7. Calibrate with a short:
   a) Connect a short to the cable that is connected to the "Out" connector.
   b) To change the short, select the edit icon.
   c) If you use another short than the delivered standard short, select "User.defined", and enter the electrical length of the used short.
   d) Select "Calibrate".
8. Calibrate with open cable:
   a) Remove the short.
   b) Select "Calibrate".
9. Calibrate with a match:
   a) Connect a match to the cable that is connected to the "Out" connector.
   b) Select "Calibrate".
10. Calibrate with a through:
    a) Connect a through to the cable that is connected to the "Out" connector.
    b) Connect the through to the third cable.
    c) Select "Calibrate".
11. Select "Next".
12. Check the graphical calibration result. To see the details, you can display the full-size graphic, zoom in and out, and use the cursor. To see the original plot again, select "Reset".

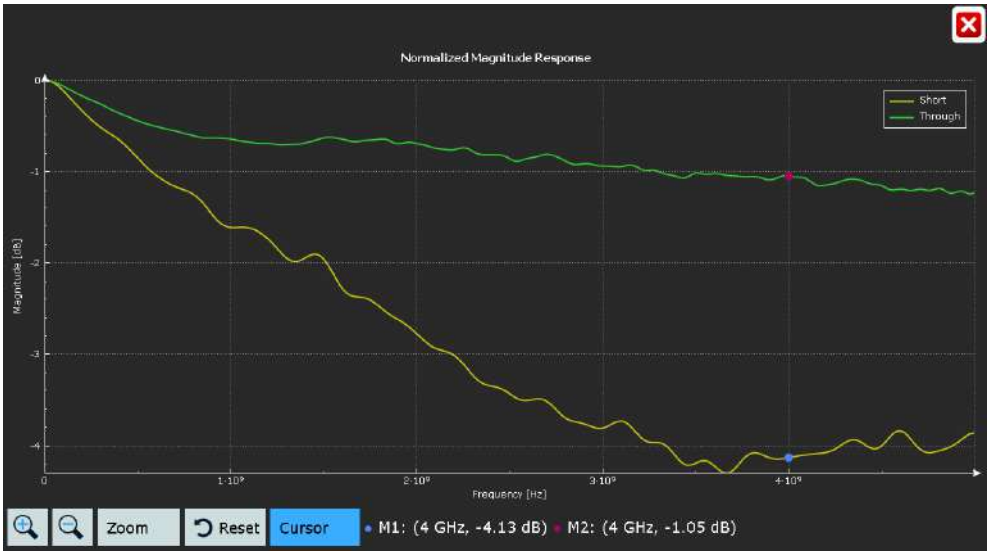


Figure 17-1: Full-size display of calibration results, with cursor

13. Save the calibration results for later measurements.
14. Select "Next".

    Now you can analyze the DUT.

17.2.2.2 Measuring the DUT


1. Open [Apps]> "Analysis" > "TDR / TDT"
2. Load an existing calibration file, or calibrate the setup as described in Section 17.2.2.1, "Calibrating the setup", on page 1076.
3. Discharge the DUT before connecting.
4. Connect the DUT instead of calibration standards as shown in the dialog.
5. Under "Signals", select the characteristics that you want to analyze.
6. Enter the "Bandwidth" of the DUT.
7. Select whether you want to see the time or the distance on the x-axis: "Domain".
8. If the distance is selected, enter the permittivity of the DUT: "ε_r".
9. To check the impact of the frequency response calibration on the time domain waveform, disable "Use frequency response calibration".
10. Close the dialog box.
11. Set the horizontal time scale so that the complete DUT is captured and visible on the screen.

12. Analyze the selected signals. See also: Section 17.2.6, "Measurement results", on page 1087

17.2.3 Calibration settings

17.2.3.1 Setup: TDR/TDT configuration

Access: [Apps]> "Analysis" > "TDR / TDT"

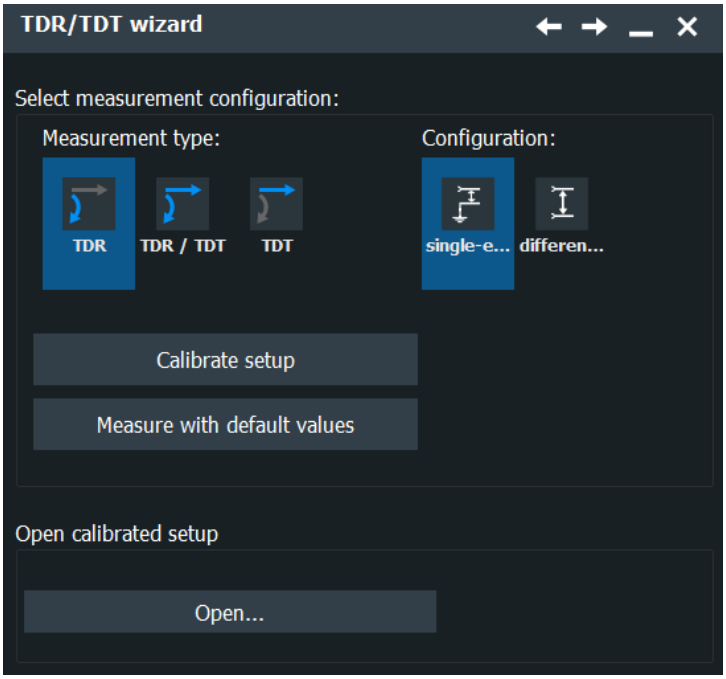

Measurement type
Selects the analysis type: "TDR" (time domain reflectometry), "TDT" (time domain transmission), or "TDR / TDT" (both TDR and TDT).

Remote command:
`TDRT:TYPE` on page 2675

Configuration
Selects the connection: "single-ended" or "differential" measurement.

Remote command:
`TDRT:CONFig` on page 2675

Calibrate setup
Starts the wizard for manual calibration. In the next steps, you connect several calibration standards and measure the correction parameters.

Measure with default values
Starts the measurement with default correction values instead of calibrating the setup. Default values are rough values without time reference.

Remote command:
`TDRT:DEFault` on page 2674

Open
Opens a saved calibration file of a previous calibration and starts the measurement.

Remote command:
`TDRT:CALibration:OPEN:NAME` on page 2675
`TDRT:CALibration:OPEN[:EXECute]` on page 2675

17.2.3.2 Setup: channels

Access: [Apps]> "Analysis" > "TDR / TDT" > "Calibrate setup"

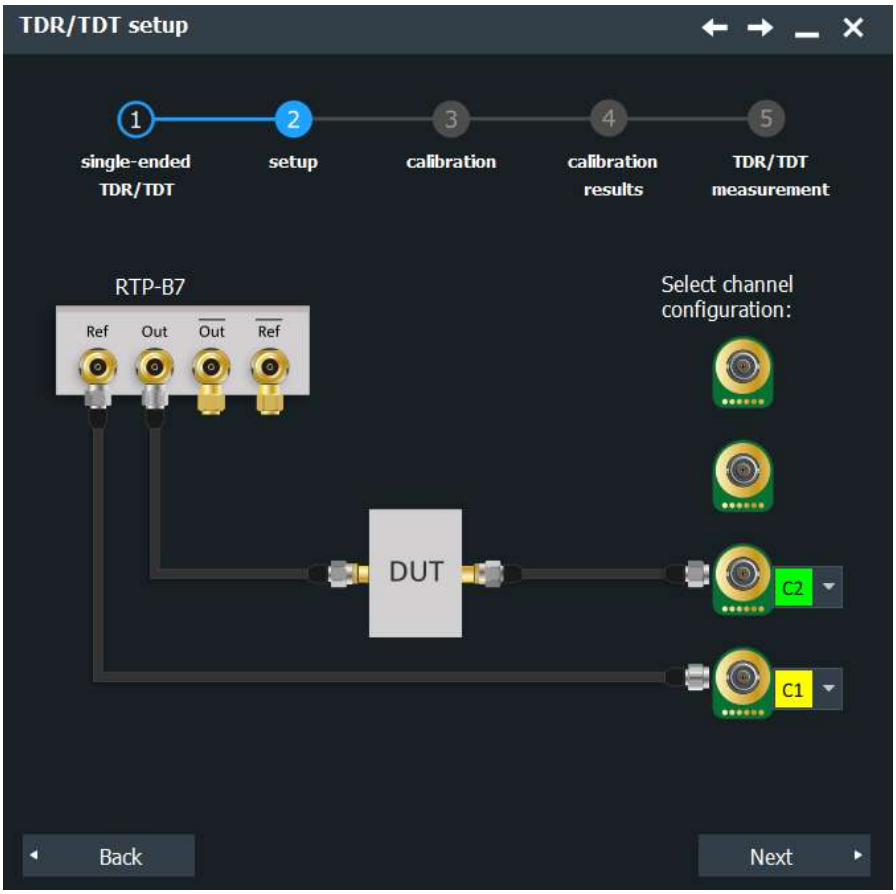


Figure 17-2: Channel setup for single-ended TDR/TDT

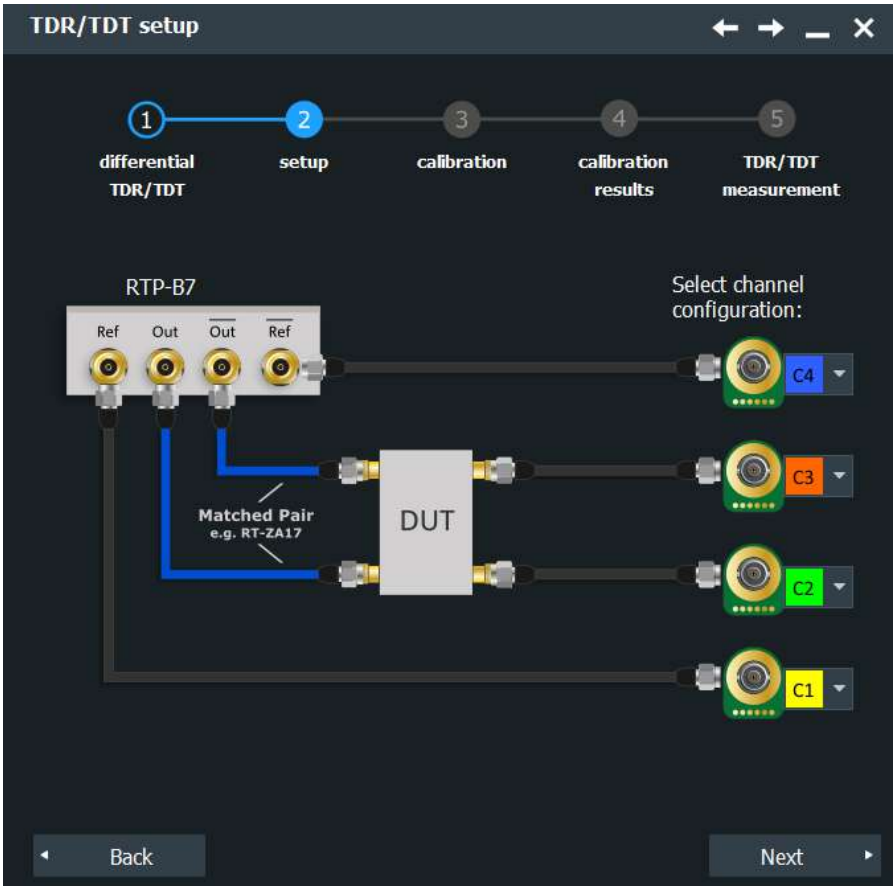


Figure 17-3: Channel setup for differential TDR/TDT

Channel
Select the input channels that are connected to the "Ref" connector and the "Out" connector of the pulse source.

For differential measurements, connect also $\overline{\text{Out}}$ and $\overline{\text{Ref}}$.

Note: The position of the DUT is shown for information only. Do not connect the DUT.

Remote command:
`TDRT:PULSe:OUT` on page 2675
`TDRT:PULSe:REFerence` on page 2676
`TDRT:PULSe:INVout` on page 2676
`TDRT:PULSe:INVReference` on page 2676

17.2.3.3 Calibration

Access: [Apps]> "Analysis" > "TDR / TDT" > "Calibrate setup" > "Next"

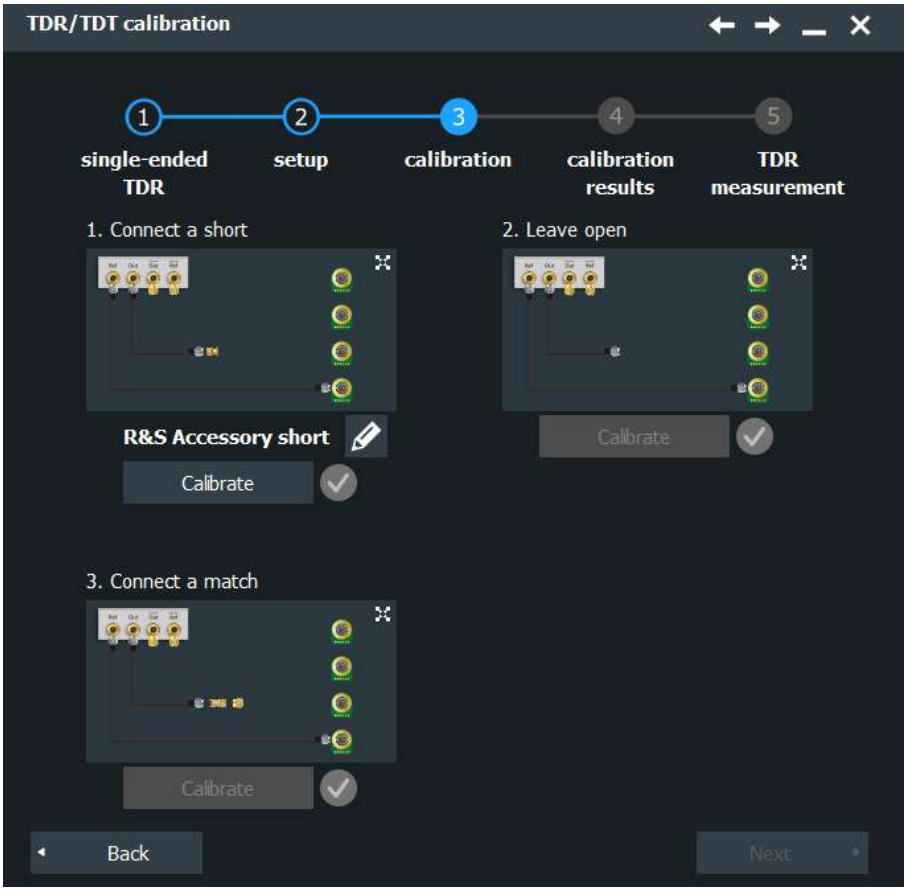


Figure 17-4: Calibration of single-ended TDR/TDT

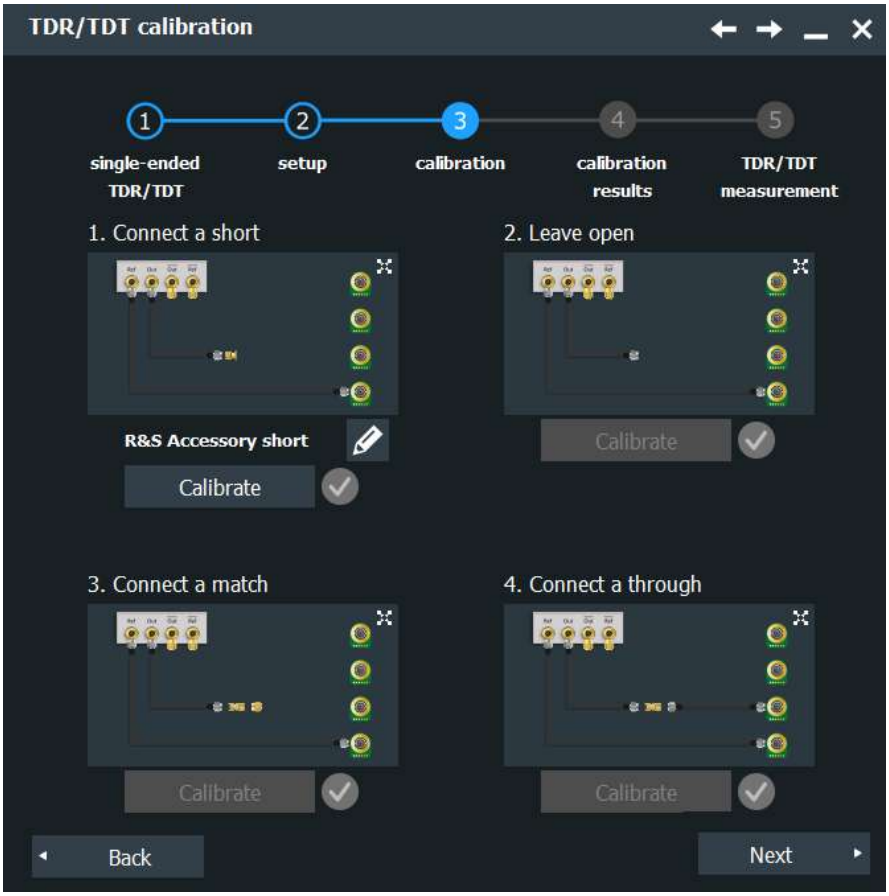


Figure 17-5: Calibration of differential TDR/TDT

The used short type is shown in the wizard. To change the short, tap the "Edit" icon.

Short type
Selects whether the short is the Rohde & Schwarz short that is delivered with the pulse source R&S RTP-B7, or another one.


If you do not use the Rohde & Schwarz short, enter the "Electrical short length" of the used short.

Remote command:
`TDRT:SLENgth` on page 2676

Calibrate
Starts the calibration of the current calibration step (short, open, match through).

17.2.4 Calibration results

Access: [Apps]> "Analysis" > "TDR / TDT" > "Calibrate setup" > "Next"

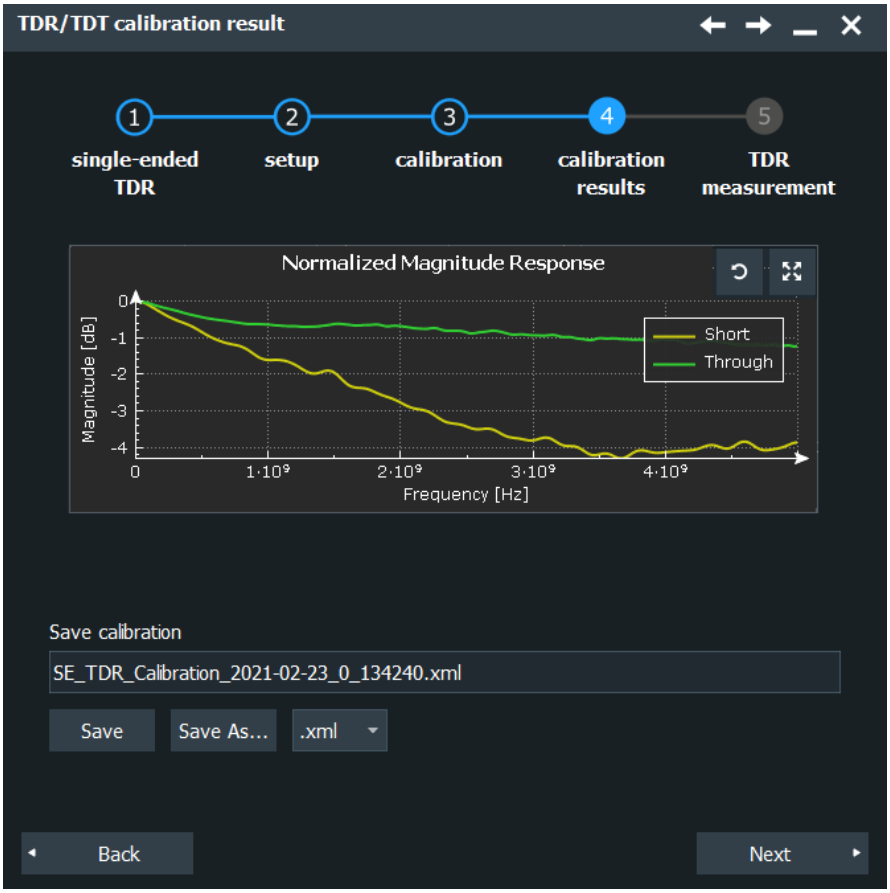

Magnitude response plot
Shows the graph of magnitude over frequency for the short calibration (TDR) and through calibration (TDT).

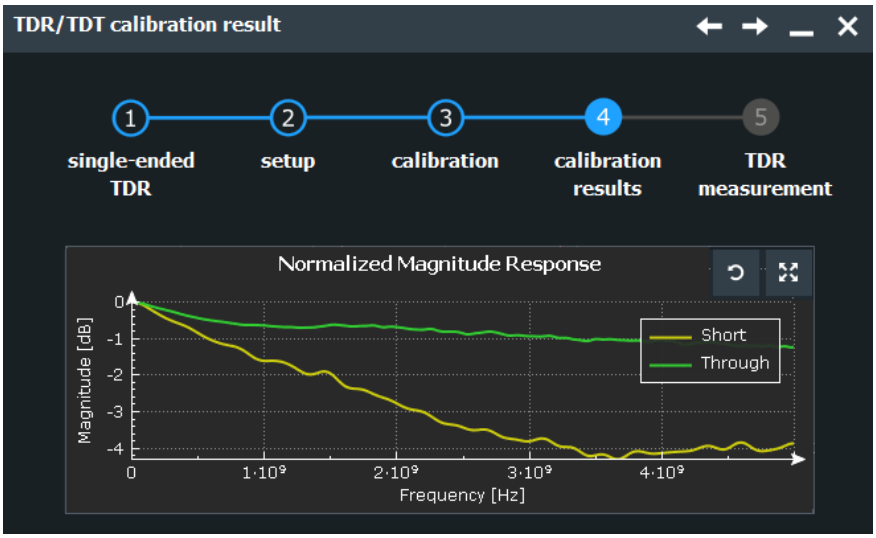


Figure 17-6: Result of TDR and TDT calibration: smooth graph with moderate attenuation

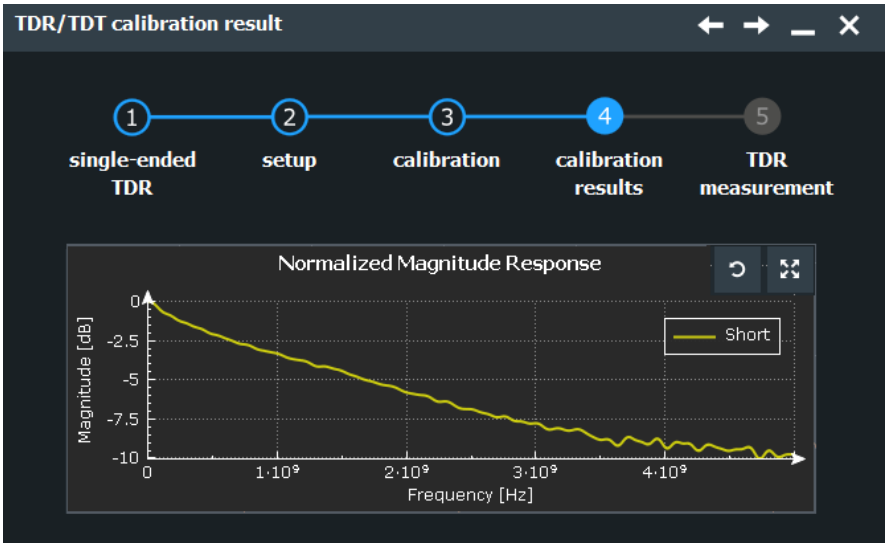



Figure 17-7: Result of TDR calibration: high attenuation and noisy graph at higher frequencies

Save calibration
Saves the current correction values to a file. Using the saved file, you can repeat the measurements at any time.

Remote command:
`TDRT:CALibration:SAVE:NAME` on page 2677
`TDRT:CALibration:SAVE[:EXECute]` on page 2677

17.2.5 Measurement settings

Access: [Apps]> "Analysis" > "TDR / TDT" > "Calibrate setup" > "Next"> "Next" > "Next"

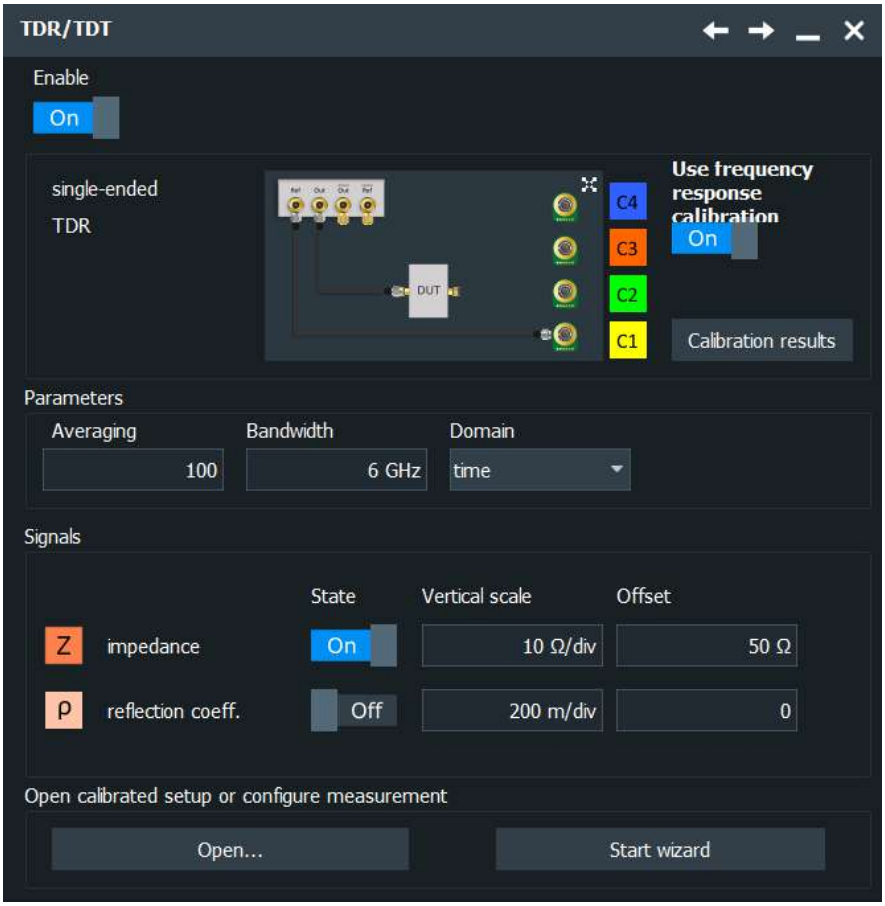

Enable
Activates the TDR/TDT measurements.

Remote command:
`TDRT:STATe` on page 2677

Use frequency response calibration
Disables the frequency response calibration. Without calibration, the measured signals are only rescaled, and you can see the impact of the frequency response calibration on the time domain waveform.

The setting is not available when measuring with default values.

Remote command:
`TDRT:CALibration:USECaldata` on page 2678

Averaging
The "Averaging" value is the "Average count (N-single count)", which you can also set in the acquisition and trigger settings. See "Average count (N-single count)" on page 130.

Increase the value to reduce noise.

Bandwidth
Sets the bandwidth of the DUT.

Remote command:
TDRT:BW on page 2678

Domain, ε_r
Sets the domain of the x-axis: time or distance (in m or inch). If you select distance, enter also the permittivity "ε_r" of the used DUT.

Remote command:
TDRT:DOMain on page 2678
TDRT:PERMittivity on page 2679

State
Select the TDR/TDT signals to be displayed and analyzed.

TDR delivers the impedance Z and the reflection coefficient ρ.

TDT delivers the normalized and corrected step response.

Remote command:
TDRT:SIGNal<m>:STATe on page 2679

Vertical scale
Set the vertical scale of the TDR/TDT signals.

Remote command:
TDRT:SIGNal<m>:SCALe on page 2679

Offset
Set the offset of the TDR/TDT signals.

To set the position, assign position to the vertical Position knob ("File" menu > "Front-panel Setup" > "Knobs"). Turn the vertical Position knob to change the position.

Remote command:
TDRT:SIGNal<m>:OFFSet on page 2679
TDRT:SIGNal<m>:POSition on page 2680

17.2.6 Measurement results

To get exact measurement results, set the horizontal time scale so that the complete DUT is captured and visible on the screen. Thus, interference between the reflected signals from the DUT is avoided. Interference can occur because the repetition rate of the pulse source is linked to the horizontal scale to maximize measurement speed.

The results of the TDR measurements are the impedance waveform Z and the waveform of the reflection coefficient ρ.

To investigate details of the waveforms, use the zoom function. For further analysis, you can use automatic and cursor measurements, histogram, mathematics and reference waveforms.

Data export

In the same way as channel waveforms, you can export the data of Z, ρ and H waveforms to file (one waveform per file). Raw data is not available.

See also: Section 12.3, "Save and recall waveform data and results", on page 497.

Remote commands:

- `EXPort:WAVeform:SOURce` on page 1783
- `TDRT:SIGNal<m>:DATA:HEADer?` on page 2680
- `TDRT:SIGNal<m>:DATA:VALues?` on page 2681

17.2.7 Troubleshooting

If the calibration or measurement does not show meaningful results, the following table helps you to find the cause.

	Issue	Checks
Calibration	No waveform is visible.	Check the cabling. Check the pulse source.
Calibration	Calibration with short failed	Check the cable length: 0.5 m < length < 3 m Use cables with low loss. Use a short that has a low impedance for high frequencies. For differential TDR, use a matched pair cable, e.g. R&S RT-ZA17.
Calibration	Calibration with open failed	Use cables with low loss.
Calibration	Calibration with match failed	Use cables with low loss. Use match with 50 Ω±10% for single-ended measurements. Use 100 Ω±10% for differential measurements.
Calibration	Calibration with through failed	Use cables with low loss. Check the cable length: 0.5 m < length < 3 m
Calibration	Failure after completion of all calibration steps	Use cables with low loss. Check the pulse source.
Measurement	Waveform is noisy or unstable	Evaluate the calibration results for any resonances or high attenuation in frequency response. Increase averaging. Reduce bandwidth. Disable calibration. If noise disappears, reduce attenuation or remove resonances from your setup and recalibrate.

18 I/Q software interface (option R&S RTP-K11)

The option R&S RTP-K11 "I/Q software interface" acquires modulated signals and outputs I/Q data for further analysis using other software, for example, MATLAB. Rohde & Schwarz provides the R&S®VSE vector signal explorer for analysis of I/Q data on an external computer.

In I/Q mode, the input signal is captured with a sample rate of 20 Gsample/s. On R&S RTP134B and R&S RTP164B instruments with more than 8 GHz bandwidth, a sample rate of 40 Gsample/s is supported.

For specifications, see the R&S RTP specifications document.

- I/Q mode 1089
- I/Q sampling setup 1089
- I/Q data output 1096
- Deembedding in I/Q mode 1097

18.1 I/Q mode

The I/Q mode is a special operating mode of R&S RTP. In this mode, the usual analyzing tools (cursor, zoom, measurements, FFT and so on) of the oscilloscope are deactivated. The instrument displays the magnitude of the I/Q vector to get an impression of the data before it is exported.

Triggering is performed on the input data before conversion to I/Q data, using the usual R&S RTP trigger functionality. In case of complex input signals, the instrument triggers on one component of the complex signal (I or Q) depending on the selected trigger source.

To activate the IQ mode

1. Press the [Apps] key on the front panel.
2. In the "RF" tab, select "IQ".
3. In the "IQ Sampling" dialog, tap "Enable".

   The instrument switches to I/Q mode, and the setup dialog for I/Q data recording is shown.

18.2 I/Q sampling setup

Access: [Apps] menu > "RF" tab > "IQ" > "IQ Sampling Setup"

In the "IQ Sampling" dialog box, you configure the complete I/Q sampling for real and complex input signals.

If the values in the dialog box result in an unfavorable combination, a note is shown. The note indicates:

- "Undersampling" if the carrier frequency is too fast.
- "CF + BW/2 > DevBW", where CF is the carrier frequency, BW is the filter bandwidth, and DevBW is the maximum instrument bandwidth.

The channel settings, inn particular the selected termination (50 Ω or 1 MΩ), and the maximum bandwidth of the instrument can affect the functionality of the I/Q application.

- Remote commands:
  `CHANnel<ch>:IQ:WARNing[:STATe]?` on page 2687
  `CHANnel<ch>:IQ:WARNing:MESSage?` on page 2687

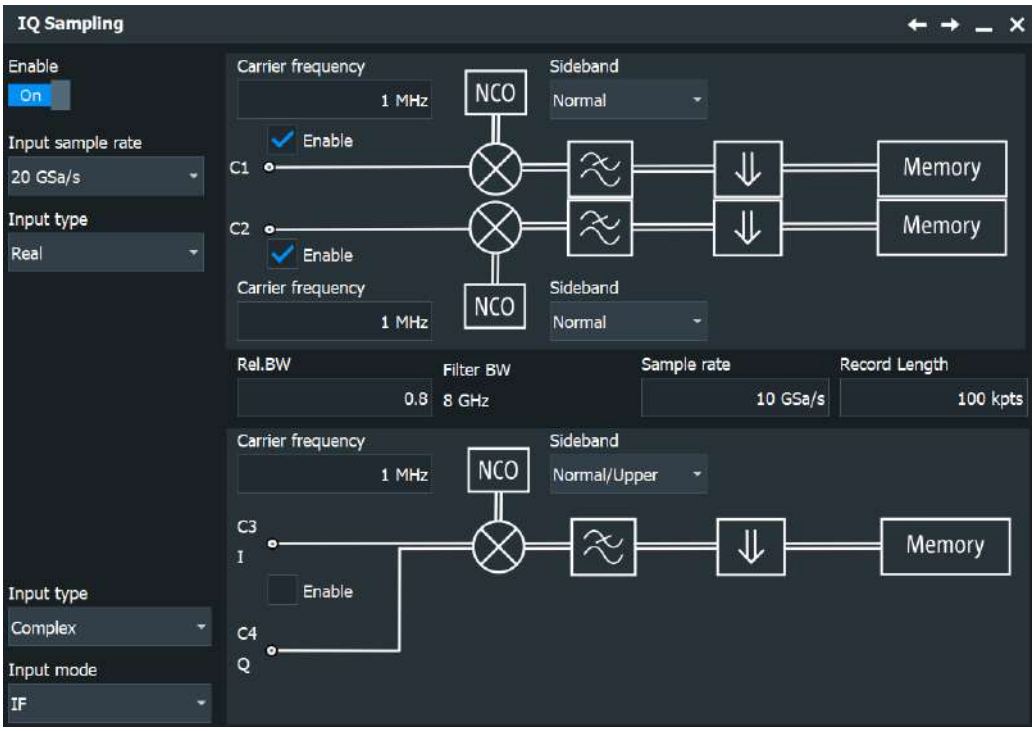


Figure 18-1: I/Q sampling settings at an input sample rate of 20 GHz

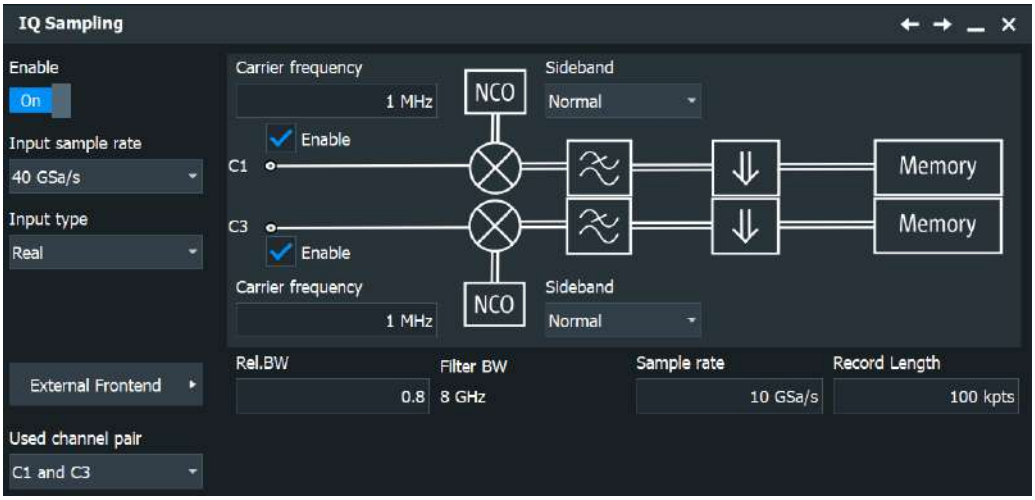


Figure 18-2: I/Q sampling settings at an input sample rate of 40 GHz, available on R&S RTP134B and R&S RTP164B

As usual, the signal icons of the enabled channels show the current settings. In I/Q mode, the I/Q settings are shown, see Figure 18-3. The left signal icon shows a complex input signal in IF range with carrier frequency 1 MHz and normal/upper sideband. C1 is the in-phase component, C2 the quadrature component. The right signal icon shows a real input signal with carrier frequency 1 MHz. C1 has an inverse sideband, C2 has a normal sideband.

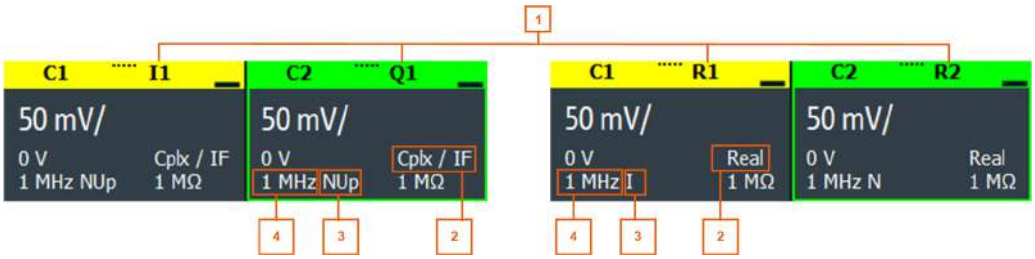


Figure 18-3: Signal icons in I/Q mode

1 = Signal component
2 = Input type/Input mode
3 = Sideband
4 = Carrier frequency

Enable
Enables the I/Q mode to record I/Q data.

The analyzing tools on the toolbar are deactivated, and the magnitude of the I/Q vector is displayed.

Remote command:
`IQ:STATe` on page 2685

Input sample rate
Shows the sample rate of capturing the input data in I/Q mode: 20 Gsample/s.

If you use R&S RTP134B or R&S RTP164B instruments, you can change the sample rate to 40 Gsample/s. In this case, you can select the channel pair to be used, see "Used channel pair" on page 1092. The higher sample rate also reduces the acquisition range.

Remote command:
IQ:INSRate on page 2683


Used channel pair
At sample rate 40 Gsample/s on R&S RTP134B or R&S RTP164B instruments, you can select the channel combination for I/Q analysis. You can couple one of the channels C1 or C2 with one of the channels C4 or C4.

Remote command:
IQ:PAIR on page 2684


Input type, Input mode
"Input type" sets the format of the input signal. "Input mode" selects the frequency band of a complex input signal.

The R&S RTP I/Q software interface supports three formats of input signals.


- Real RF signals

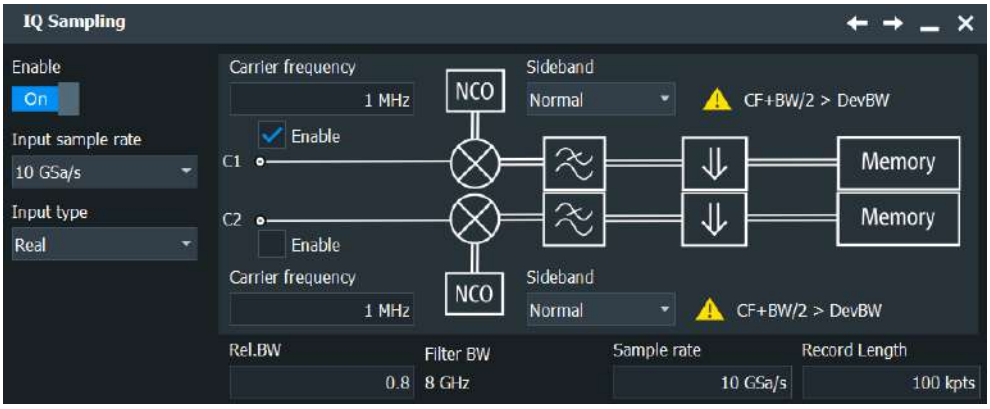

  - The input signal is down-converted, filtered and resampled to the sample rate of the output I/Q signal.
  - One channel is required for each input signal. Thus up to four real signals can be recorded in parallel.
  - Sideband settings: see "Sideband (real input)" on page 1094.
- Complex I/Q baseband signals

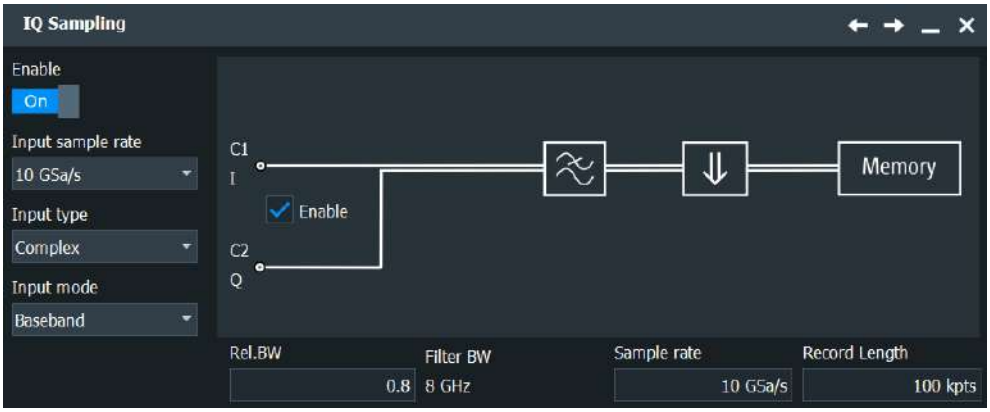

  - The input signal is filtered and resampled to the sample rate of the output I/Q signal.
  - Two input channels are required for each input signal, one for the in-phase component, and one for the quadrature component. Thus up to two complex input signals can be recorded in parallel.
- Complex I/Q signals in the low IF range

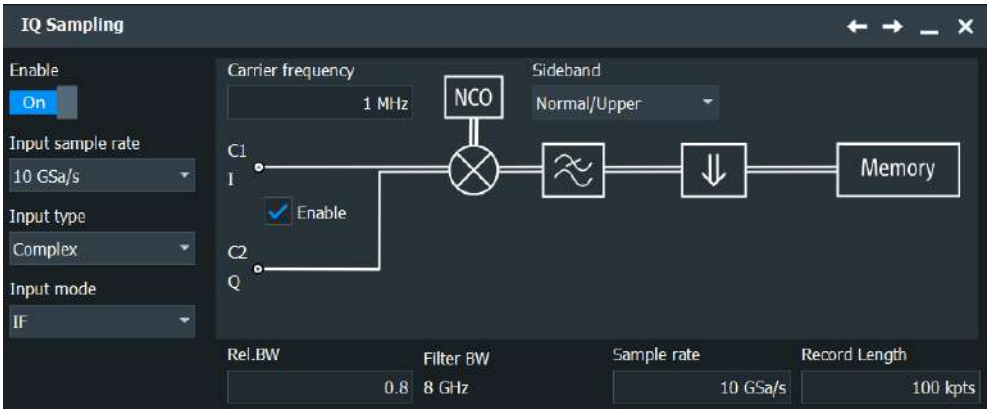

  - The complex IF format requires an output sample rate of >250 Msample/s if input sample rate is 20 Gsample/s.
  - The input signal is down-converted, filtered and resampled to the sample rate of the output I/Q signal.
  - Two input channels are required for each input signal, one for the in-phase component, and one for the quadrature component. Thus up to two complex input signals can be recorded in parallel.
  - Sideband settings: see "Sideband (complex IF input)" on page 1095.

Remote command:
`CHANnel<ch>:IQ:INPType` on page 2683
`CHANnel<ch>:IQ:INPMode` on page 2683

Rel. BW, Filter BW
"Rel. BW" sets the bandwidth factor to define the filter bandwidth:

*Filter BW = Relative BW * Sample rate*

Remote command:
IQ:RBWidth on page 2684
IQ:BWIDth? on page 2682

Sample rate
Sets the required sample rate of the output I/Q data.

The range depends on the input sample rate. For an input sample rate of 20 Gsample/s, the range of the output sample rate is 1 ksample/s to 20 Gsample/s. For an input sample rate of 40 Gsample/s, the range of the output sample rate is 400 Msample/s to 40 Gsample/s. See also: "Input sample rate" on page 1091.

Remote command:
IQ:SRATe on page 2685

Record length
Sets the required record length of the output I/Q data. The resulting acquisition time of the I/Q data is:

Acquisition time = Record length / Sample rate

R&S RTP044B, R&S RTP064B, R&S RTP084B:

The maximum record length of 40 Mpoint is available if the output sample rate is ≤250 Msample/s or >400 Msample/s. In the range between these values, the record length depends on the sample rate and increases linearly from 25 Mpoint to 40 Mpoint.

R&S RTP134B, R&S RTP164B:

The maximum record length of 80 Mpoint is available if the output sample rate is >800 Msample/s. At the minimum output sample rate of 400 Msample/s, the maximum record length is 40 MSa. In the range between 400 Msample/s and 800 Msample/s, the maximum record length is *Max record length = Sample rate / 10*.

Remote command:
IQ:RLENgth on page 2684

Channel On/Off
Switches the channel signal on or off. The signal icon appears on the signal bar. The waveform of the last acquisition is displayed in the diagram.


Remote command:
CHANnel<ch>:STATe on page 1412

Carrier frequency
Sets the carrier frequency of the modulated RF signal or of the complex signal in the IF range. The minimum carrier frequency is 10 mHz, the maximum frequency is usually 1/2 of the input sample rate.


Remote command:
CHANnel<ch>:IQ:CFRequency on page 2685

Sideband (real input)
Defines the frequency position of the RF spectrum in the input signal: normal or inverse. The position is important for correct downconversion and filtering.

- "Normal" position of the RF spectrum

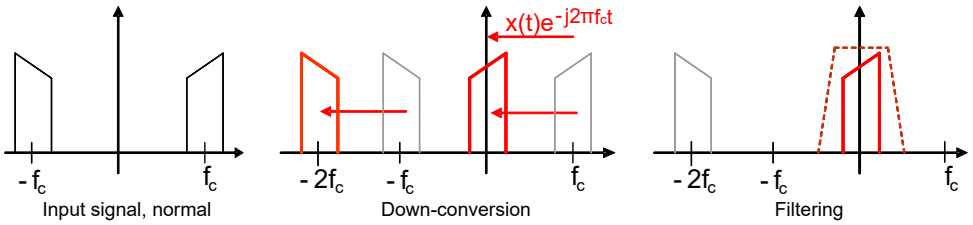


- "Inverse" position of the RF spectrum

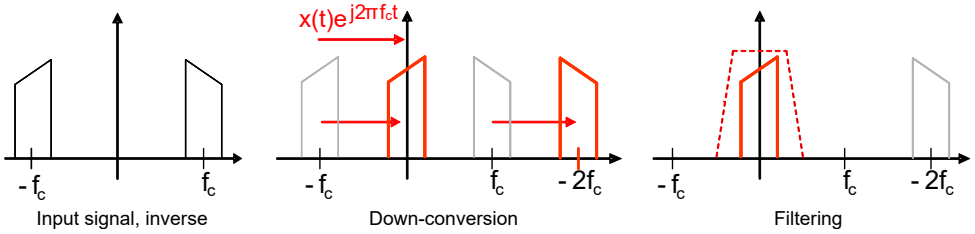


Remote command:
`CHANnel<ch>:IQ:SBRF` on page 2686

Sideband (complex IF input)
Defines the sideband and the frequency position of a complex modulated input signal in the IF range.


- "Normal/Upper": Upper sideband in normal position

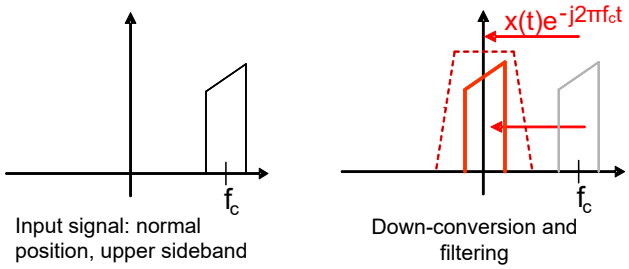


- "Normal/Lower": Lower sideband in normal position

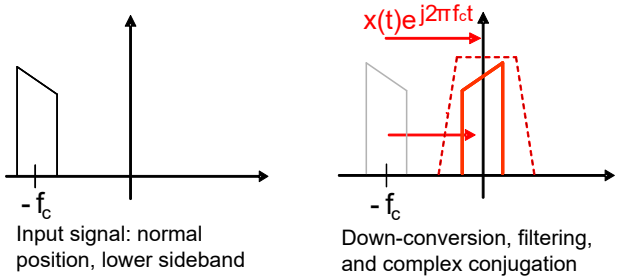

- "Inverse/Upper": Upper sideband in inverse position

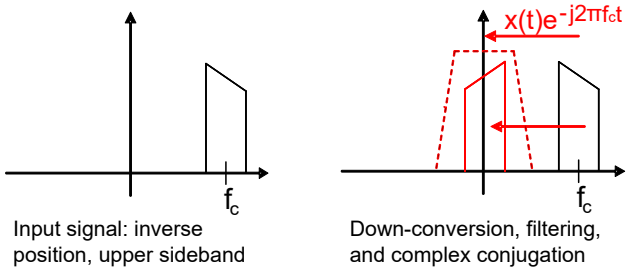

- "Inverse/Lower": Lower sideband in inverse position

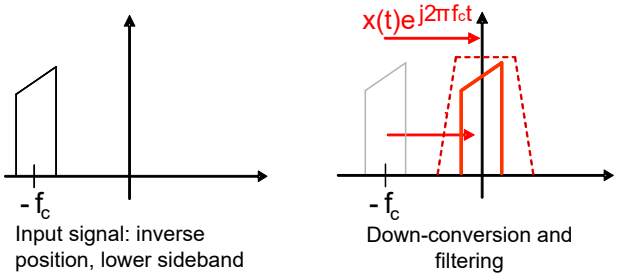

Input signal: inverse position, lower sideband


Down-conversion and filtering

Remote command:
`CHANnel<ch>:IQ:SBIF` on page 2686

18.3 I/Q data output

The recorded I/Q data can be saved manually on hard disc or USB flash device for further analysis, or extracted using remote control from an external computer. If supported by the Rohde & Schwarz analysis software, a direct connection and data usage via LAN is also possible.

Access: "Menu" > "Save/Recall" > "Save" tab > "Waveform"

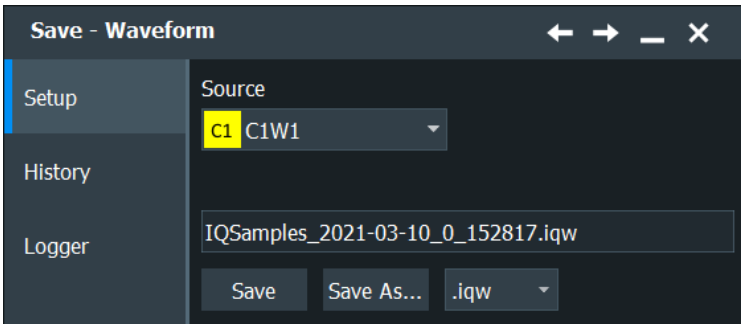

In I/Q mode, the "Save Waveform" dialog provides all functions to save the recorded I/Q data.

Source
Selects the channel for which the I/Q data is saved. For each input channel, a separate output file is written.

In case of a complex input signal that requires two input channels, the results of sources C1W1 and C2W1 are identical, as well as the results of C3W1 and C4W1.

At 40 Gsample/s input sample rate, Ch1Wfm1 and Ch3Wfm1 are identical, the other channels are not available.

Save IQ data to file
Enter the file name to save the I/Q data to. Double-tap the file name to open the file selection dialog box.

By default, the file name has the prefix "IQSamples_".

You can define a pattern for automatic naming in the "Autonaming" dialog, see Section 4.8.1, "Autonaming", on page 108.

"Save" Saves the I/Q data in the selected file.

"Save As..." Opens the file selection dialog box and saves the I/Q data to the selected file. See also Section 12.6, "File selection dialog", on page 529.

".iqw/.iq.tar/.bin /.xml/.csv" Selects the file format.
IQW: specific format for analysis with R&S I/Q data analysis software. It contains the I and Q values in interleaved order.
IQ.TAR: iq-tar file format, packed format containing several files: an I/Q parameter XML file, an I/Q data binary file, and an optional I/Q preview XSLT file (style sheet).
A detailed specification of the iq-tar file format is given in http://www.rohde-schwarz.com/en/manual/manual-r-s-iq-tar-file-format-specification-manuals-gb1_78701-37313.html.
CSV, XML, and BIN: usual formats, which are also used for common waveform export, see Section 12.3.1, "Waveform export files", on page 498.

Remote command:
`CHANnel<ch>:IQ:DATA[:VALues]?` on page 2687
`CHANnel<ch>:IQ:DATA:HEADer?` on page 2688

18.4 Deembedding in I/Q mode

If realtime deembedding option R&S RTP-K122 is installed, you can use deembedding in I/Q mode. Deembedding can be enabled and configured for each channel separately, because the connection to the DUT can be different for each channel.

To use deembedding:

1. Open the deembedding setup: [Apps] > "Analysis" > "Deembedding".
2. For each channel that needs deembedding:
   a) Enable "Real-time deembedding".
   b) Enable deembedding ("Enable" button).

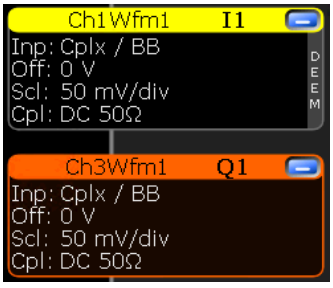


Figure 18-4: Channel icon indicates deembedding. Here, Ch1 is deembedded.

19 Jitter analysis and clock data recovery

Jitter describes the timing errors in a system. It is a significant and undesired factor in high-speed serial communication designs because it causes transmission errors.

R&S RTP provides different options for analyzing jitter:

General jitter analysis (R&S RTP-K12)

The jitter analysis option R&S RTP-K12 provides common analysis and visualization tools for signal integrity analysis and jitter characterization:

- Automated jitter measurements in time domain like period, frequency, cycle-to-cycle jitter and skew
- Track graph of jitter measurement results
- Jitter spectrum
- Eye mask definition and analysis
- Software-based clock data recovery

See: Section 19.1, "Jitter measurements (option R&S RTP-K12)", on page 1099.

Advanced jitter analysis (R&S RTP-K133)

The advanced jitter analysis option provides tools for detailed analysis including:

- All functionalities provided with option R&S RTP-K12
- All data for total jitter, random jitter, periodic jitter, data-dependant jitter and deterministic jitter.
- Allows separation into horizontal and vertical components.
- Provides options for extensive result presentation, like histogram, spectrum, track, jitter bathtub graphics and synthetic eye diagram.

See: Section 19.2, "Advanced jitter and noise (option R&S RTP-K133/K134)", on page 1110

Advanced jitter and noise analysis (R&S RTP-K134)

The advanced noise analysis provides tools for detailed jitter and noise analysis including:

- All functionalities provided with option R&S RTP-K133
- All data for total noise, random noise, periodic noise, data-dependant noise and deterministic noise.
- Allows separation into horizontal and vertical components.
- Provides options for extensive result presentation, like histogram, spectrum, track, noise bathtub graphics and synthetic eye diagram.

The different ways for analyzing jitter and noise are described in the following chapters.

In addition, option R&S RTP-K140/K141 provides hardware-based clock data recovery. The resulting clock edge stream can be used as trigger source for the high-speed serial pattern trigger.

See: Section 19.2, "Advanced jitter and noise (option R&S RTP-K133/K134)", on page 1110.

- Jitter measurements (option R&S RTP-K12)..... 1099
- Advanced jitter and noise (option R&S RTP-K133/K134)..... 1110
- Clock data recovery.....1150

19.1 Jitter measurements (option R&S RTP-K12)

This section describes the measurement setup in the "Jitter" category.

- Jitter measurements.....1099
- Jitter measurement settings..... 1101
- Jitter statistics and histogram..... 1108
- Track of jitter measurement results..... 1109
- Jitter spectrum.....1109

19.1.1 Jitter measurements




The measurement category "Jitter" gathers all measurements that are useful for jitter analysis. The category contains jitter-specific measurements. In addition, the following amplitude/time measurements are added to the jitter category, because they are useful for jitter analysis:


- Period
- Frequency
- Setup time
- Hold time
- Setup/Hold ratio

The amplitude/time measurements are described in "Time measurements" on page 342.

The specific jitter measurements are described in Table 19-1. For jitter measurements on PAM-N signals with PAM order > 2, not all measurements are available. Supported measuremnts are indicated in the table.

Table 19-1: Jitter measurements

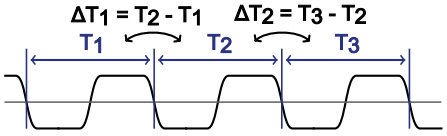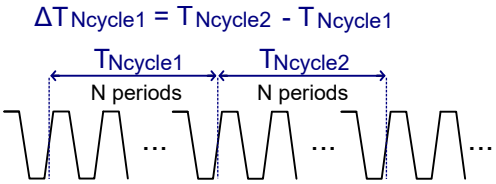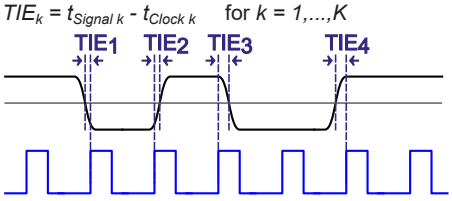	Measurement	Description/Result
	Cycle-cycle jitter	Difference between the periods of two adjacent cycles. The measurement is based on the period measurement. You can select the slope and the reference level on which the period is measured. $\Delta T_{Period\ k} = T_{Period\ k+1} - T_{Period\ k}$ for $k = 1,...,K-1$  See also: Section 19.1.2.2, "Settings for clock measurements", on page 1102
	N-cycle jitter	Difference between the time of two adjacent groups of N cycles (periods) each. You can select the slope and the reference level on which the time is measured, and the number of periods in the groups. $\Delta T_{Ncycle\ k} = T_{Ncycle\ k+1} - T_{Ncycle\ k}$ for k = *cycle group index* 
	Cycle-cycle width	Difference between the pulse width of two adjacent cycles. The measurement is based on the pulse width measurement. You can select the pulse polarity to be measured. $\Delta T_{Pulse\ k} = T_{Pulse\ k+1} - T_{Pulse\ k}$ for $k = 1,...,K-1$
	Cycle-cycle duty cycle	Difference between the duty cycle of two adjacent cycles. The measurement is based on the duty cycle measurement. You can select the pulse polarity for the duty cycle measurement. $\Delta R_{Cyc\ k} = R_{Cyc\ k+1} - R_{Cyc\ k}$ for $k = 1,...,K-1$
	Time interval error	Time difference between the slope of the input signal and the slope of a reference signal. The reference signal can be a captured clock waveform, or a clock generated by clock data recovery (CDR, software algorithm or hardware generation). You can select the slope and the reference level on which the TIE is measured. $TIE_k = t_{Signal\ k} - t_{Clock\ k}$ for $k = 1,...,K$  Also available for PAM-N signals with PAM order > 2. See also: Section 19.1.2.3, "Data measurement settings", on page 1104
	Unit interval	Period of the clock signal. If no clock signal is available, it is recovered by CDR. The period is calculated as the time difference between two consecutive clock edges of the same polarity. $UI_k = t_{Clock\ k+1} - t_{Clock\ k}$ for $k = 1,...,K-1$ Also available for PAM-N signals with PAM order > 2.

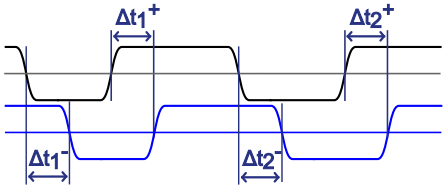	Measurement	Description/Result
	Data rate	Frequency of the clock signal. If no clock signal is available, it is recovered by CDR. The measurement is based on the unit interval measurement. $R_{Clock\ k} = 1 / UI_k$ for $k = 1,...,K-1$ Also available for PAM-N signals with PAM order > 2.
	Skew delay	Delay between the edges of two interdependent waveforms. The measurement is a simplified variant of the "Delay" measurement assuming that both sources are similar except for the delay. *Skew delay* = $\Delta t_k = t_{Source2} - t_{Source1}$ for $k = 1,...,K$  See also: Section 19.1.2.4, "Delay measurement settings", on page 1107
	Skew phase	Phase difference between the edges of two waveforms. *Skew phase = Skew delay / Period * 360° =* $\Delta t_k / \Delta T_{Period\ k}$ ** 360°*


Limit and margin checks are also available for jitter measurements, see Section 8.2.13, "Limit and margin checks: Advanced tab", on page 404. If the measurement supports PAM-N signals with PAM order > 2, limit and margin checks are also available for these measurements.

19.1.2 Jitter measurement settings

19.1.2.1 Measurement selection

Access: [Measure] > "Setup" tab > "Jitter" category

Jitter measurements are only available for sources in the time domain.

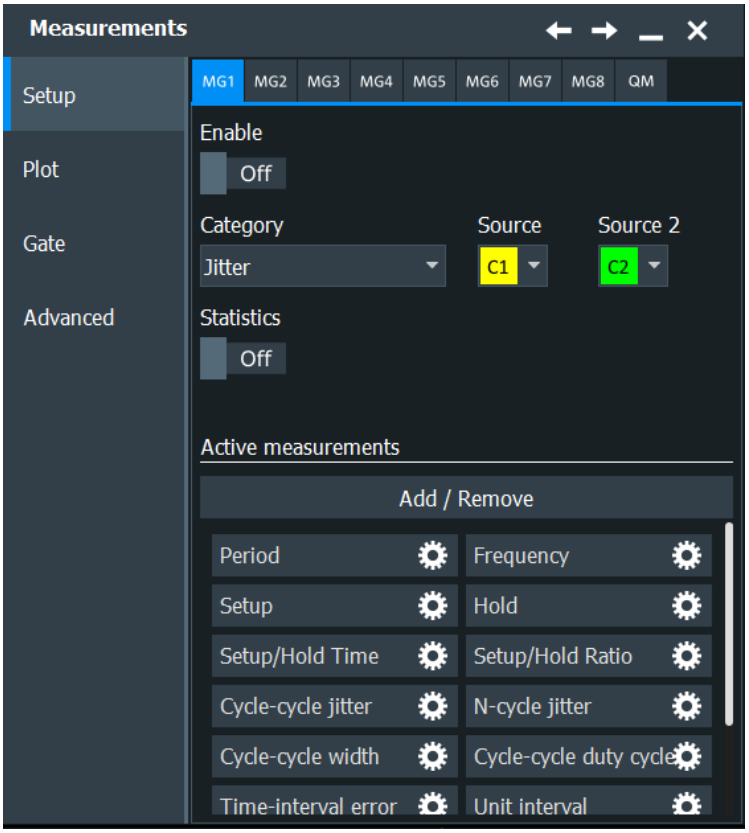

Active Measurements
The "Active Measurements" list shows the measurements that are selected in the selected category. At least, one measurement must be selected. If further settings are available for a measurement, a settings icon is shown beside the measurement's name.

To change the selection, tap "Add / Remove".

For details on the available measurements, see Section 19.1.1, "Jitter measurements", on page 1099.


If option R&S RTP-K135 you can define signals with higher "PAM order". For signals with a "PAM order" > 2, only the following jitter measurements are available: "Time interval error", "Data rate", "Unit interval".

Remote command:
`MEASurement<mg>:MAIN` on page 1600
`MEASurement<mg>:ADDitional` on page 1602

19.1.2.2 Settings for clock measurements

The cycle-cycle measurements are intended to analyze the quality of clock signals. They require a few additional settings for period and pulse width measurement. See also: Table 19-1

► To configure a measurement, tap it in the "Active Measurements" list.

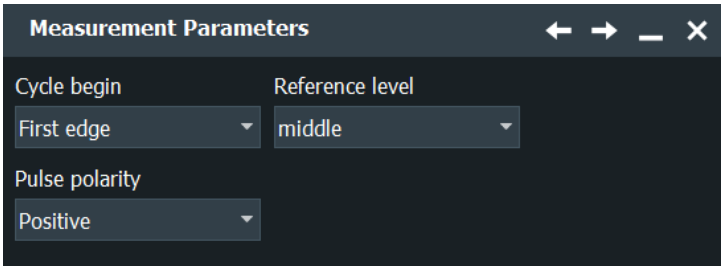

Cycle begin
Selects the slope at which the periods and thus the jitter is measured.

The setting is available for the following measurements: cycle-cycle jitter, N-cycle jitter, and cycle-cycle duty cycle.

"First edge" Measures the period from the first edge that is found, no matter of its direction.

"Positive" Measures the period at positive going edges.

"Negative" Measures the period at negative going edges.

"Either" Measures the period at both positive and negative going edges. This option is useful, for example, to check the clock stability of a double data rate clock.

Remote command:
`MEASurement<mg>:JITTer:CCSLope` on page 2690

Data ref level / Ref level
The setting defines the "Data ref level" for setup and hold measurements, and for time-interval error measurements (option R&S RTP-K12). It selects the reference level of the data signal on which the time is measured. The intersection of slope and reference level defines the time point for measurements.

For clock jitter measurements (option R&S RTP-K12), it sets the "Reference level" for the time measurement.

Remote command:
`MEASurement<mg>:AMPTime:DATA<n>:LSELect` on page 1612

Pulse polarity
Sets the polarity of pulses for which the pulse width is measured to obtain the cycle-cycle width and the cycle-cycle duty cycle.


The setting is available for the following measurements: cycle-cycle width and cycle-cycle duty cycle.

"Positive" Pulse width of positive pulses is measured.

"Negative" Pulse width of negative pulses is measured.

Remote command:
`MEASurement<mg>:JITTer:PULSe` on page 2693

Number of cycles
Sets the number of periods (cycles) that are accumulated to measure the N-cycle jitter.

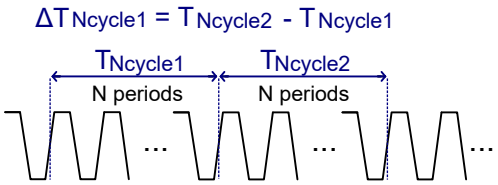

Remote command:
`MEASurement<mg>:JITTer:NCYCles` on page 2693

19.1.2.3 Data measurement settings

The following measurements are intended to analyze serial data. The clock can be a captured clock signal, or it can be recovered from the data signal using one of the clock recovery algorithms:

- Time interval error
- Unit interval
- Data rate

These measurements are also available for PAM-N signals with PAM order > 2.

► To configure a measurement, tap it in the "Active Measurements" list.

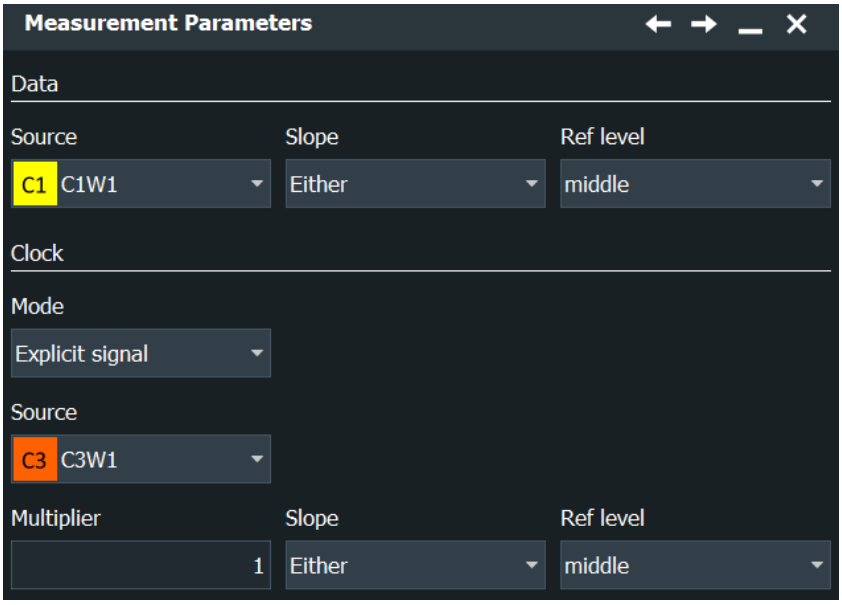


Figure 19-1: Settings for time interval error measurement with real clock signal

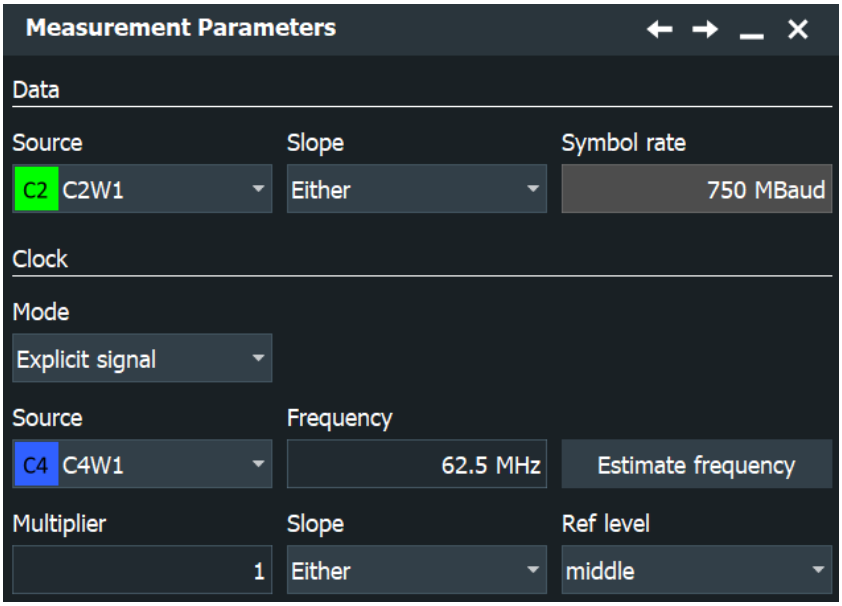


Figure 19-2: Settings for time interval error measurement with real clock signal and data signal with PAM order > 2

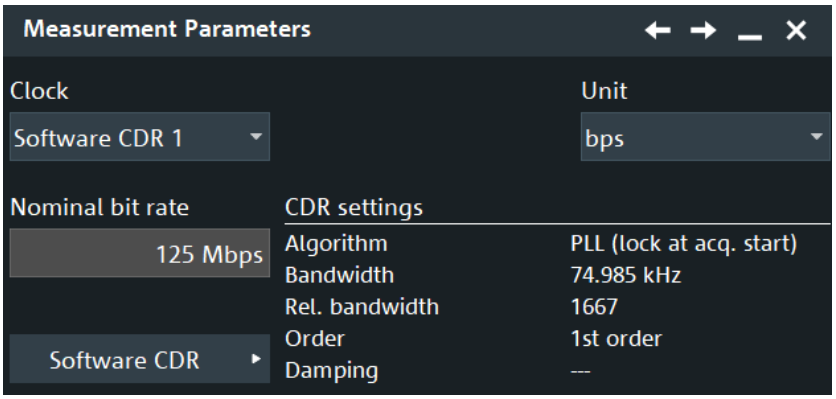


Figure 19-3: Settings for data rate measurement with software clock recovery

Mode (clock)
Defines the origin of the clock signal - either an existing clock signal or waveform, or a clock generated using one of the CDR methods.

The setting is available for the following measurements: time interval error, unit interval and data rate.

"Explicit signal" The clock is an existing clock signal. Select the clock source, clock slope, and the reference level.

"Software CDR 1 / 2 / 3 / 4" The clock is generated by a software algorithm. The R&S RTP provides two setups for software CDR, which can be configured and used independently. To configure the CDR, tap the "Software CDR" button.

Remote command:
`MEASurement<mg>:JITTer:CDRMode` on page 2691

Multiplier
Sets a value for the clock multiplier, which is the ratio of an internal clock rate to the externally supplied clock. It defines the number of samples per clock interval. The setting is relevant if the clock is an explicit clock signal.

Remote command:
`MEASurement<mg>:JITTer:CLOCk:FACTor` on page 2691

Slope
Sets the edges that are used for measurements.

For time interval error measurement, you set the data slope, and the clock slope if the clock is a real signal. For unit interval and data rate measurements, you set only the clock slope if the clock is a real signal.

"Positive" The positive clock slope can be used, for example, for single data rate (SDR) signals with bit start at the positive clock edge.

"Negative" The negative clock slope can be used, for example, for SDR signals with bit start at the negative clock edge.

"Either" For clock edges, this option can be used for double data rate (DDR) signals.
For data edges, it is the most common setting.

Remote command:
`MEASurement<mg>:JITTer:SOURce<n>:TIESlope` on page 2694

Clock ref level, Ref level
Selects the reference level of the clock on which the time is measured. The intersection of slope and reference level defines the time point for measurements.

The setting is used for setup and hold measurements, and for jitter measurements (option R&S RTP-K12).

Remote command:
`MEASurement<mg>:AMPTime:CLCK<n>:LSELect` on page 1612

Data ref level / Ref level
The setting defines the "Data ref level" for setup and hold measurements, and for time-interval error measurements (option R&S RTP-K12). It selects the reference level of the data signal on which the time is measured. The intersection of slope and reference level defines the time point for measurements.

For clock jitter measurements (option R&S RTP-K12), it sets the "Reference level" for the time measurement.

Remote command:
`MEASurement<mg>:AMPTime:DATA<n>:LSELect` on page 1612

Symbol rate
Shows the symbol rate, which is set in the signal configuration of the data signal. The setting is relevant if the clock is an explicit clock signal and the data signal has a PAM order > 2.

Frequency
Sets the frequency of the clock signal. If this value is unknown, you can use "Estimate frequency".

The setting is relevant if the clock is an explicit clock signal and the data signal has a PAM order > 2.

Remote command:
`MEASurement<mg>:JITTer:CLOCk:FREQuency` on page 2692

Estimate frequency
Calculates an estimate value for the clock frequency. The setting is relevant if the clock is an explicit clock signal and the data signal has a PAM order > 2.

Remote command:
`MEASurement<mg>:JITTer:CLOCk:FREStimation` on page 2692

Unit
Sets the unit to bps (bit per second), or to Hz for analysis of radar signals. The setting is available for data rate measurements.


Remote command:
`MEASurement<mg>:JITTer:DRUNit` on page 2692

19.1.2.4 Delay measurement settings

Skew delay and skew phase measurements are intended to measure the time difference between the edges of two waveforms. The measurements are simplified variants of the "Delay" and "Phase" measurements assuming that both sources are similar except for the delay.

See also: Table 19-1

► To configure a measurement, tap it in the "Active Measurements" list.

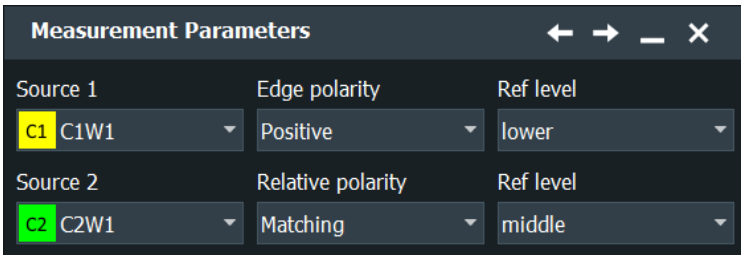

Source 1, Source 2
"Source 1" is the reference signal, and "Source 2" is the signal compared to the reference signal.

Skew delay = $\Delta t_k = t_{Source2} - t_{Source1}$ for $k = 1,...,K$

Edge polarity
Sets the edge of the first waveform from which the skew delay or phase is measured: positive, negative or both.

Remote command:
MEASurement<mg>:JITTer:SKWSlope on page 2693

Relative polarity
Sets the edge of the second waveform relative to the first waveform.

"Matching" Measures from positive to positive edge or from negative to negative edge.

"Inverse" Measures from positive to negative edge or from negative to positive edge.

Remote command:
MEASurement<mg>:JITTer:SKWRelation on page 2694

Data ref level / Clock ref level
See "Data ref level / Ref level" on page 350 and "Clock ref level, Ref level" on page 350.

19.1.3 Jitter statistics and histogram

Since jitter is a random component of all signals, statistical measurement results are required to characterize the jitter.

To get measurements statistics of a jitter measurement

Prerequisite: the jitter measurements are selected and configured, and the measurement group is active.

1. Double tap the "Meas Results" box.

   The "Measurement" toolbar assist opens.



2. In the overlay menu, enable "Statistics state".
3. Tap "Advanced Setup".
4. On the "Measure" > "Advanced" tab, enable "Measure all events in each acquisition".

The histogram plots the density of data. It shows the frequency of occurrence of the measurement values. The maximum count of a measurement value is assigned to the full height of the histogram diagram (= 1000). All other count values are displayed relative to the maximum.

To enable the histogram

1. On the "Plot" tab, enable the "Histogram".
2. If the histogram is not displayed as expected, disable "Continuous auto scale" and adjust the "Meas scale".

19.1.4 Track of jitter measurement results

A track graph displays the results of the first jitter measurement from a single acquisition as a time-correlated waveform. To generate the track graph, multiple measurement points are required. Thus, enabling the track automatically activates "Measure all events in each acqu.".

You can measure amplitude and time on the track waveform: Configure a new measurement group, e.g. "MG2", that uses the track waveform as the measurement source.

You can also zoom into the track waveform, perform cursor measurements on it, and export the track.

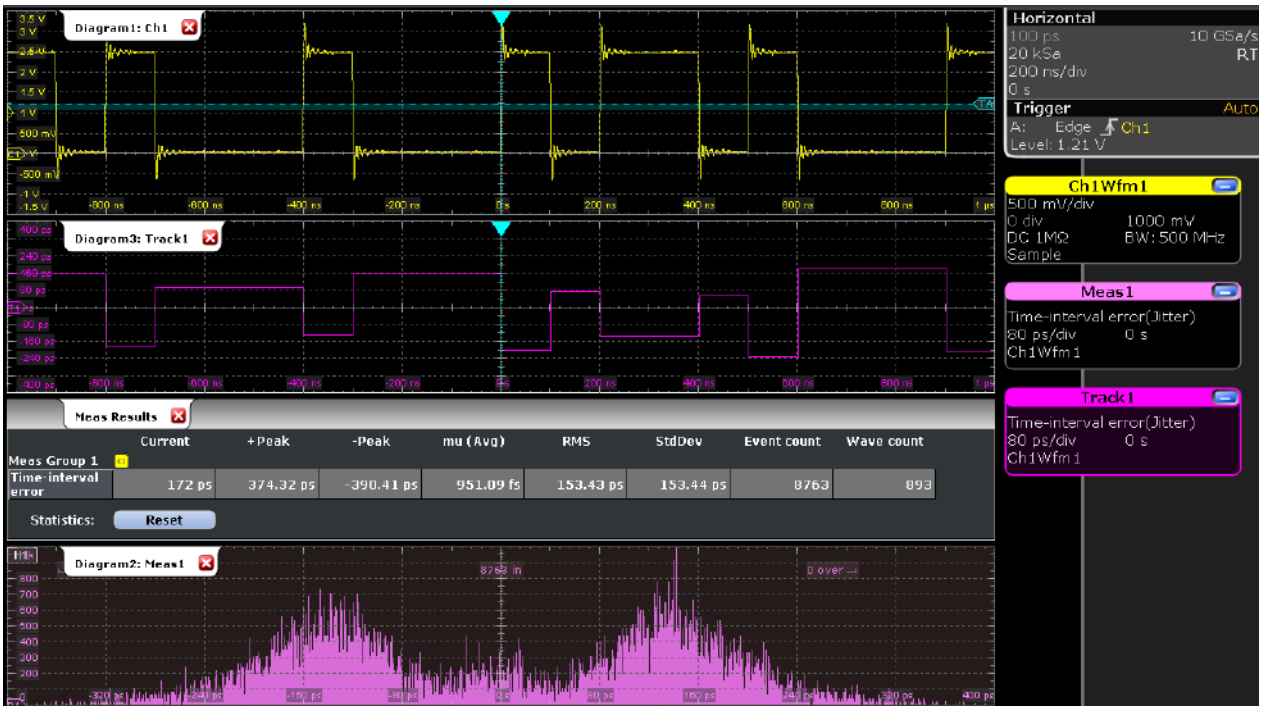


Figure 19-4: TIE measurement with CDR trigger, 10 Mbit/s, with track and histogram

19.1.5 Jitter spectrum

An extension of jitter measurements is the FFT analysis of track waveforms of jitter measurements. The results are displayed in the frequency domain as a jitter spectrum. The modulation frequency is displayed on the horizontal axis, and the amplitude of the modulation on the vertical axis. Using FFT, periodic components can be detected.

19.2 Advanced jitter and noise (option R&S RTP-K133/K134)

This chapter describes the settings of the advanced jitter option R&S RTP-K133 and of the advanced noise option R&S RTP-K134.

19.2.1 About jitter

Jitter typically consists of various jitter components that are caused by different jitter sources, see Figure 19-5.

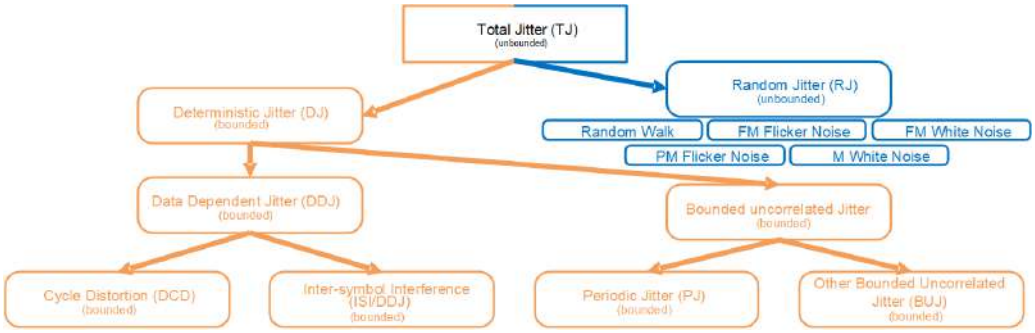


Figure 19-5: Jitter decomposition tree

With the advanced jitter option R&S RTP-K133, you can perform different measurements for calculating and displaying the different jitter components.

For the analysis of jitter, it is important to understand these sources and the contributions to the total jitter (TJ). For an analytical approach, a jitter model is frequently used, which splits jitter into the two major categories of random and deterministic jitter.

The jitter of the different components has different causes. Knowing what jitter component is influencing your system can help you identify what phenomenon causes the jitter.

Deterministic jitter

Deterministic jitter (DJ), also called systematic jitter, is further broken down into periodic jitter (PJ) and data-dependent jitter (DDJ). Deterministic jitter is bounded and specified as peak-to-peak value.

Periodic jitter

Periodic jitter (PJ) is caused by a periodic disturbance. Though this signal is not necessarily sinusoidal, it is frequently also named sinusoidal jitter. The amplitude of the periodic signal bounds the jitter.

A strong local RF oscillator, a switch-mode power supply, undesired crosstalk or an unstable, oscillating PLL cause period jitter due to an unintentional coupling into the signal.

Data-Dependent jitter

Inter-symbol interference (ISI) causes data-dependent jitter (DDJ). When ISI is present, the signal is disturbed with an attenuated, time-shifted copy of itself or spectral parts of itself.

Random jitter

Random jitter is unbounded and commonly specified by the standard deviation σ. Due to its irregular nature, random jitter (RJ) is uncorrelated to any other signal and unpredictable in timing behavior. Contributions to the random jitter are thermal noise, shot noise, 1/f noise and other physical effects.

19.2.2 About noise

Noise describes the amplitude deviation of a data symbol at the sampling time respective to a corresponding reference level. These deviations or level errors (LE) are caused by various sources.

The total noise is split into two main components: random noise (RN) and deterministic noise (DN). DN consists of periodic noise (PN) and non-periodic components.

The advanced noise algorithm enables various selectable result plots of the activated noise components in the results tab.

19.2.3 Configuring the advanced jitter


To perform an advanced jitter analysis:

1. Open the "Analysis" > "Advanced Jitter" menu.
2. In the "Signal" tab, set up the analyzed signal and reference signal.
3. In the "Advanced Settings" tab, configure the "Data dependent" settings.
4. If necessary, enable "Periodic"/"(Other) bounded uncorrelated".
5. In the "Result" tab, enable all general and component-specific results diagrams, that you want to display.
6. In the "Result" tab, "Add/ remove components". A dialog opens, where you can enable all required measurements.
7. Press "Enable" to view all selected measurement results and diagrams.

19.2.4 Signal settings

Access: Apps> "Analysis" > "Advanced Jitter / Noise" > "Signal" tab

In the "Signal" tab, you can set up the signal you want to analyze and define the reference clock signal.

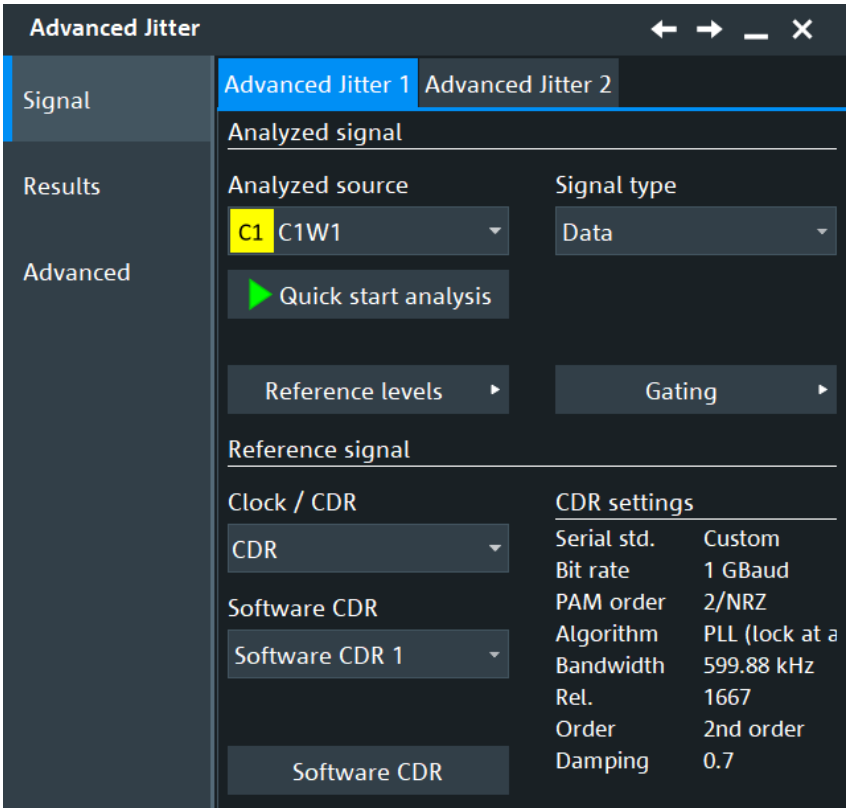

Analyzed source
Selects the source for the advanced jitter analysis.

Remote command:
`ADVJitter<m>:SIGNal:SOURce` on page 2696

Signal Type
Select, if the analyzed signal is a data or clock signal.

Remote command:
`ADVJitter<m>:SIGNal:TYPE` on page 2696

Quick start analysis
Starts a quick advanced jitter analysis.

Before starting the quick start analysis, set the Analyzed source and the Signal Type.


The quick start analysis performs the following:

- A bit rate estimation is performed on the applied signal.
- A software CDR of second order is used as reference signal for the jitter analysis.
- Enables basic measurement "Event Count" and advanced jitter components: TJ@BER, RJ, TJ, DJ and PJ.
- In the "Result" dialog it enables:
  - "Bathtub" for total jitter @ BER (TJ@BER).
  - "Step response" for the analyzed source signal.
  - "Histogram" for RJ, TJ, DJ, DDJ and PJ.
- Enables the advance jitter measurement analysis.

Remote command:
ADVJitter<m>:SIGNal:QUICkmeas on page 2697

Reference Level
Opens a dialog to set the reference levels. For details, see Section 13.3, "Signal and reference levels for NRZ signals", on page 539.

Gating
Opens a dialog to set up the gate of the waveform for the advanced jitter analysis. The gate limits the measurement to a user-defined range of the waveform.

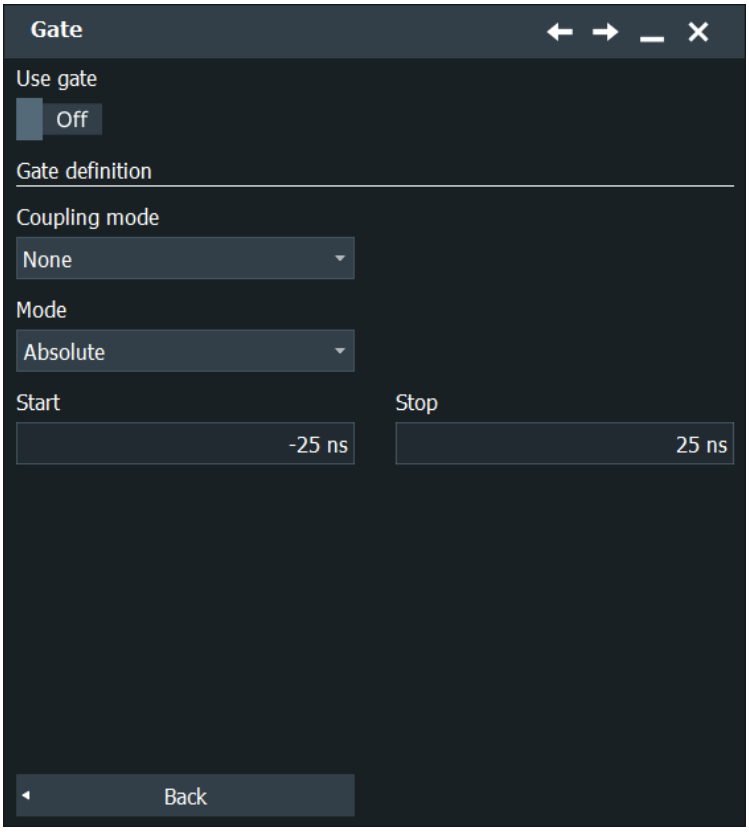

Use gate ← Gating
Enables the gating setup.

Remote command:
ADVJitter<m>:SIGNal:GATE:STATe on page 2702

Coupling mode ← Gating
Selects if the gate is coupled to the zoom or cursor.

To use the coupling mode, you have to enable a cursor or zoom first.

Remote command:
ADVJitter<m>:SIGNal:GATE:COUPling on page 2699

Cursor / Zoom ← Gating
Selects the cursor/ zoom the gate is coupled to, if "Coupling mode" is set to "Cursor"/"Zoom".

Remote command:
ADVJitter<m>:SIGNal:GATE:CURSor on page 2700
ADVJitter<m>:SIGNal:GATE:ZDIagram on page 2701

Mode ← Gating
Selects if the gate area is defined in relative values (percent) or absolute.

Remote command:
ADVJitter<m>:SIGNal:GATE:RANGe:MODE on page 2700

Start / Stop ← Gating
Sets the start/stop time of the gate area.

Remote command:
ADVJitter<m>:SIGNal:GATE:RANGe:ABSolute:STARt on page 2700
ADVJitter<m>:SIGNal:GATE:RANGe:ABSolute:STOP on page 2700

Relative start / stop ← Gating
Sets the relative start/stop of the gate area in percent.

Remote command:
ADVJitter<m>:SIGNal:GATE:RANGe:RELative:STARt on page 2701
ADVJitter<m>:SIGNal:GATE:RANGe:RELative:STOP on page 2701

Clock / CDR
Selects if a clock or a CDR signal is used as a reference signal.

"CDR" Uses software clock data recovery.

"Clock" Uses an explicit clock signal. The clock must use an extra channel.


Remote command:
ADVJitter<m>:SIGNal:REFSource on page 2697

Software CDR
Selects the software CDR setup to be used.

Remote command:
ADVJitter<m>:SIGNal:CDRMode on page 2697

Software CDR Setup
Opens a dialog for configuring the software CDR. For details, see Section 19.3, "Clock data recovery", on page 1150.

Explicit clock
Opens a dialog to define the setting of the explicit clock.

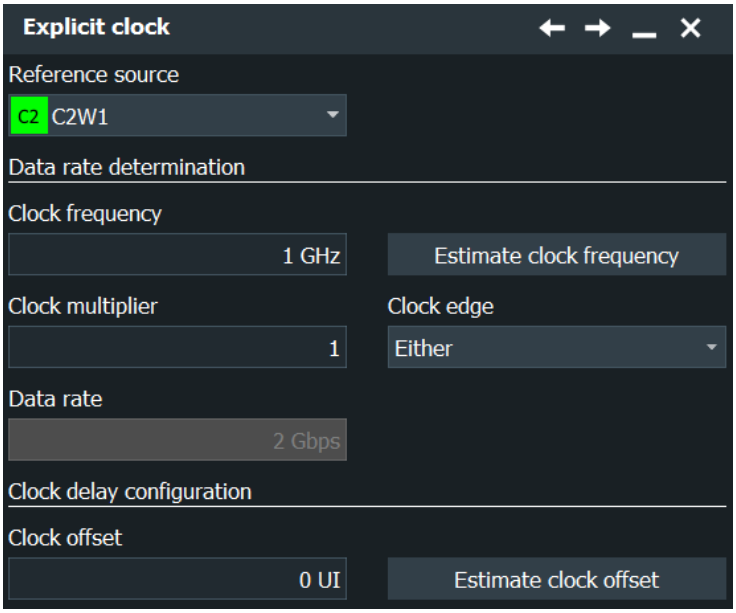

Reference source ← Explicit clock
Selects the reference source for the clock signal.

Remote command:
`ADVJitter<m>:SIGNal:CLKSource` on page 2698

Clock frequency ← Explicit clock
Sets the clock frequency of the explicit clock signal. If this value is unknown, you can use "Estimate clock frequency".

Remote command:
`ADVJitter<m>:SIGNal:CLFRequency` on page 2698

Estimate clock frequency ← Explicit clock
Calculates an estimate value for the clock frequency.

Remote command:
`ADVJitter<m>:SIGNal:FREStimation` on page 2702

Clock multiplier ← Explicit clock
Sets a value for the clock multiplier, the ratio of an internal clock rate to the externally supplied clock.

Remote command:
`ADVJitter<m>:SIGNal:CLFFactor` on page 2698

Clock edge ← Explicit clock
The clock edge sets the point in time when the state of the data signal is checked:

"Positive"	Rising edge, a positive voltage change.
"Negative"	Falling edge, a negative voltage change.
"Either"	Both the rising and the falling edge.

Remote command:
ADVJitter<m>:SIGNal:EDGE on page 2698

Data rate ← Explicit clock
Displays the calculated data rate. It is calculated as follows:

*"Data rate" = "Clock frequency" * "Clock multiplier"*X*

Where *X* is:

- 1 for "Clock edge"= "Positive" or "Negative"
- 2 for "Clock edge"= "Either"

Remote command:
ADVJitter<m>:SIGNal:DATRate? on page 2699

Clock offset ← Explicit clock
Sets a clock offset. If this value is unknown, you can use "Estimate clock offset".

Remote command:
ADVJitter<m>:SIGNal:CLOFfset on page 2699


Estimate clock offset ← Explicit clock
Calculates an estimate value for the clock offset.

Remote command:
ADVJitter<m>:SIGNal:OFEStimation on page 2702

19.2.5 Results

Access: "Analysis" menu > "Advanced Jitter" > "Result" tab.

In this tab, you can select the jitter components measurements that you want to perform and enable the results.

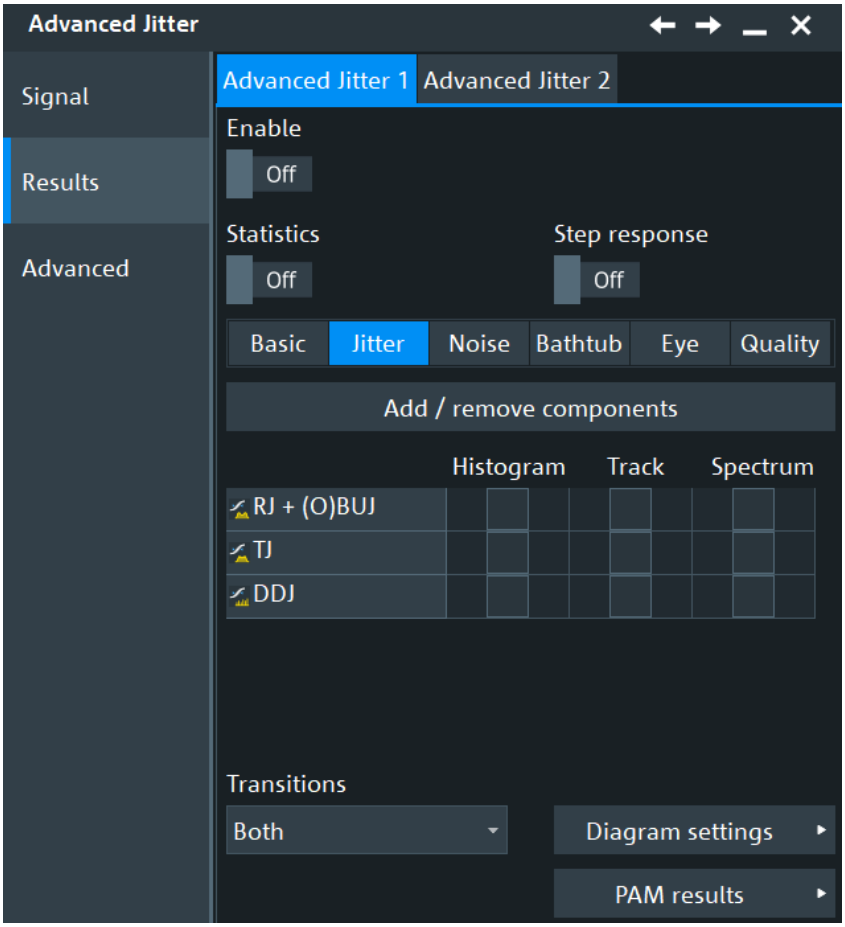

The advanced jitter option provides different ways to display your measurement results. In the "Result" tab, you can select which measurement results you want to display.

Figure 19-6 and Figure 19-7 show an example of the displayed advanced jitter and noise analysis results.



Figure 19-6: Advanced jitter and noise analysis results display

1 = Analyzed signal spectrum
2 = Advanced jitter results
3 = Jitter bathtub
4 = Noise bathtub
5 = Jitter spectrum
6 = Noise spectrum
7 = Jitter track
8 = Noise track
9 = Jitter histogram
10 = Noise histogram

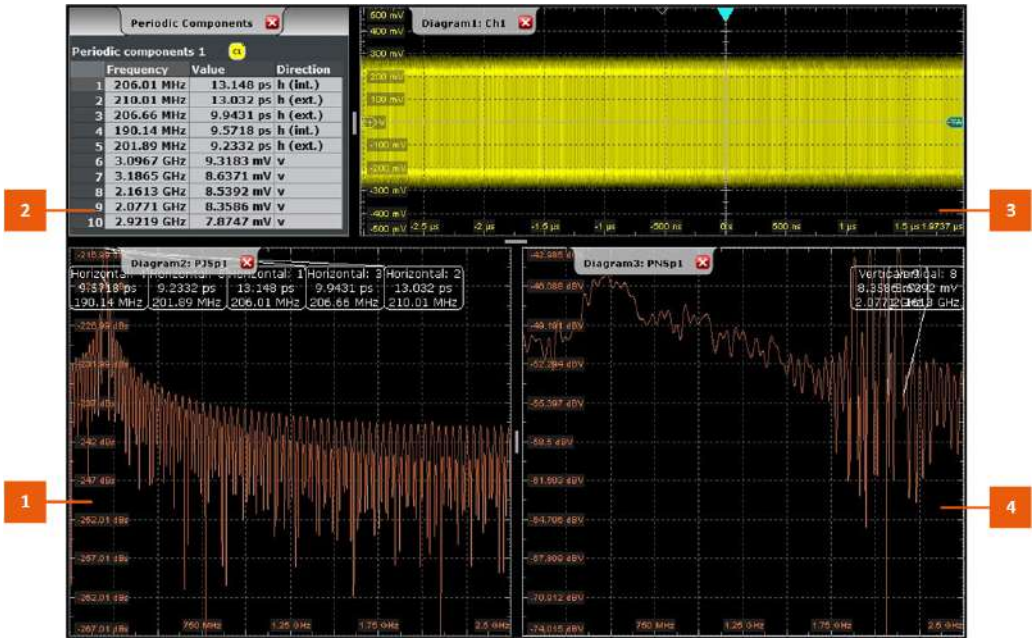


Figure 19-7: Advanced jitter and noise periodic results display

1 = Periodic jitter spectrum
2 = Periodic components results
3 = Analyzed signal spectrum
4 = Periodic noise spectrum

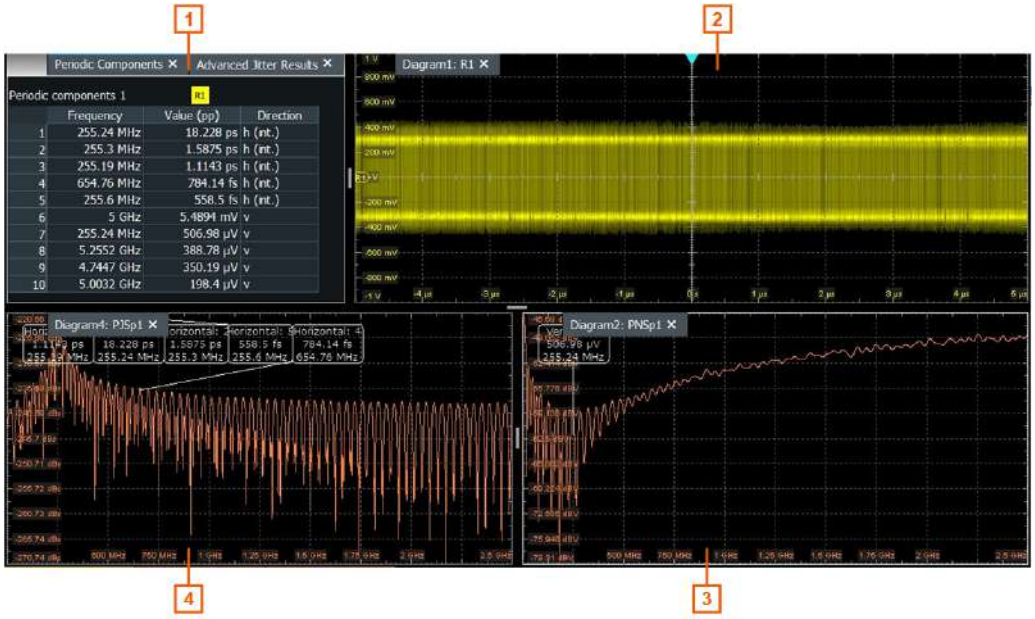


Figure 19-8: Advanced jitter and noise periodic results display

1 = Periodic components results
2 = Analyzed signal spectrum
4 = Periodic jitter spectrum
3 = Periodic noise spectrum

19.2.5.1 General settings

In the "General Settings" section of the "Results" dialog, you can enable the advanced jitter analysis, and select which results you want to display.

Enable
Enables the advanced jitter analysis. It displays all enabled diagrams and displays a table with the results for the component measurements. It also displays the measurement results for all enabled Basic components, Jitter Components.

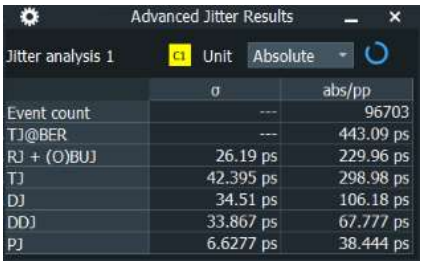



Figure 19-9: Asvanced jitter results for NRZ signals

Remote command:
ADVJitter<m>:RESult:ENABle on page 2705

Statistics
Enables the calculation and display of statistical results. They include:

- "Min (abs/pp)": absolute minimum value of the component.
- "Max (abs /pp)": absolute maximum value of the component.
- "Min (σ)": minimum value of the standard deviation.
- "Max (σ)": maximum value of the standard deviation.
- "Wave count": The number of waveforms (acquisitions) the measurement is based on.

In the "Advanced Jitter Results" table, you can reset the statistics.

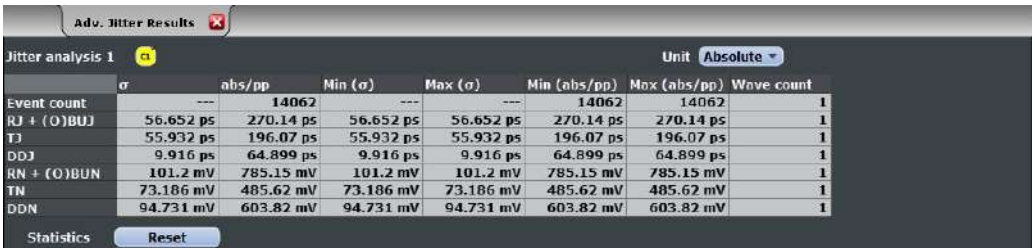

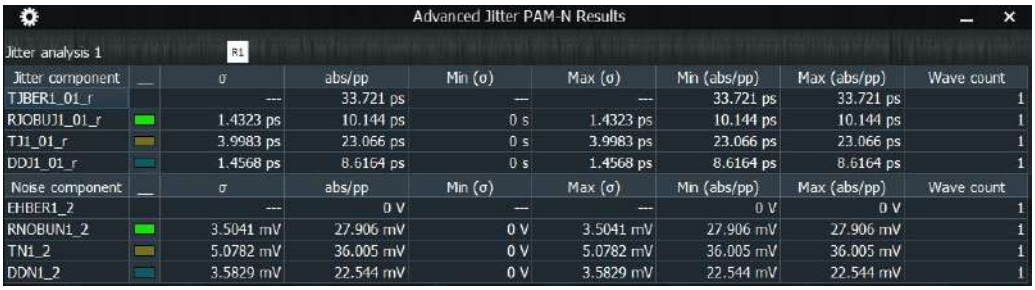



Figure 19-10: Asvanced jitter results for PAM-N signals

Remote command:
ADVJitter<m>:RESult:STATistics on page 2706

Step response
Enables a step response diagram. The diagram displays the time behavior of the system when the inputs change from zero to one or from one to zero within a short time period.

You can set the Length and the Step position for the step response diagram in the "Advanced Settings" dialog.

For further analysis of the step response, you can use it as a source for "Amp/Time" measurements. See Section 8.2.2, "Amplitude/time measurements", on page 339.

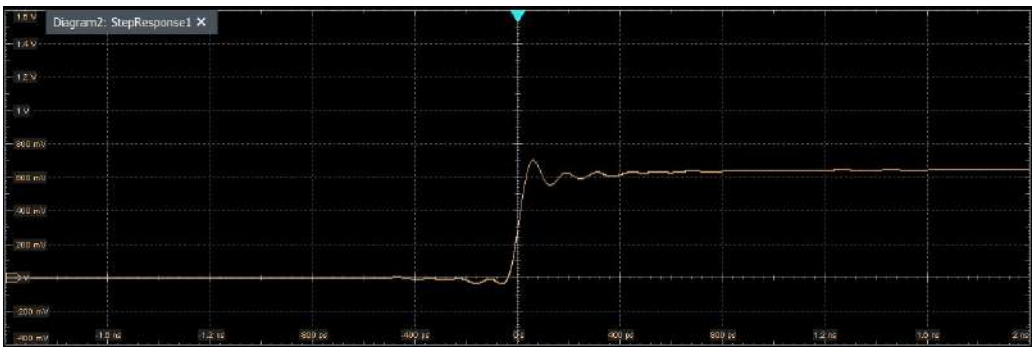

Remote command:
`ADVJitter<m>:RESult:STEPresponse` on page 2706

Component specific results
For the selected jitter component, selected you can display:

- "Histogram": displays a histogram of measurement results for the selected component - the cumulative occurrence distribution of measurement results in a graphic. You can enable a cursor and use it for further analysis.

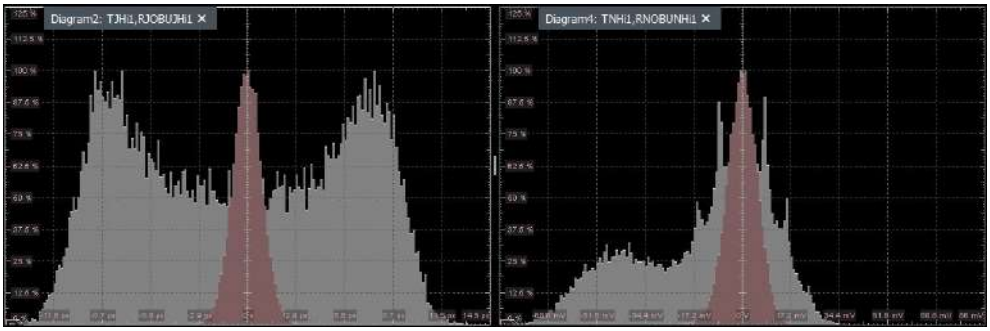


Figure 19-11: Jitter and noise histogram for NRZ signal

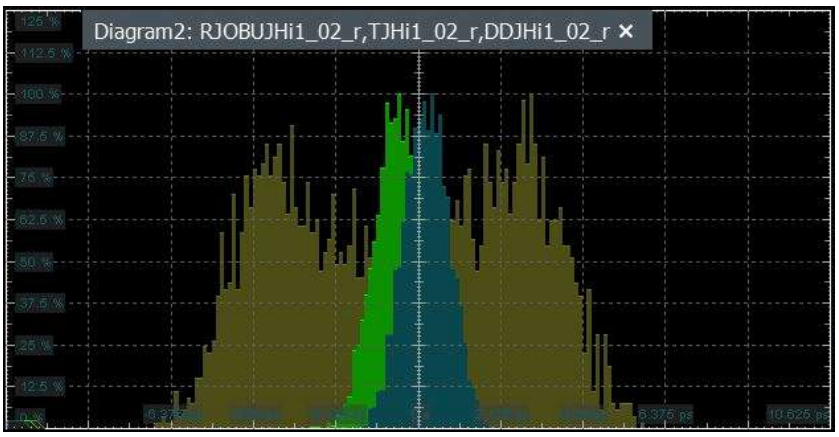


Figure 19-12: Jitter histogram PAM-N signal

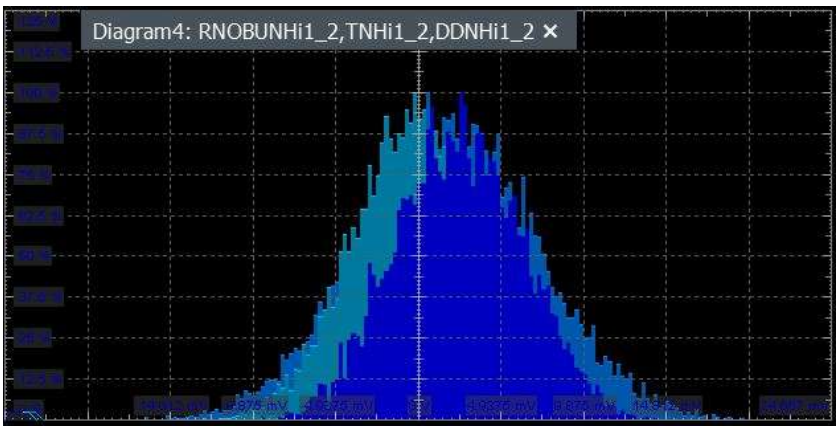


Figure 19-13: Noise histogram PAM-N signal

- "Track": the measurement results over time for an acquired waveform. It is the graphical interpretation of all measurement values of a single acquisition. Unlike the histogram, it reveals trends of change in the analysis and preserves the timing relationship of the measurement results to the signal.

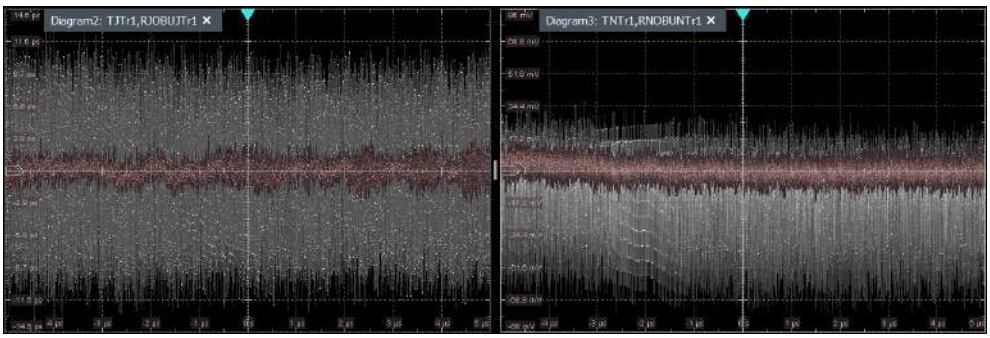


Figure 19-14: Jitter and noise track for NRZ signal

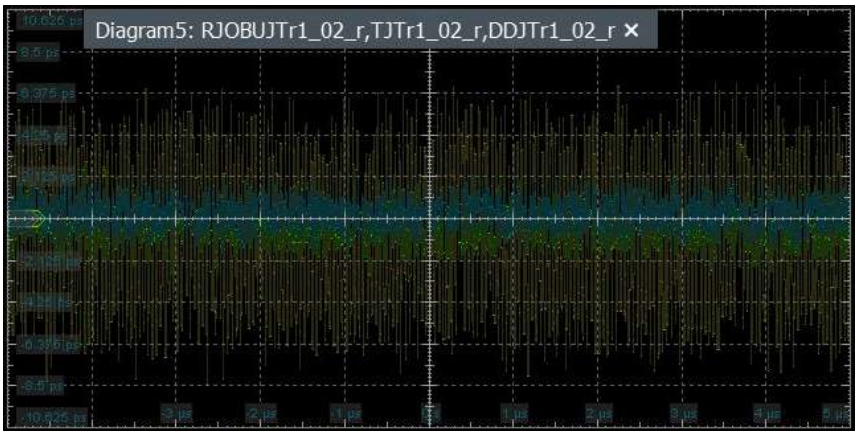


Figure 19-15: Jitter track PAM-N signal


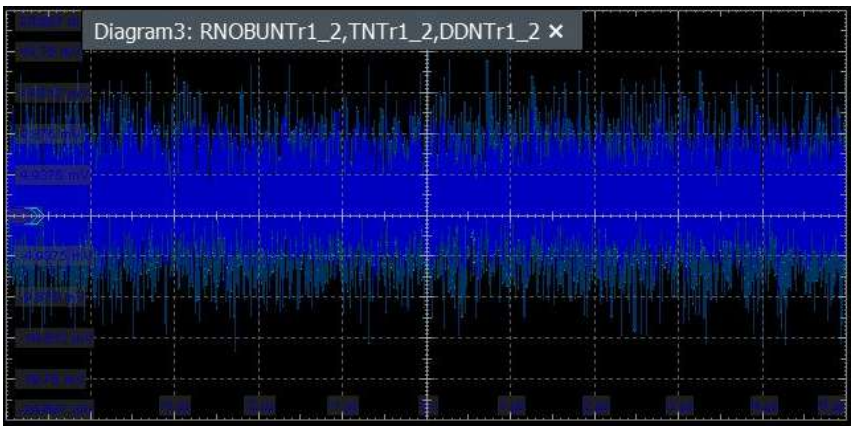


Figure 19-16: Noise track PAM-N signal

- "Spectrum": displays how the power of the signal is distributed over the frequency.

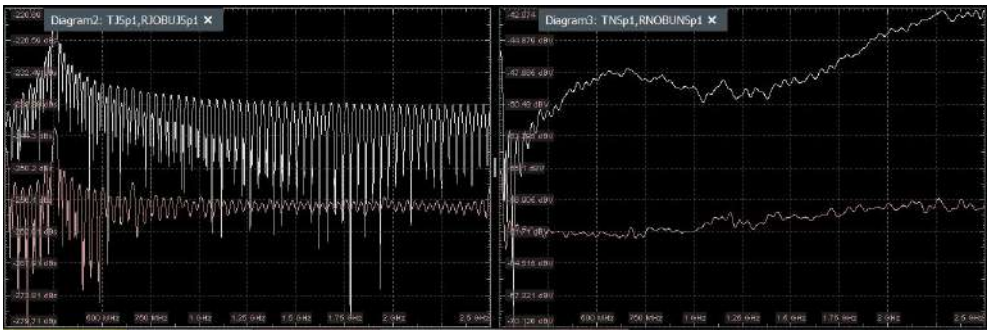

Remote command:
`ADVJitter<m>:RESult:COMPonents<n>:HISTogram` on page 2706
`ADVJitter<m>:RESult:COMPonents<n>:TRACk` on page 2707
`ADVJitter<m>:RESult:COMPonents<n>:SPECtrum` on page 2707

Unit
In the jitter results dialog, you can select the unit for the displayed results. The following values are available:


- For jitter measurements, you can select between absolute (seconds) and relative (unit intervals) values.
- For noise measurements, you can select between absolute (V) and relative (%) values.

Remote command:
`ADVJitter<m>:RESult:UNIT` on page 2708

19.2.5.2 Basic measurement settings

Access: "Analysis" menu > "Advanced Jitter" > "Result" tab > "Basic".

In the "Basic" tab, you can add measurements for better understanding of the collected data. You can then enable a histogram or track on them, see Component specific results.

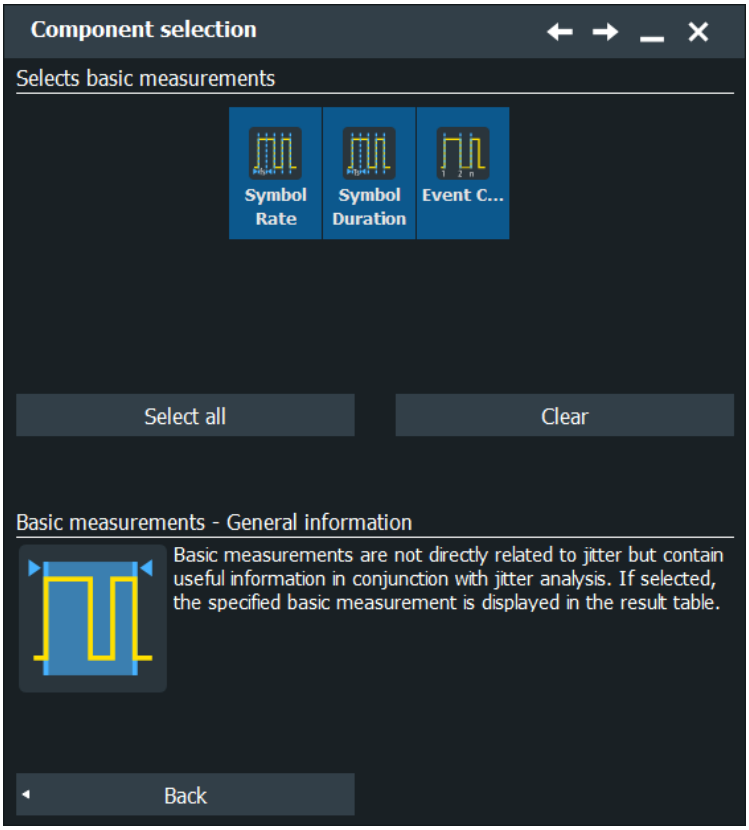

Add / remove components
Opens a dialog to select the jitter and noise components.

Basic components
To display the measurement results, "Enable" the advanced jitter analysis in the "Results" tab.

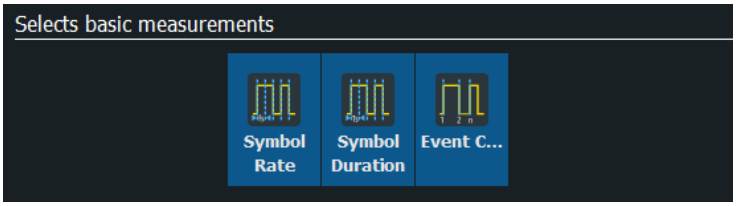


Table 19-2: Advanced jitter basic measurements

Measurement	Abbreviation	Description	StdDev	apl/abs	Histogram	Track
Symbol rate	f_symb	Number of data symbols per second of the analyzed signal. It is equivalent to the baud rate. For binary signals, the signal rate is equal to the bit rate.		X	X	X
Symbol duration	T_symb	The length of time to transfer one signal symbol. Equals the inverse value of the symbol rate.		X	X	X
Event Count	EC	Number of analyzed data transitions.		X		

Remote command:
`ADVJitter<m>:DCOMposition:COMPonents<n>[:ENABle]` on page 2705


Select all /Clear
Selects/clears all components in the basic dialog.

Remote command:
`ADVJitter<m>:DCOMposition:SELBasicmeas` on page 2710
`ADVJitter<m>:DCOMposition:CLEBasicmeas` on page 2710

19.2.5.3 Jitter measurement settings

Access: "Analysis" menu > "Advanced Jitter" > "Result" tab > "Jitter".

In the "Jitter" tab, you can add the jitter components you want to measure. You can then enable a histogram, track or spectrum on them, see Component specific results.

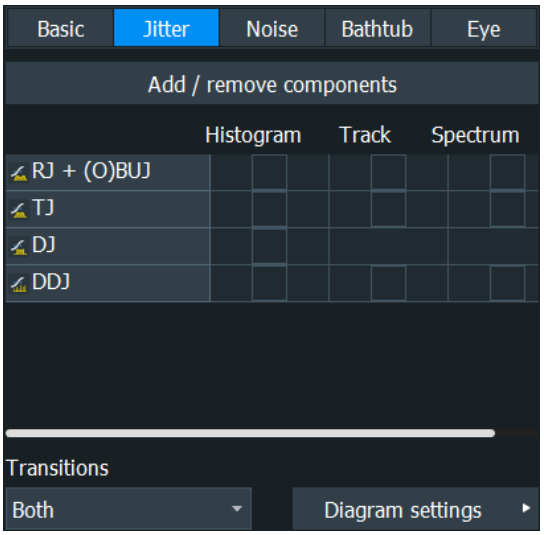

Add / remove components
Opens a dialog to select the jitter components.

Jitter Components
In the "Jitter" tab, you can select which jitter components you want to measure. For the enabled measurements you can display the results in different forms, see Section 19.2.5.1, "General settings", on page 1119.



Table 19-3: Advanced jitter components measurements

Measurement	Abbreviation	Description	Results		Diagram		
			StdDev	app/abs	Histogram	Track	Spectrum
Total jitter at BER	TJ@BER	The eye closure at the user-defined target BER.		x			
Total jitter	TJ	Measures the total Time Interval Error (TIE) of the input signal. It is defined as the time between each transition of the input signal and its corresponding reference clock transition.	x	x	x	x	x
Deterministic jitter	DJ	The reproducible portion of the overall TIE of the input signal. It consists of the Data Dependent Jitter(DDJ), Periodic Jitter (PJ) and the Other Bounded Uncorrelated Jitter (OBUJ) components.		x			
Data-dependent jitter	DDJ	Consists of Inter-symbol Interference (ISI) and Duty Cycle Distortion (DCD). It depends on the symbol sequence. ISI is an effect commonly caused by limited signal bandwidth in the transmitter and transmission line, which forces influence from past symbols onto future symbols. DCD is a mismatch between rising and falling signal transitions due to reference level mismatch or other imbalances between transitions.	x	x	x	x	x
Duty cycle distortion(3)	DCD	Measure of the imbalance between rising and falling data transitions. It is defined as the time difference between the average rising and average falling edge.		x			
Random plus (other) bounded uncorrelated jitter	RJ + (O)BUJ	Random jitter plus bounded uncorrelated jitter/ other bounded uncorrelated jitter is the combined effect of both jitter types. If periodic components are activated, RJ + OBUJ is displayed. Otherwise RJ + BUJ. RJ + (O)BUJ is typically used, if track or spectrum plots are desired. Both plots are not available for RJ only or (O)sBUJ only components as the time dependencies of these jitter types are unknown. RJ + (O)BUJ spectrum is a useful approximation of the RJ spectrum for negligible small (O)BUJ.	x	x	x	x	x

(1) Available, if (Other) bounded uncorrelated > "Enabled".

(2) Available, if Periodic > "Enabled".

(3) No results available, if "Transitions" is set to "Rising"/"Falling".

Measurement	Abbreviation	Description	Results		Diagram		
			StdDev	ap/abs	Histogram	Track	Spectrum
Periodic jitter(2)	PJ	Caused by crosstalk from periodic signal sources to the transmitter or transmission line. It represents the harmonic portion of the overall time interval error (TIE).	x	x	x	x	x
Deterministic Dual-Dirac jitter	DJ (δ-δ)	Industry standard approximation to the deterministic jitter measurement, calculated by fitting a model of two overlapping, equally large Gaussian distributions to the observed TJ histogram. The calculated value is the time difference between the two distributions center points.		x			
Inter-Symbol interference	ISI	The time between the earliest and the latest signal transition of a single transition type, i.e.rising and falling edges. The measurement result is the largest value across all transition types.		x			
Data-dependent and periodic jitter(2)	DDJ + PJ	Consist of the data-dependent and periodic jitter DDJ+PJ is the same as deterministic jitter minus other bounded uncorrelated jitter. In contrast to deterministic jitter, DDJ+PJ offers track and spectrum plots. DDJ+PJ spectrum is a useful approximation of the deterministic jitter spectrum for negligible small other bounded uncorrelated jitter.	x	x	x	x	x
Other bounded uncorrelated jitter(1)	(O)BUJ	Composite impact of all unknown but deterministic portions of the overall time interval error of the input signal. It consists of any disturbance that comes from a deterministic source but cannot be reproduced from the input signal. Often it is caused by crosstalk from other data signals.	x	x	x		

(1) Available, if (Other) bounded uncorrelated > "Enabled".

(2) Available, if Periodic > "Enabled".

(3) No results available, if "Transitions" is set to "Rising"/"Falling".

Measurement	Abbreviation	Description	Results		Diagram		
			StdDev	ap/abs	Histogram	Track	Spectrum
Other bounded uncorrelated Dual-Dirac jitter(1)	(O)BUJ (δ -δ)	Other bounded uncorrelated Dual-Dirac jitter (O)BUJ (δ- δ) is an industry standard approximation to the other bounded uncorrelated jitter measurement. It is calculated by fitting a model of two overlapping, equally large Gaussian distributions to the observed RJ+(O)BUJ histogram. The calculated value is the amplitude difference between the two distributions center points.		x			
Random jitter (1)	RJ	Consists of any influence that cannot be predicted with model parameters. Usually, this jitter component follows a Gaussian probability distribution. The algorithm computes the standard deviation and the peak-peak value of the TIE caused by RJ within the analyzed waveform.	x		x		

(1) Available, if (Other) bounded uncorrelated > "Enabled".

(2) Available, if Periodic > "Enabled".

(3) No results available, if "Transitions" is set to "Rising"/"Falling".

To display the measurement results, "Enable" the advanced jitter analysis in the "Results" tab.

Remote command:
`ADVJitter<m>:DCOMposition:COMPonents<n>[:ENABle]` on page 2705

Select all /Clear
Selects/clears all components in the jitter dialog.

Remote command:
`ADVJitter<m>:DCOMposition:CLEJitcomp` on page 2710
`ADVJitter<m>:DCOMposition:SELJitcomp` on page 2711

Transitions
Selects which transitions are considered for the display of the diagrams, rising, falling or both. This setting is mostly relevant for histograms, tracks and the measurement results.


Remote command:
`ADVJitter<m>:RESult:TRANsitions` on page 2711

19.2.5.4 Noise measurement settings

Available for option R&S RTP- K134.

Access: "Analysis" menu > "Advanced Jitter" > "Result" tab > "Noise".

In the "Noise" tab, you can add the noise components you want to measure. You can then enable a histogram, track or spectrum on them, see Component specific results.

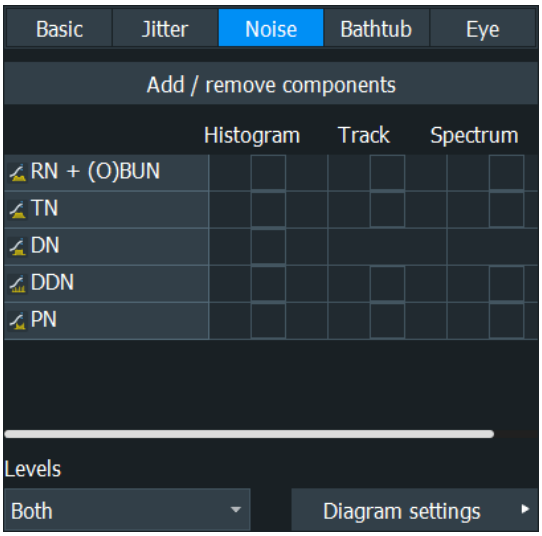

Add / remove components
Opens a dialog to select the noise components.

Noise components
In the "Noise" tab, you can select which jitter noise components you want to measure.


Component selection
Select noise components
EH@BER
RN + (O)BUN
TN
DN
DDN
LD
PN
ISIN
DDN + PN
(O)BUN
(O)BUN (δ-δ)
RN
Select all
Clear
Enable (Other) bounded uncorrelated in tab "Advanced"
Noise - General information
Noise describes the amplitude deviation of a data symbol at the sampling time with respect to a corresponding reference level. These deviations or Level Errors (LE) are caused by various sources.
The Total Noise (TN) is split into two main components: Random Noise (RN) and Deterministic Noise (DN). DN consists of Periodic Noise (PN) and non periodic components.
Back

Measurement	Abbreviation	Description	Results		Diagram		
			StDev	ap/abs	Histogram	Track	Spectrum
Eye height @BER[3]	EH@BER	Returns the vertical eye opening at the user-defined BER.		x			
Random plus (other) bounded uncorrelated noise	RN+ (O)BUN	Random noise plus (other) bounded uncorrelated noise or (other) bounded uncorrelated noise is the combined effect of both noise types. If periodic components are activated RN + OBUN are displayed, otherwise RN + BUN. RN + (O)BUN is typically used, if track or spectrum plots are desired. Both plots are not available for RN only or (O)BUN only components as the time dependencies of these noise types are unknown. RN + (O)BUN spectrum is a useful approximation of the RN spectrum for negligible small (O)BUN.	x	x	x	x	x
Total noise	TN	Measures the total level error of the input signal. It is defined as the amplitude deviation between the amplitude of the input signal at the decision time point and its corresponding reference level.	x	x	x	x	x
Deterministic noise	DN	The reproducible portion of the overall level error of the input signal. It consists of the data-dependent noise, the periodic noise components and the other bounded uncorrelated jitter components.	x	x	x		
Data-dependent noise	DDN	Consists of inter-symbol interface noise and level distortion. It depends on the symbol sequence. ISIN is an effect whereby past symbols have an influence on future symbols. DCD is a mismatch between rising and falling signal transitions due to reference level mismatch or other imbalances between transitions.	x	x	x	x	x
Level distortion[3]	LD	A measure of imbalance between different symbol levels. It is defined as the difference between the average level errors of the symbols one and zero.		x			
Periodic noise[2]	PN	Periodic noise is typically caused by crosstalk from periodic signal sources to the transmitter or transmission line. It represents the harmonic portion of the overall level error.	x	x	x	x	x

[1] Available, if (Other) bounded uncorrelated > "Enabled".

[2] Available, if Periodic > "Enabled".

[3] No results available, if "Levels" is set to "Rising"/"Falling".

Measurement	Abbreviation	Description	Results		Diagram		
			StDev	ap/abs	Histogram	Track	Spectrum
Inter-symbol interference noise	ISIN	The level difference between the highest and the lowest level error of a symbol, i.e. one or zero. The largest value across all symbols is the measurement result.		x			
Data-dependent noise and periodic noise[2]	DDN+PN	Data-dependent noise plus periodic noise is the combined effect of both jitter types. Note that DDN+PN equals deterministic noise minus other bounded uncorrelated noise. DDN+PN spectrum is a useful approximation of the deterministic noise spectrum for negligible small other bounded uncorrelated noise.	x	x	x	x	x
Other bounded uncorrelated noise [1]	(O)BUN	Composite impact of all unknown but deterministic portions of the overall time interval error of the input signal. It consists of any disturbance that comes from a deterministic source but cannot be reproduced from the input signal. Often it is caused by crosstalk from other data signals.	x	x	x		
Other bounded uncorrelated Dual-Dirac noise [1]	(O)BUN (δ-δ)	Other bounded uncorrelated Dual-Dirac noise (O)BUN (δ- δ) is an industry standard approximation to the other bounded uncorrelated jitter measurement. It is calculated by fitting a model of two overlapping, equally large Gaussian distributions to the observed RN+(O)BUN histogram. The calculated value is the amplitude difference between the two distributions center points.		x			
Random noise [1]	RN	Consists of any influence that cannot be predicted with model parameters. Usually, this noise component follows a Gaussian probability distribution. The algorithm computes the standard deviation and the peak-peak value of the level error (LE) caused by RN within the analyzed waveform.	x		x		

[1] Available, if (Other) bounded uncorrelated > "Enabled".

[2] Available, if Periodic > "Enabled".

[3] No results available, if "Levels" is set to "Rising"/"Falling".

Remote command:
`ADVJitter<m>:DCOMposition:COMPonents<n>[:ENABle]` on page 2705

Select all /Clear
Selects/clears all components in the noise dialog.


Remote command:
ADVJitter<m>:DCOMposition:CLENoisecomp on page 2711
ADVJitter<m>:DCOMposition:SELNoisecomp on page 2711

Levels
Selects which levels are considered for the display of the diagrams, rising, falling or both. This setting is mostly relevant for histograms, tracks and the measurement results.

Remote command:
ADVJitter<m>:RESult:LEVels on page 2712

19.2.5.5 Bathtub settings

Access: "Analysis" menu > "Advanced Jitter" > "Result" tab > "Bathtub".

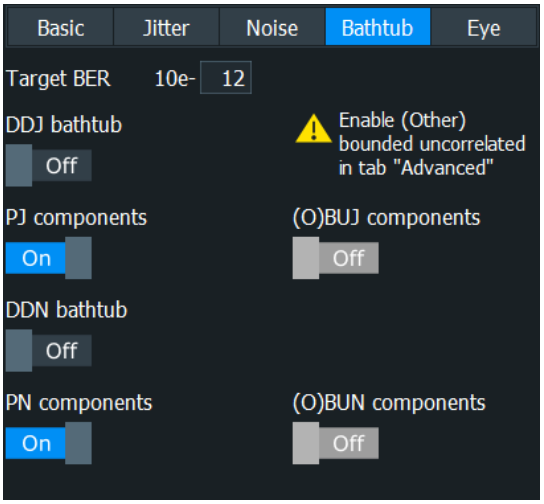

Target BER 10
Sets the target bit error rate.

Remote command:
ADVJitter<m>:DCOMposition:TARBer on page 2712

DDJ bathtub
Enables a bathtub plot, a graph of BER in a log scale versus data-dependent jitter (DDJ).



Remote command:
`ADVJitter<m>:RESult:BATHtub` on page 2712

PJ / (O)BUJ components
Selects which jitter components are considered for the jitter bathtub.

"PJ" is available, if Periodic > "Enabled".

"(O)BUJ"is available, if (Other) bounded uncorrelated > "Enabled".

Remote command:
`ADVJitter<m>:RESult:PJ` on page 2713
`ADVJitter<m>:RESult:OBUJ` on page 2713

DDN bathtub
Available for option R&S RTP- K134.

Enables a noise bathtub plot, a graph of BER in a log scale versus data-dependent jitter (DDN).



Figure 19-17: Bathtub plot for NRZ signals

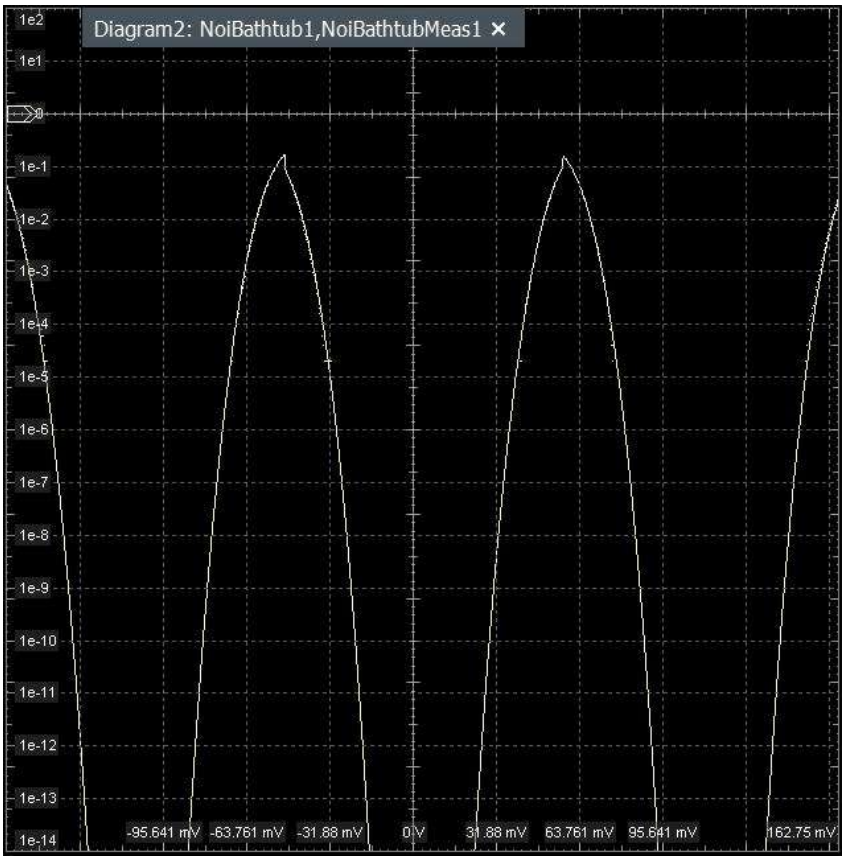


Figure 19-18: Bathtub plot for PAM-N signals

Remote command:
`ADVJitter<m>:RESult:NBAThtub` on page 2713

PN / (O)BUN components
Selects which noise components are considered for the noise bathtub.


"PN" is available, if Periodic > "Enabled".

"(O)BUN" is available, if (Other) bounded uncorrelated > "Enabled".

Remote command:
`ADVJitter<m>:RESult:PN` on page 2713
`ADVJitter<m>:RESult:OBUN` on page 2714

19.2.5.6 Eye settings

Access: "Analysis" menu > "Advanced Jitter" > "Result" tab > "Eye".

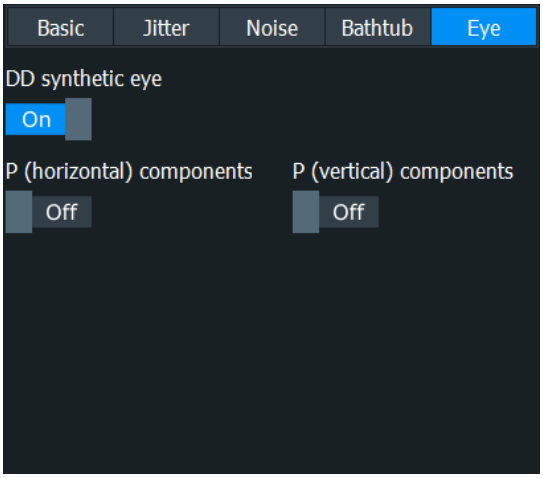

Synthetic eye
Enables a synthetic eye plot out of the synthesized data.

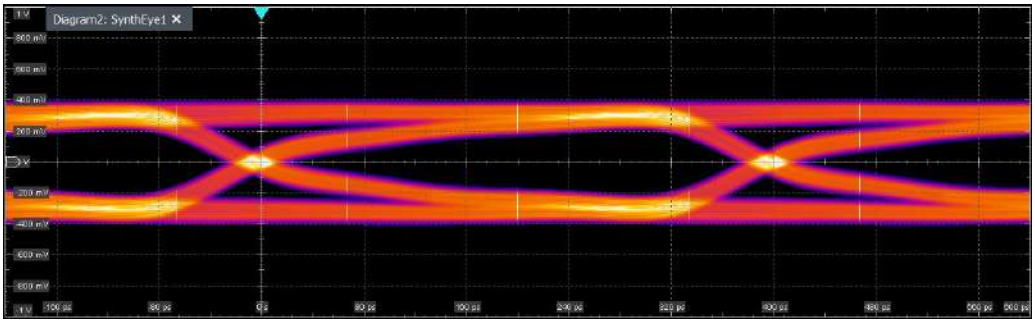


Figure 19-19: Synthetic eye for NRZ signals

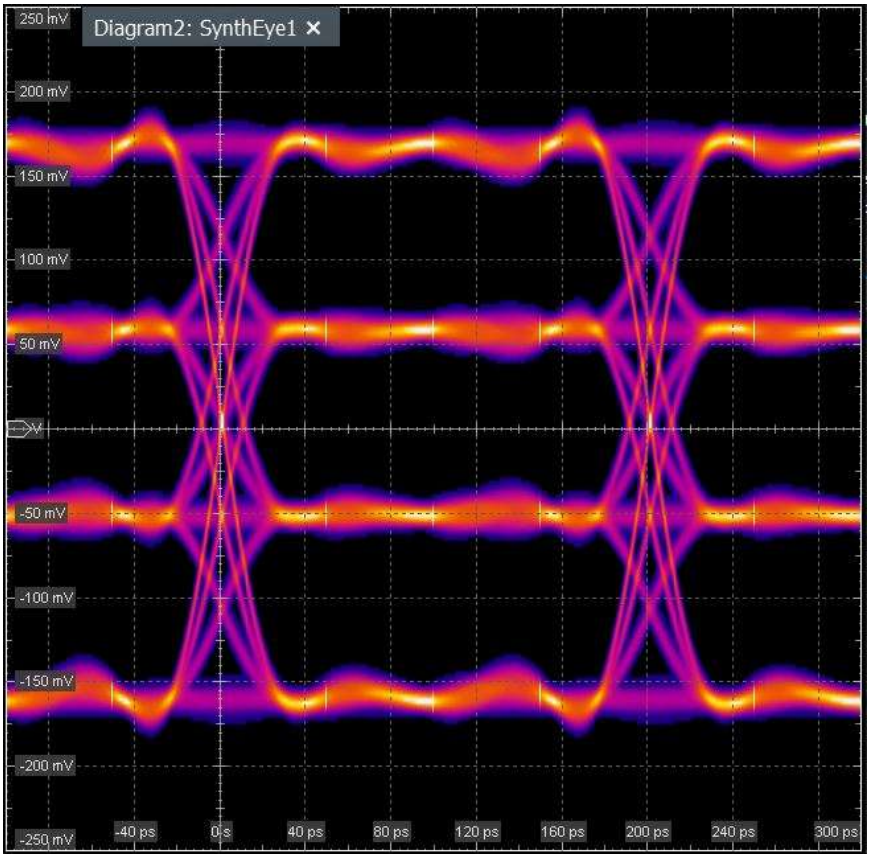


Figure 19-20: Synthetic eye for PAM Order 4 signals

Remote command:
`ADVJitter<m>:RESult:SYNTheticeye` on page 2714


Add periodic components to DD synthetic eye
Adds horizontal/vertical periodic components to the data-dependent synthetic eye.

Remote command:
`ADVJitter<m>:RESult:PHORizontal` on page 2714
`ADVJitter<m>:RESult:PVERtical` on page 2714

19.2.5.7 Quality settings

Access: "Analysis" menu > "Advanced Jitter" > "Result" tab > "Quality".

In the "Quality" tab, you can add signals you want to measure.

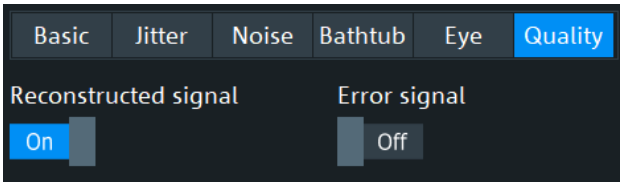

Reconstructed signal
If enabled, shows the reconstructed signal. The recconstructed signal is the signal that results after attempting to correct for jitter. It aims to represent the original transmitted signal as closely as possible, lessening the effects of timing errors or variations introduced by jitter.

Remote command:
`ADVJitter<m>:DCOMposition:RECSignal` on page 2715


Error signal
If enabled, shows the error signal. An error signal is the difference between the expected signal and the observed signal, considering the jitter. The error signal quantifies the extent of jitter and other discrepancies from the ideal timing of pulses.

Remote command:
`ADVJitter<m>:DCOMposition:ERRSignal` on page 2715

19.2.5.8 Diagram settings

In the diagram settings dialog you can set a separate scale for the basic, jitter and noise parameters.

Settings for histogram and track
Defines the settings for the histogram and track diagrams.

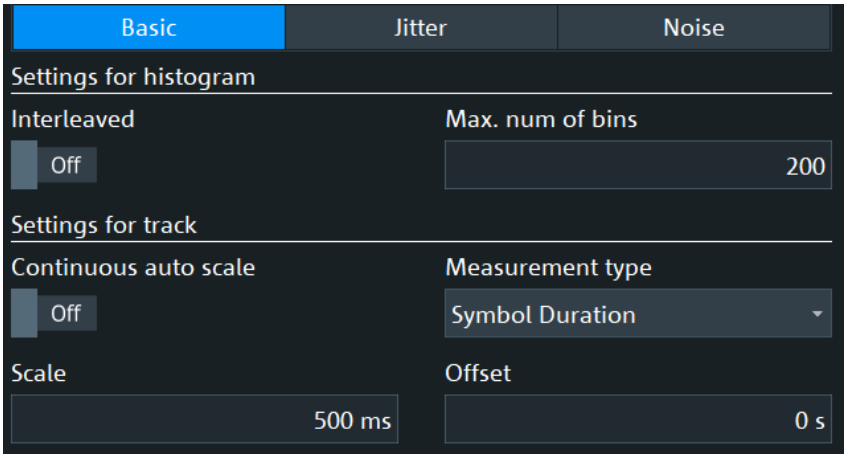

Interleaved ← Settings for histogram and track
Displays interleaved histogram values.

Remote command:
`ADVJitter<m>:DCOMposition:JINTerleaved` on page 2719

Max. numb of bins ← Settings for histogram and track
Sets the number of bins, the number of data intervals, of the histogram.

Remote command:
`ADVJitter<m>:RESult:VERTical:HBINs` on page 2716

Continuous auto scale ← Settings for histogram and track
If enabled, the measurement scale for track is set automatically. If disabled you can manually set a Scale and Offset.

Remote command:
`ADVJitter<m>:RESult:VERTical:CONTinuous` on page 2716
`ADVJitter<m>:RESult:VERTical:BHContinuous` on page 2717
`ADVJitter<m>:RESult:VERTical:NHContinuous` on page 2717

Measurement type ← Settings for histogram and track
Selects the basic measurement type to apply the scale to. This is available only for basic measurements.

Remote command:
`ADVJitter<m>:RESult:VERTical:BMTYpe` on page 2716


Scale ← Settings for histogram and track
Sets a measurement scale. The unit depends on the measurement type.

Remote command:
`ADVJitter<m>:RESult:COMPonents<n>:SDSCale` on page 2721
`ADVJitter<m>:RESult:COMPonents<n>:SRSCale` on page 2722
`ADVJitter<m>:RESult:COMPonents<n>:HSCale` on page 2719
`ADVJitter<m>:RESult:COMPonents<n>:NSCale` on page 2720

Offset ← Settings for histogram and track
Sets a measurement offset. The unit depends on the measurement type.

Remote command:
`ADVJitter<m>:RESult:COMPonents<n>:SDOFfset` on page 2721
`ADVJitter<m>:RESult:COMPonents<n>:SROFfset` on page 2722
`ADVJitter<m>:RESult:COMPonents<n>:HOFFset` on page 2719
`ADVJitter<m>:RESult:COMPonents<n>:NOFFset` on page 2720

Settings for spectrum
Defines the settings for the spectrum diagrams.

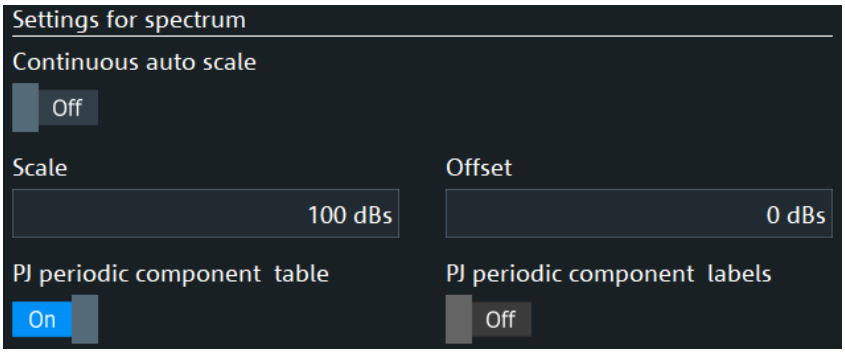

Continuous auto scale ← Settings for spectrum
If enabled, the measurement scale for the spectrum is set automatically. If disabled you can manually set a Scale and Offset.

Remote command:
ADVJitter<m>:RESult:VERTical:JSContinuous on page 2717
ADVJitter<m>:RESult:VERTical:NSContinuous on page 2718

Scale ← Settings for spectrum
Sets a measurement scale. The unit depends on the measurement type.


Remote command:
ADVJitter<m>:RESult:COMPonents<n>:NSPScale on page 2721
ADVJitter<m>:RESult:COMPonents<n>:SSCale on page 2723

Offset ← Settings for spectrum
Sets a measurement offset. The unit depends on the measurement type.

Remote command:
ADVJitter<m>:RESult:COMPonents<n>:SOFFset on page 2722
ADVJitter<m>:RESult:COMPonents<n>:NSPoffset on page 2720

PJ periodic component table ← Settings for spectrum
Enables the display of the periodic jitter components table. The table is displayed after the advanced jitter/ noise analysis is enabled.

The unit of the periodic components depends on the switching between "Absolute" and "Relative". Thus, times are represented in “s” and “UI” and voltages in “V” and “%”.

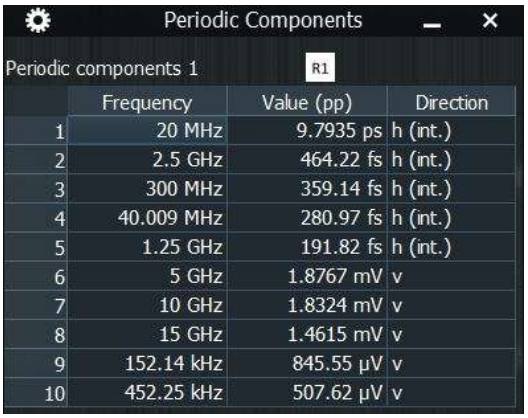

	Frequency	Value (pp)	Direction
1	20 MHz	9.7935 ps	h (int.)
2	2.5 GHz	464.22 fs	h (int.)
3	300 MHz	359.14 fs	h (int.)
4	40.009 MHz	280.97 fs	h (int.)
5	1.25 GHz	191.82 fs	h (int.)
6	5 GHz	1.8767 mV	v
7	10 GHz	1.8324 mV	v
8	15 GHz	1.4615 mV	v
9	152.14 kHz	845.55 µV	v
10	452.25 kHz	507.62 µV	v

Remote command:
ADVJitter<m>:DCOMposition:SPJTable on page 2718

PJ periodic component labels ← Settings for spectrum
Displays the periodic jitter/noise labels on the spectrum diagrams.


Available, if in the "Result"> "Jitter" tab, "Spectrum" is enabled for the "Periodic Jitter" measurement.

Remote command:
ADVJitter<m>:DCOMposition:SPJLabels on page 2718
ADVJitter<m>:DCOMposition:SPNLabels on page 2719

19.2.5.9 PAM results jitter

Requires option R&S RTP-K135.

For signals with a "PAM order" > 2 you can activate jitter measurements on PAM-N signals.

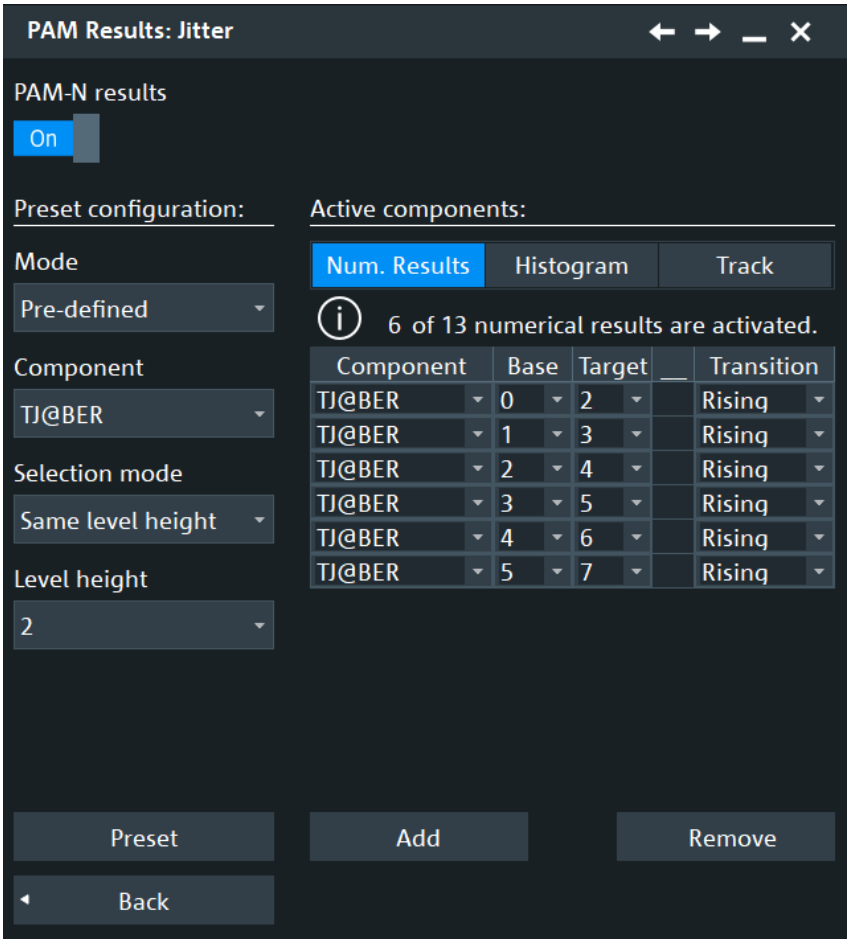

PAM-N results
Enables the PAM-N results for jitter measurements.



Remote command:
`ADVJitter<m>:RESult:PAMJitter:CONFig:ENABle` on page 2728

Preset configuration
For easier configuration, you can use some of the pre-defined user configurations. For more specific user cases, you can also define your own settings.

Mode ← Preset configuration
Selects if you want to add "Pre-defined" user configurations to the active components, or defined your own "User-defined" settings.

Remote command:
`ADVJitter<m>:RESult:PAMJitter:CONFig:MODE` on page 2729

Component ← Preset configuration
Selects a component from the list of active components for jitter, see Jitter Components.

Remote command:
`ADVJitter<m>:RESult:PAMJitter:CONFig:COMPonent` on page 2727

Selection mode ← Preset configuration
Selects how the level difference between the "Base" and "Target" level of the PAM-N signal is defined.

"Same level height"	All active components have the same level difference, "Level height", between the "Base" and "Target" level.
"Explicit level"	All active components from/to a defined explicit level.

Remote command:
`ADVJitter<m>:RESult:PAMJitter:CONFig:SELMode` on page 2729
`ADVJitter<m>:RESult:PAMJitter:CONFig:LVLHeight` on page 2728
`ADVJitter<m>:RESult:PAMJitter:CONFig:EXPLicit` on page 2728

Preset ← Preset configuration
Available only for "Mode" = "Pre-defined".

Adds a pre-defined preset configuration for the selected component to the "Active components" table.

Remote command:
`ADVJitter<m>:RESult:PAMJitter:CONFig:PRESet` on page 2729

Active components
In this table you can select the components for the measurement and their settings.

Category ← Active components
Selects the category of the measurement that you want to define: "Num. Results", "Histogram" or "Track".

Component ← Active components
Selects a component from the list of active components for jitter, see Jitter Components.

Remote command:
`ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:COMPonent` on page 2726

Base ← Active components
Selects the base level. This is the lowest amplitude level used in the modulation. It sets the reference point for the least amount of energy a pulse can carry in the system.

Remote command:
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:
MEASurement<mg>:BASE on page 2725

Target ← Active components
Selects the target level, the higher level a pulse can reach. The different target levels represent the different symbols/data values that are being transmitted.

Remote command:
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:
MEASurement<mg>:TARGet on page 2726

Color ← Active components
Selects the color of the active component.

Remote command:
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:
MEASurement<mg>:COLor on page 2725

Transition ← Active components
Selects which transitions are considered for the display of the diagrams, rising or falling.

Remote command:
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:
MEASurement<mg>:TRANsition on page 2727

Add
Adds a new line to the active components list of the currently selected category.

You can add up to 13 "Numerical results", 8 "Histograms" and 8 "Tracks".

Remote command:
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:ADD on page 2724


Remove
Removes the last added line of the currently selected category.

Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:REMove
on page 2734

19.2.5.10 PAM results noise

Requires option R&S RTP-K135.

For signals with a "PAM order" > 2 you can activate noise measurements on PAM-N signals.

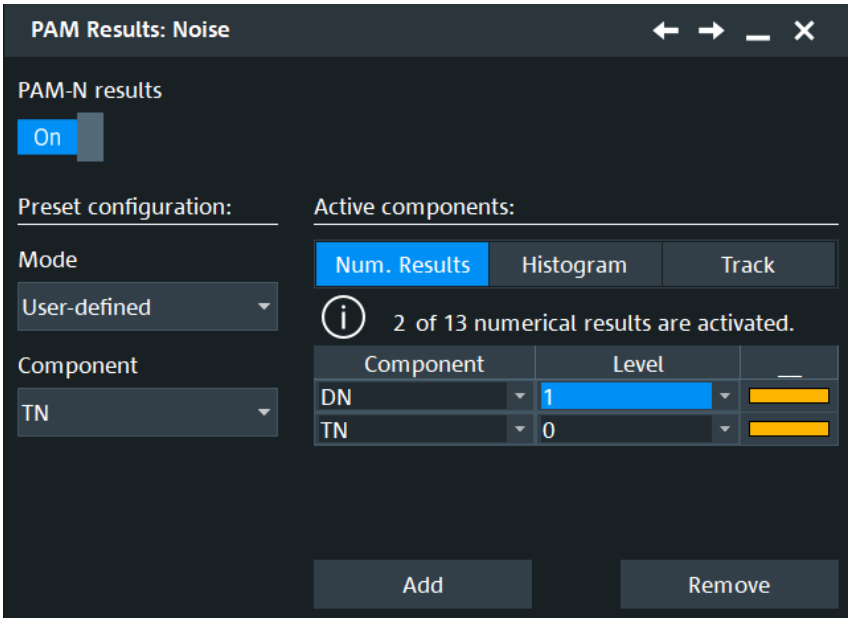

PAM-N results
Enables the PAM-N results for noise measurements.



Remote command:
`ADVJitter<m>:RESult:PAMNoise:CONFig:ENABle` on page 2735

Preset configuration
For easier configuration, you can use some of the pre-defined user configurations. For more specific user cases, you can also define your own settings.

Mode ← Preset configuration
Selects if you want to add "Pre-defined" user configurations to the active components, or defined your own "User-defined" settings.

Remote command:
`ADVJitter<m>:RESult:PAMNoise:CONFig:MODE` on page 2735

Component ← Preset configuration
Selects a component from the list of active components for noise, see Noise components.

Remote command:
`ADVJitter<m>:RESult:PAMNoise:CONFig:COMPonent` on page 2734

Level ← Preset configuration
Sets the same base level for all components, if "Component" is set to "All".

Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:BASE on page 2731

Preset ← Preset configuration
Available only for "Mode" = "Pre-defined".

Adds a pre-defined preset configuration for the selected component to the "Active components" table.

Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:PRESet on page 2735

Active components
In this table you can select the components for the measurement and their settings.

Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:ACTive?
on page 2731

Category ← Active components
Selects the category of the measurement that you want to define: "Num. Results", "Histogram" or "Track".

Component ← Active components
Selects a component from the list of active components for jitter, see Noise components.

Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:COMPonent on page 2733

Level ← Active components
Selects the same base level.

Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:BASE on page 2732

Color ← Active components
Selects the color of the measurement.

Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:COLor on page 2732

Add
Adds a new line to the active components list of the currently selected category.

You can add up to 13 "Numerical results", 8 "Histograms" and 8 "Tracks".


Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:ADD on page 2731

Remove
Removes the last added line of the currently selected category.

Remote command:
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:REMove
on page 2734

19.2.6 Advanced settings

Access: "Analysis" menu > "Advanced Jitter" > "Advanced settings" tab.

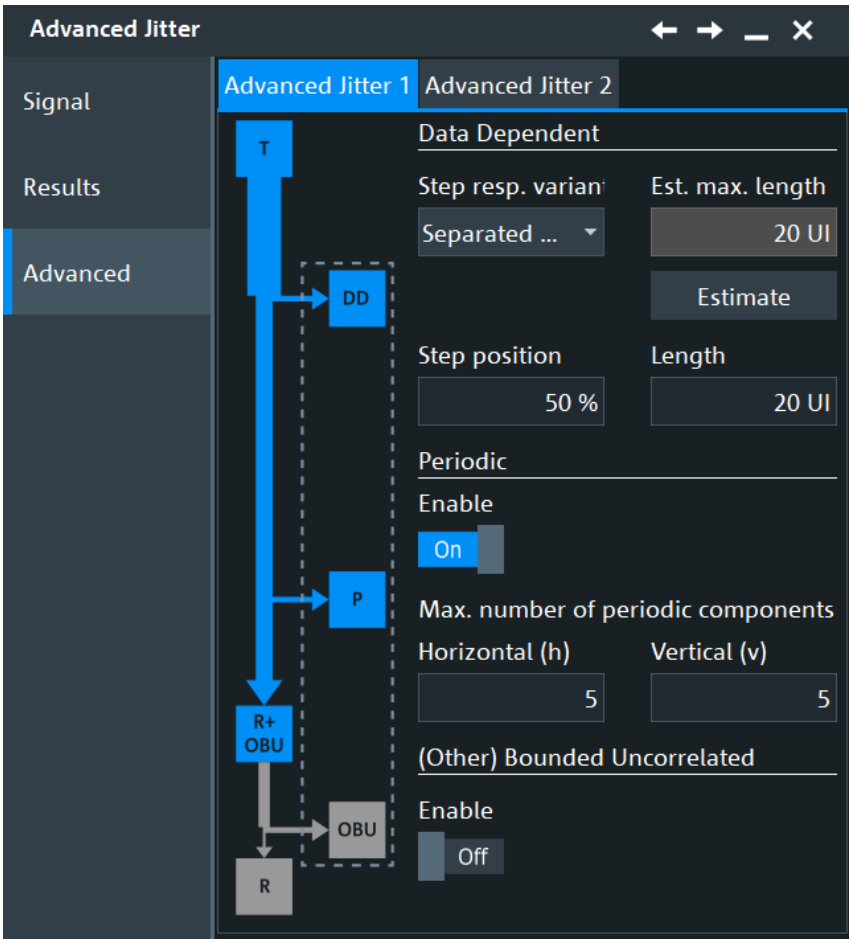

Step response variant
Selects if separated edges or combined edges are used for the step response calculation.

"Combined edges" — The rising and the falling edges of a step input are considered as a single entity. The step response is measured based on the combined effect of the entire step change, without distinguishing between the rising and falling edges.
This is useful for understanding the overall dynamic behavior of the system over a complete cycle or input change.

"Separated edges"	The systems response to the rising edge and falling edge of a step input is analyzed separately. This is useful for a more detailed understanding of the system's behavior, as it can highlight differences in how the system responds to positive versus negative changes.

Remote command:
`ADVJitter<m>:DCOMposition:STEPresponse` on page 2739

Length
Sets the step response length in unit intervals. A higher step response value leads to longer measurement times. Hence it is best to set this value to the number of unit intervals that is roughly needed until the ringing has subsided.

You can set the step response manually or run an estimate.

The "Estimate" sets the maximum feasible value. If it is lower than the set "Length", then the "Length" value is overwritten.


Remote command:
`ADVJitter<m>:DCOMposition:RESPlength` on page 2737
`ADVJitter<m>:DCOMposition:RLEStimate` on page 2737
`ADVJitter<m>:DCOMposition:MRESplength?` on page 2736

Step position
Sets the steps position. It defines what percentage of the unit lengths are displayed before the step response.

For example, if the "Length" is set to 20 UI and the "Step position" is set to 75%, the step response diagram displays 15 UI before the step response and 5 UI after it.

Remote command:
`ADVJitter<m>:DCOMposition:POSStep` on page 2737

Periodic
If enabled, allows the selection of the "Periodic jitter" / "Periodic noise" components: PJ, DDJ+PJ, PN and DDN+PN.

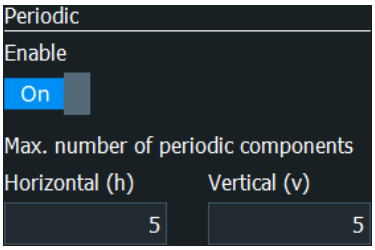

Enable ← Periodic
Enables the periodic components.

Remote command:
`ADVJitter<m>:DCOMposition:ENP` on page 2738

Horizonta (h) direction ← Periodic
Sets the maximum number of periodic components in the horizontal direction that are considered for the measurement. If the actual number of periodic components is higher than the set value, they are considered for the random jitter component.

The horizontal components also differentiate between intrinsic and extrinsic. Extrinsic periodic horizontal components describe timing variations likely caused by external interference on the clock generation system of the DUT. The interference source is free running and not coupled to the generated clock. Intrinsic periodic horizontal components describe timing variations likely caused by fluctuations within the clock generation system of the DUT. The interference is tightly coupled to the generated clock and follows modulations in data rate, e.g. spread spectrum clocking.

Remote command:
`ADVJitter<m>:DCOMposition:NHORizontal` on page 2738

Vertical (v) direction ← Periodic
Sets the maximum number of periodic components in the vertical direction that are considered for the measurement. If the actual number of periodic components is higher than the set value, they are considered for the random jitter component.

Remote command:
`ADVJitter<m>:DCOMposition:NVERtical` on page 2738

(Other) bounded uncorrelated
If enabled, allows the selection of the (other) bounded uncorrelated jitter/noise: (O)BUJ, (O)BUJ(δ -δ), RJ, (O)BUN, (O)BUN(δ -δ), RN.

The **other** bounded uncorrelated jitter/noise includes the periodic jitter/noise components. It is displayed, if Periodic is enabled. Otherwise the bounded uncorrelated jitter/noise is displayed.

Remote command:
`ADVJitter<m>:DCOMposition:ENOBu` on page 2738

19.2.7 Saving the results

Once the advanced jitter analysis is enabled, you can save the results as a report or export the waveforms for future references.

Report

You can save a report of the advanced jitter analysis, which displays the "Adv. Jitter Results" table and the "Periodic components" table.

Advanced Jitter: Results of all Components

	StdDev	abs/pp	Min(StdDev)	Max(StdDev)	Min(abs/pp)	Max(abs/pp)	Wave Count
AdvancedJitterResults1	Analyzed source: Ch1Wfm1		Reference source: CDR	Use gate: Off			
Event Count	---	14.2 k	---	---	14.2 k	14.2 k	1
Random Jitter and Other Bounded Uncorrelated Jitter	54.9 ps	237 ps	54.9 ps	54.9 ps	237 ps	237 ps	1
Total Jitter (measured)	55.5 ps	196 ps	55.5 ps	55.5 ps	196 ps	196 ps	1
Data-Dependent Jitter	5.53 ps	53.5 ps	5.53 ps	5.53 ps	53.5 ps	53.5 ps	1
Periodic Jitter	8.4 ps	88.1 ps	8.4 ps	8.4 ps	88.1 ps	88.1 ps	1
Random Noise and Other Bounded Uncorrelated Noise	78.9 mV	605 mV	78.9 mV	78.9 mV	605 mV	605 mV	1
Total Noise	72.9 mV	486 mV	72.9 mV	72.9 mV	486 mV	486 mV	1
Data-Dependent Noise	61.8 mV	372 mV	61.8 mV	61.8 mV	372 mV	372 mV	1
Periodic Noise	18.8 mV	301 mV	18.8 mV	18.8 mV	301 mV	301 mV	1

Advanced Jitter: Periodic Components of Periodic Jitter

	Frequency	Value	Direction
AdvancedJitterPeriodicComponents1	Analyzed source: Ch1Wfm1		
1	206 MHz	13.1 ps	Horizontal (intrinsic)
2	210 MHz	13 ps	Horizontal (extrinsic)
3	207 MHz	9.94 ps	Horizontal (extrinsic)
4	190 MHz	9.57 ps	Horizontal (intrinsic)
5	202 MHz	9.23 ps	Horizontal (extrinsic)
6	3.1 GHz	9.32 mV	Vertical
7	3.19 GHz	8.64 mV	Vertical
8	2.16 GHz	8.54 mV	Vertical
9	2.08 GHz	8.36 mV	Vertical
10	2.92 GHz	7.87 mV	Vertical

See also Section 12.5, "Reports", on page 527.

Exporting the output signal

The following output signals from the advanced jitter analysis can be exported in the file formats `*.csv`, `*.bin`and `*.xml`:

- Step response
- Bathtub
- Histograms
- Tracks
- Spectrum

19.3 Clock data recovery

The process of clock data recovery (CDR) generates a reference clock from a high-speed serial data stream that is sent without a dedicated clock signal. The generated clock signal matches the frequency and is aligned to the phase of the data stream. The recovered clock can be used to sample the data stream, to obtain the sequence of transmitted bits, and to measure jitter parameters.

There are two ways to recover the clock signal:

- Using software algorithms that calculate the clock from data signal edges (option R&S RTP-K12):
  Section 19.3.1, "Software CDR", on page 1151
- Using hardware CDR
  See Section 6.3.16, "Hardware CDR trigger", on page 226.

19.3.1 Software CDR

You can define four independent software CDR instances to recover clock signals. These clock signals are used for data timing measurements: time interval error, unit interval, and data rate (frequency of the clock signal). The lower the signal bandwidth and the higher the relative bandwidth, the longer the settling time is.

Software CDR is based on acquired data, needs a synchronization time to set up the clock. To get correct measurement results, the data acquired during synchronization time has to be discarded.

You can also display the recovered clock signal as a math waveform, see Section 19.3.2, "Displaying the recovered clock signal", on page 1156.

Access: [Apps] > "Analysis" tab > "CDR" > "SW CDR x"

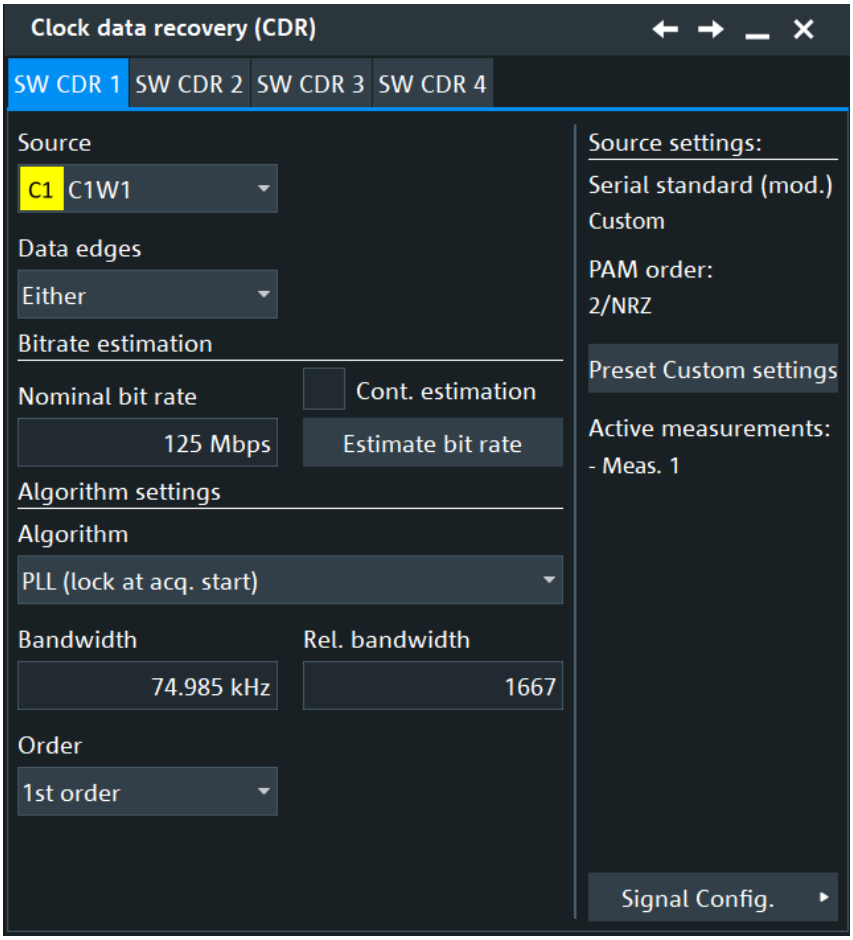


Figure 19-21: Software CDR for NRZ signals

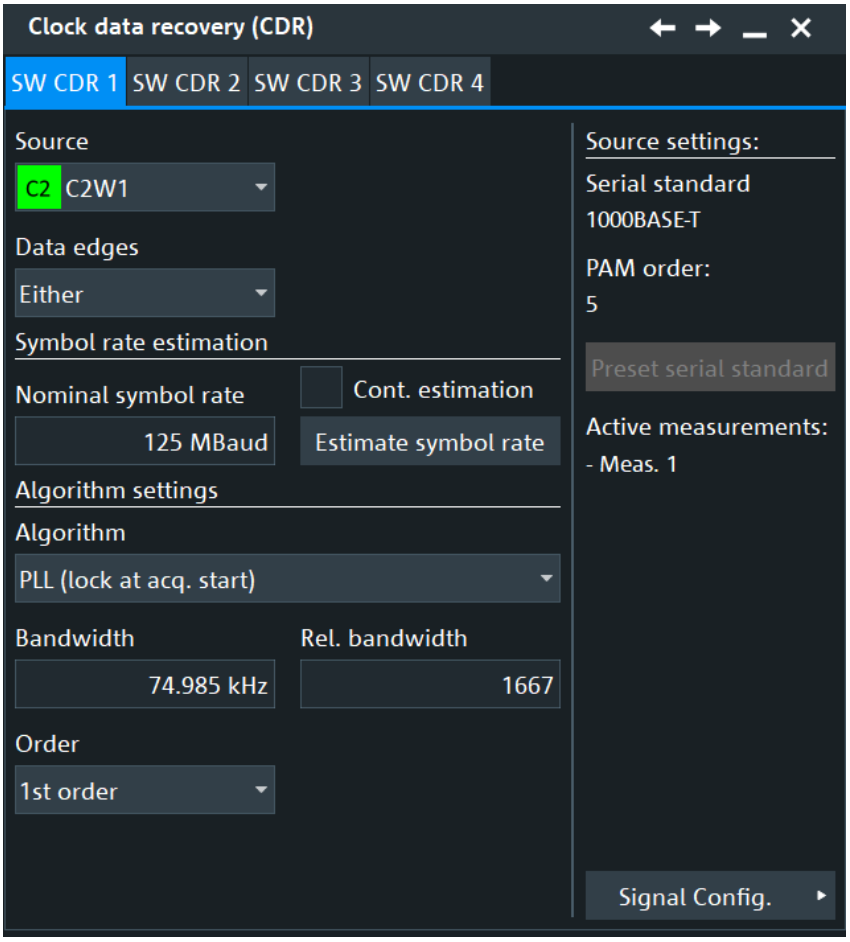


Figure 19-22: Software CDR for PAM-N signals (PAM order > 2)

Source
Selects the source for the bit rate estimation.

Remote command:
`CDR:SOFTware<sw>:ESSRate:SOURce` on page 2741

Source settings
In the source settings you can see the currently selected settings for the signal source. The settings can be configured in the "Signal configuration" dialog, see Section 13.1, "Signal configuration setup", on page 535.

The following settings are available:

- Technology, Serial standard
- PAM order
- "Preset serial standard": presets the settings to the serial standard selected for the source.
- "Active measurements": displays the currently active measurements, the measurements that are set to use the same source.

Remote command:
`CDR:SOFTware<sw>:PRSStandard` on page 2743

Data edges
Selects the edges of the data stream that are used for the clock recovery.

- "Either": Both positive and negative edges are used.
- "Positive" or "Negative": Only one edge direction is used. Use one of these settings if the other edge delivers unreliable results.

Remote command:
CDR:SOFTware<sw>:ESLope on page 2741

Bit rate estimation/Symbol rate estimation
For NRZ signals, you can do a "Bit rate estimation".

For signals with a "PAM order" > 2, you can do a "Symbol rate estimation".

Bitrate/symbol rate estimation analyzes the source signal based on the given "Nominal bit rate" / "Nominal symbol rate" and corrects the value.

"Cont. estimation"	Enables ongoing bit/symbol rate correction.
"Estimate"	Estimates the bit/symbol rate once, for the current acquisition.

Remote command:
CDR:SOFTware<m>:ESSRate:CONTinuous on page 2741
CDR:SOFTware<sw>:ESSRate:SREStimate on page 2742

Nominal bit rate/ Nominal symbol rate
For NRZ signals, you can set a "Nominal bit rate".

For signals with a "PAM order" > 2, you can do a "Nominal symbol rate".

Sets the quiescent frequency of the PLL. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Remote command:
CDR:SOFTware<sw>:BITRate on page 2740
CDR:SOFTware<sw>:SYMRate on page 2744

Algorithm
Sets the software algorithm that is used for clock data recovery.

"Constant freq."	CDR uses the nominal bit rate to generate the clock signal. The method assumes that the frequency of the signal is constant during the complete acquisition.
"PLL"	PLL is the phase-locked loop control system. It can follow slow deviations in the frequency of the data stream. Thus, it acts as a highpass filter regarding the jitter that remains on the signal.
"PLL (lock at acq. start)"	PLL is the phase-locked loop control system, which is locked at the acquisition start.
"Feed Forward"	The feed-forward algorithm is a mathematical optimization method used for clock data recovery. Feed forward is available if none of the listed serial standards is used ("Serial standard" = "Custom"). It is faster than PLL, i.e., the settling time is shorter. Feed forward is also more precise than PLL. To set up the algorithm, set the bandwidth and the relative bandwidth.

"Feed Forward (lock at acq. start)" Feed-forward algorithm locked at the acquisition start.

Remote command:
CDR:SOFTware<sw>:ALGorithm on page 2739

Clock resync
Enables continuous synchronization of the clock with the data signal. At constant clock frequency without resync, the clock starts at the first detected edge and clocks with the given or estimated bit rate or symbol rate. With synchronization, the clock searches for the next edge and synchronizes to this edge. Thus, the sampling points are not exactly at constant frequency but aligned to the defined edges of the data signal.

Remote command:
CDR:SOFTware<sw>:CFRequency:CRSYnc[:ENABle] on page 2740

Algorithm settings
Phase-locked loop parameters are listed below.

Note: Nomial bit rate, bandwidth and relative bandwidth are interacting settings. Modifying one parameter also changes one of the dependent parameters.

"Order" Sets the order of the PLL: first or second order. PLL of higher order can compensate for more complex jitter behavior.

"Damping" Sets the damping factor, which is only relevant for second order PLL.

"Bandwidth" Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization. The PLL bandwidth is usually defined by the transmission standard.

"Rel. bandwidth" Sets the relative bandwidth, which is the ratio of the nominal bit rate to the PLL bandwidth.

Remote command:
CDR:SOFTware<sw>:PLL:ORDer on page 2742
CDR:SOFTware<sw>:PLL:BWIDth on page 2742
CDR:SOFTware<sw>:PLL:RELBwidth on page 2743
CDR:SOFTware<sw>:PLL:DAMPing on page 2743

Initial phase
Available for "Algorithm" > "PLL".

Defines the phase reference for the first clock edge.

"First sample" The first clock edge matches the first sample of the waveform at the left border of the display.

"First data edge" The first clock edge matches the first edge of the data signal.

Remote command:
CDR:SOFTware<sw>:SYNC on page 2744

Selected results
Available for "Algorithm" > "PLL".

The PLL requires some time to synchronize to the phase of the data stream. You can select when the CDR algorithm returns clock edges:

"After initial sync."	The clock edges of the synchronization time are discarded; results are gathered after initial synchronization of the CDR. Thus, meaningful TIE measurement results can be obtained.
"All"	All clock edges are used.

Remote command:
`CDR:SOFTware<sw>:RESults` on page 2744

19.3.2 Displaying the recovered clock signal

The clock signal that is recovered by CDR can be displayed as a math waveform. The generated waveform is time-correlated to the data waveform.

1. Prerequisite: Configure the CDR method.
2. Press the [Math] key.
3. On the "Setup" tab, select the "Equation" subtab.
4. Double-tap the entry field to open the formula editor.
5. Tap "More", and again "More".
6. Tap "Clear".
7. Tap "CDR" and select the CDR method.
8. Complete the expression:
   SW CDR: e.g., CDR(sw1,Ch1Wfm1)
9. Tap "Enter".
10. Enable the math signal.

20 Advanced eye diagram analysis (option R&S RTP-K136/K137)

The main application of eye diagrams is the analysis of signal integrity and signal quality. In particular, eye diagram analysis is used for serial communication standards, for both high-speed serial protocols (e.g. USB) and low-speed serial protocols (e.g. CAN, FlexRay).

There are two ways to generate eye diagrams on the R&S RTP:

- Standard eye diagrams, which are a superposition of repetitively sampled digital data.
- To use advanced eye diagrams, option R&S RTP-K136/K137 or R&S RTP-K91/K93 is required.

20.1 Calculation and display of advanced eye diagrams

The R&S RTP generates advanced eye diagrams. To build advanced eyes, the oscilloscope acquires a long waveform containing many bits. The instrument uses a clock reference to cut the waveform into slices of 1-bit length, and superimposes the individual slices. The superimposed slices of consecutive bits build the advanced eye. The clock reference defines the position of the individual data bits on the time axis, and so it provides the necessary timing marks to align and superimpose the waveform slices.

On the contrary, the basic R&S RTP without the advanced eye option builds the eye from consecutive acquisitions. The trigger is set in a way that each acquisition is about 1 bit long. With long-persistence display settings, the consecutive acquisitions draw an eye on the screen. The bits that contribute to the eye are always non-consecutive due to the unavoidable oscilloscope's blind time between acquisitions.

The advanced eye approach combines consecutive bits in the eye diagram and does not miss any bit of the acquisition. Advanced eye generation also offers time control over the waveform slices contributing to the eye diagram. For example, you can select the bits contributing to the eye by filtering on dedicated data sequences or by excluding idle sequences.

You can define up to four advanced eye diagrams and configure them independently. Each eye diagram is shown in a separate display diagram, which has its own signal icon. You can move and minimize eye diagrams like any waveform diagram and analyze all eye diagrams in parallel.

The following analysis functions are available for advanced eye diagrams:

- Cursor measurements
- Automatic eye measurements
- Histograms
- Zoom
- Mask testing

20.2 Eye diagram setup

This section describes the configuration of eye diagrams.

The configuration of an eye diagram mainly consists of the selection and setup of the input source and timing reference source. You can also adjust display settings and restrict the segments that contribute to the eye generation by various means.


You can configure and analyze up to four independent eye diagrams in parallel.

The "Eye Diagram" dialog box provides four tabs with all settings that are required to configure eye diagrams.

20.2.1 Basic setup

Access: [Apps]> "Analysis" > "Eye Analysis" > "Setup" tab

In the "Setup" tab, you configure the source, the timing reference, and horizontal scale settings of the eye diagram. The vertical scale of the eye diagram is coupled to the vertical scale of the data source.

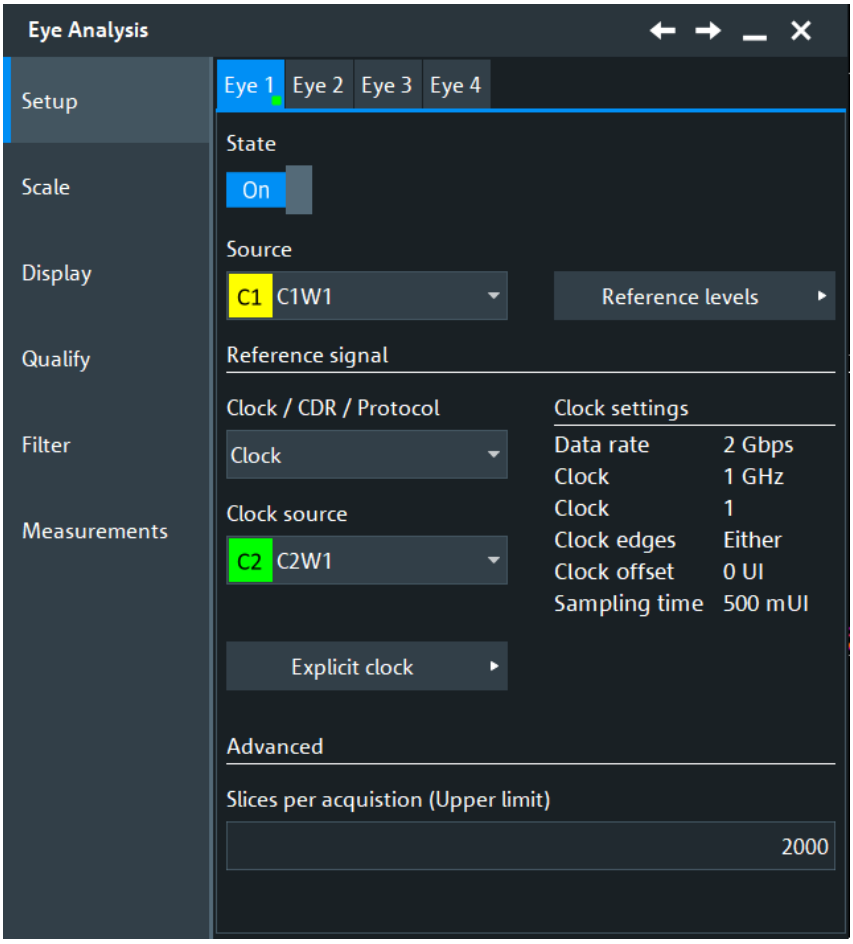

You can configure and analyze up to four independent eye diagrams in parallel (vertical subtabs Eye 1 to Eye 4). Make sure to select the correct eye diagram subtab on the left before you adjust the settings.

State 1159
Source 1159
Reference signal 1159
└ Clock / CDR / Protocol 1159
└ Clock 1160
└ CDR 1160
└ Protocol 1161
Explicit clock 1162
└ Vertical reference level 1162
└ Clock frequency 1162
└ Estimate clock frequency 1163
└ Clock multiplier 1163
└ Clock edge 1163
└ Data rate 1163
└ Clock offset 1163
└ Estimate clock offset 1163
Signal Configuration 1163
Slices per acquisition (Upper limit) 1164

State
Activates or deactivates the eye diagram.

Remote command:
`EYE<e>[:STATe]` on page 2746

Source
Selects the waveform from which the eye diagram is generated (data source). You can select analog channels, reference and math waveforms.

If the source waveform is minimized or hidden, no measurement results for the eye diagram are shown.

Select the same channel for the DDR serial bus protocol configuration "DQ" data line and the input for the eye diagram.

Remote command:
`EYE<e>:SOURce` on page 2746

Reference signal
In this section you can define the reference signal used for the eye diagram.


Clock / CDR / Protocol ← Reference signal
Selects the type of waveform that is used to obtain the timing information required to slice the data source waveform.

Remote command:
`EYE<e>:TIMReference[:SOURce]` on page 2751

Clock ← Reference signal
If a clock signal is available, the instrument can use it directly to set the segmentation timestamps. The signal requires an additional channel.

With "Clock source" you can select the source of the clock signal.

See also Explicit clock.

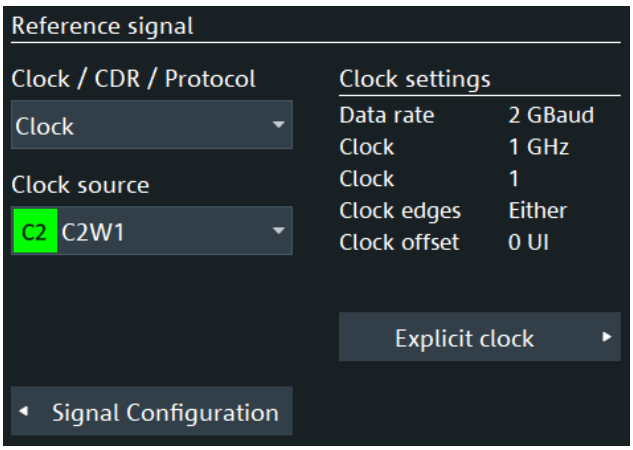

Remote command:
`EYE<e>:TIMReference:CLOCk:SOURce` on page 2750

CDR ← Reference signal
Available, if Trigger Type = "CDR".

Uses a hardware or software clock data recovery as a "Reference source".


You can also load a reference waveform that contains CDR information in the "Menu" > "Save/Recall" > "Recall" > "Waveform" dialog.


The option "Reference source" = "Software CDR 1/2/3/4" is only available if one of the following options is available:

- R&S RTP-K12
- R&S RTP-K133
- R&S RTP-K134
- R&S RTP-K136
- R&S RTP-K137

For "Reference source" = "Hardware CDR", see Hardware CDR trigger.

For "Reference source" = "Software CDR 1/2/3/4", see Software CDR.

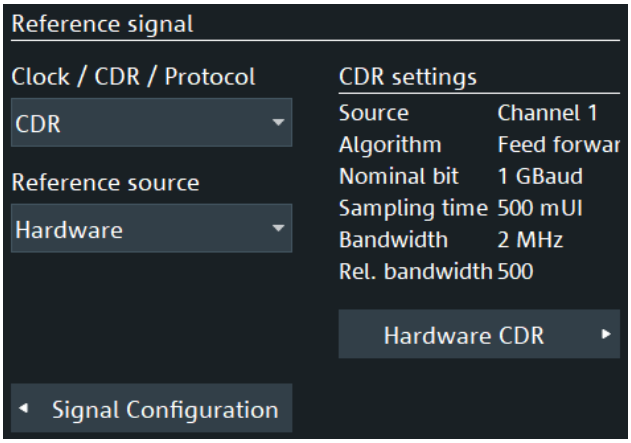

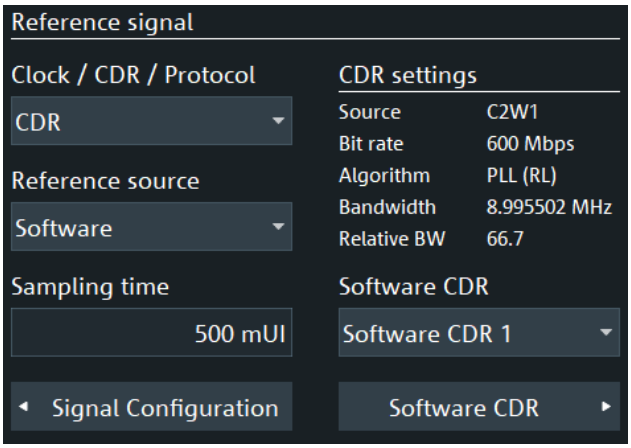


Remote command:
`EYE<e>:TIMReference:CDR[:SELect]` on page 2751
`EYE<m>:TIMReference:CDR:SOFTware` on page 2751
`EYE<e>:TIMReference:CDR:SOFTware:SAMTime` on page 2753
`REFCurve<rc>:CDR:ALGorithm?` on page 1562
`REFCurve<rc>:CDR:BITRate?` on page 1562
`REFCurve<rc>:CDR:BWIDth?` on page 1563
`REFCurve<rc>:CDR:RELBwidth?` on page 1563
`REFCurve<rc>:CDR:SAMTime?` on page 1563

Protocol ← Reference signal
If "Protocol" is selected as the reference type signal, the DDR source signal settings are used for the timing information.


You can select the "Source" of the protocol signal. You can only select the protocols that are enabled.

Also some protocol-specific settings are displayed: "Type", "Bit rate", "Variant".

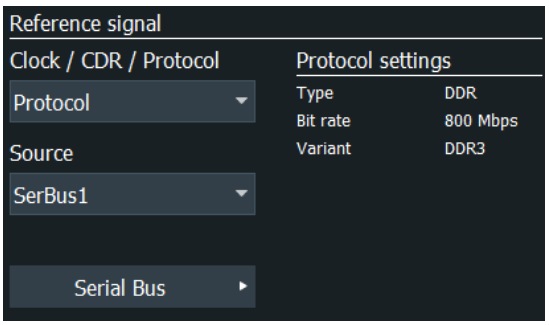

Remote command:
EYE<e>:TIMReference:PROTocol:SELect on page 2751

Explicit clock
Opens a dialog to define the setting of the explicit clock for "Clock / CDR / Protocol" = "Clock".

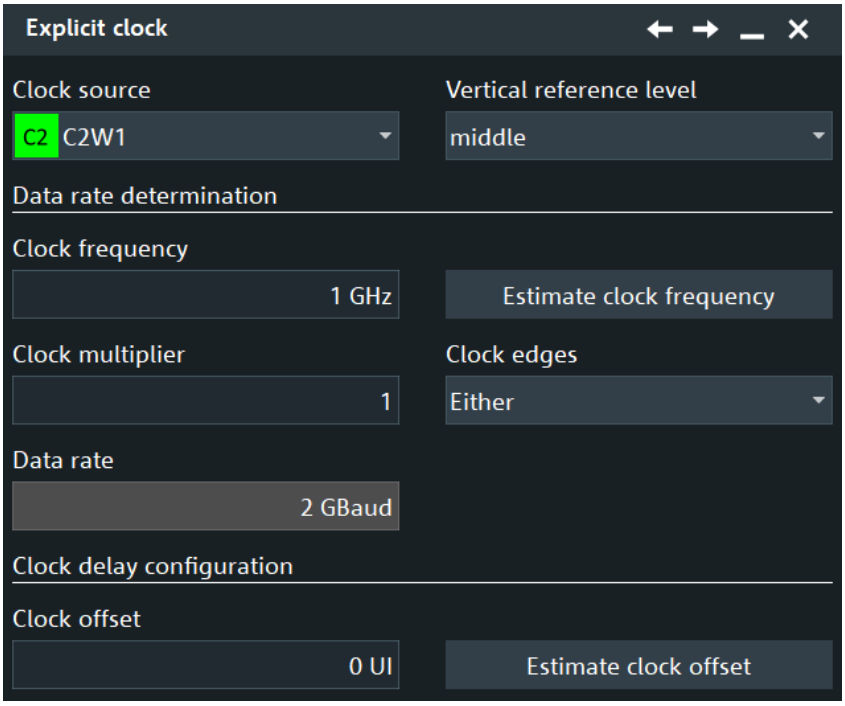

Vertical reference level ← Explicit clock
Sets the reference level to define the timestamps for slicing the data waveform. A timestamp is set each time when the selected slope of the timing waveform crosses the selected reference level.

Remote command:
EYE<e>:TIMReference:CLOCk:LEVel on page 2749

Clock frequency ← Explicit clock
Sets the clock frequency of the explicit clock signal. If this value is unknown, you can use "Estimate clock frequency".

Remote command:
EYE<e>:TIMReference:CLOCk:FREQuency on page 2749

Estimate clock frequency ← Explicit clock
Calculates an estimate value for the clock frequency.

Remote command:
EYE<e>:TIMReference:CLOCk:FREStimation on page 2749

Clock multiplier ← Explicit clock
Sets a value for the clock multiplier, the ratio of an internal clock rate to the externally supplied clock.

Remote command:
EYE<e>:TIMReference:CLOCk:FACTor on page 2748

Clock edge ← Explicit clock
The clock edge sets the point in time when the state of the data signal is checked:

"Positive" Rising edge, a positive voltage change.

"Negative" Falling edge, a negative voltage change.

"Either" Both the rising and the falling edge.

Remote command:
EYE<e>:TIMReference:CLOCk:EDGE on page 2748

Data rate ← Explicit clock
Displays the calculated data rate. It is calculated as follows:

*"Data rate" = "Clock frequency" * "Clock multiplier"*X*

Where *X* is:

- 1 for "Clock edge"= "Positive" or "Negative"
- 2 for "Clock edge"= "Either"

Remote command:
ADVJitter<m>:SIGNal:DATRate? on page 2699

Clock offset ← Explicit clock
Sets a clock offset. If this value is unknown, you can use "Estimate clock offset".

Remote command:
EYE<e>:TIMReference:CLOCk:OFFSet on page 2750

Estimate clock offset ← Explicit clock
Calculates an estimate value for the clock offset.

Remote command:
EYE<e>:TIMReference:CLOCk:OFEStimation on page 2750


Signal Configuration
Opens the dialog for configuring the signal lanes, see Section 13, "Signal configuration", on page 535.

Slices per acquisition (Upper limit)
Sets the number of waveform slices for a single acquisition.

Remote command:
`EYE<e>:MSLices` on page 2754

20.2.2 Scale settings

Access: [Apps]> "Analysis" > "Eye Analysis" > "Scale" tab.

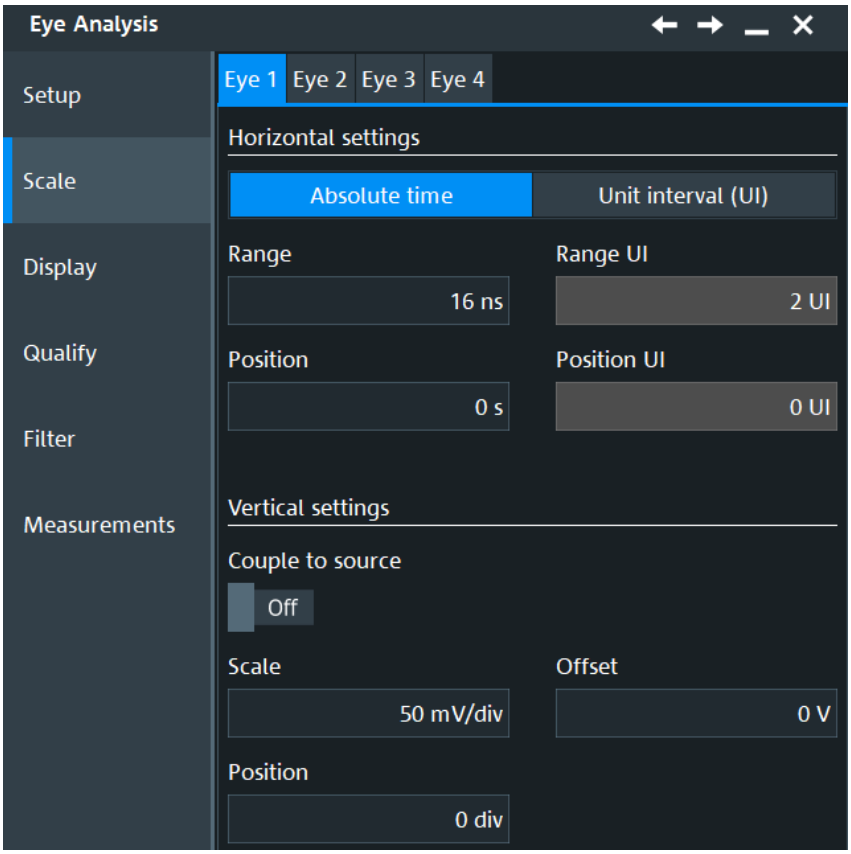

Horizontal settings
Defines the horizontal settings for the eye analysis.

Time units ← Horizontal settings
Sets the method to define the horizontal scale of the eye diagram: as absolute time, or in unit intervals. You can use a unit interval, if the nominal frequency of the clock signal is known.

Indirectly, the horizontal scale determines the size of one waveform slice. The waveform slice must be fully contained in the waveform acquisition to contribute to the eye diagram.

The time units value effects the following parameters:

- The units of the "Eye diagram".
- Setup tab of the cursor measurements on "Eye diagram".

- Parameters of the eye measurement: "Eye width".
- Masks tests: user and eye
- Histogram: horizontal Histogram setup.
- "Settings" > "Appearance" > "Annotations" > "X position".

Remote command:
EYE<e>:HORizontal[:UNIT] on page 2746

Range, Position ← Horizontal settings
Available for Time units = "Absolute time"

Define the horizontal scale in absolute time.

"Range" Time range that is covered by the eye diagram.

"Position" Place of the zero point in the diagram, in seconds. The zero point is the alignment point on which the slice timestamps are superimposed.

Remote command:
EYE<e>:HORizontal:ABSolute:RANGe on page 2747
EYE<e>:HORizontal:ABSolute:POSition on page 2747

Range UI, Position UI ← Horizontal settings
Available for Time units = "Unit interval (UI)"

Define the horizontal scale in unit intervals. A unit interval typically corresponds to a bit in the input data signal.

"Range UI" Number of unit intervals that are visible in the eye diagram.

"Position UI" Place of the zero point in the diagram, in unit intervals. The zero point is the alignment point on which the segment timestamps are superimposed.

Remote command:
EYE<e>:HORizontal:UINTerval:RANGe on page 2748
EYE<e>:HORizontal:UINTerval:POSition on page 2748

Vertical settings
Defines the horizontal settings for the eye analysis.

Couple to source ← Vertical settings
If enabled, the vertical position and scale of the source are used.

Remote command:
EYE<e>:VERTical:COUPle on page 2753

Scale ← Vertical settings
Defines the vertical scale in Volts per division. Increasing the scale compresses the display of the signal.

Remote command:
EYE<e>:VERTical:SCALe on page 2753

Offset ← Vertical settings
The offset voltage is subtracted to correct a signal with DC offset. The vertical center of the selected channel is shifted by the offset value and the signal is repositioned within the diagram area. Negative offset values move up the waveform, positive values move it down.

Remote command:
`EYE<e>:VERTical:OFFSet` on page 2752


Position ← Vertical settings
Moves the selected signal up or down in the diagram. The visual effect is the same as for "Offset" but the waveform is adjusted later in the signal flow. While the offset sets a voltage, position is a graphical setting given in divisions.

Remote command:
`EYE<e>:VERTical:POSition` on page 2752

20.2.3 Display settings

Access: [Apps]> "Analysis" > "Eye Analysis" > "Display" tab

In the "Display" tab, you define the appearance of the individual eye diagrams.

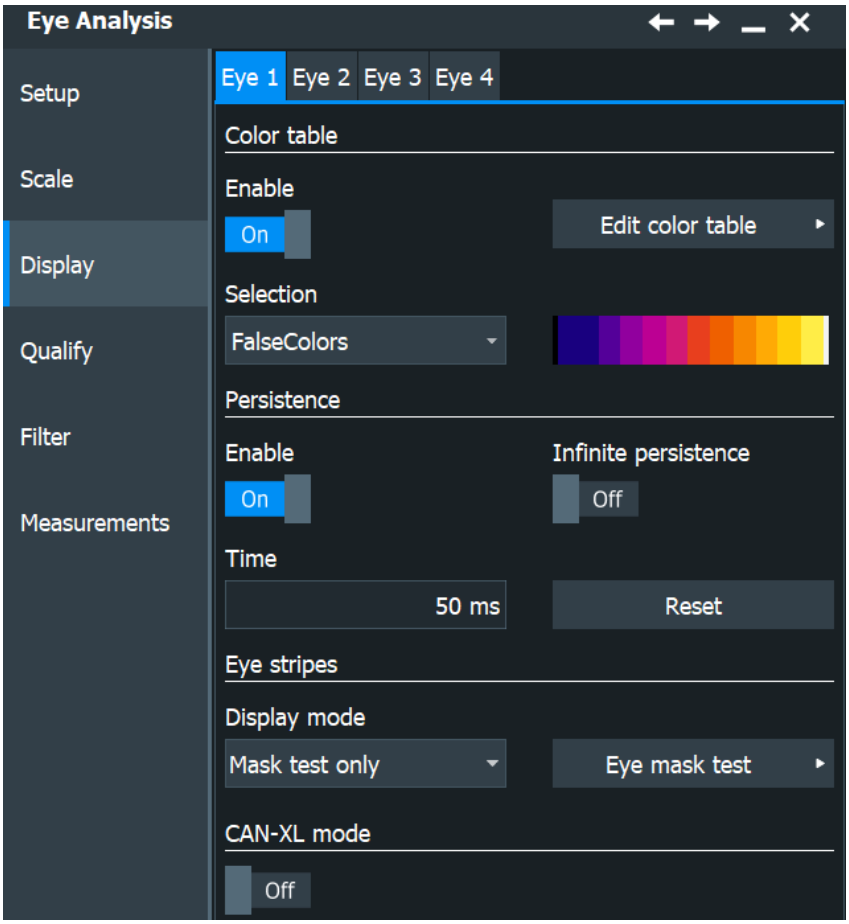

You can configure and analyze up to four independent eye diagrams in parallel (vertical subtabs Eye 1 to Eye 4). Make sure to select the correct eye diagram subtab on the left before you adjust the settings.

Color table
Like any other waveform, you can show the eye waveform in solid color, or apply a color table.

For a description of the color table settings, see Section 4.3.2, "Color tables", on page 80.

Persistence
Each eye diagram has its specific persistence settings, independent of the general waveform persistence.

The persistence settings influence the way that the "Wave Count" and "Event Count" statistics on eye measurements are calculated:

- If "Enable" and "Infinite persistence" are disabled:
  - "Wave Count": for every image used in an eye measurement, sums up the number of acquisitions that contributed to the advanced eye image.
  - "Event Count": the number of UIs of images with successful eye measurement.
- If "Infinite persistence" is enabled:
  - "Wave Count": the number of acquisitions that contributed to the last advanced eye image used in an eye measurement.
  - "Event Count": the number of UIs of the last advanced eye image with successful eye measurement.

Enable ← Persistence
If enabled, each new data point in the diagram area remains on the screen for the duration that is defined using Time, or as long as Infinite persistence is selected.

If disabled, the waveform points are displayed only for the current acquisition.

Remote command:
`EYE<e>:DISPlay:PERSistence:STATe` on page 2755

Infinite persistence ← Persistence
If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled. Use infinite persistence to display rare events in the signal.

Remote command:
`EYE<e>:DISPlay:PERSistence:INFinite` on page 2755

Time ← Persistence
Sets a time factor that controls how long the waveform points fade away from the display. Thus, the R&S RTP emulates the persistence of analog phosphor screens.

Remote command:
`EYE<e>:DISPlay:PERSistence:TIME` on page 2756

Reset ← Persistence
Resets the display, removing all waveform points.

Remote command:
EYE<e>:DISPlay:PERSistence:RESet on page 2755

Display mode
Defines when the eye stripe is shown: always, never, or during mask tests.

The eye stripe is shown at the bottom of the main source waveform. It shows the part of the waveform that contributes to the eye. When a mask test is performed on the eye diagram, the eye stripe shows the position of the mask violations in red color.




Remote command:
EYE<e>:DISPlay:MODE on page 2754

CAN-XL mode
Enables multiple eye overlapping for more precise software CDR.

20.2.4 Qualify settings

Access: [Apps]> "Analysis" > "DDR Eye" > "Qualify" tab

Using the qualification settings, you can restrict the slices that contribute to the eye diagram. The restriction can be in horizontal direction (gate), or in vertical direction using the reference level.

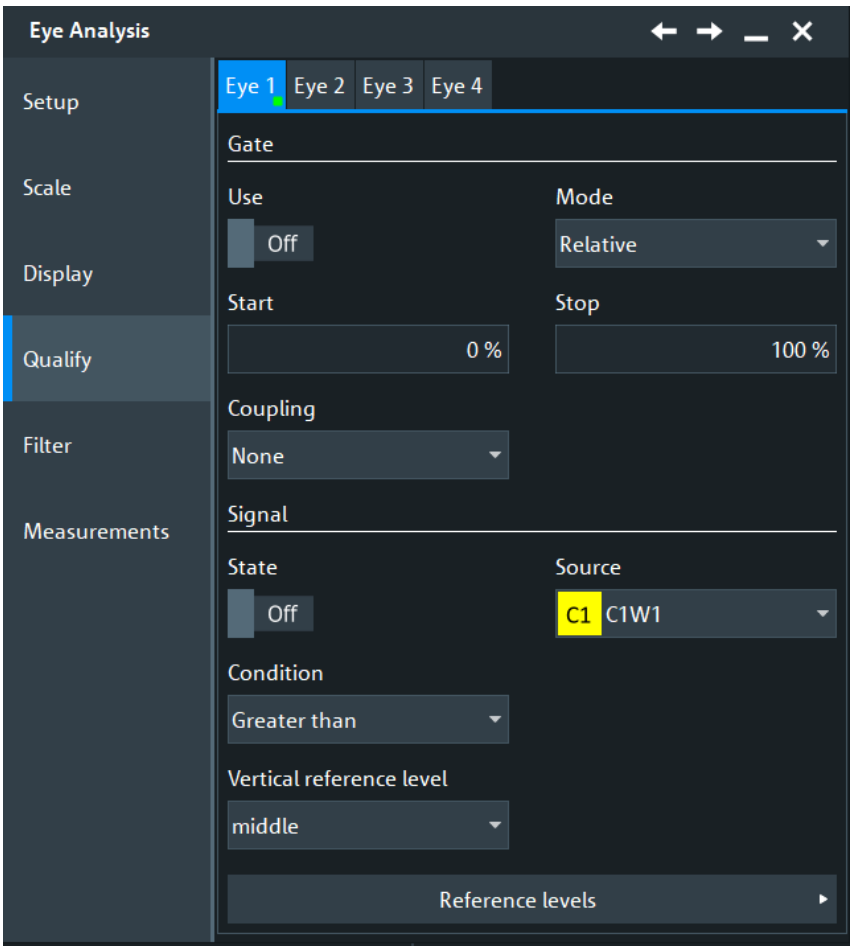

You can configure and analyze up to four independent eye diagrams in parallel (vertical subtabs Eye 1 to Eye 4). Make sure to select the correct eye diagram subtab on the left before you adjust the settings.

Gate

Restricts the contributing slices in horizontal direction. Only the timestamps within the defined horizontal interval qualify for eye generation.

To apply the gate settings, enable the "State".

The gate definition is the same as the gate definition for measurements, but the gates are independent. You can define the gate in one of these ways:

- Enter absolute time values for gate start and gate end: "Coupling mode = None" and "Mode = Absolute". Set "Start" and "Stop" time.
- Enter relative values for gate start and gate end: "Coupling mode = None" and "Mode = Relative". Set "Relative start" and "Relative stop" in percent.
- If a cursor measurement is active, you can use the vertical cursor lines as gate limits: "Coupling mode = Cursor". Select the cursor set.
- If a zoom is active, you can use the zoom limits as a gate: "Coupling mode = Zoom". Select the zoom.

Remote command:
EYE<e>:QUALify:GATE[:STATe] on page 2756
EYE<e>:QUALify:GATE:COUPling on page 2756
EYE<e>:QUALify:GATE:MODE on page 2757
EYE<e>:QUALify:GATE:ABSolute:STARt on page 2757
EYE<e>:QUALify:GATE:ABSolute:STOP on page 2757
EYE<e>:QUALify:GATE:RELative:STARt on page 2757
EYE<e>:QUALify:GATE:RELative:STOP on page 2757
EYE<e>:QUALify:GATE:CURSor on page 2758
EYE<e>:QUALify:GATE:ZDIagram on page 2758

Signal
Sets a waveform-based qualification for the eye generation. The voltage level of a waveform is compared with a threshold, and only if this condition is fulfilled, the slices contribute to the eye generation.

State ← Signal
Applies the signal qualification.

Remote command:
EYE<e>:QUALify:SIGNal[:STATe] on page 2759

Source ← Signal
Selects the waveform to be compared.

Remote command:
EYE<e>:QUALify:SIGNal:SOURce on page 2759

Condition ← Signal
Selects the comparison condition for the waveform.

Remote command:
EYE<e>:QUALify:SIGNal:CONDition on page 2759

Vertical reference levels ← Signal
Selects one threshold for the conditions "Less than" and "Greater than". For the conditions "In range" and "Out of range", two thresholds are needed: one for the vertical range start and the second for the end of the range.

You can use the lower, middle, or upper reference level. These levels are the reference levels that are defined for measurements.

Remote command:
EYE<e>:QUALify:SIGNal:LSELect on page 2760
EYE<e>:QUALify:SIGNal:LSLTo on page 2760

Reference levels
Opens the reference level dialog. For details, see Section 13.3, "Signal and reference levels for NRZ signals", on page 539.

20.2.5 Filter settings for NRZ signals

Access: [Apps]> "Analysis" > "DDR Eye" > "Filter" tab

Filter settings allow you to select waveform slices for eye generation dependent on the bit status.

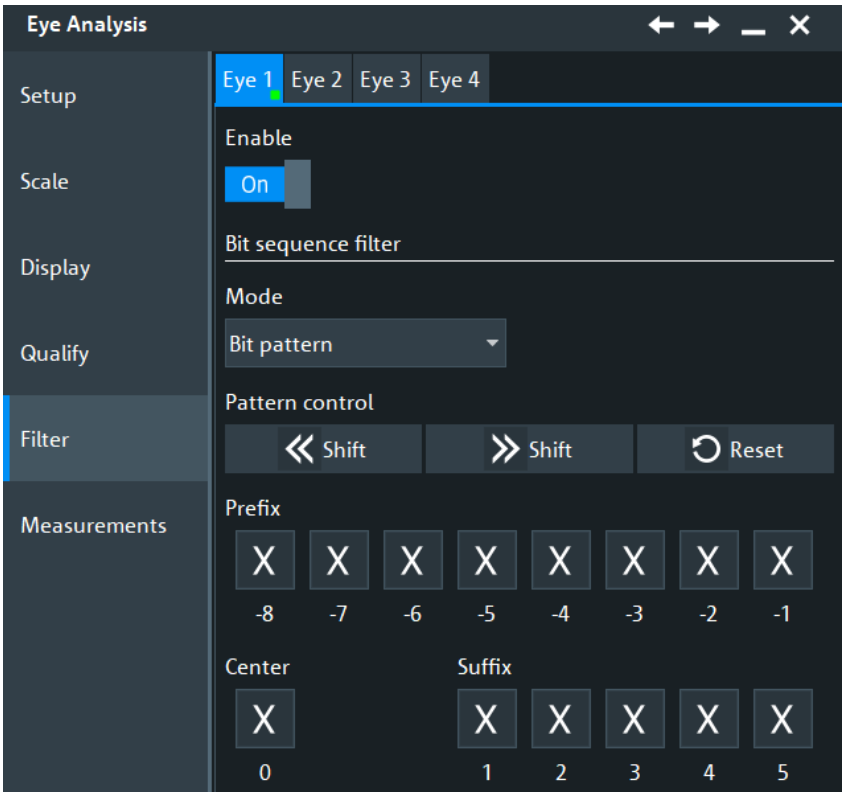


Figure 20-1: Filter settings for NRZ signals

You can configure and analyze up to four independent eye diagrams in parallel (vertical subtabs Eye 1 to Eye 4). Make sure to select the correct eye diagram subtab on the left before you adjust the settings.

Enable
Applies the filter settings.

Remote command:
`EYE<e>:FILTer:STATe` on page 2761

Mode
Selects which bits contribute to the eye generation.

"All bits"	All bits contribute to the eye diagram, same as "State" = off.
"Transition bits"	Only bits after a signal transition contribute (0 to 1, or 1 to 0).
"Non-transition bits"	Only bits without a preceding signal transition contribute (0 to 0, or 1 to 1).

"Bit pattern" Only bits contribute that match the defined pattern before and after the center eye. Use the bit pattern, for example, to measure the effect of data-dependent jitter on the eye diagram.

Remote command:
EYE<e>:FILTer:BPATtern:MODE on page 2761

Pattern
Defines the bit pattern if "Mode" = "Bit pattern". You can set up to 8 bits before and 5 bits after the center eye (reference bit).


Remote command:
EYE<e>:FILTer:BPATtern:PREFix<n> on page 2762
EYE<e>:FILTer:BPATtern:CENTer on page 2762
EYE<e>:FILTer:BPATtern:SUFFix<n> on page 2762

Pattern control
Shift the pattern bit by bit to the left or to the right, and reset to the default (X for all bits).

Remote command:
EYE<e>:FILTer:BPATtern:SLEFt on page 2762
EYE<e>:FILTer:BPATtern:SRIGht on page 2762
EYE<e>:FILTer:BPATtern:RESet on page 2762

20.2.6 Protocol filter settings

This setting is only available if the Source is set to "SBx" and the "DDR" serial bus analysis is enabled for the same bus.

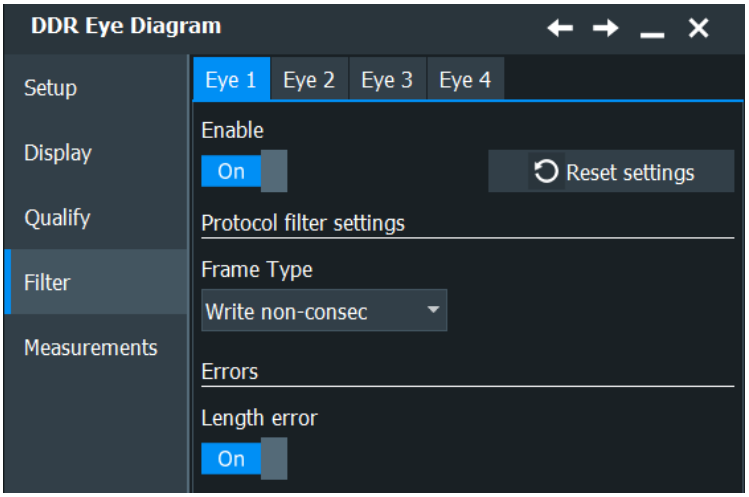

You can configure and analyze up to four independent eye diagrams in parallel (vertical subtabs Eye 1 to Eye 4). Make sure to select the correct eye diagram subtab on the left before you adjust the settings.

Reset settings
Resets the current filter settings.

Remote command:
EYE<e>:FILTer:RESet on page 2763

Frame Type
Selects which frame types contribute to the eye diagram, write frames, read frames or any of them.

Remote command:
EYE<e>:FILTer:DDR:FTYPe on page 2763

Length Error
If enabled, the length errors contribute to the eye diagram.


Remote command:
EYE<e>:FILTer:DDR:LENerror on page 2763

20.2.7 Filter settings for PAM-N signals

Requires option R&S RTP-K135.

Access: [Apps]> "Analysis" > "Eye Analysis" > "Filter" tab


These settings are only available for signals with "PAM order" > 2, see Technology and serial standard properties.

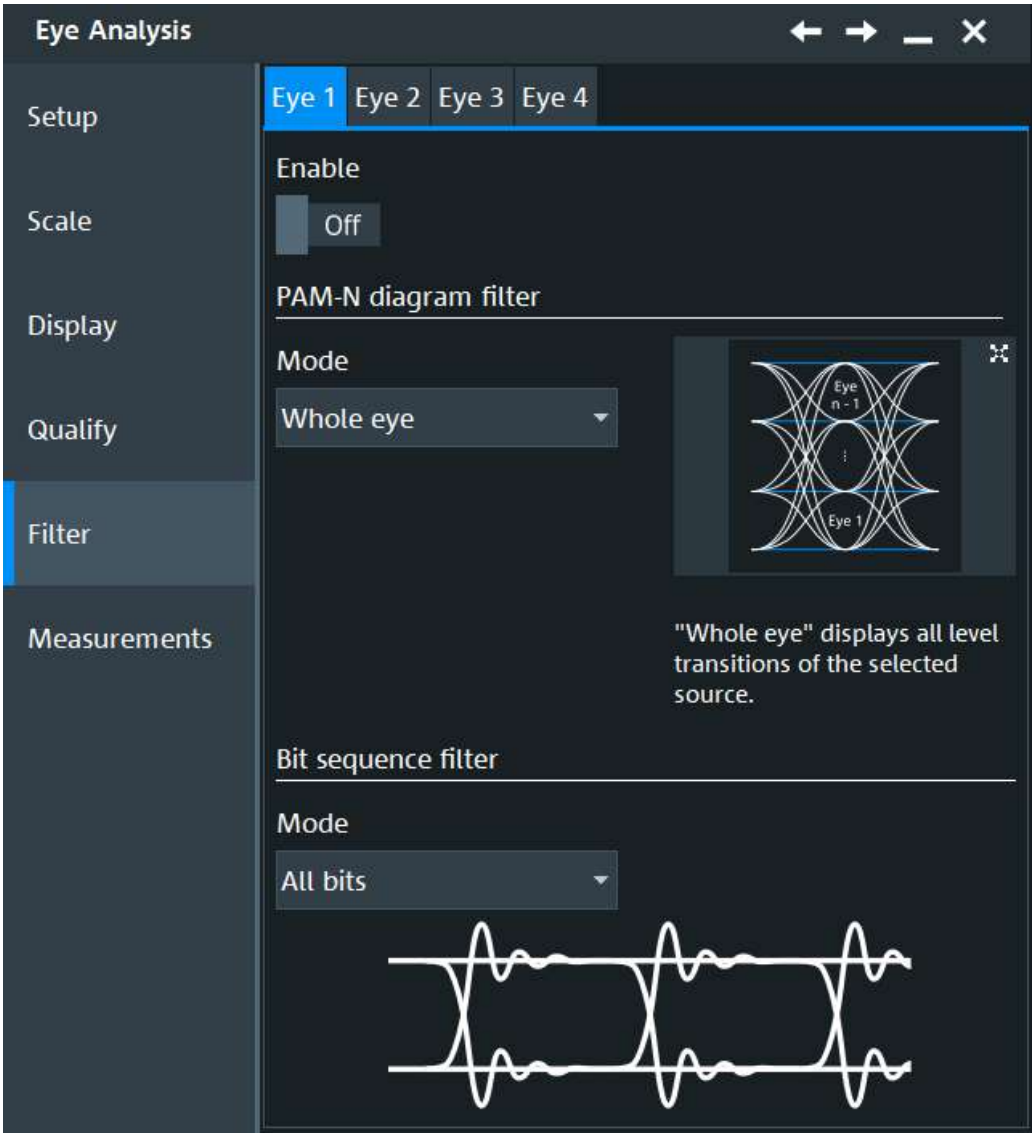



You can configure and analyze up to four independent eye diagrams in parallel (vertical subtabs Eye 1 to Eye 4). Make sure to select the correct eye diagram subtab on the left before you adjust the settings.

PAM-N diagram filter mode
Selects which part of the signal is used to build the eye.


"Whole eye" Displays all level transitions of the selected source.

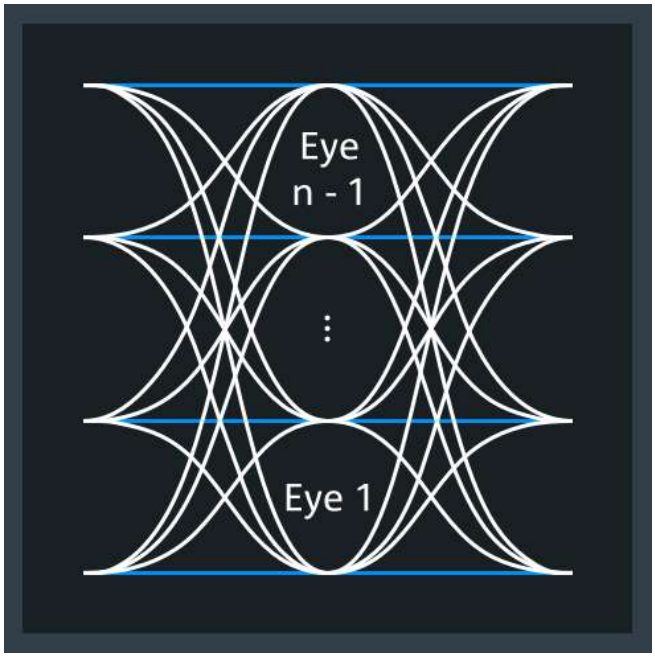


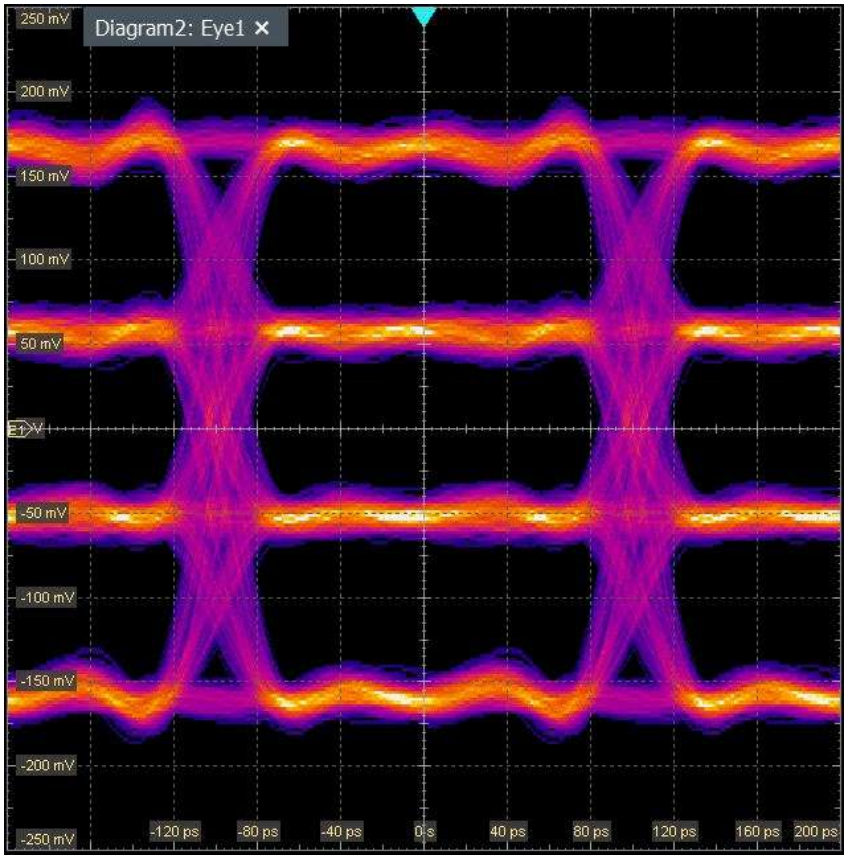


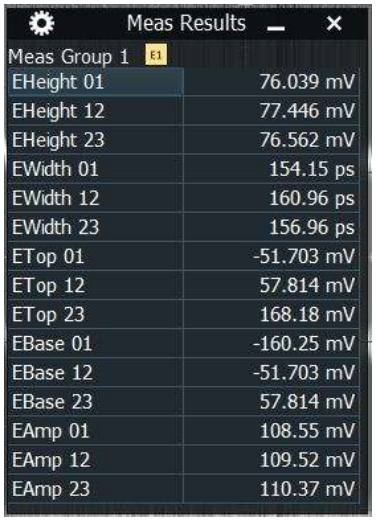
Meas Results
Meas Group 1
E1
EHeight 01 76.039 mV
EHeight 12 77.446 mV
EHeight 23 76.562 mV
EWidth 01 154.15 ps
EWidth 12 160.96 ps
EWidth 23 156.96 ps
ETop 01 -51.703 mV
ETop 12 57.814 mV
ETop 23 168.18 mV
EBase 01 -160.25 mV
EBase 12 -51.703 mV
EBase 23 57.814 mV
EAmp 01 108.55 mV
EAmp 12 109.52 mV
EAmp 23 110.37 mV


"Specific eye" Displays an explicit eye opening (e.g. for level transition 1-2) with all involved level transitions. You can select the eye with "Eye selection".

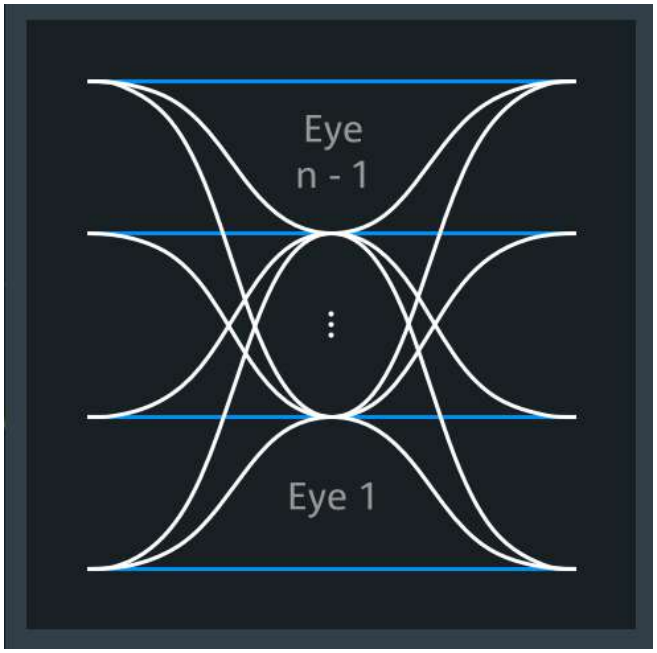


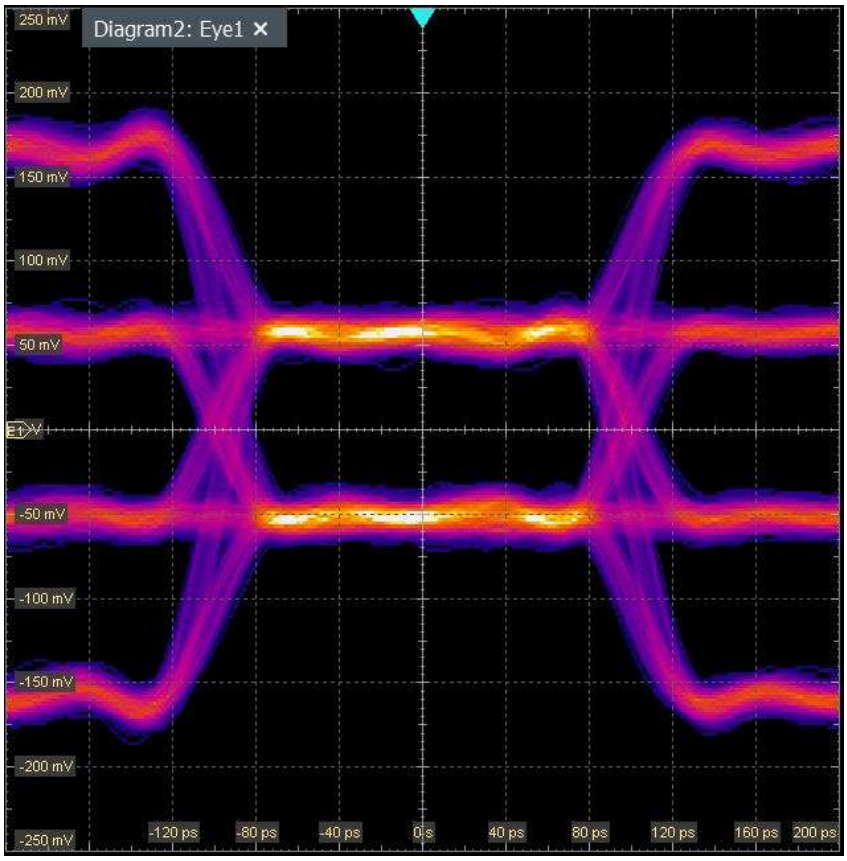


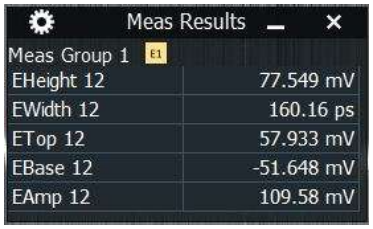
Meas Results
Meas Group 1
E1
EHeight 12
77.549 mV
EWidth 12
160.16 ps
ETop 12
57.933 mV
EBase 12
-51.648 mV
EAmp 12
109.58 mV

"Selected eye" Displays an explicit eye opening (e.g. for level transition 1-2) with only its own level transitions. You can select the "Base level" and the "Target level".

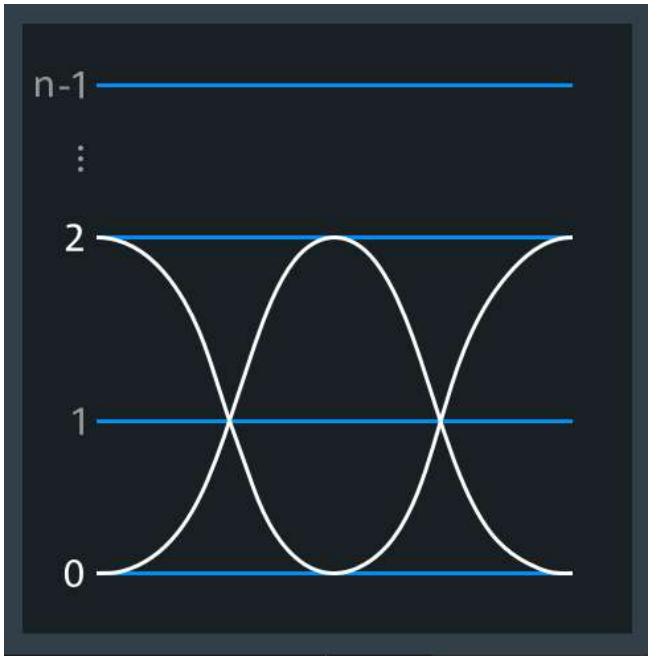

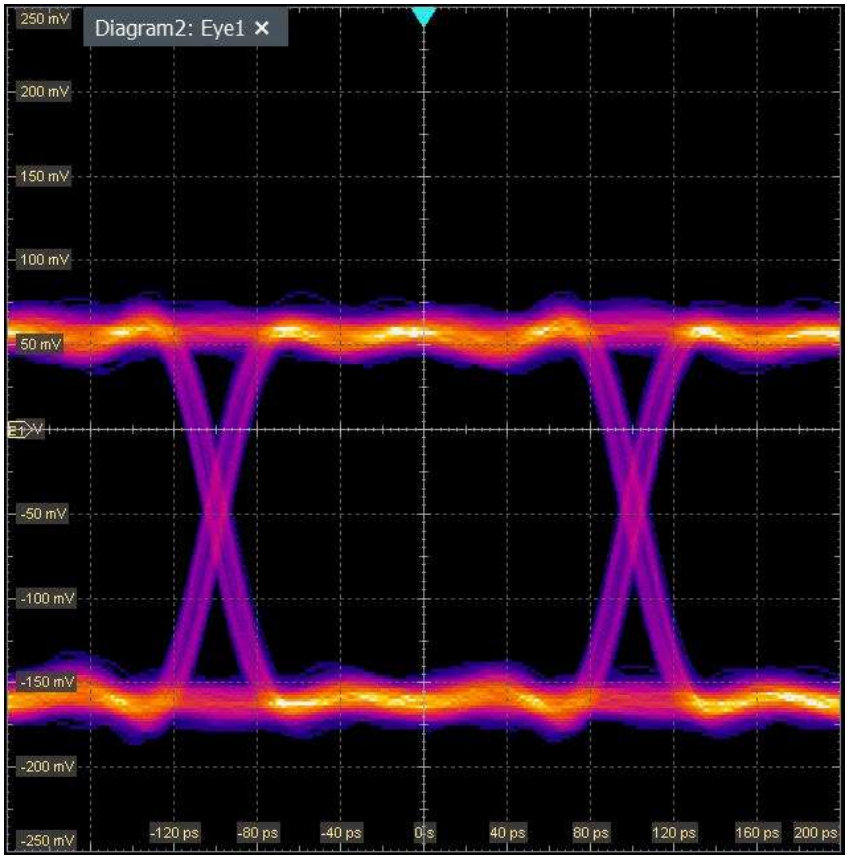

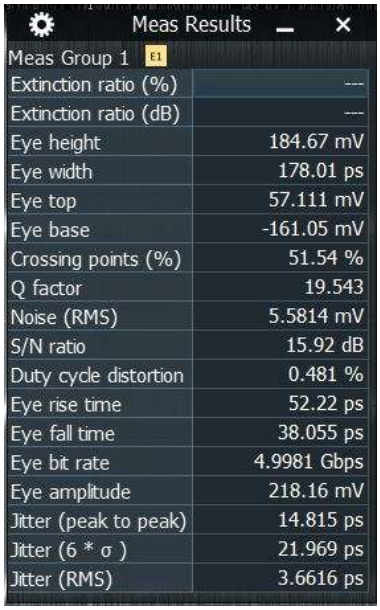

Remote command:
`EYE<e>:FILTer:PAMN:EMODe` on page 2764
`EYE<e>:FILTer:PAMN:SEYE` on page 2764
`EYE<e>:FILTer:PAMN:BLEVel` on page 2764
`EYE<e>:FILTer:PAMN:TLEVel` on page 2765


Mode
Selects which bits contribute to the eye generation.

"All bits"	All bits contribute to the eye diagram, same as "State" = off.
"Transition bits"	Only bits after a signal transition contribute (0 to 1, or 1 to 0).
"Non-transition bits"	Only bits without a preceding signal transition contribute (0 to 0, or 1 to 1).

Remote command:
`EYE<e>:FILTer:BPATtern:MODE` on page 2761

20.2.8 Measurements settings

Access: [Apps]> "Analysis" > "DDR Eye" > "Measurement" tab

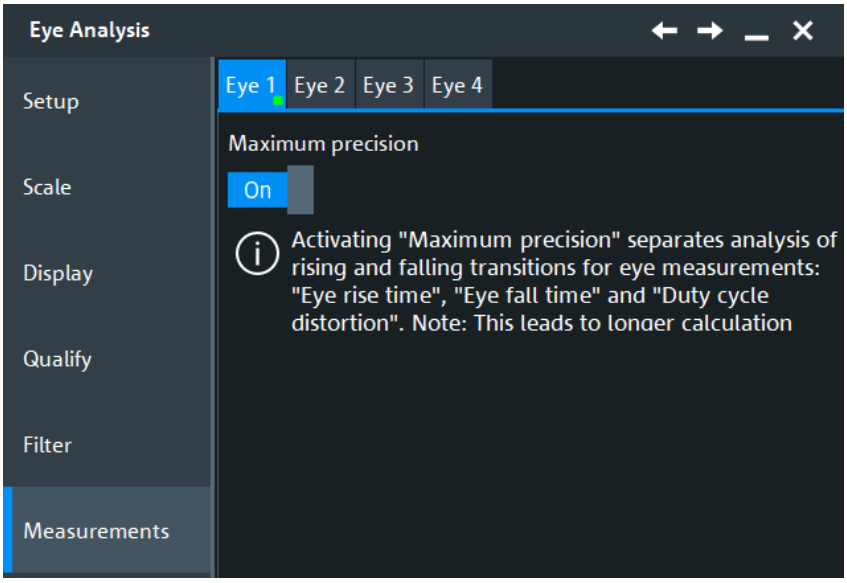

Maximum precision
If this function is enabled, the rising and falling transitions for the eye measurements "Eye rise time", "Eye fall time" and "Duty cycle distortion" are separated. This separation leads to longer calculation times.

See also: Section 8.2.3, "Eye diagram measurements", on page 360.

Remote command:
`EYE<e>:MEASurement:MAXPrecision` on page 2752

20.3 Measurements and zoom on eye diagrams

To analyze eye diagrams, you can use the following basic functions of the R&S RTP:

- **Cursor measurements**
  Cursors can be used on eye diagrams in the usual way. "Track waveform" is not supported.
  For details, see Section 8.1, "Cursor measurements", on page 321.
- **Automatic eye measurements**
  Eye measurements can be used on advanced eye diagrams in the usual way.
  For details, see Section 8.2.3, "Eye diagram measurements", on page 360.
- **Histograms**
  You can create histograms on eye diagrams as usual.
  For details, see Section 8.2.6, "Histogram measurements", on page 375.
- **Zoom**
  You can zoom into eye diagrams using the zoom functions.
  For details, see Section 7.1, "Zoom", on page 266.

20.4 Mask Testing on Eye Diagrams

Mask testing on eye diagrams allows you to test data signals against eye shapes that are required in the standards.

You can select the shape of the eye, enter its dimensions and position the eye on the display. For mask configuration details, see Section 10.2.2, "Mask definition", on page 440. The fail criteria for the test is defined as usual for R&S RTP mask tests, see Section 10.2.3, "Define Test", on page 447.

The eye mask definition cannot be saved as a mask test. You can save the settings as user defined preset and recall them by loading the preset file. See: Section 4.6, "Preset setup", on page 102.

21 Deembedding (option R&S RTP-K121/-K122)

Deembedding removes the parasitic effects of the measurement setup from the measured signal. A simple measurement setup consists of a probe only, but more complex setups include also cables, fixtures and other components. The effects of these components on the measurement are typically increased when the signal frequency increases. Thus, deembedding is useful or even necessary when measuring signals of 4 GHz frequency or higher. Furthermore, you can virtually move the measurement point to a point in a circuit that cannot be reached by probing. In this case, the effects of the components between the real and ideal probe are deembedded.

The components of a measurement setup are usually multiports, and each multiport can be described by a scattering matrix. The elements of a scattering matrix are the S-parameters. The S-parameters of a multiport are usually measured using vector network analyzers (VNA), and they are saved in Touchstone files.

The R&S RTP also can measure probes and cables and determine their S-parameters. These components are called proven probe or proven cable, and their characteristics are saved in `*.rs2p` files. The measurements require the hardware option R&S RTP-B7. For a proven probe, also the R&S RT-ZF30 probe test fixture is needed.

From the S-parameters of the measurement components, the deembedding option determines the transfer function for the measurement setup. Based on the transfer function, filter coefficients are calculated, and the filter is applied to the measured signal.

Option R&S RTP-K121 realizes the deembedding process in software. As the process requires some time, triggering on the corrected signal is not possible, and the acquisition rate decreases.

Option R&S RTP-K122 realizes the deembedding process in hardware. This process is fast, so you can trigger on the corrected signal, and the acquisition rate remains unchanged. However, deembedding by hardware is typically less precise but the accuracy is sufficient for most measurements.

21.1 Configuring the measurement setup for deembedding

The R&S RTP provides an easy way to model the measurement setup on the instrument, and to enter the characteristics of the components. If you use an R&S RT-ZM, R&S RT-ZD or R&S RT-ZS probe with Rohde & Schwarz interface, the setup is easy: The probe is recognized by the oscilloscope, and the oscilloscope knows the characteristics of the probe components.

Before you start, you need to know the following:

- Probing method: probing or terminating
- S-parameter files of the components of the measurement setup (Touchstone files).

S-parameters can be listed as complex numbers (real and imaginary parts), or as magnitude and phase in the order of increasing frequency. The phase unit has to be degree (°).

Proceed as follows:


1. Select [Apps] > "Analysis".
2. Select "Deembedding".
3. Select the input channel to which the measurement setup is connected.
4. Add the components of the measurement setup:
   a) Tap the "+" icon.
   b) Select the component type.

   The component is added to the setup, and it is disabled by default (bypassed). The DUT and a probe or other input component are included by default.
5. Configure each component:
   a) Tap the "Configure" button.
   b) Enter the settings as required.
   All settings are described in Section 21.2, "Deembedding settings", on page 1184.
   c) If necessary, tap "Open" and load the S-parameters from the file.
   As long as the configuration is incomplete or conflicting, the message "Invalid configuration" is shown.
   d) Enable the component to consider it during deembedding.
   e) Tap the subtab of the next component, and configure it in the same way.
6. On the "Setup" tab, set the Effective bandwidth and the Delay compensation.
7. Enable the deembedding.
8. If you want to keep the configuration for later use, save it to a file.

21.2 Deembedding settings

21.2.1 Measurement setup

In the "Deembedding" > "Setup" tab, you add all components of the measurement setup and define all settings that are related to the complete path.

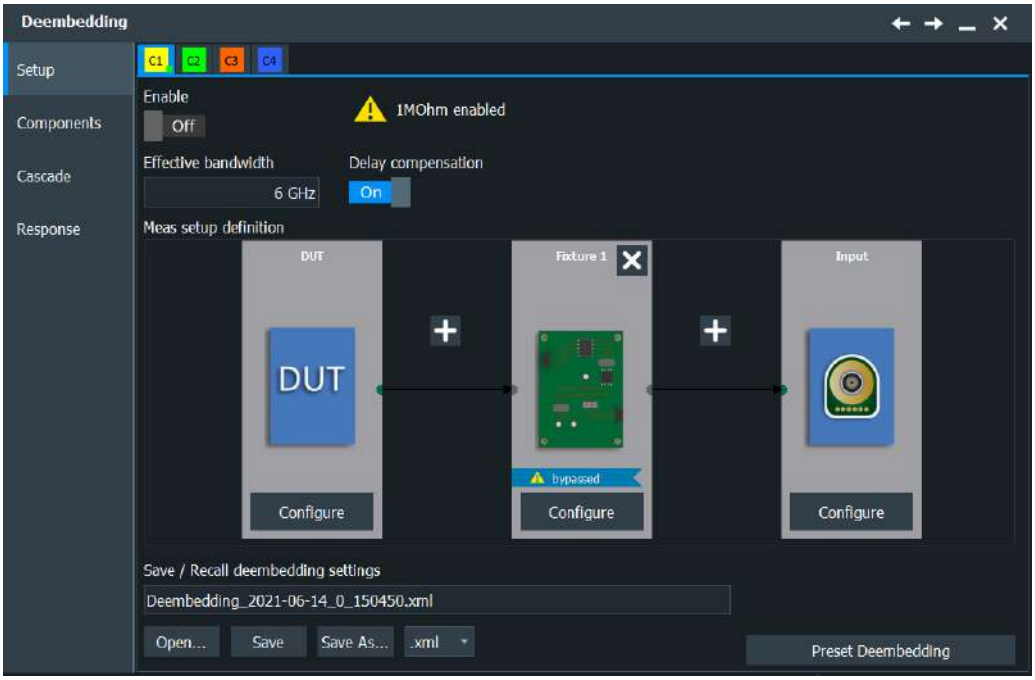

Enable
Activates the deembedding - the correction of parasitic effects of the measurement setup on the measured signal.

Remote command:
`DEEMbedding<de>[:STATe]` on page 2770

Effective bandwidth
Sets the maximum bandwidth until which the signal is corrected. This maximum value is the minimum bandwidth value of the probe bandwidth, tip module bandwidth (R&S RT-ZM) and oscilloscope bandwidth. The value cannot be higher than the highest frequency in a used S-parameter file. The setting is also coupled with the digital filter bandwidth if the cutoff frequency of the digital filter is at least 1 GHz.

Remote command:
`DEEMbedding<de>:BANDwidth` on page 2772

Delay compensation
Enables the compensation for the group delay of the complete measurement setup. If enabled, the calibration time reference point is the start point of the measurement setup. If disabled, the calibration time reference point is the oscilloscope's channel input.

Remote command:
`DEEMbedding<de>:CMPDelay` on page 2772

Realtime deembedding
Requires real-time extension option R&S RTP-K122.

If enabled, the deembedding calculation is done by the hardware in real time. You can trigger on the corrected signal, and the acquisition rate remains unchanged.

If disabled, the deembedding calculation is done by software. This method is slower, therefore, triggering on the corrected signal is not possible.

Remote command:
DEEMbedding<de>:REALtime on page 2771

Meas setup definition
Defines the components in the signal path to be deembedded.

To add a component, tap the **+** icon and select the component type, for example, cable, fixture, adapter, proven probe, others ("Custom"). The DUT component is always included in the deembedding. Also, a connected R&S RT-ZM, R&S RT-ZD or R&S RT-ZS probe with Rohde & Schwarz interface is automatically recognized and included in the deembedding.

The remark "bypassed" indicates that the component is disabled and not considered in the deembedding calculation as long as it is not configured correctly.

Remote command:
DEEMbedding<de>:ADD on page 2770
DEEMbedding<de>:REMove on page 2771
DEEMbedding<de>:CCOunt? on page 2771

Save / recall deembedding settings
Saves the complete deembedding configuration, or loads a saved deembedding configuration. The file format is XML.

To save the deembedding configuration, enter a filename and tap "Save". Alternatively, tap "Save as" to open the file selection dialog box, see Section 12.6, "File selection dialog", on page 529.

To load a deembedding configuration, tap "Open" and select the required file.

Remote command:
DEEMbedding<de>:NAME on page 2773
DEEMbedding<de>:SAVE on page 2773
DEEMbedding<de>:OPEN on page 2774
DEEMbedding<de>:DELete on page 2774


Preset Deembedding
Sets the complete deembedding configuration to the default values.

Remote command:
DEEMbedding<de>:PRESet on page 2773

21.2.2 Common settings for components

The "Components" tab has several subtabs to configure each component of the measurement setup that was defined on the "Setup" tab.

Settings that are available on all subtabs are described in this section. Other settings are component-specific and explained in the following sections.

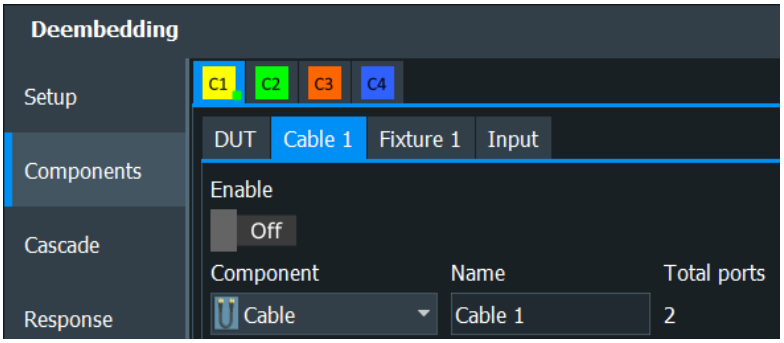

Enable
Enables the component for deembedding. As long as the configuration is incomplete or conflicting, the message "Invalid configuration" is shown, and enabling is not possible.

Remote command:
`DEEMbedding<de>:COMPonent<n>[:STATe]` on page 2774

Component
Selects the component type. The "DUT" and "Input" types are predefined and shown for information. The other types, e.g. "Fixture", "Cable", or "Adapter" are selectable.

Remote command:
`DEEMbedding<de>:COMPonent<n>:TYPE` on page 2775

Name
Enter a name for the component that helps you identify it.

Remote command:
`DEEMbedding<de>:COMPonent<n>:NAME` on page 2775


Total ports
Shows the number of all ports of the selected component (input ports and output ports).

The number of ports depends on the attached probe. If a modular probe R&S RT-ZM or differential probe R&S RT-ZD is used, the number of ports is 4. Otherwise, 2 ports are available.

Remote command:
`DEEMbedding<de>:COMPonent<n>:PCOunt?` on page 2776

21.2.3 DUT settings

In the "Deembedding" > "Components" > "DUT" tab, you set the characteristics of the DUT.

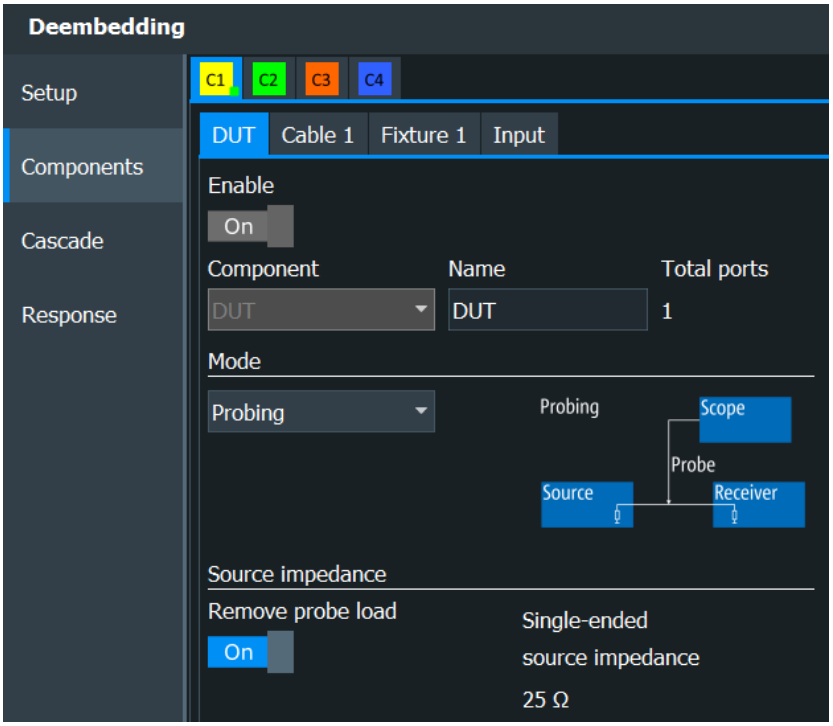

Probing, Terminating
Sets the probing mode.

Select "Probing" if you use a high-impedance probe and measure on an existing line in parallel to the load.

Select "Terminating" if the measuring equipment is the load of the line.

Remote command:
`PROBe<ch>:DEEMbedding:MODE` on page 1435
`DEEMbedding<de>:COMPonent<n>:MODE` on page 2776

Remove probe load
If "Probing" is selected, you can remove the loading of the probe.

If the probe loading is removed, you see the signal that would be at the measurement point if the probe's input impedance is ideal (infinite impedance).

Without removing the loading, you see the real signal at the measurement point, including the probe loading.


Remote command:
`PROBe<ch>:DEEMbedding:REMProbeload` on page 1435
`DEEMbedding<de>:COMPonent<n>:LOAD:REMProbeload` on page 2777

Source impedance
Shows the source impedance of the DUT. If an R&S RT-ZM probe is connected, the value depends on the selected probe mode: common mode, differential, or single-ended measurement.

Remote command:
DEEMbedding<de>:COMPonent<n>:LOAD:IMPedance? on page 2777
PROBe<ch>:DEEMbedding:LOAD:IMPedance on page 1436

21.2.4 R&S RT-ZM probe component

If an R&S RT-ZM modular probe is connected to a channel input, the probe is detected by the oscilloscope and automatically added to the measurement path. The S-parameters of the probe, the tip modules, and the probe group delay are known to the oscilloscope and used for deembedding.

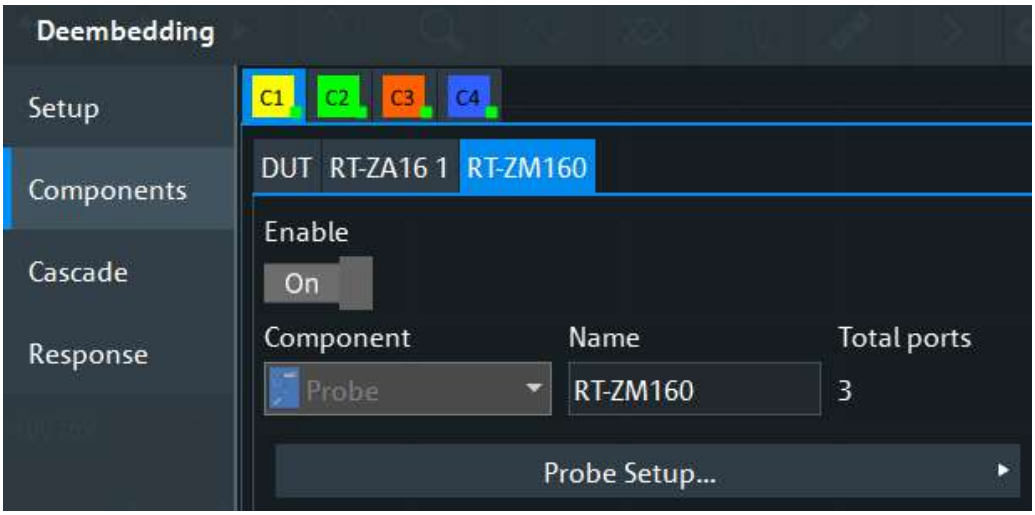

To configure probe deembedding settings:

1. In the "Deembedding" > "Components" > "RT-ZMxx" tab, select "Probe setup".
2. In the "Probes" dialog, select "Deembedding".

The "Probe Deembedding" dialog is described in Section 5.6.5.2, "Deembedding for modular probes", on page 162.

For details on probe parameters, see:


- "Probe tip module, Pin spacing, Open" on page 162
- "Probe mode" on page 161
- "DM Offset, CM Offset, P Offset, N Offset" on page 161

21.2.5 Input settings for other probes

The "Input" component is used for all probes except for R&S RT-ZM, R&S RT-ZD and R&S RT-ZS probes with Rohde & Schwarz interface, and for cables or other components that are used to connect the measurement setup to the oscilloscope. For these input components, the horizontal skew and vertical settings are considered during deembedding. You can set the skew directly in the "Deembedding" > "Components"

> "Input" tab, or in "Horizontal" menu > "Skew". The button "More Settings" opens the "Channels" settings.

The input component is also used for deembedded differential signals, see Section 5.8.3, "Deembedding of differential signals", on page 193.

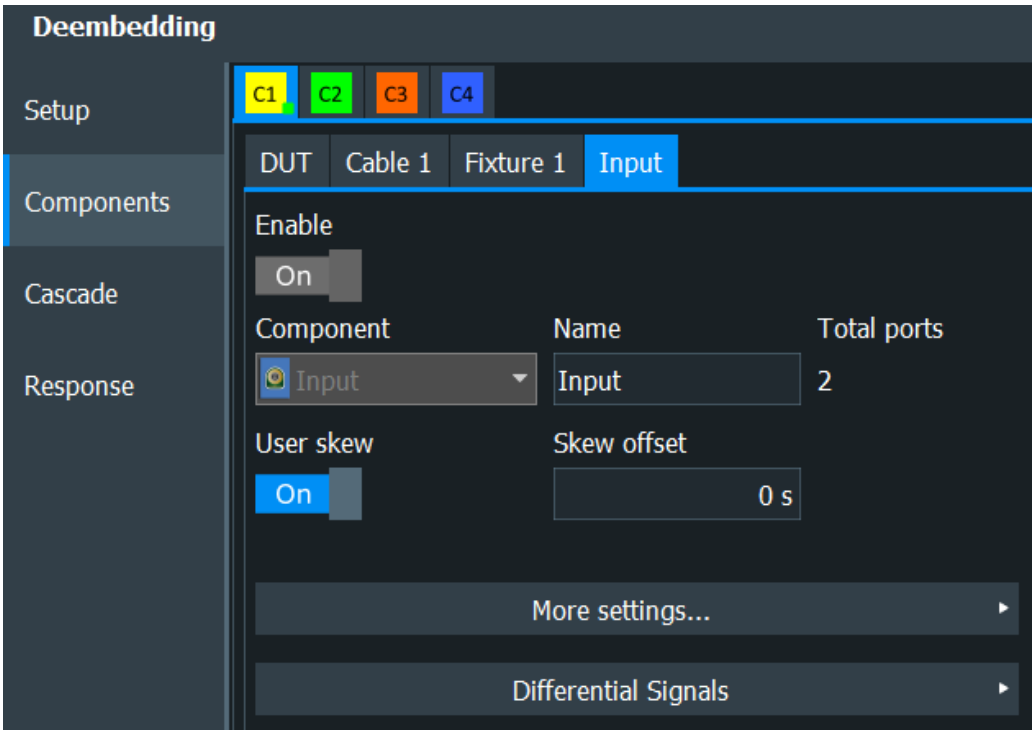

For details, see:

- "User skew" on page 127
- "Skew offset" on page 127


21.2.6 Interposer component

If you use an R&S RT-ZM modular probe in the deembedding measurement setup, you can also add an interposer component.


21.2.6.1 About interposers

An interposer is a board that is placed between the device to be probed (e.g. a memory chip) and the target or controller system. The board routes out the signal to the probe points.

For single-ended signals, two or three ports can be used: one connection port for the memory device, one for the controller device and one for the probe. The characteristics are described in an `.s2p` or `.s3p` file. For differential signals, the number of ports doubles, and you need an `.s4p` or `.s6p` file.

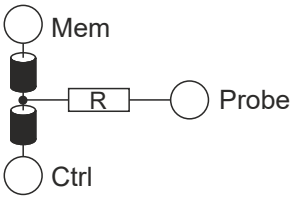





Interposer, single-ended: `.s3p` file

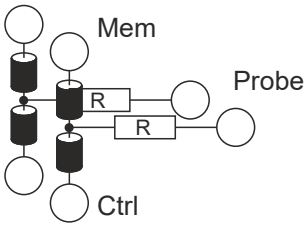

Interposer, differential: `.s6p` file

The description of the interposer by S-parameters depends on the design of the interposer, used ports and possible termination. The following examples refer to single-ended measurements. Differential measurements are treated accordingly. The port numbers are examples, the real number depends on the interposer type.

Table 21-1: Interposer types

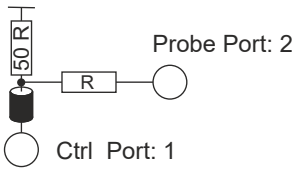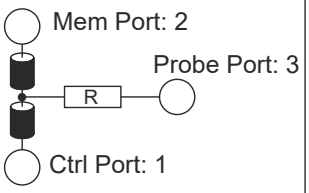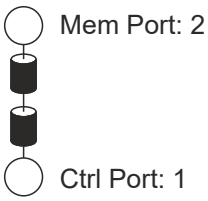Type description	Circuit scheme	Touchstone file
Type A Ideal interposer with R = 100 Ω: • S11 ~ -6 dB • S21 ~ -6 dB • S22 ~ -6 dB • S12 ~ -6 dB		Single-ended: `.s2p` Differential: `.s4p` Example file: `EKH_DDR5x4x8_DQx_Group1.s2p`
Type B Ideal interposer with R = 100 Ω: • S11 ~ -7.3 dB • S21 ~ -11 dB • S22 ~ -16 dB • S12 ~ -11 dB		Single-ended: `.s2p` Differential: `.s4p`
Type C Ideal interposer with R = 100 Ω: • S11, S22 ~ -17 dB • S12, S21 ~ -2 dB • S13, S31 ~ -11 dB • S23, S32 ~ -11 dB • S33 ~ -7 dB		Single-ended: `.s3p` Differential: `.s6p` Example file: `EKH_DDR5x4x8_DQx_Group1.s2p`
Ideal interposer: • S21 < -2 dB		Deembedding not possible

21.2.6.2 Usage considerations

Several aspects affect the configuration of interposers for deembedding.

Probing

To ensure a flat frequency response, you have to consider the embedded resistor R of the interposer.

For R&S RT-ZM modular probes, a modification of the resistor at the tip module is required. The initial value of the resistor must be reduced by the value of the integrated resistor of the interposer. For example, the R&S RT-ZMA10 has an R_{tip} = 323 Ω, the interposer has R= 100 Ω, thus a tip resistor of $R_{tip-mod}$ = 232 Ω is needed. Also, an accordingly modified Touchstone file is required for the modified tip module to include the changed behavior in the deembedding setup.

To achieve correct deembedding, do not use unmodified tip modules together with interposers.

Contact your service center for support and a modified probe tip model.

Configuration flowchart

In the flowchart, recommended settings are highlighted. "Loading" is the loading of the signal by the interposer and connected probe.

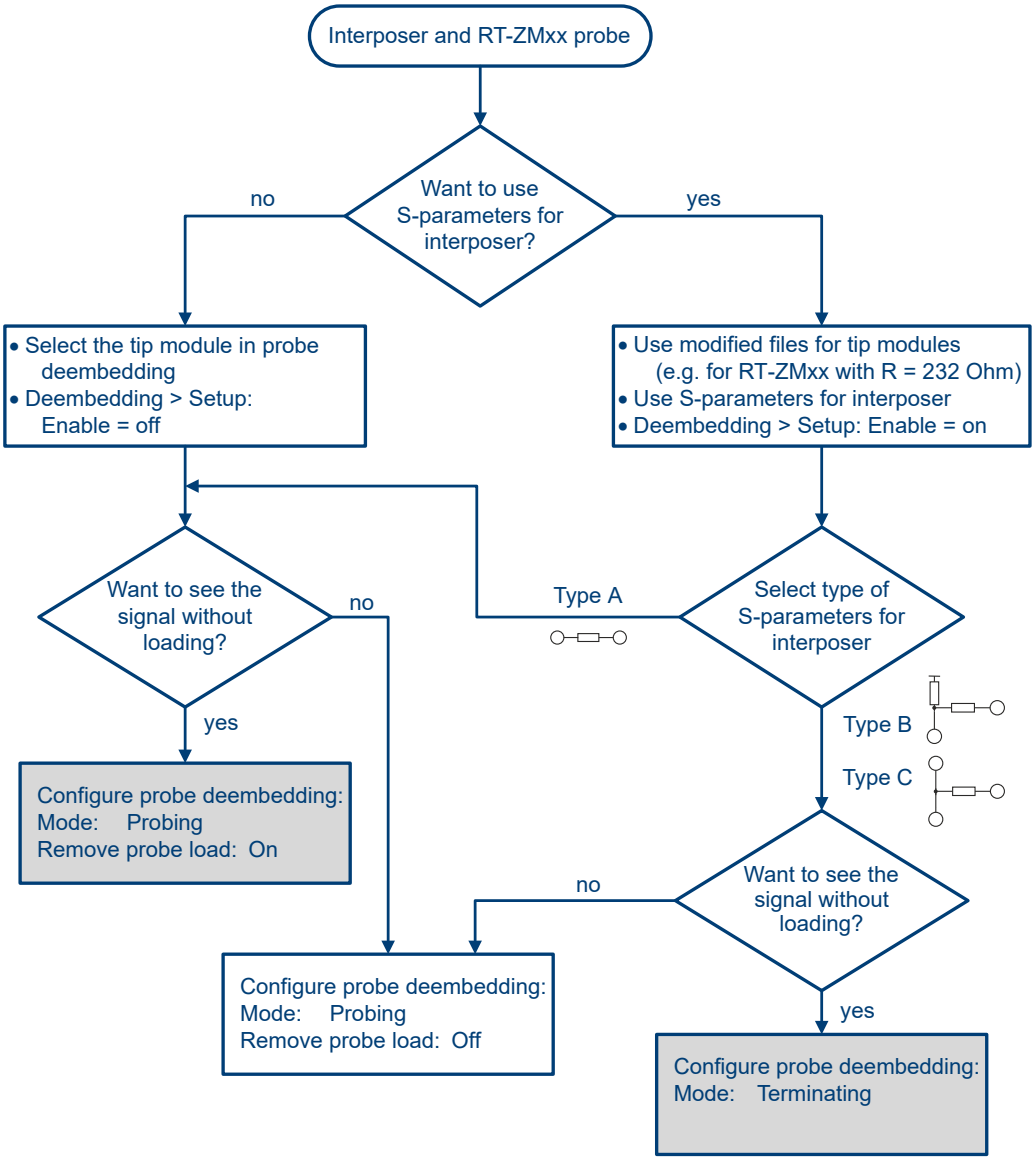


Figure 21-1: Configuration flowchart

Note for type C interposers: define the port that is terminated (`DEEMbedding<de>:COMPonent<n>:INTPoser:TERMinate`). To see the signal at the memory port, terminate the controller port, and vice versa.

Using a differential probe at single-ended signals

If you want to probe a single-ended signal with a differential probe, activate "Identical paths" and load the same interposer file at both paths.

21.2.6.3 Interposer settings

Access: "Deembedding" > "Components" > "Interposer"

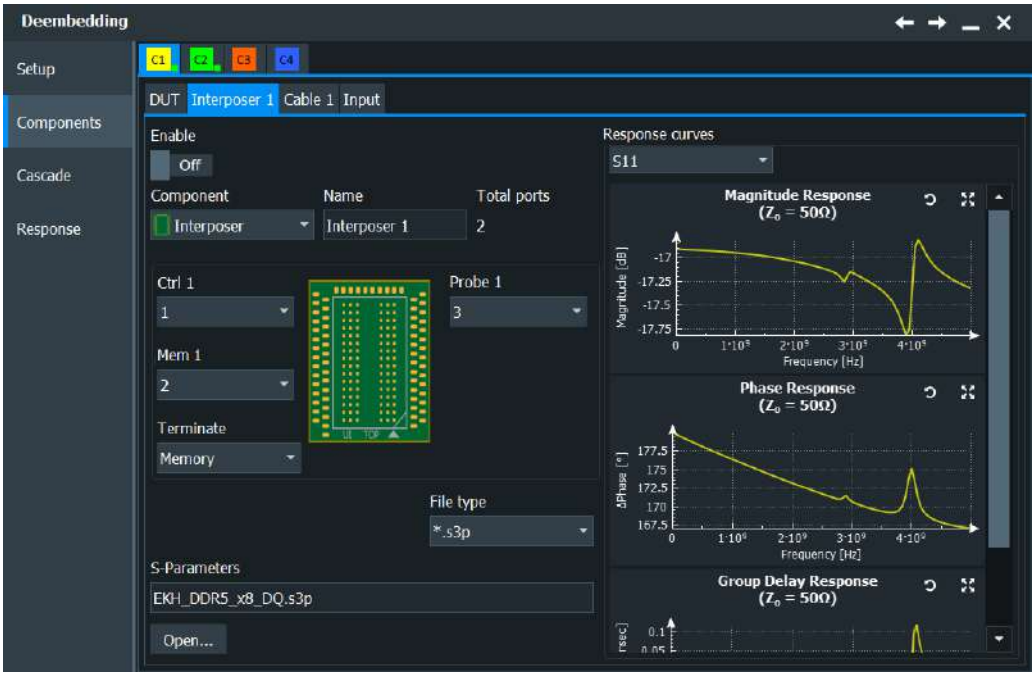


Figure 21-2: Interposer setup for single-ended signals

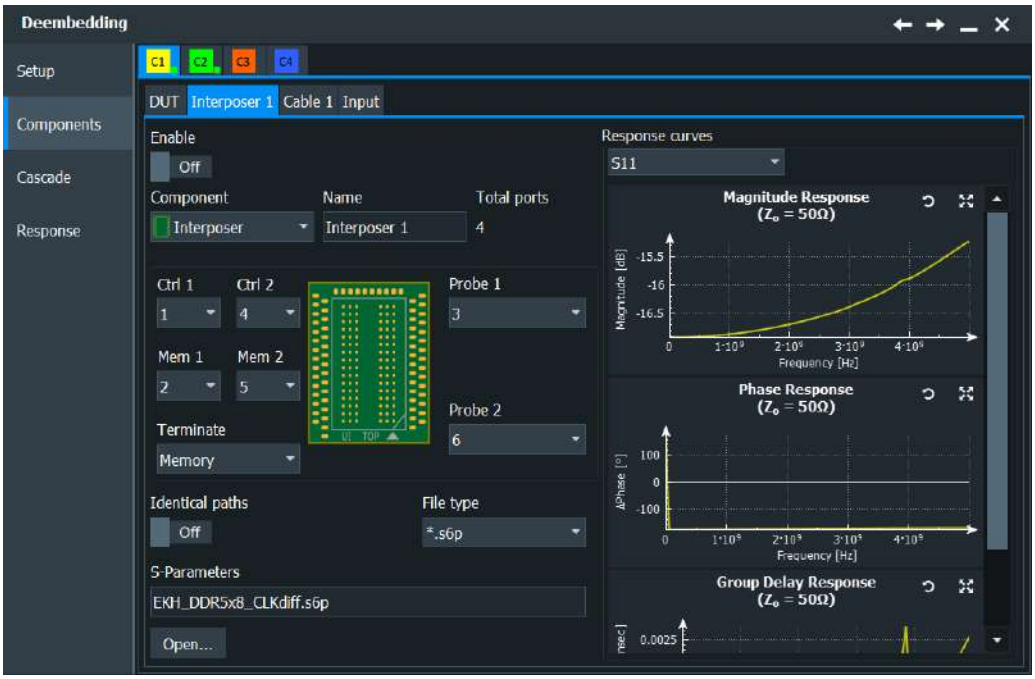


Figure 21-3: Interposer setup for differential signals

Mem 1, Mem 2
Sets the port number at the memory device.

Remote command:
DEEMbedding<de>:COMPonent<n>:INTPoser:MPONe on page 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:MPTWo on page 2782

Ctrl 1, Ctrl 2
Sets the port number at the controller device.

Remote command:
DEEMbedding<de>:COMPonent<n>:INTPoser:CPONe on page 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:CPTWo on page 2782

Probe 1, Probe 2
Sets the port number of the probe point.

Remote command:
DEEMbedding<de>:COMPonent<n>:INTPoser:PPONe on page 2783
DEEMbedding<de>:COMPonent<n>:INTPoser:PPTWo on page 2783

Terminate
Sets the port which is terminated at the interposer block: memory or controller port. The other port pair is exposed as input to the next block.

Remote command:
DEEMbedding<de>:COMPonent<n>:INTPoser:TERMinate on page 2783

Identical paths
See "Identical Paths" on page 1199.

S-Parameters, File type
See "S-Parameters, File type" on page 1199.

Response curves
See "Response curves" on page 1199.

21.2.7 Cable, adapter, fixture and custom components

If you have added a cable, adapter, test fixture or other component to the measurement setup, you set the characteristics in the corresponding subtabs of the "Deembedding" > "Components" tab.

The characteristics are the same for these component types. Configuration differs between 2-port and 4-port components, because 4-ports need additional settings. Generally, these components are configured by loading S-parameter files and analyzing its characteristics.



Figure 21-4: 2-port setup: deembedding settings for a cable

To configure a component in a single-ended 2-port setup

1. In the component tab, tap "Open".
2. Select and load the `*.s2p` Touchstone file that contains the S-parameters of the component. The filetype is always `*.s2p`.
3. Assign the ports to the input and output of the component according to the data in the Touchstone file. See also: "Input 1, Input 2, Output 1, Output 2" on page 1198.
4. Analyze the response curves of each S-parameter. The response curves are functions of magnitude, phase, and group delay over frequency.
   a) Select the S-parameter.
   b) Check the response curves. The display is based on a reference impedance of Z0 = 50 Ω.

   The response curves show:
   - The correctness of the S-parameter file.
   - The correct setting of the input and output ports ("Input 1", "Output 1")
   - The characteristics of the component.
5. If the component is configured correctly, tap "Enable" to include it in the deembedding setup.



Figure 21-5: 4-port setup and 2-port component: deembedding settings of different cables

To configure a component in a single-ended 4-port setup

1. If the component is a 4-port, i.e. a fixture or custom block, load the `*.s4p` Touchstone file that contains the S-parameters of the component:
   a) In the component tab, tap "Open".
   b) Select and load the `*.s4p` Touchstone file. The filetype is always `*.s4p`.
2. If the component is a 2-port, i.e. a cable or adapter, typically 2 cables or adapters are used. These components can be different or identical.
   a) If the components are identical, enable Identical Paths. You need 1 `*.s2p` Touchstone file.
   If the components are different, disable Identical Paths. You need 2 `*.s2p` Touchstone files, one for each component.
   b) Select the filetype `*.s2p`.
   c) Tap "Open".
   d) Select and load the `*.s2p` Touchstone file.
   e) If the components are different, load the second `*.s2p` Touchstone file in the same way.
3. Assign the ports to the input and output of the component according to the data in the Touchstone file. See also: "Input 1, Input 2, Output 1, Output 2" on page 1198.
4. Analyze the response curves of each S-parameter. You can analyze magnitude, phase and group delay response, which are functions of frequency.
   a) Select the S-parameter.

b) Check the response curves. The display is based on a reference impedance of Z0 = 50 Ω.

The response curves show:
- The correctness of the S-parameter file.
- The correct setting of the input and output ports ("Input 1", "Output 1")
- The characteristics of the component.

5. If the component is configured correctly, tap "Enable" to include it in the deembedding setup.

Response curves are described in Section 21.3.1, "Responses of the component cascade", on page 1200.

21.2.7.1 Cable, adapter, fixture and custom component settings

Access: "Deembedding" > "Components" > "Cable" or "Fixture" or "Adapter" or "Other"



Figure 21-6: 4-port setup and 2-port component: deembedding settings of identical cables

Input 1, Input 2, Output 1, Output 2
Assign the ports to the input and output of the component according to the data in the Touchstone file. This information is not directly written in the file. You need background information how the S-parameters were determined, i.e. which port was input and which port was output. If in doubt, the response curves help assign the ports correctly.

Remote command:
`DEEMbedding<de>:COMPonent<n>:IPONe` on page 2780
`DEEMbedding<de>:COMPonent<n>:IPTWo` on page 2780

DEEMbedding<de>:COMPonent<n>:OPONe on page 2780
DEEMbedding<de>:COMPonent<n>:OPTWo on page 2780

Identical Paths
The setting is relevant if the measurement setup is a 4-port, and the component is a 2-port. Usually, these components are cables and adapters, which are described by *.s2p files. If there is a 4-port setup, 2 cables or 2 adapters are used. If there is no crosstalk in-between, each cable or adapter can be described by a *.s2p file.

If both components are different, each is described by its own *.s2p file. If they are identical, for example, when a matched-pair cable is used, they can be described by the same file. In this case, enable "Identical Paths".

Remote command:
DEEMbedding<de>:COMPonent<n>:IDENtical on page 2779

S-Parameters, File type
Loads the Touchstone file that contains the S-parameters of the component.

If the measurement setup is a 2-port, the filetype is always *.s2p.

If the measurement setup is a 4-port, the selection depends on the component. Fixtures and custom blocks are usually 4-ports, and they are described by *.s4p S-parameter files.

Cables and adapters are usually 2-ports, and they are described by *.s2p S-parameter files. If there is a 4-port setup, 2 cables or 2 adapters are used. You need 2 different files if the components are different, or only 1 file if they are identical (see also "Identical Paths" on page 1199).

Remote command:
DEEMbedding<de>:COMPonent<n>:SPONe on page 2781
DEEMbedding<de>:COMPonent<n>:SPTWo on page 2781
DEEMbedding<de>:COMPonent<n>:SPFType on page 2780

Response curves
If the Touchstone file is loaded, you can check the component response curves for each S-parameter:

- Magnitude response
- Phase response
- Group delay response

Select the S-parameter to be displayed. If two Touchstone files are used, first select the path and the S-parameter. You can refresh each graphic, and display it on full screen.

Remote command:
DEEMbedding<de>:COMPonent<n>:SPFSelection on page 2781
DEEMbedding<de>:COMPonent<n>:PSONe on page 2781
DEEMbedding<de>:COMPonent<n>:PSTWo on page 2781


21.3 Responses

21.3.1 Responses of the component cascade

The "Deembedding" > "Cascade" tab combines the S-parameters of all included components and shows the response curves of the measurement setup for each S-parameter:

- Magnitude response
- Phase response
- Group delay response

While the response curves on the component tabs show the S-parameter characteristics of a single component, the cascade shows the combined characteristics for all components including the mismatch between the components. The DUT is not considered.

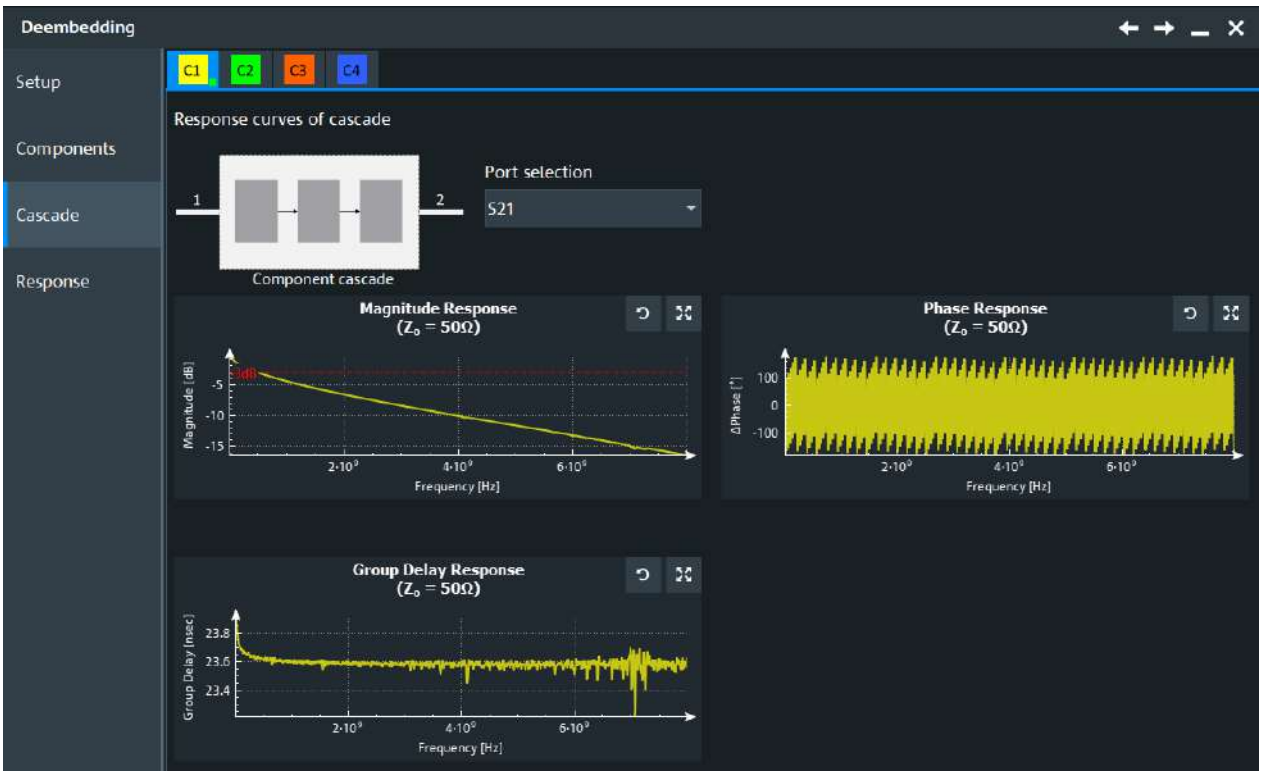

Port selection
Selects the S-parameter. The response curves (magnitude, phase, and group delay response) of the setup cascade for the selected parameter are shown. You can refresh each graphic, and display it on full screen.

Remote command:
`DEEMbedding<de>:CASCade:PSELection` on page 2784

21.3.2 Responses of the measurement setup

On the "Deembedding" > "Response" tab, you see the resulting transfer function characteristics of the deembedded measurement setup. These response curves also include the characteristics of the DUT and its interaction with the input connector of the oscilloscope.

You can see the following characteristics:

- Magnitude response
- Phase response
- Group delay response
- Step response

Using these response curves, you can assess the correction of the signal by deembedding. In particular, you can compare real-time deembedding with software deembedding and check whether the accuracy of the real-time deembedding is sufficient for the measurement task.

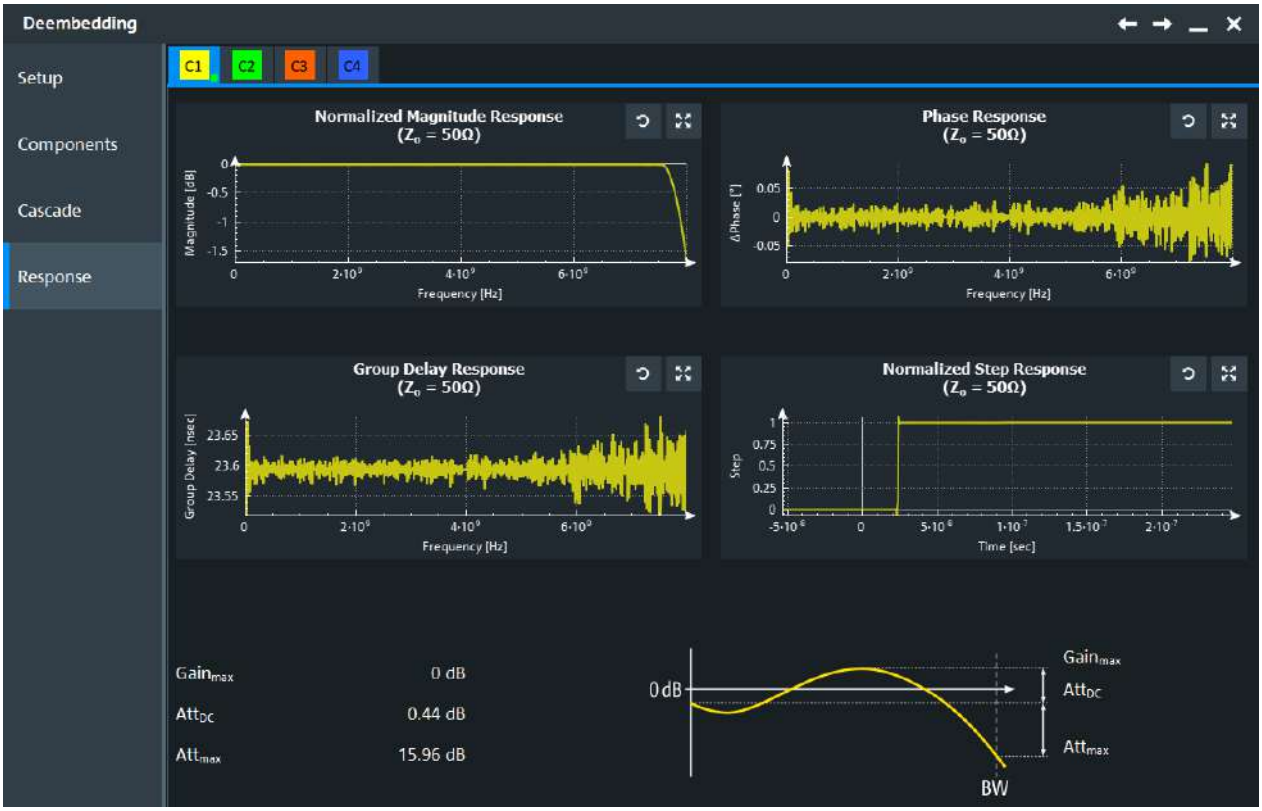


Figure 21-7: Characteristics of the deembedded measurement setup

► To see more details in a response graphic, tap the upper right button in the graphic.

The graphic opens in full view, where you can analyze the response function: zoom in and out, use the cursor.

Also you can save a "Screenshot" of the magnified plot. The screenshot is saved automatically in the `C:\Users\Public\Public Documents\Rohde-Schwarz\RTx\Plots` directory.

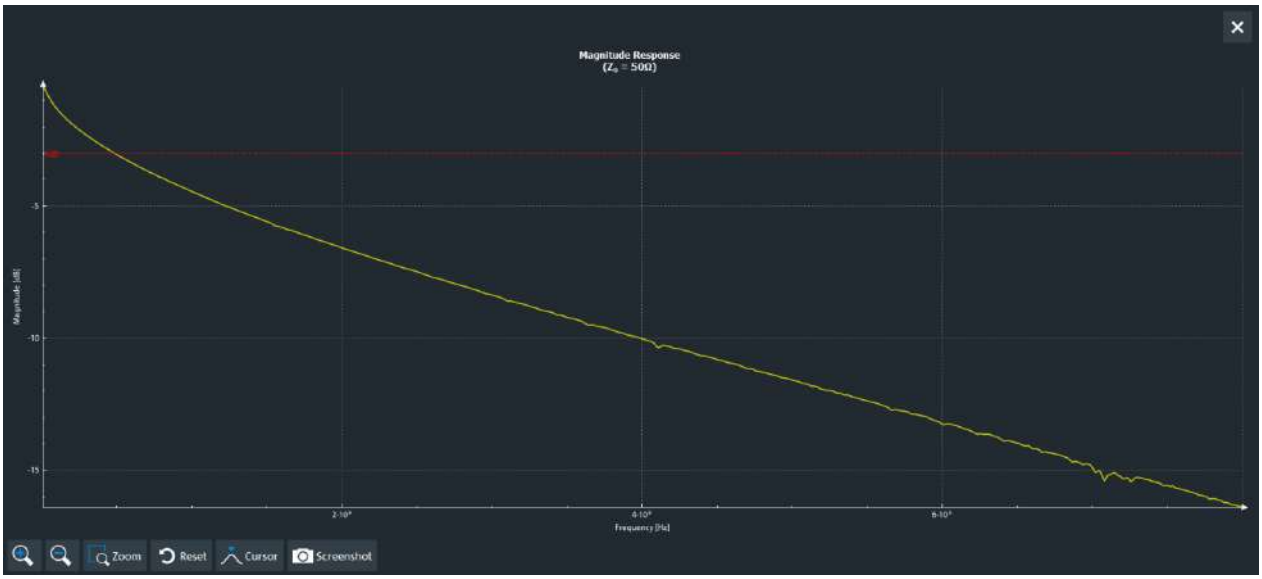


Figure 21-8: Full view of the magnitude response

On the "Response" tab, you see some parameters of the uncorrected measurement setup including the DUT. All parameters are related to a frequency range from DC to the configured effective bandwidth.

Att_{max}
Maximum attenuation of the measurement setup before deembedding, with reference to a frequency response normalized at DC to 0 dB. The deembedding filter must amplify the amplitude response by the "Att_{max}" value, and thus also increases the noise by this value. The value also helps to decide whether deembedding is useful for the defined effective bandwidth.

Att_{DC}, $Gain_{DC}$
Maximum attenuation or gain of the measurement setup before deembedding at DC. This value is the expected basic attenuation or gain, which is corrected by deembedding.

$Gain_{max}$
Maximum gain of the measurement setup before deembedding, with reference to a frequency response normalized at DC to 0 dB. The deembedding filter must attenuate the amplitude response by this value. The value also helps to avoid an overload of the ADC.

21.4 Proven probe, proven cable

The R&S RTP can measure probes and cables and determine their S-parameters. These components are called proven probe or proven cable, and their characteristics are saved in `*.rs2p` files. The measurements require the hardware option R&S RTP-B7. For a proven probe, also the R&S RT-ZF30 probe test fixture is needed.

21.4.1 Characterization of proven probes and cables

To get the S-parameters of proven probes and cable, several measurements are needed. A wizard guides you through the process, and graphics show how to connect the setup. You can also save the result of each step and speed up further measurements by saved step results.

The wizard steps are the following:


- Proven probe / cable setup 1203
- Normalization 1204
- Measurement 1206
- Response 1207

21.4.1.1 Proven probe / cable setup

Access: [Apps] > "Analysis" > "Deembedding" > "Setup" tab: include component "Proven Probe" or "Proven Cable" > "Configure" > "Start wizard"

Depending on the steps that you have done before, you can:

- Start the complete characterization procedure.
- Start the probe or cable measurement in a normalized setup.
- Load measurement results.

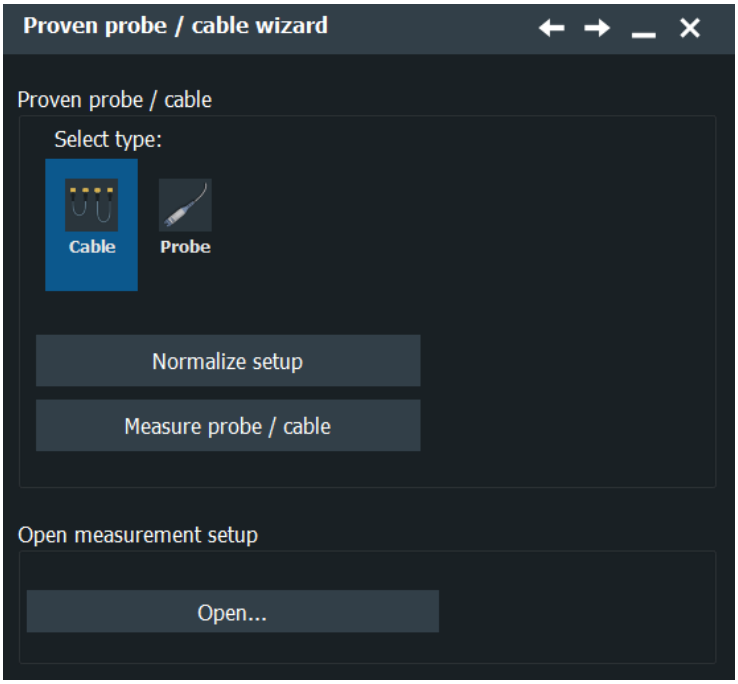

Select type
Select the DUT to be characterized: probe or cable

Normalize setup
Starts the wizard for the complete normalization and measurement procedure.

Measure probe / cable
Starts the measurement of the probe or cable directly. If the measurement setup has been normalized just before, the "Measurement" dialog box opens. Otherwise, you are asked to open a normalization file, or to start with normalization.

Open measurement setup
Opens a file with previously saved measurement results. The "Response" dialog box opens, and you can check the response plots, and save or apply the S-parameters to the deembedding setup.

21.4.1.2 Normalization

Open [Apps]> "Analysis" tab > "Proven Probe / Cable" > "Normalize setup"

1. Connect the cables to the pulse source R&S RTP-B7 and to the input channels.
   The probe or cable to be measured is *not* connected.
   Use only high-quality double-shielded RF cables. Two suitable cables are delivered with the pulse source option R&S RTP-B7.

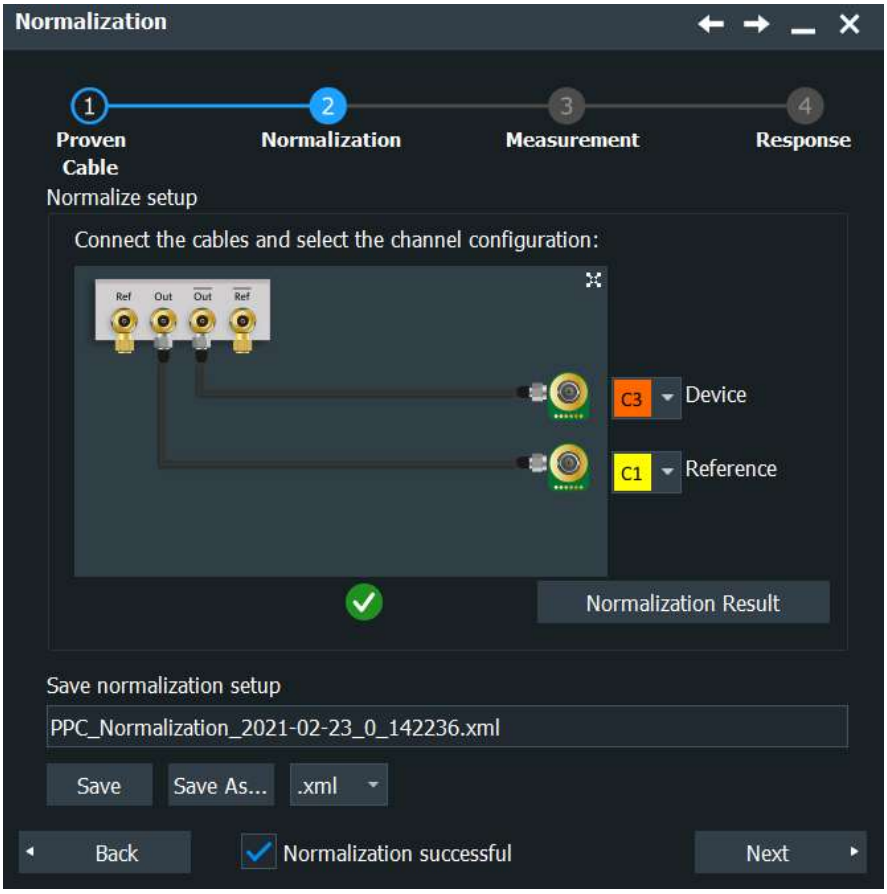


Figure 21-9: Normalization settings

2. Start measurements with "Normalize".

   The basic setup is characterized.

Device
Selects the input channel that is connected to the $\overline{\text{Out}}$ connector of the pulse source R&S RTP-B7 during normalization, and to the measured probe or cable during measurements.

Reference
Selects the input channel that is connected to the Out connector of the pulse source.

Normalize
Starts the normalization of the setup without the probe or cable to be measured. The frequency correction and deskew are determined and applied in the next measurement step.

If normalization was successful, it is indicated by an icon, and you can display the "Normalization Result" - the normalized magnitude response.

Save normalization setup
Saves the results of the normalization step to an XML file.

21.4.1.3 Measurement

Open [Apps]> "Analysis" tab > "Proven Probe / Cable" > "Normalize setup"> "Next"

1. To characterize a cable, connect it to the cable coming from the Out connector of the pulse source and the "Device" input channel. Use an adapter if necessary.

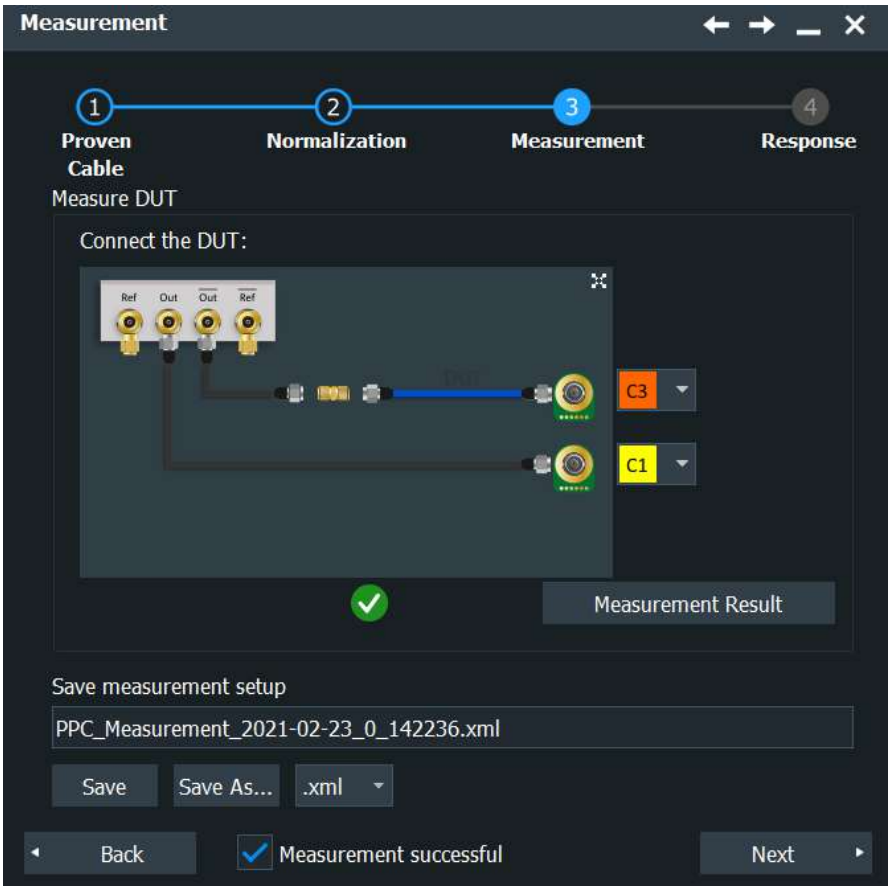


Figure 21-10: Cable measurement

2. To characterize a probe, you need the R&S RT-ZF30 probe test fixture.
   a) Connect the fixture to the cable coming from the Out connector of the pulse source.
   b) Connect the probe to the fixture.
   For details, see the "R&S RT-ZF30 Probe Test Fixture Manual".
   c) Connect the probe to the "Device" input channel.
3. Select "Measure".

Measure
Starts the measurement of the probe or cable to be characterized.

If the measurement was successful, it is indicated by an icon, and you can display the "Measurement Result" - the magnitude response of the proved probe or cable.

Save measurement setup
Saves the measurement results of the proven probe or cable to an XML file.

21.4.1.4 Response

Open [Apps]> "Analysis" tab > "Proven Probe / Cable" > > "Normalize setup" > "Next" > "Measure" > "Next"

In the last step, you see the response curves, the characteristics of a deembedded proven probe or cable. The characteristics are the same as on the "Deembedding Response" tab. For more information, see Section 21.3.2, "Responses of the measurement setup", on page 1201.

Apply result
Includes the proven probe or proven cable component in the deembedding setup, and opens the "Deemebedding Components" tab for configuration.

Save result
Saves the S-parameters of the proven probe or cable to a rs2p or rs4p file. Using this file, you can include and configure this proven probe or cable as a component in a deembedded measurement setup.

21.4.2 Deembedding with proven probe or proven cable

If a probe or cable is characterized as described in Section 21.4.1, "Characterization of proven probes and cables", on page 1203, and its S-parameters are saved, you can use this probe or cable in any deembedding measurement setup.

1. In the deembedding measurements setup, add the component "Proven Probe" or "Proven Cable".
2. Select "Configure" on the new component.
3. Load the S-parameters file (`*.rs2p`).
   If no file is available, you can start the characterization wizard here.

See also: Section 21.1, "Configuring the measurement setup for deembedding", on page 1183.

22 Embedding and equalization (option R&S RTP-K126)

With the R&S RTP and option R&S RTP-K126 you can perform embedding and equalization of your signals.

To achieve a reliable data transmission, techniques such as emphasis (at the transmitter side) and equalization (at the receiver side) are used to compensate for transmission losses and to “reopen” the data eye.

On the transmitter side, FFE (Feed-Forward-Equalization) filters can be applied. On the receiver side, CTLE (Continuous-Time-Linear-Equalization), FFE, and DFE (Decision-Feedback-Equalization) filters can be used.

In addition to the emulation of the transmitter and receiver equalization functions, you can emulate additional signal traces (e.g.: longer cables) “Embedding”.

22.1 Equalization basics

Equalization is an operation that is applied to a pulse-amplitude modulated (PAM) signal (such as a USB or Ethernet signal) that has been distorted by a channel (such as a cable). The equalizer compensates for some of the distortions introduced by the channel and recovers the transmitted PAM symbols.

22.1.1 CTLE

A continuous-time linear equalizer (CTLE) is a continuous-time filter whose zeros and poles lie in the negative real axis of the Laplace domain.

A pole is a value of s (complex frequency) at which the transfer function of the CTLE goes to infinity. Poles have a significant impact on the system's stability and the frequency response's shape. In the time domain, poles are related to the system's natural response and can influence the equalizer's transient and steady-state behavior. In the frequency domain, poles contribute to the roll-off rate of the frequency response and can enhance the low-frequency gain.

A zero is a value of s at which the transfer function becomes zero. Zeros in the transfer function influence the frequency response by creating points where the gain is minimized. They are used to shape the frequency response in a way that compensates for the undesired channel effects, like attenuating certain frequencies or enhancing others.

In a CTLE, the placement of poles and zeros is strategically chosen to achieve a desired frequency response. Typically, the goal is to boost the high-frequency components of the signal more than the low-frequency ones to counteract the channel's high-frequency loss. This is often accomplished by placing zeros at higher frequencies and poles at lower frequencies. The exact placement of these poles and zeros defines

the CTLE's ability to equalize the signal effectively, balancing the trade-off between signal enhancement and noise amplification.

It is usually specified by a list of M zero frequencies $f_{zero,m}$, a list of N pole frequencies $f_{pole,n}$ and a DC gain A_{DC}. The actual zeros and poles are at $-2\pi f_{zero,m}$ and $-2\pi f_{pole,n}$.

22.1.2 Feed-forward equalizer (FFE)

A Feed Forward Equalizer (FFE) is a type of digital filter used primarily in communication systems to mitigate the effects of inter-symbol interference (ISI). ISI is a common problem in high-speed data transmission where signals from different symbols interfere with each other, causing distortion and potential errors in the received data.

The FFE works by applying a set of weighted coefficients to the incoming signal, adjusting it to counteract the distortion caused by the channel.

The FFE has multiple "taps," each representing a delayed version of the input signal. Each tap has a corresponding coefficient (weight) that is adjusted during the equalization process. The weighted signals from all the taps are summed together to produce the output signal.

The coefficients are continuously adjusted using an algorithm to minimize the error between the equalized output signal and the desired signal.

22.1.3 Decision feedback equalizer (DFE)

A decision-feedback equalizer has a feedback loop that uses decisions on previous symbols to equalize the current symbol. "Decision" means to find the closest constellation point to each equalized symbol. The advantage of a DFE over an FFE is that the DFE is better at compensating zeros or large dips in the frequency response of the channel without enhancing the noise. For standard cables with a gradually falling frequency response, the advantage of a DFE is small.

Similar to an FFE, the DFE has a feed forward section that processes the incoming signal with a set of weighted coefficients to produce an initial estimate of the current symbol. This section aims to reduce the ISI from future symbols (pre-cursor ISI). The unique feature of the DFE is its feedback section. This part of the equalizer uses the decisions made about previous symbols to cancel out their interference on the current symbol. The previously detected symbols are fed back through a set of taps with their own coefficients, and the resulting signal is subtracted from the output of the feed forward section.

The combined output from the feed forward and feedback sections is then passed through a decision device, which determines the most likely transmitted symbol based on the processed signal. This decision is then fed back into the feedback section for use in subsequent symbol decisions.

The coefficients in both the feed forward and feedback sections are typically adjusted using adaptive algorithms to continually optimize the equalizer's performance based on the channel conditions.

22.1.4 Taps

Taps are the coefficients used in digital signal processing, specifically in an equalizer filter, to adjust the frequency response of a system. These taps are essentially weights applied to different delayed versions of the signal to interfere with certain frequencies, thereby compensating for distortions or attenuations introduced by the communication channel or system.

Taps are used to correct the signal distortion caused by channel impairments, such as multipath fading, which results in intersymbol interference (ISI). An equalizer with a certain number of taps (each corresponding to a particular delay) can be designed to adjust the amplitude and phase of different frequency components of the signal to counteract the channel's effects, thereby improving the quality of the received signal.

The design and optimization of these taps are crucial for achieving the desired equalization effect, which is typically aimed at restoring the original signal or minimizing the error rate in data transmission. The number of taps in an equalizer determines its complexity and the degree of equalization that it can achieve, with more taps generally providing better equalization at the cost of increased computational complexity.


22.2 Signal lanes settings

You can define up to four different signal lanes. Each waveform is defined in a separate tab in the "Signal Lanes" dialog box ("Lane 1" to "Lane 4").

22.2.1 General settings

Access: "Menu" >"Apps" > "Embedding / Equalization" > "Signal Lanes" tab.

In this dialog you can select the input sources and configure the nominal bit rate. You can also access

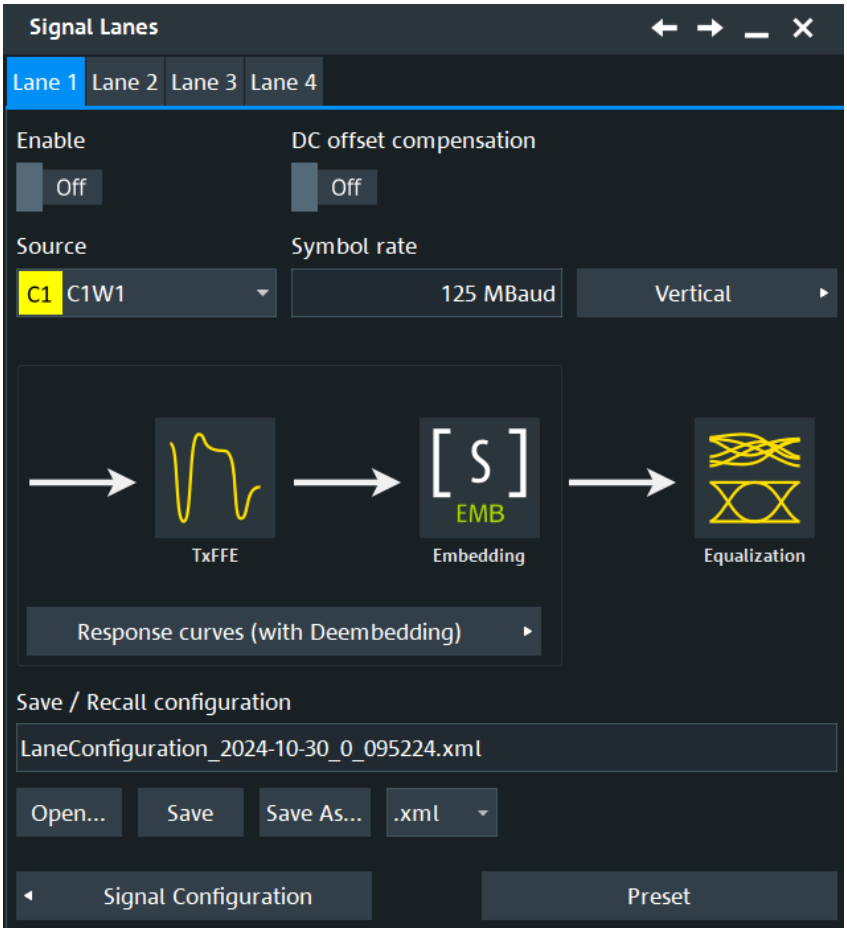

Lane n
Selects the lane for the signal configuration. Make sure that the tab of the correct lane is selected.

Enable
Activates the signal.

Remote command:
`LANE<m>:STATe` on page 2786

DC offset compensation
Enables the DC offset compensation. If enabled, the application estimates the DC offset of the input signal and removes it prior to training and/or applying equalizers to it. This may improve results, but it is only accurate if the input symbol sequence is balanced (similar number of ones and zeros in NRZ, or symmetric distribution of PAM levels in PAM-N).

If the signal is not balanced, set DC compensation to "Off".

Remote command:
`LANE<m>:CMPO` on page 2787

Source
Displays the currently selected source for the equalization.

You can set this up in the "Menu" > "Apps" > "Analysis" > "Embedding / Equalization" > "Signal Lanes" dialog.

Remote command:
`LANE<m>:SOURce` on page 2786

Nominal bit rate
Sets a nominal bit rate for the signal.

Remote command:
`LANE<m>:SYMRate` on page 2786

Vertical
Opens a dialog to see the vertical settings for embedding and equalization, see Section 22.2.3, "Vertical settings", on page 1215.

Signal flow
The signal flow displays the different stages of the signal definition:

- "Response curves (with Deembedding)": you can define a transmitter feed forward equalization (TxFFE) (see Transmitter feed forward equalization (TxFFE)) or add embedding (see Embedding).
- "Equalization": In this dialog you can configure the equalization settings and select yout filter, see Equalization settings.

Save / recall settings
Saves the complete signal lane configuration, or loads a saved configuration. The file format is XML.

To save the signal lane configuration, enter a filename and tap "Save". Alternatively, tap "Save as" to open the file selection dialog box, see Section 12.6, "File selection dialog", on page 529.

To load a signal lane configuration, tap "Open" and select the required file.


Remote command:
`LANE<m>:NAME` on page 2785
`LANE<m>:OPEN` on page 2785
`LANE<m>:SAVE` on page 2786

Preset
Presets the equalization settings.

Remote command:
`LANE<m>:PRESet` on page 2785

22.2.2 Combined filter response curves

In this dialog you can select the filters that are applied to the signal.

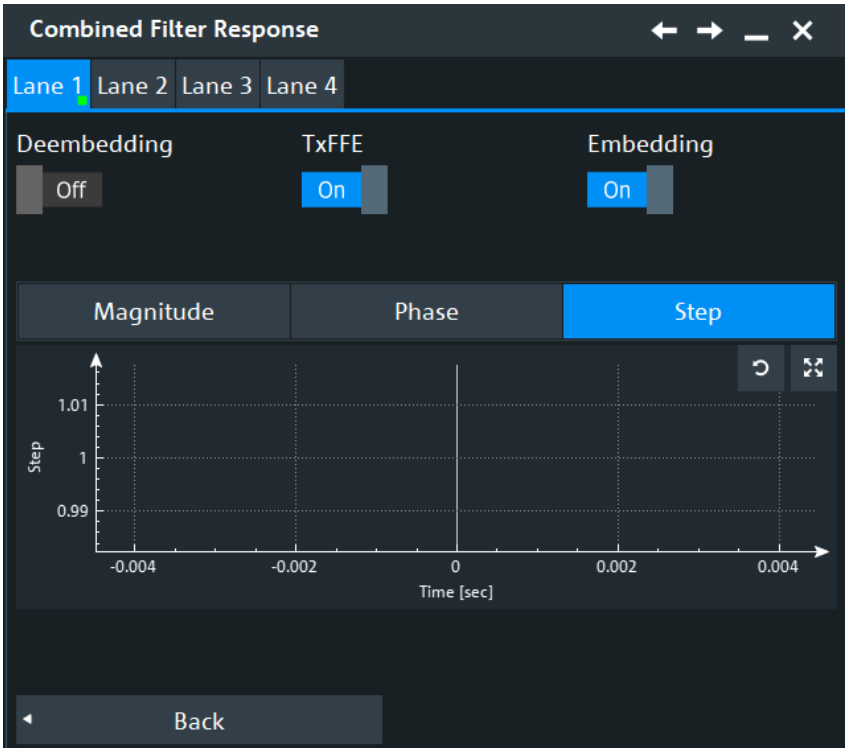

Deembedding
Includes deembedding, see Section 21, "Deembedding (option R&S RTP-K121/-K122)", on page 1183.

Remote command:
`LANE<m>:COMFilter:INCLude:DEEMbedding` on page 2787

TxFFE
Includes the transmitter feed-forward equalization, see Section 22.3, "Transmitter feed forward equalization (TxFFE)", on page 1216.

Remote command:
`LANE<m>:COMFilter:INCLude:TFFE` on page 2788


Embedding
Includes embedding, see Section 22.4, "Embedding", on page 1221.

Remote command:
`LANE<m>:COMFilter:INCLude:EMBedding` on page 2788


Plot
Displays plots for the selected configuration. Using these plots, you can assess the correction of the signal.

You can see the following characteristics:


- "Magnitude"

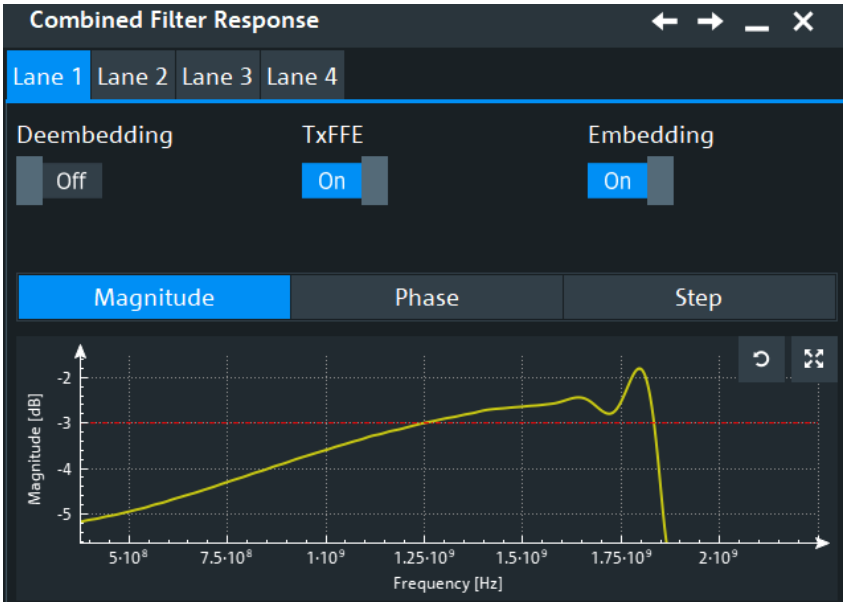
Combined Filter Response
Lane 1
Lane 2
Lane 3
Lane 4
Deembedding
Off
TxFFE
On
Embedding
On
Magnitude
Phase
Step
Magnitude [dB]
-2
-3
-4
-5
5·10⁸
7.5·10⁸
1·10⁹
1.25·10⁹
1.5·10⁹
1.75·10⁹
2·10⁹
Frequency [Hz]

- "Phase"

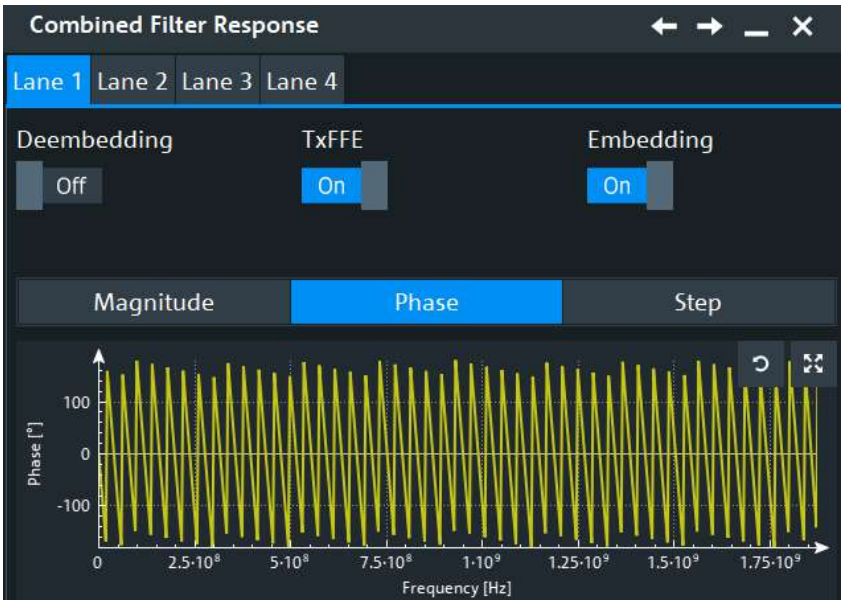
Combined Filter Response
Lane 1
Lane 2
Lane 3
Lane 4
Deembedding
Off
TxFFE
On
Embedding
On
Magnitude
Phase
Step
Phase [°]
100
0
-100
0
2.5·10⁸
5·10⁸
7.5·10⁸
1·10⁹
1.25·10⁹
1.5·10⁹
1.75·10⁹
Frequency [Hz]


- "Step"

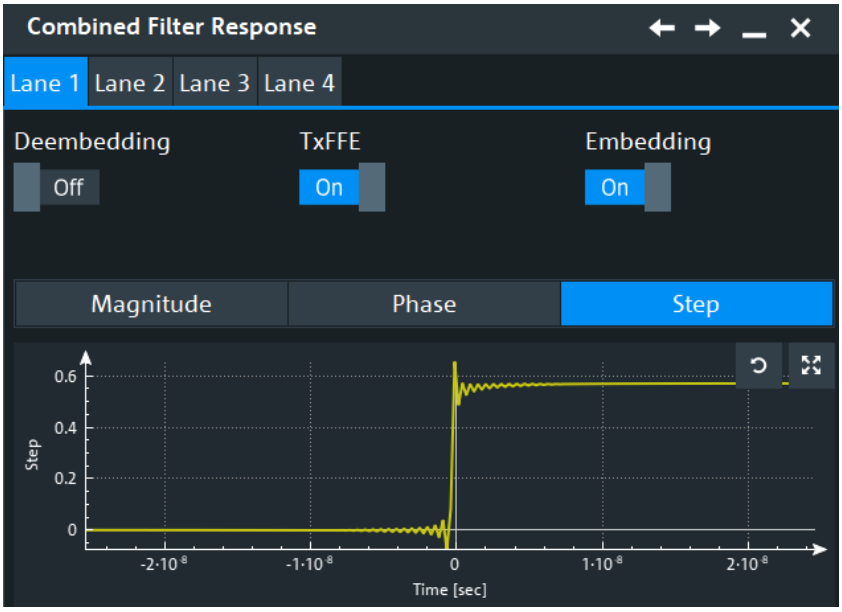

Remote command:
`LANE<m>:TFFE:PSELection` on page 2791

22.2.3 Vertical settings

Access: "Embedding / Equalization" > "Signal Lanes" > "Vertical".

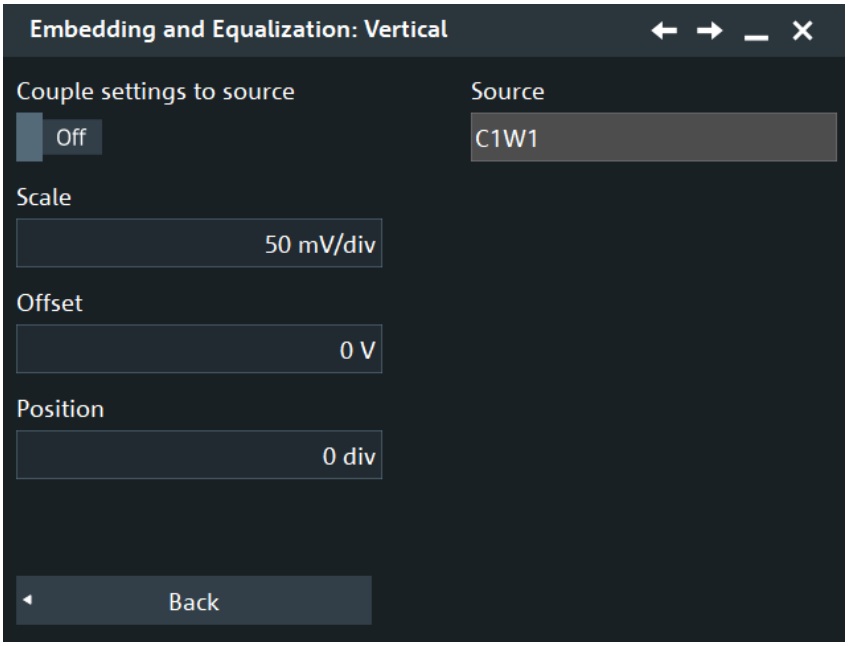

Couple settings to source
Determines how the vertical settings are defined.

If enabled, the vertical settings are coupled to the settings of the respective source. You can then adjust the vertical source settings in the "Vertical" > "Setup" dialog, see Section 5.5.1, "Setup settings", on page 141.

If disabled, the vertical settings for embedding and equalization are set in this dialog.

Remote command:
`LANE<m>:VERTical:COUPle` on page 2790

Scale
Sets the vertical scale for embedding and equalization.

Remote command:
`LANE<m>:VERTical:SCALe` on page 2791

Offset
Sets the offset for embedding and equalization.

Remote command:
`LANE<m>:VERTical:OFFSet` on page 2790

Position
Sets the vertical position for embedding and equalization.

Remote command:
`LANE<m>:VERTical:POSition` on page 2791

22.3 Transmitter feed forward equalization (TxFFE)

The transmitter feed forward equalization (TxFFE) applies a pre-defined set of filters (taps) to the outgoing signal to compensate for the anticipated channel-induced distortion. It is a specific type of FFE filter, which is applied at the transmitter to improve the quality of the signal by reducing ISI before the signal traverses the channel.



Enable
Enables the transmitter feed forward equalization.

Remote command:
`LANE<m>:TFFE:STATe` on page 2792

Serial standard
Displays the currently selected serial standard.

You can set this up in the "Menu" > "Apps" > "Analysis" > "Signal Configuration" dialog.

Standard configuration
Selects a preset standard from the list. The available values are dependent on the selected "Serial standard".

Each standard defines its own set of presets.The preset includes the number of filter taps to be used and the taps themselves.

Remote command:
`LANE<m>:TFFE:SCONfig:LIST?` on page 2792
`LANE<m>:TFFE:SCONfig[:SELect]` on page 2792

Taps
Seletcs the number of taps for the TxFFE. Depending on the selected "Serial standard", there are some predifined presets you can use.


You can also enter your custom number of taps and define a "Value" for each of them. You can enable up to 4 taps.

Remote command:
`LANE<m>:TFFE:TAPS:COUNt` on page 2793
`LANE<m>:TFFE:TAPS:TAP<n>` on page 2793


Plots
Displays plots for the selected TxFFE configuration. Using these plots, you can assess the correction of the signal.

You can see the following characteristics:


- "Magnitude"

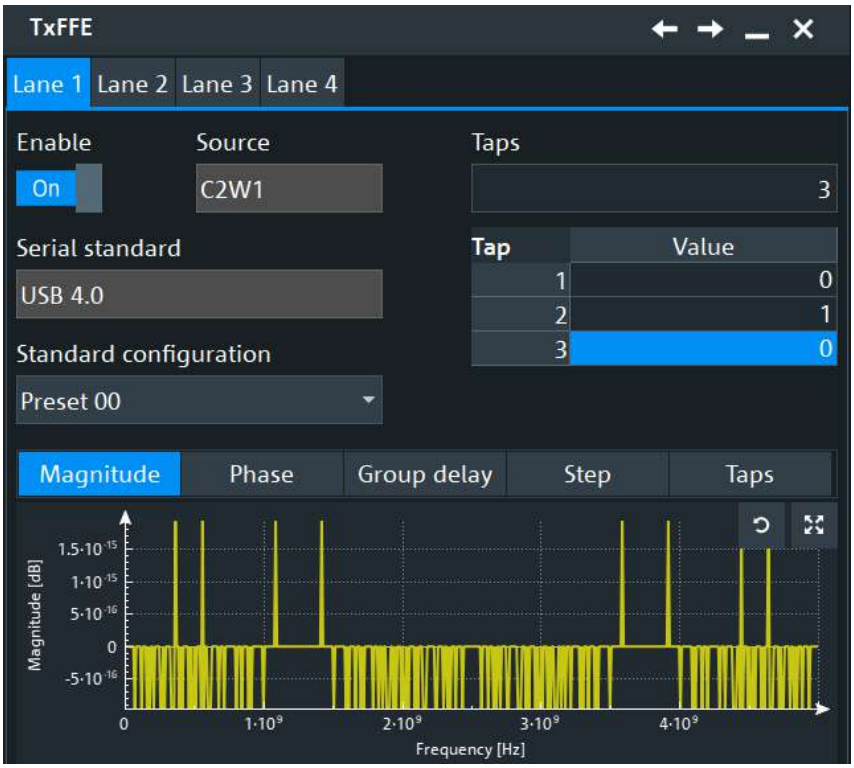


- "Phase"

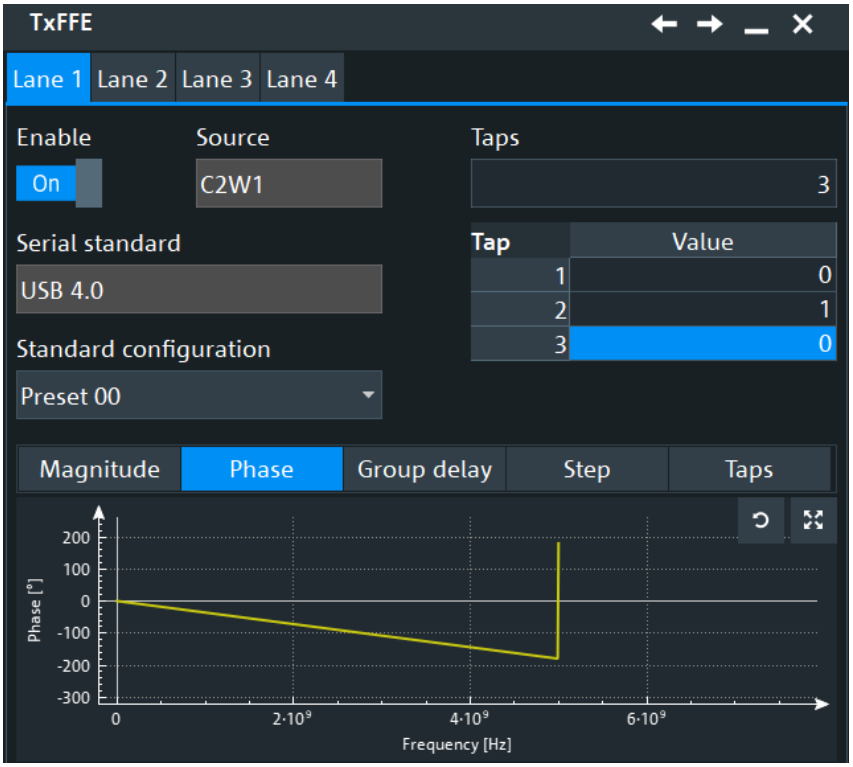


- "Group delay"

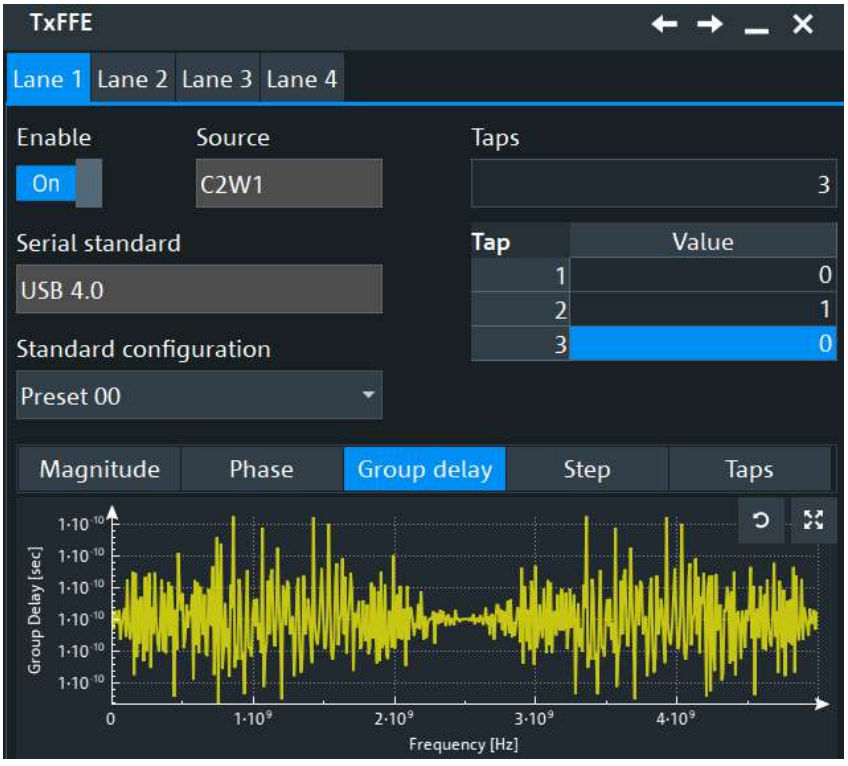

- "Step"

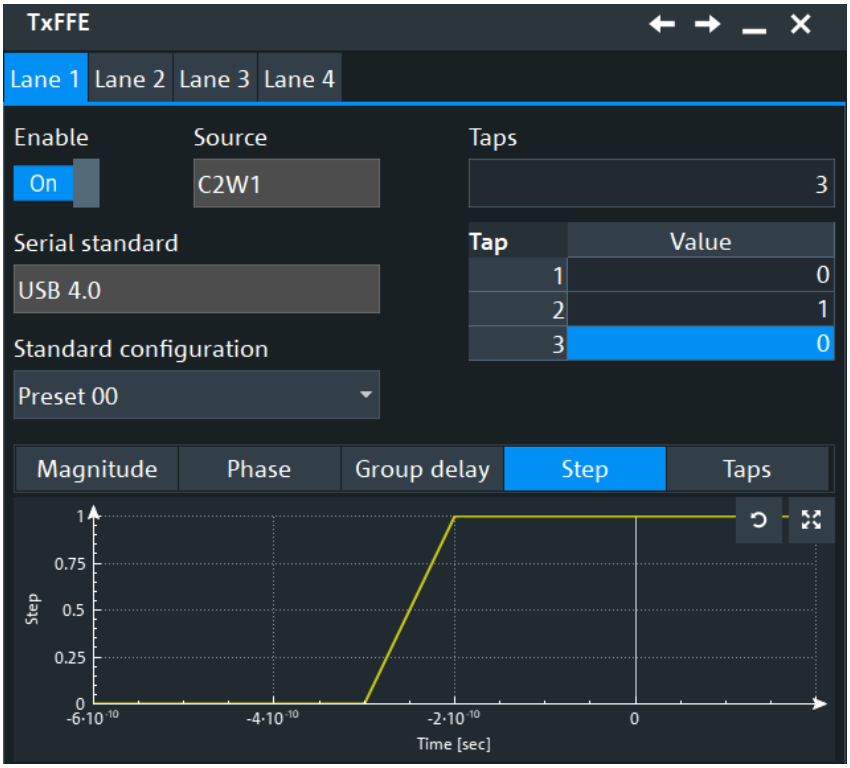

- "Taps"

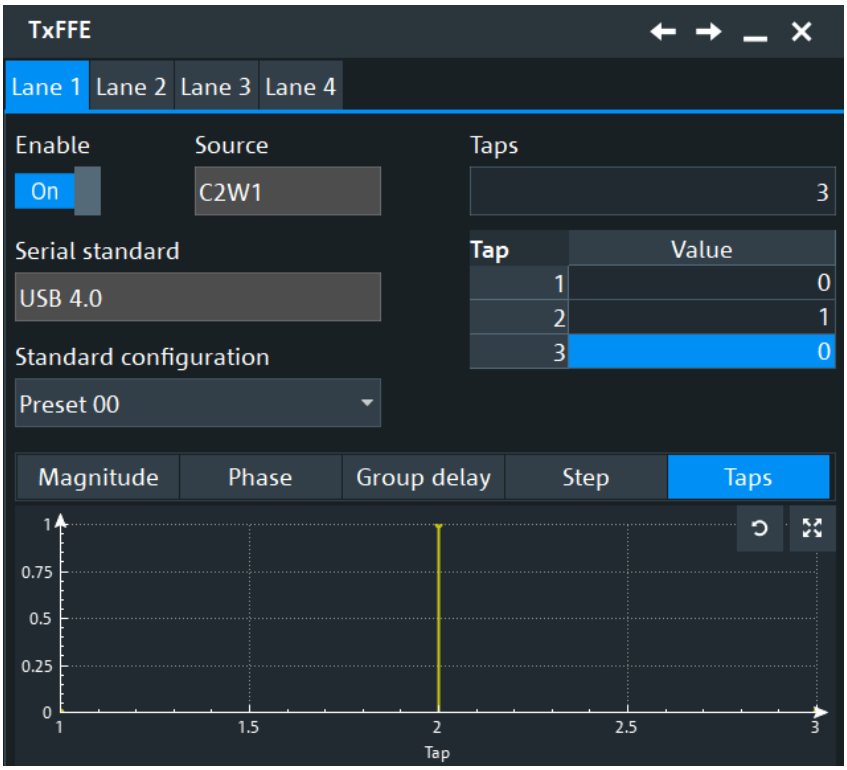


Remote command:
`LANE<m>:TFFE:PSELection` on page 2791

22.4 Embedding

Embedding simulates a channel behavior, for example a transmission line. You can choose between different standard channels or set your own embedding filter.

22.4.1 Measurement setup

In the "Embedding" > "Setup" tab, you add all components of the measurement setup and define all settings that are related to the complete path. The "Tx" and "Rx" components are predefined and non-configurable.

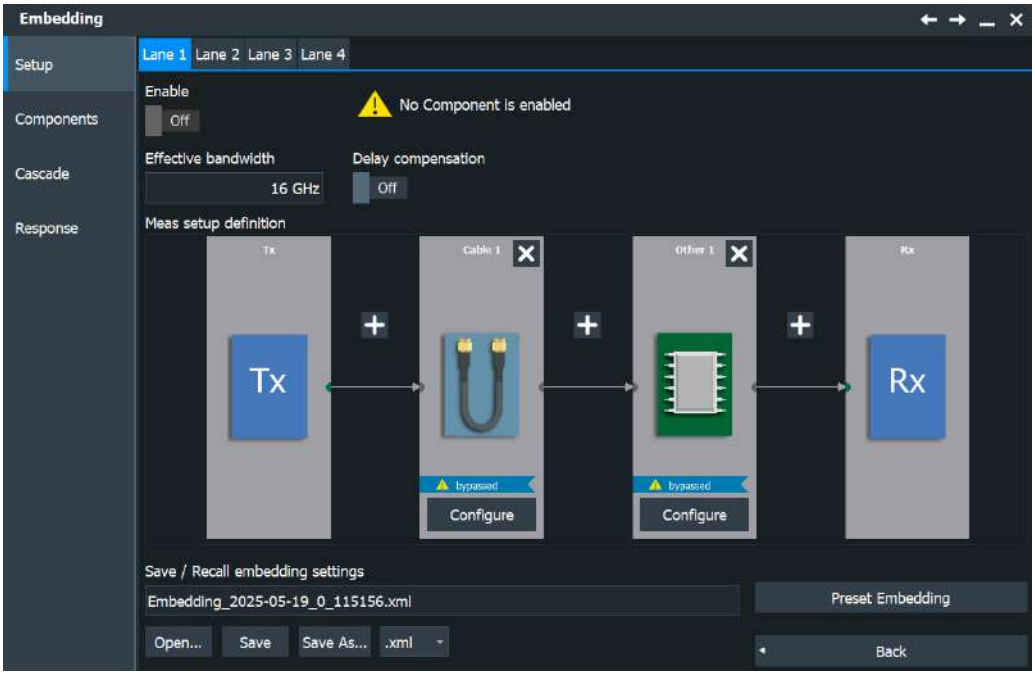

Enable
Activates the embedding - the correction of parasitic effects of the measurement setup on the measured signal.

Remote command:
`LANE<m>:EMBedding:STATe` on page 2794

Effective bandwidth
Sets the maximum bandwidth until which the signal is corrected.

Remote command:
`LANE<m>:EMBedding:BANDwidth` on page 2795

Delay compensation
Enables the delay compensation.


Remote command:
`LANE<m>:EMBedding:CMPDelay` on page 2796

Differential mode
Enables the differential mode for math or reference curve sources.

Remote command:
LANE<m>:EMBedding:DIFFerential on page 2795

Meas setup definition
Simulates the complete measurement setup with all components.

To add a component, tap the **+** icon and select the component type: cable, fixture, adapter, proven cable or others ("Custom").

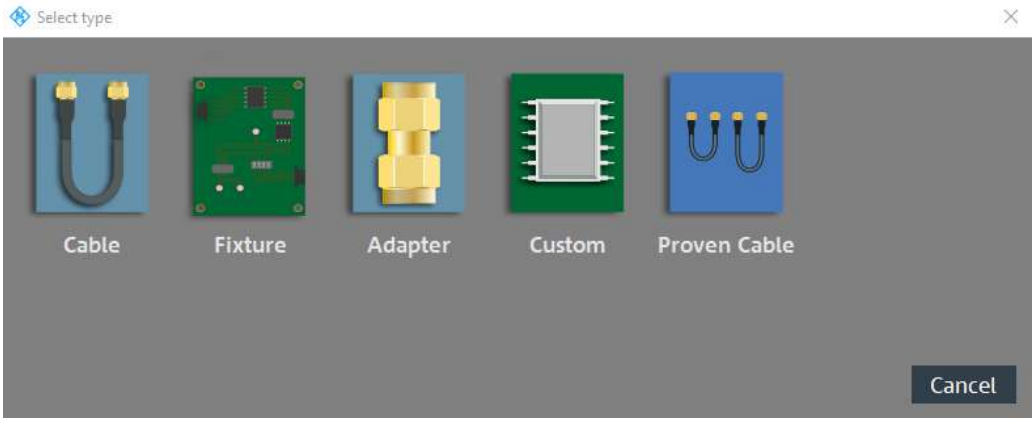

The remark bypassed indicates that the component is disabled and not considered in the embedding calculation as long as it is not configured correctly.

Remote command:
LANE<m>:EMBedding:ADD on page 2794
LANE<m>:EMBedding:REMove on page 2801
LANE<m>:EMBedding:CCOunt? on page 2796

Save / recall embedding settings
Saves the complete embedding configuration, or loads a saved embedding configuration. The file format is XML.

To save the embedding configuration, enter a filename and tap "Save". Alternatively, tap "Save as" to open the file selection dialog box, see Section 12.6, "File selection dialog", on page 529.

To load an embedding configuration, tap "Open" and select the required file.

Remote command:
LANE<m>:EMBedding:NAME on page 2800
LANE<m>:EMBedding:SAVE on page 2801
LANE<m>:EMBedding:OPEN on page 2801


Preset Embedding
Sets the complete embedding configuration to the default values.

Remote command:
LANE<m>:EMBedding:PRESet on page 2801

22.4.2 Components

The "Components" tab has several subtabs to configure each component of the measurement setup that was defined on the "Setup" tab.

Settings that are available on all subtabs are described in this chapter. Other settings are component-specific and explained in the following chapters.

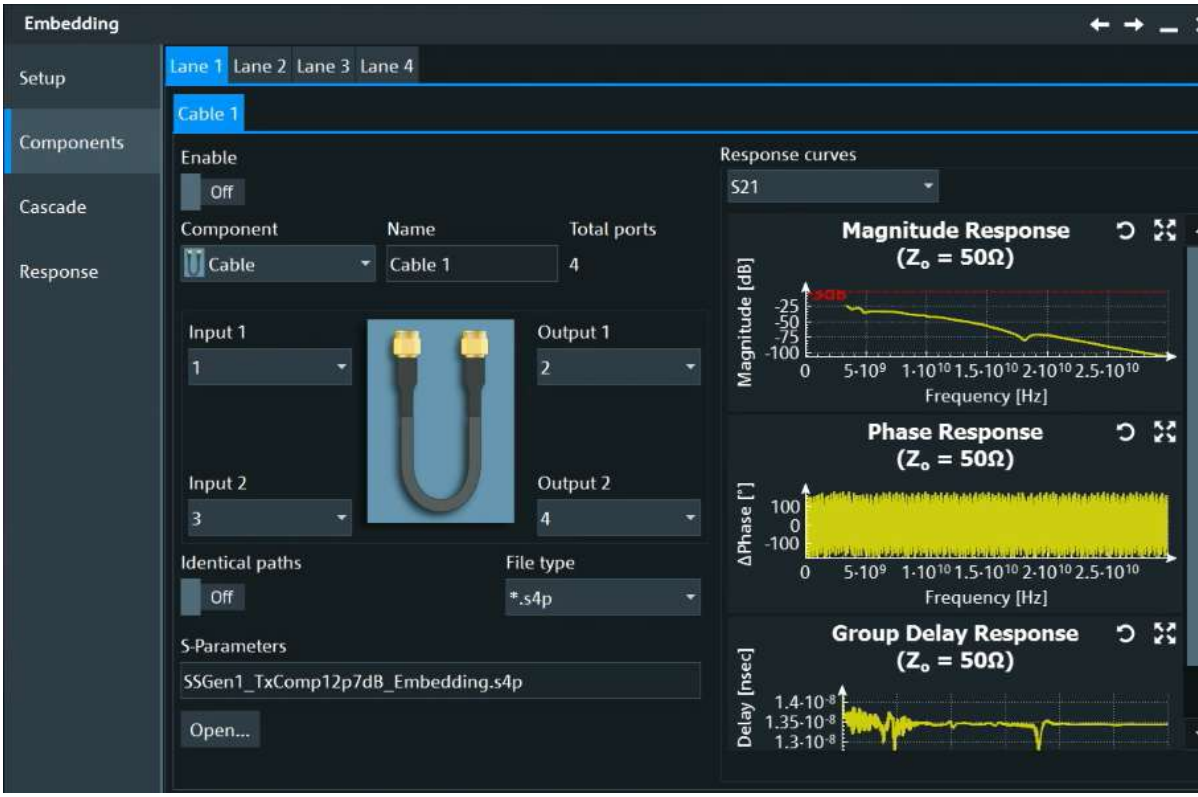

Enable
Enables the component for deembedding. As long as the configuration is incomplete or conflicting, the message "Invalid configuration" is shown, and enabling is not possible.

Remote command:
`LANE<m>:EMBedding:COMPonent<n>[:STATe]` on page 2800

Component
Selects the component type.

Remote command:
`LANE<m>:EMBedding:COMPonent<n>:TYPE` on page 2800

Name
Enter a name for the component that helps you identifying it.

Remote command:
`LANE<m>:EMBedding:COMPonent<n>:NAME` on page 2797

Total ports
Shows the number of all ports of the selected component (input ports and output ports).

Remote command:
LANE<m>:EMBedding:COMPonent<n>:PCOunt? on page 2798

Input 1, Input 2, Output 1, Output 2
Assign the ports to the input and output of the component according to the data in the Touchstone file. This information is not directly written in the file. You need background information how the S-parameters were determined, i.e. which port was input and which port was output. If in doubt, the response curves help assigning the ports correctly.

Remote command:
LANE<m>:EMBedding:COMPonent<n>:IPONe on page 2797
LANE<m>:EMBedding:COMPonent<n>:IPTWo on page 2797
LANE<m>:EMBedding:COMPonent<n>:OPONe on page 2797
LANE<m>:EMBedding:COMPonent<n>:OPTWo on page 2797

Identical paths
The setting is relevant if the measurement setup is a 4-port, and the component is a 2- port. Usually, these components are cables and adapters, which are described by *.s2p files. In case of a 4-port setup, 2 cables or 2 adapters are used. If they are identical, for example, when a matched-pair cable is used, they can be described by the same file. In this case, enable "Identical paths".

Remote command:
LANE<m>:EMBedding:COMPonent<n>:IDENtical on page 2796

S-Parameters, Filetype
Loads the Touchstone file that contains the S-parameters of the component.

If the measurement setup is a 2-port, the filetype is always `*.s2p`.

If the measurement setup is a 4-port, the selection depends on the component. Fixtures and custom blocks are usually 4-ports, and they are described by `*.s4p` S-parameter files.

Cables and adapters are usually 2-ports, and they are described by `*.s2p` S-parameter files. If there is a 4-port setup, 2 cables or 2 adapters are used.

Remote command:
LANE<m>:EMBedding:COMPonent<n>:SPONe on page 2799
LANE<m>:EMBedding:COMPonent<n>:SPTWo on page 2799


22.4.3 Responses

22.4.3.1 Responses of the component cascade

The "Embedding" > "Cascade" tab combines the S-parameters of all included components and shows the response curves of the measurement setup for each S-parameter:

- Magnitude response
- Phase response
- Group delay response

While the response curves on the component tabs show the S-parameter characteristics of a single component, the cascade shows the combined characteristics for all components including the mismatch between the components.

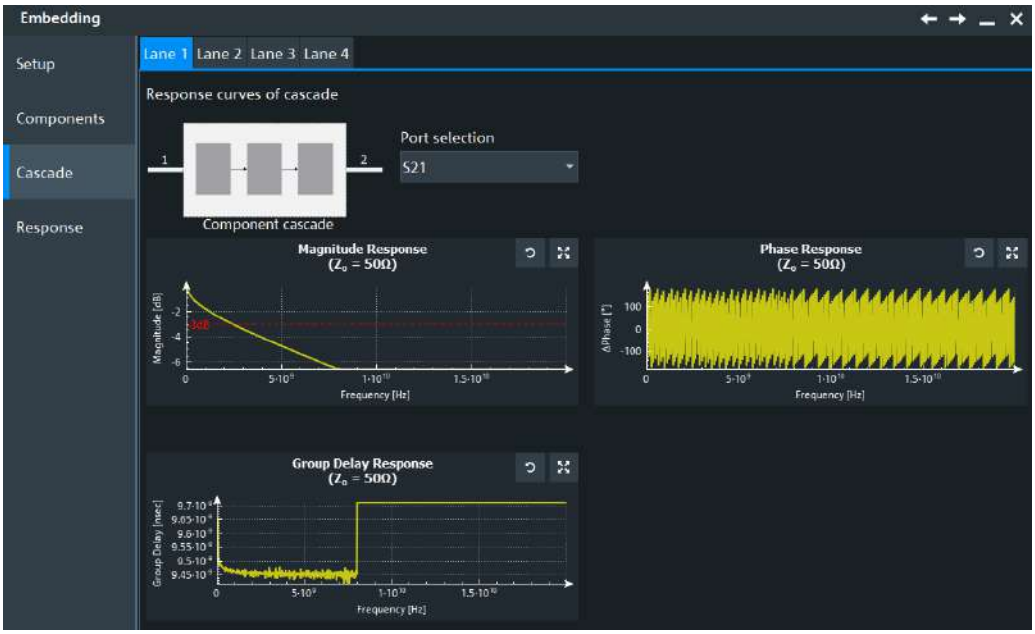

Port selection
Selects the S-parameter. The response curves (magnitude, phase, and group delay response) of the setup cascade for the selected parameter are shown. You can refresh each graphic (), and display it on full screen () to analyze it further: zoom in and out, use the cursor.

22.4.3.2 Responses of the measurement setup


On the "Embedding" > "Response" tab, you see the resulting transfer function characteristics of the embedded measurement setup.

You can see the following characteristics:

- Magnitude response


- Phase response
- Group delay response
- Normalized step response

Using these response curves, you can assess the correction of the signal by embedding.

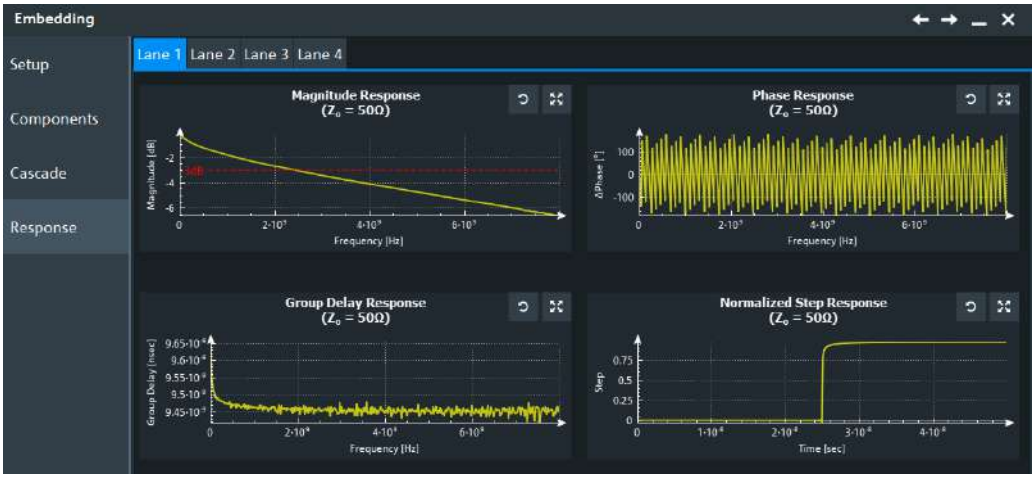

► To see more details in a response graphic, tap the upper right button in the graphic .

The graphic opens in full view, where you can analyze the response function: zoom in and out, use the cursor.
Additionally you can save a "Screenshot" of the magnified plot. The screenshots is saved automatically in the `C:\Users\Public\Public Documents\Rohde-Schwarz\RTx\Plots` directory.

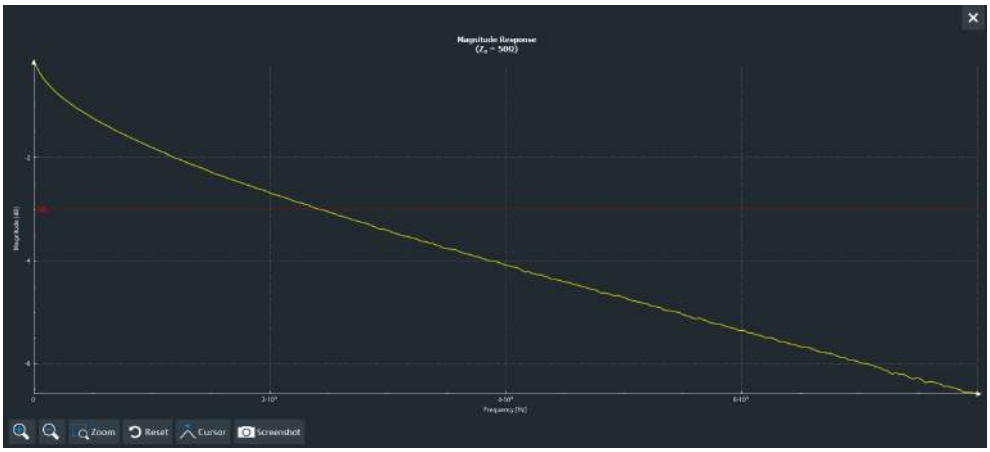


22.5 Equalization settings

Equalization is an operation that is applied to a PAM signal (such as a USB or Ethernet signal) that has been distorted by a channel (such as a cable). The equalizer compensates for some of the distortions introduced by the channel and recovers the transmitted PAM symbols.

22.5.1 Setup

Access: "Menu" >"Apps" > "Embedding / Equalization" > "Signal Lanes" > "Equalization" > "Setup" tab.

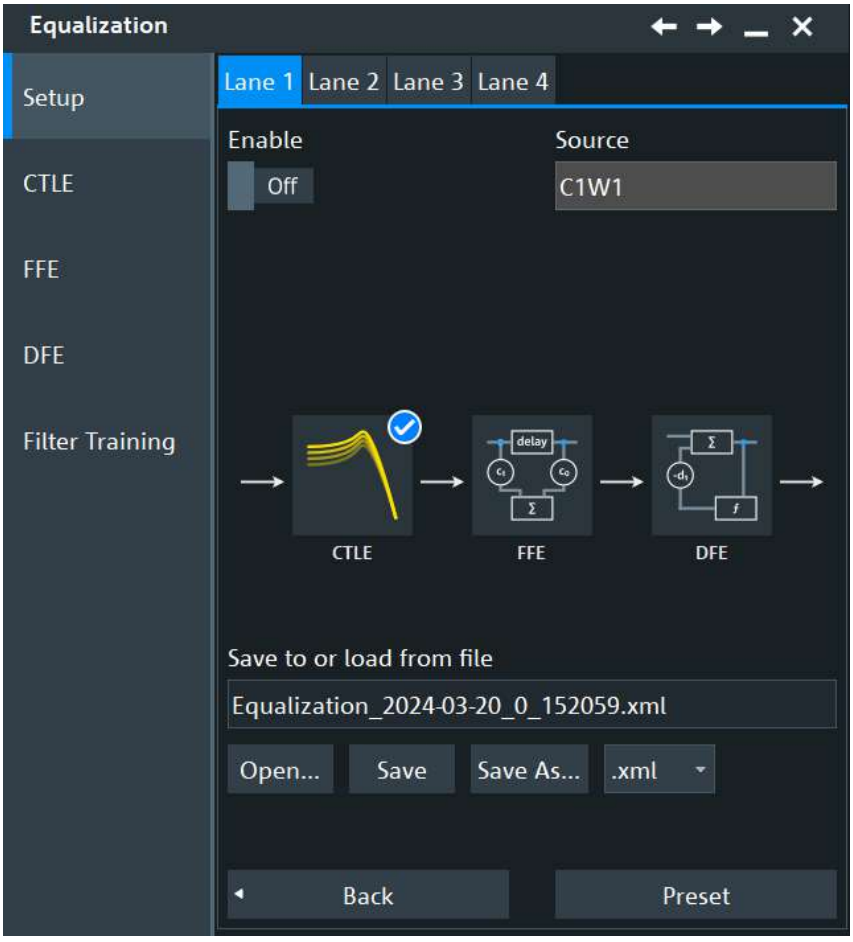

Enable
Enables equalization.

Remote command:
`LANE<m>:EQUalization:STATe` on page 2789

Source
Displays the currently selected source for the equalization.


You can set this up in the "Menu" > "Apps" > "Analysis" > "Embedding / Equalization" > "Signal Lanes" dialog.

Remote command:
LANE<m>:SOURce on page 2786

Filter
The diagram displays which filters are enabled. You can enable each filter in the corresponding tab of the "Equalization" dialog.

If a filter is enabled, a blue circle with a tick appears in the right corner of its icon.

The figure below shows a setup where the CTLE filter is enabled and the FFE and DFE filters are disabled.

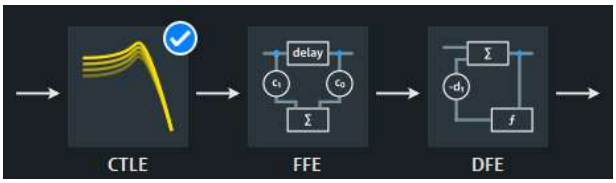

Preset
Presets the equalization settings to their default values.

Note: A preset disables all filters.

Remote command:
LANE<m>:EQUalization:PRESet on page 2789

Save / open equalization settings
Saves the complete equalization configuration, or loads a saved equalization configuration. The file format is XML.

To save the equalization configuration, enter a filename and tap "Save". Alternatively, tap "Save as" to open the file selection dialog box, see Section 12.6, "File selection dialog", on page 529.

To load an equalization configuration, tap "Open" and select the required file.


Remote command:
LANE<m>:EQUalization:OPEN on page 2789
LANE<m>:EQUalization:SAVE on page 2789
LANE<m>:EQUalization:NAME on page 2788

22.5.2 CTLE

Access: "Menu" >"Apps" > "Embedding / Equalization" > "Signal Lanes" > "Equalization" > "CTLE" tab.

In this dialog, you can define the settings for the continuous time linear equalizer.

For more information, see Section 22.1.1, "CTLE", on page 1208.

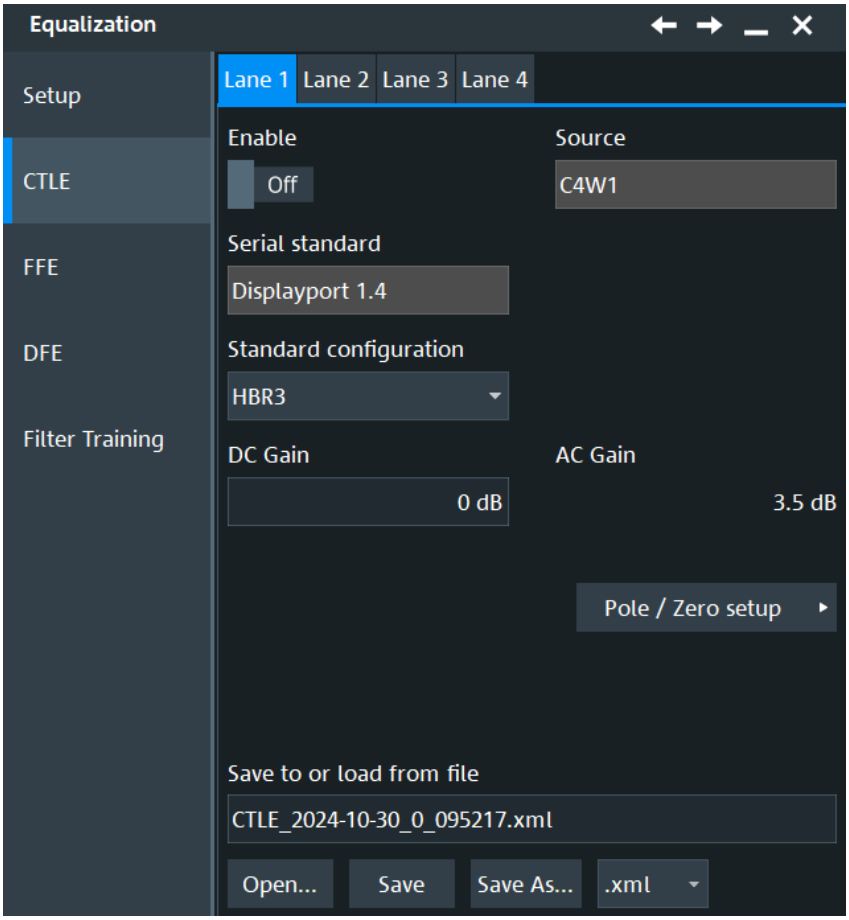

Enable
Enables the continuous time linear equalizer (CTLE).

Remote command:
`LANE<m>:EQUalization:CTLE:STATe` on page 2805

DC Gain
Sets a DC gain for the CTLE filter. The DC gain determines the level of signal amplification at the low frequency end, thus ensuring that low frequency components are amplified to an adequate level to maintain signal integrity.

Remote command:
`LANE<m>:EQUalization:CTLE:DCGain` on page 2803

AC Gain
For HDMI serial standard, an AC gain for the CTLE filter can be set. For other standards with defined fixed AC gain, the AC gain value is displayed.

Remote command:
`LANE<m>:EQUalization:CTLE:ACGain` on page 2802

Serial standard
Displays the currently selected serial standard.

You can set this up in the "Menu" > "Apps" > "Analysis" > "Signal Configuration" dialog.

Standard configuration
Depending on the selected "Serial standard", you can select further standard specific settings.

Remote command:
`LANE<m>:EQUalization:CTLE:SCONfig[:SELect]` on page 2805
`LANE<m>:EQUalization:CTLE:SCONfig:LIST?` on page 2805


Save / recall CTLE settings
Saves the complete CTLE configuration, or loads a saved CTLE configuration. The file format is XML.

To save the CTLE configuration, enter a filename and tap "Save". Alternatively, tap "Save as" to open the file selection dialog box, see Section 12.6, "File selection dialog", on page 529.

To load a CTLE configuration, tap "Open" and select the required file.

Remote command:
`LANE<m>:EQUalization:CTLE:NAME` on page 2803
`LANE<m>:EQUalization:CTLE:OPEN` on page 2803
`LANE<m>:EQUalization:CTLE:SAVE` on page 2804

Pole/ Zero setup
In this dialog you can set up the zero and pole frequencies for the CTLE filter. Depending on the selected Serial standard, standard predefined values are displayed. They can be changed according to your requirements.

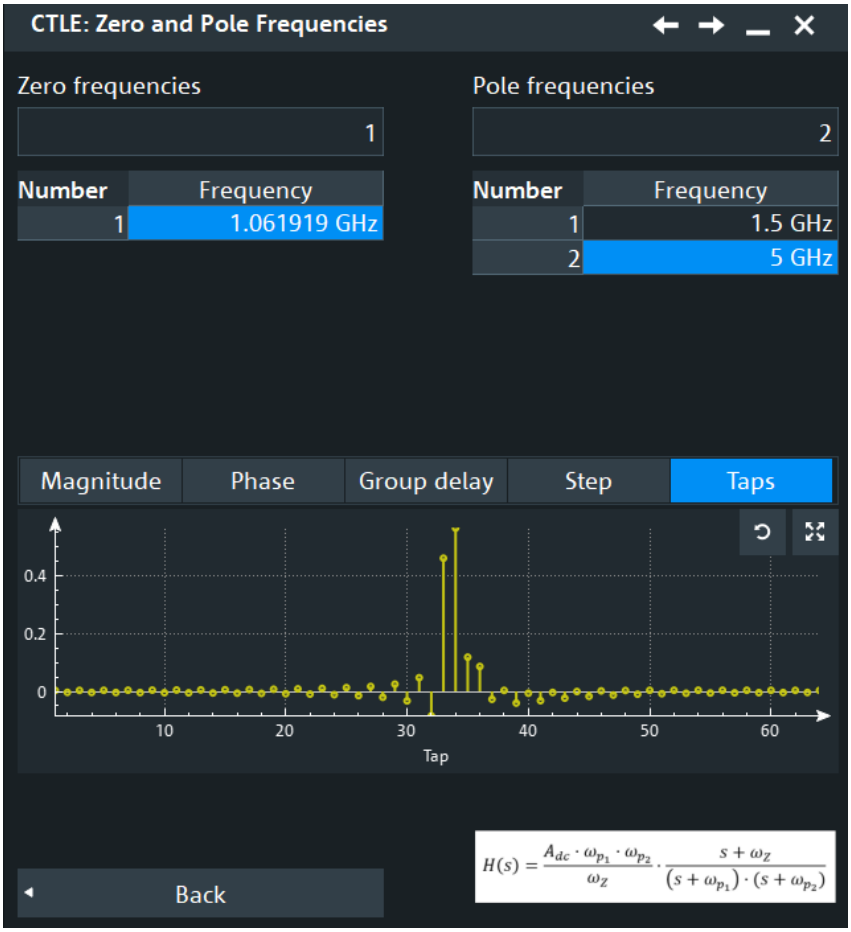

Zero frequencies ← Pole/ Zero setup
Selects the number of zero frequencies for CTLE. Depending on the selected "Serial standard", there are some predefined presets you can use.

You can also enter your custom number of taps and define a "Value" for each of them. You can enter up to 6 zero frequencies.

Remote command:
`LANE<m>:EQUalization:CTLE:ZERO:COUNt` on page 2806
`LANE<m>:EQUalization:CTLE:ZERO:FREQuency<n>` on page 2806

Pole frequencies ← Pole/ Zero setup
Selects the number of pole frequencies for CTLE. Depending on the selected Serial standard, there are some predefined presets you can use.


You can also enter your custom number of taps and define a "Value" for each of them. You can enter up to 6 pole frequencies.

Remote command:
`LANE<m>:EQUalization:CTLE:POLE:COUNt` on page 2803
`LANE<m>:EQUalization:CTLE:POLE:FREQuency<n>` on page 2804


Plot selection ← Pole/ Zero setup
Displays plots for the selected CTLE configurations. Using these plots, you can assess the correction of the signal by CTLE.

You can see the following characteristics:


- "Magnitude"
  The plot is displayed with logarithmic X scale.

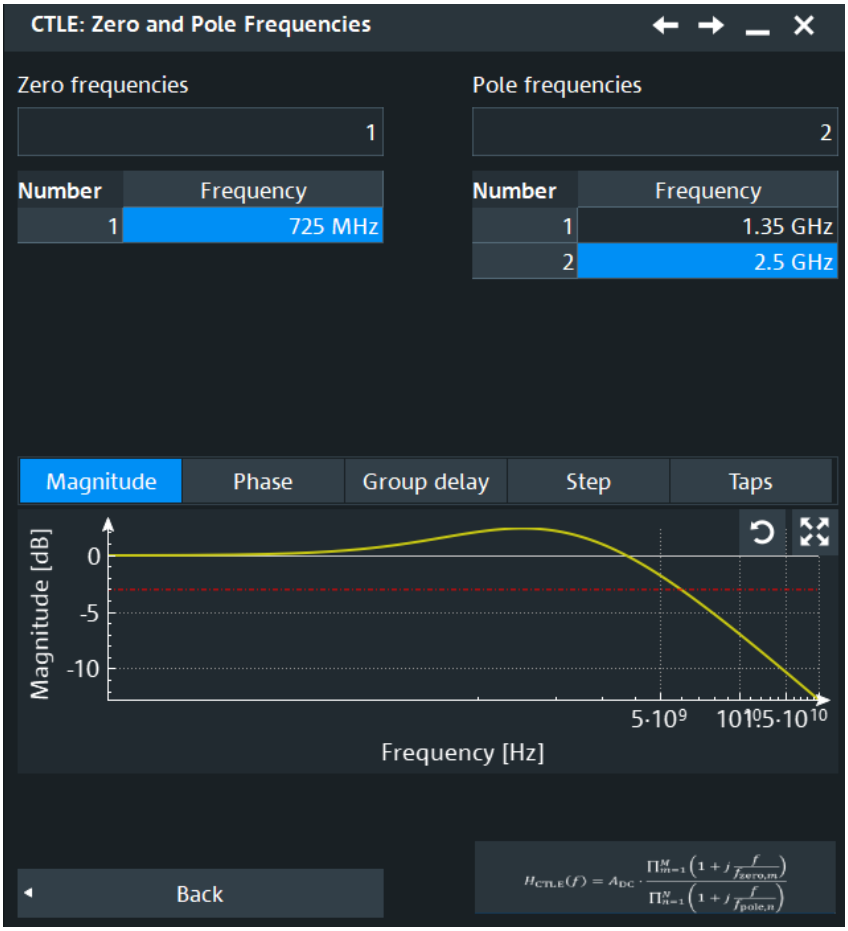


- "Phase"

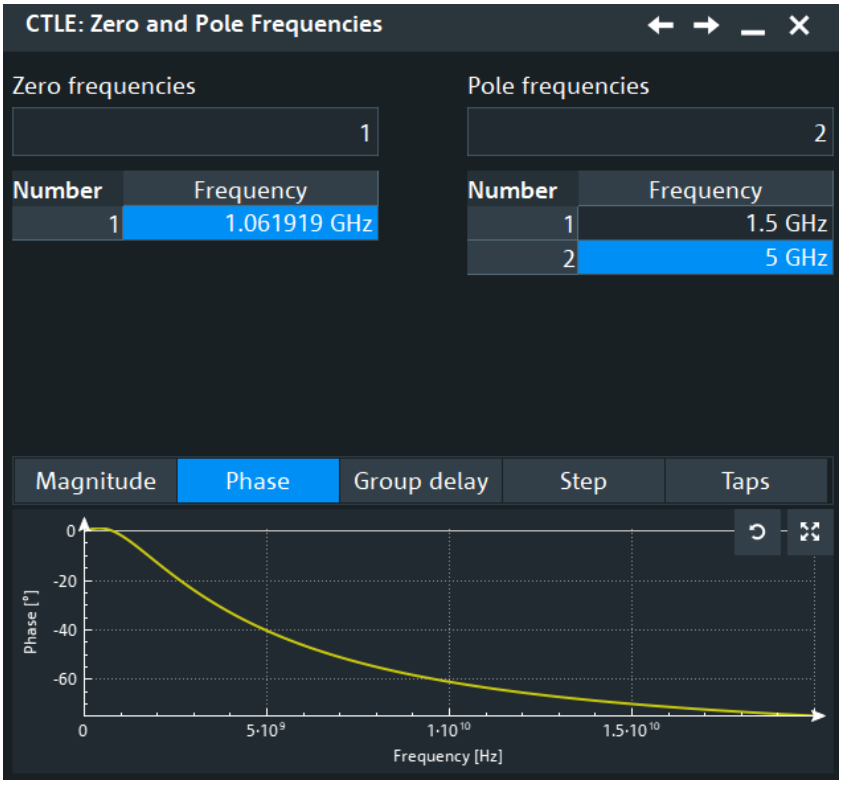


- "Group delay"

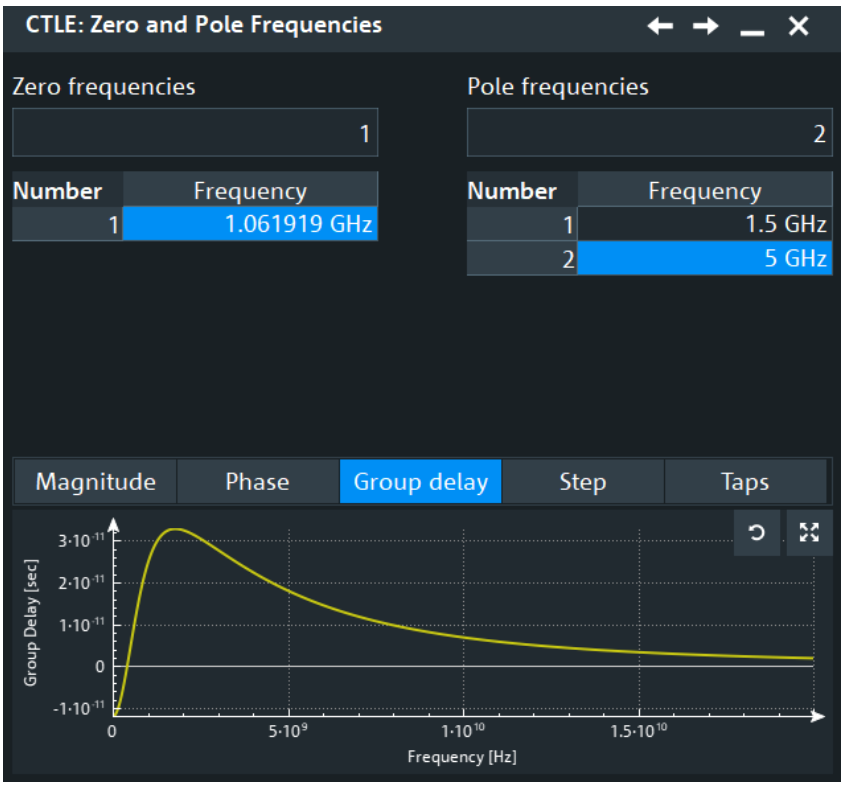

- "Step"

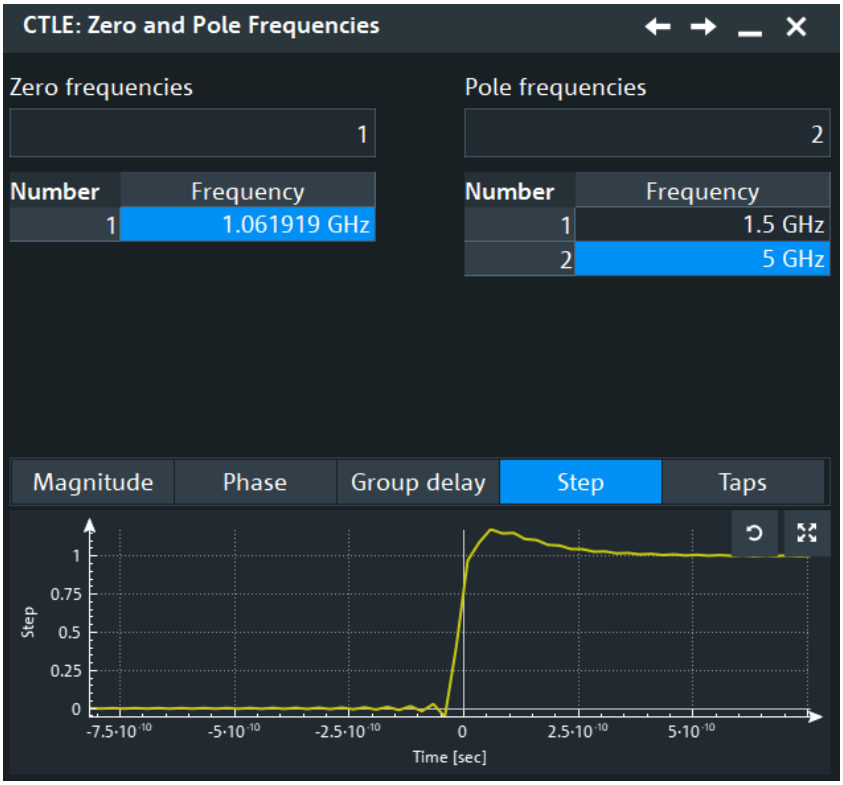

- "Taps"

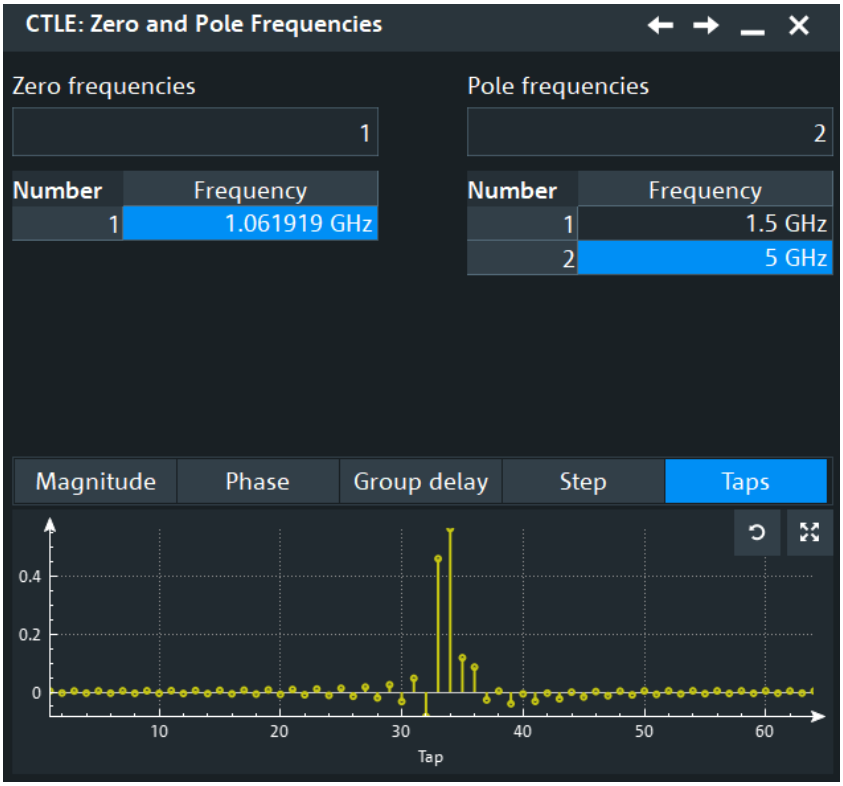


Remote command:
`LANE<m>:EQUalization:CTLE:PSELection` on page 2804

22.5.3 FFE

Access: "Menu" >"Apps" > "Embedding / Equalization" > "Signal Lanes" > "Equalization" > "FFE" tab.

In this dialog, you can define the settings for the feed-forward equalizer.


For more information, see Section 22.1.2, "Feed-forward equalizer (FFE)", on page 1209.

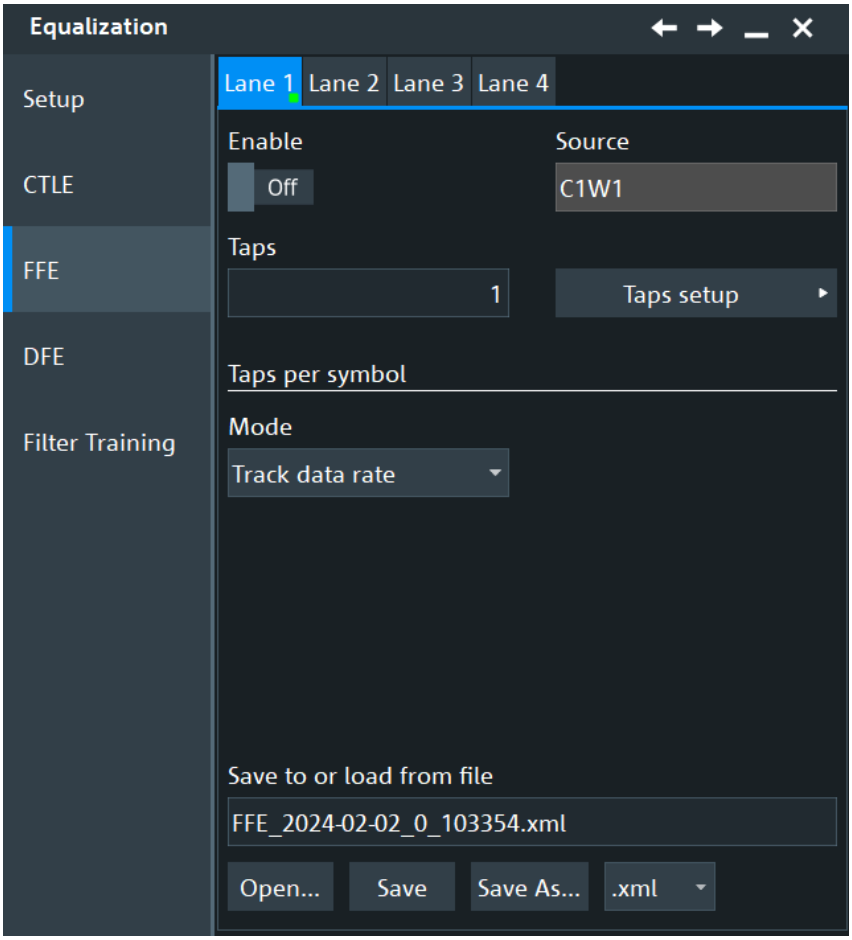

Enable
Enables the feed-forward equalizer (FFE).

Remote command:
`LANE<m>:EQUalization:FFE:STATe` on page 2808

Taps setup

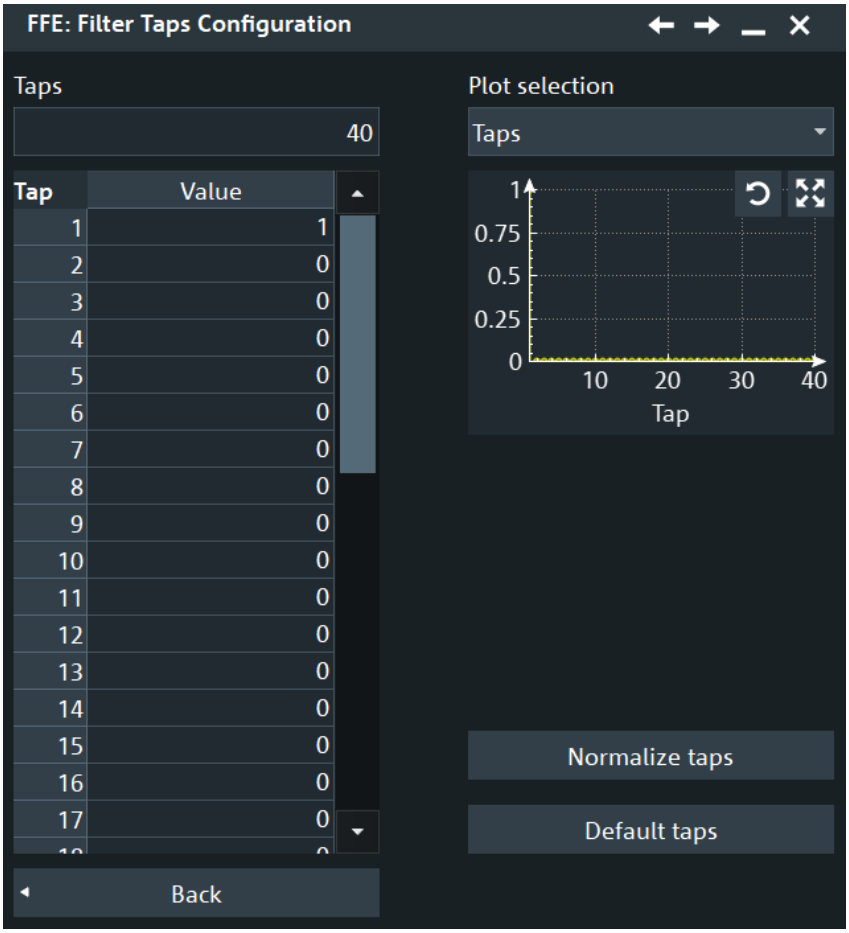

Taps ← Taps setup
Sets the number of taps.You can also define a "Value" for each tap.

Remote command:
`LANE<m>:EQUalization:FFE:TAPS:COUNt` on page 2808
`LANE<m>:EQUalization:FFE:TAPS:TAP<n>` on page 2809

Plot selection ← Taps setup
Displays plots for the selected FFE configurations. Using these plots, you can assess the correction of the signal by FFE.

You can see the following characteristics:

- "Magnitude"
- "Phase"
- "Group delay"
- "Step"
- "Taps"

Remote command:
`LANE<m>:EQUalization:FFE:PSELection` on page 2807

Normalize taps ← Taps setup
Normalizes the taps so that their sum is 1.0.

Remote command:
LANE<m>:EQUalization:FFE:TAPS:NORMalize on page 2808

Default taps ← Taps setup
Sets default taps, e.g. 1,0,0,0.

Remote command:
LANE<m>:EQUalization:FFE:TAPS:PRESet on page 2809

Taps per symbol
Selects how the taps per symbol are determined.

The equalizer can use more than one tap per symbol by sampling at a higher rate than the symbol rate. For example, if the symbol period is T, the equalizer can sample at intervals of T/2 and apply one tap to each sample. Such an equalizer would have two taps per symbol. This can improve results if the clock recovery is not accurate, but requires double the number of taps to be able to compensate the same distortions in frequency.

"Track data rate"	The number of taps tracks the data rate which corresponds to one tap per symbol.
"Manual"	If manual is selected, multiple taps per bit are used for the equalization. You can enter the number in the "Value" field.

Remote command:
LANE<m>:EQUalization:FFE:TAPS:SYMMode on page 2809
LANE<m>:EQUalization:FFE:TAPS:SYMValue on page 2809

Save / recall FFE settings
Saves the complete FFE configuration, or loads a saved FFE configuration. The file format is XML.


To save the FFE configuration, enter a filename and tap "Save". Alternatively, tap "Save as" to open the file selection dialog box, see Section 12.6, "File selection dialog", on page 529.

To load an FFE configuration, tap "Open" and select the required file.

Remote command:
LANE<m>:EQUalization:FFE:NAME on page 2807
LANE<m>:EQUalization:FFE:OPEN on page 2807
LANE<m>:EQUalization:FFE:SAVE on page 2807

22.5.4 DFE

Access: "Menu" >"Apps" > "Embedding / Equalization" > "Signal Lanes" > "Equalization" > "DFE" tab.

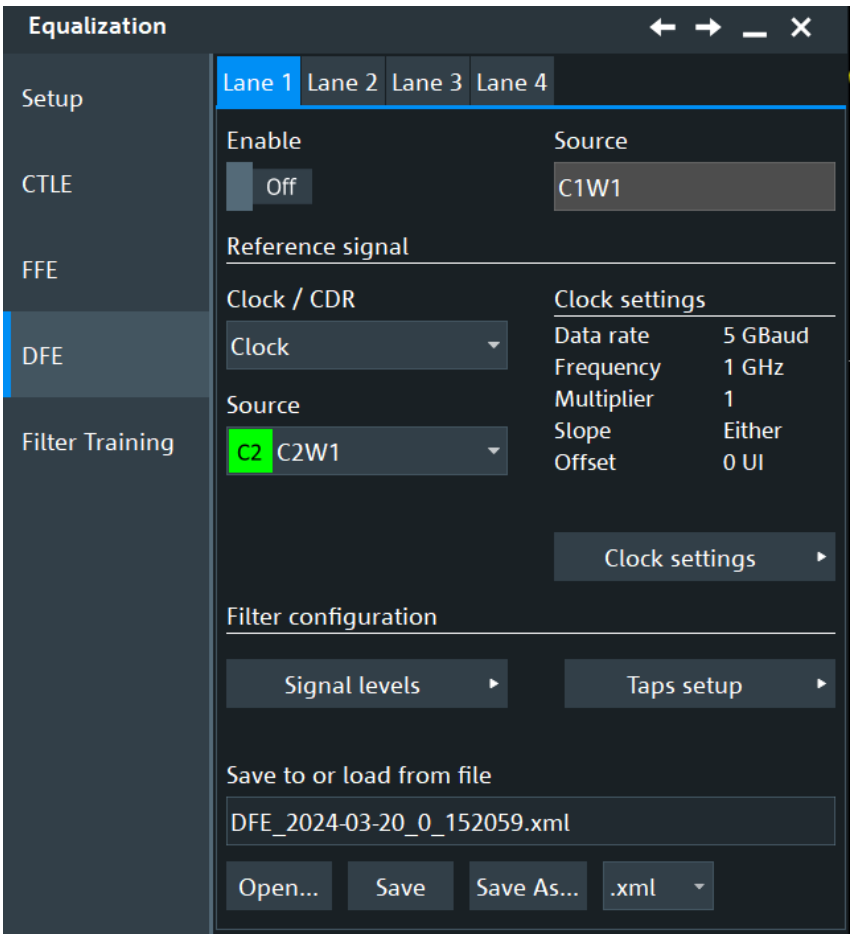

Enable
Enables the decision feedback equalization.

Remote command:
`LANE<m>:EQUalization:DFE:STATe` on page 2811


Reference signal
In this section you can define the reference signal used for DFE.

Clock / CDR ← Reference signal
Selects the type of waveform that is used to obtain the timing information required to slice the data source waveform.

Remote command:
`LANE<m>:EQUalization:DFE:TIMReference:SOURce` on page 2817

Clock ← Reference signal
If a clock signal is available, the instrument can use it directly to set the segmentation timestamps. The signal has to be provided on an additional channel.


With "Source" you can select the source of the clock signal. For the clock settings, see

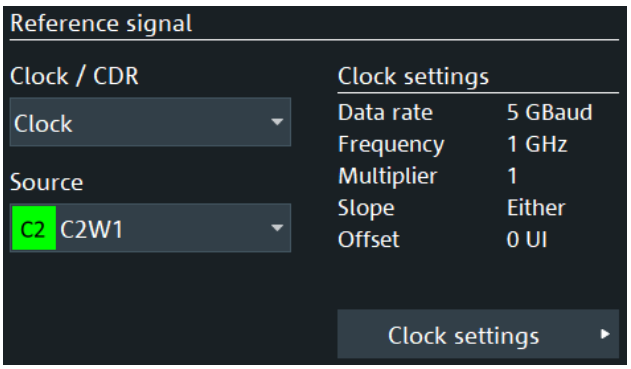

Remote command:
LANE<m>:EQUalization:DFE:TIMReference:SOURce on page 2817


CDR ← Reference signal
Uses a software clock data recovery.

You can also load a reference waveform that contains CDR information in the "Menu" > "Save/Recall" > "Recall" > "Waveform" dialog.

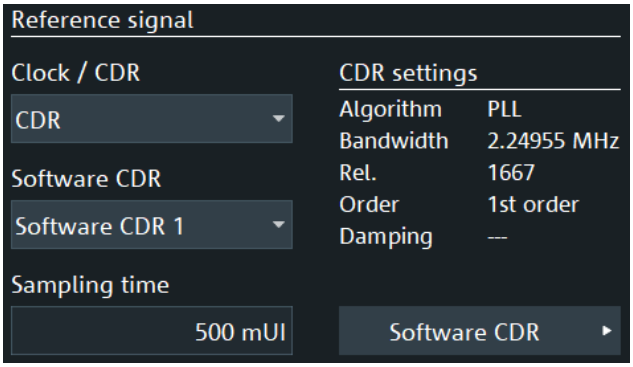

Remote command:
LANE<m>:EQUalization:DFE:TIMReference:CDR[:SELect] on page 2813
LANE<m>:EQUalization:DFE:TIMReference:CDR:SOFTware on page 2813
LANE<m>:EQUalization:DFE:TIMReference:CDR:SOFTware:SAMTime on page 2814

Clock
Opens a dialog to define the setting of the DFE clock.

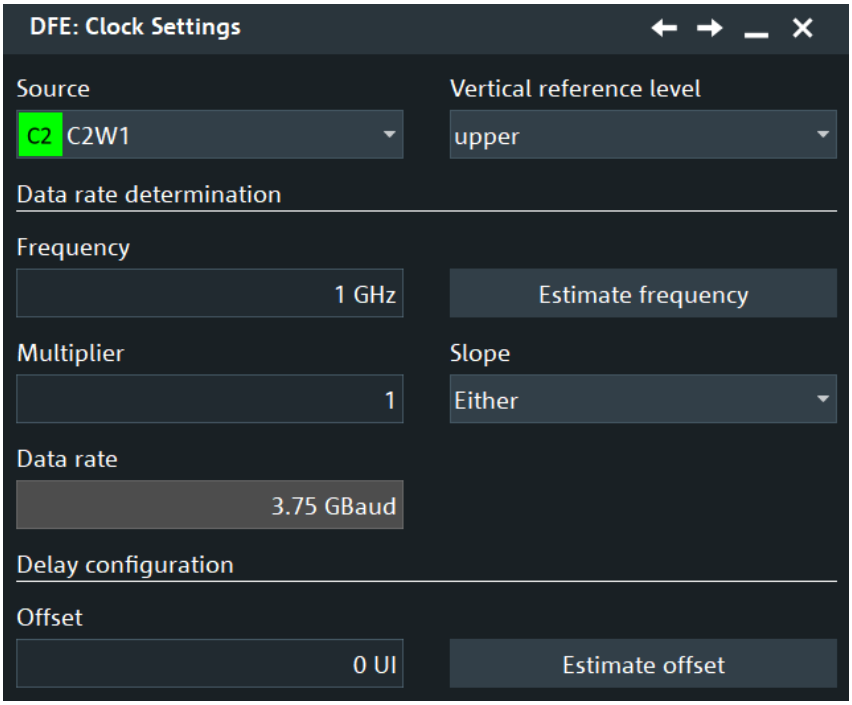

Source ← Clock
Selects the source for the DFE clock.

Remote command:
`LANE<m>:EQUalization:DFE:TIMReference:CLOCk:SOURce` on page 2816

Vertical reference level ← Clock
Sets the reference level to define the timestamps for slicing the data waveform. A timestamp is set each time when the selected slope of the timing waveform crosses the selected reference level.

Remote command:
`LANE<m>:EQUalization:DFE:TIMReference:CLOCk:LEVel` on page 2815

Frequency ← Clock
Sets the clock frequency of the explicit clock signal. If this value is unknown, you can use "Estimate frequency", to calculate an estimate value.

Remote command:
`LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FREQuency` on page 2815
`LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FREStimation` on page 2815

Multiplier ← Clock
Sets a value for the clock multiplier, the ratio of an internal clock rate to the externally supplied clock.

Remote command:
`LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FACTor` on page 2814

Slope ← Clock
The clock slope sets the point in time when the state of the data signal is checked:

"Positive" Rising edge, a positive voltage change.

"Negative" Falling edge, a negative voltage change.

"Either" Both the rising and the falling edge.


Remote command:
`LANE<m>:EQUalization:DFE:TIMReference:CLOCk:EDGE` on page 2814

Data rate ← Clock
Displays the data rate.

Offset, Estimate offset ← Clock
Sets a clock offset. If this value is unknown, you can use "Estimate offset" to calculate an estimate value for the clock offset.

Remote command:
`LANE<m>:EQUalization:DFE:TIMReference:CLOCk:OFFSet` on page 2816
`LANE<m>:EQUalization:DFE:TIMReference:CLOCk:OFEStimation` on page 2816

Filter Taps Configuration

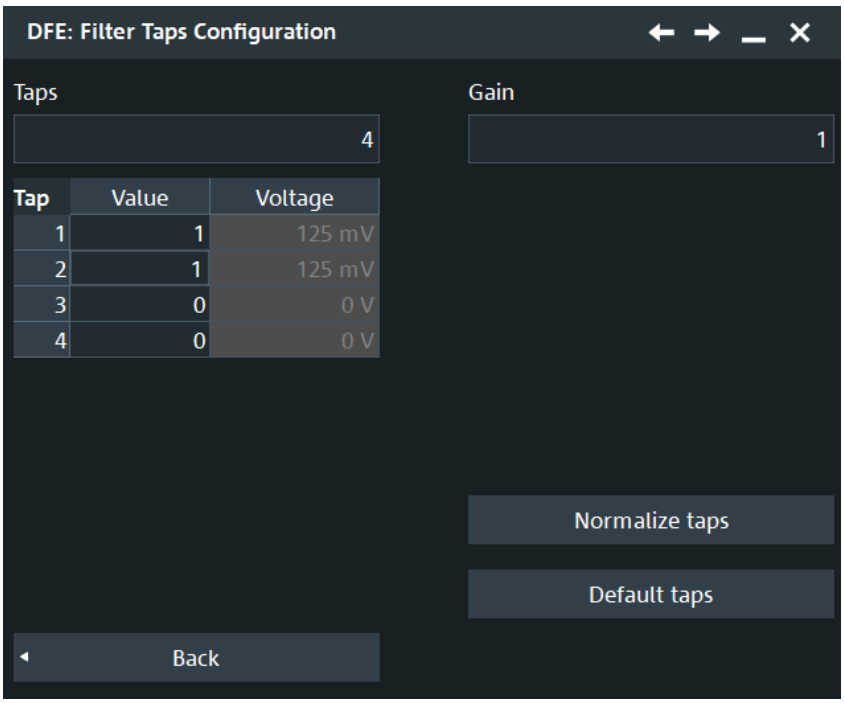

Taps ← Filter Taps Configuration
Selects the number of taps for DFE. You can also define a "Value" for each tap.

Additionally for NRZ signals, the corresponding voltage value is displayed.

Remote command:
`LANE<m>:EQUalization:DFE:TAPS:COUNt` on page 2812
`LANE<m>:EQUalization:DFE:TAPS:TAP<n>` on page 2813

Gain ← Filter Taps Configuration
Sets the gain for the DFE filter.

Remote command:
LANE<m>:EQUalization:DFE:GAIN on page 2810

Normalize taps
Normalizes the taps.

Remote command:
LANE<m>:EQUalization:DFE:TAPS:NORMalize on page 2812
LANE<m>:EQUalization:DFE:TAPS:TAP<n> on page 2813

Default taps
Sets default taps.

Remote command:
LANE<m>:EQUalization:DFE:TAPS:PRESet on page 2812

Save / recall DFE settings
Saves the complete DFE configuration, or loads a saved DFE configuration. The file format is XML.

To save the DFE configuration, enter a filename and tap "Save". Alternatively, tap "Save as" to open the file selection dialog box, see Section 12.6, "File selection dialog", on page 529.


To load a DFE configuration, tap "Open" and select the required file.

Remote command:
LANE<m>:EQUalization:DFE:NAME on page 2811
LANE<m>:EQUalization:DFE:OPEN on page 2811
LANE<m>:EQUalization:DFE:SAVE on page 2811

22.5.5 Filter training

Filter training for equalization is the process of adapting the coefficients of an equalizer filter to optimize its performance in reducing inter-symbol interference (ISI) and other distortions in a communication channel. The goal is to adjust the filter so that the output closely matches the desired signal.

Access: "Menu" >"Apps" > "Embedding / Equalization" > "Signal Lanes" > "Equalization" > "Filter Training" tab.

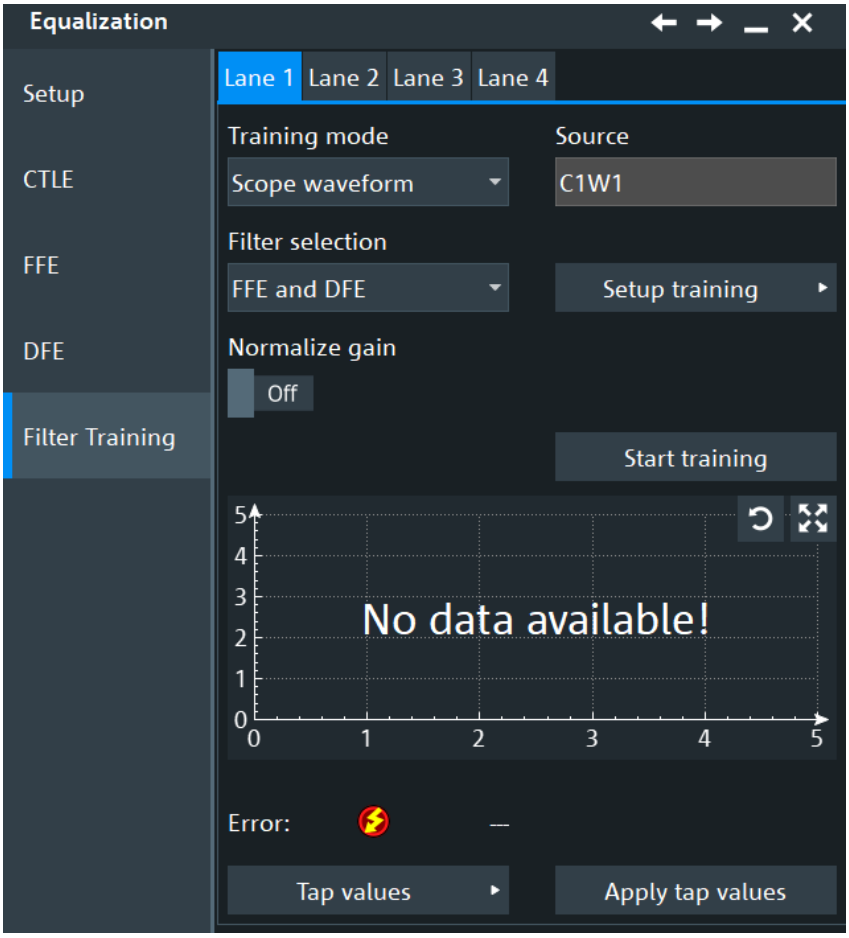

Training mode
Selects the waveform to be trained. You can select a "Scope waveform" or load a "Reference waveform".

Remote command:
`LANE<m>:EQUalization:TRAining:MODE` on page 2822

Filter selection
Selects the filter for the filter training. You can select between an FFE filter and a combination of FFE and DFE filter.

Remote command:
`LANE<m>:EQUalization:TRAining:FSELection` on page 2821

Normalize gain
Sets ths state of the normalize gain for FFE. The gain of a trained DFE is always 1.

If enabled, the gain of the FFE is normalized to 1, such that the signal has a similar amplitude at the input and output of the equalizer.

If disabled, the equalizer is trained such that the output PAM levels are separated by 1 V (e.g., +/- 0.5 V for NRZ).

Remote command:
`LANE<m>:EQUalization:TRAining:NORGain` on page 2822

Start training
Starts the filter training.

Remote command:
LANE<m>:EQUalization:TRAining:STARt on page 2823

Plot
Displays the plots for the selected training configuration.


Error
Shows, if there is an error during the filter training.

Remote command:
LANE<m>:EQUalization:TRAining:ERRor? on page 2823

Apply tap values
Applies the tap values.

Remote command:
LANE<m>:EQUalization:TRAining:APPLy on page 2817

Filter Training Setup : FFE

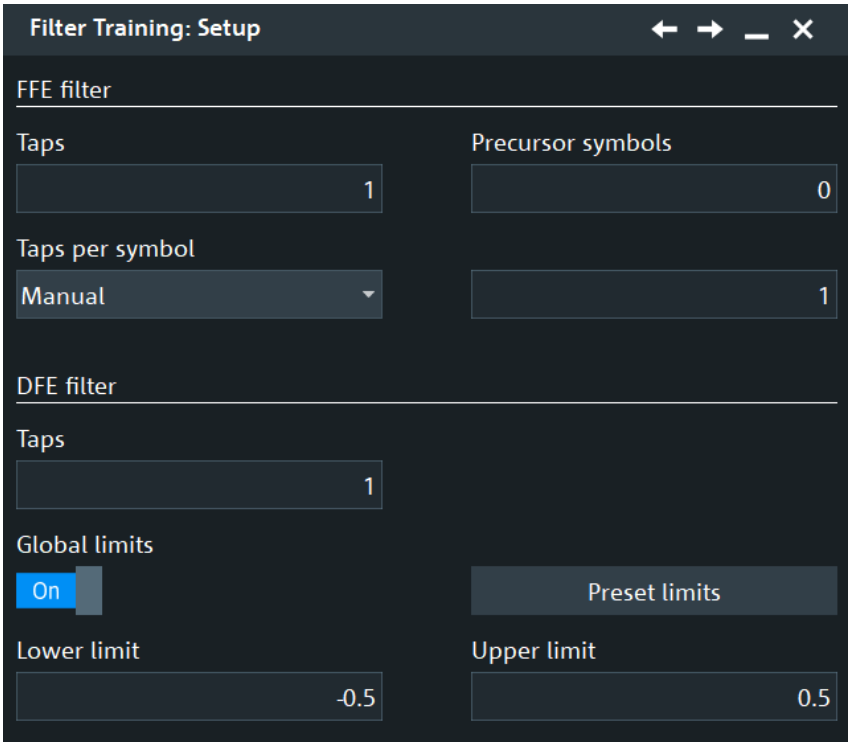

Taps ← Filter Training Setup : FFE
Sets the number of taps used for the training of the FFE. You can select up to 40 taps.

Remote command:
LANE<m>:EQUalization:TRAining:FFE:TAPS:COUNt on page 2820

Precursor symbols ← Filter Training Setup : FFE
Sets a value for the number of the precursor symbols that are used.

FFE uses a linear combination of some past, present and future symbols to estimate the current symbol. The precursor taps determine the number of future symbols that are used to estimate the current symbol. This is also the zero-based index of the strongest tap, and approximately equivalent to the group delay of the equalizer, measured in symbol periods.

Default value is 0.4 * (Number of taps). This usually gives good results.


Remote command:
`LANE<m>:EQUalization:TRAining:FFE:TAPS:PRECursor` on page 2820

Taps per symbol ← Filter Training Setup : FFE
Selects how the taps per symbol are determined.

"Track data rate"	The number of taps tracks the data rate which corresponds to one tap per symbol.
"Manual"	If manual is selected, multiple taps per bit are used for the equalization. You can enter the number in the "Value" field.

Remote command:
`LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMMode` on page 2821
`LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMValue` on page 2821

Filter Training Setup : DFE

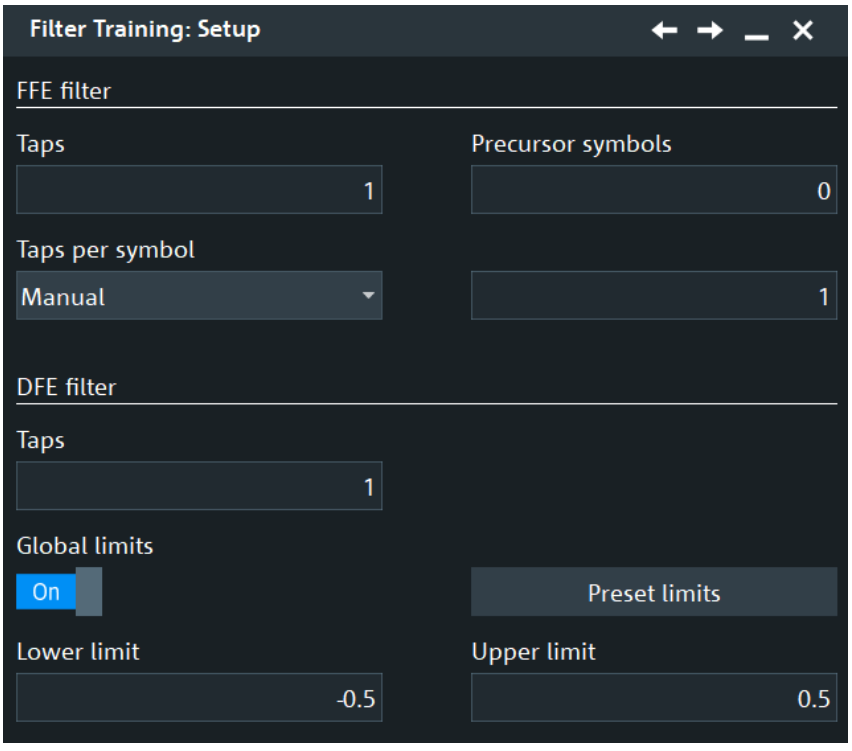

In this dialog you can define the settings of the FFE and DFE filter.

Taps ← Filter Training Setup : DFE
Sets the number of taps used for the training of the DFE. You can select up to 5 taps.

Remote command:
`LANE<m>:EQUalization:TRAining:DFE:TAPS:COUNt` on page 2819

Global limits ← Filter Training Setup : DFE
If enabled, you can define the same "Lower limit" and "Upper limit" limits for all taps. Else, you can define separate values for each tap.

Remote command:
`LANE<m>:EQUalization:TRAining:DFE:TAPS:UGLLimit` on page 2819

Lower limit, Upper limit ← Filter Training Setup : DFE
Sets the lower/upper limit for the DFE filter. The trained/generated filter tap values are within these given limits. The values are constrained between -1 and 1.

Remote command:
`LANE<m>:EQUalization:TRAining:DFE:LIMits:TAP<n>:LLIMit` on page 2818
`LANE<m>:EQUalization:TRAining:DFE:LIMits:TAP<n>:ULIMit` on page 2818
`LANE<m>:EQUalization:TRAining:DFE:TAPS:LLIMit<n>` on page 2819
`LANE<m>:EQUalization:TRAining:DFE:TAPS:ULIMit<n>` on page 2820

Preset limits ← Filter Training Setup : DFE
Sets the DFE taps limits to their default values.

Remote command:
`LANE<m>:EQUalization:TRAining:DFE:LIMits:PRESet` on page 2818

23 External frontend control (option R&S RTP-K553)

If the External Frontend Control option (R&S RTP-K553) is installed, you can use one or more external frontends to analyze signals with the R&S RTP. Depending on the external frontend, an R&S RTP with ≥ 8 GHz or ≥ 13 GHz is required. The external frontends extend the frequency range of the oscilloscope. They receive a radio frequency (RF) and downconvert it to an intermediate frequency that is transmitted to the oscilloscope.

In addition to the R&S RTP-K553 option, you need at least one of these options to correct the frequency response of the external frontends in the oscilloscope:

- R&S RTP-K11 I/Q software interface
- R&S RTP-K121 Deembedding

To analyze the signal data, you need a suitable software on a connected computer:

- R&S VSE Vector Signal Explorer Software
- Another software that can receive data via remote control and analyze it.

23.1 External frontend basics

New technology standards, such as 5G and 6G, increase the demand of higher carrier frequencies and higher bandwidth. For example, the D band of 6G requires carrier frequencies up to 170 GHz and bandwidth up to 10 GHz. To measure these signals in a flexible and cost efficient way, the R&S RTP oscilloscope can be combined with external frontends.

The external frontend downconverts the high-frequency RF input signal to a lower intermediate frequency IF signal using its own internal local oscillator. For all subsequent signal processing steps in the R&S RTP, this process is transparent. Thus, the external frontend extends the frequency range of the oscilloscope, for example, up to 170 GHz with external frontend R&S FE170SR and R&S RTP with 13 GHz or 16 GHz bandwidth.

In complex measurement setups, long RF cables between the DUT and the analyzer are often necessary due to the physical dimensions of high-performance oscilloscopes. When measuring high-frequency signals, the long RF cable can lead to unwanted loss. An external frontend with smaller physical dimensions allows for measurements closer to the DUT. The measurement signal is transferred from the DUT to the oscilloscope on a lower intermediate frequency (IF), for which loss does not have a major effect.

Table 23-1: Supported external frontend types and maximum number of connected external frontends

External frontend	R&S RTP model	Number of external frontends
R&S FE44S R&S FE50DTR (Rx only)	R&S RTP084B R&S RTP134B R&S RTP164B	Max. 4
R&S FE110SR R&S FE170SR	R&S RTP134B R&S RTP164B	Max. 2

Refer to the oscilloscope's specifications document for an up-to-date list of supported external frontends. For details on setting up the external frontend, see the documentation of the device used.

The external frontend is controlled by the R&S RTP via a LAN connection. Up to 2 LAN/SSL connections are supported by the external frontend. The data is transferred to the oscilloscope using an IF cable. In addition, a reference signal is provided from the R&S RTP to one or all connected external frontends.

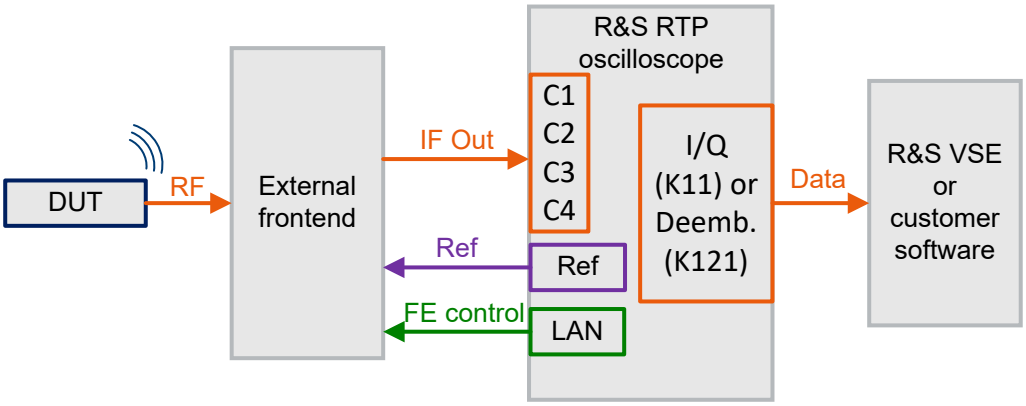


Figure 23-1: Schematic test setup with external frontend

The oscilloscope receives the downconverted signals and provides I/Q data or corrected raw data for further analysis. For data analysis, you can use the R&S VSE Vector Signal Explorer software, or another suitable analysis software.

23.2 Test setups

You can connect several external frontends to the R&S RTP in different ways. To analyze the data that is acquired, you need a computer with an analyzing software, for example, R&S VSE.

The common points of all test setups are the following:

- The external frontends are controlled by the R&S RTP.
- The software on the computer controls the R&S RTP. From this perspective, the external frontends and oscilloscope look like one unit.

- The external frontends have an encrypted control interface.
- IF cables with good quality up to 16 GHz are required.

The basic setup uses one external frontend to analyze one channel.

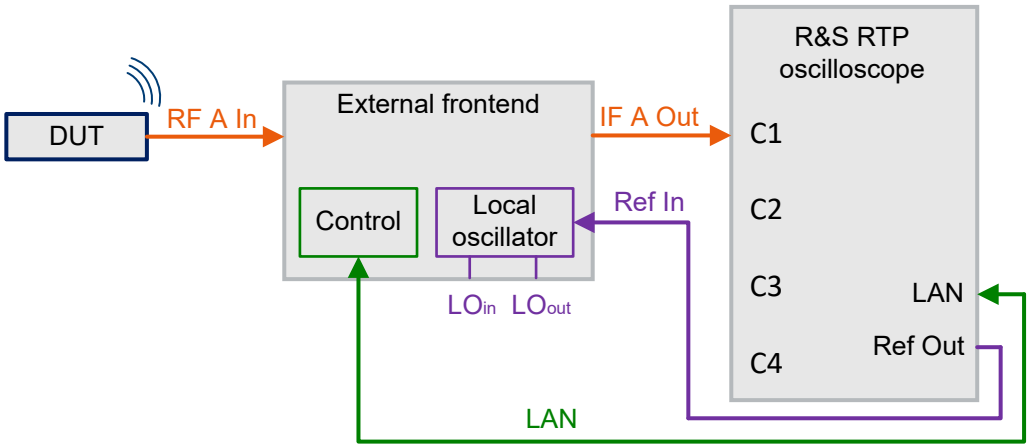


Figure 23-2: Simple test setup for analysis of one channel

Coupled references

In a test setup with coupled references, each external frontend gets the reference frequency from the oscilloscope. Coupling the references avoids frequency offset.

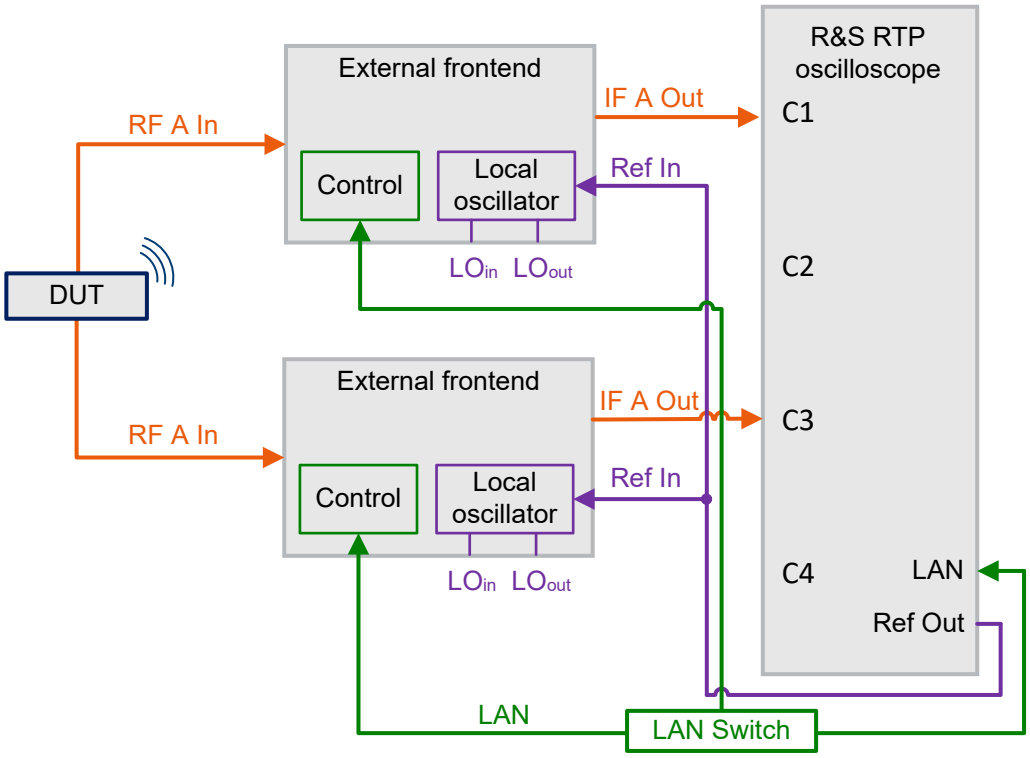


Figure 23-3: Test setup for analysis of 2 channels with 2 external frontends and coupled reference frequency

Coupled local oscillators

In test setups with coupled local oscillators, the LO output of one external frontend is connected to the LO input of the next external frontend. The first external frontend receives the reference signal from the oscilloscope. Coupling local oscillators results in minimum phase noise in the setup.

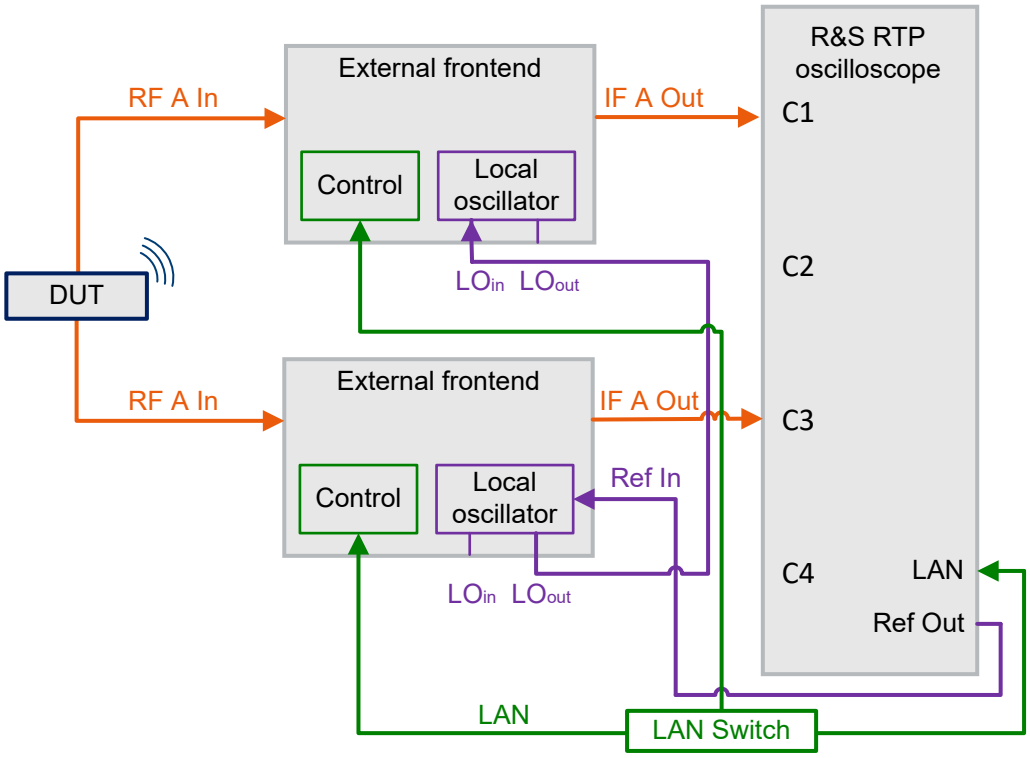


Figure 23-4: Test setup for analysis of 2 channels with 2 external frontends and coupled local oscillators

The test setup with 4 channels and 2 dual-channel external frontends is suitable for 4x4 MIMO tests. The local oscillators are connected in this setup.

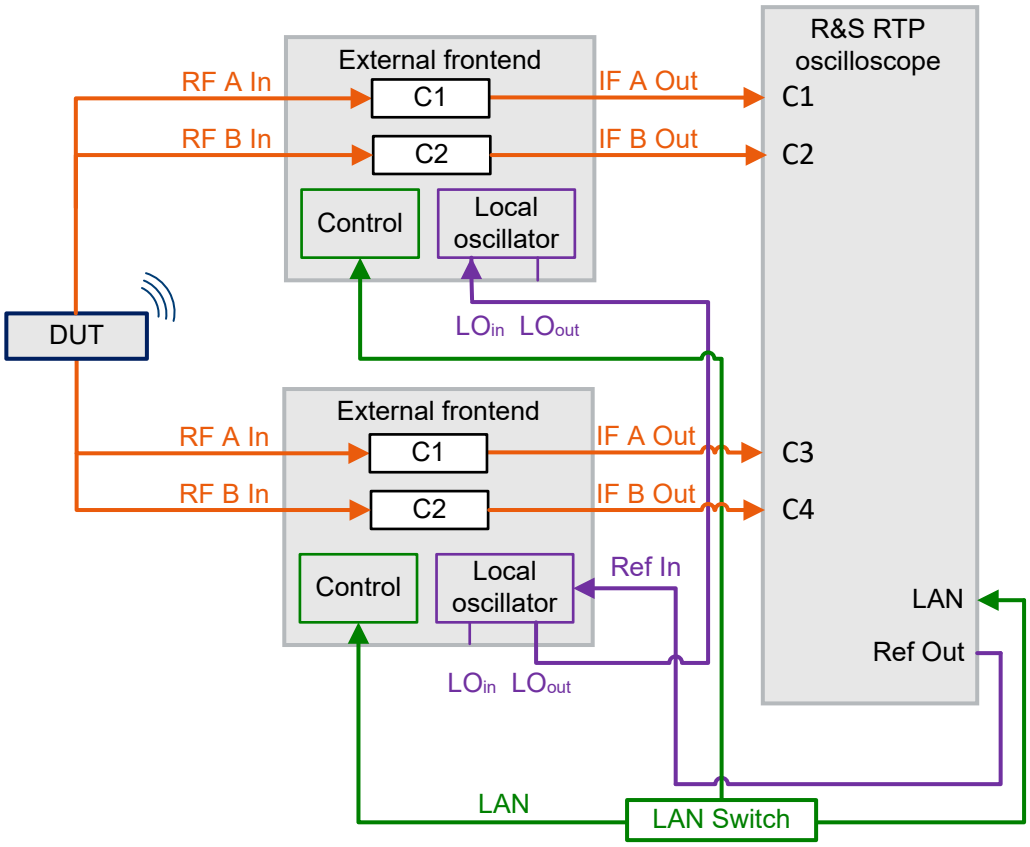


Figure 23-5: Test setup for analysis of 4 channels with 2 external frontends and coupled local oscillators

23.3 Settings for external frontend control


The external frontend support is an RF application on the R&S RTP.

Access: "Menu" > "Apps" > "RF" tab > "External Frontend", or Toolbar > "Ext. FE".

- Setup....1252
- Network....1254
- Settings....1256
- Accessories....1259

23.3.1 Setup

Access: "Menu" > "Apps" > "RF" tab > "External Frontend" > "Setup", or Toolbar > "Ext. FE"

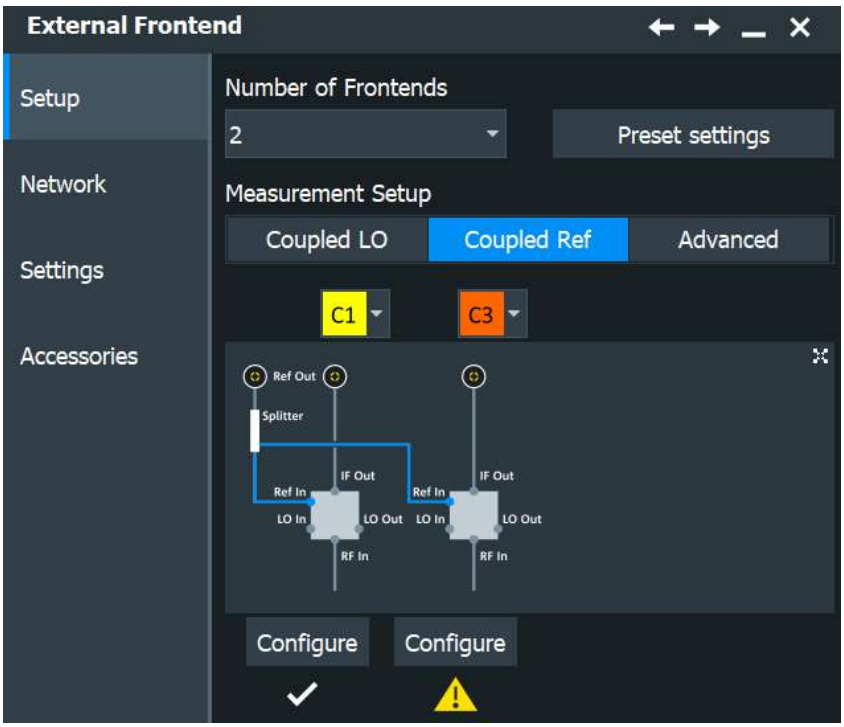

Number of Frontends 1253
Preset settings 1253
Measurement Setup 1253
Configure 1254

Number of Frontends
Sets the number of connected external frontends.

See Table 23-1 for the maximum number of external frontend connections.

Remote command:
`EFRontend:COUNt` on page 2825

Preset settings
Resets the complete configuration of the external frontends to the default values including the network connections. External frontends have their own preset. The general preset disconnects the external frontends but does not affect their settings.

Remote command:
`EFRontend:PRESet` on page 2826

Measurement Setup
Selects the test setup and the input channels to which the external frontends are connected.

- "Coupled LO": local oscillators of the external frontends are connected.
- "Coupled Ref": the reference frequency "Ref In" for each external frontend comes from the oscilloscope.
- "Advanced": user-defined test setup.

See also: Section 23.2, "Test setups", on page 1248.


Remote command:
EFRontend:SETup on page 2826
EFRontend:CSELect<m> on page 2825

Configure
Opens the network configuration settings for the connected channel. See Section 23.3.2, "Network", on page 1254.

23.3.2 Network

Access: "Menu" > "Apps" > "RF" tab > "External Frontend" > "Network" > select channel.

The first connection to an external frontend can take up to 1 minute until all the calibration data are read. Later connections are much faster.

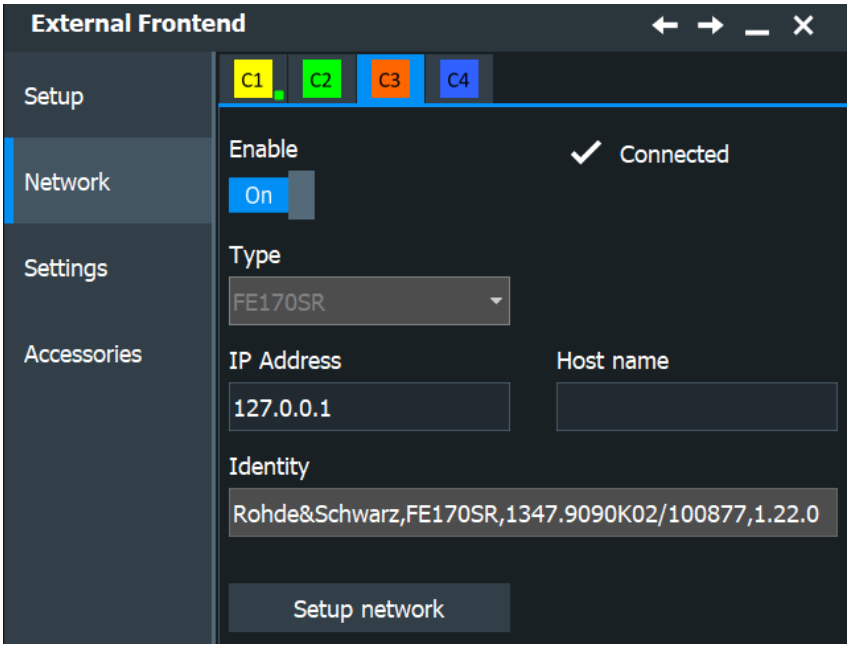

Enable....1254
Type....1255
IP Address....1255
Host name....1255
Identity....1255
Setup network....1255

Enable
Activates the external frontend on the selected channel.

Remote command:
CHANnel<ch>:EFRontend:CONNection:STATe on page 2825
CHANnel<ch>:EFRontend:CONNection:CSTate? on page 2824

Type
Selects the type of the connected external frontend, for example, R&S FE44S or R&S FE170SR.

Remote command:
`CHANnel<ch>:EFRontend:TYPE:LIST?` on page 2826
`CHANnel<ch>:EFRontend:CONNection:CONFig` on page 2824

IP Address
Enter the IP address of the connected external frontend. The external frontend must be connected to the R&S RTP via LAN. The IP address is indicated on the electronic ink display on the external frontend. The IP address is an alternative to the host name, you can enter the one or the other.

Remote command:
`CHANnel<ch>:EFRontend:CONNection:CONFig` on page 2824


Host name
Enter the name of the connected external frontend. The host name is an alternative to the IP address, you can enter the one or the other.

Remote command:
`CHANnel<ch>:EFRontend:CONNection:CONFig` on page 2824

Identity
Shows the IDN string of the connected external frontend, which contains the external frontend type, part number, serial number and version.

Remote command:
`CHANnel<ch>:EFRontend:IDN?` on page 2826


Setup network
Opens a dialog to define specific network settings, in particular, if DHCP is not applicable:

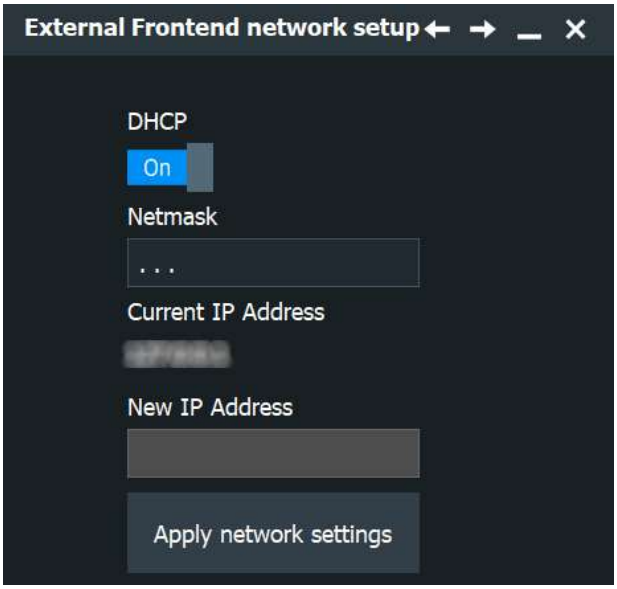

"DHCP"	Switch off DHCP for manual IP configuration of the external frontend. Contact your network administrator to obtain a valid IP address. The automatic configuration mode (DHCP = ON) uses DHCP server to obtain the instrument IP address.
"Netmask"	Subnet mask of the network.
"New IP address"	IP address of the external frontend.
"Apply network settings"	Activates the settings.

23.3.3 Settings

Access: "Menu" > "Apps" > "RF" tab > "External Frontend" > "Settings"

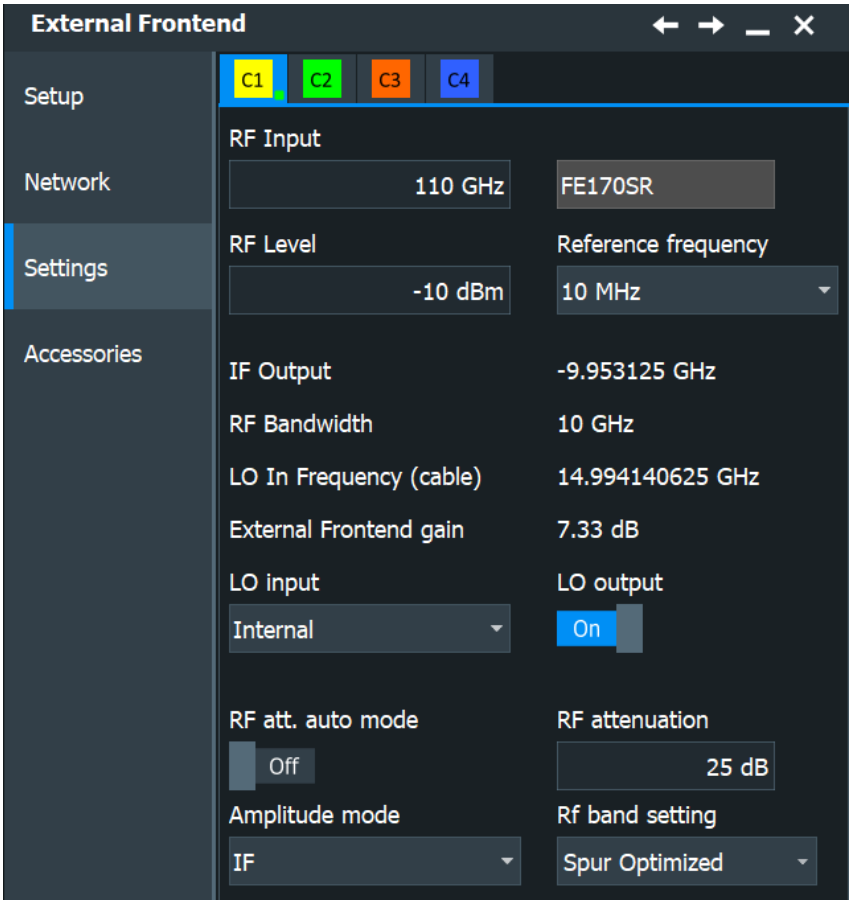

The selected external frontend type is shown for information. To change the external frontend, select the "Network" tab. Depending on the selected test setup, some settings are preconfigured or read-only.

RF Input 1257
RF Level 1257
Reference frequency 1257
IF Output 1257

RF Bandwidth....1257
LO In Frequency (cable)....1258
External Frontend gain....1258
LO input, LO output....1258
RF attenuation auto mode, RF attenuation....1258
Amplitude mode....1258
RF band setting....1259

RF Input
Sets the RF frequency of the signal that the external frontend receives from the DUT. The value is the center frequency that determines the LO frequency generation.

The instrument suggests a value that is supported by the connected external frontend.

Remote command:
`CHANnel<ch>:EFRontend:FREQuency:RFRequency[:VALue]` on page 2839

RF Level
Sets the reference level of the signal at the RF input of the external frontend. If this level is entered correctly, the external frontend is configured such that the level at the input of the R&S RTP is optimal.

Remote command:
`CHANnel<ch>:EFRontend:RFINput:LEVel` on page 2840

Reference frequency
Sets the reference frequency that is used for frequency conversion on the external frontend. The external frontend needs an external reference frequency to generate its own LO frequency if no external LO is available.

In "Coupled LO" and "Coupled Ref" measurement setup, the reference frequency is the frequency of the Ref Out signal of the oscilloscope, 10 MHz.

In "Advanced" setup, also other sources of the reference frequency are possible, e.g. from a signal analyzer. You can select the value from a list of reference frequencies that are supported by the connected external frontend.

Remote command:
`CHANnel<ch>:EFRontend:FREQuency:REFerence[:VALue]` on page 2837

IF Output
Shows the intermediate frequency to which the signal is downconverted by the external frontend.

Remote command:
`CHANnel<ch>:EFRontend:FREQuency:IFRequency[:VALue]?` on page 2833

RF Bandwidth
Shows the maximum analysis bandwidth of the connected external frontend.

Remote command:
`CHANnel<ch>:EFRontend:FREQuency:IFBWidth:LIMit?` on page 2833

LO In Frequency (cable)
In "Coupled LO" mode, the local oscillators of the external frontends are connected with a cable from "LO Out" of one external frontend to "LO In" of the next external frontend. The field displays the frequency of the signal that goes through this cable, which is between 8 GHz and 16.4 GHz.

Remote command:
`CHANnel<ch>:EFRontend:FREQuency:LOSCillator:INPut:FREQuency?` on page 2834

External Frontend gain
Displays the gain of the external frontend for information.

Remote command:
`CHANnel<ch>:EFRontend:GAIN?` on page 2839

LO input, LO output
For measurement setups "Coupled LO" and "Coupled Ref", the status of the LO input and LO output is shown. The usage is defined by the setup definition.

If the "Advanced" measurement setup is selected, set "LO input" and "LO output" according to the connection of the local oscillator in your setup.

"LO input = Internal"	The LO input of the selected external frontend is NOT connected to the LO output of another external frontend. The reference frequency is received via "Ref In" from the oscilloscope.
"LO input = External"	The LO input of the selected external frontend is connected to the LO output of another external frontend.

Remote command:
`CHANnel<ch>:EFRontend:FREQuency:LOSCillator:MODE` on page 2834
`CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:STATe` on page 2835

RF attenuation auto mode, RF attenuation
The R&S RTP sets the signal level based solely on the "RF Level" setting. The RF attenuation settings are meant to protect the mixer of the external frontend from high RF input levels. Increasing the RF attenuation reduces intermodulation in the mixer, but increases noise because the signal needs reamplification afterwards.

If "RF attenuation auto mode" is "On", the instrument provides a good compromise between intermodulation and noise, and the optimal vertical scale is set. If "Off", you can fine-tune this trade-off by adjusting "RF attenuation".

Remote command:
`CHANnel<ch>:EFRontend:ATTenuation:AUTO` on page 2828
`CHANnel<ch>:EFRontend:ATTenuation[:VALue]` on page 2829
`CHANnel<ch>:EFRontend:ATTenuation:STEP:LIST?` on page 2829

Amplitude mode
Selects the signal to be displayed, and defines the vertical scale.

Before you change the settings, set the vertical scale of the oscilloscope to 50 mV/div. In RF amplitude mode, the level and scale are calculated from the gain settings of the RF level.

"RF" Shows the RF signal that is input to the external frontend. The vertical scale is calculated out of the specified "RF Level" and the "External Frontend gain" so that the signal uses the complete height of the diagram. Both values are visible in the dialog.

"IF" Shows the IF signal with the vertical scale that is set on the oscilloscope. When an external frontend is enabled, or you switch to IF amplitude mode, the vertical scale is set to 50 mV/div.

Remote command:
`CHANnel<ch>:EFRontend:AMPLmode` on page 2828

RF band setting
Defines the intermediate frequency (output) range of the external frontend.

"IF Low" A higher intermediate frequency is used on the external frontend, resulting in a higher input frequency at the R&S RTP.
Only available for external frontends R&S FE44S and R&S FE50DTR.

"IF High" A lower intermediate frequency is used on the external frontend, resulting in a lower input frequency at the R&S RTP.
Only available for external frontends R&S FE44S and R&S FE50DTR.


"Spur Optimized" Avoids unwanted spurious effects on the IF output.
Only available for external frontends R&S FE110SR and R&S FE170SR.

"EVM Optimized" The IF output provides an optimal EVM result.
Only available for external frontends R&S FE170SR.

Remote command:
`CHANnel<ch>:EFRontend:FREQuency:BCONfig:LIST?` on page 2831
`CHANnel<ch>:EFRontend:FREQuency:BCONfig:SELect` on page 2832

23.3.4 Accessories

Access: "Menu" > "Apps" > "RF" tab > "External Frontend" > "Accessories"

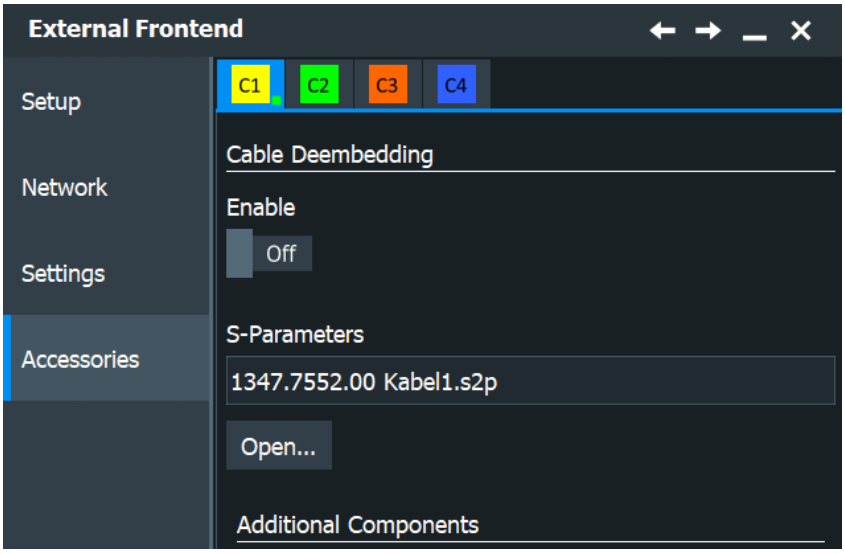

Cable Deembedding: Enable 1260
S-Parameters 1260
Additional components 1260

Cable Deembedding: Enable
Activates the correction of the IF signal due to IF cable loss from the external frontend to the oscilloscope.

Remote command:
`CHANnel<ch>:EFRontend:ALIGn:STATe` on page 2841

S-Parameters
Defines the S-parameter file that contains the correction values for the cable that connects the external frontend to the oscilloscope.

You can type the filename, or tap "Open" to select the path and file in a file selection dialog. The file is loaded automatically when cable deembedding is enabled.

Remote command:
`CHANnel<ch>:EFRontend:ALIGn:FILE` on page 2841

Additional components
If you use R&S FE170SR, you can insert one or two additional external devices in the signal path between the DUT and the external frontend, for example, filters. The external frontend considers the additional gain or correction values.

When the R&S RTP initially connects to the external frontend, the instrument automatically detects any devices connected to the external frontend. The information on the detected devices is displayed in the "Accessories" tab.

The S-parameters of additional components are compensated automatically by the external frontend.

"Component"	Type of the external device: amplifier or filter.
"Frequency min", "Frequency max"	Supported frequency range of a connected filter.

"Part number" Part number of the connected device.

Remote command:
CHANnel<ch>:EFRontend:EXTComponent<n>:TYPE? on page 2843
CHANnel<ch>:EFRontend:EXTComponent<n>:FMINimum? on page 2842
CHANnel<ch>:EFRontend:EXTComponent<n>:FMAXimum? on page 2842
CHANnel<ch>:EFRontend:EXTComponent<n>:PARTno? on page 2843

23.4 Using external frontends to get I/Q data

You can use external frontends with option R&S RTP-K553 together with option R&S RTP-K11 I/Q software interface. To analyze the data, you can use the R&S VSE software or another analysis software.


Typical use cases are:

- Analysis of RF chips with 2x2 polarization MIMO and bandwidth 10 GHz
- Analysis of RF chips with differential analog I/Q output and bandwidth 10 GHz with R&S VSE software

If both options are installed on the instrument, and the external frontends are configured and enabled, they are included in the signal path. The frequency response of the external frontend is corrected automatically by the calibration data of the external frontend.

1. Start the R&S RTP-K11 I/Q application: [Apps] > "RF" tab > "IQ".
2. Select "External Frontend" to configure the external frontends.
3. Set up and enable the external frontends.
4. Tap the "Back" arrow in the dialog title bar to return to the "IQ Sampling" dialog.

   You can see the active external frontends in the signal path of I/Q data analysis.
5. For "Carrier frequency", enter the frequency of the DUT at the input of the external frontend.
6. Set the "Input type" = "Real". The complex input type is not supported when external frontends are used.

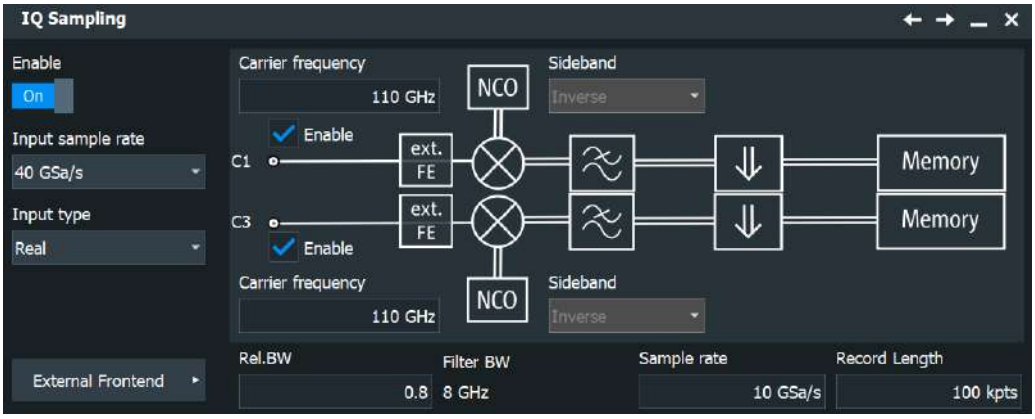

You can deembed the characteristics of an IF cable in the "External Frontend" > "Accessories" tab. See also: Section 23.3.4, "Accessories", on page 1259.


23.5 Using external frontends with deembedding

You can use external frontends with option R&S RTP-K553 together with the deembedding option R&S RTP-K121. To analyze the acquired data, you can use the R&S VSE software. Real-time deembedding with option R&S RTP-K122 is *not* supported in this scenario.


Correcting the frequency response of the external frontends becomes more important if the bandwidth of the signal increases. Signals with higher bandwidth are used, for example, in various radar applications. In addition, the potential gain in having smaller files for baseband signals via I/Q application (R&S RTP-K553) diminishes when the bandwidth increases. In such a scenario, a waveform-based analysis method on the deembedded IF signal can be more suitable.

The external frontend is an additional component in the deembedding cascade. It is included automatically, the S-parameters of the connected external frontends are loaded, and the deembedding removes the parasitic effects of the component from the measured signal. The effective bandwidth is set automatically to the center frequency + bandwidth/2 of the external frontend. Additional components can be included in deembedding at the IF side of the external frontend.

1. Start the R&S RTP-K121 deembedding application: [Apps] > "Analysis" tab > "Deembedding".
2. Select the input channel to which the external frontend is connected.
3. Under "Meas setup definition", tap the "+" icon.
4. Select the "External Frontend" component.

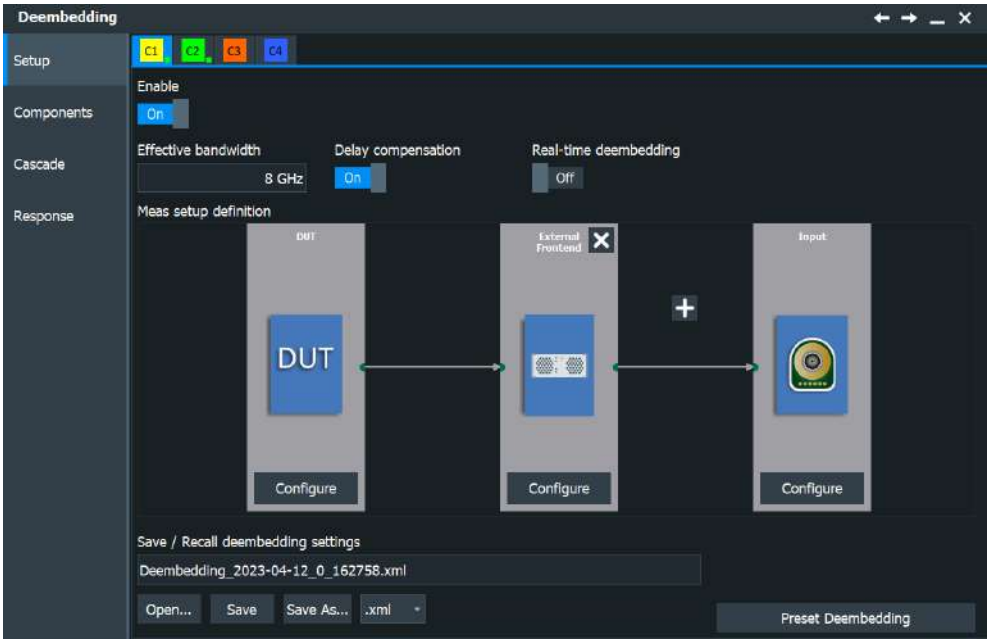

5. Tap "Configure".
6. If the external frontend is already connected to the channel, the identity of the frontend is displayed. If not, select "External Frontend" to configure the frontends.
7. Set up and enable the external frontends.
8. Tap the "Back" arrow in the dialog title bar to return to the "Components" dialog.

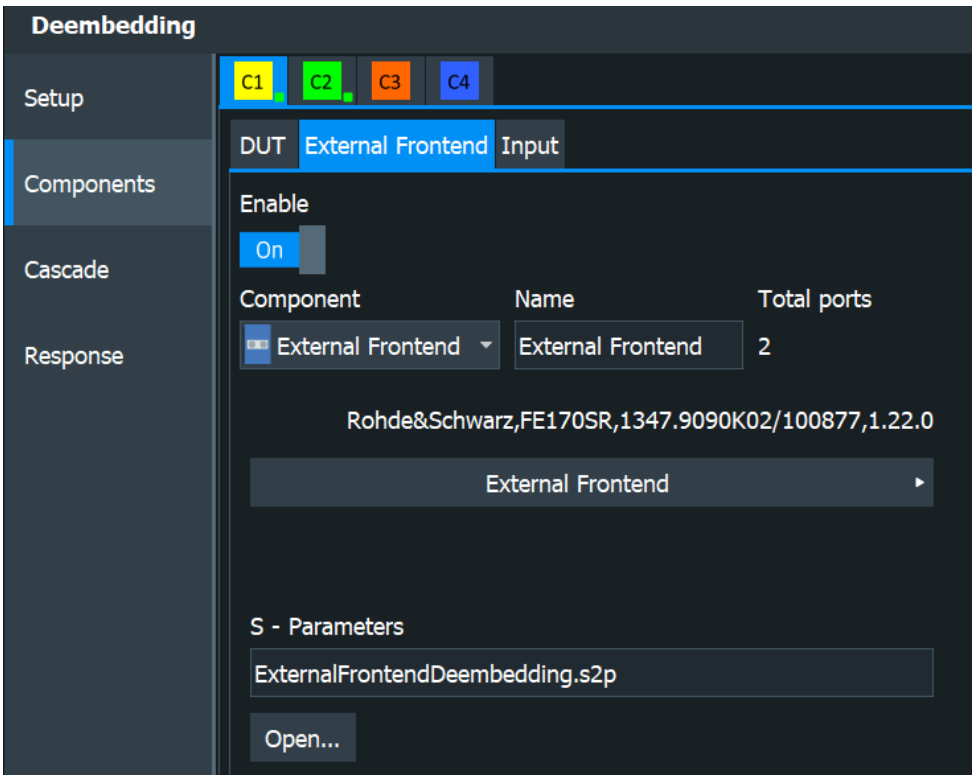

The R&S RTP automatically creates an S-parameter file from the correction data of the external frontend and compensates it. Do not change the "S-Parameters" setting.
As long as the configuration is incomplete or conflicting, the message "Invalid configuration" is shown.

9. Start the R&S VSE software, either directly on the oscilloscope if installed ([Apps] > "R&S Apps" tab > "VSE", or on a connected computer.
Refer to the R&S VSE documentation for details on configuration and analysis.

23.6 Troubleshooting external frontend control

If problems arise during external frontend control, try the following measures to optimize the connection or setup. For additional information, see the external frontend documentation.

23.6.1 Error messages

If errors occur, status messages in the external frontend configuration dialog box and in the status bar of the display inform you about them.

Query the error message queue using the remote command `SYST:ERR?` to determine if any or which errors occurred during operation.

If any errors occur that are not described here, contact the Rohde & Schwarz customer support.

Table 23-2: Status and error messages

Status bar message	Dialog status	SYST:ERR? result	Description, possible solution
External Frontend [x]: Connecting...	Connecting...		Connection to the external frontend is being established. If an external frontend is connected for the first time, connecting takes about 30 sec. Repeated connection takes only 2 sec.
Connected	Connected		Connection established, ready for operation.
No External Frontend Connected	Not connected		No external frontend detected. Connect an external frontend to the R&S RTP.
External Frontend [x]: Invalid Host IP	Invalid Host IP	`300, "Invalid Host IP"`	Verify the specified IP address of the external frontend.
External Frontend [x]: LAN Connection Failed	Not connected	`301, "LAN Connection Failed"`	Verify that the external frontend is connected to the same network as the R&S RTP. Verify the specified IP address of the external frontend.

Status bar message	Dialog status	SYST:ERR? result	Description, possible solution
External Frontend [x]: Incompatible ??? Firmware	Incompatible Oscilloscope Firmware	`302, "Incompatible ??? Firmware"`	The frontend hardware is not compatible with the installed oscilloscope firmware. Update the oscilloscope firmware, see the R&S RTP release notes.
External Frontend [x]: Incompatible Frontend Firmware	Incompatible Frontend Firmware	`303, "Incompatible Frontend Firmware"`	The firmware of the external frontend is not up to date. Update the firmware.
External Frontend [x]: Device Locked	Device Locked	`304, "Device Locked"`	The external frontend is accessible via ping, but no SSL-connection could be established. Disconnect another device that is accessing the external frontend and try reconnecting. A single external frontend supports up to 2 LAN/SSL connections.
External Frontend [x]: Wrong Device Type	Wrong Device Type	`306, "Wrong Device Type"`	The connected external frontend is not of the specified type. Disconnect the device, select the correct external frontend type in the configuration dialog box, and reconnect.
External Frontend [x]: LAN Connection Lost	LAN Connection Lost	`314, "LAN Connection Lost"`	The connection to the external frontend has been lost. The R&S RTP attempts to reconnect periodically. Wait for the "Connecting…" message.
External Frontend [x]: Firmware Update Failed	Firmware Update Failed	`315, "Firmware Update Failed"`	The firmware of the external frontend was not updated successfully.
External Frontend [x]: <Frontend_Name> is not allowed, RF input frequency of at least <Max_RF> GHz is required.	Connected	`316, "External Frontend Not Allowed"`	The R&S RTP does not support any IF frequencies required by the external frontend.
External Frontend [x]: Current RF frequency is out of valid range. Please check Frontend Config dialog for more information	Connected	`317, "RF frequency is out of valid range."`	The selected measurement (RF) frequency is not supported by the selected frequency band of the external frontend. Select a different frequency on the R&S RTP, or a different frequency band for the frontend.
External Frontend [x]: Settings Mismatch - reinitiate frontend by changing a measurement parameter	Connected	`332, "Settings Mismatch"`	The conversion settings on the external frontend were changed by another instrument during the measurement on the R&S RTP. The measurement results no longer match the original measurement settings. To restore the original measurement settings on the frontend, change a frontend setting in the R&S RTP dialog.
External Frontend [x]: Not Connected – Device Busy	Device busy	`333, "Device Busy"`	The external frontend is blocked by another instrument, e.g. for initial connection or a firmware update. After the other instrument finishes its task, try reconnecting the R&S RTP. Switch the "Connection" state off and on again.

Status bar message	Dialog status	SYST:ERR? result	Description, possible solution
External Frontend [x]: Device Busy	Connected	`333, "Device Busy"`	During a running measurement, the external frontend is blocked by another instrument, e.g. for initial connection or a firmware update. The current measurement is aborted. After the other instrument finishes its task, start a new measurement on the R&S RTP.
External Frontend [x]: Touchstone file insufficient frequency range		`350, "Touchstone file frequency range insufficient"`	The `.s2p` file does not cover the used frequency. Correct the file or select a different correction file.
	"<filename>.s2p has wrong file format"	`-150, "String data error"`	The `.s2p` file does not have the correct syntax. Correct the file.
		`-256, "File name not found"`	The specified `.s2p` file does not exist. Correct the path and filename and make sure that the file is stored on the instrument under `C:\Users\Public\Public Documents\Rohde-Schwarz\RTx\ExternalFrontends\<frontend_type>\touchstonefiles`.
External Frontend [x]: Touchstone file insufficient frequency range		`350, "Touchstone file frequency range insufficient"`	The `.s2p` file does not cover the used frequency. Correct the file or select a different correction file.

Touchstone file errors

Some errors concerning `.s2p` correction files do not cause warnings in the status bar and do not provide results in the system error queue. They only display messages or return errors in remote control.

23.6.2 Problems with connection

If you cannot connect to the external frontend, check the status bar or error queue of the R&S RTP for error messages, see also Table 23-2.

If no messages are available, check the "LAN" and "POWER" status LEDs on the external frontend. Permanent red lights indicate an error, usually hardware problems, e.g. if the fans are off. In this case, the instrument is automatically put in a safe (error) state to avoid damage. A LAN connection is no longer possible. Try switching the external frontend off and on again.

If the problem persists, contact Rohde & Schwarz customer support, see Section 27.3, "Contacting customer support", on page 2864.

23.6.3 Problems during operation

Problem: When using the R&S FE110SR or R&S FE170SR together with the I/Q software interface (R&S RTP-K11), the received signal has aliasing or has an unexpected shape
Possible solution: These external frontends use an intermediate frequency close to 10 GHz. Make sure that the "Input sample rate" in the I/Q software option is set to 40 GSa/s, and that no warning is shown. Make sure that the external frontend is connected to channel 1 or channel 3 of the R&S RTP, and that there is no signal on channels 2 and 4.

24 Compliance tests and measurement functions

Thanks to the high measurement accuracy of the R&S RTP, the oscilloscope can be used for reliable compliance testing on the physical layer of high-speed bus interfaces. For fast and easy compliance testing, you need the free-of-charge R&S ScopeSuite. The software guides you step-by-step through the test sequences, configures the oscilloscope, automatically performs measurements and compiles the results in a measurement report. Detailed, image-based instructions make it easy to connect the oscilloscope and the probes to the test fixture set and the device under test.

The R&S ScopeSuite can be installed on a test computer or directly on the R&S RTP. If the R&S ScopeSuite is installed on the oscilloscope, you can start it directly in the firmware menu.


For best operation results, we recommend that the installed firmware versions of the R&S ScopeSuite and the oscilloscope are the same.

Access: [Apps] > "Compliance" tab

24.1 USB compliance test

The R&S RTP-K21 option enables the automatic testing of USB 2.0 compliance (high-speed) as well as USB 1.1 (full-speed) and USB 1.0 (low-speed). Additionally you can perform USB 3.2 compliance tests with option R&S RTP-K101.

As an example, the test setup for USB device tests is shown below.

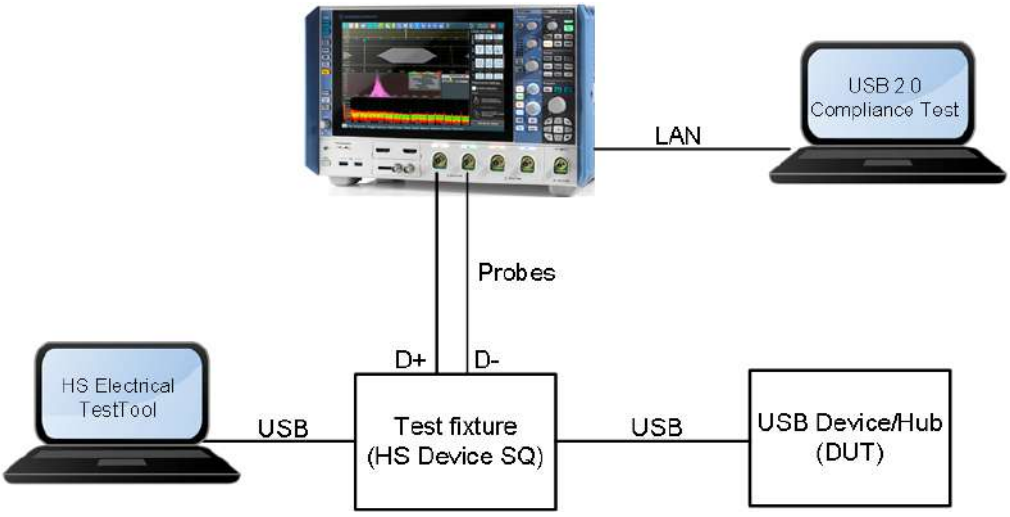

The test fixture and the USB compliance test procedures are described in separate manuals:

- "R&S®RTO-K21, R&S®RTP-K21/-101 R&S®USB 2.0/3.2 Compliance Test, User Manual"

- "R&S®RT-ZF1 USB 2.0 Compliance Test Fixture Set, Manual"
- "R&S®RT-ZB2 USB 3.1 Demo Board 1 (Compliance Mode), Manual"

24.1.1 Test equipment

USB 2.0 test equipment

For USB 2.0 compliance tests, the following test equipment is recommended:

- R&S RTP oscilloscope with 4 channels and at least 2 GHz bandwidth.
- R&S RT-ZF1 USB 2.0 compliance test fixture set, which consists of the load board and the signal quality board.
- Probes:
  - 2x single-ended active probes with at least 2 GHz bandwidth
  - 1x differential active probe with at least 2 GHz bandwidth
- R&S RTO-B6/R&S RTP-B6/Tabor WX2182B/Tabor WX2182C arbitrary waveform generator for automatic receiver sensitivity tests.
  For manual receiver sensitivity tests, any AWG can be used.
- R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP.
- R&S RTP-K21 USB 2.0 compliance test option (required option, installed on the oscilloscope)
- Make sure that you use the latest version of the USBHSET tool. To find downloads, search for *USBHSET* on the following websites:
  - USB 3.0 host: www.usb.org/developers/tools/
  - USB 2.0 host: www.usb.org/developers/tools/usb20_tools/

  Regularly check the USB-IF website compliance.usb.org/index.asp?UpdateFile=Electrical&Format=Standard for USB-IF compliance updates.

USB 3.2 Test Equipment

For USB 3.2 compliance tests, the following test equipment is recommended:

- R&S RTP oscilloscope with 4 channels and at least 16 GHz bandwidth.
- At least one of the following test fixture sets:
  - R&S RT-ZB2 USB 3.1 Demo Board 1
  - USB3ET - USB 3.0 Electrical Test Fixture Kit
  - USB31AET – USB 3.1 USB (10 GT/s) Type-A and Micro-B Electrical Test Fixture Kit
  - USB31CET – USB 3.1 USB (10 GT/s) Type-C Electrical Test Fixture Kit
- Cables / adapters:
  - 2x R&S RT-ZA16 BNC to SMA adapter
  - 2x SMA cable
- R&S RTP-B6/R&S RTO-B6/R&S RTP-B6/Tabor WX2182B/Tabor WX2182C arbitrary waveform generator to generate `Ping.LFPS` to toggle compliance pattern.

- R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP).
- R&S RTP-K101 USB 3.2 compliance test option (required option, installed on the R&S RTP)

USB3.2-Rx Test Equipment

For USB 3.2-Rx compliance tests, the following test equipment is recommended:

- R&S RTP oscilloscope with 4 channels and at least 16 GHz bandwidth.
- At least one of the following test fixture sets:
  - USB 3.1 Compliance Load Board (5.6”, 7.1”, 8.1”)
  - USB 3.1 Mock Host (7.2”, 8.7”, 9.7”)
  - USB 3.1 Mock Device (7.2”, 8.7”, 9.7”)
  - Host PHY Tx Fixture USB 3.1
  - Dev PHY Tx Fixture USB 3.1
  - USB 3.1 Host Fixture 1A
  - USB 3.1 Dev Fixture 1A
  - Rx CAL Fixture
  - USB 3.1 Captive Cable Device Fixture Type-A
  - USB 3.1 Captive Cable Device Fixture Type-C
- Cables / adapters:
  - 3 m Type A - B cable
  - 1 m (6dB) cable
  - 2 m (7dB) cable
  - 2 Pair of matched SMA cables
  - Short A-B or A-uB Cable
  - 2 R&S RT-ZA16 adapters
- R&S RTP-B6/R&S RTO-B6/R&S RTP-B6/Tabor WX2182B/Tabor WX2182C arbitrary waveform generator to generate `Ping.LFPS` to toggle compliance pattern.
- Bit error rate tester (BERT): Anritsu MP1900A
- Anritsu MX183000A: high-speed serial data test software
- R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP).
- R&S RTP-K102 USB 3.2-Rx compliance test option (required option, installed on the R&S RTP)

24.2 Ethernet compliance tests (options R&S RTP-K22/K23/K25/K86)

The Ethernet compliance test options enable the automatic testing of various Ethernet standards:

- 10/100/1000BASE-T (R&S RTP-K22)
- 2.5/5/10GBASE-T (R&S RTP-K23)
- 100BASE-T1: (R&S RTP-K24)
- 1000BASE-T1: (R&S RTP-K87)
- 1000BASE-T1: (R&S RTP-K88
- 10BASE-T1: (R&S RTP-K89)

The test fixture and the Ethernet compliance test procedures are described in the separate manuals:

- R&S®RTO, R&S®RTP Ethernet Compliance Test, User Manual"
- "R&S®RT-ZF2 Ethernet Compliance Test Fixture Set Manual"
- "R&S®RT-ZF3 Frequency Converter Manual
- "R&S®RT-ZF4 10BASE-Te Fixture Manual
- R&S®RT-ZF5 Ethernet Probing Fixture Manual
- R&S®RT-ZF6 Frequency Converter Manual

24.2.1 Test equipment

For Ethernet compliance tests, the following test equipment is needed:

- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the oscilloscope.
- **10/100/1000BASE-T Ethernet compliance tests:**
  - R&S RTO/R&S RTP oscilloscope with at least 600 MHz bandwidth
  - Differential probe with at least 1 GHz bandwidth
  - R&S RTO/R&S RTP-K22 10/100/1000BASE-T Ethernet compliance test option (required option, installed on the oscilloscope)
  - R&S RT-ZF2 Ethernet test fixture set
  - For energy-efficient Ethernet tests, in addition:
    R&S RT-ZF5 Ethernet test fixture set for 100/1000BASE-T EEE tests
    R&S RT-ZF4 test fixture for 10BASE-Te tests
- **2.5GBASE-T Ethernet compliance tests:**
  - R&S RTO/R&S RTP oscilloscope with at least 600 MHz bandwidth
    For precise power spectral density and power level measurements up to 1 GHz, it is recommended to use an oscilloscope and a differential probe with 1 GHz bandwidth each.
  - Differential probe with at least 1GHz bandwidth
  - R&S RTO/R&S RTP-K23 GBASE-T Ethernet compliance test option (required option, installed on the R&S RTP)
  - R&S RT-ZF2 Ethernet test fixture set
- **5GBASE-T Ethernet compliance tests:**
  - R&S RTO/R&S RTP oscilloscope with at least 1 GHz bandwidth

For precise power spectral density and power level measurements up to 1.5 GHz, it is recommended to use an oscilloscope and a differential probe with 1.5 GHz bandwidth each.

  - Differential probe with at least 1.5 GHz bandwidth
  - R&S RTO/R&S RTP-K23 GBASE-T Ethernet compliance test option (required option, installed on the R&S RTP)
  - R&S RT-ZF2 Ethernet test fixture set
- **10GBASE-T Ethernet compliance tests:**
  - R&S RTO/R&S RTP oscilloscope with at least 2 GHz bandwidth
    For precise power spectral density and power level measurements up to 3 GHz, it is recommended to use an oscilloscope and a differential probe with 3 GHz bandwidth each.
  - Differential probe with at least 3 GHz bandwidth
  - R&S RTO/R&S RTP-K23 GBASE-T Ethernet compliance test option (required option, installed on the R&S RTP)
  - R&S RT-ZF2 Ethernet test fixture set
- **100BASE-T1 compliance tests:**
  - R&S RTO/R&S RTP oscilloscope with at least 600 MHz bandwidth
  - Differential probe with 1 GHz bandwidth
  - R&S RTO/R&S RTP-K24 100BASE-T1 compliance test option (required option, installed on the R&S RTP)
  - R&S RT-ZF2 Ethernet test fixture set
  - R&S RT-ZF3 frequency converter for transmitter distortion tests
- **1000BASE-T1 compliance tests:**
  - R&S RTO/R&S RTP oscilloscope with at least 2 GHz bandwidth
  - Differential probe with 2 GHz bandwidth
  - R&S RTO/R&S RTP-K87 1000BASE-T1 compliance test option (required option, installed on the R&S RTP)
  - R&S RT-ZF2 Ethernet test fixture set
  - R&S RT-ZF6 frequency converter for transmitter distortion tests
- **MGBASE-T1 compliance tests:**
  - R&S RTO / R&S RTO6 /R&S RTP oscilloscope, with a bandwidth of:
    - for 2.5 GBASE-T1 tests: at least 3.5 GHz
    - for 5 GBASE-T1 tests: at least 7 GHz
    - for 10 GBASE-T1 tests: at least 13 GHz
  - 2 BNC/SMA cables
  - R&S RTO/R&S RTP-K88 MGBASE-T1 compliance test option (required option, installed on the R&S RTP)
- **10BASE-T1 compliance tests:**
  - R&S RTO/R&S RTP oscilloscope
  - Optional Differential probe with 1 GHz bandwidth

  - R&S RTO/R&S RTP-K89 10BASE-T1 compliance test option (required option, installed on the R&S RTP)
- R&S RTO-B6/R&S RTP-B6/Tabor WX2182B/Tabor WX2182C arbitrary waveform generator for automatic disturber tests. For some disturber tests, also HMF2550 can be used.
- R&S ZNB/ZNC/ZND/ZVL vector network analyzer for automatic return loss measurements. For manual measurements, also other AWGs and VNAs can be used.

24.3 D-PHY compliance tests (option R&S RTP-K26)

The option R&S RTP-K26 enables the automatic processing of D-PHY compliance tests.

The D-PHY compliance test procedures are described in a separate manual:

- R&S®RTO-K26, R&S®RTP-K26, D-PHY Compliance Test, User Manual"

24.3.1 Test equipment

For D-PHY compliance tests, the following test equipment is needed:

- R&S RTP oscilloscope with 4 channels and at least 4 GHz bandwidth
- For measuring the clock signal (+ and -): either 1 differential probe or 2 single-ended probes with at least 4 GHz bandwidth. However, note that D-PHY Group 2 and Group 4 tests require 2 probes for the clock signal.
- For measuring the data signal (+ and -): 2 probes with at least 4 GHz bandwidth Available probes: R&S RT-ZD40 or R&S RT-ZM with a different probe tip selection.
- R&S RTP-K26 D-PHY compliance test option (required option, installed on the oscilloscope)
- R&S RTP-K27 D-PHY compliance test option (required option, installed on the oscilloscope)
- For Eye Tests, the following options are needed:

  For R&S RTP:

  – Option R&S RTP-K136 or R&S RTP-K137 Advanced eye analysis
- Recommended test fixture for LP-TX tests: MIPI D-PHY Capacitive Load (C_{LOAD}) fixture from The University of New Hampshire InterOperability Laboratory (UNH-IOL)
- Recommended termination board for HS-TX tests: MIPI D-PHY Reference Termination Board (RTB) from The University of New Hampshire InterOperability Laboratory (UNH-IOL)
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the oscilloscope.

24.4 eMMC compliance tests (option R&S RTP-K92)

The option R&S RTP-K92 enables the automatic processing of eMMC compliance tests.

The eMMC compliance test procedures are described in a separate manual:

- eMMC Compliance Tests, Test Procedures Manual"

24.4.1 Test equipment

For eMMC compliance tests, the following test equipment is needed:

- R&S RTP oscilloscope with at least 1 GHz bandwidth
- A probe with at least 1.5 GHz bandwidth
- R&S RTP-K92 eMMC compliance test option (required option, installed on the R&S RTP)
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP.

24.5 PCIe compliance tests (option R&S RTP-K81)

The option R&S RTP-K81 enables the automatic processing of PCIe 1.1 / PCIe 2.0 compliance tests.

Also, option R&S RTP K83 enables the automatic processing of PCIe 3.0 compliance tests.

The PCIe compliance test procedures are described in a separate manual:

- R&S®RTO-K81, R&S®RTP-K81/-K83, PCIe Compliance Test, User Manual"

24.5.1 Test equipment

PCIe 1.1 / PCIe 2.0 Test Equipment

For PCIe compliance tests, the following test equipment is needed:

- R&S RTP oscilloscope with at least 6 GHz bandwidth, 2 channels and 20 GS/s available
- Probes/cables:
  - Two SMP to SMA cables or
  - Two single-ended probes with at least 6GHz bandwidth bandwidth or
  - One differential probe with at least 6GHz bandwidth bandwidth
- R&S RTP-K81 PCIe compliance test option (required option, installed on the oscilloscope)
- Recommended test fixture:

  - For Add-In card testing: PCI Express Compliance Base Board (CBB2.0) from PCI-SIG
  - For System Board testing: PCI Express Compliance Load Board (CLB2.0) from PCI-SIG
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the oscilloscope.

PCIe 3.0 Test Equipment

For PCIe compliance tests, the following test equipment is needed:

- R&S RTP oscilloscope with at least 16 GHz bandwidth, 2 channels and 40 GS/s available
- Probes/cables:
  - Two SMP to SMA cables or
  - Two single-ended probes with at least 6GHz bandwidth bandwidth or
  - One differential probe with at least 6GHz bandwidth bandwidth
  - Two R&S RTP-ZMA40 Amplifier probe tips.
- R&S RTP -K83 PCIe compliance test option (required option, installed on the oscilloscope)
- Recommended test fixture:
  - For Add-In card testing: PCI Express Compliance Base Board (CBB3.0) from PCI-SIG
  - For System Board testing: PCI Express Compliance Load Board (CLB3.0) from PCI-SIG
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the oscilloscope.

24.6 DDR3 compliance tests (option R&S RTP-K91)

The option R&S RTP-K91 enables the automatic processing of DDR3 compliance tests.

The DDR3 compliance test procedures are described in a separate manual:

- R&S®RTO-K91, R&S®RTP-K91 DDR3 Compliance Test, User Manual"

24.6.1 Test equipment

For DDR3 compliance tests, the following test equipment is needed:

- R&S RTP with 4 channels and minimum 8 GHz bandwidth, or
  R&S RTO2000 with 4 channels and minimum 4 GHz bandwidth
  R&S RTO6 with 4 channels and minimum 4 GHz bandwidth
- R&S RTP-K91 DDR3 compliance test option (required option, installed on the R&S RTP)

- 4 modular probes, R&S ZM90 with 9 GHz bandwidth. See also Section 24.6.1.1, "Soldering guide for modular probes", on page 1276.
- 4 modular probe tips R&S RT-ZMA10 or R&S RT-ZMA14
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP.

24.6.1.1 Soldering guide for modular probes

All single-ended signals such as ADD, CMD, DQ, DM, CS, CKE should be soldered in such a way that the signal is connected to the + part on the probe tip. The ground of the signal is connected to the - part on the same probe tip.

All differential signals such as CK, DQS should be soldered differentially:

- The + signal is connected to the + part on the probe tip.
- The - signal is connected to the - part on the same probe tip.
- The ground of the signal is connected to the ground of the same probe tip.

24.7 DDR4 compliance tests (option R&S RTP-K93)

The option option R&S RTP-K93 enables the automatic processing of DDR4 compliance tests.

The DDR4 compliance test procedures are described in a separate manual:

- R&S®RTP-K93 DDR4 Compliance Test, User Manual"

24.7.1 Test equipment

For DDR4 compliance tests, the following test equipment is needed:

- R&S RTP with 4 channels and minimum 8 GHz bandwidth
- R&S RTP-K93 DDR4 compliance test option (required option, installed on the R&S RTP)
- 4 modular probes, R&S ZM90 with 9 GHz bandwidth. See also Section 24.7.1.1, "Soldering guide for modular probes", on page 1276.
- 4 modular probe tips R&S RT-ZMA10 or R&S RT-ZMA14
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP.

24.7.1.1 Soldering guide for modular probes

All single-ended signals such as ADD, CMD, DQ, DM, CS, CKE should be soldered so that the signal is connected to the + part on the probe tip. The ground of the signal should be connected to the - part on the same probe tip.

All differential signals such as CK, DQS should be soldered differentially:

- The + signal is connected to the + part on the probe tip.
- The - signal is connected to the - part on the same probe tip.
- The ground of the signal is connected to the ground of the same probe tip.

24.8 C-PHY compliance tests (option R&S RTP-K28)

The option R&S RTP-K28 enables the automatic processing of C-PHY compliance tests.

The C-PHY compliance test procedures are described in a separate manual:

- R&S®RTP-K28, C-PHY Compliance Test, User Manual"

24.8.1 Test equipment

For C-PHY compliance tests, the following test equipment is needed:

- R&S RTP oscilloscope with 4 channels and at least 13 GHz bandwidth
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the oscilloscope.
- Differential probes
- Three singled-ended active probes or SMA cables.
- R&S RTP-K28 C-PHY compliance test option (required option, installed on the oscilloscope)
- For Eye Tests: option R&S RTP-K136 or R&S RTP-K137 Advanced eye analysis
- Recommended test fixture for LP-TX tests: MIPI C-PHY Capacitive Load (C_{LOAD}) fixture
- Recommended termination board for HS-TX tests: MIPI C-PHY Reference Termination Board (RTB)

24.9 DisplayPort compliance tests (option R&S RTP-K114/K115)

The option R&S RTP-R&S RTP-K114/K115 enables the automatic processing of DisplayPort compliance tests.

The DisplayPort compliance test procedures are described in a separate manual:

- R&S®RTP-K114/-K115, DisplayPort Compliance Test, User Manual"

24.9.1 Test equipment

DisplayPort 2.1 (HBR X)

For DisplayPort 2.1 (HBR X) (previously known as DisplayPort 1.4a) compliance tests, the following test equipment is needed:

- R&S RTP with 4 channels and minimum 16 GHz bandwidth
- R&S RTP-K114 DisplayPort 2.1 (HBR X) compliance test option (required option, installed on the R&S RTP)
- Additional R&S RTP options:
  - Option R&S RTP-K133 or R&S RTP-K134 advanced jitter and noise
  - Option R&S RTP-K137 advanced eye analysis
  - Option R&S RTP-K141 high-speed serial patter trigger
  - Option R&S RTP-K126 embedding and equalization
- For measuring Main-Link signals you need one of the following:

  For one lane measurements:
  - 1 differential probe with SMA module and 16 GHz bandwidth, e.g R&S RT-ZM130 with R&S RT-ZMA40.
  - 2 SMA cables

  For dual lane measurements:
  - 2 differential probes with SMA module and 16 GHz bandwidth, e.g R&S RT-ZM130 with R&S RT-ZMA40.
  - 4 SMA cables
- For measuring AUX CH signal:
  - 1 differential probe, e.g R&S RT-ZM130 and 1 SMA module R&S RT-ZMA40
  - 2 single-ended probes with at least 500 MHz bandwidth
- Test fixtures:
  - DisplayPort AUX controller: recommended Unigraf UCD-323 for full DUT automated control
  - Auxiliary Control test Adapter: recommended Wilder Technologies Auxiliary Control Test Adapter or Luxshare Auxiliary Control Board or equivalent
  - DisplayPort test adapter: recommended Wilder Technologies DP-TPA-P or Luxshare DP plug test fixture or equivalent
- Optional for return loss tests: vector network analyzer with frequency range from 50 MHz to 12 GHz, eg. R&S ZNB, R&S ZNC, R&S ZND or R&S ZVA.
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP.

Embedded DisplayPort 2.0 (HBR X)

For Embedded DisplayPort 2.0 (HBR X) conformance tests (previously known as 1.4b/1.5 compliance tests), the following test equipment is needed:

- R&S RTP with 4 channels and minimum 16 GHz bandwidth

- R&S RTP-K115 EDP 2.0 (HBR X) conformance test option (required option, installed on the R&S RTP)
- Additional R&S RTP options:
  - Option R&S RTP-K133 or R&S RTP-K134 advanced jitter and noise
  - Option R&S RTP-K137 advanced eye analysis
  - Option R&S RTP-K126 embedding and equalization
- For measuring Main-Link signals you need one of the following:

  For one lane measurements:
  - 1 differential probe with SMA module and 16 GHz bandwidth, e.g R&S RT-ZM130 with R&S RT-ZMA40.
  - 2 SMA cables

  For dual lane measurements:
  - 2 differential probes with SMA module and 16 GHz bandwidth, e.g R&S RT-ZM130 with R&S RT-ZMA40.
  - 4 SMA cables
- For measuring AUX CH signal:
  - 1 differential probe, e.g R&S RT-ZM130 and 1 SMA module R&S RT-ZMA40
  - 2 single-ended probes with at least 500 MHz bandwidth
- Test fixtures:
  - DisplayPort AUX controller: recommended Unigraf UCD-323 for full DUT automated control
  - Auxiliary Control test Adapter: recommended Wilder Technologies Auxiliary Control Test Adapter or equivalent
  - Embedded DisplayPort test Adapter: recommended Wilder Technologies EDP-TPA40L or equivalent
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP.

24.10 HDMI compliance tests (option R&S RTP-K110)

The option R&S RTP-K110 enables the automatic processing of HDMI compliance tests.

The HDMI compliance test procedures are described in a separate manual:

- R&S®RTP-K110, HDMI Compliance Test, User Manual"

24.10.1 Test equipment

For HDMI compliance tests, the following test equipment is needed:

- R&S RTP with 4 channels and minimum 8 GHz bandwidth

- R&S RTP-K110 HDMI compliance test option (required option, installed on the R&S RTP)
- 2 modular probes, R&S ZM160 with 9 GHz bandwidth.
- 2 modular probe tips R&S RT-ZMA40
- HDMI Termination Module and an HDMI TPA adapter
- EDID Emulator
- R&S RTP-K140/-K141 High Speed Serial Triggering 8G/16G is required for:
  - HDMI 2.1 TMDS: Differential Voltage Tests
  - Data Eye Diagram Tests
  - Inter-Pair Skew
- The free-of-charge R&S ScopeSuite software, which can be installed on a computer or directly on the R&S RTP.

24.11 Load pull tests (option R&S RTP-K98)

The option R&S RTP-K98 enables the automatic processing of load pull measurement function tests.

The load pull measurement function procedures are described in a separate manual:

- R&S®RTP-K98, Modulated Load Pull, User Manual"

24.11.1 Test equipment

For load pull compliance tests, the following test equipment is mandatory:

- **R&S RTP** with 4 channels and minimum 8 GHz bandwidth equipped with the following options:

Equipment	Option	Quantity
Either one of the following R&S RTP:	• R&S RTP084B • R&S RTP134B • R&S RTP164B	1
R&S RTP I/Q software interface	R&S RTP-K11	1
R&S ScopeSuite	-	1
Modulated load pull compliance test option, installed on the R&S ScopeSuite	R&S RTP-K98	1
Precision BNC to SMA adapter	R&S RT-ZA16	2

- **R&S SMW200A** vector signal generator equipped with the following options:

Equipment	Option	Quantity
Frequency range for RF path A: 100 kHz and 20 GHz	R&S SMW-B1020	1
Frequency range for RF path B: 100 kHz and 20 GHz	R&S SMW-B2020	1
I/Q paths to RF: Wideband baseband main module	R&S SMW-B13XT	2
Wideband baseband high signal dynamics	R&S SMW-B9F	2
Baseband extension to 1 GHz RF bandwidth	R&S SMW-K525	2
Baseband extension to 2 GHz RF bandwidth	R&S SMW-K527	2
Phase coherence	R&S SMW-B90	1
(Optional) User-defined frequency response correction	R&S SMW-K544	2

- **Additional equipment**

Equipment	Option	Quantity
VNA calibration kit, 2.9 mm female connector	R&S ZN-Z129	1
Power Meter with LAN interface	R&S NRP40SN or similar	1
Directional Coupler	Depending on the DUT's frequency range	2
SMA cables (4 for R&S RTP to the directional coupler and 2 for R&S SMW to the directional coupler)	-	6
(Only for envelope tracking) Secondary vector signal generator	R&S SMW200A	1
Circulators	Depending on the DUT's frequency range and power range	≥ 2

Test setup

Before using R&S ScopeSuite, set up the equipment according to your needs. Figure 24-1 shows an example of a reference setup.

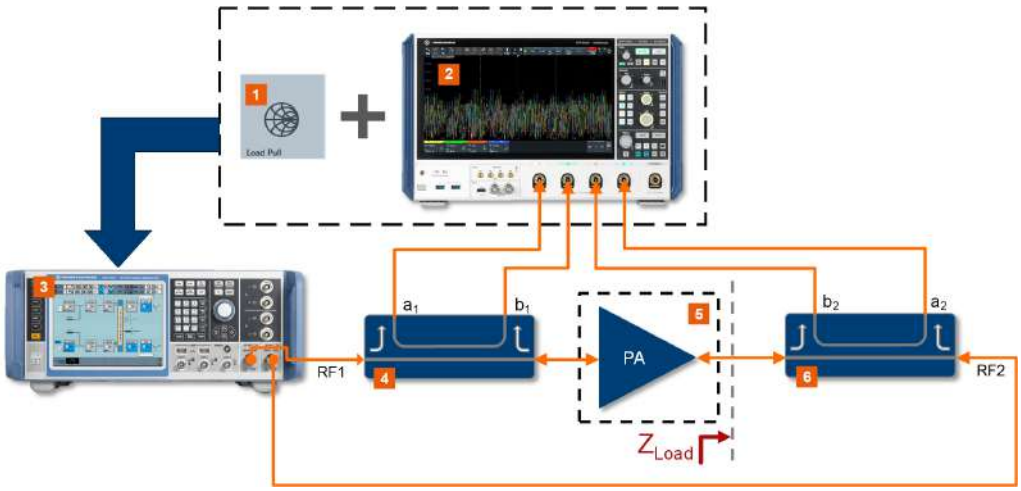


Figure 24-1: An example of a test setup with a DUT for load pull measurement

Z_{Load} = Load impedance
1 = "Load Pull" option in R&S ScopeSuite
2 = R&S RTP
3 = R&S SMW200A
4 and 6 = Directional coupler
5 = DUT

25 Network operation and remote control

The operating system is the basis of the instrument's firmware, it provides basic functions such as logon, password protection, virus protection, and connection to a network.

In addition to working with the R&S RTP directly, using the touchscreen and the keys, you can also operate the instrument from a remote PC. Various methods of remote control are supported:

- Using the web interface in a LAN network
- Using Remote Desktop Connection in a LAN network
- Remote control with SCPI commands

- Operating system....1283
- Setting up a network (LAN) connection....1288
- Web interface....1293
- Remote Desktop connection....1299
- Remote control....1301

25.1 Operating system

The R&S RTP has a Windows operating system (Windows 10 or Windows 11).

The operating system has been configured according to the instrument's features and needs. To ensure that the instrument software functions properly, certain rules must be observed when using the operating system.

NOTICE

Risk of rendering instrument unusable

The instrument is equipped with the Windows operating system. You can install additional software on the instrument, however, additional software can impair instrument function. Thus, run only programs that Rohde & Schwarz has tested for compatibility with the instrument software.

The drivers and programs used on the instrument under Windows are adapted to the instrument. Only install update software released by Rohde & Schwarz to modify existing instrument software.

Changes in the system setup are only required if the network configuration does not comply with the default settings (see Section 25.2.1, "Connecting the instrument to the network", on page 1288).

25.1.1 Logon

Windows requires that users identify themselves by entering a user name and password in a logon window.

If the instrument is connected to the network, you are automatically logged on to the network when you log on to the operating system. As a prerequisite, the user name and the password must be identical under Windows and on the network. The instrument provides an auto-logon function that can be configured for standard user and administrator access. The configuration requires the user name and password.

See also: "Log on as" on page 76.

The R&S RTP provides two user accounts:

- "Instrument": an administrator account with unrestricted access to the computer/ domain (default user)
- "NormalUser": a standard user account with limited access

For both users, the initial password is "894129". It is recommended that you change the password for both users after initial logon. You can change the password in the Windows configuration:

"Start" menu > "Settings" > "Accounts" > "Sign-in options".

Make sure to change the password also in the auto-logon of the R&S RTP, see below.

By default, the instrument logs on with an administrator account and standard password. To restrict the access to system functions, you can change the autologon to "NormalUser".

The following tasks require administrator rights:

- Configuration of a LAN settings, network connection, and firewall settings
- Date and time setup
- Printer installation
- Firmware update
- BIOS update
- Using the web browser
- Touchscreen calibration
- Installation of options
- Moving portable licenses

To configure the auto-logon for a standard user

Default situation: the auto-logon is configured for the administrator ("Instrument").

1. Open "Menu" > "Settings" > "System" > "Users"
2. Set "Logon as" to "User autologon".
3. Enter the "User name": *NormalUser*.
4. Enter the password of the standard user.
5. Restart the instrument.

To configure the auto-logon for administrator

Starting situation: the auto-logon is configured for a standard user ("NormalUser").

1. Open "Menu" > "Settings" > "System" > "Users"
2. Set "Logon as" to "None".
3. Exit the firmware.
4. Sign out from the operating system.
5. Log on as administrator ("Instrument").
6. Set the "Logon as" to "Admin autologon". Enter the "User name": *Instrument* and the administrator's password.
7. Restart the instrument.

25.1.2 Service packs and updates

Microsoft regularly creates security updates and other patches to protect Windows-based operating systems. These are released through the Microsoft Update website and associated update server. Instruments using Windows, especially those that connect to a network, should be updated regularly.

For details and recommendations, see the following Rohde & Schwarz white paper:

- 1EF96: Malware Protection Windows 10

25.1.3 Virus protection

Take appropriate steps to protect your instruments from infection. Use strong firewall settings and scan any removable storage device used with a Rohde & Schwarz instrument regularly. It is also recommended that you install anti-virus software on the instrument. Rohde & Schwarz does NOT recommend running anti-virus software in the background ("on-access" mode) on Windows-based instruments, due to potentially degrading instrument performance. However, Rohde & Schwarz does recommend running it during non-critical hours.

For details and recommendations, see the following Rohde & Schwarz white paper:

- 1EF96: Malware Protection Windows 10

25.1.4 Backup and recovery

The R&S RTP has a backup partition with an application for backup and restore the firmware. The backup of the factory default state is always available. You can save additional backups, for example, before a firmware update or to provide different system configurations for different environments.

The backup saves the current instrument installation and its configuration. Data are not saved in the backup.

To save a system backup

1. Before starting the backup, unplug the LAN cable and USB storage devices to minimize the risk of computer virus attacks.
2. Restart the R&S RTP.

   The boot screen is displayed for about 2 seconds.
3. When the boot screen is displayed, immediately select "Backup", and press [ENTER].
4. Select "Create Backup".
5. Enter a name for the backup and the date. If necessary, you can add information to the description. By default, the description contains the current version of the firmware.
6. Select "Start Backup".

   A progress information dialog is displayed. You can terminate at any time with "Cancel". After the process has been finished, the dialog is closed automatically, and the main dialog is displayed again.
7. In the main dialog, select "Exit and Reboot".

   The backup and restore application is closed, and the R&S RTP is restarted.

To restore a backup version

When restoring a backup, the Windows operating system and installed anti-malware software are probably outdated. To minimize the risk of malware threats after restoring a backup, verify and adjust the "Windows Update" settings. Follow the recommendations from Rohde & Schwarz applicable to your instrument. Also, install all Windows security updates that have been published in the meanwhile.

1. Before starting the recovery, unplug the LAN cable and USB storage devices to minimize the risk of computer virus attacks.
2. Restart the R&S RTP.

   The boot screen is displayed for about 2 seconds.
3. When the boot screen is displayed, immediately select "Backup", and press [ENTER].
4. Select the backup that you want to restore.
5. Select "Restore Selected".
6. Confirm with "Yes".

A progress information dialog is displayed. You can terminate at any time with "Cancel".

During the restore process, the system partition is deleted, formatted and written newly. The data partition is not affected. After the process has been finished, the application is closed automatically, and the R&S RTP is restarted.

To delete a backup version

To provide space for new backups, you can remove older backups. The factory default cannot be deleted.

1. Restart the R&S RTP.
2. When the boot screen is displayed, immediately select "Backup", and press [ENTER].
3. Select the backup that you want to delete.
4. Select "Delete Selected".
5. Confirm with "Yes".
6. In the main dialog, select "Exit and Reboot", or continue with "To save a system backup" on page 1286.

25.1.5 Accessing windows functionality

All required Windows settings can be changed using the touchscreen and the on-screen keyboard that is part of the Windows system. However, modification is easier if you connect a mouse and/or keyboard to the instrument.

To access Windows

► Open "Menu" > 🖳.

The application is minimized to the taskbar and the "Start" menu becomes available.

To access Windows using an external keyboard

1. To open the "Start" menu, press the Windows key or the CTRL + ESC key combination on your keyboard.
2. To access the desktop, press the Windows key + D on your keyboard.

25.2 Setting up a network (LAN) connection

Network environment

Before connecting the product to a LAN, consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

Applications of LAN

The LAN connection settings can be configured directly in the Windows operating system. Provided the network administrator has assigned you the appropriate rights and adapted the Windows firewall configuration, you can use the interface, for example:

- To transfer data between a controlling device and the test device, e.g. to run a remote control program.
- To access or control the measurement from a remote computer using the "Remote Desktop" application (or a similar tool)
- To transfer data from a remote computer and back, e.g. using network folders

This section describes how to configure the LAN interface. It includes the following topics:

- Section 25.2.1, "Connecting the instrument to the network", on page 1288
- Section 25.2.2, "Assigning the IP address", on page 1289

Note that only user accounts with administrator rights can configure LAN networks.

25.2.1 Connecting the instrument to the network

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer.

► To establish a non-dedicated network connection, connect a commercial RJ-45 cable to one of the LAN ports.
To establish a dedicated connection, connect a (crossover) RJ-45 cable between the instrument and a single PC.

If the instrument is connected to the LAN, Windows automatically detects the network connection and activates the required drivers.

The network card can be operated with a 10/100/1000 Mbps Ethernet IEEE 802.3u interface.

25.2.2 Assigning the IP address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports dynamic TCP/IP configuration using the Dynamic Host Configuration Protocol (DHCP), all address information can be assigned automatically.
- If the network does not support DHCP, or if the instrument is set to use alternate TCP/IP configuration, the addresses must be set manually.

By default, the instrument is configured to use dynamic TCP/IP configuration and obtain all address information automatically. This means that it is safe to establish a physical connection to the LAN without any previous instrument configuration.

NOTICE

Risk of network errors

Connection errors can affect the entire network. If your network does not support DHCP, or if you choose to disable dynamic TCP/IP configuration, you must assign valid address information before connecting the instrument to the LAN. Contact your network administrator to obtain a valid IP address.

Assigning the IP address on the instrument

1. Open "Menu" > "Settings".
2. Select the "System" tab.
3. In the "Network" tab, select "Advanced".
4. Select "Ethernet".
5. Select "Properties".
6. On the "Networking" tab, select "Internet Protocol Version 4 (TCP/IPv4)", and then select "Properties".
7. Select "Use the following IP address".
8. Enter the address information as obtained from the network administrator.

25.2.3 Using computer names

In a LAN that uses a DNS server (Domain Name System server), each computer and instrument in the LAN can be accessed via an unambiguous host name (or computer name) instead of the IP address. The DNS server translates the host name to the IP address. Host names are useful when a DHCP server is used, as a new IP address can be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned computer name, but this name can be changed.

The default instrument name is a non-case-sensitive string with the following syntax:

<Type><variant>-<serial_number>

The serial number can be found on the rear panel of the instrument. It is the third part of the device ID printed on the bar code sticker:




To change the device name

1. Open the "Menu" > "Settings" dialog.
2. Open the "System" dialog.
3. Select the "Network" tab.
4. Enter the new "Device name" and confirm the entry.


Using a DNS server to determine the IP address

If a DNS server is configured on the R&S RTP, the server can determine the current IP address for the connection using the permanent computer name.

1. Obtain the name of your DNS domain and the IP addresses of the DNS and WINS servers on your network.
2. Open the "Menu" > "Settings" dialog.
3. Select the "System" tab.
4. Tap "Network".
5. Select "Ethernet".

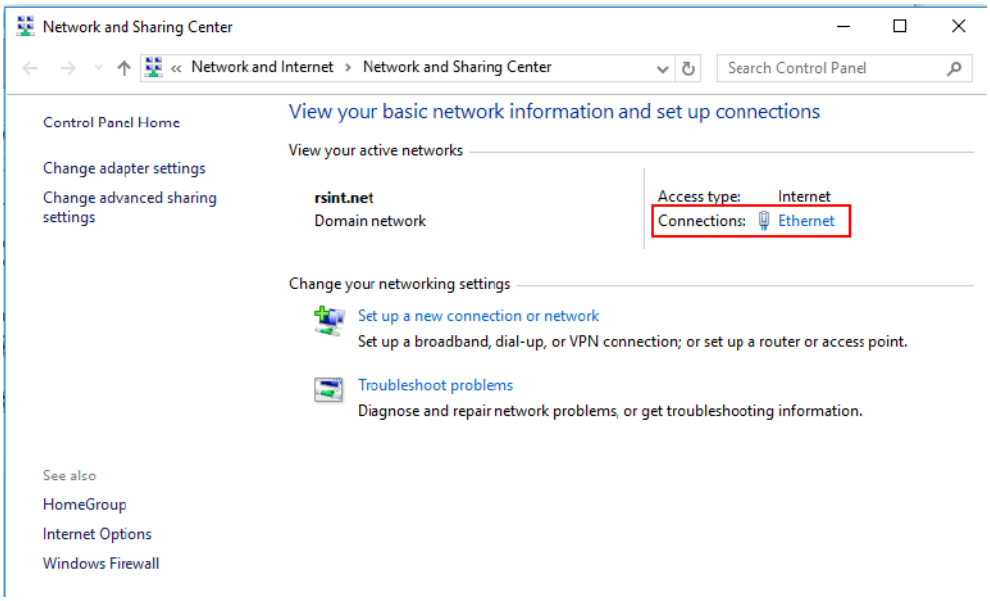

6. On the "Networking" tab, select "Internet Protocol Version 4 (TCP/IPv4)", and then select "Properties".

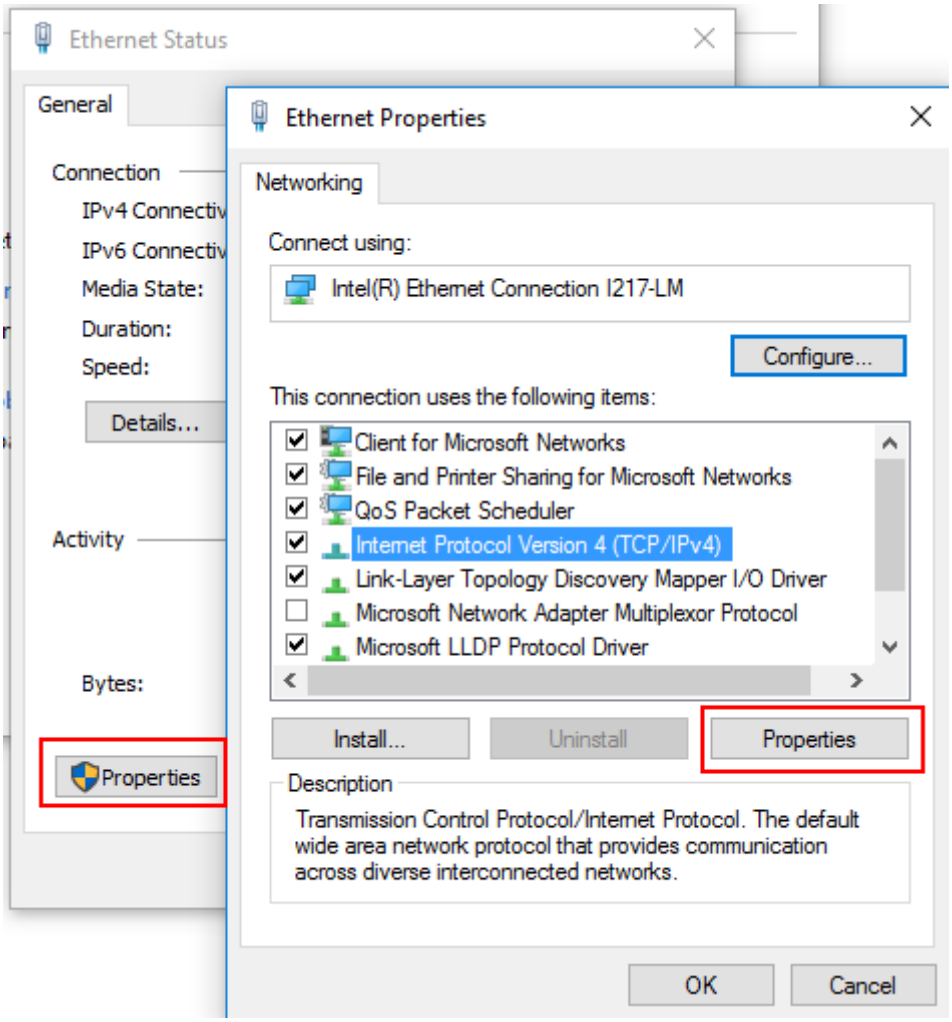

7. On the "General" tab, select "Use the following DNS server addresses" and enter your own DNS addresses.

   For more information, refer to the Windows operating system help.

25.2.4 Changing the windows firewall settings

A firewall protects an instrument by preventing unauthorized users from gaining access to it through a network. Rohde & Schwarz highly recommends the use of the firewall on your instrument. Rohde & Schwarz instruments are shipped with the Windows firewall enabled and preconfigured in such a way that all ports and connections for remote control are enabled.

For more details on firewall configuration, see the following Rohde & Schwarz White Paper:

- 1EF96: Malware Protection Windows 10

Note that changing firewall settings requires administrator rights.

25.3 Web interface

If the R&S RTP is connected to a computer via LAN, you can operate the instrument from a computer. No additional tools are required, you need only a web browser.

25.3.1 Settings on the R&S RTP



Access: "Menu" > "Settings" > "System" > "Network"



The LAN status icon on the toolbar of the R&S RTP indicates the status of the LAN connection. A green icon indicates that the instrument is connected to the LAN; a red symbol indicates an error - mostly the LAN cable is not connected.

The "Network" tab of the "System" dialog box provides network information. See Section 4.1.2, "Network settings", on page 73.



Only users with administrator rights can change LAN settings.

25.3.2 Web browser

The instrument's web interface works with all W3C compliant browsers. Only users with administrator rights on the instrument can use the web interface.

1. Open a web browser on the computer.
2. Type the instrument's host name or IP address in the address field of the browser on your PC, e.g. "http://10.113.10.203".

   The instrument home page opens.



The instrument home page displays the device information required by the LAN standard including the VISA resource string in read-only format.

► To update the "Host Name", press the "Device Indicator" button. The "Device Indicator" is not password-protected.

The most important items in the navigation menu of the browser interface are the following:

- "LAN Configuration" opens the menu with configuration pages. See Section 25.3.2.1, "LAN configuration", on page 1295.
- "Utilities > Logging" shows log messages and provides buttons to download or clear the logfile.
- "Web Control" shows a live image of the instrument, and you can operate the instrument remotely. See Section 25.3.2.2, "Web control", on page 1297.
- "Device Screenshot": creates a screenshot of the display. See Section 25.3.2.3, "Device screenshot", on page 1297.
- "Health & Utilization": not supported
- "Health & Utilization": shows information of the R&S Health and Utilization Monitoring Service (HUMS). See Section 25.3.2.4, "Health & Utilization (option R&S RTPK980)", on page 1298.
- "Help" provides a glossary of terms related to the standard, and a link to the Rohde & Schwarz Internet site.
- "Status" (at the bottom of the page) shows information about the status of the instrument, and connection errors.


25.3.2.1 LAN configuration

The LAN configuration consists of three parts:

- "IP configuration" provides all mandatory LAN parameters.
- "Advanced LAN Configuration" provides LAN settings that are not declared mandatory by the standard.
- "Ping Client" provides the ping utility to verify the connection between the instrument and other devices.

IP configuration


The "LAN Configuration > IP configuration" web page displays all mandatory LAN parameters and allows their modification.

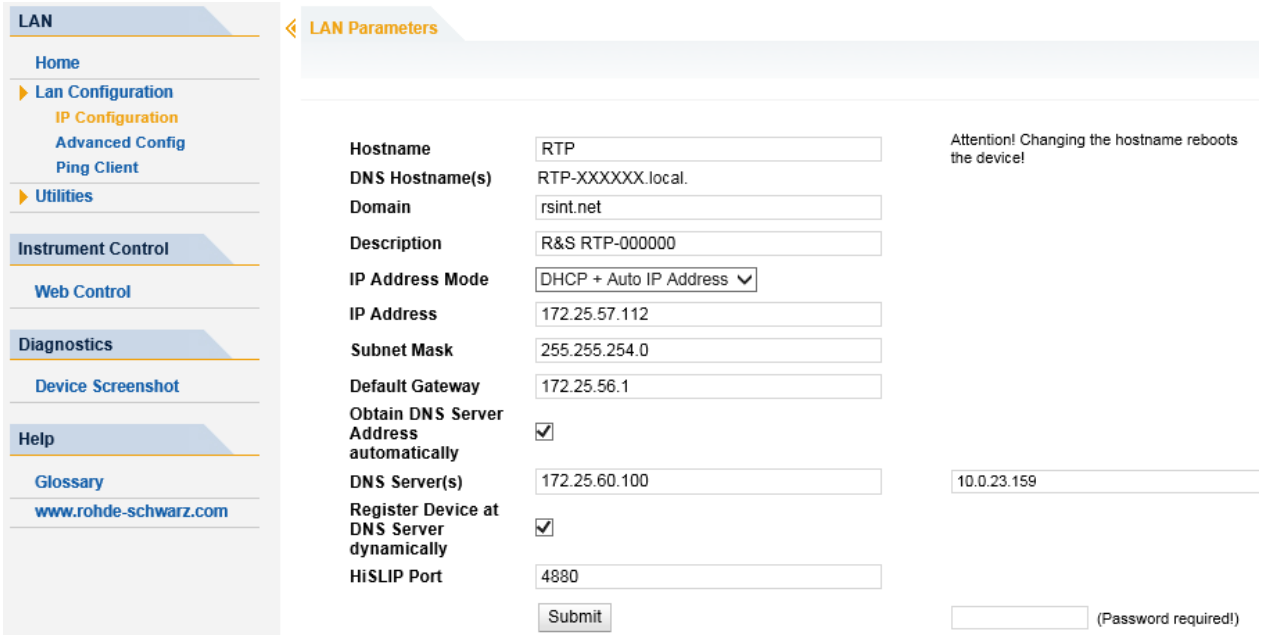

The "TCP/IP Mode" configuration field controls how the IP address for the instrument gets assigned (see also Section 25.2.2, "Assigning the IP address", on page 1289). For the manual configuration mode, the static IP address, subnet mask, and default gateway are used to configure the LAN. The automatic configuration mode uses DHCP server or Dynamic Link Local Addressing (automatic IP) to obtain the instrument IP address.

Changing the LAN configuration is password protected. The password is *LxiWebIfc* (notice upper and lower case characters). This password cannot be changed in the current firmware version.

Advanced config

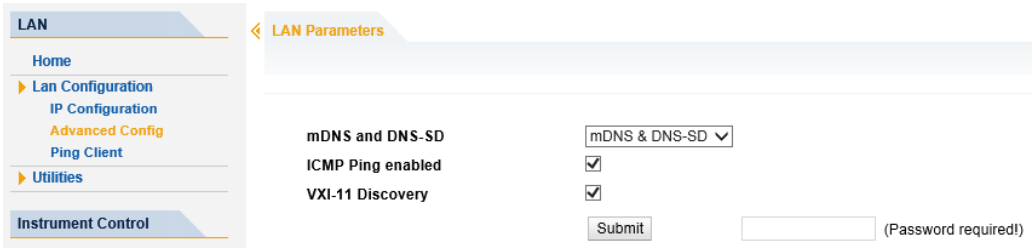

The "LAN Configuration > Advanced Config" parameters are used as follows:


- mDNS and DNS-SD are two additional protocols: Multicast DNS and DNS Service Discovery. They are used for device communication in zero configuration networks working without DNS and DHCP
- "ICMP Ping" must be enabled to use the ping utility.
- "VXI-11" is the protocol that is used to detect the instrument in the LAN.

Ping client

Ping is a utility that verifies the connection between the instrument and another device. The ping command uses the `ICMP` echo request and echo reply packets to determine whether the LAN connection is functional. Ping is useful for diagnosing IP network or router failures. The ping utility is not password-protected.


To initiate a ping between the compliant instrument and a second connected device:

1. Enable "ICMP Ping" on the "Advanced Config" page (enabled by default).
2. On the "Ping Client" page, enter the IP address of the second device **without the ping command and without any further parameters** into the "Destination Address" field (e.g. *10.113.10.203*).
3. Click "Submit".

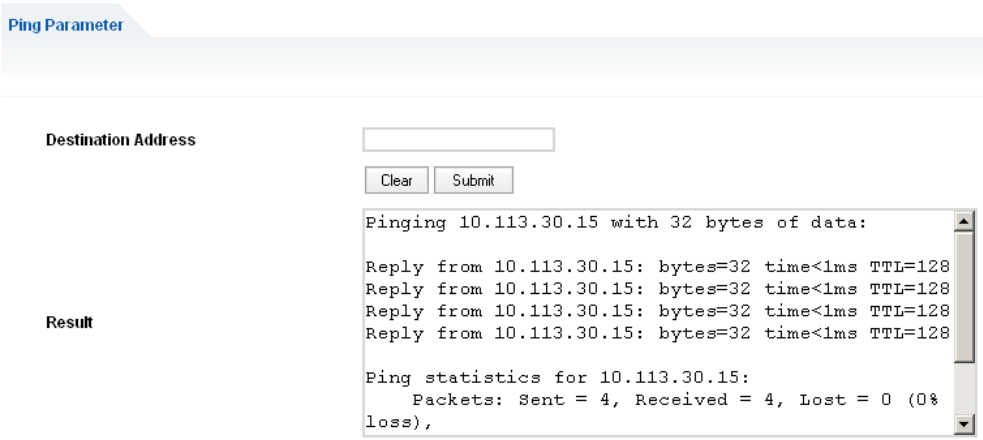

25.3.2.2 Web control

"Web Control" emulates the front panel and shows the instrument display. You see a live image of the instrument, and you can operate the instrument remotely. You can use the keys, the knobs and the menus in the same way as directly on the instrument. The Web control replaces VNC as control tool for remote operation.

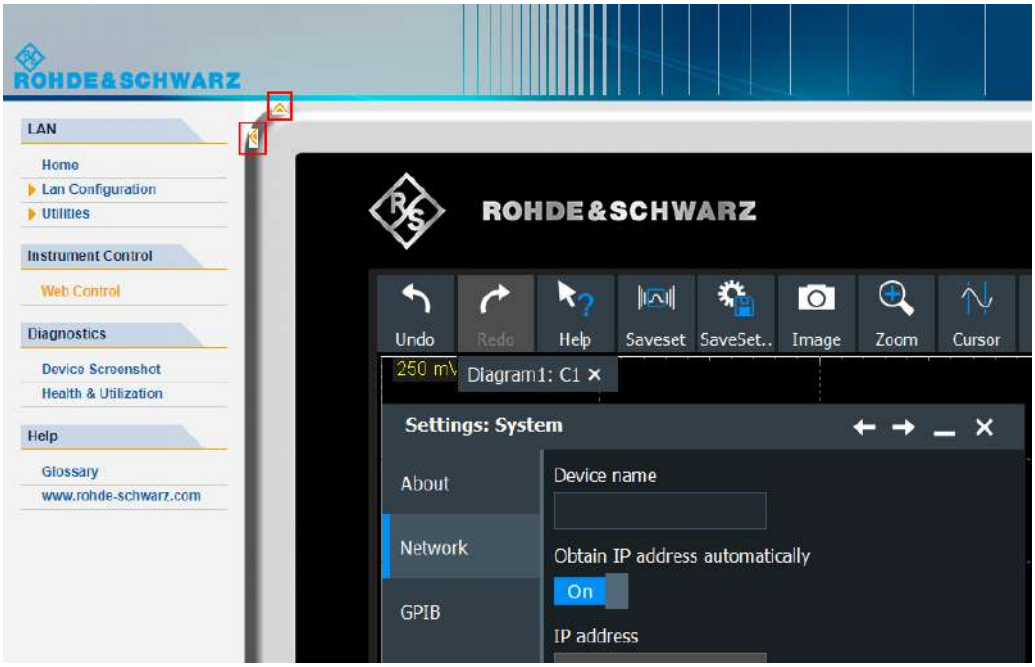


In the upper left corner of the emulated display, you see two arrows:

- The up/down arrow hides or shows the front panel.
- The left/right arrow hides or shows the menu.

25.3.2.3 Device screenshot

If you click "Device Screenshot", a screenshot of the current instrument display is shown on the computer.

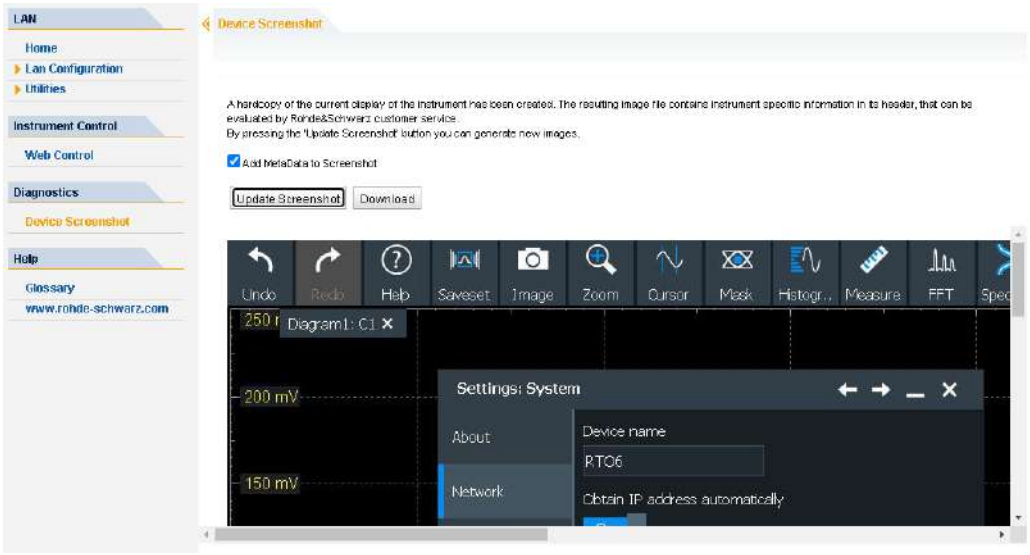

Add MetaData to Screenshot
Adds the instrument information to PNG and JPG files. Meta information is saved as EXIF information and can be read, for example, using the ExifTool, see "Meta information in screenshots" on page 522.

Update Screenshot
Updates the display.

Download
Saves the screenshot to the download directory of the computer. By default, JPG format is saved.

To save the screenshot in PNG format, select "Save as", select "All files" as type, and enter the filename with extension *.png*.

25.3.2.4 Health & Utilization (option R&S RTPK980)

The "Health & Utilization" page shows information of the Rohde & Schwarz Health and Utilization Monitoring Service (HUMS), which runs in the background. The aim of HUMS is to increase the overall utilization, to avoid downtime and to increase the overall security level of a fleet of instruments.

HUMS provides information about:

- Instrument identification, hardware components, software packages, licenses
- Usage of remote control, usage via keyboard / mouse, usage of test applications
- Hardware utilization and status
- User-defined static information, for example, an inventory code

For details, see the R&S®HUMS User Manual.

25.4 Remote Desktop connection

Remote Desktop is a Windows application, which can be used to access and control the instrument from a remote computer through a LAN connection. While the instrument is in operation, the contents of the instrument screen are displayed on the remote computer. Remote Desktop provides access to all applications, files, and network resources of the instrument. Thus, remote operation of the instrument is possible.

NOTICE

Risk of unauthorized access

If you enable the Windows Remote Desktop application on the instrument, anyone using the network who knows the computer name and login data can access it. To prevent unauthorized access, make sure that the Remote Desktop application on the instrument is disabled: "Start" > "Settings" > "Control Panel" > " System"

To set up a Remote Desktop connection

1. Enable remote desktop control on the instrument. See "Enabling remote desktop control on the instrument" on page 1299 for details.
2. Connect the instrument and the remote computer to a LAN. See Section 25.2.1, "Connecting the instrument to the network", on page 1288 for details.
3. Set up the Remote Desktop connection between the remote computer and the instrument.

Remote Desktop Connection is part of the operating system and can be accessed via "Start > Windows Accessories > Remote Desktop Connection.".

Enabling remote desktop control on the instrument

1. Press the [Setup] key and select the "System" tab.
2. Tap "System".
3. Select "Remote settings".

   The "Remote" tab of the "System Properties" is shown.
4. Under "Remote Desktop", activate "Allow remote connections to this computer".

   Note: Remote Desktop access and firewall settings.
   When you enable or disable the Windows Remote Desktop option (in the "System Properties"), the associated firewall settings are adapted automatically.
5. If necessary, click "Select Users" and select users who are allowed to access the R&S RTP via Remote Desktop.

   The user account under which configuration is carried out is automatically enabled for Remote Desktop.

Setting up the Remote Desktop connection on the remote computer

1. On the remote computer, select "Start > Windows Accessories > Remote Desktop Connection".
2. Enter the instrument's name or IP address in the dialog box.
   See also Section 25.2.2, "Assigning the IP address", on page 1289.
3. Enter the user ID and password for the instrument. See Section 25.1, "Operating system", on page 1283 for details.
4. Click "Connect".

   When the connection has been set up, the instrument's screen appears on the remote computer.

For detailed information about Remote Desktop and the connection, refer to the Windows Help.

Helpful settings for Remote Desktop

The following settings for the Remote Desktop connection can make working on the remote PC more convenient.

1. When setting up the connection to the instrument, you can configure the connection settings in the "Remote Desktop Connection" dialog box.
   Click the "Show Options".

   The dialog box is expanded to display the configuration data.
2. Customize the settings:
   a) On the "Experience" tab, select the appropriate connection to optimize the connection speed.
   b) On the "Local Resources" tab:
      - To use printers connected to the remote PC while accessing them from the instrument, activate "Printers" under "Local devices and resources".
      - If you want access drives of the remote PC from the instrument, e.g. to store settings or to copy files from the PC to the instrument:
        – Select "More" under "Local devices and resources".
        – Select the "Drives" that are needed.
          Windows maps the selected drives of the remote PC to corresponding network drives. When a connection is established, a warning on the PC indicates that the drives are enabled for access from the instrument.
   c) On the "Display" tab:
      - Use the slider to set the size of the R&S RTP window on the remote PC desktop.
      - Activate "Display the connection bar when in full screen mode".
        A bar with the network address of the instrument is displayed on the screen, which you can use to reduce, minimize or close the window.

d) On the "General" tab, you can save the connection settings for later use: click "Save As".

Terminating Remote Desktop Control

A Remote Desktop connection can be terminated either on the R&S RTP or on the remote PC. The connection can be established again any time as long as remote control is enabled on the instrument. Consider the notice "Risk of unauthorized access" on page 1299.

► To terminate the connection on the remote PC, close the "Remote Desktop" window, or select "Start > Disconnect".

25.5 Remote control

Remote control automates the operation of the instrument using SCPI commands, scripts and programs.

For general information on remote control of Rohde & Schwarz products via SCPI, refer to www.rohde-schwarz.com/rc-via-scpi.

The following sections describe the instrument-specific basics of remote control. SCPI commands are listed described in chapter "Remote Control Commands".

- Remote control interfaces and protocols....1301
- Remote settings....1304
- Starting and stopping remote control....1306
- Remote control - status reporting system....1307

25.5.1 Remote control interfaces and protocols

The R&S RTP supports the following interfaces for remote control:

- LAN interface with HiSLIP protocol, VXI-11 protocol or raw socket.
  See Section 25.5.1.1, "LAN interface", on page 1301.
- USB TMC interface (USB Test & Measurement Class), allows test instruments to be connected to and controlled by a computer via a standard USB cable. A VISA installation is required.
  See Section 25.5.1.2, "USB interface", on page 1304.
- GPIB interface (IEC/IEEE bus interface) according to standard IEC 625.1/IEEE 488.1
  See Section 25.5.1.3, "GPIB interface (IEC/IEEE bus interface)", on page 1304.

25.5.1.1 LAN interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols. The interface details are given in the specifications.

For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ45 cable (shielded or unshielded twisted pair category 5). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and the VISA program library must be installed on the controller.

The R&S RTP supports the following ways of LAN communication:

- HiSLIP protocol (high-speed LAN interface protocol): recommended protocol for remote control via LAN, successor of VXI-11.
- VXI-11 protocol: first LAN-based protocol, developed for test and measurement instruments communication as a replacement for the expensive GPIB equipment.
- Raw socket: universal I/O protocol, usually over the port 5025. No need for VISA installation. Communication without control channel, hence there is no support for events like Service Request (SRQ) or Device Clear (DCL).

HiSLIP protocol

The high-speed LAN instrument protocol (HiSLIP) was defined by the IVI Foundation and adopted by the LXI Consortium as the recommended LAN protocol.

The HiSLIP protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. `Device Clear` or `SRQ`).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections.
- Compatible IEEE 488.2 support for message exchange protocol, device clear, serial poll, remote/local, trigger, and service request.
- It uses a single IANA-registered port (4880), which simplifies the configuration of firewalls.
- It supports simultaneous access of multiple users by providing versatile locking mechanisms.
- Usable for IPv6 or IPv4 networks.

Note that HiSLIP data is sent to the device using the "fire and forget" method with immediate return. A successful return of a VISA operation such as `viWrite()` does not ensure that the instrument has finished or started the requested command. It only indicates that the command has been delivered to the TCP/IP buffers.

VXI-11 protocol

The VXI-11 standard is based on the open network computing remote procedure call (ONC RPC) protocol, which in turn relies on TCP/IP at the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured.

TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

Raw socket mode

With raw socket communication, the instrument communicates directly with the TCP transport layer. A VISA library is not required, but VISA offers an option to open a raw socket session. Service requests and status byte polling are not supported in the raw socket mode.

TCP/IP raw socket connections for SCPI commands use port 5025. Terminate all commands with a line feed (LF).

IP address (VISA resource string) for LAN connections

Only the IP address or a valid DNS host name is required to set up the connection. The host address is part of the "VISA resource string" used by programs to identify and control the instrument. The VISA resource string has the form:

- **HiSLIP protocol**
  `TCPIP::<host address>::hislip0[,<port>][::INSTR]`
  Examples:
  IP address is *192.1.2.3*, resource string: `TCPIP::192.1.2.3::hislip0`
  Instrument name is *RSRT1*, resource string: `TCPIP::RSRT1::hislip0`.
  DNS host name is *RTP-123456*, resource string:
  `TCPIP::RTP-123456::hislip0`.
- **VXI-11 protocol**
  `TCPIP::<host address>[::inst0][::INSTR]`
  Examples
  IP address is *192.1.2.3*, resource string: `TCPIP::192.1.2.3`
  Instrument name is *RSRT1*, resource string: `TCPIP::RSRT1`.
  DNS host name is *RTP-123456*, resource string: `TCPIP::RTP-123456`.
- **Raw socket communication**
  `TCPIP::<host address>::<port>::SOCKET`
  Example
  TCPIP::192.1.2.3::5025::SOCKET

Where:

- `host address` identifies the R&S RTP in the network, usually the IP address. If the LAN is supported by a DNS server, the host name can be used instead of the IP address. The DNS server (Domain Name System server) translates the host name to the IP address.
- `hislip0` indicates the HiSLIP protocol.
- `inst0` is the default LAN device name. VISA supports several devices running on the instrument. On R&S RTP, only one device is configured, so the LAN device name can be omitted.
- `INSTR` specifies a VISA resource of the type INSTR. By default, the VISA resource name control is set to the INSTR class.
- `port` is the port number, for raw socket communication, port 5025 is used.

See also:

- Find IP address: "Menu" > "Settings" > "System" tab, see "IP Address" on page 74

- Section 25.2.2, "Assigning the IP address", on page 1289

25.5.1.2 USB interface

For remote control using USB TMC, the controller PC and the instrument are connected over the USB type B interface.

A VISA installation is required, because it contains the necessary USB drivers to be able to connect and communicate with the instrument.

USB resource string

```
USB::<vendor ID>::<product ID>::<serial number>[::INSTR]
```

- <vendor ID> is the manufacturer ID for Rohde & Schwarz.
- <product ID> is the product identification of the instrument.
- <serial number> is the individual serial number of the instrument.
- [::INSTR] indicates the instrument resource class (optional).

25.5.1.3 GPIB interface (IEC/IEEE bus interface)

To control the instrument remotely via GPIB, the instrument and the controlle must be connected by a GPIB bus cable. The total cable length is restricted to a maximum of 15 m; the cable length between two instruments should not exceed 2m.

GPIB instrument address

The GPIB address is set on the instrument, see Section 25.5.2.1, "GPIB settings", on page 1304.

25.5.2 Remote settings

The settings on this tab are required for remote control of the instrument via a connected computer.

25.5.2.1 GPIB settings

Access: "Menu" > "Settings" > "System" > "Remote"

Displays the GPIB settings of the instrument.

Address
Indicates the GPIB address of the instrument.

The remote control address is factory-set to 20, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIB address is maintained after a reset of the instrument settings. Be aware that changing the address has major effects on the communication to the remote computer.


Remote command:
GPIB:ADDRess on page 1360

Terminator
Specifies the symbol that is used as a terminator in GPIB communication.

Remote command:
GPIB:TERMinator on page 1360

25.5.2.2 Remote settings

Access: "Menu" > "Settings" > "System" > "Remote"

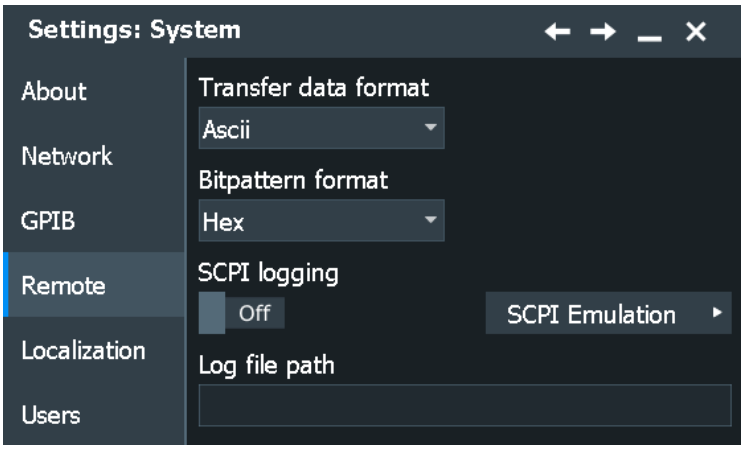

The following settings are required for remote control of the instrument via a connected computer.

Transfer data format
Selects the data format that is used for transmission of waveform data from the instrument to the controlling computer.

Waveform data can be retrieved using the following commands:

- CHANnel<ch>[:WAVeform<wf>]:DATA[:VALues]?
- CALCulate:MATH<m>:DATA[:VALues]?
- REFCurve<rc>:DATA[:VALues]?
- DIGital<m>:DATA[:VALues]?

The content of the data stream can be defined with "Menu" > "Save/Recall" > "Save > Waveforms > Interleaved X/Y" (or EXPort:WAVeform:INCXvalues).

"Ascii"	Data values are returned in ASCII format as a list of comma separated values in floating point format.
"FLOAT"	Binary format. The data is stored as binary data (Definite Length Block Data according to IEEE 488.2).
"INT8"	Signed integer data with length 8 bit.

"INT16" Signed integer data with length 16 bit. The Byte order can be set using .
For details on the formats, refer to the description of the remote command.

Remote command:
FORMat[:DATA] on page 1357

Byte order
Sets the endianess for INT16 data:
- LSB first: little endian, least significant byte first
- MSB first: big endian, most significant byte first

Remote command:
FORMat:BORDer on page 1358

Bit pattern format
Sets the format for all bit pattern queries.

Remote command:
FORMat:BPATtern on page 1359

SCPI logging
If enabled, all received remote commands are written into a text file. Enter the path and filename with extension (log, txt, or csv) in "Log file path".

25.5.3 Starting and stopping remote control

25.5.3.1 Starting a remote control session

When you switch on the instrument, it is always in manual operation state ("local" state). It can be operated via the front panel, the touch screen and external keyboard and/or mouse.

► To start remote control:
- Send a command from the controller.
- VXI-11 protocol (LAN or USB interface): Use &GTR interface message.

While remote control is active, the instrument settings are optimized for maximum measurement speed; the display is switched off. Operation via the front panel is disabled.

On the touch screen, two buttons appear in the upper left corner: "Local" and "View".

25.5.3.2 Using the display during remote control

You can observe the screen while a remote control script is executed. This is helpful for program test purposes but tends to slow down the measurement. Therefore it is

recommended that you switch off the display in real measurement applications where a tested program script is to be executed repeatedly.

► To switch on the display, do one of the following:

- Tap the "View" button in the upper left corner of the touch screen.
- Use the `SYSTem:DISPlay:UPDate ON` command.

► To switch off the display, do one of the following:

- Tap the "View" button again.
- Use the `SYSTem:DISPlay:UPDate OFF` command.

25.5.3.3 Returning to manual operation

The instrument switches back to manual operation when the remote connection is closed. Besides, you can return to manual operation manually or via remote control.

► To return to manual operation:

- Tap the "Local" button in the upper left corner of the touch screen.
- VXI-11 protocol: Use `&GTL` interface message.

25.5.4 Remote control - status reporting system

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue. Both can be queried via `STATus...` commands.

25.5.4.1 Hierarchy of status registers

As shown in the following figure, the status information is of hierarchical structure.

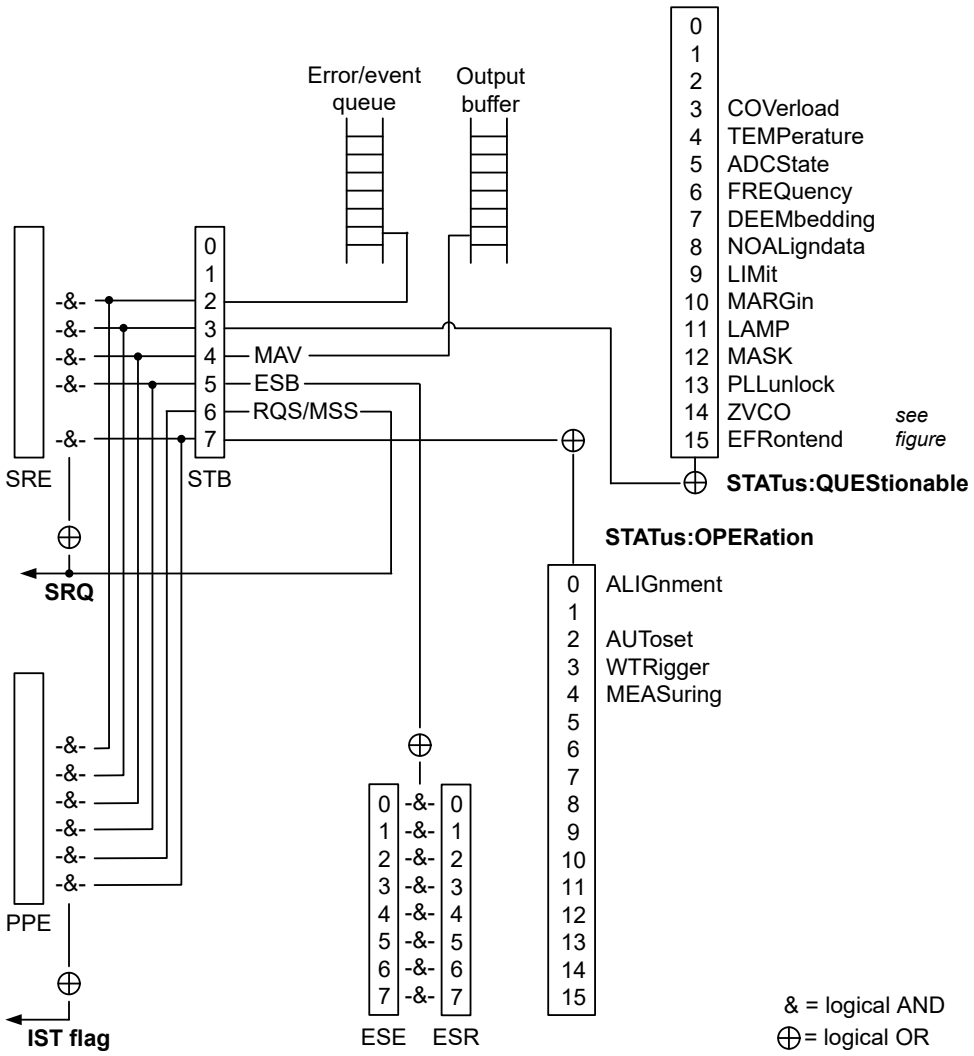


Figure 25-1: Overview of the status registers hierarchy


All status registers have the same internal structure.

25.5.4.2 Structure of a SCPI status register

The `STATus:OPERation` and the `STATus:QUEStionable` SCPI status registers consists of five parts.

The individual bits are independent of each other, i.e. each hardware status is assigned a bit number, which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus, the contents of the register parts can be processed by the controller as positive integers.

Description of the five status register parts

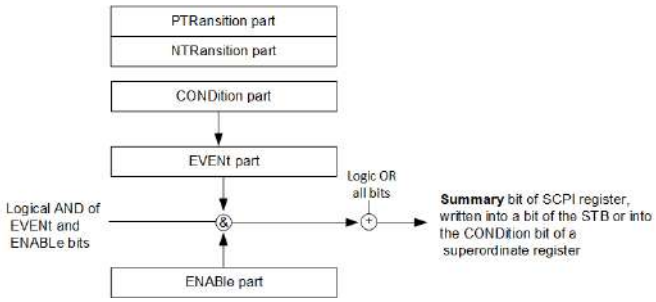

The five parts of a SCPI status register have different properties and functions:

- **CONDition**
  The `CONDition` part reflects the current instrument status. For summary bits, the `CONDition` bit mirrors the sum of the enabled `EVENt` bits of the next lower register.
  This register part can only be read, but not written into or cleared. Its contents are not affected by reading.
- **PTRansition / NTRansition**
  The two transition register parts define which state transition of the `CONDition` part (none, 0 to 1, 1 to 0 or both) is stored in the `EVENt` part.
  The **Positive-TRansition** part acts as a transition filter. When a bit of the `CONDition` part is changed from 0 to 1, the associated `PTR` bit decides whether the `EVENt` bit is set to 1.
  – PTR bit =1: the `EVENt` bit is set.
  – PTR bit =0: the `EVENt` bit is not set.

  All positive transitions are enabled by default.
  This part can be written into and read as required. Its contents are not affected by reading.
  The **Negative-TRansition** part also acts as a transition filter. When a bit of the `CONDition` part is changed from 1 to 0, the associated `NTR` bit decides whether the `EVENt` bit is set to 1.
  – NTR bit =1: the `EVENt` bit is set.
  – NTR bit =0: the `EVENt` bit is not set.

  All negative transitions are disabled by default.
  This part can be written into and read as required. Its contents are not affected by reading.
- **EVENt**
  The `EVENt` part indicates whether an event has occurred since the last reading. It is the "memory" of the condition part. It allows you to detect the occurrence of events reliably, even if they have changed the state of the `CONDition` bit for a very brief interval. It only indicates events passed on by the transition filters.
  This part can only be read by the user. **Reading the register clears it.**
- **ENABle**
  The `ENABle` part determines whether the associated `EVENt` bit contributes to the summary bit (see below). Each bit of the `EVENt` part is "ANDed" with the

associated ENABle bit (symbol '&'). The results of all logical operations of this part are passed on to the summary bit via an "OR" function (symbol '+').
ENABle bit = 0: the associated EVENt bit does not contribute to the summary bit
ENABle bit = 1: if the associated EVENt bit is "1", the summary bit is set to "1" as well.
This part can be written into and read by the user as required. Its contents are not affected by reading.

25.5.4.3 Contents of the status registers

STATus:OPERation register

In the CONDition part, this register contains information on which actions the instrument is executing. In the EVENt part, it contains information on which actions the instrument has executed since the last reading.

It can be read using the commands STATus:OPERation:CONDition? or STATus:OPERation[:EVENt]?, see also Section 26.29.1, "STATus:OPERation register", on page 2846.

Table 25-1: Bits in the STATus:OPERation register

Bit No.	Meaning
0	ALIGnment This bit is set as long as the instrument is performing a self-alignment.
1	Not used
2	AUToset This bit is set while the instrument is performing an auto setup.
3	WTRIgger The wait for trigger status bit indicates that the instrument is ready to trigger, and the pre-trigger time is expired. The bit is set if the instrument did not trigger for more than 10 ms. The bit is only valid if the instrument is operated in a single acquisition mode and in normal trigger mode but not in auto mode.
4	MEASuring The bit is set as long as an acquisition - sampling and postprocessing - is running. In run continuous mode, the bit is always set.
5 - 15	Not used

STATus:QUEStionable register

This register contains information about indefinite states which can occur if the unit is operated without meeting the specifications. It can be read using the commands STATus:QUEStionable:CONDition? and STATus:QUEStionable[:EVENt]?.

The remote commands for the STATus:QUEStionable register are described in Section 26.29.2, "STATus:QUEStionable registers", on page 2847.

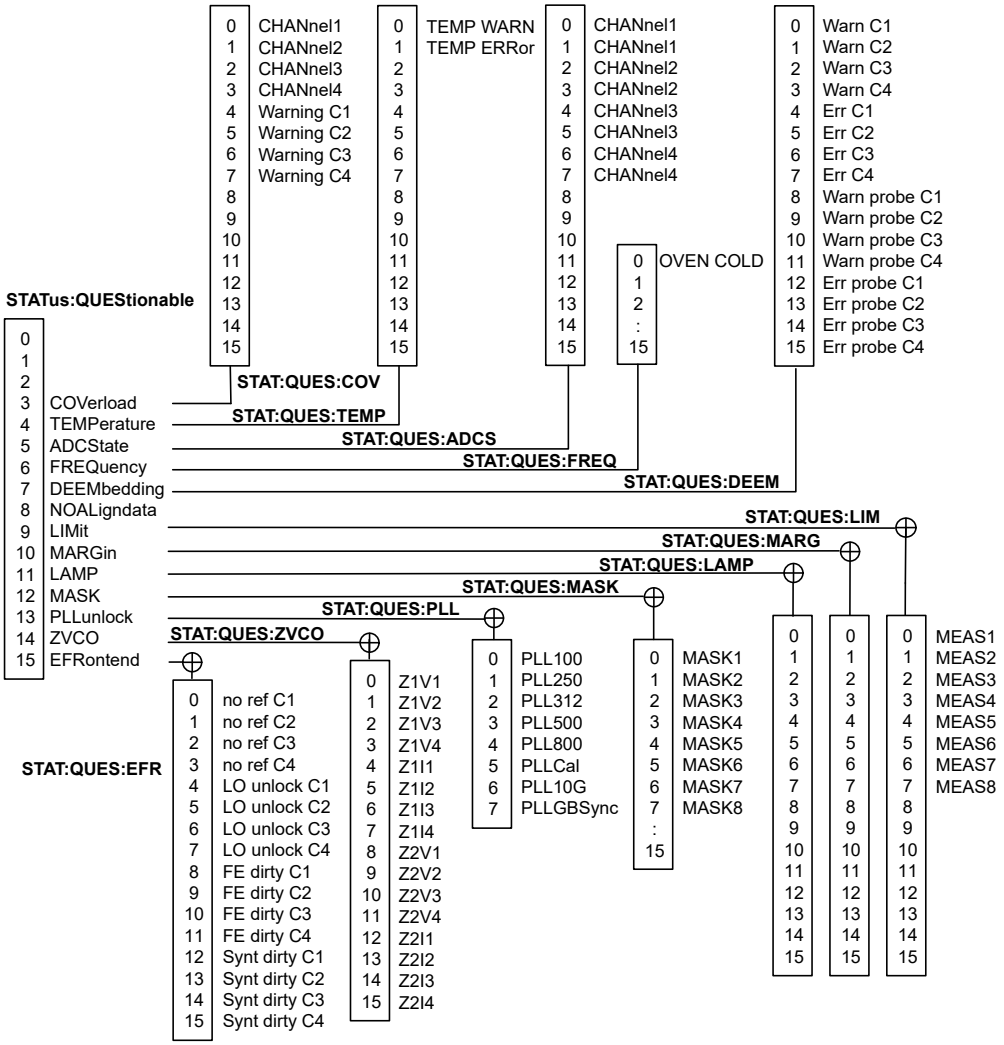


Figure 25-2: Overview of the STATus:QUEStionable register

Table 25-2: Bits in the STATus:QUEStionable register

Bit No.	Meaning
0 to 2	not used
3	`COVerload` This bit is set if a questionable channel overload occurs (see "STATus:QUEStionable:COVerload register" on page 1312).
4	`TEMPerature` This bit is set if a questionable temperature occurs (see "STATus:QUEStionable:TEMPerature register" on page 1313).
5	`ADCState` The bit is set if the signal is clipped on the upper or lower edge of the screen, if an overflow of the ADC occurs (see "STATus:QUEStionable:ADCState register" on page 1313).

Bit No.	Meaning
6	FREQuency This bit is set if there is anything wrong with the frequency of the local oscillator or the reference frequency (see "STATus:QUEStionable:FREQuency register" on page 1313).
7	DEEMbedding The bit is set if a warning or an error occurs during deembedding (see "STATus:QUEStionable:DEEMbedding register" on page 1314).
8	NOALigndata This bit is set if no alignment data is available - the instrument is uncalibrated.
9	LIMit This bit is set if a limit value is violated (see "STATus:QUEStionable:LIMit, STATus:QUEStionable:MARGin registers" on page 1314).
10	MARGin This bit is set if a margin value is violated, and the limit value is not violated (see "STATus:QUEStionable:LIMit, STATus:QUEStionable:MARGin registers" on page 1314).
11	LAMP (Low AMPlitude) This bit is set if the magnitude of the signal is too low to get reliable measurement results. See "STATus:QUEStionable:LAMP register" on page 1315.
12	MASK This bit is set if a mask value is violated (see "STATus:QUEStionable:MASK register" on page 1315
13	PLLunlock See "STATus:QUEStionable:PLLunlock register" on page 1315.
14	ZVCO: This bit is set if a channel overload occurs at one or more input channels of the R&S RT-ZVC multi-channel power probe. See "STATus:QUEStionable:ZVCO register" on page 1316.
15	EFRontend: this bit is set if problems occur with the connection of external frontends (requires option R&S RTP-K553). See "STATus:QUEStionable:EFRontend register" on page 1317.

STATus:QUEStionable:COVerload register

This register contains all information about overload of the channels. The bit is set if the assigned channel is overloaded, or if an overload risk occurred (overload warning).

Table 25-3: Bits in the STATus:QUEStionable:COVerload register

Bit No.	Meaning
0	Overload on CHANnel1
1	Overload on CHANnel2
2	Overload on CHANnel3
3	Overload on CHANnel4
4	Overload warning for CHANnel1
5	Overload warning for CHANnel2
6	Overload warning for CHANnel3

Bit No.	Meaning
7	Overload warning for CHANnel4
8	Overload on external trigger input
9	Overload warning for external trigger input

STATus:QUEStionable:TEMPerature register

This register contains information about the instrument's temperature.

Table 25-4: Bits in the STATus:QUEStionable:TEMPerature register

Bit No.	Meaning
0	TEMP WARN This bit is set if a temperature warning on channel 1, 2, 3 or 4 occurred.
1	TEMP ERRor This bit is set if a temperature error on channel 1, 2, 3 or 4 occurred.

STATus:QUEStionable:ADCState register

This register contains all information about overflow of the ADC.

The bit is set if the assigned channel signal is clipped on the upper or lower edge of the screen. In this case, the signal does not fit in the range of the ADC and overflow occurs.

Table 25-5: Bits in the STATus:QUEStionable:ADCState register

Bit No.	Meaning
0	CHANnel1, clipping on the upper limit
1	CHANnel1, clipping on the lower limit
2	CHANnel2, clipping on the upper limit
3	CHANnel2, clipping on the lower limit
4	CHANnel3, clipping on the upper limit
5	CHANnel3, clipping on the lower limit
6	CHANnel4, clipping on the upper limit
7	CHANnel4, clipping on the lower limit

STATus:QUEStionable:FREQuency register

Table 25-6: Bits in the STATus:QUEStionable:FREQuency register

Bit No.	Meaning
0	Oven cold. This bit is set if the reference oscillator has not yet attained its operating temperature.

STATus:QUEStionable:DEEMbedding register

Table 25-7: Bits in the STATus:QUEStionable:DEEMbedding register

Bit No.	Meaning
0 1 2 3	Warning for channel 1, 2, 3, 4 accordingly. The bits are set if there are problems in the deembedding configuration of the assigned channel.
4 5 6 7	Error for channel 1, 2, 3, 4 accordingly. The bits are set if the deembedding configuration of the assigned channel causes an error.
8 9 10 11	Warning for channel 1, 2, 3, 4 accordingly. The bits are set if there are problems in the probe deembedding of the assigned channel.
12 13 14 15	Error for channel 1, 2, 3, 4 accordingly. The bits are set if the probe deembedding of the assigned channel causes an error.

STATus:QUEStionable:LIMit, STATus:QUEStionable:MARGin registers

These registers contain information about the observance of the limits or margins of measurements.

The LIMit bit is set if the limit of the assigned measurement is violated. The MARGin bit is set if the margin of the assigned measurement is violated but not the limit (the limit bit is not set).

The status bits are set if the limits or margins of one or more assigned measurements are violated.

If multiple measurements are active, all measurement results affect the status bits. Statistical results do not change the status bits.

Table 25-8: Bits in the STATus:QUEStionable:LIMit and STATus:QUEStionable.MARGin registers

Bit No.	Meaning
0	MEAS1
1	MEAS2
2	MEAS3
3	MEAS4
4	MEAS5
5	MEAS6

Bit No.	Meaning
6	MEAS7
7	MEAS8

STATus:QUEStionable:LAMP register

The LAMP (Low AMPlitude) bit is set if the magnitude of the signal is too low to get reliable measurement results.

Table 25-9: Bits in the STATus:QUEStionable:LAMP register

Bit No.	Meaning
0	MEAS1
1	MEAS2
2	MEAS3
3	MEAS4
4	MEAS5
5	MEAS6
6	MEAS7
7	MEAS8

STATus:QUEStionable:MASK register

This register contains information about the violation of masks. This bit is set if the assigned mask is violated.

Table 25-10: Bits in the STATus:QUEStionable:MASK register

Bit No.	Meaning
0	MASK1
1	MASK2
2	MASK3
3	MASK4
4	MASK5
5	MASK6
6	MASK7
7	MASK8

STATus:QUEStionable:PLLunlock register

This register contains information on the phase-locked loop process status. An unlocked status sets the bit true.

Table 25-11: Bits in the STATus:QUEStionable:PLLunlock register

Bit No.	Meaning
0	PLL100: indicates if the frequency reference is locked. The frequency reference is usually the OCXO. It can also be an external reference if it is connected and activated.
1	not used
2	not used
3	PLL500: internal use
4	PLL800: internal use
5	PLLCal: internal use
6	not used
7	PLLGBSync: internal use

STATus:QUEStionable:ZVCO register

This register contains all information about overload of the R&S RT-ZVC input channels. The bit is set if the assigned channel is overloaded.

Table 25-12: Bits in the STATus:QUEStionable:ZVCO register

Bit No.	Meaning
0	Overload on Z1V1
1	Overload on Z1V2
2	Overload on Z1V3
3	Overload on Z1V4
4	Overload on Z1I1
5	Overload on Z1I2
6	Overload on Z1I3
7	Overload on Z1I4
8	Overload on Z2V1
9	Overload on Z2V2
10	Overload on Z2V3
11	Overload on Z2V4
12	Overload on Z2I1
13	Overload on Z2I2
14	Overload on Z2I3
15	Overload on Z2I4

STATus:QUEStionable:EFRontend register

This register contains information on connected frontends (requires option R&S RTP-K553). The bit is set if connection errors occur.

Table 25-13: Bits in the STATus:QUEStionable:EFR register

Bit No.	Meaning
0	No reference signal on C1
1	No reference signal on C2
2	No reference signal on C3
3	No reference signal on C4
4	LO unlocked on C1
5	LO unlocked on C2
6	LO unlocked on C3
7	LO unlocked on C4
8	Frontend problem on C1
9	Frontend problem on C2
10	Frontend problem on C3
11	Frontend problem on C4
12	Problem with LO synthesizer on C1
13	Problem with LO synthesizer on C2
14	Problem with LO synthesizer on C3
15	Problem with LO synthesizer on C4

25.5.4.4 Reset values of the status reporting system

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except *RST and SYSTem:PRESet, influence the functional instrument settings. In particular, DCL does not change the instrument settings.

DCL means Device clear, and SDC is Selected device clear. These commands are GPIB interface commands that abort the processing of the commands received and set the command processing software to a defined initial state. DCL affects all connected instruments, while SDC affects only the addressed device. Both commands do not change the instrument settings. In a VISA implementation, viClear translates to the DCL interface command.

All other commands are explained in the "Remote control commands" section.

Table 25-14: Resets of the status reporting system

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device clear, Selected device clear)	*RST or SYS-Tem:PRE Set	STA-Tus:PRE-Set	*CLS
Effect	**0**	**1**				
Clear STB, ESR	-	yes	-	-	-	yes
Clear SRE, ESE	-	yes	-	-	-	-
Clear PPE	-	yes	-	-	-	-
Clear EVENt parts of the registers	-	yes	-	-	-	yes
Clear ENABle parts of all OPERation and QUEStionable registers; Fill ENABle parts of all other registers with "1".	-	yes	-	-	yes	-
Fill PTRansition parts with "1"; Clear NTRansition parts	-	yes	-	-	yes	-
Clear error queue	yes	yes	-	-	-	yes
Clear output buffer	yes	yes	yes	1)	1)	1)
Clear command processing and input buffer	yes	yes	yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.						

26 Remote control commands

This chapter describes all remote commands available for R&S RTP and provides examples and information how to use the commands.

For further information on remote control, see Section 25.5, "Remote control", on page 1301.

26.1 Conventions used in remote command description..... 1326
26.2 Finding the appropriate command..... 1326
26.3 Programming examples..... 1327
26.3.1 Display..... 1328
26.3.2 Automatic measurements..... 1329
26.3.3 Mask testing..... 1333
26.3.4 Search..... 1334
26.3.5 Data management..... 1334
26.3.6 Deembedding..... 1341
26.3.7 Protocol analysis..... 1342
26.4 Frequently used parameters and suffixes..... 1343
26.4.1 Waveform suffix..... 1343
26.4.2 Waveform parameter..... 1348
26.4.3 Slope parameter..... 1350
26.4.4 Polarity parameter..... 1350
26.4.5 Event parameter..... 1350
26.4.6 Bit pattern parameter..... 1351
26.5 Common commands..... 1352
26.6 General remote settings..... 1357
26.7 Instrument setup..... 1361
26.7.1 System..... 1361
26.7.2 Appearance..... 1363
26.7.3 Display..... 1388
26.7.4 User-defined preset..... 1390
26.7.5 Save / recall..... 1391
26.7.6 Maintenance..... 1391
26.8 Acquisition and setup..... 1394
26.8.1 Starting and stopping acquisition..... 1394

26.8.2 Timebase....1395
26.8.3 Acquisition....1398
26.8.4 Fast segmentation....1406
26.8.5 Vertical....1407
26.8.6 Waveform data....1413
26.8.7 Probes....1415
26.8.8 R&S RT-ZVC probe....1445
26.8.9 Differential signals....1459
26.8.10 Digital filter....1463
26.8.11 Skew....1464
26.8.12 High definition mode....1466
26.8.13 Reference clock....1467
26.9 Trigger....1468
26.9.1 Basic trigger settings....1469
26.9.2 Edge trigger....1472
26.9.3 Glitch trigger....1472
26.9.4 Width trigger....1474
26.9.5 Runt trigger....1475
26.9.6 Window trigger....1478
26.9.7 Timeout trigger....1481
26.9.8 Interval trigger....1481
26.9.9 Slew rate trigger....1483
26.9.10 Setup & Hold....1485
26.9.11 State trigger....1488
26.9.12 Pattern trigger....1488
26.9.13 High-speed serial pattern trigger (option R&S RTP-K140/K141)....1491
26.9.14 CDR trigger....1511
26.9.15 TV/Video trigger....1514
26.9.16 Line trigger....1519
26.9.17 Trigger qualification....1520
26.9.18 Holdoff....1523
26.9.19 Conditioning....1527
26.9.20 Trigger sequence....1530

26.9.21 Trigger control ... 1533
26.9.22 Actions on trigger ... 1535
26.9.23 Zone trigger (option R&S RTP-K19) ... 1538
26.9.24 External trigger input ... 1538
26.9.25 Acquisition info ... 1541
26.10 Waveform analysis ... 1542
26.10.1 Zoom ... 1542
26.10.2 Reference waveforms ... 1552
26.10.3 Mathematics ... 1564
26.10.4 Waveform histograms ... 1569
26.10.5 History ... 1576
26.10.6 XY-Diagram ... 1581
26.11 Cursor measurements ... 1584
26.11.1 Cursor setup ... 1584
26.11.2 Cursor results ... 1593
26.11.3 Peak search using cursors ... 1594
26.12 Automatic measurements ... 1596
26.12.1 General settings ... 1597
26.12.2 Amplitude/time measurements ... 1603
26.12.3 PAM Results ... 1617
26.12.4 Arithmetic for amplitude/time and spectrum measurements ... 1622
26.12.5 Eye diagram measurements ... 1630
26.12.6 Optical measurements ... 1643
26.12.7 Spectrum measurements ... 1646
26.12.8 Histogram measurements ... 1653
26.12.9 EMC/ESD measurements (option R&S RTP-K155) ... 1658
26.12.10 Protocol measurements ... 1662
26.12.11 Measurement gates ... 1668
26.12.12 Results ... 1672
26.12.13 Display ... 1675
26.12.14 Statistics and long-term measurements ... 1677
26.12.15 Track ... 1684
26.12.16 Limit check and event actions ... 1685

26.13 Spectrum analysis 1689
26.13.1 Basic FFT 1689
26.13.2 Waveform data 1703
26.13.3 Spectrum analysis (option R&S RTP-K37) 1705
26.14 Mask testing 1707
26.14.1 Mask test definition 1707
26.14.2 Mask definition: user mask 1712
26.14.3 Mask definition: waveform mask 1718
26.14.4 Event actions 1721
26.14.5 Results 1724
26.14.6 Eye mask testing 1726
26.15 Search 1732
26.15.1 General search settings 1732
26.15.2 Basic trigger search conditions 1735
26.15.3 Edge search conditions 1737
26.15.4 Glitch search conditions 1737
26.15.5 Interval search conditions 1739
26.15.6 Runt search conditions 1740
26.15.7 Slew rate search conditions 1743
26.15.8 Timeout search conditions 1746
26.15.9 Width search conditions 1746
26.15.10 Window search conditions 1749
26.15.11 Data2clock search conditions 1751
26.15.12 Pattern search conditions 1754
26.15.13 State search conditions 1758
26.15.14 Search on spectrum 1761
26.15.15 Search gate settings 1762
26.15.16 Noise rejection 1765
26.15.17 Search results 1767
26.16 Data management 1773
26.16.1 Instrument settings 1774
26.16.2 Savesets and one file 1781
26.16.3 Waveform data transmission 1782

26.16.4 Waveform data: export to file ... 1783
26.16.5 Waveform histogram: export to file ... 1791
26.16.6 Eye data: export to file ... 1792
26.16.7 Long term measurement results and measurement histogram: export to file ... 1794
26.16.8 Screenshots ... 1796
26.16.9 Reports ... 1800
26.16.10 Autonaming ... 1802
26.16.11 CSV export ... 1804
26.16.12 External application ... 1804
26.16.13 Video raster analysis (option R&S RTP-K129) ... 1805
26.17 Signal configuration ... 1808
26.17.1 General setup ... 1808
26.17.2 Signal and reference levels for NRZ signals ... 1811
26.17.3 Signal anad reference levels for PAM-N signals ... 1825
26.18 Protocols ... 1832
26.18.1 Configuration settings for all serial protocols ... 1833
26.18.2 Trigger Settings for all serial protocols ... 1837
26.18.3 I²C (option R&S RTP-K1) ... 1839
26.18.4 I3C (option R&S RTP-K45) ... 1875
26.18.5 SPI (option R&S RTP-K1) ... 1903
26.18.6 UART/RS-232/RS-422/RS-485 (option R&S RTP-K2) ... 1924
26.18.7 CAN (option R&S RTP-K3/K9) ... 1935
26.18.8 CAN-XL (option R&S RTP-K77) ... 1982
26.18.9 LIN (option R&S RTP-K3) ... 2017
26.18.10 MIL-1553 (option R&S RTP-K6) ... 2048
26.18.11 ARINC 429 (option R&S RTP-K7) ... 2078
26.18.12 Ethernet 10BASE-T and 100BASE-TX (option R&S RTP-K8) ... 2096
26.18.13 10BASE-T1S (option R&S RTP-K56) ... 2120
26.18.14 Ethernet 100BASE-T1 (option R&S RTP-K57) ... 2146
26.18.15 Ethernet 1000BASE-T1 (option R&S RTP-K58) ... 2177
26.18.16 RFFE (option R&S RTP-K40) ... 2210
26.18.17 D-PHY (option R&S RTP-K42) ... 2244
26.18.18 M-PHY (option R&S RTP-K44) ... 2278

26.18.19 Custom: manchester / NRZ (option R&S RTP-K50)..... 2339
26.18.20 8B/10B (option R&S RTP-K52)..... 2385
26.18.21 MDIO (option R&S RTP-K55)..... 2402
26.18.22 USB (option R&S RTP-K60)..... 2418
26.18.23 USB 3.1 (option R&S RTP-K61/K62)..... 2462
26.18.24 USBPD (option R&S RTP-K63)..... 2501
26.18.25 Space wire (option R&S RTP-K65)..... 2527
26.18.26 PCIe (option R&S RTPK72/K73)..... 2546
26.18.27 DDR (option R&S RTP-K91/K93/K94/K95)..... 2598
26.19 Mixed signal option (MSO, R&S RTP-B1)..... 2621
26.19.1 Digital channels..... 2621
26.19.2 Parallel bus configuration..... 2624
26.19.3 Digital resolution..... 2632
26.19.4 Trigger settings for digital signals and parallel buses..... 2633
26.19.5 MSO data..... 2645
26.20 Waveform generator (option R&S RTP-B6)..... 2648
26.20.1 Waveform generator setup..... 2648
26.20.2 Pattern generator setup..... 2663
26.20.3 Output setup..... 2665
26.20.4 Noise setup..... 2667
26.20.5 DC offset alignment..... 2668
26.20.6 Coupling & sync..... 2669
26.21 Pulse source and TDR/TDT analysis (options R&S RTP-B7/K130)..... 2672
26.21.1 Pulse source (option R&S RTP-B7)..... 2672
26.21.2 TDR/TDT analysis..... 2674
26.22 I/Q software interface (option R&S RTP-K11)..... 2681
26.22.1 I/Q sampling settings..... 2682
26.22.2 I/Q data output..... 2687
26.23 Jitter analysis and clock data recovery..... 2688
26.23.1 Jitter measurements (option R&S RTP-K12)..... 2689
26.23.2 Advanced jitter and noise (option R&S RTP-K133/K134)..... 2695
26.23.3 Clock data recovery (software-based, option R&S RTP-K12)..... 2739
26.23.4 Eye mask testing..... 2745

26.24 Eye diagram analysis....2745
26.24.1 Basic setup....2745
26.24.2 Display....2754
26.24.3 Qualify: gate settings....2756
26.24.4 Qualify: signal settings....2759
26.24.5 Filter....2761
26.24.6 Results of eye....2765
26.24.7 Results of mask tests on eye diagrams....2767
26.25 Deembedding (option R&S RTP-K121/-K122)....2769
26.25.1 Measurement setup....2770
26.25.2 Save and load the deembedding setup....2773
26.25.3 Components....2774
26.25.4 Cascade and response....2784
26.26 Embedding and equalization (option R&S RTP-K126)....2784
26.26.1 Signal lanes....2785
26.26.2 General....2787
26.26.3 Vertical....2790
26.26.4 TxFFE....2791
26.26.5 Embedding....2793
26.26.6 CTLE....2802
26.26.7 FFE....2806
26.26.8 DFE....2810
26.26.9 Filter training....2817
26.27 External frontend control (option R&S RTP-K553)....2823
26.27.1 Setup and connection....2824
26.27.2 Frontend settings and parameters....2827
26.27.3 Accessories....2841
26.28 Maintenance....2844
26.29 Status reporting....2846
26.29.1 STATus:OPERation register....2846
26.29.2 STATus:QUEStionable registers....2847
26.30 Remote trace....2852
26.30.1 Standard commands....2853

26.30.2 Diagnostic remote trace commands....2855
26.31 Deprecated commands....2856
26.31.1 Base instrument....2856
26.31.2 Options....2857

26.1 Conventions used in remote command description

The following conventions are used in the remote command descriptions:

- *Command usage*
  If not specified otherwise, commands can be used both for setting and for querying parameters.
  If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- *Parameter usage*
  If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.
  Parameters required only for setting are indicated as "Setting parameters".
  Parameters required only to refine a query are indicated as "Query parameters".
  Parameters that are only returned as the result of a query are indicated as "Return values".
- *Conformity*
  Commands that are taken from the SCPI standard are indicated as "SCPI confirmed". All commands used by the R&S RTP follow the SCPI syntax rules.
- *Asynchronous commands*
  A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an "Asynchronous command".
- *Reset values (*RST)*
  Default parameter values that are used directly after resetting the instrument (`*RST` command) are indicated as "*RST" values, if available.
- *Default unit*
  The default unit is used for numeric values if no other unit is provided with the parameter.

26.2 Finding the appropriate command

In the following chapters, the commands are sorted according to the menu and dialog structure of the instrument.

A list of all commands in alphabetical order ist given in the "List of Commands" at the end of this documentation.

To find the appropriate command for a setting easily, you can use the context help:

1. Enable the "Help" icon on the toolbar.



2. Tap the parameter for which you need information.

   The tooltip opens.

3. Tap the "Show Help" button in the lower right corner of the tooltip.

   The "Help" window opens and displays the comprehensive description and the corresponding remote command.

4. Tap the remote command link to open the command description.

26.3 Programming examples

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

26.3.1 Display ... 1328
26.3.1.1 Creating diagrams (SmartGrid) ... 1328
26.3.1.2 Creating zoom diagrams ... 1329
26.3.2 Automatic measurements ... 1329
26.3.2.1 Performing amplitude/time measurements ... 1329
26.3.2.2 Setting reference levels ... 1330
26.3.2.3 Waveform histograms ... 1331
26.3.2.4 Long-term measurements ... 1332
26.3.2.5 Measurement limits ... 1333
26.3.3 Mask testing ... 1333
26.3.3.1 Creating a user mask ... 1333
26.3.4 Search ... 1334
26.3.4.1 Searching for a pulse of a specified width ... 1334

26.3.5 Data management....1334
26.3.5.1 Saving a screenshot to file....1334
26.3.5.2 Exporting waveform data to file....1335
26.3.5.3 Exporting measurement results to file....1341
26.3.6 Deembedding....1341
26.3.6.1 Adding cables to the measurement setup....1341
26.3.7 Protocol analysis....1342
26.3.7.1 RFFE (option R&S RTP-K40)....1342

26.3.1 Display

- Creating diagrams (SmartGrid)....1328
- Creating zoom diagrams....1329

26.3.1.1 Creating diagrams (SmartGrid)

The example creates 3 diagrams at different positions on the screen, and a zoom diagram. It also minimizes a waveform and adds it to another diagram.

Command description in: Section 26.7.2.4, "Smartgrid", on page 1368

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
// Turn on display update
:SYSTem:DISPlay:UPDate ON
// Turn on Channel 2
:CHANnel2:STATe 1
// Create new diagram 'MyDiag2' below existing 'Diagram1' with waveform C2W1 in it
:LAYout:ADD 'Diagram1',VERTical,OFF,C2W1,'MyDiag2'
// Turn on Channel 3
:CHANnel3:STATe 1
// Create new diagram 'MyDiag3' right of existing 'MyDiag2'
:LAYout:ADD 'MyDiag2',HORizontal,OFF,C3W1,'MyDiag3'
// Turn on Channel 4
:CHANnel4:STATe 1
// Create new diagram 'MyDiag4' tabbed to existing 'Diagram1'
:LAYout:ADD 'Diagram1',TAB,OFF,C4W1,'MyDiag4'
// Select 'Diagram1'
:LAYout:SHOW 'Diagram1'
// Create zoom window of 'Diagram1'
:LAYout:ZOOM:ADD 'Diagram1',VERT,OFF,-10e-9,10e-9,-0.05,0.04,'MyZoom1'
// Minimize Channel 2 (Wfm1)
:LAYout:SIGNal:UNAssign C2W1
// Add Channel 2 (Wfm1) to Diagram1
:LAYout:SIGNal:ASSign 'Diagram1', C2W1
```

```
*OPC?
```

26.3.1.2 Creating zoom diagrams

The example creates a zoom diagram, sets the relative size of the zoom area, and removes the zoom diagram.

Command description in: Section 26.10.1, "Zoom", on page 1542.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
// Create an new zoom diagram for Diagram1
LAYout:ZOOM:ADD 'Diagram1', VERT, OFF, -10e-9, 20e-9, -0.1, 0.05, 'MyZoom1'
// Query the horizontal zoom mode, return value: ABS
LAYout:ZOOM:HORZ:MODE? 'Diagram1', 'MyZoom1'
<--ABS
// Set horizontal zoom mode to relative
LAYout:ZOOM:HORZ:MODE 'Diagram1', 'MyZoom1', REL
// Set horizontal zoom span in percent
LAYout:ZOOM:HORZ:REL:SPAN 'Diagram1', 'MyZoom1', 10
// Set horizontal zoom position in percent
LAYout:ZOOM:HORZ:REL:POS 'Diagram1', 'MyZoom1', 15
*OPC?
// Remove zoom diagram
LAYout:ZOOM:REM 'Diagram1', 'MyZoom1'
*OPC?
```

26.3.2 Automatic measurements

- Performing amplitude/time measurements 1329
- Setting reference levels 1330
- Waveform histograms 1331
- Long-term measurements 1332
- Measurement limits 1333

26.3.2.1 Performing amplitude/time measurements

Command description is given in Section 26.12.1, "General settings", on page 1597 and Section 26.12.12, "Results", on page 1672.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

Simple frequency and amplitude measurement

```
SING;*OPC?
MEAS1:SOUR C1W1        // Configure frequency measurement
MEAS1:MAIN FREQ
```

```
MEAS1 ON
*OPC?
MEAS2:SOUR C1W1        // Configure amplitude measurement
MEAS2:MAIN AMPL
MEAS2 ON
*OPC?
MEAS1:RES:ACT?        // Get frequency result
MEAS2:RES:ACT?        // Get amplitude result
*OPC?
```

26.3.2.2 Setting reference levels

Command description in Section 26.17.2, "Signal and reference levels for NRZ signals", on page 1811.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

Manual reference level definition using relative values

Reference levels are set to 15%, 50%, and 85% of the high signal level for waveform Ch2Wfm1 (= suffix 5).

```
REFLevel5:LDETection MANual
REFLevel5:LMODe REL
REFLevel5:RELative:MODE USER
REFLevel5:RELative:LOWer 15
REFLevel5:RELative:MIDDle 50
REFLevel5:RELative:UPPer 85
*OPC?
```

Manual reference level definition using absolute values

Set reference levels manually for waveform C1W1 (= suffix 2), defining high and low signal levels and the distances between signal and reference levels.

```
REFLevel2:LDETection MANual
REFLevel2:LMODe ABS
REFLevel2:ABSolute:HIGH 0.12
REFLevel2:ABSolute:TDIStance 0.03
REFLevel2:ABSolute:Low -0.12
REFLevel2:ABSolute:BDIStance 0.04
*OPC?
REFLevel2:ABSolute:MLEVel?
<-- 0
```

Set reference levels manually for waveform C1W1 (= suffix 2) by defining upper and lower reference levels and the distances between signal and reference levels.

```
REFLevel2:LDETection MANual
REFLevel2:LMODe ABS
REFLevel2:USRLevel UREF
REFLevel2:ABSolute:LLEVel 0
```

```
REFLevel2:ABSolute:BDIStance 0.02
REFLevel2:ABSolute:ULEVel 0.2
REFLevel2:ABSolute:TDIStance 0.03
*OPC?
REFLevel2:ABSolute:MLEVel?
<-- 0.1
```

Automatic level detection, peak probability

Reference levels are set to the signal levels with the highest probability values for waveform C3W1 (= suffix 8).

```
REFLevel8:LDETection Auto
REFLevel8:AUTO:MODE PPRobability
*OPC?
```

26.3.2.3 Waveform histograms

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

- Creating and reading histograms....1331
- Exporting histogram data to file....1332
- Transferring histogram data....1332

Creating and reading histograms

The example creates a histogram, activates two measurements (mean and standard deviation measurements of Histogram1), and queries the results of both measurements.

Command description in:

- Section 26.12.1, "General settings", on page 1597
- Section 26.12.8.1, "Histogram measurement", on page 1653
- Section 26.12.12, "Results", on page 1672

```
LAY:HIST:ADD 'Histogram1', C1W1, -2.5E-007, 2.5E-007, -1.32, 5.35, OFF, VERT *OPC?

MEAS1 ON
MEAS1:HIST:SEL 'Histogram1'
MEAS1:CAT HIST
MEAS1:MAIN HME
*OPC?

MEAS2 ON
MEAS2:HIST:SEL 'Histogram1'
MEAS2:CAT HIST
MEAS2:MAIN HSTD
*OPC?
```

```
MEAS1:RES:ACT?
MEAS2:RES:ACT?
```

Exporting histogram data to file

The example writes the absolute data values of Histogram1 to `C:\Histograms\Hist1.xml` in XML format.

Command description in Section 26.16.5, "Waveform histogram: export to file", on page 1791.

```
EXPort:HISTogram:SELect 'Histogram1'
EXPort:HISTogram:INCidence ABS
EXPort:HISTogram:NAME 'C:\Histograms\Hist1.xml'
EXPort:HISTogram:SAVE
*OPC?
```

Transferring histogram data

The example transfers the absolute values of Histogram1 to a controlling computer in ASCII format.

Command description in Section 26.16.5, "Waveform histogram: export to file", on page 1791.

```
EXP:HIST:SEL 'Histogram1'
EXP:HIST:INC ABS
*OPC?
FORM ASC
EXP:HIST:DATA?
<--0,0,0,0,0,2037,5754804,4683496,3100169,2874565,...
```

26.3.2.4 Long-term measurements

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

- Exporting long-term measurement data to file 1332
- Transferring long-term measurement data 1333

Exporting long-term measurement data to file

The example writes the long-term data of Meas1 to `C:\Measurements\Meas1.csv` in CSV format.

Command description in Section 26.16.7, "Long term measurement results and measurement histogram: export to file", on page 1794.

```
EXPort:MEASurement:SEL MEAS1
EXPort:MEASurement:TYPE LONGTERM
EXPort:MEASurement:NAME 'C:\Measurements\Meas1.csv'
EXPort:MEASurement:SAVE
*OPC?
```

Transferring long-term measurement data

The example transfers the long-term data of Meas1 to a controlling computer in ASCII format.

Command description in Section 26.16.7, "Long term measurement results and measurement histogram: export to file", on page 1794.

```
MEASurement:LTM ON
MEASurement:STAT ON
EXPort:MEASurement:SELect MEAS1
EXPort:MEASurement:TYPE LONGTERM
*OPC?
FORM ASC
EXPort:MEASurement:DATA?
<--50,0.24901185771,0.24731225296,0.24703557312,0.00069270717936,0,50,....
```

26.3.2.5 Measurement limits

The example configures the limit check for measurement group 4. The LCHeck suffix determines the measurement type, here: 7 = MEAN.

Command description in Section 26.12.2, "Amplitude/time measurements", on page 1603.

```
MEASurement4:AMPTime:LCHeck7:LOWer:LIMit <Value>    // Define lower limit
MEASurement4:AMPTime:LCHeck7:UPPer:LIMit <Value>    // Define upper limit
MEASurement4:AMPTime:LCHeck7:VALid ILIMit           // Define valid range for limits
MEASurement4:LCHeck LIMit'                          // Enable limit check
```

26.3.3 Mask testing

- Creating a user mask.....1333

26.3.3.1 Creating a user mask

Creates new user mask "MyMask" with one inner segment, and turns on the mask test.

Command description in: Section 26.14, "Mask testing", on page 1707.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
MTEST:ADD 'MyMask'
MTEST:SEGM:ADD 'MyMask'
MTEST:SEGM:POIN:ADD 'MyMask', 0
MTEST:SEGM:POIN:X 'MyMask', 0, 0, -20e-9
MTEST:SEGM:POIN:Y 'MyMask', 0, 0, -0.1
MTEST:SEGM:POIN:ADD 'MyMask', 0
MTEST:SEGM:POIN:X 'MyMask', 0, 1, -20e-9
MTEST:SEGM:POIN:Y 'MyMask', 0, 1, 0.1
MTEST:SEGM:POIN:ADD 'MyMask', 0
```

```
MTEST:SEGM:POIN:X 'MyMask', 0, 2, 20e-9
MTEST:SEGM:POIN:Y 'MyMask', 0, 2, 0.1
MTEST:SEGM:POIN:ADD 'MyMask', 0
MTEST:SEGM:POIN:X 'MyMask', 0, 3, 20e-9
MTEST:SEGM:POIN:Y 'MyMask', 0, 3, -0.1
MTEST:SEGM:REG 'MyMask', 0, INNER
MTEST:STAT 'MyMask', ON
*OPC?
```

26.3.4 Search

- Searching for a pulse of a specified width.....1334

26.3.4.1 Searching for a pulse of a specified width

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

Search for positive pulses with pulse width 12 ± 10 µs (2 µs to 22 µs).

Command description in: Section 26.15, "Search", on page 1732.

The usage of asynchronous commands is described in www.rohde-schwarz.com/rc-via-scpi, chapter "Command Sequence and Synchronization".

```
SEAR:ADD 'MySearch'                  // Create a new search
SEAR:TRIG:WIDT:STAT 'MySearch',1     // Configure search type
SEAR:SOUR 'MySearch',M1              // Configure search source - here Math1
SEAR:TRIG:WIDT:RANG 'MySearch',WITH  // Configure search parameters
SEAR:TRIG:WIDT:WIDT 'MySearch',5e-4  // Configure search parameters
SEAR:TRIG:WIDT:DELT 'MySearch',5e-6  // Configure search parameters
SEAR:RES:LIM 'MySearch',1            // Set number of result lines in table to 1
*OPC?
SEAR:ALL 'MySearch';                // Initiate search for all events, asynchr. command
```

26.3.5 Data management

- Saving a screenshot to file.....1334
- Exporting waveform data to file.....1335
- Exporting measurement results to file.....1341

26.3.5.1 Saving a screenshot to file

Saves three display images in png format to the files `Print.png`, `Print_001.png`, and `Print_002.png` in the directory `C:\Temp`. To get a correct screenshot, turn on the display first.

Command description in: Section 26.16.8, "Screenshots", on page 1796.

In the following example *OPC prevents overlapping execution of asynchronous commands.

```
SYST:DISP:UPD ON
HCOP:DEST 'MMEM'
HCOP:DEV:LANG PNG
*OPC?
MMEM:NAME 'C:\Temp\Print.png'
HCOP:IMMediate; *OPC?
HCOP:IMM:NEXT; *OPC?
HCOP:IMM:NEXT; *OPC?
```

26.3.5.2 Exporting waveform data to file

Command description in:

- Section 26.16.4, "Waveform data: export to file", on page 1783
- Section 26.16.1, "Instrument settings", on page 1774
- Section 26.10.5, "History", on page 1576

In the following example *OPC prevents overlapping execution of asynchronous commands.

- Exporting a single waveform to an XML file....1335
- Exporting raw data of a single waveform to a BIN file....1336
- Exporting raw data of a measurement gate to a BIN file....1336
- Exporting interleaved x/y data of a single waveform to a CSV file....1337
- Exporting interleaved x/y data of a zoom to CSV file....1337
- Exporting multiple running acquisitions of a single waveform to an XML file....1338
- Exporting a single acquisition of the history to a BIN file....1338
- Exporting multiple acquisitions of the history to an XML file....1339
- Exporting and reconstructing multiple raw acquisitions of the history file....1339

Exporting a single waveform to an XML file

Saves a single analog waveform completely to an XML file. Data logging is off.

The usage of asynchronous commands is described in www.rohde-schwarz.com/rc-via-scpi, chapter "Command Sequence and Synchronization".

```
STOP;*OPC?
EXPort:WAVeform:FASTexport ON
CHANnel1:WAVeform1:STATe 1
*OPC?
RUNSingle;*OPC?
EXPort:WAVeform:SOURce C1W1
EXPort:WAVeform:SCOPe WFM
EXPort:WAVeform:NAME 'C:\Data\DataExportWfm_analog.xml'
EXPort:WAVeform:RAW OFF
EXPort:WAVeform:INCXvalues OFF
EXPort:WAVeform:DLOGging OFF
MMEM:DEL 'C:\Data\DataExportWfm_analog.*'
```

```
EXPort:WAVeform:SAVE
*OPC?
MMEM:DATA? 'C:\Data\DataExportWfm_analog.xml'
MMEM:DATA? 'C:\Data\DataExportWfm_analog.wfm.xml'
```

Exporting raw data of a single waveform to a BIN file

Saves the data of a single analog waveform in integer 8-bit format (raw data) to a BIN file. Data logging is off.

Data conversion is described in "Raw (ADC direct)" on page 508.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
STOP;*OPC?
EXPort:WAVeform:FASTexport ON
CHANnel1:WAVeform1:STATe 1
RUNSingle; *OPC?
EXPort:WAVeform:SOURce C1W1
EXPort:WAVeform:SCOPe WFM
EXPort:WAVeform:NAME 'C:\Data\DataExportWfm_analog.bin'
EXPort:WAVeform:RAW ON
EXPort:WAVeform:INCXvalues OFF
EXPort:WAVeform:DLOGging OFF
MMEM:DEL 'C:\Data\DataExportWfm_analog.*'
EXPort:WAVeform:SAVE
*OPC?
MMEM:DATA? 'C:\Data\DataExportWfm_analog.bin'
MMEM:DATA? 'C:\Data\DataExportWfm_analog.wfm.bin'
```

Exporting raw data of a measurement gate to a BIN file

Saves the data of a measurement gate in integer 8-bit format (raw data) to a BIN file. Data logging is off.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
STOP;*OPC?
EXPort:WAVeform:FASTexport ON
CHANnel1:WAVeform1:STATe 1
MEASurement2:CATegory AMPT
MEASurement2:MAIN MEAN
MEASurement2:ENABle 1
MEASurement2:SOURce C1W1
MEASurement2:GATE:MODE ABS
MEASurement2:GATE:ABS:STARt -0.00012
MEASurement2:GATE:ABS:STOP -5e-06
MEASurement2:GATE:STATe On
EXPort:WAVeform:SOURce C1W1
EXPort:WAVeform:SCOPe GATE
EXPort:WAVeform:MEAS Meas2
```

```
*OPC?
RUNSingle;*OPC?
EXPort:WAVeform:NAME 'C:\Data\DataExportWfm_analog.bin'
EXPort:WAVeform:RAW ON
EXPort:WAVeform:INCXvalues OFF
EXPort:WAVeform:DLOGging OFF
MMEM:DEL 'C:\Data\DataExportWfm_analog.*'
EXPort:WAVeform:SAVE
*OPC?
MMEM:DATA? 'C:\Data\DataExportWfm_analog.bin'
MMEM:DATA? 'C:\Data\DataExportWfm_analog.wfm.bin'
```

Exporting interleaved x/y data of a single waveform to a CSV file

Saves the x- and y-values of a single analog waveform to a CSV file. Data logging is off.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
STOP;*OPC?
EXPort:WAVeform:FASTexport ON
CHANnel1:WAVeform1:STATe 1
*OPC?
RUNSingle;*OPC?
EXPort:WAVeform:SOURce C1W1
EXPort:WAVeform:SCOPe WFM
EXPort:WAVeform:NAME 'C:\Data\DataExportWfm_analog.csv'
EXPort:WAVeform:RAW OFF
EXPort:WAVeform:INCXvalues ON
EXPort:WAVeform:DLOGging OFF
MMEM:DEL 'C:\Data\DataExportWfm_analog.*'
EXPort:WAVeform:SAVE
*OPC?
MMEM:DATA? 'C:\Data\DataExportWfm_analog.csv'
MMEM:DATA? 'C:\Data\DataExportWfm_analog.wfm.csv'
```

Exporting interleaved x/y data of a zoom to CSV file

Saves the x- and y-values that are displayed in a zoom diagram to a CSV file. Data logging is off.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
STOP;*OPC?
EXPort:WAVeform:FASTexport ON
CHANnel1:WAVeform1:STATe 1
LAYout:ZOOM:ADD 'Diagram1',HORIZONTAL,OFF,-0.00012,-5e-06,0.308,-0.092,'ExportAreaZoom'
*OPC?
RUNSingle;*OPC?
EXPort:WAVeform:SOURce C1W1
```

```
EXPort:WAVeform:SCOPe ZOOM
EXPort:WAVeform:ZOOM 'Diagram1', 'ExportAreaZoom'
EXPort:WAVeform:NAME 'C:\Data\DataExportWfm_analog.csv'
EXPort:WAVeform:RAW OFF
EXPort:WAVeform:INCXvalues ON
EXPort:WAVeform:DLOGging OFF
MMEM:DEL 'C:\Data\DataExportWfm_analog.*'
EXPort:WAVeform:SAVE
*OPC?
MMEM:DATA? 'C:\Data\DataExportWfm_analog.csv'
MMEM:DATA? 'C:\Data\DataExportWfm_analog.wfm.csv'
```

Exporting multiple running acquisitions of a single waveform to an XML file

Saves the data of 5 subsequent acquisitions of a single analog waveform to an XML file. Data logging is on.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
STOP;*OPC?
EXPort:WAVeform:FASTexport ON
CHANnel1:WAVeform1:STATe 1
EXPort:WAVeform:SOURce C1W1
EXPort:WAVeform:SCOPe WFM
EXPort:WAVeform:NAME 'C:\Data\DataExportWfm_analog.xml'
EXPort:WAVeform:RAW OFF
EXPort:WAVeform:INCXvalues OFF
*OPC?
ACQuire:COUNt 5
EXPort:WAVeform:DLOGging ON
MMEM:DEL 'C:\Data\DataExportWfm_analog.*'
RUNSingle;*OPC?
MMEM:DATA? 'C:\Data\DataExportWfm_analog.xml'
MMEM:DATA? 'C:\Data\DataExportWfm_analog.wfm.xml'
```

Exporting a single acquisition of the history to a BIN file

Saves the oldest acquisition of the history to a BIN file. Data logging is off.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
STOP;*OPC?
EXPort:WAVeform:FASTexport ON
CHANnel1:WAVeform1:STATe 1
EXPort:WAVeform:SOURce C1W1
EXPort:WAVeform:SCOPe WFM
EXPort:WAVeform:NAME 'C:\Data\DataExportWfm_analog.bin'
EXPort:WAVeform:RAW OFF
EXPort:WAVeform:INCXvalues OFF
EXPort:WAVeform:DLOGging OFF
*OPC?
```

```
MMEM:DEL 'C:\Data\DataExportWfm_analog.*'
ACQuire:COUNt 5             //Acquire 5 waveforms
RUNSingle;*OPC?
CHANnel1:WAV1:HISTory:STATe ON
CHANnel1:WAV1:HISTory:CURRent -4;*OPC?  //Oldest waveform of 5 has index -4
EXPort:WAVeform:SAVE
*OPC?
MMEM:DATA? 'C:\Data\DataExportWfm_analog.bin'
MMEM:DATA? 'C:\Data\DataExportWfm_analog.wfm.bin'
```

Exporting multiple acquisitions of the history to an XML file

Saves the data of 5 subsequent acquisitions of the history to an XML file. Data logging is on.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
STOP;*OPC?
EXPort:WAVeform:FASTexport ON
CHANnel1:WAVeform1:STATe 1
EXPort:WAVeform:SOURce C1W1
EXPort:WAVeform:SCOPe WFM
EXPort:WAVeform:NAME 'C:\Data\DataExportWfm_analog.xml'
EXPort:WAVeform:RAW OFF
EXPort:WAVeform:INCXvalues OFF
EXPort:WAVeform:DLOGging ON
*OPC?
MMEM:DEL 'C:\Data\DataExportWfm_analog.*'
ACQuire:COUNt 5               //Acquire 5 waveforms
RUNSingle;*OPC?
CHANnel1:WAV1:HISTory:STATe ON
CHANnel1:WAV1:HISTory:STARt -4
CHANnel1:WAV1:HISTory:STOP 0
CHANnel1:WAV1:HISTory:REPLay OFF
CHANnel1:WAV1:HISTory:PLAY
*OPC?
MMEM:DATA? 'C:\Data\DataExportWfm_analog.xml'
MMEM:DATA? 'C:\Data\DataExportWfm_analog.wfm.xml'
```

Exporting and reconstructing multiple raw acquisitions of the history file

This example captures and exports 100 waveforms acquired in fast segmentation mode (minimize blind time). The data is transferred in blocks using SCPI commands.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
// --- Set data format to signed integers, 1 byte
FORMat:DATA INT,8

// --- Create history data (assuming on channel 1) ---
CHANnel1:WAVeform1:STATe 1           //turn on channel 1
```

```
ACQuire:COUNt 100                    //acquire 100 waveforms
ACQuire:SEGMented:STATe ON; *OPC?
//turn on fast segmentation, acquisition is started and data is stored in the memory


// --- Set Export variables and export data ---
EXPort:WAVeform:SOURce C1W1          //specify source for data export
EXPort:WAVeform:SCOPe WFM            //specify range: complete acq. time
MMEM:DEL "C:\Users\Public\Documents\Rohde-Schwarz\RTx\Temp\DataExportWfm_analog.*"
        //delete data from previous runs of this script
EXPort:WAVeform:NAME "C:\Users\Public\Documents\Rohde-Schwarz\RTx\Temp\DataExpWfm.bin"
        //store data in this path and filename
EXPort:WAVeform:RAW ON
//export as raw ADC integer values (saves memory) --> data needs to be converted later
EXPort:WAVeform:INCXvalues OFF
//disable time values in data file. Time can be constructed from the header file
CHANnel1:WAV1:HISTory:STATe ON       //switch to history view
EXPort:WAVeform:DLOGging ON          //enable data logging & history
EXPort:WAVeform:TIMestamps ON        //enable relative time stamp for each acq.
CHANnel1:WAV1:HISTory:STARt -99      //oldest waveform of n acq. has index =(-1)*(n-1)
CHANnel1:WAV1:HISTory:STOP 0         //newest waveforms has index 0
CHANnel1:WAV1:HISTory:REPLay OFF
CHANnel1:WAV1:HISTory:PLAY; *OPC?    //exports waveforms to defined file location.
//2 files are created: header file *.bin and waveform data file *.Wfm.bin


// --- Put files into output buffer of scope and collect ---
// The following code lines are mostly Pseudo Code.
//Sorting out the binary waveform data is more complex and require additional coding
binaryFormat = '1 byte'
//Pseudo Code, tell your language how to interpret the binary data,
//e.g. 'int8' for MATLAB
MMEM:DATA? "C:\Users\Public\Documents\Rohde-Schwarz\RTx\Temp\DataExpWfm.bin"
//Put header file into output buffer
header = readSCPIBinary(visaInstrument, binaryFormat);
//Pseudo Code, use appropriate command from your programming language,
//e.g. binblockread in MATLAB
MMEM:DATA? "C:\Users\Public\Documents\Rohde-Schwarz\RTx\Temp\DataExpWfm.Wfm.bin"
//Put data file into output buffer
//(your input buffer of the VISA resource might need to be increased)
wfmRaw = readSCPIBinary(visaInstrument, binaryFormat)
//Pseudo Code, use appropriate command from your programming language,
//e.g. binblockread in MATLAB.
//Note: Sort different acquisitions into an array separately after file transfer.


// --- Convert raw ADC values into voltage floating point values ---
// header is assumed to be a struct and the members are accessed via "." syntax.
vertOffsetByPosition = header.VerticalScale * header.VerticalPosition
conversionFactor = (1/header.NofQuantisationLevels) *
```

```
  header.VerticalScale * header.VerticalDivisionCount
for(i = 0; i<100; i++){
    wfmVolt(i) = wfmRaw(i) * conversionFactor +
      header.VerticalOffset - vertOffsetByPosition
}
// Note: Depending on settings, the waveform can contain more samples than the
//record length. Remove leading and trailing samples from the waveform.
```

26.3.5.3 Exporting measurement results to file

See:

- "Exporting histogram data to file" on page 1332
- "Transferring histogram data" on page 1332
- "Exporting long-term measurement data to file" on page 1332
- "Transferring long-term measurement data" on page 1333

26.3.6 Deembedding

26.3.6.1 Adding cables to the measurement setup

The example adds a cable to each channel and assigns an S-parameter file for each cable. Commands are explained in Section 26.25, "Deembedding (option R&S RTP-K121/-K122)", on page 2769.

```
// Preset de-embedding, because *RST does not affect de-embedding
:DEEMbedding1:PRESet    // Ch1
:DEEMbedding2:PRESet    // Ch2
:DEEMbedding3:PRESet    // Ch3
:DEEMbedding4:PRESet    // Ch4

// Add cables to each channel, cable is added next to DUT at index 2 (DUT = index 1)
:DEEMbedding1:ADD 2,cabl    // Ch1
:DEEMbedding2:ADD 2,cabl    // Ch2
:DEEMbedding3:ADD 2,cabl    // Ch3
:DEEMbedding4:ADD 2,cabl    // Ch4

// Assign corresponding S2P file to channel
:DEEMbedding1:COMPonent2:SPONE 'C:\Rtx\Deembedding\RT-ZA17-1806671-0005-A.s2p'
:DEEMbedding2:COMPonent2:SPONE 'C:\Rtx\Deembedding\RT-ZA17-1806671-0005-B.s2p'
:DEEMbedding3:COMPonent2:SPONE 'C:\Rtx\Deembedding\RT-ZA17-1806671-0006-A.s2p'
:DEEMbedding4:COMPonent2:SPONE 'C:\Rtx\Deembedding\RT-ZA17-1806671-0006-B.s2p'
```

26.3.7 Protocol analysis

26.3.7.1 RFFE (option R&S RTP-K40)

Configuring RFFE bus

Example 1: 1.8 V bus

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

```
//Configure source and thresholds for 1.8 V bus
STOP;*OPC?
BUS1:TYPE RFFE
BUS1:LABel "RFFE Test 2"
BUS1:RFFE:CLOCk:SOUR C2W1
BUS1:RFFE:DATA:SOUR C1W1
BUS:RFFE:PRESet V18

//Load a label list and switch on
BUS1:NEWList 'C:\Protocols\RFFE.csv'
BUS1:SYMBols ON

//Initiate single sweep
CHANnel1:STATe ON
CHANnel2:STATe ON
BUS1 ON
RUNSingle;*OPC?
```

Example 2: User-defined thresholds with threshold coupling

```
//Configure source and user-defined thresholds
STOP;*OPC?
BUS1:TYPE RFFE
BUS1:LABel "RFFE Test 1"
BUS1:RFFE:CLOCk:SOUR C2W1
BUS1:RFFE:DATA:SOUR C1W1

BUS1:RFFE:CLOCk:THReshold:HYSTeresis 0.2
BUS1:RFFE:CLOCk:THReshold:HIGH 0.72
BUS1:RFFE:CLOCk:THReshold:LOW  0.48
```

Triggering on RFFE bus

Trigger on sequence start of sequences that have the slave address 0010, 0011, or 0100.

```
//Set trigger source to serial bus
TRIGger1:SOURce SBUS
TRIGger:MODE NORMal
```

```
//Trigger on sequence start of all sequences with slave address range
TRIGger1:RFFE:TYPE STARt
TRIG1:RFFE:SADD:CONDition INR
TRIG1:RFFE:SADD:MIN #H2  //SAD = 0010
TRIG1:RFFE:SADD:MAX #H4  //SAD = 0100
```

Searching RFFE data

Search for sequence ends of sequences if the last bit of slave address is 1.

```
STOP;*OPC?
SEARch:ADD 'RFFESearch1'
SEARch:SOURce 'RFFESearch1',SBUS1
SEARch:TRIGger:RFFE:TYPE 'RFFESearch1',STOP
SEARch:TRIGger:RFFE:SADD:COND 'RFFESearch1', EQU
SEARch:TRIGger:RFFE:SADD:MIN 'RFFESearch1', 'XXX1'
RUNSingle;*OPC?              //asynchronous command
SEARch:ALL 'RFFESearch1';*OPC?
SEARch:RESult:RFFE:FCOunt? 'RFFESearchCh1'

SEARch:RESult:RFFE:SEQuence1:STATe?  'RFFESearchCh1'
<--OK    //First sequence is valid
SEARch:RESult:RFFE:SEQuence1:TYPE?  'RFFESearchCh1'
<--ERRL  //Extended Register Read Long sequence
```

26.4 Frequently used parameters and suffixes

This chapter describes in general those parameters and suffixes that are used in several subsystems.

26.4.1 Waveform suffix

The numeric waveform suffix is used in some commands, for example, to indicate the source waveform number from which the reference level is taken, and to assign color tables to waveforms.

Depending on the command, not all suffix values are supported. For example, in REFLevel commands, only suffixes 2 to 21 are allowed. The range of supported suffix numbers is indicated in the description of the individual commands.

NOTICE

Suffix 1

Suffix 1 means that no waveform is assigned. The first waveform C1W1 corresponds to suffix number 2.

Waveform number	Description
1	None
2	C1W1 (channel 1, waveform 1)
3	C1W2 (channel 1, waveform 2)
4	C1W3 (channel 1, waveform 3)
5	C2W1 (channel 2, waveform 1)
6	C2W2 (channel 2, waveform 2)
7	C2W3 (channel 2, waveform 3)
8	C3W1 (channel 3, waveform 1)
9	C3W2 (channel 3, waveform 2)
10	C3W3 (channel 3, waveform 3)
11	C4W1 (channel 4, waveform 1)
12	C4W2 (channel 4, waveform 2)
13	C4W3 (channel 4, waveform 3)
14 to 17	Math waveforms: M1, M2, M3, M4 M5 to M8: suffixes 119 to 122
18 to 21	Reference waveforms: R1, R2, R3, R4
22 to 25	XY-waveforms: XY1, XY2, XY3, XY4
26 to 33	Measurement results: MRESult1, MRESult2, MRESult3, MRESult4, MRESult5, MRESult6, MRESult7, MRESult8 MRESult1 are the results of measurement group 1 and so on.
34 to 35	not used
36 to 39	Serial buses: SBUS1, SBUS2, SBUS3, SBUS4
40 to 55	Digital channels: D0 to D15 (option R&S RTP-B1)
56 to 59	Digital buses: MSO1, MSO2, MSO3, MSO4 (option R&S RTP-B1)
60	not used
61 to 68	Track waveforms: TRK1, TRK2, TRK3, TRK4, TRK5, TRK6, TRK7, TRK8
69 to 71	not used
72 to 75	Spectrograms: SG1, SG2, SG3, SG4. Available for option R&S RTP-K37. SG5 to SG8: suffixes 119 to 122 . Available for option R&S RTP-K133.
76 to 83	Timeline spectrums: SG1TL1, SG1TL2, SG2TL1, SG2TL2, SG3TL1, SG3TL2, SG4TL1, SG4TL2. Available for option R&S RTP-K37 TL1 is timeline 1, TL2 is timeline 2 SG5TL1 to SG8TL2: suffixes 123 to 130. Available for option R&S RTP-K133.
84 to 87	Eye diagrams: EYE1, EYE2, EYE3, EYE4 Available for eye diagram analysis with option R&S RTP-K91

Waveform number	Description
88 to 91	Voltage input channels of multi-channel probe R&S RT-ZVC (probe 1) R&S RT-ZVC04: Z1V1 | Z1V2 | Z1V3 | Z1V4 R&S RT-ZVC02: Z1V1 | Z1V2. Suffixes 90 to 91 are not available.
92 to 95	Current input channels of multi-channel probe R&S RT-ZVC (probe 1) R&S RT-ZVC04: Z1I1 | Z1I2 | Z1I3 | Z1I4 R&S RT-ZVC02: Z1I1 | Z1I2. Suffixes 94 to 95 are not available.
96 to 99	Voltage input channels of multi-channel probe R&S RT-ZVC (probe 2) R&S RT-ZVC04: Z2V1 | Z2V2 | Z2V3 | Z2V4 R&S RT-ZVC02: Z2V1 | Z2V2. Suffixes 98 to 99 are not available.
100 to 103	Current input channels of multi-channel probe R&S RT-ZVC (probe 2) R&S RT-ZVC04: Z2I1 | Z2I2 | Z2I3 | Z2I4 R&S RT-ZVC02: Z2I1 | Z2I2. Suffixes 102 to 103 are not available.
104 to 107	not used
108 to 111	Resulting waveforms of differential deembedding: DIFF1 | DIFF2 | COMMON1 | COMMON2
112 to 114	Resulting waveforms of TDR/TDT analysis (option R&S RTP-K130): TDRZ | TDRH | TDRR
115 to 118	Math waveforms: M5, M6, M7, M8 M1 to M4: suffixes 14 to 17
119 to 122	Spectrograms: SG5, SG6, SG7, SG8. Available for option R&S RTP-K133. SG1 to SG4: suffixes 72 to 75. Available for option R&S RTP-K37.
123 to 130	Timeline spectrums: SG5TL1, SG5TL2, SG6TL1, SG6TL2, SG7TL1, SG7TL2, SG8TL1, SG8TL2. Available for option R&S RTP-K133. TL1 is timeline 1, TL2 is timeline 2 SG1TL1 to SG4TL2: suffixes 76 to 83. Available for option R&S RTP-K37.
131 to 140	HP1 | HP2 | HP3 | HP4 | HP5 | HP6 | HP7 | HP8 | HP9 | HP10 Available for option R&S RTP-K133.
141	not used
142 to 144	BATHtub1 | BMEas1 | SRESponse1 Bathtub diagram, bathtub measurement, and step response of 1st advanced jitter measurement, option R&S RTP-K133/K134.
145 to 151	SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJHist1 | RJOHist1 Histograms of 1st advanced jitter measurement, option R&S RTP-K133/K134. SR: symbol rate, SD: symbol duration, TJ: total jitter, DDJ: data-dependent jitter, PJ: periodic jitter, RJO: random jitter.
152, 154- 158	SRTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJOTRack1 Tracks of 1st advanced jitter measurement, option R&S RTP-K133/K134.
153	not used

Waveform number	Description
159 to 163	TJSPectrum1 | DDJSpectrum1 | PJOSPectrum1 | RJOSPectrum1 | SEYE1 Spectrograms and synthetic eye diagram of 1st advanced jitter measurement, option R&S RTP-K133/K134.
164	not used
165 to 167	BATHtub2 | BMEas2 | SRESponse2 Bathtub diagram, bathtub measurement, and step response of 2nd advanced jitter measurement, option R&S RTP-K133/K134.
168 to 174	SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJOHist2 | RJOHist2 Histograms of 2nd advanced jitter measurement, option R&S RTP-K133/K134.
175-177, 179-181	SRTRack2 | SDTRack2 | TJTRack2 | DDJTrack2 | PJOTrack2 | RJOTrack2 Tracks of 1st advanced jitter measurement, option R&S RTP-K133/K134.
178	not used
182 to 186	TJSPectrum2 | DDJSpectrum2 | PJOSPectrum2 | RJOSPectrum2 | SEYE2 Spectrograms and synthetic eye diagram of 2nd advanced jitter measurement, option R&S RTP-K133/K134.
187 to 188	NBAThtub1 | NBMeas1 Noise bathtub diagram and noise bathtub measurement of 1st noise measurement, option R&S RTP-K134.
189 to 193	TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | Histograms of 1st noise measurement, option R&S RTP-K134. TN: total noise, DN: deterministic noise, DDN: data-dependent noise, PJ: periodic noise, RNO: random noise.
194, 196 to 198	TNTRack1 | DDNTrack1 | PNTRack1 | RNOTRack1 Tracks of 1st noise measurement, option R&S RTP-K134.
195	not used
199 to 202	TNSPectrum1 | DDNSpectrum1 | PNSPectrum1 | RNOSPectrum1 Spectrograms of 1st noise measurement, option R&S RTP-K134.
203 to 204	NBAThtub2 | NBMeas2 Noise bathtub diagram and noise bathtub measurement of 2nd noise measurement, option R&S RTP-K134.
205 to 209	TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 Histograms of 2nd noise measurement, option R&S RTP-K134.
210, 212 to 214	TNTRack2 | DDNTrack2 | PNTRack2 | RNOTRack2 Tracks of 2nd noise measurement, option R&S RTP-K134.
211	not used
215 to 218	TNSPectrum2 | DDNSpectrum2 | PNSPectrum2 | RNOSpectrum2 Spectrograms eye diagram of 2nd noise measurement, option R&S RTP-K134.
219 to 221	PJDHist1 | BUJHist1 | RJHist1 Histograms of 1st jitter measurement, option R&S RTP-K134. BUJ: (Other) bounded uncorrelated jitter.

Waveform number	Description
222	PJDTrack1 Tracks of 1st data dependent and periodic jitter noise measurement, option R&S RTP-K134.
223	PJDSpectrum1 Spectrograms of 1st data dependent and periodic jitter noise measurement, option R&S RTP-K134.
224 to 226	PJDHist2 | BUJHist2 | RJHist2 Histograms of 2nd noise measurement, option R&S RTP-K134.
227	PJDTrack2 Tracks of 2nd data dependent and periodic jitter noise measurement, option R&S RTP-K134.
228	PJDSpectrum2 Spectrograms of 2nd data dependent and periodic jitter measurement, option R&S RTP-K134.
229 to 231, 234 to 236	PNDHist1 | BUNHist1 | RNHist1 | PNDHist2 | BUNHist2 | RNHist2 Histograms of noise measurement, option R&S RTP-K134. BUN: (Other) bounded uncorrelated noise.
232	PNDTrack1 Tracks of 1st data dependent and periodic noise measurement, option R&S RTP-K134.
233	PNDSpectrum1 Spectrograms of 1st data dependent and periodic noise measurement, option R&S RTP-K134.
237	PNDTrack2 Tracks of 2nd data dependent and periodic noise measurement, option R&S RTP-K134.
238	PNDSpectrum2 Spectrograms of 2nd data dependent and periodic noise measurement, option R&S RTP-K134.
243-250	JHI1_1, JHI1_2,JHI1_3,JHI1_4,JHI1_5,JHI1_6,JHI1_7,JHI1_8, Jitter histograms for PAM-N signals, option R&S RTP-K133 and option R&S RTP-K135
250-258	JTR1_1, JTR1_2, JTR1_3, JTR1_4, JTR1_5, JTR1_6, JTR1_7, JTR1_8 Jitter tracks for PAM-N signals, option R&S RTP-K133 and option R&S RTP-K135
259-266	NHI1_1, NHI1_2,NHI1_3,NHI1_4,NHI1_5, NHI1_6,NHI1_7,NHI1_8, Noise histograms for PAM-N signals, option R&S RTP-K134 and option R&S RTP-K135
267-274	NTR1_1, NTR1_2, NTR1_3, NTR1_4, NTR1_5, NTR1_6, NTR1_7, NTR1_8 Noise tracks for PAM-N signals, option R&S RTP-K134 and option R&S RTP-K135
275-282	JHI2_1, JHI2_2, JHI2_3, JHI2_4, JHI2_5, JHI2_6, JHI2_7, JHI2_8 Jitter histograms for PAM-N signals, option R&S RTP-K133 and option R&S RTP-K135

Waveform number	Description
283-290	JTR2_1, JTR2_2, JTR2_3, JTR2_4, JTR2_5, JTR2_6, JTR2_7, JTR2_8 Jitter tracks for PAM-N signals, option R&S RTP-K133 and option R&S RTP-K135
291-298	NHI2_1, NHI2_2, NHI2_3, NHI2_4, NHI2_5, NHI2_6, NHI2_7, NHI2_8, Noise histograms for PAM-N signals, option R&S RTP-K134 and option R&S RTP-K135
299-306	NTR2_1, NTR2_2, NTR2_3, NTR2_4, NTR2_5, NTR2_6, NTR2_7, NTR2_8 Noise tracks for PAM-N signals, option R&S RTP-K134 and option R&S RTP-K135
307-308	CDRSW3, CDRSW4
309-312	LPDFE1, LPDFE2, LPDFE3, LPDFE4 Embedding and equalization signal lanes including TxFFE, Embedding, CTLE and FFE(option R&S RTP-K126)
313-316	LANE1, LANE2, LANE3, LANE4 Embedding and equalization signal lanes including TxFFE, Embedding, CTLE, FFE and DFE (option R&S RTP-K126)
317	RAS1 Video raster image (option R&S RTP-K129)

26.4.2 Waveform parameter

Many commands requires one of the waveforms to be specified as source. The following table lists all waveforms. For each command using a waveform parameter, the available waveforms are specified in the command description.

Waveform	Description
C1W1 | C1W2 | C1W3	Channel 1 waveforms
C2W1 | C2W2 | C2W3	Channel 2 waveforms
C3W1 | C3W2 | C3W3	Channel 3 waveforms
C4W1 | C4W2 | C4W3	Channel 4 waveforms
M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8	Math waveforms
R1 | R2 | R3 | R4	Reference waveforms
XY1 | XY2 | XY3 | XY4	XY-waveforms
MRESult1 | MRESult2 | MRESult3 | MRESult4 | MRESult5 | MRESult6 | MRESult7 | MRESult8	Measurement results
SBUS1 | SBUS2 | SBUS3 | SBUS4	Serial buses
D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15	Digital channels (option R&S RTP-B1)
MSOB1 | MSOB2 | MSOB3 | MSOB4	Digital buses (option R&S RTP-B1
TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8	Track waveforms

Waveform	Description
CDRSW1 = CDRSw1, CDRSW2 = CDRSw2, CDRSW3 = CDRSw3, CDRSW4 = CDRSw4	Generated clock signals
SG1 | SG2 | SG3 | SG4	Spectrograms (option R&S RTP-K37)
SG5 | SG6 | SG7 | SG8	Advanced jitter analysis (option R&S RTP-K133)
SG1TL1, SG1TL2, SG2TL1, SG2TL2, SG3TL1, SG3TL2, SG4TL1, SG4TL2	Spectrograms (option R&S RTP-K37)
SG5TL1, SG5TL2, SG6TL1, SG6TL2, SG7TL1, SG7TL2, SG8TL1, SG8TL2	Advanced jitter analysis (option R&S RTP-K133)
EYE1 | EYE2 | EYE3 | EYE4	Available for eye diagram analysis with option R&S RTP-K91
Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 Z1V1 | Z1V2 | Z1I1 | Z1I2 | Z2V1 | Z2V2 | Z2I1 | Z2I2	Input channels of multi-channel probe R&S RT-ZVC04 Input channels of multi-channel probe R&S RT-ZVC02
DIFF1 | DIFF2 | COMMON1 | COMMON2	Resulting waveforms of differential deembedding
TDRZ | TDRH | TDRR	Resulting waveforms of TDR/TDT analysis (option R&S RTP-K130)
SEYE1 | SEYE2	Available for synthetic eye diagram analysis with option R&S RTP-
TJSPectrum1 | TJSPectrum2 | DDJSpectrum1 | DDJSpectrum2 | PJSPectrum1 | PJSPectrum2 | RJOSPectrum | RJOSPectrum1	Spectrograms of the advanced jitter analysis components (option R&S RTP-K133/K134) TJ: total jitter DDJ: data-dependent jitter PJ: periodic jitter RJO: random jitter
BATHtub1 | BATHtub2	Bathtub diagrams of the advanced jitter analysis components (option R&S RTP-K133/K134)
BMEas1 | BMEas2	Bathtub measurements of the advanced jitter analysis components (option R&S RTP-K133/K134)
SRTRack1 | SRTRack2 | SDTRack1 | SDTRack2 | TJTRack1 | TJTRack2 | DJTRack1 | DJTRack2 | DDJTrack1 | DDJTrack2| PJOTRack1 | PJOTRack2 | RJOTRack1| RJOTRack2	Tracks of the advanced jitter analysis components (option R&S RTP-K133/K134) SR: Symbol rate SD: Symbol duration
SRESponse1 | SRESponse2	Step response of the advanced jitter analysis (option R&S RTP-K133/K134)
TNSPectrum1 | TNSPectrum2 | DDNSpectrum1 | DDNSpectrum2 | PNSPectrum1 | PNSPectrum2 | RNOSpectrum1 | RNOSpectrum2	Spectrograms of the advanced jitter analysis components (option R&S RTP-K134) TN: total noise DDN: data-dependent noise PN: periodic noise RNO: random noise

Waveform	Description
NBAThtub1 | NBAThtub2	Bathtub diagrams of the noise analysis components (option R&S RTP-K134)
NBMeas1 | NBMeas2	Bathtub measurements of the noise analysis components (option R&S RTP-K134)
TNTRack1 | TNTRack2 | DNTRack1 | | DNTRack2 | DDNTrack1 | DDNTrack2 | PNTRack1 | PNTRack2 | RNOTRack1 | RNOTRack2	Tracks of the noise analysis components (option R&S RTP-K134)
LPDFE1 | LPDFE2 | LPDFE3 | LPDFE4	Signal lanes pre-DFE (option R&S RTP-K126)
LANE1 | LANE2 | LANE3 | LANE4	Signal lanes (option R&S RTP-K126)

26.4.3 Slope parameter

The slope parameter is used with several trigger and search condition commands.

Slope	Description
POSitive	Rising edge, that is a positive voltage change.
NEGative	Falling edge, that is a negative voltage change
EITHer	rising as well as the falling edge.

26.4.4 Polarity parameter

The polarity parameter is used with several trigger and search condition commands.

Polarity	Description
POSitive	Positive going pulses.
NEGative	Negative going pulses.
EITHer	Both positive and negative going pulses.

26.4.5 Event parameter

The event parameter is used with commands defining an action for mask testing, limit checks and margin checks.

Event	Description
NOACtion	The action is not initiated.
SUCCess	The action is initiated if the operation finished successfully: ● Limits or margins were not exceeded during the entire measurement ● Mask test passed
VIOLation	The action is initiated if the operation finished with error: ● Limits or margins were violated during the measurement ● Mask test failed

26.4.6 Bit pattern parameter

Bit pattern parameter are required with commands triggering on address, identifier, or data pattern.

To set the pattern value, you can use either a numeric parameter as defined in the SCPI standard, or a string parameter.

Bit pattern in numeric parameter

In a numeric parameter, the values are listed byte-by-byte, with bytes separated by commas and MSB first. The default numeral format is decimal, other formats can be indicated by a format identifier (#B = binary, #H = hexadecimal, #Q = octal). Currently, no format for signed values is available.

Example: Parameter with three bytes, decimal byte values are 10, 20, 30. The examples are given for CAN, the bit pattern in other commands is defined in the same way.

- `TRIGger:CAN:DMIN 10,20,30`
- `TRIGger:CAN:DMIN #B00001010,#B00010100,#B00011110`
- `TRIGger:CAN:DMIN #H0A,#H14,#H1E`
- `TRIGger:CAN:DMIN #Q012,#Q024,#Q036`

Bit pattern in string parameter

In a string, the complete binary pattern is written without separation of bytes, for example:

```
TRIGger:CAN:DMIN '000010100001010000011110'
```

Unlike a numeric parameter, the string parameter accepts wildcards for single bits (X = don't care). Whether wildcards can be used or not depends on the remote command. Usually, address and identifier parameter require unique patterns while data parameters may contain wildcards.

Mostly the length of the bit pattern is defined, for example, by the I²C address type, the CAN identifier type, or the data length code. In theses cases, it is recommended that you enter the complete bit pattern. If you enter a shorter pattern, the instrument fills up the pattern with X bits to the right of the defined pattern.

Example: You want to trigger on an 11 bit CAN address and enter the bit pattern '11100011' (8 bits only). The instrument uses the pattern '11100011XXX' for triggering.

Query for a pattern

The pattern format for the return value of a pattern is defined by the `FORMat:BPATtern` command.

26.5 Common commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CAL?....1352
*CLS....1353
*ESE....1353
*ESR?....1353
*IDN?....1353
*IST?....1354
*OPC....1354
*OPT?....1354
*PCB....1354
*PRE....1354
*PSC....1355
*RCL....1355
*RST....1355
*SAV....1355
*SRE....1356
*STB?....1356
*TRG....1356
*TST?....1356
*WAI....1356

***CAL?**

Starts a self-alignment of the instrument, and then queries a status response. Return values ≠ 0 indicate an error.

Return values:

<State> 0: no error
1: alignment failed
2: not aligned, e.g. init
3: device needs longer warmup time before selfalignment can start
4: input signal connected during selfalignment

Usage: Query only

Manual operation: See "Start Alignment" on page 105

***CLS**

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENt` part of the `QUEStionable` and the `OPERation` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

***ESE** <Value>

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

Parameters:
<Value> Range: 0 to 255

***ESR?**

Event status read

Returns the contents of the event status register in decimal form and then sets the register to zero.

Return values:
<Contents> Range: 0 to 255

Usage: Query only

***IDN?**

Identification

Returns the instrument identification.

Return values:
<ID> "Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>"

Example: `Rohde&Schwarz,RTP,1803.7000K04/200153,5.2.1.2`
Model assignment:
RTP044B - 1803.7000K04
RTP064B - 1803.7000K06
RTP084B - 1803.7000K08
RTP134B - 1803.7000K13
RTP164B - 1803.7000K16

Usage: Query only

***IST?**

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Return values:
<ISTflag> 0 | 1

Usage: Query only

***OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query writes a "1" into the output buffer when all preceding commands have been executed, which is useful for command synchronization.

***OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description, refer to the specifications document.

Return values:
<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

Usage: Query only

***PCB** <Address>

Pass control back

Indicates the controller address to which remote control is returned after termination of the triggered action.

Setting parameters:
<Address> Range: 0 to 30

Usage: Setting only

***PRE** <Value>

Parallel poll register enable

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

Parameters:
<Value> Range: 0 to 255

***PSC** <Action>

Power on status clear

Determines whether the contents of the ENABle registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

Parameters:
<Action> 0 | 1

0
The contents of the status registers are preserved.

1
Resets the status registers.

***RCL** <Number>

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command *SAV with the associated number.

It also activates the instrument settings which are stored in a file and loaded using MMEMory:LOAD:STATe.

***RST**

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

Usage: Setting only

***SAV** <Number>

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command *RCL with the associated number.

To transfer the stored instrument settings in a file, use the command :MMEM:STOR:STAT.

***SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form. Bit 6 (MSS mask bit) is always 0.

Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the `TRIGger` subsystem.

`*TRG` corresponds to the `INITiate:IMMediate` command.

Usage: Event

***TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code.

Return values:

<ErrorCode> **integer > 0 (in decimal format)**
An error occurred.

0
No errors occurred.

Usage: Query only

Manual operation: See "Selftest" on page 107

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

Usage: Event

26.6 General remote settings

This chapter describes commands that have effect on many other remote commands in different applications of the instrument.

FORMat[:DATA] 1357
FORMat:BORDer 1358
FORMat:BPATtern 1359
SYSTem:DISPlay:UPDate 1359
SYSTem:KLOCk 1359
GPIB:ADDRess 1360
GPIB:TERMinator 1360
SYSTem:DISPlay:MESSage:STATe 1360
SYSTem:DISPlay:MESSage[:TEXT] 1360
SYSTem:LANGuage 1361

FORMat[:DATA] <Format>[,<Length>]

Selects the data type that is used for transmission of data from analog channels, math and reference waveforms, and some measurement results from the instrument to the controlling computer.

The command sets the data format for the following query commands:

- CHANnel<ch>[:WAVeform<wf>]:DATA[:VALues]?. Supported formats: ASCii | REAL,32 | INT,8 | INT,16.
- CALCulate:MATH<m>:DATA[:VALues]?. Supported formats: ASCii | REAL,32 | INT,8 | INT,16.
- REFCurve<rc>:DATA[:VALues]?. Supported formats: ASCii | REAL,32 | INT,8 | INT,16.
- TDRT:SIGNal<m>:DATA:VALues?. Supported formats: ASCii | REAL,32 | INT,8 | INT,16.
- ZVC:Z<m>:I<n>:DATA[:VALues]?
  ZVC:Z<m>:V<n>:DATA[:VALues]?. Supported formats: ASCii | REAL,32 | INT,8 | INT,16.
- EXPort:HISTogram:DATA?. Supported formats: ASCii | REAL,64 | INT,8 | INT,16.
- EXPort:MEASurement:DATA?. Supported formats: ASCii | REAL,64 | INT,8 | INT,16.
- MEASurement<mg>:TRACk:DATA[:VALues]?. Supported formats: ASCii | REAL,64 | INT,8 | INT,16.

If an unsupported format is set, the data query returns ASCII values.

Parameters:

<Format>[,<Length>] ASCii | REAL,32 | REAL,64 | INT,8 | INT,16

ASCii
Data values are returned in ASCII format as a list of comma-separated values in floating point format. The length can be omitted. It is 0, which means that the instrument selects the number of digits to be returned. The query returns both values (`ASC,0`).

REAL,32
The data is stored as binary data (Definite Length Block Data according to IEEE 488.2). Each waveform value is formatted in 32-Bit IEEE 754 Floating Point Format.
The schema of the result string is as follows:
`#41024<value1><value2>…<value n>` with:
`#4` = number of digits (= 4 in the example) of the following number
`1024` = number of following data bytes (= 1024 in the example)
`<value>` = 4-byte floating point values
For large data (≥ 1 GB), the result string starts with "#(data length)". The number inside the parentheses indicates the real data length in bytes.

REAL,64
Double precision, 64 bit floating point format.

INT,8 | INT,16
Signed integer data with length 8 bit or 16 bit. It defines that `CHANnel<m>[:WAVeform<n>]:DATA[:VALues]?` returns the raw sample data of the ADC as integers. If the format of the waveform data differs from the defined export format, the instrument converts the data to the required length.
The result string has the same schema as the REAL format.
For INT,16 you can set the byte order using the `FORMat:BORDer` command.
Data conversion is described in "Raw (ADC direct)" on page 508.
`EXPort:WAVeform:INCXvalues` must be set `OFF`.

*RST: ASCii

Example:

```
FORMat:DATA REAL,32
FORMat:DATA?
REAL,32
```

Usage: SCPI confirmed

Manual operation: See "Transfer data format" on page 1305

FORMat:BORDer <ByteOrder>

Sets the endianess.

The command is only relevant for raw data export in high definition mode (16 bit word length).

Parameters:

<ByteOrder> LSBFirst | MSBFirst

LSB first: little endian, least significant byte first
MSB first: big endian, most significant byte first

*RST: LSBFirst

Usage: Asynchronous command

Manual operation: See "Byte order" on page 1306

FORMat:BPATtern <BitPatternFormat>

Sets the number format for remote bit pattern queries on serial protocols.

Parameters:

<BitPatternFormat> DEC | HEX | OCT | BIN | ASCII | ASCii | STRG

ASCII = ASCii

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Bit pattern format" on page 1306

SYSTem:DISPlay:UPDate <Enable>

Defines whether the display is updated while the instrument is in the remote state. If the display is switched off, the normal GUI is replaced by a static image while the instrument is in the remote state. Switching off the display can speed up the measurement. This is the recommended state.

See also: Section 25.5.3.2, "Using the display during remote control", on page 1306

Parameters:

<Enable> **ON | 1:** Display is shown and updated during remote control
OFF | 0: Display shows static image during remote control

Example: `SYSTem:DISPlay:UPDate 1`
Switch on the display update.

SYSTem:KLOCk <Enable>

Locks or unlocks the local controls of the instrument. This includes the front panel keys, the keyboard, or other local interfaces. except for the "View" button on the display.

Parameters:

<Enable> **ON | 1:** Locks the local keys
OFF | 0: Keys are unlocked

Usage: SCPI confirmed

GPIB:ADDRess <Address>

Sets the GPIB address of the instrument. Changing the address has major effects on the communication to the remote computer.

Parameters:

<Address> Range: 0 to 30
Increment: 1
*RST: 20

Usage: Asynchronous command

Manual operation: See "Address" on page 1304

GPIB:TERMinator <Terminator>

Specifies the symbol that is used as a terminator in GPIB communication.

Parameters:

<Terminator> LFEoi | EOI
*RST: EOI

Usage: Asynchronous command

Manual operation: See "Terminator" on page 1305

SYSTem:DISPlay:MESSage:STATe <DispMessState>

Enables and disables the display of an additonal text in remote control.

To define the text, use `SYSTem:DISPlay:MESSage[:TEXT]`.

Parameters:

<DispMessState> OFF | ON
*RST: OFF

Usage: Asynchronous command

Firmware/software: Version 2.70

SYSTem:DISPlay:MESSage[:TEXT] <DisplayMessage>

Defines an additional text that is displayed during remote control operation.

To enable the text display, use `SYSTem:DISPlay:MESSage:STATe` on page 1360.

Parameters:

<DisplayMessage> String that contains the text.

Usage: Asynchronous command

Firmware/software: Version 2.70

SYSTem:LANGuage <Language>

Defines the remote control behavior of the instrument and sets the remote control command set.

Parameters:

<Language> String value. Available values:
'SCPI': R&S RTP remote command set is used.
"DPO7000" or 'TDS540': Compatible remote command set of Tektronix oscilloscopes DPO7000 or TDS540 is used.
If one of these emulation modes is used, you can define alternative responses to the `IDN*?` and `OPT*?` commands on the "Menu" > "Settings" > "System" > "Remote" > "SCPI Emulation" tab.

Usage: Asynchronous command

Options: R&S RTP--K301

26.7 Instrument setup

26.7.1 System

SYSTem:EXIT 1361
SYSTem:SHUTdown 1361
SYSTem:PRESet 1362
SYSTem:DATE 1362
SYSTem:TIME? 1362
SYSTem:DEVice:ID? 1362
DIAGnostic:SERVice:COMPutername 1363

SYSTem:EXIT

Starts the shutdown of the firmware.

Usage: Event
Asynchronous command

SYSTem:SHUTdown

Starts the shutdown of the instrument (firmware and operating system).

Usage: Event
Asynchronous command

SYSTem:PRESet

Resets the instrument to the factory default settings, to the initial state. Factory settings comprise all instrument settings, including display, intensity and transparency settings. After loading factory defaults, perform a self-alignment to synchronize the signal data.

Usage: Event

SYSTem:DATE <Year>, <Month>, <Day>

Sets the date of the internal calendar.

Parameters:

<Year> Year, to be entered as a four-digit number (including the century and millennium information)

<Month> Month, 1 (January) to 12 (December)

<Day> Day, 1 to the maximum number of days in the specified month
*RST: does not affect the date settings

Example: `SYSTem:DATE?`
Returned value: `2011,09,13`

Usage: SCPI confirmed

Manual operation: See "Time settings" on page 76

SYSTem:TIME? <Hour>, <Minute>, <Second>

Returns the UTC (Universal Time Coordinated) of the internal clock. To define the current local time, use the time zone setting of the operating system

Example: `SYSTem:TIME?`
Returned value: `15,09,20`. UTC is 15:09:20.

Usage: Query only
SCPI confirmed

Manual operation: See "Time settings" on page 76

SYSTem:DEVice:ID?

Returns the instrument ID - that is the part number and the serial number.

Return values:

<ID> String containing the part number and the serial number

Example: `1316.1000K24-001122-jT`

Usage: Query only

DIAGnostic:SERVice:COMPutername <ComputerName>

The query returns the computer name that is currently defined. The computer name is required when configuring a network.

The setting command changes the computer name. The change takes effect after the next reboot of the computer.

Parameters:
<ComputerName> Name string

Usage: Asynchronous command

Manual operation: See "Device name" on page 74

26.7.2 Appearance

26.7.2.1 Colors appearance

DISPlay:COLor:SIGNal<m>:COLor....1363
DISPlay:COLor:SIGNal<m>:ASSign....1363
DISPlay:COLor:SIGNal<m>:USE....1364
DISPlay:COLor:SIGNal<m>:PRESet....1364

DISPlay:COLor:SIGNal<m>:COLor <Color>

Sets the color vaue for the selected waveform.

Suffix:
<m> 1...317
Waveform number, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Color> Decimal value of the ARGB color. Use the color dialog box on the instrument to get the hex value of the color, and convert the hex value to a decimal value.
0 is fully transparent black.
4278190080 (dec) = FF000000 (hex) is opaque black.
4294967295 (dec) = FFFFFFFF (hex) is opaque white.

Range: 0 to 4294967295
Increment: 1
*RST: 4278190080

Manual operation: See "Color" on page 80

DISPlay:COLor:SIGNal<m>:ASSign <ColorTable>

Assigns the color table to the specified signal.

Suffix:
<m> 1...317
Waveform number, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<ColorTable> Color table name to be assigned to the signal.

Manual operation: See "Assigned color table" on page 80

DISPlay:COLor:SIGNal<m>:USE <UseColorTable>

If enabled, the selected waveform is displayed according to its assigned color table.

If this option is disabled, the default color table is used, i.e. the intensity of the specific signal color varies according to the cumulative occurance of the values.

Suffix:
<m> 1...317
Waveform number, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<UseColorTable> OFF | ON
*RST: OFF

Manual operation: See "Use color table" on page 80

DISPlay:COLor:SIGNal<m>:PRESet

Resets the color of the selected waveform to the factory default.

Suffix:
<m> 1...317
Waveform number, see Section 26.4.1, "Waveform suffix", on page 1343.

Usage: Event

Manual operation: See "Set to default color" on page 80

26.7.2.2 Color tables

DISPlay:COLor:PALette:ADD 1365
DISPlay:COLor:PALette:REMove 1365
DISPlay:COLor:PALette:COUNt? 1365
DISPlay:COLor:PALette:POINt:ADD 1365
DISPlay:COLor:PALette:POINt:INSert 1365
DISPlay:COLor:PALette:POINt:REMove 1365
DISPlay:COLor:PALette:POINt[:VALue] 1366
DISPlay:COLor:PALette:POINt:COUNt? 1366

DISPlay:COLor:PALette:ADD <Name>

Adds a new color table with the specified name.

Setting parameters:
<Name> color table

Usage: Setting only

DISPlay:COLor:PALette:REMove <Name>

Removes the specified color table.

Setting parameters:
<Name> color table

Usage: Setting only

DISPlay:COLor:PALette:COUNt?

Queries the number of configured color maps.

Return values:
<Number>

Usage: Query only

DISPlay:COLor:PALette:POINt:ADD <PaletteName>

Appends a new row at the end of the color table.

Setting parameters:
<PaletteName> color table

Usage: Setting only

DISPlay:COLor:PALette:POINt:INSert <PaletteName>,<PointIndex>

Inserts the entry at the specified index in the color table.

Setting parameters:
<PaletteName> color table

<PointIndex> row number in the color table

Usage: Setting only

DISPlay:COLor:PALette:POINt:REMove <PaletteName>,<PointIndex>

Removes the entry with the specified index from the color table.

Setting parameters:
<PaletteName> color table

<PointIndex> row number in the color table

Usage: Setting only

DISPlay:COLor:PALette:POINt[:VALue]
<ColorTableName>,<PointIndex>,<Position>,<Color>
DISPlay:COLor:PALette:POINt[:VALue]? <ColorTableName>,<Index>

Inserts a new entry or queries the specified entry in the specified color table.

Parameters:
<Position> Cumulative occurance value

Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

<Color> ARGB value of the color to be used for the table entry.
ARGB=<Opacity(alpha) value><red value><green value><blue value>, in hexadecimal or decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967295

Parameters for setting and query:
<ColorTableName> Color table to be edited

<PointIndex> Index (row number) of the new entry in the color table

Usage: Asynchronous command

DISPlay:COLor:PALette:POINt:COUNt? <PaletteName>

Queries the number of entries in the color table.

Query parameters:
<PaletteName> color table

Return values:
<Number>

Usage: Query only

26.7.2.3 Grid appearance

DISPlay:DIAGram:GRID 1367
DISPlay:DIAGram:LABels 1367
DISPlay:DIAGram:FINegrid 1367
DISPlay:DIAGram:CROSshair 1367
DISPlay:DIAGram:YFIXed 1367
DISPlay:DIAGram:XFIXed 1368

DISPlay:DIAGram:GRID <Show>

If enabled, a grid is displayed in the diagram area.

Parameters:
<Show> OFF | ON

Usage: Asynchronous command

Manual operation: See "Show grid" on page 82

DISPlay:DIAGram:LABels <ShowLabels>

If enabled, labels mark values on the x- and y-axes in specified intervals in the diagram.

Parameters:
<ShowLabels> OFF | ON

Usage: Asynchronous command

Manual operation: See "Show labels" on page 82

DISPlay:DIAGram:FINegrid <ShowFineScale>

If ON, the crosshair is displayed as a ruler with scale markers. If OFF, the crosshair is shown as dashed lines.

Parameters:
<ShowFineScale> OFF | ON

Usage: Asynchronous command

Manual operation: See "Show fine grid scale" on page 83

DISPlay:DIAGram:CROSshair <Crosshair>

If selected, a crosshair is displayed in the diagram area. A crosshair allows you to select a specific data point by its co-ordinates.

Parameters:
<Crosshair> OFF | ON

Usage: Asynchronous command

Manual operation: See "Show crosshair" on page 83

DISPlay:DIAGram:YFIXed <YGridFixed>

If enabled, the horizontal grid lines remain in their position when the position of the curve is changed. Only the values at the grid lines are adapted. This reflects the behavior of traditional oscilloscopes.

Parameters:
<YGridFixed> OFF | ON

Usage: Asynchronous command

Manual operation: See "Keep Y-grid fixed" on page 83

DISPlay:DIAGram:XFIXed <XGridFixed>

If enabled, the vertical grid lines remain in their position when the horizontal position is changed. Only the values at the grid lines are adapted.

Parameters:

<XGridFixed> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Keep X-grid fixed" on page 83

26.7.2.4 Smartgrid

The following `LAYout` commands configure the SmartGrid: add and remove diagrams, and assign signals to the diagrams. In manual operation, you configure the SmartGrid by drag and drop.

LAYout:ADD 1368
LAYout:REMove 1370
LAYout:SHOW 1370
LAYout:SIGNal:ASSign 1370
LAYout:SIGNal:UNASsign 1372

LAYout:ADD
<NodeName>,<ParentType>,<InsertBefore>,<FirstSource>,<DiagramName>

Adds a new diagram with a waveform on the screen, in relation to an existing diagram.

Setting parameters:

<NodeName> String with the name of the existing diagram

<ParentType> HORizontal | VERTical | TAB

Position of the new diagram in relation to the existing one.

HORizontal
Besides the existing diagram

VERTical
Above or below the existing diagram

TAB
In a new tab in the existing diagram

<InsertBefore> OFF | ON

If on, the new diagram is inserted to the left (for HORizontal), above (for VERTical) or in a tab in front the existing diagram.
HOR, ON = left to the existing diagram, defined in <NodeName>
HOR, OFF = right to the existing diagram

VERT, ON = above the existing diagram
VERT, OFF = below the existing diagram

<FirstSource>

C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | XY1 | XY2 | XY3 | XY4 | MRESult1 | MRESult2 | MRESult3 | MRESult4 | MRESult5 | MRESult6 | MRESult7 | MRESult8 | SBUS1 | SBUS2 | SBUS3 | SBUS4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | MSOB1 | MSOB2 | MSOB3 | MSOB4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | BATHtub1 | BMEas1 | SRESponse1 | SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJHist1 | RJOHist1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJOTrack1 | TJSPectrum1 | DDJSpectrum1 | PJSPectrum1 | RJOSpectrum1 | SEYE1 | BATHtub2 | BMEas2 | SRESponse2 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJHist2 | RJOHist2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJOTrack2 | TJSPectrum2 | DDJSpectrum2 | PJSPectrum2 | RJOSpectrum2 | SEYE2 | NBAThtub1 | NBMeas1 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTrack1 | TNSPectrum1 | DDNSpectrum1 | PNSPectrum1 | RNOSpectrum1 | NBAThtub2 | NBMeas2 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTrack2 | TNSPectrum2 | DDNSpectrum2 | PNSPectrum2 | RNOSpectrum2 | PJDHist1 | BUJHist1 | RJOHist1 | PJDTrack1 | PJDSpectrum1 | PJDHist2 | BUJHist2 | RJOHist2 | PJDTrack2 | PJDSpectrum2 | PNDHist1 | BUNHist1 | RNOHist1 | PNDTrack1 | PNDSpectrum1 | PNDHist2 | BUNHist2 | RNOHist2 | PNDTrack2 | PNDSpectrum2 | LANE1 | LANE2 | LANE3 | LANE4

Waveform to be displayed in the new diagram, see Section 26.4.2, "Waveform parameter", on page 1348.
Spectrum analysis, option R&S RTP-K37: Spectrograms and timeline spectrums are automatically displayed in their own diagrams.
Eye diagram analysis with option R&S RTP-K91: Eye diagrams are automatically displayed in their own diagrams.
TDR/TDT analysis with option R&S RTP-K130: Measurement waveforms are automatically displayed in their own diagrams.
Advanced jitter analysis with option R&S RTP-K133: Jitter analysis waveforms are automatically displayed in their own diagrams.

Advanced noise analysis with option R&S RTP-K134 : Noise analysis waveforms are automatically displayed in their own diagrams.

<DiagramName> String with the name of the new diagram.

Example: `LAYout:ADD 'Diagram2',TAB,ON,C4W1,'MyDiagram3'`
Creates a new diagram 'MyDiagram3' with waveform C4W1 in a new tab that in front of 'Diagram2'.

Example: See Section 26.3.1.1, "Creating diagrams (SmartGrid)", on page 1328.

Usage: Setting only
Asynchronous command

LAYout:REMove <DiagramName>

Closes the specified diagram. The waveforms are displayed as minimized waveforms in their signal icons on the signal bar.

Setting parameters:
<DiagramName> String with the name of the diagram

Usage: Setting only
Asynchronous command

LAYout:SHOW <DiagramName>

Selects the specified diagram.

Setting parameters:
<DiagramName> String with the name of the diagram

Example: See Section 26.3.1.1, "Creating diagrams (SmartGrid)", on page 1328.

Usage: Setting only
Asynchronous command

LAYout:SIGNal:ASSign <DiagramName>,<Source>

Shows the specified waveform in the selected diagram.

Setting parameters:

<DiagramName> String with the diagram name

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | XY1 | XY2 | XY3 | XY4 | MRESult1 | MRESult2 | MRESult3 | MRESult4 | MRESult5 | MRESult6 | MRESult7 | MRESult8 | SBUS1 | SBUS2 | SBUS3 | SBUS4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | MSOB1 | MSOB2 | MSOB3 | MSOB4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | BATHtub1 | BMEas1 | SRESponse1 | SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJHist1 | RJOHist1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJOTrack1 | TJSPectrum1 | DDJSpectrum1 | PJSPectrum1 | RJOSpectrum1 | BATHtub2 | BMEas2 | SRESponse2 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJHist2 | RJOHist2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJOTrack2 | TJSPectrum2 | DDJSpectrum2 | PJSPectrum2 | RJOSpectrum2 | NBAThtub1 | NBMeas1 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTrack1 | TNSPectrum1 | DDNSpectrum1 | PNSPectrum1 | RNOSpectrum1 | NBAThtub2 | NBMeas2 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTrack2 | TNSPectrum2 | DDNSpectrum2 | PNSPectrum2 | RNOSpectrum2 | PJDHist1 | BUJHist1 | RJHist1 | PJDTrack1 | PJDSpectrum1 | PJDHist2 | BUJHist2 | RJHist2 | PJDTrack2 | PJDSpectrum2 | PNDHist1 | BUNHist1 | RNHist1 | PNDTrack1 | PNDSpectrum1 | PNDHist2 | BUNHist2 | RNHist2 | PNDTrack2 | PNDSpectrum2 | LANE1 | LANE2 | LANE3 | LANE4

Waveform to be assigned, see Section 26.4.2, "Waveform parameter", on page 1348
Spectrum analysis, option R&S RTP-K37: Spectrograms and timeline spectrums are automatically displayed in their own diagrams.
Eye diagram analysis with option R&S RTP-K91: Eye diagrams are automatically displayed in their own diagrams.
TDR/TDT analysis with option R&S RTP-K130: Measurement waveforms are automatically displayed in their own diagrams.
Advanced jitter and noise analysis with option R&S RTP-K133/K134

Example: See Section 26.3.1.1, "Creating diagrams (SmartGrid)", on page 1328.

Usage: Setting only
Asynchronous command

LAYout:SIGNal:UNASsign <Source>

Minimizes the specified waveform, i.e. removes it from the diagram and shows it in the signal icon.

Setting parameters:
<Source> See `LAYout:SIGNal:ASSign` on page 1370 and Section 26.4.2, "Waveform parameter", on page 1348

Example: See Section 26.3.1.1, "Creating diagrams (SmartGrid)", on page 1328.

Usage: Setting only
Asynchronous command

26.7.2.5 Diagram appearance

DISPlay:DIAGram:REName 1372
DISPlay:DIAGram:TITLe 1372
DISPlay:SIGBar[:STATe] 1373
DISPlay:GATE:TRANsparency 1373
LAYout:ZOOM:ONEDiagram 1373

DISPlay:DIAGram:REName <DiagramName>,<NewName>

Changes the diagram name, which is displayed on the diagram tab.

Setting parameters:
<DiagramName> String with the existing diagram name.

<NewName> String with the new diagram name.

Example:
```
:DISPlay:DIAGram:REName "Diagram1",'Test A'
```

Usage: Setting only

DISPlay:DIAGram:TITLe <DiagTitleSt>

If enabled, the tab titles of all diagrams are displayed: "Diagram1", "Diagram2" ...

If disabled, the tab titles are not shown except for those in a tabbed diagram. In tabbed diagrams, the tab titles are required to change the tabs.

Parameters:
<DiagTitleSt> OFF | ON

Usage: Asynchronous command

Manual operation: See "Show tabs always" on page 84

DISPlay:SIGBar[:STATe] <State>

If enabled, the signal bar is displayed.

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Show signal bar" on page 84

DISPlay:GATE:TRANsparency <Transparency>

Sets the transparency of the area that is defined as measurement or search gate.

Parameters:
<Transparency> Range: 0 to 100
Increment: 1
*RST: 43
Default unit: %

Usage: Asynchronous command

Firmware/software: FW 3.20

Manual operation: See "Gate transparency" on page 85

LAYout:ZOOM:ONEDiagram <ShowInOne>

Shows all zooms of a diagram in one zoom window. The zoomed areas are overlaid for better comparison of the zoomed waveforms.

The command takes effect on all zoom diagrams.

Parameters:
<ShowInOne> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Zoom overlay" on page 85

26.7.2.6 Annotations

To create an annotation (or waveform label), use `DISPlay:SIGNal:LABel:ADD`. Using the other `DISP:SIGN:LAB:...` commands, you can query the text and position of a label, and modify the initial settings. The <LabelID> and <Source> parameters identify each label uniquely. You can query the <LabelID> with `DISPlay:SIGNal:LABel:IDSList?`.

DISPlay:SIGNal:LABel:POSMode 1374
DISPlay:SIGNal:LABel:FONTsize 1374
DISPlay:SIGNal:LABel:ADD 1375
DISPlay:SIGNal:LABel:REMove 1377

DISPlay:SIGNal:LABel:IDSList?....1377
DISPlay:SIGNal:LABel:SHOW....1378
DISPlay:SIGNal:LABel:STATe....1379
DISPlay:SIGNal:LABel:TEXT....1380
DISPlay:SIGNal:LABel:HORizontal:ABSolute:POSition....1380
DISPlay:SIGNal:LABel:VERTical:ABSolute:POSition....1380
DISPlay:SIGNal:LABel:HORizontal:RELative:POSition....1381
DISPlay:SIGNal:LABel:VERTical:RELative:POSition....1381

DISPlay:SIGNal:LABel:POSMode <Source>,<PositionMode>
DISPlay:SIGNal:LABel:POSMode? <Source>

Modifies or queries the position mode: either relative to the diagram or with absolute values according to the units of the waveform. The position mode applies to all labels of the selected source. For different sources, different position modes can be selected.

Parameters:

<PositionMode> ABS | REL

ABS
Position in time and voltage values, or in other units depending on the waveform character. Absolute positions move with the waveform display when the scales, the vertical position or offset, or the reference point are changed.
Use `DISPlay:SIGNal:LABel:HORizontal:ABSolute:POSition` and `DISPlay:SIGNal:LABel:HORizontal:RELative:POSition` to set the position.

REL
Fixed label position in percent of the screen counting from the upper left corner.
Use `DISPlay:SIGNal:LABel:HORizontal:RELative:POSition` and `DISPlay:SIGNal:LABel:VERTical:RELative:POSition` to set the position.

Parameters for setting and query:

<Source> All waveforms that can be displayed, see `DISPlay:SIGNal:LABel:ADD`

Usage: Asynchronous command

Manual operation: See "Position mode" on page 86

DISPlay:SIGNal:LABel:FONTsize <Fontsize>

Sets the font size of waveform labels.

Parameters:

<Fontsize>
Range: 7 to 30
Increment: 1
*RST: 15

Usage: Asynchronous command

Manual operation: See "Font size" on page 87

DISPlay:SIGNal:LABel:ADD <LabelID>, <Source>, <LabelText>, <PositionMode>, <XPositon>, <YPositon>

Creates a new waveform label for the specified source waveform.

Setting parameters:

<LabelID> String with the label identifier. The <LabelID> and <Source> parameters identify each label uniquely, so the label ID must be unique for the given waveform. Note the <LabelID> because it is not possible to query it, or to read it on the user interface.

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | XY1 | XY2 | XY3 | XY4 | MRESult1 | MRESult2 | MRESult3 | MRESult4 | MRESult5 | MRESult6 | MRESult7 | MRESult8 | QUICk | QUICK | SBUS1 | SBUS2 | SBUS3 | SBUS4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | MSOB1 | MSOB2 | MSOB3 | MSOB4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | SG1 | SG2 | SG3 | SG4 | SG5 | SG6 | SG7 | SG8 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL1 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | BATHtub1 | BMEas1 | SRESponse1 | SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJHist1 | RJOHist1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJOTrack1 | TJSPectrum1 | DDJSpectrum1 | PJSPectrum1 | RJOSpectrum1 | SEYE1 | BATHtub2 | BMEas2 | SRESponse2 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJHist2 | RJOHist2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJOTrack2 | TJSPectrum2 | DDJSpectrum2 | PJSPectrum2 | RJOSpectrum2 | SEYE2 | NBAThtub1 | NBMeas1 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTrack1 | TNSPectrum1 | DDNSpectrum1 | PNSPectrum1 | RNOSpectrum1 | NBAThtub2 | NBMeas2 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTrack2 | TNSPectrum2 | DDNSpectrum2 | PNSPectrum2 | RNOSpectrum2 | PJDHist1 | BUJHist1 | RJOHist1 | PJDTrack1 | PJDSpectrum1 | PJDHist2 | BUJHist2 | RJOHist2 | PJDTrack2 | PJDSpectrum2 | PNDHist1 | BUNHist1 | RNOHist1 | PNDTrack1 | PNDSpectrum1 | PNDHist2 | BUNHist2 | RNOHist2 | PNDTrack2 | PNDSpectrum2 | LPDFE1 | LPDFE2 | LPDFE3 | LPDFE4 | LANE1 | LANE2 | LANE3 | LANE4

Waveform to that the label belongs, see Section 26.4.1, "Waveform suffix", on page 1343.

<LabelText> String with the label text that is shown on the display

<PositionMode> ABS | REL

ABS
Position in time and voltage values, or in other units depending on the waveform character. Absolute positions move with the waveform display when the scales, the vertical position or offset, or the reference point are changed.

REL
Fixed label position in percent of the screen counting from the upper left corner.

<XPositon> Horizontal position of the label text. Values, range and unit depend on the position mode, the waveform position and scaling. For relative position mode, the range is 0 to 100 %.

<YPositon> Vertical position of the label text. Values, range and unit depend on the position mode, the waveform position and scaling. For relative position mode, the range is 0 to 100 %.

Example: `DISPlay:SIGNal:LABel:ADD 'Label1', C1W1, 'Label on C1', REL, 20, 20`
Adds the label text 'Label on C1W1' to waveform1 of channel1 at relative position 20% from the upper left corner of the screen. The label ID is 'Label1'.

Example: `DISPlay:SIGNal:LABel:ADD 'Label1', C2W1, 'Label on C21', ABS, 10e-09, 0.1`
Adds the label text 'Label on C2W1' to waveform1 of channel2 at absolute position 10 ns and 0.1 V. The label ID is 'Label1'.

Usage: Setting only
Asynchronous command

Manual operation: See "Labels" on page 87

DISPlay:SIGNal:LABel:REMove <LabelID>,<Source>

Deletes the specifies waveform label.

Setting parameters:
<LabelID> String with the label identifier.

<Source> All waveforms that can be displayed, see `DISPlay:SIGNal:LABel:ADD`

Example: `DISPlay:SIGNal:LABel:REMove 'Label1', C1W1`

Usage: Setting only
Asynchronous command

Manual operation: See "Labels" on page 87

DISPlay:SIGNal:LABel:IDSList? <Source>

Returns a list of label IDs for the specified source. Labels that are defined in the user interface get an automatic label "DiagramText<No>".

Query parameters:
<Source> See `DISPlay:SIGNal:LABel:ADD`.

Return values:
<List>

Usage: Query only
Asynchronous command

Manual operation: See "Labels" on page 87

DISPlay:SIGNal:LABel:SHOW <Source>,<State>
DISPlay:SIGNal:LABel:SHOW? <Source>

Selects the source for the label display and displays all labels for that source that have state = ON in `DISPlay:SIGNal:LABel:STATe` on page 1379.

Parameters:
<State> OFF | ON

Parameters for setting and query:

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | XY1 | XY2 | XY3 | XY4 | MRESult1 | MRESult2 | MRESult3 | MRESult4 | MRESult5 | MRESult6 | MRESult7 | MRESult8 | QUICk | QUICK | SBUS1 | SBUS2 | SBUS3 | SBUS4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | MSOB1 | MSOB2 | MSOB3 | MSOB4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | SG1 | SG2 | SG3 | SG4 | SG5 | SG6 | SG7 | SG8 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL1 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | BATHtub1 | BMEas1 | SRESponse1 | SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJHist1 | RJOHist1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJOTrack1 | TJSPectrum1 | DDJSpectrum1 | PJSPectrum1 | RJOSpectrum1 | SEYE1 | BATHtub2 | BMEas2 | SRESponse2 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJHist2 | RJOHist2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJOTrack2 | TJSPectrum2 | DDJSpectrum2 | PJSPectrum2 | RJOSpectrum2 | SEYE2 | NBAThtub1 | NBMeas1 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTrack1 | TNSPectrum1 | DDNSpectrum1 | PNSPectrum1 | RNOSpectrum1 | NBAThtub2 | NBMeas2 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTrack2 | TNSPectrum2 | DDNSpectrum2 | PNSPectrum2 | RNOSpectrum2 | PJDHist1 | BUJHist1 | RJOHist1 | PJDTrack1 | PJDSpectrum1 | PJDHist2 | BUJHist2 | RJOHist2 | PJDTrack2 | PJDSpectrum2 | PNDHist1 | BUNHist1 | RNOHist1 | PNDTrack1 | PNDSpectrum1 | PNDHist2 | BUNHist2 | RNOHist2 | PNDTrack2 | PNDSpectrum2 | LPDFE1 | LPDFE2 | LPDFE3 | LPDFE4 | LANE1 | LANE2 | LANE3 | LANE4

Usage: Asynchronous command

Manual operation: See "Show / Source" on page 86

DISPlay:SIGNal:LABel:STATe <LabelID>,<Source>,<State>
DISPlay:SIGNal:LABel:STATe? <LabelID>,<Source>

Displays or hides a single label that is identified by the signal source and label ID.

Parameters:

<State> OFF | ON

ON: shows the label on the screen.
`DISPlay:SIGNal:LABel:SHOW` must be set to ON for the source.

Parameters for setting and query:

<LabelID> String with the label identifier.

<Source> See `DISPlay:SIGNal:LABel:ADD`.

Usage: Asynchronous command

Manual operation: See "Labels" on page 87

DISPlay:SIGNal:LABel:TEXT <LabelID>,<Source>,<LabelText>
DISPlay:SIGNal:LABel:TEXT? <LabelID>,<Source>

Modifies or queries the text of the specified label.

Parameters:

<LabelText> String with the label text that is shown

Parameters for setting and query:

<LabelID> String with the label identifier.

<Source> All waveforms that can be displayed, see `DISPlay:SIGNal:LABel:ADD`

Usage: Asynchronous command

Manual operation: See "Labels" on page 87

DISPlay:SIGNal:LABel:HORizontal:ABSolute:POSition
<LabelID>,<Source>,<Position>
DISPlay:SIGNal:LABel:HORizontal:ABSolute:POSition? <LabelID>,<Source>
DISPlay:SIGNal:LABel:VERTical:ABSolute:POSition
<LabelID>,<Source>,<Position>
DISPlay:SIGNal:LABel:VERTical:ABSolute:POSition? <LabelID>,<Source>

Modifies or queries the absolute horizontal and vertical positiions of the specified label if `DISPlay:SIGNal:LABel:POSMode` is set to `ABS`.

Parameters:

<Position> Range: Depends on waveform position and scaling
Default unit: s and V, or in other units depending on the waveform character

Parameters for setting and query:

<LabelID> String with the label identifier.

<Source> All waveforms that can be displayed, see `DISPlay:SIGNal:LABel:ADD`

Example:
```
:DISPlay:SIGNal:LABel:POSMode C2W1, ABS
DISPlay:SIGNal:LABel:HORizontal:ABSolute:POSition 'Label1', C2W1, 5e-09
DISPlay:SIGNal:LABel:VERTical:ABSolute:POSition 'Label1', C2W1, -0.1
```
Move the label to 5 ns and -0.1 V.

Manual operation: See "Labels" on page 87

DISPlay:SIGNal:LABel:HORizontal:RELative:POSition
<LabelID>,<Source>,<Position>
DISPlay:SIGNal:LABel:HORizontal:RELative:POSition? <LabelID>,<Source>
DISPlay:SIGNal:LABel:VERTical:RELative:POSition
<LabelID>,<Source>,<Position>
DISPlay:SIGNal:LABel:VERTical:RELative:POSition? <LabelID>,<Source>

Modifies or queries the relative horizontal and vertical positiions of the specified label if `DISPlay:SIGNal:LABel:POSMode` is set to `REL`.

Parameters:
<Position> Position in percent of the screen counting from the upper left corner.
Range: 0 to 100
Default unit: %

Parameters for setting and query:
<LabelID> String with the label identifier.
<Source> All waveforms that can be displayed, see `DISPlay:SIGNal:LABel:ADD`

Example:
```
:DISPlay:SIGNal:LABel:POSMode C2W1, REL
DISPlay:SIGNal:LABel:HORizontal:RELative:POSition 'Label1', C2W1, 30
DISPlay:SIGNal:LABel:VERTical:RELative:POSition 'Label1', C2W1, 70
```
Move the label to new relative position: horizontal at 30 % and vertical at 70 % of the screen.

Manual operation: See "Labels" on page 87

26.7.2.7 Dialog appearance

DISPlay:EXTended:PORDialogs <PopOutResDialogs>

If an external monitor is connected to the instrument, enables the display of result boxes on the external monitor.

Parameters:
<PopOutResDialogs> OFF | ON
*RST: OFF

Manual operation: See "Extended desktop placement" on page 88

DISPlay:EXTended:POSDialogs <PopOutSettDialogs>

If an external monitor is connected to the instrument, enables the display of dialog boxes on the external monitor.

Parameters:
<PopOutSettDialogs> OFF | ON
*RST: OFF

Manual operation: See "Extended desktop placement" on page 88

26.7.2.8 Cursor appearance

CURSor<cu>:STYLe <Style>

Defines how the cursor is displayed in the diagram.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<Style> LINes | LRHombus | VLRHombus | RHOMbus

LINes
The cursors are displayed as lines.

LRHombus
The cursors are displayed as lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

VLRHombus
The cursors are displayed only as vertical lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

RHOMbus
The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

*RST: LINes

Usage: Asynchronous command

Manual operation: See "Cursor style" on page 89

DISPlay:RESultboxes:CUPosition <Position>

Defines the position of the cursor measurement results on the screen.

Parameters:
<Position> PREV | FLOA | DOCK

PREV
Preview: result icon on the signal bar.

FLOA
Floating result box in front of the diagrams.

DOCK
Docked: fixed tab below the diagrams.

*RST: DOCK

Usage: Asynchronous command

Manual operation: See "Result position" on page 89

26.7.2.9 Measurement appearance

MEASurement<mg>:DISPlay:GROuping <GroupResDialogs>

If ON, all measurement results are shown in one result box. If disabled, the results of each measurement group are shown in a separate result box. The default position is ignored.

Suffix:
<mg> 1..10
The suffix is irrelevant. The setting affects all measurements except for the peak list.

Parameters:
<GroupResDialogs> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Group results" on page 90

MEASurement<mg>:DISPlay:RESults:LFONtsize <Fontsize>

Sets the font size in the result tables.

Suffix:
<mg> 1..10
The suffix is irrelevant. The setting affects all measurements except for the peak list.

Parameters:
<Fontsize> Range: 7 to 30
Increment: 1
*RST: 14

Usage: Asynchronous command

Manual operation: See "Font size" on page 91

DISPlay:RESultboxes:MEPosition <Position>

Defines the position of the measurement results on the display.

Parameters:

<Position> PREV | FLOA | DOCK

PREV
Preview: result icon on the signal bar

FLOA
Floating: floating result box in front of the diagrams

DOCK
Docked: fixed tab below the diagrams

*RST: DOCK

Usage: Asynchronous command

Manual operation: See "Result position" on page 90

26.7.2.10 Peak list appearance

MEASurement<mg>:RESult:LABorder <MeasType>,<FrameType>
MEASurement<mg>:RESult:LABorder? <MeasType>

Defines the layout of the labels.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<FrameType> NOBorder | UNDERLINE | FULL

NOBorder
Label without border or lines.

UNDERLINE
The label is underlined.

FULL
The label is surrounded by a frame.

Parameters for setting and query:

<MeasType> PLISt

Only for peaklist measurements. For other measurment types, this command returns an error.

Manual operation: See "Frame type" on page 91

MEASurement<mg>:RESult:INVerse <MeasType>,<State>
MEASurement<mg>:RESult:INVerse? <MeasType>

Displays labels with black font on white background using the "Full frame" label type (if `MEASurement<mg>:RESult:LABorder`=`ON`).).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<State> ON | OFF

Parameters for setting and query:
<MeasType> PLISt
Only for peaklist measurements. For other measurement, this command returns an error.

Example: Display labels.
```
MEAS:RES:SHL PLIS,ON
```
Select inverted labels.
```
MEAS:RES:INV PLIS,ON
```
Query the type of labels for peak lists.
```
MEAS:RES:INV? PLIS
//Result: ON
```

Manual operation: See "Invert" on page 91

26.7.2.11 Mask appearance

MTESt:LABel....1385
MTESt:REName....1386
MTESt:HIGHlight:INFinite....1386
MTESt:HIGHlight:STATe....1386
MTESt:HIGHlight:TIME....1386
MTESt:COLor:UNMatch....1387
MTESt:COLor:MATCh....1387
MTESt:COLor:BORDer....1387
MTESt:COLor:INTerior....1388

MTESt:LABel <LabelState>

Switches the display of the mask test name on or off.

To change the name of the mask test, use `MTESt:REName` on page 1386.

Parameters:
<LabelState> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show labels" on page 92

MTESt:REName <MaskTestName>,<NewName>

Changes the name of the mask test.

Setting parameters:

<MaskTestName> String with the existing mask test name.

<NewName> String with the new mask test name.

Usage: Setting only

Manual operation: See "Show labels" on page 92

MTESt:HIGHlight:INFinite <State>

If ON, the mask hits are highlighted for an unlimited period of time.

Parameters:

<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show hits forever" on page 92

MTESt:HIGHlight:STATe <HighlightHits>

If ON, the mask hits are highlighted on the screen. You can define the color and the time of the hit display.

Parameters:

<HighlightHits> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Show hits" on page 92

MTESt:HIGHlight:TIME <HighlightTime>

Sets the time how long the mask hits are highlighted.

Parameters:

<HighlightTime> Range: 0.05 to 50
Increment: 0.1
*RST: 1
Default unit: s

Usage: Asynchronous command

Manual operation: See "Show for" on page 92

MTESt:COLor:UNMatch <ClrUnmatchedMsk>

Sets the color of masks segments that were not hit.

Parameters:

<ClrUnmatchedMsk> Decimal value corresponding to the ARGB hex value that is shown in the "Color" dialog box. ARGB is a 32-bit unsigned integer with alpha, red, green, blue word order. Alpha defines the transparency.
To get the value, covert the hex value from the dialog to decimal value.

Range: 0 (black) to 4294967295 (white)
Increment: 1
*RST: 2578098858

Usage: Asynchronous command

Manual operation: See "Mask without violation" on page 93

MTESt:COLor:MATCh <ClrMatchedPixel>

Sets the color of samples that violated the mask.

Parameters:

<ClrMatchedPixel> Decimal value corresponding to the ARGB hex value that is shown in the "Color" dialog box. ARGB is a 32-bit unsigned integer with alpha, red, green, blue word order. Alpha defines the transparency.
To get the value, covert the hex value from the dialog to decimal value.

Range: 0 (black) to 4294967295 (white)
Increment: 1
*RST: 4294901760

Usage: Asynchronous command

Manual operation: See "Color" on page 93

MTESt:COLor:BORDer <ClrMatchedMskBorder>

Sets the color of masks segments that were touched at the border. In this case, the resolution is not sufficient to detect if the mask was really hit or not. Zoom into the concerned area to see the actual result.

Parameters:

<ClrMatchedMskBorder> Decimal value corresponding to the ARGB hex value that is shown in the "Color" dialog box. ARGB is a 32-bit unsigned integer with alpha, red, green, blue word order. Alpha defines the transparency.
To get the value, covert the hex value from the dialog to decimal value.

Range: 0 (black) to 4294967295 (white)
Increment: 1
*RST: 2580309606

Usage: Asynchronous command

Manual operation: See "Mask with contact" on page 93

MTESt:COLor:INTerior <ClrMatchedMskInterior>

Sets the color of mask segments the signal has entered into.

Parameters:

<ClrMatchedMskInterior> Decimal value corresponding to the ARGB hex value that is shown in the "Color" dialog box. ARGB is a 32-bit unsigned integer with alpha, red, green, blue word order. Alpha defines the transparency.
To get the value, covert the hex value from the dialog to decimal value.

Range: 0 (black) to 4294967295 (white)
Increment: 1
*RST: 2578055168

Usage: Asynchronous command

Manual operation: See "Mask with violation" on page 93

26.7.3 Display

26.7.3.1 Persistence

DISPlay:PERSistence[:STATe] 1388
DISPlay:PERSistence:INFinite 1389
DISPlay:PERSistence:TIME 1389
DISPlay:PERSistence:RESet 1389

DISPlay:PERSistence[:STATe] <State>

If enabled, each new data point in the diagram area remains on the screen for the duration defined using `DISPlay:PERSistence:TIME`, or as long as `DISPlay:PERSistence:INFinite` is enabled.

If disabled, the signal value is only displayed as long as it actually occurs.

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 95

DISPlay:PERSistence:INFinite <State>

If persistence is enabled (`DISPlay:PERSistence[:STATe]`), each new data point in the diagram area remains on the screen infinitely until this command is set to "OFF".

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Infinite persistence" on page 95

DISPlay:PERSistence:TIME <Time>

If persistence is enabled (`DISPlay:PERSistence[:STATe]`), each new data point in the diagram area remains on the screen for the duration defined here.

Parameters:
<Time> Range: 0.05 to 50
Increment: 0.05
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 95

DISPlay:PERSistence:RESet

Resets the display, removing persistent values.

Usage: Event
Asynchronous command

Manual operation: See "Reset" on page 95

26.7.3.2 Signal

DISPlay:INTensity <Intensity>

This value determines the strength of the waveform line in the diagram. Enter a percentage between 0 (not visible) and 100% (very strong).

The exact mapping of the cumulative value occurences according to the assigned color table is guaranteed only if the intensity is set to 50% (default). All other intensity values falsify the mapping but may improve the visibility of the signal.

Parameters:

<Intensity> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Intensity" on page 96

DISPlay:DIAGram:STYLe <Style>

Select the style in which the waveform is displayed.

Parameters:

<Style> VECTors | DOTS

VECTors
The individual data points are connected by a line.

DOTS
Only the individual data points are displayed.

*RST: VECTors

Usage: Asynchronous command

Manual operation: See "Waveform style" on page 96

26.7.3.3 Clear results

DISPlay:CLR

Deletes all measurement results including long term measurement and statistics, all waveforms, and the history.

Usage: Event
Asynchronous command

Manual operation: See "Clear" on page 59

26.7.4 User-defined preset

USRDefined:RST:NAME <Name>

Sets the path and file name of a user-defined preset file.

Parameters:

<Name> String parameter

Manual operation: See "Saveset to be loaded on preset" on page 103

USRDefined:RST:OPEN

opens and loads a user-defined preset file. Name and path of the preset file are defined with `USRDefined:RST:NAME`.

Usage: Setting only

Manual operation: See "Saveset to be loaded on preset" on page 103

USRDefined:RST:SAVE

Saves the current instrument settings to a user-defined preset file. Name and path of the preset file are defined with `USRDefined:RST:NAME`.

Usage: Setting only

Manual operation: See "Saveset to be loaded on preset" on page 103

USRDefined:RST[:ENABle] <Name>

If ON, the settings from a previously defined preset file are restored when the [Preset] key is pressed. The preset file is defined with `USRDefined:RST:NAME`.

If OFF, [Preset] sets the instrument to the factory defaults.

Parameters:

<Name> OFF | ON

*RST: OFF

Manual operation: See "Enable user defined preset" on page 102

26.7.5 Save / recall

See the following chapters:

- Section 26.16.10, "Autonaming", on page 1802
- Section 26.16.11, "CSV export", on page 1804
- Section 26.16.12, "External application", on page 1804

26.7.6 Maintenance

26.7.6.1 Self-alignment

CALibration:DATE? 1392
CALibration:TIME? 1392
CALibration:RESult? 1392

CALibration:DATE?

Returns the date of the last selfalignment.

Return values:
<Date>

Usage: Query only
Asynchronous command

Manual operation: See "Date / Time / Overall alignment state" on page 105

CALibration:TIME?

Returns the time of the last selfalignment.

Return values:
<Time>

Usage: Query only
Asynchronous command

Manual operation: See "Date / Time / Overall alignment state" on page 105

CALibration:RESult?

Returns the result of the last selfalignment and the current alignment status. In remote mode, `*CAL?` provides more detailed information.

Return values:
<ResultState> PASSed | FAILed | NOALigndata
*RST: FAILed

Usage: Query only
Asynchronous command

Manual operation: See "Date / Time / Overall alignment state" on page 105

26.7.6.2 Self-test

DIAGnostic:SERVice:STST:STATe?

Returns the summary result of the selftest.

Return values:
<State> PSSD | FAILed | UNDefined
*RST: UNDefined

Usage: Query only
Asynchronous command

Manual operation: See "State" on page 107

26.7.6.3 Hardware

SYSTem:DFPRint [<Path>]

The device footprint contains the configuration of the instrument, installed modules, installed software and software licenses. This information is written in the device footprint xml file might be useful in case of maintenance or support request.

The query returns the information as block data. The setting command saves the device footprint xml file in the specified path.

It is also possible to access the device footprint xml file via the instrument's web browser. Therefore, the directory containing the xml file must be enabled for sharing.

Setting parameters:
<Path> String parameter, specifying the target path of the footprint file.

Return values:
<DeviceFootprint> Content of the device footprint xml file as block data

Manual operation: See "System Info" on page 107

DIAGnostic:SERVice:FWVersion?

Returns the firmware version that is currently installed on the instrument.

Return values:
<FirmwareVersion> Version string

Usage: Query only
Asynchronous command

DIAGnostic:SERVice:PARTnumber <Number>

Returns the part number (order number) of your instrument. This number is required to order a new option, and in case of service.

Parameters:
<Number> Number string

Usage: Asynchronous command

Manual operation: See "System Info" on page 107

DIAGnostic:SERVice:SERialnumber?

Returns the serial number of your instrument. This number is required to order a new option, and in case of service.

Return values:
<SerialNumber> Number string

Usage: Query only
Asynchronous command

Manual operation: See "System Info" on page 107

DIAGnostic:SERVice:CHANnelcount?

Queries the number of available channels.

Return values:

<ChannelCount> Range: 0 to 4
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Firmware/software: V 2.00

26.8 Acquisition and setup

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Starting and stopping acquisition 1394
- Timebase 1395
- Acquisition 1398
- Fast segmentation 1406
- Vertical 1407
- Waveform data 1413
- Probes 1415
- R&S RT-ZVC probe 1445
- Differential signals 1459
- Digital filter 1463
- Skew 1464
- High definition mode 1466
- Reference clock 1467

26.8.1 Starting and stopping acquisition

RUNContinous 1395
RUN 1395

RUNSingle 1395
SINGle 1395
STOP 1395

RUNContinous
RUN

Starts the continuous acquisition.

Usage: Event
Asynchronous command

Manual operation: See "[Run / Stop]" on page 37

RUNSingle
SINGle

Starts a defined number of acquisition cycles. The number of cycles is set with `ACQuire:COUNt`.

Usage: Event
Asynchronous command

Manual operation: See "[Single]" on page 38

STOP

Stops the running acquistion.

Usage: Event
Asynchronous command

Manual operation: See "[Run / Stop]" on page 37

26.8.2 Timebase

AUToscale 1395
TIMebase:SCALe 1396
TIMebase:RANGe 1396
TIMebase:DIVisions? 1396
TIMebase:HORizontal:POSition 1397
TIMebase:REFerence 1397
TIMebase:ROLL:ENABle 1397
TIMebase:ROLL:STATe? 1398
TIMebase:ROLL:MTIMe 1398
TRIGger<t>:OFFSet:LIMited 1398

AUToscale

Performs an autoset process: analyzes the enabled channel signals, and obtains appropriate horizontal, vertical, and trigger settings to display stable waveforms.

Rohde & Schwarz does not recommend using the autoset in remote control. To adjust the oscilloscope remotely, especially for automated testing applications, use the remote commands that adjust the horizontal, vertical and trigger settings."

Usage: Event
Asynchronous command

TIMebase:SCALe <TimeScale>

Sets the horizontal scale - the time per division on the x-axis - for all channel and math waveforms.

The setting accuracy depends on the current resolution (sample rate).

- No interpolation:
  The resolution is an integer multiple of the ADC sample rate.
- With interpolation:
  Any value for the horizontal scale can be set.

Parameters:

<TimeScale>
Range: 25E-12 to 10000 (RTO, RTP) | 5000 (RTE)
Increment: 1E-12
*RST: 10E-9
Default unit: s/div

Usage: Asynchronous command

Manual operation: See "Time scale" on page 123

TIMebase:RANGe <AcqTime>

Defines the time of one acquisition, that is the time across the 10 divisions of the diagram: *TimeScale*10*.

Parameters:

<AcqTime>
Range: 250E-12 to 100E+3 (RTO, RTP) | 50E+3 (RTE)
Increment: 1E-12
*RST: 0.5
Default unit: s

Usage: Asynchronous command

Manual operation: See "Acquisition time" on page 124

TIMebase:DIVisions?

Queries the number of horizontal divisions on the screen. The number cannot be changed.

Return values:

<HorizDivCnt>
Range: 4 to 20
Increment: 2
*RST: 10

Usage: Query only
Asynchronous command

TIMebase:HORizontal:POSition <RescalCenterTime>

Defines the time distance between the reference point and the trigger point (the zero point of the diagram). The reference point marks the rescaling center of the time scale.

Parameters:

<RescalCenterTime> Range: -100E+24 to 100E+24
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "[Position]" on page 39

TIMebase:REFerence <RescaleCtrPos>

Sets the position of the reference point in % of the screen. The reference point marks the rescaling center of the time scale. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compresses to both sides of the reference point.

Parameters:

<RescaleCtrPos> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "[Position]" on page 39

TIMebase:ROLL:ENABle <Mode>

Activates the automatic roll mode.

Parameters:

<Mode> AUTO | OFF

AUTO: the instrument activates the roll mode under specific conditions.
See also "Roll mode" on page 125.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Roll mode" on page 125

TIMebase:ROLL:STATe?

Returns the status of the roll mode.

Return values:
<State> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

Manual operation: See "Roll mode" on page 125

TIMebase:ROLL:MTIMe <MinHorizGain>

The roll mode is enabled automatically if the acquisition time exceeds the given value, and if `TIMebase:ROLL:ENABle` is set to AUTO.

Parameters:
<MinHorizGain> Treshold value for roll mode enabling.
Range: 1 to 600
Increment: 1
*RST: 10
Default unit: s

Usage: Asynchronous command

Manual operation: See "Start roll time" on page 126

TRIGger<t>:OFFSet:LIMited <State>

If ON, the horizontal position cannot be set outside the visible waveform diagram.

See also: `TIMebase:HORizontal:POSition` on page 1397

Suffix:
<t> 1..3
The numeric suffix is irrelevant.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Restrict horizontal position to acquisition range" on page 124

26.8.3 Acquisition

ACQuire:ARESet:IMMediate 1399
ACQuire:ARESet:MODE 1399
ACQuire:ARESet:TIME 1399

ACQuire:ARESet:COUNt 1400
ACQuire:CDTA 1400
ACQuire:COUNt 1400
ACQuire:INTerpolate 1401
ACQuire:MUWaveform 1401
ACQuire:POINts:AUTO 1401
ACQuire:POINts:AADJust 1402
ACQuire:POINts:MAXimum 1402
ACQuire:POINts:ARATe? 1403
ACQuire:POINts[:VALue] 1403
ACQuire:RESolution 1403
ACQuire:SRATe 1403
ACQuire:SRReal 1404
CHANnel<ch>[:WAVeform<wf>][:STATe] 1404
CHANnel<ch>[:WAVeform<wf>]:TYPE 1405
CHANnel<ch>[:WAVeform<wf>]:ARIThmetics 1405

ACQuire:ARESet:IMMediate

Forces the immediate restart of the envelope and average calculation for all waveforms.

Usage: Event
Asynchronous command

Manual operation: See "Reset" on page 134

ACQuire:ARESet:MODE <ArtmRst>

Defines when the envelope and average evaluation restarts.

Parameters:

<ArtmRst> NONE | TIME | WFMS

TIME
Restarts the envelope and average calculation after the time defined with `ACQuire:ARESet:TIME`.

WFMS
Restarts the envelope and average calculation after a number of acquired waveforms defined with `ACQuire:ARESet:COUNt` on page 1400.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Arithmetic Reset > Mode" on page 134

ACQuire:ARESet:TIME <EnvelopeTimeout>

Defines the time after which the envelope and average evaluation restarts.

The setting is relevant if `ACQuire:ARESet:MODE` is set to `TIME`.

Parameters:

<EnvelopeTimeout> Range: 0.1 to 10000
Increment: 0.01
*RST: 0.1
Default unit: s

Usage: Asynchronous command

Manual operation: See "Arithmetic Reset > Mode" on page 134

ACQuire:ARESet:COUNt <NofWaveforms>

Defines the number of acquired waveforms after which the envelope and average evaluation restarts.

The setting is relevant if `ACQuire:ARESet:MODE` is set to `WFMS`.

Parameters:

<NofWaveforms> Range: 2 to 16.7772E+6
Increment: 10
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Arithmetic Reset > Mode" on page 134

ACQuire:CDTA <CoupleAcquSet>

Sets the acquisition mode and the waveform arithmetic of all channels to the last set value.

If the acquisition settings are coupled, `ACQuire:MUWaveform` is not relevant, only one waveform per channel can be used.

Parameters:

<CoupleAcquSet> OFF | ON
*RST: ON

Usage: Asynchronous command

Firmware/software: FW 3.30
Substitutes `ACQuire:CMODode`

Manual operation: See "Couple channels" on page 133

ACQuire:COUNt <MaxAcqCnt>

The acquisition and average count has a double effect:

- It sets the number of waveforms acquired with `RUNSingle`.
- It defines the number of waveforms used to calculate the average waveform.

Parameters:

<MaxAcqCnt> Range: 1 to 16.7772E+6
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "Average count (N-single count)" on page 130

ACQuire:INTerpolate <IntpolMd>

Selects the interpolation method.

See also: "Interpolation" on page 130.

Parameters:

<IntpolMd> LINear | SINX | SMHD

LINear
Linear interpolation between two adjacent sample points

SINX
Interpolation by means of a sin(x)/x curve.

SMHD
Sample/Hold causes a histogram-like interpolation.

*RST: SINX

Usage: Asynchronous command

Manual operation: See "Interpolation" on page 130

ACQuire:MUWaveform <MultiWaveform>

For each channel, up to three waveforms can be shown and analyzed. The decimation mode and the waveform arithmetic are specific for each waveform. So you can analyze several aspects of the signal: For example, waveform1 shows the peaks, and waveform2 shows the average of the signal.

Parameters:

<MultiWaveform> OFF | ON

*RST: OFF

Usage: Asynchronous command

Firmware/software: FW 3.20

Manual operation: See "Multi waveform" on page 133

ACQuire:POINts:AUTO <ReclgthManual>

Selection to keep constant either the resolution or the record length when you adjust the time scale (`TIMebase:SCALe`) or acquisition time (`TIMebase:RANGe`).

Parameters:

<ReclgthManual> RESolution | RECLength

RESolution
Resolution is kept constant. Set the required resolution value with `ACQuire:RESolution`.

RECLength
The record length is kept constant. Set the required record length value with `ACQuire:POINts[:VALue]`.

*RST: RESolution

Usage: Asynchronous command

Manual operation: See "Sample rate mode" on page 131

ACQuire:POINts:AADJust <AutoAdjust>

Prevents undersampling and ensures a sufficient resolution to acquire the correct waveform if the time scale is changed. The setting takes effect if the changed parameter - resolution or record length - reaches a limit. The instrument automatically keeps this parameter constant at its limit, and changes the other parameter regardless of the `ACQuire:POINts:AUTO` setting.

Parameters:
<AutoAdjust> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto adjustment" on page 131

ACQuire:POINts:MAXimum <ReclgthLim>

Sets a limit for the record length to prevent very large records. This value only takes effect if a constant resolution is selected with `ACQuire:POINts:AUTO`. If you increase the time scale, the resolution remains constant and the record length increases until the limit is reached. Further increase of the time scale changes the resolution and keeps the record length limit.

Parameters:
<ReclgthLim> Range: 1000 to 800 MSa. The actual maximum can be lower depending on the installed options, number of active channels, measurements and math waveforms.
Increment: 2
*RST: 10E+6
Default unit: pts

Usage: Asynchronous command

Manual operation: See "Record length limit" on page 131

ACQuire:POINts:ARATe?

Retrieves the sample rate of the ADC, that is the number of points that are sampled by the ADC in one second.

Return values:

<ADCSampleRate> Range: 20 Gsample/s, R&S RTP with serial number ≥ 103000 in interleaved mode (2 channels): 40 Gsample/s
Default unit: Sa/s

Usage: Query only
Asynchronous command

ACQuire:POINts[:VALue] <RecordLength>

Indicates the record length, the number of recorded waveform points that build the waveform across the acquisition time. `[:VALue]` can be omitted.

Parameters:

<RecordLength> Number of recorded waveform points.

Range: 1000 to 1E+9
Increment: 2
*RST: 1000
Default unit: pts

Usage: Asynchronous command

Manual operation: See "Record length" on page 129

ACQuire:RESolution <Resolution>

Indicates the time between two waveform points in the record.

Parameters:

<Resolution> A fine resolution with low values produces a more precise waveform record.

Range: 1E-15 to 0.5
Increment: 10E-12
*RST: 500E-6
Default unit: s

Usage: Asynchronous command

Manual operation: See "Resolution" on page 130

ACQuire:SRATe <SampleRate>

Defines the sample rate, that is the number of recorded waveform samples per second.

Parameters:

<SampleRate>
Range: 20 Gsample/s, R&S RTP with serial number ≥ 103000 in interleaved mode (2 channels): 40 Gsample/s
Increment: 1
*RST: 20 Gsample/s
Default unit: Sa/s

Usage: Asynchronous command

ACQuire:SRReal <RealSampleRate>

Sets the number of captured waveform points per second. It considers the samples of the ADC, and the reduction of waveform points by decimation.

If interpolation is not active, the sample rate is the reciprocal value of the resolution and thus also depends on the acquisition time and the record length.

If interpolation is active, the sample rate is limited to the ADC sample rate.

Parameters:

<RealSampleRate>
Range: 20 Gsample/s, R&S RTP with serial number ≥ 103000 in interleaved mode (2 channels): 40 Gsample/s
Increment: 1
*RST: 20 Gsample/s
Default unit: Sa/s

Usage: Asynchronous command

Firmware/software: FW 3.40

Manual operation: See "Sample rate" on page 129

CHANnel<ch>[:WAVeform<wf>][:STATe] <State>

Activates or deactivates a waveform. `[:STATe]` can be omitted.

Up to 3 waveforms per channel can be analyzed.

Suffix:

<ch>
1..4
Selects the input channel.

<wf>
1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:

<State>
OFF | ON
*RST: OFF

Example: `CHAN2:WAV2 ON`
Activates waveform 2 of channel 2 (C2W2).

Usage: Asynchronous command

CHANnel<ch>[:WAVeform<wf>]:TYPE <DecimationMode>

Selects the method to reduce the data stream of the ADC to a stream of waveform points with lower sample rate.

See also:"Decimation" on page 132.

Suffix:

<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:

<DecimationMode> SAMPle | PDETect | HRESolution | RMS

SAMPle
One of n samples in a sample interval of the ADC is recorded as waveform point.

PDETect
Peak Detect: the minimum and the maximum of n samples in a sample interval are recorded as waveform points.

HRESolution
High resolution: The average of n sample points is recorded as waveform point.

RMS
The waveform point is the root mean square of n sample values.

*RST: SAMPle

Usage: Asynchronous command

Manual operation: See "Decimation" on page 132

CHANnel<ch>[:WAVeform<wf>]:ARIThmetics <Arithmetics>

Selects the method to build the resulting waveform from several consecutive acquisitions of the signal. To define the number of acquisitions, use `ACQuire:COUNt`.

See also: "Arithmetic" on page 133.

Suffix:

<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:

<Arithmetics> OFF | ENVelope | AVERage

OFF
The data of the current acquisition is recorded according to the decimation settings.

ENVelope
Detects the minimum and maximum values in an sample interval over a number of acquisitions. To define the reset method, use ...

AVERage
Calculates the average from the data of the current acquisition and a number of acquisitions before.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Arithmetic" on page 133

26.8.4 Fast segmentation

ACQuire:SEGMented:STATe 1406
ACQuire:SEGMented:MAX 1406
ACQuire:SEGMented:AUToreplay 1407

ACQuire:SEGMented:STATe <State>

Switches the fast segmentation mode on and off.

Parameters:
<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Fast segmentation" on page 135

ACQuire:SEGMented:MAX <MaxAcquisitions>

The number of acquisitions in a fast segmentation acquisition series depends on the record length.

Parameters:
<MaxAcquisitions> OFF | ON

ON
Acquires the maximum possible number of acquisitions in a series.

OFF
Acquires the number of acquisitions defined using `ACQuire:COUNt`.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Number of acquisitions" on page 135

ACQuire:SEGMented:AUToreplay <ReplayAfterAcq>

If enabled, the instrument starts processing and displaying the data as soon as the acquisition series is captured completely. Depending on the number of acquisitions, it may take some time until the acquisition series is displayed. If the setting is disabled, the instrument only captures the data and stores it in the sample memory.

Parameters:

<ReplayAfterAcq> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable automatic replay" on page 135

26.8.5 Vertical

CHANnel<ch>:BANDwidth 1407
CHANnel<ch>:COUPling 1408
CHANnel<ch>:CPLing 1408
CHANnel<ch>:FILDesign[:TYPE] 1408
CHANnel<ch>:GND 1409
CHANnel<ch>:IMPedance 1409
CHANnel<ch>:INVert 1409
CHANnel<ch>:OFFSet 1410
CHANnel<ch>:OVERload 1410
CHANnel<ch>:POSition 1411
CHANnel<ch>:RANGe 1411
CHANnel<ch>:SCALe 1412
CHANnel<ch>:STATe 1412
VAUToscale 1413

CHANnel<ch>:BANDwidth <BandwidthLimit>

Selects the bandwidth limit for the indicated channel.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<BandwidthLimit> FULL

FULL
Use full bandwidth.

*RST: FULL

Usage: Asynchronous command

Manual operation: See "Analog" on page 143

CHANnel<ch>:COUPling <Value>

Selects the connection of the indicated channel signal.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<Value> DC | DCLimit | AC

DC
Direct connection with 50 Ω termination, passes both DC and AC components.

DCLimit
Direct connection with 1 MΩ termination, passes both DC and AC components.
Only available if the 1 MΩ adapter is used.

AC
Connection with 1 MΩ termination, removes DC and very low-frequency components.
Only available if the 1 MΩ adapter is used.

*RST: DC

Manual operation: See "Coupling" on page 142

CHANnel<ch>:CPLing <Channel>,<State>

Sets the vertical settings of the coupled channel to the values of the active channel.

Suffix:
<ch> 1..4
Active channel

Parameters:
<Channel> CHAN1 | C1 | CHAN2 | C2 | CHAN3 | C3 | CHAN4 | C4

CHAN1 = C1, CHAN2 = C2, CHAN3 = C3, CHAN4 = C4
Input channel that takes the vertical settings of CHANnel<ch>.

<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Coupled to C1 / C2 / C3 / C4" on page 145

CHANnel<ch>:FILDesign[:TYPE] <FilterType>

Selects the filter that is used to reduce the bandwidth.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:

<FilterType> BRWall | WALL | GAUSsian | BRGauss | BETH | DEF

`BRGauss | DEF`: Brick-Gaussian filter, approximates a Gaussian response.
`BETH`: Bessel-Thomson filter, preserves the waveform shape of signals.

*RST: BRWall (R&S RTO6) or BRGauss (R&S RTP)

Usage: Asynchronous command

Manual operation: See "Filter characteristic" on page 144

CHANnel<ch>:GND <State>

Connects the signal to the ground.

Suffix:

<ch> 1..4

Parameters:

<State> OFF | ON

*RST: OFF

CHANnel<ch>:IMPedance <Impedance>

Sets the impedance of the channel for power calculations and measurements.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<Impedance> Range: 0.1 to 100E+3
Increment: 1
*RST: 50
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Impedance" on page 145

CHANnel<ch>:INVert <InvertChannel>

Turns the inversion of the signal amplitude on or off. To invert means to reflect the voltage values of all signal components against the ground level. If the inverted channel is the trigger source, the instrument triggers on the inverted signal.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:
<InvertChannel> OFF | ON
*RST: OFF

Usage: Asynchronous command

Firmware/software: FW 3.30

Manual operation: See "Invert channel" on page 143

CHANnel<ch>:OFFSet <Offset>

The offset voltage is subtracted to correct an offset-affected signal. The offset of a signal is determined and set by the autoset procedure.

See also: "Offset" on page 142.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<Offset> Negative values move the waveform up, positive values move it down.
Range: Depends on attenuation factors, input coupling, and the offset compensation range of active probes. The nominal offset range for 1:1 attenuation and probe offset compensation = 0 is specified in the specifications document.
Increment: Depends on vertical and probe settings
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Position]" on page 41

CHANnel<ch>:OVERload <Overload>

Retrieves the overload status of the specified channel from the status bit. When the overload problem is solved, the command resets the status bit.

The overload status is returned asynchronously. Therefore, it is not possible to assign an overload to a specific acquisition during continuous acquisition. This assignment is only possible for a single acquisition.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:

<Overload> OFF | ON

Use OFF to reset the overload status bit.

*RST: OFF

Example:

```
ACQuire:COUNt 1
SINGle
CHANnel2:OVERload?
```

Queries the overload status of channel 2 after a single acquisition.

```
CHANnel2:OVERload OFF
```

Resets the overload status bit.

Usage: Asynchronous command

CHANnel<ch>:POSition <Position>

Sets the vertical position of the indicated channel as a graphical value.

Suffix:

<ch> 1..4

Selects the input channel.

Parameters:

<Position> Positive values move the waveform up, negative values move it down.

Range: -5 to 5
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "[Position]" on page 41

CHANnel<ch>:RANGe <Range>

Sets the voltage range across the 10 vertical divisions of the diagram. Use the command alternativly instead of `CHANnel<ch>:SCALe`.

Suffix:

<ch> 1..4

Selects the input channel.

Parameters:

<Range> Voltage range value

Range: Dependencies see below.
Increment: Depends on vertical and probe settings
*RST: 0.5
Default unit: V/div
Depends on attenuation factors. With 1:1 probe and external attenuation = 1, the range is 20 mV to 10 V. If the probe and/or external attenuation is changed, multiply the range values by the attenuation factors.

Usage: Asynchronous command

CHANnel<ch>:SCALe <Scale>

Sets the vertical scale for the indicated channel.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<Scale> Scale value, given in Volts per division.

Range: Depends on attenuation factors, coupling, and instrument model, see below.
Increment: Depends on vertical and probe settings
*RST: 0.05
Default unit: V/div
With 1:1 probe and external attenuation = 1, the vertical scale (input sensitivity) is minimum 2 mV/div (1 mV/div in high definition mode). If the probe and/or external attenuation is changed, multiply the values by the attenuation factors to get the actual scale range.

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 41

CHANnel<ch>:STATe <State>

Switches the channel signal on or off.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "[C<n>]" on page 40

VAUToscale

Performs a vertical autoscaling. Horizontal parameters remain unchanged.

This function is not available in the GUI.

Usage: Event
Asynchronous command

26.8.6 Waveform data

To set the export data format, see `FORMat[:DATA]` on page 1357.

CHANnel<ch>[:WAVeform<wf>]:DATA:HEADer? 1413
CHANnel<ch>[:WAVeform<wf>]:DATA[:VALues]? 1414

CHANnel<ch>[:WAVeform<wf>]:DATA:HEADer?

Returns the header of channel waveform data.

If multichannel export is enabled, the number of returned samples is *Record length * Number of exported waveforms*. See also `EXPort:WAVeform:MULTichannel`.

Suffix:
<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Return values:
<Start> 1. header value: time of the first sample in s

<Stop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For most waveforms the result is 1, for peak detect and envelope waveforms it is 2. If the number is 2, the number of returned values is twice the number of samples (record length).

Example:
```
CALC:MATH1:DATA:HEAD?
-9.477E-008,9.477E-008,200000,1
```
The start time of the data is -9.477E-008 = - 94,77 ns, and the end time of the data is 9.477E-008 = 94,77 ns. The data stream has 200000 values with one value per sample.

Usage: Query only

CHANnel<ch>[:WAVeform<wf>]:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the channel waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster.

To set the export format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,32 | INT,8 | INT,16.

You can retrieve only Y-values (usually voltage values), or X- and Y-values. Use `EXPort:WAVeform:INCXvalues` to define which values are retrieved.

If multichannel export is active (`EXPort:WAVeform:MULTichannel`), the channel suffix is ignored. To select the channels to be exported, use `CHANnel<ch>:EXPortstate`. The Y-values are written in interleaved order, for example, $YCh1_0$; $YCh2_0$; $YCh1_1$; $YCh2_1$... for a 2-channel instrument.

Suffix:

<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Query parameters:

[<Offset>] Number of offset waveform samples to be skipped.
Range: 0 to m. Limit: n + m <= record length

[<Length>] Number of waveform points to be retrieved.
Range: 1 to n. Limit: n + m <= record length

Return values:

<Data> List of comma-separated values according to the format and content settings.

Example: Retrieve the complete channel 1 waveform, only Y-values:

```
FORM ASC
EXP:WAV:INCX OFF
CHAN1:WAV1:DATA?
<-- -0.125000,-0.123016,-0.123016,-0.123016,-0.123016,-0.123016,...
```

Example: Retrieve the first 10 values of the waveform:

```
CHANnel:WAVeform:DATA:VALues? 0,10
<-- -0.10079051554203,-0.098814234137535,-0.098814234137535,
    -0.096837945282459,-0.094861663877964,-0.094861663877964,
    -0.092885382473469,-0.090909093618393,-0.090909093618393,
    -0.088932812213898
```

Example: Skip 5 samples and retrieve the next 5 samples:

```
CHANnel:WAVeform:DATA:VALues? 5,5
<-- -0.094861663877964,-0.092885382473469,-0.090909093618393,
    -0.090909093618393,-0.088932812213898
```

Usage: Query only

26.8.7 Probes

`TRPRobe:...` commands are dedicated commands for the external trigger input.

- Common probe settings....1415
- Micro button and R&S ProbeMeter....1419
- Passive probes....1423
- Active voltage probes....1425
- Modular probes....1428
- Modular probes, deembedding....1432
- Predefined probes....1436
- Current probes....1438
- Optical isolated probes....1439
- Probe attributes....1441
- Probe adapter R&S RT-Z1M....1443

26.8.7.1 Common probe settings

TRPRobe:SETup:STATe?....1415
PROBe<ch>:SETup:STATe?....1415
TRPRobe:SETup:TYPE?....1416
PROBe<ch>:SETup:TYPE?....1416
TRPRobe:SETup:NAME?....1416
PROBe<ch>:SETup:NAME?....1416
TRPRobe:SETup:BANDwidth?....1416
PROBe<ch>:SETup:BANDwidth?....1416
TRPRobe:SETup:ATTenuation[:AUTO]?....1417
PROBe<ch>:SETup:ATTenuation[:AUTO]?....1417
TRPRobe:SETup:GAIN:AUTO?....1417
PROBe<ch>:SETup:GAIN:AUTO?....1417
PROBe<ch>:SETup:OFFSet:AZERo....1417
PROBe<ch>:SETup:OFFSet:USEautozero....1418
CHANnel<ch>:EATScale....1418
CHANnel<ch>:EATTenuation....1418

TRPRobe:SETup:STATe?
PROBe<ch>:SETup:STATe?

Queries if the probe at the specified input channel is active (detected) or not active (not detected). To switch the probe on, use `CHANnel<ch>:STATe`.

Suffix:
<ch> 1..4

Return values:
<State> DETected | NDETected
*RST: NDETected

Usage: Query only
Asynchronous command

TRPRobe:SETup:TYPE?
PROBe<ch>:SETup:TYPE?

Queries the type of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<Type> String containing one of the following values:
– None (no probe detected)
– Passive Probe
– active single-ended

Usage: Query only
Asynchronous command

Manual operation: See "Type, Name, Bandwidth" on page 148

TRPRobe:SETup:NAME?
PROBe<ch>:SETup:NAME?

Queries the name of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<Name> Name string

Usage: Query only
Asynchronous command

Manual operation: See "Type, Name, Bandwidth" on page 148

TRPRobe:SETup:BANDwidth?
PROBe<ch>:SETup:BANDwidth?

Queries the bandwidth of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<Bandwidth> Range: 10000 to 20E+9
*RST: 1E+9
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "Type, Name, Bandwidth" on page 148

TRPRobe:SETup:ATTenuation[:AUTO]?
PROBe<ch>:SETup:ATTenuation[:AUTO]?

Queries the attenuation of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<PrbAttMdAuto> Range: 1E-3 to 1000
*RST: 1
Default unit: V/V

Usage: Query only
Asynchronous command

Manual operation: See "Probe unit, Auto attenuation" on page 150

TRPRobe:SETup:GAIN:AUTO?
PROBe<ch>:SETup:GAIN:AUTO?

Returns the gain of an automatically detected or predefined current probe.

Suffix:
<ch> 1..4
Selects the input channel. The number of channels depends on the instrument.

Return values:
<GainAuto> Range: 1E-3 to 1000
*RST: 1
Default unit: V/A

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:OFFSet:AZERo

Performs an automatic correction of the zero error. If the DUT is ground-referenced, the AutoZero function can improve the measurement results.

See also: "Detect AutoZero, Use AutoZero" on page 148

Suffix:
<ch> 1..4
Selects the input channel.

Usage: Event
Asynchronous command

Manual operation: See "Detect AutoZero, Use AutoZero" on page 148

PROBe<ch>:SETup:OFFSet:USEautozero <UseAutoZero>

Includes the AutoZero offset in measurement results. The auto zero error is detected with `PROBe<ch>:SETup:OFFSet:AZERo`.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<UseAutoZero> OFF | ON
*RST: OFF

Usage: Asynchronous command

Firmware/software: Version 2.70

Manual operation: See "Detect AutoZero, Use AutoZero" on page 148

CHANnel<ch>:EATScale <ExtAttScl>

Sets the attenuation scale for an external divider.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<ExtAttScl> LIN | LOG
*RST: LIN

Usage: Asynchronous command

Manual operation: See "External attenuation: Scale, Attenuation" on page 145

CHANnel<ch>:EATTenuation <ExtAtt>

Sets the attenuation of an external voltage divider that is part of the DUT before the measuring point. The external attenuation is included in the measurement, and the instrument shows the results that would be measured before the divider.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:

<ExtAtt> Values and unit depend on the selected scale (CHANnel<ch>:EATScale).

Range: Linear scale: 0,001 to 1E+6, logarithmic scale: -60 dB to 120 dB
Increment: 0.01
*RST: 1

Usage: Asynchronous command

Manual operation: See "External attenuation: Scale, Attenuation" on page 145

26.8.7.2 Micro button and R&S ProbeMeter

TRPRobe:SETup:MODE....1419
PROBe<ch>:SETup:MODE....1419
TRPRobe:SETup:DISPlaydiff....1420
PROBe<ch>:SETup:DISPlaydiff....1420
TRPRobe:PMETer:VISibility....1421
PROBe<ch>:PMETer:VISibility....1421
TRPRobe:PMETer:RESults:SINGle?....1421
PROBe<ch>:PMETer:RESults:SINGle?....1421
TRPRobe:PMETer:RESults:COMMon?....1422
PROBe<ch>:PMETer:RESults:COMMon?....1422
TRPRobe:PMETer:RESults:DIFFerential?....1422
PROBe<ch>:PMETer:RESults:DIFFerential?....1422
TRPRobe:PMETer:RESults:NEGative?....1422
PROBe<ch>:PMETer:RESults:NEGative?....1422
TRPRobe:PMETer:RESults:POSitive?....1423
PROBe<ch>:PMETer:RESults:POSitive?....1423

TRPRobe:SETup:MODE <Mode>
PROBe<ch>:SETup:MODE <Mode>

Select the action that is started when you press the micro button on the probe head.

See also: "Micro button action" on page 150.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<Mode> RCONtinuous | RSINgle | AUToset | AZERo | SETOffsettomean | SITFile | NOACtion | FINDtriglevel | REPort | PROBemode | PRSetup

RCONtinuous
Run continuous: The acquisition is running as long as the probe button is pressed.

RSINgle
Run single: Starts a defined number of acquisitions (same as [Single] key).

AUTOSET
Starts the autoset procedure.

AZero
AutoZero: performs an automatic correction of the zero error.

SEToffsettomean
Set offset to mean: performs an automatic compensation for a DC component of the input signal.

SITFile
Save Image To File:
Directs the display image to a file. The `MMEMory:NAME` command defines the file name. The file format is defined with `HCOPy:DEVice<m>:LANGuage`.

NOACtion
Nothing is started on pressing the micro button.

FINDtriglevel
Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*. The function is not available for an external trigger source.

REPort
Creates and saves a report of the current results.

PROBemode
Only available for R&S RT-ZM probes. Changes the measurement mode of the probe.

PRSetup
Opens the "Probes Setup" dialog box.

*RST: RCONtinuous

Usage: Asynchronous command

Manual operation: See "Micro button action" on page 150

TRPRobe:SETup:DISPlaydiff <DisplayDiff>
PROBe<ch>:SETup:DISPlaydiff <DisplayDiff>

Selects the input voltages to be measured by the ProbeMeter of an R&S differential active probe.

See also: "Differential active probes" on page 121.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<DisplayDiff> DIFFerential | SINGleended

DIFFerential
Measures differential and common mode voltages

SINGleended
Measures the voltage between the positive/negative signal socket and the ground.

*RST: DIFFerential

Usage: Asynchronous command

Manual operation: See "ProbeMeter results" on page 151

TRPRobe:PMETer:VISibility <Visibility>
PROBe<ch>:PMETer:VISibility <Visibility>

Activates the integrated R&S ProbeMeter of active R&S probes.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<Visibility> OFF | ON

*RST: OFF

Usage: Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "ProbeMeter" on page 151

TRPRobe:PMETer:RESults:SINGle?
PROBe<ch>:PMETer:RESults:SINGle?

Returns the ProbeMeter measurement result of single-ended active R&S probes, the voltage measured between the probe tip and the ground.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<SingleEndResult> Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "ProbeMeter results" on page 151

TRPRobe:PMETer:RESults:COMMon?
PROBe<ch>:PMETer:RESults:COMMon?

Returns the ProbeMeter measurement result of differential active R&S probes: the common mode voltage, which is the mean voltage between the signal sockets and the ground socket.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<CommonModeRes> Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "ProbeMeter results" on page 151

TRPRobe:PMETer:RESults:DIFFerential?
PROBe<ch>:PMETer:RESults:DIFFerential?

Returns the ProbeMeter measurement result of differential active R&S probes, the differential voltage - the voltage between the positive and negative signal sockets.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<DiffModeRes> Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "ProbeMeter results" on page 151

TRPRobe:PMETer:RESults:NEGative?
PROBe<ch>:PMETer:RESults:NEGative?

Returns the ProbeMeter measurement result of differential active R&S probes, the voltage that is measured between the negative signal socket and the ground.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<SingleNegResult> Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "ProbeMeter results" on page 151

TRPRobe:PMETer:RESults:POSitive?
PROBe<ch>:PMETer:RESults:POSitive?

Returns the ProbeMeter measurement result of differential active R&S probes, the voltage that is measured between the positive signal socket and the ground.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<SinglePosResult> Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "ProbeMeter results" on page 151

26.8.7.3 Passive probes

TRPRobe:SETup:ATTenuation:MODE....1424
PROBe<ch>:SETup:ATTenuation:MODE....1424
TRPRobe:SETup:ATTenuation:UNIT....1424
PROBe<ch>:SETup:ATTenuation:UNIT....1424
TRPRobe:SETup:ATTenuation:MANual....1424
PROBe<ch>:SETup:ATTenuation:MANual....1424
TRPRobe:SETup:GAIN:MANual....1425
PROBe<ch>:SETup:GAIN:MANual....1425

TRPRobe:SETup:ATTenuation:MODE <AttenuationMode>
PROBe<ch>:SETup:ATTenuation:MODE <AttenuationMode>

Set the mode to MANual if the instrument does not detect the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<AttenuationMode> AUTO | MANual
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 153

TRPRobe:SETup:ATTenuation:UNIT <AttenuationUnit>
PROBe<ch>:SETup:ATTenuation:UNIT <AttenuationUnit>

Sets the unit for the connected probe type if `PROBe<ch>:SETup:ATTenuation:MODE` on page 1424 is set to `MANual`.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<AttenuationUnit> V | A | W
Voltage probe (V), current probe (A), power probe (W)
*RST: V

Usage: Asynchronous command

Manual operation: See "Vertical unit, Attenuation, Gain" on page 154

TRPRobe:SETup:ATTenuation:MANual <PrbAttMdManual>
PROBe<ch>:SETup:ATTenuation:MANual <ManualAttenuation>

Sets the attenuation for the connected probe if `PROBe<ch>:SETup:ATTenuation:MODE` on page 1424 is set to `MANual`.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<ManualAttenuation> Range: 100E-6 to 10000
Increment: 0.1
*RST: 1
Default unit: Depends on the selected unit

Usage: Asynchronous command

Manual operation: See "Vertical unit, Attenuation, Gain" on page 154

TRPRobe:SETup:GAIN:MANual <PrbGnMdManual>
PROBe<ch>:SETup:GAIN:MANual <GainManual>

Sets the gain of a current probe.

Suffix:
<ch> 1..4
Selects the input channel. The number of channels depends on the instrument.

Parameters:
<GainManual>
Range: 100E-6 to 10000
Increment: 100E-6
*RST: 1
Default unit: V/A

Usage: Asynchronous command

Manual operation: See "Vertical unit, Attenuation, Gain" on page 154

26.8.7.4 Active voltage probes

TRPRobe:SETup:CMOFfset....1425
PROBe<ch>:SETup:CMOFfset....1425
TRPRobe:SETup:ZAXV....1426
PROBe<ch>:SETup:ZAXV....1426
TRPRobe:SETup:ACCoupling....1426
PROBe<ch>:SETup:ACCoupling....1426
PROBe<ch>:SETup:ADVanced:PMToffset....1426
PROBe<ch>:SETup:ADVanced:RANGe....1427
TRPRobe:SETup:ADVanced:FILTer....1427
PROBe<ch>:SETup:ADVanced:FILTer....1427
TRPRobe:SETup:ADVanced:AUDioverload....1427
PROBe<ch>:SETup:ADVanced:AUDioverload....1427

TRPRobe:SETup:CMOFfset <CMOffset>
PROBe<ch>:SETup:CMOFfset <CMOffset>

Sets the common-mode offset. The setting is only available for differential probes.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<CMOffset>
Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "CM offset" on page 156

TRPRobe:SETup:ZAXV <ExtAttRTZA15>
PROBe<ch>:SETup:ZAXV <ExtAttRTZA15>

If you use the external attenuator R&S RT-ZA15 together with one of the differential active probes R&S RT-ZD10/20/30, enable it to include the external attenuation in the measurements.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<ExtAttRTZA15> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Probe attenuator RT-ZA15" on page 156

TRPRobe:SETup:ACCoupling <PrbCplAC>
PROBe<ch>:SETup:ACCoupling <ProbeCouplingAC>

Enables AC coupling in the R&S RT-ZPR20 probe, which removes DC and very low-frequency components. The R&S RT-ZPR20 probe requires 50 Ω input termination, for which the channel AC coupling is not available. The probe setting allows AC coupling also at 50 Ω inputs.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<ProbeCouplingAC> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "AC Coupling" on page 158

PROBe<ch>:SETup:ADVanced:PMToffset

Sets the measured R&S ProbeMeter value as offset. Make sure that the R&S ProbeMeter is active before you use this command.

Available for power rail probes R&S RT-ZPR and optical isolated probes R&S RT-ZISO.

Suffix:
<ch> 1..4
Selects the input channel.

Usage: Event
Asynchronous command

Manual operation: See "Copy to offset" on page 158

PROBe<ch>:SETup:ADVanced:RANGe <ProbeRange>

Sets the voltage range of a R&S RT-ZHD probe.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<ProbeRange> AUTO | MHIGh | MLOW

AUTO
The voltage range is set with `CHANnel<ch>:SCALe`.

MHIGh
Sets the higher voltage range of the connected probe. To query the value, use `PROBe<ch>:SETup:ATTenuation[:AUTO]?`.

MLOW
Sets the lower voltage range of the connected probe. To query the value, use `PROBe<ch>:SETup:ATTenuation[:AUTO]?`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Range" on page 159

TRPRobe:SETup:ADVanced:FILTer <BwFilterSt>
PROBe<ch>:SETup:ADVanced:FILTer <BwFilterSt>

Enables the lowpass filter in the probe control box.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<BwFilterSt> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "BW limit" on page 159

TRPRobe:SETup:ADVanced:AUDioverload <AudibOvrrg>
PROBe<ch>:SETup:ADVanced:AUDioverload <Sound>

Activates the acustic overrange warning in the probe control box.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<Sound> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Buzzer" on page 159

26.8.7.5 Modular probes

The commands of this section are relevant for R&S RT-ZM modular probes. The commands are available in firmware version 3.40 and higher.

The suffix <m> selects the input channel to which the probe is connected.

PROBe<ch>:SETup:ATTenuation:THReshold:MODE....1428
PROBe<ch>:SETup:ATTenuation:THReshold:VALue....1428
TRPRobe:SETup:PRMode....1429
PROBe<ch>:SETup:PRMode....1429
PROBe<ch>:SETup:DMOFfset....1429
PROBe<ch>:SETup:CMOFfset....1430
PROBe<ch>:SETup:NOFFset....1430
PROBe<ch>:SETup:POFFset....1431
PROBe<ch>:SETup:TERM:STATe....1431
PROBe<ch>:SETup:TERM:MODE....1431
PROBe<ch>:SETup:TERM:MEASure?....1432
PROBe<ch>:SETup:TERM:ADJust....1432

PROBe<ch>:SETup:ATTenuation:THReshold:MODE <Mode>

The threshold for switching the probe attenuation can be set automatically by the instrument (AUTO), or you can set it yourself (MANual). If set to MANual, define the threshold value with `PROBe<ch>:SETup:ATTenuation:THReshold:VALue`.

Suffix:
<ch> 1..4

Parameters:
<Mode> AUTO | MANual
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Attenuation threshold" on page 160

PROBe<ch>:SETup:ATTenuation:THReshold:VALue <Threshold>

Sets the threshold value if `PROBe<ch>:SETup:ATTenuation:THReshold:MODE` is set to MANual.

Suffix:
<ch> 1..4

Parameters:

<Threshold>
Range: -0.236 to 0.236
Increment: 1E-3
*RST: 0
Default unit: V

Example:
```
PROB2:SET:ATT:THR:MODE MAN
PROB2:SET:ATT:THR:VAL 0.06
```
Sets the attenuation threshold of the modular probe at channel 2 to 60 mV/div.

Usage: Asynchronous command

Manual operation: See "Attenuation threshold" on page 160

TRPRobe:SETup:PRMode <PrbMeasMd>
PROBe<ch>:SETup:PRMode <MeasMode>

Sets the measurement mode of the modular probe.

Suffix:

<ch> 1..4

Parameters:

<MeasMode> DMODe | CMODe | PMODe | NMODe

DMODe
Differential mode input voltage (V_{dm}), the voltage between the positive and negative input terminal.

CMODe
Common mode input voltage (V_{cm}) , the mean voltage between the positive and negative input terminal vs. ground.

PMODe
Positive single-ended input voltage (V_p). the voltage between the positive input terminal and ground.

NMODe
Negative single-ended input voltage (V_N). the voltage between the negative input terminal and ground.

*RST: DMODe

Usage: Asynchronous command

Manual operation: See "Probe mode" on page 161

PROBe<ch>:SETup:DMOFfset <DMOffset>

Sets the differential offset to compensate a DC voltage applied to the positive and the negative input terminal.

Suffix:

<ch> 1..4

Parameters:

<DMOffset> In "DM" probe mode (`DMODe`), this offset is used as channel offset and considered automatically for correction.

Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM Offset, CM Offset, P Offset, N Offset" on page 161

PROBe<ch>:SETup:CMOFfset <CMOffset>

Sets the common-mode offset. The setting is only available for differential probes.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<CMOffset> Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "CM offset" on page 156

PROBe<ch>:SETup:NOFFset <NOffset>

Sets the negative offset to compensate a DC voltage applied to the negative input terminal (Vp) referenced to ground.

Suffix:

<ch> 1..4

Parameters:

<NOffset> In "N" probe mode (`NMODe`), this offset is used as channel offset and considered automatically for correction.

Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM Offset, CM Offset, P Offset, N Offset" on page 161

PROBe<ch>:SETup:POFFset <POffset>

Sets the positive offset to compensate a DC voltage applied to the positive input terminal (Vp) referenced to ground.

Suffix:
<ch> 1..4

Parameters:
<POffset> In "P" probe mode (`PMODe`), this offset is used as channel offset and considered automatically for correction.

Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM Offset, CM Offset, P Offset, N Offset" on page 161

PROBe<ch>:SETup:TERM:STATe <VoltageState>

Activates the instrument control of the termination voltage.

Suffix:
<ch> 1..4

Parameters:
<VoltageState> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 164

PROBe<ch>:SETup:TERM:MODE <Mode>

Setting the termination voltage is relevant if you use the R&S RT-ZMA40 SMA module.

You can set a termination voltage to correct the internal 50 Ω termination of the SMA module by the common mode voltage. To control the termination voltage by the instrument, connect the VT terminal of the R&S RT-ZM probe amplifier to the VT terminal of the SMA module using the red DC lead (see R&S RT-ZM User Manual).

Suffix:
<ch> 1..4

Parameters:
<Mode> AUTO | MANual

AUTO
The instrument uses the measured common mode voltage to control the termination.

MANual
Enter the voltage to be used for termination.
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 164

PROBe<ch>:SETup:TERM:MEASure?

Returns the measured common mode voltage.

Suffix:
<ch> 1..4

Return values:
<VoltageMeas> Common mode voltage
Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurement" on page 164

PROBe<ch>:SETup:TERM:ADJust <VoltageAdj>

Sets the voltage to be used for termination correction.

Suffix:
<ch> 1..4

Parameters:
<VoltageAdj> Correction voltage
Range: -100E+24 to 100E+24
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Adjustment" on page 164

26.8.7.6 Modular probes, deembedding

The commands of this section are relevant for R&S RT-ZM modular probes when used for measurements on signal frequencies of 4 GHz and higher. The commands are available in firmware version 4.00 and higher.

See also: `PROBe<ch>:SETup:PRMode` on page 1429

PROBe<ch>:DEEMbedding:PMODe....1433
PROBe<ch>:DEEMbedding:TIPModule[:SELect]....1433
PROBe<ch>:DEEMbedding:TIPModule:CSPFile....1433
PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule....1434
PROBe<ch>:DEEMbedding:BANDwidth....1434
PROBe<ch>:DEEMbedding:MODE....1435
PROBe<ch>:DEEMbedding:REMProbeload....1435
PROBe<ch>:DEEMbedding:LOAD:IMPedance....1436

PROBe<ch>:DEEMbedding:PMODe <MeasMode>

Suffix:
<ch> 1..4

Parameters:
<MeasMode> DMODe | CMODe | PMODe | NMODe

See `PROBe<ch>:SETup:PRMode` on page 1429.

*RST: DMODe

Usage: Asynchronous command

PROBe<ch>:DEEMbedding:TIPModule[:SELect] <ProbeTipZMA>

Selects the tip module that is used for measurement.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

Parameters:
<ProbeTipZMA> NONE | ZMA10 | ZMA12 | ZMA14 | ZMA15 | ZMA30 | ZMA40 | ZMA50 | CUST

ZMA30 | ZMA40
Define additional settings with `PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule`.

CUST
Load the deembedding file with

*RST: ZMA10

Usage: Asynchronous command

Manual operation: See "Probe tip module, Pin spacing, Open" on page 162

PROBe<ch>:DEEMbedding:TIPModule:CSPFile <SParamFile>

Sets the file name, file format and path of the S-parameter file, and loads the S-parameters of user-defined tip modules.

Suffix:
<ch> 1..4

Parameters:
<SParamFile> String with path, file name, and extension.

Usage: Asynchronous command

Manual operation: See "Probe tip module, Pin spacing, Open" on page 162

PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule <Value>

Defines additional settings for some tip modules:

For the browser module R&S RT-ZMA30, measure the space between the pins, and select the appropriate value.

If R&S RT-ZMA40 is selected, choose the used submodule: semi-rigid cables or none.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

<n> 30 (R&S RT-ZMA30) or 40 (R&S RT-ZMA40)

Parameters:
<Value> D16 | D25 | D45 | D75 | NONE | SRCS

For R&S RT-ZMA30:
D16 = 1.6 mm
D25 = 2.5 mm
D45 = 4.5 mm
D75 = 7.5 mm
For R&S RT-ZMA40:
NONE = no submodule
SRCS = semi-rigid cables

Usage: Asynchronous command

Manual operation: See "Probe tip module, Pin spacing, Open" on page 162

PROBe<ch>:DEEMbedding:BANDwidth <ProbeBandwidth>

Sets the maximum bandwidth until which the signal is corrected. This maximum value is the minimum bandwidth value of probe, probe tip and oscilloscope bandwidth, and can not be higher than the highest frequency in a used S-parameter file. Consider that most tip modules support the full bandwidth of the probe amplifier, but some tip modules have limited bandwidth.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

Parameters:
<ProbeBandwidth> Range: 10000 to 16E+9
Increment: 10
*RST: 4E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Effective bandwidth" on page 163

PROBe<ch>:DEEMbedding:MODE <Mode>

Sets the probing mode.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

Parameters:
<Mode> PROBing | TERMinating

PROBing
For measurements with a high-ohmic probe and measure on an existing line in parallel to the load.

TERMinating
For measurements if the measuring equipment is the load of the line.

*RST: PROBing

Usage: Asynchronous command

Manual operation: See "Probing, Terminating" on page 162

PROBe<ch>:DEEMbedding:REMProbeload <RemovePrbLoad>

Removes the loading of the probe if `DEEMbedding<de>:COMPonent<n>:MODE` is set to `PROBing`.

If the probe loading is removed, you see the signal that would be at the measurement point if the probe's input impedance is ideal (infinite impedance).

Without removing the loading, you see the real signal at the measurement point, including the probe loading.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

Parameters:
<RemovePrbLoad> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Remove probe load" on page 163

PROBe<ch>:DEEMbedding:LOAD:IMPedance <SrcImp>

Shows the source impedance of the DUT. If an R&S RT-ZM probe is connected, the value depends on the selected probe mode: common mode, differential, or single-ended measurement.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

Parameters:
<SrcImp> Range: 100E-15 to 1E+9
Increment: 1
*RST: 50
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Source impedance" on page 163

26.8.7.7 Predefined probes

TRPRobe:SETup:ATTenuation:DEFProbe 1436
PROBe<ch>:SETup:ATTenuation:DEFProbe 1436
PROBe<ch>:SETup:OFFSet:TOMean 1437
PROBe<ch>:SETup:OPTical:CONGain 1437
PROBe<ch>:SETup:OPTical:WAVLength 1438

TRPRobe:SETup:ATTenuation:DEFProbe <SelcPredefPrb>
PROBe<ch>:SETup:ATTenuation:DEFProbe <PredefinedProbe>

Selects a predefined probe. These are probes that are not recognized automatically but the parameters of the probe are known to the instrument.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<PredefinedProbe> ZC10 | ZC20 | ZC30 | ZD01A100 | ZD01A1000 | ZZ80 | FREE | ZS10L | ZD02 | ZD08 | ZC02100 | ZC021000 | ZC03 | ZD002A10 | ZD002A100 | ZD003A20 | ZD003A200 | ZC3110 | ZC311 | ZC3101 | NP1544B | NP1544B50

ZC10 | ZC20 | ZC30 | ZZ80 | ZS10L | ZD02 | ZD08 | ZC03
Type of the probe

ZD01A100 | ZD01A1000 | ZD002A10 | ZD002A100 | ZD003A20 | ZD003A200
High voltage differential probes R&S RT-ZD0xx, attenuation ratio according to the setting on the probe.
A10 = 10:1
A20 = 20:1
A100 = 100:1
A200 = 200:1
A1000 = 1000:1

ZC02100 | ZC021000
Current probes 100 A or 1000 A according to the setting on the probe.

FREE
Any other probe that is not recognized by the instrument.

*RST: FREE

Usage: Asynchronous command

Manual operation: See "Predefined probe" on page 167

PROBe<ch>:SETup:OFFSet:TOMean

Performs an automatic compensation for a DC component of the specified input signal using the result of a background mean measurement.

Suffix:
<ch> 1..4
Selects the input channel.

Usage: Event
Asynchronous command

Manual operation: See "Offset to mean" on page 168

PROBe<ch>:SETup:OPTical:CONGain <ConversionGain>

Returns or sets the conversion gain, depending on `PROBe<ch>:SETup:OPTical:WAVLength`. The setting is relevant for optic receivers and probes.

Suffix:
<ch> 1..4

Parameters:
<ConversionGain>
Range: -1000 to -1
Increment: 1
*RST: -200
Default unit: V/W

Usage: Asynchronous command

Manual operation: See "Conversion gain" on page 168

PROBe<ch>:SETup:OPTical:WAVLength <Wavelength>

Sets the wavelength of the optical signal. The setting is relevant for optic receivers and probes.

Suffix:
<ch> 1..4

Parameters:
<Wavelength> NM800 | NM1300 | NM1550 | CUSTOM

NM800 | NM1300 | NM1550
Predefined wavelength. To query the corresponding conversion gain, use `PROBe<ch>:SETup:OPTical:CONGain?`.

CUSTOM
Set the required conversion gain with `PROBe<ch>:SETup:OPTical:CONGain`.

*RST: NM800

Usage: Asynchronous command

Manual operation: See "Wavelength" on page 168

26.8.7.8 Current probes

To set up R&S RT-ZC10 and R&S RT-ZC20, use `PROBe<ch>:SETup:ATTenuation:DEFProbe`.

TRPRobe:SETup:DEGauss....1438
PROBe<ch>:SETup:DEGauss....1438
PROBe<ch>:SETup:OFFSet:STPRobe....1439
PROBe<ch>:SETup:OFFSet:ZADJust....1439

TRPRobe:SETup:DEGauss
PROBe<ch>:SETup:DEGauss

Demagnetizes the core if it has been magnetized by switching the power on and off, or by an excessive input. Always carry out demagnetizing before measurement. The demagnetizing process takes about one second.

Suffix:
<ch> 1..4
Selects the input channel.

Usage: Event
Asynchronous command

Firmware/software: FW 2.50

Manual operation: See "DeGauss" on page 170

PROBe<ch>:SETup:OFFSet:STPRobe

Saves the zero adjust value in the probe box. If you connect the probe to another channel or to another R&S RTx oscilloscope, the value is read out again.

Suffix:
<ch> 1..4
Selects the input channel.

Usage: Event
Asynchronous command

Manual operation: See "Save to probe" on page 171

PROBe<ch>:SETup:OFFSet:ZADJust <ZroAdjVal>

set the waveform to zero position. It corrects the effect of a voltage offset or temperature drift. To set the value by the instrument, use `PROBe<ch>:SETup:OFFSet:AZERo`.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<ZroAdjVal> Range: -100 to 100
Increment: 0.1
*RST: 0
Default unit: %

Usage: Asynchronous command

Firmware/software: FW 2.50

Manual operation: See "Zero adjust" on page 171

26.8.7.9 Optical isolated probes

The commands of this section are relevant for optical isolated probes. The commands are available in firmware versions 5.40 and higher.

The suffix <ch> selects the input channel to which the probe is connected.

PROBe<ch>:SETup:LASTate? 1439
PROBe<ch>:SETup:UNIT 1440
PROBe<ch>:SETup:ALIGnment:GAIN:EXECute 1440
PROBe<ch>:SETup:ALIGnment:ZERO:EXECute 1440
PROBe<ch>:SETup:ALIGnment:STATe? 1441
PROBe<ch>:SETup:ALIGnment:WRITe 1441
PROBe<ch>:SETup:RDEFaults 1441

PROBe<ch>:SETup:LASTate?

Returns the current status of the laser.

Suffix:
<ch> 1..4

Return values:
<LaserState> GOOD | WARNing | CRITical

GOOD
The laser is working.

WARNing
The laser needs service, but is still working.

CRITical
Defective laser, send to your Rohde & Schwarz service center.

*RST: GOOD

Usage: Query only
Asynchronous command

Manual operation: See "Laser state" on page 173

PROBe<ch>:SETup:UNIT <SelectUnit>

Sets the unit of the R&S RT-ZISO signal.

Suffix:
<ch> 1..4

Parameters:
<SelectUnit> V | A | W

*RST: V

Usage: Asynchronous command

Manual operation: See "Input unit" on page 172

PROBe<ch>:SETup:ALIGnment:GAIN:EXECute

Corrects the zero point error and the gain error of the R&S RT-ZISO probe.

To write the alignment result to the non-volatile flash of the probe, use `PROBe<ch>:SETup:ALIGnment:WRITe`.

Suffix:
<ch> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Alignment Gain/Zero-Error" on page 173

PROBe<ch>:SETup:ALIGnment:ZERO:EXECute

Performs a self-alignment and corrects the zero point error of the R&S RT-ZISO probe.

To write the alignment result to the non-volatile flash of the probe, use `PROBe<ch>:SETup:ALIGnment:WRITe`.

Suffix:
<ch> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Alignment Zero-Error" on page 173

PROBe<ch>:SETup:ALIGnment:STATe?

Returns the result of the probe alignment.

Suffix:
<ch> 1..4

Return values:
<AlignmentState> PASS | FAIL
*RST: FAIL

Usage: Query only
Asynchronous command

Manual operation: See "Alignment Zero-Error" on page 173

PROBe<ch>:SETup:ALIGnment:WRITe

The command writes the alignment result to the non-volatile flash of the probe.

Suffix:
<ch> 1..4

Usage: Event
Asynchronous command

PROBe<ch>:SETup:RDEFaults

Resets the probe settings to default values.

Suffix:
<ch> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Restore default values" on page 174

26.8.7.10 Probe attributes

TRPRobe:ID:SWVersion? 1442
PROBe<ch>:ID:SWVersion? 1442
TRPRobe:ID:PRDate? 1442

PROBe<ch>:ID:PRDate? 1442
TRPRobe:ID:PARTnumber? 1442
PROBe<ch>:ID:PARTnumber? 1442
TRPRobe:ID:SRNumber? 1443
PROBe<ch>:ID:SRNumber? 1443
TRPRobe:SETup:CAPacitance? 1443
PROBe<ch>:SETup:CAPacitance? 1443
TRPRobe:SETup:IMPedance? 1443
PROBe<ch>:SETup:IMPedance? 1443

TRPRobe:ID:SWVersion?
PROBe<ch>:ID:SWVersion?

Queries the version of the probe firmware.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<Softwareversion> Version number in a string.

Usage: Query only
Asynchronous command

TRPRobe:ID:PRDate?
PROBe<ch>:ID:PRDate?

Queries the production date of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<ProductionDate> Date in a string.

Usage: Query only
Asynchronous command

TRPRobe:ID:PARTnumber?
PROBe<ch>:ID:PARTnumber?

Queries the R&S part number of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<PartNumber> Part number in a string.

Usage: Query only
Asynchronous command

TRPRobe:ID:SRNumber?
PROBe<ch>:ID:SRNumber?

Queries the serial number of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<SerialNo> Serial number in a string.

Usage: Query only
Asynchronous command

TRPRobe:SETup:CAPacitance?
PROBe<ch>:SETup:CAPacitance?

Queries the input capacitance of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<InputCapacity> Range: 100E-15 to 1E-9
*RST: 10E-12
Default unit: F

Usage: Query only
Asynchronous command

TRPRobe:SETup:IMPedance?
PROBe<ch>:SETup:IMPedance?

Queries the termination of the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<InputImpedance> Range: 0 to 1E+9
*RST: 50
Default unit: Ω

Usage: Query only
Asynchronous command

26.8.7.11 Probe adapter R&S RT-Z1M

PROBe<ch>:CONVerter:TYPE? 1444
PROBe<ch>:CONVerter:BANDwidth 1444
PROBe<ch>:CONVerter:SELFalign 1444

PROBe<ch>:CONVerter:TYPE?

Queries the adapter status, whether the instrument identified the adapter.

Suffix:
<ch> 1..4
Selects the input channel.

Return values:
<Type> NONE | Z1M
*RST: NONE

Usage: Query only
Asynchronous command

PROBe<ch>:CONVerter:BANDwidth <BandwidthLimit>

Sets the bandwidth limit of the R&S RT-Z1M probe adapter.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<BandwidthLimit> FULL | B200 | B20
B200 = 200 MHz, B20 = 20 MHz
*RST: FULL

Usage: Asynchronous command

Manual operation: See "Bandwidth limit" on page 180

PROBe<ch>:CONVerter:SELFalign

Starts the self-alignment of the R&S RT-Z1M probe adapter. When the adapter is detached from the oscilloscope, the values of the self-alignment are discarded, and the original factory-alignment is reloaded. Thus, repeat the self-alignment when you reattach the probe.

Suffix:
<ch> 1..4
Selects the input channel.

Example:
```
PROBe2:CONVerter:TYPE?
<-- Z1M
PROBe2:CONVerter:BANDwidth B200
PROBe2:CONVerter:SELFalign
```

Checks the adapter state on channel 2, sets the bandwidth limit to 200 MHz, and starts the self-alignment of the adapter.

Usage: Event
Asynchronous command

Manual operation: See "Start alignment" on page 180

26.8.8 R&S RT-ZVC probe

- Probe setup....1445
- Resolution and data....1457

26.8.8.1 Probe setup

In the `ZVC:Z<m>:` commands, the following suffixes are used:

- `<m>` selects the multi-channel probe. The available range is `1..2`
- `<n>` selects the voltage or current channel. The available range depends on the probe characteristics and is `1..2` or `1..4`

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

ZVC:BANDwidth....1446
ZVC:TYPE....1446
ZVC:Z<m>:I<n>:BANDwidth?....1446
ZVC:Z<m>:I<n>:IMPedance....1447
ZVC:Z<m>:I<n>:OFFSet....1447
ZVC:RESCoupled....1448
ZVC:Z<m>:I<n>:OVERload:RSTO....1448
ZVC:Z<m>:I<n>:OVERload:VALue?....1449
ZVC:Z<m>:I<n>:POSition....1449
ZVC:Z<m>:I<n>:SCALe....1449
ZVC:Z<m>:I<n>:SHUNt:EVALue....1450
ZVC:Z<m>:I<n>:SHUNt:MODE....1450
ZVC:Z<m>:I<n>:SHUNt:MAXCurrent....1450
ZVC:Z<m>:I<n>:SHUNt:MXCValue?....1451
ZVC:Z<m>:I<n>:SHUNt:MAXVoltage....1451
ZVC:Z<m>:I<n>:SKEW....1451
ZVC:Z<m>:I<n>[:STATe]....1452
ZVC:Z<m>:V<n>:BANDwidth?....1452
ZVC:Z<m>:V<n>:IMPedance....1453
ZVC:Z<m>:V<n>:OFFSet....1453
ZVC:Z<m>:V<n>:OVERload:RSTO....1453
ZVC:Z<m>:V<n>:OVERload:VALue?....1453

ZVC:Z<m>:V<n>:POSition....1454
ZVC:Z<m>:V<n>:SCALe....1454
ZVC:Z<m>:V<n>:SKEW....1455
ZVC:Z<m>:V<n>[:STATe]....1455
ZVC:Z<m>:ID:NAME?....1455
ZVC:Z<m>:ID:PARTnumber?....1455
ZVC:Z<m>:ID:SRNumber?....1456
ZVC:Z<m>:ID:SWVersion?....1456
ZVC:Z<m>:I<n>:ZERComp:DETect....1456
ZVC:Z<m>:I<n>:ZERComp:USE....1456
ZVC:Z<m>:I<n>:ZERComp:STATe?....1457

ZVC:BANDwidth <Bandwidth>

Sets the bandwidth limit of the probe. The bandwidth specifies the maximum frequency at which a purely sinusoidal signal is still transferred at 89 % (0.1 dB) of its amplitude.

Parameters:

<Bandwidth>
Range: 5000 to 1E+6
Increment: 5000
*RST: 1E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 183

ZVC:TYPE <DecimationMode>

Sets the decimation mode for the R&S RT-ZVC probe. Decimation reduces the data stream of the ADC to a stream of waveform points with lower sample rate and a less precise time resolution.

Parameters:

<DecimationMode>
SAMPle | PDETect | HRESolution
*RST: SAMPle

Usage: Asynchronous command

Manual operation: See "Decimation mode" on page 183

ZVC:Z<m>:I<n>:BANDwidth?

Queries the bandwidth of the current channel. You can set the probe bandwidth with `ZVC:BANDwidth`.

The bandwidth of some current channels is restricted to 300KHz due to their vertical settings.

Suffix:

<m> 1..2

<n> 1..4

Return values:

<Bandwidth> Range: 5000 to 1E+6
Increment: 5000
*RST: 1E+6
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "Bandwidth" on page 188

ZVC:Z<m>:I<n>:IMPedance <MeasImp>

Sets the current impedance of the probe channel for power calculations and measurements.

Suffix:

<m> 1..2

<n> 1..4

Parameters:

<MeasImp> Range: 1 to 100E+3
Increment: 1
*RST: 50
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Measurement Impedance" on page 184

ZVC:Z<m>:I<n>:OFFSet <VerticalOffset>

Sets the offset current for the current channel.

Suffix:

<m> 1..2

<n> 1..4

Parameters:

<VerticalOffset> Range: -1 to 1
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 182

ZVC:RESCoupled <CoupleToAnalog>

Sets the resolution of all R&S RT-ZVC channels.

Parameters:

<CoupleToAnalog> OFF | ON

ON
The resolution of the analog channels is applied to R&S RT-ZVC channels. The signal is automatically interpolated or decimated to get the analog resolution.

OFF
The resolution of R&S RT-ZVC channels is set in a way so that the record length of the waveforms is minimum 1000 samples.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Couple resolution" on page 184

ZVC:Z<m>:I<n>:OVERload:RSTO <Settings>

Resets the overload indication at the probe.

In internal shunt mode (`ZVC:Z<m>:I<n>:SHUNt:MODE` is set to `INTShunt`), chooses whether to keep the operation range adjusted by the R&S RT-ZVC during overload or to restore the original settings for the given current channel.

In external shunt mode (`ZVC:Z<m>:I<n>:SHUNt:MODE` is set to `EXTShunt`), there is no adjustment of the operation range during overload.

Suffix:

<m> 1..2

<n> 1..4

Setting parameters:

<Settings> ADJusted | ORIGinal

ADJusted
The operation range that is automatically adjusted by the probe during overload is kept.
In internal shunt mode, during an overload at a current channel, the probe switches automatically to the next higher range. If the 10A range is also exceeded, the amperemeter switches to external shunt mode to protect the probe against permanent damage.

ORIGinal
The original operation range is restored as before the overload and the adjustment of the operation range.

Usage: Setting only
Asynchronous command

Manual operation: See "Reset Overload" on page 189

ZVC:Z<m>:I<n>:OVERload:VALue?

Queries if an overload of the current channel was detected.

Suffix:
<m> 1..2

<n> 1..4

Return values:
<Overload> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

ZVC:Z<m>:I<n>:POSition <VertPosi>

Sets the vertical position of the indicated current channel as a graphical value.

Suffix:
<m> 1..2

<n> 1..4

Parameters:
<VertPosi> Range: -5 to 5
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Position" on page 188

ZVC:Z<m>:I<n>:SCALe <VerticalScale>

Sets the vertical scale for the current channel in Volts per division. Increasing the scale compresses the display of the signal.

Suffix:
<m> 1..2

<n> 1..4

Parameters:
<VerticalScale> Range: 1E-15 to 10E+24
Increment: 10E-6
*RST: 3
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Scale" on page 182

ZVC:Z<m>:I<n>:SHUNt:EVALue <ExtShuntVal>

Defines the value of the external shunt resistor to calculate the correct current values.

Suffix:
<m> 1..2

<n> 1..4

Parameters:
<ExtShuntVal> Range: 10E-6 to 10000
Increment: 0.02
*RST: 1
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Shunt value" on page 189

ZVC:Z<m>:I<n>:SHUNt:MODE <ShuntMode>

Sets the internal or external shunt mode.

Suffix:
<m> 1..2

<n> 1..4

Parameters:
<ShuntMode> INTShunt | EXTShunt
*RST: INTShunt

Usage: Asynchronous command

Manual operation: See "Shunt mode" on page 188

ZVC:Z<m>:I<n>:SHUNt:MAXCurrent <IntShuntMeasRg>

Sets the maximum current and the internal shunt value.

The internal shunt and maximum current parameter pairs are defined as described in the table below.

Parameter	Internal shunt	Maximum current
A100r01	10 A	10 mΩ
A40R01	4.5 A	10 mΩ
A45M10r	45 mA	10 Ω
A4M510r	4.5 mA	10 Ω
A45u10k	45 µA	10 KΩ
A4U510k	4.5 µA	10 KΩ

Suffix:
<m> 1..2
<n> 1..4

Parameters:
<IntShuntMeasRg> A100r01 | A40R01 | A45M10r | A4M510r | A45u10k | A4U510k
*RST: A100r01

Usage: Asynchronous command

Manual operation: See "Max current / shunt" on page 189

ZVC:Z<m>:I<n>:SHUNt:MXCValue?

Queries the maximum current.

Suffix:
<m> 1..2
<n> 1..4

Return values:
<MaxCurrVal> Default unit: A

Usage: Query only
Asynchronous command

Manual operation: See "Max current" on page 189

ZVC:Z<m>:I<n>:SHUNt:MAXVoltage <ExtShuntMeasRg>

Sets the maximum voltage for the external shunt.

Suffix:
<m> 1..2
<n> 1..4

Parameters:
<ExtShuntMeasRg> V450m | V045m
V450m: 450 mV
V045m: 45 mV
*RST: V450m

Usage: Asynchronous command

Manual operation: See "Max voltage" on page 189

ZVC:Z<m>:I<n>:SKEW <DeskewOffset>

Sets the skew offset value for the current probe channel. This is a delay value, that is known from the circuit specifics but cannot be compensated by the instrument automatically.

Suffix:
<m> 1..2
<n> 1..4

Parameters:
<DeskewOffset> Range: -6E-6 to 6E-6
Increment: 200E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Skew" on page 188

ZVC:Z<m>:I<n>[:STATe] <State>

Enables the corresponding current channel of the probe.

Suffix:
<m> 1..2
<n> 1..4

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 182

ZVC:Z<m>:V<n>:BANDwidth?

Queries the bandwidth of the voltage channel. You can set the probe bandwidth with `ZVC:BANDwidth`.

Suffix:
<m> 1..2
<n> 1..4

Return values:
<Bandwidth> Range: 5000 to 1E+6
Increment: 5000
*RST: 1E+6
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "Bandwidth" on page 186

ZVC:Z<m>:V<n>:IMPedance <MeasImp>

Sets the voltage impedance of the probe channel for power calculations and measurements.

Suffix:
<m> 1..2

<n> 1..4

Parameters:
<MeasImp>
Range: 1 to 100E+3
Increment: 1
*RST: 50
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Measurement Impedance" on page 184

ZVC:Z<m>:V<n>:OFFSet <VerticalOffset>

Sets the vertical offset for the voltage channel.

Suffix:
<m> 1..2

<n> 1..4

Parameters:
<VerticalOffset>
Range: -1 to 1
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 182

ZVC:Z<m>:V<n>:OVERload:RSTO

Resets the overload indication at the probe.

Suffix:
<m> 1..2

<n> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Reset Overload" on page 187

ZVC:Z<m>:V<n>:OVERload:VALue?

Queries if an overload of the voltage channel was detected.

Suffix:
<m> 1..2
<n> 1..4

Return values:
<Overload> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

ZVC:Z<m>:V<n>:POSition <VertPosi>

Sets the vertical position of the indicated voltage channel as a graphical value.

Suffix:
<m> 1..2
<n> 1..4

Parameters:
<VertPosi> Range: -5 to 5
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Position" on page 186

ZVC:Z<m>:V<n>:SCALe <VerticalScale>

Sets the vertical scale for the voltage channel in Volts per division. Increasing the scale compresses the display of the signal.

Suffix:
<m> 1..2
<n> 1..4

Parameters:
<VerticalScale> Range: 1E-15 to 10E+24
Increment: 10E-6
*RST: 3
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Scale" on page 182

ZVC:Z<m>:V<n>:SKEW <DeskewOffset>

Sets the skew offset value for the voltage probe channel. This is a delay value, that is known from the circuit specifics but cannot be compensated by the instrument automatically.

Suffix:
<m> 1..2

<n> 1..4

Parameters:
<DeskewOffset> Range: -6E-6 to 6E-6
Increment: 200E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Skew" on page 186

ZVC:Z<m>:V<n>[:STATe] <State>

Enables the corresponding voltage channel of the probe.

Suffix:
<m> 1..2

<n> 1..4

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 182

ZVC:Z<m>:ID:NAME?

Queries the name of the probe.

Suffix:
<m> 1..2

Return values:
<Name>

Usage: Query only
Asynchronous command

ZVC:Z<m>:ID:PARTnumber?

Queries the R&S part number of the probe.

Suffix:
<m> 1..2

Return values:
<PartNumber>

Usage: Query only
Asynchronous command

ZVC:Z<m>:ID:SRNumber?

Queries the serial number of the probe.

Suffix:
<m> 1..2

Return values:
<SerialNo>

Usage: Query only
Asynchronous command

ZVC:Z<m>:ID:SWVersion?

Queries the version of the probe firmware.

Suffix:
<m> 1..2

Return values:
<Softwareversion>

Usage: Query only
Asynchronous command

ZVC:Z<m>:I<n>:ZERComp:DETect

Measures the zero offset, the mean value on a currentless DUT. If temperature changes, or if you change the shunt or other probe settings, repeat the measurement.

Suffix:
<m> 1..2

<n> 1..4

Usage: Event
Asynchronous command

Manual operation: See "ZeroComp" on page 185

ZVC:Z<m>:I<n>:ZERComp:USE <UseZeroComp>

Enables the automatic compensation of the measured zero offset.

Suffix:
<m> 1..2
<n> 1..4

Parameters:
<UseZeroComp> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use" on page 185

ZVC:Z<m>:I<n>:ZERComp:STATe?

Returns the status of the zero compensation of the indicated current channel.

Suffix:
<m> 1..2
<n> 1..4

Return values:
<ZeroCompState> OFF | ON
ON: Zero compensation is used
Off: Zero Compensation is not used
*RST: OFF

Usage: Query only
Asynchronous command

Manual operation: See "Zero Comp" on page 183

26.8.8.2 Resolution and data

ACQuire:POINts:ZVALue? 1457
ACQuire:ZRESolution? 1458
ZVC:Z<m>:I<n>:DATA:HEADer? 1458
ZVC:Z<m>:V<n>:DATA:HEADer? 1458
ZVC:Z<m>:I<n>:DATA[:VALues]? 1458
ZVC:Z<m>:V<n>:DATA[:VALues]? 1458

ACQuire:POINts:ZVALue?

Returns the current record length used by the R&S RT-ZVCmulti-channel power probe channel.

Return values:
<ZUIRecordLength> Range: 1000 to 400E+6
Increment: 2
*RST: 1000
Default unit: pts

Usage: Query only
Asynchronous command

ACQuire:ZRESolution?

Returns the current resolution of the R&S RT-ZVCmulti-channel power probe channel.

Return values:

<ZUIResolution> Range: 1E-15 to 0.5
Increment: 10E-12
*RST: 500E-6
Default unit: s

Usage: Query only
Asynchronous command

ZVC:Z<m>:I<n>:DATA:HEADer?
ZVC:Z<m>:V<n>:DATA:HEADer?

Return the header of amperemeter and voltmeter waveform data.

Suffix:

<m> 1..2

<n> 1..4

Return values:

<Start> 1. header value: time of the first sample in s

<Stop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For most waveforms the result is 1, for peak detect and envelope waveforms it is 2. If the number is 2, the number of returned values is twice the number of samples (record length).

Example:

```
ZVC:Z2:V2:DATA:HEADer?
<-- -0.0001,0.0001,1000,1
```

Usage: Query only

ZVC:Z<m>:I<n>:DATA[:VALues]?
ZVC:Z<m>:V<n>:DATA[:VALues]?

Return the waveform data of the amperemeter and voltmeter for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

To set the export format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,32 | INT,8 | INT,16. Export of raw data is not supported.

Suffix:

<m> 1..2

<n> 1..4

Return values:

<Data> Liste of comma-separated values according to the format setting.

Example:

```
FORMat:DATA ASCii
ZVC:Z2:V2:DATA:HEADer?
<-- -0.0001,0.0001,1000,1
ZVC:Z2:V2:DATA:VaLues?
<-- 0.00083049136446789,-0.0042279558256269,-0.0076707201078534,
-0.011294682510197,-0.015915233641863,-0.018905002623796,
-0.022423267364502, ….
```

1000 values are returned.

Usage: Query only

26.8.9 Differential signals

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

DIFFerential<m>:STATe....1460
DIFFerential<m>:PSIGnal[:SELect]....1460
DIFFerential<m>:NSIGnal[:SELect]....1460
DIFFerential<m>:AOUTput....1460
DIFFerential<m>:BOUTput....1460
DIFFerential<m>:COMMon:STATe....1461
DIFFerential<m>:DIFFerential:STATe....1461
DIFFerential<m>:NSIGnal:STATe....1461
DIFFerential<m>:PSIGnal:STATe....1461
DIFFerential<m>:COMMon:SCALe....1461
DIFFerential<m>:DIFFerential:SCALe....1461
DIFFerential<m>:COUPling....1462
DIFFerential<m>:COMMon:OFFSet....1462
DIFFerential<m>:DIFFerential:OFFSet....1462
DIFFerential<m>:COMMon:POSition....1462
DIFFerential<m>:DIFFerential:POSition....1462

DIFFerential<m>:STATe <State>

Activates the differential signal. Two differential signals are available.

Suffix:
<m> 1..2
Differential signal

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 191

DIFFerential<m>:PSIGnal[:SELect] <Signal>
DIFFerential<m>:NSIGnal[:SELect] <Signal>

Select the analog input channel of the positive and negative signal.

Using the same input channel for both differential signals is not possible.

Suffix:
<m> 1..2
Differential signal

Parameters:
<Signal> C1W1 | C2W1 | C3W1 | C4W1
*RST: C1W1

Usage: Asynchronous command

Manual operation: See "P, N" on page 191

DIFFerential<m>:AOUTput <Output>
DIFFerential<m>:BOUTput <Output>

Select the waveform that is the result of differential processing. 2 output waveforms per digital signal can be defined.

The number of output waveforms depends on deembedding, see "Output: P, N, Diff, Common" on page 191.

If deembedding by software is active, use the `DIFFerential:...:STATe` commands instead of AOUTput and BOUTput.

If realtime deembedding is active, only `DIFFerential<m>:AOUTput` is relevant, because only one output waveform is available.

Suffix:
<m> 1..2
Differential signal

Parameters:
<Output> P | N | DIFF | COM

P | N
Positive or negative waveform.

DIFF
Differential waveform.

COM
Common mode waveform.

*RST: COM

Usage: Asynchronous command

Manual operation: See "Output: P, N, Diff, Common" on page 191

DIFFerential<m>:COMMon:STATe <State>
DIFFerential<m>:DIFFerential:STATe <State>
DIFFerential<m>:NSIGnal:STATe <State>
DIFFerential<m>:PSIGnal:STATe <State>

The commands enable the output waveforms if deembedding by software is active. In this case, all output waveforms can be displayed at the same time, and each output is enabled separately.

Suffix:
<m> 1..2
Differential signal

Parameters:
<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Output: P, N, Diff, Common" on page 191

DIFFerential<m>:COMMon:SCALe <Scale>
DIFFerential<m>:DIFFerential:SCALe <Scale>

Set the vertical scale of differential and common mode waveforms, respectively.

Vertical settings of P and N output are the vertical settings of the input channels.

Suffix:
<m> 1..2
Differential signal

Parameters:
<Scale> Scale value, given in Volts per division.

Range: 1E-3 to 100
Increment: 1E-3
*RST: 0.05
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Scale" on page 192

DIFFerential<m>:COUPling <ScaleCoupling>

If enabled for a differential signal, the vertical scales of P, N, differential and common mode waveforms are coupled. The scales are related as follows:

$VertScale_P = VertScale_N = VertScale_{CM} = VertScale_{Diff}/2$

You can disable the scale coupling and set an individual scale for each waveform.

Suffix:
<m> 1..2
Differential signal

Parameters:
<ScaleCoupling> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Scale coupling" on page 193

DIFFerential<m>:COMMon:OFFSet <Offset>
DIFFerential<m>:DIFFerential:OFFSet <Offset>

Set the offset of differential and common mode waveforms.

Vertical settings of P and N output are the vertical settings of the input channels.

Suffix:
<m> 1..2
Differential signal

Parameters:
<Offset> Offset value
Range: -1 to 1
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 193

DIFFerential<m>:COMMon:POSition <Position>
DIFFerential<m>:DIFFerential:POSition <Position>

Set the vertical position of differential and common mode waveforms.

Vertical settings of P and N output are the vertical settings of the input channels.

Suffix:
<m> 1..2
Differential signal

Parameters:

<Position> Position value

Range: -5 to 5
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Position" on page 193

26.8.10 Digital filter

CHANnel<ch>:DIGFilter:STATe....1463
CHANnel<ch>:DIGFilter:CUToff....1463
TRIGger<t>:RFReject?....1464

CHANnel<ch>:DIGFilter:STATe <State>

Enables the DSP filter for input channels.

Suffix:

<ch> 1..4

Parameters:

<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "BW limit" on page 146

CHANnel<ch>:DIGFilter:CUToff <CutOffLP>

Sets the limit frequency of the lowpass filter for input channels.

Suffix:

<ch> 1..4
Selects the input channel. One filter is applied to a pair of channels - one filter for channels 1 and 2 and another filter for channels 3 and 4 (only 4-channel models).

Parameters:

<CutOffLP> Range: 100E+3 to instrument bandwidth
*RST: 1E+6
Default unit: Hz
Available filter values are:
100E+3, 200E+3, 300E+3, 500E+3, 1.0E+6, 2.0E+6, 3.0E+6, 5.0E+6, 10E+6, 20E+6, 30E+6, 50E+6, 100E+6, 500E+6, 1.0E+9, 1.5E+9, 2.0E+9, 2.5E+9, 3.0E+9, 3.5E+9, 4.0E+9, 4.5E+9, 5.0E+9, 5.5E+9, 6.0E+9, 6.5E+9, 7.0E+9, 7.5E+9, 8.0E+9, 8.5E+9, 9.0E+9, 9.5E+9, 10.0E+9, 10.5E+9, 11.0E+9, 11.5E+9, 12.0E+9, 12.5E+9, 13.0E+9, 13.5E+9, 14.0E+9, 14.5E+9, 15.0E+9, 15.5E+9, 16.0E+9

Usage: Asynchronous command

Manual operation: See "Acquisition BW" on page 146

TRIGger<t>:RFReject? <Bandwidth>

Returns the BW limit of the trigger source.

Suffix:

<t> 1..3
Irrelevant, omit the suffix.

Return values:

<Bandwidth> Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "Trigger BW" on page 146

26.8.11 Skew

CHANnel<ch>:SKEW:MANual....1464
CHANnel<ch>:SKEW:TIME....1465
PROBe<ch>:SKEState....1465
CHANnel<ch>:SKEW:EXTended....1465

CHANnel<ch>:SKEW:MANual <ManualCompens>

If enabled, the skew offset value (`CHANnel<ch>:SKEW:TIME`) is used for compensation. This improves horizontal and trigger accuracy.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<ManualCompens> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "User skew" on page 127

CHANnel<ch>:SKEW:TIME <Offset>

Sets an delay value, that is known from the circuit specifics but cannot be compensated by the instrument automatically. It affects only the selected input channel.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<Offset> Range: -100E-9 to 100E-9
Increment: 10E-15
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Skew offset" on page 127

PROBe<ch>:SKEState <ProbeSkew>

If enabled, the skew of all connected active probes is measured, displayed, and used for deskewing.

Suffix:
<ch> 1..4
The suffix is irrelevant. The setting affects all active channels.

Parameters:
<ProbeSkew> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Probe skew" on page 127

CHANnel<ch>:SKEW:EXTended <ExtendSkew>

Enables a higher skew value range that can be set with `CHANnel<ch>:SKEW:TIME` on page 1465. The skew extension reduces the maximum number of acquisitions in the memory.

Suffix:
<ch> 1..4
The suffix is irrelevant. The setting affects all active channels.

Parameters:
<ExtendSkew> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Extend user skew" on page 127

26.8.12 High definition mode

HDEFinition:STATe....1466
HDEFinition:BWIDth....1466
HDEFinition:RESolution?....1466
FORMat:BORDer....1467

HDEFinition:STATe <State>

Activates the high definition mode of the instrument.

Parameters:

<State> OFF | ON

ON: high definition mode, up to 16 bit digital resolution
OFF: normal oscilloscope mode

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 137

HDEFinition:BWIDth <Bandwidth>

Sets the filter bandwidth for the high definition mode.

Parameters:

<Bandwidth> Range: 10000 to max. 2 GHz, depending on the instrument bandwidth.
Increment: 1000
*RST: 1E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 137

See "Bandwidth" on page 137 for bandwidth limits.

HDEFinition:RESolution?

Returns the resulting digital resolution in high definition mode.

Return values:

<Resolution> Range: 0 to 16
Increment: 0.1
*RST: 0
Default unit: bit

Usage: Query only
Asynchronous command

Manual operation: See "Resolution" on page 137

FORMat:BORDer <ByteOrder>

Sets the endianess.

The command is only relevant for raw data export in high definition mode (16 bit word length).

Parameters:
<ByteOrder> LSBFirst | MSBFirst

LSB first: little endian, least significant byte first
MSB first: big endian, most significant byte first

*RST: LSBFirst

Usage: Asynchronous command

Manual operation: See "Byte order" on page 1306

26.8.13 Reference clock

Commands are related to the external reference input on the rear panel, and the output of the OCXO reference signal.

SENSe[:ROSCillator]:SOURce 1467
SENSe[:ROSCillator]:EXTernal:FREQuency 1467

SENSe[:ROSCillator]:SOURce <RefSource>

Enables the use of the external reference signal instead of the internal OCXO reference.

Parameters:
<RefSource> INTernal | EXTernal

*RST: INTernal

Usage: Asynchronous command

Manual operation: See "Use external reference" on page 128

SENSe[:ROSCillator]:EXTernal:FREQuency <ExternalRef>

Sets the frequency of an external reference input signal that is connected to the external reference input on the rear panel.

Parameters:
<ExternalRef> *RST: 10E+6
Default unit: Hz
Range is 1E+6 to 20E+6, and the increment is 1E+6.

Usage: Asynchronous command

Manual operation: See "External reference" on page 128

26.9 Trigger

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Basic trigger settings....1469
- Edge trigger....1472
- Glitch trigger....1472
- Width trigger....1474
- Runt trigger....1475
- Window trigger....1478
- Timeout trigger....1481
- Interval trigger....1481
- Slew rate trigger....1483
- Setup & Hold....1485
- State trigger....1488
- Pattern trigger....1488
- High-speed serial pattern trigger (option R&S RTP-K140/K141)....1491
- CDR trigger....1511
- TV/Video trigger....1514
- Line trigger....1519
- Trigger qualification....1520
- Holdoff....1523
- Conditioning....1527
- Trigger sequence....1530
- Trigger control....1533
- Actions on trigger....1535
- Zone trigger (option R&S RTP-K19)....1538
- External trigger input....1538
- Acquisition info....1541

26.9.1 Basic trigger settings

TRIGger<t>:SOURce[:SELect] 1469
TRIGger<t>:TYPE 1470
TRIGger<t>:LEVel<n>[:VALue] 1471
TRIGger<t>:FINDlevel 1471
DISPlay:TRIGger:LINes 1472

TRIGger<t>:SOURce[:SELect] <SourceDetailed>

Selects the source of the trigger signal.

Suffix:

<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger
Available values depend on the selected trigger source. For input channels CHAN1...4, a trigger sequence can be configured.
For all other trigger sources, only suffix 1 is allowed.

Parameters:

<SourceDetailed> CHAN1 | CHANnel1 | CHAN2 | CHANnel2 | CHAN3 | CHANnel3 | CHAN4 | CHANnel4 | EXTernanalog | SBUS | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | LOGIC | MSOB1 | MSOB2 | MSOB3 | MSOB4 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | LINE

CHAN1 = CHANnel1, CHAN2 = CHANnel2, CHAN3 = CHANnel3, CHAN4 = CHANnel4
Input channels

EXTernanalog
External analog signal connected to the External Trigger Input. For this source, only the analog edge trigger is available.

LINE
The instrument generates the trigger from the AC power input and synchronizes the signal to the AC power frequency.

SBUS
Serial bus

D0...D15
Digital channels (option R&S RTP-B1)
See also: Section 26.19.4, "Trigger settings for digital signals and parallel buses", on page 2633

LOGIc
Logic combination of digital channels, used as trigger source (option R&S RTP-B1)

MSOB1 | MSOB2 | MSOB3 | MSOB4
Parallel bus (option R&S RTP-B1)

Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4
Input channels of R&S RT-ZVCmulti-channel power probe. Only available in the A-trigger with trigger type EDGE.

DIFF1 | DIFF2 | COMMON1 | COMMON2
Differential signals

*RST: CHAN1

Usage: Asynchronous command

Manual operation: See "[Source]" on page 38

TRIGger<t>:TYPE <Type>

Selects the trigger type to trigger on analog channels or the external trigger input.

See also: Section 6.3, "Trigger types", on page 202.

To trigger on digital channels and parallel buses, use `TRIGger<t>:PARallel:TYPE`.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger
For suffixes 2 and 3, the following trigger types are availabe: EDGE, GLITch, WIDTh, RUNT, WINDow, TIMeout, INTerval, SLEWrate.

Parameters:
<Type> EDGE | GLITch | WIDTh | RUNT | WINDow | TIMeout | INTerval | SLEWrate | STATe | PATTern | ANEDge | SERPattern | TV | | SETHold

Most of the type values are self-explanatory.

SETHold
SETHold: analyzes the relative timimg between a data signal and the synchronous clock signal. For trigger settings, see Section 26.9.10, "Setup & Hold", on page 1485.

ANEDge
Edge trigger for external trigger input. Only available if the trigger source is the external trigger input. This trigger type uses the analog input signal. For trigger settings, see Section 6.11.1, "External trigger setup", on page 262.

SERPattern
Serial pattern for signals with serial data patterns in relation to a clock signal, requires option R&S RTP-K140/K141. For trigger settings, see Section 26.9.13, "High-speed serial pattern trigger (option R&S RTP-K140/K141)", on page 1491.

*RST: EDGE

Usage: Asynchronous command

Manual operation: See "Type" on page 204

TRIGger<t>:LEVel<n>[:VALue] <Level>

Sets the trigger level for the specified event and source.

If the trigger source is serial bus, the trigger level is set by the thresholds in the protocol configuration.

Suffix:

<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

<n> 1..31
Indicates the trigger source:
1...4 = channel 1 to 4
5 = external trigger input
6...11 = not available
12...27 = R&S RT-ZVC input channels
28...31 = differential signals Diff1, Diff2 and Common1, Common2

Parameters:

<Level> Voltage for the trigger level.

Range: Depends on vertical scale, channel offset and other settings. The trigger level must be within the current display range.
Increment: 1E-3
*RST: 0
Default unit: V

Example: `TRIG:LEV5 0.01`
Sets the trigger level for the external trigger signal to 10 mV.
`TRIG2:LEV3 0.2`
Sets the trigger level for the B-event and B-trigger source channel 3 to 200 mV.

Usage: Asynchronous command

Manual operation: See "[Level]" on page 37

TRIGger<t>:FINDlevel

Sets the trigger level automatically. The command is only relevant if the trigger source is an analog channel CHAN1...4.

Suffix:

<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Usage: Event
Asynchronous command

Manual operation: See "Find level" on page 205

DISPlay:TRIGger:LINes <State>

Hides or shows the trigger levels in the diagrams.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show trigger lines" on page 235

26.9.2 Edge trigger

TRIGger<t>:EDGE:SLOPe....1472

TRIGger<t>:EDGE:SLOPe <Slope>

Defines the edge for the edge trigger event.

Suffix:

<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:

<Slope> POSitive | NEGative | EITHer
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 205

26.9.3 Glitch trigger

TRIGger<t>:GLITch:POLarity.... 1472
TRIGger<t>:GLITch:RANGe....1473
TRIGger<t>:GLITch:WIDTh....1473

TRIGger<t>:GLITch:POLarity <Polarity>

Defines the polarity of a pulse, that is the direction of the first pulse slope.

Suffix:

<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:

<Polarity> POSitive | NEGative | EITHer
See Section 26.4.4, "Polarity parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 206

TRIGger<t>:GLITch:RANGe <RangeMode>

Selects which glitches are identified: shorter or longer than the width specified using `TRIGger<t>:GLITch:WIDTh`.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<RangeMode> SHORter | LONGer

SHORter
Glitches shorter than the specified width are identified.

LONGer
Glitches longer than the specified width are identified.

*RST: SHORter

Usage: Asynchronous command

Manual operation: See "Range" on page 206

TRIGger<t>:GLITch:WIDTh <Width>

Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value, depnding on the `TRIGger<t>:GLITch:RANGe` command.

You need to know the expected pulse widths of the circuit to set the glitch width correctly.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Width> Range: 100E-12 to 10000
Increment: 100E-6
*RST: 1E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 206

26.9.4 Width trigger

TRIGger<t>:WIDTh:POLarity....1474
TRIGger<t>:WIDTh:RANGe....1474
TRIGger<t>:WIDTh:WIDTh....1475
TRIGger<t>:WIDTh:DELTa....1475

TRIGger<t>:WIDTh:POLarity <Polarity>

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Polarity> POSitive | NEGative
See Section 26.4.4, "Polarity parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 207

TRIGger<t>:WIDTh:RANGe <RangeMode>

Defines how the range of a pulse width is defined in relation to the width and delta specified using `TRIGger<t>:WIDTh:WIDTh` and `TRIGger<t>:WIDTh:DELTa`, respectively.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<RangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers on pulses inside a given range. The range is defined by the width ±delta.

OUTSide
Triggers on pulses outside a given range. The range is defined by the width ±delta.

SHORter
Triggers on pulses shorter than the given width.

LONGer
Triggers on pulses longer than the given width.

*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Range" on page 208

TRIGger<t>:WIDTh:WIDTh <Width>

For the ranges "Within" and "Outside" (defined using `TRIGger<t>:WIDTh:RANGe`), the width defines the center of a range which is defined by the limits "±Delta" (see `TRIGger<t>:WIDTh:DELTa` on page 1475).

For the ranges "Shorter" and "Longer", the width defines the maximum and minimum pulse width, respectively.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Width>
Range: 100E-12 to 10000
Increment: 100E-9
*RST: 5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 208

TRIGger<t>:WIDTh:DELTa <WidthDelta>

Defines a range around the width value specified using `TRIGger<t>:WIDTh:WIDTh`.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<WidthDelta>
Range: 0 to 432
Increment: 500E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

26.9.5 Runt trigger

TRIGger<t>:RUNT:POLarity 1476
TRIGger<t>:LEVel<n>:RUNT:LOWer 1476
TRIGger<t>:LEVel<n>:RUNT:UPPer 1476
TRIGger<t>:RUNT:RANGe 1476
TRIGger<t>:RUNT:WIDTh 1477
TRIGger<t>:RUNT:DELTa 1477

TRIGger<t>:RUNT:POLarity <Polarity>

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Polarity> POSitive | NEGative | EITHer
See Section 26.4.4, "Polarity parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 206

TRIGger<t>:LEVel<n>:RUNT:LOWer <Level>
TRIGger<t>:LEVel<n>:RUNT:UPPer <Level>

Set the lower and upper voltage thresholds.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

<n> 1..31
Indicates the trigger source:
1...4 = channel 1...4
5...27 = not available
28...31 = differential signals Diff1, Diff2 and Common1, Common2

Parameters:
<Level> Range: -10 to 10
Increment: 1E-3
*RST: Lower = -0.1, upper =0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 209

TRIGger<t>:RUNT:RANGe <Mode>

Defines the time limit of the runt pulse in relation to the `TRIGger<t>:RUNT:WIDTh` and `TRIGger<t>:RUNT:DELTa` settings.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Mode> ANY | LONGer | SHORter | WITHin | OUTSide

ANY
Triggers on all runts fulfilling the level condition, without time limitation.

LONGer
Triggers on runts longer than the given "Runt width".

SHORter
Triggers on runts shorter than the given "Runt width".

WITHin
Triggers if the runt length is inside a given time range. The range is defined by "Runt width" and "±Delta".

OUTSide
Triggers if the runt length is outside a given time range. The range is defined by "Runt width" and "±Delta".

*RST: ANY

Usage: Asynchronous command

Manual operation: See "Range" on page 209

TRIGger<t>:RUNT:WIDTh <Width>

Defines the upper or lower voltage threshold. This command is not available if `TRIGger<t>:RUNT:RANGe` is set to "ANY".

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Width>
Range: 100E-12 to 10000
Increment: 100E-9
*RST: 5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Runt width" on page 210

TRIGger<t>:RUNT:DELTa <WidthDelta>

Defines a range around the runt width specified using `TRIGger<t>:RUNT:WIDTh`. This command is only available if `TRIGger<t>:RUNT:RANGe` is set to "WITHin" or "OUTSide".

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:

<WidthDelta>
Range: 100E-12 to 864
Increment: 100E-9
*RST: 100E-12
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 210

26.9.6 Window trigger

TRIGger<t>:LEVel<n>:WINDow:LOWer 1478
TRIGger<t>:LEVel<n>:WINDow:UPPer 1478
TRIGger<t>:WINDow:RANGe 1478
TRIGger<t>:WINDow:TIME 1479
TRIGger<t>:WINDow:WIDTh 1480
TRIGger<t>:WINDow:DELTa 1480

TRIGger<t>:LEVel<n>:WINDow:LOWer <Level>
TRIGger<t>:LEVel<n>:WINDow:UPPer <Level>

Set the lower and upper voltage limits for the window.

Suffix:

<t>
1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

<n>
1..31
Indicates the trigger source:
1...4 = channel 1...4
5...27 = not available
28...31 = differential signals Diff1, Diff2 and Common1, Common2

Parameters:

<Level>
Range: -10 to 10
Increment: 1E-3
*RST: Lower = -0.1, upper =0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 211

TRIGger<t>:WINDow:RANGe <RangeMode>

Defines the signal run in relation to the window:

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<RangeMode> ENTer | EXIT | WITHin | OUTSide

ENTer
Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.

EXIT
Triggers when the signal leaves the window.

WITHin
Triggers if the signal stays between the upper and lower level for a specified time. The time is defined using the `TRIGger<t>:WINDow:TIME` command.

OUTSide
Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is defined using the `TRIGger<t>:WINDow:TIME` command.

*RST: ENTer

Usage: Asynchronous command

Manual operation: See "Vertical condition" on page 211

TRIGger<t>:WINDow:TIME <TimeRangeMode>

Defines the limit of the window in relation to the time specified using `TRIGger<t>:WINDow:WIDTh` and `TRIGger<t>:WINDow:DELTa`. Time conditioning is available for `TRIGger<t>:WINDow:RANGe`= "WITHin" and "OUTSide".

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<TimeRangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers if the signal stays inside or outside the vertical window limits at least for the time *Width - Delta* and for *Width + Delta* at the most.

OUTSide
"Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than *Width - Delta* or longer than *Width + Delta*.

SHORter
Triggers if the signal crosses vertical limits before the specified "Width" time is reached.

LONGer
Triggers if the signal crosses vertical limits before the specified "Width" time is reached.

*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Time condition" on page 211

TRIGger<t>:WINDow:WIDTh <Width>

For the ranges "Within" and "Outside" (defined using `TRIGger<t>:WINDow:RANGe`), the width defines the center of a time range which is defined by the limits "±Delta" (see `TRIGger<t>:WINDow:DELTa` on page 1480).

For the ranges "Shorter" and "Longer", it defines the maximum and minimum time lapse, respectively.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Width>
Range: 100E-12 to 10000
Increment: 100E-9
*RST: 5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 211

TRIGger<t>:WINDow:DELTa <WidthDelta>

Defines a range around the "Width" value specified using `TRIGger<t>:WINDow:WIDTh`.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<WidthDelta>
Range: 0 to 432
Increment: 500E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 212

26.9.7 Timeout trigger

TRIGger<t>:TIMeout:RANGe 1481
TRIGger<t>:TIMeout:TIME 1481

TRIGger<t>:TIMeout:RANGe <TimeoutMode>

Defines the relation of the signal level to the trigger level.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<TimeoutMode> HIGH | LOW | EITHer

HIGH
The signal level stays above the trigger level.

LOW
The signal level stays below the trigger level.

EITHer
The signal level stays above or below the trigger level.

*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Range" on page 212

TRIGger<t>:TIMeout:TIME <Time>

Defines the time limit for the timeout at which the instrument triggers.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Time> Range: 100E-12 to 10000
Increment: 100E-9
*RST: 100E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 213

26.9.8 Interval trigger

TRIGger<t>:INTerval:SLOPe 1482
TRIGger<t>:INTerval:RANGe 1482
TRIGger<t>:INTerval:WIDTh 1482
TRIGger<t>:INTerval:DELTa 1483

TRIGger<t>:INTerval:SLOPe <Slope>

Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Slope> POSitive | NEGative
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 213

TRIGger<t>:INTerval:RANGe <RangeMode>

Defines the range of an interval in relation to the interval width specified using `TRIGger<t>:INTerval:WIDTh` and `TRIGger<t>:INTerval:DELTa`.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<RangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers on pulses inside a given range. The range is defined by the interval width ±delta.

OUTSide
Triggers on pulses outside a given range. The range is defined by the interval width ±delta.

SHORter
Triggers on pulses shorter than the given interval width.

LONGer
Triggers on pulses longer than the given interval width.

*RST: OUTSide

Usage: Asynchronous command

Manual operation: See "Range" on page 213

TRIGger<t>:INTerval:WIDTh <Width>

Defines the time between two pulses.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:

<Width>
Range: 100E-12 to 10000
Increment: 100E-9
*RST: 5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Interv. width" on page 214

TRIGger<t>:INTerval:DELTa <WidthDelta>

Defines a range around the "Interval width" value specified using `TRIGger<t>:INTerval:WIDTh` on page 1482.

Suffix:

<t>
1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:

<WidthDelta>
Range: 0 to 10
Increment: 100E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 214

26.9.9 Slew rate trigger

TRIGger<t>:SLEW:SLOPe....1483
TRIGger<t>:LEVel<n>:SLEW:LOWer....1484
TRIGger<t>:LEVel<n>:SLEW:UPPer....1484
TRIGger<t>:SLEW:RANGe....1484
TRIGger<t>:SLEW:RATE....1485
TRIGger<t>:SLEW:DELTa....1485

TRIGger<t>:SLEW:SLOPe <Slope>

Selects the edge type for the trigger event.

Suffix:

<t>
1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:

<Slope>
POSitive | NEGative | EITHer
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 205

TRIGger<t>:LEVel<n>:SLEW:LOWer <Level>
TRIGger<t>:LEVel<n>:SLEW:UPPer <Level>

Set the lower and upper voltage thresholds. When the signal crosses a level, the slew rate measurement starts or stops depending on the selected slope.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

<n> 1..31
Indicates the trigger source:
1...4 = channel 1...4
5...27 = not available
28...31 = differential signals Diff1, Diff2 and Common1, Common2

Parameters:
<Level> Range: -10 to 10
Increment: 1E-3
*RST: Lower = -0.1, upper =0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 215

TRIGger<t>:SLEW:RANGe <RangeMode>

Defines the time limit for the slew rate in relation to the upper or lower trigger level (see `TRIGger<t>:SLEW:RATE` on page 1485 and `TRIGger<t>:SLEW:DELTa` on page 1485). The time measurement starts when the signal crosses the first trigger level - the upper or lower level depending on the selected slope - and stops when the signal crosses the second level.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<RangeMode> INSRange | OUTRange | LTHan | GTHan

INSRange
Triggers on pulses inside a given range. The range is defined by the slew rate ±delta.

OUTRange
Triggers on pulses outside a given range. The range is defined by the slew rate ±delta.

LTHan
Triggers on pulses shorter than the given slew rate.

GTHan
Triggers on pulses longer than the given slew rate.
*RST: GTHan

Usage: Asynchronous command

Manual operation: See "Range" on page 215

TRIGger<t>:SLEW:RATE <Time>

For the ranges "Within" and "Outside", the slew rate defines the center of a range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", the slew rate defines the maximum and minimum slew rate limits, respectively. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope (see `TRIGger<t>:SLEW:SLOPe` on page 1483).

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<Time> Range: 100E-12 to 10000
Increment: 100E-9
*RST: 100E-12
Default unit: s

Usage: Asynchronous command

Manual operation: See "Slew rate" on page 216

TRIGger<t>:SLEW:DELTa <TimeDelta>

Defines a time range around the slew rate specified using `TRIGger<t>:SLEW:RATE`.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:
<TimeDelta> Range: 0 to 10
Increment: 100E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 216

26.9.10 Setup & Hold

The Setup & Hold trigger is only available for the A-event (Suffix = 1).

TRIGger<t>:SETHold:CSOurce:EDGE....1486
TRIGger<t>:SETHold:CSOurce:LEVel....1486
TRIGger<t>:SETHold:CSOurce[:VALue]....1486
TRIGger<t>:SETHold:HTIMe....1487
TRIGger<t>:SETHold:STIMe....1487
TRIGger<t>:SCOupling....1488

TRIGger<t>:SETHold:CSOurce:EDGE <ClockEdge>

Sets the edge of the clock signal to define the time reference point for the setup and hold time.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock edge" on page 217

TRIGger<t>:SETHold:CSOurce:LEVel <ClockLevel>

Sets the voltage level for the clock signal. Both this command and `TRIGger<t>:SETHold:CSOurce:EDGE` define the starting point for calculation of the setup and hold time.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<ClockLevel> Range: -10 to 10
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Clock level" on page 217

TRIGger<t>:SETHold:CSOurce[:VALue] <ClockSource>

Selects the source of the clock signal.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<ClockSource> CHAN1 | CHANnel1 | CHAN2 | CHANnel2 | CHAN3 | CHANnel3 | CHAN4 | CHANnel4

CHAN1 = CHANnel1, CHAN2 = CHANnel2, CHAN3 = CHANnel3, CHAN4 = CHANnel4
Input channel of the clock signal

*RST: CHAN1

Usage: Asynchronous command

Manual operation: See "Clock source" on page 217

TRIGger<t>:SETHold:HTIMe <HoldTime>

Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.

The hold time can be negative. In this case, the setup time is always positive. The setup/hold interval starts before the clock edge (setup time) and ends before the clock edge (hold time). If you change the negative hold time, the setup time is adjusted by the intrument.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<HoldTime> Range: -99.999E-9 to 100E-9
Increment: 1E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Hold time" on page 218

TRIGger<t>:SETHold:STIMe <SetupTime>

Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

The setup time can be negative. In this case, the hold time is always positive. The setup/hold interval starts after the clock edge (setup time) and ends after the clock edge (hold time). If you change the negative setup time, the hold time is adjusted by the instrument.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<SetupTime>
Range: -99.999E-9 to 100E-9
Increment: 1E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Setup time" on page 218

TRIGger<t>:SCOupling <TrigLevSrcCpl>

Sets the trigger levels of all used channels to the level of the data line (Data2clock trigger), clock line (state trigger) or source line (pattern trigger).

Suffix:

<t>
1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<TrigLevSrcCpl>
OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use data level for clock level" on page 218

26.9.11 State trigger

The state trigger combines the edge trigger settings with trigger qualification. It is only available for the A-event (Suffix = 1).

Use the following commands:

- `TRIGger<t>:EDGE:SLOPe` on page 1472
- `TRIGger<t>:LEVel<n>[:VALue]` on page 1471
- `TRIGger<t>:SCOupling` on page 1488
- To define the state, use the `TRIG:QUAL...[ENABle]` and `TRIG:QUAL...LOGic` commands, which are described in Section 26.9.17, "Trigger qualification", on page 1520.

26.9.12 Pattern trigger

The pattern trigger is only available for the A-event (Suffix = 1).

The pattern is defined using the commands:

- `TRIGger<t>:QUALify<n>:A[:ENABle]` on page 1521
- `TRIGger<t>:QUALify<n>:A:LOGic` on page 1522
- `TRIGger<t>:QUALify<n>:AB:LOGic` on page 1522

These are the commands for channel 1, use the similar commands for channels 2, 3, and 4.

TRIGger<t>:PATTern:MODE....1489
TRIGger<t>:PATTern:TIMeout:MODE....1489
TRIGger<t>:PATTern:TIMeout[:TIME]....1490
TRIGger<t>:PATTern:WIDTh:RANGe....1490
TRIGger<t>:PATTern:WIDTh[:WIDTh]....1491
TRIGger<t>:PATTern:WIDTh:DELTa....1491

TRIGger<t>:PATTern:MODE <Mode>

Adds additional time limitation to the pattern definition.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Mode> OFF | TIMeout | WIDTh

OFF
No time limitation. The event occurs if the pattern condition is fulfilled.

TIMeout
Defines how long the result of the pattern condition must be true or false. The duration of the timeout is defined using `TRIGger<t>:PATTern:TIMeout[:TIME]`.

WIDTh
Defines a time range for keeping up the true result of the pattern condition. The range is defined using `TRIGger<t>:PATTern:WIDTh:RANGe`.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Additional settings: Timing" on page 221

TRIGger<t>:PATTern:TIMeout:MODE <TimeoutMode>

Defines the condition for the timeout.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<TimeoutMode> HIGH | LOW

HIGH
The result stays high.

LOW
The result stays low.

*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Additional settings: Timing" on page 221

TRIGger<t>:PATTern:TIMeout[:TIME] <Time>

Defines how long the result of the pattern condition must be true or false.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Time> Range: 100E-12 to 10000
Increment: 100E-9
*RST: 100E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Additional settings: Timing" on page 221

TRIGger<t>:PATTern:WIDTh:RANGe <WidthRangeMode>

Defines how the range of a pulse width is defined for keeping up the true result of the pattern condition. The width and delta are specified using `TRIGger<t>:PATTern:WIDTh[:WIDTh]` and `TRIGger<t>:PATTern:WIDTh:DELTa`, respectively.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<WidthRangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers on pulses inside a given range. The range is defined by the width ±delta.

OUTSide
Triggers on pulses outside a given range. The range is defined by the width ±delta.

SHORter
Triggers on pulses shorter than the given width.

LONGer
Triggers on pulses longer than the given width.

*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Additional settings: Timing" on page 221

TRIGger<t>:PATTern:WIDTh[:WIDTh] <Width>

For the ranges "Within" and "Outside" (defined using `TRIGger<t>:PATTern:WIDTh:RANGe`), the width defines the center of a range which is defined by the limits "±Delta" (see `TRIGger<t>:PATTern:WIDTh:DELTa` on page 1491).

For the ranges "Shorter" and "Longer", the width defines the maximum and minimum pulse width, respectively.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Width>
Range: 100E-12 to 10000
Increment: 100E-9
*RST: 5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Additional settings: Timing" on page 221

TRIGger<t>:PATTern:WIDTh:DELTa <WidthDelta>

Defines a range around the width value specified using `TRIGger<t>:PATTern:WIDTh[:WIDTh]`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<WidthDelta>
Range: 0 to 432
Increment: 500E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Additional settings: Timing" on page 221

26.9.13 High-speed serial pattern trigger (option R&S RTP-K140/K141)

This chaptes decribes the remote commands of serial pattern trigger option R&S RTP-K140/K141.

The serial pattern trigger is only available for the A-event (Suffix = 1).

The following provides examples on how to set up the serial pattern trigger :

Example: Basic settings of the serial pattern trigger

Sets a clock signal:

```
TRIGger1:TYPE SERPattern
TRIGger1:SPATtern:CSOurce:EDGE POSitive
TRIGger1:SPATtern:CSOurce:LEVel 0
TRIGger1:LEVel 0
```

Set a CDR clock signal:

```
TRIGger1:TYPE SERPattern
SIGNalconfig:SETup:SETTing:SERStandard CUSTOM
CDR:HARDware:SAMTime 0.5
TRIGger1:LEVel 0
CDR:HARDware:BREStimate
```

Example: Setting up a dual bit serial pattern trigger

Set the pattern type to dual pattern and sets the length and the value for bit patter A and B:

```
TRIGger1:SERPattern:PTMDe:DBP
TRIGger1:SERPattern:BITPattern:PTALength 1
TRIGger1:SERPattern:BITPattern:APATtern 1
TRIGger1:SERPattern:BITPattern:PTBLength 1
TRIGger1:SERPattern:BITPattern:BPATtern 0
```

Example: Setting up a complex word serial pattern trigger

```
TRIGger1:SERPattern:PTMDe:CBP
// Sets the alignment to pattern
TRIGger1:SERPattern:COMPlex:SOFState PATTern
// Sets the alignment to pattern
TRIGger1:SERPattern:COMPlex:SOFLength 8
TRIGger1:SERPattern:COMPlex:SOFPattern A5
TRIGger1:SERPattern:COMPlex:CLOGic AND
TRIGger1:SERPattern:COMPlex:BORDer MSB
// Sets the length, bit pattern, logic and bit order
TRIGger1:SERPattern:COMPlex:PATTern1:ENABle ON
//Enables pattern condition 1
TRIGger1:SERPattern:COMPlex:PATTern1:BOFFset 4
TRIGger1:SERPattern:COMPlex:PATTern1:PATLength 8
TRIGger1:SERPattern:COMPlex:PATTern1:SRNGe 1
TRIGger1:SERPattern:COMPlex:PATTern1:PCONdition EQUal
TRIGger1:SERPattern:COMPlex:PATTern1:FRPTtern 37
// Sets the bit offset, pattern length, search range and pattern condition
```

26.9.13.1 Basic serial pattern trigger settings

TRIGger<t>:SERPattern:PTMDe 1493
TRIGger<t>:LEVel<n>[:VALue] 1493
TRIGger<t>:SPATtern:CSOurce[:VALue] 1494
TRIGger<t>:SPATtern:CSOurce:EDGE 1494

TRIGger<t>:SPATtern:CSOurce:LEVel 1495
TRIGger<t>:SPATtern:REFSource 1495
CDR:HARDware:BREStimate 1495
CDR:HARDware:BITRate 1496
CDR:HARDware:ESLope 1496
CDR:HARDware:SAMTime 1496

TRIGger<t>:SERPattern:PTMDe <PatternMode>

Selects the pattern type for the serial pattern trigger.

Suffix:
<t> 1..3

Parameters:
<PatternMode> SBP | DBP | CBP | PRBS | EBTB | I30B | I32B

SBP
Single bit pattern

DBP
Dual bit pattern

CBP
Complex word pattern

PRBS
PRBS

EBTB
8b/10b

I32B
128b/132b

*RST: SBP

Usage: Asynchronous command

Manual operation: See "Pattern mode" on page 252

TRIGger<t>:LEVel<n>[:VALue] <Level>

Sets the trigger level for the specified event and source.

If the trigger source is serial bus, the trigger level is set by the thresholds in the protocol configuration.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

<n> 1..31
Indicates the trigger source:
1...4 = channel 1 to 4
5 = external trigger input
6...11 = not available
12...27 = R&S RT-ZVC input channels
28...31 = differential signals Diff1, Diff2 and Common1, Common2

Parameters:

<Level> Voltage for the trigger level.

Range: Depends on vertical scale, channel offset and other settings. The trigger level must be within the current display range.
Increment: 1E-3
*RST: 0
Default unit: V

Example: `TRIG:LEV5 0.01`
Sets the trigger level for the external trigger signal to 10 mV.
`TRIG2:LEV3 0.2`
Sets the trigger level for the B-event and B-trigger source channel 3 to 200 mV.

Usage: Asynchronous command

Manual operation: See "[Level]" on page 37

TRIGger<t>:SPATtern:CSOurce[:VALue] <ClockSource>

Defines the source of the clock signal.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<ClockSource> CHAN1 | CHANNEL1 | CHAN2 | CHANNEL2 | CHAN3 | CHANNEL3 | CHAN4 | CHANNEL4

CHAN1 = CHANnel1, CHAN2 = CHANnel2, CHAN3 = CHANnel3, CHAN4 = CHANnel4
Input channel of the clock signal

*RST: CHAN1

Usage: Asynchronous command

TRIGger<t>:SPATtern:CSOurce:EDGE <ClockEdge>

Together with the clock level (see `TRIGger<t>:SPATtern:CSOurce:LEVel` on page 1495), the clock edge defines the point in time when the state of the data signal is checked.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock edge" on page 250

TRIGger<t>:SPATtern:CSOurce:LEVel <ClockLevel>

Defines the voltage level for the clock signal.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<ClockLevel> Range: -10 to 10
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Clock level " on page 251

TRIGger<t>:SPATtern:REFSource <RefSrc>

Selects if an explicit clock or a CDR signal is used as a reference signal.

Suffix:
<t> 1..3

Parameters:
<RefSrc> CLOCk | CDR
*RST: CDR

Usage: Asynchronous command

Manual operation: See "Clock / CDR" on page 250

CDR:HARDware:BREStimate

Estimates the bite rate once, for the current acquisition.

Usage: Event
Asynchronous command

Manual operation: See "Estimate bit rate" on page 252

CDR:HARDware:BITRate <Bitrate>

Sets the frequency of the feed forward CDR. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Parameters:

<Bitrate>
Range: 200E+3 to 2.5E+9 for 10 GSa/s; range depends on sample rate
Increment: 10
*RST: 1E+9
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Nominal bit rate" on page 252

CDR:HARDware:ESLope <Edge>

Selects the edges of the data stream that are used for the clock recovery.

- "Either": Both positive and negative edges are used.
- "Positive" or "Negative": Only one edge direction is used. Use one of these settings if the other edge delivers unreliable results.

Parameters:

<Edge>
POSitive | NEGative | EITHer
*RST: EITHer

Usage: Asynchronous command

CDR:HARDware:SAMTime <UntIntvlOffs>

Sets a sampling time for the clock signal, an offset for the clock edge in relation to the bit start. The clock edge sets the beginning of the unit interval. The sampling time is a number between 0 and 1. Value 0 sets the clock edge to the beginning of the bit period; value 0.5 sets the clock edge to the middle of the bit period.

Parameters:

<UntIntvlOffs>
Range: 0 to 1
Increment: 0.01
*RST: 0.5
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Sampling time" on page 252

26.9.13.2 Single/dual bit pattern

TRIGger<t>:SERPattern:BITPattern:APATtern 1497
TRIGger<t>:SERPattern:BITPattern:BPATtern 1497
TRIGger<t>:SERPattern:BITPattern:PTALength 1497
TRIGger<t>:SERPattern:BITPattern:PTBLength 1498

TRIGger<t>:SERPattern:BITPattern:APATtern <BPatternA>

Defines the bit pattern/ bit pattern A, if `TRIGger<t>:SERPattern:PTMDe` is set to `SBP` or `DBP`.

Suffix:
<t> 1..3

Parameters:
<BPatternA> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Usage: Asynchronous command

Manual operation: See "Bit pattern, Bit pattern A, Bit pattern B" on page 253

TRIGger<t>:SERPattern:BITPattern:BPATtern <BPatternB>

Defines the bit pattern B, if `TRIGger<t>:SERPattern:PTMDe` is set to `DBP`.

Suffix:
<t> 1..3

Parameters:
<BPatternB> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Usage: Asynchronous command

Manual operation: See "Bit pattern, Bit pattern A, Bit pattern B" on page 253

TRIGger<t>:SERPattern:BITPattern:PTALength <PatternALen>

Sets the length of the bit pattern A.

Suffix:
<t> 1..3

Parameters:
<PatternALen>
Range: 1 to 160
Increment: 1
*RST: 8

Manual operation: See "Bit pattern length, Bit pattern length A, Bit pattern length B" on page 253

TRIGger<t>:SERPattern:BITPattern:PTBLength <PatternBLen>

Sets the length of the bit pattern B.

Suffix:
<t> 1..3

Parameters:
<PatternBLen> Range: 1 to 160
Increment: 1
*RST: 8

Usage: Asynchronous command

Manual operation: See "Bit pattern length, Bit pattern length A, Bit pattern length B" on page 253

26.9.13.3 Complex word pattern

TRIGger<t>:SERPattern:COMPlex:BORDer 1498
TRIGger<t>:SERPattern:COMPlex:CLOGic 1498
TRIGger<t>:SERPattern:COMPlex:IDLRange 1499
TRIGger<t>:SERPattern:COMPlex:SOFState 1499
TRIGger<t>:SERPattern:COMPlex:SOFTimeout 1499
TRIGger<t>:SERPattern:COMPlex:SOFLength 1500
TRIGger<t>:SERPattern:COMPlex:SOFPattern 1500
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:BOFFset 1500
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:ENABle 1501
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:FRPTtern 1501
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PATLength 1501
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PCONdition 1502
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:SRNGe 1502
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:TOPTtern 1502

TRIGger<t>:SERPattern:COMPlex:BORDer <BitOrder>

Sets the most significant bit (MSB) or least significant bit (LSB) to define the data bit order.

Suffix:
<t> 1..3

Parameters:
<BitOrder> LSB | MSB
*RST: MSB

Usage: Asynchronous command

Manual operation: See "Bit order" on page 255

TRIGger<t>:SERPattern:COMPlex:CLOGic <CondLogic>

Selects the logic for the condition, if more than one pattern conditions are defined.

Suffix:
<t> 1..3

Parameters:
<CondLogic> AND | OR

AND
All the defined pattern conditions have to be met.

OR
At least one of the defined pattern conditions have to be met.

*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic" on page 255

TRIGger<t>:SERPattern:COMPlex:IDLRange <IdleRange>

Selects if the timeout should be within the range or out of range.

Suffix:
<t> 1..3

Parameters:
<IdleRange> INR | OOR

INR: In range
OOR: Out of range

*RST: OOR

Usage: Asynchronous command

Manual operation: See "Idle range" on page 255

TRIGger<t>:SERPattern:COMPlex:SOFState <SOFState>

Selects if the alignment for the complex word pattern triggering is done on a pattern value or on a defined timeout.

Suffix:
<t> 1..3

Parameters:
<SOFState> PATTERN | TIMEOUT

*RST: PATTERN

Usage: Asynchronous command

Manual operation: See "Type" on page 255

TRIGger<t>:SERPattern:COMPlex:SOFTimeout <SOFTimeout>

Sests the timeout, a duration that defines an idle mark, if `TRIGger<t>:SERPattern:COMPlex:SOFState` is set to `TIMEout`.

Suffix:
<t> 1..3

Parameters:
<SOFTimeout> Range: 40E-9 to 150
Increment: 10E-6
*RST: 5E-6
Default unit: s

Manual operation: See "Timeout" on page 255

TRIGger<t>:SERPattern:COMPlex:SOFLength <SOFPatternLen>

Sets the length of the pattern for the trigger alignment condition.

Suffix:
<t> 1..3

Parameters:
<SOFPatternLen> Range: 1 to 132
Increment: 1
*RST: 8

Usage: Asynchronous command

Manual operation: See "Length" on page 255

TRIGger<t>:SERPattern:COMPlex:SOFPattern <SOFPattern>

Sets the bit pattern value for the trigger alignment condition, if `TRIGger<t>:SERPattern:COMPlex:SOFState` is set to `PATTern`.

Suffix:
<t> 1..3

Parameters:
<SOFPattern>

Usage: Asynchronous command

Manual operation: See "Bit Pattern" on page 255

TRIGger<t>:SERPattern:COMPlex:PATTern<n>:BOFFset <BitOffset>

Sets the number of arbitrary bits between the first bit after the frame id and the first bit of the word pattern.

Suffix:
<t> 1..3

<n> 1..4
Selects the complex pattern condition.

Parameters:
<BitOffset> Range: 0 to 255
Increment: 1
*RST: 0

Manual operation: See "Bit offset" on page 255

TRIGger<t>:SERPattern:COMPlex:PATTern<n>:ENABle <Enable>

Enables a new pattern condition.

Suffix:
<t> 1..3

<n> 1..4
Selects the complex pattern condition.

Parameters:
<Enable> OFF | ON
*RST: OFF

Manual operation: See "Select to add condition" on page 256

TRIGger<t>:SERPattern:COMPlex:PATTern<n>:FRPTtern <PatternFrom>

Sets the pattern or a start value of a pattern range.

Suffix:
<t> 1..3

<n> 1..4
Selects the complex pattern condition.

Parameters:
<PatternFrom>

Manual operation: See "Pattern" on page 256

TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PATLength <PatternLen>

Sets the word pattern length in bits. The maximal bit length of all selected pattern conditions is 160 bits.

Suffix:
<t> 1..3

<n> 1..4
Selects the complex pattern condition.

Parameters:
<PatternLen> Range: 1 to 160
Increment: 1
*RST: 8

Manual operation: See "Pattern length" on page 256

TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PCONdition <Operator>

Sets the operator to define the exact position or range where the instrument looks for the specified pattern.

Suffix:
<t> 1..3

<n> 1..4
Selects the complex pattern condition.

Parameters:
<Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These operators require one identifier pattern to be set with `TRIGger<t>:SERPattern:COMPlex:PATTern<n>:FRPTtern`

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:SERPattern:COMPlex:PATTern<n>:FRPTtern` and `TRIGger<t>:SERPattern:COMPlex:PATTern<n>:TOPTtern`.

*RST: EQUal

Manual operation: See "Pattern condition" on page 256

TRIGger<t>:SERPattern:COMPlex:PATTern<n>:SRNGe <SearchRange>

Sets the search range of the word pattern.

Suffix:
<t> 1..3

<n> 1..4
Selects the complex pattern condition.

Parameters:
<SearchRange> Range: 1 to 65.535E+3
Increment: 1
*RST: 1

Manual operation: See "Search range" on page 256

TRIGger<t>:SERPattern:COMPlex:PATTern<n>:TOPTtern <PatternTo>

Sets the the end value of a pattern range if `TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

<n> 1..4
Selects the complex pattern condition.

Parameters:
<PatternTo>

Manual operation: See "Pattern" on page 256

26.9.13.4 PRBS error

TRIGger<t>:SERPattern:PRBS:ERATe....1503
TRIGger<t>:SERPattern:PRBS:NBRTe....1503
TRIGger<t>:SERPattern:PRBS:PSEQuence....1503

TRIGger<t>:SERPattern:PRBS:ERATe <PRBSBtErrRate>

Sets the bit error rate for the PRBS sequence.

Suffix:
<t> 1..3

Parameters:
<PRBSBtErrRate>
Range: 0 to 100
Increment: 100E-6
*RST: 1
Default unit: %

Usage: Asynchronous command

Manual operation: See "PRBS Bit error rate" on page 257

TRIGger<t>:SERPattern:PRBS:NBRTe <PRBSNomBitRate>

Sets the nominal bit rate for the PRBS sequence. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Suffix:
<t> 1..3

Parameters:
<PRBSNomBitRate>
Range: 200E+3 to 2.5E+9
Increment: 10
*RST: 1E+9
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Nominal bit rate" on page 257

TRIGger<t>:SERPattern:PRBS:PSEQuence <PRBSSequence>

Selects a predefined pseudorandom binary sequence.

Suffix:
<t> 1..3

Parameters:
<PRBSSequence> PRBS7 | PRBS9 | PRBS11 | PRBS15 | PRBS16 | PRBS17 | PRBS20 | PRBS23 | PRBS29 | PRBS31
*RST: PRBS7

Usage: Asynchronous command

Manual operation: See "PRBS Sequence" on page 257

26.9.13.5 8b/10b

TRIGger<t>:SERPattern:EBTB:ALIGnment 1504
TRIGger<t>:SERPattern:EBTB:APPend 1504
TRIGger<t>:SERPattern:EBTB:CLEar 1505
TRIGger<t>:SERPattern:EBTB:COUNt? 1505
TRIGger<t>:SERPattern:EBTB:ERRor<n>:DISParity 1505
TRIGger<t>:SERPattern:EBTB:ERRor<n>:SYMBol 1505
TRIGger<t>:SERPattern:EBTB:FID 1506
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:DMINus? 1506
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:DPLus? 1506
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:EBIT 1507
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:KDSYmbol 1507
TRIGger<t>:SERPattern:EBTB:SCRMble 1507

TRIGger<t>:SERPattern:EBTB:ALIGnment <EBTBAlignment>

Selects one of the comma control symbols used for synchronization.

Suffix:
<t> 1..3

Parameters:
<EBTBAlignment> K281 | K285 | K287
*RST: K285

Usage: Asynchronous command

Manual operation: See "Alignment" on page 258

TRIGger<t>:SERPattern:EBTB:APPend

Creates an empty row and adds it to the end of the active symbol description in the 8b/10b table.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "8b/10b table" on page 258

TRIGger<t>:SERPattern:EBTB:CLEar

Removes all entries from the 8b/10b table.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "8b/10b table" on page 258

TRIGger<t>:SERPattern:EBTB:COUNt?

Selects the number of 8b/10b symbols.

Suffix:
<t> 1..3

Return values:
<EBTBSymbolCnt> Range: 0 to 16
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "8b/10b table" on page 258

TRIGger<t>:SERPattern:EBTB:ERRor<n>:DISParity <EBTBDisparityErr>

Enables triggering on disparity errors.

Suffix:
<t> 1..3

<n> *

Parameters:
<EBTBDisparityErr> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Disparity error" on page 259

TRIGger<t>:SERPattern:EBTB:ERRor<n>:SYMBol <EBTBSymbolErr>

Enables triggering on symbol errors.

Suffix:
<t> 1..3

<n> *

Parameters:
<EBTBSymbolErr> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Symbol error" on page 259

TRIGger<t>:SERPattern:EBTB:FID <EBTBFrameId>

Selects the frame ID.

Suffix:
<t> 1..3

Parameters:
<EBTBFrameId> K280
*RST: K280

Usage: Asynchronous command

TRIGger<t>:SERPattern:EBTB:SYMBols<n>:DMINus?

Returns the value for the negative running disparity RD-.

Suffix:
<t> 1..3

<n> 1...16
Sets the index of the symbol.

Return values:
<DMinus>

Usage: Query only
Asynchronous command

Manual operation: See "8b/10b table" on page 258

TRIGger<t>:SERPattern:EBTB:SYMBols<n>:DPLus?

Returns the value for the positive running disparity RD+.

Suffix:
<t> 1..3

<n> 1...16
Sets the index of the symbol.

Return values:
<DPlus>

Usage: Query only
Asynchronous command

Manual operation: See "8b/10b table" on page 258

TRIGger<t>:SERPattern:EBTB:SYMBols<n>:EBIT <EightBit>

Sets the 8b bit value.

Suffix:
<t> 1..3

<n> 1...16
Sets the index of the symbol.

Parameters:
<EightBit>

Usage: Asynchronous command

Manual operation: See "8b/10b table" on page 258

TRIGger<t>:SERPattern:EBTB:SYMBols<n>:KDSYmbol <KDSymbol>

Sets the data characters (Dx.y) or the control characters (Kx.y)

Suffix:
<t> 1..3

<n> 1...16
Sets the index of the symbol.

Parameters:
<KDSymbol>

Usage: Asynchronous command

Manual operation: See "8b/10b table" on page 258

TRIGger<t>:SERPattern:EBTB:SCRMble <EBTBScrambleMd>

Selects if the data is scrambled or unscrambled.

Suffix:
<t> 1..3

Parameters:
<EBTBScrambleMd> SCRM | NSCR

`SCRM`: scrambled
`NSCR`: unscrambled

*RST: NSCR

Usage: Asynchronous command

Manual operation: See "Scramble" on page 258

26.9.13.6 128b/132b

TRIGger<t>:SERPattern:I32B:APATtern 1508
TRIGger<t>:SERPattern:I32B:PATTern 1508
TRIGger<t>:SERPattern:I32B:SKAFter 1508
TRIGger<t>:SERPattern:I32B:SSTP 1509
TRIGger<t>:SERPattern:I32B:SSTR 1509
TRIGger<t>:SERPattern:I32B:SYMType 1509

TRIGger<t>:SERPattern:I32B:APATtern <Alignment>

Sets the alignment pattern.

Suffix:
<t> 1..3

Parameters:
<Alignment>

Usage: Asynchronous command

Manual operation: See "Alignment / Sync" on page 259

TRIGger<t>:SERPattern:I32B:PATTern <Pattern>

Defines the control block or data block pattern in binary or hex format.

Suffix:
<t> 1..3

Parameters:
<Pattern>

Usage: Asynchronous command

Manual operation: See "Pattern" on page 260

TRIGger<t>:SERPattern:I32B:SKAFter <SkipAfter>

Sets the skip bytes symbols send after a skip end symbol .

Suffix:
<t> 1..3

Parameters:
<SkipAfter> Range: 1 to 32
Increment: 1
*RST: 3

Usage: Asynchronous command

Manual operation: See "Skip bytes" on page 260

TRIGger<t>:SERPattern:I32B:SSTP <SkipStop>

Sets the skip end symbol.

Suffix:
<t> 1..3

Parameters:
<SkipStop>

Usage: Asynchronous command

Manual operation: See "Skip end" on page 260

TRIGger<t>:SERPattern:I32B:SSTR <SkipStart>

Sets the start skip value.

Suffix:
<t> 1..3

Parameters:
<SkipStart>

Usage: Asynchronous command

Manual operation: See "Skip start" on page 260

TRIGger<t>:SERPattern:I32B:SYMType <SymbolType>

Selects the type of pattern, control block or the data block.

Suffix:
<t> 1..3

Parameters:
<SymbolType> CTL | DAT
*RST: DAT

Usage: Asynchronous command

Manual operation: See "Block type" on page 260

26.9.13.7 128b/130b

TRIGger<t>:SERPattern:I30B:APATtern 1510
TRIGger<t>:SERPattern:I30B:PATTern 1510
TRIGger<t>:SERPattern:I30B:SKAFter 1510
TRIGger<t>:SERPattern:I30B:SSTP 1510
TRIGger<t>:SERPattern:I30B:SSTR 1511
TRIGger<t>:SERPattern:I30B:SYMType 1511

TRIGger<t>:SERPattern:I30B:APATtern <Alignment>

Sets the alignment pattern.

Suffix:
<t> 1..3

Parameters:
<Alignment>

Usage: Asynchronous command

Manual operation: See "Alignment / Sync" on page 259

TRIGger<t>:SERPattern:I30B:PATTern <Pattern>

Defines the OS or data block pattern in binary or hex format.

Suffix:
<t> 1..3

Parameters:
<Pattern>

Usage: Asynchronous command

Manual operation: See "Pattern" on page 260

TRIGger<t>:SERPattern:I30B:SKAFter <SkipAfter>

Sets the skip bytes symbols send after a skip end symbol .

Suffix:
<t> 1..3

Parameters:
<SkipAfter> Range: 1 to 32
Increment: 1
*RST: 3

Usage: Asynchronous command

Manual operation: See "Skip bytes" on page 260

TRIGger<t>:SERPattern:I30B:SSTP <SkipStop>

Sets the skip end symbol.

Suffix:
<t> 1..3

Parameters:
<SkipStop>

Usage: Asynchronous command

Manual operation: See "Skip end" on page 260

TRIGger<t>:SERPattern:I30B:SSTR <SkipStart>

Sets the start skip value.

Suffix:
<t> 1..3

Parameters:
<SkipStart>

Usage: Asynchronous command

Manual operation: See "Skip start" on page 260

TRIGger<t>:SERPattern:I30B:SYMType <SymbolType>

Selects the type of pattern, control block or the data block.

Suffix:
<t> 1..3

Parameters:
<SymbolType> OS | DAT
*RST: DAT

Usage: Asynchronous command

Manual operation: See "Block type" on page 260

26.9.14 CDR trigger

The CDR trigger is only available for the A-event (Suffix = 1).

CDR:HARDware:PRSStandard....1511
TRIGger<t>:CDR:EYE:ALGorithm.... 1512
TRIGger<t>:CDR:EYE:SREStimate[:RUN]....1512
TRIGger<t>:CDR:EYE:BWIDth....1512
TRIGger<t>:CDR:EYE:RELBwidth....1513
TRIGger<t>:CDR:EYE:SAMTime....1513
TRIGger<t>:CDR:EYE:SOURce?.... 1513
TRIGger<t>:CDR:EYE:SIGNallevel<n>.... 1514
TRIGger<t>:CDR:EYE:THReshold<n>.... 1514

CDR:HARDware:PRSStandard

Sets the settings of the hardware CDR to the serial standard that is selected for the source.

Usage: Event
Asynchronous command

Manual operation: See "Preset serial standard" on page 230

TRIGger<t>:CDR:EYE:ALGorithm <SerStdTyp>

Sets the software algorithm that is used for clock data recovery.

Suffix:
<t> 1..3

Parameters:
<SerStdTyp> CFRequency | FF

CFRequency
Constant frequency. CDR uses the nominal bit rate to generate the clock signal. The method assumes that the frequency of the signal is constant during the complete acquisition.

FF
Feed forward algorithm, a mathematical optimization method. Feed forward is available if none of the listed serial standards is used (`SIGNalconfig:SETup:SETTing<m>:SERStandard` is set to `CUSTom`).

*RST: FF

Usage: Asynchronous command

Manual operation: See "Algorithm" on page 230

TRIGger<t>:CDR:EYE:SREStimate[:RUN]

Estimates the bite rate for the current acquisition.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "Bit rate estimation, Symbol rate estimation" on page 230

TRIGger<t>:CDR:EYE:BWIDth <Bandwidth>

Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization. The PLL bandwidth is usually defined by the transmission standard.

Suffix:
<t> 1..3

Parameters:
<Bandwidth> Range: 20E+3 to 10E+6
Increment: 10
*RST: 599.88E+3
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Algorithm settings" on page 231

TRIGger<t>:CDR:EYE:RELBwidth <RelBw>

Sets the relative bandwidth, which is the ratio of the nominal bit rate to the PLL bandwidth.

Suffix:
<t> 1..3

Parameters:
<RelBw>
Range: 500 to 3000
Increment: 1
*RST: 1667

Usage: Asynchronous command

Manual operation: See "Algorithm settings" on page 231

TRIGger<t>:CDR:EYE:SAMTime <SamplingTime>

Sets a sampling time for the clock signal, an offset for the clock edge in relation to the bit start. The clock edge sets the beginning of the unit interval. The sampling time is a number between 0 and 1. Value 0 sets the clock edge to the beginning of the bit period; value 0.5 sets the clock edge to the middle of the bit period.

Suffix:
<t> 1..3

Parameters:
<SamplingTime>
Range: 0 to 1
Increment: 0.01
*RST: 0.5
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Sampling time" on page 229

TRIGger<t>:CDR:EYE:SOURce?

Returns the channel signal that is used for clock recovery. You can set the source with `TRIGger<t>:SOURce[:SELect]`.

The source cannot be changed if the serial pattern trigger is selected in the trigger setup and the CDR is enabled. In this case, the instrument triggers on the recovered clock, trigger source and CDR source are the same.

Suffix:
<t> 1..3

Return values:
<SourceType> C1 | C2 | C3 | C4
*RST: C1

Usage: Query only
Asynchronous command

Manual operation: See "Source" on page 229

TRIGger<t>:CDR:EYE:SIGNallevel<n> <SignalLevel>

Sets the signal levels for PAM-N signals with PAM order >2.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<n> *
Index of the signal level, depends on the PAM order of the signal

Parameters:
<SignalLevel> Numeric value

Usage: Asynchronous command

Manual operation: See "Thresholds, Signal levels" on page 230

TRIGger<t>:CDR:EYE:THReshold<n> <Threshold>

Sets the threshold for the transitions of PAM-N signals with PAM order >2.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<n> *
Index of the transition, depends on the PAM order of the signal:
1 for transition 0 <> 1, 2 for transition 1 <> 2 etc.

Parameters:
<Threshold> Numeric value

Usage: Asynchronous command

Manual operation: See "Thresholds, Signal levels" on page 230

26.9.15 TV/Video trigger

The TV or video trigger requires a channel input as trigger source (`TRIGger<t>:SOURce[:SELect]`). It is only available for the A-event (Suffix = 1).

Make sure to set the trigger level - the threshold of the sync pulse - with `TRIGger<t>:LEVel<n>[:VALue]`.

TRIGger<t>:TV:STANdard 1515
TRIGger<t>:TV:MODE 1515
TRIGger<t>:TV:POLarity 1516
TRIGger<t>:TV:LINE 1516
TRIGger<t>:TV:LFIeld 1517
TRIGger<t>:TV:CUSTom:SCANmode 1518
TRIGger<t>:TV:CUSTom:LDURation 1518
TRIGger<t>:TV:CUSTom:STYPe 1518
TRIGger<t>:TV:CUSTom:SDURation 1519

TRIGger<t>:TV:STANdard <Standard>

Sets the TV standard.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<Standard> CUSTom | PAL | PALM | NTSC | SECam | P480L60HZ | P720L30HZ | P720L50HZ | P720L60HZ | I1080L50HZ | I1080L60HZ | P1080L24HZ | P1080L24HZSF | P1080L25HZ | P1080L30HZ | P1080L50HZ | P1080L60HZ

CUSTom
User-defined signal. Configure the signal using:
`TRIGger<t>:TV:CUSTom:SCANmode`
`TRIGger<t>:TV:CUSTom:STYPe`
`TRIGger<t>:TV:CUSTom:LDURation`
`TRIGger<t>:TV:CUSTom:SDURation`

PAL | PALM | NTSC | SECam
SDTV standards. PALM = PAL-M

PxxxxLyyHZ
HDTV standards using progressive scanning (P). xxxx indicates the number of active lines, yy is the frame rate.

IxxxxLxxHZ
HDTV standards using interlaced scanning (I). xxxx indicates the number of active lines, yy is the field rate.

P1080L24HZSF
1080p/24sF is a HDTV standard using progressive segmented frame scanning.

*RST: PAL

Usage: Asynchronous command

Manual operation: See "Standard" on page 223

TRIGger<t>:TV:MODE <Mode>

Selects the lines or fields on which the instrument can trigger. Available modes depend on the scanning system.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Mode> ALL | ODD | EVEN | ALINe | LINE

ALL
All fields, triggers on the frame start (progressive scanning) or field start (interlaced and progressive segmented frame scanning)

ODD | EVEN
Only available for interlaced scanning and progressive segmented frame scanning. Triggers on the field start of the odd or even field.

ALINe
All lines, triggers on all line starts.

LINE
Triggers on a specified line. To set the line number, use `TRIGger<t>:TV:LINE`. For NTSC signals, set also the field with `TRIGger<t>:TV:LFIeld`.

*RST: ALL

Usage: Asynchronous command

Manual operation: See "Mode" on page 224

TRIGger<t>:TV:POLarity <Polarity>

Sets the polarity of the *signal*. Note that the sync pulse has the opposite polarity, for example, a positive signal has a negative sync pulse.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Polarity> POSitive | NEGative

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Signal polarity" on page 224

TRIGger<t>:TV:LINE <LineNumber>

Specifies the line number to trigger on. The command is relevant if `TRIGger<t>:TV:MODE` is set to `LINe`.

Usually the lines of the frame are counted beginning from the frame start. For NTSC signals, the lines are counted per field, not per frame. For these signals, set also the field with `TRIGger<t>:TV:LFIeld`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<LineNumber> Range: Depends on the standard, see table below
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Line #" on page 224

Standard	Minimum value	Maximum value
PAL	1	625
PAL-M	1	525
NTSC	1	263 in odd field 262 in even field
SECAM	1	625
480p/60 (`P480L60HZ`)	1	525
720p/30 (`P720L30HZ`) 720p/50 (`P720L50HZ`) 720p/60 (`P720L60HZ`)	1	750
1080i/50 (`I1080L50HZ`) 1080i/60 (`I1080L60HZ`) 1080p/24 (`P1080L24HZ`) 1080p/24sF (`P1080L24HZSF`) 1080p/25 (`P1080L25HZ`) 1080p/30 (`P1080L30HZ`) 1080p/50 (`P1080L50HZ`) 1080p/60 (`P1080L60HZ`)	1	1125

TRIGger<t>:TV:LFIeld <LineField>

The commands is only relevant for NTSC signals and sets the field in which the line number is counted.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<LineField> FIELD1 | FIELD2
FIELD1 = odd field
FIELD2 = even field
*RST: FIELD1

Usage: Asynchronous command

Manual operation: See "Line #" on page 224

TRIGger<t>:TV:CUSTom:SCANmode <ScanMode>

Sets the scanning system. Only relevant if `TRIGger<t>:TV:STANdard` is set to `CUSTom`.

See also: "Scan" on page 226.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<ScanMode> INTerlaced | PROGressive | SEGMented

SEGMented: Progressive segmented frame uses progressive scanning to capture the frame, and interlaced scanning for transmission and display.

*RST: INTerlaced

Usage: Asynchronous command

Manual operation: See "Scan" on page 226

TRIGger<t>:TV:CUSTom:LDURation <LinePeriod>

Sets the duration of a line, the time between two successive sync pulses. Only relevant if `TRIGger<t>:TV:STANdard` is set to `CUSTom`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<LinePeriod> Range: 1E-6 to 500E-6
Increment: 100E-9
*RST: 64E-6
Default unit: s

Usage: Asynchronous command

Manual operation: See "Line period" on page 225

TRIGger<t>:TV:CUSTom:STYPe <SyncPulseType>

Sets the type of the sync pulse. Only relevant if `TRIGger<t>:TV:STANdard` is set to `CUSTom`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<SyncPulseType> BILevel | TRILevel

BILevel
Bi-level sync pulse, usually used in SDTV signals

TRILevel
Tri-level sync pulse, used in HDTV signals

*RST: BILevel

Usage: Asynchronous command

Manual operation: See "Pulse type" on page 225

TRIGger<t>:TV:CUSTom:SDURation <SyncPulseDurat>

Sets the width of the sync pulse. Only relevant if `TRIGger<t>:TV:STANdard` is set to `CUSTom`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<SyncPulseDurat> Range: 100E-9 to 100E-6
Increment: 100E-9
*RST: 4.7E-6
Default unit: s

Usage: Asynchronous command

Manual operation: See "Pulse width" on page 225

26.9.16 Line trigger

To select the line trigger, set `TRIGger<t>:SOURce[:SELect]` to `LINE`.

TRIGger<t>:POWerline:SLOPe <Slope>

Selects the rising or falling edges of the AC power input for the trigger condition.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Slope> POSitive | NEGative
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 226

26.9.17 Trigger qualification

The A-event can have its own trigger qualification. Qualification is not available for B- and R-events (event suffix m = 2 | 3) and some trigger types.

A suffix defines the trigger type to which the qualification belongs.

Table 26-1: Trigger type suffixes

Suffix	Trigger type
1	EDGE
2	GLITch
3	WIDTh
4	RUNT
5	WINDow
6	TIMeout
7	INTerval
8	Qualification is not supported (SLEWrate)
9	Qualification is not supported (SETHold)
10	STATe
11	PATTern
12	qualification is not supported (ANEDge, ext. trigger input)
13	Currently not used
14	Currently not used
15	Qualification is not supported (SERPattern)
16	Qualification is not supported (NFC)
17	Qualification is not supported (TV)
18	Qualification is not supported (CDR)

TRIGger<t>:QUALify<n>:STATe 1521
TRIGger<t>:QUALify<n>:A[:ENABle] 1521
TRIGger<t>:QUALify<n>:B[:ENABle] 1521
TRIGger<t>:QUALify<n>:C[:ENABle] 1521
TRIGger<t>:QUALify<n>:D[:ENABle] 1521
TRIGger<t>:QUALify<n>:A:LOGic 1522
TRIGger<t>:QUALify<n>:B:LOGic 1522
TRIGger<t>:QUALify<n>:C:LOGic 1522
TRIGger<t>:QUALify<n>:D:LOGic 1522

TRIGger<t>:QUALify<n>:AB:LOGic 1522
TRIGger<t>:QUALify<n>:CD:LOGic 1522
TRIGger<t>:QUALify<n>:ABCD:LOGic 1522

TRIGger<t>:QUALify<n>:STATe <AddTrigLogi>

Enables the use of the qualification definition for the selected trigger event.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<n> 1..18
Defines the trigger type, see Table 26-1.

Parameters:
<AddTrigLogi> OFF | ON

ON
The qualification expression is considered for the trigger event.

OFF
The qualification expression is ignored for the trigger event.

*RST: OFF

Usage: Asynchronous command

TRIGger<t>:QUALify<n>:A[:ENABle] <State>
TRIGger<t>:QUALify<n>:B[:ENABle] <State>
TRIGger<t>:QUALify<n>:C[:ENABle] <State>
TRIGger<t>:QUALify<n>:D[:ENABle] <State>

The command is relevant for qualification, for pattern trigger and for state trigger.

Select the channels to be considered:

- A[:ENABle]: C1
- B[:ENABle]: C2
- C[:ENABle]: C3
- D[:ENABle]: C4

The trigger source cannot be enabled.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<n> 1..18
Trigger type, see Table 26-1.

Parameters:
<State> OFF | ON

ON
The qualification expression is considered.

OFF
The qualification expression is ignored.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Pattern" on page 220

TRIGger<t>:QUALify<n>:A:LOGic <Operator>
TRIGger<t>:QUALify<n>:B:LOGic <Operator>
TRIGger<t>:QUALify<n>:C:LOGic <Operator>
TRIGger<t>:QUALify<n>:D:LOGic <Operator>

Defines the logic for the indicated channel:

- A: C1
- B: C2
- C: C3
- D: C4

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<n> 1..18
Trigger type, see Table 26-1.

Parameters:

<Operator> DIRect | HIGH | NOT | LOW

DIRect
Input value remains unchanged

NOT
Input value is inverted

*RST: DIRect

Usage: Asynchronous command

Manual operation: See "Pattern" on page 220

TRIGger<t>:QUALify<n>:AB:LOGic <Operator>
TRIGger<t>:QUALify<n>:CD:LOGic <Operator>
TRIGger<t>:QUALify<n>:ABCD:LOGic <Operator>

Defines the logical combination of the indicated channels after evaluating the previous logical operations:

- AB: CH1 and CH2
- CD: CH3 and CH4
- ABCD: result of AB and CD

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<n> 1..18
Trigger type, see Table 26-1.

Parameters:
<Operator> AND | NAND | OR | NOR

AND
logical AND, conjunctive combination

NAND
logical NOT AND

OR
logical OR, disjunctive combination

NOR
logical NOT OR

*RST: AND

Usage: Asynchronous command

Manual operation: See "Pattern" on page 220

26.9.18 Holdoff

TRIGger<t>:HOLDoff:MODE 1523
TRIGger<t>:HOLDoff:TIME 1524
TRIGger<t>:HOLDoff:EVENts 1525
TRIGger<t>:HOLDoff:MIN 1525
TRIGger<t>:HOLDoff:MAX 1526
TRIGger<t>:HOLDoff:AUTotime? 1526
TRIGger<t>:HOLDoff:SCALing 1527

TRIGger<t>:HOLDoff:MODE <Mode>

Selects the method to define the holdoff condition.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.

Holdoff settings are not available at the following conditions:

- The trigger source is an external trigger input.
- The trigger source is a serial bus.
- The trigger type is serial pattern or CDR.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Mode> TIME | EVENts | RANDom | AUTO | OFF

TIME
Defines the holdoff directly as a time period. The next trigger occurs only after the "Holdoff time" has passed (defined using `TRIGger<t>:HOLDoff:TIME`).

EVENts
Defines the holdoff as a number of trigger events. The next trigger occurs only when this number of events is reached. The number of triggers to be skipped is defined using `TRIGger<t>:HOLDoff:EVENts`.

RANDom
Defines the holdoff as a random time limited by `TRIGger<t>:HOLDoff:MIN` on page 1525 and `TRIGger<t>:HOLDoff:MAX` on page 1526. For each acquisition period, the instrument selects a new random holdoff time from the specified range.

AUTO
The holdoff time is calculated automatically based on the current horizontal scale.

OFF
No holdoff

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 233

TRIGger<t>:HOLDoff:TIME <Time>

Defines the holdoff time period. The next trigger occurs only after this time has passed. The setting is relevant if the holdoff mode is set to TIME.

See also:

- `TRIGger<t>:HOLDoff:MODE`

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Time>
Range: 100E-9 to 10
Increment: 200E-6
*RST: 1E-3
Default unit: s

Example:
```
TRIGger:HOLDoff:MODE TIME
TRIGger:HOLDoff:TIME 1ms
```
The holdoff time is set to 1 ms.

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 233

TRIGger<t>:HOLDoff:EVENts <Events>

Defines the number of triggers to be skipped. The next trigger only occurs when this number of events is reached. The setting is relevant if the holdoff mode is set to EVENts.

See also:

- `TRIGger<t>:HOLDoff:MODE`

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<Events> Range: 1 to 2.14748E+9
Increment: 1
*RST: 1

Example:

```
TRIGger:HOLDoff:MODE EVENts
TRIGger:HOLDoff:EVENts 5
```

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 233

TRIGger<t>:HOLDoff:MIN <RandomMinTime>

Defines the lower limit for the random time holdoff. The setting is relevant if the holdoff mode is set to RANDom.

See also:

- `TRIGger<t>:HOLDoff:MODE`
- `TRIGger<t>:HOLDoff:MAX`

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<RandomMinTime> Range: 100E-9 to 5
Increment: 200E-6
*RST: 1E-3
Default unit: s

Example:

```
TRIGger:HOLDoff:MODE RANDom
TRIGger:HOLDoff:MIN 1ms
TRIGger:HOLDoff:MAX 2ms
```

The holdoff time is set randomly between 1 ms and 2 ms.

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 233

TRIGger<t>:HOLDoff:MAX <RandomMaxTime>

Defines the upper limit for the random time holdoff. The setting is relevant if the holdoff mode is set to RANDom.

See also:

- `TRIGger<t>:HOLDoff:MODE`
- `TRIGger<t>:HOLDoff:MIN`

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<RandomMaxTime> Range: 100E-9 to 10
Increment: 200E-6
*RST: 2E-3
Default unit: s

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 233

TRIGger<t>:HOLDoff:AUTotime?

Returns the resulting holdoff time if the holdoff mode is set to AUTO: *Auto time* = *Auto time scaling* * *Horizontal scale*. The auto time scaling factor is defined with `TRIGger<t>:HOLDoff:SCALing`.

See also: `TRIGger<t>:HOLDoff:MODE`

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Return values:
<AutoTime> Holdoff time
Range: 100E-9 to 10
*RST: 1E-3
Default unit: s

Example:
```
TRIGger:HOLDoff:MODE AUTO
TRIGger:HOLDoff:SCALing 0.5
TRIGger:HOLDoff:AUTotime?
1ms
```
Result if the horizontal scale is 1 ns/div

Usage: Query only
Asynchronous command

Manual operation: See "Holdoff mode" on page 233

TRIGger<t>:HOLDoff:SCALing <AutoTimeScl>

Sets the auto time scaling factor the horizontal scale is multipied with: *Auto time* = *Auto time scaling* * *Horizontal scale*. The setting is relevant if the holdoff mode is set to AUTO.

See also:

- `TRIGger<t>:HOLDoff:MODE`
- `TRIGger<t>:HOLDoff:AUTotime?` on page 1526

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<AutoTimeScl> Range: 1E-3 to 1000
Increment: 1
*RST: 0.5

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 233

26.9.19 Conditioning

TRIGger<t>:LEVel<n>:NOISe[:STATe] 1527
TRIGger<t>:LEVel<n>:NOISe:MODE 1528
TRIGger<t>:LEVel<n>:NOISe:ABSolute 1528
TRIGger<t>:LEVel<n>:NOISe:PERDivision 1529
TRIGger<t>:LEVel<n>:NOISe:RELative 1529
TRIGger<t>:ANEDge:NREJect 1530

TRIGger<t>:LEVel<n>:NOISe[:STATe] <HysteresisMode>

Selects how the hysteresis is set.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

<n> 1..31
Indicates the trigger source:
1...4 = channel 1 to 4
5 = external trigger input
6...9 and 11 = not available
10 = line trigger
12...27 = R&S RT-ZVC input channels
28...31 = differential signals Diff1, Diff2 and Common1, Common2

Parameters:
<HysteresisMode> AUTO | MANual

AUTO
This is the recommended mode. The hysteresis is set by the instrument to reject at least the internal noise of the instrument. You can define a higher minimum value using `TRIGger<t>:LEVel<n>:NOISe:ABSolute`.

MANual
The hysteresis is defined directly with `TRIGger<t>:LEVel<n>:NOISe:ABSolute`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Hysteresis mode" on page 234

TRIGger<t>:LEVel<n>:NOISe:MODE <HystMode>

Selects how the hysteresis is set.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

<n> 1..31
Indicates the trigger source: see `TRIGger<t>:LEVel<n>:NOISe[:STATe]` on page 1527.

Parameters:
<HystMode> ABS | REL

ABS
The hysteresis is set in absolute values (voltage).

REL
The hysteresis is defined in relative values (div).

*RST: ABS

Usage: Asynchronous command

Manual operation: See "Size mode" on page 235

TRIGger<t>:LEVel<n>:NOISe:ABSolute <HystAbs>

Defines a range in absolute values around the trigger level. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

<n> 1..31
Indicates the trigger source: see `TRIGger<t>:LEVel<n>:NOISe[:STATe]` on page 1527.

Parameters:

<HystAbs>
Range: 0 to The value corresponding to full division range. The exact maximum value depends on the selected vertical scale.
Increment: 1E-3
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Absolute hysteresis" on page 235

TRIGger<t>:LEVel<n>:NOISe:PERDivision <HystInDivs>

Defines a range in divisions around the trigger level. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:

<t>
1..3
Irrelevant, omit the suffix.

<n>
1..31
Indicates the trigger source: see `TRIGger<t>:LEVel<n>:NOISe[:STATe]` on page 1527.

Parameters:

<HystInDivs>
Hysteresis size in divisions
Range: 0 to 5
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Relative hysteresis" on page 235

TRIGger<t>:LEVel<n>:NOISe:RELative <HystRel>

Defines a range in percent around the trigger level. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:

<t>
1..3
Irrelevant, omit the suffix.

<n>
1..31
Indicates the trigger source: see `TRIGger<t>:LEVel<n>:NOISe[:STATe]` on page 1527.

Parameters:

<HystRel> Hysteresis in %. 10% = 1 div

Range: 0 to 50
Increment: 1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Relative hysteresis" on page 235

TRIGger<t>:ANEDge:NREJect <NoiseReject>

Enables the noise reject for the external trigger input.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<NoiseReject> OFF | ON

*RST: OFF

Usage: Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "Noise reject (Extern)" on page 235

26.9.20 Trigger sequence

TRIGger<t>:EVENt[:EVENt] 1530
TRIGger<t>:SEQuence:TYPE 1531
TRIGger<t>:ECOupling 1531
TRIGger<t>:SEQuence:DELay 1532
TRIGger<t>:SEQuence:COUNt 1532
TRIGger<t>:SEQuence:RESet:EVENt 1532
TRIGger<t>:SEQuence:RESet:TIMeout[:ENABle] 1533
TRIGger<t>:SEQuence:RESet:TIMeout:TIME 1533

TRIGger<t>:EVENt[:EVENt] <Class>

Selects, if you want to trigger on a single event, or on a series of events.

Suffix:

<t> 1..3

Parameters:

<Class> SINGle | SEQuence

*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Trigger on" on page 203

TRIGger<t>:SEQuence:TYPE <Sequence>

Selects the type of the sequence. All trigger sequences require that input channels CH1...4 are set as trigger sources for all conditions.

See also: Section 6.8, "Sequence", on page 240.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

Parameters:
<Sequence> ABR | AZ | ABRZ | AORB | AORBZ

ABR
Triggers if all conditions of A- and B-events, as well as additional delay and reset timeout or R-event (reset) conditions are fulfilled.

AZ
Triggers if the conditions of the A-event and the zone trigger are fulfilled. Additionally, a holdoff condition can be set.
Requires option R&S RTP-K19.

ABRZ
Triggers if all conditions of A- and B-events, reset timeout or R-event (reset) conditions are fulfilled for the defined zone.
Requires option R&S RTP-K19.

AORB
Triggers if the conditions of A-event or the conditions of the B-event are fulfilled.

AORBZ
Triggers if the conditions of A-event or the conditions of the B-event are fulfilled for the defined zone. Additionally, a holdoff condition can be set.
Requires option R&S RTP-K19.

*RST: ABR

Usage: Asynchronous command

Manual operation: See "Sequence" on page 242

TRIGger<t>:ECOupling <TrigLevEvtCpl>

Event coupling of trigger levels: Sets the trigger levels to the values of the indicated event. Thus, channel 1 has one trigger level for all events, channel 2 has one trigger level and so on.

Suffix:
<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger

Parameters:

<TrigLevEvtCpl> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Couple sequence thresholds" on page 243

TRIGger<t>:SEQuence:DELay <Delay>

Sets the time the instrument waits after an A-event until it recognizes B-events.

Suffix:

<t> 1..3
Irrelevant, omit the suffix.

Parameters:

<Delay> Range: 0 to 50
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "After 1st event wait" on page 242

TRIGger<t>:SEQuence:COUNt <Events>

Sets the number of B-events to be fulfilled after an A-event. The last B-event causes the trigger.

Suffix:

<t> 1..3
Irrelevant, omit the suffix.

Parameters:

<Events> Range: 1 to 2.14748E+9
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "2nd event count" on page 242

TRIGger<t>:SEQuence:RESet:EVENt <EnabRstEvt>

If set to ON, the trigger sequence is restarted by the R-event if the specified number of B-event does not occur.

Suffix:

<t> 1..3
Irrelevant, omit the suffix.

Parameters:
<EnabRstEvt> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Reset on event/Reset event" on page 243

TRIGger<t>:SEQuence:RESet:TIMeout[:ENABle] <State>

If set to ON, the instrument waits for the time defined using `TRIGger<t>:SEQuence:RESet:TIMeout:TIME` for the specified number of B-events. If no trigger occurs during that time, the sequence is restarted with the A-event.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Reset on timeout/Reset timeout" on page 243

TRIGger<t>:SEQuence:RESet:TIMeout:TIME <ResetTimeout>

The time the instrument waits for the number of B-events specified using `TRIGger<t>:SEQuence:COUNt` before the sequence is restarted with the A-event.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

Parameters:
<ResetTimeout> Range: 0 to 50
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Reset on timeout/Reset timeout" on page 243

26.9.21 Trigger control

TRIGger<t>:MODE....1534
TRIGger<t>:FORCe....1534
TRIGger<t>:OUT:POLarity....1534
TRIGger<t>:OUT:PLENgth....1535
TRIGger<t>:OUT:DELay....1535

TRIGger<t>:MODE <TriggerMode>

Sets the trigger mode which determines the behaviour of the instrument if no trigger occurs.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

Parameters:
<TriggerMode> AUTO | NORMal | FREerun

AUTO
The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. The time interval depends on the time base.

NORMal
The instrument acquires a waveform only if a trigger occurs.

FREerun
The instrument triggers after a very short time interval - faster than in AUTO mode. Real triggers are ignored.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "[Auto Norm]" on page 38

TRIGger<t>:FORCe

If the acquisition is running in normal mode and no valid trigger occurs, forcing the trigger provokes an immediate single acquisition. Thus you can confirm that a signal is available and use the waveform display to determine how to trigger on it.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

Usage: Event
Asynchronous command

Manual operation: See "Force Trigger" on page 233

TRIGger<t>:OUT:POLarity <Polarity>

Sets the polarity of the trigger out pulse.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

Parameters:
<Polarity> POSitive | NEGative

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Trigger out signal setup" on page 237

TRIGger<t>:OUT:PLENgth <PulseLength>

Sets the length of the trigger out pulse.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

Parameters:
<PulseLength> Range: 4E-9 to 0.06
Increment: 20E-9
*RST: 100E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Trigger out signal setup" on page 237

TRIGger<t>:OUT:DELay <Delay>

Sets the delay of the first pulse edge to the trigger point.

The setting is not available if a mask test or measurement is running and the on-violation event is set to trigger out pulse.

Suffix:
<t> 1..3
Irrelevant, omit the suffix.

Parameters:
<Delay> Range: 1.8E-6 to 512E-3
Increment: 1E-9
*RST: 1.8E-6
Default unit: s

Usage: Asynchronous command

Manual operation: See "Trigger out signal setup" on page 237

26.9.22 Actions on trigger

TRIGger<t>:EVENt:BEEP....1536
TRIGger<t>:EVENt:PRINt....1536
TRIGger<t>:EVENt:RUNexec....1536
TRIGger<t>:EVENt:TRIGgerout....1537
TRIGger<t>:EVENt:WFMSave....1537
TRIGger<t>:EVENt:RESSave....1537

TRIGger<t>:EVENt:BEEP <Beep>

Generates a beep sound if the command is set to `TRIGger`.

Suffix:
<t> 1..3
The suffix is irrelevant.

Parameters:
<Beep> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Actions on trigger" on page 236

TRIGger<t>:EVENt:PRINt <Print>

Saves a screenshot at each trigger if the command is set to `TRIGger`.

For screenshot settings, see Section 26.16.8, "Screenshots", on page 1796.

Suffix:
<t> 1..3
The suffix is irrelevant.

Parameters:
<Print> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Actions on trigger" on page 236

TRIGger<t>:EVENt:RUNexec <RunExecutable>

Starts an external application if the command is set to `TRIGger`.

Use the following commands to set up the application:

- `EXECutable:NAME` on page 1804
- `EXECutable:PARameter` on page 1805
- `EXECutable:WDIRectory` on page 1805

Suffix:
<t> 1..3
The suffix is irrelevant.

Parameters:
<RunExecutable> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Actions on trigger" on page 236

TRIGger<t>:EVENt:TRIGgerout <TrigOutPls>

Sends the trigger out signal to the [Trigger Out] connector if the command is set to `TRIGger` and a trigger occurs.

Suffix:
<t> Irrelevant, omit the suffix.

Parameters:
<TrigOutPls> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Actions on trigger" on page 236

TRIGger<t>:EVENt:WFMSave <SaveWfm>

Saves the waveform data to file at each trigger if the command is set to `TRIGger`.

For data export settings, see Section 26.16.4, "Waveform data: export to file", on page 1783

Suffix:
<t> 1..3
The suffix is irrelevant.

Parameters:
<SaveWfm> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Actions on trigger" on page 236

TRIGger<t>:EVENt:RESSave <SaveResults>

Starts the export of selected results to file at each trigger if the command is set to `TRIGger`.

Suffix:
<t> 1..3
The suffix is irrelevant.

Parameters:
<SaveResults> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Actions on trigger" on page 236

26.9.23 Zone trigger (option R&S RTP-K19)

TRIGger<t>:ZONE:EXPRession[:DEFine] <LogiExpr>

Defines the zone trigger.

Suffix:
<t> 1..3
The suffix is irrelevant.

Parameters:
<LogiExpr> String with the logical expression

Example: Prerequisite: mask tests MT1 and MT2 are defined, and also Zone1.

```
TRIGger:ZONE:EXPRession 'MT1 and MT2 and Zone1'
TRIGger:ZONE:EXPRession?
<-- MT1 and MT2 and Zone1
```

Usage: Asynchronous command

Firmware/software: FW 3.20

Manual operation: See "[Zone]" on page 38

SWTRigger:HISTory <ApplyZnTrigHistory>

Applies the zone trigger condition to the acquisitions in the history memory during history replay.

See: "Apply zone trigger to history" on page 247.

Parameters:
<ApplyZnTrigHistory> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Apply zone trigger to history" on page 247

26.9.24 External trigger input

External trigger signals, which are connected to the external trigger input, can be triggered with an edge trigger.

To control the external trigger signal, the TRPRobe commands are used. The required commands depend on the used probe type. They work in the same way as the PROBe commands. For details, see Section 26.8.7, "Probes", on page 1415

TRIGger<t>:ANEDge:COUPling <Coupling>

Sets the coupling for the external trigger signal.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Coupling> DC

DC
Direct connection with 50 Ω termination, passes both DC and AC components of the trigger signal.

*RST: DC

Usage: Asynchronous command

Manual operation: See "Coupling" on page 263

TRIGger<t>:ANEDge:FILTer <Filter>

Sets a filter for the external trigger signal to reject high or low frequencies.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Filter> OFF | LFReject | RFReject

OFF
The trigger signal is not filtered.

LFReject
Frequencies higher than the "Cut-off" frequency are rejected, lower frequencies pass the filter.
You can adjust the "Cut-off" frequency using the `TRIGger<t>:ANEDge:CUToff:LOWPass` command, the default is 50 kHz.

RFReject
Frequencies below the "Cut-off" frequency are rejected, higher frequencies pass the filter.
You can adjust the "Cut-off" frequency using the `TRIGger<t>:ANEDge:CUToff:HIGHpass` command, the default is 50 kHz.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Filter" on page 263

TRIGger<t>:ANEDge:CUToff:HIGHpass <AnalogCutOffHP>

Frequencies below the "Cut-off" frequency are rejected, higher frequencies pass the filter.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<AnalogCutOffHP> KHZ5 | KHZ50 | MHZ50
Cut-off frequency

KHZ5
5 kHz

KHZ50
50 kHz

MHZ50
50 MHz

*RST: KHZ50

Usage: Asynchronous command

TRIGger<t>:ANEDge:CUToff:LOWPass <AnalogCutOffLP>

Frequencies higher than the "Cut-off" frequency are rejected, lower frequencies pass the filter.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<AnalogCutOffLP> KHZ5 | KHZ50 | MHZ50

KHZ5
5 kHz

KHZ50
50 kHz

MHZ50
50 MHz

*RST: KHZ50

Usage: Asynchronous command

TRIGger<t>:ANEDge:GND <Ground>

Connects the analog signal to the ground.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Ground> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Ground" on page 263

TRIGger<t>:ANEDge:SLOPe <Slope>

Sets the edge for the trigger event.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Slope> POSitive | NEGative
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 205

TRIGger<t>:EXTern:OVERload <Overload>

The query returns the overload status of the external trigger input.

`:TRIGger:EXTern:OVERload 0` confirms the information in the message box, it has same effect as OK.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Overload> OFF | ON

ON | 1
lindicates an overload of the probe

OFF | 0
In a query: no overlaod.
Ssetting: confirms the information in the message box

*RST: OFF

Usage: Asynchronous command

26.9.25 Acquisition info

ACQuire:CURRent?

Shows the current number of acquisitions that have been acquired.

Return values:

<CurrAcqCnt>	Range:	0 to 4.29497E+9
	Increment:	1
	*RST:	0

Usage: Query only
Asynchronous command

26.10 Waveform analysis

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Zoom....1542
- Reference waveforms....1552
- Mathematics....1564
- Waveform histograms....1569
- History....1576
- XY-Diagram....1581

26.10.1 Zoom

LAYout:ZOOM:ADD....1543
LAYout:ZOOM:ADDCoupled....1543
LAYout:ZOOM:POSCoupling....1544
LAYout:ZOOM:HORZ:MODE....1544
LAYout:ZOOM:HORZ:ABSolute:POSition....1545
LAYout:ZOOM:HORZ:ABSolute:SPAN....1545
LAYout:ZOOM:HORZ:ABSolute:STARt....1545
LAYout:ZOOM:HORZ:ABSolute:STOP....1546
LAYout:ZOOM:HORZ:RELative:POSition....1546
LAYout:ZOOM:HORZ:RELative:SPAN....1547
LAYout:ZOOM:HORZ:RELative:STARt....1547
LAYout:ZOOM:HORZ:RELative:STOP....1547
LAYout:ZOOM:VERTical:MODE....1548
LAYout:ZOOM:VERTical:ABSolute:POSition....1548
LAYout:ZOOM:VERTical:ABSolute:SPAN....1549
LAYout:ZOOM:VERTical:ABSolute:STARt....1549

LAYout:ZOOM:VERTical:ABSolute:STOP 1549
LAYout:ZOOM:VERTical:RELative:POSition 1550
LAYout:ZOOM:VERTical:RELative:SPAN 1550
LAYout:ZOOM:VERTical:RELative:STARt 1550
LAYout:ZOOM:VERTical:RELative:STOP 1551
LAYout:ZOOM:REMove 1551

LAYout:ZOOM:ADD
<NodeName>,<ParentType>,<InsertBefore>,<XStart>,<XStop>,<YStart>,<YStop>,<NewZoomName>

Adds a new zoom diagram based on the specified waveform.

For numerical values, the input of a unit is not supported for this command.

Setting parameters:

<NodeName> String with the name of diagram to be zoomed

<ParentType> VERTical, OFF
The new zoom diagram is displayed below the original one.

<InsertBefore> OFF
Position of the zoom diagram, depending on `ParentType`

<XStart> Defines the x-value at the beginning of the zoom area.

<XStop> Defines the x-value at the end of the zoom area.

<YStart> Defines the y-value at the beginning of the zoom area.

<YStop> Defines the y-value at the end of the zoom area.

<NewZoomName> String with the name of the new zoom diagram.

Example: `LAYout:ZOOM:ADD 'Diagram1', VERT, OFF, -10e-9, 20e-9, -0.1, 0.05, 'MyZoom1'`
Creates the zoom diagram 'MyZoom1' for 'Diagram1'.

Example: See Section 26.3.1.2, "Creating zoom diagrams", on page 1329

Usage: Setting only
Asynchronous command

Manual operation: See "Standard zoom" on page 60

LAYout:ZOOM:ADDCoupled <ZoomName>,<XOffset>,<YOffset>,<NewZoomName>
LAYout:ZOOM:ADDCoupled? <NewZoomName>

Creates a new zoom diagram based on the settings of an existing zoom area for the same source.

For numerical values, the input of a unit is not supported for this command.

Setting parameters:

<ZoomName> Defines the name of the zoom diagram to be copied.

<XOffset> Defines an offset to the existing zoom area in x direction.

<YOffset> Defines an offset to the existing zoom area in y direction.

Parameters for setting and query:
<NewZoomName> Defines the name of the new zoom diagram.

Usage: Asynchronous command

Manual operation: See "Coupled zoom" on page 61

LAYout:ZOOM:POSCoupling <DiagGroupNme>,<ZmDiagNme>,<PosiCpl>
LAYout:ZOOM:POSCoupling? <DiagGroupNme>,<ZmDiagNme>

Enables or disables the position coupling of coupled zooms. If position coupling is enabled and one zoom area is moved, the other coupled zoom areas are moved, too, and keep their distance.

Parameters:
<PosiCpl> OFF | ON
*RST: OFF

Parameters for setting and query:
<DiagGroupNme> String with the name of the diagram on which the zoom is based

<ZmDiagNme> String with the name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Position coupling" on page 271

LAYout:ZOOM:HORZ:MODE <DiagGroupNme>,<ZmDiagNme>,<Mode>
LAYout:ZOOM:HORZ:MODE? <DiagGroupNme>,<ZmDiagNme>

Defines whether absolute or relative values are used to specify the x-axis values. Since the zoom area refers to the active signal, relative values ensure that the zoom area remains the same.

Parameters:
<Mode> ABS | REL
Mode used to specify the x-axis values of the zoom area.
*RST: ABS

Parameters for setting and query:
<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Example: See Section 26.3.1.2, "Creating zoom diagrams", on page 1329

Usage: Asynchronous command

Manual operation: See "X mode" on page 271

LAYout:ZOOM:HORZ:ABSolute:POSition
<DiagGroupNme>,<ZmDiagNme>,<Position>
LAYout:ZOOM:HORZ:ABSolute:POSition? <DiagGroupNme>,<ZmDiagNme>

Defines the x-value of the centerpoint of the zoom area.

For numerical values, the input of a unit is not supported for this command.

Parameters:

<Position>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "X position" on page 270

LAYout:ZOOM:HORZ:ABSolute:SPAN <DiagGroupNme>,<ZmDiagNme>,<Span>
LAYout:ZOOM:HORZ:ABSolute:SPAN? <DiagGroupNme>,<ZmDiagNme>

Defines the width of the zoom area.

For numerical values, the input of a unit is not supported for this command.

Parameters:

<Span>
Range: 0 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "X range" on page 271

LAYout:ZOOM:HORZ:ABSolute:STARt <DiagGroupNme>,<ZmDiagNme>,<Start>
LAYout:ZOOM:HORZ:ABSolute:STARt? <DiagGroupNme>,<ZmDiagNme>

Defines the lower limit of the zoom area on the x-axis.

For numerical values, the input of a unit is not supported for this command.

Parameters:

<Start>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "X start" on page 270

LAYout:ZOOM:HORZ:ABSolute:STOP <DiagGroupNme>,<ZmDiagNme>,<Stop>
LAYout:ZOOM:HORZ:ABSolute:STOP? <DiagGroupNme>,<ZmDiagNme>

Defines the upper limit of the zoom area on the x-axis.

For numerical values, the input of a unit is not supported for this command.

Parameters:

<Stop>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "X stop" on page 270

LAYout:ZOOM:HORZ:RELative:POSition
<DiagGroupNme>,<ZmDiagNme>,<RelPosi>
LAYout:ZOOM:HORZ:RELative:POSition? <DiagGroupNme>,<ZmDiagNme>

Defines the x-value of the centerpoint of the zoom area.

Parameters:

<RelPosi> Relative position of the centerpoint (x-value)

Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Example: See Section 26.3.1.2, "Creating zoom diagrams", on page 1329

Usage: Asynchronous command

Manual operation: See "X position" on page 270

LAYout:ZOOM:HORZ:RELative:SPAN
<DiagGroupNme>,<ZmDiagNme>,<RelativeSpan>
LAYout:ZOOM:HORZ:RELative:SPAN? <DiagGroupNme>,<ZmDiagNme>

Defines the width of the zoom area.

Parameters:
<RelativeSpan>
Range: 1E-15 to 100
Increment: 0.1
*RST: 1
Default unit: %

Parameters for setting and query:
<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Example: See Section 26.3.1.2, "Creating zoom diagrams", on page 1329

Usage: Asynchronous command

Manual operation: See "X range" on page 271

LAYout:ZOOM:HORZ:RELative:STARt
<DiagGroupNme>,<ZmDiagNme>,<RelativeStart>
LAYout:ZOOM:HORZ:RELative:STARt? <DiagGroupNme>,<ZmDiagNme>

Defines the lower limit of the zoom area on the x-axis.

Parameters:
<RelativeStart>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Parameters for setting and query:
<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "X start" on page 270

LAYout:ZOOM:HORZ:RELative:STOP
<DiagGroupNme>,<ZmDiagNme>,<RelativeStop>
LAYout:ZOOM:HORZ:RELative:STOP? <DiagGroupNme>,<ZmDiagNme>

Defines the upper limit of the zoom area on the x-axis.

Parameters:
<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:
<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "X stop" on page 270

LAYout:ZOOM:VERTical:MODE <DiagGroupNme>,<ZmDiagNme>,<Mode>
LAYout:ZOOM:VERTical:MODE? <DiagGroupNme>,<ZmDiagNme>

Defines whether absolute or relative values are used to specify the y-axis values. Since the zoom area refers to the active signal, relative values ensure that the zoom area remains the same.

Parameters:
<Mode> ABS | REL

Mode used to specify the y-axis values of the zoom area.

*RST: ABS

Parameters for setting and query:
<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y mode" on page 271

LAYout:ZOOM:VERTical:ABSolute:POSition
<DiagGroupNme>,<ZmDiagNme>,<Position>
LAYout:ZOOM:VERTical:ABSolute:POSition? <DiagGroupNme>,<ZmDiagNme>

Defines the y-value of the centerpoint of the zoom area.

For numerical values, the input of a unit is not supported for this command.

Parameters:
<Position> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:
<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y position" on page 271

LAYout:ZOOM:VERTical:ABSolute:SPAN <DiagGroupNme>,<ZmDiagNme>,<Span>
LAYout:ZOOM:VERTical:ABSolute:SPAN? <DiagGroupNme>,<ZmDiagNme>

Defines the height of the zoom area.

For numerical values, the input of a unit is not supported for this command.

Parameters:

<Span>
Range: 0 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y range" on page 271

LAYout:ZOOM:VERTical:ABSolute:STARt <DiagGroupNme>,<ZmDiagNme>,<Start>
LAYout:ZOOM:VERTical:ABSolute:STARt? <DiagGroupNme>,<ZmDiagNme>

Defines the lower limit of the zoom area on the y-axis.

For numerical values, the input of a unit is not supported for this command.

Parameters:

<Start>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y start" on page 270

LAYout:ZOOM:VERTical:ABSolute:STOP <DiagGroupNme>,<ZmDiagNme>,<Stop>
LAYout:ZOOM:VERTical:ABSolute:STOP? <DiagGroupNme>,<ZmDiagNme>

Defines the upper limit of the zoom area on the y-axis.

For numerical values, the input of a unit is not supported for this command.

Parameters:

<Stop>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y stop" on page 270

LAYout:ZOOM:VERTical:RELative:POSition
<DiagGroupNme>,<ZmDiagNme>,<RelPosi>
LAYout:ZOOM:VERTical:RELative:POSition? <DiagGroupNme>,<ZmDiagNme>

Defines the y-value of the centerpoint of the zoom area.

Parameters:
<RelPosi> Relative position of the centerpoint (y-value)

Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:
<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y position" on page 271

LAYout:ZOOM:VERTical:RELative:SPAN
<DiagGroupNme>,<ZmDiagNme>,<RelativeSpan>
LAYout:ZOOM:VERTical:RELative:SPAN? <DiagGroupNme>,<ZmDiagNme>

Defines the height of the zoom area.

Parameters:
<RelativeSpan> Range: 1E-15 to 100
Increment: 0.1
*RST: 1
Default unit: %

Parameters for setting and query:
<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y range" on page 271

LAYout:ZOOM:VERTical:RELative:STARt
<DiagGroupNme>,<ZmDiagNme>,<RelativeStart>
LAYout:ZOOM:VERTical:RELative:STARt? <DiagGroupNme>,<ZmDiagNme>

Defines the lower limit of the zoom area on the y-axis.

Parameters:

<RelativeStart>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y start" on page 270

LAYout:ZOOM:VERTical:RELative:STOP
<DiagGroupNme>,<ZmDiagNme>,<RelativeStop>
LAYout:ZOOM:VERTical:RELative:STOP? <DiagGroupNme>,<ZmDiagNme>

Defines the upper limit of the zoom area on the y-axis.

Parameters:

<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:

<DiagGroupNme> Name of the diagram on which the zoom area is based.

<ZmDiagNme> Name of the zoom diagram

Usage: Asynchronous command

Manual operation: See "Y stop" on page 270

LAYout:ZOOM:REMove <Diagram>,<Zoom>

Removes the specified zoom diagram.

Setting parameters:

<Diagram> Name of the diagram on which the zoom area is based.

<Zoom> Name of the zoom diagram

Example: See Section 26.3.1.2, "Creating zoom diagrams", on page 1329

Usage: Setting only
Asynchronous command

26.10.2 Reference waveforms

- Reference....1552
- Scaling....1554
- Waveform data export....1559
- Import of multichannel waveform data....1560
- CDR reference files....1562

26.10.2.1 Reference

REFCurve<rc>:SOURce....1552
REFCurve<rc>:STATe....1552
REFCurve<rc>:NAME....1553
REFCurve<rc>:OPEN....1553
REFCurve<rc>:UPDate....1553
REFCurve<rc>:SAVE....1553
REFCurve<rc>:DELete....1554
REFCurve<rc>:CLEar....1554

REFCurve<rc>:SOURce <Source>

Selects the source waveform to be used as a reference.

Suffix:

<rc> 1..4
Reference waveform

Parameters:

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | R1 | R2 | R3 | R4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | LANE1 | LANE2 | LANE3 | LANE4

Source of the reference waveform, see Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Source" on page 279

REFCurve<rc>:STATe <State>

If enabled, the reference waveform is displayed in the diagram.

Suffix:

<rc> 1..4
Reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show" on page 279

REFCurve<rc>:NAME <Name>

Defines the name of the reference waveform file to be loaded, saved or deleted.

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<Name> Path and name of the file that contains the reference waveform or to which the reference waveform is to be stored (`.xml` or `.bin` format), enclosed in single quotes.

Usage: Asynchronous command

REFCurve<rc>:OPEN

Loads the reference waveform file selected by `REFCurve<rc>:NAME` on page 1553.

Suffix:
<rc> 1..4
Reference waveform

Usage: Setting only

Manual operation: See "File" on page 280

REFCurve<rc>:UPDate

Copies the selected source waveform (see `REFCurve<rc>:SOURce` on page 1552) with all its settings to the memory of the reference waveform.

Suffix:
<rc> 1..4
Reference waveform

Usage: Event

Manual operation: See "Update" on page 280

REFCurve<rc>:SAVE

Saves the reference waveform to the file selected by `REFCurve<rc>:NAME` on page 1553.

Suffix:
<rc> 1..4
Reference waveform

Usage: Setting only

Manual operation: See "File" on page 280

REFCurve<rc>:DELete

Deletes the reference waveform file selected by `REFCurve<rc>:NAME` on page 1553.

Suffix:
<rc> 1..4
Reference waveform

Usage: Setting only

Manual operation: See "File" on page 280

REFCurve<rc>:CLEar

The selected reference waveform is no longer displayed, its memory is deleted.

Suffix:
<rc> 1..4
Reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Clear" on page 280

26.10.2.2 Scaling

REFCurve<rc>:RESTore....1555
REFCurve<rc>:VMODe....1555
REFCurve<rc>:SCALe....1555
REFCurve<rc>:POSition....1556
REFCurve<rc>:OFFSet?....1556
REFCurve<rc>:TOORignal....1556
REFCurve<rc>:RESCale:VERTical:STATe....1557
REFCurve<rc>:RESCale:VERTical:FACTor....1557
REFCurve<rc>:RESCale:VERTical:OFFSet....1557
REFCurve<rc>:HMODe....1558
REFCurve<rc>:RESCale:HORizontal:STATe....1558
REFCurve<rc>:RESCale:HORizontal:FACTor....1558
REFCurve<rc>:RESCale:HORizontal:POSition....1559

REFCurve<rc>:RESTore

Resets the time scale and the reference point to the original values of the reference waveform.

Suffix:
<rc> 1..4
Reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Restore Settings" on page 281

REFCurve<rc>:VMODe <VerticalMode>

Selects the coupling of vertical settings.

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<VerticalMode> COUPled | INDependent

COUPled
Vertical position and scale of the source are used.

INDependent
Scaling and position can be set specific to the reference waveform.

*RST: INDependent

Usage: Asynchronous command

Manual operation: See "Mode" on page 281

REFCurve<rc>:SCALe <VerticalScale>

Sets the scale factor for the reference waveform if vertical scaling is set to "Independent" (see `REFCurve<rc>:VMODe` on page 1555).

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<VerticalScale> Range: 1E-15 to 100E+24
Increment: 10E-6
*RST: 0.5
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Scale" on page 282

REFCurve<rc>:POSition <VertPosi>

Moves the reference waveform and its horizontal axis up or down in the diagram, if vertical scaling is set to "Independent" (see `REFCurve<rc>:VMODe` on page 1555).

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<VertPosi> Range: -100E+24 to 100E+24
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Position" on page 282

REFCurve<rc>:OFFSet?

Returns the vertical offset of the indicated reference waveform.

Suffix:
<rc> 1..4
Reference waveform

Return values:
<VerticalOffset> Range: -100E+24 to 100E+24
Increment: 1E-6
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

REFCurve<rc>:TOORignal

Restores the original vertical settings of the reference waveform (vertical scale, position, and offset), if vertical scaling is set to independent (see `REFCurve<rc>:VMODe` on page 1555).

Suffix:
<rc> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Set to original" on page 282

REFCurve<rc>:RESCale:VERTical:STATe <State>

Enables and disables the vertical stretching. Stretching changes the display of the waveform independent of the vertical scale and position.

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 283

REFCurve<rc>:RESCale:VERTical:FACTor <ScaleFactor>

Defines the vertical stretching factor. A factor greater than 1 stretches the waveform vertically, a factor lower than 1 compresses the curve.

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<ScaleFactor> Range: -1E+6 to 1E+6
Increment: 0.1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Factor" on page 283

REFCurve<rc>:RESCale:VERTical:OFFSet <Offset>

Moves the reference waveform vertically. Like vertical offset of channel waveforms, the offset of a reference waveform is subtracted from the measured value.

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<Offset> Negative values shift the waveform up, positive values shift it down.
Range: -100E+24 to 100E+24
Increment: 1E-6
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 283

REFCurve<rc>:HMODe <HorizontalMode>

Selects the coupling of horizontal settings.

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<HorizontalMode> ORIGinal | COUPled

ORIGinal
Horizontal scaling and reference point of the source waveform are used.

COUPled
The current horizontal settings of the diagram are used.

*RST: ORIGinal

Usage: Asynchronous command

Manual operation: See "Mode" on page 283

REFCurve<rc>:RESCale:HORizontal:STATe <State>

Enables and disables the horizontal stretching.

Stretching changes the display of the waveform independent of the horizontal settings of the source waveform and of the horizontal diagram settings.

Suffix:
<rc> 1..4
Reference waveform

Parameters:
<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 283

REFCurve<rc>:RESCale:HORizontal:FACTor <ScaleFactor>

A factor greater than 1 stretches the waveform horizontally, a factor lower than 1 compresses the curve.

Suffix:
<rc> 1..4
Reference waveform

Parameters:

<ScaleFactor> Range: 1E-6 to 1E+6
Increment: 0.1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Factor" on page 283

REFCurve<rc>:RESCale:HORizontal:POSition <Offset>

Moves the waveform horizontally. Enter a value with a time unit suitable for the time scale of the diagram. Positive values shift the waveform to the right, negative values shift it to the left.

Suffix:

<rc> 1..4

Parameters:

<Offset> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Position" on page 284

26.10.2.3 Waveform data export

Commands for saving waveform data to file are described in Section 26.16.4, "Waveform data: export to file", on page 1783.

Commands for reference waveforms are listed below.

REFCurve<rc>:DATA:STYPe?....1559
REFCurve<rc>:DATA:HEADer?....1560
REFCurve<rc>:DATA[:VALues]?....1560

REFCurve<rc>:DATA:STYPe?

Returns the signal type of the source of the reference waveform.

Suffix:

<rc> 1..4
Reference waveform

Return values:

<SignalType> SOUR | SPEC | CORR | NONE

SOURce = normal signal
SPECtrum = FFT spectrum, specific math signal
CORRelation = correlated signal, specific math signal
NONE = undefined

Usage: Query only

REFCurve<rc>:DATA:HEADer?

Returns information on the reference waveform.

Suffix:
<rc> 1..4
Reference waveform

Return values:
<Start> 1. header value: time of the first sample in s

<Stop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For reference waveforms the number is always 1.

Example:
```
REFC:DATA:HEAD?
-9.477E-008,9.477E-008,200000,1
```
The start time of the data is -9.477E-008 = - 94,77 ns, and the end time of the data is 9.477E-008 = 94,77 ns. The data stream has 200000 values with one value per sample.

Usage: Query only

REFCurve<rc>:DATA[:VALues]?

Returns the data of the channel waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

To set the export format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,32 | INT,8 | INT,16.

You can retrieve only Y-values, or X- and Y-values. Use `EXPort:WAVeform:INCXvalues` to define this.

Suffix:
<rc> 1..4
Reference waveform

Return values:
<Data> List of comma-separated values according to the format and content settings.

Usage: Query only

26.10.2.4 Import of multichannel waveform data

Commands for saving waveform data to file are described in Section 26.16.4, "Waveform data: export to file", on page 1783.

Commands for reference waveforms are listed below.

REFCurve<rc>:MULTichannel:NAME 1561
REFCurve<rc>:MULTichannel:IMPort 1561
REFCurve<rc>:MULTichannel:OPEN 1562

REFCurve<rc>:MULTichannel:NAME <MltChImptPath>

Defines the path and the file to be imported. If not path is given, the default path `C:\Users\Public\Public Documents\Rohde-Schwarz\RTx\RefWaveforms` is used.

Suffix:
<rc> 1..4
The suffix is irrelevant.

Parameters:
<MltChImptPath> String with path and filename

Example: See `REFCurve<rc>:MULTichannel:IMPort` on page 1561.

Usage: Asynchronous command

REFCurve<rc>:MULTichannel:IMPort <MltChImptWfmSel>

Assigns a waveform from the multichannel file to a reference waveform. To import all waveforms that are in the file, you must assign each waveform to another reference waveform.

Suffix:
<rc> 1..4
Selects the reference waveform.

Parameters:
<MltChImptWfmSel> NONE | NONE | WF1 | WAVeform1 | WF2 | WAVeform2 | WF3 | WAVeform3 | WF4 | WAVeform4

WF1 = WAVeform1, WF2 = WAVeform2, WF3 = WAVeform3, WF4 = WAVeform4
Selects the waveform in the export file.

*RST: NONE

Example: Prerequisite: file `RefCurve_2016-02-16_01.bin` is a multi-channel export with at least WF1, WF3 and WF4.

```
REFCurve:MULTichannel:NAME 'RefCurve_2016-02-16_01.bin'
REFCurve1:MULTichannel:IMPort WF1
REFCurve2:MULTichannel:IMPort WF3
REFCurve3:MULTichannel:IMPort WF4
REFCurve:MULTichannel:OPEN
```

Usage: Asynchronous command

Firmware/software: FW 3.20

REFCurve<rc>:MULTichannel:OPEN

Loads the waveform data to the reference waveforms.

Suffix:
<rc> 1..4
The suffix is irrelevant.

Example: See `REFCurve<rc>:MULTichannel:IMPort` on page 1561.

Usage: Event
Asynchronous command

26.10.2.5 CDR reference files

The following commands query the settings of the reference waveform, after a `RefCurve.CDR.*` file has been recalled.

REFCurve<rc>:CDR:ALGorithm? 1562
REFCurve<rc>:CDR:BITRate? 1562
REFCurve<rc>:CDR:BWIDth? 1563
REFCurve<rc>:CDR:RELBwidth? 1563
REFCurve<rc>:CDR:SAMTime? 1563
REFCurve<rc>:CDR:SOURce? 1564

REFCurve<rc>:CDR:ALGorithm?

Queries the algorithm of the CDR reference waveform.

Suffix:
<rc> 1..4
Reference waveform

Return values:
<Algorithm> CFRequency | FF
`CFRequency`: constant frequency
`FF`: feed forward
*RST: FF

Usage: Query only
Asynchronous command

Manual operation: See "CDR" on page 1160

REFCurve<rc>:CDR:BITRate?

Queries the bit rate of the CDR reference waveform.

Suffix:
<rc> 1..4
Reference waveform

Return values:

<Bitrate> Range: 1000 to 40E+9
Increment: 10
*RST: 1E+9
Default unit: bps

Usage: Query only
Asynchronous command

Manual operation: See "CDR" on page 1160

REFCurve<rc>:CDR:BWIDth?

Queries the bandwidth of the CDR reference waveform.

Suffix:

<rc> 1..4
Reference waveform

Return values:

<Bandwidth> Range: 20E+3 to 10E+6
Increment: 10
*RST: 599.88E+3
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "CDR" on page 1160

REFCurve<rc>:CDR:RELBwidth?

Queries the relative bandwidth of the CDR reference waveform.

Suffix:

<rc> 1..4
Reference waveform

Return values:

<RelBw> Range: 500 to 3000
Increment: 1
*RST: 1667

Usage: Query only
Asynchronous command

Manual operation: See "CDR" on page 1160

REFCurve<rc>:CDR:SAMTime?

Queries the sampling time of the CDR reference waveform.

Suffix:
<rc> 1..4
Reference waveform

Return values:
<SamplingTime> Range: 0 to 1
Increment: 0.01
*RST: 0.5
Default unit: UI

Usage: Query only
Asynchronous command

Manual operation: See "CDR" on page 1160

REFCurve<rc>:CDR:SOURce?

Queries the analog source of the CDR refernce waveform.

Suffix:
<rc> 1..4
Reference waveform

Return values:
<AnalogSource> C1 | C2 | C3 | C4 | DIFF1 | DIFF2 | COMMON1 | COMMON2
*RST: C1

Usage: Query only
Asynchronous command

26.10.3 Mathematics

CALCulate:MATH<m>[:EXPRession][:DEFine] 1564
CALCulate:MATH<m>:STATe 1565
CALCulate:MATH<m>:ENVSelection 1565
CALCulate:MATH<m>:ARIThmetics 1566
CALCulate:MATH<m>:VERTical:OFFSet 1566
CALCulate:MATH<m>:VERTical:RANGe 1567
CALCulate:MATH<m>:VERTical:SCALe 1567
CALCulate:MATH<m>:VERTical:MAXimum 1568
CALCulate:MATH<m>:DATA:STYPe? 1568
CALCulate:MATH<m>:DATA:HEADer? 1568
CALCulate:MATH<m>:DATA[:VALues]? 1569

CALCulate:MATH<m>[:EXPRession][:DEFine] <RemComplExpr>

Defines the math expression to be calculated for the specified math channel.

For an overview of corresponding expressions for the available keys in the formula editor, see Section 7.3.4, "Equation", on page 289.

Suffix:
<m> 1..8
Selects the math waveform.

Parameters:
<RemComplExpr> String with regular expression for calculation

Example: `CALC:MATH 'Ch1Wfm1*Ch2Wfm1'`
Defines the multiplication of waveforms Ch1Wfm1 and Ch2Wfm1.

Usage: Asynchronous command

CALCulate:MATH<m>:STATe <State>

Enables the math waveform display.

Suffix:
<m> 1..8
math waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 286

CALCulate:MATH<m>:ENVSelection <EnvelopeCurve>

Selects the upper or lower part of the waveform for mathematic calculation, or a combination of both.

The setting is relevant for waveforms with waveform arithmetic mode "Envelope" or with "Peak detect" decimation. All mathematic operations - except for derivation - can be applied to envelope waveforms and waveforms with "Peak detect" decimation.

Suffix:
<m> 1..8
Selects the math waveform.

Parameters:
<EnvelopeCurve> MIN | MAX | BOTH
*RST: BOTH

Usage: Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "Envelope selection" on page 286

CALCulate:MATH<m>:ARIThmetics <Arithmetics>

Selects the method to build the resulting math waveform from consecutive acquisitions. The processing is similar to the waveform arithmetics - instead of the acquired waveforms the results of the mathematic formula are used to create envelope, average and RMS.

To define the reset condition for arithmetics calculation, use `ACQuire:ARESet:MODE`.

Suffix:
<m> 1..8
Selects the math waveform.

Parameters:
<Arithmetics> OFF | ENVelope | AVERage | RMS | MINHold | MAXHold

Waveform arithmetic mode

OFF
The math waveform is built according to the mathematic formula.

ENVelope
Detects the minimum and maximum math values in a sample interval over a number of acquisitions.

AVERage
Calculates the average from the math data of the current acquisition and a number of acquisitions before. To define the number of acquisitions, use `ACQuire:COUNt`.

RMS
The resulting math waveform is the root mean square of the current acquisition and a number of acquisitions before. The result is the average power spectrum. Number of acquisitions: `ACQuire:COUNt`

MAXHold
Determines the maximum result for each input value from the math data of the current acquisition and a number of acquisitions before. To define the number of acquisitions, use `ACQuire:COUNt`.

MINHold
Determines the minimum result for each input value from the math data of the current acquisition and a number of acquisitions before. To define the number of acquisitions, use `ACQuire:COUNt`.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Mode" on page 306

CALCulate:MATH<m>:VERTical:OFFSet <VerticalOffset>

Sets a voltage offset to adjust the vertical position of the math function on the screen.

Suffix:
<m> 1..8
Math waveform

Parameters:
<VerticalOffset> Negative values move the waveform au, positive values move it down.
Range: -100E+12 to 100E+12
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 305

CALCulate:MATH<m>:VERTical:RANGe <VerticalRange>

Defines the range of FFT values to be displayed.

Suffix:
<m> 1..8
Math waveform

Parameters:
<VerticalRange> Range: 0 to 1E+15
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Vertical range" on page 431

CALCulate:MATH<m>:VERTical:SCALe <VerticalScale>

Defines the scale of the y-axis in the math function diagram. The value is defined as "V per division", e.g. *50V/div*. In this case, the horizontal grid lines are displayed in intervals of 50 V.

Suffix:
<m> 1..8
Math waveform

Parameters:
<VerticalScale> Range: 1E-12 to 100E+12
Increment: 10E-6
*RST: 0.5
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 305

CALCulate:MATH<m>:VERTical:MAXimum <VerticalMax>

Defines the maximum value on y-axis for spectrum displays.

Suffix:
<m> 1..8

Parameters:
<VerticalMax> Range: -1E+15 to 1E+15
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Vertical maximum" on page 431

CALCulate:MATH<m>:DATA:STYPe?

Returns the signal type of the source of the math waveform.

Suffix:
<m> 1..8
Selects the math waveform.

Return values:
<SignalType> SOUR | SPEC | CORR | MEAS | NONE
SOURce = normal signal
SPECtrum = FFT spectrum, specific math signal
CORRelation = correlated signal, specific math signal
MEAsurement = result of a measurement
NONE = undefined

Usage: Query only
Asynchronous command

CALCulate:MATH<m>:DATA:HEADer?

Returns the header of math waveform data. The header contains attributes of the waveform.

Suffix:
<m> 1..8
Selects the math waveform.

Return values:
<Start> 1. header value: time of the first sample in s

<Stop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For most waveforms the result is 1, for peak detect and envelope waveforms it is 2. If the number is 2, the number of returned values is twice the number of samples (record length).

Example:
```
CALC:MATH1:DATA:HEAD?
-9.477E-008,9.477E-008,200000,1
```
The start time of the data is -9.477E-008 = - 94,77 ns, and the end time of the data is 9.477E-008 = 94,77 ns. The data stream has 200000 values with one value per sample.

Usage: Query only

CALCulate:MATH<m>:DATA[:VALues]?

Returns the data of the math waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

To set the export format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,32 | INT,8 | INT,16.

You can retrieve only Y-values, or X- and Y-values. Use `EXPort:WAVeform:INCXvalues` to define this.

Suffix:
<m> 1..8
Selects the math waveform.

Return values:
<Data> List of comma-separated values according to the format and content settings.

Usage: Query only

26.10.4 Waveform histograms

LAYout:HISTogram:ADD
<HistogramName>,<Source>,<XStart>,<XStop>,<YStart>,<YStop>,<Relative>,<Orientation>

Defines and displays a new histogram for the specified source.

Note: To define the mode of the histogram (vertical or horizontal), use the `LAYout:HISTogram:MODE` command.

For numerical values, the input of a unit is not supported for this command.

Setting parameters:
<HistogramName> String defining the histogram name which is used to refer to the histogram by other functions.

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | MRESult1 | MRESult2 | MRESult3 | MRESult4 | MRESult5 | MRESult6 | MRESult7 | MRESult8 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | EYE1 | EYE2 | EYE3 | EYE4 | SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJOHist1 | RJOHist1 | SEYE1 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJHOist2 | RJOHist2 | SEYE2 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 | PJDHist1 | BUJHist1 | RJHist1 | PJDHist2 | BUJHist2 | RJHist2 | PNDHist1 | BUNHist1 | RNHist1 | PNDHist2 | BUNHist2 | RNHist2 | LANE1 | LANE2 | LANE3 | LANE4

Data source of the histogram, see Section 26.4.2, "Waveform parameter", on page 1348

<XStart> Defines the start value of the x-value range.

<XStop> Defines the stop value of the x-value range.

<YStart> Defines the start value of the y-value range.

<YStop> Defines the stop value of the y-value range.

<Relative> OFF | ON

Defines whether relative or absolute values are used for the value range definition.

<Orientation> VERTical | HORizontal

Example: See "Creating and reading histograms" on page 1331

Usage: Setting only
Asynchronous command

LAYout:HISTogram:ENABle <HistogramName>,<State>
LAYout:HISTogram:ENABle? <HistogramName>

Enables or disables the histogram evaluation and display.

Parameters:

<State> OFF | ON

*RST: ON

Parameters for setting and query:

<HistogramName> String parameter, name of the histogram as defined with `LAYout:HISTogram:ADD`.

Usage: Asynchronous command

Manual operation: See "Enable" on page 310

LAYout:HISTogram:HORZ:ABSolute:STARt <HistogramName>,<Start>
LAYout:HISTogram:HORZ:ABSolute:STARt? <HistogramName>

Defines the horizontal start value of the histogram.

For numerical values, the input of a unit is not supported for this command.

Parameters:
<Start> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Start, Stop (Horizontal)" on page 311

LAYout:HISTogram:HORZ:ABSolute:STOP <HistogramName>,<Stop>
LAYout:HISTogram:HORZ:ABSolute:STOP? <HistogramName>

Defines the horizontal stop value of the histogram.

For numerical values, the input of a unit is not supported for this command.

Parameters:
<Stop> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Start, Stop (Horizontal)" on page 311

LAYout:HISTogram:HORZ:MODE <HistogramName>,<Mode>
LAYout:HISTogram:HORZ:MODE? <HistogramName>

Defines or queries whether the value range limits are entered as absolute or relative values.

Parameters:
<Mode> ABS | REL
*RST: ABS

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Mode (Horizontal / Vertical)" on page 311

LAYout:HISTogram:HORZ:RELative:STARt <HistogramName>,<RelativeStart>
LAYout:HISTogram:HORZ:RELative:STARt? <HistogramName>

Defines the horizontal start value of the histogram.

Parameters:
<RelativeStart>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Start, Stop (Horizontal)" on page 311

LAYout:HISTogram:HORZ:RELative:STOP <HistogramName>,<RelativeStop>
LAYout:HISTogram:HORZ:RELative:STOP? <HistogramName>

Defines the horizontal stop value of the histogram.

Parameters:
<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Start, Stop (Horizontal)" on page 311

LAYout:HISTogram:MODE <HistogramName>,<Mode>
LAYout:HISTogram:MODE? <HistogramName>

Defines or queries the type of histogram.

Parameters:
<Mode> VERTical | HORizontal

VERTical
Amplitude histogram (horizontal bars across amplitude)

HORizontal
Time or frequency histogram (vertical bars over time/frequencies)

*RST: VERTical

Parameters for setting and query:
<HistogramName> The name of the histogram as defined using `LAYout:HISTogram:ADD` on page 1569.

Usage: Asynchronous command

Manual operation: See "Mode" on page 310

LAYout:HISTogram:REMove <Name>

Removes the specified histogram.

Setting parameters:
<Name>

Usage: Setting only
Asynchronous command

LAYout:HISTogram:RESet <HistogramName>

Resets the values to begin a new histogram.

Setting parameters:
<HistogramName>

Usage: Event
Asynchronous command

Manual operation: See "Reset" on page 310

LAYout:HISTogram:SOURce <HistogramName>,<Source>
LAYout:HISTogram:SOURce? <HistogramName>

Defines the waveform which is the source of the histogram.

Parameters:

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | MRESult1 | MRESult2 | MRESult3 | MRESult4 | MRESult5 | MRESult6 | MRESult7 | MRESult8 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | EYE1 | EYE2 | EYE3 | EYE4 | SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJOHist1 | RJOHist1 | SEYE1 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJOHist2 | RJOHist2 | SEYE2 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 | PJDHist1 | BUJHist1 | RJHist1 | RJHist2 | PNDHist1 | BUNHist1 | RNHist1 | PNDHist2 | BUNHist2 | RNHist2 | LANE1 | LANE2 | LANE3 | LANE4

Waveform source of the histogram, see Section 26.4.2, "Waveform parameter", on page 1348.
If the histogram source is a measurement, the histogram shows the density distribution of the results for the selected measurement (`MEAS<m>:MAIN`).

Parameters for setting and query:

<HistogramName> String parameter

Usage: Asynchronous command

Manual operation: See "Source" on page 310

LAYout:HISTogram:VERTical:ABSolute:STARt <HistogramName>,<Start>
LAYout:HISTogram:VERTical:ABSolute:STARt? <HistogramName>

Defines the vertical start value of the histogram.

For numerical values, the input of a unit is not supported for this command.

Parameters:

<Start>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0

Parameters for setting and query:

<HistogramName>

Usage: Asynchronous command

Manual operation: See "Start, Stop (Vertical)" on page 311

LAYout:HISTogram:VERTical:ABSolute:STOP <HistogramName>,<Stop>
LAYout:HISTogram:VERTical:ABSolute:STOP? <HistogramName>

Defines the vertical stop value of the histogram.

For numerical values, the input of a unit is not supported for this command.

Parameters:
<Stop>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Start, Stop (Vertical)" on page 311

LAYout:HISTogram:VERTical:MODE <HistogramName>,<Mode>
LAYout:HISTogram:VERTical:MODE? <HistogramName>

Defines or queries whether the value range limits are entered as absolute or relative values.

Parameters:
<Mode>
ABS | REL
*RST: ABS

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Mode (Horizontal / Vertical)" on page 311

LAYout:HISTogram:VERTical:RELative:STARt <HistogramName>,<RelativeStart>
LAYout:HISTogram:VERTical:RELative:STARt? <HistogramName>

Defines the vertical start value of the histogram.

Parameters:
<RelativeStart>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Start, Stop (Vertical)" on page 311

LAYout:HISTogram:VERTical:RELative:STOP <HistogramName>,<RelativeStop>
LAYout:HISTogram:VERTical:RELative:STOP? <HistogramName>

Defines the vertical stop value of the histogram.

Parameters:
<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:
<HistogramName>

Usage: Asynchronous command

Manual operation: See "Start, Stop (Vertical)" on page 311

26.10.5 History

CHANnel<ch>[:WAVeform<wf>]:HISTory[:STATe] 1576
ACQuire:AVAilable? 1577
CHANnel<ch>[:WAVeform<wf>]:HISTory:CURRent 1577
CHANnel<ch>[:WAVeform<wf>]:HISTory:STARt 1577
CHANnel<ch>[:WAVeform<wf>]:HISTory:STOP 1578
CHANnel<ch>[:WAVeform<wf>]:HISTory:TPACq 1578
CHANnel<ch>[:WAVeform<wf>]:HISTory:PLAY 1579
CHANnel<ch>[:WAVeform<wf>]:HISTory:REPLay 1579
CHANnel<ch>[:WAVeform<wf>]:HISTory:TSDate? 1579
CHANnel<ch>[:WAVeform<wf>]:HISTory:TSABsolute? 1580
CHANnel<ch>[:WAVeform<wf>]:HISTory:TSRelative? 1580
CHANnel<ch>[:WAVeform<wf>]:HISTory:TSRReference? 1580

CHANnel<ch>[:WAVeform<wf>]:HISTory[:STATe] <State>

Enables or disables the history display.

Suffix:
<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show history / Export history" on page 313

ACQuire:AVAilable?

Returns the number of acquisitions that is saved in the memory. This number of acquisitions is available for history viewing. It is also the number of acquisitions in a fast segmentation acquisition series.

Return values:
<AcquisitionCount> Range: 0 to 4294967295

Usage: Query only
Asynchronous command

CHANnel<ch>[:WAVeform<wf>]:HISTory:CURRent <CurrAcqIdx>

Accesses a particular acquisition in the memory to display it. The query returns the index of the segment that is shown.

Suffix:
<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:
<CurrAcqIdx> History index: the newest segment has the index "0", older segments have a negative index: -(n-1), ... -1 , 0
where n is the number of acquired segments.

Range: -2.14748E+9 to -(n-1)
Increment: 1

Example:
```
CHAN2:HIST:STAT ON
CHAN2:HIST:CURR -1
*OPC
```
Displays the acquisition before last from the history.

Usage: Asynchronous command

Manual operation: See "Current acquisition" on page 314

CHANnel<ch>[:WAVeform<wf>]:HISTory:STARt <StrtAcqIdx>

Sets the index of the oldest history acquisition for the history viewing.

Suffix:
<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:

<StrtAcqIdx> The start index is always negative.

Range: -2.14748E+9 to -(n-1)
Increment: 1

Usage: Asynchronous command

Manual operation: See "Start acquisition" on page 314

CHANnel<ch>[:WAVeform<wf>]:HISTory:STOP <StpAcqIdx>

Sets the index of the latest segment to be displayed in the history viewer.

Suffix:

<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:

<StpAcqIdx> Index of the stop acquisition. The newest acquisition always has the index "0".

Range: -2.14748E+9 to -(n-1)
Increment: 1

Usage: Asynchronous command

Manual operation: See "Stop acquisition" on page 314

CHANnel<ch>[:WAVeform<wf>]:HISTory:TPACq <TimePerAcq>

Sets the display time for one acquisition. The shorter the time, the faster is the replay.

Suffix:

<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:

<TimePerAcq> Range: 40E-6 to 10
Increment: 1
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Display time" on page 314

CHANnel<ch>[:WAVeform<wf>]:HISTory:PLAY

Starts and stops the replay of the history waveforms.

Suffix:

<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Usage: Event
Asynchronous command

Manual operation: See "Start export" on page 510

CHANnel<ch>[:WAVeform<wf>]:HISTory:REPLay <AutoRepeat>

If ON, the replay of the history waveform sequence repeats automatically. Otherwise, the replay stops at the stop index set with `CHANnel<ch>[:WAVeform<wf>]:HISTory:STOP`.

Suffix:

<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Parameters:

<AutoRepeat> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Auto repeat" on page 314

CHANnel<ch>[:WAVeform<wf>]:HISTory:TSDate?

Returns the date of the current acquisition that is shown in the history viewer (`CHANnel<ch>[:WAVeform<wf>]:HISTory:CURRent`).

Suffix:

<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Return values:

<DateAbsString> String with date of the current acquisition (absolute time)

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 315

CHANnel<ch>[:WAVeform<wf>]:HISTory:TSABsolute?

Returns the abolsute daytime of the current acquisition that is shown in the history viewer (`CHANnel<ch>[:WAVeform<wf>]:HISTory:CURRent`).

Suffix:
<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Return values:
<TimeAbsString> String containing the time and unit

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 315

CHANnel<ch>[:WAVeform<wf>]:HISTory:TSRelative?

Returns the relative time of the current acquisition - the time difference to the newest acquisition (index = 0).

See also: (`CHANnel<ch>[:WAVeform<wf>]:HISTory:CURRent`).

Suffix:
<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Return values:
<TimeRelativ> Range: -100E+24 to 100E+24
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 315

CHANnel<ch>[:WAVeform<wf>]:HISTory:TSRReference?

Returns the relative time of the currently selected acquisition and the internal reference time (horizontal alignment) in history view with respect to the acquisition with index 0.

Suffix:
<ch> 1..4
Selects the input channel.

<wf> 1..3
Selects the waveform. If [:WAVeform<n>] is omitted, waveform 1 is adressed.

Return values:
<TimeRelIntRef> Range: -100E+24 to 100E+24
Increment: 1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

Firmware/software: Version 2.70

Manual operation: See "Time stamp" on page 315

26.10.6 XY-Diagram

WAVeform<wf>:XYCurve:RATio....1581
WAVeform<wf>:XYCurve:STATe....1581
WAVeform<wf>:XYCurve:SWAP....1582
LAYout:SIGNal:AXIS....1582
WAVeform<wf>:XYCurve:XSOurce....1583
WAVeform<wf>:XYCurve:YSOurce....1583

WAVeform<wf>:XYCurve:RATio <CstXYRatio>

If enabled, the x- and y-axes maintain a constant ratio in the diagram.

Suffix:
<wf> 1..4
XY-diagram

Parameters:
<CstXYRatio> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Constant XY-ratio" on page 319

WAVeform<wf>:XYCurve:STATe <State>

Activates an XY-waveform.

Suffix:
<wf> 1..4
XY-diagram

Parameters:

<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 318

WAVeform<wf>:XYCurve:SWAP

Replaces the source of the x-axis with the source of the y-axis and vice versa.

Suffix:

<wf> 1..4
XY-diagram

Usage: Event
Asynchronous command

Manual operation: See "Swap XY" on page 319

LAYout:SIGNal:AXIS <DiagramName>,<Source>,<XSource>

Creates an XY-diagram by adding a second waveform to a diagram.

Setting parameters:

<DiagramName> String with the name of the diagram where the waveform is added.

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL1 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJOTrack1 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJOTrack2 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTrack1 | LANE1 | LANE2 | LANE3 | LANE4

Waveform to be added, see Section 26.4.2, "Waveform parameter", on page 1348

<XSource> OFF | ON

If on, the added waveform is assigned to the x-axis.
If off, it is assigned to the y-axis.

Usage: Setting only
Asynchronous command

WAVeform<wf>:XYCurve:XSOurce <XSource>

Defines the signal source that supplies the x-values of the XY-diagram.

Suffix:
<wf> 1..4
XY-diagram

Parameters:
<XSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG5TL1 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | SG4TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | LANE1 | LANE2 | LANE3 | LANE4

Source of x-values, see Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "X-source" on page 318

WAVeform<wf>:XYCurve:YSOurce <YSource>

Defines the signal source that supplies the y-values of the XY-diagram.

Suffix:
<wf> 1..4
XY-diagram

Parameters:
<YSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | LANE1 | LANE2 | LANE3 | LANE4

Source of y-values, see Section 26.4.2, "Waveform parameter", on page 1348

*RST: C2W1

Usage: Asynchronous command

Manual operation: See "Y-source" on page 319

26.11 Cursor measurements

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

26.11.1 Cursor setup....1584
26.11.2 Cursor results....1593
26.11.3 Peak search using cursors....1594

26.11.1 Cursor setup

CURSor<cu>:STATe....1584
CURSor<cu>:AOFF....1585
CURSor<cu>:FUNCtion....1585
CURSor<cu>:SOURce....1585
CURSor<cu>:SSOurce....1586
CURSor<cu>:USSource....1587
CURSor<cu>:TRACking[:STATe]....1588
CURSor<cu>:X1Position....1588
CURSor<cu>:X2Position....1588
CURSor<cu>:XCOupling....1589
CURSor<cu>:Y1Position....1589
CURSor<cu>:Y2Position....1590
CURSor<cu>:YCOupling....1590
CURSor<cu>:X1ENvelope....1590
CURSor<cu>:X2ENvelope....1591
CURSor<cu>:LABel[:LABel]....1591
CURSor<cu>:LABel:X<n>....1592
CURSor<cu>:LABel:Y<n>....1592
CURSor<cu>:SIAD....1592

CURSor<cu>:STATe <State>

Switches the indicated cursor on or off.

Suffix:

<cu> 1..4
Selects the cursor set.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Cursor On/Off" on page 327

CURSor<cu>:AOFF

The command switches all cursors off.

Suffix:
<cu> The numeric suffix is irrelevant.

Usage: Event
Asynchronous command

CURSor<cu>:FUNCtion <Type>

Defines the type of the indicated cursor set.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<Type> HORizontal | VERTical | PAIRed

HORizontal
A pair of horizontal cursor lines.

VERTical
A pair of vertical cursor lines.

PAIRed
Both vertical and horizontal cursor line pairs.

*RST: PAIRed

Usage: Asynchronous command

Manual operation: See "Type" on page 327

CURSor<cu>:SOURce <Source>

Defines the source of the cursor measurement.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | XY1 | XY2 | XY3 | XY4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | MSOB1 | MSOB2 | MSOB3 | MSOB4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | SG1 | SG2 | SG3 | SG4 | SG5 | SG6 | SG7 | SG8 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL1 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | EYE1 | EYE2 | EYE3 | EYE4 | TDRZ | TDRH | TDRR | BATHtub1 | BMEas1 | SRESponse1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJTRack1 | TJSPectrum1 | DDJSpectrum1 | PJSPectrum1 | RJSPectrum1 | BATHtub2 | BMEas2 | SRESponse2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJOTRack2 | TJSPectrum2 | DDJSpectrum2 | PJSPectrum2 | RJOSpectrum2 | SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJHist1 | RJOHist1 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJHist2 | RJOHist2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJOTrack2 | TJSPectrum2 | DDJSpectrum2 | PJSPectrum2 | RJOSpectrum2 | SEYE2 | NBAThtub1 | NBMeas1 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTRack1 | TNSPectrum1 | DDNSpectrum1 | PNSPectrum1 | RNOSPectrum1 | NBAThtub2 | NBMeas2 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTrack2 | TNSPectrum2 | DDNSpectrum2 | PNSPectrum2 | RNSPectrum2 | LANE1 | LANE2 | LANE3 | LANE4

Source of the cursor measurement, see Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Source" on page 327

CURSor<cu>:SSOurce <Source2>

Selects the second cursor source.

Suffix:

<cu> 1..4
Selects the cursor set.

Parameters:

<Source2> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | XY1 | XY2 | XY3 | XY4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | MSOB1 | MSOB2 | MSOB3 | MSOB4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | SG1 | SG2 | SG3 | SG4 | SG5 | SG6 | SG7 | SG8 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL1 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | EYE1 | EYE2 | EYE3 | EYE4 | TDRZ | TDRH | TDRR | BATHtub1 | BMEas1 | SRESponse1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJOTRack1 | TJSPectrum1 | DDJSpectrum1 | PJOSPectrum1 | RJSPectrum1 | BATHtub2 | BMEas2 | SRESponse2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJTORack2 | TJSPectrum2 | DDJSpectrum2 | PJSPectrum2 | RJOSPectrum2 | SEYE1 | SEYE2 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJHist1 | RJOHist1 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJHist2 | RJOHist2 | NBAThtub1 | NBMeas1 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTRack1 | TNSPectrum1 | DDNSpectrum1 | PNSPectrum1 | RNSPectrum1 | NBAThtub2 | NBMeas2 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNHist2 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTRack2 | TNSPectrum2 | DDNSpectrum2 | PNSPectrum2 | RNOSPectrum2 | LANE1 | LANE2 | LANE3 | LANE4

Second source of the cursor measurement, see Section 26.4.2, "Waveform parameter", on page 1348

*RST: C2W1

Usage: Asynchronous command

Firmware/software: FW 3.60

Manual operation: See "Second source, Source 2" on page 327

CURSor<cu>:USSource <UseSource2>

Enables the second cursor source. To select the second source, use `CURSor<cu>:SSOurce` on page 1586.

If enabled, the second corsor lines Cx.2 measure on the second source. Using a second source, you can measure differences between two channels with cursors.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<UseSource2> OFF | ON
*RST: OFF

Usage: Asynchronous command

Firmware/software: FW 3.60

Manual operation: See "Second source, Source 2" on page 327

CURSor<cu>:TRACking[:STATe] <TrackCurve>

If set to ON, the horizontal cursor lines follow the waveform.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<TrackCurve> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Track waveform" on page 328

CURSor<cu>:X1Position <XPosition1>

Defines the position of the left vertical cursor line.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<XPosition1> Range: 0 to 500
Increment: 0.1
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "X1 position, X2 position" on page 327

CURSor<cu>:X2Position <XPosition2>

Defines the position of the right vertical cursor line.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<XPosition2> Range: 0 to 500
Increment: 0.1
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "X1 position, X2 position" on page 327

CURSor<cu>:XCOupling <Coupling>

Defines the positioning mode of the vertical cursor.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<Coupling> OFF | ON

ON
Moving one cursor line moves the other cursor line too. The cursor lines always remain a fixed distance.

OFF
Each cursor line is positioned independently.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Coupling (2 follows 1)" on page 329

CURSor<cu>:Y1Position <YPosition1>

Defines the position of the lower horizontal cursor line.

If `CURSor<cu>:TRACking[:STATe]` is enabled, the query returns the measurement result - the lower vertical value of the waveform.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<YPosition1> Range: -50 to 50
Increment: 0.01
*RST: 0
Default unit: The unit depends on the type of the waveform.

Usage: Asynchronous command

Manual operation: See "Y1 position, Y2 position" on page 327

CURSor<cu>:Y2Position <YPosition2>

Defines the position of the upper horizontal cursor line.

If `CURSor<cu>:TRACking[:STATe]` is enabled, the query returns the measurement result - the upper vertical value of the waveform.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<YPosition2> Range: -50 to 50
Increment: 0.01
*RST: 0
Default unit: The unit depends on the type of the waveform.

Usage: Asynchronous command

Manual operation: See "Y1 position, Y2 position" on page 327

CURSor<cu>:YCOupling <Coupling>

Defines the positioning mode of the horizontal cursor. If the horizontal cursor lines track the waveform, the y-coupling is irrelevant (`CURSor<m>:MODE TRACk`).

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<Coupling> OFF | ON

ON
Moving one cursor line moves the other cursor line too. The cursor lines always remain a fixed distance.

OFF
Each cursor line is positioned independently.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Coupling (2 follows 1)" on page 329

CURSor<cu>:X1ENvelope <EnvelopeCurve1>

If the waveform arithmetics are set to envelope curve (see `CHANnel<ch>[:WAVeform<wf>]:ARIThmetics` on page 1405) and `CURSor<cu>:TRACking[:STATe]` is set to "ON", this setting defines how the first horizontal cursor is positioned.

Suffix:
<cu> 1..*
Selects the cursor set. 4 cursor sets are available.

Parameters:
<EnvelopeCurve1> MIN | MAX

MIN
The horizontal cursor is set to the crossing point of the vertical cursor with the minimum waveform envelope.

MAX
The horizontal cursor is set to the crossing point of the vertical cursor with the maximum waveform envelope.

*RST: MIN

Usage: Asynchronous command

Manual operation: See "Envelope selection 1|2" on page 328

CURSor<cu>:X2ENvelope <EnvelopeCurve2>

If the waveform arithmetics are set to envelope curve (see `CHANnel<ch>[:WAVeform<wf>]:ARIThmetics` on page 1405) and `CURSor<cu>:TRACking[:STATe]` is set to "ON", this setting defines how the second horizontal cursor is positioned.

Suffix:
<cu> 1..*
Selects the cursor set. 4 cursor sets are available.

Parameters:
<EnvelopeCurve2> MIN | MAX

MIN
The horizontal cursor is set to the crossing point of the vertical cursor with the minimum waveform envelope.

MAX
The horizontal cursor is set to the crossing point of the vertical cursor with the maximum waveform envelope.

*RST: MAX

Usage: Asynchronous command

Manual operation: See "Envelope selection 1|2" on page 328

CURSor<cu>:LABel[:LABel] <ShowLabel>

Shows the cursor labels in the diagram.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<ShowLabel> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show label" on page 329

CURSor<cu>:LABel:X<n> <Name>

Defines a label to be displayed with the vertical cursors. X1 is the left cursor line, and X2 the right one. By default, the cursors are labeled as Cu1.X1, Cu1.X2, Cu2.X1, Cu2.X2, Cu3.X1, Cu3.X2, Cu4.X1, Cu4.X2.

Suffix:
<cu> 1..4
Selects the cursor set.

<n> 1..2

Parameters:
<Name> String with the cursor label

Usage: Asynchronous command

Manual operation: See "X1 label, X2 label" on page 330

CURSor<cu>:LABel:Y<n> <Name>

Defines a label to be displayed with the vertical cursors. Y1 is the lower cursor line, and Y2 the upper one. By default, the cursors are labeled as Cu1.Y1, Cu1.Y2, Cu2.Y1, Cu2.Y2, Cu3.Y1, Cu3.Y2, Cu4.Y1, Cu4.Y2.

Suffix:
<cu> 1..4
Selects the cursor set.

<n> 1..2

Parameters:
<Name> String with the cursor label

Usage: Asynchronous command

Manual operation: See "Y1 label, Y2 label" on page 330

CURSor<cu>:SIAD <ShwInAllDiags>

Shows the cursor lines of the selected cursor set in all active diagrams of the same (time/spectrum) domain.

Suffix:
<cu> 1..*
Selects the cursor set.

Parameters:
<ShwInAllDiags> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show in all diagrams" on page 329

Note: the behavior of the command has been changed. In firmware versions 5.35. and older, the command affected all cursor sets, and the suffix was ignored. From FW version 5.40 on, the command affects only the cursor set that is selected by the suffix. If your script was written before the change and contains a deactivation of the cursor line display, you replace the single command by a loop over all cursor sets.

26.11.2 Cursor results

CURSor<cu>:XDELta[:VALue]?....1593
CURSor<cu>:XDELta:INVerse?....1593
CURSor<cu>:YDELta[:VALue]?....1594
CURSor<cu>:YDELta:SLOPe....1594

CURSor<cu>:XDELta[:VALue]?

Queries the delta value (distance) of two vertical cursor lines.

Suffix:
<cu> 1..4
Selects the cursor set.

Return values:
<Delta> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

CURSor<cu>:XDELta:INVerse?

Queries the inverse value of the delta value (distance) of the two vertical cursor lines.

Suffix:
<cu> 1..4
Selects the cursor set.

Return values:
<DeltaInverse> Range: -100E+24 to 100E+24
*RST: 0
Default unit: Hz

Usage: Query only
Asynchronous command

CURSor<cu>:YDELta[:VALue]?

Queries the delta value (distance) of the two horizontal cursor lines.

Suffix:
<cu> 1..4
Selects the cursor set.

Return values:
<Delta> Range: -100E+24 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

CURSor<cu>:YDELta:SLOPe <DeltaSlope>

Returns the inverse value of the voltage difference - the reciprocal of the vertical distance of two horizontal cursor lines: *1/ΔV*.

Suffix:
<cu> 1..4
Selects the cursor set.

Parameters:
<DeltaSlope> Range: -100E+24 to 100E+24
Increment: 0
*RST: 0

Usage: Asynchronous command

26.11.3 Peak search using cursors

CURSor<cu>:FFT:SETCenter....1594
CURSor<cu>:FFT:TOCenter.... 1595
CURSor<cu>:MAXimum[:PEAK]....1595
CURSor<cu>:MAXimum:LEFT.... 1595
CURSor<cu>:MAXimum:RIGHt.... 1595
CURSor<cu>:MAXimum:NEXT....1595

CURSor<cu>:FFT:SETCenter

Sets the center frequency to the frequency value that is measured at cursor line c1.

Suffix:
<cu> The suffix is irrelevant.

Usage: Event
Asynchronous command

Manual operation: See "Set center frequency to Cursor" on page 331

CURSor<cu>:FFT:TOCenter

Sets the vertical cursor line c1 to the center frequency.

Suffix:
<cu> The suffix is irrelevant.

Usage: Event
Asynchronous command

Manual operation: See "Center frequency" on page 331

CURSor<cu>:MAXimum[:PEAK]

Sets both cursors to the absolute peak value.

Suffix:
<cu> 1..4
Selects the cursor set.

Usage: Event

Manual operation: See "Absolute" on page 331

CURSor<cu>:MAXimum:LEFT

Sets cursor 2 to the next maximum to the left of the current position.

Suffix:
<cu> 1..4
Selects the cursor set.

Usage: Event

Manual operation: See "Next left" on page 331

CURSor<cu>:MAXimum:RIGHt

Sets cursor 2 to the next peak to the right (from the current position).

Suffix:
<cu> 1..4
Selects the cursor set.

Usage: Event

Manual operation: See "Next right" on page 331

CURSor<cu>:MAXimum:NEXT

Sets cursor 2 to the next smaller peak (from the current position).

Suffix:
<cu> 1..4
Selects the cursor set.

Usage: Event

Manual operation: See "Next absolute" on page 331

26.12 Automatic measurements

This chapter contains all remote commands to set up automatic measurements and to analyze the measurement results.

Selection of the measurement group: MEASurement<mg>

With R&S RTP, you can configure up to eight simultaneous measurement groups. In manual operation, these eight measurement groups are represented by subtabs "MG1" to "MG8" in the "Measurements" dialog box. For remote operation, the measurement group is indicated by the suffix MEAS<mg>, containing the number of the measurement group.

Remote control: measurement suffix <mg>	Manual operation: "MG" subtab
1 to 8 correspond to	"MG1" to "MG8"
9, 10: do not use	Not available

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- General settings 1597
- Amplitude/time measurements 1603
- PAM Results 1617
- Arithmetic for amplitude/time and spectrum measurements 1622
- Eye diagram measurements 1630
- Optical measurements 1643
- Spectrum measurements 1646
- Histogram measurements 1653
- EMC/ESD measurements (option R&S RTP-K155) 1658
- Protocol measurements 1662
- Measurement gates 1668
- Results 1672
- Display 1675

- Statistics and long-term measurements....1677
- Track....1684
- Limit check and event actions....1685

26.12.1 General settings

MEASurement<mg>[:ENABle]....1597
MEASurement<mg>:SOURce....1597
MEASurement<mg>:FSRC....1599
MEASurement<mg>:SSRC....1599
MEASurement<mg>:CATegory....1599
MEASurement<mg>:MAIN....1600
MEASurement<mg>:ADDitional....1602
MEASurement<mg>:AON....1602
MEASurement<mg>:AOFF....1602
MEASurement<mg>:PAMPlitude....1603
MEASurement<mg>:PEYE....1603

MEASurement<mg>[:ENABle] <State>

Switches the indicated measurement on or off.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<State> OFF | ON
*RST: OFF

Example: See "Simple frequency and amplitude measurement" on page 1329.

Usage: Asynchronous command

Manual operation: See "Enable" on page 337

MEASurement<mg>:SOURce <SignalSource>,[<SignalSource2>]

Defines the source of the measurement. Availability of sources depends on the selected category and installed options.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | SBUS1 | SBUS2 | SBUS3 | SBUS4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL1 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | | SRESponse1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJTRack1 | SRESponse2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJTRack2 | SEYE1 | SEYE2 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTrack1 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTrack2 | PJDTrack1 | PJDTrack2 | PNDTrack1 | PNDTrack2 | LANE1 | LANE2 | LANE3 | LANE

First source of the measurement, see Section 26.4.2, "Waveform parameter", on page 1348

<SignalSource2> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | | SRESponse1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJTRack1 | SRESponse2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJTRack2 | SEYE1 | SEYE2 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTrack1 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTrack2 | PJDTrack1 | PJDTrack2 | PNDTrack1 | PNDTrack2

Second measurement source. The 2nd source is required for amplitude/time measurements that are performed on two waveforms (e.g. delay, phase).
Digital channels are only available if <SignalSource> is a digital channel.
Step response, advanced jitter track components and synthetic eye sources are available for amplitude/time measurements only.

*RST: C1W1,C2W1

Example: See "Simple frequency and amplitude measurement" on page 1329.

Manual operation: See "Source, Source 2" on page 338

MEASurement<mg>:FSRC <Source>

Defines the first measurement source.

The command is an alternative to `MEASurement<mg>:SOURce`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Source> Source of the measurement, see `MEASurement<mg>:SOURce` on page 1597.
*RST: C1W1

Usage: Asynchronous command

MEASurement<mg>:SSRC <Source2>

Defines the second measurement source.

The command is an alternative to `MEASurement<mg>:SOURce`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Source2> Second source of the measurement, see `MEASurement<mg>:SOURce` on page 1597.
Digital channels are only available if a digital channel is set as first measurement source using `MEASurement<mg>:FSRC`.
*RST: C2W1

Usage: Asynchronous command

MEASurement<mg>:CATegory <Category>

Defines the measurement category.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Category> AMPTime | JITTer | EYEJitter | OPTical | SPECtrum | HISTogram | PROTocol | EMC

AMPTime
Amplitude and time measurements

JITTer
Jitter measurements, available if one of the jitter options is installed.

EMC
EMC/ESD test (option R&S RTP-K155)

EYEJitter
Eye diagram measurements

OPTical
Optical measurements

SPECtrum
Spectrum measurements

HISTogram
Histogram measurements

PROTocol
Protocol measurements

*RST: AMPTime

Example: See "Creating and reading histograms" on page 1331

Usage: Asynchronous command

Manual operation: See "Category" on page 337

MEASurement<mg>:MAIN <MeasType>

Defines the measurement that is used as a source for math calculations and result analysis. This measurement is mandatory in the measurement group. Further measurements are added to the measurement group with `MEASurement<mg>:ADDitional`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<MeasType> **Amplitude/time measurements**
HIGH | LOW | AMPLitude | MAXimum | MINimum | PDELta | MEAN | RMS | STDDev | POVershoot | NOVershoot | AREA | RTIMe | FTIMe | PPULse | NPULse | PERiod | FREQuency | PDCYcle | NDCYcle | CYCarea | CYCMean | CYCRms | CYCStddev | PULCnt | DELay | PHASe | BWIDth | PSWitching | NSWitching | PULSetrain | EDGecount | SETup | HOLD | SHT | SHR | DTOTrigger | PROBemeter | SLERising | SLEFalling | ATAR | SIGNallvl | VOCRossing | NPERiod | CMIN | CMAX
See Section 26.12.2, "Amplitude/time measurements", on page 1603.
*RST value for amplitude/time measurements: `AMPLitude`.

Jitter measurements
CCJitter | NCJitter | CCWidth | CCDutycycle | TIE | UINTerval | DRATe | SKWDelay | SKWPhase
Only available if option R&S RTP-K12 is installed. See Section 26.23.1, "Jitter measurements (option R&S RTP-K12)", on page 2689.

EMC/ESD tests
FPEak | SPEak | I30 | I60 | LVADelay | TTValue
Available with option R&S RTP-K155
See Section 26.12.9, "EMC/ESD measurements (option R&S RTP-K155)", on page 1658.

Eye diagram measurements
ERPercent | ERDB | EHEight | EWIDth | ETOP | EBASe | CPOints | QFACtor | RMSNoise | SNRatio | DCDistortion | ERTime | EFTime | EBRate | EAMPlitude | PPJitter | STDJitter | RMSJitter
See Section 26.12.5, "Eye diagram measurements", on page 1630
*RST value for eye/jitter measurements: `ERPercent`.

Spectrum measurements
CPOWer | OBWidth | SBWidth | THD | THDPCT | THDA | THDU | THDR | PLISt | HAR | THDF | SPAR
See Section 26.12.7, "Spectrum measurements", on page 1646.
*RST value for spectrum measurements: `CPOWer`.

Histogram measurements
WCOunt | WSAMples | HSAMples | HPEak | PEAK | UPEakvalue | LPEakvalue | HMAXimum | HMINimum | MEDian | MAXMin | HMEan | HSTDdev | M1STddev | M2STddev | M3STddev | MKPositive | MKNegative
See Section 26.12.8.1, "Histogram measurement", on page 1653.
*RST value for histogram measurements: `WCOunt`.

Protocol measurements
NONE | AUDio | F2F | T2F | FLDValue | GAP | MBITrate | SBITrate | BIDLe | FCNT | FEC | FER | CFER
Requires option R&S RTP-K35
See Section 26.12.10, "Protocol measurements", on page 1662

Optical measurements
OAP | OMA
See Section 26.12.6, "Optical measurements", on page 1643.

Example: See "Simple frequency and amplitude measurement" on page 1329.

Usage: Asynchronous command

Manual operation: See "Active measurements" on page 338

MEASurement<mg>:ADDitional <MeasType>,<State>
MEASurement<mg>:ADDitional? <MeasType>

Adds additional measurements to the indicated measurement group. Only one measurement can be enabled or disabled per command. The query returns the state of the specified measurement.

Note that each measurement group must contain measurements from the same category. For example, if the main measurement of measurement group 1 is amplitude, then you cannot enable an eye width measurement in the same measurement group.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<State> ON | OFF
Enables or disables the measurement.

Parameters for setting and query:
<MeasType> See `MEASurement<mg>:MAIN` on page 1600.

Usage: Asynchronous command

Manual operation: See "Active measurements" on page 338

MEASurement<mg>:AON

Enables all additional measurements in all categories of the indicated measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Usage: Event
Asynchronous command

MEASurement<mg>:AOFF

Disables all additional measurements in all categories of the indicated measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Usage: Event
Asynchronous command

MEASurement<mg>:PAMPlitude <MessageName>

Selects the level transition of a PAM-N signal for the plot of an amplitude/time meausrements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<MessageName>

Usage: Asynchronous command

Manual operation: See "Measurement for plot" on page 401

MEASurement<mg>:PEYE <MessageName>

Selects the level transition for the plot of an eye meausrement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<MessageName>

Usage: Asynchronous command

Manual operation: See "Measurement for plot" on page 401

26.12.2 Amplitude/time measurements

The following table lists the <MeasType> parameter values with a short description.

In addition, the suffixes <n> for limit-check remote commands are listed.

For a detailed description, see Section 8.2.2.1, "Overview of amplitude/time measurements", on page 339.

Table 26-2: Amplitude and time measurements

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description, result	Suffix <n>
HIGH	High	High signal level	1
LOW	Low	Low signal level	2
AMPLitude	Amplitude	Amplitude of the signal	3
MAXimum	Max	Maximum value of the waveform	4
MINimum	Min	Minimum value of the waveform	5

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description, result	Suffix <n>
PDELta	Peak to peak	Peak-to-peak value of the waveform	6
MEAN	Mean	Mean value of the waveform	7
RMS	RMS	RMS (Root Mean Square) value of the voltage	8
STDDev	σ (S-dev)	Standard deviation of the waveform	9
POVershoot	Pos. overshoot	Positive overshoot of a square wave	10
NOVershoot	Neg. overshoot	Negative overshoot of a square wave	11
AREA	Area	Area beneath the waveform (integral)	12
RTIMe	Rise time	Rise time of the left-most rising edge of the waveform.	13
FTIMe	Fall time	Falling time of the left-most falling edge of the waveform.	14
PPULse	Pos. pulse	Width of a positive pulse – a rising edge followed by a falling edge. The measurement requires at least one complete period of a triggered signal.	15
NPULse	Neg. pulse	Width of a negative pulse – a falling edge followed by a rising edge. The measurement requires at least one complete period of a triggered signal.	16
PERiod	Period	Length of the left-most signal period of the waveform	17
FREQuency	Frequency	Frequency of the signal. The result is based on the period measurement.	18
PDCYcle	Pos. duty cycle	Positive duty cycle. The measurement requires at least one complete period of a triggered signal.	19
NDCYcle	Neg. duty cycle	Negative duty cycle. The measurement requires at least one complete period of a triggered signal.	20
CYCarea	Cycle area	Area (integral) beneath one cycle	21
CYCMean	Cycle mean	Mean value of one cycle	22
CYCRms	Cycle RMS	The RMS (Root Mean Square) value of one cycle	23
CYCStddev	Cycle σ (S-dev)	Standard deviation of one cycle	24
PULCnt	Pulse count	Number of positive or negative pulses of the waveform, or both	25
DELay	Delay	Time difference between any edges of two measurement sources at any reference level. The measurement result is negative if the edge of the second source comes before the edge of the first source.	26
PHASe	Phase	Phase difference between two waveforms	27
BWIDth	Burst width	Duration of one burst, measured from the first edge to the last	28
PSWitching	Pos. switching	Settling time at rising edges	29
NSWitching	Neg. switching	Settling time at falling edges	30

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description, result	Suffix <n>
PULSetrain	Pulse train	Duration of N positive pulses, measured from the rising edge of the first pulse to the falling edge of the N-th pulse. N has to be configured.	31
EDGecount	Edge count	Number of positive or negative edges of the waveform, or both	32
SETup	Setup time	Parameters to query the setup and hold times. Use these parameters only in following queries: ● `MEASurement<mg>:ARES?` ● `MEASurement<n>:RESult:..` commands	33
HOLD	Hold time		
SHT	Setup/Hold time	Setting parameter to enable Setup/Hold time measurements. Use this parameter only as setting in: ● `MEASurement<mg>:MAIN` on page 1600 ● `MEASurement<mg>:ADDitional` on page 1602	35
SHR	Setup/Hold ratio	Setup/Hold ratio measurement. Setup/Hold ratio is the ratio of the setup time to the sum of hold and setup time: $T_{Setup} / (T_{Setup} + T_{Hold})$ Use this parameter as setting to activate the Setup/Hold ratio measurement in: ● `MEASurement<mg>:MAIN` on page 1600 ● `MEASurement<mg>:ADDitional` on page 1602 It is also used in the following queries: ● `MEASurement<mg>:ARES?` ● `MEASurement<n>:RESult:..` Used also in queries with and commands.	36
Used for limit checks on jitter measurements, see Section 26.23.1, "Jitter measurements (option R&S RTP-K12)", on page 2689.			37 to 45
DTOTrigger	Delay to trigger	Time between the trigger event and a following signal slope. High accuracy even if the trigger event is outside the acquisition data.	46
PROBemeter	Trig. ProbeMeter	DC voltage measured by the connected active R&S probe	47
SLERising	Slew rate on rising edge	Steepness of the rising edge: voltage difference between the lower and higher reference level, divided by the rise time.	48
SLEFalling	Slew rate on falling edge	Steepness of the falling edge: voltage difference between the higher and lower reference level, divided by the fall time.	49
ATAR	Arithmetic for amplitude/time measurements	Basic arithmetic calculations with measurement values and scalars.	50
SIGNallvl	Signal level	The value of the signal level	51
VOCRossing	Voltage crossing	The point where the waveform crosses a predifined voltage level.	52
NPERiod	N-period	The time passed for N consecuitive crossings	53
CMIN	Cycle min	Minimum value of one cycle	54

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description, result	Suffix <n>
CMAX	Cycle max	Maximum value of one cycle	55
Used for limit checks on EMC/ESD measurements, see Table 26-7.			56 to 61

MEASurement<mg>:ENVSelect 1606
MEASurement<mg>:DETThreshold 1607
MEASurement<mg>:AMPTime:ALEVel 1607
MEASurement<mg>:AMPTime:PFSLope 1608
MEASurement<mg>:AMPTime:PSLope 1608
MEASurement<mg>:AMPTime:NPFSlope 1609
MEASurement<mg>:AMPTime:DELay<n>:DIRection 1609
MEASurement<mg>:AMPTime:DELay<n>:ECOunt 1609
MEASurement<mg>:AMPTime:DELay<n>:LSELect 1610
MEASurement<mg>:AMPTime:DELay<n>:SLOPe 1610
MEASurement<mg>:AMPTime:PTCount 1611
MEASurement<mg>:AMPTime:ESLope 1611
MEASurement<mg>:AMPTime:CSLope 1611
MEASurement<mg>:AMPTime:CLCK<n>:LSELect 1612
MEASurement<mg>:AMPTime:DATA<n>:LSELect 1612
MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe 1613
MEASurement<mg>:AMPTime:DTOTrigger<n>:LSELect 1613
MEASurement<mg>:AMPTime:LCHeck<n>:VALid 1613
MEASurement<mg>:AMPTime:LCHeck<n>:LOWer:LIMit 1614
MEASurement<mg>:AMPTime:LCHeck<n>:UPPer:LIMit 1614
MEASurement<mg>:AMPTime:LCHeck<n>:LOWer:MARGin 1614
MEASurement<mg>:AMPTime:LCHeck<n>:UPPer:MARGin 1614
MEASurement<mg>:AMPTime:NPERiod 1615
MEASurement<mg>:AMPTime:VCHYsteresis 1615
MEASurement<mg>:AMPTime:EINCrement 1616
MEASurement<mg>:AMPTime:PRLevel 1616
MEASurement<mg>:AMPTime:PRLMode 1616
MEASurement<mg>:AMPTime:PLHYsteresis 1617
MEASurement<mg>:AMPTime:VCMLevel 1617

MEASurement<mg>:ENVSelect <EnvelopeCurve>

The command is only relevant for measurements on envelope waveforms. It selects the envelope to be used for measurement.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<EnvelopeCurve> MIN | MAX | BOTH

MIN: measures on the lower envelope
MAX: measures on the upper envelope
BOTH: the envelope is ignored and the waveform measured as usual

*RST: BOTH

Usage: Asynchronous command

Manual operation: See "Envelope" on page 338

MEASurement<mg>:DETThreshold <SignDetectThres>

The measured signal value must reach a certain voltage or bit to be included in the measurement algorithm. This minimum value is defined in percent of the signal amplitude (difference of high and low signal levels). Values below this value are considered to be noise and they are ignored. The setting is relevant for area, time, and counting measurements.

Suffix:

<mg> 1..10
irrelevant

Parameters:

<SignDetectThres> Range: 0 to 50
Increment: 1
*RST: 5
Default unit: %

Usage: Asynchronous command

Manual operation: See "Signal threshold" on page 346

MEASurement<mg>:AMPTime:ALEVel <AreaLevel>

Defines the reference level used to integrate the waveform.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<AreaLevel> Range: -100E+24 to 100E+24
Increment: 0
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Area level" on page 347

MEASurement<mg>:AMPTime:PFSLope <PeriodSlope>

Selects the slope direction for frequency and period measurements, except for N-Period measurements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<PeriodSlope> FIRSt | POSitive | NEGative | EITHer

POSitive | NEGative
Measures the time between rising or falling edges, respectively.

EITHer
In multiple measurements, the time is measured both between rising edges and between falling edges.
In single measurements. the first edge is taken for the measurement.

FIRSt
Time is measured either between rising edges or between falling edges. The first edge is taken for the measurement. In single measurements, it works the same way as "Either".
Only available for analog measurement sources.

*RST: FIRSt (analog source), POSitive (digital source)

Usage: Asynchronous command

Manual operation: See "Measured slope" on page 347

MEASurement<mg>:AMPTime:PSLope <PulsesSlope>

Sets the first slope of the pulses to be counted. The setting is only relevant for pulse count measurement (`MEASurement<m>:MAIN PULCnt` or `MEASurement<m>:ADDitional PULCnt,ON`).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<PulsesSlope> POSitive | NEGative | EITHer

Count either positive or negative pulses, or both.

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Pulses slope" on page 347

MEASurement<mg>:AMPTime:NPFSlope <PeriodNSlope>

Selects the slope direction for N-Period measurements.

Suffix:
<mg> 1..10

Parameters:
<PeriodNSlope> FIRSt | POSitive | NEGative

POSitive | NEGative
Measures the time between rising or falling edges, respectively.

FIRSt
Time is measured either between rising edges or between falling edges. The first edge is taken for the measurement. In single measurements, it works the same way as "Either".
Only available for analog measurement sources.

*RST: FIRSt (analog source), POSitive (digital source)

Usage: Asynchronous command

Manual operation: See "Measured slope (N-Period)" on page 347

MEASurement<mg>:AMPTime:DELay<n>:DIRection <EdgeCntDirct>

Selects the direction for counting slopes for each source: from the beginning of the waveform, or from the end.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
Selects the source number.

Parameters:
<EdgeCntDirct> FRFI | FRLA

FRFI - FRom FIrst, counting starts with the first edge of the waveform.
FRLA - FRom LAst, counting starts with the last edge of the waveform.

*RST: FRFI

Usage: Asynchronous command

Manual operation: See "Settings for delay and phase measurements (analog sources)" on page 348

MEASurement<mg>:AMPTime:DELay<n>:ECOunt <EdgeIndex>

Sets the number of the edge that is relevant for delay measurement for each source.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
Selects the source number.

Parameters:
<EdgeIndex> Edge number

Range: 1 to 100E+3
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Settings for delay and phase measurements (analog sources)" on page 348

MEASurement<mg>:AMPTime:DELay<n>:LSELect <DelayLevelSelect>

Selects the reference level on which the time is measured for each source.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
Selects the source number.

Parameters:
<DelayLevelSelect> UPPer | MIDDle | LOWer

*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Settings for delay and phase measurements (analog sources)" on page 348

MEASurement<mg>:AMPTime:DELay<n>:SLOPe <Slope>

Sets the edge of each source, between which the delay is measured.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
Selects the source number.

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Settings for delay and phase measurements (analog sources)" on page 348

MEASurement<mg>:AMPTime:PTCount <PulseCount>

Sets the number of positive pulses for the pulse train measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<PulseCount> Range: 1 to 2.14748E+9
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Pulse count" on page 350

MEASurement<mg>:AMPTime:ESLope <EdgesSlope>

Sets the edge direction to be counted: rising edges, falling edges, or both. The setting is only relevant for edge count measurement (`MEASurement<m>:MAIN EDGecount` or `MEASurement<m>:ADDitional EDGecount,ON`).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<EdgesSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Edges slope" on page 350

MEASurement<mg>:AMPTime:CSLope <SetHoldClkSlp>

Sets the edge of the clock from which the setup and hold times are measured.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<SetHoldClkSlp> POSitive | NEGative | EITHer

EITHer
The clock edges next to the data edge are considered regardless of the clock slope.

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Setup/Hold measurement settings" on page 349

MEASurement<mg>:AMPTime:CLCK<n>:LSELect <ClockLevel>

Selects the reference level of the clock on which the time is measured. Reference level and clock slope define the time point for setup and hold measurements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
The suffix is irrelevant, omit it.

Parameters:
<ClockLevel> UPPer | MIDDle | LOWer

*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Clock ref level, Ref level" on page 350

MEASurement<mg>:AMPTime:DATA<n>:LSELect <DataLevel>

Selects the reference level of the data on which the setup and hold time are measured.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
The suffix is irrelevant, omit it.

Parameters:
<DataLevel> UPPer | MIDDle | LOWer

*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Data ref level / Ref level" on page 350

MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe <DelaySlope>

Sets the edge direction to be used for delay measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
The suffix is irrelevant.

Parameters:
<DelaySlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Delay to trigger measurement settings" on page 351

MEASurement<mg>:AMPTime:DTOTrigger<n>:LSELect <RefLevel>

Selects the reference level of the measurement source on which the delay is measured.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
The suffix is irrelevant.

Parameters:
<RefLevel> UPPer | MIDDle | LOWer
*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Delay to trigger measurement settings" on page 351

MEASurement<mg>:AMPTime:LCHeck<n>:VALid [<BaseLevel>],[<TargetLevel>]

Selects the limit range for each measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..61
Number of the amplitude/time measurement, see Table 26-2.

Parameters:

<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:AMPTime:LCHeck<n>:LOWer:LIMit [<Limit>], [<BaseLevel>], [<TargetLevel>]
MEASurement<mg>:AMPTime:LCHeck<n>:UPPer:LIMit [<Limit>], [<BaseLevel>], [<TargetLevel>]

Define the lower and upper limit for limit checking, respectiveley. The valid range is defined using the `MEASurement<mg>:AMPTime:LCHeck<n>:VALid` command.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..61
Number of the amplitude/time measurement, see Table 26-2.

Parameters:

<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Setting parameters:

<Limit>

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:AMPTime:LCHeck<n>:LOWer:MARGin [<Limit>], [<BaseLevel>], [<TargetLevel>]
MEASurement<mg>:AMPTime:LCHeck<n>:UPPer:MARGin [<Limit>], [<BaseLevel>], [<TargetLevel>]

Define the lower and upper margins for the limit check, respectively. Margins are not as strict as limits and must be within the valid value range. The valid range is defined using the `MEASurement<mg>:AMPTime:LCHeck<n>:VALid` command.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..61
Number of the amplitude/time measurement type, see Table 26-2.

Parameters:
<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Setting parameters:
<Limit>

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:AMPTime:NPERiod <PeriodNNum>

Selects the N-period number, the number of consecutive periods of the waveform for N-period measurements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<PeriodNNum>
Range: 1 to 2.14748E+9
Increment: 1
*RST: 2

Usage: Asynchronous command

Manual operation: See "Settings for N-Period" on page 353

MEASurement<mg>:AMPTime:VCHYsteresis <VoltageCrossingHyst>

Sets the minimum level difference between the two sources before the next crossing can be detected.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<VoltageCrossingHyst>
Range: 0 to 100E+24
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Settings for Voltage crossing" on page 352

MEASurement<mg>:AMPTime:EINCrement <PeriodNEdgeIncrement>

Sets the number of edges to be skipped per measurement event for N-period measurements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<PeriodNEdgeIncrement> Range: 0 to 2.14748E+9
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Settings for N-Period" on page 353

MEASurement<mg>:AMPTime:PRLevel <PlsRefLevManual>

Available only if `MEASurement<mg>:AMPTime:PRLMode` is set to `USER`.

Sets the reference level for the positive and negative pulse measurements for the user defined reference level.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<PlsRefLevManual> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Settings for Pos./ Neg. pulse measurements" on page 351

MEASurement<mg>:AMPTime:PRLMode <PlsRefLevMd>

Selects the reference level of the measurement source on which the pulse is measured: upper, middle, lower level or user defined level.

This command is relevant for the positive and negative pulse measurements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<PlsRefLevMd> UPPer | MIDDle | LOWer | USER
*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Settings for Pos./ Neg. pulse measurements" on page 351

MEASurement<mg>:AMPTime:PLHYsteresis <PlsManualHyst>

Available only if `MEASurement<mg>:AMPTime:PRLMode` is set to `USER`.

Sets a hysteresis value for the measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<PlsManualHyst> Range: 0 to 100E+24
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Settings for Pos./ Neg. pulse measurements" on page 351

MEASurement<mg>:AMPTime:VCMLevel <VoltageCrossingMeasLev>

Sets the measurement reference level for the voltage crossing calculation.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<VoltageCrossingMeasLev> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Settings for Voltage crossing" on page 352

26.12.3 PAM Results

Requires option R&S RTP-K135.

MEASurement<mg>:PAMResults:ACTive? 1618
MEASurement<mg>:PAMResults:ADD 1618
MEASurement<mg>:PAMResults:PRESetconfig:BASE 1618
MEASurement<mg>:PAMResults:PRESetconfig:EXPLicit 1619
MEASurement<mg>:PAMResults:PRESetconfig:LVLHeight 1619
MEASurement<mg>:PAMResults:PRESetconfig:MEASurement 1619
MEASurement<mg>:PAMResults:PRESetconfig:MODE 1619
MEASurement<mg>:PAMResults:PRESetconfig:PRESet 1620
MEASurement<mg>:PAMResults:PRESetconfig:SELMode 1620
MEASurement<mg>:PAMResults:PRESetconfig:TARGet 1620
MEASurement<mg>:PAMResults:REMove 1620
MEASurement<mg>:PAMResults:RESultconfig<n>:BASE 1621
MEASurement<mg>:PAMResults:RESultconfig<n>:MEASurement 1621
MEASurement<mg>:PAMResults:RESultconfig<n>:TARGet 1621

MEASurement<mg>:PAMResults:ACTive?

Returns a list the number of active components.

Suffix:
<mg> 1..10

Return values:
<ActedComponents> Range: 0 to 20
Increment: 1
*RST: 0

Usage: Query only

MEASurement<mg>:PAMResults:ADD

Adds a new measurement to the active measurements table of the selected category.

Suffix:
<mg> 1..10

Usage: Event

Manual operation: See "Add" on page 357

MEASurement<mg>:PAMResults:PRESetconfig:BASE <BaseLevel>

Selects the base lavel.

Suffix:
<mg> 1..10

Parameters:
<BaseLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6
*RST: LEVEL0

Usage: Asynchronous command

MEASurement<mg>:PAMResults:PRESetconfig:EXPLicit <ExplicitLevel>

Sets an explicit level to be set for all active measurements.

Suffix:
<mg> 1..10

Parameters:
<ExplicitLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

*RST: LEVEL1

Usage: Asynchronous command

Manual operation: See "Selection mode" on page 356

MEASurement<mg>:PAMResults:PRESetconfig:LVLHeight <LevelHeight>

Sets a level height, level difference between the base and target level for all active measurements.

Suffix:
<mg> 1..10

Parameters:
<LevelHeight> LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

*RST: LEVEL1

Usage: Asynchronous command

MEASurement<mg>:PAMResults:PRESetconfig:MEASurement <Component>

Selects the measurement type.

Suffix:
<mg> 1..10

Parameters:
<Component> AMPLitude | MAXimum | MINimum | PDELta | MEAN | RTIMe | FTIMe | SLERising | SLEFalling | SIGNallevel

*RST: ALL

Usage: Asynchronous command

Manual operation: See "Measurement" on page 356

MEASurement<mg>:PAMResults:PRESetconfig:MODE <Mode>

Selects if you want to add pre-defined user configurations to the active measurements or define your own user-defined settings.

Suffix:
<mg> 1..10

Parameters:
<Mode> PREDefined | USERdefined
*RST: PREDefined

Usage: Asynchronous command

Manual operation: See "Mode" on page 356

MEASurement<mg>:PAMResults:PRESetconfig:PRESet

Adds a pre-defined preset configuration for the selected component to the active measurements.

Suffix:
<mg> 1..10

Usage: Event

Manual operation: See "Preset" on page 356

MEASurement<mg>:PAMResults:PRESetconfig:SELMode <SelectionMode>

Selects how the level difference between the base and target level of the PAM-N signal is defined.

Suffix:
<mg> 1..10

Parameters:
<SelectionMode> HEIGht | EXPLicit
*RST: HEIGht

Usage: Asynchronous command

Manual operation: See "Selection mode" on page 356

MEASurement<mg>:PAMResults:PRESetconfig:TARGet <TargetLevel>

Selects the target level.

Suffix:
<mg> 1..10

Parameters:
<TargetLevel> LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7
*RST: LEVEL1

Usage: Asynchronous command

MEASurement<mg>:PAMResults:REMove [<Index>]

Removes the last component added to the category.

Suffix:
<mg> 1..10

Setting parameters:
<Index>

Usage: Setting only

Manual operation: See "Remove" on page 357

MEASurement<mg>:PAMResults:RESultconfig<n>:BASE <BaseLevel>

Selects the base level, the lowest amplitude level used in the modulation.

Suffix:
<mg> 1..10

<n> 1..25

Parameters:
<BaseLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

Usage: Asynchronous command

Manual operation: See "Base" on page 357

MEASurement<mg>:PAMResults:RESultconfig<n>:MEASurement <Component>

Selects the measurement type.

Suffix:
<mg> 1..10

<n> 1..25

Parameters:
<Component> AMPLitude | MAXimum | MINimum | PDELta | MEAN | RTIMe | FTIMe | SLERising | SLEFalling | SIGNallevel

Usage: Asynchronous command

Manual operation: See "Measurement" on page 357

MEASurement<mg>:PAMResults:RESultconfig<n>:TARGet <TargetLevel>

Selects the target level.

Suffix:
<mg> 1..10

<n> 1..25

Parameters:
<TargetLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

Usage: Asynchronous command

Manual operation: See "Target" on page 357

26.12.4 Arithmetic for amplitude/time and spectrum measurements

MEASurement<mg>:AMPTime:ARIThmetic:CONStant 1622
MEASurement<mg>:AMPTime:ARIThmetic:COUNit 1622
MEASurement<mg>:AMPTime:ARIThmetic:CUNState 1623
MEASurement<mg>:AMPTime:ARIThmetic:CUUNit 1623
MEASurement<mg>:AMPTime:ARIThmetic:CUUState 1624
MEASurement<mg>:AMPTime:ARIThmetic:OPERator 1624
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:AMPTime 1624
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:GROup 1625
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:SPECtrum 1625
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:TYPE 1626
MEASurement<mg>:SPECtrum:ARIThmetic:CONStant 1626
MEASurement<mg>:SPECtrum:ARIThmetic:COUNit 1627
MEASurement<mg>:SPECtrum:ARIThmetic:CUNState 1627
MEASurement<mg>:SPECtrum:ARIThmetic:CUUNit 1628
MEASurement<mg>:SPECtrum:ARIThmetic:CUUState 1628
MEASurement<mg>:SPECtrum:ARIThmetic:OPERator 1628
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:AMPTime 1629
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:GROup 1629
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:SPECtrum 1630
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:TYPE 1630

MEASurement<mg>:AMPTime:ARIThmetic:CONStant <ArithConstant>

Sets a constant numeric value as the second operand of the amplitude/time arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ArithConstant>
Range: -340.282E+36 to 340.282E+36
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Constant" on page 359

MEASurement<mg>:AMPTime:ARIThmetic:COUNit <ConstantUnit>

Sets the unit of the constant, which is used as operand of the amplitude/time arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ConstantUnit> DBM | DB | DB_HZ | DB_GHZ | DBC | DBC_HZ | DBPW_HZ | DBW | DBPW | DBM_HZ | DBMW | W | MW | W_HZ | J | V_S | A_S | DBV | DBMV | DBMV_HZ | DBMV_MHZ | DBUV | DBUV_HZ | DBUV_SQRT_HZ | DBUV_MHZ | DBUV_M | DBMV_M_HZ | DBUV_M_MHZ | V | MV | UV | VPP | VV | UV_HZ | UV_M_HZ | V_SQRT_HZ | DBA | DBMA | DBMA_HZ | DBMA_MHZ | DBUA | DBUA_HZ | DBUA_SQRT_HZ | DBUA_MHZ | DBUA_M | DBUA_M_HZ | DBUA_M_MHZ | A | UA_HZ | UA_M_HZ | A_SQRT_HZ | PCT | DBPT | DBPT_HZ | H | PH_GHZ | F | FF_GHZ | OHM | SIEMENS | S | DBPS | DBNS | DBUS | DBMS | DBS | HZ | DBHZ | DBKHZ | DBMHZ | DBGHZ | M | IN | DEG | RAD | CNTN | PCT | SYMB | VA_LIN | VA_LOG | NDEF | NONE | IRE | MILES | SYMB_S | MSYMB_S | MBIT_S | BIT_S | BIT | WORD | PPM | DB | PER_SEC | S_DIV | HZ_DIV | V_DIV | A_DIV | OHM_DIV | NONE_DIV | DIV | BER | S | S_S | BAUD | TDEG | VS | USER | UINV | W_DIV | V_V | A_V | W_V | BYTS | V_A | V_W | VA | VAR | UI | LN | HRS | MIN

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Constant unit" on page 360

MEASurement<mg>:AMPTime:ARIThmetic:CUNState <ArithCustomNmeSt>

Enables the use of user-defined custom name for the amplitude/time arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ArithCustomNmeSt> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Custom" on page 359

MEASurement<mg>:AMPTime:ARIThmetic:CUUNit <ArithCustomUnt>

Sets a user-defined unit for the amplitude/time arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ArithCustomUnt> String parameter

Usage: Asynchronous command

MEASurement<mg>:AMPTime:ARIThmetic:CUUState <ArithCustomUntSt>

Enables the use of user-defined custom unit for the amplitude/time arithmetic measurement. You can set the unit with `MEASurement<mg>:AMPTime:ARIThmetic:CUUNit`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ArithCustomUntSt> OFF | ON
*RST: OFF

Usage: Asynchronous command

MEASurement<mg>:AMPTime:ARIThmetic:OPERator <ArithOperator>

Selects the operation type to be performed on the selected operands for the amplitude/time arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ArithOperator> ADD | SUB | MUL | DIV
*RST: ADD

Usage: Asynchronous command

Manual operation: See "Operator" on page 359

MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:AMPTime <ArithmeticsMeas>

Selects the amplitude/time arithmetics measurements for the measurement group.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
Selects the operand.

Parameters:

<ArithmeticsMeas> HIGH | LOW | AMPLitude | MAXimum | MINimum | PDELta | MEAN | RMS | STDDev | POVershoot | NOVershoot | AREA | RTIMe | FTIMe | PPULse | NPULse | PERiod | FREQuency | PDCYcle | NDCYcle | CYCarea | CYCMean | CYCRms | CYCStddev | PULCnt | DELay | PHASe | BWIDth | PSWitching | NSWitching | PULSetrain | EDGecount | SETup | HOLD | SHT | SHR | CCJitter | NCJitter | CCWidth | CCDutycycle | TIE | UINTerval | DRATe | SKWDelay | SKWPhase | DTOTrigger | PROBemeter | SLERising | SLEFalling | ATAR | SIGNallvl | VOCRossing | NPERiod | CMIN | CMAX

See Table 26-2.

*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Operand 1" on page 359

MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:GROup
<Op2MeasGroup>

Sets the measurement group for the second operand of the amplitude/time arithmetic measurement.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 2

Parameters:

<Op2MeasGroup> MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5 | MEAS6 | MEAS7 | MEAS8 | IMEAS | IMEas | QUICK | QUICk

*RST: MEAS1

Usage: Asynchronous command

Manual operation: See "Operand 2 meas group / Operand 2" on page 359

MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:SPECtrum
<Op1MeasSpectrum>

Selects the spectrum arithmetics measurements for the measurement group.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
Selects the operand.

Parameters:
<Op1MeasSpectrum> CPOWer | ACPower | OBWidth | SBWidth | TOI | AMMod | THD | THDPCT | THDPct | THDA | THDU | THDR | PLISt | HAR | THDF | SPAR

*RST: CPOWer

Usage: Asynchronous command

Manual operation: See "Operand 1" on page 359

MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:TYPE <ArithOp2Type>

Sets the type of amplitude arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 2

Parameters:
<ArithOp2Type> MEASurement | CONStant

MEASurement
Performs an arithmetic operation between two measurement results.

CONStant
Performs an operation between a measurement result and a user defined fixed constant.

*RST: MEASurement

Usage: Asynchronous command

Manual operation: See "Type" on page 358

MEASurement<mg>:SPECtrum:ARIThmetic:CONStant <ArithConstant>

Sets a constant numeric value as the second operand of the spectrum arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<ArithConstant>
Range: -3.4E+38 to +3.4E+38
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Constant" on page 359

MEASurement<mg>:SPECtrum:ARIThmetic:COUNit <ArithCstUnt>

Sets the unit for the constant, set with `MEASurement<mg>:SPECtrum:ARIThmetic:CONStant`.

Suffix:

<mg>
1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<ArithCstUnt>
DBM | DB | DB_HZ | DB_GHZ | DBC | DBC_HZ | DBPW_HZ | DBW | DBPW | DBM_HZ | DBMW | W | MW | W_HZ | J | V_S | A_S | DBV | DBMV | DBMV_HZ | DBMV_MHZ | DBUV | DBUV_HZ | DBUV_SQRT_HZ | DBUV_MHZ | DBUV_M | DBMV_M_HZ | DBUV_M_MHZ | V | MV | UV | VPP | VV | UV_HZ | UV_M_HZ | V_SQRT_HZ | DBA | DBMA | DBMA_HZ | DBMA_MHZ | DBUA | DBUA_HZ | DBUA_SQRT_HZ | DBUA_MHZ | DBUA_M | DBUA_M_HZ | DBUA_M_MHZ | A | UA_HZ | UA_M_HZ | A_SQRT_HZ | PCT | DBPT | DBPT_HZ | H | PH_GHZ | F | FF_GHZ | OHM | SIEMENS | S | DBPS | DBNS | DBUS | DBMS | DBS | HZ | DBHZ | DBKHZ | DBMHZ | DBGHZ | M | IN | DEG | RAD | CNTN | PCT | SYMB | VA_LIN | VA_LOG | NDEF | NONE | IRE | MILES | SYMB_S | MSYMB_S | MBIT_S | BIT_S | BIT | WORD | PPM | DB | PER_SEC | S_DIV | HZ_DIV | V_DIV | A_DIV | OHM_DIV | NONE_DIV | DIV | BER | S | S_S | BAUD | TDEG | VS | USER | UINV | W_DIV | V_V | A_V | W_V | BYTS | V_A | V_W | VA | VAR | UI | LN | HRS | MIN
*RST: NONE

Usage: Asynchronous command

Manual operation: See "Constant unit" on page 360

MEASurement<mg>:SPECtrum:ARIThmetic:CUNState <ArithCustomNmeSt>

Enables the use of user-defined custom name for the spectrum arithmetic measurement.

Suffix:

<mg>
1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ArithCustomNmeSt> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Custom" on page 359

MEASurement<mg>:SPECtrum:ARIThmetic:CUUNit <ArithCustomUnt>

Sets a user-defined value of the unit for the spectrum arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ArithCustomUnt>

Usage: Asynchronous command

MEASurement<mg>:SPECtrum:ARIThmetic:CUUState <ArithCustomUntSt>

Enables the use of user-defined custom unit for the amplitude/time arithmetic measurement. You can set the unit with `MEASurement<mg>:AMPTime:ARIThmetic:CUUNit`.

Suffix:
<mg> 1..10

Parameters:
<ArithCustomUntSt> OFF | ON
*RST: OFF

Usage: Asynchronous command

MEASurement<mg>:SPECtrum:ARIThmetic:OPERator <ArithOperator>

Selects the operation type to be performed on the selected operands for the spectrum arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ArithOperator> ADD | SUB | MUL | DIV
*RST: ADD

Usage: Asynchronous command

Manual operation: See "Operator" on page 359

MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:AMPTime
<Op1MeasAmpTime>

Selects the amplitude/time arithmetics measurements for the measurement group.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
Selects the operand.

Parameters:
<Op1MeasAmpTime> HIGH | LOW | AMPLitude | MAXimum | MINimum | PDELta | MEAN | RMS | STDDev | POVershoot | NOVershoot | AREA | RTIMe | FTIMe | PPULse | NPULse | PERiod | FREQuency | PDCYcle | NDCYcle | CYCarea | CYCMean | CYCRms | CYCStddev | PULCnt | DELay | PHASe | BWIDth | PSWitching | NSWitching | PULSetrain | EDGecount | SETup | HOLD | SHT | SHR | CCJitter | NCJitter | CCWidth | CCDutycycle | TIE | UINTerval | DRATe | SKWDelay | SKWPhase | DTOTrigger | PROBemeter | SLERising | SLEFalling | ATAR | SIGNallvl | VOCRossing | NPERiod | CMIN | CMAX

*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Operand 1" on page 359

MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:GROup
<Op2MeasGroup>

Sets the measurement group for the second operand of the spectrum arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 2

Parameters:
<Op2MeasGroup> MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5 | MEAS6 | MEAS7 | MEAS8 | IMEAS | IMEas | QUICK | QUICk

*RST: MEAS1

Usage: Asynchronous command

Manual operation: See "Operand 2 meas group / Operand 2" on page 359

MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:SPECtrum
<Op1MeasSpectrum>

Selects the first operand for the sepctrum arithmetics measurements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
Selects the operand.

Parameters:
<Op1MeasSpectrum> CPOWer | ACPower | OBWidth | SBWidth | TOI | AMMod | THD | THDPCT | THDPct | THDA | THDU | THDR | PLISt | HAR | THDF | SPAR

See Table 26-5.

*RST: CPOWer

Usage: Asynchronous command

Manual operation: See "Operand 1" on page 359

MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:TYPE
<ArithOp2Type>

Sets the type of spectrum arithmetic measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 2

Parameters:
<ArithOp2Type> MEASurement | CONStant

MEASurement
Performs an arithmetic operation between two measurement results.

CONStant
Performs an operation between a measurement result and a user defined fixed constant.

*RST: MEASurement

Usage: Asynchronous command

26.12.5 Eye diagram measurements

The following table lists the <MeasType> parameter values with a short description.

In addition, the suffixes <n> for limit-check remote commands are listed. Limit checks are not supported for eye measurements on PAM-N signals with PAM order > 2.

For a detailed description, see Section 8.2.3.1, "Overview of eye diagram measurements", on page 361.

Table 26-3: Eye diagram measurements

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description/Result	Suffix <n>
		not used	1
ERPercent	Extinction ratio (%)	Eye base / Eye top *100 Prerequisite: Eye base > 0 and Eye top > 0	2
ERDB	Extinction ratio (dB)	10*log (Eye top / Eye base)	3
EHEight	Eye height	Vertical eye opening	4
EWIDth	Eye width	Horizontal eye opening	5
ETOP	Eye top	Mean of the upper vertical histogram	6
EBASe	Eye base	Mean of the lower vertical histogram	7
		not used	8
CPPercent		Crossing points percentage	9
QFACtor	Q factor	(Eye top – Eye base) / (σtop + σbase)	10
		not used	11...13
RMSNoise	Noise (RMS)	Quadratic mean of the noise of eye top and eye base	14
SNRatio	S/N ratio	Signal-to-noise ratio 10 * log (Eye amplitude / Noise RMS)	15
DCDistortion	Duty cycle distortion	20 * log (Eye amplitude / Noise RMS)	16
ERTime	Eye rise time	Duration for signal to rise from 10% to 90% of the high signal level	17
EFTime	Eye fall time	Duration for signal to fall from 90% to 10% of the high signal level	18
EBRate	Eye bit rate	Frequency between two crossings	19
EAMPlitude	Eye amplitude	Eye top - Eye base	20
		not used	21...27
PPJitter	Jitter (peak to peak)	Average of the jitter for both crossing points (σcrossing1 + σcrossing2) / 2	28
STDJitter	Jitter (6*σ)	Jitter *6	29
RMSJitter	Jitter (RMS)	Quadratic mean of the jitter at both crossing points	30

MEASurement<mg>:EYEJitter:LCHeck<n>:VALid ... 1632
MEASurement<mg>:EYEJitter:LCHeck<n>:LOWer:LIMit ... 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:UPPer:LIMit ... 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:LOWer:MARGin ... 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:UPPer:MARGin ... 1633
MEASurement<mg>:EYEJitter:GENSettings:MLEHistogram:ALGorithm ... 1634
MEASurement<mg>:EYEJitter:GENSettings:MLEHistogram:THReshold ... 1634
MEASurement<mg>:EYEJitter:GENSettings:RELative:STARt ... 1634
MEASurement<mg>:EYEJitter:GENSettings:RELative:STOP ... 1635
MEASurement<mg>:EYEJitter:GENSettings:ABSolute:STARt ... 1635
MEASurement<mg>:EYEJitter:GENSettings:ABSolute:STOP ... 1636
MEASurement<mg>:EYEJitter:DCDistortion:RELative:LEVel ... 1636
MEASurement<mg>:EYEJitter:EYEWidth:ALGorithm ... 1636
MEASurement<mg>:EYEJitter:EYEWidth:MEASwindow ... 1637
MEASurement<mg>:EYEJitter:EYEWidth:RELative:STARt ... 1637
MEASurement<mg>:EYEJitter:EYEWidth:RELative:STOP ... 1638
MEASurement<mg>:EYEJitter:EYEWidth:ABSolute:STARt ... 1638
MEASurement<mg>:EYEJitter:EYEWidth:ABSolute:STOP ... 1638
MEASurement<mg>:EYEJitter:EYEWidth:MODE ... 1639
MEASurement<mg>:EYEJitter:EYEHeight:ALGorithm ... 1639
MEASurement<mg>:EYEJitter:EYEHeight:RELative:STARt ... 1640
MEASurement<mg>:EYEJitter:EYEHeight:RELative:STOP ... 1640
MEASurement<mg>:EYEJitter:EYEHeight:ABSolute:STARt ... 1640
MEASurement<mg>:EYEJitter:EYEHeight:ABSolute:STOP ... 1641
MEASurement<mg>:EYEJitter:EYEHeight:MODE ... 1641
MEASurement<mg>:EYEJitter:JITTer:MEASlevel ... 1642
MEASurement<mg>:EYEJitter:JITTer:RELative:LEVel ... 1642
MEASurement<mg>:EYEJitter:RTFTime:RELative:STOP ... 1642
MEASurement<mg>:EYEJitter:RTFTime:RELative:STARt ... 1643

MEASurement<mg>:EYEJitter:LCHeck<n>:VALid [<BaseLevel>],[<TargetLevel>]

Enables or disables limit checking for eye/jitter measurements in the specified measurement channel.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..30
Number of the eye/jitter measurement, see Table 26-3.

Parameters:

<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:EYEJitter:LCHeck<n>:LOWer:LIMit [<Limit>], [<BaseLevel>], [<TargetLevel>]
MEASurement<mg>:EYEJitter:LCHeck<n>:UPPer:LIMit [<Limit>], [<BaseLevel>], [<TargetLevel>]

Define the lower and upper limit for the limit check, respectively. The valid range is defined using the `MEASurement<mg>:EYEJitter:LCHeck<n>:VALid` command.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..30
Number of the eye/jitter measurement, see Table 26-3.

Parameters:
<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Setting parameters:
<Limit> Default unit: The unit depends on the selected measurement.

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:EYEJitter:LCHeck<n>:LOWer:MARGin [<Limit>], [<BaseLevel>], [<TargetLevel>]
MEASurement<mg>:EYEJitter:LCHeck<n>:UPPer:MARGin [<Limit>], [<BaseLevel>], [<TargetLevel>]

Defines the upper margin for the limit check. Margins are not as strict as limits and must be within the valid value range. The valid range is defined using the `MEASurement<mg>:EYEJitter:LCHeck<n>:VALid` command.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..30
Number of the eye/jitter measurement, see Table 26-3.

Parameters:
<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Setting parameters:
<Limit> Default unit: The unit depends on the selected measurement.

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:EYEJitter:GENSettings:MLEHistogram:ALGorithm <Algorithm>

Defines how to compute the top/base level and the corresponding sigma values.

Suffix:
<mg> 1..10

Parameters:
<Algorithm> MEAN | PEAK | INNPeak | OUTPeak
*RST: MEAN

Usage: Asynchronous command

Manual operation: See "General" on page 364

MEASurement<mg>:EYEJitter:GENSettings:MLEHistogram:THReshold <Threshold>

Sets the threshold used to separate peaks: two peaks are separated if they are split by a valley of height *Threshold * Maximal_histogram_value*.

Suffix:
<mg> 1..10

Parameters:
<Threshold> Range: 1 to 99
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "General" on page 364

MEASurement<mg>:EYEJitter:GENSettings:RELative:STARt <RelativeStart>

Defines the start of the measurement window in relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to one of the following: `ERPercent, ERDB, EHEight, QFACtor, RMSNoise, SNRatio, EAMPlitude`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<RelativeStart>
Range: 1 to 99
Increment: 0.1
*RST: 40
Default unit: %

Usage: Asynchronous command

Manual operation: See "General" on page 364

MEASurement<mg>:EYEJitter:GENSettings:RELative:STOP <RelativeStop>

Defines the stop of the measurement window in relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to one of the following: `ERPercent, ERDB, EHEight, QFACtor, RMSNoise, SNRatio, EAMPlitude .`

Suffix:

<mg>
1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<RelativeStop>
Range: 1 to 99
Increment: 0.1
*RST: 60
Default unit: %

Usage: Asynchronous command

Manual operation: See "General" on page 364

MEASurement<mg>:EYEJitter:GENSettings:ABSolute:STARt <AbsoluteStart>

Defines the start of the measurement window in absolute values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to one of the following: `ERPercent, ERDB, EHEight, QFACtor, RMSNoise, SNRatio, EAMPlitude.`

Suffix:

<mg>
1..10

Parameters:

<AbsoluteStart>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: -1.25E-9
Default unit: s

Usage: Asynchronous command

MEASurement<mg>:EYEJitter:GENSettings:ABSolute:STOP <AbsoluteStop>

Defines the stop of the measurement window in absolute values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to one of the following: `ERPercent, ERDB, EHEight, QFACtor, RMSNoise, SNRatio, EAMPlitude .`

Suffix:
<mg> 1..10

Parameters:
<AbsoluteStop>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 1.25E-9
Default unit: s

Usage: Asynchronous command

MEASurement<mg>:EYEJitter:DCDistortion:RELative:LEVel <RelLevel>

Defines the level of the measurement window in relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `DCDistortion`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<RelLevel>
Range: 1 to 99
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle disortion" on page 367

MEASurement<mg>:EYEJitter:EYEWidth:ALGorithm <Algorithm>

Selects the algorithm for the measurement of the width.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EWIDth`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Algorithm> ACTWidth | AWMWindow | MAXWidth | TSIGma

ACTWidth
Measure actual width at crossing level.

AWMWindow
Measure actual width (meas. window)

MAXWidth
Maximum width

TSIGma
Extrapolate using three sigma. The eye width is measured at the crossing level.

*RST: TSIGma

Usage: Asynchronous command

Manual operation: See "Eye width" on page 366

MEASurement<mg>:EYEJitter:EYEWidth:MEASwindow <UseWindow>

If enabled, you can define a user defined start and stop values for the eye width measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<UseWindow> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Eye width" on page 366

MEASurement<mg>:EYEJitter:EYEWidth:RELative:STARt <RelativeStart>

Sets the start of the measurement window in relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EWIDth`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<RelativeStart>
Range: 1 to 99
Increment: 0.1
*RST: 40
Default unit: %

Usage: Asynchronous command

Manual operation: See "Eye width" on page 366

MEASurement<mg>:EYEJitter:EYEWidth:RELative:STOP <RelativeStop>

Sets the stop of the measurement window in relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EWIDth`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<RelativeStop>
Range: 1 to 99
Increment: 0.1
*RST: 60
Default unit: %

Usage: Asynchronous command

Manual operation: See "Eye width" on page 366

MEASurement<mg>:EYEJitter:EYEWidth:ABSolute:STARt <AbsoluteStart>

Sets the sart of the measurement window in absolute value, if `MEASurement<mg>:EYEJitter:EYEWidth:MODE` is set to `ABSolute`.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EWIDth`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<AbsoluteStart>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: -0.05
Default unit: V

Usage: Asynchronous command

Manual operation: See "Eye width" on page 366

MEASurement<mg>:EYEJitter:EYEWidth:ABSolute:STOP <AbsoluteStop>

Defines the stop of the measurement window in absolute values, if `MEASurement<mg>:EYEJitter:EYEHeight:MODE` is set to `ABSolute`.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EHEight`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<AbsoluteStop> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.05
Default unit: V

Usage: Asynchronous command

Manual operation: See "Eye width" on page 366

MEASurement<mg>:EYEJitter:EYEWidth:MODE <Mode>

Selects, if the measurement window is defined in absolute or relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EWIDth`.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<Mode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Eye width" on page 366

MEASurement<mg>:EYEJitter:EYEHeight:ALGorithm <Algorithm>

Selects the algorithm for the measurement of the height.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EHEight`.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<Algorithm> ACTHeight | MAXHeight | TSIGma

ACTHeight
Measure actual height. You can define a measuerement window for the measurement.

MAXHeight
Measure maximum height. You can define a measuerement window for the measurement.

TSIGma
Extrapolate using three sigma. The eye height is measured with the settings defined with the general commands.

*RST: TSIGma

Usage: Asynchronous command

Manual operation: See "Eye height" on page 365

MEASurement<mg>:EYEJitter:EYEHeight:RELative:STARt <RelativeStart>

Defines the start of the measurement window in relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EHEight`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<RelativeStart>
Range: 1 to 99
Increment: 0.1
*RST: 40
Default unit: %

Usage: Asynchronous command

Manual operation: See "Eye height" on page 365

MEASurement<mg>:EYEJitter:EYEHeight:RELative:STOP <RelativeStop>

Defines the start of the measurement window in relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EHEight`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<RelativeStop>
Range: 1 to 99
Increment: 0.1
*RST: 60
Default unit: %

Usage: Asynchronous command

Manual operation: See "Eye height" on page 365

MEASurement<mg>:EYEJitter:EYEHeight:ABSolute:STARt <AbsoluteStart>

Defines the start of the measurement window in absolute values, if `MEASurement<mg>:EYEJitter:EYEHeight:MODE` is set to `ABSolute`.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EHEight`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<AbsoluteStart> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: -2.5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Eye height" on page 365

MEASurement<mg>:EYEJitter:EYEHeight:ABSolute:STOP <AbsoluteStop>

Defines the stop of the measurement window in relative values, if `MEASurement<mg>:EYEJitter:EYEHeight:MODE` is set to `ABSolute`.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to one of the following: `ERPercent, ERDB, EHEight, QFACtor, RMSNoise, SNRatio, EAMPlitude .`

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<AbsoluteStop> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 2.5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Eye height" on page 365

MEASurement<mg>:EYEJitter:EYEHeight:MODE <Mode>

Selects, if the start and stop values of the measurement window is defined in absolute or relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to `EHEight`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Mode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Eye height" on page 365

MEASurement<mg>:EYEJitter:JITTer:MEASlevel <UseLevel>

If enabled, you can define a user defined level for the eye measurement jitter.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<UseLevel> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Jitter" on page 367

MEASurement<mg>:EYEJitter:JITTer:RELative:LEVel <RelLevel>

Defines the level of the measurement window in relative values.

This settings is relevant, if `MEASurement<mg>:MAIN` is set to one of the following measuerements: `PPJitter, STDJitter, RMSJitter`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<RelLevel> Range: 1 to 99
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Jitter" on page 367

MEASurement<mg>:EYEJitter:RTFTime:RELative:STOP <Stop>

Sets the local stop level of range for eye measurements rise/fall time.

Suffix:
<mg> 1..10

Parameters:

<Stop>
Range: 1 to 99
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Eye rise time,Eye fall time" on page 367

MEASurement<mg>:EYEJitter:RTFTime:RELative:STARt <Start>

Sets the local start level of range for eye measurements rise/fall time.

Suffix:

<mg> 1..10

Parameters:

<Start>
Range: 1 to 99
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Eye rise time,Eye fall time" on page 367

26.12.6 Optical measurements

The following table lists the <MeasType> parameter values with a short description.

In addition, the suffixes <n> for limit-check remote commands are listed.

Table 26-4: Optical measurements

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description/Result	Suffix <n>
OAP	Average power	True average component of an optical signal. $X_{Average} = \frac{1}{N_{Eval}} * \sum_{i=1}^{N_{Eval}} x(i)$	1
OMA	Modulation amplitude	Measure of the difference between the optical power of a non-return-to-zero (NRZ) one pulse and the optical power of an NRZ zero pulse. OMA requires an NRZ pattern.	2

MEASurement<mg>:OPTical:OMAMplitude:RELative:STARt 1644
MEASurement<mg>:OPTical:OMAMplitude:RELative:STOP 1644
MEASurement<mg>:OPTical:UNIT 1644
MEASurement<mg>:OPTical:LCHeck<n>:LOWer:LIMit 1645
MEASurement<mg>:OPTical:LCHeck<n>:UPPer:LIMit 1645

MEASurement<mg>:OPTical:LCHeck<n>:LOWer:MARGin 1645
MEASurement<mg>:OPTical:LCHeck<n>:UPPer:MARGin 1645
MEASurement<mg>:OPTical:LCHeck<n>:VALid 1645

MEASurement<mg>:OPTical:OMAMplitude:RELative:STARt <Start>

Sets the start value of the range for the optical modulation amplitude.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Start> Range: 1 to 99
Increment: 0.1
*RST: 40
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start" on page 370

MEASurement<mg>:OPTical:OMAMplitude:RELative:STOP <Stop>

Sets the end value of the range for the optical modulation amplitude.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Stop> Range: 1 to 99
Increment: 0.1
*RST: 60
Default unit: %

Usage: Asynchronous command

Manual operation: See "Stop" on page 370

MEASurement<mg>:OPTical:UNIT <Unit>

Selects the unit for the optical measurements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Unit> WATT | DBM
*RST: WATT

Usage: Asynchronous command

Manual operation: See "Unit" on page 369

MEASurement<mg>:OPTical:LCHeck<n>:LOWer:LIMit <LowerLimit>
MEASurement<mg>:OPTical:LCHeck<n>:UPPer:LIMit <UpperLimit>

Define the lower/ upper limit for limit checking of the optical measurements.

The range is defined with `MEASurement<mg>:OPTical:LCHeck<n>:VALid`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2

Parameters:
<UpperLimit> Range: -100 to 100
Increment: 10E-6
*RST: 0

Usage: Asynchronous command

MEASurement<mg>:OPTical:LCHeck<n>:LOWer:MARGin <LowerMargin>
MEASurement<mg>:OPTical:LCHeck<n>:UPPer:MARGin <UpperMargin>

Define the lower/ upper margin for limit checking of the optical measurements.

The range is defined with `MEASurement<mg>:OPTical:LCHeck<n>:VALid`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2

Parameters:
<UpperMargin> Range: -100 to 100
Increment: 10E-6
*RST: 0

Usage: Asynchronous command

MEASurement<mg>:OPTical:LCHeck<n>:VALid <ValidRange>

Selects the condition for the limit check of the optical measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2

Parameters:

<ValidRange> ILIMit | ULIMit | LLIMit | OLIMit

`ILIMit`: Inside (within) limit; between the upper and lower limit values
`ULIMit`: Upper limit; above the upper limit value
`LLIMit` : Lower limit; below the lower limit value
`OLIMit`: Outside limit; above the upper limit or below the lower limit values

*RST: ILIMit

Usage: Asynchronous command

26.12.7 Spectrum measurements

The following table lists the <MeasType> parameter values with a short description.

In addition, the suffixes <n> for limit-check remote commands are listed.

For a detailed description, see Section 8.2.5.1, "Overview of spectrum measurements", on page 370.

Table 26-5: Spectrum measurements

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description/Result	Suffix <n>
CPOWer	Channel power	Power integrated over the sample values defined by a center frequency and a bandwidth; based on a defined impedance; the result is given in mW	1
		not used	2
OBWidth	Occupied bandwidth	From the defined center frequency, symmetric sample value pairs to the left and right are integrated until a user-defined percentage of the total power is reached	3
SBWidth	Bandwidth	n dB down bandwidth. The samples to the left and right of the peak value are analyzed until the n dB threshold is exceeded. Frequencies at which the threshold is exceeded define the limits of the requested bandwidth.	4
		not used	5, 6
THD	THD[dB]	Total harmonic distortion in dB	7
THDPCT	THD[%]	Total harmonic distortion in %	8
THDA	THD_a	Is equivalent to THD. Requires option R&S RTP-K37.	9
THDU	THD_u	Requires option R&S RTP-K37.	10
THDR	THD_r	Distortion factor. Requires option R&S RTP-K37.	11
PLISt	Peak list	List of frequency and peak power value pairs.	12

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description/Result	Suffix <n>
HAR	Harmonic search	Returns the measured harmonics. For each harmonic, the frequency and the value are listed. To get the number of result pairs (= harmonics), use MEASurement<mg>:RESult:COUNt?.	13
THDF	THD_f	Root mean square of the sum of all amplitudes of the harmonic waves in relation to the amplitude at the fundamental frequency (first harmonic). Requires option R&S RTP-K37.	14
SPAR	Arithmetic for spectrum measurements	Basic arithmetic calculations with measurement values and scalars.	15

MEASurement<mg>:SPECtrum:CPOWer:BANDwidth 1647
MEASurement<mg>:SPECtrum:OBANdwidth 1648
MEASurement<mg>:SPECtrum:CPOWer:CFRequency 1648
MEASurement<mg>:SPECtrum:NDBDown 1648
MEASurement<mg>:SPECtrum:PEXCursion 1649
MEASurement<mg>:SPECtrum:ATHReshold 1649
MEASurement<mg>:SPECtrum:RESult<n>:COUNt 1649
MEASurement<mg>:SPECtrum:RESult<n>:MODE 1650
MEASurement<mg>:RESult:MAXCount 1650
MEASurement<mg>:RESult:SHFRequency 1651
MEASurement<mg>:RESult:SHLabels 1651
MEASurement<mg>:SPECtrum:LCHeck<n>:VALid 1652
MEASurement<mg>:SPECtrum:LCHeck<n>:LOWer:LIMit 1652
MEASurement<mg>:SPECtrum:LCHeck<n>:UPPer:LIMit 1652
MEASurement<mg>:SPECtrum:LCHeck<n>:LOWer:MARGin 1653
MEASurement<mg>:SPECtrum:LCHeck<n>:UPPer:MARGin 1653

MEASurement<mg>:SPECtrum:CPOWer:BANDwidth <ChPowBw>

Defines the bandwidth over which the channel power is calculated.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<ChPowBw>
Range: 0 to 4E+9
Increment: 1
*RST: 0
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Channel BW" on page 373

MEASurement<mg>:SPECtrum:OBANdwidth <OccupiedBW>

Defines the percentage of the total power used to determine the occupied bandwidth.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<OccupiedBW>
Range: 0.1 to 99.9
Increment: 1
*RST: 20
Default unit: %

Usage: Asynchronous command

Manual operation: See "Occup. BW" on page 373

MEASurement<mg>:SPECtrum:CPOWer:CFRequency <ChPowCtrFreq>

Defines the center frequency from which the channel power is calculated over the specified bandwidth.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ChPowCtrFreq>
Range: 0 to 6E+9
Increment: 1
*RST: 0
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Channel CF" on page 373

MEASurement<mg>:SPECtrum:NDBDown <NDbDown>

Defines the threshold until which the samples to the left and right of the peak value are analyzed in order to determine the "N dB down bandwidth".

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<NDbDown>
Range: 0 to 100
Increment: 1
*RST: 20
Default unit: dB

Usage: Asynchronous command

Manual operation: See "N db down" on page 372

MEASurement<mg>:SPECtrum:PEXCursion <Value>

Defines a relative threshold, the minimum level value by which the waveform must rise or fall to be considered as a peak. To avoid identifying noise peaks, enter a peak excursion value that is higher than the noise levels.

Suffix:
<mg> 1..10
The suffix is irrelevant.

Parameters:
<Value>

Usage: Asynchronous command

Firmware/software: Version 2.70

Manual operation: See "Peak excursion" on page 332

MEASurement<mg>:SPECtrum:ATHReshold <Value>

Defines an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Value> numeric value
Default unit: dBm

Usage: Asynchronous command

Manual operation: See "Threshold" on page 331

MEASurement<mg>:SPECtrum:RESult<n>:COUNt <MaxNoOfResults>

Sets the maximum number of measurement results that are listed in the result table. Available for peak list and harmonic search measurements (`MEASurement:MAIN` is set to `PLISt` or `HAR`).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 12 | 13
12: Peak list measurements
13: Harmonic search measurements

Parameters:
<MaxNoOfResults> Range: 1 to 1000
Increment: 1
*RST: 10

Usage: Asynchronous command

Manual operation: See "Max results" on page 374

MEASurement<mg>:SPECtrum:RESult<n>:MODE <ResultMode>

Sets the way how the measurement results are displayed. Available only if `MEASurement:MAIN` is set to `PLISt` or `HAR`.

Suffix:
<mg> 1..10

<n> 12 | 13
12: Peak list measurements
13: Harmonic search measurements

Parameters:
<ResultMode> ABS | REL

ABS
The harmonics/peaks are shown in absolute value, dBm.

REL
The level of the carrier is shown in absolute value dBm. The values the harmonics/peaks are shown relatively to the carrier in dBc.

*RST: ABS

Example: `:MEASurement1:SPECtrum:RESult13:MODE ABS`
The harmonic measurements are shown in absolute value, dBm.

Usage: Asynchronous command

Manual operation: See "Result mode" on page 374

MEASurement<mg>:RESult:MAXCount <MeasType>,<Number>
MEASurement<mg>:RESult:MAXCount? <MeasType>

Defines the maximum number of peaks that are labeled in the diagram.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Number> Maximum number of peaks

Parameters for setting and query:

<MeasType> PLISt

Only for peaklist measurements. For other measurement, this command returns an error.

Manual operation: See "Result labels" on page 374

MEASurement<mg>:RESult:SHFRequency <MeasType>,<State>
MEASurement<mg>:RESult:SHFRequency? <MeasType>

Includes the frequency of the detected peak in the diagram labels (if `MEASurement<mg>:RESult:LABorder=ON`).

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<State> ON | OFF

Parameters for setting and query:

<MeasType> PLISt

Only for peaklist measurements. For other measurements, this command returns an error.

Example: Display labels.

```
MEAS:RES:SHL PLIS,ON
```

Show frequency in labels.

```
MEAS:RES:SHFR PLIS,ON
```

Query the type of labels for peak lists.

```
MEAS:RES:SHFR? PLIS
//Result: ON
```

Manual operation: See "Result labels" on page 374

MEASurement<mg>:RESult:SHLabels <MeasType>,<State>
MEASurement<mg>:RESult:SHLabels? <MeasType>

Defines whether a description (label) is displayed for each detected peak in the spectrum diagram.

The layout of the label is defined by `MEASurement<mg>:RESult:LABorder`.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<State> ON | OFF

Parameters for setting and query:

<MeasType> PLISt

Only for peaklist measurements. For other measurements, this command returns an error.

Example: Display labels.
```
MEAS:RES:SHL PLIS,ON
```

Manual operation: See "Result labels" on page 374

MEASurement<mg>:SPECtrum:LCHeck<n>:VALid <ValidRange>

Enables or disables limit checking for spectrum measurements in the specified measurement channel.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..15
Number of the spectrum measurement, see Table 26-5.

Parameters:

<ValidRange> ILIMit | ULIMit | LLIMit | OLIMit

ILIMit
Inside (within) limit; between the upper and lower limit values

ULIMit
Upper limit; above the upper limit value

LLIMit
Lower limit; below the lower limit value

OLIMit
Outside limit; above the upper limit or below the lower limit values

*RST: ILIMit

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:SPECtrum:LCHeck<n>:LOWer:LIMit <Limit>
MEASurement<mg>:SPECtrum:LCHeck<n>:UPPer:LIMit <Limit>

Define the lower and upper limits for the limit check, respectively. The valid range is defined using the `MEASurement<mg>:SPECtrum:LCHeck<n>:VALid` command.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..15
Number of the spectrum measurement, see Table 26-5.

Parameters:
<Limit> Range: -100 to 100
Increment: 10E-6
*RST: 0

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:SPECtrum:LCHeck<n>:LOWer:MARGin <Limit>
MEASurement<mg>:SPECtrum:LCHeck<n>:UPPer:MARGin <Limit>

Define the lower and upper margins for the limit check, respectively. Margins are not as strict as limits and must be within the valid value range. The valid range is defined using the `MEASurement<mg>:SPECtrum:LCHeck<n>:VALid` command.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..15
Number of the spectrummeasurement, see Table 26-5.

Parameters:
<Limit> Range: -100 to 100
Increment: 10E-6
*RST: 0

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

26.12.8 Histogram measurements

See also: Section 26.16.5, "Waveform histogram: export to file", on page 1791.

- Histogram measurement.....1653

26.12.8.1 Histogram measurement

This chapter lists commands to set up measurements on histograms.

Note that the R&S RTP performs histogram measurements on the measurement that is defined with `MEASurement<mg>:MAIN`. Other measurements are not considered.

See also: "Creating and reading histograms" on page 1331.

The following table lists the <MeasType> parameter values with a short description.

In addition, the suffixes <n> for limit-check remote commands are listed.

For a detailed description, see Table 8-9.

Table 26-6: Histogram measurements

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description/Result	Suffix <n>
WCOunt	Waveform count	Number of acquisitions (waveforms) the histogram is based on	1
WSAMples	Waveform samples	Number of samples from the most recent acquisition included in the current histogram	2
HSAMples	Histogram samples	Number of samples from all acquisitions included in the current histogram	3
HPEak	Histogram peak	Maximum sample value in the histogram	4
PEAK	Peak value	Signal value at the histogram peak	5
UPEakvalue	Upper peak value	Signal value at the maximum sample value in the upper half of the histogram	6
LPEakvalue	Lower peak value	Signal value at the maximum sample value in the lower half of the histogram	7
HMAXimum	Maximum	Highest signal value with a probability > 0	8
HMINimum	Minimum	Lowest signal value with a probability > 0	9
MEDian	Median	Signal value for which half the samples lie above, the other half below in the histogram	10
MAXMin	Max - Min	Range of signal values with a probability > 0	11
HMEan	Mean	Weighted arithmetic average of the histogram	12
HSTDdev	σ (S-dev)	Standard deviation of the sample numbers	13
M1STddev	Mean ±σ	Range between (mean value + standard deviation) and (mean value - standard deviation)	14
M2STddev	Mean ±2*σ	Range between (mean value + 3 * standard deviation) and (mean value - 2 * standard deviation)	15
M3STddev	Mean ±3*σ	Range between (mean value + 3 * standard deviation) and (mean value - 2 * standard deviation)	16
MKPositive	Marker + Probability %	Marker value (according to the selected probability domain marker type) plus the defined limit. Note that the value is restricted to the histogram range.	17
MKNegative	Marker - Probability %	Marker value (according to the selected probability domain marker type) minus the defined limit. Note that the value is restricted to the histogram range.	18

MEASurement<mg>:HISTogram:SELect 1655
MEASurement<mg>:HISTogram:PROBability:TYPE 1655
MEASurement<mg>:HISTogram:PROBability:LIMit 1656

MEASurement<mg>:HISTogram:LCHeck<n>:VALid 1656
MEASurement<mg>:HISTogram:LCHeck<n>:LOWer:LIMit 1657
MEASurement<mg>:HISTogram:LCHeck<n>:UPPer:LIMit 1657
MEASurement<mg>:HISTogram:LCHeck<n>:LOWer:MARGin 1657
MEASurement<mg>:HISTogram:LCHeck<n>:UPPer:MARGin 1657

MEASurement<mg>:HISTogram:SELect <Histogram>

Selects the histogram on which the measurement is based.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Histogram> String with the name of the histogram

Example: See "Creating and reading histograms" on page 1331

Usage: Asynchronous command

Manual operation: See "Source" on page 378

MEASurement<mg>:HISTogram:PROBability:TYPE <HistgPrbDomMark>

Defines the marker reference in the probability domain.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<HistgPrbDomMark> PEAK | UPPK | LWPK | MAXimum | MINimum | MEDian | MEAN

PEAK
The y-value with the maximum sample value in the histogram

UPPK
The y-value at the maximum sample value in the upper half of the histogram

LWPK
The y-value at the maximum sample value in the lower half of the histogram

MAXimum
The highest y-value with a probability > 0

MINimum
The lowest y-value with a probability > 0

MEDian
The y-value for which half the samples lie above, the other half below in the histogram

MEAN
The weighted arithmetic average of the histogram

*RST: PEAK

Usage: Asynchronous command

Manual operation: See "Probability domain marker, Reference" on page 378

MEASurement<mg>:HISTogram:PROBability:LIMit <HistgPrbDomLim>

Defines a range around the probability marker.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<HistgPrbDomLim> Range: 0 to 100
Increment: 10
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Probability domain marker, Delta" on page 379

MEASurement<mg>:HISTogram:LCHeck<n>:VALid <ValidRange>

Enables or disables limit checking for histogram measurements in the specified measurement channel.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..18
Number of the histogram measurement, see Table 26-6.

Parameters:
<ValidRange> ILIMit | ULIMit | LLIMit | OLIMit

ILIMit
Inside (within) limit; between the upper and lower limit values

ULIMit
Upper limit; above the upper limit value

LLIMit
Lower limit; below the lower limit value

OLIMit
Outside limit; above the upper limit or below the lower limit values

*RST: ILIMit

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:HISTogram:LCHeck<n>:LOWer:LIMit <Margin>
MEASurement<mg>:HISTogram:LCHeck<n>:UPPer:LIMit <Margin>

Define the lower and upper limits for the limit check, respectively. The valid range is defined using the `MEASurement<mg>:HISTogram:LCHeck<n>:VALid` command.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..18
Number of the histogram measurement, see Table 26-6.

Parameters:
<Margin>
Range: -100 to 100
Increment: 10E-6
*RST: 0

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

MEASurement<mg>:HISTogram:LCHeck<n>:LOWer:MARGin <Margin>
MEASurement<mg>:HISTogram:LCHeck<n>:UPPer:MARGin <Margin>

Define the lower and upper margins for the limit check, respectively. Margins are not as strict as limits and must be within the valid value range. The valid range is defined using the `MEASurement<mg>:HISTogram:LCHeck<n>:VALid` command.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..18
Number of the histogram measurement, see Table 26-6.

Parameters:
<Margin>
Range: -100 to 100
Increment: 10E-6
*RST: 0

Usage: Asynchronous command

Manual operation: See "Setup: Upper limit, Lower limit, Upper margin, Lower margin, Valid range" on page 406

26.12.9 EMC/ESD measurements (option R&S RTP-K155)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

Available with option R&S RTP-K155. See Section 8.2.8, "EMC/ESD measurements (option R&S RTP-K155)", on page 379.

Table 26-7: EMC/ESD measurements

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description/Result	Suffix <n> for limit checks
FPEak	First peak	Level of the first positive or negative peak of an event, for example an ESD pulse.	56
SPEak	Second peak	Level of the maximum (or minimum) in a specified time range after the reference point, which is at 10% of the peak level, by default.	57
I30	I30	Level of the current at 30 ns after the reference point, which is at 10% of the peak, by default.	58
I60	I60	Level of the current at 60 ns after the reference point, which is at 10% of the peak, by default.	59
LVADelay	Lvl@Delay	Level of the current at a specified delay after the reference point, which is at 10% of the peak, by default.	60
TTValue	Time to Value	Duration from the first rising edge to the time of a specified middle level on the falling edge.	61

For more details, see Section 8.2.8.1, "Overview of EMC/ESD measurements", on page 379.

For margin and limit checks, use the amplitude/time commands with the limit check suffixes given in Table 26-7. For commands, see Section 26.12.2, "Amplitude/time measurements", on page 1603.

- EMC/ESD measurement settings..... 1659
- EMC/ESD advanced settings.....1661

26.12.9.1 EMC/ESD measurement settings

Describes the settings available in the "Setup" measurements tab. See Section 8.2.8.2, "Setup for EMC/ESD measurements", on page 380.

MEASurement<mg>:EMC:SLOPe <Slope>

Selects the signal slope.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Slope> POSitive | NEGative

POSitive
Selects measuring on a positive slope, for example with maximum peaks.

NEGative
Selects measuring on a negative slope, for example with minimum peaks.

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 383

MEASurement<mg>:EMC:SPEak:WINDow:STARt <WindowStart>

Sets the start time of the window for searching for the 2nd peak in a "Second peak" measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<WindowStart> Range: 0 to 100E+24
Increment: 1E-9
*RST: 10E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Start" on page 383

MEASurement<mg>:EMC:SPEak:WINDow:STOP <WindowStop>

Sets the end time of the window for searching for the 2nd peak in a "Second peak" measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<WindowStop> Range: 0 to 100E+24
Increment: 1E-9
*RST: 40E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Stop" on page 383

MEASurement<mg>:EMC:LVADelay:DELay <Delay>

Sets the delay value for measuring the level in a "Lvl@Delay" measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Delay>

Usage: Asynchronous command

Manual operation: See "Delay" on page 383

MEASurement<mg>:EMC:TTValue:LEVel <AdjustableLev>

Sets the level value for a "Time to value" measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<AdjustableLev> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Level" on page 383

26.12.9.2 EMC/ESD advanced settings

Describes the settings available in the "Limit check" section of the "Advanced" measurements tab. See Section 8.2.8.3, "Advanced EMC/ESD measurements", on page 383.

MEASurement<mg>:EMC:LIMit:SELection <LimitsStandard>

Selects the electrostatic discharge (ESD) immunity test levels according to the guidelines of the EN IEC 61000-4-2:2025 standard.

For contact discharge (CD) and air discharge (AD), it specifies the maximum voltage (kV).

- **CD1**: Contact discharge, 2 kV.
- **CD2**: Contact discharge, 4 kV.
- **CD3**: Contact discharge, 6 kV.
- **CD4**: Contact discharge, 8 kV.
- **AD1**: Air discharge, 2 kV.
- **AD2**: Air discharge, 4 kV.
- **AD3**: Air discharge, 8 kV.
- **AD4**: Air discharge, 15 kV.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<LimitsStandard> CD1 | CD2 | CD3 | CD4 | AD1 | AD2 | AD3 | AD4
*RST: CD1

Usage: Asynchronous command

Manual operation: See "Preset" on page 384

MEASurement<mg>:EMC:LIMit:APPLy

Updates the limit lines according to the test levels selected by `MEASurement<mg>:EMC:LIMit:SELection`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Usage: Event
Asynchronous command

Manual operation: See "Apply" on page 384

26.12.10 Protocol measurements

Before starting the protocol measurement, a bus type has to be selected (`BUS<b>:TYPE`) and the bus has to be activated (`BUS<b>[:STATe]`).

The following table lists the <MeasType> parameter values with a short description.

Table 26-8: Protocol measurements

<MeasType> parameter value (remote control)	Measurement (manual operation)	Description/Result
AUDio	Audio	
FLDValue	Field value	Value of a field over time
F2F	Frame to frame	The distance between two frame types
T2F	Trigger to frame	Distance between the trigger point and the first frame
GAP	Gap	Measures a gap, periods at which the bus is idle. The distance of a gap can only be measured between two identified frames.
MBITrate	Main bit rate	Bit rate of the protocol
SBITrate	2nd bit rate	Additional bit rate, protocol dependent.
BIDLe	Bus idle	Calculates the bus idle time
FCNT	Frame count	Number of all frames within the acquisition window
FEC	Frame error count	Sum of all frames with errors within the acquisition window
FER	Frame error rate	Sum of all frames with errors divided by all frames within the acquisition window
CFER	Consecutive frame error rate	Measures the frame error rate

MEASurement<mg>:PROTocol:F2FRame:FLDFrom....1663
MEASurement<mg>:PROTocol:F2FRame:FLDTo....1663
MEASurement<mg>:PROTocol:F2FRame:FRMFrom....1663
MEASurement<mg>:PROTocol:F2FRame:FRMTo....1663
MEASurement<mg>:PROTocol:F2FRame:VALFrom....1664
MEASurement<mg>:PROTocol:F2FRame:VALTo....1664
MEASurement<mg>:PROTocol:FLDValue:FLD....1664
MEASurement<mg>:PROTocol:FLDValue:FRM....1664
MEASurement<mg>:PROTocol:FLDValue:TRCK....1665
MEASurement<mg>:PROTocol:FLDValue:VAL....1665
MEASurement<mg>:PROTocol:MBITrate:FLD....1665
MEASurement<mg>:PROTocol:MBITrate:FRM....1666
MEASurement<mg>:PROTocol:MBITrate:VAL....1666
MEASurement<mg>:PROTocol:SBITrate:FLD....1666
MEASurement<mg>:PROTocol:SBITrate:FRM....1666
MEASurement<mg>:PROTocol:SBITrate:VAL....1667
MEASurement<mg>:PROTocol:T2FRame:DIRection....1667

MEASurement<mg>:PROTocol:T2FRame:FLD 1667
MEASurement<mg>:PROTocol:T2FRame:FRM 1667
MEASurement<mg>:PROTocol:T2FRame:VALue 1668

MEASurement<mg>:PROTocol:F2FRame:FLDFrom <FieldName>

Sets the type of field for the start frame of the frame to frame protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FieldName>

Manual operation: See "Frame to frame" on page 386

MEASurement<mg>:PROTocol:F2FRame:FLDTo <FieldName>

Sets the type of field for the end frame of the frame to frame protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FieldName>

Manual operation: See "Frame to frame" on page 386

MEASurement<mg>:PROTocol:F2FRame:FRMFrom <FrameName>

Sets the type of start frame for the frame to frame protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FrameName>

Manual operation: See "Frame to frame" on page 386

MEASurement<mg>:PROTocol:F2FRame:FRMTo <FrameName>

Sets the type of end frame for the frame to frame protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FrameName>

Manual operation: See "Frame to frame" on page 386

MEASurement<mg>:PROTocol:F2FRame:VALFrom <FrmFrmFromVal>

Sets the field value of the start frame for the frame to frame protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FrmFrmFromVal>

Usage: Asynchronous command

Manual operation: See "Frame to frame" on page 386

MEASurement<mg>:PROTocol:F2FRame:VALTo <FrmFrmVal>

Sets the field value of the end frame for the frame to frame protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FrmFrmVal>

Usage: Asynchronous command

Manual operation: See "Frame to frame" on page 386

MEASurement<mg>:PROTocol:FLDValue:FLD <FieldName>

Sets the type of field for the frame of the field value protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FieldName>

Manual operation: See "Field value" on page 389

MEASurement<mg>:PROTocol:FLDValue:FRM <FrameName>

Sets the type frame for the field value protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FrameName>

Manual operation: See "Field value" on page 389

MEASurement<mg>:PROTocol:FLDValue:TRCK <FieldName>

Sets the field to be tracked value of the frame for the field value protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FieldName>

Manual operation: See "Field value" on page 389

MEASurement<mg>:PROTocol:FLDValue:VAL <FieldValIdVal>

Sets the field value of the frame for the field value protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FieldValIdVal>

Usage: Asynchronous command

Manual operation: See "Field value" on page 389

MEASurement<mg>:PROTocol:MBITrate:FLD <FieldName>

Sets the type of field for the frame of the main bit rate protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FieldName>

Manual operation: See "Main bit rate / 2nd bit rate" on page 389

MEASurement<mg>:PROTocol:MBITrate:FRM <FrameName>

Sets the type frame for the main bit rate protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FrameName>

Manual operation: See "Main bit rate / 2nd bit rate" on page 389

MEASurement<mg>:PROTocol:MBITrate:VAL <MainBtRateIdVal>

Sets the field value of the frame for the main bit rate protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<MainBtRateIdVal>

Usage: Asynchronous command

Manual operation: See "Main bit rate / 2nd bit rate" on page 389

MEASurement<mg>:PROTocol:SBITrate:FLD <FieldName>

Sets the type of field for the frame of the secondary bit rate protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FieldName>

Manual operation: See "Main bit rate / 2nd bit rate" on page 389

MEASurement<mg>:PROTocol:SBITrate:FRM <FrameName>

Sets the type frame for the secondary bit rate protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<FrameName>

Manual operation: See "Main bit rate / 2nd bit rate" on page 389

MEASurement<mg>:PROTocol:SBITrate:VAL <SecondaryBtRateIdVal>

Sets the field value of the frame for the secondary bit rate protocol measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<SecondaryBtRateIdVal>

Usage: Asynchronous command

Manual operation: See "Main bit rate / 2nd bit rate" on page 389

MEASurement<mg>:PROTocol:T2FRame:DIRection <TrigFrmDirct>

Sets the direction of the field for trigger to frame protocol measurement.

Suffix:
<mg> 1..10

Parameters:
<TrigFrmDirct> T2F | F2T
`T2F`: trigger to frame
`F2T`: frame to trigger
*RST: T2F

Usage: Asynchronous command

Manual operation: See "Trigger to frame" on page 388

MEASurement<mg>:PROTocol:T2FRame:FLD <FieldName>

Sets the type of the field for trigger to frame protocol measurement.

Suffix:
<mg> 1..10

Parameters:
<FieldName>

Manual operation: See "Trigger to frame" on page 388

MEASurement<mg>:PROTocol:T2FRame:FRM <FrameName>

Sets the value of the frame for trigger to frame protocol measurement.

Suffix:
<mg> 1..10

Parameters:
<FrameName>

Manual operation: See "Trigger to frame" on page 388

MEASurement<mg>:PROTocol:T2FRame:VALue <TrigFrmVal>

Sets the value of the field for trigger to frame protocol measurement.

Suffix:
<mg> 1..10

Parameters:
<TrigFrmVal>

Usage: Asynchronous command

Manual operation: See "Trigger to frame" on page 388

26.12.11 Measurement gates

MEASurement<mg>:GATE[:STATe] ... 1668
MEASurement<mg>:GATE:SHOW ... 1669
MEASurement<mg>:GATE:MODE ... 1669
MEASurement<mg>:GATE:ABSolute:STARt ... 1669
MEASurement<mg>:GATE:ABSolute:STOP ... 1669
MEASurement<mg>:GATE:RELative:STARt ... 1670
MEASurement<mg>:GATE:RELative:STOP ... 1670
MEASurement<mg>:GATE:CURSor ... 1670
MEASurement<mg>:GATE:CCOupling ... 1670
MEASurement<mg>:GATE:ZCOupling ... 1671
MEASurement<mg>:GATE:ZDIagram ... 1671
MEASurement<mg>:GATE:GCOupling ... 1671

MEASurement<mg>:GATE[:STATe] <State>

Enables the gate settings for the selected measurement and displays the gate.

Gating is not available if the source of the selected measurement is a digital channel.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use gate" on page 391

MEASurement<mg>:GATE:SHOW <DisplayState>

Indicates the gate area in the source diagram.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<DisplayState> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use gate" on page 391

MEASurement<mg>:GATE:MODE <Mode>

Defines whether the gate settings are configured using absolute or relative values.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Mode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Mode" on page 392

MEASurement<mg>:GATE:ABSolute:STARt <Start>
MEASurement<mg>:GATE:ABSolute:STOP <Stop>

Define the absolute start and end values for the gate.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Stop> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "(Relative) Stop" on page 392

MEASurement<mg>:GATE:RELative:STARt <RelativeStart>
MEASurement<mg>:GATE:RELative:STOP <RelativeStop>

Define the relative start and end values for the gate, respectively.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<RelativeStop> Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "(Relative) Stop" on page 392

MEASurement<mg>:GATE:CURSor <Cursorset>

Selects the cursor set to be used for measurement gating. The gate area is defined by the cursor lines.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Cursorset> CURSOR1 | CURSor1 | CURSOR2 | CURSor2 | CURSOR3 | CURSor3 | CURSOR4 | CURSor4

CURSOR1 = CURSor1, CURSOR2 = CURSor2, CURSOR3 = CURSor3, CURSOR4 = CURSor4

*RST: CURSOR1

Usage: Asynchronous command

Manual operation: See "Cursor" on page 393

MEASurement<mg>:GATE:CCOupling <CursorCoupling>

Enables the cursor coupling for automatic measurements.

Select the cursor set to be used with `MEASurement<mg>:GATE:CURSor`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<CursorCoupling> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Cursor" on page 393

MEASurement<mg>:GATE:ZCOupling <ZoomCoupling>

If enabled, the gate area is defined identically to the zoom area for the zoom diagram.

If enabled, define the zoom area to be used as gate with `MEASurement<mg>:GATE:ZDIagram`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ZoomCoupling> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Zoom" on page 392

MEASurement<mg>:GATE:ZDIagram <DiagramName>, <ZoomName>

If `MEASurement<mg>:GATE:ZCOupling` is enabled, the gate area is defined identically to the zoom area for the selected zoom diagram.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ZoomName> String with the name of the diagram on which the zoom is based

Example: Prerequisite: Zoom 1 is available
```
MEASurement:GATE:ZCOupling ON
MEASurement:GATE:ZDIagram "Diagram1","Zoom1"
```

Usage: Asynchronous command

Manual operation: See "Zoom" on page 392

MEASurement<mg>:GATE:GCOupling <GateCoupling>

If you enable the gate coupling, the gate settings of the selected measurement are copied to all other measurements. If zoom or cursor coupling is active in a measurement, the zoom size and cursor positions are adjusted.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<GateCoupling> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Apply to all meas" on page 392

26.12.12 Results

MEASurement<mg>:ARES? 1672
MEASurement<mg>:ARNames 1673
MEASurement<mg>:RESult[:ACTual]? 1673
MEASurement<mg>:RESult:AVG? 1673
MEASurement<mg>:RESult:EVTCount? 1673
MEASurement<mg>:RESult:NPEak? 1673
MEASurement<mg>:RESult:PPEak? 1673
MEASurement<mg>:RESult:RELiability? 1673
MEASurement<mg>:RESult:RMS? 1674
MEASurement<mg>:RESult:WFMCount? 1674
MEASurement<mg>:RESult:STDDev? 1674
MEASurement<mg>:RESult:STARt? 1674
MEASurement<mg>:RESult:STOP? 1674
MEASurement<mg>:RESult:COUNt? 1675

MEASurement<mg>:ARES?

Returns the results of all active measurements for the selected measurement group. If statistics are enabled, the instrument returns also statistical results.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<Data> Result string

Example:
```
:MEASurement:ARES?
2.351778656126e-001,1.343873517787e-001,
-1.343873517787e-001
```

Example:
```
:MEASurement:ARNames 1
:MEASurement:ARES?
Amplitude: 2.351778656126e-001,Max:
1.343873517787e-001,Min: -1.343873517787e-001
```

Example:
```
:MEASurement:ARNames 1
:MEASurement:STATistics:ENABle 1
:MEASurement:ARES?
Amplitude:
2.312252964427e-001,2.608695652174e-001,
2.292490118577e-001,2.391822576775e-001,
2.392462568683e-001,5.533663458383e-003,12447,
12447,Max: 1.343873517787e-001,
1.343873517787e-001,1.324110671937e-001,
1.340297640714e-001, 1.340319233732e-001,
7.608360495310e-004,12447,12447, Min:
-1.324110671937e-001,-1.324110671937e-001,
-1.343873517787e-001,-1.340169449387e-001,
1.340191641476e-001,7.712812700636e-004,12447,
12447
Results: current, peak+, peak-, average, RMS,
standard deviation, event count, waveform count
```

Usage: Query only
Asynchronous command

MEASurement<mg>:ARNames <Identifier>

Enables a prefix that indicates the measurement in the result string of the `MEASurement<mg>:ARES?` command.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Identifier> OFF | ON
*RST: OFF

Example:
```
:MEASurement:ARNames 1
:MEASurement:ARES?
Low: -1.185770750988e-001,Amplitude:
2.371541501976e-001,Max: 1.343873517787e-001
```

Usage: Asynchronous command

MEASurement<mg>:RESult[:ACTual]? [<MeasType>],[<BaseLevel>],
[<TargetLevel>]
MEASurement<mg>:RESult:AVG? [<MeasType>],[<BaseLevel>],[<TargetLevel>]
MEASurement<mg>:RESult:EVTCount? [<MeasType>],[<BaseLevel>],
[<TargetLevel>]
MEASurement<mg>:RESult:NPEak? [<MeasType>],[<BaseLevel>],[<TargetLevel>]
MEASurement<mg>:RESult:PPEak? [<MeasType>],[<BaseLevel>],[<TargetLevel>]
MEASurement<mg>:RESult:RELiability? [<MeasType>],[<BaseLevel>],
[<TargetLevel>]

MEASurement<mg>:RESult:RMS? [<MeasType>],[<BaseLevel>],[<TargetLevel>]
MEASurement<mg>:RESult:WFMCount? [<MeasType>],[<BaseLevel>],
[<TargetLevel>]
MEASurement<mg>:RESult:STDDev? [<MeasType>],[<BaseLevel>],[<TargetLevel>]

Return the statistic results of the specified measurement. If no parameter is specified, the result of the main measurement is returned. The main measurement is defined using `MEASurement<mg>:MAIN`.

- [:ACTual]: current measurement result
- AVG: average of the long-term measurement results
- EVTCount: number of measurement results in the long-term measurement
- NPEak: negative peak value of the long-term measurement results
- PPEak: positive peak value of the long-term measurement results
- RELiability: reliability of the measurement result
- RMS: RMS value of the long-term measurement results
- STDDev: standard deviation of the long-term measurement results

For a detailed description of the results, see "Selection of the measurement group: MEASurement<mg>" on page 1596.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Query parameters:
<MeasType> See `MEASurement<mg>:MAIN` on page 1600.

<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Return values:
<Value> Measurement result

Example: See "Simple frequency and amplitude measurement" on page 1329.

Usage: Query only

MEASurement<mg>:RESult:STARt? [<MeasType>],[<BaseLevel>],[<TargetLevel>]
MEASurement<mg>:RESult:STOP? [<MeasType>],[<BaseLevel>],[<TargetLevel>]

Return the start and stop times of the specified measurement. The parameter defines the measurement. If no parameter is specified, the result of the main measurement is returned. The main measurement is defined using `MEASurement<mg>:MAIN`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Query parameters:

<MeasType> See MEASurement<mg>:MAIN on page 1600.

<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Return values:

<Value>

Usage: Query only

MEASurement<mg>:RESult:COUNt? [<MeasType>],[<BaseLevel>],[<TargetLevel>]

Returns the number of result groups that are returned by MEASurement:RESult:ACTual? HAR.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Query parameters:

<MeasType> HAR
The command is only relevant for harmonic search.

<BaseLevel> Sets the base level for signals with PAM order > 2

<TargetLevel> Sets the target level for signals with PAM order > 2

Return values:

<Value>

Example:

```
:MEASurement:RESult:ACTual? HAR
99.9;-6.000139236;199.8;-80.701713562;299.7;-15.528377533;399.6;-79.84082
:MEASurement:RESult:COUNt? HAR
&lt;-- 5
```

Usage: Query only

Firmware/software: Version 2.70

26.12.13 Display

MEASurement<mg>:DISPlay:LEVels 1675
MEASurement<mg>:DISPlay:RESults 1676
MEASurement<mg>:DISPlay:STYLe 1676
MEASurement<mg>:DISPlay:HISTogram 1677

MEASurement<mg>:DISPlay:LEVels <DisplayLevels>

If enabled, the reference levels used for the measurement are displayed in the diagram.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<DisplayLevels> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Reference levels" on page 398

MEASurement<mg>:DISPlay:RESults <DisplayResult>

If enabled, the intermediate result linesare displayed in the measurement diagram.

Result lines mark the samples in the waveform that are used to obtain the measurement result. These are, for example, maximum and minimum values, mean, cycle start and cycle end, and others.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<DisplayResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Result lines" on page 398

MEASurement<mg>:DISPlay:STYLe <DisplayStyle>

Selects the style in which the measurement waveform is displayed.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<DisplayStyle> LINE | MARKer

LINE
The individual data points are connected by a line.

MARKer
Only the individual data points are displayed as markers.

*RST: LINE

Usage: Asynchronous command

MEASurement<mg>:DISPlay:HISTogram <DispHistg>

Displays a histogram for the source of the selected measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<DispHistg> OFF | ON
*RST: OFF

Usage: Asynchronous command

26.12.14 Statistics and long-term measurements

See also: Section 26.16.7, "Long term measurement results and measurement histogram: export to file", on page 1794.

MEASurement<mg>:STATistics[:ENABle] 1677
MEASurement<mg>:CLEar 1678
MEASurement<mg>:MULTiple 1678
MEASurement<mg>:MNOMeas 1678
MEASurement<mg>:STATistics:HISTogram 1679
MEASurement<mg>:STATistics:HBINs 1679
MEASurement<mg>:STATistics:MODE 1679
MEASurement<mg>:STATistics:RCOunt 1680
MEASurement<mg>:STATistics:RMEascount 1680
MEASurement<mg>:STATistics:RTIMe 1681
MEASurement<mg>:STATistics:RESet 1681
MEASurement<mg>:VERTical:CONT 1681
MEASurement<mg>:VERTical:AUTO 1682
MEASurement<mg>:VERTical:OFFSet 1682
MEASurement<mg>:VERTical:SCALe 1682
MEASurement<mg>:LTMeas[:STATe] 1683
MEASurement<mg>:LTMeas:COUNt 1683
MEASurement<mg>:LTMeas:TIME 1683

MEASurement<mg>:STATistics[:ENABle] <State>

Enables statistics calculation for the measurement.

For details on the statistics results, see Section 8.2.11.2, "Statistics", on page 395.

Suffix:
<mg> See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Statistics" on page 338

MEASurement<mg>:CLEar

Deletes the statistic results of the indicated mesurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Usage: Event
Asynchronous command

MEASurement<mg>:MULTiple <MultiMeas>

The measurement is performed repeatedly if the measured parameter occurs several times inside the acquisition or defined gate.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<MultiMeas> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measure all events in each acquisition" on page 406

MEASurement<mg>:MNOMeas <MaxMeasPerAcq>

Sets the maximum number of measurements per acquisition if repeated measurement is enabled (`MEASurement<mg>:MULTiple` is `ON`).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<MaxMeasPerAcq> Range: 2 to 1E+6
Increment: 1
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Measure all events in each acquisition" on page 406

MEASurement<mg>:STATistics:HISTogram <ShowHistogram>

Displays a histogram of the statistical results. Enabling the histogram enables also the calculation and display of statistics for the measurement results if statistics were disabled. the histogram shows the cumulative occurence distribution of mean measurement results in a graphic.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ShowHistogram> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable (Histogram)" on page 401

MEASurement<mg>:STATistics:HBINs <HistogramBins>

Sets the number of bins - the number of vertical bars that build the histogram.

If `MEASurement<mg>:VERTical:CONT` is ON, the instrument determines the number of bins automatically based on the time base, the current measurements, and other settings.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<HistogramBins> Range: 2 to 1000
Increment: 10
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Number of bins" on page 402

MEASurement<mg>:STATistics:MODE <ResetMode>

Defines when the statistics for long term measurements are reset.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ResetMode> TIME | WFMS | MEAS

TIME
Sets one long term measurement point after the time defined using `MEASurement<mg>:STATistics:RTIMe`.

WFMS - Waveforms
Sets one long term measurement point after a number of acquired waveforms defined using `MEASurement<mg>:STATistics:RCOunt`.

MEAS
Sets one long term measurement point after a number of measurement results.

*RST: TIME

Usage: Asynchronous command

Manual operation: See "Horizontal scaling" on page 403

MEASurement<mg>:STATistics:RCOunt <ResetWaveforms>

Defines the number of measured waveforms from which one point of the long term measurement is created (reset of statistics).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ResetWaveforms> Range: 1 to 65535
Increment: 10
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Waveforms / point" on page 404

MEASurement<mg>:STATistics:RMEascount <ResetMeasCount>

Defines the number of measurement results from which one point of the long term measurement is created.

This setting is only available if `MEASurement<mg>:STATistics:MODE` is set to `MEAS`.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ResetMeasCount> Range: 1 to 65535
Increment: 10
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Measurements / point" on page 404

MEASurement<mg>:STATistics:RTIMe <ResetTime>

Defines the time or period after which the statistics are reset.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ResetTime> Range: 0.1 to 2.14748E+9
Increment: 1E-3
*RST: 0.2
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time / point" on page 404

MEASurement<mg>:STATistics:RESet

Resets the histogram, the long term measurement and the statistics.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Usage: Event
Asynchronous command

Manual operation: See "Reset all" on page 402

MEASurement<mg>:VERTical:CONT <ContAutoScl>

If enabled, automatic vertical scaling is performed whenever the waveform does not fit in the diagram during the long term measurement period.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ContAutoScl> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Analysis scale" on page 403

MEASurement<mg>:VERTical:AUTO

Performs an automatic scaling once so that the scaling is adapted to the current measurement results. Available only for long term measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Usage: Event
Asynchronous command

Manual operation: See "Analysis scale" on page 403

MEASurement<mg>:VERTical:OFFSet <VerticalOffset>

Defines a vertical offset for the long term measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<VerticalOffset>
Range: -100E+12 to 100E+12
Increment: 1E-6
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Analysis scale" on page 403

MEASurement<mg>:VERTical:SCALe <VerticalScale>

Defines the vertical scaling per division, so that the scaling can be adapted automatically during the long term measurement period.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<VerticalScale>
Range: 1E-12 to 100E+12
Increment: 10E-6
*RST: 0.5
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Analysis scale" on page 403

MEASurement<mg>:LTMeas[:STATe] <ShowDiagram>

Enables long term measurement for a defined number of measurement points (see `MEASurement<mg>:LTMeas:COUNt` on page 1683) or a specified time (see`MEASurement<mg>:LTMeas:TIME` on page 1683).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ShowDiagram> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable (Long term)" on page 401

MEASurement<mg>:LTMeas:COUNt <MeasCnt>

Defines the total number of points to be measured during the long term measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<MeasCnt> Range: 1000 to 200E+3
Increment: 10
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Number of points" on page 403

MEASurement<mg>:LTMeas:TIME <MeasTime>

Defines the total duration of the long term measurement.

This setting is only available if `MEASurement<mg>:STATistics:MODE` is set to "Time".

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<MeasTime> Range: 0.01 to 2.14748E+9
Increment: 1
*RST: 200
Default unit: s

Usage: Asynchronous command

Manual operation: See "Measurement time" on page 404

26.12.15 Track

MEASurement<mg>:TRACk[:STATe] 1684
MEASurement<mg>:TRACk:DATA:HEADer? 1684
MEASurement<mg>:TRACk:DATA:STYPe? 1684
MEASurement<mg>:TRACk:DATA[:VALues]? 1685

MEASurement<mg>:TRACk[:STATe] <State>

Enables the track functionality and displays the track.

The track functionality requires at least one option, see "Enable (Track)" on page 402.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable (Track)" on page 402

MEASurement<mg>:TRACk:DATA:HEADer?

Returns the header of the track.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<Start> 1. header value: time of the first sample in s

<Stop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample.

Usage: Query only

MEASurement<mg>:TRACk:DATA:STYPe?

Returns the data type.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<SignalType> String: "TRK" (track)

Usage: Query only

MEASurement<mg>:TRACk:DATA[:VALues]?

Returns the data of track points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

To set the export format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,64 | INT,8 | INT,16.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<Data> Comma-separated list of data.

Usage: Query only

26.12.16 Limit check and event actions

MEASurement<mg>:LCHeck 1685
MEASurement<mg>:ONViolation:BEEP 1686
MEASurement<mg>:ONViolation:ACQStop 1686
MEASurement<mg>:ONViolation:PRINt 1686
MEASurement<mg>:ONViolation:WFMSave 1687
MEASurement<mg>:ONViolation:REPort 1687
MEASurement<mg>:ONViolation:TRIGgerout 1688
MEASurement<mg>:ONViolation:RUNexec 1688
MEASurement<mg>:ONViolation:RESSave 1688

MEASurement<mg>:LCHeck <LimitCheckState>

Defines the type of the limit check that can run together with the measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<LimitCheckState> OFF | LIMit | LMARgin

OFF
No limit check.

LIMit
Only limits are checked.

LMARgin
Limits and margins are checked.

*RST: OFF

Usage: Asynchronous command

MEASurement<mg>:ONViolation:BEEP <Beep>

Generates a beep sound for the specified event.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Beep> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Beep" on page 408

MEASurement<mg>:ONViolation:ACQStop <StopAcq>

Stops data acquisition for the specified event.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<StopAcq> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Stop acquisition" on page 408

MEASurement<mg>:ONViolation:PRINt <Print>

Saves a screenshot on limit or margin violation or on successful completion of the measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Print> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save screenshot" on page 409

MEASurement<mg>:ONViolation:WFMSave <SaveWfm>

Saves the waveform data using the default RefCurve filename.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<SaveWfm> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save waveform" on page 409

MEASurement<mg>:ONViolation:REPort <Report>

Creates and saves a report of the current settings and results.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Report> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Report" on page 409

MEASurement<mg>:ONViolation:TRIGgerout <TrigOutPls>

Creates a trigger out pulse on limit or margin violation or on successful completion of the measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<TrigOutPls> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Trigger out pulse" on page 409

MEASurement<mg>:ONViolation:RUNexec <RunExecutable>

Starts an external application if the command is set to `VIOLation` or `SUCCess`.

Use the following commands to set up the application:

- `EXECutable:NAME` on page 1804
- `EXECutable:PARameter` on page 1805
- `EXECutable:WDIRectory` on page 1805

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<RunExecutable> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Start executable" on page 409

MEASurement<mg>:ONViolation:RESSave <SaveResults>

Starts the export of selected results to file on limit or margin violation or on successful completion of the measurement.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<SaveResults> NOACtion | SUCCess | VIOLation

*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Results" on page 409

26.13 Spectrum analysis

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

26.13.1 Basic FFT

CALCulate:MATH<m>:FFT:LOGScale ... 1690
CALCulate:MATH<m>:FFT:STARt ... 1690
CALCulate:MATH<m>:FFT:STOP ... 1691
CALCulate:MATH<m>:FFT:CFRequency ... 1691
CALCulate:MATH<m>:FFT:FULLspan ... 1691
CALCulate:MATH<m>:FFT:SPAN ... 1692
CALCulate:MATH<m>:FFT:TYPE ... 1692
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:ADJusted? ... 1692
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:AUTO ... 1693
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:RATio ... 1693
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution][:VALue] ... 1693
CALCulate:MATH<m>:FFT:WINDow:TYPE ... 1694
CALCulate:MATH<m>:FFT:FRAMe:ARIThmetics ... 1695
CALCulate:MATH<m>:FFT:FRAMe:COVerage? ... 1695
CALCulate:MATH<m>:FFT:FRAMe:MAXCount ... 1695
CALCulate:MATH<m>:FFT:FRAMe:OFACtor ... 1696
CALCulate:MATH<m>:FFT:GATE:COUPling ... 1696
TIMebase:RACTime? ... 1697
CALCulate:MATH<m>:FFT:GATE:ABSolute:STARt ... 1697
CALCulate:MATH<m>:FFT:GATE:ABSolute:STOP ... 1697
CALCulate:MATH<m>:FFT:GATE:MODE ... 1698
CALCulate:MATH<m>:FFT:GATE:RELative:STARt ... 1698
CALCulate:MATH<m>:FFT:GATE:RELative:STOP ... 1698

CALCulate:MATH<m>:FFT:GATE:SHOW 1699
CALCulate:MATH<m>:FFT:GATE:ZCOupling 1699
CALCulate:MATH<m>:FFT:GATE:ZDIagram 1699
CALCulate:MATH<m>:FFT:GATE[:STATe] 1700
CALCulate:MATH<m>:FFT:MAGNitude:LEVel 1700
CALCulate:MATH<m>:FFT:MAGNitude:RANGe 1700
CALCulate:MATH<m>:FFT:MAGNitude:SCALe 1700
CALCulate:MATH<m>:FFT:PHASe:SCALe 1702
CALCulate:MATH<m>:FFT:PHASe:SUPPression 1702
CALCulate:MATH<m>:FFT:PHASe:THReshold 1702
CALCulate:MATH<m>:FFT:PHASe:UNWRap 1703
CALCulate:MATH<m>:FFT:COUPled:WITH<n> 1703

CALCulate:MATH<m>:FFT:LOGScale <XAxisMode>

Defines the scaling method for the frequency (x-)axis of the spectrogram.

Suffix:
<m> 1..8

Parameters:
<XAxisMode> LIN | LOG

LOG
Logarithmic scaling

LIN
Linear scaling

*RST: LIN

Usage: Asynchronous command

Manual operation: See "Frequency axis" on page 422

CALCulate:MATH<m>:FFT:STARt <StartFreq>

Defines the start frequency of the displayed frequency span.

Suffix:
<m> 1..8
math waveform

Parameters:
<StartFreq> start frequency

Range: 0 to 5E+9
Increment: 1
*RST: 2E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Start frequency" on page 422

CALCulate:MATH<m>:FFT:STOP <StopFreq>

Defines the stop frequency of the displayed frequency span.

Suffix:
<m> 1..8
math waveform

Parameters:
<StopFreq> stop frequency
Range: 0 to 5E+9
Increment: 1
*RST: 2E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Stop frequency" on page 422

CALCulate:MATH<m>:FFT:CFRequency <CenterFreq>

Defines the position of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The width of the range is defined using the `CALCulate:MATH<m>:FFT:SPAN` command.

Suffix:
<m> 1..8
math waveform

Parameters:
<CenterFreq> center frequency
Range: 0 to 2E+12
Increment: 1
*RST: 2.5E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Center frequency" on page 422

CALCulate:MATH<m>:FFT:FULLspan

Performs FFT calculation for the full frequency span.

Suffix:
<m> 1..8
math waveform

Usage: Event
Asynchronous command

Manual operation: See "Full span" on page 422

CALCulate:MATH<m>:FFT:SPAN <FreqSpan>

The span is specified in Hertz and defines the width of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The position of the span is defined using the `CALCulate:MATH<m>:FFT:CFRequency` command.

Suffix:
<m> 1..8
Math waveform

Parameters:
<FreqSpan> Frequency span
Range: 1 to 20E+9
Increment: 1
*RST: Bandwidth of the instrument model, bandwidth extension options are not considered
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency span" on page 422

CALCulate:MATH<m>:FFT:TYPE <Type>

Selects between the magnitude and phase spectrum type.

Suffix:
<m> 1..8

Parameters:
<Type> MAGNitude | PHASe
*RST: MAGNitude

Usage: Asynchronous command

Manual operation: See "Type" on page 421

CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:ADJusted?

Queries the effective resolution bandwidth.

Suffix:
<m> 1..8
Math waveform

Return values:
<AdjResBW> effective resolution bandwidth
Range: 0.01 to 20E+12
*RST: 0
Default unit: Hz

Usage: Query only

Manual operation: See "Resolution BW" on page 423

CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:AUTO <State>

Couples the frequency span to the RBW.

Suffix:
<m> 1..8
math waveform

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Span/RBW Coupling" on page 423

CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:RATio <SpanRBWRatio>

This command defines the ratio of span (Hz) / resolution bandwidth (Hz).

Suffix:
<m> 1..8
math waveform

Parameters:
<SpanRBWRatio> ratio span / resolution bandwidth
Range: 1 to 1000
Increment: 1
*RST: 100

Usage: Asynchronous command

Manual operation: See "Span/RBW Ratio" on page 423

CALCulate:MATH<m>:FFT:BANDwidth[:RESolution][:VALue] <ResolutionBW>

This command defines the resolution bandwidth.

Suffix:
<m> 1..8
math waveform

Parameters:
<ResolutionBW> resolution bandwidth
Range: 5E-3 to 160E+6
Increment: 0.01
*RST: 2E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Resolution BW" on page 423

CALCulate:MATH<m>:FFT:WINDow:TYPE <WindowType>

Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the R&S RTP to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. These characteristics need to be considered carefully to find the optimum solution for the measurement task.

Suffix:

<m> 1..8
math waveform

Parameters:

<WindowType> RECTangular | HAMMing | HANN | BLACkharris | GAUSsian | FLATTOP2 | FLATtop2 | KAISerbessel

RECTangular
The rectangular window has the best frequency resolution, but a poor amplitude accuracy and is recommended for separating two tones with almost equal amplitudes and a small frequency distance.

HAMMing
The Hamming window is bell shaped and has a good frequency resolution and fair amplitude accuracy. It is recommended for frequency response measurements as well as sine waves, periodic signals and narrow-band noise

HANN
The Hann window is bell shaped and has a slightly worse frequency resolution but smaller sidelobe level than the Hamming window. The applications are the same.

BLACkharris
The Blackman window is bell shaped and has a poor frequency resolution, but very good amplitude accuracy. It is recommended mainly for signals with single frequencies to detect harmonics.

GAUSsian
Good frequiency resolution and best magnitude resolution, recommended for weak signals and short duration

FLATTOP2 = FLATtop2
The flattop window has a poor frequency resolution, but the best amplitude accuracy and the sharpest side lobe. It is recommended for accurate single-tone amplitude measurements.

KAISerbessel
The Kaiser-Bessel window has a fair frequency resolution and good amplitude accuracy, and a very high sidelobe level. It is recommended for separating two tones with differing amplitudes and a small frequency distance.

*RST: BLACkharris

Usage: Asynchronous command

Firmware/software: Version 3.35 and higher: Use FLATTOP2 or FLATtop2 instead of FLAT2

Manual operation: See "Window type" on page 423

CALCulate:MATH<m>:FFT:FRAMe:ARIThmetics <Arithmetics>

The arithmetic mode defines how the final FFT result is calculated from the individual frame results.

Suffix:
<m> 1..8
Selects the math waveform.

Parameters:
<Arithmetics> OFF | ENVelope | AVERage | RMS | MINHold | MAXHold
See "Segment arithmetic" on page 425
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Segment arithmetic" on page 425

CALCulate:MATH<m>:FFT:FRAMe:COVerage?

Due to the restriction of the number of frames (see `CALCulate:MATH<m>:FFT:FRAMe:MAXCount` on page 1695), the waveform may only be analyzed partially. This command queries the percentage of the trace that was analyzed, i.e. which part of the trace was included in the frame calculation.

Suffix:
<m> 1..8
math waveform

Return values:
<FrameCoverage> Range: 0 to 100
*RST: 100
Default unit: %

Usage: Query only
Asynchronous command

Manual operation: See "Max FFTs per acquisition" on page 425

CALCulate:MATH<m>:FFT:FRAMe:MAXCount <MaxFrameCount>

Restricts the maximum number of frames to be calculated. Due to the other parameter settings, the required number of frames may become very high, thus slowing performance. By restricting the number of frames, you can avoid performance loss without changing the other parameters.

Suffix:
<m> 1..8
math waveform

Parameters:
<MaxFrameCount> Range: 1 to 10000
Increment: 10
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Max FFTs per acquisition" on page 425

CALCulate:MATH<m>:FFT:FRAMe:OFACtor <OverlapFactor>

Defines the minimum factor by which two neighboring frames overlap. If the required number of frames to cover the input values allows for more overlap, the factor is increased.

The higher the overlap factor, the more frames are used. This leads to more individual results and improves detection of transient signal effects. However, it also extends the duration of the calculation.

Suffix:
<m> 1..8
math waveform

Parameters:
<OverlapFactor> Range: 0 to 90
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Overlap Factor" on page 425

CALCulate:MATH<m>:FFT:GATE:COUPling <GateRBWCoupling>

Defines the behaviour of the record length or RBW value in dependancy to the other FFT parameters.

See also:

- "Record Length/RBW Coupling" on page 428
- Section 9.1.1, "Fundamentals of FFT analysis", on page 412

Suffix:
<m> 1..8
math waveform

Parameters:
<GateRBWCoupling> LENGth | RBW

LENGth
The record length remains constant. If not enough samples are available for the selected RBW, the RBW will be decreased.

RBW
The RBW is not adapted, i.e. remains as defined by the user. The required acquisition time for this RBW is indicated. If necessary and possible, the record length is extended to acquire the required number of samples.

*RST: RBW

Usage: Asynchronous command

Manual operation: See "Record Length/RBW Coupling" on page 428

TIMebase:RACTime?

Queries the required acquisition time. If FFT gating is used and the resolution BW is set to constant, record length can be extended to acquire the required number of samples. In this case, the required acquisition time differs from the adjusted acquisition time (`TIMebase:RANGe`).

Return values:
<RqrdAcqTime> Required acquisition time for FFT

Range: 125E-12 to 100E+3
*RST: 0.5
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Required acquisition time" on page 428

CALCulate:MATH<m>:FFT:GATE:ABSolute:STARt <Start>

Defines the starting value for the gate.

Suffix:
<m> 1..8
math waveform

Parameters:
<Start>
Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0

Usage: Asynchronous command

Manual operation: See "(Relative) Start" on page 392

CALCulate:MATH<m>:FFT:GATE:ABSolute:STOP <Stop>

Defines the end value for the gate.

Suffix:
<m> 1..8
math waveform

Parameters:
<Stop> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "(Relative) Stop" on page 392

CALCulate:MATH<m>:FFT:GATE:MODE <Mode>

Defines whether the gate settings are configured using absolute or relative values.

Suffix:
<m> 1..8
math waveform

Parameters:
<Mode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Gate description" on page 427

CALCulate:MATH<m>:FFT:GATE:RELative:STARt <RelativeStart>

Defines the starting value for the gate in percent.

Suffix:
<m> 1..8
math waveform

Parameters:
<RelativeStart> Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "(Relative) Start" on page 392

CALCulate:MATH<m>:FFT:GATE:RELative:STOP <RelativeStop>

Defines the end value for the gate in percent.

Suffix:
<m> 1..8
math waveform

Parameters:

<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "(Relative) Stop" on page 392

CALCulate:MATH<m>:FFT:GATE:SHOW <DisplayState>

Indicates the gate area in the source diagram.

Suffix:

<m>
1..8
math waveform

Parameters:

<DisplayState>
OFF | ON
*RST: OFF

Usage: Asynchronous command

CALCulate:MATH<m>:FFT:GATE:ZCOupling <ZoomCoupling>

If enabled, the gate area is defined identically to the zoom area for the zoom diagram.

Suffix:

<m>
1..8
math waveform

Parameters:

<ZoomCoupling>
OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Zoom" on page 392

CALCulate:MATH<m>:FFT:GATE:ZDIagram <ZoomDiagram>

If `CALCulate:MATH<m>:FFT:GATE:ZCOupling` is set to "ON", the gate area is defined identically to the zoom area for the zoom diagram specified with this command.

Suffix:

<m>
1..8
math waveform

Parameters:

<ZoomDiagram>
String with the name of the zoom diagram, which is used as gate.

Usage: Asynchronous command

CALCulate:MATH<m>:FFT:GATE[:STATe] <State>

Enables FFT gating.

Suffix:
<m> 1..8
math waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

CALCulate:MATH<m>:FFT:MAGNitude:LEVel <VerticalMax>

Defines the reference level for dB scaling.

Suffix:
<m> 1..8
Math waveform

Parameters:
<VerticalMax> Range: -1E+15 to 1E+15
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Reference level" on page 431

CALCulate:MATH<m>:FFT:MAGNitude:RANGe <Range>

Defines the vertical value range in spectrum mode.

Suffix:
<m> 1..8
math waveform

Parameters:
<Range> Range: 1 to 500
Increment: 1
*RST: 100
Default unit: dB

Usage: Asynchronous command

CALCulate:MATH<m>:FFT:MAGNitude:SCALe <MagnitudeScale>

Defines the scaling of the y-axis for magnitude spectrums. The display values are valid for 50Ω termination impendance.

Select the unit according to the vertical unit of the source waveform.

Suffix:
<m> 1..8
math waveform

Parameters:
<MagnitudeScale> LINear | DBM | DB | DBUV | DBMV | DBV | DBPS | DBNS | DBUS | DBMS | DBS | DBHZ | DBKHZ | DBKHz | DBMHZ | DBMHz | DBGHZ | DBGHz | DBA | DBMA | DBUA

LINear
Linear scaling; displays the RMS value.

DBM | DB | DBUV | DBMV | DBV
Basic FFT

DBPS | DBNS | DBUS | DBMS | DBS | DBHZ | DBKHZ | DBKHz | DBMHZ | DBMHz | DBGHZ | DBGHz
FFT on tracks of time or frequency measurements

DBA | DBMA | DBUA
FFT on current waveforms

*RST: DBM

Usage: Asynchronous command

Manual operation: See "Unit" on page 431

Table 26-9: Logarithmic scaling values

DBM	dBm
DB	dB (related to reference level) Set the reference level with `CALCulate:MATH<m>:FFT:MAGNitude:LEVel`.
DBUV	dBµV
DBMV	dBmV
DBV	dBV
DBPS	dBps
DBNS	dBns
DBUS	dBµs
DBMS	dBms
DBS	dBs
DBHZ	dBHz
DBKHZ = DBKHz	dBkHz
DBMHZ = DBMHz	dBMHz
DBGHZ = DBGHz	dBGHz
DBA	dBA
DBMA	dBmA
DBUA	dBµA

CALCulate:MATH<m>:FFT:PHASe:SCALe <PhaseScale>

Defines the scaling unit for phase display.

Suffix:
<m> 1..8
math waveform

Parameters:
<PhaseScale> DEGRees | RADians
*RST: DEGRees

Usage: Asynchronous command

Manual operation: See "Unit" on page 431

CALCulate:MATH<m>:FFT:PHASe:SUPPression <Suppression>

Enables noise suppression. Phase calculation is restricted to frequencies with a minimum magnitude, the threshold value (see `CALCulate:MATH<m>:FFT:PHASe:THReshold` on page 1702).

Suffix:
<m> 1..8
math waveform

Parameters:
<Suppression> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Suppression" on page 431

CALCulate:MATH<m>:FFT:PHASe:THReshold <SupprThres>

Defines the minimum frequency magnitude for which phases are calculated. This setting is only available if `CALCulate:MATH<m>:FFT:PHASe:SUPPression` is set to "ON".

Suffix:
<m> 1..8
math waveform

Parameters:
<SupprThres> Range: -180 to 180
Increment: 0.1
*RST: 0
Default unit: dBm

Usage: Asynchronous command

Manual operation: See "Threshold" on page 431

CALCulate:MATH<m>:FFT:PHASe:UNWRap <Unwrap>

If enabled, phase shifts due to a limitation of the value range are eliminated.

Suffix:
<m> 1..8
math waveform

Parameters:
<Unwrap> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Unwrap" on page 431

CALCulate:MATH<m>:FFT:COUPled:WITH<n> <MathIndex>

Copies the current FFT settings of the selected math waveform (m) to the other selected math waveform (n), and couples the two waveforms. This can be repeated for all math waveforms.

If any FFT setting for any of the coupled spectrums is changed, it is changed for all coupled spectrums.

Suffix:
<m>, <n> 1..8
FFT waveforms to be coupled. <m>, <n> must be active and distinct.

Parameters:
<MathIndex> ON | OFF
*RST: OFF

Example: Prerequisite: FFT waveforms M1 and M2 are active.
`CALC:MATH1:FFT:COUP:WITH2 ON`
Couples the math waveforms M1 and M2.

Usage: Asynchronous command

Manual operation: See "Coupled to M1...M8" on page 429

26.13.2 Waveform data

CALCulate:MATH<m>:DATA:STYPe? 1703
CALCulate:MATH<m>:DATA:HEADer? 1704
CALCulate:MATH<m>:DATA[:VALues]? 1704

CALCulate:MATH<m>:DATA:STYPe?

Returns the signal type of the source of the math waveform.

Suffix:

<m> 1..8
Selects the math waveform.

Return values:

<SignalType> SOUR | SPEC | CORR | MEAS | NONE
SOURce = normal signal
SPECtrum = FFT spectrum, specific math signal
CORRelation = correlated signal, specific math signal
MEAsurement = result of a measurement
NONE = undefined

Usage: Query only
Asynchronous command

CALCulate:MATH<m>:DATA:HEADer?

Returns the header of math waveform data. The header contains attributes of the waveform.

Suffix:

<m> 1..8
Selects the math waveform.

Return values:

<Start> 1. header value: time of the first sample in s

<Stop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For most waveforms the result is 1, for peak detect and envelope waveforms it is 2. If the number is 2, the number of returned values is twice the number of samples (record length).

Example:

```
CALC:MATH1:DATA:HEAD?
-9.477E-008,9.477E-008,200000,1
```

The start time of the data is -9.477E-008 = - 94,77 ns, and the end time of the data is 9.477E-008 = 94,77 ns. The data stream has 200000 values with one value per sample.

Usage: Query only

CALCulate:MATH<m>:DATA[:VALues]?

Returns the data of the math waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

To set the export format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,32 | INT,8 | INT,16.

You can retrieve only Y-values, or X- and Y-values. Use `EXPort:WAVeform:INCXvalues` to define this.

Suffix:
<m> 1..8
Selects the math waveform.

Return values:
<Data> List of comma-separated values according to the format and content settings.

Usage: Query only

26.13.3 Spectrum analysis (option R&S RTP-K37)

In all `CALC:MATH<m>:FFT` commands, the suffix <m> selects the math waveform.

In all `CALC:MATH<m>:FFT:SPEC:TIM` commands, the suffix <m> selects the timeline.

CALCulate:MATH<m>:FFT:SPECtrogram:CMODe 1705
CALCulate:MATH<m>:FFT:USEColtab 1705
CALCulate:MATH<m>:FFT:SPECtrogram:STATe 1706
CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:POSition 1706
CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:STATe 1707

CALCulate:MATH<m>:FFT:SPECtrogram:CMODe <ColorTableMode>

Selects the color table mode for the frequency analysis display.

Suffix:
<m> 1..8

Parameters:
<ColorTableMode> INCI | AMPL

INCI
("Incidence") The display color is set depending on the frequency of occurrence of a value.

AMPL
("Amplitude") In the spectrogram and the frequency analysis display, the color is used to indicate the magnitude of the FFT signal. The higher the amplitude the higher the color in the assigned color table.

*RST: INCI

Usage: Asynchronous command

CALCulate:MATH<m>:FFT:USEColtab <UseColorTable>

If enabled, the selected waveform is displayed according to its assigned color table. For information on the available color tables, see Section 4.3.2, "Color tables", on page 80.

If this option is disabled, the preset color of the selected channel source is displayed, and the intensity of the specific signal color varies according to the cumulative occurrence of the values.

Suffix:
<m> 1..8

Parameters:
<UseColorTable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use color table" on page 424

CALCulate:MATH<m>:FFT:SPECtrogram:STATe <State>

Enables the spectrogram display for a math waveform.

Suffix:
<m> 1..8

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 435

CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:POSition <Position>

Defines the position of one of the two possible time lines in a spectrogram. The time line must be enabled first, using the `CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:STATe` command.

Suffix:
<m> 1..8

<n> 1..2

Parameters:
<Position> The position of the time line is defined by the index of the data acquisition in the history. How many acquisitions are available depends on the history settings.
Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Time line 1/2" on page 435

CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:STATe <State>

Enables one of two possible time lines in a spectrogram diagram. A time line marks a single waveform in the spectrogram, that is: the power vs frequency results for the data acquired at a specific time. After enabling a time line, the results for that time are displayed in the spectrum diagram.

The position of the time line is defined using the `CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:POSition` command.

Suffix:
<m> 1..8

<n> 1..2

Parameters:
<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Time line 1/2" on page 435

26.14 Mask testing

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Mask test definition 1707
- Mask definition: user mask 1712
- Mask definition: waveform mask 1718
- Event actions 1721
- Results 1724
- Eye mask testing 1726

26.14.1 Mask test definition

MTESt:ADD 1708
MTESt:REMove 1708
MTESt[:STATe] 1708

MTESt:SHOW 1709
MTESt:RST 1709
MTESt:SOURce 1709
MTESt:CONDition 1710
MTESt:TOLerance 1710
MTESt:CTYPe 1710
MTESt:FILE:NAME 1711
MTESt:FILE:SAVE 1711
MTESt:FILE:OPEN 1711
MTESt:FILE:DELete 1712

MTESt:ADD <MaskTestName>

Creates a new mask test definition with the specified name.

Setting parameters:
<MaskTestName> String with the name of the mask test

Example: See Section 26.3.3.1, "Creating a user mask", on page 1333

Usage: Setting only
Asynchronous command

MTESt:REMove <MaskTestName>

Deletes the mask test definition with the specified name.

Setting parameters:
<MaskTestName> String with the name of the mask test

Usage: Setting only
Asynchronous command

MTESt[:STATe] <MaskTestName>,<State>
MTESt[:STATe]? <MaskTestName>

Activates and deactivates the mask test. If the acquisition is running, the test starts immediately. Otherwise, the test starts when acquisition is started.

The testing is stopped when acquisition is stopped, also due to the `MTESt:ONViolation:STOP` command, or if `MASK[:STATe]` is set to "OFF".

The coommand needs `*OPC` command synchronisation.

Parameters:
<State> OFF | ON
*RST: OFF

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Example:
```
MTEST:STAT 'MyMask', ON; *OPC?
```
See Section 26.3.3.1, "Creating a user mask", on page 1333

Usage: Asynchronous command

Manual operation: See "Enable" on page 439

MTESt:SHOW <State>

Switches the display of all mask segments on or off.

Parameters:

<State> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Show mask" on page 450

MTESt:RST

Clears all totals and results in all "Mask Test" result tables.

Usage: Event
Asynchronous command

Manual operation: See "Mask results > Reset all" on page 450

MTESt:SOURce <MaskTestName>,<Source>
MTESt:SOURce? <MaskTestName>

Selects the waveform to be tested against the mask.

Parameters:

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | XY1 | XY2 | XY3 | XY4 | SG1TL1 | SG1TL2 | SG2TL1 | SG2TL2 | SG3TL1 | SG3TL2 | SG4TL1 | SG4TL2 | SG5TL1 | SG5TL2 | SG6TL1 | SG6TL2 | SG7TL1 | SG7TL2 | SG8TL1 | SG8TL2 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | EYE1 | EYE2 | EYE3 | EYE4 | SEYE1 | SEYE2 | LANE1 | LANE2 | LANE3 | LANE4

Waveform to be tested, see Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Parameters for setting and query:

<MaskTestName> String containing the name of the mask test

Usage: Asynchronous command

Manual operation: See "Target" on page 439

MTESt:CONDition <MaskTestName>,<PassFailMode>
MTESt:CONDition? <MaskTestName>

Sets the first criteria for a failed test, the kind of hits to be considered for test evaluation. A test has failed if the number of sample hits or acquisition hits exceeds the limit defined by `MTESt:TOLerance`.

Parameters:
<PassFailMode> SAMPles | ACQuisitions

SAMPles
Considers the number of samples that hit the mask.

ACQuisitions
Considers the number of acquisitions that contain at least one sample hit. How many samples hit the mask in that acquisition is not relevant.

*RST: SAMPles

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Fail condition, Violation tolerance" on page 447

MTESt:TOLerance <MaskTestName>,<TolViolCnt>
MTESt:TOLerance? <MaskTestName>

Sets the second criteria for a failed test, the number of tolerable sample hits or acquisition hits. Use `MTESt:CONDition` to define which hits are considered for test evaluation.

Parameters:
<TolViolCnt> Range: 0 to 4E+9
Increment: 1
*RST: 0

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Fail condition, Violation tolerance" on page 447

MTESt:CTYPe <MaskTestName>,<DefinitionType>
MTESt:CTYPe? <MaskTestName>

Sets the method of mask definition.

Parameters:
<DefinitionType> USER | WFML | EYEMask | PROTocol

USER
The mask segments are created by entering the numerical x- and y-values of the mask points.
See: Section 26.14.2, "Mask definition: user mask", on page 1712

WFML
The mask is created from the envelope of an existing waveform.
See: Section 26.14.3, "Mask definition: waveform mask", on page 1718

EYEMask
Mask for eye diagram testing. See: Section 26.23.4, "Eye mask testing", on page 2745.
Requires jitter option R&S RTP-K12

*RST: USER

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Mask Type" on page 439

MTESt:FILE:NAME <MaskTestName>,<Path>
MTESt:FILE:NAME? <MaskTestName>

Specifies a file to save the mask test.

Parameters:
<Path> String containing path and file name, format .xml

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Manual operation: See "Save / load mask" on page 439

MTESt:FILE:SAVE <MaskTestName>

Saves the specified mask test. It contains the mask definition, defined actions and fail conditions.

Setting parameters:
<MaskTestName> String with the name of the mask test

Usage: Setting only
Asynchronous command

Manual operation: See "Save / load mask" on page 439

MTESt:FILE:OPEN <MaskTestName>

Loads the specified mask test to the instrument.

Setting parameters:
<MaskTestName> String with the name of the mask test

Usage: Setting only
Asynchronous command

Manual operation: See "Save / load mask" on page 439

MTESt:FILE:DELete <MaskTestName>

Deletes the specified mask test.

Setting parameters:
<MaskTestName> String with the name of the mask test

Usage: Setting only
Asynchronous command

Manual operation: See "Save / load mask" on page 439

26.14.2 Mask definition: user mask

The chapter contains commands required for the definition of user masks - `MTESt:CTYPe` is set to `USER`.

Segment and point indices
In remote control, the numbering of segments and points starts from 0. But in manual operation, the numbering starts from 1.

MTESt:SEGMent:STATe ... 1713
MTESt:SEGMent:ADD ... 1713
MTESt:SEGMent:COUNt? ... 1713
MTESt:SEGMent:INSert ... 1713
MTESt:SEGMent:REMove ... 1714
MTESt:SEGMent:CLEar ... 1714
MTESt:SEGMent:REGion ... 1714
MTESt:SEGMent:POINt:ADD ... 1715
MTESt:SEGMent:POINt:INSert ... 1715
MTESt:SEGMent:POINt:REMove ... 1715
MTESt:SEGMent:POINt:COUNt? ... 1716
MTESt:SEGMent:POINt:X ... 1716
MTESt:SEGMent:POINt:Y ... 1716
MTESt:SEGMent:RESCale:RECalculate ... 1717
MTESt:SEGMent:RESCale:XFACtor ... 1717
MTESt:SEGMent:RESCale:YFACtor ... 1717
MTESt:SEGMent:RESCale:XOFFset ... 1717
MTESt:SEGMent:RESCale:YOFFset ... 1718

MTESt:SEGMent:STATe <MaskTestName>,<MskSegmIdx>,<State>
MTESt:SEGMent:STATe? <MaskTestName>,<MskSegmIdx>

Enables and disables the mask segment. Disabled segments are not considered by running tests.

Parameters:
<State> OFF | ON
*RST: ON

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

Usage: Asynchronous command

Manual operation: See "Mask segments" on page 441

MTESt:SEGMent:ADD <MaskTestName>

Creates a new segment in the mask definition.

Setting parameters:
<MaskTestName> String with the name of the mask test

Example: See Section 26.3.3.1, "Creating a user mask", on page 1333

Usage: Setting only
Asynchronous command

Manual operation: See "Mask segments" on page 441

MTESt:SEGMent:COUNt? <MaskTestName>

Returns the number of segments in the mask definition

Query parameters:
<MaskTestName> String with the name of the mask test

Return values:
<Count> Number of segments

Usage: Query only

Manual operation: See "Mask segments" on page 441

MTESt:SEGMent:INSert <MaskTestName>,<MaskSegmIdx>

Inserts a new segment before the specified index in the mask definition.

Setting parameters:
<MaskTestName> String with the name of the mask test

<MaskSegmIdx> Number of the segment. Counting starts from 0.

Usage: Setting only
Asynchronous command

Manual operation: See "Mask segments" on page 441

MTESt:SEGMent:REMove <MaskTestName>,<MskSegmIdx>

Removes the specified segment from the mask definition.

Setting parameters:
<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

Usage: Setting only
Asynchronous command

Manual operation: See "Mask segments" on page 441

MTESt:SEGMent:CLEar <MaskTestName>

Deletes all mask segments of the indicated mask test.

Setting parameters:
<MaskTestName> String with the name of the mask test

Usage: Setting only
Asynchronous command

MTESt:SEGMent:REGion <MaskTestName>,<MskSegmIdx>,<Region>
MTESt:SEGMent:REGion? <MaskTestName>,<MskSegmIdx>

Defines the region of the segment that builds the mask.

Parameters:
<Region> UPPer | LOWer | INNer

UPPer
the segment points are connected to a line, the display area above this line is the mask segment

LOWer
the segment points are connected to a line, the display area below this line is the mask segment

INNer
the segment points form a closed geometrical shape, which is the mask segment

*RST: INNer

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

Example: See Section 26.3.3.1, "Creating a user mask", on page 1333

Usage: Asynchronous command

Manual operation: See "Mask segments" on page 441

MTESt:SEGMent:POINt:ADD <MaskTestName>,<MaskSegmIdx>

Adds a new point to the segment definition.

Setting parameters:

<MaskTestName> String with the name of the mask test

<MaskSegmIdx> Number of the segment. Counting starts from 0.

Example: See Section 26.3.3.1, "Creating a user mask", on page 1333

Usage: Setting only
Asynchronous command

Manual operation: See "Definition of segment" on page 442

MTESt:SEGMent:POINt:INSert
<MaskTestName>,<MaskSegmIdx>,<MaskSegmPtIdx>

Inserts a new point before the specified mask segment point.

Setting parameters:

<MaskTestName> String with the name of the mask test

<MaskSegmIdx> Number of the segment. Counting starts from 0.

<MaskSegmPtIdx> Number of the point. Counting starts from 0.

Usage: Setting only
Asynchronous command

Manual operation: See "Definition of segment" on page 442

MTESt:SEGMent:POINt:REMove
<MaskTestName>,<MaskSegmIdx>,<MaskSegmPtIdx>

Removes the specified point from the mask segment.

Setting parameters:

<MaskTestName> String with the name of the mask test

<MaskSegmIdx> Number of the segment. Counting starts from 0.

<MaskSegmPtIdx> Number of the point. Counting starts from 0.

Usage: Setting only
Asynchronous command

Manual operation: See "Definition of segment" on page 442

MTESt:SEGMent:POINt:COUNt? <MaskTestName>,<MskSegmIdx>

Returns the number of defined points for the specified mask segment.

Query parameters:

<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

Return values:

<Number>

Usage: Query only

Manual operation: See "Definition of segment" on page 442

MTESt:SEGMent:POINt:X <MaskTestName>,<MskSegmIdx>,<MskSegmPtIdx>,<X>
MTESt:SEGMent:POINt:X? <MaskTestName>,<MskSegmIdx>,<MskSegmPtIdx>

Defines the x-value of the mask segment point.

Parameters:

<X>
Range: -100E+24 to 100E+24
Increment: 1E-6
*RST: 0
Default unit: s

Parameters for setting and query:

<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

<MskSegmPtIdx> Number of the point. Counting starts from 0.

Example: See Section 26.3.3.1, "Creating a user mask", on page 1333

Usage: Asynchronous command

Manual operation: See "Definition of segment" on page 442

MTESt:SEGMent:POINt:Y <MaskTestName>,<MskSegmIdx>,<MskSegmPtIdx>,<Y>
MTESt:SEGMent:POINt:Y? <MaskTestName>,<MskSegmIdx>,<MskSegmPtIdx>

Defines the y-value of the mask segment point.

Parameters:

<Y>
Range: -100E+24 to 100E+24
Increment: 1E-6
*RST: 0
Default unit: V

Parameters for setting and query:

<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

<MskSegmPtIdx> Number of the point. Counting starts from 0.

Example: See Section 26.3.3.1, "Creating a user mask", on page 1333

Usage: Asynchronous command

Manual operation: See "Definition of segment" on page 442

MTESt:SEGMent:RESCale:RECalculate <MaskTestName>,<MskSegmIdx>

Multiplies and adds the given x- and y-factors and offsets to the coordinates of all points of the selected mask segment.

Setting parameters:

<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

Usage: Setting only
Asynchronous command

Manual operation: See "Apply" on page 443

MTESt:SEGMent:RESCale:XFACtor
<MaskTestName>,<MskSegmIdx>,<ExpansFactX>
MTESt:SEGMent:RESCale:XFACtor? <MaskTestName>,<MskSegmIdx>
MTESt:SEGMent:RESCale:YFACtor
<MaskTestName>,<MskSegmIdx>,<ExpansFactY>
MTESt:SEGMent:RESCale:YFACtor? <MaskTestName>,<MskSegmIdx>

Stretches or compresses the selected mask segment in horizontal (XFACtor) or vertical direction (YFACtor). The x- or y-values of all points of the selected mask segment are multiplied with this factor. Factors >1 stretch the mask segment, while factors between 0 and 1 compress it. Negative values are possible and change the algebraic sign.

Only takes effect after the `MTESt:SEGMent:RESCale:RECalculate` command.

Parameters:

<ExpansFactY>
Range: -100 to 100
Increment: 1
*RST: 1

Parameters for setting and query:

<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

Usage: Asynchronous command

Manual operation: See "Factor Y" on page 443

MTESt:SEGMent:RESCale:XOFFset <MaskTestName>,<MskSegmIdx>,<OffsetX>
MTESt:SEGMent:RESCale:XOFFset? <MaskTestName>,<MskSegmIdx>

Moves the mask segment horizontally. The specified offset is added to the x-values of all points of the selected mask segment.

Only takes effect after the MTESt:SEGMent:RESCale:RECalculate command.

Parameters:

<OffsetX>
Range: -50 to 50
Increment: 1E-9
*RST: 0
Default unit: s

Parameters for setting and query:

<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

Usage: Asynchronous command

Manual operation: See "Offset X" on page 443

MTESt:SEGMent:RESCale:YOFFset <MaskTestName>,<MskSegmIdx>,<OffsetY>
MTESt:SEGMent:RESCale:YOFFset? <MaskTestName>,<MskSegmIdx>

Moves the mask segment vertically. The specified offset is added to the y-values of all points of the selected mask segment.

Only takes effect after the MTESt:SEGMent:RESCale:RECalculate command.

Parameters:

<OffsetY>
Range: -1000 to 1000
Increment: 1E-6
*RST: 0
Default unit: V

Parameters for setting and query:

<MaskTestName> String with the name of the mask test

<MskSegmIdx> Number of the segment. Counting starts from 0.

Usage: Asynchronous command

Manual operation: See "Offset Y" on page 443

26.14.3 Mask definition: waveform mask

The chapter contains commands required for the definition of waveform masks - MTESt:CTYPe is set to WFML.

MTESt:REFWfm 1719
MTESt:WFMLupdate 1719
MTESt:WFMRescale:XWIDth 1719
MTESt:WFMRescale:YWIDth 1720
MTESt:WFMRescale:YPOSition 1720
MTESt:WFMRescale:YSTRetch 1720

MTESt:REFWfm <MaskTestName>,<Source>
MTESt:REFWfm? <MaskTestName>

Sets the reference waveform from which the mask is created.

The reference waveform can be created before, or loaded from a file with REFCurve commands, see Section 26.10.2, "Reference waveforms", on page 1552.

Parameters:
<Source> REF1 | REFerence1 | REF2 | REFerence2 | REF3 | REFerence3 | REF4 | REFerence4

REF1 = REFerence1, REF2 = REFerence2, REF3 = REFerence3, REF4 = REFerence4: reference waveforms

*RST: REF1

Parameters for setting and query:
<MaskTestName> String containing the name of the mask test

Usage: Asynchronous command

MTESt:WFMLupdate <MaskTestName>

Creates the upper and lower mask limit from the envelope of the selected reference waveform. If the reference waveform was not defined before, it is created automatically from the mask test source waveform which is set wtih `MTESt:SOURce`.

Setting parameters:
<MaskTestName> String containing the name of the mask test

Usage: Event
Asynchronous command

MTESt:WFMRescale:XWIDth <MaskTestName>,<HorizWdt>
MTESt:WFMRescale:XWIDth? <MaskTestName>

Sets the width of the mask in horizontal direction. The specified factor in divisions is added to the positive x-values and subtracted from the negative x-values of the mask limits in relation to the source waveform of the mask.

Parameters:
<HorizWdt> Range: 0 to 1000
Increment: 0.01
*RST: 0
Default unit: div

Parameters for setting and query:
<MaskTestName> String containing the name of the mask test

Usage: Asynchronous command

Manual operation: See "Horizontal width" on page 445

MTESt:WFMRescale:YWIDth <MaskTestName>,<VerticalWidth>
MTESt:WFMRescale:YWIDth? <MaskTestName>

Sets the width of the waveform mask in vertical direction. The specified factor in divisions is added to the y-values of the upper mask limit and subtracted from the y-values of the lower mask limit. Thus, the upper half of the mask is pulled upwards, the lower half is pulled down.

Parameters:
<VerticalWidth> Vertical mask width in divisions

Range: 0 to 1000
Increment: 0.01
*RST: 0
Default unit: div

Parameters for setting and query:
<MaskTestName> String containing the name of the mask test

Usage: Asynchronous command

Manual operation: See "Vertical width" on page 445

MTESt:WFMRescale:YPOSition <MaskTestName>,<VertPosi>
MTESt:WFMRescale:YPOSition? <MaskTestName>

Moves the mask vertically within the display.

Parameters:
<VertPosi> Range: -1000 to 1000
Increment: 0.01
*RST: 0
Default unit: div

Parameters for setting and query:
<MaskTestName> String containing the name of the mask test

Usage: Asynchronous command

Manual operation: See "Vertical position" on page 446

MTESt:WFMRescale:YSTRetch <MaskTestName>,<VertStretch>
MTESt:WFMRescale:YSTRetch? <MaskTestName>

Sets the vertical scaling to stretch the mask in y-direction. The scaling axis is the horizontal line through the lowest value of the lower mask limit.

Parameters:
<VertStretch> Scale factor in %

Range: 10 to 1000
Increment: 1
*RST: 100
Default unit: %

Parameters for setting and query:
<MaskTestName> String containing the name of the mask test

Usage: Asynchronous command

Manual operation: See "Vertical stretch" on page 446

26.14.4 Event actions

MTESt:ONViolation:BEEP....1721
MTESt:ONViolation:STOP....1721
MTESt:ONViolation:PRINt....1722
MTESt:ONViolation:SAVewaveform....1722
MTESt:ONViolation:REPort....1722
MTESt:ONViolation:TRIGgerout....1723
MTESt:ONViolation:RUNexec....1723
MTESt:ONViolation:RESSave....1723

MTESt:ONViolation:BEEP <MaskTestName>,<Beep>
MTESt:ONViolation:BEEP? <MaskTestName>

Generates a beep sound for the specified event.

Parameters:
<Beep> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Beep" on page 448

MTESt:ONViolation:STOP <MaskTestName>,<StopAcq>
MTESt:ONViolation:STOP? <MaskTestName>

Stops data acquisition for the specified event.

Parameters:
<StopAcq> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Stop acq." on page 448

MTESt:ONViolation:PRINt <MaskTestName>,<Print>
MTESt:ONViolation:PRINt? <MaskTestName>

Saves a screenshot including the measurement results for the specified event.

Parameters:
<Print> NOACtion | SUCCess | VIOLation
See Event parameter
*RST: NOACtion

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Save screenshot" on page 449

MTESt:ONViolation:SAVewaveform <MaskTestName>,<SaveWfm>
MTESt:ONViolation:SAVewaveform? <MaskTestName>

Saves the waveform data.

Parameters:
<SaveWfm> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Save waveform" on page 449

MTESt:ONViolation:REPort <MaskTestName>,<Report>
MTESt:ONViolation:REPort? <MaskTestName>

Creates and saves a report of the current settings and results.

Parameters:
<Report> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Report" on page 449

MTESt:ONViolation:TRIGgerout <MaskTestName>,<TrigOutPls>
MTESt:ONViolation:TRIGgerout? <MaskTestName>

Creates a trigger out pulse on mask violation or successful completion of the test cycle.

Parameters:
<TrigOutPls> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Trigger out pulse" on page 449

MTESt:ONViolation:RUNexec <MaskTestName>,<RunExecutable>
MTESt:ONViolation:RUNexec? <MaskTestName>

Starts an external application if the command is set to `VIOLation` or `SUCCess`.

Use the following commands to set up the application:

- `EXECutable:NAME` on page 1804
- `EXECutable:PARameter` on page 1805
- `EXECutable:WDIRectory` on page 1805

Parameters:
<RunExecutable> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Start Executable" on page 449

MTESt:ONViolation:RESSave <MaskTestName>,<SaveResults>
MTESt:ONViolation:RESSave? <MaskTestName>

Starts the export of selected results to file if the command is set to `VIOLation` or `SUCCess`.

Parameters:
<SaveResults> NOACtion | SUCCess | VIOLation
See Section 26.4.5, "Event parameter", on page 1350
*RST: NOACtion

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Save results" on page 449

26.14.5 Results

MTESt:RESult:STATe? 1724
MTESt:RESult[:RESult]? 1724
MTESt:RESult:COUNt:WAVeforms? 1725
MTESt:RESult:COUNt:REMaining? 1725
MTESt:RESult:COUNt:FWAVeforms? 1725
MTESt:RESult:COUNt:FAILures? 1725
MTESt:RESult:FRATe? 1726

MTESt:RESult:STATe? <MaskTestName>

Shows if the test is running or has finished. The state is set to "Finished" if no acquisitions remain (see `MTESt:RESult:COUNt:REMaining?` on page 1725).

Query parameters:
<MaskTestName>

Return values:
<State> RUNNing | FINished
*RST: RUNNing

Usage: Query only
Asynchronous command

Manual operation: See "State" on page 437

MTESt:RESult[:RESult]? <MaskTestName>

Returns the test result.

A test has failed if the number of sample hits or acquisition hits exceeds the limit of "Violation tolerance" hits (see `MTESt:TOLerance` on page 1710, `MTESt:RESult:COUNt:FAILures?` on page 1725 and `MTESt:RESult:COUNt:FWAVeforms?` on page 1725).

Query parameters:
<MaskTestName>

Return values:
<TestResult> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

Manual operation: See "Test result" on page 438

MTESt:RESult:COUNt:WAVeforms? <MaskTestName>

Returns the number of tested acquisitions.

Query parameters:
<MaskTestName>

Return values:
<AcqsCompleted> Range: 0 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Acq. completed" on page 437

MTESt:RESult:COUNt:REMaining? <MaskTestName>

Remaining acquisitions until "Average count / Nx Single count" is reached.

The value is useful if you test a specified number of acquisitions with action "Stop acquisition" on violation, or if the acquisition has been stopped manually.

Query parameters:
<MaskTestName>

Return values:
<AcqsRemaining> Range: 0 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Acq. remaining" on page 437

MTESt:RESult:COUNt:FWAVeforms? <MaskTestName>

Returns the number of acquisitions that contained at least one sample hit.

Query parameters:
<MaskTestName>

Return values:
<AcqHits> Range: 0 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Acquisition hits" on page 437

MTESt:RESult:COUNt:FAILures? <MaskTestName>

Returns the number of sample hits that violated the mask.

Query parameters:
<MaskTestName>

Return values:
<SampleHits> Range: 0 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Sample hits" on page 437

MTESt:RESult:FRATe? <MaskTestName>

Ratio of acquisition hits to the number of tested acquisitions.

Query parameters:
<MaskTestName>

Return values:
<FailRate> Range: -100E+24 to 100E+24
*RST: 0
Default unit: %

Usage: Query only
Asynchronous command

Manual operation: See "Fail rate" on page 437

26.14.6 Eye mask testing

26.14.6.1 Definition of eye masks

To perform mask testing on eye diagrams, the option R&S RTP-K12 adds a special mask definition type to the common mask definitions: the definition type "Eye".

MTESt:CEMask ... 1727
MTESt:EYEMask:TYPE ... 1727
MTESt:EYEMask:HEIGht<m>[:VALue] ... 1727
MTESt:EYEMask:WIDTh<m>[:VALue] ... 1728
MTESt:EYEMask:MSKRight ... 1728
MTESt:EYEMask:MSKLeft ... 1728
MTESt:EYEMask:HPERiod ... 1728
MTESt:EYEMask:MSKTop ... 1729
MTESt:EYEMask:MSKBottom ... 1729
MTESt:EYEMask:TOFFset ... 1729
MTESt:EYEMask:BOFFset ... 1729
MTESt:EYEMask:TBSYmmetric ... 1729
MTESt:EYEMask:TBWidth ... 1730
MTESt:EYEMask:HPOSition ... 1730
MTESt:EYEMask:VPOSition ... 1730

MTESt:EYEMask:PAMNeye....1731
MTESt:EYEMask:REFDelta....1731
MTESt:RESult:VDETails?....1731

MTESt:CEMask <MaskTestName>

Converts the test and mask definitions of the current mask test to a new mask test of type "User".

Setting parameters:
<MaskTestName> String with the name of the mask test

Usage: Event
Asynchronous command

Manual operation: See "Convert to user mask" on page 454

MTESt:EYEMask:TYPE <MaskTestName>,<Type>
MTESt:EYEMask:TYPE? <MaskTestName>

Defines the outline of the eye mask.

Parameters:
<Type> SQUare | DIAMond | HEXagon | OCTagon | ELLipse
*RST: DIAMond

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Shape" on page 453

MTESt:EYEMask:HEIGht<m>[:VALue] <MaskTestName>,<value>

Defines the main heigth af all eye mask shapes and the minor height for octagon mask shapes.

Suffix:
<m> 1..2
1 - main width
2 - minor width

Parameters:
<value> Default unit: s

Setting parameters:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Main height (H1), Minor height (H2)" on page 453

MTESt:EYEMask:WIDTh<m>[:VALue] <MaskTestName>,<value>

Defines the main width af all eye mask shapes and the minor width for hexagon and octagon mask shapes.

Suffix:
<m> 1..2
1 - main width
2 - minor width

Parameters:
<value> Default unit: s

Setting parameters:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Main width (W1), Minor width (W2)" on page 453

MTESt:EYEMask:MSKRight <MaskTestName>,<Copy>
MTESt:EYEMask:MSKRight? <MaskTestName>
MTESt:EYEMask:MSKLeft <MaskTestName>,<Copy>
MTESt:EYEMask:MSKLeft? <MaskTestName>

Copies the eye shape to the right and left, respectively.

The distance of the copy is defined using `MTESt:EYEMask:HPERiod`.

Parameters:
<Copy> OFF | ON
*RST: OFF

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Segments" on page 454

MTESt:EYEMask:HPERiod <MaskTestName>,<InterpattLength>
MTESt:EYEMask:HPERiod? <MaskTestName>

Defines the time distance between the shape centers if `MTESt:EYEMask:MSKLeft` and/or `MTESt:EYEMask:MSKRight` are ON.

Parameters:
<InterpattLength> Range: 0 to 100
Increment: 0.01
*RST: 0.5
Default unit: s

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Periodicity" on page 453

MTESt:EYEMask:MSKTop <MaskTestName>,<Add>
MTESt:EYEMask:MSKTop? <MaskTestName>
MTESt:EYEMask:MSKBottom <MaskTestName>,<Add>
MTESt:EYEMask:MSKBottom? <MaskTestName>

Enable the upper (top) and lower (bottom) mask region, respectively.

Parameters:
<Add> OFF | ON
*RST: OFF

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Segments" on page 454

MTESt:EYEMask:TOFFset <MaskTestName>,<RectDistTop>
MTESt:EYEMask:TOFFset? <MaskTestName>
MTESt:EYEMask:BOFFset <MaskTestName>,<RectDistBtom>
MTESt:EYEMask:BOFFset? <MaskTestName>

Voltage distance from the eye shape center that limit the upper (TOFFset) and lower (BOFFset) regions.

Parameters:
<RectDistBtom> Range: 0 to 100
Increment: 0.01
*RST: 0.5
Default unit: V

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Offset top, Offset bottom" on page 454

MTESt:EYEMask:TBSYmmetric <MaskTestName>,<TopBtomSymetrie>
MTESt:EYEMask:TBSYmmetric? <MaskTestName>

Sets bottom and top offsets to the same value so that the outer regions are symmetric to the eye shape.

Parameters:
<TopBtomSymetrie> OFF | ON
*RST: ON

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Symmetric" on page 454

MTESt:EYEMask:TBWidth <MaskTestName>,<Rectlgth>
MTESt:EYEMask:TBWidth? <MaskTestName>

Sets the time width of the outer regions, symmetric to the eye shape center.

Parameters:
<Rectlgth>
Range: 0 to 100
Increment: 0.01
*RST: 0.5
Default unit: s

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Width" on page 454

MTESt:EYEMask:HPOSition <MaskTestName>,<PatOffsetX>
MTESt:EYEMask:HPOSition? <MaskTestName>

Sets the horizontal (time) value of the eye shape enter and thus defines the horizontal position of the eye shape on the display.

Parameters:
<PatOffsetX>
Range: -100 to 100
Increment: 0.01
*RST: 0
Default unit: s

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Horizontal center/Vertical center" on page 453

MTESt:EYEMask:VPOSition <MaskTestName>,<PatOffsetY>
MTESt:EYEMask:VPOSition? <MaskTestName>

Sets the vertical (voltage) value of the eye shape enter and thus defines the vertical position of the eye shape on the display.

Parameters:
<PatOffsetY> Range: -100 to 100
Increment: 0.01
*RST: 0
Default unit: V

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Usage: Asynchronous command

Manual operation: See "Horizontal center/Vertical center" on page 453

MTESt:EYEMask:PAMNeye <MaskTestName>,<PAMEye>
MTESt:EYEMask:PAMNeye? <MaskTestName>

Enable if a PAM-N signal is used for the mask.

Parameters:
<PAMEye> OFF | ON
*RST: OFF

Parameters for setting and query:
<MaskTestName>

Usage: Asynchronous command

Manual operation: See "PAM eye" on page 453

MTESt:EYEMask:REFDelta <MaskTestName>,<DeltaYToRefLev>
MTESt:EYEMask:REFDelta? <MaskTestName>

Sets the vertical delta to the reference level for a PAM-N signal eye.

Available, if `MTESt:EYEMask:PAMNeye` is set to `ON`.

Parameters:
<DeltaYToRefLev> Range: -100 to 100
Increment: 0.01
*RST: 0
Default unit: V

Parameters for setting and query:
<MaskTestName>

Usage: Asynchronous command

Manual operation: See "Vertical data to ref. level" on page 453

MTESt:RESult:VDETails? <MaskTestName>,<DetailedResults>
MTESt:RESult:VDETails?? <MaskTestName>

Returns the detailed mask test results if the test source is an eye.

Parameters for setting and query:
<MaskTestName> String with the name of the mask test

Return values:
<DetailedResults> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

26.15 Search

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- General search settings....1732
- Basic trigger search conditions....1735
- Edge search conditions....1737
- Glitch search conditions....1737
- Interval search conditions....1739
- Runt search conditions....1740
- Slew rate search conditions....1743
- Timeout search conditions....1746
- Width search conditions....1746
- Window search conditions....1749
- Data2clock search conditions....1751
- Pattern search conditions....1754
- State search conditions....1758
- Search on spectrum....1761
- Search gate settings....1762
- Noise rejection....1765
- Search results....1767

26.15.1 General search settings

SEARch:ADD....1733
SEARch:CLEar....1733
SEARch:REMove....1733

SEARch:SOURce 1733
SEARch:ONLine 1734
SEARch:ALL 1734

SEARch:ADD <SearchName>

Creates a new search definition with the specified name.

Setting parameters:
<SearchName> String with the name of the search

Example: See Section 26.3.4.1, "Searching for a pulse of a specified width", on page 1334

Usage: Setting only
Asynchronous command

SEARch:CLEar <SearchName>

Clears the search results once to start a new search.

Setting parameters:
<SearchName> Search definition

Usage: Event
Asynchronous command

Manual operation: See "Clear results" on page 483

SEARch:REMove <Key>

Deletes the specified search definition.

Setting parameters:
<Key> String with the name of the search

Usage: Setting only
Asynchronous command

SEARch:SOURce <SearchName>,<Source>
SEARch:SOURce? <SearchName>

Defines the source on which the search conditions are applied. The source can be any analog or digital channel, math or reference waveform as well as a serial bus configured for a supported protocol.

Parameters:

<Source> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | SBUS1 | SBUS2 | SBUS3 | SBUS4 | LANE1 | LANE2 | LANE3 | LANE4

Source of the search, see Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Parameters for setting and query:

<SearchName> String with the name of the search

Example: See Section 26.3.4.1, "Searching for a pulse of a specified width", on page 1334

Usage: Asynchronous command

Manual operation: See "Source" on page 465

SEARch:ONLine <SearchName>,<OnlineState>
SEARch:ONLine? <SearchName>

If enabled, a search is performed repeatedly for each new data acquisition.

Parameters:

<OnlineState> OFF | ON

*RST: OFF

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Enable" on page 465

SEARch:ALL <SearchName>

Performs a search for all results on the existing data from the selected source.

The command does *not* support serial bus sources (`SEARch:SOURce` SBUS1 | SBUS2 | SBUS3 | SBUS4)

Setting parameters:

<SearchName> Search definition

Example: See Section 26.3.4.1, "Searching for a pulse of a specified width", on page 1334

Usage: Event
Asynchronous command

Manual operation: See "Enable" on page 465

26.15.2 Basic trigger search conditions

SEARch:TRIGger:CONDitions?....1735
SEARch:TRIGger:EDGE[:STATe]....1735
SEARch:TRIGger:GLITch[:STATe]....1735
SEARch:TRIGger:INTerval[:STATe]....1735
SEARch:TRIGger:PATTern[:STATe]....1735
SEARch:TRIGger:RUNT[:STATe]....1736
SEARch:TRIGger:SETHold[:STATe]....1736
SEARch:TRIGger:SLEWrate[:STATe]....1736
SEARch:TRIGger:STATe[:STATe]....1736
SEARch:TRIGger:TIMeout[:STATe]....1736
SEARch:TRIGger:WIDTh[:STATe]....1736
SEARch:TRIGger:WINDow[:STATe]....1736
SEARch:TRIGger:LEVel[:VALue]....1736
SEARch:TRIGger:EDGE:ACOPy....1737
SEARch:TRIGger:GLITch:ACOPy....1737
SEARch:TRIGger:INTerval:ACOPy....1737
SEARch:TRIGger:PATTern:ACOPy....1737
SEARch:TRIGger:RUNT:ACOPy....1737
SEARch:TRIGger:SETHold:ACOPy....1737
SEARch:TRIGger:SLEWrate:ACOPy....1737
SEARch:TRIGger:STATe:ACOPy....1737
SEARch:TRIGger:TIMeout:ACOPy....1737
SEARch:TRIGger:WIDTh:ACOPy....1737
SEARch:TRIGger:WINDow:ACOPy....1737

SEARch:TRIGger:CONDitions? <SearchName>

Returns the trigger types selected for search.

Setting parameters:

<SearchName> String with the search name

Return values:

<TriggerTypes> Comma-separated list of active search triggers.

Example:

```
:SEARch:TRIGger:CONDitions? "Search1"
--> GLIT,RUNT
```

Usage: Query only
Asynchronous command

SEARch:TRIGger:EDGE[:STATe] <SearchName>,<State>
SEARch:TRIGger:EDGE[:STATe]? <SearchName>
SEARch:TRIGger:GLITch[:STATe] <SearchName>,<State>
SEARch:TRIGger:GLITch[:STATe]? <SearchName>
SEARch:TRIGger:INTerval[:STATe] <SearchName>,<State>
SEARch:TRIGger:INTerval[:STATe]? <SearchName>
SEARch:TRIGger:PATTern[:STATe] <SearchName>,<State>
SEARch:TRIGger:PATTern[:STATe]? <SearchName>

SEARch:TRIGger:RUNT[:STATe] <SearchName>,<State>
SEARch:TRIGger:RUNT[:STATe]? <SearchName>
SEARch:TRIGger:SETHold[:STATe] <SearchName>,<State>
SEARch:TRIGger:SETHold[:STATe]? <SearchName>
SEARch:TRIGger:SLEWrate[:STATe] <SearchName>,<State>
SEARch:TRIGger:SLEWrate[:STATe]? <SearchName>
SEARch:TRIGger:STATe[:STATe] <SearchName>,<State>
SEARch:TRIGger:STATe[:STATe]? <SearchName>
SEARch:TRIGger:TIMeout[:STATe] <SearchName>,<State>
SEARch:TRIGger:TIMeout[:STATe]? <SearchName>
SEARch:TRIGger:WIDTh[:STATe] <SearchName>,<State>
SEARch:TRIGger:WIDTh[:STATe]? <SearchName>
SEARch:TRIGger:WINDow[:STATe] <SearchName>,<State>
SEARch:TRIGger:WINDow[:STATe]? <SearchName>

Includes the search conditions for the selected trigger event type in the next search.

Parameters:
<State> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Edge, Glitch, Width, Runt, Window, Timeout, Interval, Slew rate, Setup & Hold, State, Pattern" on page 466

SEARch:TRIGger:LEVel[:VALue] <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel[:VALue]? <Key>,<SignalSource>

Sets the voltage of the trigger level that is used to determine other parameters.

Parameters:
<Value> Voltage value

Parameters for setting and query:
<SearchName> String with the name of the search

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4

Source of the search, see Section 26.4.2, "Waveform parameter", on page 1348

Usage: Asynchronous command

Manual operation: See "Level" on page 467

SEARch:TRIGger:EDGE:ACOPy <SearchName>
SEARch:TRIGger:GLITch:ACOPy <SearchName>
SEARch:TRIGger:INTerval:ACOPy <SearchName>
SEARch:TRIGger:PATTern:ACOPy <SearchName>
SEARch:TRIGger:RUNT:ACOPy <SearchName>
SEARch:TRIGger:SETHold:ACOPy <SearchName>
SEARch:TRIGger:SLEWrate:ACOPy <SearchName>
SEARch:TRIGger:STATe:ACOPy <SearchName>
SEARch:TRIGger:TIMeout:ACOPy <SearchName>
SEARch:TRIGger:WIDTh:ACOPy <SearchName>
SEARch:TRIGger:WINDow:ACOPy <SearchName>

Copies the trigger event configuration from Trigger A for the selected channel source to the search condition settings.

See Section 6.3, "Trigger types", on page 202.

Setting parameters:
<SearchName> Search definition

Usage: Event
Asynchronous command

Manual operation: See "Copy from trigger A'" on page 466

26.15.3 Edge search conditions

Trigger level setting: `SEARch:TRIGger:LEVel[:VALue]` on page 1736

SEARch:TRIGger:EDGE:SLOPe 1737

SEARch:TRIGger:EDGE:SLOPe <SearchName>,<Slope>
SEARch:TRIGger:EDGE:SLOPe? <SearchName>

Selects the edge type.

Parameters:
<Slope> POSitive | NEGative | EITHer
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Slope" on page 467

26.15.4 Glitch search conditions

Trigger level setting: `SEARch:TRIGger:LEVel[:VALue]` on page 1736

SEARch:TRIGger:GLITch:POLarity....1738
SEARch:TRIGger:GLITch:RANGe....1738
SEARch:TRIGger:GLITch:WIDTh....1738

SEARch:TRIGger:GLITch:POLarity <SearchName>,<Polarity>
SEARch:TRIGger:GLITch:POLarity? <SearchName>

Indicates the polarity of a pulse, that is the direction of the first pulse slope.

Parameters:
<Polarity> POSitive | NEGative | EITHer
See Section 26.4.4, "Polarity parameter", on page 1350.
*RST: POSitive

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Width" on page 468

SEARch:TRIGger:GLITch:RANGe <SearchName>,<RangeMode>
SEARch:TRIGger:GLITch:RANGe? <SearchName>

Selects which glitches are identified: shorter or longer than the specified width (see `SEARch:TRIGger:GLITch:WIDTh` on page 1738).

Parameters:
<RangeMode> SHORter | LONGer
*RST: SHORter

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Width" on page 468

SEARch:TRIGger:GLITch:WIDTh <SearchName>,<Width>
SEARch:TRIGger:GLITch:WIDTh? <SearchName>

Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value (see also `SEARch:TRIGger:GLITch:RANGe` on page 1738).

You need to know the expected pulse widths of the circuit to set the glitch width correctly.

Parameters:
<Width> Range: 100E-12 to 1E-3
Increment: 100E-6
*RST: 1E-9
Default unit: s

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Width" on page 468

26.15.5 Interval search conditions

Trigger level setting: `SEARch:TRIGger:LEVel[:VALue]` on page 1736

SEARch:TRIGger:INTerval:SLOPe....1739
SEARch:TRIGger:INTerval:DELTa....1739
SEARch:TRIGger:INTerval:RANGe....1740
SEARch:TRIGger:INTerval:WIDTh....1740

SEARch:TRIGger:INTerval:SLOPe <SearchName>,<Slope>
SEARch:TRIGger:INTerval:SLOPe? <SearchName>

Sets the edge for the search.

Parameters:
<Slope> POSitive | NEGative | EITHer
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Parameters for setting and query:
<SearchName> String parameter, name of the search definition

Usage: Asynchronous command

Manual operation: See "Slope, Range, Interv. width, ±Delta" on page 473

SEARch:TRIGger:INTerval:DELTa <SearchName>,<WidthDelta>
SEARch:TRIGger:INTerval:DELTa? <SearchName>

Defines a range around the "Interval width" value (see `SEARch:TRIGger:INTerval:WIDTh` on page 1740).

Parameters:
<WidthDelta> Range: 0 to 10
Increment: 100E-9
*RST: 0
Default unit: s

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Slope, Range, Interv. width, ±Delta" on page 473

SEARch:TRIGger:INTerval:RANGe <SearchName>,<RangeMode>
SEARch:TRIGger:INTerval:RANGe? <SearchName>

Selects how the range of an interval is defined based on the interval width and delta (see `SEARch:TRIGger:INTerval:WIDTh` on page 1740 and `SEARch:TRIGger:INTerval:DELTa` on page 1739).

Parameters:
<RangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers on pulse intervals inside a given range. The range is defined by "Interv. width" and "±Delta".

OUTSide
Triggers on intervals outside a given range. The range definition is the same as for "Within" range.

SHORter
Triggers on intervals shorter than the given "Interv. width".

LONGer
Triggers on intervals longer than the given "Interv. width".

*RST: OUTSide

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Slope, Range, Interv. width, ±Delta" on page 473

SEARch:TRIGger:INTerval:WIDTh <SearchName>,<Width>
SEARch:TRIGger:INTerval:WIDTh? <SearchName>

Defines the time between two pulses.

Parameters:
<Width>
Range: 100E-12 to 864
Increment: 100E-9
*RST: 5E-9
Default unit: s

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Slope, Range, Interv. width, ±Delta" on page 473

26.15.6 Runt search conditions

SEARch:TRIGger:RUNT:DELTa....1741
SEARch:TRIGger:RUNT:POLarity....1741
SEARch:TRIGger:RUNT:RANGe....1741

SEARch:TRIGger:RUNT:WIDTh 1742
SEARch:TRIGger:LEVel:RUNT:LOWer 1742
SEARch:TRIGger:LEVel:RUNT:UPPer 1742

SEARch:TRIGger:RUNT:DELTa <SearchName>,<WidthDelta>
SEARch:TRIGger:RUNT:DELTa? <SearchName>

Defines a range around the given runt width.

Parameters:

<WidthDelta>
Range: 100E-12 to 864
Increment: 100E-9
*RST: 100E-12
Default unit: s

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Runt width, ±Delta" on page 470

SEARch:TRIGger:RUNT:POLarity <SearchName>,<Polarity>
SEARch:TRIGger:RUNT:POLarity? <SearchName>

Indicates the polarity of a pulse, that is the direction of the first pulse slope.

Parameters:

<Polarity> POSitive | NEGative | EITHer
See Section 26.4.4, "Polarity parameter", on page 1350.
*RST: POSitive

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Runt width, ±Delta" on page 470

SEARch:TRIGger:RUNT:RANGe <SearchName>,<Mode>
SEARch:TRIGger:RUNT:RANGe? <SearchName>

Selects how the time limit of the runt pulse is defined based on the runt width and delta (see `SEARch:TRIGger:RUNT:WIDTh` on page 1742 and `SEARch:TRIGger:RUNT:DELTa` on page 1741).

Parameters:

<Mode> ANY | LONGer | SHORter | WITHin | OUTSide

ANY
Triggers on all runts fulfilling the level condition, without time limitation.

LONGer
Triggers on runts longer than the given "Runt width".

SHORter
Triggers on runts shorter than the given "Runt width".

WITHin
Triggers if the runt length is inside a given time range. The range is defined by "Runt width" and "±Delta".

OUTSide
Triggers if the runt length is outside a given time range. The range definition is the same as for "Within" range.

*RST: ANY

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Runt width, ±Delta" on page 470

SEARch:TRIGger:RUNT:WIDTh <SearchName>,<Width>
SEARch:TRIGger:RUNT:WIDTh? <SearchName>

For the ranges "Shorter" and "Longer", the runt width defines the maximum and minimum pulse width, respectively.

For the ranges "Within" and "Outside", the runt width defines the center of a range which is defined by "±Delta".

The range is defined using `SEARch:TRIGger:RUNT:RANGe` on page 1741.

Parameters:
<Width>
Range: 100E-12 to 864
Increment: 100E-9
*RST: 5E-9
Default unit: s

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Runt width, ±Delta" on page 470

SEARch:TRIGger:LEVel:RUNT:LOWer <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel:RUNT:LOWer? <Key>,<SignalSource>
SEARch:TRIGger:LEVel:RUNT:UPPer <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel:RUNT:UPPer? <Key>,<SignalSource>

Set the lower and upper voltage threshold, respectively.

Parameters:
<Value> Voltage value

Parameters for setting and query:

<SearchName> String with the name of the search

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | LANE1 | LANE2 | LANE3 | LANE4

Source of the search, see Section 26.4.2, "Waveform parameter", on page 1348

Usage: Asynchronous command

Manual operation: See "Upper level, Lower level" on page 470

26.15.7 Slew rate search conditions

SEARch:TRIGger:SLEWrate:DELTa....1743
SEARch:TRIGger:SLEWrate:RANGe....1744
SEARch:TRIGger:SLEWrate:SLOPe....1744
SEARch:TRIGger:SLEWrate:TIME....1744
SEARch:TRIGger:LEVel:TRANsition:LOWer....1745
SEARch:TRIGger:LEVel:TRANsition:UPPer....1745

SEARch:TRIGger:SLEWrate:DELTa <SearchName>,<TimeDelta>
SEARch:TRIGger:SLEWrate:DELTa? <SearchName>

Defines a time range around the given slew rate.

Parameters:

<TimeDelta>

Range:	0 to 10
Increment:	100E-9
*RST:	0
Default unit:	s

Parameters for setting and query:

<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Slew rate, ±Delta" on page 474

SEARch:TRIGger:SLEWrate:RANGe <SearchName>,<RangeMode>
SEARch:TRIGger:SLEWrate:RANGe? <SearchName>

Selects how the time limit for the slew rate is defined. The time measurement starts when the signal crosses the first trigger level - the upper or lower level depending on the selected slope - and stops when the signal crosses the second level.

Parameters:

<RangeMode> INSRange | OUTRange | LTHan | GTHan

INSRange
Triggers on slew rates inside a given time range. The range is defined by "Slew rate" and "±Delta".

OUTRange
Triggers on slew rates outside a given time range. The range definition is the same as for "Within" range.

LTHan
Triggers on slew rates shorter than the given "Slew rate" limit.

GTHan
Triggers on slew rates longer than the given "Slew rate" limit.

*RST: GTHan

Parameters for setting and query:

<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Slew rate, ±Delta" on page 474

SEARch:TRIGger:SLEWrate:SLOPe <SearchName>,<Slope>
SEARch:TRIGger:SLEWrate:SLOPe? <SearchName>

Selects the edge type.

Parameters:

<Slope> POSitive | NEGative | EITHer

See Section 26.4.3, "Slope parameter", on page 1350.

*RST: POSitive

Parameters for setting and query:

<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Slew rate, ±Delta" on page 474

SEARch:TRIGger:SLEWrate:TIME <SearchName>,<Time>
SEARch:TRIGger:SLEWrate:TIME? <SearchName>

For the ranges "Within" and "Outside", the slew rate defines the center of a range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", the slew rate defines the maximum and minimum slew rate limits, respectively.

The range is defined using `SEARch:TRIGger:SLEWrate:RANGe`.

Parameters:

<Time>
Range: 100E-12 to 864
Increment: 100E-9
*RST: 100E-12
Default unit: s

Parameters for setting and query:

<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Slew rate, ±Delta" on page 474

SEARch:TRIGger:LEVel:TRANsition:LOWer <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel:TRANsition:LOWer? <Key>,<SignalSource>
SEARch:TRIGger:LEVel:TRANsition:UPPer <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel:TRANsition:UPPer? <Key>,<SignalSource>

Set the lower and upper voltage thresholds, respectively. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Parameters:

<Value> Voltage value

Parameters for setting and query:

<SearchName> String with the name of the search

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | LANE1 | LANE2 | LANE3 | LANE4

Source of the search, see Section 26.4.2, "Waveform parameter", on page 1348

Usage: Asynchronous command

Manual operation: See "Upper level, Lower level" on page 474

26.15.8 Timeout search conditions

Trigger level setting: `SEARch:TRIGger:LEVel[:VALue]` on page 1736

SEARch:TRIGger:TIMeout:RANGe....1746
SEARch:TRIGger:TIMeout:TIME....1746

SEARch:TRIGger:TIMeout:RANGe <SearchName>,<TimeoutMode>
SEARch:TRIGger:TIMeout:RANGe? <SearchName>

Selects the relation of the signal level to the trigger level:

Parameters:

<TimeoutMode> HIGH | LOW | EITHer

HIGH
The signal level stays above the trigger level.

LOW
The signal level stays below the trigger level.

EITHer
The signal level stays above or below the trigger level.

*RST: HIGH

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Range, Time" on page 472

SEARch:TRIGger:TIMeout:TIME <SearchName>,<Time>
SEARch:TRIGger:TIMeout:TIME? <SearchName>

Defines the time limit for the timeout at which the instrument triggers.

Parameters:

<Time> Range: 100E-12 to 864
Increment: 100E-9
*RST: 100E-9
Default unit: s

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Range, Time" on page 472

26.15.9 Width search conditions

Trigger level setting: `SEARch:TRIGger:LEVel[:VALue]` on page 1736

SEARch:TRIGger:WIDTh:DELTa 1747
SEARch:TRIGger:WIDTh:POLarity 1747
SEARch:TRIGger:WIDTh:RANGe 1747
SEARch:TRIGger:WIDTh:WIDTh 1748

SEARch:TRIGger:WIDTh:DELTa <SearchName>,<WidthDelta>
SEARch:TRIGger:WIDTh:DELTa? <SearchName>

Defines a range around the given width value (see also `SEARch:TRIGger:WIDTh:WIDTh` on page 1748).

Parameters:

<WidthDelta>
Range: 0 to 432
Increment: 500E-12
*RST: 0
Default unit: s

Parameters for setting and query:

<SearchName> Search definition

Example: See Section 26.3.4.1, "Searching for a pulse of a specified width", on page 1334

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Width, ±Delta" on page 469

SEARch:TRIGger:WIDTh:POLarity <SearchName>,<Polarity>
SEARch:TRIGger:WIDTh:POLarity? <SearchName>

Indicates the polarity of a pulse, that is the direction of the first pulse slope.

Parameters:

<Polarity>
POSitive | NEGative | EITHer
See Section 26.4.4, "Polarity parameter", on page 1350.
*RST: POSitive

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Width, ±Delta" on page 469

SEARch:TRIGger:WIDTh:RANGe <SearchName>,<RangeMode>
SEARch:TRIGger:WIDTh:RANGe? <SearchName>

Selects how the range of a pulse width is defined in relation to the width and delta (see `SEARch:TRIGger:WIDTh:WIDTh` on page 1748 and `SEARch:TRIGger:WIDTh:DELTa` on page 1747).

Parameters:

<RangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers on pulses inside a given range. The range of the pulse width is defined by "Width" and "±Delta".

OUTSide
Triggers on pulses outside a given range. The range definition is the same as for "Within" range.

SHORter
Triggers on pulses shorter than the given "Width".

LONGer
Triggers on pulses longer than the given "Width".

*RST: WITHin

Parameters for setting and query:
<SearchName> Search definition

Example: See Section 26.3.4.1, "Searching for a pulse of a specified width", on page 1334

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Width, ±Delta" on page 469

SEARch:TRIGger:WIDTh:WIDTh <SearchName>,<Width>
SEARch:TRIGger:WIDTh:WIDTh? <SearchName>

For the ranges "Within" and "Outside", the width defines the center of a range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", the width defines the maximum and minimum pulse width, respectively.

The range is defined using `SEARch:TRIGger:WIDTh:RANGe`.

Parameters:
<Width>
Range: 100E-12 to 864
Increment: 100E-9
*RST: 5E-9
Default unit: s

Parameters for setting and query:
<SearchName> Search definition

Example: See Section 26.3.4.1, "Searching for a pulse of a specified width", on page 1334

Usage: Asynchronous command

Manual operation: See "Polarity, Range, Width, ±Delta" on page 469

26.15.10 Window search conditions

SEARch:TRIGger:WINDow:DELTa....1749
SEARch:TRIGger:WINDow:RANGe....1749
SEARch:TRIGger:WINDow:TIMerange....1750
SEARch:TRIGger:WINDow:WIDTh....1750
SEARch:TRIGger:LEVel:WINDow:LOWer....1751
SEARch:TRIGger:LEVel:WINDow:UPPer....1751

SEARch:TRIGger:WINDow:DELTa <SearchName>,<WidthDelta>
SEARch:TRIGger:WINDow:DELTa? <SearchName>

Defines a range around the "Width" value (see `SEARch:TRIGger:WINDow:WIDTh` on page 1750).

Parameters:

<WidthDelta>
Range: 0 to 432
Increment: 500E-12
*RST: 0
Default unit: s

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Time condition, Width, ±Delta" on page 471

SEARch:TRIGger:WINDow:RANGe <SearchName>,<RangeMode>
SEARch:TRIGger:WINDow:RANGe? <SearchName>

Selects how the signal run is compared with the window.

Parameters:

<RangeMode> ENTer | EXIT | WITHin | OUTSide

ENTer
Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.

EXIT
Triggers when the signal leaves the window.

WITHin
Triggers if the signal stays between the upper and lower level for a specified time. The time is defined in various ways by the `SEARch:TRIGger:WINDow:TIMerange` command.

OUTSide
Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is also defined by the `SEARch:TRIGger:WINDow:TIMerange` command.

*RST: ENTer

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Vertical condition" on page 471

SEARch:TRIGger:WINDow:TIMerange <SearchName>,<TimeRangeMode>
SEARch:TRIGger:WINDow:TIMerange? <SearchName>

Selects how the time limit of the window is defined. Time conditioning is available for the vertical conditions "WITHin" and "OUTSide" (see `SEARch:TRIGger:WINDow:RANGe` on page 1749).

Parameters:
<TimeRangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers if the signal stays inside or outside the vertical window limits at least for the time *Width - Delta* and for *Width + Delta* at the most.

OUTSide
"Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than *Width - Delta* or longer than *Width + Delta*.

SHORter
Triggers if the signal crosses vertical limits before the specified "Width" time is reached.

LONGer
Triggers if the signal crosses vertical limits before the specified "Width" time is reached.

*RST: WITHin

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Time condition, Width, ±Delta" on page 471

SEARch:TRIGger:WINDow:WIDTh <SearchName>,<Width>
SEARch:TRIGger:WINDow:WIDTh? <SearchName>

For the ranges "Within" and "Outside", the width defines the center of a time range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", it defines the maximum and minimum time lapse, respectively.

The range is defined using `SEARch:TRIGger:WINDow:RANGe`.

Parameters:

<Width>
Range: 100E-12 to 864
Increment: 100E-9
*RST: 5E-9
Default unit: s

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Time condition, Width, ±Delta" on page 471

SEARch:TRIGger:LEVel:WINDow:LOWer <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel:WINDow:LOWer? <Key>,<SignalSource>
SEARch:TRIGger:LEVel:WINDow:UPPer <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel:WINDow:UPPer? <Key>,<SignalSource>

Set the lower and upper voltage limits for the window.

Parameters:

<Value> Voltage value

Parameters for setting and query:

<SearchName> String with the name of the search

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | LANE1 | LANE2 | LANE3 | LANE4

Source of the search, see Section 26.4.2, "Waveform parameter", on page 1348

Usage: Asynchronous command

Manual operation: See "Upper level, Lower level" on page 471

26.15.11 Data2clock search conditions

Data level setting: `SEARch:TRIGger:LEVel[:VALue]` on page 1736

SEARch:TRIGger:SETHold:CEDGe....1752
SEARch:TRIGger:SETHold:CLEVel....1752
SEARch:TRIGger:SETHold:CSOurce....1752
SEARch:TRIGger:SETHold:HTIMe....1753
SEARch:TRIGger:SETHold:STIMe....1753

SEARch:TRIGger:SETHold:CEDGe <SearchName>,<ClockEdge>
SEARch:TRIGger:SETHold:CEDGe? <SearchName>

Sets the edge of the clock signal to define the time reference point for the setup and hold time.

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
See Section 26.4.3, "Slope parameter", on page 1350.
*RST: POSitive

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "Clock source, Clock edge, Clock level" on page 475

SEARch:TRIGger:SETHold:CLEVel <SearchName>,<ClockLevel>
SEARch:TRIGger:SETHold:CLEVel? <SearchName>

Sets the voltage level for the clock signal. Both this command and `SEARch:TRIGger:SETHold:CEDGe` define the starting point for calculation of the setup and hold time.

Parameters:
<ClockLevel> Range: -10 to 10
Increment: 1E-3
*RST: 0
Default unit: V

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Clock source, Clock edge, Clock level" on page 475

SEARch:TRIGger:SETHold:CSOurce <SearchName>,<ClockSource>
SEARch:TRIGger:SETHold:CSOurce? <SearchName>

Selects the waveform used for the clock signal.

Parameters:
<ClockSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
Source of the clock signal, see Section 26.4.2, "Waveform parameter", on page 1348
*RST: C1W1

Parameters for setting and query:
<SearchName> Search definition name

Usage: Asynchronous command

Manual operation: See "Clock source, Clock edge, Clock level" on page 475

SEARch:TRIGger:SETHold:HTIMe <SearchName>,<HoldTime>
SEARch:TRIGger:SETHold:HTIMe? <SearchName>

Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.

The hold time can be negative. In this case, the setup time is always positive. The setup/hold interval starts before the clock edge (setup time) and ends before the clock edge (hold time). If you change the negative hold time, the setup time is adjusted by the intrument.

Parameters:

<HoldTime>
Range: -99.999E-9 to 0.1
Increment: 1E-9
*RST: 0
Default unit: s

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Setup time, Hold time" on page 475

SEARch:TRIGger:SETHold:STIMe <SearchName>,<SetupTime>
SEARch:TRIGger:SETHold:STIMe? <SearchName>

Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

The setup time can be negative. In this case, the hold time is always positive. The setup/hold interval starts after the clock edge (setup time) and ends after the clock edge (hold time). If you change the negative setup time, the hold time is adjusted by the intrument.

Parameters:

<SetupTime>
Range: -99.999E-9 to 0.1
Increment: 1E-9
*RST: 0
Default unit: s

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Setup time, Hold time" on page 475

26.15.12 Pattern search conditions

SEARch:TRIGger:PATTern:A[:ENABle] 1754
SEARch:TRIGger:PATTern:B[:ENABle] 1754
SEARch:TRIGger:PATTern:C[:ENABle] 1754
SEARch:TRIGger:PATTern:D[:ENABle] 1754
SEARch:TRIGger:PATTern:A:LOGic 1754
SEARch:TRIGger:PATTern:B:LOGic 1754
SEARch:TRIGger:PATTern:C:LOGic 1755
SEARch:TRIGger:PATTern:D:LOGic 1755
SEARch:TRIGger:PATTern:AB:LOGic 1755
SEARch:TRIGger:PATTern:CD:LOGic 1755
SEARch:TRIGger:PATTern:ABCD:LOGic 1755
SEARch:TRIGger:PATTern:MODE 1756
SEARch:TRIGger:PATTern:TIMeout:MODE 1756
SEARch:TRIGger:PATTern:TIMeout[:TIME] 1757
SEARch:TRIGger:PATTern:WIDTh:RANGe 1757
SEARch:TRIGger:PATTern:WIDTh[:WIDTh] 1757
SEARch:TRIGger:PATTern:WIDTh:DELTa 1758

SEARch:TRIGger:PATTern:A[:ENABle] <Searchname>,<State>
SEARch:TRIGger:PATTern:A[:ENABle]? <Searchname>
SEARch:TRIGger:PATTern:B[:ENABle] <Searchname>,<State>
SEARch:TRIGger:PATTern:B[:ENABle]? <Searchname>
SEARch:TRIGger:PATTern:C[:ENABle] <Searchname>,<State>
SEARch:TRIGger:PATTern:C[:ENABle]? <Searchname>
SEARch:TRIGger:PATTern:D[:ENABle] <Searchname>,<State>
SEARch:TRIGger:PATTern:D[:ENABle]? <Searchname>

Enables the channel to be considered in the pattern search. The trigger source channel is selected by default.

- A[:ENABle]: CH1
- B[:ENABle]: CH2
- C[:ENABle]: CH3
- D[:ENABle]: CH4

Digital channels are not available.

Parameters:
<State> OFF | ON

Parameters for setting and query:
<Searchname> String with name of the search

Usage: Asynchronous command

SEARch:TRIGger:PATTern:A:LOGic <Searchname>,<Operator>
SEARch:TRIGger:PATTern:A:LOGic? <Searchname>
SEARch:TRIGger:PATTern:B:LOGic <Searchname>,<Operator>
SEARch:TRIGger:PATTern:B:LOGic? <Searchname>

SEARch:TRIGger:PATTern:C:LOGic <Searchname>,<Operator>
SEARch:TRIGger:PATTern:C:LOGic? <Searchname>
SEARch:TRIGger:PATTern:D:LOGic <Searchname>,<Operator>
SEARch:TRIGger:PATTern:D:LOGic? <Searchname>

Defines the logic for the indicated channel:

- A: CH1
- B: CH2
- C: CH3
- D: CH4

Parameters:

<Operator> DIRect | HIGH | NOT | LOW

DIRect
Input value remains unchanged

NOT
Input value is inverted

Parameters for setting and query:

<Searchname> String with the name of the search

Usage: Asynchronous command

SEARch:TRIGger:PATTern:AB:LOGic <Searchname>,<Operator>
SEARch:TRIGger:PATTern:AB:LOGic? <Searchname>
SEARch:TRIGger:PATTern:CD:LOGic <Searchname>,<Operator>
SEARch:TRIGger:PATTern:CD:LOGic? <Searchname>
SEARch:TRIGger:PATTern:ABCD:LOGic <Searchname>,<Operator>
SEARch:TRIGger:PATTern:ABCD:LOGic? <Searchname>

Defines the logical combination of the indicated channels after evaluating the previous logical operations:

- AB: CH1 and CH2
- CD: CH3 and CH4
- ABCD: result of AB and CD

Parameters:

<Operator> AND | NAND | OR | NOR

AND: logical AND, conjunctive combination
NAND:logical NOT AND
OR:logical OR, disjunctive combination
NOR: logical NOT OR

Parameters for setting and query:

<Searchname> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Pattern" on page 477

SEARch:TRIGger:PATTern:MODE <SearchName>,<Mode>
SEARch:TRIGger:PATTern:MODE? <SearchName>

Adds additional time limitation to the pattern definition.

Parameters:

<Mode> OFF | TIMeout | WIDTh

OFF
No time limitation. The event is found if the pattern condition is fulfilled.

TIMeout
Defines how long the result of the pattern condition stays high or low. The duration of the timeout is defined using `SEARch:TRIGger:PATTern:TIMeout[:TIME]` The result state is defined using `SEARch:TRIGger:PATTern:TIMeout:MODE`.

WIDTh
Defines a time range for keeping up the true result of the pattern condition. The range is defined using `SEARch:TRIGger:PATTern:WIDTh:RANGe`.

*RST: OFF

Parameters for setting and query:

<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Timing condition: Mode, Range, Time, Width, ±Delta" on page 477

SEARch:TRIGger:PATTern:TIMeout:MODE <SearchName>,<TimeoutMode>
SEARch:TRIGger:PATTern:TIMeout:MODE? <SearchName>

Defines the condition for the timeout.

Parameters:

<TimeoutMode> HIGH | LOW | EITHer

EITHer
High or low, the pattern remains unchanged for the given time.

*RST: HIGH

Parameters for setting and query:

<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Timing condition: Mode, Range, Time, Width, ±Delta" on page 477

SEARch:TRIGger:PATTern:TIMeout[:TIME] <SearchName>,<Time>
SEARch:TRIGger:PATTern:TIMeout[:TIME]? <SearchName>

Defines how long the result of the pattern condition must keep the given state.

Parameters:
<Time> Range: 100E-12 to 864
Increment: 100E-9
*RST: 100E-9
Default unit: s

Parameters for setting and query:
<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Timing condition: Mode, Range, Time, Width, ±Delta" on page 477

SEARch:TRIGger:PATTern:WIDTh:RANGe <SearchName>,<WidthRangeMode>
SEARch:TRIGger:PATTern:WIDTh:RANGe? <SearchName>

Defines the time range of a pulse width for keeping up the true result of the pattern condition. The width and delta are specified using `SEARch:TRIGger:PATTern:WIDTh[:WIDTh]` and `SEARch:TRIGger:PATTern:WIDTh:DELTa`.

Parameters:
<WidthRangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin | OUTSide
Triggers on pulses inside or outside a given range. The range is defined by the width ±delta.

SHORter | LONGer
Triggers on pulses shorter or longer than the given width.

*RST: WITHin

Parameters for setting and query:
<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Timing condition: Mode, Range, Time, Width, ±Delta" on page 477

SEARch:TRIGger:PATTern:WIDTh[:WIDTh] <SearchName>,<Width>
SEARch:TRIGger:PATTern:WIDTh[:WIDTh]? <SearchName>

For the ranges WITHin and OUTSide, the width defines the center of a range that is defined by the limits ±delta.

For the ranges SHORter and LONGer, the width defines the maximum and minimum pulse width, respectively.

To set the range mode, use SEARch:TRIGger:PATTern:WIDTh:RANGe. To set the delta value, use SEARch:TRIGger:PATTern:WIDTh:DELTa.

Parameters:

<Width>
Range: 100E-12 to 864
Increment: 100E-9
*RST: 5E-9
Default unit: s

Parameters for setting and query:

<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Timing condition: Mode, Range, Time, Width, ±Delta" on page 477

SEARch:TRIGger:PATTern:WIDTh:DELTa <SearchName>,<WidthDelta>
SEARch:TRIGger:PATTern:WIDTh:DELTa? <SearchName>

Defines a range around the width value specified using SEARch:TRIGger:PATTern:WIDTh[:WIDTh].

Parameters:

<WidthDelta>
Range: 0 to 432
Increment: 500E-12
*RST: 0
Default unit: s

Parameters for setting and query:

<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Timing condition: Mode, Range, Time, Width, ±Delta" on page 477

26.15.13 State search conditions

SEARch:TRIGger:STATe:CSOurce ... 1759
SEARch:TRIGger:STATe:CEDGe ... 1759
SEARch:TRIGger:STATe:CLEVel ... 1759
SEARch:TRIGger:STATe:A[:ENABle] ... 1760
SEARch:TRIGger:STATe:B[:ENABle] ... 1760
SEARch:TRIGger:STATe:C[:ENABle] ... 1760
SEARch:TRIGger:STATe:D[:ENABle] ... 1760
SEARch:TRIGger:STATe:A:LOGic ... 1760
SEARch:TRIGger:STATe:B:LOGic ... 1760
SEARch:TRIGger:STATe:C:LOGic ... 1760
SEARch:TRIGger:STATe:D:LOGic ... 1760

SEARch:TRIGger:STATe:AB:LOGic 1761
SEARch:TRIGger:STATe:CD:LOGic 1761
SEARch:TRIGger:STATe:ABCD:LOGic 1761

SEARch:TRIGger:STATe:CSOurce <SearchName>,<Source>
SEARch:TRIGger:STATe:CSOurce? <SearchName>

Sets the source of the clock signal.

Parameters:
<Source> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Parameters for setting and query:
<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Clock source, Clock edge" on page 476

SEARch:TRIGger:STATe:CEDGe <SearchName>,<ClockEdge>
SEARch:TRIGger:STATe:CEDGe? <SearchName>

Sets the trigger edge of the clock signal.

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
*RST: POSitive

Parameters for setting and query:
<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Clock source, Clock edge" on page 476

SEARch:TRIGger:STATe:CLEVel <SearchName>,<ClockLevel>
SEARch:TRIGger:STATe:CLEVel? <SearchName>

Sets the trigger level of the clock signal.

The command has the same effect as with `SEARch:TRIGger:LEVel[:VALue]`.

Parameters:
<ClockLevel> Range: -10 to 10
Increment: 1E-3
*RST: 0
Default unit: V

Parameters for setting and query:
<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Clock source, Clock edge" on page 476

SEARch:TRIGger:STATe:A[:ENABle] <Searchname>,<State>
SEARch:TRIGger:STATe:A[:ENABle]? <Searchname>
SEARch:TRIGger:STATe:B[:ENABle] <Searchname>,<State>
SEARch:TRIGger:STATe:B[:ENABle]? <Searchname>
SEARch:TRIGger:STATe:C[:ENABle] <Searchname>,<State>
SEARch:TRIGger:STATe:C[:ENABle]? <Searchname>
SEARch:TRIGger:STATe:D[:ENABle] <Searchname>,<State>
SEARch:TRIGger:STATe:D[:ENABle]? <Searchname>

Enables the channel to be considered in the state search. You can enable all channel signals except for the trigger source.

- A[:ENABle]: CH1
- B[:ENABle]: CH2
- C[:ENABle]: CH3
- D[:ENABle]: CH4

Digital channels are not available.

Parameters:
<State> OFF | ON

Parameters for setting and query:
<Searchname> String with the name of the search

Usage: Asynchronous command

SEARch:TRIGger:STATe:A:LOGic <Searchname>,<Operator>
SEARch:TRIGger:STATe:A:LOGic? <Searchname>
SEARch:TRIGger:STATe:B:LOGic <Searchname>,<Operator>
SEARch:TRIGger:STATe:B:LOGic? <Searchname>
SEARch:TRIGger:STATe:C:LOGic <Searchname>,<Operator>
SEARch:TRIGger:STATe:C:LOGic? <Searchname>
SEARch:TRIGger:STATe:D:LOGic <Searchname>,<Operator>
SEARch:TRIGger:STATe:D:LOGic? <Searchname>

Defines the logic for the indicated channel:

- A: CH1
- B: CH2
- C: CH3
- D: CH4

Parameters:
<Operator> DIRect | HIGH | NOT | LOW

DIRect
Input value remains unchanged

NOT
Input value is inverted

Parameters for setting and query:
<Searchname> String with the name of the search

Usage: Asynchronous command

SEARch:TRIGger:STATe:AB:LOGic <Searchname>,<Operator>
SEARch:TRIGger:STATe:AB:LOGic? <Searchname>
SEARch:TRIGger:STATe:CD:LOGic <Searchname>,<Operator>
SEARch:TRIGger:STATe:CD:LOGic? <Searchname>
SEARch:TRIGger:STATe:ABCD:LOGic <Searchname>,<Operator>
SEARch:TRIGger:STATe:ABCD:LOGic? <Searchname>

Defines the logical combination of the indicated channels after evaluating the previous logical operations:

- AB: CH1 and CH2
- CD: CH3 and CH4
- ABCD: result of AB and CD

Parameters:
<Operator> AND | NAND | OR | NOR

AND: logical AND, conjunctive combination
NAND:logical NOT AND
OR:logical OR, disjunctive combination
NOR: logical NOT OR

Parameters for setting and query:
<Searchname> String with the name of the search

Usage: Asynchronous command

Manual operation: See "State pattern" on page 476

26.15.14 Search on spectrum

CURSor<cu>:PEXCursion <Value>

Defines the minimum level by which the waveform must rise or fall so that it will be identified as a maximum or a minimum by the search functions.

Suffix:
<cu> The suffix is irrelevant

Parameters:
<Value>
Range: 0 to 100
Increment: 1
*RST: 5
Default unit: dB

Usage: Asynchronous command

Manual operation: See "Peak excursion" on page 332

CURSor<cu>:THReshold <Value>

Defines an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

Suffix:
<cu> The suffix is irrelevant.

Parameters:
<Value> Threshold in dBm

Usage: Asynchronous command

Firmware/software: Version 2.70

Manual operation: See "Threshold" on page 331

26.15.15 Search gate settings

SEARch:GATE[:STATe] 1762
SEARch:GATE:MODE 1762
SEARch:GATE:SHOW 1763
SEARch:GATE:ABSolute:STARt 1763
SEARch:GATE:ABSolute:STOP 1763
SEARch:GATE:RELative:STARt 1764
SEARch:GATE:RELative:STOP 1764
SEARch:GATE:ZCOupling 1764
SEARch:GATE:ZDIagram 1765

SEARch:GATE[:STATe] <SearchName>,<State>
SEARch:GATE[:STATe]? <SearchName>

Performs the search only on the defined gate area of the source waveform.

Parameters:
<State> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Use gate" on page 480

SEARch:GATE:MODE <SearchName>,<Mode>
SEARch:GATE:MODE? <SearchName>

Defines whether the gate settings are configured using absolute or relative values.

Parameters:
<Mode> ABS | REL
*RST: ABS

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Gate description" on page 480

SEARch:GATE:SHOW <SearchName>,<DisplayState>
SEARch:GATE:SHOW? <SearchName>

If enabled, the gate area is indicated in the source diagram.

Parameters:
<DisplayState> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Display state" on page 480

SEARch:GATE:ABSolute:STARt <SearchName>,<Start>
SEARch:GATE:ABSolute:STARt? <SearchName>

Defines the starting value for the gate.

Parameters:
<Start> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "(Relative) Start" on page 392

SEARch:GATE:ABSolute:STOP <SearchName>,<Stop>
SEARch:GATE:ABSolute:STOP? <SearchName>

Defines the end value for the gate.

Parameters:
<Stop> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "(Relative) Stop" on page 392

SEARch:GATE:RELative:STARt <SearchName>,<RelativeStart>
SEARch:GATE:RELative:STARt? <SearchName>

Defines the starting value for the gate.

Parameters:
<RelativeStart> Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "(Relative) Start" on page 392

SEARch:GATE:RELative:STOP <SearchName>,<RelativeStop>
SEARch:GATE:RELative:STOP? <SearchName>

Defines the end value for the gate.

Parameters:
<RelativeStop> Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "(Relative) Stop" on page 392

SEARch:GATE:ZCOupling <SearchName>,<ZoomCoupling>
SEARch:GATE:ZCOupling? <SearchName>

If enabled, the gate area is set to the limits of a zoom area.

The zoom diagramm is selected using `SEARch:GATE:ZDIagram`.

Parameters:
<ZoomCoupling> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> String with the name of the search

Usage: Asynchronous command

Manual operation: See "Zoom" on page 392

SEARch:GATE:ZDIagram <SearchName>, <DiagramName>, <ZoomName>
SEARch:GATE:ZDIagram? <SearchName>

Selects the zoom to which the gate area is set if `SEARch:GATE:ZCOupling` is set to "ON".

Parameters:
<ZoomDiagram> String with the name of the diagram, where the zoom is defined

Parameters for setting and query:
<SearchName> String with the name of the search

Example: Prerequisite: Search1 and Zoom2 are available.

```
SEARch:GATE:ZCOupling 'Search1',ON
SEARch:GATE:ZDIagram 'Search1','Diagram1','Zoom2'
SEARch:GATE:ZDIagram? 'Search1'
<-- Diagram1;Zoom2
SEARch:GATE:STATe 'Search1', ON
SEARch:GATE:SHOW 'Search2', ON
```

Enables the zoom coupling to define the gate,and selects Zoom2 as gate area. Zoom2 is based on Diagram1. Then the gate is activated and displayed.

Usage: Asynchronous command

Manual operation: See "Zoom" on page 392

26.15.16 Noise rejection

SEARch:TRIGger:LEVel:NOISe:ABSolute 1765
SEARch:TRIGger:LEVel:NOISe:MODE 1766
SEARch:TRIGger:LEVel:NOISe:RELative 1766
SEARch:TRIGger:LEVel:NOISe[:STATe] 1767

SEARch:TRIGger:LEVel:NOISe:ABSolute <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel:NOISe:ABSolute? <Key>,<SignalSource>

Defines the trigger hysteresis, a range in absolute values around the trigger level. If the signal jitters inside this range and crosses the trigger level, no trigger event is detected.

Parameters:
<Value> Hysteresis value

Parameters for setting and query:
<SearchName> String with the name of the search

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4

Source of the search, see Section 26.4.2, "Waveform parameter", on page 1348

Usage: Asynchronous command

SEARch:TRIGger:LEVel:NOISe:MODE <SearchName>, <SignalSource>, <Mode>
SEARch:TRIGger:LEVel:NOISe:MODE? <Key>,<SignalSource>

Defines whether absolute values or relative values to the vertical scaling are used as a hysteresis for noise rejection.

Parameters:

<Mode> ABS | REL

Parameters for setting and query:

<SearchName> String with the name of the search

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4

Source of the trigger waveform, see Section 26.4.2, "Waveform parameter", on page 1348

Usage: Asynchronous command

SEARch:TRIGger:LEVel:NOISe:RELative <SearchName>, <SignalSource>, <Value>
SEARch:TRIGger:LEVel:NOISe:RELative? <Key>,<SignalSource>

Defines a range around the trigger level in relative values. If the signal jitters inside this range and crosses the trigger level, no trigger event is detected.

Parameters:

<Value> Hysteresis value in %

Parameters for setting and query:

<SearchName> String with the name of the search

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4

Source of the search, see Section 26.4.2, "Waveform parameter", on page 1348

Usage: Asynchronous command

SEARch:TRIGger:LEVel:NOISe[:STATe] <SearchName>, <SignalSource>, <State>
SEARch:TRIGger:LEVel:NOISe[:STATe]? <Key>,<SignalSource>

If enabled, the noise reject settings for the waveform are considered for the search.

Parameters:
<State> OFF | ON

Parameters for setting and query:
<SearchName> String with the name of the search

<SignalSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4

Source of the search, see Section 26.4.2, "Waveform parameter", on page 1348

Usage: Asynchronous command

26.15.17 Search results

SEARch:RESDiagram:HORZ:ABSolute:POSition 1768
SEARch:RESDiagram:HORZ:ABSolute:SPAN 1768
SEARch:RESDiagram:HORZ:MODE 1768
SEARch:RESDiagram:HORZ:RELative:POSition 1769
SEARch:RESDiagram:HORZ:RELative:SPAN 1769
SEARch:RESDiagram:SHOW 1769
SEARch:RESDiagram:VERT:ABSolute:POSition 1770
SEARch:RESDiagram:VERT:ABSolute:SPAN 1770
SEARch:RESDiagram:VERT:MODE 1770
SEARch:RESDiagram:VERT:RELative:POSition 1770
SEARch:RESDiagram:VERT:RELative:SPAN 1771
SEARch:RESult:LIMit 1771
SEARch:RESult:SHOW 1772

SEARch:RESult:SORT:ASCending 1772
SEARch:RESult:SORT[:MODE] 1772
SEARch:RESult[:ALL]? 1773

SEARch:RESDiagram:HORZ:ABSolute:POSition <SearchName>,<Position>
SEARch:RESDiagram:HORZ:ABSolute:POSition? <SearchName>

Defines the x-value of the centerpoint of the zoom area.

Parameters:
<Position> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "X position" on page 270

SEARch:RESDiagram:HORZ:ABSolute:SPAN <SearchName>,<Span>
SEARch:RESDiagram:HORZ:ABSolute:SPAN? <SearchName>

Defines the width of the zoom area.

Parameters:
<Span> Range: 0 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "X range" on page 271

SEARch:RESDiagram:HORZ:MODE <SearchName>,<Mode>
SEARch:RESDiagram:HORZ:MODE? <SearchName>

Defines whether absolute or relative values are used to specify the x-axis values.

Parameters:
<Mode> ABS | REL
*RST: ABS

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "X mode" on page 271

SEARch:RESDiagram:HORZ:RELative:POSition <SearchName>,<RelPosi>
SEARch:RESDiagram:HORZ:RELative:POSition? <SearchName>

Defines the x-value of the centerpoint of the zoom area.

Parameters:
<RelPosi> Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "X position" on page 270

SEARch:RESDiagram:HORZ:RELative:SPAN <SearchName>,<RelativeSpan>
SEARch:RESDiagram:HORZ:RELative:SPAN? <SearchName>

Defines the width of the zoom area.

Parameters:
<RelativeSpan> Range: 1E-15 to 100
Increment: 0.1
*RST: 1
Default unit: %

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "X range" on page 271

SEARch:RESDiagram:SHOW <SearchName>,<ShwSearchWind>
SEARch:RESDiagram:SHOW? <SearchName>

If enabled, a zoom window is displayed for the currently selected search result. The zoom area is indicated in the diagram that displays the source waveform of the search.

Parameters:
<ShwSearchWind> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Show result zoom" on page 483

SEARch:RESDiagram:VERT:ABSolute:POSition <SearchName>,<Position>
SEARch:RESDiagram:VERT:ABSolute:POSition? <SearchName>

Defines the y-value of the centerpoint of the zoom area.

Parameters:
<Position> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Y position" on page 271

SEARch:RESDiagram:VERT:ABSolute:SPAN <SearchName>,<Span>
SEARch:RESDiagram:VERT:ABSolute:SPAN? <SearchName>

Defines the height of the zoom area.

Parameters:
<Span> Range: 0 to 100E+24
Increment: 0.01
*RST: 0.01

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Y range" on page 271

SEARch:RESDiagram:VERT:MODE <SearchName>,<Mode>
SEARch:RESDiagram:VERT:MODE? <SearchName>

Defines whether absolute or relative values are used to specify the y-axis values.

Parameters:
<Mode> ABS | REL
*RST: ABS

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Y mode" on page 271

SEARch:RESDiagram:VERT:RELative:POSition <SearchName>,<RelPosi>
SEARch:RESDiagram:VERT:RELative:POSition? <SearchName>

Defines the y-value of the centerpoint of the zoom area.

Parameters:

<RelPosi> Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Y position" on page 271

SEARch:RESDiagram:VERT:RELative:SPAN <SearchName>,<RelativeSpan>
SEARch:RESDiagram:VERT:RELative:SPAN? <SearchName>

Defines the height of the zoom area.

Parameters:

<RelativeSpan> Range: 1E-15 to 100
Increment: 0.1
*RST: 1
Default unit: %

Parameters for setting and query:

<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Y range" on page 271

SEARch:RESult:LIMit <SearchName>,<ResListLim>
SEARch:RESult:LIMit? <SearchName>

Defines the maximum number of entries in the search result table.

Parameters:

<ResListLim> Range: 1 to 1000
Increment: 1
*RST: 100

Parameters for setting and query:

<SearchName> Search definition

Example: See Section 26.3.4.1, "Searching for a pulse of a specified width", on page 1334

Usage: Asynchronous command

Manual operation: See "Max result count" on page 483

SEARch:RESult:SHOW <SearchName>,<ShwResTbl>
SEARch:RESult:SHOW? <SearchName>

Displays or hides the search result table.

Parameters:
<ShwResTbl> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Show result table" on page 483

SEARch:RESult:SORT:ASCending <SearchName>,<SortAscending>
SEARch:RESult:SORT:ASCending? <SearchName>

If enabled, the results are listed in asscending order, i.e. the smallest value at the top.

Parameters:
<SortAscending> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Sort ascending" on page 483

SEARch:RESult:SORT[:MODE] <SearchName>,<SortMode>
SEARch:RESult:SORT[:MODE]? <SearchName>

Sorts the search result table by x-value position or value of the result.

Parameters:
<SortMode> POSition | VALue

POSition
Sorts the search result table by the x-value position.

VALue
Sorts the search result table by the value of the result.

*RST: POSition

Parameters for setting and query:
<SearchName> Search definition

Usage: Asynchronous command

Manual operation: See "Sort by" on page 483

SEARch:RESult[:ALL]? <SearchName>

Returns all search results.

Setting parameters:

<SearchName> Search definition

Return values:

<Data> List of search results, separated by commas. For each result, six values are returned:
1. Acquisition index, currently always 0.
2. X-position of the search result
3. Y-position of the search result, currently not relevant
4. Type of the search result (Edge, Glitch, ...)
5. Slope or polarity of the search result
6. For runt, glitch, width, and window searches, the value contains the width. For timeout and interval searches, it contains the timeout. For transition searches, it contains the slew rate. For all other searches, the value is not relevant.

Example:

```
SEAR:RES? 'Search1'
0,1.5375e-007,-84,Edge,Positive,9.91E+37,
0,5.3e-008,-84,Edge,Positive,9.91E+37
```

The query returns two search results for edge search on rising edges at X-position 153,75 ns and 53 ns.

Usage: Query only
Asynchronous command

26.16 Data management

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Instrument settings....1774
- Savesets and one file....1781
- Waveform data transmission....1782
- Waveform data: export to file....1783
- Waveform histogram: export to file....1791
- Eye data: export to file....1792
- Long term measurement results and measurement histogram: export to file....1794

- Screenshots....1796
- Reports....1800
- Autonaming....1802
- CSV export....1804
- External application....1804
- Video raster analysis (option R&S RTP-K129)....1805

26.16.1 Instrument settings

The Mass MEMory subsystem provides commands to access the storage media and to save and reload instrument settings.

File and directory names

The <file_name> and <directory_name> parameters are strings. Some commands use a fixed directory; for others the <file_name> can contain the complete path including the drive name and all subdirectories. If no complete path is specified, the file location is relative to the current directory, queried with `MMEMory:CDIRectory?`. The filename itself may contain the period as a separator for extensions.

Example: '`C:\TEMP\TRASH\test.txt`' for the file named `test.txt` in the `TEMP\TRASH` subdirectory of the internal hard disk drive C:\.

File and directory names can be chosen according to Windows™ conventions. All letters and numbers are allowed, as well as the special characters "_", "^", "$", "~", "!", "#", "%", "&", "-", "{", "}", "(", ")", "@" and "`". Reserved filenames are CON, AUX, COM1, ..., COM4, LPT1, ..., LPT3, NUL and PRN.

The use of wildcards ? and * is not allowed.

MMEMory:DRIVes?....1775
MMEMory:MSIS....1775
MMEMory:DCATalog?....1775
MMEMory:DCATalog:LENGth?....1775
MMEMory:CDIRectory....1776
MMEMory:MDIRectory....1776
MMEMory:RDIRectory....1776
MMEMory:CATalog?....1776
MMEMory:CATalog:LENGth?....1777
MMEMory:COPY....1777
MMEMory:MOVE....1778
MMEMory:DELete....1778
MMEMory:DATA....1779
MMEMory:ATTRibute....1779
MMEMory:SAV....1780
MMEMory:RCL....1780
MMEMory:STORe:STATe....1780
MMEMory:LOAD:STATe....1781

MMEMory:DRIVes?

Returns a list of the logical drives of the instrument as configured in the operating system.

Return values:
<Drive> List of strings, for example, `"C:\","F:\","H:\"`

Usage: Query only

MMEMory:MSIS [<msus>]

Changes the default storage device to the indicated drive or network server.

Parameters:
<msus> String parameter. Drives are indicated with their drive letter, network servers require the UNC format.

Example: `MMEM:MSIS 'C:'`

Example: `MMEM:MSIS '\\server1\share1'`

MMEMory:DCATalog? [<PathName>]

Returns the subdirectories of the current or of a specified directory.

Query parameters:
<PathName> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be set and queried with `MMEMory:CDIRectory`.

Return values:
<FileEntry> Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

Example:
```
MMEM:DCAT?
".","..","Documents and Settings","Program
Files","temp"
```

Usage: Query only

MMEMory:DCATalog:LENGth? [<PathName>]

Returns the number of subdirectories of the current or of a specified directory. The number includes the parent directory strings "." and ".." and corresponds to the number of strings returned by the `MMEMory:DCATalog?` command.

Query parameters:
<PathName> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be set and queried with `MMEMory:CDIRectory`.

Return values:
<FileEntryCount> Number of parent directories and subdirectories.

Example: MMEM:DCAT:LENG?
5

Usage: Query only

MMEMory:CDIRectory [<DirectoryName>]

Changes the default directory for file access.

Parameters:

<DirectoryName> String parameter to specify the directory.
If the string also contains a drive letter or network server name, the command MMEMory:MSIS is executed implicitly.

*RST: "\"

Example: MMEM:CDIR 'C:\USER\DATA'

Usage: SCPI confirmed

MMEMory:MDIRectory <DirectoryName>

Creates a new directory with the specified name.

Setting parameters:

<DirectoryName> String parameter to specify the new directory. If the path consists of several subdirectories, the complete tree is created if necessary.
If no drive letter or server name is indicated, the directory is created on the default storage device specified with MMEMory:MSIS.

Example: MMEM:MDIR 'C:\USER\DATA'

Usage: Setting only

MMEMory:RDIRectory <DirectoryName>

Deletes the specified directory.

Setting parameters:

<DirectoryName> String parameter to specify the directory to be deleted.
This directory must be empty, otherwise it is not deleted.

Example: MMEM:RDIR 'C:\USER\TEST'

Usage: Setting only

MMEMory:CATalog? [<PathName>][, <Format>]

Returns a list of files contained in the specified directory. The result corresponds to the number of files returned by the MMEMory:CATalog:LENgth command.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries directory specified with `MMEMory:CDIRectory`.

<Format> ALL | WTIMe

ALL: Extended result including file, date, time and attributes
WTIMe: Extended result including file, date, time

Return values:

<UsedMemory> Total amount of storage currently used in the directory, in bytes.

<FreeMemory> Total amount of storage available in the directory, in bytes.

<FileEntry> All files and subdirectories of the directory are listed with their filename, format and size in bytes. The first two strings are related to the parent directory.

Example:

```
MMEM:CAT? 'C:\USER\DATA'
529479,1831777894400,".,DIR,0",",.,DIR,0",
"Backup,DIR,0","CSS,DIR,0","DATEN,DIR,0",
"Commands.jar,BIN,529479","FAVORITES,DIR,0",
"LOG,DIR,0","DATA,DIR,0","test,DIR,0",
"TotalCMD,DIR,0"
```

Usage: Query only
SCPI confirmed

MMEMory:CATalog:LENGth? [<PathName>]

Returns the number of files and subdirectories of the current or specified directory. The number includes the parent directory strings "." and ".." and it corresponds to the number of <FileEntry> strings returned by the `MMEMory:CATalog?` command.

Query parameters:

<PathName> String parameter, directory to be queried. If the directory is omitted, the current directory is queried, specified with `MMEMory:CDIRectory`.

Return values:

<Count> Number of files and subdirectories including parent directory entries.

Example:

```
MMEM:CDIR 'C:\USER\DATA'
MMEM:CAT:LENG?
11
```

Usage: Query only

MMEMory:COPY <FileSource>[, <FileDestination>]

Copies an existing file to a new file.

Setting parameters:

<FileSource> String parameter. Contains name and path of the file to be copied. Wildcards (* and ?) are allowed.

<FileDestination> String parameter. Contains name and path of the new file. If the file already exists, it is overwritten without notice. If no file destination is specified, the source file is written to the current directory specified with `MMEMory:CDIRectory`.

Example:
```
MMEM:COPY 'C:\Users\Public\Documents
\Rohde-Schwarz\RTx\RefWaveforms
\RefCurve_2011-03-16*.bin','E:'
```
Copies all reference waveforms saved on March 16, 2011 to an external storage medium, mapped to drive `E:\`.

Usage: Setting only
SCPI confirmed

MMEMory:MOVE <FileSource>, <FileDestination>

Moves the specified file to a new location on the same drive and renames it.

Setting parameters:

<FileSource> String parameter, contains name and path of the file to be copied.
Wildcards (* and ?) are allowed. Therefore, specify a directory for <FileDestination>. Renaming is not possible.

<FileDestination> String parameter. Contains name and path of the new file. If no path is specified, the <FileSource> directory is used - the file is renamed.

Example:
```
MMEM:MOVE 'C:\USER\DATA\SETUP.CFG','C:\STORE'
```
Moves the file "Setup.cfg" from the directory `C:\USER\DATA` to `C:\STORE`.

Usage: Setting only
SCPI confirmed

MMEMory:DELete <FileName>

Removes the specified file/files. To delete directories, use `MMEMory:RDIRectory`.

Setting parameters:

<FileName> String parameter to specify the name and directory of the file to be removed. Wildcards (* and ?) are allowed.
If no path is defined, the current directory is used, specified with `MMEMory:CDIRectory`.

Example:
```
MMEM:DEL '*.CFG'
```
Deletes all CFG files from the current directory.

Usage: Setting only
SCPI confirmed

Manual operation: See "Save to file" on page 525

MMEMory:DATA <FileName>, <Data>
MMEMory:DATA? <FileName>

Stores data in the specified file to the storage location specified using `MMEMory:CDIRectory`.

Parameters:

<Data> <block>

488.2 block data format. The delimiter EOI must be selected to achieve correct data transfer.
The block begins with character '#'. The next digit is the length of the length information, followed by this given number of digits providing the number of bytes in the following binary data.

Parameters for setting and query:

<FileName> String parameter, the name of the file the data is stored to.

Example: `MMEM:DATA 'abc.txt', #216This is the file`
#2: the length information has two digits.
16: the binary data has 16 bytes.

Example: `MMEM:DATA? 'abc.txt'`
Returns the data from file `abc.txt`.

MMEMory:ATTRibute <FileName>, <Attributes>
MMEMory:ATTRibute? <FileName>

Sets file attributes for the specified file/files. The command can be used for files only.

Setting parameters:

<Attributes> String with attributes and setting information.
'+' before the attribute: sets the attribute
'-' before the attribute: deletes the attribute
'R': read only
'A': archive file
'S': system file
'H': hidden file

Parameters for setting and query:

<FileName> String parameter, contains name and path of the file. Wildcards (* and ?) are allowed.

Return values:

<FileEntry> String containing: "<file_name>,<file_attributes>"

Example: `MMEM:ATTR 'C:\USER\DATA\*.LOG', '-R -A'`
Deletes the read-only and archive attributes from all log files in the directory`C:\USER\DATA\*.LOG`.

Example:
```
MMEM:ATTR? 'C:\USER\DATA\*.*'
"Datei1.LOG,A", "Datei2.LOG,A",
"Datei3.LOG,ASH", "Datei4.DLL,RSH",
"Datei5.INI,SH"
```

MMEMory:SAV <FileDestination>

Stores the current instrument settings to the specified file.

This command has the same effect as the combination of `*SAV` and `MMEMory:STORe:STATe`.

Parameters:

<FileDestination> String parameter specifying path and filename of the target file. Wildcards are not allowed.

Example: `MMEM:SAV 'C:\mysavefile.dfl'`
Saves the current instrument settings to the file `mysavefile.dfl` located in the directory C:\.

Usage: Event

Manual operation: See "Save to file" on page 491

MMEMory:RCL <FileSource>

Restores the instrument settings from the specified file.

This command has the same effect as the combination of `MMEMory:LOAD:STATe` and `*RCL`.

Parameters:

'<FileSource>' String parameter specifying the path and filename of the source file. Wildcards are not allowed.

Example: `MMEM:RCL 'C:\mysavefile.dfl'`
Loads and activates the instrument settings from the file `mysavefile.dfl` located in the directory C:\.

Usage: Event

Manual operation: See "Load from file" on page 491

MMEMory:STORe:STATe <MemoryNumber>, <FileName>

Stores the instrument settings from the specified internal memory to the specified file. To store the current instrument settings to the internal memory, use `*SAV` first.

Setting parameters:

<MemoryNumber> Number of the internal memory
Range: 1 to 99

<FileName> String parameter specifying the complete path and filename of the source file.

Example: `*SAV 4`
`MMEM:STORe:STATe 4,'C:\Settings\Settings_1051.dfl'`
Saves current instrument settings to the internal memory number 4. Then stores the settings from the internal memory number 4 to the file `C:\Settings\Settings_1051.dfl`.

Usage: Setting only

MMEMory:LOAD:STATe <MemoryNumber>, <FileName>

Loads the instrument settings from the specified file to the specified internal memory. After the file has been loaded, the settings must be activated using a `*RCL` command.

Setting parameters:

<MemoryNumber> Number of the internal memory
Range: 1 to 99

<FileName> String parameter specifying the complete path and filename of the source file.

Example:
```
MMEM:LOAD:STATe 4,'C:\Settings\Settings_1051.dfl'
*RCL 4
```
Loads instrument settings from the file `C:\Settings\Settings_1051.dfl` to the internal memory number 4, and then activates the settings in internal memory number 4.

Usage: Setting only

26.16.2 Savesets and one file

SAVeset:CONFig:PREView....1781
SAVeset:ONEFile:NAME....1782
SAVeset:ONEFile:SAVE....1782
SAVeset:ONEFile:OPEN....1782
SAVeset:ONEFile:USERpref....1782

SAVeset:CONFig:PREView <Include>

If set to OFF, the saveset is stored without the preview image to reduce the file size.

Use the command each time before you save a saveset.

Parameters:

<Include> OFF | ON
*RST: ON

Usage: Asynchronous command

SAVeset:ONEFile:NAME <Name>

Sets the path and the file name of the One File. The file format is ZIP.

Parameters:
<Name> String parameter

Usage: Asynchronous command

Manual operation: See "Save to file" on page 492

SAVeset:ONEFile:SAVE

Saves the One File data to the file that is specified with `SAVeset:ONEFile:NAME`.

Usage: Setting only

Manual operation: See "Save to file" on page 492

SAVeset:ONEFile:OPEN

Loads the One File that is specified with `SAVeset:ONEFile:NAME`.

Usage: Setting only

Manual operation: See "Load from file" on page 493

SAVeset:ONEFile:USERpref <Include>

If ON, the user preferences settings are also restored together with the saveset and reference waveform. User preferences settings include the user-specific display settings like diagram layout, toolbar, intensity and transparency settings.

Parameters:
<Include> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Include user preferences" on page 493

26.16.3 Waveform data transmission

The R&S RTP provides specific data export commands for the various waveform types. The commands transmit the data of the waveform points from the instrument to the controlling computer. The data can be used in MATLAB, for example.

The commands are described in the relevant chapters:

- Analog waveforms: Section 26.8.6, "Waveform data", on page 1413
- Reference waveforms: Section 26.10.2.3, "Waveform data export", on page 1559
- Math waveforms: Section 26.10.3, "Mathematics", on page 1564
- Spectrum waveforms: Section 26.13.2, "Waveform data", on page 1703

- Logic channels: Section 26.19.5, "MSO data", on page 2645
- I/Q data: Section 26.22.2, "I/Q data output", on page 2687

26.16.4 Waveform data: export to file

The resulting files of waveforms exports are described in Section 12.3.1, "Waveform export files", on page 498.

EXPort:WAVeform:SOURce 1783
EXPort:WAVeform:MULTichannel 1784
CHANnel<ch>:EXPortstate 1785
EXPort:WAVeform:NAME 1785
EXPort:WAVeform:SAVE 1786
EXPort:WAVeform:SCOPe 1786
EXPort:WAVeform:STARt 1786
EXPort:WAVeform:STOP 1787
EXPort:WAVeform:ZOOM 1787
EXPort:WAVeform:CURSorset 1787
EXPort:WAVeform:MEAS 1788
EXPort:WAVeform:DLOGging 1788
EXPort:WAVeform:TIMestamps 1789
EXPort:WAVeform:INCXvalues 1789
EXPort:WAVeform:RAW 1790
EXPort:WAVeform:DISPlayoff 1790
EXPort:WAVeform:FASTexport 1790
EXPort:WAVeform:ICDR 1791

EXPort:WAVeform:SOURce <Source>

Selects the waveform to be exported to file.

The commands takes effect if `EXPort:WAVeform:MULTichannel` is `OFF`.

Parameters:

<Source> | C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | MSOB1 | MSOB2 | MSOB3 | MSOB4 | TRK1 | TRK2 | TRK3 | TRK4 | TRK5 | TRK6 | TRK7 | TRK8 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | BATHtub1 | BMEas1 | SRESponse1 | SRHist1 | SDHist1 | TJHist1 | DJHist1 | DDJHist1 | PJHist1 | RJOHist1 | SRTRack1 | SDTRack1 | TJTRack1 | DJTRack1 | DDJTrack1 | PJTRack1 | RJOTrack1 | TJSPectrum1 | DDJSpectrum1 | PJSPectrum1 | RJOSpectrum1 | SEYE1 | BATHtub2 | BMEas2 | SRESponse2 | SRHist2 | SDHist2 | TJHist2 | DJHist2 | DDJHist2 | PJHist2 | RJOHist2 | SRTRack2 | SDTRack2 | TJTRack2 | DJTRack2 | DDJTrack2 | PJTRack2 | RJOTrack2 | TJSPectrum2 | DDJSpectrum2 | PJSPectrum2 | RJOSpectrum2 | SEYE2 | NBAThtub1 | NBMeas1 | TNHist1 | DNHist1 | DDNHist1 | PNHist1 | RNOHist1 | TNTRack1 | DNTRack1 | DDNTrack1 | PNTRack1 | RNOTrack1 | TNSPectrum1 | DDNSpectrum1 | PNSPectrum1 | RNOSpectrum1 | NBAThtub2 | NBMeas2 | TNHist2 | DNHist2 | DDNHist2 | PNHist2 | RNOHist2 | TNTRack2 | DNTRack2 | DDNTrack2 | PNTRack2 | RNOTrack2 | TNSPectrum2 | DDNSpectrum2 | PNSPectrum2 | RNOSpectrum2 | PJDHist1 | BUJHist1 | RJHist1 | PJDTrack1 | PJDSpectrum1 | PJDHist2 | BUJHist2 | RJHist2 | PJDTrack2 | PJDSpectrum2 | PNDHist1 | BUNHist1 | RNHist1 | PNDTrack1 | PNDSpectrum1 | PNDHist2 | BUNHist2 | RNHist2 | PNDTrack2 | PNDSpectrum2 | LANE1 | LANE2 | LANE3 | LANE4

*RST: C1W1

Example: See Section 26.3.5.2, "Exporting waveform data to file", on page 1335

Usage: Asynchronous command

Manual operation: See "Source" on page 507

EXPort:WAVeform:MULTichannel <MltChXpt>

Enables or disables the multichannel export.

If you enable the multichannel export, all active channels are included to the export data. You can change the export state using the `CHANnel<ch>:EXPortstate` command.

If multichannel export is disabled, select the waveform to be exported using the `EXPort:WAVeform:SOURce` command.

Note that `CHANnel<ch>[:WAVeform<wf>]:DATA[:VALues]?` returns the data of all channels that are selected for export, no matter of the channel suffix.

Parameters:

<MltChXpt> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Multi channel" on page 506

CHANnel<ch>:EXPortstate <ExportState>

Includes or excludes the indicated channel in waveform export. The data of channel waveform 1 is exported.

The commands takes effect if `EXPort:WAVeform:MULTichannel` is `ON`.

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<ExportState> OFF | ON
If you enable the multichannel export, the export state of all active channels is automatically set ON.
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Selected sources" on page 507

EXPort:WAVeform:NAME <FileName>

Sets the file name, file format and path to save the waveform to.

See also: Section 12.3.1, "Waveform export files", on page 498

Parameters:

<FileName> String with path and file name with extension .xml, .bin, or .csv

Example:
```
EXPort:WAVeform:NAME 'C:\temp\Export_Ch11.xml'
EXPort:WAVeform:SAVE
```
Saves the waveform data in XML format to `C:\temp\Export_Ch1.xml`.

Example:
```
EXPort:WAVeform:NAME 'C:\temp\Export_Ch2.bin'
EXPort:WAVeform:SAVE
```
Saves the waveform data in binary format to `C:\temp\Export_Ch2.bin`.

Usage: Asynchronous command

Manual operation: See "Save to file" on page 509

EXPort:WAVeform:SAVE

Saves the waveform(s) to the file specified with `EXPort:WAVeform:NAME`. The file format is also set using the `...NAME` command.

Example: See Section 26.3.5.2, "Exporting waveform data to file", on page 1335

Usage: Setting only

Manual operation: See "Save to file" on page 509

EXPort:WAVeform:SCOPe <Scope>

Defines the part of the waveform record that has to be stored.

Parameters:

<Scope> WFM | ZOOM | CURSor | GATE | MANual

WFM
Complete waveform

ZOOM
Data included in the zoom area if a zoom is defined for the source waveform.

CURSor
Data between the cursor lines if a cursor measurement is defined for the source waveform.

GATE
data included in the measurement gate if a gated measurement is defined for the source waveform.

MANual
Saves the data between user-defined start and stop values to be set with `EXPort:WAVeform:STARt` and `EXPort:WAVeform:STOP`.

*RST: WFM

Example: See Section 26.3.5.2, "Exporting waveform data to file", on page 1335

Usage: Asynchronous command

Manual operation: See "Scope" on page 507

EXPort:WAVeform:STARt <Start>

Sets the start value of the waveform section for export, if `EXPort:WAVeform:SCOPe` is set to `Manual`.

Parameters:

<Start> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01
Default unit: s

Usage: Asynchronous command

Manual operation: See "Scope" on page 507

EXPort:WAVeform:STOP <Stop>

Sets the end value of the waveform section for export, if `EXPort:WAVeform:SCOPe` is set to `Manual`.

Parameters:

<Stop> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01
Default unit: s

Usage: Asynchronous command

Manual operation: See "Scope" on page 507

EXPort:WAVeform:ZOOM <ZoomDiagram>,<ZoomName>

Sets the zoom area to be used for limited data export if `EXPort:WAVeform:SCOPe` is set to `ZOOM`.

Parameters:

<ZoomDiagram> Name of the diagram on which the zoom area is based.

<ZoomName> Name of the zoom diagram

Example: See "Exporting interleaved x/y data of a zoom to CSV file" on page 1337

Usage: Asynchronous command

Manual operation: See "Scope" on page 507

EXPort:WAVeform:CURSorset <Cursorset>

Sets the cursor set to be used for limited data export if `EXPort:WAVeform:SCOPe` is set to `CURSor`.

Parameters:

<Cursorset> CURSOR1 | CURSor1 | CURSOR2 | CURSor2 | CURSOR3 | CURSor3 | CURSOR4 | CURSor4

CURSOR1 = CURSor1, CURSOR2 = CURSor2, CURSOR3 = CURSor3, CURSOR4 = CURSor4

Usage: Asynchronous command

Manual operation: See "Scope" on page 507

EXPort:WAVeform:MEAS <MeasGate>

Sets the gate to be used for limited data export if `EXPort:WAVeform:SCOPe` is set to `GATE`.

Parameters:

<MeasGate> MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5 | MEAS6 | MEAS7 | MEAS8

Measurement for which the gate is defined.

Example: See "Exporting raw data of a measurement gate to a BIN file" on page 1336

Usage: Asynchronous command

Manual operation: See "Scope" on page 507

EXPort:WAVeform:DLOGging <DataLogging>

The command enables the export of subsequent acquisitions of the selected waveforms. The waveforms are taken from a running Nx Single acquisition (data logging, history is disabled), or from the history (multiple waveforms, history is enabled).

If the history is disabled (`CHANnel<ch>[:WAVeform<wf>]:HISTory[:STATe]`) and data logging is enabled, a specified number of waveforms is transferred to file directly during RUN Nx SINGLE acquisition. Enabling data logging stops a running acquisition. Set the number of acquisitions to be acquired and stored with `ACQuire:COUNt` and start export using `RUNSingle`.

If the history is enabled, the subsequent waveforms are taken from the history. Specify the range with `CHANnel<ch>[:WAVeform<wf>]:HISTory:STARt` and `CHANnel<ch>[:WAVeform<wf>]:HISTory:STOP`. Then play the history with `CHANnel<ch>[:WAVeform<wf>]:HISTory:PLAY`.

The commands `EXPort:WAVeform:SAVE`, `CHANnel<ch>[:WAVeform<wf>]:DATA[:VALues]?` and `CHANnel<ch>[:WAVeform<wf>]:DATA:HEADer?` are not available if data logging is enabled. The `RUNContinous` command disables data logging.

If data logging is off, and the history is enabled, one waveform out of the history is written to file. Specify the waveform using `CHANnel<ch>[:WAVeform<wf>]:HISTory:CURRent` and save it using `EXPort:WAVeform:SAVE`.

Parameters:

<DataLogging> OFF | ON

*RST: OFF

Example: See:
"Exporting multiple running acquisitions of a single waveform to an XML file" on page 1338
"Exporting multiple acquisitions of the history to an XML file" on page 1339
"Exporting a single acquisition of the history to a BIN file" on page 1338

Usage: Asynchronous command

Manual operation: See "Enable" on page 511

EXPort:WAVeform:TIMestamps <UseTimestamps>

Exports the relative timestamps of all history waveforms to the waveform data file. The time is written at the beginning of each waveform record.

Parameters:
<UseTimestamps> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Time stamps" on page 510

EXPort:WAVeform:INCXvalues <IncHorValues>

Includes horizontal values in the retrieved data (time or frequency values, depending on the waveform). X and Y-values are written alternately to the file. If disabled, only Y-values - mostly voltage values - are written. The X-values are always returned in 64 bit real format, regardless of the defined data format.

The setting is not available for the export of raw data.

The command affects the content of export files as well as data retrieved with:

- `CHANnel<ch>[:WAVeform<wf>]:DATA[:VALues]?`
- `CALCulate:MATH<m>:DATA[:VALues]?`
- `REFCurve<rc>:DATA[:VALues]?`
- `DIGital<m>:DATA[:VALues]?`
- `BUS<b>:PARallel:DATA[:VALues]?`
- `ZVC:Z<m>:I<n>:DATA[:VALues]?`
- `ZVC:Z<m>:V<n>:DATA[:VALues]?`

Parameters:
<IncHorValues> OFF | ON
*RST: OFF

Example: See:
"Exporting interleaved x/y data of a single waveform to a CSV file" on page 1337
"Exporting interleaved x/y data of a zoom to CSV file" on page 1337

Usage: Asynchronous command

Manual operation: See "Interleaved x/y" on page 509

EXPort:WAVeform:RAW <RawValues>

Enables the export of raw sample data, and sets the data format to integer 8 bit. In high definition acquisition mode, the data format is integer 16 bit. Fot INT16, you can set the byte order using the `FORMat:BORDer` command.

The raw format reduces the file size but changes also the precision of the values.

Currently, the setting is not available for the export of digital channel data and data of R&S RT-ZVC channels.

The raw export of interleaved X/Y values is not supported.

Parameters:
<RawValues> OFF | ON
*RST: OFF

Example: See:
"Exporting raw data of a single waveform to a BIN file" on page 1336
"Exporting raw data of a measurement gate to a BIN file" on page 1336

Usage: Asynchronous command

Manual operation: See "Raw (ADC direct)" on page 508

EXPort:WAVeform:DISPlayoff <FastExport>

Enables or disables the display update during an Nx Single acquisition.

Parameters:
<FastExport> OFF | ON
ON: Disables the display update for maximum export speed.
OFF: Enables the display update. The export is slower.
*RST: OFF

Usage: Asynchronous command

EXPort:WAVeform:FASTexport <Enable>

To improve the performance of data export to file, the measurements are performed slower while the data export speeds up.

Setting parameters:
<Enable> ON | OFF

Example: See Section 26.3.5.2, "Exporting waveform data to file", on page 1335

Usage: Setting only
Asynchronous command

EXPort:WAVeform:ICDR <IncludeCDRInformation>

Includes the CDR information in the waveform file.

Parameters:
<IncludeCDRInformation> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Include CDR info" on page 506

26.16.5 Waveform histogram: export to file

EXPort:HISTogram:SELect....1791
EXPort:HISTogram:INCidence....1791
EXPort:HISTogram:NAME....1792
EXPort:HISTogram:SAVE....1792
EXPort:HISTogram:DATA?....1792

EXPort:HISTogram:SELect <Name>

Selects the histogram to be exported.

Parameters:
<Name> String with the histogram name.

Example: See "Exporting histogram data to file" on page 1332

Usage: Asynchronous command

Manual operation: See "Select" on page 513

EXPort:HISTogram:INCidence <Incidence>

Sets the mode of exported data: relative or absolute frequency of amplitude values.

Parameters:
<Incidence> ABS | REL
*RST: REL

Example: See "Exporting histogram data to file" on page 1332

Usage: Asynchronous command

Manual operation: See "Incidence" on page 513

EXPort:HISTogram:NAME <Path>

Sets the file name and path to save the histogram to.

Parameters:
<Path> String with path and file name. The file extension defines the file format: XML, CSV, or BIN.

Example: See "Exporting histogram data to file" on page 1332

Usage: Asynchronous command

Manual operation: See "Save to file" on page 513

EXPort:HISTogram:SAVE

Saves the histogram to the file specified with `EXPort:HISTogram:NAME`.

Example: See "Exporting histogram data to file" on page 1332

Usage: Setting only
Asynchronous command

Manual operation: See "Save to file" on page 513

EXPort:HISTogram:DATA?

Transfers the histogram data to the controlling computer. The data can be used in MATLAB, for example.

To set the export data format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,64 | INT,8 | INT,16.

Return values:
<Data> List of comma-separated values according to the format settings and `EXPort:HISTogram:INCidence`.

Example: See "Transferring histogram data" on page 1332.

Usage: Query only

Manual operation: See "Save to file" on page 513

26.16.6 Eye data: export to file

EXPort:EYE:DATA? 1793
EXPort:EYE:NAME 1793
EXPort:EYE:SAVE 1793
EXPort:EYE:SELect 1793
EXPort:EYE:SOURce? 1793

EXPort:EYE:DATA?

Transfers the eye data to the controlling computer. The data can be used in MATLAB, for example.

The command returns UINT16 values and ignores the setting of `FORMat[:DATA]`.

Return values:
<Data> Comma-separated list of values

Usage: Query only

Manual operation: See "Save to file" on page 519

EXPort:EYE:NAME <Path>

Sets the path, the file name, and the file format for the eye file. Available file formats are *csv and *bin.

Parameters:
<Path>

Usage: Asynchronous command

Manual operation: See "Save to file" on page 519

EXPort:EYE:SAVE

Saves the selected eye to the file that is specified with `EXPort:EYE:NAME`.

Usage: Setting only

Manual operation: See "Save to file" on page 519

EXPort:EYE:SELect <SelectableEye>

Selects the eye that you want to save to a file.

Parameters:
<SelectableEye> EYE1 | EYE2 | EYE3 | EYE4
*RST: EYE1

Usage: Asynchronous command

Manual operation: See "Select/ Source" on page 519

EXPort:EYE:SOURce?

Returns the source of the eye measurement, selected with `EXPort:EYE:SELect`.

Return values:
<Source> C1W1 | C1W2 | C1W3 | C1W4 | C2W1 | C2W2 | C2W3 | C2W4 | C3W1 | C3W2 | C3W3 | C3W4 | C4W1 | C4W2 | C4W3 | C4W4
*RST: NONE

Usage: Query only
Asynchronous command

Manual operation: See "Select/ Source" on page 519

26.16.7 Long term measurement results and measurement histogram: export to file

EXPort:MEASurement:SELect....1794
EXPort:MEASurement:TYPE....1794
EXPort:MEASurement:NAME....1795
EXPort:MEASurement:SAVE....1795
EXPort:MEASurement:DATA?....1795

EXPort:MEASurement:SELect <SelcMeas>

Selects the measurement for export of long term or measurement histogram data.

Parameters:
<SelcMeas> MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5 | MEAS6 | MEAS7 | MEAS8
*RST: MEAS1

Example: See "Exporting long-term measurement data to file" on page 1332

Usage: Asynchronous command

Manual operation: See "Measurement" on page 517

EXPort:MEASurement:TYPE <ExportType>

You can export the result data of the long term measurement, or the measurement histogram, or the track data.

To export the measurement histogram, it must be enabled using `MEASurement<mg>:STATistics:HISTogram`.

To export the long term results, the long term measurement must be enabled using `MEASurement<mg>:LTMeas[:STATe]`.

To export a track, the track must be enabled before. Track measurements require an option, see "Enable (Track)" on page 402.

Parameters:
<ExportType> LONGterm | HISTogram | TRACk
LONGTERM = LONGterm, HISTOGRAM = HISTogram
*RST: HISTogram

Example: See "Exporting long-term measurement data to file" on page 1332

Usage: Asynchronous command

Manual operation: See "Export type" on page 517

EXPort:MEASurement:NAME <Path>

Sets the file name and path to save the long term or measurement histogram data to.

Parameters:

<Path> String with path and file name. The file extension defines the file format: XML, CSV, or BIN.

Example: See "Exporting long-term measurement data to file" on page 1332

Usage: Asynchronous command

EXPort:MEASurement:SAVE

Saves the long term or measurement histogram results to the file specified using `EXPort:MEASurement:NAME`.

The measurement data can be exported as absolute or relative values, which is defined using `EXPort:HISTogram:INCidence`.

Example: See "Exporting long-term measurement data to file" on page 1332

Usage: Setting only

Manual operation: See "Save to file" on page 518

EXPort:MEASurement:DATA?

Transfers the long term measurement data to the controlling computer. The data can be used in MATLAB, for example. The transferred data are the same as the data written to files.

To set the export data format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,64 | INT,8 | INT,16.

Return values:

<Data> List of comma-separated values according to the format settings
Long term data:
If statistics are disabled, the current value of each long term point is returned.
If statistics are enabled (`MEASurement<mg>:STATistics[:ENABle]`), seven values for each long term point are returned: upper peak, lower peak, RMS, standard deviation, average, number of measured results per long term point, number of waveforms per long term point.
For measurement histograms, absolute values are returned.
See also: Section 12.3.5, "Result plots analysis", on page 515.

Example: See "Transferring long-term measurement data" on page 1333

Usage: Query only

Manual operation: See "Save to file" on page 518

26.16.8 Screenshots

The HCOPy subsystem and some other commands control the output of display information for documentation purposes. The instrument allows two independent output configurations which can be set separately with the suffix.

Note that the remote mode is intended for maximum performance. Therefore, the display does not follow the remote commmands consistantly. To get a correct screenshot, turn the display on using `SYST:DISP:UPD ON`.

HCOPy:DESTination<m>....1796
MMEMory:NAME....1797
HCOPy:DEVice<m>:LANGuage....1797
HCOPy:DEVice<m>:INVerse....1797
HCOPy:WBKG....1798
HCOPy:CMAP<m>:DEFault....1798
HCOPy:SSD....1798
HCOPy:ISBA....1799
HCOPy:IMMediate<m>....1799
HCOPy:IMMediate<m>:NEXT....1800
HCOPy:STABs....1800

HCOPy:DESTination<m> <Medium>

Selects the output medium: file, printer or clipboard.

Suffix:
<m> 1..2
Selects the output configuration.

Parameters:
<Medium> MMEM | SYST:COMM:CLIP

String parameter

MMEM
Directs the display image to a file. The `MMEMory:NAME` command defines the file name. The file format is defined with `HCOPy:DEVice<m>:LANGuage`.

SYST:COMM:CLIP
Directs the hardcopy to the clipboard.

*RST: SYST:COMM:CLIP

Example: `HCOP:DEST 'MMEM'`
See also Section 26.3.5.1, "Saving a screenshot to file", on page 1334

Usage: Asynchronous command

Manual operation: See "Save to file" on page 525

MMEMory:NAME <FileName>

Defines the file name when an image of the display is stored to a file.

Setting parameters:

<FileName> String parameter specifiying path and file name of the screenshot.

Example: See Section 26.3.5.1, "Saving a screenshot to file", on page 1334

Usage: Setting only
SCPI confirmed
Asynchronous command

Manual operation: See "Save to file" on page 525

HCOPy:DEVice<m>:LANGuage <FileFormat>

Defines the file format for output of the display image to file.

To set the output to file, use `HCOPy:DESTination<m>` with parameter `'MMEM'`.

Suffix:

<m> 1..2
Selects the output configuration.

Parameters:

<FileFormat> PNG | JPG | BMP | TIFF | PDF

*RST: PNG

Example: See Section 26.3.5.1, "Saving a screenshot to file", on page 1334

Usage: Asynchronous command

Manual operation: See "Save to file" on page 525

HCOPy:DEVice<m>:INVerse <InverseColor>

Inverts the colors of the output, i.e. a dark waveform is printed on a white background. Screenshots are inverted per default when you save using remote commands. Turn inversion off if you want the screen display in the screenshot.

See also:

- `HCOPy:WBKG` on page 1798
- "White background" on page 524

Suffix:

<m> 1..2
Selects the output configuration.

Parameters:
<InverseColor> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Inverse color" on page 525

HCOPy:WBKG <WhiteBackground>

Inverts the background color. So you can print waveforms with normal waveform collors on white background.

If both `HCOPy:WBKG` and `HCOPy:DEVice<m>:INVerse` are ON, the instrument inverts the background twice, and it appears black.

See also: "White background" on page 524.

Parameters:
<WhiteBackground> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "White background" on page 524

HCOPy:CMAP<m>:DEFault <PrintColorSet>

Defines the default color set for printing of the display image.

To set the output to printer, use `HCOPy:DESTination<m>` with parameter `'SYST:COMM:PRIN'`.

Suffix:
<m> 1..2
Selects the output configuration.

Parameters:
<PrintColorSet> DEF1 | DEF4

DEF1
Current screen colors with white background and black grid.

DEF4
Current screen colors without any changes (black background).

*RST: DEF1

Usage: Asynchronous command

HCOPy:SSD <ShowSetupDialog>

Enables or disables the display of open dialogs in screenshots. Use this command if you want to document settings in screenshots.

Parameters:
<ShowSetupDialog> OFF | ON
*RST: OFF

Usage: Asynchronous command

Firmware/software: FW 3.20

Manual operation: See "Show setup dialog" on page 525

HCOPy:ISBA IncludeSignalBar

If the value is set to `OFF`, the screenshot shows only the diagram area, without the signal bar.

Parameters:
IncludeSignalBar OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show only grid" on page 525

HCOPy:IMMediate<m>

Starts the immediate output of the display image, depending on the `HCOPy:DESTination<m>` destination setting.

By default, screenshots are inverted when saving them with remote commands. If you want the screen display in the screenshot, turn inversion off (`HCOPy:DEVice<m>:INVerse`).

To get a correct screenshot of the diagrams, results, and dialog boxes, turn on the display using `SYST:DISP:UPD ON`.

Suffix:
<m> 1..2
Selects the output configuration.

Example:
```
SYST:DISP:UPD ON
HCOP:DEST 'MMEM'
MMEM:NAME 'C:\Temp\Print.bmp'
HCOP:IMM; *OPC?
```

Example: See Section 26.3.5.1, "Saving a screenshot to file", on page 1334

Usage: Event
Asynchronous command

Manual operation: See "Save to file" on page 525

HCOPy:IMMediate<m>:NEXT

Starts the output of the next display image, depending on the `HCOPy:DESTination<m>` destination setting.

If the screenshot is saved to a file, the file name used in the last saving process is automatically counted up to the next unused name.

Suffix:
<m> 1..2
Selects the output configuration.

Example: See Section 26.3.5.1, "Saving a screenshot to file", on page 1334

Usage: Event
Asynchronous command

Manual operation: See "Save to file" on page 525

HCOPy:STABs

Saves screenshots of all tabs in the diagrams. The instrument creates one screenshot for each tab.

Usage: Event
Asynchronous command

Manual operation: See "Screenshot of tabs" on page 525

26.16.9 Reports

The following commands configure and save report files. To configure the screenshot that is included in the report, use the commands explained in Section 26.16.8, "Screenshots", on page 1796.

REPort:LANGuage....1800
REPort:PAPersize....1801
REPort:LOGType....1801
REPort:LOGO....1801
REPort:USER....1801
REPort:COMMent....1802
REPort:FILE:NAME....1802
REPort:FILE:SAVE....1802

REPort:LANGuage <Language>

Sets the language to be used in the report. Available languages are listed in the specifications document.

Parameters:
<Language> String with the english language name, upper case.

Example: `REPort:LANGuage 'Spanish'`

Manual operation: See "Language" on page 528

REPort:PAPersize <PaperSize>

Selects the paper size: A4 or US Letter.

Parameters:

<PaperSize> A4 | USL

*RST: A4

Usage: Asynchronous command

Manual operation: See "Paper size" on page 528

REPort:LOGType <Logo>

By default, the Rohde & Schwarz logo is shown in the header of the report pages. You can switch the logo off, or select your logo to be shown.

Parameters:

<Logo> RS | CUST | NONE

CUST
Select the logo file using `REPort:LOGO`.

*RST: RS

Usage: Asynchronous command

Manual operation: See "Logo" on page 528

REPort:LOGO <LogoFile>

Defines the logo file that is used on the report if `REPort:LOGType` is set to `CUSTom`.

Parameters:

<LogoFile> String with the path and filename of the logo image.

Example: `REPort:LOGO 'C:\Company files\logo.jpg'`

Usage: Asynchronous command

Manual operation: See "Logo" on page 528

REPort:USER <User>

Enter the user name that appears in the general information section at the beginning of the report.

Parameters:

<User> String parameter

Usage: Asynchronous command

Manual operation: See "User name / Comment" on page 528

REPort:COMMent <Comment>

Enter a comment that appears in the general information section at the beginning of the report.

Parameters:
<Comment> String parameter

Usage: Asynchronous command

Manual operation: See "User name / Comment" on page 528

REPort:FILE:NAME <ReportFile>

Sets the file name and path to save the report to.

Parameters:
<ReportFile> String with path and file name. The file extension defines the file format: PDF, HTML, or DOC.

Usage: Asynchronous command

Manual operation: See "Save to file" on page 528

REPort:FILE:SAVE

Saves the report to the specified file.

Usage: Event
Asynchronous command

Manual operation: See "Save to file" on page 528

26.16.10 Autonaming

MMEMory:AUTonaming:PREFix 1802
MMEMory:AUTonaming:USERtext 1802
MMEMory:AUTonaming:DATE 1802
MMEMory:AUTonaming:INDex 1803
MMEMory:AUTonaming:TIME 1803
MMEMory:AUTonaming:TEXT 1803
MMEMory:AUTonaming:DEFaultpath 1803
MMEMory:AUTonaming:RESPath 1803
MMEMory:AUTonaming:RESall 1804

MMEMory:AUTonaming:PREFix <State>
MMEMory:AUTonaming:USERtext <State>
MMEMory:AUTonaming:DATE <State>

MMEMory:AUTonaming:INDex <State>
MMEMory:AUTonaming:TIME <State>

Includes or excludes the name part in the file name pattern for automatic file name generation. This name is used as the default file name.

The prefix indicates the type of data that is saved, for example, Histogram, RefCurve, Settings.

To define a user text, use `MMEMory:AUTonaming:TEXT`.

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Time" on page 110

MMEMory:AUTonaming:TEXT <NameString>

Defines a text, that can be included in the autonaming pattern.

Parameters:
<NameString> String parameter

Usage: Asynchronous command

Manual operation: See "Text input" on page 109

MMEMory:AUTonaming:DEFaultpath <Path>

Sets the path where data and settings files will be stored. The factory default path is:

- `"C:\Users\Public\Documents\Rohde-Schwarz\RTx"` if no USB flash drive is connected
- Drive letter of the USB flash drive, for example, `"E:\"` or `"F:\"` if a USB flash drive is connected.

Parameters:
<Path> String parameter

Usage: Asynchronous command

Manual operation: See "Default path for all file operations" on page 110

MMEMory:AUTonaming:RESPath

Resets the path for file operations to the factory default path.

Usage: Event
Asynchronous command

Manual operation: See "Reset" on page 110

MMEMory:AUTonaming:RESall

Resets all autonaming settings to the default value, including the path.

Usage: Event
Asynchronous command

Manual operation: See "Reset" on page 110

26.16.11 CSV export

EXPort:RESult:DECSymbol 1804
EXPort:RESult:DELimiter 1804

EXPort:RESult:DECSymbol <DecimalSymbol>

Sets if point or comma is used as a decimal symbol.

Parameters:
<DecimalSymbol> POINt | COMMa
*RST: POINt

Usage: Asynchronous command

Manual operation: See "Decimal symbol" on page 111

EXPort:RESult:DELimiter <CsvDelimiter>

Selects the list separator symbol from a list.

Parameters:
<CsvDelimiter> SEMICOLON | COMMA | SPACE | TAB | COLON
*RST: COMMA

Usage: Asynchronous command

Manual operation: See "Csv delimiter" on page 111

26.16.12 External application

The commands configure an external application that can be started at various events, for example, trigger event, or mask test violation.

EXECutable:NAME 1804
EXECutable:PARameter 1805
EXECutable:WDIRectory 1805

EXECutable:NAME <ApplicationPath>

Sets the path to the application executable.

Parameters:
<ApplicationPath> String parameter containing path, filename, and file extension

Example:
```
EXECutable:NAME 'C:\Program
Files\Wireshark\Wireshark.exe'
TRIGger:EVENt:RUNexec TRIGger
```

Usage: Asynchronous command

EXECutable:PARameter <AppParameters>

Sets optional parameters for the external executable.

Parameters:
<AppParameters> String parameter

Usage: Asynchronous command

EXECutable:WDIRectory <WorkDirectory>

Sets the working directory for the executable.

Parameters:
<WorkDirectory> String parameter

Usage: Asynchronous command

26.16.13 Video raster analysis (option R&S RTP-K129)

The commands configure the optional video raster application.

RASTer:AVERaging <State>

Enables the averaging, which improves the image quality by averaging multiple acquisitions. A stable and precise trigger condition is required to get exact results.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Averaging" on page 531

RASTer:EXPort:PATH <State>

Sets the file name, file format and path of the image file.

Parameters:
<State> String with path and file name with extension .png or .jpg.

Usage: Asynchronous command

Manual operation: See "Save image to file" on page 532

RASTer:EXPort:SAVE

Saves the raster image to the file specified with `RASTer:EXPort:PATH` on page 1805.

Usage: Setting only

Manual operation: See "Save image to file" on page 532

RASTer:GATe:STARt?

Returns the start time of the rastered part of the signal, which is the image start.

Return values:

<Start>
Range: -100E+24 to 100E+24
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

RASTer:GATe:STOP?

Returns the end time of the rastered part of the signal, which is the image end.

Return values:

<Stop>
Range: -100E+24 to 100E+24
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

RASTer:HSYNc <Value>

Sets the horizontal frequency of the video signal. It is the line frequency, the repetition rate of horizontal lines.

Parameters:

<Value>
Range: 0.1 to 10E+6
Increment: 1
*RST: 45E+3
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "H-Sync" on page 531

RASTer:LINes <Value>

Sets the number of horizontal lines in the raster image.

If you change the number of lines, the result of `RASTer:VSYNc` is changes too, and vice versa. If you change `RASTer:HSYNc`, the number of lines is also adjusted.

Parameters:

<Value>
Range: 0.1 to 10000
Increment: 1
*RST: 900

Usage: Asynchronous command

Manual operation: See "Lines" on page 532

RASTer:OFFSet <Value>

Sets the time between the acquisition start and the image start.

Parameters:

<Value>
Range: 0 to 100E+24
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Horizontal offset" on page 531

RASTer:SOURce <Source>

Selects the waveform to be processed to a raster image.

Parameters:

<Source>
C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "Source" on page 531

RASTer:STATe <State>

Activates the raster processing.

Parameters:

<State>
OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 531

RASTer:VSYNc <Value>

Sets the vertical frequency (refresh rate) if averaging is active.

Parameters:

<Value> Range: 0.1 to 10E+9
Increment: 1E-3
*RST: 50
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "V-Sync" on page 531

26.17 Signal configuration

- General setup....1808
- Signal and reference levels for NRZ signals....1811
- Signal anad reference levels for PAM-N signals....1825

26.17.1 General setup

SIGNalconfig:SETup:ADD....1808
SIGNalconfig:SETup:COUNt?....1809
SIGNalconfig:SETup:REMove....1809
SIGNalconfig:SETup:SETTing<m>:PAMorder....1809
SIGNalconfig:SETup:PROPagate....1809
SIGNalconfig:SETup:SETTing<m>:SERStandard....1810
SIGNalconfig:SETup:SETTing<m>:SOURce....1810
SIGNalconfig:SETup:SETTing<m>:SYMBolrate....1810
SIGNalconfig:SETup:SOURce....1811
SIGNalconfig:SETup:SREStimation....1811

SIGNalconfig:SETup:ADD [<Source>][,<SerialStandard>]

Adds a new signal to be configured. You can define up to 8 signals.

Setting parameters:

<Source> NONE | C1W1 | C2W1 | C3W1 | C4W1 | C1W4 | C2W4 | C3W4 | C4W4 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2

<SerialStandard> See `SIGNalconfig:SETup:SETTing<m>:SERStandard` on page 1810.

Usage: Setting only
Asynchronous command

Manual operation: See "AddWaveFormAnalyzer.SignalConfigurationProperties.SignalConfiguration" on page 538

SIGNalconfig:SETup:COUNt?

Returns the number of lines defined in the signal configuration dialog.

Return values:
<Number>

Usage: Query only
Asynchronous command

Manual operation: See "AddWaveFormAnalyzer.SignalConfigurationProperties.SignalConfiguration" on page 538

SIGNalconfig:SETup:REMove <Index>

Removes the signal with the corresponding index.

Setting parameters:
<Index>

Usage: Setting only
Asynchronous command

Manual operation: See "Remove" on page 538

SIGNalconfig:SETup:SETTing<m>:PAMorder <PAMOrder>

Requires option R&S RTP-K135.

Selects the PAM order. You can select a value up to 8.

Suffix:
<m> 1..20
Selects the index of the configured source.

Parameters:
<PAMOrder> PAM2 | PAM3 | PAM4 | PAM5 | PAM6 | PAM7 | PAM8
*RST: PAM2

Usage: Asynchronous command

Manual operation: See "PAM order" on page 538

SIGNalconfig:SETup:PROPagate

Propagates the selected source to all inactive application measurements of eye analysis, embedding, advanced jitter and advanced noise. The source is selected with `SIGNalconfig:SETup:SOURce`.

Example:
```
SIGNalconfig:SETup:SOURce C1W1
// selects C1W1 as a source
SIGNalconfig:SETup:PROPagate
// propagates C1W1 to the inactive application measurements
```

Usage: Event
Asynchronous command

Manual operation: See "Propagate source" on page 539

SIGNalconfig:SETup:SETTing<m>:SERStandard <SerialStandard>

Sets the serial standard. Set `CUSTOM` to adjust the symbol rate manually.

Suffix:
<m> 1..20
Selects the index of the configured source.

Parameters:
<SerialStandard> See Table 13-2 for SCPI abbreviation of the various standards.
Set `CUSTOM` to adjust the symbol rate manually.

Usage: Asynchronous command

Manual operation: See "Technology, Serial standard" on page 535

SIGNalconfig:SETup:SETTing<m>:SOURce <Source>

Selects the source for the signal configuration for the selected index.

Suffix:
<m> 1..20
Selects the index of the configured source.

Parameters:
<Source> NONE | C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | C1W4 | C2W4 | C3W4 | C4W4 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2

*RST: NONE

Usage: Asynchronous command

SIGNalconfig:SETup:SETTing<m>:SYMBolrate <SymbolRate>

Sets/ displays the symbol rate. Most standards have a pre-dfeind symbol rate, see Technology and serial standard properties.

Suffix:
<m> 1..20
Selects the index of the configured source.

Parameters:
<SymbolRate> Range: 100 to 40E+9
Increment: 10
*RST: 1E+9
Default unit: Baud

Usage: Asynchronous command

Manual operation: See "Symbol rate" on page 538

SIGNalconfig:SETup:SOURce <Source>

Selects the source that is used for the symbol rate estimation. You can only select sources that has been enabled

You can start the estimation of the symbol rate with `SIGNalconfig:SETup:SREStimation` on page 1811

Parameters:

<Source> NONE | C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | C1W4 | C2W4 | C3W4 | C4W4 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2

Usage: Asynchronous command

Manual operation: See "Source" on page 535

SIGNalconfig:SETup:SREStimation

Starts a software algorithm for the automatic determination of the symbol rate for the source selected with `SIGNalconfig:SETup:SOURce`.

Example:

```
SIGNalconfig:SETup:SOURce C1W1
// selects C1W1 as a source
SIGNalconfig:SETup:SREStimation
// starts a symbol rate estimation for C1W1
```

Usage: Event
Asynchronous command

Manual operation: See "Estimate symbol rate" on page 538

26.17.2 Signal and reference levels for NRZ signals

- General reference level settings....1811
- Automatic configuration....1814
- Manual configuration....1816
- Hysteresis....1821
- Tube....1821
- Results....1823

26.17.2.1 General reference level settings

REFLevel<rl>:LDETection....1812
REFLevel<rl>:LMODe....1812
REFLevel<rl>:RELative:MODE....1812
REFLevel<rl>:USRLevel....1813

REFLevel<rl>:LDETection <Mode>

Defines whether the reference level is configured manually or automatically.

For automatic configuration, select the signal level to be used (see `REFLevel<rl>:AUTO:MODE` on page 1814).

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Mode> AUTO | MANual

Example: `REFLevel2:LDETection MANual`
Sets manual level configuration for Ch1Wfm1. C1W1 corresponds to suffix number 2.

Example: See: Section 26.3.2.2, "Setting reference levels", on page 1330

Usage: Asynchronous command

Manual operation: See "Level detection mode" on page 544

REFLevel<rl>:LMODe <Mode>

Defines whether the reference is configured using absolute or relative values.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Mode> ABS | REL

Example: `REFLevel2:LMODe ABS`
Sets definition of reference levels to absolute values for Ch1Wfm1. C1W1 corresponds to suffix number 2.

Example: See: "Manual reference level definition using relative values" on page 1330

Usage: Asynchronous command

Manual operation: See "Level mode" on page 547

REFLevel<rl>:RELative:MODE <Mode>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Mode> FIVE | TEN | TWENty | USER

FIVE
5/50/95

TEN
10/50/90

TWENty
20/50/80

USER
Set the reference levels to individual values
with `REFLevel<rl>:RELative:LOWer`, `REFLevel<rl>:RELative:MIDDle`, and `REFLevel<rl>:RELative:UPPer`.

Example: `REFL2:REL:MODE FIVE`
Reference levels for Ch1Wfm1: Lower reference level = 5% of high signal level, middle reference level = 50% of high signal level, upper reference level = 95% of high signal level

Example: See: "Manual reference level definition using relative values" on page 1330

Usage: Asynchronous command

Manual operation: See "Relative levels" on page 547

REFLevel<rl>:USRLevel <Mode>

Defines whether the user-defined signal levels or user-defined reference levels are used for the measurements.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Mode> USIGnal | UREF

USIGnal
The high and low signal levels are defined by the user.

UREF
The reference levels are defined by the user.

Example: `REFLevel2:USRLevel UREF`
Sets user-defined reference levels to be used for Ch1Wfm1. C1W1 corresponds to suffix number 2.

Example: See: "Manual reference level definition using absolute values" on page 1330

Usage: Asynchronous command

Manual operation: See "User level" on page 548

26.17.2.2 Automatic configuration

REFLevel<rl>:AUTO:MODE 1814
REFLevel<rl>:AUTO[:STATe] 1815
REFLevel<rl>:AUTO:COUNt 1815

REFLevel<rl>:AUTO:MODE <Mode>

Defines the high and low signal levels from which the reference levels are derived.

This setting is only available for automatic reference level mode (see `REFLevel<rl>:LDETection` on page 1812).

Suffix:

<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:

<Mode> AUTO | PPRobability | MPRobability | ABSolutepeak | UPLM | UMLP | UALM | UMLA

AUTO
Auto select absolute probability: most suitable signal levels for the selected measurement

PPRobability
Peak probability: signal levels with the highest probability value

MPRobability
Mean probability: signal levels with mean probability

ABSolutepeak
Absolute peak: absolute peak signal levels

UPLM
Upper absolute peak, lower mean probability: high signal level is the upper absolute peak, low signal level is the level with the mean probability in the lower half of the histogram.

UMLP
Upper mean probability, lower absolute peak: high signal level is the level with mean probability in the upper half of the histogram, low signal level is the lower absolute peak.

UALM
Upper absolute peak, lower manual value: high signal level is the maximum result value of the amplitude measurement; low signal level is manually set using `REFLevel<rl>:RELative:LOWer`.

UMLA
Upper manual, lower absolute peak: The upper signal level is set manually using `REFLevel<rl>:RELative:UPPer`. The lower level is the minimum result value of the amplitude measurement.

Example: `REFLevel5:AUTO:MODE PPRobability`
Sets the automatic reference level mode for Ch2Wfm1 to "Peak probability". C2W1 corresponds to suffix number 5.

Example: See: "Automatic level detection, peak probability" on page 1331

Usage: Asynchronous command

Manual operation: See "Auto level mode" on page 544

REFLevel<rl>:AUTO[:STATe] <Value>

Enables averaging over several histograms to determine the reference levels. The number of histograms to consider is defined using `REFLevel<rl>:AUTO:COUNt`.

This function is only available in automatic reference level mode (see `REFLevel<rl>:LDETection` on page 1812).

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value> OFF | ON

Usage: Asynchronous command

Manual operation: See "Histogram averaging" on page 545

REFLevel<rl>:AUTO:COUNt <Value>

Defines the number of histograms from which the average is calculated.

Prerequisites:

- `REFLevel<rl>:AUTO[:STATe]` is set to `ON`
- `REFLevel<rl>:LDETection` on page 1812 is set to `AUTO`

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Average Count" on page 545

26.17.2.3 Manual configuration

REFLevel<rl>:ABSolute:HIGH 1816
REFLevel<rl>:ABSolute:LOW 1816
REFLevel<rl>:ABSolute:TDIStance 1817
REFLevel<rl>:ABSolute:BDIStance 1817
REFLevel<rl>:ABSolute:MLEVel 1818
REFLevel<rl>:ABSolute:ULEVel 1818
REFLevel<rl>:ABSolute:LLEVel 1819
REFLevel<rl>:RELative:UPPer 1819
REFLevel<rl>:RELative:MIDDle 1820
REFLevel<rl>:RELative:LOWer 1820

REFLevel<rl>:ABSolute:HIGH <Value>

The signal value that represents a high level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Example: `REFLevel2:ABSolute:HIGH 0.015`
Sets the high signal level for Ch1Wfm1 to 15 mV. C1W1 corresponds to suffix number 2.

Usage: Asynchronous command

Manual operation: See "High" on page 545

REFLevel<rl>:ABSolute:LOW <Value>

The signal value that represents a low level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Example: `REFLevel2:ABSolute:Low 0.0015`
Sets the low signal level forCh1Wfm1 to 1.5 mV. C1W1 corresponds to suffix number 2.

Usage: Asynchronous command

Manual operation: See "Low" on page 545

REFLevel<rl>:ABSolute:TDIStance <Value>

The distance between the high signal level and the upper reference level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Example: `REFLevel2:ABSolute:TDIStance 0.0002`
Sets the top distance for Ch1Wfm1 to 0.2 mV. C1W1 corresponds to suffix number 2.

Example: See: "Manual reference level definition using absolute values" on page 1330

Usage: Asynchronous command

Manual operation: See "Top distance" on page 548

REFLevel<rl>:ABSolute:BDIStance <Value>

The distance between the lower reference level and the low signal value.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Example: `REFLevel2:ABSolute:BDIStance 0.0002`
Sets the bottom distance for Ch1Wfm1 to 0.2 mV. C1W1 corresponds to suffix number 2.

Example: See: "Manual reference level definition using absolute values" on page 1330

Usage: Asynchronous command

Manual operation: See "Bottom distance" on page 548

REFLevel<rl>:ABSolute:MLEVel <Value>

For user signal level selection, the level is the middle level between high and low signal level. The value is adjusted automatically if you change the high or low signal levels. Vice versa, if you change the middle level, the high and low signal levels are adjusted.

For user reference level selection, the level is the middle level between upper and lower reference level. The value is adjusted automatically if you change the upper or lower reference levels. Vice versa, if you change the middle level, the upper and lower reference levels are adjusted.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Example: `REFLevel2:ABSolute:MLEVel 0.05`
Sets the middle signal level for Ch1Wfm1 to 50 mV. C1W1 corresponds to suffix number 2.

Example: See: "Manual reference level definition using absolute values" on page 1330

Usage: Asynchronous command

Manual operation: See "Middle" on page 548

REFLevel<rl>:ABSolute:ULEVel <Value>

The upper reference level, required e.g. to determine a rise.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Example: `REFLevel2:ABSolute:ULEVel 0.01`
Sets the upper reference level for Ch1Wfm1 to 10 mV. C1W1 corresponds to suffix number 2.

Example: See: "Manual reference level definition using absolute values" on page 1330

Usage: Asynchronous command

Manual operation: See "Upper level" on page 548

REFLevel<rl>:ABSolute:LLEVel <Value>

The lower reference level, required e.g. to determine a fall.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Example: `REFLevel2:ABSolute:LLEVel 0.001`
Sets the lower reference level for Ch1Wfm1 to 1 mV. C1W1 corresponds to suffix number 2.

Example: See: "Manual reference level definition using absolute values" on page 1330

Usage: Asynchronous command

Manual operation: See "Lower level" on page 548

REFLevel<rl>:RELative:UPPer <Value>

Sets the upper relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value> Percentage of the high signal level.

Example: `REFLevel8:RELative:LOWer 85`
Sets the upper reference level for Ch3Wfm1 to 85 %. Ch3Wfm1 corresponds to suffix number 8.

Example: See: "Manual reference level definition using relative values" on page 1330

Usage: Asynchronous command

Manual operation: See "Upper ref level, Middle ref level, Lower ref level" on page 547

REFLevel<rl>:RELative:MIDDle <Value>

Sets the middle relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value> Percentage of the high signal level.

Example: `REFLevel8:RELative:MIDDle 50`
Sets the middle reference level for Ch3Wfm1 to 50 %. Ch3Wfm1 corresponds to suffix number 8.

Example: See: "Manual reference level definition using relative values" on page 1330

Usage: Asynchronous command

Manual operation: See "Upper ref level, Middle ref level, Lower ref level" on page 547

REFLevel<rl>:RELative:LOWer <Value>

Sets the lower relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value> Percentage of the high signal level.

Example: `REFLevel8:RELative:LOWer 15`
Sets the lower reference level for Ch3Wfm1 to 15 %. Ch3Wfm1 corresponds to suffix number 8.

Example: See: "Manual reference level definition using relative values" on page 1330

Usage: Asynchronous command

Manual operation: See "Upper ref level, Middle ref level, Lower ref level" on page 547

26.17.2.4 Hysteresis

REFLevel<rl>:RELative:HYSTeresis <Value>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 549

26.17.2.5 Tube

REFLevel<rl>:RELative:OTUBe....1821
REFLevel<rl>:RELative:ITUBe....1822
REFLevel<rl>:ABSolute:TOTube....1822
REFLevel<rl>:ABSolute:TITube....1822
REFLevel<rl>:ABSolute:BITube....1823
REFLevel<rl>:ABSolute:BOTube....1823

REFLevel<rl>:RELative:OTUBe <Value>

Defines a percentage of the signal level by which the absolute signal level may be larger than the high signal level or lower than the low signal level to be considered high or low, respectively.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Relative outer" on page 550

REFLevel<rl>:RELative:ITUBe <Value>

Defines a percentage of the signal level by which the absolute signal level may be higher than the low signal level or lower than the high signal level to be considered low or high, respectively.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Relative inner" on page 550

REFLevel<rl>:ABSolute:TOTube <Value>

Defines an area above the high signal level which is still considered to be high level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Top outer" on page 549

REFLevel<rl>:ABSolute:TITube <Value>

Defines an area beneath the high signal level which is still considered to be high level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Top inner" on page 549

REFLevel<rl>:ABSolute:BITube <Value>

Defines an area above the low signal level which is still considered to be low level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Bottom inner" on page 549

REFLevel<rl>:ABSolute:BOTube <Value>

Defines an area beneath the low signal level which is still considered to be low level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Bottom outer" on page 550

26.17.2.6 Results

MEASurement<mg>:REFLevel:RESult:LOWer? 1823
MEASurement<mg>:REFLevel:RESult:MIDDle? 1823
MEASurement<mg>:REFLevel:RESult:UPPer? 1823
MEASurement<mg>:REFLevel:RESult:SIGLow? 1824
MEASurement<mg>:REFLevel:RESult:SIGHigh? 1824
MEASurement<mg>:REFLevel:RESult:BINNer? 1824
MEASurement<mg>:REFLevel:RESult:BOUTer? 1824
MEASurement<mg>:REFLevel:RESult:TINNer? 1825
MEASurement<mg>:REFLevel:RESult:TOUTer? 1825

MEASurement<mg>:REFLevel:RESult:LOWer?
MEASurement<mg>:REFLevel:RESult:MIDDle?
MEASurement<mg>:REFLevel:RESult:UPPer?

Return the lower, middle, and upper reference level, respectively.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<Upper> Range: -100E+24 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:REFLevel:RESult:SIGLow?
MEASurement<mg>:REFLevel:RESult:SIGHigh?

Return the signal value that represents a low or high level, respectively.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<SignalHigh> Range: -100E+24 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:REFLevel:RESult:BINNer?

Returns the area above the low signal level which is still considered to be low level.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<BottomInner> Range: -100E+24 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Bottom inner" on page 549

MEASurement<mg>:REFLevel:RESult:BOUTer?

Returns the area beneath the low signal level which is still considered to be low level.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<BottomOuter> Range: -100E+24 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Bottom outer" on page 550

MEASurement<mg>:REFLevel:RESult:TINNer?

Returns the area beneath the high signal level which is still considered to be high level.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<TopInner> Range: -100E+24 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Top inner" on page 549

MEASurement<mg>:REFLevel:RESult:TOUTer?

Returns the area above the high signal level which is still considered to be high level.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Return values:
<TopOuter> Range: -100E+24 to 100E+24
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Top outer" on page 549

26.17.3 Signal anad reference levels for PAM-N signals

Requires option R&S RTP-K135.

REFLevel<rl>:PAMReference:LOWer....1826
REFLevel<rl>:PAMReference:LVLDef....1826
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSLower....1827
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSMiddle....1827
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSupper....1827
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELLower....1828
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELMiddle....1828
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELupper....1829
REFLevel<rl>:PAMReference:MIDDle....1829
REFLevel<rl>:PAMReference:PRESet....1830
REFLevel<rl>:PAMReference:RELLevel....1830
REFLevel<rl>:PAMReference:UPPer....1830
REFLevel<rl>:PAMSignal:ESTimate....1831
REFLevel<rl>:PAMSignal:LEVel<n>....1831
REFLevel<rl>:PAMSignal:LVLalgorithm....1832

REFLevel<rl>:PAMReference:LOWer <DefaultLowRefLev>

Sets the lower relative reference level if `REFLevel<rl>:PAMReference:RELLevel` is set to `USER`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<DefaultLowRefLev> Range: 0 to 100
Increment: 1
*RST: 10
Default unit: %

Manual operation: See "Upper ref level, Middle ref level, Lower ref level" on page 553

REFLevel<rl>:PAMReference:LVLDef <RefLevMd>

Defines whether the reference is configured using absolute or relative values.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<RefLevMd> ABS | REL
*RST: REL

Manual operation: See "Referenc level mode" on page 552

REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSLower
<AbsLowRefLev>

Sets the lower absolute reference level if `REFLevel<rl>:PAMReference:LVLDef` is set to `ABS`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

<n> 1..7
Selects the level jump height

<o> *
Selects the threshold

Parameters:
<AbsLowRefLev>

Manual operation: See "Level jump height dependent reference levels" on page 553

REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSMiddle
<AbsMidRefLev>

Sets the middle absolute reference level if `REFLevel<rl>:PAMReference:LVLDef` is set to `ABS`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

<n> 1..7
Selects the level jump height

<o> *
Selects the threshold

Parameters:
<AbsMidRefLev>

Manual operation: See "Level jump height dependent reference levels" on page 553

REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSupper
<AbsUppRefLev>

Sets the upper absolute reference level if `REFLevel<rl>:PAMReference:LVLDef` is set to `ABS`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

<n> 1..7
Selects the level jump height

<o> *
Selects the threshold

Parameters:
<AbsUppRefLev>

Manual operation: See "Level jump height dependent reference levels" on page 553

REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELLower
<RelLowRefLev>

Sets the lower relative reference level if `REFLevel<rl>:PAMReference:LVLDef` is set to `REL`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

<n> 1..7
Selects the level jump height

<o> *
Selects the threshold

Parameters:
<RelLowRefLev>

Manual operation: See "Level jump height dependent reference levels" on page 553

REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELMiddle
<RelMidRefLev>

Sets the middle relative reference level if `REFLevel<rl>:PAMReference:LVLDef` is set to `REL`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

<n> 1..7
Selects the level jump height

<o> *
Selects the threshold

Parameters:
<RelMidRefLev>

Manual operation: See "Level jump height dependent reference levels" on page 553

REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELupper <RelUppRefLev>

Sets the upper relative reference level if `REFLevel<rl>:PAMReference:LVLDef` is set to `REL`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

<n> 1..7
Selects the level jump height

<o> *
Selects the threshold

Parameters:
<RelUppRefLev>

Manual operation: See "Level jump height dependent reference levels" on page 553

REFLevel<rl>:PAMReference:MIDDle <DefaultMidRefLev>

Sets the middle relative reference level if `REFLevel<rl>:PAMReference:RELLevel` is set to `USER`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<DefaultMidRefLev> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Upper ref level, Middle ref level, Lower ref level" on page 553

REFLevel<rl>:PAMReference:PRESet

Presets the the level jump height dependent reference levels according to the value of the selected `REFLevel<rl>:PAMReference:RELLevel`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Usage: Event

Manual operation: See "Preset" on page 553

REFLevel<rl>:PAMReference:RELLevel <DefaultRelLevs>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<DefaultRelLevs> FIVE | TEN | TWENty | USER

FIVE
5/50/95

TEN
10/50/90

TWENty
20/50/80

USER
Set the reference levels to individual values with `REFLevel<rl>:PAMReference:LOWer`, `REFLevel<rl>:PAMReference:MIDDle`, and `REFLevel<rl>:PAMReference:UPPer`.

*RST: TEN

Manual operation: See "Preset levels" on page 552

REFLevel<rl>:PAMReference:UPPer <DefaultUppRefLev>

Sets the upper relative reference level if `REFLevel<rl>:PAMReference:RELLevel` is set to `USER`.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:
<DefaultUppRefLev> Range: 0 to 100
Increment: 1
*RST: 90
Default unit: %

Manual operation: See "Upper ref level, Middle ref level, Lower ref level" on page 553

REFLevel<rl>:PAMSignal:ESTimate

Starts a software algorithm for the automatic determination of the signal level.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Usage: Event
Asynchronous command

Manual operation: See "Estimate signal levels" on page 551

REFLevel<rl>:PAMSignal:LEVel<n> <SignalLevel>

Sets the signal levels for the discrete amplitudes that the PAM signal can take based on the digital data being transmitted. The number of signal levels available ,0..7, depends on the PAM order of the signal.

Suffix:
<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

<n> 0..7

Parameters:
<SignalLevel>

Example: The following example sets the signal levels 0 to 3.

```
REFLevel1:PAMSignal:LEVel0 -0.124
REFLevel1:PAMSignal:LEVel1 -0.024
REFLevel1:PAMSignal:LEVel2 0.024
REFLevel1:PAMSignal:LEVel3 0.124
```

Manual operation: See "Signal levels" on page 551

REFLevel<rl>:PAMSignal:LVLalgorithm <LevDetectAlgorithm>

Selects the algorithm that defines how the signal levels are detected.

Suffix:

<rl> Valid suffix numbers: 2 to 21, 61 to 68, 108 to 118, 151 to 157, 173 to 179
Source waveform of the measurement, see Section 26.4.1, "Waveform suffix", on page 1343.

Parameters:

<LevDetectAlgorithm>KMEans

*RST: KMEans

Manual operation: See "Level detection algorithm" on page 551

26.18 Protocols

- Configuration settings for all serial protocols 1833
- Trigger Settings for all serial protocols 1837
- I²C (option R&S RTP-K1) 1839
- I3C (option R&S RTP-K45) 1875
- SPI (option R&S RTP-K1) 1903
- UART/RS-232/RS-422/RS-485 (option R&S RTP-K2) 1924
- CAN (option R&S RTP-K3/K9) 1935
- CAN-XL (option R&S RTP-K77) 1982
- LIN (option R&S RTP-K3) 2017
- MIL-1553 (option R&S RTP-K6) 2048
- ARINC 429 (option R&S RTP-K7) 2078
- Ethernet 10BASE-T and 100BASE-TX (option R&S RTP-K8) 2096
- 10BASE-T1S (option R&S RTP-K56) 2120
- Ethernet 100BASE-T1 (option R&S RTP-K57) 2146
- Ethernet 1000BASE-T1 (option R&S RTP-K58) 2177
- RFFE (option R&S RTP-K40) 2210
- D-PHY (option R&S RTP-K42) 2244
- M-PHY (option R&S RTP-K44) 2278
- Custom: manchester / NRZ (option R&S RTP-K50) 2339
- 8B/10B (option R&S RTP-K52) 2385
- MDIO (option R&S RTP-K55) 2402
- USB (option R&S RTP-K60) 2418
- USB 3.1 (option R&S RTP-K61/K62) 2462
- USBPD (option R&S RTP-K63) 2501
- Space wire (option R&S RTP-K65) 2527
- PCIe (option R&S RTPK72/K73) 2546
- DDR (option R&S RTP-K91/K93/K94/K95) 2598

26.18.1 Configuration settings for all serial protocols

BUS<b>:TYPE 1833
BUS<b>[:STATe] 1833
BUS<b>:SETReflevels 1834
BUS<b>:FAUToset 1834
BUS<b>:RESult 1834
BUS<b>:THReshold 1835
BUS<b>:FORMat 1835
BUS<b>:NEWList 1835
BUS<b>:SYMBols 1835
BUS<b>:ZCOupling 1836
DISPlay:RESultboxes:DEPosition 1836
BUS<b>:EXPResult:DETail 1836
BUS<b>:EXPResult:SAVE 1837
BUS<b>:EXPResult:TIME 1837

BUS<b>:TYPE <Type>

Defines the bus or protocol type for analysis. The type of available buses depends on the installed options.

Suffix:

<b> 1..4
Selects the serial bus.

Parameters:

<Type> I2C | SPI | UART | CAN | CANFd | LIN | MILS1553 | MILStd1553 | ARIN429 | ARINc429 | SWIRe | USB | USB3 | USBPD | RFFE | DPHY | MPHY | PCIE | ETHernet | MDIO | HBTO | TBTO | EBTB | CMSB | I3C | CANXL | TNOS | DDR

MILS1553 = MILStd1553: specification MIL-STD-1553
ARIN429 = ARINc429: specification ARINC 429
HBTO: Ethernet 100BASE-T1
TBTO: Ethernet 1000BASE-T1
TNOS: automotive Ethernet 10BASE-T1S
CMSB: custom decode serial bus
EBTB: 8b/10b general decoding
SWIRe: SpaceWire

*RST: I2C

Usage: Asynchronous command

Manual operation: See "Protocol" on page 557

BUS<b>[:STATe] <State>

Enables the decoding of the specified bus.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Decode" on page 557

BUS<b>:SETReflevels

Executes the measurement of reference levels and sets the thresholds to the middle reference level of the measured amplitude.

Suffix:
<b> 1..4
Selects the serial bus.

Usage: Event
Asynchronous command

Manual operation: See "Threshold" on page 569

BUS<b>:FAUToset

Starts software algorithms for determining the signal threshold levels and bitrate.

Suffix:
<b> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Threshold" on page 569

BUS<b>:RESult <ShowResultTable>

Opens a table with decoded data of the serial signal. The function affects all protocol types and requires the option for the analyzed protocol.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ShowResultTable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show table" on page 559

BUS<b>:THReshold <ShwThresLines>

If ON, the threshold levels are displayed in the diagram.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ShwThresLines> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show thresholds" on page 569

BUS<b>:FORMat <DataFormat>

Sets the number format for decoded data values of the indicated serial bus. It defines the format in the decode table, and in the combs of the decoded signal on the screen.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG
ASCII = ASCii
USIG = unsigned
*RST: HEX

Manual operation: See "Data format" on page 559

BUS<b>:NEWList <FileName>

Loads a label list file.

Suffix:
<b> 1..4
Selects the serial bus.

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
BUS1:NEWList 'C:\Protocols\CAN.csv'
BUS1:SYMBols ON
```

Usage: Setting only

Manual operation: See "Load symbols" on page 559

BUS<b>:SYMBols <UseTranslation>

Activates the lable list to be used for decoding.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<UseTranslation> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show symbols" on page 559

BUS<b>:ZCOupling <ZoomCoupling>

If enabled, the protocol decode zoom and result table are synchronized.

Suffix:
<b> 1..4

Parameters:
<ZoomCoupling> OFF | ON
*RST: OFF

Manual operation: See "Zoom coupling" on page 559

DISPlay:RESultboxes:DEPosition <DecodePosition>

Defines the position of the protocol decode result table on the screen.

Parameters:
<DecodePosition> PREV | FLOA | DOCK

PREV
Preview: result icon on the sidebar.

FLOA
Floating result box in front of the diagrams.

DOCK
Docked: fixed tab below the diagrams.

*RST: DOCK

Usage: Asynchronous command

Manual operation: See "Table position" on page 94

BUS<b>:EXPResult:DETail <XptResDetails>

Includes the detailed results for all frames for the exported protocol results.

Suffix:
<b> 1..4

Parameters:
<XptResDetails> OFF | ON
*RST: ON

Manual operation: See "Include details" on page 563

BUS<b>:EXPResult:SAVE <FileName>

Saves the selected results to the indicated file.

Suffix:
<b> 1..4

Setting parameters:
<FileName>

Usage: Setting only

Manual operation: See "Export to file" on page 563

BUS<b>:EXPResult:TIME <XptResTim>

Includes the frame timing for the exported protocol results.

Suffix:
<b> 1..4

Parameters:
<XptResTim> OFF | ON
*RST: ON

Manual operation: See "Include frame timing" on page 563

26.18.2 Trigger Settings for all serial protocols

The following commands are available for all serial protocols that have a protocol trigger.

TRIGger<t>:SOURce[:SELect] 1837
TRIGger<t>:SOURce:SBSelect 1839
BUS<b>:TYPE 1839

TRIGger<t>:SOURce[:SELect] <SourceDetailed>

Selects the source of the trigger signal.

Suffix:

<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger
Available values depend on the selected trigger source. For input channels CHAN1...4, a trigger sequence can be configured.
For all other trigger sources, only suffix 1 is allowed.

Parameters:

<SourceDetailed> CHAN1 | CHANnel1 | CHAN2 | CHANnel2 | CHAN3 | CHANnel3 | CHAN4 | CHANnel4 | EXTernanalog | SBUS | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | LOGIC | MSOB1 | MSOB2 | MSOB3 | MSOB4 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | LINE

CHAN1 = CHANnel1, CHAN2 = CHANnel2, CHAN3 = CHANnel3, CHAN4 = CHANnel4
Input channels

EXTernanalog
External analog signal connected to the External Trigger Input. For this source, only the analog edge trigger is available.

LINE
The instrument generates the trigger from the AC power input and synchronizes the signal to the AC power frequency.

SBUS
Serial bus

D0...D15
Digital channels (option R&S RTP-B1)
See also: Section 26.19.4, "Trigger settings for digital signals and parallel buses", on page 2633

LOGIc
Logic combination of digital channels, used as trigger source (option R&S RTP-B1)

MSOB1 | MSOB2 | MSOB3 | MSOB4
Parallel bus (option R&S RTP-B1)

Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4
Input channels of R&S RT-ZVCmulti-channel power probe. Only available in the A-trigger with trigger type EDGE.

DIFF1 | DIFF2 | COMMON1 | COMMON2
Differential signals

*RST: CHAN1

Usage: Asynchronous command

Manual operation: See "[Source]" on page 38

TRIGger<t>:SOURce:SBSelect <SerialBus>

Selects the serial bus to be triggered on.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<SerialBus> SBUS1 | SBUS2 | SBUS3 | SBUS4

Usage: Asynchronous command

Firmware/software: Version 2.70

Manual operation: See "Serial bus" on page 571

BUS<b>:TYPE <Type>

Defines the bus or protocol type for analysis. The type of available buses depends on the installed options.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Type> I2C | SPI | UART | CAN | CANFd | LIN | MILS1553 | MILStd1553 | ARIN429 | ARINc429 | SWIRe | USB | USB3 | USBPD | RFFE | DPHY | MPHY | PCIE | ETHernet | MDIO | HBTO | TBTO | EBTB | CMSB | I3C | CANXL | TNOS | DDR

MILS1553 = MILStd1553: specification MIL-STD-1553
ARIN429 = ARINc429: specification ARINC 429
HBTO: Ethernet 100BASE-T1
TBTO: Ethernet 1000BASE-T1
TNOS: automotive Ethernet 10BASE-T1S
CMSB: custom decode serial bus
EBTB: 8b/10b general decoding
SWIRe: SpaceWire

*RST: I2C

Usage: Asynchronous command

Manual operation: See "Protocol" on page 557

26.18.3 I²C (option R&S RTP-K1)

- Configuration....1840
- Trigger....1842
- Decode results....1850
- I²C search settings....1858
- I²C search results....1868

26.18.3.1 Configuration

BUS<b>:I2C:SCL:SOURce 1840
BUS<b>:I2C:SDA:SOURce 1840
BUS<b>:I2C:SCL:THReshold 1841
BUS<b>:I2C:SDA:THReshold 1841
BUS<b>:I2C:TECHnology 1841
BUS<b>:I2C:RWBit 1842

BUS<b>:I2C:SCL:SOURce <SCLSource>

Sets the waveform of the clock line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SCLSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for data and clock lines.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: C2W1

Usage: Asynchronous command

Manual operation: See "SDA, SCL" on page 568

BUS<b>:I2C:SDA:SOURce <SDASource>

Sets the waveform of the data line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SDASource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for data and clock lines.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "SDA, SCL" on page 568

BUS<b>:I2C:SCL:THReshold <SCLThreshold>

Sets a user-defined threshold value for the clock line.

Alternatively, you can set the threshold according to the signal technology with `BUS<b>:I2C:TECHnology`.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SCLThreshold> User-defined clock threshold

Range: -12 to 12
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "Threshold" on page 569

BUS<b>:I2C:SDA:THReshold <SDAThreshold>

Sets a user-defined threshold value for the data line.

Alternatively, you can set the threshold according to the signal technology with `BUS<b>:I2C:TECHnology`.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SDAThreshold> User-defined data threshold

Range: -12 to 12
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "Threshold" on page 569

BUS<b>:I2C:TECHnology <Technology>

Sets the threshold voltage clock and data lines as defined for various signal technologies.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual

V15 | V25 | V165 | V125 | V09 | V38 | V20 | V0
1.5 V, 2.5 V, 1.65 V ... respectively

VM13
-1.3 V (negative value)

MANual
Manual setting of user-defined values with `BUS<b>:I2C:SCL:THReshold` and `BUS<b>:I2C:SDA:THReshold`.

*RST: V165

Manual operation: See "Threshold" on page 569

BUS<b>:I2C:RWBit <BusConfig>

Defines if the R/W bit of a 7-bit address is considered separately or as part of the address. 10-bit addresses are not affected. The setting defines which address lengths are available with `TRIGger<t>:I2C:AMODe`.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<BusConfig> SEParate | INADdress

SEParate
7-bit address and separate R/W bit.

INADdress
8-bit address with R/W bit included.

*RST: SEParate

Manual operation: See "R/W bit" on page 568

26.18.3.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:I2C:TYPE 1843
TRIGger<t>:I2C:ACCess 1843
TRIGger<t>:I2C:ADNack 1844
TRIGger<t>:I2C:DWNack 1844
TRIGger<t>:I2C:DRNack 1844
TRIGger<t>:I2C:AMODe 1845
TRIGger<t>:I2C:ACONdition 1845
TRIGger<t>:I2C:ADDRess 1846
TRIGger<t>:I2C:ADDTo 1846
TRIGger<t>:I2C:ADOR<n>:ENABle 1846

TRIGger<t>:I2C:ADOR<n>:ADRType....1847
TRIGger<t>:I2C:ADOR<n>[:VALue]....1847
TRIGger<t>:I2C:ADOR<n>:RWBit....1847
TRIGger<t>:I2C:DPOPerator....1848
TRIGger<t>:I2C:DPOSition....1848
TRIGger<t>:I2C:DPTO....1848
TRIGger<t>:I2C:DCONdition....1849
TRIGger<t>:I2C:DMIN....1849
TRIGger<t>:I2C:DMAX....1849

TRIGger<t>:I2C:TYPE <Type>

Selects the trigger type for I²C analysis.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<Type> STARt | REPStart | STOP | NACK | ADDRess | ADOR | ADAT

STARt
Start condition

REPStart
Repeated start - the start condition occurs without previous stop condition.

NACK
Missing acknowledge bit. To localize specific missing acknowledge bits, use `TRIGger<t>:I2C:ADNack`, `TRIGger<t>:I2C:DWNack`, and `TRIGger<t>:I2C:DRNack`.

ADDRess
Triggers on one specific address

ADOR
Triggers on an OR combination with up to four four address conditions.

ADAT
Triggers on a combination of address and data condition.

STOP
Stop condition, end of frame

*RST: STARt

Usage: Asynchronous command

Manual operation: See "Trigger type" on page 571

TRIGger<t>:I2C:ACCess <RWBitAddress>

Sets the trigger condition for the R/W bit - the transfer direction of the data.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<RWBitAddress> READ | WRITe | EITHer

EITHer
Transfer direction is not relevant.

*RST: EITHer

Usage: Asynchronous command

Manual operation: See "R/W bit" on page 574

TRIGger<t>:I2C:ADNack <AddressNack>

Triggers if the address acknowledge bit is missing - no slave recognizes the address.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<AddressNack> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 573

TRIGger<t>:I2C:DWNack <DataWriteNack>

Triggers if a date acknowledge bit is missing - the addressed slave does not accept the data.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataWriteNack> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 573

TRIGger<t>:I2C:DRNack <DataReadNack>

Triggers on the end of the read process when the master reads data from the slave. This Nack is sent according to the protocol definition, it is not an error.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataReadNack> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 573

TRIGger<t>:I2C:AMODe <AddressType>

Sets the address length. The setting affects the address input with `TRIGger<t>:I2C:ADDRess` and `TRIGger<t>:I2C:ADDTo`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<AddressType> BIT7 | BIT7_RW | BIT10 | ANY

BIT7
Enter the 7 address bits. Only available if `BUS<b>:I2C:RWBitSEParate` is set.

BIT7_RW
Enter 7 address bits and the R/W bit. Only available if `BUS<b>:I2C:RWBitINADdress` is set.

BIT10
10-bit address

ANY
Only available for trigger type "Address + data" (`TRIGger<t>:I2C:TYPE ADAT`). Used to trigger on data only, regardless of the address.

*RST: BIT7

Usage: Asynchronous command

Manual operation: See "Adress Type" on page 574

TRIGger<t>:I2C:ACONdition <AddressOperator>

Sets the operator to set a specific address or an address range. The address values are set with `TRIGger<t>:I2C:ADDRess` and `TRIGger<t>:I2C:ADDTo`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<AddressOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

TRIGger<t>:I2C:ADDRess <Address>

Triggers on the specified slave address, or sets the the start value of an address range depending on the condition set with `TRIGger<t>:I2C:ACONdition`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Address> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Manual operation: See "Address" on page 574

TRIGger<t>:I2C:ADDTo <AddressTo>

Sets the the end value of an address range if the condition is set to an address range with `TRIGger<t>:I2C:ACONdition`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<AddressTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Usage: Asynchronous command

Manual operation: See "Address" on page 574

TRIGger<t>:I2C:ADOR<n>:ENABle <UseAddress>

Includes the indicated ADOR address in the "address OR" trigger condition.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

<n> 1..4
Index of the address in an "address OR" condition (OR slot)

Parameters:
<UseAddress> OFF | ON
*RST: OFF

Manual operation: See "OR x" on page 575

TRIGger<t>:I2C:ADOR<n>:ADRType <AddressType>

Sets the address type for the indicated ADOR address in the "address OR" trigger condition.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

<n> 1..4
Index of the address in an "address OR" condition (OR slot)

Parameters:
<AddressType> BIT7 | BIT7_RW | BIT10
*RST: BIT7

Manual operation: See "Adress Type" on page 574

TRIGger<t>:I2C:ADOR<n>[:VALue] <Address>

Defines the address pattern of the indicated ADOR address in the "address OR" trigger condition.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

<n> 1..4
Index of the address in an "address OR" condition (OR slot)

Parameters:
<Address> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Manual operation: See "Address" on page 574

TRIGger<t>:I2C:ADOR<n>:RWBit <RWBit>

Defines the R/W bit of the indicated ADOR address in the "address OR" trigger condition.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

<n> 1..4
Index of the address in an "address OR" condition (OR slot)

Parameters:
<RWBit> UNDefined | READ | WRITe | EITHer
UNDefined
Return value only
*RST: EITHer

Manual operation: See "R/W bit" on page 574

TRIGger<t>:I2C:DPOPerator <DataPosOperator>

Sets the operator for the data position. You can defined an exact position, or a position range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPosOperator> ANY | OFF | EQUal | GETHan | INRange | RANGe

ANY = OFF
The position of the required pattern is not relevant.

EQUal | GETHan
Equal, Greater or equal than. These conditions require one data position to be set with `TRIGger<t>:I2C:DPOSition`.

INRange = RANGe
In range: Set the minimum and maximum value of the range with `TRIGger<t>:I2C:DPOSition` and `TRIGger<t>:I2C:DPTO`.

*RST: ANY

Manual operation: See "Position" on page 575

TRIGger<t>:I2C:DPOSition <DataPosition>

Sets the number of data bytes before the first byte of interest. These bytes are ignored.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPosition> The index 0 is associated with the first data byte.

Range: 0 to 4095
Increment: 1
*RST: 0

Manual operation: See "Position" on page 575

TRIGger<t>:I2C:DPTO <DataPositionTo>

Defines the last byte of interest, if `TRIGger<t>:I2C:DPOPerator` is set to `RANGe`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<DataPositionTo> Range: 0 to 4095
Increment: 1
*RST: 0

Manual operation: See "Position" on page 575

TRIGger<t>:I2C:DCONdition <DataOperator>

Sets the operator to set a specific data value or a data range.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Manual operation: See "Data" on page 575

TRIGger<t>:I2C:DMIN <Data>

Specifies the data bit pattern, or sets the the start value of a data pattern range.. Enter the bytes in msb first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<Data> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Usage: Asynchronous command

Manual operation: See "Data" on page 575

TRIGger<t>:I2C:DMAX <DataTo>

Sets the the end value of an data range if `TRIGger<t>:I2C:DCONdition` is set to `INRange` or `OORange`.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<DataTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Usage: Asynchronous command

Manual operation: See "Data" on page 575

26.18.3.3 Decode results

To load and acivate a label list, use:

- `BUS<b>:NEWList` on page 1835
- `BUS<b>:SYMBols` on page 1835

BUS<b>:I2C:FRAMe<fr>:DATA? 1850
BUS<b>:I2C:FCOunt? 1851
BUS<b>:I2C:FRAMe<fr>:AACCess? 1851
BUS<b>:I2C:FRAMe<fr>:ACCess? 1851
BUS<b>:I2C:FRAMe<fr>:ACOMplete? 1852
BUS<b>:I2C:FRAMe<fr>:ADBStart? 1852
BUS<b>:I2C:FRAMe<fr>:ADDRess? 1852
BUS<b>:I2C:FRAMe<fr>:ADEVice? 1853
BUS<b>:I2C:FRAMe<fr>:AMODe? 1853
BUS<b>:I2C:FRAMe<fr>:ASTart? 1853
BUS<b>:I2C:FRAMe<fr>:BITRate? 1854
BUS<b>:I2C:FRAMe<fr>:RWBStart? 1854
BUS<b>:I2C:FRAMe<fr>:STATus? 1854
BUS<b>:I2C:FRAMe<fr>:STARt? 1855
BUS<b>:I2C:FRAMe<fr>:STOP? 1855
BUS<b>:I2C:FRAMe<fr>:SYMBol? 1856
BUS<b>:I2C:FRAMe<fr>:BCOunt? 1856
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:ACCess? 1856
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:ACKStart? 1857
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:COMPlete? 1857
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:STARt? 1857
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:VALue? 1858

BUS<b>:I2C:FRAMe<fr>:DATA?

Returns the data words of the specified frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Data> Comma-separated list of integer values (N, D1, D2,…, DN). N is the number of bytes in the frame, and D1…DN are the values of the bytes.

Example:
```
BUS:I2C:FRAMe4:DATA?
<-- 3,74,164,18
```

Usage: Query only

BUS<b>:I2C:FCOunt?

Returns the number of decoded frames.

Suffix:

<b> 1..4
Selects the serial bus.

Return values:

<Count> Total number of decoded frames.

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:AACCess?

Returns the address acknowledge bit value for the indicated frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<AddressAckBit> INComplete | ACK | NACK | EITHer
*RST: INComplete

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:ACCess?

Returns the value of the R/W bit of the indicated frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<RWBit> UNDefined | READ | WRITe | EITHer
*RST: UNDefined

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:ACOMplete?

Returns if the address is completely contained in the acquisition.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<AddrComplete> OFF | ON
*RST: OFF

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:ADBStart?

Returns the start time of the address acknowledge bit.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<AddrAckBtStrt> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame, that is, the address value that is shown in the decoded cells and in the decode results table.

If the frame has a 7-bit address, the command considers the status of `BUS<b>:I2C:RWBit`. If `BUS<b>:I2C:RWBit INADdress` is set, the returned address includes the R/W bit (8 bit). Otherwise, the pure address without the R/W bit is returned (7 bit, same result as returned with `BUS<b>:I2C:FRAMe<fr>:ADEVice?`).

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<AddressValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and default – are decimal values.

Range: 0 to 1023
*RST: 0

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:ADEVice?

Returns the pure device address of the indicated frame *without* the R/W bit.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<DeviceAddress> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and default – are decimal values.

Range: 0 to 1023
*RST: 0

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:AMODe?

Returns the address length.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<AddressType> BIT7 | BIT7_RW | BIT10 | AUTO | ANY

*RST: BIT7

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:ASTart?

Returns the start time of the address for the indicated frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<AddressStart> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:RWBStart?

Returns the start time of the R/W bit

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<RWBitStart> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<FrameState> INComplete | OK | UNEXpstop | INSufficient | ADDifferent | UNKNown

INComplete
The stop bit is missing.

OK
The frame is valid.

UNEXpstop
A stop bit was detected but clock and data are continued.

INSufficient
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

ADDifferent
Error in 10 bit address. In case of a read access on a 10 bit address, the first address byte is sent twice, first as write, the second as read. The first seven bits of the byte must be identical. If they are not identical, the ADDiffernt error is indicated.

*RST: OK

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<FrameStart> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameStop> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the number of the frame in the current acquisition, 1...n.

Return values:
<Translation> String with symbolic name of the address

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:BCOunt?

Returns the number of bytes in the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Count> Byte count

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:BYTE<o>:ACCess?

Returns the acknowledge bit value of the specified data byte.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<o> *
Selects the byte number.

Return values:
<AckBit> INComplete | ACK | NACK | EITHer
*RST: INComplete

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:BYTE<o>:ACKStart?

Returns the start time of the acknowledge bit of the specified byte.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<o> *
Selects the byte number.

Return values:
<AckBitStart> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.
Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:BYTE<o>:COMPlete?

Returns if the indicated byte is completely contained in the acquisition.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<o> *
Selects the byte number.

Return values:
<ValueComplete> OFF | ON
*RST: OFF

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:BYTE<o>:STARt?

Returns the start time of the specified data byte.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<o> *
Selects the byte number.

Return values:

<FrameByteStart> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I2C:FRAMe<fr>:BYTE<o>:VALue?

Returns the data value of the specified byte.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<o> *
Selects the byte number.

Return values:

<Value> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and default – are decimal values.
Range: 0 to 255
*RST: 0

Usage: Query only

26.18.3.4 I²C search settings

In search setup commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name. The commands are similar to I²C trigger commands.

SEARch:TRIGger:I2C:SCONdition....1859
SEARch:TRIGger:I2C:RCONdition....1859
SEARch:TRIGger:I2C:STCNdition....1859
SEARch:TRIGger:I2C:NACKnowledge....1860
SEARch:TRIGger:I2C:SADDress....1860
SEARch:TRIGger:I2C:ADOR....1860
SEARch:TRIGger:I2C:ADData....1861
SEARch:TRIGger:I2C:ACONdition....1861

SEARch:TRIGger:I2C:AMODe 1862
SEARch:TRIGger:I2C:ADDRess 1862
SEARch:TRIGger:I2C:ADDTo 1862
SEARch:TRIGger:I2C:ACCess 1863
SEARch:TRIGger:I2C:ADDO<m>:ENABle 1863
SEARch:TRIGger:I2C:ADDO<m>:ADRType 1864
SEARch:TRIGger:I2C:ADDO<m>[:VALue] 1864
SEARch:TRIGger:I2C:ADDO<m>:RWBit 1864
SEARch:TRIGger:I2C:DPOPerator 1865
SEARch:TRIGger:I2C:DPOSition 1865
SEARch:TRIGger:I2C:DPTO 1866
SEARch:TRIGger:I2C:DCONdition 1866
SEARch:TRIGger:I2C:DMIN 1866
SEARch:TRIGger:I2C:DMAX 1867
SEARch:TRIGger:I2C:ADNack 1867
SEARch:TRIGger:I2C:DRNack 1867
SEARch:TRIGger:I2C:DWNack 1868

SEARch:TRIGger:I2C:SCONdition <SearchName>,<Start>
SEARch:TRIGger:I2C:SCONdition? <SearchName>

Enables the search for the start of the message.

Parameters:
<Start> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Select search types" on page 578

SEARch:TRIGger:I2C:RCONdition <SearchName>,<RepeatedStart>
SEARch:TRIGger:I2C:RCONdition? <SearchName>

Enables the search for a start condition without previous stop condition.

Parameters:
<RepeatedStart> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Select search types" on page 578

SEARch:TRIGger:I2C:STCNdition <SearchName>,<Stop>
SEARch:TRIGger:I2C:STCNdition? <SearchName>

Enables the search for the start of the message.

Parameters:
<Stop> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Select search types" on page 578

SEARch:TRIGger:I2C:NACKnowledge <SearchName>,<NoAcknowledge>
SEARch:TRIGger:I2C:NACKnowledge? <SearchName>

Searches for missing address acknowledge bits.

Parameters:
<NoAcknowledge> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Select search types" on page 578

SEARch:TRIGger:I2C:SADDress <SearchName>,<Address>
SEARch:TRIGger:I2C:SADDress? <SearchName>

Enables the search for one specific address condition or for a combination of address conditions.

To define the address condition, use the following commands:

- `SEARch:TRIGger:I2C:ACONdition` on page 1861
- `SEARch:TRIGger:I2C:ADDRess` on page 1862
- `SEARch:TRIGger:I2C:ADDTo` on page 1862
- `SEARch:TRIGger:I2C:AMODe` on page 1862
- `SEARch:TRIGger:I2C:ACCess` on page 1863

Parameters:
<Address> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Select search types" on page 578

SEARch:TRIGger:I2C:ADOR <SearchName>,<AddressOr>
SEARch:TRIGger:I2C:ADOR? <SearchName>

Enables the search for one to four address conditions.

- `SEARch:TRIGger:I2C:ADDO<m>:ENABle` on page 1863

- SEARch:TRIGger:I2C:ADDO<m>:ADRType on page 1864
- SEARch:TRIGger:I2C:ADDO<m>[:VALue] on page 1864
- SEARch:TRIGger:I2C:ADDO<m>:RWBit on page 1864

Parameters:
<AddressOr> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Select search types" on page 578

SEARch:TRIGger:I2C:ADData <SearchName>,<AddressData>
SEARch:TRIGger:I2C:ADData? <SearchName>

Enables the search for a combination of address and data conditions.

Parameters:
<AddressData> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Select search types" on page 578

SEARch:TRIGger:I2C:ACONdition <SearchName>,<AddressOperator>
SEARch:TRIGger:I2C:ACONdition? <SearchName>

Sets the operator to set a specific address or an address range.

Parameters:
<AddressOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These condition require one identifier pattern to be set with SEARch:TRIGger:I2C:ADDRess on page 1862.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with SEARch:TRIGger:I2C:ADDRess on page 1862 and SEARch:TRIGger:I2C:ADDTo on page 1862.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Address setup: Condition, Type, Addr. min, Addr. max, R/W bit" on page 579

SEARch:TRIGger:I2C:AMODe <SearchName>,<AddressType>
SEARch:TRIGger:I2C:AMODe? <SearchName>

Sets the address length.

Parameters:
<AddressType> BIT7 | BIT7_RW | BIT10 | ANY

BIT7 | BIT10
Enter only address bits in the address pattern.

BIT7_RW
Enter seven address bits and also the R/W bit in the address pattern.

ANY
Only available for search criteria "Address and data" (`SEARch:TRIGger:I2C:ADData` is set `ON`). Used to search for data only, regardless of the address.

*RST: BIT7

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "Address setup: Condition, Type, Addr. min, Addr. max, R/W bit" on page 579

SEARch:TRIGger:I2C:ADDRess <SearchName>,<Address>
SEARch:TRIGger:I2C:ADDRess? <SearchName>

Specifies an address pattern, or sets the the start value of an address range.

Parameters:
<Address> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.
The pattern length is defined with `SEARch:TRIGger:I2C:AMODe`.

Parameters for setting and query:
<SearchName>

Manual operation: See "Address setup: Condition, Type, Addr. min, Addr. max, R/W bit" on page 579

SEARch:TRIGger:I2C:ADDTo <SearchName>,<AddressTo>
SEARch:TRIGger:I2C:ADDTo? <SearchName>

Sets the the end value of an address range if `SEARch:TRIGger:I2C:ACONdition` is set to `INRange` or `OORange`.

Parameters:
<AddressTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.
The pattern length is defined with `SEARch:TRIGger:I2C:AMODe`.

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "Address setup: Condition, Type, Addr. min, Addr. max, R/W bit" on page 579

SEARch:TRIGger:I2C:ACCess <SearchName>,<RWBitAddress>
SEARch:TRIGger:I2C:ACCess? <SearchName>

Sets the transfer direction of the data.

Parameters:
<RWBitAddress> READ | WRITe | EITHer
*RST: EITHer

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "Address setup: Condition, Type, Addr. min, Addr. max, R/W bit" on page 579

SEARch:TRIGger:I2C:ADDO<m>:ENABle <SearchName>,<UseAddress>
SEARch:TRIGger:I2C:ADDO<m>:ENABle? <SearchName>

Includes the indicated ADOR address in the "address OR" search condition.

Suffix:
<m> 1..4
Index of the address in an "address OR" condition (OR slot)

Parameters:
<UseAddress> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Address OR setup: , OR x Address type, Address, R/W bit" on page 579

SEARch:TRIGger:I2C:ADDO<m>:ADRType <SearchName>,<AddressType>
SEARch:TRIGger:I2C:ADDO<m>:ADRType? <SearchName>

Sets the address type for the indicated ADOR address in the "address OR" search condition.

Suffix:
<m> 1..4
Index of the address in an "address OR" condition (OR slot)

Parameters:
<AddressType> BIT7 | BIT7_RW | BIT10

BIT7 | BIT10
Enter only address bits in the address pattern.

BIT7_RW
Enter seven address bits and also the R/W bit in the address pattern.

*RST: BIT7

Parameters for setting and query:
<SearchName>

Manual operation: See "Address OR setup: , OR x Address type, Address, R/W bit" on page 579

SEARch:TRIGger:I2C:ADDO<m>[:VALue] <SearchName>,<Address>
SEARch:TRIGger:I2C:ADDO<m>[:VALue]? <SearchName>

Defines the address pattern of the indicated ADOR address in the "address OR" search condition.

Suffix:
<m> 1..4
Index of the address in an "address OR" condition (OR slot)

Parameters:
<Address> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.
The pattern length is defined with `SEARch:TRIGger:I2C:ADDO<m>:ADRType`.

Parameters for setting and query:
<SearchName>

Manual operation: See "Address OR setup: , OR x Address type, Address, R/W bit" on page 579

SEARch:TRIGger:I2C:ADDO<m>:RWBit <SearchName>,<RWBit>
SEARch:TRIGger:I2C:ADDO<m>:RWBit? <SearchName>

Defines the R/W bit of the indicated ADOR address in the "address OR" search condition.

Suffix:
<m> 1..4
Index of the address in an "address OR" condition (OR slot)

Parameters:
<RWBit> UNDefined | READ | WRITe | EITHer

UNDefined
Only return value

*RST: EITHer

Parameters for setting and query:
<SearchName>

Manual operation: See "Address OR setup: , OR x Address type, Address, R/W bit" on page 579

SEARch:TRIGger:I2C:DPOPerator <SearchName>,<DataPosOperator>
SEARch:TRIGger:I2C:DPOPerator? <SearchName>

Sets the operator for the data position. You can defined an exact position, or a position range.

Parameters:
<DataPosOperator> ANY | OFF | EQUal | GETHan | INRange | RANGe

ANY = OFF
The position of the required pattern is not relevant.

EQUal | GETHan
Equal, Greater or equal than. These conditions require one data position to be set with `SEARch:TRIGger:I2C:DPOSition`.

INRange = RANGe
In range: Set the minimum and maximum value of the range with `SEARch:TRIGger:I2C:DPOSition` and `SEARch:TRIGger:I2C:DPTO`.

*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Position, Index min, Index max, Value min, Value max" on page 579

SEARch:TRIGger:I2C:DPOSition <SearchName>,<DataPosition>
SEARch:TRIGger:I2C:DPOSition? <SearchName>

Defines the first byte of interest. All bytes before that byte are ignored.

Parameters:
<DataPosition> The index 0 is associated with the first data byte.

Range: 0 to 4095
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Position, Index min, Index max, Value min, Value max" on page 579

SEARch:TRIGger:I2C:DPTO <SearchName>,<DataPositionTo>
SEARch:TRIGger:I2C:DPTO? <SearchName>

Defines the last byte of interest, if `SEARch:TRIGger:I2C:DPOPerator` defines a range.

Parameters:
<DataPositionTo> Range: 0 to 4095
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Position, Index min, Index max, Value min, Value max" on page 579

SEARch:TRIGger:I2C:DCONdition <SearchName>,<DataOperator>
SEARch:TRIGger:I2C:DCONdition? <SearchName>

Sets the operator to set a specific data value or a data range.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Position, Index min, Index max, Value min, Value max" on page 579

SEARch:TRIGger:I2C:DMIN <SearchName>,<Data>
SEARch:TRIGger:I2C:DMIN? <SearchName>

Specifies the data bit pattern, or sets the the start value of a data pattern range.. Enter the bytes in msb first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

Parameters:
<Data> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "Data setup: Condition, Position, Index min, Index max, Value min, Value max" on page 579

SEARch:TRIGger:I2C:DMAX <SearchName>,<DataTo>
SEARch:TRIGger:I2C:DMAX? <SearchName>

Sets the the end value of an address range if `SEARch:TRIGger:I2C:DCONdition` is set to `INRange` or `OORange`.

Parameters:
<DataTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "Data setup: Condition, Position, Index min, Index max, Value min, Value max" on page 579

SEARch:TRIGger:I2C:ADNack <SearchName>,<AddressNack>
SEARch:TRIGger:I2C:ADNack? <SearchName>

Parameters:
<AddressNack> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

SEARch:TRIGger:I2C:DRNack <SearchName>,<DataReadNack>
SEARch:TRIGger:I2C:DRNack? <SearchName>

Searches for the end of the read process when the master reads data from the slave. This Nack is sent according to the protocol definition, it is not an error.

Parameters:
<DataReadNack> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "No ACK setup: Addr/W/R NACK" on page 580

SEARch:TRIGger:I2C:DWNack <SearchName>,<DataWriteNack>
SEARch:TRIGger:I2C:DWNack? <SearchName>

Searches for missing data write acknowledge bits.

Parameters:
<DataWriteNack> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "No ACK setup: Addr/W/R NACK" on page 580

26.18.3.5 I²C search results

The search on decoded CAN data returns the same results as the queries for decode results.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.3.3, "Decode results", on page 1850.

SEARch:RESult:I2C:FCOunt? 1868
SEARch:RESult:I2C:FRAMe<fr>:STATus? 1869
SEARch:RESult:I2C:FRAMe<fr>:STARt? 1869
SEARch:RESult:I2C:FRAMe<fr>:STOP? 1869
SEARch:RESult:I2C:FRAMe<fr>:AACCess? 1870
SEARch:RESult:I2C:FRAMe<fr>:ACCess? 1870
SEARch:RESult:I2C:FRAMe<fr>:ACOMplete? 1870
SEARch:RESult:I2C:FRAMe<fr>:ADBStart? 1870
SEARch:RESult:I2C:FRAMe<fr>:ADDRess? 1871
SEARch:RESult:I2C:FRAMe<fr>:ADEVice? 1871
SEARch:RESult:I2C:FRAMe<fr>:AMODe? 1871
SEARch:RESult:I2C:FRAMe<fr>:ASTart? 1872
SEARch:RESult:I2C:FRAMe<fr>:DATA? 1872
SEARch:RESult:I2C:FRAMe<fr>:RWBStart? 1872
SEARch:RESult:I2C:FRAMe<fr>:SYMBol? 1872
SEARch:RESult:I2C:FRAMe<fr>:BCOunt? 1873
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:ACCess? 1873
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:ACKStart? 1873
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:COMPlete? 1874
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:STARt? 1874
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:VALue? 1874

SEARch:RESult:I2C:FCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:STATus? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> INComplete | OK | UNEXpstop | INSufficient | ADDifferent | UNKNown
*RST: OK

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:STARt? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:STOP? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:AACCess? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AddressAckBit> INComplete | ACK | NACK | EITHer
*RST: INComplete

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:ACCess? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<RWBit> UNDefined | READ | WRITe | EITHer
*RST: UNDefined

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:ACOMplete? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AddrComplete> OFF | ON
*RST: OFF

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:ADBStart? <SearchName>

Returns the start time of the address acknowledge bit.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AddrAckBtStrt> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:ADDRess? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AddressValue> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:ADEVice? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DeviceAddress> Range: 0 to 1023
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:AMODe? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AddressType> BIT7 | BIT7_RW | BIT10 | AUTO | ANY
*RST: BIT7

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:ASTart? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AddressStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:DATA? <SearchName>

Returns the data bytes of the indicated frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Value>

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:RWBStart? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<RWBitStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:SYMBol? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Translation>

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:BCOunt?

Suffix:
<fr> *

Return values:
<Count>

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:ACCess? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<ByteAckBit> INComplete | ACK | NACK | EITHer
*RST: INComplete

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:ACKStart? <SearchName>

Returns the start time of the acknowledge bit of the indicated data byte.

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<BteAckBtStrt> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:COMPlete? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<ByteComplete> OFF | ON
*RST: OFF

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:STARt? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<ByteStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:VALue? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<Value> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

26.18.4 I3C (option R&S RTP-K45)

- Configuration....1875
- Trigger....1877
- Decode results....1882
- I3C search settings....1890
- I3C search results....1894

26.18.4.1 Configuration

BUS<b>:I3C:SCL:SOURce....1875
BUS<b>:I3C:SCL:THReshold....1875
BUS<b>:I3C:SCL:HYSTeresis....1876
BUS<b>:I3C:SDA:SOURce....1876
BUS<b>:I3C:SDA:THReshold....1876
BUS<b>:I3C:SDA:HYSTeresis....1876
BUS<b>:I3C:MINGap:SELect....1877
BUS<b>:I3C:MINGap:WIDTh....1877

BUS<b>:I3C:SCL:SOURce <SCLSource>

Selects the waveform source of the clock line.

Suffix:
<b> 1..4

Parameters:
<SCLSource> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "SDA, SCL" on page 583

BUS<b>:I3C:SCL:THReshold <SCLThreshold>

Sets a threshold value for the clock line.

Suffix:
<b> 1..4

Parameters:
<SCLThreshold> Range: -12 to 12
Increment: 0.01
*RST: 1.65
Default unit: V

Manual operation: See "SCL/SDA threshold / SCL/SDA hysteresis" on page 583

BUS<b>:I3C:SCL:HYSTeresis <SCLHysteresis>

Sets a hysteresis value for the clock line.

Suffix:
<b> 1..4

Parameters:
<SCLHysteresis> Range: -12 to 12
Increment: 0.01
*RST: 0.2
Default unit: V

Manual operation: See "SCL/SDA threshold / SCL/SDA hysteresis" on page 583

BUS<b>:I3C:SDA:SOURce <SDASource>

Selects the waveform source of the data line.

Suffix:
<b> 1..4

Parameters:
<SDASource> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "SDA, SCL" on page 583

BUS<b>:I3C:SDA:THReshold <SDAThreshold>

Sets a threshold value for the data line.

Suffix:
<b> 1..4

Parameters:
<SDAThreshold> Range: -12 to 12
Increment: 0.01
*RST: 1.65
Default unit: V

Manual operation: See "SCL/SDA threshold / SCL/SDA hysteresis" on page 583

BUS<b>:I3C:SDA:HYSTeresis <SDAHysteresis>

Sets a hysteresis value for the data line.

Suffix:
<b> 1..4

Parameters:

<SDAHysteresis> Range: -12 to 12
Increment: 0.01
*RST: 0.2
Default unit: V

Manual operation: See "SCL/SDA threshold / SCL/SDA hysteresis" on page 583

BUS<b>:I3C:MINGap:SELect <MinGapSelect>

Specifies whether a minimum gap before the 1st decoded frame is required.

Suffix:

<b> 1..4

Parameters:

<MinGapSelect> OFF | ON
*RST: ON

Manual operation: See "Require min gap" on page 584

BUS<b>:I3C:MINGap:WIDTh <MinGapWidth>

Specifies the minimum duration of the gap.

Available, if `BUS<b>:I3C:MINGap:SELect` is set to `ON`.

Suffix:

<b> 1..4

Parameters:

<MinGapWidth> Range: 10E-12 to 1
Increment: 10E-12
*RST: 1E-6
Default unit: s

Manual operation: See "Min gap width" on page 584

26.18.4.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:I3C:CHKall 1878
TRIGger<t>:I3C:CLR 1878
TRIGger<t>:I3C:FRENable 1878

TRIGger<t>:I3C:FRAMe<fr>:ENABle ... 1878
TRIGger<t>:I3C:BIT ... 1879
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:BIT ... 1879
TRIGger<t>:I3C:DMAX ... 1879
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DMAX ... 1879
TRIGger<t>:I3C:DMIN ... 1879
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DMIN ... 1879
TRIGger<t>:I3C:DOPerator ... 1880
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DOPerator ... 1880
TRIGger<t>:I3C:FIENable ... 1880
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:ENABle ... 1880
TRIGger<t>:I3C:IMAX ... 1880
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IMAX ... 1880
TRIGger<t>:I3C:IMIN ... 1881
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IMIN ... 1881
TRIGger<t>:I3C:IOPerator ... 1881
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IOPerator ... 1881
TRIGger<t>:I3C:ERENable ... 1881
TRIGger<t>:I3C:ERRor<n>:ENABle ... 1881

TRIGger<t>:I3C:CHKall

Enables the software trigger for all available frames and error types.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 587

TRIGger<t>:I3C:CLR

Disables the software trigger for all available frames and error types.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 587

TRIGger<t>:I3C:FRENable <Frame>,<Enabler>
TRIGger<t>:I3C:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the trigger.

Suffix:
<t> 1..3

<fr> *

Parameters:
<Enable> OFF | ON
*RST: OFF

Manual operation: See "Frame type" on page 587

TRIGger<t>:I3C:BIT <Frame>,<Field>,<Bit>
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the trigger.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<BitState> ONE | ZERO | DC
*RST: DC

Manual operation: See "Set details" on page 587

TRIGger<t>:I3C:DMAX <Frame>,<Field>,<Data>
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<Data_Max> List of comma-separated values.

Manual operation: See "Set details" on page 587

TRIGger<t>:I3C:DMIN <Frame>,<Field>,<Data>
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the trigger.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<Data_Min> List of comma-separated values.

Manual operation: See "Set details" on page 587

TRIGger<t>:I3C:DOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the trigger in the selected field of the selected frame.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Manual operation: See "Set details" on page 587

TRIGger<t>:I3C:FIENable <Frame>,<Field>,<Enabler>
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the trigger.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Manual operation: See "Set details" on page 587

TRIGger<t>:I3C:IMAX <Frame>,<Field>,<Data>
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Index_Max> Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Manual operation: See "Set details" on page 587

TRIGger<t>:I3C:IMIN <Frame>,<Field>,<Data>
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the trigger.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Index_Min> Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Manual operation: See "Set details" on page 587

TRIGger<t>:I3C:IOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the trigger.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Manual operation: See "Set details" on page 587

TRIGger<t>:I3C:ERENable <ErrorName>,<Enabler>
TRIGger<t>:I3C:ERRor<n>:ENABle <Enable>

Enables triggering for selected protocol error types.

Suffix:
<t> 1..3

<n> *

Parameters:

<Enable> OFF | ON
*RST: ON

Manual operation: See "Error type" on page 589

26.18.4.3 Decode results

To load and acivate a label list, use:

- BUS<b>:NEWList on page 1835
- BUS<b>:SYMBols on page 1835

BUS<b>:I3C:FCOunt? 1882
BUS<b>:I3C:FRAMe<fr>:ADDRess? 1883
BUS<b>:I3C:FRAMe<fr>:ASTart? 1883
BUS<b>:I3C:FRAMe<fr>:FLDCount? 1883
BUS<b>:I3C:FRAMe<fr>:BITRate? 1883
BUS<b>:I3C:FRAMe<fr>:RWBStart? 1884
BUS<b>:I3C:FRAMe<fr>:STARt? 1884
BUS<b>:I3C:FRAMe<fr>:STATus? 1884
BUS<b>:I3C:FRAMe<fr>:STOP? 1885
BUS<b>:I3C:FRAMe<fr>:SYMBol? 1885
BUS<b>:I3C:FRAMe<fr>:ACK? 1886
BUS<b>:I3C:FRAMe<fr>:ACKStart? 1886
BUS<b>:I3C:FRAMe<fr>:FLD<fl>:FVALue? 1886
BUS<b>:I3C:FRAMe<fr>:FLD<fl>:LABel? 1887
BUS<b>:I3C:FRAMe<fr>:FLD<fl>:STATe? 1887
BUS<b>:I3C:FRAMe<fr>:FLD<fl>:VALue? 1887
BUS<b>:I3C:FRAMe<fr>:COMMand? 1888
BUS<b>:I3C:FRAMe<fr>:CRC? 1888
BUS<b>:I3C:FRAMe<fr>:FADDress? 1888
BUS<b>:I3C:FRAMe<fr>:FCOMmand? 1889
BUS<b>:I3C:FRAMe<fr>:FCRC? 1889
BUS<b>:I3C:FRAMe<fr>:RWBit? 1889
BUS<b>:I3C:FRAMe<fr>:TYPE? 1889

BUS<b>:I3C:FCOunt?

Returns the number of decoded frames.

Suffix:

<b> 1..4

Return values:

<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:
<b> 1..4

<fr> *

Return values:
<AddressValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:ASTart?

Returns the start time of the address for the indicated frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<AddressStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<b> 1..4

<fr> *

Return values:
<BitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:RWBStart?

Returns the start time of the R/W bit.

Suffix:
<b> 1..4

<fr> *

Return values:
<RWBitStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<b> 1..4

<fr> *

Return values:

<FrameState> OK | ACK | PAR | CRC | LENGth | UNKNown | INComplete

OK
The frame is valid.

ACK
Wrong acknowledgment (ACK) delimiter occurred.

PAR
Wrong parity detected.

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of frame.

UNKNown
Unknown frame type detected.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<b> 1..4

<fr> *

Return values:

<FrameStop>
Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame, if the label list is enabled.

Suffix:

<b> 1..4

<fr> *

Return values:
<Translation> String with the symbolic name of the frame.

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:ACK?

Returns the value of the acknowledge bit for the selected frame. Because this ACK bit is transmitted right after the address field, it acknowledges receiving the address.

Suffix:
<b> 1..4

<fr> *

Return values:
<AckBitValue> INComplete | ACK | NACK | EITHer
*RST: EITHer

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:ACKStart?

Returns the start time of the acknowledge bit for the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<AckBitStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field for the selected frame.

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:
<FormattedValue>

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<b> 1..4
<fr> *
<fl> *

Return values:
<Type>

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field for the selected frame.

Suffix:
<b> 1..4
<fr> *
<fl> *

Return values:
<State> OK | ACK | PAR | CRC | LENGth | UNKNown | INComplete

OK
The field has no error, it is valid.

ACK
Wrong acknowledgment (ACK) delimiter occurred.

PAR
Wrong parity detected.

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of the field.

UNKNown
Unknown field type detected.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<b> 1..4
<fr> *
<fl> *

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:COMMand?

Returns the selected frame's command response, which is an integer.

Suffix:
<b> 1..4
<fr> *

Return values:
<Command> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:CRC?

Returns the cyclic redundancy check (CRC) checksum of the selected frame.

Suffix:
<b> 1..4
<fr> *

Return values:
<CRCValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:FADDress?

Returns the formatted address for the selected frame.

Suffix:
<b> 1..4
<fr> *

Return values:
<FormattedAddrVal>

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:FCOMmand?

Returns the formatted command from the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FormattedCmd>

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:FCRC?

Returns the formatted CRC value for the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FormattedCRCVal>

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:RWBit?

Returns the value of the R/W bit of the selected frame. The value "0" denotes "Write", the value "1" denotes "Read".

Suffix:
<b> 1..4

<fr> *

Return values:
<RWBitValue> READ | WRITe

Usage: Query only

BUS<b>:I3C:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameType> UNKNown | PROB | READ | WRIT | BRDC | DRCT | HDDR | HTSX
*RST: UNKNown

Usage: Query only

26.18.4.4 I3C search settings

In search setup commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name. The commands are similar to I3C trigger commands.

SEARch:TRIGger:I3C:CHKall....1890
SEARch:TRIGger:I3C:CLR....1890
SEARch:TRIGger:I3C:FRENable....1891
SEARch:TRIGger:I3C:FRAMe<fr>:ENABle....1891
SEARch:TRIGger:I3C:DMAX....1891
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMAX....1891
SEARch:TRIGger:I3C:DMIN....1891
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMIN....1891
SEARch:TRIGger:I3C:DOPerator....1892
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DOPerator....1892
SEARch:TRIGger:I3C:ERENable....1892
SEARch:TRIGger:I3C:ERRor<m>:ENABle....1892
SEARch:TRIGger:I3C:IMAX....1893
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMAX....1893
SEARch:TRIGger:I3C:IMIN....1893
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMIN....1893
SEARch:TRIGger:I3C:IOPerator....1893
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IOPerator....1893
SEARch:TRIGger:I3C:BIT....1894
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:BIT....1894
SEARch:TRIGger:I3C:FIENable....1894
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:ENABle....1894

SEARch:TRIGger:I3C:CHKall <SearchName>

Enables the filter for all available frames and error types.

Setting parameters:
<SearchName>

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 592

SEARch:TRIGger:I3C:CLR <SearchName>

Disables the filter for all available frames and error types.

Setting parameters:
<SearchName>

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 592

SEARch:TRIGger:I3C:FRENable <SearchName>,<Frame>,<Enabler>
SEARch:TRIGger:I3C:FRAMe<fr>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:I3C:FRAMe<fr>:ENABle? <SearchName>

Enables or disables the specific frame to be filtered on.

Suffix:
<fr> *

Parameters:
<Enable> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame type" on page 592

SEARch:TRIGger:I3C:DMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMAX? <SearchName>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Max> List of comma-separated values.

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 592

SEARch:TRIGger:I3C:DMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMIN? <SearchName>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Min> List of comma-separated values.

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 592

SEARch:TRIGger:I3C:DOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DOPerator
<SearchName>,<Data_Operator>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DOPerator? <SearchName>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 592

SEARch:TRIGger:I3C:ERENable <SearchName>,<ErrorName>,<Enabler>
SEARch:TRIGger:I3C:ERRor<m>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:I3C:ERRor<m>:ENABle? <SearchName>

Defines the error type to be filtered on.

Suffix:
<m> *

Parameters:
<Enable> OFF | ON

*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error type" on page 594

SEARch:TRIGger:I3C:IMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMAX <SearchName>,<Index_Max>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMAX? <SearchName>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Max> Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 592

SEARch:TRIGger:I3C:IMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMIN <SearchName>,<Index_Min>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMIN? <SearchName>

Specifies the index, or sets the start value of an index range.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Min> Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 592

SEARch:TRIGger:I3C:IOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IOPerator
<SearchName>,<Index_Operator>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IOPerator? <SearchName>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 592

SEARch:TRIGger:I3C:BIT <SearchName>,<Frame>,<Field>,<Bit>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:BIT <SearchName>,<BitState>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:BIT? <SearchName>

Sets the bit state of a field that only consists of one bit.

Suffix:
<fr> *

<fl> *

Parameters:
<BitState> ONE | ZERO | DC
*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 592

SEARch:TRIGger:I3C:FIENable <SearchName>,<Frame>,<Field>,<Enabler>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:ENABle <SearchName>,<CondEnabler>
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 592

26.18.4.5 I3C search results

The search on decoded I3C data returns the same results as the queries for decode results.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.4.3, "Decode results", on page 1882.

SEARch:RESult:I3C:FCOunt? 1895
SEARch:RESult:I3C:FRAMe<fr>:ADDRess? 1895
SEARch:RESult:I3C:FRAMe<fr>:ASTart? 1896
SEARch:RESult:I3C:FRAMe<fr>:FLDCount? 1896
SEARch:RESult:I3C:FRAMe<fr>:BITRate? 1896
SEARch:RESult:I3C:FRAMe<fr>:RWBStart? 1897
SEARch:RESult:I3C:FRAMe<fr>:STARt? 1897
SEARch:RESult:I3C:FRAMe<fr>:STATus? 1897
SEARch:RESult:I3C:FRAMe<fr>:STOP? 1898
SEARch:RESult:I3C:FRAMe<fr>:SYMBol? 1898
SEARch:RESult:I3C:FRAMe<fr>:ACK? 1899
SEARch:RESult:I3C:FRAMe<fr>:ACKStart? 1899
SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:FVALue? 1899
SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:LABel? 1900
SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:STATe? 1900
SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:VALue? 1901
SEARch:RESult:I3C:FRAMe<fr>:COMMand? 1901
SEARch:RESult:I3C:FRAMe<fr>:CRC? 1901
SEARch:RESult:I3C:FRAMe<fr>:FADDress? 1902
SEARch:RESult:I3C:FRAMe<fr>:FCOMmand? 1902
SEARch:RESult:I3C:FRAMe<fr>:FCRC? 1902
SEARch:RESult:I3C:FRAMe<fr>:RWBit? 1902
SEARch:RESult:I3C:FRAMe<fr>:TYPE? 1903

SEARch:RESult:I3C:FCOunt? <SearchName>

Returns the number of decoded frames.

Query parameters:
<SearchName>

Return values:

<Count>	Range:	0 to 100E+3
	Increment:	1
	*RST:	0

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:ADDRess? <SearchName>

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:

<fr>	*

Query parameters:
<SearchName>

Return values:
<AddressValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:ASTart? <SearchName>

Returns the start time of the address for the indicated frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AddressStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:FLDCount? <SearchName>

Returns the number of fields in the specified frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:BITRate? <SearchName>

Returns the primary bit rate.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<BitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:RWBStart? <SearchName>

Returns the start time of the R/W bit

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<RWBitStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the specified frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:STATus? <SearchName>

Returns the overall state of the frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameState> OK | ACK | PAR | CRC | LENGth | UNKNown | INComplete

OK
The frame is valid.

ACK
Wrong acknowledgment (ACK) delimiter occurred.

PAR
Wrong parity detected.

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of frame.

UNKNown
Unknown frame type detected.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:STOP? <SearchName>

Returns the end time of the specified frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:SYMBol? <SearchName>

Returns the symbolic label of the specified frame, if the label list is enabled.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Translation> String with the symbolic name of the frame.

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:ACK? <SearchName>

Returns the value of the acknowledge bit for the selected frame. Because this ACK bit is transmitted right after the address field, it acknowledges receiving the address.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AckBitValue> INComplete | ACK | NACK | EITHer
*RST: EITHer

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:ACKStart? <SearchName>

Returns the start time of the acknowledge bit for the selected frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<AckBitStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:FVALue? <SearchName>

Returns the formatted value of the specified field for the selected frame.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<FormattedValue>

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:LABel? <SearchName>

Returns the name (label) of the specified field in the selected frame.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Type>

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:STATe? <SearchName>

Returns the overall state of the specified field for the selected frame.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<State> OK | ACK | PAR | CRC | LENGth | UNKNown | INComplete

OK
The field has no error, it is valid.

ACK
Wrong acknowledgment (ACK) delimiter occurred.

PAR
Wrong parity detected.

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of the field.

UNKNown
Unknown field type detected.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:VALue? <SearchName>

Returns the data value of the specified field.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:COMMand? <SearchName>

Returns the selected frame's command response, which is an integer.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Command> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:CRC? <SearchName>

Returns the cyclic redundancy check (CRC) checksum of the selected frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<CRCValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:FADDress? <SearchName>

Returns the formatted address for the selected frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormattedAddrVal>

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:FCOMmand? <SearchName>

Returns the formatted command from the selected frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormattedCmd>

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:FCRC? <SearchName>

Returns the formatted CRC value for the selected frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormattedCRCVal>

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:RWBit? <SearchName>

Returns the value of the R/W bit of the selected frame. The value "0" denotes "Write", the value "1" denotes "Read".

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<RWBitValue> READ | WRITe

Usage: Query only

SEARch:RESult:I3C:FRAMe<fr>:TYPE? <SearchName>

Returns the frame type of the selected frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> UNKNown | PROB | READ | WRIT | BRDC | DRCT | HDDR | HTSX

*RST: UNKNown

Usage: Query only

26.18.5 SPI (option R&S RTP-K1)

- SPI bus configuration....1903
- SPI trigger....1908
- SPI decode results....1912
- SPI search settings....1917
- SPI search results....1920

26.18.5.1 SPI bus configuration

BUS<b>:SPI:BORDer....1904
BUS<b>:SPI:WSIZe....1904
BUS<b>:SPI:SCLK:SOURce....1904
BUS<b>:SPI:SSELect:SOURce....1905
BUS<b>:SPI:SSELect:POLarity....1905
BUS<b>:SPI:MISO:SOURce....1905
BUS<b>:SPI:MISO:POLarity....1906
BUS<b>:SPI:MOSI:SOURce....1906
BUS<b>:SPI:MOSI:POLarity....1907
BUS<b>:SPI:SCLK:THReshold....1907
BUS<b>:SPI:MISO:THReshold....1907
BUS<b>:SPI:MOSI:THReshold....1907
BUS<b>:SPI:SSELect:THReshold....1907
BUS<b>:SPI:FRCondition....1907
BUS<b>:SPI:TIMeout....1908

BUS<b>:SPI:BORDer <BitOrder>

Defines if the data of the messages starts with msb (most significant bit) or lsb (least significant bit).

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<BitOrder> LSBF | MSBF
*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 598

BUS<b>:SPI:WSIZe <WordLength>

Sets the number of bits in a message.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<WordLength> Number of bits
Range: 4 to 64
Increment: 1
*RST: 8

Usage: Asynchronous command

Manual operation: See "Word length" on page 599

BUS<b>:SPI:SCLK:SOURce <SCLKSource>

Sets the input channel of the clock line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SCLKSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15
Digital and analog channels cannot be used at the same time for data, clock and slave select lines.
See Section 26.4.2, "Waveform parameter", on page 1348
*RST: C2W1

Usage: Asynchronous command

Manual operation: See "SCLK source" on page 597

BUS<b>:SPI:SSELect:SOURce <SlaveSelectSource>

Sets the input channel of the slave select line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SlaveSelectSource> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for data, clock and slave select lines.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: None

Usage: Asynchronous command

Manual operation: See "Source" on page 597

BUS<b>:SPI:SSELect:POLarity <SSPolarity>

Selects whether transmitted slave select signal is high active (high = 1) or low active (low = 1).

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SSPolarity> ACTLow | ACTHigh

*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "Polarity" on page 597

BUS<b>:SPI:MISO:SOURce <MISOSource>

Sets the input channel of the MISO line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:

<MISOSource> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for data, clock and slave select lines.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: None

Usage: Asynchronous command

Manual operation: See "Source" on page 597

BUS<b>:SPI:MISO:POLarity <MISOPolarity>

Selects whether transmitted data is high active (high = 1) or low active (low = 1).

Suffix:

<b> 1..4
Selects the serial bus.

Parameters:

<MISOPolarity> ACTLow | ACTHigh

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity" on page 597

BUS<b>:SPI:MOSI:SOURce <MOSISource>

Sets the input channel of the MOSI line.

Suffix:

<b> 1..4
Selects the serial bus.

Parameters:

<MOSISource> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for data, clock and slave select lines.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Source" on page 597

BUS<b>:SPI:MOSI:POLarity <MOSIPolarity>

Selects whether transmitted data is high active (high = 1) or low active (low = 1).

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<MOSIPolarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity" on page 597

BUS<b>:SPI:SCLK:THReshold <SCLKThreshold>
BUS<b>:SPI:MISO:THReshold <MISOThreshold>
BUS<b>:SPI:MOSI:THReshold <MOSIThreshold>
BUS<b>:SPI:SSELect:THReshold <SSThreshold>

Set user-defined threshold values for the clock, MISO, MOSI and slave select lines.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SSThreshold> User-defined value
Range: -12 to 12
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "Set Thresholds" on page 598

BUS<b>:SPI:FRCondition <FrameCondition>

Defines the start of a frame. A frame contains a number of successive words, at least one word.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<FrameCondition> SS | CLKTimeout
SS
Start and end of the frame is defined by the active state of the slave select signal, see `BUS<b>:SPI:SSELect:POLarity`.

CLKTimeout
Defines a timeout on the clock line SCLK as limiter between two frames. The timeout condition is used for SPI connections without an SS line.

*RST: SS

Manual operation: See "Frame condition" on page 599

BUS<b>:SPI:TIMeout <ClockTimeout>

Defines a timeout on the clock line SCLK as limiter between two frames. The timeout condition is used for SPI connections without an SS line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ClockTimeout> Range: 50E-9 to 10
Increment: 1E-6
*RST: 1E-3
Default unit: s

Manual operation: See "Timeout" on page 599

26.18.5.2 SPI trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:SPI:TYPE 1908
TRIGger<t>:SPI:PALignment 1909
TRIGger<t>:SPI:DPOPerator 1910
TRIGger<t>:SPI:DPOSition 1910
TRIGger<t>:SPI:DPTO 1910
TRIGger<t>:SPI:FCONdition 1911
TRIGger<t>:SPI:MISopattern 1911
TRIGger<t>:SPI:MOSipattern 1911

TRIGger<t>:SPI:TYPE <Type>

Selects the trigger type for SPI analysis.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Type> SSACtive | TIMeout | MOSI | MISO | MOMI

SSACtive
Start of the message: slave select signal SS changes to the active state.

TIMeout
Triggers on the next message start after the "Timeout" time.

MOSI
Triggers on a specified data pattern in that is expected on the MOSI line. Define the pattern with `TRIGger<t>:SPI:MOSipattern`.

MISO
Triggers on a specified data pattern in that is expected on the MISO line. Define the pattern with `TRIGger<t>:SPI:MISopattern`

MOMI
Triggers on a specified data patterns on the MISO and MISO lines.

*RST: SSACtive

Usage: Asynchronous command

Manual operation: See "Trigger type" on page 601

TRIGger<t>:SPI:PALignment <DataAlignment>

Defines how the specified data pattern is searched.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataAlignment> WORD | BIT

WORD
The pattern is matched only at word boundaries.

BIT
Bit-by bit: the pattern can be at any position in the data word.

*RST: WORD

Usage: Asynchronous command

Manual operation: See "Search mode" on page 602

TRIGger<t>:SPI:DPOPerator <DataPosOperator>

Sets the operator for the data position. You can defined an exact position, or a position range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPosOperator> ANY | OFF | EQUal | GETHan | INRange | RANGe

ANY = OFF
The position of the required pattern is not relevant.

EQUal | GETHan
Equal, Greater or equal than. These conditions require one data position to be set with `TRIGger<t>:SPI:DPOSition`.

INRange = RANGe
Set the minimum and maximum value of the range with `TRIGger<t>:SPI:DPOSition` and `TRIGger<t>:SPI:DPTO`.

*RST: ANY

Manual operation: See "Position" on page 602

TRIGger<t>:SPI:DPOSition <DataPosition>

Sets the number of bits or words to be ignored before the first bit or word od interest. The effect is defined by `TRIGger<t>:SPI:PALignment`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPosition> The index 0 is associated with the first data byte.

Range: 0 to 4095 for triggering on one line (MISO or MOSI), 2047 for triggering on both lines.
Increment: 1
*RST: 0

Manual operation: See "Index min, Index max" on page 602

TRIGger<t>:SPI:DPTO <DataPositionTo>

Defines the last bit or word of interest, if `TRIGger<t>:SPI:DPOPerator` is set to `INRange`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<DataPositionTo> Range: 1 to 4095 for triggering on one line (MISO or MOSI), 2047 for triggering on both lines.
Increment: 1
*RST: 1

Manual operation: See "Index min, Index max" on page 602

TRIGger<t>:SPI:FCONdition <DataOperator>

Selects the operator for the MISO and MOSI pattern.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<DataOperator> EQUal | NEQual
*RST: EQUal

Manual operation: See "Condition" on page 602

TRIGger<t>:SPI:MISopattern <MISOPattern>

Specifies the pattern to be triggered on the MISO line.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<MISOPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Usage: Asynchronous command

Manual operation: See "MOSI pattern, MISO pattern" on page 602

TRIGger<t>:SPI:MOSipattern <MOSIPattern>

Specifies the pattern to be triggered on the MOSI line.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<MOSIPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Usage: Asynchronous command

Manual operation: See "MOSI pattern, MISO pattern" on page 602

26.18.5.3 SPI decode results

BUS<b>:SPI:FRAMe<fr>:DATA? 1912
BUS<b>:SPI:FCOunt? 1912
BUS<b>:SPI:FRAMe<fr>:COUNt? 1912
BUS<b>:SPI:FRAMe<fr>:BITRate? 1913
BUS<b>:SPI:FRAMe<fr>:STATus? 1913
BUS<b>:SPI:FRAMe<fr>:STARt? 1914
BUS<b>:SPI:FRAMe<fr>:STOP? 1914
BUS<b>:SPI:FRAMe<fr>:WCOunt? 1914
BUS<b>:SPI:FRAMe<fr>:WORD<w>:STARt? 1915
BUS<b>:SPI:FRAMe<fr>:WORD<w>:STOP? 1915
BUS<b>:SPI:FRAMe<fr>:WORD<w>:MISO? 1915
BUS<b>:SPI:FRAMe<fr>:WORD<w>:FMISo? 1916
BUS<b>:SPI:FRAMe<fr>:WORD<w>:MOSI? 1916
BUS<b>:SPI:FRAMe<fr>:WORD<w>:FMOSi? 1917

BUS<b>:SPI:FRAMe<fr>:DATA?

Returns the data words of the specified frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<FrameData> Comma-separated sequence of integer values (N, L1, R1,…, LN, RN). N is the number of word pairs in the frame, and {L1,R1}…{LN,RN} are the value pairs. The values Lx and Rx are associated with the MOSI and the MISO channel, respectively. If a channel is disabled, an empty value is returned.

Example:

```
BUS:SPI:FRAMe3:DATA?
<-- 2,10,108,35,70 (MOSI+MISO)
2,10,,35, (MOSI only)
2,,108,,70 (MISO only)
```

Usage: Query only

BUS<b>:SPI:FCOunt?
BUS<b>:SPI:FRAMe<fr>:COUNt?

Returns the number of decoded frames.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *

Return values:
<Count> Total number of decoded frames.

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameState> OK | VOID | INCFirst | INCLast | INSufficient
OK: the frame is valid.
VOID: the frame is empty.
INCFirst: INComplete First word. The first word does not have the expected word length.
INCLast: INComplete Last word. The last word does not have the expected word length.
INSufficient: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.
*RST: OK

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameStart> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameStop> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:WCOunt?

Returns the number of words in the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameWordCount> Range: 0 to 4096
*RST: 0

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:WORD<w>:STARt?

Returns the start time of the specified data word.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<w> *
Selects the word number.

Return values:

<FrameWordStart> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:WORD<w>:STOP?

Returns the end time of the specified data word.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<w> *
Selects the word number.

Return values:

<FrameWordStop> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:WORD<w>:MISO?

Returns the data value of the specified word on the MISO line.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<w> *
Selects the word number.

Return values:

<MISOValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.

Range: 0 to 4294967295
*RST: 0

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:WORD<w>:FMISo?

Returns the formatted value of the specified word on the MISO line.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<w> *
Selects the word number.

Return values:

<FormattedMISOVal>

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:WORD<w>:MOSI?

Returns the data value of the specified word on the MOSI line.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<w> *
Selects the word number.

Return values:

<MOSIValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.

Range: 0 to 4294967295
*RST: 0

Usage: Query only

BUS<b>:SPI:FRAMe<fr>:WORD<w>:FMOSi?

Returns the formatted value of the specified word on the MOSI line.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<w> *
Selects the word number.

Return values:
<FormattedMOSIVal>

Usage: Query only

26.18.5.4 SPI search settings

In search setup commands, you must specify the <SearchName> parameter. It is a string parameter that contains the search definition name. All commands are similar to SPI trigger commands.

SEARch:TRIGger:SPI:TYPE 1917
SEARch:TRIGger:SPI:FCONdition 1918
SEARch:TRIGger:SPI:MISopattern 1918
SEARch:TRIGger:SPI:MOSipattern 1918
SEARch:TRIGger:SPI:DPOPerator 1919
SEARch:TRIGger:SPI:DPOSition 1919
SEARch:TRIGger:SPI:DPTO 1919
SEARch:TRIGger:SPI:PALignment 1920

SEARch:TRIGger:SPI:TYPE <SearchName>,<Type>
SEARch:TRIGger:SPI:TYPE? <SearchName>

Sets the event to be searched for.

Parameters:

<Type> SSACtive | TIMeout | MOSI | MISO | MOMI

SSACtive
Searches for the start of the frame when slave select signal SS changes to the active state. This type is available if the slave select line is configured in the bus setup, and `BUS<b>:SPI:FRCondition` is `SS`.

TIMeout
Searches for the start of the frame when the clock idle time exceeds the timeout. This type is available if the slave select line is configured in the bus setup, and `BUS<b>:SPI:FRCondition` is `CLKTimeout`.

MOSI | MISO
Searches for a specified data pattern expected on the MOSI line or on the MISO line, respectively.

MOMI
Searches in parallel for specified data patterns expected on the MOSI and MISO lines.

*RST: SSACtive

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Manual operation: See "Type" on page 604

SEARch:TRIGger:SPI:FCONdition <SearchName>,<DataOperator>
SEARch:TRIGger:SPI:FCONdition? <SearchName>

Selects the operator for the data pattern: equal or not equal.

Parameters:
<DataOperator> EQUal | NEQual

*RST: EQUal

Parameters for setting and query:
<SearchName>

Firmware/software: FW 3.30

Manual operation: See "MOSI and MISO data search" on page 605

SEARch:TRIGger:SPI:MISopattern <SearchName>,<MISOPattern>
SEARch:TRIGger:SPI:MISopattern? <SearchName>
SEARch:TRIGger:SPI:MOSipattern <SearchName>,<MOSIPattern>
SEARch:TRIGger:SPI:MOSipattern? <SearchName>

Specifies a data pattern for the MISO or MOSI line, respectively.

Parameters:
<MOSIPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Firmware/software: FW 3.30

Manual operation: See "MOSI and MISO data search" on page 605

SEARch:TRIGger:SPI:DPOPerator <SearchName>,<DataPosOperator>
SEARch:TRIGger:SPI:DPOPerator? <SearchName>

Operator for the data position. You can define an exact position, a position range, or let the position undefined (ANY).

Parameters:
<DataPosOperator> ANY | OFF | EQUal | GETHan | INRange | RANGe
ANY = OFF, INRange = RANGe
*RST: ANY

Parameters for setting and query:
<SearchName>

Firmware/software: FW 3.30

Manual operation: See "MOSI and MISO data search" on page 605

SEARch:TRIGger:SPI:DPOSition <SearchName>,<DataPosition>
SEARch:TRIGger:SPI:DPOSition? <SearchName>

Sets the number of bits or words before the first word of interest, see also `SEARch:TRIGger:SPI:PALignment`. These offset bits/words are skipped. The index 0 is associated with the first data bit or word.

If the position operator defines a range, also define the last bit/word of interest using `SEARch:TRIGger:SPI:DPTO`

Parameters:
<DataPosition> Range: 0 to 32.767E+3
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Firmware/software: FW 3.30

Manual operation: See "MOSI and MISO data search" on page 605

SEARch:TRIGger:SPI:DPTO <SearchName>,<DataPositionTo>
SEARch:TRIGger:SPI:DPTO? <SearchName>

Sets the the end value of a data postion range.

Parameters:
<DataPositionTo> Range: 1 to 32.767E+3
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Firmware/software: FW 3.30

Manual operation: See "MOSI and MISO data search" on page 605

SEARch:TRIGger:SPI:PALignment <SearchName>,<DataAlignment>
SEARch:TRIGger:SPI:PALignment? <SearchName>

Defines how the specified data pattern is searched.

Parameters:
<DataAlignment> WORD | BIT

WORD
The pattern is matched only at word boundaries.

BIT
Bit-by-bit: the pattern can start at any position in the message.

*RST: WORD

Parameters for setting and query:
<SearchName>

Usage: Asynchronous command

Firmware/software: FW 3.30

Manual operation: See "MOSI and MISO data search" on page 605

26.18.5.5 SPI search results

The search on decoded SPI data returns the same results as the queries for decode results.

In search result commands, you must specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

The suffix FRAMe<m> indicates the frame index. The suffix WORD<n> indicates the word index inside a frame-

For a description of the returned values, see the corresponding commands in Section 26.18.5.3, "SPI decode results", on page 1912.

All SPI search commands are first implemented in firmware version 3.30.

SEARch:RESult:SPI:FCOunt? 1921
SEARch:RESult:SPI:FRAMe<fr>:COUNt? 1921
SEARch:RESult:SPI:FRAMe<fr>:DATA? 1921
SEARch:RESult:SPI:FRAMe<fr>:STARt? 1921
SEARch:RESult:SPI:FRAMe<fr>:STATus? 1922
SEARch:RESult:SPI:FRAMe<fr>:STOP? 1922
SEARch:RESult:SPI:FRAMe<fr>:WCOunt? 1922
SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:MISO? 1922
SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:MOSI? 1923
SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:STARt? 1923
SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:STOP? 1923

SEARch:RESult:SPI:FCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:COUNt?

Returns the number of frames that have matched the search criteria. In the search result table on the display, the number of rows is the number of frames that match the search criteria.

Suffix:
<fr> *

Return values:
<Count>

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:DATA? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameData>

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:STARt? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:STATus? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameState> OK | VOID | INCFirst | INCLast | INSufficient
*RST: OK

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:STOP? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:WCOunt? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameWordCount> Range: 0 to 4096
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:MISO? <SearchName>

Suffix:
<fr> *

<w> *

Query parameters:
<SearchName>

Return values:
<WordMISOValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:MOSI? <SearchName>

Suffix:
<fr> *

<w> *

Query parameters:
<SearchName>

Return values:
<WordMOSIValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:STARt? <SearchName>

Suffix:
<fr> *

<w> *

Query parameters:
<SearchName>

Return values:
<FrameWordStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:STOP? <SearchName>

Suffix:
<fr> *

<w> *

Query parameters:
<SearchName>

Return values:

<FrameWordStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

26.18.6 UART/RS-232/RS-422/RS-485 (option R&S RTP-K2)

- Configuration....1924
- Trigger....1930
- Decode results....1932

26.18.6.1 Configuration

BUS<b>:UART:RX:SOURce....1924
BUS<b>:UART:TX:SOURce....1925
BUS<b>:UART:RX:THReshold....1925
BUS<b>:UART:TX:THReshold....1925
BUS<b>:UART:TECHnology....1926
BUS<b>:UART:BITRate....1926
BUS<b>:UART:BAUDrate....1926
BUS<b>:UART:PARity....1927
BUS<b>:UART:POLarity....1927
BUS<b>:UART:SBIT....1928
BUS<b>:UART:SSIZe....1928
BUS<b>:UART:PACKets....1928
BUS<b>:UART:TOUT....1929
BUS<b>:UART:EWORd....1929

BUS<b>:UART:RX:SOURce <RxSource>

Selects the input channel for the receiver signal.

Suffix:

<b> 1..4
Selects the serial bus.

Parameters:

<RxSource> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for RX and TX lines.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: None

Usage: Asynchronous command

Manual operation: See "Source: Tx, Rx" on page 607

BUS<b>:UART:TX:SOURce <TxSource>

Selects the input channel for the transmitter signal.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<TxSource> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for RX and TX lines.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Source: Tx, Rx" on page 607

BUS<b>:UART:RX:THReshold <RxThreshold>

Sets a user-defined threshold value for the Rx line.

Alternatively, you can set the threshold according to the signal technology with `BUS<b>:UART:TECHnology`.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<RxThreshold> User-defined clock threshold

Range: -15 to 15
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "Threshold" on page 607

BUS<b>:UART:TX:THReshold <TxThreshold>

Sets a user-defined threshold value for the Tx line.

Alternatively, you can set the threshold according to the signal technology with `BUS<b>:UART:TECHnology`.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:

<TxThreshold> User-defined clock threshold

Range: -15 to 15
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "Threshold" on page 607

BUS<b>:UART:TECHnology <Technology>

Sets the threshold voltage Tx and Rx lines as defined for various signal technologies.

Suffix:

<b> 1..4
Selects the serial bus.

Parameters:

<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual

V15 | V25 | V165 | V125 | V09 | V38 | V20 | V0
1.5 V, 2.5 V, 1.65 V ... respectively

VM13
-1.3 V (negative value)

MANual
Manual setting of user-defined values with `BUS<b>:UART:RX:THReshold` and `BUS<b>:UART:TX:THReshold`.

*RST: V165

Manual operation: See "Threshold" on page 607

BUS<b>:UART:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:

<b> 1..4

Parameters:

<Bitrate>

Range: 300 to 20E+6
Increment: 1
*RST: 9600
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate" on page 608

BUS<b>:UART:BAUDrate <Bitrate>

Same as `BUS<b>:UART:BITRate`.

Suffix:
<b> 1..4

Parameters:
<Bitrate> Range: 300 to 20E+6
Increment: 1
*RST: 9600
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate" on page 608

BUS<b>:UART:PARity <Parity>

Defines the optional parity bit that is used for error detection.

See also: "Parity" on page 608.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Parity> NONE | ODD | EVEN | MARK | SPC | DC

MARK
The parity bit is always a logic 1.

SPC
SPaCe: The parity bit is always a logic 0.

DC
Don't Care: the parity is ignored.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Parity" on page 608

BUS<b>:UART:POLarity <Polarity>

Defines the idle state of the bus. The idle state corresponds to a logic 1. The transmitted data on the bus is high (high = 1) or low (low = 1) active.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Polarity> IDLLow | IDLHigh

*RST: IDLHigh

Usage: Asynchronous command

Manual operation: See "Polarity" on page 608

BUS<b>:UART:SBIT <StopBits>

Sets the number of stop bits: 1; 1.5 or 2 stop bits are possible.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<StopBits> B1 | B15 | B2
*RST: B1

Usage: Asynchronous command

Manual operation: See "Stop bits" on page 608

BUS<b>:UART:SSIZe <DataBits>

Sets the number of data bits in a message.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<DataBits> Number of data bits. 9 data bits are only possible with parity = none.
Range: 5 to 9
Increment: 1
*RST: 8

Usage: Asynchronous command

Manual operation: See "Data bits" on page 608

BUS<b>:UART:PACKets <Packets>

Defines the method of packet separation. A packet is a number of subsequent words in a date stream.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Packets> NONE | EWORd | TOUT

NONE
Packets are not considered.

EWORd
End word, the end condition of a packet is a pattern. To define the end word, use `BUS<b>:UART:EWORd`

TOUT
Defines a timeout between the packets. To set the timeout, use
`BUS<b>:UART:TOUT`

*RST: NONE

Firmware/software: FW 2.25

Manual operation: See "Packets" on page 609

BUS<b>:UART:TOUT <InterframeTime>

Sets the timeout between packets in a UART data stream. A new packet starts with the first start bit after the timeout.

The command is relevant if `BUS<b>:UART:PACKets` is set to `TOUT`.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<InterframeTime> Range: 1E-6 to 1
Increment: 1
*RST: 1E-3
Default unit: s

Usage: Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "Packets" on page 609

BUS<b>:UART:EWORd <EndFrame>

Sets the end pattern of the packets. A new packet starts with the first start bit after the defined end pattern.

The command is relevant if `BUS<b>:UART:PACKets` is set to `EWORd`.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<EndFrame> End word value in decimal format (range 0 to 255) or hexadecimal format (prefix #H). The query always returns hexadecimal values.

Example:
```
:BUS:UART:PACK EWOR
:BUS:UART:EWOR 10 // Decimal value
:BUS:UART:EWOR?
#H0A // Query returns hex
```

Example:
```
:BUS:UART:PACK EWOR
:BUS:UART:EWOR #Hff // Hexadecimal, prefix #H
:BUS:UART:EWOR?
#HFF
```

Usage: Asynchronous command

Firmware/software: FW 2.25

Manual operation: See "Packets" on page 609

26.18.6.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:UART:TYPE 1930
TRIGger<t>:UART:SOURce 1931
TRIGger<t>:UART:DPOPerator 1931
TRIGger<t>:UART:DPOSition 1931
TRIGger<t>:UART:DPTO 1932
TRIGger<t>:UART:FCONdition 1932
TRIGger<t>:UART:DATA 1932

TRIGger<t>:UART:TYPE <Type>

Selects the trigger type for UART analysis.

See also: "Type" on page 611

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<Type> STBT | PCKS | DATA | PRER | BRKC | STPerror

STBT: Start bit
PCKS: Packet start
DATA: Serial pattern
PRER: Parity error
BRKC: Break condition
STPerror: Stop error

*RST: STBT

Usage: Asynchronous command

Manual operation: See "Type" on page 611

TRIGger<t>:UART:SOURce <Source>

Selects the transmitter or receiver line as trigger source.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Source> TX | RX
*RST: TX

Usage: Asynchronous command

Manual operation: See "Trigger source" on page 612

TRIGger<t>:UART:DPOPerator <DataPosOperator>

Sets the operator for the data position. You can defined an exact position, or a position range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPosOperator> EQUal | GETHan | INRange | RANGe
INRange = RANGe
*RST: GETHan

Usage: Asynchronous command

Manual operation: See "Position" on page 613

TRIGger<t>:UART:DPOSition <DataPosition>

Sets the number of words before the first word of interest. These offset words are ignored.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPosition> Number of words
Range: 0 to 32.767E+3
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Index min, Index max" on page 613

TRIGger<t>:UART:DPTO <DataPositionTo>

Defines the last word of interest, if `TRIGger<t>:UART:DPOPerator` defines a position range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPositionTo> Range: 0 to 32.767E+3
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Index min, Index max" on page 613

TRIGger<t>:UART:FCONdition <DataOperator>

Selects the operator for the data pattern (`TRIGger<t>:UART:DATA`).

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataOperator> EQUal | NEQual
*RST: EQUal

Manual operation: See "Condition" on page 612

TRIGger<t>:UART:DATA <Data>

Specifies the data pattern to be found on the specified trigger source, in binary or hex format. Enter the words in msb first bit order.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Data> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Usage: Asynchronous command

Manual operation: See "Pattern" on page 613

26.18.6.3 Decode results

BUS<b>:UART:WORD<w>:RXValue? 1933
BUS<b>:UART:WORD<w>:TXValue? 1933

BUS<b>:UART:WORD<w>:BITRate? 1933
BUS<b>:UART:WORD<w>:COUNt? 1933
BUS<b>:UART:WORD<w>:SOURce? 1934
BUS<b>:UART:WORD<w>:STARt? 1934
BUS<b>:UART:WORD<w>:STATe? 1934

BUS<b>:UART:WORD<w>:RXValue?
BUS<b>:UART:WORD<w>:TXValue?

Returns the value of the specified word on the Rx line or Tx line, respectively.

Suffix:

<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:

<TxValue> To set the value format, use `FORMat:BPATtern`.
The stated values for range, increment and reset are decimal values.

Range: 0 to 511
*RST: 0

Usage: Query only

BUS<b>:UART:WORD<w>:BITRate?

Returns the primary bit rate.

Suffix:

<b> 1..4
Selects the serial bus.

<w> *
The suffix is irrelevant.

Return values:

<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:UART:WORD<w>:COUNt?

Returns the number of words in the acquisition.

Suffix:

<b> 1..4
Selects the serial bus.

<w> *
The suffix is irrelevant.

Return values:
<Count> Number of words

Usage: Query only

BUS<b>:UART:WORD<w>:SOURce?

Returns the line on which the specified word was transferred.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:
<WordSource> TX | RX
*RST: TX

Usage: Query only

BUS<b>:UART:WORD<w>:STARt?

Returns the start time of the specified word.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:
<WordStart> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:UART:WORD<w>:STATe?

Returns the status of the specified word.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:

<WordState> OK | FRSTart | FRENd | FRME | BREak | STERror | SPERror | PRERror | INSufficient

OK: the frame is valid.
BREak:stop bit error with 0x00 word
STERror: StarT ERror, incorrect start bit
SPERror: StoP ERror, incorrect stop bit
PRERror:PaRity ERror, incorrect parity bit.
INSufficient: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only

26.18.7 CAN (option R&S RTP-K3/K9)

- Configuration....1935
- Trigger....1940
- Decode results....1951
- Search settings....1960
- Search results....1970
- Symbolic trigger, decode and search....1976

26.18.7.1 Configuration

BUS<b>:CAN:DATA:SOURce....1935
BUS<b>:CAN:TYPE....1936
BUS<b>:CAN:FDATa:PSTandard....1936
BUS<b>:CAN:DATA:THReshold....1937
BUS<b>:CAN:TECHnology....1937
BUS<b>:CAN:BITRate....1937
BUS<b>:CAN:FDATa:ENABle....1938
BUS<b>:CAN:FDATa:DBITrate....1938
BUS<b>:CAN:FDATa:SAMPlepoint....1938
BUS<b>:CAN:SAMPlepoint....1938
BUS<b>:CAN:FDATa:T1Segment....1939
BUS<b>:CAN:T1Segment....1939
BUS<b>:CAN:FDATa:T2Segment....1939
BUS<b>:CAN:T2Segment....1939
BUS<b>:CAN:FDATa:JWIDth....1940
BUS<b>:CAN:JWIDth....1940

BUS<b>:CAN:DATA:SOURce <DataSource>

Sets the source of the data line that is selected with `BUS<b>:CAN:TYPE`.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<DataSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15
*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Data" on page 617

BUS<b>:CAN:TYPE <SignalType>

Selects the CAN-High or CAN-Low line. Both lines are required for differential signal transmission used by CAN.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SignalType> CANH | CANL
*RST: CANL

Manual operation: See "Type" on page 618

BUS<b>:CAN:FDATa:PSTandard <ProtStd>

Only available for CAN FD buses. Selects whether the tested signal is an ISO CAN FD signal or not.

Suffix:
<b> 1..4

Parameters:
<ProtStd> ISO | NISO

ISO
Signals are decoded according to the the ISO CAN FD protocol. This protocol has an additional stuff count field before the CRC sequence.

NISO
Non-ISO. Signals are decoded according to the the Bosch CAN FD protocol.

*RST: ISO

Firmware/software: FW 3.35

Manual operation: See "Standard" on page 618

BUS<b>:CAN:DATA:THReshold <Threshold>

Sets a user-defined threshold value.

Alternatively, you can set the threshold according to the signal technology with `BUS<b>:CAN:TECHnology`.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Threshold> Range: -12 to 12
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "Threshold" on page 618

BUS<b>:CAN:TECHnology <Technology>

Sets the threshold voltage as defined for various signal technologies.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Technology> V25 | V3 | V2 | V0 | MANual

V25
2.5 Volt (CMOS 5.0 V)

V3
3.0 Volt (CAN_H HS / CAN_L LS)

V2
2.0 Volt (CAN_L HS / CAN_H LS)

V0
Ground

MANual
Manual setting of user-defined values with `BUS<b>:CAN:DATA:THReshold`.

*RST: V25

Manual operation: See "Threshold" on page 618

BUS<b>:CAN:BITRate <Bitrate>

For CAN buses, the "Bit rate" sets the number of transmitted bits per second.

For CAN FD buses, this parameter is called "Arbitration rate" and sets the bit rate of the arbitration phase.

The maximum bit rate for High Speed CAN is 1 Mbit/s. The bit rate is uniform and fixed for a given CAN or CAN FD bus.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Bitrate> Range: 100 to 5E+6
Increment: 1
*RST: 100E+3
Default unit: bps

Manual operation: See "Bit rate (CAN) / Arbitration rate (CAN FD)" on page 619

BUS<b>:CAN:FDATa:ENABle <CANFDEnabled>

Enables the CAN FD protocol configuration. The setting is available in CAN FD option R&S RTP-K9.

Suffix:
<b> 1..4

Parameters:
<CANFDEnabled> OFF | ON
*RST: ON

Manual operation: See "CAN-FD" on page 618

BUS<b>:CAN:FDATa:DBITrate <FlexDatBitrate>

Sets the bit rate of the data phase. The data rate can be higher than the arbitration rate, but it is uniform and fixed for a given CAN FD bus. The setting is available in CAN FD option R&S RTP-K9.

Suffix:
<b> 1..4

Parameters:
<FlexDatBitrate> Range: 100 to 15E+6
Increment: 1
*RST: 1E+6
Default unit: bps

Manual operation: See "Data rate" on page 619

BUS<b>:CAN:FDATa:SAMPlepoint <FlexDatSamplePt>
BUS<b>:CAN:SAMPlepoint <SamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time.

Alternatively, you can set the sample point with BUS<b>:CAN:T1Segment and BUS<b>:CAN:T2Segment.

For CAN FD signals, BUS<b>:CAN:SAMPlepoint defines the synchronization of the arbitration phase, and BUS<b>:CAN:FDATa:SAMPlepoint defines the synchronization of the data phase.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SamplePoint> Range: 12 to 96 if number of segments is 24. The range reduces if the signal has fewer segments.
Increment: 5
*RST: 66
Default unit: %

Manual operation: See "Sample point" on page 621

BUS<b>:CAN:FDATa:T1Segment <FlexDatTimeSeg1>
BUS<b>:CAN:T1Segment <TimeSeg1>

Sets the number of time quanta before the sample point (T1Segment). T1Segment comprises the segments Synch_seg, Prop_seg, and Phase_seg1 which are specified in the CAN standard.

Make sure to set also BUS<b>:CAN:T2Segment for correct definition of the sample point. Alternatively, you can use BUS<b>:CAN:SAMPlepoint.

See also: Section 14.6.2.2, "Advanced settings", on page 619

For CAN FD signals, BUS<b>:CAN:T1Segment defines the synchronization of the arbitration phase, and BUS<b>:CAN:FDATa:T1Segment defines the synchronization of the data phase.

Suffix:
<b> 1..4

Parameters:
<TimeSeg1> Time quanta
Range: 3 to 23
Increment: 1
*RST: 6.6

Manual operation: See "Time segment1, Time segment2" on page 621

BUS<b>:CAN:FDATa:T2Segment <FlexDatTimeSeg2>
BUS<b>:CAN:T2Segment <TimeSeg2>

Sets the number of time quanta after the sample point (T2Segment). T2Segment matches Phase_seg2 specified in the CAN standard.

Make sure to set also `BUS<b>:CAN:T1Segment` on page 1939 for correct definition of the sample point. Alternatively, you can use `BUS<b>:CAN:SAMPlepoint`.

See also: Section 14.6.2.2, "Advanced settings", on page 619

For CAN FD signals, `BUS<b>:CAN:T2Segment` defines the synchronization of the arbitration phase, and `BUS<b>:CAN:FDATa:T2Segment` defines the synchronization of the data phase.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<TimeSeg2> Time quanta

Range: 1 to 21
Increment: 1
*RST: 3.4

Manual operation: See "Time segment1, Time segment2" on page 621

BUS<b>:CAN:FDATa:JWIDth <FlexDatJumpWdt>
BUS<b>:CAN:JWIDth <JumpWidth>

Defines the maximum number of time quanta for phase correction. Time segment1 may be lengthened or Time segment2 may be shortened due to resynchronization. Resynchronization corrects the phase error of an edge caused by the drift of the oscillators.

For CAN FD signals, this setting defines the synchronization of the arbitration phase.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<JumpWidth> Time quanta

Range: 1 to 4, available maximum depends on the number of segments and the sample point
Increment: 1
*RST: 1

Manual operation: See "Jump width" on page 621

26.18.7.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.

- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:CAN:TYPE 1941
TRIGger<t>:CAN:FDATa:STANdard 1942
TRIGger<t>:CAN:FTYPe 1942
TRIGger<t>:CAN:ITYPe 1943
TRIGger<t>:CAN:ICONdition 1943
TRIGger<t>:CAN:IMIN 1944
TRIGger<t>:CAN:IMAX 1944
TRIGger<t>:CAN:FDATa:FDF 1945
TRIGger<t>:CAN:FDATa:BRS 1945
TRIGger<t>:CAN:FDATa:ESI 1945
TRIGger<t>:CAN:DCONdition 1945
TRIGger<t>:CAN:DMIN 1946
TRIGger<t>:CAN:DMAX 1946
TRIGger<t>:CAN:BORDer 1947
TRIGger<t>:CAN:DLCCondition 1947
TRIGger<t>:CAN:DLC 1947
TRIGger<t>:CAN:NDBYtes? 1948
TRIGger<t>:CAN:FDATa:DPOPerator 1948
TRIGger<t>:CAN:FDATa:DPOSition 1949
TRIGger<t>:CAN:FDATa:DPTO 1949
TRIGger<t>:CAN:ACKerror 1949
TRIGger<t>:CAN:BITSterror 1950
TRIGger<t>:CAN:CRCerror 1950
TRIGger<t>:CAN:FORMerror 1950
TRIGger<t>:CAN:FDATa:SCERror 1950

TRIGger<t>:CAN:TYPE <Type>

Selects the trigger type for CAN analysis.

See: "Trigger type" on page 624.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<Type> STOF | FTYP | ID | IDDT | ERRC

STOF
STart Of Frame: triggers on the first edge of the dominant SOF bit (synchronization bit).

FTYP
Frame TYPe: triggers on a specified frame type (data, remote, error, or overload) and on the identifier format.
To set the frame type, use `TRIGger<t>:CAN:FTYPe`. ´Set the identifier format with `TRIGger<t>:CAN:ITYPe`

ID
IDentifier: Sets the trigger to one specific identifier or an identifier range. To set the identifier, use `TRIGger<t>:CAN:ICONdition`, `TRIGger<t>:CAN:IMIN`, and `TRIGger<t>:CAN:IMAX`.

IDDT
IDentifier and DaTa: Combination of identifier and data conditions To set the identifier condition, use `TRIGger<t>:CAN:ICONdition`, `TRIGger<t>:CAN:IMIN`, and `TRIGger<t>:CAN:IMAX`.
To set the data condition, use `TRIGger<t>:CAN:DCONdition`, `TRIGger<t>:CAN:DMIN`, and `TRIGger<t>:CAN:DMAX`.

ERRC
ERRor Condition: Define the error types with `TRIGger<t>:CAN:ACKerror`, `TRIGger<t>:CAN:BITSterror`, `TRIGger<t>:CAN:CRCerror`, `TRIGger<t>:CAN:FORMerror`, `TRIGger<t>:CAN:FDATa:SCERror` on page 1950.

*RST: STOF

Manual operation: See "Trigger type" on page 624

TRIGger<t>:CAN:FDATa:STANdard <Standard>

Selects the CAN standard. Use `ANY` if the standard of the signal is unknown. The setting is available in CAN FD option R&S RTP-K9.

Suffix:
<t> 1..3

Parameters:
<Standard> ANY | CAN | CANFd
*RST: CAN

Manual operation: See "Standard" on page 626

TRIGger<t>:CAN:FTYPe <FrameType>

Selects the CAN frame type if `TRIGger<t>:CAN:TYPE` is set to FTYP (frame type) or ID (identifier).

For data and remote frames, the identifier format has to be set with `TRIGger<t>:CAN:ITYPe`.

See also: "Frame type" on page 626

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<FrameType> ANY | DATA | REMote | ERRor | OVERload
Available values depend on the CAN standard and on the `TRIGger<t>:CAN:TYPE` setting:
Remote frames are not available in the CAN FD protocol.
If the trigger type is set to FTYP (frame type), you can set the values `DATA | REMote | ERRor | OVERload`.
If the trigger type is set to ID (identifier), you can set the values `ANY | DATA | REMote`.

*RST: ANY

Manual operation: See "Frame type" on page 626

TRIGger<t>:CAN:ITYPe <IdentifierType>

Selects the format of data and remote frames.

Remote frames are not available in the CAN FD protocol.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<IdentifierType> ANY | B11 | B29

B11
11 bit identifier (standard format). The instrument triggers on the sample point of the IDE bit.

B29
29 bit identifier (extended format). The instrument triggers on the sample point of the RTR bit.

ANY
The ID type and ID pattern are not relevant for the trigger condition.

*RST: ANY

Manual operation: See "ID type" on page 626

TRIGger<t>:CAN:ICONdition <IdOperator>

Sets the operator to set a specific identifier or an identifier range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These condition require one identifier pattern to be set with `TRIGger<t>:CAN:IMIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:CAN:IMIN` and `TRIGger<t>:CAN:IMAX` on page 1944.

*RST: EQUal

Manual operation: See "Identifier setup: Condition, Identifier min, Identifier max" on page 627

TRIGger<t>:CAN:IMIN <IdPattern>

Specifies a message identifier pattern, or sets the the start value of an identifier range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<IdPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Manual operation: See "Identifier setup: Condition, Identifier min, Identifier max" on page 627

TRIGger<t>:CAN:IMAX <IdPatternTo>

Sets the the end value of an identifier range if `TRIGger<t>:CAN:ICONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<IdPatternTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Manual operation: See "Identifier setup: Condition, Identifier min, Identifier max" on page 627

TRIGger<t>:CAN:FDATa:FDF <FDF_Bit>

Specifies the CAN FD frame format. It corresponds to the EDL bit (extended data length), which only exists in CAN FD format.

Suffix:
<t> 1..3

Parameters:
<FDF_Bit> ONE | ZERO | DC
ONE: CAN FD.
ZERO: CAN.
DC: don't care, the format is not relevant.
*RST: DC

Manual operation: See "FD bits" on page 627

TRIGger<t>:CAN:FDATa:BRS <BRS_Bit>

Sets the bit rate switch bit.

Suffix:
<t> 1..3

Parameters:
<BRS_Bit> ONE | ZERO | DC
ONE: the bit rate switches from the bit rate of the arbitration phase to the faster data rate.
*RST: ONE

Manual operation: See "FD bits" on page 627

TRIGger<t>:CAN:FDATa:ESI <ESI_Bit>

Sets the error state indicator bit.

Suffix:
<t> 1..3

Parameters:
<ESI_Bit> ONE | ZERO | DC
DC: don't care, bit is nor relevant
*RST: DC

Manual operation: See "FD bits" on page 627

TRIGger<t>:CAN:DCONdition <DataOperator>

Sets the operator to set a specific data pattern or a data pattern range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with `TRIGger<t>:CAN:DMIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:CAN:DMIN` and `TRIGger<t>:CAN:DMAX`.

*RST: EQUal

Manual operation: See "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628

TRIGger<t>:CAN:DMIN <DataPattern>

Specifies a data pattern, or sets the the start value of a data pattern range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628

TRIGger<t>:CAN:DMAX <DataPatternTo>

Sets the the end value of an data range if `TRIGger<t>:CAN:DCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPatternTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628

TRIGger<t>:CAN:BORDer <Endianness>

Sets the byte order (endianness) of the data transfer. Only for CAN protocol.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Endianness> BENDian | LENDian

BENDian
Big endian, data is analyzed and evaluated in the order of reception.

LENDian
Little endian, the instrument reads the complete data, reverses the byte order of the data, and compares it with the specified data word.

*RST: BENDian

Manual operation: See "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628

TRIGger<t>:CAN:DLCCondition <DLCOperator>

Operator to set the data length code for triggering on CAN and CAN FD data.

For details, see "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628.

The number of data bytes to be found is set with `TRIGger<t>:CAN:DLC`.

See also: `TRIGger<t>:CAN:BORDer`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DLCOperator> EQUal | GETHan

For little endian transfer direction, EQUal must be set.

*RST: GETHan

Manual operation: See "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628

TRIGger<t>:CAN:DLC <WordCount>

Sets the Data Length Code, the number of data bytes to be found. For complete definition, set also the operator with `TRIGger<t>:CAN:DLCCondition` on page 1947.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<WordCount> Range: CAN: 1 to 8, CAN FD: 1 to 15 (64 bytes)
Increment: 1
*RST: 1

Manual operation: See "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628

TRIGger<t>:CAN:NDBYtes?

Returns the number of data bytes defined by DLC. DLC and NDB are different in CAN FD for DLCs > 8.

See also: "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628.

Suffix:

<t> 1..3

Return values:

<NDBytes> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Query only

Manual operation: See "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628

TRIGger<t>:CAN:FDATa:DPOPerator <DataPosOperator>

Sets the operator to define an exact position or a data range where the instrument looks for the specified data pattern. The setting is available in CAN FD option R&S RTP-K9.

The position can be defined if the data field of the frame is longer than 8 bytes - if `TRIGger<t>:CAN:DLC`≥9.

Suffix:

<t> 1..3

Parameters:

<DataPosOperator> ANY | OFF | EQUal | GETHan | INRange | RANGe

ANY = OFF
The data position is not relevant for the trigger condition.

EQUal | GETHan
Equal, Greater or equal than. These conditions require one data position to be set with `TRIGger<t>:CAN:FDATa:DPOSition`.

INRange = RANGe
In range: Set the minimum and maximum value of the range with `TRIGger<t>:CAN:FDATa:DPOSition` and `TRIGger<t>:CAN:FDATa:DPTO`.

*RST: ANY

Manual operation: See "Data position" on page 629

TRIGger<t>:CAN:FDATa:DPOSition <DataPosition>

Defines the number of the first data byte at which the data pattern may start. The setting is available in CAN FD option R&S RTP-K9.

Suffix:
<t> 1..3

Parameters:
<DataPosition> Range: 1 to 57
Increment: 1
*RST: 1

Manual operation: See "Data position" on page 629

TRIGger<t>:CAN:FDATa:DPTO <DataPositionTo>

Sets the number of the last byte at which the required data pattern may start.

Suffix:
<t> 1..3

Parameters:
<DataPositionTo> Range: 8 to 64
Increment: 1
*RST: 8

Manual operation: See "Data position" on page 629

TRIGger<t>:CAN:ACKerror <AckError>

Triggers when the transmitter does not receive an acknowledgment - a dominant bit during the Ack Slot.

The trigger type has to be set before: `TRIGger<t>:CAN:TYPE` to `ERRC`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<AckError> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 629

TRIGger<t>:CAN:BITSterror <BitStuffError>

Triggers if astuff error occurs - when the 6th consecutive equal bit level in the mentioned fields is detected.

The trigger type has to be set before: `TRIGger<t>:CAN:TYPE` to `ERRC`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<BitStuffError> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 629

TRIGger<t>:CAN:CRCerror <ChecksumError>

Triggers on CRC errors. A CRC error occurs when the CRC calculated by the receiver differs from the received value in the CRC sequence.

The trigger type has to be set before: `TRIGger<t>:CAN:TYPE` to `ERRC`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<ChecksumError> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 629

TRIGger<t>:CAN:FORMerror <FormError>

Triggers when a fixed-form bit field contains one or more illegal bits.

The trigger type has to be set before: `TRIGger<t>:CAN:TYPE` to `ERRC`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<FormError> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 629

TRIGger<t>:CAN:FDATa:SCERror <StuffCountError>

Triggers on stuff count errors. A stuff count error occurs if th received stuff count value does not match the value calculated from the own stuff bit count.

The trigger type TRIGger<t>:CAN:TYPE must be set to ERRC.

Only relevant for CAN FD signals in ISO standard.

Suffix:
<t> 1..3

Parameters:
<StuffCountError> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 629

26.18.7.3 Decode results

To load and acivate a label list, use:

- BUS<b>:NEWList on page 1835
- BUS<b>:SYMBols on page 1835

BUS<b>:CAN:FCOunt? 1951
BUS<b>:CAN:FDATa:FRAMe<fr>:STANdard? 1952
BUS<b>:CAN:FRAMe<fr>:STATus? 1952
BUS<b>:CAN:FRAMe<fr>:NDBYtes? 1953
BUS<b>:CAN:FRAMe<fr>:STARt? 1953
BUS<b>:CAN:FRAMe<fr>:STOP? 1953
BUS<b>:CAN:FRAMe<fr>:SYMBol? 1954
BUS<b>:CAN:FRAMe<fr>:TYPE? 1954
BUS<b>:CAN:FRAMe<fr>:DATA? 1954
BUS<b>:CAN:FRAMe<fr>:ACKState? 1955
BUS<b>:CAN:FRAMe<fr>:CSSTate? 1955
BUS<b>:CAN:FRAMe<fr>:DLCState? 1955
BUS<b>:CAN:FRAMe<fr>:IDSTate? 1955
BUS<b>:CAN:FRAMe<fr>:ACKValue? 1955
BUS<b>:CAN:FRAMe<fr>:BITRate? 1956
BUS<b>:CAN:FRAMe<fr>:CSValue? 1956
BUS<b>:CAN:FRAMe<fr>:DLCValue? 1956
BUS<b>:CAN:FRAMe<fr>:IDTYpe? 1957
BUS<b>:CAN:FRAMe<fr>:IDValue? 1957
BUS<b>:CAN:FRAMe<fr>:BSEPosition? 1957
BUS<b>:CAN:FRAMe<fr>:FERCause? 1958
BUS<b>:CAN:FRAMe<fr>:SDEXport? 1958
BUS<b>:CAN:FDATa:FRAMe<fr>:SCValue? 1958
BUS<b>:CAN:FRAMe<fr>:BYTE<o>:STATe? 1959
BUS<b>:CAN:FRAMe<fr>:BYTE<o>:VALue? 1959

BUS<b>:CAN:FCOunt?

Returns the number of decoded frames of the acquisition.

Suffix:
<b> 1..4
Selects the serial bus.

Return values:

<Count> Total number of decoded frames.

Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CAN:FDATa:FRAMe<fr>:STANdard?

Returns the CAN standard. The setting is available in CAN FD option R&S RTP-K9.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> The frame suffix is irrelevant.

Return values:

<Standard> CAN | CANFd

*RST: CAN

Usage: Query only

Manual operation: See "CAN-FD" on page 618

BUS<b>:CAN:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<FrameState> OK | FORM | BTST | CRC | CRCD | NOACk | ACKD | EOFD | CAERror | FCERor | INSufficient | SERRror | SFERror | SCERror | SAERror | SCAE | SCFE

OK: the frame is valid.
FORM: Fixed-bit form error
BTST: Bit stuffing error occured.
CRC: Cyclic redundancy check failed.
CRCD: Wrong CRC delimiter occured.
NOACK: Acknowlegde is missing.
ACKD: Wrong ACK delimiter occured.
EOFD: Wrong end of frame.
CAERror: CRC error followed by an acknowledgement error (missing acknowledge)
FCERor: CRC error followed by a form error (wrong CRC delimiter or wrong ACK delimiter)

INSufficient: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.
SERRror: Stuff count error (CAN-FD ISO only)
SFER: Stuff count error and FORM error (CAN-FD ISO only)
SCER: Stuff count error and CRC error (CAN-FD ISO only)
SAER: Stuff count error and ACK error (CAN-FD ISO only)
SCAE: Stuff count error and CRC error and ACK error (CAN-FD ISO only)
SCFE: Stuff count error and CRC error and FORM error (CAN-FD ISO only)

*RST: OK

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:NDBYtes?

REturns the number of data bytes.

Suffix:
<b> 1..4

<fr> *

Return values:
<NDBytes> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Query only

Firmware/software: FW 3.35

BUS<b>:CAN:FRAMe<fr>:STARt?
BUS<b>:CAN:FRAMe<fr>:STOP?

Return the start time and stop time of the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Start>, <Stop> Time
Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the number of the frame in the current acquisition, 1...n.

Return values:
<Label> String with symbolic label of the identifier

Example: `BUS:CAN:FRAMe:SYMBol?`
Response: `Temperature`

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameType> DATA | REMote | ERR | OVLD
Data, remote, error or overload frame.
*RST: DATA

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:DATA?

Returns the data of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Data> Comma-separated list of values. The first value is the number of bytes, followed by the values of the data bytes.

Example: `BUS1:CAN:FRAMe2:DATA?`
`--> 3,208,231,32`
Returns the data of the second frame: the number of bytes is 3 data (first value).

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:ACKState?
BUS<b>:CAN:FRAMe<fr>:CSSTate?
BUS<b>:CAN:FRAMe<fr>:DLCState?
BUS<b>:CAN:FRAMe<fr>:IDSTate?

Return the states of following parts of a message

- ACKState: state of acknowledgement field
- CSSTate: state of checksum field (CRC)
- DLCState: state of data length code
- IDSTate: identifier state

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<State> OK | ERRor | UNDF
UNDF: Undefined
*RST: OK

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:ACKValue?

Returns the value of the acknowledge slot for the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameAckValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.
Range: 0 to 1
*RST: 0

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:CSValue?

Returns the CRC sequence value of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<ChecksumValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.

Range: 0 to 2.09715E+6
*RST: 0

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:DLCValue?

Returns the data length code of the selected frame - the number of data bytes in the frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<FrameDLCValue> Number of data bytes in decimal values.

Range: 0 to 15
*RST: 0

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:IDTYpe?

Returns the identifier type of the selected frame, the identifier format of data and remote frames.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<IdentifierType> ANY | B11 | B29

B11: standard format, 11 bit
B29: extended format, 29 bit

*RST: B11

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<IdtfVal> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.

Range: 0 to 536.871E+6
*RST: 0

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:BSEPosition?

Returns the location of a bit stuffing error.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<BitStuffErrorPos> Time when the error occured
Range: 0 to 5000
*RST: 0

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:FERCause?

Returns information on a form error, if the frame status query returned a FORM error.

See also: BUS<b>:CAN:FRAMe<fr>:STATus? on page 1952

Suffix:
<b> 1..4

<fr> *

Return values:
<FormErrorCause> NONE | CRCDerror | ACKDerror | FSBE | RESerror
CRCD = CRC delimiter error
ACKD = ACK delimiter error
FSBE = Fixed stuff bit error (CAN-FD ISO only)
RESE = Reserved bit error
*RST: NONE

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:SDEXport?

Returns the symbolic data of the frame in export format.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<SymbolicData>

Usage: Query only

BUS<b>:CAN:FDATa:FRAMe<fr>:SCValue?

Returns the stuff bit count modulo 8 value.

Suffix:
<b> 1..4
<fr> *

Return values:
<StuffCount> Range: 0 to 7
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:BYTE<o>:STATe?

Returns the state of the specified byte.

Suffix:
<b> 1..4
Selects the serial bus.
<fr> *
Selects the frame.
<o> *
Selects the byte number.

Return values:
<State> OK | ERRor | UNDF
UNDF: Undefined
*RST: OK

Usage: Query only

BUS<b>:CAN:FRAMe<fr>:BYTE<o>:VALue?

Returns the value of the specified byte.

Suffix:
<b> 1..4
Selects the serial bus.
<fr> *
Selects the frame.
<o> *
Selects the byte number.

Return values:
<Value> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.
Range: 0 to 255
*RST: 0

Usage: Query only

26.18.7.4 Search settings

SEARch:TRIGger:CAN[:SSOFrame] 1960
SEARch:TRIGger:CAN:SFTYpe 1960
SEARch:TRIGger:CAN:SFIDentifier 1961
SEARch:TRIGger:CAN:SIDData 1961
SEARch:TRIGger:CAN:SERRor 1961
SEARch:TRIGger:CAN:FDATa:STANdard 1962
SEARch:TRIGger:CAN:BORDer 1962
SEARch:TRIGger:CAN:FTYPe 1962
SEARch:TRIGger:CAN:ITYPe 1963
SEARch:TRIGger:CAN:ICONdition 1963
SEARch:TRIGger:CAN:IMAX 1963
SEARch:TRIGger:CAN:IMIN 1964
SEARch:TRIGger:CAN:DCONdition 1964
SEARch:TRIGger:CAN:DMIN 1964
SEARch:TRIGger:CAN:DMAX 1965
SEARch:TRIGger:CAN:DLCCondition 1965
SEARch:TRIGger:CAN:DLC 1965
SEARch:RESult:CAN:FRAMe<fr>:NDBYtes? 1966
SEARch:TRIGger:CAN:FDATa:DPOPerator 1966
SEARch:TRIGger:CAN:FDATa:DPOSition 1967
SEARch:TRIGger:CAN:FDATa:DPTO 1967
SEARch:TRIGger:CAN:ACKerror 1967
SEARch:TRIGger:CAN:BITSterror 1967
SEARch:TRIGger:CAN:CRCerror 1968
SEARch:TRIGger:CAN:FORMerror 1968
SEARch:TRIGger:CAN:FDATa:SCERror 1968
SEARch:TRIGger:CAN:FDATa[:FDF] 1969
SEARch:TRIGger:CAN:FDATa:BRS 1969
SEARch:TRIGger:CAN:FDATa:ESI 1969

SEARch:TRIGger:CAN[:SSOFrame] <SearchName>,<FrameStart>
SEARch:TRIGger:CAN[:SSOFrame]? <SearchName>

Enables the search for a start of frame.

Parameters:
<FrameStart> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search Criteria" on page 632

SEARch:TRIGger:CAN:SFTYpe <SearchName>,<CheckFrameType>
SEARch:TRIGger:CAN:SFTYpe? <SearchName>

Enables the search for a specified frame type.

Parameters:
<CheckFrameType> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search Criteria" on page 632

SEARch:TRIGger:CAN:SFIDentifier <SearchName>,<Identifier>
SEARch:TRIGger:CAN:SFIDentifier? <SearchName>

Enables the search for frame indentifier.

Parameters:
<Identifier> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search Criteria" on page 632

SEARch:TRIGger:CAN:SIDData <SearchName>,<IdentifierData>
SEARch:TRIGger:CAN:SIDData? <SearchName>

Enables the search for identifier and data.

Parameters:
<IdentifierData> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search Criteria" on page 632

SEARch:TRIGger:CAN:SERRor <SearchName>,<ErrorCondition>
SEARch:TRIGger:CAN:SERRor? <SearchName>

Enables the search for a specified error.

Parameters:
<ErrorCondition> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search Criteria" on page 632

SEARch:TRIGger:CAN:FDATa:STANdard <SearchName>,<Standard>
SEARch:TRIGger:CAN:FDATa:STANdard? <SearchName>

Selects the CAN standard: CAN, CAN FD, or Any.

Use "Any" to search on either CAN or CAN-FD frame. In this case, the search configuration provides all possible settings, for CAN as well as for CAN FD. The setting is available in CAN FD option R&S RTP-K9.

Parameters:
<Standard> ANY | CAN | CANFd
*RST: CAN

Parameters for setting and query:
<SearchName> String with the search name

Manual operation: See "Standard" on page 634

SEARch:TRIGger:CAN:BORDer <SearchName>,<Endianness>
SEARch:TRIGger:CAN:BORDer? <SearchName>

Sets the byte order (endianness) of the data transfer.

Parameters:
<Endianness> BENDian | LENDian

BENDian
Big endian, most significant byte first.

LENDian
Little endian, least significant byte first.

*RST: BENDian

Parameters for setting and query:
<SearchName>

SEARch:TRIGger:CAN:FTYPe <SearchName>,<FrameType>
SEARch:TRIGger:CAN:FTYPe? <SearchName>

Selects the CAN frame type to be searched for.

For data and remote frames, the identifier format has to be set with `SEARch:TRIGger:CAN:ITYPe` on page 1963.

Parameters:
<FrameType> ANY | DATA | REMote | ERRor | OVERload
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame type" on page 634

SEARch:TRIGger:CAN:ITYPe <SearchName>,<IdentifierType>
SEARch:TRIGger:CAN:ITYPe? <SearchName>

Selects the format of data and remote frames: 11 bit for CAN base frames, or 29 bits for CAN extended frames.

Parameters:
<IdentifierType> ANY | B11 | B29
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "ID type" on page 634

SEARch:TRIGger:CAN:ICONdition <SearchName>,<IdOperator>
SEARch:TRIGger:CAN:ICONdition? <SearchName>

Sets the operator to set a specific identifier or an identifier range.

Parameters:
<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These condition require one identifier pattern to be set with `SEARch:TRIGger:CAN:IMIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `SEARch:TRIGger:CAN:IMIN` and `SEARch:TRIGger:CAN:IMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Identifier setup: Condition, Identifier min, Identifier max" on page 634

SEARch:TRIGger:CAN:IMAX <SearchName>,<IdPatternTo>
SEARch:TRIGger:CAN:IMAX? <SearchName>

Sets the the end value of an identifier range if `SEARch:TRIGger:CAN:ICONdition` is set to `INRange` or `OORange`.

Parameters:
<IdPatternTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Manual operation: See "Identifier setup: Condition, Identifier min, Identifier max" on page 634

SEARch:TRIGger:CAN:IMIN <SearchName>,<IDPattern>
SEARch:TRIGger:CAN:IMIN? <SearchName>

Specifies a message identifier pattern, or sets the the start value of an identifier range.

Parameters:
<IDPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Manual operation: See "Identifier setup: Condition, Identifier min, Identifier max" on page 634

SEARch:TRIGger:CAN:DCONdition <SearchName>,<DataOperator>
SEARch:TRIGger:CAN:DCONdition? <SearchName>

Sets the operator to set a specific data pattern or a data pattern range.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with `SEARch:TRIGger:CAN:DMIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `SEARch:TRIGger:CAN:DMIN` and `SEARch:TRIGger:CAN:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: DLC, NDB, Condition, Data min, Data max" on page 635

SEARch:TRIGger:CAN:DMIN <SearchName>,<DataPattern>
SEARch:TRIGger:CAN:DMIN? <SearchName>

Specifies a data pattern, or sets the the start value of a data pattern range.

Parameters:
<DataPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: DLC, NDB, Condition, Data min, Data max" on page 635

SEARch:TRIGger:CAN:DMAX <SearchName>,<DataPatternTo>
SEARch:TRIGger:CAN:DMAX? <SearchName>

Sets the the end value of an data range if `SEARch:TRIGger:CAN:DCONdition` is set to `INRange` or `OORange`.

Parameters:
<DataPatternTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: DLC, NDB, Condition, Data min, Data max" on page 635

SEARch:TRIGger:CAN:DLCCondition <SearchName>,<DLCOperator>
SEARch:TRIGger:CAN:DLCCondition? <SearchName>

Operator to set the data length code for search.

Parameters:
<DLCOperator> EQUal | GETHan
*RST: GETHan

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: DLC, NDB, Condition, Data min, Data max" on page 635

SEARch:TRIGger:CAN:DLC <SearchName>,<WordCount>
SEARch:TRIGger:CAN:DLC? <SearchName>

Sets the Data Length Code, the number of data bytes to be found. For complete definition, set also the operator with `SEARch:TRIGger:CAN:DLCCondition`.

Parameters:
<WordCount> Range: 1 to 8
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: DLC, NDB, Condition, Data min, Data max" on page 635

SEARch:RESult:CAN:FRAMe<fr>:NDBYtes? <SearchName>

Returns the number of data bytes defined by DLC. DLC and NDB are different in CAN FD for DLCs > 8.

See also: "Data setup: DLC, NDB, Transfer, Condition, Data min, Data max" on page 628.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<NDBytes> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Query only

Manual operation: See "Data setup: DLC, NDB, Condition, Data min, Data max" on page 635

SEARch:TRIGger:CAN:FDATa:DPOPerator <SearchName>,<DataPosOperator>
SEARch:TRIGger:CAN:FDATa:DPOPerator? <SearchName>

Sets the operator for the data position if DLC ≥ 9. You can define an exact position, or a position range. The setting is available in CAN FD option R&S RTP-K9.

Parameters:
<DataPosOperator> ANY | OFF | EQUal | GETHan | INRange | RANGe

ANY = OFF
The data position is not relevant for the search.

EQUal | GETHan
Equal, Greater or equal than. These conditions require one data position to be set with `SEARch:TRIGger:CAN:FDATa:DPOSition`.

INRange = RANGe
In range: Set the minimum and maximum value of the range with `SEARch:TRIGger:CAN:FDATa:DPOSition` and `SEARch:TRIGger:CAN:FDATa:DPTO`.

*RST: ANY

Parameters for setting and query:
<SearchName> String with the search name

Manual operation: See "Data position" on page 635

SEARch:TRIGger:CAN:FDATa:DPOSition <SearchName>,<DataPosition>
SEARch:TRIGger:CAN:FDATa:DPOSition? <SearchName>

Defines the first possible start position of the data pattern. The setting is available in CAN FD option R&S RTP-K9.

Parameters:
<DataPosition> Range: 1 to 57
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName> String with the search name

Manual operation: See "Data position" on page 635

SEARch:TRIGger:CAN:FDATa:DPTO <SearchName>,<DataPositionTo>
SEARch:TRIGger:CAN:FDATa:DPTO? <SearchName>

Defines the last possible start position of the data pattern if the position operator `SEARch:TRIGger:CAN:FDATa:DPOPerator` defines a range. The setting is available in CAN FD option R&S RTP-K9.

Parameters:
<DataPositionTo> Range: 8 to 64
Increment: 1
*RST: 8

Parameters for setting and query:
<SearchName> String with the search name

Manual operation: See "Data position" on page 635

SEARch:TRIGger:CAN:ACKerror <SearchName>,<AckError>
SEARch:TRIGger:CAN:ACKerror? <SearchName>

Searches for acknowledgement errors. An acknowledgement error occurs when the transmitter does not receive an acknowledgment - a dominant bit during the Ack Slot.

Parameters:
<AckError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 635

SEARch:TRIGger:CAN:BITSterror <SearchName>,<BitStuffError>
SEARch:TRIGger:CAN:BITSterror? <SearchName>

Searches for bit stuffing errors.

Parameters:
<BitStuffError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 635

SEARch:TRIGger:CAN:CRCerror <SearchName>,<ChecksumError>
SEARch:TRIGger:CAN:CRCerror? <SearchName>

Searches for errors in the Cyclic Redundancy Check.

Parameters:
<ChecksumError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 635

SEARch:TRIGger:CAN:FORMerror <SearchName>,<FormError>
SEARch:TRIGger:CAN:FORMerror? <SearchName>

Searches for form errors. A form error occurs when a fixed-form bit field contains one or more illegal bits.

Parameters:
<FormError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 635

SEARch:TRIGger:CAN:FDATa:SCERror <SearchName>,<StuffCountError>
SEARch:TRIGger:CAN:FDATa:SCERror? <SearchName>

Triggers on stuff count errors. A stuff count error occurs if th received stuff count value does not match the value calculated from the own stuff bit count.

Only relevant for CAN FD signals in ISO standard.

Parameters:
<StuffCountError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 635

SEARch:TRIGger:CAN:FDATa[:FDF] <SearchName>,<FDF_Bit>
SEARch:TRIGger:CAN:FDATa[:FDF]? <SearchName>

Sets the EDL bit (extended data length), which determines whether a frame is CAN or CAN-FD. The setting is available in CAN FD option R&S RTP-K9.

Parameters:
<FDF_Bit> ONE | ZERO | DC

ONE: CAN FD.
ZERO: CAN.
DC: don't care, the format is not relevant.

*RST: DC

Parameters for setting and query:
<SearchName> String with the search name

Manual operation: See "FD bits" on page 635

SEARch:TRIGger:CAN:FDATa:BRS <SearchName>,<BRS_Bit>
SEARch:TRIGger:CAN:FDATa:BRS? <SearchName>

Sets the bit rate switching bit for identifier and identifier + data searches. The setting is available in CAN FD option R&S RTP-K9.

Parameters:
<BRS_Bit> ONE | ZERO | DC

DC: Don't care

*RST: ONE

Parameters for setting and query:
<SearchName> String with the search name

Manual operation: See "FD bits" on page 635

SEARch:TRIGger:CAN:FDATa:ESI <SearchName>,<ESI_Bit>
SEARch:TRIGger:CAN:FDATa:ESI? <SearchName>

Sets the error state indicator bit for identifier and identifier + data searches. The setting is available in CAN FD option R&S RTP-K9.

Parameters:
<ESI_Bit> ONE | ZERO | DC

*RST: DC

Parameters for setting and query:
<SearchName> String with the search name

Manual operation: See "FD bits" on page 635

26.18.7.5 Search results

The search on decoded CAN data returns the same results as the queries for decode results.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.7.3, "Decode results", on page 1951.

SEARch:RESult:CAN:FCOunt? 1970
SEARch:RESult:CAN:FRAMe<fr>:ACKValue? 1970
SEARch:RESult:CAN:FRAMe<fr>:BSEPosition? 1971
SEARch:RESult:CAN:FRAMe<fr>:BYTE<n>:STATe? 1971
SEARch:RESult:CAN:FRAMe<fr>:BYTE<n>:VALue? 1971
SEARch:RESult:CAN:FRAMe<fr>:ACKState? 1972
SEARch:RESult:CAN:FRAMe<fr>:CSSTate? 1972
SEARch:RESult:CAN:FRAMe<fr>:DLCState? 1972
SEARch:RESult:CAN:FRAMe<fr>:IDSTate? 1972
SEARch:RESult:CAN:FRAMe<fr>:CSValue? 1972
SEARch:RESult:CAN:FRAMe<fr>:DATA? 1972
SEARch:RESult:CAN:FRAMe<fr>:DLCValue? 1973
SEARch:RESult:CAN:FRAMe<fr>:FERCause? 1973
SEARch:RESult:CAN:FRAMe<fr>:IDTYpe? 1973
SEARch:RESult:CAN:FRAMe<fr>:IDValue? 1973
SEARch:RESult:CAN:FDATa:FRAMe<fr>:SCValue? 1974
SEARch:RESult:CAN:FDATa:FRAMe<fr>:STANdard? 1974
SEARch:RESult:CAN:FRAMe<fr>:STARt? 1974
SEARch:RESult:CAN:FRAMe<fr>:STATus? 1975
SEARch:RESult:CAN:FRAMe<fr>:STOP? 1975
SEARch:RESult:CAN:FRAMe<fr>:SYMBol? 1975
SEARch:RESult:CAN:FRAMe<fr>:TYPE? 1976

SEARch:RESult:CAN:FCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:

<Count>	Range:	0 to 100E+3
	Increment:	1
	*RST:	0

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:ACKValue? <SearchName>

Suffix:

<fr>	*

Query parameters:
<SearchName>

Return values:
<AckValue> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:BSEPosition? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<BitStuffErrorPos> Range: 0 to 5000
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:BYTE<n>:STATe? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<State> OK | ERRor | UNDF
*RST: OK

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:BYTE<n>:VALue? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<Value> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:ACKState? <SearchName>
SEARch:RESult:CAN:FRAMe<fr>:CSSTate? <SearchName>
SEARch:RESult:CAN:FRAMe<fr>:DLCState? <SearchName>
SEARch:RESult:CAN:FRAMe<fr>:IDSTate? <SearchName>
Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdtfSt> OK | ERRor | UNDF
*RST: OK

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:CSValue? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<ChecksumValue> Range: 0 to 2.09715E+6
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:DATA? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Value>

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:DLCValue? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameDLCValue> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:FERCause? <SearchName>

Returns information on a form error, if the frame status query returned a FORM error.

See also: SEARch:RESult:CAN:FRAMe<fr>:STATus? on page 1975.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormErrorCause> NONE | CRCDerror | ACKDerror | FSBE | RESerror
See BUS<b>:CAN:FRAMe<fr>:FERCause? on page 1958.
*RST: NONE

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:IDTYpe? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdentifierType> ANY | B11 | B29
*RST: B11

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:IDValue? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdtfVal> Range: 0 to 536.871E+6
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CAN:FDATa:FRAMe<fr>:SCValue? <SearchName>

Returns the stuff bit count modulo 8.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<StuffCount> Range: 0 to 7
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CAN:FDATa:FRAMe<fr>:STANdard? <SearchName>

Returns the CAN protocol standard: CAN or CAN FD.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Standard> CAN | CANFd
*RST: CAN

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:STARt? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:STATus? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameState> OK | FORM | BTST | CRC | CRCD | NOACk | ACKD | EOFD | CAERror | FCERor | INSufficient | SERRror | SFERror | SCERror | SAERror | SCAE | SCFE

See BUS<b>:CAN:FRAMe<fr>:STATus? on page 1952.

*RST: OK

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:STOP? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:SYMBol? <SearchName>

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<fr> *
Selects the number of the frame in the current acquisition, 1...n.

Query parameters:
<SearchName> String parameter that contains the search definition name

Return values:
<Label> Symbolic label (string)

Usage: Query only

SEARch:RESult:CAN:FRAMe<fr>:TYPE? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> DATA | REMote | ERR | OVLD
*RST: DATA

Usage: Query only

26.18.7.6 Symbolic trigger, decode and search

- Symbolic trigger 1976
- Symbolic decode results 1978
- Symbolic search 1979

Symbolic trigger

TRIGger<t>:CAN:SYMBolic:MSGValue 1976
TRIGger<t>:CAN:SYMBolic:TSIGnals 1977
TRIGger<t>:CAN:SYMBolic:SIGValue 1977
TRIGger<t>:CAN:SYMBolic:DMAX 1977
TRIGger<t>:CAN:SYMBolic:DMIN 1977
TRIGger<t>:CAN:SYMBolic:SGEValue 1978

TRIGger<t>:CAN:SYMBolic:MSGValue <MessageName>

Sets the message to be triggered or searched for.

The setting is used by symbolic trigger and symbolic search. Thus, you always trigger on and search for the same message if symbolic trigger and symbolic search is used at the same time.

See also: `SEARch:TRIGger:CAN:SYMBolic:MSGValue` on page 1979

Suffix:
<t> 1..3

Parameters:
<MessageName> String with the symbolic message name

Manual operation: See "Message" on page 637

TRIGger<t>:CAN:SYMBolic:TSIGnals <TriggerOnSignal>

Enables the trigger on a specific signal value that is part of the selected message.

Suffix:
<t> 1..3

Parameters:
<TriggerOnSignal> OFF | ON
*RST: OFF

Manual operation: See "Signal trigger" on page 638

TRIGger<t>:CAN:SYMBolic:SIGValue <SignalName>

Sets the signal name to be triggered or searched for.

The setting is used by symbolic trigger and symbolic search. Thus, you always trigger on and search for the same signal if symbolic trigger and symbolic search is used at the same time.

See also: `SEARch:TRIGger:CAN:SYMBolic:SIGValue` on page 1980

Suffix:
<t> 1..3

Parameters:
<SignalName> String with the signal name as defined in the DBC file.

Manual operation: See "Signal" on page 638

TRIGger<t>:CAN:SYMBolic:DMAX <DataPatternTo>

Defines the maximum data value of the signal.

This value is required to specify a range if condition `INRange | OORange` is set with `TRIGger<t>:CAN:DCONdition`.

Suffix:
<t> 1..3

Parameters:
<DataPatternTo> Decimal representation of the data pattern
Range: -100E+24 to 100E+24
Increment: 1
*RST: 1

Manual operation: See "Value max" on page 638

TRIGger<t>:CAN:SYMBolic:DMIN <DataPattern>

Defines the minimum data value of the signal.

To set the condition, use `TRIGger<t>:CAN:DCONdition`.

Suffix:
<t> 1..3

Parameters:
<DataPattern> Decimal representation of the data pattern
Range: -100E+24 to 100E+24
Increment: 1
*RST: 0

Manual operation: See "Value, Value min" on page 638

TRIGger<t>:CAN:SYMBolic:SGEValue <SignEnumVal>
TRIGger<t>:CAN:SYMBolic:SGEValue? <SignalEnumValue>

Sets a symbolic data value for signals with enumerated values.

Suffix:
<t> 1..3

Parameters:
<SignalEnumValue> Numeric value according to the value definition in the DBC file

Example: Definition line in DBC file:
```
VAL_ 2175091489 Gear 0 "Idle" 1 "Gear_1" 2 "Gear_2" 3 "Gear_3"
4 "Gear_4" 5 "Gear_5" ;
```

Search for "Gear_4"
```
TRIGger:CAN:SYMBolic:SGEValue 4
```

Manual operation: See "Value, Value min" on page 638

Symbolic decode results

BUS<b>:CAN:FRAMe<fr>:SDATa?

Returns the complete symbolic data of the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<SymbolicData> String with comma-separated list of symbolic data

Example:
```
BUS:CAN:FRAMe9:SDATa?
<-- [sym] 325 kW, 0x0A, 423 N, 174 l, Running, 90 degC, 0x06, 437 rpm
```

Returns the symbolic results of the 9th frame.

Usage: Query only

Symbolic search

SEARch:RESult:CAN:FRAMe<fr>:SDATa? 1979
SEARch:TRIGger:CAN:SSYMbolic 1979
SEARch:TRIGger:CAN:SYMBolic:MSGValue 1979
SEARch:TRIGger:CAN:SYMBolic:SSIGnals 1980
SEARch:TRIGger:CAN:SYMBolic:SIGValue 1980
SEARch:TRIGger:CAN:SYMBolic:DMIN 1980
SEARch:TRIGger:CAN:SYMBolic:DMAX 1981
SEARch:TRIGger:CAN:SYMBolic:SGEValue 1981

SEARch:RESult:CAN:FRAMe<fr>:SDATa? <SearchName>

Returns the symbolic data of the selected result frame.

Suffix:
<fr> *
Sets the index of the search result frame.

Query parameters:
<SearchName> String that contains the search definition name

Return values:
<SymbolicData> String with comma-separated list of symbolic data

Example:
```
SEARch:RESult:CAN:FRAMe:SDATa? 'Search1'
<-- [sym] 325 kW, 0x0A, 423 N, 174 l, Running, 90 degC, 0x06, 437 rpm
```
Returns the symbolic results of the first search result.

Usage: Query only

SEARch:TRIGger:CAN:SSYMbolic <SearchName>,<CheckSymbolic>
SEARch:TRIGger:CAN:SSYMbolic? <SearchName>

Enables the symbolic search and disables all other search criteria.

Parameters:
<CheckSymbolic> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> String that contains the search definition name

Manual operation: See "Search Criteria" on page 632

SEARch:TRIGger:CAN:SYMBolic:MSGValue <SearchName>,<MessageName>
SEARch:TRIGger:CAN:SYMBolic:MSGValue? <SearchName>

Sets the message to be triggered or searched for.

The setting is used by symbolic trigger and symbolic search. Thus, you always trigger on and search for the same message if symbolic trigger and symbolic search is used at the same time.

See also: TRIGger<t>:CAN:SYMBolic:MSGValue on page 1976

Parameters:
<MessageName> String that contains the symbolic message name

Parameters for setting and query:
<SearchName> String that contains the search definition name

Example: SEARch:TRIGger:CAN:SYMBolic:MSGValue "Search1","EngineData"

Manual operation: See "Message" on page 640

SEARch:TRIGger:CAN:SYMBolic:SSIGnals <SearchName>,<SymbolicSearch>
SEARch:TRIGger:CAN:SYMBolic:SSIGnals? <SearchName>

Enables the search for symbolic values if DBC label list file is loaded and applied. Symbolic search disables all other search criteria.

Parameters:
<SymbolicSearch> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> String that contains the search definition name

Manual operation: See "Search signals" on page 640

SEARch:TRIGger:CAN:SYMBolic:SIGValue <SearchName>,<SignalName>
SEARch:TRIGger:CAN:SYMBolic:SIGValue? <SearchName>

Sets the signal name to be triggered or searched for.

The setting is used by symbolic trigger and symbolic search. Thus, you always trigger on and search for the same signal if symbolic trigger and symbolic search is used at the same time.

See also: TRIGger<t>:CAN:SYMBolic:SIGValue on page 1977

Parameters:
<SignalName> String that contains the symbolic signal name

Parameters for setting and query:
<SearchName> String that contains the search definition name

Example: SEARch:TRIGger:CAN:SYMBolic:SIGValue "Search1","EngForce"

Manual operation: See "Signal" on page 640

SEARch:TRIGger:CAN:SYMBolic:DMIN <SearchName>,<DataPattern>
SEARch:TRIGger:CAN:SYMBolic:DMIN? <SearchName>

Defines the minimum data pattern in a symbolic search.

To set the condition, use SEARch:TRIGger:CAN:DCONdition.

Parameters:

<DataPattern> Range: -100E+24 to 100E+24
Increment: 1
*RST: 0

Parameters for setting and query:

<SearchName> String that contains the search definition name

Manual operation: See "Value, Value (min)" on page 640

SEARch:TRIGger:CAN:SYMBolic:DMAX <SearchName>,<DataPatternTo>
SEARch:TRIGger:CAN:SYMBolic:DMAX? <SearchName>

Defines the maximum data pattern of the signal in a symbolic search.

This value is required to specify a range if condition `INRange | OORange` is set with `SEARch:TRIGger:CAN:DCONdition` on page 1964.

Parameters:

<DataPatternTo> Range: -100E+24 to 100E+24
Increment: 1
*RST: 1

Parameters for setting and query:

<SearchName> String that contains the search definition name

Manual operation: See "Value (max)" on page 640

SEARch:TRIGger:CAN:SYMBolic:SGEValue <SearchName>,<SignEnumVal>
SEARch:TRIGger:CAN:SYMBolic:SGEValue? <SearchName>

Sets a symbolic data value for signals with enumerated values.

Parameters:

<SignEnumVal> Numeric value according to the value definition in the DBC file

Parameters for setting and query:

<SearchName> String that contains the search definition name

Example: Definition line in DBC file:

```
VAL_ 2175091489 Gear 0 "Idle" 1 "Gear_1" 2 "Gear_2"
3 "Gear_3" 4 "Gear_4" 5 "Gear_5" ;
```

Search for "Gear_3"

```
SEARch:TRIGger:CAN:SYMBolic:SGEValue "Search1",3
```

Manual operation: See "Value, Value (min)" on page 640

26.18.8 CAN-XL (option R&S RTP-K77)

- Configuration....1982
- Trigger....1986
- Decode results....1990
- CAN-XL search settings....2002
- CAN-XL search results....2007

26.18.8.1 Configuration

BUS<b>:CANXl:SOURce....1982
BUS<b>:CANXl:TYPE....1982
BUS<b>:CANXl:TRCVmode....1983
BUS<b>:CANXl:BITRate....1983
BUS<b>:CANXl:SAMPlepoint....1983
BUS<b>:CANXl:FDATa:DBITrate....1983
BUS<b>:CANXl:FDATa:SAMPlepoint....1984
BUS<b>:CANXl:XDATa:DBITrate....1984
BUS<b>:CANXl:XDATa:SAMPlepoint....1984
BUS<b>:CANXl:SIC:THReshold....1985
BUS<b>:CANXl:SIC:HYSTeresis....1985
BUS<b>:CANXl:FAST:THReshold....1985
BUS<b>:CANXl:FAST:HYSTeresis....1986

BUS<b>:CANXl:SOURce <DataSource>

Sets the CAN-XL source channel to which the selected data line is connected.

Suffix:
<b> 1..4

Parameters:
<DataSource> With digital channels in SIC mode:
C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
Without digital channels in FAST mode:
C1 | C2 | C3 | C4 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Data" on page 642

BUS<b>:CANXl:TYPE <SignalType>

Selects the CAN-High or CAN-Low line. Both lines are required for differential signal transmission used by CAN-XL.

Suffix:
<b> 1..4

Parameters:
<SignalType> CANL | CANH
*RST: CANL

Manual operation: See "Type" on page 642

BUS<b>:CANXI:TRCVmode <TransceiverMd>

Selects the transceiver mode for CAN-XL decoding.

Suffix:
<b> 1..4

Parameters:
<TransceiverMd> SIC | FAST
*RST: SIC

Manual operation: See "Transceiver mode" on page 642

BUS<b>:CANXI:BITRate <Bitrate>

Sets the number of transmitted bits per second for basic CAN.

Suffix:
<b> 1..4

Parameters:
<Bitrate> Range: 10000 to 5E+6
Increment: 100
*RST: 100E+3
Default unit: bps

Manual operation: See "Nominal bit rate" on page 643

BUS<b>:CANXI:SAMPlepoint <SamplePoint>

Sets for basic CAN the position of the sample point within the bit in percent of the nominal bit time.

Suffix:
<b> 1..4

Parameters:
<SamplePoint> Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Manual operation: See "Sample point" on page 643

BUS<b>:CANXI:FDATa:DBITrate <FDBitrate>

Sets the bit rate of the data phase for the CAN-FD frame.

Suffix:
<b> 1..4

Parameters:
<FDBitrate> Range: 10000 to 15E+6
Increment: 100
*RST: 1E+6
Default unit: bps

Manual operation: See "FD bit rate" on page 643

BUS<b>:CANXI:FDATa:SAMPlepoint <FDSamplePoint>

Sets for CAN-FD the position of the sample point within the bit in percent of the nominal bit time.

Suffix:
<b> 1..4

Parameters:
<FDSamplePoint> Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Manual operation: See "FD sample point" on page 643

BUS<b>:CANXI:XDATa:DBITrate <XLBitrate>

Sets the bit rate of the data phase for the CAN-XL frame.

Suffix:
<b> 1..4

Parameters:
<XLBitrate> Range: 10000 to 30E+6
Increment: 100
*RST: 10E+6
Default unit: bps

Manual operation: See "XL bit rate" on page 643

BUS<b>:CANXI:XDATa:SAMPlepoint <XLSamplePoint>

Sets for CAN-XL the position of the sample point within the bit in percent of the nominal bit time.

Suffix:
<b> 1..4

Parameters:

<XLSamplePoint>
Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Manual operation: See "XL sample point" on page 643

BUS<b>:CANXI:SIC:THReshold <SICThreshold>

Sets a threshold value for the SIC transceiver mode.

Suffix:

<b> 1..4

Parameters:

<SICThreshold>
Range: -12 to 12
Increment: 0.01
*RST: 2.5
Default unit: V

Manual operation: See "SIC threshold" on page 644

BUS<b>:CANXI:SIC:HYSTeresis <SICHysteresis>

Sets a hysteresis value for the SIC transceiver mode.

Suffix:

<b> 1..4

Parameters:

<SICHysteresis>
Range: 0 to 12
Increment: 0.01
*RST: 0.05
Default unit: V

Manual operation: See "SIC hysteresis" on page 644

BUS<b>:CANXI:FAST:THReshold <FASTThreshold>

Sets a threshold value for the FAST transceiver mode.

Suffix:

<b> 1..4

Parameters:

<FASTThreshold>
Range: -12 to 12
Increment: 0.01
*RST: 0
Default unit: V

Manual operation: See "FAST threshold" on page 644

BUS<b>:CANXI:FAST:HYSTeresis <FASTHysteresis>

Sets a hysteresis value for the FAST transceiver mode.

Suffix:
<b> 1..4

Parameters:
<FASTHysteresis> Range: 0 to 12
Increment: 0.01
*RST: 0.05
Default unit: V

Manual operation: See "FAST hysteresis" on page 644

26.18.8.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:CANXI:CHKall....1987
TRIGger<t>:CANXI:CLR....1987
TRIGger<t>:CANXI:FRENable....1987
TRIGger<t>:CANXI:FRAMe<fr>:ENABle....1987
TRIGger<t>:CANXI:FIENable....1987
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:ENABle....1987
TRIGger<t>:CANXI:BIT....1988
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:BIT....1988
TRIGger<t>:CANXI:DMAX....1988
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:DMAX....1988
TRIGger<t>:CANXI:DMIN....1988
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:DMIN....1988
TRIGger<t>:CANXI:DOPerator....1989
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:DOPerator....1989
TRIGger<t>:CANXI:IMAX....1989
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:IMAX....1989
TRIGger<t>:CANXI:IMIN....1989
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:IMIN....1989
TRIGger<t>:CANXI:IOPerator....1990
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:IOPerator....1990
TRIGger<t>:CANXI:ERENable....1990
TRIGger<t>:CANXI:ERRor<n>:ENABle....1990

TRIGger<t>:CANXI:CHKall

Enables the software trigger for all available frame types.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 645

TRIGger<t>:CANXI:CLR

Disables the software trigger for all available frame types.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 645

TRIGger<t>:CANXI:FRENable <Frame>,<Enabler>
TRIGger<t>:CANXI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the trigger.

Suffix:
<t> 1..3

<fr> *

Parameters:
<Enable> OFF | ON

*RST: OFF

Manual operation: See "Frame type" on page 646

TRIGger<t>:CANXI:FIENable <Frame>,<Field>,<Enabler>
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the trigger.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Manual operation: See "Set details" on page 646

TRIGger<t>:CANXI:BIT <Frame>,<Field>,<Bit>
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the trigger.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<BitState> ONE | ZERO | DC
*RST: DC

Manual operation: See "Set details" on page 646

TRIGger<t>:CANXI:DMAX <Frame>,<Field>,<Data>
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<Data_Max>

Manual operation: See "Set details" on page 646

TRIGger<t>:CANXI:DMIN <Frame>,<Field>,<Data>
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the trigger.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<Data_Min>

Manual operation: See "Set details" on page 646

TRIGger<t>:CANXI:DOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the trigger in the selected field of the selected frame.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Manual operation: See "Set details" on page 646

TRIGger<t>:CANXI:IMAX <Frame>,<Field>,<Data>
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Index_Max> Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Manual operation: See "Set details" on page 646

TRIGger<t>:CANXI:IMIN <Frame>,<Field>,<Data>
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the trigger.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Index_Min> Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Manual operation: See "Set details" on page 646

TRIGger<t>:CANXI:IOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:CANXI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the trigger.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Manual operation: See "Set details" on page 646

TRIGger<t>:CANXI:ERENable <ErrorName>,<Enabler>
TRIGger<t>:CANXI:ERRor<n>:ENABle <Enable>

Enables triggering for selected protocol error types.

Suffix:
<t> 1..3

<n> *

Parameters:
<Enable> OFF | ON
*RST: ON

Manual operation: See "Error type" on page 647

26.18.8.3 Decode results

To load and acivate a label list, use:

- `BUS<b>:NEWList` on page 1835
- `BUS<b>:SYMBols` on page 1835

BUS<b>:CANXI:FCOunt? 1991
BUS<b>:CANXI:FRAMe<fr>:FLDCount? 1991
BUS<b>:CANXI:FRAMe<fr>:ACKState? 1992
BUS<b>:CANXI:FRAMe<fr>:ACKValue? 1992
BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:STATe? 1992

BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:LABel? 1993
BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:VALue? 1993
BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:FVALue? 1994
BUS<b>:CANXI:FRAMe<fr>:CSSTate? 1994
BUS<b>:CANXI:FRAMe<fr>:CSValue? 1994
BUS<b>:CANXI:FRAMe<fr>:DLCState? 1995
BUS<b>:CANXI:FRAMe<fr>:DLCValue? 1995
BUS<b>:CANXI:FRAMe<fr>:IDSTate? 1995
BUS<b>:CANXI:FRAMe<fr>:IDTYpe? 1995
BUS<b>:CANXI:FRAMe<fr>:IDValue? 1996
BUS<b>:CANXI:FRAMe<fr>:NDBYtes? 1996
BUS<b>:CANXI:FRAMe<fr>:STARt? 1996
BUS<b>:CANXI:FRAMe<fr>:STATus? 1997
BUS<b>:CANXI:FRAMe<fr>:STOP? 1997
BUS<b>:CANXI:FRAMe<fr>:SYMBol? 1998
BUS<b>:CANXI:FRAMe<fr>:TYPE? 1998
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:AF? 1998
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:PCRC? 1999
BUS<b>:CANXI:FRAMe<fr>:SBC? 1999
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:SEC? 1999
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:VCID? 2000
BUS<b>:CANXI:FRAMe<fr>:FDATa<o>:ESI? 2000
BUS<b>:CANXI:FRAMe<fr>:FDATa<o>:BRS? 2000
BUS<b>:CANXI:FRAMe<fr>:DBITrate? 2001
BUS<b>:CANXI:FRAMe<fr>:NBITrate? 2001
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:SDT? 2001
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:FCRC? 2002

BUS<b>:CANXI:FCOunt?

Returns the number of decoded frames for the CAN-XL protocol analysis.

Suffix:
<b> 1..4

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:

<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:ACKState?

Return the states of the acknowledgment field.

Suffix:

<b> 1..4

<fr> *

Return values:

<FrameAckState> OK | ERRor | UNDF
*RST: OK

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:ACKValue?

Returns the value of the acknowledge slot for the selected frame.

Suffix:

<b> 1..4

<fr> *

Return values:

<FrameAckValue> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field in the specified frame.

Suffix:

<b> 1..4

<fr> *

<fl> *

Return values:

<State> OK | EOFD | ACKD | NOACk | CRCD | CRC | SERRror | FORM | BTST | UNKNown | INComplete

OK
The field has no error, it is valid.

EOFD
Wrong end of field

ACKD
Acknowledgment delimiter error

NOACk
Field acknowledgment is missing

CRCD
Checksum delimiter error

CRC
Checksum error, cyclic redundancy check failed

SERRror
Stuff count error (CAN-FD ISO only)

FORM
Fixed-bit form error

BTST
Bit stuffing error

UNKNown
State unknown

INComplete
Field not completely contained in the acquisition.

*RST: OK

Usage: Query only

BUS<b>:CANXl:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:
<Label>

Usage: Query only

BUS<b>:CANXl:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:
<FormattedValue>

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:CSSTate?

Return the states of the checksum field (CRC).

Suffix:
<b> 1..4

<fr> *

Return values:
<ChecksumState> OK | ERRor | UNDF
*RST: OK

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:CSValue?

Returns the CRC sequence value of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<ChecksumValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:DLCState?

Return the states of the state of data length code.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameDLCState> OK | ERRor | UNDF
*RST: OK

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:DLCValue?

Returns the data length code of the selected frame - the number of data bytes in the frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameDLCValue> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:IDSTate?

Return the states of the identifier state.

Suffix:
<b> 1..4

<fr> *

Return values:
<IdtfSt> OK | ERRor | UNDF
*RST: OK

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:IDTYpe?

Returns the identifier type of the selected frame, the identifier format of data and remote frames.

Suffix:
<b> 1..4

<fr> *

Return values:

<IdentifierType> B11 | B29

B11: standard format, 11 bit
B29: extended format, 29 bit

*RST: B11

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:

<b> 1..4

<fr> *

Return values:

<IdtfVal> Range: 0 to 536.871E+6
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:NDBYtes?

Returns the number of data bytes.

Suffix:

<b> 1..4

<fr> *

Return values:

<NDBytes> Range: 0 to 2048
Increment: 1
*RST: 1

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:STARt?

Return the start time of the selected frame.

Suffix:

<b> 1..4

<fr> *

Return values:

<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<b> 1..4

<fr> *

Return values:

<FrameState> OK | EOFD | ACKD | NOACk | CRCD | CRC | SERRror | FORM | BTST | UNKNown | INComplete

`OK`: the frame is valid.
`EOFD`: Wrong end of frame.
`ACKD`: Wrong ACK delimiter occurred.
`NOACK`: Acknowledge is missing.
`CRCD`: Wrong CRC delimiter occurred.
`CRC`: Cyclic redundancy check failed.
`SERRror`: Stuff count error (CAN FD ISO only).
`FORM`: Fixed-bit form error.
`BTST`: Bit stuffing error occurred.
`UNKNown`: State unknown error
`INSufficient`: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:STOP?

Return the stop time of the selected frame.

Suffix:

<b> 1..4

<fr> *

Return values:

<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:SYMBol?

Returns the symbol of the specified frame if the label list is enabled.

Suffix:
<b> 1..4

<fr> *

Return values:
<Label>

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameType> CBFF | CBFR | CEFF | CEFR | FBFF | FEFF | XLFF | ERRor | OVERload | UNDefined

`CBFF`: classical base frame format data
`CBFRemote`: classical base frame format remote
`CEFF`: classical extended frame format data
`CEFRemote`: classical extended frame format remote
`FBFF`: FD base frame format
`FEFF`: FD extended frame format
`XLFF`: XL frame format
`ERR`: error
`OVLD`: overload

*RST: CBFF

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:AF?

Returns the value of the acceptance field for the selected frame.

Suffix:
<b> 1..4

<fr> *

<o> *

Return values:
<AF> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:PCRC?

Returns the value of the preamble cyclic redundant check (PCRC) for the selected frame.

Suffix:
<b> 1..4

<fr> *

<o> *

Return values:
<PCRC> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:SBC?

Returns the value of the stuff bit count (SBC) field for the selected CAN-XL frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<SBC> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:SEC?

Returns the value of the simple extended content (SEC) field for the selected CAN-XL frame.

Suffix:
<b> 1..4

<fr> *

<o> *

Return values:
<SEC> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:VCID?

Returns the value of the vector communication identifier (VCID) field for the selected CAN-XL frame.

Suffix:

<b> 1..4

<fr> *

<o> *

Return values:

<VCID> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:FDATa<o>:ESI?

Returns the value of the error state indicator (ESI) field for the selected frame.

Suffix:

<b> 1..4

<fr> *

<o> *

Return values:

<ESI> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:FDATa<o>:BRS?

Returns the value of the bit rate switch (BRS) field for the selected frame.

Suffix:

<b> 1..4

<fr> *

<o> *

Return values:

<BRS> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:DBITrate?

Returns the data bit rate of the frame.

Suffix:

<b> 1..4

<fr> *

Return values:

<DataBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:NBITrate?

Returns the nominal bit rate of the frame.

Suffix:

<b> 1..4

<fr> *

Return values:

<NominalBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:SDT?

Returns the symbol duration time (SDT) for the selected CAN-XL field in the selected frame. The SDT is important for correct bus timing, when the protocol switches between the different communication speeds of CAN, CAN-FD and CAN-XL. SDT is calculated as the ratio of the data bit rate (DBIT) and the nominal bit rate (NBIT) times the basic time quantum (TQ) of the CAN protocol: SDT = (DBIT / NBIT) * TQ.

Suffix:

<b> 1..4

<fr> *

<o> *

Return values:

<SDT> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CANXl:FRAMe<fr>:XDATa<o>:FCRC?

Returns the value of the frame CRC for the selected frame.

Suffix:

<b>	1..4
<fr>	*
<o>	*

Return values:

<FCRC>	Range:	0 to 4294967295
	Increment:	1
	*RST:	0

Usage: Query only

26.18.8.4 CAN-XL search settings

In search setup commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name. The commands are similar to CAN-XL trigger commands.

SEARch:TRIGger:CANXl:CHKall....2002
SEARch:TRIGger:CANXl:CLR....2003
SEARch:TRIGger:CANXl:FRENable....2003
SEARch:TRIGger:CANXl:FRAMe<fr>:ENABle....2003
SEARch:TRIGger:CANXl:FIENable....2003
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:ENABle....2003
SEARch:TRIGger:CANXl:BIT....2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:BIT....2004
SEARch:TRIGger:CANXl:DMAX....2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DMAX....2004
SEARch:TRIGger:CANXl:DMIN....2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DMIN....2004
SEARch:TRIGger:CANXl:DOPerator....2005
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DOPerator....2005
SEARch:TRIGger:CANXl:IMAX....2005
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IMAX....2005
SEARch:TRIGger:CANXl:IMIN....2006
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IMIN....2006
SEARch:TRIGger:CANXl:IOPerator....2006
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IOPerator....2006
SEARch:TRIGger:CANXl:ERENable....2006
SEARch:TRIGger:CANXl:ERRor<m>:ENABle....2006

SEARch:TRIGger:CANXl:CHKall <SearchName>

Enables the search for all available frame types.

Setting parameters:
<SearchName>

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 650

SEARch:TRIGger:CANXI:CLR <SearchName>

Disables the search for all available frame types.

Setting parameters:
<SearchName>

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 650

SEARch:TRIGger:CANXI:FRENable <SearchName>,<Frame>,<Enabler>
SEARch:TRIGger:CANXI:FRAMe<fr>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:CANXI:FRAMe<fr>:ENABle? <SearchName>

Enables searching on CAN-XL frames. Only the frames that match the selected search conditions are displayed.

Suffix:
<fr> *

Parameters:
<Enable> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame type" on page 650

SEARch:TRIGger:CANXI:FIENable <SearchName>,<Frame>,<Field>,<Enabler>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 651

SEARch:TRIGger:CANXI:BIT <SearchName>,<Frame>,<Field>,<Bit>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:BIT <SearchName>,<BitState>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:BIT? <SearchName>

Sets the bit state of a field to be searched that only consists of one bit.

Suffix:
<fr> *

<fl> *

Parameters:
<BitState> ONE | ZERO | DC

*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 651

SEARch:TRIGger:CANXI:DMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:DMAX? <SearchName>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Max> List of comma-separated values.

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 651

SEARch:TRIGger:CANXI:DMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:DMIN? <SearchName>

Specifies the data pattern to be searched, or sets the start value of a data pattern range to be searched.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Min> List of comma-separated values.

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 651

SEARch:TRIGger:CANXl:DOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DOPerator
<SearchName>,<Data_Operator>
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DOPerator? <SearchName>

Sets the operator for the data pattern to be searched in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal, In range, Out of range.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 651

SEARch:TRIGger:CANXl:IMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IMAX <SearchName>,<Index_Max>
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IMAX? <SearchName>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Max> Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 651

SEARch:TRIGger:CANXI:IMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:IMIN <SearchName>,<Index_Min>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:IMIN? <SearchName>

Specifies the index, or sets the start value of an index range.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Min> Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 651

SEARch:TRIGger:CANXI:IOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:IOPerator
<SearchName>,<Index_Operator>
SEARch:TRIGger:CANXI:FRAMe<fr>:FLD<fl>:IOPerator? <SearchName>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 651

SEARch:TRIGger:CANXI:ERENable <SearchName>,<ErrorName>,<Enabler>
SEARch:TRIGger:CANXI:ERRor<m>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:CANXI:ERRor<m>:ENABle? <SearchName>

Enables or disables the checking condition for the selected error type to be searched.

Suffix:
<m> *

Parameters:
<Enable> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error type" on page 652

26.18.8.5 CAN-XL search results

The search on decoded CAN-XL data returns the same results as the queries for decode results.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.8.3, "Decode results", on page 1990.

SEARch:RESult:CANXl:FCOunt? 2008
SEARch:RESult:CANXl:FRAMe<fr>:FLDCount? 2008
SEARch:RESult:CANXl:FRAMe<fr>:ACKState? 2008
SEARch:RESult:CANXl:FRAMe<fr>:ACKValue? 2008
SEARch:RESult:CANXl:FRAMe<fr>:FLD<fl>:STATe? 2009
SEARch:RESult:CANXl:FRAMe<fr>:FLD<fl>:LABel? 2009
SEARch:RESult:CANXl:FRAMe<fr>:FLD<fl>:VALue? 2009
SEARch:RESult:CANXl:FRAMe<fr>:FLD<fl>:FVALue? 2009
SEARch:RESult:CANXl:FRAMe<fr>:CSSTate? 2010
SEARch:RESult:CANXl:FRAMe<fr>:CSValue? 2010
SEARch:RESult:CANXl:FRAMe<fr>:DLCState? 2010
SEARch:RESult:CANXl:FRAMe<fr>:DLCValue? 2011
SEARch:RESult:CANXl:FRAMe<fr>:IDSTate? 2011
SEARch:RESult:CANXl:FRAMe<fr>:IDTYpe? 2011
SEARch:RESult:CANXl:FRAMe<fr>:IDValue? 2011
SEARch:RESult:CANXl:FRAMe<fr>:NDBYtes? 2012
SEARch:RESult:CANXl:FRAMe<fr>:STARt? 2012
SEARch:RESult:CANXl:FRAMe<fr>:STATus? 2012
SEARch:RESult:CANXl:FRAMe<fr>:STOP? 2013
SEARch:RESult:CANXl:FRAMe<fr>:SYMBol? 2013
SEARch:RESult:CANXl:FRAMe<fr>:TYPE? 2013
SEARch:RESult:CANXl:FRAMe<fr>:XDATa<n>:AF? 2013
SEARch:RESult:CANXl:FRAMe<fr>:XDATa<n>:PCRC? 2014
SEARch:RESult:CANXl:FRAMe<fr>:SBC? 2014
SEARch:RESult:CANXl:FRAMe<fr>:XDATa<n>:SEC? 2014
SEARch:RESult:CANXl:FRAMe<fr>:XDATa<n>:VCID? 2015
SEARch:RESult:CANXl:FRAMe<fr>:FDATa<n>:ESI? 2015
SEARch:RESult:CANXl:FRAMe<fr>:FDATa<n>:BRS? 2015
SEARch:RESult:CANXl:FRAMe<fr>:DBITrate? 2016
SEARch:RESult:CANXl:FRAMe<fr>:NBITrate? 2016
SEARch:RESult:CANXl:FRAMe<fr>:XDATa<n>:SDT? 2016
SEARch:RESult:CANXl:FRAMe<fr>:XDATa<n>:FCRC? 2016

SEARch:RESult:CANXI:FCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:FLDCount? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:ACKState? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameAckState> OK | ERRor | UNDF
*RST: OK

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:ACKValue? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameAckValue> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:FLD<fl>:STATe? <SearchName>

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<State> OK | EOFD | ACKD | NOACk | CRCD | CRC | SERRror | FORM | BTST | UNKNown | INComplete

*RST: OK

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:FLD<fl>:LABel? <SearchName>

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Label>

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:FLD<fl>:VALue? <SearchName>

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:FLD<fl>:FVALue? <SearchName>

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<FormattedValue>

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:CSSTate? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<ChecksumState> OK | ERRor | UNDF
*RST: OK

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:CSValue? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<ChecksumValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:DLCState? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameDLCState> OK | ERRor | UNDF
*RST: OK

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:DLCValue? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameDLCValue> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:IDSTate? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdtfSt> OK | ERRor | UNDF
*RST: OK

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:IDTYpe? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdentifierType> B11 | B29
*RST: B11

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:IDValue? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdtfVal> Range: 0 to 536.871E+6
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:NDBYtes? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<NDBytes> Range: 0 to 2048
Increment: 1
*RST: 1

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:STARt? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:STATus? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameState> OK | EOFD | ACKD | NOACk | CRCD | CRC | SERRror | FORM | BTST | UNKNown | INComplete
*RST: OK

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:STOP? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:SYMBol? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Label>

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:TYPE? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> CBFF | CBFR | CEFF | CEFR | FBFF | FEFF | XLFF | ERRor | OVERload | UNDefined
*RST: CBFF

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:AF? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<AF> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:PCRC? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<PCRC> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:SBC? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SBC> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:SEC? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<SEC> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:VCID? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<VCID> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:FDATa<n>:ESI? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<ESI> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:FDATa<n>:BRS? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<BRS> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:DBITrate? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DataBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:NBITrate? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<NominalBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:SDT? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<SDT> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:FCRC? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<FCRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

26.18.9 LIN (option R&S RTP-K3)

- Configuration....2017
- Trigger....2019
- Decode results....2027
- LIN search settings....2034
- LIN search results....2043

26.18.9.1 Configuration

BUS<b>:LIN:DATA:SOURce....2017
BUS<b>:LIN:DATA:THReshold....2017
BUS<b>:LIN:TECHnology....2018
BUS<b>:LIN:BITRate....2018
BUS<b>:LIN:POLarity....2019
BUS<b>:LIN:STANdard....2019

BUS<b>:LIN:DATA:SOURce <DataSource>

Sets the waveform of the data line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<DataSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

See Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Data" on page 656

BUS<b>:LIN:DATA:THReshold <Threshold>

Sets a user-defined threshold value.

Alternatively, you can set the threshold according to the signal technology with BUS<b>:LIN:TECHnology.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Threshold> Range: -12 to 12
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "Threshold" on page 656

BUS<b>:LIN:TECHnology <Technology>

Sets the threshold voltage as defined for various signal technologies.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Technology> V15 | V25 | V35 | V6 | V9 | MANual

V15
1.5 Volt (TTL)

V25
2.5 Volt (CMOS 5.0 V)

V35 | V6 | V9
3.5 V (7 V supply), 6.0 V (12 V supply), 9.0 V (18 V supply) respectively

MANual
Manual setting of user-defined values with BUS<b>:LIN:DATA:THReshold.

*RST: V35

Manual operation: See "Threshold" on page 656

BUS<b>:LIN:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Bitrate> Range: 1000 to 20E+3
Increment: 1
*RST: 9600
Default unit: bps

Manual operation: See "Bit rate" on page 656

BUS<b>:LIN:POLarity <Polarity>

Defines the idle state of the bus. The idle state is the rezessive state and corresponds to a logic 1.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Polarity> IDLLow | IDLHigh
*RST: IDLHigh

Manual operation: See "Polarity" on page 657

BUS<b>:LIN:STANdard <Standard>

Selects the version of the LIN standard.

See also: "LIN standard" on page 655

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Standard> V1X | V2X | J2602 | AUTO
*RST: AUTO

Manual operation: See "LIN standard" on page 655

26.18.9.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:LIN:TYPE....2020
TRIGger<t>:LIN:ICONdition....2021
TRIGger<t>:LIN:IMIN....2021
TRIGger<t>:LIN:IMAX....2021
TRIGger<t>:LIN:DCONdition....2022
TRIGger<t>:LIN:DMIN....2022
TRIGger<t>:LIN:DMAX....2022
TRIGger<t>:LIN:BORDer....2023

TRIGger<t>:LIN:DLECondition 2023
TRIGger<t>:LIN:DLENgth 2024
TRIGger<t>:LIN:IDOR<n>:ENABle 2024
TRIGger<t>:LIN:IDOR<n>[:VALue] 2025
TRIGger<t>:LIN:SYERror 2025
TRIGger<t>:LIN:IPERror 2025
TRIGger<t>:LIN:CHKSerror 2026
TRIGger<t>:LIN:ERRPattern 2026
TRIGger<t>:LIN:CRCDatalen 2027
TRIGger<t>:LIN:STANdard 2027

TRIGger<t>:LIN:TYPE <Type>

Selects the trigger type for LIN analysis.

See: "Trigger type" on page 660.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<Type> SYNC | ID | IDOR | IDDT | WKFR | ERRC

SYNC
Start of the frame, triggers on the stop bit of the sync field.

ID
Sets the trigger to one specific identifier or an identifier range.
To set the identifier, use `TRIGger<t>:LIN:ICONdition`, `TRIGger<t>:LIN:IMIN` on page 2021, and `TRIGger<t>:LIN:IMAX` on page 2021.

IDOR
Triggers on an OR combination with up to four identifier conditions. For each identifier condition, enable it with `TRIGger<t>:LIN:IDOR<n>:ENABle` and set the value with `TRIGger<t>:LIN:IDOR<n>[:VALue]`

IDDT
Combination of identifier and data conditions
To set the identifier condition, use `TRIGger<t>:LIN:ICONdition`, `TRIGger<t>:LIN:IMIN`, and `TRIGger<t>:LIN:IMAX`.
To set the data condition, use `TRIGger<t>:LIN:DCONdition`, `TRIGger<t>:LIN:DMIN`, and `TRIGger<t>:LIN:DMAX`.

WKFR
Wakeup frame

ERRC
Error condition. Define the error types with `TRIGger<t>:LIN:CHKSerror` on page 2026, `TRIGger<t>:LIN:IPERror`, and `TRIGger<t>:LIN:SYERror`

*RST: SYNC

Manual operation: See "Trigger type" on page 660

TRIGger<t>:LIN:ICONdition <IdOperator>

Sets the operator to set a specific identifier or an identifier range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These condition require one identifier pattern to be set with `TRIGger<t>:LIN:IMIN`

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:LIN:IMIN` and `TRIGger<t>:LIN:IMAX`

*RST: EQUal

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 661

TRIGger<t>:LIN:IMIN <IdPattern>

Specifies a slave identifier pattern, or sets the the start value of an identifier range.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<IdPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 661

TRIGger<t>:LIN:IMAX <IdPatternTo>

Sets the the end value of an identifier range if `TRIGger<t>:LIN:ICONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<IdPatternTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 661

TRIGger<t>:LIN:DCONdition <DataOperator>

Sets the operator to set a specific data pattern or a data pattern range.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with `TRIGger<t>:LIN:DMIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:LIN:DMIN` and `TRIGger<t>:LIN:DMAX`

*RST: EQUal

Manual operation: See "Data setup: Data length, Transfer, Condition, Data min, Data max" on page 662

TRIGger<t>:LIN:DMIN <DataPattern>

Specifies a data pattern, or sets the the start value of a data pattern range.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<DataPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data setup: Data length, Transfer, Condition, Data min, Data max" on page 662

TRIGger<t>:LIN:DMAX <DataPatternTo>

Sets the the end value of an data range if `TRIGger<t>:LIN:DCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DataPatternTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data setup: Data length, Transfer, Condition, Data min, Data max" on page 662

TRIGger<t>:LIN:BORDer <Endianness>

Sets the byte order (endianness) of the data transfer.

According to the standard, LIN data is transmitted in little endian transfer order.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Endianness> BENDian | LENDian

BENDian
Big endian, data is analyzed and evaluated in the order of reception.

LENDian
Little endian, the instrument reads the complete data, reverses the byte order of the data, and compares it with the specified data word.

*RST: BENDian

Manual operation: See "Data setup: Data length, Transfer, Condition, Data min, Data max" on page 662

TRIGger<t>:LIN:DLECondition <DLCOperator>

Operator to set the data length for triggering on LIN data.

For Big Endian transfer direction, you can trigger on a number of bytes less than the data length of the frame, that means, on the first bytes that are transmitted. For Little Endian transfer direction, the exact number of data bytes in the frame must be set.

Example: The data word to be sent is *12 34 56*, and it is sent little endian by the LIN node. With Data length ≥ 2 and Transfer = Big endian, you trigger on the data of the first two bytes, that is *56 34*. With Data length = 3 and Transfer = Little endian, you trigger on the required data word *12 34 56*.

The number of data bytes to be found is set with `TRIGger<t>:LIN:DLENgth` on page 2024.

See also:`TRIGger<t>:LIN:BORDer` on page 2023 .

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<DLCOperator> EQUal | GETHan
For little endian transfer direction, EQUal must be set.
*RST: GETHan

Manual operation: See "Data setup: Data length, Transfer, Condition, Data min, Data max" on page 662

TRIGger<t>:LIN:DLENgth <WordCount>

Sets the length of the bit pattern to be found, in bytes. For "Big Endian" transfer direction, you can trigger on a number of bytes less than the data length of the frame, that means, on the beginning of the data pattern. For "Little Endian" transfer direction, the exact number of data bytes in the frame must be set.

For complete definition, set also the operator with `TRIGger<t>:LIN:DLECondition` on page 2023.

Suffix:
<t> 1..3

Parameters:
<WordCount> Range: 1 to 8
Increment: 1
*RST: 1

Manual operation: See "Data setup: Data length, Transfer, Condition, Data min, Data max" on page 662

TRIGger<t>:LIN:IDOR<n>:ENABle <UseIdentifier>

Includes the indicated IDOR address in the "identifier OR" trigger condition.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

<n> 1..4
Index of the identifier in an "identifier OR" condition

Parameters:
<UseIdentifier> OFF | ON
*RST: OFF

Manual operation: See "Identifier OR setup: Monitor, Frame ID" on page 662

TRIGger<t>:LIN:IDOR<n>[:VALue] <IdPattern>

Defines the pattern of the indicated IDOR identifier in the "identifier OR" trigger condition.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

<n> 1..4
Index of the identifier in an "identifier OR" condition

Parameters:
<IdPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The parameter accepts the bit value X (don't care).

Manual operation: See "Identifier OR setup: Monitor, Frame ID" on page 662

TRIGger<t>:LIN:SYERror <SyncError>

Triggers if a synchronization error occurs.

The trigger type has to be set before: `TRIGger<t>:LIN:TYPE` to `ERRC`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<SyncError> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 663

TRIGger<t>:LIN:IPERror <IdParityError>

Triggers if an error occurs in the identifier parity bits. These are the bits 6 and 7 of the identifier.

The trigger type has to be set before: `TRIGger<t>:LIN:TYPE` to `ERRC`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<IdParityError> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 663

TRIGger<t>:LIN:CHKSerror <ChecksumError>

Triggers on checksum errors according to the LIN standard set with `BUS<b>:LIN:STANdard`.

The trigger type has to be set before: `TRIGger<t>:LIN:TYPE` to `ERRC`.

The frame identifier must be set with `TRIGger<t>:LIN:ERRPattern` on page 2026 and the data length with `TRIGger<t>:LIN:CRCDatalen` on page 2027.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<ChecksumError> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 663

TRIGger<t>:LIN:ERRPattern <ErrorPattern>

Sets the frame identifier to trigger on a checksum error with `TRIGger<t>:LIN:CHKSerror` on page 2026.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<ErrorPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.
Possible values depend on `TRIGger<t>:LIN:CRCDatalen`.
Defining don't care bits 'X' in the ERRP bit string resets CRCDatalen to 0. When CRCDatalen is different than 0, then all the bits in ERRP must be 1 or 0, and X bits are set to 0.

Example:
```
FORM:BPAT STRG
TRIG1:LIN:ERRP '1X0'
TRIG1:LIN:ERRP?
<-- 1X0XXX
TRIGger:LIN:CRCDatalen?
<-- 0
TRIGger:LIN:CRCDatalen 4
TRIG1:LIN:ERRP?
<-- 100000
TRIG1:LIN:ERRP '00x11'
TRIG1:LIN:ERRP?
<-- 00X11X
TRIGger:LIN:CRCDatalen?
<-- 0
```

Manual operation: See "Error conditions" on page 663

TRIGger<t>:LIN:CRCDatalen <CRCDataLength>

Sets the number of data bytes to trigger on CRC errors (`TRIGger<t>:LIN:TYPE` is set to ERRC and `TRIGger<t>:LIN:CHKSerror` is set ON.)

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<CRCDataLength> Values ≠0 restrict allowed bit values in `TRIGger<t>:LIN:ERRPattern` to 0 and 1.

Range: 0 to 8
Increment: 1
*RST: 0

Manual operation: See "Error conditions" on page 663

TRIGger<t>:LIN:STANdard <LINStandard>

Sets the LIN standard to trigger on CRC errors (`TRIGger<t>:LIN:TYPE` is set to ERRC and `TRIGger<t>:LIN:CHKSerror` is set ON.)

See also: "LIN standard" on page 655.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<LINStandard> V1X | V2X | J2602 | AUTO
*RST: AUTO

Manual operation: See "Error conditions" on page 663

26.18.9.3 Decode results

To load and acivate a label list, use:

- `BUS<b>:NEWList` on page 1835
- `BUS<b>:SYMBols` on page 1835

BUS<b>:LIN:FCOunt? 2028
BUS<b>:LIN:FRAMe<fr>:STATus? 2028
BUS<b>:LIN:FRAMe<fr>:STARt? 2029
BUS<b>:LIN:FRAMe<fr>:STOP? 2029
BUS<b>:LIN:FRAMe<fr>:SDATa? 2029
BUS<b>:LIN:FRAMe<fr>:SDEXport? 2029
BUS<b>:LIN:FRAMe<fr>:SYMBol? 2029
BUS<b>:LIN:FRAMe<fr>:VERSion? 2030
BUS<b>:LIN:FRAMe<fr>:DATA? 2030
BUS<b>:LIN:FRAMe<fr>:IDSTate? 2031

BUS<b>:LIN:FRAMe<fr>:IDValue? 2031
BUS<b>:LIN:FRAMe<fr>:IDPValue? 2031
BUS<b>:LIN:FRAMe<fr>:SYSTate? 2032
BUS<b>:LIN:FRAMe<fr>:CSSTate? 2032
BUS<b>:LIN:FRAMe<fr>:CSValue? 2033
BUS<b>:LIN:FRAMe<fr>:BITRate? 2033
BUS<b>:LIN:FRAMe<fr>:BYTE<o>:STATe? 2033
BUS<b>:LIN:FRAMe<fr>:BYTE<o>:VALue? 2034

BUS<b>:LIN:FCOunt?

Returns the number of decoded frames.

Suffix:

<b> 1..4
Selects the serial bus.

Return values:

<Count> Total number of decoded frames.

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<FrameState> OK | UART | CHCKsum | VERS | LENer | SPERror | PRERror | SYERror | WAKeup | CPERror | INSufficient | INComplete

UART: at least one UART error occured. LIN uses UART words without parity bit.
CHCKsum: checksum error
VERS: the version of the LIN standard is not valid
LENer: unexpected length
SPERror: stop error
PRERror: parity error in identifier
SYERror: synchronization error
WAKeup: the frame is a wakeup frame
CPERror: parity error and checksum error
INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.
INComplete: the frame is missing some parts

*RST: OK

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:STARt?
BUS<b>:LIN:FRAMe<fr>:STOP?

Returns the start time and stop time of the selected frame, respectively.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Start>, <Stop> Range: -100E+24 to 100E+24
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:SDATa?

Returns the complete symbolic data of the frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<SymbolicData>

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:SDEXport?

Returns the symbolic data of the frame in export format.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<SymbolicData>

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the number of the frame in the current acquisition, 1...n.

Return values:
<Label> String with symbolic name of the identifier

Example: `BUS:LIN:FRAMe2:SYMBol?`
Response: `Temperature`

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:VERSion?

Returns the version of the LIN standard for the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameVersion> V1X | V2X | UNK
UNK: Unknown
*RST: UNK

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:DATA?

Returns the data bytes of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Data> Comma-separated list of integer values (N, D1, D2,…, DN). N is the number of bytes in the frame, and D1…DN are the values of the bytes.

Example:
```
BUS:LIN:FRAMe4:DATA?
<-- 4,118,39,71,123
```

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:IDSTate?

Returns the identifier state of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<IdentifierState> OK | STERror | SPERror | PRERror | UVAL | NOEXists | INSufficient

STERror: start error
SPERror: stop error
PRERror: parity error
UVAL: unexpected value
NOEXists: byte does not exist
INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.

*RST: OK

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<IdentifierValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.

Range: 0 to 63
*RST: 0

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:IDPValue?

Returns the value of the identifier parity bits of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<IdentifierParity> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.
Range: 0 to 3
*RST: 0

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:SYSTate?

Returns the state of the sync field for the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<FrameSyncState> OK | STERror | SPERror | UVAL | NOEXists | INSufficient
STERror: start error
SPERror: stop error
UVAL: unexpected value
NOEXists: byte does not exist
INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.
*RST: OK

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:CSSTate?

Returns the checksum state of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<ChecksumState> OK | STERror | SPERror | UVAL | NOEXists | INSufficient
STERror: start error
SPERror: stop error
UVAL: unexpected value
NOEXists: byte does not exist

INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.

*RST: OK

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:CSValue?

Returns the checksum value of the specified frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<ChecksumValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.

Range: 0 to 255
*RST: 0

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:BYTE<o>:STATe?

Returns the state of the specified byte.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<o> *
Selects the byte number.

Return values:

<FrameByteState> OK | STERror | SPERror | UVAL | NOEXists | INSufficient
STERror: start error
SPERror: stop error
UVAL: unexpected value
NOEXists: byte does not exist
INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.
*RST: OK

Usage: Query only

BUS<b>:LIN:FRAMe<fr>:BYTE<o>:VALue?

Returns the value of the specified byte.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<o> *
Selects the byte.

Return values:

<FrameByteValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.
Range: 0 to 255
*RST: 0

Usage: Query only

26.18.9.4 LIN search settings

In search setup commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name. The commands are similar to LIN trigger commands.

SEARch:TRIGger:LIN:SSOFrame....2035
SEARch:TRIGger:LIN:SFIDentifier....2035
SEARch:TRIGger:LIN:IDENtifieror....2035
SEARch:TRIGger:LIN:SIDData....2036
SEARch:TRIGger:LIN:SERRor....2036
SEARch:TRIGger:LIN:WUFRame....2036

SEARch:TRIGger:LIN:ICONdition....2037
SEARch:TRIGger:LIN:IMIN....2037
SEARch:TRIGger:LIN:IMAX....2037
SEARch:TRIGger:LIN:IDOR<m>:ENABle....2038
SEARch:TRIGger:LIN:IDOR<m>[:VALue]....2038
SEARch:TRIGger:LIN:DCONdition....2038
SEARch:TRIGger:LIN:DMIN....2039
SEARch:TRIGger:LIN:DMAX....2039
SEARch:TRIGger:LIN:BORDer....2039
SEARch:TRIGger:LIN:DLECondition....2040
SEARch:TRIGger:LIN:DLENgth....2040
SEARch:TRIGger:LIN:IPERror....2041
SEARch:TRIGger:LIN:SYERror....2041
SEARch:TRIGger:LIN:CHKSerror....2041
SEARch:TRIGger:LIN:ERRPattern....2042
SEARch:TRIGger:LIN:CRCDatalen....2042
SEARch:TRIGger:LIN:STANdard....2042

SEARch:TRIGger:LIN:SSOFrame <SearchName>,<FrameStart>
SEARch:TRIGger:LIN:SSOFrame? <SearchName>

Enables the search for the stop bit of the sync field, which marks the frame start.

Parameters:
<FrameStart> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 665

SEARch:TRIGger:LIN:SFIDentifier <SearchName>,<Identifier>
SEARch:TRIGger:LIN:SFIDentifier? <SearchName>

Enables the search for one specific identifier or an identifier range.

Parameters:
<Identifier> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 665

SEARch:TRIGger:LIN:IDENtifieror <SearchName>,<IdentifierOr>
SEARch:TRIGger:LIN:IDENtifieror? <SearchName>

Enables the search for one to four address conditions.

Parameters:
<IdentifierOr> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 665

SEARch:TRIGger:LIN:SIDData <SearchName>,<IdentifierData>
SEARch:TRIGger:LIN:SIDData? <SearchName>

Enables the search for a combination of identifier and data conditions.

Parameters:
<IdentifierData> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 665

SEARch:TRIGger:LIN:SERRor <SearchName>,<ErrorCondition>
SEARch:TRIGger:LIN:SERRor? <SearchName>

Enables the search for various errors in the frame.

Parameters:
<ErrorCondition> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 665

SEARch:TRIGger:LIN:WUFRame <SearchName>,<WakeUpFrame>
SEARch:TRIGger:LIN:WUFRame? <SearchName>

Enables the search for wakeup frames.

Parameters:
<WakeUpFrame> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 665

SEARch:TRIGger:LIN:ICONdition <SearchName>,<IdOperator>
SEARch:TRIGger:LIN:ICONdition? <SearchName>

Sets the operator to define a specific identifier or an identifier range.

Parameters:
<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These operators require one identifier pattern to be set with `SEARch:TRIGger:LIN:IMIN`

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `SEARch:TRIGger:LIN:IMIN` and `SEARch:TRIGger:LIN:IMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 666

SEARch:TRIGger:LIN:IMIN <SearchName>,<IdPattern>
SEARch:TRIGger:LIN:IMIN? <SearchName>

Specifies a slave identifier pattern, or sets the the start value of an identifier range.

Parameters:
<IdPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 666

SEARch:TRIGger:LIN:IMAX <SearchName>,<IdPatternTo>
SEARch:TRIGger:LIN:IMAX? <SearchName>

Sets the the end value of an identifier range if `SEARch:TRIGger:LIN:ICONdition` is set to `INRange` or `OORange`.

Parameters:
<IdPatternTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 666

SEARch:TRIGger:LIN:IDOR<m>:ENABle <SearchName>,<UseIdentifier>
SEARch:TRIGger:LIN:IDOR<m>:ENABle? <SearchName>

Includes the indicated IDOR address in the "identifier OR" search.

Suffix:
<m> 1..4
Index of the identifier in an "identifier OR" condition

Parameters:
<UseIdentifier> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Identifier OR setup: Monitor, Frame ID" on page 666

SEARch:TRIGger:LIN:IDOR<m>[:VALue] <SearchName>,<IdPattern>
SEARch:TRIGger:LIN:IDOR<m>[:VALue]? <SearchName>

Defines the pattern of the indicated IDOR identifier in the "identifier OR" trigger condition.

Suffix:
<m> 1..4
Index of the identifier in an "identifier OR" condition

Parameters:
<IdPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Manual operation: See "Identifier OR setup: Monitor, Frame ID" on page 666

SEARch:TRIGger:LIN:DCONdition <SearchName>,<DataOperator>
SEARch:TRIGger:LIN:DCONdition? <SearchName>

Sets the operator to set a specific data pattern or a data pattern range.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with `SEARch:TRIGger:LIN:DMIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `SEARch:TRIGger:LIN:DMIN` and `SEARch:TRIGger:LIN:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Data min, Data max, Data length, Transfer" on page 666

SEARch:TRIGger:LIN:DMIN <SearchName>,<DataPattern>
SEARch:TRIGger:LIN:DMIN? <SearchName>

Specifies a data pattern, or sets the the start value of a data pattern range.

Parameters:
<DataPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Data min, Data max, Data length, Transfer" on page 666

SEARch:TRIGger:LIN:DMAX <SearchName>,<DataPatternTo>
SEARch:TRIGger:LIN:DMAX? <SearchName>

Sets the the end value of an identifier range if `SEARch:TRIGger:LIN:DCONdition` is set to `INRange` or `OORange`.

Parameters:
<DataPatternTo> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Data min, Data max, Data length, Transfer" on page 666

SEARch:TRIGger:LIN:BORDer <SearchName>,<Endianness>
SEARch:TRIGger:LIN:BORDer? <SearchName>

Sets the byte order (endianness) of the data transfer.

Parameters:
<Endianness> BENDian | LENDian

BENDian
Big endian, data is analyzed and evaluated in the order of reception.

LENDian
Little endian, the instrument reads the complete data, reverses the byte order of the data, and compares it with the specified data word.

*RST: BENDian

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Data min, Data max, Data length, Transfer" on page 666

SEARch:TRIGger:LIN:DLECondition <SearchName>,<DLCOperator>
SEARch:TRIGger:LIN:DLECondition? <SearchName>

Operator to set the data length for search on LIN data.

For Big Endian transfer direction, you can trigger on a number of bytes less than the data length of the frame, that means, on the first bytes that are transmitted. For Little Endian transfer direction, the exact number of data bytes in the frame must be set.

Example: The data word to be sent is *12 34 56*, and it is sent little endian by the LIN node. With Data length ≥ 2 and Transfer = Big endian, you trigger on the data of the first two bytes, that is *56 34*. With Data length = 3 and Transfer = Little endian, you trigger on the required data word *12 34 56*.

The number of data bytes to be found is set with `SEARch:TRIGger:LIN:DLENgth`.

See also: `SEARch:TRIGger:LIN:BORDer` on page 2039.

Parameters:
<DLCOperator> EQUal | GETHan

For little endian transfer direction, EQUal must be set.

*RST: GETHan

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Data min, Data max, Data length, Transfer" on page 666

SEARch:TRIGger:LIN:DLENgth <SearchName>,<WordCount>
SEARch:TRIGger:LIN:DLENgth? <SearchName>

Sets the length of the bit pattern to be found, in bytes.

For complete definition, set the operator using `SEARch:TRIGger:LIN:DLECondition`, and the transfer direction with `SEARch:TRIGger:LIN:BORDer`.

Parameters:
<WordCount> Range: 1 to 8
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Data min, Data max, Data length, Transfer" on page 666

SEARch:TRIGger:LIN:IPERror <SearchName>,<IdParityError>
SEARch:TRIGger:LIN:IPERror? <SearchName>

Searches for errors in the identifier parity bits. These are the bits 6 and 7 of the identifier.

Parameters:
<IdParityError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 667

SEARch:TRIGger:LIN:SYERror <SearchName>,<SyncError>
SEARch:TRIGger:LIN:SYERror? <SearchName>

Searches for synchronization errors.

Parameters:
<SyncError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 667

SEARch:TRIGger:LIN:CHKSerror <SearchName>,<ChecksumError>
SEARch:TRIGger:LIN:CHKSerror? <SearchName>

Searches for checksum errors according to the LIN standard.

Use the following commands to configure the checksum error search:

- `SEARch:TRIGger:LIN:ERRPattern` on page 2042
- `SEARch:TRIGger:LIN:CRCDatalen` on page 2042
- `SEARch:TRIGger:LIN:STANdard` on page 2042

Parameters:
<ChecksumError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 667

SEARch:TRIGger:LIN:ERRPattern <SearchName>,<ErrorPattern>
SEARch:TRIGger:LIN:ERRPattern? <SearchName>

Sets the frame identifier to search for a checksum error.

Parameters:
<ErrorPattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351.

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 667

SEARch:TRIGger:LIN:CRCDatalen <SearchName>,<CRCDataLength>
SEARch:TRIGger:LIN:CRCDatalen? <SearchName>

Sets the number of data bytes search for CRC errors.

Parameters:
<CRCDataLength> Range: 0 to 8
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 667

SEARch:TRIGger:LIN:STANdard <SearchName>,<LINStandard>
SEARch:TRIGger:LIN:STANdard? <SearchName>

Sets the LIN standard to search for CRC errors.

Parameters:
<LINStandard> V1X | V2X | J2602 | AUTO
*RST: AUTO

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 667

26.18.9.5 LIN search results

The search on decoded LIN data returns the same results as the queries for decode results.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.9.3, "Decode results", on page 2027.

SEARch:RESult:LIN:FCOunt? 2043
SEARch:RESult:LIN:FRAMe<fr>:STATus? 2043
SEARch:RESult:LIN:FRAMe<fr>:STARt? 2044
SEARch:RESult:LIN:FRAMe<fr>:STOP? 2044
SEARch:RESult:LIN:FRAMe<fr>:DATA? 2044
SEARch:RESult:LIN:FRAMe<fr>:SDATa? 2044
SEARch:RESult:LIN:FRAMe<fr>:SDEXport? 2045
SEARch:RESult:LIN:FRAMe<fr>:CSSTate? 2045
SEARch:RESult:LIN:FRAMe<fr>:CSValue? 2045
SEARch:RESult:LIN:FRAMe<fr>:IDSTate? 2046
SEARch:RESult:LIN:FRAMe<fr>:IDValue? 2046
SEARch:RESult:LIN:FRAMe<fr>:IDPValue? 2046
SEARch:RESult:LIN:FRAMe<fr>:SYMBol? 2047
SEARch:RESult:LIN:FRAMe<fr>:SYSTate? 2047
SEARch:RESult:LIN:FRAMe<fr>:VERSion? 2047
SEARch:RESult:LIN:FRAMe<fr>:BYTE<n>:STATe? 2048
SEARch:RESult:LIN:FRAMe<fr>:BYTE<n>:VALue? 2048

SEARch:RESult:LIN:FCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:STATus? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | UART | CHCKsum | VERS | LENer | SPERror | PRERror | SYERror | WAKeup | CPERror | INSufficient | INComplete
*RST: OK

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:STARt? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:STOP? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:DATA? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Value> Data bytes in the frame

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:SDATa? <SearchName>

Returns the symbolic data of the frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SymbolicData>

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:SDEXport? <SearchName>

Returns the symbolic data of the frame for the export format.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SymbolicData>

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:CSSTate? <SearchName>

Returns the status of the frame checksum.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<ChecksumState> OK | STERror | SPERror | PRERror | UVAL | NOEXists | INSufficient

STERror: StarT ERror, incorrect start bit
SPERror: StoP ERror, incorrect stop bit
PRERror:PaRity ERror, incorrect parity bit.
UVAL: unexpected value
NOEXists: byte does not exist

*RST: OK

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:CSValue? <SearchName>

Returns the checksum value.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<ChecksumValue> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:IDSTate? <SearchName>

Returns the status of the identifier.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdtfSt> OK | STERror | SPERror | PRERror | UVAL | NOEXists | INSufficient

STERror: StarT ERror, incorrect start bit
SPERror: StoP ERror, incorrect stop bit
PRERror:PaRity ERror, incorrect parity bit.
UVAL: unexpected value
NOEXists: byte does not exist

*RST: OK

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:IDValue? <SearchName>

Returns the value of the identifier.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdtfVal> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:IDPValue? <SearchName>

Returns the value of the identifier parity bit.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<IdParityValue> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:SYMBol? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Label>

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:SYSTate? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SyncState> OK | STERror | SPERror | PRERror | UVAL | NOEXists | INSufficient
*RST: OK

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:VERSion? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Version> V1X | V2X | UNK
*RST: UNK

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:BYTE<n>:STATe? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<ByteState> OK | STERror | SPERror | PRERror | UVAL | NOEXists | INSufficient

*RST: OK

Usage: Query only

SEARch:RESult:LIN:FRAMe<fr>:BYTE<n>:VALue? <SearchName>

Suffix:
<fr> *

<n> *

Query parameters:
<SearchName>

Return values:
<ByteValue> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

26.18.10 MIL-1553 (option R&S RTP-K6)

- Configuration....2048
- Trigger....2051
- Decode results....2064
- Search settings....2068
- Search results....2075

26.18.10.1 Configuration

BUS<b>:MILStd:SOURce....2049
BUS<b>:MILStd:MAXResponse:BITS....2049
BUS<b>:MILStd:MAXResponse:SELect....2049
BUS<b>:MILStd:MINGap:SELect....2050
BUS<b>:MILStd:MINGap:BITS....2050
BUS<b>:MILStd:POLarity....2050

BUS<b>:MILStd:PRESet 2050
BUS<b>:MILStd:THReshold:HIGH 2051
BUS<b>:MILStd:THReshold:LOW 2051

BUS<b>:MILStd:SOURce <SourceData>

Sets the channel for the signal source.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SourceData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Manual operation: See "Source" on page 670

BUS<b>:MILStd:MAXResponse:BITS <MaxRespTime>

Sets the value for the maximum response time.

See also: `BUS<b>:MILStd:MAXResponse:SELect`.

Suffix:
<b> 1..4

Parameters:
<MaxRespTime> Range: 2E-6 to 262E-6
Increment: 100E-9
*RST: 14E-6
Default unit: s

Manual operation: See "Check max response" on page 671

BUS<b>:MILStd:MAXResponse:SELect <MaxRespSel>

Enables the detection of the maximum response time between the last bit of a word and the following status word sync during decoding.

To specify the maximum response time, use `BUS<b>:MILStd:MAXResponse:BITS` on page 2049.

Suffix:
<b> 1..4

Parameters:
<MaxRespSel> OFF | ON
*RST: ON

Manual operation: See "Check max response" on page 671

BUS<b>:MILStd:MINGap:SELect <MinGapSelect>

Enables the detection of the minimum idle time between the last bit of a message and the following command word sync during decoding.

To specify the minimum gap, use `BUS<b>:MILStd:MINGap:BITS`.

Suffix:
<b> 1..4

Parameters:
<MinGapSelect> OFF | ON
*RST: ON

Manual operation: See "Check min gap" on page 671

BUS<b>:MILStd:MINGap:BITS <MinGapTime>

Sets a value for the minimum gap.

See also: `BUS<b>:MILStd:MINGap:SELect`.

Suffix:
<b> 1..4

Parameters:
<MinGapTime> Range: 2E-6 to 262E-6
Increment: 100E-9
*RST: 4E-6
Default unit: s

Manual operation: See "Check min gap" on page 671

BUS<b>:MILStd:POLarity <Polarity>

Selects the wire on which the bus signal is measured.

Suffix:
<b> 1..4

Parameters:
<Polarity> NORMal | INVerted
*RST: NORMal

Manual operation: See "Polarity" on page 670

BUS<b>:MILStd:PRESet <Preset>

Sets the default threshold voltage.

Suffix:
<b> 1..4

Parameters:
<Preset> V05 | V2 | V5 | V7 | MANual
*RST: V5

Manual operation: See "Thresholds" on page 671

BUS<b>:MILStd:THReshold:HIGH <ThresholdHigh>

Sets the lower threshold level of the signal.

Suffix:
<b> 1..4

Parameters:
<ThresholdHigh> Range: 0 to 14
Increment: 0.1
*RST: 5
Default unit: V

Manual operation: See "Thresholds" on page 671

BUS<b>:MILStd:THReshold:LOW <ThresholdLow>

Sets the lower threshold level of the signal.

Suffix:
<b> 1..4

Parameters:
<ThresholdLow> Range: -14 to 0
Increment: 0.1
*RST: -5
Default unit: V

Manual operation: See "Thresholds" on page 671

26.18.10.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:MILStd:TYPE....2052
TRIGger<t>:MILStd:DATA:RCONdition....2053
TRIGger<t>:MILStd:CMD:RCONdition....2053
TRIGger<t>:MILStd:CDST:RCONdition....2053
TRIGger<t>:MILStd:DATA:RMIN....2054

TRIGger<t>:MILStd:CMD:RMIN....2054
TRIGger<t>:MILStd:CDST:RMIN....2054
TRIGger<t>:MILStd:DATA:RMAX....2054
TRIGger<t>:MILStd:CMD:RMAX....2054
TRIGger<t>:MILStd:CDST:RMAX....2054
TRIGger<t>:MILStd:CMD:CCONdition....2054
TRIGger<t>:MILStd:CMD:CMAX....2055
TRIGger<t>:MILStd:CMD:CMIN....2055
TRIGger<t>:MILStd:CMD:SCONdition....2055
TRIGger<t>:MILStd:CMD:SMAX....2056
TRIGger<t>:MILStd:CMD:SMIN....2056
TRIGger<t>:MILStd:CMD:TR....2056
TRIGger<t>:MILStd:CDST:ICONdition....2057
TRIGger<t>:MILStd:CDST:IMAX....2057
TRIGger<t>:MILStd:CDST:IMIN....2057
TRIGger<t>:MILStd:DATA:DCONdition....2058
TRIGger<t>:MILStd:DATA:DMAX....2058
TRIGger<t>:MILStd:DATA:DMIN....2058
TRIGger<t>:MILStd:DATA:ICONdition....2059
TRIGger<t>:MILStd:DATA:IMAX....2059
TRIGger<t>:MILStd:DATA:IMIN....2059
TRIGger<t>:MILStd:ERRor:MANChester....2060
TRIGger<t>:MILStd:ERRor:PARity....2060
TRIGger<t>:MILStd:ERRor:SYNC....2060
TRIGger<t>:MILStd:MAXResponse:BITS....2061
TRIGger<t>:MILStd:MAXResponse:SELect....2061
TRIGger<t>:MILStd:MINGap:BITS....2061
TRIGger<t>:MILStd:MINGap:SELect....2062
TRIGger<t>:MILStd:STATus:BCReceived....2062
TRIGger<t>:MILStd:STATus:BUSY....2062
TRIGger<t>:MILStd:STATus:DBCaccept....2062
TRIGger<t>:MILStd:STATus:INSTrument....2063
TRIGger<t>:MILStd:STATus:MERRor....2063
TRIGger<t>:MILStd:STATus:SREQuest....2063
TRIGger<t>:MILStd:STATus:SUBSystem....2063
TRIGger<t>:MILStd:STATus:TERMinal....2064
TRIGger<t>:MILStd:TPSPecifier....2064

TRIGger<t>:MILStd:TYPE <Type>

Sets the trigger type for MIL-1553 analysis.

Suffix:

<t> 1..3

Parameters:

<Type> STYPe | WTYPe | DATA | CDST | CMD | STATword | ERR

STYPe
SyncTYPe: triggers on a sync impulse.

WTYPe
WordTYPe: triggers on the selected word type.

DATA
Triggers on a data word that can be specified.

CDST
CommanDSTatus word: triggers on a command word or on a status word that can be specified.

CMD
CoMmanD word: triggers on a command word or on a status word that can be specified.

STATword
STATus word: triggers on a status word that can be specified.

ERR
ERRor: triggers on any combination of protocol errors.

*RST: STYPe

Manual operation: See "Trigger Type" on page 673

TRIGger<t>:MILStd:DATA:RCONdition <RTA_Operator>
TRIGger<t>:MILStd:CMD:RCONdition <RTA_Operator>
TRIGger<t>:MILStd:CDST:RCONdition <RTA_Operator>

Sets the operator to define a remote terminal address:

- DATA: for data words
- CMD: for command words
- CDST: for status words

Suffix:
<t> 1..3

Parameters:
<RTA_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:MILStd:CDST:RMIN`.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MILStd:CDST:RMIN` and `TRIGger<t>:MILStd:CDST:RMAX`.

*RST: EQUal

Manual operation: See "Remote Terminal Address" on page 675

TRIGger<t>:MILStd:DATA:RMIN <RTA_PatternMin>
TRIGger<t>:MILStd:CMD:RMIN <RTA_PatternMin>
TRIGger<t>:MILStd:CDST:RMIN <RTA_PatternMin>

Specify a remote terminal address or set the the start value of a remote terminal address range:

- DATA: for data words
- CMD: for command words
- CDST: for status words

Suffix:
<t> 1..3

Parameters:
<RTA_PatternMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Remote Terminal Address" on page 675

TRIGger<t>:MILStd:DATA:RMAX <RTA_PatternMax>
TRIGger<t>:MILStd:CMD:RMAX <RTA_PatternMax>
TRIGger<t>:MILStd:CDST:RMAX <RTA_PatternMax>

Set the end value of a data range if `TRIGger<t>:MILStd:CDST:RCONdition` is set to `INRange` or `OORange`:

- DATA: for data words
- CMD: for command words
- CDST: for status words

Suffix:
<t> 1..3

Parameters:
<RTA_PatternMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Remote Terminal Address" on page 675

TRIGger<t>:MILStd:CMD:CCONdition <WordCountOperator>

Sets the operator to set a specific data word count or mode code pattern.

Suffix:
<t> 1..3

Parameters:
<WordCountOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:MILStd:CMD:CMIN`.

INRange | OORange
In range/Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:MILStd:CMD:CMIN` and `TRIGger<t>:MILStd:CMD:CMAX`.

*RST: EQUal

Manual operation: See "Data Word Count/Mode Code" on page 677

TRIGger<t>:MILStd:CMD:CMAX <WordCount_PattMax>

Sets the end value of a data word count/mode code pattern if `TRIGger<t>:MILStd:CMD:CCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<WordCount_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data Word Count/Mode Code" on page 677

TRIGger<t>:MILStd:CMD:CMIN <WordCount_PattMin>

Specifies a data word count/mode code pattern or sets the the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<WordCount_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data Word Count/Mode Code" on page 677

TRIGger<t>:MILStd:CMD:SCONdition <SubaddrOperator>

Sets the operator to set a specific subaddress/mode pattern.

Suffix:
<t> 1..3

Parameters:
<SubaddrOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with`TRIGger<t>:MILStd:CMD:SMIN`.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MILStd:CMD:SMIN` and `TRIGger<t>:MILStd:CMD:SMAX`.

*RST: EQUal

Manual operation: See "Subaddress/ Mode" on page 677

TRIGger<t>:MILStd:CMD:SMAX <Subaddress_PattMax>

Sets the end value of the subaddress range if `TRIGger<t>:MILStd:CMD:SCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Subaddress_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Subaddress/ Mode" on page 677

TRIGger<t>:MILStd:CMD:SMIN <Subaddress_PattMin>

Specifies a subaddress or sets the the start value of a subaddress range.

Suffix:
<t> 1..3

Parameters:
<Subaddress_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Subaddress/ Mode" on page 677

TRIGger<t>:MILStd:CMD:TR <TR_Flag>

Triggers on a transmission mode.

Suffix:
<t> 1..3

Parameters:
<TR_Flag> ONE | ZERO | DC

ONE
Transmit direction.

ZERO
Receive direction.

DC
Either directions.

*RST: DC

Manual operation: See "T/R (Transmit/receive)" on page 678

TRIGger<t>:MILStd:CDST:ICONdition <Info_Operator>

Sets the operator to set a specific info for the 9th to 19th bit of a command or status word.

Suffix:
<t> 1..3

Parameters:
<Info_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:MILStd:CDST:IMIN`.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MILStd:CDST:IMIN` and `TRIGger<t>:MILStd:CDST:IMAX`.

*RST: EQUal

Manual operation: See "11-Bit Information" on page 677

TRIGger<t>:MILStd:CDST:IMAX <Info_PattMax>

Sets the end value of the info range if `TRIGger<t>:MILStd:CDST:ICONdition` is set to `INRange`.

Suffix:
<t> 1..3

Parameters:
<Info_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "11-Bit Information" on page 677

TRIGger<t>:MILStd:CDST:IMIN <Info_PattMin>

Specifies an info or sets the the start value of an info range.

Suffix:
<t> 1..3

Parameters:
<Info_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "11-Bit Information" on page 677

TRIGger<t>:MILStd:DATA:DCONdition <Data_Operator>

Sets the operator to set a specific data pattern.

Suffix:
<t> 1..3

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:MILStd:DATA:DMIN`.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MILStd:DATA:DMIN` and `TRIGger<t>:MILStd:DATA:DMAX`.

*RST: EQUal

Manual operation: See "Data Pattern" on page 676

TRIGger<t>:MILStd:DATA:DMAX <Data_PattMax>

Sets the end value of a data pattern range if `TRIGger<t>:MILStd:DATA:DCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Data_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data Pattern" on page 676

TRIGger<t>:MILStd:DATA:DMIN <Data_PattMin>

Specifies a data pattern or sets the the start value of a data pattern range.

Suffix:
<t> 1..3

Parameters:
<Data_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data Pattern" on page 676

TRIGger<t>:MILStd:DATA:ICONdition <DatIndexOperator>

Sets the operator to set a specific range within this series of the data words that is considered for the analysis.

Suffix:
<t> 1..3

Parameters:
<DatIndex_Operator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal| LTHan | LETHan | GTHan | GETHan
Equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:MILStd:DATA:IMIN`.

INRange = RANGe
In range: set the minimum and maximum value of the range with `TRIGger<t>:MILStd:DATA:IMIN` and `TRIGger<t>:MILStd:DATA:IMAX`.

*RST: INRange

Manual operation: See "Data Index" on page 676

TRIGger<t>:MILStd:DATA:IMAX <DataIndex_Max>

Sets the end value of a data word series index range if `TRIGger<t>:MILStd:DATA:ICONdition` is set to `INRange`.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Max> Range: 1 to 32
Increment: 1
*RST: 32

Manual operation: See "Data Index" on page 676

TRIGger<t>:MILStd:DATA:IMIN <DataIndex_Min>

Specifies an index or sets the the start value of a data word series index range.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Min> Range: 1 to 32
Increment: 1
*RST: 1

Manual operation: See "Data Index" on page 676

TRIGger<t>:MILStd:ERRor:MANChester <ManCodingError>

Triggers on an error of the manchester coding if `TRIGger<t>:MILStd:TYPE` is set to `ERRor`.

Suffix:
<t> 1..3

Parameters:
<ManCodingError> OFF | ON
*RST: ON

Manual operation: See "Manchester Coding Error" on page 678

TRIGger<t>:MILStd:ERRor:PARity <ParityError>

Triggers on even parity if `TRIGger<t>:MILStd:TYPE` is set to `ERRor`.

Suffix:
<t> 1..3

Parameters:
<ParityError> OFF | ON
*RST: ON

Manual operation: See "Parity Error" on page 678

TRIGger<t>:MILStd:ERRor:SYNC <SyncError>

Triggers on an error of the synchronization if `TRIGger<t>:MILStd:TYPE` is set to `ERRor`.

Suffix:
<t> 1..3

Parameters:
<SyncError> OFF | ON
*RST: ON

Manual operation: See "Synchronization Error" on page 678

TRIGger<t>:MILStd:MAXResponse:BITS <MaxRespTime>

Sets the value for the maximum response time to be triggered on if `TRIGger<t>:MILStd:TYPE` is set to `ERRor`

Enable the error trigger on maximum response time with `TRIGger<t>:MILStd:MAXResponse:SELect`.

Suffix:
<t> 1..3

Parameters:
<MaxRespTime> Range: 2E-6 to 262E-6
Increment: 100E-9
*RST: 14E-6
Default unit: s

Manual operation: See "Check max response" on page 671

TRIGger<t>:MILStd:MAXResponse:SELect <MaxRespSel>

Enables the trigger on exceeding the maximum response time if `TRIGger<t>:MILStd:TYPE` is set to `ERRor`. You can set the maximum time with: `TRIGger<t>:MILStd:MAXResponse:BITS`.

Suffix:
<t> 1..3

Parameters:
<MaxRespSel> OFF | ON
*RST: ON

Manual operation: See "Check max response" on page 671

TRIGger<t>:MILStd:MINGap:BITS <MinGapTime>

Sets the value for the minimum gap to be triggered on if `TRIGger<t>:MILStd:TYPE` is set to `ERRor`.

Suffix:
<t> 1..3

Parameters:
<MinGapTime> Range: 2E-6 to 262E-6
Increment: 100E-9
*RST: 4E-6
Default unit: s

Manual operation: See "Check min gap" on page 671

TRIGger<t>:MILStd:MINGap:SELect <MinGapSelect>

Enables triggering when the minimum gap is out of range if `TRIGger<t>:MILStd:TYPE` is set to `ERRor`. You can set the minimum gap with: `TRIGger<t>:MILStd:MINGap:BITS`.

Suffix:
<t> 1..3

Parameters:
<MinGapSelect> OFF | ON
*RST: ON

Manual operation: See "Check min gap" on page 671

TRIGger<t>:MILStd:STATus:BCReceived <BcstCommand_Flag>

Triggers on the state of the broadcast command received bit of the status word if `TRIGger<t>:MILStd:TYPE` is set to `STATword`.

Suffix:
<t> 1..3

Parameters:
<BcstCommand_Flag> ONE | ZERO | DC
*RST: DC

Manual operation: See "Status Flags" on page 678

TRIGger<t>:MILStd:STATus:BUSY <Busy_Flag>

Triggers on the state of the busy bit of the status word if `TRIGger<t>:MILStd:TYPE` is set to `STATword`.

Suffix:
<t> 1..3

Parameters:
<Busy_Flag> ONE | ZERO | DC
*RST: DC

Manual operation: See "Status Flags" on page 678

TRIGger<t>:MILStd:STATus:DBCaccept <DynBC_Flag>

Triggers on the state of the dynamic bus control accept bit of the status word if `TRIGger<t>:MILStd:TYPE` is set to `STATword`.

Suffix:
<t> 1..3

Parameters:
<DynBC_Flag> ONE | ZERO | DC
*RST: DC

Manual operation: See "Status Flags" on page 678

TRIGger<t>:MILStd:STATus:INSTrument <Inst_Flag>

Triggers on the state of the instrumentation bit of the status word if `TRIGger<t>:MILStd:TYPE` is set to `STATword`.

Suffix:
<t> 1..3

Parameters:
<Inst_Flag> ONE | ZERO | DC
*RST: ZERO

Manual operation: See "Status Flags" on page 678

TRIGger<t>:MILStd:STATus:MERRor <MsgError_Flag>

Triggers on the state of the message error bit of the status word if `TRIGger<t>:MILStd:TYPE` is set to `STATword`.

Suffix:
<t> 1..3

Parameters:
<MsgError_Flag> ONE | ZERO | DC
*RST: DC

Manual operation: See "Status Flags" on page 678

TRIGger<t>:MILStd:STATus:SREQuest <SvcRequest_Flag>

Triggers on the state of the the service request bit of the status word if `TRIGger<t>:MILStd:TYPE` is set to `STATword`.

Suffix:
<t> 1..3

Parameters:
<SvcRequest_Flag> ONE | ZERO | DC
*RST: DC

Manual operation: See "Status Flags" on page 678

TRIGger<t>:MILStd:STATus:SUBSystem <Subsystem_Flag>

Triggers on the state of the subsystem flag bit of the status word if `TRIGger<t>:MILStd:TYPE` is set to `STATword`.

Suffix:
<t> 1..3

Parameters:
<Subsystem_Flag> ONE | ZERO | DC
*RST: DC

Manual operation: See "Status Flags" on page 678

TRIGger<t>:MILStd:STATus:TERMinal <Terminal_Flag>

Triggers on the state of the terminal flag bit of the status word if `TRIGger<t>:MILStd:TYPE` is set to `STATword`.

Suffix:
<t> 1..3

Parameters:
<Terminal_Flag> ONE | ZERO | DC
*RST: DC

Manual operation: See "Status Flags" on page 678

TRIGger<t>:MILStd:TPSPecifier <TypeSpecifier>

Sets the sync impulse/ word type to be triggered on.

Suffix:
<t> 1..3

Parameters:
<TypeSpecifier> CSTatus | DATA | ALL
CSTatus: command/status word
*RST: ALL

Manual operation: See "Sync Type / Word Type" on page 675

26.18.10.3 Decode results

To load and acivate a label list, use:

- `BUS<b>:NEWList` on page 1835
- `BUS<b>:SYMBols` on page 1835

BUS<b>:MILStd:WCOunt? 2065
BUS<b>:MILStd:WORD<w>:DATA? 2065
BUS<b>:MILStd:WORD<w>:INFO? 2065
BUS<b>:MILStd:WORD<w>:RTADdress? 2066
BUS<b>:MILStd:WORD<w>:STARt? 2066
BUS<b>:MILStd:WORD<w>:STATus? 2066

BUS<b>:MILStd:WORD<w>:STOP? 2067
BUS<b>:MILStd:WORD<w>:SYMBol? 2067
BUS<b>:MILStd:WORD<w>:TYPE? 2067

BUS<b>:MILStd:WCOunt?

Returns the number of decoded words.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MILStd:WORD<w>:DATA?

Return the data bytes of the specified word.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:
<Data> 16-bit data of the specified word as a 2-byte bit pattern (B1, B2). The first byte B1 is the most significant byte.

Example:
```
BUS:MILStd:WORD4:DATA?
<-- #H08,#H49
```

Usage: Query only

BUS<b>:MILStd:WORD<w>:INFO?

Returns the info value for the specified word.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:
<FrameInfo> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MILStd:WORD<w>:RTADdress?

Returns the RT address for the selected word.

Suffix:

<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:

<FrameRta> Range: 0 to 31
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MILStd:WORD<w>:STARt?

Return the start time of the selected word.

Suffix:

<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:

<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:MILStd:WORD<w>:STATus?

Returns the overall state of the selected word.

Suffix:

<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:

<FrameState> OK | SYNC | MANC | PAR | GAP | RT | INComplete | UNKNown

OK: the word is valid.
SYNC: synchronization error occured.
MANC: manchester coding error occured.
PAR: parity error occured.

GAP: timing gap error occured.
RT: remote terminal error occured.
INComplete: the sequence is not completely contained in the acquisition
UNKNown: unknown frame type

*RST: OK

Usage: Query only

BUS<b>:MILStd:WORD<w>:STOP?

Return the stop time of the selected word.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:MILStd:WORD<w>:SYMBol?

Returns the label name of the word ID.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:
<Translation>

Usage: Query only

BUS<b>:MILStd:WORD<w>:TYPE?

Returns the type of the specified word.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:

<FrameType> UNKNown | DATA | CMD | STAT | CMST | IM

CMD: command word
CMST: command/status word
IM: inter message. Shows if there are gap errors or response timeout.

*RST: DATA

Usage: Query only

26.18.10.4 Search settings

The search remote commands are very similar to the trigger commands. Therefore, search coommands are described in short, for more details, see the corresponding trigger command in Section 26.18.10.2, "Trigger", on page 2051.

SEARch:TRIGger:MILStd:TYPE ... 2069
SEARch:TRIGger:MILStd:DATA:RCONdition ... 2069
SEARch:TRIGger:MILStd:CMD:RCONdition ... 2069
SEARch:TRIGger:MILStd:CDST:RCONdition ... 2069
SEARch:TRIGger:MILStd:DATA:RMIN ... 2070
SEARch:TRIGger:MILStd:CMD:RMIN ... 2070
SEARch:TRIGger:MILStd:CDST:RMIN ... 2070
SEARch:TRIGger:MILStd:DATA:RMAX ... 2070
SEARch:TRIGger:MILStd:CMD:RMAX ... 2070
SEARch:TRIGger:MILStd:CDST:RMAX ... 2070
SEARch:TRIGger:MILStd:CDST:ICONdition ... 2071
SEARch:TRIGger:MILStd:CMD:CCONdition ... 2071
SEARch:TRIGger:MILStd:CMD:SCONdition ... 2071
SEARch:TRIGger:MILStd:DATA:DCONdition ... 2071
SEARch:TRIGger:MILStd:CDST:IMIN ... 2071
SEARch:TRIGger:MILStd:CMD:CMIN ... 2071
SEARch:TRIGger:MILStd:CMD:SMIN ... 2071
SEARch:TRIGger:MILStd:DATA:DMIN ... 2071
SEARch:TRIGger:MILStd:CDST:IMAX ... 2072
SEARch:TRIGger:MILStd:CMD:CMAX ... 2072
SEARch:TRIGger:MILStd:CMD:SMAX ... 2072
SEARch:TRIGger:MILStd:DATA:DMAX ... 2072
SEARch:TRIGger:MILStd:DATA:ICONdition ... 2072
SEARch:TRIGger:MILStd:DATA:IMIN ... 2072
SEARch:TRIGger:MILStd:DATA:IMAX ... 2073
SEARch:TRIGger:MILStd:CMD:TR ... 2073
SEARch:TRIGger:MILStd:ERRor:MANChester ... 2073
SEARch:TRIGger:MILStd:ERRor:PARity ... 2073
SEARch:TRIGger:MILStd:ERRor:SYNC ... 2073
SEARch:TRIGger:MILStd:ERRor:TIMing ... 2073
SEARch:TRIGger:MILStd:STATus:BCReceived ... 2074
SEARch:TRIGger:MILStd:STATus:BUSY ... 2074
SEARch:TRIGger:MILStd:STATus:DBCaccept ... 2074
SEARch:TRIGger:MILStd:STATus:INSTrument ... 2074

SEARch:TRIGger:MILStd:STATus:MERRor 2074
SEARch:TRIGger:MILStd:STATus:SREQuest 2074
SEARch:TRIGger:MILStd:STATus:SUBSystem 2074
SEARch:TRIGger:MILStd:STATus:TERMinal 2074
SEARch:TRIGger:MILStd:TPSPecifier 2074

SEARch:TRIGger:MILStd:TYPE <SearchName>,<Type>
SEARch:TRIGger:MILStd:TYPE? <SearchName>

Sets the event to be searched for.

Parameters:
<Type> STYPe | WTYPe | DATA | CDST | CMD | STATword | ERR

See `TRIGger<t>:MILStd:TYPE` on page 2052

*RST: STYPe

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 681

SEARch:TRIGger:MILStd:DATA:RCONdition <SearchName>,<RTA_Operator>
SEARch:TRIGger:MILStd:DATA:RCONdition? <SearchName>
SEARch:TRIGger:MILStd:CMD:RCONdition <SearchName>,<RTA_Operator>
SEARch:TRIGger:MILStd:CMD:RCONdition? <SearchName>
SEARch:TRIGger:MILStd:CDST:RCONdition <SearchName>,<RTA_Operator>
SEARch:TRIGger:MILStd:CDST:RCONdition? <SearchName>

Set the operator to define a remote terminal address:

- DATA: for data words
- CMD: for command words
- CDST: for status words

Parameters:
<RTA_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with `SEARch:TRIGger:MILStd:CDST:RMIN`.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MILStd:CDST:RMIN` and `SEARch:TRIGger:MILStd:CDST:RMAX` on page 2070.

*RST: EQUal

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Remote terminal address setup: Condition, RTA " on page 682

SEARch:TRIGger:MILStd:DATA:RMIN <SearchName>,<RTA_PatternMin>
SEARch:TRIGger:MILStd:DATA:RMIN? <SearchName>
SEARch:TRIGger:MILStd:CMD:RMIN <SearchName>,<RTA_PatternMin>
SEARch:TRIGger:MILStd:CMD:RMIN? <SearchName>
SEARch:TRIGger:MILStd:CDST:RMIN <SearchName>,<RTA_PatternMin>
SEARch:TRIGger:MILStd:CDST:RMIN? <SearchName>

Specify a remote terminal address or set the the start value of a remote terminal address range:

- DATA: for data words
- CMD: for command words
- CDST: for status words

Parameters:
<RTA_PatternMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Remote terminal address setup: Condition, RTA " on page 682

SEARch:TRIGger:MILStd:DATA:RMAX <SearchName>,<RTA_PatternMax>
SEARch:TRIGger:MILStd:DATA:RMAX? <SearchName>
SEARch:TRIGger:MILStd:CMD:RMAX <SearchName>,<RTA_PatternMax>
SEARch:TRIGger:MILStd:CMD:RMAX? <SearchName>
SEARch:TRIGger:MILStd:CDST:RMAX <SearchName>,<RTA_PatternMax>
SEARch:TRIGger:MILStd:CDST:RMAX? <SearchName>

Set the end value of a data range if `SEARch:TRIGger:MILStd:CDST:RCONdition` is set to `INRange` or `OORange`:

- DATA: for data words
- CMD: for command words
- CDST: for status words

Parameters:
<RTA_PatternMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Remote terminal address setup: Condition, RTA " on page 682

SEARch:TRIGger:MILStd:CDST:ICONdition <SearchName>,<Info_Operator>
SEARch:TRIGger:MILStd:CDST:ICONdition? <SearchName>
SEARch:TRIGger:MILStd:CMD:CCONdition <SearchName>,<WordCountOperator>
SEARch:TRIGger:MILStd:CMD:CCONdition? <SearchName>
SEARch:TRIGger:MILStd:CMD:SCONdition <SearchName>,<SubaddrOperator>
SEARch:TRIGger:MILStd:CMD:SCONdition? <SearchName>
SEARch:TRIGger:MILStd:DATA:DCONdition <SearchName>,<Data_Operator>
SEARch:TRIGger:MILStd:DATA:DCONdition? <SearchName>

Sets the operator for the corresponding search:

- CDST:ICON - specific info for the 9th to 19th bit of a command or status word.
- CMD:CCON - specific data word count or mode code pattern in a command word
- CMD:SCON - specific subaddress/mode pattern in a command word
- DATA:DCON - data pattern in a data word

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data pattern setup: Condition, Data min, Data max" on page 682

SEARch:TRIGger:MILStd:CDST:IMIN <SearchName>,<Info_PattMin>
SEARch:TRIGger:MILStd:CDST:IMIN? <SearchName>
SEARch:TRIGger:MILStd:CMD:CMIN <SearchName>,<WordCount_PattMin>
SEARch:TRIGger:MILStd:CMD:CMIN? <SearchName>
SEARch:TRIGger:MILStd:CMD:SMIN <SearchName>,<Subaddress_PattMin>
SEARch:TRIGger:MILStd:CMD:SMIN? <SearchName>
SEARch:TRIGger:MILStd:DATA:DMIN <SearchName>,<Data_PattMin>
SEARch:TRIGger:MILStd:DATA:DMIN? <SearchName>

Sets the pattern or the start value of a pattern range for the corresponding search:

- CDST:IMIN - specific info for the 9th to 19th bit of a command or status word.
- CMD:CMIN - specific data word count or mode code pattern in a command word
- CMD:SMIN - specific subaddress/mode pattern in a command word
- DATA:DMIN - data pattern in a data word

Parameters:
<Data_PattMin>

Parameters for setting and query:
<SearchName>

Manual operation: See "Data pattern setup: Condition, Data min, Data max" on page 682

SEARch:TRIGger:MILStd:CDST:IMAX <SearchName>,<Info_PattMax>
SEARch:TRIGger:MILStd:CDST:IMAX? <SearchName>
SEARch:TRIGger:MILStd:CMD:CMAX <SearchName>,<WordCount_PattMax>
SEARch:TRIGger:MILStd:CMD:CMAX? <SearchName>
SEARch:TRIGger:MILStd:CMD:SMAX <SearchName>,<Subaddress_PattMax>
SEARch:TRIGger:MILStd:CMD:SMAX? <SearchName>
SEARch:TRIGger:MILStd:DATA:DMAX <SearchName>,<Data_PattMax>
SEARch:TRIGger:MILStd:DATA:DMAX? <SearchName>

Sets the end value of a pattern range for the corresponding search:

- CDST:IMAX - specific info for the 9th to 19th bit of a command or status word.
- CMD:CMAX - specific data word count or mode code pattern in a command word
- CMD:SMAX - specific subaddress/mode pattern in a command word
- DATA:DMAX - data pattern in a data word

Parameters:
<Data_PattMax>

Parameters for setting and query:
<SearchName>

Manual operation: See "Data pattern setup: Condition, Data min, Data max" on page 682

SEARch:TRIGger:MILStd:DATA:ICONdition <SearchName>,<DatIndexOperator>
SEARch:TRIGger:MILStd:DATA:ICONdition? <SearchName>

Sets the operator to set a range within a series of the data words that is considered for the search.

Parameters:
<DatIndex_Operator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

INRange = RANGe

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Data index setup: Condition, Index min, Index max" on page 682

SEARch:TRIGger:MILStd:DATA:IMIN <SearchName>,<DataIndex_Min>
SEARch:TRIGger:MILStd:DATA:IMIN? <SearchName>

Specifies an index or sets the the start value of a data word series index range.

Parameters:
<DataIndex_Min> Range: 1 to 32
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Data index setup: Condition, Index min, Index max" on page 682

SEARch:TRIGger:MILStd:DATA:IMAX <SearchName>,<DataIndex_Max>
SEARch:TRIGger:MILStd:DATA:IMAX? <SearchName>

Sets the end value of a data word series index range if the operator is set to `INRange`.

Parameters:
<DataIndex_Max> Range: 1 to 32
Increment: 1
*RST: 32

Parameters for setting and query:
<SearchName>

Manual operation: See "Data index setup: Condition, Index min, Index max" on page 682

SEARch:TRIGger:MILStd:CMD:TR <SearchName>,<TR_Flag>
SEARch:TRIGger:MILStd:CMD:TR? <SearchName>

Searches for a transmission mode.

Parameters:
<TR_Flag> ONE | ZERO | DC
*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "T/R (Transmit/receive)" on page 683

SEARch:TRIGger:MILStd:ERRor:MANChester <SearchName>,<ManCodingError>
SEARch:TRIGger:MILStd:ERRor:MANChester? <SearchName>
SEARch:TRIGger:MILStd:ERRor:PARity <SearchName>,<ParityError>
SEARch:TRIGger:MILStd:ERRor:PARity? <SearchName>
SEARch:TRIGger:MILStd:ERRor:SYNC <SearchName>,<SyncError>
SEARch:TRIGger:MILStd:ERRor:SYNC? <SearchName>
SEARch:TRIGger:MILStd:ERRor:TIMing <SearchName>,<MinGapSelect>
SEARch:TRIGger:MILStd:ERRor:TIMing? <SearchName>

Enables search for errors if `SEARch:TRIGger:MILStd:TYPE` is set to `ERRor`.

- MANChester: error of the manchester coding
- PARity: even parity (parity error)
- SYNC: error of the synchronization
- TIMing: Minimum gap is out of range

Parameters:
<MinGapSelect> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 683

SEARch:TRIGger:MILStd:STATus:BCReceived
<SearchName>,<BcstCommand_Flag>
SEARch:TRIGger:MILStd:STATus:BCReceived? <SearchName>
SEARch:TRIGger:MILStd:STATus:BUSY <SearchName>,<Busy_Flag>
SEARch:TRIGger:MILStd:STATus:BUSY? <SearchName>
SEARch:TRIGger:MILStd:STATus:DBCaccept <SearchName>,<DynBC_Flag>
SEARch:TRIGger:MILStd:STATus:DBCaccept? <SearchName>
SEARch:TRIGger:MILStd:STATus:INSTrument <SearchName>,<Inst_Flag>
SEARch:TRIGger:MILStd:STATus:INSTrument? <SearchName>
SEARch:TRIGger:MILStd:STATus:MERRor <SearchName>,<MsgError_Flag>
SEARch:TRIGger:MILStd:STATus:MERRor? <SearchName>
SEARch:TRIGger:MILStd:STATus:SREQuest <SearchName>,<SvcRequest_Flag>
SEARch:TRIGger:MILStd:STATus:SREQuest? <SearchName>
SEARch:TRIGger:MILStd:STATus:SUBSystem <SearchName>,<Subsystem_Flag>
SEARch:TRIGger:MILStd:STATus:SUBSystem? <SearchName>
SEARch:TRIGger:MILStd:STATus:TERMinal <SearchName>,<Terminal_Flag>
SEARch:TRIGger:MILStd:STATus:TERMinal? <SearchName>

Specifies the values (0, 1, X) of the status flags if `SEARch:TRIGger:MILStd:TYPE` is set to `STATword`.

Parameters:
<Terminal_Flag> ONE | ZERO | DC
*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "Status flags setup" on page 683

SEARch:TRIGger:MILStd:TPSPecifier <SearchName>,<TypeSpecifier>
SEARch:TRIGger:MILStd:TPSPecifier? <SearchName>

Sets the sync impulse/ word type to be searched for.

Parameters:
<TypeSpecifier> CSTatus | DATA | ALL
CSTatus: command/status word
*RST: ALL

Parameters for setting and query:
<SearchName>

Manual operation: See "Sync Type / Word Type" on page 681

26.18.10.5 Search results

The search on decoded MIL-1553 data returns the same results as the queries for decode results.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.10.3, "Decode results", on page 2064.

SEARch:RESult:MILStd:WCOunt?....2075
SEARch:RESult:MILStd:WORD<w>:TYPE?....2075
SEARch:RESult:MILStd:WORD<w>:STATus?....2076
SEARch:RESult:MILStd:WORD<w>:STARt?....2076
SEARch:RESult:MILStd:WORD<w>:STOP?....2076
SEARch:RESult:MILStd:WORD<w>:SYMBol?....2076
SEARch:RESult:MILStd:WORD<w>:RTADdress?....2077
SEARch:RESult:MILStd:WORD<w>:DATA?....2077
SEARch:RESult:MILStd:WORD<w>:INFO?....2077

SEARch:RESult:MILStd:WCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:MILStd:WORD<w>:TYPE? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameType> UNKNown | DATA | CMD | STAT | CMST | IM
*RST: DATA

Usage: Query only

SEARch:RESult:MILStd:WORD<w>:STATus? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameState> OK | SYNC | MANC | PAR | GAP | RT | INComplete | UNKNown
*RST: OK

Usage: Query only

SEARch:RESult:MILStd:WORD<w>:STARt? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:MILStd:WORD<w>:STOP? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:MILStd:WORD<w>:SYMBol? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<Translation>

Usage: Query only

SEARch:RESult:MILStd:WORD<w>:RTADdress? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameRta> Range: 0 to 31
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:MILStd:WORD<w>:DATA? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:MILStd:WORD<w>:INFO? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameInfo> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only

26.18.11 ARINC 429 (option R&S RTP-K7)

- Configuration....2078
- Trigger....2081
- Decode results....2086
- Search settings....2090
- Search results....2093

26.18.11.1 Configuration

BUS<b>:ARINc:SOURce....2078
BUS<b>:ARINc:BRValue....2078
BUS<b>:ARINc:BRMode....2079
BUS<b>:ARINc:MAXGap:SELect....2079
BUS<b>:ARINc:MAXGap:BITS....2079
BUS<b>:ARINc:MINGap:SELect....2079
BUS<b>:ARINc:MINGap:BITS....2080
BUS<b>:ARINc:POLarity....2080
BUS<b>:ARINc:PRESet....2080
BUS<b>:ARINc:THReshold:HIGH....2081
BUS<b>:ARINc:THReshold:LOW....2081

BUS<b>:ARINc:SOURce <SourceData>

Sets the channel for the signal source.

Reference and math waveforms are only available if the trigger source is one of the input channels but not the serial bus.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<SourceData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

*RST: C1W1

Manual operation: See "Data" on page 686

BUS<b>:ARINc:BRValue <BitRateValue>

Sets the number of transmitted bits per second.

Suffix:
<b> 1..4

Parameters:
<BitRateValue> Range: 10000 to 110E+3
Increment: 100
*RST: 100E+3
Default unit: bps

Manual operation: See "Bit Rate" on page 687

BUS<b>:ARINc:BRMode <BitRateMode>

Sets the bit rate mode to high or low speed.

Suffix:
<b> 1..4

Parameters:
<BitRateMode> HIGH | LOW
*RST: HIGH

Manual operation: See "Bit Rate" on page 687

BUS<b>:ARINc:MAXGap:SELect <MaxGapSelect>

Enables the detection of the maximum gap time during decoding.

To specify the maximum gap time `BUS<b>:ARINc:MAXGap:BITS` on page 2079.

Suffix:
<b> 1..4

Parameters:
<MaxGapSelect> OFF | ON
*RST: OFF

Manual operation: See "Timing: Min gap, Max gap" on page 687

BUS<b>:ARINc:MAXGap:BITS <MaxGapBits>

Sets the value for the maximum gap between two words.

See also: `BUS<b>:ARINc:MAXGap:SELect`

Suffix:
<b> 1..4

Parameters:
<MaxGapBits> Range: 0 to 1000
Increment: 1
*RST: 100
Default unit: bit

Manual operation: See "Timing: Min gap, Max gap" on page 687

BUS<b>:ARINc:MINGap:SELect <MinGapSelect>

Enables the detection of the minimum idle time between two words during decoding.

To specify the minimum gap, use`BUS<b>:ARINc:MINGap:BITS`.

Suffix:
<b> 1..4

Parameters:
<MinGapSelect> OFF | ON
*RST: ON

Manual operation: See "Timing: Min gap, Max gap" on page 687

BUS<b>:ARINc:MINGap:BITS <MinGapBits>

Sets a value for the minimum timing gap between two words.

See also: `BUS<b>:ARINc:MINGap:SELect` on page 2079.

Suffix:
<b> 1..4

Parameters:
<MinGapBits> Range: 0 to 100
Increment: 1
*RST: 4
Default unit: bit

Manual operation: See "Timing: Min gap, Max gap" on page 687

BUS<b>:ARINc:POLarity <Polarity>

Sets the wire on which the bus signal is measured.

Suffix:
<b> 1..4

Parameters:
<Polarity> ALEG | BLEG
*RST: ALEG

Manual operation: See "Polarity" on page 686

BUS<b>:ARINc:PRESet <Preset>

Sets the default threshold voltage.

Suffix:
<b> 1..4

Parameters:
<Preset> V25 | V5 | MANual
*RST: V5

Manual operation: See "Thresholds" on page 686

BUS<b>:ARINc:THReshold:HIGH <ThresholdHigh>

Sets the high threshold level of the signal.

Suffix:
<b> 1..4

Parameters:
<ThresholdHigh> Range: 0 to 12
Increment: 0.1
*RST: 5
Default unit: V

Manual operation: See "Thresholds" on page 686

BUS<b>:ARINc:THReshold:LOW <ThresholdLow>

Sets the low threshold level of the signal.

Suffix:
<b> 1..4

Parameters:
<ThresholdLow> Range: -12 to 0
Increment: 0.1
*RST: -5
Default unit: V

Manual operation: See "Thresholds" on page 686

26.18.11.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:ARINc:TYPE....2082
TRIGger<t>:ARINc:DATA:CONDition....2082
TRIGger<t>:ARINc:DATA:MIN....2082
TRIGger<t>:ARINc:DATA:MAX....2083
TRIGger<t>:ARINc:ERRor:CODing....2083
TRIGger<t>:ARINc:ERRor:PARity....2083
TRIGger<t>:ARINc:LABel:CONDition....2083
TRIGger<t>:ARINc:LABel:MIN....2084
TRIGger<t>:ARINc:LABel:MAX....2084
TRIGger<t>:ARINc:MINGap:SELect....2084
TRIGger<t>:ARINc:MINGap:BITS....2085

TRIGger<t>:ARINc:MAXGap:SELect....2085
TRIGger<t>:ARINc:MAXGap:BITS....2085
TRIGger<t>:ARINc:SDI....2085
TRIGger<t>:ARINc:SSM....2086

TRIGger<t>:ARINc:TYPE <Type>

Sets the trigger type for ARINC 429 analysis.

Suffix:
<t> 1..3

Parameters:
<Type> STARt | STOP | LABel | ERRor
*RST: STARt

Manual operation: See "Trigger Type" on page 689

TRIGger<t>:ARINc:DATA:CONDition <Data_Operator>

Sets the condition for the data. You can define an exact data patterm or a data range.

Suffix:
<t> 1..3

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:ARINc:DATA:MIN`.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:ARINc:DATA:MIN` and `TRIGger<t>:ARINc:DATA:MAX`.

*RST: EQUal

Manual operation: See "Data setup: Condition, Data Min, Data Max" on page 691

TRIGger<t>:ARINc:DATA:MIN <Data_Min>

Defines the minimum bit pattern for the data.

Suffix:
<t> 1..3

Parameters:
<Data_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data setup: Condition, Data Min, Data Max" on page 691

TRIGger<t>:ARINc:DATA:MAX <Data_Max>

Sets the end value of a data pattern if `TRIGger<t>:ARINc:DATA:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Data_Max>

Manual operation: See "Data setup: Condition, Data Min, Data Max" on page 691

TRIGger<t>:ARINc:ERRor:CODing <Coding_Error>

Enables triggering when a coding error occurs.

Suffix:
<t> 1..3

Parameters:
<Coding_Error> OFF | ON
*RST: ON

Manual operation: See "Coding error" on page 691

TRIGger<t>:ARINc:ERRor:PARity <Parity_Error>

Enables triggering when a parity error occurs.

Suffix:
<t> 1..3

Parameters:
<Parity_Error> OFF | ON
*RST: ON

Manual operation: See "Parity Error" on page 691

TRIGger<t>:ARINc:LABel:CONDition <Label_Operator>

Sets the condition for the label. You can define an exact label or a label range.

Suffix:
<t> 1..3

Parameters:
<Label_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with`TRIGger<t>:ARINc:LABel:MIN`.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with`TRIGger<t>:ARINc:LABel:MIN` and `TRIGger<t>:ARINc:LABel:MAX`.

*RST: EQUal

Manual operation: See "Label setup: Condition, Label Min, Label Max" on page 690

TRIGger<t>:ARINc:LABel:MIN <Label_Min>

Defines the minimum bit pattern for the label.

Suffix:
<t> 1..3

Parameters:
<Label_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Label setup: Condition, Label Min, Label Max" on page 690

TRIGger<t>:ARINc:LABel:MAX <Label_Max>

Sets the end value of a label pattern if `TRIGger<t>:ARINc:LABel:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Label_Max> Numeric or string pattern, see `TRIGger<t>:ARINc:LABel:MIN`

Manual operation: See "Label setup: Condition, Label Min, Label Max" on page 690

TRIGger<t>:ARINc:MINGap:SELect <MinGapSelect>

Enables triggering when the minimum gap is out of range. You can set the minimum gap with: `TRIGger<t>:ARINc:MINGap:BITS`.

Suffix:
<t> 1..3

Parameters:
<MinGapSelect> OFF | ON

*RST: ON

Manual operation: See "Timing: Min gap, Max gap" on page 687

TRIGger<t>:ARINc:MINGap:BITS <MinGapBits>

Sets the value for the minimum gap to be triggered on.

Suffix:
<t> 1..3

Parameters:
<MinGapBits> Range: 0 to 100
Increment: 1
*RST: 4
Default unit: bit

Manual operation: See "Timing: Min gap, Max gap" on page 687

TRIGger<t>:ARINc:MAXGap:SELect <MaxGapSelect>

Enables triggering when the maximum gap is out of range. You can set the maximum gap with: `TRIGger<t>:ARINc:MAXGap:BITS`.

Suffix:
<t> 1..3

Parameters:
<MaxGapSelect> OFF | ON
*RST: OFF

Manual operation: See "Timing: Min gap, Max gap" on page 687

TRIGger<t>:ARINc:MAXGap:BITS <MaxGapBits>

Sets the value for the maximum gap to be triggered on.

Suffix:
<t> 1..3

Parameters:
<MaxGapBits> Range: 0 to 1000
Increment: 1
*RST: 100
Default unit: bit

Manual operation: See "Timing: Min gap, Max gap" on page 687

TRIGger<t>:ARINc:SDI <SDI>

Sets the source/destination identifier (SDI) bits.

Suffix:
<t> 1..3

Parameters:
<SDI>

Manual operation: See "SDI / SSM" on page 691

TRIGger<t>:ARINc:SSM <SSM>

Sets the sign/status matrix (SSM) bits.

Suffix:
<t> 1..3

Parameters:
<SSM>

Manual operation: See "SDI / SSM" on page 691

26.18.11.3 Decode results

To load and acivate a label list, use:

- `BUS<b>:NEWList` on page 1835
- `BUS<b>:SYMBols` on page 1835

BUS<b>:ARINc:WCOunt? 2086
BUS<b>:ARINc:WORD<w>:BITRate? 2086
BUS<b>:ARINc:WORD<w>:DATA? 2087
BUS<b>:ARINc:WORD<w>:LABel? 2087
BUS<b>:ARINc:WORD<w>:PATTern? 2087
BUS<b>:ARINc:WORD<w>:SDI? 2088
BUS<b>:ARINc:WORD<w>:SSM? 2088
BUS<b>:ARINc:WORD<w>:STARt? 2088
BUS<b>:ARINc:WORD<w>:STATe? 2089
BUS<b>:ARINc:WORD<w>:STOP? 2089
BUS<b>:ARINc:WORD<w>:SYMBol? 2090

BUS<b>:ARINc:WCOunt?

Returns the number of decoded words.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:ARINc:WORD<w>:BITRate?

Retruns the value of the bit rate.

Suffix:
<b> 1..4

<w> *

Return values:
<FrameBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:ARINc:WORD<w>:DATA?

Returns the data of the specified word.

Suffix:
<b> 1..4

<w> *

Return values:
<FrameData> 19-bit data field of the word as an integer
Range: 0 to 524287
Increment: 1
*RST: 0

Example:
```
BUS:ARINc:WORD3:DATA?
<-- 148035
```

Usage: Query only

BUS<b>:ARINc:WORD<w>:LABel?

Returns the label of the specified word.

Suffix:
<b> 1..4

<w> *

Return values:
<FrameLabel> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:ARINc:WORD<w>:PATTern?

Returns all 32 bits of the specified word.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *

Return values:
<Data> Comma-separated list of 4 bytes in big endian order. The format of each byte is defined by `FORMat:BPATtern`.

Example:
```
BUS2:ARINc:WORD3:PATTern?
--> #H75,#H11,#H55,#H82
FORMat:BPATtern DEC
BUS2:ARINc:WORD3:PATTern?
--> 117,17,85,130
```

Usage: Query only

BUS<b>:ARINc:WORD<w>:SDI?

Returns the source/destination identifier (SDI) bits of the specified word.

Suffix:
<b> 1..4

<w> *

Return values:
<SDI> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:ARINc:WORD<w>:SSM?

Returns the sign/status matrix(SSM) bits of the specified word.

Suffix:
<b> 1..4

<w> *

Return values:
<SSM> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:ARINc:WORD<w>:STARt?

Returns the start time of the specified word.

Suffix:
<b> 1..4

<w> *

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:ARINc:WORD<w>:STATe?

Returns the overall state of the specified word.

Suffix:
<b> 1..4
Selects the serial bus.

<w> *
Selects the word.

Return values:
<FrameState> OK | CODE | GAP | PAR | INComplete | UNKNown
CODE: coding error occured.
GAP: timing gap error occured.
PAR: parity error occured.
INComplete: the sequence is not completely contained in the acquisition
UNKNown: unknown frame type
*RST: OK

Usage: Query only

BUS<b>:ARINc:WORD<w>:STOP?

Returns the end time of the specified word.

Suffix:
<b> 1..4

<w> *

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:ARINc:WORD<w>:SYMBol?

Returns the label name of the word ID.

Suffix:
<b> 1..4
<w> *

Return values:
<Translation>

Usage: Query only

26.18.11.4 Search settings

SEARch:TRIGger:ARINc:TYPE 2090
SEARch:TRIGger:ARINc:LABel:CONDition 2091
SEARch:TRIGger:ARINc:DATA:CONDition 2091
SEARch:TRIGger:ARINc:LABel:MIN 2091
SEARch:TRIGger:ARINc:DATA:MIN 2091
SEARch:TRIGger:ARINc:LABel:MAX 2091
SEARch:TRIGger:ARINc:DATA:MAX 2091
SEARch:TRIGger:ARINc:SDI 2092
SEARch:TRIGger:ARINc:SSM 2092
SEARch:TRIGger:ARINc:ERRor:CODing 2092
SEARch:TRIGger:ARINc:ERRor:PARity 2092
SEARch:TRIGger:ARINc:ERRor:TIMing 2093

SEARch:TRIGger:ARINc:TYPE <SearchName>,<Type>
SEARch:TRIGger:ARINc:TYPE? <SearchName>

Sets the search type.

Parameters:
<Type> STARt | STOP | LABel | ERRor
*RST: STARt

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 695

SEARch:TRIGger:ARINc:LABel:CONDition <SearchName>,<Label_Operator>
SEARch:TRIGger:ARINc:LABel:CONDition? <SearchName>
SEARch:TRIGger:ARINc:DATA:CONDition <SearchName>,<Data_Operator>
SEARch:TRIGger:ARINc:DATA:CONDition? <SearchName>

Set the condition for the label or data, respectively. You can define an exact value or a value range

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:ARINc:...:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range. with`TRIGger<t>:ARINc:LABel:MIN` and `TRIGger<t>:ARINc:LABel:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Data min, Data max" on page 695

SEARch:TRIGger:ARINc:LABel:MIN <SearchName>,<Label_Min>
SEARch:TRIGger:ARINc:LABel:MIN? <SearchName>
SEARch:TRIGger:ARINc:DATA:MIN <SearchName>,<Data_Min>
SEARch:TRIGger:ARINc:DATA:MIN? <SearchName>

Specifies a label or data bit pattern, or sets the the start value of a pattern range.

Parameters:

<Data_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:

<SearchName> String parameter

Manual operation: See "Data setup: Condition, Data min, Data max" on page 695

SEARch:TRIGger:ARINc:LABel:MAX <SearchName>,<Label_Max>
SEARch:TRIGger:ARINc:LABel:MAX? <SearchName>
SEARch:TRIGger:ARINc:DATA:MAX <SearchName>,<Data_Max>
SEARch:TRIGger:ARINc:DATA:MAX? <SearchName>

Set the end value of a label or data pattern if the condition is set to `INRange` or `OORange`.

Parameters:
<Data_Max> Numeric or string pattern, see `SEARch:TRIGger:ARINc:LABel:MIN`

Parameters for setting and query:
<SearchName>

Manual operation: See "Data setup: Condition, Data min, Data max" on page 695

SEARch:TRIGger:ARINc:SDI <SearchName>,<SDI>
SEARch:TRIGger:ARINc:SDI? <SearchName>

Sets the source/destination identifier (SDI) bits.

Parameters:
<SDI>

Parameters for setting and query:
<SearchName>

Manual operation: See "SDI / SSM setup: SDI, SSM" on page 695

SEARch:TRIGger:ARINc:SSM <SearchName>,<SSM>
SEARch:TRIGger:ARINc:SSM? <SearchName>

Sets the sign/status matrix (SSM) bits.

Parameters:
<SSM>

Parameters for setting and query:
<SearchName>

Manual operation: See "SDI / SSM setup: SDI, SSM" on page 695

SEARch:TRIGger:ARINc:ERRor:CODing <SearchName>,<Coding_Error>
SEARch:TRIGger:ARINc:ERRor:CODing? <SearchName>

Enables the search for coding errors.

Parameters:
<Coding_Error> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 696

SEARch:TRIGger:ARINc:ERRor:PARity <SearchName>,<Parity_Error>
SEARch:TRIGger:ARINc:ERRor:PARity? <SearchName>

Enables the search for parity errors.

Parameters:
<Parity_Error> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 696

SEARch:TRIGger:ARINc:ERRor:TIMing <SearchName>,<MinGapSelect>
SEARch:TRIGger:ARINc:ERRor:TIMing? <SearchName>

Enables the search for timing errors, when the minimum gap is out of range.

Parameters:
<MinGapSelect> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 696

26.18.11.5 Search results

The search on decoded ARINC 429 data returns the same results as the queries for decode results.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.11.3, "Decode results", on page 2086.

SEARch:RESult:ARINc:WORD<w>:LABel? 2093
SEARch:RESult:ARINc:WORD<w>:PATTern? 2094
SEARch:RESult:ARINc:WORD<w>:DATA? 2094
SEARch:RESult:ARINc:WORD<w>:SSM? 2094
SEARch:RESult:ARINc:WORD<w>:SYMBol? 2095
SEARch:RESult:ARINc:WCOunt? 2095
SEARch:RESult:ARINc:WORD<w>:STOP? 2095
SEARch:RESult:ARINc:WORD<w>:SDI? 2095
SEARch:RESult:ARINc:WORD<w>:STATe? 2096
SEARch:RESult:ARINc:WORD<w>:STARt? 2096

SEARch:RESult:ARINc:WORD<w>:LABel? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<Label> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:ARINc:WORD<w>:PATTern? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<DataValues>

Usage: Query only

SEARch:RESult:ARINc:WORD<w>:DATA? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameData> Range: 0 to 524287
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:ARINc:WORD<w>:SSM? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<SSM> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:ARINc:WORD<w>:SYMBol? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<Translation>

Usage: Query only

SEARch:RESult:ARINc:WCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:ARINc:WORD<w>:STOP? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:ARINc:WORD<w>:SDI? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<SDI> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:ARINc:WORD<w>:STATe? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameState> OK | CODE | GAP | PAR | INComplete | UNKNown
*RST: OK

Usage: Query only

SEARch:RESult:ARINc:WORD<w>:STARt? <SearchName>

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

26.18.12 Ethernet 10BASE-T and 100BASE-TX (option R&S RTP-K8)

- Configuration....2096
- Trigger....2099
- Decode results....2105
- Search settings....2110
- Search results....2116

26.18.12.1 Configuration

In all `BUS<b>:ETHernet` commands, the suffix <b> selects the serial bus.

BUS<b>:ETHernet:VARiant....2097
BUS<b>:ETHernet:SOURce....2097
BUS<b>:ETHernet:POLarity....2097
BUS<b>:ETHernet:THReshold:HIGH....2098
BUS<b>:ETHernet:THReshold:LOW....2098
BUS<b>:ETHernet:PRESet....2098

BUS<b>:ETHernet:VARiant <Variant>

Selects the Ethernet protocol variant and transmission speed.

Suffix:
<b> 1..4

Parameters:
<Variant> B10T | B100TX | B100tx

B10T
Ethernet protocol variant 10BASE-T (10 Mbit/s)

B100TX = B100tx
Ethernet protocol variant 100BASE-TX (100 Mbit/s)

*RST: B10T

Manual operation: See "Ethernet Variant" on page 698

BUS<b>:ETHernet:SOURce <SourceData>

Selects the source channel for the data signal.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Suffix:
<b> 1..4

Parameters:
<SourceData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

See Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Manual operation: See "Source" on page 699

BUS<b>:ETHernet:POLarity <Polarity>

Defines the polarity of the data signal. This setting is only available in 10BASE-T.

Suffix:
<b> 1..4

Parameters:
<Polarity> NORMal | INVert

NORMal
Normal (non-inverted) data signal polarity

INVert
Inverted data signal polarity
*RST: NORMal

Manual operation: See "Polarity" on page 699

BUS<b>:ETHernet:THReshold:HIGH <ThresholdUpper>

Sets the upper threshold value for the signal digitization. If the signal value is higher than the this threshold, the signal state is considered high.

Suffix:
<b> 1..4

Parameters:
<ThresholdUpper> Range: 0 to 10
Increment: 0.01
*RST: 0.5
Default unit: V

Manual operation: See "Thresholds" on page 699

BUS<b>:ETHernet:THReshold:LOW <ThresholdLower>

Sets the lower threshold value for the signal digitization. If the signal value is below this threshold, the signal state is considered low.

Suffix:
<b> 1..4

Parameters:
<ThresholdLower> Range: -10 to 0
Increment: 0.01
*RST: -0.5
Default unit: V

Manual operation: See "Thresholds" on page 699

BUS<b>:ETHernet:PRESet <ThresPreset>

Sets the thresholds to predefined or individually definable voltage levels.

Suffix:
<b> 1..4

Parameters:
<ThresPreset> T0 | T100 | TX0 | TX100 | MANual

T0
Sets the thresholds to the default values for 10BASE-T (0 meters): upper threshold to 1.25 V, lower threshold to -1.25 V

T100
Sets the thresholds to the default values for 10BASE-T (100 meters): upper threshold to 0.75 V, lower threshold to -0.75 V

TX0
Sets the thresholds to the default values for 100BASE-TX (0 meters): upper threshold to 0.5 V, lower threshold to -0.5 V

TX100
Sets the thresholds to the default values for 100BASE-TX (100 meters): upper threshold to 0.35 V, lower threshold to -0.35 V

MANual
Allows to set individual threshold voltage levels

*RST: T0

Manual operation: See "Thresholds" on page 699

26.18.12.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:ETHernet:TYPE 2099
TRIGger<t>:ETHernet:PATTern 2100
TRIGger<t>:ETHernet:ERRor:CRC 2100
TRIGger<t>:ETHernet:ERRor:LENGth 2100
TRIGger<t>:ETHernet:ERRor:PREamble 2101
TRIGger<t>:ETHernet:FRAMe:CCONdition 2101
TRIGger<t>:ETHernet:FRAMe:CMAX 2101
TRIGger<t>:ETHernet:FRAMe:CMIN 2102
TRIGger<t>:ETHernet:FRAMe:DCONdition 2102
TRIGger<t>:ETHernet:FRAMe:DMAX 2102
TRIGger<t>:ETHernet:FRAMe:DMIN 2103
TRIGger<t>:ETHernet:FRAMe:SCONdition 2103
TRIGger<t>:ETHernet:FRAMe:SMAX 2103
TRIGger<t>:ETHernet:FRAMe:SMIN 2103
TRIGger<t>:ETHernet:FRAMe:TCONdition 2104
TRIGger<t>:ETHernet:FRAMe:TMAX 2104
TRIGger<t>:ETHernet:FRAMe:TMIN 2104

TRIGger<t>:ETHernet:TYPE <Type>

Selects the type of frame to be triggered on.

Suffix:
<t> 1..3

Parameters:
<Type> STARt | PATTern | ADVFrame | ADVCerror

STARt
Selects to trigger for the start of frame: search for the preamble and set the trigger instant thereafter.

PATTern
Selects to trigger for a bit pattern (data) to be specified in `TRIGger<t>:ETHernet:PATTern` on page 2100.

ADVFrame
Sets the trigger to the advanced frame. You can further define the values of the frame.

ADVCerror
Sets the trigger to advanced error. You can further enable the error conditions you want to trigger on.

*RST: STARt

Manual operation: See "Type" on page 703

TRIGger<t>:ETHernet:PATTern <DataPattern>

Specifies the bit pattern (or data) that is to be triggered.

Suffix:
<t> 1..3

Parameters:
<DataPattern>

Manual operation: See "Data Pattern" on page 705

TRIGger<t>:ETHernet:ERRor:CRC <Error_CRC>

Enables the trigger on a mismatch of the cyclic redundancy check (CRC) value between the transmitting and receiving device.

Suffix:
<t> 1..3

Parameters:
<Error_CRC> OFF | ON

*RST: ON

Manual operation: See "Error" on page 706

TRIGger<t>:ETHernet:ERRor:LENGth <Error_Length>

Enables the trigger on an incorrect length of the sequence - when additional or missing bits are detected and the sequence of bits is not as expected.

Suffix:
<t> 1..3

Parameters:
<Error_Length> OFF | ON
*RST: ON

Manual operation: See "Error" on page 706

TRIGger<t>:ETHernet:ERRor:PREamble <Error_Preamble>

Enables the trigger on a frame with invalid preamble.

Suffix:
<t> 1..3

Parameters:
<Error_Preamble> OFF | ON
*RST: ON

Manual operation: See "Error" on page 706

TRIGger<t>:ETHernet:FRAMe:CCONdition <CRC_Operator>

Sets the operator to trigger on a specific frame check sequence value.

Suffix:
<t> 1..3

Parameters:
<CRC_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater Than, Greater than or equal. These conditions require a destination address to be set with `TRIGger<t>:ETHernet:FRAMe:CMIN`.

INRange | OORange
In range, Out of range. Set the minimum and maximum value of the range with `TRIGger<t>:ETHernet:FRAMe:CMIN` and `TRIGger<t>:ETHernet:FRAMe:CMAX`.

*RST: EQUal

Manual operation: See "Frame check" on page 706

TRIGger<t>:ETHernet:FRAMe:CMAX <CRC_PatternMax>

Sets the end value of the frame check sequence range, if `TRIGger<t>:ETHernet:FRAMe:CCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<CRC_PatternMax>

Manual operation: See "Frame check" on page 706

TRIGger<t>:ETHernet:FRAMe:CMIN <CRC_PatternMin>

Specifies a CRC pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<CRC_PatternMin>

Manual operation: See "Frame check" on page 706

TRIGger<t>:ETHernet:FRAMe:DCONdition <DestAddr_Operator>

Sets the destination address operator to trigger on a specific pattern or a range.

Suffix:
<t> 1..3

Parameters:
<DestAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater Than, Greater than or equal. These conditions require a destination address to be set with `TRIGger<t>:ETHernet:FRAMe:DMIN`.

INRange | OORange
In range, Out of range. Set the minimum and maximum value of the range with `TRIGger<t>:ETHernet:FRAMe:DMIN` and `TRIGger<t>:ETHernet:FRAMe:DMAX`.

*RST: EQUal

Manual operation: See "Destination Address" on page 705

TRIGger<t>:ETHernet:FRAMe:DMAX <DestAddr_PattMax>

Sets the end value of a destination address range, if `TRIGger<t>:ETHernet:FRAMe:DMAX` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<DestAddr_PattMax>

Manual operation: See "Destination Address" on page 705

TRIGger<t>:ETHernet:FRAMe:DMIN <DestAddr_PattMin>

Specifies a destination address pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<DestAddr_PattMin>

Manual operation: See "Destination Address" on page 705

TRIGger<t>:ETHernet:FRAMe:SCONdition <SrcAddr_Operator>

Sets source address operator to trigger on a specific pattern or a range.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater Than, Greater than or equal. These conditions require a destination address to be set with `TRIGger<t>:ETHernet:FRAMe:SMIN`.

INRange | OORange
In range, Out of range. Set the minimum and maximum value of the range with `TRIGger<t>:ETHernet:FRAMe:SMIN` and `TRIGger<t>:ETHernet:FRAMe:SMAX`.

*RST: EQUal

Manual operation: See "Source Address" on page 705

TRIGger<t>:ETHernet:FRAMe:SMAX <SrcAddr_PattMax>

Sets the end value of a range, if the data condition is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_PattMax>

Manual operation: See "Source Address" on page 705

TRIGger<t>:ETHernet:FRAMe:SMIN <SrcAddr_PattMin>

Specifies a source address pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_PattMin>

Manual operation: See "Source Address" on page 705

TRIGger<t>:ETHernet:FRAMe:TCONdition <Type_Operator>

Sets the type operator to trigger on a specific length/type value pattern or a range.

Suffix:
<t> 1..3

Parameters:
<Type_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater Than, Greater than or equal. These conditions require a destination address to be set with `TRIGger<t>:ETHernet:FRAMe:TMIN`.

INRange | OORange
In range, Out of range. Set the minimum and maximum value of the range with `TRIGger<t>:ETHernet:FRAMe:TMIN` and `TRIGger<t>:ETHernet:FRAMe:TMAX`.

*RST: EQUal

Manual operation: See "Length/ Type" on page 705

TRIGger<t>:ETHernet:FRAMe:TMAX <Type_PattMax>

Sets the end value of a length/type range, if `TRIGger<t>:ETHernet:FRAMe:TCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Type_PattMax>

Manual operation: See "Length/ Type" on page 705

TRIGger<t>:ETHernet:FRAMe:TMIN <Type_PattMin>

Specifies a length/type value, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Type_PattMin>

Manual operation: See "Length/ Type" on page 705

26.18.12.3 Decode results

In all BUS<b>:ETHernet:WORD<n> commands, the suffix <b> selects the serial bus and the suffix <w> selects the word number in the decode table.

As an example, a set of query commands for bus #1 and word #1 is shown in the following, together with examples for results of these queries:

- BUS1:ETH:WCOunt? !2
- BUS1:ETH:WORD1:STATe? !OK
- BUS1:ETH:WORD1:STARt? !-0.000135
- BUS1:ETH:WORD1:STOP? !-6.62e-5
- BUS1:ETH:WORD1:DEST? !FF:FF:FF:FF:FF:FF
- BUS1:ETH:WORD1:SRC? !0F:0E:0D:0C:0B:0A
- BUS1:ETH:WORD1:DATA? ![60]45003c3e6210...
- BUS1:ETH:WORD1:TYPE? !2048
- BUS1:ETH:WORD1:CRC? !-1821935433
- BUS1:ETH:WORD1:SSYM? !
- BUS1:ETH:WORD1:DSYM? !BroadCast
- BUS1:ETH:WORD1:BYTE1:VAL? !69
- BUS1:ETH:WORD1:BYTE2:VAL? !0

BUS<b>:ETHernet:WCOunt? 2105
BUS<b>:ETHernet:WORD<w>:FTYPe? 2106
BUS<b>:ETHernet:WORD<w>:STATe? 2106
BUS<b>:ETHernet:WORD<w>:STARt? 2106
BUS<b>:ETHernet:WORD<w>:STOP? 2107
BUS<b>:ETHernet:WORD<w>:DESTaddress? 2107
BUS<b>:ETHernet:WORD<w>:SRCaddress? 2107
BUS<b>:ETHernet:WORD<w>:TYPE? 2108
BUS<b>:ETHernet:WORD<w>:DATA? 2108
BUS<b>:ETHernet:WORD<w>:CRC? 2108
BUS<b>:ETHernet:WORD<w>:DSYMbol? 2109
BUS<b>:ETHernet:WORD<w>:SSYMbol? 2109
BUS<b>:ETHernet:WORD<w>:BITRate? 2109
BUS<b>:ETHernet:WORD<w>:BYTE<o>:VALue? 2109
BUS<b>:ETHernet:WORD<w>:NUMWords? 2110

BUS<b>:ETHernet:WCOunt?

Returns the frame count for the selected serial bus, i.e. the number of frames in the current acquisition. The result corresponds to the number of rows in the result table.

Suffix:
<b> 1..4

Return values:

<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:ETHernet:WORD<w>:FTYPe?

Returns the frame type of the selected word in the current acquisition.

Suffix:

<b> 1..4

<w> *

Return values:

<FrameType> MAC | IDLE | SLEep | EOS | UNKNown
*RST: MAC

Usage: Query only

BUS<b>:ETHernet:WORD<w>:STATe?

Returns the frame state of the selected word in the current acquisition.

Suffix:

<b> 1..4

<w> *

Return values:

<State> OK | ERR_PREAMBLE | ERR_LENGTH | UNCorrelated | INComplete

OK
No error detected

ERR_PREAMBLE
Error in the preamble of the selected word

ERR_SFD
Error in the start frame delimiter (SFD). The value of a correct SFD byte is 171. The SFD is transmitted LSB first.

ERR_LENGTH
Error in the number of bits in the selected word

*RST: OK

Usage: Query only

BUS<b>:ETHernet:WORD<w>:STARt?

Returns the frame start time of the selected word in the current acquisition.

Suffix:
<b> 1..4
<w> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
Default unit: s

Usage: Query only

BUS<b>:ETHernet:WORD<w>:STOP?

Returns the frame stop time of the selected word in the current acquisition.

Suffix:
<b> 1..4
<w> *

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
Default unit: s

Usage: Query only

BUS<b>:ETHernet:WORD<w>:DESTaddress?

Returns the destination address of the specified word.

Suffix:
<b> 1..4
<w> *

Return values:
<DestAddress> String parameter

Usage: Query only

BUS<b>:ETHernet:WORD<w>:SRCaddress?

Returns the source address of the specified word.

Suffix:
<b> 1..4
<w> *

Return values:
<SrcAddress> String parameter

Usage: Query only

BUS<b>:ETHernet:WORD<w>:TYPE?

The sub-protocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of the TYPE field is ambivalent.

Suffix:
<b> 1..4

<w> *

Return values:
<Type> Returns the word type (specific for the sub-protocol), or the length of the selected word.

Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:ETHernet:WORD<w>:DATA?

Returns the number of word bytes in brackets [.] followed by the first six word bytes of data in hexadecimal format.

Use `BUS<b>:ETHernet:WORD<w>:BYTE<o>:VALue?` to access the word bytes.

Suffix:
<b> 1..4

<w> *

Return values:
<Data> String parameter

Example:
```
BUS:ETHernet:WORD3:DATA?
<-- '[60]FF00FFFF1234'
```

Usage: Query only

BUS<b>:ETHernet:WORD<w>:CRC?

Returns the Cyclic Redundancy Code (CRC, or frame check) checksum of the selected word.

Suffix:
<b> 1..4

<w> *

Return values:
<CRC> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:ETHernet:WORD<w>:DSYMbol?

Returns the symbolic label (or translation) of the destination address of the specified word, if the label list is enabled.

Suffix:
<b> 1..4
<w> *

Return values:
<DestTranslation> String parameter

Usage: Query only

BUS<b>:ETHernet:WORD<w>:SSYMbol?

Returns the symbolic label (or translation) of the source address of the specified word, if the label list is enabled.

Suffix:
<b> 1..4
<w> *

Return values:
<SrcTranslation> String parameter

Usage: Query only

BUS<b>:ETHernet:WORD<w>:BITRate?

Returns the primary bit rate.

Suffix:
<b> 1..4
<w> *

Return values:
<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:ETHernet:WORD<w>:BYTE<o>:VALue?

BYTE returns all data of up to 1982 bytes (not just the first 5 or 6 bytes). This is also visible in the data table under "Show details".

Suffix:
<b> 1..4
<w> *

<o> *
Selects the byte number.

Return values:
<FrameByteValue> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:ETHernet:WORD<w>:NUMWords?

Returns the number of words in the selected frame. The result corresponds to the "Number of Words" column in the results table.

Suffix:
<b> 1..4

<w> *
Frame index

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

26.18.12.4 Search settings

SEARch:TRIGger:ETHernet:TYPE 2110
SEARch:TRIGger:ETHernet:FRAMe:DCONdition 2111
SEARch:TRIGger:ETHernet:FRAMe:DMIN 2111
SEARch:TRIGger:ETHernet:FRAMe:DMAX 2112
SEARch:TRIGger:ETHernet:FRAMe:SCONdition 2112
SEARch:TRIGger:ETHernet:FRAMe:SMIN 2112
SEARch:TRIGger:ETHernet:FRAMe:SMAX 2113
SEARch:TRIGger:ETHernet:FRAMe:TCONdition 2113
SEARch:TRIGger:ETHernet:FRAMe:TMIN 2113
SEARch:TRIGger:ETHernet:FRAMe:TMAX 2114
SEARch:TRIGger:ETHernet:FRAMe:CCONdition 2114
SEARch:TRIGger:ETHernet:FRAMe:CMIN 2115
SEARch:TRIGger:ETHernet:FRAMe:CMAX 2115
SEARch:TRIGger:ETHernet:ERRor:PREamble 2115
SEARch:TRIGger:ETHernet:ERRor:LENGth 2115

SEARch:TRIGger:ETHernet:TYPE <SearchName>,<Type>
SEARch:TRIGger:ETHernet:TYPE? <SearchName>

Selects, if it searched on a MAC frame or on an error.

Parameters:
<Type> FRAMe | ERRor
*RST: FRAMe

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 709

SEARch:TRIGger:ETHernet:FRAMe:DCONdition
<SearchName>,<DestAddr_Operator>
SEARch:TRIGger:ETHernet:FRAMe:DCONdition? <SearchName>

Defines the operator to search a specific destination address within a frame.

Parameters:
<DestAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater Than, Greater than or equal. These conditions require a destination address to be set with `SEARch:TRIGger:ETHernet:FRAMe:DMIN`.

INRange | OORange
In range, Out of range. Set the minimum and maximum value of the range with `SEARch:TRIGger:ETHernet:FRAMe:DMIN` and `SEARch:TRIGger:ETHernet:FRAMe:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Destination address" on page 709

SEARch:TRIGger:ETHernet:FRAMe:DMIN <SearchName>,<DestAddr_PattMin>
SEARch:TRIGger:ETHernet:FRAMe:DMIN? <SearchName>

Defines a destination address, or sets the start value of a destination address range.

Parameters:
<DestAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Destination address" on page 709

SEARch:TRIGger:ETHernet:FRAMe:DMAX <SearchName>,<DestAddr_PattMax>
SEARch:TRIGger:ETHernet:FRAMe:DMAX? <SearchName>

Sets the end value of a destination address range, if `SEARch:TRIGger:ETHernet:FRAMe:DCONdition` is set to `INRange` or `OORange`.

Parameters:
<DestAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Destination address" on page 709

SEARch:TRIGger:ETHernet:FRAMe:SCONdition
<SearchName>,<SrcAddr_Operator>
SEARch:TRIGger:ETHernet:FRAMe:SCONdition? <SearchName>

Defines the operator to search a specific source address within a frame.

Parameters:
<SrcAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater Than, Greater than or equal. These conditions require a destination address to be set with `SEARch:TRIGger:ETHernet:FRAMe:SMIN`.

INRange | OORange
In range, Out of range. Set the minimum and maximum value of the range with `SEARch:TRIGger:ETHernet:FRAMe:SMIN` and `SEARch:TRIGger:ETHernet:FRAMe:SMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Source address" on page 710

SEARch:TRIGger:ETHernet:FRAMe:SMIN <SearchName>,<SrcAddr_PattMin>
SEARch:TRIGger:ETHernet:FRAMe:SMIN? <SearchName>

Defines a source address, or sets the start value of a source address range.

Parameters:
<SrcAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Source address" on page 710

SEARch:TRIGger:ETHernet:FRAMe:SMAX <SearchName>,<SrcAddr_PattMax>
SEARch:TRIGger:ETHernet:FRAMe:SMAX? <SearchName>

Sets the end value of a source address range, if `SEARch:TRIGger:ETHernet:FRAMe:SCONdition` is set to `INRange` or `OORange`.

Parameters:
<SrcAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Source address" on page 710

SEARch:TRIGger:ETHernet:FRAMe:TCONdition <SearchName>,<Type_Operator>
SEARch:TRIGger:ETHernet:FRAMe:TCONdition? <SearchName>

Defines the operator to search for a specific frame length or type.

Parameters:
<Type_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater Than, Greater than or equal. These conditions require a pattern to be set with `SEARch:TRIGger:ETHernet:FRAMe:TMIN`.

INRange | OORange
In range, Out of range. Set the minimum and maximum value of the range with `SEARch:TRIGger:ETHernet:FRAMe:TMIN` and `SEARch:TRIGger:ETHernet:FRAMe:TMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Length/Type" on page 710

SEARch:TRIGger:ETHernet:FRAMe:TMIN <SearchName>,<Type_PattMin>
SEARch:TRIGger:ETHernet:FRAMe:TMIN? <SearchName>

Defines a frame length/type, or sets the start value for a range of frame lengths/types.

Parameters:
<Type_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Length/Type" on page 710

SEARch:TRIGger:ETHernet:FRAMe:TMAX <SearchName>,<Type_PattMax>
SEARch:TRIGger:ETHernet:FRAMe:TMAX? <SearchName>

Sets the end value of a range of frame lengths/types, if `SEARch:TRIGger:ETHernet:FRAMe:TCONdition` is set to `INRange` or `OORange`.

Parameters:
<Type_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Length/Type" on page 710

SEARch:TRIGger:ETHernet:FRAMe:CCONdition <SearchName>,<CRC_Operator>
SEARch:TRIGger:ETHernet:FRAMe:CCONdition? <SearchName>

Defines the operator to search for a Cyclic Redundancy Code (CRC, or frame check) error condition within a frame.

Parameters:
<CRC_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater Than, Greater than or equal. These conditions require a CRC pattern to be set with `SEARch:TRIGger:ETHernet:FRAMe:CMIN`.

INRange | OORange
In range, Out of range. Set the minimum and maximum value of the range with `SEARch:TRIGger:ETHernet:FRAMe:CMIN` and `SEARch:TRIGger:ETHernet:FRAMe:CMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Frame check" on page 710

SEARch:TRIGger:ETHernet:FRAMe:CMIN <SearchName>,<CRC_PatternMin>
SEARch:TRIGger:ETHernet:FRAMe:CMIN? <SearchName>

Defines a CRC error condition pattern, or sets the start value of such a pattern.

Parameters:
<CRC_PatternMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Frame check" on page 710

SEARch:TRIGger:ETHernet:FRAMe:CMAX <SearchName>,<CRC_PatternMax>
SEARch:TRIGger:ETHernet:FRAMe:CMAX? <SearchName>

Sets the end value of a CRC error condition pattern, if `SEARch:TRIGger:ETHernet:FRAMe:CCONdition` is set to `INRange` or `OORange`.

Parameters:
<CRC_PatternMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Frame check" on page 710

SEARch:TRIGger:ETHernet:ERRor:PREamble <SearchName>,<Error_Preamble>
SEARch:TRIGger:ETHernet:ERRor:PREamble? <SearchName>

Defines, whether a search for any preamble error shall be activated or not.

Parameters:
<Error_Preamble> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Preamble Error" on page 710

SEARch:TRIGger:ETHernet:ERRor:LENGth <SearchName>,<Error_Length>
SEARch:TRIGger:ETHernet:ERRor:LENGth? <SearchName>

Defines, whether a search for any word length error (too few or too many bits per word) shall be activated or not.

Parameters:
<Error_Length> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Length Error" on page 710

26.18.12.5 Search results

To show the results on the screen, use the following commands:

- BUS<b>:RESult on page 1834

In all SEARch:RESult:ETHernet:WORD<m> commands, the suffix <m> selects the word number in the list of search results.

SEARch:RESult:ETHernet:WCOunt? 2116
SEARch:RESult:ETHernet:WORD<w>:STATe? 2116
SEARch:RESult:ETHernet:WORD<w>:STARt? 2117
SEARch:RESult:ETHernet:WORD<w>:STOP? 2117
SEARch:RESult:ETHernet:WORD<w>:DESTaddress? 2118
SEARch:RESult:ETHernet:WORD<w>:SRCaddress? 2118
SEARch:RESult:ETHernet:WORD<w>:TYPE? 2118
SEARch:RESult:ETHernet:WORD<w>:FTYPe? 2118
SEARch:RESult:ETHernet:WORD<w>:DATA? 2119
SEARch:RESult:ETHernet:WORD<w>:CRC? 2119
SEARch:RESult:ETHernet:WORD<w>:DSYMbol? 2119
SEARch:RESult:ETHernet:WORD<w>:SSYMbol? 2120
SEARch:RESult:ETHernet:WORD<w>:BYTE<n>:VALue? 2120

SEARch:RESult:ETHernet:WCOunt? <SearchName>

Returns the number of decoded words within the search result.

Query parameters:
<SearchName> String parameter

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:STATe? <SearchName>

Returns the frame state of the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<State> OK | ERR_PREAMBLE | ERR_LENGTH

OK
No error detected

ERR_PREAMBLE
Error in the preamble of the selected word

ERR_SFD
Error in the start frame delimiter (SFD). The value of a correct SFD byte is 171. The SFD is transmitted LSB first.

ERR_LENGTH
Error in the number of bits in the selected word

*RST: OK

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:STARt? <SearchName>

Returns the frame start time of the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:STOP? <SearchName>

Returns the frame stop time of the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:DESTaddress? <SearchName>

Returns the destination address of the specified word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<DestAddr_str> String parameter

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:SRCaddress? <SearchName>

Returns the source address of the specified word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<SrcAddr_str> String parameter

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:TYPE? <SearchName>

The sub-protocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of the TYPE field is ambivalent. The query either returns the word type (specific for the sub-protocol), or the length of the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<Type> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:FTYPe? <SearchName>

Returns the frame type of the specified frame.

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<FrameType> MAC | IDLE | SLEep | EOS | UNKNown
*RST: MAC

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:DATA? <SearchName>

Returns the data bytes of the specified word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<Data> String parameter

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:CRC? <SearchName>

Returns the Cyclic Redundancy Code (CRC, or frame check) checksum of the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<CRC> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:DSYMbol? <SearchName>

Returns the symbolic label (or translation) of the destination address of the specified word within the search result, if the label list is enabled.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<DestTranslation> String parameter

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:SSYMbol? <SearchName>

Returns the symbolic label (or translation) of the source address of the specified word within the search result, if the label list is enabled.

Suffix:
<w> *

Query parameters:
<SearchName> String parameter

Return values:
<SrcTranslation> String parameter

Usage: Query only

SEARch:RESult:ETHernet:WORD<w>:BYTE<n>:VALue? <SearchName>

BYTE returns all data of up to 1982 bytes (not just the first 5 or 6 bytes). This is also visible in the data table under "Show details".

Suffix:
<w> *

<n> *
Selects the byte number.

Query parameters:
<SearchName> String parameter

Return values:
<FrameByteValue> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

26.18.13 10BASE-T1S (option R&S RTP-K56)

- Configuration....2121
- Trigger....2122
- Decode results....2126
- 10BASE-T1S search settings....2134
- 10BASE-T1S search results....2139

26.18.13.1 Configuration

BUS<b>:TNOS:SOURce 2121
BUS<b>:TNOS:THReshold:LOWer 2121
BUS<b>:TNOS:THReshold:UPPer 2121
BUS<b>:TNOS:THReshold:HYSTeresis 2122

BUS<b>:TNOS:SOURce <Source>

Sets the source channel to which the selected data line is connected. Only analog channels can be used, digital channels are not supported.

Suffix:
<b> 1..4

Parameters:
<Source> C1 | C2 | C3 | C4 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "SCL" on page 714

BUS<b>:TNOS:THReshold:LOWer <ThresholdLower>

Sets a lower threshold.

Suffix:
<b> 1..4

Parameters:
<ThresholdLower> Range: -3 to 3
Increment: 1E-3
*RST: -0.25
Default unit: V

Manual operation: See "Lower thresholds" on page 714

BUS<b>:TNOS:THReshold:UPPer <ThresholdUpper>

Sets an upper threshold.

Suffix:
<b> 1..4

Parameters:
<ThresholdUpper> Range: -3 to 3
Increment: 1E-3
*RST: 0.25
Default unit: V

Manual operation: See "Upper threshold" on page 714

BUS<b>:TNOS:THReshold:HYSTeresis <Hysteresis>

Sets a value for the hysteresis.

Suffix:
<b> 1..4

Parameters:
<Hysteresis> Range: 0 to 3
Increment: 1E-3
*RST: 0.05
Default unit: V

Manual operation: See "Hysteresis" on page 714

26.18.13.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:TNOS:CHKall ... 2123
TRIGger<t>:TNOS:CLR ... 2123
TRIGger<t>:TNOS:FRENable ... 2123
TRIGger<t>:TNOS:FRAMe<fr>:ENABle ... 2123
TRIGger<t>:TNOS:BIT ... 2123
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:BIT ... 2123
TRIGger<t>:TNOS:DMAX ... 2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DMAX ... 2124
TRIGger<t>:TNOS:DMIN ... 2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DMIN ... 2124
TRIGger<t>:TNOS:DOPerator ... 2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DOPerator ... 2124
TRIGger<t>:TNOS:FIENable ... 2125
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:ENABle ... 2125
TRIGger<t>:TNOS:IMAX ... 2125
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IMAX ... 2125
TRIGger<t>:TNOS:IMIN ... 2125
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IMIN ... 2125
TRIGger<t>:TNOS:IOPerator ... 2126
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IOPerator ... 2126
TRIGger<t>:TNOS:ERENable ... 2126
TRIGger<t>:TNOS:ERRor<n>:ENABle ... 2126

TRIGger<t>:TNOS:CHKall

Enables the software trigger for all available frame types.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 717

TRIGger<t>:TNOS:CLR

Disables the software trigger for all available frame types.

Suffix:
<t> 1..3

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 717

TRIGger<t>:TNOS:FRENable <Frame>,<Enabler>
TRIGger<t>:TNOS:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<t> 1..3

<fr> *

Parameters:
<Enable> OFF | ON

*RST: OFF

Manual operation: See "Frame type" on page 717

TRIGger<t>:TNOS:BIT <Frame>,<Field>,<Bit>
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<BitState> ONE | ZERO | DC
*RST: DC

Manual operation: See "Set details" on page 717

TRIGger<t>:TNOS:DMAX <Frame>,<Field>,<Data>
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<Data_Max> List of comma-separated values.

Manual operation: See "Set details" on page 717

TRIGger<t>:TNOS:DMIN <Frame>,<Field>,<Data>
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the trigger.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<Data_Min> List of comma-separated values.

Manual operation: See "Set details" on page 717

TRIGger<t>:TNOS:DOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the trigger in the selected field of the selected frame.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Manual operation: See "Set details" on page 717

TRIGger<t>:TNOS:FIENable <Frame>,<Field>,<Enabler>
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Manual operation: See "Set details" on page 717

TRIGger<t>:TNOS:IMAX <Frame>,<Field>,<Data>
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<t> 1..3
<fr> *
<fl> *

Parameters:
<Index_Max> Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Manual operation: See "Set details" on page 717

TRIGger<t>:TNOS:IMIN <Frame>,<Field>,<Data>
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the trigger.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:

<Index_Min> Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Manual operation: See "Set details" on page 717

TRIGger<t>:TNOS:IOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the trigger.

Suffix:

<t> 1..3

<fr> *

<fl> *

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Manual operation: See "Set details" on page 717

TRIGger<t>:TNOS:ERENable <ErrorName>,<Enabler>
TRIGger<t>:TNOS:ERRor<n>:ENABle <Enable>

Enables triggering for selected protocol error types.

Suffix:

<t> 1..3

<n> *

Parameters:

<Enable> OFF | ON
*RST: ON

Manual operation: See "Error type" on page 719

26.18.13.3 Decode results

To load and acivate a label list, use:

- `BUS<b>:NEWList` on page 1835
- `BUS<b>:SYMBols` on page 1835

BUS<b>:TNOS:FCOunt? 2127
BUS<b>:TNOS:FRAMe<fr>:FLDCount? 2127
BUS<b>:TNOS:FRAMe<fr>:BITRate? 2128

BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:FVALue? 2128
BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:LABel? 2128
BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:STATe? 2128
BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:VALue? 2129
BUS<b>:TNOS:FRAMe<fr>:CRC? 2129
BUS<b>:TNOS:FRAMe<fr>:DTADdress? 2130
BUS<b>:TNOS:FRAMe<fr>:DTSYmbol? 2130
BUS<b>:TNOS:FRAMe<fr>:FCRC? 2130
BUS<b>:TNOS:FRAMe<fr>:FDATa? 2130
BUS<b>:TNOS:FRAMe<fr>:FDTaddress? 2131
BUS<b>:TNOS:FRAMe<fr>:FSRaddress? 2131
BUS<b>:TNOS:FRAMe<fr>:FTPLength? 2131
BUS<b>:TNOS:FRAMe<fr>:SRADdress? 2131
BUS<b>:TNOS:FRAMe<fr>:SRSYmbol? 2132
BUS<b>:TNOS:FRAMe<fr>:STARt? 2132
BUS<b>:TNOS:FRAMe<fr>:STATus? 2132
BUS<b>:TNOS:FRAMe<fr>:STOP? 2133
BUS<b>:TNOS:FRAMe<fr>:TPLength? 2133
BUS<b>:TNOS:FRAMe<fr>:TYPE? 2134

BUS<b>:TNOS:FCOunt?

Returns the number of decoded frames for the 10BASE-T1S protocol analysis.

Suffix:
<b> 1..4

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<b> 1..4

<fr> *

Return values:
<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:
<FormattedValue>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:
<Label>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field in the specified frame.

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:

<State> OK | EPRMble | ESFD | EESD | ECRC | ELEN | INComplete

OK
The field has no error, it is valid.

EPRMble
Preamble error, the hex value of the preamble field is different from 0x55555555555555 (56 alternating 0's and 1's).

ESFD
SFD error, the hex value of the SFD field is different from 0xD5

EESD
ESD error, the value of the ESD field does not correspond to the symbol pair "ESD, ESDOK"

ECRC
CRC error, the value of the FCS field does not match the calculated CRC.

ELEN
Length error, the number of bits in the specified field is higher or lower than expected.

INComplete
The frame is incomplete

*RST: OK

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:

<b> 1..4

<fr> *

<fl> *

Return values:

<Value> Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:CRC?

Returns the CRC for the specified frame.

Suffix:

<b> 1..4

<fr> *

Return values:
<CRC> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:DTADdress?

Returns the destination address for the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<DestAddress> Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:DTSYmbol?

Returns the destination symbol for the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<DestSymbNme>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FCRC?

Returns the formatted CRC for the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FormattedCRC>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FDATa?

Returns the formatted data for the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FormattedData>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FDTaddress?

Returns the formatted destination address of the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FormattedDestAddr>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FSRaddress?

Returns the formatted SRC address for the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FormattedSrcAddr>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:FTPLength?

Returns the formatted type length for the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FormattedTypLenth>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:SRADdress?

Returns the source address for the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<SourceAddress> Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:SRSYmbol?

Returns the frame of the source symbol.

Suffix:
<b> 1..4

<fr> *

Return values:
<SrcSymbNme>

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:STATus?

Returns the state of the frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameState> OK | EPRMble | ESFD | EESD | ECRC | ELEN | INComplete

OK
The frame has no error, it is valid.

EPRMble
Preamble error, the hex value of the preamble field is different from 0x55555555555555 (56 alternating 0's and 1's).

ESFD
SFD error, the hex value of the SFD field is different from 0xD5.

EESD
ESD error, the value of the ESD field does not correspond to the symbol pair "ESD, ESDOK"

ECRC
CRC error, the value of the FCS field does not match the calculated CRC.

ELEN
Length error, the number of bits in the specified frame is higher or lower than expected.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:TPLength?

Returns the type length for the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<TypeLenth> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TNOS:FRAMe<fr>:TYPE?

Returns the type of the frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameType> MAC | COMMit | BEACon | UNKN

MAC
Media access control frame for data transmission

COMMit
Commit frame

BEACon
Beacon frame

UNKN
Unknown frame

*RST: MAC

Usage: Query only

26.18.13.4 10BASE-T1S search settings

In search setup commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name. The commands are similar to I3C trigger commands.

SEARch:TRIGger:TNOS:CHKall....2135
SEARch:TRIGger:TNOS:CLR....2135
SEARch:TRIGger:TNOS:FRENable....2135
SEARch:TRIGger:TNOS:FRAMe<fr>:ENABle....2135
SEARch:TRIGger:TNOS:DMAX....2135
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMAX....2135
SEARch:TRIGger:TNOS:DMIN....2136
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMIN....2136
SEARch:TRIGger:TNOS:DOPerator....2136
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DOPerator....2136
SEARch:TRIGger:TNOS:IMAX....2137
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMAX....2137
SEARch:TRIGger:TNOS:IMIN....2137
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMIN....2137
SEARch:TRIGger:TNOS:IOPerator....2137
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IOPerator....2137
SEARch:TRIGger:TNOS:BIT....2138
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:BIT....2138
SEARch:TRIGger:TNOS:FIENable....2138
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:ENABle....2138
SEARch:TRIGger:TNOS:ERENable....2139
SEARch:TRIGger:TNOS:ERRor<m>:ENABle....2139

SEARch:TRIGger:TNOS:CHKall <SearchName>

Enables the search for all available frame types.

Setting parameters:
<SearchName>

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 723

SEARch:TRIGger:TNOS:CLR <SearchName>

Disables the search for all available frames and error types.

Setting parameters:
<SearchName>

Usage: Event
Asynchronous command

Manual operation: See "Select all, Unselect all" on page 723

SEARch:TRIGger:TNOS:FRENable <SearchName>,<Frame>,<Enabler>
SEARch:TRIGger:TNOS:FRAMe<fr>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:TNOS:FRAMe<fr>:ENABle? <SearchName>

Enables searching on 10BASE-T1S frames. Only the frames that match the selected search conditions are displayed.

Suffix:
<fr> *

Parameters:
<Enable> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

SEARch:TRIGger:TNOS:DMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMAX? <SearchName>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Max> List of comma-separated values.

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 723

SEARch:TRIGger:TNOS:DMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMIN? <SearchName>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Min> List of comma-separated values.

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 723

SEARch:TRIGger:TNOS:DOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DOPerator
<SearchName>,<Data_Operator>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DOPerator? <SearchName>

Sets the operator for the data pattern to be searched in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal, In range, Out of range.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 723

SEARch:TRIGger:TNOS:IMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMAX <SearchName>,<Index_Max>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMAX? <SearchName>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Max> Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 723

SEARch:TRIGger:TNOS:IMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMIN <SearchName>,<Index_Min>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMIN? <SearchName>

Specifies the index, or sets the start value of an index range.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Min> Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 723

SEARch:TRIGger:TNOS:IOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IOPerator
<SearchName>,<Index_Operator>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IOPerator? <SearchName>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 723

SEARch:TRIGger:TNOS:BIT <SearchName>,<Frame>,<Field>,<Bit>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:BIT <SearchName>,<BitState>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:BIT? <SearchName>

Sets the bit state of a field to be searched that only consists of one bit.

Suffix:
<fr> *

<fl> *

Parameters:
<BitState> ONE | ZERO | DC
*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 723

SEARch:TRIGger:TNOS:FIENable <SearchName>,<Frame>,<Field>,<Enabler>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame type" on page 723

SEARch:TRIGger:TNOS:ERENable <SearchName>,<ErrorName>,<Enabler>
SEARch:TRIGger:TNOS:ERRor<m>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:TNOS:ERRor<m>:ENABle? <SearchName>

Enables or disables the checking condition for the selected error type to be searched.

Suffix:
<m> *

Parameters:
<Enable> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Error type" on page 725

26.18.13.5 10BASE-T1S search results

The search on decoded 10BASE-T1S data returns the same results as the queries for decode results.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.13.3, "Decode results", on page 2126.

SEARch:RESult:TNOS:FCOunt? 2140
SEARch:RESult:TNOS:FRAMe<fr>:FLDCount? 2140
SEARch:RESult:TNOS:FRAMe<fr>:BITRate? 2140
SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:FVALue? 2140
SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:LABel? 2141
SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:STATe? 2141
SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:VALue? 2141
SEARch:RESult:TNOS:FRAMe<fr>:CRC? 2142
SEARch:RESult:TNOS:FRAMe<fr>:DTADdress? 2142
SEARch:RESult:TNOS:FRAMe<fr>:DTSYmbol? 2142
SEARch:RESult:TNOS:FRAMe<fr>:FCRC? 2142
SEARch:RESult:TNOS:FRAMe<fr>:FDATa? 2143
SEARch:RESult:TNOS:FRAMe<fr>:FDTaddress? 2143
SEARch:RESult:TNOS:FRAMe<fr>:FSRaddress? 2143
SEARch:RESult:TNOS:FRAMe<fr>:FTPLength? 2143
SEARch:RESult:TNOS:FRAMe<fr>:SRADdress? 2144
SEARch:RESult:TNOS:FRAMe<fr>:SRSYmbol? 2144
SEARch:RESult:TNOS:FRAMe<fr>:STARt? 2144
SEARch:RESult:TNOS:FRAMe<fr>:STATus? 2144
SEARch:RESult:TNOS:FRAMe<fr>:STOP? 2145
SEARch:RESult:TNOS:FRAMe<fr>:TPLength? 2145
SEARch:RESult:TNOS:FRAMe<fr>:TYPE? 2145

SEARch:RESult:TNOS:FCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FLDCount? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:BITRate? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:FVALue? <SearchName>

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<FormattedValue>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:LABel? <SearchName>

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Label>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:STATe? <SearchName>

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<State> OK | EPRMble | ESFD | EESD | ECRC | ELEN | INComplete
*RST: OK

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:VALue? <SearchName>

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:CRC? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<CRC> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:DTADdress? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DestAddress> Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:DTSYmbol? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DestSymbNme>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FCRC? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormattedCRC>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FDATa? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormattedData>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FDTaddress? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormattedDestAddr>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FSRaddress? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormattedSrcAddr>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:FTPLength? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FormattedTypLenth>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:SRADdress? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SourceAddress> Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:SRSYmbol? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SrcSymbNme>

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:STARt? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:STATus? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameState> OK | EPRMble | ESFD | EESD | ECRC | ELEN | INComplete
*RST: OK

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:STOP? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:TPLength? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<TypeLenth> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TNOS:FRAMe<fr>:TYPE? <SearchName>

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> MAC | COMMit | BEACon | UNKN
*RST: MAC

Usage: Query only

26.18.14 Ethernet 100BASE-T1 (option R&S RTP-K57)

- Configuration....2146
- Trigger....2149
- Decode results....2157
- Search settings....2163
- Search results....2172

26.18.14.1 Configuration

In all `BUS<b>:HBTO` commands, the suffix <b> selects the serial bus.

BUS<b>:HBTO:ATTN....2146
BUS<b>:HBTO:FDAM....2146
BUS<b>:HBTO:FDAP....2147
BUS<b>:HBTO:FDIF....2147
BUS<b>:HBTO:FTYP....2147
BUS<b>:HBTO:RDAM....2148
BUS<b>:HBTO:RDAP....2148
BUS<b>:HBTO:RDIF....2148
BUS<b>:HBTO:RTYP....2148
BUS<b>:HBTO:POLarity....2149
BUS<b>:HBTO:MODE....2149

BUS<b>:HBTO:ATTN <Attenuation>

Sets the attenuation factor. It is used to de-amplify the reverse signal before subtracting it from the forward signal.

Suffix:
<b> 1..4

Parameters:
<Attenuation>
Range: -100 to 0
Increment: 0.1
*RST: -26
Default unit: dB

Manual operation: See "Reverse attenuation" on page 729

BUS<b>:HBTO:FDAM <SourceDAminus>

Selects the DA- source of the provided forward single ended signal, if `BUS<b>:HBTO:FTYP` is set to `SINGle`.

Suffix:
<b> 1..4

Parameters:
<SourceDAminus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C2W1

Manual operation: See "Forward" on page 728

BUS<b>:HBTO:FDAP <SourceDAplus>

Selects the DA+ source of the provided forward single ended signal, if `BUS<b>:HBTO:FTYP` is set to `SINGle`.

Suffix:
<b> 1..4

Parameters:
<SourceDAplus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Manual operation: See "Forward" on page 728

BUS<b>:HBTO:FDIF <SrcDiff>

Sets the source of the provided forward differential signal, if `BUS<b>:HBTO:FTYP` is set to `DIFFerential`.

Suffix:
<b> 1..4

Parameters:
<SrcDiff> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Manual operation: See "Forward" on page 728

BUS<b>:HBTO:FTYP <SignalType>

Sets the type of forward signal measurement.

Suffix:
<b> 1..4

Parameters:
<SignalType> DIFFerential | SINGle
*RST: DIFFerential

Manual operation: See "Forward" on page 728

BUS<b>:HBTO:RDAM <SrcRevDAminus>

Selects the DA- source of the provided reversed single ended signal, if `BUS<b>:HBTO:RTYP` is set to `SINGle`.

Suffix:
<b> 1..4

Parameters:
<SrcRevDAminus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Reverse" on page 728

BUS<b>:HBTO:RDAP <SrcRevDAplus>

Selects the DA+ source of the provided reversed single ended signal, if `BUS<b>:HBTO:RTYP` is set to `SINGle`.

Suffix:
<b> 1..4

Parameters:
<SrcRevDAplus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Reverse" on page 728

BUS<b>:HBTO:RDIF <SrcRevDiff>

Sets the source of the provided reversed differential signal, if `BUS<b>:HBTO:RTYP` is set to `DIFFerential`.

Suffix:
<b> 1..4

Parameters:
<SrcRevDiff> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Reverse" on page 728

BUS<b>:HBTO:RTYP <SignalRevType>

Sets the type of reverse signal measurement.

Suffix:
<b> 1..4

Parameters:
<SignalRevType> DISabled | DIFFerential | SINGle
*RST: DISabled

Manual operation: See "Reverse" on page 728

BUS<b>:HBTO:POLarity <Polarity>

Selects the polarity of the data signal.

Suffix:
<b> 1..4

Parameters:
<Polarity> NORMal | INVert
*RST: NORMal

Manual operation: See "Polarity" on page 729

BUS<b>:HBTO:MODE <Mode>

Selects the direction of the full-duplex signal you want to look at.

Suffix:
<b> 1..4

Parameters:
<Mode> MASTer | SLAVe | AUTO
*RST: AUTO

Manual operation: See "Operation mode" on page 729

26.18.14.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:HBTO:TYPE....2150
TRIGger<t>:HBTO:DADDress:CONDition....2150
TRIGger<t>:HBTO:DADDress:MIN....2151
TRIGger<t>:HBTO:DADDress:MAX....2151
TRIGger<t>:HBTO:SADDress:CONDition....2151
TRIGger<t>:HBTO:SADDress:MIN....2152
TRIGger<t>:HBTO:SADDress:MAX....2152
TRIGger<t>:HBTO:LENGth:CONDition....2152
TRIGger<t>:HBTO:LENGth:MIN....2153
TRIGger<t>:HBTO:LENGth:MAX....2153
TRIGger<t>:HBTO:CRC:CONDition....2153
TRIGger<t>:HBTO:CRC:MIN....2154
TRIGger<t>:HBTO:CRC:MAX....2154
TRIGger<t>:HBTO:DATA:DCONdition....2154
TRIGger<t>:HBTO:DATA:DMIN....2155

TRIGger<t>:HBTO:DATA:DMAX....2155
TRIGger<t>:HBTO:DATA:ICONdition....2155
TRIGger<t>:HBTO:DATA:IMIN....2156
TRIGger<t>:HBTO:DATA:IMAX....2156
TRIGger<t>:HBTO:ERRor:PREamble....2156
TRIGger<t>:HBTO:ERRor:CRC....2157
TRIGger<t>:HBTO:ERRor:SFD....2157
TRIGger<t>:HBTO:TRGLevel....2157

TRIGger<t>:HBTO:TYPE <Type>

Selects the type of frame to be triggered on.

Suffix:
<t> 1..3

Parameters:
<Type> STARt | MAC | IDLE | ERRor

STARt
Start of frame.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

IDLE
IDLE frame. This frame is used for clock synchronization.

ERRor
Error frame. Thi frame contains erroneous bits.

*RST: STARt

Manual operation: See "Type" on page 732

TRIGger<t>:HBTO:DADDress:CONDition <DestAddr_Operator>

Sets the condition for the destination address. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<DestAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:HBTO:DADDress:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:HBTO:DADDress:MIN` and `TRIGger<t>:HBTO:DADDress:MAX`.

*RST: EQUal

Manual operation: See "Destination address" on page 734

TRIGger<t>:HBTO:DADDress:MIN <DestAddr_PattMin>

Specifies the destination address bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<DestAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Destination address" on page 734

TRIGger<t>:HBTO:DADDress:MAX <DestAddr_PattMax>

Sets the end value of the destination address range if `TRIGger<t>:HBTO:DADDress:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<DestAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Destination address" on page 734

TRIGger<t>:HBTO:SADDress:CONDition <SrcAddr_Operator>

Sets the condition for the source address. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:HBTO:SADDress:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:HBTO:SADDress:MIN` and `TRIGger<t>:HBTO:SADDress:MAX`.

*RST: EQUal

Manual operation: See "Source address" on page 734

TRIGger<t>:HBTO:SADDress:MIN <SrcAddr_PattMin>

Specifies the source address bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Source address" on page 734

TRIGger<t>:HBTO:SADDress:MAX <SrcAddr_PattMax>

Sets the end value of the source address range if `TRIGger<t>:HBTO:SADDress:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Source address" on page 734

TRIGger<t>:HBTO:LENGth:CONDition <Type_Operator>

Sets the condition for the length / type. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Type_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:HBTO:LENGth:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:HBTO:LENGth:MIN` and `TRIGger<t>:HBTO:LENGth:MAX`.

*RST: EQUal

Manual operation: See "Length/Type" on page 734

TRIGger<t>:HBTO:LENGth:MIN <Type_PattMin>

Specifies the length / type bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Type_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Length/Type" on page 734

TRIGger<t>:HBTO:LENGth:MAX <Type_PattMax>

Sets the end value of the length / type range if `TRIGger<t>:HBTO:LENGth:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Type_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Length/Type" on page 734

TRIGger<t>:HBTO:CRC:CONDition <CRC_Operator>

Sets the condition for the frame check. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CRC_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:HBTO:CRC:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:HBTO:CRC:MIN` and `TRIGger<t>:HBTO:CRC:MAX`.

*RST: EQUal

Manual operation: See "Frame check" on page 735

TRIGger<t>:HBTO:CRC:MIN <CRC_PatternMin>

Specifies the frame check bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<CRC_PatternMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Frame check" on page 735

TRIGger<t>:HBTO:CRC:MAX <CRC_PatternMax>

Sets the end value of the frame check range if `TRIGger<t>:HBTO:CRC:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<CRC_PatternMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Frame check" on page 735

TRIGger<t>:HBTO:DATA:DCONdition <Data_Operator>

Sets the condition for the data. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:HBTO:DATA:DMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:HBTO:DATA:DMIN` and `TRIGger<t>:HBTO:DATA:DMAX`.

*RST: EQUal

Manual operation: See "Data" on page 735

TRIGger<t>:HBTO:DATA:DMIN <Data_Min>

Specifies the data bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Data_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data" on page 735

TRIGger<t>:HBTO:DATA:DMAX <Data_Max>

Sets the end value of the data range if `TRIGger<t>:HBTO:DATA:DCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Data_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data" on page 735

TRIGger<t>:HBTO:DATA:ICONdition <DataIndexOperator>

Sets the condition for the index. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<DataIndexOperator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:HBTO:DATA:IMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:HBTO:DATA:IMIN` and `TRIGger<t>:HBTO:DATA:IMAX`.

*RST: INRange

Manual operation: See "Index" on page 736

TRIGger<t>:HBTO:DATA:IMIN <DataIndex_Min>

Specifies the index bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Manual operation: See "Index" on page 736

TRIGger<t>:HBTO:DATA:IMAX <DataIndex_Max>

Sets the end value of the index range if `TRIGger<t>:HBTO:DATA:ICONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Manual operation: See "Index" on page 736

TRIGger<t>:HBTO:ERRor:PREamble <Error_Preamble>

Enables / disables trigger on preamble error.

Suffix:
<t> 1..3

Parameters:
<Error_Preamble> OFF | ON
*RST: ON

Manual operation: See "Preamble Error" on page 736

TRIGger<t>:HBTO:ERRor:CRC <Error_CRC>

Enables / disables trigger on Cyclic Redundancy Check (CRC) error.

Suffix:
<t> 1..3

Parameters:
<Error_CRC> OFF | ON
*RST: ON

Manual operation: See "CRC Error" on page 736

TRIGger<t>:HBTO:ERRor:SFD <Error_SFD>

Enables / disables trigger on start frame delimiter (SFD) error.

Suffix:
<t> 1..3

Parameters:
<Error_SFD> OFF | ON
*RST: ON

Manual operation: See "SFD Error" on page 736

TRIGger<t>:HBTO:TRGLevel <TriggerLevel>

Sets a trigger level.

Suffix:
<t> 1..3

Parameters:
<TriggerLevel> Range: 0 to 1
Increment: 1E-3
*RST: 0.03
Default unit: V

Manual operation: See "Trigger level" on page 733

26.18.14.3 Decode results

To show the results on the screen, use the following commands:

- `BUS<b>:RESult` on page 1834

In all `BUS<b>:HBTO:RESult:FRAMe<n>:WORD<o>` commands, the suffix <b> selects the serial bus, suffix <fr> selects the frame in the decode table and suffix <w> selects the word in the selected frame.

BUS<b>:HBTO:RESult:FCOunt?....2158
BUS<b>:HBTO:RESult:FRAMe<fr>:FTYPe?....2158
BUS<b>:HBTO:RESult:FRAMe<fr>:STATe?....2159
BUS<b>:HBTO:RESult:FRAMe<fr>:STARt?....2159
BUS<b>:HBTO:RESult:FRAMe<fr>:STOP?....2160
BUS<b>:HBTO:RESult:FRAMe<fr>:DESTaddress?....2160
BUS<b>:HBTO:RESult:FRAMe<fr>:SRCaddress?....2160
BUS<b>:HBTO:RESult:FRAMe<fr>:TYPE?....2160
BUS<b>:HBTO:RESult:FRAMe<fr>:DATA?....2161
BUS<b>:HBTO:RESult:FRAMe<fr>:CRC?....2161
BUS<b>:HBTO:RESult:FRAMe<fr>:NUMWords?....2161
BUS<b>:HBTO:RESult:FRAMe<fr>:DSYMbol?....2162
BUS<b>:HBTO:RESult:FRAMe<fr>:SSYMbol?....2162
BUS<b>:HBTO:RESult:FRAMe<fr>:BITRate?....2162
BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:TYPE?....2162
BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:VALue?....2163
BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:VSTR?....2163

BUS<b>:HBTO:RESult:FCOunt?

Returns the number of decoded frames.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:FTYPe?

Returns the type of frame for the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<FrameType> IDLE | MAC | FILLer | UNKNown

IDLE
IDLE frame. This frame is used for clock synchronization.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

FILLer
Filler frame. The frame is used to maintain transmission activity.

UNKNown
No meaningful frame can be determined.
*RST: MAC

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:STATe?

Returns the state of the frame.

Suffix:
<b> 1..4
<fr> *

Return values:
<State> OK | ERR_PREAMBLE | ERR_SFD | ERR_LENGTH | ERR_CRC | UNCorrelated | INComplete

OK
Valid frame.

ERR_PREAMBLE
Erroneous frame due to preamble error.

ERR_SFD
Erroneous frame due to SFD error.

ERR_LENGTH
Erroneous frame due to length / type error.

ERR_CRC
Erroneous frame due to CRC error.

*RST: OK

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<b> 1..4
<fr> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:STOP?

Returns the end time of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:DESTaddress?

Returns the destination address of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<DestAddress>

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:SRCaddress?

Returns the source address of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<SrcAddress>

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:TYPE?

Returns the value of length / type field of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<TypeLen> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:DATA?

Returns the data for the selected frame, corresponds to the Data column in the decode results table.

Suffix:
<b> 1..4

<fr> *

Return values:
<Data>

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:CRC?

Returns the CRC (frame check) checksum of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<CRC> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:NUMWords?

Returns the number of decoded words for the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:DSYMbol?

Returns the destination symbols of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<DestTranslation>

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:SSYMbol?

Returns the source symbols of the selected frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<SrcTranslation>

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<b> 1..4

<fr> *

Return values:
<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:TYPE?

Returns the data type for the selected word.

Suffix:
<b> 1..4

<fr> *

<w> *

Return values:
<WordType>

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:VALue?

Returns the data value for the selected word.

Suffix:
<b> 1..4

<fr> *

<w> *

Return values:
<WordValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:VSTR?

Returns the string equivalent of data value for the selected cell.

Suffix:
<b> 1..4

<fr> *

<w> *

Return values:
<WordValString> String parameter

Usage: Query only

26.18.14.4 Search settings

SEARch:TRIGger:HBTO:TYPE ... 2164
SEARch:TRIGger:HBTO:DADDress:CONDition ... 2164
SEARch:TRIGger:HBTO:DADDress:MIN ... 2165
SEARch:TRIGger:HBTO:DADDress:MAX ... 2165
SEARch:TRIGger:HBTO:SADDress:CONDition ... 2165
SEARch:TRIGger:HBTO:SADDress:MIN ... 2166
SEARch:TRIGger:HBTO:SADDress:MAX ... 2166
SEARch:TRIGger:HBTO:LENGth:CONDition ... 2167
SEARch:TRIGger:HBTO:LENGth:MIN ... 2167
SEARch:TRIGger:HBTO:LENGth:MAX ... 2167
SEARch:TRIGger:HBTO:CRC:CONDition ... 2168
SEARch:TRIGger:HBTO:CRC:MIN ... 2168
SEARch:TRIGger:HBTO:CRC:MAX ... 2168

SEARch:TRIGger:HBTO:DATA:DCONdition....2169
SEARch:TRIGger:HBTO:DATA:DMIN....2169
SEARch:TRIGger:HBTO:DATA:DMAX....2169
SEARch:TRIGger:HBTO:DATA:ICONdition....2170
SEARch:TRIGger:HBTO:DATA:IMIN....2170
SEARch:TRIGger:HBTO:DATA:IMAX....2171
SEARch:TRIGger:HBTO:ERRor:PREamble....2171
SEARch:TRIGger:HBTO:ERRor:CRC....2171
SEARch:TRIGger:HBTO:ERRor:SFD....2171

SEARch:TRIGger:HBTO:TYPE <SearchName>,<Type>
SEARch:TRIGger:HBTO:TYPE? <SearchName>

Selects the type of frame to be searched for.

Parameters:
<Type> STARt | MAC | IDLE | ERRor

STARt
Start of frame.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

IDLE
IDLE frame. This frame is used for clock synchronization.

ERRor
Error frame. Thi frame contains erroneous bits.

*RST: STARt

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 739

SEARch:TRIGger:HBTO:DADDress:CONDition
<SearchName>,<DestAddr_Operator>
SEARch:TRIGger:HBTO:DADDress:CONDition? <SearchName>

Sets the condition for the destination address. You can define an exact value or a value range.

Parameters:
<DestAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:HBTO:DADDress:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:HBTO:DADDress:MIN` and `SEARch:TRIGger:HBTO:DADDress:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Destination address" on page 740

SEARch:TRIGger:HBTO:DADDress:MIN <SearchName>,<DestAddr_PattMin>
SEARch:TRIGger:HBTO:DADDress:MIN? <SearchName>

Specifies the destination address bit pattern, or sets the start value of a pattern range.

Parameters:
<DestAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Destination address" on page 740

SEARch:TRIGger:HBTO:DADDress:MAX <SearchName>,<DestAddr_PattMax>
SEARch:TRIGger:HBTO:DADDress:MAX? <SearchName>

Sets the end value of the destination address range if `SEARch:TRIGger:HBTO:DADDress:CONDition` is set to `INRange` or `OORange`.

Parameters:
<DestAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Destination address" on page 740

SEARch:TRIGger:HBTO:SADDress:CONDition
<SearchName>,<SrcAddr_Operator>
SEARch:TRIGger:HBTO:SADDress:CONDition? <SearchName>

Sets the condition for the source address. You can define an exact value or a value range.

Parameters:
<SrcAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:HBTO:SADDress:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:HBTO:SADDress:MIN` and `SEARch:TRIGger:HBTO:SADDress:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Source address" on page 740

SEARch:TRIGger:HBTO:SADDress:MIN <SearchName>,<SrcAddr_PattMin>
SEARch:TRIGger:HBTO:SADDress:MIN? <SearchName>

Specifies the source address bit pattern, or sets the start value of a pattern range.

Parameters:
<SrcAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Source address" on page 740

SEARch:TRIGger:HBTO:SADDress:MAX <SearchName>,<SrcAddr_PattMax>
SEARch:TRIGger:HBTO:SADDress:MAX? <SearchName>

Sets the end value of the source address range if `SEARch:TRIGger:HBTO:SADDress:CONDition` is set to `INRange` or `OORange`.

Parameters:
<SrcAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Source address" on page 740

SEARch:TRIGger:HBTO:LENGth:CONDition <SearchName>,<Type_Operator>
SEARch:TRIGger:HBTO:LENGth:CONDition? <SearchName>

Sets the condition for the length / type. You can define an exact value or a value range.

Parameters:
<Type_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:HBTO:LENGth:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:HBTO:LENGth:MIN` and `SEARch:TRIGger:HBTO:LENGth:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Length/Type" on page 741

SEARch:TRIGger:HBTO:LENGth:MIN <SearchName>,<Type_PattMin>
SEARch:TRIGger:HBTO:LENGth:MIN? <SearchName>

Specifies the length / type bit pattern, or sets the start value of a pattern range.

Parameters:
<Type_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Length/Type" on page 741

SEARch:TRIGger:HBTO:LENGth:MAX <SearchName>,<Type_PattMax>
SEARch:TRIGger:HBTO:LENGth:MAX? <SearchName>

Sets the end value of the length / type range if `SEARch:TRIGger:HBTO:LENGth:CONDition` is set to `INRange` or `OORange`.

Parameters:
<Type_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Length/Type" on page 741

SEARch:TRIGger:HBTO:CRC:CONDition <SearchName>,<CRC_Operator>
SEARch:TRIGger:HBTO:CRC:CONDition? <SearchName>

Sets the condition for the frame check. You can define an exact value or a value range.

Parameters:
<CRC_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:HBTO:CRC:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:HBTO:CRC:MIN` and `SEARch:TRIGger:HBTO:CRC:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame check" on page 741

SEARch:TRIGger:HBTO:CRC:MIN <SearchName>,<CRC_PatternMin>
SEARch:TRIGger:HBTO:CRC:MIN? <SearchName>

Specifies the frame check bit pattern, or sets the start value of a pattern range.

Parameters:
<CRC_PatternMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame check" on page 741

SEARch:TRIGger:HBTO:CRC:MAX <SearchName>,<CRC_PatternMax>
SEARch:TRIGger:HBTO:CRC:MAX? <SearchName>

Sets the end value of the frame check range if `SEARch:TRIGger:HBTO:CRC:CONDition` is set to `INRange` or `OORange`.

Parameters:
<CRC_PatternMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame check" on page 741

SEARch:TRIGger:HBTO:DATA:DCONdition <SearchName>,<Data_Operator>
SEARch:TRIGger:HBTO:DATA:DCONdition? <SearchName>

Sets the condition for the data. You can define an exact value or a value range.

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:HBTO:DATA:DMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:HBTO:DATA:DMIN` and `SEARch:TRIGger:HBTO:DATA:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 741

SEARch:TRIGger:HBTO:DATA:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:HBTO:DATA:DMIN? <SearchName>

Specifies the data bit pattern, or sets the start value of a pattern range.

Parameters:
<Data_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 741

SEARch:TRIGger:HBTO:DATA:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:HBTO:DATA:DMAX? <SearchName>

Sets the end value of the data range if `SEARch:TRIGger:HBTO:DATA:DCONdition` is set to `INRange` or `OORange`.

Parameters:
<Data_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 741

SEARch:TRIGger:HBTO:DATA:ICONdition <SearchName>,<DataIndexOperator>
SEARch:TRIGger:HBTO:DATA:ICONdition? <SearchName>

Sets the condition for the index. You can define an exact value or a value range.

Parameters:
<DataIndexOperator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:HBTO:DATA:IMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:HBTO:DATA:IMIN` and `SEARch:TRIGger:HBTO:DATA:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 742

SEARch:TRIGger:HBTO:DATA:IMIN <SearchName>,<DataIndex_Min>
SEARch:TRIGger:HBTO:DATA:IMIN? <SearchName>

Specifies the index bit pattern, or sets the start value of a pattern range.

Parameters:
<DataIndex_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 742

SEARch:TRIGger:HBTO:DATA:IMAX <SearchName>,<DataIndex_Max>
SEARch:TRIGger:HBTO:DATA:IMAX? <SearchName>

Sets the end value of the index range if `SEARch:TRIGger:HBTO:DATA:ICONdition` is set to `INRange` or `OORange`.

Parameters:
<DataIndex_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 742

SEARch:TRIGger:HBTO:ERRor:PREamble <SearchName>,<Error_Preamble>
SEARch:TRIGger:HBTO:ERRor:PREamble? <SearchName>

Enables / disables search for preamble error.

Parameters:
<Error_Preamble> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Preamble Error" on page 742

SEARch:TRIGger:HBTO:ERRor:CRC <SearchName>,<Error_CRC>
SEARch:TRIGger:HBTO:ERRor:CRC? <SearchName>

Enables / disables trigger on Cyclic Redundancy Check (CRC) error.

Parameters:
<Error_CRC> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "CRC Error" on page 742

SEARch:TRIGger:HBTO:ERRor:SFD <SearchName>,<Error_SFD>
SEARch:TRIGger:HBTO:ERRor:SFD? <SearchName>

Enables / disables search for start frame delimiter (SFD) error.

Parameters:
<Error_SFD> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "SFD Error" on page 742

26.18.14.5 Search results

In all `SEARch:RESult:HBTO:FRAMe<m>` commands, the suffix <m> selects the frame number in the list of search results.

SEARch:RESult:HBTO:FCOunt? 2172
SEARch:RESult:HBTO:FRAMe<fr>:TYPE? 2172
SEARch:RESult:HBTO:FRAMe<fr>:STATe? 2173
SEARch:RESult:HBTO:FRAMe<fr>:STARt? 2173
SEARch:RESult:HBTO:FRAMe<fr>:STOP? 2174
SEARch:RESult:HBTO:FRAMe<fr>:DESTaddress? 2174
SEARch:RESult:HBTO:FRAMe<fr>:SRCaddress? 2174
SEARch:RESult:HBTO:FRAMe<fr>:DATA? 2174
SEARch:RESult:HBTO:FRAMe<fr>:CRC? 2175
SEARch:RESult:HBTO:FRAMe<fr>:NUMWords? 2175
SEARch:RESult:HBTO:FRAMe<fr>:FTYPe? 2175
SEARch:RESult:HBTO:FRAMe<fr>:DSYMbol? 2176
SEARch:RESult:HBTO:FRAMe<fr>:SSYMbol? 2176
SEARch:RESult:HBTO:FRAMe<fr>:WORD<w>:TYPE? 2176
SEARch:RESult:HBTO:FRAMe<fr>:WORD<w>:VALue? 2177

SEARch:RESult:HBTO:FCOunt? <SearchName>

Returns the number of decoded frames within the search result.

Query parameters:
<SearchName>

Return values:

<FrameCount>	Range:	0 to 100E+3
	Increment:	1
	*RST:	0

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:TYPE? <SearchName>

Returns the value of length / type field of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<TypeLen> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:STATe? <SearchName>

Returns the state of the frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | ERR_PREAMBLE | ERR_SFD | ERR_LENGTH | ERR_CRC | UNCorrelated | INComplete

OK
Valid frame.

ERR_PREAMBLE
Erroneous frame due to preamble error.

ERR_SFD
Erroneous frame due to SFD error.

ERR_LENGTH
Erroneous frame due to length / type error.

ERR_CRC
Erroneous frame due to CRC error.

*RST: OK

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:STOP? <SearchName>

Returns the end time of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:DESTaddress? <SearchName>

Returns the destination address of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DestAddress> String parameter

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:SRCaddress? <SearchName>

Returns the source address of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SourceAddress> String parameter

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:DATA? <SearchName>

Returns the data for the selected frame, corresponds to the Data column in the decode results table.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:CRC? <SearchName>

Returns the CRC checksum of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<CRC> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:NUMWords? <SearchName>

Returns the number of decoded words for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:FTYPe? <SearchName>

Returns the type of frame for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> IDLE | MAC | FILLer | UNKNown

IDLE
IDLE frame. This frame is used for clock synchronization.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

FILLer
Filler frame. The frame is used to maintain transmission activity.

UNKNown
No meaningful frame can be determined.

*RST: MAC

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:DSYMbol? <SearchName>

Returns the destination symbols of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DestTranslation>

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:SSYMbol? <SearchName>

Returns the source symbols of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SrcTranslation>

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:WORD<w>:TYPE? <SearchName>

Returns the data type of the selected word within the search result.

Suffix:
<fr> *

<w> *

Query parameters:
<SearchName>

Return values:
<WordType> String parameter

Usage: Query only

SEARch:RESult:HBTO:FRAMe<fr>:WORD<w>:VALue? <SearchName>

Returns the data value of the selected word within the search result.

Suffix:
<fr> *

<w> *

Query parameters:
<SearchName>

Return values:
<WordValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

26.18.15 Ethernet 1000BASE-T1 (option R&S RTP-K58)

- Configuration....2177
- Decode results....2180
- Trigger....2187
- Search settings....2196
- Search results....2204

26.18.15.1 Configuration

In all `BUS<b>:TBTO` commands, the suffix <b> selects the serial bus.

BUS<b>:TBTO:ATTN <Attenuation>

Sets the attenuation factor. It is used to de-amplify the reverse signal before subtracting it from the forward signal.

Suffix:
<b> 1..4

Parameters:
<Attenuation> Range: -100 to 0
Increment: 0.1
*RST: -26
Default unit: dB

Manual operation: See "Reverse attenuation" on page 746

BUS<b>:TBTO:FDAM <SourceDAminus>

Selects the DA- source of the provided forward single ended signal, if `BUS<b>:TBTO:FTYP` is set to `SINGle`.

Suffix:
<b> 1..4

Parameters:
<SourceDAminus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Forward" on page 745

BUS<b>:TBTO:FDAP <SourceDAplus>

Selects the DA+ source of the provided forward single ended signal, if `BUS<b>:TBTO:FTYP` is set to `SINGle`.

Suffix:
<b> 1..4

Parameters:
<SourceDAplus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Forward" on page 745

BUS<b>:TBTO:FDIF <SrcDiff>

Sets the source of the provided forward differential signal, if `BUS<b>:TBTO:FTYP` is set to `DIFFerential`.

Suffix:
<b> 1..4

Parameters:
<SrcDiff> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Forward" on page 745

BUS<b>:TBTO:FTYP <SignalType>

Sets the type of forward signal measurement.

Suffix:
<b> 1..4

Parameters:
<SignalType> DIFFerential | SINGle
*RST: DIFFerential

Manual operation: See "Forward" on page 745

BUS<b>:TBTO:RDAM <SrcRevDAminus>

Selects the DA- source of the provided reversed single ended signal, if `BUS<b>:TBTO:RTYP` is set to `SINGle`.

Suffix:
<b> 1..4

Parameters:
<SrcRevDAminus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Reverse" on page 745

BUS<b>:TBTO:RDAP <SrcRevDAplus>

Selects the DA+ source of the provided reversed single ended signal, if `BUS<b>:TBTO:RTYP` is set to `SINGle`.

Suffix:
<b> 1..4

Parameters:
<SrcRevDAplus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Reverse" on page 745

BUS<b>:TBTO:RDIF <SrcRevDiff>

Sets the source of the provided reversed differential signal, if `BUS<b>:TBTO:RTYP` is set to `DIFFerential`.

Suffix:
<b> 1..4

Parameters:
<SrcRevDiff> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Manual operation: See "Reverse" on page 745

BUS<b>:TBTO:RTYP <SignalRevType>

Sets the type of reverse signal measurement.

Suffix:
<b> 1..4

Parameters:
<SignalRevType> DISabled | DIFFerential | SINGle
*RST: DISabled

Manual operation: See "Reverse" on page 745

BUS<b>:TBTO:MODE <Mode>

Selects the direction of the full-duplex signal you want to look at.

Suffix:
<b> 1..4

Parameters:
<Mode> MASTer | SLAVe | AUTO
*RST: AUTO

Manual operation: See "Operation mode" on page 746

BUS<b>:TBTO:POLarity <Polarity>

Selects the polarity of the data signal.

Suffix:
<b> 1..4

Parameters:
<Polarity> NORMal | INVert
*RST: NORMal

Manual operation: See "Polarity" on page 746

26.18.15.2 Decode results

To show the results on the screen, use the following commands:

- `BUS<b>:RESult` on page 1834

BUS<b>:TBTO:RESult:FCOunt? 2181
BUS<b>:TBTO:RESult:FRAMe<fr>:BITRate? 2181
BUS<b>:TBTO:RESult:FRAMe<fr>:CRC? 2181
BUS<b>:TBTO:RESult:FRAMe<fr>:DATA? 2182
BUS<b>:TBTO:RESult:FRAMe<fr>:DESTaddress? 2182
BUS<b>:TBTO:RESult:FRAMe<fr>:DSYMbol? 2182
BUS<b>:TBTO:RESult:FRAMe<fr>:FTYPe? 2183
BUS<b>:TBTO:RESult:FRAMe<fr>:NUMWords? 2183
BUS<b>:TBTO:RESult:FRAMe<fr>:SRCaddress? 2184
BUS<b>:TBTO:RESult:FRAMe<fr>:SSYMbol? 2184
BUS<b>:TBTO:RESult:FRAMe<fr>:STARt? 2184
BUS<b>:TBTO:RESult:FRAMe<fr>:STATe? 2184

BUS<b>:TBTO:RESult:FRAMe<fr>:STOP? 2185
BUS<b>:TBTO:RESult:FRAMe<fr>:TYPE? 2185
BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:TYPE? 2186
BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:VALue? 2186
BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:VSTR? 2186

BUS<b>:TBTO:RESult:FCOunt?

Returns the number of decoded frames.

Suffix:

<b> 1..4
Selects the serial bus.

Return values:

<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:CRC?

Returns the CRC (frame check) checksum of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<CRC> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:DATA?

Returns the data for the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Data>

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:DESTaddress?

Returns the destination address of the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<DestAddress>

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:DSYMbol?

Returns the destination symbols of the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<DestTranslation>

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:FTYPe?

Returns the type of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<FrameType> IDLE | MAC | OAM | RSFEC | BH | CTLADDR | CTLCODE | ZEROTSYM | UNKNown

IDLE
IDLE frame. This frame is used for clock synchronization.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

OAM
Operations, administration, and maintenance frame.

RSFEC
Reed Solomon forward error correction check frame.

ZEROTSYM
Zero terrnary symbol.

UNKNown
No meaningful frame can be determined.

*RST: MAC

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:NUMWords?

Returns the number of decoded words for the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:SRCaddress?

Returns the source address of the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<SrcAddress>

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:SSYMbol?

Returns the source symbols of the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<SrcTranslation>

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:STATe?

Returns the state of the frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<State> OK | ERRFEC | ERRZERO | ERROOR | ERRCRC | INComplete

OK
Valid frame.

ERRFEC
Reed-Solomon forward error correction.

ERRZERO
Zero ternary symbol pair error.

ERROOR
Values are out of range error.

ERR_CRC
Erroneous frame due to CRC error.

INComplete
Incomplete frame.

*RST: OK

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:STOP?

Returns the end time of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:TYPE?

Returns the value of length / type field of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<TypeLen> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:TYPE?

Returns the data type for the selected word.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<w> *
Selects the word.

Return values:
<WordType>

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:VALue?

Returns the data value for the selected word.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<w> *
Selects the word.

Return values:
<WordValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:VSTR?

Returns the string equivalent of the data value for the selected word.

Suffix:

<b>	1..4
<fr>	*
<w>	*

Return values:
<WordValString>

Usage: Query only

26.18.15.3 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:TBTO:TRGLevel 2187
TRIGger<t>:TBTO:TYPE 2188
TRIGger<t>:TBTO:CRC:CONDition 2188
TRIGger<t>:TBTO:CRC:MAX 2189
TRIGger<t>:TBTO:CRC:MIN 2189
TRIGger<t>:TBTO:DADDress:CONDition 2189
TRIGger<t>:TBTO:DADDress:MAX 2190
TRIGger<t>:TBTO:DADDress:MIN 2190
TRIGger<t>:TBTO:DATA:DCONdition 2190
TRIGger<t>:TBTO:DATA:DMAX 2191
TRIGger<t>:TBTO:DATA:DMIN 2191
TRIGger<t>:TBTO:DATA:ICONdition 2191
TRIGger<t>:TBTO:DATA:IMAX 2192
TRIGger<t>:TBTO:DATA:IMIN 2192
TRIGger<t>:TBTO:ERRor:CRC 2192
TRIGger<t>:TBTO:ERRor:FEC 2193
TRIGger<t>:TBTO:ERRor:OOR 2193
TRIGger<t>:TBTO:ERRor:ZERO 2193
TRIGger<t>:TBTO:LENGth:CONDition 2193
TRIGger<t>:TBTO:LENGth:MAX 2194
TRIGger<t>:TBTO:LENGth:MIN 2194
TRIGger<t>:TBTO:SADDress:CONDition 2195
TRIGger<t>:TBTO:SADDress:MAX 2195
TRIGger<t>:TBTO:SADDress:MIN 2195

TRIGger<t>:TBTO:TRGLevel <TriggerLevel>

Sets the trigger level.

Suffix:
<t> 1..3

Parameters:
<TriggerLevel> Range: -0.5 to 0.5
Increment: 1E-3
*RST: 0.01
Default unit: V

Manual operation: See "Trigger level" on page 750

TRIGger<t>:TBTO:TYPE <Type>

Selects the type of frame to be triggered on.

Suffix:
<t> 1..3

Parameters:
<Type> STARt | MAC | IDLE | ERRor

STARt
Start of frame.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

IDLE
IDLE frame. This frame is used for clock synchronization.

ERRor
Error frame. You can enable the error to be triggered on:
`TRIGger<t>:TBTO:ERRor:CRC`
`TRIGger<t>:TBTO:ERRor:FEC`
`TRIGger<t>:TBTO:ERRor:OOR`
`TRIGger<t>:TBTO:ERRor:ZERO`

*RST: STARt

Manual operation: See "Type" on page 749

TRIGger<t>:TBTO:CRC:CONDition <CRC_Operator>

Sets the condition for the frame check. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CRC_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:TBTO:CRC:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:TBTO:CRC:MIN` and `TRIGger<t>:TBTO:CRC:MAX` .

*RST: EQUal

Manual operation: See "Frame check" on page 752

TRIGger<t>:TBTO:CRC:MAX <CRC_PatternMax>

Sets the end value of the frame check range if `TRIGger<t>:TBTO:CRC:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<CRC_PatternMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Frame check" on page 752

TRIGger<t>:TBTO:CRC:MIN <CRC_PatternMin>

Specifies the frame check bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<CRC_PatternMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Frame check" on page 752

TRIGger<t>:TBTO:DADDress:CONDition <DestAddr_Operator>

Sets the condition for the destination address. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<DestAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:TBTO:DADDress:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:TBTO:DADDress:MIN` and `TRIGger<t>:TBTO:DADDress:MAX`.

*RST: EQUal

Manual operation: See "Destination address" on page 750

TRIGger<t>:TBTO:DADDress:MAX <DestAddr_PattMax>

Sets the end value of the destination address range if `TRIGger<t>:TBTO:DADDress:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<DestAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Destination address" on page 750

TRIGger<t>:TBTO:DADDress:MIN <DestAddr_PattMin>

Specifies the destination address bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<DestAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Destination address" on page 750

TRIGger<t>:TBTO:DATA:DCONdition <Data_Operator>

Sets the condition for the data. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:TBTO:DATA:DMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:TBTO:DATA:DMIN` and `TRIGger<t>:TBTO:DATA:DMAX`.

*RST: EQUal

Manual operation: See "Data" on page 752

TRIGger<t>:TBTO:DATA:DMAX <Data_Max>

Sets the end value of the data range if `TRIGger<t>:TBTO:DATA:DCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Data_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Data" on page 752

TRIGger<t>:TBTO:DATA:DMIN <Data_Min>

Specifies the data bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Data_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Data" on page 752

TRIGger<t>:TBTO:DATA:ICONdition <DataIndexOperator>

Sets the condition for the index. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<DataIndexOperator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:TBTO:DATA:IMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:TBTO:DATA:IMIN` and `TRIGger<t>:TBTO:DATA:IMAX`.

*RST: INRange

Manual operation: See "Index" on page 752

TRIGger<t>:TBTO:DATA:IMAX <DataIndex_Max>

Sets the end value of the index range if `TRIGger<t>:TBTO:DATA:ICONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Manual operation: See "Index" on page 752

TRIGger<t>:TBTO:DATA:IMIN <DataIndex_Min>

Specifies the index bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Manual operation: See "Index" on page 752

TRIGger<t>:TBTO:ERRor:CRC <Error_CRC>

Enables triggering on cyclic redundancy check (CRC) error.

Suffix:
<t> 1..3

Parameters:
<Error_CRC> OFF | ON
*RST: ON

Manual operation: See "CRC error" on page 753

TRIGger<t>:TBTO:ERRor:FEC <Error_FEC>

Enables triggering, if more than 22 RS-FEC errors are detected.

Suffix:
<t> 1..3

Parameters:
<Error_FEC> OFF | ON
*RST: ON

Manual operation: See "RS-FEC error" on page 753

TRIGger<t>:TBTO:ERRor:OOR <Error_OOR>

Enables triggering if values are out of range (OOR). For example, a preamble error, or invalid symbols in control blocks.

Suffix:
<t> 1..3

Parameters:
<Error_OOR> OFF | ON
*RST: ON

Manual operation: See "Out of range error" on page 753

TRIGger<t>:TBTO:ERRor:ZERO <Error_ZERO>

Enables triggering, if a zero ternary symbol pair (0-0) is detected.

Suffix:
<t> 1..3

Parameters:
<Error_ZERO> OFF | ON
*RST: ON

Manual operation: See "Zero terrnary symbol" on page 753

TRIGger<t>:TBTO:LENGth:CONDition <Type_Operator>

Sets the condition for the length / type. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Type_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:TBTO:LENGth:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:TBTO:LENGth:MIN` and `TRIGger<t>:TBTO:LENGth:MAX`.

*RST: EQUal

Manual operation: See "Length/Type" on page 751

TRIGger<t>:TBTO:LENGth:MAX <Type_PattMax>

Sets the end value of the length / type range if `TRIGger<t>:TBTO:LENGth:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Type_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Length/Type" on page 751

TRIGger<t>:TBTO:LENGth:MIN <Type_PattMin>

Specifies the length / type bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Type_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Length/Type" on page 751

TRIGger<t>:TBTO:SADDress:CONDition <SrcAddr_Operator>

Sets the condition for the source address. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:TBTO:SADDress:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:TBTO:SADDress:MIN` and `TRIGger<t>:TBTO:SADDress:MAX`.

*RST: EQUal

Manual operation: See "Source address" on page 751

TRIGger<t>:TBTO:SADDress:MAX <SrcAddr_PattMax>

Sets the end value of the source address range, if `TRIGger<t>:TBTO:SADDress:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Source address" on page 751

TRIGger<t>:TBTO:SADDress:MIN <SrcAddr_PattMin>

Specifies the source address bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<SrcAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Source address" on page 751

26.18.15.4 Search settings

SEARch:TRIGger:TBTO:CRC:CONDition....2196
SEARch:TRIGger:TBTO:CRC:MAX....2197
SEARch:TRIGger:TBTO:CRC:MIN....2197
SEARch:TRIGger:TBTO:DADDress:CONDition....2197
SEARch:TRIGger:TBTO:DADDress:MAX....2198
SEARch:TRIGger:TBTO:DADDress:MIN....2198
SEARch:TRIGger:TBTO:DATA:DCONdition....2198
SEARch:TRIGger:TBTO:DATA:DMAX....2199
SEARch:TRIGger:TBTO:DATA:DMIN....2199
SEARch:TRIGger:TBTO:DATA:ICONdition....2199
SEARch:TRIGger:TBTO:DATA:IMAX....2200
SEARch:TRIGger:TBTO:DATA:IMIN....2200
SEARch:TRIGger:TBTO:ERRor:CRC....2200
SEARch:TRIGger:TBTO:ERRor:FEC....2201
SEARch:TRIGger:TBTO:ERRor:OOR....2201
SEARch:TRIGger:TBTO:ERRor:ZERO....2201
SEARch:TRIGger:TBTO:LENGth:CONDition....2202
SEARch:TRIGger:TBTO:LENGth:MAX....2202
SEARch:TRIGger:TBTO:LENGth:MIN....2202
SEARch:TRIGger:TBTO:SADDress:CONDition....2203
SEARch:TRIGger:TBTO:SADDress:MAX....2203
SEARch:TRIGger:TBTO:SADDress:MIN....2203
SEARch:TRIGger:TBTO:TYPE....2204

SEARch:TRIGger:TBTO:CRC:CONDition <SearchName>,<CRC_Operator>
SEARch:TRIGger:TBTO:CRC:CONDition? <SearchName>

Sets the condition for the frame check. You can define an exact value or a value range.

Parameters:

<CRC_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:TBTO:CRC:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:TBTO:CRC:MIN` and `SEARch:TRIGger:TBTO:CRC:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame check" on page 758

SEARch:TRIGger:TBTO:CRC:MAX <SearchName>,<CRC_PatternMax>
SEARch:TRIGger:TBTO:CRC:MAX? <SearchName>

Sets the end value of the frame check range if `SEARch:TRIGger:TBTO:CRC:CONDition` is set to `INRange` or `OORange`.

Parameters:
<CRC_PatternMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame check" on page 758

SEARch:TRIGger:TBTO:CRC:MIN <SearchName>,<CRC_PatternMin>
SEARch:TRIGger:TBTO:CRC:MIN? <SearchName>

Specifies the frame check bit pattern, or sets the start value of a pattern range.

Parameters:
<CRC_PatternMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame check" on page 758

SEARch:TRIGger:TBTO:DADDress:CONDition
<SearchName>,<DestAddr_Operator>
SEARch:TRIGger:TBTO:DADDress:CONDition? <SearchName>

Sets the condition for the destination address. You can define an exact value or a value range.

Parameters:
<DestAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:TBTO:DADDress:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:TBTO:DADDress:MIN` and `SEARch:TRIGger:TBTO:DADDress:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Destination address" on page 757

SEARch:TRIGger:TBTO:DADDress:MAX <SearchName>,<DestAddr_PattMax>
SEARch:TRIGger:TBTO:DADDress:MAX? <SearchName>

Sets the end value of the destination address range if `SEARch:TRIGger:TBTO:DADDress:CONDition` is set to `INRange` or `OORange`.

Parameters:
<DestAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Destination address" on page 757

SEARch:TRIGger:TBTO:DADDress:MIN <SearchName>,<DestAddr_PattMin>
SEARch:TRIGger:TBTO:DADDress:MIN? <SearchName>

Specifies the destination address bit pattern, or sets the start value of a pattern range.

Parameters:
<DestAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Destination address" on page 757

SEARch:TRIGger:TBTO:DATA:DCONdition <SearchName>,<Data_Operator>
SEARch:TRIGger:TBTO:DATA:DCONdition? <SearchName>

Sets the condition for the data. You can define an exact value or a value range.

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:TBTO:DATA:DMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:TBTO:DATA:DMIN` and `SEARch:TRIGger:TBTO:DATA:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 759

SEARch:TRIGger:TBTO:DATA:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:TBTO:DATA:DMAX? <SearchName>

Sets the end value of the data range if `SEARch:TRIGger:TBTO:DATA:DCONdition` is set to `INRange` or `OORange`.

Parameters:
<Data_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 759

SEARch:TRIGger:TBTO:DATA:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:TBTO:DATA:DMIN? <SearchName>

Specifies the data bit pattern, or sets the start value of a pattern range.

Parameters:
<Data_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 759

SEARch:TRIGger:TBTO:DATA:ICONdition <SearchName>,<DataIndexOperator>
SEARch:TRIGger:TBTO:DATA:ICONdition? <SearchName>

Sets the search condition for the index. You can define an exact value or a value range.

Parameters:
<DataIndexOperator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:TBTO:DATA:IMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:TBTO:DATA:IMIN` and `SEARch:TRIGger:TBTO:DATA:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 759

SEARch:TRIGger:TBTO:DATA:IMAX <SearchName>,<DataIndex_Max>
SEARch:TRIGger:TBTO:DATA:IMAX? <SearchName>

Sets the end value of the index range to be searched for, if `SEARch:TRIGger:TBTO:DATA:IMAX` is set to `INRange` or `OORange`.

Parameters:
<DataIndex_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 759

SEARch:TRIGger:TBTO:DATA:IMIN <SearchName>,<DataIndex_Min>
SEARch:TRIGger:TBTO:DATA:IMIN? <SearchName>

Specifies the index bit pattern, or sets the start value of a pattern range.

Parameters:
<DataIndex_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 759

SEARch:TRIGger:TBTO:ERRor:CRC <SearchName>,<Error_CRC>
SEARch:TRIGger:TBTO:ERRor:CRC? <SearchName>

Enables search for cyclic redundancy check (CRC) error.

Parameters:
<Error_CRC> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "CRC error" on page 760

SEARch:TRIGger:TBTO:ERRor:FEC <SearchName>,<Error_FEC>
SEARch:TRIGger:TBTO:ERRor:FEC? <SearchName>

Enables search for RS-FEC errors.

Parameters:
<Error_FEC> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "RS-FEC error" on page 760

SEARch:TRIGger:TBTO:ERRor:OOR <SearchName>,<Error_OOR>
SEARch:TRIGger:TBTO:ERRor:OOR? <SearchName>

Enables search for values that are out of range.

Parameters:
<Error_OOR> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Out of range error" on page 760

SEARch:TRIGger:TBTO:ERRor:ZERO <SearchName>,<Error_ZERO>
SEARch:TRIGger:TBTO:ERRor:ZERO? <SearchName>

Enables search for zero ternary symbol pairs error.

Parameters:
<Error_ZERO> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Zero terrnary symbol" on page 760

SEARch:TRIGger:TBTO:LENGth:CONDition <SearchName>,<Type_Operator>
SEARch:TRIGger:TBTO:LENGth:CONDition? <SearchName>

Sets the condition for the length/ type. You can define an exact value or a value range.

Parameters:
<Type_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:TBTO:LENGth:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:TBTO:LENGth:MIN` and `SEARch:TRIGger:TBTO:LENGth:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Length/Type" on page 758

SEARch:TRIGger:TBTO:LENGth:MAX <SearchName>,<Type_PattMax>
SEARch:TRIGger:TBTO:LENGth:MAX? <SearchName>

Sets the end value of the length / type range if `SEARch:TRIGger:TBTO:LENGth:CONDition` is set to `INRange` or `OORange`.

Parameters:
<Type_PattMax>

Parameters for setting and query:
<SearchName> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Length/Type" on page 758

SEARch:TRIGger:TBTO:LENGth:MIN <SearchName>,<Type_PattMin>
SEARch:TRIGger:TBTO:LENGth:MIN? <SearchName>

Specifies the length/ type bit pattern, or sets the start value of a pattern range.

Parameters:
<Type_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Length/Type" on page 758

SEARch:TRIGger:TBTO:SADDress:CONDition
<SearchName>,<SrcAddr_Operator>
SEARch:TRIGger:TBTO:SADDress:CONDition? <SearchName>

Sets the condition for the source address. You can define an exact value or a value range.

Parameters:
<SrcAddr_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:TBTO:SADDress:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:TBTO:SADDress:MIN` and`SEARch:TRIGger:TBTO:SADDress:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Source address" on page 758

SEARch:TRIGger:TBTO:SADDress:MAX <SearchName>,<SrcAddr_PattMax>
SEARch:TRIGger:TBTO:SADDress:MAX? <SearchName>

Sets the end value of the source address range if `SEARch:TRIGger:TBTO:SADDress:CONDition` is set to `INRange` or `OORange`.

Parameters:
<SrcAddr_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Source address" on page 758

SEARch:TRIGger:TBTO:SADDress:MIN <SearchName>,<SrcAddr_PattMin>
SEARch:TRIGger:TBTO:SADDress:MIN? <SearchName>

Specifies the source address bit pattern, or sets the start value of a pattern range.

Parameters:
<SrcAddr_PattMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Source address" on page 758

SEARch:TRIGger:TBTO:TYPE <SearchName>,<Type>
SEARch:TRIGger:TBTO:TYPE? <SearchName>

Selects the type of frame to be searched for.

Parameters:
<Type> STARt | MAC | IDLE | ERRor

STARt
Start of frame.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

IDLE
IDLE frame. This frame is used for clock synchronization.

ERRor
Error frame. This frame contains erroneous bits.

*RST: STARt

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 756

26.18.15.5 Search results

SEARch:RESult:TBTO:FCOunt?....2205
SEARch:RESult:TBTO:FRAMe<fr>:CRC?....2205
SEARch:RESult:TBTO:FRAMe<fr>:DATA?....2205
SEARch:RESult:TBTO:FRAMe<fr>:DESTaddress?....2205
SEARch:RESult:TBTO:FRAMe<fr>:DSYMbol?....2206
SEARch:RESult:TBTO:FRAMe<fr>:FTYPe?....2206
SEARch:RESult:TBTO:FRAMe<fr>:NUMWords?....2207
SEARch:RESult:TBTO:FRAMe<fr>:SRCaddress?....2207
SEARch:RESult:TBTO:FRAMe<fr>:SSYMbol?....2207
SEARch:RESult:TBTO:FRAMe<fr>:STARt?....2208
SEARch:RESult:TBTO:FRAMe<fr>:STATe?....2208
SEARch:RESult:TBTO:FRAMe<fr>:STOP?....2208
SEARch:RESult:TBTO:FRAMe<fr>:TYPE?....2209

SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:TYPE? 2209
SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:VALue? 2209
SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:VSTR? 2210

SEARch:RESult:TBTO:FCOunt? <SearchName>

Returns the number of decoded frames within the search result.

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:CRC? <SearchName>

Returns the CRC checksum of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<CRC> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:DATA? <SearchName>

Returns the data for the selected frame.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:DESTaddress? <SearchName>

Returns the destination address of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DestAddress> String parameter

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:DSYMbol? <SearchName>

Returns the destination symbols of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DestTranslation>

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:FTYPe? <SearchName>

Returns the type of frame for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> IDLE | MAC | OAM | RSFEC | BH | CTLADDR | CTLCODE | ZEROTSYM | UNKNown

IDLE
IDLE frame. This frame is used for clock synchronization.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

OAM
Operations, administration and maintenance (OAM) frame.

RSFEC
Reed Solomon forward error correction check frame.

BH
BASE-H fame.

CTLADDR
Control address frame.

CTLCODE
Control code frame.

ZEROTSYM
Zero terrnary symbol frame.

UNKNown
No meaningful frame can be determined.

*RST: MAC

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:NUMWords? <SearchName>

Returns the number of decoded words for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:SRCaddress? <SearchName>

Returns the source address of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SourceAddress> String parameter

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:SSYMbol? <SearchName>

Returns the source symbols of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<SrcTranslation>

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:STATe? <SearchName>

Returns the state of the frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | ERRFEC | ERRZERO | ERROOR | ERRCRC | INComplete

OK
Valid frame.

ERRFEC
Reed-Solomon forward error correction.

ERRZERO
Zero ternary symbol pair error.

ERROOR
Values are out of range error.

ERR_CRC
Erroneous frame due to CRC error.

INComplete
Incomplete frame.

*RST: OK

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:STOP? <SearchName>

Returns the end time of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:TYPE? <SearchName>

Returns the value of length / type field of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<TypeLen> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:TYPE? <SearchName>

Returns the data type of the selected word within the search result.

Suffix:
<fr> *
Selects the frame.

<w> *
Selects the word.

Query parameters:
<SearchName>

Return values:
<WordType>

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:VALue? <SearchName>

Returns the data value of the selected word within the search result.

Suffix:
<fr> *
Selects the frame.

<w> *
Selects the word.

Query parameters:
<SearchName>

Return values:
<WordValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:VSTR? <SearchName>

Returns the string equivalent of data value for the selected cell.

Suffix:
<fr> *

<w> *

Query parameters:
<SearchName>

Return values:
<WordValString>

Usage: Query only

26.18.16 RFFE (option R&S RTP-K40)

For programming examples, see Section 26.3.7.1, "RFFE (option R&S RTP-K40)", on page 1342.

26.18.16.1 Configuration

In all BUS<b>:RFFE commands, the suffix <b> selects the serial bus.

For programming examples, see "Configuring RFFE bus" on page 1342.

BUS<b>:RFFE:CLOCk:SOURce....2211
BUS<b>:RFFE:DATA:SOURce....2211
BUS<b>:RFFE:PRESet....2211
BUS<b>:RFFE:DATA:THReshold:HIGH....2212
BUS<b>:RFFE:DATA:THReshold:LOW....2212
BUS<b>:RFFE:CLOCk:THReshold:HIGH....2212
BUS<b>:RFFE:CLOCk:THReshold:LOW....2213
BUS<b>:RFFE:GFILter....2213

BUS<b>:RFFE:GFWidth....2213
BUS<b>:RFFE:MINGap:SELect....2213
BUS<b>:RFFE:MINGap:TIME....2214
BUS<b>:RFFE:RDMD....2214
BUS<b>:RFFE:VERSion....2214

BUS<b>:RFFE:CLOCk:SOURce <SourceClock>

Sets the source of the RFFE clock line.

For triggering on a serial bus, analog or digital input channels are required.

Suffix:
<b> 1..4

Parameters:
<SourceClock> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

*RST: C2W1

Manual operation: See "SCLK Source" on page 765

BUS<b>:RFFE:DATA:SOURce <SourceData>

Sets the source of the RFFE data line. For triggering on a serial bus, analog or digital input channels are required.

Suffix:
<b> 1..4

Parameters:
<SourceData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

*RST: C1W1

Manual operation: See "SDATA Source" on page 765

BUS<b>:RFFE:PRESet <ThresPreset>

Sets default threshold voltages for 1.2 V or 1.8 V bus. Set the value to MAN if you want to define individual thresholds.

Suffix:
<b> 1..4

Parameters:
<ThresPreset> V12 | V18 | MANual

*RST: V12

BUS<b>:RFFE:DATA:THReshold:HIGH <ThresDatPos>

Set the positive going threshold (V_{TP}) for the data signal.

Note that the high and low thresholds and the hysteresis values are dependent, so it is sufficient to define two values for each line.

Suffix:
<b> 1..4

Parameters:
<ThresDatPos> Range: 0 to 2.5
Increment: 0.1
*RST: 0.72
Default unit: V

Manual operation: See "Thresholds" on page 765

BUS<b>:RFFE:DATA:THReshold:LOW <ThresDatNeg>

Set the negative going threshold (V_{TN}) for the data signal.

Note that the high and low thresholds and the hysteresis values are dependent, so it is sufficient to define two values for each line.

Suffix:
<b> 1..4

Parameters:
<ThresDatNeg> Range: 0 to 2.5
Increment: 0.1
*RST: 0.48
Default unit: V

Manual operation: See "Thresholds" on page 765

BUS<b>:RFFE:CLOCk:THReshold:HIGH <ThresClkPos>

Set the positive going threshold (V_{TP}) for the clock signal.

Note that the high and low thresholds and the hysteresis values are dependent, so it is sufficient to define two values for each line.

Suffix:
<b> 1..4

Parameters:
<ThresClkPos> Range: 0 to 2.5
Increment: 0.1
*RST: 0.72
Default unit: V

Manual operation: See "Thresholds" on page 765

BUS<b>:RFFE:CLOCk:THReshold:LOW <ThresClkNeg>

Set the negative going threshold (V_{TN}) for the clock signal.

Note that the high and low thresholds and the hysteresis values are dependent, so it is sufficient to define two values for each line.

Suffix:
<b> 1..4

Parameters:
<ThresClkNeg> Range: 0 to 2.5
Increment: 0.1
*RST: 0.48
Default unit: V

Manual operation: See "Thresholds" on page 765

BUS<b>:RFFE:GFILter <GlitchFilter>

Enables the glitch filter on the SCLK and SDATA lines to improve decode accuracy.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<GlitchFilter> OFF | ON
*RST: OFF

Manual operation: See "Glitch filter" on page 766

BUS<b>:RFFE:GFWidth <GlitchFilterWdt>

Sets the maximum glitch width to be ignored.

Suffix:
<b> 1..4

Parameters:
<GlitchFilterWdt> Range: 10E-12 to 10E-9
Increment: 10E-12
*RST: 1E-9
Default unit: s

Manual operation: See "Glitch filter" on page 766

BUS<b>:RFFE:MINGap:SELect <MinGapSelect>

If the minimum gap is enabled, the instrument detects the specified gap.

Set the minimum gap time using `BUS<b>:RFFE:MINGap:TIME`.

Suffix:
<b> 1..4

Parameters:
<MinGapSelect> OFF | ON
*RST: OFF

Manual operation: See "Timing" on page 766

BUS<b>:RFFE:MINGap:TIME <MinGapTime>

Sets the minimum idle time between the Bus Park Cycle (BP) and Sequence Start Condition (SSC).

The setting is only relevant if `BUS<b>:RFFE:MINGap:SELect` is enabled.

Suffix:
<b> 1..4

Parameters:
<MinGapTime> Range: 1E-9 to 10E-6
Increment: 1E-9
*RST: 10E-9
Default unit: s

Manual operation: See "Timing" on page 766

BUS<b>:RFFE:RDMD <ReadMode>

Selects, if the standard or synchronous read (`SREAD`) mode is used.

Suffix:
<b> 1..4

Parameters:
<ReadMode> STRD | SREAD
*RST: STRD

Manual operation: See "Read mode" on page 765

BUS<b>:RFFE:VERSion <Version>

Selects the RFFE version.

Suffix:
<b> 1..4

Parameters:
<Version> V1DX | V2D0 | V2D1 | V3D0
`V1DX`: 1.x
`V2D0`: 2.0
`V2D1`: 2.1
`V3D0`: 3.0 / 3.1

*RST: V1DX

Manual operation: See "Version" on page 765

26.18.16.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

For programming examples, see "Triggering on RFFE bus" on page 1342.

TRIGger<t>:RFFE:TYPE 2215
TRIGger<t>:RFFE:ADDRess:CONDition 2218
TRIGger<t>:RFFE:ADDRess:MIN 2218
TRIGger<t>:RFFE:ADDRess:MAX 2219
TRIGger<t>:RFFE:BCOunt:CONDition 2219
TRIGger<t>:RFFE:BCOunt:MIN 2219
TRIGger<t>:RFFE:BCOunt:MAX 2220
TRIGger<t>:RFFE:DATA:DCON 2220
TRIGger<t>:RFFE:DATA:DMIN 2220
TRIGger<t>:RFFE:DATA:DMAX 2221
TRIGger<t>:RFFE:DATA:ICONdition 2221
TRIGger<t>:RFFE:DATA:IMIN 2221
TRIGger<t>:RFFE:DATA:IMAX 2222
TRIGger<t>:RFFE:SADDress:CONDition 2222
TRIGger<t>:RFFE:SADDress:MIN 2222
TRIGger<t>:RFFE:SADDress:MAX 2223
TRIGger<t>:RFFE:MASK:CONDition 2223
TRIGger<t>:RFFE:MASK:MAX 2223
TRIGger<t>:RFFE:MASK:MIN 2224
TRIGger<t>:RFFE:INTerrupt 2224
TRIGger<t>:RFFE:ERRor:BP 2224
TRIGger<t>:RFFE:ERRor:LENGth 2224
TRIGger<t>:RFFE:ERRor:NOResponse 2224
TRIGger<t>:RFFE:ERRor:PARity 2225
TRIGger<t>:RFFE:ERRor:SSC 2225
TRIGger<t>:RFFE:ERRor:USEQuence 2225
TRIGger<t>:RFFE:INTerrupt 2226

TRIGger<t>:RFFE:TYPE <Type>

Selects the trigger type for RFFE analysis.

Suffix:
<t> 1..3

Parameters:
<Type> STARt | STOP | RZWR | RWR | RRD | ERWR | ERRD | ERWL | ERRL | IRSUM | MSKW | MOHO | MASOHO | MWR | MASW | MRD | MASR | MCTW | MCTR | ERRor

STARt
Triggers on the beginning of a command sequence, exactly after the sub device address. Optionally, you can specify a sub device address condition.

STOP
Triggers on the end of a command sequence, exactly at the start of the bus park cycle. Optionally, you can specify a sub device address condition.

RZWR
Triggers on Register 0 Write command sequences. Optionally, you can specify a sub device address condition and a data pattern condition.

RWR
Triggers on Register Write command sequences. Optionally, you can specify a sub device address condition, a register address condition, and a data pattern condition.

RRD
Triggers on Register Read command sequences. Optionally, you can specify a sub device address condition, a register address condition, and a data pattern condition.

ERWR
Triggers on Extended Register Write command sequences. Optionally, you can specify a sub device address condition, a register address condition, a byte count condition, a data index condition, and a data pattern condition.

ERRD
Triggers on Extended Register Read command sequences. Optional trigger conditions are the same as for ERWR.

ERWL
Triggers on Extended Register Write Long command sequences. Optional trigger conditions are the same as for ERWR.

ERRL
Triggers on Extended Register Read Long command sequences. Optional trigger conditions are the same as for ERWR.

IRSUM
Triggers on Interrupt Summary and Notification command sequences. Optionally, you can specify a sub device address condition, bit count condition and a data pattern condition.

MSKW
Masked Write command sequence. Optionally, you can specify a sub device address condition, register address condition, mask condition and data pattern condition

MOHO | MASOHO
Triggers onMain Ownership Handover command sequences. Optionally, you can specify a MID condition.

MWR | MASW
Triggers on Main Device Write command sequences. Optionally, you can specify a MID condition, a register address condition, and a data pattern condition.

MRD | MASR
Triggers on Main Device Read command sequences. Optionally, you can specify a MID condition, a register address condition, and a data pattern condition.

MCTW
Main Device Context Transfer Write command sequence. Optional: MID condition, register address condition, byte count condition, data index condition, and data pattern condition.

MCTR
Main Device Context Transfer Read command sequence. Optional search conditions are the same as for `MCTW`.

ERRor
Triggers if one of the enabled errors occurs in a frame.
To enable the error types, use `TRIGger<t>:RFFE:ERRor:BP`, `TRIGger<t>:RFFE:ERRor:LENGth`, `TRIGger<t>:RFFE:ERRor:NOResponse`, `TRIGger<t>:RFFE:ERRor:PARity`, `TRIGger<t>:RFFE:ERRor:SSC`, and `TRIGger<t>:RFFE:ERRor:USEQuence`.

*RST: STARt

Manual operation: See "Type" on page 768

To specify additional trigger cosnditions for command sequences, use the following commands:

Sub device address /MID	`TRIGger<t>:RFFE:SADDress:CONDition`
	`TRIGger<t>:RFFE:SADDress:MIN`
	`TRIGger<t>:RFFE:SADDress:MAX`

Register address	`TRIGger<t>:RFFE:ADDRess:CONDition`
	`TRIGger<t>:RFFE:ADDRess:MIN`
	`TRIGger<t>:RFFE:ADDRess:MAX`

Data pattern	`TRIGger<t>:RFFE:DATA:DCON`
	`TRIGger<t>:RFFE:DATA:DMIN`
	`TRIGger<t>:RFFE:DATA:DMAX`

Mask address	TRIGger<t>:RFFE:MASK:CONDition TRIGger<t>:RFFE:MASK:MAX TRIGger<t>:RFFE:MASK:MIN
Byte count	TRIGger<t>:RFFE:BCOunt:CONDition TRIGger<t>:RFFE:BCOunt:MIN TRIGger<t>:RFFE:BCOunt:MAX
Data index	TRIGger<t>:RFFE:DATA:ICONdition TRIGger<t>:RFFE:DATA:IMIN TRIGger<t>:RFFE:DATA:IMAX

TRIGger<t>:RFFE:ADDRess:CONDition <Address_Operator>

Sets the operator to trigger on a specific address pattern or a range.

Suffix:
<t> 1..3

Parameters:
<Address_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater than, Greater or equal than. These conditions require one pattern to be set with TRIGger<t>:RFFE:ADDRess:MIN.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with TRIGger<t>:RFFE:ADDRess:MIN and TRIGger<t>:RFFE:ADDRess:MAX.

*RST: EQUal

Manual operation: See "Address" on page 773

TRIGger<t>:RFFE:ADDRess:MIN <Address_Min>

Specifies a pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Address_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Address" on page 773

TRIGger<t>:RFFE:ADDRess:MAX <Address_Max>

Sets the end value of a range, if the data condition is set to `INRange` or `OORange`. See `TRIGger<t>:RFFE:ADDRess:CONDition`.

Suffix:
<t> 1..3

Parameters:
<Address_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Address" on page 773

TRIGger<t>:RFFE:BCOunt:CONDition <ByteCountOperator>

Sets the operator to trigger on a specific byte count or a byte count range.

Suffix:
<t> 1..3

Parameters:
<ByteCountOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:RFFE:BCOunt:MIN` command.

INRange | OORange
In range / Out of range: Set the minimum and maximum value using the corresponding `TRIGger<t>:RFFE:BCOunt:MIN` and `TRIGger<t>:RFFE:BCOunt:MAX`

*RST: EQUal

Manual operation: See "Byte count" on page 773

TRIGger<t>:RFFE:BCOunt:MIN <ByteCount_Min>

Specifies a pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<ByteCount_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Byte count" on page 773

TRIGger<t>:RFFE:BCOunt:MAX <ByteCount_Max>

Sets the end value of a range, if the byte/bit count condition is set to `INRange` or `OORange`. See `TRIGger<t>:RFFE:BCOunt:CONDition`.

Suffix:
<t> 1..3

Parameters:
<ByteCount_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Byte count" on page 773

TRIGger<t>:RFFE:DATA:DCON <DataPattOperator>

Sets the operator to trigger on a specific pattern or a range.

Suffix:
<t> 1..3

Parameters:
<DataPattOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:RFFE:DATA:DMIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:RFFE:DATA:DMIN` and `TRIGger<t>:RFFE:DATA:DMAX`

*RST: EQUal

Example: See "Triggering on RFFE bus" on page 1342.

Manual operation: See "Data" on page 774

TRIGger<t>:RFFE:DATA:DMIN <DatPattern_Min>

Specifies a pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<DatPattern_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Example: See "Triggering on RFFE bus" on page 1342.

Manual operation: See "Data" on page 774

TRIGger<t>:RFFE:DATA:DMAX <DatPattern_Max>

Sets the end value of a range, if the data condition is set to `INRange` or `OORange`. See `TRIGger<t>:RFFE:DATA:DCON`.

Suffix:
<t> 1..3

Parameters:
<DatPattern_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Example: See "Triggering on RFFE bus" on page 1342.

Manual operation: See "Data" on page 774

TRIGger<t>:RFFE:DATA:ICONdition <DataIndexOperator>

Sets the operator to define the data frames in which the data pattern is expected.

Suffix:
<t> 1..3

Parameters:
<DataIndexOperator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | LTHan | LETHan | GTHan | GETHan
Equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set using `TRIGger<t>:RFFE:DATA:IMIN`.

INRange = RANGe
In range: Set the minimum and maximum value using `TRIGger<t>:RFFE:DATA:IMIN` and `TRIGger<t>:RFFE:DATA:IMAX`.

*RST: INRange

Manual operation: See "Index" on page 774

TRIGger<t>:RFFE:DATA:IMIN <DataIndex_Min>

Specifies a pattern, or sets the start value of the index range.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Min> Range: 1 to 32
Increment: 1
*RST: 1

Manual operation: See "Index" on page 774

TRIGger<t>:RFFE:DATA:IMAX <DataIndex_Max>

Sets the end value of a range, if the index condition is set to `INRange` or `OORange`. See `TRIGger<t>:RFFE:DATA:ICONdition`.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Max> Range: 1 to 32
Increment: 1
*RST: 32

Manual operation: See "Index" on page 774

TRIGger<t>:RFFE:SADDress:CONDition <SID_Operator>

Sets the operator to trigger on a specific sub device address/MID pattern or a range.

Suffix:
<t> 1..3

Parameters:
<SID_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:RFFE:SADDress:MIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:RFFE:SADDress:MIN` and `TRIGger<t>:RFFE:SADDress:MAX` on page 2223.

*RST: EQUal

Manual operation: See "Sub device addr. /MID" on page 773

TRIGger<t>:RFFE:SADDress:MIN <SID_Min>

Specifies a pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<SID_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Sub device addr. /MID" on page 773

TRIGger<t>:RFFE:SADDress:MAX <SID_Max>

Sets the end value of a range, if the sub device address/MID condition is set to `INRange` or `OORange`. See `SEARch:TRIGger:RFFE:SADDress:CONDition`.

Suffix:
<t> 1..3

Parameters:
<SID_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Sub device addr. /MID" on page 773

TRIGger<t>:RFFE:MASK:CONDition <Mask_Operator>

Sets the operator to trigger on a mask pattern or a range.

Suffix:
<t> 1..3

Parameters:
<Mask_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater than, Greater or equal than. These conditions require one pattern to be set with `TRIGger<t>:RFFE:MASK:MIN`.

INRange | OORange
In range / Out of range: Set the minimum and maximum value of the range with `TRIGger<t>:RFFE:MASK:MIN` and `TRIGger<t>:RFFE:MASK:MAX`.

*RST: EQUal

Manual operation: See "Mask" on page 774

TRIGger<t>:RFFE:MASK:MAX <Mask_Max>

Sets the end value of a range, if themask condition is set to `INRange` or `OORange`. See `TRIGger<t>:RFFE:MASK:CONDition`.

Suffix:
<t> 1..3

Parameters:
<Mask_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (do not care).

Manual operation: See "Mask" on page 774

TRIGger<t>:RFFE:MASK:MIN <Mask_Min>

Specifies a mask pattern, or sets the start value of a mask pattern range.

Suffix:
<t> 1..3

Parameters:
<Mask_Min>

Manual operation: See "Mask" on page 774

TRIGger<t>:RFFE:INTerrupt <Interrupt>

Sets the interrupt pattern for the interupt summary and notification trigger type.

Suffix:
<t> 1..3

Parameters:
<Interrupt>

TRIGger<t>:RFFE:ERRor:BP <BusPark_Error>

Enables the trigger on a bus park error - when an incorrect bus parlk cycle has been found.

Suffix:
<t> 1..3

Parameters:
<BusPark_Error> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 772

TRIGger<t>:RFFE:ERRor:LENGth <Length_Error>

Enables the trigger on a length error - when an incorrect length of the command sequence has been found.

Suffix:
<t> 1..3

Parameters:
<Length_Error> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 772

TRIGger<t>:RFFE:ERRor:NOResponse <NoResponse>

Enables the trigger on any No Response Frame.

Suffix:
<t> 1..3

Parameters:
<NoResponse> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 772

TRIGger<t>:RFFE:ERRor:PARity <Parity_Error>

Enables the trigger on incorrect parity bits.

Suffix:
<t> 1..3

Parameters:
<Parity_Error> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 772

TRIGger<t>:RFFE:ERRor:SSC <SSC_Error>

Enables the trigger on an SSC error - when no valid SSC sequence has been found after the idle time.

Suffix:
<t> 1..3

Parameters:
<SSC_Error> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 772

TRIGger<t>:RFFE:ERRor:USEQuence <UnkSequence_Err>

Enables the trigger on an unknown sequence - when the instrument cannot detect any supported command sequence.

Suffix:
<t> 1..3

Parameters:
<UnkSequence_Err> OFF | ON
*RST: ON

Manual operation: See "Error conditions" on page 772

TRIGger<t>:RFFE:INTerrupt <Interrupt>

Sets the interrupt pattern for the interupt summary and notification trigger type.

Suffix:
<t> 1..3

Parameters:
<Interrupt>

26.18.16.3 Decode results

In all BUS<b>:RFFE commands, the suffix <b> selects the serial bus. Suffix <se> selects index of the command sequence.

To load and acivate a label list, use:

- `BUS<b>:NEWList` on page 1835
- `BUS<b>:SYMBols` on page 1835

BUS<b>:RFFE:FCOunt? 2226
BUS<b>:RFFE:SEQuence<se>:STATe? 2227
BUS<b>:RFFE:SEQuence<se>:STARt? 2227
BUS<b>:RFFE:SEQuence<se>:STOP? 2227
BUS<b>:RFFE:SEQuence<se>:TYPE? 2227
BUS<b>:RFFE:SEQuence<se>:SADD? 2228
BUS<b>:RFFE:SEQuence<se>:ADDRess? 2228
BUS<b>:RFFE:SEQuence<se>:BCOunt? 2229
BUS<b>:RFFE:SEQuence<se>:DATA? 2229
BUS<b>:RFFE:SEQuence<se>:SYMBol? 2229
BUS<b>:RFFE:SEQuence<se>:PADone? 2230
BUS<b>:RFFE:SEQuence<se>:PADZero? 2230
BUS<b>:RFFE:SEQuence<se>:PCTRl? 2230
BUS<b>:RFFE:SEQuence<se>:RBTRate? 2231
BUS<b>:RFFE:SEQuence<se>:WBTRate? 2231
BUS<b>:RFFE:SEQuence<se>:WCOunt? 2231
BUS<b>:RFFE:SEQuence<se>:BYTE<o>:NAME? 2231
BUS<b>:RFFE:SEQuence<se>:BYTE<o>:STATe? 2232
BUS<b>:RFFE:SEQuence<se>:BYTE<o>:VALue? 2232

BUS<b>:RFFE:FCOunt?

Returns the number of command sequences in the current acquisition.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:STATe?

Returns the overall state of the selected command sequence.

Suffix:
<b> 1..4

<se> *

Return values:
<FrameState> OK | SSC | VERSion | PARity | LENGth | BPERR | GAP | NORESPONSE | INComplete

`OK`: the sequence is valid.
`SSC`: SSC error.
`VERSion`: RFFE version.
`PARity`: parity error.
`LENGth`: length error.
`BPERR`: bus park error.
`NORESPONSE`: No response.
`INComplete`: The sequence is not completely contained in the acquisition. The acquired part of the sequence is valid.

*RST: OK

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:STARt?
BUS<b>:RFFE:SEQuence<se>:STOP?

Return the start time (SSC) and stop time (BP) of the selected command sequence.

Suffix:
<b> 1..4

<se> *

Return values:
<Start>, <Stop> Time

Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:TYPE?

Returns the type of the selected command sequence.

Suffix:
<b> 1..4

<se> *

Return values:

<FrameType> UNDESC | RZWR | RWR | RRD | ERWR | ERRD | ERWL | ERRL | IRSUM | MSKW | MOHO | MWR | MRD | MCTW | MCTR | UNDEF | ERRor

`RZWR`: Register 0 Write
`RWR`: Register Write
`RRD`: Register Read
`ERWR`: Extended Register Write
`ERRD`: Extended Register Read
`ERWL`: Extended Register Write Long
`ERRL`: Extended Register Read Long
`MRD`: Main Device Read, was MASR until FW 5.35
`MWR`: Main Device Write, was MASW until FW 5.35
`MOHO`: Main Device Ownership Handover, was MASOHO until FW 5.35
`IRSUM`: Interrupt Summary and Notification
`MSKW`: Masked Write
`MCTR`: Main Device Context Transfer Read
`MCTW`: Main Device Context Transfer Write
`ERRor`: The bits defining the command sequence are not valid, no supported command sequence

*RST: RZWR

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:SADD?

Returns the sub device address of the selected command sequence.

Suffix:

<b> 1..4

<se> *

Return values:

<FrameSID> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:ADDRess?

Returns the register address of the selected command sequence.

Suffix:

<b> 1..4

<se> *

Return values:

<FrameAddress> Range: Depends on the sequence type, address can have 0, 5, 8, or 16 bits
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:BCOunt?

Returns the byte count, the number of data frames in the selected command sequence.

Suffix:

<b> 1..4

<se> *

Return values:

<ByteCount> Decimal value
Range: 15
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:DATA?

Returns the data bytes of the specified command sequence.

Use `BUS<b>:RFFE:SEQuence<se>:BYTE<o>:VALue?` to access the sequence bytes.

Suffix:

<b> 1..4

<se> *

Return values:

<Data> Bit pattern (B1, B2, B3, B4…) in variable length up to eight bytes.

Example:

```
BUS:RFFE:SEQuence3:DATA?
<-- #H08,#H49,#H54,#H33,#HFF
```

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:SYMBol?

Returns the symbolic label that belongs to the address of the selected command sequence.

Suffix:

<b> 1..4

<se> *

Return values:
<Translation> String containing the label name

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:PADone?

Returns the address-one parity for the selected command sequence.

Suffix:
<b> 1..4

<se> *

Return values:
<ParityAddr1> OK | PARity
`PARity`: PArrity error
*RST: OK

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:PADZero?

Returns the address-zero parity for the selected command sequence.

Suffix:
<b> 1..4

<se> *

Return values:
<ParityAddr0> OK | PARity
`PARity`: PArrity error
*RST: OK

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:PCTRl?

Returns the control parity for the selected command sequence.

Suffix:
<b> 1..4

<se> *

Return values:
<ParityCtrl> OK | PARity
`PARity`: PArrity error
*RST: OK

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:RBTRate?

Returns the read bit rate of the selected command sequence.

Suffix:
<b> 1..4

<se> *

Return values:
<ReadBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:WBTRate?

Returns the write bit rate of the selected command sequence.

Suffix:
<b> 1..4

<se> *

Return values:
<WriteBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:WCOunt?

Returns the number of command sequences in the current acquisition.

Suffix:
<b> 1..4

<se> *

Return values:
<WordCount> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:BYTE<o>:NAME?

Returns the name of the specified data byte.

Suffix:
<b> 1..4
<se> *
<o> *
Selects the number of the data byte (1...n).

Return values:
<FrameByteName>

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:BYTE<o>:STATe?

Returns the state of the specified data byte.

Suffix:
<b> 1..4
<se> *
<o> *
Selects the number of the data byte (1...n).

Return values:
<ByteState> OK | PARity
OK: the byte is valid.
PARity: parity error
*RST: OK

Usage: Query only

BUS<b>:RFFE:SEQuence<se>:BYTE<o>:VALue?

Returns the value of the specified byte in the specified command sequence.

Suffix:
<b> 1..4
<se> *
<o> *
Selects the number of the data byte (1...n).

Return values:
<ByteValue> To set the value format, use `FORMat:BPATtern`.
The values below – range, increment and reset – are decimal values.
Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

26.18.16.4 Search settings

For programming example, see "Searching RFFE data" on page 1343.

SEARch:TRIGger:RFFE:TYPE....2233
SEARch:TRIGger:RFFE:SADDress:CONDition....2235
SEARch:TRIGger:RFFE:ADDRess:CONDition....2235
SEARch:TRIGger:RFFE:BCOunt:CONDition....2236
SEARch:TRIGger:RFFE:DATA:DCON....2236
SEARch:TRIGger:RFFE:DATA:ICONdition....2236
SEARch:TRIGger:RFFE:SADDress:MIN....2237
SEARch:TRIGger:RFFE:ADDRess:MIN....2237
SEARch:TRIGger:RFFE:BCOunt:MIN....2237
SEARch:TRIGger:RFFE:DATA:IMIN....2237
SEARch:TRIGger:RFFE:DATA:DMIN....2237
SEARch:TRIGger:RFFE:SADDress:MAX....2237
SEARch:TRIGger:RFFE:ADDRess:MAX....2237
SEARch:TRIGger:RFFE:BCOunt:MAX....2237
SEARch:TRIGger:RFFE:DATA:IMAX....2237
SEARch:TRIGger:RFFE:DATA:DMAX....2237
SEARch:TRIGger:RFFE:INTerrupt....2238
SEARch:TRIGger:RFFE:ERRor:BP....2238
SEARch:TRIGger:RFFE:ERRor:LENGth....2238
SEARch:TRIGger:RFFE:ERRor:NOResponse....2238
SEARch:TRIGger:RFFE:ERRor:PARity....2239
SEARch:TRIGger:RFFE:ERRor:SSC....2239
SEARch:TRIGger:RFFE:ERRor:USEQuence....2239

SEARch:TRIGger:RFFE:TYPE <SearchName>,<Type>
SEARch:TRIGger:RFFE:TYPE? <SearchName>

Sets the event to be searched for.

See also: "Type" on page 778

Parameters:

<Type> STARt | STOP | RZWR | RWR | RRD | ERWR | ERRD | ERWL | ERRL | IRSUM | MSKW | MOHO | MASOHO | MWR | MASW | MRD | MASR | MCTW | MCTR | ERRor

STARt
Start of a command sequence (SSC). Optional: sub device address.

STOP
End of a command sequence (start of the bus park cycle). Optional: sub device address condition.

RZWR
Register 0 Write command sequence. Optional: sub device address condition and data pattern condition.

RWR
Register Write command sequence. Optional: sub device address condition, register address condition, and data pattern condition.

RRD
Register Read command sequence. Optional: sub device address condition, register address condition, and data pattern condition.

ERWR
Extended Register Write command sequences. Optional: sub device address condition, register address condition, byte count condition, data index condition, and data pattern condition.

ERRD
Extended Register Read command sequence. Optional search conditions are the same as for `ERWR`.

ERWL
Extended Register Write Long command sequence. Optional search conditions are the same as for `ERWR`.

ERRL
Extended Register Read Long command sequence. Optional search conditions are the same as for `ERWR`.

MRD | MASR
Main Device Read command sequence. Optional: sub device address condition, register address condition, and data pattern condition.

MWR | MASW
Main Device Write command sequence. Optional: sub device address condition, register address condition, and data pattern condition.

MOHO | MASOHO
Main Device Ownership Handover command sequence. Optional: sub device address condition, and data pattern condition.

MSKW
Masked Write command sequence. Optional: sub device address condition, register address condition, mask condition and data pattern condition.

MCTW
Main Device Context Transfer Write command sequence. Optional: MID condition, register address condition, byte count condition, data index condition, and data pattern condition.

MCTR
Main Device Context Transfer Read command sequence. Optional search conditions are the same as for `MCTW`

IRSUM
Interrupt Summary and Notification. Optional: sub device address condition, byte count condition, and data pattern condition.

ERRor
Searches for enabled errors. To enable the error types, use:
`SEARch:TRIGger:RFFE:ERRor:LENGth`
`SEARch:TRIGger:RFFE:ERRor:PARity`
`SEARch:TRIGger:RFFE:ERRor:SSC`

*RST: STARt

Parameters for setting and query:
<SearchName> String parameter

Example: See "Searching RFFE data" on page 1343

Manual operation: See "Type" on page 778

To specify additional search conditions for command sequences, use the following commands:

Sub device address	`SEARch:TRIGger:RFFE:SADDress:CONDition`
	`SEARch:TRIGger:RFFE:SADDress:MIN`
	`SEARch:TRIGger:RFFE:SADDress:MAX`

Register address	`SEARch:TRIGger:RFFE:ADDRess:CONDition`
	`SEARch:TRIGger:RFFE:ADDRess:MIN`
	`SEARch:TRIGger:RFFE:ADDRess:MAX`

Data pattern	`SEARch:TRIGger:RFFE:DATA:DCON`
	`SEARch:TRIGger:RFFE:DATA:DMIN`
	`SEARch:TRIGger:RFFE:DATA:DMAX`

Byte count	`SEARch:TRIGger:RFFE:BCOunt:CONDition`
	`SEARch:TRIGger:RFFE:BCOunt:MIN`
	`SEARch:TRIGger:RFFE:BCOunt:MAX`

Data index	`SEARch:TRIGger:RFFE:DATA:ICONdition`
	`SEARch:TRIGger:RFFE:DATA:IMIN`
	`SEARch:TRIGger:RFFE:DATA:IMAX`

SEARch:TRIGger:RFFE:SADDress:CONDition <SearchName>,<SID_Operator>
SEARch:TRIGger:RFFE:SADDress:CONDition? <SearchName>
SEARch:TRIGger:RFFE:ADDRess:CONDition <SearchName>,<Address_Operator>
SEARch:TRIGger:RFFE:ADDRess:CONDition? <SearchName>

SEARch:TRIGger:RFFE:BCOunt:CONDition <SearchName>,<ByteCountOperator>
SEARch:TRIGger:RFFE:BCOunt:CONDition? <SearchName>
SEARch:TRIGger:RFFE:DATA:DCON <SearchName>,<DataPattOperator>
SEARch:TRIGger:RFFE:DATA:DCON? <SearchName>

Sets the operator to search for a specific pattern or a range

Parameters:
<DataPattOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set using the corresponding `SEARch:TRIGger:RFFE:...:MIN` command.

INRange | OORange
In range / Out of range: Set the minimum and maximum value using the corresponding `SEARch:TRIGger:RFFE:...:MIN` and `SEARch:TRIGger:RFFE:...:MAX`

*RST: EQUal

Parameters for setting and query:
<SearchName> String parameter

Example: See "Searching RFFE data" on page 1343

Manual operation: See "Data" on page 781

SEARch:TRIGger:RFFE:DATA:ICONdition <SearchName>,<DataIndexOperator>
SEARch:TRIGger:RFFE:DATA:ICONdition? <SearchName>

Sets the operator to define the data frames in which the data pattern is searched

Parameters:
<DataIndexOperator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | LTHan | LETHan | GTHan | GETHan
Equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set using `SEARch:TRIGger:RFFE:DATA:IMIN`.

INRange = RANGe
In range: Set the minimum and maximum value using `SEARch:TRIGger:RFFE:DATA:IMIN` and `SEARch:TRIGger:RFFE:DATA:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Index" on page 781

SEARch:TRIGger:RFFE:SADDress:MIN <SearchName>,<SID_Min>
SEARch:TRIGger:RFFE:SADDress:MIN? <SearchName>
SEARch:TRIGger:RFFE:ADDRess:MIN <SearchName>,<Address_Min>
SEARch:TRIGger:RFFE:ADDRess:MIN? <SearchName>
SEARch:TRIGger:RFFE:BCOunt:MIN <SearchName>,<ByteCount_Min>
SEARch:TRIGger:RFFE:BCOunt:MIN? <SearchName>
SEARch:TRIGger:RFFE:DATA:IMIN <SearchName>,<DataIndex_Min>
SEARch:TRIGger:RFFE:DATA:IMIN? <SearchName>
SEARch:TRIGger:RFFE:DATA:DMIN <SearchName>,<DatPattern_Min>
SEARch:TRIGger:RFFE:DATA:DMIN? <SearchName>

Specifies a pattern, or sets the the start value of a pattern range.

Parameters:
<DatPattern_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Example: See "Searching RFFE data" on page 1343

Manual operation: See "Data" on page 781

SEARch:TRIGger:RFFE:SADDress:MAX <SearchName>,<SID_Max>
SEARch:TRIGger:RFFE:SADDress:MAX? <SearchName>
SEARch:TRIGger:RFFE:ADDRess:MAX <SearchName>,<Address_Max>
SEARch:TRIGger:RFFE:ADDRess:MAX? <SearchName>
SEARch:TRIGger:RFFE:BCOunt:MAX <SearchName>,<ByteCount_Max>
SEARch:TRIGger:RFFE:BCOunt:MAX? <SearchName>
SEARch:TRIGger:RFFE:DATA:IMAX <SearchName>,<DataIndex_Max>
SEARch:TRIGger:RFFE:DATA:IMAX? <SearchName>
SEARch:TRIGger:RFFE:DATA:DMAX <SearchName>,<DatPattern_Max>
SEARch:TRIGger:RFFE:DATA:DMAX? <SearchName>

Sets the the end value of an range if the corresponding condition is set to `INRange` or `OORange`. See `SEARch:TRIGger:RFFE:...:CON`

Parameters:
<DatPattern_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Data" on page 781

SEARch:TRIGger:RFFE:INTerrupt <SearchName>,<Interrupt>
SEARch:TRIGger:RFFE:INTerrupt? <SearchName>

Defines the pattern of the interrrupt identification sequence, which consists of interrupt slots 15 to 0.

Parameters:
<Interrupt> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName> String parameter

Firmware/software: FW 3.30

Manual operation: See "Data" on page 781

SEARch:TRIGger:RFFE:ERRor:BP <SearchName>,<BusPark_Error>
SEARch:TRIGger:RFFE:ERRor:BP? <SearchName>

Enables the search for bus park errors - when an incorrect bus parlk cycle has been found.

Parameters:
<BusPark_Error> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Error conditions" on page 781

SEARch:TRIGger:RFFE:ERRor:LENGth <SearchName>,<Length_Error>
SEARch:TRIGger:RFFE:ERRor:LENGth? <SearchName>

Enables the search for length errors - when an incorrect length of the command sequence has been found.

Parameters:
<Length_Error> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Error conditions" on page 781

SEARch:TRIGger:RFFE:ERRor:NOResponse <SearchName>,<NoResponse>
SEARch:TRIGger:RFFE:ERRor:NOResponse? <SearchName>

Enables the search for No Response Frames.

Parameters:
<NoResponse> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Error conditions" on page 781

SEARch:TRIGger:RFFE:ERRor:PARity <SearchName>,<Parity_Error>
SEARch:TRIGger:RFFE:ERRor:PARity? <SearchName>

Enables the search for incorrect parity bits.

Parameters:
<Parity_Error> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Error conditions" on page 781

SEARch:TRIGger:RFFE:ERRor:SSC <SearchName>,<SSC_Error>
SEARch:TRIGger:RFFE:ERRor:SSC? <SearchName>

Enables the search for SSC errors - when no valid SSC sequence has been found after the idle time.

Parameters:
<SSC_Error> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Error conditions" on page 781

SEARch:TRIGger:RFFE:ERRor:USEQuence <SearchName>,<UnkSequence_Err>
SEARch:TRIGger:RFFE:ERRor:USEQuence? <SearchName>

Enables the search for unknown sequences - when the instrument cannot detect any supported command sequence.

Parameters:
<UnkSequence_Err> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String parameter

Manual operation: See "Error conditions" on page 781

26.18.16.5 Search results

The search on decoded RFFE data returns the same results as the queries for decode results.

In all SEARch:RESult:RFFE commands, the suffix <m> selects the command sequence. Suffix <n> selects index of byte inside a command sequence.

In search result commands, you have to specify the <SearchName> parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.16.3, "Decode results", on page 2226.

For programming example, see "Searching RFFE data" on page 1343.

SEARch:RESult:RFFE:SEQuence<se>:ADDRess? 2240
SEARch:RESult:RFFE:SEQuence<se>:BCOunt? 2240
SEARch:RESult:RFFE:SEQuence<se>:DATA? 2241
SEARch:RESult:RFFE:FCOunt? 2241
SEARch:RESult:RFFE:SEQuence<se>:SADD? 2241
SEARch:RESult:RFFE:SEQuence<se>:STATe? 2241
SEARch:RESult:RFFE:SEQuence<se>:STARt? 2242
SEARch:RESult:RFFE:SEQuence<se>:STOP? 2242
SEARch:RESult:RFFE:SEQuence<se>:SYMBol? 2242
SEARch:RESult:RFFE:SEQuence<se>:TYPE? 2243
SEARch:RESult:RFFE:SEQuence<se>:BYTE<n>:STATe? 2243
SEARch:RESult:RFFE:SEQuence<se>:BYTE<n>:VALue? 2243

SEARch:RESult:RFFE:SEQuence<se>:ADDRess? <SearchName>

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<FrameAddress> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:BCOunt? <SearchName>

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<ByteCount> Range: 0 to 256
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:DATA? <SearchName>

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:RFFE:FCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:SADD? <SearchName>

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<FrameSID> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:STATe? <SearchName>

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<FrameState> OK | SSC | VERSion | PARity | LENGth | BPERR | GAP | NORESPONSE | INComplete
*RST: OK

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:STARt? <SearchName>

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<FrameStart> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:STOP? <SearchName>

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<FrameStop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:SYMBol? <SearchName>

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<Translation>

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:TYPE? <SearchName>

Returns the type of the specified command sequence.

Suffix:
<se> *

Query parameters:
<SearchName>

Return values:
<FrameType> UNDESC | RZWR | RWR | RRD | ERWR | ERRD | ERWL | ERRL | IRSUM | MSKW | MOHO | MWR | MRD | MCTW | MCTR | UNDEF | ERRor

See `SEARch:TRIGger:RFFE:TYPE`.

*RST: RZWR

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:BYTE<n>:STATe? <SearchName>

Suffix:
<se> *

<n> *

Query parameters:
<SearchName>

Return values:
<FrameByteState> OK | PARity

OK: the byte is valid.
PARity: parity error

*RST: OK

Usage: Query only

SEARch:RESult:RFFE:SEQuence<se>:BYTE<n>:VALue? <SearchName>

Suffix:
<se> *

<n> *

Query parameters:
<SearchName>

Return values:
<FrameByteValue> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

26.18.17 D-PHY (option R&S RTP-K42)

- D-PHY configuration 2244
- D-PHY trigger 2250
- D-PHY decode results 2258
- D-PHY search settings 2264
- D-PHY search results 2273

26.18.17.1 D-PHY configuration

BUS<b>:DPHY:CONFig 2244
BUS<b>:DPHY:CP:PROBe 2245
BUS<b>:DPHY:CP:SOURce 2245
BUS<b>:DPHY:DRATe 2246
BUS<b>:DPHY:DSPData 2246
BUS<b>:DPHY:THCoupling 2246
BUS<b>:DPHY:THPReset 2246
BUS<b>:DPHY:VARiant 2247
BUS<b>:DPHY:DNZero:LPOWer:THUPper 2247
BUS<b>:DPHY:DPZero:LPOWer:THUPper 2247
BUS<b>:DPHY:DNZero:LPOWer:THLower 2247
BUS<b>:DPHY:DPZero:LPOWer:THLower 2247
BUS<b>:DPHY:DPZero:SOURce 2248
BUS<b>:DPHY:DNZero:SOURce 2248
BUS<b>:DPHY:DPONe:SOURce 2248
BUS<b>:DPHY:DPTWo:SOURce 2248
BUS<b>:DPHY:DPTHree:SOURce 2248
BUS<b>:DPHY:DNZero:PROBe 2248
BUS<b>:DPHY:DPZero:PROBe 2248
BUS<b>:DPHY:DPONe:PROBe 2248
BUS<b>:DPHY:DPTWo:PROBe 2248
BUS<b>:DPHY:DPTHree:PROBe 2248
BUS<b>:DPHY:CP:HSPeed:HYSTeresis 2249
BUS<b>:DPHY:DPZero:HSPeed:HYSTeresis 2249
BUS<b>:DPHY:DPONe:HSPeed:HYSTeresis 2249
BUS<b>:DPHY:DPTWo:HSPeed:HYSTeresis 2249
BUS<b>:DPHY:DPTHree:HSPeed:HYSTeresis 2249
BUS<b>:DPHY:CP:HSPeed:THReshold 2249
BUS<b>:DPHY:DPZero:HSPeed:THReshold 2249
BUS<b>:DPHY:DPONe:HSPeed:THReshold 2249
BUS<b>:DPHY:DPTWo:HSPeed:THReshold 2249
BUS<b>:DPHY:DPTHree:HSPeed:THReshold 2249
BUS<b>:DPHY:SMLanes 2249

BUS<b>:DPHY:CONFig <Configuration>

Sets the number of data lanes and if the clock lane and low power are available.

Suffix:
<b> 1..4

Parameters:
<Configuration> D1CN | D1CL | D2CN | D2CL | D3CN | D3NL | D4NN

D1CN: 1 data lane, clock lane
D1CL: 1 data lane, clock lane, low power
D2CN: 2 data lanes, clock lane
D2CL: 2 data lanes, clock lane, low power
D3CN: 3 data lanes, clock lane
D3NL: 3 data lanes, no clock, low power
D4NN: 4 data lanes and no clock

*RST: D4NN

Manual operation: See "Physical configuration" on page 784

BUS<b>:DPHY:CP:PROBe <Probe_CP>

Selects the type of probe used for the clock lane.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Probe_CP> DIFFerential | SINGle

*RST: SINGle

BUS<b>:DPHY:CP:SOURce <ClockSource>

Selects the source of the clock lane.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Alternatively, digital channels can be used if MSO option R&S RTP-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ClockSource> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

*RST: NONE

Manual operation: See "CP" on page 784

BUS<b>:DPHY:DRATe <DataRate>

Sets a data rate.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<DataRate> Range: 1E+6 to 2.5E+9
Increment: 1E+6
*RST: 800E+6
Default unit: bps

Manual operation: See "Clock rate" on page 786

BUS<b>:DPHY:DSPData <DispDatVect>

Enables the display of the data vector, which means that the whole frame will be decoded.

When the display vector is disabled only the packet header will be decoded and not the actual data payload of the frame. This will speed up the decoding.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<DispDatVect> OFF | ON
*RST: OFF

Manual operation: See "Clock rate" on page 786

BUS<b>:DPHY:THCoupling <ThresCpl>

Enables coupling, i.e. the same threshold and hysteresis value is used for all lanes.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ThresCpl> OFF | ON
*RST: ON

Manual operation: See "Couple thresholds" on page 786

BUS<b>:DPHY:THPReset <ThresPreset>

Prests the threshold and hysteresis values of the high speed data lanes. A preset sets the low power threshold to 1.20V and high speed threshold to 200 mV.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ThresPreset> LPHS | MANual
*RST: LPHS

BUS<b>:DPHY:VARiant <ProtSel>

Selects the protocol running on the interface.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ProtSel> DSI | CSI2
*RST: CSI2

Manual operation: See "Variant" on page 786

BUS<b>:DPHY:DNZero:LPOWer:THUPper <ThreshDN0High>
BUS<b>:DPHY:DPZero:LPOWer:THUPper <ThreshDP0High>

Sets the upper threshold value for the respective lane used for the low power mode.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ThreshDP0High> Range: -1.5 to 1.5
Increment: 0.01
*RST: 0.88
Default unit: V

Manual operation: See "LP upper" on page 786

BUS<b>:DPHY:DNZero:LPOWer:THLower <ThreshDN0Low>
BUS<b>:DPHY:DPZero:LPOWer:THLower <ThreshDP0Low>

Sets the lower threshold value for the respective lane used for the low power mode.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<ThreshDP0Low> Range: -1.5 to 1.5
Increment: 0.01
*RST: 0.55
Default unit: V

Manual operation: See "LP lower" on page 785

BUS<b>:DPHY:DPZero:SOURce <DataSource>

Selects the source of the DP0 data line.

Suffix:
<b> 1..4

Parameters:
<DataSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

*RST: C1W1

Manual operation: See "DP0/DN0" on page 784

BUS<b>:DPHY:DNZero:SOURce <DataSource>
BUS<b>:DPHY:DPONe:SOURce <DataSource>
BUS<b>:DPHY:DPTWo:SOURce <DataSource>
BUS<b>:DPHY:DPTHree:SOURce <DataSource>

Selects the source of the corresponding data line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<DataSource> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

*RST: DNZero: NONE, DPONe: C2W1, DPTWo: C3W1, DPTHree: C4W1

Manual operation: See "DP1/DP2/DP3" on page 784

BUS<b>:DPHY:DNZero:PROBe <Probe_DN0>
BUS<b>:DPHY:DPZero:PROBe <Probe_DP0>
BUS<b>:DPHY:DPONe:PROBe <Probe_DP1>
BUS<b>:DPHY:DPTWo:PROBe <Probe_DP2>
BUS<b>:DPHY:DPTHree:PROBe <Probe_DP3>

Selects the type of probe used for the corresponding data lane.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Probe_DP3> DIFFerential | SINGle

*RST: SINGle

BUS<b>:DPHY:CP:HSPeed:HYSTeresis <Hysteresis_HS_CP>
BUS<b>:DPHY:DPZero:HSPeed:HYSTeresis <Hysteresis_HS_DP0>
BUS<b>:DPHY:DPONe:HSPeed:HYSTeresis <Hysteresis_HS_DP1>
BUS<b>:DPHY:DPTWo:HSPeed:HYSTeresis <Hysteresis_HS_DP2>
BUS<b>:DPHY:DPTHree:HSPeed:HYSTeresis <Hysteresis_HS_DP3>

Sets a value for the hysteresis of the respective lane.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Hysteresis_HS_DP3> Range: 0 to 0.5
Increment: 0.01
*RST: 0.2
Default unit: V

Manual operation: See "HS Hysteresis" on page 785

BUS<b>:DPHY:CP:HSPeed:THReshold <Threshold_HS_CP>
BUS<b>:DPHY:DPZero:HSPeed:THReshold <Threshold_HS_DP0>
BUS<b>:DPHY:DPONe:HSPeed:THReshold <Threshold_HS_DP1>
BUS<b>:DPHY:DPTWo:HSPeed:THReshold <Threshold_HS_DP2>
BUS<b>:DPHY:DPTHree:HSPeed:THReshold <Threshold_HS_DP3>

Sets the threshold value for the digitization of the respective high speed data line.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Threshold_HS_DP3> Range: -1 to 1
Increment: 0.01
*RST: 0.2
Default unit: V

Manual operation: See "High speed threshold" on page 785

BUS<b>:DPHY:SMLanes <Active>

Enables the display of the results in multiple lanes.

Suffix:
<b> 1..4

Parameters:
<Active> OFF | ON
*RST: ON

Manual operation: See "Show multiple lanes" on page 788

26.18.17.2 D-PHY trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:DPHY:TYPE 2250
TRIGger<t>:DPHY:DATA:CONDition 2251
TRIGger<t>:DPHY:DATA:MAX 2251
TRIGger<t>:DPHY:DATA:MIN 2252
TRIGger<t>:DPHY:DIDX:CONDition 2252
TRIGger<t>:DPHY:DIDX:MAX 2252
TRIGger<t>:DPHY:DIDX:MIN 2253
TRIGger<t>:DPHY:DTYPe:CONDition 2253
TRIGger<t>:DPHY:DTYPe:MAX 2253
TRIGger<t>:DPHY:DTYPe:MIN 2254
TRIGger<t>:DPHY:ESCMode:CONDition 2254
TRIGger<t>:DPHY:ESCMode:MAX 2254
TRIGger<t>:DPHY:ESCMode:MIN 2255
TRIGger<t>:DPHY:ESDTa:CONDition 2255
TRIGger<t>:DPHY:ESDTa:MAX 2255
TRIGger<t>:DPHY:ESDTa:MIN 2256
TRIGger<t>:DPHY:ESINdex:CONDition 2256
TRIGger<t>:DPHY:ESINdex:MAX 2256
TRIGger<t>:DPHY:ESINdex:MIN 2257
TRIGger<t>:DPHY:HSVC 2257
TRIGger<t>:DPHY:WCOunt:CONDition 2257
TRIGger<t>:DPHY:WCOunt:MAX 2258
TRIGger<t>:DPHY:WCOunt:MIN 2258

TRIGger<t>:DPHY:TYPE <Type>

Sets the type of frame to be triggered on.

Suffix:
<t> 1..3

Parameters:
<Type> HS_SOP | HS_EOP | HS_PH | HS_DATA | LP_ESC | LP_TURN | LP_HSRQ

HS_SOP
High speed start of packet

HS_EOP
High speed end of packet

HS_PH
High speed packet header

HS_DATA
High speed data

LP_ESC
Low power escape mode frame

LP_TURN
Low power lane turnaround

LP_HSRQ
Low power high speed request

*RST: HS_SOP

Manual operation: See "Type" on page 789

TRIGger<t>:DPHY:DATA:CONDition <Format>

Set the condition for the data value. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Format> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:DPHY:DATA:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:DPHY:DATA:MIN` and `TRIGger<t>:DPHY:DATA:MAX`.

*RST: EQUal

Manual operation: See "Data Value" on page 792

TRIGger<t>:DPHY:DATA:MAX <DataMax>

Sets the the end value of a data type range if `TRIGger<t>:DPHY:DATA:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<DataMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data Value" on page 792

TRIGger<t>:DPHY:DATA:MIN <DataMin>

Specifies a data bit pattern, or sets the the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<DataMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data Value" on page 792

TRIGger<t>:DPHY:DIDX:CONDition <Format>

Sets the condition for the data index. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Format> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:DPHY:DIDX:MIN` command.

INRange = RANGe
In range: Set the minimum and maximum value using `TRIGger<t>:DPHY:DIDX:MIN` and `TRIGger<t>:DPHY:DIDX:MAX`.

*RST: INRange

Manual operation: See "Data Index" on page 793

TRIGger<t>:DPHY:DIDX:MAX <DXSymbol>

Sets the the end value of a data index range if `TRIGger<t>:DPHY:DIDX:CONDition` is set to `INRange` or `RANge`.

Suffix:
<t> 1..3

Parameters:
<DXSymbol> Range: 0 to 65.535E+3
Increment: 1
*RST: 65535

Manual operation: See "Data Index" on page 793

TRIGger<t>:DPHY:DIDX:MIN <SymbolType>

Specifies a data index minimum, or sets the the start value of a range.

Suffix:
<t> 1..3

Parameters:
<SymbolType> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Manual operation: See "Data Index" on page 793

TRIGger<t>:DPHY:DTYPe:CONDition <Format>

Set the condition for the data type. You can define an exact value or a value range

Suffix:
<t> 1..3

Parameters:
<Format> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:DPHY:DTYPe:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:DPHY:DTYPe:MIN` and `TRIGger<t>:DPHY:DTYPe:MAX`.

*RST: EQUal

Manual operation: See "Data Type" on page 792

TRIGger<t>:DPHY:DTYPe:MAX <DataTypeMax>

Sets the the end value of a data type range if `TRIGger<t>:DPHY:DTYPe:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<DataTypeMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data Type" on page 792

TRIGger<t>:DPHY:DTYPe:MIN <DataTypeMin>

Specifies a data type pattern, or sets the the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<DataTypeMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data Type" on page 792

TRIGger<t>:DPHY:ESCMode:CONDition <Format>

Set the condition for the escape mode. You can define an exact value or a value range

Suffix:
<t> 1..3

Parameters:
<Format> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:DPHY:ESCMode:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:DPHY:ESCMode:MIN` and `TRIGger<t>:DPHY:ESCMode:MAX`.

*RST: EQUal

Manual operation: See "Escape mode" on page 793

TRIGger<t>:DPHY:ESCMode:MAX <EscapeModeMax>

Sets the the end value of an escape mode range if `TRIGger<t>:DPHY:ESCMode:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<EscapeModeMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Escape mode" on page 793

TRIGger<t>:DPHY:ESCMode:MIN <EscapeModeMin>

Specifies a escape mode bit pattern, or sets the the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<EscapeModeMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Escape mode" on page 793

TRIGger<t>:DPHY:ESDTa:CONDition <Format>

Set the condition for the escape mode data value. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Format> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:DPHY:ESDTa:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:DPHY:ESDTa:MIN` and `TRIGger<t>:DPHY:ESDTa:MAX`.

OFF | ANY
Any pattern is detected.

*RST: EQUal

Manual operation: See "Data Value" on page 792

TRIGger<t>:DPHY:ESDTa:MAX <LPEscapeDataMax>

Sets the the end value of a escape mode data type range if `TRIGger<t>:DPHY:ESDTa:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<LPEscapeDataMax>

Manual operation: See "Data Value" on page 792

TRIGger<t>:DPHY:ESDTa:MIN <LPEscapeDataMin>

Specifies an escape mode data bit pattern, or sets the the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<LPEscapeDataMin>

Manual operation: See "Data Value" on page 792

TRIGger<t>:DPHY:ESINdex:CONDition <Format>

Sets the condition for the escape mode data index. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Format> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:DPHY:ESINdex:MIN` command.

INRange = RANGe
In range: Set the minimum and maximum value using `TRIGger<t>:DPHY:ESINdex:MIN` and `TRIGger<t>:DPHY:ESINdex:MAX`.

*RST: INRange

Manual operation: See "Data Index" on page 793

TRIGger<t>:DPHY:ESINdex:MAX <DXSymbol>

Sets the the end value of a data index range if `TRIGger<t>:DPHY:ESINdex:CONDition` is set to `INRange` or `RANge`.

Suffix:
<t> 1..3

Parameters:

<DXSymbol> Range: 0 to 255
Increment: 1
*RST: 255

Manual operation: See "Data Index" on page 793

TRIGger<t>:DPHY:ESINdex:MIN <SymbolType>

Specifies an escape mode data index minimum, or sets the the start value of a range.

Suffix:

<t> 1..3

Parameters:

<SymbolType> Range: 0 to 255
Increment: 1
*RST: 0

Manual operation: See "Data Index" on page 793

TRIGger<t>:DPHY:HSVC <SymbolType>

Sets the virtual channel to be triggered on.

Suffix:

<t> 1..3

Parameters:

<SymbolType>

Manual operation: See "Virtual Channel" on page 792

TRIGger<t>:DPHY:WCOunt:CONDition <Format>

Set the condition for the word count. You can define an exact value or a value range.

Suffix:

<t> 1..3

Parameters:

<Format> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:DPHY:WCOunt:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:DPHY:WCOunt:MIN` and `TRIGger<t>:DPHY:WCOunt:MAX`.

*RST: EQUal

Manual operation: See "Word Count" on page 792

TRIGger<t>:DPHY:WCOunt:MAX <WordCountMax>

Sets the the end value of a data type range if `TRIGger<t>:DPHY:WCOunt:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<WordCountMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Word Count" on page 792

TRIGger<t>:DPHY:WCOunt:MIN <WordCountMin>

Specifies a word bit pattern, or sets the the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<WordCountMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Word Count" on page 792

26.18.17.3 D-PHY decode results

To show the results on the screen, use the following commands:

- `BUS<b>:RESult` on page 1834

BUS<b>:DPHY:RESult:FCOunt? 2259
BUS<b>:DPHY:RESult:FRAMe<fr>:CS? 2259
BUS<b>:DPHY:RESult:FRAMe<fr>:DATA? 2259
BUS<b>:DPHY:RESult:FRAMe<fr>:DTName? 2260
BUS<b>:DPHY:RESult:FRAMe<fr>:DTYPe? 2260
BUS<b>:DPHY:RESult:FRAMe<fr>:ECC? 2260
BUS<b>:DPHY:RESult:FRAMe<fr>:PACKet<pa>:IDX? 2260
BUS<b>:DPHY:RESult:FRAMe<fr>:PACKet<pa>:VALue? 2261
BUS<b>:DPHY:RESult:FRAMe<fr>:STARt? 2261
BUS<b>:DPHY:RESult:FRAMe<fr>:STATe? 2262
BUS<b>:DPHY:RESult:FRAMe<fr>:STOP? 2262
BUS<b>:DPHY:RESult:FRAMe<fr>:TYPE? 2262
BUS<b>:DPHY:RESult:FRAMe<fr>:NUMPackets? 2263
BUS<b>:DPHY:RESult:FRAMe<fr>:VCHannel? 2263

BUS<b>:DPHY:RESult:FCOunt?

Returns the number of decoded frames for the selected serial bus.

Suffix:
<b> 1..4

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:CS?

Returns the checksum of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<CS> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:DATA?

Returns the data or word count value.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<WordCntOrDat> 16 bit integer value
Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Example:
```
BUS:DPHY:RESult:FRAMe2:DATA?
<-- 13245
```

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:DTName?

Returns the data type name for the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<DataTypeName>

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:DTYPe?

Returns the data type for the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<DataType> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:ECC?

Returns the error correction code (ECC) of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<ECC> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:PACKet<pa>:IDX?

Returns the index of the data payload.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<pa> *
Selects the packet number.

Return values:
<PacketIndex> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:PACKet<pa>:VALue?

Returns the byte value of the data payload.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<pa> *
Selects the packet number.

Return values:
<PacketValue> Range: 0 to 9.22337E+18
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:STATe?

Returns the overall state of the frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<State> OK | CS | ECC | ECCWarning | LENGth | FORMat | UNKNOWN_FRAME | INComplete

OK
The frame is valid.

LENGth
Length error.

UNKNOWN_FRAME
Unknown frame type

INComplete
The sequence is not completely contained in the acquisition

*RST: OK

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:TYPE?

Returns the type of frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<FrameType> HS_SP | HS_LP | HS_INCOMPLETE | LP_HSREQ | LP_TA | LP_ESC

HS_SP
High speed short packet frame

HS_LP
High speed long packet frame

HS_INCOMPLETE
Incomplete high speed frame

LP_HSREQ
High speed request frame

LP_TA
Low power lane turnaround frame

LP_ESC
Low power escape mode frame

*RST: HS_SP

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:NUMPackets?

Returns the number of packets in the indicated frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<NumPackets> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DPHY:RESult:FRAMe<fr>:VCHannel?

Returns the number of virtual channels.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<VirtualChannel> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

26.18.17.4 D-PHY search settings

SEARch:TRIGger:DPHY:TYPE....2264
SEARch:TRIGger:DPHY:DATA:CONDition....2265
SEARch:TRIGger:DPHY:DATA:MAX....2265
SEARch:TRIGger:DPHY:DATA:MIN....2266
SEARch:TRIGger:DPHY:DIDX:CONDition....2266
SEARch:TRIGger:DPHY:DIDX:MAX....2266
SEARch:TRIGger:DPHY:DIDX:MIN....2267
SEARch:TRIGger:DPHY:DTYPe:CONDition....2267
SEARch:TRIGger:DPHY:DTYPe:MAX....2268
SEARch:TRIGger:DPHY:DTYPe:MIN....2268
SEARch:TRIGger:DPHY:ESCMode:CONDition....2268
SEARch:TRIGger:DPHY:ESCMode:MAX....2269
SEARch:TRIGger:DPHY:ESCMode:MIN....2269
SEARch:TRIGger:DPHY:ESDTa:CONDition....2269
SEARch:TRIGger:DPHY:ESDTa:MAX....2270
SEARch:TRIGger:DPHY:ESDTa:MIN....2270
SEARch:TRIGger:DPHY:ESINdex:CONDition....2270
SEARch:TRIGger:DPHY:ESINdex:MAX....2271
SEARch:TRIGger:DPHY:ESINdex:MIN....2271
SEARch:TRIGger:DPHY:HSVC....2271
SEARch:TRIGger:DPHY:WCOunt:CONDition....2272
SEARch:TRIGger:DPHY:WCOunt:MAX....2272
SEARch:TRIGger:DPHY:WCOunt:MIN....2272

SEARch:TRIGger:DPHY:TYPE <SearchName>,<Type>
SEARch:TRIGger:DPHY:TYPE? <SearchName>

Sets the type of frame to be searched for.

Parameters:
<Type> HS_SOP | HS_EOP | HS_PH | HS_DATA | LP_ESC | LP_TURN | LP_HSRQ

HS_SOP
High speed start of packet

HS_EOP
High speed end of packet

HS_PH
High speed packet header

HS_DATA
High speed data

LP_ESC
Low power escape mode frame

LP_TURN
Low power lane turnaround

LP_HSRQ
Low power high speed request

*RST: HS_SOP

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 796

SEARch:TRIGger:DPHY:DATA:CONDition <SearchName>,<Format>
SEARch:TRIGger:DPHY:DATA:CONDition? <SearchName>

Set the condition for the data value. You can define an exact value or a value range.

Parameters:
<Format> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:DPHY:DATA:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:DPHY:DATA:MIN` and `SEARch:TRIGger:DPHY:DATA:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Value" on page 797

SEARch:TRIGger:DPHY:DATA:MAX <SearchName>,<DataMax>
SEARch:TRIGger:DPHY:DATA:MAX? <SearchName>

Sets the the end value of a data type range if `SEARch:TRIGger:DPHY:DATA:CONDition` is set to `INRange` or `OORange`.

Parameters:
<DataMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Value" on page 797

SEARch:TRIGger:DPHY:DATA:MIN <SearchName>,<DataMin>
SEARch:TRIGger:DPHY:DATA:MIN? <SearchName>

Specifies a data bit pattern, or sets the the start value of a pattern range.

Parameters:
<DataMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Value" on page 797

SEARch:TRIGger:DPHY:DIDX:CONDition <SearchName>,<Format>
SEARch:TRIGger:DPHY:DIDX:CONDition? <SearchName>

Sets the condition for the data index. You can define an exact value or a value range.

Parameters:
<Format> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:DPHY:DIDX:MIN` command.

INRange = RANGe
In range: Set the minimum and maximum value using `SEARch:TRIGger:DPHY:DIDX:MIN` and `SEARch:TRIGger:DPHY:DIDX:MAX`.

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Index" on page 798

SEARch:TRIGger:DPHY:DIDX:MAX <SearchName>,<IndexMax>
SEARch:TRIGger:DPHY:DIDX:MAX? <SearchName>

Sets the the end value of a data index range if `SEARch:TRIGger:DPHY:DIDX:CONDition` is set to `INRange` or `RANge`.

Parameters:
<IndexMax> Range: 0 to 65.535E+3
Increment: 1
*RST: 65535

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Index" on page 798

SEARch:TRIGger:DPHY:DIDX:MIN <SearchName>,<IndexMin>
SEARch:TRIGger:DPHY:DIDX:MIN? <SearchName>

Specifies a data index minimum, or sets the the start value of a range.

Parameters:
<IndexMin> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Index" on page 798

SEARch:TRIGger:DPHY:DTYPe:CONDition <SearchName>,<Format>
SEARch:TRIGger:DPHY:DTYPe:CONDition? <SearchName>

Set the condition for the data type. You can define an exact value or a value range

Parameters:
<Format> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:DPHY:DTYPe:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:DPHY:DATA:MIN` and `SEARch:TRIGger:DPHY:DATA:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Type" on page 797

SEARch:TRIGger:DPHY:DTYPe:MAX <SearchName>,<DataTypeMax>
SEARch:TRIGger:DPHY:DTYPe:MAX? <SearchName>

Sets the the end value of a data type range if `SEARch:TRIGger:DPHY:DTYPe:CONDition` is set to `INRange` or `OORange`.

Parameters:
<DataTypeMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Type" on page 797

SEARch:TRIGger:DPHY:DTYPe:MIN <SearchName>,<DataTypeMin>
SEARch:TRIGger:DPHY:DTYPe:MIN? <SearchName>

Specifies a data type pattern, or sets the the start value of a pattern range.

Parameters:
<DataTypeMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Type" on page 797

SEARch:TRIGger:DPHY:ESCMode:CONDition <SearchName>,<Format>
SEARch:TRIGger:DPHY:ESCMode:CONDition? <SearchName>

Set the condition for the escape mode. You can define an exact value or a value range

Parameters:
<Format> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:DPHY:ESCMode:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:DPHY:ESCMode:MIN` and `SEARch:TRIGger:DPHY:ESCMode:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Escape mode" on page 798

SEARch:TRIGger:DPHY:ESCMode:MAX <SearchName>,<EscapeModeMax>
SEARch:TRIGger:DPHY:ESCMode:MAX? <SearchName>

Sets the the end value of an escape mode range if `SEARch:TRIGger:DPHY:ESCMode:CONDition` is set to `INRange` or `OORange`.

Parameters:
<EscapeModeMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Escape mode" on page 798

SEARch:TRIGger:DPHY:ESCMode:MIN <SearchName>,<EscapeModeMin>
SEARch:TRIGger:DPHY:ESCMode:MIN? <SearchName>

Specifies a escape mode bit pattern, or sets the the start value of a pattern range.

Parameters:
<EscapeModeMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Escape mode" on page 798

SEARch:TRIGger:DPHY:ESDTa:CONDition <SearchName>,<Format>
SEARch:TRIGger:DPHY:ESDTa:CONDition? <SearchName>

Set the condition for the escape mode data value. You can define an exact value or a value range.

Parameters:
<Format> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:DPHY:ESDTa:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:DPHY:ESDTa:MIN` and `SEARch:TRIGger:DPHY:ESDTa:MAX`.

OFF | ANY
Any pattern is detected.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Value" on page 797

SEARch:TRIGger:DPHY:ESDTa:MAX <SearchName>,<LPEscpDatMax>
SEARch:TRIGger:DPHY:ESDTa:MAX? <SearchName>

Sets the the end value of a escape mode data type range if `SEARch:TRIGger:DPHY:ESDTa:CONDition` is set to `INRange` or `OORange`.

Parameters:
<LPEscpDatMax>

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Value" on page 797

SEARch:TRIGger:DPHY:ESDTa:MIN <SearchName>,<LPEscpDatMin>
SEARch:TRIGger:DPHY:ESDTa:MIN? <SearchName>

Specifies an escape mode data bit pattern, or sets the the start value of a pattern range.

Parameters:
<LPEscpDatMin>

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Value" on page 797

SEARch:TRIGger:DPHY:ESINdex:CONDition <SearchName>,<Format>
SEARch:TRIGger:DPHY:ESINdex:CONDition? <SearchName>

Sets the condition for the escape mode data index. You can define an exact value or a value range.

Parameters:
<Format> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:DPHY:ESINdex:MIN` command.

INRange = RANGe
In range: Set the minimum and maximum value using `SEARch:TRIGger:DPHY:ESINdex:MIN` and `SEARch:TRIGger:DPHY:ESINdex:MAX`.

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Index" on page 798

SEARch:TRIGger:DPHY:ESINdex:MAX <SearchName>,<DXSymbol>
SEARch:TRIGger:DPHY:ESINdex:MAX? <SearchName>

Sets the the end value of a data index range if `SEARch:TRIGger:DPHY:ESINdex:CONDition` is set to `INRange` or `RANge`.

Parameters:
<DXSymbol>
Range: 0 to 255
Increment: 1
*RST: 255

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Index" on page 798

SEARch:TRIGger:DPHY:ESINdex:MIN <SearchName>,<SymbolType>
SEARch:TRIGger:DPHY:ESINdex:MIN? <SearchName>

Specifies an escape mode data index minimum, or sets the the start value of a range.

Parameters:
<SymbolType>
Range: 0 to 255
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Manual operation: See "Data Index" on page 798

SEARch:TRIGger:DPHY:HSVC <SearchName>,<SymbolType>
SEARch:TRIGger:DPHY:HSVC? <SearchName>

Sets the virtual channel to be searched for.

Parameters:
<SymbolType>

Parameters for setting and query:
<SearchName>

Manual operation: See "Virtual Channel" on page 796

SEARch:TRIGger:DPHY:WCOunt:CONDition <SearchName>,<Format>
SEARch:TRIGger:DPHY:WCOunt:CONDition? <SearchName>

Set the condition for the word count. You can define an exact value or a value range.

Parameters:
<Format> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:DPHY:WCOunt:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:DPHY:WCOunt:MIN` and `SEARch:TRIGger:DPHY:WCOunt:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Word Count/ Data" on page 797

SEARch:TRIGger:DPHY:WCOunt:MAX <SearchName>,<WordCountMax>
SEARch:TRIGger:DPHY:WCOunt:MAX? <SearchName>

Sets the the end value of a data type range if `SEARch:TRIGger:DPHY:WCOunt:CONDition` is set to `INRange` or `OORange`.

Parameters:
<WordCountMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Word Count/ Data" on page 797

SEARch:TRIGger:DPHY:WCOunt:MIN <SearchName>,<WordCountMin>
SEARch:TRIGger:DPHY:WCOunt:MIN? <SearchName>

Specifies a word bit pattern, or sets the the start value of a pattern range.

Parameters:
<WordCountMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Word Count/ Data" on page 797

26.18.17.5 D-PHY search results

In all `SEARch:RESult:DPHY:FRAMe<m>` commands, the suffix <m> selects the frame number in the list of search results.

SEARch:RESult:DPHY:FCOunt? 2273
SEARch:RESult:DPHY:FRAMe<fr>:CS? 2273
SEARch:RESult:DPHY:FRAMe<fr>:DATA? 2274
SEARch:RESult:DPHY:FRAMe<fr>:DTName? 2274
SEARch:RESult:DPHY:FRAMe<fr>:DTYPe? 2274
SEARch:RESult:DPHY:FRAMe<fr>:ECC? 2274
SEARch:RESult:DPHY:FRAMe<fr>:PACKet<pa>:IDX? 2275
SEARch:RESult:DPHY:FRAMe<fr>:PACKet<pa>:VALue? 2275
SEARch:RESult:DPHY:FRAMe<fr>:STARt? 2275
SEARch:RESult:DPHY:FRAMe<fr>:STATe? 2276
SEARch:RESult:DPHY:FRAMe<fr>:STOP? 2276
SEARch:RESult:DPHY:FRAMe<fr>:TYPE? 2277
SEARch:RESult:DPHY:FRAMe<fr>:VCHannel? 2277

SEARch:RESult:DPHY:FCOunt? <SearchName>

Returns the number of frames within the search result for the selected serial bus.

Query parameters:
<SearchName>

Return values:

<FrameCount>	Range:	0 to 100E+3
	Increment:	1
	*RST:	0

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:CS? <SearchName>

Returns the checksum for the selected frame within the search result.

Suffix:

<fr>	*

Query parameters:
<SearchName>

Return values:

<CS>	Range:	0 to 65.535E+3
	Increment:	1
	*RST:	0

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:DATA? <SearchName>

Returns the data or word count value for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<WordCntOrDat> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:DTName? <SearchName>

Returns the data type name for the specified frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DataTypeName>

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:DTYPe? <SearchName>

Returns the data type for the specified frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<DataType> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:ECC? <SearchName>

Returns the error correction code (ECC) of the specified frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<ECC> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:PACKet<pa>:IDX? <SearchName>

Returns the index of the data payload for the selected frame within the search result.

Suffix:
<fr> *

<pa> *

Query parameters:
<SearchName>

Return values:
<PacketIndex> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:PACKet<pa>:VALue? <SearchName>

Returns the byte value of the data payload for the selected frame within the search result.

Suffix:
<fr> *

<pa> *

Query parameters:
<SearchName>

Return values:
<PacketValue> Range: 0 to 9.22337E+18
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the specified frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:STATe? <SearchName>

Returns the overall state of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | CS | ECC | ECCWarning | LENGth | FORMat | UNKNOWN_FRAME | INComplete

OK
The frame is valid.

LENGth
Length error.

UNKNOWN_FRAME
Unknown frame type

*RST: OK

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:STOP? <SearchName>

Returns the end time for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:TYPE? <SearchName>

Returns the type of frame for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> HS_SP | HS_LP | HS_INCOMPLETE | LP_HSREQ | LP_TA | LP_ESC

HS_SP
High speed short packet frame

HS_LP
High speed long packet frame

HS_INCOMPLETE
Incomplete high speed frame

LP_HSREQ
High speed request frame

LP_TA
Low power lane turnaround frame

LP_ESC
Low power escape mode frame

*RST: HS_SP

Usage: Query only

SEARch:RESult:DPHY:FRAMe<fr>:VCHannel? <SearchName>

Returns the number of virtual channels for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<VirtualChannel> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

26.18.18 M-PHY (option R&S RTP-K44)

- Configuration....2278
- Trigger M-PHY....2281
- Decode results M-PHY....2297
- Search settings M-PHY....2305
- Search results M-PHY....2322
- Trigger USB SSIC (Option R&S RTP-K64)....2327
- Search settings USB SSIC (Option R&S RTP-K64)....2332

26.18.18.1 Configuration

BUS<b>:MPHY:VARiant....2278
BUS<b>:MPHY:DLANes....2278
BUS<b>:MPHY:DZERo:SOURce....2279
BUS<b>:MPHY:DONE:SOURce....2279
BUS<b>:MPHY:DTWO:SOURce....2279
BUS<b>:MPHY:DTHRee:SOURce....2279
BUS<b>:MPHY:DZERo:THReshold....2279
BUS<b>:MPHY:DONE:THReshold....2279
BUS<b>:MPHY:DTWO:THReshold....2279
BUS<b>:MPHY:DTHRee:THReshold....2279
BUS<b>:MPHY:THCoupling....2280
BUS<b>:MPHY:THPReset....2280
BUS<b>:MPHY:SCRMode....2280
BUS<b>:MPHY:SMLanes....2281

BUS<b>:MPHY:VARiant <Protocol>

Selects the protocol running on the interface.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:
<Protocol> MPHY | UNIPRO | SSIC
*RST: MPHY

Manual operation: See "Variant" on page 802

BUS<b>:MPHY:DLANes <DataLaneCount>

Sets the number of data lanes.

Suffix:
<b> 1..4
Selects the serial bus.

Parameters:

<DataLaneCount> Range: 1 to 4
Increment: 1
*RST: 4

Manual operation: See "Lanes" on page 803

BUS<b>:MPHY:DZERo:SOURce <DataSource>

Sets the source for the lane.

Suffix:

<b> 1..4

Parameters:

<DataSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

*RST: C1W1

Manual operation: See "Lane 0 / Lane 1 / Lane 2 / Lane 3: Channel" on page 803

BUS<b>:MPHY:DONE:SOURce <DataSource>
BUS<b>:MPHY:DTWO:SOURce <DataSource>
BUS<b>:MPHY:DTHRee:SOURce <DataSource>

Selects the source of the corresponding data lane.

Suffix:

<b> 1..4
Selects the serial bus.

Parameters:

<DataSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | NONE

*RST: DONe: C2W1, DTWo: C3W1, DTHree: C4W1

Manual operation: See "Lane 0 / Lane 1 / Lane 2 / Lane 3: Channel" on page 803

BUS<b>:MPHY:DZERo:THReshold <Threshold>
BUS<b>:MPHY:DONE:THReshold <Threshold>
BUS<b>:MPHY:DTWO:THReshold <Threshold>
BUS<b>:MPHY:DTHRee:THReshold <Threshold>

Sets the threshold value for the respective lane.

Suffix:

<b> 1..4
Selects the serial bus.

Parameters:

<Threshold>
Range: 0 to 1
Increment: 0.01
*RST: 0.1
Default unit: V

Manual operation: See "Threshold setup " on page 803

BUS<b>:MPHY:THCoupling <Coupling>

Enables the same threshold value to be used for all lanes.

When the threshold coupling is disabled, changes to the threshold value only affect the respective lane.

Suffix:

<b>
1..4
Selects the serial bus.

Parameters:

<Coupling>
OFF | ON
*RST: ON

Manual operation: See "Threshold setup " on page 803

BUS<b>:MPHY:THPReset <ThresPreset>

Selects the predefined value to preset the threshold value of the data lanes.

Suffix:

<b>
1..4
Selects the serial bus.

Parameters:

<ThresPreset>
THRES_60MV | THRES_120MV | THRES_240MV | MANual

THRES_60MV | THRES_120MV | THRES_240MV
Sets the threshold value of the data lane to the selected predefined value.

MANual
Automatically switches to this option if you edit the threshold text box manually.

*RST: MANual

BUS<b>:MPHY:SCRMode <SSICScrambleMd>

Sets if the SSIC data is scrambled or unscrambled.

Suffix:

<b>
1..4

Parameters:

<SSICScrambleMd> SCRM | NSCR

`SCRM`: scrambled

`NSCR`: unscrambled

*RST: SCRM

Manual operation: See "Scrambled Mode" on page 804

BUS<b>:MPHY:SMLanes <Active>

Enables the display of the results in multiple lanes.

Suffix:

<b> 1..4

Parameters:

<Active> OFF | ON

*RST: ON

Manual operation: See "Show multiple lanes" on page 804

26.18.18.2 Trigger M-PHY

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:MPHY:TYPE....2282
TRIGger<t>:MPHY:LCCType....2283
TRIGger<t>:MPHY:LWONe:CONDition....2284
TRIGger<t>:MPHY:LWONe:MIN....2284
TRIGger<t>:MPHY:LWONe:MAX....2285
TRIGger<t>:MPHY:LWTWo:CONDition....2285
TRIGger<t>:MPHY:LWTWo:MIN....2285
TRIGger<t>:MPHY:LWTWo:MAX....2286
TRIGger<t>:MPHY:LWTHree:CONDition....2286
TRIGger<t>:MPHY:LWTHree:MIN....2286
TRIGger<t>:MPHY:LWTHree:MAX....2287
TRIGger<t>:MPHY:LWFour:CONDition....2287
TRIGger<t>:MPHY:LWFour:MIN....2287
TRIGger<t>:MPHY:LWFour:MAX....2288
TRIGger<t>:MPHY:TC....2288
TRIGger<t>:MPHY:DATA:DCON....2288
TRIGger<t>:MPHY:DATA:DMIN....2289
TRIGger<t>:MPHY:DATA:DMAX....2289

TRIGger<t>:MPHY:DATA:ICONdition ... 2289
TRIGger<t>:MPHY:DATA:IMIN ... 2290
TRIGger<t>:MPHY:DATA:IMAX ... 2290
TRIGger<t>:MPHY:FSNumber:CONDition ... 2290
TRIGger<t>:MPHY:FSNumber:MIN ... 2291
TRIGger<t>:MPHY:FSNumber:MAX ... 2291
TRIGger<t>:MPHY:CRC:CONDition ... 2291
TRIGger<t>:MPHY:CRC:MIN ... 2292
TRIGger<t>:MPHY:CRC:MAX ... 2292
TRIGger<t>:MPHY:CREQ ... 2292
TRIGger<t>:MPHY:RREQ ... 2292
TRIGger<t>:MPHY:CREDit:CONDition ... 2293
TRIGger<t>:MPHY:CREDit:MIN ... 2293
TRIGger<t>:MPHY:CREDit:MAX ... 2294
TRIGger<t>:MPHY:PBEGin:CONDition ... 2294
TRIGger<t>:MPHY:PBEGin:MIN ... 2294
TRIGger<t>:MPHY:PBEGin:MAX ... 2295
TRIGger<t>:MPHY:PFID:CONDition ... 2295
TRIGger<t>:MPHY:PFID:MIN ... 2295
TRIGger<t>:MPHY:PFID:MAX ... 2296
TRIGger<t>:MPHY:PRPLength ... 2296
TRIGger<t>:MPHY:ERRor:LCMD ... 2296
TRIGger<t>:MPHY:ERRor:LENGth ... 2296
TRIGger<t>:MPHY:ERRor:REServed ... 2297
TRIGger<t>:MPHY:ERRor:SYMBol ... 2297
TRIGger<t>:MPHY:ERRor:UNKNown ... 2297

TRIGger<t>:MPHY:TYPE <Type>

Selects the type of frame to be triggered on.

Suffix:
<t> 1..3

Parameters:
<Type> START | BURST | ADAPT | LCC | DLPDUSOF | DLPDUCOF | DLPDUEOF | DLPDUNAC | DLPDUAFC | PACP | TRIGUPR0 | TRIGUPR1 | TRIGUPR2 | ERRor

START
M-PHY or UniPro start of frame.

BURST
M-PHY burst frame.

ADAPT
M-PHY Adapt frame. This control frame is used for clock/bit synchronization.

LCC
M-PHY LCC frame. This control frame is used for line configuration depending on the `LCC Type`.

DLPDUSOF | DLPDUCOF | DLPDUEOF | DLPDUNAC | DLPDUAFC
UniPro DL PDU frame.

PACP
UniPro PACP frame. This control frame is used mainly for power mode change and L1.5 link management.

TRIGUPR0 | TRIGUPR1 | TRIGUPR2
UniPro Trigger Upper frame. This control frame is used for link startup sequence.

ERRor
M-PHY or UniPro error frame.

*RST: START

Manual operation: See "Type" on page 805

TRIGger<t>:MPHY:LCCType <LCC_Type>

Selects the type of LCC frame to be triggered on.

Suffix:
<t> 1..3

Parameters:
<LCC_Type> ANY | SLEEP | STALL | READCAP | READMFG | READVEND | WRITEATTR | PWMG0 | PWMG1 | PWMG2 | PWMG3 | PWMG4 | PWMG5 | PWMG6 | PWMG7 | HSG1A | HSG2A | HSG3A | HSG4A | HSG1B | HSG2B | HSG3B | HSG4B | RESERVED

ANY
All the available LCC commands.

SLEEP
Switches the power-saving state to ultra-low power. In this state, up to 90% power saving is achieved.

STALL
Switches the power-saving state to ultra-low power. In this state, up to 75% power saving is achieved.

READCAP
Recovers data about the OMC's capabilities.

READMFG
Retrieves manufacturing ID and vendor-specific information.

READVEND
Retrieves the additional four delimited bytes containing vendor-specific information.

WRITEATTR
Sets the configuration parameters required for lane operation.

PWMG0 | PWMG1 | PWMG2 | PWMG3 | PWMG4 | PWMG5 | PWMG6 | PWMG7
Switches the transmission mode to the selected low-power gear.

HSG1A | HSG2A | HSG3A | HSG4A | HSG1B | HSG2B | HSG3B | HSG4B
Switches the transmission mode to the selected high-speed gear.

RESERVED
Reserved bit command. These bits are reserved for future use.

*RST: ANY

Manual operation: See "LCC Type" on page 811

TRIGger<t>:MPHY:LWONe:CONDition <CondOperator>

Sets the condition for WORD 1. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CondOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:MPHY:LWONe:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:LWONe:MIN` and `TRIGger<t>:MPHY:LWONe:MAX`.

*RST: EQUal

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWONe:MIN <WordMin>

Specifies the WORD 1 pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<WordMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWONe:MAX <WordMax>

Sets the end value of the WORD 1 range if `TRIGger<t>:MPHY:LWONe:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<WordMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWTWo:CONDition <CondOperator>

Sets the condition for WORD 2. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CondOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:MPHY:LWTWo:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:LWTWo:MIN` and `TRIGger<t>:MPHY:LWTWo:MAX`.

*RST: EQUal

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWTWo:MIN <WordMin>

Specifies the WORD 2 pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<WordMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWTWo:MAX <WordMax>

Sets the end value of the WORD 2 range if `TRIGger<t>:MPHY:LWTWo:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<WordMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWTHree:CONDition <CondOperator>

Sets the condition for WORD 3. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CondOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:MPHY:LWTHree:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:LWTHree:MIN` and `TRIGger<t>:MPHY:LWTHree:MAX`.

*RST: EQUal

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWTHree:MIN <WordMin>

Specifies the WORD 3 pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<WordMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWTHree:MAX <WordMax>

Sets the end value of the WORD 3 range if `TRIGger<t>:MPHY:LWTHree:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<WordMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWFour:CONDition <CondOperator>

Sets the condition for WORD 4. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CondOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:MPHY:LWFour:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:LWFour:MIN` and `TRIGger<t>:MPHY:LWFour:MAX`.

*RST: EQUal

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWFour:MIN <WordMin>

Specifies the WORD 4 pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<WordMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:LWFour:MAX <WordMax>

Sets the end value of the WORD 4 range if `TRIGger<t>:MPHY:LWFour:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<WordMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 812

TRIGger<t>:MPHY:TC <TC>

Specifies the TC bit pattern.

Suffix:
<t> 1..3

Parameters:
<TC> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "TC" on page 812

TRIGger<t>:MPHY:DATA:DCON <Data_Operator>

Sets the condition for the data. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:MPHY:DATA:DMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:DATA:DMIN` and `TRIGger<t>:MPHY:DATA:DMAX`.

*RST: EQUal

Manual operation: See "Data" on page 813

TRIGger<t>:MPHY:DATA:DMIN <Data_Min>

Specifies the data bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Data_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data" on page 813

TRIGger<t>:MPHY:DATA:DMAX <Data_Max>

Sets the end value of the data range if `TRIGger<t>:MPHY:DATA:DCON` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Data_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Data" on page 813

TRIGger<t>:MPHY:DATA:ICONdition <IndexOperator>

Sets the condition for the index. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<IndexOperator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | LTHan | LETHan | GTHan | GETHan
Equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `TRIGger<t>:MPHY:DATA:IMIN` command.

INRange = RANGe
In range: Set the minimum and maximum value using `TRIGger<t>:MPHY:DATA:IMIN` and `TRIGger<t>:MPHY:DATA:IMAX`.

*RST: INRange

Manual operation: See "Index" on page 813

TRIGger<t>:MPHY:DATA:IMIN <DataIndex_Min>

Specifies the index minimum, or sets the start value of a range.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Manual operation: See "Index" on page 813

TRIGger<t>:MPHY:DATA:IMAX <DataIndex_Max>

Sets the end value of the index range if `TRIGger<t>:MPHY:DATA:ICONdition` is set to `INRange` or `RANge`.

Suffix:
<t> 1..3

Parameters:
<DataIndex_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Manual operation: See "Index" on page 813

TRIGger<t>:MPHY:FSNumber:CONDition <FSNOperator>

Sets the condition for FSN. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<FSNOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:MPHY:FSNumber:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:FSNumber:MIN` and `TRIGger<t>:MPHY:FSNumber:MAX`.

*RST: EQUal

Manual operation: See "FSN" on page 813

TRIGger<t>:MPHY:FSNumber:MIN <FSNMin>

Specifies the FSN bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<FSNMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "FSN" on page 813

TRIGger<t>:MPHY:FSNumber:MAX <FSNMax>

Sets the end value of the FSN range if `TRIGger<t>:MPHY:FSNumber:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<FSNMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "FSN" on page 813

TRIGger<t>:MPHY:CRC:CONDition <CRC_Operator>

Sets the condition for CRC. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CRC_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:MPHY:CRC:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:CRC:MIN` and `TRIGger<t>:MPHY:CRC:MAX`.

*RST: EQUal

Manual operation: See "CRC" on page 814

TRIGger<t>:MPHY:CRC:MIN <CRC_Min>

Specifies the CRC bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<CRC_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "CRC" on page 814

TRIGger<t>:MPHY:CRC:MAX <CRC_Max>

Sets the end value of the CRC range if `TRIGger<t>:MPHY:CRC:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<CRC_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "CRC" on page 814

TRIGger<t>:MPHY:CREQ <REQ>

Specifies the CREQ bit pattern.

Suffix:
<t> 1..3

Parameters:
<REQ> ONE | ZERO | DC

ONE
Sets the trigger condition to binary 1.

ZERO
Sets the trigger condition to binary 0.

DC
Sets the trigger condition to any CREQ value (don't care).

*RST: DC

Manual operation: See "Req" on page 814

TRIGger<t>:MPHY:RREQ <REQ>

Specifies the RREQ bit pattern.

Suffix:
<t> 1..3

Parameters:
<REQ> ONE | ZERO | DC

ONE
Sets the trigger condition to binary 1.

ZERO
Sets the trigger condition to binary 0.

DC
Sets the trigger condition to any RREQ value (don't care).

*RST: DC

Manual operation: See "Req" on page 814

TRIGger<t>:MPHY:CREDit:CONDition <CreditOperator>

Sets the condition for Credit. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CreditOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:MPHY:CREDit:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:CREDit:MIN` and `TRIGger<t>:MPHY:CREDit:MAX`.

*RST: EQUal

Manual operation: See "Credit" on page 814

TRIGger<t>:MPHY:CREDit:MIN <Credit_Min>

Specifies the Credit bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Credit_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Credit" on page 814

TRIGger<t>:MPHY:CREDit:MAX <Credit_Max>

Sets the end value of the Credit range if `TRIGger<t>:MPHY:CREDit:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Credit_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Credit" on page 814

TRIGger<t>:MPHY:PBEGin:CONDition <CondPACPBegin>

Sets the condition for PACP Begin. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CondPACPBegin> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:MPHY:PBEGin:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:PBEGin:MIN` and `TRIGger<t>:MPHY:PBEGin:MAX`.

*RST: EQUal

Manual operation: See "PACP Begin" on page 815

TRIGger<t>:MPHY:PBEGin:MIN <PACPBeginMin>

Specifies the PACP Begin bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<PACPBeginMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "PACP Begin" on page 815

TRIGger<t>:MPHY:PBEGin:MAX <PACPBeginMax>

Sets the end value of the PACP Begin range if `TRIGger<t>:MPHY:PBEGin:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<PACPBeginMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "PACP Begin" on page 815

TRIGger<t>:MPHY:PFID:CONDition <CondPACPFunc>

Sets the condition for PACP Function ID. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<CondPACPFunc> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:MPHY:PFID:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:MPHY:PFID:MIN` and `TRIGger<t>:MPHY:PFID:MAX`.

*RST: EQUal

Manual operation: See "PACP Function ID" on page 815

TRIGger<t>:MPHY:PFID:MIN <PACPFuncMin>

Specifies the PACP Function ID bit pattern, or sets the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<PACPFuncMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "PACP Function ID" on page 815

TRIGger<t>:MPHY:PFID:MAX <PACPFuncMax>

Sets the end value of the PACP Function ID range if `TRIGger<t>:MPHY:PFID:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<PACPFuncMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "PACP Function ID" on page 815

TRIGger<t>:MPHY:PRPLength <Width>

Sets the width for the width trigger based upon the data rate.

Suffix:
<t> 1..3

Parameters:
<Width> Range: 100E-12 to 10000
Increment: 100E-9
*RST: 5E-9
Default unit: s

TRIGger<t>:MPHY:ERRor:LCMD <LCCError>

Enables/disables trigger on LCC error.

Suffix:
<t> 1..3

Parameters:
<LCCError> OFF | ON
*RST: ON

Manual operation: See "LCC Command Error" on page 816

TRIGger<t>:MPHY:ERRor:LENGth <Error_Length>

Enables/disables trigger on length error.

Suffix:
<t> 1..3

Parameters:
<Error_Length> OFF | ON
*RST: ON

Manual operation: See "Length Error" on page 816

TRIGger<t>:MPHY:ERRor:REServed <Error_Reserved>

Enables/disables trigger on reserved bit error.

Suffix:
<t> 1..3

Parameters:
<Error_Reserved> OFF | ON
*RST: ON

Manual operation: See "Reserved Bit Error" on page 816

TRIGger<t>:MPHY:ERRor:SYMBol <Error_Symbol>

Enables/disables trigger on 8b10b symbol error.

Suffix:
<t> 1..3

Parameters:
<Error_Symbol> OFF | ON
*RST: ON

Manual operation: See "8b10b Symbol Error" on page 816

TRIGger<t>:MPHY:ERRor:UNKNown <Error_Unknown>

Enables/disables trigger on unidentified UniPro frame error.

Suffix:
<t> 1..3

Parameters:
<Error_Unknown> OFF | ON
*RST: ON

Manual operation: See "Unknown Unipro Frame" on page 816

26.18.18.3 Decode results M-PHY

To show the results on the screen, use the following commands:

- `BUS<b>:RESult` on page 1834

BUS<b>:MPHY:RESult:FRAMe<fr>:NAME? 2298
BUS<b>:MPHY:RESult:FRAMe<fr>:FTYPe? 2298
BUS<b>:MPHY:RESult:FRAMe<fr>:STATe? 2299
BUS<b>:MPHY:RESult:FCOunt? 2300
BUS<b>:MPHY:RESult:FRAMe<fr>:CCOunt? 2300
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:DATA? 2300
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STARt? 2301
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STOP? 2301

BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STATe? 2302
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:TYPE? 2302
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:FVAL? 2302
BUS<b>:MPHY:RESult:FRAMe<fr>:DATA? 2303
BUS<b>:MPHY:RESult:FRAMe<fr>:INFO? 2303
BUS<b>:MPHY:RESult:FRAMe<fr>:SSFT? 2303
BUS<b>:MPHY:RESult:FRAMe<fr>:STARt? 2304
BUS<b>:MPHY:RESult:FRAMe<fr>:STOP? 2304

BUS<b>:MPHY:RESult:FRAMe<fr>:NAME?

Returns the name of the specified frame. Frame names are not necessarily unique.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Name>

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:FTYPe?

Returns the type of frame for the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Frame_Type> BURST | ADAPT | LCC | DLPDUSOF | DLPDUCOF | DLPDUEOF | DLPDUNAC | DLPDUAFC | PACP | TRIGUPR0 | TRIGUPR1 | TRIGUPR2 | SKIP | FILLER | SPACER | UNKNOWN

BURST
M-PHY burst frame.

ADAPT
M-PHY Adapt frame. This control frame is used for clock/bit synchronization.

LCC
M-PHY LCC frame. This control frame is used for line configuration depending on the `LCC Type`.

DLPDUSOF | DLPDUCOF | DLPDUEOF | DLPDUNAC | DLPDUAFC
UniPro DL PDU frame.

PACP
UniPro frame. This control frame is used mainly for power mode change and L1.5 link management.

TRIGUPR0 | TRIGUPR1 | TRIGUPR2
UniPro frame. This control frame is used for link startup sequence.

SKIP
UniPro frame with Skip symbols for reducing protocol payload bandwidth.

FILLER
M-PHY or UniPro frame with filler words to maintain transmission activity.

SPACER
Scrambled UniPro frame with filler words.

UNKNOWN
No meaningful frame can be determined.

*RST: UNKNOWN

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:STATe?

Returns the state of the frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<State> OK | RSVDERROR | CMDERROR | SYMBOLERROR | UNKNOWNERROR | INVALID | INCOMPLETE | UNCorrelated | CRCERROR | VOOR | LENGTHERROR

OK
Valid frame.

RSVDERROR
Erroneous frame due to reserved bit error.

CMDERROR
Erroneous frame due to LCC error.

SYMBOLERROR
Erroneous frame due to 8b10b symbol error.

UNKNOWNERROR
Erroneous frame due to unidentified UniPro frame error.

INVALID
Invalid frame.

INCOMPLETE
The frame is not complete.

LENGTHERROR
Erroneous frame due to length error.

*RST: OK

Usage: Query only

BUS<b>:MPHY:RESult:FCOunt?

Returns the number of decoded frames.

Suffix:
<b> 1..4
Selects the serial bus.

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:CCOunt?

Returns the number of decoded cells for the selected frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:DATA?

Returns the data value for the selected cell.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<ce> *
Selects the cell.

Return values:
<WordValue> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STARt?

Returns the start time for the selected cell.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<ce> *
Selects the cell.

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STOP?

Returns the stop time for the selected cell.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<ce> *
Selects the cell.

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STATe?

Returns the state for the selected cell.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<ce> *
Selects the cell.

Return values:

<State> OK | RSVDERROR | CMDERROR | SYMBOLERROR | UNKNOWNERROR | INVALID | INCOMPLETE | UNCorrelated | CRCERROR | VOOR | LENGTHERROR

*RST: OK

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:TYPE?

Returns the data type for the selected cell.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<ce> *
Selects the cell.

Return values:

<WordType>

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:FVAL?

Returns the formatted value of the cell with the selected cell number within the frame with the selected number (for the selected serial bus).

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

<ce> *
Selects the cell number.

Return values:
<WordValString>

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:DATA?

Returns the data for the selected frame, corresponds to the Data column in the decode results table.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Data>

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:INFO?

Returns the selected frame label. This label is on top of the frame as seen in the honeycomb display, also corresponds to the Info column in the decode results table.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Info>

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:SSFT?

Returns the type of frame for the selected SSIC frame.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<SSIC_FrameType> TSEQ | TS1 | TS1A | TS1B | TS2 | SLF | U2IT | VDT | PCAP | PCNF | PCNR | LDM | ACK | NRDY | ERDY | STATus | STALl | FWAKe | LTM | BIAM | HRR | SSPD | PING | PNGR | DPH | DPHN | DPP | DPPA | ITP | LC | SKIP | BRST | BDAT | BERC | BCNT | IDLE | CP0 | CP1 | CP2 | CP3 | CP5or6 | UHP | ULMP | UTP | UDVN | UDEF | ERRor | CTLB | DATB | SYNC | SDS

*RST: UDEF

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:MPHY:RESult:FRAMe<fr>:STOP?

Returns the end time of the selected frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

26.18.18.4 Search settings M-PHY

SEARch:TRIGger:MPHY:TYPE 2306
SEARch:TRIGger:MPHY:LCCType 2306
SEARch:TRIGger:MPHY:LWONe:CONDition 2307
SEARch:TRIGger:MPHY:LWONe:MIN 2308
SEARch:TRIGger:MPHY:LWONe:MAX 2308
SEARch:TRIGger:MPHY:LWTWo:CONDition 2308
SEARch:TRIGger:MPHY:LWTWo:MIN 2309
SEARch:TRIGger:MPHY:LWTWo:MAX 2309
SEARch:TRIGger:MPHY:LWTHree:CONDition 2310
SEARch:TRIGger:MPHY:LWTHree:MIN 2310
SEARch:TRIGger:MPHY:LWTHree:MAX 2310
SEARch:TRIGger:MPHY:LWFour:CONDition 2311
SEARch:TRIGger:MPHY:LWFour:MIN 2311
SEARch:TRIGger:MPHY:LWFour:MAX 2311
SEARch:TRIGger:MPHY:TC 2312
SEARch:TRIGger:MPHY:DATA:DCONdition 2312
SEARch:TRIGger:MPHY:DATA:DMIN 2312
SEARch:TRIGger:MPHY:DATA:DMAX 2313
SEARch:TRIGger:MPHY:DATA:ICONdition 2313
SEARch:TRIGger:MPHY:DATA:IMIN 2314
SEARch:TRIGger:MPHY:DATA:IMAX 2314
SEARch:TRIGger:MPHY:FSNumber:CONDition 2314
SEARch:TRIGger:MPHY:FSNumber:MIN 2315
SEARch:TRIGger:MPHY:FSNumber:MAX 2315
SEARch:TRIGger:MPHY:CRC:CONDition 2315
SEARch:TRIGger:MPHY:CRC:MIN 2316
SEARch:TRIGger:MPHY:CRC:MAX 2316
SEARch:TRIGger:MPHY:CREQ 2316
SEARch:TRIGger:MPHY:RREQ 2317
SEARch:TRIGger:MPHY:CREDit:CONDition 2317
SEARch:TRIGger:MPHY:CREDit:MIN 2318
SEARch:TRIGger:MPHY:CREDit:MAX 2318
SEARch:TRIGger:MPHY:PBEGin:CONDition 2318
SEARch:TRIGger:MPHY:PBEGin:MIN 2319
SEARch:TRIGger:MPHY:PBEGin:MAX 2319
SEARch:TRIGger:MPHY:PFID:CONDition 2319
SEARch:TRIGger:MPHY:PFID:MIN 2320
SEARch:TRIGger:MPHY:PFID:MAX 2320
SEARch:TRIGger:MPHY:ERRor:REServed 2320
SEARch:TRIGger:MPHY:ERRor:LCMD 2321
SEARch:TRIGger:MPHY:ERRor:SYMBol 2321
SEARch:TRIGger:MPHY:ERRor:UNKNown 2321
SEARch:TRIGger:MPHY:ERRor:LENGth 2321

SEARch:TRIGger:MPHY:TYPE <SearchName>,<Type>
SEARch:TRIGger:MPHY:TYPE? <SearchName>

Selects the type of frame to be searched for.

Parameters:

<Type> START | BURST | ADAPT | LCC | DLPDUSOF | DLPDUCOF | DLPDUEOF | DLPDUNAC | DLPDUAFC | PACP | TRIGUPR0 | TRIGUPR1 | TRIGUPR2 | ERRor

START
M-PHY or UniPro start of frame.

BURST
M-PHY burst frame.

ADAPT
M-PHY Adapt frame. This control frame is used for clock/bit synchronization.

LCC
M-PHY LCC frame. This control frame is used for line configuration depending on the `LCC Type`.

DLPDUSOF | DLPDUCOF | DLPDUEOF | DLPDUNAC | DLPDUAFC
UniPro DL PDU frame.

PACP
UniPro PACP frame. This control frame is used mainly for power mode change and L1.5 link management.

TRIGUPR0 | TRIGUPR1 | TRIGUPR2
UniPro Trigger Upper frame. This control frame is used for link startup sequence.

ERRor
M-PHY or UniPro error frame.

*RST: START

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 821

SEARch:TRIGger:MPHY:LCCType <SearchName>,<LCC_Type>
SEARch:TRIGger:MPHY:LCCType? <SearchName>

Selects the type of LCC frame to be searched for.

Parameters:

<LCC_Type> ANY | SLEEP | STALL | READCAP | READMFG | READVEND | WRITEATTR | PWMG0 | PWMG1 | PWMG2 | PWMG3 | PWMG4 | PWMG5 | PWMG6 | PWMG7 | HSG1A | HSG2A | HSG3A | HSG4A | HSG1B | HSG2B | HSG3B | HSG4B | RESERVED

ANY
All the available LCC commands.

SLEEP
Switches the power-saving state to ultra-low power. In this state, up to 90% power saving is achieved.

STALL
Switches the power-saving state to ultra-low power. In this state, up to 75% power saving is achieved.

READCAP
Recovers data about the OMC's capabilities.

READMFG
Retrieves manufacturing ID and vendor-specific information.

READVEND
Retrieves the additional four delimited bytes containing vendor-specific information.

WRITEATTR
Sets the configuration parameters required for lane operation.

PWMG0 | PWMG1 | PWMG2 | PWMG3 | PWMG4 | PWMG5 | PWMG6 | PWMG7
Switches the transmission mode to the selected low-power gear.

HSG1A | HSG2A | HSG3A | HSG4A | HSG1B | HSG2B | HSG3B | HSG4B
Switches the transmission mode to the selected high-speed gear.

RESERVED
Reserved bit command. These bits are reserved for future use.

*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "LCC Type" on page 823

SEARch:TRIGger:MPHY:LWONe:CONDition <SearchName>,<CondOperator>
SEARch:TRIGger:MPHY:LWONe:CONDition? <SearchName>

Sets the condition for WORD 1. You can define an exact value or a value range.

Parameters:
<CondOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:MPHY:LWONe:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:LWONe:MIN` and `SEARch:TRIGger:MPHY:LWONe:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWONe:MIN <SearchName>,<WordMin>
SEARch:TRIGger:MPHY:LWONe:MIN? <SearchName>

Specifies the WORD 1 pattern, or sets the the start value of a pattern range.

Parameters:
<WordMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWONe:MAX <SearchName>,<WordMax>
SEARch:TRIGger:MPHY:LWONe:MAX? <SearchName>

Sets the end value of the WORD 1 range if `SEARch:TRIGger:MPHY:LWONe:CONDition` is set to `INRange` or `OORange`.

Parameters:
<WordMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWTWo:CONDition <SearchName>,<CondOperator>
SEARch:TRIGger:MPHY:LWTWo:CONDition? <SearchName>

Sets the condition for WORD 2. You can define an exact value or a value range.

Parameters:
<CondOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:MPHY:LWTWo:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:LWTWo:MIN` and `SEARch:TRIGger:MPHY:LWTWo:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWTWo:MIN <SearchName>,<WordMin>
SEARch:TRIGger:MPHY:LWTWo:MIN? <SearchName>

Specifies the WORD 2 pattern, or sets the the start value of a pattern range.

Parameters:
<WordMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWTWo:MAX <SearchName>,<WordMax>
SEARch:TRIGger:MPHY:LWTWo:MAX? <SearchName>

Sets the end value of the WORD 2 range if `SEARch:TRIGger:MPHY:LWTWo:CONDition` is set to `INRange` or `OORange`.

Parameters:
<WordMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWTHree:CONDition <SearchName>,<CondOperator>
SEARch:TRIGger:MPHY:LWTHree:CONDition? <SearchName>

Sets the condition for WORD 3. You can define an exact value or a value range.

Parameters:

<CondOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:MPHY:LWTHree:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:LWTHree:MIN` and `SEARch:TRIGger:MPHY:LWTHree:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWTHree:MIN <SearchName>,<WordMin>
SEARch:TRIGger:MPHY:LWTHree:MIN? <SearchName>

Specifies the WORD 3 pattern, or sets the the start value of a pattern range.

Parameters:

<WordMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWTHree:MAX <SearchName>,<WordMax>
SEARch:TRIGger:MPHY:LWTHree:MAX? <SearchName>

Sets the end value of the WORD 3 range if `SEARch:TRIGger:MPHY:LWTHree:CONDition` is set to `INRange` or `OORange`.

Parameters:

<WordMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWFour:CONDition <SearchName>,<CondOperator>
SEARch:TRIGger:MPHY:LWFour:CONDition? <SearchName>

Sets the condition for WORD 4. You can define an exact value or a value range.

Parameters:

<CondOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:MPHY:LWFour:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:LWFour:MIN` and `SEARch:TRIGger:MPHY:LWFour:MAX`.

*RST: EQUal

Parameters for setting and query:

<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWFour:MIN <SearchName>,<WordMin>
SEARch:TRIGger:MPHY:LWFour:MIN? <SearchName>

Specifies the WORD 4 pattern, or sets the the start value of a pattern range.

Parameters:

<WordMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:

<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:LWFour:MAX <SearchName>,<WordMax>
SEARch:TRIGger:MPHY:LWFour:MAX? <SearchName>

Sets the end value of the WORD 4 range if `SEARch:TRIGger:MPHY:LWFour:CONDition` is set to `INRange` or `OORange`.

Parameters:

<WordMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "WORD 1/WORD 2/WORD 3/WORD 4" on page 823

SEARch:TRIGger:MPHY:TC <SearchName>,<TC>
SEARch:TRIGger:MPHY:TC? <SearchName>

Specifies the TC bit pattern.

Parameters:
<TC> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "TC" on page 824

SEARch:TRIGger:MPHY:DATA:DCONdition <SearchName>,<Data_Operator>
SEARch:TRIGger:MPHY:DATA:DCONdition? <SearchName>

Sets the condition for the data. You can define an exact value or a value range.

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:MPHY:DATA:DMIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:DATA:DMIN` and `SEARch:TRIGger:MPHY:DATA:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 824

SEARch:TRIGger:MPHY:DATA:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:MPHY:DATA:DMIN? <SearchName>

Specifies the data bit pattern, or sets the the start value of a pattern range.

Parameters:
<Data_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 824

SEARch:TRIGger:MPHY:DATA:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:MPHY:DATA:DMAX? <SearchName>

Sets the end value of the data range if `SEARch:TRIGger:MPHY:DATA:DCONdition` is set to `INRange` or `OORange`.

Parameters:
<Data_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 824

SEARch:TRIGger:MPHY:DATA:ICONdition <SearchName>,<IndexOperator>
SEARch:TRIGger:MPHY:DATA:ICONdition? <SearchName>

Sets the condition for the index. You can define an exact value or a value range.

Parameters:
<IndexOperator> EQUal | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

EQUal | LTHan | LETHan | GTHan | GETHan
Equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one pattern to be set with the corresponding `SEARch:TRIGger:MPHY:DATA:IMIN` command.

INRange = RANGe
In range: Set the minimum and maximum value using `SEARch:TRIGger:MPHY:DATA:IMIN` and `SEARch:TRIGger:MPHY:DATA:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 825

SEARch:TRIGger:MPHY:DATA:IMIN <SearchName>,<DataIndex_Min>
SEARch:TRIGger:MPHY:DATA:IMIN? <SearchName>

Specifies the index minimum, or sets the start value of a range.

Parameters:
<DataIndex_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 825

SEARch:TRIGger:MPHY:DATA:IMAX <SearchName>,<DataIndex_Max>
SEARch:TRIGger:MPHY:DATA:IMAX? <SearchName>

Sets the end value of the index range if `SEARch:TRIGger:MPHY:DATA:ICONdition` is set to `INRange` or `RANge`.

Parameters:
<DataIndex_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 825

SEARch:TRIGger:MPHY:FSNumber:CONDition <SearchName>,<FSNOperator>
SEARch:TRIGger:MPHY:FSNumber:CONDition? <SearchName>

Sets the condition for FSN. You can define an exact value or a value range.

Parameters:
<FSNOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:MPHY:FSNumber:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:FSNumber:MIN` and `SEARch:TRIGger:MPHY:FSNumber:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "FSN" on page 825

SEARch:TRIGger:MPHY:FSNumber:MIN <SearchName>,<FSNMin>
SEARch:TRIGger:MPHY:FSNumber:MIN? <SearchName>

Specifies the FSN bit pattern, or sets the start value of a pattern range.

Parameters:
<FSNMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "FSN" on page 825

SEARch:TRIGger:MPHY:FSNumber:MAX <SearchName>,<FSNMax>
SEARch:TRIGger:MPHY:FSNumber:MAX? <SearchName>

Sets the end value of the FSN range if `SEARch:TRIGger:MPHY:FSNumber:CONDition` is set to `INRange` or `OORange`.

Parameters:
<FSNMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "FSN" on page 825

SEARch:TRIGger:MPHY:CRC:CONDition <SearchName>,<CRC_Operator>
SEARch:TRIGger:MPHY:CRC:CONDition? <SearchName>

Sets the condition for CRC. You can define an exact value or a value range.

Parameters:
<CRC_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:MPHY:CRC:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:CRC:MIN` and `SEARch:TRIGger:MPHY:CRC:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "CRC" on page 825

SEARch:TRIGger:MPHY:CRC:MIN <SearchName>,<CRC_Min>
SEARch:TRIGger:MPHY:CRC:MIN? <SearchName>

Specifies the CRC bit pattern, or sets the start value of a pattern range.

Parameters:
<CRC_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "CRC" on page 825

SEARch:TRIGger:MPHY:CRC:MAX <SearchName>,<CRC_Max>
SEARch:TRIGger:MPHY:CRC:MAX? <SearchName>

Sets the end value of the CRC range if `SEARch:TRIGger:MPHY:CRC:CONDition` is set to `INRange` or `OORange`.

Parameters:
<CRC_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "CRC" on page 825

SEARch:TRIGger:MPHY:CREQ <SearchName>,<REQ>
SEARch:TRIGger:MPHY:CREQ? <SearchName>

Specifies the CREQ bit pattern.

Parameters:
<REQ> ONE | ZERO | DC

ONE
Sets the trigger condition to binary 1.

ZERO
Sets the trigger condition to binary 0.

DC
Sets the trigger condition to any CREQ value (don't care).

*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "Req" on page 826

SEARch:TRIGger:MPHY:RREQ <SearchName>,<REQ>
SEARch:TRIGger:MPHY:RREQ? <SearchName>

Specifies the RREQ bit pattern.

Parameters:
<REQ> ONE | ZERO | DC

ONE
Sets the trigger condition to binary 1.

ZERO
Sets the trigger condition to binary 0.

DC
Sets the trigger condition to any RREQ value (don't care).

*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "Req" on page 826

SEARch:TRIGger:MPHY:CREDit:CONDition <SearchName>,<CreditOperator>
SEARch:TRIGger:MPHY:CREDit:CONDition? <SearchName>

Sets the condition for Credit. You can define an exact value or a value range.

Parameters:
<CreditOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:MPHY:CREDit:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:CREDit:MIN` and `SEARch:TRIGger:MPHY:CREDit:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Credit" on page 826

SEARch:TRIGger:MPHY:CREDit:MIN <SearchName>,<Credit_Min>
SEARch:TRIGger:MPHY:CREDit:MIN? <SearchName>

Specifies the Credit bit pattern, or sets the start value of a pattern range.

Parameters:
<Credit_Min> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Credit" on page 826

SEARch:TRIGger:MPHY:CREDit:MAX <SearchName>,<Credit_Max>
SEARch:TRIGger:MPHY:CREDit:MAX? <SearchName>

Sets the end value of the Credit range if `SEARch:TRIGger:MPHY:CREDit:CONDition` is set to `INRange` or `OORange`.

Parameters:
<Credit_Max> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Credit" on page 826

SEARch:TRIGger:MPHY:PBEGin:CONDition <SearchName>,<CondPACPBegin>
SEARch:TRIGger:MPHY:PBEGin:CONDition? <SearchName>

Sets the condition for PACP Begin. You can define an exact value or a value range.

Parameters:
<CondPACPBegin> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:MPHY:PBEGin:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:PBEGin:MIN` and `SEARch:TRIGger:MPHY:PBEGin:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "PACP Begin" on page 827

SEARch:TRIGger:MPHY:PBEGin:MIN <SearchName>,<PACPBeginMin>
SEARch:TRIGger:MPHY:PBEGin:MIN? <SearchName>

Specifies the PACP Begin bit pattern, or sets the start value of a pattern range.

Parameters:
<PACPBeginMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "PACP Begin" on page 827

SEARch:TRIGger:MPHY:PBEGin:MAX <SearchName>,<PACPBeginMax>
SEARch:TRIGger:MPHY:PBEGin:MAX? <SearchName>

Sets the end value of the PACP Begin range if `SEARch:TRIGger:MPHY:PBEGin:CONDition` is set to `INRange` or `OORange`.

Parameters:
<PACPBeginMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "PACP Begin" on page 827

SEARch:TRIGger:MPHY:PFID:CONDition <SearchName>,<CondPACPFunc>
SEARch:TRIGger:MPHY:PFID:CONDition? <SearchName>

Sets the condition for PACP Function ID. You can define an exact value or a value range.

Parameters:
<CondPACPFunc> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:MPHY:PFID:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:MPHY:PFID:MIN` and `SEARch:TRIGger:MPHY:PFID:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "PACP Function ID" on page 827

SEARch:TRIGger:MPHY:PFID:MIN <SearchName>,<PACPFuncMin>
SEARch:TRIGger:MPHY:PFID:MIN? <SearchName>

Specifies the PACP Function ID bit pattern, or sets the start value of a pattern range.

Parameters:
<PACPFuncMin> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "PACP Function ID" on page 827

SEARch:TRIGger:MPHY:PFID:MAX <SearchName>,<PACPFuncMax>
SEARch:TRIGger:MPHY:PFID:MAX? <SearchName>

Sets the end value of the PACP Function ID range if `SEARch:TRIGger:MPHY:PFID:CONDition` is set to `INRange` or `OORange`.

Parameters:
<PACPFuncMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "PACP Function ID" on page 827

SEARch:TRIGger:MPHY:ERRor:REServed <SearchName>,<Error_Reserved>
SEARch:TRIGger:MPHY:ERRor:REServed? <SearchName>

Enables/disables search for reserved bit error.

Parameters:
<Error_Reserved> OFF | ON

*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Reserved Bit Error" on page 827

SEARch:TRIGger:MPHY:ERRor:LCMD <SearchName>,<LCCError>
SEARch:TRIGger:MPHY:ERRor:LCMD? <SearchName>

Enables/disables search for LCC error.

Parameters:
<LCCError> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "LCC Command Error" on page 828

SEARch:TRIGger:MPHY:ERRor:SYMBol <SearchName>,<Error_Symbol>
SEARch:TRIGger:MPHY:ERRor:SYMBol? <SearchName>

Enables/disables search for 8b10b symbol error.

Parameters:
<Error_Symbol> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "8b10b Symbol Error" on page 828

SEARch:TRIGger:MPHY:ERRor:UNKNown <SearchName>,<Error_Unknown>
SEARch:TRIGger:MPHY:ERRor:UNKNown? <SearchName>

Enables/disables search for unidentified UniPro frame error.

Parameters:
<Error_Unknown> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Unknown Unipro Frame" on page 828

SEARch:TRIGger:MPHY:ERRor:LENGth <SearchName>,<Error_Length>
SEARch:TRIGger:MPHY:ERRor:LENGth? <SearchName>

Enables/disables search for length error.

Parameters:
<Error_Length> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Length Error" on page 828

26.18.18.5 Search results M-PHY

In all `SEARch:RESult:MPHY:FRAMe<m>` commands, the suffix <m> selects the frame number and suffix <n> selects the cell number in the list of search results.

SEARch:RESult:MPHY:FCOunt?....2322
SEARch:RESult:MPHY:FRAMe<fr>:CCOunt?....2322
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:DATA?....2323
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:TYPE?....2323
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STARt?....2323
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STOP?....2324
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STATe?....2324
SEARch:RESult:MPHY:FRAMe<fr>:DATA?....2324
SEARch:RESult:MPHY:FRAMe<fr>:FTYPe?....2325
SEARch:RESult:MPHY:FRAMe<fr>:STATe?....2325
SEARch:RESult:MPHY:FRAMe<fr>:STARt?....2326
SEARch:RESult:MPHY:FRAMe<fr>:STOP?....2327

SEARch:RESult:MPHY:FCOunt? <SearchName>

Returns the number of frames within the search result.

Query parameters:
<SearchName>

Return values:

<Count>	Range:	0 to 100E+3
	Increment:	1
	*RST:	0

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:CCOunt? <SearchName>

Returns the number of cells within the search result for the selected frame.

Suffix:

<fr>	*

Query parameters:
<SearchName>

Return values:

<NumWords>	Range:	0 to 4.29497E+9
	Increment:	1
	*RST:	0

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:DATA? <SearchName>

Returns the data value within the search result for the selected cell.

Suffix:
<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<WordValue> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:TYPE? <SearchName>

Returns the data type within the search result for the selected cell.

Suffix:
<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<WordType>

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STARt? <SearchName>

Returns the start time of the cell with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STOP? <SearchName>

Returns the stop time of the cell with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STATe? <SearchName>

Returns the state type within the search result for the selected cell.

Suffix:
<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<State> OK | RSVDERROR | CMDERROR | SYMBOLERROR | UNKNOWNERROR | INVALID | INCOMPLETE | UNCorrelated | CRCERROR | VOOR | LENGTHERROR
*RST: OK

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:DATA? <SearchName>

Returns the data for the selected frame within the search result, corresponds to the Data column in the search results table.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:FTYPe? <SearchName>

Returns the type of frame for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Frame_Type> BURST | ADAPT | LCC | DLPDUSOF | DLPDUCOF | DLPDUEOF | DLPDUNAC | DLPDUAFC | PACP | TRIGUPR0 | TRIGUPR1 | TRIGUPR2 | SKIP | FILLER | SPACER | UNKNOWN

BURST
M-PHY burst frame.

ADAPT
M-PHY Adapt frame. This control frame is used for clock/bit synchronization.

LCC
M-PHY LCC frame. This control frame is used for line configuration depending on the `LCC Type`.

DLPDUSOF | DLPDUCOF | DLPDUEOF | DLPDUNAC | DLPDUAFC
UniPro DL PDU frame.

PACP
UniPro frame. This control frame is used mainly for power mode change and L1.5 link management.

TRIGUPR0 | TRIGUPR1 | TRIGUPR2
UniPro frame. This control frame is used for link startup sequence.

SKIP
UniPro frame with Skip symbols for reducing protocol payload bandwidth.

FILLER
M-PHY or UniPro frame with filler words to maintain transmission activity.

SPACER
Scrambled UniPro frame with filler words.

UNKNOWN
No meaningful frame can be determined.

*RST: UNKNOWN

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:STATe? <SearchName>

Returns the state of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | RSVDERROR | CMDERROR | SYMBOLERROR | UNKNOWNERROR | INVALID | INCOMPLETE | UNCorrelated | CRCERROR | VOOR | LENGTHERROR

OK
Valid frame.

RSVDERROR
Erroneous frame due to reserved bit error.

CMDERROR
Erroneous frame due to LCC error.

LENGTHERROR
Erroneous frame due to length error.

SYMBOLERROR
Erroneous frame due to 8b10b symbol error.

UNKNOWNERROR
Erroneous frame due to unidentified UniPro frame error.

INVALID
Invalid frame.

INCOMPLETE
The frame is not complete.

*RST: OK

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:MPHY:FRAMe<fr>:STOP? <SearchName>

Returns the end time for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

26.18.18.6 Trigger USB SSIC (Option R&S RTP-K64)

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

There are two commands for each parameter, that you can use for defining the SSIC trigger settings.

For example, to set the *Frame type =ACK > Field =Route String >Data* value you can use one of the following commands:

- `TRIGger:MPHY:SSIC:FRAMe13:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:MPHY:SSIC:DMIN "ACK", "Route String", 01100`
  Defines the parameter by using the frame and field name.

TRIGger<t>:MPHY:SSIC:ERENable....2328
TRIGger<t>:MPHY:SSIC:ERRor<n>:ENABle....2328
TRIGger<t>:MPHY:SSIC:FRENable....2328
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:ENABle....2328
TRIGger<t>:MPHY:SSIC:FIENable....2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle....2329
TRIGger<t>:MPHY:SSIC:BIT....2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:BIT....2329
TRIGger<t>:MPHY:SSIC:DMAX....2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX....2329
TRIGger<t>:MPHY:SSIC:DMIN....2330
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN....2330

TRIGger<t>:MPHY:SSIC:DOPerator 2330
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator 2330
TRIGger<t>:MPHY:SSIC:IMAX 2331
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX 2331
TRIGger<t>:MPHY:SSIC:IMIN 2331
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN 2331
TRIGger<t>:MPHY:SSIC:IOPerator 2332
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator 2332

TRIGger<t>:MPHY:SSIC:ERENable <ErrorName>,<Enabler>
TRIGger<t>:MPHY:SSIC:ERRor<n>:ENABle <Enable>

Enables or disables the trigger on an error condition.

Suffix:
<t> 1..3

<n> *

Parameters:
<Enable> OFF | ON

*RST: ON

Example: Trigger on CRC and length errors:
```
TRIGger:MPHY:SSIC:ERRor1:ENABle ON
```
Enables CRC Error.
```
TRIGger:MPHY:SSIC:ERENable "Length Error",ON
```
Enables Length Error.

Manual operation: See "Error types, Enable" on page 817

TRIGger<t>:MPHY:SSIC:FRENable <Frame>,<Enabler>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

Parameters:
<Enable> OFF | ON

*RST: OFF

Example:
```
TRIGger:MPHY:SSIC:FRAMe1:ENABle ON
```
Enables the checking condition for the TSEQ frame.
```
TRIGger:MPHY:SSIC:FRENable "TS1" ON
```
Enables the checking condition for the TS1 frame.

TRIGger<t>:MPHY:SSIC:FIENable <Frame>,<Field>,<Enabler>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Example: `TRIGger:MPHY:SSIC:FRAMe1:FLD1:ENABle ON`
Enables the checking condition for the Symbol field of the TSEQ frame.
`TRIGger:MPHY:SSIC:FRENable "TS1", "Loop" ON`
Enables the checking condition for the Loop field of the TS1 frame.

Manual operation: See "AND / Field name / Condition" on page 818

TRIGger<t>:MPHY:SSIC:BIT <Frame>,<Field>,<Bit>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<BitState> ONE | ZERO | DC
*RST: DC

Manual operation: See "BitState" on page 819

TRIGger<t>:MPHY:SSIC:DMAX <Frame>,<Field>,<Data>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if `TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.
<fr> *
Specifies the frame number.
<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Max>

Manual operation: See "Data" on page 818

TRIGger<t>:MPHY:SSIC:DMIN <Frame>,<Field>,<Data>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.
<fr> *
Specifies the frame number.
<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Min>

Manual operation: See "Data" on page 818

TRIGger<t>:MPHY:SSIC:DOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.
<fr> *
Specifies the field number within the frame.
<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one endpoint value to be set using `TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN`.

INRange | OORange
In range, out of range. These conditions require a range of endpoint values to be set using `TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN` and `TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX`.

*RST: EQUal

Manual operation: See "Data" on page 818

TRIGger<t>:MPHY:SSIC:IMAX <Frame>,<Field>,<Index>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if `TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator` is set to `INRange` or `RANGe`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Max> Specifies the end value for the index range within the field. The index range, increment and *RST values depend on the field type.

Manual operation: See "Index" on page 819

TRIGger<t>:MPHY:SSIC:IMIN <Frame>,<Field>,<Index>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<t> 1..3

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:

<Index_Min> Specifies the index value or index start value within the field. The index range, increment and *RST values depend on the field type.

Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Manual operation: See "Index" on page 819

TRIGger<t>:MPHY:SSIC:IOPerator <Frame>,<Field>,<IndexOperator>
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:

<Index_Operator> EQUal | INRange | RANGe

EQUal
This condition requires one endpoint value to be set using `TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN` and `TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX`.

*RST: INRange

Manual operation: See "Index" on page 819

26.18.18.7 Search settings USB SSIC (Option R&S RTP-K64)

There are two commands for each parameter, that you can use for defining the SSIC search settings.

For example, to set the *Frame type =ACK > Field =Route String >Data* value you can use one of the following commands:

- `SEARch:TRIGger:MPHY:SSIC:FRAMe13:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SEARch:TRIGger:MPHY:SSIC:DMIN "ACK", "Route String", 01100`
  Defines the parameter by using the frame and field name.

SEARch:TRIGger:MPHY:SSIC:ERENable <SearchName>,<ErrorName>,<Enabler>
SEARch:TRIGger:MPHY:SSIC:ERRor<m>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:MPHY:SSIC:ERRor<m>:ENABle? <SearchName>

Enables or disables the searching for an error condition.

Suffix:
<m> *

Parameters:
<Enable> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Example: Searches for CRC and length errors:
```
SEARch:TRIGger:MPHY:SSIC:ERRor1:ENABle ON
```
Enables searching for CRC Error.
```
SEARch:TRIGger:MPHY:SSIC:ERENable "Length Error",ON
```
Enables searching for Length Error.

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:FRENable <SearchName>,<Frame>,<Enabler>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:ENABle? <SearchName>

Defines the frame type to be searched for.

Suffix:
<fr> *
Specifies the frame number.

Parameters:
<Enable> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> String with the name of the search.

Example:
```
SEARch:TRIGger:MPHY:SSIC:FRAMe1:ENABle ON
```
Enables searching for the TSEQ frame.
```
SEARch:TRIGger:MPHY:SSIC:FRENable "TS1" ON
```
Enables searching for the TS1 frame.

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:FIENable
<SearchName>,<Frame>,<Field>,<Enabler>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the checking condition for searching a specific data pattern in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<CondEnabler> OFF | ON

ON
Checking condition enabled

OFF
Checking condition disabled

*RST: OFF

Parameters for setting and query:
<SearchName>

Example: `SEARch:TRIGger:MPHY:SSIC:FRAMe1:FLD1:ENABle ON`
Enables searching for the Symbol field of the TSEQ frame.
`SEARch:TRIGger:MPHY:SSIC:FRENable "TS1", "Loop" ON`
Enables searching for the Loop field of the TS1 frame.

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the checking condition for searching a specific data pattern in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<CondEnabler> OFF | ON

ON
Checking condition enabled

OFF
Checking condition disabled

*RST: OFF

Parameters for setting and query:
<SearchName>

Example: `SEARch:TRIGger:MPHY:SSIC:FRAMe1:FLD1:ENABle ON`
Enables searching for the Symbol field of the TSEQ frame.
`SEARch:TRIGger:MPHY:SSIC:FRENable "TS1", "Loop" ON`
Enables searching for the Loop field of the TS1 frame.

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:BIT <SearchName>,<Frame>,<Field>,<Bit>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:BIT <SearchName>,<BitState>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:BIT? <SearchName>

Sets the bit state of a field to be searched that only consists of one bit.

Suffix:
<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<BitState> ONE | ZERO | DC

ONE
1

ZERO
0

DC
"Don't care" (DC) = X

*RST: DC

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:DMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX
<SearchName>,<Data_Max>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX? <SearchName>

Sets the end value of a data pattern range if `SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Max> Specifies the name of the generic trigger setting frame.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:DMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN
<SearchName>,<Data_Min>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN? <SearchName>

Specifies the data pattern to be searched, or sets the start value of a data pattern range to be searched.

Suffix:
<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Min> Specifies the name of the generic trigger setting frame.

Parameters for setting and query:
<SearchName>

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:DOPerator
<SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator
<SearchName>,<Data_Operator>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator? <SearchName>

Sets the operator to set a specific data pattern to be searched in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one end-point value to be set using `SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN`.

INRange | OORange
In range, out of range. These conditions require a range of end-point values to be set using `SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN` and `SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:FRENable <SearchName>,<Frame>,<Enabler>
Setting parameters:
<SearchName>

<Frame>

<Enabler> OFF | ON

Usage: Setting only

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:IMAX <SearchName>,<Frame>,<Field>,<Index>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX
<SearchName>,<Index_Max>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX? <SearchName>

Sets the end value of an index range if `SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator` is set to `INRange` or `RANGe`.

Suffix:
<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<Index_Max> Specifies the end value for the index range within the field.
The index range, increment and *RST values depend on the field type.

Parameters for setting and query:
<SearchName>

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:IMIN <SearchName>,<Frame>,<Field>,<Index>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN
<SearchName>,<Index_Min>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN? <SearchName>

Specifies the index at which the data is to be searched, or sets the start value of an index range in which the data is to be searched.

Suffix:
<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Min> Specifies the index value or the start value of an index range within the field.
The index range, increment and *RST values depend on the field type.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 829

SEARch:TRIGger:MPHY:SSIC:IOPerator
<SearchName>,<Frame>,<Field>,<IndexOperator>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator
<SearchName>,<Index_Operator>
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator? <SearchName>

Sets the operator for the index for searching in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe

EQUal
This condition requires one endpoint value to be set using `SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN` and `SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Search criteria" on page 829

26.18.19 Custom: manchester / NRZ (option R&S RTP-K50)

- Configuration....2339
- Trigger....2356
- Filter....2363
- Decode results....2367
- Search settings....2373
- Search results....2379

26.18.19.1 Configuration

In all `BUS<b>:CMSB` commands, the suffix <b> selects the serial bus.

In all `BUS<b>:CMSB:FRAMe<n>` commands, the suffix <fr> selects a frame number, and the suffix <ce> selects a cell number.

BUS<b>:CMSB:CODing....2340
BUS<b>:CMSB:MANChester:DATA....2341
BUS<b>:CMSB:MANChester:POLarity....2341
BUS<b>:CMSB:MANChester:THReshold:HIGH....2341
BUS<b>:CMSB:MANChester:THReshold:LOW....2342
BUS<b>:CMSB:MANChester:THReshold:PRESet....2342
BUS<b>:CMSB:MANChester:THReshold:COUPling....2342
BUS<b>:CMSB:MANChester:CPHase....2343
BUS<b>:CMSB:NRZ:CLCK....2343
BUS<b>:CMSB:NRZ:DATA....2344
BUS<b>:CMSB:NRZ:IDLPolarity....2344
BUS<b>:CMSB:NRZ:CPOLarity....2345
BUS<b>:CMSB:NRZ:CPHase....2345
BUS<b>:CMSB:NRZ:ENBLe....2346
BUS<b>:CMSB:NRZ:ENAPolarity....2346
BUS<b>:CMSB:NRZ:POLarity....2346
BUS<b>:CMSB:NRZ:THReshold:CLCK....2347
BUS<b>:CMSB:NRZ:HYSTeresis:CLCK....2347
BUS<b>:CMSB:NRZ:THReshold:DATA....2347
BUS<b>:CMSB:NRZ:HYSTeresis:DATA....2347
BUS<b>:CMSB:NRZ:THReshold:ENBLe....2348
BUS<b>:CMSB:NRZ:HYSTeresis:ENBLe....2348

BUS<b>:CMSB:NRZ:THReshold:PRESet....2348
BUS<b>:CMSB:NRZ:THReshold:COUPling....2349
BUS<b>:CMSB:BITRate:ENABle....2349
BUS<b>:CMSB:BITRate:VALue....2350
BUS<b>:CMSB:GAPTime:ENABle....2350
BUS<b>:CMSB:GAPTime:VALue....2350
BUS<b>:CMSB:ADDFrame....2350
BUS<b>:CMSB:FCOunt?....2351
BUS<b>:CMSB:CLR....2351
BUS<b>:CMSB:FRAMe<fr>:TYPE....2351
BUS<b>:CMSB:FRAMe<fr>:APPend....2351
BUS<b>:CMSB:FRAMe<fr>:CCOunt?....2352
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:NAME....2352
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:BITCount....2352
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CONDition....2353
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:FORMat....2353
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:BITorder....2353
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CRGB....2354
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:COLor....2354
BUS<b>:CMSB:EXRBits....2355
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CLMN....2355
BUS<b>:CMSB:LOAD....2355
BUS<b>:CMSB:SAVE....2356

BUS<b>:CMSB:CODing <CodingStandard>

Selects the custom serial bus coding standard.

Suffix:
<b> 1..4

Parameters:
<CodingStandard> MANC | MANT | NRZ | NRZU

MANC
Manchester (normal polarity)

MANT
Manchester II (inverted polarity).
Note that some additional subtle differences between MANC and MANT require separate protocols.

NRZ
NRZ (non-return-to-zero), clocked

NRZU
NRZ (non-return-to-zero), unclocked

*RST: MANC

Manual operation: See "Coding Standard" on page 833

BUS<b>:CMSB:MANChester:DATA <SourceMANData>

Selects the source channel for the data signal. For triggering on a serial bus, analog channels "C1"–"C4" are required. Otherwise, if no serial bus trigger has been selected, permitted source selections include the mathematical channels and the reference channels .

Suffix:
<b> 1..4

Parameters:
<SourceMANData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Manual operation: See "Data Source" on page 833

BUS<b>:CMSB:MANChester:POLarity <MAN_PolaDat>

Selects the polarity of the custom serial bus data signal in Manchester coding standards.

Suffix:
<b> 1..4

Parameters:
<MAN_PolaDat> NORMal | INVert

NORMal
Manchester or Manchester II polarity remains unchanged

INVert
Manchester polarity is inverted and becomes Manchester II polarity, Manchester II polarity is inverted and becomes Manchester polarity

*RST: NORMal

Manual operation: See "Data Polarity (Manchester)" on page 834

BUS<b>:CMSB:MANChester:THReshold:HIGH <MAN_ThresUpp>

Sets the upper threshold for data signal digitization in Manchester coding standards.

Suffix:
<b> 1..4

Parameters:
<MAN_ThresUpp> Range: -25 to 25
Increment: 0.1
*RST: 5
Default unit: V

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:MANChester:THReshold:LOW <MAN_ThresLow>

Sets the lower threshold for data signal digitization in Manchester coding standards.

Suffix:
<b> 1..4

Parameters:
<MAN_ThresLow> Range: -25 to 25
Increment: 0.1
*RST: -5
Default unit: V

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:MANChester:THReshold:PRESet <PresetValue>

Sets the Manchester thresholds to predefined or individually definable voltage levels.

Suffix:
<b> 1..4

Parameters:
<PresetValue> V05 | V2 | V5 | V7 | MANual

V05
Sets the upper threshold to +0.5 V and the lower threshold to -0.5 V

V2
Sets the upper threshold to +2.0 V and the lower threshold to -2.0 V

V5
Sets the upper threshold to +5.0 V and the lower threshold to -5.0 V

V7
Sets the upper threshold to +7.0 V and the lower threshold to -7.0 V

MANual
Allows to set individual threshold voltage levels

*RST: V5

BUS<b>:CMSB:MANChester:THReshold:COUPling <MAN_ThresCpl>

Couples the upper and lower threshold values for the Manchester and Manchester II coding standards. The values are coupled to voltages with the same magnitude but opposite sign (positive for the upper threshold and negative for the lower threshold). However, if the upper threshold is set to a negative voltage or the lower threshold is set to a positive voltage, coupling is disabled, and the other voltage (the one that was not actively set) is automatically adjusted, to avoid an upper threshold below the lower one, or a lower threshold above the upper one.

Suffix:
<b> 1..4

Parameters:
<MAN_ThresCpl> OFF | ON

ON
Activates coupling of the upper and lower threshold values.

OFF
Disables coupling of the upper and lower threshold values.

*RST: ON

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:MANChester:CPHase <MAN_ClkPhaseMd>

Selects the phase of the custom serial bus clock signal for the "Manchester" coding standards. For details, see "Clock Phase (Manchester)" on page 835.

Suffix:
<b> 1..4

Parameters:
<MAN_ClkPhaseMd> FEDGe | SEDGe

FEDGe
Sets the sampling edge to be on the first edge.

SEDGe
Sets the sampling edge to be on the second edge.

AUTO
Lets the decoder automatically select the method ("First Edge" or "Second Edge") for detecting the sampling edge.

*RST: SEDGe

Manual operation: See "Clock Phase (Manchester)" on page 835

BUS<b>:CMSB:NRZ:CLCK <SourceNRZClock>

Selects the source channel for the clock signal in the NRZ Clocked coding standard.

For triggering on the serial bus when the NRZ clocked coding standard is selected, analog or digital channel sources are required.

Otherwise, if no serial bus trigger has been selected, permitted source selections include the mathematical channels and the reference channels.

Suffix:
<b> 1..4

Parameters:

<SourceNRZClock> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

*RST: C2W1

Manual operation: See "Clock Source" on page 834

BUS<b>:CMSB:NRZ:DATA <SourceNRZData>

Selects the source channel for the data signal in NRZ coding standards.

For triggering on the serial bus when the NRZ clocked coding standard is selected, analog or digital channel sources are required.

For triggering on the serial bus when the NRZ unclocked coding standard is selected, analog channel sources are required.

Otherwise, if no serial bus trigger has been selected, permitted source selections include the mathematical channels and the reference channels.

Suffix:

<b> 1..4

Parameters:

<SourceNRZData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

*RST: C1W1

Manual operation: See "Data Source" on page 833

BUS<b>:CMSB:NRZ:IDLPolarity <NRZ_PolaIdle>

Selects the idle polarity of the custom serial bus data signal (only available for the coding standard "NRZ Unclocked").

Suffix:

<b> 1..4

Parameters:

<NRZ_PolaIdle> IDLLow | IDLHigh

IDLLow
Sets the base value of the data bus to be "0". After an idle period, the data signal starts with a low-to-high transition

IDLHigh
Sets the base value of the data bus to be "1". After an idle period, the data signal starts with a high-to-low transition

*RST: IDLLow

Manual operation: See "Data Idle Polarity (NRZ Unclocked)" on page 835

BUS<b>:CMSB:NRZ:CPOLarity <CPOLMode>

Selects the polarity of the clock signal for the coding standard NRZ Clocked.

Suffix:
<b> 1..4

Parameters:
<CPOLMode> IDLLow | IDLHigh

IDLLow
Sets the base value of the clock to be "0", the clock signal starts with a low-to-high transition

IDLHigh
Sets the base value of the clock to be "1", the clock signal starts with a high-to-low transition.

*RST: IDLLow

Manual operation: See "Clock Polarity (NRZ Clocked)" on page 835

BUS<b>:CMSB:NRZ:CPHase <CPHAMode>

Selects the phase of the custom serial bus clock signal for the coding standard "NRZ Clocked", depending on `BUS<b>:CMSB:NRZ:IDLPolarity` on page 2344.

Suffix:
<b> 1..4

Parameters:
<CPHAMode> FEDGe | SEDGe

FEDGe
Sets the clocking transaction to be on the first edge:
If Clock Polarity = "IDLLow", data are captured on the clock's rising edge (low-to-high transition) and propagated on a falling edge
If Clock Polarity = "IDLHigh", data are captured on the clock's falling edge (high-to-low transition) and propagated on a rising edge

SEDGe
Sets the clocking transaction to be on the second edge:
If Clock Polarity = "IDLLow", data are captured on the clock's falling edge (high-to-low transition) and propagated on a rising edge
If Clock Polarity = "IDLHigh", data are captured on the clock's rising edge (low-to-high transition) and propagated on a falling edge

*RST: FEDGe

Manual operation: See "Clock Phase (NRZ Clocked)" on page 836

BUS<b>:CMSB:NRZ:ENBLe <SrcNRZEnab>

Selects the input source for the custom serial bus enable signal.

If an input is chosen, signals will be only decoded while this channel is in the enabled state. This allows you to mark a time when the signal on the selected source is active and when not.

For triggering on a serial bus, analog channels "C1"–"C4" are required. Otherwise, if no serial bus trigger has been selected, permitted source selections include the mathematical channels and the reference channels.

Suffix:
<b> 1..4

Parameters:
<SrcNRZEnab> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Manual operation: See "Enable Source (NRZ)" on page 836

BUS<b>:CMSB:NRZ:ENAPolarity <NRZ_PolaEnab>

Sets whether the transmitted enable signal is active when the voltage is below the threshold (`ENALow`) or higher than it (`ENAHIgh`).

Suffix:
<b> 1..4

Parameters:
<NRZ_PolaEnab> ENALow | ENAHigh

*RST: ENAHigh

Manual operation: See "Enable Polarity (NRZ)" on page 836

BUS<b>:CMSB:NRZ:POLarity <NRZ_PolaDat>

Selects the polarity of the custom serial bus data signal in NRZ coding standards.

Suffix:
<b> 1..4

Parameters:
<NRZ_PolaDat> ACTLow | ACTHigh

ACTLow
Active low: the value "1" is represented by a voltage below the threshold

ACTHigh
Active high: the value "1" is represented by a voltage above the threshold

*RST: ACTHigh

Manual operation: See "Data Polarity (NRZ)" on page 834

BUS<b>:CMSB:NRZ:THReshold:CLCK <NRZ_ThresClk>

Sets the threshold for the clock signal digitization in the NRZ Clocked coding standard.

Suffix:
<b> 1..4

Parameters:
<NRZ_ThresClk> Range: -25 to 25
Increment: 0.1
*RST: 2
Default unit: V

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:NRZ:HYSTeresis:CLCK <NRZ_HystClk>

Sets the hysteresis size on the clock channel.

Suffix:
<b> 1..4

Parameters:
<NRZ_HystClk> Range: -25 to 25
Increment: 0.1
*RST: 0.1
Default unit: V

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:NRZ:THReshold:DATA <NRZ_ThresDat>

Sets the threshold for the data signal digitization in NRZ coding standards.

Suffix:
<b> 1..4

Parameters:
<NRZ_ThresDat> Range: -25 to 25
Increment: 0.1
*RST: 2
Default unit: V

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:NRZ:HYSTeresis:DATA <NRZ_HystDat>

Sets the hysteresis size on the data line channel.

Suffix:
<b> 1..4

Parameters:

<NRZ_HystDat> Range: -25 to 25
Increment: 0.1
*RST: 0.1
Default unit: V

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:NRZ:THReshold:ENBLe <NRZ_ThresEnab>

Sets the threshold for the enable signal digitization in NRZ coding standards.

Suffix:

<b> 1..4

Parameters:

<NRZ_ThresEnab> Range: -25 to 25
Increment: 0.1
*RST: 2
Default unit: V

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:NRZ:HYSTeresis:ENBLe <NRZ_HystEnab>

Sets the hysteresis size on the enable line channel.

Suffix:

<b> 1..4

Parameters:

<NRZ_HystEnab> Range: -25 to 25
Increment: 0.1
*RST: 0.1
Default unit: V

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:NRZ:THReshold:PRESet <PresetValue>

Sets the NRZ thresholds to predefined or individually definable voltage levels.

Suffix:

<b> 1..4

Parameters:

<PresetValue> V05 | V2 | V5 | V7 | MANual

V05
Sets the clock and data threshold to +0.5 V (in case of NRZ Unclocked: data threshold, only)

V2
Sets the clock and data threshold to +2.0 V (in case of NRZ Unclocked: data threshold, only)

V5
Sets the clock and data threshold to +5.0 V (in case of NRZ Unclocked: data threshold, only)

V7
Sets the clock and data threshold to +7.0 V (in case of NRZ Unclocked: data threshold, only)

MANual
Allows to set individual threshold voltage levels

*RST: V5

BUS<b>:CMSB:NRZ:THReshold:COUPling <NRZ_ThresCpl>

Couples the clock and data threshold values for the NRZ Clocked coding standard. The values are coupled to the same number.

Suffix:
<b> 1..4

Parameters:
<NRZ_ThresCpl> OFF | ON

ON
Activates coupling of the NRZ clock and data threshold values.

OFF
Disables coupling of the NRZ clock and data threshold values.

*RST: ON

Manual operation: See "Set Thresholds" on page 836

BUS<b>:CMSB:BITRate:ENABle <BitrateEnable>

Enables the bit rate settings (must always be enabled for the coding standard "NRZ Unclocked", and also for triggering on signals in any coding standard).

Suffix:
<b> 1..4

Parameters:
<BitrateEnable> OFF | ON

ON
Bit rate settings enabled

OFF
Bit rate settings disabled

*RST: OFF

Manual operation: See "Check bit rate" on page 839

BUS<b>:CMSB:BITRate:VALue <Bitrate>

Sets the transmission speed setting for the custom serial bus data signal.

Suffix:
<b> 1..4

Parameters:
<Bitrate> Range: 300 to 2E9
Increment: 100E3
*RST: 10E6
Default unit: bps

Manual operation: See "Bit Rate" on page 839

BUS<b>:CMSB:GAPTime:ENABle <GapTimeEnable>

Enables the gap time settings (must always be enabled for the coding standard "NRZ Unclocked", and also for triggering on signals in any coding standard).

Suffix:
<b> 1..4

Parameters:
<GapTimeEnable> OFF | ON

ON
Gap time settings enabled

OFF
Gap time settings disabled

*RST: OFF

Manual operation: See "Check gap time" on page 839

BUS<b>:CMSB:GAPTime:VALue <MinGapTime>

Sets a minimum gap time for synchronization.

Suffix:
<b> 1..4

Parameters:
<MinGapTime> Range: 1E-9 to 1
Increment: 1E-9
*RST: 10E-6
Default unit: s

Manual operation: See "Min gap time" on page 840

BUS<b>:CMSB:ADDFrame

Creates an empty frame format description and adds it to the end of the frame description list.

Suffix:
<b> 1..4

Usage: Event

Manual operation: See "Frames" on page 841

BUS<b>:CMSB:FCOunt?

Returns the number of frames.

Suffix:
<b> 1..4

Return values:
<Count>

Usage: Query only

Manual operation: See "Frames" on page 841

BUS<b>:CMSB:CLR

Erases all cells and frames that have been created for a specific custom protocol.

Suffix:
<b> 1..4

Usage: Event

Manual operation: See "Frames" on page 841

BUS<b>:CMSB:FRAMe<fr>:TYPE <FrameType>

Enables the user to set a string to describe the frame type, typically according to the applicable protocol standard specifications. (For example, MDIO (option R&S RTP-K55) defines the frames READ, WRITE, ADDRESS, etc.)

Suffix:
<b> 1..4

<fr> *

Parameters:
<FrameType>

Manual operation: See "Frames" on page 841

BUS<b>:CMSB:FRAMe<fr>:APPend

Creates an empty cell description and adds it to the end of the active frame description.

Suffix:
<b> 1..4

<fr> *

Usage: Event

Manual operation: See "Field name" on page 842

BUS<b>:CMSB:FRAMe<fr>:CCOunt?

Returns the number of cells in the specified frame.

Suffix:
<b> 1..4

<fr> *

Return values:
<Count>

Usage: Query only

Manual operation: See "Field name" on page 842

BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:NAME <CellName>

Enables the user to set a cell name within a frame. Names do not have to be unique, they are just for user support.

Suffix:
<b> 1..4

<fr> *

<ce> *

Parameters:
<CellName>

Manual operation: See "Field Name" on page 842

BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:BITCount <BitCount>

Sets the bit count of a cell, hence its length. Based upon the lengths of the previous cells, this also defines the position of the cell start and end within a frame.

Suffix:
<b> 1..4

<fr> *

<ce> *

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Manual operation: See "Bits" on page 843

BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CONDition <Condition>

Sets various operators for a cell, to identify, e.g., mandatory values such as a CRC checksum or an ID, that help to identify a frame.

The implemented conditions and functionalities are the "equal" and "array" operators.

The numeric format of the condition needs to be set according to `BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:FORMat` on page 2353.

Suffix:
<b> 1..4
<fr> *
<ce> *

Parameters:
<Condition>

Manual operation: See "Condition" on page 843

BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:FORMat <CellFormat>

Selects the numeric data format for the command `BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CONDition` on page 2353, as well as for the result and honeycomb display.

Suffix:
<b> 1..4
<fr> *
<ce> *

Parameters:
<CellFormat> DEC | HEX | OCT | BIN

DEC
Decimal

HEX
Hexadecimal

OCT
Octal

BIN
Binary

*RST: BIN

Manual operation: See "Format" on page 846

BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:BITorder <BitOrder>

Selects in which order the bits of a cell are evaluated, as well as presented in the results table and honeycomb display.

Suffix:
<b> 1..4
<fr> *
<ce> *

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first, evaluation starts at the LSB

MSBF
Most significant bit first, evaluation starts at the MSB

*RST: MSBF

Manual operation: See "Bit Order" on page 847

BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CRGB <Color>

Selects a cell's color representation in the honeycomb display.

Suffix:
<b> 1..4
<fr> *
<ce> *

Parameters:
<Color> ARGB value of the color to be used for the table entry.
ARGB=<Opacity(alpha) value><red value><green value><blue value>, in hexadecimal or decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Manual operation: See "Color" on page 847

BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:COLor <CellColor>

Selects a cell's color representation in the honeycomb display.

Suffix:
<b> 1..4
<fr> *
<ce> *

Parameters:
<CellColor> YELLow | BLUE | GREEN | GREen | PURPLE | PURPle | GRAY

GREEN = GREen, PURPLE = PURPle

*RST: YELLow

BUS<b>:CMSB:EXRBits

Exports the decoded frames as raw bits.

Suffix:
<b> 1..4

Usage: Event

BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CLMN <Column>

Selects which cell shall be displayed in which result column of the decode table.

The decode table supports three result columns, which have to be unique for each frame type. For different frame types, though, different result columns can be defined to display unrelated information.

Suffix:
<b> 1..4

<fr> *

<ce> *

Parameters:
<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed in the decode table.

COL1
The result is displayed in column 1 of the decode table.

COL2
The result is displayed in column 2 of the decode table.

COL3
The result is displayed in column 3 of the decode table.

*RST: NONE

Manual operation: See "Result" on page 847

BUS<b>:CMSB:LOAD <FileName>

Opens an existing frame description file in xml format. The default path is `\\Public\Documents\Rohde-Schwarz\RTx\SaveXML`

Suffix:
<b> 1..4

Setting parameters:
<FileName>

Usage: Setting only

Manual operation: See "Open or Save XML File" on page 847

BUS<b>:CMSB:SAVE <FileName>

Saves a created frame description into an xml file ("Save As..."). The default path is `\\Public\Documents\Rohde-Schwarz\RTx\SaveXML`

Suffix:
<b> 1..4

Setting parameters:
<FileName>

Usage: Setting only

Manual operation: See "Open or Save XML File" on page 847

26.18.19.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:CMSB:TYPE....2357
TRIGger<t>:CMSB:PATTern....2357
TRIGger<t>:CMSB:ICONdition....2357
TRIGger<t>:CMSB:IMIN....2358
TRIGger<t>:CMSB:IMAX....2358
TRIGger<t>:CMSB:NRZ:WRDLength....2358
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:ENABle....2359
TRIGger<t>:CMSB:ADVanced:FRENable....2359
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:ENABle....2359
TRIGger<t>:CMSB:ADVanced:FIENable....2359
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:BIT....2359
TRIGger<t>:CMSB:ADVanced:BIT....2359
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DMAX....2360
TRIGger<t>:CMSB:ADVanced:DMAX....2360
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DMIN....2360
TRIGger<t>:CMSB:ADVanced:DMIN....2360
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DOPerator....2361
TRIGger<t>:CMSB:ADVanced:DOPerator....2361
TRIGger<t>:CMSB:ADVanced:ERRor<n>:ENABle....2361
TRIGger<t>:CMSB:ADVanced:ERENable....2361
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IMAX....2361
TRIGger<t>:CMSB:ADVanced:IMAX....2361
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IMIN....2362
TRIGger<t>:CMSB:ADVanced:IMIN....2362
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IOPerator....2362
TRIGger<t>:CMSB:ADVanced:IOPerator....2362

TRIGger<t>:CMSB:TYPE <Type>

Selects the trigger type for custom serial bus analysis.

Suffix:
<t> 1..3

Parameters:
<Type> STARt | PATTern | ADVanced

STARt
Triggers on the frame start, which is the end of the gap time as specified in `BUS<b>:CMSB:GAPTime:VALue` on page 2350

ADVanced
Advanced trigger with `TRIGger:CMSB:ADVanced` commands. Only available if frames are defined.

PATTern
Triggers on a data pattern to be specified in `TRIGger<t>:CMSB:PATTern` on page 2357

*RST: STARt

Manual operation: See "Type" on page 852

TRIGger<t>:CMSB:PATTern <DataPattern>

Sets the pattern match conditions for a payload data check. The trigger is set to the first occurrence of a matching data bit pattern (which can be freely specified), starting after the minimum gap time (`BUS<b>:CMSB:GAPTime:VALue` on page 2350), and after the detected start of the data frame.

Suffix:
<t> 1..3

Parameters:
<DataPattern>

Manual operation: See "Pattern" on page 853

TRIGger<t>:CMSB:ICONdition <DataPosOperator>

Sets the operator to set a specific bit index (data position).

Suffix:
<t> 1..3

Parameters:
<DataPosOperator> EQUal | GETHan | INRange

EQUal
Equal

GETHan
Greater than or equal

INRange
In range

*RST: INRange

Manual operation: See "Pattern" on page 853

TRIGger<t>:CMSB:IMIN <DataPosition>

Sets the bit index (data position). If `TRIGger<t>:CMSB:ICONdition` on page 2357 is set to "INRange", "IMIN" sets the start value of the bit index range.

Suffix:
<t> 1..3

Parameters:
<DataPosition> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Manual operation: See "Pattern" on page 853

TRIGger<t>:CMSB:IMAX <DataPositionTo>

Sets the end value of the bit index range (data position range), if `TRIGger<t>:CMSB:ICONdition` on page 2357 is set to "INRange".

Suffix:
<t> 1..3

Parameters:
<DataPositionTo> Range: 0 to 65.535E+3
Increment: 1
*RST: 65.535E+3

Manual operation: See "Pattern" on page 853

TRIGger<t>:CMSB:NRZ:WRDLength <NRZ_WordLength>

Sets the number of bits in an NRZ Unclocked word.

Suffix:
<t> 1..3

Parameters:
<NRZ_WordLength> Range: 0 to 31
Increment: 1
*RST: 8

Manual operation: See "Pattern" on page 853

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:ENABle <Enable>
TRIGger<t>:CMSB:ADVanced:FRENable <Frame>,<Enabler>

Enables or disables the specific frame to be triggered on.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Enabler> OFF | ON

Example: `:TRIGger:CMSB:ADVanced:FRENable "Master" 1`
Enables the Master frame.
`:TRIGger:CMSB:ADVanced:FRAMe1:ENABle 1`
Enables the 1st frame that you have defined.

Usage: Setting only

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>
TRIGger<t>:CMSB:ADVanced:FIENable <Frame>,<Field>,<Enabler>

Enables or disables the specific field within the defined frame to be triggered on.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Field>

<Enabler> OFF | ON

Example: `:TRIGger:CMSB:ADVanced:FIEN "Master", "CRC", 1`
Enables the CRC field of the Master frame.
`:TRIGger:CMSB:ADVanced:FRAMe1:FLD3:ENABle 1`
Enables the 3rd field of the 1st frame that you have defined.

Usage: Setting only

Manual operation: See "Field name / Condition / Enable" on page 855

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:BIT <BitState>
TRIGger<t>:CMSB:ADVanced:BIT <Frame>,<Field>,<Bit>

Sets the bit state of a field to be triggered on that only consists of one bit.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Field>

<Bit> ONE | ZERO | DC

ONE
1

ZERO
0

DC
"Do not care" (DC) = X

Usage: Setting only

Manual operation: See "BitState" on page 856

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>
TRIGger<t>:CMSB:ADVanced:DMAX <Frame>,<Field>,<Data>

Sets the end value of a data pattern range if `TRIGger<t>:CMSB:ADVanced:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Field>

<Data>

Usage: Setting only

Manual operation: See "Data" on page 856

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>
TRIGger<t>:CMSB:ADVanced:DMIN <Frame>,<Field>,<Data>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Field>

<Data>

Usage: Setting only

Manual operation: See "Data" on page 856

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>
TRIGger<t>:CMSB:ADVanced:DOPerator <Frame>,<Field>,<Operator>

Sets the operator for the data pattern.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Field>

<Operator> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

ANY = OFF
The data of the required pattern is not relevant.

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
This condition requires one endpoint value to be set using `TRIGger<t>:CMSB:ADVanced:DMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `TRIGger<t>:CMSB:ADVanced:DMAX` and `TRIGger<t>:CMSB:ADVanced:DMIN`.

Usage: Setting only

Manual operation: See "Data" on page 856

TRIGger<t>:CMSB:ADVanced:ERRor<n>:ENABle <Enable>
TRIGger<t>:CMSB:ADVanced:ERENable <ErrorName>,<Enabler>

Enables triggering on errors. You can search for all error types in parallel.

Suffix:
<t> 1..3

Setting parameters:
<ErrorName>

<Enabler> OFF | ON

Usage: Setting only

Manual operation: See "Error types: Item name, Enable" on page 855

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>
TRIGger<t>:CMSB:ADVanced:IMAX <Frame>,<Field>,<IndexMax>

Sets the end value of an index range if `TRIGger<t>:CMSB:ADVanced:IMAX` is set to `INRange` or `RANGe`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Field>

<IndexMax>

Usage: Setting only

Manual operation: See "Index" on page 856

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>
TRIGger<t>:CMSB:ADVanced:IMIN <Frame>,<Field>,<IndexMin>

Specifies the index, or sets the start value of an index range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Field>

<IndexMin>

Usage: Setting only

Manual operation: See "Index" on page 856

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>
TRIGger<t>:CMSB:ADVanced:IOPerator <Frame>,<Field>,<IndexOperator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Setting parameters:
<Frame>

<Field>

<IndexOperator> ANY | OFF | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | RANGe

ANY = OFF
The index of the required pattern is not relevant.

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
This condition requires one endpoint value to be set using `TRIGger<t>:CMSB:ADVanced:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `TRIGger<t>:CMSB:ADVanced:IMAX` and `TRIGger<t>:CMSB:ADVanced:IMIN`.

Usage: Setting only

Manual operation: See "Index" on page 856

26.18.19.3 Filter

BUS<b>:CMSB:FILTer:ENABle....2363
BUS<b>:CMSB:FILTer:ERENable....2363
BUS<b>:CMSB:FILTer:ERRor<n>:ENABle....2364
BUS<b>:CMSB:FILTer:FIENable....2364
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2364
BUS<b>:CMSB:FILTer:BIT....2364
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:BIT....2364
BUS<b>:CMSB:FILTer:DMAX....2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2365
BUS<b>:CMSB:FILTer:DMIN....2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2365
BUS<b>:CMSB:FILTer:DOPerator....2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2365
BUS<b>:CMSB:FILTer:FRENable....2366
BUS<b>:CMSB:FILTer:FRAMe<fr>:ENABle....2366
BUS<b>:CMSB:FILTer:IMAX....2366
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2366
BUS<b>:CMSB:FILTer:IMIN....2366
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2366
BUS<b>:CMSB:FILTer:IOPerator....2367
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2367

BUS<b>:CMSB:FILTer:ENABle <Enable>

Enables filtering for the custom serial bus.

Suffix:
<b> 1..4

Parameters:
<Enable> OFF | ON
*RST: OFF

Manual operation: See "Apply Filter" on page 850

BUS<b>:CMSB:FILTer:ERENable <ErrorName>,<Enabler>

Enables filtering on error.

Suffix:
<b> 1..4

Setting parameters:
<ErrorName>

<Enabler> OFF | ON

Usage: Setting only

BUS<b>:CMSB:FILTer:ERRor<n>:ENABle <Enable>

Enables filtering on error. You can filter all error types in parallel.

Suffix:
<b> 1..4

<n> *

Parameters:
<Enable> OFF | ON

*RST: ON

Manual operation: See "Error types: Item name, Enable" on page 859

BUS<b>:CMSB:FILTer:FIENable <Frame>,<Field>,<Enabler>
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the specific field within the defined frame to be filtered.

Suffix:
<b> 1..4

<fr> *

<fl> *

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Manual operation: See "Field name / Condition / Enable" on page 859

BUS<b>:CMSB:FILTer:BIT <Frame>,<Field>,<Bit>
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field to be filtered on that only consists of one bit.

Suffix:
<b> 1..4

<fr> *

<fl> *

Parameters:
<BitState> ONE | ZERO | DC

*RST: DC

Manual operation: See "Bit State" on page 859

BUS<b>:CMSB:FILTer:DMAX <Frame>,<Field>,<Data>
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if `BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<b> 1..4
<fr> *
<fl> *

Parameters:
<Data_Max>

Manual operation: See "Data" on page 859

BUS<b>:CMSB:FILTer:DMIN <Frame>,<Field>,<Data>
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<b> 1..4
<fr> *
<fl> *

Parameters:
<Data_Min>

Manual operation: See "Data" on page 859

BUS<b>:CMSB:FILTer:DOPerator <Frame>,<Field>,<Operator>
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern.

Suffix:
<b> 1..4
<fr> *
<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Manual operation: See "Data" on page 859

BUS<b>:CMSB:FILTer:FRENable <Frame>,<Enabler>
BUS<b>:CMSB:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered.

Suffix:
<b> 1..4

<fr> *

Parameters:
<Enable> OFF | ON
*RST: OFF

Manual operation: See "Frame type" on page 858

BUS<b>:CMSB:FILTer:IMAX <Frame>,<Field>,<Data>
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if `BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator` is set to `INRange` or `RANGe`.

Suffix:
<b> 1..4

<fr> *

<fl> *

Parameters:
<Index_Max> Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Manual operation: See "Index" on page 859

BUS<b>:CMSB:FILTer:IMIN <Frame>,<Field>,<Data>
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<b> 1..4

<fr> *

<fl> *

Parameters:
<Index_Min> Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Manual operation: See "Index" on page 859

BUS<b>:CMSB:FILTer:IOPerator <Frame>,<Field>,<Operator>
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<b> 1..4
<fr> *
<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Manual operation: See "Index" on page 859

26.18.19.4 Decode results

In all `BUS<b>:CSMB:RESult<n>` commands, the suffix <b> selects the serial bus, the suffix <n> selects the result number in the decode table, and the suffix <ce> selects the cell number.

The following is an example for a set of query commands for bus 1 and result 1 is shown in the following, together with examples for outcomes of these queries:

- `:BUS1:CMSB:RCOunt?` !5

- `:BUS1:CMSB:RESult1:STATe?` !OK
- `:BUS1:CMSB:RESult1:STARt?` ! -0.0024964177
- `:BUS1:CMSB:RESult1:STOP?` ! -0.0024030384
- `:BUS1:CMSB:RESult1:TYPE?` !ff
- `:BUS1:CMSB:RESult1:CONE?` !0b11111111
- `:BUS1:CMSB:RESult1:CTWO?` !0xAA
- `:BUS1:CMSB:RESult1:CTHR?` !0xF590

- `:BUS1:CMSB:RESult1:CCOunt?` !5

- `:BUS1:CMSB:RESult1:CELL1:STAT?` !OK
- `:BUS1:CMSB:RESult1:CELL1:NAME?` !Start Delim
- `:BUS1:CMSB:RESult1:CELL1:VALue?` !101010101HL10HL0

- `:BUS1:CMSB:RESult1:CELL2:STAT?` !OK
- `:BUS1:CMSB:RESult1:CELL2:NAME?` !OP-FF
- `:BUS1:CMSB:RESult1:CELL2:VALue?` !0b11111111

- `:BUS1:CMSB:RESult1:CELL3:STAT?` !OK

- :BUS1:CMSB:RESult1:CELL3:NAME? !data
- :BUS1:CMSB:RESult1:CELL3:VALue? !0xAA

- :BUS1:CMSB:RESult1:CELL4:STAT? !OK
- :BUS1:CMSB:RESult1:CELL4:NAME? !CRC
- :BUS1:CMSB:RESult1:CELL4:VALue? !0xF590

- :BUS1:CMSB:RESult1:CELL5:STAT? !OK
- :BUS1:CMSB:RESult1:CELL5:NAME? !End Delim
- :BUS1:CMSB:RESult1:CELL5:VALue? !1HLHL101

To show the results on the screen, use the following commands:

- BUS<b>:RESult on page 1834

BUS<b>:CMSB:RCOunt? 2368
BUS<b>:CMSB:RESult<n>:STATe? 2368
BUS<b>:CMSB:RESult<n>:STARt? 2369
BUS<b>:CMSB:RESult<n>:STOP? 2369
BUS<b>:CMSB:RESult<n>:TYPE? 2370
BUS<b>:CMSB:RESult<n>:CONE? 2370
BUS<b>:CMSB:RESult<n>:CTWO? 2370
BUS<b>:CMSB:RESult<n>:CTHRee? 2371
BUS<b>:CMSB:RESult<n>:CCOunt? 2371
BUS<b>:CMSB:RESult<n>:CELL<ce>:NAME? 2371
BUS<b>:CMSB:RESult<n>:CELL<ce>:STARt? 2371
BUS<b>:CMSB:RESult<n>:CELL<ce>:STOP? 2372
BUS<b>:CMSB:RESult<n>:CELL<ce>:STATe? 2372
BUS<b>:CMSB:RESult<n>:CELL<ce>:VALue? 2373

BUS<b>:CMSB:RCOunt?

Returns the count number of decoded result frames in a custom serial bus waveform. Basically, this is the maximum result index <n> when querying results by using BUS<b>:CMSB:RESult<n>:XXX.

Suffix:
<b> 1..4

Return values:
<Count>

Usage: Query only

BUS<b>:CMSB:RESult<n>:STATe?

Returns the overall state of the frame: either OK or the relevant error condition. R&S RTP-K50 marks each frame with a status that indicates whether the decode succeeded or not.

Suffix:
<b> 1..4
<n> *

Return values:
<State> OK | LENGth | UNKNown | INComplete | CRC | PARity

OK
The frame was decoded normally and conforms to the frame description.

LENGth
The length error indicates that the frame ended prematurely, or an array in the frame had too few elements. The amount of bits that the software expected (based upon the user's frame description) was not found before the frame was terminated. This might occur because a new frame synchronized, or a gap appeared between the bits.

UNKNown
Unknown error

INComplete
The frame ended prematurely because it extends past the end of the record.

CRC
Checksum error in cyclic redundancy check (error in data)

PARity
Parity bit error, indicating a transmission error (only available if a parity is configured)

*RST: OK

Usage: Query only

BUS<b>:CMSB:RESult<n>:STARt?

Returns the start time of the frame.

Suffix:
<b> 1..4
<n> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:CMSB:RESult<n>:STOP?

Returns the stop time of the frame.

Suffix:
<b> 1..4
<n> *

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:CMSB:RESult<n>:TYPE?

Returns the name of the selected frame (n) from the user defined frame format description, labeled according to BUS<b>:CMSB:FRAMe<fr>:TYPE on page 2351.

Suffix:
<b> 1..4
<n> *

Return values:
<Type>

Usage: Query only

BUS<b>:CMSB:RESult<n>:CONE?

Returns the 1st cell content as specified in the "Result" column of the "Frame Format" specification table.

Suffix:
<b> 1..4
<n> *

Return values:
<Custom1>

Usage: Query only

BUS<b>:CMSB:RESult<n>:CTWO?

Returns the 2nd cell content as specified in the "Result" column of the "Frame Format" specification table.

Suffix:
<b> 1..4
<n> *

Return values:
<Custom2>

Usage: Query only

BUS<b>:CMSB:RESult<n>:CTHRee?

Returns the 3rd cell content as specified in the "Result" column of the "Frame Format" specification table.

Suffix:
<b> 1..4

<n> *

Return values:
<Custom3>

Usage: Query only

BUS<b>:CMSB:RESult<n>:CCOunt?

Returns the number of decoded cells in the specified result frame.

Suffix:
<b> 1..4

<n> *

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:CMSB:RESult<n>:CELL<ce>:NAME?

Returns the name of the specified cell. Cell names are not necessarily unique.

Suffix:
<b> 1..4

<n> *

<ce> *

Return values:
<Name>

Usage: Query only

BUS<b>:CMSB:RESult<n>:CELL<ce>:STARt?

Returns the start time of the selected cell.

Suffix:
<b> 1..4
Selects the serial bus.

<n> *

<ce> *
Selects the cell.

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:CMSB:RESult<n>:CELL<ce>:STOP?

Returns the end time of the selected cell.

Suffix:
<b> 1..4
Selects the serial bus.

<n> *

<ce> *
Selects the cell.

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:CMSB:RESult<n>:CELL<ce>:STATe?

Returns the state of the cell.

Suffix:
<b> 1..4

<n> *

<ce> *

Return values:
<State> OK | LENGth | UNKNown | INComplete | CRC | PARity
OK
No error detected

LENGth
The length error indicates that the cell ended prematurely. The amount of bits that the software expected (based upon the user's frame description) was not found before the cell was terminated. This might occur because a new frame synchronized, or a gap appeared between the bits.

UNKNown
Unknown error

INComplete
The cell ended prematurely because it extends past the end of the record.

CRC
Checksum error in cyclic redundancy check (error in data)

PARity
Parity bit error, indicating a transmission error (only available if a parity is configured)

Usage: Query only

BUS<b>:CMSB:RESult<n>:CELL<ce>:VALue?

Data content of the specified cell.

Suffix:
<b> 1..4
<n> *
<ce> *

Return values:
<Value>

Usage: Query only

26.18.19.5 Search settings

SEARch:TRIGger:CMSB:ERENable ... 2374
SEARch:TRIGger:CMSB:ERRor<m>:ENABle ... 2374
SEARch:TRIGger:CMSB:FRENable ... 2374
SEARch:TRIGger:CMSB:FRAMe<fr>:ENABle ... 2374
SEARch:TRIGger:CMSB:FIENable ... 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:ENABle ... 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:ENABle ... 2375
SEARch:TRIGger:CMSB:BIT ... 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:BIT ... 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:BIT ... 2375
SEARch:TRIGger:CMSB:DMAX ... 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMAX ... 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMAX ... 2376
SEARch:TRIGger:CMSB:DMIN ... 2376

SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMIN ... 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMIN ... 2376
SEARch:TRIGger:CMSB:DOPerator ... 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DOPerator ... 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DOPerator ... 2377
SEARch:TRIGger:CMSB:IMAX ... 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMAX ... 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMAX ... 2377
SEARch:TRIGger:CMSB:IMIN ... 2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMIN ... 2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMIN ... 2378
SEARch:TRIGger:CMSB:IOPerator ... 2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IOPerator ... 2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IOPerator ... 2378

SEARch:TRIGger:CMSB:ERENable <SearchName>,<ErrorName>,<Enabler>
SEARch:TRIGger:CMSB:ERRor<m>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:CMSB:ERRor<m>:ENABle? <SearchName>

Defines the error type to be searched for. You can search for all error types in parallel.

Suffix:
<m> *

Parameters:
<Enable> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

SEARch:TRIGger:CMSB:FRENable <SearchName>,<Frame>,<Enabler>
SEARch:TRIGger:CMSB:FRAMe<fr>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:CMSB:FRAMe<fr>:ENABle? <SearchName>
Suffix:
<fr> *

Parameters:
<Enable> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

SEARch:TRIGger:CMSB:FIENable <SearchName>,<Frame>,<Field>,<Enabler>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:ENABle? <SearchName>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the checking condition for searching a specific data pattern in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<CondEnabler> OFF | ON

ON
Checking condition enabled

OFF
Checking condition disabled

*RST: OFF

Parameters for setting and query:
<SearchName>

SEARch:TRIGger:CMSB:BIT <SearchName>,<Frame>,<Field>,<Bit>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:BIT <SearchName>,<BitState>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:BIT? <SearchName>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:BIT <SearchName>,<BitState>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:BIT? <SearchName>

Sets the bit state of a field to be searched that only consists of one bit.

Suffix:
<fr> *

<fl> *

Parameters:
<BitState> ONE | ZERO | DC

ONE
1

ZERO
0

DC
"Do not care" (DC) = X

*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

SEARch:TRIGger:CMSB:DMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMAX <SearchName>,<DataMax>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMAX? <SearchName>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMAX? <SearchName>

Sets the end value of a data pattern range if `SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Max> Specifies the name of the generic trigger setting frame.

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

SEARch:TRIGger:CMSB:DMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMIN <SearchName>,<DataMin>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMIN? <SearchName>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMIN? <SearchName>

Specifies the data pattern to be searched, or sets the start value of a data pattern range to be searched.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Min> Specifies the name of the generic trigger setting frame.

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

SEARch:TRIGger:CMSB:DOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DOPerator
<SearchName>,<DataOperator>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DOPerator? <SearchName>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DOPerator
<SearchName>,<Data_Operator>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DOPerator? <SearchName>

Sets the operator to set a specific data pattern to be searched in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one endpoint value to be set using `SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMIN`.

INRange | OORange
In range, out of range. These conditions require a range of endpoint values to be set using `SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMIN` and `SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

SEARch:TRIGger:CMSB:IMAX <SearchName>,<Frame>,<Field>,<IndexMax>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMAX <SearchName>,<IndexMax>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMAX? <SearchName>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMAX <SearchName>,<Index_Max>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMAX? <SearchName>

Sets the end value of an index range if `SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IOPerator` is set to `INRange` or `RANGe`.

Suffix:
<fr> *

<fl> *

Parameters:

<Index_Max> Specifies the end value for the index range within the field.
The index range, increment and *RST values depend on the field type.

Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

SEARch:TRIGger:CMSB:IMIN <SearchName>,<Frame>,<Field>,<IndexMin>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMIN <SearchName>,<IndexMin>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMIN? <SearchName>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMIN <SearchName>,<Index_Min>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMIN? <SearchName>

Specifies the index at which the data is to be searched, or sets the start value of an index range in which the data is to be searched.

Suffix:

<fr> *

<fl> *

Parameters:

<Index_Min> Specifies the index value or the start value of an index range within the field.
The index range, increment and *RST values depend on the field type.

Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

SEARch:TRIGger:CMSB:IOPerator
<SearchName>,<Frame>,<Field>,<IndexOperator>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IOPerator
<SearchName>,<IndexOperator>
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IOPerator? <SearchName>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IOPerator
<SearchName>,<Index_Operator>
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IOPerator? <SearchName>

Sets the operator for the index for searching in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe

EQUal
This condition requires one endpoint value to be set using `SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMIN` and `SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame" on page 862

26.18.19.6 Search results

SEARch:RESult:CMSB<m>:FCOunt? 2379
SEARch:RESult:CMSB<m>:FRAMe<fr>:CCOunt? 2380
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:NAME? 2380
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STARt? 2380
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STATe? 2381
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STOP? 2382
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:VALue? 2382
SEARch:RESult:CMSB<m>:FRAMe<fr>:CONE? 2382
SEARch:RESult:CMSB<m>:FRAMe<fr>:CTHRee? 2383
SEARch:RESult:CMSB<m>:FRAMe<fr>:CTWO? 2383
SEARch:RESult:CMSB<m>:FRAMe<fr>:STARt? 2383
SEARch:RESult:CMSB<m>:FRAMe<fr>:STATe? 2384
SEARch:RESult:CMSB<m>:FRAMe<fr>:STOP? 2384
SEARch:RESult:CMSB<m>:FRAMe<fr>:TYPE? 2385

SEARch:RESult:CMSB<m>:FCOunt? <SearchName>

Returns the count number of decoded result frames in a custom serial bus waveform. Basically, this is the maximum result index <n> when querying results by using `SEARch:RESult:CMSB<m>:FRAMe<n>:XXX`.

Suffix:
<m> *

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CCOunt? <SearchName>

Returns the count number of cell in the frames, within the search result, in a custom serial bus waveform.

Suffix:
<m> *

<fr> *

Query parameters:
<SearchName>

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:NAME? <SearchName>

Returns the name of the specified cell within the search result. Cell names are not necessarily unique.

Suffix:
<m> *

<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<Name>

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STARt? <SearchName>

Returns the start time of the cell within the search result.

Suffix:
<m> *

<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STATe? <SearchName>

Returns the state of the cell within the search result.

Suffix:
<m> *

<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<State> OK | LENGth | UNKNown | INComplete | CRC | PARity

OK
No error detected

LENGth
The length error indicates that the cell ended prematurely. The amount of bits that the software expected (based upon the user's frame description) was not found before the cell was terminated. This might occur because a new frame synchronized, or a gap appeared between the bits.

UNKNown
Unknown error

INComplete
The cell ended prematurely because it extends past the end of the record.

CRC
Checksum error in cyclic redundancy check (error in data)

PARity
Parity bit error, indicating a transmission error (only available if a parity is configured)

*RST: OK

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STOP? <SearchName>

Returns the stop time of the cell within the search result.

Suffix:
<m> *

<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:VALue? <SearchName>

Data content of the specified cell within the search result.

Suffix:
<m> *

<fr> *

<ce> *

Query parameters:
<SearchName>

Return values:
<Value>

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CONE? <SearchName>

Returns the 1st field content within the search result.

Suffix:
<m> *

<fr> *

Query parameters:
<SearchName>

Return values:
<Custom1>

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CTHRee? <SearchName>

Returns the 3rd field content.

Suffix:
<m> *

<fr> *

Query parameters:
<SearchName>

Return values:
<Custom3>

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:CTWO? <SearchName>

Returns the 2nd field content.

Suffix:
<m> *

<fr> *

Query parameters:
<SearchName>

Return values:
<Custom2>

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the frame within the search result.

Suffix:
<m> *

<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:STATe? <SearchName>

Returns the overall state of the frame within the search result: either OK or the relevant error condition. R&S RTP-K50 marks each frame with a status that indicates whether the decode succeeded or not.

Suffix:
<m> *

<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | LENGth | UNKNown | INComplete | CRC | PARity

OK
The frame was decoded normally and conforms to the frame description.

LENGth
The length error indicates that the frame ended prematurely, or an array in the frame had too few elements. The amount of bits that the software expected (based upon the user's frame description) was not found before the frame was terminated. This might occur because a new frame synchronized, or a gap appeared between the bits.

UNKNown
Unknown error

INComplete
The frame ended prematurely because it extends past the end of the record.

CRC
Checksum error in cyclic redundancy check (error in data)

*RST: OK

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:STOP? <SearchName>

Returns the stop time of the frame within the search result.

Suffix:
<m> *

<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:CMSB<m>:FRAMe<fr>:TYPE? <SearchName>

Returns the name of the selected frame (n) from the user defined frame format description, labeled according to `BUS<b>:CMSB:FRAMe<fr>:TYPE` on page 2351.

Suffix:
<m> *

<fr> *

Query parameters:
<SearchName>

Return values:
<Type>

Usage: Query only

26.18.20 8B/10B (option R&S RTP-K52)

26.18.20.1 Configuration

In all `BUS<b>:EBTB` commands, the suffix <b> selects the serial bus.

BUS<b>:EBTB:ACTestimate ... 2386
BUS<b>:EBTB:BITRate ... 2386
BUS<b>:EBTB:EBTRate? ... 2386
BUS<b>:EBTB:DIFFerential:SOURce ... 2386
BUS<b>:EBTB:DIFFerential:THRHigh ... 2387
BUS<b>:EBTB:DIFFerential:THRLow ... 2387
BUS<b>:EBTB:DISF ... 2387
BUS<b>:EBTB:DMINus:SOURce ... 2388
BUS<b>:EBTB:DMINus:THReshold ... 2388
BUS<b>:EBTB:DPLus:SOURce ... 2388
BUS<b>:EBTB:DPLus:THReshold ... 2389
BUS<b>:EBTB:FCSY ... 2389
BUS<b>:EBTB:SCOunt? ... 2389
BUS<b>:EBTB:SCSY ... 2389
BUS<b>:EBTB:SYNC ... 2390
BUS<b>:EBTB:TYPE ... 2390

BUS<b>:EBTB:USCS....2390
BUS<b>:EBTB:BITDetermi....2390
BUS<b>:EBTB:FAUToscale....2391

BUS<b>:EBTB:ACTestimate <Estimation>

Enables the automatic software bitrate determination.

Suffix:
<b> 1..4

Parameters:
<Estimation> OFF | ON
*RST: OFF

BUS<b>:EBTB:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:
<b> 1..4

Parameters:
<Bitrate> Range: 100 to 200E+9
Increment: 10
*RST: 1.25E+9
Default unit: bps

Manual operation: See "Bitrate" on page 866

BUS<b>:EBTB:EBTRate?

Queries the estimated bitrate value.

Suffix:
<b> 1..4

Return values:
<EstimatedBitrate> Range: 100 to 100E+9
Increment: 10
*RST: 1.25E+9
Default unit: bps

Usage: Query only

Manual operation: See "Estimate Bitrate" on page 866

BUS<b>:EBTB:DIFFerential:SOURce <SrcDiff>

Selects the source of the provided differential signal, if `BUS<b>:EBTB:TYPE DIFFerential` is set.

Suffix:
<b> 1..4

Parameters:
<SrcDiff> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Source" on page 865

BUS<b>:EBTB:DIFFerential:THRHigh <ThresholdHigh>

Sets the high threshold of the signal, if `BUS<b>:EBTB:TYPE DIFFerential`.

Suffix:
<b> 1..4

Parameters:
<ThresholdHigh> Range: -10 to 10
Increment: 1E-3
*RST: 0.15
Default unit: V

Manual operation: See "Threshold High" on page 866

BUS<b>:EBTB:DIFFerential:THRLow <ThresholdLow>

Sets the low threshold of the signal, if `BUS<b>:EBTB:TYPE DIFFerential`.

Suffix:
<b> 1..4

Parameters:
<ThresholdLow> Range: -10 to 10
Increment: 1E-3
*RST: -0.15
Default unit: V

Manual operation: See "Threshold Low" on page 866

BUS<b>:EBTB:DISF <DisplayFormat>

Selects the display format for the results in the decode table and for the results of `BUS<b>:EBTB:SYMBol<n>:DATA?`.

Suffix:
<b> 1..4

Parameters:
<DisplayFormat> KD | EB | TB
KD: K/D codes
EB: 8-bit pattern
TB: 10-bit pattern
*RST: KD

Manual operation: See "Display Format" on page 868

BUS<b>:EBTB:DMINus:SOURce <SourceDminus>

Selects the D- source of the provided single ended signal, if `BUS<b>:EBTB:TYPE SINGle` is set.

Suffix:
<b> 1..4

Parameters:
<SourceDminus> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "Source D-" on page 866

BUS<b>:EBTB:DMINus:THReshold <ThresDminus>

Sets the low threshold (D-) of the signal, if `BUS<b>:EBTB:TYPE SINGle`.

Suffix:
<b> 1..4

Parameters:
<ThresDminus> Range: -10 to 10
Increment: 1E-3
*RST: 0
Default unit: V

Manual operation: See "Threshold D-" on page 866

BUS<b>:EBTB:DPLus:SOURce <SourceDplus>

Selects the D+ source of the provided single-ended signal, if `BUS<b>:EBTB:TYPE SINGle` is set.

Suffix:
<b> 1..4

Parameters:
<SourceDplus> NONE | C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Source D+" on page 865

BUS<b>:EBTB:DPLus:THReshold <ThresholdDplus>

Sets the high threshold (D +) of the signal, if `BUS<b>:EBTB:TYPE SINGle`.

Suffix:
<b> 1..4

Parameters:
<ThresholdDplus>
Range: -10 to 10
Increment: 1E-3
*RST: 0
Default unit: V

Manual operation: See "Threshold D+" on page 866

BUS<b>:EBTB:FCSY <CustSync>

Sets a pattern value, if `BUS<b>:EBTB:SYNC CUS`.

Suffix:
<b> 1..4

Parameters:
<CustSync>

Manual operation: See "Pattern" on page 867

BUS<b>:EBTB:SCOunt?

Returns the symbol count for the selected serial bus, i.e. the number of symbols in the present acquisition.

Suffix:
<b> 1..4

Return values:
<Count>
Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:EBTB:SCSY <CustSync2>

Sets the value for the second pattern, if `BUS<b>:EBTB:SYNC CUS` and `BUS<b>:EBTB:USCS ON`.

Suffix:
<b> 1..4

Parameters:
<CustSync2>

Manual operation: See "Pattern 2" on page 867

BUS<b>:EBTB:SYNC <CommaSymbol>

Sets the sync symbol, a control symbol used for low level control functions.

Suffix:
<b> 1..4

Parameters:
<CommaSymbol> K285 | K281 | K287 | CUS
*RST: K285

Manual operation: See "Sync symbol" on page 867

BUS<b>:EBTB:TYPE <SignalType>

Selects the signal type that is used for the decoding. You can choose between a differential and single-ended signal.

Suffix:
<b> 1..4

Parameters:
<SignalType> DIFFerential | SINGle
*RST: DIFFerential

Manual operation: See "Signal type" on page 865

BUS<b>:EBTB:USCS <IsSecondSync>

Selects whether the second pattern is enabled, if `BUS<b>:EBTB:SYNC CUS`.

Suffix:
<b> 1..4

Parameters:
<IsSecondSync> OFF | ON
*RST: OFF

Manual operation: See "Pattern 2" on page 867

BUS<b>:EBTB:BITDetermi

Starts a software algorithm for the automatic determination of the bitrate.

Suffix:
<b> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Estimate Bitrate" on page 866

BUS<b>:EBTB:FAUToscale

Starts software algorithms for determining the signal threshold levels and bitrate.

Suffix:
<b> 1..4

Usage: Event
Asynchronous command

26.18.20.2 Trigger settings

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:EBTB:DISParityerr 2391
TRIGger<t>:EBTB:DX 2392
TRIGger<t>:EBTB:DY 2392
TRIGger<t>:EBTB:EBPA 2392
TRIGger<t>:EBTB:GLITcherror 2392
TRIGger<t>:EBTB:SYME 2393
TRIGger<t>:EBTB:SYMType 2393
TRIGger<t>:EBTB:TBPA 2393
TRIGger<t>:EBTB:STYPe 2393
TRIGger<t>:EBTB:UNK 2394

TRIGger<t>:EBTB:DISParityerr <DispError>

Defines, if a trigger on a disparity error is activated or not.

Suffix:
<t> 1..3

Parameters:
<DispError> OFF | ON
*RST: OFF

Manual operation: See "Disparity error" on page 871

TRIGger<t>:EBTB:DX <DXSymbol>

Sets thex value of the data character Dx.y to be triggered on, if `TRIGger<t>:EBTB:SYMType` is set to `Dxy`.

Suffix:
<t> 1..3

Parameters:
<DXSymbol> Range: 0 to 31
Increment: 1
*RST: 0

Manual operation: See "x value" on page 870

TRIGger<t>:EBTB:DY <DYSymbol>

Sets the y value of the data character Dx.y to be triggered on, if `TRIGger<t>:EBTB:SYMType` is set to `Dxy`.

Suffix:
<t> 1..3

Parameters:
<DYSymbol> Range: 0 to 7
Increment: 1
*RST: 0

Manual operation: See "y value" on page 870

TRIGger<t>:EBTB:EBPA <Pattern>

Sets the 8-bit pattern to be triggered on, if `TRIGger<t>:EBTB:STYPe` is set to `EB`.

Suffix:
<t> 1..3

Parameters:
<Pattern>

Manual operation: See "8 bit pattern" on page 870

TRIGger<t>:EBTB:GLITcherror <GlitchError>

Defines, if a trigger on a glitch error is activated or not.

Suffix:
<t> 1..3

Parameters:
<GlitchError> OFF | ON
*RST: OFF

Manual operation: See "Glitching error" on page 871

TRIGger<t>:EBTB:SYME <Expression>

Selects the format of the symbol to be triggered on.

Suffix:
<t> 1..3

Parameters:
<Expression>

Manual operation: See "Expression" on page 870

TRIGger<t>:EBTB:SYMType <SymbolType>

Selects the data character (Dx.y) or control character to bea triggered on. You can specify he value of the data character to be triggered on with `TRIGger<t>:EBTB:DX` and `TRIGger<t>:EBTB:DY`.

Suffix:
<t> 1..3

Parameters:
<SymbolType> DXY | K280 | K281 | K282 | K283 | K284 | K285 | K286 | K287 | K237 | K277 | K297 | K307

*RST: K285

Manual operation: See "K/D Codes Symbol" on page 870

TRIGger<t>:EBTB:TBPA <Pattern>

Sets the 10-bit pattern to be triggered on, if `TRIGger<t>:EBTB:STYPe` is set to `TB`.

Suffix:
<t> 1..3

Parameters:
<Pattern>

Manual operation: See "10 bit pattern" on page 870

TRIGger<t>:EBTB:STYPe <Type>

Selects the type of condition to be triggered on for 8b10b.

Suffix:
<t> 1..3

Parameters:
<Type> KD | EB | TB | EXPRession | ERRor

`KD`: K/D symbol
`EB`: 8-bit pattern
`TB`: 10-bit pattern

*RST: KD

Manual operation: See "Type 8b/10b" on page 869

TRIGger<t>:EBTB:UNK <UnkError>

Defines, if a trigger on a unknown symbol error is activated or not.

Suffix:
<t> 1..3

Parameters:
<UnkError> OFF | ON
*RST: OFF

Manual operation: See "Unknown symbol error" on page 871

26.18.20.3 Decode results

In all `BUS<b>:EBTB:SYMBol<n>` commands, the suffix <b> selects the serial bus and the suffix <n> selects the symbol in the decode table.

BUS<b>:EBTB:SYMBol<n>:DATA? 2394
BUS<b>:EBTB:SYMBol<n>:STARt? 2395
BUS<b>:EBTB:SYMBol<n>:STATus? 2395
BUS<b>:EBTB:SYMBol<n>:STOP? 2395
BUS<b>:EBTB:SYMBol<n>:BYTE? 2396
BUS<b>:EBTB:SYMBol<n>:KDCode? 2396
BUS<b>:EBTB:SYMBol<n>:TENBit? 2396

BUS<b>:EBTB:SYMBol<n>:DATA?

Returns the data of the specified symbol.

The format is determined by the remote command `BUS<b>:EBTB:DISF`.

Suffix:
<b> 1..4

<n> *

Return values:
<Data>

Example:
```
BUS<b>:EBTB:DISF EB
BUS:EBTB:SYMBol5:DATA?
<-- BC+
```

Example:
```
BUS<b>:EBTB:DISF KD
BUS:EBTB:SYMBol5:DATA?
<-- K28.5+
```

Example:
```
BUS<b>:EBTB:DISF TB
BUS:EBTB:SYMBol5:DATA?
<-- 305
```

Usage: Query only

BUS<b>:EBTB:SYMBol<n>:STARt?

Returns the start time of the specified symbol.

Suffix:
<b> 1..4

<n> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:EBTB:SYMBol<n>:STATus?

Returns the status of the specified symbol. It can show what kind of error was detected or no error.

Suffix:
<b> 1..4

<n> *

Return values:
<State> OK | UNK | DISPARITY | DISParity | GLITCH | GLITch

OK
There are no errors in the state of the specified symbol.

UNK
An unknown error was detected for the specified symbol.

DISPARITY = DISParity
A disparity error was detected for the specified symbol.

GLITCH = GLITch
A glitch error was detected for the specified symbol.

*RST: OK

Usage: Query only

BUS<b>:EBTB:SYMBol<n>:STOP?

Returns the stop time of the specified symbol.

Suffix:
<b> 1..4

<n> *

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:EBTB:SYMBol<n>:BYTE?

Returns the symbol byte value.

Suffix:

<b> 1..4

<n> *

Return values:

<Byte> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:EBTB:SYMBol<n>:KDCode?

Returns the K/D code.

Suffix:

<b> 1..4

<n> *

Return values:

<KDCode>

Usage: Query only

BUS<b>:EBTB:SYMBol<n>:TENBit?

Returns the 10-bit symbol.

Suffix:

<b> 1..4

<n> *

Return values:

<TenBit>

Usage: Query only

26.18.20.4 Search settings

SEARch:TRIGger:EBTB:DISParityerr....2397
SEARch:TRIGger:EBTB:DX....2397
SEARch:TRIGger:EBTB:DY....2397
SEARch:TRIGger:EBTB:EBPA....2398
SEARch:TRIGger:EBTB:GLITcherror....2398
SEARch:TRIGger:EBTB:STYPe....2398
SEARch:TRIGger:EBTB:SYME....2399
SEARch:TRIGger:EBTB:SYMType....2399
SEARch:TRIGger:EBTB:TBPA....2399
SEARch:TRIGger:EBTB:UNK....2399

SEARch:TRIGger:EBTB:DISParityerr <SearchName>,<DispError>
SEARch:TRIGger:EBTB:DISParityerr? <SearchName>

Defines, if a search for any disparity error is activated or not.

Parameters:
<DispError> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Disparity error" on page 875

SEARch:TRIGger:EBTB:DX <SearchName>,<DXSymbol>
SEARch:TRIGger:EBTB:DX? <SearchName>

Sets the x value of the data character Dx.y to be searched for, if `SEARch:TRIGger:EBTB:SYMType` is set to `Dxy`.

Parameters:
<DXSymbol> Range: 0 to 31
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Manual operation: See "x value" on page 874

SEARch:TRIGger:EBTB:DY <SearchName>,<DYSymbol>
SEARch:TRIGger:EBTB:DY? <SearchName>

Sets the y value of the data character Dx.y to be searched for, if `SEARch:TRIGger:EBTB:SYMType` is set to `Dxy`.

Parameters:
<DYSymbol> Range: 0 to 7
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Manual operation: See "y value" on page 874

SEARch:TRIGger:EBTB:EBPA <SearchName>,<Pattern>
SEARch:TRIGger:EBTB:EBPA? <SearchName>

Sets the 8-bit pattern to be searched for.

Parameters:
<Pattern>

Parameters for setting and query:
<SearchName>

Manual operation: See "8b Pattern" on page 875

SEARch:TRIGger:EBTB:GLITcherror <SearchName>,<GlitchError>
SEARch:TRIGger:EBTB:GLITcherror? <SearchName>

Defines, if a search for any glitch error is activated or not.

Parameters:
<GlitchError> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Glitching error" on page 875

SEARch:TRIGger:EBTB:STYPe <SearchName>,<Type>
SEARch:TRIGger:EBTB:STYPe? <SearchName>

Selects the search type.

Parameters:
<Type> KD | EB | TB | EXPRession | ERRor
`KD`: K/D symbol
`EB`: 8-bit pattern
`TB`: 10-bit pattern
*RST: KD

Parameters for setting and query:
<SearchName>

SEARch:TRIGger:EBTB:SYME <SearchName>,<Expression>
SEARch:TRIGger:EBTB:SYME? <SearchName>

Selects the format of the symbol to be searched for, if `SEARch:TRIGger:EBTB:STYPe` is set to `EXPRession`.

Parameters:
<Expression>

Parameters for setting and query:
<SearchName>

Manual operation: See "Expression" on page 875

SEARch:TRIGger:EBTB:SYMType <SearchName>,<SymbolType>
SEARch:TRIGger:EBTB:SYMType? <SearchName>

Selects the data character (Dx.y) or control character to bea searched for. You can specify he value of the data character to be searched for with `SEARch:TRIGger:EBTB:DX` and `SEARch:TRIGger:EBTB:DY`.

Parameters:
<SymbolType> DXY | K280 | K281 | K282 | K283 | K284 | K285 | K286 | K287 | K237 | K277 | K297 | K307
*RST: K285

Parameters for setting and query:
<SearchName>

Manual operation: See "K/D Codes Symbol" on page 874

SEARch:TRIGger:EBTB:TBPA <SearchName>,<Pattern>
SEARch:TRIGger:EBTB:TBPA? <SearchName>

Sets the 10-bit pattern to be searched for, if `SEARch:TRIGger:EBTB:STYPe` is set to `TB`.

Parameters:
<Pattern>

Parameters for setting and query:
<SearchName>

Manual operation: See "10b Pattern" on page 875

SEARch:TRIGger:EBTB:UNK <SearchName>,<UnkError>
SEARch:TRIGger:EBTB:UNK? <SearchName>

Defines, if a search for any unknown symbol error is activated or not.

Parameters:
<UnkError> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Unknown symbol error" on page 875

26.18.20.5 Search results

In all `SEARch:RESult:EBTB:SYMBol<m>` commands, the suffix <m> selects the frame number in the list of search results.

SEARch:RESult:EBTB:SCOunt? 2400
SEARch:RESult:EBTB:SYMBol<m>:DATA? 2400
SEARch:RESult:EBTB:SYMBol<m>:STARt? 2400
SEARch:RESult:EBTB:SYMBol<m>:STATus? 2401
SEARch:RESult:EBTB:SYMBol<m>:STOP? 2401

SEARch:RESult:EBTB:SCOunt? <SearchName>

Returns the symbol count, i.e. the number of symbols found in the specified search result.

Query parameters:
<SearchName>

Return values:

<Count>	Range:	0 to 100E+3
	Increment:	1
	*RST:	0

Usage: Query only

SEARch:RESult:EBTB:SYMBol<m>:DATA? <SearchName>

Returns the data of the specified symbol.

Suffix:
<m> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:EBTB:SYMBol<m>:STARt? <SearchName>

Returns the start time of the specified symbolwithin the search result.

Suffix:
<m> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:EBTB:SYMBol<m>:STATus? <SearchName>

Returns the status of the specified symbol within the search result. It can show what kind of error was detected or no error.

Suffix:
<m> *

Query parameters:
<SearchName>

Return values:
<State> OK | UNK | DISPARITY | DISParity | GLITCH | GLITch

OK
There are no errors in the state of the specified symbol.

UNK
An unknown error was detected for the specified symbol.

DISPARITY = DISParity
A disparity error was detected for the specified symbol.

GLITCH = GLITch
A glitch error was detected for the specified symbol.

*RST: OK

Usage: Query only

SEARch:RESult:EBTB:SYMBol<m>:STOP? <SearchName>

Returns the stop time of the specified symbol within the search result.

Suffix:
<m> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

26.18.21 MDIO (option R&S RTP-K55)

- Configuration....2402
- Trigger....2405
- Decode results....2407
- Search settings....2411
- Search results....2414

26.18.21.1 Configuration

In all `BUS<b>:MDIO` commands, the suffix <b> selects the serial bus.

BUS<b>:MDIO:CLOCk:SOURce....2402
BUS<b>:MDIO:DATA:SOURce....2402
BUS<b>:MDIO:CLOCk:THReshold:HIGH....2403
BUS<b>:MDIO:CLOCk:THReshold:LOW....2403
BUS<b>:MDIO:DATA:THReshold:HIGH....2403
BUS<b>:MDIO:DATA:THReshold:LOW....2404
BUS<b>:MDIO:PRESet....2404
BUS<b>:MDIO:COUPling....2404

BUS<b>:MDIO:CLOCk:SOURce <SourceClock>

Selects the source for the clock line (management data clock, MDC). Permitted selections are the analog channels "C1"–"C4" and the digital channels "D0"–"D15".

Suffix:
<b> 1..4

Parameters:
<SourceClock> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for data and clock lines. For triggering on a serial bus, analog or digital input channels are required.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: C2W1

Manual operation: See "Source" on page 879

BUS<b>:MDIO:DATA:SOURce <SourceData>

Selects the source for the data signal. Permitted selections are the analog channels "C1"–"C4" and the digital channels "D0"–"D15", but not the same as for "Clock".

Suffix:
<b> 1..4

Parameters:

<SourceData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Digital and analog channels cannot be used at the same time for data and clock lines. For triggering on a serial bus, analog or digital input channels are required.
See Section 26.4.2, "Waveform parameter", on page 1348

*RST: C1W1

Manual operation: See "Source" on page 879

BUS<b>:MDIO:CLOCk:THReshold:HIGH <ThresClkHigh>

Defines the upper threshold level for the clock signal.

Suffix:

<b> 1..4

Parameters:

<ThresClkHigh>
Range: -5 to 5
Increment: 0.1
*RST: 2
Default unit: V

Manual operation: See "Thresholds" on page 879

BUS<b>:MDIO:CLOCk:THReshold:LOW <ThresClkLow>

Defines the lower threshold level for the clock signal.

Suffix:

<b> 1..4

Parameters:

<ThresClkLow>
Range: -5 to 5
Increment: 0.1
*RST: 0.8
Default unit: V

Manual operation: See "Thresholds" on page 879

BUS<b>:MDIO:DATA:THReshold:HIGH <ThresDatHigh>

Defines the upper threshold level for the data signal.

Suffix:

<b> 1..4

Parameters:

<ThresDatHigh>
Range: -5 to 5
Increment: 0.1
*RST: 2
Default unit: V

Manual operation: See "Thresholds" on page 879

BUS<b>:MDIO:DATA:THReshold:LOW <ThresDatLow>

Defines the lower threshold level for the data signal.

Suffix:

<b> 1..4

Parameters:

<ThresDatLow>
Range: -5 to 5
Increment: 0.1
*RST: 0.8
Default unit: V

Manual operation: See "Thresholds" on page 879

BUS<b>:MDIO:PRESet <Preset>

Selects the default threshold settings according to the Ethernet standard: 2.0 V and 0.8 V.

Suffix:

<b> 1..4

Parameters:

<Preset>
DEFault | MANual
*RST: DEFault

Manual operation: See "Thresholds" on page 879

BUS<b>:MDIO:COUPling <ThresCpl>

Overwrites the data thresholds with the clock thresholds.

Suffix:

<b> 1..4

Parameters:

<ThresCpl>
OFF | ON
*RST: ON

Manual operation: See "Thresholds" on page 879

26.18.21.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:MDIO:TYPE 2405
TRIGger<t>:MDIO:ST 2406
TRIGger<t>:MDIO:FRAMetype 2406
TRIGger<t>:MDIO:PHYS 2407
TRIGger<t>:MDIO:REGI 2407
TRIGger<t>:MDIO:DATA 2407

TRIGger<t>:MDIO:TYPE <Type>

Selects the trigger type for MDIO analysis.

Suffix:
<t> 1..3

Parameters:
<Type> STARt | STOP | DATA

STARt
Sets the trigger to the start of frame (SOF) field. The start of frame condition and the trigger instant is the end of the preamble. Trigger pattern: preamble (32 bits "1")

STOP
Sets the trigger to the end of frame (EOF) field. The trigger instant is after the last data bit. Trigger pattern: preamble (32 bits "1") + 32 bits "X"

DATA
Sets the trigger to the data field. For more information on the data condition, see MDIO in the Ethernet standard. The trigger instant is at the end of the frame after the last data bit, as indicated in the GUI. Trigger pattern: preamble (32 bits "1") + 2 bits "ST" (Start of Frame Code) + 2 bits "OP" (Frame Type Code, or "OpCode") + 5 bits "PHYAD/PRTAD" (Physical Layer Entity Address / Port Address) + 5 bits "REGAD/DEVAD" (Register Address / Device Address) + 2 bits "TA" (turnaround time, X bits) + 16 bits "DATA/ADDRESS"

*RST: STARt

Manual operation: See "MDIO Trigger Type" on page 883

TRIGger<t>:MDIO:ST <StartCode>

Selects the start of frame code of the frame pattern; available only in trigger type "Data".

Note that Clause 22 is coded by "01", while Clause 45 is coded by "00", thus the lower Clause number is represented by the higher parameter value.

Suffix:
<t> 1..3

Parameters:
<StartCode> ST00 | ST01 | ST0X

ST00
Clause 45

ST01
Clause 22

ST0X
Any permissible start pattern

*RST: ST0X

Manual operation: See "ST" on page 884

TRIGger<t>:MDIO:FRAMetype <FrameType>

Selects the Type of Frame code (or OP code, OpCode, operation code); available only in trigger type "Data".

Note that the same OpCode may have different meanings in Clause 22 and Clause 45.

Suffix:
<t> 1..3

Parameters:
<FrameType> OP00 | OP01 | OP10 | OP11 | OPXX

OP00
Address frame (in Clause 45, only)

OP01
Write frame (in Clause 22 or Clause 45)

OP10
Read frame (in Clause 22) or Post-Read increment address frame (in Clause 45)

OP11
Read frame (in Clause 45)

OPXX
Any frame type

*RST: OPXX
Note that the user interface shows interpretations of the numerical OpCode values corresponding to Clause 45. Clause 22 is not represented by this interpretation.

Manual operation: See "OP" on page 884

TRIGger<t>:MDIO:PHYS <PhyAddr>

Sets the physical address (in Clause 22) or port address (in Clause 45) of the frame pattern (5 bits); available only in trigger type "Data".

Suffix:
<t> 1..3

Parameters:
<PhyAddr>

Manual operation: See "PHYAD/PRTAD" on page 884

TRIGger<t>:MDIO:REGI <RegAddr>

Sets the register address (in Clause 22) or device address (in Clause 45) of the frame pattern (5 bits); available only in trigger type "Data".

Suffix:
<t> 1..3

Parameters:
<RegAddr>

Manual operation: See "REGAD/DEVAD" on page 885

TRIGger<t>:MDIO:DATA <Data>

Defines the 16-bit payload data pattern (both in Clause 22 or Clause 45) or the address pattern (in Clause 45, only) to trigger for; available only in trigger type "Data".

Suffix:
<t> 1..3

Parameters:
<Data>

Manual operation: See "DATA/ADDRESS" on page 885

26.18.21.3 Decode results

In all `BUS<b>:MDIO:WORD<w>` commands, the suffix <b> selects the serial bus and the suffix <w> selects the word number in the decode table.

BUS<b>:MDIO:WCOunt? 2408
BUS<b>:MDIO:WORD<w>:DATA? 2408
BUS<b>:MDIO:WORD<w>:PHYS? 2408
BUS<b>:MDIO:WORD<w>:REGI? 2409
BUS<b>:MDIO:WORD<w>:ST? 2409
BUS<b>:MDIO:WORD<w>:STARt? 2409
BUS<b>:MDIO:WORD<w>:STATe? 2410

BUS<b>:MDIO:WORD<w>:STOP? 2410
BUS<b>:MDIO:WORD<w>:SYMBol? 2411
BUS<b>:MDIO:WORD<w>:TYPE? 2411

BUS<b>:MDIO:WCOunt?

Returns the word count for the selected serial bus, i.e. the number of words in the present acquisition.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MDIO:WORD<w>:DATA?

Returns the 16-bit payload data field content (in Clause 22 or Clause 45), or the 16-bit address field content (in Clause 45, only) in the present acquisition of the selected word and the selected serial bus. The most significant bit (MSB) is transmitted first.

Suffix:
<b> 1..4

<w> *

Return values:
<Data> List of comma-separated values

Usage: Query only

BUS<b>:MDIO:WORD<w>:PHYS?

Returns the 5-bit address field content (PHYAD/PRTAD) in the present acquisition of the selected word and the selected serial bus.

Suffix:
<b> 1..4

<w> *

Return values:
<PhyAd> Range: 0 to 32
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MDIO:WORD<w>:REGI?

Returns the 5-bit register or device address field content (REGAD/DEVAD) in the present acquisition of the selected word and the selected serial bus.

Suffix:
<b> 1..4

<w> *

Return values:
<RegAd> Range: 0 to 32
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:MDIO:WORD<w>:ST?

Returns the Start Code (= start of frame code) in the present acquisition of the selected word and the selected serial bus.

Suffix:
<b> 1..4

<w> *

Return values:
<StartCode> Range: 0 to 3
Increment: 1
*RST: 0
The parameter value "0" represents Clause 45, and "1" stands for Clause 22.
The values "2" and "3" do not correspond with any legal parameters according to the standard, but they can be searched for.

Usage: Query only

BUS<b>:MDIO:WORD<w>:STARt?

Returns the start time of the frame in the selected word of the selected serial bus.

Suffix:
<b> 1..4

<w> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:MDIO:WORD<w>:STATe?

Returns the state of the frame in the present acquisition of the selected serial bus.

Suffix:

<b> 1..4

<w> *

Return values:

<State> OK | UNSYN | UNSYncronized | OPCO | TA_ERROR | INComplete | SHORT | SHORt

OK
No error detected

UNSYN = UNSYncronized
UNSYncronized happens when bits are found, but they are not correlated with any synchronization sequence. We don't know what these bits are, but they are there. These bits receive a flag, but they are not decoded.

OPCO
OPcode Error

TA_ERROR
Tirnaround time error

INComplete
Incomplete Frame

SHORT = SHORt
Length Error

*RST: OK

Usage: Query only

BUS<b>:MDIO:WORD<w>:STOP?

Returns the stop time of the frame from the selected word within the search result.

Suffix:

<b> 1..4

<w> *

Return values:

<Stop>
Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:MDIO:WORD<w>:SYMBol?

Returns a textual translation (called Register Name) of the PHY or port address label in the present acquisition of the selected word and the selected serial bus.

The translation is defined in the label list.

Suffix:
<b> 1..4

<w> *

Return values:
<Translation>

Usage: Query only

BUS<b>:MDIO:WORD<w>:TYPE?

Returns the OpCode (= operation code or frame type) in the present acquisition of the selected word and the selected serial bus.

Suffix:
<b> 1..4

<w> *

Return values:
<FrameType> Range: 0 to 3
Increment: 1
*RST: 0
The parameter value "0" represents Clause 45, and "1" stands for Clause 22.
The values "2" and "3" do not correspond with any legal parameters according to the standard, but they can be searched for.

Usage: Query only

26.18.21.4 Search settings

SEARch:TRIGger:MDIO:DATA....2411
SEARch:TRIGger:MDIO:FRAMetype....2412
SEARch:TRIGger:MDIO:PHYS....2412
SEARch:TRIGger:MDIO:REGI....2413
SEARch:TRIGger:MDIO:ST....2413
SEARch:TRIGger:MDIO:TYPE....2413

SEARch:TRIGger:MDIO:DATA <SearchName>,<Data>
SEARch:TRIGger:MDIO:DATA? <SearchName>

Allows to define the 16-bit payload data pattern (both in Clause 22 or Clause 45) or the address pattern (in Clause 45, only) to search for; available only in search criteria type "Data".

Parameters:
<Data>

Parameters for setting and query:
<SearchName>

Manual operation: See "DATA/ADDRESS" on page 888

SEARch:TRIGger:MDIO:FRAMetype <SearchName>,<FrameType>
SEARch:TRIGger:MDIO:FRAMetype? <SearchName>

Allows to select the Type of Frame code (or OP code, OpCode, operation code); available only in search criteria type "Data".

Note that the same OpCode may have different meanings in Clause 22 and Clause 45.

Parameters:
<FrameType> OP00 | OP01 | OP10 | OP11 | OPXX

OP00
Address frame (in Clause 45, only)

OP01
Write frame (in Clause 22 or Clause 45)

OP10
Read frame (in Clause 22) or Post-Read increment address frame (in Clause 45)

OP11
Read frame (in Clause 45)

OPXX
Any frame type

*RST: OPXX
Note that the user interface shows interpretations of the numerical OpCode values corresponding to Clause 45. Clause 22 is not represented by this interpretation.
Also, note that OPXX will never be a result of decoding, but it is still an option for triggering.

Parameters for setting and query:
<SearchName>

Manual operation: See "OP" on page 888

SEARch:TRIGger:MDIO:PHYS <SearchName>,<PhyAddr>
SEARch:TRIGger:MDIO:PHYS? <SearchName>

Allows to set the physical address (in Clause 22) or port address (in Clause 45) of the frame pattern (5 bits); available only in search criteria type "Data".

Parameters:
<PhyAddr>

Parameters for setting and query:
<SearchName>

Manual operation: See "PHYAD/PRTAD" on page 888

SEARch:TRIGger:MDIO:REGI <SearchName>,<RegAddr>
SEARch:TRIGger:MDIO:REGI? <SearchName>

Allows to set the register address (in Clause 22) or device address (in Clause 45) of the frame pattern (5 bits); available only in search criteria type "Data".

Parameters:
<RegAddr>

Parameters for setting and query:
<SearchName>

Manual operation: See "REGAD/DEVAD" on page 888

SEARch:TRIGger:MDIO:ST <SearchName>,<StartCode>
SEARch:TRIGger:MDIO:ST? <SearchName>

Allows to select the start of frame code of the frame pattern; available only in search criteria type "Data".

Parameters:
<StartCode> ST00 | ST01 | ST0X

ST00
Clause 45

ST01
Clause 22

ST0X
Any permissible start pattern

*RST: ST0X

Parameters for setting and query:
<SearchName>

Manual operation: See "ST" on page 888

SEARch:TRIGger:MDIO:TYPE <SearchName>,<Type>
SEARch:TRIGger:MDIO:TYPE? <SearchName>

Selects the event type to search for.

Parameters:
<Type> STARt | STOP | DATA

STARt
Searches for the start of frame (SOF).

STARt
Searches for the end of frame (EOF).

DATA
Allows to specify a payload data pattern (both in Clause 22 or Clause 45) or an address pattern (in Clause 45, only) to search for.

*RST: STARt

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 887

26.18.21.5 Search results

In all `SEARch:RESult:MDIO:WORD<m>` commands, the suffix <m> selects the packet number in the list of search results.

SEARch:RESult:MDIO:WORD<w>:DATA?....2414
SEARch:RESult:MDIO:WORD<w>:PHYS?....2414
SEARch:RESult:MDIO:WORD<w>:REGI?....2415
SEARch:RESult:MDIO:WORD<w>:ST?....2415
SEARch:RESult:MDIO:WORD<w>:STARt?....2415
SEARch:RESult:MDIO:WORD<w>:STATe?....2416
SEARch:RESult:MDIO:WORD<w>:STOP?....2416
SEARch:RESult:MDIO:WORD<w>:SYMBol?....2417
SEARch:RESult:MDIO:WORD<w>:TYPE?....2417
SEARch:RESult:MDIO:WCOunt?....2417

SEARch:RESult:MDIO:WORD<w>:DATA? <SearchName>

Returns the 16-bit payload data field content (in Clause 22 or Clause 45), or the 16-bit address field content (in Clause 45, only) from the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:MDIO:WORD<w>:PHYS? <SearchName>

Returns the 5-bit address field content (PHYAD/PRTAD) from the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<PhyAd> Range: 0 to 32
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:MDIO:WORD<w>:REGI? <SearchName>

Returns the 5-bit register or device address field content (REGAD/DEVAD) from the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<RegAd> Range: 0 to 32
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:MDIO:WORD<w>:ST? <SearchName>

Returns the start of frame code from the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<StartCode> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:MDIO:WORD<w>:STARt? <SearchName>

Returns the start time of the frame from the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:MDIO:WORD<w>:STATe? <SearchName>

Returns the state of the frame from the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:
<State> OK | UNSYN | UNSYncronized | OPCO | TA_ERROR | INComplete | SHORT | SHORt

OK
No error detected

UNSYN = UNSYncronized
UNSYncronized happens when bits are found, but they are not correlated with any synchronization sequence. We don't know what these bits are, but they are there. These bits receive a flag, but they are not decoded.

OPCO
OPcode error

TA_ERROR
turnaround time error

INComplete
Incomplete Frame

SHORT = SHORt
Length Error

*RST: OK

Usage: Query only

SEARch:RESult:MDIO:WORD<w>:STOP? <SearchName>

Returns the stop time of the frame from the selected word within the search result.

Suffix:
<w> *

Query parameters:
<SearchName>

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:MDIO:WORD<w>:SYMBol? <SearchName>

Returns a textual translation (called Register Name) of the PHY or port address label from the selected word within the search result.

Suffix:

<w> *

Query parameters:

<SearchName>

Return values:

<Translation>

Usage: Query only

SEARch:RESult:MDIO:WORD<w>:TYPE? <SearchName>

Returns the frame type (= operation code or OpCode) for the selected word within the search result.

Suffix:

<w> *

Query parameters:

<SearchName>

Return values:

<FrameType> Range: 0 to 3
Increment: 1
*RST: 0
Note that the user interface shows interpretations of the numerical OpCode values corresponding to Clause 45: "0" (= [bin]00) represents Address, "1" (= [bin]01" represents Write, "2" (= [bin]10) represents Post Read, "3" (= [bin]11) represents Read. Clause 22 is not represented by this interpretation.

Usage: Query only

SEARch:RESult:MDIO:WCOunt? <SearchName>

Returns the word count within the search result.

Query parameters:

<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

26.18.22 USB (option R&S RTP-K60)

- Configuration....2418
- Trigger....2420
- Decode results....2435
- Search settings....2441
- Search results....2457

26.18.22.1 Configuration

In all `BUS<b>:USB` commands, the suffix <b> selects the serial bus.

BUS<b>:USB:TECHnology....2418
BUS<b>:USB:DPLus:SOURce....2419
BUS<b>:USB:DMINus:SOURce....2419
BUS<b>:USB:DIFFerential:SOURce....2419
BUS<b>:USB:DPLus:THReshold....2419
BUS<b>:USB:DMINus:THReshold....2420
BUS<b>:USB:DIFFerential:THReshold....2420

BUS<b>:USB:TECHnology <ProtocolType>

Defines the USB protocol technology and transmission speed.

Suffix:
<b> 1..4

Parameters:
<ProtocolType> LOW | FULL | HIGH

LOW
USB low speed protocol (1.5 Mbit/s)

FULL
USB full speed protocol (12 Mbit/s)

HIGH
USB high speed protocol (480 Mbit/s)

*RST: LOW

Manual operation: See "Protocol type" on page 896

BUS<b>:USB:DPLus:SOURce <SourceDplus>

Selects the source for the D+ data signal (in USB low speed and USB full speed protocol, only).

Suffix:
<b> 1..4

Parameters:
<SourceDplus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Usage: Asynchronous command

Manual operation: See "D+, D-" on page 898

BUS<b>:USB:DMINus:SOURce <SourceDminus>

Selects the source for the D- data signal (in USB low speed and USB full speed protocol, only).

Suffix:
<b> 1..4

Parameters:
<SourceDminus> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C2W1

Usage: Asynchronous command

Manual operation: See "D+, D-" on page 898

BUS<b>:USB:DIFFerential:SOURce <SrcDiff>

Selects the source for the differential signal in the USB high speed protocol.

Suffix:
<b> 1..4

Parameters:
<SrcDiff> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Differential" on page 898

BUS<b>:USB:DPLus:THReshold <ThresholdDplus>

Defines the threshold level for the D+ data signal (in USB low speed and USB full speed protocol, only).

Suffix:
<b> 1..4

Parameters:
<ThresholdDplus> Range: -5 to 5
Increment: 0.01
*RST: 1.55
Default unit: V

Manual operation: See "Thresholds" on page 899

BUS<b>:USB:DMINus:THReshold <ThresDminus>

Defines the threshold level for the D- data signal (in USB low speed and USB full speed protocol, only).

Suffix:
<b> 1..4

Parameters:
<ThresDminus> Range: -5 to 5
Increment: 0.01
*RST: 1.55
Default unit: V

Manual operation: See "Thresholds" on page 899

BUS<b>:USB:DIFFerential:THReshold <ThresDiff>

Defines the threshold level for the differential signal in the USB high speed protocol.

Suffix:
<b> 1..4

Parameters:
<ThresDiff> Range: -2 to 2
Increment: 0.01
*RST: 0
Default unit: V

Manual operation: See "Thresholds" on page 899

26.18.22.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:USB:TYPE 2421
TRIGger<t>:USB:ACONdition 2422
TRIGger<t>:USB:AMIN 2423
TRIGger<t>:USB:AMAX 2423
TRIGger<t>:USB:DATA 2424
TRIGger<t>:USB:DCONdition 2424
TRIGger<t>:USB:DPOPerator 2424
TRIGger<t>:USB:DPOSition 2425
TRIGger<t>:USB:ECONdition 2425
TRIGger<t>:USB:EMIN 2426
TRIGger<t>:USB:EMAX 2426
TRIGger<t>:USB:ERRC 2426
TRIGger<t>:USB:FCONdition 2427
TRIGger<t>:USB:FMIN 2427
TRIGger<t>:USB:FMAX 2428
TRIGger<t>:USB:HAND 2428
TRIGger<t>:USB:PATT 2428
TRIGger<t>:USB:PCONdition 2429
TRIGger<t>:USB:PMIN 2429
TRIGger<t>:USB:PMAX 2429
TRIGger<t>:USB:SCONdition 2430
TRIGger<t>:USB:SMIN 2430
TRIGger<t>:USB:SMAX 2430
TRIGger<t>:USB:SPEC 2431
TRIGger<t>:USB:STCO 2431
TRIGger<t>:USB:TCONdition 2431
TRIGger<t>:USB:TMIN 2432
TRIGger<t>:USB:TMAX 2432
TRIGger<t>:USB:TOKen 2432
TRIGger<t>:USB:WADD 2433
TRIGger<t>:USB:WEND 2433
TRIGger<t>:USB:WETCheck 2434
TRIGger<t>:USB:WFRN 2434
TRIGger<t>:USB:WPAY 2434
TRIGger<t>:USB:WPID 2434
TRIGger<t>:USB:WPOR 2435
TRIGger<t>:USB:WSEU 2435
TRIGger<t>:USB:WSTC 2435

TRIGger<t>:USB:TYPE <Type>

Selects the trigger type for USB analysis. The available trigger types depend on the activated USB protocol type.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:

<Type> SOP | EOP | RST | SUSPend | RESume | TOKen | DATA | HANDshake | SPECial | ERRCond

SOP
Sets the trigger to the SOP (start of packet) field. The start of packet condition is the end of the SYNC field. The trigger instant is the end of the SOP field.

EOP
Sets the trigger to the EOP (end of packet) field. Not available for USB High Speed and USB HSIC protocol types. The trigger instant is the beginning of the EOP field.

RST
Sets the trigger to the Reset field. Not available for USB High Speed and USB HSIC protocol types. For more information on the reset condition, see the USB standard. The trigger instant is the end of the 10 ms period after the SE0 field.

SUSPend
Sets the trigger to the Suspend field. Not available for USB High Speed and USB HSIC protocol types. For more information on the suspend condition, see the USB standard. The trigger instant will be declared after the defined 3 ms timeout.

RESume
Sets the trigger to the Resume field. Not available for USB High Speed and USB HSIC protocol types. For more information on the resume condition, see the USB standard. The trigger instant will be declared after the defined 20 ms timeout.

TOKen
Sets the trigger to one out of four different token trigger types: OUT, IN, SOF, or SETUP.

DATA
Sets the trigger to one out of four different data trigger types: DATA0, DATA1, DATA2, or MDATA.

HANDshake
Sets the trigger to one out of four different handshake trigger types: ACK, NAK, STALL, or NYET.

SPECial
Sets the trigger to one out of four different Special PID trigger types: PREamble, ERR, SPLIT, or PING.

ERRCond
Sets the trigger to one out of seven different error condition trigger types: PID error, CRC5 error, CRC16 error, Bitstuffing error, Unexpected PID error, SE1 error, or Glitching error.

*RST: SOP

Manual operation: See "Trigger type USB" on page 900

TRIGger<t>:USB:ACONdition <AddressOperator>

Sets the operator to set a specific address or an address range. The address values are set with `TRIGger<t>:USB:AMIN` and `TRIGger<t>:USB:AMAX`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<AddressOperator> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one address value to be set using `TRIGger<t>:USB:AMIN`.

INRange | OORange
In range, out of range. These conditions require an address range to be set using `TRIGger<t>:USB:AMIN` and `TRIGger<t>:USB:AMAX`.

*RST: OFF

Manual operation: See "Address" on page 905

TRIGger<t>:USB:AMIN <Address>

Specifies the address, or sets the the start value of an address range. The string parameter does not accept the bit value X (don't care).

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Address>

Manual operation: See "Address" on page 905

TRIGger<t>:USB:AMAX <AddressTo>

Sets the the end value of an address range if `TRIGger<t>:USB:ACONdition` is set to `INRange` or `OORange`. The string parameter does not accept the bit value X (don't care).

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<AddressTo>

Manual operation: See "Address" on page 905

TRIGger<t>:USB:DATA <USBDataType>

Sets the trigger to one out of four different payload data types: DATA0, DATA1, DATA2, or MDATA.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<USBDataType> D0 | D1 | D2 | MD

D0
Sets the trigger to the DATA0 field (even PID).

D1
Sets the trigger to the DATA1 field (odd PID).

D2
Sets the trigger to the DATA2 field (data packet PID for high-speed, high bandwidth isochronous transaction in a microframe).

MD
Sets the trigger to the MDATA field (high-speed data packet PID for split and high bandwidth isochronous transactions).

*RST: D0

Manual operation: See "Data" on page 902

TRIGger<t>:USB:DCONdition <OperatorData>

Sets the operator (equal or unequal) to set a specific payload data pattern.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<OperatorData> OFF | ANY | EQUal | NEQual
*RST: EQUal

Manual operation: See "Payload" on page 905

TRIGger<t>:USB:DPOPerator <DataPosOperator>

Sets the operator (any or equal) for the payload data index position.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<DataPosOperator> ANY | OFF | EQUal

ANY = OFF
The position of the bit pattern within the payload data is not relevant.

EQUal
Sets the operator for specifying a special start position for the bit pattern within the payload data.

*RST: ANY

Manual operation: See "Payload" on page 905

TRIGger<t>:USB:DPOSition <DataPosition>

Specifies the position within a payload data packet, in which a special data pattern is to be searched.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<DataPosition> Range: 0 to 1024
Increment: 1
*RST: 0

Manual operation: See "Payload" on page 905

TRIGger<t>:USB:ECONdition <EndpointOperator>

Sets the operator to set a specific endpoint or an endpoint range. The endpoint values are set with `TRIGger<t>:USB:EMIN` and `TRIGger<t>:USB:EMAX`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<EndpointOperator> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one endpoint value to be set using `TRIGger<t>:USB:EMIN`.

INRange | OORange
In range, out of range. These conditions require a range of endpoint values to be set using `TRIGger<t>:USB:EMIN` and `TRIGger<t>:USB:EMAX`.

*RST: OFF

Manual operation: See "End Point" on page 905

TRIGger<t>:USB:EMIN <Endp>

Specifies the endpoint, or sets the the start value of an endpoint range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Endp>

Manual operation: See "End Point" on page 905

TRIGger<t>:USB:EMAX <EndpTo>

Sets the the end value of an endpoint range if `TRIGger<t>:USB:ECONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<EndpTo>

Manual operation: See "End Point" on page 905

TRIGger<t>:USB:ERRC <ErrorType>

Sets the trigger to an error condition type.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<ErrorType> ANY | PIDerror | CRC5error | CRC16error | BTST | UNEXpid | SE1error | GLITcherr

ANY
Triggers on any of the errors listed below.

PIDerror
Triggers on any packet identifier error.

CRC5error
Triggers on any CRC5 error event.

CRC16error
Triggers on any CRC16 error event.

BTST
Triggers on any bitstuffing error event (erroneous or missing bit stuffing sequence, see USB standard).

UNEXpid
Triggers on any unexpected PID error (illegal PID, that is not allowed in USB low speed and USB full speed protocols, especially PID's announcing packets such as SPLIT, DATA2, MDATA, or other noncompliant packets).

SE1error
Triggers on the illegal bus state Single Ended 1 (SE1 = both lines high).

GLITcherr
Triggers on any glitching error (illegal bit period, see USB standard for the definition of glitching).

*RST: ANY

Manual operation: See "Error condition" on page 904

TRIGger<t>:USB:FCONdition <FrameOperator>

Sets the operator to set a specific frame number or a frame number range. The frame number values are set with `TRIGger<t>:USB:FMIN` and `TRIGger<t>:USB:FMAX`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<FrameOperator> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one frame number value to be set using `TRIGger<t>:USB:FMIN`.

INRange | OORange
In range, out of range. These conditions require a range of frame number values to be set using `TRIGger<t>:USB:FMIN` and `TRIGger<t>:USB:FMAX`.

*RST: OFF

Manual operation: See "Frame number" on page 906

TRIGger<t>:USB:FMIN <FrameNumber>

Specifies the frame number, or sets the the start value of a frame number range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<FrameNumber>

Manual operation: See "Frame number" on page 906

TRIGger<t>:USB:FMAX <FrameNumberTo>

Sets the the end value of a frame number range if `TRIGger<t>:USB:FCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<FrameNumberTo>

Manual operation: See "Frame number" on page 906

TRIGger<t>:USB:HAND <HandshakeType>

Sets the trigger to one out of four different handshake types: ACK, NAK, STALl, or NYET.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<HandshakeType> ACK | NAK | STALl | NYET

ACK
Sets the trigger to the ACK field (acknowledgment of error-free data packet).

NAK
Sets the trigger to the NAK field (non-acknowledgment, no successful data transmission).

STALl
Sets the trigger to the STALL field (endpoint is halted or a control pipe request is not supported).

NYET
Sets the trigger to the NYET field (no response yet from receiver).

*RST: ACK

Manual operation: See "Handshake" on page 903

TRIGger<t>:USB:PATT <PayloadMuster>

Specifies the payload data pattern that is to be searched.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<PayloadMuster>

Manual operation: See "Payload" on page 905

TRIGger<t>:USB:PCONdition <OperatorPort>

Sets the operator to set a specific port number or a port number range. The port number values are set with `TRIGger<t>:USB:PMIN` and `TRIGger<t>:USB:PMAX`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<OperatorPort> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one port number to be set using `TRIGger<t>:USB:PMIN`.

INRange | OORange
In range, out of range. These conditions require a port number range to be set using `TRIGger<t>:USB:PMIN` and `TRIGger<t>:USB:PMAX`.

*RST: OFF

Manual operation: See "Port" on page 906

TRIGger<t>:USB:PMIN <Port>

Specifies the port number, or sets the the start value of a port number range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<Port>

Manual operation: See "Port" on page 906

TRIGger<t>:USB:PMAX <PortTo>

Sets the the end value of a port number range if `TRIGger<t>:USB:PCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<PortTo>

Manual operation: See "Port" on page 906

TRIGger<t>:USB:SCONdition <OperatorSEU>

Sets the operator to set a specific SEU or an SEU range. The SEU values are set with `TRIGger<t>:USB:SMIN` and `TRIGger<t>:USB:SMAX`.

For SEU, see "SEU" on page 907.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<OperatorSEU> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one SEU value to be set using `TRIGger<t>:USB:SMIN`.

INRange | OORange
In range, out of range. These conditions require a range of SEU values to be set using `TRIGger<t>:USB:SMIN` and `TRIGger<t>:USB:SMAX`.

*RST: OFF

Manual operation: See "SEU" on page 907

TRIGger<t>:USB:SMIN <SEU>

Specifies the SEU, or sets the the start value of an SEU range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<SEU>

Manual operation: See "SEU" on page 907

TRIGger<t>:USB:SMAX <SEUTo>

Sets the the end value of an SEU range if `TRIGger<t>:USB:SCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<SEUTo>

Manual operation: See "SEU" on page 907

TRIGger<t>:USB:SPEC <USBSpecialType>

Sets the trigger to one out of four different Special PID types: PREamble, ERR, SPLit, or PING.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<USBSpecialType> PREamble | ERR | SPLit | PING

PREamble
Sets the trigger to the PREamble PID

ERR
Sets the trigger to the ERRor PID

SPLit
Sets the trigger to the SPLIT PID (in USB high speed transactions)

PING
Sets the trigger to the PING PID (in USB high speed transactions, flow control probe for a bulk/control endpoint)

*RST: PREamble

Manual operation: See "Special PID" on page 903

TRIGger<t>:USB:STCO <SC>

Sets the trigger to a specific start-split or complete-split transaction endpoint.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<SC> ONE | ZERO | DC

ONE
SC = 1 represents a complete-split (CSPLIT) transaction.

ZERO
SC = 0 represents a start-split (SSPLIT) transaction.

DC
SC = X represents "don't care" (DC)

*RST: DC

Manual operation: See "SC" on page 906

TRIGger<t>:USB:TCONdition <OperatorET>

Sets the operator to set a specific endpoint type (ET) or an ET range. The ET values are set with `TRIGger<t>:USB:TMIN` and `TRIGger<t>:USB:TMAX`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<OperatorET> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

OFF = ANY
The position of the endpoint type is not relevant.

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one ET value to be set using `TRIGger<t>:USB:TMIN`.

INRange | OORange
In range, out of range. These conditions require a range of ET values to be set using `TRIGger<t>:USB:SMIN` and `TRIGger<t>:USB:SMAX`.

*RST: OFF

Manual operation: See "ET" on page 907

TRIGger<t>:USB:TMIN <ET>

Specifies the endpoint type, or sets the the start value of an endpoint type range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<ET>

Manual operation: See "ET" on page 907

TRIGger<t>:USB:TMAX <ETTo>

Sets the the end value of an endpoint type range if `TRIGger<t>:USB:TCONdition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<ETTo>

Manual operation: See "ET" on page 907

TRIGger<t>:USB:TOKen <USBTokenType>

Sets the trigger to one out of four different token types: OUT, IN, SOF, or SETup.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<USBTokenType> OUT | IN | SOF | SETup

OUT
Sets the trigger to the OUT token (OUT packet from host to device).

IN
Sets the trigger to the IN token (IN packet from device to host).

SOF
Sets the trigger to the SOF token (start of frame marker and frame number).

SETup
Sets the trigger to the SETUP token (address and endpoint number in OUT transaction for setup to a control pipe).

*RST: OUT

Manual operation: See "Token" on page 902

TRIGger<t>:USB:WADD <AddressCheck>

Defines, whether the address check shall be activated or not.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<AddressCheck> OFF | ON

*RST: OFF

Manual operation: See "Address" on page 905

TRIGger<t>:USB:WEND <EndpointCheck>

Defines, whether the endpoint check shall be activated or not.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<EndpointCheck> OFF | ON

*RST: OFF

Manual operation: See "End Point" on page 905

TRIGger<t>:USB:WETCheck <WithETCheck>

Defines, whether the Endpoint Type (ET) check shall be activated or not.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<WithETCheck> OFF | ON
*RST: OFF

Manual operation: See "ET" on page 907

TRIGger<t>:USB:WFRN <FrameCheck>

Defines, whether the frame number check shall be activated or not.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<FrameCheck> OFF | ON
*RST: OFF

Manual operation: See "Frame number" on page 906

TRIGger<t>:USB:WPAY <PayloadCheck>

Defines, whether the payload data check shall be activated or not.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<PayloadCheck> OFF | ON
*RST: OFF

Manual operation: See "Payload" on page 905

TRIGger<t>:USB:WPID <WithPIDCheck>

Defines, whether the packet ID error check shall be activated or not.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<WithPIDCheck> OFF | ON
*RST: OFF

Manual operation: See "PID error" on page 905

TRIGger<t>:USB:WPOR <WithPortCheck>

Defines, whether the port check shall be activated or not.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<WithPortCheck> OFF | ON
*RST: OFF

Manual operation: See "Port" on page 906

TRIGger<t>:USB:WSEU <WithSEUCheck>

Defines, whether the SEU check shall be activated or not.

For SEU, see "SEU" on page 907.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<WithSEUCheck> OFF | ON
*RST: OFF

Manual operation: See "SEU" on page 907

TRIGger<t>:USB:WSTC <WithSCCheck>

Defines, whether the Start / Complete (SC) check shall be activated or not.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

Parameters:
<WithSCCheck> OFF | ON
*RST: OFF

Manual operation: See "SC" on page 906

26.18.22.3 Decode results

In all `BUS<b>:USB:PACKet<pa>` commands, the suffix <b> selects the serial bus and the suffix <pa> selects the packet number in the decode table.

► Query the status of packet #19: `BUS:USB:PACKet19:STAT?`

The result of this remote command query should be "OK".

BUS<b>:USB:PACKet<pa>:PID? 2436
BUS<b>:USB:PACKet<pa>:ADDRess? 2437
BUS<b>:USB:PACKet<pa>:CRC? 2437
BUS<b>:USB:PACKet<pa>:DATA? 2438
BUS<b>:USB:PACKet<pa>:ENDPoint? 2438
BUS<b>:USB:PACKet<pa>:ET? 2438
BUS<b>:USB:PACKet<pa>:FRAMe? 2439
BUS<b>:USB:PACKet<pa>:PORT? 2439
BUS<b>:USB:PACKet<pa>:SC? 2439
BUS<b>:USB:PACKet<pa>:SEU? 2440
BUS<b>:USB:PACKet<pa>:STARt? 2440
BUS<b>:USB:PACKet<pa>:STATus? 2440
BUS<b>:USB:PACKet<pa>:STOP? 2441
BUS<b>:USB:PCOunt? 2441

BUS<b>:USB:PACKet<pa>:PID?

Returns the packet PID for the selected serial bus and packet number.

Suffix:

<b> 1..4

<pa> *

Return values:

<PID> RES | OUT | ACK | DATA0 | DATa0 | PING | SOF | NYET | DATA2 | DATa2 | SPLIT | SPLit | IN | NAK | DATA1 | DATa1 | PRE | SETUP | SETup | STALL | STALl | MDATA | MDATa | UNK

RES
RES = Reserved

OUT
OUT Token PID

IN
IN Token PID

SOF
Start Of Frame PID

SETUP = SETup
SETUP PID

DATA0 = DATa0
DATA0 PID, even PID

DATA1 = DATa1
DATA1 PID, odd PID

DATA2 = DATa2
DATA2 PID (only valid in USB high speed and USB HSIC protocols)

MDATA = MDATa
MDATA PID (only valid in USB high speed and USB HSIC protocols)

ACK
ACKnowledgment PID

NAK
Non-AcKnowledgment PID

STALL = STALl
STALL PID

NYET
Not ready YET (only valid in USB high speed and USB HSIC protocols)

PRE
PREamble PID (only valid in USB high speed and USB HSIC protocols)

SPLIT = SPLit
SPLIT PID (only valid in USB high speed and USB HSIC protocols)

PING
PING PID (only valid in USB high speed and USB HSIC protocols)

UNK
UNK = Unknown PID

*RST: RES

Usage: Query only

BUS<b>:USB:PACKet<pa>:ADDRess?

Returns the packet address for the selected serial bus and packet number.

Suffix:
<b> 1..4

<pa> *

Return values:
<Addr> Range: 0 to 127
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:USB:PACKet<pa>:CRC?

Returns the packet CRC (Cyclic Redundancy Code) for the selected serial bus and packet number.

Suffix:
<b> 1..4

<pa> *

Return values:

<CRC> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:USB:PACKet<pa>:DATA?

Returns the payload data from the packet with the selected packet number (for the selected serial bus).

Suffix:

<b> 1..4

<pa> *

Return values:

<Data> Comma-separated sequence of integer values (N, D1, D2,…, DN). N is the number of bytes in the packet. and D1…DN are the values of the bytes.

Example:
```
BUS:USB:PACKet4:DATA?
<-- 6,18,52,86,120,154,188
```

Usage: Query only

BUS<b>:USB:PACKet<pa>:ENDPoint?

Returns the endpoint for the selected serial bus and packet number.

Suffix:

<b> 1..4

<pa> *

Return values:

<Endp> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:USB:PACKet<pa>:ET?

Returns the endpoint type (ET) for the selected serial bus and packet number.

Suffix:

<b> 1..4

<pa> *

Return values:

<ET> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:USB:PACKet<pa>:FRAMe?

Returns the frame number for the selected serial bus and packet number.

Suffix:

<b> 1..4

<pa> *

Return values:

<FrameNo> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:USB:PACKet<pa>:PORT?

Returns the port number for the selected serial bus and packet number.

Suffix:

<b> 1..4

<pa> *

Return values:

<Port> Range: 0 to 127
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:USB:PACKet<pa>:SC?

Returns the Start- / Complete-split transaction (SSPLIT / CSPLIT) flag bits for the selected serial bus and packet number.

Suffix:

<b> 1..4

<pa> *

Return values:

<SC>

Usage: Query only

BUS<b>:USB:PACKet<pa>:SEU?

Returns the SEU values for the selected serial bus and packet number.

For SEU, see "SEU" on page 907.

Suffix:
<b> 1..4

<pa> *

Return values:
<SEU> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:USB:PACKet<pa>:STARt?

Returns the start position of the packet with the selected packet number (for the selected serial bus).

Suffix:
<b> 1..4

<pa> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:USB:PACKet<pa>:STATus?

Returns the status of the packet with the selected packet number (for the selected serial bus).

Suffix:
<b> 1..4

<pa> *

Return values:
<State> OK | PID | CRC | BTST | GLITCH | GLITch | BYTE
*RST: OK

Usage: Query only

BUS<b>:USB:PACKet<pa>:STOP?

Returns the stop time of the packet with the selected packet number (for the selected serial bus).

Suffix:
<b> 1..4

<pa> *

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:USB:PCOunt?

Returns the packet count for the selected serial bus, i.e. the number of packets in the present acquisition.

Suffix:
<b> 1..4

Return values:
<Count> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

26.18.22.4 Search settings

SEARch:TRIGger:USB:ACONdition 2442
SEARch:TRIGger:USB:AMIN 2443
SEARch:TRIGger:USB:AMAX 2443
SEARch:TRIGger:USB:BITSterror 2443
SEARch:TRIGger:USB:CRC16error 2443
SEARch:TRIGger:USB:CRC5error 2444
SEARch:TRIGger:USB:DATA 2444
SEARch:TRIGger:USB:DCONdition 2445
SEARch:TRIGger:USB:DPOPerator 2445
SEARch:TRIGger:USB:DPOSition 2445
SEARch:TRIGger:USB:ECONdition 2446
SEARch:TRIGger:USB:EMIN 2446
SEARch:TRIGger:USB:EMAX 2446
SEARch:TRIGger:USB:FCONdition 2447
SEARch:TRIGger:USB:FMIN 2447
SEARch:TRIGger:USB:FMAX 2447
SEARch:TRIGger:USB:GLITcherror 2448

SEARch:TRIGger:USB:HAND....2448
SEARch:TRIGger:USB:PATT....2448
SEARch:TRIGger:USB:PCONdition....2448
SEARch:TRIGger:USB:PMIN....2449
SEARch:TRIGger:USB:PMAX....2449
SEARch:TRIGger:USB:PIDerror....2449
SEARch:TRIGger:USB:SCONdition....2450
SEARch:TRIGger:USB:SMIN....2450
SEARch:TRIGger:USB:SMAX....2450
SEARch:TRIGger:USB:SDATa....2451
SEARch:TRIGger:USB:SERRor....2451
SEARch:TRIGger:USB:SHANdshake....2451
SEARch:TRIGger:USB:SSOP....2451
SEARch:TRIGger:USB:SSPE....2452
SEARch:TRIGger:USB:SPEC....2452
SEARch:TRIGger:USB:STCO....2453
SEARch:TRIGger:USB:STOKen....2453
SEARch:TRIGger:USB:TCONdition....2453
SEARch:TRIGger:USB:TMIN....2454
SEARch:TRIGger:USB:TMAX....2454
SEARch:TRIGger:USB:TOKen....2454
SEARch:TRIGger:USB:WADD....2455
SEARch:TRIGger:USB:WEND....2455
SEARch:TRIGger:USB:WETCheck....2455
SEARch:TRIGger:USB:WFRN....2456
SEARch:TRIGger:USB:WPAY....2456
SEARch:TRIGger:USB:WPID....2456
SEARch:TRIGger:USB:WPOR....2456
SEARch:TRIGger:USB:WSEU....2457
SEARch:TRIGger:USB:WSTC....2457

SEARch:TRIGger:USB:ACONdition <SearchName>,<AddressOperator>
SEARch:TRIGger:USB:ACONdition? <SearchName>

Sets the operator to set a specific address or an address range.

Parameters:

<AddressOperator> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one address value to be set using `SEARch:TRIGger:USB:AMIN`.

INRange | OORange
In range, out of range. These conditions require an address range to be set using `SEARch:TRIGger:USB:AMIN` and `SEARch:TRIGger:USB:AMAX`.

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Address check" on page 912

SEARch:TRIGger:USB:AMIN <SearchName>,<Address>
SEARch:TRIGger:USB:AMIN? <SearchName>

Specifies an address, or sets the start value of an address range. The string parameter does not accept the bit value X (don't care).

Parameters:
<Address>

Parameters for setting and query:
<SearchName>

Manual operation: See "Address check" on page 912

SEARch:TRIGger:USB:AMAX <SearchName>,<AddressTo>
SEARch:TRIGger:USB:AMAX? <SearchName>

Sets the the end value of an address range if `TRIGger<t>:USB:ACONdition` is set to `INRange` or `OORange`. The string parameter does not accept the bit value X (don't care).

Parameters:
<AddressTo>

Parameters for setting and query:
<SearchName>

Manual operation: See "Address check" on page 912

SEARch:TRIGger:USB:BITSterror <SearchName>,<BitstuffError>
SEARch:TRIGger:USB:BITSterror? <SearchName>

Defines, whether a search for any bitstuffing error shall be activated or not.

Parameters:
<BitstuffError> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error condition" on page 912

SEARch:TRIGger:USB:CRC16error <SearchName>,<CRC16Error>
SEARch:TRIGger:USB:CRC16error? <SearchName>

Defines, whether a search for any CRC16 error shall be activated or not.

Parameters:
<CRC16Error> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error condition" on page 912

SEARch:TRIGger:USB:CRC5error <SearchName>,<CRC5Error>
SEARch:TRIGger:USB:CRC5error? <SearchName>

Defines, whether a search for any CRC5 error shall be activated or not.

Parameters:
<CRC5Error> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error condition" on page 912

SEARch:TRIGger:USB:DATA <SearchName>,<USBDataType>
SEARch:TRIGger:USB:DATA? <SearchName>

Defines, which data packet type is searched for: "DATA0", "DATA1", "DATA2", or "MDATA", as well as "Any" data packet.

Parameters:
<USBDataType> ANY | D0 | D1 | D2 | MD

ANY
Searches for any of the data packet types listed below

D0
Searches for a DATA0 packet (even PID)

D1
Searches for a DATA1 packet (odd PID)

D2
Searches for a DATA2 packet (high-speed data packet for high bandwidth isochronous transaction in a microframe)

MD
Searches for an MDATA packet (high-speed data packet for split and high bandwidth isochronous transactions)

*RST: D0

Parameters for setting and query:
<SearchName>

Manual operation: See "Data" on page 911

SEARch:TRIGger:USB:DCONdition <SearchName>,<OperatorData>
SEARch:TRIGger:USB:DCONdition? <SearchName>

Sets the operator (equal or unequal) to set a specific payload data pattern.

Parameters:
<OperatorData> OFF | ANY | EQUal | NEQual
*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Payload check" on page 913

SEARch:TRIGger:USB:DPOPerator <SearchName>,<DataPosOperator>
SEARch:TRIGger:USB:DPOPerator? <SearchName>

Sets the operator (any or equal) for the payload data index position.

Parameters:
<DataPosOperator> ANY | OFF | EQUal

ANY = OFF
The position of payload data is not relevant for the search condition.

*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Payload check" on page 913

SEARch:TRIGger:USB:DPOSition <SearchName>,<DataPosition>
SEARch:TRIGger:USB:DPOSition? <SearchName>

Specifies the position within a payload data packet, in which a special data pattern is to be searched.

Parameters:
<DataPosition> Range: 0 to 1024
Increment: 1
*RST: 0

Parameters for setting and query:
<SearchName>

Manual operation: See "Payload check" on page 913

SEARch:TRIGger:USB:ECONdition <SearchName>,<EndpointOperator>
SEARch:TRIGger:USB:ECONdition? <SearchName>

Sets the operator to set a specific endpoint or an endpoint range. The endpoint values are set with `SEARch:TRIGger:USB:EMIN` and `SEARch:TRIGger:USB:EMAX`.

Parameters:
<EndpointOperator> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one endpoint value to be set using `SEARch:TRIGger:USB:EMIN`.

INRange | OORange
In range, out of range. These conditions require a range of endpoint values to be set using `SEARch:TRIGger:USB:EMIN` and `SEARch:TRIGger:USB:EMAX`.

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "End Point check" on page 912

SEARch:TRIGger:USB:EMIN <SearchName>,<Endp>
SEARch:TRIGger:USB:EMIN? <SearchName>

Specifies an endpoint, or sets the start value of an endpoint range.

Parameters:
<Endp>

Parameters for setting and query:
<SearchName>

Manual operation: See "End Point check" on page 912

SEARch:TRIGger:USB:EMAX <SearchName>,<EndpTo>
SEARch:TRIGger:USB:EMAX? <SearchName>

Sets the the end value of an endpoint range if `TRIGger<t>:USB:ECONdition` is set to `INRange` or `OORange`.

Parameters:
<EndpTo>

Parameters for setting and query:
<SearchName>

Manual operation: See "End Point check" on page 912

SEARch:TRIGger:USB:FCONdition <SearchName>,<FrameOperator>
SEARch:TRIGger:USB:FCONdition? <SearchName>

Sets the operator to set a specific frame number or a frame number range. The frame number values are set with `SEARch:TRIGger:USB:FMIN` and `SEARch:TRIGger:USB:FMAX`.

Parameters:
<FrameOperator> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one frame number value to be set using `SEARch:TRIGger:USB:FMIN`.

INRange | OORange
In range, out of range. These conditions require a range of frame number values to be set using `SEARch:TRIGger:USB:FMIN` and `SEARch:TRIGger:USB:FMAX`.

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame number check" on page 913

SEARch:TRIGger:USB:FMIN <SearchName>,<FrameNumber>
SEARch:TRIGger:USB:FMIN? <SearchName>

Specifies a frame number, or sets the start value of a frame number range.

Parameters:
<FrameNumber>

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame number check" on page 913

SEARch:TRIGger:USB:FMAX <SearchName>,<FrameNumberTo>
SEARch:TRIGger:USB:FMAX? <SearchName>

Sets the the end value of a frame number range if `TRIGger<t>:USB:FCONdition` is set to `INRange` or `OORange`.

Parameters:
<FrameNumberTo>

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame number check" on page 913

SEARch:TRIGger:USB:GLITcherror <SearchName>,<GlitchError>
SEARch:TRIGger:USB:GLITcherror? <SearchName>

Defines, whether a search for any glitch error shall be activated or not.

Parameters:
<GlitchError> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error condition" on page 912

SEARch:TRIGger:USB:HAND <SearchName>,<HandshakeType>
SEARch:TRIGger:USB:HAND? <SearchName>

Defines, which handshake type is searched for.

Parameters:
<HandshakeType> ANY | ACK | NAK | STALI | NYET
*RST: ACK

Parameters for setting and query:
<SearchName>

Manual operation: See "Handshake" on page 911

SEARch:TRIGger:USB:PATT <SearchName>,<PayloadMuster>
SEARch:TRIGger:USB:PATT? <SearchName>

Defines the payload data pattern to search for.

Parameters:
<PayloadMuster>

Parameters for setting and query:
<SearchName>

Manual operation: See "Payload check" on page 913

SEARch:TRIGger:USB:PCONdition <SearchName>,<OperatorPort>
SEARch:TRIGger:USB:PCONdition? <SearchName>

Sets the operator to set a specific port number or a port number range. The port number values are set with `SEARch:TRIGger:USB:PMIN` and `SEARch:TRIGger:USB:PMAX`.

Parameters:
<OperatorPort> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one port number to be set using `SEARch:TRIGger:USB:PMIN`.

INRange | OORange
In range, out of range. These conditions require a port number range to be set using `SEARch:TRIGger:USB:PMIN` and `SEARch:TRIGger:USB:PMAX`.

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Port check" on page 914

SEARch:TRIGger:USB:PMIN <SearchName>,<Port>
SEARch:TRIGger:USB:PMIN? <SearchName>

Specifies a port number, or sets the start value of a port number range.

Parameters:
<Port>

Parameters for setting and query:
<SearchName>

Manual operation: See "Port check" on page 914

SEARch:TRIGger:USB:PMAX <SearchName>,<PortTo>
SEARch:TRIGger:USB:PMAX? <SearchName>

Sets the the end value of a port number range if `TRIGger<t>:USB:PCONdition` is set to `INRange` or `OORange`.

Parameters:
<PortTo>

Parameters for setting and query:
<SearchName>

Manual operation: See "Port check" on page 914

SEARch:TRIGger:USB:PIDerror <SearchName>,<PIDError>
SEARch:TRIGger:USB:PIDerror? <SearchName>

Defines, whether a search for any PID error shall be activated or not.

Parameters:
<PIDError> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error condition" on page 912

SEARch:TRIGger:USB:SCONdition <SearchName>,<OperatorSEU>
SEARch:TRIGger:USB:SCONdition? <SearchName>

Sets the operator to set a specific SEU or an SEU range. The SEU values are set with `SEARch:TRIGger:USB:SMIN` and `SEARch:TRIGger:USB:SMAX`.

For SEU, see "SEU" on page 907.

Parameters:
<OperatorSEU> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one SEU value to be set using `SEARch:TRIGger:USB:SMIN`.

INRange | OORange
In range, out of range. These conditions require a range of SEU values to be set using `SEARch:TRIGger:USB:SMIN` and `SEARch:TRIGger:USB:SMAX`.

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "SEU check" on page 914

SEARch:TRIGger:USB:SMIN <SearchName>,<SEU>
SEARch:TRIGger:USB:SMIN? <SearchName>

Specifies an SEU, or sets the start value of an SEU range.

Parameters:
<SEU>

Parameters for setting and query:
<SearchName>

Manual operation: See "SEU check" on page 914

SEARch:TRIGger:USB:SMAX <SearchName>,<SEUTo>
SEARch:TRIGger:USB:SMAX? <SearchName>

Sets the the end value of an SEU range if `TRIGger<t>:USB:SCONdition` is set to `INRange` or `OORange`.

Parameters:
<SEUTo>

Parameters for setting and query:
<SearchName>

Manual operation: See "SEU check" on page 914

SEARch:TRIGger:USB:SDATa <SearchName>,<DataPacket>
SEARch:TRIGger:USB:SDATa? <SearchName>

Enables the search for any data packet.

Parameters:
<DataPacket> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 910

SEARch:TRIGger:USB:SERRor <SearchName>,<ErrorCondition>
SEARch:TRIGger:USB:SERRor? <SearchName>

Enables the search for various errors.

Parameters:
<ErrorCondition> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 910

SEARch:TRIGger:USB:SHANdshake <SearchName>,<HandshakePacket>
SEARch:TRIGger:USB:SHANdshake? <SearchName>

Defines, whether the search for any handshake packet shall be activated or not.

Parameters:
<HandshakePacket> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 910

SEARch:TRIGger:USB:SSOP <SearchName>,<StartofPacket>
SEARch:TRIGger:USB:SSOP? <SearchName>

Defines, whether a start of packet (SOP) search shall be activated or not.

Parameters:
<StartofPacket> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 910

SEARch:TRIGger:USB:SSPE <SearchName>,<SpecialPacket>
SEARch:TRIGger:USB:SSPE? <SearchName>

Defines, whether the search for any special PID packet shall be activated or not.

Parameters:
<SpecialPacket> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 910

SEARch:TRIGger:USB:SPEC <SearchName>,<USBSpecialType>
SEARch:TRIGger:USB:SPEC? <SearchName>

Defines, which special PID packet type is searched for: "PREamble", "ERR", "SPLit", "PING", or "Any" special PID packet.

Parameters:
<USBSpecialType> ANY | PREamble | ERR | SPLit | PING

ANY
Searches for any of the special PID packet types listed below

PREamble
Searches for any host-issued preamble token (enables downstream bus traffic to low speed USB devices)

ERR
Searches for any SPLIT transaction error handshake token (reuses PRE value)

SPLit
Searches for any high speed SPLIT transaction token

PING
Searches for any high speed flow control probe for a bulk/control endpoint

*RST: PREamble

Parameters for setting and query:
<SearchName>

Manual operation: See "Special PID" on page 911

SEARch:TRIGger:USB:STCO <SearchName>,<SC>
SEARch:TRIGger:USB:STCO? <SearchName>

Defines, which Start- / Complete- (SC) split transaction type is searched for: SSPLIT or CSPLIT.

Parameters:
<SC> ONE | ZERO | DC

ONE
SC = 1 represents a complete-split (CSPLIT) transaction

ZERO
SC = 0 represents a start-split (SSPLIT) transaction

DC
SC = X represents "don't care" (DC)

*RST: DC

Parameters for setting and query:
<SearchName>

Manual operation: See "SC check" on page 914

SEARch:TRIGger:USB:STOKen <SearchName>,<TokenPacket>
SEARch:TRIGger:USB:STOKen? <SearchName>

Defines, whether a search for any token packet shall be activated or not.

Parameters:
<TokenPacket> OFF | ON

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Search types" on page 910

SEARch:TRIGger:USB:TCONdition <SearchName>,<OperatorET>
SEARch:TRIGger:USB:TCONdition? <SearchName>

Sets the operator to set a specific endpoint type (ET) or an ET range. The ET values are set with `SEARch:TRIGger:USB:TMIN` and `SEARch:TRIGger:USB:TMAX`.

Parameters:
<OperatorET> OFF | ANY | EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

OFF = ANY
The endpoint type is not relevant for the search condition.

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one ET value to be set using `SEARch:TRIGger:USB:TMIN`.

INRange | OORange
In range, out of range. These conditions require a range of ET values to be set using `SEARch:TRIGger:USB:TMIN` and `SEARch:TRIGger:USB:TMAX`.

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "ET check" on page 914

SEARch:TRIGger:USB:TMIN <SearchName>,<ET>
SEARch:TRIGger:USB:TMIN? <SearchName>

Specifies an endpoint type (ET), or sets the start value of an ET range.

Parameters:
<ET>

Parameters for setting and query:
<SearchName>

Manual operation: See "ET check" on page 914

SEARch:TRIGger:USB:TMAX <SearchName>,<ETTo>
SEARch:TRIGger:USB:TMAX? <SearchName>

Sets the the end value of an endpoint type (ET) range if `TRIGger<t>:USB:TCONdition` is set to `INRange` or `OORange`.

Parameters:
<ETTo>

Parameters for setting and query:
<SearchName>

Manual operation: See "ET check" on page 914

SEARch:TRIGger:USB:TOKen <SearchName>,<USBTokenType>
SEARch:TRIGger:USB:TOKen? <SearchName>

Defines, which token packet type is searched for: "OUT", "IN", "SOF", "SETUP", or "Any" token packet.

Parameters:
<USBTokenType> ANY | OUT | IN | SOF | SETup

ANY
Searches for any of the token packet types listed below.

OUT
Searches for an OUT token.

IN
Searches for an IN token.

SOF
Searches for a start of frame (SOF) token.

SETup
Searches for a SETup token.

*RST: OUT

Parameters for setting and query:
<SearchName>

Manual operation: See "Token" on page 911

SEARch:TRIGger:USB:WADD <SearchName>,<AddressCheck>
SEARch:TRIGger:USB:WADD? <SearchName>

Defines, whether a search for any address field shall be activated or not.

Parameters:
<AddressCheck> OFF | ON

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Address check" on page 912

SEARch:TRIGger:USB:WEND <SearchName>,<EndpointCheck>
SEARch:TRIGger:USB:WEND? <SearchName>

Defines, whether a search for any endpoint shall be activated or not.

Parameters:
<EndpointCheck> OFF | ON

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "End Point check" on page 912

SEARch:TRIGger:USB:WETCheck <SearchName>,<WithETCheck>
SEARch:TRIGger:USB:WETCheck? <SearchName>

Defines, whether a search for any Endpoint Type (ET) shall be activated or not.

Parameters:
<WithETCheck> OFF | ON

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "ET check" on page 914

SEARch:TRIGger:USB:WFRN <SearchName>,<FrameCheck>
SEARch:TRIGger:USB:WFRN? <SearchName>

Defines, whether a search for any frame number shall be activated or not.

Parameters:
<FrameCheck> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Frame number check" on page 913

SEARch:TRIGger:USB:WPAY <SearchName>,<PayloadCheck>
SEARch:TRIGger:USB:WPAY? <SearchName>

Defines, whether a search for any payload data shall be activated or not.

Parameters:
<PayloadCheck> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Payload check" on page 913

SEARch:TRIGger:USB:WPID <SearchName>,<WithPIDCheck>
SEARch:TRIGger:USB:WPID? <SearchName>

Defines, whether a search for any packet ID error shall be activated or not.

Parameters:
<WithPIDCheck> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

SEARch:TRIGger:USB:WPOR <SearchName>,<WithPortCheck>
SEARch:TRIGger:USB:WPOR? <SearchName>

Defines, whether a search for any port shall be activated or not.

Parameters:
<WithPortCheck> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Port check" on page 914

SEARch:TRIGger:USB:WSEU <SearchName>,<WithSEUCheck>
SEARch:TRIGger:USB:WSEU? <SearchName>

Defines, whether a search for any SEU shall be activated or not.

For SEU, see "SEU" on page 907.

Parameters:
<WithSEUCheck> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "SEU check" on page 914

SEARch:TRIGger:USB:WSTC <SearchName>,<WithSCCheck>
SEARch:TRIGger:USB:WSTC? <SearchName>

Defines, whether a search for any Start / Complete (SC) shall be activated or not.

Parameters:
<WithSCCheck> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "SC check" on page 914

26.18.22.5 Search results

In all `SEARch:RESult:USB:PACKet<m>` commands, the suffix <m> selects the packet number in the list of search results.

SEARch:RESult:USB:PACKet<pa>:ADDRess? 2458
SEARch:RESult:USB:PACKet<pa>:CRC? 2458
SEARch:RESult:USB:PACKet<pa>:DATA? 2458
SEARch:RESult:USB:PACKet<pa>:ENDPoint? 2458
SEARch:RESult:USB:PACKet<pa>:ET? 2459
SEARch:RESult:USB:PACKet<pa>:FRAMe? 2459
SEARch:RESult:USB:PACKet<pa>:PID? 2459
SEARch:RESult:USB:PACKet<pa>:PORT? 2460
SEARch:RESult:USB:PACKet<pa>:SC? 2460
SEARch:RESult:USB:PACKet<pa>:SEU? 2460
SEARch:RESult:USB:PACKet<pa>:STARt? 2461
SEARch:RESult:USB:PACKet<pa>:STATus? 2461
SEARch:RESult:USB:PACKet<pa>:STOP? 2461
SEARch:RESult:USB:PCOunt? 2462

SEARch:RESult:USB:PACKet<pa>:ADDRess? <SearchName>

Returns the packet address for the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Addr> Range: 0 to 127
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:CRC? <SearchName>

Returns the packet CRC (Cyclic Redundancy Code) for the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<CRC> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:DATA? <SearchName>

Returns the payload data from the packet with the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Value>

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:ENDPoint? <SearchName>

Returns the endpoint for the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Endp> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:ET? <SearchName>

Returns the endpoint type (ET) for the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<ET> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:FRAMe? <SearchName>

Returns the frame number for the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<FrameNo> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:PID? <SearchName>

Returns the packet PID for the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<PID> RES | OUT | ACK | DATA0 | DATa0 | PING | SOF | NYET | DATA2 | DATa2 | SPLIT | SPLit | IN | NAK | DATA1 | DATa1 | PRE | SETUP | SETup | STALL | STALl | MDATA | MDATa | UNK

For a description of the return values, see `BUS<b>:USB:PACKet<pa>:PID?` on page 2436.

*RST: RES

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:PORT? <SearchName>

Returns the port number for the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Port> Range: 0 to 127
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:SC? <SearchName>

Returns the Start- / Complete-split transaction (SSPLIT / CSPLIT) flag bits for the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<SC>

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:SEU? <SearchName>

Returns the SEU values for the selected packet number within the search result.

For SEU, see "SEU" on page 907.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<SEU> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:STARt? <SearchName>

Returns the start time of the packet with the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:STATus? <SearchName>

Returns the status of the packet with the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<State> OK | PID | CRC | BTST | GLITCH | GLITch | BYTE
*RST: OK

Usage: Query only

SEARch:RESult:USB:PACKet<pa>:STOP? <SearchName>

Returns the stop time of the packet with the selected packet number within the search result.

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:

<Stop>	Range:	-100E+24 to 100E+24
	Increment:	100E-12
	*RST:	0
	Default unit:	s

Usage: Query only

SEARch:RESult:USB:PCOunt? <SearchName>

Returns the search result's packet count, i.e. the number of packets found in the search result.

Query parameters:
<SearchName>

Return values:

<Count>	Range:	0 to 100E+3
	Increment:	1
	*RST:	0

Usage: Query only

26.18.23 USB 3.1 (option R&S RTP-K61/K62)

- Configuration....2462
- Digital signal processing (DSP)....2464
- Trigger....2467
- Decode results....2486
- Search settings....2490
- Search results....2497

26.18.23.1 Configuration

In all `BUS<b>:USBT` commands, the suffix <b> selects the serial bus.

BUS<b>:USBThree:SOURce....2462
BUS<b>:USBThree:POLarity....2463
BUS<b>:USBThree:THRHigh....2463
BUS<b>:USBThree:THRLow....2463
BUS<b>:USBThree:SCRMode....2464
BUS<b>:USBThree:TYPE....2464

BUS<b>:USBThree:SOURce <SourceData>

Selects the source for the data signal in the USB 3.1 protocol.

Suffix:
<b> 1..4

Parameters:
<SourceData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Source" on page 927

BUS<b>:USBThree:POLarity <Polarity>

Defines the polarity of the data signal for the active (U0) state of the port.

Suffix:
<b> 1..4

Parameters:
<Polarity> NORMal | INVert

NORMal
Normal (non-inverted) data signal polarity

INVert
Inverted data signal polarity

*RST: NORMal

Manual operation: See "Polarity" on page 927

BUS<b>:USBThree:THRHigh <ThresholdUpper>

Defines the upper threshold level for digitization of the data signal in the USB 3.1 protocol.

Suffix:
<b> 1..4

Parameters:
<ThresholdUpper> Range: -2 to 2
Increment: 0.01
*RST: 0.05
Default unit: V

Manual operation: See "Thresholds" on page 927

BUS<b>:USBThree:THRLow <ThresholdLower>

Defines the lower threshold level for digitization of the data signal in the USB 3.1 protocol.

Suffix:
<b> 1..4

Parameters:

<ThresholdLower> Range: -2 to 2
Increment: 0.01
*RST: -0.05
Default unit: V

Manual operation: See "Thresholds" on page 927

BUS<b>:USBThree:SCRMode <ScrambleMode>

Selects if the data pattern is scrambled or unscambled.

Suffix:

<b> 1..4

Parameters:

<ScrambleMode> SCRM | NSCR

SCRM
Scrambling is enabled as specified in the standard, to minimize EMI emissions.

NSCR
No scrambling: To simplify testing and debugging, scrambling is disabled.

*RST: SCRM

Manual operation: See "Scramble Mode" on page 927

BUS<b>:USBThree:TYPE <Protocol>

Selects the USB 3.1 protocol type.

Suffix:

<b> 1..4

Parameters:

<Protocol> SS | SSP

*RST: SS

Usage: Asynchronous command

Manual operation: See "Protocol type" on page 926

26.18.23.2 Digital signal processing (DSP)

BUS<b>:CTLE:DCGain ... 2465
BUS<b>:CTLE:ENBLe ... 2465
BUS<b>:CTLE:P1FReq ... 2465
BUS<b>:CTLE:P2FReq ... 2465
BUS<b>:CTLE:Z1FReq ... 2466
BUS<b>:USBThree:DFE:COEFficient ... 2466

BUS<b>:USBThree:DFE:ENBLe 2466
BUS<b>:USBThree:DFE:ESTCoeff 2467
BUS<b>:USBThree:DFE:TCONt 2467

BUS<b>:CTLE:DCGain <DCGain>

Sets the adjustable DC gain. This value can be chosen according to the channel loss characteristics. For low-loss channels, you can set a value close to 0 dB.

Suffix:
<b> 1..4

Parameters:
<DCGain> Range: -100 to 100
Increment: 0.01
*RST: 0
Default unit: dB

Manual operation: See "DC Gain (A_{DC})" on page 928

BUS<b>:CTLE:ENBLe <EnableCTLE>

Enables the continuous time linear equalization (CTLE) equalization.

Suffix:
<b> 1..4

Parameters:
<EnableCTLE> OFF | ON
*RST: OFF

Manual operation: See "Enable" on page 928

BUS<b>:CTLE:P1FReq <PoleOneFreq>

Sets the pole 1 frequency for the transfer function of the CTLE algorithm.

Suffix:
<b> 1..4

Parameters:
<PoleOneFreq> Range: 1 to 40E+9
Increment: 1
*RST: 0
Default unit: Hz

Manual operation: See "Pole frequency (fp1)/(fp2)" on page 928

BUS<b>:CTLE:P2FReq <PoleTwoFreq>

Sets the pole 2 frequency for the transfer function of the CTLE algorithm.

Suffix:
<b> 1..4

Parameters:
<PoleTwoFreq> Range: 1 to 40E+9
Increment: 1
*RST: 0
Default unit: Hz

Manual operation: See "Pole frequency (fp1)/(fp2)" on page 928

BUS<b>:CTLE:Z1FReq <ZroOneFreq>

Sets the zero frequency for the transfer function of the CTLE algorithm.

Suffix:
<b> 1..4

Parameters:
<ZroOneFreq> Range: 1 to 40E+9
Increment: 1
*RST: 0
Default unit: Hz

Manual operation: See "Zero frequency (fz)" on page 928

BUS<b>:USBThree:DFE:COEFficient <DFE_coeff>

Sets the value of the coefficient for the DFE .

Suffix:
<b> 1..4

Parameters:
<DFE_coeff> Range: -1 to 1
Increment: 1E-3
*RST: 0
Default unit: V

Manual operation: See "Coefficient" on page 929

BUS<b>:USBThree:DFE:ENBLe <EnableDFE>

Enables the use of the decision feedback equalization for USB 3.1.

Suffix:
<b> 1..4

Parameters:
<EnableDFE> OFF | ON
*RST: ON

Manual operation: See "Enable" on page 929

BUS<b>:USBThree:DFE:ESTCoeff <AutoChEstimate>

Enables the use of estimate coefficients for the decision feedback equalization.

Suffix:
<b> 1..4

Parameters:
<AutoChEstimate> OFF | ON
*RST: ON

Manual operation: See "Estimate coefficients" on page 929

BUS<b>:USBThree:DFE:TCONt <CIRLength>

Sets a number of taps for the decision feedback filter.

Suffix:
<b> 1..4

Parameters:
<CIRLength> Range: 1 to 20
Increment: 1
*RST: 5

Manual operation: See "Number of Taps" on page 929

26.18.23.3 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

There are two commands for each parameter, that you can use for defining the USB 3.1 settings.

For example, to set the *Frame type =ACK > Field =Route String >Data* value you can use one of the following commands:

- `TRIGger:USBThree:FRAMe13:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:USBThree:DMIN "ACK", "Route String", 01100`
  Defines the parameter by using the frame and field name.

Table 26-10 and table 26-11 give an overview of the available frame and field numbers. Those numbers follow the GUI numbers.

Table 26-10: Overview of frame and field numbers for USB 3.1, Protocol Type > Super Speed

Frame number	Frame name	Field number	Field name
1	TSEQ	1	Symbol
2	TS1	1	Train
		2	Loop
		3	Scramble
		4	LL
		5	Retimer
3	TS1A	-	-
4	TS1B	-	-
5	TS2	1	Train
		2	Loop
		3	Scramble
		4	LL
		5	Retimer
6	Set Link Function	1	SLF
		2	HDr #
		3	Hub #
		4	DLY
		5	DFR
7	U2 Inactivity Timeout	1	U2 IT
		2	HDr #
		3	Hub #
		4	DLY
		5	DFR
8	Vendor Device Test	1	VDT
		2	Vendor Def
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR
9	Port Capability	1	Link Speed
		2	Num HP Buf
		3	Dir
		4	OTG

Frame number	Frame name	Field number	Field name
		5	Tiebreake
		6	HDr #
		7	Hub #
		8	DLY
		9	DFR
10	Port Config	1	Link Speed
		2	HDr #
		3	Hub #
		4	DLY
		5	DFR
11	Port Config Rsp	1	Response Code
		2	HDr #
		3	Hub #
		4	DLY
		5	DFR
12	Link Delay Meas	1	LDM Type
		2	LDMS
		3	Response Delay
		4	HDr #
		5	Hub #
		6	DLY
		7	DFR
13	ACK	1	Route String
		2	Device Address
		3	rty
		4	D
		5	EPTNum
		6	TT
		7	HE
		8	NumP
		9	SeqNum
		10	TPF
		11	StreamId

Frame number	Frame name	Field number	Field name
		12	SSI
		13	WPA
		14	DBI
		15	PP
		16	NBI
		17	HDr #
		18	Hub #
		19	DLY
		20	DFR
14	NRDY	1	Device Address
		2	D
		3	EPTNum
		4	StreamId
		5	HDr #
		6	Hub #
		7	DLY
		8	DFR
15	ERDY	1	Device Address
		2	D
		3	EPTNum
		4	NumP
		5	StreamId
		6	HDr #
		7	Hub #
		8	DLY
		9	DFR
16	Status	1	Route String
		2	Device Address
		3	D
		4	EPTNum
		5	PP
		6	HDr #
		7	Hub #

Frame number	Frame name	Field number	Field name
		8	DLY
		9	DFR
17	Stall	1	Device Address
		2	D
		3	EPTNum
		4	HDr #
		5	Hub #
		6	DLY
		7	DFR
18	Function Wake	1	Device Address
		2	Interface
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR
19	Latency Tolerance	1	Device Address
		2	BELT
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR
20	Bus Interval Adjust	1	Device Address
		2	BusIntAdj
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR
21	Host Role Req	1	Device Address
		2	RSP
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR

Frame number	Frame name	Field number	Field name
22	Sublink Speed	1	Device Address
		2	TPF
		3	LSE
		4	ST
		5	Lanes
		6	LP
		7	LSM
		8	HDr #
		9	Hub #
		10	DLY
		11	DFR
23	Ping	1	Route String
		2	Device Address
		3	D
		4	EPTNum
		5	HDr #
		6	Hub #
		7	DLY
		8	DFR
24	Ping Rsp	1	Device Address
		2	D
		3	EPTNum
		4	HDr #
		5	Hub #
		6	DLY
		7	DFR
25	Data Packet Header	1	Route String
		2	Device Address
		3	SeqNum
		4	EOB
		5	D
		6	EPTNum
		7	TT

Frame number	Frame name	Field number	Field name
		8	S
		9	Length
		10	StreamId
		11	SSI
		12	WPA
		13	DBI
		14	PP
		15	NBI
		16	HDr #
		17	Hub #
		18	DLY
		19	DFR
26	Data Packet Payload	1	Data
27	DPP Aborted	1	Data
28	ITP	1	Counter
		2	Delta
		3	Adj Ctrl
		4	Corr
		5	HDr #
		6	Hub #
		7	DLY
		8	DFR
29	Link Command	1	Sub-type
30	Skip	-	-
31	BRST	-	-
32	BDAT	-	-
33	BERC	-	-
34	BCNT	1	EC
35	Idle	-	-

Table 26-11: Overview of frame and field numbers for USB 3.1, Protocol Type > Super Speed Plus

Frame number	Frame name	Field number	Field name
1	TSEQ	-	-
2	TS1	1	Train

Frame number	Frame name	Field number	Field name
		2	Loop
		3	Scramble
		4	LL
		5	Retimer
3	TS1A	1	TS1A id
		2	TS1 id
4	TS1B	1	TS1B id
		2	TS1 id
5	TS2	1	Train
		2	Loop
		3	Scramble
		4	LL
		5	Retimer
6	Set Link Function	1	SLF
		2	HDr #
		3	Hub #
		4	DLY
		5	DFR
7	U2 Inactivity Timeout	1	U2 IT
		2	HDr #
		3	Hub #
		4	DLY
		5	DFR
8	Vendor Device Test	1	VDT
		2	Vendor Def
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR
9	Port Capability	1	Link Speed
		2	Num HP Buf
		3	Dir
		4	OTG

Frame number	Frame name	Field number	Field name
		5	Tiebreake
		6	HDr #
		7	Hub #
		8	DLY
		9	DFR
10	Port Config	1	Link Speed
		2	HDr #
		3	Hub #
		4	DLY
		5	DFR
11	Port Config Rsp	1	Response Code
		2	HDr #
		3	Hub #
		4	DLY
		5	DFR
12	Link Delay Meas	1	LDM Type
		2	LDMS
		3	Response Delay
		4	HDr #
		5	Hub #
		6	DLY
		7	DFR
13	ACK	1	Route String
		2	Device Address
		3	rty
		4	D
		5	EPTNum
		6	TT
		7	HE
		8	NumP
		9	SeqNum
		10	TPF
		11	StreamId

Frame number	Frame name	Field number	Field name
		12	SSI
		13	WPA
		14	DBI
		15	PP
		16	NBI
		17	HDr #
		18	Hub #
		19	DLY
		20	DFR
14	NRDY	1	Device Address
		2	D
		3	EPTNum
		4	StreamId
		5	HDr #
		6	Hub #
		7	DLY
		8	DFR
15	ERDY	1	Device Address
		2	D
		3	EPTNum
		4	NumP
		5	StreamId
		6	HDr #
		7	Hub #
		8	DLY
		9	DFR
16	Status	1	Route String
		2	Device Address
		3	D
		4	EPTNum
		5	PP
		6	HDr #
		7	Hub #

Frame number	Frame name	Field number	Field name
		8	DLY
		9	DFR
17	Stall	1	Device Address
		2	D
		3	EPTNum
		4	HDr #
		5	Hub #
		6	DLY
		7	DFR
18	Function Wake	1	Device Address
		2	Interface
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR
19	Latency Tolerance	1	Device Address
		2	BELT
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR
20	Bus Interval Adjust	1	Device Address
		2	BusIntAdj
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR
21	Host Role Req	1	Device Address
		2	RSP
		3	HDr #
		4	Hub #
		5	DLY
		6	DFR

Frame number	Frame name	Field number	Field name
22	Sublink Speed	1	Device Address
		2	TPF
		3	LSE
		4	ST
		5	Lanes
		6	LP
		7	LSM
		8	HDr #
		9	Hub #
		10	DLY
		11	DFR
23	Ping	1	Route String
		2	Device Address
		3	D
		4	EPTNum
		5	HDr #
		6	Hub #
		7	DLY
		8	DFR
24	Ping Rsp	1	Device Address
		2	D
		3	EPTNum
		4	HDr #
		5	Hub #
		6	DLY
		7	DFR
25	Data Packet Header	1	Route String
		2	Device Address
		3	SeqNum
		4	EOB
		5	D
		6	EPTNum
		7	TT

Frame number	Frame name	Field number	Field name
		8	S
		9	Length
		10	StreamId
		11	SSI
		12	WPA
		13	DBI
		14	PP
		15	NBI
		16	HDr #
		17	Hub #
		18	DLY
		19	DFR
26	Data Packet Header n-def	1	Route String
		2	Device Address
		3	SeqNum
		4	EOB
		5	D
		6	EPTNum
		7	TT
		8	S
		9	Length
		10	StreamId
		11	SSI
		12	WPA
		13	DBI
		14	PP
		15	NBI
		16	HDr #
		17	Hub #
		18	DLY
		19	DFR
		20	Length Rep
27	Data Packet Payload	1	Data

Frame number	Frame name	Field number	Field name
28	DPP Aborted	1	Data
29	ITP	1	Counter
		2	Delta
		3	Adj Ctrl
		4	Corr
		5	HDr #
		6	Hub #
		7	DLY
		8	DFR
30	Link Command	1	Sub-type
31	Skip	1	SKP
		2	SKPEND
		3	LFSR: 3
		4	P
		5	LFSR: 2
		6	LFSR: 1
32	Idle	-	-
33	SYNc	1	Symbol
34	SDS	1	Symbol
		2	Body

TRIGger<t>:USBThree:ERENable....2481
TRIGger<t>:USBThree:ERRor<n>:ENABle....2481
TRIGger<t>:USBThree:FRENable....2481
TRIGger<t>:USBThree:FRAMe<fr>:ENABle....2481
TRIGger<t>:USBThree:FIENable....2482
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:ENABle....2482
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:ENABle....2482
TRIGger<t>:USBThree:BIT....2482
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:BIT....2482
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:BIT....2482
TRIGger<t>:USBThree:DMAX....2483
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DMAX....2483
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMAX....2483
TRIGger<t>:USBThree:DMIN....2483
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DMIN....2483
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMIN....2483
TRIGger<t>:USBThree:DOPerator....2484
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DOPerator....2484

TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DOPerator....2484
TRIGger<t>:USBThree:IMAX....2484
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IMAX....2484
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMAX....2484
TRIGger<t>:USBThree:IMIN....2485
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IMIN....2485
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMIN....2485
TRIGger<t>:USBThree:IOPerator....2485
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IOPerator....2485
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IOPerator....2485

TRIGger<t>:USBThree:ERENable <ErrorName>,<Enabler>
TRIGger<t>:USBThree:ERRor<n>:ENABle <Enable>

Defines the error type to be triggered on. You can trigger on all error types in parallel.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<n> *
Specifies the error number.

Parameters:
<Enable> OFF | ON
*RST: ON

Example: Trigger on CRC and length errors:
`TRIGger:USBThree:ERRor1:ENABle ON`
Enables CRC Error.
`TRIGger:USBThree:ERENable "Length Error",ON`
Enables Length Error.

Manual operation: See "Error types: Item name, Enable" on page 931

TRIGger<t>:USBThree:FRENable <Frame>,<Enabler>
TRIGger<t>:USBThree:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the frame number.

Parameters:
<Enable> OFF | ON
*RST: OFF

Example: `TRIGger:USBThree:FRAMe1:ENABle ON`
Enables the checking condition for the TSEQ frame.
`TRIGger:USBThree:FRENable "TS1" ON`
Enables the checking condition for the TS1 frame.

Manual operation: See "Frame type" on page 931

TRIGger<t>:USBThree:FIENable <Frame>,<Field>,<Enabler>
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:ENABle <CondEnabler>
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<CondEnabler> OFF | ON

ON
Checking condition enabled

OFF
Checking condition disabled

*RST: OFF

Example: `TRIGger:USBThree:FRAMe1:FLD1:ENABle ON`
Enables the checking condition for the Symbol field of the TSEQ frame.
`TRIGger:USBThree:FRENable "TS1", "Loop" ON`
Enables the checking condition for the Loop field of the TS1 frame.

Manual operation: See "Field name / Condition Summary / Enable" on page 932

TRIGger<t>:USBThree:BIT <Frame>,<Field>,<Bit>
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:BIT <BitState>
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<BitState> ONE | ZERO | DC

ONE
1

ZERO
0

DC
"Don't care" (DC) = X

*RST: DC

Manual operation: See "Data BitState" on page 933

TRIGger<t>:USBThree:DMAX <Frame>,<Field>,<Data>
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DMAX <DataMax>
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if `TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Data_Max>

Manual operation: See "Data" on page 932

TRIGger<t>:USBThree:DMIN <Frame>,<Field>,<Data>
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DMIN <DataMin>
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Data_Min>

Manual operation: See "Data" on page 932

TRIGger<t>:USBThree:DOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DOPerator <DataOperator>
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one endpoint value to be set using `TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMIN`.

INRange | OORange
In range, out of range. These conditions require a range of endpoint values to be set using `TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMIN` and `TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMAX`.

*RST: EQUal

Manual operation: See "Data" on page 932

TRIGger<t>:USBThree:IMAX <Frame>,<Field>,<IndexMax>
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IMAX <IndexMax>
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if `TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IOPerator` is set to `INRange` or `RANGe`.

Suffix:

<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:

<Index_Max> Specifies the end value for the index range within the field. The index range, increment and *RST values depend on the field type.

Manual operation: See "Index" on page 933

TRIGger<t>:USBThree:IMIN <Frame>,<Field>,<IndexMin>
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IMIN <IndexMin>
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<t> 1..3

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Min> Specifies the index value or index start value within the field. The index range, increment and *RST values depend on the field type.

Manual operation: See "Index" on page 933

TRIGger<t>:USBThree:IOPerator <Frame>,<Field>,<IndexOperator>
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IOPerator <IndexOperator>
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe

EQUal
This condition requires one endpoint value to be set using `TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMIN` and `TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMAX`.

*RST: INRange

Manual operation: See "Index" on page 933

26.18.23.4 Decode results

In all `BUS<b>:USBThree:RESult:FRAMe<fr>` commands, the suffix <b> selects the serial bus and the suffix <fr> selects the frame number in the decode table.

BUS<b>:USBThree:RESult:FCOunt? 2486
BUS<b>:USBThree:RESult:FRAMe<fr>:INFO? 2486
BUS<b>:USBThree:RESult:FRAMe<fr>:TYPE? 2486
BUS<b>:USBThree:RESult:FRAMe<fr>:STATe? 2487
BUS<b>:USBThree:RESult:FRAMe<fr>:STARt? 2487
BUS<b>:USBThree:RESult:FRAMe<fr>:STOP? 2488
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:TYPE? 2488
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STATus? 2488
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STARt? 2489
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STOP? 2489
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:VAL? 2489
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:FVAL? 2490

BUS<b>:USBThree:RESult:FCOunt?

Returns the number of decoded frames in the selected serial bus.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:INFO?

Returns specific frame information details of the selected frame. This information is also shown in the "Info" column of the decode results table.

Suffix:
<b> 1..4

<fr> *
Specifies the frame number.

Return values:
<Info>

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:TYPE?

Returns the frame type for the selected serial bus and frame number.

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

Return values:
<FrameType> TSEQ | TS1 | TS1A | TS1B | TS2 | SLF | U2IT | VDT | PCAP | PCNF | PCNR | LDM | ACK | NRDY | ERDY | STATus | STALI | FWAKe | LTM | BIAM | HRR | SSPD | PING | PNGR | DPH | DPHN | DPP | DPPA | ITP | LC | SKIP | BRST | BDAT | BERC | BCNT | IDLE | CP0 | CP1 | CP2 | CP3 | CP5or6 | UHP | ULMP | UTP | UDVN | UDEF | ERRor | CTLB | DATB | SYNC | SDS
For a description of the frame types, see "Frame types" on page 919.
*RST: UDEF

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:STATe?

Returns the status of the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

Return values:
<State> OK | INComplete | UNCorrelated | UNKNown | AMB | CRC | LENGth | VOOR | SYMB
VOOR
Value out of range

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:STARt?

Returns the start time of the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
Default unit: s

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:STOP?

Returns the stop time of the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
Default unit: s

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:TYPE?

Returns the type of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<FieldType>

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STATus?

Returns the status of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:

<FieldState> OK | INComplete | UNCorrelated | UNKNown | AMB | CRC | LENGth | VOOR | SYMB

VOOR
Value out of range

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STARt?

Returns the start time of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:

<b> 1..4

<fr> *

<fl> *

Return values:

<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STOP?

Returns the stop time of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:

<b> 1..4

<fr> *

<fl> *

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:VAL?

Returns the value of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4
<fr> *
Selects the frame number.
<fl> *
Selects the field number.

Return values:
<FieldValue>

Usage: Query only

BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:FVAL?

Returns the formatted value of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4
<fr> *
Selects the frame number.
<fl> *
Selects the field number.

Return values:
<ValueFormatted>

Usage: Query only

26.18.23.5 Search settings

There are two commands for each parameter, that you can use for defining the SSIC search settings.

For example, to set the *Frame type =ACK > Field =Route String >Data* value you can use one of the following commands:

- `SEARch:TRIGger:USBThree:FRAMe13:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number. For an overview, see Table 26-10.
- `SEARch:TRIGger:USBThree:DMIN "ACK", "Route String", 01100`
  Defines the parameter by using the frame and field name.

SEARch:TRIGger:USBThree:ERENable....2491
SEARch:TRIGger:USBThree:ERRor<m>:ENABle....2491
SEARch:TRIGger:USBThree:FRENable....2492
SEARch:TRIGger:USBThree:FRAMe<fr>:ENABle....2492
SEARch:TRIGger:USBThree:FIENable....2492
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:ENABle....2492
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:ENABle....2492
SEARch:TRIGger:USBThree:BIT....2493

SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT....2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT....2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:BIT....2493
SEARch:TRIGger:USBThree:DMAX....2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMAX....2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMAX....2493
SEARch:TRIGger:USBThree:DMIN....2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMIN....2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMIN....2494
SEARch:TRIGger:USBThree:DOPerator....2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DOPerator....2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DOPerator....2494
SEARch:TRIGger:USBThree:IMAX....2495
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMAX....2495
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMAX....2495
SEARch:TRIGger:USBThree:IMIN....2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMIN....2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN....2496
SEARch:TRIGger:USBThree:IOPerator....2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IOPerator....2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IOPerator....2496

SEARch:TRIGger:USBThree:ERENable <SearchName>,<ErrorName>,<Enabler>
SEARch:TRIGger:USBThree:ERRor<m>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:USBThree:ERRor<m>:ENABle? <SearchName>

Enables the search for errors. You can search for all error types in parallel.

Suffix:
<m> *
Specifies the error.

Parameters:
<Enable> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> String with the name of the search.

Example: Searches for CRC and length errors:
```
SEARch:TRIGger:USBThree:ERRor1:ENABle ON
```
Enables searching for CRC Error.
```
SEARch:TRIGger:USBThree:ERENable "Length Error",ON
```
Enables searching for Length Error.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:FRENable <SearchName>,<Frame>,<Enabler>
SEARch:TRIGger:USBThree:FRAMe<fr>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:USBThree:FRAMe<fr>:ENABle? <SearchName>

Defines the frame type to be searched for.

Suffix:
<fr> *

Parameters:
<Enable> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Example: `SEARch:TRIGger:USBThree:FRAMe1:ENABle ON`
Enables searching for the TSEQ frame.
`SEARch:TRIGger:USBThree:FRENable "TS1" ON`
Enables searching for the TS1 frame.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:FIENable <SearchName>,<Frame>,<Field>,<Enabler>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:ENABle? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the checking condition for searching a specific field of the selected frame.

Suffix:
<fr> *
Specifies the frame.
<fl> *
Specifies the field number within the frame.

Parameters:
<CondEnabler> OFF | ON
ON
Checking condition enabled
OFF
Checking condition disabled
*RST: OFF

Parameters for setting and query:
<SearchName> String with the name of the search.

Example: `SEARch:TRIGger:USBThree:FRAMe1:FLD1:ENABle ON`
Enables searching for the Symbol field of the TSEQ frame.
`SEARch:TRIGger:USBThree:FRENable "TS1", "Loop" ON`
Enables searching for the Loop field of the TS1 frame.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:BIT <SearchName>,<Frame>,<Field>,<Bit>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT <SearchName>,<BitState>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT <SearchName>,<BitState>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:BIT <SearchName>,<BitState>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:BIT? <SearchName>

Sets the bit state of a field to be searched that only consists of one bit.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<BitState> ONE | ZERO | DC

ONE
1

ZERO
0

DC
"Don't care" (DC) = X

*RST: DC

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:DMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMAX
<SearchName>,<DataMax>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMAX? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMAX
<SearchName>,<Data_Max>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMAX? <SearchName>

Sets the end value of a data pattern range if `SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Data_Max> Specifies the name of the generic trigger setting frame, see `SEARch:RESult:USBThree:FRAMe<fr>:TYPE?` on page 2497.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:DMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMIN
<SearchName>,<DataMin>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMIN? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMIN
<SearchName>,<Data_Min>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMIN? <SearchName>

Specifies the data pattern to be searched, or sets the start value of a data pattern range to be searched.

Suffix:
<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Data_Min> Specifies the name of the generic trigger setting frame, see `SEARch:RESult:USBThree:FRAMe<fr>:TYPE?` on page 2497.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:DOPerator
<SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DOPerator
<SearchName>,<DataOperator>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DOPerator? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DOPerator
<SearchName>,<Data_Operator>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DOPerator? <SearchName>

Sets the operator to set a specific data pattern to be searched in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one endpoint value to be set using `SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | OORange
In range, out of range. These conditions require a range of endpoint values to be set using `SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN` and `SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMAX` on page 2495.

*RST: EQUal

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:IMAX <SearchName>,<Frame>,<Field>,<IndexMax>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMAX
<SearchName>,<IndexMax>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMAX? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMAX
<SearchName>,<Index_Max>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMAX? <SearchName>

Sets the end value of an index range if `SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IOPerator` is set to `INRange` or `RANGe`.

Suffix:
<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Max> Specifies the end value for the index range within the field. The index range, increment and *RST values depend on the field type.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:IMIN <SearchName>,<Frame>,<Field>,<IndexMin>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMIN
<SearchName>,<IndexMin>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMIN? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN
<SearchName>,<Index_Min>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN? <SearchName>

Specifies the index at which the data is to be searched, or sets the start value of an index range in which the data is to be searched.

Suffix:
<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Min> Specifies the index value or the start value of an index range within the field.
The index range, increment and *RST values depend on the field type.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 936

SEARch:TRIGger:USBThree:IOPerator
<SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IOPerator
<SearchName>,<IndexOperator>
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IOPerator? <SearchName>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IOPerator
<SearchName>,<Index_Operator>
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IOPerator? <SearchName>

Sets the operator for the index for searching in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe

EQUal
This condition requires one endpoint value to be set using `SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN` and `SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search criteria" on page 936

26.18.23.6 Search results

In all `SEARch:RESult:USBThree:FRAMe<m>` commands, the suffix <m> selects the frame number in the list of search results.

SEARch:RESult:USBThree:FRAMe<fr>:TYPE? 2497
SEARch:RESult:USBThree:FRAMe<fr>:INFO? 2498
SEARch:RESult:USBThree:FCOunt? 2498
SEARch:RESult:USBThree:FRAMe<fr>:STATe? 2498
SEARch:RESult:USBThree:FRAMe<fr>:STARt? 2498
SEARch:RESult:USBThree:FRAMe<fr>:STOP? 2499
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:TYPE? 2499
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STATus? 2499
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STARt? 2500
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STOP? 2500
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:VAL? 2501
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:FVAL? 2501

SEARch:RESult:USBThree:FRAMe<fr>:TYPE? <SearchName>

Returns the frame type for the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> TSEQ | TS1T | TS2T | SLF | U2IT | VDT | PCAP | PCNF | PCNR | LDM | ACK | NRDY | ERDY | STATus | STALl | FWAKe | LTM | BIAM | HRR | SSPD | PING | PNGR | DPH | DPP | DPPA | ITP | LC | SKIP | BRST | BDAT | BERC | BCNT | IDLE | UHP | ULMP | UTP | UDVN | UDEF | ERRor

For a description of the frame types, see "Frame types" on page 919.

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:INFO? <SearchName>

Returns specific frame information details of the selected frame in the search result. This information is also shown in the "Info" column of the decode results table.

Suffix:
<fr> *
Specifies the frame number.

Query parameters:
<SearchName>

Return values:
<Info>

Usage: Query only

SEARch:RESult:USBThree:FCOunt? <SearchName>

Returns the number of decoded frames in the search result.

Query parameters:
<SearchName>

Return values:
<FrameCount>

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:STATe? <SearchName>

Returns the status of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | INComplete | UNCorrelated | UNKNown | AMB | CRC | LENGth | VOOR | SYMB

VOOR
Value out of range

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
Default unit: s

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:STOP? <SearchName>

Returns the stop time of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
Default unit: s

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:TYPE? <SearchName>

Returns the field name of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<FieldType>

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STATus? <SearchName>

Returns the field status of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<FieldState> OK | INComplete | UNCorrelated | UNKNown | AMB | CRC | LENGth | VOOR | SYMB

VOOR
Value out of range

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STARt? <SearchName>

Returns the start time of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STOP? <SearchName>

Returns the stop time of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:VAL? <SearchName>

Returns the value of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<ByteValue>

Usage: Query only

SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:FVAL? <SearchName>

Returns the formatted value of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<ValueFormatted>

Usage: Query only

26.18.24 USBPD (option R&S RTP-K63)

- Configuration....2502
- Trigger....2504
- Decode results....2511
- Search settings....2516
- Search results....2522

26.18.24.1 Configuration

In all `BUS<b>:USBPd` commands, the suffix <b> selects the serial bus.

BUS<b>:USBPd:DETail....2502
BUS<b>:USBPd:HYSTeresis....2502
BUS<b>:USBPd:SOURce....2502
BUS<b>:USBPd:THReshold....2503
BUS<b>:USBPd:THRBottom....2503
BUS<b>:USBPd:THRMid....2503
BUS<b>:USBPd:THRTop....2504

BUS<b>:USBPd:DETail <Detail>

If enabled, the data words are broken down into subframes. If not enabled the data words are displayed as 32-bit data words.

Suffix:
<b> 1..4

Parameters:
<Detail> OFF | ON
*RST: OFF

Manual operation: See "Show decode detail" on page 942

BUS<b>:USBPd:HYSTeresis <Hysteresis>

Sets a value for the hysteresis of the data.

Suffix:
<b> 1..4

Parameters:
<Hysteresis> Range: -10 to 10
Increment: 0.01
*RST: 0.05
Default unit: V

Manual operation: See "Hysteresis" on page 941

BUS<b>:USBPd:SOURce <SourceData>

Selects the source for the data signal in the USBPD protocol.

For triggering on a serial bus, analog input channels are required.

Suffix:
<b> 1..4

Parameters:

<SourceData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Data" on page 941

BUS<b>:USBPd:THReshold <Threshold>

Sets the threshold value of the data.

Suffix:

<b> 1..4

Parameters:

<Threshold> Range: -10 to 10
Increment: 0.01
*RST: 0.6
Default unit: V

Manual operation: See "vData" on page 941

BUS<b>:USBPd:THRBottom <ThresholdBot>

Sets the bottom threshold (for the low current) for the current advertisment mode.

Suffix:

<b> 1..4

Parameters:

<ThresholdBot> Range: -10 to 10
Increment: 0.01
*RST: 0.2
Default unit: V

Manual operation: See "Current advertisment thresholds" on page 942

BUS<b>:USBPd:THRMid <ThresholdMid>

Sets the middle threshold (at default USB Type-C currnet) for the current advertisment mode.

Suffix:

<b> 1..4

Parameters:

<ThresholdMid> Range: -10 to 10
Increment: 0.01
*RST: 0.66
Default unit: V

Manual operation: See "Current advertisment thresholds" on page 942

BUS<b>:USBPd:THRTop <ThresholdTop>

Sets the top threshold (at USB Type-C currnet of 1.5 A) for the current advertisment mode.

Suffix:
<b> 1..4

Parameters:
<ThresholdTop> Range: -10 to 10
Increment: 0.01
*RST: 1.23
Default unit: V

Manual operation: See "Current advertisment thresholds" on page 942

26.18.24.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

There are two commands for each parameter, that you can use for defining the USBPD settings.

For example, to set the *Frame type =Control Frame > Field =MsgID >Data* value you can use one of the following commands:

- `TRIGger:USBPD:FRAMe3:FLD3:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number. For an overview, see Overview of frame and field numbers for USBPD.
- `TRIGger:USBPD:DMIN "Control", "MsgID", 01100`
  Defines the parameter by using the frame and field name.

Table 26-12 gives an overview of the available frame and field numbers. Those numbers follow the GUI numbers.

Table 26-12: Overview of frame and field numbers for USBPD

Frame number	Frame name	Field number	Field name
1	Test Frame	-	-
2	Reset	-	-
3	Control frame	1	Extended
		2	NumDataObjs

Frame number	Frame name	Field number	Field name
		3	MsgID
		4	PwrRole/Plug
		5	Rev
		6	DataRole
		7	MsgType
4	Data Frame	1	Extended
		2	NumDataObjs
		3	MsgID
		4	PwrRole/Plug
		5	Rev
		6	DataRole
		7	MsgType
		8	DATA
5	Extended	1	Extended
		2	NumDataObjs
		3	MsgID
		4	PwrRole/Plug
		5	Rev
		6	DataRole
		7	MsgType
		8	Chunked
		9	Chunk Num
		10	Req Chunk
		11	Data Size
		12	DATA

TRIGger<t>:USBPd:ERENable....2506
TRIGger<t>:USBPd:ERRor<n>:ENABle....2506
TRIGger<t>:USBPd:FRENable....2506
TRIGger<t>:USBPd:FRAMe<fr>:ENABle....2506
TRIGger<t>:USBPd:FIENable....2507
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:ENABle....2507
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:ENABle....2507
TRIGger<t>:USBPd:BIT....2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:BIT....2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:BIT....2508

TRIGger<t>:USBPd:DMAX 2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DMAX 2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMAX 2508
TRIGger<t>:USBPd:DMIN 2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DMIN 2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMIN 2508
TRIGger<t>:USBPd:DOPerator 2509
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DOPerator 2509
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DOPerator 2509
TRIGger<t>:USBPd:IMAX 2509
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IMAX 2509
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMAX 2509
TRIGger<t>:USBPd:IMIN 2510
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IMIN 2510
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMIN 2510
TRIGger<t>:USBPd:IOPerator 2510
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IOPerator 2510
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IOPerator 2510

TRIGger<t>:USBPd:ERENable <ErrorName>,<Enabler>
TRIGger<t>:USBPd:ERRor<n>:ENABle <Enable>

Enables or disables the checking condition for a specific error in the selected field of the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<n> *
Specifies the error number.

Parameters:
<Enable> OFF | ON
*RST: ON

Example: `TRIGger:USBPd:ERRor1:ENABle ON`
Enables CRC Error.
`TRIGger:USBPd:ERENable "Length Error",ON`
Enables Length Error.

Manual operation: See "Error > Enable /Item" on page 945

TRIGger<t>:USBPd:FRENable <Frame>,<Enabler>
TRIGger<t>:USBPd:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the frame number.

Parameters:
<Enable> OFF | ON
*RST: OFF

Example: `TRIGger:USBPd:FRAMe1:ENABle ON`
Enables searching for for the Test frame.
`TRIGger:USBPd:FRENable "Control Frame" ON`
Enables searching for the Control frame.

Manual operation: See "Frame Type" on page 944

TRIGger<t>:USBPd:FIENable <Frame>,<Field>,<Enabler>
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:ENABle <CondEnabler>
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for a specific data pattern in the selected field of the selected frame.

Suffix:
<t> 1..3
Only 1 = A-trigger, 2 | 3 = not available. Can be omitted.

<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<CondEnabler> OFF | ON

ON
Checking condition enabled

OFF
Checking condition disabled

*RST: OFF

Example: `TRIGger:USBPd:FRAMe3:FLD1:ENABle ON`
Enables the checking condition for the Extended field of the Control frame.
`TRIGger:USBPd:FRENable "Data Frame", "Data Role" ON`
Enables the checking condition for the Data Role field of the Data frame.

Manual operation: See "Enable/ Field name/ Condition" on page 945

TRIGger<t>:USBPd:BIT <Frame>,<Field>,<Bit>
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:BIT <BitState>
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<t> 1..3

<fr> *

<fl> *
Specifies the field number within the frame.

Parameters:
<BitState> ONE | ZERO | DC

ONE
1

ZERO
0

DC
"Don't care" (DC) = X

*RST: DC

Manual operation: See "Data BitState" on page 946

TRIGger<t>:USBPd:DMAX <Frame>,<Field>,<Data>
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DMAX <DataMax>
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if `TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMAX` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Data_Max> Specifies the name of the generic trigger setting frame, see `BUS<b>:USBPd:RESult:FRAMe<fr>:TYPE?` on page 2515.

Manual operation: See "Data" on page 946

TRIGger<t>:USBPd:DMIN <Frame>,<Field>,<Data>
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DMIN <DataMin>
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<t> 1..3

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Data_Min>

Manual operation: See "Data" on page 946

TRIGger<t>:USBPd:DOPerator <Frame>,<Field>,<Operator>
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DOPerator <DataOperator>
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<t> 1..3

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one end-point value to be set using `TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMIN`.

INRange | OORange
In range, out of range. These conditions require a range of end-point values to be set using `TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMIN` and `TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMAX`.

*RST: EQUal

Manual operation: See "Data" on page 946

TRIGger<t>:USBPd:IMAX <Frame>,<Field>,<IndexMax>
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IMAX <IndexMax>
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if `TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IOPerator` on page 2510 is set to `INRange` or `RANGe`.

Suffix:
<t> 1..3

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Max> Specifies the end value for the index range within the field. The index range, increment and *RST values depend on the field type.

Manual operation: See "Index" on page 946

TRIGger<t>:USBPd:IMIN <Frame>,<Field>,<IndexMin>
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IMIN <IndexMin>
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<t> 1..3

<fr> *
Specifies the field number within the frame.

<fl> *

Parameters:
<Index_Min> Specifies the index value or index start value within the field. The index range, increment and *RST values depend on the field type.

Manual operation: See "Index" on page 946

TRIGger<t>:USBPd:IOPerator <Frame>,<Field>,<IndexOperator>
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IOPerator <IndexOperator>
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<t> 1..3

<fr> *

<fl> *

Parameters:
<Index_Operator> EQUal | INRange | RANGe

EQUal
This condition requires one endpoint value to be set using `TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMIN` and `TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMAX`.

*RST: INRange

Manual operation: See "Index" on page 946

26.18.24.3 Decode results

In all `BUS<b>:USBPd:RESult:FRAMe<fr>` commands, the suffix <b> selects the serial bus and the suffix <fr> selects the frame number in the decode table.

BUS<b>:USBPd:RESult:FCOunt?....2511
BUS<b>:USBPd:RESult:FRAMe<fr>:DATA?....2511
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:FVAL?....2512
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STATus?....2512
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STARt?....2512
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STOP?....2513
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:TYPE?....2513
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:VAL?....2513
BUS<b>:USBPd:RESult:FRAMe<fr>:INFO?....2514
BUS<b>:USBPd:RESult:FRAMe<fr>:STARt?....2514
BUS<b>:USBPd:RESult:FRAMe<fr>:STATe?....2514
BUS<b>:USBPd:RESult:FRAMe<fr>:STOP?....2515
BUS<b>:USBPd:RESult:FRAMe<fr>:TYPE?....2515

BUS<b>:USBPd:RESult:FCOunt?

Returns the number of decoded frames in the selected serial bus.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:DATA?

Returns the data from the frame with the selected frame number (for the selected serial bus). This is the hex value of the first four bytes of data fields, prefixed by the total number of data fields (in square brackets), e.g. `[5]FF008041`.

Suffix:
<b> 1..4

<fr> *

Return values:
<Data>

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:FVAL?

Returns the formatted value of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<FrameByteValue>

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STATus?

Returns the status of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<FieldState> OK | UNKNown | INComplete | PREamble | SOP | CRC | LENGth | FBFB

SOP
Start of packet warning

CRC
Cyclic redundancy check error

FBFB
4b5b error

*RST: OK

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STARt?

Returns the start time of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STOP?

Returns the stop time of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *

<fl> *

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:TYPE?

Returns the type of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<FieldType>

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:VAL?

Returns the value of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<FrameByteValue>

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:INFO?

Returns information on the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *

Return values:
<Info>

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:STARt?

Returns the start time of the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:STATe?

Returns the status of the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *

Return values:

<State> OK | UNKNown | INComplete | PREamble | SOP | CRC | LENGth | FBFB

SOP
Start of packet warning

CRC
Cyclic redundancy check error

FBFB
4b5b error

*RST: OK

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:STOP?

Returns the stop time of the frame with the selected frame number (for the selected serial bus).

Suffix:

<b> 1..4

<fr> *

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:USBPd:RESult:FRAMe<fr>:TYPE?

Returns the frame type for the selected serial bus and frame number.

Suffix:

<b> 1..4

<fr> *

Return values:

<FrameType> STARt | RESet | CTRL | DATA | BIST | RQST | SINK | SRC | VEND | BATT | ALRT | XMSG | XSRC | XSTA | XGBC | XGBS | XBAC | XGMI | XMFI | XSRQ | XSRS | XFRQ | XFRS | TEST | LOWP | UNKNown

For a description of the frame types, see "Frame packet types" on page 939.

*RST: UNKNown

Usage: Query only

26.18.24.4 Search settings

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

There are two commands for each parameter, that you can use for defining the USBPD settings.

For example, to set the *Frame type =Control Frame > Field =MsgID >Data* value you can use one of the following commands:

- `SEARch:TRIGger:USBPD:FRAMe3:FLD3:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number. For an overview, see Table 26-12.
- `SEARch:TRIGger:USBPD:DMIN "Control", "MsgID", 01100`
  Defines the parameter by using the frame and field name.

SEARch:TRIGger:USBPd:ERENable ... 2517
SEARch:TRIGger:USBPd:ERRor<m>:ENABle ... 2517
SEARch:TRIGger:USBPd:FRENable ... 2517
SEARch:TRIGger:USBPd:FRAMe<fr>:ENABle ... 2517
SEARch:TRIGger:USBPd:FIENable ... 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:ENABle ... 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:ENABle ... 2518
SEARch:TRIGger:USBPd:BIT ... 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:BIT ... 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:BIT ... 2518
SEARch:TRIGger:USBPd:DMAX ... 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMAX ... 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMAX ... 2519
SEARch:TRIGger:USBPd:DMIN ... 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMIN ... 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMIN ... 2519
SEARch:TRIGger:USBPd:DOPerator ... 2520
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DOPerator ... 2520
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DOPerator ... 2520
SEARch:TRIGger:USBPd:IMAX ... 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMAX ... 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMAX ... 2521
SEARch:TRIGger:USBPd:IMIN ... 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMIN ... 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMIN ... 2521
SEARch:TRIGger:USBPd:IOPerator ... 2522
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IOPerator ... 2522
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IOPerator ... 2522

SEARch:TRIGger:USBPd:ERENable <SearchName>,<ErrorName>,<Enabler>
SEARch:TRIGger:USBPd:ERRor<m>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:USBPd:ERRor<m>:ENABle? <SearchName>

Enables or disables the checking condition for searching a specific error in the selected field of the selected frame.

Suffix:
<m> *
Specifies the error number.

Parameters:
<Enable> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Example: `SEARch:TRIGger:USBPd:ERRor1:ENABle ON`
Enables searching for CRC Error.
`SEARch:TRIGger:USBPd:ERENable "Length Error",ON`
Enables searching for Length Error.

Manual operation: See "Search" on page 949

SEARch:TRIGger:USBPd:FRENable <SearchName>,<Frame>,<Enabler>
SEARch:TRIGger:USBPd:FRAMe<fr>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:USBPd:FRAMe<fr>:ENABle? <SearchName>
Suffix:
<fr> *
Specifies the frame number.

Parameters:
<Enable> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Example: `SEARch:TRIGger:USBPd:FRAMe1:ENABle ON`
Enables the checking condition for the Test frame.
`SEARch:TRIGger:USBPd:FRENable "Control Frame" ON`
Enables the checking condition for the Control frame.

SEARch:TRIGger:USBPd:FIENable <SearchName>,<Frame>,<Field>,<Enabler>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:ENABle? <SearchName>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the checking condition for searching a specific data pattern in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<CondEnabler> OFF | ON

ON
Checking condition enabled

OFF
Checking condition disabled

*RST: OFF

Parameters for setting and query:
<SearchName> String with the name of the search.

Example: `SEARch:TRIGger:USBPd:FRAMe3:FLD1:ENABle ON`
Enables searching for the Extended field of the Control frame.
`SEARch:TRIGger:USBPd:FRENable "Data Frame", "Data Role" ON`
Enables searching for the Data Role field of the Data frame.

Manual operation: See "Frame" on page 862

SEARch:TRIGger:USBPd:BIT <SearchName>,<Frame>,<Field>,<Bit>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:BIT <SearchName>,<BitState>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:BIT? <SearchName>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:BIT <SearchName>,<BitState>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:BIT? <SearchName>

Sets the bit state of a field to be searched that only consists of one bit.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<BitState> ONE | ZERO | DC

ONE
1
ZERO
0
DC
"Don't care" = X
*RST: DC

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search" on page 949

SEARch:TRIGger:USBPd:DMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMAX <SearchName>,<DataMax>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMAX? <SearchName>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMAX? <SearchName>

Sets the end value of a data pattern range if `SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Max> Specifies the name of the generic trigger setting frame, see `SEARch:RESult:USBPd:FRAMe<fr>:TYPE?` on page 2527.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search" on page 949

SEARch:TRIGger:USBPd:DMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMIN <SearchName>,<DataMin>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMIN? <SearchName>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMIN? <SearchName>

Specifies the data pattern to be searched, or sets the start value of a data pattern range to be searched.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Min> Specifies the name of the generic trigger setting frame, see SEARch:RESult:USBPd:FRAMe<fr>:TYPE? on page 2527.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search" on page 949

SEARch:TRIGger:USBPd:DOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DOPerator
<SearchName>,<DataOperator>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DOPerator? <SearchName>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DOPerator
<SearchName>,<Data_Operator>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DOPerator? <SearchName>

Sets the operator to set a specific data pattern to be searched in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one endpoint value to be set using SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMIN.

INRange | OORange
In range, out of range. These conditions require a range of endpoint values to be set using SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMIN and SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMAX.

*RST: EQUal

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search" on page 949

SEARch:TRIGger:USBPd:IMAX <SearchName>,<Frame>,<Field>,<IndexMax>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMAX <SearchName>,<IndexMax>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMAX? <SearchName>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMAX <SearchName>,<Index_Max>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMAX? <SearchName>

Sets the end value of an index range if `SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IOPerator` is set to `INRange` or `RANGe`.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<Index_Max> Specifies the end value for the index range within the field.
The index range, increment and *RST values depend on the field type.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search" on page 949

SEARch:TRIGger:USBPd:IMIN <SearchName>,<Frame>,<Field>,<IndexMin>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMIN <SearchName>,<IndexMin>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMIN? <SearchName>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMIN <SearchName>,<Index_Min>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMIN? <SearchName>

Specifies the index at which the data is to be searched, or sets the start value of an index range in which the data is to be searched.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<Index_Min> Specifies the index value or the start value of an index range within the field.
The index range, increment and *RST values depend on the field type.

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search" on page 949

SEARch:TRIGger:USBPd:IOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IOPerator
<SearchName>,<IndexOperator>
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IOPerator? <SearchName>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IOPerator
<SearchName>,<Index_Operator>
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IOPerator? <SearchName>

Sets the operator for the index for searching in the selected field of the selected frame.

Suffix:
<fr> *
Specifies the frame.

<fl> *
Specifies the field number within the frame.

Parameters:
<Index_Operator> EQUal | INRange | RANGe

EQUal
This condition requires one endpoint value to be set using `SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMIN` and `SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName> String with the name of the search.

Manual operation: See "Search" on page 949

26.18.24.5 Search results

In all `SEARch:RESult:USBPd:FRAMe<m>` commands, the suffix <m> selects the frame number in the list of search results.

SEARch:RESult:USBPd:FCOunt? 2523
SEARch:RESult:USBPd:FRAMe<fr>:DATA? 2523
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:FVAL? 2523
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STATus? 2523
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STARt? 2524
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STOP? 2524
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:TYPE? 2525
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:VAL? 2525
SEARch:RESult:USBPd:FRAMe<fr>:INFO? 2525
SEARch:RESult:USBPd:FRAMe<fr>:STARt? 2526
SEARch:RESult:USBPd:FRAMe<fr>:STATe? 2526
SEARch:RESult:USBPd:FRAMe<fr>:STOP? 2527
SEARch:RESult:USBPd:FRAMe<fr>:TYPE? 2527

SEARch:RESult:USBPd:FCOunt? <SearchName>

Returns the number of decoded frames in the search result.

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:DATA? <SearchName>

Searches for data from the frame with the selected frame number (for the selected serial bus). This is the hex value of the first four bytes of data fields, prefixed by the total number of data fields (in square brackets), e.g. `[5]FF008041`.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:FVAL? <SearchName>

Returns the formatted value of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<ValueFormatted>

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STATus? <SearchName>

Returns the field status of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<FieldState> OK | UNKNown | INComplete | PREamble | SOP | CRC | LENGth | FBFB

SOP
Start of packet warning

CRC
Cyclic redundancy check error

FBFB
4b5b error

*RST: OK

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STARt? <SearchName>

Returns the start time of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STOP? <SearchName>

Returns the stop time of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:TYPE? <SearchName>

Returns the field name of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<FieldType>

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:VAL? <SearchName>

Returns the value of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<ByteValue>

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:INFO? <SearchName>

Returns specific frame information details of the selected frame in the search result. This information is also shown in the "Info" column of the decode results table.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Info>

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
Default unit: s

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:STATe? <SearchName>

Returns the status of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | UNKNown | INComplete | PREamble | SOP | CRC | LENGth | FBFB

SOP
Start of packet warning

CRC
Cyclic redundancy check error

FBFB
4b5b error

*RST: OK

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:STOP? <SearchName>

Returns the stop time of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
Default unit: s

Usage: Query only

SEARch:RESult:USBPd:FRAMe<fr>:TYPE? <SearchName>

Returns the frame type for the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> STARt | RESet | CTRL | DATA | BIST | RQST | SINK | SRC | VEND | BATT | ALRT | XMSG | XSRC | XSTA | XGBC | XGBS | XBAC | XGMI | XMFI | XSRQ | XSRS | XFRQ | XFRS | TEST | LOWP | UNKNown

For a description of the frame types, see "Frame packet types" on page 939.

*RST: UNKNown

Usage: Query only

26.18.25 Space wire (option R&S RTP-K65)

- Configuration....2528
- Trigger....2531
- Decode results....2535
- Search settings....2540
- Search results....2543

26.18.25.1 Configuration

BUS<b>:SWIRe:BPOSition....2528
BUS<b>:SWIRe:DATA:HYSTeresis....2528
BUS<b>:SWIRe:DATA:SOURce....2528
BUS<b>:SWIRe:DATA:THReshold....2529
BUS<b>:SWIRe:MINGap....2529
BUS<b>:SWIRe:MGAP....2529
BUS<b>:SWIRe:STRBe:HYSTeresis....2529
BUS<b>:SWIRe:STRBe:SOURce....2530
BUS<b>:SWIRe:STRBe:THReshold....2530
BUS<b>:SWIRe:SYSLect....2530
BUS<b>:SWIRe:COUPling....2530
BUS<b>:SWIRe:PRESet....2531

BUS<b>:SWIRe:BPOSition <SyncBitPos>

Sets the bit position, the align position for the manual synchronisation mode. This can be useful when parity errors exist in the signal, and parity check is the main indicator for the decoder to do packet alignment.

Suffix:
<b> 1..4

Parameters:
<SyncBitPos> Range: 0 to 10
Increment: 1
*RST: 0

Manual operation: See "Bit Position" on page 954

BUS<b>:SWIRe:DATA:HYSTeresis <HysteresisData>

Sets a value for the hysteresis of the data signal.

Suffix:
<b> 1..4

Parameters:
<HysteresisData> Range: 0 to 0.8
Increment: 0.01
*RST: 0.2
Default unit: V

Manual operation: See "Hysteresis" on page 954

BUS<b>:SWIRe:DATA:SOURce <SourceData>

Selects the source of the data signal.

Suffix:
<b> 1..4

Parameters:

<SourceData> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

*RST: C1W1

Manual operation: See "Data" on page 954

BUS<b>:SWIRe:DATA:THReshold <ThresholdData>

Sets the threshold value for the digitization of the data signal.

Suffix:

<b> 1..4

Parameters:

<ThresholdData>
Range: -10 to 10
Increment: 0.1
*RST: 1.25
Default unit: V

Manual operation: See "Threshold setup" on page 954

BUS<b>:SWIRe:MINGap <MinGapTime>
BUS<b>:SWIRe:MGAP <MinGapTime>

Sets the minimum duration of a gap. Any inactivity greater than this time will be interpreted as a gap and lead to a resynchronization to the signal.

Suffix:

<b> 1..4

Parameters:

<MinGapTime>
Range: 1E-9 to 10E-6
Increment: 100E-9
*RST: 200E-9
Default unit: s

Manual operation: See "Min Gap" on page 955

BUS<b>:SWIRe:STRBe:HYSTeresis <HystStrobe>

Sets a value for the hysteresis of the strobe signal.

Suffix:

<b> 1..4

Parameters:

<HystStrobe>
Range: 0 to 0.8
Increment: 0.01
*RST: 0.2
Default unit: V

Manual operation: See "Hysteresis" on page 954

BUS<b>:SWIRe:STRBe:SOURce <SourceStrobe>

Selects the source of the strobe signal.

Suffix:
<b> 1..4

Parameters:
<SourceStrobe> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

*RST: C2W1

Manual operation: See "Strobe" on page 954

BUS<b>:SWIRe:STRBe:THReshold <ThresStrobe>

Sets the threshold value for the digitization of the strobe signal.

Suffix:
<b> 1..4

Parameters:
<ThresStrobe> Range: -10 to 10
Increment: 0.1
*RST: 1.25
Default unit: V

Manual operation: See "Threshold setup" on page 954

BUS<b>:SWIRe:SYSLect <SyncSelector>

Selects the mode for the synchronisation settings, i.e i.e. packet align.

Suffix:
<b> 1..4

Parameters:
<SyncSelector> AUTO | MANual

*RST: AUTO

Manual operation: See "Sync Settings" on page 955

BUS<b>:SWIRe:COUPling <ThresCpl>

Enables coupling, i.e. the same threshold and hysteresis value is used for the strob and the data signal.

Suffix:
<b> 1..4

Parameters:
<ThresCpl> OFF | ON
*RST: ON

Manual operation: See "Threshold setup" on page 954

BUS<b>:SWIRe:PRESet <ThresPreset>

Prests the threshold and hysteresis value of the strobe and data signal.

Suffix:
<b> 1..4

Parameters:
<ThresPreset> V25 | V165 | V125 | V09 | V12 | V0 | MANual
V25: 2.5 V (CMOS 5.0 V)
V165: 1.65 V (CMOS 3.5 V)
V125: 1.25 V (CMOS 1.5 V)
V09: 2.5 V (CMOS 1.8V)
V12: 1.2 V (LVDS single ended)
V0: 0 V (LVDS differential)
MANual: user-defined value
*RST: V12

Manual operation: See "Threshold setup" on page 954

26.18.25.2 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:SWIRe:CTYPe....2532
TRIGger<t>:SWIRe:DATA:CONDition....2532
TRIGger<t>:SWIRe:DATA:MAX....2532
TRIGger<t>:SWIRe:DATA:MIN....2533
TRIGger<t>:SWIRe:ERRor:LENGth....2533
TRIGger<t>:SWIRe:ERRor:PARity....2533
TRIGger<t>:SWIRe:TIME:CONDition....2533
TRIGger<t>:SWIRe:TIME:MAX....2534
TRIGger<t>:SWIRe:TIME:MIN....2534
TRIGger<t>:SWIRe:TYPE....2534

TRIGger<t>:SWIRe:CTYPe <ControlType>

Triggers on a specific control type character.

Suffix:
<t> 1..3

Parameters:
<ControlType> ANY | FCT | EOP | EEP | BADX

FCT
Flow control token

EOP
Normal end of packet

EEP
Error end of packet

BADX
Illegal escape code

*RST: ANY

Manual operation: See "Trigger control type" on page 957

TRIGger<t>:SWIRe:DATA:CONDition <Data_Operator>

Set the condition for the data value. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:SWIRe:DATA:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:SWIRe:DATA:MIN` and `TRIGger<t>:SWIRe:DATA:MAX`.

*RST: EQUal

Manual operation: See "Data (Data pattern)" on page 958

TRIGger<t>:SWIRe:DATA:MAX <Data_PattMax>

Sets the the end value of a data for the data pattern range if `TRIGger<t>:SWIRe:DATA:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Data_PattMax>

Manual operation: See "Data (Data pattern)" on page 958

TRIGger<t>:SWIRe:DATA:MIN <Data_PattMin>

Specifies a data for the data pattern, or sets the the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Data_PattMin>

Manual operation: See "Data (Data pattern)" on page 958

TRIGger<t>:SWIRe:ERRor:LENGth <Error_Length>

Triggers on a length error, which occurs when a frame is missing bits.

Suffix:
<t> 1..3

Parameters:
<Error_Length> OFF | ON
*RST: ON

Manual operation: See "Length error" on page 958

TRIGger<t>:SWIRe:ERRor:PARity <Error_Parity>

Enables triggering on a parity error (even parity).

Suffix:
<t> 1..3

Parameters:
<Error_Parity> OFF | ON
*RST: ON

Manual operation: See "Parity error" on page 958

TRIGger<t>:SWIRe:TIME:CONDition <Time_Operator>

Set the condition for the data value for the time code. You can define an exact value or a value range.

Suffix:
<t> 1..3

Parameters:
<Time_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `TRIGger<t>:SWIRe:TIME:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `TRIGger<t>:SWIRe:TIME:MIN` and `TRIGger<t>:SWIRe:TIME:MAX`.

*RST: EQUal

Manual operation: See "Data (Time code)" on page 958

TRIGger<t>:SWIRe:TIME:MAX <Time_PattMax>

Sets the the end value of a data value for the time code range if `TRIGger<t>:SWIRe:TIME:CONDition` is set to `INRange` or `OORange`.

Suffix:
<t> 1..3

Parameters:
<Time_PattMax>

Manual operation: See "Data (Time code)" on page 958

TRIGger<t>:SWIRe:TIME:MIN <Time_PattMin>

Specifies a pattern for the data value for the time code, or sets the the start value of a pattern range.

Suffix:
<t> 1..3

Parameters:
<Time_PattMin>

Manual operation: See "Data (Time code)" on page 958

TRIGger<t>:SWIRe:TYPE <Type>

Sets the trigger type for the SpaceWire analysis.

Suffix:
<t> 1..3

Parameters:
<Type> CTRL | DATA | NULL | TIME | ERRor
*RST: CTRL

Manual operation: See "Type" on page 957

26.18.25.3 Decode results

BUS<b>:SWIRe:RESults:FCOunt? 2535
BUS<b>:SWIRe:RESults:FRAMe<fr>:DATA? 2535
BUS<b>:SWIRe:RESults:FRAMe<fr>:STARt? 2536
BUS<b>:SWIRe:RESults:FRAMe<fr>:STATe? 2536
BUS<b>:SWIRe:RESults:FRAMe<fr>:STOP? 2536
BUS<b>:SWIRe:RESults:FRAMe<fr>:TYPE? 2537
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:FVAL? 2537
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STARt? 2538
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STATus? 2538
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STOP? 2539
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:TYPE? 2539
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:VAL? 2539

BUS<b>:SWIRe:RESults:FCOunt?

Returns the number of decoded frames for the selected serial bus.

Suffix:
<b> 1..4

Return values:
<Count>

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:DATA?

Returns the data value.

Suffix:
<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:
<Data> 8-bit data value

Example:
```
BUS:SWIRe:RESults:FRAMe2:DATA?
<-- #H12
```

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:STATe?

Returns the overall state of the frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the serial bus.

Return values:

<State> OK | PARity | LENGth | AMBiguous | INComplete

OK
The frame is valid.

PARity
Parity error

LENGth
Length error

INComplete
The frame is incomplete

*RST: OK

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:TYPE?

Returns the type of frame.

Suffix:

<b> 1..4
Selects the serial bus.

<fr> *
Selects the frame.

Return values:

<Type> DATA | FCT | EOP | EEP | BADX | NULL | TCOD

DATA
Data frame

FCT
Flow control token

EOP
End of packet

EEP
Error end of packet

BADX
Illegal escape code

NULL
Null symbol

TCOD
Time code

*RST: DATA

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:FVAL?

Returns the formatted value of the field with the selected field number within the frame with the selected frame number.

Suffix:

<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<FrameByteValue>

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STARt?

Returns the start time of the field with the selected field number within the frame with the selected frame number.

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STATus?

Returns the status of the field with the selected field number within the frame with the selected frame number.

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<State> OK | PARity | LENGth | AMBiguous | INComplete
*RST: OK

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STOP?

Returns the stop time of the field with the selected field number within the frame with the selected frame number.

Suffix:

<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:TYPE?

Returns the type of the field with the selected field number within the frame with the selected frame number.

Suffix:

<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:

<FrameByteValue>

Usage: Query only

BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:VAL?

Returns the value of the field with the selected field number within the frame with the selected frame number.

Suffix:

<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:

<FrameByteValue> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

26.18.25.4 Search settings

SEARch:TRIGger:SWIRe:CTYPe 2540
SEARch:TRIGger:SWIRe:DATA:CONDition 2541
SEARch:TRIGger:SWIRe:DATA:MAX 2541
SEARch:TRIGger:SWIRe:DATA:MIN 2541
SEARch:TRIGger:SWIRe:ERRor:LENGth 2542
SEARch:TRIGger:SWIRe:ERRor:PARity 2542
SEARch:TRIGger:SWIRe:TIME:CONDition 2542
SEARch:TRIGger:SWIRe:TIME:MAX 2543
SEARch:TRIGger:SWIRe:TIME:MIN 2543
SEARch:TRIGger:SWIRe:TYPE 2543

SEARch:TRIGger:SWIRe:CTYPe <SearchName>,<ControlType>
SEARch:TRIGger:SWIRe:CTYPe? <SearchName>

Searches for a specific control type character.

Parameters:

<ControlType> ANY | FCT | EOP | EEP | BADX

FCT
Flow control token

EOP
Normal end of packet

EEP
Error end of packet

BADX
Illegal escape code

*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Trigger Control Type" on page 961

SEARch:TRIGger:SWIRe:DATA:CONDition <SearchName>,<Data_Operator>
SEARch:TRIGger:SWIRe:DATA:CONDition? <SearchName>

Set the condition for the data pattern data value. You can define an exact value or a value range.

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:SWIRe:DATA:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:SWIRe:DATA:MIN` and `SEARch:TRIGger:SWIRe:DATA:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data (Data Pattern)" on page 962

SEARch:TRIGger:SWIRe:DATA:MAX <SearchName>,<Data_PattMax>
SEARch:TRIGger:SWIRe:DATA:MAX? <SearchName>

Sets the the end value of a data type range if `SEARch:TRIGger:SWIRe:DATA:CONDition` is set to `INRange` or `OORange`.

Parameters:
<Data_PattMax> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Data (Data Pattern)" on page 962

SEARch:TRIGger:SWIRe:DATA:MIN <SearchName>,<Data_PattMin>
SEARch:TRIGger:SWIRe:DATA:MIN? <SearchName>

Specifies a data bit pattern, or sets the the start value of a pattern range.

Parameters:
<Data_PattMin>

Parameters for setting and query:
<SearchName>

Manual operation: See "Data (Data Pattern)" on page 962

SEARch:TRIGger:SWIRe:ERRor:LENGth <SearchName>,<Error_Length>
SEARch:TRIGger:SWIRe:ERRor:LENGth? <SearchName>

Searches for length errors.

Parameters:
<Error_Length> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Length error" on page 962

SEARch:TRIGger:SWIRe:ERRor:PARity <SearchName>,<Error_Parity>
SEARch:TRIGger:SWIRe:ERRor:PARity? <SearchName>

Enables searching for a parity error (even parity).

Parameters:
<Error_Parity> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName>

Manual operation: See "Parity Error" on page 962

SEARch:TRIGger:SWIRe:TIME:CONDition <SearchName>,<Time_Operator>
SEARch:TRIGger:SWIRe:TIME:CONDition? <SearchName>

Set the condition for the data value of the time code. You can define an exact value or a value range.

Parameters:
<Time_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less or equal than, Greater Than, Greater or equal than. These conditions require one data pattern to be set with the corresponding `SEARch:TRIGger:SWIRe:TIME:MIN` command.

INRange | OORange
In range/Out of range: set the minimum and maximum value of the range with `SEARch:TRIGger:SWIRe:TIME:MIN` and `SEARch:TRIGger:SWIRe:TIME:MAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Data (Time Code)" on page 961

SEARch:TRIGger:SWIRe:TIME:MAX <SearchName>,<Time_PattMax>
SEARch:TRIGger:SWIRe:TIME:MAX? <SearchName>

Sets the the end value of a data type range for the time code if `SEARch:TRIGger:SWIRe:TIME:CONDition` is set to `INRange` or `OORange`.

Parameters:
<Time_PattMax>

Parameters for setting and query:
<SearchName>

Manual operation: See "Data (Time Code)" on page 961

SEARch:TRIGger:SWIRe:TIME:MIN <SearchName>,<Time_PattMin>
SEARch:TRIGger:SWIRe:TIME:MIN? <SearchName>

Specifies a data bit pattern for the time code, or sets the the start value of a pattern range.

Parameters:
<Time_PattMin>

Parameters for setting and query:
<SearchName>

Manual operation: See "Data (Time Code)" on page 961

SEARch:TRIGger:SWIRe:TYPE <SearchName>,<Type>
SEARch:TRIGger:SWIRe:TYPE? <SearchName>

Sets the search type for the SpaceWire analysis.

Parameters:
<Type> CTRL | DATA | NULL | TIME | ERRor
*RST: CTRL

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 961

26.18.25.5 Search results

In all `SEARch:RESult:DPHY:FRAMe<m>` commands, the suffix <m> selects the frame number in the list of search results.

SEARch:RESult:SWIRe:FCOunt?....2544
SEARch:RESult:SWIRe:FRAMe<fr>:DATA?....2544
SEARch:RESult:SWIRe:FRAMe<fr>:STARt?....2544
SEARch:RESult:SWIRe:FRAMe<fr>:STATe?....2545
SEARch:RESult:SWIRe:FRAMe<fr>:STOP?....2545
SEARch:RESult:SWIRe:FRAMe<fr>:TYPE?....2545

SEARch:RESult:SWIRe:FCOunt? <SearchName>

Returns the number of frames within the search result for the selected serial bus.

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:SWIRe:FRAMe<fr>:DATA? <SearchName>

Returns the data value for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:SWIRe:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the specified frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:SWIRe:FRAMe<fr>:STATe? <SearchName>

Returns the overall state of the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | PARity | LENGth | AMBiguous | INComplete

OK
The frame is valid.

PARity
Parity error

LENGth
Length error

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only

SEARch:RESult:SWIRe:FRAMe<fr>:STOP? <SearchName>

Returns the end time for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop>
Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:SWIRe:FRAMe<fr>:TYPE? <SearchName>

Returns the type of frame for the selected frame within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Type> DATA | FCT | EOP | EEP | BADX | NULL | TCOD

DATA
Data frame

FCT
Flow control token

EOP
End of packet

EEP
Error end of packet

BADX
Illegal escape code

NULL
Null symbol

TCOD
Time code

*RST: DATA

Usage: Query only

26.18.26 PCIe (option R&S RTPK72/K73)

- Configuration....2546
- Clock data recovery....2549
- Digital signal processing (DSP)....2551
- Trigger....2554
- Decode results....2568
- Search settings....2576
- Search results....2592

26.18.26.1 Configuration

In all `BUS<b>:PCIE` commands, the suffix <b> selects the serial bus.

BUS<b>:PCIE:DSCRambling....2547
BUS<b>:PCIE:FIDLe....2547
BUS<b>:PCIE:GEN....2547
BUS<b>:PCIE:LNKW....2548
BUS<b>:PCIE:LZER:SOURce....2548
BUS<b>:PCIE:LONE:SOURce....2548
BUS<b>:PCIE:LTWO:SOURce....2548
BUS<b>:PCIE:LTHRee:SOURce....2548
BUS<b>:PCIE:LZER:THRHigh....2548
BUS<b>:PCIE:LONE:THRHigh....2548
BUS<b>:PCIE:LTWO:THRHigh....2548

BUS<b>:PCIE:LTHRee:THRHigh....2548
BUS<b>:PCIE:LZER:THRLow....2549
BUS<b>:PCIE:LONE:THRLow....2549
BUS<b>:PCIE:LTWO:THRLow....2549
BUS<b>:PCIE:LTHRee:THRLow....2549
BUS<b>:PCIE:SMLanes....2549

BUS<b>:PCIE:DSCRambling <Active>

Enables descrambling of the data.

Suffix:
<b> 1..4

Parameters:
<Active> OFF | ON
*RST: ON

Manual operation: See "Descrambling" on page 967

BUS<b>:PCIE:FIDLe <Active>

Enables the filtering of idle packets.

Suffix:
<b> 1..4

Parameters:
<Active> OFF | ON
*RST: ON

Manual operation: See "Filter Idle" on page 970

BUS<b>:PCIE:GEN <Generation>

Sets the generation of the PCIe technology.

Suffix:
<b> 1..4

Parameters:
<Generation> V1 | V2 | V3
V1
PCIe Gen1 (2.5 Gbit/s)
V2
PCIe Gen2 (5 Gbit/s)
*RST: V1

Manual operation: See "Generation" on page 967

BUS<b>:PCIE:LNKW <LinkWidth>

Sets the link width, the number of lanes that are used for the transmission of the data.

Suffix:
<b> 1..4

Parameters:
<LinkWidth> X1 | X2 | X4
*RST: X1

Manual operation: See "Link" on page 967

BUS<b>:PCIE:LZER:SOURce <SourceL0>

Sets the signal sources for Lane 0.

Suffix:
<b> 1..4

Parameters:
<SourceL0> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4
*RST: C1W1

Manual operation: See "Lane 0/1/2/3" on page 968

BUS<b>:PCIE:LONE:SOURce <SourceL1>
BUS<b>:PCIE:LTWO:SOURce <SourceL2>
BUS<b>:PCIE:LTHRee:SOURce <SourceL3>

Sets the signal sources for the corresponding logical lane.

Suffix:
<b> 1..4

Parameters:
<SourceL3> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | NONE
*RST: LONe: C2W1, LTWo: C3W1, LTHree: C4W1

Manual operation: See "Lane 0/1/2/3" on page 968

BUS<b>:PCIE:LZER:THRHigh <ThresL0High>
BUS<b>:PCIE:LONE:THRHigh <ThresL1High>
BUS<b>:PCIE:LTWO:THRHigh <ThresL2High>
BUS<b>:PCIE:LTHRee:THRHigh <ThresL3High>

Sets the high threshold value for the respective lane.

Suffix:
<b> 1..4

Parameters:

<ThresL3High> Range: -5 to 5
Increment: 1E-3
*RST: 0.02
Default unit: V

Manual operation: See "High threshold" on page 969

BUS<b>:PCIE:LZER:THRLow <ThresholdL0Low>
BUS<b>:PCIE:LONE:THRLow <ThresholdL1Low>
BUS<b>:PCIE:LTWO:THRLow <ThresholdL2Low>
BUS<b>:PCIE:LTHRee:THRLow <ThresholdL3Low>
BUS<b>:PCIE:SMLanes <Active>

Enables the display of the result in multiple lanes.

Suffix:

<b> 1..4

Parameters:

<Active> OFF | ON
*RST: ON

Manual operation: See "Show multiple lanes" on page 970

26.18.26.2 Clock data recovery

BUS<b>:CDR:BITRate 2549
BUS<b>:CDR:PLL:BWIDth 2550
BUS<b>:CDR:PLL:DAMPing 2550
BUS<b>:CDR:PLL:ORDer 2550
BUS<b>:CDR:PLL:RELBwidth 2550
BUS<b>:CDR:RESults 2551
BUS<b>:CDR:SYNC 2551

BUS<b>:CDR:BITRate <Bitrate>

For NRZ signals, you can set a "Nominal bit rate".

For signals with a "PAM order" > 2, you can do a "Nominal symbol rate".

Sets the quiescent frequency of the PLL. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Suffix:

<b> 1..4

Parameters:

<Bitrate> Range: 100 to 5E+9
Increment: 10
*RST: 1E+9
Default unit: bps

Manual operation: See "Nominal bit rate" on page 971

BUS<b>:CDR:PLL:BWIDth <PLLBandwidth>

Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization. The PLL bandwidth is usually defined by the transmission standard.

Suffix:
<b> 1..4

Parameters:
<PLLBandwidth> Range: 20E+3 to 10E+6
Increment: 10
*RST: 599.88E+3
Default unit: Hz

Manual operation: See "PLL settings" on page 971

BUS<b>:CDR:PLL:DAMPing <DampingFactor>

Sets the damping factor, which is only relevant for second order PLL.

Suffix:
<b> 1..4

Parameters:
<DampingFactor> Range: 0.5 to 2
Increment: 0.01
*RST: 0.7

Manual operation: See "PLL settings" on page 971

BUS<b>:CDR:PLL:ORDer <PLLOrder>

Sets the order of the PLL: first or second order. PLL of higher order can compensate for more complex jitter behavior.

Suffix:
<b> 1..4

Parameters:
<PLLOrder> FIRSt | SECond
*RST: SECond

Manual operation: See "PLL settings" on page 971

BUS<b>:CDR:PLL:RELBwidth <PLLRelBw>

Sets the relative bandwidth, which is the ratio of the nominal bit rate to the PLL bandwidth.

Suffix:
<b> 1..4

Parameters:
<PLLRelBw> Range: 10 to 10000
Increment: 1
*RST: 1667

Manual operation: See "PLL settings" on page 971

BUS<b>:CDR:RESults <Results>

The PLL requires some time to synchronize to the phase of the data stream. You can select when the CDR algorithm returns clock edges.

Suffix:
<b> 1..4

Parameters:
<Results> ALL | AISYnc
*RST: ALL

Manual operation: See "Selected results" on page 972

BUS<b>:CDR:SYNC <InitialSync>

Defines the phase reference for the first clock edge.

Suffix:
<b> 1..4

Parameters:
<InitialSync> SAMPle | DATaedge

SAMPle
The first clock edge matches the first sample of the waveform at the left border of the display.

DATaedge
The first clock edge matches the first edge of the data signal.

*RST: DATaedge

Manual operation: See "Initial phase sync." on page 972

26.18.26.3 Digital signal processing (DSP)

BUS<b>:CTLE:DCGain 2552
BUS<b>:CTLE:ENBLe 2552
BUS<b>:CTLE:P1FReq 2552
BUS<b>:CTLE:P2FReq 2552
BUS<b>:CTLE:Z1FReq 2553
BUS<b>:PCIE:DFE:AUTO 2553

BUS<b>:PCIE:DFE:COEFficient....2553
BUS<b>:PCIE:DFE:ENBLe....2554
BUS<b>:PCIE:DFE:TCONt....2554

BUS<b>:CTLE:DCGain <DCGain>

Sets the adjustable DC gain. This value can be chosen according to the channel loss characteristics. For low-loss channels, you can set a value close to 0 dB.

Suffix:
<b> 1..4

Parameters:
<DCGain>
Range: -100 to 100
Increment: 0.01
*RST: 0
Default unit: dB

Manual operation: See "DC Gain (A_{DC})" on page 928

BUS<b>:CTLE:ENBLe <EnableCTLE>

Enables the continuous time linear equalization (CTLE) equalization.

Suffix:
<b> 1..4

Parameters:
<EnableCTLE>
OFF | ON
*RST: OFF

Manual operation: See "Enable" on page 928

BUS<b>:CTLE:P1FReq <PoleOneFreq>

Sets the pole 1 frequency for the transfer function of the CTLE algorithm.

Suffix:
<b> 1..4

Parameters:
<PoleOneFreq>
Range: 1 to 40E+9
Increment: 1
*RST: 0
Default unit: Hz

Manual operation: See "Pole frequency (fp1)/(fp2)" on page 928

BUS<b>:CTLE:P2FReq <PoleTwoFreq>

Sets the pole 2 frequency for the transfer function of the CTLE algorithm.

Suffix:
<b> 1..4

Parameters:
<PoleTwoFreq> Range: 1 to 40E+9
Increment: 1
*RST: 0
Default unit: Hz

Manual operation: See "Pole frequency (fp1)/(fp2)" on page 928

BUS<b>:CTLE:Z1FReq <ZroOneFreq>

Sets the zero frequency for the transfer function of the CTLE algorithm.

Suffix:
<b> 1..4

Parameters:
<ZroOneFreq> Range: 1 to 40E+9
Increment: 1
*RST: 0
Default unit: Hz

Manual operation: See "Zero frequency (fz)" on page 928

BUS<b>:PCIE:DFE:AUTO <AutoChEstimate>

Enables the auto channel estimation.

Suffix:
<b> 1..4

Parameters:
<AutoChEstimate> OFF | ON
*RST: ON

Manual operation: See "Estimate coefficients" on page 974

BUS<b>:PCIE:DFE:COEFficient <DFE_coeff>

Sets the value of the coefficient for the DFE .

Suffix:
<b> 1..4

Parameters:
<DFE_coeff> Range: -1 to 1
Increment: 1E-3
*RST: 0
Default unit: V

Manual operation: See "Coefficient" on page 974

BUS<b>:PCIE:DFE:ENBLe <EnableDFE>

Enables the use of the decision feedback equalization for PCIe.

Suffix:
<b> 1..4

Parameters:
<EnableDFE> OFF | ON
*RST: ON

Manual operation: See "Enable" on page 974

BUS<b>:PCIE:DFE:TCONt <CIRLength>

Sets a number of taps for the decision feedback filter.

Suffix:
<b> 1..4

Parameters:
<CIRLength> Range: 1 to 20
Increment: 1
*RST: 5

Manual operation: See "Number of Taps" on page 974

26.18.26.4 Trigger

The trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on serial buses.

To trigger on a serial bus, make sure that:

- `TRIGger<t>:SOURce[:SELect]` is set to `SBUS`.
- The sources of the serial bus are channel signals: use `BUS<b>:...:SOURce` commands.
- Decoding is enabled: `BUS<b>[:STATe]` is set to `ON`.

TRIGger<t>:PCIE:TRGLevel 2555
TRIGger<t>:PCIE:DLLP:FCTL:CRET 2556
TRIGger<t>:PCIE:DLLP:FCTL:VCID 2556
TRIGger<t>:PCIE:DLLP:MULT:AUTH 2556
TRIGger<t>:PCIE:DLLP:MULT:CRET 2556
TRIGger<t>:PCIE:DLLP:MULT:DVPT 2557
TRIGger<t>:PCIE:DLLP:MULT:HABS 2557
TRIGger<t>:PCIE:DLLP:MULT:MIXT 2557
TRIGger<t>:PCIE:DLLP:MULT:PHAS 2557
TRIGger<t>:PCIE:DLLP:MULT:RESA 2558
TRIGger<t>:PCIE:DLLP:MULT:TLPT 2558
TRIGger<t>:PCIE:DLLP:MULT:TYPE 2558
TRIGger<t>:PCIE:DLLP:MULT:VHFC 2558
TRIGger<t>:PCIE:DLLP:MULT:VHGR 2559

TRIGger<t>:PCIE:DLLP:MULT:VLNR ... 2559
TRIGger<t>:PCIE:DLLP:POWM ... 2559
TRIGger<t>:PCIE:DLLP:SEQ ... 2560
TRIGger<t>:PCIE:DLLP:TYPE ... 2560
TRIGger<t>:PCIE:DLLP:VPAT ... 2560
TRIGger<t>:PCIE:ERRC:CRC ... 2560
TRIGger<t>:PCIE:ERRC:DISP ... 2561
TRIGger<t>:PCIE:ERRC:ECRC ... 2561
TRIGger<t>:PCIE:ERRC:INVP ... 2561
TRIGger<t>:PCIE:ERRC:LCRC ... 2561
TRIGger<t>:PCIE:ERRC:LENGth ... 2562
TRIGger<t>:PCIE:ERRC:MALFormed ... 2562
TRIGger<t>:PCIE:ERRC:MXPFix ... 2562
TRIGger<t>:PCIE:ERRC:PFORder ... 2562
TRIGger<t>:PCIE:ERRC:SYCBit ... 2563
TRIGger<t>:PCIE:ERRC:UKNP ... 2563
TRIGger<t>:PCIE:ERRC:VOORange ... 2563
TRIGger<t>:PCIE:OSET:TYPE ... 2563
TRIGger<t>:PCIE:TLP:ADRT ... 2564
TRIGger<t>:PCIE:TLP:CFGT ... 2564
TRIGger<t>:PCIE:TLP:CPID ... 2564
TRIGger<t>:PCIE:TLP:CPLS ... 2565
TRIGger<t>:PCIE:TLP:DEID ... 2565
TRIGger<t>:PCIE:TLP:MERW ... 2565
TRIGger<t>:PCIE:TLP:MSGC ... 2565
TRIGger<t>:PCIE:TLP:MSGR ... 2566
TRIGger<t>:PCIE:TLP:ORDE ... 2566
TRIGger<t>:PCIE:TLP:REID ... 2566
TRIGger<t>:PCIE:TLP:SNOO ... 2566
TRIGger<t>:PCIE:TLP:SNUM ... 2567
TRIGger<t>:PCIE:TLP:TCHN ... 2567
TRIGger<t>:PCIE:TLP:TYPE ... 2567
TRIGger<t>:PCIE:TLP:AT ... 2567
TRIGger<t>:PCIE:TYPE ... 2568

TRIGger<t>:PCIE:TRGLevel <TriggerLevel>

Sets the trigger level for PCIe Gen 3.

Suffix:
<t> 1..3

Parameters:
<TriggerLevel> Range: -10 to 10
Increment: 1E-3
*RST: 0
Default unit: V

Manual operation: See "Trigger level" on page 975

TRIGger<t>:PCIE:DLLP:FCTL:CRET <CreditType>

Sets credit type value to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<CreditType> ANY | P | NP | CPL
*RST: ANY

Manual operation: See "Credit Type" on page 981

TRIGger<t>:PCIE:DLLP:FCTL:VCID <VirtualChnID>

Sets the virtual channel ID to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<VirtualChnID> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN
*RST: ANY

Manual operation: See "VC ID" on page 981

TRIGger<t>:PCIE:DLLP:MULT:AUTH <Authorized>

Sets the authorized presence state to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<Authorized> ANY | YES | NO
*RST: ANY

Manual operation: See "Authorized" on page 979

TRIGger<t>:PCIE:DLLP:MULT:CRET <CreditType>

Sets the credit type to be triggered on for the multi-root data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<CreditType> ANY | DATA | HEADER
*RST: ANY

Manual operation: See "Credit Type" on page 980

TRIGger<t>:PCIE:DLLP:MULT:DVPT <DevicePortType>

Sets the device/port type to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<DevicePortType> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN | EIGHT | NINE | TEN | ELEVEN | TWELVE | THIRTEEN | FOURTEEN | FIFTEEN

*RST: ANY

Manual operation: See "Device/Port Type" on page 979

TRIGger<t>:PCIE:DLLP:MULT:HABS <VHAbsent>

Sets the state of the absent virtual hiearchies (VH) to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<VHAbsent> ANY | YES | NO

*RST: ANY

Manual operation: See "VH Absent" on page 980

TRIGger<t>:PCIE:DLLP:MULT:MIXT <MixedType>

Sets the mixed type presence state to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<MixedType> ANY | YES | NO

*RST: ANY

Manual operation: See "Mixed Type" on page 979

TRIGger<t>:PCIE:DLLP:MULT:PHAS <Phase>

Sets the phase state to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<Phase> ANY | YES | NO

*RST: ANY

Manual operation: See "Phase" on page 979

TRIGger<t>:PCIE:DLLP:MULT:RESA <ResetA>

Sets the on the value of the A bit to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<ResetA> ANY | ACK | REQUEST
*RST: ANY

Manual operation: See "A" on page 981

TRIGger<t>:PCIE:DLLP:MULT:TLPT <TLPType>

Sets the multi-root type to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<TLPType> ANY | P | NP | CPL

P
Posted credit.

NP
Non posted credit.

CL
Completion credit.

*RST: ANY

Manual operation: See "TLP Type" on page 980

TRIGger<t>:PCIE:DLLP:MULT:TYPE <Type>

Sets the multi-root type for the data link layer to be triggered on.

Suffix:
<t> 1..3

Parameters:
<Type> MRINIT | MRRESET | MRUPDATEFC | MRINITFC1 | MRINITFC2
*RST: MRINIT

Manual operation: See "MR DLLP" on page 978

TRIGger<t>:PCIE:DLLP:MULT:VHFC <InitVHFC>

Sets the virtual hierarchies flow control presence state to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<InitVHFC> ANY | YES | NO
*RST: ANY

Manual operation: See "VH FC" on page 979

TRIGger<t>:PCIE:DLLP:MULT:VHGR <ResetVHGroup>

Sets the virtual hierarchies group to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<ResetVHGroup> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN | EIGHT | NINE | TEN | ELEVEN | TWELVE | THIRTEEN | FOURTEEN | FIFTEEN
*RST: ANY

Manual operation: See "VH Group" on page 981

TRIGger<t>:PCIE:DLLP:MULT:VLNR <VirtualLink>

Sets the virtual link (VL) number to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<VirtualLink> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN
*RST: ANY

Manual operation: See "VL Number" on page 980

TRIGger<t>:PCIE:DLLP:POWM <PowerMngtType>

Sets the power management type to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<PowerMngtType> ANY | ENTERL1 | ENTERL23 | ACTREQL1 | REQUESTACK
*RST: ANY

Manual operation: See "PM Type" on page 982

TRIGger<t>:PCIE:DLLP:SEQ <Sequence>

Sets the sequence field, indicating what TLPs are affected by the ACK/NAK, to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<Sequence>

Manual operation: See "Sequence" on page 981

TRIGger<t>:PCIE:DLLP:TYPE <Type>

Sets the DLLP t type to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<Type> ANY | MRDLLP | ACK | NAK | INITFC1 | INITFC2 | UPDATEFC | PM | VENDOR
*RST: ANY

Manual operation: See "DLLP Type" on page 978

TRIGger<t>:PCIE:DLLP:VPAT <VendorPattern>

Sets the vendor pattern to be triggered on for the data link layer trigger.

Suffix:
<t> 1..3

Parameters:
<VendorPattern> 24-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Vendor Pattern" on page 982

TRIGger<t>:PCIE:ERRC:CRC <CRC16>

Enables triggering on 16-bit cyclic redundancy check (CRC) errors.

Suffix:
<t> 1..3

Parameters:
<CRC16> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 1/2" on page 982

TRIGger<t>:PCIE:ERRC:DISP <Disparity>

Enables triggering on disparity errors.

Suffix:
<t> 1..3

Parameters:
<Disparity> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 1/2" on page 982

TRIGger<t>:PCIE:ERRC:ECRC <ECRC>

Enables triggering on end-to-end cyclic redundancy checksum (ECRC) errors.

Suffix:
<t> 1..3

Parameters:
<ECRC> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 1/2" on page 982

TRIGger<t>:PCIE:ERRC:INVP <InvalidSymbol>

Enables triggering on invalid symbol errors.

Suffix:
<t> 1..3

Parameters:
<InvalidSymbol> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 1/2" on page 982

TRIGger<t>:PCIE:ERRC:LCRC <LCRC>

Enables triggering on link cyclic redundancy check (LCRC) errors.

Suffix:
<t> 1..3

Parameters:
<LCRC> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 1/2" on page 982

TRIGger<t>:PCIE:ERRC:LENGth <LENG>

Enables triggering on a length error in PCIe Gen 3 signals, for frames that do not have the specified length or data.

Suffix:
<t> 1..3

Parameters:
<LENG> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 3" on page 983

TRIGger<t>:PCIE:ERRC:MALFormed <MALF>

Enables triggering on a malformed TLP in PCIe Gen 3 signals. A malformed TLP is a TLP that violates specific TLP formation rules that are defined in the specification.

Suffix:
<t> 1..3

Parameters:
<MALF> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 3" on page 983

TRIGger<t>:PCIE:ERRC:MXPFix <MXPF>

Enables triggering on an end-end prefix error in PCIe Gen 3 signals. The maximum number of permitted end-end TLP prefixes is 4.

Suffix:
<t> 1..3

Parameters:
<MXPF> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 3" on page 983

TRIGger<t>:PCIE:ERRC:PFORder <PFOR>

Enables triggering on a wrong prefix order in PCIe Gen 3 signals.

Suffix:
<t> 1..3

Parameters:
<PFOR> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 3" on page 983

TRIGger<t>:PCIE:ERRC:SYCBit <SYCB>

Enables triggering on a sync bit in PCIe Gen 3 signals.

Suffix:
<t> 1..3

Parameters:
<SYCB> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 3" on page 983

TRIGger<t>:PCIE:ERRC:UKNP <UnknownPacket>

Enables triggering on an unknown packet in PCIe Gen 3 signals.

Suffix:
<t> 1..3

Parameters:
<UnknownPacket> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 3" on page 983

TRIGger<t>:PCIE:ERRC:VOORange <VOOR>

Enables triggering if a value of a field is out of the range defined by the PCIe Gen 3 standard.

Suffix:
<t> 1..3

Parameters:
<VOOR> OFF | ON
*RST: OFF

Manual operation: See "Error Condition PCIe Gen 3" on page 983

TRIGger<t>:PCIE:OSET:TYPE <Type>

Sets the ordered set to be triggered on.

Suffix:
<t> 1..3

Parameters:
<Type> | SDS

SKP
SKP ordered sets

TS1
Training sequence 1

TS2
Training sequence 2

FTS
Fast training sequence

EIOS
Electrical idle ordered set

EIEOS
Electrical idle exit ordered set

COMP
Compliance pattern

SDS
Start of data sequence

*RST: SKP

Manual operation: See "Ordered set condition" on page 982

TRIGger<t>:PCIE:TLP:ADRT <AddressType>

Sets the address type to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<AddressType> ANY | X32 | X64
*RST: ANY

Manual operation: See "Address Type" on page 977

TRIGger<t>:PCIE:TLP:CFGT <ConfigType>

Sets the configuration type to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<ConfigType> ANY | TYPE0 | TYPE1
*RST: ANY

Manual operation: See "Type" on page 977

TRIGger<t>:PCIE:TLP:CPID <CompleterID>

Sets the completer ID to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<CompleterID> 16-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Completer ID" on page 978

TRIGger<t>:PCIE:TLP:CPLS <CplStatus>

Sets the completion status to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<CplStatus> ANY | SUCCESS | UNSUPPORTED | RETRY | ABORT
*RST: ANY

Manual operation: See "Status" on page 977

TRIGger<t>:PCIE:TLP:DEID <DeviceID>

Sets the device ID to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<DeviceID> 16-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Device ID" on page 977

TRIGger<t>:PCIE:TLP:MERW <MemRW>

Sets the read/ write type to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<MemRW> ANY | READ | WRITE
*RST: ANY

Manual operation: See "Read/Write" on page 977

TRIGger<t>:PCIE:TLP:MSGC <TLPMessageCode>

Sets the message code to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<TLPMessageCode> 8-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Message Code" on page 977

TRIGger<t>:PCIE:TLP:MSGR <MsgRouting>

Sets the message routing type to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<MsgRouting> ANY | ROOTCOMPLEX | ADDRESS | DEVICEID | DEViceid | BROADCAST | LOCAL | GATHERED

DEVICEID = DEViceid

*RST: ANY

Manual operation: See "Routing" on page 977

TRIGger<t>:PCIE:TLP:ORDE <Ordering>

Sets the ordering type to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<Ordering> ANY | STRONG | RELAX

*RST: ANY

Manual operation: See "Ordering" on page 976

TRIGger<t>:PCIE:TLP:REID <RequesterID>

Sets the requester ID to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<RequesterID> 16-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Requester ID" on page 977

TRIGger<t>:PCIE:TLP:SNOO <Snoop>

Sets the snoop state to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<Snoop> ANY | YES | NO
*RST: ANY

Manual operation: See "Snoop" on page 976

TRIGger<t>:PCIE:TLP:SNUM <SequenceNumber>

Sets the sequence numbe to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<SequenceNumber> 12-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Manual operation: See "Sequence Number" on page 976

TRIGger<t>:PCIE:TLP:TCHN <TrafficClass>

Sets the traffic class to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<TrafficClass> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN
*RST: ANY

Manual operation: See "TC" on page 976

TRIGger<t>:PCIE:TLP:TYPE <Type>

Sets the transaction type to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<Type> ANY | MEM | IO | CFG | MSG | CPL | FETCH | SWAP | CAS
*RST: ANY

Manual operation: See "TLP" on page 975

TRIGger<t>:PCIE:TLP:AT <TrafficClass>

Sets the address translation to be triggered on for the transaction layer type trigger.

Suffix:
<t> 1..3

Parameters:
<TrafficClass> ANY | UT | TRQ | TR | UR
`UT`: untranslated.
`TRQ`: translated request.
`TR`: translated.
`UR`: unrecognised request.
*RST: ANY

TRIGger<t>:PCIE:TYPE <Type>

Sets the trigger type for the PCI express analysis..

Suffix:
<t> 1..3

Parameters:
<Type> TLP | DLLP | ORD | ERR
*RST: TLP

Manual operation: See "Trigger type PCI express" on page 975

26.18.26.5 Decode results

In all `BUS<b>:PCIE:RESult:PACKet<pa>` commands, the suffix <b> selects the serial bus and the suffix <pa> selects the packet number in the decode table.

BUS<b>:PCIE:RESult:PACKet<pa>:ADDR? 2569
BUS<b>:PCIE:RESult:PACKet<pa>:CPID? 2569
BUS<b>:PCIE:RESult:PACKet<pa>:CPS? 2569
BUS<b>:PCIE:RESult:PACKet<pa>:DATA? 2570
BUS<b>:PCIE:RESult:PACKet<pa>:DFC? 2570
BUS<b>:PCIE:RESult:PACKet<pa>:FCOunt? 2570
BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:FVAL? 2570
BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:STATus? 2571
BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:TYPE? 2572
BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:VAL? 2572
BUS<b>:PCIE:RESult:PACKet<pa>:HFC? 2572
BUS<b>:PCIE:RESult:PACKet<pa>:LEN? 2573
BUS<b>:PCIE:RESult:PACKet<pa>:RQID? 2573
BUS<b>:PCIE:RESult:PACKet<pa>:SEQN? 2573
BUS<b>:PCIE:RESult:PACKet<pa>:STARt? 2574
BUS<b>:PCIE:RESult:PACKet<pa>:STATe? 2574
BUS<b>:PCIE:RESult:PACKet<pa>:STOP? 2574
BUS<b>:PCIE:RESult:PACKet<pa>:TAG? 2575
BUS<b>:PCIE:RESult:PACKet<pa>:TYPE? 2575
BUS<b>:PCIE:RESult:PCOunt? 2576
BUS<b>:PCIE:RESult:PACKet<pa>:BITRate? 2576

BUS<b>:PCIE:RESult:PACKet<pa>:ADDR?

Returns the packet address for the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<Address> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:CPID?

Returns the completer ID of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<CompleterID> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:CPS?

Returns the completion status field value of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<CplStatus> RESERVED | SC | UR | CRS | CA

RESERVED
Others

SC
Successful Completion

UR
Unsupported Request

CRS
Configuration Request Retry Status

CA
Completer Abort

*RST: RESERVED

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:DATA?

Returns the data value of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<Data>

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:DFC?

Returns the credit value of the payload data of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<DataFC> Range: 0 to 4095
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:FCOunt?

Returns the number of decoded fields in the selected packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<FieldCount> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:FVAL?

Returns the formatted value of the field with the selected field number within the frame with the selected packet number (for the selected serial bus).

Suffix:

<b> 1..4

<pa> *

<fl> *
Selects the field number.

Return values:

<ValueFormatted> String parameter

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:STATus?

Returns the status of the frame with the selected field number within the packet with the selected packet number (for the selected serial bus).

Suffix:

<b> 1..4

<pa> *

<fl> *
Selects the field number.

Return values:

<State> OK | MALF | CRC16 | ECRC | LCRC | LEN | POE | MEE | UNCorrelated | FCRC | FPERror | UNKNown | OUTRange | INComplete | SYNCerror

MALF
Malformed packet

CRC16
CRC16 error

ECRC
ECRC error

LCRC
Link CRC error

LEN
Length error

POE
TLP prefix error

MEE
Max end-end TLP prefix error

FCRC
Fabric packet CRC

FPERror
Fabric packet error

OUTRange
Out of range

INComplete
Incomplete

SYNCerror
Synchronization error

*RST: OK

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:TYPE?

Returns the type of the field with the selected field number within the frame with the selected packet number (for the selected serial bus).

Suffix:
<b> 1..4

<pa> *

<fl> *
Selects the field number.

Return values:
<Type>

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:VAL?

Returns the value of the field with the selected field number within the packet with the selected packet number (for the selected serial bus).

Suffix:
<b> 1..4

<pa> *

<fl> *
Selects the field number.

Return values:
<FieldValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:HFC?

Returns the credit value of the header of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:

<HeaderFC> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:LEN?

Returns the length of the specified packet.

Suffix:

<b> 1..4

<pa> *

Return values:

<Length> Range: 0 to 1023
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:RQID?

Returns the requester ID of the specified packet.

Suffix:

<b> 1..4

<pa> *

Return values:

<RequesterID> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:SEQN?

Returns the sequence number of the specified packet.

Suffix:

<b> 1..4

<pa> *

Return values:

<SequenceNumber> Range: 0 to 4095
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:STARt?

Returns the start time of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:STATe?

Returns the state of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<State> OK | MALF | CRC16 | ECRC | LCRC | LEN | POE | MEE | UNCorrelated | FCRC | FPERror | UNKNown | OUTRange | INComplete | SYNCerror

MALF
Mal formated packet

CRC16
CRC16 error

ECRC
ECRC error

LCRC
LCRC error

LEN
Length error

POE
TLP prefix error

MEE
Max end-end TLP prefix error

*RST: OK

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:STOP?

Returns the stop time of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:TAG?

Returns the tag of the specified packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<Tag> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:TYPE?

Returns the type of the specified packet. For a description of the packet types, see Section 14.25.1, "The PCIe protocol", on page 964.

Suffix:
<b> 1..4

<pa> *

Return values:
<Type> MRD32 | MRD64 | MRDLK32 | MRDLK64 | MWR32 | MWR64 | IORD | IOWR | CFGRD0 | CFGWR0 | CFGRD1 | CFGWR1 | MSG | MSGD | CPL | CPLD | CPLLK | CPLDLK | FA32 | FA64 | SWP32 | SWP64 | CAS32 | CAS64 | LPRFX | EPRFX | ACK | NAK | PMEL1 | PMEL23 | PMASRL1 | PMRA | VENDS | IFC1P | IFC1NP | IFC1CPL | IFC2P | IFC2NP | IFC2CPL | UPDFCP | UPDFCNP | UPDFCCPL | MRUPDFC | MRIFC1 | MRIFC2 | MRINIT | MRRESET | UNK | SKPOS | EIOS | FTSOS | TS1OS | TS2OS | EIEOS | COMPL | MCOMPL | DCOMPL | UDEF | IDLE | SDS | EDB | EDS | SDAT | SCTR | PMUX | UNKTlp | UNKDllp | SINV
*RST: UNK

Usage: Query only

BUS<b>:PCIE:RESult:PCOunt?

Returns the packet count for the selected serial bus, i.e. the number of packets in the present acquisition.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:PCIE:RESult:PACKet<pa>:BITRate?

Returns the bit rate of the selected packet.

Suffix:
<b> 1..4

<pa> *

Return values:
<PrimaryBitRate> Range: 0 to 100E+9
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

26.18.26.6 Search settings

SEARch:TRIGger:PCIE:DLLP:FCTL:CRET 2577
SEARch:TRIGger:PCIE:DLLP:FCTL:VCID 2578
SEARch:TRIGger:PCIE:DLLP:MULT:AUTH 2578
SEARch:TRIGger:PCIE:DLLP:MULT:CRET 2578
SEARch:TRIGger:PCIE:DLLP:MULT:DVPT 2578
SEARch:TRIGger:PCIE:DLLP:MULT:HABS 2579
SEARch:TRIGger:PCIE:DLLP:MULT:MIXT 2579
SEARch:TRIGger:PCIE:DLLP:MULT:PHAS 2579
SEARch:TRIGger:PCIE:DLLP:MULT:RESA 2579
SEARch:TRIGger:PCIE:DLLP:MULT:TLPT 2580
SEARch:TRIGger:PCIE:DLLP:MULT:TYPE 2580
SEARch:TRIGger:PCIE:DLLP:MULT:VHFC 2580
SEARch:TRIGger:PCIE:DLLP:MULT:VHGR 2581
SEARch:TRIGger:PCIE:DLLP:MULT:VLNR 2581
SEARch:TRIGger:PCIE:DLLP:POWM 2581
SEARch:TRIGger:PCIE:DLLP:SEQ 2582
SEARch:TRIGger:PCIE:DLLP:TYPE 2582
SEARch:TRIGger:PCIE:DLLP:VPAT 2582

SEARch:TRIGger:PCIE:ERRC:CRC ... 2582
SEARch:TRIGger:PCIE:ERRC:DISP ... 2583
SEARch:TRIGger:PCIE:ERRC:ECRC ... 2583
SEARch:TRIGger:PCIE:ERRC:INVP ... 2583
SEARch:TRIGger:PCIE:ERRC:LCRC ... 2583
SEARch:TRIGger:PCIE:ERRC:LENGth ... 2584
SEARch:TRIGger:PCIE:ERRC:MALFormed ... 2584
SEARch:TRIGger:PCIE:ERRC:MXPFix ... 2584
SEARch:TRIGger:PCIE:ERRC:PFORder ... 2584
SEARch:TRIGger:PCIE:ERRC:SYCBit ... 2585
SEARch:TRIGger:PCIE:ERRC:UKNP ... 2585
SEARch:TRIGger:PCIE:ERRC:VOORange ... 2585
SEARch:TRIGger:PCIE:OSET:SDS ... 2585
SEARch:TRIGger:PCIE:OSET:COMP ... 2586
SEARch:TRIGger:PCIE:OSET:EIDE ... 2586
SEARch:TRIGger:PCIE:OSET:EIDL ... 2586
SEARch:TRIGger:PCIE:OSET:FTS ... 2586
SEARch:TRIGger:PCIE:OSET:SKIP ... 2587
SEARch:TRIGger:PCIE:OSET:TSONe ... 2587
SEARch:TRIGger:PCIE:OSET:TSTWo ... 2587
SEARch:TRIGger:PCIE:TLP:ADRT ... 2587
SEARch:TRIGger:PCIE:TLP:AT ... 2588
SEARch:TRIGger:PCIE:TLP:CFGT ... 2588
SEARch:TRIGger:PCIE:TLP:CPID ... 2588
SEARch:TRIGger:PCIE:TLP:CPLS ... 2589
SEARch:TRIGger:PCIE:TLP:DEID ... 2589
SEARch:TRIGger:PCIE:TLP:MERW ... 2589
SEARch:TRIGger:PCIE:TLP:MSGC ... 2589
SEARch:TRIGger:PCIE:TLP:MSGR ... 2590
SEARch:TRIGger:PCIE:TLP:ORDE ... 2590
SEARch:TRIGger:PCIE:TLP:REID ... 2590
SEARch:TRIGger:PCIE:TLP:SNOO ... 2591
SEARch:TRIGger:PCIE:TLP:SNUM ... 2591
SEARch:TRIGger:PCIE:TLP:TCHN ... 2591
SEARch:TRIGger:PCIE:TLP:TYPE ... 2591
SEARch:TRIGger:PCIE:TYPE ... 2592

SEARch:TRIGger:PCIE:DLLP:FCTL:CRET <SearchName>,<CreditType>
SEARch:TRIGger:PCIE:DLLP:FCTL:CRET? <SearchName>

Sets credit type value to be searched for, for the data link layer.

Parameters:
<CreditType> ANY | P | NP | CPL
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Credit Type" on page 992

SEARch:TRIGger:PCIE:DLLP:FCTL:VCID <SearchName>,<VirtualChnID>
SEARch:TRIGger:PCIE:DLLP:FCTL:VCID? <SearchName>

Sets the virtual channel ID to be searched for, for the data link layer.

Parameters:
<VirtualChnID> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "VC ID" on page 993

SEARch:TRIGger:PCIE:DLLP:MULT:AUTH <SearchName>,<Authorized>
SEARch:TRIGger:PCIE:DLLP:MULT:AUTH? <SearchName>

Sets the authorized presence state to be searched for, for the data link layer.

Parameters:
<Authorized> ANY | YES | NO
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Authorized" on page 991

SEARch:TRIGger:PCIE:DLLP:MULT:CRET <SearchName>,<CreditType>
SEARch:TRIGger:PCIE:DLLP:MULT:CRET? <SearchName>

Sets the credit type to be searched for, for the data link layer.

Parameters:
<CreditType> ANY | DATA | HEADER
*RST: ANY

Parameters for setting and query:
<SearchName>

SEARch:TRIGger:PCIE:DLLP:MULT:DVPT <SearchName>,<DevicePortType>
SEARch:TRIGger:PCIE:DLLP:MULT:DVPT? <SearchName>

Sets the device/port type to be searched for, for the data link layer.

Parameters:
<DevicePortType> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN | EIGHT | NINE | TEN | ELEVEN | TWELVE | THIRTEEN | FOURTEEN | FIFTEEN
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Device/Port Type" on page 991

SEARch:TRIGger:PCIE:DLLP:MULT:HABS <SearchName>,<VHAbsent>
SEARch:TRIGger:PCIE:DLLP:MULT:HABS? <SearchName>

Sets the state of the absent virtual hiearchies (VH) to be searched for, for the data link layer.

Parameters:
<VHAbsent> ANY | YES | NO
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "VH Absent" on page 992

SEARch:TRIGger:PCIE:DLLP:MULT:MIXT <SearchName>,<MixedType>
SEARch:TRIGger:PCIE:DLLP:MULT:MIXT? <SearchName>

Sets the mixed type presence state to be searched for, for the data link layer.

Parameters:
<MixedType> ANY | YES | NO
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Mixed Type" on page 991

SEARch:TRIGger:PCIE:DLLP:MULT:PHAS <SearchName>,<Phase>
SEARch:TRIGger:PCIE:DLLP:MULT:PHAS? <SearchName>

Sets the phase state to be searched for, for the data link layer.

Parameters:
<Phase> ANY | YES | NO
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Phase" on page 991

SEARch:TRIGger:PCIE:DLLP:MULT:RESA <SearchName>,<ResetA>
SEARch:TRIGger:PCIE:DLLP:MULT:RESA? <SearchName>

Sets the on the value of the A bit to be searched for, for the data link layer.

Parameters:
<ResetA> ANY | ACK | REQUEST
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "A" on page 993

SEARch:TRIGger:PCIE:DLLP:MULT:TLPT <SearchName>,<Type>
SEARch:TRIGger:PCIE:DLLP:MULT:TLPT? <SearchName>

Sets the multi-root type to be searched for, for the data link layer.

Parameters:
<Type> ANY | P | NP | CPL

P
Posted credit.

NP
Non posted credit.

CL
Completion credit.

*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "TLP Type" on page 992

SEARch:TRIGger:PCIE:DLLP:MULT:TYPE <SearchName>,<MRType>
SEARch:TRIGger:PCIE:DLLP:MULT:TYPE? <SearchName>

Sets the multi-root type to be searched for, for the data link layer.

Parameters:
<MRType> MRINIT | MRRESET | MRUPDATEFC | MRINITFC1 | MRINITFC2

*RST: MRINIT

Parameters for setting and query:
<SearchName>

Manual operation: See "MR DLLP" on page 990

SEARch:TRIGger:PCIE:DLLP:MULT:VHFC <SearchName>,<InitVHFC>
SEARch:TRIGger:PCIE:DLLP:MULT:VHFC? <SearchName>

Sets the virtual hierarchies flow control presence state to be searched for, for the data link layer.

Parameters:
<InitVHFC> ANY | YES | NO
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "VH FC" on page 991

SEARch:TRIGger:PCIE:DLLP:MULT:VHGR <SearchName>,<ResetVHGroup>
SEARch:TRIGger:PCIE:DLLP:MULT:VHGR? <SearchName>

Sets the virtual hierarchies group to be searched for, for the data link layer.

Parameters:
<ResetVHGroup> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN | EIGHT | NINE | TEN | ELEVEN | TWELVE | THIRTEEN | FOURTEEN | FIFTEEN
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "VH Group" on page 993

SEARch:TRIGger:PCIE:DLLP:MULT:VLNR <SearchName>,<VirtualLink>
SEARch:TRIGger:PCIE:DLLP:MULT:VLNR? <SearchName>

Sets the virtual link (VL) number to be searched for, for the data link layer.

Parameters:
<VirtualLink> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "VL Number" on page 992

SEARch:TRIGger:PCIE:DLLP:POWM <SearchName>,<PowerMngtType>
SEARch:TRIGger:PCIE:DLLP:POWM? <SearchName>

Sets the power management type to be searched for, for the data link layer.

Parameters:
<PowerMngtType> ANY | ENTERL1 | ENTERL23 | ACTREQL1 | REQUESTACK
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "PM Type" on page 994

SEARch:TRIGger:PCIE:DLLP:SEQ <SearchName>,<Sequence>
SEARch:TRIGger:PCIE:DLLP:SEQ? <SearchName>

Sets the sequence field, indicating what TLPs are affected by the ACK/NAK, to be searched for, for the data link layer.

Parameters:
<Sequence>

Parameters for setting and query:
<SearchName>

Manual operation: See "Sequence" on page 993

SEARch:TRIGger:PCIE:DLLP:TYPE <SearchName>,<Type>
SEARch:TRIGger:PCIE:DLLP:TYPE? <SearchName>

Sets the DLLP t type to be searched for, for the data link layer.

Parameters:
<Type> ANY | MRDLLP | ACK | NAK | INITFC1 | INITFC2 | UPDATEFC | PM | VENDOR
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "DLLP Type" on page 990

SEARch:TRIGger:PCIE:DLLP:VPAT <SearchName>,<VendorPattern>
SEARch:TRIGger:PCIE:DLLP:VPAT? <SearchName>

Sets the vendor pattern to be searched for, for the data link layer.

Parameters:
<VendorPattern> 24-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Vendor Pattern" on page 994

SEARch:TRIGger:PCIE:ERRC:CRC <SearchName>,<CRC16>
SEARch:TRIGger:PCIE:ERRC:CRC? <SearchName>

Enables searching for 16-bit cyclic redundancy check (CRC) errors.

Parameters:
<CRC16> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 994

SEARch:TRIGger:PCIE:ERRC:DISP <SearchName>,<Disparity>
SEARch:TRIGger:PCIE:ERRC:DISP? <SearchName>

Enables searching for disparity errors.

Parameters:
<Disparity> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 994

SEARch:TRIGger:PCIE:ERRC:ECRC <SearchName>,<ECRC>
SEARch:TRIGger:PCIE:ERRC:ECRC? <SearchName>

Enables searching for end-to-end cyclic redundancy checksum (ECRC) errors.

Parameters:
<ECRC> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 994

SEARch:TRIGger:PCIE:ERRC:INVP <SearchName>,<InvalidSymbol>
SEARch:TRIGger:PCIE:ERRC:INVP? <SearchName>

Enables searching for invalid symbol errors.

Parameters:
<InvalidSymbol> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 994

SEARch:TRIGger:PCIE:ERRC:LCRC <SearchName>,<LCRC>
SEARch:TRIGger:PCIE:ERRC:LCRC? <SearchName>

Enables searching for link cyclic redundancy check (LCRC) errors.

Parameters:
<LCRC> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition" on page 994

SEARch:TRIGger:PCIE:ERRC:LENGth <SearchName>,<LENG>
SEARch:TRIGger:PCIE:ERRC:LENGth? <SearchName>

Parameters:
<LENG> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition PCIe Gen 3" on page 995

SEARch:TRIGger:PCIE:ERRC:MALFormed <SearchName>,<MALF>
SEARch:TRIGger:PCIE:ERRC:MALFormed? <SearchName>

Parameters:
<MALF> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition PCIe Gen 3" on page 995

SEARch:TRIGger:PCIE:ERRC:MXPFix <SearchName>,<MXPF>
SEARch:TRIGger:PCIE:ERRC:MXPFix? <SearchName>

Parameters:
<MXPF> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition PCIe Gen 3" on page 995

SEARch:TRIGger:PCIE:ERRC:PFORder <SearchName>,<PFOR>
SEARch:TRIGger:PCIE:ERRC:PFORder? <SearchName>

Parameters:
<PFOR> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition PCIe Gen 3" on page 995

SEARch:TRIGger:PCIE:ERRC:SYCBit <SearchName>,<SYCB>
SEARch:TRIGger:PCIE:ERRC:SYCBit? <SearchName>

Parameters:
<SYCB> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition PCIe Gen 3" on page 995

SEARch:TRIGger:PCIE:ERRC:UKNP <SearchName>,<UnknownPacket>
SEARch:TRIGger:PCIE:ERRC:UKNP? <SearchName>

Parameters:
<UnknownPacket> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition PCIe Gen 3" on page 995

SEARch:TRIGger:PCIE:ERRC:VOORange <SearchName>,<VOOR>
SEARch:TRIGger:PCIE:ERRC:VOORange? <SearchName>

Parameters:
<VOOR> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Error Condition PCIe Gen 3" on page 995

SEARch:TRIGger:PCIE:OSET:SDS <SearchName>,<Format>
SEARch:TRIGger:PCIE:OSET:SDS? <SearchName>

Parameters:
<Format> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordered set condition" on page 994

SEARch:TRIGger:PCIE:OSET:COMP <SearchName>,<Format>
SEARch:TRIGger:PCIE:OSET:COMP? <SearchName>

Enables searching forcompliance pattern ordered sets.

Parameters:
<Format> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordered set condition" on page 994

SEARch:TRIGger:PCIE:OSET:EIDE <SearchName>,<Format>
SEARch:TRIGger:PCIE:OSET:EIDE? <SearchName>

Enables searching for electrical idle exit ordered sets.

Parameters:
<Format> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordered set condition" on page 994

SEARch:TRIGger:PCIE:OSET:EIDL <SearchName>,<Format>
SEARch:TRIGger:PCIE:OSET:EIDL? <SearchName>

Enables searching for electrical idle ordered sets.

Parameters:
<Format> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordered set condition" on page 994

SEARch:TRIGger:PCIE:OSET:FTS <SearchName>,<Format>
SEARch:TRIGger:PCIE:OSET:FTS? <SearchName>

Enables searching for fast training sequence ordered sets.

Parameters:
<Format> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordered set condition" on page 994

SEARch:TRIGger:PCIE:OSET:SKIP <SearchName>,<Format>
SEARch:TRIGger:PCIE:OSET:SKIP? <SearchName>

Enables searching for SKP ordered sets.

Parameters:
<Format> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordered set condition" on page 994

SEARch:TRIGger:PCIE:OSET:TSONe <SearchName>,<Format>
SEARch:TRIGger:PCIE:OSET:TSONe? <SearchName>

Enables searching for training sequence 1 ordered sets.

Parameters:
<Format> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordered set condition" on page 994

SEARch:TRIGger:PCIE:OSET:TSTWo <SearchName>,<Format>
SEARch:TRIGger:PCIE:OSET:TSTWo? <SearchName>

Enables searching for training sequence 2 ordered sets.

Parameters:
<Format> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordered set condition" on page 994

SEARch:TRIGger:PCIE:TLP:ADRT <SearchName>,<AddressType>
SEARch:TRIGger:PCIE:TLP:ADRT? <SearchName>

Sets the address type to be searched for in the transaction layer type.

Parameters:
<AddressType> ANY | X32 | X64
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Address Type" on page 989

SEARch:TRIGger:PCIE:TLP:AT <SearchName>,<AddrTranslation>
SEARch:TRIGger:PCIE:TLP:AT? <SearchName>

Sets the address translation to be searched for in the transaction layer type.

Parameters:
<AddrTranslation> ANY | UT | TRQ | TR | UR
`UT`: untranslated.
`TRQ`: translated request.
`TR`: translated.
`UR`: unrecognised request.
*RST: ANY

Parameters for setting and query:
<SearchName>

SEARch:TRIGger:PCIE:TLP:CFGT <SearchName>,<CfgType>
SEARch:TRIGger:PCIE:TLP:CFGT? <SearchName>

Sets the configuration type to be searched for in the transaction layer type.

Parameters:
<CfgType> ANY | TYPE0 | TYPE1
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Type" on page 989

SEARch:TRIGger:PCIE:TLP:CPID <SearchName>,<CompleterID>
SEARch:TRIGger:PCIE:TLP:CPID? <SearchName>

Sets the completer ID to be searched for in the transaction layer type.

Parameters:
<CompleterID> 16-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Completer ID" on page 990

SEARch:TRIGger:PCIE:TLP:CPLS <SearchName>,<CplStatus>
SEARch:TRIGger:PCIE:TLP:CPLS? <SearchName>

Sets the completion status to be searched for in the transaction layer type.

Parameters:
<CplStatus> ANY | SUCCESS | UNSUPPORTED | RETRY | ABORT
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Status" on page 990

SEARch:TRIGger:PCIE:TLP:DEID <SearchName>,<DeviceID>
SEARch:TRIGger:PCIE:TLP:DEID? <SearchName>

Sets the device ID to be searched for in the transaction layer type.

Parameters:
<DeviceID> 16-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Device ID" on page 989

SEARch:TRIGger:PCIE:TLP:MERW <SearchName>,<MemRW>
SEARch:TRIGger:PCIE:TLP:MERW? <SearchName>

Sets the read/ write type to be searched for in the transaction layer type.

Parameters:
<MemRW> ANY | READ | WRITE
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Read/Write" on page 989

SEARch:TRIGger:PCIE:TLP:MSGC <SearchName>,<MessageCode>
SEARch:TRIGger:PCIE:TLP:MSGC? <SearchName>

Sets the message code to be searched for in the transaction layer type.

Parameters:
<MessageCode> 8-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Message Code" on page 989

SEARch:TRIGger:PCIE:TLP:MSGR <SearchName>,<MsgRouting>
SEARch:TRIGger:PCIE:TLP:MSGR? <SearchName>

Sets the message routing type to be searched for in the transaction layer type.

Parameters:
<MsgRouting> ANY | ROOTCOMPLEX | ADDRESS | DEVICEID | DEViceid | BROADCAST | LOCAL | GATHERED

DEVICEID = DEViceid

*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Routing" on page 989

SEARch:TRIGger:PCIE:TLP:ORDE <SearchName>,<Ordering>
SEARch:TRIGger:PCIE:TLP:ORDE? <SearchName>

Sets the ordering type to be searched for in the transaction layer type.

Parameters:
<Ordering> ANY | STRONG | RELAX

*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Ordering" on page 988

SEARch:TRIGger:PCIE:TLP:REID <SearchName>,<RequesterID>
SEARch:TRIGger:PCIE:TLP:REID? <SearchName>

Sets the requester ID to be searched for in the transaction layer type.

Parameters:
<RequesterID> 16-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Requester ID" on page 989

SEARch:TRIGger:PCIE:TLP:SNOO <SearchName>,<Snoop>
SEARch:TRIGger:PCIE:TLP:SNOO? <SearchName>

Sets the snoop state to be searched for in the transaction layer type.

Parameters:
<Snoop> ANY | YES | NO
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "Snoop" on page 989

SEARch:TRIGger:PCIE:TLP:SNUM <SearchName>,<SequenceNumber>
SEARch:TRIGger:PCIE:TLP:SNUM? <SearchName>

Sets the sequence numbe to be searched for in the transaction layer type.

Parameters:
<SequenceNumber> 12-bit pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The string parameter accepts the bit value X (don't care).

Parameters for setting and query:
<SearchName>

Manual operation: See "Sequence Number" on page 988

SEARch:TRIGger:PCIE:TLP:TCHN <SearchName>,<TrafficClass>
SEARch:TRIGger:PCIE:TLP:TCHN? <SearchName>

Sets the traffic class to be searched for in the transaction layer type.

Parameters:
<TrafficClass> ANY | ZERO | ONE | TWO | THREE | FOUR | FIVE | SIX | SEVEN
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "TC" on page 988

SEARch:TRIGger:PCIE:TLP:TYPE <SearchName>,<Type>
SEARch:TRIGger:PCIE:TLP:TYPE? <SearchName>

Sets the transaction type to be searched for in the transaction layer type.

Parameters:
<Type> ANY | MEM | IO | CFG | MSG | CPL | FETCH | SWAP | CAS
*RST: ANY

Parameters for setting and query:
<SearchName>

Manual operation: See "TLP" on page 988

SEARch:TRIGger:PCIE:TYPE <SearchName>,<Type>
SEARch:TRIGger:PCIE:TYPE? <SearchName>

Parameters:
<Type> TLP | DLLP | ORD | ERR
*RST: TLP

Parameters for setting and query:
<SearchName>

Manual operation: See "Searches for PCI express" on page 987

26.18.26.7 Search results

In all `SEARch:RESult:PCIE:PACKet<m>` commands, the suffix <m> selects the frame number in the list of search results.

In search result commands, you have to specify the `<SearchName>` parameter. It is a string parameter that contains the search definition name.

For a description of the returned values, see the corresponding commands in Section 26.18.26.5, "Decode results", on page 2568.

SEARch:RESult:PCIE:PACKet<pa>:ADDR? 2593
SEARch:RESult:PCIE:PACKet<pa>:CPID? 2593
SEARch:RESult:PCIE:PACKet<pa>:CPS? 2593
SEARch:RESult:PCIE:PACKet<pa>:DATA? 2593
SEARch:RESult:PCIE:PACKet<pa>:DFC? 2594
SEARch:RESult:PCIE:PACKet<pa>:FCOunt? 2594
SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:FVAL? 2594
SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:STATus? 2594
SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:TYPE? 2595
SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:VAL? 2595
SEARch:RESult:PCIE:PACKet<pa>:HFC? 2595
SEARch:RESult:PCIE:PACKet<pa>:LEN? 2596
SEARch:RESult:PCIE:PACKet<pa>:RQID? 2596
SEARch:RESult:PCIE:PACKet<pa>:SEQN? 2596
SEARch:RESult:PCIE:PACKet<pa>:STARt? 2596
SEARch:RESult:PCIE:PACKet<pa>:STATe? 2597
SEARch:RESult:PCIE:PACKet<pa>:STOP? 2597
SEARch:RESult:PCIE:PACKet<pa>:TAG? 2597
SEARch:RESult:PCIE:PACKet<pa>:TYPE? 2598
SEARch:RESult:PCIE:PCOunt? 2598

SEARch:RESult:PCIE:PACKet<pa>:ADDR? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Address>

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:CPID? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<CompleterID> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:CPS? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<CplStatus> RESERVED | SC | UR | CRS | CA
*RST: RESERVED

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:DATA? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Data>

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:DFC? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<DataFC> Range: 0 to 4095
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:FCOunt? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<FieldCount> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:FVAL? <SearchName>

Suffix:
<pa> *

<fl> *

Query parameters:
<SearchName> String parameter

Return values:
<ValueFormatted> String parameter

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:STATus? <SearchName>

Suffix:
<pa> *

<fl> *

Query parameters:
<SearchName>

Return values:
<State> OK | MALF | CRC16 | ECRC | LCRC | LEN | POE | MEE | UNCorrelated | FCRC | FPERror | UNKNown | OUTRange | INComplete | SYNCerror
*RST: OK

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:TYPE? <SearchName>

Suffix:
<pa> *

<fl> *

Query parameters:
<SearchName>

Return values:
<Type>

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:VAL? <SearchName>

Suffix:
<pa> *

<fl> *

Query parameters:
<SearchName>

Return values:
<FieldValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:HFC? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<HeaderFC> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:LEN? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Length> Range: 0 to 1023
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:RQID? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<RequesterID> Range: 0 to 65.535E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:SEQN? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<SequenceNumber> Range: 0 to 4095
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:STARt? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:STATe? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<State> OK | MALF | CRC16 | ECRC | LCRC | LEN | POE | MEE | UNCorrelated | FCRC | FPERror | UNKNown | OUTRange | INComplete | SYNCerror
*RST: OK

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:STOP? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:TAG? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Tag> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:PCIE:PACKet<pa>:TYPE? <SearchName>

Suffix:
<pa> *

Query parameters:
<SearchName>

Return values:
<Type> MRD32 | MRD64 | MRDLK32 | MRDLK64 | MWR32 | MWR64 | IORD | IOWR | CFGRD0 | CFGWR0 | CFGRD1 | CFGWR1 | MSG | MSGD | CPL | CPLD | CPLLK | CPLDLK | FA32 | FA64 | SWP32 | SWP64 | CAS32 | CAS64 | LPRFX | EPRFX | ACK | NAK | PMEL1 | PMEL23 | PMASRL1 | PMRA | VENDS | IFC1P | IFC1NP | IFC1CPL | IFC2P | IFC2NP | IFC2CPL | UPDFCP | UPDFCNP | UPDFCCPL | MRUPDFC | MRIFC1 | MRIFC2 | MRINIT | MRRESET | UNK | SKPOS | EIOS | FTSOS | TS1OS | TS2OS | EIEOS | COMPL | MCOMPL | DCOMPL | UDEF | IDLE | SDS | EDB | EDS | SDAT | SCTR | PMUX | UNKTlp | UNKDllp | SINV

*RST: UNK

Usage: Query only

SEARch:RESult:PCIE:PCOunt? <SearchName>

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

26.18.27 DDR (option R&S RTP-K91/K93/K94/K95)

- Configuration....2598
- DDR5 settings....2604
- Decode results....2607
- Search settings....2611
- Search results....2616

26.18.27.1 Configuration

In all `BUS<b>:DDR` commands, the suffix <b> selects the serial bus.

BUS<b>:DDR:STANdard 2599
BUS<b>:DDR:DATA:HYSTeresis 2599
BUS<b>:DDR:DATA:SOURce 2600
BUS<b>:DDR:DATA:THReshold 2600
BUS<b>:DDR:STRBe:HYSTeresis 2600
BUS<b>:DDR:STRBe:SOURce 2600
BUS<b>:DDR:STRBe:THReshold 2601
BUS<b>:DDR:RDQS:HYSTeresis 2601
BUS<b>:DDR:RDQS:SOURce 2601
BUS<b>:DDR:RDQS:THReshold 2602
BUS<b>:DDR:WCK:HYSTeresis 2602
BUS<b>:DDR:WCK:SOURce 2602
BUS<b>:DDR:WCK:THReshold 2603
BUS<b>:DDR:BITRate 2603
BUS<b>:DDR:MINGap 2603
BUS<b>:DDR:STRBe:THLower 2604
BUS<b>:DDR:STRBe:THUPper 2604

BUS<b>:DDR:STANdard <Standard>

Selects the DDR standard.

Suffix:
<b> 1..4

Parameters:
<Standard> DDR3 | | DDR4 | DDR5 | LPDDR5

`DDR3`: requires option R&S RTP-K91.
`DDR4`: requires option R&S RTP-K93.
`DDR5`: requires option R&S RTP-K94.
`LPDDR5`: requires option R&S RTP-K95.

*RST: DDR3

Usage: Asynchronous command

Manual operation: See "Variant" on page 1000

BUS<b>:DDR:DATA:HYSTeresis <DataHysteresis>

Sets a value for the hysteresis of the data.

Suffix:
<b> 1..4

Parameters:
<DataHysteresis> Range: 0 to 10
Increment: 0.01
*RST: 0.15
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 1002

BUS<b>:DDR:DATA:SOURce <DataSource>

Selects the source for the data output signal.

Suffix:
<b> 1..4

Parameters:
<DataSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

*RST: C1W1

Usage: Asynchronous command

Manual operation: See "DQ" on page 1000

BUS<b>:DDR:DATA:THReshold <DataThreshold>

Sets the threshold value for the digitization of the data line.

Suffix:
<b> 1..4

Parameters:
<DataThreshold> Range: -10 to 10
Increment: 0.01
*RST: 0.75
Default unit: V

Usage: Asynchronous command

Manual operation: See "DQ threshold, DQS threshold" on page 1002

BUS<b>:DDR:STRBe:HYSTeresis <StrobeHyst>

Sets a value for the hysteresis of the strobe.

Suffix:
<b> 1..4

Parameters:
<StrobeHyst> Range: 0 to 10
Increment: 0.01
*RST: 0.35
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 1002

BUS<b>:DDR:STRBe:SOURce <StrobeSource>

Selects the source for the strobe signal.

Suffix:
<b> 1..4

Parameters:
<StrobeSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15
*RST: C2W1

Usage: Asynchronous command

Manual operation: See "DQS" on page 1001

BUS<b>:DDR:STRBe:THReshold <StrobeThres>

Sets the threshold value for the digitization of the strobe line.

Suffix:
<b> 1..4

Parameters:
<StrobeThres> Range: -10 to 10
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DQ threshold, DQS threshold" on page 1002

BUS<b>:DDR:RDQS:HYSTeresis <RDQSHysteresis>

Sets a value for the hysteresis of the read strobe signal.

Suffix:
<b> 1..4

Parameters:
<RDQSHysteresis> Range: 0 to 10
Increment: 0.01
*RST: 0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 1002

BUS<b>:DDR:RDQS:SOURce <RDQSSource>

Selects the source for the read strobe signal.

Suffix:
<b> 1..4

Parameters:
<RDQSSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Usage: Asynchronous command

Manual operation: See "RDQS" on page 1001

BUS<b>:DDR:RDQS:THReshold <RDQSThreshold>

Sets the threshold value for the digitization of the read strobe line.

Suffix:
<b> 1..4

Parameters:
<RDQSThreshold>
Range: -10 to 10
Increment: 0.01
*RST: -0.3
Default unit: V

Usage: Asynchronous command

Manual operation: See "DQ threshold, DQS threshold" on page 1002

BUS<b>:DDR:WCK:HYSTeresis <WCKHysteresis>

Sets a value for the hysteresis of the write clock signal.

Suffix:
<b> 1..4

Parameters:
<WCKHysteresis>
Range: 0 to 10
Increment: 0.01
*RST: 0.01
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 1002

BUS<b>:DDR:WCK:SOURce <WCKSource>

Selects the source for the write clock signal.

Suffix:
<b> 1..4

Parameters:
<WCKSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Usage: Asynchronous command

Manual operation: See "WCK" on page 1001

BUS<b>:DDR:WCK:THReshold <WCKThreshold>

Sets the threshold value for the digitization of the write clock line.

Suffix:
<b> 1..4

Parameters:
<WCKThreshold>
Range: -10 to 10
Increment: 0.01
*RST: 0.25
Default unit: V

Usage: Asynchronous command

Manual operation: See "DQ threshold, DQS threshold" on page 1002

BUS<b>:DDR:BITRate <Bitrate>

Declares the nominal bit rate of the data signal for the DDR eye diagram analysis.

Suffix:
<b> 1..4

Parameters:
<Bitrate>
Range: 1000 to 10E+9
Increment: 100E+3
*RST: 800E+6
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate (for eye diagram)" on page 1004

BUS<b>:DDR:MINGap <MinGapTime>

Sets the minimum duration of a gap. Any inactivity greater than this time will be interpreted as a gap and lead to a resynchronization to the signal.

Suffix:
<b> 1..4

Parameters:
<MinGapTime>
Range: 1E-12 to 1
Increment: 10E-12
*RST: 10E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "DQ min gap" on page 1005

BUS<b>:DDR:STRBe:THLower <StrobeLowThres>

Sets the lower threshold value for the digitization of the DQS strobe lane.

Suffix:
<b> 1..4

Parameters:
<StrobeLowThres> Range: -10 to 0
Increment: 0.01
*RST: -0.25
Default unit: V

Usage: Asynchronous command

Manual operation: See "DQS upper/lower threshold" on page 1003

BUS<b>:DDR:STRBe:THUPper <StrobeUppThres>

Sets the upper threshold value for the digitization of the DQS strobe lane.

Suffix:
<b> 1..4

Parameters:
<StrobeUppThres> Range: 0 to 10
Increment: 0.01
*RST: 0.25
Default unit: V

Usage: Asynchronous command

Manual operation: See "DQS upper/lower threshold" on page 1003

26.18.27.2 DDR5 settings

BUS<b>:DDR:CS:HYSTeresis <CSHysteresis>

Sets the hysteresis for the CS line.

Suffix:
<b> 1..4

Parameters:
<CSHysteresis> Range: 0 to 10
Increment: 0.01
*RST: 0.05
Default unit: V

Usage: Asynchronous command

Manual operation: See "CA4 hysteresis, CS hysteresis" on page 1003

BUS<b>:DDR:CS:THReshold <CSThreshold>

Sets the threshold for the CS line.

Suffix:
<b> 1..4

Parameters:
<CSThreshold> Range: -10 to 10
Increment: 0.01
*RST: 0.8
Default unit: V

Usage: Asynchronous command

Manual operation: See "CA4 threshold, CS threshold" on page 1003

BUS<b>:DDR:CS:SOURce <CSSource>

Sets the channel for the chip select singal.

Only available, if `BUS<b>:DDR:STANdard` is seto to `DDR5`.

Suffix:
<b> 1..4

Parameters:
<CSSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Usage: Asynchronous command

BUS<b>:DDR:CA4:HYSTeresis <CA4Hysteresis>

Sets a hysteresis for the CA4 line of DDR5.

Suffix:
<b> 1..4

Parameters:
<CA4Hysteresis> Range: 0 to 10
Increment: 0.01
*RST: 0.05
Default unit: V

Usage: Asynchronous command

Manual operation: See "CA4 hysteresis, CS hysteresis" on page 1003

BUS<b>:DDR:CA4:THReshold <CA4Threshold>

Sets a threshold for the CA4 line of DDR5.

Suffix:
<b> 1..4

Parameters:
<CA4Threshold> Range: -10 to 10
Increment: 0.01
*RST: 0.8
Default unit: V

Usage: Asynchronous command

Manual operation: See "CA4 threshold, CS threshold" on page 1003

BUS<b>:DDR:CA4:SOURce <CA4Source>

Sets the channel for the four-cylcle command/address (CA4) singal.

Only available, if `BUS<b>:DDR:STANdard` is seto to `DDR5`.

Suffix:
<b> 1..4

Parameters:
<CA4Source> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Usage: Asynchronous command

Manual operation: See "CA4" on page 1001

BUS<b>:DDR:WPReamble <DDR5WritePreamble>

Selects the write preamble type tht is used to indicate the start of a write operation.

Suffix:
<b> 1..4

Parameters:
<DDR5WritePreamble> T2CK | T3CK | T4CK
*RST: T2CK

Usage: Asynchronous command

Manual operation: See "Write preamble type" on page 1005

BUS<b>:DDR:RPReamble <DDR5ReadPreamble>

Selects the read preamble type tht is used to indicate the start of a read operation.

Suffix:
<b> 1..4

Parameters:
<DDR5ReadPreamble> T1CK | T2CK | T3CK | T4CK
*RST: T2CK

Usage: Asynchronous command

Manual operation: See "Read preamble type" on page 1005

BUS<b>:DDR:CASWrite <CASLatencyWrite>

Sets the CAS write latency (CWL), the delay between the time a write command is issued to the memory and the time the data is actually written to the memory cells. It is measured in clock cycles.

Suffix:
<b> 1..4

Parameters:
<CASLatencyWrite> Range: 0 to 4.29497E+9
Increment: 1
*RST: 40

Usage: Asynchronous command

Manual operation: See "Write CAS latency (CWL)" on page 1005

BUS<b>:DDR:CASRead <CASLatencyRead>

Sets the CAS read latency (CL). It refers to the number of clock cycles that elapse between the time a read command is issued to the memory and the time the requested data is available on the output pins.

Suffix:
<b> 1..4

Parameters:
<CASLatencyRead> Range: 0 to 4.29497E+9
Increment: 1
*RST: 40

Usage: Asynchronous command

Manual operation: See "Read CAS latency (CL)" on page 1005

26.18.27.3 Decode results

In all `BUS<b>:DDR:RESult:FRAMe<fr>` commands, the suffix <b> selects the serial bus and the suffix <fr> selects the frame number in the decode table.

BUS<b>:DDR:RESult:FCOunt? 2608
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:FVAL? 2608
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STARt? 2608
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STATus? 2609
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STOP? 2609

BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:VAL? 2609
BUS<b>:DDR:RESult:FRAMe<fr>:NWRDs? 2610
BUS<b>:DDR:RESult:FRAMe<fr>:STARt? 2610
BUS<b>:DDR:RESult:FRAMe<fr>:STATe? 2610
BUS<b>:DDR:RESult:FRAMe<fr>:STOP? 2611
BUS<b>:DDR:RESult:FRAMe<fr>:TYPE? 2611

BUS<b>:DDR:RESult:FCOunt?

Returns the number of decoded frames in the selected serial bus.

Suffix:
<b> 1..4

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:FVAL?

Returns the formatted value of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<FrameByteValue>

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STARt?

Returns the start time of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:

<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STATus?

Returns the status of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:

<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:

<State> OK | UNKNown | INComplete | LENGth
*RST: OK

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STOP?

Returns the stop time of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:

<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:

<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:VAL?

Returns the value of the field with the selected field number within the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *
Selects the frame number.

<fl> *
Selects the field number.

Return values:
<FrameByteValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:NWRDs?

Returns the number of words for the selected serial bus and frame number.

Suffix:
<b> 1..4

<fr> *

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:STARt?

Returns the start time of the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4

<fr> *

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:STATe?

Returns the status of the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4
<fr> *

Return values:
<State> OK | UNKNown | INComplete | LENGth
*RST: OK

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:STOP?

Returns the stop time of the frame with the selected frame number (for the selected serial bus).

Suffix:
<b> 1..4
<fr> *

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

BUS<b>:DDR:RESult:FRAMe<fr>:TYPE?

Returns the frame type for the selected serial bus and frame number.

Suffix:
<b> 1..4
<fr> *

Return values:
<FrameType> READ | WRITe | RDNC | WRNC | UNKNown
RDNC: read data not continue
WRNC: write data not continue
*RST: UNKNown

Usage: Query only

26.18.27.4 Search settings

There are two commands for each parameter, that you can use for defining the DDR search settings.

For example, to set the *Frame type =Read > Field =Data >Data* value you can use one of the following commands:

- `SEARch:TRIGger:DDR:FRAMe1:ENABle:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SEARch:TRIGger:DDR:DMIN "Read", "Data", 01100`
  Defines the parameter by using the frame and field name.

SEARch:TRIGger:DDR:ERENable....2612
SEARch:TRIGger:DDR:ERRor<m>:ENABle....2612
SEARch:TRIGger:DDR:FIENable....2613
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:ENABle....2613
SEARch:TRIGger:DDR:FRENable....2613
SEARch:TRIGger:DDR:DMAX....2613
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMAX....2613
SEARch:TRIGger:DDR:DMIN....2614
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMIN....2614
SEARch:TRIGger:DDR:DOPerator....2614
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DOPerator....2614
SEARch:TRIGger:DDR:FRENable....2615
SEARch:TRIGger:DDR:FRAMe<fr>:ENABle....2615
SEARch:TRIGger:DDR:IMAX....2615
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMAX....2615
SEARch:TRIGger:DDR:IMIN....2615
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMIN....2615
SEARch:TRIGger:DDR:IOPerator....2616
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IOPerator....2616

SEARch:TRIGger:DDR:ERENable <SearchName>,<ErrorName>,<Enabler>
SEARch:TRIGger:DDR:ERRor<m>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:DDR:ERRor<m>:ENABle? <SearchName>

Defines the error type to be searched for. You can search for all error types in parallel.

Suffix:
<m> *
Specifies the error.

Parameters:
<Enable> OFF | ON
*RST: ON

Parameters for setting and query:
<SearchName> The following errors are available:
`Frame Incomplete`
`Length Error`

Example: `SEARch:TRIGger:DDR:ERRor1:ENABle ON`
Enables searching for Frame Incomplete error.
`SEARch:TRIGger:DDR:ERENable "Length Error",ON`
Enables searching for Length Error.

Manual operation: See "Error type" on page 1007

SEARch:TRIGger:DDR:FIENable <SearchName>,<Frame>,<Field>,<Enabler>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:ENABle
<SearchName>,<CondEnabler>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:ENABle? <SearchName>

Enables or disables the specific field within the defined frame to be filtered.

Suffix:
<fr> *

<fl> *

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Parameters for setting and query:
<SearchName>

Manual operation: See "Set details" on page 1008

SEARch:TRIGger:DDR:FRENable <SearchName>,<Frame>,<Enabler>

Setting parameters:
<SearchName>

<Frame>

<Enabler> OFF | ON

Usage: Setting only

Manual operation: See "Frame type" on page 1008

SEARch:TRIGger:DDR:DMAX <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMAX <SearchName>,<Data_Max>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMAX? <SearchName>

Sets the end value of a data pattern range if `SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DOPerator` is set to `INRange` or `OORange`.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Max>

Parameters for setting and query:
<SearchName>

Manual operation: See "Value" on page 1009

SEARch:TRIGger:DDR:DMIN <SearchName>,<Frame>,<Field>,<Data>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMIN <SearchName>,<Data_Min>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMIN? <SearchName>

Specifies the data pattern to be searched, or sets the start value of a data pattern range to be searched.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Min> Specifies the name of the generic trigger setting frame.

Parameters for setting and query:
<SearchName>

Manual operation: See "Value" on page 1009

SEARch:TRIGger:DDR:DOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DOPerator
<SearchName>,<Data_Operator>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DOPerator? <SearchName>

Sets the operator to set a specific data pattern to be searched in the selected field of the selected frame.

Suffix:
<fr> *

<fl> *

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, Not equal, Less than, Less than or equal, Greater than, Greater than or equal. These conditions require one endpoint value to be set using `SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMIN`.

INRange | OORange
In range, out of range. These conditions require a range of endpoint values to be set using `SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMIN` and `SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMAX`.

*RST: EQUal

Parameters for setting and query:
<SearchName>

Manual operation: See "Value" on page 1009

SEARch:TRIGger:DDR:FRENable <SearchName>,<Frame>,<Enabler>
SEARch:TRIGger:DDR:FRAMe<fr>:ENABle <SearchName>,<Enable>
SEARch:TRIGger:DDR:FRAMe<fr>:ENABle? <SearchName>

Enables or disables the specific frame to be searched for.

Suffix:
<fr> *

Parameters:
<Enable> OFF | ON
*RST: OFF

Parameters for setting and query:
<SearchName> The following frames are available:
`Read`
`Write`
`Read NC`
`Write NC`

Manual operation: See "Frame type" on page 1008

SEARch:TRIGger:DDR:IMAX <SearchName>,<Frame>,<Field>,<Index>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMAX <SearchName>,<Index_Max>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMAX? <SearchName>

Sets the end value of the bit index range (data position range), if `SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IOPerator` is set to `INRange` or `RANGe`.

Suffix:
<fr> *

<fl> *

Parameters:
<Index_Max> Range: 1 to 65.534E+3
Increment: 1
*RST: 65.534E+3

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 1009

SEARch:TRIGger:DDR:IMIN <SearchName>,<Frame>,<Field>,<Index>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMIN <SearchName>,<Index_Min>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMIN? <SearchName>

Sets the index at which the data is to be searched, or sets the start value of an index range in which the data is to be searched.

Suffix:
<fr> *

<fl> *

Parameters:

<Index_Min> Specifies the index value or the start value of an index range within the field.
The index range, increment and *RST values depend on the field type.

Range: 1 to 65.534E+3
Increment: 1
*RST: 1

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 1009

SEARch:TRIGger:DDR:IOPerator <SearchName>,<Frame>,<Field>,<Operator>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IOPerator
<SearchName>,<Index_Operator>
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IOPerator? <SearchName>

Sets the operator for the index for searching in the selected field of the selected frame.

Suffix:

<fr> *

<fl> *

Parameters:

<Index_Operator> EQUal | INRange | RANGe

EQUal
This condition requires one endpoint value to be set using `SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMIN`.

INRange | RANGe
This condition requires a range of endpoint values to be set using `SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMIN` and `SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMAX`.

*RST: INRange

Parameters for setting and query:
<SearchName>

Manual operation: See "Index" on page 1009

26.18.27.5 Search results

In all `SEARch:RESult:DDR:FRAMe<m>` commands, the suffix <m> selects the frame number in the list of search results.

SEARch:RESult:DDR:FCOunt? 2617
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:FVAL? 2617
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STARt? 2617
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STATus? 2618

SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STOP?....2618
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:VAL?....2618
SEARch:RESult:DDR:FRAMe<fr>:NWRDs?....2619
SEARch:RESult:DDR:FRAMe<fr>:STARt?....2619
SEARch:RESult:DDR:FRAMe<fr>:STATe?....2620
SEARch:RESult:DDR:FRAMe<fr>:STOP?....2620
SEARch:RESult:DDR:FRAMe<fr>:TYPE?....2620

SEARch:RESult:DDR:FCOunt? <SearchName>

Returns the number of decoded frames in the search result.

Query parameters:
<SearchName>

Return values:
<FrameCount> Range: 0 to 100E+3
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:FVAL? <SearchName>

Returns the formatted value of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<BteFormattedVal>

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STARt? <SearchName>

Returns the start time of the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STATus? <SearchName>

Returns the field status of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *

Query parameters:
<SearchName>

Return values:
<State> OK | UNKNown | INComplete | LENGth
*RST: OK

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STOP? <SearchName>

Returns the stop time of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:VAL? <SearchName>

Returns the value of the field with the selected field number within the frame with the selected frame number within the search result.

Suffix:
<fr> *

<fl> *
Selects the field number.

Query parameters:
<SearchName>

Return values:
<ByteValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:NWRDs? <SearchName>

Returns the number of words of the selected frame in the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<NumWords> Range: 0 to 4.29497E+9
Increment: 1
*RST: 0

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:STARt? <SearchName>

Returns the start time of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Start> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:STATe? <SearchName>

Returns the status of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<State> OK | UNKNown | INComplete | LENGth
*RST: OK

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:STOP? <SearchName>

Returns the stop time of the frame with the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<Stop> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0
Default unit: s

Usage: Query only

SEARch:RESult:DDR:FRAMe<fr>:TYPE? <SearchName>

Returns the frame type for the selected frame number within the search result.

Suffix:
<fr> *

Query parameters:
<SearchName>

Return values:
<FrameType> READ | WRITe | UNKNown | WRNC | RDNC
Read, write or unknown data
RDNC: read data not continue
WRNC: write data not continue
*RST: UNKNown

Usage: Query only

26.19 Mixed signal option (MSO, R&S RTP-B1)

This chaptes decribes the remote commands of MSO option R&S RTP-B1.

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Digital channels....2621
- Parallel bus configuration....2624
- Digital resolution....2632
- Trigger settings for digital signals and parallel buses....2633
- MSO data....2645

26.19.1 Digital channels

All `DIGital:` commands affect only the settings of the first MSO bus (Bus1). The settings of all other parallel buses (Bus 2, 3,4) remain unchanged.

DIGital<m>:DESKew....2621
DIGital<m>:DISPlay....2622
DIGital<m>:HYSTeresis....2622
DIGital<m>:LABel....2623
DIGital<m>:SIZE....2623
DIGital<m>:TECHnology....2623
DIGital<m>:THReshold....2624
DIGital<m>:THCoupling....2624

DIGital<m>:DESKew <Deskew>

Sets an individual delay for each digital channel to time-align it with other digital channels. The deskew value compensates delays that are known from the circuit specifics or caused by the different length of cables.

The setting affects only the settings of the first MSO bus (Bus1). You can set the deskew for all buses with `BUS<b>:PARallel:BIT<n>:DESKew`.

Suffix:

<m> 0..15
Number of the digital channel

Parameters:

<Deskew>
Range: -200.0E-09 to 200.0E-09
Increment: 200.0E-12
*RST: 0
Default unit: s

Manual operation: See "Skew" on page 1019

DIGital<m>:DISPlay <Display>

Enables or disables the indicated digital channel, displays it, and enables the parallel Bus1 if the bus was disabled. That is, `BUS<b>:PARallel:DISPlay:SHDI` and `BUS<b>:PARallel:STATe` are set to ON automatically.

If another active bus already uses the selected digital channel, the instrument disables the other bus to avoid conflicts.

For Bus1, the `DIG:DISP` command has the same effect as `BUS<b>:PARallel:BIT<n>[:STATe]`. To enable digital channels for buses 2, 3 and 4, use the `BUS:PAR:BIT[:STAT]` command.

Suffix:

<m>
0..15
Number of the digital channel

Parameters:

<Display>
ON | OFF

DIGital<m>:HYSTeresis <Hysteresis>

Defines the size of the hysteresis to avoid the change of signal states due to noise for the channel group to which the indicated digital channel belongs.

The setting affects only the settings of the first MSO bus (Bus1). You can set the hysteresis for all buses with `BUS<b>:PARallel:HYSTeresis<n>`.

See also: `DIGital<m>:THCoupling`

Suffix:

<m>
0..15
Number of the digital channel
Channel groups: 0..3; 4..7; 8..11; 12..15

Parameters:

<Hysteresis>
MAXIMUM | MAXimum | ROBUST | ROBust | NORMAL | NORMal

MAXIMUM = MAXimum
Maximum value that is possible and useful for the signal and its settings

ROBUST = ROBust
Different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system.

NORMAL = NORMal
The instrument sets a value suitable for the signal and its settings.

Manual operation: See "Hysteresis" on page 1016

DIGital<m>:LABel <Label>

Sets a name for the indicated digital channel. The name is displayed in the diagram.

The setting affects only the settings of the first MSO bus (Bus1). You can set the label for all buses with `BUS<b>:PARallel:BIT<n>:LABel`.

Suffix:
<m> 0..15
Number of the digital channel

Parameters:
<Label> String containing the channel name

DIGital<m>:SIZE <Size>

Sets the height of the line display for all digital channels.

Suffix:
<m> 0..15
The suffix is not relevant.

Parameters:
<Size> Signal height in percent of the diagram height
Range: 2 to 24
Default unit: %

DIGital<m>:TECHnology <Technology>

Selects the threshold voltage for various types of integrated circuits and applies it to all digital channels.

The setting affects only the settings of the first MSO bus (Bus1). You can set the technology value for all buses with `BUS<b>:PARallel:TECHnology`.

Suffix:
<m> 0..15
The suffix is irrelevant.

Parameters:
<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual
See `BUS<b>:PARallel:TECHnology`

Manual operation: See "Technology, Threshold" on page 1014

DIGital<m>:THReshold <Value>

Sets the logical threshold for the channel group to which the indicated digital channel belongs. The setting affects only the settings of the first MSO bus (Bus1).

The setting affects only the settings of the first MSO bus (Bus1). You can set the threshold for all buses with `BUS<b>:PARallel:TECHnology` or `BUS<b>:PARallel:THReshold<n>`.

See also: `DIGital<m>:THCoupling`

Suffix:
<m> 0..15
Number of the digital channel.
Channel groups: 0..3; 4..7; 8..11; 12..15

Parameters:
<Value> Range: -8.0 to 8.0
Increment: 200.0e-12
*RST: 0
Default unit: V

Manual operation: See "Technology, Threshold" on page 1014

DIGital<m>:THCoupling <State>

Sets the threshold and the hysteresis for all digital channels of parallel bus 1 to the same value.

The command `BUS<b>:PARallel:THCoupling` is used to set all buses.

Suffix:
<m> 0..15
The suffix is irrelevant.

Parameters:
<State> ON | OFF

Manual operation: See "Couple thresholds" on page 1015

26.19.2 Parallel bus configuration

The following commands configure the four parallel buses of R&S RTP-B1.

BUS<b>:PARallel:STATe....2625
BUS<b>:PARallel:BIT<n>[:STATe]....2625
BUS<b>:PARallel:THReshold<n>....2626
BUS<b>:PARallel:TECHnology....2626
BUS<b>:PARallel:THCoupling....2627
BUS<b>:PARallel:HYSTeresis<n>....2627
BUS<b>:PARallel:BIT<n>:DESKew....2628
BUS<b>:PARallel:DESoffset....2628
BUS<b>:PARallel:BIT<n>:LABel....2628

BUS<b>:PARallel:DATA:FORMat....2629
BUS<b>:PARallel:DISPlay:SHDI....2629
BUS<b>:PARallel:DISPlay:SHBU....2630
BUS<b>:PARallel:DISPlay:BTYP....2630
BUS<b>:PARallel:CLON....2630
BUS<b>:PARallel:CLOCk....2631
BUS<b>:PARallel:CLSLope....2631
BUS<b>:PARallel:CLEar....2631
BUS<b>:PARallel:DECTable:SHOW....2631
BUS<b>:PARallel:DECTable:COUNt?....2632
BUS<b>:PARallel:DECTable:DATA?....2632

BUS<b>:PARallel:STATe <Enable>

Enables or disables the indicated parallel bus. The threshold settings of the bus take effect for all *active* parallel buses.

Dependencies: At least one digital channel must be enabled for the selected bus, otherwise the command does not work. The bus is enabled automatically if the first digital channel is enabled with `BUS<b>:PARallel:BIT<n>[:STATe]` or `DIGital<m>:DISPlay`.

Suffix:
<b> 1..4
Selects the parallel bus.

Parameters:
<Enable> OFF | ON
*RST: OFF

Manual operation: See "Enable bus" on page 1014

BUS<b>:PARallel:BIT<n>[:STATe] <Assigned>

Assigns the selected digital channel to the indicated bus, displays it, and enables the bus if the bus was disabled. That is, `BUS<b>:PARallel:DISPlay:SHDI` and `BUS<b>:PARallel:STATe` are set to ON automatically.

If another active bus already uses the selected digital channel, the instrument disables the other bus to avoid conflicts.

For parallel bus 1, the `BUS:PAR:BIT[:STATe]` command has the same effect as `DIGital<m>:DISPlay`.

Suffix:
<b> 1..4
Selects the parallel bus.

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:
<Assigned> OFF | ON
*RST: OFF

BUS<b>:PARallel:THReshold<n> <Threshold>

Sets the logical threshold for the indicated channel group.

Alternatively, you can set the threshold with `BUS<b>:PARallel:TECHnology`. For the parallel bus 1, you can also use `DIGital<m>:THReshold`.

See also: `DIGital<m>:THCoupling`

Suffix:
<b> 1..4
Selects the parallel bus.

<n> 1..4
Selects the channel group:
1 = dig. channels 0..3;
2 = dig. channels 4..7
3 = dig. channels 8..11
4 = dig. channels 12..15

Parameters:
<Threshold> Range: -8.0 to 8.0
Increment: 200.0e-12
*RST: 0
Default unit: V

Manual operation: See "Technology, Threshold" on page 1014

BUS<b>:PARallel:TECHnology <Technology>

Selects the threshold voltage for various types of integrated circuits and applies it to all digital channels.

Suffix:
<b> 1..4
Selects the parallel bus.

Parameters:
<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual
V15: TTL
V25: CMOS 5.0 V
V165: CMOS 3.3 V
V125: CMOS 2.5 V
V09: CMOS 1.85 V
VM13: ECL, -1.3 V
V38: PECL
V20: LVPECL
V0: Ground

MANual: Set a user-defined threshold value with `DIGital<m>:THReshold`

*RST: V165

Manual operation: See "Technology, Threshold" on page 1014

BUS<b>:PARallel:THCoupling <LevelCoupling>

Sets the threshold for all digital channels of the selected bus to the same value. Also the hysteresis value is applied to all digital channels.

Tor parallel bus 1, the command `DIGital<m>:THCoupling` has the same effect.

Suffix:

<b> 1..4
The suffix is irrelevant.

Parameters:

<LevelCoupling> OFF | ON

*RST: ON

Manual operation: See "Couple thresholds" on page 1015

BUS<b>:PARallel:HYSTeresis<n> <Hysteresis>

Defines the size of the hysteresis for the channel group to avoid the change of signal states due to noise.

For the parallel bus 1, you can also use `DIGital<m>:HYSTeresis`.

Suffix:

<b> 1..4
Selects the parallel bus.

<n> 1..4
Selects the channel group:
1 = dig. channels 0..3;
2 = dig. channels 4..7
3 = dig. channels 8..11
4 = dig. channels 12..15

Parameters:

<Hysteresis> MAXIMUM | MAXimum | ROBUST | ROBust | NORMAL | NORMal

MAXIMUM = MAXimum
Maximum value that is possible and useful for the signal and its settings

ROBUST = ROBust
Different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system.

NORMAL = NORMal
The instrument sets a value suitable for the signal and its settings.

Manual operation: See "Hysteresis" on page 1016

BUS<b>:PARallel:BIT<n>:DESKew <Deskew>

Sets an individual delay for each digital channel to time-align it with other digital channels. The deskew value compensates delays that are known from the circuit specifics or caused by the different length of cables.

For the parallel bus 1, you can also use `DIGital<m>:DESKew`.

Suffix:
<b> 1..4
Selects the parallel bus.

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:
<Deskew>
Range: -200E-9 to 200E-9
Increment: 200E-12
*RST: 0
Default unit: s

Manual operation: See "Skew" on page 1019

BUS<b>:PARallel:DESoffset <DeskewOffset>

Sets a general delay for all digital channels. The resulting deskew of a digital channel is the sum of this general value and the individual value set with `BUS<b>:PARallel:BIT<n>:DESKew`.

Suffix:
<b> 1..4
Selects the parallel bus.

Parameters:
<DeskewOffset>
Range: -200E-9 to 200E-9
Increment: 200E-12
*RST: 0
Default unit: s

Manual operation: See "Global skew" on page 1019

BUS<b>:PARallel:BIT<n>:LABel <Label>

Sets a name for the indicated digital channel. The name is displayed in the diagram.

For the parallel bus 1, you can also use `DIGital<m>:LABel`.

Suffix:
<b> 1..4
Selects the parallel bus.

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:
<Label> String containing the channel name

BUS<b>:PARallel:DATA:FORMat <DataFormat>

Sets the number format for decoded data values on the display for the indicated parallel bus.

It sets also the number representation for remote data transfer with `BUS<b>:PARallel:DATA[:VALues]?`.

Suffix:
<b> 1..4
Selects the parallel bus.

Parameters:
<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG
For `BUS<b>:PARallel:DISPlay:BTYP COMB`: HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG
For `BUS<b>:PARallel:DISPlay:BTYP ANALog`: SIGN | USIG
*RST: HEX

Manual operation: See "Data format" on page 1017

BUS<b>:PARallel:DISPlay:SHDI <ShwDigSigns>

If enabled, the selected digital signals are shown in the diagram. Each channel is displayed as a logic signal.

See also: `DIGital<m>:DISPlay`

Suffix:
<b> 1..4
Selects the parallel bus.

Parameters:
<ShwDigSigns> OFF | ON
*RST: OFF

Manual operation: See "Show channels" on page 1014

BUS<b>:PARallel:DISPlay:SHBU <ShowBus>

Shows or hides the indicated parallel bus. If enabled, the resulting bus signal and bus values are displayed in the diagram.

Suffix:
<b> 1..4
Selects the parallel bus.

Parameters:
<ShowBus> OFF | ON
*RST: OFF

Manual operation: See "Show bus" on page 1017

BUS<b>:PARallel:DISPlay:BTYP <BusRepres>

Selects the display type of the indicated parallel bus.

Suffix:
<b> 1..4
Selects the parallel bus.

Parameters:
<BusRepres> COMB | ANALog

COMB
Displays the decoded bus signal with bus values.

ANALog
Displays the bus value as amplitude, similar to an analog waveform.

*RST: COMB

Manual operation: See "Bus display" on page 1017

BUS<b>:PARallel:CLON <Clocked>

Defines if the bus is a clocked bus - one of the digital channels serves as clock of the bus.

Suffix:
<b> 1 | 2
Selects the parallel bus. The clocked bus is available on parallel buses 1 and 2.

Parameters:
<Clocked> OFF | ON
*RST: OFF

Manual operation: See "Enable" on page 1017

BUS<b>:PARallel:CLOCk <ClockSource>

Selects the digital channel used as clock of the indicated parallel bus.

Suffix:
<b> 1 | 2
Selects the parallel bus. The clocked bus is available on parallel buses 1 and 2.

Parameters:
<ClockSource> D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15
Clock channel
*RST: D1

Manual operation: See "Clock source" on page 1018

BUS<b>:PARallel:CLSLope <ClockSlope>

Selects the slope of the clock signal at which all digital channels of the bus are analyzed.

Suffix:
<b> 1 | 2
Selects the parallel bus. The clocked bus is available on parallel buses 1 and 2.

Parameters:
<ClockSlope> POSitive | NEGative | EITHer
*RST: POSitive

Manual operation: See "Clock slope" on page 1018

BUS<b>:PARallel:CLEar

Removes all assigned digital channels from the bus

Suffix:
<b> 1..4
Selects the parallel bus.

Usage: Setting only

BUS<b>:PARallel:DECTable:SHOW <ShwDecodeTbl>

Available only if `BUS<b>:PARallel:CLON` is set to `ON`.

If enabled, a results box opens with decoded values of the bus signal and its time. You can query the number of values (`BUS<b>:PARallel:DECTable:COUNt?`) and their data value (`BUS<b>:PARallel:DECTable:DATA?`).

Suffix:
<b> 1..4

Parameters:
<ShwDecodeTbl> OFF | ON
*RST: OFF

Manual operation: See "Show table" on page 1018

BUS<b>:PARallel:DECTable:COUNt?

Returns the number of clock edges in the decode table.

Suffix:
<b> 1..4
Selects the parallel bus.

Return values:
<Data> Number of clock edges

Usage: Query only

Manual operation: See "Show table" on page 1018

BUS<b>:PARallel:DECTable:DATA?

Returns the data of the decoded values of the bus signal and its time.

Suffix:
<b> 1..4
Selects the parallel bus.

Return values:
<Data> List of comma-separated values according to the format setting.

Usage: Query only

Manual operation: See "Show table" on page 1018

26.19.3 Digital resolution

ACQuire:DRESolution?....2632
ACQuire:POINts:DVALue?....2633

ACQuire:DRESolution?

Returns the current digital resolution of the digital channels.

Return values:
<DigRes> Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Dig. resolution" on page 1020

ACQuire:POINts:DVALue?

Returns the current digital record length used by each digital channel.

Return values:

<DigReclgth> Range: 1000 to 200E+6
Increment: 2
*RST: 1000
Default unit: pts

Usage: Query only
Asynchronous command

26.19.4 Trigger settings for digital signals and parallel buses

In all `TRIGger<t>:PARallel` commands, the trigger suffix <t> is always 1 and can be omitted. It selects the trigger event: Only the A-trigger is available for triggering on digital signals and parallel buses.

- General commands....2633
- Edge trigger....2636
- Width trigger....2636
- Timeout trigger....2638
- Setup & Hold trigger....2639
- State trigger....2640
- Pattern trigger....2641
- Serial pattern trigger....2644

26.19.4.1 General commands

TRIGger<t>:SOURce[:SELect]....2633
TRIGger<t>:PARallel:TYPE....2635
TRIGger<t>:PARallel:SETHold:CSOurce[:VALue]....2635
TRIGger<t>:PARallel:STATe:CSOurce:VALue....2635
TRIGger<t>:PARallel:SPATtern:CSOurce[:VALue]....2635
TRIGger<t>:PARallel:EDGE:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:WIDTh:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:TIMeout:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:STATe:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:PATTern:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:SPATtern:EXPRession[:DEFine]....2635

TRIGger<t>:SOURce[:SELect] <SourceDetailed>

Selects the source of the trigger signal.

Suffix:

<t> 1..3
1 = A-trigger, 2 = B-trigger, 3 = R-trigger
Available values depend on the selected trigger source. For input channels CHAN1...4, a trigger sequence can be configured.
For all other trigger sources, only suffix 1 is allowed.

Parameters:

<SourceDetailed> CHAN1 | CHANnel1 | CHAN2 | CHANnel2 | CHAN3 | CHANnel3 | CHAN4 | CHANnel4 | EXTernanalog | SBUS | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | LOGIC | MSOB1 | MSOB2 | MSOB3 | MSOB4 | Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | LINE

CHAN1 = CHANnel1, CHAN2 = CHANnel2, CHAN3 = CHANnel3, CHAN4 = CHANnel4
Input channels

EXTernanalog
External analog signal connected to the External Trigger Input. For this source, only the analog edge trigger is available.

LINE
The instrument generates the trigger from the AC power input and synchronizes the signal to the AC power frequency.

SBUS
Serial bus

D0...D15
Digital channels (option R&S RTP-B1)
See also: Section 26.19.4, "Trigger settings for digital signals and parallel buses", on page 2633

LOGIc
Logic combination of digital channels, used as trigger source (option R&S RTP-B1)

MSOB1 | MSOB2 | MSOB3 | MSOB4
Parallel bus (option R&S RTP-B1)

Z1V1 | Z1V2 | Z1V3 | Z1V4 | Z1I1 | Z1I2 | Z1I3 | Z1I4 | Z2V1 | Z2V2 | Z2V3 | Z2V4 | Z2I1 | Z2I2 | Z2I3 | Z2I4
Input channels of R&S RT-ZVCmulti-channel power probe. Only available in the A-trigger with trigger type EDGE.

DIFF1 | DIFF2 | COMMON1 | COMMON2
Differential signals

*RST: CHAN1

Usage: Asynchronous command

Manual operation: See "[Source]" on page 38

TRIGger<t>:PARallel:TYPE <Type>

Selects the trigger type to trigger on digital channels and parallel buses.

To trigger on analog channels or the external trigger input, use `TRIGger<t>:TYPE`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Type> EDGE | WIDTh | TIMeout | SETHold | DATatoclock | STATe | PATTern | SERPattern |

SETHold = DATatoclock, setup & hold trigger
SERPattern = serial pattern trigger

*RST: EDGE

Usage: Asynchronous command

Manual operation: See "Type" on page 1026

TRIGger<t>:PARallel:SETHold:CSOurce[:VALue] <ClockSource>
TRIGger<t>:PARallel:STATe:CSOurce:VALue <ClockSource>
TRIGger<t>:PARallel:SPATtern:CSOurce[:VALue] <ClockSource>

Selects the digital channel of the clock signal.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<ClockSource> D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

*RST: D0

Usage: Asynchronous command

Manual operation: See "Clock source" on page 1031

TRIGger<t>:PARallel:EDGE:EXPRession[:DEFine] <LogicalExpr>
TRIGger<t>:PARallel:WIDTh:EXPRession[:DEFine] <LogicalExpr>
TRIGger<t>:PARallel:TIMeout:EXPRession[:DEFine] <LogicalExpr>
TRIGger<t>:PARallel:STATe:EXPRession[:DEFine] <LogicalExpr>
TRIGger<t>:PARallel:PATTern:EXPRession[:DEFine] <LogicalExpr>
TRIGger<t>:PARallel:SPATtern:EXPRession[:DEFine] <LogicalExpr>

Defines a logical combination of several digital channels as trigger condition if `TRIGger<t>:SOURce[:SELect]` is set to LOGIC.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<LogicalExpr> String with logical expression

Example: `TRIGger:PARallel:EDGE:EXPRession 'D1 and D2'`

Usage: Asynchronous command

Manual operation: See "Logical expression" on page 1030

26.19.4.2 Edge trigger

See also:

- `TRIGger<t>:PARallel:EDGE:EXPRession[:DEFine]` on page 2635

TRIGger<t>:PARallel:EDGE:SLOPe....2636

TRIGger<t>:PARallel:EDGE:SLOPe <Slope>

Defines the edge - the state transition - of the signal to trigger on a single digital channel (a logic bit), or a logical combination of digital channels.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 1027

26.19.4.3 Width trigger

See also:

- `TRIGger<t>:PARallel:WIDTh:EXPRession[:DEFine]` on page 2635

TRIGger<t>:PARallel:WIDTh:POLarity....2636
TRIGger<t>:PARallel:WIDTh:RANGe....2637
TRIGger<t>:PARallel:WIDTh:WIDTh....2637
TRIGger<t>:PARallel:WIDTh:DELTa....2638

TRIGger<t>:PARallel:WIDTh:POLarity <Polarity>

Sets the polarity of a pulse. When triggering on a positive pulse, the trigger event occurs on the high to low transition of the pulse if the timing condition is true. When triggering on a negative pulse, the trigger event occurs on the low to high transition of the pulse if the timing condition is true.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<Polarity> POSitive | NEGative | EITHer

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 1028

TRIGger<t>:PARallel:WIDTh:RANGe <RangeMode>

Selects how the range of a pulse width is defined:

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<RangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin | OUTSide
Pulses inside or outside a given time range. The time range *Width ± Delta* is defined by `TRIGger<t>:PARallel:WIDTh:WIDTh` and `TRIGger<t>:PARallel:WIDTh:DELTa`.

SHORter | LONGer
Pulses shorter or longer than a given width defined by `TRIGger<t>:PARallel:WIDTh:WIDTh`

*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Range" on page 1028

TRIGger<t>:PARallel:WIDTh:WIDTh <Width>

Sets the limit for the pulse width.

The effect depends on `TRIGger<t>:PARallel:WIDTh:RANGe`.

- For the ranges SHORter and LONGer, the width defines the maximum and minimum pulse width, respectively.
- For the ranges WITHin and OUTSide, the width defines the center of a range which is defined by the limits `TRIGger<t>:PARallel:WIDTh:DELTa`.

Suffix:

<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<Width> Range: 200E-12 to 10000
Increment: 200E-9
*RST: 5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 1029

TRIGger<t>:PARallel:WIDTh:DELTa <WidthDelta>

Defines a range around the given width value. the setting is relevant if `TRIGger<t>:PARallel:WIDTh:RANGe` is set to WITHin or OUTSide. The width is set with `TRIGger<t>:PARallel:WIDTh:WIDTh`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<WidthDelta>
Range: 0 to 432
Increment: 600E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 1029

26.19.4.4 Timeout trigger

See also:

- `TRIGger<t>:PARallel:TIMeout:EXPRession[:DEFine]` on page 2635

TRIGger<t>:PARallel:TIMeout:RANGe 2638
TRIGger<t>:PARallel:TIMeout:TIME 2639

TRIGger<t>:PARallel:TIMeout:RANGe <TimeoutMode>

Sets the state condition.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<TimeoutMode> HIGH | LOW | EITHer

HIGH
The level of a digital channel stays above the threshold, or the logical expression for LOGic trigger source is true.

LOW
The level of a digital channel stays below the threshold, or the logical expression for LOGic trigger source is false.

EITHer
The signal state remains unchanged.

*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Range" on page 1029

TRIGger<t>:PARallel:TIMeout:TIME <Time>

Defines the time limit for the timeout at which the instrument triggers.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Time> Range: 100E-12 to 10000
Increment: 100E-9
*RST: 100E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 1030

26.19.4.5 Setup & Hold trigger

See also:

- `TRIGger<t>:PARallel:SETHold:CSOurce[:VALue]` on page 2635

TRIGger<t>:PARallel:SETHold:CSOurce:EDGE....2639
TRIGger<t>:PARallel:SETHold:HTIMe....2639
TRIGger<t>:PARallel:SETHold:STIMe....2640

TRIGger<t>:PARallel:SETHold:CSOurce:EDGE <ClockEdge>

Sets the edge of the clock signal. The crossing of the clock edge and the logical threshold defines the time reference point for the setup and hold time measurement.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock edge" on page 1031

TRIGger<t>:PARallel:SETHold:HTIMe <HoldTime>

Sets the minimum time *after* the clock edge while data should be stable and not change its state.

See also: "Hold time" on page 1031

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<HoldTime> Range: -99.8E-9 to 100E-9
Increment: 1E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Hold time" on page 1031

TRIGger<t>:PARallel:SETHold:STIMe <SetupTime>

Sets the minimum time *before* the clock edge while data should be stable and not change its state.

See also: "Setup time" on page 1031

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<SetupTime> Range: -99.8E-9 to 100E-9
Increment: 1E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Setup time" on page 1031

26.19.4.6 State trigger

See also:

- `TRIGger<t>:PARallel:STATe:CSOurce:VALue` on page 2635
- `TRIGger<t>:PARallel:STATe:EXPRession[:DEFine]` on page 2635

TRIGger<t>:PARallel:STATe:CSOurce:EDGE....2640
TRIGger<t>:PARallel:STATe:BIT<n>....2641

TRIGger<t>:PARallel:STATe:CSOurce:EDGE <Slope>

Sets the edge of the clock signal. The crossing of the clock edge and the logical threshold defines the time at which the logical states and the bus value are analyzed.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:

<Slope> POSitive | NEGative | EITHer

*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock edge" on page 1032

TRIGger<t>:PARallel:STATe:BIT<n> <Bit>

Sets the required state for each digital channel that is used in the bus.

Suffix:

<t> 1..3

Event in a trigger sequence: 1 = A-event only

<n> 0..15

Parameters:

<Bit> HIGH | LOW | DONTCARE | DONTcare

Bit value: 1 (HIGH), 0 (LOW), or X (DONTCARE = DONTcare)

Usage: Asynchronous command

Manual operation: See "Channel states" on page 1032

26.19.4.7 Pattern trigger

TRIGger<t>:PARallel:PATTern:BIT<n> <Bit>

Sets the required state for each digital channel that is used in the bus.

Suffix:

<t> 1..3

Event in a trigger sequence: 1 = A-event only

<n> 0..15

Parameters:

<Bit> HIGH | LOW | DONTCARE | DONTcare

Bit value: 1 (HIGH), 0 (LOW), or X (DONTCARE = DONTcare)

Usage: Asynchronous command

Manual operation: See "Channel states" on page 1033

TRIGger<t>:PARallel:PATTern:MODE <Mode>

Sets the mode of the timing condition.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Mode> OFF | TIMeout | WIDTh

OFF
No timing condition, only the logical pattern condition is relevant.

TIMeout
Defines a minimum time qualification to avoid triggering on unstable or transitional conditions. Use `TRIGger<t>:PARallel:PATTern:TIMeout:MODE` and `TRIGger<t>:PARallel:PATTern:TIMeout[:TIME]` to specify the timeout.

WIDTh
Sets a pulse width as timing condition. The pulse starts when the pattern comes true, and the trigger event occurs when the pattern comes false during the specified time limit. Use `TRIGger<t>:PARallel:PATTern:WIDTh:RANGe`, `TRIGger<t>:PARallel:PATTern:WIDTh[:WIDTh]`, and `TRIGger<t>:PARallel:PATTern:WIDTh:DELTa` to specify the width.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Mode: Off, Timeout, Width" on page 1034

TRIGger<t>:PARallel:PATTern:TIMeout:MODE <TimeoutMode>

Sets the state condition for the timeout qualification if `TRIGger<t>:PARallel:PATTern:MODE` is set to TIMeout. To set the time limit, use `TRIGger<t>:PARallel:PATTern:TIMeout[:TIME]`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<TimeoutMode> HIGH | LOW | EITHer

HIGH: The pattern stays true for the specified time.
LOW: The pattern stays false for the specified time.
EITHER: The pattern remains unchanged for the specified time.

*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Range" on page 1034

TRIGger<t>:PARallel:PATTern:TIMeout[:TIME] <Time>

Defines the time limit for the timeout at which the instrument triggers.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Time> Range: 100E-12 to 10000
Increment: 100E-9
*RST: 100E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 1034

TRIGger<t>:PARallel:PATTern:WIDTh:RANGe <WidthRangeMode>

Selects how the range of a pulse width is defined if `TRIGger<t>:PARallel:PATTern:MODE` is set to WIDTh.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<WidthRangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers when the pattern comes false inside a given time range. The time limit is defined by `TRIGger<t>:PARallel:PATTern:WIDTh[:WIDTh]` and `TRIGger<t>:PARallel:PATTern:WIDTh:DELTa` (*Width ± Delta*).

OUTSide
Triggers when the pattern comes false before or after the given time range. The time limit definition is the same as for WITHin range.

SHORter | LONGer
Triggers when the pattern comes false before or after the given width has expired. Width is set with `TRIGger<t>:PARallel:PATTern:WIDTh[:WIDTh]`.

*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Range" on page 1035

TRIGger<t>:PARallel:PATTern:WIDTh[:WIDTh] <Width>

The effect depend on the setting of the `TRIGger<t>:PARallel:PATTern:WIDTh:RANGe`command.

For the ranges SHOrter and LONGer, the width defines the maximum and minimum time limit, respectively.

For the ranges WITHin and OUTSide, the width defines the center of a range which is defined by the limits "±Delta".

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Width> Range: 100E-12 to 10000
Increment: 100E-9
*RST: 5E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 1035

TRIGger<t>:PARallel:PATTern:WIDTh:DELTa <WidthDelta>

Defines a range around the width value set with `TRIGger<t>:PARallel:PATTern:WIDTh[:WIDTh]`.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<WidthDelta> Range: 0 to 432
Increment: 500E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 1035

26.19.4.8 Serial pattern trigger

See also:

- `TRIGger<t>:PARallel:SPATtern:CSOurce[:VALue]` on page 2635
- `TRIGger<t>:PARallel:SPATtern:EXPRession[:DEFine]` on page 2635

TRIGger<t>:PARallel:SPATtern:CSOurce:EDGE <ClockEdge>

Sets the edge of the clock signal. The bit value is determined at the crossing of the clock edge and the logical threshold.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock edge" on page 1036

TRIGger<t>:PARallel:SPATtern:PATTern <Pattern>

Defines the serial bit string on which to trigger.

Suffix:
<t> 1..3
Event in a trigger sequence: 1 = A-event only

Parameters:
<Pattern> Numeric or string pattern, see Section 26.4.6, "Bit pattern parameter", on page 1351. The bit value X (don't care) is not allowed.

Usage: Asynchronous command

Manual operation: See "Pattern" on page 1036

26.19.5 MSO data

To export data of digital channels and parallel buses to file, use the following commands:

- `EXPort:WAVeform:SOURce` on page 1783
- `EXPort:WAVeform:NAME` on page 1785
- `EXPort:WAVeform:SAVE` on page 1786

The remote data transfer from the instrument to the controlling computer is performed using the following commands:

DIGital<m>:DATA:HEADer? 2645
DIGital<m>:DATA[:VALues]? 2646
BUS<b>:PARallel:DATA:FORMat 2646
BUS<b>:PARallel:DATA:HEADer? 2647
BUS<b>:PARallel:DATA[:VALues]? 2647

DIGital<m>:DATA:HEADer?

Returns the header data of a digital channel.

Suffix:
<m> 0..15
Index of the digital channel

Return values:
<Start> 1. header value: acquisition time before trigger, time of the first sample in s

<Stop> 2. header value: acquisition time after trigger, time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: Number of values per sample interval. For digital data the result is 1.

Example:
```
DIG3:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```
The start time of the data is -1E-07 = -100 ns, and the end time of the data is 9.980000000000001E-08= 99.8 ns. The data stream has 1000 values with one value per sample.

Usage: Query only

DIGital<m>:DATA[:VALues]?

Returns the data of the indicated digital channel for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Suffix:
<m> 0..15
Selects the digital channel.

Return values:
<Data> Comma-separated list of data (0 and 1)

Usage: Query only

BUS<b>:PARallel:DATA:FORMat <DataFormat>

Sets the number format for decoded data values on the display for the indicated parallel bus.

It sets also the number representation for remote data transfer with `BUS<b>:PARallel:DATA[:VALues]?`.

Suffix:
<b> 1..4
Selects the parallel bus.

Parameters:

<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG

For `BUS<b>:PARallel:DISPlay:BTYP COMB`: HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG
For `BUS<b>:PARallel:DISPlay:BTYP ANALog`: SIGN | USIG

*RST: HEX

Manual operation: See "Data format" on page 1017

BUS<b>:PARallel:DATA:HEADer?

Returns the header data of the indicated bus.

See also: `DIGital<m>:DATA:HEADer?`.

Suffix:

<b> 1..4
Selects the parallel bus.

Return values:

<Start> 1. header value: acquisition time before trigger, time of the first sample in s

<Stop> 2. header value: acquisition time after trigger, time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: Number of values per sample interval. For digital data the result is 1.

Usage: Query only

BUS<b>:PARallel:DATA[:VALues]?

Returns the data of the indicated parallel bus.

Requirements:

- `BUS<b>:PARallel:STATe` is set to `ON`.
- `BUS<b>:PARallel:DISPlay:SHBU` is set to `ON`.
- Number format is set with `BUS<b>:PARallel:DATA:FORMat`.

Suffix:

<b> 1..4
Selects the parallel bus.

Return values:

<Data> List of comma-separated values according to the format setting.

Example:
```
BUS:PAR:STAT ON
BUS:PAR:DISP:SHBU ON
BUS:PAR:DISP:BTYP COMB
BUS:PAR:DATA:FORMat HEX
BUS:PAR:DATA:VAL?
```

Usage: Query only

26.20 Waveform generator (option R&S RTP-B6)

26.20.1 Waveform generator setup

26.20.1.1 General

WGENerator<wg>:ACOPy 2648
WGENerator<wg>[:ENABle] 2648
WGENerator<wg>:SOURce 2648
WGENerator<wg>:PRESet 2649
GENType:STATus[:OPERation]? 2649

WGENerator<wg>:ACOPy

Copies all settings from Gen1/Gen2 and applies them to Gen2/Gen1.

Suffix:
<wg> 1..2

Usage: Event

Manual operation: See "Copy settings from Gen1/Gen2" on page 1043

WGENerator<wg>[:ENABle] <State>

Enables the waveform generator and outputs the waveform.

Suffix:
<wg> 1..2

Parameters:
<State> OFF | ON

Manual operation: See "Enable" on page 1042

WGENerator<wg>:SOURce <OperationMode>

Sets the operation mode for the the waveform generator.

Suffix:
<wg> 1..2

Parameters:
<OperationMode> FUNCgen | MODulation | SWEep | ARBGenerator
*RST: FUNCgen

Manual operation: See "Operation mode" on page 1042

WGENerator<wg>:PRESet

Sets the parameters of the waveform generator to their default values.

Suffix:
<wg> 1..2

Usage: Setting only

Manual operation: See "Preset Gen1/Gen2/Patt Gen" on page 1043

GENType:STATus[:OPERation]?

Returns information on the current actions of the waveform and pattern generators.

Return values:
<Status> Register value with the following bits, see table.

Usage: Query only

Bit number	Bit name	Description
0	ALIGnment	The bit is set while the generators run an alignment.
1	SLFTest	The bit is set while the generators run a self-test.
2 3 4	GRUN1 (waveform generator Gen1) GRUN2 (waveform generator Gen2) GRUN3 (pattern generator PattGen)	The bit is set as long as the corresponding generator is running (not idle).
5 6 7	WTR1 (waveform generator Gen1) WTR2 (waveform generator Gen2) WTR3 (pattern generator PattGen)	The bit is set as long as the corresponding generator is waiting for a trigger event.
8 9 10	TRIG1 (waveform generator Gen1) TRIG2 (waveform generator Gen2) TRIG3 (pattern generator PattGen)	The bit is set when the corresponding generator has triggered.
11 12	OVER1 (waveform generator Gen1) OVER2 (waveform generator Gen2)	The bit is set when an overload occurred on the corresponding waveform generator.
13, 14, 15		Not used

26.20.1.2 Function generator

WGENerator<wg>:FUNCtion[:SELect] 2650
WGENerator<wg>:FREQuency 2650
WGENerator<wg>:PERiod 2650
WGENerator<wg>:FUNCtion:PULSe[:WIDTh] 2651
WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] 2651
WGENerator<wg>:FUNCtion[:SQUare]:DCYCle 2651

WGENerator<wg>:FUNCtion[:SELect] <FunctionType>

Sets the type of waveform to be generated for the function generator.

Suffix:
<wg> 1..2

Parameters:
<FunctionType> SINusoid | SQUare | RAMP | DC | PULSe | SINC | CARDiac | GAUSs | LORNtz | EXPRise | EXPFall

SINC: Cardial sine

*RST: SINusoid

Manual operation: See "Function type" on page 1043

WGENerator<wg>:FREQuency <Frequency>

Sets the frequency of the waveform. The available frequency range depends on the selected function type, see Table 16-1.

Suffix:
<wg> 1..2

Parameters:
<Frequency> Range: 1E-3 to 100E+6
Increment: 1
*RST: 1E+6
Default unit: Hz

Manual operation: See "Frequency" on page 1047

WGENerator<wg>:PERiod <Period>

Sets the period of the waveform. The available period range depends on the selected function type.

Suffix:
<wg> 1..2

Parameters:

<Period>

Range:	8E-9 to 1000
Increment:	1
*RST:	1E-6
Default unit:	s

Manual operation: See "Period" on page 1048

WGENerator<wg>:FUNCtion:PULSe[:WIDTh] <PulseWidth>

Sets the pulse duration for a pulse waveform.

Suffix:

<wg> 1..2

Parameters:

<PulseWidth>

Range:	16.5E-9 to 1000, actual range depends on the selected frequency
Increment:	1
*RST:	500E-9
Default unit:	s

Manual operation: See "Pulse width" on page 1048

WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] <RampSymmetry>

Sets the symmetry for a ramp waveform.

Suffix:

<wg> 1..2

Parameters:

<RampSymmetry>

Range:	0 to 100
Increment:	1
*RST:	50
Default unit:	%

Manual operation: See "Symmetry" on page 1048

WGENerator<wg>:FUNCtion[:SQUare]:DCYCle <SquareDutyCycle>

Sets the duty cycle for the generated square waveform.

Suffix:

<wg> 1..2

Parameters:

<SquareDutyCycle>

Range:	0.01 to 99.99 at minimum frequency, actual range depends on the selected frequency
Increment:	1
*RST:	50
Default unit:	%

Manual operation: See "Duty cycle" on page 1048

26.20.1.3 Modulation

WGENerator<wg>:MODulation:TYPE 2652
WGENerator<wg>:MODulation:AM:DCYCle 2652
WGENerator<wg>:MODulation:AM:DEPTh 2653
WGENerator<wg>:MODulation:AM:FREQuency 2653
WGENerator<wg>:MODulation:AM:SYMMetry 2653
WGENerator<wg>:MODulation:CARRier:FREQuency 2654
WGENerator<wg>:MODulation:CARRier:PERiod 2654
WGENerator<wg>:MODulation:AM[:FUNCtion] 2654
WGENerator<wg>:MODulation:FM:DCYCle 2654
WGENerator<wg>:MODulation:FM:DEViation 2655
WGENerator<wg>:MODulation:FM:FREQuency 2655
WGENerator<wg>:MODulation:FM:SYMMetry 2655
WGENerator<wg>:MODulation:FM[:FUNCtion] 2656
WGENerator<wg>:MODulation:FSK:FONE 2656
WGENerator<wg>:MODulation:FSK:FTWO 2656
WGENerator<wg>:MODulation:FSK[:RATE] 2657
WGENerator<wg>:MODulation:PWM:DCYCle 2657
WGENerator<wg>:MODulation:PWM:DEPTh 2657
WGENerator<wg>:MODulation:PWM:FREQuency 2657
WGENerator<wg>:MODulation:PWM:SYMMetry 2658
WGENerator<wg>:MODulation:PWM[:FUNCtion] 2658

WGENerator<wg>:MODulation:TYPE <ModulationType>

Sets the modulation type.

Suffix:
<wg> 1..2

Parameters:
<ModulationType> AM | FM | PWM | FSK
*RST: AM

Manual operation: See "Modulation type" on page 1049

WGENerator<wg>:MODulation:AM:DCYCle <SquareDutyCycle>

Sets the duty cycle of a square waveform for amplitude modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `AM`.

Suffix:
<wg> 1..2

Parameters:

<SquareDutyCycle> Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Duty cycle" on page 1051

WGENerator<wg>:MODulation:AM:DEPTh <Depth>

Sets the amplitude modulation depth.

Suffix:

<wg> 1..2

Parameters:

<Depth> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Modulation depth" on page 1050

WGENerator<wg>:MODulation:AM:FREQuency <Frequency>

Sets the frequency of the modulation waveform for amplitude modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `AM`.

Suffix:

<wg> 1..2

Parameters:

<Frequency> Range: 1E-3 to 1E+6
Increment: 1
*RST: 1000
Default unit: Hz

Manual operation: See "Modulation freq" on page 1050

WGENerator<wg>:MODulation:AM:SYMMetry <RampSymmetry>

Sets the symmetry, the percentage of time the ramp modulation waveform is rising, for amplitude modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `AM`.

Suffix:

<wg> 1..2

Parameters:

<RampSymmetry> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Symmetry" on page 1051

WGENerator<wg>:MODulation:CARRier:FREQuency <CarrierFreq>

Sets the frequency of the carrier signal for a modulation waveform.

Suffix:
<wg> 1..2

Parameters:
<CarrierFreq>
Range: 1E-3 to 100E+6
Increment: 10
*RST: 1E+6
Default unit: Hz

Manual operation: See "Carrier frequency" on page 1049

WGENerator<wg>:MODulation:CARRier:PERiod <CarrierPeriod>

Sets the period of the carrier signal for a modulation waveform.

Suffix:
<wg> 1..2

Parameters:
<CarrierPeriod>
Range: 8E-9 to 1000
Increment: 10
*RST: 1E-6
Default unit: s

Manual operation: See "Carrier period" on page 1050

WGENerator<wg>:MODulation:AM[:FUNCtion] <SignalType>

Sets the type of the modulation signal for the amplitude modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `AM`.

Suffix:
<wg> 1..2

Parameters:
<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Manual operation: See "Modulation signal" on page 1050

WGENerator<wg>:MODulation:FM:DCYCle <SquareDutyCycle>

Sets the duty cycle of a square waveform for frequency modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `FM`.

Suffix:
<wg> 1..2

Parameters:

<SquareDutyCycle> Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Duty cycle" on page 1054

WGENerator<wg>:MODulation:FM:DEViation <Deviation>

Sets the frequency modulation deviation.

Suffix:

<wg> 1..2

Parameters:

<Deviation> Range: 1E-3 to 10E+6
Increment: 1
*RST: 1000
Default unit: Hz

Manual operation: See "Freq deviation" on page 1053

WGENerator<wg>:MODulation:FM:FREQuency <Frequency>

Sets the frequency of the modulation waveform for frequency modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `FM`.

Suffix:

<wg> 1..2

Parameters:

<Frequency> Range: 1E-3 to 1E+6
Increment: 1
*RST: 1000
Default unit: Hz

Manual operation: See "Modulation freq" on page 1053

WGENerator<wg>:MODulation:FM:SYMMetry <RampSymmetry>

Sets the symmetry, the percentage of time the ramp modulation waveform is rising, for frequency modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `FM`.

Suffix:

<wg> 1..2

Parameters:

<RampSymmetry> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Symmetry" on page 1053

WGENerator<wg>:MODulation:FM[:FUNCtion] <SignalType>

Sets the type of the modulation signal for the frequency modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `FM`.

Suffix:
<wg> 1..2

Parameters:
<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Manual operation: See "Modulation signal" on page 1053

WGENerator<wg>:MODulation:FSK:FONE <Frequency1>

Sets the frequency of the carrier waveform, if `WGENerator<wg>:MODulation:TYPE` is set to `FSK`.

Suffix:
<wg> 1..2

Parameters:
<Frequency1> Range: 1E-3 to 100E+6
Increment: 1
*RST: 1E+6
Default unit: Hz

Manual operation: See "Frequency 1" on page 1054

WGENerator<wg>:MODulation:FSK:FTWO <Frequency2>

Sets the frequency of the modulated waveform, if `WGENerator<wg>:MODulation:TYPE` is set to `FSK`.

Suffix:
<wg> 1..2

Parameters:
<Frequency2> Range: 1E-3 to 100E+6
Increment: 1
*RST: 1000
Default unit: Hz

Manual operation: See "Frequency 2" on page 1054

WGENerator<wg>:MODulation:FSK[:RATE] <Rate>

Sets the hop rate, the time before a switch from the carrier frequency set with `WGENerator<wg>:MODulation:FSK:FONE` and the modulation frequency set with `WGENerator<wg>:MODulation:FSK:FTWO`.

Suffix:
<wg> 1..2

Parameters:
<Rate>
Range: 1E-3 to 1E+6
Increment: 1
*RST: 1000
Default unit: Hz

Manual operation: See "Hop rate" on page 1054

WGENerator<wg>:MODulation:PWM:DCYCle <SquareDutyCycle>

Sets the duty cycle of a square waveform for pulse width modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `PWM`.

Suffix:
<wg> 1..2

Parameters:
<SquareDutyCycle>
Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Duty cycle" on page 1052

WGENerator<wg>:MODulation:PWM:DEPTh <Depth>

Sets the modulation depth for pulse width modulation.

Suffix:
<wg> 1..2

Parameters:
<Depth>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Modulation depth" on page 1052

WGENerator<wg>:MODulation:PWM:FREQuency <Frequency>

Sets the frequency of the modulation waveform for pulse width modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `PWM`.

Suffix:
<wg> 1..2

Parameters:
<Frequency> Range: 1E-3 to 1E+6
Increment: 1
*RST: 1000
Default unit: Hz

Manual operation: See "Modulation freq" on page 1052

WGENerator<wg>:MODulation:PWM:SYMMetry <RampSymmetry>

Sets the symmetry, the percentage of time the ramp modulation waveform is rising, for pulse width modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `PWM`.

Suffix:
<wg> 1..2

Parameters:
<RampSymmetry> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Symmetry" on page 1052

WGENerator<wg>:MODulation:PWM[:FUNCtion] <SignalType>

Sets the type of the modulation signal for the pulse width modulation, if `WGENerator<wg>:MODulation:TYPE` is set to `PWM`.

Suffix:
<wg> 1..2

Parameters:
<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Manual operation: See "Modulation signal" on page 1051

26.20.1.4 Sweep

WGENerator<wg>:SWEep:FSTart 2658
WGENerator<wg>:SWEep:TIME 2659
WGENerator<wg>:SWEep[:FEND] 2659

WGENerator<wg>:SWEep:FSTart <StartFrequency>

Sets the start frequency of the sweep range.

Suffix:
<wg> 1..2

Parameters:

<StartFrequency>
Range: 1E-3 to 100E+6
Increment: 1
*RST: 1000
Default unit: Hz

Manual operation: See "Start frequency" on page 1055

WGENerator<wg>:SWEep:TIME <Time>

Sets the duration of the sweep.

Suffix:

<wg> 1..2

Parameters:

<Time>
Range: 1E-3 to 500
Increment: 1
*RST: 1E-3
Default unit: s

Manual operation: See "Sweep time" on page 1055

WGENerator<wg>:SWEep[:FEND] <StopFrequency>

Sets the stop frequency of the sweep range.

Suffix:

<wg> 1..2

Parameters:

<StopFrequency>
Range: 1E-3 to 100E+6
Increment: 1
*RST: 1E+6
Default unit: Hz

Manual operation: See "Stop freuqency" on page 1055

26.20.1.5 ARB

WGENerator<wg>:ARBGen:COPY 2660
WGENerator<wg>:ARBGen:MULTichannel:IMPort 2660
WGENerator<wg>:ARBGen:MULTichannel:NAME 2660
WGENerator<wg>:ARBGen:MULTichannel:OPEN 2660
WGENerator<wg>:ARBGen:NAME 2661
WGENerator<wg>:ARBGen:OPEN 2661
WGENerator<wg>:ARBGen:RUNMode 2661
WGENerator<wg>:ARBGen:SAMPles? 2662
WGENerator<wg>:ARBGen:SELect 2662
WGENerator<wg>:ARBGen:SRATe 2662
WGENerator<wg>:ARBGen[:SOURce] 2662
WGENerator<wg>:ARBGen:RUNSingle 2663

WGENerator<wg>:ARBGen:COPY

Loads the waveform from the selected signal source (`WGENerator<wg>:ARBGen:SELect`).

Suffix:
<wg> 1..2

Usage: Event

Manual operation: See "Load" on page 1060

WGENerator<wg>:ARBGen:MULTichannel:IMPort <SavedWfmSrc>

Assigns a waveform from the multichannel file to the arbitrary waveform generator.

Suffix:
<wg> 1..2

Parameters:
<SavedWfmSrc> WFM1 | WFM2 | WFM3 | WFM4
*RST: WFM1

Example:
```
WGENerator1:ARBGen:MULTichannel:NAME
ArbMultichannelCurve_2017-02-16_01.bin
WGENerator1:ARBGen:MULTichannel:IMPort WF1
WGENerator1:ARBGen:MULTichannel:OPEN
```

Manual operation: See "Select waveform" on page 1059

WGENerator<wg>:ARBGen:MULTichannel:NAME <FilePath>

Defines the path and the multichannel arbitrary waveform file to be imported. If not path is given, the default path `C:\Users\Public\Public Documents\Rohde-Schwarz\RTx\RefWaveforms` is used.

Suffix:
<wg> 1..2

Parameters:
<FilePath>

Example: See `WGENerator<wg>:ARBGen:MULTichannel:IMPort` on page 2660.

Manual operation: See "Select waveform" on page 1059

WGENerator<wg>:ARBGen:MULTichannel:OPEN

Loads the arbitrary waveform.

Suffix:
<wg> 1..2

Example: See WGENerator<wg>:ARBGen:MULTichannel:IMPort on page 2660.

Usage: Event

Manual operation: See "Select waveform" on page 1059

WGENerator<wg>:ARBGen:NAME <FilePath>

Sets the file path and the file for an arbitrary waveform, if WGENerator<wg>:ARBGen[:SOURce] on page 2662 is set to ARBitrary.

If not path is given, the default path C:\Users\Public\Public Documents\Rohde-Schwarz\RTx\RefWaveforms is used.

This command is only relevant for files with one waveform defined. For multichannel arbitrary waveform files, see WGENerator<wg>:ARBGen:MULTichannel:OPEN.

Suffix:
<wg> 1..2

Parameters:
<FilePath>

Manual operation: See "Load arbitrary waveform" on page 1058

WGENerator<wg>:ARBGen:OPEN

Loads the arbitrary waveform, that is selected with the WGENerator<wg>:ARBGen:NAME command.

This command is only relevant for files with one waveform defined. For multichannel arbitrary waveform files, see WGENerator<wg>:ARBGen:MULTichannel:OPEN.

Suffix:
<wg> 1..2

Usage: Setting only

Manual operation: See "Load arbitrary waveform" on page 1058

WGENerator<wg>:ARBGen:RUNMode <RunMode>

Sets the duration for which the signal of the arbitrary generator will be output after the trigger event.

Suffix:
<wg> 1..2

Parameters:
<RunMode> SINGle | CONTinuous
*RST: CONTinuous

Manual operation: See "Run mode" on page 1057

WGENerator<wg>:ARBGen:SAMPles?

Displays the number of samples for the arbitrary waveform.

Suffix:
<wg> 1..2

Return values:
<NumSamples> Range: 0 to 128E+6
Increment: 10
*RST: 0
Default unit: pts

Usage: Query only

Manual operation: See "Samples" on page 1058

WGENerator<wg>:ARBGen:SELect <ScopeSignSrc>

Selects the oscilloscope source, from which the arbitrary signal is loaded, if `WGENerator<wg>:ARBGen[:SOURce]` is set to `SCOPe`.

Suffix:
<wg> 1..2

Parameters:
<ScopeSignSrc> NONE | C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2
*RST: NONE

Manual operation: See "Signal source" on page 1059

WGENerator<wg>:ARBGen:SRATe <SampleRate>

Sets the sample rate for the arbitrary waveform.

Suffix:
<wg> 1..2

Parameters:
<SampleRate> Range: 1 to 250E+6
Increment: 10
*RST: 1E+6
Default unit: Sa/s

Manual operation: See "Sample rate" on page 1058

WGENerator<wg>:ARBGen[:SOURce] <WaveformSource>

Sets the arbitrary waveform source.

Suffix:
<wg> 1..2

Parameters:
<WaveformSource> ARBitrary | SCOPe

ARBitrary
Enables you to load an existing arbitrary file.

SCOPe
Enables you to load a scope waveform.

*RST: ARBitrary

Manual operation: See "Waveform source" on page 1057

WGENerator<wg>:ARBGen:RUNSingle

Executes a single period of the arbitrary signal generator, for `WGENerator<wg>:ARBGen:RUNModeSINGle`.

Suffix:
<wg> 1..2

Usage: Event

Manual operation: See "Run single" on page 1058

26.20.2 Pattern generator setup

PGENerator:BITRate....2663
PGENerator:ENABle....2663
PGENerator:FILE:OPEN....2664
PGENerator:FILE[:NAME]....2664
PGENerator:HLEVel....2664
PGENerator:PRESet....2664
PGENerator:RUNMode....2664
PGENerator:RUNSingle....2665

PGENerator:BITRate <BitRate>

Sets the number of transmitted bits per second for the pattern generator.

Parameters:
<BitRate> Range: 1 to 40E+6
Increment: 10
*RST: 1E+6
Default unit: bps

Manual operation: See "Bit rate" on page 1062

PGENerator:ENABle <State>

Enables the pattern generator and outputs the waveform.

Parameters:
<State> OFF | ON

Manual operation: See "Enable" on page 1042

PGENerator:FILE:OPEN

Loads the specified pattern file to the instrument.

Usage: Setting only

Manual operation: See "Load pattern file" on page 1062

PGENerator:FILE[:NAME] <FilePath>

Specifies a file path to open a pattern generator file.

Parameters:
<FilePath> String with the name of the file.

Manual operation: See "Load pattern file" on page 1062

PGENerator:HLEVel <HighLevel>

Sets the high level of the pattern generator signal.

Parameters:
<HighLevel> Range: 1.2 to 5
Increment: 0.1
*RST: 1.2
Default unit: V

PGENerator:PRESet

Sets the default pattern generator settings.

Usage: Setting only

Manual operation: See "Preset Gen1/Gen2/Patt Gen" on page 1043

PGENerator:RUNMode <RunMode>

Sets the duration for which the signal of the pattern generator will be output after the trigger event.

Parameters:
<RunMode> SINGle | CONTinuous
*RST: CONTinuous

Manual operation: See "Run mode" on page 1062

PGENerator:RUNSingle

Executes a single period of the pattern generator, for `PGENerator:RUNModeSINGle`.

Usage: Event

Manual operation: See "Run single" on page 1062

26.20.3 Output setup

WGENerator<wg>:OUTPut[:LOAD] 2665
WGENerator<wg>:VOLTage[:VPP] 2665
WGENerator<wg>:VOLTage:DCLevel 2666
WGENerator<wg>:VOLTage:HIGH 2666
WGENerator<wg>:VOLTage:INVersion 2666
WGENerator<wg>:VOLTage:LOW 2666
WGENerator<wg>:VOLTage:OFFSet 2667

WGENerator<wg>:OUTPut[:LOAD] <Load>

Sets the load of the DUT at its connection.

Suffix:
<wg> 1..2

Parameters:
<Load> FIFTy | HIZ
HIZ: high input impedance
*RST: HIZ

Manual operation: See "User Load" on page 1064

WGENerator<wg>:VOLTage[:VPP] <Amplitude>

Sets the amplitude, peak to peak voltage, of the output waveform. This is defined as the voltage difference between the maximum (`WGENerator<wg>:VOLTage:HIGH`) and the minimum (`WGENerator<wg>:VOLTage:LOW`) voltage levels.

The value is set for the currently selected load (`WGENerator<wg>:OUTPut[:LOAD]`). If the load is changed, the value of the amplitude is adapted to this new setting.

Suffix:
<wg> 1..2

Parameters:
<Amplitude> Range: 0.01 to 12
Increment: 0.1
*RST: 1
Default unit: V

Manual operation: See "Amplitude" on page 1064

WGENerator<wg>:VOLTage:DCLevel <DCLevel>

Sets the DC level of the generated DC signal.

Suffix:
<wg> 1..2

Parameters:
<DCLevel> Range: -5.995 to 5.995
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "DC Level" on page 1064

WGENerator<wg>:VOLTage:HIGH <High>

Sets the high signal level of the output waveform.

Suffix:
<wg> 1..2

Parameters:
<High> Range: -5.99 to 6
Increment: 0.1
*RST: 0.5
Default unit: V

Manual operation: See "High" on page 1064

WGENerator<wg>:VOLTage:INVersion <Inversion>

Enables inversion, which swaps the two poles of the waveform.

Suffix:
<wg> 1..2

Parameters:
<Inversion> OFF | ON
*RST: OFF

Manual operation: See "Invert" on page 1064

WGENerator<wg>:VOLTage:LOW <Low>

Sets the low signal level of the output waveform.

Suffix:
<wg> 1..2

Parameters:

<Low>
Range: -6 to 5.99
Increment: 0.1
*RST: -0.5
Default unit: V

Manual operation: See "Low" on page 1064

WGENerator<wg>:VOLTage:OFFSet <Offset>

Sets a voltage offset.

Suffix:

<wg> 1..2

Parameters:

<Offset>
Range: -5.995 to 5.995
Increment: 0.1
*RST: 0
Default unit: V

Manual operation: See "Offset" on page 1064

26.20.4 Noise setup

WGENerator<wg>:MODulation:NDCLevel 2667
WGENerator<wg>:MODulation:NLABsolute? 2667
WGENerator<wg>:MODulation:NLPCent 2668
WGENerator<wg>:MODulation:NOISe 2668

WGENerator<wg>:MODulation:NDCLevel <LevelDC>

Sets the DC noise level.

Suffix:

<wg> 1..2

Parameters:

<LevelDC>
Range: 0 to 12
Increment: 0.1
*RST: 0.01
Default unit: V

Manual operation: See "Absolute level" on page 1065

WGENerator<wg>:MODulation:NLABsolute?

Queries the level of the noise in volts.

Suffix:

<wg> 1..2

Return values:
<LevelAbs> Range: 0 to 12
Increment: 0.1
*RST: 0
Default unit: V

Usage: Query only

Manual operation: See "Absolute level" on page 1065

WGENerator<wg>:MODulation:NLPCent <LevelPct>

Sets the noise level in percentage of the amplitude.

Suffix:
<wg> 1..2

Parameters:
<LevelPct> Range: 0 to 100
Increment: 1
*RST: 0
Default unit: %

Manual operation: See "Relative level" on page 1065

WGENerator<wg>:MODulation:NOISe <State>

Enables the adding of noise to the waveform.

Suffix:
<wg> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Enable" on page 1065

26.20.5 DC offset alignment

GENerator:ALIGnment:DC:ABORt....2668
GENerator:ALIGnment:DC:RESult:DATE?....2669
GENerator:ALIGnment:DC:RESult:TIME?....2669
GENerator:ALIGnment:DC:RESult[:STATe]?....2669
GENerator:ALIGnment:DC[:STARt]....2669

GENerator:ALIGnment:DC:ABORt

Aborts a DC offset alignment.

Usage: Event

GENerator:ALIGnment:DC:RESult:DATE?

Queries the date of the last performed DC offset alignment.

Return values:
<Date>

Usage: Query only

Manual operation: See "Date" on page 1066

GENerator:ALIGnment:DC:RESult:TIME?

Queries the time of the last performed DC offset alignment.

Return values:
<Time>

Usage: Query only

Manual operation: See "Time" on page 1066

GENerator:ALIGnment:DC:RESult[:STATe]?

Queries the result of a DC offset alignment.

Return values:
<State> PASSed | FAILed | NOALigndata
*RST: NOALigndata

Usage: Query only

Manual operation: See "Overall alignment state" on page 1066

GENerator:ALIGnment:DC[:STARt]

Starts a DC offset alignment.

Usage: Event

Manual operation: See "Start Alignement" on page 1065

26.20.6 Coupling & sync

WGENerator<wg>:COUPling:STATe 2670
WGENerator<wg>:COUPling:AMPLitude 2670
WGENerator<wg>:COUPling:PHASeshift 2670
WGENerator<wg>:COUPling[:FREQuency] 2670
WGENerator<wg>:COUPling:NOISe 2671
WGENerator<wg>:COUPling:AWForm 2671
GENerator:SYNC[:COMBination] 2671

WGENerator<wg>:COUPling:STATe <Enable>

Enables the coupling of the generators, with the selected set of parameters: amplitude, frequency and noise.

Suffix:
<wg> 1..2

Parameters:
<Enable> OFF | ON
*RST: OFF

Manual operation: See "Generator enable" on page 1066

WGENerator<wg>:COUPling:AMPLitude <CoupleAmplitude>

Enables the coupling of all amplitude parameters of the generators.

Suffix:
<wg> 1..2
Specifies the master generator.

Parameters:
<CoupleAmplitude> OFF | ON
*RST: OFF

Manual operation: See "Frequency parameters" on page 1067

WGENerator<wg>:COUPling:PHASeshift <PhaseShift>

Sets the phase shift between the waveform of Gen1 and Gen2 when the frequency parameters of the two waveforms are coupled.

Suffix:
<wg> 1..2
Specifies the master generator.

Parameters:
<PhaseShift> Range: -180 to 180
Increment: 1
*RST: 0
Default unit: °

Manual operation: See "Phase shift" on page 1067

WGENerator<wg>:COUPling[:FREQuency] <CoupleFrequency>

Enables the coupling of all frequency parameters of the generators.

Suffix:
<wg> 1..2
Specifies the master generator.

Parameters:
<CoupleFrequency> OFF | ON
*RST: OFF

Manual operation: See "Amplitude parameters" on page 1067

WGENerator<wg>:COUPling:NOISe <CoupleNoise>

Couples all noise parameters of the generators.

Suffix:
<wg> 1..2

Parameters:
<CoupleNoise> OFF | ON
*RST: OFF

Manual operation: See "Noise parameters" on page 1067

WGENerator<wg>:COUPling:AWForm <CoupleArbitrary>

Enables the coupling of the arbitrary waveform of the generators.

Suffix:
<wg> 1..2

Parameters:
<CoupleArbitrary> OFF | ON
*RST: OFF

GENerator:SYNC[:COMBination] <Combination>

Sets which signals generated from the waveform generator are synchronized.

Parameters:
<Combination> NONE | GEN12 | G1PG | G2PG | G12PG
GEN12: Gen1 and Gen 2
GEN1PG/GEN2PG: Gen1/Gen 2 and Patt Gen
GEN12PG: Gen1,Gen 2 and Patt Gen
*RST: NONE

Manual operation: See "Sync start" on page 1068

26.21 Pulse source and TDR/TDT analysis (options R&S RTP-B7/K130)

26.21.1 Pulse source (option R&S RTP-B7)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

PSRC[:STATe] 2672
PSRC:OUTPutlow 2672
PSRC:REPRate 2673
PSRC:DUTYcycle 2673
PSRC:CLOCkmode 2673
PSRC:RST 2674

PSRC[:STATe] <State>

Switches the pulse output on and off.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1073

PSRC:OUTPutlow <OutputLowLevel>

Sets the low level of the output pulse.

Parameters:

<OutputLowLevel> Range: -0.2 to -0.05
Increment: 0.01
*RST: -0.05
Default unit: V

Usage: Asynchronous command

Manual operation: See "Output level" on page 1074

PSRC:REPRate <RepetitionRate>

Sets the pulse frequency, the repetition rate of the pulse.

Parameters:

<RepetitionRate> Available values depend on the selected clock mode:
Locked: 5/10/20/50/100/200/500 Hz, 1/5/10/25/50/100/250 MHz
Free running: 5/10/20/50/100/200/500 Hz, 1/5/10/25/50 MHz

*RST: 1E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Repetition rate" on page 1074

PSRC:DUTYcycle <DutyCycle>

Sets the duty cycle of the pulse, which is the ratio of the positive pulse width to the period of the signal.

Parameters:

<DutyCycle> For repetition rates > 5 MHz, the value is fixed at 50 %.

Range: 10 to 90
Increment: 10
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 1074

PSRC:CLOCkmode <ClockMode>

Sets the dependency of the pulse clock on the instrument's reference clock.

Parameters:

<ClockMode> LOCKed | FREerunning

LOCKed
The pulse source is locked to the reference clock of the instrument.

FREerunning
The clock of the pulse source is independent. Deviations of the system do not affect the pulse clock, and deterministic conditions are avoided.

*RST: FREerunning

Usage: Asynchronous command

Manual operation: See "Clock mode" on page 1074

PSRC:RST

Resets the pulse source to the default state.

Usage: Event
Asynchronous command

Manual operation: See "Preset" on page 1074

26.21.2 TDR/TDT analysis

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

26.21.2.1 Calibration

TDRT:DEFault 2674
TDRT:CALibration:OPEN:NAME 2675
TDRT:CALibration:OPEN[:EXECute] 2675
TDRT:TYPE 2675
TDRT:CONFig 2675
TDRT:PULSe:OUT 2675
TDRT:PULSe:REFerence 2676
TDRT:PULSe:INVout 2676
TDRT:PULSe:INVReference 2676
TDRT:SLENgth 2676
TDRT:CALibration:SAVE:NAME 2677
TDRT:CALibration:SAVE[:EXECute] 2677

TDRT:DEFault

Starts the measurement with default correction values instead of calibrating the setup. Default values are rough values without time reference.

Usage: Event
Asynchronous command

Manual operation: See "Measure with default values" on page 1080

TDRT:CALibration:OPEN:NAME <Path>

Sets the file name, file format and path of the TDR/TDT calibration file to be opened. The file format is always `.xml`.

Parameters:
<Path> String with path and file name with extension `.xml`

Usage: Asynchronous command

Manual operation: See "Open" on page 1080

TDRT:CALibration:OPEN[:EXECute]

Opens and loads the TDR/TDT calibration from the file specified with `TDRT:CALibration:OPEN:NAME`.

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 1080

TDRT:TYPE <Type>

Selects the analysis type: TDR (time domain reflectometry), TDT (time domain transmission), or TDR/TDT (both TDR and TDT).

Parameters:
<Type> TDR | TDRTdt | TDT
*RST: TDR

Usage: Asynchronous command

Manual operation: See "Measurement type" on page 1079

TDRT:CONFig <Configuration>

Selects the connection: single-ended or differential.

Parameters:
<Configuration> SINGleended | DIFFerential
*RST: SINGleended

Usage: Asynchronous command

Manual operation: See "Configuration" on page 1079

TDRT:PULSe:OUT <Channel>

Sets the channel to which the "Out" connector of the pulse source is connected via calibration standard or DUT.

Parameters:
<Channel> C1W1 | C2W1 | C3W1 | C4W1
*RST: C2W1

Usage: Asynchronous command

Manual operation: See "Channel" on page 1081

TDRT:PULSe:REFerence <Channel>

Sets the channel to which the "Ref" connector of the pulse source is connected.

Parameters:
<Channel> C1W1 | C2W1 | C3W1 | C4W1
*RST: C1W1

Usage: Asynchronous command

Manual operation: See "Channel" on page 1081

TDRT:PULSe:INVout <Channel>

Sets the channel to which the $\overline{\text{Out}}$ connector of the pulse source is connected via calibration standard or DUT. Only required for differential measurements.

Parameters:
<Channel> C1W1 | C2W1 | C3W1 | C4W1
*RST: C3W1

Usage: Asynchronous command

Manual operation: See "Channel" on page 1081

TDRT:PULSe:INVReference <Channel>

Sets the channel to which the $\overline{\text{Ref}}$ connector of the pulse source is connected. Only required for differential measurements.

Parameters:
<Channel> C1W1 | C2W1 | C3W1 | C4W1
*RST: C4W1

Usage: Asynchronous command

Manual operation: See "Channel" on page 1081

TDRT:SLENgth <ShortLength>

Sets the electrical length of a user-defined short.

The reset value is the electrical length of the short hat is delivered with the pulse source R&S RTP-B7.

Parameters:

<ShortLength>
Range: 0 to 2E-9
Increment: 1E-12
*RST: 26.5E-12
Default unit: s

Usage: Asynchronous command

Manual operation: See "Short type" on page 1083

TDRT:CALibration:SAVE:NAME <Path>

Sets the file name, file format and path of the TDR/TDT calibration file to be saved. The file format is always `.xml`.

Parameters:

<Path> String with path and file name with extension `.xml`

Usage: Asynchronous command

Manual operation: See "Save calibration" on page 1085

TDRT:CALibration:SAVE[:EXECute]

Saves the TDR/TDT calibration results to the file that is specified with `TDRT:CALibration:SAVE:NAME`.

Usage: Setting only
Asynchronous command

Manual operation: See "Save calibration" on page 1085

26.21.2.2 Measurements

TDRT:STATe 2677
TDRT:CALibration:USECaldata 2678
TDRT:BW 2678
TDRT:DOMain 2678
TDRT:PERMittivity 2679
TDRT:SIGNal<m>:STATe 2679
TDRT:SIGNal<m>:SCALe 2679
TDRT:SIGNal<m>:OFFSet 2679
TDRT:SIGNal<m>:POSition 2680
TDRT:SIGNal<m>:DATA:HEADer? 2680
TDRT:SIGNal<m>:DATA:VALues? 2681

TDRT:STATe <State>

Activates or deactivates the TDR/TDT measurements.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1086

TDRT:CALibration:USECaldata <UseCalibrationDat>

Disables or enables the frequency response calibration. Without calibration, the measured signals are only rescaled, and you can see the impact of the frequency response calibration on the time domain waveform.

The command is not relevant when measuring with default values.

Parameters:
<UseCalibrationDat> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Use frequency response calibration" on page 1086

TDRT:BW <Bandwidth>

Sets the bandwidth of the DUT.

Parameters:
<Bandwidth> Range: 2E+9 to 16E+9
Increment: 10
*RST: 4E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 1086

TDRT:DOMain <OutputDomain>

Sets the domain of the x-axis: time or distance (in m or inch). If you select distance, enter also the permittivity with `TDRT:PERMittivity`.

Parameters:
<OutputDomain> TIME | MDIStance | INDistance
MDIStance = distance in m
IDIStance = distance in inch
*RST: TIME

Usage: Asynchronous command

Manual operation: See "Domain, ε_r" on page 1087

TDRT:PERMittivity <Permittivity>

Sets the permittivity "ε_r" of the used DUT.

Parameters:

<Permittivity>
Range: 1 to 100
Increment: 0.1
*RST: 3.3

Usage: Asynchronous command

Manual operation: See "Domain, ε_r" on page 1087

TDRT:SIGNal<m>:STATe <State>

Enables the indicated TDR/TDT signal.

Suffix:

<m>
1..3
1 = impedance Z (result of TDR measurement)
2 = step response H (result of TDT measurement)
3 = reflection coefficient ρ (result of TDR measurement)

Parameters:

<State>
OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 1087

TDRT:SIGNal<m>:SCALe <VerticalScale>

Set the vertical scale of the indicated TDR/TDT signal.

Suffix:

<m>
1..3
See `TDRT:SIGNal<m>:STATe` on page 2679.

Parameters:

<VerticalScale>
Range: 1E-12 to 100E+12
Increment: 1E-3
*RST: 0.05
Default unit: /div

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 1087

TDRT:SIGNal<m>:OFFSet <Offset>

Set the offset of the indicated TDR/TDT signal.

Suffix:
<m> 1..3
See TDRT:SIGNal<m>:STATe on page 2679.

Parameters:
<Offset> Range: 1E-12 to 100E+12
Increment: 0.01
*RST: 0

Usage: Asynchronous command

Manual operation: See "Offset" on page 1087

TDRT:SIGNal<m>:POSition <Position>

Set the vertical position of the indicated TDR/TDT signal.

Suffix:
<m> 1..3
See TDRT:SIGNal<m>:STATe on page 2679.

Parameters:
<Position> Range: 1E-12 to 100E+12
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Offset" on page 1087

TDRT:SIGNal<m>:DATA:HEADer?

Returns the header of channel waveform data.

Table 26-13: Header data

Position	Meaning	Example
1	XStart in s	-9.477E-008 = - 94,77 ns
2	XStop in s	9.477E-008 = 94,77 ns
3	Record length of one waveform	200000
4	Number of values per sample interval, is 1	1

Suffix:
<m> 1..3
See TDRT:SIGNal<m>:STATe on page 2679.

Return values:
<Start> 1. header value: time of the first sample in s

<Stop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample, is 1.

Example: `TDRT:SIGNal1:DATA:HEAD?`
`-9.477E-008,9.477E-008,20000,1`
The start time of the data is -9.477E-008 = - 94,77 ns, and the end time of the data is 9.477E-008 = 94,77 ns. The data stream has 20000 values with one value per sample.

Usage: Query only

TDRT:SIGNal<m>:DATA:VALues? [<Offset>][,<Length>]

Returns the data of the waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster.

To set the export format, use `FORMat[:DATA]`. Supported formats are: ASCii | REAL,32 | INT,8 | INT,16.

Suffix:
<m> 1..3
See `TDRT:SIGNal<m>:STATe` on page 2679.

Query parameters:
[<Offset>] Number of offset waveform points.
Range: 0 to m. Limit: n + m >= record length

[<Length>] Number of waveform points to be retrieved.
Range: 1 to n. Limit: n + m >= record length

Return values:
<Data> List of comma-separated values

Usage: Query only

26.22 I/Q software interface (option R&S RTP-K11)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- Section 26.3, "Programming examples", on page 1327

- I/Q sampling settings....2682
- I/Q data output....2687

26.22.1 I/Q sampling settings

To switch on the input channels, use `CHANnel<ch>:STATe`.

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

IQ:BWIDth?....2682
CHANnel<ch>:IQ:INPMode....2683
CHANnel<ch>:IQ:INPType....2683
IQ:INSRate....2683
IQ:PAIR....2684
IQ:RBWidth....2684
IQ:RLENgth....2684
IQ:SRATe....2685
IQ:STATe....2685
CHANnel<ch>:IQ:CFRequency....2685
CHANnel<ch>:IQ:SBRF....2686
CHANnel<ch>:IQ:SBIF....2686
CHANnel<ch>:IQ:WARNing[:STATe]?....2687
CHANnel<ch>:IQ:WARNing:MESSage?....2687

IQ:BWIDth?

Returns the filter bandwidth.

See also: `IQ:RBWidth` on page 2684

Return values:

<AbsBw> Range: 40 to 16E+9
*RST: 4E+9
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "Rel. BW, Filter BW" on page 1093

CHANnel<ch>:IQ:INPMode <IQInputMode>

Selects the frequency band of a complex input signal.

Suffix:
<ch> 1..4
Selects the input channel.

Parameters:
<IQInputMode> BASeband | RFIF
Baseband or intermediate frequency (RFIF)
*RST: BASeband

Usage: Asynchronous command

Manual operation: See "Input type, Input mode" on page 1092

CHANnel<ch>:IQ:INPType <IQInputType>

Sets the type of the input signal.

Suffix:
<ch> 1..4

Parameters:
<IQInputType> REAL | COMPlex
REAL
Real RF signal. One real RF signal requires one input channel, thus up to four real signals can be recorded in parallel.
COMPlex
Complex I/Q signal in baseband or low IF range. One complex input signal requires two input channels. The In-Phase component must be connected to channel 1 or 3, and the Quadrature component must be connected to channel 2 or 4. Thus up to two complex input signals can be recorded in parallel.
*RST: REAL

Usage: Asynchronous command

Manual operation: See "Input type, Input mode" on page 1092

IQ:INSRate <InputSmpRate>

Shows the sample rate of capturing the input data in I/Q mode: 20 Gsample/s.

If you use R&S RTP134B or R&S RTP164B instruments, you can change the sample rate to 40 Gsample/s. See also: "Input sample rate" on page 1091.

Parameters:
<InputSampleRate> SR20G | SR40G

Example: Query the input sample rate:

```
IQ:INSR?
<-- SR20G
```

Only at R&S RTP134B and R&S RTP164B: change the input sample rate:

```
IQ:INSR SR40G
```

Usage: Asynchronous command

Manual operation: See "Input sample rate" on page 1091

IQ:PAIR <ChannelPair>

Selects the channel combination. You can couple one of the channels C1 or C2 with one of the channels C4 or C4.

The command is valid at input sample rate 40 Gsample/s on R&S RTP134B or R&S RTP164B instruments.

Parameters:

<ChannelPair> C1C3 | C1C4 | C2C3 | C2C4

*RST: C1C3

Usage: Asynchronous command

Manual operation: See "Used channel pair" on page 1092

IQ:RBWidth <RelBw>

Sets the bandwidth factor to define the filter bandwidth.

*Filter BW = Relative BW * Sample rate*

Parameters:

<RelBw> Range: 0.04 to 0.8
Increment: 0.01
*RST: 0.8

Usage: Asynchronous command

Manual operation: See "Rel. BW, Filter BW" on page 1093

IQ:RLENgth <RecordLength>

Sets the required record length of the output I/Q data. The resulting acquisition time of the I/Q data is:

Acquisition time = Record length / Sample rate

Parameters:

<RecordLength> Range: 1 to 40E+6
Increment: 2
*RST: 100E+3
Default unit: pts

Usage: Asynchronous command

Manual operation: See "Record length" on page 1094

IQ:SRATe <SampleRate>

Sets the required sample rate of the output I/Q data.

Parameters:

<SampleRate>
Range: 1000 | 400E+6 to 20E+9 | 40E+9 (for input sample rate 20 Gsample/s | 40 Gsample/s)
Increment: 1
*RST: 10E+9
Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "Sample rate" on page 1094

IQ:STATe <IQMode>

Activates the I/Q mode of the instrument.

Parameters:

<IQMode>
OFF | ON
ON: I/Q mode
OFF: normal oscilloscope mode
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1091

CHANnel<ch>:IQ:CFRequency <IQCarrierFreqInput>

Sets the carrier frequency of the modulated RF signal or of the complex signal in IF range.

Prerequisites:

- `CHANnel<ch>:IQ:INPType` on page 2683 is set to `REAL`
  or:
- `CHANnel<ch>:IQ:INPType` on page 2683 is set to `COMPlex` and `CHANnel<ch>:IQ:INPMode` on page 2683 is set to `RFIF`

Suffix:

<ch>
1..4
Selects the input channel.

Parameters:

<IQCarrierFreqInput> Range: 10E-3 to 20E+9
Increment: 100
*RST: 1E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Carrier frequency" on page 1094

CHANnel<ch>:IQ:SBRF <IQSidebandRF>

Defines the frequency position of the RF spectrum in the input signal: normal or inverse. The position is important for correct down-conversion and filtering.

Prerequisite: `CHANnel<ch>:IQ:INPType` on page 2683 is set to `REAL`

For details, see "Sideband (real input)" on page 1094

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<IQSidebandRF> INVerse | NORMal
*RST: NORMal

Usage: Asynchronous command

Manual operation: See "Sideband (real input)" on page 1094

CHANnel<ch>:IQ:SBIF <IQSidebandIF>

Defines the sideband and the frequency position of complex modulated input signal in IF range.

Prerequisites: `CHANnel<ch>:IQ:INPType` on page 2683 is set to `COMPlex` and `CHANnel<ch>:IQ:INPMode` on page 2683 is set to `RFIF`

For details, see "Sideband (complex IF input)" on page 1095

Suffix:

<ch> 1..4
Selects the input channel.

Parameters:

<IQSidebandIF> NUPPer | NLOWer | IUPPer | ILOWer
NUPPer: Upper sideband in normal position
NLOWer: Lower sideband in normal position
IUPPer: Upper sideband in inverse position
ILOWer: Lower sideband in inverse position
*RST: NUPPer

Usage: Asynchronous command

Manual operation: See "Sideband (complex IF input)" on page 1095

CHANnel<ch>:IQ:WARNing[:STATe]?

Returns ON if the sampling setup results in an unfavorable combination.

To get the message, use `CHANnel<ch>:IQ:WARNing:MESSage?`.

Suffix:
<ch> 1..4

Return values:
<WarningState> OFF | ON
*RST: OFF

Usage: Query only

CHANnel<ch>:IQ:WARNing:MESSage?

Returns the message string if `CHANnel<ch>:IQ:WARNing[:STATe]?` is true.

Suffix:
<ch> 1..4

Return values:
<WarningMessage> The string is:
"Undersampling" if the carrier frequency is too fast.
"CF + BW/2 > DevBW" if bandwidth serttings do not fit. CF is the carrier frequency, BW is the filter bandwidth, and DevBW is the maximum instrument bandwidth.

Usage: Query only

26.22.2 I/Q data output

CHANnel<ch>:IQ:DATA[:VALues]?....2687
CHANnel<ch>:IQ:DATA:HEADer?....2688

CHANnel<ch>:IQ:DATA[:VALues]?

Returns the recorded I/Q data.

Suffix:
<ch> 1..4
Selects the input channel.
In case of a complex input signal that requires two input channels, the results of sources Ch1 and Ch2 are identical, as well as the results of Ch3 and Ch4.

Return values:
<Data> Comma-separated list of in-phase and and quadrature floating values in interleaved order.

Example:
```
CHAN1:IQ:DATA?
-9.6296054835E-005, -1.5046258568E-006,
0.0001013283545, 1.5832555391E-006,
-0.00014297277085, -2.233616442E-006,
0.000192677413, 3.0105845781E-006,
-0.00020517286612, -3.2058260331E-006,
-0.002648930531, -4.1546467401E-005,
-0.0028401580639, -4.4135249482E-005,
-0.0028636774514, -4.4877564505E-005, ...
```

Usage: Query only

Manual operation: See "Save IQ data to file" on page 1096

CHANnel<ch>:IQ:DATA:HEADer?

Returns the header of I/Q data.

Suffix:

<ch> 1..4
Selects the input channel.

Return values:

<Start> 1. header value: acquisition time before trigger, in s

<Stop> 2. header value: acquisition time after trigger, in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. 2 values per sample means the I and Q values are in the data.

Example:
```
CHAN1:IQ:DATA:HEAD?
-5E-008,5E-008,1000,1
```
The start time of the data is -5E-008 = - 50 ns, and the end time of the data is 5E-008 = 50 ns. The data stream has 1000 values with 2 values per sample (I and Q values are in the data).

Usage: Query only

Manual operation: See "Save IQ data to file" on page 1096

26.23 Jitter analysis and clock data recovery

This chaptes decribes the remote commands of jitter option R&S RTP-K12 /K133 and CDR option R&S RTP-K140/K141.

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Jitter measurements (option R&S RTP-K12)..... 2689
- Advanced jitter and noise (option R&S RTP-K133/K134)..... 2695
- Clock data recovery (software-based, option R&S RTP-K12)..... 2739
- Eye mask testing..... 2745

26.23.1 Jitter measurements (option R&S RTP-K12)

The following table lists the measurement suffixes and the <MeasType> parameter value with a short description.

For a detailed description, see Section 19.1.1, "Jitter measurements", on page 1099.

Table 26-14: Jitter measurements

<n> suffix for limit checks	<MeasType> parameter value	Meas. type	Description/Result
37	CCJitter	Cycle-cycle jitter	Difference between the periods of two adjacent cycles. The measurement is based on the period measurement.
38	NCJitter	N-cycle jitter	Difference between the time of two adjacent groups of N cycles (periods) each.
39	CCWidth	Cycle-cycle width	Difference between the pulse width of two adjacent cycles. The measurement is based on the pulse width measurement.
40	CCDutycycle	Cycle-cycle duty cycle	Difference between the duty cycle of two adjacent cycles. The measurement is based on the duty cycle measurement.
41	TIE	Time interval error	Time difference between the slope of the input signal and the slope of a reference signal. The reference signal can be a captured clock waveform, or a clock generated by clock data recovery (CDR, software algorithm or hardware generation). Also available for PAM-N signals with PAM order > 2.
42	UINTerval	Unit interval	Period of the clock signal. If no clock signal is available, it is recovered by CDR. The period is calculated as the time difference between two consecutive clock edges of the same polarity. Also available for PAM-N signals with PAM order > 2.
43	DRATe	Data rate	Frequency of the clock signal. If no clock signal is available, it is recovered by CDR. The measurement is based on the unit interval measurement. Also available for PAM-N signals with PAM order > 2.
44	SKWDelay	Skew delay	Delay between the edges of two interdependent waveforms.

<n> suffix for limit checks	<MeasType> parameter value	Meas. type	Description/Result
45	SKWPhase	Skew phase	Phase difference between the edges of two waveforms.
1 to 36; 46	Used for limit checks on amplitude/time measurements.		

For margin and limit checks, use the amplitude/time commands with the limit check suffixes given in Table 26-14. For commands, see Section 26.12.2, "Amplitude/time measurements", on page 1603.

MEASurement<mg>:JITTer:CCSLope....2690
MEASurement<mg>:JITTer:CDRMode....2691
MEASurement<mg>:JITTer:CLOCk:FACTor....2691
MEASurement<mg>:JITTer:CLOCk:FREQuency....2692
MEASurement<mg>:JITTer:CLOCk:FREStimation....2692
MEASurement<mg>:JITTer:DRUNit....2692
MEASurement<mg>:JITTer:NCYCles....2693
MEASurement<mg>:JITTer:PULSe....2693
MEASurement<mg>:JITTer:SKWSlope....2693
MEASurement<mg>:JITTer:SKWRelation....2694
MEASurement<mg>:JITTer:SOURce<n>:TIESlope....2694

MEASurement<mg>:JITTer:CCSLope <Jitter_CCSlope>

Selects the slope at which the periods and thus the jitter is measured.

The command is available for the following measurements: cycle-cycle jitter, N-cycle jitter, and cycle-cycle duty cycle (`MEASurement<mg>:MAIN` and/or `MEASurement<mg>:ADDitional` are set to measurements CCJitter | NCJitter | CCDutycycle).

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:

<Jitter_CCSlope> FIRSt | POSitive | NEGative | EITHer

FIRSt
Measures the period from the first edge that is found, no matter of its direction.

POSitive
Measures the period at positive going edges.

NEGative
Measures the period at negative going edges.

EITHer
Measures the period at both positive and negative going edges. This option is useful, for example, to check the clock stability of a double data rate clock.

*RST: FIRSt

Usage: Asynchronous command

Manual operation: See "Cycle begin" on page 1103

MEASurement<mg>:JITTer:CDRMode <Jitter_CDRMode>

Defines the origin of the clock signal - wether a real clock signal or a clock generated using one of the CDR methods.

The command is available for the following measurements: time-interval error, unit interval and data rate (`MEASurement<mg>:MAIN` and/or `MEASurement<mg>:ADDitional` are set to measurements TIE | UINTerval | DRATe).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Jitter_CDRMode> SIGNal | SW1 | SW2 | SW3 | SW4

SIGNal
The clock is a real clock signal.

SW1 | SW2 | SW3 | SW4
The clock is generated by a software algorithm. You can define two software algorithms for CDR. To configure the CDR, use the `CDR:SOFTware` commands.

*RST: SW1

Usage: Asynchronous command

Manual operation: See "Mode (clock)" on page 1105

MEASurement<mg>:JITTer:CLOCk:FACTor <ClockMultiplier>

Sets a value for the clock multiplier, the number of samples per clock interval. The setting is relevant if the clock is an explicit clock signal.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<ClockMultiplier> Range: 1 to 100
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Multiplier" on page 1106

MEASurement<mg>:JITTer:CLOCk:FREQuency <Frequency>

Sets the clock frequency for the explicit clock signal. The setting is relevant if the clock is an explicit clock signal and the data signal has a PAM order > 2.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Frequency> Range: 1000 to 10E+9
Increment: 10
*RST: 500E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1107

MEASurement<mg>:JITTer:CLOCk:FREStimation

Calculates an estimate value for the clock frequency. The setting is relevant if the clock is an explicit clock signal and the data signal has a PAM order > 2.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Usage: Event

Manual operation: See "Estimate frequency" on page 1107

MEASurement<mg>:JITTer:DRUNit <DataRateUnit>

Sets the unit for data rate measurements.

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<DataRateUnit> BIT_S | Hz
*RST: BIT_S

Usage: Asynchronous command

Manual operation: See "Unit" on page 1107

MEASurement<mg>:JITTer:NCYCles <Jitter_NofCycles>

Sets the number of periods (cycles) that are accumulated to measure the N-cycle jitter.

See also: Table 19-1

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<Jitter_NofCycles> Range: 1 to 2.14748E+9
Increment: 1
*RST: 2

Usage: Asynchronous command

Firmware/software: FW 2.60. The algorithm of N-cycle measurement has been changed and `MEASurement:JITTer:COFFset` has been removed.

Manual operation: See "Number of cycles" on page 1103

MEASurement<mg>:JITTer:PULSe <JitterPulsePolarity>

Sets the polarity of pulses for which the pulse width is measured to obtain the cycle-cycle width and the cycle-cycle duty cycle.

The command is available for the following measurements: cycle-cycle width and cycle-cycle duty cycle (`MEASurement<mg>:MAIN` and/or `MEASurement<mg>:ADDitional` are set to measurements CCWidth | CCDutycycle).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<JitterPulsePolarity> POSitive | NEGative
Pulse width of positive or negative pulses is measured, respectively.
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Pulse polarity" on page 1103

MEASurement<mg>:JITTer:SKWSlope <JitterSkewSlope>

Sets the edge of the first waveform from which the skew delay or phase is measured: positive, negative or both.

The command is available for the following measurement: skew delay and skew phase (`MEASurement<mg>:MAIN` and/or `MEASurement<mg>:ADDitional` are set to measurements SKWDelay | SKWPhase).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<JitterSkewSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Edge polarity" on page 1107

MEASurement<mg>:JITTer:SKWRelation <JitterSkewRelation>

Sets the edge of the second waveform relative to the first waveform.

The command is available for the following measurements: skew delay and skew phase (`MEASurement<mg>:MAIN` and/or `MEASurement<mg>:ADDitional` are set to measurements SKWDelay | SKWPhase).

Suffix:
<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

Parameters:
<JitterSkewRelation> MATChing | INVerse

MATChing
Measures from positive to positive edge or from negative to negative edge.

INVerse
Measures from positive to negative edge or from negative to positive edge.

*RST: MATChing

Usage: Asynchronous command

Manual operation: See "Relative polarity" on page 1108

MEASurement<mg>:JITTer:SOURce<n>:TIESlope <Jitter_TIESlope>

Sets the clock and data edges that are used for measurements. Clock or data is defined by the SOURce suffix <n>.

The command is available for the following measurements: time-interval error, unit interval and data rate (`MEASurement<mg>:MAIN` and/or `MEASurement<mg>:ADDitional` are set to measurements TIE | UINTerval | DRATe.

Suffix:

<mg> 1..10
See "Selection of the measurement group: MEASurement<mg>" on page 1596.

<n> 1..2
1 = data slope (only relevant for time interval error measurements with explicit clock signal)
2 = clock slope

Parameters:

<Jitter_TIESlope> POSitive | NEGative | EITHer

POSitive
The positive clock slope can be used, for example, for single data rate (SDR) signals with bit start at the positive clock edge.

NEGative
The negative clock slope can be used, for example, for SDR signals with bit start at the negative clock edge.

EITHer
For clock edges, this option can be used for double data rate (DDR) signals.
For data edges, it is the most common setting.

*RST: EITHer

Usage: Asynchronous command

Manual operation: See "Slope" on page 1106

26.23.2 Advanced jitter and noise (option R&S RTP-K133/K134)

This chapter contains all remote commands to set up the advanced jitter and advanced noise analysis.

Selection of the advanced jitter measurement: ADVJitter<m>

With R&S RTP, you can configure up to two simultaneous advanced jitter measurements. In manual operation, they are represented by subtabs "JA1" and "JA2" in the "Advanced Jitter" dialog box. For remote operation, they are indicated by the suffix `ADVJitter<m>`.

Remote control: ADVJitter suffix <m>	Manual operation: "JA" subtab
1 to 2 correspond to	"JA1" to "JA2"

- Signal 2696
- Results 2702
- Advanced settings 2736

26.23.2.1 Signal

ADVJitter<m>:SIGNal:TYPE 2696
ADVJitter<m>:SIGNal:SOURce 2696
ADVJitter<m>:SIGNal:QUICkmeas 2697
ADVJitter<m>:SIGNal:SYMBolrate? 2697
ADVJitter<m>:SIGNal:CDRMode 2697
ADVJitter<m>:SIGNal:REFSource 2697
ADVJitter<m>:SIGNal:CLKSource 2698
ADVJitter<m>:SIGNal:EDGE 2698
ADVJitter<m>:SIGNal:CLFFactor 2698
ADVJitter<m>:SIGNal:CLFRequency 2698
ADVJitter<m>:SIGNal:CLOFfset 2699
ADVJitter<m>:SIGNal:DATRate? 2699
ADVJitter<m>:SIGNal:GATE:COUPling 2699
ADVJitter<m>:SIGNal:GATE:CURSor 2700
ADVJitter<m>:SIGNal:GATE:RANGe:ABSolute:STARt 2700
ADVJitter<m>:SIGNal:GATE:RANGe:ABSolute:STOP 2700
ADVJitter<m>:SIGNal:GATE:RANGe:MODE 2700
ADVJitter<m>:SIGNal:GATE:RANGe:RELative:STARt 2701
ADVJitter<m>:SIGNal:GATE:RANGe:RELative:STOP 2701
ADVJitter<m>:SIGNal:GATE:ZDIagram 2701
ADVJitter<m>:SIGNal:GATE:STATe 2702
ADVJitter<m>:SIGNal:FREStimation 2702
ADVJitter<m>:SIGNal:OFEStimation 2702

ADVJitter<m>:SIGNal:TYPE <SignalType>

Select, if the analyzed signal is a data or clock signal.

Suffix:
<m> 1..2

Parameters:
<SignalType> CLOCk | DATNrz
*RST: DATNrz

Manual operation: See "Signal Type" on page 1112

ADVJitter<m>:SIGNal:SOURce <SourceType>

Selects the source for the advanced jitter analysis.

Suffix:
<m> 1..2

Parameters:
<SourceType> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2

Manual operation: See "Analyzed source" on page 1112

ADVJitter<m>:SIGNal:QUICkmeas

Starts a quick advanced jitter analysis.

Suffix:
<m> 1..2

Usage: Event

Manual operation: See "Quick start analysis" on page 1112

ADVJitter<m>:SIGNal:SYMBolrate?

Sets/ displays the symbol rate.

Suffix:
<m> 1..2

Return values:
<SymbolrateVal> Range: 1000 to 10E+9
Increment: 10
*RST: 1E+9
Default unit: bps

Usage: Query only

ADVJitter<m>:SIGNal:CDRMode <MethodType>

Selects the reference source for the CDR signal, if `ADVJitter<m>:SIGNal:REFSource` is set to `CDR`.

Suffix:
<m> 1..2

Parameters:
<MethodType> SW1 | SW2 | SW3 | SW4
*RST: SW1

Manual operation: See "Software CDR" on page 1114

ADVJitter<m>:SIGNal:REFSource <SourceType>

Selects if an explicit clock or a CDR signal is used as a reference signal.

Suffix:
<m> 1..2

Parameters:
<SourceType> CLOCk | CDR
*RST: CDR

Manual operation: See "Clock / CDR" on page 1114

ADVJitter<m>:SIGNal:CLKSource <SourceType>

Selects the reference source for the clock signal, if `ADVJitter<m>:SIGNal:REFSource` is set to `CLOCk`.

Suffix:
<m> 1..2

Parameters:
<SourceType> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2

Manual operation: See "Reference source" on page 1115

ADVJitter<m>:SIGNal:EDGE <EdgeType>

The clock edge sets the point in time when the state of the data signal is checked.

Suffix:
<m> 1..2

Parameters:
<EdgeType> POSitive | NEGative | EITHer
*RST: EITHer

Manual operation: See "Clock edge" on page 1115

ADVJitter<m>:SIGNal:CLFFactor <Factor>

Sets a clock multiplier factor.

Suffix:
<m> 1..2

Parameters:
<Factor> Range: 1 to 100
Increment: 1
*RST: 1

Manual operation: See "Clock multiplier" on page 1115

ADVJitter<m>:SIGNal:CLFRequency <Frequency>

Sets the clock frequency for the explicit clock signal.

Suffix:
<m> 1..2

Parameters:

<Frequency>
Range: 1000 to 10E+9
Increment: 10
*RST: 1E+9
Default unit: Hz

Manual operation: See "Clock frequency" on page 1115

ADVJitter<m>:SIGNal:CLOFfset <Offset>

Sets a clock offset for the explicit clock signal.

Suffix:

<m> 1..2

Parameters:

<Offset>
Range: -1000 to 1000
Increment: 0.01
*RST: 0
Default unit: UI

Manual operation: See "Clock offset" on page 1116

ADVJitter<m>:SIGNal:DATRate?

Displays the calculated data rate of the explicit clock signal.

Suffix:

<m> 1..2

Return values:

<DatarateValue>
Range: 1000 to 10E+9
Increment: 10
*RST: 1E+9
Default unit: bps

Usage: Query only

Manual operation: See "Data rate" on page 1116

ADVJitter<m>:SIGNal:GATE:COUPling <ModeType>

Sets if the gate is coupled to the zoom or cursor.

Suffix:

<m> 1..2

Parameters:

<ModeType>
NONE | CURSor | ZOOM
*RST: NONE

Manual operation: See "Coupling mode" on page 1113

ADVJitter<m>:SIGNal:GATE:CURSor <CursorType>

Sets the cursor the gate is coupled to, if `ADVJitter<m>:SIGNal:GATE:COUPling` is set to `CURSor`.

Suffix:
<m> 1..2

Parameters:
<CursorType> CURSOR1 | CURSor1 | CURSOR2 | CURSor2 | CURSOR3 | CURSor3 | CURSOR4 | CURSor4
*RST: CURSOR1

Manual operation: See "Cursor / Zoom" on page 1114

ADVJitter<m>:SIGNal:GATE:RANGe:ABSolute:STARt <StartValue>

Sets the start time of the gate area in percent, if `ADVJitter<m>:SIGNal:GATE:RANGe:MODE` is set to `ABS`.

Suffix:
<m> 1..2

Parameters:
<StartValue> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0

Manual operation: See "Start / Stop" on page 1114

ADVJitter<m>:SIGNal:GATE:RANGe:ABSolute:STOP <StopValue>

Sets the stop time of the gate area in percent, if `ADVJitter<m>:SIGNal:GATE:RANGe:MODE` is set to `ABS`.

Suffix:
<m> 1..2

Parameters:
<StopValue> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Manual operation: See "Start / Stop" on page 1114

ADVJitter<m>:SIGNal:GATE:RANGe:MODE <ModeType>

Selects if the gate area is defined in relative values (percent) or absolute.

Suffix:
<m> 1..2

Parameters:
<ModeType> ABS | REL
*RST: ABS

Manual operation: See "Mode" on page 1114

ADVJitter<m>:SIGNal:GATE:RANGe:RELative:STARt <StartValue>

Sets the relative start of the gate area in percent, if `ADVJitter<m>:SIGNal:GATE:RANGe:MODE` is set to `REL`.

Suffix:
<m> 1..2

Parameters:
<StartValue> Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Manual operation: See "Relative start / stop" on page 1114

ADVJitter<m>:SIGNal:GATE:RANGe:RELative:STOP <StopValue>

Sets the relative stop of the gate area in percent, if `ADVJitter<m>:SIGNal:GATE:RANGe:MODE` is set to `REL`.

Suffix:
<m> 1..2

Parameters:
<StopValue> Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Manual operation: See "Relative start / stop" on page 1114

ADVJitter<m>:SIGNal:GATE:ZDIagram <ZoomDiagram>

Sets the zoom the gate is coupled to, if `ADVJitter<m>:SIGNal:GATE:COUPling` is set to `ZOOM`.

Suffix:
<m> 1..2

Parameters:
<ZoomDiagram>

Manual operation: See "Cursor / Zoom" on page 1114

ADVJitter<m>:SIGNal:GATE:STATe <State>

Enables the gating setup for the advanced jitter analysis.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Use gate" on page 1113

ADVJitter<m>:SIGNal:FREStimation

Executes an estimation of the signal frequency.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Estimate clock frequency" on page 1115

ADVJitter<m>:SIGNal:OFEStimation

Executes an estimationon of the clock offset frequency.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Estimate clock offset" on page 1116

26.23.2.2 Results

For remote operation, the component is indicated by the suffix `COMPonents<n>`.

Table 26-15: Advanced jitter components

Suffix <n>	Component	Description/Result
Basic components		
1	Symbol rate	Number of data symbols per second of the analyzed signal. It is equivalent to the baud rate. For binary signals, the signal rate is equal to the bit rate.
2	Symbol duration	The length of time to transfer one signal symbol. Equals the inverse value of the symbol rate.
3	Event Count	Number of analyzed data transitions.

Suffix <n>	Component	Description/Result
Jitter components (option R&S RTP-K133)		
4	TJ@BER	The eye closure at the user-defined target BER.
5	RJ+(O)BUJ	Consists of any influence that cannot be predicted with model parameters. Usually, this jitter component follows a Gaussian probability distribution. Other Bounded Uncorrelated Jitter (OBUJ) is included here. OBUJ refers to any jitter that is bounded, uncorrelated time interval error (TIE) distribution, for example from unobserved data signals.
6	DJ (δ-δ)	Industry standard approximation to the deterministic jitter measurement, calculated by fitting a model of two overlapping, equally large Gaussian distributions to the observed DJ histogram. The calculated value is the time difference between the two distributions center points.
7	TJ	Measures the total Time Interval Error (TIE) of the input signal. It is defined as the time between each transition of the input signal and its corresponding reference clock transition.
8	DJ	The reproducible portion of the overall TIE of the input signal. It consists of the Data Dependent Jitter (DDJ) and Periodic Jitter (PJ) components.
9	DDJ	Consists of Inter-symbol Interference (ISI) and Duty Cycle Distortion (DCD). It depends on the symbol sequence. ISI is an effect commonly caused by limited signal bandwidth in the transmitter and transmission line, which forces influence from past symbols onto future symbols. DCD is a mismatch between rising and falling signal transitions due to reference level mismatch or other imbalances between transitions.
10	DCD	Measure of imbalance between rising and falling data transitions. It is defined as the time difference between the average rising and average falling edge.
11	PJ	Caused by crosstalk from periodic signal sources to the transmitter or transmission line. It represents the harmonic portion of the overall time interval error (TIE).
12	ISI	The time between the earliest and the latest signal transition of a single transition type, i.e.rising and falling edges. The measurement result is the largest value across all transition types.
13	DDJ +PJ	Composite impact of all unknown but deterministic portions of the overall time interval error of the input signal. It consists of any disturbance that comes from a deterministic source but cannot be reproduced from the input signal. Often it is caused by crosstalk from other data signals.
14	(O)BUJ	Composite impact of all unknown but deterministic portions of the overall time interval error of the input signal. It consists of any disturbance that comes from a deterministic source but cannot be reproduced from the input signal. Often it is caused by crosstalk from other data signals.
15	(O)BUJ (δ-δ)	Other bounded uncorrelated Dual-Dirac jitter (O)BUJ (δ- δ) is an industry standard approximation to the other bounded uncorrelated jitter measurement. It is calculated by fitting a model of two overlapping, equally large Gaussian distributions to the observed RJ+(O)BUJ histogram. The calculated value is the amplitude difference between the two distributions center points.

Suffix <n>	Component	Description/Result
16	RJ	Consists of any influence that cannot be predicted with model parameters. Usually, this jitter component follows a Gaussian probability distribution. The algorithm computes the standard deviation and the peak-peak value of the TIE caused by RJ within the analyzed waveform.
Noise components (option R&S RTP-K134)		
17	EH@BER	Returns the vertical eye opening at the user-defined BER.
18	RN+(O)BUN	Random noise plus (other) bounded uncorrelated noise or (other) bounded uncorrelated noise is the combined effect of both noise types. If periodic components are activated RN + OBUN are displayed, otherwise RN + BUN. RN + (O)BUN is typically used, if track or spectrum plots are desired. Both plots are not available for RN only or (O)BUN only components as the time dependencies of these noise types are unknown. RN + (O)BUN spectrum is a useful approximation of the RN spectrum for negligible small (O)BUN.
20	TN	Measures the total level error of the input signal. It is defined as the amplitude deviation between the amplitude of the input signal at the decision time point and its corresponding reference level.
21	DN	The reproducible portion of the overall level error of the input signal. It consists of the data-dependent noise, the periodic noise components and the other bounded uncorrelated jitter components.
22	DDN	Consists of inter-symbol interface noise and level distortion. It depends on the symbol sequence. ISIN is an effect whereby past symbols have an influence on future symbols. LD is a mismatch between rising and falling signal transitions due to reference level mismatch or other imbalances between transitions.
23	LD	A measure of imbalance between different symbol levels. It is defined as the difference between the average level errors of the symbols one and zero.
24	PN	Periodic noise is typically caused by crosstalk from periodic signal sources to the transmitter or transmission line. It represents the harmonic portion of the overall level error.
25	ISIN	The level difference between the highest and the lowest level error of a symbol, i.e. one or zero.The largest value across all symbols is the measurement result.
26	DDN + PN	Data-dependent noise plus periodic noise is the combined effect of both jitter types. Note that DDN+PN equals deterministic noise minus other bounded uncorrelated noise. DDN+PN spectrum is a useful approximation of the deterministic noise spectrum fot negligible small other bounded uncorrelated noise.
27	(O)BUN	Composite impact of all unknown but deterministic portions of the overall time interval error of the input signal. It consists of any disturbance that comes from a deterministic source but cannot be reproduced from the input signal. Often it is caused by crosstalk from other data signals.

Suffix <n>	Component	Description/Result
28	(O)BUN (δ-δ	Other bounded uncorrelated Dual-Dirac noise (O)BUN (δ- δ) is an industry standard approximation to the other bounded uncorrelated jitter measurement. It is calculated by fitting a model of two overlapping, equally large Gaussian distributions to the observed RN+(O)BUN histogram. The calculated value is the amplitude difference between the two distributions center points.
29	RN	Consists of any influence that cannot be predicted with model parameters. Usually, this noise component follows a Gaussian probability distribution. The algorithm computes the standard deviation and the peak-peak value of the level error (LE) caused by RN within the analyzed waveform.

General

ADVJitter<m>:RESult:ENABle....2705
ADVJitter<m>:DCOMposition:COMPonents<n>[:ENABle]....2705
ADVJitter<m>:RESult:STATistics....2706
ADVJitter<m>:RESult:STEPresponse....2706
ADVJitter<m>:RESult:COMPonents<n>:HISTogram....2706
ADVJitter<m>:RESult:COMPonents<n>:PEAKpeak?....2707
ADVJitter<m>:RESult:COMPonents<n>:SPECtrum....2707
ADVJitter<m>:RESult:COMPonents<n>:STDDev?....2707
ADVJitter<m>:RESult:COMPonents<n>:TRACk....2707
ADVJitter<m>:RESult:UNIT....2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics:MAXPeakpeak?....2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics:MAXStddev?....2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics[:MINStddev]?....2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics:MINPeakpeak?....2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics:WFMCount?....2708
ADVJitter<m>:RESult:PERiodic<n>:COUNt?....2709
ADVJitter<m>:RESult:PERiodic<n>:DIRection?....2709
ADVJitter<m>:RESult:PERiodic<n>:VALue?....2709
ADVJitter<m>:RESult:PERiodic<n>[:FREQuency]?....2709

ADVJitter<m>:RESult:ENABle <State>

Enables the advanced jitter analysis. It displays all enabled diagrams and displays a table with the results for the component measurements.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Enable" on page 1119

ADVJitter<m>:DCOMposition:COMPonents<n>[:ENABle] <State>

Enables the measurement for the specified jitter component.

Suffix:
<m> 1..2
<n> 1..29
See Table 26-15

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Basic components" on page 1124

ADVJitter<m>:RESult:STATistics <State>

Enables statistics measurements for the advanced jitter analysis.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Statistics" on page 1120

ADVJitter<m>:RESult:STEPresponse <State>

Enables a step response diagram for the advanced jitter measurements..

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Step response" on page 1120

ADVJitter<m>:RESult:COMPonents<n>:HISTogram <State>

Enables a histogram for the selected measurement component.

Suffix:
<m> 1..2
<n> 1..29
See Table 26-15

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Component specific results" on page 1121

ADVJitter<m>:RESult:COMPonents<n>:PEAKpeak?

Queries the absolute/peak to peak value of the specified jitter component.

Suffix:
<m> 1..2

<n> 1..29
See Table 26-15

Return values:
<PeakValue> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0

Usage: Query only

ADVJitter<m>:RESult:COMPonents<n>:SPECtrum <State>

Enables a spectrum diagram for the selected measurement component.

Suffix:
<m> 1..2

<n> 1..29
See Table 26-15

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Component specific results" on page 1121

ADVJitter<m>:RESult:COMPonents<n>:STDDev?

Queries the standard deviation value of the selected component.

Suffix:
<m> 1..2

<n> 1..29
See Table 26-15

Return values:
<StdDevValue> Range: -100E+24 to 100E+24
Increment: 100E-12
*RST: 0

Usage: Query only

ADVJitter<m>:RESult:COMPonents<n>:TRACk <State>

Enables a track for the advanced jitter measurements.

Suffix:
<m> 1..2
<n> 1..29
See Table 26-15

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Component specific results" on page 1121

ADVJitter<m>:RESult:UNIT <UnitType>

Selects between the absolute and relative unit for the displayed results.

Suffix:
<m> 1..2

Parameters:
<UnitType> ABS | REL
*RST: ABS

Manual operation: See "Unit" on page 1123

ADVJitter<m>:RESult:COMPonents<n>:STATistics:MAXPeakpeak?
ADVJitter<m>:RESult:COMPonents<n>:STATistics:MAXStddev?
ADVJitter<m>:RESult:COMPonents<n>:STATistics[:MINStddev]?
ADVJitter<m>:RESult:COMPonents<n>:STATistics:MINPeakpeak?
ADVJitter<m>:RESult:COMPonents<n>:STATistics:WFMCount?

Return the statistic results of the specified measurement.

- `MAXPeakpeak`: absolute maximum value of the component.
- `MAXStddev`: standard deviation of the maximum value.
- `MINPeakpeak`: absolute minimum value of the component.
- `MINStddev`: standard deviation of the minimum value.
- `WFMCount`: number of waveforms (acquisitions) the measurement is based on.

Suffix:
<m> 1..2
<n> 1..29
See Table 26-15

Return values:
<Value> Range: 0 to 4E+9
Increment: 1
*RST: 0

Usage: Query only

ADVJitter<m>:RESult:PERiodic<n>:COUNt?

Returns the number of periodic components.

Suffix:
<m> 1..2

<n> *
Not relevant

Return values:
<Count>

Usage: Query only

ADVJitter<m>:RESult:PERiodic<n>:DIRection?

Returns the direction of the selected periodic component.

Suffix:
<m> 1..2

<n> *
Number of periodic components.

Return values:
<CompDirection> UNDefined | VERTical | HOEXtrinsic | HOINtrinsic
`HOEXtrinsic`: horizontal extrinsic
`HOINtrinsic`: horizontal intrinsic
*RST: UNDefined

Usage: Query only

ADVJitter<m>:RESult:PERiodic<n>:VALue?

Returns the value of the selected periodic component.

Suffix:
<m> 1..2

<n> *
Number of periodic components.

Return values:
<CompValue> Range: -1000 to 1000
Increment: 0
*RST: 0

Usage: Query only

ADVJitter<m>:RESult:PERiodic<n>[:FREQuency]?

Returns the frequency of the selected periodic component.

Suffix:
<m> 1..2
<n> *
Number of periodic components.

Return values:
<FreqValue> Range: 0 to 1E+15
Increment: 0
*RST: 0
Default unit: Hz

Usage: Query only

Measurements

ADVJitter<m>:DCOMposition:CLEBasicmeas 2710
ADVJitter<m>:DCOMposition:SELBasicmeas 2710
ADVJitter<m>:DCOMposition:CLEJitcomp 2710
ADVJitter<m>:DCOMposition:SELJitcomp 2711
ADVJitter<m>:DCOMposition:CLENoisecomp 2711
ADVJitter<m>:DCOMposition:SELNoisecomp 2711
ADVJitter<m>:RESult:TRANsitions 2711
ADVJitter<m>:RESult:LEVels 2712

ADVJitter<m>:DCOMposition:CLEBasicmeas

Clears all selected basic jitter components.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Select all /Clear" on page 1125

ADVJitter<m>:DCOMposition:SELBasicmeas

Selects all basic jitter components.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Select all /Clear" on page 1125

ADVJitter<m>:DCOMposition:CLEJitcomp

Clears all selected jitter components.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Select all /Clear" on page 1129

ADVJitter<m>:DCOMposition:SELJitcomp

Selects all jitter components.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Select all /Clear" on page 1129

ADVJitter<m>:DCOMposition:CLENoisecomp

Clears all selected noise components.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Select all /Clear" on page 1133

ADVJitter<m>:DCOMposition:SELNoisecomp

Selects all noise components.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Select all /Clear" on page 1133

ADVJitter<m>:RESult:TRANsitions <TransitionType>

Sets the measurements for which transitions are displayed in the diagram.

Suffix:
<m> 1..2

Parameters:
<TransitionType> RISing | FALLing | BOTH
*RST: BOTH

Manual operation: See "Transitions" on page 1129

ADVJitter<m>:RESult:LEVels <LevelType>

Sets which levels are considered for the display of the diagrams, rising, falling or both. This setting is mostly relevant for histograms.

Suffix:
<m> 1..2

Parameters:
<LevelType> HIGH | LOW | BOTH
*RST: BOTH

Manual operation: See "Levels" on page 1134

Bathtub

ADVJitter<m>:DCOMposition:TARBer....2712
ADVJitter<m>:RESult:BATHtub....2712
ADVJitter<m>:RESult:PJ....2713
ADVJitter<m>:RESult:OBUJ....2713
ADVJitter<m>:RESult:NBAThtub....2713
ADVJitter<m>:RESult:PN....2713
ADVJitter<m>:RESult:OBUN....2714

ADVJitter<m>:DCOMposition:TARBer <TargetBtErrRate>

Sets the target bit error rate for total jitter at BER components.

Suffix:
<m> 1..2

Parameters:
<TargetBtErrRate> Range: 1 to 32
Increment: 1
*RST: 12

Manual operation: See "Target BER 10" on page 1134

ADVJitter<m>:RESult:BATHtub <State>

Enables a bathtub plot for the advanced jitter measurements.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "DDJ bathtub" on page 1134

ADVJitter<m>:RESult:PJ <State>

If enabled, the periodic jitter components are considered for the jitter bathtub.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "PJ / (O)BUJ components" on page 1135

ADVJitter<m>:RESult:OBUJ <State>

If enabled, the other bounded uncorrelated jitter components are considered for the jitter bathtub.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "PJ / (O)BUJ components" on page 1135

ADVJitter<m>:RESult:NBAThtub <State>

Enables a noise bathtub plot, a graph of BER in a log scale versus data-dependent jitter (DDN).

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "DDN bathtub" on page 1135

ADVJitter<m>:RESult:PN <State>

If enabled, the periodic noise components are considered for the noise bathtub.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "PN / (O)BUN components" on page 1137

ADVJitter<m>:RESult:OBUN <State>

If enabled, the other bounded uncorrelated noise components are considered for the noise bathtub.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "PN / (O)BUN components" on page 1137

Eye

ADVJitter<m>:RESult:PHORizontal 2714
ADVJitter<m>:RESult:PVERtical 2714
ADVJitter<m>:RESult:SYNTheticeye 2714

ADVJitter<m>:RESult:PHORizontal <State>

If enabled, adds horizontal periodic components to the data-dependent synthetic eye.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Add periodic components to DD synthetic eye" on page 1138

ADVJitter<m>:RESult:PVERtical <State>

If enabled, adds vertical periodic components to the data-dependent synthetic eye.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Add periodic components to DD synthetic eye" on page 1138

ADVJitter<m>:RESult:SYNTheticeye <State>

Selects if you want to display synthetic eye results only for the deterministic jitter (DJ) components or the data-dependent jitter (DDJ) components.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Synthetic eye" on page 1137

Quality

ADVJitter<m>:DCOMposition:ERRSignal 2715
ADVJitter<m>:DCOMposition:RECSignal 2715

ADVJitter<m>:DCOMposition:ERRSignal <ShwErrSign>

If enabled, shows the error signal.

Suffix:
<m> 1..2

Parameters:
<ShwErrSign> OFF | ON
*RST: OFF

Manual operation: See "Error signal" on page 1139

ADVJitter<m>:DCOMposition:RECSignal <ShwReconstructedSign>

If enabled, shows the reconstructed signal.

Suffix:
<m> 1..2

Parameters:
<ShwReconstructedSign> OFF | ON
*RST: OFF

Manual operation: See "Reconstructed signal" on page 1139

Diagram

ADVJitter<m>:RESult:VERTical:HBINs 2716
ADVJitter<m>:RESult:VERTical:CONTinuous 2716
ADVJitter<m>:RESult:VERTical:BMTYpe 2716
ADVJitter<m>:RESult:VERTical:BHContinuous 2717
ADVJitter<m>:RESult:VERTical:JSContinuous 2717
ADVJitter<m>:RESult:VERTical:NHContinuous 2717
ADVJitter<m>:RESult:VERTical:NSContinuous 2718
ADVJitter<m>:DCOMposition:SPJTable 2718
ADVJitter<m>:DCOMposition:SPJLabels 2718
ADVJitter<m>:DCOMposition:SPNLabels 2719
ADVJitter<m>:DCOMposition:JINTerleaved 2719

ADVJitter<m>:RESult:COMPonents<n>:HOFFset 2719
ADVJitter<m>:RESult:COMPonents<n>:HSCale 2719
ADVJitter<m>:RESult:COMPonents<n>:NOFFset 2720
ADVJitter<m>:RESult:COMPonents<n>:NSCale 2720
ADVJitter<m>:RESult:COMPonents<n>:NSPoffset 2720
ADVJitter<m>:RESult:COMPonents<n>:NSPScale 2721
ADVJitter<m>:RESult:COMPonents<n>:SDOFfset 2721
ADVJitter<m>:RESult:COMPonents<n>:SDSCale 2721
ADVJitter<m>:RESult:COMPonents<n>:SOFFset 2722
ADVJitter<m>:RESult:COMPonents<n>:SROFfset 2722
ADVJitter<m>:RESult:COMPonents<n>:SRSCale 2722
ADVJitter<m>:RESult:COMPonents<n>:SSCale 2723

ADVJitter<m>:RESult:VERTical:HBINs <MaxBinNumber>

Sets the number of bins, the number of data intervals, of the histogram.

Suffix:
<m> 1..2

Parameters:
<MaxBinNumber> Range: 2 to 1000
Increment: 10
*RST: 200

Manual operation: See "Max. numb of bins" on page 1139

ADVJitter<m>:RESult:VERTical:CONTinuous <State>

If enabled, the measurement scale is set automatically.

If disabled you can manually set a scale and an offset.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "Continuous auto scale" on page 1140

ADVJitter<m>:RESult:VERTical:BMTYpe <MeasType>

Selects the basic measurement type to apply the vertical scale to.

Suffix:
<m> 1..2

Parameters:

<MeasType> SBRate | SBDuration

`SBRate`: Symbol rate

`SBDuration`: Symbol duration

*RST: SBRate

Manual operation: See "Measurement type" on page 1140

ADVJitter<m>:RESult:VERTical:BHContinuous <State>

If enabled, the measurement scale of the basic jitter measurement histogram and track is set automatically.

If disabled you can manually set a scale and an offset.

Suffix:

<m> 1..2

Parameters:

<State> OFF | ON

*RST: ON

Manual operation: See "Continuous auto scale" on page 1140

ADVJitter<m>:RESult:VERTical:JSContinuous <State>

If enabled, the measurement scale of the jitter spectrum is set automatically.

If disabled you can manually set a scale (`ADVJitter<m>:RESult:COMPonents<n>:SSCale`) and an offset (`ADVJitter<m>:RESult:COMPonents<n>:SOFFset`).

Suffix:

<m> 1..2

Parameters:

<State> OFF | ON

*RST: ON

Manual operation: See "Continuous auto scale" on page 1140

ADVJitter<m>:RESult:VERTical:NHContinuous <State>

If enabled, the measurement scale of the noise histogram and track is set automatically.

If disabled you can manually set a scale (`ADVJitter<m>:RESult:COMPonents<n>:NSCale`) and an offset (`ADVJitter<m>:RESult:COMPonents<n>:NOFFset`

) .

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "Continuous auto scale" on page 1140

ADVJitter<m>:RESult:VERTical:NSContinuous <State>

If enabled, the measurement scale for the noise spectrum is set automatically.

If disabled you can manually set a scale (`ADVJitter<m>:RESult:COMPonents<n>:NSPScale`) and an offest (`ADVJitter<m>:RESult:COMPonents<n>:NSPoffset`).

.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "Continuous auto scale" on page 1140

ADVJitter<m>:DCOMposition:SPJTable <State>

Enables the display of the periodic jitter components table.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "PJ periodic component table" on page 1141

ADVJitter<m>:DCOMposition:SPJLabels <State>

Enables the display of the periodic jitter components labels.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "PJ periodic component labels" on page 1141

ADVJitter<m>:DCOMposition:SPNLabels <State>

Enables the display of the periodic noise components labels.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "PJ periodic component labels" on page 1141

ADVJitter<m>:DCOMposition:JINTerleaved <State>

Displays interleaved histogram values.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "Interleaved" on page 1139

ADVJitter<m>:RESult:COMPonents<n>:HOFFset <Offset>

Sets the offset for the jitter track.

Suffix:
<m> 1..2
<n> 1..29

Parameters:
<Offset> Range: -1E+15 to 1E+15
Increment: 1E-6
*RST: 0
Default unit: s

Manual operation: See "Offset" on page 1140

ADVJitter<m>:RESult:COMPonents<n>:HSCale <Scale>

Sets the vertical scaling per division for the jitter track.

Suffix:
<m> 1..2
<n> 1..29

Parameters:

<Scale>
Range: 1E-15 to 1E+15
Increment: 10E-6
*RST: 0.5
Default unit: s/div

Manual operation: See "Scale" on page 1140

ADVJitter<m>:RESult:COMPonents<n>:NOFFset <Offset>

Sets the offset for the noise track.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Offset>
Range: -1E+15 to 1E+15
Increment: 1E-6
*RST: 0
Default unit: V

Manual operation: See "Offset" on page 1140

ADVJitter<m>:RESult:COMPonents<n>:NSCale <Scale>

Sets the vertical scaling per division for the noise track.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Scale>
Range: 1E-15 to 1E+15
Increment: 10E-6
*RST: 0.5
Default unit: V/div

Manual operation: See "Scale" on page 1140

ADVJitter<m>:RESult:COMPonents<n>:NSPoffset <Offset>

Sets the offset for the noise spectrum.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Offset>
Range: -500 to 500
Increment: 1
*RST: 0
Default unit: dBV

Manual operation: See "Offset" on page 1141

ADVJitter<m>:RESult:COMPonents<n>:NSPScale <Scale>

Sets the vertical scaling per division for the spectrum noise.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Scale>
Range: 0.1 to 500
Increment: 10E-6
*RST: 100
Default unit: dBV

Manual operation: See "Scale" on page 1141

ADVJitter<m>:RESult:COMPonents<n>:SDOFfset <Offset>

Sets the offset for the symbol duration.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Offset>
Range: -1E+15 to 1E+15
Increment: 1E-6
*RST: 0
Default unit: s

Manual operation: See "Offset" on page 1140

ADVJitter<m>:RESult:COMPonents<n>:SDSCale <Scale>

Sets the scale for the symbol duration.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Scale>
Range: 1E-15 to 1E+15
Increment: 10E-6
*RST: 0.5
Default unit: s/div

Manual operation: See "Scale" on page 1140

ADVJitter<m>:RESult:COMPonents<n>:SOFFset <Offset>

Sets the offset for the spectrum jitter.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Offset>
Range: -500 to 500
Increment: 1
*RST: 0
Default unit: dBs

Manual operation: See "Offset" on page 1141

ADVJitter<m>:RESult:COMPonents<n>:SROFfset <Offset>

Sets the offset for the symbol rate.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Offset>
Range: -1E+15 to 1E+15
Increment: 1E-6
*RST: 0
Default unit: Baud

Manual operation: See "Offset" on page 1140

ADVJitter<m>:RESult:COMPonents<n>:SRSCale <Scale>

Sets the scale for the symbol rate.

Suffix:

<m> 1..2

<n> 1

Parameters:

<Scale>
Range: 1E-15 to 1E+15
Increment: 10E-6
*RST: 0.5
Default unit: Baud

Manual operation: See "Scale" on page 1140

ADVJitter<m>:RESult:COMPonents<n>:SSCale <Scale>

Sets the vertical scaling per division for the spectrum jitter.

Suffix:

<m> 1..2

<n> 1..29

Parameters:

<Scale>
Range: 0.1 to 500
Increment: 10E-6
*RST: 100
Default unit: dBs

Manual operation: See "Scale" on page 1141

PAM-N Jitter

Requires option R&S RTP-K135.

ADVJitter<m>:RESult:PAMJitter:CONFig:BASE 2724
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:ACTive? 2724
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:ADD 2724
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:BASE 2725
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:COLor 2725
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:COMPonent .. 2726
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:TARGet 2726
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:TRANsition 2727
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:REMove 2727
ADVJitter<m>:RESult:PAMJitter:CONFig:COMPonent 2727
ADVJitter<m>:RESult:PAMJitter:CONFig:ENABle 2728
ADVJitter<m>:RESult:PAMJitter:CONFig:EXPLicit 2728
ADVJitter<m>:RESult:PAMJitter:CONFig:LVLHeight 2728
ADVJitter<m>:RESult:PAMJitter:CONFig:MODE 2729
ADVJitter<m>:RESult:PAMJitter:CONFig:PRESet 2729
ADVJitter<m>:RESult:PAMJitter:CONFig:SELMode 2729
ADVJitter<m>:RESult:PAMJitter:CONFig:TARGet 2729
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MAXPeakpeak? 2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MAXStddev? 2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MINPeakpeak? 2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MINStddev? 2730

ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:PEAKpeak?..... 2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:WFMCount?.....2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:STDDev?.....2730

ADVJitter<m>:RESult:PAMJitter:CONFig:BASE <BaseLevel>

Selects the base level, the lowest amplitude level used in the modulation.

Suffix:
<m> 1..2

Parameters:
<BaseLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6

*RST: LEVEL0

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:ACTive?

Returns a list the number of active components.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

Return values:
<ActComponents> Range: 0 to 20
Increment: 1
*RST: 0

Usage: Query only

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:ADD
<Measurement>,<BaseLevel>,<TargetLevel>,[<Edge>],[<Color>]

Adds a new jitter result measurement.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

Setting parameters:
<Measurement> TJBER | RJOBuj | DJDD | TJ | DJ | DDJ | DCDJ | PJ | ISI | DDPJ | OBUJ | BUJDd | RJ | ALL

<BaseLevel>

<TargetLevel>

<Edge> RISing | FALLing | BOTH

<Color>

Example: `ADVJitter:RESult:PAMJitter:CONFig:CATegory:ADD TJBer,0,1,FALL,523454`
Adds a TJ@BER measurement with a Base level=0, Target level=1, Falling edge and Color = Hex #523454

Usage: Setting only

Manual operation: See "Add" on page 1144

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:BASE <BaseLevel>

Selects the base level. This is the lowest amplitude level used in the modulation. It sets the reference point for the least amount of energy a pulse can carry in the system.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<mg> 1..13
Selects the index of the active component

Parameters:
<BaseLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

Manual operation: See "Base" on page 1143

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:COLor <Color>

Selects the color of the active component.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<mg> 1..13
Selects the active component

Parameters:
<Color>

Manual operation: See "Color" on page 1144

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:COMPonent <Component>

Selects the component type.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<mg> 1..13
Selects the index of the active component

Parameters:
<Component> AMPLitude | MAXimum | MINimum | PDELta | MEAN | RTIMe | FTIMe | PROBemeter | SLERising | SLEFalling | SIGNallevel | ERATio | ERPercent | ERDB | EHEight | EWIDth | ETOP | EBASe | CPOints | CPPercent | QFACtor | SDNoise | BER | PPNoise | RMSNoise | SNRatio | DCDistortion | ERTime | EFTime | EBRate | EAMPlitude | EOFactor | EPWidth | EDCYcle | ECRatio | PJITter | CJITter | TIERror | PPJitter | STDJitter | RMSJitter | TJBER | RJOBuj | DJDD | TJ | DJ | DDJ | DCDJ | PJ | ISI | DDPJ | OBUJ | BUJDd | RJ | EHBER | ROBN | DNDD | TN | DN | DDN | LDN | PN | ISIN | DDPN | OBUN | BUNDd | RN | ALL

Manual operation: See "Component" on page 1143

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:TARGet <TargetLevel>

Selects the target level.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<mg> 1..13
Selects the index of the active component

Parameters:
<TargetLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

Manual operation: See "Target" on page 1144

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:TRANsition <Transition>

Selects which transitions are considered for the display of the diagrams, rising or falling.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<mg> 1..13

Parameters:
<Transition> RISing | FALLing

Manual operation: See "Transition" on page 1144

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:REMove [<Index>]

Removes the last component added to the category.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

Setting parameters:
<Index>

Usage: Setting only

ADVJitter<m>:RESult:PAMJitter:CONFig:COMPonent <Component>

Selects the component type.

Suffix:
<m> 1..2

Parameters:
<Component> AMPLitude | MAXimum | MINimum | PDELta | MEAN | RTIMe | FTIMe | PROBemeter | SLERising | SLEFalling | SIGNallevel | ERATio | ERPercent | ERDB | EHEight | EWIDth | ETOP | EBASe | CPOints | CPPercent | QFACtor | SDNoise | BER | PPNoise | RMSNoise | SNRatio | DCDistortion | ERTime | EFTime | EBRate | EAMPlitude | EOFactor | EPWidth | EDCYcle | ECRatio | PJITter | CJITter | TIERror | PPJitter | STDJitter | RMSJitter | TJBER | RJOBuj | DJDD | TJ | DJ | DDJ | DCDJ | PJ | ISI | DDPJ | OBUJ | BUJDd | RJ | EHBER | ROBN | DNDD | TN | DN | DDN | LDN | PN | ISIN | DDPN | OBUN | BUNDd | RN | ALL

See Table 26-15.

*RST: ALL

Manual operation: See "Component" on page 1143

ADVJitter<m>:RESult:PAMJitter:CONFig:ENABle <Enable>

Enables the jitter measurements for PAM-N signals.

Suffix:
<m> 1..2

Parameters:
<Enable> OFF | ON

*RST: OFF

Manual operation: See "PAM-N results" on page 1142

ADVJitter<m>:RESult:PAMJitter:CONFig:EXPLicit <ExplicitLevel>

Sets an explicit level to be set for all active jitter components.

Suffix:
<m> 1..2

Parameters:
<ExplicitLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

*RST: LEVEL1

Manual operation: See "Selection mode" on page 1143

ADVJitter<m>:RESult:PAMJitter:CONFig:LVLHeight <LevelHeight>

Sets a level height, level difference between the base and target level for all active components.

Suffix:
<m> 1..2

Parameters:
<LevelHeight> LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7
*RST: LEVEL1

Manual operation: See "Selection mode" on page 1143

ADVJitter<m>:RESult:PAMJitter:CONFig:MODE <Mode>

Selects if you want to add pre-defined user configurations to the active components or define your own user-defined settings.

Suffix:
<m> 1..2

Parameters:
<Mode> PREDefined | USERdefined
*RST: PREDefined

Manual operation: See "Mode" on page 1143

ADVJitter<m>:RESult:PAMJitter:CONFig:PRESet

Adds a pre-defined preset configuration for the selected component to the active components.

Suffix:
<m> 1..2

Usage: Event

Manual operation: See "Preset" on page 1143

ADVJitter<m>:RESult:PAMJitter:CONFig:SELMode <SelectionMode>

Selects how the level difference between the base and target level of the PAM-N signal is defined.

Suffix:
<m> 1..2

Parameters:
<SelectionMode> HEIGht | EXPLicit
*RST: HEIGht

Manual operation: See "Selection mode" on page 1143

ADVJitter<m>:RESult:PAMJitter:CONFig:TARGet <TargetLevel>

Selects the target level.

Suffix:
<m> 1..2

Parameters:
<TargetLevel> LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7
*RST: LEVEL1

ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MAXPeakpeak?
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MAXStddev?
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MINPeakpeak?
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MINStddev?
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:PEAKpeak?
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:WFMCount?
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:STDDev?

Return the statistic results of the specified jitter measurement for PAM-N signals.

- `MAXPeakpeak`: absolute maximum value of the component.
- `MAXStddev`: standard deviation of the maximum value.
- `MINPeakpeak`: absolute minimum value of the component.
- `MINStddev`: standard deviation of the minimum value.
- `PEAKpeak`: peak to peak value of the long-term measurement results.
- `WFMCount`: number of waveforms (acquisitions) the measurement is based on.
- `STDDev`: standard deviation of the long-term measurement results.

Suffix:
<m> 1..2
<n> 1
<mg> 1..13
Selects the active component

Return values:
<Value> Numeric result

Usage: Query only

PAM-N Noise

ADVJitter<m>:RESult:PAMNoise:CONFig:BASE 2731
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:ACTive? 2731
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:ADD 2731
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:BASE 2732
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:COLor 2732
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:COMPonent 2733
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<o>:DIAGram 2733
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:REMove 2734
ADVJitter<m>:RESult:PAMNoise:CONFig:COMPonent 2734
ADVJitter<m>:RESult:PAMNoise:CONFig:ENABle 2735

ADVJitter<m>:RESult:PAMNoise:CONFig:MODE....2735
ADVJitter<m>:RESult:PAMNoise:CONFig:PRESet....2735
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MAXPeakpeak?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MAXStddev?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MINPeakpeak?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MINStddev?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:PEAKpeak?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:WFMCount?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:STDDev?....2736

ADVJitter<m>:RESult:PAMNoise:CONFig:BASE <BaseLevel>

Selects the base level. This is the lowest amplitude level used in the modulation.

Suffix:
<m> 1..2

Parameters:
<BaseLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6

*RST: LEVEL0

Manual operation: See "Level" on page 1145

ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:ACTive?

Returns a list of the active components.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

Return values:
<ActComponents> Range: 0 to 20
Increment: 1
*RST: 0

Usage: Query only

Manual operation: See "Active components" on page 1146

ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:ADD
<Measurement>,<Level>,[<Color>]

Adds a new noise result measurement to the active components table of the selected category.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

Setting parameters:
<Measurement> EHBER | ROBN | DNDD | TN | DN | DDN | LDN | PN | ISIN | DDPN | OBUN | BUNDd | RN | ALL

<Level>

<Color>

Example: `:ADVJitter:RESult:PAMNoise:CONFig:CATegory:ADD EHBer,1,523454`
Adds a EH@BER measurement with a Level=1 and Color = Hex #523454

Usage: Setting only

Manual operation: See "Add" on page 1146

ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:BASE <BaseLevel>

Selects the base level. This is the lowest amplitude level used in the modulation. It sets the reference point for the least amount of energy a pulse can carry in the system.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<mg> 1..13
Selects the index of the active component

Parameters:
<BaseLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

Manual operation: See "Level" on page 1146

ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:COLor <Color>

Selects the color of the active component.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<mg> 1..13
Selects the active component

Parameters:
<Color>

Manual operation: See "Color" on page 1146

ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:
COMPonent <Component>

Selects the component type.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<mg> 1..13
Selects the index of the active component

Parameters:
<Component> AMPLitude | MAXimum | MINimum | PDELta | MEAN | RTIMe | FTIMe | PROBemeter | SLERising | SLEFalling | SIGNallevel | ERATio | ERPercent | ERDB | EHEight | EWIDth | ETOP | EBASe | CPOints | CPPercent | QFACtor | SDNoise | BER | PPNoise | RMSNoise | SNRatio | DCDistortion | ERTime | EFTime | EBRate | EAMPlitude | EOFactor | EPWidth | EDCYcle | ECRatio | PJITter | CJITter | TIERror | PPJitter | STDJitter | RMSJitter | TJBER | RJOBuj | DJDD | TJ | DJ | DDJ | DCDJ | PJ | ISI | DDPJ | OBUJ | BUJDd | RJ | EHBER | ROBN | DNDD | TN | DN | DDN | LDN | PN | ISIN | DDPN | OBUN | BUNDd | RN | ALL

Manual operation: See "Component" on page 1146

ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<o>:
DIAGram <ShowDiagram>

Enables the display of the dieagram for the selected measurement.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

<o> 1..13
Selects the index of the active component

Parameters:
<ShowDiagram> ON | OFF
*RST: OFF

ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:REMove [<Index>]

Removes the last added line in the active components table of the selected category.

Suffix:
<m> 1..2

<n> 1..3
Selects the component category
1: Numeric results
2: Histogram
3: Track

Setting parameters:
<Index>

Example: `ADVJitter1:RESult:PAMNoise:CONFig:CATegory1:REMove`

Usage: Setting only

Manual operation: See "Remove" on page 1144

ADVJitter<m>:RESult:PAMNoise:CONFig:COMPonent <Component>

Selects the component type.

Suffix:
<m> 1..2

Parameters:

<Component> AMPLitude | MAXimum | MINimum | PDELta | MEAN | RTIMe | FTIMe | PROBemeter | SLERising | SLEFalling | SIGNallevel | ERATio | ERPercent | ERDB | EHEight | EWIDth | ETOP | EBASe | CPOints | CPPercent | QFACtor | SDNoise | BER | PPNoise | RMSNoise | SNRatio | DCDistortion | ERTime | EFTime | EBRate | EAMPlitude | EOFactor | EPWidth | EDCYcle | ECRatio | PJITter | CJITter | TIERror | PPJitter | STDJitter | RMSJitter | TJBER | RJOBuj | DJDD | TJ | DJ | DDJ | DCDJ | PJ | ISI | DDPJ | OBUJ | BUJDd | RJ | EHBER | ROBN | DNDD | TN | DN | DDN | LDN | PN | ISIN | DDPN | OBUN | BUNDd | RN | ALL

See Table 26-15

*RST: ALL

Manual operation: See "Component" on page 1145

ADVJitter<m>:RESult:PAMNoise:CONFig:ENABle <Enable>

Enables the noise measurements for PAM-N signals.

Suffix:

<m> 1..2

Parameters:

<Enable> OFF | ON

*RST: OFF

Manual operation: See "PAM-N results" on page 1145

ADVJitter<m>:RESult:PAMNoise:CONFig:MODE <Mode>

Selects if you want to add pre-defined user configurations to the active components or define your own user-defined settings.

Suffix:

<m> 1..2

Parameters:

<Mode> PREDefined | USERdefined

*RST: PREDefined

Manual operation: See "Mode" on page 1145

ADVJitter<m>:RESult:PAMNoise:CONFig:PRESet

Adds a pre-defined preset configuration for the selected component to the active components.

Suffix:

<m> 1..2

Usage: Event

Manual operation: See "Preset" on page 1146

ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MAXPeakpeak?
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MAXStddev?
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MINPeakpeak?
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MINStddev?
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:PEAKpeak?
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:WFMCount?
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:STDDev?

Return the statistic results of the specified noise measurement for PAM-N signals.

- `MAXPeakpeak`: absolute maximum value of the component.
- `MAXStddev`: standard deviation of the maximum value.
- `MINPeakpeak`: absolute minimum value of the component.
- `MINStddev`: standard deviation of the minimum value.
- `PEAKpeak`: peak to peak value of the long-term measurement results.
- `WFMCount`: number of waveforms (acquisitions) the measurement is based on.
- `STDDev`: standard deviation of the long-term measurement results.

Suffix:

<m> 1..2

<n> 1

<mg> 1..13
Selects the active component

Return values:

<Value> Numeric result value

Usage: Query only

26.23.2.3 Advanced settings

ADVJitter<m>:DCOMposition:MRESplength? 2736
ADVJitter<m>:DCOMposition:RLEStimate 2737
ADVJitter<m>:DCOMposition:POSStep 2737
ADVJitter<m>:DCOMposition:RESPlength 2737
ADVJitter<m>:DCOMposition:ENP 2738
ADVJitter<m>:DCOMposition:NHORizontal 2738
ADVJitter<m>:DCOMposition:NVERtical 2738
ADVJitter<m>:DCOMposition:ENOBu 2738
ADVJitter<m>:DCOMposition:STEPresponse 2739

ADVJitter<m>:DCOMposition:MRESplength?

Queries the estimated maximum step length response.

Suffix:
<m> 1..2

Return values:
<MaxLength> Range: 1 to 200
Increment: 1
*RST: 20
Default unit: UI

Usage: Query only

Manual operation: See "Length" on page 1148

ADVJitter<m>:DCOMposition:RLEStimate

Runs an estimate of the step response for the advanced jitter analysis measurements.

Suffix:
<m> 1..2

Usage: Event
Asynchronous command

Manual operation: See "Length" on page 1148

ADVJitter<m>:DCOMposition:POSStep <Position>

Sets the steps position.

Suffix:
<m> 1..2

Parameters:
<Position> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Manual operation: See "Step position" on page 1148

ADVJitter<m>:DCOMposition:RESPlength <Length>

Set the step response length in unit intervals.

Suffix:
<m> 1..2

Parameters:
<Length> Range: 1 to 200
Increment: 1
*RST: 20
Default unit: UI

Manual operation: See "Length" on page 1148

ADVJitter<m>:DCOMposition:ENP <State>

Enables the display of the periodic jitter components table.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: ON

Manual operation: See "Enable" on page 1148

ADVJitter<m>:DCOMposition:NHORizontal <MaxNumber>

Sets the maximum number of periodic components in the horizontal direction that are considered for the measurement. If the actual number of periodic components is higher than the set value, they are considered for the random jitter component.

Suffix:
<m> 1..2

Parameters:
<MaxNumber> Range: 0 to 10
Increment: 1
*RST: 5

Manual operation: See "Horizonta (h) direction" on page 1149

ADVJitter<m>:DCOMposition:NVERtical <MaxNumber>

Sets the maximum number of periodic components in the vertical direction that are considered for the measurement. If the actual number of periodic components is higher than the set value, they are considered for the random jitter component.

Suffix:
<m> 1..2

Parameters:
<MaxNumber> Range: 0 to 10
Increment: 1
*RST: 5

Manual operation: See "Vertical (v) direction" on page 1149

ADVJitter<m>:DCOMposition:ENOBu <State>

Enables the selection of the (other) bounded uncorrelated jitter/noise: (O)BUJ, (O)BUJ(δ -δ), RJ, (O)BUN, (O)BUN(δ -δ), RN.

Suffix:
<m> 1..2

Parameters:
<State> OFF | ON
*RST: OFF

Manual operation: See "(Other) bounded uncorrelated" on page 1149

ADVJitter<m>:DCOMposition:STEPresponse <StepResponse>

Selects if separated edges or combined edges are used for the step response calculation.

Suffix:
<m> 1..2

Parameters:
<StepResponse> COMBined | SEParated
*RST: COMBined

Manual operation: See "Step response variant" on page 1147

26.23.3 Clock data recovery (software-based, option R&S RTP-K12)

CDR:SOFTware<sw>:ALGorithm....2739
CDR:SOFTware<sw>:BITRate....2740
CDR:SOFTware<sw>:CFRequency:CRSYnc[:ENABle]....2740
CDR:SOFTware<sw>:ESLope....2741
CDR:SOFTware<m>:ESSRate:CONTinuous....2741
CDR:SOFTware<sw>:ESSRate:SOURce....2741
CDR:SOFTware<sw>:ESSRate:SREStimate....2742
CDR:SOFTware<sw>:PLL:ORDer....2742
CDR:SOFTware<sw>:PLL:BWIDth....2742
CDR:SOFTware<sw>:PLL:RELBwidth....2743
CDR:SOFTware<sw>:PLL:DAMPing....2743
CDR:SOFTware<sw>:PRSStandard....2743
CDR:SOFTware<sw>:RESults....2744
CDR:SOFTware<sw>:SYMRate....2744
CDR:SOFTware<sw>:SYNC....2744

CDR:SOFTware<sw>:ALGorithm <Algorithm>

Sets the software algorithm that is used for clock data recovery.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<Algorithm> CFRequency | PLL | FF | PLLStart | FFSTart

CFRequency
Constant frequency. CDR uses the nominal bit rate to generate the clock signal. The method assumes that the frequency of the signal is constant during the complete acquisition.

PLL
Phase-locked loop control system. It can follow slow deviations in the frequency of the data stream.

FF
Feed forward algorithm, a mathematical optimization method. Feed forward is available if none of the listed serial standards is used (`SIGNalconfig:SETup:SETTing<m>:SERStandard` is set to `CUSTOM`). It is faster than PLL, i.e., the settling time is shorter. Feed forward is also more precise than PLL. To set up the algorithm, set the bandwidth and the relative bandwith.

PLLStart
PLL is the phase-locked loop control system which is locked at the acquisition start.

FFSTart
Feed forward algorithm locked at the acquisition start.

*RST: PLLStart

Usage: Asynchronous command

Manual operation: See "Algorithm" on page 1154

CDR:SOFTware<sw>:BITRate <Bitrate>

Sets the quiescent frequency of the PLL. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<Bitrate>
Range: 100 to max {5 Gbps, <available instrument bandwidth}
Increment: 10
*RST: 1E+9
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Nominal bit rate/ Nominal symbol rate" on page 1154

CDR:SOFTware<sw>:CFRequency:CRSYnc[:ENABle] <Sync>

Enables continuous synchronization of the clock with the data signal.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<Sync> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Clock resync" on page 1155

CDR:SOFTware<sw>:ESLope <Edge>

Selects the edges of the data stream that are used for the clock recovery.

- "Either": Both positive and negative edges are used.
- "Positive" or "Negative": Only one edge direction is used. Use one of these settings if the other edge delivers unreliable results.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<Edge> POSitive | NEGative | EITHer
*RST: EITHer

Usage: Asynchronous command

Manual operation: See "Data edges" on page 1154

CDR:SOFTware<m>:ESSRate:CONTinuous <ContBitrateestim>

Enables ongoing correction of the nominal bit rate.

Suffix:
<m> 1..4
Number of the software CDR setup

Parameters:
<ContBitrateestim> ON | OFF
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Bit rate estimation/Symbol rate estimation" on page 1154

CDR:SOFTware<sw>:ESSRate:SOURce <BitrateSource>

Selects the source of the data stream, which is analized to recover the clock.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<BitrateSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | LPDFE1 | LPDFE2 | LPDFE3 | LPDFE4 | LANE1 | LANE2 | LANE3 | LANE4

Usage: Asynchronous command

Manual operation: See "Source" on page 1153

CDR:SOFTware<sw>:ESSRate:SREStimate

Estimates the nominal bit rate once, for the current acquisition.

Suffix:
<sw> 1..4
Number of the software CDR setup

Usage: Event
Asynchronous command

Manual operation: See "Bit rate estimation/Symbol rate estimation" on page 1154

CDR:SOFTware<sw>:PLL:ORDer <PLLOrder>

Sets the order of the PLL: first or second order. PLL of higher order can compensate for more complex jitter behavior.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<PLLOrder> FIRSt | SECond
*RST: SECond

Usage: Asynchronous command

Manual operation: See "Algorithm settings" on page 1155

CDR:SOFTware<sw>:PLL:BWIDth <PLLBandwidth>

Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization. The PLL bandwidth is usually defined by the transmission standard.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:

<PLLBandwidth>	Range:	Nominal BITRate * Range of RELBwidth (dependent range)
	Increment:	10
	*RST:	599.88E+3
	Default unit:	Hz

Usage: Asynchronous command

Manual operation: See "Algorithm settings" on page 1155

CDR:SOFTware<sw>:PLL:RELBwidth <PLLRelBw>

Sets the relative bandwidth, which is the ratio of the nominal bit rate to the PLL bandwidth.

Suffix:

<sw>	1..4 Number of the software CDR setup

Parameters:

<PLLRelBw>	Range:	10 to 10000
	Increment:	1
	*RST:	1667

Usage: Asynchronous command

Manual operation: See "Algorithm settings" on page 1155

CDR:SOFTware<sw>:PLL:DAMPing <DampingFactor>

Sets the damping factor, which is only relevant for second order PLL.

Suffix:

<sw>	1..4 Number of the software CDR setup

Parameters:

<DampingFactor>	Range:	0.5 to 2
	Increment:	0.01
	*RST:	0.7

Usage: Asynchronous command

Manual operation: See "Algorithm settings" on page 1155

CDR:SOFTware<sw>:PRSStandard

Sets the settings of the specified software CDR to the serial standard that is selected for the source.

Suffix:

<sw>	1..4 Number of the software CDR setup

Usage: Event
Asynchronous command

Manual operation: See "Source settings" on page 1153

CDR:SOFTware<sw>:RESults <Results>

The PLL requires some time to synchronize to the phase of the data stream. You can select when the CDR algorithm returns clock edges.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<Results> ALL | AISYnc

ALL
All clock edges are used.

AISYnc
The clock edges of the synchronization time are discarded; results are gathered after initial synchronization of the CDR. Thus, meaningful TIE measurement results can be obtained.

*RST: ALL

Usage: Asynchronous command

Manual operation: See "Selected results" on page 1155

CDR:SOFTware<sw>:SYMRate <Bitrate>

Sets the quiescent frequency of the PLL. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<Bitrate> Range: 100 to 5E+9
Increment: 10
*RST: 1E+9
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Nominal bit rate/ Nominal symbol rate" on page 1154

CDR:SOFTware<sw>:SYNC <InitialSync>

Defines the phase reference for the first clock edge.

Suffix:
<sw> 1..4
Number of the software CDR setup

Parameters:
<InitialSync> SAMPle | DATaedge

SAMPle
The first clock edge matches the first sample of the waveform at the left border of the display.

DATaedge
The first clock edge matches the first edge of the data signal.

*RST: DATaedge

Usage: Asynchronous command

Manual operation: See "Initial phase" on page 1155

26.23.4 Eye mask testing

The eye mask testing is available if the option R&S RTP-K12 is activated on the instrument.

The commands for eye mask testing are described in Section 26.14.6, "Eye mask testing", on page 1726.

26.24 Eye diagram analysis

The suffix EYE<e> selects the eye diagram to which the command applies. You can configure and analyze 1 to 4 eye diagrams in parallel.

There are two ways to generate eye diagrams on the R&S RTP:

- Standard eye diagrams, which are a superposition of repetitively sampled digital data.
- To use advanced eye diagrams, option R&S RTP-K136/K137 or R&S RTP-K91/K93 is required.

26.24.1 Basic setup

EYE<e>[:STATe] 2746
EYE<e>:SOURce 2746
EYE<e>:HORizontal[:UNIT] 2746
EYE<e>:HORizontal:ABSolute:RANGe 2747
EYE<e>:HORizontal:ABSolute:POSition 2747
EYE<e>:HORizontal:UINTerval:RANGe 2748
EYE<e>:HORizontal:UINTerval:POSition 2748
EYE<e>:TIMReference:CLOCk:EDGE 2748
EYE<e>:TIMReference:CLOCk:FACTor 2748

EYE<e>:TIMReference:CLOCk:FREQuency....2749
EYE<e>:TIMReference:CLOCk:FREStimation....2749
EYE<e>:TIMReference:CLOCk:LEVel....2749
EYE<e>:TIMReference:CLOCk:OFEStimation....2750
EYE<e>:TIMReference:CLOCk:OFFSet....2750
EYE<e>:TIMReference:CLOCk:SOURce....2750
EYE<e>:TIMReference:PROTocol:SELect....2751
EYE<e>:TIMReference[:SOURce]....2751
EYE<m>:TIMReference:CDR:SOFTware....2751
EYE<e>:TIMReference:CDR[:SELect]....2751
EYE<e>:MEASurement:MAXPrecision....2752
EYE<e>:VERTical:OFFSet....2752
EYE<e>:VERTical:POSition....2752
EYE<e>:VERTical:SCALe....2753
EYE<e>:VERTical:COUPle....2753
EYE<e>:TIMReference:CDR:SOFTware:SAMTime....2753
EYE<e>:SYMBolrate?....2754

EYE<e>[:STATe] <State>

Activates or deactivates the eye diagram.

Suffix:
<e> 1..4

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 1159

EYE<e>:SOURce <MainSource>

Selects the waveform from which the eye diagram is generated (data source). For analog channels, peak detect, envelope, and average waveforms are not supported.

Suffix:
<e> 1..4

Parameters:
<MainSource> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "Source" on page 1159

EYE<e>:HORizontal[:UNIT] <TimeUnits>

Sets the method to define the horizontal scale of the eye diagram.

Suffix:
<e> 1..4

Parameters:
<TimeUnits> ATIMe | UINTerval

ATIMe
Absolute time

UINTerval
Unit intervals. You can use unit interval, if the nominal frequency of the clock signal is known.

*RST: ATIMe

Usage: Asynchronous command

Manual operation: See "Time units" on page 1164

EYE<e>:HORizontal:ABSolute:RANGe <HorizRg>

Sets the time range that is covered by the eye diagram.

Suffix:
<e> 1..4

Parameters:
<HorizRg> Range: 1E-12 to 100
Increment: 1E-9
*RST: 2E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 1165

EYE<e>:HORizontal:ABSolute:POSition <HorizPosition>

Sets the place of the zero point in the diagram, in seconds. The zero point is the alignment point on which the slice timestamps are superimposed.

Suffix:
<e> 1..4

Parameters:
<HorizPosition> Range: -100 to 100
Increment: 1E-9
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Range, Position" on page 1165

EYE<e>:HORizontal:UINTerval:RANGe <RangeUI>

Sets the number of unit intervals that are visible in the eye diagram.

Suffix:
<e> 1..4

Parameters:
<RangeUI> Range: 100E-12 to 100E+9
Increment: 0.01
*RST: 2
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Range UI, Position UI" on page 1165

EYE<e>:HORizontal:UINTerval:POSition <PositionUI>

Sets the zero point in the diagram, in unit intervals. The zero point is the alignment point on which the segment timestamps are superimposed.

Suffix:
<e> 1..4

Parameters:
<PositionUI> Range: -100E+9 to 100E+9
Increment: 0.01
*RST: 0
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Range UI, Position UI" on page 1165

EYE<e>:TIMReference:CLOCk:EDGE <EdgeType>

The clock edge sets the point in time when the state of the data signal is checked.

Suffix:
<e> 1..4

Parameters:
<EdgeType> POSitive | NEGative | EITHer
*RST: EITHer

Usage: Asynchronous command

Manual operation: See "Clock edge" on page 1163

EYE<e>:TIMReference:CLOCk:FACTor <Factor>

Sets a clock multiplier factor.

Available if `EYE<e>:TIMReference[:SOURce]` is set to `CLOCk`.

Suffix:
<e> 1..4

Parameters:
<Factor> Range: 1 to 100
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Clock multiplier" on page 1163

EYE<e>:TIMReference:CLOCk:FREQuency <Frequency>

Sets the clock frequency for the explicit clock signal.

Available if `EYE<e>:TIMReference[:SOURce]` is set to `CLOCk`.

Suffix:
<e> 1..4

Parameters:
<Frequency> Range: 1000 to 10E+9
Increment: 10
*RST: 500E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Clock frequency" on page 1162

EYE<e>:TIMReference:CLOCk:FREStimation

Executes an estimation of the signal for the clock frequency.

Available if `EYE<e>:TIMReference[:SOURce]` is set to `CLOCk`.

Suffix:
<e> 1..4

Usage: Event

Manual operation: See "Estimate clock frequency" on page 1163

EYE<e>:TIMReference:CLOCk:LEVel <Level>

Sets the vertical reference level of the timing reference source.

Available if `EYE<e>:TIMReference[:SOURce]` is set to `CLOCk`.

Suffix:
<e> 1..4

Parameters:
<Level> UPPer | MIDDle | LOWer
*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Vertical reference level" on page 1162

EYE<e>:TIMReference:CLOCk:OFEStimation

Executes an estimation of the signal for the clock offset.

Available if `EYE<e>:TIMReference[:SOURce]` is set to `CLOCk`.

Suffix:
<e> 1..4

Usage: Event

Manual operation: See "Estimate clock offset" on page 1163

EYE<e>:TIMReference:CLOCk:OFFSet <Offset>

Sets a clock offset for the explicit clock signal.

Available if `EYE<e>:TIMReference[:SOURce]` is set to `CLOCk`.

Suffix:
<e> 1..4

Parameters:
<Offset>
Range: -1000 to 1000
Increment: 0.01
*RST: 0
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Clock offset" on page 1163

EYE<e>:TIMReference:CLOCk:SOURce <SourceType>

Selects the source of the clock channel, if `EYE<e>:TIMReference[:SOURce]` is set to `CLOCk`.

Suffix:
<e> 1..4

Parameters:
<SourceType> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15

Usage: Asynchronous command

Manual operation: See "Clock" on page 1160

EYE<e>:TIMReference:PROTocol:SELect <SerialBusIndex>

Selects the active bus for the eye analysis, if `EYE<e>:TIMReference[:SOURce]` is set to `PROTocol`.

Suffix:
<e> 1..4

Parameters:
<SerialBusIndex> SBUS1 | SBUS2 | SBUS3 | SBUS4
*RST: SBUS1

Usage: Asynchronous command

Manual operation: See "Protocol" on page 1161

EYE<e>:TIMReference[:SOURce] <RefSrc>

Selects the source of the reference signal used for the eye diagram.

Suffix:
<e> 1..4

Parameters:
<RefSrc> CLOCk | CDR | PROTocol
*RST: CDR

Usage: Asynchronous command

Manual operation: See "Clock / CDR / Protocol" on page 1159

EYE<m>:TIMReference:CDR:SOFTware <SoftwareCDRIdx>

Selects the software CDR used for the reference signal of the the eye diagram.

Suffix:
<m> 1..4

Parameters:
<SoftwareCDRIdx> SW1 | SW2 | SW3 | SW4
*RST: SW1

Usage: Asynchronous command

Manual operation: See "CDR" on page 1160

EYE<e>:TIMReference:CDR[:SELect] <CDRType>

Selects hardware or software clock data recovery.

Available, if `EYE<e>:TIMReference[:SOURce]` is set to `CDR`.

Suffix:
<e> 1..4

Parameters:
<CDRType> SW | HW
*RST: SW

Usage: Asynchronous command

Manual operation: See "CDR" on page 1160

EYE<e>:MEASurement:MAXPrecision <EnabClassifier>

If this function is enabled, the rising and falling transitions for the eye measurmens "Eye rise time", "Eye fall time" and "Duty cycle distortion" are separated.

Suffix:
<e> 1..4

Parameters:
<EnabClassifier> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Maximum precision" on page 1181

EYE<e>:VERTical:OFFSet <VerticalOffset>

The offset voltage is subtracted to correct an offset-affected signal.

Suffix:
<e> 1..4

Parameters:
<VerticalOffset> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 1166

EYE<e>:VERTical:POSition <VertPosi>

Sets the vertical position of the indicated eye as a graphical value.

Suffix:
<e> 1..4

Parameters:
<VertPosi> Range: -100E+24 to 100E+24
Increment: 0.1
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Position" on page 1166

EYE<e>:VERTical:SCALe <VerticalScale>

Sets the vertical scale for the indicated eye.

Suffix:
<e> 1..4

Parameters:
<VerticalScale> Range: 1E-12 to 100
Increment: 1E-3
*RST: 0.05
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Scale" on page 1165

EYE<e>:VERTical:COUPle <VertCpl>

If enabled, the vertical position and scale of the source are used.

Suffix:
<e> 1..4

Parameters:
<VertCpl> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Couple to source" on page 1165

EYE<e>:TIMReference:CDR:SOFTware:SAMTime <SamplingTime>

Sets the sampling time for the software CDR.

Available, if `EYE<e>:TIMReference[:SOURce]` is set to `CDR` and `EYE<e>:TIMReference:CDR[:SELect]` is set to `SW`.

Suffix:
<e> 1..4

Parameters:
<SamplingTime> Range: 0 to 1
Increment: 0.01
*RST: 0.5
Default unit: UI

Usage: Asynchronous command

Manual operation: See "CDR" on page 1160

EYE<e>:SYMBolrate?

Queries the symbol rate of the selected eye source.

Suffix:
<e> 1..4

Return values:
<Bitrate> Range: 1000 to 16E+9
Increment: 1
*RST: 2E+9
Default unit: bps

Usage: Query only
Asynchronous command

26.24.2 Display

EYE<e>:MSLices....2754
EYE<e>:DISPlay:MODE....2754
EYE<e>:DISPlay:PERSistence:INFinite....2755
EYE<e>:DISPlay:PERSistence:RESet....2755
EYE<e>:DISPlay:PERSistence:STATe....2755
EYE<e>:DISPlay:PERSistence:TIME....2756

EYE<e>:MSLices <MaxSliceCount>

Sets the number of waveform slices for a single acquisition.

Suffix:
<e> 1..4

Parameters:
<MaxSliceCount> Range: 1 to 2.5E+6
Increment: 1
*RST: 2000

Usage: Asynchronous command

Manual operation: See "Slices per acquisition (Upper limit)" on page 1164

EYE<e>:DISPlay:MODE <Eyestripe_Mode>

Defines when the eye stripe is shown: always, never, or during mask tests.

Suffix:
<e> 1..4

Parameters:
<Eyestripe_Mode> ALWays | MTONly | NEVer
MTONly: Mask test only
*RST: MTONly

Usage: Asynchronous command

Manual operation: See "Display mode" on page 1168

EYE<e>:DISPlay:PERSistence:INFinite <State>

If persistence is enabled (`EYE<e>:DISPlay:PERSistence:STATe`), each new data point in the diagram area remains on the screen infinitely until this command is set to `OFF`.

Suffix:
<e> 1..4

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Infinite persistence" on page 1167

EYE<e>:DISPlay:PERSistence:RESet

Resets the display, removing persistent values.

Suffix:
<e> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Reset" on page 1167

EYE<e>:DISPlay:PERSistence:STATe <State>

If enabled, each new data point in the diagram area remains on the screen for the duration defined using `EYE<e>:DISPlay:PERSistence:TIME`, or as long as `EYE<e>:DISPlay:PERSistence:INFinite` is enabled.

If disabled, the signal value is only displayed as long as it actually occurs.

Suffix:
<e> 1..4

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 1167

EYE<e>:DISPlay:PERSistence:TIME <Time>

If persistence is enabled (`EYE<e>:DISPlay:PERSistence:STATe`), each new data point in the diagram area remains on the screen for the duration defined here.

Suffix:
<e> 1..4

Parameters:
<Time> Range: 0.05 to 50
Increment: 0.05
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 1167

26.24.3 Qualify: gate settings

EYE<e>:QUALify:GATE[:STATe] 2756
EYE<e>:QUALify:GATE:COUPling 2756
EYE<e>:QUALify:GATE:MODE 2757
EYE<e>:QUALify:GATE:ABSolute:STARt 2757
EYE<e>:QUALify:GATE:ABSolute:STOP 2757
EYE<e>:QUALify:GATE:RELative:STARt 2757
EYE<e>:QUALify:GATE:RELative:STOP 2757
EYE<e>:QUALify:GATE:CURSor 2758
EYE<e>:QUALify:GATE:ZDIagram 2758

EYE<e>:QUALify:GATE[:STATe] <State>

Enables the gate.

Suffix:
<e> 1..4

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Gate" on page 1169

EYE<e>:QUALify:GATE:COUPling <CouplingMode>

Sets the gate coupling. To use cursor lines or zoom areas as gate limits, the cursor or zoom must be defined before.

Suffix:
<e> 1..4

Parameters:
<CouplingMode> NONE | CURSor | ZOOM
*RST: NONE

Usage: Asynchronous command

Manual operation: See "Gate" on page 1169

EYE<e>:QUALify:GATE:MODE <Mode>

Defines whether the gate limit is defined in absolute or relative values when no gate coupling is set.

Suffix:
<e> 1..4

Parameters:
<Mode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Gate" on page 1169

EYE<e>:QUALify:GATE:ABSolute:STARt <Start>
EYE<e>:QUALify:GATE:ABSolute:STOP <Stop>

Set the absolute time values for gate start and gate end.

Suffix:
<e> 1..4

Parameters:
<Start>, <Stop> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0.01

Example: Gate definition for eye diagram 2 in absolute time values:

```
EYE2:QUALify:GATE:COUPling NONE
EYE2:QUALify:GATE:MODE ABS
EYE2:QUALify:GATE:ABSolute:STARt -0.0002
EYE2:QUALify:GATE:ABSolute:STOP 0.0002
```

Usage: Asynchronous command

Manual operation: See "Gate" on page 1169

EYE<e>:QUALify:GATE:RELative:STARt <RelativeStart>
EYE<e>:QUALify:GATE:RELative:STOP <RelativeStop>

Set the relative values for gate start and gate end.

Suffix:
<e> 1..4

Parameters:

<RelativeStart>, <RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Example: Gate definition for eye diagram 2 in relative values:

```
EYE2:QUALify:GATE:COUPling NONE
EYE2:QUALify:GATE:MODE REL
EYE2:QUALify:GATE:RELative:STARt 10
EYE2:QUALify:GATE:RElative:STOP 90
```

Usage: Asynchronous command

Manual operation: See "Gate" on page 1169

EYE<e>:QUALify:GATE:CURSor <Cursorset>

Selects the cursor set to be used for eye gating. The gate area is defined by the cursor lines.

Suffix:

<e> 1..4

Parameters:

<Cursorset> CURSOR1 | CURSor1 | CURSOR2 | CURSor2 | CURSOR3 | CURSor3 | CURSOR4 | CURSor4

CURSOR1 = CURSor1, CURSOR2 = CURSor2, CURSOR3 = CURSor3, CURSOR4 = CURSor4

*RST: CURSOR1

Example: Gate definition for eye diagram 2 with cursor coupling:

```
EYE2:QUALify:GATE:COUPling CURSor
EYE2:QUALify:GATE:CURSor CURSor1
```

Usage: Asynchronous command

Manual operation: See "Gate" on page 1169

EYE<e>:QUALify:GATE:ZDIagram <ZoomDiagram>

Selects the zoom diagram to be used for eye gating. The zoom area is is used as gate.

Suffix:

<e> 1..4

Parameters:

<ZoomDiagram> String with the name of the zoom diagram

Example: Gate definition for eye diagram 2 with zoom coupling:

```
EYE2:QUALify:GATE:COUPling ZOOM
EYE2:QUALify:GATE:ZDIagram "Zoom1"
```

Usage: Asynchronous command

Manual operation: See "Gate" on page 1169

26.24.4 Qualify: signal settings

EYE<e>:QUALify:SIGNal[:STATe] 2759
EYE<e>:QUALify:SIGNal:SOURce 2759
EYE<e>:QUALify:SIGNal:CONDition 2759
EYE<e>:QUALify:SIGNal:LSELect 2760
EYE<e>:QUALify:SIGNal:LSLTo 2760

EYE<e>:QUALify:SIGNal[:STATe] <State>

Enables the waveform-based qualification for the eye generation.

Suffix:
<e> 1..4

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 1170

EYE<e>:QUALify:SIGNal:SOURce <Source>

Selects the waveform to be compared.

Suffix:
<e> 1..4

Parameters:
<Source> C1W1 | C2W1 | C3W1 | C4W1 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4

Usage: Asynchronous command

Manual operation: See "Source" on page 1170

EYE<e>:QUALify:SIGNal:CONDition <Condition>

Selects the comparison condition for the the waveform level.

Suffix:
<e> 1..4

Parameters:
<Condition> LTHan | GTHan | INRange | OORange
*RST: GTHan

Usage: Asynchronous command

Manual operation: See "Condition" on page 1170

EYE<e>:QUALify:SIGNal:LSELect <LevelSelection>

Selects the threshold for `EYE<e>:QUALify:SIGNal:CONDition LTHan | GTHan`, and the start threshold for the range settings `INRange | OORange`.

You can use the lower, middle, or upper reference level. These levels are the reference levels that are defined for measurements.

Suffix:
<e> 1..4

Parameters:
<LevelSelection> UPPer | MIDDle | LOWer
*RST: MIDDle

Example: The slices of the channel 1 signal only contribute to the eye generation if the voltage level of the signal on channel 2 is higher than the upper reference level.

```
EYE:SOURce C1W1
EYE:QUALify:SIGNal:SOURce C2W1
EYE:QUALify:SIGNal:CONDition GTHan
EYE:QUALify:SIGNal:LSELect UPPer
EYE:QUALify:SIGNal ON
```

Usage: Asynchronous command

Manual operation: See "Vertical reference levels" on page 1170

EYE<e>:QUALify:SIGNal:LSLTo <LevelSelectionTo>

Selects the end threshold for `EYE<e>:QUALify:SIGNal:CONDition INRange | OORange`.

You can use the lower, middle, or upper reference level. These levels are the reference levels that are defined for measurements.

Suffix:
<e> 1..4

Parameters:
<LevelSelectionTo> UPPer | MIDDle | LOWer
*RST: UPPer

Usage: Asynchronous command

Manual operation: See "Vertical reference levels" on page 1170

26.24.5 Filter

EYE<e>:FILTer:STATe 2761
EYE<e>:FILTer:BPATtern:MODE 2761
EYE<e>:FILTer:BPATtern:PREFix<n> 2762
EYE<e>:FILTer:BPATtern:CENTer 2762
EYE<e>:FILTer:BPATtern:SUFFix<n> 2762
EYE<e>:FILTer:BPATtern:SLEFt 2762
EYE<e>:FILTer:BPATtern:SRIGht 2762
EYE<e>:FILTer:BPATtern:RESet 2762
EYE<e>:FILTer:DDR:FTYPe 2763
EYE<e>:FILTer:DDR:LENerror 2763
EYE<e>:FILTer:RESet 2763
EYE<e>:FILTer:PAMN:BLEVel 2764
EYE<e>:FILTer:PAMN:EMODe 2764
EYE<e>:FILTer:PAMN:SEYE 2764
EYE<e>:FILTer:PAMN:TLEVel 2765

EYE<e>:FILTer:STATe <State>

Applies the filter settings to the data signal.

Suffix:
<e> 1..4

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1171

EYE<e>:FILTer:BPATtern:MODE <Mode>

Selects which bits contribute to the eye generation.

Suffix:
<e> 1..4

Parameters:
<Mode> ABITs | TBITs | LTRansition | NTBits | CLEVel | BPATtern

ABITs
All bits contribute to the eye diagram, same as `EYE<e>:FILTer:STATe` is OFF.

TBITs=LTRansition
Transition bits, only bits after a signal transition contribute (0 to 1, or 1 to 0).

NTBits =CLEVel
Non-transition bits, only bits without a preceding signal transition contribute (0 to 0, or 1 to 1).

BPATtern
Only available for signals with "PAM order" = "NRZ"
Only bits contribute that match the defined pattern before and after the center eye.

*RST: ABITs

Usage: Asynchronous command

Manual operation: See "Mode" on page 1171

EYE<e>:FILTer:BPATtern:PREFix<n> <Bit>
EYE<e>:FILTer:BPATtern:CENTer <BitValue>
EYE<e>:FILTer:BPATtern:SUFFix<n> <Bit>

Set the values of the indicated prefix, center, and suffix bits.

Suffix:
<e> 1..4

<n> 1..5

Parameters:
<Bit> ONE | ZERO | DC

DC: don't care

Manual operation: See "Pattern" on page 1172

EYE<e>:FILTer:BPATtern:SLEFt

Shifts the pattern one bit to the left.

Suffix:
<e> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Pattern control" on page 1172

EYE<e>:FILTer:BPATtern:SRIGht

Shifts the pattern one bit to the right.

Suffix:
<e> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Pattern control" on page 1172

EYE<e>:FILTer:BPATtern:RESet

Resets the bit sequence filter to the default (DC for all bits).

Suffix:
<e> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Pattern control" on page 1172

EYE<e>:FILTer:DDR:FTYPe <CommTyp>

Sets which frame types contribute to the eye diagram.

Suffix:
<e> 1..4

Parameters:
<CommTyp> ANY | ANYC | READ | WRITe | RDNC | WRNC
ANYC: any consecutive
RDNC: read non-consecutive
WRNC: write non-consecutive
*RST: ANY

Usage: Asynchronous command

Manual operation: See "Frame Type" on page 1173

EYE<e>:FILTer:DDR:LENerror <CommTyp>

If enabled, the length errors contribute to the eye diagram.

Suffix:
<e> 1..4

Parameters:
<CommTyp> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Length Error" on page 1173

EYE<e>:FILTer:RESet

Resets the current settings of a protocol filter.

Suffix:
<e> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Reset settings" on page 1172

EYE<e>:FILTer:PAMN:BLEVel <BaseLevel>

Selects the base level for the PAM-N signal eye, if `EYE<e>:FILTer:PAMN:EMODe` is set to `SELected`.

Suffix:
<e> 1..4

Parameters:
<BaseLevel> LEVEL0 | LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6

*RST: LEVEL0

Usage: Asynchronous command

Manual operation: See "PAM-N diagram filter mode" on page 1174

EYE<e>:FILTer:PAMN:EMODe <PAMNEyeSel>

Selects the filter mode for PAM-N signals. It defines which part of the signal is used to build the eye.

Suffix:
<e> 1..4

Parameters:
<PAMNEyeSel> WHOLe | SPECific | SELected

WHOLe
Displays all level transitions of the selected source.

SPECific
Displays an explicit eye opening (e.g. for level transition 1-2) with all involved level transitions. You can select the eye with `EYE<e>:FILTer:PAMN:SEYE`.

SELected
Displays an explicit eye opening (e.g. for level transition 1-2) with only its own level transitions. You can select the base level (`EYE<e>:FILTer:PAMN:BLEVel`) and target level (`EYE<e>:FILTer:PAMN:TLEVel`).

*RST: WHOLe

Usage: Asynchronous command

Manual operation: See "PAM-N diagram filter mode" on page 1174

EYE<e>:FILTer:PAMN:SEYE <PAMNSpecificEye>

Selects the specific eye for the PAM-N signal eye, if `EYE<e>:FILTer:PAMN:EMODe` is set to `SPECific`.

Suffix:
<e> 1..4

Parameters:
<PAMNSpecificEye> EYE1 | EYE2 | EYE3 | EYE4 | EYE5 | EYE6 | EYE7

`EYE1`: level transition 0-1
`EYE2`: level transition 1-2
`EYE3`: level transition 2 -3
`EYE4`: level transition 3-4
`EYE5`: level transition 4-5
`EYE6`: level transition 5-6
`EYE7`: level transition 6-7

*RST: EYE1

Usage: Asynchronous command

Manual operation: See "PAM-N diagram filter mode" on page 1174

EYE<e>:FILTer:PAMN:TLEVel <PAMNSelcEyeTargetLev>

Selects the target level for the PAM-N signal eye, if `EYE<e>:FILTer:PAMN:EMODe` is set to `SELected`.

Suffix:
<e> 1..4

Parameters:
<PAMNSelcEyeTargetLev> LEVEL1 | LEVEL2 | LEVEL3 | LEVEL4 | LEVEL5 | LEVEL6 | LEVEL7

*RST: LEVEL1

Usage: Asynchronous command

Manual operation: See "PAM-N diagram filter mode" on page 1174

26.24.6 Results of eye

EYE<e>:RESult:SLICe<n>:COUNt? 2765
EYE<e>:RESult:SLICe<n>:LPOSition? 2766
EYE<e>:RESult:SLICe<n>[:POSition]? 2766
EYE<e>:RESult:TACQs? 2766
EYE<e>:RESult:TSLices? 2767

EYE<e>:RESult:SLICe<n>:COUNt?

Returns the number of filtered bits.

Suffix:
<e> 1..4

<n> *
Not relevant

Return values:
<Count>

Usage: Query only

EYE<e>:RESult:SLICe<n>:LPOSition?

Returns the position of the last slice in the acquistion.

Suffix:
<e> 1..4

<n> *

Return values:
<LastPosition>

Usage: Query only

EYE<e>:RESult:SLICe<n>[:POSition]?

Returns the position of the filtered bit in the acquisition.

Suffix:
<e> 1..4

<n> *

Return values:
<Position> Range: -100 to 100
Increment: 1E-3
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

EYE<e>:RESult:TACQs?

Returns the total number of acquisitions accumulated into the eye.

Suffix:
<e> 1..4

Return values:
<Acquisitions> Range: 0 to 1E+9
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

EYE<e>:RESult:TSLices?

Returns the total number of slices accumulated into the eye.

Suffix:
<e> 1..4

Return values:
<Slices> Range: 0 to 1E+9
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

26.24.7 Results of mask tests on eye diagrams

MTESt:RESult:COUNt:SLICes?....2767
MTESt:RESult:COUNt:FSLices?....2767
MTESt:RESult:VIOLation<m>:COUNt?....2768
MTESt:RESult:VIOLation<m>[:SLICe]?....2768
MTESt:RESult:VIOLation<m>:STARt?....2768
MTESt:RESult:VIOLation<m>:STOP?....2768
EYE<e>:ZCOupling....2769
EYE<e>:ZDIagram....2769

MTESt:RESult:COUNt:SLICes? <MaskTestName>

Returns the number of slices that contributed to the eye diagram.

Query parameters:
<MaskTestName> String parameter

Return values:
<SlicesCompleted> Range: 0 to 100E+24
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

MTESt:RESult:COUNt:FSLices? <MaskTestName>

Returns the number of slices that violated the mask.

Query parameters:
<MaskTestName> String parameter

Return values:
<SliceHits> Range: 0 to 100E+24
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

MTESt:RESult:VIOLation<m>:COUNt? <MaskTestName>

Suffix:
<m> *
Violation index, corresponds to the number in the "Violation" column of mask test result.

Query parameters:
<MaskTestName> String parameter

Return values:
<Count>

Usage: Query only

MTESt:RESult:VIOLation<m>[:SLICe]? <MaskTestName>

Returns the number of the slices that violated the mask at the given violation index.

Suffix:
<m> *
Violation index, corresponds to the number in the "Violation" column of mask test result.

Query parameters:
<MaskTestName> String parameter

Return values:
<Slice> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

MTESt:RESult:VIOLation<m>:STARt? <MaskTestName>
MTESt:RESult:VIOLation<m>:STOP? <MaskTestName>

Return the start and stop time of the slice with the indicated violation.

Suffix:
<m> *
Violation index, corresponds to the number in the "Violation" column of mask test result.

Query parameters:
<MaskTestName>

Return values:

<Time> Range: -100 to 100
Increment: 1E-3
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

EYE<e>:ZCOupling <ZoomCoupling>

If enabled, the mask eye area is set to the limits of a zoom area.

The zoom diagram is selected using `EYE<e>:ZDIagram`.

Suffix:

<e> 1..4

Parameters:

<ZoomCoupling> OFF | ON
*RST: OFF

Usage: Asynchronous command

EYE<e>:ZDIagram <ZoomDiagram>

Selects the zoom to which the eye mask area is set if `EYE<e>:ZCOupling` is enabled.

Suffix:

<e> 1..4

Parameters:

<ZoomDiagram> String with the name of the diagram on which the zoom is based

Usage: Asynchronous command

26.25 Deembedding (option R&S RTP-K121/-K122)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Measurement setup 2770
- Save and load the deembedding setup 2773
- Components 2774
- Cascade and response 2784

26.25.1 Measurement setup

DEEMbedding<de>[:STATe] 2770
DEEMbedding<de>:ADD 2770
DEEMbedding<de>:REMove 2771
DEEMbedding<de>:CCOunt? 2771
DEEMbedding<de>:REALtime 2771
DEEMbedding<de>:BANDwidth 2772
DEEMbedding<de>:CMPDelay 2772
DEEMbedding<de>:PRESet 2773

DEEMbedding<de>[:STATe] <State>

Activates the deembedding - the correction of parasitic effects of the measurement setup on the measured signal.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1185

DEEMbedding<de>:ADD <Index>,[<Type>]

Adds a component to the measurement setup.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Setting parameters:
<Index> Defines the place of the component in the measurement path. The DUT is always the first component (index = 1), the probe or input is the last component.

<Type> PROBe | FIXTure | CABLe | DUT | ADAPter | INPut | OTHer | INTPoser | RTZA10 | RTZA16 | RTZA17 | RTZA50 | RTZA51 | PP | PC | EXTFrontend

INTPoser
Interposer

RTZA10 | RTZA16 | RTZA17 | RTZA50 | RTZA51
SMA adapters and cable offered by Rohde & Schwarz

PP | PC
Proven probe, proven cable

EXTFrontend
External frontend, requires option R&S RTP-K553.

Example: See Section 26.3.6.1, "Adding cables to the measurement setup", on page 1341.

Usage: Setting only
Asynchronous command

Manual operation: See "Meas setup definition" on page 1186

DEEMbedding<de>:REMove <Index>

Deletes the component with the indicated index from the measurement setup.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Setting parameters:
<Index> Defines the place of the component in the measurement path. The DUT is always the first component (index = 1), the probe or input is the last component.

Usage: Setting only
Asynchronous command

Manual operation: See "Meas setup definition" on page 1186

DEEMbedding<de>:CCOunt?

Returns the total number of components in the measurement setup, including disabled components.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Return values:
<Value> Integer value, number of components

Usage: Query only

Manual operation: See "Meas setup definition" on page 1186

DEEMbedding<de>:REALtime <IsRealTime>

Requires realtime extension option R&S RTP-K122.

If ON, the deembedding calculation is done by the hardware in real time. You can trigger on the corrected signal, and the acquisition rate remains unchanged.

If OFF, the deembedding calculation is done by software. This method is slower, therefore, triggering on the corrected signal is not possible.

Suffix:
<de> 1..4

Parameters:
<IsRealTime> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Realtime deembedding" on page 1185

DEEMbedding<de>:BANDwidth <Bandwidth>

Sets the maximum bandwidth until which the signal is corrected. This maximum value is the minimum bandwidth value of probe, probe tip and oscilloscope bandwidth, and can not be higher than the highest frequency in a used S-parameter file.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Parameters:
<Bandwidth> Bandwidth limit for correction.
Range: 1E+9 to 16E+9
Increment: 10
*RST: 4E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Effective bandwidth" on page 1185

DEEMbedding<de>:CMPDelay <DelayCompens>

Enables the compensation for the group delay of the complete measurement setup. If enabled, the calibration time reference point is the start point of the measurement setup. If disabled, the calibration time reference point is the oscilloscope's channel input.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Parameters:
<DelayCompens> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Delay compensation" on page 1185

DEEMbedding<de>:PRESet

Sets the complete deembedding configuration to the default values. Use this command always before setting up the deembedding, because *RST does not affect the deembedding settings.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Example: See Section 26.3.6.1, "Adding cables to the measurement setup", on page 1341.

Usage: Event
Asynchronous command

Manual operation: See "Preset Deembedding" on page 1186

26.25.2 Save and load the deembedding setup

DEEMbedding<de>:NAME....2773
DEEMbedding<de>:SAVE....2773
DEEMbedding<de>:OPEN....2774
DEEMbedding<de>:DELete....2774

DEEMbedding<de>:NAME <Path>

Sets the file name, file format and path of the deembedding setup file. The file format is always `.xml`.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Parameters:
<Path> String with path and file name with extension `.xml`

Usage: Asynchronous command

Manual operation: See "Save / recall deembedding settings" on page 1186

DEEMbedding<de>:SAVE

Saves the deembedding configuration to the file specified with `DEEMbedding<de>:NAME`.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Usage: Setting only

Manual operation: See "Save / recall deembedding settings" on page 1186

DEEMbedding<de>:OPEN

Opens and loads the deembedding configuration from the file specified with `DEEMbedding<de>:NAME`.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Usage: Setting only

Manual operation: See "Save / recall deembedding settings" on page 1186

DEEMbedding<de>:DELete

Deletes the deembedding configuration file specified with `DEEMbedding<de>:NAME`.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Usage: Setting only

Manual operation: See "Save / recall deembedding settings" on page 1186

26.25.3 Components

- General settings....2774
- DUT settings....2776
- R&S RT-ZM probe settings....2777
- Cable, adapter, fixture and custom settings....2779
- Interposer....2782

26.25.3.1 General settings

DEEMbedding<de>:COMPonent<n>[:STATe] <IsEnabled>

Enables or disables the indicated component for deembedding.

The first and the last component are always enabled and cannot be disabled.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 2..n-1
Index of the component in the measurement setup. The DUT has index 1, the probe has index n.

Parameters:
<IsEnabled> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1187

DEEMbedding<de>:COMPonent<n>:TYPE <Type>

Sets the type of the indicated component. The first component is always DUT, the last component is PROBe or INPut.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..n
Index of the component in the measurement setup. The DUT has index 1, the probe has index n.

Parameters:
<Type> PROBe | FIXTure | CABLe | DUT | ADAPter | INPut | OTHer | INTPoser | RTZA10 | RTZA16 | RTZA17 | RTZA50 | RTZA51 | PP | PC | EXTFrontend

RTZA10 | RTZA16 | RTZA17 | RTZA50 | RTZA51
SMA adapters and cable offered by Rohde & Schwarz

PP | PC
Proven probe, proven cable

EXTFrontend
External frontend, requires option R&S RTP-K553.

*RST: CABLe

Usage: Asynchronous command

Manual operation: See "Component" on page 1187

DEEMbedding<de>:COMPonent<n>:NAME <Name>

Sets a name for the indicated component that helps you identifying it.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..n
Index of the component in the measurement setup. The DUT has index 1, the probe has index n.

Parameters:
<Name> String parameter, name of the component

Usage: Asynchronous command

Manual operation: See "Name" on page 1187

DEEMbedding<de>:COMPonent<n>:PCOunt?

Returns the number of all ports of the selected component (input ports and output ports).

The number of ports depends on the attached probe. If a modular probe R&S RT-ZM or differential probe R&S RT-ZD is used, the number of ports is 4. Otherwise, 2 ports are available.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..n
Index of the component in the measurement setup. The DUT has index 1, the probe has index n.

Return values:
<TotalPorts> ONE | TWO | THRee | FOUR | FIVE | SIX
*RST: TWO

Usage: Query only
Asynchronous command

Manual operation: See "Total ports" on page 1187

26.25.3.2 DUT settings

DEEMbedding<de>:COMPonent<n>:MODE 2776
DEEMbedding<de>:COMPonent<n>:LOAD:REMProbeload 2777
DEEMbedding<de>:COMPonent<n>:LOAD:IMPedance? 2777

DEEMbedding<de>:COMPonent<n>:MODE <Mode>

Sets the probing mode.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1, only for available DUT

Parameters:
<Mode> PROBing | TERMinating

PROBing
For measurements with a high-ohmic probe and measure on an existing line in parallel to the load.

TERMinating
For measurements if the measuring equipment is the load of the line.

*RST: PROBing

Usage: Asynchronous command

Manual operation: See "Probing, Terminating" on page 162

DEEMbedding<de>:COMPonent<n>:LOAD:REMProbeload <Value>

Removes the loading of the probe if `DEEMbedding<de>:COMPonent<n>:MODE` is set to `PROBing`.

If the probe loading is removed, you see the signal that would be at the measurement point if the probe's input impedance is ideal (infinite impedance).

Without removing the loading, you see the real signal at the measurement point, including the probe loading.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1, only for available DUT

Parameters:
<Value> OFF | ON

Usage: Asynchronous command

Manual operation: See "Remove probe load" on page 163

DEEMbedding<de>:COMPonent<n>:LOAD:IMPedance?

Shows the source impedance of the DUT component. If an R&S RT-ZM probe is connected, the value depends on the selected probe mode: common mode, differential, or single-ended measurement.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1, only for available DUT

Return values:
<Value> Numeric value

Usage: Query only
Asynchronous command

Manual operation: See "Source impedance" on page 163

26.25.3.3 R&S RT-ZM probe settings

This chapter lists the commands that correspond to the "Deembedding" > "RT-ZMxx" dialog box. More commands are provided in Section 26.8.7.6, "Modular probes, deembedding", on page 1432.

PROBe<ch>:DEEMbedding:TIPModule[:SELect]....2778
PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule....2778
PROBe<ch>:DEEMbedding:BANDwidth....2779

PROBe<ch>:DEEMbedding:TIPModule[:SELect] <ProbeTipZMA>

Selects the tip module that is used for measurement.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

Parameters:
<ProbeTipZMA> NONE | ZMA10 | ZMA12 | ZMA14 | ZMA15 | ZMA30 | ZMA40 | ZMA50 | CUST

ZMA30 | ZMA40
Define additional settings with `PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule`.

CUST
Load the deembedding file with

*RST: ZMA10

Usage: Asynchronous command

Manual operation: See "Probe tip module, Pin spacing, Open" on page 162

PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule <Value>

Defines additional settings for some tip modules:

For the browser module R&S RT-ZMA30, measure the space between the pins, and select the appropriate value.

If R&S RT-ZMA40 is selected, choose the used submodule: semi-rigid cables or none.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

<n> 30 (R&S RT-ZMA30) or 40 (R&S RT-ZMA40)

Parameters:
<Value> D16 | D25 | D45 | D75 | NONE | SRCS

For R&S RT-ZMA30:
D16 = 1.6 mm
D25 = 2.5 mm
D45 = 4.5 mm
D75 = 7.5 mm
For R&S RT-ZMA40:
NONE = no submodule
SRCS = semi-rigid cables

Usage: Asynchronous command

Manual operation: See "Probe tip module, Pin spacing, Open" on page 162

PROBe<ch>:DEEMbedding:BANDwidth <ProbeBandwidth>

Sets the maximum bandwidth until which the signal is corrected. This maximum value is the minimum bandwidth value of probe, probe tip and oscilloscope bandwidth, and can not be higher than the highest frequency in a used S-parameter file. Consider that most tip modules support the full bandwidth of the probe amplifier, but some tip modules have limited bandwidth.

Suffix:
<ch> 1..4
Selects the channel to which the probe is connected.

Parameters:
<ProbeBandwidth> Range: 10000 to 16E+9
Increment: 10
*RST: 4E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Effective bandwidth" on page 163

26.25.3.4 Cable, adapter, fixture and custom settings

DEEMbedding<de>:COMPonent<n>:IDENtical 2779
DEEMbedding<de>:COMPonent<n>:IPONe 2780
DEEMbedding<de>:COMPonent<n>:IPTWo 2780
DEEMbedding<de>:COMPonent<n>:OPONe 2780
DEEMbedding<de>:COMPonent<n>:OPTWo 2780
DEEMbedding<de>:COMPonent<n>:SPFType 2780
DEEMbedding<de>:COMPonent<n>:SPONe 2781
DEEMbedding<de>:COMPonent<n>:SPTWo 2781
DEEMbedding<de>:COMPonent<n>:SPFSelection 2781
DEEMbedding<de>:COMPonent<n>:PSONe 2781
DEEMbedding<de>:COMPonent<n>:PSTWo 2781

DEEMbedding<de>:COMPonent<n>:IDENtical <MatchedPaths>

The setting is relevant if the measurement setup is a 4-port, and the component is a 2- port. Usually, these components are cables and adapters, which are described by *.s2p files. In case of a 4-port setup, 2 cables or 2 adapters are used. If they are identical, for example, when a matched-pair cable is used, they can be described by the same file. In this case, set the command to ON.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:
<MatchedPaths> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Identical Paths" on page 1199

DEEMbedding<de>:COMPonent<n>:IPONe <InputPort1>
DEEMbedding<de>:COMPonent<n>:IPTWo <InputPort2>
DEEMbedding<de>:COMPonent<n>:OPONe <OutputPort1>
DEEMbedding<de>:COMPonent<n>:OPTWo <OutputPort2>

Assign the ports to the input and output of the component according to the data in the Touchstone file. This information is not directly written in the file. You need background information how the S-parameters were determined, i.e. which port was input and which port was output.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:
<InputPort1>
<InputPort2>
<OutputPort1>
<OutputPort2>
ONE | TWO | THRee | FOUR | FIVE | SIX
Port number that is assigned to the input or output.
*RST: ONE for input 1, TWO for output 1, THRee for input 2, FOUR for output 4

Usage: Asynchronous command

Manual operation: See "Input 1, Input 2, Output 1, Output 2" on page 1198

DEEMbedding<de>:COMPonent<n>:SPFType <SParamFile1Typ>

Selects the file format of the Touchstone file.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:
<SParamFile1Typ> S2P | S3P | S4P | S6P
*RST: S2P

Usage: Asynchronous command

Manual operation: See "S-Parameters, File type" on page 1199

DEEMbedding<de>:COMPonent<n>:SPONe <SParamFilePath>
DEEMbedding<de>:COMPonent<n>:SPTWo <SParamFilePath>

Set the file name and path of the S-parameter file, and load the S-parameters.

See also: "S-Parameters, File type" on page 1199.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:
<SParamFilePath> String with path and file name.

Example: See Section 26.3.6.1, "Adding cables to the measurement setup", on page 1341.

Usage: Asynchronous command

Manual operation: See "S-Parameters, File type" on page 1199

DEEMbedding<de>:COMPonent<n>:SPFSelection <SParamFileSel>

Selects the Touchstone file for response curve display.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:
<SParamFileSel> SPF1 | SPF2

*RST: SPF1

Usage: Asynchronous command

Manual operation: See "Response curves" on page 1199

DEEMbedding<de>:COMPonent<n>:PSONe <PlotSelect>
DEEMbedding<de>:COMPonent<n>:PSTWo <PlotSelect>

Selects the S-parameter for display of the response curves: magnitude, phase and group delay response.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:

<PlotSelect> S11 | S12 | S15 | S16 | S21 | S22 | S25 | S26 | S35 | S36 | S45 | S46 | S51 | S52 | S53 | S54 | S55 | S56 | S61 | S62 | S63 | S64 | S65 | S66

*RST: S12

Usage: Asynchronous command

Manual operation: See "Response curves" on page 1199

26.25.3.5 Interposer

DEEMbedding<de>:COMPonent<n>:INTPoser:CPONe 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:CPTWo 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:MPONe 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:MPTWo 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:PPONe 2783
DEEMbedding<de>:COMPonent<n>:INTPoser:PPTWo 2783
DEEMbedding<de>:COMPonent<n>:INTPoser:TERMinate 2783

DEEMbedding<de>:COMPonent<n>:INTPoser:CPONe <ContrPortNumber>
DEEMbedding<de>:COMPonent<n>:INTPoser:CPTWo <ContrPortNumber>

Sets the interposer port number at the controller device.

Suffix:

<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:

<ContrPortNumber> ONE | TWO | THRee | FOUR | FIVE | SIX

*RST: ONE for CPONe, TWO for CPTWo

Usage: Asynchronous command

Manual operation: See "Ctrl 1, Ctrl 2" on page 1195

DEEMbedding<de>:COMPonent<n>:INTPoser:MPONe <MemPortNumber>
DEEMbedding<de>:COMPonent<n>:INTPoser:MPTWo <MemPortNumber>

Sets the interposer port number at the memory device.

Suffix:

<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:
<MemPortNumber> ONE | TWO | THRee | FOUR | FIVE | SIX
*RST: THRee for MPONe, FOUR for MPTWo

Usage: Asynchronous command

Manual operation: See "Mem 1, Mem 2" on page 1194

DEEMbedding<de>:COMPonent<n>:INTPoser:PPONe <ProbePortNumber>
DEEMbedding<de>:COMPonent<n>:INTPoser:PPTWo <ProbePortNumber>

Sets the interposer port number of the probe point.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:
<ProbePortNumber> ONE | TWO | THRee | FOUR | FIVE | SIX
*RST: FIVE for PPONe, SIX for PPTWo

Usage: Asynchronous command

Manual operation: See "Probe 1, Probe 2" on page 1195

DEEMbedding<de>:COMPonent<n>:INTPoser:TERMinate <InterposerTerminat>

Sets the port which is terminated at the interposer block: memory or controller port. The other port pair is exposed as input to the next block.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

<n> 1..*
Selects the component. The DUT has suffix 1.

Parameters:
<InterposerTerminat> MEMory | CTRL
*RST: MEMory

Usage: Asynchronous command

Manual operation: See "Terminate" on page 1195

26.25.4 Cascade and response

DEEMbedding<de>:CASCade:PSELection <PlotSelection>

Selects the S-parameter for which the response curves (magnitude, phase, and group delay response) of the setup cascade are shown.

Suffix:
<de> 1..4
Selects the channel that is configured for deembedding.

Parameters:
<PlotSelection> S11 | S12 | S13 | S15 | S16 | S21 | S22 | S23 | S25 | S26 | S31 | S32 | S33 | S35 | S36 | S45 | S46 | S51 | S52 | S53 | S54 | S55 | S56 | S61 | S62 | S63 | S64 | S65 | S66

*RST: S21

Usage: Asynchronous command

Manual operation: See "Port selection" on page 1200

26.26 Embedding and equalization (option R&S RTP-K126)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

- Signal lanes....2785
- General....2787
- Vertical....2790
- TxFFE....2791
- Embedding....2793
- CTLE....2802
- FFE....2806
- DFE....2810
- Filter training....2817

26.26.1 Signal lanes

LANE<m>:NAME....2785
LANE<m>:OPEN....2785
LANE<m>:PRESet....2785
LANE<m>:SAVE....2786
LANE<m>:SOURce....2786
LANE<m>:STATe....2786
LANE<m>:SYMRate....2786

LANE<m>:NAME <SaveSetPath>

Sets the file name, file format and path of the lane setup file. The file format is always `.xml`.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<SaveSetPath>

Usage: Asynchronous command

Manual operation: See "Save / recall settings" on page 1212

LANE<m>:OPEN

Opens and loads the lane configuration from the file specified with `LANE<m>:SAVE`.

Suffix:
<m> 1..4
Selects the lane that is configured.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / recall settings" on page 1212

LANE<m>:PRESet

Presets the equalization lane.

Suffix:
<m> 1..4
Selects the lane that is configured.

Usage: Event
Asynchronous command

Manual operation: See "Preset" on page 1212

LANE<m>:SAVE

Saves the embedding configuration to the file specified with `LANE<m>:NAME`.

Suffix:
<m> 1..4
Selects the lane that is configured.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / recall settings" on page 1212

LANE<m>:SOURce <MainSource>

Selects the source of the lane.

Suffix:
<m> 1..4
Selects the lane.

Parameters:
<MainSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | M5 | M6 | M7 | M8

Usage: Asynchronous command

Manual operation: See "Source" on page 1212

LANE<m>:STATe <State>

Activates the lane signal.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1211

LANE<m>:SYMRate <SymbolRate>

Sets a nominal bit rate for the signal.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:

<SymbolRate> Range: 100 to 40E+9
Increment: 10
*RST: 1E+9
Default unit: Baud

Usage: Asynchronous command

Manual operation: See "Nominal bit rate" on page 1212

26.26.2 General

LANE<m>:CMPO....2787
LANE<m>:COMFilter:INCLude:DEEMbedding....2787
LANE<m>:COMFilter:INCLude:EMBedding....2788
LANE<m>:COMFilter:INCLude:TFFE....2788
LANE<m>:EQUalization:NAME....2788
LANE<m>:EQUalization:OPEN....2789
LANE<m>:EQUalization:PRESet....2789
LANE<m>:EQUalization:SAVE....2789
LANE<m>:EQUalization:STATe....2789

LANE<m>:CMPO <OffsCompens>

Enables the DC offset compensation. If enabled, the application estimates the DC offset of the input signal and removes it prior to training and/or applying equalizers to it.

Suffix:

<m> 1..4
Selects the lane that is configured.

Parameters:

<OffsCompens> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "DC offset compensation" on page 1211

LANE<m>:COMFilter:INCLude:DEEMbedding <IncludeDeembedding>

Includes deembedding.

See also Section 26.25, "Deembedding (option R&S RTP-K121/-K122)", on page 2769.

Suffix:

<m> 1..4
Selects the lane that is configured.

Parameters:
<IncludeDeembedding> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Deembedding" on page 1213

LANE<m>:COMFilter:INCLude:EMBedding <IncludeEmbedding>

Includes embedding.

See also Section 26.26.5, "Embedding", on page 2793.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<IncludeEmbedding> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Embedding" on page 1213

LANE<m>:COMFilter:INCLude:TFFE <IncludeTxFFE>

Includes the transmitter feed forward equalization.

See also Section 26.26.4, "TxFFE", on page 2791.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<IncludeTxFFE> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "TxFFE" on page 1213

LANE<m>:EQUalization:NAME <SaveSetPath>

Sets the file name, file format and path of the equalization setup file. The file format is always `.xml`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<SaveSetPath>

Usage: Asynchronous command

Manual operation: See "Save / open equalization settings" on page 1228

LANE<m>:EQUalization:OPEN

Opens and loads the equalization configuration from the file specified with `LANE<m>:EQUalization:SAVE`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / open equalization settings" on page 1228

LANE<m>:EQUalization:PRESet

Presets the equalization settings to their default values.

Suffix:
<m> 1..4

Usage: Event
Asynchronous command

Manual operation: See "Preset" on page 1228

LANE<m>:EQUalization:SAVE

Saves the equalization configuration to the file specified with `LANE<m>:EQUalization:SAVE`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / open equalization settings" on page 1228

LANE<m>:EQUalization:STATe <State>

Enables the equalization.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1227

26.26.3 Vertical

LANE<m>:VERTical:COUPle 2790
LANE<m>:VERTical:OFFSet 2790
LANE<m>:VERTical:POSition 2791
LANE<m>:VERTical:SCALe 2791

LANE<m>:VERTical:COUPle <VertCpl>

Determines how the vertical settings are defined.

If enabled, the vertical settings are coupled to the settings of the respective source. If disabled, the vertical settings for embedding and equalization are set in this dialog.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<VertCpl> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Couple settings to source" on page 1215

LANE<m>:VERTical:OFFSet <VerticalOffset>

Sets the offset for embedding and equalization.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<VerticalOffset> Range: -100E+24 to 100E+24
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 1216

LANE<m>:VERTical:POSition <VertPosi>

Sets the vertical position for embedding and equalization.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<VertPosi> Range: -100E+24 to 100E+24
Increment: 0.1
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Position" on page 1216

LANE<m>:VERTical:SCALe <VerticalScale>

Sets the vertical scale for embedding and equalization.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<VerticalScale> Range: 1E-12 to 100
Increment: 1E-3
*RST: 0.05
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Scale" on page 1216

26.26.4 TxFFE

LANE<m>:TFFE:PSELection 2791
LANE<m>:TFFE:SCONfig:LIST? 2792
LANE<m>:TFFE:SCONfig[:SELect] 2792
LANE<m>:TFFE:STATe 2792
LANE<m>:TFFE:TAPS:COUNt 2793
LANE<m>:TFFE:TAPS:TAP<n> 2793

LANE<m>:TFFE:PSELection <PlotSelection>

Selects the plots that is displayed for the selected TxFFE configuration.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<PlotSelection> MAGNitude | PHASe | GDELay | STEP | TAPS
*RST: TAPS

Usage: Asynchronous command

Manual operation: See "Plot" on page 1213

LANE<m>:TFFE:SCONfig:LIST?

Returns the list of available presets for the selected standard.

Suffix:
<m> 1..4
Selects the lane that is configured.

Return values:
<List>

Usage: Query only
Asynchronous command

Manual operation: See "Standard configuration" on page 1217

LANE<m>:TFFE:SCONfig[:SELect] <SubConfig>

Selects a preset standard according to the selected serial standard. You can set the serial standard with `SIGNalconfig:SETup:SETTing<m>:SERStandard`.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<SubConfig>

Usage: Asynchronous command

Manual operation: See "Standard configuration" on page 1217

LANE<m>:TFFE:STATe <State>

Enables the transmitter feed forward equalization.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1217

LANE<m>:TFFE:TAPS:COUNt <NumItems>

Seletcs the number of taps for the TxFFE.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<NumItems> Range: 1 to 40
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps" on page 1218

LANE<m>:TFFE:TAPS:TAP<n> <Value>

Sets the value of the tap for the TxFFE.

Suffix:
<m> 1..4
Selects the lane that is configured.

<n> *

Parameters:
<Value> Range: -40E+9 to 40E+9
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps" on page 1218

26.26.5 Embedding

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

LANE<m>:EMBedding:STATe 2794
LANE<m>:EMBedding:ADD 2794
LANE<m>:EMBedding:BANDwidth 2795

LANE<m>:EMBedding:DIFFerential....2795
LANE<m>:EMBedding:CASCade:PSELection....2795
LANE<m>:EMBedding:CCOunt?....2796
LANE<m>:EMBedding:CMPDelay....2796
LANE<m>:EMBedding:COMPonent<n>:IDENtical....2796
LANE<m>:EMBedding:COMPonent<n>:IPONe....2797
LANE<m>:EMBedding:COMPonent<n>:IPTWo....2797
LANE<m>:EMBedding:COMPonent<n>:OPONe....2797
LANE<m>:EMBedding:COMPonent<n>:OPTWo....2797
LANE<m>:EMBedding:COMPonent<n>:NAME....2797
LANE<m>:EMBedding:COMPonent<n>:PCOunt?....2798
LANE<m>:EMBedding:COMPonent<n>:PSONe....2798
LANE<m>:EMBedding:COMPonent<n>:PSTWo....2798
LANE<m>:EMBedding:COMPonent<n>:SPFSelection....2799
LANE<m>:EMBedding:COMPonent<n>:SPFType....2799
LANE<m>:EMBedding:COMPonent<n>:SPONe....2799
LANE<m>:EMBedding:COMPonent<n>:SPTWo....2799
LANE<m>:EMBedding:COMPonent<n>:TYPE....2800
LANE<m>:EMBedding:COMPonent<n>[:STATe]....2800
LANE<m>:EMBedding:NAME....2800
LANE<m>:EMBedding:OPEN....2801
LANE<m>:EMBedding:PRESet....2801
LANE<m>:EMBedding:REMove....2801
LANE<m>:EMBedding:SAVE....2801

LANE<m>:EMBedding:STATe <State>

Activates the embedding.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1221

LANE<m>:EMBedding:ADD <Index>,[<Type>]

Adds a component to the measurement setup.

Suffix:
<m> 1..4
Selects the channel that is configured for embedding.

Setting parameters:
<Index> Defines the place of the component in the measurement path.

<Type> FIXTure | CABLe | DUT | ADAPter | PC | OTHer

Usage: Setting only

Manual operation: See "Meas setup definition" on page 1222

LANE<m>:EMBedding:BANDwidth <Bandwidth>

Sets the maximum bandwidth until which the signal is corrected. This maximum value is the minimum bandwidth value of probe, probe tip and oscilloscope bandwidth, and can not be higher than the highest frequency in a used S-parameter file.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Parameters:
<Bandwidth> Range: 1E+9 to 16E+9
Increment: 10
*RST: 4E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Effective bandwidth" on page 1221

LANE<m>:EMBedding:DIFFerential <AllowDiff>

Enables differential mode for math or reference curve sources.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Parameters:
<AllowDiff> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Differential mode" on page 1222

LANE<m>:EMBedding:CASCade:PSELection <PlotSelection>

Selects the S-parameter for which the response curves (magnitude, phase, and group delay response) of the setup cascade are shown.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Parameters:
<PlotSelection> S11 | S12 | S13 | S14 | S21 | S22 | S23 | S24 | S31 | S32 | S33 | S34 | S41 | S42 | S43 | S44
*RST: S21

Usage: Asynchronous command

LANE<m>:EMBedding:CCOunt?

Returns the total number of components in the measurement setup, including disabled components.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Return values:
<Value>

Usage: Query only
Asynchronous command

Manual operation: See "Meas setup definition" on page 1222

LANE<m>:EMBedding:CMPDelay <DlyCompens>

Enables the compensation for the group delay of the complete measurement setup. If enabled, the calibration time reference point is the start point of the measurement setup. If disabled, the calibration time reference point is the oscilloscope's channel input.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Parameters:
<DlyCompens> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Delay compensation" on page 1221

LANE<m>:EMBedding:COMPonent<n>:IDENtical <MatchedPaths>

The setting is relevant if the measurement setup is a 4-port, and the component is a 2- port. Usually, these components are cables and adapters, which are described by *.s2p files. In case of a 4-port setup, 2 cables or 2 adapters are used. If they are identical, for example, when a matched-pair cable is used, they can be described by the same file. In this case, set the command to ON.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> 1..*
Selects the component.

Parameters:
<MatchedPaths> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Identical paths" on page 1224

LANE<m>:EMBedding:COMPonent<n>:IPONe <InputPort1>
LANE<m>:EMBedding:COMPonent<n>:IPTWo <InputPort2>
LANE<m>:EMBedding:COMPonent<n>:OPONe <OutputPort1>
LANE<m>:EMBedding:COMPonent<n>:OPTWo <OutputPort2>

Assign the ports to the input and output of the component according to the data in the Touchstone file. This information is not directly written in the file. You need background information how the S-parameters were determined, i.e. which port was input and which port was output.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> 1..*
Selects the component.

Parameters:
<OutputPort2> ONE | TWO | THRee | FOUR
*RST: ONE for input 1, TWO for output 1, THRee for input 2, FOUR for output 4

Usage: Asynchronous command

Manual operation: See "Input 1, Input 2, Output 1, Output 2" on page 1224

LANE<m>:EMBedding:COMPonent<n>:NAME <Name>

Sets a name for the indicated component that helps you identifying it.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> 1..n
Index of the component in the measurement setup.

Parameters:
<Name> String parameter, name of the component

Usage: Asynchronous command

Manual operation: See "Name" on page 1223

LANE<m>:EMBedding:COMPonent<n>:PCOunt?

Returns the number of all ports of the selected component (input ports and output ports).

Suffix:
<m> 1..4
Selects the channel that is configured for deembedding.

<n> *
Index of the component in the measurement setup.

Return values:
<TotalCompPorts> TWO | FOUR
*RST: TWO

Usage: Query only
Asynchronous command

Manual operation: See "Total ports" on page 1224

LANE<m>:EMBedding:COMPonent<n>:PSONe <PlotSelect1>

Selects the plot one.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> *

Parameters:
<PlotSelect1> S11 | S12 | S13 | S14 | S21 | S22 | S23 | S24 | S31 | S32 | S33 | S34 | S41 | S42 | S43 | S44
*RST: S21

Usage: Asynchronous command

LANE<m>:EMBedding:COMPonent<n>:PSTWo <PlotSelect2>

Selects the S-parameter for display of the response curves: magnitude, phase and group delay response.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> *

Parameters:
<PlotSelect2> S11 | S12 | S13 | S14 | S21 | S22 | S23 | S24 | S31 | S32 | S33 | S34 | S41 | S42 | S43 | S44
*RST: S12

Usage: Asynchronous command

LANE<m>:EMBedding:COMPonent<n>:SPFSelection <SParamFileSel>

Selects the S-parameter file for response curve display.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> *
Selects the component.

Parameters:
<SParamFileSel> SPF1 | SPF2
*RST: SPF1

Usage: Asynchronous command

LANE<m>:EMBedding:COMPonent<n>:SPFType <SParamFile1Typ>

Selects the file format of the Touchstone file.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> *
Selects the component.

Parameters:
<SParamFile1Typ> S2P | S3P | S4P | S6P
*RST: S2P

Usage: Asynchronous command

LANE<m>:EMBedding:COMPonent<n>:SPONe <SParamFilePath1>
LANE<m>:EMBedding:COMPonent<n>:SPTWo <SParamFilePath2>

Set the file name, file format and path of the S-parameter file, and load the S-parameters.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> 1..*
Selects the component.

Parameters:
<SParamFilePath2> String with path and file name with extension `s2p` (2-port component) or `s4p` (4-port component).

Usage: Asynchronous command

Manual operation: See "S-Parameters, Filetype" on page 1224

LANE<m>:EMBedding:COMPonent<n>:TYPE <Type>

Sets the type of the indicated component.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> *

Parameters:
<Type> FIXTure | CABLe | ADAPter | PC | OTHer
`PC`: proven cable
*RST: CABLe

Usage: Asynchronous command

Manual operation: See "Component" on page 1223

LANE<m>:EMBedding:COMPonent<n>[:STATe] <IsEnabled>

Enables or disables the indicated component for embedding.

The first and the last component are always enabled and cannot be disabled.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

<n> *
Index of the component in the measurement setup.

Parameters:
<IsEnabled> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1223

LANE<m>:EMBedding:NAME <Path>

Sets the file name, file format and path of the embedding setup file. The file format is always `.xml`.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Parameters:
<Path> String with path and file name with extension `.xml`

Usage: Asynchronous command

Manual operation: See "Save / recall embedding settings" on page 1222

LANE<m>:EMBedding:OPEN

Opens and loads the embedding configuration from the file specified with `LANE<m>:EMBedding:NAME`.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Usage: Setting only

Manual operation: See "Save / recall embedding settings" on page 1222

LANE<m>:EMBedding:PRESet

Sets the complete embedding configuration to the default values.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Usage: Event
Asynchronous command

Manual operation: See "Preset Embedding" on page 1222

LANE<m>:EMBedding:REMove <Index>

Deletes the component with the indicated index from the measurement setup.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Setting parameters:
<Index>

Usage: Setting only

Manual operation: See "Meas setup definition" on page 1222

LANE<m>:EMBedding:SAVE

Saves the embedding configuration to the file specified with `LANE<m>:EMBedding:NAME`.

Suffix:
<m> 1..4
Selects the lane that is configured for embedding.

Usage: Setting only

Manual operation: See "Save / recall embedding settings" on page 1222

26.26.6 CTLE

BUS<b>:CTLE:ACGain....2802
LANE<m>:EQUalization:CTLE:ACGain....2802
LANE<m>:EQUalization:CTLE:DCGain....2803
LANE<m>:EQUalization:CTLE:NAME....2803
LANE<m>:EQUalization:CTLE:OPEN....2803
LANE<m>:EQUalization:CTLE:POLE:COUNt....2803
LANE<m>:EQUalization:CTLE:POLE:FREQuency<n>....2804
LANE<m>:EQUalization:CTLE:PSELection....2804
LANE<m>:EQUalization:CTLE:SAVE....2804
LANE<m>:EQUalization:CTLE:SCONfig:LIST?....2805
LANE<m>:EQUalization:CTLE:SCONfig[:SELect]....2805
LANE<m>:EQUalization:CTLE:STATe....2805
LANE<m>:EQUalization:CTLE:ZERO:COUNt....2806
LANE<m>:EQUalization:CTLE:ZERO:FREQuency<n>....2806

BUS<b>:CTLE:ACGain <ACGain>

Displays an AC gain for the CTLE filter.

Suffix:
<b> 1..4
Selects the lane that is configured for equalization.

Parameters:
<ACGain>
Range: -100 to 100
Increment: 0.01
*RST: 0
Default unit: dB

LANE<m>:EQUalization:CTLE:ACGain <GainAC>

For HDMI serial standard, the command sets or queries an AC gain for the CTLE filter. For other standards, the command is only a query and returns the value.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<GainAC>
Range: -100 to 100
Increment: 0.5
*RST: 0
Default unit: dB

Usage: Asynchronous command

Manual operation: See "AC Gain" on page 1229

LANE<m>:EQUalization:CTLE:DCGain <GainDC>

Sets a DC gain for the CTLE filter. The DC gain determines the level of signal amplification at the low frequency end, thus ensuring that low frequency components are amplified to an adequate level to maintain signal integrity.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<GainDC> Range: -40 to 40
Increment: 0.5
*RST: 0
Default unit: dB

Usage: Asynchronous command

Manual operation: See "DC Gain" on page 1229

LANE<m>:EQUalization:CTLE:NAME <SaveSetPath>

Sets the file name, file format and path of the CTLE equalization setup file. The file format is always `.xml`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<SaveSetPath>

Usage: Asynchronous command

Manual operation: See "Save / recall CTLE settings" on page 1230

LANE<m>:EQUalization:CTLE:OPEN

Opens and loads the equalization CTLE configuration from the file specified with `LANE<m>:EQUalization:CTLE:NAME`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / recall CTLE settings" on page 1230

LANE<m>:EQUalization:CTLE:POLE:COUNt <NumItems>

Selects the number of pole frequencies for CTLE. You can set the individual value for each pole frequency with `LANE<m>:EQUalization:CTLE:POLE:FREQuency<n>`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<NumItems> Range: 1 to 40
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Pole frequencies" on page 1231

LANE<m>:EQUalization:CTLE:POLE:FREQuency<n> <Value>

Set the value of the respective pole frequency.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

<n> *

Parameters:
<Value> Range: -40E+9 to 40E+9
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "Pole frequencies" on page 1231

LANE<m>:EQUalization:CTLE:PSELection <PlotSelection>

Selects the plots that is displayed for the current CTLE configuration.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<PlotSelection> MAGNitude | PHASe | GDELay | STEP | TAPS
*RST: TAPS

Usage: Asynchronous command

Manual operation: See "Plot selection" on page 1232

LANE<m>:EQUalization:CTLE:SAVE

Saves the CTLE configuration to the file specified with `LANE<m>:EQUalization:CTLE:NAME`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / recall CTLE settings" on page 1230

LANE<m>:EQUalization:CTLE:SCONfig:LIST?

Returns the list of available presets for the selected standard.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Return values:
<List>

Usage: Query only
Asynchronous command

Manual operation: See "Standard configuration" on page 1230

LANE<m>:EQUalization:CTLE:SCONfig[:SELect] <SubConfig>

Selects a preset standard according to the selected serial standard. You can set the serial standard with `SIGNalconfig:SETup:SETTing<m>:SERStandard`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<SubConfig>

Usage: Asynchronous command

Manual operation: See "Standard configuration" on page 1230

LANE<m>:EQUalization:CTLE:STATe <State>

Enables the continuous time linear equalizer (CTLE).

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1229

LANE<m>:EQUalization:CTLE:ZERO:COUNt <NumItems>

Selects the number of zero frequencies for CTLE. You can set the individual value for each zero frequency with `LANE<m>:EQUalization:CTLE:ZERO:FREQuency<n>`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<NumItems> Range: 1 to 40
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Zero frequencies" on page 1231

LANE<m>:EQUalization:CTLE:ZERO:FREQuency<n> <Value>

Set the value of the respective zero frequency.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

<n> *

Parameters:
<Value> Range: -40E+9 to 40E+9
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "Zero frequencies" on page 1231

26.26.7 FFE

LANE<m>:EQUalization:FFE:NAME 2807
LANE<m>:EQUalization:FFE:OPEN 2807
LANE<m>:EQUalization:FFE:PSELection 2807
LANE<m>:EQUalization:FFE:SAVE 2807
LANE<m>:EQUalization:FFE:STATe 2808
LANE<m>:EQUalization:FFE:TAPS:COUNt 2808
LANE<m>:EQUalization:FFE:TAPS:NORMalize 2808
LANE<m>:EQUalization:FFE:TAPS:PRESet 2809
LANE<m>:EQUalization:FFE:TAPS:SYMMode 2809
LANE<m>:EQUalization:FFE:TAPS:SYMValue 2809
LANE<m>:EQUalization:FFE:TAPS:TAP<n> 2809

LANE<m>:EQUalization:FFE:NAME <SaveSetPath>

Sets the file name, file format and path of the FFE equalization setup file. The file format is always `.xml`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<SaveSetPath>

Usage: Asynchronous command

Manual operation: See "Save / recall FFE settings" on page 1237

LANE<m>:EQUalization:FFE:OPEN

Opens and loads the equalization FFE configuration from the file specified with `LANE<m>:EQUalization:FFE:SAVE`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / recall FFE settings" on page 1237

LANE<m>:EQUalization:FFE:PSELection <PlotSelection>

Selects the plots that is displayed for the selected FFE configuration.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<PlotSelection> MAGNitude | PHASe | GDELay | STEP | TAPS
*RST: TAPS

Usage: Asynchronous command

Manual operation: See "Plot selection" on page 1236

LANE<m>:EQUalization:FFE:SAVE

Saves the FFE configuration to the file specified with `LANE<m>:EQUalization:FFE:SAVE`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / recall FFE settings" on page 1237

LANE<m>:EQUalization:FFE:STATe <State>

Enables the feed-forward equalizer (FFE).

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1235

LANE<m>:EQUalization:FFE:TAPS:COUNt <NumItems>

Seletcs the number of taps for the FFE. You can set the individual value for each tap with `LANE<m>:EQUalization:FFE:TAPS:TAP<n>`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<NumItems> Range: 1 to 40
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps" on page 1236

LANE<m>:EQUalization:FFE:TAPS:NORMalize

Normalizes the taps so that their sum is 1.0.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Event
Asynchronous command

Manual operation: See "Normalize taps" on page 1237

LANE<m>:EQUalization:FFE:TAPS:PRESet

Presets the FFE taps.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Event
Asynchronous command

Manual operation: See "Default taps" on page 1237

LANE<m>:EQUalization:FFE:TAPS:SYMMode <TapsPerSymbolMd>

Selects how the taps per symbol are determined, if they track the data rate or manually.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<TapsPerSymbolMd> TDRA | AUTO | MANual
*RST: TDRA

Usage: Asynchronous command

Manual operation: See "Taps per symbol" on page 1237

LANE<m>:EQUalization:FFE:TAPS:SYMValue <TapsPerSymbolVal>

Available, if `LANE<m>:EQUalization:FFE:TAPS:SYMMode` is set to `MANual`.

Sets the number of taps per bit are used for the equalization.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<TapsPerSymbolVal> Range: 1 to 4
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps per symbol" on page 1237

LANE<m>:EQUalization:FFE:TAPS:TAP<n> <Value>

Sets the value of the tap for the FFE.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

<n> *

Parameters:
<Value> Range: -40E+9 to 40E+9
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps" on page 1236

26.26.8 DFE

LANE<m>:EQUalization:DFE:GAIN 2810
LANE<m>:EQUalization:DFE:NAME 2811
LANE<m>:EQUalization:DFE:OPEN 2811
LANE<m>:EQUalization:DFE:SAVE 2811
LANE<m>:EQUalization:DFE:STATe 2811
LANE<m>:EQUalization:DFE:TAPS:COUNt 2812
LANE<m>:EQUalization:DFE:TAPS:NORMalize 2812
LANE<m>:EQUalization:DFE:TAPS:PRESet 2812
LANE<m>:EQUalization:DFE:TAPS:TAP<n> 2813
LANE<m>:EQUalization:DFE:TIMReference:CDR[:SELect] 2813
LANE<m>:EQUalization:DFE:TIMReference:CDR:SOFTware 2813
LANE<m>:EQUalization:DFE:TIMReference:CDR:SOFTware:SAMTime 2814
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:EDGE 2814
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FACTor 2814
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FREQuency 2815
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FREStimation 2815
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:LEVel 2815
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:OFEStimation 2816
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:OFFSet 2816
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:SOURce 2816
LANE<m>:EQUalization:DFE:TIMReference:SOURce 2817

LANE<m>:EQUalization:DFE:GAIN <Gain>

Sets the gain for the DFE filter.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<Gain> Range: 0.01 to 100
Increment: 2
*RST: 1

Usage: Asynchronous command

Manual operation: See "Gain" on page 1242

LANE<m>:EQUalization:DFE:NAME <SaveSetPath>

Sets the file name, file format and path of the DFE equalization setup file. The file format is always `.xml`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<SaveSetPath>

Usage: Asynchronous command

Manual operation: See "Save / recall DFE settings" on page 1242

LANE<m>:EQUalization:DFE:OPEN

Opens and loads the equalization DFE configuration from the file specified with `LANE<m>:EQUalization:DFE:NAME`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / recall DFE settings" on page 1242

LANE<m>:EQUalization:DFE:SAVE

Saves the DFE configuration to the file specified with `LANE<m>:EQUalization:DFE:NAME`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Save / recall DFE settings" on page 1242

LANE<m>:EQUalization:DFE:STATe <State>

Enables the decision feedback equalization.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1238

LANE<m>:EQUalization:DFE:TAPS:COUNt <NumItems>

Selects the number of zero frequencies for DFE. You can set the individual value for each frequency with `LANE<m>:EQUalization:DFE:TAPS:TAP<n>`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<NumItems> Range: 1 to 40
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps" on page 1241

LANE<m>:EQUalization:DFE:TAPS:NORMalize

Normalizes the DFE taps.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Event
Asynchronous command

Manual operation: See "Normalize taps" on page 1242

LANE<m>:EQUalization:DFE:TAPS:PRESet

Presets to default DFE taps value.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Event
Asynchronous command

Manual operation: See "Default taps" on page 1242

LANE<m>:EQUalization:DFE:TAPS:TAP<n> <Value>

Set the value of the respective tap.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

<n> *

Parameters:
<Value> Range: -40E+9 to 40E+9
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps" on page 1241

LANE<m>:EQUalization:DFE:TIMReference:CDR[:SELect] <CDRType>

Selects hardware or software clock data recovery.

Available, if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CDR`.

Suffix:
<m> 1..4

Parameters:
<CDRType> SW | HW
*RST: SW

Usage: Asynchronous command

Manual operation: See "CDR" on page 1239

LANE<m>:EQUalization:DFE:TIMReference:CDR:SOFTware <SoftwareCDRIdx>

Selects the software CDR used for the reference signal for the DFE.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<SoftwareCDRIdx> SW1 | SW2 | SW3 | SW4
*RST: SW1

Usage: Asynchronous command

Manual operation: See "CDR" on page 1239

LANE<m>:EQUalization:DFE:TIMReference:CDR:SOFTware:SAMTime <SamplingTime>

Sets a sampling time for the clock signal, an offset for the clock edge in relation to the bit start.

Available if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CDR`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<SamplingTime> Range: 0 to 1
Increment: 0.01
*RST: 0.5
Default unit: UI

Usage: Asynchronous command

Manual operation: See "CDR" on page 1239

LANE<m>:EQUalization:DFE:TIMReference:CLOCk:EDGE <ClockEdge>

The clock edge sets the point in time when the state of the data signal is checked.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
*RST: EITHer

Usage: Asynchronous command

Manual operation: See "Slope" on page 1241

LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FACTor <RefClkMultiplicator>

Sets a clock multiplier factor.

Available if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CLOCk`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<RefClkMultiplicator> Range: 1 to 100
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Multiplier" on page 1240

LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FREQuency <ClockFrequency>

Sets the clock frequency for the clock signal.

Available if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CLOCk`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<ClockFrequency> Range: 1000 to 10E+9
Increment: 10
*RST: 500E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1240

LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FREStimation

Executes an estimation of the signal for the clock frequency.

Available if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CLOCk`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Event
Asynchronous command

Manual operation: See "Frequency" on page 1240

LANE<m>:EQUalization:DFE:TIMReference:CLOCk:LEVel <ClkRefLevSel>

Sets the vertical reference level of the timing reference source.

Available if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CLOCk`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<ClkRefLevSel> UPPer | MIDDle | LOWer
*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Vertical reference level" on page 1240

LANE<m>:EQUalization:DFE:TIMReference:CLOCk:OFEStimation

Executes an estimation of the signal for the clock offset.

Available if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CLOCk`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Event
Asynchronous command

Manual operation: See "Offset, Estimate offset" on page 1241

LANE<m>:EQUalization:DFE:TIMReference:CLOCk:OFFSet <ClockOffset>

Sets a clock offset for the explicit clock signal.

Available if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CLOCk`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<ClockOffset> Range: -1000 to 1000
Increment: 0.01
*RST: 0
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Offset, Estimate offset" on page 1241

LANE<m>:EQUalization:DFE:TIMReference:CLOCk:SOURce <ClockSource>

Selects the source of the clock channel, if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CLOCk`.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:

<ClockSource> C1W1 | C1W2 | C1W3 | C2W1 | C2W2 | C2W3 | C3W1 | C3W2 | C3W3 | C4W1 | C4W2 | C4W3 | M1 | M2 | M3 | M4 | R1 | R2 | R3 | R4 | DIFF1 | DIFF2 | COMMON1 | COMMON2 | M5 | M6 | M7 | M8

Usage: Asynchronous command

Manual operation: See "Source" on page 1240

LANE<m>:EQUalization:DFE:TIMReference:SOURce <RefSrc>

Selects the source of the clock channel, if `LANE<m>:EQUalization:DFE:TIMReference:SOURce` is set to `CLOCk`.

Suffix:

<m> 1..4
Selects the lane that is configured for equalization.

Parameters:

<RefSrc> CLOCk | CDR
*RST: CDR

Usage: Asynchronous command

Manual operation: See "Clock / CDR " on page 1238

26.26.9 Filter training

LANE<m>:EQUalization:TRAining:APPLy....2817
LANE<m>:EQUalization:TRAining:DFE:LIMits:PRESet....2818
LANE<m>:EQUalization:TRAining:DFE:LIMits:TAP<n>:LLIMit....2818
LANE<m>:EQUalization:TRAining:DFE:LIMits:TAP<n>:ULIMit....2818
LANE<m>:EQUalization:TRAining:DFE:TAPS:COUNt....2819
LANE<m>:EQUalization:TRAining:DFE:TAPS:LLIMit<n>....2819
LANE<m>:EQUalization:TRAining:DFE:TAPS:UGLLimit....2819
LANE<m>:EQUalization:TRAining:DFE:TAPS:ULIMit<n>....2820
LANE<m>:EQUalization:TRAining:FFE:TAPS:COUNt....2820
LANE<m>:EQUalization:TRAining:FFE:TAPS:PRECursor....2820
LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMMode....2821
LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMValue....2821
LANE<m>:EQUalization:TRAining:FSELection....2821
LANE<m>:EQUalization:TRAining:MODE....2822
LANE<m>:EQUalization:TRAining:NORGain....2822
LANE<m>:EQUalization:TRAining:REFWaveform....2823
LANE<m>:EQUalization:TRAining:STARt....2823
LANE<m>:EQUalization:TRAining:ERRor?....2823

LANE<m>:EQUalization:TRAining:APPLy

Applies the tap values.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Event
Asynchronous command

Manual operation: See "Apply tap values" on page 1244

LANE<m>:EQUalization:TRAining:DFE:LIMits:PRESet

Sets the DFE taps limits to their default values.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Event
Asynchronous command

Manual operation: See "Preset limits" on page 1246

LANE<m>:EQUalization:TRAining:DFE:LIMits:TAP<n>:LLIMit <LowerLimit>

Sets the lower limit for the respective tap of the DFE filter. The trained/generated filter tap values are within these given limits.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

<n> *
Selects the index of the tap.

Parameters:
<LowerLimit> Range: -1 to 1
Increment: 10
*RST: -0.2

Usage: Asynchronous command

Manual operation: See "Lower limit, Upper limit" on page 1246

LANE<m>:EQUalization:TRAining:DFE:LIMits:TAP<n>:ULIMit <UpperLimit>

Sets the upper limit for the respective tap of the DFE filter. The trained/generated filter tap values are within these given limits.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

<n> *
Selects the index of the tap.

Parameters:

<UpperLimit>
Range: -1 to 1
Increment: 10
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Lower limit, Upper limit" on page 1246

LANE<m>:EQUalization:TRAining:DFE:TAPS:COUNt <NumTapsDFE>

Sets the number of taps used for the training of the DFE.

Suffix:

<m>
1..4
Selects the lane that is configured for equalization.

Parameters:

<NumTapsDFE>
Range: 1 to 5
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps" on page 1246

LANE<m>:EQUalization:TRAining:DFE:TAPS:LLIMit<n> <LowerLimit>

Sets the lower global limit for the DFE filter. The trained/generated filter tap values are within these given limits.

Suffix:

<m>
1..4
Selects the lane that is configured for equalization.

<n>
0..4
Selects the limit index.

Parameters:

<LowerLimit>
Range: -1 to 1
Increment: 10
*RST: -0.2

Usage: Asynchronous command

Manual operation: See "Lower limit, Upper limit" on page 1246

LANE<m>:EQUalization:TRAining:DFE:TAPS:UGLLimit <UseGlobalLimsDFE>

If enabled, you can define the same lower limit (`LANE<m>:EQUalization:TRAining:DFE:TAPS:LLIMit<n>`) and upper limit (`LANE<m>:EQUalization:TRAining:DFE:TAPS:ULIMit<n>`) for all taps. Else, you can define separate values for each tap.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<UseGlobalLimsDFE>OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Global limits" on page 1246

LANE<m>:EQUalization:TRAining:DFE:TAPS:ULIMit<n> <UpperLimit>

Sets the upper global limit for the DFE filter. The trained/generated filter tap values are within these given limits.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

<n> 0..4
Selects the limit index.

Parameters:
<UpperLimit> Range: -1 to 1
Increment: 10
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Lower limit, Upper limit" on page 1246

LANE<m>:EQUalization:TRAining:FFE:TAPS:COUNt <NumTapsFFE>

Sets the number of taps used for the training of the FFE. You can select up to 40 taps.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<NumTapsFFE> Range: 1 to 40
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps" on page 1244

LANE<m>:EQUalization:TRAining:FFE:TAPS:PRECursor
<NumPrecursorSymbolsFFE>

Sets a value for the number of the precursor symbols that are used.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<NumPrecursorSymbolsFFE> Range: 0 to 39
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Precursor symbols" on page 1245

LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMMode <TapsPerSymbolMdFFE>

Selects how the taps per symbol for the FFE filter training are determined, if they track the data rate or manually.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<TapsPerSymbolMdFFE> TDRA | AUTO | MANual
*RST: TDRA

Usage: Asynchronous command

Manual operation: See "Taps per symbol" on page 1245

LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMValue <TapsPerSymbolValFFE>

Available, if `LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMMode` is set to `MANual`.

Sets the number of taps per bit are used for the FFE filter training.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<TapsPerSymbolValFFE> Range: 1 to 4
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Taps per symbol" on page 1245

LANE<m>:EQUalization:TRAining:FSELection <FilterSel>

Selects the filter for the filter training. You can select between an FFE filter and a combination of FFE and DFE filter (`BOTH`).

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<FilterSel> FFE | BOTH
*RST: BOTH

Usage: Asynchronous command

Manual operation: See "Filter selection" on page 1243

LANE<m>:EQUalization:TRAining:MODE <TrainingMode>

Selects the waveform to be trained. You can select a scope waveform (`SCOPe`) or load a reference waveform (`REFerence`).

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<TrainingMode> REFerence | SCOPe
*RST: SCOPe

Usage: Asynchronous command

Manual operation: See "Training mode" on page 1243

LANE<m>:EQUalization:TRAining:NORGain <NormalizeGain>

Sets ths state of the normalize gain for FFE. The gain of a trained DFE is always 1.

If enabled, the gain of the FFE is normalized to 1, such that the signal has a similar amplitude at the input and output of the equalizer.

If disabled, the equalizer is trained such that the output PAM levels are separated by 1 V (e.g., +/- 0.5 V for NRZ).

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Parameters:
<NormalizeGain> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Normalize gain" on page 1243

LANE<m>:EQUalization:TRAining:REFWaveform <RefWfm>

Selects the reference waveform to be used for the filter training, if `LANE<m>:EQUalization:TRAining:MODE` is set to `REFerence`.

Suffix:
<m> 1..4
Selects the lane that is configured.

Parameters:
<RefWfm> NONE | R1 | R2 | R3 | R4

Usage: Asynchronous command

LANE<m>:EQUalization:TRAining:STARt

Starts the filter training.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Usage: Setting only
Asynchronous command

Manual operation: See "Start training" on page 1244

LANE<m>:EQUalization:TRAining:ERRor?

Returns an error value if an error occurred during filter training.

Suffix:
<m> 1..4
Selects the lane that is configured for equalization.

Return values:
<ErrorValue> Range: -100E+24 to 100E+24
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Error" on page 1244

26.27 External frontend control (option R&S RTP-K553)

Suffix <m> indicates the index of the external frontend if multiple frontends are used.

- Setup and connection 2824
- Frontend settings and parameters 2827
- Accessories 2841

26.27.1 Setup and connection

CHANnel<ch>:EFRontend:CONNection:CONFig....2824
CHANnel<ch>:EFRontend:CONNection:CSTate?....2824
CHANnel<ch>:EFRontend:CONNection:ERRor?....2825
CHANnel<ch>:EFRontend:CONNection:STATe....2825
EFRontend:COUNt....2825
EFRontend:CSELect<m>....2825
CHANnel<ch>:EFRontend:IDN?....2826
EFRontend:PRESet....2826
EFRontend:SETup....2826
CHANnel<ch>:EFRontend:TYPE:LIST?....2826

CHANnel<ch>:EFRontend:CONNection:CONFig <Type>,<IPAddress or name>, [<Identifier>]

Defines the connection of the indicated frontend: type of the frontend and the IP address or host name. Optionally, the identifier string can be used.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<Type> String with the type of the connected frontend. For a list of available type strings, use `CHANnel<ch>:EFRontend:TYPE:LIST?`.

<IPAddress or name> String with the IP address or host name of the connected frontend.

<Identifier> IDN string of the connected frontend

Usage: Asynchronous command

Manual operation: See "Type" on page 1255

CHANnel<ch>:EFRontend:CONNection:CSTate?

Queries the current connection state.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<State> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

Manual operation: See "Enable" on page 1254

CHANnel<ch>:EFRontend:CONNection:ERRor?

Queries the errors that occur in the external frontend and in the communication between frontend and oscilloscope.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<State> Error string

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:CONNection:STATe <State>

Switches the connection of the indicated frontend on or off.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 1254

EFRontend:COUNt <Number>

Sets the number of connected external frontends.

See Table 23-1 for the maximum number of external frontend connections.

Parameters:
<Number> Possible values: 1, 2, 3 or 4

Manual operation: See "Number of Frontends" on page 1253

EFRontend:CSELect<m> <Channel>

Selects the input channel to which the indicated external frontend is connected.

Suffix:
<m> 1..4
Position of the frontend, counted from left to right.

Parameters:

<Channel> CHAN1 | CHANnel1 | CHAN2 | CHANnel2 | CHAN3 | CHANnel3 | CHAN4 | CHANnel4

Input channel: CHAN1 = CHANnel1, CHAN2 = CHANnel2, CHAN3 = CHANnel3, CHAN4 = CHANnel4

Manual operation: See "Measurement Setup" on page 1253

CHANnel<ch>:EFRontend:IDN?

Queries the identifier of the indicated frontend.

Suffix:

<ch> 1...4, index of the channel to which the external frontend is connected

Return values:

<IDNString> Identifier string

Usage: Query only

Manual operation: See "Identity" on page 1255

EFRontend:PRESet

Resets the complete configuration of the external frontends to the default values including the network connections. External frontends have their own preset. The general preset disconnects the external frontends but does not affect their settings.

Usage: Event
Asynchronous command

Manual operation: See "Preset settings" on page 1253

EFRontend:SETup <SetupType>

Selects the type of the test setup.

Parameters:

<SetupType> COULo | COURef | ADVanced

COULo: Coupled LO (local oscillators)
COURef: Coupled reference input
ADVanced: user-defined setup

*RST: COULo

Manual operation: See "Measurement Setup" on page 1253

CHANnel<ch>:EFRontend:TYPE:LIST?

Queries the supported external frontend types.

To set the frontend type, use `CHANnel<ch>:EFRontend:CONNection:CONFig`.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<TypeList> String with a list of supported frontend types.

Usage: Query only
Asynchronous command

Manual operation: See "Type" on page 1255

26.27.2 Frontend settings and parameters

The frontend settings and the most important parameters are available in the GUI. All other parameters can be queried remotely if information is needed.

CHANnel<ch>:EFRontend:AMPLmode ... 2828
CHANnel<ch>:EFRontend:ATTenuation:AUTO ... 2828
CHANnel<ch>:EFRontend:ATTenuation[:VALue] ... 2829
CHANnel<ch>:EFRontend:ATTenuation:STEP:LIST? ... 2829
CHANnel<ch>:EFRontend:FREQuency:BAND:COUNt? ... 2829
CHANnel<ch>:EFRontend:FREQuency:BAND<n>:LIST? ... 2830
CHANnel<ch>:EFRontend:FREQuency:BAND<n>:LOWer? ... 2830
CHANnel<ch>:EFRontend:FREQuency:BAND<n>:UPPer? ... 2830
CHANnel<ch>:EFRontend:FREQuency:BCONfig:AUTO ... 2831
CHANnel<ch>:EFRontend:FREQuency:BCONfig:COUNt? ... 2831
CHANnel<ch>:EFRontend:FREQuency:BCONfig:IFRange? ... 2831
CHANnel<ch>:EFRontend:FREQuency:BCONfig:LIST? ... 2831
CHANnel<ch>:EFRontend:FREQuency:BCONfig:RFRange? ... 2832
CHANnel<ch>:EFRontend:FREQuency:BCONfig:SELect ... 2832
CHANnel<ch>:EFRontend:FREQuency:IFBWidth:LIMit? ... 2833
CHANnel<ch>:EFRontend:FREQuency:IFRequency[:VALue]? ... 2833
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:FREQuency? ... 2834
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:INPut:FREQuency? ... 2834
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:MODE ... 2834
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:FREQuency? ... 2835
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:STATe ... 2835
CHANnel<ch>:EFRontend:FREQuency:IFRequency:MAX? ... 2836
CHANnel<ch>:EFRontend:FREQuency:IFRequency:MIN? ... 2836
CHANnel<ch>:EFRontend:FREQuency:IFRequency:SIDeband? ... 2837
CHANnel<ch>:EFRontend:FREQuency:REFerence[:VALue] ... 2837
CHANnel<ch>:EFRontend:FREQuency:REFerence:LIST? ... 2837
CHANnel<ch>:EFRontend:FREQuency:REFerence:LEVel? ... 2838
CHANnel<ch>:EFRontend:FREQuency:RFRequency:MAX? ... 2838
CHANnel<ch>:EFRontend:FREQuency:RFRequency:MIN? ... 2838
CHANnel<ch>:EFRontend:FREQuency:RFRequency:RANGe? ... 2839
CHANnel<ch>:EFRontend:FREQuency:RFRequency[:VALue] ... 2839
CHANnel<ch>:EFRontend:GAIN? ... 2839
CHANnel<ch>:EFRontend:IFRequency:ATTenuation? ... 2840

CHANnel<ch>:EFRontend:RFConnector....2840
CHANnel<ch>:EFRontend:RFINput:LEVel....2840
CHANnel<ch>:EFRontend:UPDate....2841

CHANnel<ch>:EFRontend:AMPLmode <Mode>

Defines the vertical scale of the signal.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<Mode> RF | IF

Scaling mode

RF
The vertical scale is calculated out of the specified RF Level and the external frontend gain so that the signal uses the complete height of the diagram. See also: `CHANnel<ch>:EFRontend:GAIN?` and `CHANnel<ch>:EFRontend:RFINput:LEVel`.

IF
Vertical scale = 50 mV/div

*RST: RF

Manual operation: See "Amplitude mode" on page 1258

CHANnel<ch>:EFRontend:ATTenuation:AUTO <State>

Defines the RF attenuation, which is meant to protect the mixer of the external frontend from high RF input levels.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<State> OFF | ON

ON
The instrument provides a good compromise between intermodulation and noise.

OFF
Set `CHANnel<ch>:EFRontend:ATTenuation[:VALue]` to fine-tune the effect of intermodulation and noise.

*RST: ON

Usage: Asynchronous command

Manual operation: See "RF attenuation auto mode, RF attenuation" on page 1258

CHANnel<ch>:EFRontend:ATTenuation[:VALue] <RFAttenuation>

Sets the RF attenuation if `CHANnel<ch>:EFRontend:ATTenuation:AUTO` is OFF.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<RFAttenuation> Get a list of possible attenuation step values with `CHANnel<ch>:EFRontend:ATTenuation:STEP:LIST?`.

Range: -100 to 100
*RST: -10
Default unit: dB

Usage: Asynchronous command

Manual operation: See "RF attenuation auto mode, RF attenuation" on page 1258

CHANnel<ch>:EFRontend:ATTenuation:STEP:LIST?

Queries the possible attenuation step values.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Example:
```
EFR:ATT:STEP:LIST?
<--
"0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,
18,19,20,21,22,23,24,25,26,27,28,29,30,31"
```

Usage: Query only
Asynchronous command

Manual operation: See "RF attenuation auto mode, RF attenuation" on page 1258

CHANnel<ch>:EFRontend:FREQuency:BAND:COUNt?

Queries the number of frequency bands provided by the selected frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<Number> Integer, number of frequency bands

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:BAND<n>:LIST?

Queries the frequency range that is supported by the selected frontend frequency band.

Suffix:

<ch> 1...4, index of the channel to which the external frontend is connected

<n> 1..*
Band for multi-band frontends
Use `CHANnel<ch>:EFRontend:FREQuency:BAND:COUNt?` to determine the number of available bands.

Return values:

<BandList> String with start and stop frequency of the selected band.

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:BAND<n>:LOWer?

Queries the lower frequency limit of the band addressed by suffix <n>.

Suffix:

<ch> 1...4, index of the channel to which the external frontend is connected

<n> 1..*
Band for multi-band frontends
Use `CHANnel<ch>:EFRontend:FREQuency:BAND:COUNt?` to determine the number of available bands.

Return values:

<Frequency> Start frequency of the specified band

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:BAND<n>:UPPer?

Queries the upper frequency limit of the band addressed by suffix <n>.

Suffix:

<ch> 1...4, index of the channel to which the external frontend is connected

<n> 1..*
Band for multi-band frontends
Use `CHANnel<ch>:EFRontend:FREQuency:BAND:COUNt?` to determine the number of available bands.

Return values:

<Frequency> End frequency of the specified band

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:BCONfig:AUTO <Config>

Sets the RF band selection auto mode. Currently only auto mode and the lower IF band are supported.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<Config> ON

Usage: Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:BCONfig:COUNt?

Queries the number of available band configurations.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<State> Range: 1

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:BCONfig:IFRange? <BandConfigID>

Queries the IF range of the indicated band.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Query parameters:
<BandConfigID> Frequency band configuration = 1.

Return values:
<FrequencyRange> String with the frequency range.

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:BCONfig:LIST?

Returns the available intermediate frequency (output) ranges of the external frontend, depending on the connected external frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<BandConfigList> String
Possible values are: "IF LOW","IF HIGH", "Spur Optimized", "EVM Optimized"
See `CHANnel<ch>:EFRontend:FREQuency:BCONfig:SELect` for details.

Usage: Query only
Asynchronous command

Manual operation: See "RF band setting" on page 1259

CHANnel<ch>:EFRontend:FREQuency:BCONfig:RFRange? <BandConfigID>

Queries the RF range of the indicated band.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Query parameters:
<BandConfigID> Frequency band configuration = 1.

Return values:
<FrequencyRange> String with the frequency range.

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:BCONfig:SELect <Config>

Defines the intermediate frequency (output) range of the external frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<Config> String. The following values are possible:

"IF LOW"
A higher intermediate frequency is used on the external frontend, resulting in a higher input frequency at the R&S RTP.
Only available for frontends R&S FE44S and R&S FE50DTR.

"IF HIGH"
A lower intermediate frequency is used on the external frontend, resulting in a lower input frequency at the R&S RTP.
Only available for frontends R&S FE44S and R&S FE50DTR.

"Spur Optimized"
Avoids unwanted spurious effects on the IF output.
Only available for frontends R&S FE110ST and R&S FE170SR.

"EVM Optimized"
The IF output provides an optimal EVM result.
Only available for frontends R&S FE170SR.

Example:
```
EFR:FREQ:BCON:LIST?
<-- "IF HIGH", "IF LOW"
EFR:FREQ:BCON:SEL "IF HIGH"
```

Usage: Asynchronous command

Manual operation: See "RF band setting" on page 1259

CHANnel<ch>:EFRontend:FREQuency:IFBWidth:LIMit?

Queries the maximum analysis bandwidth of the connected external frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<IFValue>
Range: 0 to 1E+12
Increment: 1E+6
*RST: 1E+9
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "RF Bandwidth" on page 1257

CHANnel<ch>:EFRontend:FREQuency:IFRequency[:VALue]?

Queries the intermediate frequency to which the signal is downconverted by the frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<IFValue>
Range: -1E+12 to 1E+12
Increment: 1E+6
*RST: 1E+9
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "IF Output" on page 1257

CHANnel<ch>:EFRontend:FREQuency:LOSCillator:FREQuency?

Queries the frequency of the local oscillator of the connected frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<Value> Range: 0 to 1E+12
Increment: 1E+6
*RST: 10E+6
Default unit: Hz

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:LOSCillator:INPut:FREQuency?

Queries the required frequency on LO input if the LO input mode is external. See also: `CHANnel<ch>:EFRontend:FREQuency:LOSCillator:MODE`.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<Value> Returns the same value as `CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:FREQuency?`.

Range: 0 to 1E+12
Increment: 1E+6
*RST: 10E+6
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "LO In Frequency (cable)" on page 1258

CHANnel<ch>:EFRontend:FREQuency:LOSCillator:MODE <Value>

For measurement setups "Coupled LO" and "Coupled Ref", the command queries the input mode of the local oscillator. The mode is defined by the selected setup definition.

In "Advanced" measurement setup, set the LO input mode according to the connection of the local oscillator in your setup.

See also: `EFRontend:SETup`.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<Value> INTernal | EXTernal

INTernal
The LO input of the selected frontend is NOT connected to the LO output of another frontend. The reference frequency is received via "Ref In" from the oscilloscope.

EXTernal
The LO input of the selected frontend is connected to the LO output of another frontend.

*RST: INTernal

Usage: Asynchronous command

Manual operation: See "LO input, LO output" on page 1258

CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:FREQuency?

Queries the current LO output frequency.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<Value> Returns the same value as `CHANnel<ch>:EFRontend:FREQuency:LOSCillator:INPut:FREQuency?`.

Range: 0 to 1E+12
Increment: 1E+6
*RST: 10E+6
Default unit: Hz

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:STATe <State>

For measurement setups "Coupled LO" and "Coupled Ref", the command queries the connection state of the LO output. The state is defined by the selected setup definition.

In "Advanced" measurement setup, set the LO output state according to the connection of the local oscillator in your setup.

See also: `EFRontend:SETup`.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<State> OFF | ON

ON
The LO output of the selected frontend is connected to the LO input of another frontend.

OFF
The LO output is not connected.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "LO input, LO output" on page 1258

CHANnel<ch>:EFRontend:FREQuency:IFRequency:MAX?

Queries the maximum IF frequency.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<IFMax> Range: -1E+12 to 1E+12
Increment: 1E+6
*RST: 1E+9
Default unit: Hz

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:IFRequency:MIN?

Queries the minimum IF frequency.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<IFMin> Range: -1E+12 to 1E+12
Increment: 1E+6
*RST: 1E+9
Default unit: Hz

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:IFRequency:SIDeband?

Queries the frequency band configuration, which is always IFLow.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<Sideband> IFLow

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:REFerence[:VALue] <Frequency>

Sets the reference frequency that is used for frequency conversion on the external frontend. The external frontend needs an external reference frequency to generate its own LO frequency if no external LO is available.

You can query supported values with `CHANnel<ch>:EFRontend:FREQuency:REFerence:LIST?`.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<Frequency> Range: 10E+6 (coupled LO and coupled reference setup), 10E+6 | 640E+6 | 1E+9 (advanced setup)
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Reference frequency" on page 1257

CHANnel<ch>:EFRontend:FREQuency:REFerence:LIST?

Queries the possible reference frequencies, which are supported by the connected external frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Example:

```
EFR:SET COULo
EFR:FREQ:REF:LIST?
<-- 10000000

EFR:SET COURef
EFR:FREQ:REF:LIST?
<-- 10000000

EFR:SET ADVanced
EFR:FREQ:REF:LIST?
<-- 10000000,640000000,10000000000
```

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:REFerence:LEVel?

Queries the used reference level.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<Frequency> Range: -100 to 100
Increment: 1
*RST: 0
Default unit: dB

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:RFRequency:MAX?

Queries the maximum RF frequency.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<RFMax> Range: 0 to 1E+12
Increment: 1E+6
*RST: 1E+9
Default unit: Hz

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:RFRequency:MIN?

Queries the minimum RF frequency.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:
<RFMin> Range: 0 to 1E+12
Increment: 1E+6
*RST: 1E+9
Default unit: Hz

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:RFRequency:RANGe?

Queries the RF frequency range.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:FREQuency:RFRequency[:VALue] <RFValue>

Sets the RF frequency of the signal that the external frontend receives from the DUT. The value is the center frequency that determines the LO frequency generation.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<RFValue> Range: 24E+9 to 44E+9
Increment: 1E+6
*RST: 24E+9
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "RF Input" on page 1257

CHANnel<ch>:EFRontend:GAIN?

Returns the gain if the connected external frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Return values:

<Gain> Range: -100 to 100
Increment: 1
*RST: 0
Default unit: dB

Usage: Query only

Manual operation: See "External Frontend gain" on page 1258

CHANnel<ch>:EFRontend:IFRequency:ATTenuation?

Queries the IF attenuation.

Suffix:

<ch> 1...4, index of the channel to which the external frontend is connected

Return values:

<IFValue> Range: -100 to 100
Increment: 1
*RST: 0
Default unit: dB

Usage: Query only
Asynchronous command

CHANnel<ch>:EFRontend:RFConnector <RFConnector>

Sets the RF connector.

Suffix:

<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:

<RFConnector> RF1

CHANnel<ch>:EFRontend:RFINput:LEVel <RFLevel>

Sets the reference level of the signal at the RF input of the external frontend. If this level is entered correctly, the external frontend is configured such that the level at the input of the R&S RTP is optimal.

Suffix:

<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:

<RFLevel> Range: -100 to 100
Increment: 1
*RST: -10
Default unit: dBm

Usage: Asynchronous command

Manual operation: See "RF Level" on page 1257

CHANnel<ch>:EFRontend:UPDate

Updates the firmware on the connected external frontend. This process can take some time.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Usage: Event
Asynchronous command

26.27.3 Accessories

Additional components (EXTComponent) are available with R&S FE170SR.

CHANnel<ch>:EFRontend:ALIGn:FILE 2841
CHANnel<ch>:EFRontend:ALIGn:STATe 2841
CHANnel<ch>:EFRontend:EXTComponent<n>:FMAXimum? 2842
CHANnel<ch>:EFRontend:EXTComponent<n>:FMINimum? 2842
CHANnel<ch>:EFRontend:EXTComponent<n>:GAIN? 2843
CHANnel<ch>:EFRontend:EXTComponent<n>:PARTno? 2843
CHANnel<ch>:EFRontend:EXTComponent<n>:TYPE? 2843

CHANnel<ch>:EFRontend:ALIGn:FILE <FilePath>

Sets the path to the S-parameter file that contains the correction values for the cable that connects the frontend to the oscilloscope.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<FilePath> String with path and name of the s2p file.

Usage: Asynchronous command

Manual operation: See "S-Parameters" on page 1260

CHANnel<ch>:EFRontend:ALIGn:STATe <CableAlignment>

Activates the correction of the IF signal due to IF cable loss from the frontend to the oscilloscope. Activating loads the S-parameter file that is defined with `CHANnel<ch>:EFRontend:ALIGn:FILE` on page 2841.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

Parameters:
<CableAlignment> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Cable Deembedding: Enable" on page 1260

CHANnel<ch>:EFRontend:EXTComponent<n>:FMAXimum?

Queries the upper frequency limit of the indicated external device if the device is a filter.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

<n> 1..2
Index of the additional component

Return values:
<Type> Range: 0 to 1E+12
Increment: 1E+6
*RST: 1E+9
Default unit: Hz

Usage: Query only

Manual operation: See "Additional components" on page 1260

CHANnel<ch>:EFRontend:EXTComponent<n>:FMINimum?

Queries the lower frequency limit of the indicated external device if the device is a filter.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

<n> 1..2
Index of the additional component

Return values:
<Type> Range: 0 to 1E+12
Increment: 1E+6
*RST: 1E+9
Default unit: Hz

Usage: Query only

Manual operation: See "Additional components" on page 1260

CHANnel<ch>:EFRontend:EXTComponent<n>:GAIN?

Queries the gain of the indicated external device if the device is an amplifier.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

<n> 1..2
Index of the additional component

Return values:
<Type> Range: 0 to 100
Increment: 1
*RST: 20
Default unit: dB

Usage: Query only

CHANnel<ch>:EFRontend:EXTComponent<n>:PARTno?

Queries the part number of the indicated external device.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

<n> 1..2
Index of the additional component

Return values:
<Type> String with the part number

Usage: Query only

Manual operation: See "Additional components" on page 1260

CHANnel<ch>:EFRontend:EXTComponent<n>:TYPE?

Sets the type of an external device that is inserted in the signal path between the DUT and the external frontend.

Suffix:
<ch> 1...4, index of the channel to which the external frontend is connected

<n> 1..2
Index of the additional component

Return values:
<Type> FILTer

Usage: Query only

Manual operation: See "Additional components" on page 1260

26.28 Maintenance

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"
- Section 26.3, "Programming examples", on page 1327

DIAGnostic:SERVice:WFAModel? 2844
DIAGnostic:SERVice:WFASeries? 2844
DIAGnostic:SERVice:WFAType? 2844
CALibration:DATE? 2845
CALibration:TIME? 2845
CALibration:RESult? 2845
DIAGnostic:SERVice:STST:EXECute 2845
DIAGnostic:SERVice:STST:STATe? 2846
DIAGnostic:SERVice:PWD 2846

DIAGnostic:SERVice:WFAModel?

Returns the model name of the oscilloscope.

Return values:

<WFAModel> Product type

Usage: Query only
Asynchronous command

DIAGnostic:SERVice:WFASeries?

Returns the model series of the oscilloscope.

Return values:

<WFASeries> RTO | RTE | RTP
*RST: RTO

Usage: Query only
Asynchronous command

DIAGnostic:SERVice:WFAType?

Returns the instrument family of the oscilloscope.

Return values:
<WFAType> RTO2000 | RTO6 | RTP | RTPB
RTP: part numbers 1320.5007
RTPB: part numbers 1803.7000
*RST: RTO2000

Usage: Query only
Asynchronous command

CALibration:DATE?

Returns the date of the last selfalignment.

Return values:
<Date>

Usage: Query only
Asynchronous command

Manual operation: See "Date / Time / Overall alignment state" on page 105

CALibration:TIME?

Returns the time of the last selfalignment.

Return values:
<Time>

Usage: Query only
Asynchronous command

Manual operation: See "Date / Time / Overall alignment state" on page 105

CALibration:RESult?

Returns the result of the last selfalignment and the current alignment status. In remote mode, `*CAL?` provides more detailed information.

Return values:
<ResultState> PASSed | FAILed | NOALigndata
*RST: FAILed

Usage: Query only
Asynchronous command

Manual operation: See "Date / Time / Overall alignment state" on page 105

DIAGnostic:SERVice:STST:EXECute

Starts the selftest.

Usage: Event
Asynchronous command

DIAGnostic:SERVice:STST:STATe?

Returns the summary result of the selftest.

Return values:
<State> PSSD | FAILed | UNDefined
*RST: UNDefined

Usage: Query only
Asynchronous command

Manual operation: See "State" on page 107

DIAGnostic:SERVice:PWD <Password>

Sets the password to enter the service mode.

Setting parameters:
<Password> Password string

Usage: Setting only
Asynchronous command

26.29 Status reporting

This chapter describes the remote commands that are used to read the status registers.

For information on structure, hierarchy, and contents of the status registers, see Section 25.5.4, "Remote control - status reporting system", on page 1307.

- STATus:OPERation register....2846
- STATus:QUEStionable registers....2847

26.29.1 STATus:OPERation register

`STATus:OPERation` commands provide information on the activity of the instrument.

See also: "STATus:OPERation register" on page 1310

STATus:OPERation:CONDition?....2846
STATus:OPERation[:EVENt]?....2846
STATus:OPERation:ENABle....2847

STATus:OPERation:CONDition?
STATus:OPERation[:EVENt]?

The CONDition command returns information on actions the instrument is currently executing. The contents of the register is retained.

The EVENt command returns information on actions the instrument has executed since the last reading. Reading the EVENt register deletes its contents.

Bits:

- 0 = ALIGnment
- 2 = AUToset
- 3= WTRIgger (wait for trigger)
- 4= MEASuring

Usage: Query only

STATus:OPERation:ENABle <Enable>

Controls the ENABle part of the STATus:OPERation register. The ENABle defines which events in the EVENt part of the status register are forwarded to the OPERation summary bit (bit 7) of the status byte. The status byte can be used to create a service request.

Parameters:

<Enable> Range: 1 to 65535
Increment: 1

Example: `STATus:OPERation:ENABle 5`
The ALIGnment event (bit 0) and AUToset event (bit 2) are forwarded to the OPERation summary bit of the status byte.

26.29.2 STATus:QUEStionable registers

The commands of the `STATus:QUEStionable` subsystem control the status reporting structures of the STATus:QUEStionable registers.

See also: "STATus:QUEStionable register" on page 1310

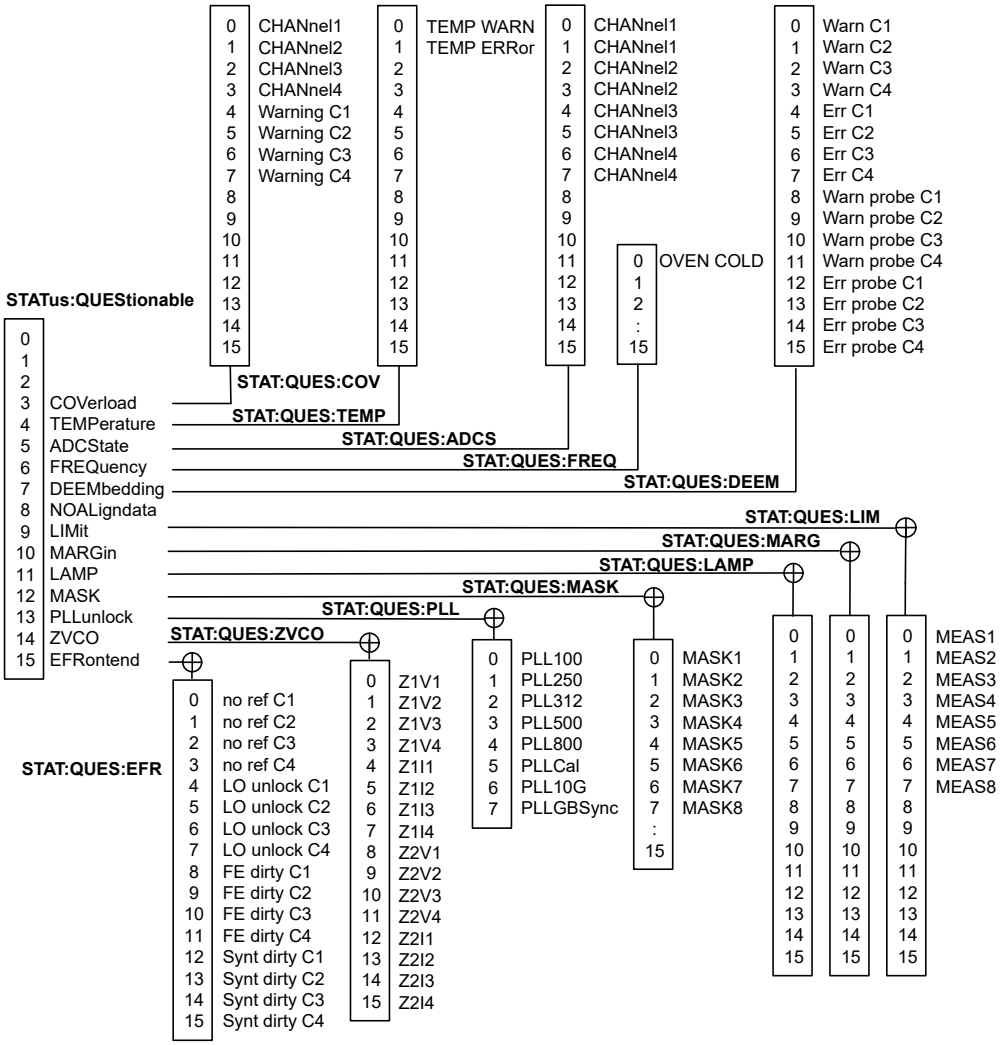


Figure 26-1: Overview of the STATus:QUEStionable register

The following commands are available:

STATus:QUEStionable:COVerload:CONDition? 2849
STATus:QUEStionable:TEMPerature:CONDition? 2849
STATus:QUEStionable:ADCState:CONDition? 2850
STATus:QUEStionable:LIMit:CONDition? 2850
STATus:QUEStionable:MARGin:CONDition? 2850
STATus:QUEStionable:FREQuency:CONDition? 2850
STATus:QUEStionable:PLL:CONDition? 2850
STATus:QUEStionable:DEEMbedding:CONDition? 2850
STATus:QUEStionable:LAMPlitude:CONDition? 2850
STATus:QUEStionable:ZVCoverload:CONDition? 2850
STATus:QUEStionable:EFRontend:CONDition? 2850
STATus:QUEStionable:MASK:CONDition? 2850
STATus:QUEStionable:COVerload:ENABle 2850
STATus:QUEStionable:TEMPerature:ENABle 2850
STATus:QUEStionable:ADCState:ENABle 2850

STATus:QUEStionable:LIMit:ENABle....2850
STATus:QUEStionable:MARGin:ENABle....2850
STATus:QUEStionable:FREQuency:ENABle....2850
STATus:QUEStionable:PLL:ENABle....2850
STATus:QUEStionable:DEEMbedding:ENABle....2850
STATus:QUEStionable:LAMPlitude:ENABle....2850
STATus:QUEStionable:ZVCoverload:ENABle....2850
STATus:QUEStionable:EFRontend:ENABle....2850
STATus:QUEStionable:MASK:ENABle....2850
STATus:QUEStionable:COVerload[:EVENt]?....2850
STATus:QUEStionable:TEMPerature[:EVENt]?....2850
STATus:QUEStionable:ADCState[:EVENt]?....2850
STATus:QUEStionable:LIMit[:EVENt]?....2850
STATus:QUEStionable:MARGin[:EVENt]?....2850
STATus:QUEStionable:FREQuency:EVENt?....2850
STATus:QUEStionable:PLL[:EVENt]?....2851
STATus:QUEStionable:DEEMbedding[:EVENt]?....2851
STATus:QUEStionable:LAMPlitude[:EVENt]?....2851
STATus:QUEStionable:ZVCoverload[:EVENt]?....2851
STATus:QUEStionable:EFRontend[:EVENt]?....2851
STATus:QUEStionable:MASK[:EVENt]?....2851
STATus:QUEStionable:COVerload:NTRansition....2851
STATus:QUEStionable:TEMPerature:NTRansition....2851
STATus:QUEStionable:ADCState:NTRansition....2851
STATus:QUEStionable:LIMit:NTRansition....2851
STATus:QUEStionable:MARGin:NTRansition....2851
STATus:QUEStionable:FREQuency:NTRansition....2851
STATus:QUEStionable:PLL:NTRansition....2851
STATus:QUEStionable:DEEMbedding:NTRansition....2851
STATus:QUEStionable:LAMPlitude:NTRansition....2851
STATus:QUEStionable:ZVCoverload:NTRansition....2851
STATus:QUEStionable:EFRontend:NTRansition....2851
STATus:QUEStionable:MASK:NTRansition....2851
STATus:QUEStionable:COVerload:PTRansition....2851
STATus:QUEStionable:TEMPerature:PTRansition....2851
STATus:QUEStionable:ADCState:PTRansition....2851
STATus:QUEStionable:LIMit:PTRansition....2851
STATus:QUEStionable:MARGin:PTRansition....2851
STATus:QUEStionable:FREQuency:PTRansition....2851
STATus:QUEStionable:PLL:PTRansition....2851
STATus:QUEStionable:DEEMbedding:PTRansition....2851
STATus:QUEStionable:LAMPlitude:PTRansition....2851
STATus:QUEStionable:ZVCoverload:PTRansition....2851
STATus:QUEStionable:EFRontend:PTRansition....2852
STATus:QUEStionable:MASK:PTRansition....2852
MTESt:SBITnumber?....2852

STATus:QUEStionable:COVerload:CONDition?
STATus:QUEStionable:TEMPerature:CONDition?

STATus:QUEStionable:ADCState:CONDition?
STATus:QUEStionable:LIMit:CONDition?
STATus:QUEStionable:MARGin:CONDition?
STATus:QUEStionable:FREQuency:CONDition?
STATus:QUEStionable:PLL:CONDition?
STATus:QUEStionable:DEEMbedding:CONDition?
STATus:QUEStionable:LAMPlitude:CONDition?
STATus:QUEStionable:ZVCoverload:CONDition?
STATus:QUEStionable:EFRontend:CONDition?
STATus:QUEStionable:MASK:CONDition?

Returns the contents of the CONDition part of the status register to check for questionable instrument or measurement states. Reading the CONDition registers does not delete the contents.

Return values:
<Value>

Usage: Query only

STATus:QUEStionable:COVerload:ENABle <Value>
STATus:QUEStionable:TEMPerature:ENABle <Value>
STATus:QUEStionable:ADCState:ENABle <Value>
STATus:QUEStionable:LIMit:ENABle <Value>
STATus:QUEStionable:MARGin:ENABle <Value>
STATus:QUEStionable:FREQuency:ENABle <Value>
STATus:QUEStionable:PLL:ENABle <Value>
STATus:QUEStionable:DEEMbedding:ENABle <Value>
STATus:QUEStionable:LAMPlitude:ENABle <Value>
STATus:QUEStionable:ZVCoverload:ENABle <Value>
STATus:QUEStionable:EFRontend:ENABle <Value>
STATus:QUEStionable:MASK:ENABle <Value>

Sets the ENABle part that allows true conditions in the EVENt part to be reported in the summary bit. If a bit is set to 1 in the enable part and its associated event bit transitions to true, a positive transition occurs in the summary bit and is reported to the next higher level.

Parameters:
<Value> Bit mask in decimal representation

Example: `STATus:QUEStionable:MASK:ENABle 24`
Set bits no. 3 and 4 of the STATus:QUEStionable:MASK:ENABle register part: $24 = 8 + 16 = 2^3 + 2^4$

STATus:QUEStionable:COVerload[:EVENt]?
STATus:QUEStionable:TEMPerature[:EVENt]?
STATus:QUEStionable:ADCState[:EVENt]?
STATus:QUEStionable:LIMit[:EVENt]?
STATus:QUEStionable:MARGin[:EVENt]?
STATus:QUEStionable:FREQuency:EVENt?

STATus:QUEStionable:PLL[:EVENt]?
STATus:QUEStionable:DEEMbedding[:EVENt]?
STATus:QUEStionable:LAMPlitude[:EVENt]?
STATus:QUEStionable:ZVCoverload[:EVENt]?
STATus:QUEStionable:EFRontend[:EVENt]?
STATus:QUEStionable:MASK[:EVENt]?

Returns the contents of the EVENt part of the status register to check whether an event has occurred since the last reading. Reading an EVENt register deletes its contents.

Return values:
<Value>

Usage: Query only

STATus:QUEStionable:COVerload:NTRansition <Value>
STATus:QUEStionable:TEMPerature:NTRansition <Value>
STATus:QUEStionable:ADCState:NTRansition <Value>
STATus:QUEStionable:LIMit:NTRansition <Value>
STATus:QUEStionable:MARGin:NTRansition <Value>
STATus:QUEStionable:FREQuency:NTRansition <Value>
STATus:QUEStionable:PLL:NTRansition <Value>
STATus:QUEStionable:DEEMbedding:NTRansition <Value>
STATus:QUEStionable:LAMPlitude:NTRansition <Value>
STATus:QUEStionable:ZVCoverload:NTRansition <Value>
STATus:QUEStionable:EFRontend:NTRansition <Value>
STATus:QUEStionable:MASK:NTRansition <Value>

Sets the negative transition filter. If a bit is set, a 1 to 0 transition in the corresponding bit of the condition register causes a 1 to be written in the corresponding bit of the event register.

Parameters:
<Value> Bit mask in decimal representation

Example: `STATus:QUEStionable:MASK:NTRansition 24`
Set bits no. 3 and 4 of the STATus:QUEStionable:MASK:NTRansition register part: $24 = 8 + 16 = 2^3 + 2^4$

STATus:QUEStionable:COVerload:PTRansition <Value>
STATus:QUEStionable:TEMPerature:PTRansition <Value>
STATus:QUEStionable:ADCState:PTRansition <Value>
STATus:QUEStionable:LIMit:PTRansition <Value>
STATus:QUEStionable:MARGin:PTRansition <Value>
STATus:QUEStionable:FREQuency:PTRansition <Value>
STATus:QUEStionable:PLL:PTRansition <Value>
STATus:QUEStionable:DEEMbedding:PTRansition <Value>
STATus:QUEStionable:LAMPlitude:PTRansition <Value>
STATus:QUEStionable:ZVCoverload:PTRansition <Value>

STATus:QUEStionable:EFRontend:PTRansition <Value>
STATus:QUEStionable:MASK:PTRansition <Value>

Sets the positive transition filter. If a bit is set, a 0 to 1 transition in the corresponding bit of the condition register causes a 1 to be written in the corresponding bit of the event register.

Parameters:
<Value> Bit mask in decimal representation

Example: `STATus:QUEStionable:MASK:PTRansition 24`
Set bits no. 3 and 4 of the STATus:QUEStionable:MASK:PTRansition register part: *24 = 8 + 16 = 2^3 + 2^4*

MTESt:SBITnumber? <MaskTestName>

Returns the number of the status bit that belongs to the indicated mask test in the `STATus:QUEStionable:MASK` register. The status bits are assigned in the order of mask creation.

Query parameters:
<MaskTestName> String with the name of the mask test

Return values:
<StatusBtNo> Bit number, see "STATus:QUEStionable:MASK register" on page 1315.
Range: 0 to 7
Increment: 1
*RST: 0

Example:
```
:MTESt:SBITnumber? 'MT1'
<--0
:MTESt:SBITnumber? 'MT2'
<--1
:MTESt:SBITnumber? 'MT3'
<--2
```

Usage: Query only
Asynchronous command

26.30 Remote trace

The commands in this section configure tracing of the remote control interface and of events. They also configure the display of the SCPI remote trace.

Before you start tracing, configure all settings as desired. Modifying settings while tracing is active may result in loss of already traced data. Useful exception: Selecting a new target file while tracing is allowed. For start mode `EXPLicit` a restart of the instrument resets the settings to the documented default values.

If you want to start tracing already during startup of the instrument, configure all settings (including start mode `AUTO`). Then restart your instrument. Tracing will be started automatically during the restart, using the already configured settings.

If you use an XML file as trace file, ensure that tracing is stopped properly. If tracing is aborted instead of stopped, for example by shutting down the instrument for stop mode `EXPLicit`, the XML file will be invalid, because some tags are not closed.

When the maximum file size is reached (except for stop mode `BUFFerfull`) or if tracing is started with an already existing trace file, a backup of the trace file is created and the file itself is reset and overwritten. When the file is full for the second time or when tracing is started the next time, the first backup file is lost because it is overwritten by the next backup. In order to prevent loss of data, set a sufficient file size, select an appropriate stop mode and archive/copy completed trace files if you want to keep them.

26.30.1 Standard commands

TRACe:REMote:MODE:FILE:NAME 2853
TRACe:REMote:MODE:FILE:FORMat 2853
TRACe:REMote:MODE:FILE:SIZE 2853
TRACe:REMote:MODE:FILE:STARtmode 2854
TRACe:REMote:MODE:FILE:STOPmode 2854
TRACe:REMote:MODE:FILE:ENABle 2854
TRACe:REMote:MODE:FILE:FILTer 2854

TRACe:REMote:MODE:FILE:NAME <FilePath>

Sets the directory and file name where the remote trace file is stored.

Parameters:
<FilePath> String parameter

TRACe:REMote:MODE:FILE:FORMat <Format>

Sets the file format of the remote trace file.

Parameters:
<Format> ASCii | XML

TRACe:REMote:MODE:FILE:SIZE <FileSize>

Sets the maximum size of the remote trace file.

Parameters:
<FileSize> Integer value

TRACe:REMote:MODE:FILE:STARtmode <StartMode>

Defines how the remote trace is started.

Parameters:

<StartMode> AUTO | EXPLicit

AUTO
Starts the remote trace immediately.

EXPLicit
Starts remote trace with `TRACe:REMote:MODE:FILE:ENABle ON`

TRACe:REMote:MODE:FILE:STOPmode <StopMode>

Defines when the remote trace is stopped.

Parameters:

<StopMode> AUTO | EXPLicit | ERRor | BUFFerfull

AUTO
Ends the remote trace on device shutdown.

EXPLicit
Ends remote trace with `TRACe:REMote:MODE:FILE:ENABle OFF`

ERRor
Ends remote trace when a SCPI error occurs.

BUFFerfull
Ends remote trace when the maximum file size is reached.

TRACe:REMote:MODE:FILE:ENABle <Enable>

Enables and disables the remote trace to file.

Parameters:

<Enable> ON | OFF

TRACe:REMote:MODE:FILE:FILTer <Input>, <Output>, <Error>, <Trigger>, <DeviceClear>, <StatusRegister>, <Connection>, <RemoteLocalEvents>, <Locking>

Defines the content of the remote trace file.

Parameters:

<Input> ON | OFF

Input data

<Output> ON | OFF

Output data

<Error> ON | OFF
New SCPI error queue entries

<Trigger> ON | OFF
Trigger events

<DeviceClear> ON | OFF
Device clear events

<StatusRegister> ON | OFF
Status register conditions

<Connection> ON | OFF
Open/close connection events

<RemoteLocalEvents> ON | OFF
Local/remote transition events

<Locking> ON | OFF
Remote locking events

26.30.2 Diagnostic remote trace commands

TRACe:REMote:MODE:FILE:DEXecution:DURation 2855
TRACe:REMote:MODE:FILE:RPC 2855
TRACe:REMote:MODE:FILE:PARSer 2855
TRACe:REMote:MODE:FILE:FUNCtions 2856

TRACe:REMote:MODE:FILE:DEXecution:DURation <Enable>

Traces the device execution time of a command

Parameters:
<Enable> ON | OFF

TRACe:REMote:MODE:FILE:RPC <Enable>

Enables and disables output of rpc calls to remote trace.

Parameters:
<Enable> ON | OFF

TRACe:REMote:MODE:FILE:PARSer <Enable>

Enables and disables output of parser transitions to remote trace.

Parameters:
<Enable> ON | OFF

TRACe:REMote:MODE:FILE:FUNCtions <Enable>

Enables and disables output of function names to remote trace.

Parameters:
<Enable> ON | OFF

26.31 Deprecated commands

The following commands are provided for compatibility to previous oscilloscope versions only. For new remote control programs, use the specified alternative commands.

26.31.1 Base instrument

Legacy command	Replaced by	Comment
BUSFormat	For parallel buses: BUS<b>:PARallel:DATA:FORMat on page 2629 For serial buses: BUS<b>:FORMat on page 1835	Replaced since FW 4.70
EXPort:RESult:SELect EXPort:RESult:NUMeric EXPort:RESult:NAME EXPort:RESult:SAVE		Functionality is not supported. Removed since FW 5.20
REFCurve<m>:RESCale:HORizontal:OFFSet		Functionality is not supported.
SEARch:TRIGger:DATatoclock[:STATe] SEARch:TRIGger:DATatoclock:ACOPy SEARch:TRIGger:DATatoclock:CEDGe SEARch:TRIGger:DATatoclock:CLEVel SEARch:TRIGger:DATatoclock:CSOurce SEARch:TRIGger:DATatoclock:HTIMe SEARch:TRIGger:DATatoclock:STIMe	SEARch:TRIGger:SETHold[:STATe] on page 1736 SEARch:TRIGger:SETHold:ACOPy on page 1737 SEARch:TRIGger:SETHold:CEDGe on page 1752 SEARch:TRIGger:SETHold:CLEVel on page 1752 SEARch:TRIGger:SETHold:CSOurce on page 1752 SEARch:TRIGger:SETHold:HTIMe on page 1753 SEARch:TRIGger:SETHold:STIMe on page 1753	Replaced since FW 5.00

Legacy command	Replaced by	Comment
TRIGger<m>:DATatoclock:CSOurce[:VALue] TRIGger<m>:DATatoclock:CSOurce:EDGE TRIGger<m>:DATatoclock:CSOurce:LEVel TRIGger<m>:DATatoclock:HTIMe TRIGger<m>:DATatoclock:STIMe	TRIGger<t>:SETHold:CSOurce[:VALue] on page 1486 TRIGger<t>:SETHold:CSOurce:EDGE on page 1486 TRIGger<t>:SETHold:CSOurce:LEVel on page 1486 TRIGger<t>:SETHold:HTIMe on page 1487 TRIGger<t>:SETHold:STIMe on page 1487	Replaced since FW 5.00
TRIGger<m>:OUT:STATe TRIGger<m>:OUT:ACTion	TRIGger<t>:EVENt:TRIGgerout on page 1537	Replaced since FW 5.00 Replaced since FW 5.35
TRIGger<m>:PARallel:DATato-clock:CSOurce[:VALue] TRIGger<m>:PARallel:DATato-clock:CSOurce:EDGE TRIGger<m>:PARallel:DATatoclock:STIMe TRIGger<m>:PARallel:DATatoclock:HTIMe	TRIGger<t>:PARallel:SETHold:CSOurce[:VALue] on page 2635 TRIGger<t>:PARallel:SETHold:CSOurce:EDGE on page 2639 TRIGger<t>:PARallel:SETHold:HTIMe on page 2639 TRIGger<t>:PARallel:SETHold:STIMe on page 2640	Replaced since FW 5.00
TRIGger<m>:SEQuence:MODE	TRIGger<t>:SEQuence:TYPE on page 1531	Replaced since FW 5.10

26.31.2 Options

26.31.2.1 Serial protocols

Legacy command	Replaced by	Comment
8B/10B		
TRIGger<t>:EBTB:SSTYpe		Functionality is no longer supported since FW 5.60.
CAN-XL		
BUS<b>:CANXl:FRAMe<fr>:FERCause? SEARch:RESult:CANXl:FRAMe<fr>:FER-Cause?		Functionality is no longer supported since FW 5.60.
BUS<b>:CANXl:FRAMe<fr>:STUFf? SEARch:RESult:CANXl:FRAMe<fr>:STUFf?		Functionality is no longer supported since FW 5.60.
RFFE		

Legacy command	Replaced by	Comment
BUS<m>:RFFE:DATA:THReshold:HYSTeresis BUS<m>:RFFE:CLOCk:THReshold:HYSTeresis	none	Functionality is no longer supported since FW 5.30.
BUS<b>:RFFE:COUPling		Functionality is no longer supported since FW 5.60.
BUS<b>:RFFE:COUPling		Functionality is no longer supported since FW 5.60.
TRIGger<t>:RFFE:ERRor:GAP SEARch:TRIGger:RFFE:ERRor:GAP TRIGger<t>:RFFE:ERRor:VERsion SEARch:TRIGger:RFFE:ERRor:VERsion		Functionality is no longer supported since FW 5.60.
I2C		
TRIGger<m>:I2C:MODE	`TRIGger<t>:I2C:TYPE` on page 1843	Replaced since FW 5.20
SPI		
TRIGger<m>:SPI:MODE SEARch:TRIGger:SPI:MODE	`TRIGger<t>:SPI:TYPE` on page 1908 `SEARch:TRIGger:SPI:TYPE` on page 1917	Replaced since FW 5.20
Ethernet		
SEARch:TRIGger:ETHernet:ERRor:SELect SEARch:TRIGger:ETHernet:FRAMe:SELect	`SEARch:TRIGger:ETHernet:TYPE` on page 2110	Replaced since FW 5.20
Ethernet 100BASE-T1		
BUS<b>:HBTO:THReshold	`BUS<b>:THReshold` on page 1835	Replaced since FW 5.55
DDR		
EYE<m>:TIMReference:CLOCk:SAMTime		Functionality is no longer supported since FW 5.40.

26.31.2.2 Advanced jitter analysis

Legacy command	Replaced by	Comment
ADVJitter<m>:RESult:TYPBathtub ADVJitter<m>:RESult:TYPSynteye		Functionality is not supported.
ADVJitter<m>:SIGNal:UIOFfset		Functionality is not supported.
ADVJitter<m>:SIGNal:SERStandard	`SIGNalconfig:SETup:SETTing<m>:SERStandard` on page 1810	Replaced since FW 5.40
ADVJitter<m>:SIGNal:SAMTime		Functionality is not supported since FW 5.40.

Legacy command	Replaced by	Comment
ADVJitter<m>:RESult:COMPonents<n>:SCALe	ADVJitter<m>:RESult:COMPonents<n>:HSCale on page 2719 ADVJitter<m>:RESult:COMPonents<n>:NSCale on page 2720 ADVJitter<m>:RESult:COMPonents<n>:NSPScale on page 2721 ADVJitter<m>:RESult:COMPonents<n>:SDSCale on page 2721 ADVJitter<m>:RESult:COMPonents<n>:SRSCale on page 2722 ADVJitter<m>:RESult:COMPonents<n>:SSCale on page 2723	Replaced since FW 5.40
ADVJitter<m>:RESult:COMPonents<n>:OFFSet	ADVJitter<m>:RESult:COMPonents<n>:HOFFset on page 2719 ADVJitter<m>:RESult:COMPonents<n>:NOFFset on page 2720 ADVJitter<m>:RESult:COMPonents<n>:NSPoffset on page 2720 ADVJitter<m>:RESult:COMPonents<n>:SDOFfset on page 2721 ADVJitter<m>:RESult:COMPonents<n>:SOFFset on page 2722 ADVJitter<m>:RESult:COMPonents<n>:SROFfset on page 2722	Replaced since FW 5.40.
ADVJitter<m>:RESult:COMPonents<n>:STATistics:PEAKpeak ADVJitter<m>:RESult:COMPonents<n>:STATistics:STDDev	ADVJitter<m>:RESult:COMPonents<n>:PEAKpeak? on page 2707 ADVJitter<m>:RESult:COMPonents<n>:STDDev? on page 2707	Replaced since FW 5.40
ADVJitter<m>:RESult:PAMNoise:NUMerical<n>:MEASurement<o>:MAXPeakpeak? ADVJitter<m>:RESult:PAMNoise:NUMerical<n>:MEASurement<o>:MAXStddev? ADVJitter<m>:RESult:PAMNoise:NUMerical<n>:MEASurement<o>:MINPeakpeak? ADVJitter<m>:RESult:PAMNoise:NUMerical<n>:MEASurement<o>:MINStddev? ADVJitter<m>:RESult:PAMNoise:NUMerical<n>:MEASurement<o>:PEAKpeak? ADVJitter<m>:RESult:PAMNoise:NUMerical<n>:MEASurement<o>:STDDev? ADVJitter<m>:RESult:PAMNoise:NUMerical<n>:MEASurement<o>:WFMCount?		Functionality is not supported.
ADVJitter<m>:SIGNal:CLEStimation	ADVJitter<m>:SIGNal:OFEStimation on page 2702	Replaced since FW 5.40
ADVJitter<m>:SIGNal:CFEStimation	ADVJitter<m>:SIGNal:FREStimation on page 2702	Replaced since FW 5.40

Legacy command	Replaced by	Comment
ADVJitter<m>:SIGNal:BITRate ADVJitter<m>:SIGNal:SYMBolrate		Functionality is not supported since FW 5.55
CDR:SOFTware<m>:SERStandard	SIGNalconfig:SETup:SETTing<m>:SERStandard on page 1810	Replaced since FW 5.40
TRIGger<m>:CDR:EYE:SERStandard	SIGNalconfig:SETup:SETTing<m>:SERStandard on page 1810	Replaced since FW 5.40
TRIGger<m>:CDR:EYE:BREStimate:CONTinuous TRIGger<m>:CDR:EYE:SREStimate:CONTinuou		Functionality is not supported since FW 5.50.
TRIGger<m>:CDR:EYE:BREStimate[:RUN]	TRIGger<t>:CDR:EYE:SREStimate[:RUN] on page 1512	Replaced since FW 5.40
CDR:SOFTware<m>:ESBRate:SOURce	CDR:SOFTware<sw>:ESSRate:SOURce on page 2741	Replaced since FW 5.40
CDR:SOFTware<m>:ESBRate:CONTinuous	CDR:SOFTware<m>:ESSRate:CONTinuous on page 2741	Replaced since FW 5.40
CDR:SOFTware<m>:ESBRate:BREStimate	CDR:SOFTware<sw>:ESSRate:SREStimate on page 2742	Replaced since FW 5.40
CDR:SOFTware<m>:SAMTime		Functionality is not supported.

26.31.2.3 Eye diagram analysis

Legacy command	Replaced by	Comment
EYE<m>:HORizontal:UINTerval:BITRate EYE<m>:TREFerence[:SOURce] EYE<m>:TREFerence:SLOPe EYE<m>:TREFerence:LEVel		Functionality is not supported since FW 5.20
MEASurement<m>:EYEJitter:AUToscale		Functionality is not supported since FW 5.45

26.31.2.4 External frontend

Legacy command	Replaced by	Comment
EFRontend<m>:ALIGn:FILE	CHANnel<ch>:EFRontend:ALIGn:FILE on page 2841	Replaced since FW 5.40
EFRontend<m>:ALIGn:STATe	CHANnel<ch>:EFRontend:ALIGn:STATe on page 2841	
EFRontend<m>:AMPLmode	CHANnel<ch>:EFRontend:AMPLmode on page 2828	
EFRontend<m>:ATTenuation:AUTO	CHANnel<ch>:EFRontend:ATTenuation:AUTO on page 2828	

Legacy command	Replaced by	Comment
EFRontend<m>:ATTenuation:STEP:LIST	CHANnel<ch>:EFRontend:ATTenuation:STEP:LIST? on page 2829	
EFRontend<m>:ATTenuation[:VALue]	CHANnel<ch>:EFRontend:ATTenuation[:VALue] on page 2829	
EFRontend<m>:CONNection:CONFig	CHANnel<ch>:EFRontend:CONNection:CONFig on page 2824	
EFRontend<m>:CONNection:CSTate	CHANnel<ch>:EFRontend:CONNection:CSTate? on page 2824	
EFRontend<m>:CONNection:ERRor	CHANnel<ch>:EFRontend:CONNection:ERRor? on page 2825	
EFRontend<m>:CONNection:STATe	CHANnel<ch>:EFRontend:CONNection:STATe on page 2825	
EFRontend<m>:FREQuency:BAND:COUNt	CHANnel<ch>:EFRontend:FREQuency:BAND:COUNt? on page 2829	
EFRontend<m>:FREQuency:BAND<n>:LIST	CHANnel<ch>:EFRontend:FREQuency:BAND<n>:LIST? on page 2830	
EFRontend<m>:FREQuency:BAND<n>:LOWer	CHANnel<ch>:EFRontend:FREQuency:BAND<n>:LOWer? on page 2830	
EFRontend<m>:FREQuency:BAND<n>:UPPer	CHANnel<ch>:EFRontend:FREQuency:BAND<n>:UPPer? on page 2830	
EFRontend<m>:FREQuency:BCONfig:AUTO	CHANnel<ch>:EFRontend:FREQuency:BCONfig:AUTO on page 2831	
EFRontend<m>:FREQuency:BCONfig:COUNt	CHANnel<ch>:EFRontend:FREQuency:BCONfig:COUNt? on page 2831	
EFRontend<m>:FREQuency:BCONfig:IFRange	CHANnel<ch>:EFRontend:FREQuency:BCONfig:IFRange? on page 2831	
EFRontend<m>:FREQuency:BCONfig:LIST	CHANnel<ch>:EFRontend:FREQuency:BCONfig:LIST? on page 2831	
EFRontend<m>:FREQuency:BCONfig:RFRange	CHANnel<ch>:EFRontend:FREQuency:BCONfig:RFRange? on page 2832	
EFRontend<m>:FREQuency:BCONfig:SELect	CHANnel<ch>:EFRontend:FREQuency:BCONfig:SELect on page 2832	
EFRontend<m>:FREQuency:IFBWidth:LIMit	CHANnel<ch>:EFRontend:FREQuency:IFBWidth:LIMit? on page 2833	
EFRontend<m>:FREQuency:IFRequency:MAX	CHANnel<ch>:EFRontend:FREQuency:IFRequency:MAX? on page 2836	
EFRontend<m>:FREQuency:IFRequency:MIN	CHANnel<ch>:EFRontend:FREQuency:IFRequency:MIN? on page 2836	
EFRontend<m>:FREQuency:IFRequency:SIDeband	CHANnel<ch>:EFRontend:FREQuency:IFRequency:SIDeband? on page 2837	

Legacy command	Replaced by	Comment
EFRontend<m>:FREQuency:IFRequency:VALue	CHANnel<ch>:EFRontend:FREQuency:IFRequency[:VALue]? on page 2833	
EFRontend<m>:FREQuency:LOSCillator:FREQuency	CHANnel<ch>:EFRontend:FREQuency:LOSCillator:FREQuency? on page 2834	
EFRontend<m>:FREQuency:LOSCillator:INPut:FREQuency	CHANnel<ch>:EFRontend:FREQuency:LOSCillator:INPut:FREQuency? on page 2834	
EFRontend<m>:FREQuency:LOSCillator:OUTPut:FREQuency	CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:FREQuency? on page 2835	
EFRontend<m>:FREQuency:LOSCillator:OUTPut:STATe	CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:STATe on page 2835	
EFRontend<m>:FREQuency:REFerence[:VALue]	CHANnel<ch>:EFRontend:FREQuency:REFerence[:VALue] on page 2837	
EFRontend<m>:FREQuency:REFerence:LIST	CHANnel<ch>:EFRontend:FREQuency:REFerence:LIST? on page 2837	
EFRontend<m>:FREQuency:RFRequency:MAX	CHANnel<ch>:EFRontend:FREQuency:RFRequency:MAX? on page 2838	
EFRontend<m>:FREQuency:RFRequency:MIN	CHANnel<ch>:EFRontend:FREQuency:RFRequency:MIN? on page 2838	
EFRontend<m>:FREQuency:RFRequency:VALue	CHANnel<ch>:EFRontend:FREQuency:RFRequency[:VALue] on page 2839	
EFRontend<m>:GAIN	CHANnel<ch>:EFRontend:GAIN? on page 2839	
EFRontend<m>:IDN	CHANnel<ch>:EFRontend:IDN? on page 2826	
EFRontend<m>:IFRequency:ATTenuation	CHANnel<ch>:EFRontend:IFRequency:ATTenuation? on page 2840	
EFRontend<m>:RFINput:LEVel	CHANnel<ch>:EFRontend:RFINput:LEVel on page 2840	
EFRontend<m>:TYPE:LIST	CHANnel<ch>:EFRontend:TYPE:LIST? on page 2826	
CHANnel<m>:EFRontend:PRESet	EFRontend:PRESet on page 2826	Replaced since FW 5.45

27 Maintenance and support

The instrument does not need periodic maintenance. Only the cleaning of the instrument is essential.

To protect the front panel and to transport the instrument to another workplace safely and easily, various accessories are provided. Refer to the specifications document for available covers and cases and their order numbers.

The adjustment of the OCXO oscillator is described in the service manual.

27.1 Cleaning

How to clean the product is described in "Cleaning the product" on page 16.

Do not use any liquids for cleaning. Cleaning agents, solvents, acids and bases can damage the front panel labeling, plastic parts and display.

27.2 Power cables for R&S RTP

Rohde & Schwarz provides power cables with different properties for use in different countries.

Table 27-1: List of power cables

Material No.	Material name	Recommended for
3586.6406.00	Power cable 2.5 m, CEE 7/7 - C19	Europe
3630.6882.00	Power cable 2.5 m, NEMA 5/15 - C19	USA
3640.3834.00	Power cable 2.5 m, SAA3 - C19	China, Australia
3629.0032.00	Power cord 2.5 m, BS1363 - C19	UK
3639.9132.00	Power cable 2.5 m - C19-YP12	Japan
3630.6899.00	Power cable 2.5 m, ZA3 - C19	South Africa, India
3630.6901.00	Power cable 2.5 m, 12G - C19	Switzerland
3630.6924.00	Power cable 2.5 m, BR/3/20 - C19	Brazil
3658.0566.00	Power cable 2.5 m, IL/3 – C19	Israel

27.3 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 27-1: QR code to the Rohde & Schwarz support page

27.4 Information for technical support

If you encounter problems that you cannot solve yourself, contact your Rohde & Schwarz support center, see Contacting customer support.

The support center finds solutions more quickly and efficiently, if you provide them with information on the instrument and an error description. To create, collect and save the required information, you can create a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

1. Open the "Settings" > "Maintenance" dialog.
2. Select the "Service" tab.
3. Tap "Service reporter: Start".

   The service reporter creates the report and saves it as ZIP file directly on the Windows desktop.
4. Create a support ticket that describes the problem, and attach the report file.

On the instrument, you can find log files, the device footprint and report files, and other information in the "AppData" folder on the Windows desktop (`C:\ProgramData\Rohde-Schwarz\RTx`). The "Maintenance" dialog box also pro-

vides information on your instrument configuration which can be helpful in case you need support.

27.5 Data security

If you have to send the instrument to the service, or if the instrument is used in a secured environment, consider the document "Instrument Security Procedures" that is delivered on the R&S RTP webpage.

Instrument configuration data and user data are stored on a removable hard disk only. Thus it is sufficient to remove the hard disk before the instrument leaves a secured environment. Details are given in the document mentioned above.

27.6 Transporting

Lifting and carrying

See: "Lifting and carrying the instrument" on page 12

Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection. You can also contact your local Rohde & Schwarz service center for advice.

Securing

When moving the R&S RTP in a vehicle or using transporting equipment, make sure that the R&S RTP is properly secured. Only use items intended for securing objects.

Transport altitude

Unless otherwise specified in the specifications document, the maximum transport altitude without pressure compensation is 4500 m above sea level.

27.7 Storage

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the specifications document.

27.8 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

Disposing of electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.



Figure 27-2: Labeling in line with EU directive WEEE

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

List of commands

*CAL?....1352
*CLS....1353
*ESE....1353
*ESR?....1353
*IDN?....1353
*IST?....1354
*OPC....1354
*OPT?....1354
*PCB....1354
*PRE....1354
*PSC....1355
*RCL....1355
*RST....1355
*SAV....1355
*SRE....1356
*STB?....1356
*TRG....1356
*TST?....1356
*WAI....1356
ACQuire:ARESet:COUNt....1400
ACQuire:ARESet:IMMediate....1399
ACQuire:ARESet:MODE....1399
ACQuire:ARESet:TIME....1399
ACQuire:AVAilable?....1577
ACQuire:CDTA....1400
ACQuire:COUNt....1400
ACQuire:CURRent?....1541
ACQuire:DRESolution?....2632
ACQuire:INTerpolate....1401
ACQuire:MUWaveform....1401
ACQuire:POINts:AADJust....1402
ACQuire:POINts:ARATe?....1403
ACQuire:POINts:AUTO....1401
ACQuire:POINts:DVALue?....2633
ACQuire:POINts:MAXimum....1402
ACQuire:POINts:ZVALue?....1457
ACQuire:POINts[:VALue]....1403
ACQuire:RESolution....1403
ACQuire:SEGMented:AUToreplay....1407
ACQuire:SEGMented:MAX....1406
ACQuire:SEGMented:STATe....1406
ACQuire:SRATe....1403
ACQuire:SRReal....1404
ACQuire:ZRESolution?....1458
ADVJitter<m>:DCOMposition:CLEBasicmeas....2710
ADVJitter<m>:DCOMposition:CLEJitcomp....2710
ADVJitter<m>:DCOMposition:CLENoisecomp....2711

ADVJitter<m>:DCOMposition:COMPonents<n>[:ENABle] 2705
ADVJitter<m>:DCOMposition:ENOBu 2738
ADVJitter<m>:DCOMposition:ENP 2738
ADVJitter<m>:DCOMposition:ERRSignal 2715
ADVJitter<m>:DCOMposition:JINTerleaved 2719
ADVJitter<m>:DCOMposition:MRESplength? 2736
ADVJitter<m>:DCOMposition:NHORizontal 2738
ADVJitter<m>:DCOMposition:NVERtical 2738
ADVJitter<m>:DCOMposition:POSStep 2737
ADVJitter<m>:DCOMposition:RECSignal 2715
ADVJitter<m>:DCOMposition:RESPlength 2737
ADVJitter<m>:DCOMposition:RLEStimate 2737
ADVJitter<m>:DCOMposition:SELBasicmeas 2710
ADVJitter<m>:DCOMposition:SELJitcomp 2711
ADVJitter<m>:DCOMposition:SELNoisecomp 2711
ADVJitter<m>:DCOMposition:SPJLabels 2718
ADVJitter<m>:DCOMposition:SPJTable 2718
ADVJitter<m>:DCOMposition:SPNLabels 2719
ADVJitter<m>:DCOMposition:STEPresponse 2739
ADVJitter<m>:DCOMposition:TARBer 2712
ADVJitter<m>:RESult:BATHtub 2712
ADVJitter<m>:RESult:COMPonents<n>:HISTogram 2706
ADVJitter<m>:RESult:COMPonents<n>:HOFFset 2719
ADVJitter<m>:RESult:COMPonents<n>:HSCale 2719
ADVJitter<m>:RESult:COMPonents<n>:NOFFset 2720
ADVJitter<m>:RESult:COMPonents<n>:NSCale 2720
ADVJitter<m>:RESult:COMPonents<n>:NSPoffset 2720
ADVJitter<m>:RESult:COMPonents<n>:NSPScale 2721
ADVJitter<m>:RESult:COMPonents<n>:PEAKpeak? 2707
ADVJitter<m>:RESult:COMPonents<n>:SDOFfset 2721
ADVJitter<m>:RESult:COMPonents<n>:SDSCale 2721
ADVJitter<m>:RESult:COMPonents<n>:SOFFset 2722
ADVJitter<m>:RESult:COMPonents<n>:SPECtrum 2707
ADVJitter<m>:RESult:COMPonents<n>:SROFfset 2722
ADVJitter<m>:RESult:COMPonents<n>:SRSCale 2722
ADVJitter<m>:RESult:COMPonents<n>:SSCale 2723
ADVJitter<m>:RESult:COMPonents<n>:STATistics:MAXPeakpeak? 2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics:MAXStddev? 2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics:MINPeakpeak? 2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics:WFMCount? 2708
ADVJitter<m>:RESult:COMPonents<n>:STATistics[:MINStddev]? 2708
ADVJitter<m>:RESult:COMPonents<n>:STDDev? 2707
ADVJitter<m>:RESult:COMPonents<n>:TRACk 2707
ADVJitter<m>:RESult:ENABle 2705
ADVJitter<m>:RESult:LEVels 2712
ADVJitter<m>:RESult:NBAThtub 2713
ADVJitter<m>:RESult:OBUJ 2713
ADVJitter<m>:RESult:OBUN 2714
ADVJitter<m>:RESult:PAMJitter:CONFig:BASE 2724
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:ACTive? 2724

ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:ADD....2724
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:BASE....2725
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:COLor....2725
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:COMPonent....2726
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:TARGet....2726
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:MEASurement<mg>:TRANsition....2727
ADVJitter<m>:RESult:PAMJitter:CONFig:CATegory<n>:REMove....2727
ADVJitter<m>:RESult:PAMJitter:CONFig:COMPonent....2727
ADVJitter<m>:RESult:PAMJitter:CONFig:ENABle....2728
ADVJitter<m>:RESult:PAMJitter:CONFig:EXPLicit....2728
ADVJitter<m>:RESult:PAMJitter:CONFig:LVLHeight....2728
ADVJitter<m>:RESult:PAMJitter:CONFig:MODE....2729
ADVJitter<m>:RESult:PAMJitter:CONFig:PRESet....2729
ADVJitter<m>:RESult:PAMJitter:CONFig:SELMode....2729
ADVJitter<m>:RESult:PAMJitter:CONFig:TARGet....2729
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MAXPeakpeak?....2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MAXStddev?....2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MINPeakpeak?....2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:MINStddev?....2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:PEAKpeak?....2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:STDDev?....2730
ADVJitter<m>:RESult:PAMJitter:RESult<n>:MEASurement<mg>:WFMCount?....2730
ADVJitter<m>:RESult:PAMNoise:CONFig:BASE....2731
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:ACTive?....2731
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:ADD....2731
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:BASE....2732
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:COLor....2732
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<mg>:COMPonent....2733
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:MEASurement<o>:DIAGram....2733
ADVJitter<m>:RESult:PAMNoise:CONFig:CATegory<n>:REMove....2734
ADVJitter<m>:RESult:PAMNoise:CONFig:COMPonent....2734
ADVJitter<m>:RESult:PAMNoise:CONFig:ENABle....2735
ADVJitter<m>:RESult:PAMNoise:CONFig:MODE....2735
ADVJitter<m>:RESult:PAMNoise:CONFig:PRESet....2735
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MAXPeakpeak?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MAXStddev?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MINPeakpeak?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:MINStddev?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:PEAKpeak?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:STDDev?....2736
ADVJitter<m>:RESult:PAMNoise:RESult<n>:MEASurement<mg>:WFMCount?....2736
ADVJitter<m>:RESult:PERiodic<n>:COUNt?....2709
ADVJitter<m>:RESult:PERiodic<n>:DIRection?....2709
ADVJitter<m>:RESult:PERiodic<n>:VALue?....2709
ADVJitter<m>:RESult:PERiodic<n>[:FREQuency]?....2709
ADVJitter<m>:RESult:PHORizontal....2714
ADVJitter<m>:RESult:PJ....2713
ADVJitter<m>:RESult:PN....2713
ADVJitter<m>:RESult:PVERtical....2714
ADVJitter<m>:RESult:STATistics....2706

ADVJitter<m>:RESult:STEPresponse....2706
ADVJitter<m>:RESult:SYNTheticeye....2714
ADVJitter<m>:RESult:TRANsitions....2711
ADVJitter<m>:RESult:UNIT....2708
ADVJitter<m>:RESult:VERTical:BHContinuous....2717
ADVJitter<m>:RESult:VERTical:BMTYpe....2716
ADVJitter<m>:RESult:VERTical:CONTinuous....2716
ADVJitter<m>:RESult:VERTical:HBINs....2716
ADVJitter<m>:RESult:VERTical:JSContinuous....2717
ADVJitter<m>:RESult:VERTical:NHContinuous....2717
ADVJitter<m>:RESult:VERTical:NSContinuous....2718
ADVJitter<m>:SIGNal:CDRMode....2697
ADVJitter<m>:SIGNal:CLFFactor....2698
ADVJitter<m>:SIGNal:CLFRequency....2698
ADVJitter<m>:SIGNal:CLKSource....2698
ADVJitter<m>:SIGNal:CLOFfset....2699
ADVJitter<m>:SIGNal:DATRate?....2699
ADVJitter<m>:SIGNal:EDGE....2698
ADVJitter<m>:SIGNal:FREStimation....2702
ADVJitter<m>:SIGNal:GATE:COUPling....2699
ADVJitter<m>:SIGNal:GATE:CURSor....2700
ADVJitter<m>:SIGNal:GATE:RANGe:ABSolute:STARt....2700
ADVJitter<m>:SIGNal:GATE:RANGe:ABSolute:STOP....2700
ADVJitter<m>:SIGNal:GATE:RANGe:MODE....2700
ADVJitter<m>:SIGNal:GATE:RANGe:RELative:STARt....2701
ADVJitter<m>:SIGNal:GATE:RANGe:RELative:STOP....2701
ADVJitter<m>:SIGNal:GATE:STATe....2702
ADVJitter<m>:SIGNal:GATE:ZDIagram....2701
ADVJitter<m>:SIGNal:OFEStimation....2702
ADVJitter<m>:SIGNal:QUICkmeas....2697
ADVJitter<m>:SIGNal:REFSource....2697
ADVJitter<m>:SIGNal:SOURce....2696
ADVJitter<m>:SIGNal:SYMBolrate?....2697
ADVJitter<m>:SIGNal:TYPE....2696
AUToscale....1395
BUS<b>:ARINc:BRMode....2079
BUS<b>:ARINc:BRValue....2078
BUS<b>:ARINc:MAXGap:BITS....2079
BUS<b>:ARINc:MAXGap:SELect....2079
BUS<b>:ARINc:MINGap:BITS....2080
BUS<b>:ARINc:MINGap:SELect....2079
BUS<b>:ARINc:POLarity....2080
BUS<b>:ARINc:PRESet....2080
BUS<b>:ARINc:SOURce....2078
BUS<b>:ARINc:THReshold:HIGH....2081
BUS<b>:ARINc:THReshold:LOW....2081
BUS<b>:ARINc:WCOunt?....2086
BUS<b>:ARINc:WORD<w>:BITRate?....2086
BUS<b>:ARINc:WORD<w>:DATA?....2087
BUS<b>:ARINc:WORD<w>:LABel?....2087

BUS<b>:ARINc:WORD<w>:PATTern? 2087
BUS<b>:ARINc:WORD<w>:SDI? 2088
BUS<b>:ARINc:WORD<w>:SSM? 2088
BUS<b>:ARINc:WORD<w>:STARt? 2088
BUS<b>:ARINc:WORD<w>:STATe? 2089
BUS<b>:ARINc:WORD<w>:STOP? 2089
BUS<b>:ARINc:WORD<w>:SYMBol? 2090
BUS<b>:CAN:BITRate 1937
BUS<b>:CAN:DATA:SOURce 1935
BUS<b>:CAN:DATA:THReshold 1937
BUS<b>:CAN:FCOunt? 1951
BUS<b>:CAN:FDATa:DBITrate 1938
BUS<b>:CAN:FDATa:ENABle 1938
BUS<b>:CAN:FDATa:FRAMe<fr>:SCValue? 1958
BUS<b>:CAN:FDATa:FRAMe<fr>:STANdard? 1952
BUS<b>:CAN:FDATa:JWIDth 1940
BUS<b>:CAN:FDATa:PSTandard 1936
BUS<b>:CAN:FDATa:SAMPlepoint 1938
BUS<b>:CAN:FDATa:T1Segment 1939
BUS<b>:CAN:FDATa:T2Segment 1939
BUS<b>:CAN:FRAMe<fr>:ACKState? 1955
BUS<b>:CAN:FRAMe<fr>:ACKValue? 1955
BUS<b>:CAN:FRAMe<fr>:BITRate? 1956
BUS<b>:CAN:FRAMe<fr>:BSEPosition? 1957
BUS<b>:CAN:FRAMe<fr>:BYTE<o>:STATe? 1959
BUS<b>:CAN:FRAMe<fr>:BYTE<o>:VALue? 1959
BUS<b>:CAN:FRAMe<fr>:CSSTate? 1955
BUS<b>:CAN:FRAMe<fr>:CSValue? 1956
BUS<b>:CAN:FRAMe<fr>:DATA? 1954
BUS<b>:CAN:FRAMe<fr>:DLCState? 1955
BUS<b>:CAN:FRAMe<fr>:DLCValue? 1956
BUS<b>:CAN:FRAMe<fr>:FERCause? 1958
BUS<b>:CAN:FRAMe<fr>:IDSTate? 1955
BUS<b>:CAN:FRAMe<fr>:IDTYpe? 1957
BUS<b>:CAN:FRAMe<fr>:IDValue? 1957
BUS<b>:CAN:FRAMe<fr>:NDBYtes? 1953
BUS<b>:CAN:FRAMe<fr>:SDATa? 1978
BUS<b>:CAN:FRAMe<fr>:SDEXport? 1958
BUS<b>:CAN:FRAMe<fr>:STARt? 1953
BUS<b>:CAN:FRAMe<fr>:STATus? 1952
BUS<b>:CAN:FRAMe<fr>:STOP? 1953
BUS<b>:CAN:FRAMe<fr>:SYMBol? 1954
BUS<b>:CAN:FRAMe<fr>:TYPE? 1954
BUS<b>:CAN:JWIDth 1940
BUS<b>:CAN:SAMPlepoint 1938
BUS<b>:CAN:T1Segment 1939
BUS<b>:CAN:T2Segment 1939
BUS<b>:CAN:TECHnology 1937
BUS<b>:CAN:TYPE 1936
BUS<b>:CANXl:BITRate 1983

BUS<b>:CANXI:FAST:HYSTeresis ... 1986
BUS<b>:CANXI:FAST:THReshold ... 1985
BUS<b>:CANXI:FCOunt? ... 1991
BUS<b>:CANXI:FDATa:DBITrate ... 1983
BUS<b>:CANXI:FDATa:SAMPlepoint ... 1984
BUS<b>:CANXI:FRAMe<fr>:ACKState? ... 1992
BUS<b>:CANXI:FRAMe<fr>:ACKValue? ... 1992
BUS<b>:CANXI:FRAMe<fr>:CSSTate? ... 1994
BUS<b>:CANXI:FRAMe<fr>:CSValue? ... 1994
BUS<b>:CANXI:FRAMe<fr>:DBITrate? ... 2001
BUS<b>:CANXI:FRAMe<fr>:DLCState? ... 1995
BUS<b>:CANXI:FRAMe<fr>:DLCValue? ... 1995
BUS<b>:CANXI:FRAMe<fr>:FDATa<o>:BRS? ... 2000
BUS<b>:CANXI:FRAMe<fr>:FDATa<o>:ESI? ... 2000
BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:FVALue? ... 1994
BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:LABel? ... 1993
BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:STATe? ... 1992
BUS<b>:CANXI:FRAMe<fr>:FLD<fl>:VALue? ... 1993
BUS<b>:CANXI:FRAMe<fr>:FLDCount? ... 1991
BUS<b>:CANXI:FRAMe<fr>:IDSTate? ... 1995
BUS<b>:CANXI:FRAMe<fr>:IDTYpe? ... 1995
BUS<b>:CANXI:FRAMe<fr>:IDValue? ... 1996
BUS<b>:CANXI:FRAMe<fr>:NBITrate? ... 2001
BUS<b>:CANXI:FRAMe<fr>:NDBYtes? ... 1996
BUS<b>:CANXI:FRAMe<fr>:SBC? ... 1999
BUS<b>:CANXI:FRAMe<fr>:STARt? ... 1996
BUS<b>:CANXI:FRAMe<fr>:STATus? ... 1997
BUS<b>:CANXI:FRAMe<fr>:STOP? ... 1997
BUS<b>:CANXI:FRAMe<fr>:SYMBol? ... 1998
BUS<b>:CANXI:FRAMe<fr>:TYPE? ... 1998
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:AF? ... 1998
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:FCRC? ... 2002
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:PCRC? ... 1999
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:SDT? ... 2001
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:SEC? ... 1999
BUS<b>:CANXI:FRAMe<fr>:XDATa<o>:VCID? ... 2000
BUS<b>:CANXI:SAMPlepoint ... 1983
BUS<b>:CANXI:SIC:HYSTeresis ... 1985
BUS<b>:CANXI:SIC:THReshold ... 1985
BUS<b>:CANXI:SOURce ... 1982
BUS<b>:CANXI:TRCVmode ... 1983
BUS<b>:CANXI:TYPE ... 1982
BUS<b>:CANXI:XDATa:DBITrate ... 1984
BUS<b>:CANXI:XDATa:SAMPlepoint ... 1984
BUS<b>:CDR:BITRate ... 2549
BUS<b>:CDR:PLL:BWIDth ... 2550
BUS<b>:CDR:PLL:DAMPing ... 2550
BUS<b>:CDR:PLL:ORDer ... 2550
BUS<b>:CDR:PLL:RELBwidth ... 2550
BUS<b>:CDR:RESults ... 2551

BUS<b>:CDR:SYNC....2551
BUS<b>:CMSB:ADDFrame....2350
BUS<b>:CMSB:BITRate:ENABle....2349
BUS<b>:CMSB:BITRate:VALue....2350
BUS<b>:CMSB:CLR....2351
BUS<b>:CMSB:CODing....2340
BUS<b>:CMSB:EXRBits....2355
BUS<b>:CMSB:FCOunt?....2351
BUS<b>:CMSB:FILTer:BIT....2364
BUS<b>:CMSB:FILTer:DMAX....2365
BUS<b>:CMSB:FILTer:DMIN....2365
BUS<b>:CMSB:FILTer:DOPerator....2365
BUS<b>:CMSB:FILTer:ENABle....2363
BUS<b>:CMSB:FILTer:ERENable....2363
BUS<b>:CMSB:FILTer:ERRor<n>:ENABle....2364
BUS<b>:CMSB:FILTer:FIENable....2364
BUS<b>:CMSB:FILTer:FRAMe<fr>:ENABle....2366
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:BIT....2364
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2365
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2364
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2366
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2366
BUS<b>:CMSB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2367
BUS<b>:CMSB:FILTer:FRENable....2366
BUS<b>:CMSB:FILTer:IMAX....2366
BUS<b>:CMSB:FILTer:IMIN....2366
BUS<b>:CMSB:FILTer:IOPerator....2367
BUS<b>:CMSB:FRAMe<fr>:APPend....2351
BUS<b>:CMSB:FRAMe<fr>:CCOunt?....2352
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:BITCount....2352
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:BITorder....2353
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CLMN....2355
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:COLor....2354
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CONDition....2353
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:CRGB....2354
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:FORMat....2353
BUS<b>:CMSB:FRAMe<fr>:CELL<ce>:NAME....2352
BUS<b>:CMSB:FRAMe<fr>:TYPE....2351
BUS<b>:CMSB:GAPTime:ENABle....2350
BUS<b>:CMSB:GAPTime:VALue....2350
BUS<b>:CMSB:LOAD....2355
BUS<b>:CMSB:MANChester:CPHase....2343
BUS<b>:CMSB:MANChester:DATA....2341
BUS<b>:CMSB:MANChester:POLarity....2341
BUS<b>:CMSB:MANChester:THReshold:COUPling....2342
BUS<b>:CMSB:MANChester:THReshold:HIGH....2341
BUS<b>:CMSB:MANChester:THReshold:LOW....2342
BUS<b>:CMSB:MANChester:THReshold:PRESet....2342

BUS<b>:CMSB:NRZ:CLCK....2343
BUS<b>:CMSB:NRZ:CPHase....2345
BUS<b>:CMSB:NRZ:CPOLarity....2345
BUS<b>:CMSB:NRZ:DATA....2344
BUS<b>:CMSB:NRZ:ENAPolarity....2346
BUS<b>:CMSB:NRZ:ENBLe....2346
BUS<b>:CMSB:NRZ:HYSTeresis:CLCK....2347
BUS<b>:CMSB:NRZ:HYSTeresis:DATA....2347
BUS<b>:CMSB:NRZ:HYSTeresis:ENBLe....2348
BUS<b>:CMSB:NRZ:IDLPolarity....2344
BUS<b>:CMSB:NRZ:POLarity....2346
BUS<b>:CMSB:NRZ:THReshold:CLCK....2347
BUS<b>:CMSB:NRZ:THReshold:COUPling....2349
BUS<b>:CMSB:NRZ:THReshold:DATA....2347
BUS<b>:CMSB:NRZ:THReshold:ENBLe....2348
BUS<b>:CMSB:NRZ:THReshold:PRESet....2348
BUS<b>:CMSB:RCOunt?....2368
BUS<b>:CMSB:RESult<n>:CCOunt?....2371
BUS<b>:CMSB:RESult<n>:CELL<ce>:NAME?....2371
BUS<b>:CMSB:RESult<n>:CELL<ce>:STARt?....2371
BUS<b>:CMSB:RESult<n>:CELL<ce>:STATe?....2372
BUS<b>:CMSB:RESult<n>:CELL<ce>:STOP?....2372
BUS<b>:CMSB:RESult<n>:CELL<ce>:VALue?....2373
BUS<b>:CMSB:RESult<n>:CONE?....2370
BUS<b>:CMSB:RESult<n>:CTHRee?....2371
BUS<b>:CMSB:RESult<n>:CTWO?....2370
BUS<b>:CMSB:RESult<n>:STARt?....2369
BUS<b>:CMSB:RESult<n>:STATe?....2368
BUS<b>:CMSB:RESult<n>:STOP?....2369
BUS<b>:CMSB:RESult<n>:TYPE?....2370
BUS<b>:CMSB:SAVE....2356
BUS<b>:CTLE:ACGain....2802
BUS<b>:CTLE:DCGain....2465
BUS<b>:CTLE:DCGain....2552
BUS<b>:CTLE:ENBLe....2465
BUS<b>:CTLE:ENBLe....2552
BUS<b>:CTLE:P1FReq....2465
BUS<b>:CTLE:P1FReq....2552
BUS<b>:CTLE:P2FReq....2465
BUS<b>:CTLE:P2FReq....2552
BUS<b>:CTLE:Z1FReq....2466
BUS<b>:CTLE:Z1FReq....2553
BUS<b>:DDR:BITRate....2603
BUS<b>:DDR:CA4:HYSTeresis....2605
BUS<b>:DDR:CA4:SOURce....2606
BUS<b>:DDR:CA4:THReshold....2605
BUS<b>:DDR:CASRead....2607
BUS<b>:DDR:CASWrite....2607
BUS<b>:DDR:CS:HYSTeresis....2604
BUS<b>:DDR:CS:SOURce....2605

BUS<b>:DDR:CS:THReshold....2605
BUS<b>:DDR:DATA:HYSTeresis....2599
BUS<b>:DDR:DATA:SOURce....2600
BUS<b>:DDR:DATA:THReshold....2600
BUS<b>:DDR:MINGap....2603
BUS<b>:DDR:RDQS:HYSTeresis....2601
BUS<b>:DDR:RDQS:SOURce....2601
BUS<b>:DDR:RDQS:THReshold....2602
BUS<b>:DDR:RESult:FCOunt?....2608
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:FVAL?....2608
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STARt?....2608
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STATus?....2609
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:STOP?....2609
BUS<b>:DDR:RESult:FRAMe<fr>:FLD<fl>:VAL?....2609
BUS<b>:DDR:RESult:FRAMe<fr>:NWRDs?....2610
BUS<b>:DDR:RESult:FRAMe<fr>:STARt?....2610
BUS<b>:DDR:RESult:FRAMe<fr>:STATe?....2610
BUS<b>:DDR:RESult:FRAMe<fr>:STOP?....2611
BUS<b>:DDR:RESult:FRAMe<fr>:TYPE?....2611
BUS<b>:DDR:RPReamble....2606
BUS<b>:DDR:STANdard....2599
BUS<b>:DDR:STRBe:HYSTeresis....2600
BUS<b>:DDR:STRBe:SOURce....2600
BUS<b>:DDR:STRBe:THLower....2604
BUS<b>:DDR:STRBe:THReshold....2601
BUS<b>:DDR:STRBe:THUPper....2604
BUS<b>:DDR:WCK:HYSTeresis....2602
BUS<b>:DDR:WCK:SOURce....2602
BUS<b>:DDR:WCK:THReshold....2603
BUS<b>:DDR:WPReamble....2606
BUS<b>:DPHY:CONFig....2244
BUS<b>:DPHY:CP:HSPeed:HYSTeresis....2249
BUS<b>:DPHY:CP:HSPeed:THReshold....2249
BUS<b>:DPHY:CP:PROBe....2245
BUS<b>:DPHY:CP:SOURce....2245
BUS<b>:DPHY:DNZero:LPOWer:THLower....2247
BUS<b>:DPHY:DNZero:LPOWer:THUPper....2247
BUS<b>:DPHY:DNZero:PROBe....2248
BUS<b>:DPHY:DNZero:SOURce....2248
BUS<b>:DPHY:DPONe:HSPeed:HYSTeresis....2249
BUS<b>:DPHY:DPONe:HSPeed:THReshold....2249
BUS<b>:DPHY:DPONe:PROBe....2248
BUS<b>:DPHY:DPONe:SOURce....2248
BUS<b>:DPHY:DPTHree:HSPeed:HYSTeresis....2249
BUS<b>:DPHY:DPTHree:HSPeed:THReshold....2249
BUS<b>:DPHY:DPTHree:PROBe....2248
BUS<b>:DPHY:DPTHree:SOURce....2248
BUS<b>:DPHY:DPTWo:HSPeed:HYSTeresis....2249
BUS<b>:DPHY:DPTWo:HSPeed:THReshold....2249
BUS<b>:DPHY:DPTWo:PROBe....2248

BUS<b>:DPHY:DPTWo:SOURce....2248
BUS<b>:DPHY:DPZero:HSPeed:HYSTeresis....2249
BUS<b>:DPHY:DPZero:HSPeed:THReshold....2249
BUS<b>:DPHY:DPZero:LPOWer:THLower....2247
BUS<b>:DPHY:DPZero:LPOWer:THUPper....2247
BUS<b>:DPHY:DPZero:PROBe....2248
BUS<b>:DPHY:DPZero:SOURce....2248
BUS<b>:DPHY:DRATe....2246
BUS<b>:DPHY:DSPData....2246
BUS<b>:DPHY:RESult:FCOunt?....2259
BUS<b>:DPHY:RESult:FRAMe<fr>:CS?....2259
BUS<b>:DPHY:RESult:FRAMe<fr>:DATA?....2259
BUS<b>:DPHY:RESult:FRAMe<fr>:DTName?....2260
BUS<b>:DPHY:RESult:FRAMe<fr>:DTYPe?....2260
BUS<b>:DPHY:RESult:FRAMe<fr>:ECC?....2260
BUS<b>:DPHY:RESult:FRAMe<fr>:NUMPackets?....2263
BUS<b>:DPHY:RESult:FRAMe<fr>:PACKet<pa>:IDX?....2260
BUS<b>:DPHY:RESult:FRAMe<fr>:PACKet<pa>:VALue?....2261
BUS<b>:DPHY:RESult:FRAMe<fr>:STARt?....2261
BUS<b>:DPHY:RESult:FRAMe<fr>:STATe?....2262
BUS<b>:DPHY:RESult:FRAMe<fr>:STOP?....2262
BUS<b>:DPHY:RESult:FRAMe<fr>:TYPE?....2262
BUS<b>:DPHY:RESult:FRAMe<fr>:VCHannel?....2263
BUS<b>:DPHY:SMLanes....2249
BUS<b>:DPHY:THCoupling....2246
BUS<b>:DPHY:THPReset....2246
BUS<b>:DPHY:VARiant....2247
BUS<b>:EBTB:ACTestimate....2386
BUS<b>:EBTB:BITDetermi....2390
BUS<b>:EBTB:BITRate....2386
BUS<b>:EBTB:DIFFerential:SOURce....2386
BUS<b>:EBTB:DIFFerential:THRHigh....2387
BUS<b>:EBTB:DIFFerential:THRLow....2387
BUS<b>:EBTB:DISF....2387
BUS<b>:EBTB:DMINus:SOURce....2388
BUS<b>:EBTB:DMINus:THReshold....2388
BUS<b>:EBTB:DPLus:SOURce....2388
BUS<b>:EBTB:DPLus:THReshold....2389
BUS<b>:EBTB:EBTRate?....2386
BUS<b>:EBTB:FAUToscale....2391
BUS<b>:EBTB:FCSY....2389
BUS<b>:EBTB:SCOunt?....2389
BUS<b>:EBTB:SCSY....2389
BUS<b>:EBTB:SYMBol<n>:BYTE?....2396
BUS<b>:EBTB:SYMBol<n>:DATA?....2394
BUS<b>:EBTB:SYMBol<n>:KDCode?....2396
BUS<b>:EBTB:SYMBol<n>:STARt?....2395
BUS<b>:EBTB:SYMBol<n>:STATus?....2395
BUS<b>:EBTB:SYMBol<n>:STOP?....2395
BUS<b>:EBTB:SYMBol<n>:TENBit?....2396

BUS<b>:EBTB:SYNC....2390
BUS<b>:EBTB:TYPE....2390
BUS<b>:EBTB:USCS....2390
BUS<b>:ETHernet:POLarity....2097
BUS<b>:ETHernet:PRESet....2098
BUS<b>:ETHernet:SOURce....2097
BUS<b>:ETHernet:THReshold:HIGH....2098
BUS<b>:ETHernet:THReshold:LOW....2098
BUS<b>:ETHernet:VARiant....2097
BUS<b>:ETHernet:WCOunt?....2105
BUS<b>:ETHernet:WORD<w>:BITRate?....2109
BUS<b>:ETHernet:WORD<w>:BYTE<o>:VALue?....2109
BUS<b>:ETHernet:WORD<w>:CRC?....2108
BUS<b>:ETHernet:WORD<w>:DATA?....2108
BUS<b>:ETHernet:WORD<w>:DESTaddress?....2107
BUS<b>:ETHernet:WORD<w>:DSYMbol?....2109
BUS<b>:ETHernet:WORD<w>:FTYPe?....2106
BUS<b>:ETHernet:WORD<w>:NUMWords?....2110
BUS<b>:ETHernet:WORD<w>:SRCaddress?....2107
BUS<b>:ETHernet:WORD<w>:SSYMbol?....2109
BUS<b>:ETHernet:WORD<w>:STARt?....2106
BUS<b>:ETHernet:WORD<w>:STATe?....2106
BUS<b>:ETHernet:WORD<w>:STOP?....2107
BUS<b>:ETHernet:WORD<w>:TYPE?....2108
BUS<b>:EXPResult:DETail....1836
BUS<b>:EXPResult:SAVE....1837
BUS<b>:EXPResult:TIME....1837
BUS<b>:FAUToset....1834
BUS<b>:FORMat....1835
BUS<b>:HBTO:ATTN....2146
BUS<b>:HBTO:FDAM....2146
BUS<b>:HBTO:FDAP....2147
BUS<b>:HBTO:FDIF....2147
BUS<b>:HBTO:FTYP....2147
BUS<b>:HBTO:MODE....2149
BUS<b>:HBTO:POLarity....2149
BUS<b>:HBTO:RDAM....2148
BUS<b>:HBTO:RDAP....2148
BUS<b>:HBTO:RDIF....2148
BUS<b>:HBTO:RESult:FCOunt?....2158
BUS<b>:HBTO:RESult:FRAMe<fr>:BITRate?....2162
BUS<b>:HBTO:RESult:FRAMe<fr>:CRC?....2161
BUS<b>:HBTO:RESult:FRAMe<fr>:DATA?....2161
BUS<b>:HBTO:RESult:FRAMe<fr>:DESTaddress?....2160
BUS<b>:HBTO:RESult:FRAMe<fr>:DSYMbol?....2162
BUS<b>:HBTO:RESult:FRAMe<fr>:FTYPe?....2158
BUS<b>:HBTO:RESult:FRAMe<fr>:NUMWords?....2161
BUS<b>:HBTO:RESult:FRAMe<fr>:SRCaddress?....2160
BUS<b>:HBTO:RESult:FRAMe<fr>:SSYMbol?....2162
BUS<b>:HBTO:RESult:FRAMe<fr>:STARt?....2159

BUS<b>:HBTO:RESult:FRAMe<fr>:STATe? 2159
BUS<b>:HBTO:RESult:FRAMe<fr>:STOP? 2160
BUS<b>:HBTO:RESult:FRAMe<fr>:TYPE? 2160
BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:TYPE? 2162
BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:VALue? 2163
BUS<b>:HBTO:RESult:FRAMe<fr>:WORD<w>:VSTR? 2163
BUS<b>:HBTO:RTYP 2148
BUS<b>:I2C:FCOunt? 1851
BUS<b>:I2C:FRAMe<fr>:AACCess? 1851
BUS<b>:I2C:FRAMe<fr>:ACCess? 1851
BUS<b>:I2C:FRAMe<fr>:ACOMplete? 1852
BUS<b>:I2C:FRAMe<fr>:ADBStart? 1852
BUS<b>:I2C:FRAMe<fr>:ADDRess? 1852
BUS<b>:I2C:FRAMe<fr>:ADEVice? 1853
BUS<b>:I2C:FRAMe<fr>:AMODe? 1853
BUS<b>:I2C:FRAMe<fr>:ASTart? 1853
BUS<b>:I2C:FRAMe<fr>:BCOunt? 1856
BUS<b>:I2C:FRAMe<fr>:BITRate? 1854
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:ACCess? 1856
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:ACKStart? 1857
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:COMPlete? 1857
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:STARt? 1857
BUS<b>:I2C:FRAMe<fr>:BYTE<o>:VALue? 1858
BUS<b>:I2C:FRAMe<fr>:DATA? 1850
BUS<b>:I2C:FRAMe<fr>:RWBStart? 1854
BUS<b>:I2C:FRAMe<fr>:STARt? 1855
BUS<b>:I2C:FRAMe<fr>:STATus? 1854
BUS<b>:I2C:FRAMe<fr>:STOP? 1855
BUS<b>:I2C:FRAMe<fr>:SYMBol? 1856
BUS<b>:I2C:RWBit 1842
BUS<b>:I2C:SCL:SOURce 1840
BUS<b>:I2C:SCL:THReshold 1841
BUS<b>:I2C:SDA:SOURce 1840
BUS<b>:I2C:SDA:THReshold 1841
BUS<b>:I2C:TECHnology 1841
BUS<b>:I3C:FCOunt? 1882
BUS<b>:I3C:FRAMe<fr>:ACK? 1886
BUS<b>:I3C:FRAMe<fr>:ACKStart? 1886
BUS<b>:I3C:FRAMe<fr>:ADDRess? 1883
BUS<b>:I3C:FRAMe<fr>:ASTart? 1883
BUS<b>:I3C:FRAMe<fr>:BITRate? 1883
BUS<b>:I3C:FRAMe<fr>:COMMand? 1888
BUS<b>:I3C:FRAMe<fr>:CRC? 1888
BUS<b>:I3C:FRAMe<fr>:FADDress? 1888
BUS<b>:I3C:FRAMe<fr>:FCOMmand? 1889
BUS<b>:I3C:FRAMe<fr>:FCRC? 1889
BUS<b>:I3C:FRAMe<fr>:FLD<fl>:FVALue? 1886
BUS<b>:I3C:FRAMe<fr>:FLD<fl>:LABel? 1887
BUS<b>:I3C:FRAMe<fr>:FLD<fl>:STATe? 1887
BUS<b>:I3C:FRAMe<fr>:FLD<fl>:VALue? 1887

BUS<b>:I3C:FRAMe<fr>:FLDCount?....1883
BUS<b>:I3C:FRAMe<fr>:RWBit?....1889
BUS<b>:I3C:FRAMe<fr>:RWBStart?....1884
BUS<b>:I3C:FRAMe<fr>:STARt?....1884
BUS<b>:I3C:FRAMe<fr>:STATus?....1884
BUS<b>:I3C:FRAMe<fr>:STOP?....1885
BUS<b>:I3C:FRAMe<fr>:SYMBol?....1885
BUS<b>:I3C:FRAMe<fr>:TYPE?....1889
BUS<b>:I3C:MINGap:SELect....1877
BUS<b>:I3C:MINGap:WIDTh....1877
BUS<b>:I3C:SCL:HYSTeresis....1876
BUS<b>:I3C:SCL:SOURce....1875
BUS<b>:I3C:SCL:THReshold....1875
BUS<b>:I3C:SDA:HYSTeresis....1876
BUS<b>:I3C:SDA:SOURce....1876
BUS<b>:I3C:SDA:THReshold....1876
BUS<b>:LIN:BITRate....2018
BUS<b>:LIN:DATA:SOURce....2017
BUS<b>:LIN:DATA:THReshold....2017
BUS<b>:LIN:FCOunt?....2028
BUS<b>:LIN:FRAMe<fr>:BITRate?....2033
BUS<b>:LIN:FRAMe<fr>:BYTE<o>:STATe?....2033
BUS<b>:LIN:FRAMe<fr>:BYTE<o>:VALue?....2034
BUS<b>:LIN:FRAMe<fr>:CSSTate?....2032
BUS<b>:LIN:FRAMe<fr>:CSValue?....2033
BUS<b>:LIN:FRAMe<fr>:DATA?....2030
BUS<b>:LIN:FRAMe<fr>:IDPValue?....2031
BUS<b>:LIN:FRAMe<fr>:IDSTate?....2031
BUS<b>:LIN:FRAMe<fr>:IDValue?....2031
BUS<b>:LIN:FRAMe<fr>:SDATa?....2029
BUS<b>:LIN:FRAMe<fr>:SDEXport?....2029
BUS<b>:LIN:FRAMe<fr>:STARt?....2029
BUS<b>:LIN:FRAMe<fr>:STATus?....2028
BUS<b>:LIN:FRAMe<fr>:STOP?....2029
BUS<b>:LIN:FRAMe<fr>:SYMBol?....2029
BUS<b>:LIN:FRAMe<fr>:SYSTate?....2032
BUS<b>:LIN:FRAMe<fr>:VERSion?....2030
BUS<b>:LIN:POLarity....2019
BUS<b>:LIN:STANdard....2019
BUS<b>:LIN:TECHnology....2018
BUS<b>:MDIO:CLOCk:SOURce....2402
BUS<b>:MDIO:CLOCk:THReshold:HIGH....2403
BUS<b>:MDIO:CLOCk:THReshold:LOW....2403
BUS<b>:MDIO:COUPling....2404
BUS<b>:MDIO:DATA:SOURce....2402
BUS<b>:MDIO:DATA:THReshold:HIGH....2403
BUS<b>:MDIO:DATA:THReshold:LOW....2404
BUS<b>:MDIO:PRESet....2404
BUS<b>:MDIO:WCOunt?....2408
BUS<b>:MDIO:WORD<w>:DATA?....2408

BUS<b>:MDIO:WORD<w>:PHYS? 2408
BUS<b>:MDIO:WORD<w>:REGI? 2409
BUS<b>:MDIO:WORD<w>:ST? 2409
BUS<b>:MDIO:WORD<w>:STARt? 2409
BUS<b>:MDIO:WORD<w>:STATe? 2410
BUS<b>:MDIO:WORD<w>:STOP? 2410
BUS<b>:MDIO:WORD<w>:SYMBol? 2411
BUS<b>:MDIO:WORD<w>:TYPE? 2411
BUS<b>:MILStd:MAXResponse:BITS 2049
BUS<b>:MILStd:MAXResponse:SELect 2049
BUS<b>:MILStd:MINGap:BITS 2050
BUS<b>:MILStd:MINGap:SELect 2050
BUS<b>:MILStd:POLarity 2050
BUS<b>:MILStd:PRESet 2050
BUS<b>:MILStd:SOURce 2049
BUS<b>:MILStd:THReshold:HIGH 2051
BUS<b>:MILStd:THReshold:LOW 2051
BUS<b>:MILStd:WCOunt? 2065
BUS<b>:MILStd:WORD<w>:DATA? 2065
BUS<b>:MILStd:WORD<w>:INFO? 2065
BUS<b>:MILStd:WORD<w>:RTADdress? 2066
BUS<b>:MILStd:WORD<w>:STARt? 2066
BUS<b>:MILStd:WORD<w>:STATus? 2066
BUS<b>:MILStd:WORD<w>:STOP? 2067
BUS<b>:MILStd:WORD<w>:SYMBol? 2067
BUS<b>:MILStd:WORD<w>:TYPE? 2067
BUS<b>:MPHY:DLANes 2278
BUS<b>:MPHY:DONE:SOURce 2279
BUS<b>:MPHY:DONE:THReshold 2279
BUS<b>:MPHY:DTHRee:SOURce 2279
BUS<b>:MPHY:DTHRee:THReshold 2279
BUS<b>:MPHY:DTWO:SOURce 2279
BUS<b>:MPHY:DTWO:THReshold 2279
BUS<b>:MPHY:DZERo:SOURce 2279
BUS<b>:MPHY:DZERo:THReshold 2279
BUS<b>:MPHY:RESult:FCOunt? 2300
BUS<b>:MPHY:RESult:FRAMe<fr>:CCOunt? 2300
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:DATA? 2300
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:FVAL? 2302
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STARt? 2301
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STATe? 2302
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:STOP? 2301
BUS<b>:MPHY:RESult:FRAMe<fr>:CELL<ce>:TYPE? 2302
BUS<b>:MPHY:RESult:FRAMe<fr>:DATA? 2303
BUS<b>:MPHY:RESult:FRAMe<fr>:FTYPe? 2298
BUS<b>:MPHY:RESult:FRAMe<fr>:INFO? 2303
BUS<b>:MPHY:RESult:FRAMe<fr>:NAME? 2298
BUS<b>:MPHY:RESult:FRAMe<fr>:SSFT? 2303
BUS<b>:MPHY:RESult:FRAMe<fr>:STARt? 2304
BUS<b>:MPHY:RESult:FRAMe<fr>:STATe? 2299

BUS<b>:MPHY:RESult:FRAMe<fr>:STOP? 2304
BUS<b>:MPHY:SCRMode 2280
BUS<b>:MPHY:SMLanes 2281
BUS<b>:MPHY:THCoupling 2280
BUS<b>:MPHY:THPReset 2280
BUS<b>:MPHY:VARiant 2278
BUS<b>:NEWList 1835
BUS<b>:PARallel:BIT<n>:DESKew 2628
BUS<b>:PARallel:BIT<n>:LABel 2628
BUS<b>:PARallel:BIT<n>[:STATe] 2625
BUS<b>:PARallel:CLEar 2631
BUS<b>:PARallel:CLOCk 2631
BUS<b>:PARallel:CLON 2630
BUS<b>:PARallel:CLSLope 2631
BUS<b>:PARallel:DATA:FORMat 2629
BUS<b>:PARallel:DATA:FORMat 2646
BUS<b>:PARallel:DATA:HEADer? 2647
BUS<b>:PARallel:DATA[:VALues]? 2647
BUS<b>:PARallel:DECTable:COUNt? 2632
BUS<b>:PARallel:DECTable:DATA? 2632
BUS<b>:PARallel:DECTable:SHOW 2631
BUS<b>:PARallel:DESoffset 2628
BUS<b>:PARallel:DISPlay:BTYP 2630
BUS<b>:PARallel:DISPlay:SHBU 2630
BUS<b>:PARallel:DISPlay:SHDI 2629
BUS<b>:PARallel:HYSTeresis<n> 2627
BUS<b>:PARallel:STATe 2625
BUS<b>:PARallel:TECHnology 2626
BUS<b>:PARallel:THCoupling 2627
BUS<b>:PARallel:THReshold<n> 2626
BUS<b>:PCIE:DFE:AUTO 2553
BUS<b>:PCIE:DFE:COEFficient 2553
BUS<b>:PCIE:DFE:ENBLe 2554
BUS<b>:PCIE:DFE:TCONt 2554
BUS<b>:PCIE:DSCRambling 2547
BUS<b>:PCIE:FIDLe 2547
BUS<b>:PCIE:GEN 2547
BUS<b>:PCIE:LNKW 2548
BUS<b>:PCIE:LONE:SOURce 2548
BUS<b>:PCIE:LONE:THRHigh 2548
BUS<b>:PCIE:LONE:THRLow 2549
BUS<b>:PCIE:LTHRee:SOURce 2548
BUS<b>:PCIE:LTHRee:THRHigh 2548
BUS<b>:PCIE:LTHRee:THRLow 2549
BUS<b>:PCIE:LTWO:SOURce 2548
BUS<b>:PCIE:LTWO:THRHigh 2548
BUS<b>:PCIE:LTWO:THRLow 2549
BUS<b>:PCIE:LZER:SOURce 2548
BUS<b>:PCIE:LZER:THRHigh 2548
BUS<b>:PCIE:LZER:THRLow 2549

BUS<b>:PCIE:RESult:PACKet<pa>:ADDR? 2569
BUS<b>:PCIE:RESult:PACKet<pa>:BITRate? 2576
BUS<b>:PCIE:RESult:PACKet<pa>:CPID? 2569
BUS<b>:PCIE:RESult:PACKet<pa>:CPS? 2569
BUS<b>:PCIE:RESult:PACKet<pa>:DATA? 2570
BUS<b>:PCIE:RESult:PACKet<pa>:DFC? 2570
BUS<b>:PCIE:RESult:PACKet<pa>:FCOunt? 2570
BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:FVAL? 2570
BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:STATus? 2571
BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:TYPE? 2572
BUS<b>:PCIE:RESult:PACKet<pa>:FLD<fl>:VAL? 2572
BUS<b>:PCIE:RESult:PACKet<pa>:HFC? 2572
BUS<b>:PCIE:RESult:PACKet<pa>:LEN? 2573
BUS<b>:PCIE:RESult:PACKet<pa>:RQID? 2573
BUS<b>:PCIE:RESult:PACKet<pa>:SEQN? 2573
BUS<b>:PCIE:RESult:PACKet<pa>:STARt? 2574
BUS<b>:PCIE:RESult:PACKet<pa>:STATe? 2574
BUS<b>:PCIE:RESult:PACKet<pa>:STOP? 2574
BUS<b>:PCIE:RESult:PACKet<pa>:TAG? 2575
BUS<b>:PCIE:RESult:PACKet<pa>:TYPE? 2575
BUS<b>:PCIE:RESult:PCOunt? 2576
BUS<b>:PCIE:SMLanes 2549
BUS<b>:RESult 1834
BUS<b>:RFFE:CLOCk:SOURce 2211
BUS<b>:RFFE:CLOCk:THReshold:HIGH 2212
BUS<b>:RFFE:CLOCk:THReshold:LOW 2213
BUS<b>:RFFE:DATA:SOURce 2211
BUS<b>:RFFE:DATA:THReshold:HIGH 2212
BUS<b>:RFFE:DATA:THReshold:LOW 2212
BUS<b>:RFFE:FCOunt? 2226
BUS<b>:RFFE:GFILter 2213
BUS<b>:RFFE:GFWidth 2213
BUS<b>:RFFE:MINGap:SELect 2213
BUS<b>:RFFE:MINGap:TIME 2214
BUS<b>:RFFE:PRESet 2211
BUS<b>:RFFE:RDMD 2214
BUS<b>:RFFE:SEQuence<se>:ADDRess? 2228
BUS<b>:RFFE:SEQuence<se>:BCOunt? 2229
BUS<b>:RFFE:SEQuence<se>:BYTE<o>:NAME? 2231
BUS<b>:RFFE:SEQuence<se>:BYTE<o>:STATe? 2232
BUS<b>:RFFE:SEQuence<se>:BYTE<o>:VALue? 2232
BUS<b>:RFFE:SEQuence<se>:DATA? 2229
BUS<b>:RFFE:SEQuence<se>:PADone? 2230
BUS<b>:RFFE:SEQuence<se>:PADZero? 2230
BUS<b>:RFFE:SEQuence<se>:PCTRl? 2230
BUS<b>:RFFE:SEQuence<se>:RBTRate? 2231
BUS<b>:RFFE:SEQuence<se>:SADD? 2228
BUS<b>:RFFE:SEQuence<se>:STARt? 2227
BUS<b>:RFFE:SEQuence<se>:STATe? 2227
BUS<b>:RFFE:SEQuence<se>:STOP? 2227

BUS<b>:RFFE:SEQuence<se>:SYMBol?....2229
BUS<b>:RFFE:SEQuence<se>:TYPE?....2227
BUS<b>:RFFE:SEQuence<se>:WBTRate?....2231
BUS<b>:RFFE:SEQuence<se>:WCOunt?....2231
BUS<b>:RFFE:VERSion....2214
BUS<b>:SETReflevels....1834
BUS<b>:SPI:BORDer....1904
BUS<b>:SPI:FCOunt?....1912
BUS<b>:SPI:FRAMe<fr>:BITRate?....1913
BUS<b>:SPI:FRAMe<fr>:COUNt?....1912
BUS<b>:SPI:FRAMe<fr>:DATA?....1912
BUS<b>:SPI:FRAMe<fr>:STARt?....1914
BUS<b>:SPI:FRAMe<fr>:STATus?....1913
BUS<b>:SPI:FRAMe<fr>:STOP?....1914
BUS<b>:SPI:FRAMe<fr>:WCOunt?....1914
BUS<b>:SPI:FRAMe<fr>:WORD<w>:FMISo?....1916
BUS<b>:SPI:FRAMe<fr>:WORD<w>:FMOSi?....1917
BUS<b>:SPI:FRAMe<fr>:WORD<w>:MISO?....1915
BUS<b>:SPI:FRAMe<fr>:WORD<w>:MOSI?....1916
BUS<b>:SPI:FRAMe<fr>:WORD<w>:STARt?....1915
BUS<b>:SPI:FRAMe<fr>:WORD<w>:STOP?....1915
BUS<b>:SPI:FRCondition....1907
BUS<b>:SPI:MISO:POLarity....1906
BUS<b>:SPI:MISO:SOURce....1905
BUS<b>:SPI:MISO:THReshold....1907
BUS<b>:SPI:MOSI:POLarity....1907
BUS<b>:SPI:MOSI:SOURce....1906
BUS<b>:SPI:MOSI:THReshold....1907
BUS<b>:SPI:SCLK:SOURce....1904
BUS<b>:SPI:SCLK:THReshold....1907
BUS<b>:SPI:SSELect:POLarity....1905
BUS<b>:SPI:SSELect:SOURce....1905
BUS<b>:SPI:SSELect:THReshold....1907
BUS<b>:SPI:TIMeout....1908
BUS<b>:SPI:WSIZe....1904
BUS<b>:SWIRe:BPOSition....2528
BUS<b>:SWIRe:COUPling....2530
BUS<b>:SWIRe:DATA:HYSTeresis....2528
BUS<b>:SWIRe:DATA:SOURce....2528
BUS<b>:SWIRe:DATA:THReshold....2529
BUS<b>:SWIRe:MGAP....2529
BUS<b>:SWIRe:MINGap....2529
BUS<b>:SWIRe:PRESet....2531
BUS<b>:SWIRe:RESults:FCOunt?....2535
BUS<b>:SWIRe:RESults:FRAMe<fr>:DATA?....2535
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:FVAL?....2537
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STARt?....2538
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STATus?....2538
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:STOP?....2539
BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:TYPE?....2539

BUS<b>:SWIRe:RESults:FRAMe<fr>:FLD<fl>:VAL? 2539
BUS<b>:SWIRe:RESults:FRAMe<fr>:STARt? 2536
BUS<b>:SWIRe:RESults:FRAMe<fr>:STATe? 2536
BUS<b>:SWIRe:RESults:FRAMe<fr>:STOP? 2536
BUS<b>:SWIRe:RESults:FRAMe<fr>:TYPE? 2537
BUS<b>:SWIRe:STRBe:HYSTeresis 2529
BUS<b>:SWIRe:STRBe:SOURce 2530
BUS<b>:SWIRe:STRBe:THReshold 2530
BUS<b>:SWIRe:SYSLect 2530
BUS<b>:SYMBols 1835
BUS<b>:TBTO:ATTN 2177
BUS<b>:TBTO:FDAM 2178
BUS<b>:TBTO:FDAP 2178
BUS<b>:TBTO:FDIF 2178
BUS<b>:TBTO:FTYP 2178
BUS<b>:TBTO:MODE 2180
BUS<b>:TBTO:POLarity 2180
BUS<b>:TBTO:RDAM 2179
BUS<b>:TBTO:RDAP 2179
BUS<b>:TBTO:RDIF 2179
BUS<b>:TBTO:RESult:FCOunt? 2181
BUS<b>:TBTO:RESult:FRAMe<fr>:BITRate? 2181
BUS<b>:TBTO:RESult:FRAMe<fr>:CRC? 2181
BUS<b>:TBTO:RESult:FRAMe<fr>:DATA? 2182
BUS<b>:TBTO:RESult:FRAMe<fr>:DESTaddress? 2182
BUS<b>:TBTO:RESult:FRAMe<fr>:DSYMbol? 2182
BUS<b>:TBTO:RESult:FRAMe<fr>:FTYPe? 2183
BUS<b>:TBTO:RESult:FRAMe<fr>:NUMWords? 2183
BUS<b>:TBTO:RESult:FRAMe<fr>:SRCaddress? 2184
BUS<b>:TBTO:RESult:FRAMe<fr>:SSYMbol? 2184
BUS<b>:TBTO:RESult:FRAMe<fr>:STARt? 2184
BUS<b>:TBTO:RESult:FRAMe<fr>:STATe? 2184
BUS<b>:TBTO:RESult:FRAMe<fr>:STOP? 2185
BUS<b>:TBTO:RESult:FRAMe<fr>:TYPE? 2185
BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:TYPE? 2186
BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:VALue? 2186
BUS<b>:TBTO:RESult:FRAMe<fr>:WORD<w>:VSTR? 2186
BUS<b>:TBTO:RTYP 2179
BUS<b>:THReshold 1835
BUS<b>:TNOS:FCOunt? 2127
BUS<b>:TNOS:FRAMe<fr>:BITRate? 2128
BUS<b>:TNOS:FRAMe<fr>:CRC? 2129
BUS<b>:TNOS:FRAMe<fr>:DTADdress? 2130
BUS<b>:TNOS:FRAMe<fr>:DTSYmbol? 2130
BUS<b>:TNOS:FRAMe<fr>:FCRC? 2130
BUS<b>:TNOS:FRAMe<fr>:FDATa? 2130
BUS<b>:TNOS:FRAMe<fr>:FDTaddress? 2131
BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:FVALue? 2128
BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:LABel? 2128
BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:STATe? 2128

BUS<b>:TNOS:FRAMe<fr>:FLD<fl>:VALue? 2129
BUS<b>:TNOS:FRAMe<fr>:FLDCount? 2127
BUS<b>:TNOS:FRAMe<fr>:FSRaddress? 2131
BUS<b>:TNOS:FRAMe<fr>:FTPLength? 2131
BUS<b>:TNOS:FRAMe<fr>:SRADdress? 2131
BUS<b>:TNOS:FRAMe<fr>:SRSYmbol? 2132
BUS<b>:TNOS:FRAMe<fr>:STARt? 2132
BUS<b>:TNOS:FRAMe<fr>:STATus? 2132
BUS<b>:TNOS:FRAMe<fr>:STOP? 2133
BUS<b>:TNOS:FRAMe<fr>:TPLength? 2133
BUS<b>:TNOS:FRAMe<fr>:TYPE? 2134
BUS<b>:TNOS:SOURce 2121
BUS<b>:TNOS:THReshold:HYSTeresis 2122
BUS<b>:TNOS:THReshold:LOWer 2121
BUS<b>:TNOS:THReshold:UPPer 2121
BUS<b>:TYPE 1833
BUS<b>:TYPE 1839
BUS<b>:UART:BAUDrate 1926
BUS<b>:UART:BITRate 1926
BUS<b>:UART:EWORd 1929
BUS<b>:UART:PACKets 1928
BUS<b>:UART:PARity 1927
BUS<b>:UART:POLarity 1927
BUS<b>:UART:RX:SOURce 1924
BUS<b>:UART:RX:THReshold 1925
BUS<b>:UART:SBIT 1928
BUS<b>:UART:SSIZe 1928
BUS<b>:UART:TECHnology 1926
BUS<b>:UART:TOUT 1929
BUS<b>:UART:TX:SOURce 1925
BUS<b>:UART:TX:THReshold 1925
BUS<b>:UART:WORD<w>:BITRate? 1933
BUS<b>:UART:WORD<w>:COUNt? 1933
BUS<b>:UART:WORD<w>:RXValue? 1933
BUS<b>:UART:WORD<w>:SOURce? 1934
BUS<b>:UART:WORD<w>:STARt? 1934
BUS<b>:UART:WORD<w>:STATe? 1934
BUS<b>:UART:WORD<w>:TXValue? 1933
BUS<b>:USB:DIFFerential:SOURce 2419
BUS<b>:USB:DIFFerential:THReshold 2420
BUS<b>:USB:DMINus:SOURce 2419
BUS<b>:USB:DMINus:THReshold 2420
BUS<b>:USB:DPLus:SOURce 2419
BUS<b>:USB:DPLus:THReshold 2419
BUS<b>:USB:PACKet<pa>:ADDRess? 2437
BUS<b>:USB:PACKet<pa>:CRC? 2437
BUS<b>:USB:PACKet<pa>:DATA? 2438
BUS<b>:USB:PACKet<pa>:ENDPoint? 2438
BUS<b>:USB:PACKet<pa>:ET? 2438
BUS<b>:USB:PACKet<pa>:FRAMe? 2439

BUS<b>:USB:PACKet<pa>:PID? 2436
BUS<b>:USB:PACKet<pa>:PORT? 2439
BUS<b>:USB:PACKet<pa>:SC? 2439
BUS<b>:USB:PACKet<pa>:SEU? 2440
BUS<b>:USB:PACKet<pa>:STARt? 2440
BUS<b>:USB:PACKet<pa>:STATus? 2440
BUS<b>:USB:PACKet<pa>:STOP? 2441
BUS<b>:USB:PCOunt? 2441
BUS<b>:USB:TECHnology 2418
BUS<b>:USBPd:DETail 2502
BUS<b>:USBPd:HYSTeresis 2502
BUS<b>:USBPd:RESult:FCOunt? 2511
BUS<b>:USBPd:RESult:FRAMe<fr>:DATA? 2511
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:FVAL? 2512
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STARt? 2512
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STATus? 2512
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:STOP? 2513
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:TYPE? 2513
BUS<b>:USBPd:RESult:FRAMe<fr>:FLD<fl>:VAL? 2513
BUS<b>:USBPd:RESult:FRAMe<fr>:INFO? 2514
BUS<b>:USBPd:RESult:FRAMe<fr>:STARt? 2514
BUS<b>:USBPd:RESult:FRAMe<fr>:STATe? 2514
BUS<b>:USBPd:RESult:FRAMe<fr>:STOP? 2515
BUS<b>:USBPd:RESult:FRAMe<fr>:TYPE? 2515
BUS<b>:USBPd:SOURce 2502
BUS<b>:USBPd:THRBottom 2503
BUS<b>:USBPd:THReshold 2503
BUS<b>:USBPd:THRMid 2503
BUS<b>:USBPd:THRTop 2504
BUS<b>:USBThree:DFE:COEFficient 2466
BUS<b>:USBThree:DFE:ENBLe 2466
BUS<b>:USBThree:DFE:ESTCoeff 2467
BUS<b>:USBThree:DFE:TCONt 2467
BUS<b>:USBThree:POLarity 2463
BUS<b>:USBThree:RESult:FCOunt? 2486
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:FVAL? 2490
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STARt? 2489
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STATus? 2488
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:STOP? 2489
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:TYPE? 2488
BUS<b>:USBThree:RESult:FRAMe<fr>:FLD<fl>:VAL? 2489
BUS<b>:USBThree:RESult:FRAMe<fr>:INFO? 2486
BUS<b>:USBThree:RESult:FRAMe<fr>:STARt? 2487
BUS<b>:USBThree:RESult:FRAMe<fr>:STATe? 2487
BUS<b>:USBThree:RESult:FRAMe<fr>:STOP? 2488
BUS<b>:USBThree:RESult:FRAMe<fr>:TYPE? 2486
BUS<b>:USBThree:SCRMode 2464
BUS<b>:USBThree:SOURce 2462
BUS<b>:USBThree:THRHigh 2463
BUS<b>:USBThree:THRLow 2463

BUS<b>:USBThree:TYPE ... 2464
BUS<b>:ZCOupling ... 1836
BUS<b>[:STATe] ... 1833
CALCulate:MATH<m>:ARIThmetics ... 1566
CALCulate:MATH<m>:DATA:HEADer? ... 1568
CALCulate:MATH<m>:DATA:HEADer? ... 1704
CALCulate:MATH<m>:DATA:STYPe? ... 1568
CALCulate:MATH<m>:DATA:STYPe? ... 1703
CALCulate:MATH<m>:DATA[:VALues]? ... 1569
CALCulate:MATH<m>:DATA[:VALues]? ... 1704
CALCulate:MATH<m>:ENVSelection ... 1565
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:ADJusted? ... 1692
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:AUTO ... 1693
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution]:RATio ... 1693
CALCulate:MATH<m>:FFT:BANDwidth[:RESolution][:VALue] ... 1693
CALCulate:MATH<m>:FFT:CFRequency ... 1691
CALCulate:MATH<m>:FFT:COUPled:WITH<n> ... 1703
CALCulate:MATH<m>:FFT:FRAMe:ARIThmetics ... 1695
CALCulate:MATH<m>:FFT:FRAMe:COVerage? ... 1695
CALCulate:MATH<m>:FFT:FRAMe:MAXCount ... 1695
CALCulate:MATH<m>:FFT:FRAMe:OFACtor ... 1696
CALCulate:MATH<m>:FFT:FULLspan ... 1691
CALCulate:MATH<m>:FFT:GATE:ABSolute:STARt ... 1697
CALCulate:MATH<m>:FFT:GATE:ABSolute:STOP ... 1697
CALCulate:MATH<m>:FFT:GATE:COUPling ... 1696
CALCulate:MATH<m>:FFT:GATE:MODE ... 1698
CALCulate:MATH<m>:FFT:GATE:RELative:STARt ... 1698
CALCulate:MATH<m>:FFT:GATE:RELative:STOP ... 1698
CALCulate:MATH<m>:FFT:GATE:SHOW ... 1699
CALCulate:MATH<m>:FFT:GATE:ZCOupling ... 1699
CALCulate:MATH<m>:FFT:GATE:ZDIagram ... 1699
CALCulate:MATH<m>:FFT:GATE[:STATe] ... 1700
CALCulate:MATH<m>:FFT:LOGScale ... 1690
CALCulate:MATH<m>:FFT:MAGNitude:LEVel ... 1700
CALCulate:MATH<m>:FFT:MAGNitude:RANGe ... 1700
CALCulate:MATH<m>:FFT:MAGNitude:SCALe ... 1700
CALCulate:MATH<m>:FFT:PHASe:SCALe ... 1702
CALCulate:MATH<m>:FFT:PHASe:SUPPression ... 1702
CALCulate:MATH<m>:FFT:PHASe:THReshold ... 1702
CALCulate:MATH<m>:FFT:PHASe:UNWRap ... 1703
CALCulate:MATH<m>:FFT:SPAN ... 1692
CALCulate:MATH<m>:FFT:SPECtrogram:CMODe ... 1705
CALCulate:MATH<m>:FFT:SPECtrogram:STATe ... 1706
CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:POSition ... 1706
CALCulate:MATH<m>:FFT:SPECtrogram:TIMeline<n>:STATe ... 1707
CALCulate:MATH<m>:FFT:STARt ... 1690
CALCulate:MATH<m>:FFT:STOP ... 1691
CALCulate:MATH<m>:FFT:TYPE ... 1692
CALCulate:MATH<m>:FFT:USEColtab ... 1705
CALCulate:MATH<m>:FFT:WINDow:TYPE ... 1694

CALCulate:MATH<m>:STATe ... 1565
CALCulate:MATH<m>:VERTical:MAXimum ... 1568
CALCulate:MATH<m>:VERTical:OFFSet ... 1566
CALCulate:MATH<m>:VERTical:RANGe ... 1567
CALCulate:MATH<m>:VERTical:SCALe ... 1567
CALCulate:MATH<m>[:EXPRession][:DEFine] ... 1564
CALibration:DATE? ... 1392
CALibration:DATE? ... 2845
CALibration:RESult? ... 1392
CALibration:RESult? ... 2845
CALibration:TIME? ... 1392
CALibration:TIME? ... 2845
CDR:HARDware:BITRate ... 1496
CDR:HARDware:BREStimate ... 1495
CDR:HARDware:ESLope ... 1496
CDR:HARDware:PRSStandard ... 1511
CDR:HARDware:SAMTime ... 1496
CDR:SOFTware<m>:ESSRate:CONTinuous ... 2741
CDR:SOFTware<sw>:ALGorithm ... 2739
CDR:SOFTware<sw>:BITRate ... 2740
CDR:SOFTware<sw>:CFRequency:CRSYnc[:ENABle] ... 2740
CDR:SOFTware<sw>:ESLope ... 2741
CDR:SOFTware<sw>:ESSRate:SOURce ... 2741
CDR:SOFTware<sw>:ESSRate:SREStimate ... 2742
CDR:SOFTware<sw>:PLL:BWIDth ... 2742
CDR:SOFTware<sw>:PLL:DAMPing ... 2743
CDR:SOFTware<sw>:PLL:ORDer ... 2742
CDR:SOFTware<sw>:PLL:RELBwidth ... 2743
CDR:SOFTware<sw>:PRSStandard ... 2743
CDR:SOFTware<sw>:RESults ... 2744
CDR:SOFTware<sw>:SYMRate ... 2744
CDR:SOFTware<sw>:SYNC ... 2744
CHANnel<ch>:BANDwidth ... 1407
CHANnel<ch>:COUPling ... 1408
CHANnel<ch>:CPLing ... 1408
CHANnel<ch>:DIGFilter:CUToff ... 1463
CHANnel<ch>:DIGFilter:STATe ... 1463
CHANnel<ch>:EATScale ... 1418
CHANnel<ch>:EATTenuation ... 1418
CHANnel<ch>:EFRontend:ALIGn:FILE ... 2841
CHANnel<ch>:EFRontend:ALIGn:STATe ... 2841
CHANnel<ch>:EFRontend:AMPLmode ... 2828
CHANnel<ch>:EFRontend:ATTenuation:AUTO ... 2828
CHANnel<ch>:EFRontend:ATTenuation:STEP:LIST? ... 2829
CHANnel<ch>:EFRontend:ATTenuation[:VALue] ... 2829
CHANnel<ch>:EFRontend:CONNection:CONFig ... 2824
CHANnel<ch>:EFRontend:CONNection:CSTate? ... 2824
CHANnel<ch>:EFRontend:CONNection:ERRor? ... 2825
CHANnel<ch>:EFRontend:CONNection:STATe ... 2825
CHANnel<ch>:EFRontend:EXTComponent<n>:FMAXimum? ... 2842

CHANnel<ch>:EFRontend:EXTComponent<n>:FMINimum? 2842
CHANnel<ch>:EFRontend:EXTComponent<n>:GAIN? 2843
CHANnel<ch>:EFRontend:EXTComponent<n>:PARTno? 2843
CHANnel<ch>:EFRontend:EXTComponent<n>:TYPE? 2843
CHANnel<ch>:EFRontend:FREQuency:BAND:COUNt? 2829
CHANnel<ch>:EFRontend:FREQuency:BAND<n>:LIST? 2830
CHANnel<ch>:EFRontend:FREQuency:BAND<n>:LOWer? 2830
CHANnel<ch>:EFRontend:FREQuency:BAND<n>:UPPer? 2830
CHANnel<ch>:EFRontend:FREQuency:BCONfig:AUTO 2831
CHANnel<ch>:EFRontend:FREQuency:BCONfig:COUNt? 2831
CHANnel<ch>:EFRontend:FREQuency:BCONfig:IFRange? 2831
CHANnel<ch>:EFRontend:FREQuency:BCONfig:LIST? 2831
CHANnel<ch>:EFRontend:FREQuency:BCONfig:RFRange? 2832
CHANnel<ch>:EFRontend:FREQuency:BCONfig:SELect 2832
CHANnel<ch>:EFRontend:FREQuency:IFBWidth:LIMit? 2833
CHANnel<ch>:EFRontend:FREQuency:IFRequency:MAX? 2836
CHANnel<ch>:EFRontend:FREQuency:IFRequency:MIN? 2836
CHANnel<ch>:EFRontend:FREQuency:IFRequency:SIDeband? 2837
CHANnel<ch>:EFRontend:FREQuency:IFRequency[:VALue]? 2833
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:FREQuency? 2834
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:INPut:FREQuency? 2834
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:MODE 2834
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:FREQuency? 2835
CHANnel<ch>:EFRontend:FREQuency:LOSCillator:OUTPut:STATe 2835
CHANnel<ch>:EFRontend:FREQuency:REFerence:LEVel? 2838
CHANnel<ch>:EFRontend:FREQuency:REFerence:LIST? 2837
CHANnel<ch>:EFRontend:FREQuency:REFerence[:VALue] 2837
CHANnel<ch>:EFRontend:FREQuency:RFRequency:MAX? 2838
CHANnel<ch>:EFRontend:FREQuency:RFRequency:MIN? 2838
CHANnel<ch>:EFRontend:FREQuency:RFRequency:RANGe? 2839
CHANnel<ch>:EFRontend:FREQuency:RFRequency[:VALue] 2839
CHANnel<ch>:EFRontend:GAIN? 2839
CHANnel<ch>:EFRontend:IDN? 2826
CHANnel<ch>:EFRontend:IFRequency:ATTenuation? 2840
CHANnel<ch>:EFRontend:RFConnector 2840
CHANnel<ch>:EFRontend:RFINput:LEVel 2840
CHANnel<ch>:EFRontend:TYPE:LIST? 2826
CHANnel<ch>:EFRontend:UPDate 2841
CHANnel<ch>:EXPortstate 1785
CHANnel<ch>:FILDesign[:TYPE] 1408
CHANnel<ch>:GND 1409
CHANnel<ch>:IMPedance 1409
CHANnel<ch>:INVert 1409
CHANnel<ch>:IQ:CFRequency 2685
CHANnel<ch>:IQ:DATA:HEADer? 2688
CHANnel<ch>:IQ:DATA[:VALues]? 2687
CHANnel<ch>:IQ:INPMode 2683
CHANnel<ch>:IQ:INPType 2683
CHANnel<ch>:IQ:SBIF 2686
CHANnel<ch>:IQ:SBRF 2686

CHANnel<ch>:IQ:WARNing:MESSage? 2687
CHANnel<ch>:IQ:WARNing[:STATe]? 2687
CHANnel<ch>:OFFSet 1410
CHANnel<ch>:OVERload 1410
CHANnel<ch>:POSition 1411
CHANnel<ch>:RANGe 1411
CHANnel<ch>:SCALe 1412
CHANnel<ch>:SKEW:EXTended 1465
CHANnel<ch>:SKEW:MANual 1464
CHANnel<ch>:SKEW:TIME 1465
CHANnel<ch>:STATe 1412
CHANnel<ch>[:WAVeform<wf>]:ARIThmetics 1405
CHANnel<ch>[:WAVeform<wf>]:DATA:HEADer? 1413
CHANnel<ch>[:WAVeform<wf>]:DATA[:VALues]? 1414
CHANnel<ch>[:WAVeform<wf>]:HISTory:CURRent 1577
CHANnel<ch>[:WAVeform<wf>]:HISTory:PLAY 1579
CHANnel<ch>[:WAVeform<wf>]:HISTory:REPLay 1579
CHANnel<ch>[:WAVeform<wf>]:HISTory:STARt 1577
CHANnel<ch>[:WAVeform<wf>]:HISTory:STOP 1578
CHANnel<ch>[:WAVeform<wf>]:HISTory:TPACq 1578
CHANnel<ch>[:WAVeform<wf>]:HISTory:TSABsolute? 1580
CHANnel<ch>[:WAVeform<wf>]:HISTory:TSDate? 1579
CHANnel<ch>[:WAVeform<wf>]:HISTory:TSRelative? 1580
CHANnel<ch>[:WAVeform<wf>]:HISTory:TSRReference? 1580
CHANnel<ch>[:WAVeform<wf>]:HISTory[:STATe] 1576
CHANnel<ch>[:WAVeform<wf>]:TYPE 1405
CHANnel<ch>[:WAVeform<wf>][:STATe] 1404
CURSor<cu>:AOFF 1585
CURSor<cu>:FFT:SETCenter 1594
CURSor<cu>:FFT:TOCenter 1595
CURSor<cu>:FUNCtion 1585
CURSor<cu>:LABel:X<n> 1592
CURSor<cu>:LABel:Y<n> 1592
CURSor<cu>:LABel[:LABel] 1591
CURSor<cu>:MAXimum:LEFT 1595
CURSor<cu>:MAXimum:NEXT 1595
CURSor<cu>:MAXimum:RIGHt 1595
CURSor<cu>:MAXimum[:PEAK] 1595
CURSor<cu>:PEXCursion 1761
CURSor<cu>:SIAD 1592
CURSor<cu>:SOURce 1585
CURSor<cu>:SSOurce 1586
CURSor<cu>:STATe 1584
CURSor<cu>:STYLe 1382
CURSor<cu>:THReshold 1762
CURSor<cu>:TRACking[:STATe] 1588
CURSor<cu>:USSource 1587
CURSor<cu>:X1ENvelope 1590
CURSor<cu>:X1Position 1588
CURSor<cu>:X2ENvelope 1591

CURSor<cu>:X2Position 1588
CURSor<cu>:XCOupling 1589
CURSor<cu>:XDELta:INVerse? 1593
CURSor<cu>:XDELta[:VALue]? 1593
CURSor<cu>:Y1Position 1589
CURSor<cu>:Y2Position 1590
CURSor<cu>:YCOupling 1590
CURSor<cu>:YDELta:SLOPe 1594
CURSor<cu>:YDELta[:VALue]? 1594
DEEMbedding<de>:ADD 2770
DEEMbedding<de>:BANDwidth 2772
DEEMbedding<de>:CASCade:PSELection 2784
DEEMbedding<de>:CCOunt? 2771
DEEMbedding<de>:CMPDelay 2772
DEEMbedding<de>:COMPonent<n>:IDENtical 2779
DEEMbedding<de>:COMPonent<n>:INTPoser:CPONe 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:CPTWo 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:MPONe 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:MPTWo 2782
DEEMbedding<de>:COMPonent<n>:INTPoser:PPONe 2783
DEEMbedding<de>:COMPonent<n>:INTPoser:PPTWo 2783
DEEMbedding<de>:COMPonent<n>:INTPoser:TERMinate 2783
DEEMbedding<de>:COMPonent<n>:IPONe 2780
DEEMbedding<de>:COMPonent<n>:IPTWo 2780
DEEMbedding<de>:COMPonent<n>:LOAD:IMPedance? 2777
DEEMbedding<de>:COMPonent<n>:LOAD:REMProbeload 2777
DEEMbedding<de>:COMPonent<n>:MODE 2776
DEEMbedding<de>:COMPonent<n>:NAME 2775
DEEMbedding<de>:COMPonent<n>:OPONe 2780
DEEMbedding<de>:COMPonent<n>:OPTWo 2780
DEEMbedding<de>:COMPonent<n>:PCOunt? 2776
DEEMbedding<de>:COMPonent<n>:PSONe 2781
DEEMbedding<de>:COMPonent<n>:PSTWo 2781
DEEMbedding<de>:COMPonent<n>:SPFSelection 2781
DEEMbedding<de>:COMPonent<n>:SPFType 2780
DEEMbedding<de>:COMPonent<n>:SPONe 2781
DEEMbedding<de>:COMPonent<n>:SPTWo 2781
DEEMbedding<de>:COMPonent<n>:TYPE 2775
DEEMbedding<de>:COMPonent<n>[:STATe] 2774
DEEMbedding<de>:DELete 2774
DEEMbedding<de>:NAME 2773
DEEMbedding<de>:OPEN 2774
DEEMbedding<de>:PRESet 2773
DEEMbedding<de>:REALtime 2771
DEEMbedding<de>:REMove 2771
DEEMbedding<de>:SAVE 2773
DEEMbedding<de>[:STATe] 2770
DIAGnostic:SERVice:CHANnelcount? 1394
DIAGnostic:SERVice:COMPutername 1363
DIAGnostic:SERVice:FWVersion? 1393

DIAGnostic:SERVice:PARTnumber....1393
DIAGnostic:SERVice:PWD....2846
DIAGnostic:SERVice:SERialnumber?....1393
DIAGnostic:SERVice:STST:EXECute....2845
DIAGnostic:SERVice:STST:STATe?....1392
DIAGnostic:SERVice:STST:STATe?....2846
DIAGnostic:SERVice:WFAModel?....2844
DIAGnostic:SERVice:WFASeries?....2844
DIAGnostic:SERVice:WFAType?....2844
DIFFerential<m>:AOUTput....1460
DIFFerential<m>:BOUTput....1460
DIFFerential<m>:COMMon:OFFSet....1462
DIFFerential<m>:COMMon:POSition....1462
DIFFerential<m>:COMMon:SCALe....1461
DIFFerential<m>:COMMon:STATe....1461
DIFFerential<m>:COUPling....1462
DIFFerential<m>:DIFFerential:OFFSet....1462
DIFFerential<m>:DIFFerential:POSition....1462
DIFFerential<m>:DIFFerential:SCALe....1461
DIFFerential<m>:DIFFerential:STATe....1461
DIFFerential<m>:NSIGnal:STATe....1461
DIFFerential<m>:NSIGnal[:SELect]....1460
DIFFerential<m>:PSIGnal:STATe....1461
DIFFerential<m>:PSIGnal[:SELect]....1460
DIFFerential<m>:STATe....1460
DIGital<m>:DATA:HEADer?....2645
DIGital<m>:DATA[:VALues]?....2646
DIGital<m>:DESKew....2621
DIGital<m>:DISPlay....2622
DIGital<m>:HYSTeresis....2622
DIGital<m>:LABel....2623
DIGital<m>:SIZE....2623
DIGital<m>:TECHnology....2623
DIGital<m>:THCoupling....2624
DIGital<m>:THReshold....2624
DISPlay:CLR....1390
DISPlay:COLor:PALette:ADD....1365
DISPlay:COLor:PALette:COUNt?....1365
DISPlay:COLor:PALette:POINt:ADD....1365
DISPlay:COLor:PALette:POINt:COUNt?....1366
DISPlay:COLor:PALette:POINt:INSert....1365
DISPlay:COLor:PALette:POINt:REMove....1365
DISPlay:COLor:PALette:POINt[:VALue]....1366
DISPlay:COLor:PALette:REMove....1365
DISPlay:COLor:SIGNal<m>:ASSign....1363
DISPlay:COLor:SIGNal<m>:COLor....1363
DISPlay:COLor:SIGNal<m>:PRESet....1364
DISPlay:COLor:SIGNal<m>:USE....1364
DISPlay:DIAGram:CROSshair....1367
DISPlay:DIAGram:FINegrid....1367

DISPlay:DIAGram:GRID....1367
DISPlay:DIAGram:LABels....1367
DISPlay:DIAGram:REName....1372
DISPlay:DIAGram:STYLe....1390
DISPlay:DIAGram:TITLe....1372
DISPlay:DIAGram:XFIXed....1368
DISPlay:DIAGram:YFIXed....1367
DISPlay:EXTended:PORDialogs....1381
DISPlay:EXTended:POSDialogs....1382
DISPlay:GATE:TRANsparency....1373
DISPlay:INTensity....1389
DISPlay:PERSistence:INFinite....1389
DISPlay:PERSistence:RESet....1389
DISPlay:PERSistence:TIME....1389
DISPlay:PERSistence[:STATe]....1388
DISPlay:RESultboxes:CUPosition....1382
DISPlay:RESultboxes:DEPosition....1836
DISPlay:RESultboxes:MEPosition....1384
DISPlay:SIGBar[:STATe]....1373
DISPlay:SIGNal:LABel:ADD....1375
DISPlay:SIGNal:LABel:FONTsize....1374
DISPlay:SIGNal:LABel:HORizontal:ABSolute:POSition....1380
DISPlay:SIGNal:LABel:HORizontal:RELative:POSition....1381
DISPlay:SIGNal:LABel:IDSList?....1377
DISPlay:SIGNal:LABel:POSMode....1374
DISPlay:SIGNal:LABel:REMove....1377
DISPlay:SIGNal:LABel:SHOW....1378
DISPlay:SIGNal:LABel:STATe....1379
DISPlay:SIGNal:LABel:TEXT....1380
DISPlay:SIGNal:LABel:VERTical:ABSolute:POSition....1380
DISPlay:SIGNal:LABel:VERTical:RELative:POSition....1381
DISPlay:TRIGger:LINes....1472
EFRontend:COUNt....2825
EFRontend:CSELect<m>....2825
EFRontend:PRESet....2826
EFRontend:SETup....2826
EXECutable:NAME....1804
EXECutable:PARameter....1805
EXECutable:WDIRectory....1805
EXPort:EYE:DATA?....1793
EXPort:EYE:NAME....1793
EXPort:EYE:SAVE....1793
EXPort:EYE:SELect....1793
EXPort:EYE:SOURce?....1793
EXPort:HISTogram:DATA?....1792
EXPort:HISTogram:INCidence....1791
EXPort:HISTogram:NAME....1792
EXPort:HISTogram:SAVE....1792
EXPort:HISTogram:SELect....1791
EXPort:MEASurement:DATA?....1795

EXPort:MEASurement:NAME....1795
EXPort:MEASurement:SAVE....1795
EXPort:MEASurement:SELect....1794
EXPort:MEASurement:TYPE....1794
EXPort:RESult:DECSymbol....1804
EXPort:RESult:DELimiter....1804
EXPort:WAVeform:CURSorset....1787
EXPort:WAVeform:DISPlayoff....1790
EXPort:WAVeform:DLOGging....1788
EXPort:WAVeform:FASTexport....1790
EXPort:WAVeform:ICDR....1791
EXPort:WAVeform:INCXvalues....1789
EXPort:WAVeform:MEAS....1788
EXPort:WAVeform:MULTichannel....1784
EXPort:WAVeform:NAME....1785
EXPort:WAVeform:RAW....1790
EXPort:WAVeform:SAVE....1786
EXPort:WAVeform:SCOPe....1786
EXPort:WAVeform:SOURce....1783
EXPort:WAVeform:STARt....1786
EXPort:WAVeform:STOP....1787
EXPort:WAVeform:TIMestamps....1789
EXPort:WAVeform:ZOOM....1787
EYE<e>:DISPlay:MODE....2754
EYE<e>:DISPlay:PERSistence:INFinite....2755
EYE<e>:DISPlay:PERSistence:RESet....2755
EYE<e>:DISPlay:PERSistence:STATe....2755
EYE<e>:DISPlay:PERSistence:TIME....2756
EYE<e>:FILTer:BPATtern:CENTer....2762
EYE<e>:FILTer:BPATtern:MODE....2761
EYE<e>:FILTer:BPATtern:PREFix<n>....2762
EYE<e>:FILTer:BPATtern:RESet....2762
EYE<e>:FILTer:BPATtern:SLEFt....2762
EYE<e>:FILTer:BPATtern:SRIGht....2762
EYE<e>:FILTer:BPATtern:SUFFix<n>....2762
EYE<e>:FILTer:DDR:FTYPe....2763
EYE<e>:FILTer:DDR:LENerror....2763
EYE<e>:FILTer:PAMN:BLEVel....2764
EYE<e>:FILTer:PAMN:EMODe....2764
EYE<e>:FILTer:PAMN:SEYE....2764
EYE<e>:FILTer:PAMN:TLEVel....2765
EYE<e>:FILTer:RESet....2763
EYE<e>:FILTer:STATe....2761
EYE<e>:HORizontal:ABSolute:POSition....2747
EYE<e>:HORizontal:ABSolute:RANGe....2747
EYE<e>:HORizontal:UINTerval:POSition....2748
EYE<e>:HORizontal:UINTerval:RANGe....2748
EYE<e>:HORizontal[:UNIT]....2746
EYE<e>:MEASurement:MAXPrecision....2752
EYE<e>:MSLices....2754

EYE<e>:QUALify:GATE:ABSolute:STARt....2757
EYE<e>:QUALify:GATE:ABSolute:STOP....2757
EYE<e>:QUALify:GATE:COUPling....2756
EYE<e>:QUALify:GATE:CURSor....2758
EYE<e>:QUALify:GATE:MODE....2757
EYE<e>:QUALify:GATE:RELative:STARt....2757
EYE<e>:QUALify:GATE:RELative:STOP....2757
EYE<e>:QUALify:GATE:ZDIagram....2758
EYE<e>:QUALify:GATE[:STATe]....2756
EYE<e>:QUALify:SIGNal:CONDition....2759
EYE<e>:QUALify:SIGNal:LSELect....2760
EYE<e>:QUALify:SIGNal:LSLTo....2760
EYE<e>:QUALify:SIGNal:SOURce....2759
EYE<e>:QUALify:SIGNal[:STATe]....2759
EYE<e>:RESult:SLICe<n>:COUNt?....2765
EYE<e>:RESult:SLICe<n>:LPOSition?....2766
EYE<e>:RESult:SLICe<n>[:POSition]?....2766
EYE<e>:RESult:TACQs?....2766
EYE<e>:RESult:TSLices?....2767
EYE<e>:SOURce....2746
EYE<e>:SYMBolrate?....2754
EYE<e>:TIMReference:CDR:SOFTware:SAMTime....2753
EYE<e>:TIMReference:CDR[:SELect]....2751
EYE<e>:TIMReference:CLOCk:EDGE....2748
EYE<e>:TIMReference:CLOCk:FACTor....2748
EYE<e>:TIMReference:CLOCk:FREQuency....2749
EYE<e>:TIMReference:CLOCk:FREStimation....2749
EYE<e>:TIMReference:CLOCk:LEVel....2749
EYE<e>:TIMReference:CLOCk:OFEStimation....2750
EYE<e>:TIMReference:CLOCk:OFFSet....2750
EYE<e>:TIMReference:CLOCk:SOURce....2750
EYE<e>:TIMReference:PROTocol:SELect....2751
EYE<e>:TIMReference[:SOURce]....2751
EYE<e>:VERTical:COUPle....2753
EYE<e>:VERTical:OFFSet....2752
EYE<e>:VERTical:POSition....2752
EYE<e>:VERTical:SCALe....2753
EYE<e>:ZCOupling....2769
EYE<e>:ZDIagram....2769
EYE<e>[:STATe]....2746
EYE<m>:TIMReference:CDR:SOFTware....2751
FORMat:BORDer....1358
FORMat:BORDer....1467
FORMat:BPATtern....1359
FORMat[:DATA]....1357
GENerator:ALIGnment:DC:ABORt....2668
GENerator:ALIGnment:DC:RESult:DATE?....2669
GENerator:ALIGnment:DC:RESult:TIME?....2669
GENerator:ALIGnment:DC:RESult[:STATe]?....2669
GENerator:ALIGnment:DC[:STARt]....2669

GENerator:SYNC[:COMBination] 2671
GENType:STATus[:OPERation]? 2649
GPIB:ADDRess 1360
GPIB:TERMinator 1360
HCOPy:CMAP<m>:DEFault 1798
HCOPy:DESTination<m> 1796
HCOPy:DEVice<m>:INVerse 1797
HCOPy:DEVice<m>:LANGuage 1797
HCOPy:IMMediate<m> 1799
HCOPy:IMMediate<m>:NEXT 1800
HCOPy:ISBA 1799
HCOPy:SSD 1798
HCOPy:STABs 1800
HCOPy:WBKG 1798
HDEFinition:BWIDth 1466
HDEFinition:RESolution? 1466
HDEFinition:STATe 1466
IQ:BWIDth? 2682
IQ:INSRate 2683
IQ:PAIR 2684
IQ:RBWidth 2684
IQ:RLENgth 2684
IQ:SRATe 2685
IQ:STATe 2685
LANE<m>:CMPO 2787
LANE<m>:COMFilter:INCLude:DEEMbedding 2787
LANE<m>:COMFilter:INCLude:EMBedding 2788
LANE<m>:COMFilter:INCLude:TFFE 2788
LANE<m>:EMBedding:ADD 2794
LANE<m>:EMBedding:BANDwidth 2795
LANE<m>:EMBedding:CASCade:PSELection 2795
LANE<m>:EMBedding:CCOunt? 2796
LANE<m>:EMBedding:CMPDelay 2796
LANE<m>:EMBedding:COMPonent<n>:IDENtical 2796
LANE<m>:EMBedding:COMPonent<n>:IPONe 2797
LANE<m>:EMBedding:COMPonent<n>:IPTWo 2797
LANE<m>:EMBedding:COMPonent<n>:NAME 2797
LANE<m>:EMBedding:COMPonent<n>:OPONe 2797
LANE<m>:EMBedding:COMPonent<n>:OPTWo 2797
LANE<m>:EMBedding:COMPonent<n>:PCOunt? 2798
LANE<m>:EMBedding:COMPonent<n>:PSONe 2798
LANE<m>:EMBedding:COMPonent<n>:PSTWo 2798
LANE<m>:EMBedding:COMPonent<n>:SPFSelection 2799
LANE<m>:EMBedding:COMPonent<n>:SPFType 2799
LANE<m>:EMBedding:COMPonent<n>:SPONe 2799
LANE<m>:EMBedding:COMPonent<n>:SPTWo 2799
LANE<m>:EMBedding:COMPonent<n>:TYPE 2800
LANE<m>:EMBedding:COMPonent<n>[:STATe] 2800
LANE<m>:EMBedding:DIFFerential 2795
LANE<m>:EMBedding:NAME 2800

LANE<m>:EMBedding:OPEN....2801
LANE<m>:EMBedding:PRESet....2801
LANE<m>:EMBedding:REMove....2801
LANE<m>:EMBedding:SAVE....2801
LANE<m>:EMBedding:STATe....2794
LANE<m>:EQUalization:CTLE:ACGain....2802
LANE<m>:EQUalization:CTLE:DCGain....2803
LANE<m>:EQUalization:CTLE:NAME....2803
LANE<m>:EQUalization:CTLE:OPEN....2803
LANE<m>:EQUalization:CTLE:POLE:COUNt....2803
LANE<m>:EQUalization:CTLE:POLE:FREQuency<n>....2804
LANE<m>:EQUalization:CTLE:PSELection....2804
LANE<m>:EQUalization:CTLE:SAVE....2804
LANE<m>:EQUalization:CTLE:SCONfig:LIST?....2805
LANE<m>:EQUalization:CTLE:SCONfig[:SELect]....2805
LANE<m>:EQUalization:CTLE:STATe....2805
LANE<m>:EQUalization:CTLE:ZERO:COUNt....2806
LANE<m>:EQUalization:CTLE:ZERO:FREQuency<n>....2806
LANE<m>:EQUalization:DFE:GAIN....2810
LANE<m>:EQUalization:DFE:NAME....2811
LANE<m>:EQUalization:DFE:OPEN....2811
LANE<m>:EQUalization:DFE:SAVE....2811
LANE<m>:EQUalization:DFE:STATe....2811
LANE<m>:EQUalization:DFE:TAPS:COUNt....2812
LANE<m>:EQUalization:DFE:TAPS:NORMalize....2812
LANE<m>:EQUalization:DFE:TAPS:PRESet....2812
LANE<m>:EQUalization:DFE:TAPS:TAP<n>....2813
LANE<m>:EQUalization:DFE:TIMReference:CDR:SOFTware....2813
LANE<m>:EQUalization:DFE:TIMReference:CDR:SOFTware:SAMTime....2814
LANE<m>:EQUalization:DFE:TIMReference:CDR[:SELect]....2813
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:EDGE....2814
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FACTor....2814
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FREQuency....2815
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:FREStimation....2815
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:LEVel....2815
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:OFEStimation....2816
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:OFFSet....2816
LANE<m>:EQUalization:DFE:TIMReference:CLOCk:SOURce....2816
LANE<m>:EQUalization:DFE:TIMReference:SOURce....2817
LANE<m>:EQUalization:FFE:NAME....2807
LANE<m>:EQUalization:FFE:OPEN....2807
LANE<m>:EQUalization:FFE:PSELection....2807
LANE<m>:EQUalization:FFE:SAVE....2807
LANE<m>:EQUalization:FFE:STATe....2808
LANE<m>:EQUalization:FFE:TAPS:COUNt....2808
LANE<m>:EQUalization:FFE:TAPS:NORMalize....2808
LANE<m>:EQUalization:FFE:TAPS:PRESet....2809
LANE<m>:EQUalization:FFE:TAPS:SYMMode....2809
LANE<m>:EQUalization:FFE:TAPS:SYMValue....2809
LANE<m>:EQUalization:FFE:TAPS:TAP<n>....2809

LANE<m>:EQUalization:NAME....2788
LANE<m>:EQUalization:OPEN....2789
LANE<m>:EQUalization:PRESet....2789
LANE<m>:EQUalization:SAVE....2789
LANE<m>:EQUalization:STATe....2789
LANE<m>:EQUalization:TRAining:APPLy....2817
LANE<m>:EQUalization:TRAining:DFE:LIMits:PRESet....2818
LANE<m>:EQUalization:TRAining:DFE:LIMits:TAP<n>:LLIMit....2818
LANE<m>:EQUalization:TRAining:DFE:LIMits:TAP<n>:ULIMit....2818
LANE<m>:EQUalization:TRAining:DFE:TAPS:COUNt....2819
LANE<m>:EQUalization:TRAining:DFE:TAPS:LLIMit<n>....2819
LANE<m>:EQUalization:TRAining:DFE:TAPS:UGLLimit....2819
LANE<m>:EQUalization:TRAining:DFE:TAPS:ULIMit<n>....2820
LANE<m>:EQUalization:TRAining:ERRor?....2823
LANE<m>:EQUalization:TRAining:FFE:TAPS:COUNt....2820
LANE<m>:EQUalization:TRAining:FFE:TAPS:PRECursor....2820
LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMMode....2821
LANE<m>:EQUalization:TRAining:FFE:TAPS:SYMValue....2821
LANE<m>:EQUalization:TRAining:FSELection....2821
LANE<m>:EQUalization:TRAining:MODE....2822
LANE<m>:EQUalization:TRAining:NORGain....2822
LANE<m>:EQUalization:TRAining:REFWaveform....2823
LANE<m>:EQUalization:TRAining:STARt....2823
LANE<m>:NAME....2785
LANE<m>:OPEN....2785
LANE<m>:PRESet....2785
LANE<m>:SAVE....2786
LANE<m>:SOURce....2786
LANE<m>:STATe....2786
LANE<m>:SYMRate....2786
LANE<m>:TFFE:PSELection....2791
LANE<m>:TFFE:SCONfig:LIST?....2792
LANE<m>:TFFE:SCONfig[:SELect]....2792
LANE<m>:TFFE:STATe....2792
LANE<m>:TFFE:TAPS:COUNt....2793
LANE<m>:TFFE:TAPS:TAP<n>....2793
LANE<m>:VERTical:COUPle....2790
LANE<m>:VERTical:OFFSet....2790
LANE<m>:VERTical:POSition....2791
LANE<m>:VERTical:SCALe....2791
LAYout:ADD....1368
LAYout:HISTogram:ADD....1569
LAYout:HISTogram:ENABle....1570
LAYout:HISTogram:HORZ:ABSolute:STARt....1571
LAYout:HISTogram:HORZ:ABSolute:STOP....1571
LAYout:HISTogram:HORZ:MODE....1571
LAYout:HISTogram:HORZ:RELative:STARt....1572
LAYout:HISTogram:HORZ:RELative:STOP....1572
LAYout:HISTogram:MODE....1572
LAYout:HISTogram:REMove....1573

LAYout:HISTogram:RESet ... 1573
LAYout:HISTogram:SOURce ... 1573
LAYout:HISTogram:VERTical:ABSolute:STARt ... 1574
LAYout:HISTogram:VERTical:ABSolute:STOP ... 1575
LAYout:HISTogram:VERTical:MODE ... 1575
LAYout:HISTogram:VERTical:RELative:STARt ... 1575
LAYout:HISTogram:VERTical:RELative:STOP ... 1576
LAYout:REMove ... 1370
LAYout:SHOW ... 1370
LAYout:SIGNal:ASSign ... 1370
LAYout:SIGNal:AXIS ... 1582
LAYout:SIGNal:UNASsign ... 1372
LAYout:ZOOM:ADD ... 1543
LAYout:ZOOM:ADDCoupled ... 1543
LAYout:ZOOM:HORZ:ABSolute:POSition ... 1545
LAYout:ZOOM:HORZ:ABSolute:SPAN ... 1545
LAYout:ZOOM:HORZ:ABSolute:STARt ... 1545
LAYout:ZOOM:HORZ:ABSolute:STOP ... 1546
LAYout:ZOOM:HORZ:MODE ... 1544
LAYout:ZOOM:HORZ:RELative:POSition ... 1546
LAYout:ZOOM:HORZ:RELative:SPAN ... 1547
LAYout:ZOOM:HORZ:RELative:STARt ... 1547
LAYout:ZOOM:HORZ:RELative:STOP ... 1547
LAYout:ZOOM:ONEDiagram ... 1373
LAYout:ZOOM:POSCoupling ... 1544
LAYout:ZOOM:REMove ... 1551
LAYout:ZOOM:VERTical:ABSolute:POSition ... 1548
LAYout:ZOOM:VERTical:ABSolute:SPAN ... 1549
LAYout:ZOOM:VERTical:ABSolute:STARt ... 1549
LAYout:ZOOM:VERTical:ABSolute:STOP ... 1549
LAYout:ZOOM:VERTical:MODE ... 1548
LAYout:ZOOM:VERTical:RELative:POSition ... 1550
LAYout:ZOOM:VERTical:RELative:SPAN ... 1550
LAYout:ZOOM:VERTical:RELative:STARt ... 1550
LAYout:ZOOM:VERTical:RELative:STOP ... 1551
MEASurement<mg>:ADDitional ... 1602
MEASurement<mg>:AMPTime:ALEVel ... 1607
MEASurement<mg>:AMPTime:ARIThmetic:CONStant ... 1622
MEASurement<mg>:AMPTime:ARIThmetic:COUNit ... 1622
MEASurement<mg>:AMPTime:ARIThmetic:CUNState ... 1623
MEASurement<mg>:AMPTime:ARIThmetic:CUUNit ... 1623
MEASurement<mg>:AMPTime:ARIThmetic:CUUState ... 1624
MEASurement<mg>:AMPTime:ARIThmetic:OPERator ... 1624
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:AMPTime ... 1624
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:GROup ... 1625
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:SPECtrum ... 1625
MEASurement<mg>:AMPTime:ARIThmetic:PARameter<n>:TYPE ... 1626
MEASurement<mg>:AMPTime:CLCK<n>:LSELect ... 1612
MEASurement<mg>:AMPTime:CSLope ... 1611
MEASurement<mg>:AMPTime:DATA<n>:LSELect ... 1612

MEASurement<mg>:AMPTime:DELay<n>:DIRection....1609
MEASurement<mg>:AMPTime:DELay<n>:ECOunt....1609
MEASurement<mg>:AMPTime:DELay<n>:LSELect....1610
MEASurement<mg>:AMPTime:DELay<n>:SLOPe....1610
MEASurement<mg>:AMPTime:DTOTrigger<n>:LSELect....1613
MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe....1613
MEASurement<mg>:AMPTime:EINCrement....1616
MEASurement<mg>:AMPTime:ESLope....1611
MEASurement<mg>:AMPTime:LCHeck<n>:LOWer:LIMit....1614
MEASurement<mg>:AMPTime:LCHeck<n>:LOWer:MARGin....1614
MEASurement<mg>:AMPTime:LCHeck<n>:UPPer:LIMit....1614
MEASurement<mg>:AMPTime:LCHeck<n>:UPPer:MARGin....1614
MEASurement<mg>:AMPTime:LCHeck<n>:VALid....1613
MEASurement<mg>:AMPTime:NPERiod....1615
MEASurement<mg>:AMPTime:NPFSlope....1609
MEASurement<mg>:AMPTime:PFSLope....1608
MEASurement<mg>:AMPTime:PLHYsteresis....1617
MEASurement<mg>:AMPTime:PRLevel....1616
MEASurement<mg>:AMPTime:PRLMode....1616
MEASurement<mg>:AMPTime:PSLope....1608
MEASurement<mg>:AMPTime:PTCount....1611
MEASurement<mg>:AMPTime:VCHYsteresis....1615
MEASurement<mg>:AMPTime:VCMLevel....1617
MEASurement<mg>:AOFF....1602
MEASurement<mg>:AON....1602
MEASurement<mg>:ARES?....1672
MEASurement<mg>:ARNames....1673
MEASurement<mg>:CATegory....1599
MEASurement<mg>:CLEar....1678
MEASurement<mg>:DETThreshold....1607
MEASurement<mg>:DISPlay:GROuping....1383
MEASurement<mg>:DISPlay:HISTogram....1677
MEASurement<mg>:DISPlay:LEVels....1675
MEASurement<mg>:DISPlay:RESults....1676
MEASurement<mg>:DISPlay:RESults:LFONtsize....1383
MEASurement<mg>:DISPlay:STYLe....1676
MEASurement<mg>:EMC:LIMit:APPLy....1661
MEASurement<mg>:EMC:LIMit:SELection....1661
MEASurement<mg>:EMC:LVADelay:DELay....1660
MEASurement<mg>:EMC:SLOPe....1659
MEASurement<mg>:EMC:SPEak:WINDow:STARt....1659
MEASurement<mg>:EMC:SPEak:WINDow:STOP....1659
MEASurement<mg>:EMC:TTValue:LEVel....1660
MEASurement<mg>:ENVSelect....1606
MEASurement<mg>:EYEJitter:DCDistortion:RELative:LEVel....1636
MEASurement<mg>:EYEJitter:EYEHeight:ABSolute:STARt....1640
MEASurement<mg>:EYEJitter:EYEHeight:ABSolute:STOP....1641
MEASurement<mg>:EYEJitter:EYEHeight:ALGorithm....1639
MEASurement<mg>:EYEJitter:EYEHeight:MODE....1641
MEASurement<mg>:EYEJitter:EYEHeight:RELative:STARt....1640

MEASurement<mg>:EYEJitter:EYEHeight:RELative:STOP 1640
MEASurement<mg>:EYEJitter:EYEWidth:ABSolute:STARt 1638
MEASurement<mg>:EYEJitter:EYEWidth:ABSolute:STOP 1638
MEASurement<mg>:EYEJitter:EYEWidth:ALGorithm 1636
MEASurement<mg>:EYEJitter:EYEWidth:MEASwindow 1637
MEASurement<mg>:EYEJitter:EYEWidth:MODE 1639
MEASurement<mg>:EYEJitter:EYEWidth:RELative:STARt 1637
MEASurement<mg>:EYEJitter:EYEWidth:RELative:STOP 1638
MEASurement<mg>:EYEJitter:GENSettings:ABSolute:STARt 1635
MEASurement<mg>:EYEJitter:GENSettings:ABSolute:STOP 1636
MEASurement<mg>:EYEJitter:GENSettings:MLEHistogram:ALGorithm 1634
MEASurement<mg>:EYEJitter:GENSettings:MLEHistogram:THReshold 1634
MEASurement<mg>:EYEJitter:GENSettings:RELative:STARt 1634
MEASurement<mg>:EYEJitter:GENSettings:RELative:STOP 1635
MEASurement<mg>:EYEJitter:JITTer:MEASlevel 1642
MEASurement<mg>:EYEJitter:JITTer:RELative:LEVel 1642
MEASurement<mg>:EYEJitter:LCHeck<n>:LOWer:LIMit 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:LOWer:MARGin 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:UPPer:LIMit 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:UPPer:MARGin 1633
MEASurement<mg>:EYEJitter:LCHeck<n>:VALid 1632
MEASurement<mg>:EYEJitter:RTFTime:RELative:STARt 1643
MEASurement<mg>:EYEJitter:RTFTime:RELative:STOP 1642
MEASurement<mg>:FSRC 1599
MEASurement<mg>:GATE:ABSolute:STARt 1669
MEASurement<mg>:GATE:ABSolute:STOP 1669
MEASurement<mg>:GATE:CCOupling 1670
MEASurement<mg>:GATE:CURSor 1670
MEASurement<mg>:GATE:GCOupling 1671
MEASurement<mg>:GATE:MODE 1669
MEASurement<mg>:GATE:RELative:STARt 1670
MEASurement<mg>:GATE:RELative:STOP 1670
MEASurement<mg>:GATE:SHOW 1669
MEASurement<mg>:GATE:ZCOupling 1671
MEASurement<mg>:GATE:ZDIagram 1671
MEASurement<mg>:GATE[:STATe] 1668
MEASurement<mg>:HISTogram:LCHeck<n>:LOWer:LIMit 1657
MEASurement<mg>:HISTogram:LCHeck<n>:LOWer:MARGin 1657
MEASurement<mg>:HISTogram:LCHeck<n>:UPPer:LIMit 1657
MEASurement<mg>:HISTogram:LCHeck<n>:UPPer:MARGin 1657
MEASurement<mg>:HISTogram:LCHeck<n>:VALid 1656
MEASurement<mg>:HISTogram:PROBability:LIMit 1656
MEASurement<mg>:HISTogram:PROBability:TYPE 1655
MEASurement<mg>:HISTogram:SELect 1655
MEASurement<mg>:JITTer:CCSLope 2690
MEASurement<mg>:JITTer:CDRMode 2691
MEASurement<mg>:JITTer:CLOCk:FACTor 2691
MEASurement<mg>:JITTer:CLOCk:FREQuency 2692
MEASurement<mg>:JITTer:CLOCk:FREStimation 2692
MEASurement<mg>:JITTer:DRUNit 2692

MEASurement<mg>:JITTer:NCYCles....2693
MEASurement<mg>:JITTer:PULSe....2693
MEASurement<mg>:JITTer:SKWRelation....2694
MEASurement<mg>:JITTer:SKWSlope....2693
MEASurement<mg>:JITTer:SOURce<n>:TIESlope....2694
MEASurement<mg>:LCHeck....1685
MEASurement<mg>:LTMeas:COUNt....1683
MEASurement<mg>:LTMeas:TIME....1683
MEASurement<mg>:LTMeas[:STATe]....1683
MEASurement<mg>:MAIN....1600
MEASurement<mg>:MNOMeas....1678
MEASurement<mg>:MULTiple....1678
MEASurement<mg>:ONViolation:ACQStop....1686
MEASurement<mg>:ONViolation:BEEP....1686
MEASurement<mg>:ONViolation:PRINt....1686
MEASurement<mg>:ONViolation:REPort....1687
MEASurement<mg>:ONViolation:RESSave....1688
MEASurement<mg>:ONViolation:RUNexec....1688
MEASurement<mg>:ONViolation:TRIGgerout....1688
MEASurement<mg>:ONViolation:WFMSave....1687
MEASurement<mg>:OPTical:LCHeck<n>:LOWer:LIMit....1645
MEASurement<mg>:OPTical:LCHeck<n>:LOWer:MARGin....1645
MEASurement<mg>:OPTical:LCHeck<n>:UPPer:LIMit....1645
MEASurement<mg>:OPTical:LCHeck<n>:UPPer:MARGin....1645
MEASurement<mg>:OPTical:LCHeck<n>:VALid....1645
MEASurement<mg>:OPTical:OMAMplitude:RELative:STARt....1644
MEASurement<mg>:OPTical:OMAMplitude:RELative:STOP....1644
MEASurement<mg>:OPTical:UNIT....1644
MEASurement<mg>:PAMPlitude....1603
MEASurement<mg>:PAMResults:ACTive?....1618
MEASurement<mg>:PAMResults:ADD....1618
MEASurement<mg>:PAMResults:PRESetconfig:BASE....1618
MEASurement<mg>:PAMResults:PRESetconfig:EXPLicit....1619
MEASurement<mg>:PAMResults:PRESetconfig:LVLHeight....1619
MEASurement<mg>:PAMResults:PRESetconfig:MEASurement....1619
MEASurement<mg>:PAMResults:PRESetconfig:MODE....1619
MEASurement<mg>:PAMResults:PRESetconfig:PRESet....1620
MEASurement<mg>:PAMResults:PRESetconfig:SELMode....1620
MEASurement<mg>:PAMResults:PRESetconfig:TARGet....1620
MEASurement<mg>:PAMResults:REMove....1620
MEASurement<mg>:PAMResults:RESultconfig<n>:BASE....1621
MEASurement<mg>:PAMResults:RESultconfig<n>:MEASurement....1621
MEASurement<mg>:PAMResults:RESultconfig<n>:TARGet....1621
MEASurement<mg>:PEYE....1603
MEASurement<mg>:PROTocol:F2FRame:FLDFrom....1663
MEASurement<mg>:PROTocol:F2FRame:FLDTo....1663
MEASurement<mg>:PROTocol:F2FRame:FRMFrom....1663
MEASurement<mg>:PROTocol:F2FRame:FRMTo....1663
MEASurement<mg>:PROTocol:F2FRame:VALFrom....1664
MEASurement<mg>:PROTocol:F2FRame:VALTo....1664

MEASurement<mg>:PROTocol:FLDValue:FLD....1664
MEASurement<mg>:PROTocol:FLDValue:FRM....1664
MEASurement<mg>:PROTocol:FLDValue:TRCK....1665
MEASurement<mg>:PROTocol:FLDValue:VAL....1665
MEASurement<mg>:PROTocol:MBITrate:FLD....1665
MEASurement<mg>:PROTocol:MBITrate:FRM....1666
MEASurement<mg>:PROTocol:MBITrate:VAL....1666
MEASurement<mg>:PROTocol:SBITrate:FLD....1666
MEASurement<mg>:PROTocol:SBITrate:FRM....1666
MEASurement<mg>:PROTocol:SBITrate:VAL....1667
MEASurement<mg>:PROTocol:T2FRame:DIRection....1667
MEASurement<mg>:PROTocol:T2FRame:FLD....1667
MEASurement<mg>:PROTocol:T2FRame:FRM....1667
MEASurement<mg>:PROTocol:T2FRame:VALue....1668
MEASurement<mg>:REFLevel:RESult:BINNer?....1824
MEASurement<mg>:REFLevel:RESult:BOUTer?....1824
MEASurement<mg>:REFLevel:RESult:LOWer?....1823
MEASurement<mg>:REFLevel:RESult:MIDDle?....1823
MEASurement<mg>:REFLevel:RESult:SIGHigh?....1824
MEASurement<mg>:REFLevel:RESult:SIGLow?....1824
MEASurement<mg>:REFLevel:RESult:TINNer?....1825
MEASurement<mg>:REFLevel:RESult:TOUTer?....1825
MEASurement<mg>:REFLevel:RESult:UPPer?....1823
MEASurement<mg>:RESult:AVG?....1673
MEASurement<mg>:RESult:COUNt?....1675
MEASurement<mg>:RESult:EVTCount?....1673
MEASurement<mg>:RESult:INVerse....1385
MEASurement<mg>:RESult:LABorder....1384
MEASurement<mg>:RESult:MAXCount....1650
MEASurement<mg>:RESult:NPEak?....1673
MEASurement<mg>:RESult:PPEak?....1673
MEASurement<mg>:RESult:RELiability?....1673
MEASurement<mg>:RESult:RMS?....1674
MEASurement<mg>:RESult:SHFRequency....1651
MEASurement<mg>:RESult:SHLabels....1651
MEASurement<mg>:RESult:STARt?....1674
MEASurement<mg>:RESult:STDDev?....1674
MEASurement<mg>:RESult:STOP?....1674
MEASurement<mg>:RESult:WFMCount?....1674
MEASurement<mg>:RESult[:ACTual]?....1673
MEASurement<mg>:SOURce....1597
MEASurement<mg>:SPECtrum:ARIThmetic:CONStant....1626
MEASurement<mg>:SPECtrum:ARIThmetic:COUNit....1627
MEASurement<mg>:SPECtrum:ARIThmetic:CUNState....1627
MEASurement<mg>:SPECtrum:ARIThmetic:CUUNit....1628
MEASurement<mg>:SPECtrum:ARIThmetic:CUUState....1628
MEASurement<mg>:SPECtrum:ARIThmetic:OPERator....1628
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:AMPTime....1629
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:GROup....1629
MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:SPECtrum....1630

MEASurement<mg>:SPECtrum:ARIThmetic:PARameter<n>:TYPE....1630
MEASurement<mg>:SPECtrum:ATHReshold....1649
MEASurement<mg>:SPECtrum:CPOWer:BANDwidth....1647
MEASurement<mg>:SPECtrum:CPOWer:CFRequency....1648
MEASurement<mg>:SPECtrum:LCHeck<n>:LOWer:LIMit....1652
MEASurement<mg>:SPECtrum:LCHeck<n>:LOWer:MARGin....1653
MEASurement<mg>:SPECtrum:LCHeck<n>:UPPer:LIMit....1652
MEASurement<mg>:SPECtrum:LCHeck<n>:UPPer:MARGin....1653
MEASurement<mg>:SPECtrum:LCHeck<n>:VALid....1652
MEASurement<mg>:SPECtrum:NDBDown....1648
MEASurement<mg>:SPECtrum:OBANdwidth....1648
MEASurement<mg>:SPECtrum:PEXCursion....1649
MEASurement<mg>:SPECtrum:RESult<n>:COUNt....1649
MEASurement<mg>:SPECtrum:RESult<n>:MODE....1650
MEASurement<mg>:SSRC....1599
MEASurement<mg>:STATistics:HBINs....1679
MEASurement<mg>:STATistics:HISTogram....1679
MEASurement<mg>:STATistics:MODE....1679
MEASurement<mg>:STATistics:RCOunt....1680
MEASurement<mg>:STATistics:RESet....1681
MEASurement<mg>:STATistics:RMEascount....1680
MEASurement<mg>:STATistics:RTIMe....1681
MEASurement<mg>:STATistics[:ENABle]....1677
MEASurement<mg>:TRACk:DATA:HEADer?....1684
MEASurement<mg>:TRACk:DATA:STYPe?....1684
MEASurement<mg>:TRACk:DATA[:VALues]?....1685
MEASurement<mg>:TRACk[:STATe]....1684
MEASurement<mg>:VERTical:AUTO....1682
MEASurement<mg>:VERTical:CONT....1681
MEASurement<mg>:VERTical:OFFSet....1682
MEASurement<mg>:VERTical:SCALe....1682
MEASurement<mg>[:ENABle]....1597
MMEMory:ATTRibute....1779
MMEMory:AUTonaming:DATE....1802
MMEMory:AUTonaming:DEFaultpath....1803
MMEMory:AUTonaming:INDex....1803
MMEMory:AUTonaming:PREFix....1802
MMEMory:AUTonaming:RESall....1804
MMEMory:AUTonaming:RESPath....1803
MMEMory:AUTonaming:TEXT....1803
MMEMory:AUTonaming:TIME....1803
MMEMory:AUTonaming:USERtext....1802
MMEMory:CATalog:LENGth?....1777
MMEMory:CATalog?....1776
MMEMory:CDIRectory....1776
MMEMory:COPY....1777
MMEMory:DATA....1779
MMEMory:DCATalog:LENGth?....1775
MMEMory:DCATalog?....1775
MMEMory:DELete....1778

MMEMory:DRIVes? 1775
MMEMory:LOAD:STATe 1781
MMEMory:MDIRectory 1776
MMEMory:MOVE 1778
MMEMory:MSIS 1775
MMEMory:NAME 1797
MMEMory:RCL 1780
MMEMory:RDIRectory 1776
MMEMory:SAV 1780
MMEMory:STORe:STATe 1780
MTESt:ADD 1708
MTESt:CEMask 1727
MTESt:COLor:BORDer 1387
MTESt:COLor:INTerior 1388
MTESt:COLor:MATCh 1387
MTESt:COLor:UNMatch 1387
MTESt:CONDition 1710
MTESt:CTYPe 1710
MTESt:EYEMask:BOFFset 1729
MTESt:EYEMask:HEIGht<m>[:VALue] 1727
MTESt:EYEMask:HPERiod 1728
MTESt:EYEMask:HPOSition 1730
MTESt:EYEMask:MSKBottom 1729
MTESt:EYEMask:MSKLeft 1728
MTESt:EYEMask:MSKRight 1728
MTESt:EYEMask:MSKTop 1729
MTESt:EYEMask:PAMNeye 1731
MTESt:EYEMask:REFDelta 1731
MTESt:EYEMask:TBSYmmetric 1729
MTESt:EYEMask:TBWidth 1730
MTESt:EYEMask:TOFFset 1729
MTESt:EYEMask:TYPE 1727
MTESt:EYEMask:VPOSition 1730
MTESt:EYEMask:WIDTh<m>[:VALue] 1728
MTESt:FILE:DELete 1712
MTESt:FILE:NAME 1711
MTESt:FILE:OPEN 1711
MTESt:FILE:SAVE 1711
MTESt:HIGHlight:INFinite 1386
MTESt:HIGHlight:STATe 1386
MTESt:HIGHlight:TIME 1386
MTESt:LABel 1385
MTESt:ONViolation:BEEP 1721
MTESt:ONViolation:PRINt 1722
MTESt:ONViolation:REPort 1722
MTESt:ONViolation:RESSave 1723
MTESt:ONViolation:RUNexec 1723
MTESt:ONViolation:SAVewaveform 1722
MTESt:ONViolation:STOP 1721
MTESt:ONViolation:TRIGgerout 1723

MTESt:REFWfm ... 1719
MTESt:REMove ... 1708
MTESt:REName ... 1386
MTESt:RESult:COUNt:FAILures? ... 1725
MTESt:RESult:COUNt:FSLices? ... 2767
MTESt:RESult:COUNt:FWAVeforms? ... 1725
MTESt:RESult:COUNt:REMaining? ... 1725
MTESt:RESult:COUNt:SLICes? ... 2767
MTESt:RESult:COUNt:WAVeforms? ... 1725
MTESt:RESult:FRATe? ... 1726
MTESt:RESult:STATe? ... 1724
MTESt:RESult:VDETails? ... 1731
MTESt:RESult:VIOLation<m>:COUNt? ... 2768
MTESt:RESult:VIOLation<m>:STARt? ... 2768
MTESt:RESult:VIOLation<m>:STOP? ... 2768
MTESt:RESult:VIOLation<m>[:SLICe]? ... 2768
MTESt:RESult[:RESult]? ... 1724
MTESt:RST ... 1709
MTESt:SBITnumber? ... 2852
MTESt:SEGMent:ADD ... 1713
MTESt:SEGMent:CLEar ... 1714
MTESt:SEGMent:COUNt? ... 1713
MTESt:SEGMent:INSert ... 1713
MTESt:SEGMent:POINt:ADD ... 1715
MTESt:SEGMent:POINt:COUNt? ... 1716
MTESt:SEGMent:POINt:INSert ... 1715
MTESt:SEGMent:POINt:REMove ... 1715
MTESt:SEGMent:POINt:X ... 1716
MTESt:SEGMent:POINt:Y ... 1716
MTESt:SEGMent:REGion ... 1714
MTESt:SEGMent:REMove ... 1714
MTESt:SEGMent:RESCale:RECalculate ... 1717
MTESt:SEGMent:RESCale:XFACtor ... 1717
MTESt:SEGMent:RESCale:XOFFset ... 1717
MTESt:SEGMent:RESCale:YFACtor ... 1717
MTESt:SEGMent:RESCale:YOFFset ... 1718
MTESt:SEGMent:STATe ... 1713
MTESt:SHOW ... 1709
MTESt:SOURce ... 1709
MTESt:TOLerance ... 1710
MTESt:WFMLupdate ... 1719
MTESt:WFMRescale:XWIDth ... 1719
MTESt:WFMRescale:YPOSition ... 1720
MTESt:WFMRescale:YSTRetch ... 1720
MTESt:WFMRescale:YWIDth ... 1720
MTESt[:STATe] ... 1708
PGENerator:BITRate ... 2663
PGENerator:ENABle ... 2663
PGENerator:FILE:OPEN ... 2664
PGENerator:FILE[:NAME] ... 2664

PGENerator:HLEVel....2664
PGENerator:PRESet....2664
PGENerator:RUNMode....2664
PGENerator:RUNSingle....2665
PROBe<ch>:CONVerter:BANDwidth....1444
PROBe<ch>:CONVerter:SELFalign....1444
PROBe<ch>:CONVerter:TYPE?....1444
PROBe<ch>:DEEMbedding:BANDwidth....1434
PROBe<ch>:DEEMbedding:BANDwidth....2779
PROBe<ch>:DEEMbedding:LOAD:IMPedance....1436
PROBe<ch>:DEEMbedding:MODE....1435
PROBe<ch>:DEEMbedding:PMODe....1433
PROBe<ch>:DEEMbedding:REMProbeload....1435
PROBe<ch>:DEEMbedding:TIPModule:CSPFile....1433
PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule....1434
PROBe<ch>:DEEMbedding:TIPModule:ZMA<n>:SUBModule....2778
PROBe<ch>:DEEMbedding:TIPModule[:SELect]....1433
PROBe<ch>:DEEMbedding:TIPModule[:SELect]....2778
PROBe<ch>:ID:PARTnumber?....1442
PROBe<ch>:ID:PRDate?....1442
PROBe<ch>:ID:SRNumber?....1443
PROBe<ch>:ID:SWVersion?....1442
PROBe<ch>:PMETer:RESults:COMMon?....1422
PROBe<ch>:PMETer:RESults:DIFFerential?....1422
PROBe<ch>:PMETer:RESults:NEGative?....1422
PROBe<ch>:PMETer:RESults:POSitive?....1423
PROBe<ch>:PMETer:RESults:SINGle?....1421
PROBe<ch>:PMETer:VISibility....1421
PROBe<ch>:SETup:ACCoupling....1426
PROBe<ch>:SETup:ADVanced:AUDioverload....1427
PROBe<ch>:SETup:ADVanced:FILTer....1427
PROBe<ch>:SETup:ADVanced:PMToffset....1426
PROBe<ch>:SETup:ADVanced:RANGe....1427
PROBe<ch>:SETup:ALIGnment:GAIN:EXECute....1440
PROBe<ch>:SETup:ALIGnment:STATe?....1441
PROBe<ch>:SETup:ALIGnment:WRITe....1441
PROBe<ch>:SETup:ALIGnment:ZERO:EXECute....1440
PROBe<ch>:SETup:ATTenuation:DEFProbe....1436
PROBe<ch>:SETup:ATTenuation:MANual....1424
PROBe<ch>:SETup:ATTenuation:MODE....1424
PROBe<ch>:SETup:ATTenuation:THReshold:MODE....1428
PROBe<ch>:SETup:ATTenuation:THReshold:VALue....1428
PROBe<ch>:SETup:ATTenuation:UNIT....1424
PROBe<ch>:SETup:ATTenuation[:AUTO]?....1417
PROBe<ch>:SETup:BANDwidth?....1416
PROBe<ch>:SETup:CAPacitance?....1443
PROBe<ch>:SETup:CMOFfset....1425
PROBe<ch>:SETup:CMOFfset....1430
PROBe<ch>:SETup:DEGauss....1438
PROBe<ch>:SETup:DISPlaydiff....1420

PROBe<ch>:SETup:DMOFfset ... 1429
PROBe<ch>:SETup:GAIN:AUTO? ... 1417
PROBe<ch>:SETup:GAIN:MANual ... 1425
PROBe<ch>:SETup:IMPedance? ... 1443
PROBe<ch>:SETup:LASTate? ... 1439
PROBe<ch>:SETup:MODE ... 1419
PROBe<ch>:SETup:NAME? ... 1416
PROBe<ch>:SETup:NOFFset ... 1430
PROBe<ch>:SETup:OFFSet:AZERo ... 1417
PROBe<ch>:SETup:OFFSet:STPRobe ... 1439
PROBe<ch>:SETup:OFFSet:TOMean ... 1437
PROBe<ch>:SETup:OFFSet:USEautozero ... 1418
PROBe<ch>:SETup:OFFSet:ZADJust ... 1439
PROBe<ch>:SETup:OPTical:CONGain ... 1437
PROBe<ch>:SETup:OPTical:WAVLength ... 1438
PROBe<ch>:SETup:POFFset ... 1431
PROBe<ch>:SETup:PRMode ... 1429
PROBe<ch>:SETup:RDEFaults ... 1441
PROBe<ch>:SETup:STATe? ... 1415
PROBe<ch>:SETup:TERM:ADJust ... 1432
PROBe<ch>:SETup:TERM:MEASure? ... 1432
PROBe<ch>:SETup:TERM:MODE ... 1431
PROBe<ch>:SETup:TERM:STATe ... 1431
PROBe<ch>:SETup:TYPE? ... 1416
PROBe<ch>:SETup:UNIT ... 1440
PROBe<ch>:SETup:ZAXV ... 1426
PROBe<ch>:SKEState ... 1465
PSRC:CLOCkmode ... 2673
PSRC:DUTYcycle ... 2673
PSRC:OUTPutlow ... 2672
PSRC:REPRate ... 2673
PSRC:RST ... 2674
PSRC[:STATe] ... 2672
RASTer:AVERaging ... 1805
RASTer:EXPort:PATH ... 1805
RASTer:EXPort:SAVE ... 1806
RASTer:GATe:STARt? ... 1806
RASTer:GATe:STOP? ... 1806
RASTer:HSYNc ... 1806
RASTer:LINes ... 1807
RASTer:OFFSet ... 1807
RASTer:SOURce ... 1807
RASTer:STATe ... 1807
RASTer:VSYNc ... 1808
REFCurve<rc>:CDR:ALGorithm? ... 1562
REFCurve<rc>:CDR:BITRate? ... 1562
REFCurve<rc>:CDR:BWIDth? ... 1563
REFCurve<rc>:CDR:RELBwidth? ... 1563
REFCurve<rc>:CDR:SAMTime? ... 1563
REFCurve<rc>:CDR:SOURce? ... 1564

REFCurve<rc>:CLEar....1554
REFCurve<rc>:DATA:HEADer?....1560
REFCurve<rc>:DATA:STYPe?....1559
REFCurve<rc>:DATA[:VALues]?....1560
REFCurve<rc>:DELete....1554
REFCurve<rc>:HMODe....1558
REFCurve<rc>:MULTichannel:IMPort....1561
REFCurve<rc>:MULTichannel:NAME....1561
REFCurve<rc>:MULTichannel:OPEN....1562
REFCurve<rc>:NAME....1553
REFCurve<rc>:OFFSet?....1556
REFCurve<rc>:OPEN....1553
REFCurve<rc>:POSition....1556
REFCurve<rc>:RESCale:HORizontal:FACTor....1558
REFCurve<rc>:RESCale:HORizontal:POSition....1559
REFCurve<rc>:RESCale:HORizontal:STATe....1558
REFCurve<rc>:RESCale:VERTical:FACTor....1557
REFCurve<rc>:RESCale:VERTical:OFFSet....1557
REFCurve<rc>:RESCale:VERTical:STATe....1557
REFCurve<rc>:RESTore....1555
REFCurve<rc>:SAVE....1553
REFCurve<rc>:SCALe....1555
REFCurve<rc>:SOURce....1552
REFCurve<rc>:STATe....1552
REFCurve<rc>:TOORignal....1556
REFCurve<rc>:UPDate....1553
REFCurve<rc>:VMODe....1555
REFLevel<rl>:ABSolute:BDIStance....1817
REFLevel<rl>:ABSolute:BITube....1823
REFLevel<rl>:ABSolute:BOTube....1823
REFLevel<rl>:ABSolute:HIGH....1816
REFLevel<rl>:ABSolute:LLEVel....1819
REFLevel<rl>:ABSolute:LOW....1816
REFLevel<rl>:ABSolute:MLEVel....1818
REFLevel<rl>:ABSolute:TDIStance....1817
REFLevel<rl>:ABSolute:TITube....1822
REFLevel<rl>:ABSolute:TOTube....1822
REFLevel<rl>:ABSolute:ULEVel....1818
REFLevel<rl>:AUTO:COUNt....1815
REFLevel<rl>:AUTO:MODE....1814
REFLevel<rl>:AUTO[:STATe]....1815
REFLevel<rl>:LDETection....1812
REFLevel<rl>:LMODe....1812
REFLevel<rl>:PAMReference:LOWer....1826
REFLevel<rl>:PAMReference:LVLDef....1826
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSLower....1827
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSMiddle....1827
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:ABSupper....1827
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELLower....1828
REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELMiddle....1828

REFLevel<rl>:PAMReference:LVLJumphgt<n>:THReshold<o>:RELupper ... 1829
REFLevel<rl>:PAMReference:MIDDle ... 1829
REFLevel<rl>:PAMReference:PRESet ... 1830
REFLevel<rl>:PAMReference:RELLevel ... 1830
REFLevel<rl>:PAMReference:UPPer ... 1830
REFLevel<rl>:PAMSignal:ESTimate ... 1831
REFLevel<rl>:PAMSignal:LEVel<n> ... 1831
REFLevel<rl>:PAMSignal:LVLalgorithm ... 1832
REFLevel<rl>:RELative:HYSTeresis ... 1821
REFLevel<rl>:RELative:ITUBe ... 1822
REFLevel<rl>:RELative:LOWer ... 1820
REFLevel<rl>:RELative:MIDDle ... 1820
REFLevel<rl>:RELative:MODE ... 1812
REFLevel<rl>:RELative:OTUBe ... 1821
REFLevel<rl>:RELative:UPPer ... 1819
REFLevel<rl>:USRLevel ... 1813
REPort:COMMent ... 1802
REPort:FILE:NAME ... 1802
REPort:FILE:SAVE ... 1802
REPort:LANGuage ... 1800
REPort:LOGO ... 1801
REPort:LOGType ... 1801
REPort:PAPersize ... 1801
REPort:USER ... 1801
RUN ... 1395
RUNContinous ... 1395
RUNSingle ... 1395
SAVeset:CONFig:PREView ... 1781
SAVeset:ONEFile:NAME ... 1782
SAVeset:ONEFile:OPEN ... 1782
SAVeset:ONEFile:SAVE ... 1782
SAVeset:ONEFile:USERpref ... 1782
SEARch:ADD ... 1733
SEARch:ALL ... 1734
SEARch:CLEar ... 1733
SEARch:GATE:ABSolute:STARt ... 1763
SEARch:GATE:ABSolute:STOP ... 1763
SEARch:GATE:MODE ... 1762
SEARch:GATE:RELative:STARt ... 1764
SEARch:GATE:RELative:STOP ... 1764
SEARch:GATE:SHOW ... 1763
SEARch:GATE:ZCOupling ... 1764
SEARch:GATE:ZDIagram ... 1765
SEARch:GATE[:STATe] ... 1762
SEARch:ONLine ... 1734
SEARch:REMove ... 1733
SEARch:RESDiagram:HORZ:ABSolute:POSition ... 1768
SEARch:RESDiagram:HORZ:ABSolute:SPAN ... 1768
SEARch:RESDiagram:HORZ:MODE ... 1768
SEARch:RESDiagram:HORZ:RELative:POSition ... 1769

SEARch:RESDiagram:HORZ:RELative:SPAN 1769
SEARch:RESDiagram:SHOW 1769
SEARch:RESDiagram:VERT:ABSolute:POSition 1770
SEARch:RESDiagram:VERT:ABSolute:SPAN 1770
SEARch:RESDiagram:VERT:MODE 1770
SEARch:RESDiagram:VERT:RELative:POSition 1770
SEARch:RESDiagram:VERT:RELative:SPAN 1771
SEARch:RESult:ARINc:WCOunt? 2095
SEARch:RESult:ARINc:WORD<w>:DATA? 2094
SEARch:RESult:ARINc:WORD<w>:LABel? 2093
SEARch:RESult:ARINc:WORD<w>:PATTern? 2094
SEARch:RESult:ARINc:WORD<w>:SDI? 2095
SEARch:RESult:ARINc:WORD<w>:SSM? 2094
SEARch:RESult:ARINc:WORD<w>:STARt? 2096
SEARch:RESult:ARINc:WORD<w>:STATe? 2096
SEARch:RESult:ARINc:WORD<w>:STOP? 2095
SEARch:RESult:ARINc:WORD<w>:SYMBol? 2095
SEARch:RESult:CAN:FCOunt? 1970
SEARch:RESult:CAN:FDATa:FRAMe<fr>:SCValue? 1974
SEARch:RESult:CAN:FDATa:FRAMe<fr>:STANdard? 1974
SEARch:RESult:CAN:FRAMe<fr>:ACKState? 1972
SEARch:RESult:CAN:FRAMe<fr>:ACKValue? 1970
SEARch:RESult:CAN:FRAMe<fr>:BSEPosition? 1971
SEARch:RESult:CAN:FRAMe<fr>:BYTE<n>:STATe? 1971
SEARch:RESult:CAN:FRAMe<fr>:BYTE<n>:VALue? 1971
SEARch:RESult:CAN:FRAMe<fr>:CSSTate? 1972
SEARch:RESult:CAN:FRAMe<fr>:CSValue? 1972
SEARch:RESult:CAN:FRAMe<fr>:DATA? 1972
SEARch:RESult:CAN:FRAMe<fr>:DLCState? 1972
SEARch:RESult:CAN:FRAMe<fr>:DLCValue? 1973
SEARch:RESult:CAN:FRAMe<fr>:FERCause? 1973
SEARch:RESult:CAN:FRAMe<fr>:IDSTate? 1972
SEARch:RESult:CAN:FRAMe<fr>:IDTYpe? 1973
SEARch:RESult:CAN:FRAMe<fr>:IDValue? 1973
SEARch:RESult:CAN:FRAMe<fr>:NDBYtes? 1966
SEARch:RESult:CAN:FRAMe<fr>:SDATa? 1979
SEARch:RESult:CAN:FRAMe<fr>:STARt? 1974
SEARch:RESult:CAN:FRAMe<fr>:STATus? 1975
SEARch:RESult:CAN:FRAMe<fr>:STOP? 1975
SEARch:RESult:CAN:FRAMe<fr>:SYMBol? 1975
SEARch:RESult:CAN:FRAMe<fr>:TYPE? 1976
SEARch:RESult:CANXI:FCOunt? 2008
SEARch:RESult:CANXI:FRAMe<fr>:ACKState? 2008
SEARch:RESult:CANXI:FRAMe<fr>:ACKValue? 2008
SEARch:RESult:CANXI:FRAMe<fr>:CSSTate? 2010
SEARch:RESult:CANXI:FRAMe<fr>:CSValue? 2010
SEARch:RESult:CANXI:FRAMe<fr>:DBITrate? 2016
SEARch:RESult:CANXI:FRAMe<fr>:DLCState? 2010
SEARch:RESult:CANXI:FRAMe<fr>:DLCValue? 2011
SEARch:RESult:CANXI:FRAMe<fr>:FDATa<n>:BRS? 2015

SEARch:RESult:CANXI:FRAMe<fr>:FDATa<n>:ESI? 2015
SEARch:RESult:CANXI:FRAMe<fr>:FLD<fl>:FVALue? 2009
SEARch:RESult:CANXI:FRAMe<fr>:FLD<fl>:LABel? 2009
SEARch:RESult:CANXI:FRAMe<fr>:FLD<fl>:STATe? 2009
SEARch:RESult:CANXI:FRAMe<fr>:FLD<fl>:VALue? 2009
SEARch:RESult:CANXI:FRAMe<fr>:FLDCount? 2008
SEARch:RESult:CANXI:FRAMe<fr>:IDSTate? 2011
SEARch:RESult:CANXI:FRAMe<fr>:IDTYpe? 2011
SEARch:RESult:CANXI:FRAMe<fr>:IDValue? 2011
SEARch:RESult:CANXI:FRAMe<fr>:NBITrate? 2016
SEARch:RESult:CANXI:FRAMe<fr>:NDBYtes? 2012
SEARch:RESult:CANXI:FRAMe<fr>:SBC? 2014
SEARch:RESult:CANXI:FRAMe<fr>:STARt? 2012
SEARch:RESult:CANXI:FRAMe<fr>:STATus? 2012
SEARch:RESult:CANXI:FRAMe<fr>:STOP? 2013
SEARch:RESult:CANXI:FRAMe<fr>:SYMBol? 2013
SEARch:RESult:CANXI:FRAMe<fr>:TYPE? 2013
SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:AF? 2013
SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:FCRC? 2016
SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:PCRC? 2014
SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:SDT? 2016
SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:SEC? 2014
SEARch:RESult:CANXI:FRAMe<fr>:XDATa<n>:VCID? 2015
SEARch:RESult:CMSB<m>:FCOunt? 2379
SEARch:RESult:CMSB<m>:FRAMe<fr>:CCOunt? 2380
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:NAME? 2380
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STARt? 2380
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STATe? 2381
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:STOP? 2382
SEARch:RESult:CMSB<m>:FRAMe<fr>:CELL<ce>:VALue? 2382
SEARch:RESult:CMSB<m>:FRAMe<fr>:CONE? 2382
SEARch:RESult:CMSB<m>:FRAMe<fr>:CTHRee? 2383
SEARch:RESult:CMSB<m>:FRAMe<fr>:CTWO? 2383
SEARch:RESult:CMSB<m>:FRAMe<fr>:STARt? 2383
SEARch:RESult:CMSB<m>:FRAMe<fr>:STATe? 2384
SEARch:RESult:CMSB<m>:FRAMe<fr>:STOP? 2384
SEARch:RESult:CMSB<m>:FRAMe<fr>:TYPE? 2385
SEARch:RESult:DDR:FCOunt? 2617
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:FVAL? 2617
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STARt? 2617
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STATus? 2618
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:STOP? 2618
SEARch:RESult:DDR:FRAMe<fr>:FLD<fl>:VAL? 2618
SEARch:RESult:DDR:FRAMe<fr>:NWRDs? 2619
SEARch:RESult:DDR:FRAMe<fr>:STARt? 2619
SEARch:RESult:DDR:FRAMe<fr>:STATe? 2620
SEARch:RESult:DDR:FRAMe<fr>:STOP? 2620
SEARch:RESult:DDR:FRAMe<fr>:TYPE? 2620
SEARch:RESult:DPHY:FCOunt? 2273
SEARch:RESult:DPHY:FRAMe<fr>:CS? 2273

SEARch:RESult:DPHY:FRAMe<fr>:DATA? 2274
SEARch:RESult:DPHY:FRAMe<fr>:DTName? 2274
SEARch:RESult:DPHY:FRAMe<fr>:DTYPe? 2274
SEARch:RESult:DPHY:FRAMe<fr>:ECC? 2274
SEARch:RESult:DPHY:FRAMe<fr>:PACKet<pa>:IDX? 2275
SEARch:RESult:DPHY:FRAMe<fr>:PACKet<pa>:VALue? 2275
SEARch:RESult:DPHY:FRAMe<fr>:STARt? 2275
SEARch:RESult:DPHY:FRAMe<fr>:STATe? 2276
SEARch:RESult:DPHY:FRAMe<fr>:STOP? 2276
SEARch:RESult:DPHY:FRAMe<fr>:TYPE? 2277
SEARch:RESult:DPHY:FRAMe<fr>:VCHannel? 2277
SEARch:RESult:EBTB:SCOunt? 2400
SEARch:RESult:EBTB:SYMBol<m>:DATA? 2400
SEARch:RESult:EBTB:SYMBol<m>:STARt? 2400
SEARch:RESult:EBTB:SYMBol<m>:STATus? 2401
SEARch:RESult:EBTB:SYMBol<m>:STOP? 2401
SEARch:RESult:ETHernet:WCOunt? 2116
SEARch:RESult:ETHernet:WORD<w>:BYTE<n>:VALue? 2120
SEARch:RESult:ETHernet:WORD<w>:CRC? 2119
SEARch:RESult:ETHernet:WORD<w>:DATA? 2119
SEARch:RESult:ETHernet:WORD<w>:DESTaddress? 2118
SEARch:RESult:ETHernet:WORD<w>:DSYMbol? 2119
SEARch:RESult:ETHernet:WORD<w>:FTYPe? 2118
SEARch:RESult:ETHernet:WORD<w>:SRCaddress? 2118
SEARch:RESult:ETHernet:WORD<w>:SSYMbol? 2120
SEARch:RESult:ETHernet:WORD<w>:STARt? 2117
SEARch:RESult:ETHernet:WORD<w>:STATe? 2116
SEARch:RESult:ETHernet:WORD<w>:STOP? 2117
SEARch:RESult:ETHernet:WORD<w>:TYPE? 2118
SEARch:RESult:HBTO:FCOunt? 2172
SEARch:RESult:HBTO:FRAMe<fr>:CRC? 2175
SEARch:RESult:HBTO:FRAMe<fr>:DATA? 2174
SEARch:RESult:HBTO:FRAMe<fr>:DESTaddress? 2174
SEARch:RESult:HBTO:FRAMe<fr>:DSYMbol? 2176
SEARch:RESult:HBTO:FRAMe<fr>:FTYPe? 2175
SEARch:RESult:HBTO:FRAMe<fr>:NUMWords? 2175
SEARch:RESult:HBTO:FRAMe<fr>:SRCaddress? 2174
SEARch:RESult:HBTO:FRAMe<fr>:SSYMbol? 2176
SEARch:RESult:HBTO:FRAMe<fr>:STARt? 2173
SEARch:RESult:HBTO:FRAMe<fr>:STATe? 2173
SEARch:RESult:HBTO:FRAMe<fr>:STOP? 2174
SEARch:RESult:HBTO:FRAMe<fr>:TYPE? 2172
SEARch:RESult:HBTO:FRAMe<fr>:WORD<w>:TYPE? 2176
SEARch:RESult:HBTO:FRAMe<fr>:WORD<w>:VALue? 2177
SEARch:RESult:I2C:FCOunt? 1868
SEARch:RESult:I2C:FRAMe<fr>:AACCess? 1870
SEARch:RESult:I2C:FRAMe<fr>:ACCess? 1870
SEARch:RESult:I2C:FRAMe<fr>:ACOMplete? 1870
SEARch:RESult:I2C:FRAMe<fr>:ADBStart? 1870
SEARch:RESult:I2C:FRAMe<fr>:ADDRess? 1871

SEARch:RESult:I2C:FRAMe<fr>:ADEVice?....1871
SEARch:RESult:I2C:FRAMe<fr>:AMODe?....1871
SEARch:RESult:I2C:FRAMe<fr>:ASTart?....1872
SEARch:RESult:I2C:FRAMe<fr>:BCOunt?....1873
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:ACCess?....1873
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:ACKStart?....1873
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:COMPlete?....1874
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:STARt?....1874
SEARch:RESult:I2C:FRAMe<fr>:BYTE<n>:VALue?....1874
SEARch:RESult:I2C:FRAMe<fr>:DATA?....1872
SEARch:RESult:I2C:FRAMe<fr>:RWBStart?....1872
SEARch:RESult:I2C:FRAMe<fr>:STARt?....1869
SEARch:RESult:I2C:FRAMe<fr>:STATus?....1869
SEARch:RESult:I2C:FRAMe<fr>:STOP?....1869
SEARch:RESult:I2C:FRAMe<fr>:SYMBol?....1872
SEARch:RESult:I3C:FCOunt?....1895
SEARch:RESult:I3C:FRAMe<fr>:ACK?....1899
SEARch:RESult:I3C:FRAMe<fr>:ACKStart?....1899
SEARch:RESult:I3C:FRAMe<fr>:ADDRess?....1895
SEARch:RESult:I3C:FRAMe<fr>:ASTart?....1896
SEARch:RESult:I3C:FRAMe<fr>:BITRate?....1896
SEARch:RESult:I3C:FRAMe<fr>:COMMand?....1901
SEARch:RESult:I3C:FRAMe<fr>:CRC?....1901
SEARch:RESult:I3C:FRAMe<fr>:FADDress?....1902
SEARch:RESult:I3C:FRAMe<fr>:FCOMmand?....1902
SEARch:RESult:I3C:FRAMe<fr>:FCRC?....1902
SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:FVALue?....1899
SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:LABel?....1900
SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:STATe?....1900
SEARch:RESult:I3C:FRAMe<fr>:FLD<fl>:VALue?....1901
SEARch:RESult:I3C:FRAMe<fr>:FLDCount?....1896
SEARch:RESult:I3C:FRAMe<fr>:RWBit?....1902
SEARch:RESult:I3C:FRAMe<fr>:RWBStart?....1897
SEARch:RESult:I3C:FRAMe<fr>:STARt?....1897
SEARch:RESult:I3C:FRAMe<fr>:STATus?....1897
SEARch:RESult:I3C:FRAMe<fr>:STOP?....1898
SEARch:RESult:I3C:FRAMe<fr>:SYMBol?....1898
SEARch:RESult:I3C:FRAMe<fr>:TYPE?....1903
SEARch:RESult:LIMit....1771
SEARch:RESult:LIN:FCOunt?....2043
SEARch:RESult:LIN:FRAMe<fr>:BYTE<n>:STATe?....2048
SEARch:RESult:LIN:FRAMe<fr>:BYTE<n>:VALue?....2048
SEARch:RESult:LIN:FRAMe<fr>:CSSTate?....2045
SEARch:RESult:LIN:FRAMe<fr>:CSValue?....2045
SEARch:RESult:LIN:FRAMe<fr>:DATA?....2044
SEARch:RESult:LIN:FRAMe<fr>:IDPValue?....2046
SEARch:RESult:LIN:FRAMe<fr>:IDSTate?....2046
SEARch:RESult:LIN:FRAMe<fr>:IDValue?....2046
SEARch:RESult:LIN:FRAMe<fr>:SDATa?....2044
SEARch:RESult:LIN:FRAMe<fr>:SDEXport?....2045

SEARch:RESult:LIN:FRAMe<fr>:STARt?....2044
SEARch:RESult:LIN:FRAMe<fr>:STATus?....2043
SEARch:RESult:LIN:FRAMe<fr>:STOP?....2044
SEARch:RESult:LIN:FRAMe<fr>:SYMBol?....2047
SEARch:RESult:LIN:FRAMe<fr>:SYSTate?....2047
SEARch:RESult:LIN:FRAMe<fr>:VERSion?....2047
SEARch:RESult:MDIO:WCOunt?....2417
SEARch:RESult:MDIO:WORD<w>:DATA?....2414
SEARch:RESult:MDIO:WORD<w>:PHYS?....2414
SEARch:RESult:MDIO:WORD<w>:REGI?....2415
SEARch:RESult:MDIO:WORD<w>:ST?....2415
SEARch:RESult:MDIO:WORD<w>:STARt?....2415
SEARch:RESult:MDIO:WORD<w>:STATe?....2416
SEARch:RESult:MDIO:WORD<w>:STOP?....2416
SEARch:RESult:MDIO:WORD<w>:SYMBol?....2417
SEARch:RESult:MDIO:WORD<w>:TYPE?....2417
SEARch:RESult:MILStd:WCOunt?....2075
SEARch:RESult:MILStd:WORD<w>:DATA?....2077
SEARch:RESult:MILStd:WORD<w>:INFO?....2077
SEARch:RESult:MILStd:WORD<w>:RTADdress?....2077
SEARch:RESult:MILStd:WORD<w>:STARt?....2076
SEARch:RESult:MILStd:WORD<w>:STATus?....2076
SEARch:RESult:MILStd:WORD<w>:STOP?....2076
SEARch:RESult:MILStd:WORD<w>:SYMBol?....2076
SEARch:RESult:MILStd:WORD<w>:TYPE?....2075
SEARch:RESult:MPHY:FCOunt?....2322
SEARch:RESult:MPHY:FRAMe<fr>:CCOunt?....2322
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:DATA?....2323
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STARt?....2323
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STATe?....2324
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:STOP?....2324
SEARch:RESult:MPHY:FRAMe<fr>:CELL<ce>:TYPE?....2323
SEARch:RESult:MPHY:FRAMe<fr>:DATA?....2324
SEARch:RESult:MPHY:FRAMe<fr>:FTYPe?....2325
SEARch:RESult:MPHY:FRAMe<fr>:STARt?....2326
SEARch:RESult:MPHY:FRAMe<fr>:STATe?....2325
SEARch:RESult:MPHY:FRAMe<fr>:STOP?....2327
SEARch:RESult:PCIE:PACKet<pa>:ADDR?....2593
SEARch:RESult:PCIE:PACKet<pa>:CPID?....2593
SEARch:RESult:PCIE:PACKet<pa>:CPS?....2593
SEARch:RESult:PCIE:PACKet<pa>:DATA?....2593
SEARch:RESult:PCIE:PACKet<pa>:DFC?....2594
SEARch:RESult:PCIE:PACKet<pa>:FCOunt?....2594
SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:FVAL?....2594
SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:STATus?....2594
SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:TYPE?....2595
SEARch:RESult:PCIE:PACKet<pa>:FLD<fl>:VAL?....2595
SEARch:RESult:PCIE:PACKet<pa>:HFC?....2595
SEARch:RESult:PCIE:PACKet<pa>:LEN?....2596
SEARch:RESult:PCIE:PACKet<pa>:RQID?....2596

SEARch:RESult:PCIE:PACKet<pa>:SEQN? 2596
SEARch:RESult:PCIE:PACKet<pa>:STARt? 2596
SEARch:RESult:PCIE:PACKet<pa>:STATe? 2597
SEARch:RESult:PCIE:PACKet<pa>:STOP? 2597
SEARch:RESult:PCIE:PACKet<pa>:TAG? 2597
SEARch:RESult:PCIE:PACKet<pa>:TYPE? 2598
SEARch:RESult:PCIE:PCOunt? 2598
SEARch:RESult:RFFE:FCOunt? 2241
SEARch:RESult:RFFE:SEQuence<se>:ADDRess? 2240
SEARch:RESult:RFFE:SEQuence<se>:BCOunt? 2240
SEARch:RESult:RFFE:SEQuence<se>:BYTE<n>:STATe? 2243
SEARch:RESult:RFFE:SEQuence<se>:BYTE<n>:VALue? 2243
SEARch:RESult:RFFE:SEQuence<se>:DATA? 2241
SEARch:RESult:RFFE:SEQuence<se>:SADD? 2241
SEARch:RESult:RFFE:SEQuence<se>:STARt? 2242
SEARch:RESult:RFFE:SEQuence<se>:STATe? 2241
SEARch:RESult:RFFE:SEQuence<se>:STOP? 2242
SEARch:RESult:RFFE:SEQuence<se>:SYMBol? 2242
SEARch:RESult:RFFE:SEQuence<se>:TYPE? 2243
SEARch:RESult:SHOW 1772
SEARch:RESult:SORT:ASCending 1772
SEARch:RESult:SORT[:MODE] 1772
SEARch:RESult:SPI:FCOunt? 1921
SEARch:RESult:SPI:FRAMe<fr>:COUNt? 1921
SEARch:RESult:SPI:FRAMe<fr>:DATA? 1921
SEARch:RESult:SPI:FRAMe<fr>:STARt? 1921
SEARch:RESult:SPI:FRAMe<fr>:STATus? 1922
SEARch:RESult:SPI:FRAMe<fr>:STOP? 1922
SEARch:RESult:SPI:FRAMe<fr>:WCOunt? 1922
SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:MISO? 1922
SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:MOSI? 1923
SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:STARt? 1923
SEARch:RESult:SPI:FRAMe<fr>:WORD<w>:STOP? 1923
SEARch:RESult:SWIRe:FCOunt? 2544
SEARch:RESult:SWIRe:FRAMe<fr>:DATA? 2544
SEARch:RESult:SWIRe:FRAMe<fr>:STARt? 2544
SEARch:RESult:SWIRe:FRAMe<fr>:STATe? 2545
SEARch:RESult:SWIRe:FRAMe<fr>:STOP? 2545
SEARch:RESult:SWIRe:FRAMe<fr>:TYPE? 2545
SEARch:RESult:TBTO:FCOunt? 2205
SEARch:RESult:TBTO:FRAMe<fr>:CRC? 2205
SEARch:RESult:TBTO:FRAMe<fr>:DATA? 2205
SEARch:RESult:TBTO:FRAMe<fr>:DESTaddress? 2205
SEARch:RESult:TBTO:FRAMe<fr>:DSYMbol? 2206
SEARch:RESult:TBTO:FRAMe<fr>:FTYPe? 2206
SEARch:RESult:TBTO:FRAMe<fr>:NUMWords? 2207
SEARch:RESult:TBTO:FRAMe<fr>:SRCaddress? 2207
SEARch:RESult:TBTO:FRAMe<fr>:SSYMbol? 2207
SEARch:RESult:TBTO:FRAMe<fr>:STARt? 2208
SEARch:RESult:TBTO:FRAMe<fr>:STATe? 2208

SEARch:RESult:TBTO:FRAMe<fr>:STOP? 2208
SEARch:RESult:TBTO:FRAMe<fr>:TYPE? 2209
SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:TYPE? 2209
SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:VALue? 2209
SEARch:RESult:TBTO:FRAMe<fr>:WORD<w>:VSTR? 2210
SEARch:RESult:TNOS:FCOunt? 2140
SEARch:RESult:TNOS:FRAMe<fr>:BITRate? 2140
SEARch:RESult:TNOS:FRAMe<fr>:CRC? 2142
SEARch:RESult:TNOS:FRAMe<fr>:DTADdress? 2142
SEARch:RESult:TNOS:FRAMe<fr>:DTSYmbol? 2142
SEARch:RESult:TNOS:FRAMe<fr>:FCRC? 2142
SEARch:RESult:TNOS:FRAMe<fr>:FDATa? 2143
SEARch:RESult:TNOS:FRAMe<fr>:FDTaddress? 2143
SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:FVALue? 2140
SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:LABel? 2141
SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:STATe? 2141
SEARch:RESult:TNOS:FRAMe<fr>:FLD<fl>:VALue? 2141
SEARch:RESult:TNOS:FRAMe<fr>:FLDCount? 2140
SEARch:RESult:TNOS:FRAMe<fr>:FSRaddress? 2143
SEARch:RESult:TNOS:FRAMe<fr>:FTPLength? 2143
SEARch:RESult:TNOS:FRAMe<fr>:SRADdress? 2144
SEARch:RESult:TNOS:FRAMe<fr>:SRSYmbol? 2144
SEARch:RESult:TNOS:FRAMe<fr>:STARt? 2144
SEARch:RESult:TNOS:FRAMe<fr>:STATus? 2144
SEARch:RESult:TNOS:FRAMe<fr>:STOP? 2145
SEARch:RESult:TNOS:FRAMe<fr>:TPLength? 2145
SEARch:RESult:TNOS:FRAMe<fr>:TYPE? 2145
SEARch:RESult:USB:PACKet<pa>:ADDRess? 2458
SEARch:RESult:USB:PACKet<pa>:CRC? 2458
SEARch:RESult:USB:PACKet<pa>:DATA? 2458
SEARch:RESult:USB:PACKet<pa>:ENDPoint? 2458
SEARch:RESult:USB:PACKet<pa>:ET? 2459
SEARch:RESult:USB:PACKet<pa>:FRAMe? 2459
SEARch:RESult:USB:PACKet<pa>:PID? 2459
SEARch:RESult:USB:PACKet<pa>:PORT? 2460
SEARch:RESult:USB:PACKet<pa>:SC? 2460
SEARch:RESult:USB:PACKet<pa>:SEU? 2460
SEARch:RESult:USB:PACKet<pa>:STARt? 2461
SEARch:RESult:USB:PACKet<pa>:STATus? 2461
SEARch:RESult:USB:PACKet<pa>:STOP? 2461
SEARch:RESult:USB:PCOunt? 2462
SEARch:RESult:USBPd:FCOunt? 2523
SEARch:RESult:USBPd:FRAMe<fr>:DATA? 2523
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:FVAL? 2523
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STARt? 2524
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STATus? 2523
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:STOP? 2524
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:TYPE? 2525
SEARch:RESult:USBPd:FRAMe<fr>:FLD<fl>:VAL? 2525
SEARch:RESult:USBPd:FRAMe<fr>:INFO? 2525

SEARch:RESult:USBPd:FRAMe<fr>:STARt? 2526
SEARch:RESult:USBPd:FRAMe<fr>:STATe? 2526
SEARch:RESult:USBPd:FRAMe<fr>:STOP? 2527
SEARch:RESult:USBPd:FRAMe<fr>:TYPE? 2527
SEARch:RESult:USBThree:FCOunt? 2498
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:FVAL? 2501
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STARt? 2500
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STATus? 2499
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:STOP? 2500
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:TYPE? 2499
SEARch:RESult:USBThree:FRAMe<fr>:FLD<fl>:VAL? 2501
SEARch:RESult:USBThree:FRAMe<fr>:INFO? 2498
SEARch:RESult:USBThree:FRAMe<fr>:STARt? 2498
SEARch:RESult:USBThree:FRAMe<fr>:STATe? 2498
SEARch:RESult:USBThree:FRAMe<fr>:STOP? 2499
SEARch:RESult:USBThree:FRAMe<fr>:TYPE? 2497
SEARch:RESult[:ALL]? 1773
SEARch:SOURce 1733
SEARch:TRIGger:ARINc:DATA:CONDition 2091
SEARch:TRIGger:ARINc:DATA:MAX 2091
SEARch:TRIGger:ARINc:DATA:MIN 2091
SEARch:TRIGger:ARINc:ERRor:CODing 2092
SEARch:TRIGger:ARINc:ERRor:PARity 2092
SEARch:TRIGger:ARINc:ERRor:TIMing 2093
SEARch:TRIGger:ARINc:LABel:CONDition 2091
SEARch:TRIGger:ARINc:LABel:MAX 2091
SEARch:TRIGger:ARINc:LABel:MIN 2091
SEARch:TRIGger:ARINc:SDI 2092
SEARch:TRIGger:ARINc:SSM 2092
SEARch:TRIGger:ARINc:TYPE 2090
SEARch:TRIGger:CAN:ACKerror 1967
SEARch:TRIGger:CAN:BITSterror 1967
SEARch:TRIGger:CAN:BORDer 1962
SEARch:TRIGger:CAN:CRCerror 1968
SEARch:TRIGger:CAN:DCONdition 1964
SEARch:TRIGger:CAN:DLC 1965
SEARch:TRIGger:CAN:DLCCondition 1965
SEARch:TRIGger:CAN:DMAX 1965
SEARch:TRIGger:CAN:DMIN 1964
SEARch:TRIGger:CAN:FDATa:BRS 1969
SEARch:TRIGger:CAN:FDATa:DPOPerator 1966
SEARch:TRIGger:CAN:FDATa:DPOSition 1967
SEARch:TRIGger:CAN:FDATa:DPTO 1967
SEARch:TRIGger:CAN:FDATa:ESI 1969
SEARch:TRIGger:CAN:FDATa:SCERror 1968
SEARch:TRIGger:CAN:FDATa:STANdard 1962
SEARch:TRIGger:CAN:FDATa[:FDF] 1969
SEARch:TRIGger:CAN:FORMerror 1968
SEARch:TRIGger:CAN:FTYPe 1962
SEARch:TRIGger:CAN:ICONdition 1963

SEARch:TRIGger:CAN:IMAX ... 1963
SEARch:TRIGger:CAN:IMIN ... 1964
SEARch:TRIGger:CAN:ITYPe ... 1963
SEARch:TRIGger:CAN:SERRor ... 1961
SEARch:TRIGger:CAN:SFIDentifier ... 1961
SEARch:TRIGger:CAN:SFTYpe ... 1960
SEARch:TRIGger:CAN:SIDData ... 1961
SEARch:TRIGger:CAN:SSYMbolic ... 1979
SEARch:TRIGger:CAN:SYMBolic:DMAX ... 1981
SEARch:TRIGger:CAN:SYMBolic:DMIN ... 1980
SEARch:TRIGger:CAN:SYMBolic:MSGValue ... 1979
SEARch:TRIGger:CAN:SYMBolic:SGEValue ... 1981
SEARch:TRIGger:CAN:SYMBolic:SIGValue ... 1980
SEARch:TRIGger:CAN:SYMBolic:SSIGnals ... 1980
SEARch:TRIGger:CAN[:SSOFrame] ... 1960
SEARch:TRIGger:CANXl:BIT ... 2004
SEARch:TRIGger:CANXl:CHKall ... 2002
SEARch:TRIGger:CANXl:CLR ... 2003
SEARch:TRIGger:CANXl:DMAX ... 2004
SEARch:TRIGger:CANXl:DMIN ... 2004
SEARch:TRIGger:CANXl:DOPerator ... 2005
SEARch:TRIGger:CANXl:ERENable ... 2006
SEARch:TRIGger:CANXl:ERRor<m>:ENABle ... 2006
SEARch:TRIGger:CANXl:FIENable ... 2003
SEARch:TRIGger:CANXl:FRAMe<fr>:ENABle ... 2003
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:BIT ... 2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DMAX ... 2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DMIN ... 2004
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:DOPerator ... 2005
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:ENABle ... 2003
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IMAX ... 2005
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IMIN ... 2006
SEARch:TRIGger:CANXl:FRAMe<fr>:FLD<fl>:IOPerator ... 2006
SEARch:TRIGger:CANXl:FRENable ... 2003
SEARch:TRIGger:CANXl:IMAX ... 2005
SEARch:TRIGger:CANXl:IMIN ... 2006
SEARch:TRIGger:CANXl:IOPerator ... 2006
SEARch:TRIGger:CMSB:BIT ... 2375
SEARch:TRIGger:CMSB:DMAX ... 2376
SEARch:TRIGger:CMSB:DMIN ... 2376
SEARch:TRIGger:CMSB:DOPerator ... 2377
SEARch:TRIGger:CMSB:ERENable ... 2374
SEARch:TRIGger:CMSB:ERRor<m>:ENABle ... 2374
SEARch:TRIGger:CMSB:FIENable ... 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:ENABle ... 2374
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:BIT ... 2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMAX ... 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DMIN ... 2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:DOPerator ... 2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:ENABle ... 2375

SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMAX....2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IMIN....2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FIELd<n>:IOPerator....2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:BIT....2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMAX....2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DMIN....2376
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:DOPerator....2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:ENABle....2375
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMAX....2377
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IMIN....2378
SEARch:TRIGger:CMSB:FRAMe<fr>:FLD<fl>:IOPerator....2378
SEARch:TRIGger:CMSB:FRENable....2374
SEARch:TRIGger:CMSB:IMAX....2377
SEARch:TRIGger:CMSB:IMIN....2378
SEARch:TRIGger:CMSB:IOPerator....2378
SEARch:TRIGger:CONDitions?....1735
SEARch:TRIGger:DDR:DMAX....2613
SEARch:TRIGger:DDR:DMIN....2614
SEARch:TRIGger:DDR:DOPerator....2614
SEARch:TRIGger:DDR:ERENable....2612
SEARch:TRIGger:DDR:ERRor<m>:ENABle....2612
SEARch:TRIGger:DDR:FIENable....2613
SEARch:TRIGger:DDR:FRAMe<fr>:ENABle....2615
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMAX....2613
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DMIN....2614
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:DOPerator....2614
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:ENABle....2613
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMAX....2615
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IMIN....2615
SEARch:TRIGger:DDR:FRAMe<fr>:FLD<fl>:IOPerator....2616
SEARch:TRIGger:DDR:FRENable....2613
SEARch:TRIGger:DDR:FRENable....2615
SEARch:TRIGger:DDR:IMAX....2615
SEARch:TRIGger:DDR:IMIN....2615
SEARch:TRIGger:DDR:IOPerator....2616
SEARch:TRIGger:DPHY:DATA:CONDition....2265
SEARch:TRIGger:DPHY:DATA:MAX....2265
SEARch:TRIGger:DPHY:DATA:MIN....2266
SEARch:TRIGger:DPHY:DIDX:CONDition....2266
SEARch:TRIGger:DPHY:DIDX:MAX....2266
SEARch:TRIGger:DPHY:DIDX:MIN....2267
SEARch:TRIGger:DPHY:DTYPe:CONDition....2267
SEARch:TRIGger:DPHY:DTYPe:MAX....2268
SEARch:TRIGger:DPHY:DTYPe:MIN....2268
SEARch:TRIGger:DPHY:ESCMode:CONDition....2268
SEARch:TRIGger:DPHY:ESCMode:MAX....2269
SEARch:TRIGger:DPHY:ESCMode:MIN....2269
SEARch:TRIGger:DPHY:ESDTa:CONDition....2269
SEARch:TRIGger:DPHY:ESDTa:MAX....2270
SEARch:TRIGger:DPHY:ESDTa:MIN....2270

SEARch:TRIGger:DPHY:ESINdex:CONDition ... 2270
SEARch:TRIGger:DPHY:ESINdex:MAX ... 2271
SEARch:TRIGger:DPHY:ESINdex:MIN ... 2271
SEARch:TRIGger:DPHY:HSVC ... 2271
SEARch:TRIGger:DPHY:TYPE ... 2264
SEARch:TRIGger:DPHY:WCOunt:CONDition ... 2272
SEARch:TRIGger:DPHY:WCOunt:MAX ... 2272
SEARch:TRIGger:DPHY:WCOunt:MIN ... 2272
SEARch:TRIGger:EBTB:DISParityerr ... 2397
SEARch:TRIGger:EBTB:DX ... 2397
SEARch:TRIGger:EBTB:DY ... 2397
SEARch:TRIGger:EBTB:EBPA ... 2398
SEARch:TRIGger:EBTB:GLITcherror ... 2398
SEARch:TRIGger:EBTB:STYPe ... 2398
SEARch:TRIGger:EBTB:SYME ... 2399
SEARch:TRIGger:EBTB:SYMType ... 2399
SEARch:TRIGger:EBTB:TBPA ... 2399
SEARch:TRIGger:EBTB:UNK ... 2399
SEARch:TRIGger:EDGE:ACOPy ... 1737
SEARch:TRIGger:EDGE:SLOPe ... 1737
SEARch:TRIGger:EDGE[:STATe] ... 1735
SEARch:TRIGger:ETHernet:ERRor:LENGth ... 2115
SEARch:TRIGger:ETHernet:ERRor:PREamble ... 2115
SEARch:TRIGger:ETHernet:FRAMe:CCONdition ... 2114
SEARch:TRIGger:ETHernet:FRAMe:CMAX ... 2115
SEARch:TRIGger:ETHernet:FRAMe:CMIN ... 2115
SEARch:TRIGger:ETHernet:FRAMe:DCONdition ... 2111
SEARch:TRIGger:ETHernet:FRAMe:DMAX ... 2112
SEARch:TRIGger:ETHernet:FRAMe:DMIN ... 2111
SEARch:TRIGger:ETHernet:FRAMe:SCONdition ... 2112
SEARch:TRIGger:ETHernet:FRAMe:SMAX ... 2113
SEARch:TRIGger:ETHernet:FRAMe:SMIN ... 2112
SEARch:TRIGger:ETHernet:FRAMe:TCONdition ... 2113
SEARch:TRIGger:ETHernet:FRAMe:TMAX ... 2114
SEARch:TRIGger:ETHernet:FRAMe:TMIN ... 2113
SEARch:TRIGger:ETHernet:TYPE ... 2110
SEARch:TRIGger:GLITch:ACOPy ... 1737
SEARch:TRIGger:GLITch:POLarity ... 1738
SEARch:TRIGger:GLITch:RANGe ... 1738
SEARch:TRIGger:GLITch:WIDTh ... 1738
SEARch:TRIGger:GLITch[:STATe] ... 1735
SEARch:TRIGger:HBTO:CRC:CONDition ... 2168
SEARch:TRIGger:HBTO:CRC:MAX ... 2168
SEARch:TRIGger:HBTO:CRC:MIN ... 2168
SEARch:TRIGger:HBTO:DADDress:CONDition ... 2164
SEARch:TRIGger:HBTO:DADDress:MAX ... 2165
SEARch:TRIGger:HBTO:DADDress:MIN ... 2165
SEARch:TRIGger:HBTO:DATA:DCONdition ... 2169
SEARch:TRIGger:HBTO:DATA:DMAX ... 2169
SEARch:TRIGger:HBTO:DATA:DMIN ... 2169

SEARch:TRIGger:HBTO:DATA:ICONdition....2170
SEARch:TRIGger:HBTO:DATA:IMAX....2171
SEARch:TRIGger:HBTO:DATA:IMIN....2170
SEARch:TRIGger:HBTO:ERRor:CRC....2171
SEARch:TRIGger:HBTO:ERRor:PREamble....2171
SEARch:TRIGger:HBTO:ERRor:SFD....2171
SEARch:TRIGger:HBTO:LENGth:CONDition....2167
SEARch:TRIGger:HBTO:LENGth:MAX....2167
SEARch:TRIGger:HBTO:LENGth:MIN....2167
SEARch:TRIGger:HBTO:SADDress:CONDition....2165
SEARch:TRIGger:HBTO:SADDress:MAX....2166
SEARch:TRIGger:HBTO:SADDress:MIN....2166
SEARch:TRIGger:HBTO:TYPE....2164
SEARch:TRIGger:I2C:ACCess....1863
SEARch:TRIGger:I2C:ACONdition....1861
SEARch:TRIGger:I2C:ADData....1861
SEARch:TRIGger:I2C:ADDO<m>:ADRType....1864
SEARch:TRIGger:I2C:ADDO<m>:ENABle....1863
SEARch:TRIGger:I2C:ADDO<m>:RWBit....1864
SEARch:TRIGger:I2C:ADDO<m>[:VALue]....1864
SEARch:TRIGger:I2C:ADDRess....1862
SEARch:TRIGger:I2C:ADDTo....1862
SEARch:TRIGger:I2C:ADNack....1867
SEARch:TRIGger:I2C:ADOR....1860
SEARch:TRIGger:I2C:AMODe....1862
SEARch:TRIGger:I2C:DCONdition....1866
SEARch:TRIGger:I2C:DMAX....1867
SEARch:TRIGger:I2C:DMIN....1866
SEARch:TRIGger:I2C:DPOPerator....1865
SEARch:TRIGger:I2C:DPOSition....1865
SEARch:TRIGger:I2C:DPTO....1866
SEARch:TRIGger:I2C:DRNack....1867
SEARch:TRIGger:I2C:DWNack....1868
SEARch:TRIGger:I2C:NACKnowledge....1860
SEARch:TRIGger:I2C:RCONdition....1859
SEARch:TRIGger:I2C:SADDress....1860
SEARch:TRIGger:I2C:SCONdition....1859
SEARch:TRIGger:I2C:STCNdition....1859
SEARch:TRIGger:I3C:BIT....1894
SEARch:TRIGger:I3C:CHKall....1890
SEARch:TRIGger:I3C:CLR....1890
SEARch:TRIGger:I3C:DMAX....1891
SEARch:TRIGger:I3C:DMIN....1891
SEARch:TRIGger:I3C:DOPerator....1892
SEARch:TRIGger:I3C:ERENable....1892
SEARch:TRIGger:I3C:ERRor<m>:ENABle....1892
SEARch:TRIGger:I3C:FIENable....1894
SEARch:TRIGger:I3C:FRAMe<fr>:ENABle....1891
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:BIT....1894
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMAX....1891

SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DMIN 1891
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:DOPerator 1892
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:ENABle 1894
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMAX 1893
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IMIN 1893
SEARch:TRIGger:I3C:FRAMe<fr>:FLD<fl>:IOPerator 1893
SEARch:TRIGger:I3C:FRENable 1891
SEARch:TRIGger:I3C:IMAX 1893
SEARch:TRIGger:I3C:IMIN 1893
SEARch:TRIGger:I3C:IOPerator 1893
SEARch:TRIGger:INTerval:ACOPy 1737
SEARch:TRIGger:INTerval:DELTa 1739
SEARch:TRIGger:INTerval:RANGe 1740
SEARch:TRIGger:INTerval:SLOPe 1739
SEARch:TRIGger:INTerval:WIDTh 1740
SEARch:TRIGger:INTerval[:STATe] 1735
SEARch:TRIGger:LEVel:NOISe:ABSolute 1765
SEARch:TRIGger:LEVel:NOISe:MODE 1766
SEARch:TRIGger:LEVel:NOISe:RELative 1766
SEARch:TRIGger:LEVel:NOISe[:STATe] 1767
SEARch:TRIGger:LEVel:RUNT:LOWer 1742
SEARch:TRIGger:LEVel:RUNT:UPPer 1742
SEARch:TRIGger:LEVel:TRANsition:LOWer 1745
SEARch:TRIGger:LEVel:TRANsition:UPPer 1745
SEARch:TRIGger:LEVel:WINDow:LOWer 1751
SEARch:TRIGger:LEVel:WINDow:UPPer 1751
SEARch:TRIGger:LEVel[:VALue] 1736
SEARch:TRIGger:LIN:BORDer 2039
SEARch:TRIGger:LIN:CHKSerror 2041
SEARch:TRIGger:LIN:CRCDatalen 2042
SEARch:TRIGger:LIN:DCONdition 2038
SEARch:TRIGger:LIN:DLECondition 2040
SEARch:TRIGger:LIN:DLENgth 2040
SEARch:TRIGger:LIN:DMAX 2039
SEARch:TRIGger:LIN:DMIN 2039
SEARch:TRIGger:LIN:ERRPattern 2042
SEARch:TRIGger:LIN:ICONdition 2037
SEARch:TRIGger:LIN:IDENtifieror 2035
SEARch:TRIGger:LIN:IDOR<m>:ENABle 2038
SEARch:TRIGger:LIN:IDOR<m>[:VALue] 2038
SEARch:TRIGger:LIN:IMAX 2037
SEARch:TRIGger:LIN:IMIN 2037
SEARch:TRIGger:LIN:IPERror 2041
SEARch:TRIGger:LIN:SERRor 2036
SEARch:TRIGger:LIN:SFIDentifier 2035
SEARch:TRIGger:LIN:SIDData 2036
SEARch:TRIGger:LIN:SSOFrame 2035
SEARch:TRIGger:LIN:STANdard 2042
SEARch:TRIGger:LIN:SYERror 2041
SEARch:TRIGger:LIN:WUFRame 2036

SEARch:TRIGger:MDIO:DATA 2411
SEARch:TRIGger:MDIO:FRAMetype 2412
SEARch:TRIGger:MDIO:PHYS 2412
SEARch:TRIGger:MDIO:REGI 2413
SEARch:TRIGger:MDIO:ST 2413
SEARch:TRIGger:MDIO:TYPE 2413
SEARch:TRIGger:MILStd:CDST:ICONdition 2071
SEARch:TRIGger:MILStd:CDST:IMAX 2072
SEARch:TRIGger:MILStd:CDST:IMIN 2071
SEARch:TRIGger:MILStd:CDST:RCONdition 2069
SEARch:TRIGger:MILStd:CDST:RMAX 2070
SEARch:TRIGger:MILStd:CDST:RMIN 2070
SEARch:TRIGger:MILStd:CMD:CCONdition 2071
SEARch:TRIGger:MILStd:CMD:CMAX 2072
SEARch:TRIGger:MILStd:CMD:CMIN 2071
SEARch:TRIGger:MILStd:CMD:RCONdition 2069
SEARch:TRIGger:MILStd:CMD:RMAX 2070
SEARch:TRIGger:MILStd:CMD:RMIN 2070
SEARch:TRIGger:MILStd:CMD:SCONdition 2071
SEARch:TRIGger:MILStd:CMD:SMAX 2072
SEARch:TRIGger:MILStd:CMD:SMIN 2071
SEARch:TRIGger:MILStd:CMD:TR 2073
SEARch:TRIGger:MILStd:DATA:DCONdition 2071
SEARch:TRIGger:MILStd:DATA:DMAX 2072
SEARch:TRIGger:MILStd:DATA:DMIN 2071
SEARch:TRIGger:MILStd:DATA:ICONdition 2072
SEARch:TRIGger:MILStd:DATA:IMAX 2073
SEARch:TRIGger:MILStd:DATA:IMIN 2072
SEARch:TRIGger:MILStd:DATA:RCONdition 2069
SEARch:TRIGger:MILStd:DATA:RMAX 2070
SEARch:TRIGger:MILStd:DATA:RMIN 2070
SEARch:TRIGger:MILStd:ERRor:MANChester 2073
SEARch:TRIGger:MILStd:ERRor:PARity 2073
SEARch:TRIGger:MILStd:ERRor:SYNC 2073
SEARch:TRIGger:MILStd:ERRor:TIMing 2073
SEARch:TRIGger:MILStd:STATus:BCReceived 2074
SEARch:TRIGger:MILStd:STATus:BUSY 2074
SEARch:TRIGger:MILStd:STATus:DBCaccept 2074
SEARch:TRIGger:MILStd:STATus:INSTrument 2074
SEARch:TRIGger:MILStd:STATus:MERRor 2074
SEARch:TRIGger:MILStd:STATus:SREQuest 2074
SEARch:TRIGger:MILStd:STATus:SUBSystem 2074
SEARch:TRIGger:MILStd:STATus:TERMinal 2074
SEARch:TRIGger:MILStd:TPSPecifier 2074
SEARch:TRIGger:MILStd:TYPE 2069
SEARch:TRIGger:MPHY:CRC:CONDition 2315
SEARch:TRIGger:MPHY:CRC:MAX 2316
SEARch:TRIGger:MPHY:CRC:MIN 2316
SEARch:TRIGger:MPHY:CREDit:CONDition 2317
SEARch:TRIGger:MPHY:CREDit:MAX 2318

SEARch:TRIGger:MPHY:CREDit:MIN....2318
SEARch:TRIGger:MPHY:CREQ....2316
SEARch:TRIGger:MPHY:DATA:DCONdition....2312
SEARch:TRIGger:MPHY:DATA:DMAX....2313
SEARch:TRIGger:MPHY:DATA:DMIN....2312
SEARch:TRIGger:MPHY:DATA:ICONdition....2313
SEARch:TRIGger:MPHY:DATA:IMAX....2314
SEARch:TRIGger:MPHY:DATA:IMIN....2314
SEARch:TRIGger:MPHY:ERRor:LCMD....2321
SEARch:TRIGger:MPHY:ERRor:LENGth....2321
SEARch:TRIGger:MPHY:ERRor:REServed....2320
SEARch:TRIGger:MPHY:ERRor:SYMBol....2321
SEARch:TRIGger:MPHY:ERRor:UNKNown....2321
SEARch:TRIGger:MPHY:FSNumber:CONDition....2314
SEARch:TRIGger:MPHY:FSNumber:MAX....2315
SEARch:TRIGger:MPHY:FSNumber:MIN....2315
SEARch:TRIGger:MPHY:LCCType....2306
SEARch:TRIGger:MPHY:LWFour:CONDition....2311
SEARch:TRIGger:MPHY:LWFour:MAX....2311
SEARch:TRIGger:MPHY:LWFour:MIN....2311
SEARch:TRIGger:MPHY:LWONe:CONDition....2307
SEARch:TRIGger:MPHY:LWONe:MAX....2308
SEARch:TRIGger:MPHY:LWONe:MIN....2308
SEARch:TRIGger:MPHY:LWTHree:CONDition....2310
SEARch:TRIGger:MPHY:LWTHree:MAX....2310
SEARch:TRIGger:MPHY:LWTHree:MIN....2310
SEARch:TRIGger:MPHY:LWTWo:CONDition....2308
SEARch:TRIGger:MPHY:LWTWo:MAX....2309
SEARch:TRIGger:MPHY:LWTWo:MIN....2309
SEARch:TRIGger:MPHY:PBEGin:CONDition....2318
SEARch:TRIGger:MPHY:PBEGin:MAX....2319
SEARch:TRIGger:MPHY:PBEGin:MIN....2319
SEARch:TRIGger:MPHY:PFID:CONDition....2319
SEARch:TRIGger:MPHY:PFID:MAX....2320
SEARch:TRIGger:MPHY:PFID:MIN....2320
SEARch:TRIGger:MPHY:RREQ....2317
SEARch:TRIGger:MPHY:SSIC:BIT....2335
SEARch:TRIGger:MPHY:SSIC:DMAX....2335
SEARch:TRIGger:MPHY:SSIC:DMIN....2336
SEARch:TRIGger:MPHY:SSIC:DOPerator....2336
SEARch:TRIGger:MPHY:SSIC:ERENable....2333
SEARch:TRIGger:MPHY:SSIC:ERRor<m>:ENABle....2333
SEARch:TRIGger:MPHY:SSIC:FIENable....2334
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:ENABle....2333
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:BIT....2335
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX....2335
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN....2336
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator....2336
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle....2334
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle....2334

SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX....2337
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN....2338
SEARch:TRIGger:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator....2338
SEARch:TRIGger:MPHY:SSIC:FRENable....2333
SEARch:TRIGger:MPHY:SSIC:FRENable....2337
SEARch:TRIGger:MPHY:SSIC:IMAX....2337
SEARch:TRIGger:MPHY:SSIC:IMIN....2338
SEARch:TRIGger:MPHY:SSIC:IOPerator....2338
SEARch:TRIGger:MPHY:TC....2312
SEARch:TRIGger:MPHY:TYPE....2306
SEARch:TRIGger:PATTern:A:LOGic....1754
SEARch:TRIGger:PATTern:A[:ENABle]....1754
SEARch:TRIGger:PATTern:AB:LOGic....1755
SEARch:TRIGger:PATTern:ABCD:LOGic....1755
SEARch:TRIGger:PATTern:ACOPy....1737
SEARch:TRIGger:PATTern:B:LOGic....1754
SEARch:TRIGger:PATTern:B[:ENABle]....1754
SEARch:TRIGger:PATTern:C:LOGic....1755
SEARch:TRIGger:PATTern:C[:ENABle]....1754
SEARch:TRIGger:PATTern:CD:LOGic....1755
SEARch:TRIGger:PATTern:D:LOGic....1755
SEARch:TRIGger:PATTern:D[:ENABle]....1754
SEARch:TRIGger:PATTern:MODE....1756
SEARch:TRIGger:PATTern:TIMeout:MODE....1756
SEARch:TRIGger:PATTern:TIMeout[:TIME]....1757
SEARch:TRIGger:PATTern:WIDTh:DELTa....1758
SEARch:TRIGger:PATTern:WIDTh:RANGe....1757
SEARch:TRIGger:PATTern:WIDTh[:WIDTh]....1757
SEARch:TRIGger:PATTern[:STATe]....1735
SEARch:TRIGger:PCIE:DLLP:FCTL:CRET....2577
SEARch:TRIGger:PCIE:DLLP:FCTL:VCID....2578
SEARch:TRIGger:PCIE:DLLP:MULT:AUTH....2578
SEARch:TRIGger:PCIE:DLLP:MULT:CRET....2578
SEARch:TRIGger:PCIE:DLLP:MULT:DVPT....2578
SEARch:TRIGger:PCIE:DLLP:MULT:HABS....2579
SEARch:TRIGger:PCIE:DLLP:MULT:MIXT....2579
SEARch:TRIGger:PCIE:DLLP:MULT:PHAS....2579
SEARch:TRIGger:PCIE:DLLP:MULT:RESA....2579
SEARch:TRIGger:PCIE:DLLP:MULT:TLPT....2580
SEARch:TRIGger:PCIE:DLLP:MULT:TYPE....2580
SEARch:TRIGger:PCIE:DLLP:MULT:VHFC....2580
SEARch:TRIGger:PCIE:DLLP:MULT:VHGR....2581
SEARch:TRIGger:PCIE:DLLP:MULT:VLNR....2581
SEARch:TRIGger:PCIE:DLLP:POWM....2581
SEARch:TRIGger:PCIE:DLLP:SEQ....2582
SEARch:TRIGger:PCIE:DLLP:TYPE....2582
SEARch:TRIGger:PCIE:DLLP:VPAT....2582
SEARch:TRIGger:PCIE:ERRC:CRC....2582
SEARch:TRIGger:PCIE:ERRC:DISP....2583
SEARch:TRIGger:PCIE:ERRC:ECRC....2583

SEARch:TRIGger:PCIE:ERRC:INVP....2583
SEARch:TRIGger:PCIE:ERRC:LCRC....2583
SEARch:TRIGger:PCIE:ERRC:LENGth....2584
SEARch:TRIGger:PCIE:ERRC:MALFormed....2584
SEARch:TRIGger:PCIE:ERRC:MXPFix....2584
SEARch:TRIGger:PCIE:ERRC:PFORder....2584
SEARch:TRIGger:PCIE:ERRC:SYCBit....2585
SEARch:TRIGger:PCIE:ERRC:UKNP....2585
SEARch:TRIGger:PCIE:ERRC:VOORange....2585
SEARch:TRIGger:PCIE:OSET:COMP....2586
SEARch:TRIGger:PCIE:OSET:EIDE....2586
SEARch:TRIGger:PCIE:OSET:EIDL....2586
SEARch:TRIGger:PCIE:OSET:FTS....2586
SEARch:TRIGger:PCIE:OSET:SDS....2585
SEARch:TRIGger:PCIE:OSET:SKIP....2587
SEARch:TRIGger:PCIE:OSET:TSONe....2587
SEARch:TRIGger:PCIE:OSET:TSTWo....2587
SEARch:TRIGger:PCIE:TLP:ADRT....2587
SEARch:TRIGger:PCIE:TLP:AT....2588
SEARch:TRIGger:PCIE:TLP:CFGT....2588
SEARch:TRIGger:PCIE:TLP:CPID....2588
SEARch:TRIGger:PCIE:TLP:CPLS....2589
SEARch:TRIGger:PCIE:TLP:DEID....2589
SEARch:TRIGger:PCIE:TLP:MERW....2589
SEARch:TRIGger:PCIE:TLP:MSGC....2589
SEARch:TRIGger:PCIE:TLP:MSGR....2590
SEARch:TRIGger:PCIE:TLP:ORDE....2590
SEARch:TRIGger:PCIE:TLP:REID....2590
SEARch:TRIGger:PCIE:TLP:SNOO....2591
SEARch:TRIGger:PCIE:TLP:SNUM....2591
SEARch:TRIGger:PCIE:TLP:TCHN....2591
SEARch:TRIGger:PCIE:TLP:TYPE....2591
SEARch:TRIGger:PCIE:TYPE....2592
SEARch:TRIGger:RFFE:ADDRess:CONDition....2235
SEARch:TRIGger:RFFE:ADDRess:MAX....2237
SEARch:TRIGger:RFFE:ADDRess:MIN....2237
SEARch:TRIGger:RFFE:BCOunt:CONDition....2236
SEARch:TRIGger:RFFE:BCOunt:MAX....2237
SEARch:TRIGger:RFFE:BCOunt:MIN....2237
SEARch:TRIGger:RFFE:DATA:DCON....2236
SEARch:TRIGger:RFFE:DATA:DMAX....2237
SEARch:TRIGger:RFFE:DATA:DMIN....2237
SEARch:TRIGger:RFFE:DATA:ICONdition....2236
SEARch:TRIGger:RFFE:DATA:IMAX....2237
SEARch:TRIGger:RFFE:DATA:IMIN....2237
SEARch:TRIGger:RFFE:ERRor:BP....2238
SEARch:TRIGger:RFFE:ERRor:LENGth....2238
SEARch:TRIGger:RFFE:ERRor:NOResponse....2238
SEARch:TRIGger:RFFE:ERRor:PARity....2239
SEARch:TRIGger:RFFE:ERRor:SSC....2239

SEARch:TRIGger:RFFE:ERRor:USEQuence 2239
SEARch:TRIGger:RFFE:INTerrupt 2238
SEARch:TRIGger:RFFE:SADDress:CONDition 2235
SEARch:TRIGger:RFFE:SADDress:MAX 2237
SEARch:TRIGger:RFFE:SADDress:MIN 2237
SEARch:TRIGger:RFFE:TYPE 2233
SEARch:TRIGger:RUNT:ACOPy 1737
SEARch:TRIGger:RUNT:DELTa 1741
SEARch:TRIGger:RUNT:POLarity 1741
SEARch:TRIGger:RUNT:RANGe 1741
SEARch:TRIGger:RUNT:WIDTh 1742
SEARch:TRIGger:RUNT[:STATe] 1736
SEARch:TRIGger:SETHold:ACOPy 1737
SEARch:TRIGger:SETHold:CEDGe 1752
SEARch:TRIGger:SETHold:CLEVel 1752
SEARch:TRIGger:SETHold:CSOurce 1752
SEARch:TRIGger:SETHold:HTIMe 1753
SEARch:TRIGger:SETHold:STIMe 1753
SEARch:TRIGger:SETHold[:STATe] 1736
SEARch:TRIGger:SLEWrate:ACOPy 1737
SEARch:TRIGger:SLEWrate:DELTa 1743
SEARch:TRIGger:SLEWrate:RANGe 1744
SEARch:TRIGger:SLEWrate:SLOPe 1744
SEARch:TRIGger:SLEWrate:TIME 1744
SEARch:TRIGger:SLEWrate[:STATe] 1736
SEARch:TRIGger:SPI:DPOPerator 1919
SEARch:TRIGger:SPI:DPOSition 1919
SEARch:TRIGger:SPI:DPTO 1919
SEARch:TRIGger:SPI:FCONdition 1918
SEARch:TRIGger:SPI:MISopattern 1918
SEARch:TRIGger:SPI:MOSipattern 1918
SEARch:TRIGger:SPI:PALignment 1920
SEARch:TRIGger:SPI:TYPE 1917
SEARch:TRIGger:STATe:A:LOGic 1760
SEARch:TRIGger:STATe:A[:ENABle] 1760
SEARch:TRIGger:STATe:AB:LOGic 1761
SEARch:TRIGger:STATe:ABCD:LOGic 1761
SEARch:TRIGger:STATe:ACOPy 1737
SEARch:TRIGger:STATe:B:LOGic 1760
SEARch:TRIGger:STATe:B[:ENABle] 1760
SEARch:TRIGger:STATe:C:LOGic 1760
SEARch:TRIGger:STATe:C[:ENABle] 1760
SEARch:TRIGger:STATe:CD:LOGic 1761
SEARch:TRIGger:STATe:CEDGe 1759
SEARch:TRIGger:STATe:CLEVel 1759
SEARch:TRIGger:STATe:CSOurce 1759
SEARch:TRIGger:STATe:D:LOGic 1760
SEARch:TRIGger:STATe:D[:ENABle] 1760
SEARch:TRIGger:STATe[:STATe] 1736
SEARch:TRIGger:SWIRe:CTYPe 2540

SEARch:TRIGger:SWIRe:DATA:CONDition....2541
SEARch:TRIGger:SWIRe:DATA:MAX....2541
SEARch:TRIGger:SWIRe:DATA:MIN....2541
SEARch:TRIGger:SWIRe:ERRor:LENGth....2542
SEARch:TRIGger:SWIRe:ERRor:PARity....2542
SEARch:TRIGger:SWIRe:TIME:CONDition....2542
SEARch:TRIGger:SWIRe:TIME:MAX....2543
SEARch:TRIGger:SWIRe:TIME:MIN....2543
SEARch:TRIGger:SWIRe:TYPE....2543
SEARch:TRIGger:TBTO:CRC:CONDition....2196
SEARch:TRIGger:TBTO:CRC:MAX....2197
SEARch:TRIGger:TBTO:CRC:MIN....2197
SEARch:TRIGger:TBTO:DADDress:CONDition....2197
SEARch:TRIGger:TBTO:DADDress:MAX....2198
SEARch:TRIGger:TBTO:DADDress:MIN....2198
SEARch:TRIGger:TBTO:DATA:DCONdition....2198
SEARch:TRIGger:TBTO:DATA:DMAX....2199
SEARch:TRIGger:TBTO:DATA:DMIN....2199
SEARch:TRIGger:TBTO:DATA:ICONdition....2199
SEARch:TRIGger:TBTO:DATA:IMAX....2200
SEARch:TRIGger:TBTO:DATA:IMIN....2200
SEARch:TRIGger:TBTO:ERRor:CRC....2200
SEARch:TRIGger:TBTO:ERRor:FEC....2201
SEARch:TRIGger:TBTO:ERRor:OOR....2201
SEARch:TRIGger:TBTO:ERRor:ZERO....2201
SEARch:TRIGger:TBTO:LENGth:CONDition....2202
SEARch:TRIGger:TBTO:LENGth:MAX....2202
SEARch:TRIGger:TBTO:LENGth:MIN....2202
SEARch:TRIGger:TBTO:SADDress:CONDition....2203
SEARch:TRIGger:TBTO:SADDress:MAX....2203
SEARch:TRIGger:TBTO:SADDress:MIN....2203
SEARch:TRIGger:TBTO:TYPE....2204
SEARch:TRIGger:TIMeout:ACOPy....1737
SEARch:TRIGger:TIMeout:RANGe....1746
SEARch:TRIGger:TIMeout:TIME....1746
SEARch:TRIGger:TIMeout[:STATe]....1736
SEARch:TRIGger:TNOS:BIT....2138
SEARch:TRIGger:TNOS:CHKall....2135
SEARch:TRIGger:TNOS:CLR....2135
SEARch:TRIGger:TNOS:DMAX....2135
SEARch:TRIGger:TNOS:DMIN....2136
SEARch:TRIGger:TNOS:DOPerator....2136
SEARch:TRIGger:TNOS:ERENable....2139
SEARch:TRIGger:TNOS:ERRor<m>:ENABle....2139
SEARch:TRIGger:TNOS:FIENable....2138
SEARch:TRIGger:TNOS:FRAMe<fr>:ENABle....2135
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:BIT....2138
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMAX....2135
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DMIN....2136
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:DOPerator....2136

SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:ENABle....2138
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMAX....2137
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IMIN....2137
SEARch:TRIGger:TNOS:FRAMe<fr>:FLD<fl>:IOPerator....2137
SEARch:TRIGger:TNOS:FRENable....2135
SEARch:TRIGger:TNOS:IMAX....2137
SEARch:TRIGger:TNOS:IMIN....2137
SEARch:TRIGger:TNOS:IOPerator....2137
SEARch:TRIGger:USB:ACONdition....2442
SEARch:TRIGger:USB:AMAX....2443
SEARch:TRIGger:USB:AMIN....2443
SEARch:TRIGger:USB:BITSterror....2443
SEARch:TRIGger:USB:CRC5error....2444
SEARch:TRIGger:USB:CRC16error....2443
SEARch:TRIGger:USB:DATA....2444
SEARch:TRIGger:USB:DCONdition....2445
SEARch:TRIGger:USB:DPOPerator....2445
SEARch:TRIGger:USB:DPOSition....2445
SEARch:TRIGger:USB:ECONdition....2446
SEARch:TRIGger:USB:EMAX....2446
SEARch:TRIGger:USB:EMIN....2446
SEARch:TRIGger:USB:FCONdition....2447
SEARch:TRIGger:USB:FMAX....2447
SEARch:TRIGger:USB:FMIN....2447
SEARch:TRIGger:USB:GLITcherror....2448
SEARch:TRIGger:USB:HAND....2448
SEARch:TRIGger:USB:PATT....2448
SEARch:TRIGger:USB:PCONdition....2448
SEARch:TRIGger:USB:PIDerror....2449
SEARch:TRIGger:USB:PMAX....2449
SEARch:TRIGger:USB:PMIN....2449
SEARch:TRIGger:USB:SCONdition....2450
SEARch:TRIGger:USB:SDATa....2451
SEARch:TRIGger:USB:SERRor....2451
SEARch:TRIGger:USB:SHANdshake....2451
SEARch:TRIGger:USB:SMAX....2450
SEARch:TRIGger:USB:SMIN....2450
SEARch:TRIGger:USB:SPEC....2452
SEARch:TRIGger:USB:SSOP....2451
SEARch:TRIGger:USB:SSPE....2452
SEARch:TRIGger:USB:STCO....2453
SEARch:TRIGger:USB:STOKen....2453
SEARch:TRIGger:USB:TCONdition....2453
SEARch:TRIGger:USB:TMAX....2454
SEARch:TRIGger:USB:TMIN....2454
SEARch:TRIGger:USB:TOKen....2454
SEARch:TRIGger:USB:WADD....2455
SEARch:TRIGger:USB:WEND....2455
SEARch:TRIGger:USB:WETCheck....2455
SEARch:TRIGger:USB:WFRN....2456

SEARch:TRIGger:USB:WPAY 2456
SEARch:TRIGger:USB:WPID 2456
SEARch:TRIGger:USB:WPOR 2456
SEARch:TRIGger:USB:WSEU 2457
SEARch:TRIGger:USB:WSTC 2457
SEARch:TRIGger:USBPd:BIT 2518
SEARch:TRIGger:USBPd:DMAX 2519
SEARch:TRIGger:USBPd:DMIN 2519
SEARch:TRIGger:USBPd:DOPerator 2520
SEARch:TRIGger:USBPd:ERENable 2517
SEARch:TRIGger:USBPd:ERRor<m>:ENABle 2517
SEARch:TRIGger:USBPd:FIENable 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:ENABle 2517
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:BIT 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMAX 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DMIN 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:DOPerator 2520
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:ENABle 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMAX 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IMIN 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FIELd<n>:IOPerator 2522
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:BIT 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMAX 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DMIN 2519
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:DOPerator 2520
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:ENABle 2518
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMAX 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IMIN 2521
SEARch:TRIGger:USBPd:FRAMe<fr>:FLD<fl>:IOPerator 2522
SEARch:TRIGger:USBPd:FRENable 2517
SEARch:TRIGger:USBPd:IMAX 2521
SEARch:TRIGger:USBPd:IMIN 2521
SEARch:TRIGger:USBPd:IOPerator 2522
SEARch:TRIGger:USBThree:BIT 2493
SEARch:TRIGger:USBThree:DMAX 2493
SEARch:TRIGger:USBThree:DMIN 2494
SEARch:TRIGger:USBThree:DOPerator 2494
SEARch:TRIGger:USBThree:ERENable 2491
SEARch:TRIGger:USBThree:ERRor<m>:ENABle 2491
SEARch:TRIGger:USBThree:FIENable 2492
SEARch:TRIGger:USBThree:FRAMe<fr>:ENABle 2492
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT 2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:BIT 2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMAX 2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DMIN 2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:DOPerator 2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:ENABle 2492
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMAX 2495
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IMIN 2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FIELd<n>:IOPerator 2496

SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:BIT....2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMAX....2493
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DMIN....2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:DOPerator....2494
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:ENABle....2492
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMAX....2495
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IMIN....2496
SEARch:TRIGger:USBThree:FRAMe<fr>:FLD<fl>:IOPerator....2496
SEARch:TRIGger:USBThree:FRENable....2492
SEARch:TRIGger:USBThree:IMAX....2495
SEARch:TRIGger:USBThree:IMIN....2496
SEARch:TRIGger:USBThree:IOPerator....2496
SEARch:TRIGger:WIDTh:ACOPy....1737
SEARch:TRIGger:WIDTh:DELTa....1747
SEARch:TRIGger:WIDTh:POLarity....1747
SEARch:TRIGger:WIDTh:RANGe....1747
SEARch:TRIGger:WIDTh:WIDTh....1748
SEARch:TRIGger:WIDTh[:STATe]....1736
SEARch:TRIGger:WINDow:ACOPy....1737
SEARch:TRIGger:WINDow:DELTa....1749
SEARch:TRIGger:WINDow:RANGe....1749
SEARch:TRIGger:WINDow:TIMerange....1750
SEARch:TRIGger:WINDow:WIDTh....1750
SEARch:TRIGger:WINDow[:STATe]....1736
SENSe[:ROSCillator]:EXTernal:FREQuency....1467
SENSe[:ROSCillator]:SOURce....1467
SIGNalconfig:SETup:ADD....1808
SIGNalconfig:SETup:COUNt?....1809
SIGNalconfig:SETup:PROPagate....1809
SIGNalconfig:SETup:REMove....1809
SIGNalconfig:SETup:SETTing<m>:PAMorder....1809
SIGNalconfig:SETup:SETTing<m>:SERStandard....1810
SIGNalconfig:SETup:SETTing<m>:SOURce....1810
SIGNalconfig:SETup:SETTing<m>:SYMBolrate....1810
SIGNalconfig:SETup:SOURce....1811
SIGNalconfig:SETup:SREStimation....1811
SINGle....1395
STATus:OPERation:CONDition?....2846
STATus:OPERation:ENABle....2847
STATus:OPERation[:EVENt]?....2846
STATus:QUEStionable:ADCState:CONDition?....2850
STATus:QUEStionable:ADCState:ENABle....2850
STATus:QUEStionable:ADCState:NTRansition....2851
STATus:QUEStionable:ADCState:PTRansition....2851
STATus:QUEStionable:ADCState[:EVENt]?....2850
STATus:QUEStionable:COVerload:CONDition?....2849
STATus:QUEStionable:COVerload:ENABle....2850
STATus:QUEStionable:COVerload:NTRansition....2851
STATus:QUEStionable:COVerload:PTRansition....2851
STATus:QUEStionable:COVerload[:EVENt]?....2850

STATus:QUEStionable:DEEMbedding:CONDition? 2850
STATus:QUEStionable:DEEMbedding:ENABle 2850
STATus:QUEStionable:DEEMbedding:NTRansition 2851
STATus:QUEStionable:DEEMbedding:PTRansition 2851
STATus:QUEStionable:DEEMbedding[:EVENt]? 2851
STATus:QUEStionable:EFRontend:CONDition? 2850
STATus:QUEStionable:EFRontend:ENABle 2850
STATus:QUEStionable:EFRontend:NTRansition 2851
STATus:QUEStionable:EFRontend:PTRansition 2852
STATus:QUEStionable:EFRontend[:EVENt]? 2851
STATus:QUEStionable:FREQuency:CONDition? 2850
STATus:QUEStionable:FREQuency:ENABle 2850
STATus:QUEStionable:FREQuency:EVENt? 2850
STATus:QUEStionable:FREQuency:NTRansition 2851
STATus:QUEStionable:FREQuency:PTRansition 2851
STATus:QUEStionable:LAMPlitude:CONDition? 2850
STATus:QUEStionable:LAMPlitude:ENABle 2850
STATus:QUEStionable:LAMPlitude:NTRansition 2851
STATus:QUEStionable:LAMPlitude:PTRansition 2851
STATus:QUEStionable:LAMPlitude[:EVENt]? 2851
STATus:QUEStionable:LIMit:CONDition? 2850
STATus:QUEStionable:LIMit:ENABle 2850
STATus:QUEStionable:LIMit:NTRansition 2851
STATus:QUEStionable:LIMit:PTRansition 2851
STATus:QUEStionable:LIMit[:EVENt]? 2850
STATus:QUEStionable:MARGin:CONDition? 2850
STATus:QUEStionable:MARGin:ENABle 2850
STATus:QUEStionable:MARGin:NTRansition 2851
STATus:QUEStionable:MARGin:PTRansition 2851
STATus:QUEStionable:MARGin[:EVENt]? 2850
STATus:QUEStionable:MASK:CONDition? 2850
STATus:QUEStionable:MASK:ENABle 2850
STATus:QUEStionable:MASK:NTRansition 2851
STATus:QUEStionable:MASK:PTRansition 2852
STATus:QUEStionable:MASK[:EVENt]? 2851
STATus:QUEStionable:PLL:CONDition? 2850
STATus:QUEStionable:PLL:ENABle 2850
STATus:QUEStionable:PLL:NTRansition 2851
STATus:QUEStionable:PLL:PTRansition 2851
STATus:QUEStionable:PLL[:EVENt]? 2851
STATus:QUEStionable:TEMPerature:CONDition? 2849
STATus:QUEStionable:TEMPerature:ENABle 2850
STATus:QUEStionable:TEMPerature:NTRansition 2851
STATus:QUEStionable:TEMPerature:PTRansition 2851
STATus:QUEStionable:TEMPerature[:EVENt]? 2850
STATus:QUEStionable:ZVCoverload:CONDition? 2850
STATus:QUEStionable:ZVCoverload:ENABle 2850
STATus:QUEStionable:ZVCoverload:NTRansition 2851
STATus:QUEStionable:ZVCoverload:PTRansition 2851
STATus:QUEStionable:ZVCoverload[:EVENt]? 2851

STOP ... 1395
SWTRigger:HISTory ... 1538
SYSTem:DATE ... 1362
SYSTem:DEVice:ID? ... 1362
SYSTem:DFPRint ... 1393
SYSTem:DISPlay:MESSage:STATe ... 1360
SYSTem:DISPlay:MESSage[:TEXT] ... 1360
SYSTem:DISPlay:UPDate ... 1359
SYSTem:EXIT ... 1361
SYSTem:KLOCk ... 1359
SYSTem:LANGuage ... 1361
SYSTem:PRESet ... 1362
SYSTem:SHUTdown ... 1361
SYSTem:TIME? ... 1362
TDRT:BW ... 2678
TDRT:CALibration:OPEN:NAME ... 2675
TDRT:CALibration:OPEN[:EXECute] ... 2675
TDRT:CALibration:SAVE:NAME ... 2677
TDRT:CALibration:SAVE[:EXECute] ... 2677
TDRT:CALibration:USECaldata ... 2678
TDRT:CONFig ... 2675
TDRT:DEFault ... 2674
TDRT:DOMain ... 2678
TDRT:PERMittivity ... 2679
TDRT:PULSe:INVout ... 2676
TDRT:PULSe:INVReference ... 2676
TDRT:PULSe:OUT ... 2675
TDRT:PULSe:REFerence ... 2676
TDRT:SIGNal<m>:DATA:HEADer? ... 2680
TDRT:SIGNal<m>:DATA:VALues? ... 2681
TDRT:SIGNal<m>:OFFSet ... 2679
TDRT:SIGNal<m>:POSition ... 2680
TDRT:SIGNal<m>:SCALe ... 2679
TDRT:SIGNal<m>:STATe ... 2679
TDRT:SLENgth ... 2676
TDRT:STATe ... 2677
TDRT:TYPE ... 2675
TIMebase:DIVisions? ... 1396
TIMebase:HORizontal:POSition ... 1397
TIMebase:RACTime? ... 1697
TIMebase:RANGe ... 1396
TIMebase:REFerence ... 1397
TIMebase:ROLL:ENABle ... 1397
TIMebase:ROLL:MTIMe ... 1398
TIMebase:ROLL:STATe? ... 1398
TIMebase:SCALe ... 1396
TRACe:REMote:MODE:FILE:DEXecution:DURation ... 2855
TRACe:REMote:MODE:FILE:ENABle ... 2854
TRACe:REMote:MODE:FILE:FILTer ... 2854
TRACe:REMote:MODE:FILE:FORMat ... 2853

TRACe:REMote:MODE:FILE:FUNCtions....2856
TRACe:REMote:MODE:FILE:NAME....2853
TRACe:REMote:MODE:FILE:PARSer....2855
TRACe:REMote:MODE:FILE:RPC....2855
TRACe:REMote:MODE:FILE:SIZE....2853
TRACe:REMote:MODE:FILE:STARtmode....2854
TRACe:REMote:MODE:FILE:STOPmode....2854
TRIGger<t>:ANEDge:COUPling....1538
TRIGger<t>:ANEDge:CUToff:HIGHpass....1539
TRIGger<t>:ANEDge:CUToff:LOWPass....1540
TRIGger<t>:ANEDge:FILTer....1539
TRIGger<t>:ANEDge:GND....1540
TRIGger<t>:ANEDge:NREJect....1530
TRIGger<t>:ANEDge:SLOPe....1541
TRIGger<t>:ARINc:DATA:CONDition....2082
TRIGger<t>:ARINc:DATA:MAX....2083
TRIGger<t>:ARINc:DATA:MIN....2082
TRIGger<t>:ARINc:ERRor:CODing....2083
TRIGger<t>:ARINc:ERRor:PARity....2083
TRIGger<t>:ARINc:LABel:CONDition....2083
TRIGger<t>:ARINc:LABel:MAX....2084
TRIGger<t>:ARINc:LABel:MIN....2084
TRIGger<t>:ARINc:MAXGap:BITS....2085
TRIGger<t>:ARINc:MAXGap:SELect....2085
TRIGger<t>:ARINc:MINGap:BITS....2085
TRIGger<t>:ARINc:MINGap:SELect....2084
TRIGger<t>:ARINc:SDI....2085
TRIGger<t>:ARINc:SSM....2086
TRIGger<t>:ARINc:TYPE....2082
TRIGger<t>:CAN:ACKerror....1949
TRIGger<t>:CAN:BITSterror....1950
TRIGger<t>:CAN:BORDer....1947
TRIGger<t>:CAN:CRCerror....1950
TRIGger<t>:CAN:DCONdition....1945
TRIGger<t>:CAN:DLC....1947
TRIGger<t>:CAN:DLCCondition....1947
TRIGger<t>:CAN:DMAX....1946
TRIGger<t>:CAN:DMIN....1946
TRIGger<t>:CAN:FDATa:BRS....1945
TRIGger<t>:CAN:FDATa:DPOPerator....1948
TRIGger<t>:CAN:FDATa:DPOSition....1949
TRIGger<t>:CAN:FDATa:DPTO....1949
TRIGger<t>:CAN:FDATa:ESI....1945
TRIGger<t>:CAN:FDATa:FDF....1945
TRIGger<t>:CAN:FDATa:SCERror....1950
TRIGger<t>:CAN:FDATa:STANdard....1942
TRIGger<t>:CAN:FORMerror....1950
TRIGger<t>:CAN:FTYPe....1942
TRIGger<t>:CAN:ICONdition....1943
TRIGger<t>:CAN:IMAX....1944

TRIGger<t>:CAN:IMIN....1944
TRIGger<t>:CAN:ITYPe....1943
TRIGger<t>:CAN:NDBYtes?....1948
TRIGger<t>:CAN:SYMBolic:DMAX....1977
TRIGger<t>:CAN:SYMBolic:DMIN....1977
TRIGger<t>:CAN:SYMBolic:MSGValue....1976
TRIGger<t>:CAN:SYMBolic:SGEValue....1978
TRIGger<t>:CAN:SYMBolic:SIGValue....1977
TRIGger<t>:CAN:SYMBolic:TSIGnals....1977
TRIGger<t>:CAN:TYPE....1941
TRIGger<t>:CANXl:BIT....1988
TRIGger<t>:CANXl:CHKall....1987
TRIGger<t>:CANXl:CLR....1987
TRIGger<t>:CANXl:DMAX....1988
TRIGger<t>:CANXl:DMIN....1988
TRIGger<t>:CANXl:DOPerator....1989
TRIGger<t>:CANXl:ERENable....1990
TRIGger<t>:CANXl:ERRor<n>:ENABle....1990
TRIGger<t>:CANXl:FIENable....1987
TRIGger<t>:CANXl:FRAMe<fr>:ENABle....1987
TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:BIT....1988
TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:DMAX....1988
TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:DMIN....1988
TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:DOPerator....1989
TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:ENABle....1987
TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:IMAX....1989
TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:IMIN....1989
TRIGger<t>:CANXl:FRAMe<fr>:FLD<fl>:IOPerator....1990
TRIGger<t>:CANXl:FRENable....1987
TRIGger<t>:CANXl:IMAX....1989
TRIGger<t>:CANXl:IMIN....1989
TRIGger<t>:CANXl:IOPerator....1990
TRIGger<t>:CDR:EYE:ALGorithm....1512
TRIGger<t>:CDR:EYE:BWIDth....1512
TRIGger<t>:CDR:EYE:RELBwidth....1513
TRIGger<t>:CDR:EYE:SAMTime....1513
TRIGger<t>:CDR:EYE:SIGNallevel<n>....1514
TRIGger<t>:CDR:EYE:SOURce?....1513
TRIGger<t>:CDR:EYE:SREStimate[:RUN]....1512
TRIGger<t>:CDR:EYE:THReshold<n>....1514
TRIGger<t>:CMSB:ADVanced:BIT....2359
TRIGger<t>:CMSB:ADVanced:DMAX....2360
TRIGger<t>:CMSB:ADVanced:DMIN....2360
TRIGger<t>:CMSB:ADVanced:DOPerator....2361
TRIGger<t>:CMSB:ADVanced:ERENable....2361
TRIGger<t>:CMSB:ADVanced:ERRor<n>:ENABle....2361
TRIGger<t>:CMSB:ADVanced:FIENable....2359
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:ENABle....2359
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:BIT....2359
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DMAX....2360

TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DMIN....2360
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:DOPerator....2361
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:ENABle....2359
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IMAX....2361
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IMIN....2362
TRIGger<t>:CMSB:ADVanced:FRAMe<fr>:FLD<fl>:IOPerator....2362
TRIGger<t>:CMSB:ADVanced:FRENable....2359
TRIGger<t>:CMSB:ADVanced:IMAX....2361
TRIGger<t>:CMSB:ADVanced:IMIN....2362
TRIGger<t>:CMSB:ADVanced:IOPerator....2362
TRIGger<t>:CMSB:ICONdition....2357
TRIGger<t>:CMSB:IMAX....2358
TRIGger<t>:CMSB:IMIN....2358
TRIGger<t>:CMSB:NRZ:WRDLength....2358
TRIGger<t>:CMSB:PATTern....2357
TRIGger<t>:CMSB:TYPE....2357
TRIGger<t>:DPHY:DATA:CONDition....2251
TRIGger<t>:DPHY:DATA:MAX....2251
TRIGger<t>:DPHY:DATA:MIN....2252
TRIGger<t>:DPHY:DIDX:CONDition....2252
TRIGger<t>:DPHY:DIDX:MAX....2252
TRIGger<t>:DPHY:DIDX:MIN....2253
TRIGger<t>:DPHY:DTYPe:CONDition....2253
TRIGger<t>:DPHY:DTYPe:MAX....2253
TRIGger<t>:DPHY:DTYPe:MIN....2254
TRIGger<t>:DPHY:ESCMode:CONDition....2254
TRIGger<t>:DPHY:ESCMode:MAX....2254
TRIGger<t>:DPHY:ESCMode:MIN....2255
TRIGger<t>:DPHY:ESDTa:CONDition....2255
TRIGger<t>:DPHY:ESDTa:MAX....2255
TRIGger<t>:DPHY:ESDTa:MIN....2256
TRIGger<t>:DPHY:ESINdex:CONDition....2256
TRIGger<t>:DPHY:ESINdex:MAX....2256
TRIGger<t>:DPHY:ESINdex:MIN....2257
TRIGger<t>:DPHY:HSVC....2257
TRIGger<t>:DPHY:TYPE....2250
TRIGger<t>:DPHY:WCOunt:CONDition....2257
TRIGger<t>:DPHY:WCOunt:MAX....2258
TRIGger<t>:DPHY:WCOunt:MIN....2258
TRIGger<t>:EBTB:DISParityerr....2391
TRIGger<t>:EBTB:DX....2392
TRIGger<t>:EBTB:DY....2392
TRIGger<t>:EBTB:EBPA....2392
TRIGger<t>:EBTB:GLITcherror....2392
TRIGger<t>:EBTB:STYPe....2393
TRIGger<t>:EBTB:SYME....2393
TRIGger<t>:EBTB:SYMType....2393
TRIGger<t>:EBTB:TBPA....2393
TRIGger<t>:EBTB:UNK....2394
TRIGger<t>:ECOupling....1531

TRIGger<t>:EDGE:SLOPe ... 1472
TRIGger<t>:ETHernet:ERRor:CRC ... 2100
TRIGger<t>:ETHernet:ERRor:LENGth ... 2100
TRIGger<t>:ETHernet:ERRor:PREamble ... 2101
TRIGger<t>:ETHernet:FRAMe:CCONdition ... 2101
TRIGger<t>:ETHernet:FRAMe:CMAX ... 2101
TRIGger<t>:ETHernet:FRAMe:CMIN ... 2102
TRIGger<t>:ETHernet:FRAMe:DCONdition ... 2102
TRIGger<t>:ETHernet:FRAMe:DMAX ... 2102
TRIGger<t>:ETHernet:FRAMe:DMIN ... 2103
TRIGger<t>:ETHernet:FRAMe:SCONdition ... 2103
TRIGger<t>:ETHernet:FRAMe:SMAX ... 2103
TRIGger<t>:ETHernet:FRAMe:SMIN ... 2103
TRIGger<t>:ETHernet:FRAMe:TCONdition ... 2104
TRIGger<t>:ETHernet:FRAMe:TMAX ... 2104
TRIGger<t>:ETHernet:FRAMe:TMIN ... 2104
TRIGger<t>:ETHernet:PATTern ... 2100
TRIGger<t>:ETHernet:TYPE ... 2099
TRIGger<t>:EVENt:BEEP ... 1536
TRIGger<t>:EVENt:PRINt ... 1536
TRIGger<t>:EVENt:RESSave ... 1537
TRIGger<t>:EVENt:RUNexec ... 1536
TRIGger<t>:EVENt:TRIGgerout ... 1537
TRIGger<t>:EVENt:WFMSave ... 1537
TRIGger<t>:EVENt[:EVENt] ... 1530
TRIGger<t>:EXTern:OVERload ... 1541
TRIGger<t>:FINDlevel ... 1471
TRIGger<t>:FORCe ... 1534
TRIGger<t>:GLITch:POLarity ... 1472
TRIGger<t>:GLITch:RANGe ... 1473
TRIGger<t>:GLITch:WIDTh ... 1473
TRIGger<t>:HBTO:CRC:CONDition ... 2153
TRIGger<t>:HBTO:CRC:MAX ... 2154
TRIGger<t>:HBTO:CRC:MIN ... 2154
TRIGger<t>:HBTO:DADDress:CONDition ... 2150
TRIGger<t>:HBTO:DADDress:MAX ... 2151
TRIGger<t>:HBTO:DADDress:MIN ... 2151
TRIGger<t>:HBTO:DATA:DCONdition ... 2154
TRIGger<t>:HBTO:DATA:DMAX ... 2155
TRIGger<t>:HBTO:DATA:DMIN ... 2155
TRIGger<t>:HBTO:DATA:ICONdition ... 2155
TRIGger<t>:HBTO:DATA:IMAX ... 2156
TRIGger<t>:HBTO:DATA:IMIN ... 2156
TRIGger<t>:HBTO:ERRor:CRC ... 2157
TRIGger<t>:HBTO:ERRor:PREamble ... 2156
TRIGger<t>:HBTO:ERRor:SFD ... 2157
TRIGger<t>:HBTO:LENGth:CONDition ... 2152
TRIGger<t>:HBTO:LENGth:MAX ... 2153
TRIGger<t>:HBTO:LENGth:MIN ... 2153
TRIGger<t>:HBTO:SADDress:CONDition ... 2151

TRIGger<t>:HBTO:SADDress:MAX 2152
TRIGger<t>:HBTO:SADDress:MIN 2152
TRIGger<t>:HBTO:TRGLevel 2157
TRIGger<t>:HBTO:TYPE 2150
TRIGger<t>:HOLDoff:AUTotime? 1526
TRIGger<t>:HOLDoff:EVENts 1525
TRIGger<t>:HOLDoff:MAX 1526
TRIGger<t>:HOLDoff:MIN 1525
TRIGger<t>:HOLDoff:MODE 1523
TRIGger<t>:HOLDoff:SCALing 1527
TRIGger<t>:HOLDoff:TIME 1524
TRIGger<t>:I2C:ACCess 1843
TRIGger<t>:I2C:ACONdition 1845
TRIGger<t>:I2C:ADDRess 1846
TRIGger<t>:I2C:ADDTo 1846
TRIGger<t>:I2C:ADNack 1844
TRIGger<t>:I2C:ADOR<n>:ADRType 1847
TRIGger<t>:I2C:ADOR<n>:ENABle 1846
TRIGger<t>:I2C:ADOR<n>:RWBit 1847
TRIGger<t>:I2C:ADOR<n>[:VALue] 1847
TRIGger<t>:I2C:AMODe 1845
TRIGger<t>:I2C:DCONdition 1849
TRIGger<t>:I2C:DMAX 1849
TRIGger<t>:I2C:DMIN 1849
TRIGger<t>:I2C:DPOPerator 1848
TRIGger<t>:I2C:DPOSition 1848
TRIGger<t>:I2C:DPTO 1848
TRIGger<t>:I2C:DRNack 1844
TRIGger<t>:I2C:DWNack 1844
TRIGger<t>:I2C:TYPE 1843
TRIGger<t>:I3C:BIT 1879
TRIGger<t>:I3C:CHKall 1878
TRIGger<t>:I3C:CLR 1878
TRIGger<t>:I3C:DMAX 1879
TRIGger<t>:I3C:DMIN 1879
TRIGger<t>:I3C:DOPerator 1880
TRIGger<t>:I3C:ERENable 1881
TRIGger<t>:I3C:ERRor<n>:ENABle 1881
TRIGger<t>:I3C:FIENable 1880
TRIGger<t>:I3C:FRAMe<fr>:ENABle 1878
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:BIT 1879
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DMAX 1879
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DMIN 1879
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:DOPerator 1880
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:ENABle 1880
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IMAX 1880
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IMIN 1881
TRIGger<t>:I3C:FRAMe<fr>:FLD<fl>:IOPerator 1881
TRIGger<t>:I3C:FRENable 1878
TRIGger<t>:I3C:IMAX 1880

TRIGger<t>:I3C:IMIN....1881
TRIGger<t>:I3C:IOPerator....1881
TRIGger<t>:INTerval:DELTa....1483
TRIGger<t>:INTerval:RANGe....1482
TRIGger<t>:INTerval:SLOPe....1482
TRIGger<t>:INTerval:WIDTh....1482
TRIGger<t>:LEVel<n>:NOISe:ABSolute....1528
TRIGger<t>:LEVel<n>:NOISe:MODE....1528
TRIGger<t>:LEVel<n>:NOISe:PERDivision....1529
TRIGger<t>:LEVel<n>:NOISe:RELative....1529
TRIGger<t>:LEVel<n>:NOISe[:STATe]....1527
TRIGger<t>:LEVel<n>:RUNT:LOWer....1476
TRIGger<t>:LEVel<n>:RUNT:UPPer....1476
TRIGger<t>:LEVel<n>:SLEW:LOWer....1484
TRIGger<t>:LEVel<n>:SLEW:UPPer....1484
TRIGger<t>:LEVel<n>:WINDow:LOWer....1478
TRIGger<t>:LEVel<n>:WINDow:UPPer....1478
TRIGger<t>:LEVel<n>[:VALue]....1471
TRIGger<t>:LEVel<n>[:VALue]....1493
TRIGger<t>:LIN:BORDer....2023
TRIGger<t>:LIN:CHKSerror....2026
TRIGger<t>:LIN:CRCDatalen....2027
TRIGger<t>:LIN:DCONdition....2022
TRIGger<t>:LIN:DLECondition....2023
TRIGger<t>:LIN:DLENgth....2024
TRIGger<t>:LIN:DMAX....2022
TRIGger<t>:LIN:DMIN....2022
TRIGger<t>:LIN:ERRPattern....2026
TRIGger<t>:LIN:ICONdition....2021
TRIGger<t>:LIN:IDOR<n>:ENABle....2024
TRIGger<t>:LIN:IDOR<n>[:VALue]....2025
TRIGger<t>:LIN:IMAX....2021
TRIGger<t>:LIN:IMIN....2021
TRIGger<t>:LIN:IPERror....2025
TRIGger<t>:LIN:STANdard....2027
TRIGger<t>:LIN:SYERror....2025
TRIGger<t>:LIN:TYPE....2020
TRIGger<t>:MDIO:DATA....2407
TRIGger<t>:MDIO:FRAMetype....2406
TRIGger<t>:MDIO:PHYS....2407
TRIGger<t>:MDIO:REGI....2407
TRIGger<t>:MDIO:ST....2406
TRIGger<t>:MDIO:TYPE....2405
TRIGger<t>:MILStd:CDST:ICONdition....2057
TRIGger<t>:MILStd:CDST:IMAX....2057
TRIGger<t>:MILStd:CDST:IMIN....2057
TRIGger<t>:MILStd:CDST:RCONdition....2053
TRIGger<t>:MILStd:CDST:RMAX....2054
TRIGger<t>:MILStd:CDST:RMIN....2054
TRIGger<t>:MILStd:CMD:CCONdition....2054

TRIGger<t>:MILStd:CMD:CMAX....2055
TRIGger<t>:MILStd:CMD:CMIN....2055
TRIGger<t>:MILStd:CMD:RCONdition....2053
TRIGger<t>:MILStd:CMD:RMAX....2054
TRIGger<t>:MILStd:CMD:RMIN....2054
TRIGger<t>:MILStd:CMD:SCONdition....2055
TRIGger<t>:MILStd:CMD:SMAX....2056
TRIGger<t>:MILStd:CMD:SMIN....2056
TRIGger<t>:MILStd:CMD:TR....2056
TRIGger<t>:MILStd:DATA:DCONdition....2058
TRIGger<t>:MILStd:DATA:DMAX....2058
TRIGger<t>:MILStd:DATA:DMIN....2058
TRIGger<t>:MILStd:DATA:ICONdition....2059
TRIGger<t>:MILStd:DATA:IMAX....2059
TRIGger<t>:MILStd:DATA:IMIN....2059
TRIGger<t>:MILStd:DATA:RCONdition....2053
TRIGger<t>:MILStd:DATA:RMAX....2054
TRIGger<t>:MILStd:DATA:RMIN....2054
TRIGger<t>:MILStd:ERRor:MANChester....2060
TRIGger<t>:MILStd:ERRor:PARity....2060
TRIGger<t>:MILStd:ERRor:SYNC....2060
TRIGger<t>:MILStd:MAXResponse:BITS....2061
TRIGger<t>:MILStd:MAXResponse:SELect....2061
TRIGger<t>:MILStd:MINGap:BITS....2061
TRIGger<t>:MILStd:MINGap:SELect....2062
TRIGger<t>:MILStd:STATus:BCReceived....2062
TRIGger<t>:MILStd:STATus:BUSY....2062
TRIGger<t>:MILStd:STATus:DBCaccept....2062
TRIGger<t>:MILStd:STATus:INSTrument....2063
TRIGger<t>:MILStd:STATus:MERRor....2063
TRIGger<t>:MILStd:STATus:SREQuest....2063
TRIGger<t>:MILStd:STATus:SUBSystem....2063
TRIGger<t>:MILStd:STATus:TERMinal....2064
TRIGger<t>:MILStd:TPSPecifier....2064
TRIGger<t>:MILStd:TYPE....2052
TRIGger<t>:MODE....1534
TRIGger<t>:MPHY:CRC:CONDition....2291
TRIGger<t>:MPHY:CRC:MAX....2292
TRIGger<t>:MPHY:CRC:MIN....2292
TRIGger<t>:MPHY:CREDit:CONDition....2293
TRIGger<t>:MPHY:CREDit:MAX....2294
TRIGger<t>:MPHY:CREDit:MIN....2293
TRIGger<t>:MPHY:CREQ....2292
TRIGger<t>:MPHY:DATA:DCON....2288
TRIGger<t>:MPHY:DATA:DMAX....2289
TRIGger<t>:MPHY:DATA:DMIN....2289
TRIGger<t>:MPHY:DATA:ICONdition....2289
TRIGger<t>:MPHY:DATA:IMAX....2290
TRIGger<t>:MPHY:DATA:IMIN....2290
TRIGger<t>:MPHY:ERRor:LCMD....2296

TRIGger<t>:MPHY:ERRor:LENGth ... 2296
TRIGger<t>:MPHY:ERRor:REServed ... 2297
TRIGger<t>:MPHY:ERRor:SYMBol ... 2297
TRIGger<t>:MPHY:ERRor:UNKNown ... 2297
TRIGger<t>:MPHY:FSNumber:CONDition ... 2290
TRIGger<t>:MPHY:FSNumber:MAX ... 2291
TRIGger<t>:MPHY:FSNumber:MIN ... 2291
TRIGger<t>:MPHY:LCCType ... 2283
TRIGger<t>:MPHY:LWFour:CONDition ... 2287
TRIGger<t>:MPHY:LWFour:MAX ... 2288
TRIGger<t>:MPHY:LWFour:MIN ... 2287
TRIGger<t>:MPHY:LWONe:CONDition ... 2284
TRIGger<t>:MPHY:LWONe:MAX ... 2285
TRIGger<t>:MPHY:LWONe:MIN ... 2284
TRIGger<t>:MPHY:LWTHree:CONDition ... 2286
TRIGger<t>:MPHY:LWTHree:MAX ... 2287
TRIGger<t>:MPHY:LWTHree:MIN ... 2286
TRIGger<t>:MPHY:LWTWo:CONDition ... 2285
TRIGger<t>:MPHY:LWTWo:MAX ... 2286
TRIGger<t>:MPHY:LWTWo:MIN ... 2285
TRIGger<t>:MPHY:PBEGin:CONDition ... 2294
TRIGger<t>:MPHY:PBEGin:MAX ... 2295
TRIGger<t>:MPHY:PBEGin:MIN ... 2294
TRIGger<t>:MPHY:PFID:CONDition ... 2295
TRIGger<t>:MPHY:PFID:MAX ... 2296
TRIGger<t>:MPHY:PFID:MIN ... 2295
TRIGger<t>:MPHY:PRPLength ... 2296
TRIGger<t>:MPHY:RREQ ... 2292
TRIGger<t>:MPHY:SSIC:BIT ... 2329
TRIGger<t>:MPHY:SSIC:DMAX ... 2329
TRIGger<t>:MPHY:SSIC:DMIN ... 2330
TRIGger<t>:MPHY:SSIC:DOPerator ... 2330
TRIGger<t>:MPHY:SSIC:ERENable ... 2328
TRIGger<t>:MPHY:SSIC:ERRor<n>:ENABle ... 2328
TRIGger<t>:MPHY:SSIC:FIENable ... 2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:ENABle ... 2328
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:BIT ... 2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMAX ... 2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DMIN ... 2330
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:DOPerator ... 2330
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:ENABle ... 2329
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMAX ... 2331
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IMIN ... 2331
TRIGger<t>:MPHY:SSIC:FRAMe<fr>:FLD<fl>:IOPerator ... 2332
TRIGger<t>:MPHY:SSIC:FRENable ... 2328
TRIGger<t>:MPHY:SSIC:IMAX ... 2331
TRIGger<t>:MPHY:SSIC:IMIN ... 2331
TRIGger<t>:MPHY:SSIC:IOPerator ... 2332
TRIGger<t>:MPHY:TC ... 2288
TRIGger<t>:MPHY:TYPE ... 2282

TRIGger<t>:OFFSet:LIMited....1398
TRIGger<t>:OUT:DELay....1535
TRIGger<t>:OUT:PLENgth....1535
TRIGger<t>:OUT:POLarity....1534
TRIGger<t>:PARallel:EDGE:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:EDGE:SLOPe....2636
TRIGger<t>:PARallel:PATTern:BIT<n>....2641
TRIGger<t>:PARallel:PATTern:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:PATTern:MODE....2641
TRIGger<t>:PARallel:PATTern:TIMeout:MODE....2642
TRIGger<t>:PARallel:PATTern:TIMeout[:TIME]....2643
TRIGger<t>:PARallel:PATTern:WIDTh:DELTa....2644
TRIGger<t>:PARallel:PATTern:WIDTh:RANGe....2643
TRIGger<t>:PARallel:PATTern:WIDTh[:WIDTh]....2644
TRIGger<t>:PARallel:SETHold:CSOurce:EDGE....2639
TRIGger<t>:PARallel:SETHold:CSOurce[:VALue]....2635
TRIGger<t>:PARallel:SETHold:HTIMe....2639
TRIGger<t>:PARallel:SETHold:STIMe....2640
TRIGger<t>:PARallel:SPATtern:CSOurce:EDGE....2644
TRIGger<t>:PARallel:SPATtern:CSOurce[:VALue]....2635
TRIGger<t>:PARallel:SPATtern:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:SPATtern:PATTern....2645
TRIGger<t>:PARallel:STATe:BIT<n>....2641
TRIGger<t>:PARallel:STATe:CSOurce:EDGE....2640
TRIGger<t>:PARallel:STATe:CSOurce:VALue....2635
TRIGger<t>:PARallel:STATe:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:TIMeout:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:TIMeout:RANGe....2638
TRIGger<t>:PARallel:TIMeout:TIME....2639
TRIGger<t>:PARallel:TYPE....2635
TRIGger<t>:PARallel:WIDTh:DELTa....2638
TRIGger<t>:PARallel:WIDTh:EXPRession[:DEFine]....2635
TRIGger<t>:PARallel:WIDTh:POLarity....2636
TRIGger<t>:PARallel:WIDTh:RANGe....2637
TRIGger<t>:PARallel:WIDTh:WIDTh....2637
TRIGger<t>:PATTern:MODE....1489
TRIGger<t>:PATTern:TIMeout:MODE....1489
TRIGger<t>:PATTern:TIMeout[:TIME]....1490
TRIGger<t>:PATTern:WIDTh:DELTa....1491
TRIGger<t>:PATTern:WIDTh:RANGe....1490
TRIGger<t>:PATTern:WIDTh[:WIDTh]....1491
TRIGger<t>:PCIE:DLLP:FCTL:CRET....2556
TRIGger<t>:PCIE:DLLP:FCTL:VCID....2556
TRIGger<t>:PCIE:DLLP:MULT:AUTH....2556
TRIGger<t>:PCIE:DLLP:MULT:CRET....2556
TRIGger<t>:PCIE:DLLP:MULT:DVPT....2557
TRIGger<t>:PCIE:DLLP:MULT:HABS....2557
TRIGger<t>:PCIE:DLLP:MULT:MIXT....2557
TRIGger<t>:PCIE:DLLP:MULT:PHAS....2557
TRIGger<t>:PCIE:DLLP:MULT:RESA....2558

TRIGger<t>:PCIE:DLLP:MULT:TLPT....2558
TRIGger<t>:PCIE:DLLP:MULT:TYPE....2558
TRIGger<t>:PCIE:DLLP:MULT:VHFC....2558
TRIGger<t>:PCIE:DLLP:MULT:VHGR....2559
TRIGger<t>:PCIE:DLLP:MULT:VLNR....2559
TRIGger<t>:PCIE:DLLP:POWM....2559
TRIGger<t>:PCIE:DLLP:SEQ....2560
TRIGger<t>:PCIE:DLLP:TYPE....2560
TRIGger<t>:PCIE:DLLP:VPAT....2560
TRIGger<t>:PCIE:ERRC:CRC....2560
TRIGger<t>:PCIE:ERRC:DISP....2561
TRIGger<t>:PCIE:ERRC:ECRC....2561
TRIGger<t>:PCIE:ERRC:INVP....2561
TRIGger<t>:PCIE:ERRC:LCRC....2561
TRIGger<t>:PCIE:ERRC:LENGth....2562
TRIGger<t>:PCIE:ERRC:MALFormed....2562
TRIGger<t>:PCIE:ERRC:MXPFix....2562
TRIGger<t>:PCIE:ERRC:PFORder....2562
TRIGger<t>:PCIE:ERRC:SYCBit....2563
TRIGger<t>:PCIE:ERRC:UKNP....2563
TRIGger<t>:PCIE:ERRC:VOORange....2563
TRIGger<t>:PCIE:OSET:TYPE....2563
TRIGger<t>:PCIE:TLP:ADRT....2564
TRIGger<t>:PCIE:TLP:AT....2567
TRIGger<t>:PCIE:TLP:CFGT....2564
TRIGger<t>:PCIE:TLP:CPID....2564
TRIGger<t>:PCIE:TLP:CPLS....2565
TRIGger<t>:PCIE:TLP:DEID....2565
TRIGger<t>:PCIE:TLP:MERW....2565
TRIGger<t>:PCIE:TLP:MSGC....2565
TRIGger<t>:PCIE:TLP:MSGR....2566
TRIGger<t>:PCIE:TLP:ORDE....2566
TRIGger<t>:PCIE:TLP:REID....2566
TRIGger<t>:PCIE:TLP:SNOO....2566
TRIGger<t>:PCIE:TLP:SNUM....2567
TRIGger<t>:PCIE:TLP:TCHN....2567
TRIGger<t>:PCIE:TLP:TYPE....2567
TRIGger<t>:PCIE:TRGLevel....2555
TRIGger<t>:PCIE:TYPE....2568
TRIGger<t>:POWerline:SLOPe....1519
TRIGger<t>:QUALify<n>:A:LOGic....1522
TRIGger<t>:QUALify<n>:A[:ENABle]....1521
TRIGger<t>:QUALify<n>:AB:LOGic....1522
TRIGger<t>:QUALify<n>:ABCD:LOGic....1522
TRIGger<t>:QUALify<n>:B:LOGic....1522
TRIGger<t>:QUALify<n>:B[:ENABle]....1521
TRIGger<t>:QUALify<n>:C:LOGic....1522
TRIGger<t>:QUALify<n>:C[:ENABle]....1521
TRIGger<t>:QUALify<n>:CD:LOGic....1522
TRIGger<t>:QUALify<n>:D:LOGic....1522

TRIGger<t>:QUALify<n>:D[:ENABle] 1521
TRIGger<t>:QUALify<n>:STATe 1521
TRIGger<t>:RFFE:ADDRess:CONDition 2218
TRIGger<t>:RFFE:ADDRess:MAX 2219
TRIGger<t>:RFFE:ADDRess:MIN 2218
TRIGger<t>:RFFE:BCOunt:CONDition 2219
TRIGger<t>:RFFE:BCOunt:MAX 2220
TRIGger<t>:RFFE:BCOunt:MIN 2219
TRIGger<t>:RFFE:DATA:DCON 2220
TRIGger<t>:RFFE:DATA:DMAX 2221
TRIGger<t>:RFFE:DATA:DMIN 2220
TRIGger<t>:RFFE:DATA:ICONdition 2221
TRIGger<t>:RFFE:DATA:IMAX 2222
TRIGger<t>:RFFE:DATA:IMIN 2221
TRIGger<t>:RFFE:ERRor:BP 2224
TRIGger<t>:RFFE:ERRor:LENGth 2224
TRIGger<t>:RFFE:ERRor:NOResponse 2224
TRIGger<t>:RFFE:ERRor:PARity 2225
TRIGger<t>:RFFE:ERRor:SSC 2225
TRIGger<t>:RFFE:ERRor:USEQuence 2225
TRIGger<t>:RFFE:INTerrupt 2224
TRIGger<t>:RFFE:INTerrupt 2226
TRIGger<t>:RFFE:MASK:CONDition 2223
TRIGger<t>:RFFE:MASK:MAX 2223
TRIGger<t>:RFFE:MASK:MIN 2224
TRIGger<t>:RFFE:SADDress:CONDition 2222
TRIGger<t>:RFFE:SADDress:MAX 2223
TRIGger<t>:RFFE:SADDress:MIN 2222
TRIGger<t>:RFFE:TYPE 2215
TRIGger<t>:RFReject? 1464
TRIGger<t>:RUNT:DELTa 1477
TRIGger<t>:RUNT:POLarity 1476
TRIGger<t>:RUNT:RANGe 1476
TRIGger<t>:RUNT:WIDTh 1477
TRIGger<t>:SCOupling 1488
TRIGger<t>:SEQuence:COUNt 1532
TRIGger<t>:SEQuence:DELay 1532
TRIGger<t>:SEQuence:RESet:EVENt 1532
TRIGger<t>:SEQuence:RESet:TIMeout:TIME 1533
TRIGger<t>:SEQuence:RESet:TIMeout[:ENABle] 1533
TRIGger<t>:SEQuence:TYPE 1531
TRIGger<t>:SERPattern:BITPattern:APATtern 1497
TRIGger<t>:SERPattern:BITPattern:BPATtern 1497
TRIGger<t>:SERPattern:BITPattern:PTALength 1497
TRIGger<t>:SERPattern:BITPattern:PTBLength 1498
TRIGger<t>:SERPattern:COMPlex:BORDer 1498
TRIGger<t>:SERPattern:COMPlex:CLOGic 1498
TRIGger<t>:SERPattern:COMPlex:IDLRange 1499
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:BOFFset 1500
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:ENABle 1501

TRIGger<t>:SERPattern:COMPlex:PATTern<n>:FRPTtern ... 1501
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PATLength ... 1501
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:PCONdition ... 1502
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:SRNGe ... 1502
TRIGger<t>:SERPattern:COMPlex:PATTern<n>:TOPTtern ... 1502
TRIGger<t>:SERPattern:COMPlex:SOFLength ... 1500
TRIGger<t>:SERPattern:COMPlex:SOFPattern ... 1500
TRIGger<t>:SERPattern:COMPlex:SOFState ... 1499
TRIGger<t>:SERPattern:COMPlex:SOFTimeout ... 1499
TRIGger<t>:SERPattern:EBTB:ALIGnment ... 1504
TRIGger<t>:SERPattern:EBTB:APPend ... 1504
TRIGger<t>:SERPattern:EBTB:CLEar ... 1505
TRIGger<t>:SERPattern:EBTB:COUNt? ... 1505
TRIGger<t>:SERPattern:EBTB:ERRor<n>:DISParity ... 1505
TRIGger<t>:SERPattern:EBTB:ERRor<n>:SYMBol ... 1505
TRIGger<t>:SERPattern:EBTB:FID ... 1506
TRIGger<t>:SERPattern:EBTB:SCRMble ... 1507
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:DMINus? ... 1506
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:DPLus? ... 1506
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:EBIT ... 1507
TRIGger<t>:SERPattern:EBTB:SYMBols<n>:KDSYmbol ... 1507
TRIGger<t>:SERPattern:I30B:APATtern ... 1510
TRIGger<t>:SERPattern:I30B:PATTern ... 1510
TRIGger<t>:SERPattern:I30B:SKAFter ... 1510
TRIGger<t>:SERPattern:I30B:SSTP ... 1510
TRIGger<t>:SERPattern:I30B:SSTR ... 1511
TRIGger<t>:SERPattern:I30B:SYMType ... 1511
TRIGger<t>:SERPattern:I32B:APATtern ... 1508
TRIGger<t>:SERPattern:I32B:PATTern ... 1508
TRIGger<t>:SERPattern:I32B:SKAFter ... 1508
TRIGger<t>:SERPattern:I32B:SSTP ... 1509
TRIGger<t>:SERPattern:I32B:SSTR ... 1509
TRIGger<t>:SERPattern:I32B:SYMType ... 1509
TRIGger<t>:SERPattern:PRBS:ERATe ... 1503
TRIGger<t>:SERPattern:PRBS:NBRTe ... 1503
TRIGger<t>:SERPattern:PRBS:PSEQuence ... 1503
TRIGger<t>:SERPattern:PTMDe ... 1493
TRIGger<t>:SETHold:CSOurce:EDGE ... 1486
TRIGger<t>:SETHold:CSOurce:LEVel ... 1486
TRIGger<t>:SETHold:CSOurce[:VALue] ... 1486
TRIGger<t>:SETHold:HTIMe ... 1487
TRIGger<t>:SETHold:STIMe ... 1487
TRIGger<t>:SLEW:DELTa ... 1485
TRIGger<t>:SLEW:RANGe ... 1484
TRIGger<t>:SLEW:RATE ... 1485
TRIGger<t>:SLEW:SLOPe ... 1483
TRIGger<t>:SOURce:SBSelect ... 1839
TRIGger<t>:SOURce[:SELect] ... 1469
TRIGger<t>:SOURce[:SELect] ... 1837
TRIGger<t>:SOURce[:SELect] ... 2633

TRIGger<t>:SPATtern:CSOurce:EDGE....1494
TRIGger<t>:SPATtern:CSOurce:LEVel....1495
TRIGger<t>:SPATtern:CSOurce[:VALue]....1494
TRIGger<t>:SPATtern:REFSource....1495
TRIGger<t>:SPI:DPOPerator....1910
TRIGger<t>:SPI:DPOSition....1910
TRIGger<t>:SPI:DPTO....1910
TRIGger<t>:SPI:FCONdition....1911
TRIGger<t>:SPI:MISopattern....1911
TRIGger<t>:SPI:MOSipattern....1911
TRIGger<t>:SPI:PALignment....1909
TRIGger<t>:SPI:TYPE....1908
TRIGger<t>:SWIRe:CTYPe....2532
TRIGger<t>:SWIRe:DATA:CONDition....2532
TRIGger<t>:SWIRe:DATA:MAX....2532
TRIGger<t>:SWIRe:DATA:MIN....2533
TRIGger<t>:SWIRe:ERRor:LENGth....2533
TRIGger<t>:SWIRe:ERRor:PARity....2533
TRIGger<t>:SWIRe:TIME:CONDition....2533
TRIGger<t>:SWIRe:TIME:MAX....2534
TRIGger<t>:SWIRe:TIME:MIN....2534
TRIGger<t>:SWIRe:TYPE....2534
TRIGger<t>:TBTO:CRC:CONDition....2188
TRIGger<t>:TBTO:CRC:MAX....2189
TRIGger<t>:TBTO:CRC:MIN....2189
TRIGger<t>:TBTO:DADDress:CONDition....2189
TRIGger<t>:TBTO:DADDress:MAX....2190
TRIGger<t>:TBTO:DADDress:MIN....2190
TRIGger<t>:TBTO:DATA:DCONdition....2190
TRIGger<t>:TBTO:DATA:DMAX....2191
TRIGger<t>:TBTO:DATA:DMIN....2191
TRIGger<t>:TBTO:DATA:ICONdition....2191
TRIGger<t>:TBTO:DATA:IMAX....2192
TRIGger<t>:TBTO:DATA:IMIN....2192
TRIGger<t>:TBTO:ERRor:CRC....2192
TRIGger<t>:TBTO:ERRor:FEC....2193
TRIGger<t>:TBTO:ERRor:OOR....2193
TRIGger<t>:TBTO:ERRor:ZERO....2193
TRIGger<t>:TBTO:LENGth:CONDition....2193
TRIGger<t>:TBTO:LENGth:MAX....2194
TRIGger<t>:TBTO:LENGth:MIN....2194
TRIGger<t>:TBTO:SADDress:CONDition....2195
TRIGger<t>:TBTO:SADDress:MAX....2195
TRIGger<t>:TBTO:SADDress:MIN....2195
TRIGger<t>:TBTO:TRGLevel....2187
TRIGger<t>:TBTO:TYPE....2188
TRIGger<t>:TIMeout:RANGe....1481
TRIGger<t>:TIMeout:TIME....1481
TRIGger<t>:TNOS:BIT....2123
TRIGger<t>:TNOS:CHKall....2123

TRIGger<t>:TNOS:CLR....2123
TRIGger<t>:TNOS:DMAX....2124
TRIGger<t>:TNOS:DMIN....2124
TRIGger<t>:TNOS:DOPerator....2124
TRIGger<t>:TNOS:ERENable....2126
TRIGger<t>:TNOS:ERRor<n>:ENABle....2126
TRIGger<t>:TNOS:FIENable....2125
TRIGger<t>:TNOS:FRAMe<fr>:ENABle....2123
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:BIT....2123
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DMAX....2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DMIN....2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:DOPerator....2124
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:ENABle....2125
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IMAX....2125
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IMIN....2125
TRIGger<t>:TNOS:FRAMe<fr>:FLD<fl>:IOPerator....2126
TRIGger<t>:TNOS:FRENable....2123
TRIGger<t>:TNOS:IMAX....2125
TRIGger<t>:TNOS:IMIN....2125
TRIGger<t>:TNOS:IOPerator....2126
TRIGger<t>:TV:CUSTom:LDURation....1518
TRIGger<t>:TV:CUSTom:SCANmode....1518
TRIGger<t>:TV:CUSTom:SDURation....1519
TRIGger<t>:TV:CUSTom:STYPe....1518
TRIGger<t>:TV:LFIeld....1517
TRIGger<t>:TV:LINE....1516
TRIGger<t>:TV:MODE....1515
TRIGger<t>:TV:POLarity....1516
TRIGger<t>:TV:STANdard....1515
TRIGger<t>:TYPE....1470
TRIGger<t>:UART:DATA....1932
TRIGger<t>:UART:DPOPerator....1931
TRIGger<t>:UART:DPOSition....1931
TRIGger<t>:UART:DPTO....1932
TRIGger<t>:UART:FCONdition....1932
TRIGger<t>:UART:SOURce....1931
TRIGger<t>:UART:TYPE....1930
TRIGger<t>:USB:ACONdition....2422
TRIGger<t>:USB:AMAX....2423
TRIGger<t>:USB:AMIN....2423
TRIGger<t>:USB:DATA....2424
TRIGger<t>:USB:DCONdition....2424
TRIGger<t>:USB:DPOPerator....2424
TRIGger<t>:USB:DPOSition....2425
TRIGger<t>:USB:ECONdition....2425
TRIGger<t>:USB:EMAX....2426
TRIGger<t>:USB:EMIN....2426
TRIGger<t>:USB:ERRC....2426
TRIGger<t>:USB:FCONdition....2427
TRIGger<t>:USB:FMAX....2428

TRIGger<t>:USB:FMIN....2427
TRIGger<t>:USB:HAND....2428
TRIGger<t>:USB:PATT....2428
TRIGger<t>:USB:PCONdition....2429
TRIGger<t>:USB:PMAX....2429
TRIGger<t>:USB:PMIN....2429
TRIGger<t>:USB:SCONdition....2430
TRIGger<t>:USB:SMAX....2430
TRIGger<t>:USB:SMIN....2430
TRIGger<t>:USB:SPEC....2431
TRIGger<t>:USB:STCO....2431
TRIGger<t>:USB:TCONdition....2431
TRIGger<t>:USB:TMAX....2432
TRIGger<t>:USB:TMIN....2432
TRIGger<t>:USB:TOKen....2432
TRIGger<t>:USB:TYPE....2421
TRIGger<t>:USB:WADD....2433
TRIGger<t>:USB:WEND....2433
TRIGger<t>:USB:WETCheck....2434
TRIGger<t>:USB:WFRN....2434
TRIGger<t>:USB:WPAY....2434
TRIGger<t>:USB:WPID....2434
TRIGger<t>:USB:WPOR....2435
TRIGger<t>:USB:WSEU....2435
TRIGger<t>:USB:WSTC....2435
TRIGger<t>:USBPd:BIT....2508
TRIGger<t>:USBPd:DMAX....2508
TRIGger<t>:USBPd:DMIN....2508
TRIGger<t>:USBPd:DOPerator....2509
TRIGger<t>:USBPd:ERENable....2506
TRIGger<t>:USBPd:ERRor<n>:ENABle....2506
TRIGger<t>:USBPd:FIENable....2507
TRIGger<t>:USBPd:FRAMe<fr>:ENABle....2506
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:BIT....2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DMAX....2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DMIN....2508
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:DOPerator....2509
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:ENABle....2507
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IMAX....2509
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IMIN....2510
TRIGger<t>:USBPd:FRAMe<fr>:FIELd<o>:IOPerator....2510
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:BIT....2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMAX....2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DMIN....2508
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:DOPerator....2509
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:ENABle....2507
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMAX....2509
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IMIN....2510
TRIGger<t>:USBPd:FRAMe<fr>:FLD<fl>:IOPerator....2510
TRIGger<t>:USBPd:FRENable....2506

TRIGger<t>:USBPd:IMAX 2509
TRIGger<t>:USBPd:IMIN 2510
TRIGger<t>:USBPd:IOPerator 2510
TRIGger<t>:USBThree:BIT 2482
TRIGger<t>:USBThree:DMAX 2483
TRIGger<t>:USBThree:DMIN 2483
TRIGger<t>:USBThree:DOPerator 2484
TRIGger<t>:USBThree:ERENable 2481
TRIGger<t>:USBThree:ERRor<n>:ENABle 2481
TRIGger<t>:USBThree:FIENable 2482
TRIGger<t>:USBThree:FRAMe<fr>:ENABle 2481
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:BIT 2482
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DMAX 2483
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DMIN 2483
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:DOPerator 2484
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:ENABle 2482
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IMAX 2484
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IMIN 2485
TRIGger<t>:USBThree:FRAMe<fr>:FIELd<o>:IOPerator 2485
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:BIT 2482
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMAX 2483
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DMIN 2483
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:DOPerator 2484
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:ENABle 2482
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMAX 2484
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IMIN 2485
TRIGger<t>:USBThree:FRAMe<fr>:FLD<fl>:IOPerator 2485
TRIGger<t>:USBThree:FRENable 2481
TRIGger<t>:USBThree:IMAX 2484
TRIGger<t>:USBThree:IMIN 2485
TRIGger<t>:USBThree:IOPerator 2485
TRIGger<t>:WIDTh:DELTa 1475
TRIGger<t>:WIDTh:POLarity 1474
TRIGger<t>:WIDTh:RANGe 1474
TRIGger<t>:WIDTh:WIDTh 1475
TRIGger<t>:WINDow:DELTa 1480
TRIGger<t>:WINDow:RANGe 1478
TRIGger<t>:WINDow:TIME 1479
TRIGger<t>:WINDow:WIDTh 1480
TRIGger<t>:ZONE:EXPRession[:DEFine] 1538
TRPRobe:ID:PARTnumber? 1442
TRPRobe:ID:PRDate? 1442
TRPRobe:ID:SRNumber? 1443
TRPRobe:ID:SWVersion? 1442
TRPRobe:PMETer:RESults:COMMon? 1422
TRPRobe:PMETer:RESults:DIFFerential? 1422
TRPRobe:PMETer:RESults:NEGative? 1422
TRPRobe:PMETer:RESults:POSitive? 1423
TRPRobe:PMETer:RESults:SINGle? 1421
TRPRobe:PMETer:VISibility 1421

TRPRobe:SETup:ACCoupling....1426
TRPRobe:SETup:ADVanced:AUDioverload....1427
TRPRobe:SETup:ADVanced:FILTer....1427
TRPRobe:SETup:ATTenuation:DEFProbe....1436
TRPRobe:SETup:ATTenuation:MANual....1424
TRPRobe:SETup:ATTenuation:MODE....1424
TRPRobe:SETup:ATTenuation:UNIT....1424
TRPRobe:SETup:ATTenuation[:AUTO]?....1417
TRPRobe:SETup:BANDwidth?....1416
TRPRobe:SETup:CAPacitance?....1443
TRPRobe:SETup:CMOFfset....1425
TRPRobe:SETup:DEGauss....1438
TRPRobe:SETup:DISPlaydiff....1420
TRPRobe:SETup:GAIN:AUTO?....1417
TRPRobe:SETup:GAIN:MANual....1425
TRPRobe:SETup:IMPedance?....1443
TRPRobe:SETup:MODE....1419
TRPRobe:SETup:NAME?....1416
TRPRobe:SETup:PRMode....1429
TRPRobe:SETup:STATe?....1415
TRPRobe:SETup:TYPE?....1416
TRPRobe:SETup:ZAXV....1426
USRDefined:RST:NAME....1390
USRDefined:RST:OPEN....1391
USRDefined:RST:SAVE....1391
USRDefined:RST[:ENABle]....1391
VAUToscale....1413
WAVeform<wf>:XYCurve:RATio....1581
WAVeform<wf>:XYCurve:STATe....1581
WAVeform<wf>:XYCurve:SWAP....1582
WAVeform<wf>:XYCurve:XSOurce....1583
WAVeform<wf>:XYCurve:YSOurce....1583
WGENerator<wg>:ACOPy....2648
WGENerator<wg>:ARBGen:COPY....2660
WGENerator<wg>:ARBGen:MULTichannel:IMPort....2660
WGENerator<wg>:ARBGen:MULTichannel:NAME....2660
WGENerator<wg>:ARBGen:MULTichannel:OPEN....2660
WGENerator<wg>:ARBGen:NAME....2661
WGENerator<wg>:ARBGen:OPEN....2661
WGENerator<wg>:ARBGen:RUNMode....2661
WGENerator<wg>:ARBGen:RUNSingle....2663
WGENerator<wg>:ARBGen:SAMPles?....2662
WGENerator<wg>:ARBGen:SELect....2662
WGENerator<wg>:ARBGen:SRATe....2662
WGENerator<wg>:ARBGen[:SOURce]....2662
WGENerator<wg>:COUPling:AMPLitude....2670
WGENerator<wg>:COUPling:AWForm....2671
WGENerator<wg>:COUPling:NOISe....2671
WGENerator<wg>:COUPling:PHASeshift....2670
WGENerator<wg>:COUPling:STATe....2670

WGENerator<wg>:COUPling[:FREQuency] 2670
WGENerator<wg>:FREQuency 2650
WGENerator<wg>:FUNCtion:PULSe[:WIDTh] 2651
WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] 2651
WGENerator<wg>:FUNCtion[:SELect] 2650
WGENerator<wg>:FUNCtion[:SQUare]:DCYCle 2651
WGENerator<wg>:MODulation:AM:DCYCle 2652
WGENerator<wg>:MODulation:AM:DEPTh 2653
WGENerator<wg>:MODulation:AM:FREQuency 2653
WGENerator<wg>:MODulation:AM:SYMMetry 2653
WGENerator<wg>:MODulation:AM[:FUNCtion] 2654
WGENerator<wg>:MODulation:CARRier:FREQuency 2654
WGENerator<wg>:MODulation:CARRier:PERiod 2654
WGENerator<wg>:MODulation:FM:DCYCle 2654
WGENerator<wg>:MODulation:FM:DEViation 2655
WGENerator<wg>:MODulation:FM:FREQuency 2655
WGENerator<wg>:MODulation:FM:SYMMetry 2655
WGENerator<wg>:MODulation:FM[:FUNCtion] 2656
WGENerator<wg>:MODulation:FSK:FONE 2656
WGENerator<wg>:MODulation:FSK:FTWO 2656
WGENerator<wg>:MODulation:FSK[:RATE] 2657
WGENerator<wg>:MODulation:NDCLevel 2667
WGENerator<wg>:MODulation:NLABsolute? 2667
WGENerator<wg>:MODulation:NLPCent 2668
WGENerator<wg>:MODulation:NOISe 2668
WGENerator<wg>:MODulation:PWM:DCYCle 2657
WGENerator<wg>:MODulation:PWM:DEPTh 2657
WGENerator<wg>:MODulation:PWM:FREQuency 2657
WGENerator<wg>:MODulation:PWM:SYMMetry 2658
WGENerator<wg>:MODulation:PWM[:FUNCtion] 2658
WGENerator<wg>:MODulation:TYPE 2652
WGENerator<wg>:OUTPut[:LOAD] 2665
WGENerator<wg>:PERiod 2650
WGENerator<wg>:PRESet 2649
WGENerator<wg>:SOURce 2648
WGENerator<wg>:SWEep:FSTart 2658
WGENerator<wg>:SWEep:TIME 2659
WGENerator<wg>:SWEep[:FEND] 2659
WGENerator<wg>:VOLTage:DCLevel 2666
WGENerator<wg>:VOLTage:HIGH 2666
WGENerator<wg>:VOLTage:INVersion 2666
WGENerator<wg>:VOLTage:LOW 2666
WGENerator<wg>:VOLTage:OFFSet 2667
WGENerator<wg>:VOLTage[:VPP] 2665
WGENerator<wg>[:ENABle] 2648
ZVC:BANDwidth 1446
ZVC:RESCoupled 1448
ZVC:TYPE 1446
ZVC:Z<m>:I<n>:BANDwidth? 1446
ZVC:Z<m>:I<n>:DATA:HEADer? 1458

ZVC:Z<m>:I<n>:DATA[:VALues]?....1458
ZVC:Z<m>:I<n>:IMPedance....1447
ZVC:Z<m>:I<n>:OFFSet....1447
ZVC:Z<m>:I<n>:OVERload:RSTO....1448
ZVC:Z<m>:I<n>:OVERload:VALue?....1449
ZVC:Z<m>:I<n>:POSition....1449
ZVC:Z<m>:I<n>:SCALe....1449
ZVC:Z<m>:I<n>:SHUNt:EVALue....1450
ZVC:Z<m>:I<n>:SHUNt:MAXCurrent....1450
ZVC:Z<m>:I<n>:SHUNt:MAXVoltage....1451
ZVC:Z<m>:I<n>:SHUNt:MODE....1450
ZVC:Z<m>:I<n>:SHUNt:MXCValue?....1451
ZVC:Z<m>:I<n>:SKEW....1451
ZVC:Z<m>:I<n>:ZERComp:DETect....1456
ZVC:Z<m>:I<n>:ZERComp:STATe?....1457
ZVC:Z<m>:I<n>:ZERComp:USE....1456
ZVC:Z<m>:I<n>[:STATe]....1452
ZVC:Z<m>:ID:NAME?....1455
ZVC:Z<m>:ID:PARTnumber?....1455
ZVC:Z<m>:ID:SRNumber?....1456
ZVC:Z<m>:ID:SWVersion?....1456
ZVC:Z<m>:V<n>:BANDwidth?....1452
ZVC:Z<m>:V<n>:DATA:HEADer?....1458
ZVC:Z<m>:V<n>:DATA[:VALues]?....1458
ZVC:Z<m>:V<n>:IMPedance....1453
ZVC:Z<m>:V<n>:OFFSet....1453
ZVC:Z<m>:V<n>:OVERload:RSTO....1453
ZVC:Z<m>:V<n>:OVERload:VALue?....1453
ZVC:Z<m>:V<n>:POSition....1454
ZVC:Z<m>:V<n>:SCALe....1454
ZVC:Z<m>:V<n>:SKEW....1455
ZVC:Z<m>:V<n>[:STATe]....1455

Index

Symbols

8b/10b
- Trigger settings ... 869
- Triggering ... 872

10BASE-T1S
- Configuration settings ... 713
- Configuring ... 715
- Trigger settings ... 716
- Triggering ... 719

100BASE-T1
- Configuration settings ... 727
- Configuring ... 730
- Trigger settings ... 731
- Triggering ... 737

1000BASE-T1
- Configuration settings ... 744
- Configuring ... 748
- Trigger settings ... 748
- Triggering ... 754

A

Acquisition
- Decimation ... 132
- Modes ... 117
- Single, multiple ... 38
- Start and stop ... 37
- Time ... 118

Acquisition modes ... 117
Acquisition time ... 118
Actions
- Mask test ... 447

Active probe
- Differential ... 121
- Micro button ... 150
- Offset compensation ... 168
- Overview ... 121
- ProbeMeter ... 151
- Setup ... 154

Active waveform ... 53
ADC overflow ... 1313
ADC sample rate ... 116
ADC samples ... 116
Aligning
- Input channels ... 106

Alignment ... 105
Amplitude measurement ... 340
Amplitude/time measurements
- Settings ... 345

Analog
- Parallel bus display ... 1017

Annotate ... 62
Appearance
- Color tables ... 80

Application, external ... 111
Apps key ... 44
Area level
- Amplitude/time measurements ... 347

Area measurements ... 344
Arithmetic ... 133
Arranging waveforms ... 54
Auto clear
- Search results ... 483

Auto Norm
- Key (trigger) ... 38

Auto trigger mode ... 38
Auto-logon ... 1284
Auto, trigger mode ... 232
Autocorrelation ... 293
Automatic measurements
- Configuration settings ... 336
- Display settings ... 397
- Gate settings ... 391

Autonaming ... 108
Autoset
- for protocols ... 557
- Key ... 44

AutoZero ... 148
Average ... 133
- FFT ... 425
- Mathematics ... 305

Average count ... 130, 133, 306
Average count (N-single count) ... 130, 133, 306

B

Bandwidth ... 143
- Instrument ... 115
- Probe ... 115
- Spectrum measurement ... 370

Bench top operation ... 26
Biased correlation ... 293
Big endian
- CAN ... 628
- LIN ... 662

Bit pattern editor ... 564
Bit string
- serial pattern, MSO ... 1035

Blackman Harris window (FFT) ... 423
Brochure ... 21
Bug report ... 2864
Burst width ... 342
Bus key ... 40

C

C<n> keys ... 40
Cable, USB ... 33
Calibration certificate ... 21
Camera key ... 43
CAN
- Configuration settings ... 615
- Data length ... 628
- Data pattern ... 628
- Endianness ... 628
- Frame types ... 626
- ID type ... 626
- Identifier ... 627
- Transfer order ... 628
- Trigger settings ... 623, 644
- Trigger types ... 624

CAN-XL
- Basics ... 641
- Configuration settings ... 641

Center frequency
Spectrum measurement ... 373
Channel
Bandwidth measurement ... 373
C<n> keys ... 40
Center frequency ... 373
Offset ... 142
Waveforms ... 52
Channel power
Spectrum measurement ... 370
Clear status
Remote ... 1353
Clipping ... 1313
Clock
Parallel bus ... 1017
Color tables ... 80
Comb
Parallel bus display ... 1017
Command sequence
Remote ... 1356
Commands
Finding a command ... 1326
Compensation, passive probes ... 195
Computer name
Changing ... 1290
CONDition ... 1309
Configuration
hardware ... 107
Connectors
Channel input ... 33
External trigger input ... 33
Coupled zoom ... 275
quick access ... 61, 268
Coupling ... 113
Channel ... 142
Trigger ... 263
Waveform generator settings ... 1066
Cross-correlation ... 293
CSV
Waveform export ... 503
CSV export ... 111
Cursor
Saving data ... 520
Settings for data export ... 505
Used for gating ... 391
Cursor key ... 43
Cursor measurements
Disabling ... 323
Enable ... 325
Envelope waveform ... 328
How to ... 322
Peak excursion ... 332, 373
Peak search ... 330
Results ... 321
Settings ... 325
Cursors ... 61
Configuring display ... 325
Configuring measurement ... 323
Coupling ... 329
Display ... 329
Position ... 327
Start measurement ... 323
Track waveform ... 323, 328
Type ... 327
Custom:
Filter settings ... 857
Custom: Manchester / NRZ
Configuration settings ... 832
Configuring ... 851
Decoding ... 860
Trigger settings ... 852
Triggering ... 857
Customer support ... 2864
Cycle area measurement ... 344
Cycle measurements ... 340

D

D-PHY
Basics ... 783
Configuration settings ... 783
Configuring ... 788
Triggering ... 794
Data
Accessing ... 487
Handling ... 487
Retrieving ... 487
Data entry ... 66
Data length
LIN ... 662
Data Length Code
CAN ... 628
Data pattern
CAN ... 628
LIN ... 662
Data security ... 2865
Data sheet ... 21
Data2Clock
Search ... 474
Trigger ... 216
Trigger (MSO) ... 1030
DDR
Configuration settings ... 999
Configuring ... 1006
Decode results ... 1011
Decimation ... 117, 132
Decode
Custom protocol, decode layer ... 850
D-PHY, decode layer ... 786
DDR, decode layer ... 1003
Ethernet, decode layer ... 699, 714, 729, 746
M-PHY, decode layer ... 804
MDIO, decode layer ... 880
SpaceWire, decode layer ... 955
USBPD, decode layer ... 942
Decode layer
Custom protocol ... 850
D-PHY ... 786
DDR ... 1003
Ethernet ... 699, 714, 729, 746
M-PHY ... 804
MDIO ... 880
SpaceWire ... 955
USBPD ... 942
Decode table
MSO ... 1023
Decoded bus
Parallel bus display ... 1017
Default
File names ... 110
Path for saving ... 110
Default values
Remote ... 1355

Delay ... 342
Delay measurement ... 348
Delete ... 63
Demo ... 60
Device footprint ... 2864
DHCP ... 1289
DHCP server
LAN configuration ... 1290
Diagrams ... 46
Dialog boxes
Usage ... 65
Dialogs ... 49
Differential probe ... 121
Digital channels ... 1013
Configuration settings ... 1013
Configuring ... 1021
Decode table ... 1023
Export ... 1038
Search ... 1039
Triggering ... 1037
Digital filter ... 146
Digital resolution ... 1019
Digital signals ... 1013
Digital waveforms ... 52
Display
Intensity ... 96
Overview ... 45
XY-diagram ... 317, 319
Zoom ... 268
Display elements ... 49
Diagram ... 45
Signal bar ... 45
DisplayPort ... 31, 36
DNS server
LAN configuration ... 1290
Duty cycle
Eye ... 362
Duty cycle measurement ... 342

E

Edge
Search conditions ... 467
Trigger ... 205
Edge count ... 344
Edge trigger
MSO ... 1026
Electric power (math. function) ... 295
EMC/ESD measurements
Results ... 379
Settings ... 380
ENABle ... 1309
Enable registers
Remote ... 1355
Endianness
CAN ... 628
LIN ... 662
Envelope ... 133
FFT ... 425
Mathematics ... 305
Measurements ... 338
Envelope waveform
Cursor measurement ... 328
Error report ... 2864
ESR ... 1308
Ethernet
Configuration settings ... 697
Configuring ... 702
Trigger settings ... 703
Triggering ... 706
EVENt ... 1309
Event actions
Mask test ... 447
Event status enable register (ESE)
Remote ... 1353
Event status register (ESR)
Remote ... 1353
Export
Data ... 505
Digital channels ... 1038
History ... 520
Include horizontal values ... 509
Integer format ... 508
Parallel buses ... 1038
Raw values ... 508
Waveform histograms ... 512
XML, CSV, BIN ... 498
Expressions ... 289
External application ... 111
External monitor ... 31, 36
External trigger input ... 261
External trigger out ... 237
External trigger output ... 36
Extinction ratio
Eye ... 362
Eye
Amplitude ... 362
Base ... 362
Bit rate ... 362
Fall time ... 362
Height ... 362
Jitter ... 362
Measurement results ... 362
Rise time ... 362
Top ... 362
Width ... 362
Eye measurements
Characteristics ... 360
Results ... 361
Settings ... 363

F

Fail condition, mask test ... 447
Fail criteria, mask test ... 436
Fall time ... 342
FFT ... 62, 412
Configuring ... 416
Fundamentals ... 412
Gating ... 426
Measurement speed ... 415
MSO ... 1039
Peak excursion ... 332, 373
Performance considerations ... 417
Search ... 463
Setup ... 420, 424
Window types ... 423
File formats
Waveform export ... 498
File import
Restrictions ... 498

File names
Default ... 108, 110
Filter
Custom ... 857
Find
Remote control command ... 69
Find trigger level ... 60
FIR (math. function) ... 295
FIR filter ... 298
Firmware
shutdown (remote) ... 1361
Flattop2 window (FFT) ... 423
Formula editor
Reference ... 289
Using ... 297
Formulas
Advanced expressions ... 289
Operator editor ... 287
Frame types
CAN ... 626
Frontend
information ... 107
Frontpanel
information ... 107
Function generator option ... 34

G

Gain, vertical ... 113
Gate
Coupled to cursor ... 391
Coupled to zoom ... 391
Saving data ... 520
Search ... 479
Search, defining ... 481
Settings ... 391
Settings for data export ... 505
Gate area
Configuring ... 390
Coupling to zoom ... 392, 427, 481
Gating
FFT ... 426
Gaussian window (FFT) ... 423
GBIP connector ... 36
Getting started ... 20
Glitch
Search conditions ... 468
Trigger ... 206
GPIB
Address ... 1304
Remote control interface ... 1301
GPIB bus control
Remote ... 1354
Grid ... 47
Grounding ... 29

H

Hamming window (FFT) ... 423
Hann window (FFT) ... 423
Hardware
information ... 107
Hardware CDR ... 226
Hardware check ... 107
Hardware zoom ... 61, 268
HD key ... 43
HDMI ... 36
HDMI connector ... 36
Header files ... 498
Health & Utilization ... 1298
Help ... 20, 59
Open ... 69
Search for topic ... 70
Using ... 70
High definition ... 136
High res ... 132
High signal level measurement ... 340
Histogram
Saving ... 497
Histogram measurements
Settings ... 378
Histograms ... 61, 375
Area ... 49
averaging ... 545
Characteristics ... 375
Configuring ... 308
Diagram ... 49
Exporting waveform histograms ... 512
Horizontal ... 375
Jitter measurement ... 377
Markers ... 378
Measurement histograms ... 400
Measurement results ... 375
Saving waveform histograms ... 512
Setup ... 309
Toolbar icons ... 308
Tubes ... 549
Vertical ... 375
History
Export ... 505, 520
MSO ... 1022
time stamp ... 315
History key ... 43
Hold time ... 349
Holdoff ... 233
TV trigger ... 222
Using ... 201
Horizontal
Label ... 48
Position ... 39
Horizontal position ... 119
HUMS ... 1298
Hysteresis
Reference level ... 541
Trigger ... 234

I

I3C
Basics ... 580
Configuration settings ... 582
Configuring ... 585
Decode results ... 589
Trigger settings ... 586
Triggering ... 589
I30 / I60
EMC/ESD measurement ... 379
I²C
Basics ... 565
Configuration settings ... 567
Configuring ... 570
Decode results ... 576
Trigger settings ... 570
Triggering ... 575

Icons
Measurement status ... 394
ID type
CAN ... 626
Identification
Remote ... 1353
Identifier
CAN ... 627
LIN ... 661
Import waveforms
Restrictions ... 498
Infinite persistence ... 95, 1167
Instrument settings
Loading ... 490
Recall ... 1355
Save ... 1355
Saving ... 495
Intensity ... 96
Intensity key ... 43
Intensity of display elements ... 43
Interfaces
GPIB ... 1304
LAN ... 1301
Interlaced scanning ... 226
Interleaved sample rate ... 116
Interleaved X/Y ... 509
Interpolation ... 130
Interval
Search conditions ... 472
Trigger ... 213
IP address ... 1301
Changing ... 1289
Remote Desktop ... 1300
IST ... 1308
IST flag
Remote ... 1354

J

Jitter
Measurement via histogram ... 377
Jitter measurements
Settings ... 1101

K

Kaiser Bessel window (FFT) ... 423
Keep X-grid fixed ... 83
Keep Y-grid fixed ... 83
Keyboard
On-screen ... 66
Keyboard, connecting ... 31
Keypad ... 66

L

Labels
Waveform ... 87
LAN ... 1293
Configuration ... 1288, 1293
Connector ... 36
Environment ... 1288
Interface ... 1301
IP address ... 1301
LAN configuration ... 1295
Ping ... 1296
Raw socket mode ... 1303
Remote control interface ... 1301
Resource string ... 1301
Level at delay
EMC/ESD measurement ... 379
Level knob ... 37
Level measurements ... 340
Limit checks
Actions ... 408
Configuring ... 405
Enable ... 406
Performing ... 405
Violation settings ... 408
Limits
Range ... 406
LIN
Configuration settings ... 655
Configuring ... 659
Data length ... 662
Data pattern ... 662
Endianness ... 662
Identifier ... 661
Transfer order ... 662
Trigger settings ... 659
Trigger types ... 660
Triggering ... 663
Little endian
CAN ... 628
LIN ... 662
Load instrument settings ... 1355
Loading
User settings ... 490
Lock touchscreen ... 43
Logic analyzer ... 1013
Logic key ... 40
Logic probe connector ... 34
Logical operations on channels ... 220, 239
Logical thresholds
MSO, configuring ... 1022
MSO, settings ... 1014
Login ... 1284
Long-term measurements
Basics ... 398
Configuring ... 398
Horizontal scale ... 403
Number of points ... 403
Period of time per point ... 403
Saving ... 515
Scale mode ... 403
Settings ... 400
Low signal level measurement ... 340

M

M-PHY
Basics ... 801
Configuration settings ... 802
Configuring ... 804
Decode results ... 820
Trigger settings ... 805
Mainboard
information ... 107
Margins
Range ... 406
Marker limit
Histograms ... 379
Markers
Histograms ... 375, 378

Mask definition
Settings ... 440
Type ... 439
Mask setup ... 440
Mask test ... 61, 436
Appearance settings ... 450
Display settings ... 449, 450
Display, configuring ... 460
Event actions, configuring ... 460
Event actions, settings ... 447
Fail condition ... 447
Fail criteria ... 436
Fail criteria, configuring ... 460
History, testing ... 462
Performing ... 461
Results ... 436
Setting up ... 460
Starting ... 461
State, mask test result ... 461
Test settings ... 438
Violation tolerance ... 447
Mask test results
Acq. completed ... 437
Acq. remaining ... 437
Acquisition hits ... 437
Fail rate ... 437
Sample hits ... 437
State ... 437
Test result ... 438
Mask testing ... 436
Masks
Creating user mask ... 455
Definition ... 436, 440
Load settings ... 439
Loading ... 461
modifying user mask ... 456
Save settings ... 439
Saving ... 461
Segments, point settings ... 442
Segments, settings ... 441
User mask definition ... 440
Waveform mask definition ... 443
Math key ... 41
Math waveforms ... 41, 52
Arithmetic ... 305
Displaying ... 284
FFT ... 412
FFT Gating ... 426
FFT setup ... 420, 424
Formula editor ... 289
Operator editor ... 287
Operators ... 287, 289
Saving ... 284
Scale ... 304
Setup ... 285
Max value measurement ... 340
Maximum sample rate ... 116
MDIO
Configuration settings ... 878
Configuring ... 881
Trigger settings ... 882
Triggering ... 885
MDIO protocol
Basics ... 877
Mean measurement ... 340
Measure key ... 43, 334
Measurement ... 61
Measurement histograms ... 400
Measurement types
Area ... 344
Arithmetic ... 344
Counting ... 344
EMC/ESD ... 379
Eye ... 361
Histograms ... 375
Protocol ... 384
Spectrum ... 370
Time ... 342
Measurements
Amplitude/time ... 339
Configuring ... 335
Delay ... 348
Icons in results table ... 394
Pulse train count ... 350
Results ... 393
Setup/Hold ... 349
Source for analysis ... 401
Starting ... 334
Statistics ... 395
Median
Histograms ... 375
Memory ... 311
Menu ... 49
Micro button ... 121, 150
Min value measurement ... 340
Mixed signal option ... 1013
Mixed Signal Option ... 34
Monitor ... 31, 36, 97
Mouse, connecting ... 31
MSO ... 34, 1013
FFT ... 1039
History ... 1022
Resolution ... 1019
Time qualification ... 1033
Trigger settings ... 1025
Zoom ... 1022
Multi channel export
Enable ... 506
Remote control ... 1413, 1783
Results in header file ... 501
Multiple measurements ... 406

N

N dB down
Spectrum ... 372
Network
Environment ... 1288
Noise
Eye ... 362
Hysteresis settings ... 234
Non-operational data ... 487
Normal trigger mode ... 38
Normal, trigger mode ... 232
Notification ... 48
NTRansition ... 1309
Numeric data entry ... 66

O

Occupied bandwidth
Spectrum measurement ... 370, 373
OCXO ... 36, 128

Offset 41
Active probe 168
Channel 142
On/Off key 37
One File 491
Open source acknowledgment 21
Operating system 1283
Access 1287
service packs 1285
Settings 1287
Operation
Concepts 44
Manual 45
Operation complete
Remote 1354
Operational data 487
Operator
Type 287
Operators
Formula editor mathematics 289
Optical
Average power 369
Modulation amplitude 369
Options
hardware installation 34
Identification (remote) 1354
R&S RTP-B1 (MSO) 34
R&S RTP-B1E (for R&S RT-ZVC) 34
R&S RTP-B6 (waveform and function generator) 34
Output buffer 1308
Overshoot measurement 340

P

Parallel buses 1013
Clock setup 1017
Configuration settings 1013
Configuring 1021
Decode table 1023
Export 1038
Triggering 1037
Parallel poll register enable
Remote 1354
Passive probe
Settings 152
Password 1284
Remote Desktop 1300
Pattern
Qualification, state trigger 220, 239
Pattern generator
Setup 1060
Pattern search condition 219
Pattern trigger 219
MSO 1033
PCIe
Trigger settings 974
PCIe Gen 1/2
Search settings 986
Searching 997
Triggering 984
Peak
EMC/ESD measurement 379
Peak detect 132
Peak excursion
Cursor measurement 332, 373
Search 332, 373
Spectrum measurement 332, 373
Peak search
Cursor measurement 322, 323
Spectrum measurement 322, 330
Peak to peak measurement 340
Performance 98
Considerations for FFT 417
FFT parameters 415
Ping 1296
Position 41
Horizontal 39, 119
Vertical 41, 113
Position mode 86
Power
Connector 35
On/Off 29
PPE 1308
Preset 102
Preset key 44
Printing
Settings 523
Probability markers
Histograms 378
ProbeMeter 121
Measurement 340
Setting 151
Probes
Active 121
AutoZero 148
Compensation 33
Differential 121
Passive, compensation 195
Setup 147
Progressive scanning 226
Projector 31
Protocol
Raw socket mode 1303
Protocols
8b/10b trigger settings 869
10BASE-T1S configuration settings 713
10BASE-T1S trigger settings 716
100BASE-T1 configuration settings 727
100BASE-T1 trigger settings 731
1000BASE-T1 configuration settings 744
1000BASE-T1 trigger settings 748
CAN configuration settings 615
CAN-XL configuration settings 641
Custom: filter settings 857
Custom: Manchester / NRZ configuration settings 832
Custom: Manchester / NRZ trigger settings 852
D-PHY configuration settings 783
Data format 558
DDR configuration settings 999
DDR decode results 1011
Display settings 558
Ethernet configuration settings 697
Ethernet trigger settings 703
I3C configuration settings 582
I3C decode results 589
I3C trigger settings 586
I²C configuration settings 567
I²C decode results 576
I²C trigger settings 570
LIN configuration settings 655
LIN trigger settings 659
M-PHY configuration settings 802
M-PHY decode results 820
M-PHY trigger settings 805

MDIO configuration settings ... 878
MDIO trigger settings ... 882
PCIe Gen 1/2 search settings ... 986
PCIe trigger settings ... 974
SpaceWire configuration settings ... 953
SPI configuration settings ... 596
SPI decode results ... 603
SPI trigger settings ... 600
UART decode results ... 613
USB 2.0 configuration settings ... 895
USB 2.0 trigger settings ... 900
USB 3.1 configuration settings ... 926
USB 3.1 trigger settings ... 930
USBPD configuration settings ... 940
USBPD trigger settings ... 944
PTRansition ... 1309
Pulse count ... 344
Pulse train count ... 350

Q

Q-factor
Eye ... 362
Quick measurements ... 62

R

R&S RT-ZVC
multi-channel power probe ... 180
Rack mounting ... 27
Raw socket mode ... 1303
Recall instrument settings ... 1355
Recall intermediate ... 1355
Record length ... 116, 118
Rectangular window (FFT) ... 423
Redo ... 59
Ref In ... 36
Ref key ... 40
Ref Out ... 36
Reference levels
Basics ... 539
Configuring ... 541
Defining automatically ... 541
Defining manually ... 541
displaying ... 398
Displaying ... 542
Hysteresis ... 541
Level settings ... 543, 545
Settings ... 543, 545
Tubes ... 541
Reference point ... 39, 48, 119
Reference signal
External ... 128
OCXO ... 128
Reference waveforms ... 40, 52
Displaying ... 276
Loading ... 276
Saving ... 276
Registers ... 1308
Release notes ... 21
Remote commands
Finding a command ... 1326
Remote control ... 44
Find command using help ... 69
GPIB address ... 1304
Interfaces ... 1301
Protocols ... 1301
Starting ... 1306
Remote Desktop ... 44, 1299
Remote operation ... 44, 1297, 1299
Repetitive, trigger mode ... 232
Reset
Histogram, long-term meas., statistics ... 402
Reset values
Remote ... 1355
Resolution ... 113, 116, 118
16 bit ... 136
Resolution enhancement ... 117
Resource string
LAN ... 1301
Restoring
Settings ... 103
Result boxes
Displaying ... 63
Result lines
Displaying ... 398
Result tables ... 49
Results
Clear ... 397
Configuring display ... 63
Lines in display ... 542
Mask test ... 436
Measurements ... 393
Reset long-term measurement ... 402
Saving ... 514
RFFE
Advanced ... 766
Trigger settings ... 767
Triggering ... 775
Rise time ... 342
RMS
Acquisition setting ... 132
RMS measurement ... 340
Roll mode ... 125
Strart roll time ... 126
RS232 ... 606
Basics ... 606
Run / Stop ... 60
Run / Stop key ... 37
Runt
Search conditions ... 469
Trigger ... 208

S

Safety instructions ... 21
Sample rate ... 116
Samples ... 116
History ... 311
Save instrument settings ... 1355
Save intermediate ... 1355
Save Reference ... 62
Save Waveform ... 62
Save/Recall
Remote ... 1774
User preferences ... 493
User settings ... 490, 491
Waveforms ... 505
Saveset ... 490, 495
Saving
File name generation ... 108
History ... 505, 520
Instrument settings ... 490, 495

Long-term measurements ... 515
Preset ... 102
Results ... 514
Screenshots ... 526
User preferences ... 493
Waveform histograms ... 512
Waveform segments ... 505, 520
Waveforms ... 505, 520
Scale
Horizontal, rotary knob ... 39
Math waveforms ... 304
Vertical ... 113, 142
Vertical, rotary knob ... 41
Scaling
Horizontal ... 123
Long-term measurements ... 403
Long-term measurements, horizontal ... 403
Measurement histograms ... 403
Scanning system (TV signals) ... 226
SCPI
Finding a command ... 1326
Screen resolution ... 31
Screenshot
Saving ... 526
Web interface ... 1297
Screenshots ... 523
Meta information ... 522
Print and save ... 522
Search ... 61
Auto clear ... 483
Clearing results ... 483
Conditions ... 463
Control ... 463
Copy trigger settings ... 466
Data2Clock ... 474
Definition ... 463
Edge ... 467
Enable ... 465
FFT ... 463
Gate ... 479
Glitch ... 468
Interval ... 472
On digital signals ... 1039
PCIe Gen 1/2 settings ... 986
Peak excursion ... 332, 373
Results ... 464
Runt ... 469
Scope ... 463
Setup & Hold ... 474
Show results ... 483
Slew rate ... 473
Sorting results ... 483
Source ... 465
Timeout ... 471
Trigger level ... 467, 468, 469, 472, 473, 475
Trigger search ... 466
Width ... 468
Window ... 470
Zoom window, configuring ... 485
Search conditions
Pattern ... 219
Searching
In help ... 70
Secured environment ... 2865
Select
Waveform ... 54
Selected waveform ... 53
Self-alignment ... 105, 106, 1352
Self-test
Remote ... 1356
Selftest ... 107
Serial pattern trigger ... 247
MSO ... 1035
Service packs ... 1285
Service request enable register (SRE)
Remote ... 1356
Settling time ... 342
Setup & Hold
Search ... 474
Trigger ... 216
Trigger (MSO) ... 1030
Setup time ... 349
Setup/Hold measurement ... 349
Setup/Hold ratio ... 349
Show labels ... 86
Shutdown
firmware (remote) ... 1361
Signal bar ... 48
Signal icons ... 48
Signal label ... 48
Signal levels
Configuring ... 541
Signal preview ... 53
Signal threshold
Amplitude/time measurements ... 346
Signal view ... 48
Signals
Color settings ... 80
Single ... 60
Single key ... 38
Skew ... 126
Slew rate
Trigger ... 214
Slew Rate
Search conditions ... 473
Slope key ... 38
SmartGrid ... 54
Source key ... 38
SpaceWire
Advanced ... 954
Basics ... 952
Configuration settings ... 953
Configuring ... 956
Spectrogram ... 63
Spectrum
Key ... 42
Spectrum measurements
Channel BW ... 373
Channel CF ... 373
Cursor measurement ... 322, 323
N dB down ... 372
Occupied bandwidth ... 373
Peak detection ... 323
Peak excursion ... 332, 373
Peak search ... 322
Results ... 370
Settings ... 372
SPI
Configuration settings ... 596
Configuring ... 600
Decode results ... 603
Trigger settings ... 600
Triggering ... 602

SPI protocol
Basics ... 595
SRE ... 1308
Standard
TV trigger ... 223
Standard deviation
Histograms ... 375
Standard deviation measurement ... 340
State trigger ... 218
MSO ... 1032
Statistics
Enable ... 400
Measurement results ... 395
Status
Measurements ... 394
Status byte
Remote ... 1353, 1356
Status registers
CONDition ... 1309
ENABle ... 1309
EVENt ... 1309
NTRansition ... 1309
Overview ... 1307
PTRansition ... 1309
STATus:OPERation ... 1310
Status reporting system
Common commands ... 1352
Status reports ... 1307
STB ... 1308
Style (waveforms) ... 96
Switch off
Waveform ... 54
Switch on
Waveform ... 53
Switching of transitions ... 344

T

Technical support ... 2864
Temperature
Changes ... 106
Termination ... 113
Text entry ... 66
Thresholds
MSO, configuring ... 1022
MSO, settings ... 1014
Time base ... 39, 118
Time measurements ... 342
Time qualification
MSO ... 1033
Time scale ... 39, 118, 123
Time stamp ... 315
Time to value
EMC/ESD measurement ... 379
Timebase ... 123
Timeout
Search conditions ... 471
Trigger ... 212
Timeout trigger
MSO ... 1029
Toolbar ... 56
Annotate ... 62
Coupled zoom ... 61, 268
Cursor ... 61
Delete ... 63
FFT ... 62
Find level ... 60
Hardware zoom ... 61, 268
Hide/show icons ... 57
Histogram ... 61
Histogram icons ... 308
Load saveset ... 59
Masks ... 61
Measure ... 61
Measurement ... 334
Overview ... 58
Quick measurement ... 62
Redo ... 59
Run / Stop ... 60
Save Reference ... 62
Save Waveform ... 62
Search ... 61
Show tooltips ... 59
Single ... 60
Undo ... 59
Zone trigger ... 62
Zoom ... 60, 268
Tooltips ... 59
Show ... 69
Total harmonic distortion
Spectrum measurement ... 370
Touch Lock key ... 43
Touchscreen
Adjusting ... 101
Compared with mouse ... 45
Control elements ... 49
Lock, unlock ... 43
Usage ... 45
Track
Enable ... 400
Track waveform
Cursor measurement ... 323, 328
Transfer order
CAN ... 628
LIN ... 662
Transition switching count ... 344
Transition trigger
See Slew rate trigger ... 214
Transparency ... 43
Trigger
8b/10b settings ... 869
10BASE-T1S settings ... 716
100BASE-T1 settings ... 731
1000BASE-T1 settings ... 748
CAN settings ... 623, 644
Custom: Manchester / NRZ settings ... 852
Data2Clock ... 216
Data2Clock (MSO) ... 1030
Delay (Holdoff) ... 233
Edge ... 205
Edge (MSO) ... 1026
Ethernet settings ... 703
Event (definition) ... 199
Event (remote) ... 1356
External input ... 261
External output ... 36
Force ... 233
Glitch ... 206
Holdoff ... 233
I3C settings ... 586
I²C settings ... 570
Information ... 200
Interval ... 213
Label ... 48

Level 37, 47
Level, search 467, 468, 469, 472, 473, 475
LIN settings 659
M-PHY settings 805
MDIO settings 882
Mode 38, 232
MSO settings 1025
Pattern 219
Pattern (MSO) 1033
PCIe settings 974
Position 47
Run 232
Runt 208
Search 466
Sequence (definition) 199
Serial pattern 247
Serial pattern (MSO) 1035
Settings, copy to search 466
Setup & Hold 216
Setup & Hold (MSO) 1030
Slew rate 214
Slope 38
Source 38
Sources, MSO 1025
SPI settings 600
State 200, 218
State (MSO) 1032
Timeout 212
Timeout (MSO) 1029
TV (video) 222
USB 2.0 settings 900
USB 3.1 settings 930
USBPD settings 944
Width 207
Width (MSO) 1027
Window 210
Trigger level
Find 60
Trigger offset 119
Trigger out
Pulse on limit violation 409
Settings 237
Trigger sources
MSO 1025
Trigger types
CAN 624
Edge 205
Glitch 206
Interval 213
LIN 660
Pattern 219
Runt 208
Serial pattern 247
Setup & Hold 216
Slew rate 214
Timeout 212
Width 207
Window 210
Trigger Types 204
State 218
TV/Video 222
Tubes
Configuring 549
Histograms 549
Reference level 541
TV trigger 222
Type
Trigger 204

U

UART 606
Basics 606
Configuring 610
Decode results 613
Triggering 613
Unbiased correlation 293
Undersampling 116
Undo 59
Unlock touchscreen 43
USB
Cable 33
Configuring 899
Connecting devices 30
Connector 33
Device 36
Triggering 933
USB 2.0
Configuration settings 895
Trigger settings 900
Triggering 907
USB 3.1
Configuration settings 926
Configuring 929
Trigger settings 930
USB 3.1 protocol
Basics 916
USB protocol
Basics 890
USBPD
Configuration settings 940
Configuring 943
Trigger settings 944
Triggering 947
User ID
Remote Desktop 1300
User manual 20
User mask
Settings 440
User name 1284
User settings
Saving 490

V

Vertical
Controls 39
Position 113
Resolution 113
Scale 113, 142
Vertical system 113
Video (TV) trigger 222
Videos 22
Violation
Limit checks 408
Violation of limits
Actions 408
Violation tolerance, mask test 447
Virus protection 1285
VISA
Resource string 1301
VNC 44, 1297

W

Wait
Remote ... 1356
Waveform
Arithmetic ... 117
Data query ... 1413
Loading ... 497
Saving ... 497
Waveform arithmetic ... 133
Waveform count
Histograms ... 375
Waveform export
CSV ... 503
Data query ... 1413
Files and formats ... 498
Header files ... 498
Remote control ... 1783
Value files ... 503
XML ... 503
Waveform generator
AM modulation ... 1050
Arbitrary ... 1055
Coupling ... 1066
DC offset alignment ... 1065
FM modulation ... 1052
FSK modulation ... 1054
Function generator ... 1043
Modulation ... 1048
Noise ... 1065
Output ... 1063, 1064
PWM modulation ... 1051
Settings ... 1041
Sweep ... 1054
Waveform generator option ... 34
Waveform mask
Settings ... 443
Waveform samples ... 116
Waveform Value files ... 503
Waveforms ... 52
Arrange ... 54
Clipping ... 1313
Overview and usage ... 52
Preview ... 54
Saving ... 505, 520
Select ... 54
States ... 53
Style ... 96
Switch off ... 54
Switch on ... 53
Zooming ... 266
Web browser ... 1293
Web control ... 1297
Web interface ... 44, 1293
Browser ... 1293
LAN configuration ... 1295
Width
Search conditions ... 468
Trigger ... 207
Width trigger
MSO ... 1027
Window
Search conditions ... 470
Trigger ... 210
Windows ... 1283
Access ... 1287
Settings ... 1287

X

XML
Waveform export ... 503
XY-diagram
Displaying ... 319
settings ... 317
XY-waveforms ... 52

Z

Zone key ... 38
Zone trigger ... 38, 62
Zoom ... 266
Area ... 48
Area, coupling ... 392, 427, 481
Coupled ... 275
Diagram ... 48
Key ... 39
Methods ... 266
MSO ... 1022
Multiple ... 274
On the touchscreen ... 272
Position/Range ... 274
Procedures ... 272
Quick access ... 60, 268
Saving data ... 520
Settings ... 268
Settings for data export ... 505
Start-stop values ... 273
Start/Stop settings ... 269
Used for gating ... 391
Waveforms ... 52